

SERVICE MANUAL

SPLIT TYPE AIR
CONDITIONER (50Hz)

DUCT type



Models	Indoor unit	Outdoor unit
	ARG90ELC3	AOG90EPD3L
	ARG90TLC3	AOG90TPC3L
	ARY90ELC3	AOY90EPD3L
	ARY90TLC3	AOY90TPC3L

CONTENTS

SPECIFICATIONS	1
OUTLINE AND DIMENSIONS	2
CIRCUIT DIAGRAM	5
INDOOR P. C. BOARD CIRCUIT DIAGRAM	9
OUTDOOR P. C. BOARD CIRCUIT DIAGRAM	11
ERROR CONTENTS	13
REFRIGERANT SYSTEM DIAGRAM	14
DISASSEMBLY ILLUSTRATION	15
PARTS LIST	22

S P E C I F I C A T I O N S

INDOOR UNIT	ARG90ELC3, ARY90ELC3	ARG90TLC3, ARY90TLC3
OUTDOOR UNIT	AOG90EPD3L, AOY90EPD3L	AOG90TPC3L, AOY90TPC3L
COOLING CAPACITY (kW)	24.8 - 25.4	24.8 - 25.4
HEATING CAPACITY (kW)	-----	28.9 - 29.5

ELECTRICAL DATA

POWER SOURCE (V)	380 - 415	
FREQUENCY (Hz)	50	
RUNNING CURRENT (A)	COOLING	19.5 - 19.5
	HEATING	-----
INPUT WATTS (kW)	COOLING	12.2 - 12.5
	HEATING	-----
EER (kW/kW)	COOLING	2.03 - 2.03
	HEATING	-----
MOISTURE REMOVAL (ℓ/hr)	7.5	
AIR CIRCULATION-HI (m ³ /hr)	4,300	

COMPRESSOR

TYPE	Hermetic type, 2 pole, 3-phase, Induction motor, Scroll	
CODE	ZRT122K3E-TFD	
REFRIGERANT (R407C) (g)	6,000	7,000

FAN MOTOR

INDOOR	TYPE	MFA-90GQH
	POWER SOURCE (V)	380 - 415
	HI-SPEED (r.p.m.)	1,140
OUTDOOR	TYPE	MFB-90FTH
	POWER SOURCE (V)	220 - 240
	HI-SPEED (r.p.m.)	730
	LO-SPEED (r.p.m.)	360

DIMENSIONS

INDOOR	H x W x D (mm)	450 x 1,550 x 700
OUTDOOR		1,380 x 1,300 x 650

WEIGHTS

INDOOR	GROSS / NET (kg)	100 / 85	
OUTDOOR		280 / 243	282 / 245

REFRIGERANT CHARGE (FULL CHARGE AMOUNT) (R407C)


PIPE LENGTH	30 m	40 m	50 m
ARG90ELC3 / AOG90EPD3L ARY90ELC3 / AOY90EPD3L	6,000g	6,500g	7,000g
ARG90TLC3 / AOG90TPC3L ARY90TLC3 / AOY90TPC3L	7,000g	8,000g	9,000g

• The above list shows values at the external static pressure of 20 mm Aq. (196 Pa).

OUTLINE AND DIMENSIONS


Models : ARG90ELC3
ARG90TLC3
ARY90ELC3
ARY90TLC3

(Unit : mm)

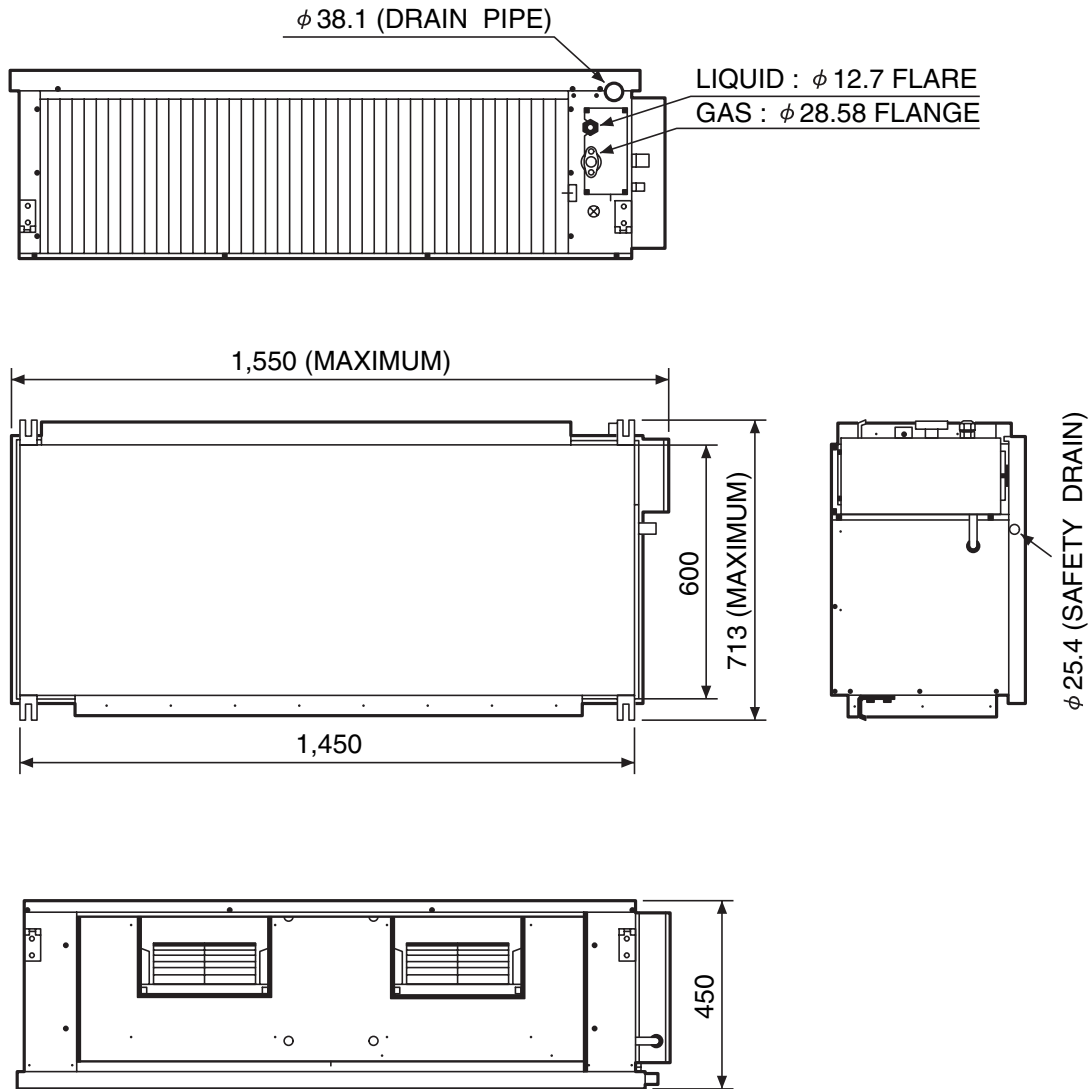




Models : AOG90EPD3L
 AOG90TPC3L
 AOY90EPD3L
 AOY90TPC3L

(Unit : mm)

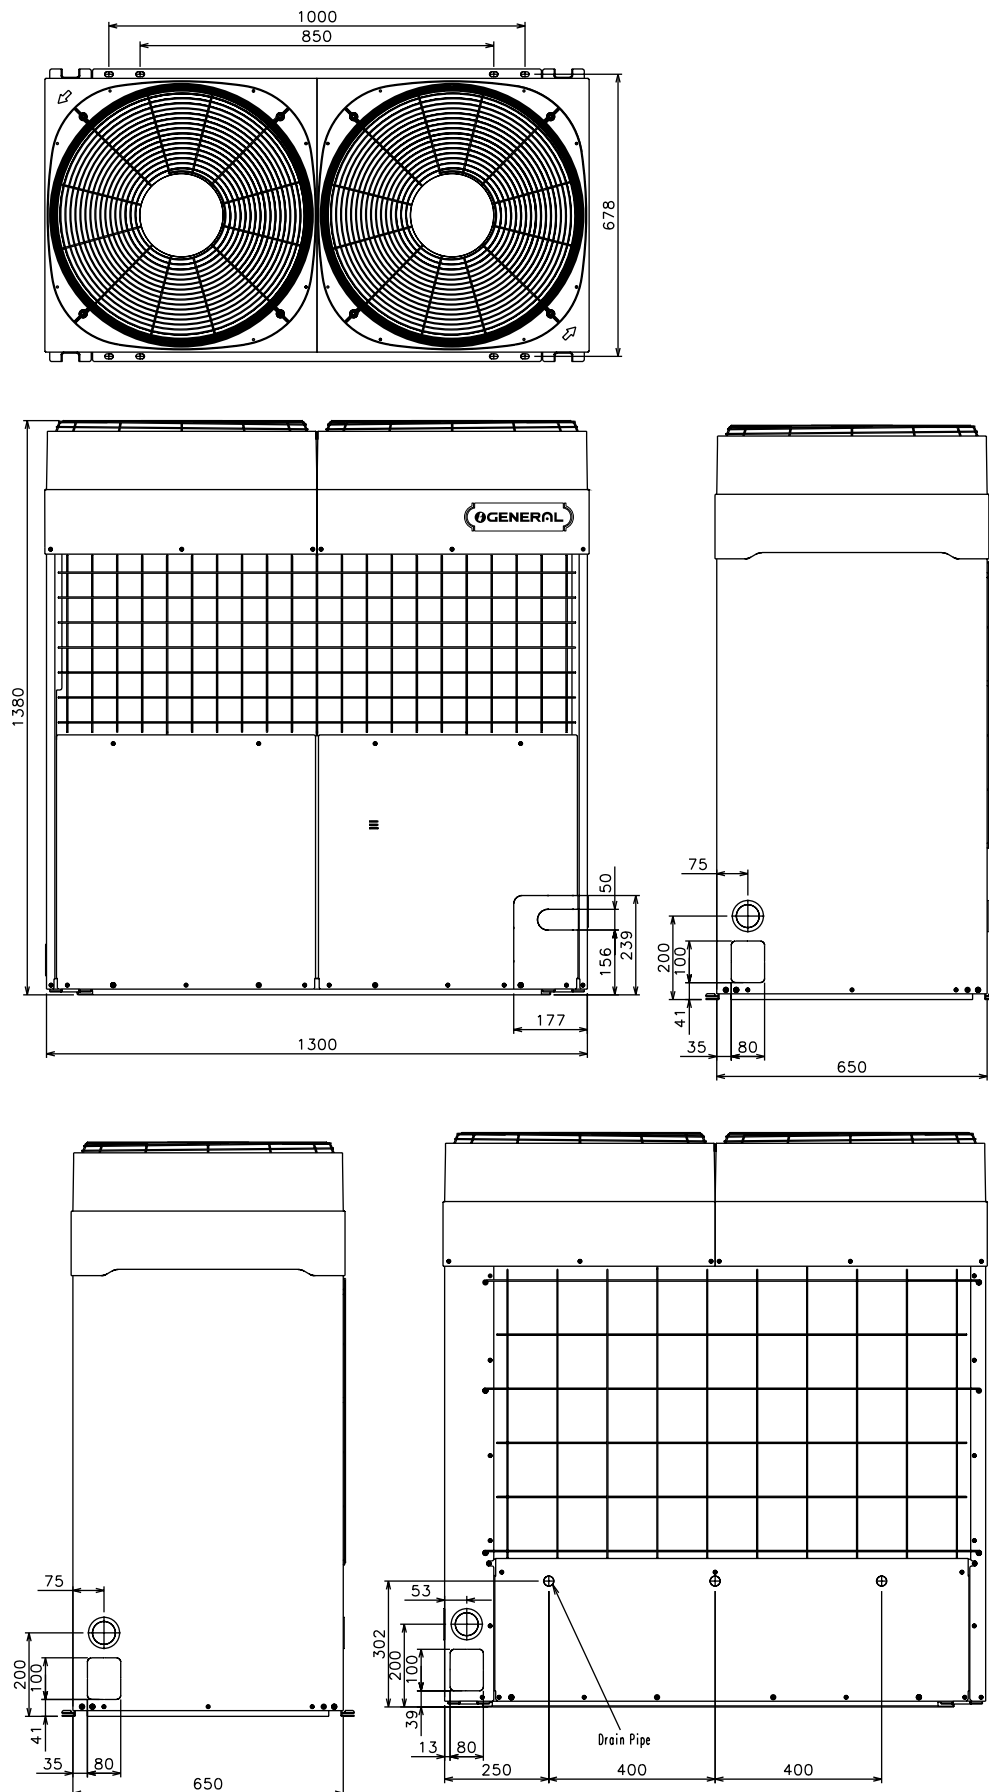


SERVICE SPACE FOR OUTDOOR UNIT

- Height of side wall is free.
- Height (H) of front wall is less than 1,200mm.
- When total height of outdoor unit is lower than front wall, add dimension h to service space for dimensions L1 and L2.

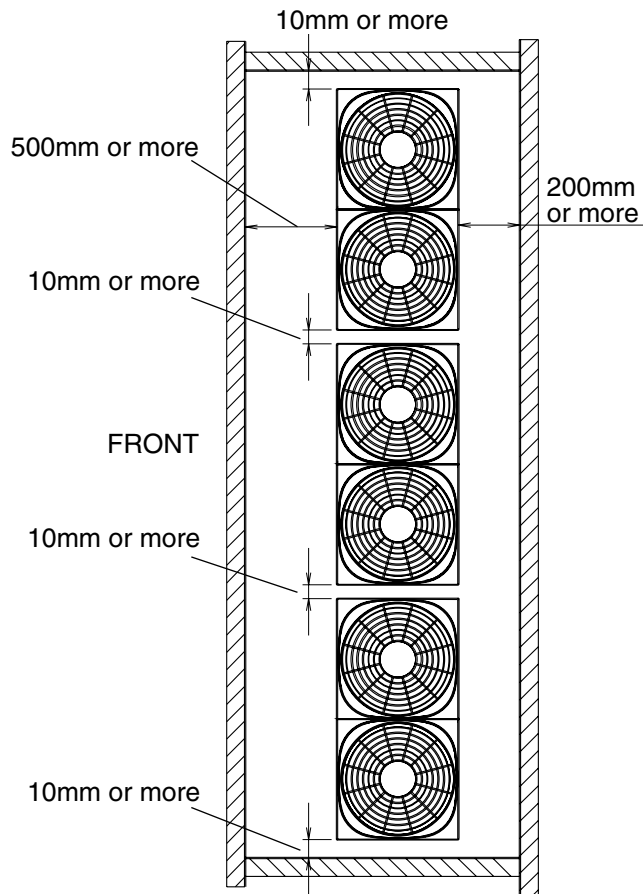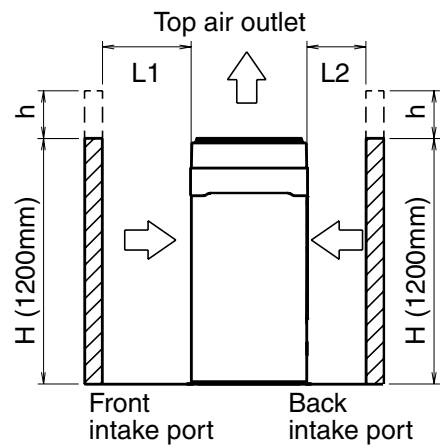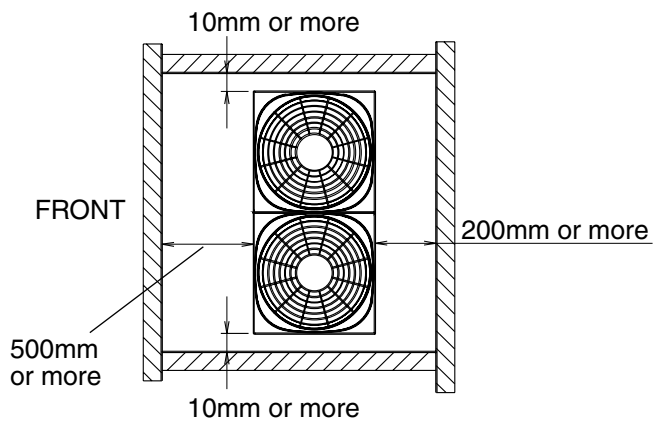


CIRCUIT DIAGRAM


**Models : ARG90ELC3
ARY90ELC3**

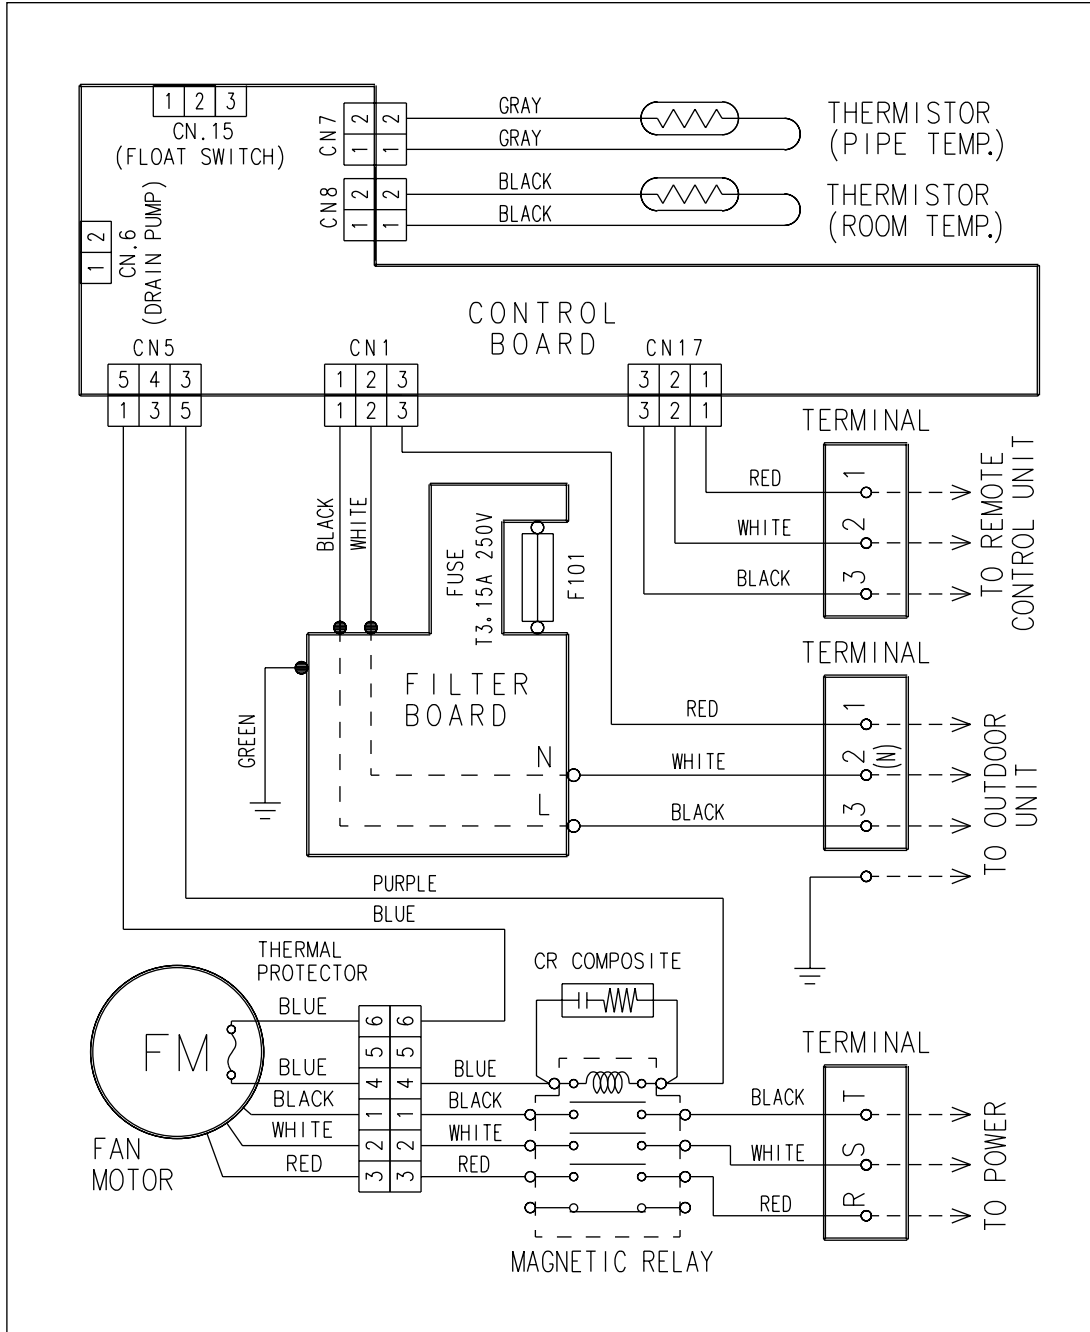


**Models : ARG90TLC3
ARY90TLC3**

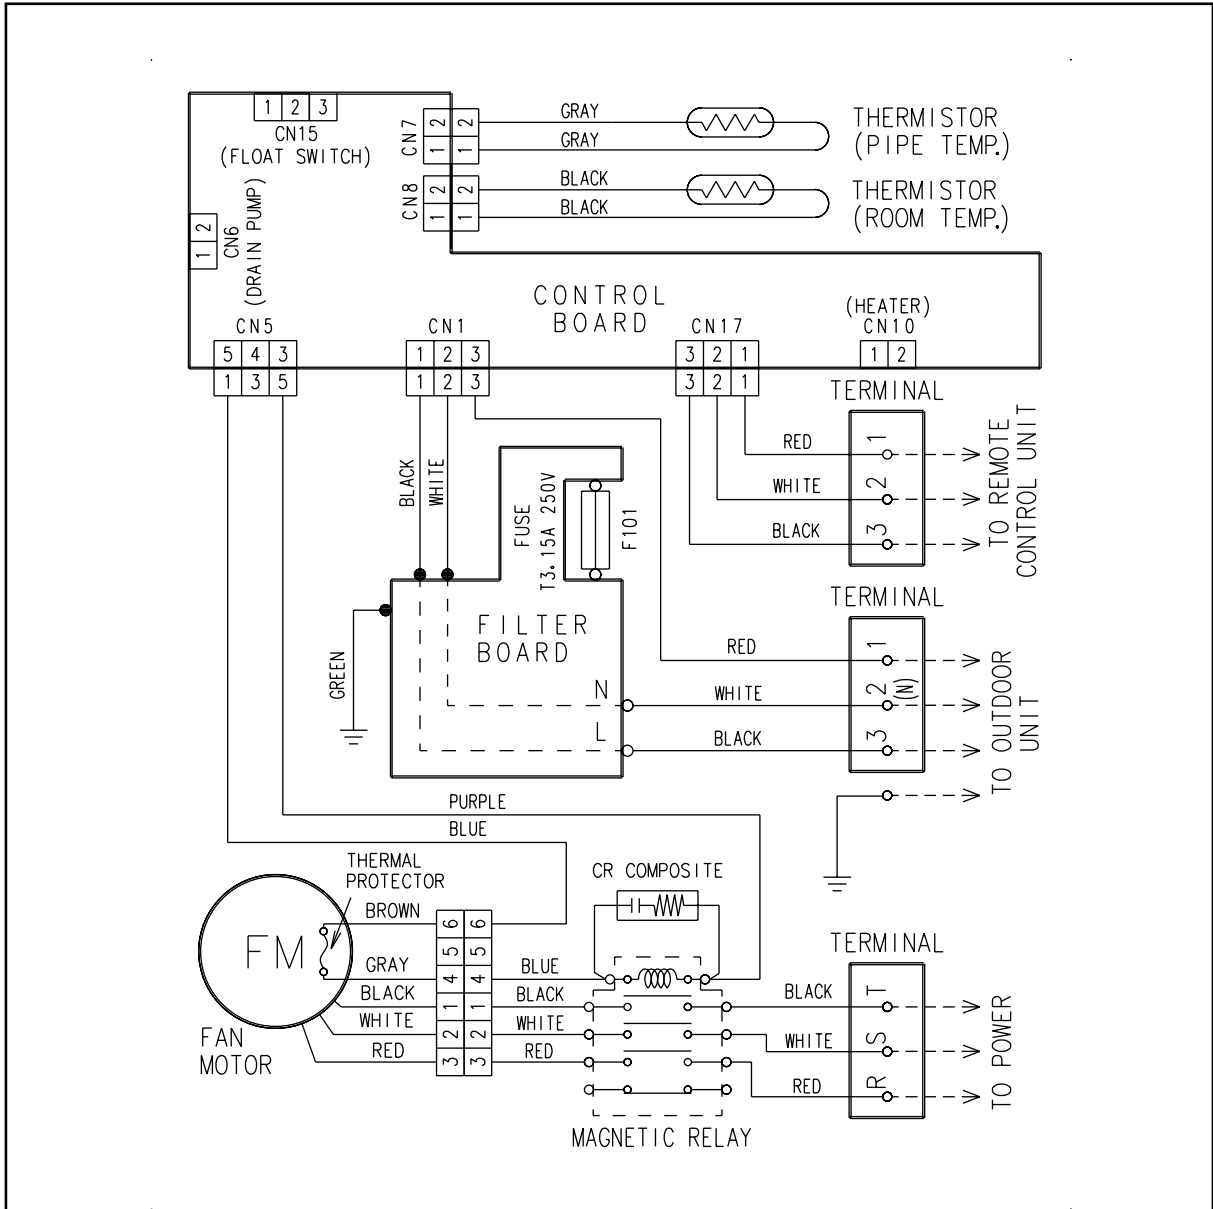

**Model : AOG90EPD3L
AOY90EPD3L**

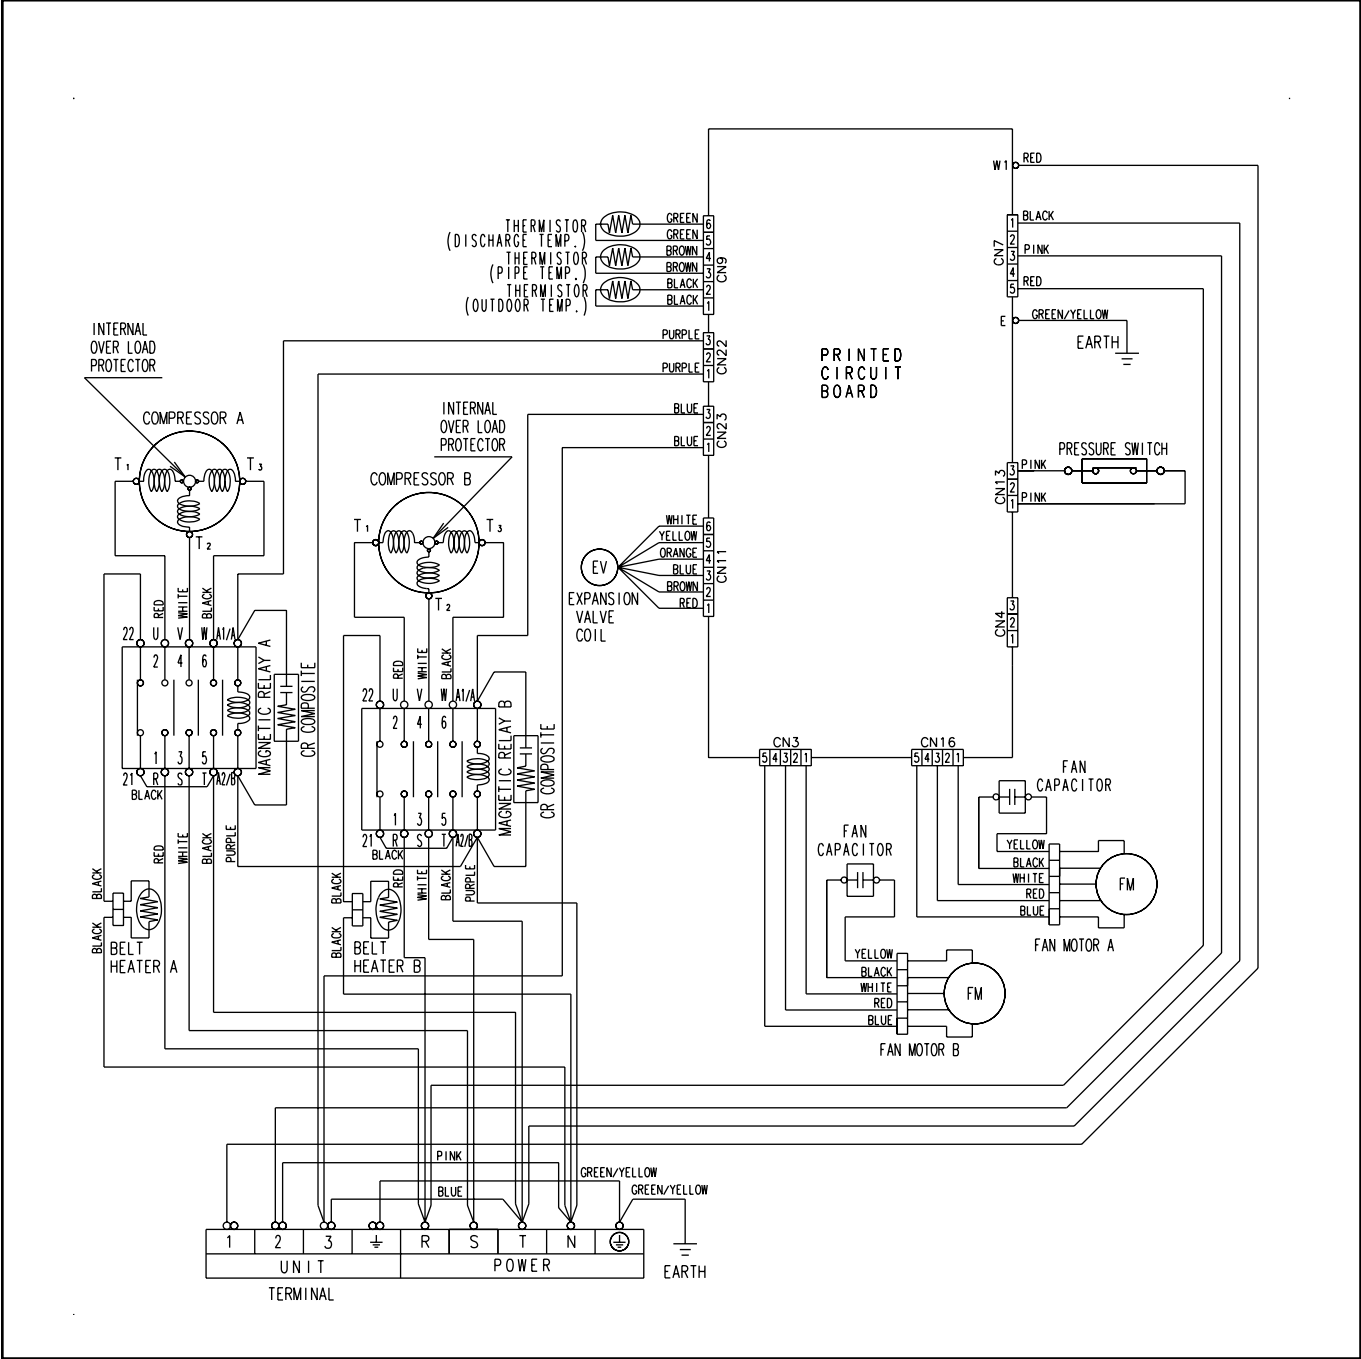

**Model : AOG90TPC3L
AOY90TPC3L**

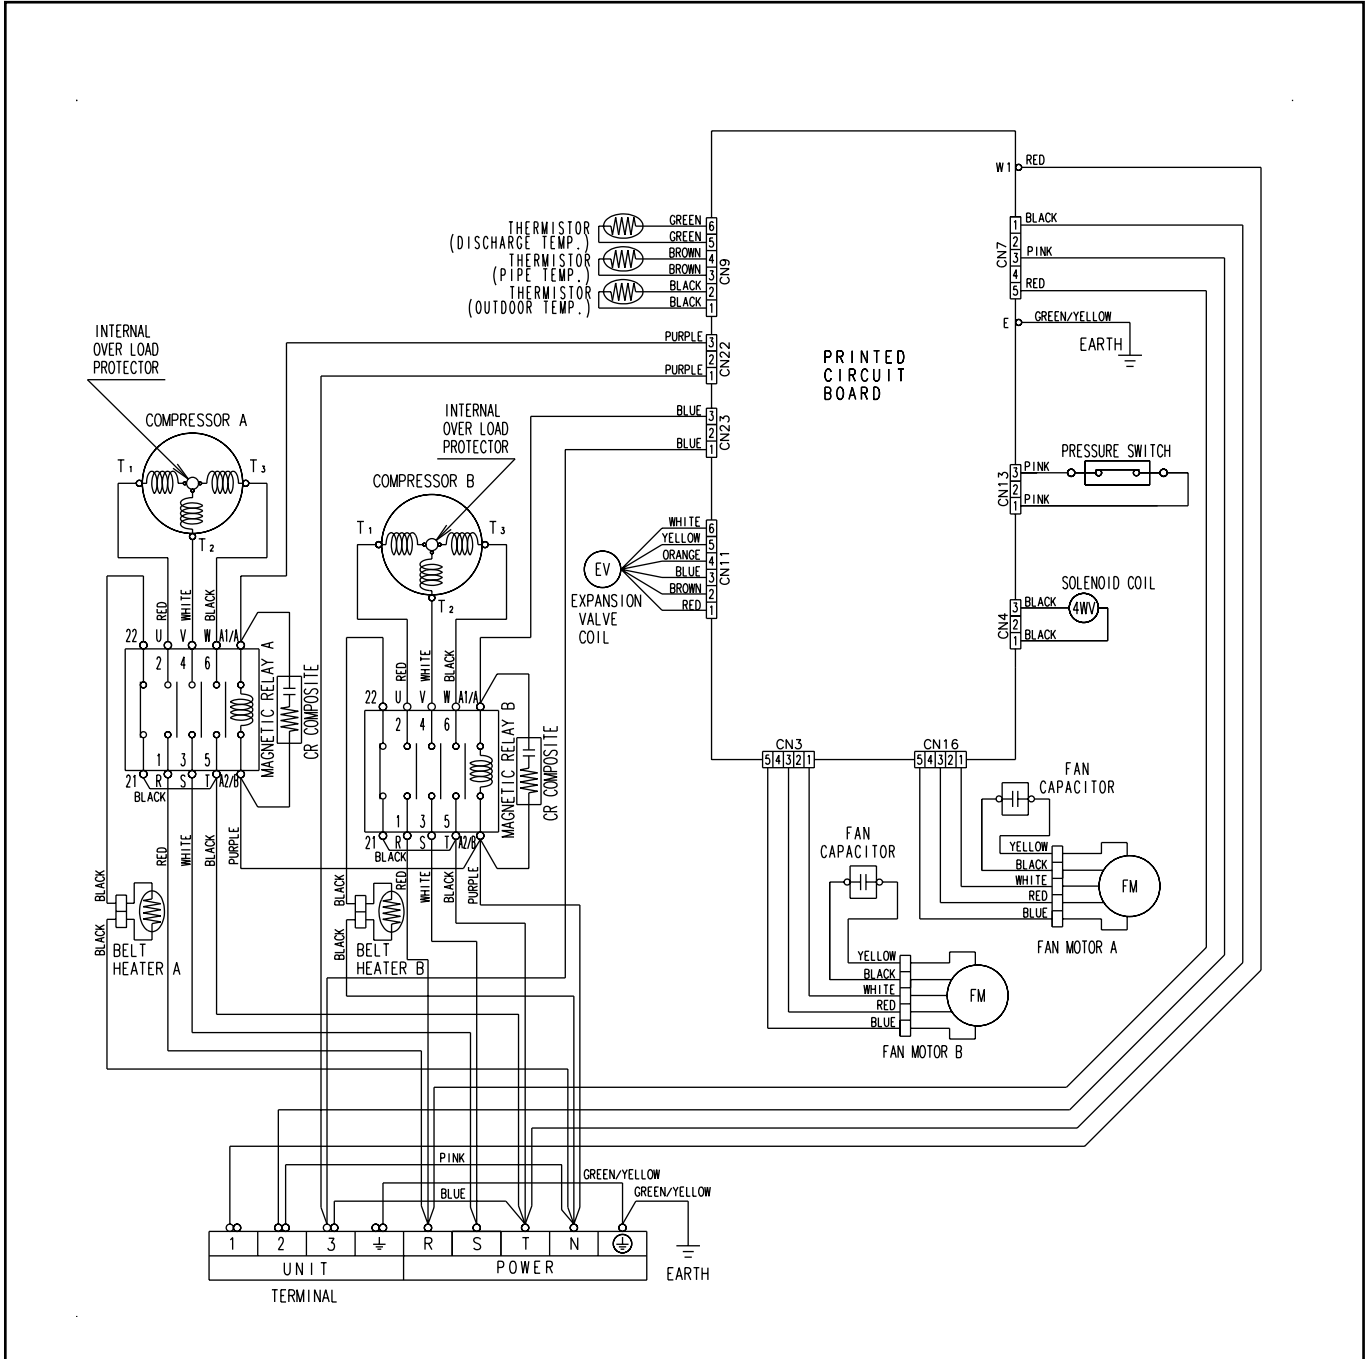


INDOOR PRINTED CIRCUIT BOARD CIRCUIT DIAGRAM

Model : ARG90ELC3
ARY90ELC3


CONTROLLER PCB ASSEMBLY (MAIN PCB)

ROOM TEMPERATURE THERMISTOR

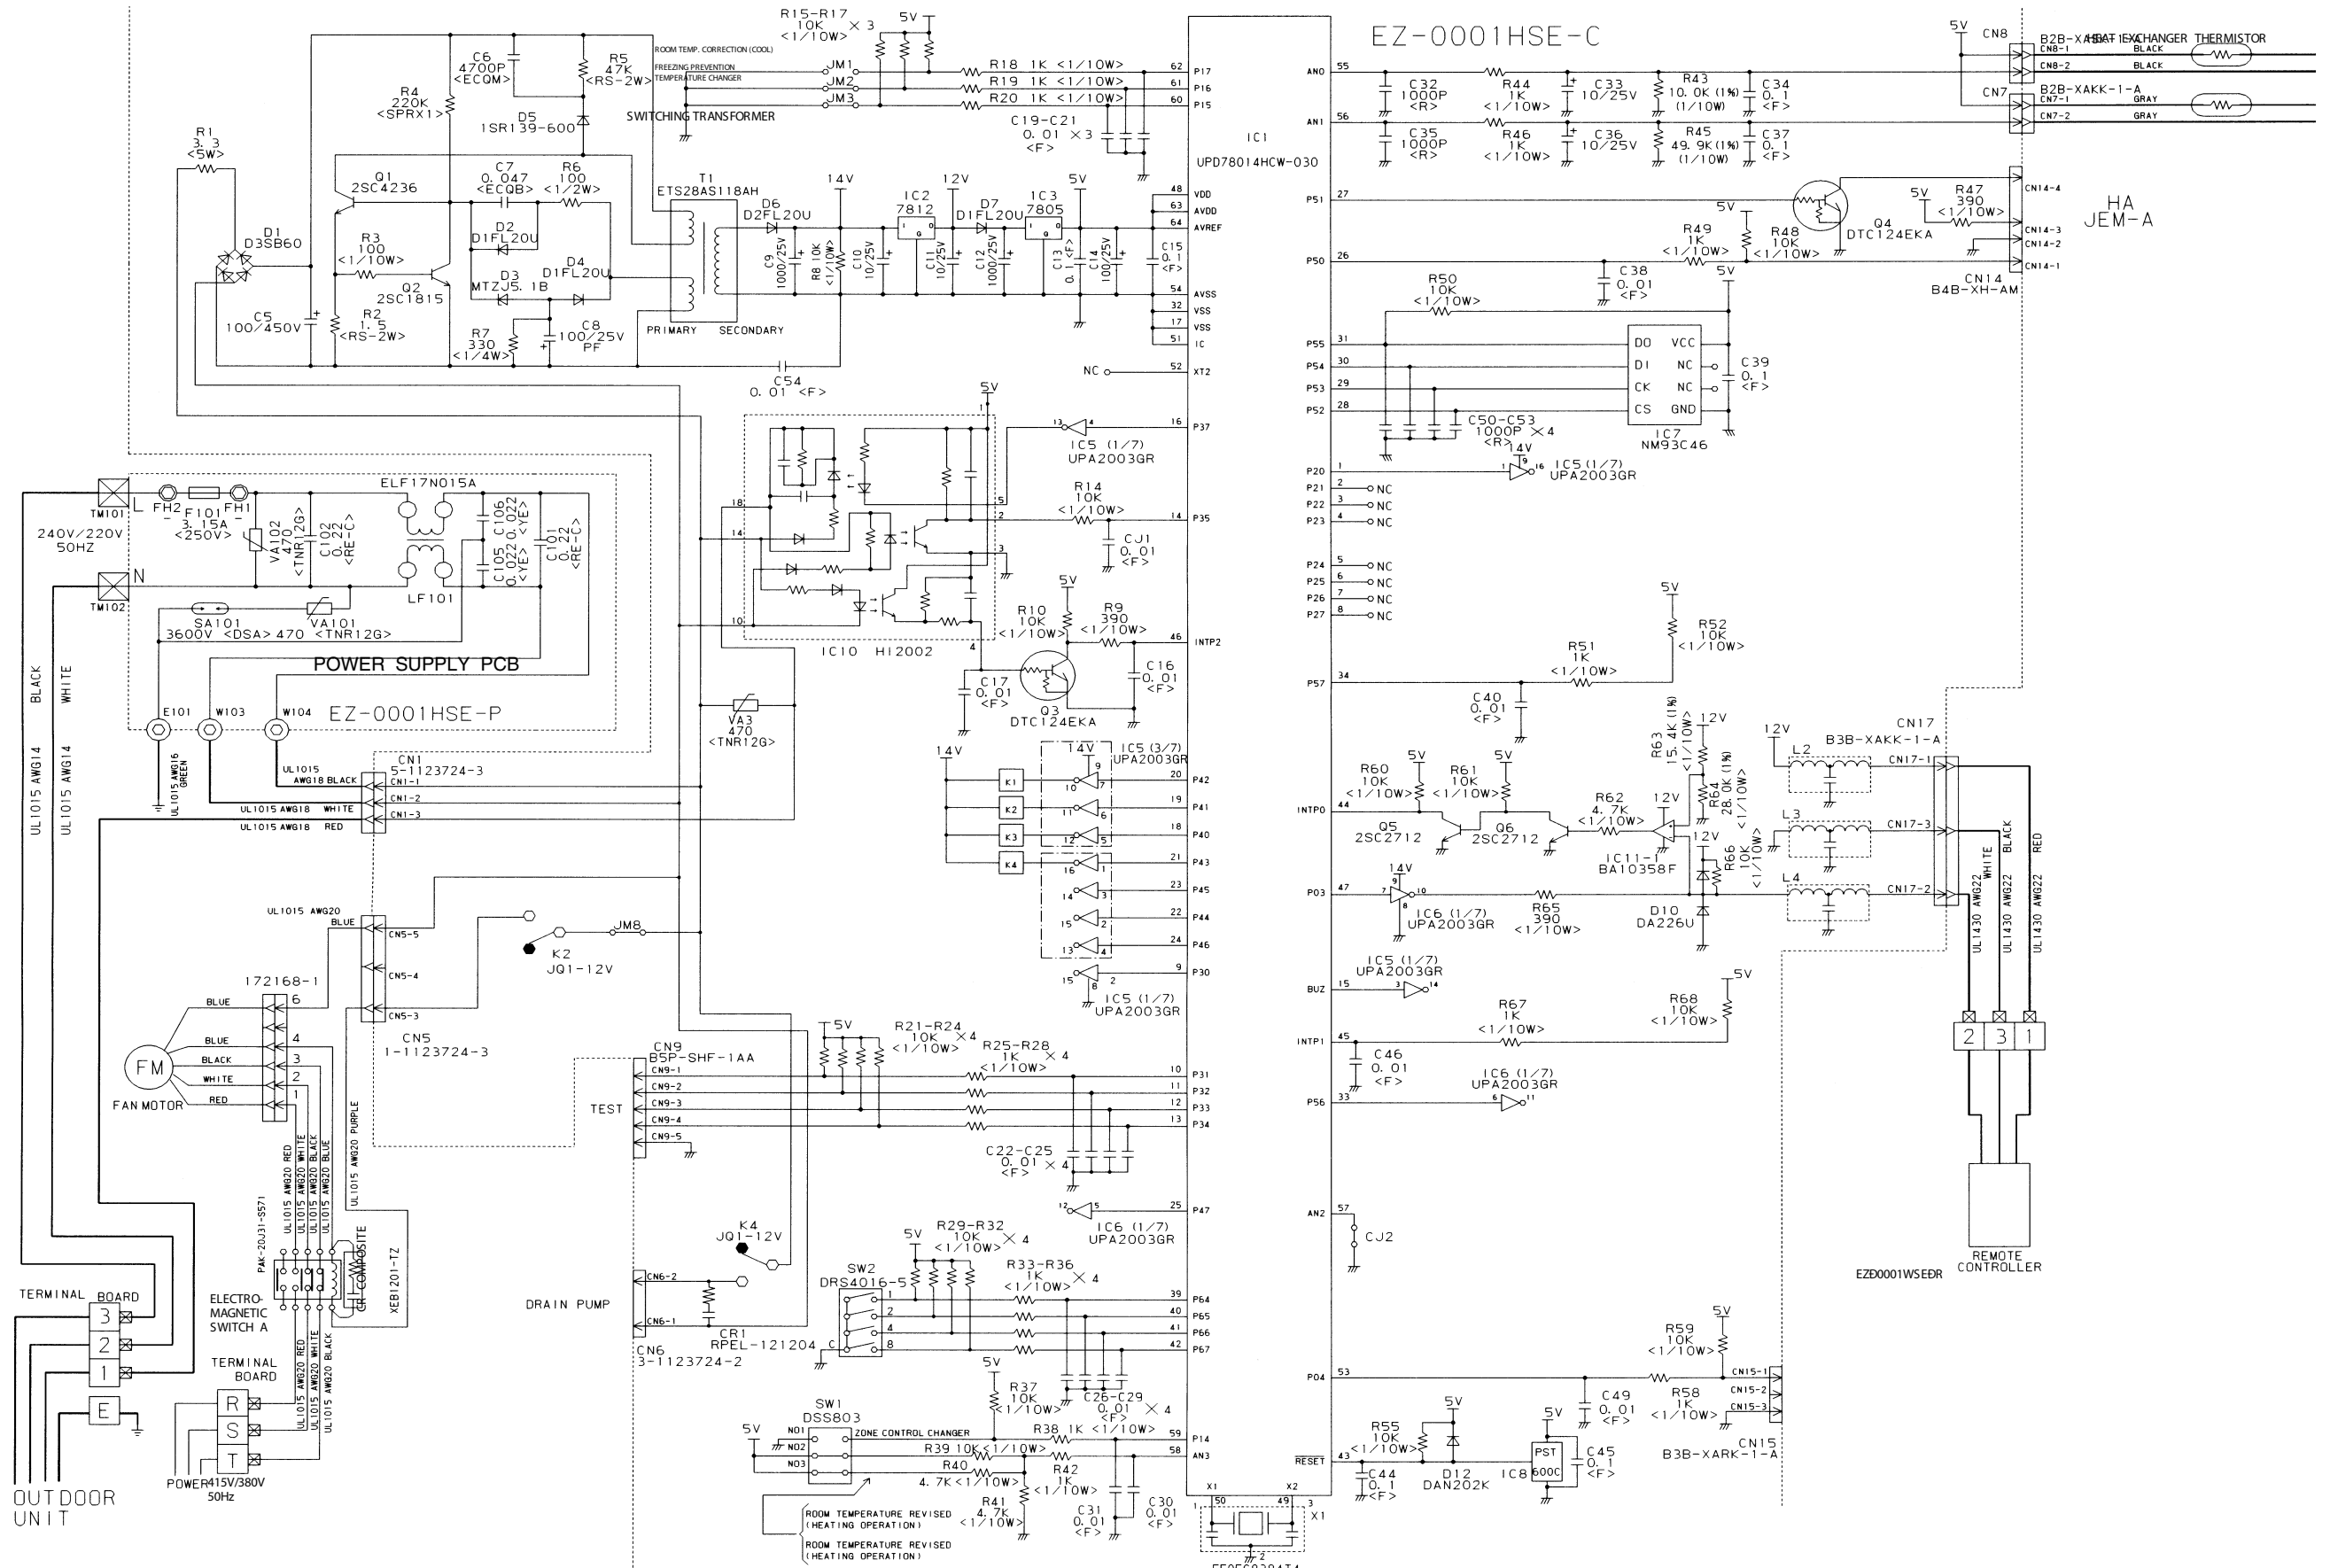

Model : ARG90TLC3
ARY90TLC3


CONTROLLER PCB ASSEMBLY (MAIN PCB)

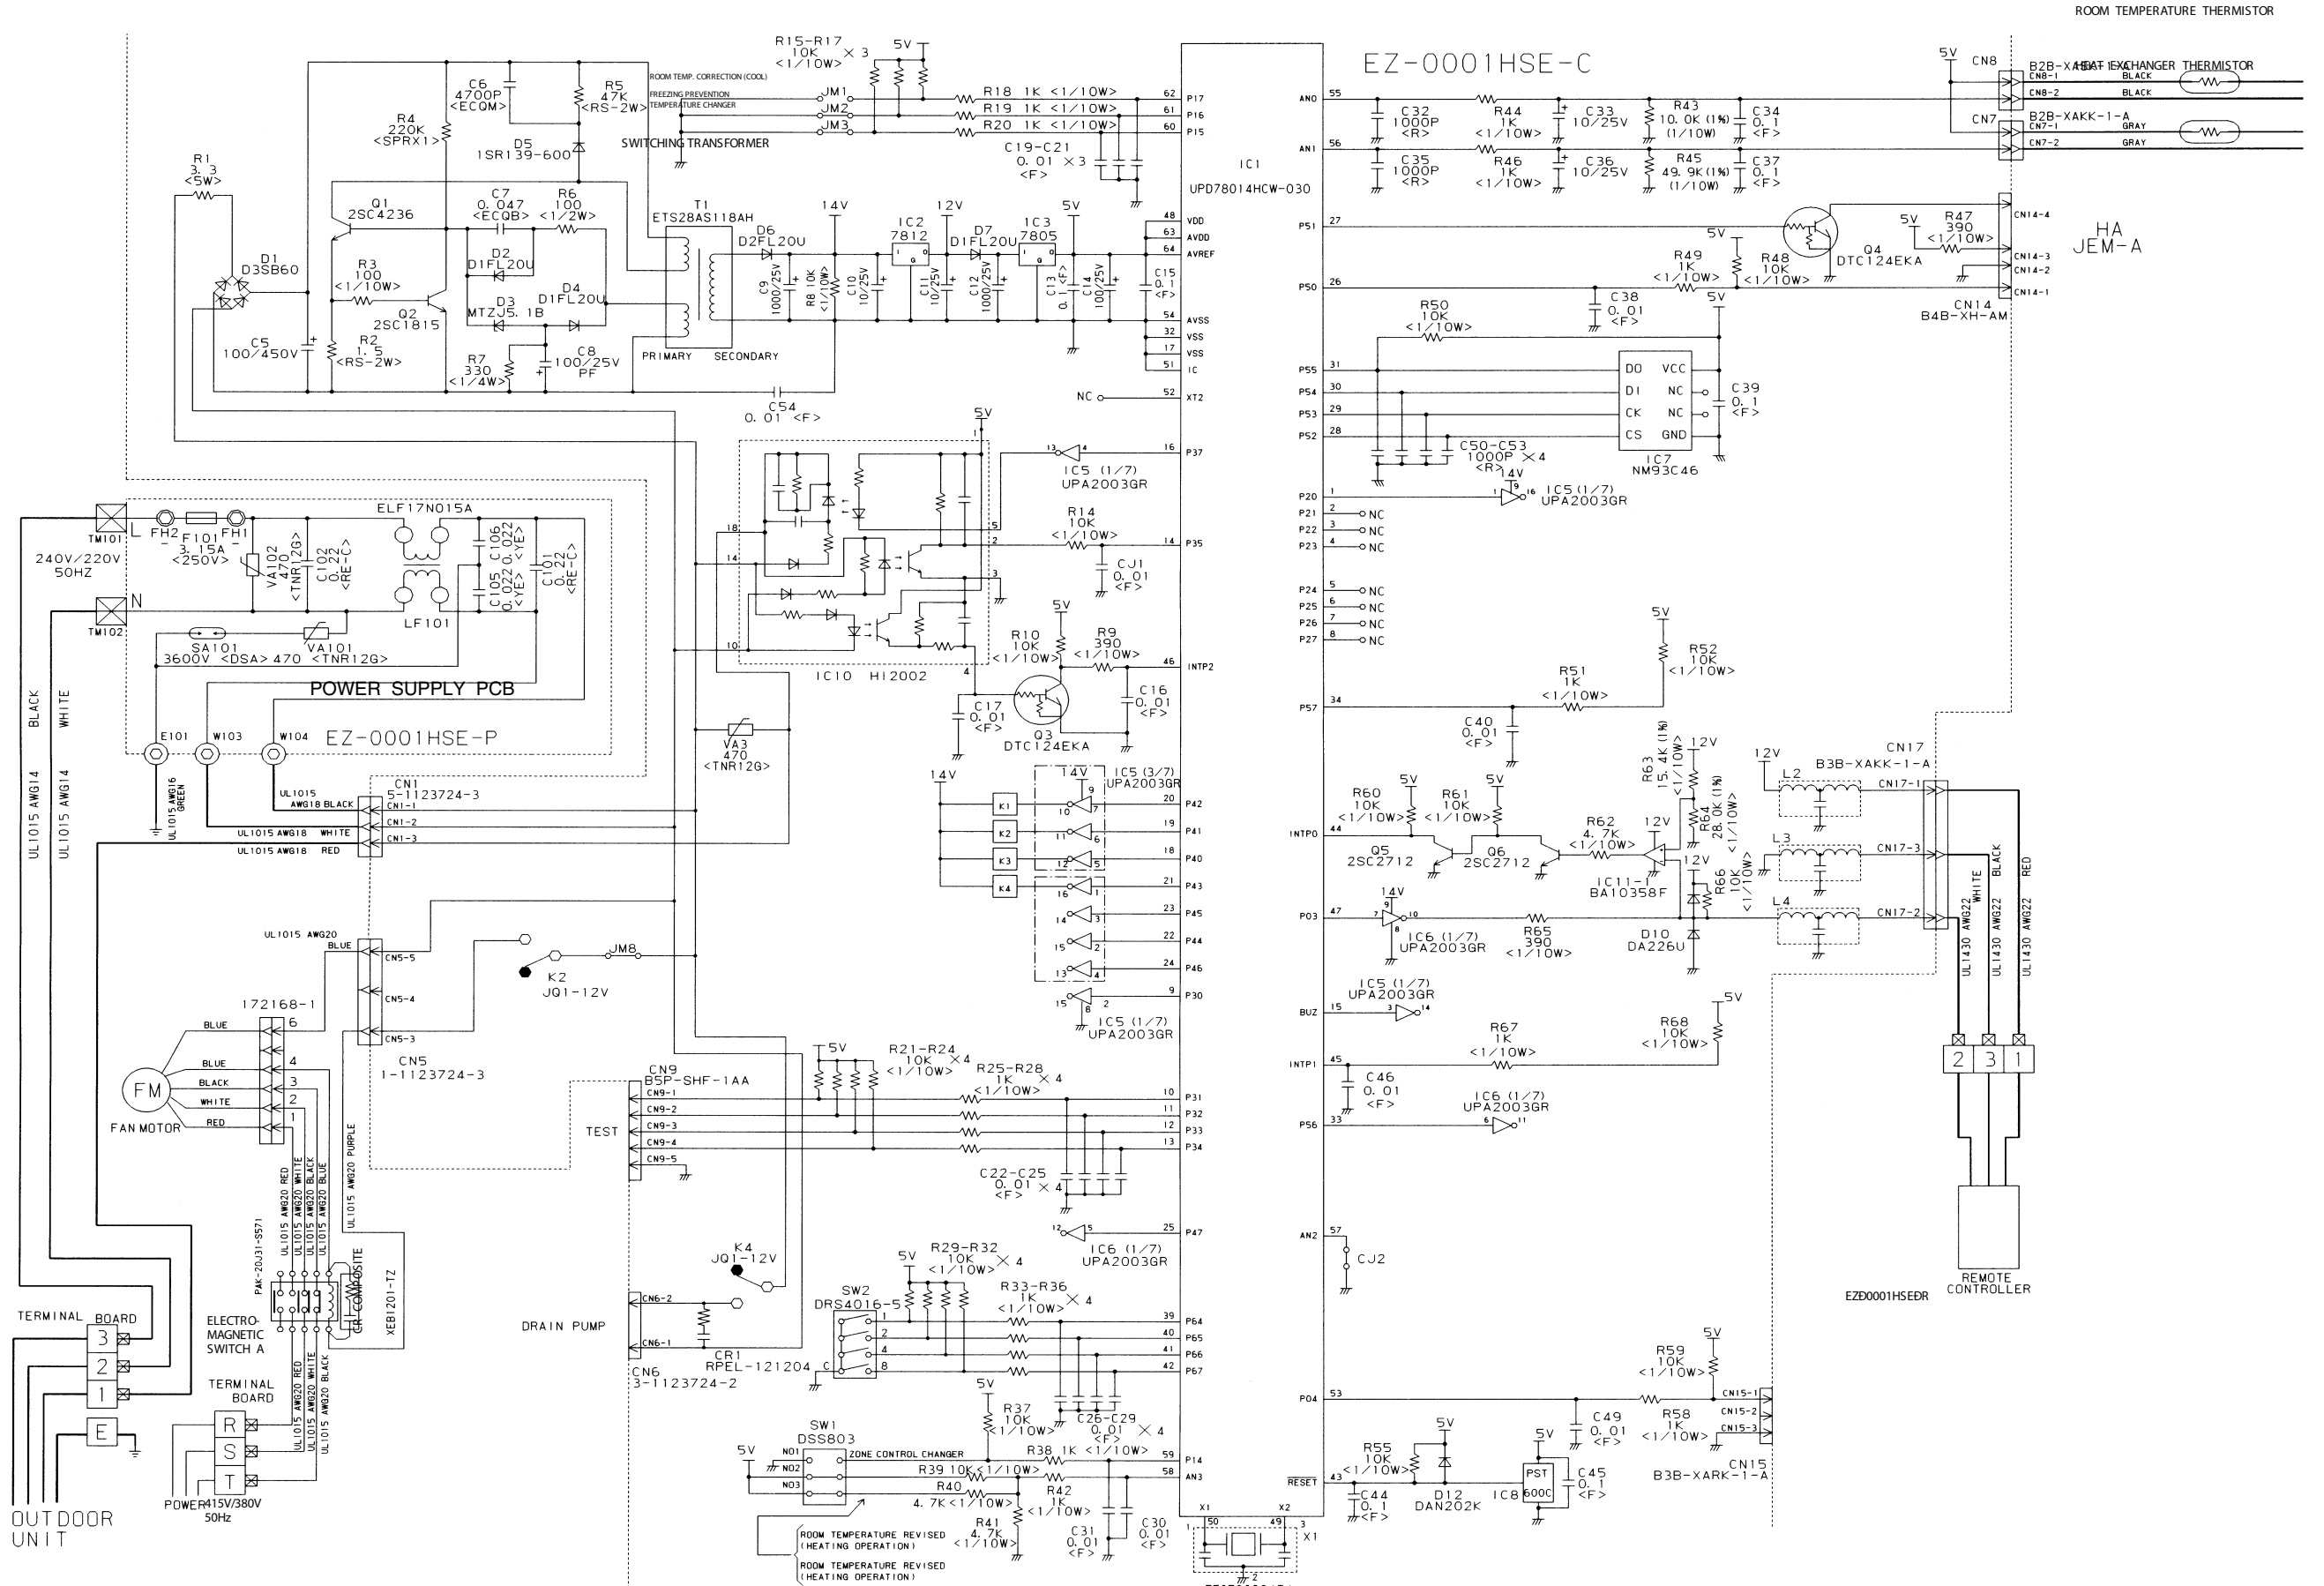

OUTDOOR PRINTED CIRCUIT BOARD CIRCUIT DIAGRAM


**Model : AOG90EPD3L
AOY90EPD3L**

CONTROLLER PCB ASSEMBLY (MAIN PCB)

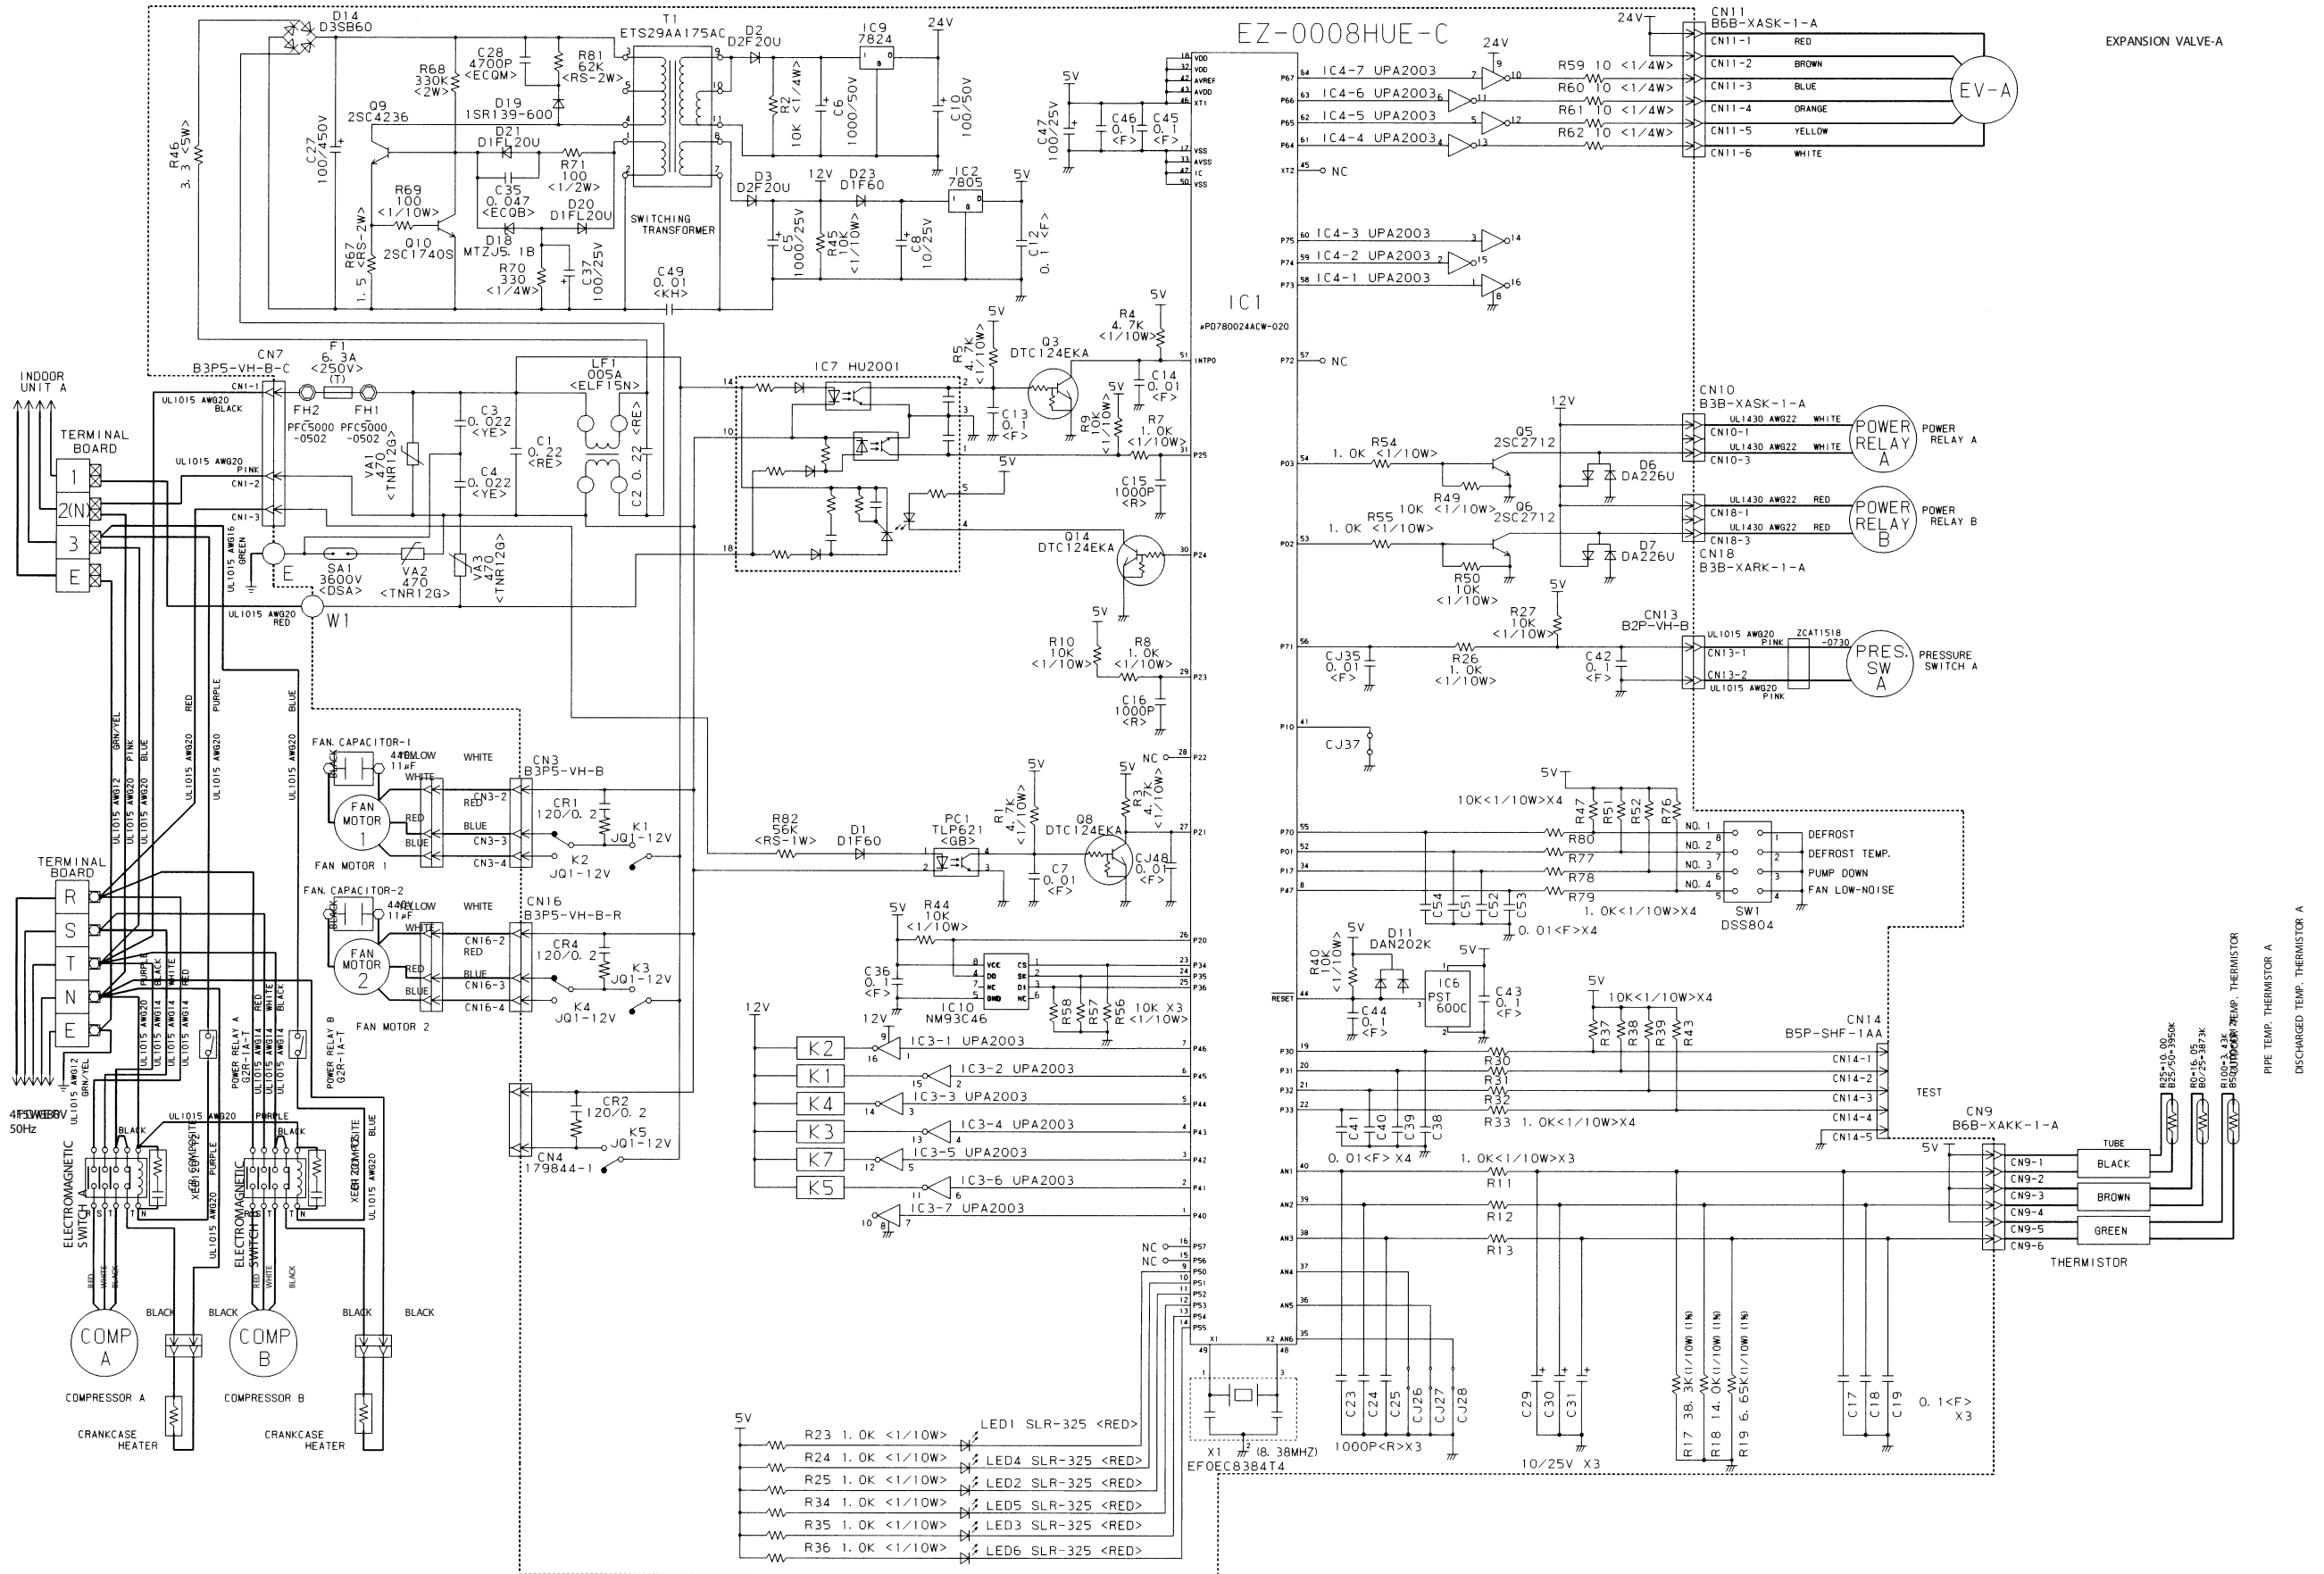

Model : AOG90TPC3L
AOY90TPC3L

CONTROLLER PCB ASSEMBLY (MAIN PCB)

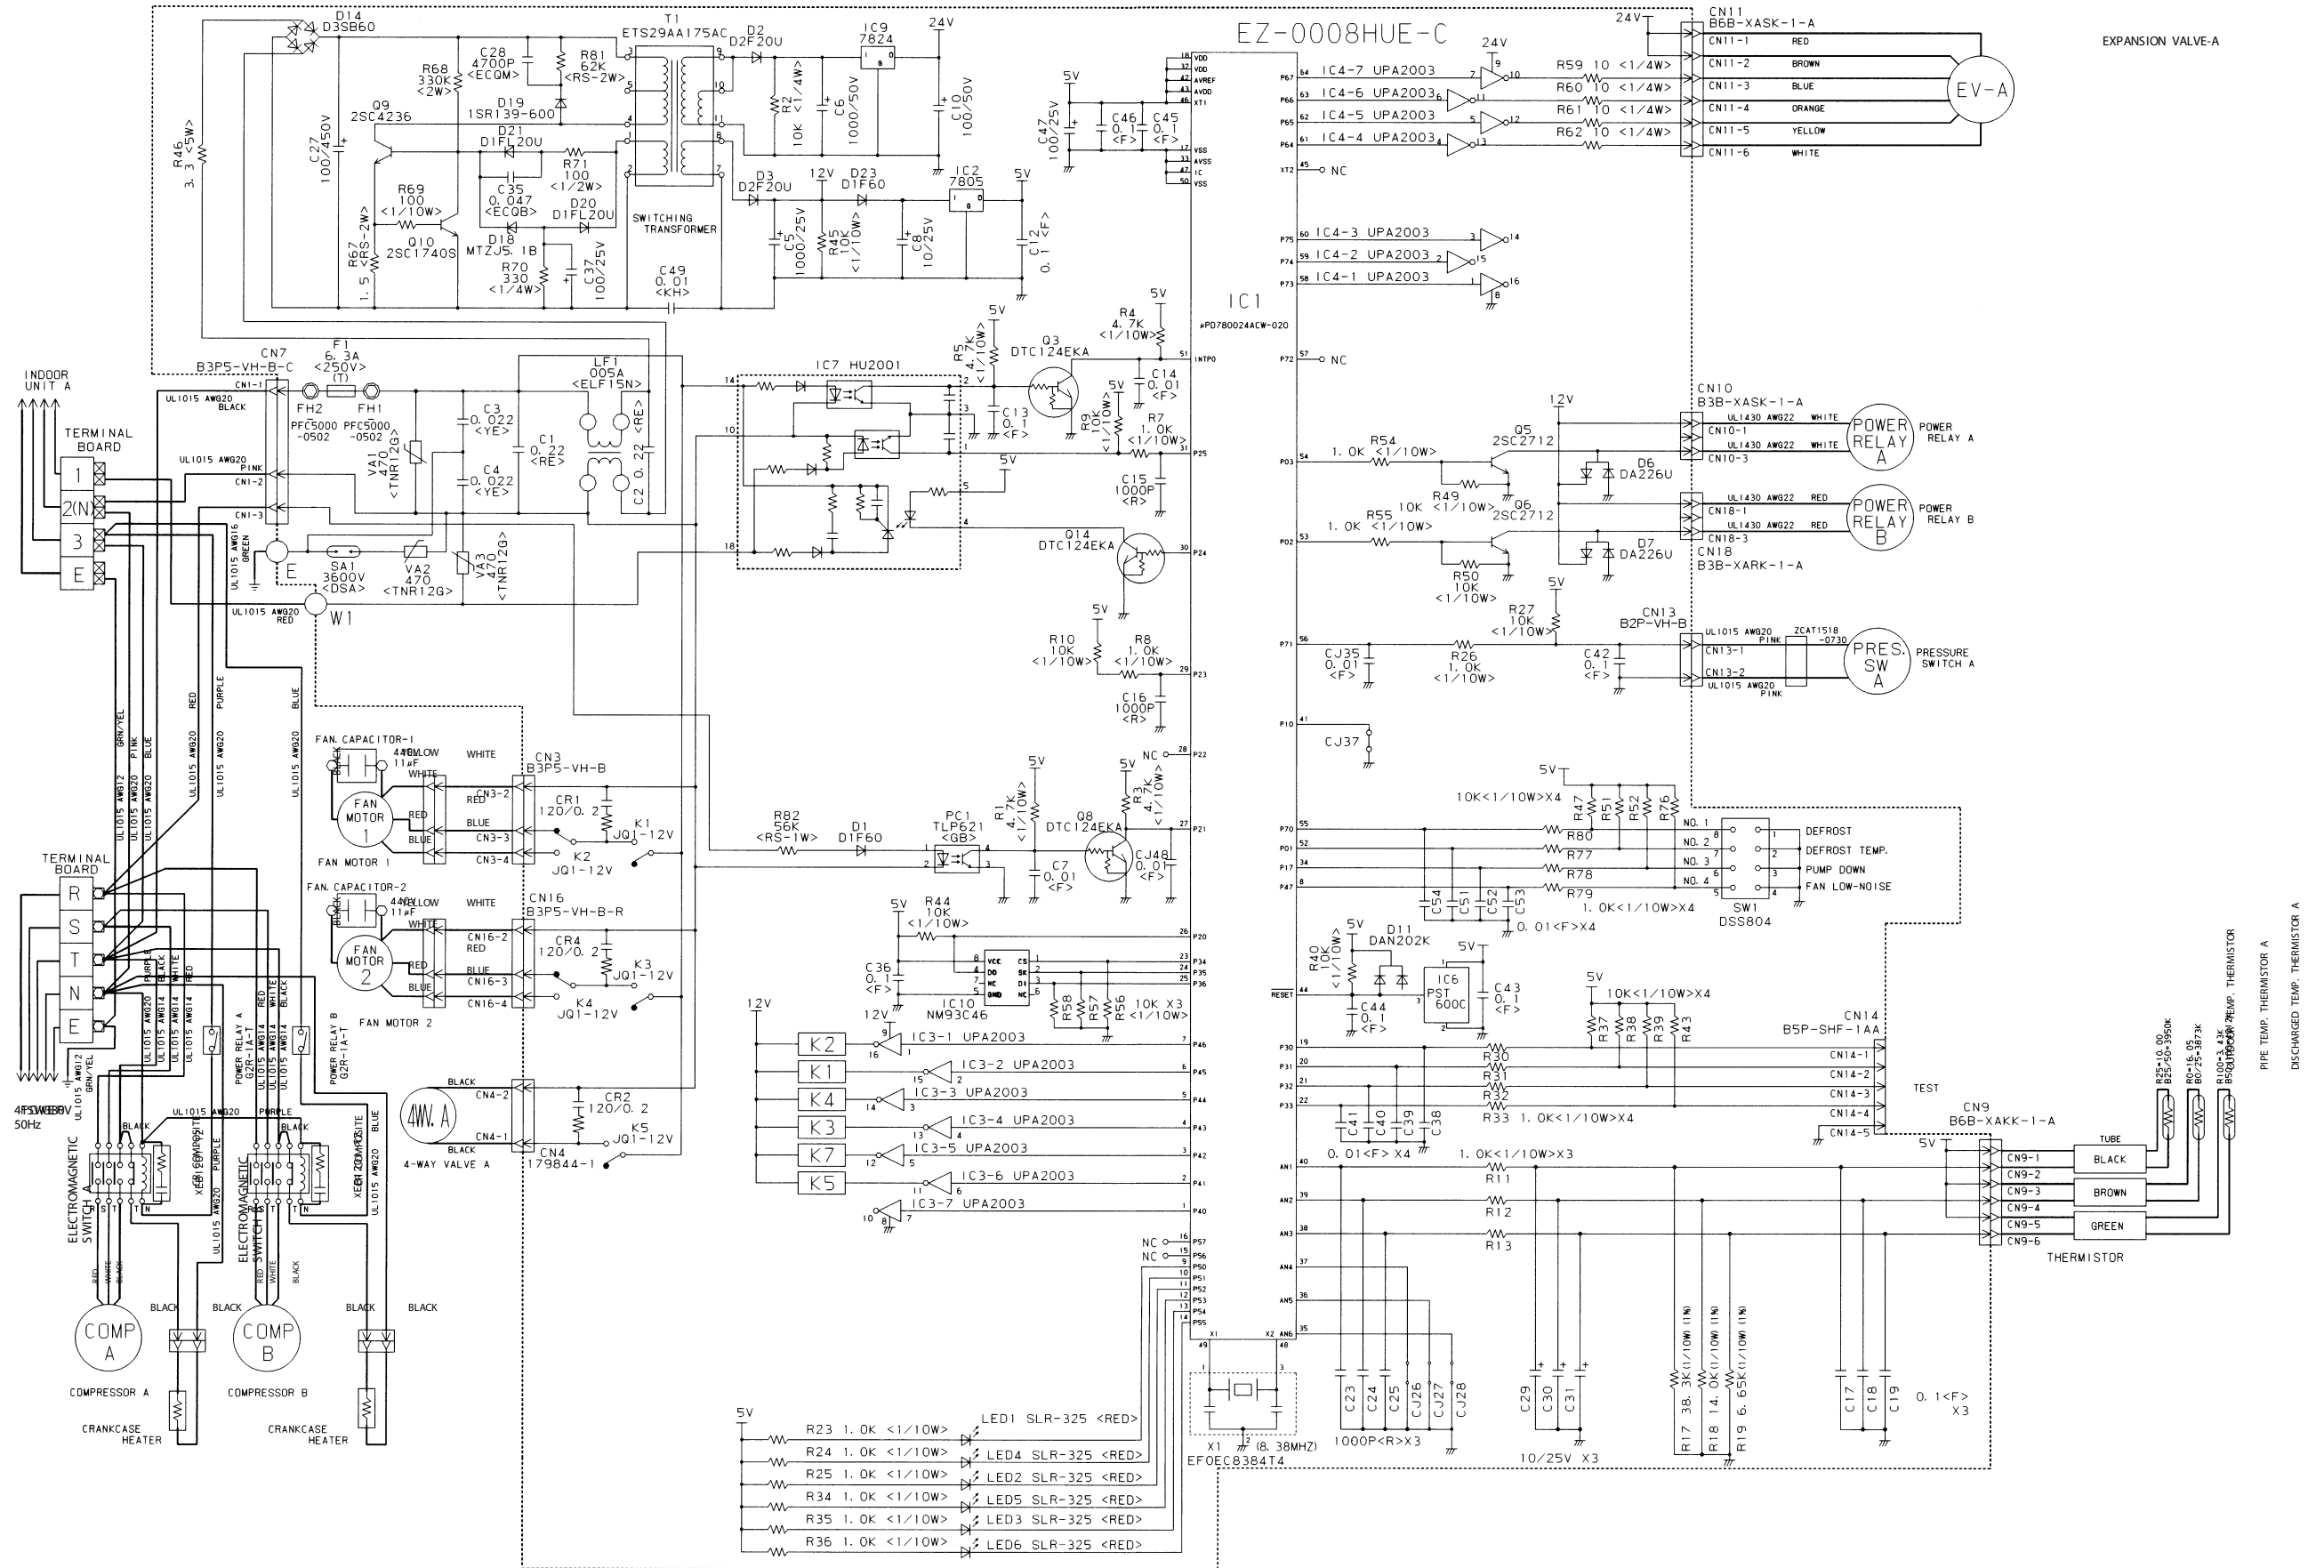


ERROR CONTENTS

ARG90ELC3 / AOG90EPD3L
 ARG90TLC3 / AOG90TPC3L
 ARY90ELC3 / AOY90EPD3L
 ARY90TLC3 / AOY90TPC3L

1. REMOTE CONTROLLER

When EE : EE blinks at the current time display, there is an error inside the air conditioner. If the SET TIME button (▼) and TEMP./DAY button (▼) are pressed simultaneously for more than three seconds, the self diagnosis check will start and the error contents will be displayed at the current time display. When the operation lamp lights, press the START/STOP button and after operation lamp goes off, perform the same operation. Process the error contents by referring to (Table 1).

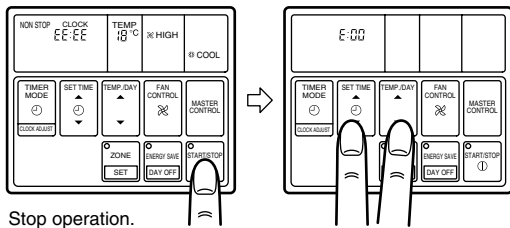

Stop operation.

Table 1

Error code	Error contents
E:00	Communication error (indoor unit ↔ remote controller)
E:01	Communication error (indoor unit ↔ outdoor unit)
E:02	Room temperature sensor open
E:03	Room temperature sensor shortcircuited
E:04	Indoor heat exchanger temperature sensor open
E:05	Indoor heat exchanger temperature sensor shortcircuited
E:06	Outdoor heat exchanger temperature sensor open
E:07	Outdoor heat exchanger temperature sensor shortcircuited
E:08	Power source connection error
E:09	Float switch operated
E:0A	Outdoor temperature sensor open
E:0B	Outdoor temperature sensor shortcircuited
E:0C	Discharge pipe temperature sensor open
E:0d	Discharge pipe temperature sensor shortcircuited
E:0E	Outdoor high pressure abnormal
E:0F	Discharge pipe temperature abnormal
E:11	Model abnormal
E:12	Indoor fan abnormal
E:13	Outdoor signal abnormal
E:14	Outdoor EEPROM abnormal

To stop test running, press the START/STOP button.

For the operation method, refer to the operating manual and perform operation check.

Check that there are no abnormal sounds or vibration sounds during test running.

2. OUTDOOR UNIT

When the outdoor temperature drops, the outdoor unit's fans may switch to low speed, or one of the fans may stop intermittently.

ERROR : Heat & Cool model (Reverse cycle) only

The LED lamps operate as follows (Table 2) according to the error contents.

The LED lamps are on the outdoor unit board.

Table 2

Error contents	LED1	LED2	LED3	LED4	LED5	LED6
Signal abnormal	—	—	X	○	X	X
Indoor unit abnormal	—	—	X	X	○	X
Discharge pipe temperature abnormal	—	—	X	X	X	○
Outdoor heat exchanger temperature abnormal	—	—	X	X	○	○
Outdoor temperature abnormal	—	—	X	○	X	○
Power source connection error	—	—	○	X	X	X
EEPROM abnormal	—	—	○	○	○	○
	◎	◎	◎	◎	◎	◎
Outdoor high pressure abnormal	○	—	—	—	—	—
Discharge pipe temperature abnormal	—	○	—	—	—	—


○ : 0.5s ON / 0.5s OFF (flash) X : OFF

◎ : 0.1s ON / 0.1s OFF (flash) — : Indefinite

When the fault is cleared, the LED lamp goes off.


However, for discharge pipe temperature abnormal and high pressure abnormal, the LED lamp lights continuously for 24 hours, as long as the power is not turned off.

ERROR LED DISPLAY LAYOUT

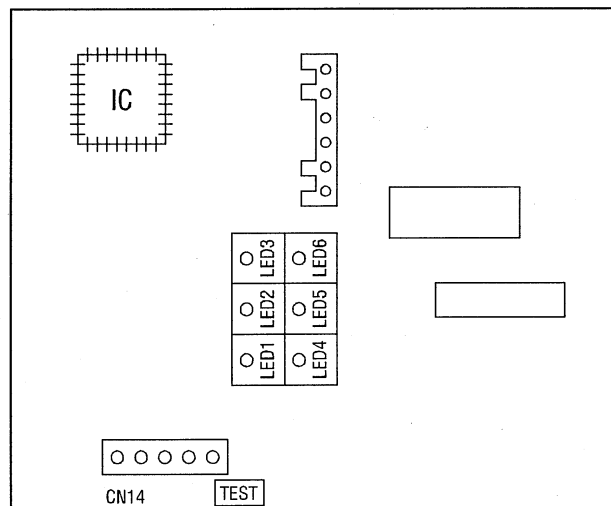


REFRIGERANT SYSTEM DIAGRAM

**Models : ARG90ELC3 / AOG90EPD3L
ARY90ELC3 / AOY90EPD3L**

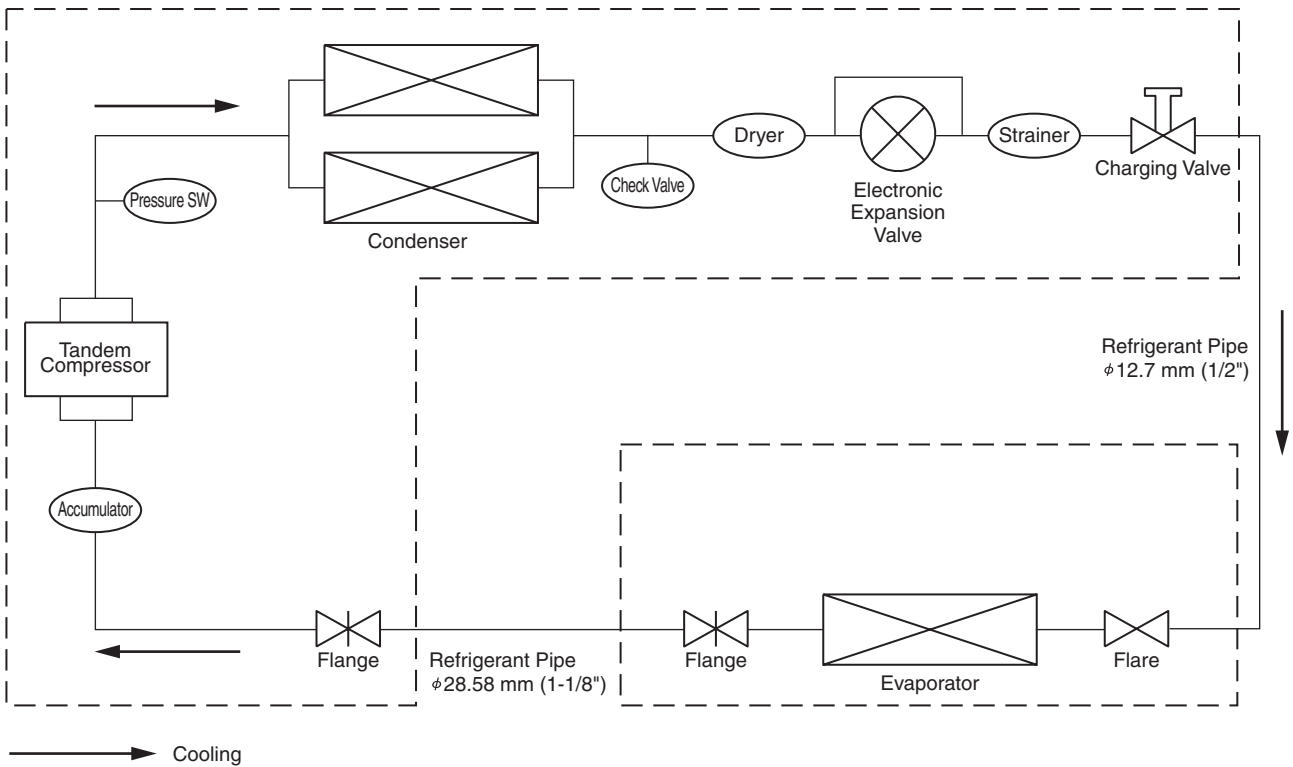


**Models : ARG90TLC3 / AOG90TPC3L
ARY90TLC3 / AOY90TPC3L**

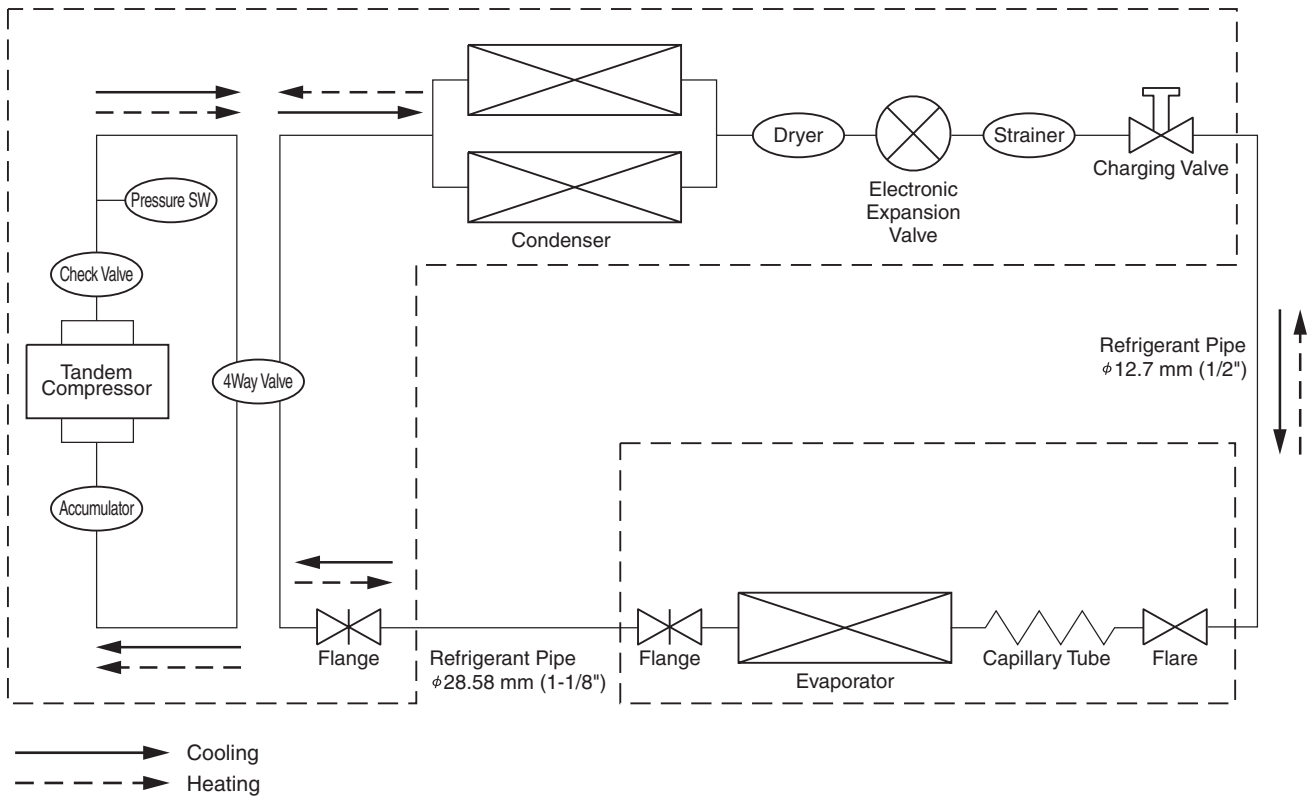


DISASSEMBLY ILLUSTRATION


Models : AOG90EPD3L
AOG90TPC3L
AOY90EPD3L
AOY90TPC3L

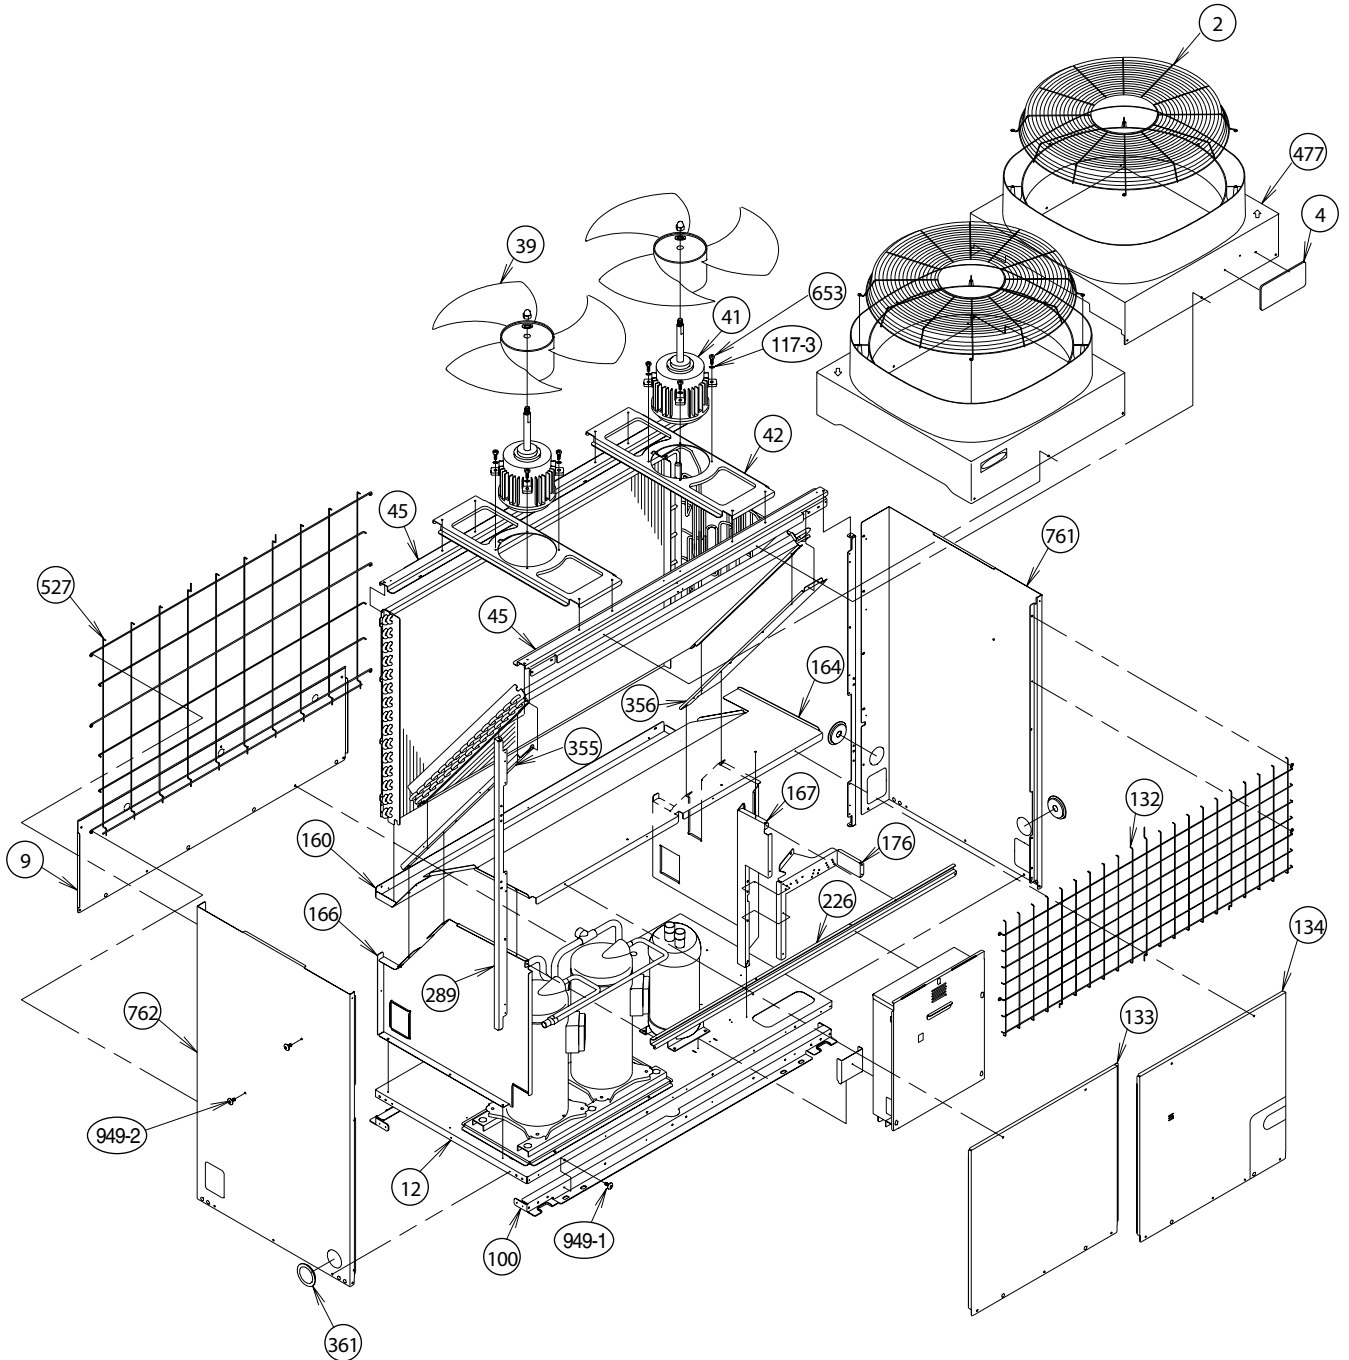


Models : AOG90EPD3L
AOY90EPD3L

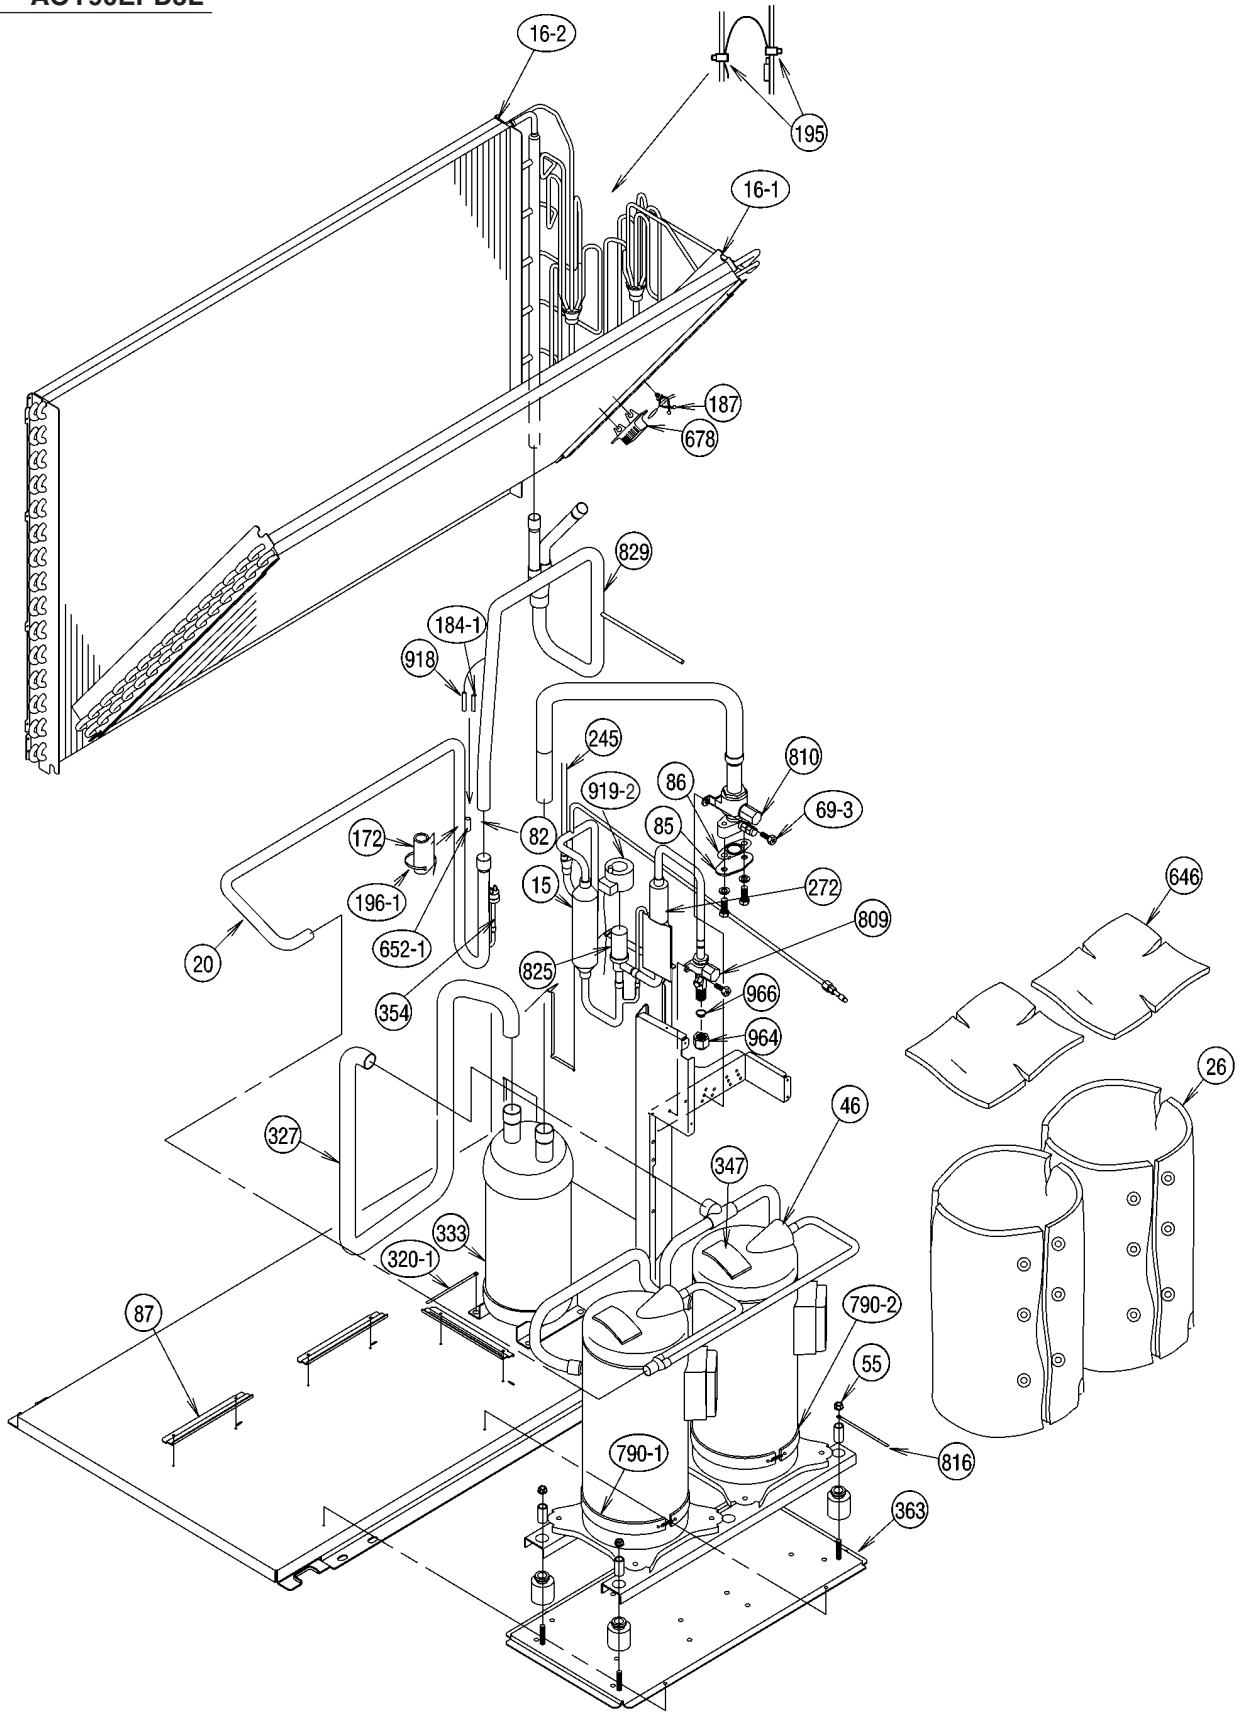


Model : AOG90TPC3L
AOY90TPC3L

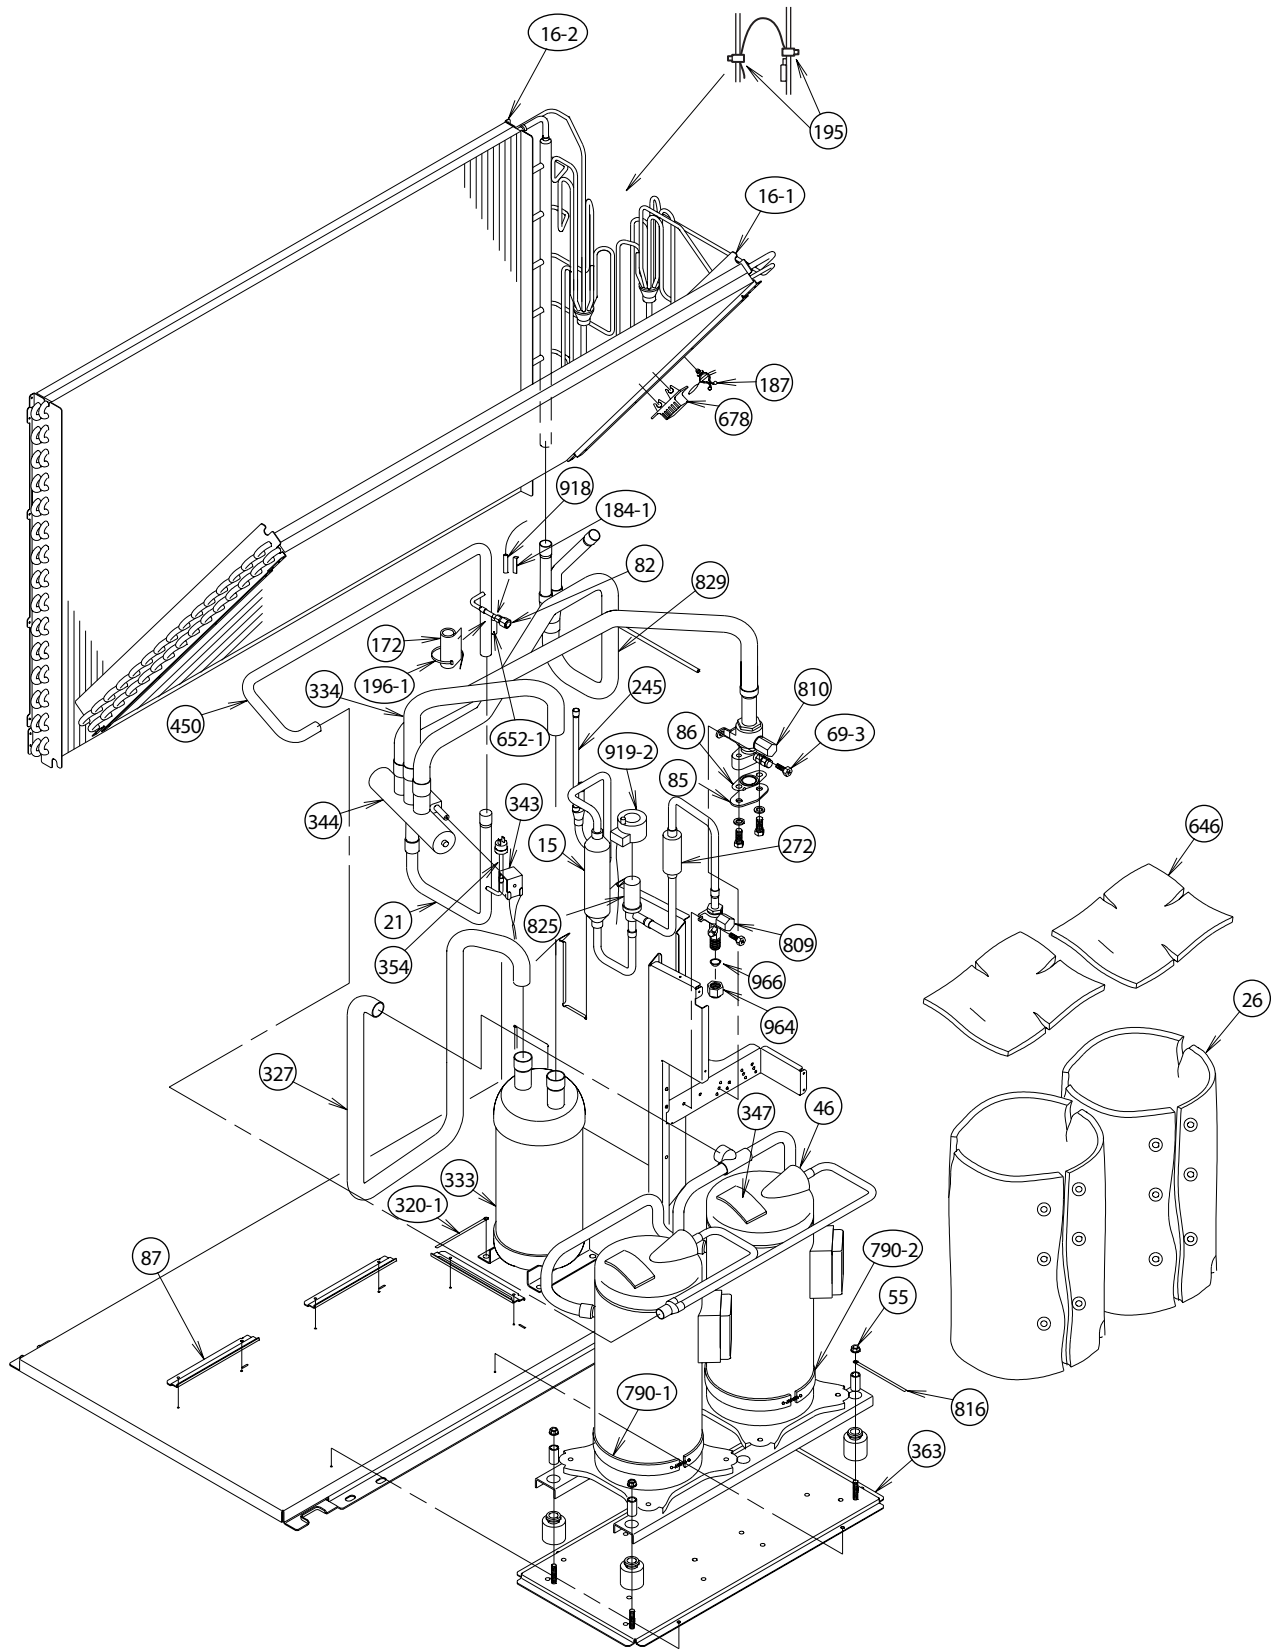


Models : AOG90EPD3L
AOG90TPC3L
AOY90EPD3L
AOY90TPC3L

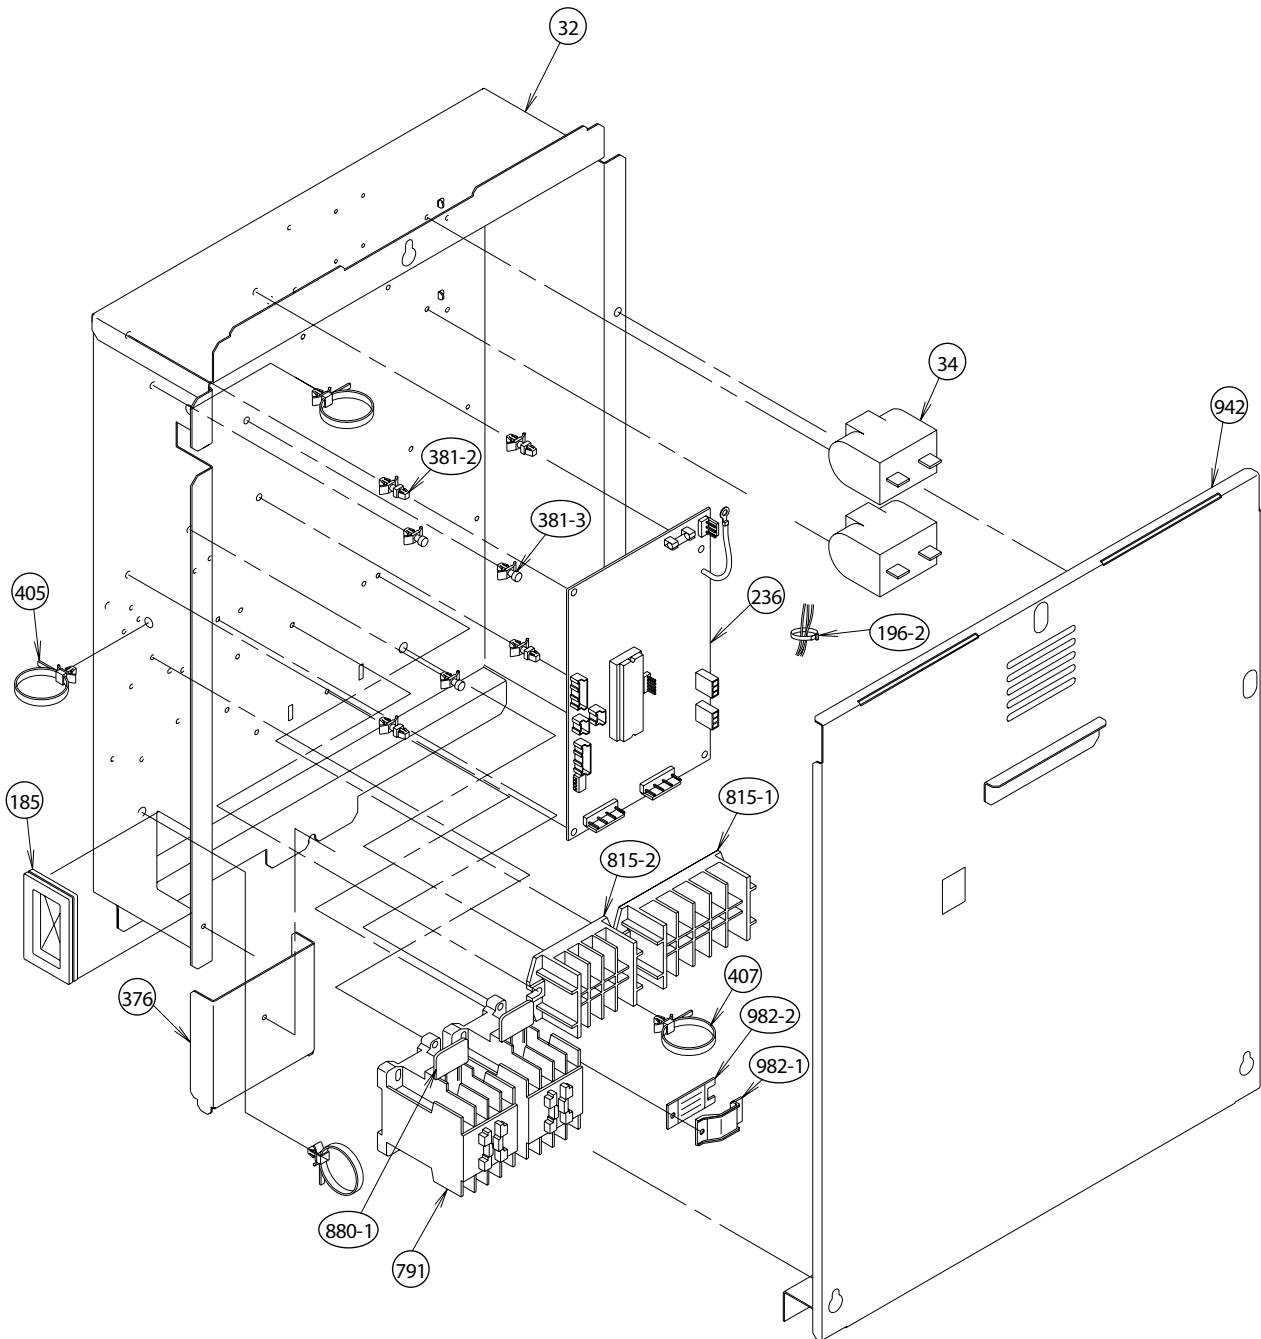


Models : ARG90ELC3
ARG90TLC3
ARY90ELC3
ARY90TLC3

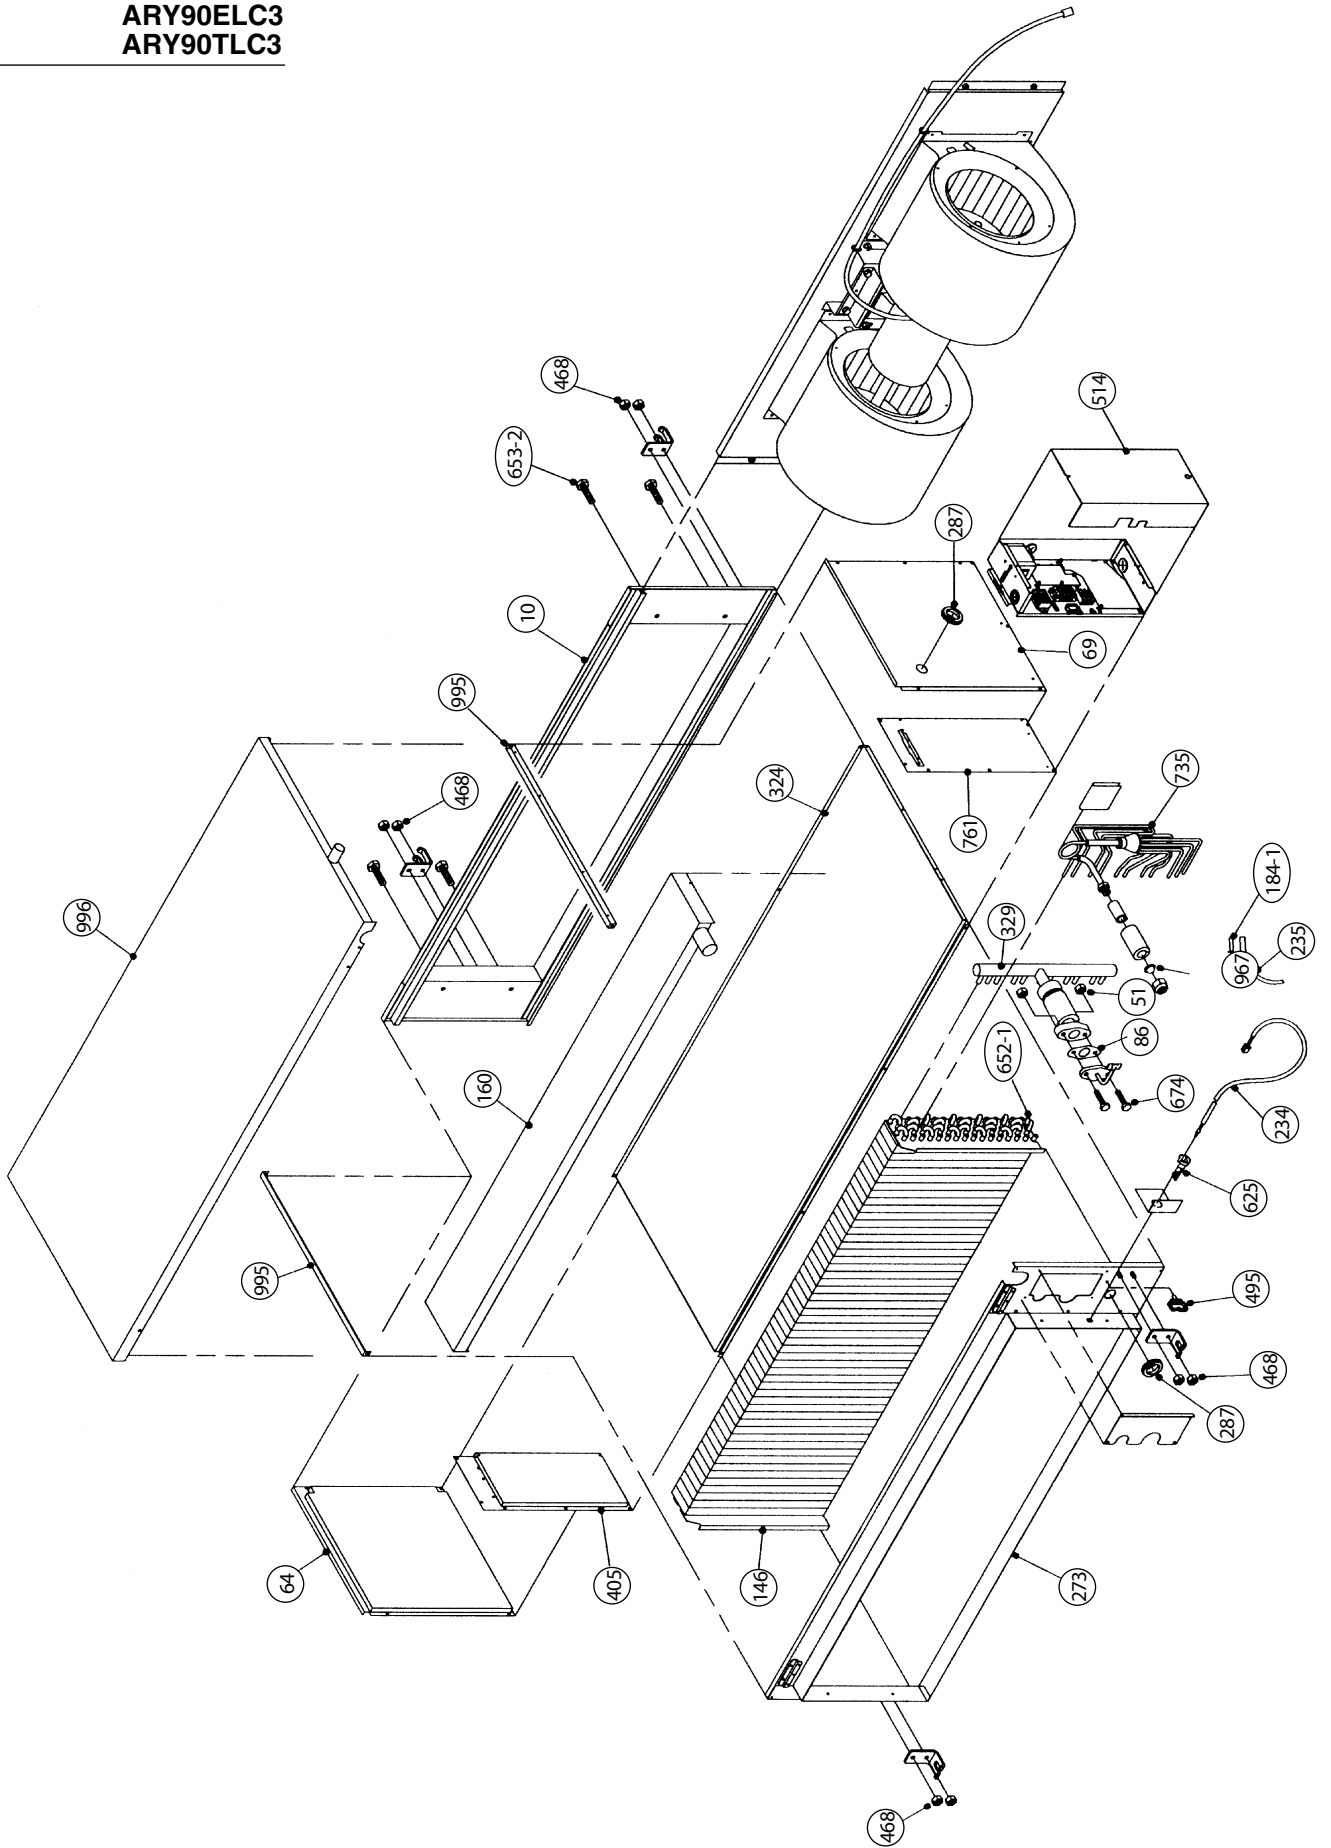

Models : ARG90ELC3
ARG90TLC3
ARY90ELC3
ARY90TLC3

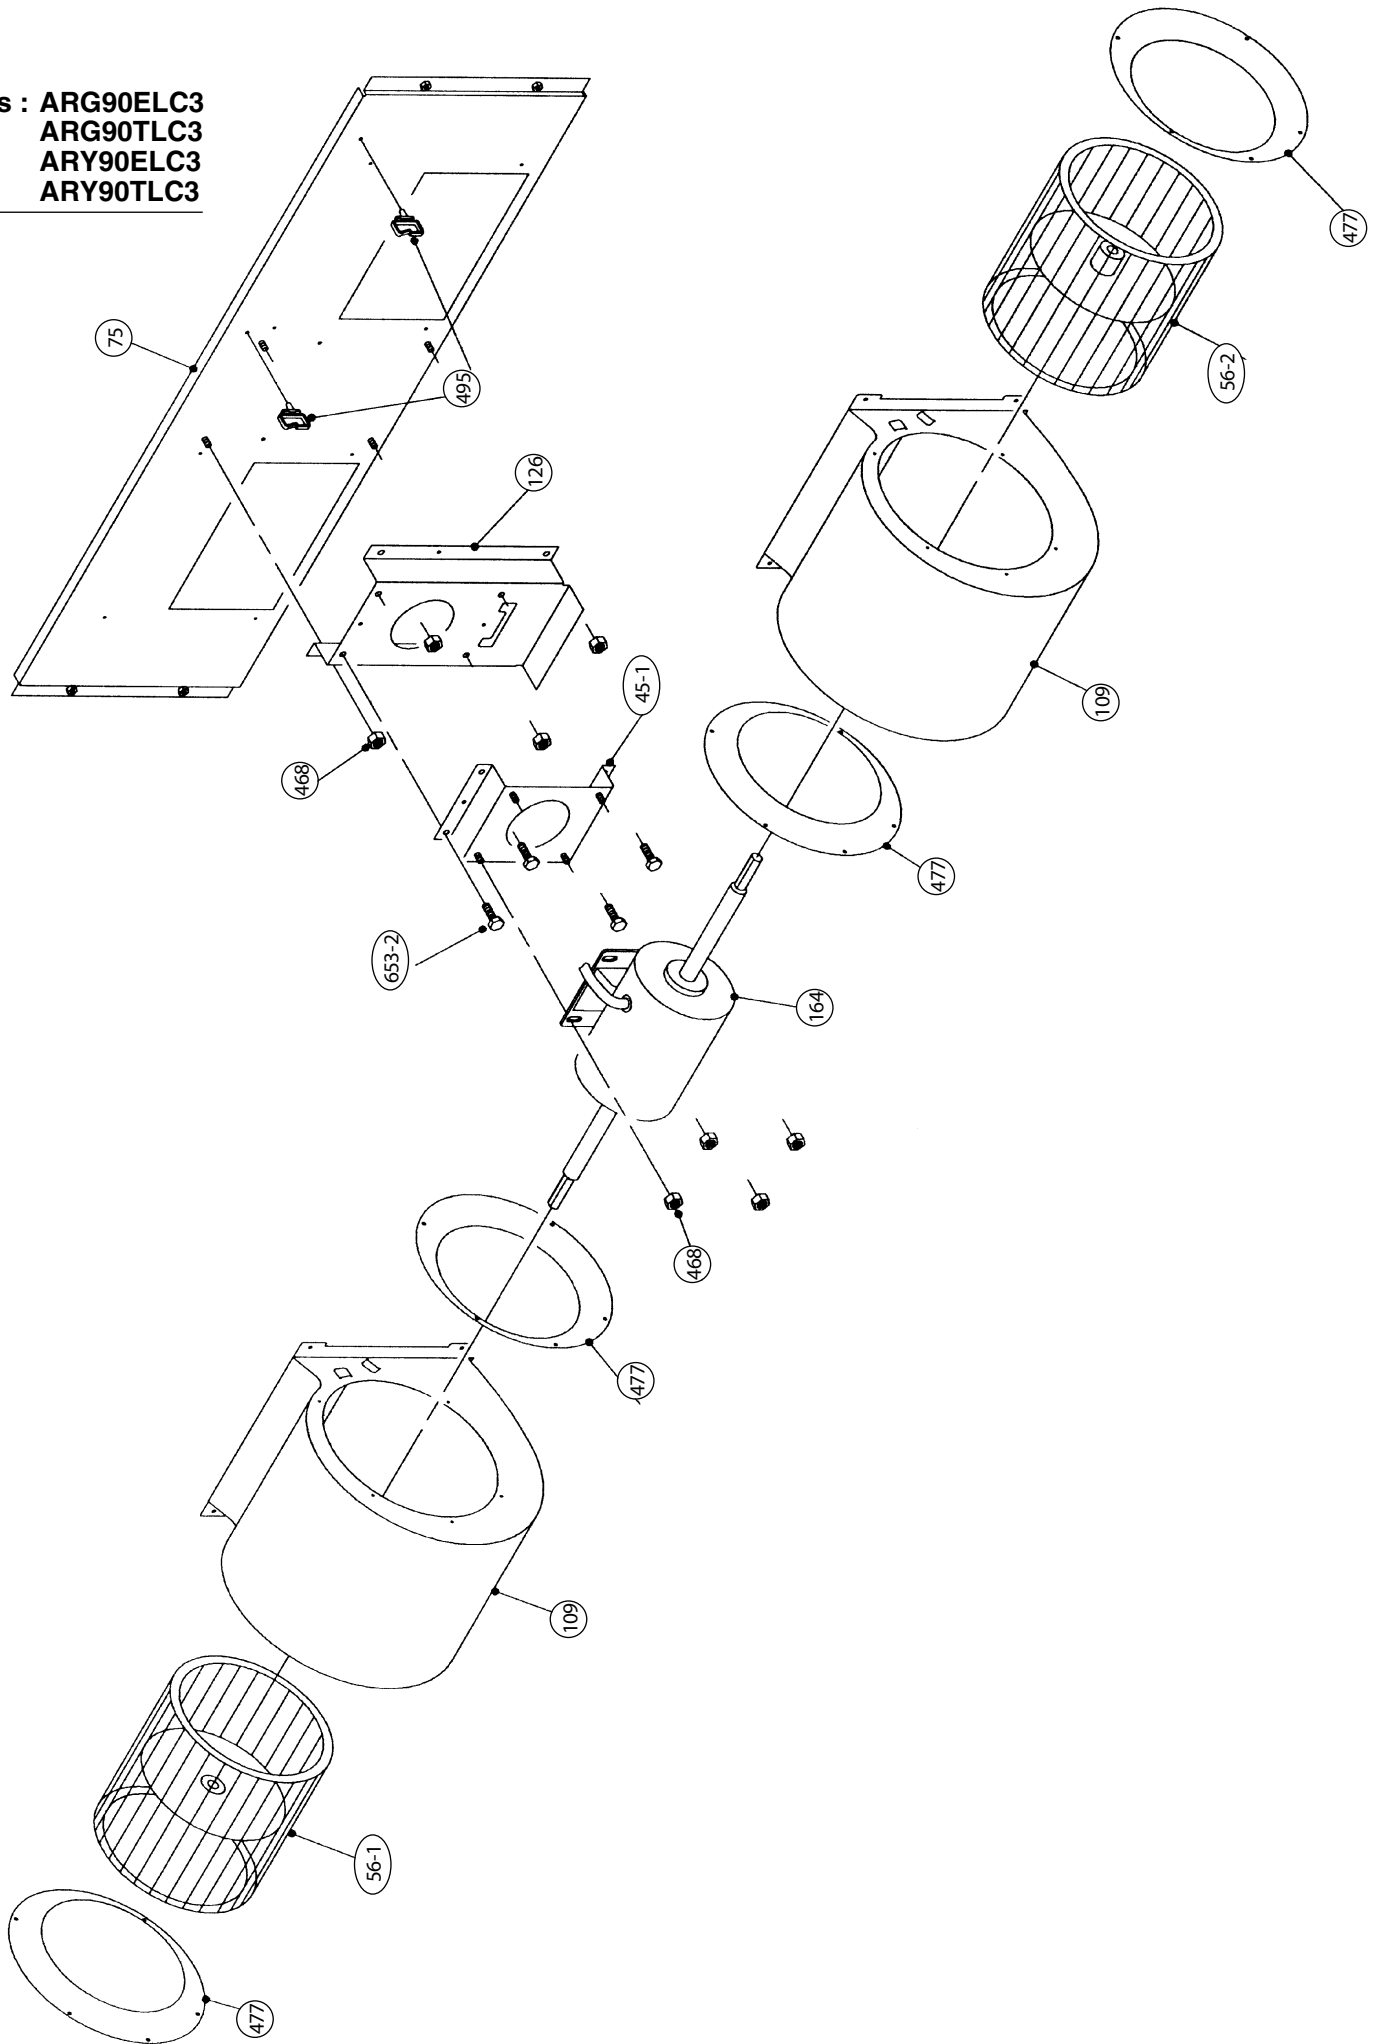

Models : ARG90ELC3
ARG90TLC3
ARY90ELC3
ARY90TLC3

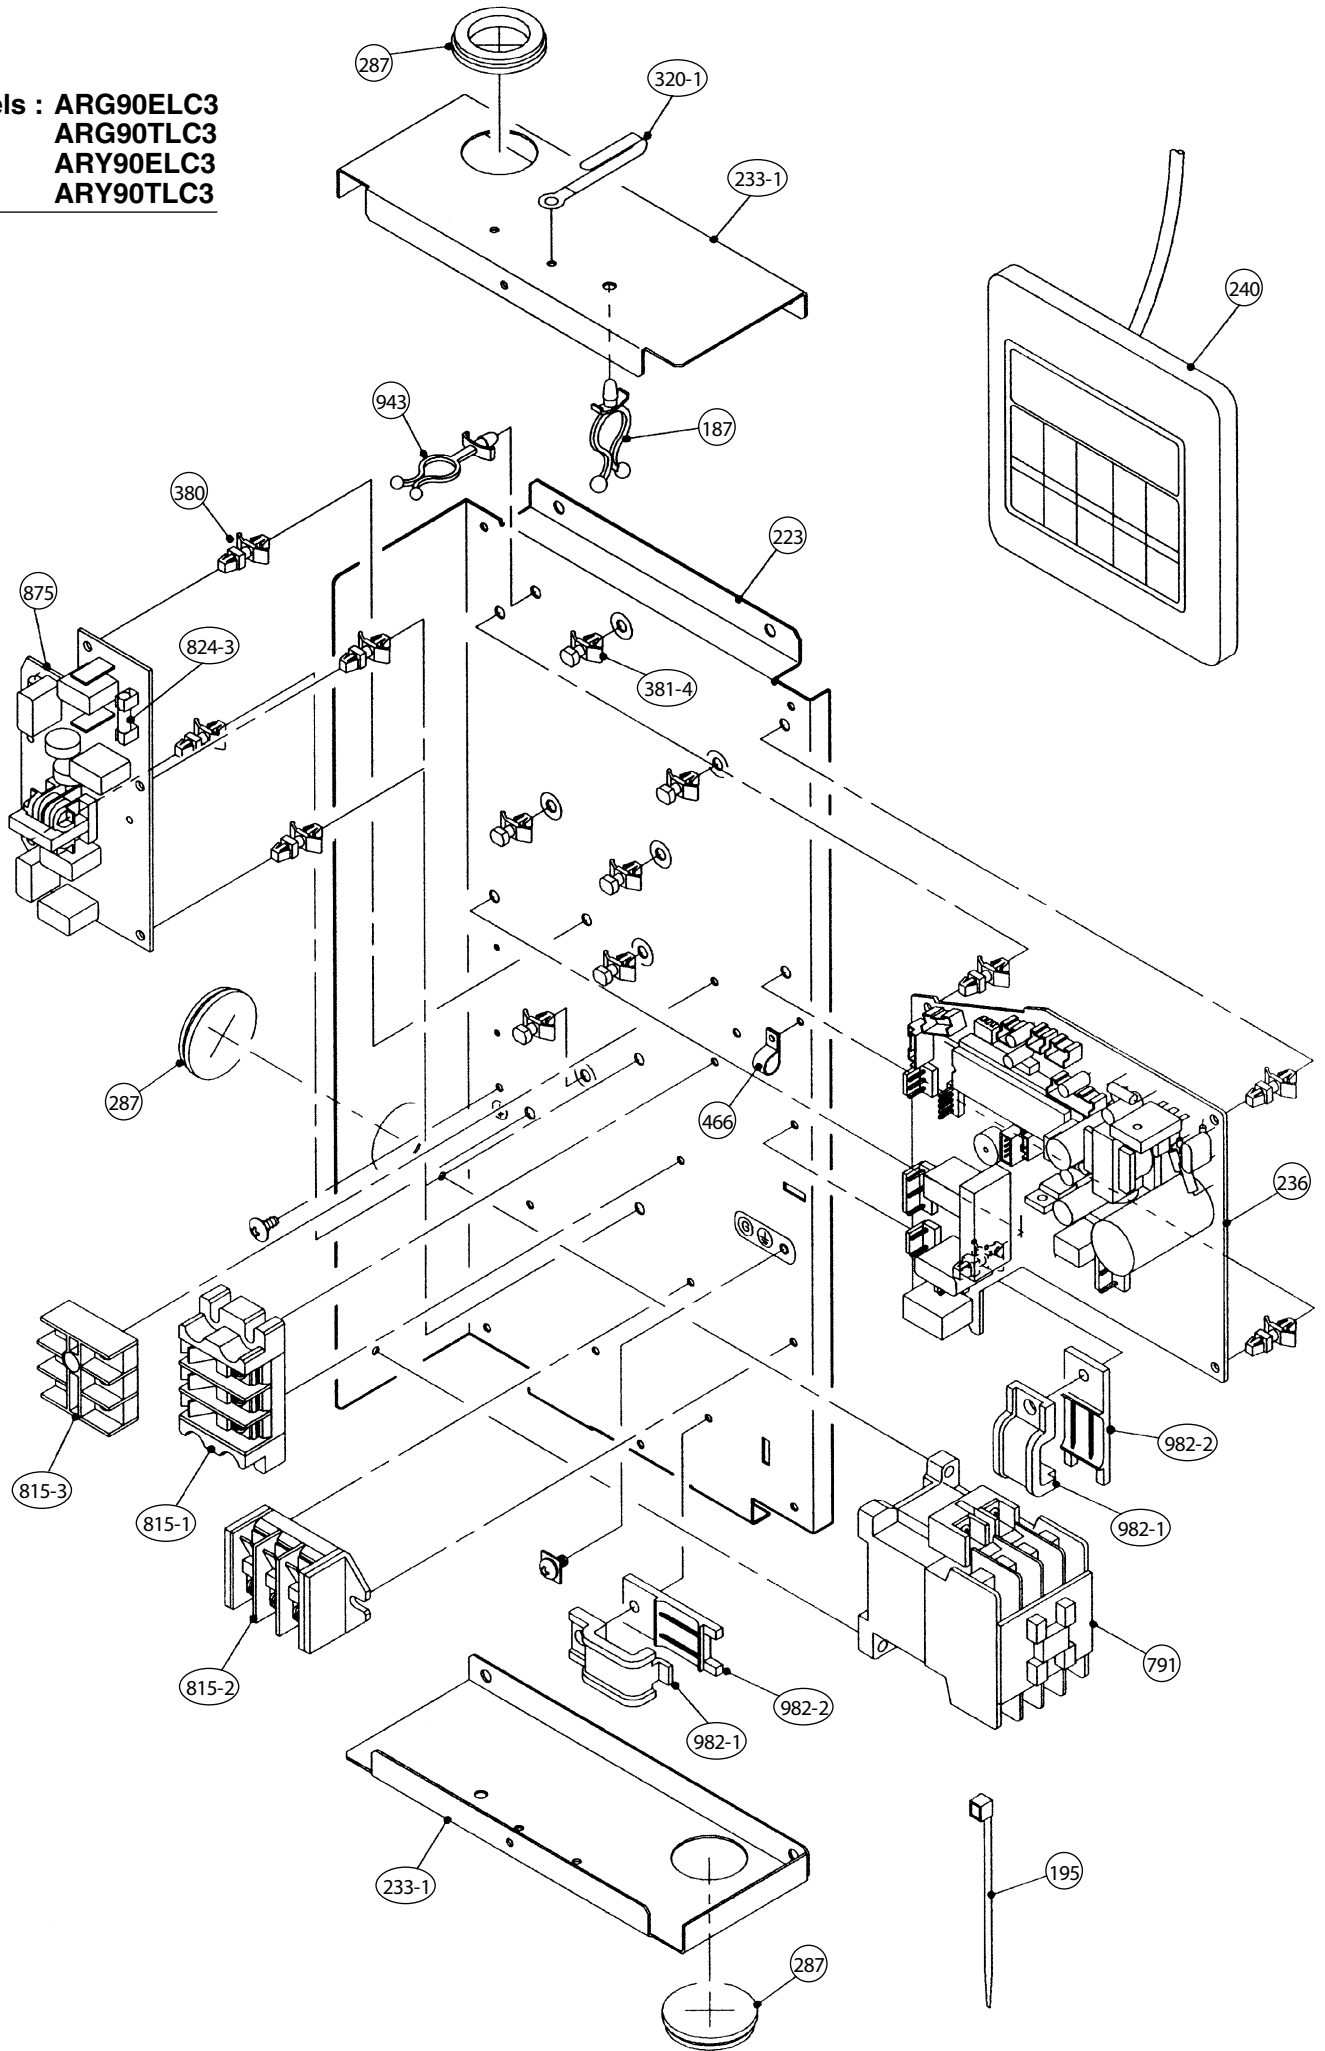

PARTS LIST

When you order parts, please make a photocopy of this page and fill the number of the parts in the "Order" column.

INDOOR UNIT

Ref. No.	Description	Part No.		Ord. Qty	Ref. No.	Description	Part No.		Ord. Qty
		ARG90ELC3 ARY90ELC3	ARG90TLC3 ARY90TLC3				ARG90ELC3 ARY90ELC3	ARG90TLC3 ARY90TLC3	
10	Front Panel Assy	9364635002	9364635002		329	Coupling Pipe Assy	9365347003	9365347003	
45-1	Bracket (Motor) Assy	9364630007	9364630007		380	Locking Spacer KGLS-6S	313209391403	313209391403	
51	Nut	0700005091	0700005091		381-4	Locking Spacer KGPS-6S	0600118075	0600118075	
56-1	Sirocco Fan-R	9364665016	9364665016		405	Panel Side	9364648002	9364648002	
56-2	Sirocco Fan-L	9364665023	9364665023		466	Clamp NK-4N	313714328805	313714328805	
64	Left Panel	9364650005	9364650005		468	Nut-A M8	9356998009	9356998009	
69	Right Panel	9364649009	9364649009		477	Bellmouth	9364664002	9364664002	
75	Fan Panel	9364629001	9364629001		495	Clamp No.2U46	9352715006	9352715006	
86	Gasket	9363272000	9363272000		514	Control Box Cover Metal	9365186008	9365186008	
109	Casing Assy	9364660004	9364660004		625	Cord Bushing	9359240006	9359240006	
126	Motor Plate Assy	9364632001	9364632001		652-1	Therm. Holder Pipe	313806262805	313806262805	
146	Evaporator Assy	9370825015	9370825015		653-2	Bolt HLSJ8025ZV	0700190018	0700190018	
160	Drain Pan Assy	9364652023	9364652023		674	Bolt LSM10045	0700145117	0700145117	
164	Fan Motor Assy-In	9601004004	9601004004		735	Distributor Assy	9365343005	9365343005	
184-1	Thermo. Spring-A	313728262708	313728262708		761	Side Panel-R Assy	9365147009	9365147009	
187	Clamp No.1219	313361271706	313361271706		791	Magnetic Relay	9900002015	9900002015	
195	Clamp SKB-100	313361275805	313361275805		815-1	Terminal 3P	9356488005	9356488005	
223	Control Box Metal	9365185001	9365185001		815-2	Terminal 3P	9363276046	9363276046	
233-1	Plate (Box)	9365146002	9365146002		815-3	Terminal 3P	9703345012	9703345012	
234	Thermistor Assy-Room	9703299056	9703299056		824-3	Fuse	0600222512	0600222512	
235	Thermistor Assy-Pipe	9703297021	9703297021		875	Filter PCB Assy	9704561145	9704561145	
236	Controller PCB Assy	9704557520	9704557377		943	Wire Clamp	0600231019	0600231019	
240	Remote Control Unit	9703173066	9371438030		967	Bonnet-B	313045417959	313045417959	
273	Rear Panel Assy	9364642000	9364642000		982-1	Cord Clamp	9356857009	9356857009	
287	Cap (Power)	9352173011	9352173011		982-2	Cord Clamp-B	9356858006	9356858006	
320-1	Wire Clamp Metal	313483219905	313483219905		995	Beam	9364647005	9364647005	
324	Top Plate	9364634005	9364634005		996	Drain Pan (S) Assy	9364893013	9364893013	





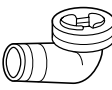
When you order parts, please make a photocopy of this page and fill the number of the parts in the "Order" column.

OUTDOOR UNIT



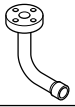


 
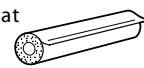
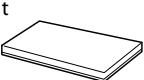
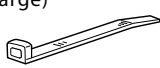

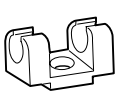

Ref. No.	Description	Part No.		Ord. Q'ty	Ref. No.	Description	Part No.		Ord. Q'ty
		AOG90EPD3L AOY90EPD3L	AOG90TPC3L AOY90TPC3L				AOG90EPD3L AOY90EPD3L	AOG90TPC3L AOY90TPC3L	
2	Fan Cover	9366142010	9366142010		327	Suction Pipe - A	9365599006	9365599006	
4	Emblem-Rear "FUJITSU"	9371388014	9371388014		333	Accumulator	9371828015	9371828015	
4	Emblem-Rear "GENERAL"	313791088308	313791088308		334	Suction Pipe - B	-----	9361894006	
9	Rear Panel, Painted	9361712027	9361712027		343	Solenoid Coil	-----	9703342011	
12	Base Assy	9372336014	9372336014		344	4-Way Valve	-----	9703270000	
15	Dryer	9369978012	9369978012		347	Noise Insulation - D	313712304109	313712304109	
16-1	Condenser-A Assy	9370620016	9370620016		354	Pressure Switch	9703667008	9703667008	
16-2	Condenser-B Assy	9370621013	9370621013		355	Bracket (Condenser) - L	9361698000	9361698000	
20	Discharge Pipe Assy	9365569009	-----		356	Bracket (Condenser) - R	9361699007	9361699007	
21	Discharge Pipe - B Assy	-----	9365567005		361	Bushing	9361725003	9361725003	
26	Compressor Cover-A	9361935006	9361935006						
32	Control Box	9361713000	9361713000		363	Bracket Panel (Comp.)	9361691018	9361691018	
34	Capacitor (Fan Motor)	9703306037	9703306037		376	Bracket (Control Box)	9361727007	9361727007	
39	Propeller Fan	9361726000	9361726000		381-2	Locking Spacer KGLS-8S	0600035020	0600035020	
41	Fan Motor Assy-Outer	9601698012	9601698012		381-3	Locking Spacer KGPS-8S	0600118051	0600118051	
42	Bracket Panel (Motor)	9361703001	9361703001		405	Clamp No.1763	313816345304	313816345304	
45	Bracket (Motor)	9361701007	9361701007		407	Clamp(Cable) No.1259	313739340109	313739340109	
46	Compressor Assy	9367378005	9367378005		450	Discharge Pipe - A	-----	9367217007	
55	Special Nut M8	313252257701	313252257701		477	Bellmouth	9361721005	9361721005	
69-3	Bolt , Hex.Socket	301210060360	301210060360		527	Condenser Guard	9366143017	9366143017	
82	Check Joint Assy	9363886009	9363886009		646	Compressor Cover - B	9361936003	9361936003	
85	Valve Plate	9363063004	9363063004		652-1	Thermistor Holder Pipe	313714262805	313714262805	
86	Gasket	9363272000	9363272000		653	Bolt, For Fan Motor	0700145087	0700145087	
87	Bracket (Compressor)	9361694002	9361694002		678	Bracket (Thermistor)	313557406106	313557406106	
100	Base Foot , Painted	9361688025	9361688025		761	Side Panel - R, Painted	9361706026	9361706026	
117-3	Special Washer M6	313306391007	313306391007		762	Side Panel - L, Painted	9361705029	9361705029	
132	Front Protection Net	9366144014	9366144014		790-1	Belt Heater - A	9361140042	9361140042	
133	Front Panel - L	9361709027	9361709027		790-2	Belt Heater - B	9361140059	9361140059	
134	Front Panel - R	9361710047	9361710047		791	Magnetic Relay	9900078010	9900078010	
160	Drain Pan	9361700000	9361700000		809	Ball Valve - A	9371799025	9371799025	
164	Separate Wall - Upper	9361693005	9361693005		810	Ball Valve - B	9361938007	9361938007	
166	Separate Wall - L	9361695009	9361695009		815-1	Terminal 5P	9363275018	9363275018	
167	Separate Wall - R	9361696006	9361696006		815-2	Terminal 4P	9363276015	9363276015	
172	Pipe Cover	9363470000	9363470000		816	Wire Clamp Metal	313584219902	313584219902	
176	Bracket (Valve) - A	9368955007	9368955007		825	Expansion Valve Assy	9366558002	9365566008	
184-1	Thermostat Spring-A	313728262708	313728262708		829	Joint Pipe Assy	9362922005	9361886001	
185	Rubber Bushing	313005066051	313005066051						
187	Clamp No.1219	313361271706	313361271706		880-1	Network (C - R)	9700987017	9700987017	
195	Clamp SKB - 100	313361275805	313361275805		918	Thermistor Assy	9900125011	9900125011	
196-1	Clamp SKB - 3M	312300787605	312300787605		919-2	Expansion Valve Coil	9361930001	9361930001	
196-2	Clamp SKB - 150	313035356905	313035356905		942	Control Box Cover	9361716001	9361716001	
226	Reinforcement (Separate Wall)	9361697003	9361697003		949-1	Screw, Painted	9305648009	9305648009	
236	Controller PCB Assy	9704764164	9704764102		949-2	Screw, Painted	9302348001	9302348001	
245	Condensing Pipe - M	9367200009	9367200009		964	Flare Nut	9371800028	9371800028	
272	Strainer	9361931008	9361931008		966	Bonnet	9371801025	9371801025	
289	Reinforcement (Side Panel)	9361704008	9361704008		982-1	Cord Clamp	9356857009	9356857009	
320-1	Wire Clamp Metal	313483219905	313483219905		982-2	Cord Clamp - B	9356858006	9356858006	

STANDARD ACCESSORIES

OUTDOOR UNIT ACCESSORIES

Name and Shape	Q'ty	Application	AOG90EPD3L AOY90EPD3L	AOG90TPC3L AOY90TPC3L
Flange joint assembly 	1	For connecting the piping	9363035001	
Coupler heat insulation 	1	For outdoor side pipe joint	9363828009	
Gasket 	1	Installation between flange joint assembly and valve B	9363272000	
Bolt 	2	For fixing the flange joint assembly	0700145100	
Drain pipe 	3	For outdoor unit drain piping work (Reverse cycle model only)	9301102000	

INDOOR UNIT ACCESSORIES

Name and Shape	Q'ty	Application	ARG90ELC3 ARY90ELC3	ARG90TLC3 ARY90TLC3
Remote control unit 	1	Use for air conditioner operation	9703173066 (EZ-0001WSE-R)	9371438030 (EZ-0001HSEFR)
Flange joint 	1	For connecting the piping	9365352007	9365352007
Gasket 	1	Installation between flange joint and indoor unit	9363272000	9363272000
Special nut A (Large flange) 	4	For suspending the indoor unit from ceiling	313005446653	313005446653
Special nut B (Small flange) 	4		313005446759	313005446759
Washer 	8		9364938004	9364938004
Coupler heat insulation 	1	For indoor side pipe joint (small)	9350716029	9350716029
Flange joint insulation 	1	For indoor side pipe joint (large)	9364937007	9364937007
Binder (Large) 	1	For fixing the connection pipe (Large and small)	9366156000	9366156000
Binder (Small) 	1		313361275805	313361275805
Remote control unit cord clamp 	10	For installing the remote control unit cord	313714181904	313714181904
Screw 	10	For installing the remote control unit cord clamp	301141153027	301141153027
	2	For installing the remote control unit	301141134166	301141134166

