

## Error Codes

Error Code	For products	Meaning	How to deal with?
E2	7K,9K,12K,18K,24K,f or all On/off series including dual splits AMD016 017 036 037	When the evaporator pipe temperature is higher than 63 degree C, "E2" will display on the panel.	When "E2" displays on the panel, do not worry about it. The unit will stop and restart after the pipe temperature lower than 49 degree C.
E4	only for 7K,9K,12K models with special fan motor runing at the speed controled by programm.The other models(18k 24k) have no this code.	When the indoor fan speed is lower than 200 rpm, "E4" will display on the panel.	When "E4" display on the panel, you should check if there are something block the indoor fan or the fan motor's terminals connect with PCB steadily. Otherwise you should change a new fan motor.
EA	VE UV panels double CMOS chips(including all products of global slit project)	Communication fault, only apply to global split project. (Non double CMOS chips design has this errow code.)	When "EA" display on the panel, check the display board wiring connection, or change the display board directly.

06000239en