



GWCN12A3NK1AA

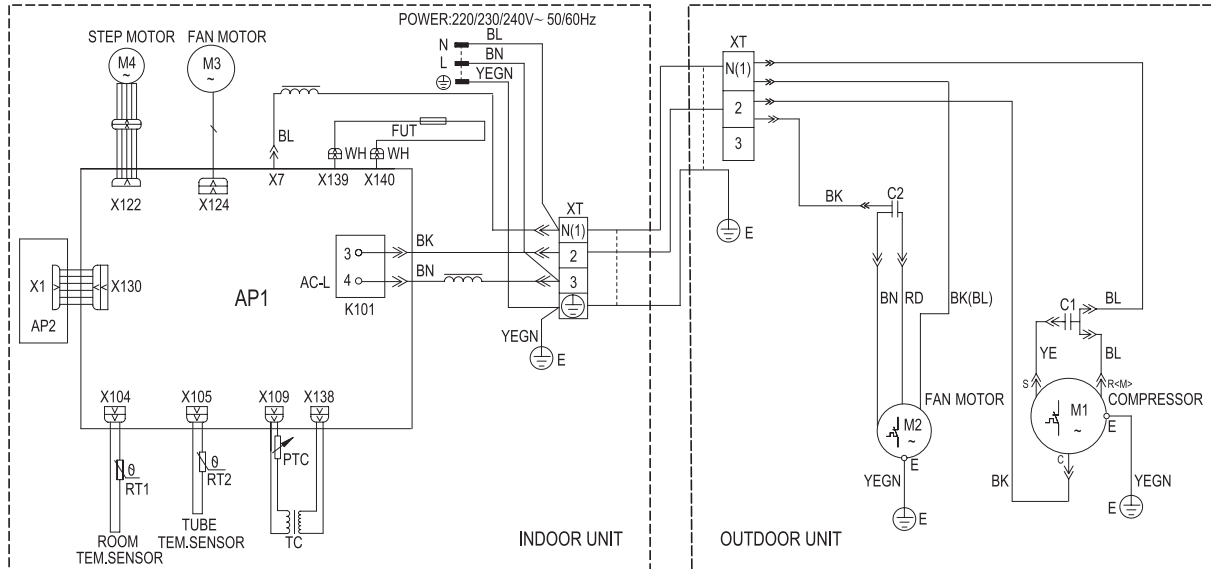

GWCN12A3NK2AA

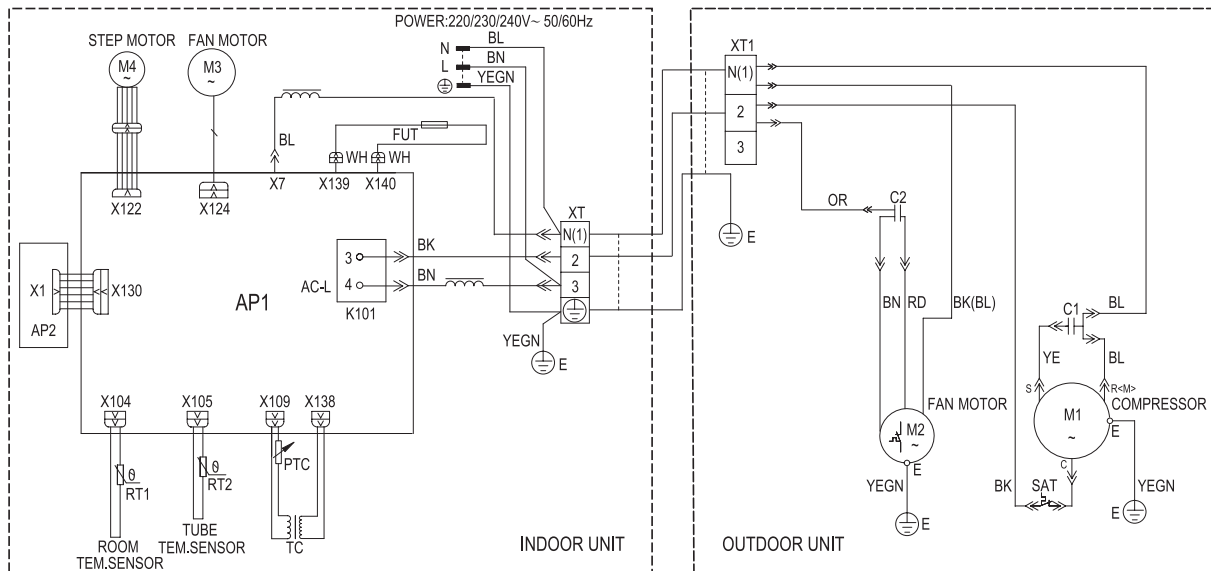


Большая библиотека технической документации


<https://splitsystema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html>

каталоги, инструкции, сервисные мануалы, схемы.


GWCN07A2NK1AA ; GWCN07A2NK2AA ; GWCN07A2NK3AA ; GWCN09A2NK2AA ; GWCN09A2NK3AA

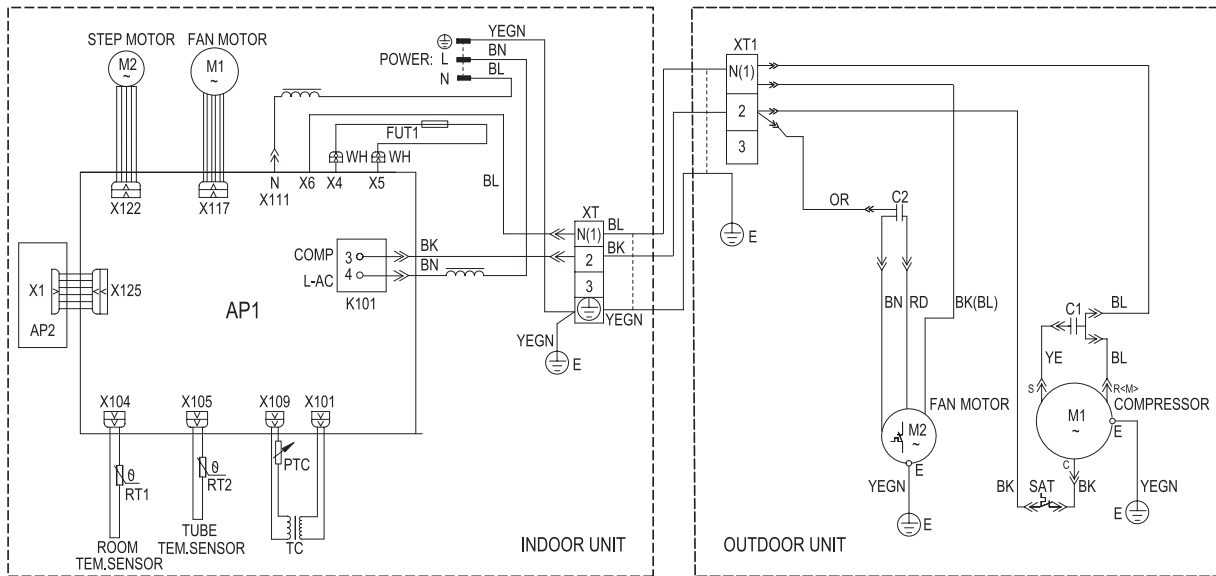


GWCN09A2NK1AA ;

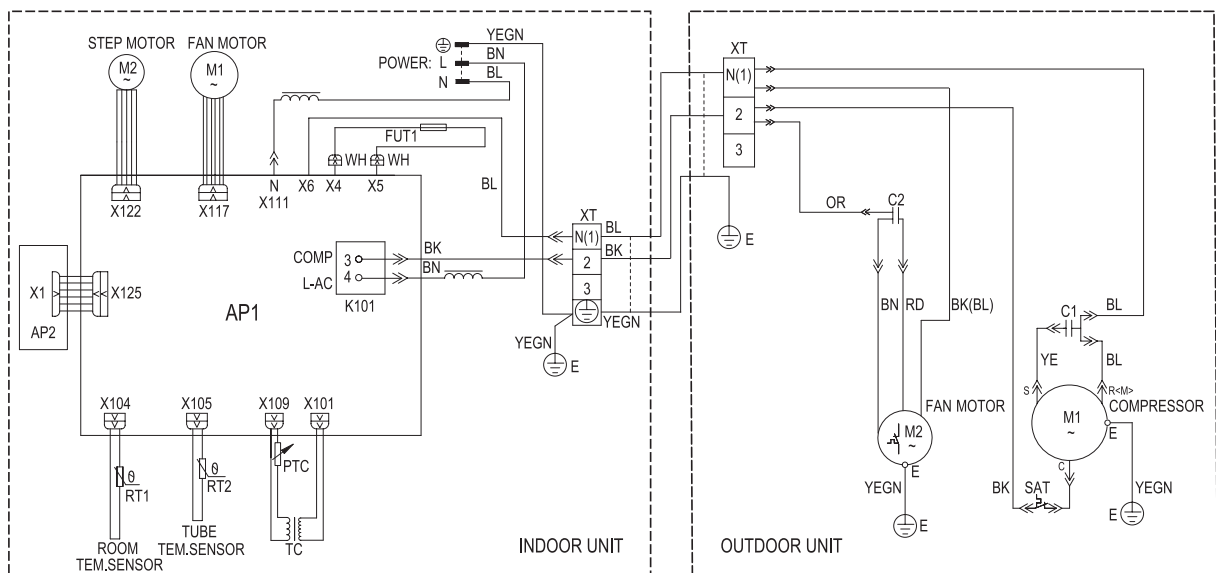


GWCN12A3NK3AA

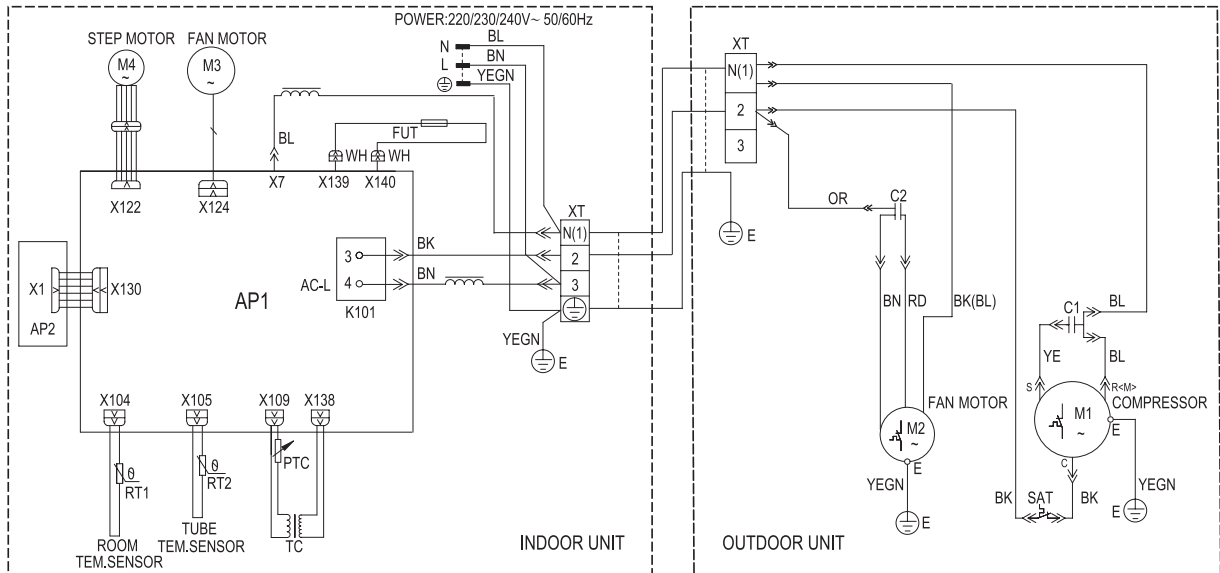


GWHN12A3NK3AB ; GWHN12A3NK3AA

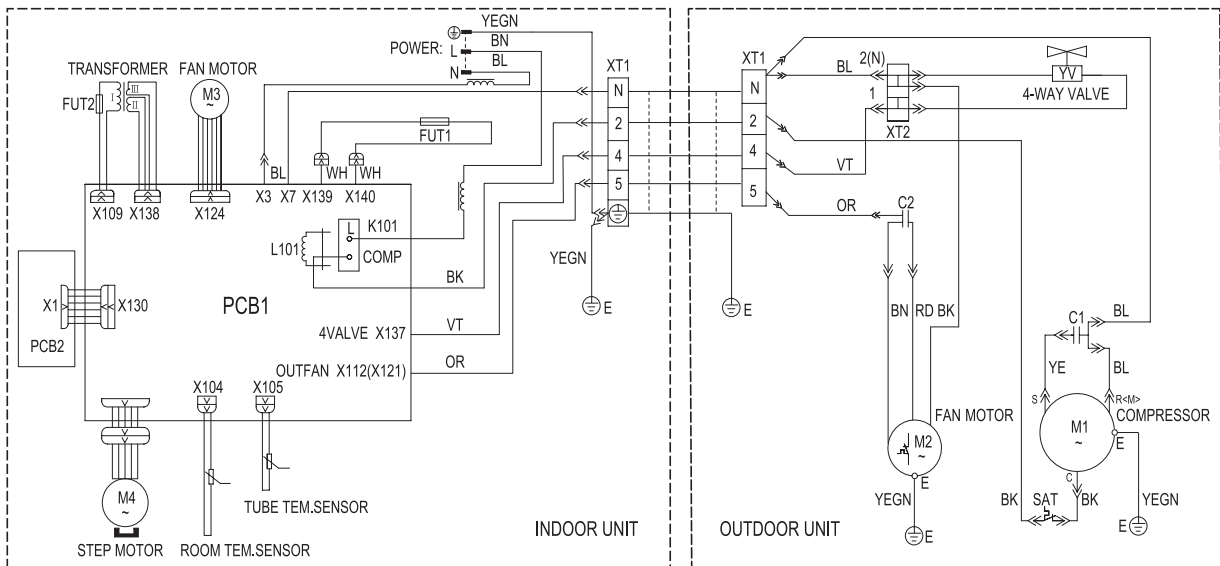


GWHN09A2NK1AA

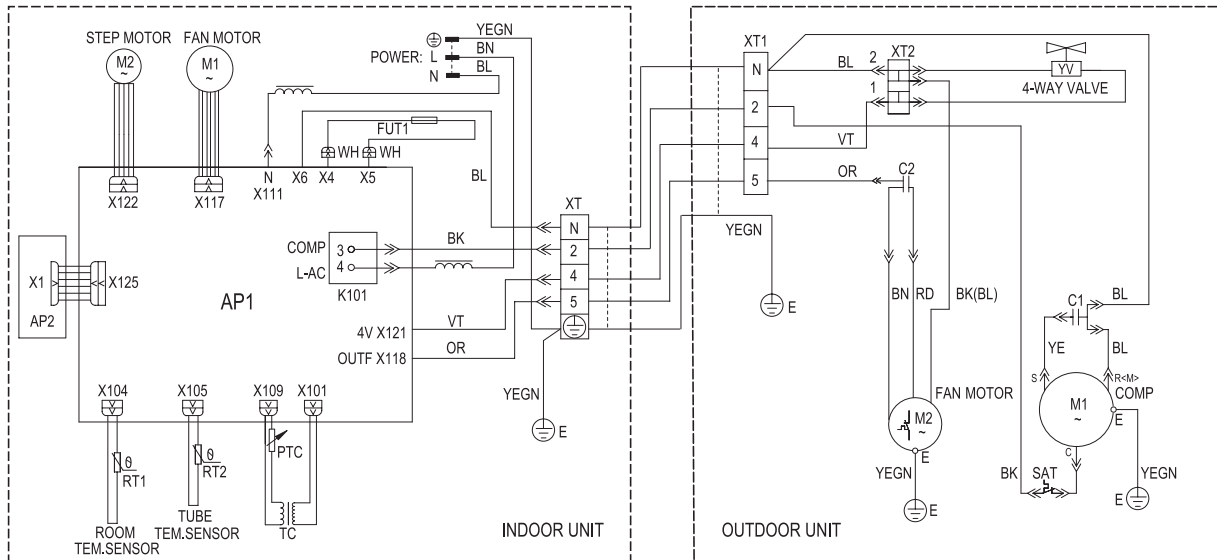


GWHN12A3NK1AA

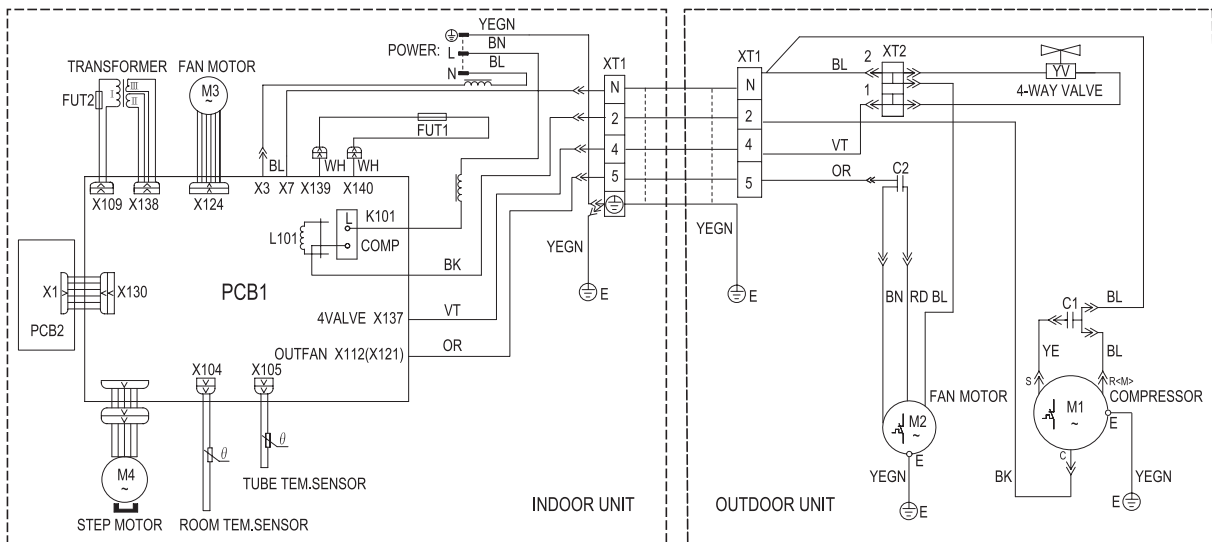

GWHN12A3NK2AA

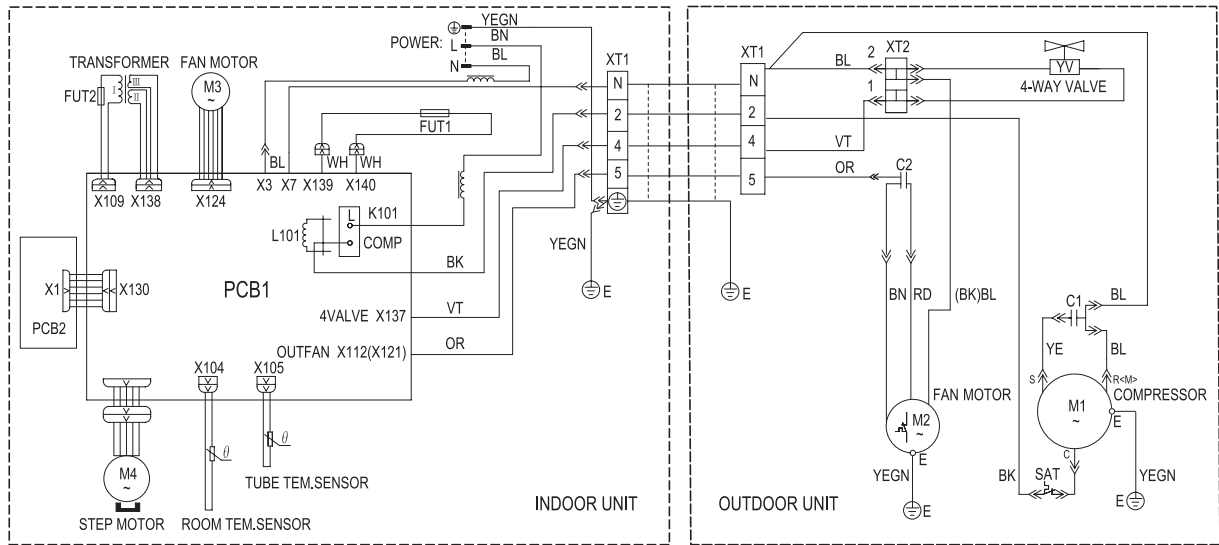

GWHN07A2NK1AA ; GWHN07A2NK2AA ; GWHN07A2NK3AA ; GWHN09A2NK2AA ; GWHN09A2NK3AA

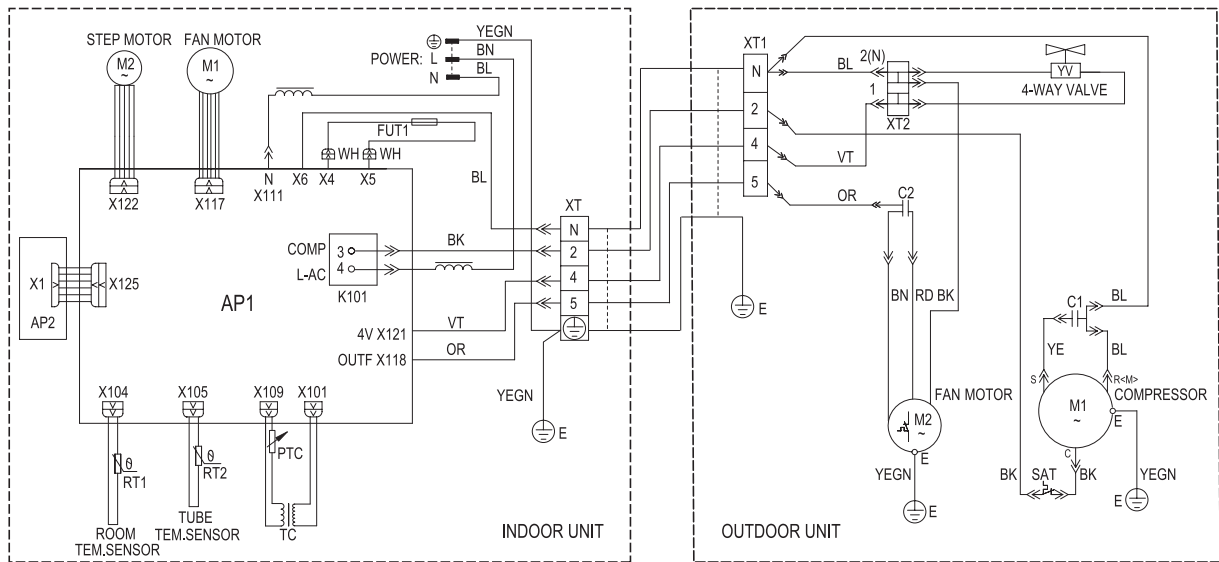

These circuit diagrams are subject to change without notice. Please refer to the ones stuck on the machines.