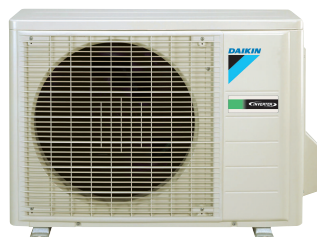


Service Manual

Inverter Pair Wall Mounted Type D-Series E-Series



[Applied Models]

- Non-Inverter Pair : Heat Pump
- Inverter Pair : Cooling Only
- Inverter Pair : Heat Pump

Inverter Pair D-Series E-Series

●Cooling Only

Indoor Unit

<R-410A>

FTKS25DVM

FTKS35DVM

FTKS25EVMA

FTKS35EVMA

<R-22>

FTKD25DVM

FTKD35DVM

FTKD25DVMA

FTKD35DVMA

FTKD25DV2Z

FTKD35DV2Z

Outdoor Unit

<R-410A>

RKS25DAVM

RKS35DAVM

RKS25EBVMA

RKS35EBVMA

<R-22>

RKD25DAVM

RKD35DAVM

RKD25DAVMA

RKD35DAVMA

RKD25DAV2Z

RKD35DAV2Z

●Heat Pump

Indoor Unit

<R-410A>

FTXS25EVMA

FTXS35EVMA

FTYN25DV1A

FTYN35DV1A

<R-22>

FTXD25DVMA

FTXD35DVMA

FTXD25DV2Z

FTXD35DV2Z

Outdoor Unit

<R-410A>

RXS25EBVMA

RXS35EBVMA

RYN25DAV1A

RYN35DAV1A

<R-22>

RXD25DAVMA

RXD35DAVMA

RXD25DAV2Z

RXD35DAV2Z

1. Introduction	V
1.1 Safety Cautions	v
1.2 Used Icons	ix
Part 1 List of Functions	1
1. List of Functions	2
1.1 R-410A Models.....	2
1.2 R-22 Models	5
Part 2 Specifications	9
1. Specifications	10
1.1 Cooling Only	10
1.2 Heat Pump	15
Part 3 Printed Circuit Board Connector Wiring Diagram	19
1. Printed Circuit Board Connector Wiring Diagram.....	20
1.1 Indoor Unit.....	20
1.2 Outdoor Unit.....	26
Part 4 Function and Control.....	29
1. Main Functions.....	30
1.1 Frequency Principle.....	30
1.2 Airflow Direction Control.....	32
1.3 Fan Speed Control for Indoor Units.....	33
1.4 Programme Dry Function	34
1.5 Automatic Operation.....	35
1.6 Thermostat Control.....	36
1.7 NIGHT SET Mode	37
1.8 ECONO Mode	38
1.9 MOLD PROOF Operation	39
1.10 INTELLIGENT EYE	40
1.11 Inverter POWERFUL Operation	42
1.12 Other Functions.....	43
2. Function of Thermistor	44
2.1 Heat Pump Model.....	44
2.2 Cooling Only Model	45
3. Control Specification	46
3.1 Mode Hierarchy	46
3.2 Frequency Control.....	47
3.3 Controls at Mode Changing / Start-up.....	49
3.4 Discharge Pipe Temperature Control.....	50
3.5 Input Current Control.....	51
3.6 Freeze-up Protection Control	52
3.7 Heating Peak-cut Control	52
3.8 Fan Control.....	53
3.9 Liquid Compression Protection Function 2.....	53
3.10 Defrost Control	54
3.11 Electronic Expansion Valve Control	55
3.12 Malfunctions	58

3.13 Forced Operation Mode	59
3.14 Additional Function.....	59

Part 5 Operation Manual 61

1. System Configuration.....	62
2. Instruction.....	63
2.1 Safety Precautions	63
2.2 Names of Parts.....	65
2.3 Preparation Before Operation	68
2.4 AUTO · DRY · COOL · HEAT · FAN Operation	71
2.5 Adjusting the Airflow Direction.....	73
2.6 POWERFUL Operation	75
2.7 OUTDOOR UNIT QUIET Operation.....	76
2.8 ECONO Operation	77
2.9 MOLD PROOF Operation	78
2.10 INTELLIGENT EYE Operation	79
2.11 TIMER Operation	81
2.12 Care and Cleaning	83
2.13 Troubleshooting.....	86

Part 6 Service Diagnosis..... 89

1. Caution for Diagnosis.....	90
2. Problem Symptoms and Measures	91
3. Service Check Function	92
4. Troubleshooting	95
4.1 Error Codes and Description	95
4.2 Indoor Unit PCB Abnormality	96
4.3 Freeze-up Protection Control or High Pressure Control.....	97
4.4 Fan Motor or Related Abnormality	99
4.5 Thermistor or Related Abnormality (Indoor Unit).....	102
4.6 Signal Transmission Error (between Indoor and Outdoor Unit)	103
4.7 Unspecified Voltage (between Indoor and Outdoor Units)	105
4.8 Outdoor Unit PCB Abnormality.....	106
4.9 OL Activation (Compressor Overload)	107
4.10 Compressor Lock	108
4.11 DC Fan Lock	109
4.12 Input Over Current Detection	110
4.13 Four Way Valve Abnormality	111
4.14 Discharge Pipe Temperature Control.....	113
4.15 High Pressure Control in Cooling	114
4.16 Compressor System Sensor Abnormality	116
4.17 Position Sensor Abnormality	117
4.18 DC Voltage / Current Sensor Abnormality.....	118
4.19 Thermistor or Related Abnormality (Outdoor Unit).....	119
4.20 Electrical Box Temperature Rise.....	121
4.21 Radiation Fin Temperature Rise	123
4.22 Output Over Current Detection.....	125
4.23 Insufficient Gas.....	127
4.24 Over-voltage Detection.....	129

5. Check.....	130
5.1 How to Check.....	130

Part 7 Removal Procedure 137

1. Indoor Unit.....	138
1.1 Removal of Air Filter.....	138
1.2 Removal of Front Panel.....	140
1.3 Removal of Front Grille	142
1.4 Removal of Horizontal Blades and Vertical Blades	145
1.5 Removal of Electrical Box	148
1.6 Removal of PCB.....	151
1.7 Removal of Drain Pan Unit.....	158
1.8 Removal of Fan Motor.....	162
1.9 Removal of Heat Exchanger	164
1.10 Removal of Fan Rotor	167
2. Outdoor Unit.....	170
2.1 Removal of Panels and Fan Motor.....	170
2.2 Removal of Electrical Box	179
2.3 Removal of Reactor and Partition Plate	183
2.4 Removal of Sound Blanket.....	185
2.5 Removal of Four Way Valve.....	187
2.6 Removal of Compressor.....	190
2.7 Removal of PCB.....	192

Part 8 Others 195

1. Others	196
1.1 Test Run from the Remote Controller	196
1.2 Jumper Settings	197
1.3 Application of Silicon Grease to a Power Transistor and a Diode Bridge.....	198

Part 9 Appendix..... 199

1. Piping Diagrams.....	200
1.1 Indoor Units	200
1.2 Outdoor Units	202
2. Wiring Diagrams.....	206
2.1 Indoor Units	206
2.2 Outdoor Units	208





Index i

Drawings & Flow Charts v








1. Introduction




1.1 Safety Cautions









Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
 - △ This symbol indicates the item for which caution must be exercised.
The pictogram shows the item to which attention must be paid.
 - This symbol indicates the prohibited action.
The prohibited item or action is shown in the illustration or near the symbol.
 - This symbol indicates the action that must be taken, or the instruction.
The instruction is shown in the illustration or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.












1.1.1 Cautions Regarding Safety of Workers






 Warning	
<p>Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for repair. Working on the equipment that is connected to the power supply may cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.</p>	
<p>If the refrigerant gas is discharged during the repair work, do not touch the discharged refrigerant gas. The refrigerant gas may cause frostbite.</p>	
<p>When disconnecting the suction or discharge pipe of the compressor at the welded section, evacuate the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it may cause injury.</p>	
<p>If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas may generate toxic gases when it contacts flames.</p>	
<p>The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor may cause an electrical shock.</p>	
<p>Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment may cause an electrical shock or fire.</p>	







 Warning	
Be sure to wear a safety helmet, gloves, and a safety belt when working at a high place (more than 2m). Insufficient safety measures may cause a fall accident.	
In case of R410A refrigerant models, be sure to use pipes, flare nuts and tools for the exclusive use of the R410A refrigerant. The use of materials for R22 refrigerant models may cause a serious accident such as a damage of refrigerant cycle as well as an equipment failure.	






 Caution	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands may cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water may cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Be sure to conduct repair work with appropriate tools. The use of inappropriate tools may cause injury.	
Be sure to check that the refrigerating cycle section has cooled down enough before conducting repair work. Working on the unit when the refrigerating cycle section is hot may cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room may cause oxygen deficiency.	

1.1.2 Cautions Regarding Safety of Users

 Warning	
<p>Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools may cause an electrical shock, excessive heat generation or fire.</p>	
<p>If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Be sure to use an exclusive power circuit for the equipment, and follow the local technical standards related to the electrical equipment, the internal wiring regulations, and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work may cause an electrical shock or fire.</p>	
<p>Be sure to use the specified cable for wiring between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections may cause excessive heat generation or fire.</p>	
<p>When wiring between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not damage or modify the power cable. Damaged or modified power cable may cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable may damage the cable.</p>	
<p>Do not mix air or gas other than the specified refrigerant (R410A / R22) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.</p>	
<p>If the refrigerant gas leaks, be sure to locate the leaking point and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leaking point cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it may generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.</p>	
<p>When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment may fall and cause injury.</p>	





 Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet securely. If the plug has dust or loose connection, it may cause an electrical shock or fire.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation may cause the equipment to fall, resulting in injury.	For unitary type only 
Be sure to install the product securely in the installation frame mounted on the window frame. If the unit is not securely mounted, it may fall and cause injury.	For unitary type only 
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If the combustible gas leaks and remains around the unit, it may cause a fire.	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections may cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame may cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding may cause an electrical shock.	

 Caution	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 MΩ or higher. Faulty insulation may cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage may cause the water to enter the room and wet the furniture and floor.	
Do not tilt the unit when removing it. The water inside the unit may spill and wet the furniture and floor.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water may enter the room and wet the furniture and floor.	For unitary type only 

1.2 Used Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

Part 1

List of Functions

1. List of Functions	2
1.1 R-410A Models.....	2
1.2 R-22 Models	5

1. List of Functions

1.1 R-410A Models

Category	Functions	FTKS25/35DVM RKS25/35DAVM	Category	Functions	FTKS25/35DVM RKS25/35DAVM
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter	—
	Operation Limit for Cooling (°CDB)	10 ~46		Photocatalytic Deodorizing Filter	—
	Operation Limit for Heating (°CWB)	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—
PAM Control	○	Titanium Apatite Photocatalytic Air-Purifying Filter		○	
Compressor	Oval Scroll Compressor	—		Mold Proof Air Filter	○
	Swing Compressor	○		Wipe-clean Flat Panel	○
	Rotary Compressor	—		Washable Grille	—
	Reluctance DC Motor	○		Mold Proof Operation	○
Comfortable Airflow	Power-Airflow Flap	—		Heating Dry Operation	—
	Power-Airflow Dual Flaps	○		Good-Sleep Cooling Operation	—
	Power-Airflow Diffuser	—	Timer	24-Hour On/Off Timer	○
	Wide-Angle Louvers	○		Night Set Mode	○
	Vertical Auto-Swing (Up and Down)	○	Worry Free “Reliability & Durability”	Auto-Restart (after Power Failure)	○
	Horizontal Auto-Swing (Right and Left)	—		Self-Diagnosis (Digital, LED) Display	○
	3-D Airflow	—		Wiring Error Check	—
	Comfort Airflow Mode	—	Flexibility	Anticorrosion Treatment of Outdoor Heat Exchanger	○
3-Step Airflow (H/P Only)	—	Multi-Split / Split Type Compatible Indoor Unit		○	
Comfort Control	Auto Fan Speed	○		Flexible Voltage Correspondence	○
	Indoor Unit Quiet Operation	○		High Ceiling Application	—
	Night Quiet Mode (Automatic)	—		Chargeless	10m
	Outdoor Unit Quiet Operation (Manual)	○		Either Side Drain (Right or Left)	○
	INTELLIGENT EYE	○		Power Selection	—
	Quick Warming Function	—	Remote Control	5-Rooms Centralized Controller (Option)	○
	Hot-Start Function	—		Remote Control Adaptor (Normal Open-Pulse Contact) (Option)	○
Automatic Defrosting	—	Remote Control Adaptor (Normal Open Contact) (Option)	○		
Operation	Automatic Operation	—	DIII-NET Compatible (Adaptor) (Option)	○	
	Programme Dry Function	○	Remote Controller	Wireless	○
	Fan Only	○		Wired	—
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—			
	Inverter POWERFUL Operation	○			
	Priority-Room Setting	—			
	Cooling / Heating Mode Lock	—			
	HOME LEAVE Operation	—			
	ECONO Mode	○			
	Indoor Unit On/Off Switch	○			
	Signal Reception Indicator	○			
	Temperature Display	—			
Another Room Operation	—				

Note: ○ : Holding Functions

— : No Functions

Category	Functions	FTKS25/35EVMA FKS25/35EBVMA	FTXS25/35EVMA FXS25/35EBVMA	Category	Functions	FTKS25/35EVMA FKS25/35EBVMA	FTXS25/35EVMA FXS25/35EBVMA	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	10 ~46	10 ~46		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	-10 ~20		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	○	○		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○	
Compressor	Oval Scroll Compressor	—	—	Mold Proof Air Filter	○	○		
	Swing Compressor	○	○	Wipe-clean Flat Panel	○	○		
	Rotary Compressor	—	—	Washable Grille	—	—		
	Reluctance DC Motor	○	○	Mold Proof Operation	○	○		
Comfortable Airflow	Power-Airflow Flap	—	—	Heating Dry Operation	—	—		
	Power-Airflow Dual Flaps	○	○	Good-Sleep Cooling Operation	—	—		
	Power-Airflow Diffuser	—	—	Timer	24-Hour On/Off Timer	○	○	
	Wide-Angle Louvers	○	○		Night Set Mode	○	○	
	Vertical Auto-Swing (Up and Down)	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	
	Horizontal Auto-Swing (Right and Left)	—	—		Self-Diagnosis (Digital, LED) Display	○	○	
	3-D Airflow	—	—		Wiring Error Check	—	—	
	Comfort Airflow Mode	—	—		Anticorrosion Treatment of Outdoor Heat Exchanger	○	○	
3-Step Airflow (H/P Only)	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○		
Comfort Control	Auto Fan Speed	○		○	Flexible Voltage Correspondence	○	○	
	Indoor Unit Quiet Operation	○		○	High Ceiling Application	—	—	
	Night Quiet Mode (Automatic)	—		—	Chargeless	10m	10m	
	Outdoor Unit Quiet Operation (Manual)	○		○	Either Side Drain (Right or Left)	○	○	
	INTELLIGENT EYE	○		○	Power Selection	—	—	
	Quick Warming Function	—		○	Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Hot-Start Function	—		○		Remote Control Adaptor (Normal Open-Pulse Contact) (Option)	○	○
Automatic Defrosting	—	○	Remote Control Adaptor (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	—	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○	
	Programme Dry Function	○	○		Wireless	○	○	
	Fan Only	○	○		Wired	—	—	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—					
	Inverter POWERFUL Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Mode	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
	Temperature Display	—	—					
Another Room Operation	—	—						

Note: ○ : Holding Functions

— : No Functions

Category	Functions	FTYN25/35DV1A RYN25/35DAV1A	Category	Functions	FTYN25/35DV1A RYN25/35DAV1A	
Basic Function	Inverter (with Inverter Power Control)	—	Health & Clean	Air Purifying Filter	—	
	Operation Limit for Cooling (°CDB)	10 ~46		Photocatalytic Deodorizing Filter	—	
	Operation Limit for Heating (°CWB)	-10 ~20		Air Purifying Filter with Photocatalytic Deodorizing Function	—	
	PAM Control	○		Titanium Apatite Photocatalytic Air-Purifying Filter	○	
Compressor	Oval Scroll Compressor	—	Longlife Filter	—		
	Swing Compressor	○	Mold Proof Air Filter	○		
	Rotary Compressor	—	Wipe-clean Flat Panel	○		
	Reluctance DC Motor	○	Washable Grille	—		
Comfortable Airflow	Power-Airflow Flap	—	Mold Proof Operation	—		
	Power-Airflow Dual Flaps	○	Heating Dry Operation	—		
	Power-Airflow Diffuser	—	Good-Sleep Cooling Operation	—		
	Wide-Angle Louvers	○	Timer	24-Hour On/Off Timer	○	
	Vertical Auto-Swing (Up and Down)	○		Night Set Mode	○	
	Horizontal Auto-Swing (Right and Left)	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	
	3-D Airflow	—		Self-Diagnosis (Digital, LED) Display	○	
	Comfort Airflow Mode	—		Wiring Error Check	—	
3-Step Airflow (H/P Only)	—	Anticorrosion Treatment of Outdoor Heat Exchanger		○		
Comfort Control	Auto Fan Speed	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	
	Indoor Unit Quiet Operation	—		Flexible Voltage Correspondence	—	
	Night Quiet Mode (Automatic)	—		Chargeless	10m	
	Outdoor Unit Quiet Operation (Manual)	—		Either Side Drain (Right or Left)	○	
	INTELLIGENT EYE	—		Power Selection	—	
	Quick Warming Function	○		Remote Control	5-Rooms Centralized Controller (Option)	○
	Hot-Start Function	○			Remote Control Adaptor (Normal Open-Pulse Contact) (Option)	○
Automatic Defrosting	○	Remote Control Adaptor (Normal Open Contact) (Option)	○			
Operation	Automatic Operation	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	
	Programme Dry Function	○		Wireless	○	
	Fan Only	○		Wired	—	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	○				
	Inverter POWERFUL Operation	—				
	Priority-Room Setting	—				
	Cooling / Heating Mode Lock	—				
	HOME LEAVE Operation	—				
	ECONO Mode	—				
	Indoor Unit On/Off Switch	○				
	Signal Reception Indicator	○				
Temperature Display	—					
Another Room Operation	—					

Note: ○ : Holding Functions
 — : No Functions

1.2 R-22 Models

Category	Functions	FTKD25/35DVM RKD25/35DAVM	Category	Functions	FTKD25/35DVM RKD25/35DAVM
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air Purifying Filter	○
	Operation Limit for Cooling (°C)	10 ~46		Photocatalytic Deodorizing Filter	○
	Operation Limit for Heating (°C)	—		Air Purifying Filter with Photocatalytic Deodorizing Function	—
	PAM Control	○		Titanium Apatite Photocatalytic Air-Purifying Filter	—
Compressor	Oval Scroll Compressor	—	Longlife Filter	—	
	Swing Compressor	○	Mold Proof Air Filter	○	
	Rotary Compressor	—	Wipe-clean Flat Panel	○	
	Reluctance DC Motor	○	Washable Grille	—	
Comfortable Airflow	Power-Airflow Flap	—	Mold Proof Operation	○	
	Power-Airflow Dual Flaps	○	Heating Dry Operation	—	
	Power-Airflow Diffuser	—	Good-Sleep Cooling Operation	—	
	Wide-Angle Louvers	○	Timer	24-Hour On/Off Timer	○
	Vertical Auto-Swing (Up and Down)	○		Night Set Mode	○
	Horizontal Auto-Swing (Right and Left)	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○
	3-D Airflow	—		Self-Diagnosis (Digital, LED) Display	○
	Comfort Airflow Mode	—		Wiring Error Check	—
	Comfort Control	3-Step Airflow (H/P Only)	—	Anticorrosion Treatment of Outdoor Heat Exchanger	○
Auto Fan Speed		○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○
Indoor Unit Quiet Operation		○		Flexible Voltage Correspondence	○
Night Quiet Mode (Automatic)		—		High Ceiling Application	—
Outdoor Unit Quiet Operation (Manual)		○		Chargeless	10m
INTELLIGENT EYE		○		Either Side Drain (Right or Left)	○
Quick Warming Function		—		Power Selection	—
Hot-Start Function		—		Remote Control	5-Rooms Centralized Controller (Option)
Automatic Defrosting	—	Remote Control Adaptor (Normal Open-Pulse Contact) (Option)			○
		Remote Control Adaptor (Normal Open Contact) (Option)	○		
Operation	Automatic Operation	—	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○
	Programme Dry Function	○		Wireless	○
	Fan Only	○		Wired	—
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—			
	Inverter POWERFUL Operation	○			
	Priority-Room Setting	—			
	Cooling / Heating Mode Lock	—			
	HOME LEAVE Operation	—			
	ECONO Mode	○			
	Indoor Unit On/Off Switch	○			
	Signal Reception Indicator	○			
	Temperature Display	—			
Another Room Operation	—				

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTKD25/35DVMA RKD25/35DAVMA	FTXD25/35DVMA RXD25/35DAVMA	Category	Functions	FTKD25/35DVMA RKD25/35DAVMA	FTXD25/35DVMA RXD25/35DAVMA	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter	○	○	
	Operation Limit for Cooling (°C)	10 ~46	10 ~46		Photocatalytic Deodorizing Filter	○	○	
	Operation Limit for Heating (°C)	—	-10 ~20		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	○	○		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—	
Compressor	Oval Scroll Compressor	—	—	Longlife Filter	—	—		
	Swing Compressor	○	○	Mold Proof Air Filter	○	○		
	Rotary Compressor	—	—	Wipe-clean Flat Panel	○	○		
	Reluctance DC Motor	○	○	Washable Grille	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Mold Proof Operation	○	○		
	Power-Airflow Dual Flaps	○	○	Heating Dry Operation	—	—		
	Power-Airflow Diffuser	—	—	Good-Sleep Cooling Operation	—	—		
	Wide-Angle Louvers	○	○	Timer	24-Hour On/Off Timer	○	○	
	Vertical Auto-Swing (Up and Down)	○	○		Night Set Mode	○	○	
	Horizontal Auto-Swing (Right and Left)	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	
	3-D Airflow	—	—		Self-Diagnosis (Digital, LED) Display	○	○	
	Comfort Airflow Mode	—	—		Wiring Error Check	—	—	
	3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger	○	○		
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	—	
	Indoor Unit Quiet Operation	○	○		Flexible Voltage Correspondence	○	○	
	Night Quiet Mode (Automatic)	—	—		High Ceiling Application	—	—	
	Outdoor Unit Quiet Operation (Manual)	○	○		Chargeless	10m	10m	
	INTELLIGENT EYE	○	○		Either Side Drain (Right or Left)	○	○	
	Quick Warming Function	—	○		Power Selection	—	—	
	Hot-Start Function	—	○		Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Automatic Defrosting	—	○			Remote Control Adaptor (Normal Open-Pulse Contact) (Option)	○	○
			Remote Control Adaptor (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	—	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○	
	Programme Dry Function	○	○		Wireless	○	○	
	Fan Only	○	○		Wired	—	—	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—					
	Inverter POWERFUL Operation	○	○					
	Priority-Room Setting	—	—					
	Cooling / Heating Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Mode	○	○					
	Indoor Unit On/Off Switch	○	○					
	Signal Reception Indicator	○	○					
Temperature Display	—	—						
Another Room Operation	—	—						

Note: ○ : Holding Functions

— : No Functions

Category	Functions	FTKD25/35DV2Z RKD25/35DAV2Z	FTXD25/35DV2Z RXD25/35DAV2Z	Category	Functions	FTKD25/35DV2Z RKD25/35DAV2Z	FTXD25/35DV2Z RXD25/35DAV2Z
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air Purifying Filter	○	○
	Operation Limit for Cooling (°C)	10 ~46	10 ~46		Photocatalytic Deodorizing Filter	○	○
	Operation Limit for Heating (°C)	—	-10 ~20		Air Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	○	○		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—
Compressor	Oval Scroll Compressor	—	—	Longlife Filter	—	—	
	Swing Compressor	○	○	Mold Proof Air Filter	○	○	
	Rotary Compressor	—	—	Wipe-clean Flat Panel	○	○	
	Reluctance DC Motor	○	○	Washable Grille	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—	Mold Proof Operation	○	○	
	Power-Airflow Dual Flaps	○	○	Heating Dry Operation	—	—	
	Power-Airflow Diffuser	—	—	Good-Sleep Cooling Operation	—	—	
	Wide-Angle Louvers	○	○	Timer	24-Hour On/Off Timer	○	○
	Vertical Auto-Swing (Up and Down)	○	○		Night Set Mode	○	○
	Horizontal Auto-Swing (Right and Left)	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	3-D Airflow	—	—		Self-Diagnosis (Digital, LED) Display	○	○
	Comfort Airflow Mode	—	—		Wiring Error Check	—	—
	Comfort Control	3-Step Airflow (H/P Only)	—	—	Anticorrosion Treatment of Outdoor Heat Exchanger	○	○
Auto Fan Speed		○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	—	—
Indoor Unit Silent Operation		○	○		Flexible Voltage Correspondence	—	—
Night Quiet Mode (Automatic)		—	—		High Ceiling Application	—	—
Outdoor Unit Silent Operation (Manual)		○	○		Chargeless	10m	10m
INTELLIGENT EYE		○	○		Either Side Drain (Right or Left)	○	○
Quick Warming Function		—	○		Power Selection	—	—
Hot-Start Function		—	○		Remote Control	5-Rooms Centralized Controller (Option)	○
Automatic Defrosting	—	○	Remote Control Adaptor (Normal Open-Pulse Contact) (Option)			○	○
			Remote Control Adaptor (Normal Open Contact) (Option)	○		○	
Operation	Automatic Operation	—	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○
	Programme Dry Function	○	○		Wireless	○	○
	Fan Only	○	○		Wired	—	—
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	○	○				
	Priority-Room Setting	—	—				
	Cooling / Heating Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Mode	○	○				
	Indoor Unit On/Off Switch	○	○				
	Signal Reception Indicator	○	○				
Temperature Display	—	—					
Another Room Operation	—	—					

Note: ○ : Holding Functions
— : No Functions

Part 2 Specifications

1. Specifications	10
1.1 Cooling Only	10
1.2 Heat Pump	15

1. Specifications

1.1 Cooling Only

1.1.1 R-410A Models

50Hz 220-230-240V / 60Hz 220-230V

Models	Indoor Units		FTKS25DVM		FTKS35DVM	
	Outdoor Units		RKS25DAVM		RKS35DAVM	
Capacity Rated (Min.~Max.)		kW	2.5 (1.2~3.2)		3.5 (1.4~4.0)	
		Btu/h	8,500 (4,050~10,900)		11,900 (4,750~13,650)	
		kcal/h	2,150 (1,030~2,750)		3,010 (1,200~3,440)	
Moisture Removal		L/h	1.2		1.9	
Running Current (Rated)		A	4.0-3.9-3.7 / 4.0-3.9		5.0-4.8-4.6 / 5.0-4.8	
Power Consumption Rated (Min.~Max.)		W	700 (295~1,050)		1,035 (300~1,400)	
Power Factor		%	79.5-78.0-78.8 / 79.5-78.0		94.1-93.8-93.8 / 94.1-93.8	
COP Rated (Min.~Max.)		W/W	3.57 (4.07~3.05)		3.38 (4.67~2.86)	
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ18.0		φ18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length		m	25		25	
Max. Interunit Height Difference		m	15		15	
Chargeless		m	10		10	
Amount of Additional Charge of Refrigerant		g/m	20		20	
Indoor Units			FTKS25DVM		FTKS35DVM	
Front Panel Color			White		White	
Airflow Rate	m³/min (cfm)	H	8.7 (307)		8.9 (314)	
		M	6.7 (237)		6.9 (242)	
		L	4.7 (166)		4.8 (169)	
		SL	3.9 (138)		4.0 (141)	
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.17-0.16-0.15 / 0.17-0.16		0.19-0.18-0.17 / 0.19-0.18	
Power Consumption (Rated)		W	35-35-35 / 35-35		40-40-40 / 40-40	
Power Factor		%	93.6-95.1-97.2 / 93.6-95.1		95.7-96.6-98.0 / 95.7-96.6	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)		mm	283x800x195		283x800x195	
Packaged Dimensions (HxWxD)		mm	265x855x340		265x855x340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/L/SL	dBA	37 / 25 / 22		39 / 26 / 23	
Outdoor Units			RKS25DAVM		RKS35DAVM	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23NXD		1YC23NXD	
	Motor Output	W	600		600	
Refrigerant Oil	Type		FVC50K		FVC50K	
	Charge	L	0.375		0.375	
Refrigerant	Type		R410A		R410A	
	Charge	kg	0.80		1	
Airflow Rate	m³/min (cfm)	H	36.2 (1,278)		33.5 (1,183)	
		L	25.7 (907)		23.4 (826)	
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)		A	3.83-3.74-3.55 / 3.83-3.74		4.81-4.62-4.43 / 4.81-4.62	
Power Consumption (Rated)		W	665-665-665 / 665-665		995-995-995 / 995-995	
Power Factor		%	78.9-77.3-78.1 / 78.9-77.3		94.0-93.6-93.6 / 94.0-93.6	
Starting Current		A	4.0		5.0	
Dimensions (HxWxD)		mm	550x765x285		550x765x285	
Packaged Dimensions (HxWxD)		mm	589x882x363		589x882x363	
Weight		kg	32		34	
Gross Weight		kg	37		40	
Operation Sound	H / L	dBA	46 / 43		47 / 44	
Drawing No.			3D058954		3D058976	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	5m

Conversion Formulae
kcal/h=kWx860 Btu/h=kWx3414 cfm=m³/minx35.3

50Hz 220-230-240V / 60Hz 220-230V

Models	Indoor Units		FTKS25EVMA		FTKS35EVMA	
	Outdoor Units		RKS25EBVMA		RKS35EBVMA	
Capacity Rated (Min.~Max.)		kW	2.5 (1.2~3.0)		3.5 (1.2~3.8)	
		Btu/h	8,500 (4,100~10,200)		11,900 (4,100~12,950)	
		kcal/h	2,150 (1,030~2,580)		3,010 (1,030~3,260)	
Moisture Removal		L/h	1.2		1.9	
Running Current (Rated)		A	3.5-3.3-3.2 / 3.5-3.3		4.9-4.7-4.5 / 4.9-4.7	
Power Consumption (Rated)		W	600 (300~800)		1,020 (300~1,200)	
Power Factor		%	77.9-79.1-78.1 / 77.9-79.1		94.6-94.4-94.4 / 94.6-94.4	
COP (Rated)		W/W	4.17 (4.00~3.75)		3.43 (4.00~3.17)	
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length		m	20		20	
Max. Interunit Height Difference		m	15		15	
Chargeless		m	10		10	
Amount of Additional Charge of Refrigerant		g/m	20		20	
Indoor Units			FTKS25EVMA		FTKS35EVMA	
Front Panel Color			White		White	
Airflow Rate	m³/min (cfm)	H	8.7 (307)		8.9 (314)	
		M	6.7 (237)		6.9 (244)	
		L	4.7 (166)		4.8 (169)	
		SL	3.9 (138)		4.0 (141)	
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.17-0.16-0.15 / 0.17-0.16		0.19-0.18-0.17 / 0.19-0.18	
Power Consumption (Rated)		W	35-35-35 / 35-35		40-40-40 / 40-40	
Power Factor		%	93.6-95.1-97.2 / 93.6-95.1		95.7-96.6-98.0 / 95.7-96.6	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)		mm	283x800x195		283x800x195	
Packaged Dimensions (HxWxD)		mm	265x855x340		265x855x340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/M/L/SL	dBA	37/31/25/22		38/32/26/23	
Outdoor Units			RKS25EBVMA		RKS35EBVMA	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23NXD		1YC23NXD	
	Motor Output	W	600		600	
Refrigerant Oil	Type		FVC50K		FVC50K	
	Charge	L	0.375		0.375	
Refrigerant	Type		R-410A		R-410A	
	Charge	kg	1.0		1.0	
Airflow Rate	m³/min (cfm)	H	33.5 (1,183)		33.5 (1,183)	
		L	23.4 (826)		23.4 (826)	
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)		A	3.33-3.14-3.05 / 3.33-3.14		4.71-4.52-4.33 / 4.71-4.52	
Power Consumption (Rated)		W	565-565-565 / 565-565		980-980-980 / 980-980	
Power Factor		%	77.1-78.2-77.2 / 77.1-78.2		94.6-94.3-94.3 / 94.6-94.3	
Starting Current		A	3.5		4.9	
Dimensions (HxWxD)		mm	550x765x285		550x765x285	
Packaged Dimensions (HxWxD)		mm	589x882x363		589x882x363	
Weight		kg	34		34	
Gross Weight		kg	40		40	
Operation Sound	H/L	dBA	46/43		47/44	
Sound Power (H)		dBA	61		62	
Drawing No.			3D058977		3D058978	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formulae
kcal/h=kWx860 Btu/h=kWx3414 cfm=m³/minx35.3

1.1.2 R-22 Models

50Hz 220-230-240V / 60Hz 220-230V

Models	Indoor Units		FTKD25DVM		FTKD35DVM	
	Outdoor Units		RKD25DAVM		RKD35DAVM	
Capacity Rated (Min.-Max.)		kW	2.5 (1.2-3.2)		3.5 (1.4-4.0)	
		Btu/h	8,500 (4,050-10,900)		11,900 (4,750-13,650)	
		kcal/h	2,150 (1,030-2,750)		3,010 (1,200-3,440)	
Moisture Removal		L/h	1.2		1.9	
Running Current (Rated)		A	4.2-4.0-3.8 / 4.2-4.0		5.0-4.7-4.5 / 5.0-4.7	
Power Consumption Rated (Min.-Max.)		W	725 (295-1,100)		1,035 (305-1,450)	
Power Factor		%	78.5-78.8-79.5 / 78.5-78.8		94.1-95.7-95.8 / 94.1-95.7	
COP (Rated)		W/W	3.45 (4.07-2.91)		3.38 (4.59-2.76)	
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 12.7	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length		m	25		25	
Max. Interunit Height Difference		m	15		15	
Chargeless		m	10		10	
Amount of Additional Charge of Refrigerant		g/m	20		20	
Indoor Unit			FTKD25DVM		FTKD35DVM	
Front Panel Color			White		White	
Airflow Rate	m³/min (cfm)	H	8.9 (314)		9.0 (318)	
		M	7.3 (256)		7.4 (259)	
		L	5.6 (198)		5.7 (201)	
		SL	4.8 (169)		4.9 (173)	
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	18		18	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.17-0.16-0.15 / 0.19-0.18		0.19-0.18-0.17 / 0.21-0.20	
Power Consumption (Rated)		W	35-35-35 / 40-40		40-40-40 / 45-45	
Power Factor		%	93.6-95.1-97.2 / 95.7-96.6		95.7-96.6-98.0 / 97.4-97.8	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)		mm	283x800x195		283x800x195	
Packaged Dimensions (WxDxH)		mm	265x855x340		265x855x340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/L/SL	dBA	37 / 28 / 25		39 / 29 / 26	
Outdoor Unit			RKD25DAVM		RKD35DAVM	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23RXD		1YC23RXD	
	Motor Output	W	600		600	
Refrigerant Oil	Type		SE56P		SE56P	
	Charge	L	0.375		0.375	
Refrigerant	Type		R-22		R-22	
	Charge	Kg	0.9		1.2	
Airflow Rate	m³/min (cfm)	H	35.4 (1,250)		30.9 (1,091)	
		L	25 (883)		21.5 (759)	
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)		A	4.03-3.84-3.65 / 4.01-3.82		4.81-4.52-4.33 / 4.79-4.5	
Power Consumption (Rated)		W	690-690-690 / 685-685		995-995-995 / 990-990	
Power Factor		%	77.8-78.1-78.8 / 77.6-78.0		94.0-95.7-95.7 / 93.9-95.7	
Starting Current		A	4.2		5.0	
Dimensions (HxWxD)		mm	550x765x285		550x765x285	
Packaged Dimensions (WxDxH)		mm	589x882x363		589x882x363	
Weight		kg	32		34	
Gross Weight		kg	37		40	
Operation Sound	H/L	dBA	46 / 43		47 / 44	
Drawing No.			3D058989		3D058990	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	5m

Conversion Formulae
kcal/h=kWx860 Btu/h=kWx3414 cfm=m³/minx35.3

50Hz 220-230-240V / 60Hz 220-230V

Models	Indoor Units		FTKD25DVMA		FTKD35DVMA	
	Outdoor Units		RKD25DAVMA		RKD35DAVMA	
Capacity Rated (Min.-Max.)		kW	2.5 (1.3~3.0)		3.5 (1.4~3.8)	
		Btu/h	8,500 (4,400~10,200)		11,900 (4,750~12,950)	
		kcal/h	2,150 (1,100~2,580)		3,010 (1,200~3,260)	
Moisture Removal		L/h	1.2		1.9	
Running Current (Rated)		A	4.2-4.0-3.8 / 4.2-4.0		5.4-5.2-5.0 / 5.4-5.2	
Power Consumption Rated (Min.-Max.)		W	725 (310~1,030)		1,130 (305~1,370)	
Power Factor		%	78.5-78.8-79.5 / 78.5-78.8		95.1-94.5-94.2 / 95.1-94.5	
COP (Rated)		W/W	3.45 (4.19~2.91)		3.10 (4.59~2.77)	
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 12.7	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length		m	20		20	
Max. Interunit Height Difference		m	15		15	
Chargeless		m	10		10	
Amount of Additional Charge of Refrigerant		g/m	20		20	
Indoor Unit			FTKD25DVMA		FTKD35DVMA	
Front Panel Color			White		White	
Airflow Rate	m ³ /min (cfm)	H	8.9 (314)		9.0 (318)	
		M	7.3 (258)		7.4 (261)	
		L	5.6 (198)		5.7 (201)	
		SL	4.8 (169)		4.9 (173)	
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	18		18	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.17-0.16-0.15 / 0.19-0.18		0.19-0.18-0.17 / 0.21-0.20	
Power Consumption (Rated)		W	35-35-35 / 40-40		40-40-40 / 45-45	
Power Factor		%	93.6-95.1-97.2 / 95.7-96.6		95.7-96.6-98.0 / 97.4-97.8	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)		mm	283x800x195		283x800x195	
Packaged Dimensions (WxDxH)		mm	265x855x340		265x855x340	
Weight		kg	9		9	
Gross Weight		kg	12		12	
Operation Sound	H/L/SL	dBA	37 / 28 / 25		38 / 29 / 26	
Outdoor Unit			RKD25DAVMA		RKD35DAVMA	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23RXD		1YC23RXD	
	Motor Output	W	600		600	
Refrigerant Oil	Type		SE56P		SE56P	
	Charge	L	0.375		0.375	
Refrigerant	Type		R-22		R-22	
	Charge	kg	0.9		1.2	
Airflow Rate	m ³ /min (cfm)	H	35.4 (1,250)		30.9 (1,091)	
		L	25.0 (883)		21.5 (759)	
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)		A	4.03-3.84-3.65 / 4.01-3.82		5.21-5.02-4.83 / 5.19-5.0	
Power Consumption (Rated)		W	690-690-690 / 685-685		1,090-1,090-1,090 / 1,085-1,085	
Power Factor		%	77.8-78.1-78.8 / 77.6-78.0		95.1-94.4-94.0 / 95.0-94.3	
Starting Current		A	4.2		5.2	
Dimensions (HxWxD)		mm	550x765x285		550x765x285	
Packaged Dimensions (WxDxH)		mm	589x882x363		589x882x363	
Weight		kg	32		34	
Gross Weight		kg	37		40	
Operation Sound	H/L	dBA	46 / 43		47 / 44	
Drawing No.			3D058991		3D058992	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formulae

kcal/h=kWx860
Btu/h=kWx3414
cfm=m³/minx35.3

50Hz 220V

Models	Indoor Units		FTKD25DV2Z	FTKD35DV2Z
	Outdoor Units		RKD25DAV2Z	RKD35DAV2Z
Capacity Rated (Min.-Max.)		kW	2.5 (1.3-3.0)	3.5 (1.4-3.8)
		Btu/h	8,500 (4,400-10,200)	11,900 (4,800-13,000)
		kcal/h	2,150 (1,120-2,580)	3,010 (1,200-3,270)
Moisture Removal		L/h	1.2	1.9
Running Current (Rated)		A	4.2	5.5
Power Consumption Rated (Min.-Max.)		W	730 (310-1,040)	1,140 (305-1,380)
Power Factor		%	79.0	94.2
COP Rated (Min.-Max.)		W/W	3.42 (4.19-2.88)	3.07 (4.59-2.75)
Piping Connections	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 12.7
	Drain	mm	φ 18.0	φ 18.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Max. Interunit Piping Length		m	20	20
Max. Interunit Height Difference		m	15	15
Chargeless		m	10	10
Amount of Additional Charge of Refrigerant		g/m	20	20
Indoor Unit			FTKD25DV2Z	FTKD35DV2Z
Front Panel Color			White	White
Airflow Rate	m ³ /min (cfm)	H	8.4 (297)	8.6 (304)
		M	6.7 (237)	6.9 (244)
		L	5.0 (177)	5.2 (184)
		SL	4.3 (152)	4.6 (162)
Fan	Type		Cross Flow Fan	Cross Flow Fan
	Motor Output	W	18	18
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.17	0.19
Power Consumption (Rated)		W	35	40
Power Factor		%	93.6	95.7
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (HxWxD)		mm	283x800x195	283x800x195
Packaged Dimensions (HxWxD)		mm	265x855x340	265x855x340
Weight		kg	9	9
Gross Weight		kg	12	12
Operation Sound	H/M/L/SL	dB(A)	38 / 33 / 28 / 25	39 / 34 / 29 / 26
Outdoor Unit			RKD25DAV2Z	RKD35DAV2Z
Casing Color			Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		1YC23RXD	1YC23RXD
	Motor Output	W	600	600
Refrigerant Oil	Type		SE56P	SE56P
	Charge	L	0.375	0.375
Refrigerant	Type		R-22	R-22
	Charge	Kg	0.9	1.2
Airflow Rate	m ³ /min (cfm)	H	35.4 (1,250)	30.9 (1,091)
		L	25.0 (883)	21.5 (759)
Fan	Type		Propeller	Propeller
	Motor Output	W	50	50
Running Current (Rated)		A	4.03	5.31
Power Consumption (Rated)		W	695	1,100
Power Factor		%	78.4	94.2
Starting Current		A	4.2	5.5
Dimensions (HxWxD)		mm	550x765x285	550x765x285
Packaged Dimensions (HxWxD)		mm	589x882x363	589x882x363
Weight		kg	32	34
Gross Weight		kg	37	40
Operation Sound	H/L	dB(A)	46 / 43	47 / 44
Drawing No.			3D058997	3D058998

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	7.5m

Conversion Formulae
kcal/h=kWx860 Btu/h=kWx3414 cfm=m ³ /minx35.3

1.2 Heat Pump

1.2.1 R-410A Models

50Hz 220-230-240V / 60Hz 220-230V

Models	Indoor Units		FTXS25EVMA		FTXS35EVMA	
	Outdoor Units		RXS25EBVMA		RXS35EBVMA	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min.~Max.)	kW		2.5 (1.2-3.0)	3.4 (1.2-4.5)	3.5 (1.2-3.8)	4.0 (1.2-5.0)
	Btu/h		8,500 (4,100-10,200)	11,600 (4,100-15,350)	11,900 (4,100-12,950)	13,600 (4,100-17,050)
	kcal/h		2,150 (1,030-2,580)	2,920 (1,030-3,870)	3,010 (1,030-3,260)	3,440 (1,030-4,300)
Moisture Removal	L/h		1.2	—	1.9	—
Running Current (Rated)	A		3.5-3.3-3.2 / 3.5-3.3	4.3-4.1-3.9 / 4.3-4.1	4.9-4.7-4.5 / 4.9-4.7	5.1-4.9-4.7 / 5.1-4.9
Power Consumption (Rated)	W		600 (300-800)	830 (290-1,340)	1,020 (300-1,200)	1,080 (290-1,550)
Power Factor	%		77.9-79.1-78.1 / 77.9-79.1	87.7-88.0-88.7 / 87.7-88.0	94.6-94.4-94.4 / 94.6-94.4	96.3-95.8-95.7 / 96.3-95.8
COP (Rated)	W/W		4.17 (4.00-3.75)	4.10 (4.14-3.36)	3.43 (4.00-3.17)	3.70 (4.14-3.23)
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	m		20		20	
Max. Interunit Height Difference	m		15		15	
Chargeless	m		10		10	
Amount of Additional Charge of Refrigerant	g/m		20		20	
Indoor Units			FTXS25EVMA		FTXS35EVMA	
Front Panel Color			White		White	
Airflow	m ³ /min (cfm)	H	8.7 (307)	9.4 (332)	8.9 (314)	9.7 (342)
		M	6.7 (237)	7.6 (268)	6.9 (242)	7.9 (277)
		L	4.7 (166)	5.8 (205)	4.8 (169)	6.0 (212)
		SL	3.9 (138)	5.0 (177)	4.0 (141)	5.2 (184)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.17-0.16-0.15 / 0.17-0.16	0.17-0.16-0.15 / 0.17-0.16	0.19-0.18-0.17 / 0.19-0.18	0.19-0.18-0.17 / 0.19-0.18
Power Consumption (Rated)	W		35-35-35 / 35-35	35-35-35 / 35-35	40-40-40 / 40-40	40-40-40 / 40-40
Power Factor	%		93.6-95.1-97.2 / 93.6-95.1	93.6-95.1-97.2 / 93.6-95.1	95.7-96.6-98.0 / 95.7-96.6	95.7-96.6-98.0 / 95.7-96.6
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)	mm		283x800x195		283x800x195	
Packaged Dimensions (HxWxD)	mm		265x855x340		265x855x340	
Weight	kg		9		9	
Gross Weight	kg		12		12	
Operation Sound	H/M/L/SL	dBA	37/31/25/22	37/33/28/25	38/32/26/23	38/34/29/26
Outdoor Units			RXS25EBVMA		RXS35EBVMA	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23NXD		1YC23NXD	
	Motor Output	W	600		600	
Refrigerant Oil	Type		FVC50K		FVC50K	
	Charge	L	0.375		0.375	
Refrigerant	Type		R-410A		R-410A	
	Charge	kg	1.0		1.0	
Airflow	m ³ /min (cfm)	H	33.5 (1,183)	30.2 (1,066)	33.5 (1,183)	30.2 (1,066)
		L	23.4 (826)	28.3 (999)	23.4 (826)	28.3 (999)
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)	A		3.33-3.14-3.05 / 3.33-3.14	4.13-3.94-3.75 / 4.13-3.94	4.71-4.52-4.33 / 4.71-4.52	4.91-4.72-4.53 / 4.91-4.72
Power Consumption (Rated)	W		565-565-565 / 565-565	795-795-795 / 795-795	980-980-980 / 980-980	1,040-1,040-1,040 / 1,040-1,040
Power Factor	%		77.1-78.2-77.2 / 77.1-78.2	87.5-87.7-88.3 / 87.5-87.7	94.6-94.3-94.3 / 94.6-94.3	96.3-95.8-95.7 / 96.3-95.8
Starting Current	A		4.3		5.1	
Dimensions (HxWxD)	mm		550x765x285		550x765x285	
Packaged Dimensions (HxWxD)	mm		589x882x363		589x882x363	
Weight	kg		34		34	
Gross Weight	kg		40		40	
Operation Sound	H/L	dBA	46/43	47/44	47/44	48/45
Sound Power (H)		dBA	—	62	—	63
Drawing No.			3D058979		3D058980	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor : 27°CDB/19°CWB Outdoor : 35°CDB/24°CWB	Indoor : 20°CDB Outdoor : 7°CDB/6°CWB	7.5m

Conversion Formulae
kcal/h=kWx860 Btu/h=kWx3414 cfm=m ³ /minx35.3

50Hz 220-230-240V

Model	Indoor Units		FTYN25DV1A		FTYN35DV1A	
	Outdoor Units		RYN25DAV1A		RYN35DAV1A	
			Cooling	Heating	Cooling	Heating
Capacity Rated	kW		2.5	3.4	3.5	4.2
	Btu/h		8,500	11,600	11,900	14,300
	kcal/h		2,150	2,920	3,010	3,610
Moisture Removal	L/h		1.2	—	1.9	—
Running Current (Rated)	A		4.0-3.8-3.7	4.5-4.3-4.1	5.3-5.1-4.9	5.8-5.5-5.3
Power Consumption Rated	W		695	930	1,110	1,225
Power Factor	%		79.0-79.5-78.3	93.9-94.0-94.5	95.2-94.6-94.4	96.0-96.8-96.3
EER (Cooling) / COP (Heating) Rated	W/W		3.60	3.66	3.15	3.43
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	m		20		20	
Max. Interunit Height Difference	m		15		15	
Chargeless	m		10		10	
Amount of Additional Charge of Refrigerant	g/m		20		20	
Indoor Unit			FTYN25DV1A		FTYN35DV1A	
Front Panel Color			White		White	
Airflow Rate	m³/min (cfm)	H	8.7 (307)	9.4 (332)	8.9 (314)	9.7 (342)
		M	6.7 (237)	7.6 (268)	6.9 (242)	7.9 (277)
		L	4.7 (166)	5.8 (205)	4.8 (169)	6.0 (212)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Auto		5 Steps, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.17-0.16-0.15	0.17-0.16-0.15	0.19-0.18-0.17	0.19-0.18-0.17
Power Consumption (Rated)	W		35	35	40	40
Power Factor	%		93.6-95.1-97.2	93.6-95.1-97.2	95.7-96.6-98.0	95.7-96.6-98.0
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)	mm		283x800x195		283x800x195	
Packaged Dimensions (HxWxD)	mm		265x855x340		265x855x340	
Weight	kg		9		9	
Gross Weight	kg		12		12	
Operation Sound	H/M/L	dBA	37/31/25	37/33/28	38/32/26	38/34/29
Outdoor Unit			RYN25DAV1A		RYN35DAV1A	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23NXD		1YC23NXD	
	Motor Output	W	600		600	
Refrigerant Oil	Model		FVC50K		FVC50K	
	Charge	L	0.375		0.375	
Refrigerant	Model		R-410A		R-410A	
	Charge	kg	0.8		1.0	
Airflow Rate (H/L)	m³/min		36.2/25.7	32.6/30.6	33.5/23.4	30.2/28.3
	cfm		1,278/907	1,151/1,080	1,183/826	1,066/999
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)	A		3.83-3.64-3.55	4.33-4.14-3.95	5.11-4.92-4.73	5.61-5.32-5.13
Power Consumption (Rated)	W		660	895	1,070	1,185
Power Factor	%		78.3-78.8-77.5	94.0-94.0-94.4	95.2-94.6-94.3	96.0-96.8-96.2
Starting Current	A		4.5		5.8	
Dimensions (HxWxD)	mm		550x765x285		550x765x285	
Packaged Dimensions (HxWxD)	mm		589x882x363		589x882x363	
Weight	kg		32		34	
Gross Weight	kg		37		40	
Operation Sound	H	dBA	46	47	47	48
Sound Power	H	dBA	61	62	62	63
Drawing No.			3D058995		3D058996	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formulae
kcal/h=kWx860 Btu/h=kWx3414 cfm=m³/minx35.3

1.2.2 R-22 Models

50Hz 220-230-240V / 60Hz 220-230V

Models	Indoor Units		FTXD25DVMA		FTXD35DVMA	
	Outdoor Units		RXD25DAVMA		RXD35DAVMA	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min.-Max.)	kW		2.5 (1.3~3.0)	3.4 (1.3~4.0)	3.5 (1.4~3.8)	4.2 (1.4~5.0)
	Btu/h		8,500 (4,400~10,200)	11,600 (4,400~13,650)	11,900 (4,750~12,950)	14,300 (4,750~17,050)
	kcal/h		2,150 (1,110~2,580)	2,920 (1,110~3,440)	3,010 (1,200~3,260)	3,610 (1,200~4,300)
Moisture Removal	L/h		1.2	—	1.9	—
Running Current (Rated)	A		4.2-4.0-3.8 / 4.2-4.0	5.1-4.9-4.7 / 5.1-4.9	5.4-5.2-5.0 / 5.4-5.2	6.2-5.9-5.7 / 6.2-5.9
Power Consumption Rated (Min.-Max.)	W		725 (310~1,030)	1,000 (310~1,220)	1,130 (305~1,370)	1,310 (330~1,580)
Power Factor	%		78.5-78.8-79.5 / 78.5-78.8	89.1-88.7-88.7 / 89.1-88.7	95.1-94.5-94.2 / 95.1-94.5	96.0-96.5-95.8 / 96.0-96.5
COP (Rated)	W/W		3.45 (4.19~2.91)	3.40 (4.19~3.28)	3.10 (4.59~2.77)	3.21 (4.24~3.16)
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 12.7	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	m		20		20	
Max. Interunit Height Difference	m		15		15	
Chargeless	m		10		10	
Amount of Additional Charge of Refrigerant	g/m		20		20	
Indoor Units			FTXD25DVMA		FTXD35DVMA	
Front Panel Color			White		White	
Airflow Rate	m ³ /min (cfm)	H	8.9 (314)	9.4 (332)	9.0 (318)	9.7 (342)
		M	7.3 (258)	7.6 (268)	7.4 (261)	7.9 (279)
		L	5.6 (198)	5.8 (205)	5.7 (201)	6.0 (212)
		SL	4.8 (169)	5.0 (177)	4.9 (173)	5.2 (184)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	18		18	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.17-0.16-0.15 / 0.19-0.18	0.17-0.16-0.15 / 0.19-0.18	0.19-0.18-0.17 / 0.21-0.20	0.19-0.18-0.17 / 0.21-0.20
Power Consumption (Rated)	W		35-35-35 / 40-40	35-35-35 / 40-40	40-40-40 / 45-45	40-40-40 / 45-45
Power Factor	%		93.6-95.1-97.2 / 95.7-96.6	93.6-95.1-97.2 / 95.7-96.6	95.7-96.6-98.0 / 97.4-97.8	95.7-96.6-98.0 / 97.4-97.8
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)	mm		283x800x195		283x800x195	
Packaged Dimensions (WxDxH)	mm		265x855x340		265x855x340	
Weight	kg		9		9	
Gross Weight	kg		12		12	
Operation Sound	H/L/SL	dBA	37 / 28 / 25	37 / 28 / 25	38 / 29 / 26	38 / 29 / 26
Outdoor Units			RXD25DAVMA		RXD35DAVMA	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23RXD		1YC23RXD	
Refrigerant Oil	Motor Output	W	600		600	
	Type		SE56P		SE56P	
Refrigerant	Charge	L	0.375		0.375	
	Type		R-22		R-22	
Airflow Rate	Charge	kg	0.9		1.2	
	m ³ /min (cfm)	H	35.4 (1,250)	31.9 (1,126)	30.9 (1,091)	27.8 (981)
Fan	L		25.0 (883)	29.9 (1,055)	21.5 (759)	26.0 (918)
	Type		Propeller		Propeller	
Running Current (Rated)	A		4.03-3.84-3.65 / 4.01-3.82	4.93-4.74-4.55 / 4.91-4.72	5.21-5.02-4.83 / 5.19-5.0	6.01-5.72-5.53 / 5.99-5.70
Power Consumption (Rated)	W		690-690-690 / 685-685	965-965-965 / 960-960	1,090-1,090-1,090 / 1,085-1,085	1,270-1,270-1,270 / 1,265-1,265
Power Factor	%		77.8-78.1-78.8 / 77.6-78.0	89.0-88.5-88.4 / 88.9-88.4	95.1-94.4-94.0 / 95.0-94.3	96.1-96.5-95.7 / 96.0-96.5
Starting Current	A		5.1		6.2	
Dimensions (HxWxD)	mm		550x765x285		550x765x285	
Packaged Dimensions (WxDxH)	mm		589x882x363		589x882x363	
Weight	kg		33		35	
Gross Weight	kg		38		41	
Operation Sound	H/L	dBA	46 / 43	47 / 44	47 / 44	48 / 45
Drawing No.			3D058993		3D058994	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formulae
kcal/h=kW×860 Btu/h=kW×3414 cfm=m ³ /min×35.3

50Hz 220V

Models	Indoor Units		FTXD25DV2Z		FTXD35DV2Z	
	Outdoor Units		RXD25DAV2Z		RXD35DAV2Z	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min.-Max.)	kW		2.5 (1.3-3.0)	3.4 (1.3-4.0)	3.5 (1.4-3.8)	4.2 (1.4-5.0)
	Btu/h		8,500 (4,400-10,200)	11,600 (4,400-13,600)	11,900 (4,800-13,000)	14,300 (4,800-17,100)
	kcal/h		2,150 (1,120-2,580)	2,920 (1,120-3,440)	3,010 (1,200-3,270)	3,610 (1,200-4,300)
Moisture Removal	L/h		1.2	—	1.9	—
Running Current (Rated)	A		4.2	5.2	5.5	6.2
Power Consumption Rated (Min.-Max.)	W		730 (310-1,040)	1,010 (310-1,230)	1,140 (305-1,380)	1,320 (330-1,590)
Power Factor	%		79.0	88.3	94.2	96.8
COP Rated (Min.-Max.)	W/W		3.42 (4.19-2.88)	3.37 (4.19-3.25)	3.07 (4.59-2.75)	3.18 (4.24-3.14)
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 12.7	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	m		20		20	
Max. Interunit Height Difference	m		15		15	
Chargeless	m		10		10	
Amount of Additional Charge of Refrigerant	g/m		20		20	
Indoor Units			FTXD25DV2Z		FTXD35DV2Z	
Front Panel Color			White		White	
Airflow Rate	m ³ /min (cfm)	H	8.4 (297)	9.0 (318)	8.6 (304)	9.3 (328)
		M	6.7 (237)	7.4 (261)	6.9 (244)	7.6 (268)
		L	5.0 (177)	5.8 (205)	5.2 (184)	6.0 (212)
		SL	4.3 (152)	4.9 (173)	4.6 (162)	5.2 (184)
Fan	Type		Cross Flow Fan		Cross Flow Fan	
	Motor Output	W	18		18	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.17	0.17	0.19	0.19
Power Consumption (Rated)	W		35	35	40	40
Power Factor	%		93.6	93.6	95.7	95.7
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (HxWxD)	mm		283x800x195		283x800x195	
Packaged Dimensions (HxWxD)	mm		265x855x340		265x855x340	
Weight	kg		9		9	
Gross Weight	kg		12		12	
Operation Sound	H/M/L/SL	dBA	38 / 33 / 28 / 25	38 / 33 / 28 / 25	39 / 34 / 29 / 26	39 / 34 / 29 / 26
Outdoor Units			RXD25DAV2Z		RXD35DAV2Z	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23RXD		1YC23RXD	
	Motor Output	W	600		600	
Refrigerant Oil	Type		SE56P		SE56P	
	Charge	L	0.375		0.375	
Refrigerant	Type		R-22		R-22	
	Charge	kg	0.9		1.2	
Airflow Rate	m ³ /min (cfm)	H	35.4 (1,250)	31.9 (1,126)	30.9 (1,091)	27.8 (981)
		L	25.0 (883)	29.9 (1,055)	21.5 (759)	26.0 (918)
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)	A		4.03	5.03	5.31	6.01
Power Consumption (Rated)	W		695	975	1,100	1,280
Power Factor	%		78.4	88.1	94.2	96.8
Starting Current	A		5.2		6.2	
Dimensions (HxWxD)	mm		550x765x285		550x765x285	
Packaged Dimensions (HxWxD)	mm		589x882x363		589x882x363	
Weight	kg		33		35	
Gross Weight	kg		38		41	
Operation Sound	H/L	dBA	46 / 43	47 / 44	47 / 44	48 / 45
Drawing No.			3D058999		3D059000	

Note: ■ The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB/19°CWB Outdoor ; 35°CDB/24°CWB	Indoor ; 20°CDB Outdoor ; 7°CDB/6°CWB	7.5m

Conversion Formulae
kcal/h=kWx860 Btu/h=kWx3414 cfm=m ³ /minx35.3

Part 3

Printed Circuit Board

Connector Wiring Diagram

1. Printed Circuit Board Connector Wiring Diagram.....	20
1.1 Indoor Unit.....	20
1.2 Outdoor Unit.....	26

1. Printed Circuit Board Connector Wiring Diagram

1.1 Indoor Unit

1.1.1 FTK(X)D 25/35 D

Connectors

PCB(1)(Control PCB)

- 1) **S1** Connector for AC fan motor
- 2) **S6** Connector for swing motor (horizontal blades)
- 3) **S7** Connector for AC fan motor (Hall IC)
- 4) **S21** Connector for centralized control (HA)
- 5) **S26** Connector for display PCB
- 6) **S28** Connector for signal receiver PCB
- 7) **S32** Connector for heat exchanger thermistor
- 8) **S35** Connector for INTELLIGENT EYE sensor PCB

PCB(2)(Signal Receiver PCB)

- 1) **S29** Connector for control PCB

PCB(3)(Display PCB)

- 1) **S27** Connector for control PCB

PCB(4)(INTELLIGENT EYE sensor PCB)

- 1) **S36** Connector for control PCB



Note:

Other designations

PCB(1)(Control PCB)

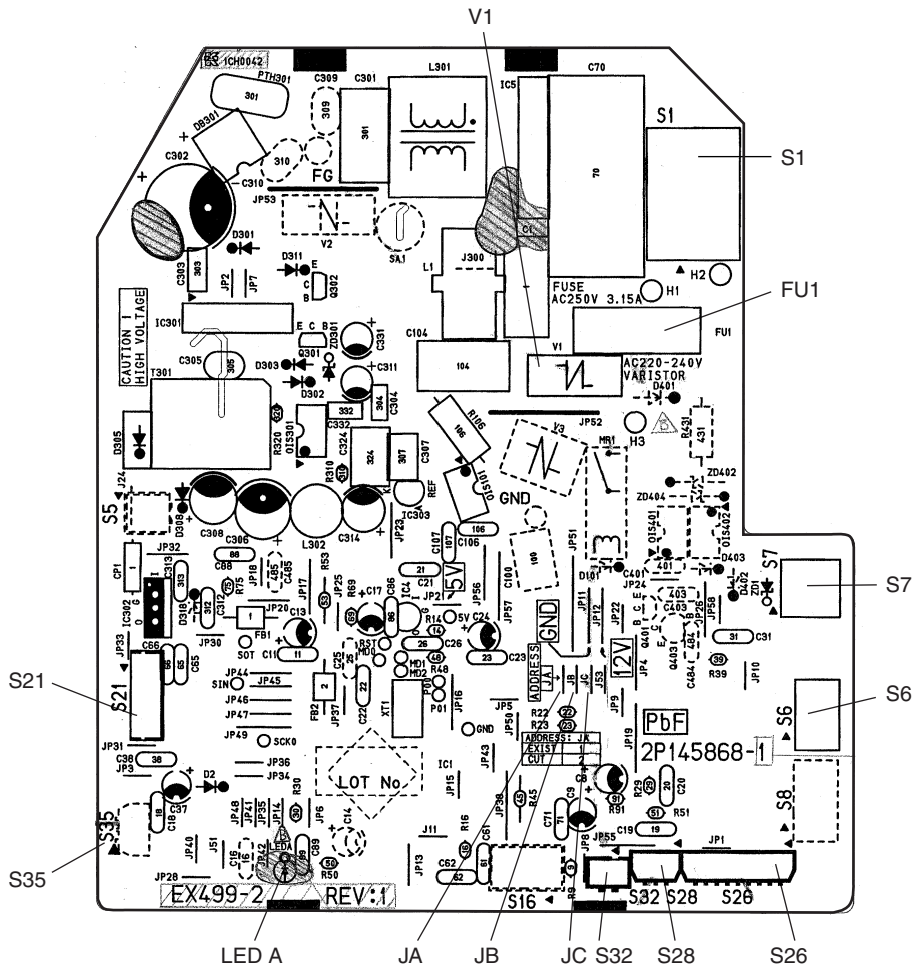
- 1) **V1** Varistor
- 2) **JA** Address setting jumper
- JB** Fan speed setting when compressor is OFF on thermostat
- JC** Power failure recovery function (auto-restart)
- * Refer to page 197 for detail.
- 3) **LED A** LED for service monitor (green)
- 4) **FU1** Fuse (3.15A)

PCB(3)(Display PCB)

- 1) **SW1** Forced operation ON / OFF switch
- 2) **LED1** LED for operation (green)
- 3) **LED2** LED for timer (yellow)
- 4) **LED3** LED for INTELLIGENT EYE (green)
- 5) **RTH1** Room temperature thermistor


PCB Detail

PCB(1): Control PCB




(R4779)

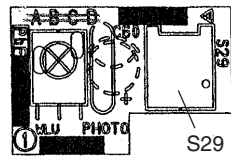PCB(2): Signal Receiver PCB




(R4289)

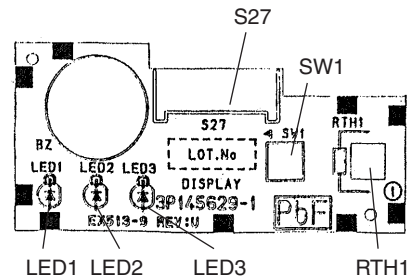PCB(3): Display PCB



(R4290)

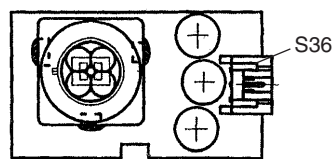PCB(4): INTELLIGENT EYE sensor PCB



(R4547)

1.1.2 FTKS 25/35 D, FTK(X)S 25/35 E

Connectors

PCB(1)(Control PCB)

- 1) **S1** Connector for fan motor
- 2) **S6** Connector for swing motor (horizontal blades)
- 3) **S21** Connector for [centralized control \(HA\)](#)
- 4) **S26** Connector for display PCB
- 5) **S28** Connector for signal receiver PCB
- 6) **S32** Connector for heat exchanger thermistor
- 7) **S35** Connector for INTELLIGENT EYE sensor PCB

PCB(2)(Signal Receiver PCB)

- 1) **S29** Connector for control PCB

PCB(3)(Display PCB)

- 1) **S27** Connector for control PCB

PCB(4)(INTELLIGENT EYE sensor PCB)

- 1) **S36** Connector for control PCB



Note:

Other designations

PCB(1)(Control PCB)

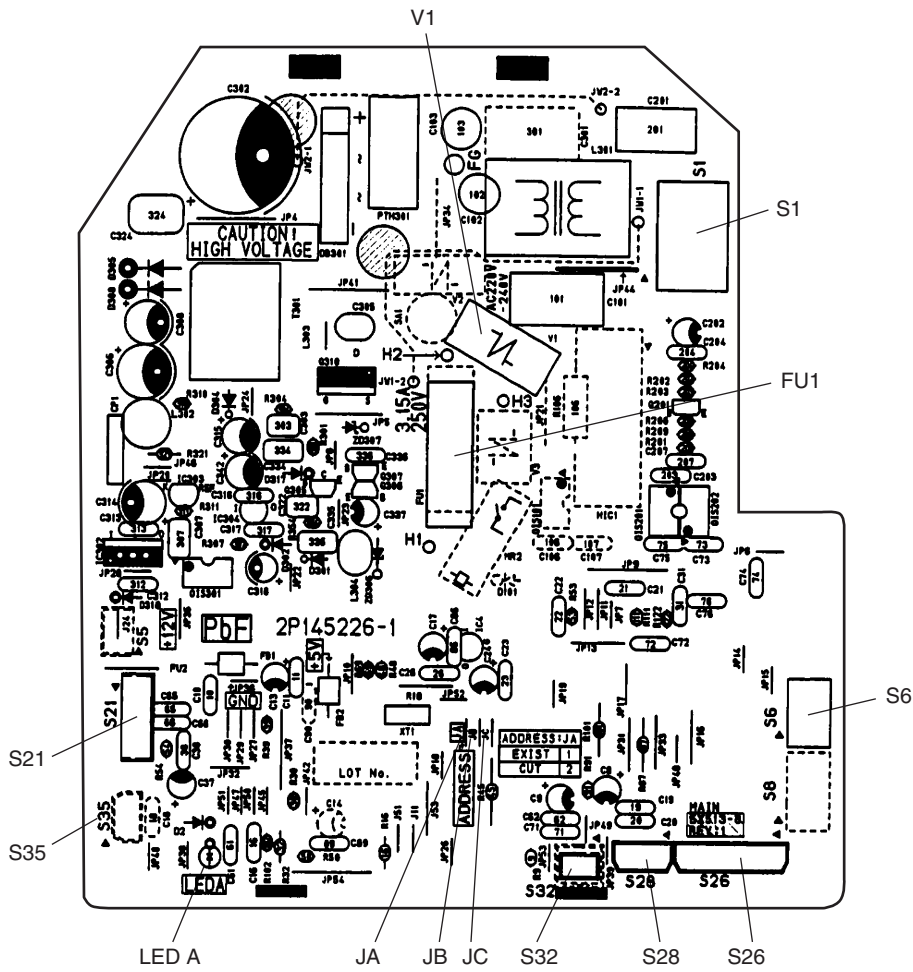
- 1) **V1** [Varistor](#)
- 2) **JA** [Address setting jumper](#)
- JB** [Fan speed setting](#) when compressor is OFF on thermostat
- JC** [Power failure recovery function \(auto-restart\)](#)
* Refer to page 197 for detail.
- 3) **LED A** LED for service monitor (green)
- 4) **FU1** [Fuse \(3.15A\)](#)

PCB(3)(Display PCB)

- 1) **SW1** [Forced operation ON / OFF switch](#)
- 2) **LED1** LED for operation (green)
- 3) **LED2** LED for timer (yellow)
- 4) **LED3** LED for INTELLIGENT EYE (green)
- 5) **RTH1** Room temperature thermistor


PCB Detail

PCB(1): Control PCB




(R4288)

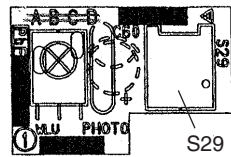PCB(2): Signal Receiver PCB




(R4289)

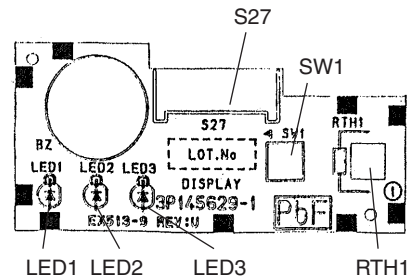PCB(3): Display PCB



(R4290)

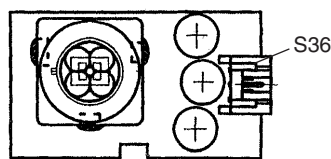PCB(4): INTELLIGENT EYE sensor PCB



(R4291)

1.1.3 FTYN 25/35 D

Connectors

PCB(1)(Control PCB)

- 1) **S1** Connector for fan DC motor
- 2) **S6** Connector for swing motor (horizontal blades)
- 3) **S21** Connector for **centralized control (HA)**
- 4) **S26** Connector for display PCB
- 5) **S28** Connector for signal receiver PCB
- 6) **S32** Connector for heat exchanger thermistor

PCB(2)(Signal Receiver PCB)

- 1) **S29** Connector for control PCB

PCB(3)(Display PCB)

- 1) **S27** Connector for control PCB



Note:

Other designations

PCB(1)(Control PCB)

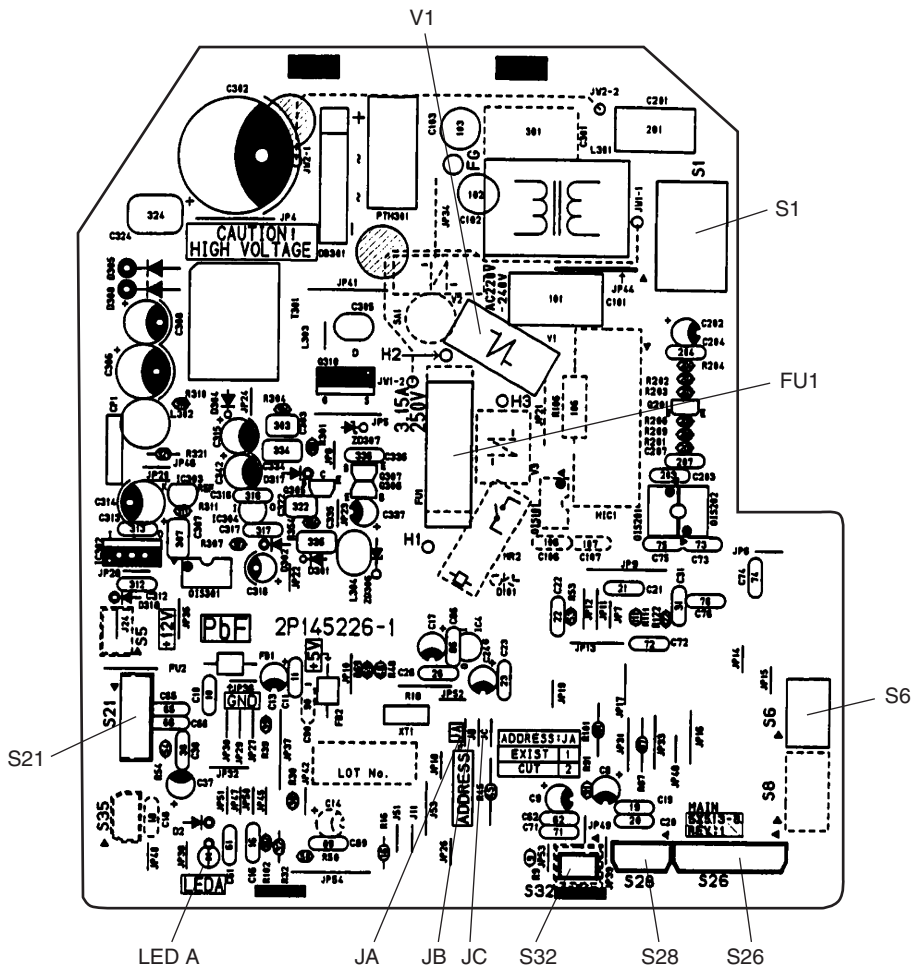
- 1) **V1** **Varistor**
- 2) **JA** **Address setting jumper**
- JB** **Fan speed setting** when compressor is OFF on thermostat
- JC** **Power failure recovery function (auto-restart)**
* Refer to page 197 for detail.
- 3) **LED A** LED for service monitor (green)
- 4) **FU1** **Fuse (3.15A)**

PCB(3)(Display PCB)

- 1) **SW1** **Forced operation ON / OFF switch**
- 2) **LED1** LED for operation (green)
- 3) **LED2** LED for timer (yellow)
- 4) **RTH1** Room temperature thermistor


PCB Detail

PCB(1): Control PCB




(R4828)

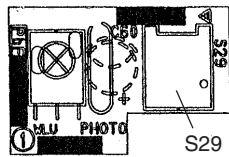PCB(2): Signal Receiver PCB



(R5183)

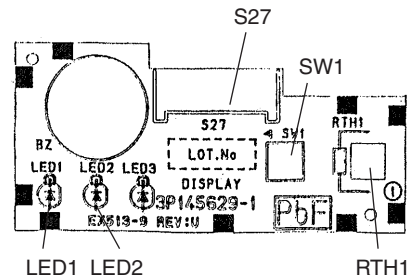PCB(3): Display PCB



(R4827)

1.2 Outdoor Unit

Connectors

PCB(1)(Filter PCB)

- 1) **S11** Connector for control PCB

PCB(2)(Control PCB)

- 1) **S10** Connector for filter PCB
 2) **S20** Connector for electronic expansion valve coil
 3) **S30** Connector for compressor motor
 4) **S40** Connector for overload protector
 5) **S70** Connector for fan motor
 6) **S80** Connector for four way valve coil
 7) **S90** Connector for thermistors
 (outdoor air, heat exchanger, discharge pipe)
 8) **HC3, HC4, HL3, HN3** Connector for filter PCB



Note:

Other designations

PCB(1)(Filter PCB)

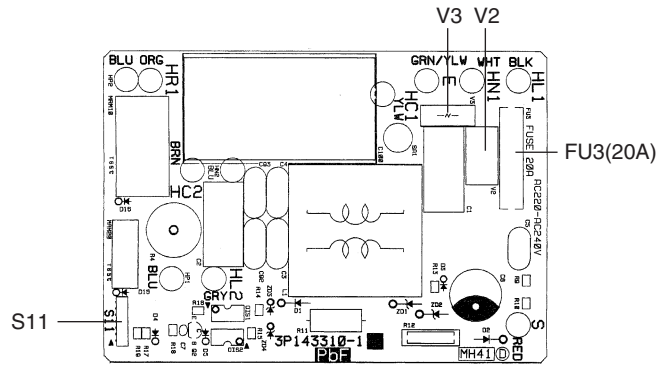
- 1) **FU3** Fuse (20A)
 2) **V2, V3** Varistor

PCB(2)(Control PCB)

- 1) **FU1, FU2** Fuse (3.15A)
 2) **LED A** Service monitor LED
 3) **V1** Varistor


PCB Detail

PCB(1): Filter PCB



(R4293)

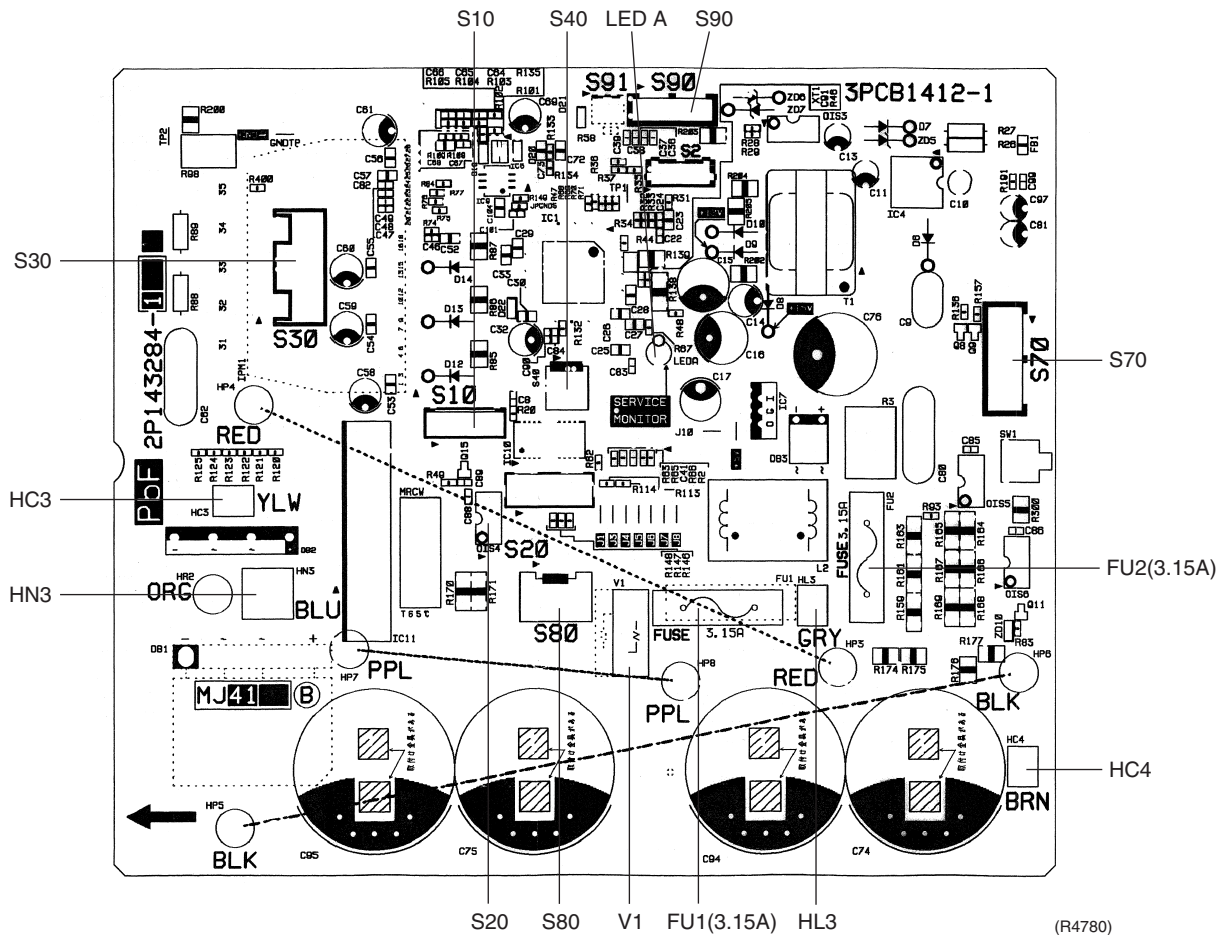PCB(2): Control PCB (outdoor unit)



(R4780)

Part 4

Function and Control

1. Main Functions.....	30
1.1 Frequency Principle.....	30
1.2 Airflow Direction Control.....	32
1.3 Fan Speed Control for Indoor Units.....	33
1.4 Programme Dry Function	34
1.5 Automatic Operation.....	35
1.6 Thermostat Control.....	36
1.7 NIGHT SET Mode	37
1.8 ECONO Mode	38
1.9 MOLD PROOF Operation	39
1.10 INTELLIGENT EYE	40
1.11 Inverter POWERFUL Operation	42
1.12 Other Functions.....	43
2. Function of Thermistor	44
2.1 Heat Pump Model.....	44
2.2 Cooling Only Model.....	45
3. Control Specification	46
3.1 Mode Hierarchy	46
3.2 Frequency Control.....	47
3.3 Controls at Mode Changing / Start-up.....	49
3.4 Discharge Pipe Temperature Control.....	50
3.5 Input Current Control.....	51
3.6 Freeze-up Protection Control	52
3.7 Heating Peak-cut Control	52
3.8 Fan Control.....	53
3.9 Liquid Compression Protection Function 2.....	53
3.10 Defrost Control	54
3.11 Electronic Expansion Valve Control	55
3.12 Malfunctions	58
3.13 Forced Operation Mode	59
3.14 Additional Function.....	59

1. Main Functions

i Note: See the list of functions for the functions applicable to different models.

1.1 Frequency Principle

Main Control Parameters

The compressor is frequency-controlled during normal operation. The target frequency is set by the following 2 parameters coming from the operating indoor unit:

- The load condition of the operating indoor unit
- The difference between the room temperature and the set temperature

Additional Control Parameters

The target frequency is adapted by additional parameters in the following cases:

- Frequency restrictions
- Initial settings
- Forced cooling operation


Inverter Principle

To regulate the capacity, a frequency control is needed. The inverter makes it possible to vary the rotation speed of the compressor. The following table explains the conversion principle:

Phase	Description
1	The supplied AC power source is converted into the DC power source for the present.
2	The DC power source is reconverted into the three phase AC power source with variable frequency. <ul style="list-style-type: none"> ■ When the frequency increases, the rotation speed of the compressor increases resulting in an increased refrigerant circulation. This leads to a higher amount of the heat exchange per unit. ■ When the frequency decreases, the rotation speed of the compressor decreases resulting in a decreased refrigerant circulation. This leads to a lower amount of the heat exchange per unit.

Drawing of Inverter


The following drawing shows a schematic view of the inverter principle:

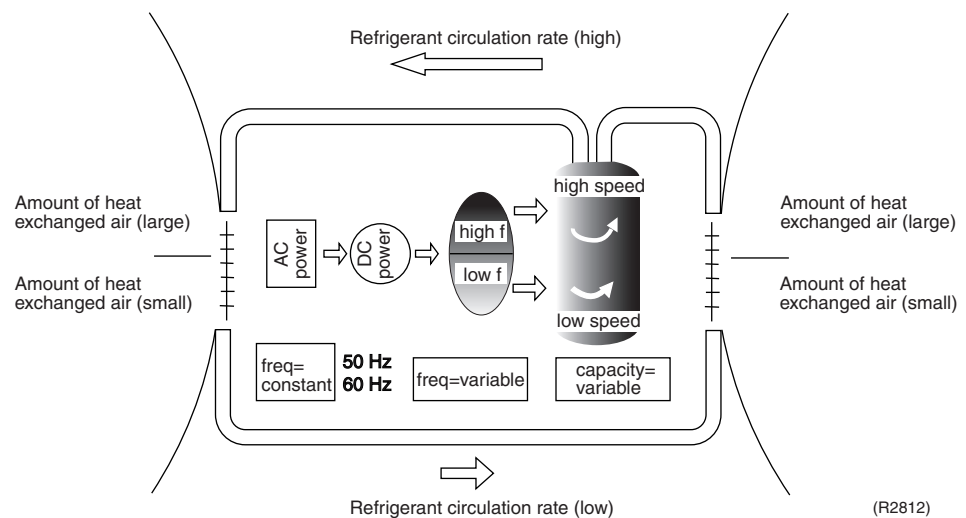

Inverter Features

The inverter provides the following features:

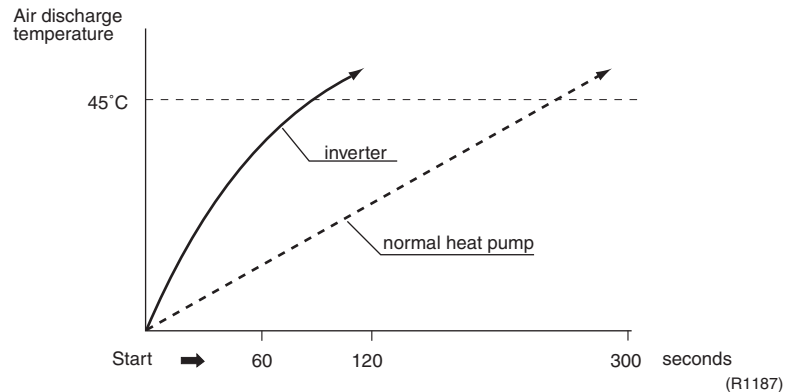- The regulating capacity can be changed according to the changes in the outdoor air temperature and cooling / heating load.
- Quick heating and quick cooling
The compressor rotational speed is increased when starting the heating (or cooling). This enables a quick set temperature.



- Even during extreme cold weather, the high capacity is achieved. It is maintained even when the outdoor air temperature is 2°C.
- Comfortable air conditioning
A detailed adjustment is integrated to ensure a fixed room temperature. It is possible to air condition with a small room temperature variation.
- Energy saving heating and cooling
Once the set temperature is reached, the energy saving operation enables to maintain the room temperature at low power.

Frequency Limits

The following table shows the functions that define the minimum and maximum frequency:

Frequency limits	Limited during the activation of following functions
Low	<ul style="list-style-type: none"> ■ Four way valve operation compensation. Refer to page 49.
High	<ul style="list-style-type: none"> ■ Input current control. Refer to page 51. ■ Compressor protection function. Refer to page 50. ■ Heating peak-cut control. Refer to page 52. ■ Freeze-up protection control. Refer to page 52. ■ Defrost control. Refer to page 54.

Forced Cooling Operation

For more information, refer to "Forced operation mode" on page 59.

1.2 Airflow Direction Control

Power-Airflow Dual Flaps

The large flaps send a large volume of air downwards to the floor. The flap provides an optimum control area in cooling, heating and dry mode.

Heating Mode

During heating mode, the large flap enables direct warm air straight downwards. The flap presses the warm air above the floor to reach the entire room.

Cooling Mode





During cooling mode, the flap retracts into the indoor unit. Then, cool air can be blown far and pervaded all over the room.

Wide-Angle Louvres

The louvres, made of elastic synthetic resin, provide a wide range of airflow that guarantees a comfortable air distribution.

Auto-Swing

The following table explains the auto swing process for heating, cooling, dry and fan :

Vertical Swing (up and down)			Horizontal Swing (right and left: manual)
Cooling / Dry	Heating	Fan	
 <p>(R4281)</p>	 <p>(R4282)</p>	 <p>(R4283)</p>	 <p>(R4284)</p>

1.3 Fan Speed Control for Indoor Units

Control Mode

The airflow rate can be automatically controlled depending on the difference between the set temperature and the room temperature. This is done through rotation speed control, or phase control and Hall IC control.



For more information about Hall IC, refer to trouble shooting for fan motor on page 99.

Fan Speed Steps

Fan speed control contains 9 steps: LLL, LL, SL, L, ML, M, MH, H and HH. In automatic fan speed operation, the step "SL" is not available.

Step	Cooling	Heating	Dry mode
LLL	 (R4085)	 (R4085)	25 · 35kW class : 670 - 880 rpm (During POWERFUL operation : 720 - 930 rpm)
LL			
L			
ML			
M			
MH			
H			
HH (POWERFUL)			

= Within this range the airflow rate is automatically controlled when the FAN setting button is set to automatic.



Note:


1. During POWERFUL operation, fan rotates at H tap + 50 rpm.
2. Fan stops during defrost operation.
3. In time of thermostat OFF, the fan rotates at the following speed.
 Cooling: The fan keeps rotating at the set tap.
 Heating: The fan stops.

Automatic Airflow Control for Heating

On heating mode, the indoor fan speed will be regulated according to the indoor heat exchanger temperature and the difference between the room temperature and the required set point.

Automatic Airflow Control for Cooling

The following drawing explains the principle of fan speed control for cooling:

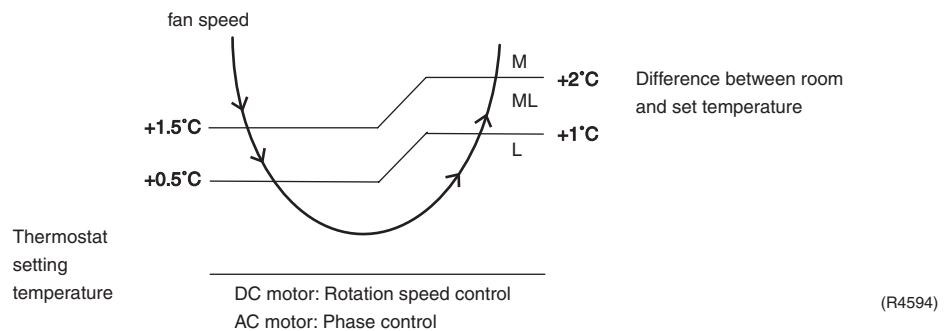

1.4 Programme Dry Function


Programme dry function removes humidity while preventing the room temperature from lowering.

Since the microcomputer controls both the temperature and airflow volume, the temperature adjustment and fan adjustment buttons are inoperable in this mode.

In Case of Inverter Units

The microcomputer automatically sets the temperature and fan settings. The difference between the room temperature at startup and the temperature set by the microcomputer is divided into two zones. Then, the unit operates in the dry mode with an appropriate capacity for each zone to maintain the temperature and humidity at a comfortable level.

Room temperature at startup	Set temperature X	Thermostat OFF point Y	Thermostat ON point Z
24°C or more	Room temperature at startup	X - 2.5°C	X - 0.5°C or Y + 0.5°C (zone B) continues for 10 min.
23.5°C ∴ 18°C		X - 2.0°C	X - 0.5°C or Y + 0.5°C (zone B) continues for 10 min.
17.5°C ∴	18°C	X - 2.0°C	X - 0.5°C = 17.5°C or Y + 0.5°C (zone B) continues for 10 min.

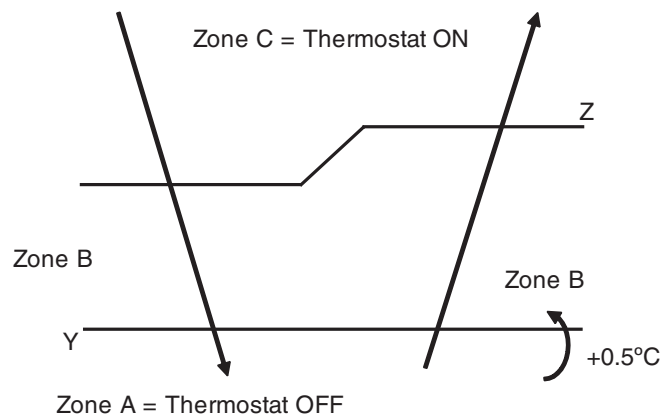

(R6841)

1.5 Automatic Operation

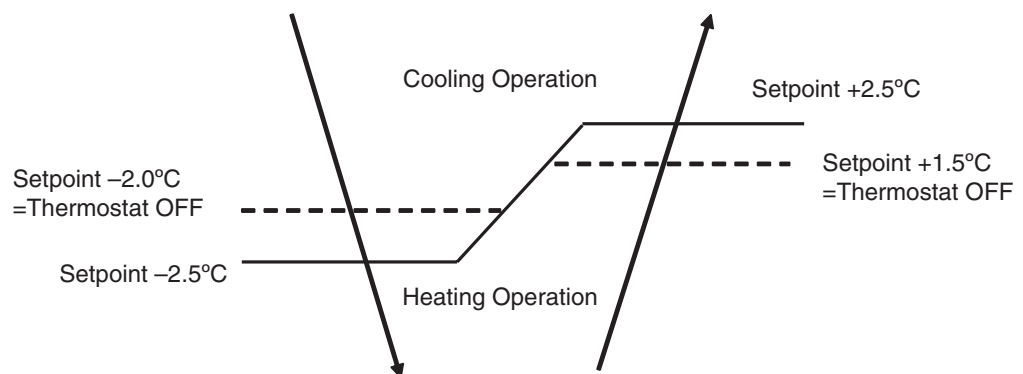
Automatic Cooling / Heating Function (Heat Pump Only)

When the AUTO mode is selected with the remote controller, the microcomputer automatically determines the operation mode from cooling and heating according to the room temperature and setting temperature at the time of the operation startup, and automatically operates in that mode.

The unit automatically switches the operation mode to cooling or heating to maintain the room temperature at the main unit setting temperature.

Detailed Explanation of the Function

1. Remote controller setting temperature is set as automatic cooling / heating setting temperature (18 to 30°C).
2. Main unit setting temperature equals remote controller setting temperature plus correction value (correction value / cooling: 0 deg, heating: 2 deg.).
3. Operation ON / OFF point and mode switching point are as follows.
 - ① Heating → Cooling switching point:
Room temperature \geq Main unit setting temperature +2.5 deg.
 - ② Cooling → Heating switching point:
Room temperature $<$ Main unit setting temperature -2.5 deg.
 - ③ Thermostat ON / OFF point is the same as the ON / OFF point of cooling or heating operation.
4. During initial operation
 Room temperature \geq Remote controller setting temperature: Cooling operation
 Room temperature $<$ Remote controller setting temperature: Heating operation



(R6842)

Ex: When the set point is 25°C

Cooling Operation → 23°C: Thermostat OFF → 22°C: Switch to Heating Operation

Heating Operation → 26.5°C: Thermostat OFF → 27.5°C: Switch to Cooling Operation

1.6 Thermostat Control

Thermostat control is based on the difference between the room temperature and the setpoint.

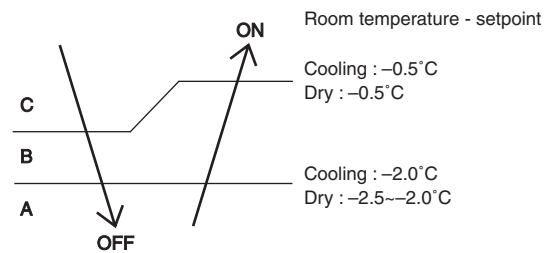
Thermostat OFF Condition

- ♦ The temperature difference is in the zone A.


Thermostat ON Condition

- ♦ The temperature difference is above the zone C after being in the zone A.
- ♦ The system resumes from defrost control in any zones except A.
- ♦ The operation turns on in any zones except A.
- ♦ The monitoring time has passed while the temperature difference is in the zone B.
(Cooling / Dry : 10 minutes, Heating : 10 seconds)

Cooling / Dry



Heating

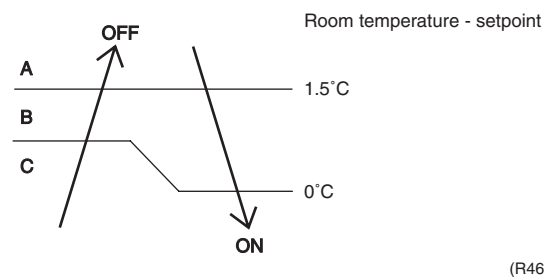


1.7 NIGHT SET Mode

When the OFF timer is set, the NIGHT SET circuit automatically activates. The NIGHT SET circuit maintains the airflow setting made by users.

The NIGHT SET Circuit


The NIGHT SET circuit continues heating or cooling the room at the set temperature for the first one hour, then automatically raises the temperature setting slightly in the case of cooling, or lowers it slightly in the case of heating, for economical operations. This prevents excessive heating in winter and excessive cooling in summer to ensure comfortable sleeping conditions, and also conserves electricity.

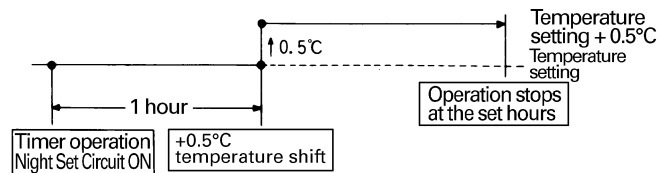Cooling Operation



(R4421)

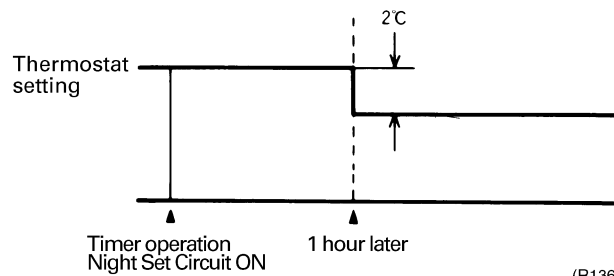Heating Operation



(R1362)

1.8 ECONO Mode

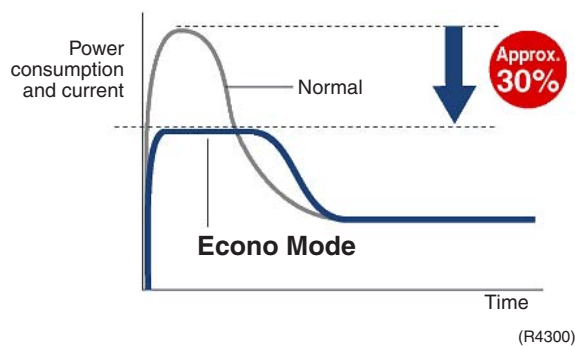
Outline

The "ECONO mode" reduces the maximum operating current and power consumption by approx. 30% during start up etc..

This mode is particularly convenient for energy-saving-oriented users. It is also a major bonus for those whose breaker capacities do not allow the use of multiple electrical devices and air conditioners.

It is easily activated from the wireless remote controller by pushing the ECONO button.

- When this function is ON, the maximum capacity is also down. (Approx. 20%)
- This function can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled.
- This function and POWERFUL operation cannot be used at the same time. The latest command has the priority.



Details

- ECONO mode can be activated while the unit is running. The remote controller can send the ECONO command when the unit is in COOL, HEAT, DRY, or AUTO operation.
- When the ECONO command is valid, the input current is under reducing control. (Refer to "Input current control" on page 51.)
Also, the upper limit of frequency is restricted.

Upper limit of frequency

R-410A model	Cooling		Heating	
	Normal	ECONO	Normal	ECONO
2.5kW	68	56	98	76
3.5kW	92	84	98	84

(unit : Hz)

R-22 model	Cooling		Heating	
	Normal	ECONO	Normal	ECONO
2.5kW	76	56	94	74
3.5kW	94	86	98	86

(unit : Hz)

1.9 MOLD PROOF Operation

MOLD PROOF operation is a function which reduces the spread of mold by using Fan mode to lower the humidity inside the indoor unit.

Outline

MOLD PROOF operation starts when the following conditions are met.

1. MOLD PROOF is set on the remote controller.
 2. Cooling or dry operation stops.
- ◆ MOLD PROOF operation will operate for approximately one hour after dry or cooling mode is turned off.
 - ◆ The indoor fan rotates at 550 rpm.

**Note:**

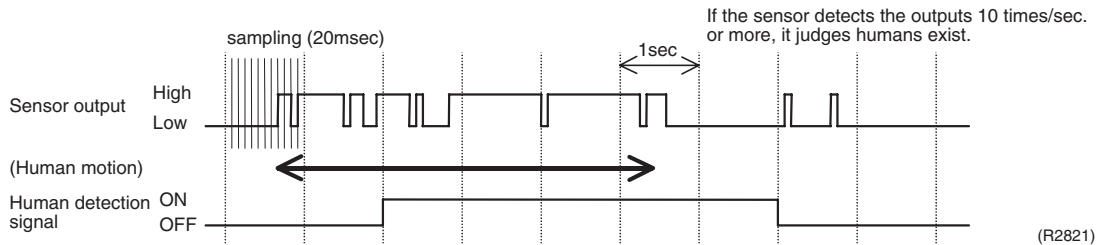
1. This function is not designed to remove existing dust or mold.
2. MOLD PROOF operation is not available when the unit is turned off using the OFF TIMER.

1.10 INTELLIGENT EYE

This is the function that detects existence of humans in the room by a human motion sensor (INTELLIGENT EYE) and reduces the capacity when there is no human in the room in order to save electricity.


Processing

1. Detection method by INTELLIGENT EYE



- This sensor detects human motion by receiving infrared rays and displays the pulse wave output.
- A microcomputer in an indoor unit carries out a sampling every 20 msec. and if it detects 10 cycles of the wave in one second in total (corresponding to $20\text{msec.} \times 10 = 200\text{msec.}$), it judges human is in the room as the motion signal is ON.

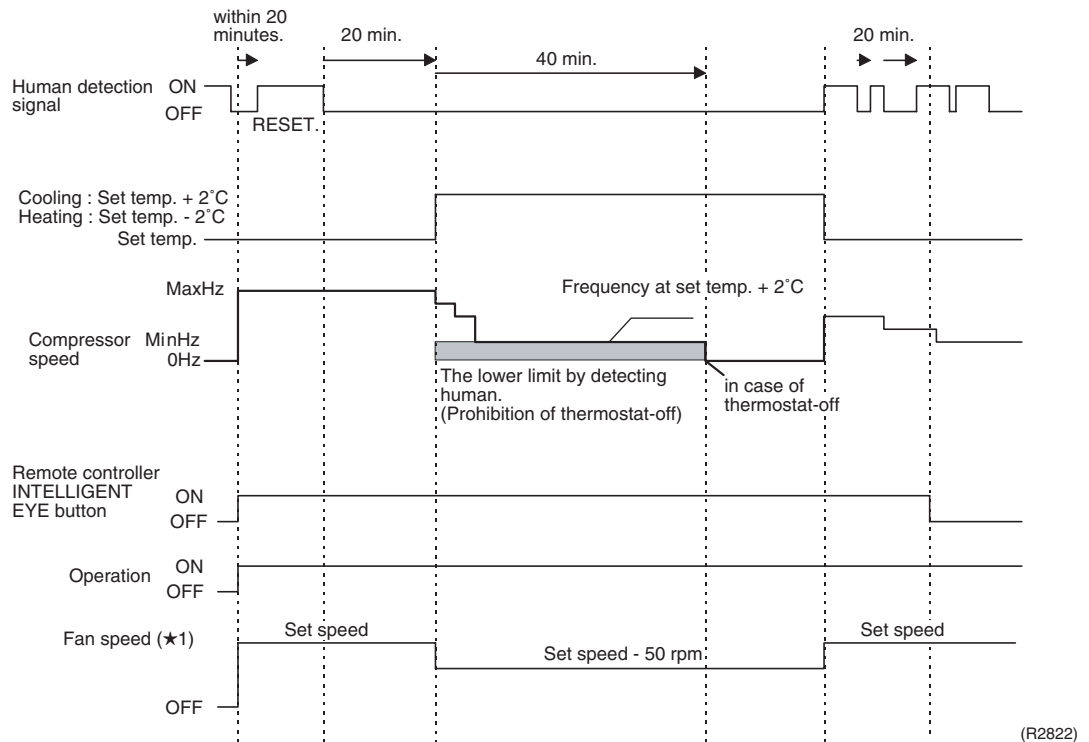2. The motions (for example: in cooling)



- When a microcomputer doesn't have a signal from the sensor in 20 minutes, it judges that nobody is in the room and operates the unit in temperature shifted 2°C from the set temperature. (Cooling / Dry : 2°C higher, Heating : 2°C lower and Auto : according to the operation mode at that time.)
- ★1 In case of FAN mode, the fan speed reduces by 50 rpm.

- Since the set temperature is shifted by 2°C higher for 40 minutes, compressor speed becomes low and can realize energy saving operation. But as thermostat is prone to be off by the fact that the set temperature has been shifted, the thermostat-off action is prohibited in 40 minutes so as to prevent this phenomena.
After this 40 minutes, the prohibition of the thermostat-off is cancelled and it can realize the conditions to conduct thermostat-off depending on the room temperature. In or after this 40 minutes, if the sensor detects human motion detection signal, it let the set temperature and the fan speed return to the original set point, keeping a normal operation.

Others

- The dry operation can't command the setting temperature with a remote controller, but internally the set temperature is shifted by 1°C.

1.11 Inverter POWERFUL Operation

Outline


In order to exploit the cooling and heating capacity to full extent, operate the air conditioner by increasing the indoor fan rotating speed and the compressor frequency.

Details of the Control

When POWERFUL button is pushed in each operation mode, the fan speed / setting temperature will be converted to the following states in a period of 20 minutes.

Operation mode	Fan speed	Target set temperature
COOL	H tap + 50 rpm	18°C
DRY	Dry rotating speed + 50 rpm	Normally targeted temperature in dry operation; Approx. -2°C
HEAT	H tap + 50 rpm	30°C
FAN	H tap + 50 rpm	—
AUTO	Same as cooling / heating in POWERFUL operation	The target is kept unchanged

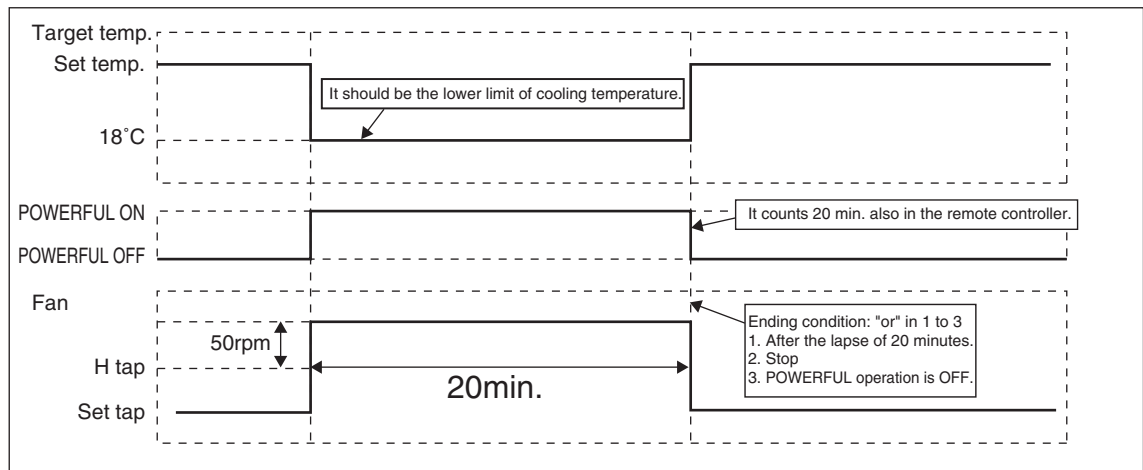Ex.) : POWERFUL operation in cooling mode.



(R4606)

1.12 Other Functions

1.12.1 Hot-start Function

Heat Pump Only

In order to prevent the cold air blast that normally comes when heating is started, the temperature of the heat exchanger of the indoor unit is detected, and either the airflow is stopped or is made very weak thereby carrying out comfortable heating of the room.

*The cold air blast is also prevented using a similar control when the defrosting operation is started or when the thermostat gets turned ON.

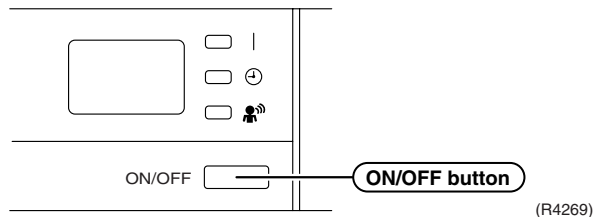
1.12.2 Signal Receiving Sign

When the indoor unit receives a signal from the remote controller, the unit emits a signal receiving sound.

1.12.3 ON/OFF Button on Indoor Unit

An ON/OFF button is provided on the front panel of the unit. Use this button when the remote controller is missing or if its battery has run out.

Every press of the button switches from ON to OFF or from OFF to ON.



- Push this button once to start operation. Push once again to stop it.
- This button is useful when the remote controller is missing.
- The operation mode refers to the following table.

	Mode	Temperature setting	Airflow rate
Cooling Only	COOL	22°C	AUTO
Heat Pump	AUTO	25°C	AUTO

- In the case of multi system operation, there are times when the unit does not activate with this button.

<Forced operation mode>

Forced operation mode will be set by pressing the ON/OFF button for between 5 to 9 sec. while the unit is not operating.



Note: When the ON/OFF button is pressed for 10 sec. or more, the operation will be stopped. See page 59 for the detail of "Forced Operation Mode".

1.12.4 Titanium Apatite Photocatalytic Air-Purifying Filter

This filter combines the Air Purifying Filter and Titanium Apatite Photocatalytic Deodorizing Filter in a single highly effective unit. The filter traps microscopic particles, decompose odours and even deactivates bacteria and viruses. It lasts for three years without replacement if washed about once every six months.

1.12.5 Mold Proof Air Filter

The filter net is treated with mold resisting agent TBZ (harmless, colorless, and odorless). Due to this treatment, the amount of mold growth is much smaller than that of normal filters.

1.12.6 Self-Diagnosis Digital Display

The microcomputer continuously monitors main operating conditions of the indoor unit, outdoor unit and the entire system. When an abnormality occur, the LCD remote controller displays error code. These indications allow prompt maintenance operations.

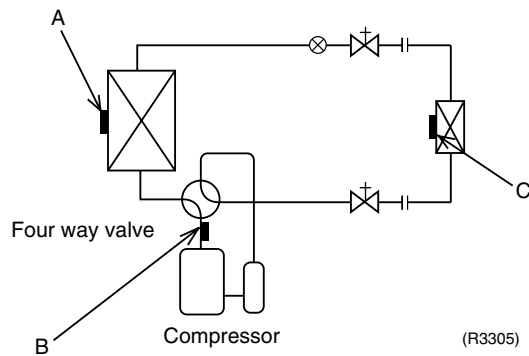
1.12.7 Auto-restart Function

Even if a power failure (including one for just a moment) occurs during the operation, the operation restarts in the condition before power failure automatically when power is restored.

(Note) It takes 3 minutes to restart the operation because the 3-minute standby function is activated.

2. Function of Thermistor

2.1 Heat Pump Model



A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge temperature. The system sets a target discharge temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The outdoor heat exchanger thermistor is used for detecting disconnection of the discharge thermistor when cooling.
When the discharge pipe temperature becomes lower than the outdoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
3. The outdoor heat exchanger thermistor is used for high pressure protection during cooling operation.

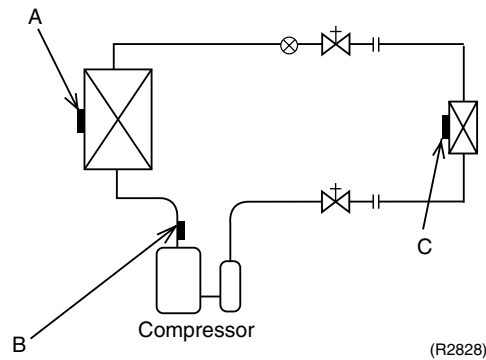
B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used for controlling temperature of the discharge pipe. If the temperature of discharge pipe (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency drops or the operation halts.
2. The discharge pipe thermistor is used for detecting disconnection of the discharge thermistor.

C Indoor Heat Exchanger Thermistor

1. The indoor heat exchanger thermistor is used for controlling target discharge temperature. The system sets a target discharge temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The indoor heat exchanger thermistor is used for preventing freezing.
During the cooling operation, if the temperature drops abnormally, the operating frequency becomes lower, then the operation halts.
3. During heating, the indoor heat exchanger thermistor is used for detecting disconnection of the discharge pipe thermistor.
When the discharge pipe temperature becomes lower than the indoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
The indoor heat exchanger thermistor is also used for preventing abnormal high pressure.

2.2 Cooling Only Model



A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge temperature. The system sets a target discharge temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The outdoor heat exchanger thermistor is used for detecting disconnection of the discharge thermistor when cooling.
When the discharge pipe temperature becomes lower than the outdoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
3. The outdoor heat exchanger thermistor is used for high pressure protection during cooling operation.

B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used for controlling temperature of the discharge pipe. If the temperature of discharge pipe (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency drops or the operation halts.
2. The discharge pipe thermistor is used for detecting disconnection of the discharge thermistor.

C Indoor Heat Exchanger Thermistor

1. The indoor heat exchanger thermistor is used for controlling target discharge temperature. The system sets a target discharge temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge temperature can be obtained.
2. The indoor heat exchanger thermistor is used for preventing freezing.
During the cooling operation, if the temperature drops abnormally, the operating frequency becomes lower, then the operation halts.

3. Control Specification

3.1 Mode Hierarchy

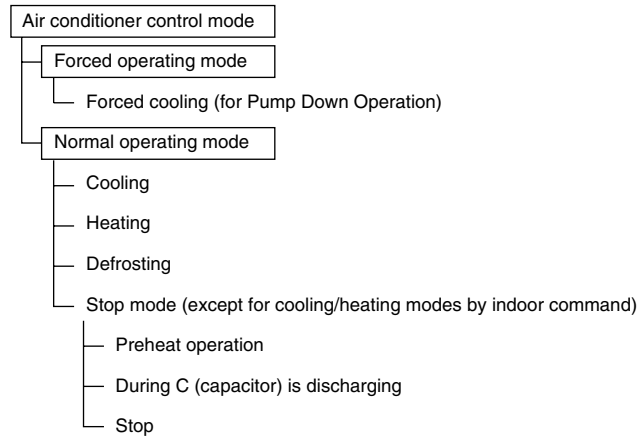
Outline

There are two modes; the mode selected in user's place (normal air conditioning mode) and forced operation mode for installation and providing service.

Detail


1. For heat pump model

There are following modes; stop, cooling (includes drying), heating (include defrosting)



2. For cooling only model

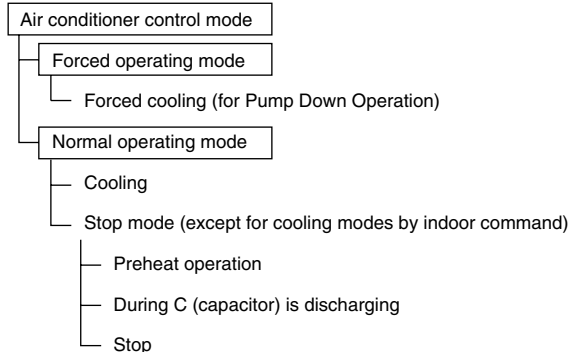There are following models; stop and cooling (including drying).




Note: Unless specified otherwise, an indoor dry operation command must be regarded as cooling operation.

3.2 Frequency Control

Outline

Frequency will be determined according to the difference between room and set temperature. The function is explained as follows.

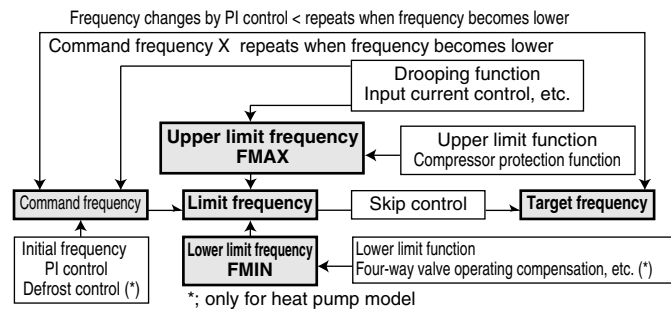1. How to determine frequency.
2. Frequency command from an indoor unit. (The difference between a room temperature and the temperature set by the remote controller.)
3. Frequency command from an indoor unit.
4. Frequency initial setting.
5. PI control.



(R2831)

Detail

How to Determine Frequency

The compressor's frequency will finally be determined by taking the following steps.

For Heat Pump Model

1. Determine command frequency

- ◆ Command frequency will be determined in the following order of priority.
 - 1.1 Limiting frequency by drooping function
 - ◆ Input current, discharge pipes, peak cutting, freeze-up protection, dew prevention, fin thermistor temperature.
 - 1.2 Limiting defrost control time
 - 1.3 Forced cooling
 - 1.4 Indoor frequency command

2. Determine upper limit frequency

- ◆ Set a minimum value as an upper limit frequency among the frequency upper limits of the following functions:
Compressor protection, input current, discharge pipes, peak cutting, freeze-up protection, defrost.

3. Determine lower limit frequency

- ◆ Set a maximum value as a lower limit frequency among the frequency lower limits of the following functions:
Four way valve operating compensation, draft prevention, pressure difference upkeep.

4. Determine prohibited frequency

- ◆ There is a certain prohibited frequency such as a power supply frequency.

For Cooling Only Model

1. Determine command frequency

- ◆ Command frequency will be determined in the following order of priority.
 - 1.1 Limiting frequency by drooping function
 - ◆ Input current, discharge pipes, freeze-up protection, dew prevention, fin thermistor temperature.
 - 1.2 Indoor frequency command

2. Determine upper limit frequency

- ◆ Set a minimum value as an upper limit frequency among the frequency upper limits of the following functions:
Compressor protection, input current, discharge pipes, freeze-up protection, dew prevention, fin thermistor temperature.

3. Determine lower limit frequency

- ◆ Set a maximum value as an lower limit frequency among the frequency lower limits of the following functions:
Pressure difference upkeep.

4. Determine prohibited frequency

- ◆ There is a certain prohibited frequency such as a power supply frequency.

Indoor Frequency Command (ΔD signal)

The difference between a room temperature and the temperature set by the remote controller will be taken as the " ΔD signal" and is used for frequency command.

Temperature difference	ΔD signal	Temperature difference	ΔD signal	Temperature difference	ΔD signal	Temperature difference	ΔD signal
0	*Th OFF	2.0	4	4.0	8	6.0	C
0.5	1	2.5	5	4.5	9	6.5	D
1.0	2	3.0	6	5.0	A	7.0	E
1.5	3	3.5	7	5.5	B	7.5	F

*Th OFF = Thermostat OFF

Frequency Initial Setting**<Outline>**

When starting the compressor, or when conditions are varied due to the change of the room, the frequency must be initialized according to the ΔD value of the indoor unit and the Q value of the indoor unit.

Q value: Indoor unit output determined from indoor unit volume, airflow rate and other factors.

PI Control (Determine Frequency Up / Down by ΔD Signal)**1. P control**

Calculate ΔD value in each sampling time (20 seconds), and adjust the frequency according to its difference from the frequency previously calculated.

2. I control

If the operating frequency is not change more than a certain fixed time, adjust the frequency up and down according to the ΔD value, obtaining the fixed ΔD value.

When the ΔD value is small...lower the frequency.

When the ΔD value is large...increase the frequency.

3. Frequency management when other controls are functioning

- ◆ When frequency is drooping;
Frequency management is carried out only when the frequency droops.
- ◆ For limiting lower limit
Frequency management is carried out only when the frequency rises.

4. Upper and lower limit of frequency by PI control

The frequency upper and lower limits are set depending on indoor unit.

When low noise commands come from the indoor unit or when outdoor unit low noise or quiet commands come from indoor unit, the upper limit frequency must be lowered than the usual setting.

3.3 Controls at Mode Changing / Start-up

3.3.1 Preheating Operation

Outline	Operate the inverter in the open phase operation with the conditions including the preheating command from the discharge pipe temperature.
----------------	--------------------------------------------------------------------------------------------------------------------------------------------

Detail	<p>Preheating ON Condition</p> <ul style="list-style-type: none"> ◆ When the discharge pipe temperature is below 10°C, inverter in open phase operation starts. (The power consumption of compressor during preheating operation is 35W.) <p>OFF Condition</p> <ul style="list-style-type: none"> ◆ When the discharge pipe temperature is higher than 12°C, inverter in open phase operation stops.
---------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

3.3.2 Four Way Valve Switching

Outline	<p>Heat Pump Only</p> <p>During the heating operation current must be conducted and during cooling and defrosting current must not be conducted. In order to eliminate the switching sound (as the four way valve coil switches from ON to OFF) when the heating is stopped, the delay switch of the four way valve must be carried out after the operation stopped.</p>
----------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Detail	<p>The OFF delay of four way valve Energize the coil for 160 sec after unit operation is stopped.</p>
---------------	-----------------------------------------------------------------------------------------------------------

3.3.3 Four Way Valve Operation Compensation

Outline	<p>Heat Pump Only</p> <p>At the beginning of the operation as the four way valve is switched, acquire the differential pressure required for activating the four way valve by having output the operating frequency, which is more than a certain fixed frequency, for a certain fixed time.</p>
----------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Detail	<p>Starting Conditions</p> <ol style="list-style-type: none"> 1. When starting compressor for heating. 2. When the operating mode changes to cooling from heating. 3. When starting compressor for rushing defrosting or resetting. 4. When starting compressor for the first time after the reset with the power is ON. 5. When starting compressor for heating next to the suspension of defrosting. 6. When starting compressor next to the fault of switching over cooling / heating. <p>Set the lower limit frequency (cooling : 68Hz, heating : 66Hz) for 45 seconds with any conditions 1 through 6 above.</p>
---------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


3.3.4 3-minute Standby

Prohibit to turn ON the compressor for 3 minutes after turning it off. (Except when defrosting. (Only for Heat Pump Model).)

3.3.5 Compressor Protection Function

When turning the compressor from OFF to ON, the upper limit of frequency must be set as follows. (The function must not be used when defrosting (only for heat pump model).)

FCG 3	88
FCG 2	64
FCG 1	48
TCG 1	240
TCG 2	360
TCG 3	180

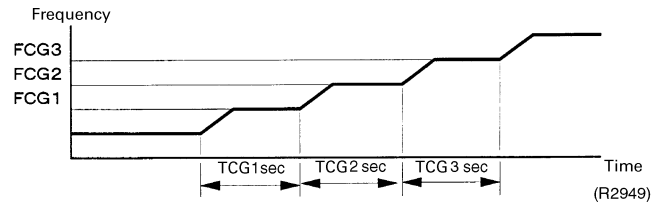


3.4 Discharge Pipe Temperature Control

Outline

The discharge pipe temperature is used as the compressor's internal temperature. If the discharge pipe temperature rises above a certain level, the operating frequency upper limit is set to keep this temperature from going up further.

Detail

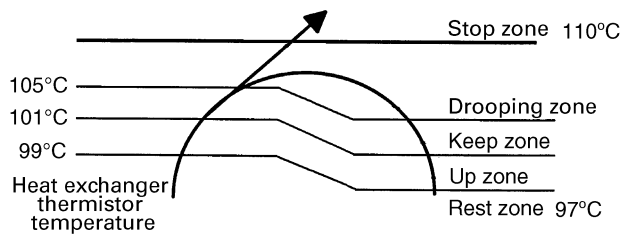Divide the Zone



(R4270)

Management within the Zones

Zone	Control contents
Stop zone	When the temperature reaches the stop zone, stop the compressor and correct abnormality.
Drooping zone	Start the timer, and the frequency will be drooping.
Keep zone	Keep the upper limit of frequency.
Return / Reset zone	Cancel the upper limit of frequency.

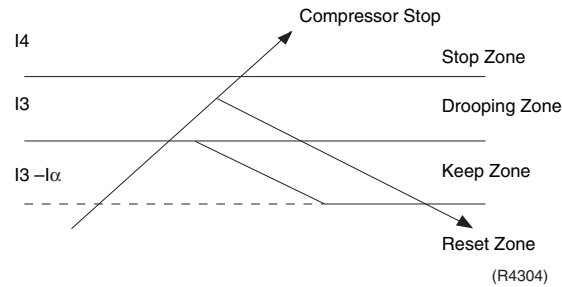
3.5 Input Current Control

Outline

The microcomputer calculates the input current during the compressor is running, and set the frequency upper limit from such input current.

In case of heat pump model, this control is the upper limit control function of the frequency which takes priority of the lower limit of four way valve activating compensation.

Detail



Frequency control in each zone

Drooping zone

- ♦ The maximum limit of the compressor frequency in this control is defined as operation frequency – 2Hz.
- ♦ After this, the output frequency is pulled down by 2Hz every second until it reaches the steady zone.

Keep zone

- ♦ The present maximum frequency goes on.

Reset zone

- ♦ Limit of the frequency is cancelled.

Stop zone

- ♦ After 2.5 s in this zone, the compressor is stopped.

		Cooling		Heating		
		25 class	35 class	25 class	35 class	
I4	(A)	12		12		
I3	(A)	Normal mode	6.0	7.25	7.5	8.25
		ECONO mode	4.25	5.0	5.25	5.75
I3-Iα	(A)	Normal mode	5.25	6.5	6.75	7.5
		ECONO mode	3.5	4.25	4.5	5.0

Limitation of current drooping and stop value according to the outdoor air temperature

- In case the operation mode is cooling
 - ♦ The current droops when outdoor air temperature becomes higher than a certain level (model by model).
- In case the operation mode is heating (only for heat pump model)
 - ♦ The current droops when outdoor air temperature becomes higher than a certain level (model by model).

3.6 Freeze-up Protection Control

Outline

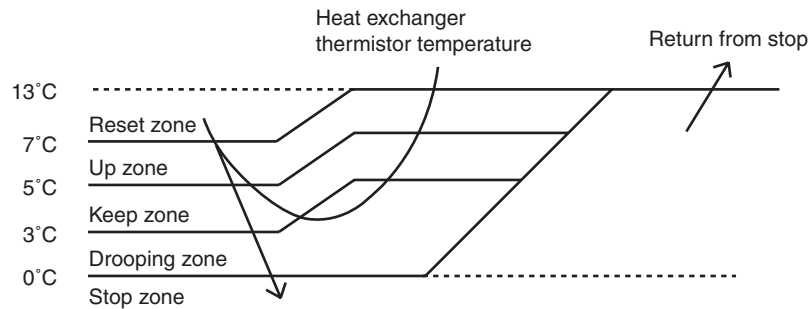
During cooling operation, the signals being sent from the indoor unit allow the operating frequency limitation and then prevent freezing of the indoor heat exchanger. (The signal from the indoor unit must be divided into the zones as the followings.)

Detail

Conditions for Start Controlling

Judge the controlling start with the indoor heat exchanger temperature after 2 sec from operation start.

Control in Each Zone



(R4561)

3.7 Heating Peak-cut Control

Outline

Heat Pump Only

During heating operation, the signals being sent from the indoor unit allow the operating frequency limitation and prevent abnormal high pressure. (The signal from the indoor unit must be divided as follows.)

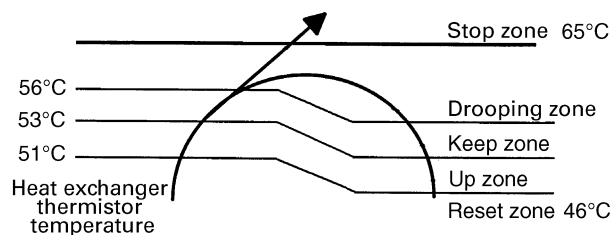
Detail

Conditions for Start Controlling

Judge the controlling start with the indoor heat exchanger temperature after 2 sec. from operation start.

Control in Each Zone

The heat exchange intermediate temperature of indoor unit controls the following.



(R4589)

3.8 Fan Control

- Outline** Fan control is carried out according to the following conditions.
1. Fan control when defrosting
 2. Fan OFF delay when stopped
 3. ON/OFF control when cooling operation
 4. Fan control when forced operation
 5. Fan control in low noise mode
 6. Fan control during heating operation
 7. Fan control in the quiet mode
 8. Fan control in the POWERFUL mode
 9. Fan control for pressure difference upkeep
-

- Detail** **Fan OFF Control when Stopped**
- Fan OFF delay for 60 seconds must be made when the compressor is stopped.
-

3.9 Liquid Compression Protection Function 2

- Outline** In order to obtain the dependability of the compressor, the compressor must be stopped according to the conditions of the temperature of the outdoor air and outdoor heat exchanger.
-

- Detail**
- Operation stops depending on the outdoor air temperature.
Compressor operation turns OFF under the conditions that the system is in cooling operation and outdoor air temperature is below 10°C.

3.10 Defrost Control

Outline

Heat Pump Only

Defrosting is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than its fixed value when finishing.

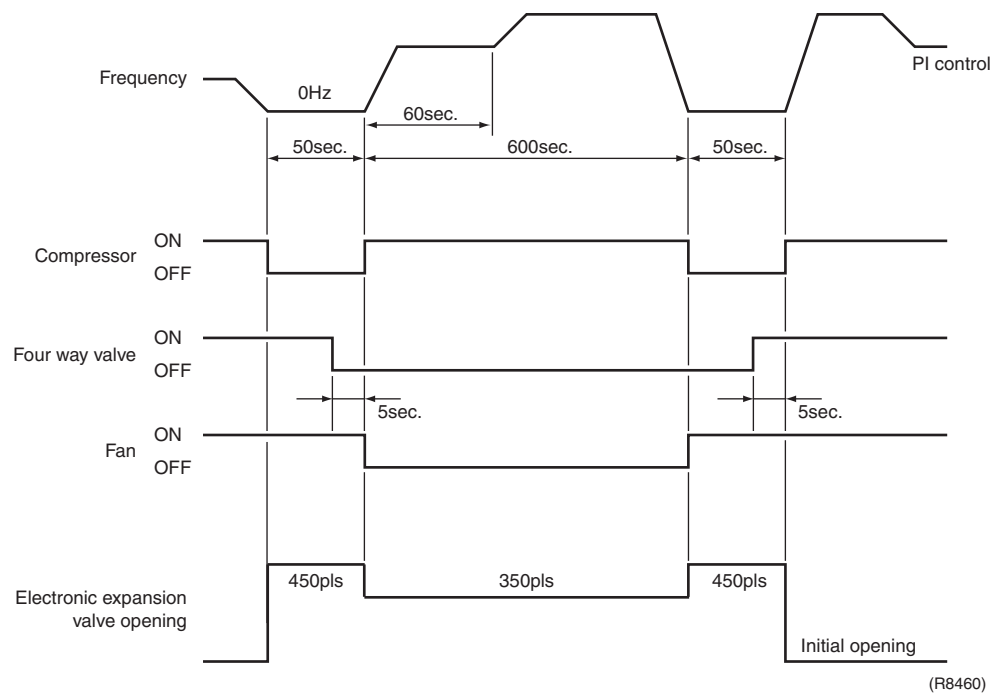
Detail

Conditions for Starting Defrost

The starting conditions must be made with the outdoor air temperature and heat exchanger temperature. Under the conditions that the system is in heating operation, 6 minutes after the compressor is started and more than 28 minutes of accumulated time pass since the start of the operation or ending the defrosting.

Conditions for Canceling Defrost

The judgment must be made with heat exchanger temperature. (4°C-22°C)



3.11 Electronic Expansion Valve Control

Outline

The following items are included in the electronic expansion valve control.

Electronic expansion valve is fully closed

1. Electronic expansion valve is fully closed when turning on the power.
2. Pressure equalizing control

Open Control

1. Electronic expansion valve control when starting operation
2. Control when frequency changed
3. Control for defrosting (only for heat pump model)
4. Control when a discharge pipe temperature is abnormally high
5. Control when the discharge pipe thermistor is disconnected

Feedback Control

1. Discharge pipe temperature control

Detail

The followings are the examples of control which function in each mode by the electronic expansion valve control.

Operation pattern		Control when frequency changed	Control for abnormally high discharge pipe temperature	
When power is turned ON	○ : function × : not function			
↓		Fully closed when power is turned ON	×	×
Cooling operation		Open control when starting	×	○
↓		(Control of target discharge pipe temperature)	○	○
Stop		Pressure equalizing control	×	×
Heating operation (only for heat pump model)		Open control when starting	×	○
↓		(Control of target discharge pipe temperature)	○	○
Stop		(Defrost control FD=1) (only for heat pump model)	×	×
Heating operation (only for heat pump model)		Pressure equalizing control	×	×
↓		Open control when starting	×	○
Control of discharge pipe thermistor disconnection		Continue	×	×
↓		Pressure equalizing control	×	×
Stop				

(R2833)

3.11.1 Fully Closing with Power ON

Initialize the electronic expansion valve when turning on the power, set the opening position and develop pressure equalizing.

3.11.2 Pressure Equalization Control

When the compressor is stopped, open and close the electronic expansion valve and develop pressure equalization.

3.11.3 Opening Limit

Outline

Limit a maximum and minimum opening of the electronic expansion valve.

Detail

- A maximum electronic expansion valve opening : 480 pulses
 - A minimum electronic expansion valve opening : 52 pulses
- The electronic expansion valve is fully closed in the room where cooling is stopped and is opened with fixed opening during defrosting.

3.11.4 Starting Operation Control

Control the electronic expansion valve opening when the system is starting, and prevent the system to be super heated or moistened.

3.11.5 High Temperature of the Discharge Pipe

When the compressor is operating, if the discharge pipe temperature exceeds a certain value, open the electronic expansion valve and remove the refrigerant to the low pressure side and lower discharge temperature.

3.11.6 Disconnection of the Discharge Pipe Thermistor

Outline

Detect a disconnected discharge pipe thermistor by comparing the discharge pipe temperature with the condensation temperature. If any is disconnected, open the electronic expansion valve according to the outdoor air temperature and the operating frequency and operate for a specified time, and then stop.

After 3 minutes of waiting, restart the unit and check if any is disconnected. If any is disconnected stop the system after operating for a specified time. If the disconnection is detected 4 times in succession, then the system will be down.

Detail

Detect Disconnection

If the timer for open control (cooling : 13min., heating : 15min.) becomes over, and the 9-minute timer for the compressor operation continuation is not counting time, the following adjustment must be made.

1. When the operation mode is cooling
When the discharge pipe temperature is lower than the outdoor heat exchanger temperature, the discharge pipe thermistor disconnection must be ascertained.
2. When the operation mode is heating (only for heat pump model)
When the discharge pipe temperature is lower than the max temperature of indoor unit heat exchanger, the discharge pipe thermistor disconnection must be ascertained.

Adjustment when the thermistor is disconnected

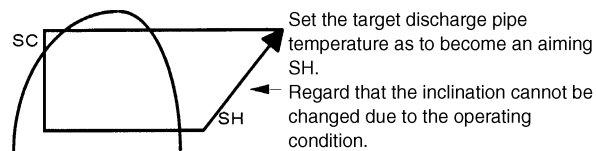
When compressor stop repeats specified time, the system should be down.

3.11.7 Control When Frequency is Changed

When the target discharge pipe temperature control is active, if the target frequency is changed for a specified value in a certain time period, cancel the target discharge pipe temperature control and change the target opening of the electronic expansion valve according to the shift.

3.11.8 Target Discharge Pipe Temperature Control

Obtain the target discharge pipe temperature from the indoor and outdoor heat exchanger temperature, and adjust the electronic expansion valve opening so that the actual discharge pipe temperature become close to that temperature. (Indirect SH control using the discharge pipe temperature)



(R1389)

Determine a correction value of the electronic expansion valve compensation and drive it according to the deflection of the target discharge temperature and actual discharge temperature, and the discharge temperature variation by the 20 sec.

3.12 Malfunctions

3.12.1 Sensor Malfunction Detection

Sensor malfunction may occur in the thermistor.

Relating to Thermistor Malfunction

1. Outdoor heat exchanger thermistor
2. Discharge pipe thermistor
3. Fin thermistor
4. Outdoor air thermistor

3.12.2 Detection of Overload and Over Current

Outline

In order to protect the inverter, detect an excessive output current, and for protecting compressor, monitor the OL operation.

Detail

- If the OL (compressor head) temperature exceeds 120°C (depending on the model), the compressor gets interrupted.
- If the inverter current exceeds 22 A, the compressor gets interrupted too.

3.12.3 Insufficient Gas Control

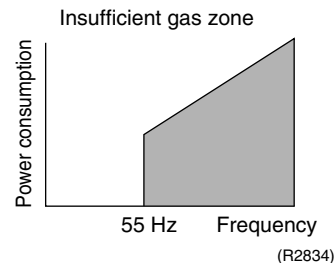
Outline

There are three ways of control to detect insufficient gas.

I Detecting by power consumption


If the power consumption is below the specified value and the frequency is higher than the specified frequency, it is regarded as insufficient gas.

The power consumption is weak comparing with that in the normal operation when gas is insufficient, and gas insufficiency is detected by checking a power consumption.



II Detecting by discharge pipe temperature

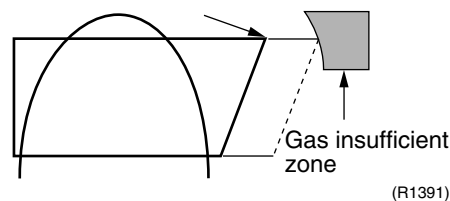If the discharge temperature is higher than the target discharge pipe temperature, and the electronic expansion valve is fully open (480 pulses) more than the specified time, it is regarded as insufficient gas.



III Detecting by the difference of temperature

If the difference between inhale and exhale temperature is smaller than the specified value, it is regarded as insufficient gas.



Refer to "Insufficient Gas" on page 127 for details.

Detail**I Judgment by power consumption**

When an output frequency is exceeds 55 Hz and the input current is less than specified value, the adjustment is made for insufficient gas.

II Judgment by discharge pipe temperature

When discharge pipe temperature is 30°C higher than target value and the electronic expansion valve opening is 480 pulses (max.), the adjustment is made for insufficient gas.

III Judgment by the difference of temperature

When the difference of the temperature is smaller than Δ , it is regarded as insufficient gas.

		Δ
Cooling	room temperature – indoor heat exchanger temperature	4.0°C
	outdoor heat exchanger temperature – outdoor temperature	4.0°C
Heating	indoor heat exchanger temperature – room temperature	3.0°C
	outdoor temperature – outdoor heat exchanger temperature	3.0°C

3.13 Forced Operation Mode

Outline

Forced operating mode includes only forced cooling.

Detail**Forced Cooling**

Item	Forced Cooling
Forced operation allowing conditions	1) The outdoor unit is not abnormal and not in the 3-minute standby mode. 2) The operating mode of the outdoor unit is the stop mode. 3) The forced operation is ON. The forced operation is allowed when the above “and” conditions are met.
Starting/adjustment	If the forced operation switch is pressed as the above conditions are met.
1) Command frequency	68 Hz
2) Electronic expansion valve opening	It depends on the capacity of the indoor unit.
3) Outdoor unit adjustment	Compressor is in operation.
4) Indoor unit adjustment	The command of forced operation is transmitted to the indoor unit.
End	1) When the forced operation switch is pressed again. 2) The operation is to end automatically after 15 min.
Others	The protect functions are prior to all others in the forced operation.

3.14 Additional Function

3.14.1 POWERFUL Operation Mode

Compressor operating frequency is increased to PI Max. (Max. Hz of operating room) and outdoor unit airflow rate is increased.

3.14.2 Voltage Detection Function

Power supply voltage is detected each time equipment operation starts.

Part 5

Operation Manual

1. System Configuration.....	62
2. Instruction.....	63
2.1 Safety Precautions	63
2.2 Names of Parts.....	65
2.3 Preparation Before Operation	68
2.4 AUTO · DRY · COOL · HEAT · FAN Operation	71
2.5 Adjusting the Airflow Direction.....	73
2.6 POWERFUL Operation	75
2.7 OUTDOOR UNIT QUIET Operation.....	76
2.8 ECONO Operation	77
2.9 MOLD PROOF Operation	78
2.10 INTELLIGENT EYE Operation	79
2.11 TIMER Operation	81
2.12 Care and Cleaning	83
2.13 Troubleshooting.....	86

1. System Configuration

After the installation and test operation of the room air conditioner have been completed, it should be operated and handled as described below. Every user would like to know the correct method of operation of the room air conditioner, to check if it is capable of cooling (or heating) well, and to know a clever method of using it.

In order to meet this expectation of the users, giving sufficient explanations taking enough time can be said to reduce about 80% of the requests for servicing. However good the installation work is and however good the functions are, the customer may blame either the room air conditioner or its installation work because of improper handling. The installation work and handing over of the unit can only be considered to have been completed when its handling has been explained to the user without using technical terms but giving full knowledge of the equipment.

2. Instruction

i **Note:** This instruction is for FTK(X)D25/35DVMA as representative.

2.1 Safety Precautions

Safety precautions

- Keep this manual where the operator can easily find them.
- Read this manual attentively before starting up the unit.
- For safety reason the operator must read the following cautions carefully.
- This manual classifies precautions into WARNING and CAUTION. Be sure to follow all precautions below: they are all important for ensuring safety.

WARNING

If you do not follow these instructions exactly, the unit may cause property damage, personal injury or loss of life.

CAUTION

If you do not follow these instructions exactly, the unit may cause minor or moderate property damage or personal injury.



Never do.



Be sure to follow the instructions.



Be sure to earth the air conditioner.





Never cause the air conditioner (including the remote controller) to get wet.





Never touch the air conditioner (including the remote controller) with a wet hand.

WARNING


- In order to avoid fire, explosion or injury, do not operate the unit when harmful, among which flammable or corrosive gases, are detected near the unit. 
- It is not good for health to expose your body to the air flow for a long time.
- Do not put a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury.
- Do not attempt to repair, relocate, modify or reinstall the air conditioner by yourself. Incorrect work will cause electric shocks, fire etc. For repairs and reinstallation, consult your Daikin dealer for advice and information.

- The refrigerant used in the air conditioner is safe. Although leaks should not occur, if for some reason any refrigerant happens to leak into the room, make sure it does not come in contact with any flame as of gas heaters, kerosene heaters or gas range. 
- If the air conditioner is not cooling (heating) properly, the refrigerant may be leaking, so call your dealer. When carrying out repairs accompanying adding refrigerant, check the content of the repairs with our service staff.
- Do not attempt to install the air conditioner by your self. Incorrect work will result in water leakage, electric shocks or fire. For installation, consult the dealer or a qualified technician.
- In order to avoid electric shock, fire or injury, if you detect any abnormally such as smell of fire, stop the operation and turn off the breaker. And call your dealer for instructions.
- Depending on the environment, an earth leakage breaker must be installed. Lack of an earth leakage breaker may result in electric shocks or fire.


CAUTION

- The air conditioner must be earthed. Incomplete earthing may result in electric shocks. Do not connect the earth line to a gas pipe, water pipe, lightning rod, or a telephone earth line. 
- In order to avoid any quality deterioration, do not use the unit for cooling precision instruments, food, plants, animals or works of art. 
- Never expose little children, plants or animals directly to the air flow.
- Do not place appliances which produce open fire in places exposed to the air flow from the unit or under the indoor unit. It may cause incomplete combustion or deformation of the unit due to the heat.

- Do not block air inlets nor outlets. Impaired air flow may result in insufficient performance or trouble.
- Do not stand or sit on the outdoor unit. Do not place any object on the unit to avoid injury, do not remove the fan guard.
- Do not place anything under the indoor or outdoor unit that must be kept away from moisture. In certain conditions, moisture in the air may condense and drip.
- After a long use, check the unit stand and fittings for damage.
- Do not touch the air inlet and aluminum fins of outdoor unit. It may cause injury.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

-
- To avoid oxygen deficiency, ventilate the room sufficiently if equipment with burner is used together with the air conditioner. 
 - Before cleaning, be sure to stop the operation, turn the breaker off or pull out the supply cord.
 - Do not connect the air conditioner to a power supply different from the one as specified. It may cause trouble or fire.
 - Arrange the drain hose to ensure smooth drainage. Incomplete draining may cause wetting of the building, furniture etc.
 - Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.
Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.

-
- Do not operate the air conditioner with wet hands. 

-
- Do not wash the indoor unit with excessive water, only use a slightly wet cloth. 
 - Do not place things such as vessels containing water or anything else on top of the unit. Water may penetrate into the unit and degrade electrical insulations, resulting in an electric shock.

Installation site.

- To install the air conditioner in the following types of environments, consult the dealer.
 - Places with an oily ambient or where steam or soot occurs.
 - Salty environment such as coastal areas.
 - Places where sulfide gas occurs such as hot springs.
 - Places where snow may block the outdoor unit.

The drain from the outdoor unit must be discharged to a place of good drainage.

Consider nuisance to your neighbours from noises.

- For installation, choose a place as described below.
 - A place solid enough to bear the weight of the unit which does not amplify the operation noise or vibration.
 - A place from where the air discharged from the outdoor unit or the operation noise will not annoy your neighbours.

Electrical work.

- For power supply, be sure to use a separate power circuit dedicated to the air conditioner.

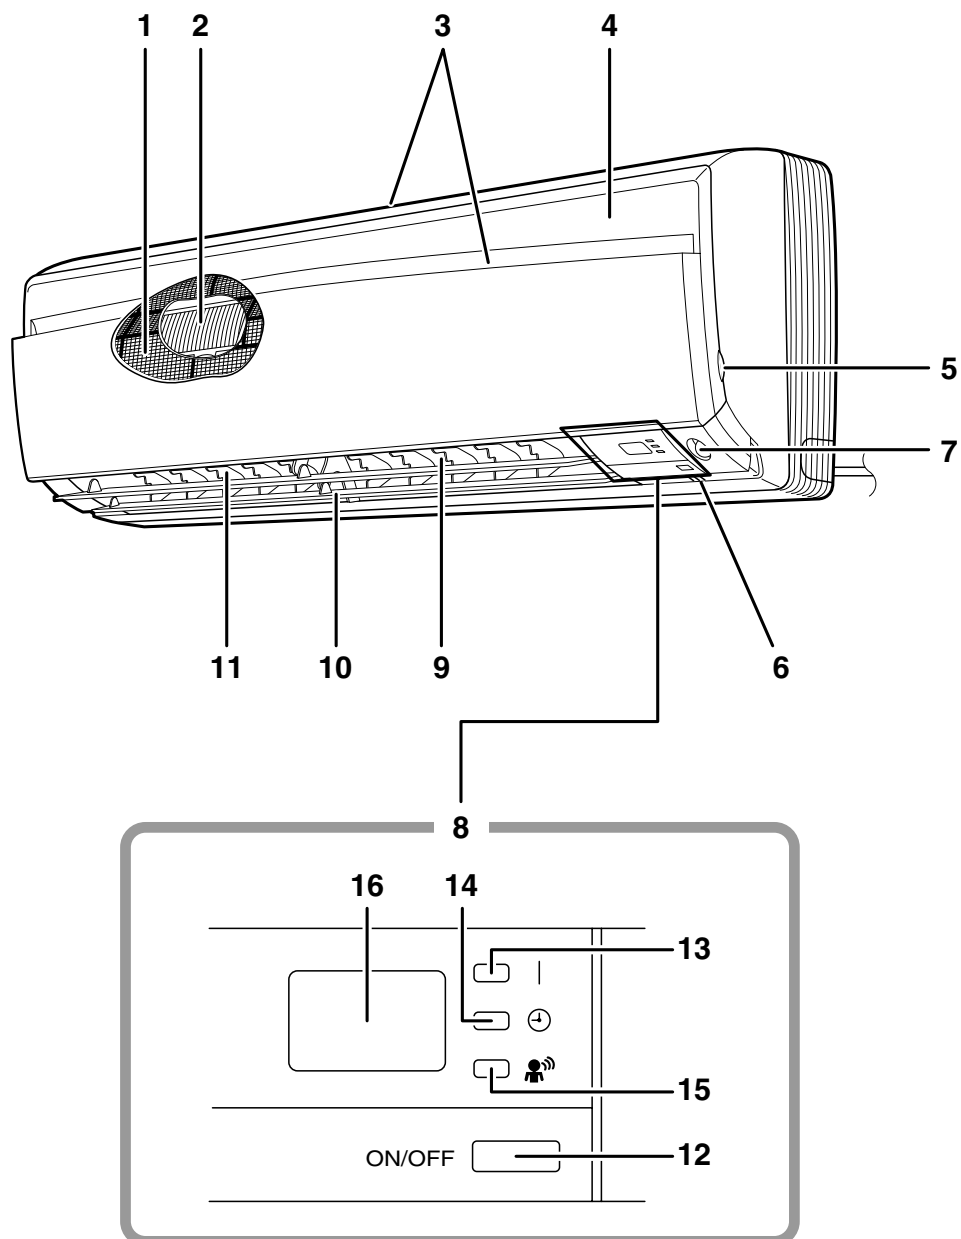
System relocation.

- Relocating the air conditioner requires specialized knowledge and skills. Please consult the dealer if relocation is necessary for moving or remodeling


2.2 Names of Parts

Names of parts

■ Indoor Unit



■ Outdoor Unit

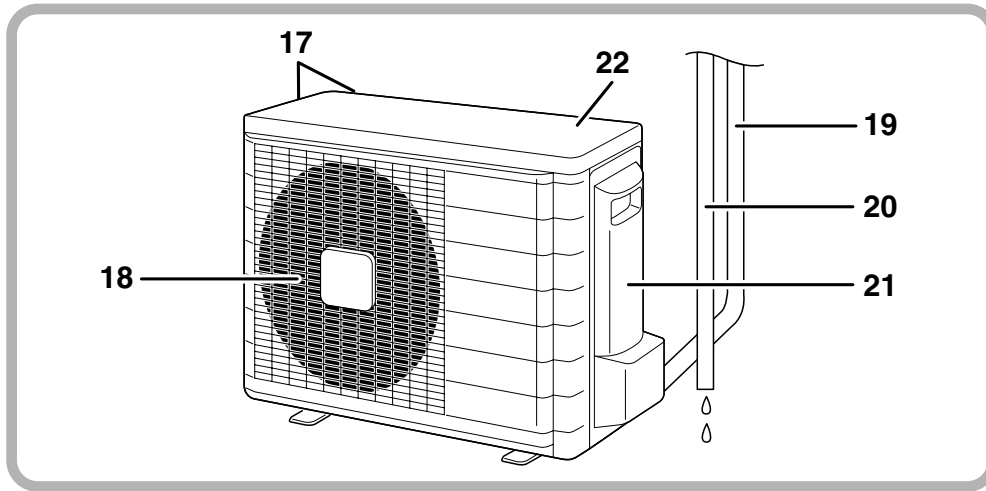

■ Indoor Unit

1. Air filter
2. Photocatalytic deodorizing filter or Air-purifying filter:
 - These filters are attached to the inside of the air filters.
3. Air inlet
4. Front panel
5. Panel tab
6. Room temperature sensor:
 - It senses the air temperature around the unit.
7. INTELLIGENT EYE sensor:
 - It detects the movements of people and automatically switches between normal operation and energy saving operation. (page 18.)
8. Display
9. Air outlet
10. Flaps (horizontal blades): (page 12.)
11. Louvres (vertical blades):
 - The louvres are inside of the air outlet. (page 13.)

12. Indoor Unit ON/OFF switch: (page 10.)

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table.

	Mode	Temperature setting	Air flow rate
FTK	COOL	22 °C	AUTO
FTX	AUTO	25 °C	AUTO

- This switch is useful when the remote controller is missing.

13. Operation lamp (green)

14. TIMER lamp (Yellow): (page 20.)

15. INTELLIGENT EYE lamp (green): (page 18.)

16. Signal receiver:

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a short beep.
 - Operation startbeep-beep
 - Settings changedbeep
 - Operation stopbeeeeeeep

■ Outdoor Unit

17. Air inlet: (Back and side)
18. Air outlet
19. Refrigerant piping and inter-unit cable
20. Drain hose

21. Earth terminal:

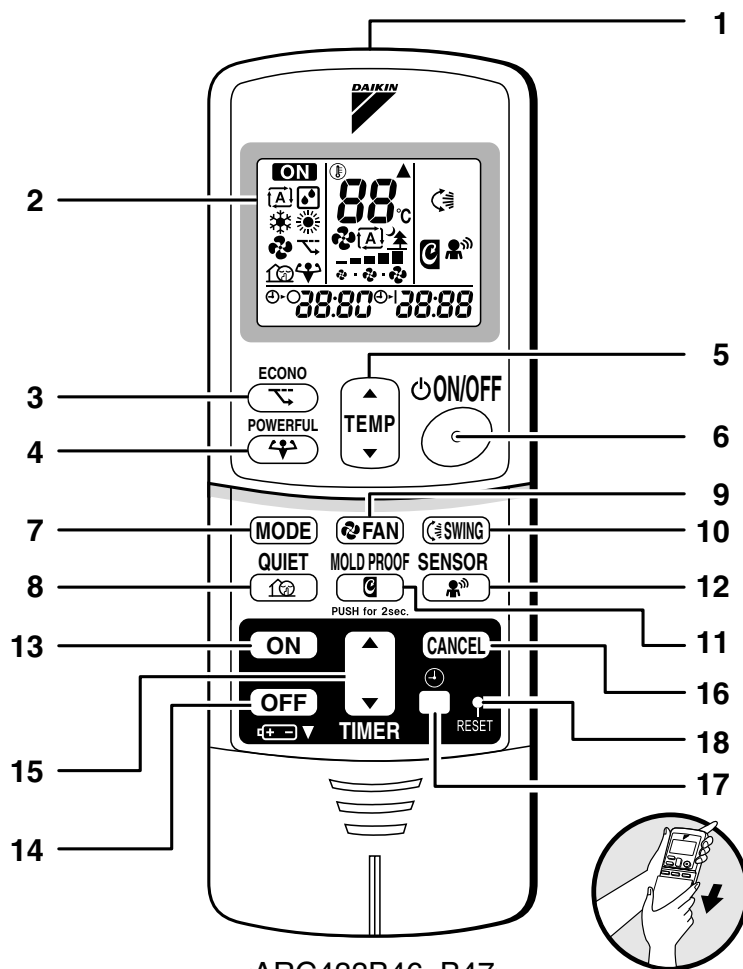
- It is inside of this cover.

22. Outside air temperature sensor:

- It senses the ambient temperature around the unit.

Appearance of the outdoor unit may differ from some models.

■ Remote Controller




<ARC433B46, B47>

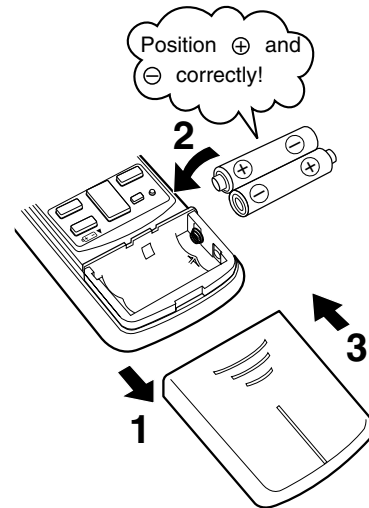
- 1. Signal transmitter:**
 - It sends signals to the indoor unit.
- 2. Display:**
 - It displays the current settings.
 - (In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
- 3. ECONO button:**
 - ECONO operation (page 16.)
- 4. POWERFUL button:**
 - POWERFUL operation (page 14.)
- 5. TEMPERATURE adjustment buttons:**
 - It changes the temperature setting.
- 6. ON/OFF button:**
 - Press this button once to start operation.
 - Press once again to stop it.
- 7. MODE selector button:**
 - It selects the operation mode.
 - (AUTO/DRY/COOL/HEAT/FAN) (page 10.)
- 8. QUIET button:** OUTDOOR UNIT QUIET operation (page 15.)
- 9. FAN setting button:**
 - It selects the air flow rate setting.
- 10. SWING button:** (page 12.)
- 11. MOLD PROOF button:**
 - MOLD PROOF operation (page 17.)
- 12. SENSOR button:** INTELLIGENT EYE operation (page 18.)
- 13. ON TIMER button:** (page 21.)
- 14. OFF TIMER button:** (page 20.)
- 15. TIMER Setting button:**
 - It changes the time setting.
- 16. TIMER CANCEL button:**
 - It cancels the timer setting.
- 17. CLOCK button:** (page 9.)
- 18. RESET button:**
 - Restart the unit if it freezes.
 - Use a thin object to push.

2.3 Preparation Before Operation

Preparation Before Operation

■ To set the batteries

1. Press  with a finger and slide the front cover to take it off.
2. Set two dry batteries (AAA).
3. Set the front cover as before.



ATTENTION

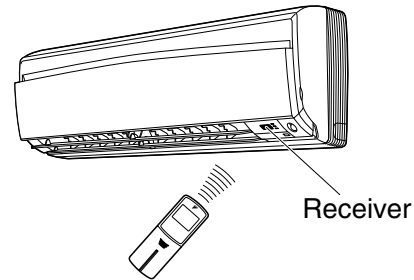
■ About batteries

- When replacing the batteries, use batteries of the same type, and replace the two old batteries together.
- When the system is not used for a long time, take the batteries out.
- We recommend replacing once a year, although if the remote controller display begins to fade or if reception deteriorates, please replace with new alkali batteries. Do not use manganese batteries.
- The attached batteries are provided for the initial use of the system.
The usable period of the batteries may be short depending on the manufactured date of the air conditioner.

Preparation Before Operation


■ To operate the remote controller

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything to block signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller. Do not get it wet.
- The maximum distance for communication is about 7 m.



■ To fix the remote controller holder on the wall

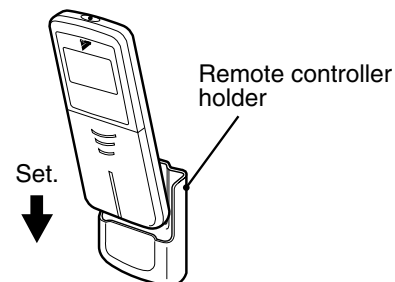1. Choose a place from where the signals reach the unit.
2. Fix the holder to a wall, a pillar, etc. with the screws supplied with the holder.
3. Place the remote controller in the remote controller holder.



- To remove, pull it upwards.

ATTENTION

■ About remote controller

- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote control signals happen to operate another appliance, move that appliance to somewhere else, or consult the shop.

■ To set the clock

1. Press “CLOCK button”.

0:00 is displayed.

⌚ blinks.

2. Press “TIMER setting button” to set the clock to the present time.

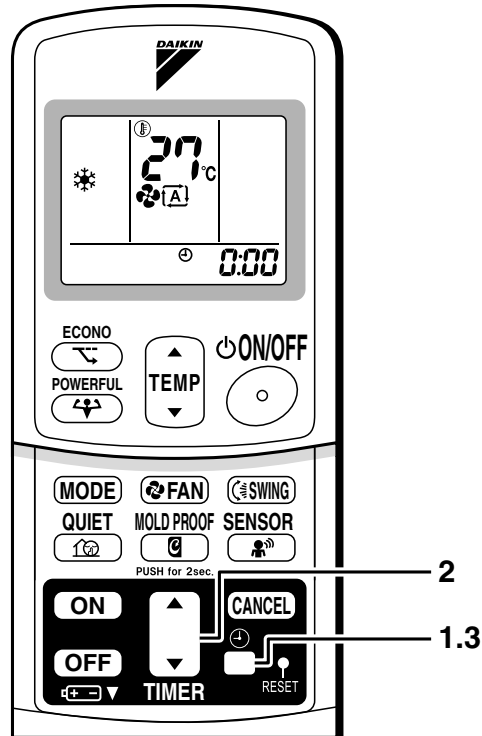
Holding down “▲” or “▼” button rapidly increases or decreases the time display.

3. Press “CLOCK button”.

⌚ blinks.

■ Turn the breaker ON

- Turning ON the breaker opens the flap, then closes it again. (This is a normal procedure.)



NOTE

■ Tips for saving energy

- Be careful not to cool (heat) the room too much. Keeping the temperature setting at a moderate level helps save energy.
- Cover windows with a blind or a curtain. Blocking sunlight and air from outdoors increases the cooling (heating) effect.
- Clogged air filters cause inefficient operation and waste energy. Clean them once in about every two weeks.

Recommended temperature setting

For cooling: 26°C – 28°C
For heating: 20°C – 24°C

■ Please note

- The air conditioner always consumes 15-35 watts of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker OFF.
- Use the air conditioner in the following conditions.

Mode	Operating conditions	If operation is continued out of this range
COOL	Outdoor temperature: 10 to 46 °C Indoor temperature: 18 to 32 °C Indoor humidity: 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.
HEAT	Outdoor temperature: -10 to 20 °C Indoor temperature: 10 to 30 °C	<ul style="list-style-type: none"> • A safety device may work to stop the operation.
DRY	Outdoor temperature: 10 to 46 °C Indoor temperature: 18 to 32 °C Indoor humidity: 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

2.4 AUTO · DRY · COOL · HEAT · FAN Operation

AUTO · DRY · COOL · HEAT · FAN Operation

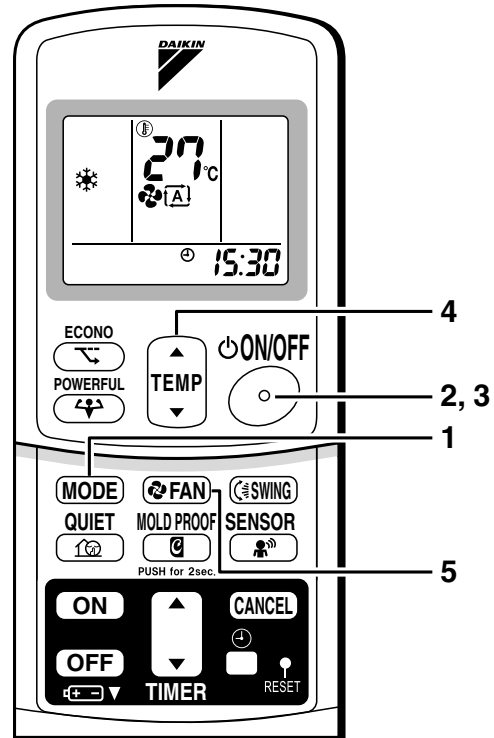
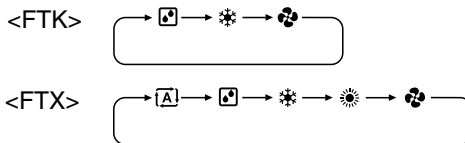
The air conditioner operates with the operation mode of your choice.
 From the next time on, the air conditioner will operate with the same operation mode.

■ To start operation

1. Press “MODE selector button” and select a operation mode.


- Each pressing of the button advances the mode setting in sequence.

- : AUTO
- : DRY
- : COOL
- : HEAT
- : FAN



2. Press “ON/OFF button” .

- The OPERATION lamp lights up.



■ To stop operation

3. Press “ON/OFF button” again.

- Then OPERATION lamp goes off.






■ To change the temperature setting

4. Press “TEMPERATURE adjustment button”


DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like.

■ To change the air flow rate setting

5. Press “FAN setting button”.

DRY mode	AUTO or COOL or HEAT or FAN mode
The air flow rate setting is not variable.	Five levels of air flow rate setting from “  ” to “  ” plus “  ” “  ” are available. 

- Indoor unit quiet operation

When the air flow is set to “”, the noise from the indoor unit will become quieter. Use this when making the noise quieter.

The unit might lose power when the fan strength is set to a weak level.

NOTE

■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.

■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and fan strength, so manual adjustment of these functions is unavailable.

■ Note on AUTO operation

- In AUTO operation, the system selects an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, you can manually select the operation mode and setting you like.

■ Note on air flow rate setting


- At smaller air flow rates, the cooling (heating) effect is also smaller.

2.5 Adjusting the Airflow Direction

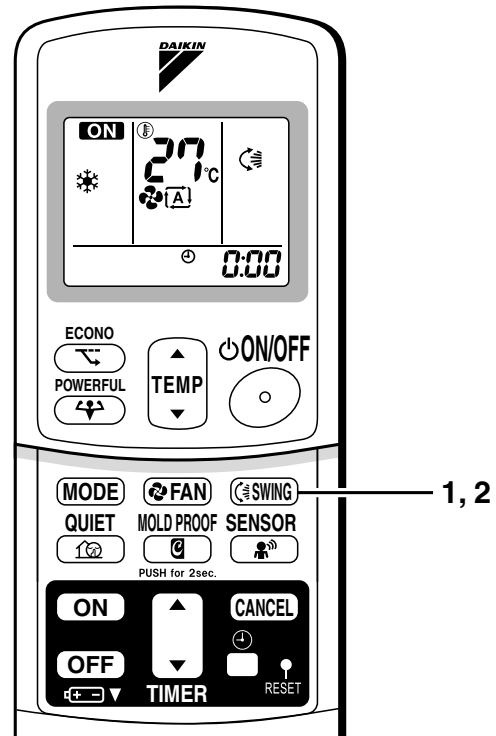
Adjusting the Air Flow Direction

You can adjust the air flow direction to increase your comfort.

■ To adjust the horizontal blades (flaps)

1. Press “SWING button”.
 - “” is displayed on the LCD and the flaps will begin to swing.
2. When the flaps have reached the desired position, press “SWING button” once more.

The display will go blank.
The flaps will stop moving.




■ To adjust the vertical blades (louvres)

Hold the knob and move the louvres.

(You will find a knob on the left-side and the right-side blades.)

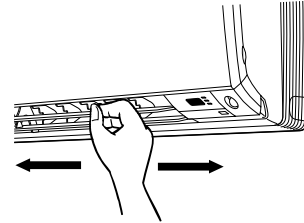- When the unit is installed in the corner of a room, the direction of the louvers should be facing away from the wall.
If they face the wall, the wall will block off the wind, causing the cooling (or heating) efficiency to drop.




Notes on flaps and louvres angles

- When “**SWING button**” is selected, the flaps swinging range depends on the operation mode. (See the figure.)
- If the unit is operated after being stopped with the flaps pointed down in cooling or dry operation, the flaps will automatically move to a horizontal position after about one hour to prevent condensation from forming on them.

■ ATTENTION

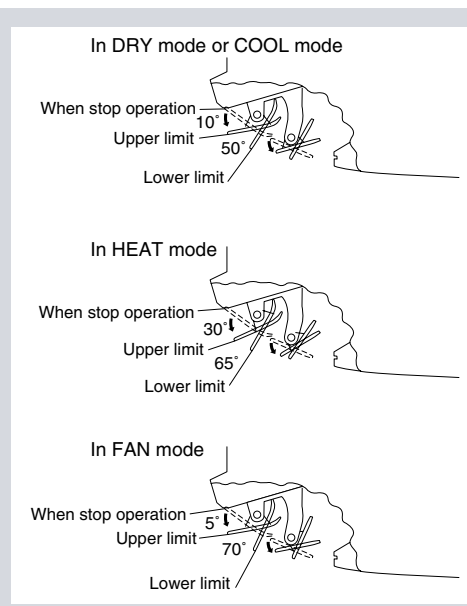- Always use a remote controller to adjust the flaps angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvres. Inside the air outlet, a fan is rotating at a high speed.




2.6 POWERFUL Operation

POWERFUL Operation

POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity .


■ To start POWERFUL operation

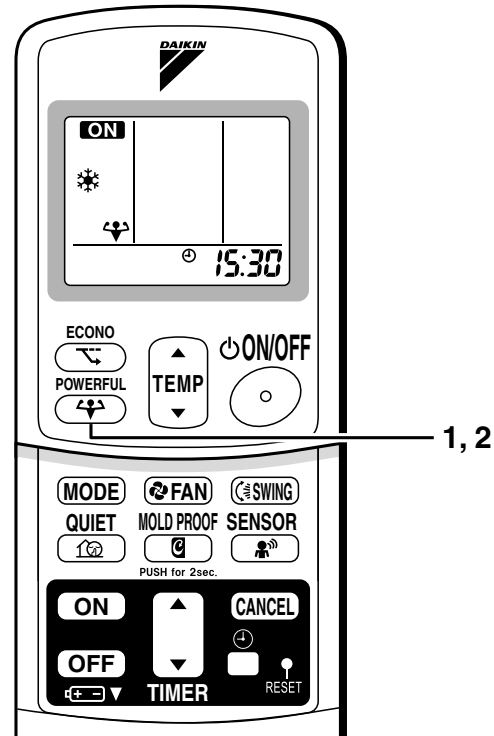
1. Press “POWERFUL button”.

- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the settings which were used before POWERFUL operation.
- When using POWERFUL operation, there are some functions which are not available.
- “” is displayed on the LCD.

■ To cancel POWERFUL operation


2. Press “POWERFUL button” again.

- “” disappears from the LCD.



NOTE

■ Notes on POWERFUL operation

- POWERFUL Operation cannot be used together with ECONO or QUIET Operation. After-press priority is given.
- POWERFUL Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- **In COOL and HEAT mode**
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the air flow rate be fixed to the maximum setting.
The temperature and air flow settings are not variable.
- **In DRY mode**
The temperature setting is lowered by 2.5°C and the air flow rate is slightly increased.
- **In FAN mode**
The air flow rate is fixed to the maximum setting.

2.7 OUTDOOR UNIT QUIET Operation

OUTDOOR UNIT QUIET Operation

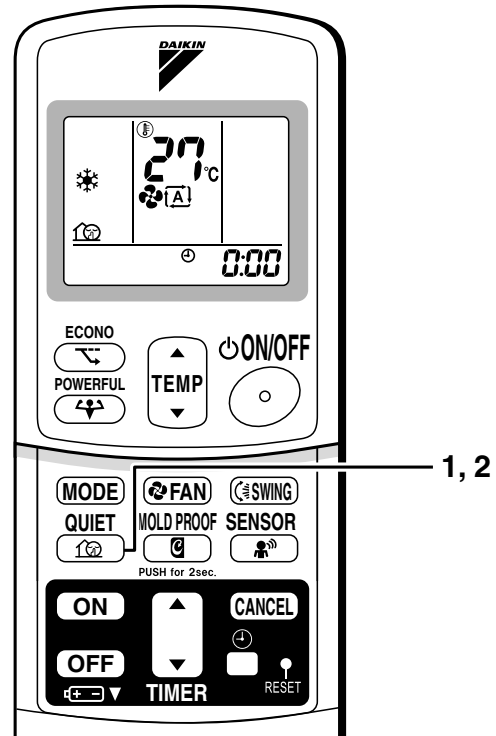
OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

■ To start OUTDOOR UNIT QUIET operation

1. Press “QUIET button”.
 - “” is displayed on the LCD.

■ To cancel OUTDOOR UNIT QUIET operation

2. Press “QUIET button” again.
 - “” disappears from the LCD.



NOTE

■ Note on OUTDOOR UNIT QUIET operation

- If using a multi system, this function will work only when the OUTDOOR UNIT QUIET operation is set on all operated indoor units.
- This function is available in COOL, HEAT, and AUTO modes. (This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time. Priority is given to POWERFUL operation.

2.8 ECONO Operation

ECONO Operation

ECONO operation is a function which enables efficient operation by lowering the maximum power consumption value.

■ To start ECONO operation

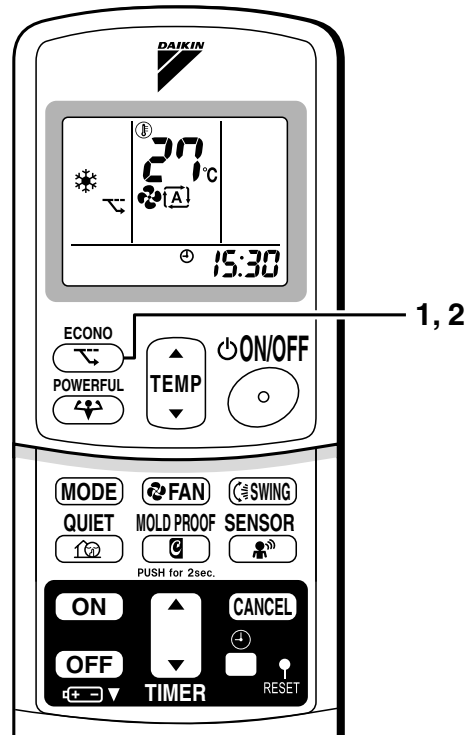
1. Press “ECONO button” .

- “” is displayed on the LCD.


■ To cancel ECONO operation

2. Press “ECONO button” again.

- “” disappears from the LCD.



NOTE

- ECONO Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY, and HEAT modes. The fan strength does not change in ECONO operation.
- POWERFUL operation and ECONO operation cannot be used at the same time. Priority is given to POWERFUL operation.
- Power consumption may not drop even if ECONO operation is used, when the level of power consumption is already low.

2.9 MOLD PROOF Operation

MOLD PROOF Operation

MOLD PROOF operation is a function which reduces the spread of mold by using Fan mode to lower the humidity inside the indoor unit.

■ To set MOLD PROOF operation

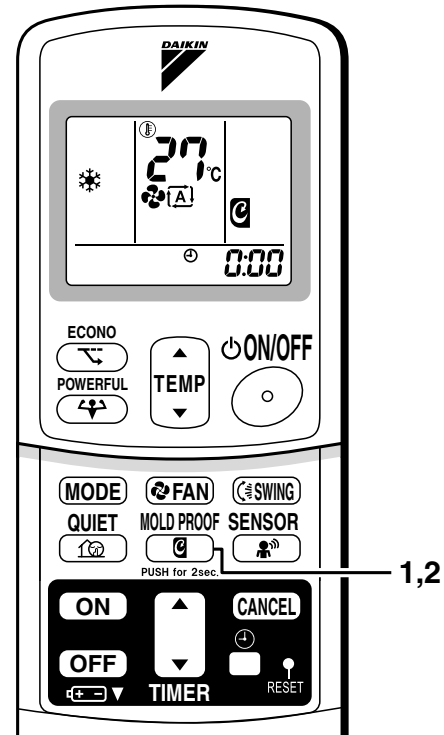
1. Press and hold the MOLD PROOF button for two seconds.

- “” is displayed on the LCD.

■ To cancel MOLD PROOF operation

2. Press and hold the MOLD PROOF button for two seconds one more time.

- “” disappears from the LCD.



NOTE

- MOLD PROOF operation will operate for approximately one hour after dry or cooling mode is turned off.
- This function is not designed to remove existing dust or mold.
- MOLD PROOF operation is not available when the unit is turned off using the OFF TIMER.

2.10 INTELLIGENT EYE Operation


INTELLIGENT EYE Operation

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.

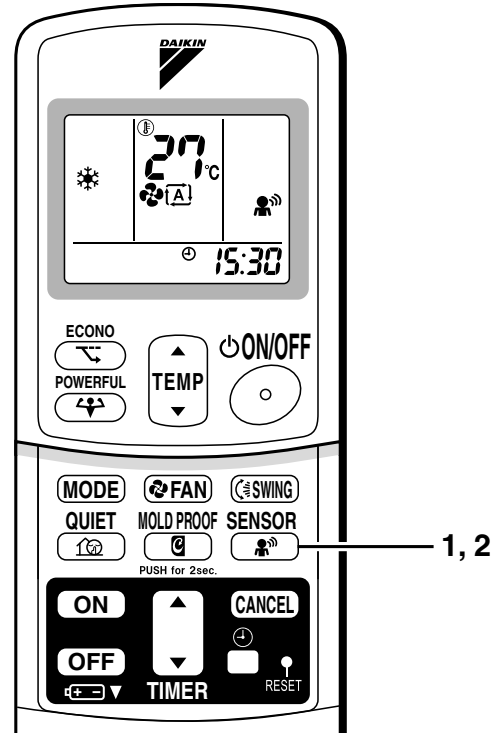
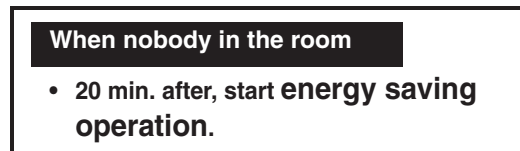
■ To start INTELLIGENT EYE operation

1. Press “SENSOR button”.
 - “” is displayed on the LCD.

■ To cancel the INTELLIGENT EYE operation

2. Press “SENSOR button” again.
 - “” disappears from the LCD.

[EX.]




“INTELLIGENT EYE” is useful for Energy Saving

■ Energy saving operation

- Change the temperature -2°C in heating / $+2^{\circ}\text{C}$ in cooling / $+2^{\circ}\text{C}$ in dry mode from set temperature.
- Decrease the air flow rate slightly in fan operation. (In FAN mode only)

Notes on “INTELLIGENT EYE”

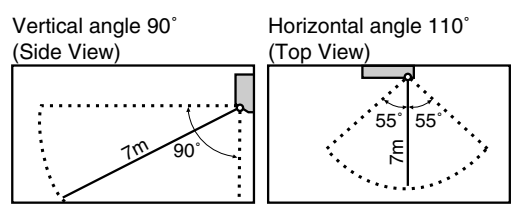- Application range is as follows.



- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during powerful operation.
- Night set mode (page 20.) will not go on during you use INTELLIGENT EYE operation.

CAUTION

- Do not place large objects near the sensor.
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect objects it shouldn't as well as not detect objects it should.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

2.11 TIMER Operation

TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

■ To use OFF TIMER operation

- Check that the clock is correct.
If not, set the clock to the present time.
(page 9.)

1. Press “OFF TIMER button”.

0:00 is displayed.

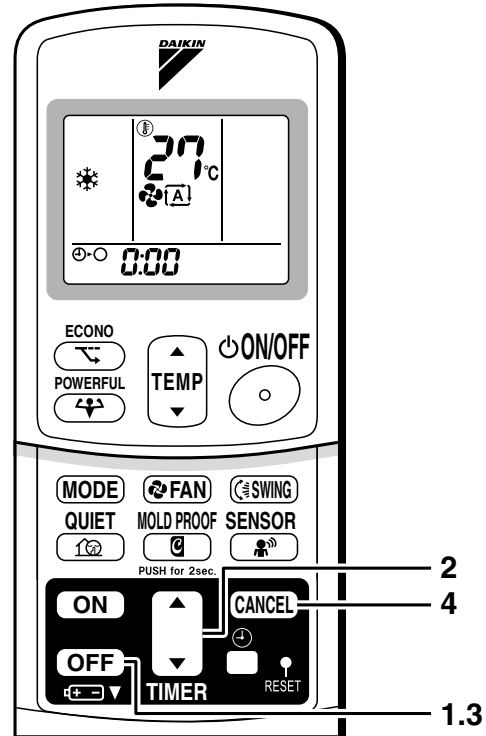

⊖○ blinks.

2. Press “TIMER Setting button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press “OFF TIMER button” again.

- The TIMER lamp lights up.



■ To cancel the OFF TIMER operation

4. Press “CANCEL button”.

- The TIMER lamp goes off.

Notes

- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes)

■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time (page 9.).

1. Press “ON TIMER button”.

6:00 is displayed.



⊕-| blinks.

2. Press “TIMER Setting button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press “ON TIMER button” again.

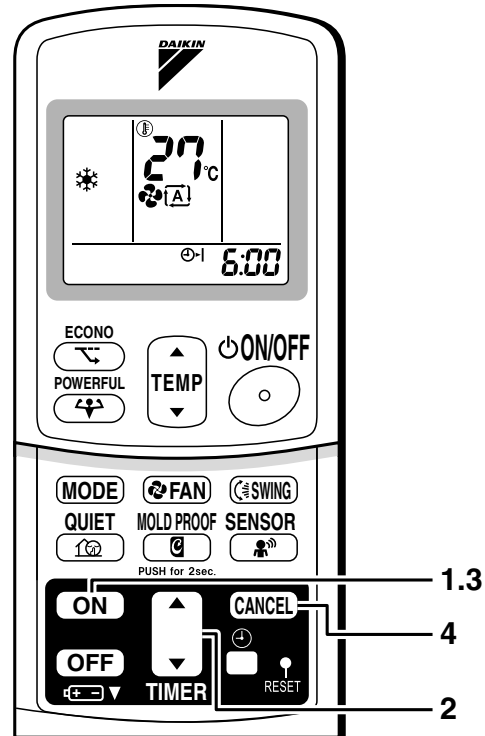- The TIMER lamp lights up.




■ To cancel ON TIMER operation

4. Press “CANCEL button”.

- The TIMER lamp goes off.

■ To combine ON TIMER and OFF TIMER

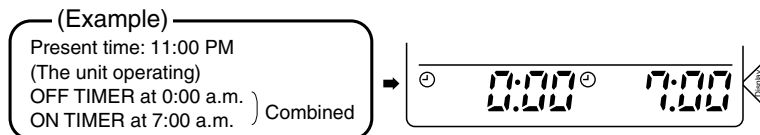- A sample setting for combining the two timers is shown below.



ATTENTION

■ In the following cases, set the timer again.

- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote controller.

2.12 Care and Cleaning

Care and Cleaning

⚠ CAUTION Before cleaning, be sure to stop the operation and turn the breaker OFF.

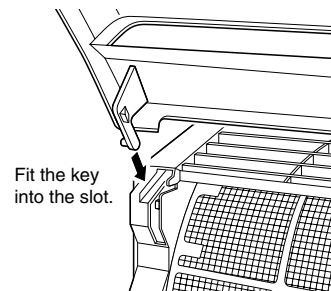
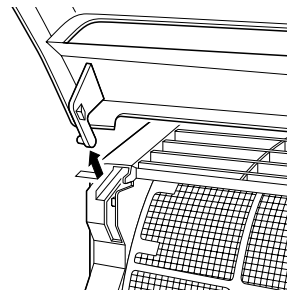
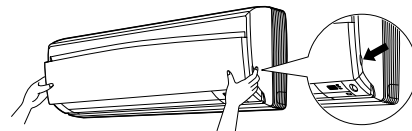
Units

■ Indoor unit, Outdoor unit and Remote controller

1. Wipe them with dry soft cloth.

■ Front panel

1. **Open the front panel.**
 - Hold the panel by the tabs on the two sides and lift it until it stops with a click.
2. **Remove the front panel.**
 - Lift the front panel up, slide it slightly to the right, and remove it from the horizontal axle.
3. **Clean the front panel.**
 - Wipe it with a soft cloth soaked in water.
 - Only neutral detergent may be used.
 - In case of washing the panel with water, dry it with cloth, dry it up in the shade after washing.
4. **Attach the front panel.**
 - Set the 2 keys of the front panel into the slots and push them in all the way.
 - Close the front panel slowly and push the panel at the 3 points.
(1 on each side and 1 in the middle.)



⚠ CAUTION

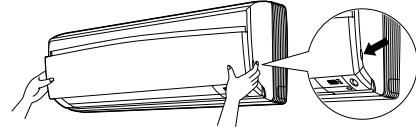
- Don't touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front grille, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front grille, support the grille securely with hand to prevent it from falling.
- For cleaning, do not use hot water above 40 °C, benzine, gasoline, thinner, nor other volatile oils, polishing compound, scrubbing brushes, nor other hand stuff.
- After cleaning, make sure that the front grille is securely fixed.

Filters

1. Open the front grille. (page 22.)



2. Pull out the air filters.

- Push a little upwards the tab at the center of each air filter, then pull it down.



3. Take off the air-purifying filter, photocatalytic deodorizing filter.

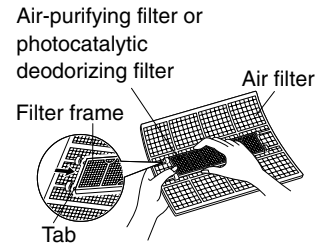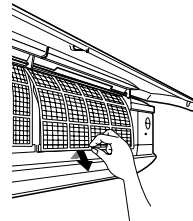- Hold the recessed parts of the frame and unhook the four claws.




4. Clean or replace each filter.

See figure.

5. Set the air filter, air-purifying filter and photocatalytic deodorizing filter as they were and close the front grille.

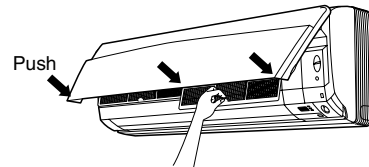
- Insert claws of the filters into slots of the front grille. Close the front grille slowly and push the grille at the 3 points. (1 on each sides and 1 in the middle.)



■ Air Filter

1. Wash the air filters with water or clean them with vacuum cleaner.

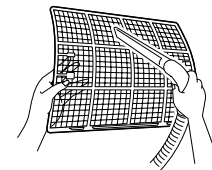- If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
- It is recommended to clean the air filters every two weeks.




■ Air-Purifying Filter (green)

(Replace approximately once every 3 months.)

1. Detach the filter element and attach a new one.

- Insert with the green side up.
- It is recommended to replace the air purifying filter every three months.



■ Photocatalytic Deodorizing Filter (gray)

[Maintenance]

1. Dry the photocatalytic deodorizing filter in the sun.

- After removing the dust with a vacuum cleaner, place the filter in the sun for approximately 6 hours. By drying the photocatalytic deodorizing filter in the sun, its deodorizing and antibacterial capabilities are regenerated.
- Because the filter material is paper, it can not be cleaned with water.
- It is recommended dry the filter once every 6 months.

[Replacement]

1. Detach the filter element and attach a new one.

NOTE

- Operation with dirty filters :
 - (1) cannot deodorize the air. (2) cannot clean the air.
 - (3) results in poor heating or cooling. (4) may cause odour.
- The air purifying filter and Photocatalytic deodorizing filter cannot be reused, even if washed.
- In principle, there is no need to replace the photocatalytic deodorizing filter. Remove the dust periodically with a vacuum cleaner. However, it is recommended to replace the filter in the following cases.
 - (1) The paper material is torn or broken during cleaning.
 - (2) The filter has become extremely dirty after long use.
- To order air purifying filter or photocatalytic deodorizing filter, contact to the service shop where you bought the air conditioner.
- Dispose of old air filters as non-burnable waste and photocatalytic deodorizing filters as burnable waste.

Part name	Part No.
Photocatalytic deodorizing filter (without frame)	KAZ970A42
Air purifying filter (without frame)	KAF970A42

Check

Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
Check that the earth wire is not disconnected or broken.
Check that the drain comes smoothly out of the drain hose during COOL or DRY operation. <ul style="list-style-type: none"> • If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

■ Before a long idle period

1. Operate the “Fan only” for several hours on a fine day to dry out the inside.
 - Press “MODE selector button” and select “Fan” operation.
 - Press “ON/OFF button” and start operation.
2. Clean the air filters and set them again.
3. Take out batteries from the remote controller.
4. Turn OFF the breaker for the room air conditioner.

2.13 Troubleshooting

Trouble Shooting

These cases are not troubles.

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Explanation
Operation does not start soon. <ul style="list-style-type: none"> When ON/OFF button was pressed soon after operation was stopped. When the mode was reselected. 	<ul style="list-style-type: none"> This is to protect the air conditioner. You should wait for about 3 minutes.
Hot air does not flow out soon after the start of heating operation.	<ul style="list-style-type: none"> The air conditioner is warming up. You should wait for 1 to 4 minutes. (The system is designed to start discharging air only after it has reached a certain temperature.)
The heating operation stops suddenly and a flowing sound is heard.	<ul style="list-style-type: none"> The system is taking away the frost on the outdoor unit. You should wait for about 3 to 8 minutes.
The outdoor unit emits water or steam.	<ul style="list-style-type: none"> In HEAT mode <ul style="list-style-type: none"> The frost on the outdoor unit melts into water or steam when the air conditioner is in defrost operation. In COOL or DRY mode <ul style="list-style-type: none"> Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.
Mists come out of the indoor unit.	<ul style="list-style-type: none"> This happens when the air in the room is cooled into mist by the cold air flow during cooling operation.
The indoor unit gives out odour.	<ul style="list-style-type: none"> This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the air flow. (If this happens, we recommend you to have the indoor unit washed by a technician. Consult the service shop where you bought the air conditioner.)
The outdoor fan rotates while the air conditioner is not in operation.	<ul style="list-style-type: none"> After operation is stopped: <ul style="list-style-type: none"> The outdoor fan continues rotating for another 60 seconds for system protection. While the air conditioner is not in operation: <ul style="list-style-type: none"> When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.
The operation stopped suddenly. (OPERATION lamp is on)	<ul style="list-style-type: none"> For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.

Check again.

Please check again before calling a repair person.


Case	Check
The air conditioner does not operate. (OPERATION lamp is off)	<ul style="list-style-type: none"> • Hasn't a breaker turned OFF or a fuse blown? • Isn't it a power failure? • Are batteries set in the remote controller? • Is the timer setting correct?
Cooling (Heating) effect is poor.	<ul style="list-style-type: none"> • Are the air filters clean? • Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? • Is the temperature setting appropriate? • Are the windows and doors closed? • Are the air flow rate and the air direction set appropriately? • Is the unit set to the INTELLIGENT EYE mode? (page 18.)
Operation stops suddenly. (OPERATION lamp flashes.)	<ul style="list-style-type: none"> • Are the air filters clean? • Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? Clean the air filters or take all obstacles away and turn the breaker OFF. Then turn it ON again and try operating the air conditioner with the remote controller. If the lamp still flashes, call the service shop where you bought the air conditioner.
An abnormal functioning happens during operation.	<ul style="list-style-type: none"> • The air conditioner may malfunction with lightning or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote controller.

Call the service shop immediately.

 **WARNING**

- When an abnormality (such as a burning smell) occurs, stop operation and turn the breaker OFF.
Continued operation in an abnormal condition may result in troubles, electric shocks or fire.
Consult the service shop where you bought the air conditioner.
- Do not attempt to repair or modify the air conditioner by yourself.
Incorrect work may result in electric shocks or fire.
Consult the service shop where you bought the air conditioner.

If one of the following symptoms takes place, call the service shop immediately.

<ul style="list-style-type: none"> ■ The power cord is abnormally hot or damaged. ■ An abnormal sound is heard during operation. ■ The safety breaker, a fuse, or the earth leakage breaker cuts off the operation frequently. ■ A switch or a button often fails to work properly. ■ There is a burning smell. ■ Water leaks from the indoor unit. 		<p>Turn the breaker OFF and call the service shop.</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------	--------------------------------------------------------

<ul style="list-style-type: none"> ■ After a power failure The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while. 	<ul style="list-style-type: none"> ■ Lightning If lightning may strike the neighbouring area, stop operation and turn the breaker OFF for system protection.
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

We recommend periodical maintenance.

In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist aside from regular cleaning by the user. For specialist maintenance, contact the service shop where you bought the air conditioner.
The maintenance cost must be born by the user.

Part 6

Service Diagnosis

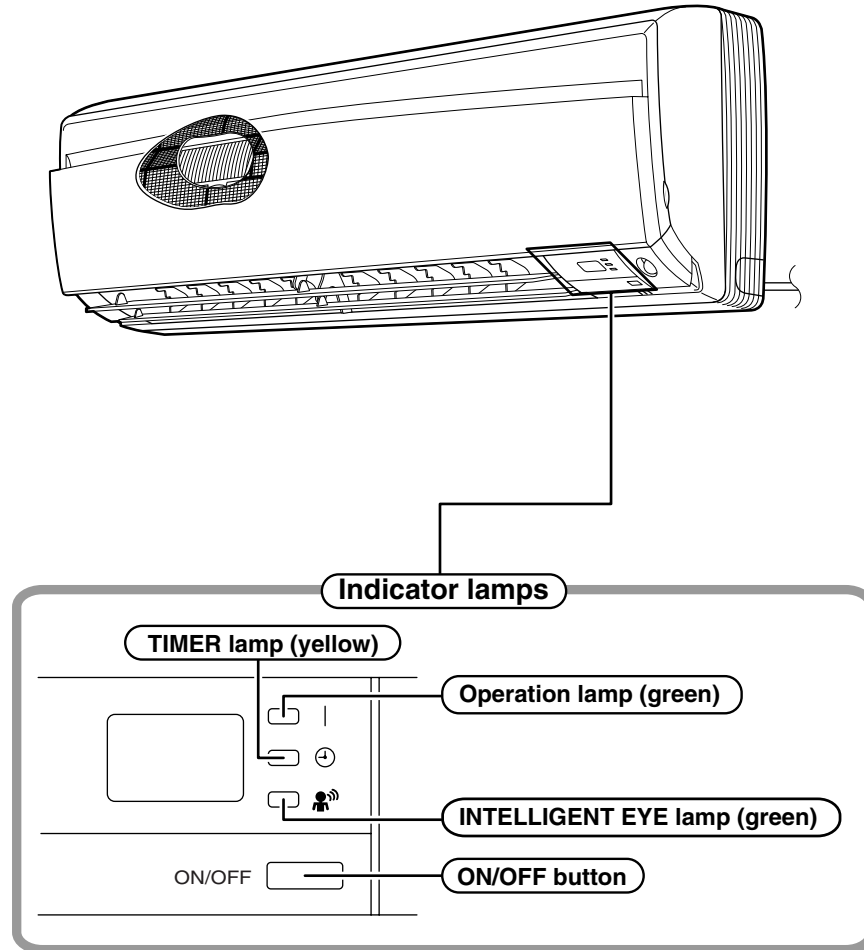
1. Caution for Diagnosis.....	90
2. Problem Symptoms and Measures	91
3. Service Check Function	92
4. Troubleshooting	95
4.1 Error Codes and Description	95
4.2 Indoor Unit PCB Abnormality	96
4.3 Freeze-up Protection Control or High Pressure Control.....	97
4.4 Fan Motor or Related Abnormality	99
4.5 Thermistor or Related Abnormality (Indoor Unit).....	102
4.6 Signal Transmission Error (between Indoor and Outdoor Unit)	103
4.7 Unspecified Voltage (between Indoor and Outdoor Units)	105
4.8 Outdoor Unit PCB Abnormality.....	106
4.9 OL Activation (Compressor Overload)	107
4.10 Compressor Lock	108
4.11 DC Fan Lock	109
4.12 Input Over Current Detection	110
4.13 Four Way Valve Abnormality	111
4.14 Discharge Pipe Temperature Control.....	113
4.15 High Pressure Control in Cooling	114
4.16 Compressor System Sensor Abnormality	116
4.17 Position Sensor Abnormality	117
4.18 DC Voltage / Current Sensor Abnormality.....	118
4.19 Thermistor or Related Abnormality (Outdoor Unit).....	119
4.20 Electrical Box Temperature Rise.....	121
4.21 Radiation Fin Temperature Rise	123
4.22 Output Over Current Detection.....	125
4.23 Insufficient Gas.....	127
4.24 Over-voltage Detection.....	129
5. Check	130
5.1 How to Check.....	130

1. Caution for Diagnosis

The operation lamp flashes when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated or when the thermistor malfunctions, disabling equipment operation.
 2. When a signal transmission error occurs between the indoor and outdoor units.
- In either case, conduct the diagnostic procedure described in the following pages.

Location of Operation Lamp



Troubleshooting with LED Indication

The outdoor unit has one green LED (LEDA) on the PCB. The flashing green LED indicates normal condition of microcomputer operation.

2. Problem Symptoms and Measures


Symptom	Check Item	Details of Measure	Reference Page
None of the Units Operates.	Check the power supply.	Check to make sure that the rated voltage is supplied.	—
	Check the type of the indoor units.	Check to make sure that the indoor unit type is compatible with the outdoor unit.	—
	Check the outdoor air temperature.	Heating operation cannot be used when the outdoor air temperature is 20°C or higher (only for heat pump model), and cooling operation cannot be used when the outdoor air temperature is below 10°C.	—
	Diagnosis with remote controller indication	—	95
	Check the remote controller addresses.	Check to make sure that address settings for the remote controller and indoor unit are correct.	—
Operation Sometimes Stops.	Check the power supply.	A power failure of 2 to 10 cycles can stop air conditioner operation. (Operation lamp OFF)	—
	Check the outdoor air temperature.	Heating operation cannot be used when the outdoor air temperature is 20°C or higher (only for heat pump model), and cooling operation cannot be used when the outdoor air temperature is below 10°C.	—
	Diagnosis with remote controller indication	—	95
Equipment operates but does not cool, or does not heat (only for heat pump model).	Check for wiring and piping errors in the indoor and outdoor units connection wires and pipes.	Conduct the wiring/piping error check described on the product diagnosis nameplate.	—
	Check for thermistor detection errors.	Check to make sure that the main unit's thermistor has not dismantled from the pipe holder.	—
	Check for faulty operation of the electronic expansion valve.	Set the units to cooling operation, and compare the temperatures of the liquid side connection pipes of the connection section among rooms to check the opening and closing operation of the electronic expansion valves of the individual units.	—
	Diagnosis with remote controller indication	—	95
	Diagnosis by service port pressure and operating current	Check for insufficient gas.	134
Large Operating Noise and Vibrations	Check the output voltage of the power transistor.	—	135
	Check the power transistor.	—	—
	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the Engineering Data Book, etc.) are provided.	—

3. Service Check Function

In the **ARC433** series remote controller, the temperature display sections on the main unit indicate corresponding codes.

Check Method 1

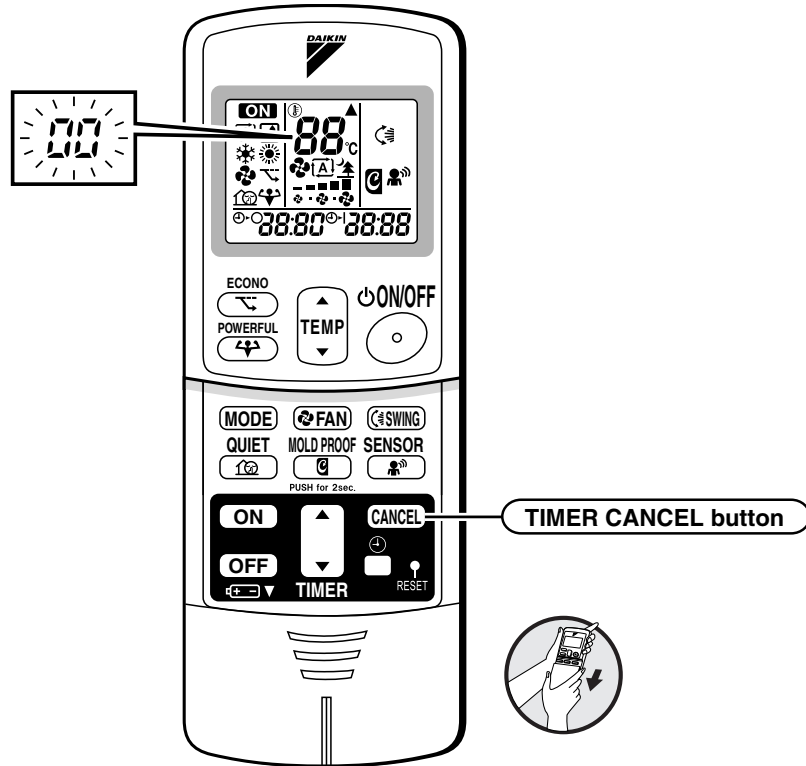1. When the timer cancel button is held down for 5 seconds, a “00” indication flashes on the temperature display section.



<ARC433B46, 47>

(R8446)

2. Press the timer cancel button repeatedly until a continuous beep is produced.
 - The code indication changes in the sequence shown below, and notifies with a long beep.

No.	Code	No.	Code	No.	Code
1	00	12	F6	23	R1
2	04	13	C7	24	E1
3	L5	14	R3	25	UR
4	E6	15	H8	26	UH
5	H6	16	H9	27	P4
6	H0	17	C9	28	L3
7	R6	18	C4	29	L4
8	E7	19	C5	30	H7
9	U0	20	J3	31	U2
10	F3	21	J6	32	E8
11	R5	22	E5	33	R4

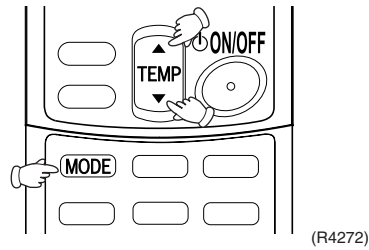


Note:


1. A short beep and two consecutive beeps indicate non-corresponding codes.
2. To cancel the code display, hold the timer cancel button down for 5 seconds. The code display also cancels itself if the button is not pressed for 1 minute.

Check Method 2


1. Enter the diagnosis mode.
Press the 3 buttons (TEMP▲,TEMP▼, MODE) simultaneously.



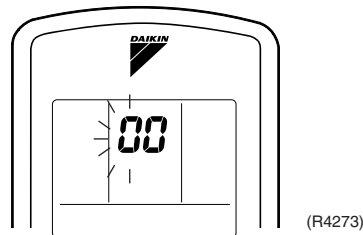
- The digit of the number of tens blinks.
- ★Try again from the start when the digit does not blink.



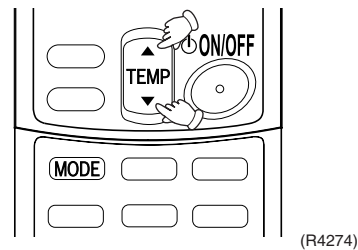
2. Press the TEMP button.
Press TEMP▲ or TEMP▼ and change the digit until you hear the sound of “beep” or “pi pi”.



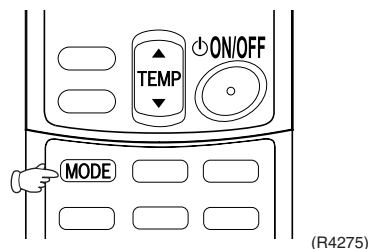
3. Diagnose by the sound.
 - ★“pi” : The number of tens does not accord with the error code.
 - ★“pi pi” : The number of tens accords with the error code.
 - ★“beep” : The both numbers of tens and units accord with the error code. (→ See 7.)
4. Enter the diagnosis mode again.
Press the MODE button.



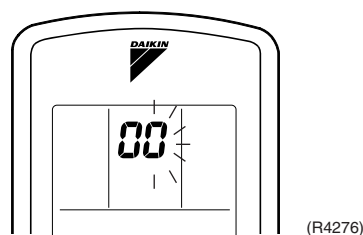- The digit of the number of units blinks.




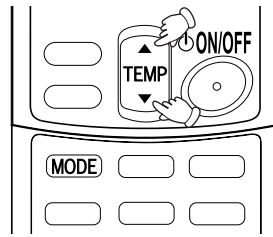5. Press the TEMP button.
Press TEMP▲ or TEMP▼ and change the digit until you hear the sound of “beep”.



(R4277)

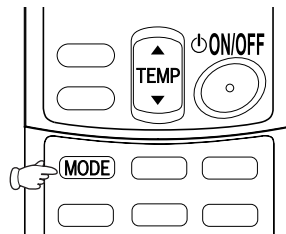6. Diagnose by the sound.
- ★“pi” : The both numbers of tens and units do not accord with the error code.
 - ★“pi pi” : The number of tens accords with the error code.
 - ★“beep” : The both numbers of tens and units accord with the error code.
7. Determine the error code.
The digits indicated when you hear the “beep” sound are error code.
(Error codes and description → Refer to page 95.)
8. Exit from the diagnosis mode.
Press the MODE button.



(R4278)

4. Troubleshooting

4.1 Error Codes and Description


	Code Indication	Description	Reference Page	
System	00	Normal	—	
	U0★	Insufficient gas	127	
	U2	Over-voltage detection	129	
	U4	Signal transmission error (between indoor and outdoor unit)	103	
	UR	Unspecified voltage (between indoor and outdoor unit)	105	
Indoor Unit	R1	Indoor unit PCB abnormality	96	
	R5	Freeze-up protection control or high pressure control	97	
	R6	Fan motor or related abnormality	AC motor (FTK(X)D Series)	99
			DC motor (FTK(X)S Series)	100
	C4	Heat exchanger temperature thermistor abnormality	102	
C9	Room temperature thermistor abnormality	102		
Outdoor Unit	E1	Outdoor unit PCB abnormality	106	
	E5★	OL activation (compressor overload)	107	
	E6★	Compressor lock	108	
	E7	DC fan lock	109	
	E8	Input over current detection	110	
	E9	Four way valve abnormality	111	
	F3	Discharge pipe temperature control	113	
	F6	High pressure control in cooling	114	
	H0	Compressor system sensor abnormality	116	
	H6	Position sensor abnormality	117	
	H8	DC voltage/current sensor abnormality	118	
	H9	Outdoor air thermistor or related abnormality	119	
	J3	Discharge pipe temperature thermistor or related abnormality	119	
	J6	Heat exchanger temperature thermistor or related abnormality	119	
	L3	Electrical box temperature rise	121	
	L4	Radiation fin temperature rise	123	
	L5	Output over current detection	125	
P4	Heat radiation fin thermistor or related abnormality	119		


★: Displayed only when system-down occurs.

4.2 Indoor Unit PCB Abnormality


Remote Controller Display	81
Method of Malfunction Detection	Evaluation of zero-cross detection of power supply by indoor unit.
Malfunction Decision Conditions	When there is no zero-cross detection in approximately 10 continuous seconds.
Supposed Causes	<ul style="list-style-type: none"> ■ Faulty indoor unit PCB ■ Faulty connector connection

Troubleshooting

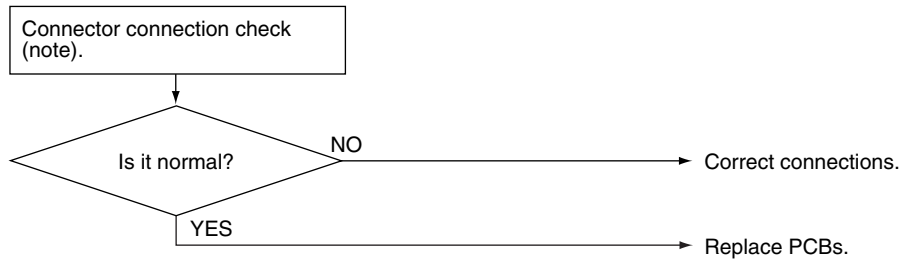 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R7130)

 **Note:** Connector Nos. vary depending on models.

Model Type	Connector No.
Wall Mounted Type 20 / 25 / 35 class	Terminal strip~Control PCB

4.3 Freeze-up Protection Control or High Pressure Control

Remote
Controller
Display

85

Method of
Malfunction
Detection

- High pressure control (heat pump model only)
During heating operations, the temperature detected by the indoor heat exchanger thermistor is used for the high pressure control (stop, outdoor fan stop, etc.)
- Freeze-up protection control (operation halt) is activated during cooling operation according to the temperature detected by the indoor unit heat exchanger thermistor.

Malfunction
Decision
Conditions

- High pressure control
During heating operations, the temperature detected by the indoor heat exchanger thermistor is above 65°C
- Freeze-up protection
When the indoor unit heat exchanger temperature is below 0°C during cooling operation.

Supposed
Causes

- Operation halt due to clogged air filter of the indoor unit.
- Operation halt due to dust accumulation on the indoor unit heat exchanger.
- Operation halt due to short-circuit.
- Detection error due to faulty indoor unit heat exchanger thermistor.
- Detection error due to faulty indoor unit PCB.

Troubleshooting

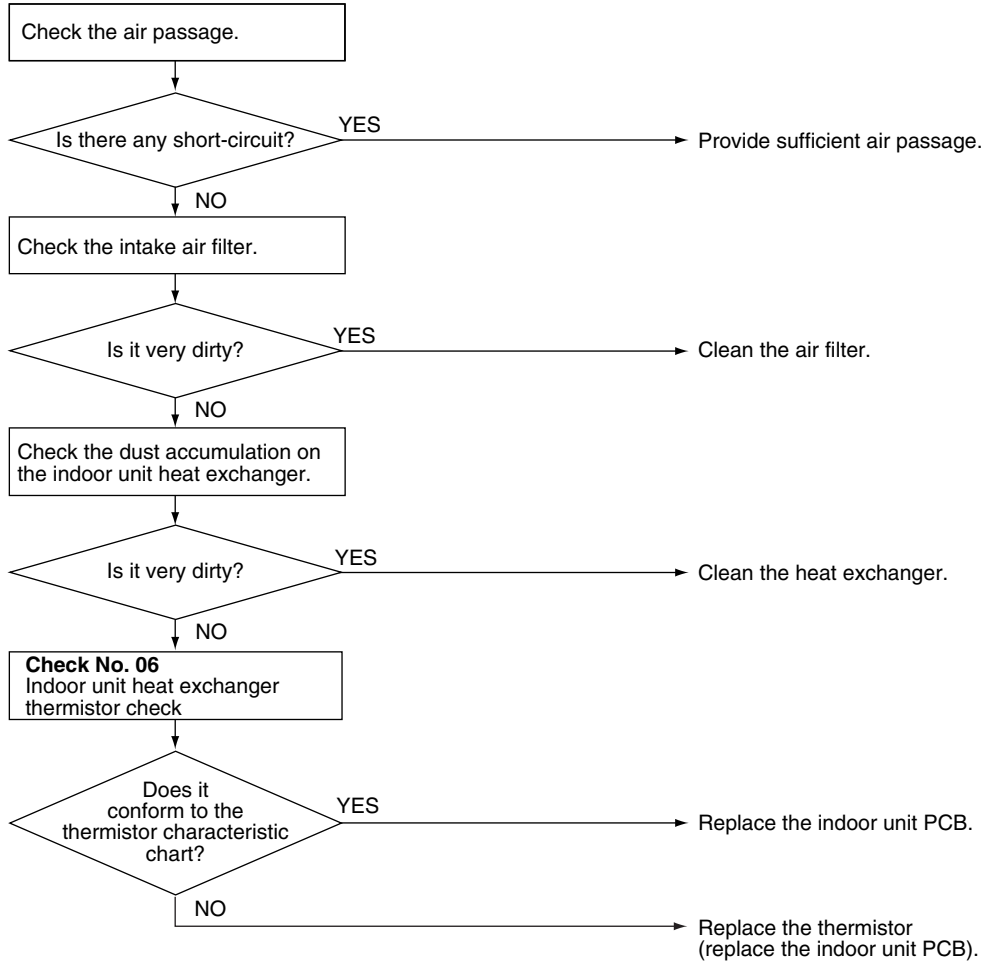


Check No.06
Refer to P.132



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R7131)

4.4 Fan Motor or Related Abnormality

4.4.1 AC Motor

Remote
Controller
Display



Method of
Malfunction
Detection

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

Malfunction
Decision
Conditions

When the detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

Supposed
Causes

- Operation halt due to short circuit inside the fan motor winding.
- Operation halt due to breaking of wire inside the fan motor.
- Operation halt due to breaking of the fan motor lead wires.
- Operation halt due to faulty capacitor of the fan motor.
- Detection error due to faulty indoor unit PCB.

Troubleshooting

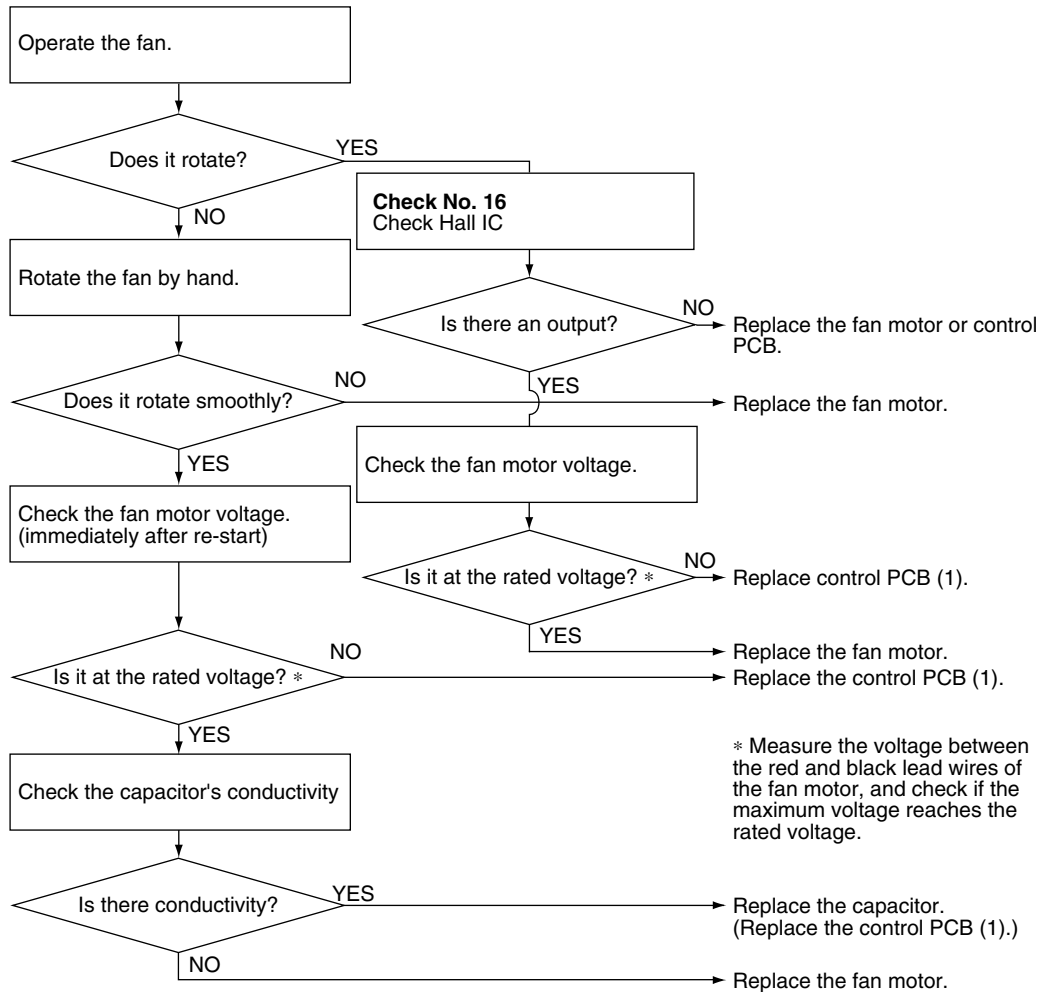


Check No.16
Refer to P.136



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



* Measure the voltage between the red and black lead wires of the fan motor, and check if the maximum voltage reaches the rated voltage.

(R8447)

4.4.2 DC Motor

Remote Controller Display



Method of Malfunction Detection

The rotation speed detected by the [Hall IC](#) during fan motor operation is used to determine abnormal fan motor operation.

Malfunction Decision Conditions

When the detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

Supposed Causes

- Operation halt due to short circuit inside the fan motor winding.
- Operation halt due to breaking of wire inside the fan motor.
- Operation halt due to breaking of the fan motor lead wires.
- Operation halt due to faulty capacitor of the fan motor.
- Detection error due to faulty indoor unit PCB.

Troubleshooting

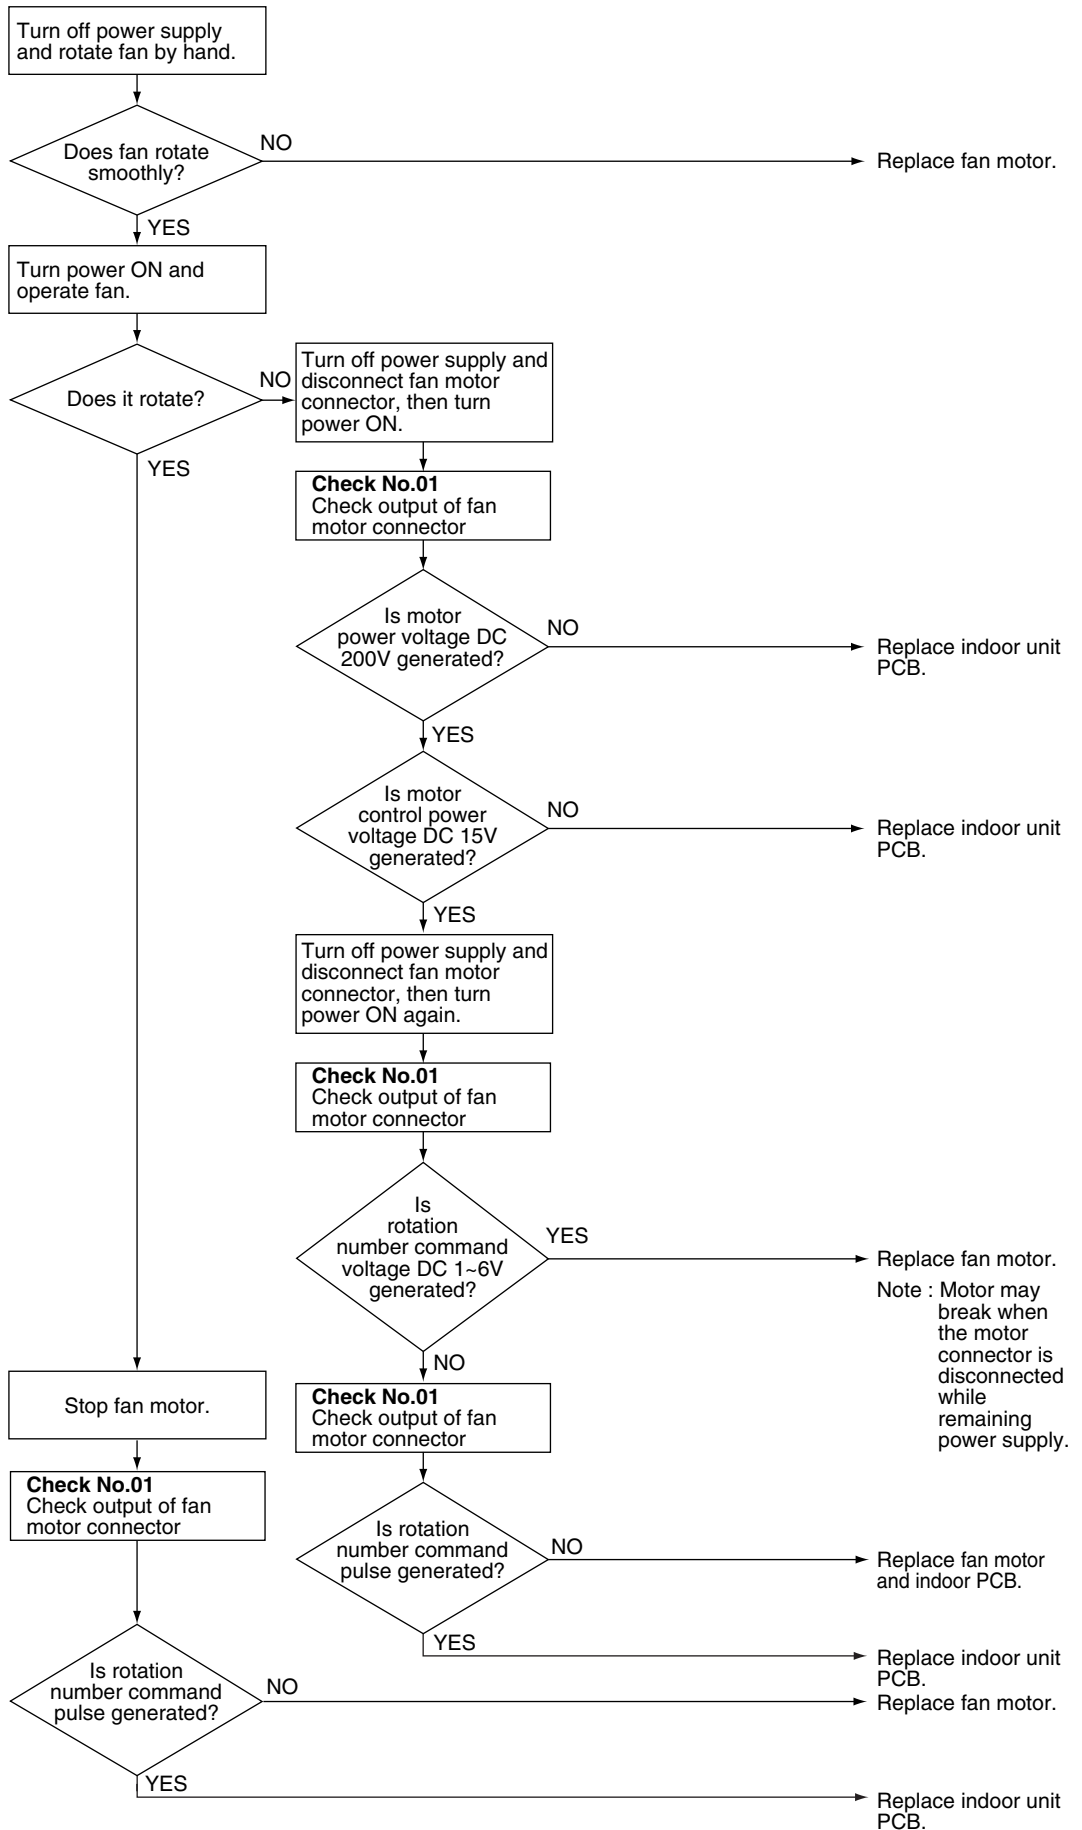


Check No.01
Refer to P.130



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.




(R7133)

4.5 Thermistor or Related Abnormality (Indoor Unit)

Remote Controller Display [4, [9

Method of Malfunction Detection The temperatures detected by the thermistors are used to determine thermistor errors.

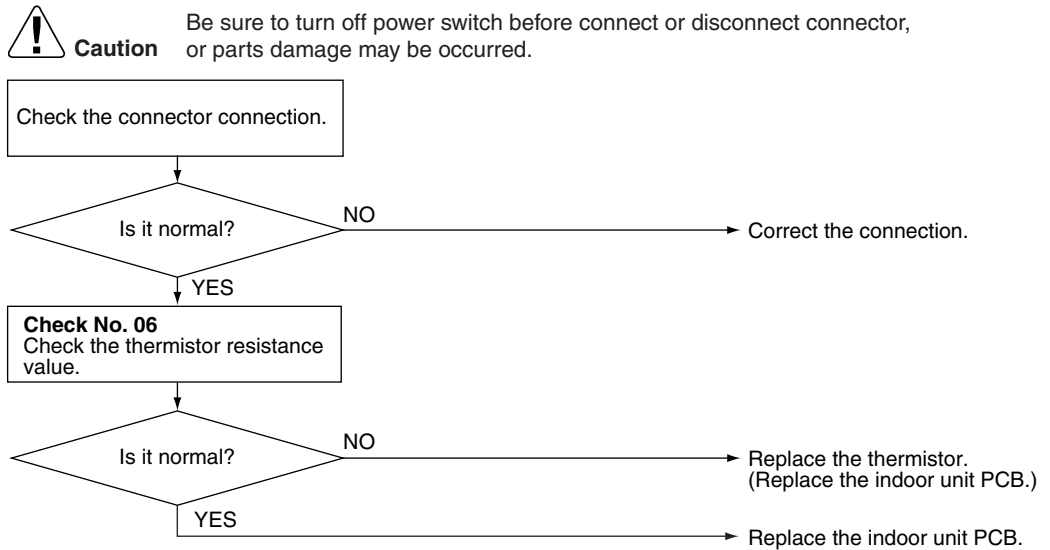
Malfunction Decision Conditions When the thermistor input is more than 4.96 V or less than 0.04 V during compressor operation*.
 * (reference)
 When above about 212°C (less than 120 ohms) or below about -50°C (more than 1,860 kohms).

 **Note:** The values vary slightly in some models.

- Supposed Causes**
- Faulty connector connection
 - Faulty thermistor
 - Faulty PCB

Troubleshooting


Check No.06
 Refer to P.132



(R7134)

[4 : Heat exchanger thermistor
 [9 : Room temperature thermistor

4.6 Signal Transmission Error (between Indoor and Outdoor Unit)

Remote
Controller
Display

U4

Method of
Malfunction
Detection

The data received from the outdoor unit in indoor unit-outdoor unit signal transmission is checked whether it is normal.

Malfunction
Decision
Conditions

When the data sent from the outdoor unit cannot be received normally, or when the content of the data is abnormal.

Supposed
Causes

- Faulty outdoor unit PCB.
- Faulty indoor unit PCB.
- Indoor unit-outdoor unit signal transmission error due to wiring error.
- Indoor unit-outdoor unit signal transmission error due to disturbed power supply waveform.
- Indoor unit-outdoor unit signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units (wire No. 3).
- Short circuit inside the fan motor winding.

Troubleshooting

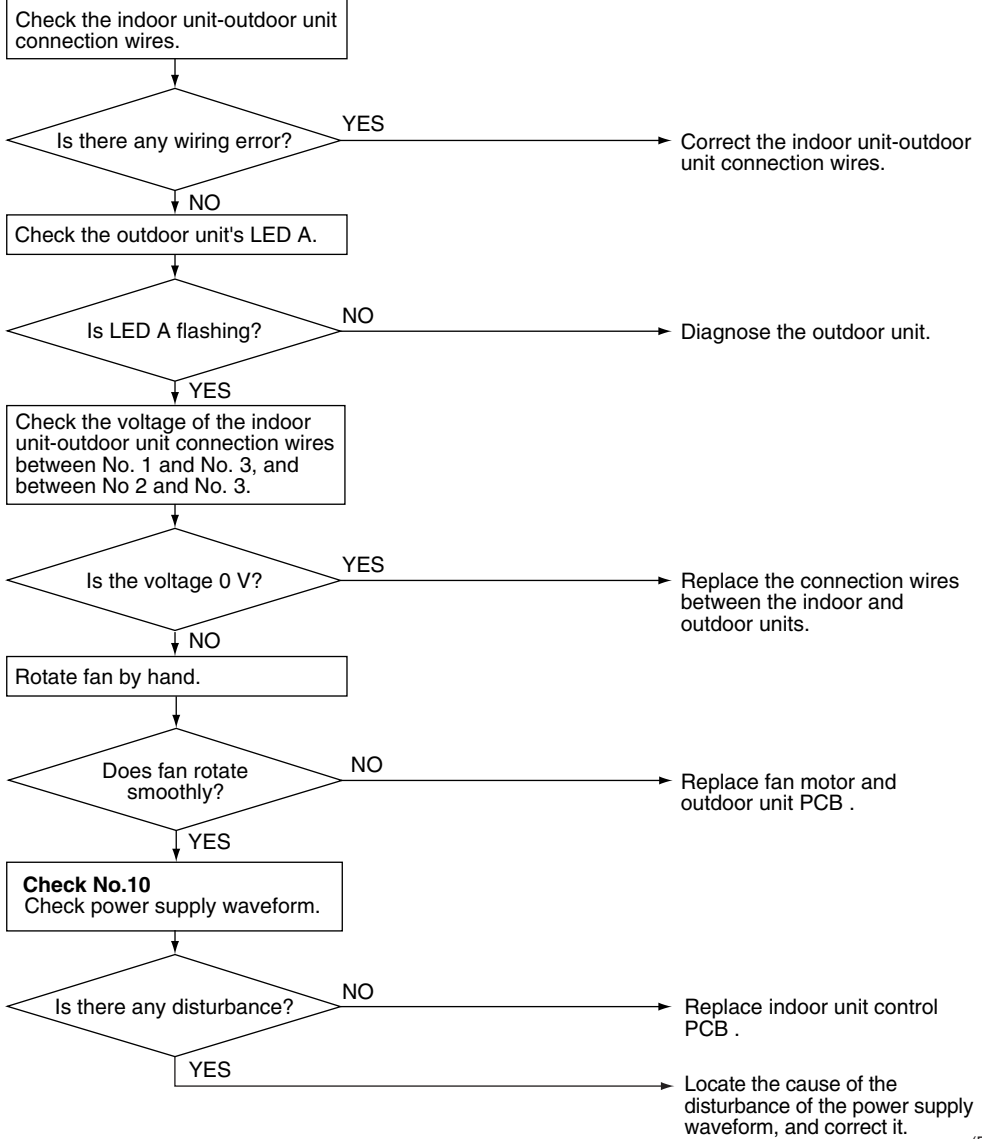


Check No.10
Refer to P.134



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R8300)

4.7 Unspecified Voltage (between Indoor and Outdoor Units)

Remote Controller Display



Method of Malfunction Detection

The supply power is detected for its requirements (different from pair type and multi type) by the indoor / outdoor transmission signal.

Malfunction Decision Conditions

The pair type and multi type are interconnected.

Supposed Causes

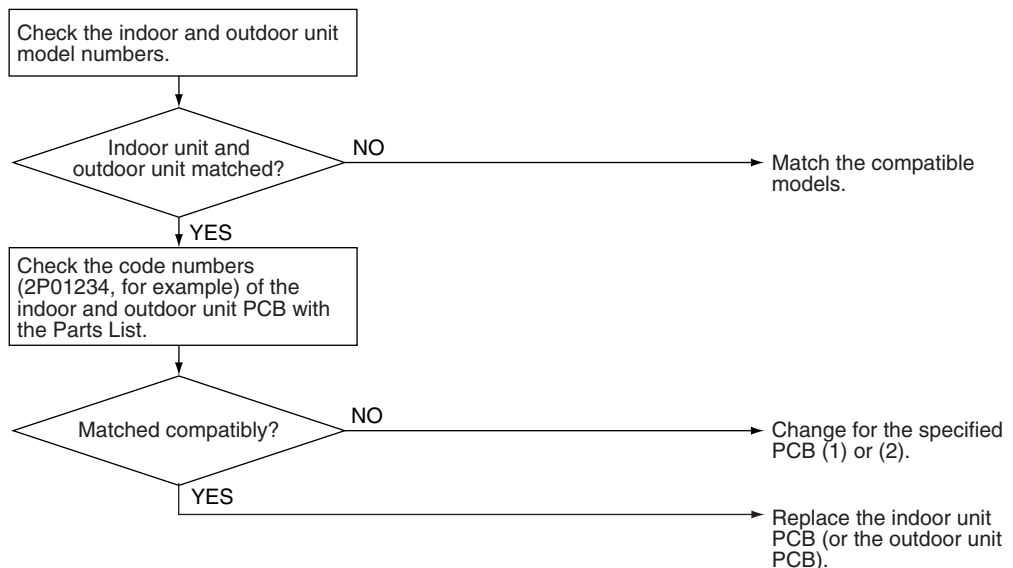
- Wrong models interconnected
- Wrong indoor unit PCB mounted
- Indoor unit PCB defective
- Wrong outdoor unit PCB mounted or defective

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R8220)

4.8 Outdoor Unit PCB Abnormality

Remote
Controller
Display

E1

Method of
Malfunction
Detection

- The system follows the microprocessor program to make sure it runs normally.
- The system checks to see if the zero-cross signal comes in properly.

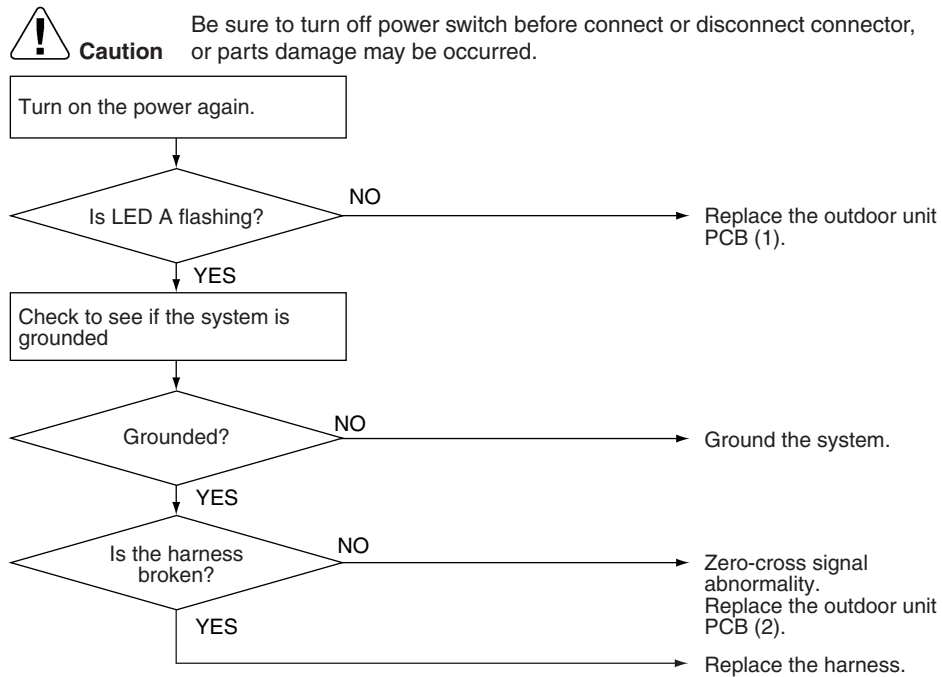
Malfunction
Decision
Conditions

- The microprocessor program runs out of control.
- The zero-cross signal is not detected.

Supposed
Causes

- The microcomputer is out of control due to external factors.
 - ◆ Noise
 - ◆ Momentary voltage drop
 - ◆ Momentary power failure, etc.
- Outdoor unit PCB defective
- Broken harness between PCBs

Troubleshooting



(R8449)

4.9 OL Activation (Compressor Overload)

Remote
Controller
Display

ES

Method of
Malfunction
Detection

A compressor overload is detected through compressor OL.

Malfunction
Decision
Conditions

- If the compressor OL is activated twice, the system will be shut down.
 - The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).
- * The operating temperature condition is not specified.

Supposed
Causes

- Refrigerant shortage
- Four way valve malfunctioning
- Outdoor unit PCB defective
- Water mixed in the local piping
- Electronic expansion valve defective
- Stop valve defective

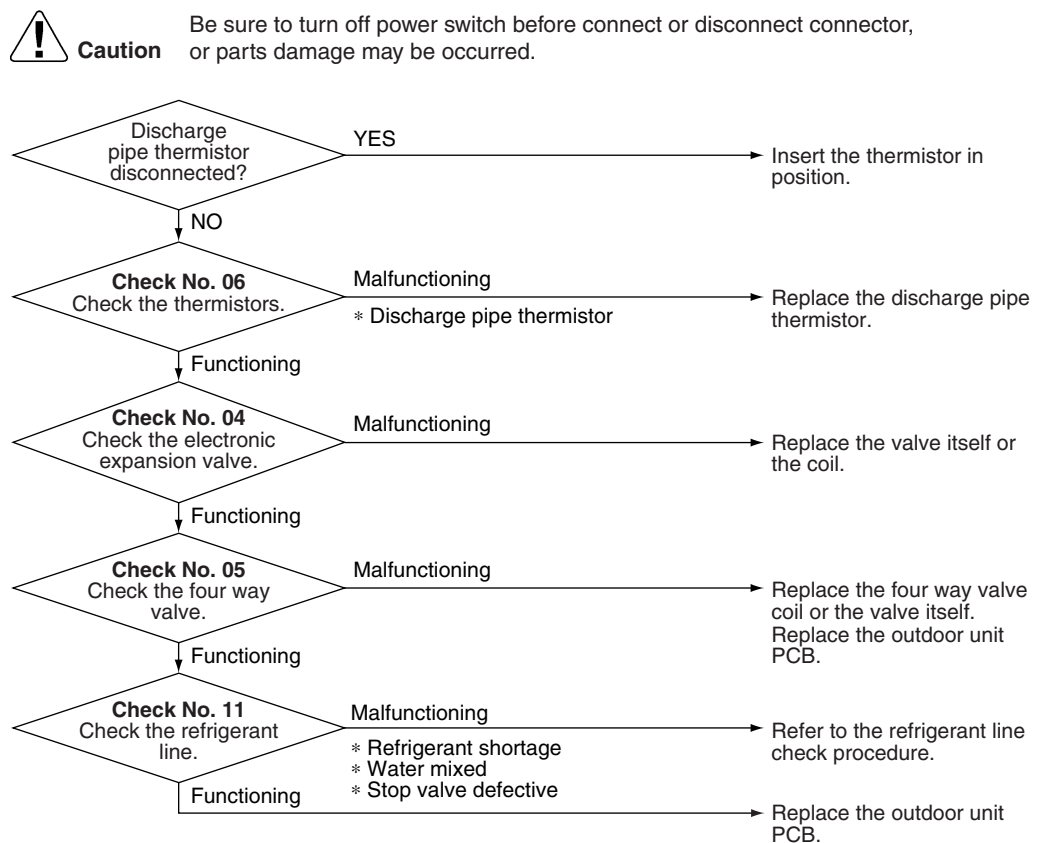
Troubleshooting


Check No.04
Refer to P.130


Check No.05
Refer to P.131


Check No.06
Refer to P.132


Check No.11
Refer to P.134



(R7137)

4.10 Compressor Lock

Remote
Controller
Display



Method of
Malfunction
Detection

A compressor lock is detected by checking the compressor running condition through the position detection circuit.

Malfunction
Decision
Conditions

- The system judges the compressor lock, and stops due to over current.
- The system judges the compressor lock, and cannot operation with position detection within 15 seconds after start up.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 10 minutes (normal)

Supposed
Causes

- Compressor locked
- Compressor harness disconnected

Troubleshooting

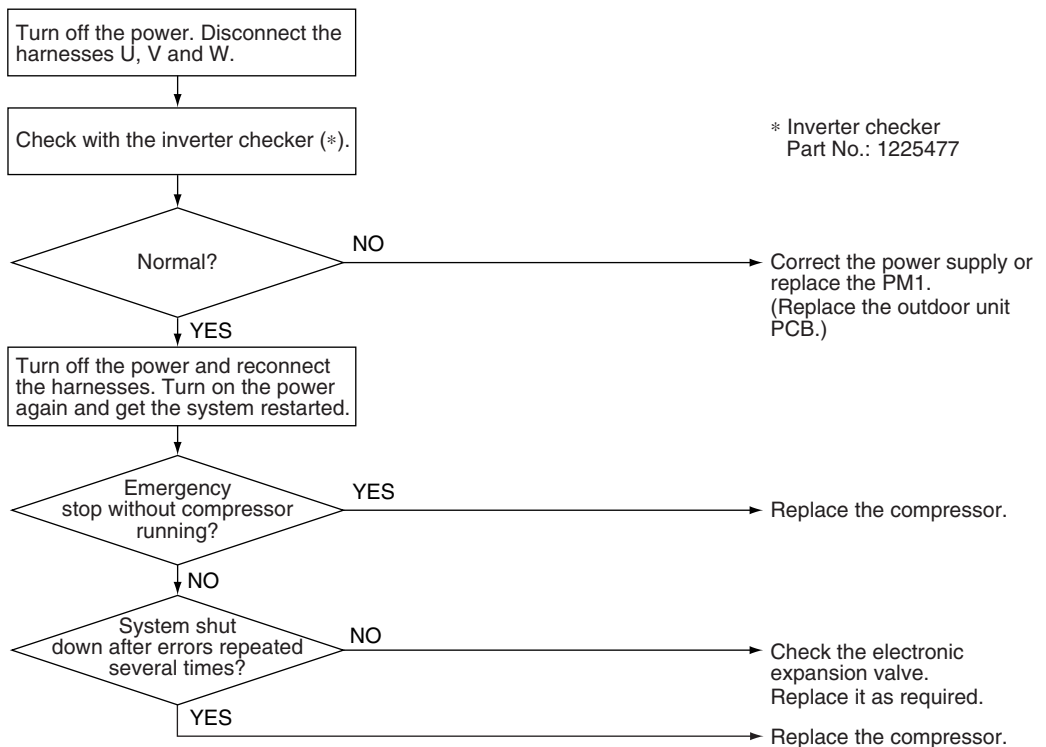


Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

(Precaution before turning on the power again)

Make sure the power has been off for at least 30 seconds.



(R8357)

4.11 DC Fan Lock

Remote
Controller
Display

E7

Method of
Malfunction
Detection

A fan motor or related error is detected by checking the high-voltage fan motor rpm being detected by the Hall IC.

Malfunction
Decision
Conditions

- The fan does not start in 30 seconds even when the fan motor is running.
- The system will be shut down if the error occurs 16 times.
- Clearing condition: Continuous run for about 10 minutes (normal)

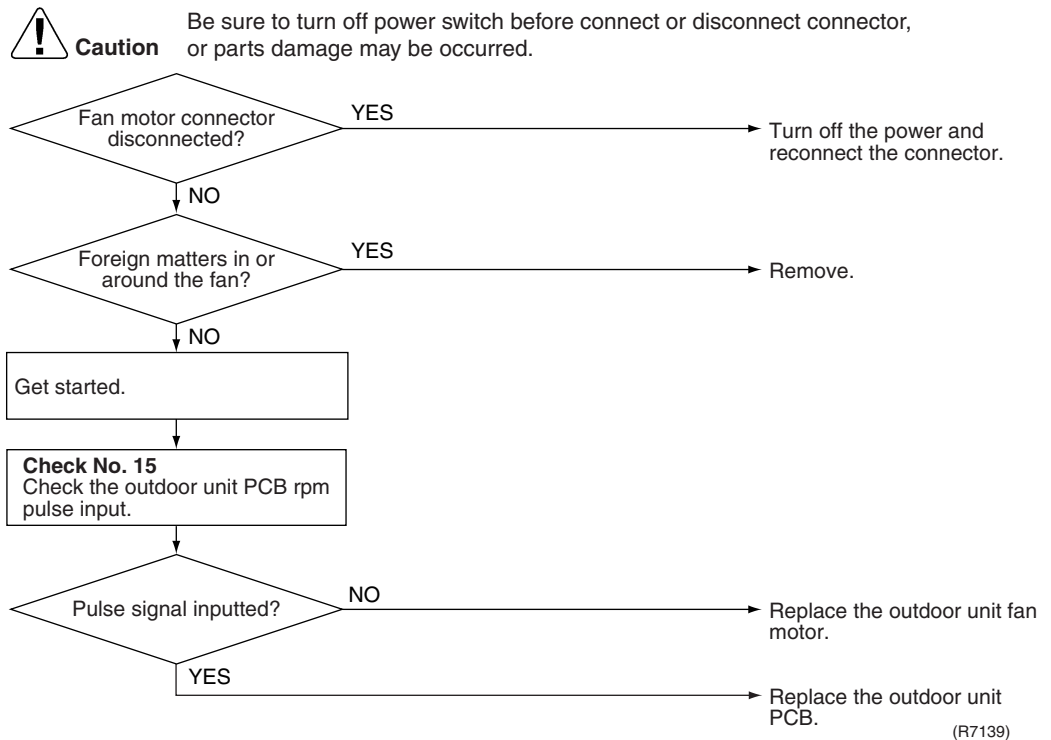
Supposed
Causes

- Fan motor breakdown
- Harness or connector disconnected between fan motor and PCB or in poor contact
- Foreign matters stuck in the fan


Troubleshooting



Check No.15
Refer to P.135




4.12 Input Over Current Detection


<p>Remote Controller Display</p>	
<p>Method of Malfunction Detection</p>	<p>An input over-current is detected by checking the input current value with the compressor running.</p>
<p>Malfunction Decision Conditions</p>	<ul style="list-style-type: none"> ■ The following current with the compressor running continues for 2.5 seconds. Cooling /Heating: Above 12A
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Over-current due to compressor failure ■ Over-current due to defective power transistor ■ Over-current due to defective outdoor unit PCB ■ Error detection due to outdoor unit PCB ■ Over-current due to short-circuit

Troubleshooting


Check No.07
 Refer to P.133


Check No.08
 Refer to P.133

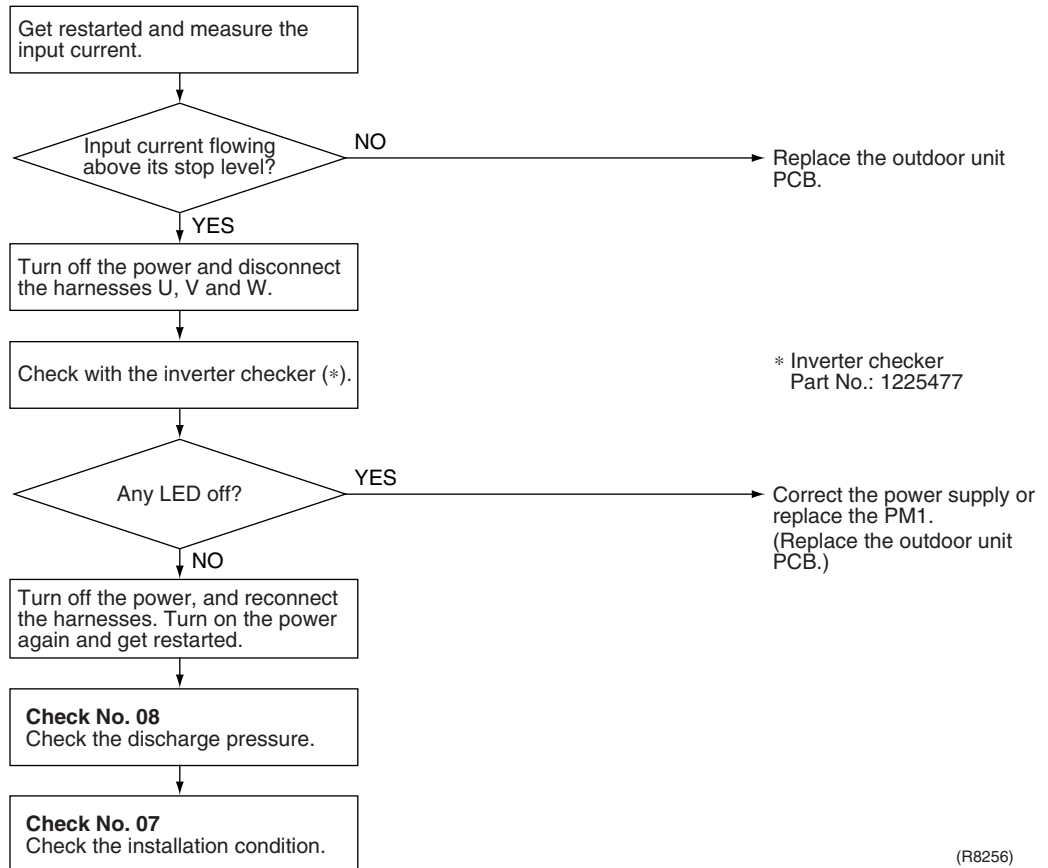 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.
 * An input over-current may result from wrong internal wiring. If the wires have been disconnected and reconnected for part replacement, for example, and the system is interrupted by an input over-current, take the following procedure.



(R8256)

4.13 Four Way Valve Abnormality

Remote
Controller
Display



**Method of
Malfunction
Detection**

The indoor air temperature thermistor, the indoor unit heat exchanger thermistor, the outdoor temperature thermistor and the outdoor unit heat exchanger thermistor are checked to see if they function within their normal ranges in the operating mode.

**Malfunction
Decision
Conditions**

A following condition continues over 10 minute after operating 5 minutes.

- Cooling / dry operation
(room temp. – indoor heat exchanger temp.) < –5°C
- Heating
(indoor unit heat exchanger temp. – room temp.) < –5°C

**Supposed
Causes**

- Connector in poor contact
- Thermistor defective
- Outdoor unit PCB defective
- Four way valve coil or harness defective
- Four way valve defective
- Foreign substance mixed in refrigerant
- Insufficient gas

Troubleshooting



Check No.05
Refer to P.131



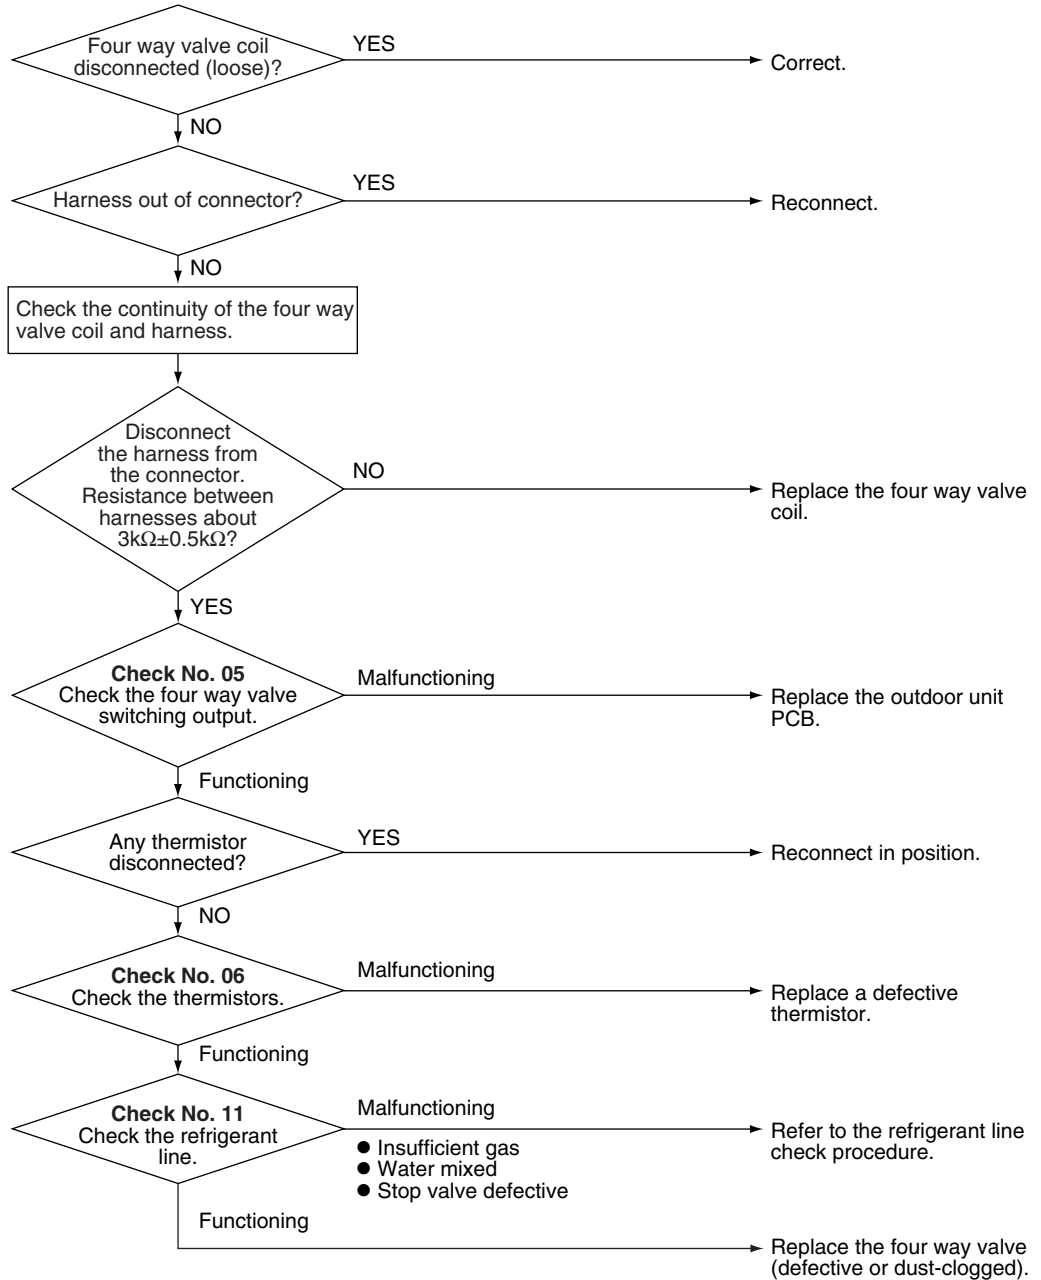
Check No.06
Refer to P.132



Check No.11
Refer to P.134



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R7345)

4.14 Discharge Pipe Temperature Control

Remote Controller Display



Method of Malfunction Detection

The discharge pipe temperature control (stop, frequency drooping, etc.) is checked with the temperature being detected by the discharge pipe thermistor.

Malfunction Decision Conditions

- If a stop takes place 4 times successively due to abnormal discharge pipe temperature, the system will be shut down.
- If the temperature being detected by the discharge pipe thermistor rises above Δ °C, the compressor will stop. (The error is cleared when the temperature has dropped below B °C.)

Stop temperatures	Δ	B
(1) above 45Hz (rising), above 40Hz (dropping)	110	97
(2) 30~45Hz (rising), 25~40Hz (dropping)	105	92
(3) below 30Hz (rising), below 25Hz (dropping)	99	86

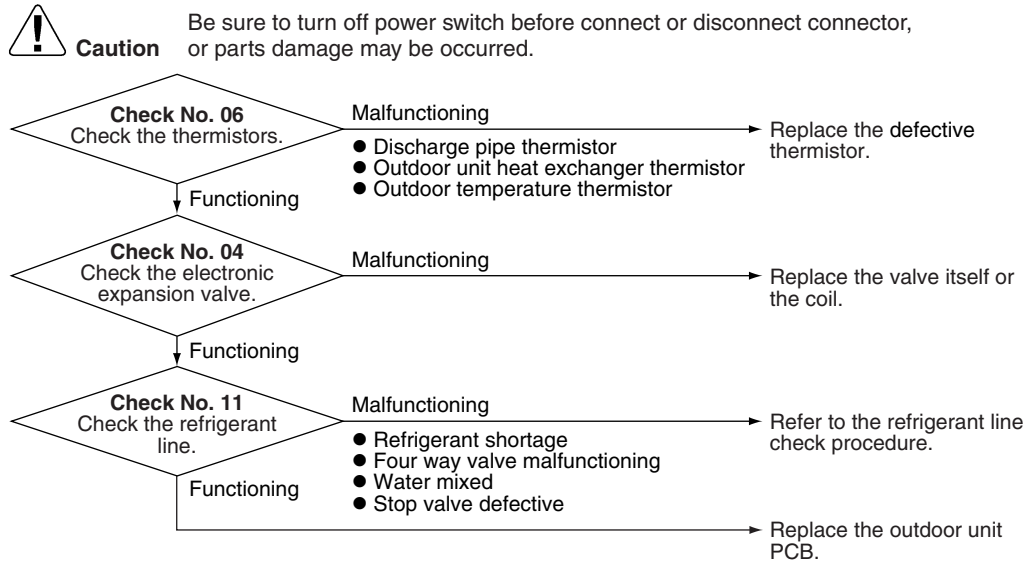
- The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

Supposed Causes

- Refrigerant shortage
- Four way valve malfunctioning
- Discharge pipe thermistor defective (heat exchanger or outdoor air temperature thermistor defective)
- Outdoor unit PCB defective
- Water mixed in the local piping
- Electronic expansion valve defective
- Stop valve defective

Troubleshooting

- Check No.04**
Refer to P.130
- Check No.06**
Refer to P.132
- Check No.11**
Refer to P.134



(R7141)

4.15 High Pressure Control in Cooling

Remote Controller Display

FE

Method of Malfunction Detection

High-pressure control (stop, frequency drop, etc.) is activated in the cooling mode if the temperature being sensed by the heat exchanger thermistor exceeds the limit.

Malfunction Decision Conditions

Activated when the temperature being sensed by the heat exchanger thermistor rises above 65°C. (The error is cleared when the temperature drops below 54°C.)

Supposed Causes

- The installation space is not large enough.
- Faulty outdoor unit fan
- Faulty electronic expansion valve
- Faulty defrost thermistor
- Faulty outdoor unit PCB
- Faulty stop valve
- Dirty heat exchanger

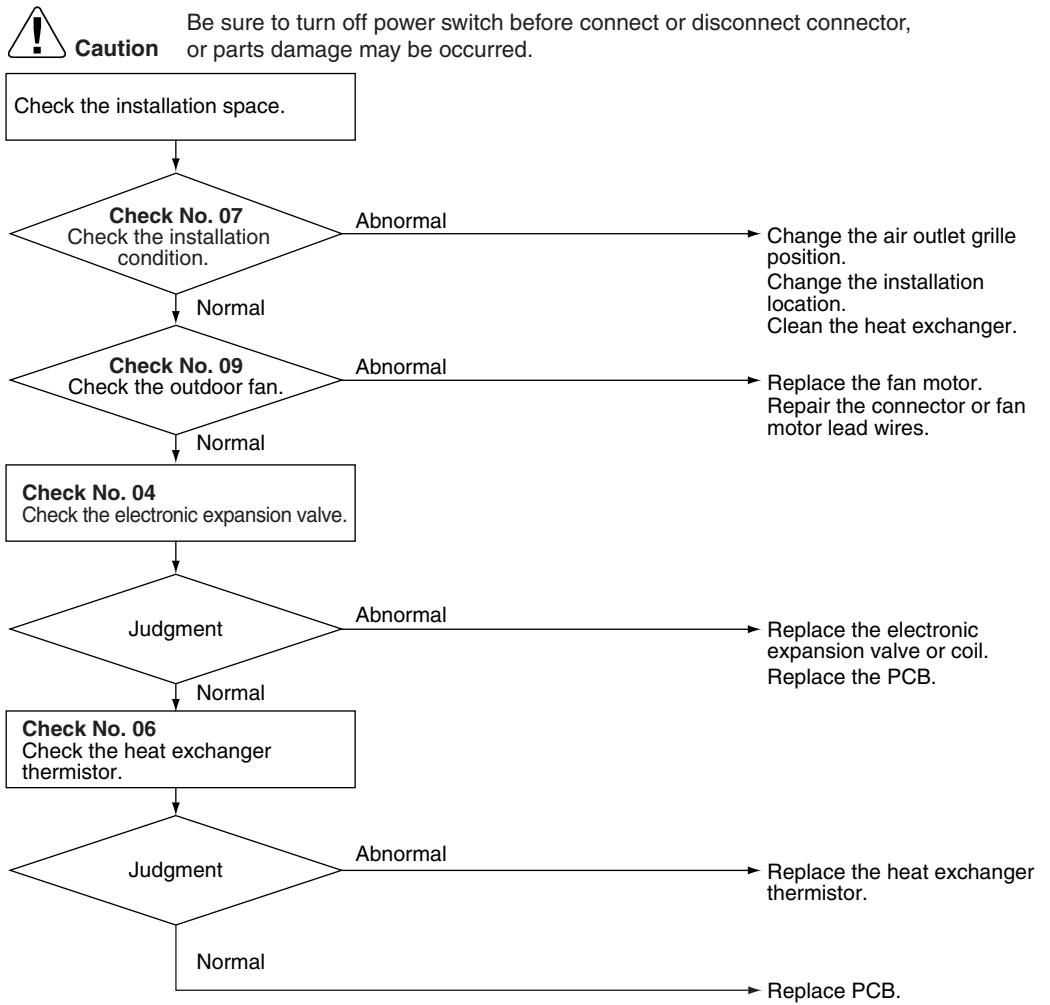
Troubleshooting


Check No.04
 Refer to P.130


Check No.06
 Refer to P.132


Check No.07
 Refer to P.133


Check No.09
 Refer to P.134



(R7142)

4.16 Compressor System Sensor Abnormality

Remote
Controller
Display



Method of
Malfunction
Detection

- The system checks the DC current before the compressor starts.

Malfunction
Decision
Conditions

- If the DC current before compressor start-up is out of the range 0.5-4.5 V (sensor output converted to voltage value) or if the DC voltage before compressor start-up is below 50 V.

Supposed
Causes

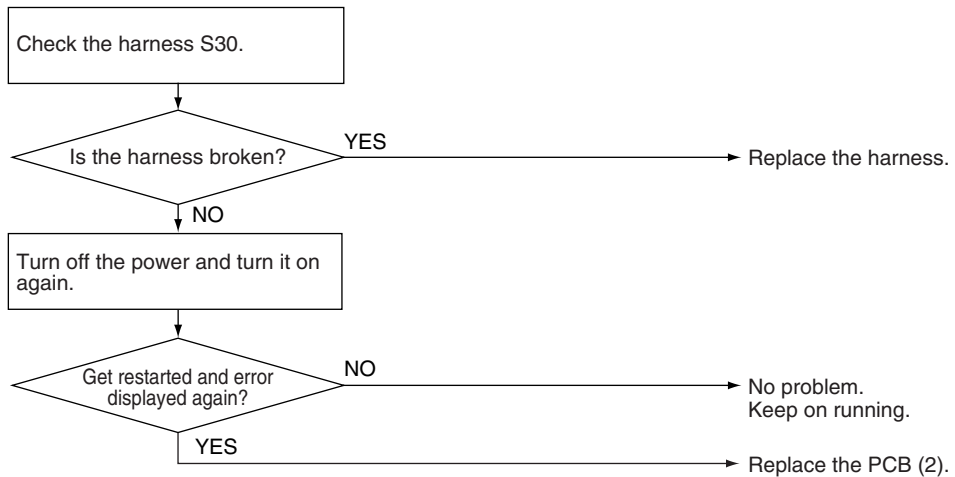
- PCB defective
- Broken or poorly connected harness

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R7348)

4.17 Position Sensor Abnormality

Remote
Controller
Display



Method of
Malfunction
Detection

A compressor startup failure is detected by checking the compressor running condition through the position detection circuit.

Malfunction
Decision
Conditions

- The compressor fails to start in about 15 seconds after the compressor run command signal is sent.
- Clearing condition: Continuous run for about 10 minutes (normal)
- The system will be shut down if the error occurs 16 times.

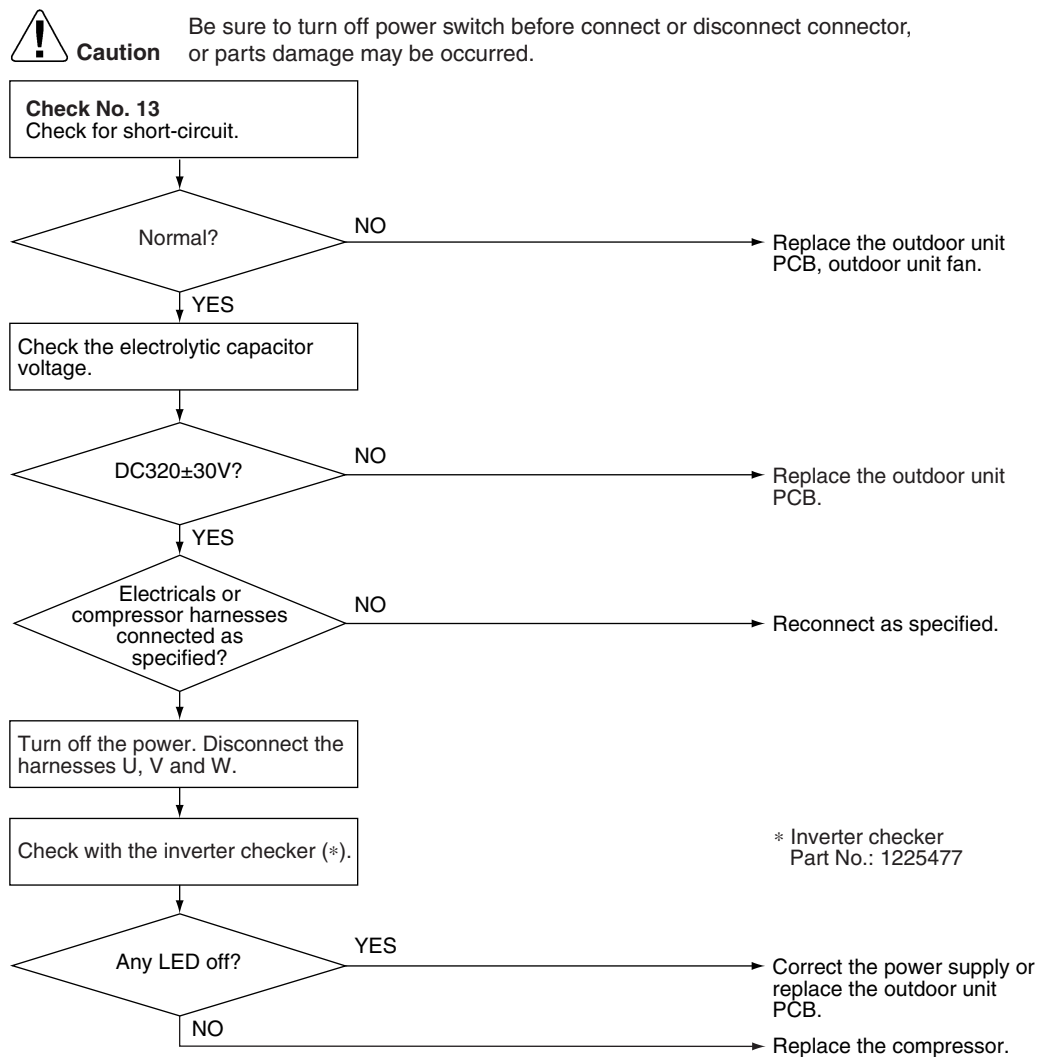
Supposed
Causes

- Compressor relay cable disconnected
- Compressor itself defective
- Outdoor unit PCB defective
- Stop valve closed
- Input voltage out of specification

Troubleshooting




Check No.13
Refer to P.135



(R7175)

4.18 DC Voltage / Current Sensor Abnormality

<p>Remote Controller Display</p>	
<p>Method of Malfunction Detection</p>	<p>Detecting abnormality of the DC sensor by the running frequency of compressor and by the input current multiplied DC voltage and current.</p>
<p>Malfunction Decision Conditions</p>	<p>The compressor running frequency is below 52 Hz. (The input current is also below 0.5 A.)</p> <ul style="list-style-type: none"> ■ If this error repeats 4 times, the system will be shut down. ■ The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Outdoor unit PCB defective
<p>Troubleshooting</p>	



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Replace the outdoor unit PCB.

4.19 Thermistor or Related Abnormality (Outdoor Unit)

Remote
Controller
Display

P4, U3, U6, H9

Method of
Malfunction
Detection

This type of error is detected by checking the thermistor input voltage to the microcomputer.
[A thermistor error is detected by checking the temperature.]

Malfunction
Decision
Conditions

The thermistor input is above 4.96 V or below 0.04 V with the power on.
Error U3 is judged if the discharge pipe thermistor temperature is smaller than the condenser thermistor temperature.

Supposed
Causes

- Connector in poor contact
- Thermistor defective
- Outdoor unit PCB defective
- Indoor unit PCB defective
- Condenser thermistor defective in the case of U3 error (outdoor unit heat exchanger thermistor in the cooling mode, or indoor unit heat exchanger thermistor in the heating mode)

Troubleshooting

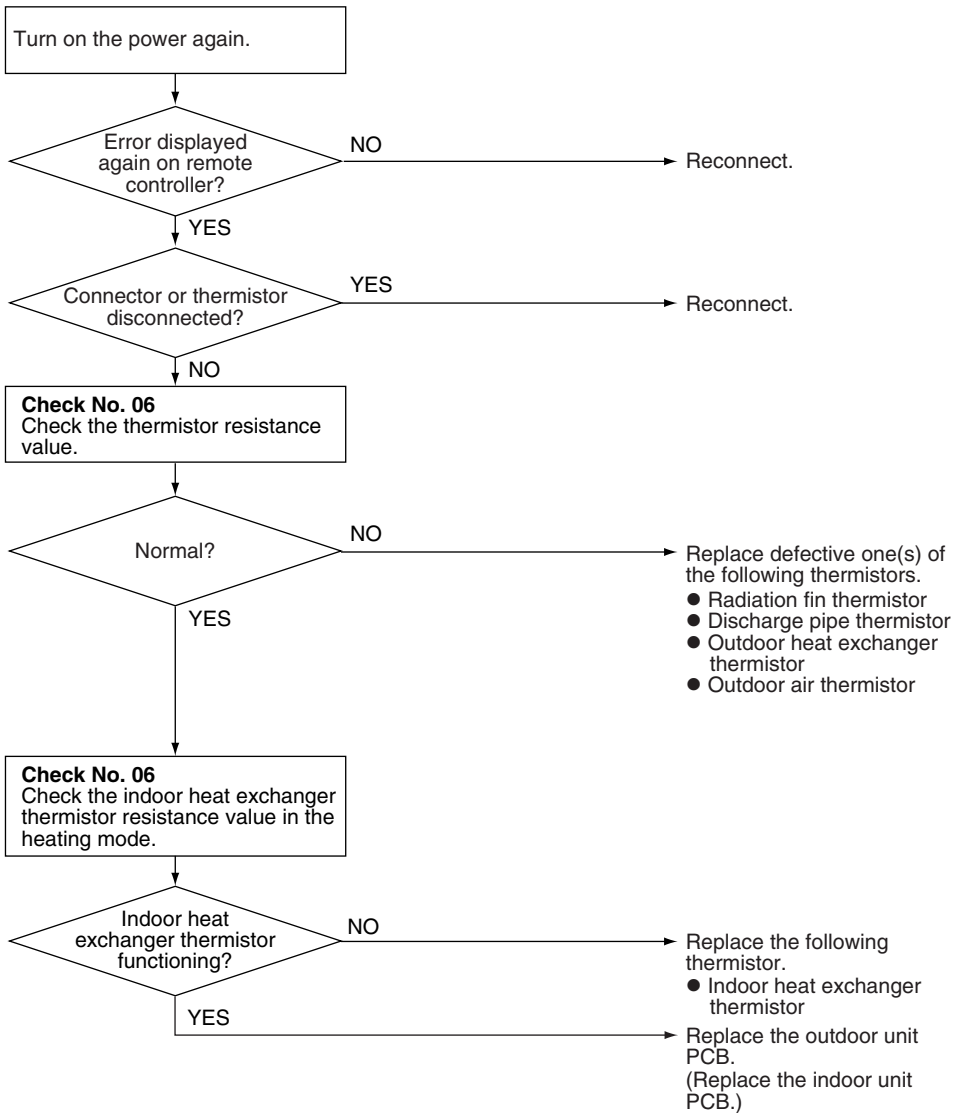


Check No.06
Refer to P.132



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R7346)

- P4 : Radiation fin thermistor
- J3 : Discharge pipe thermistor
- J5 : Outdoor heat exchanger thermistor
- H3 : Outdoor air temperature thermistor

4.20 Electrical Box Temperature Rise

Remote
Controller
Display



Method of
Malfunction
Detection

An electrical box temperature rise is detected by checking the radiation fin thermistor with the compressor off.

Malfunction
Decision
Conditions

With the compressor off, the radiation fin temperature is above 80°C. Reset is made when the temperature drops below 70°C.

Supposed
Causes

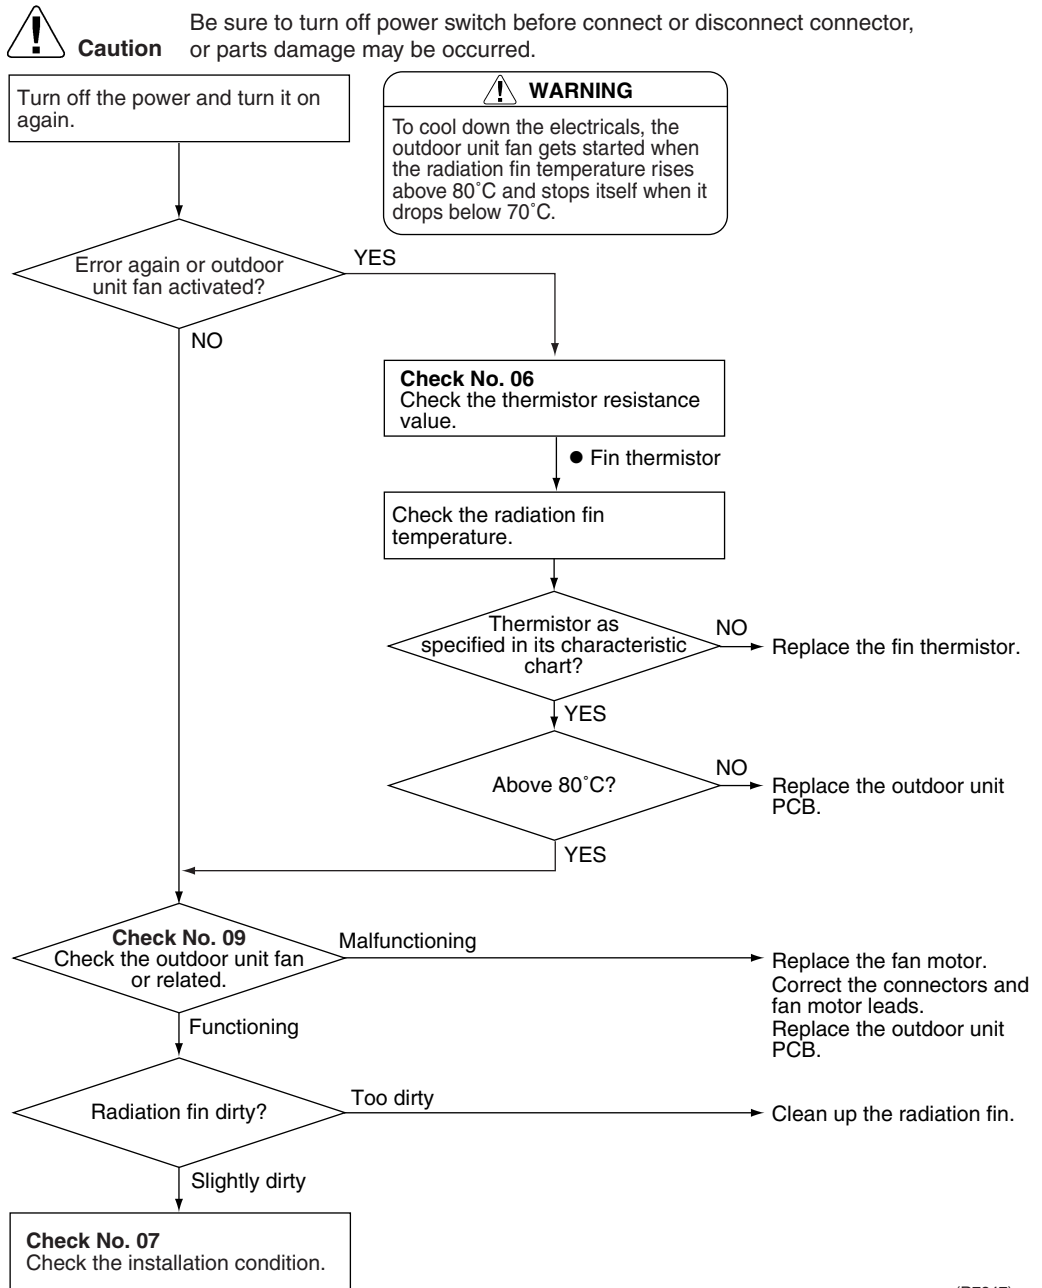
- Fin temperature rise due to defective outdoor unit fan
- Fin temperature rise due to short-circuit
- Fin thermistor defective
- Connector in poor contact
- Outdoor unit PCB defective

Troubleshooting

 **Check No.06**
Refer to P.132

 **Check No.07**
Refer to P.133

 **Check No.09**
Refer to P.134



(R7347)

4.21 Radiation Fin Temperature Rise

Remote
Controller
Display

L4

Method of
Malfunction
Detection

A radiation fin temperature rise is detected by checking the radiation fin thermistor with the compressor on.

Malfunction
Decision
Conditions

If the radiation fin temperature with the compressor on is above 90°C.

- If a radiation fin temperature rise takes place 4 times successively, the system will be shut down.
- The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

Supposed
Causes

- Fin temperature rise due to defective outdoor unit fan
- Fin temperature rise due to short-circuit
- Fin thermistor defective
- Connector in poor contact
- Outdoor unit PCB defective
- Silicon grease is not applied properly on the heat radiation fin after replacing outdoor unit PCB

Troubleshooting



Check No.06
Refer to P.132



Check No.07
Refer to P.133



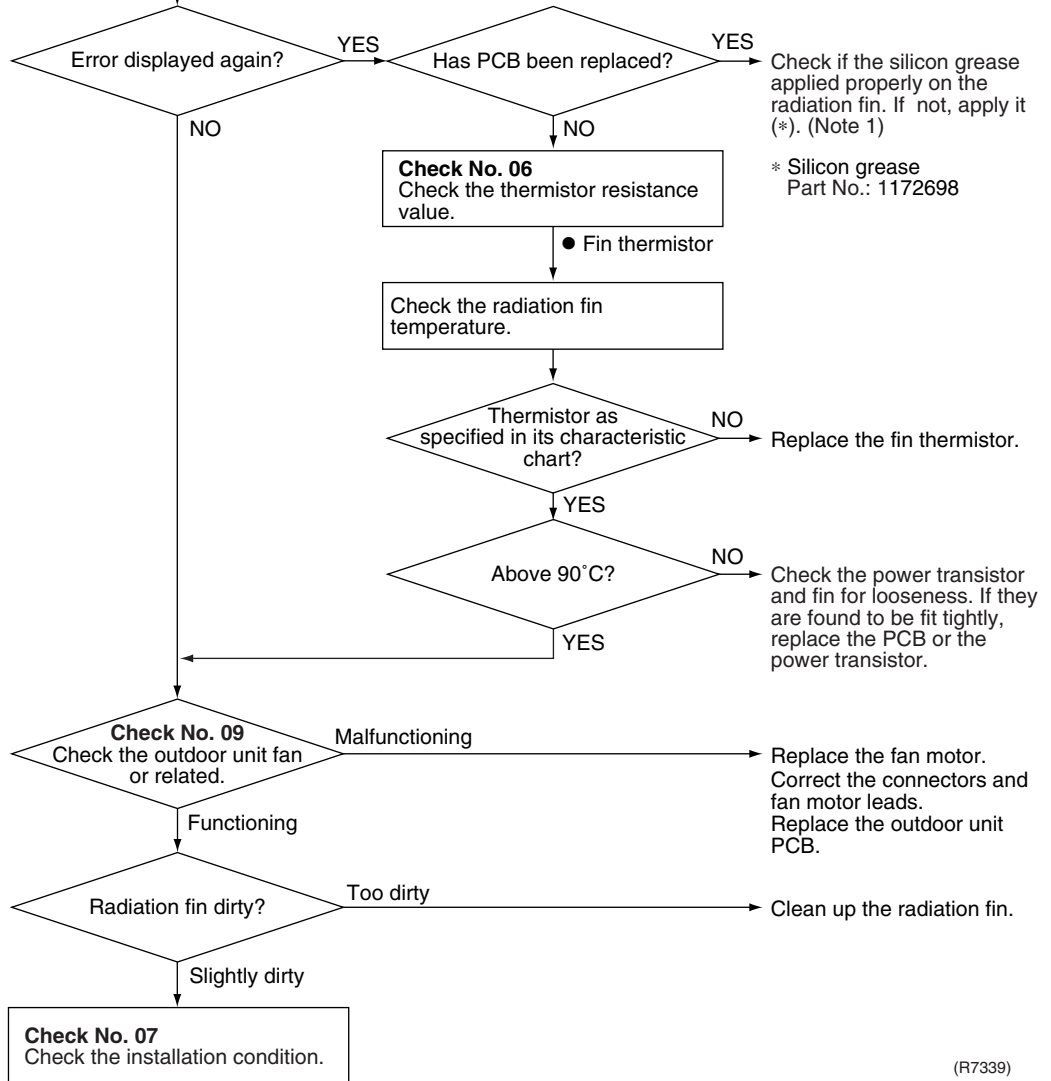
Check No.09
Refer to P.134



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Turn off the power and turn it on again to get the system started.



(R7339)



Note1: Refer to “1.3 Application of Silicon grease to a power transistor and a diode bridge” on P198.

4.22 Output Over Current Detection

Remote
Controller
Display

LS

Method of
Malfunction
Detection

An output over-current is detected by checking the current that flows in the inverter DC section.

Malfunction
Decision
Conditions

- A position signal error occurs while the compressor is running.
- A speed error occurs while the compressor is running.
- An output over-current input is fed from the output over-current detection circuit to the microcomputer.
- The system will be shut down if the error occurs 255 times.
- Clearing condition: Continuous run for about 10 minutes (normal)

Supposed
Causes

- Over-current due to defective power transistor
- Over-current due to wrong internal wiring
- Over-current due to abnormal supply voltage
- Over-current due to defective PCB
- Error detection due to defective PCB
- Over-current due to closed stop valve
- Over-current due to compressor failure
- Over-current due to poor installation condition

Troubleshooting



Check No.07
Refer to P.133



Check No.08
Refer to P.133

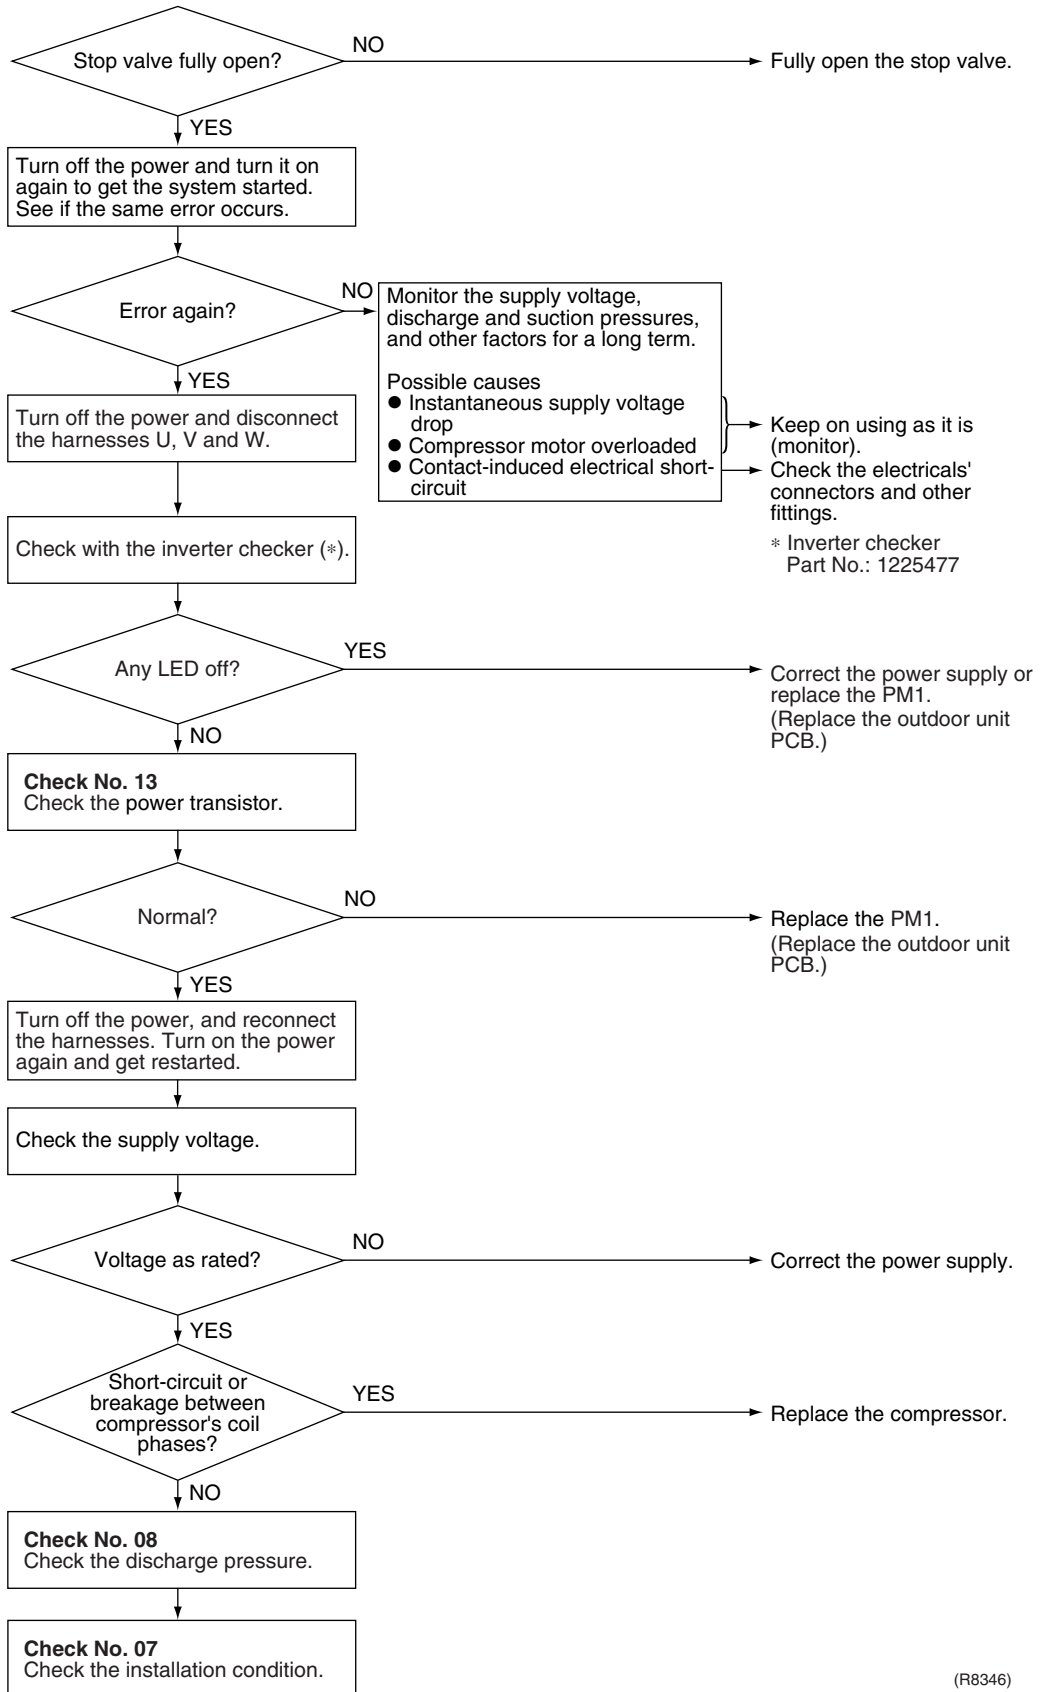


Check No.13
Refer to P.135



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

* An output over-current may result from wrong internal wiring. If the wires have been disconnected and reconnected for part replacement, for example, and the system is interrupted by an output over-current, check the wires again.



* Inverter checker
Part No.: 1225477

(R8346)

4.23 Insufficient Gas

Remote
Controller
Display



Method of
Malfunction
Detection

Gas shortage detection I:

Gas shortage is detected by checking the input current value and the compressor running frequency. If the gas is short, the input current is smaller than the normal value.

Gas shortage detection II:

Gas shortage is detected by checking the discharge temperature and the opening of the electronic expansion valve. If the gas is short, the discharge temperature tends to rise.

Gas shortage detection III:

A gas shortage is detected by checking the difference between inhale and exhale temperature.

Malfunction
Decision
Conditions

Gas shortage detection I:

The following conditions continue for 7 minutes.

- ◆ Input current × input voltage ≤ 640 / 256 × output frequency
- ◆ Output frequency > 55 (Hz)

Gas shortage detection II:

The following conditions continue for 80 seconds.

- ◆ Target opening of the electronic expansion valve ≥ 480 (pulse)
- ◆ Discharge temperature > 255 / 256 × target discharge temperature +30 (°C)

Gas shortage detection III:

When the difference of the temperature is smaller than Δ , it is regarded as insufficient gas.

		Δ
Cooling	room temperature – indoor heat exchanger temperature	4.0°C
	outdoor heat exchanger temperature – outdoor temperature	4.0°C
Heating	indoor heat exchanger temperature – room temperature	3.0°C
	outdoor temperature – outdoor heat exchanger temperature	3.0°C

If a gas shortage error takes place 4 times straight, the system will be shut down. The error counter will reset itself if this or any other error does not occur during the following 60-minute compressor running time (total time).

Supposed
Causes

- Refrigerant shortage (refrigerant leakage)
- Poor compression performance of compressor
- Discharge pipe thermistor disconnected, or indoor unit or outdoor unit heat exchanger thermistor disconnected, room or outdoor air temperature thermistor disconnected
- Stop valve closed
- Electronic expansion valve defective

Troubleshooting



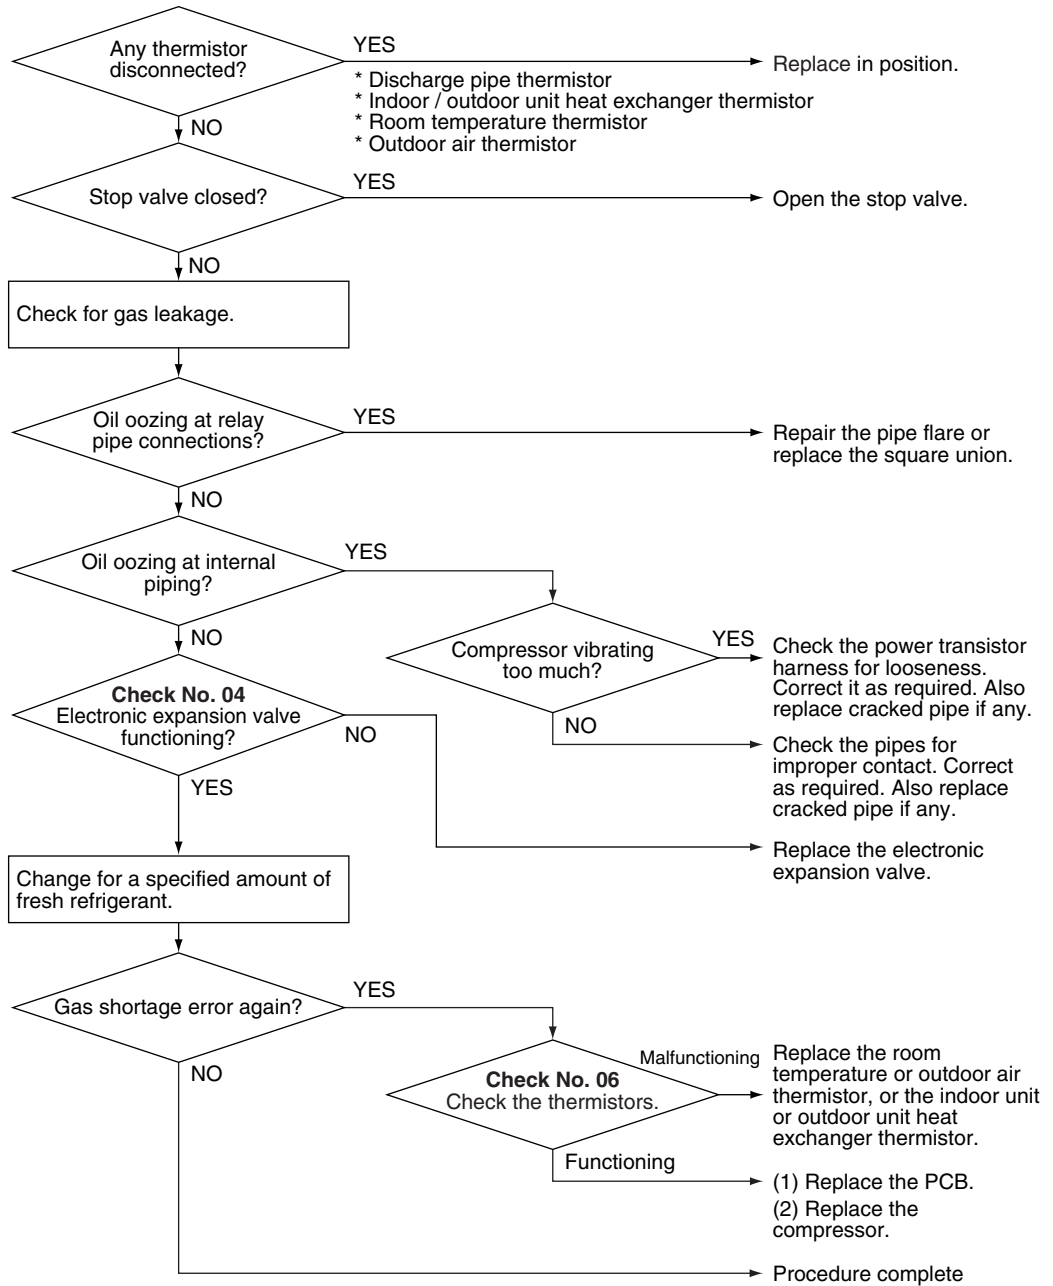
Check No.04
Refer to P.130



Check No.06
Refer to P.132



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



(R7149)

4.24 Over-voltage Detection

Remote
Controller
Display

U2

Method of
Malfunction
Detection

An abnormal voltage rise is detected by checking the specified over-voltage detection circuit.

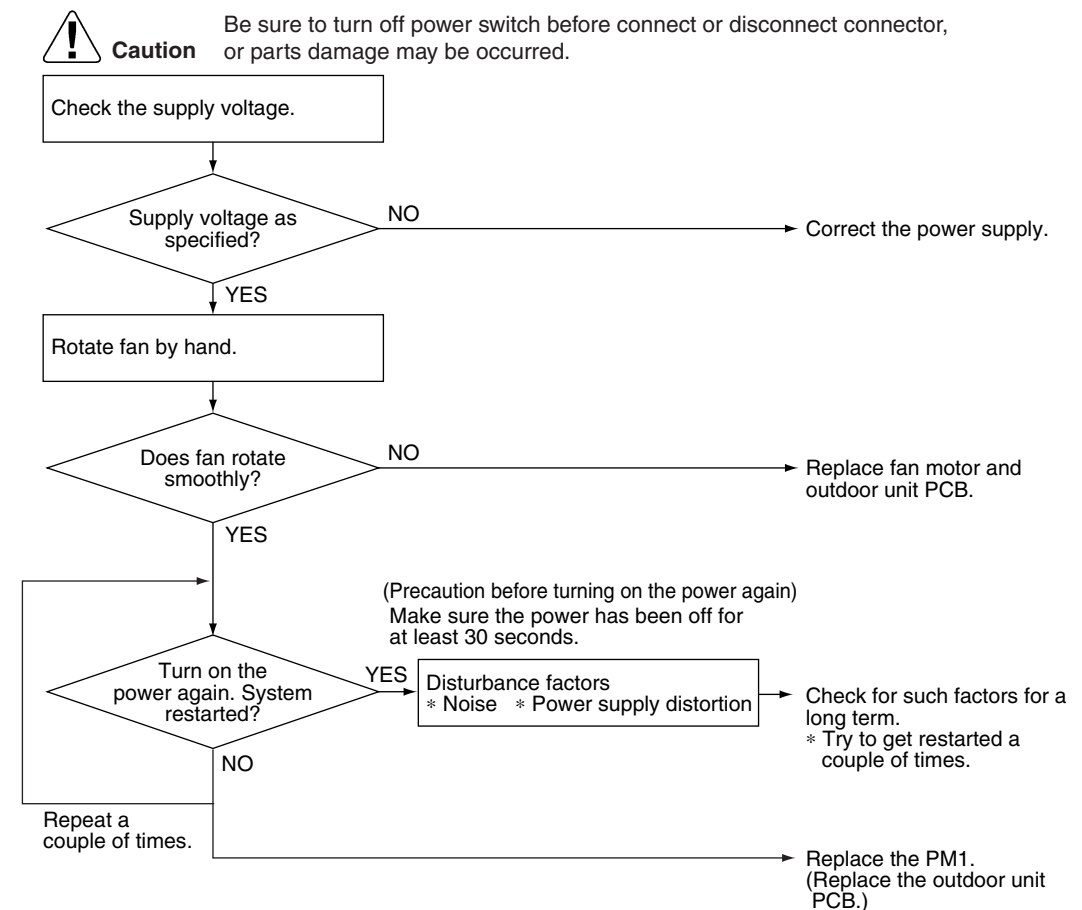
Malfunction
Decision
Conditions

- An over-voltage signal is fed from the over-voltage detection circuit to the microcomputer (The voltage is over 400V).
- The system will be shut down if the error occurs 255 times.
- Clearing condition: Continuous run for about 10 minutes (normal)

Supposed
Causes

- Supply voltage not as specified
- Over-voltage detection circuit defective
- PAM control part(s) defective

Troubleshooting




5. Check

5.1 How to Check

5.1.1 Fan Motor Connector Output Check

Check No.01

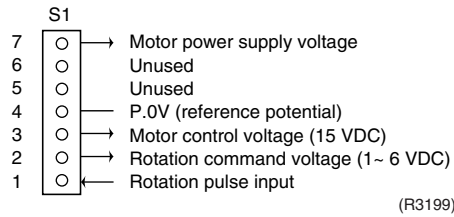1. Check connector connection.
2. Check motor power supply voltage output (pins 4-7).
3. Check motor control voltage (pins 4-3).
4. Check rotation command voltage output (pins 4-2).
5. Check rotation pulse input (pins 4-1).




5.1.2 Electronic Expansion Valve Check

Check No.04

Conduct the followings to check the electronic expansion valve (EV).

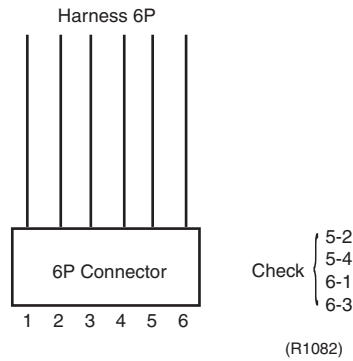1. Check to see if the EV connector is correctly inserted in the PCB. Compare the EV unit and the connector number.
2. Turn the power off and back on again, and check to see if all the EVs generate latching sound.
3. If any of the EVs does not generate latching noise in the above step 2, disconnect that connector and check the conductivity using a tester.
Check the conductivity between pins 1, 3 and 6, and between pins 2, 4 and 5. If there is no conductivity between the pins, the EV coil is faulty.




4. If no EV generates latching sound in the above step 2, the outdoor unit PCB is faulty.
5. If the conductivity is confirmed in the above step 3, mount a good coil (which generated latching sound) in the EV unit that did not generate latching sound, and check to see if that EV generates latching sound.
*If latching sound is generated, the outdoor unit PCB is faulty.
*If latching sound is not generated, the EV unit is faulty.




Note: Please note that the latching sound varies depending on the valve type.

5.1.3 Four Way Valve Performance Check

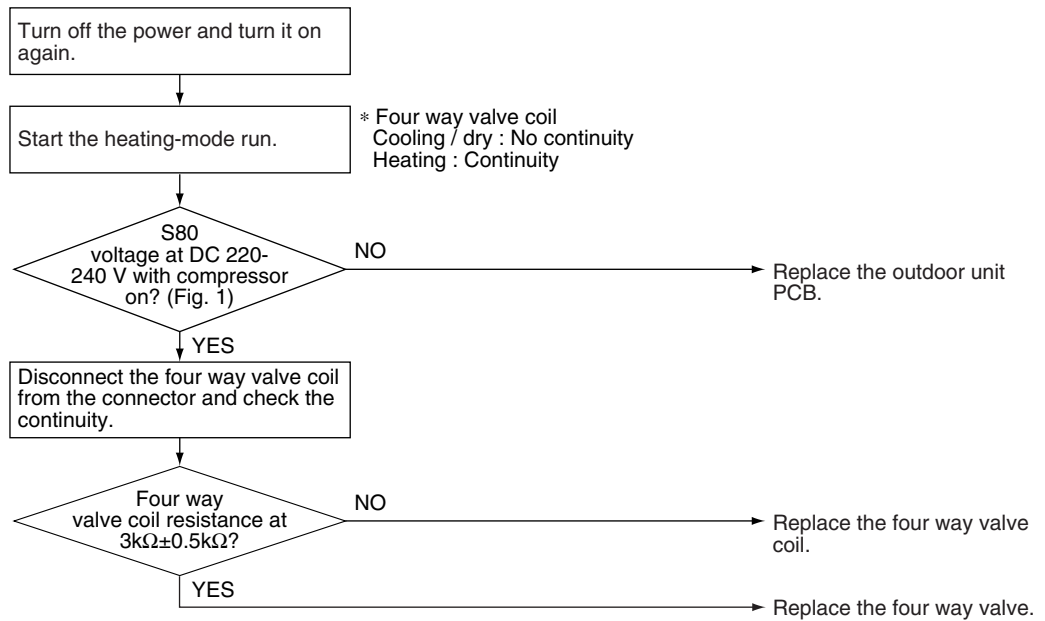Check No.05



(Fig. 1)

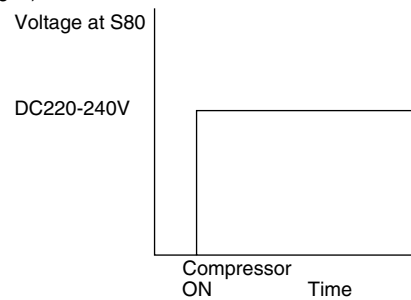

(R8448)


5.1.4 Thermistor Resistance Check

Check No.06


Remove the connectors of the thermistors on the PCB, and measure the resistance of each thermistor using tester.

The relationship between normal temperature and resistance is shown in the graph and the table below.

Temperature (°C)	Thermistor R25°C=20kΩ B=3950
-20	211.0 (kΩ)
-15	150
-10	116.5
-5	88
0	67.2
5	51.9
10	40
15	31.8
20	25
25	20
30	16
35	13
40	10.6
45	8.7
50	7.2

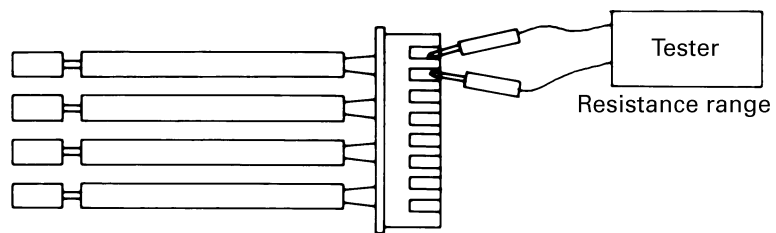


(R25=20k Ω 、 B=3950)

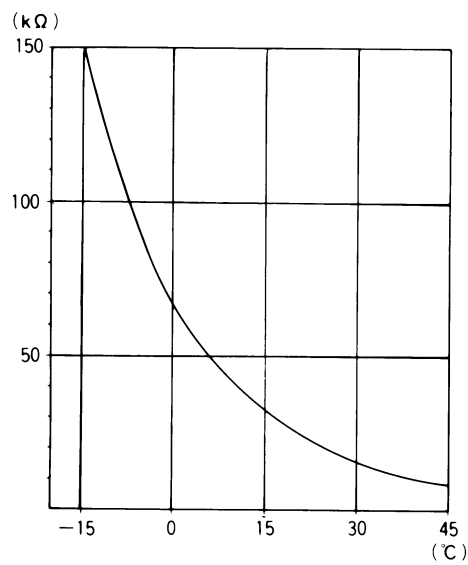

(R1437)


5.1.5 Installation Condition Check

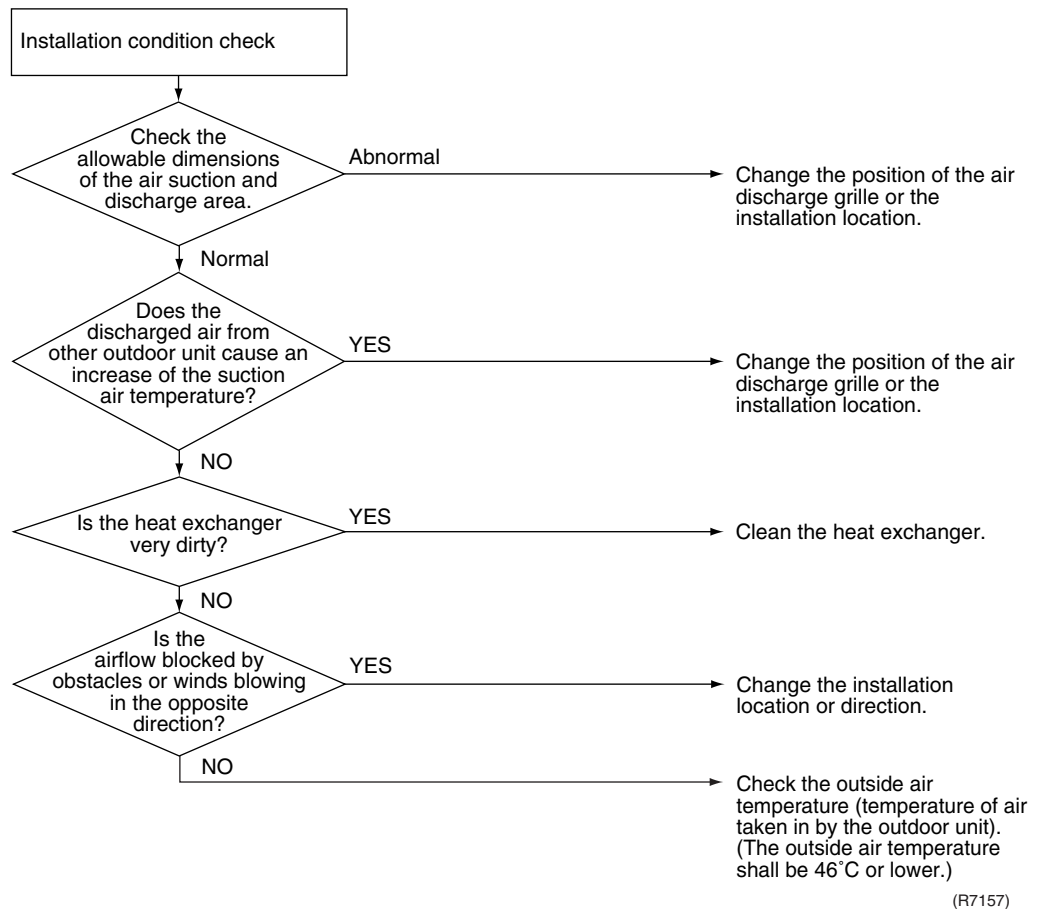Check No.07



5.1.6 Discharge Pressure Check

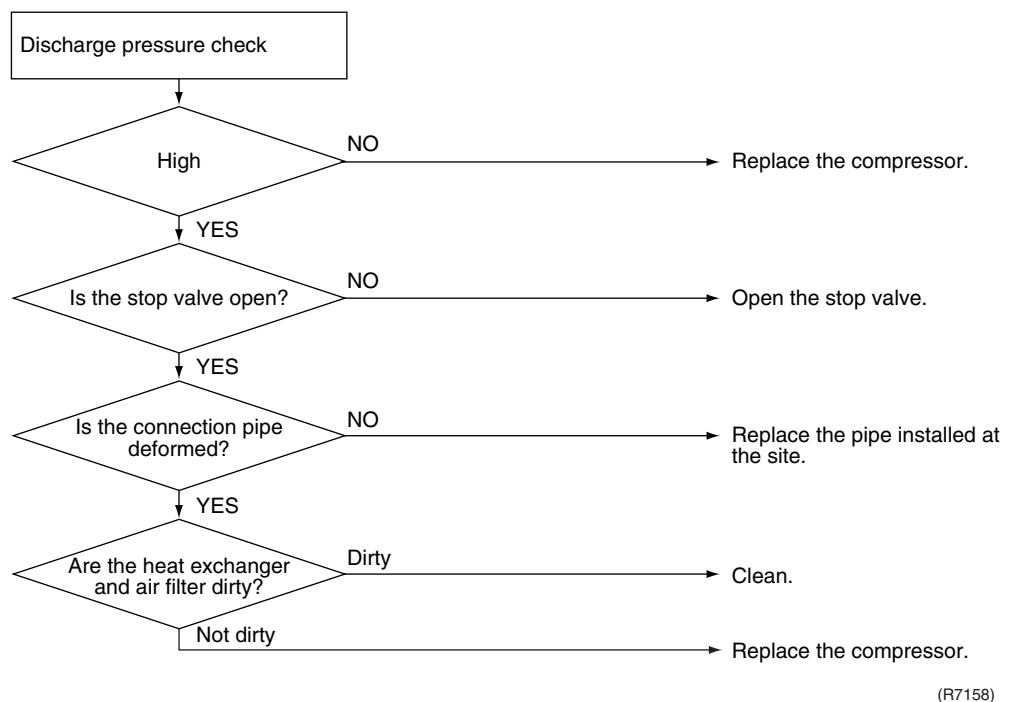
Check No.08



5.1.7 Outdoor Unit Fan System Check

Check No.09

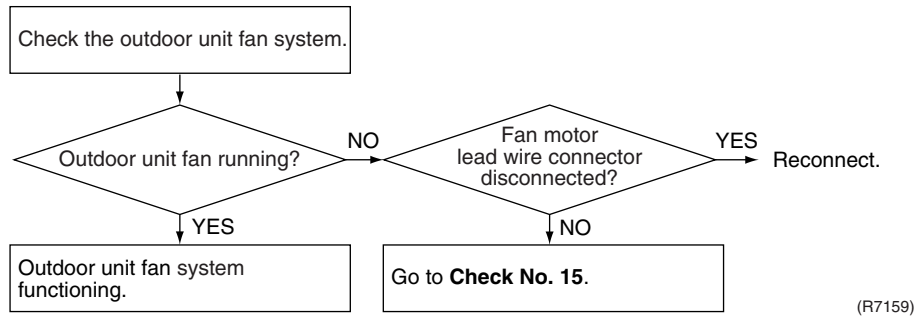DC motor



5.1.8 Power Supply Waveforms Check



Check No.10

Measure the power supply waveform between pins 1 and 2 on the terminal board, and check the waveform disturbance.

- Check to see if the power supply waveform is a sine wave (Fig.1).
- Check to see if there is waveform disturbance near the zero cross (sections circled in Fig.2)

[Fig.1]

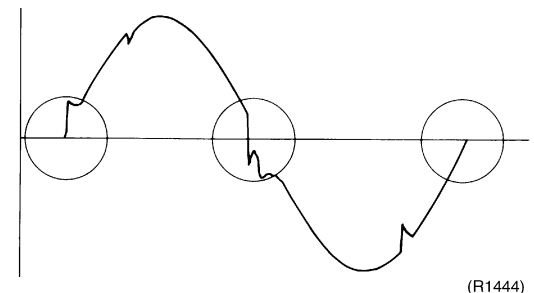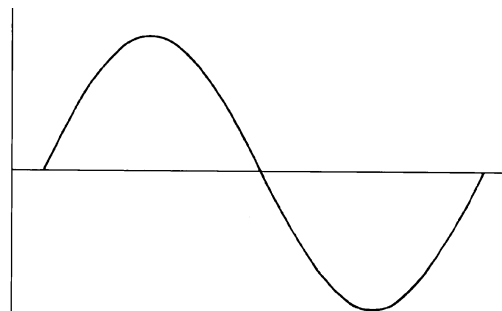[Fig.2]




(R1736)

(R1444)

5.1.9 Inverter Units Refrigerant System Check

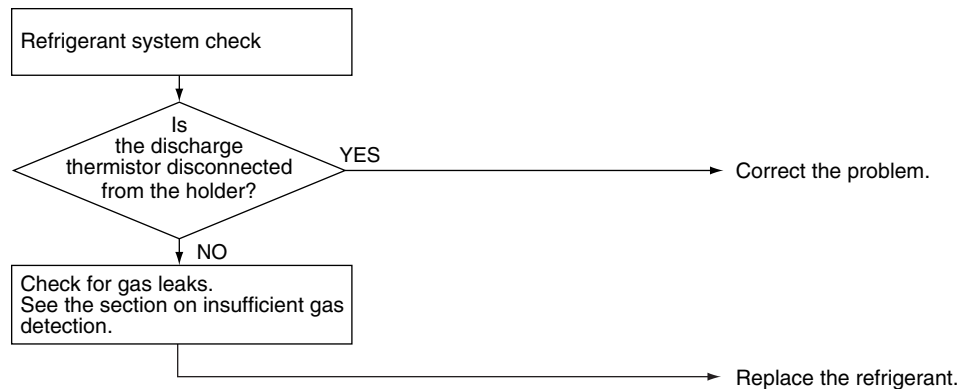Check No.11



(R8349)

5.1.10 Power Transistor Check

Check No.13



Note: Check to make sure that the voltage between the terminal of Power transistor (+) and (-) is approx. 0 volt before checking power transistor.

< Measuring method >

Disconnect the compressor harness connector from the outdoor unit PCB. To disengage the connector, press the protrusion on the connector.

Then, follow the procedure below to measure resistance between power transistor (+) and (-) and the U, V and W terminals of the compressor connector with a multi-tester. Evaluate the measurement results for a pass/fail judgment.

<Power transistor check>

Negative (-) terminal of tester (positive terminal (+) for digital tester)	Power transistor (+)	UVW	Power transistor (-)	UVW
Positive (+) terminal of tester (negative terminal (-) for digital tester)	UVW	Power transistor (+)	UVW	Power transistor (-)
Normal resistance	Several kΩ to several MΩ (*)			
Unacceptable resistance	Short (0 Ω) or open			

5.1.11 Turning Speed Pulse Input on the Outdoor Unit PCB Check

Check No.15

<Propeller fan motor>

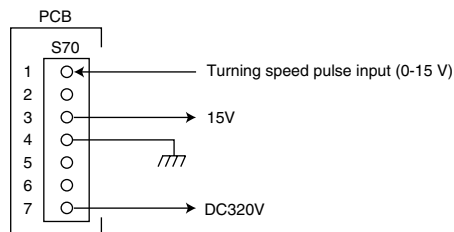
Make sure the voltage of 320±30V is being applied.

- (1) Stop the operation first and then the power off, and disconnect the connector S70.
- (2) Make sure there is about DC 320 V between pins 4 and 7.
- (3) With the system and the power still off, reconnect the connector S70.
- (4) Make a turn of the fan motor with a hand, and make sure the pulse (0-15 V) appears twice at pins 1 and 4.

If the fuse is blown out, the outdoor-unit fan may also be in trouble. Check the fan too.

If the voltage in Step (2) is not applied, it means the PCB is defective. Replace the PCB.

If the pulse in Step (4) is not available, it means the Hall IC is defective. Replace the DC fan motor. If there are both the voltage (2) and the pulse (4), replace the PCB.



(R2859)

* Propeller fan motor : S70

5.1.12 Hall IC Check

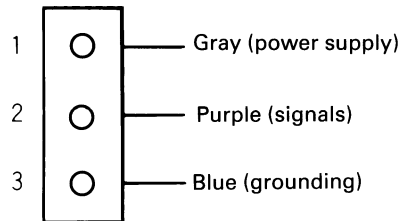
Check No.16

1. Check the connector connection.
2. With the power ON, operation OFF, and the connector connected, check the following.
 - *Output voltage of about 5 V between pins 1 and 3.
 - *Generation of 3 pulses between pins 2 and 3 when the fan motor is operating.

Failure of (1) → faulty PCB → Replace the PCB.

Failure of (2) → faulty Hall IC → Replace the fan motor.

Both (1) and (2) result → Replace the PCB.



(R1968)

Part 7

Removal Procedure

1. Indoor Unit.....	138
1.1 Removal of Air Filter.....	138
1.2 Removal of Front Panel.....	140
1.3 Removal of Front Grille	142
1.4 Removal of Horizontal Blades and Vertical Blades	145
1.5 Removal of Electrical Box	148
1.6 Removal of PCB.....	151
1.7 Removal of Drain Pan Unit.....	158
1.8 Removal of Fan Motor.....	162
1.9 Removal of Heat Exchanger	164
1.10 Removal of Fan Rotor	167
2. Outdoor Unit.....	170
2.1 Removal of Panels and Fan Motor.....	170
2.2 Removal of Electrical Box	179
2.3 Removal of Reactor and Partition Plate	183
2.4 Removal of Sound Blanket.....	185
2.5 Removal of Four Way Valve.....	187
2.6 Removal of Compressor.....	190
2.7 Removal of PCB.....	192

1. Indoor Unit




1.1 Removal of Air Filter

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Appearance feature		<p>Warning Dangerous: High voltage A high voltage is applied to all the electric circuits of this product including thermistors.</p> <ul style="list-style-type: none"> ■ When a signal from the remote controller is received, the receiving tone sounds and the operation lamp flickers immediately to confirm the signal reception. ■ When the ON/OFF switch is kept pressed for 5 seconds, the forced cooling operation is performed for about 15 minutes.
2. Removing the air filter	<p>1 Put your fingers on the right and left projections of the front panel, and open the panel to the position where it will stop.</p> <p>2 Slightly push up the knob at the center of the air filter and release the hook.</p> <p>3 Pull out the air filter downwards and remove it.</p>	<ul style="list-style-type: none"> ■ The air filter is not marked for difference between the right and left sides. ■ The air filter can be set easily by inserting it along the guides. ■ Insert the air filter with the "FRONT"-marked face up. ■ Be sure to insert the hooks (at 2 lower positions) when mounting the air filter.

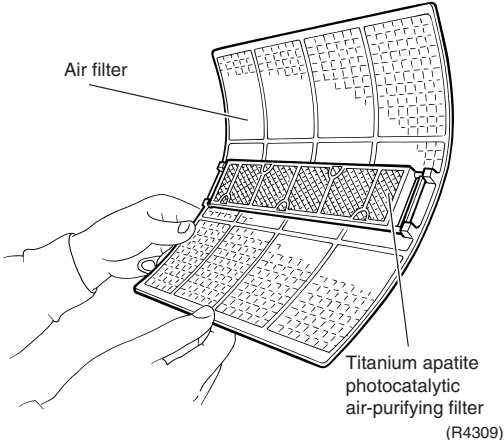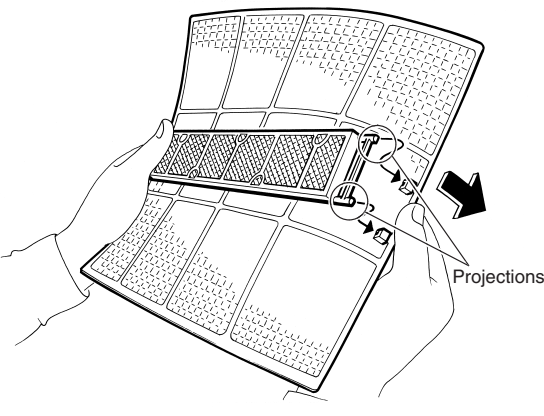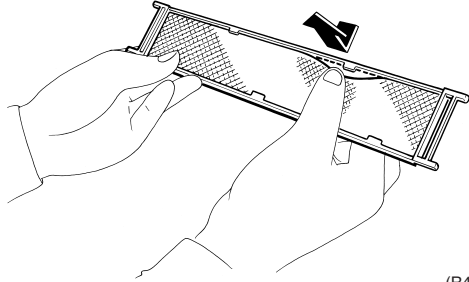Step	Procedure	Points
3. Removing the titanium apatite photocatalytic air-purifying filter		
1	<p>The titanium apatite photocatalytic air-purifying filter is attached to the back of the air filter.</p> 	<ul style="list-style-type: none"> ■ The titanium apatite photocatalytic air-purifying filter is not marked for difference between the right and left sides.
2	<p>Remove the titanium apatite photocatalytic air-purifying filter frame by bending the air filter and unfastening the projections from the air filter frame.</p> 	
3	<p>Remove the titanium apatite photocatalytic air-purifying filter from its frame (at 5 positions) by bending it.</p> 	


1.2 Removal of Front Panel





Procedure








Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Removing the front panel		
1 Put your fingers on the right and left projections of the front panel, and open the panel over the position where it will stop.	<p>(R4312)</p>	
2 Slide the left rotary shaft to the right and release it.	<p>(R4313)</p>	
3 When mounting the front panel, make sure that the projection is fitted in the guide before closing the panel.	<p>(R4314)</p>	
4 Slide the right rotary shaft to the left and release it.	<p>(R4315)</p>	

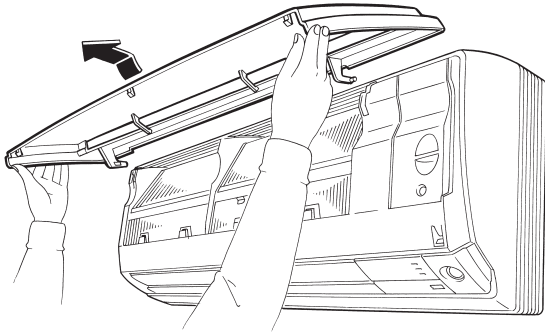Step	Procedure	Points
5	<p data-bbox="201 248 475 280">Remove the front panel.</p>  <p data-bbox="991 602 1050 627">(R4316)</p>	<p data-bbox="1098 248 1353 280">Caution on Mounting</p> <ul data-bbox="1098 280 1455 443" style="list-style-type: none"><li data-bbox="1098 280 1455 443">■ When mounting the front panel, fit the right and left rotary shafts one by one into the grooves and fully push them in position.

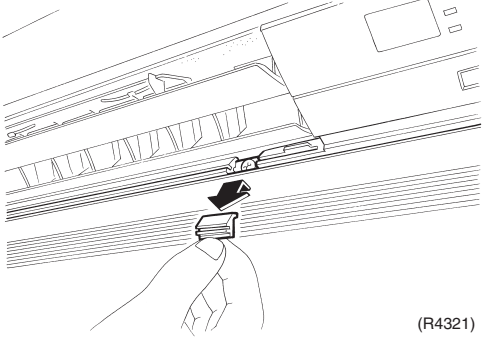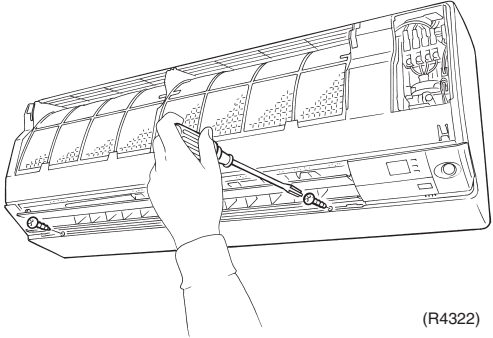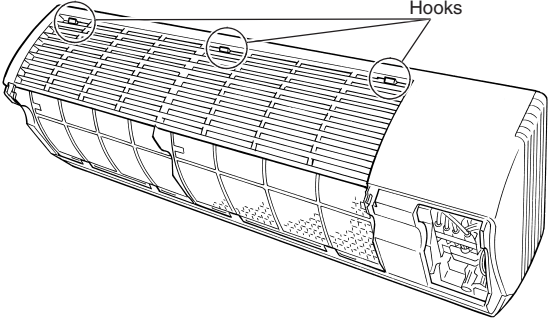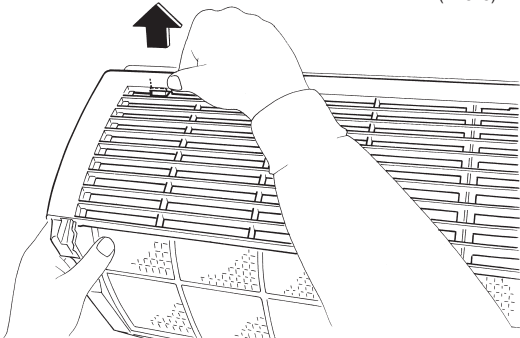Step	Procedure	Procedure	Points
2	Remove the screw covers (one each at the right and left).	 <p>(R4321)</p>	
3	Remove the screws (one each at the right and left).	 <p>(R4322)</p>	<ul style="list-style-type: none"> ■ When installing the indoor unit, drive the screws with the horizontal blades open or removed.
4	Release the 3 hooks at the top.	 <p>(R4323)</p>	
5	Put your fingers into the front grille to the depth and lift the grille up to unhook.	 <p>(R4324)</p>	

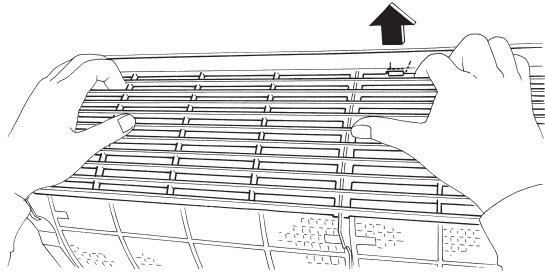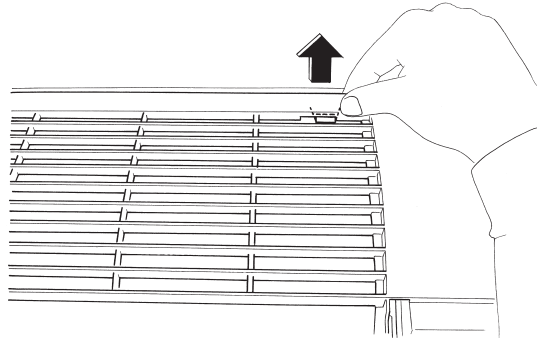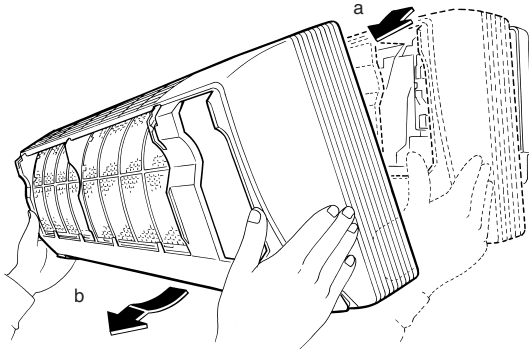
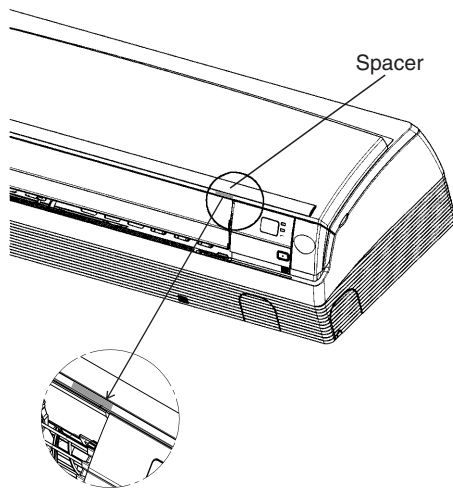
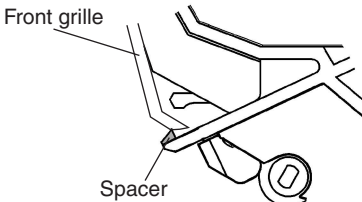
Step	Procedure	Procedure	Points
6	Put your fingers into the front grille and lift the grille up to unfasten the center hook.	 <p>(R4325)</p>	
7	Unfasten the right hook also by putting your fingers into the grille and lifting it.	 <p>(R4326)</p>	
8	Remove the front grille by tilting the upper part to the front (a) and lifting and pulling the lower part toward yourself (b).	 <p>(R4327)</p>  <p>(R4565)</p>	<p>Caution on Mounting</p> <ul style="list-style-type: none"> ■ When mounting the front grille, make sure that the hooks are fastened as they were. ■ When mounting the front grille, be sure not to get it stuck on the spacer of the drain pan.  <p>Front grille</p> <p>Spacer</p> <p>Section View</p> <p>(R4590)</p>




1.4 Removal of Horizontal Blades and Vertical Blades




Procedure



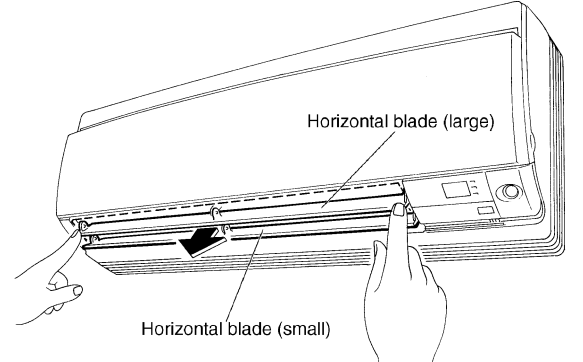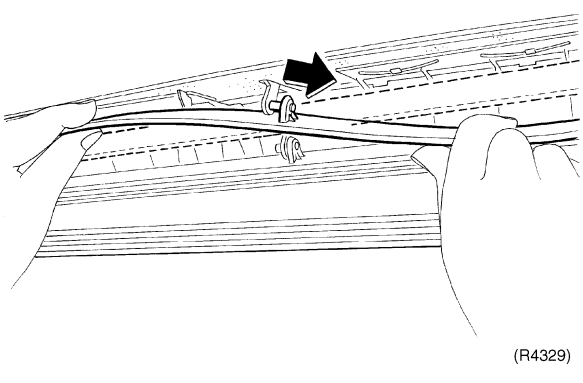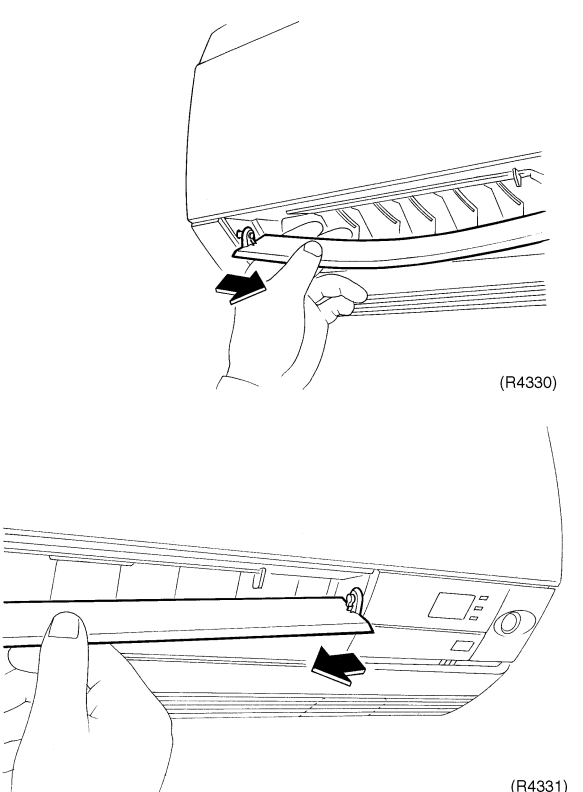Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points	
1. Removing the horizontal blade (large)			
1	Open the horizontal blade (large).	<p>Cautions on Mounting</p> <ul style="list-style-type: none"> ■ Mount the large horizontal blade to the upper side and the small horizontal blade to the lower side. Do not put them in the wrong place. ■ There is a key alignment mark at the right side. Insert the key first while turning. ■ After key alignment at the right side, mount the flap first to the center fixing shaft and then to the left fixing shaft. 	
2	Unfasten the center fixing shaft while bending the horizontal blade slightly.		 <p style="text-align: right;">(R4329)</p>
3	Unfasten the left fixing shaft of the horizontal blade (large).		 <p style="text-align: right;">(R4330)</p>
4	Unfasten the right fixing shaft of the horizontal blade (large).		 <p style="text-align: right;">(R4331)</p>

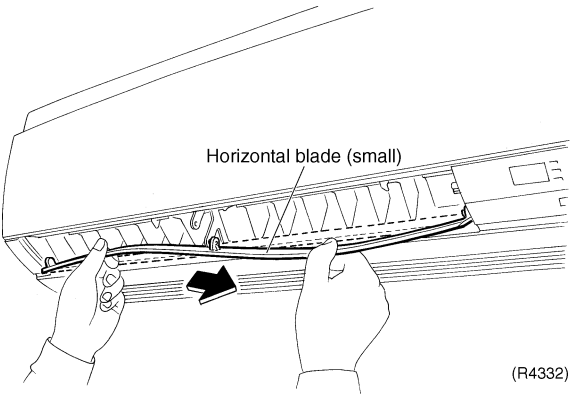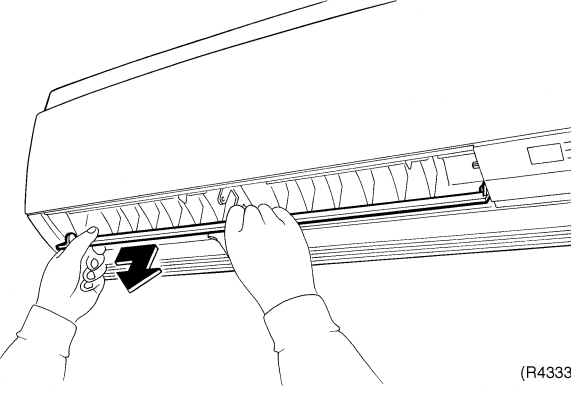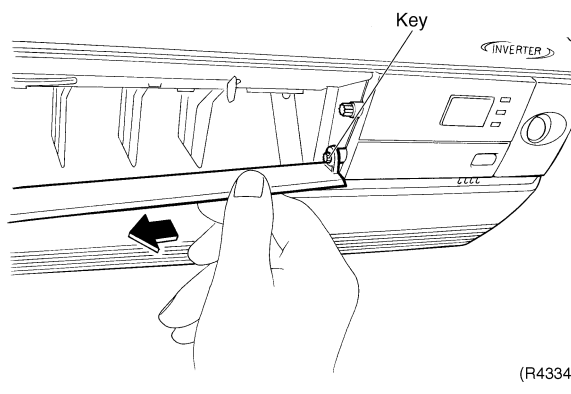Step	Procedure	Points
2. Removing the horizontal blade (small)		
1	<p>Remove the horizontal blade (small) while bending the fixed part at the center slightly.</p>  <p>(R4332)</p>	
2	<p>Unfasten the left side.</p>  <p>(R4333)</p>	
3	<p>Unfasten the key type fixing shaft at the right side.</p>  <p>(R4334)</p>	

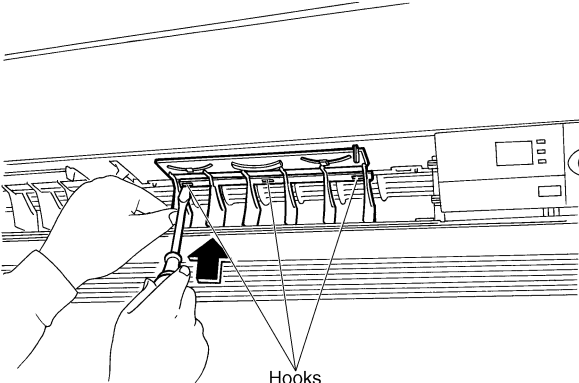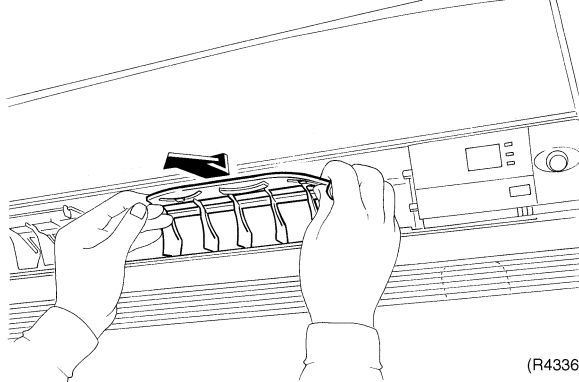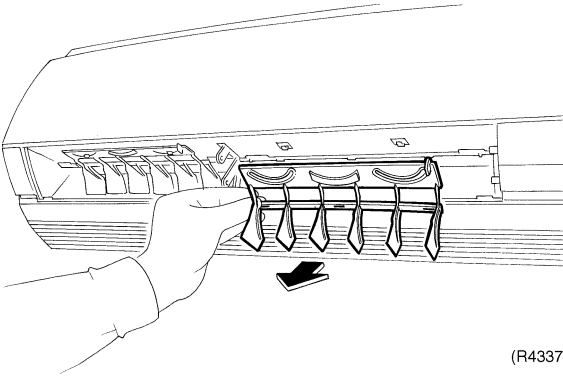Step	Procedure	Points
3. Removing the vertical blade		
1	Unfasten the hooks at the shaft mounting part by pressing them with a flat screwdriver.  <p style="text-align: center;">Hooks</p>	
2	Unfasten the hooks at the upper 2 positions. 	
3	Remove the vertical blade toward yourself. 	<ul style="list-style-type: none"> ■ Six vertical blades are united as a set. (It is impossible to replace only one blade.) ■ The set of blades is not marked for difference between right and left.






1.5 Removal of Electrical Box





Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	The figure shows the connections of wire harnesses.	<p>(R4338)</p>	<p>Preparation</p> <ul style="list-style-type: none"> Remove the front grille according to the "Removal of Front Grille".
2	Remove the screw of the electric wire retaining plate.	<p>(R4339)</p>	
3	Loosen the screws of the terminal board and disconnect the connecting wires.	<p>(R4340)</p>	
4	Remove the connector of the swing motor [S6].	<p>(R4341)</p>	

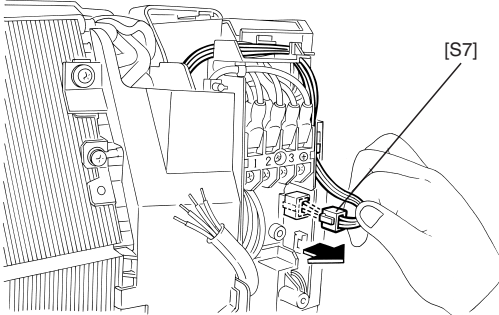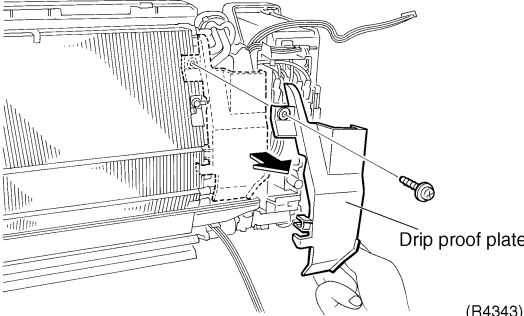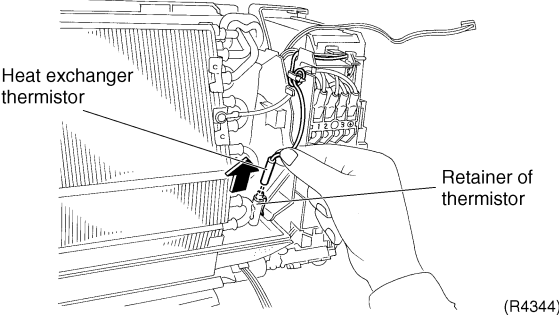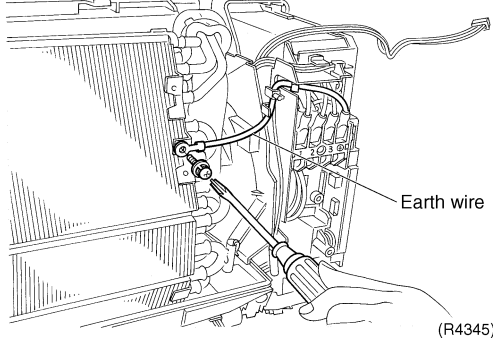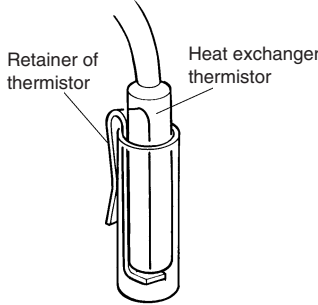Step		Procedure	Points
5	Remove the connector of the fan motor [S7].		<ul style="list-style-type: none"> ■ FTK(X)D series only.
6	Remove the drip proof plate by removing the screw.		<ul style="list-style-type: none"> ■ Put any excess wires behind the power supply lead wire.
7	Replace the heat exchanger thermistor.		<ul style="list-style-type: none"> ■ Use care not to lose the retainer of thermistor.
8	Disconnect the earth wire by removing the screw.		

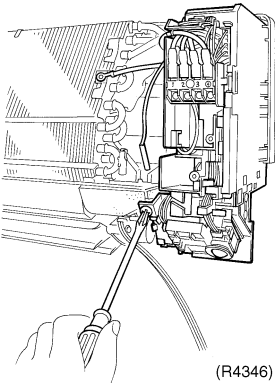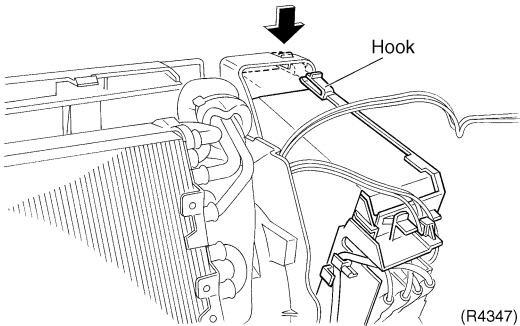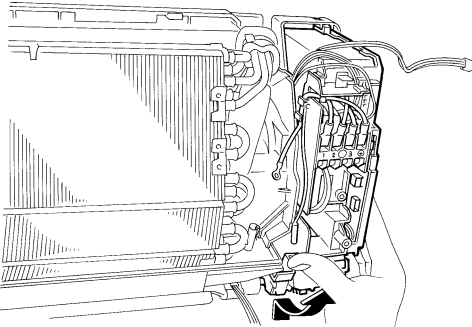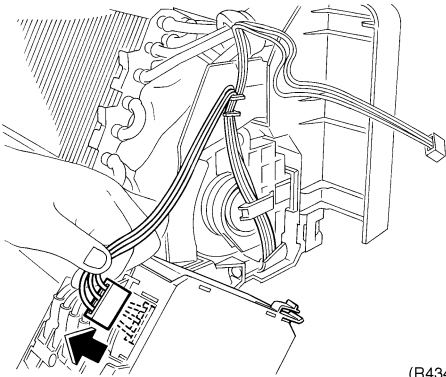Step	Procedure	Procedure	Points
9	Remove the screw of the electrical box.	 <p>(R4346)</p>	
10	Release the hook at the upper far side by pressing it from above and pulling the box toward yourself.	 <p>(R4347)</p>	
11	Lift up the electrical box and pull it toward yourself.	 <p>(R4348)</p>	<ul style="list-style-type: none"> There is a hook also at the lower part of the back. When mounting the box, make sure that it is securely fastened.
12	When the connector of the fan motor [S1] is removed, the electrical box can be dismantled.	 <p>(R4349)</p>	





1.6 Removal of PCB





Procedure










Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.




Step	Procedure	Points
<p>1. Removing the shelter</p> <p>1 The figure shows the appearance of the electrical box.</p> <p>2 Open the shelter (at the back).</p> <p>3 Push the upper center of the shelter and unfasten the hooks at the upper 2 positions of the shelter.</p>	<p>Signal receiver PCB</p> <p>Signal receiver unit</p> <p>(R4350)</p> <p>Shelter (back)</p> <p>Hooks</p> <p>(R4351)</p> <p>Hook</p> <p>Hook</p> <p>(R4352)</p>	<p>Preparation</p> <ul style="list-style-type: none"> Remove the electrical box according to the "Removal of Electrical Box."
<p>2. Removing the heat exchanger thermistor</p> <p>1 Remove the heat exchanger thermistor and disconnect the earth wire.</p>	<p>Earth wire</p> <p>Clamp</p> <p>Heat exchanger thermistor</p> <p>(R4353)</p>	

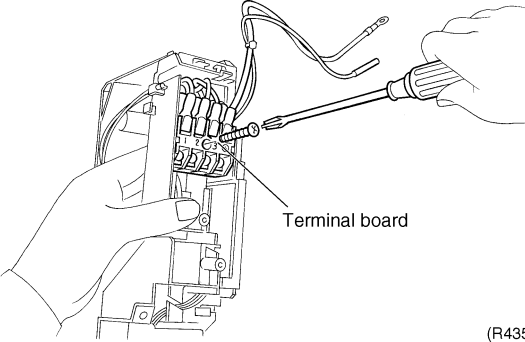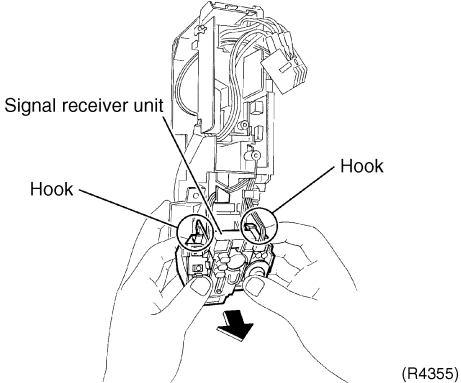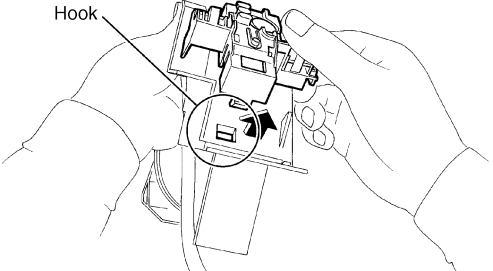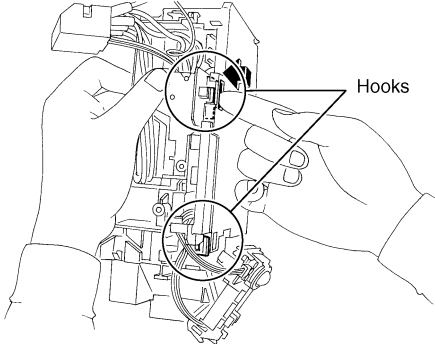Step	Procedure	Points
<p>3. Removing the terminal board</p>	<p>1 Dismount the terminal board by removing the screw.</p>  <p>(R4354)</p>	
<p>4. Removing the signal receiver unit</p>	<p>1 Remove the signal receiver unit by unfastening the hooks (one each at the right and left).</p>  <p>(R4355)</p>  <p>(R4356)</p>  <p>(R4357)</p>	

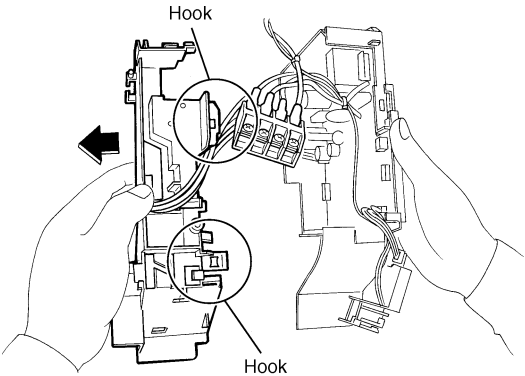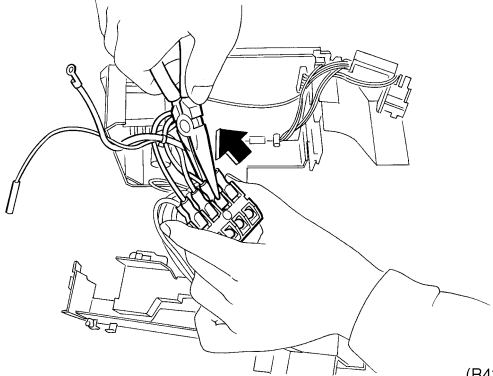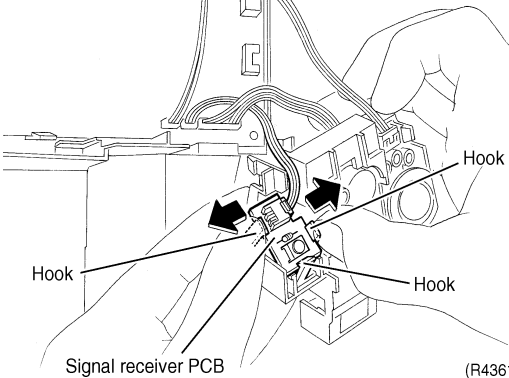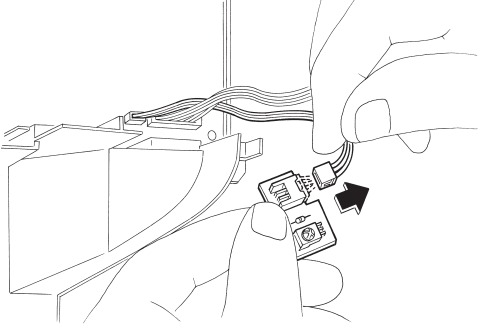Step	Procedure	Procedure	Points
3	Remove the electrical box by sliding it to the left.	 <p style="text-align: right;">(R4358)</p>	
4	Disconnect the wire harness.	 <p style="text-align: right;">(R4359)</p>	
5. Removing the signal receiver PCB			
1	Remove the signal receiver PCB by opening the hooks at 3 positions.	 <p style="text-align: right;">(R4361)</p>	
2	Disconnect the connector from the signal receiver PCB.	 <p style="text-align: right;">(R4362)</p>	

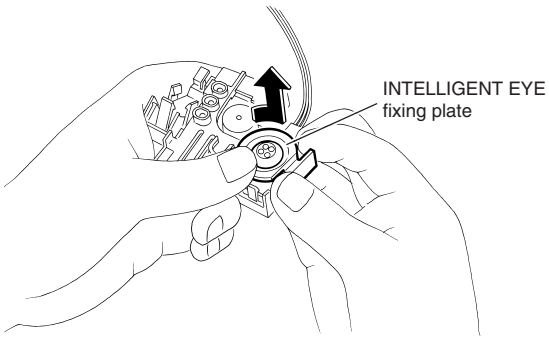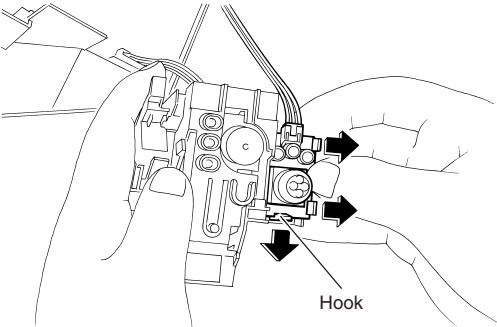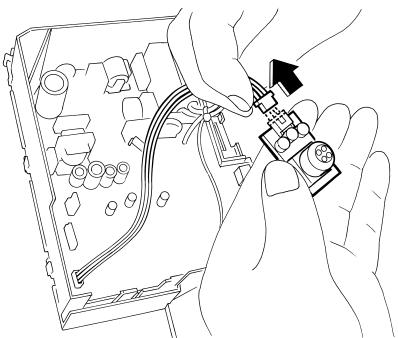Step	Procedure	Points
<p>6. Removing the INTELLIGENT EYE PCB</p>	<p>1 Remove the INTELLIGENT EYE fixing plate by twisting it clockwise.</p>  <p>(R4363)</p> <p>2 Remove the INTELLIGENT EYE PCB by unfastening the hook.</p>  <p>(R4364)</p> <p>3 Disconnect the connector from the INTELLIGENT EYE PCB.</p>  <p>(R4365)</p>	

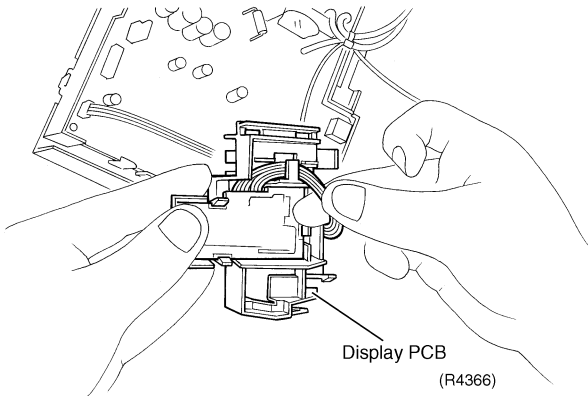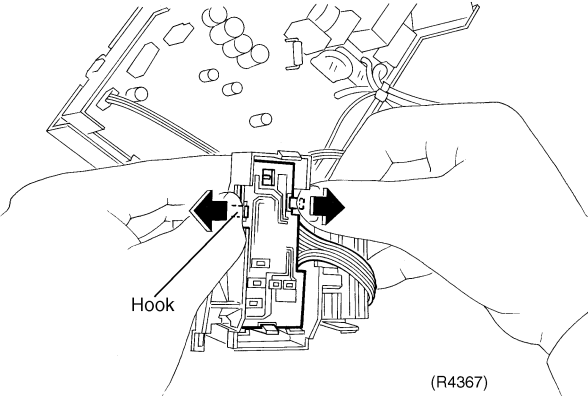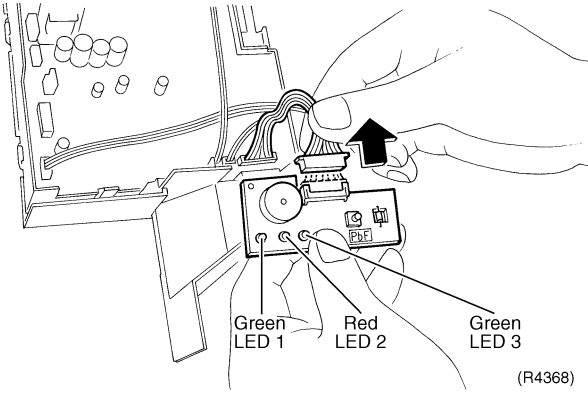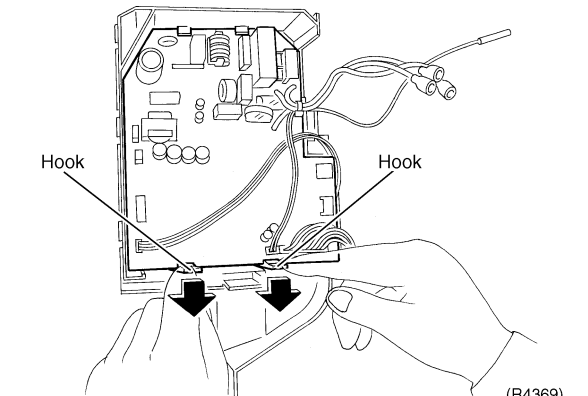Step	Procedure	Points
<p>7. Removing the display PCB</p>	<p>1 The figure shows the connection of wire harness for the display PCB.</p>  <p>2 Remove the display PCB by unfastening the 2 hooks.</p>  <p>3 Disconnect the connector from the display PCB.</p> 	
<p>8. Removing the control PCB</p>	<p>1 Dismount the control PCB by removing the 2 hooks.</p> 	

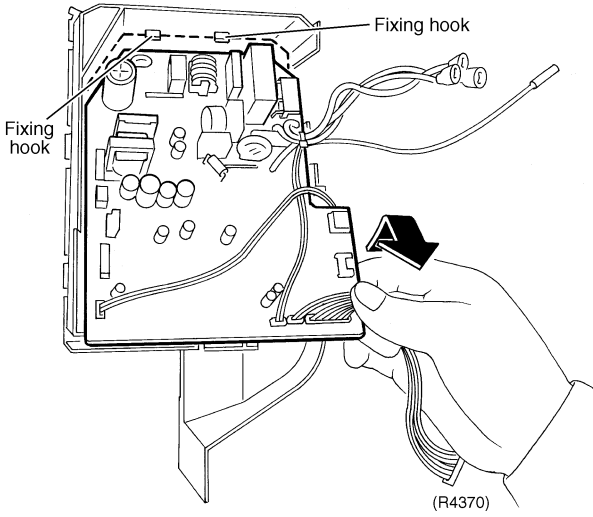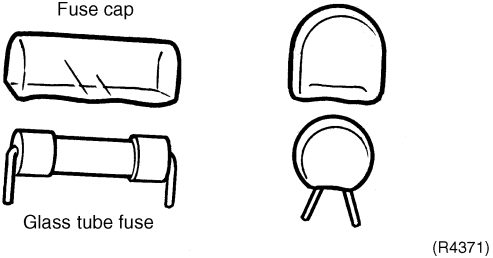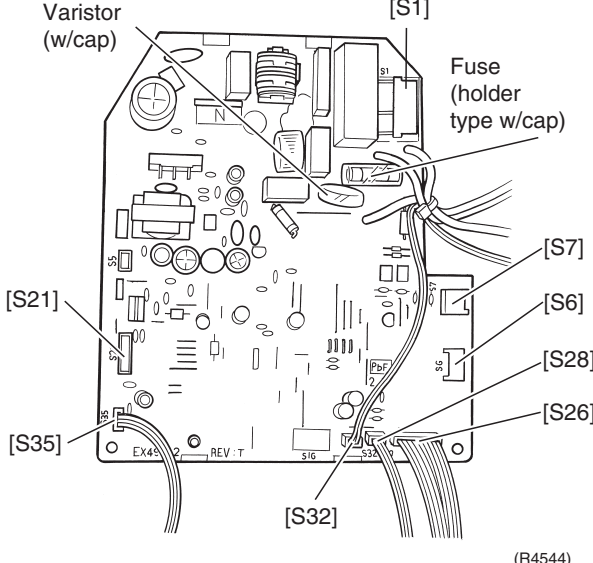Step	Procedure	Points
2	<p>Lift up the bottom of the control PCB and pull it out.</p> 	<ul style="list-style-type: none"> When mounting the control PCB, make sure that it is fixed by upper hooks.
3	<p>The figures show the names of the PCB component parts.</p>  	<ul style="list-style-type: none"> Lead-free solder (PbF) is used for the PCB. When replacing the PCB, use the specific solder and soldering iron. In case of FTK(X)D series. <ul style="list-style-type: none"> [S1] To AC fan motor [S6] To swing motor [S7] To AC fan motor (Hall IC) [S21] HA connector [S26] To display PCB [S28] To signal receiver PCB [S32] To heat exchanger thermistor [S35] To INTELLIGENT EYE PCB

Step	Procedure	Points
	<p>Varistor (w/cap)</p> <p>[S1]</p> <p>Fuse (holder type w/cap)</p> <p>[S6]</p> <p>[S21]</p> <p>[S35]</p> <p>[S32]</p> <p>[S28]</p> <p>[S26]</p> <p>(R4288)</p> <p>[S29]</p> <p>[S27]</p> <p>SW1</p> <p>RTH1</p> <p>[S36]</p> <p>LED 1 (Green)</p> <p>LED 2 (Yellow)</p> <p>LED 3 (Green)</p> <p>(R4373)</p>	<ul style="list-style-type: none"> ■ In case of FTK(X)S series. [S1] To DC fan motor [S6] To swing motor [S21] HA connector [S26] To display PCB [S28] To signal receiver PCB [S32] To heat exchanger thermistor [S35] To INTELLIGENT EYE PCB

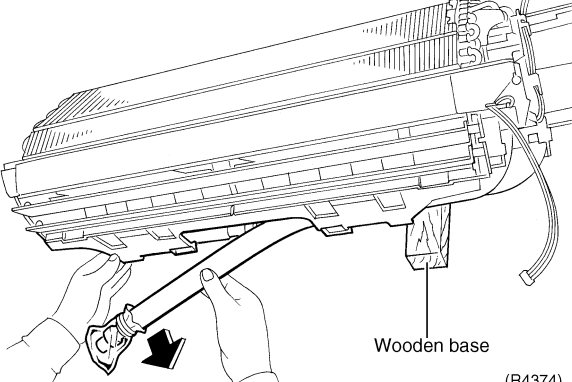
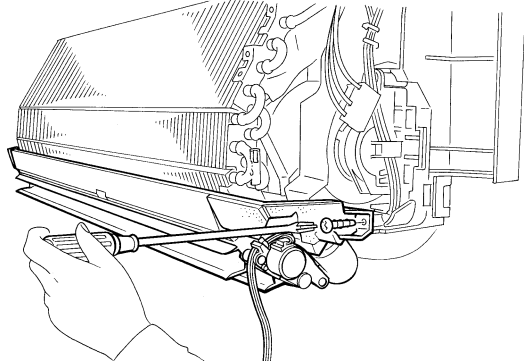
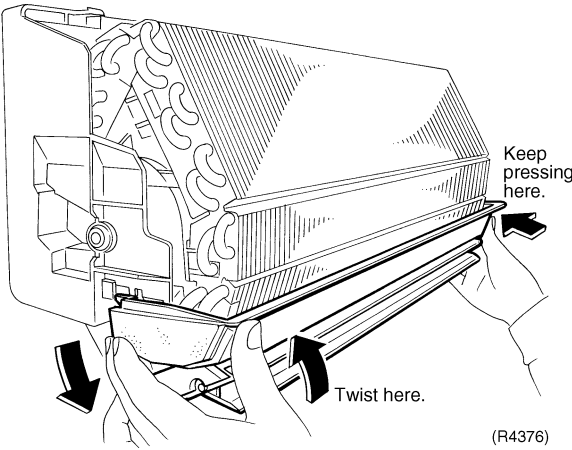
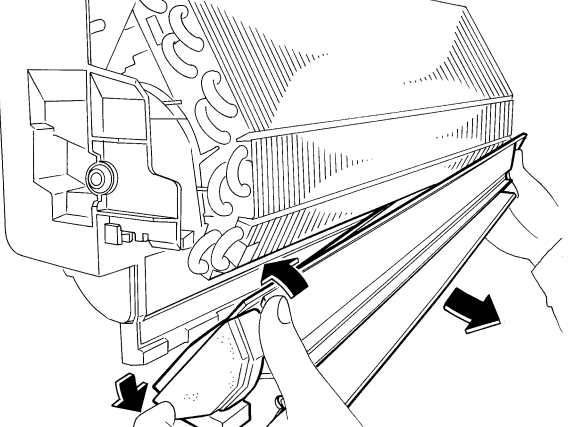
1.7 Removal of Drain Pan Unit





Procedure











Warning

Be sure to turn off all power supplies at least 10 min. before disassembling work.

Step	Procedure	Points
1. Removing the drain pan unit		<p>Preparation</p> <ul style="list-style-type: none"> ■ Remove the electrical box according to the "Removal of Electrical Box." ■ Inserting of the wooden base facilitates the removing work. ■ Place a plastic bag under the drain pan to prevent from wetting the floor with remaining drain.
1	<p>Lift up the indoor unit body slightly and pull out the drain hose. (In the case of left piping)</p>  <p style="text-align: right;">(R4374)</p>	
2	<p>Remove the screw at the left side of the drain pan.</p>  <p style="text-align: right;">(R4375)</p>	
3	<p>Remove the drain pan from the heat exchanger by pressing its right side and twisting its left side.</p>  <p style="text-align: right;">(R4376)</p>  <p style="text-align: right;">(R4377)</p>	

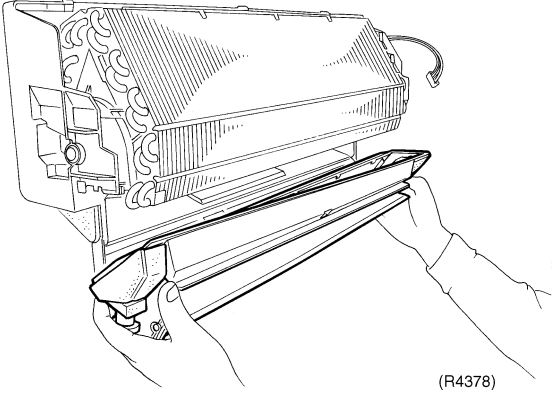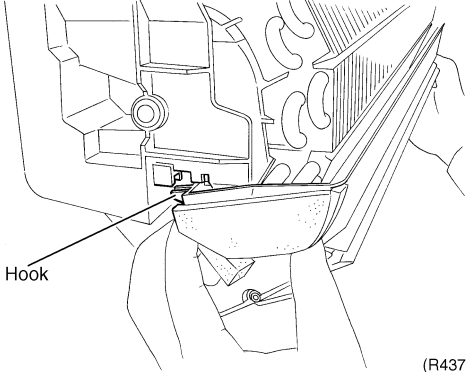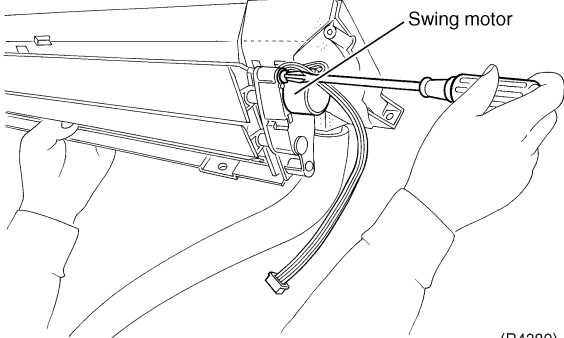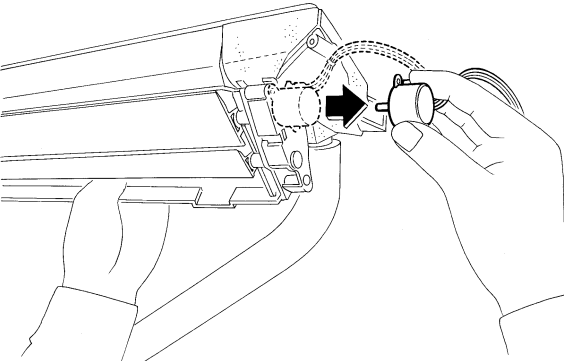Step	Procedure	Points
4	<p data-bbox="201 215 459 309">Remove the drain pan toward yourself from the indoor unit body.</p>  <p data-bbox="959 622 1018 645">(R4378)</p>  <p data-bbox="563 958 611 981">Hook</p> <p data-bbox="986 1048 1045 1070">(R4379)</p>	<p data-bbox="1098 215 1353 244">Caution on Mounting</p> <ul data-bbox="1098 248 1442 342" style="list-style-type: none"> <li data-bbox="1098 248 1442 342">■ Make sure that the hook at the left side is fitted in the groove.
2. Removing the swing motor		
1	<p data-bbox="201 1133 448 1196">Remove the screw of the swing motor.</p>  <p data-bbox="906 1189 1018 1211">Swing motor</p> <p data-bbox="999 1507 1058 1529">(R4380)</p>	
2	<p data-bbox="201 1559 408 1621">Pull out the swing motor.</p>  <p data-bbox="930 1962 989 1984">(R4381)</p>	

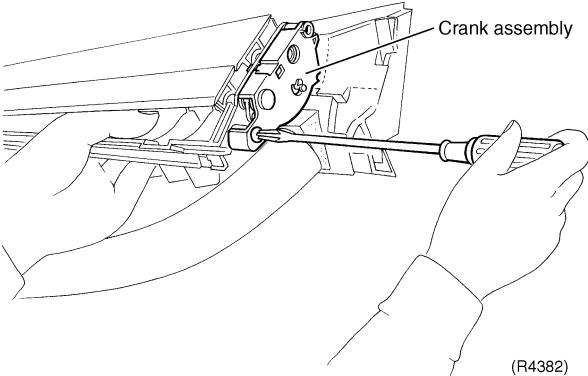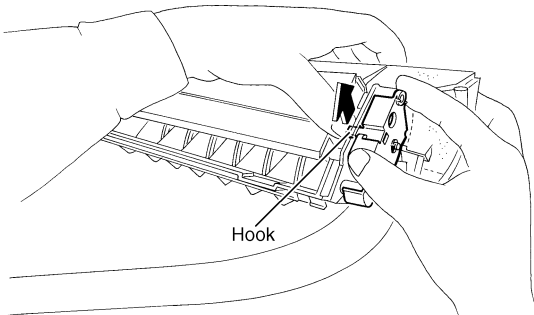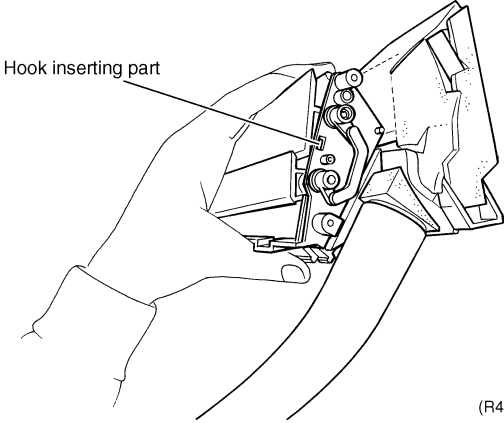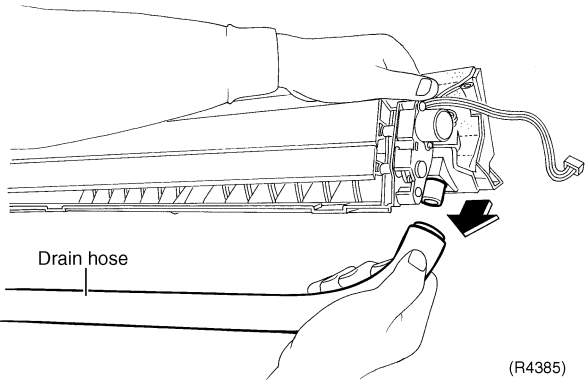Step	Procedure	Points
<p>3. Removing the crank assembly</p>		
<p>1</p>	<p>Remove the screw of the crank assembly.</p>  <p>Crank assembly</p> <p>(R4382)</p>	
<p>2</p>	<p>Remove the crank assembly by unfastening the hook.</p>  <p>Hook</p> <p>(R4383)</p>	
<p>3</p>	<p>The figure shows the position of the hook when the crank assembly has been removed.</p>  <p>Hook inserting part</p> <p>(R4384)</p>	
<p>4. How to connect the drain hose in right piping</p>		
<p>1</p>	<p>Pull out the drain hose from its right side connection.</p>  <p>Drain hose</p> <p>(R4385)</p>	

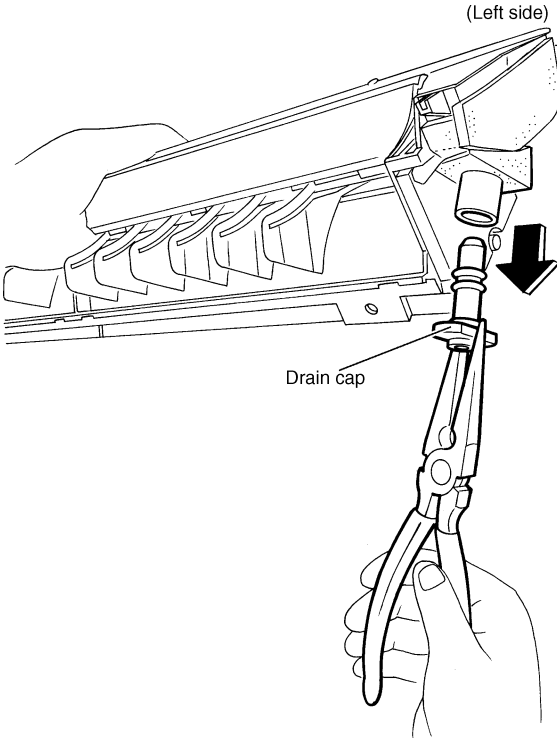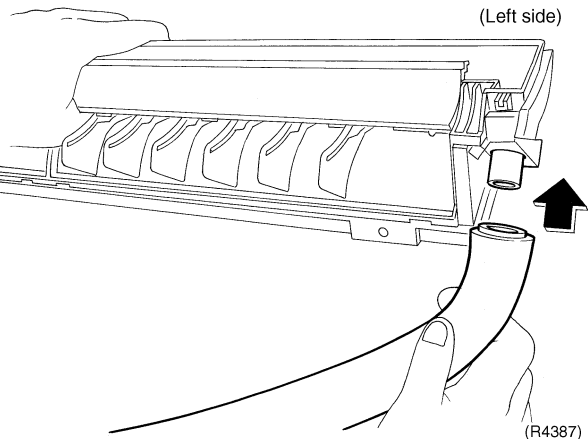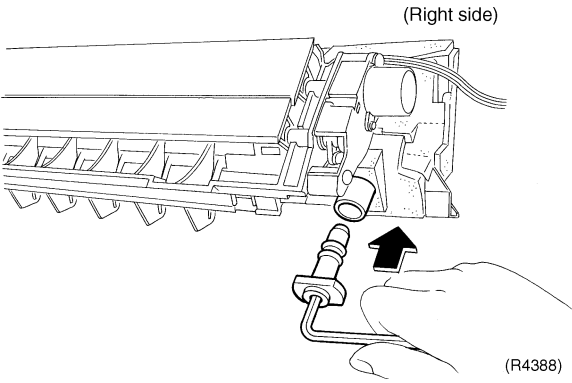Step	Procedure	Points
2	Remove the drain cap located at the left side of the drain pan unit.	
3	Insert the drain hose to the left side.	
4	Press the removed drain plug into the right side with an Allen wrench (4mm).	 <p data-bbox="1098 1507 1428 1534">■ Use a 4mm Allen wrench.</p> <p data-bbox="1098 1552 1436 1769">  Caution Do not thrust in the drain plug with a sharp-pointed tool like a screwdriver. (The drain plug may be broken, resulting in water leakage.) </p>

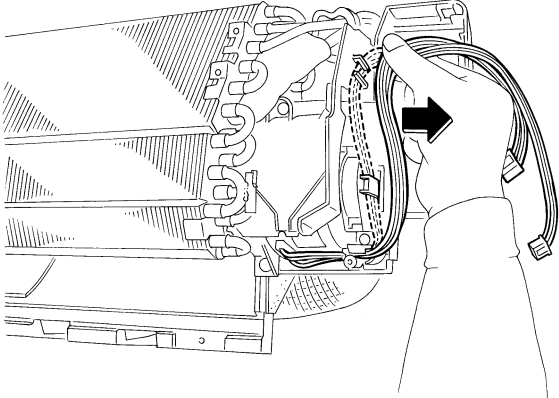
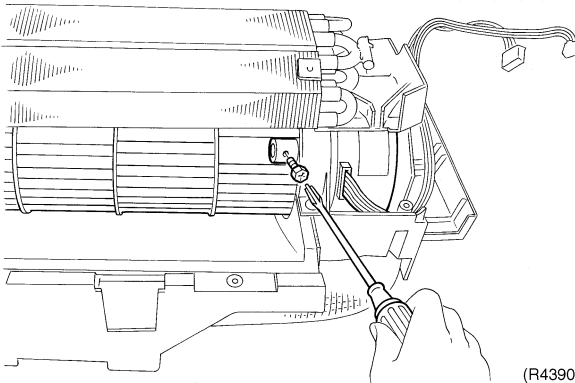
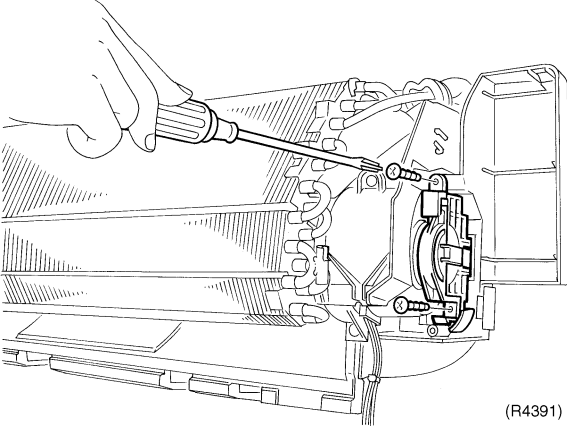
1.8 Removal of Fan Motor





Procedure



Warning

Be sure to turn off all power supplies at least 10 min. before disassembling work.

Step	Procedure	Procedure	Points
1	Undo the fan motor lead wires from the hooks.	 <p style="text-align: right;">(R4389)</p>	<p>Preparation</p> <ul style="list-style-type: none"> ■ Remove the drain pan unit according to the "Removal of Drain Pan Unit." ■ You can remove the fan motor with the heat exchanger left. It is easy to clean up the heat exchanger.
2	Loosen and remove the fan rotor lock screw.	 <p style="text-align: right;">(R4390)</p>	
3	Remove the 2 screws of the fan motor fixing plate.	 <p style="text-align: right;">(R4391)</p>	

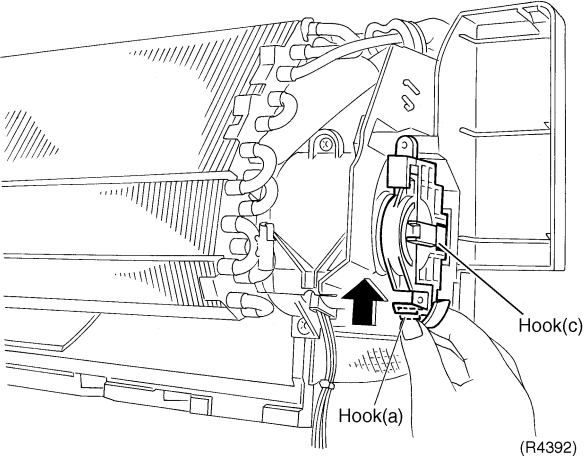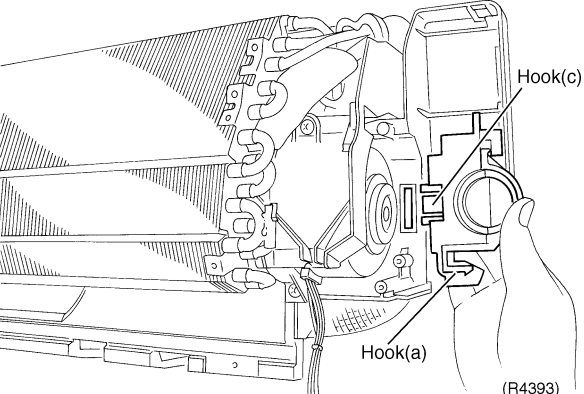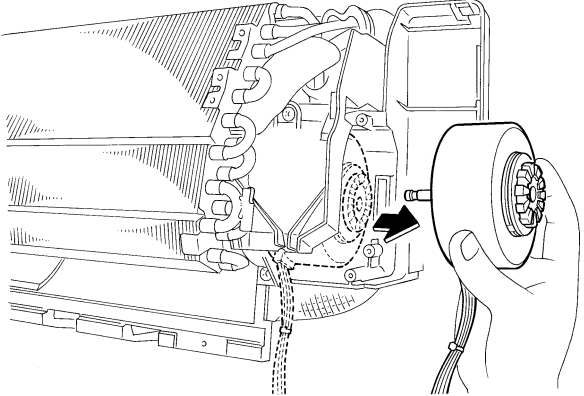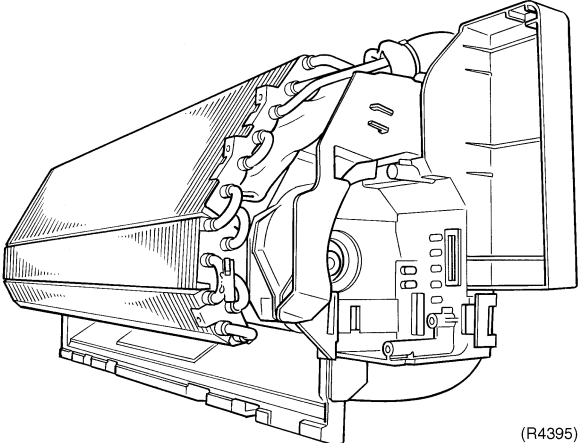Step	Procedure	Points	Points
4	Unfasten the hook (a) of the fan motor fixing plate with your thumb.	 <p>(R4392)</p>	
5	Unfasten the hook (c).	 <p>(R4393)</p>	
6	Remove the fan motor.	 <p>(R4394)</p>  <p>(R4395)</p>	

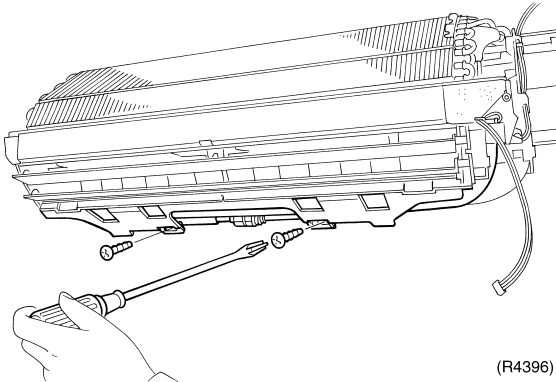
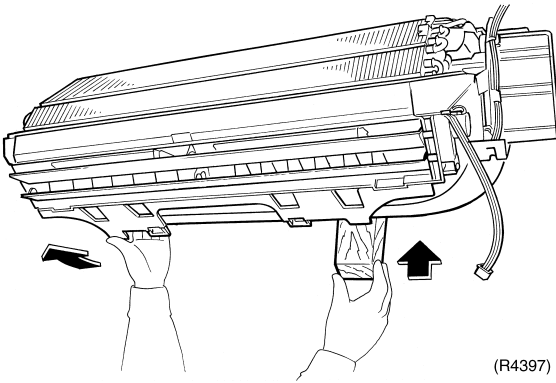
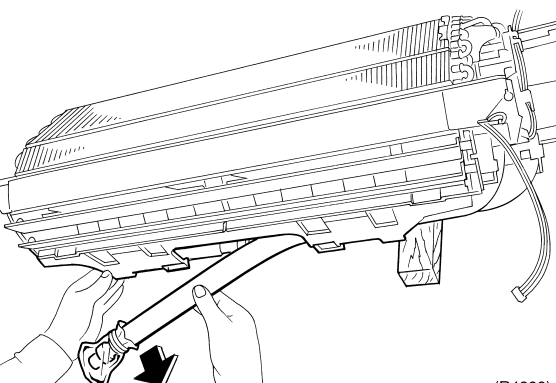
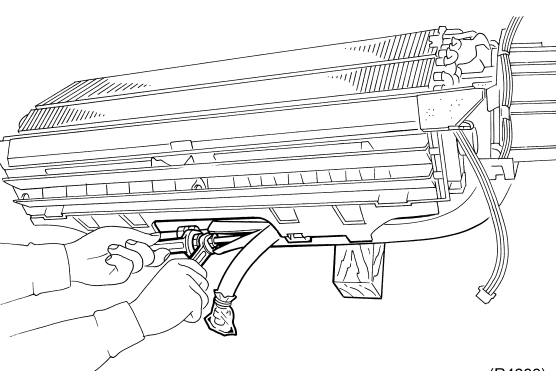
1.9 Removal of Heat Exchanger





Procedure





Warning

Be sure to turn off all power supplies at least 10 min. before disassembling work.

Step	Procedure	Points
1. Disconnecting the refrigerant pipe		<p>Preparation</p> <ul style="list-style-type: none"> Remove the drain pan unit according to the "Removal of Drain Pan Unit."
1	<p>Remove the screws which fix the heat exchanger to the installation plate.</p>  <p>(R4396)</p>	
2	<p>Lift the indoor unit by a wooden base.</p>  <p>(R4397)</p>	<p>Caution In pump-down work, be sure to stop the compressor before disconnecting the refrigerant pipe. If the refrigerant pipe is disconnected with the compressor being operated and the stop valve being open, air may be sucked in to generate an over-pressure in refrigeration cycle, thus resulting in pipe rupture or accidental injury.</p>
3	<p>Lift up the indoor unit body slightly and pull out the drain hose. (In the case of left piping)</p>  <p>(R4398)</p>	<ul style="list-style-type: none"> Place a plastic bag under the drain pan to prevent from wetting the floor with remaining drain. If the drain hose is embedded in the wall, disconnect the drain hose beforehand.
4	<p>Disconnect the pipe connection with 2 pair of spanners.</p>  <p>(R4399)</p> <p>Caution From the point of view of environmental protection, be sure to use a vacuum pump for air purging.</p>	<ul style="list-style-type: none"> Carry out the removal works with 2 pair of spanners. When the pipes are disconnected, protect the both openings of pipe side and unit side from entering of moisture.

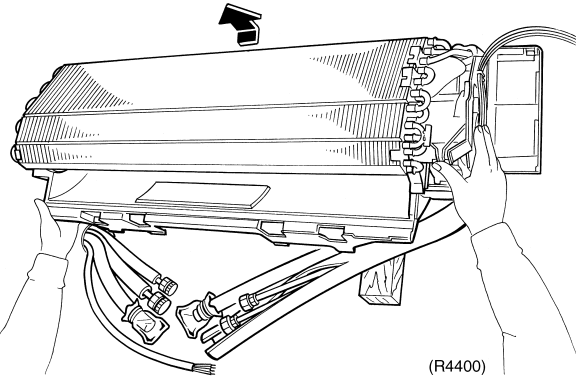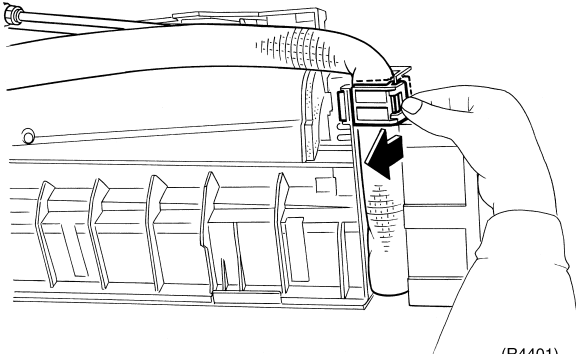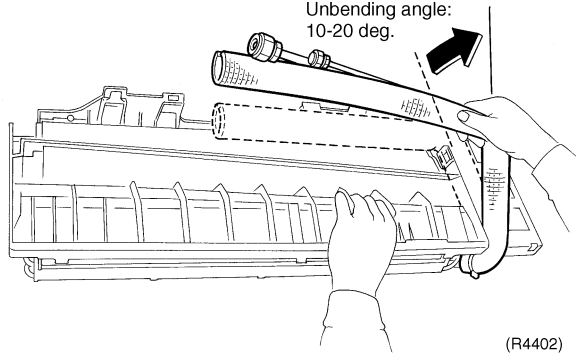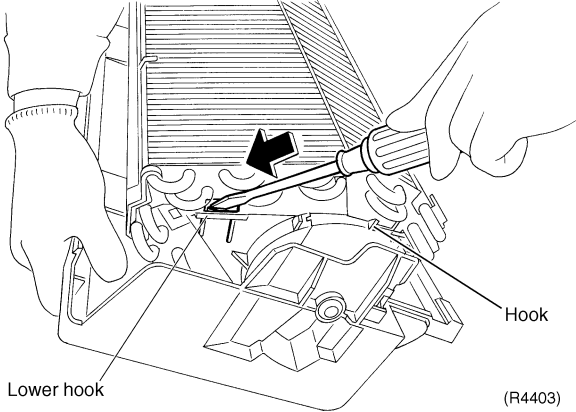Step	Procedure	Points
2. Removing the indoor unit	<p data-bbox="156 248 472 344">1 Remove the indoor unit from the installation plate.</p>  <p data-bbox="927 595 986 618">(R4400)</p>	
3. Removing the heat exchanger	<p data-bbox="156 712 472 846">1 Unfasten the hook of the pipe fixing plate at the back of the unit and pull out the pipe.</p>  <p data-bbox="999 1039 1058 1061">(R4401)</p> <p data-bbox="156 1084 472 1180">2 Widen the auxiliary pipe by about 10-20 degrees.</p>  <p data-bbox="799 1111 954 1155">Unbending angle: 10-20 deg.</p> <p data-bbox="999 1442 1058 1464">(R4402)</p> <p data-bbox="156 1494 419 1590">3 Unfasten the lower hook with a flat screwdriver.</p>  <p data-bbox="501 1901 603 1924">Lower hook</p> <p data-bbox="999 1912 1058 1935">(R4403)</p>	<p data-bbox="1098 1503 1455 1794">Caution When dismantling or mounting the heat exchanger, be sure to wear gloves or wrap it with cloth before proceeding to the work. (You may be injured by the fins.)</p>

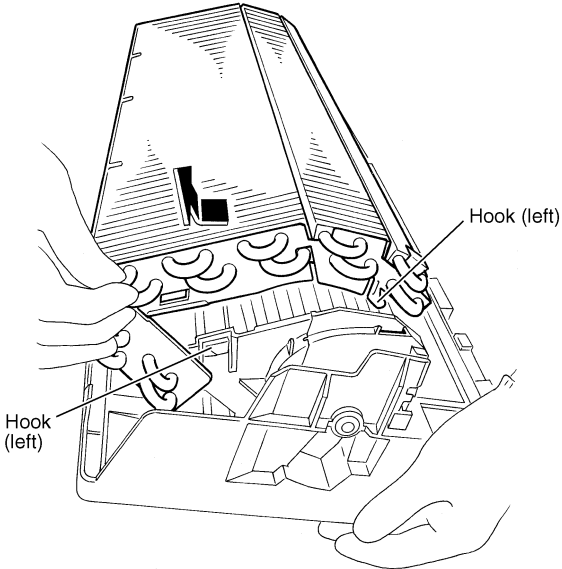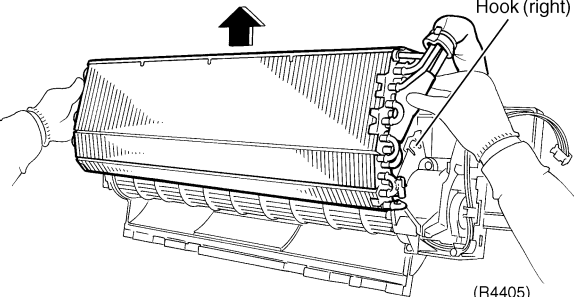Step	Procedure	Points
<p>4</p>	<p>After unfastening the lower hooks, hold up the heat exchanger by its left side and lift it up toward yourself.</p>  <p>(R4404)</p>	<ul style="list-style-type: none"> When mounting the heat exchanger, make sure that the hook (left) is fastened.
<p>5</p>	<p>When the left side is lifted, the hook at the right side comes off position.</p>  <p>(R4405)</p>	
<p>6</p>	<p>Remove the heat exchanger.</p>	

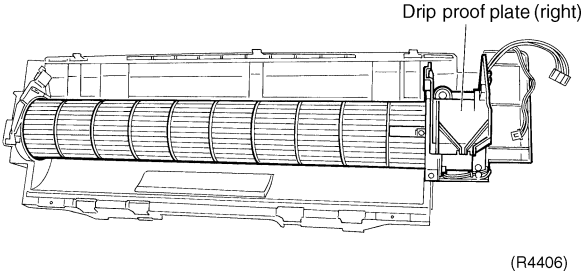
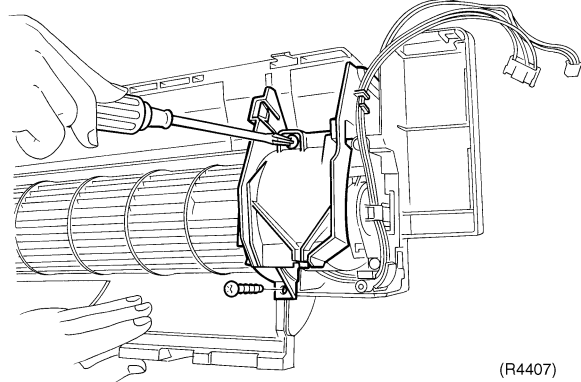
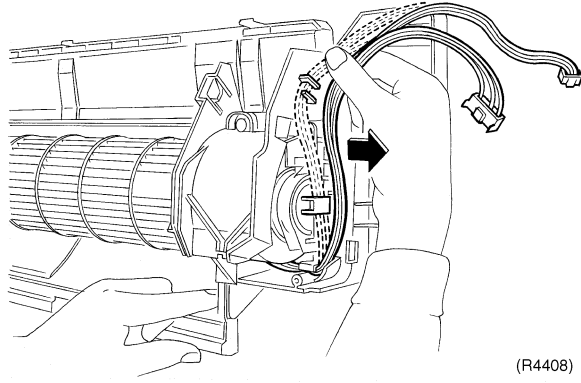
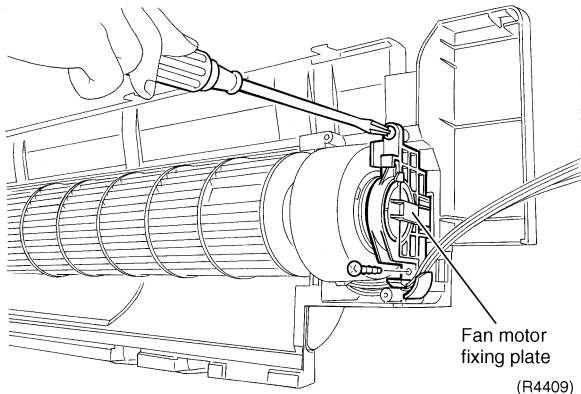
1.10 Removal of Fan Rotor





Procedure






Warning

Be sure to turn off all power supplies at least 10 min. before disassembling work.

Step	Procedure	Points
1. Removing the drip proof plate	 <p style="text-align: right;">Drip proof plate (right)</p> <p style="text-align: right;">(R4406)</p>	<p>Preparation</p> <ul style="list-style-type: none"> Remove the heat exchanger according to the "Removal of Heat Exchanger."
1 Dismount the drip proof plate (right) by removing the 2 screws.	 <p style="text-align: right;">(R4407)</p>	
2 Unhook the fan motor wire harness.	 <p style="text-align: right;">(R4408)</p>	
3 Remove the 2 screws of the fan motor fixing plate.	 <p style="text-align: right;">Fan motor fixing plate</p> <p style="text-align: right;">(R4409)</p>	

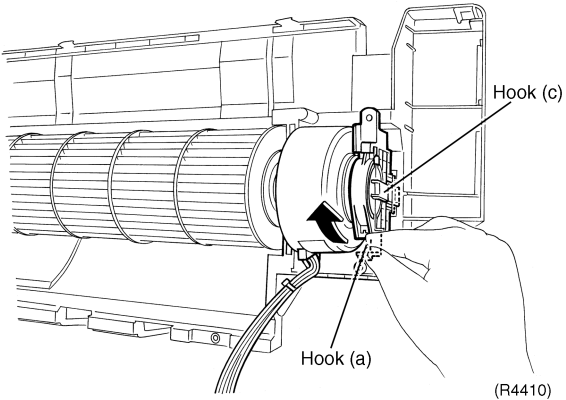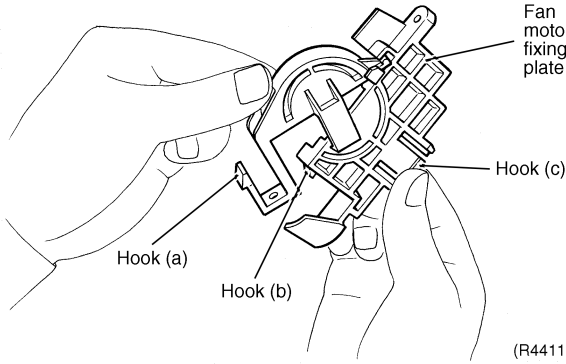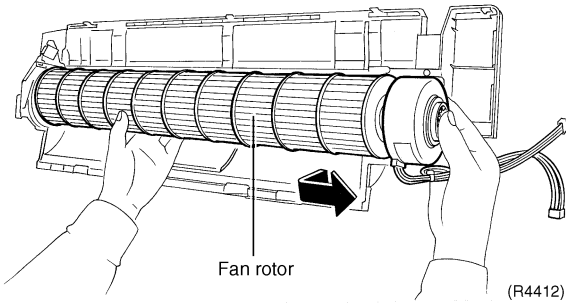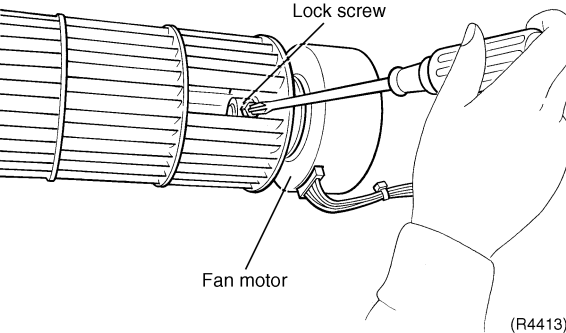Step	Procedure	Points
4	<p>Unfasten the hook (a) of the fan motor fixing plate with your thumb and unfasten the hook (b).</p>  <p style="text-align: right;">(R4410)</p>	
5	<p>The fan motor fixing plate can be removed from the unit when the hook (c) is unfastened.</p>  <p style="text-align: right;">(R4411)</p>	
2. Removing the fan rotor		
1	<p>Dislocate the fan rotor by sliding it to the right.</p>  <p style="text-align: right;">(R4412)</p>	
2	<p>Remove the fan rotor by loosening the lock screw.</p>  <p style="text-align: right;">(R4413)</p>	

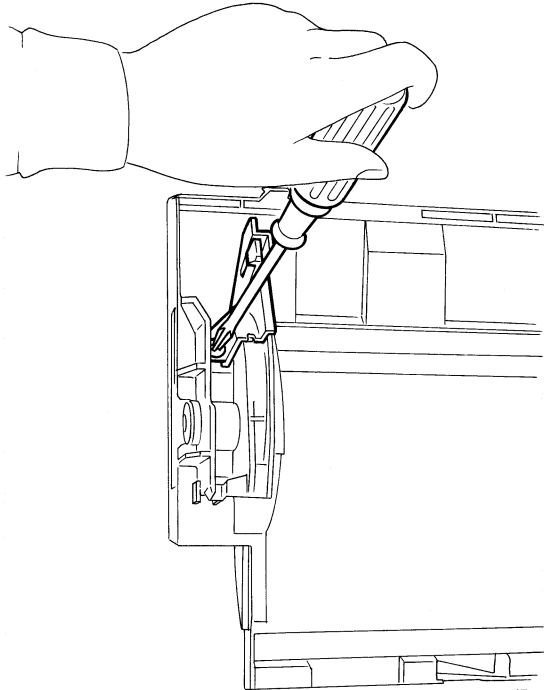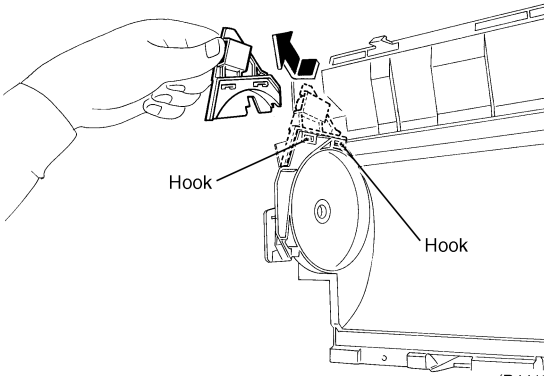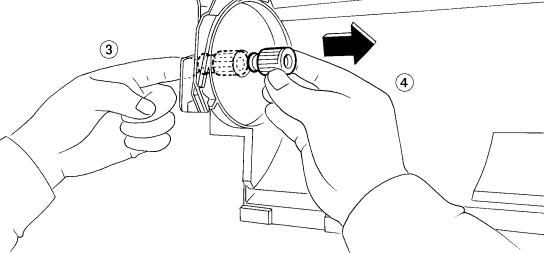Step	Procedure	Points
<p>3. Removing the bearing</p>		
<p>1</p>	<p>Remove the screw of the drip proof plate (left).</p>  <p>(R4414)</p>	
<p>2</p>	<p>The drip proof plate can be removed when the hooks at 2 positions are unfastened.</p>  <p>Hook</p> <p>Hook</p> <p>(R4415)</p>	
<p>3</p>	<p>Press the rubber-made bearing with force from outside.</p>	
<p>4</p>	<p>Remove the bearing.</p>  <p>3</p> <p>4</p> <p>(R4416)</p>	

2. Outdoor Unit





2.1 Removal of Panels and Fan Motor



Procedure











Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.




Step	Procedure	Points
<p>1. Features</p> <p>1 Loosen the screw of the stop valve cover. Pull down the stop valve cover and remove it.</p>	<p>Handle</p> <p>(R7186)</p> <p>Outdoor air thermistor</p> <p>(R3236)</p> <p>Stop valve cover</p> <p>(R7188)</p> <p>Shelter</p> <p>Hooks</p> <p>(R7189)</p>	<ul style="list-style-type: none"> ■ Take care not to cut your finger by the fins of the heat exchanger. ■ The stop valve cover is united with the shelter. ■ When reassembling, make sure to fit the 5 hooks.

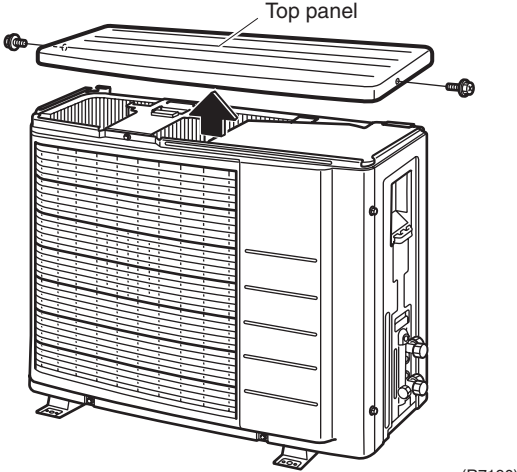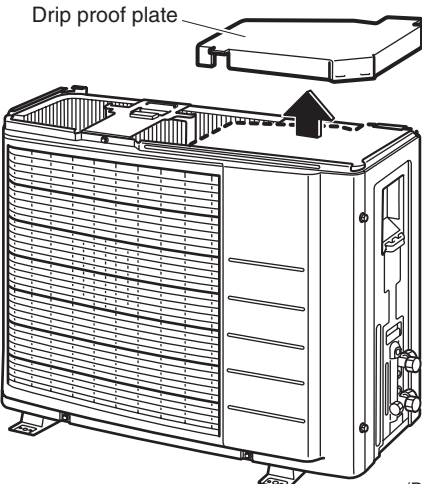
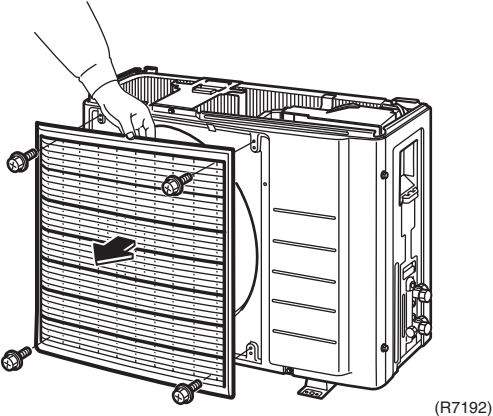
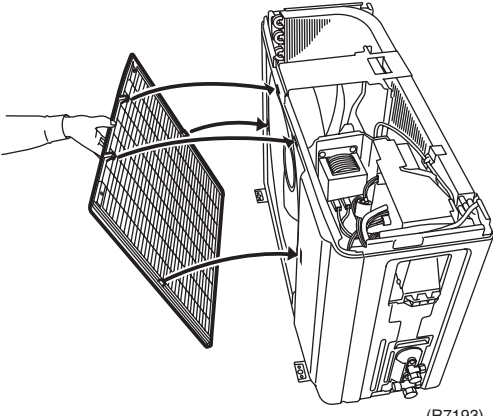
Step	Procedure	Points
2. Remove the panels.		
1	<p>Loosen the 2 screws (right, left) and lift the top panel.</p>  <p style="text-align: right;">(R7190)</p>	
2	<p>Remove the drip proof plate.</p>  <p style="text-align: right;">(R7191)</p>	
3	<p>Loosen the 4 screws of the discharge grille.</p>  <p style="text-align: right;">(R7192)</p>  <p style="text-align: right;">(R7193)</p>	<p>■ The discharge grille has 4 hooks.</p>

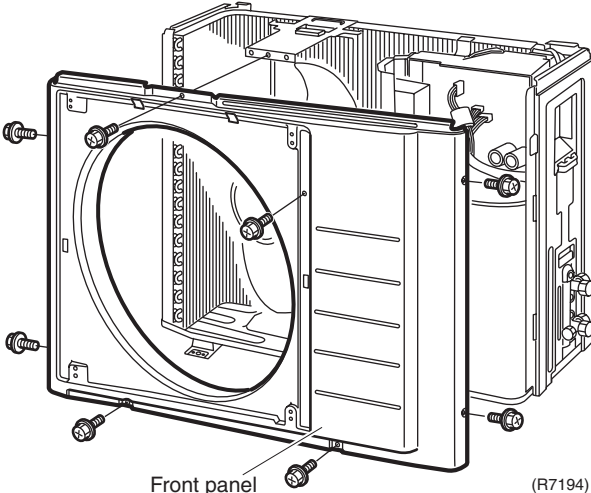
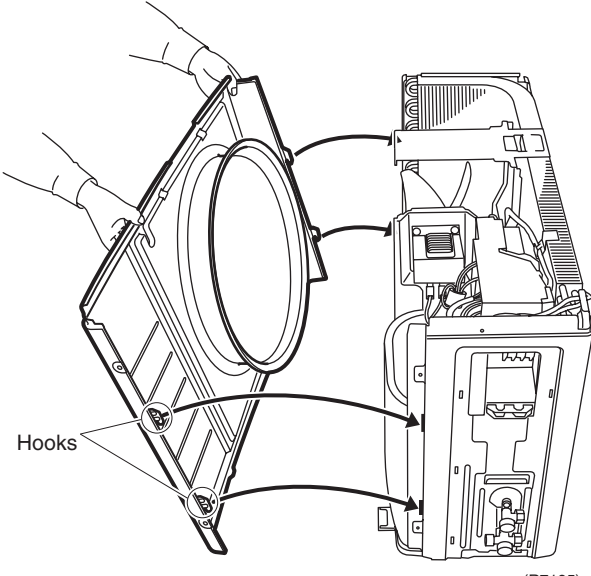
Step	Procedure	Points
4	<p>Loosen the 8 screws of the front panel.</p> 	
5	<p>Undo the hooks. Pull and remove the front panel.</p> 	<ul style="list-style-type: none"> ■ The front panel has 4 hooks. ■ The fan motor is united with the front panel.

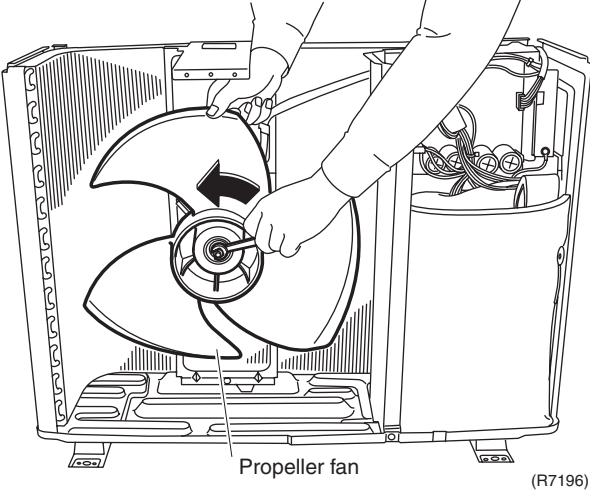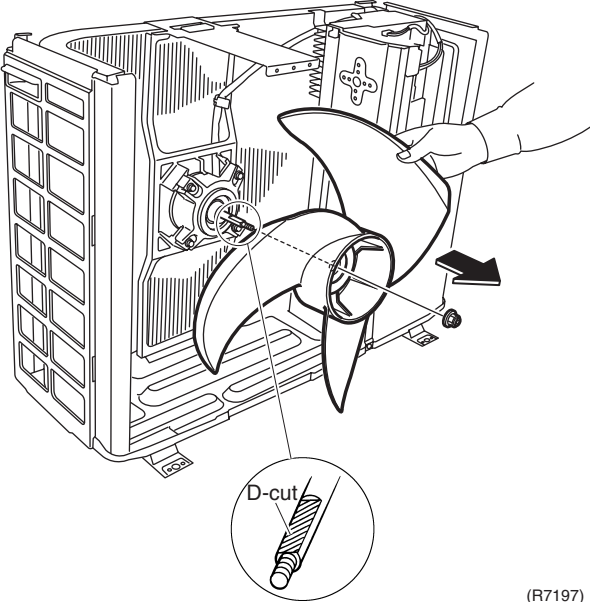
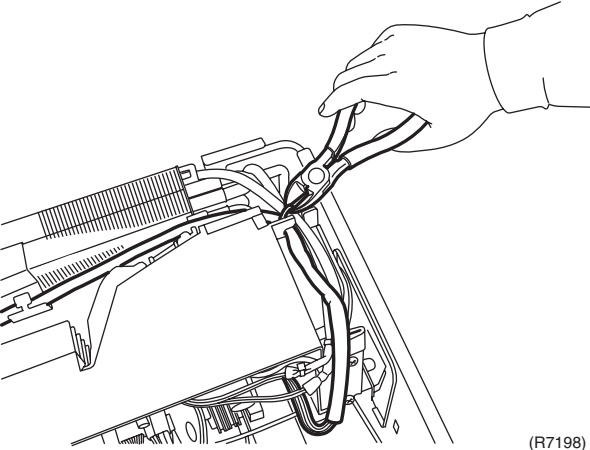
Step	Procedure	Points
3. Remove the fan motor.		
1	<p>Unscrew the washer-fitted nut (M10) of the propeller fan with a spanner.</p>  <p style="text-align: center;">Propeller fan (R7196)</p>	<ul style="list-style-type: none"> ■ The screw has clockwise winding.
2	<p>Remove the propeller fan.</p>  <p style="text-align: center;">D-cut (R7197)</p>	<ul style="list-style-type: none"> ■ Align ▼ mark of the propeller fan with D-cut section of the motor shaft when reassembling.
3	<p>Cut the clamp.</p>  <p style="text-align: center;">(R7198)</p>	

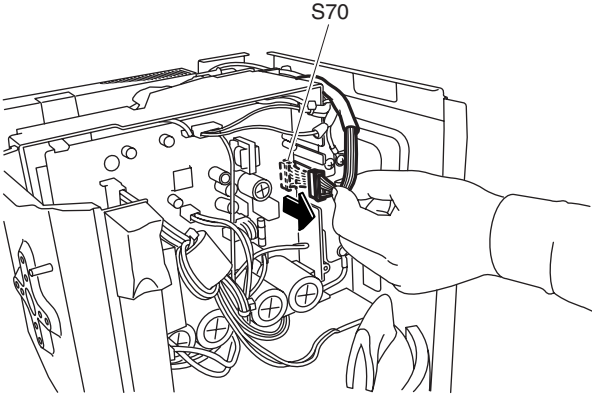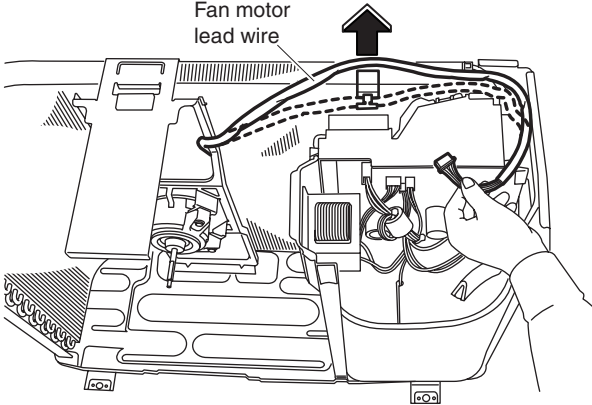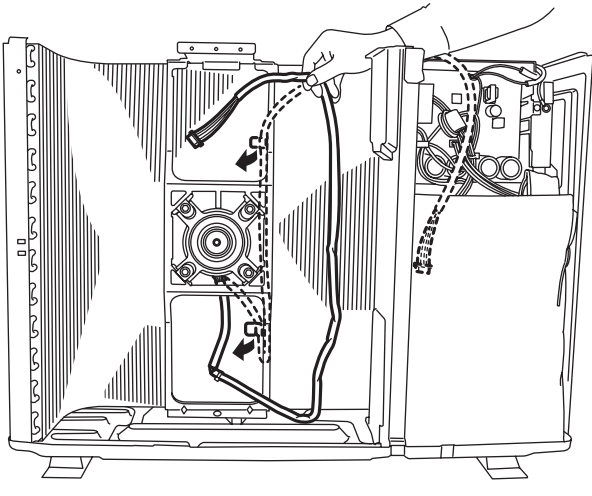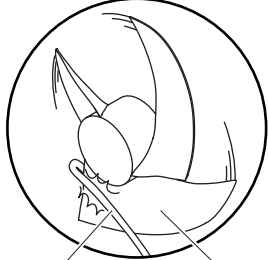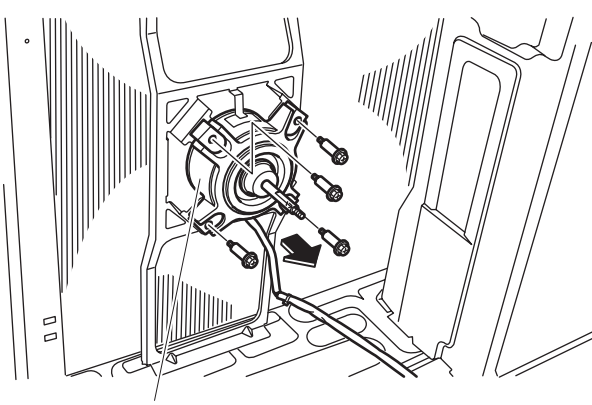Step	Procedure	Points
4	Disconnect the fan motor connector [S70]. 	
5	The illustration shows arrangement of the fan motor lead wire. 	
6	Loosen the fixing hooks and release the lead wire. 	<ul style="list-style-type: none"> ■ Put the lead wire through the back of the motor when reassembling. (so as not to be entangled with the propeller fan)  <p style="text-align: center;">Lead wire Propeller fan (R3249)</p>
7	Loosen the 4 screws to remove the fan motor.  <p style="text-align: center;">Fan motor (R7202)</p>	<ul style="list-style-type: none"> ■ DC fan motor

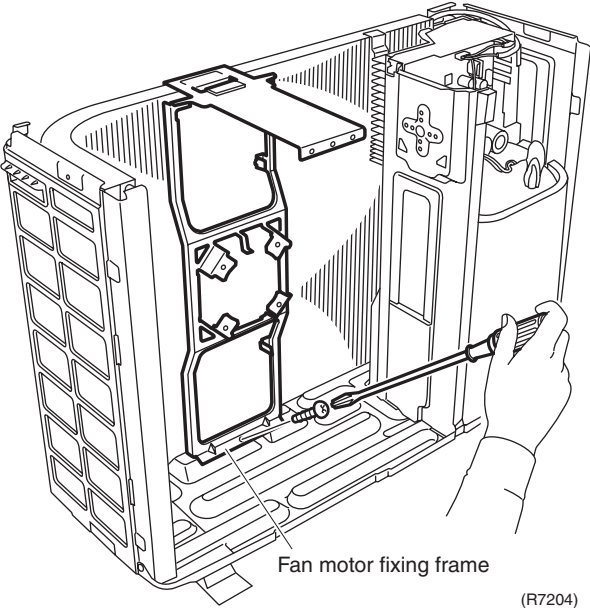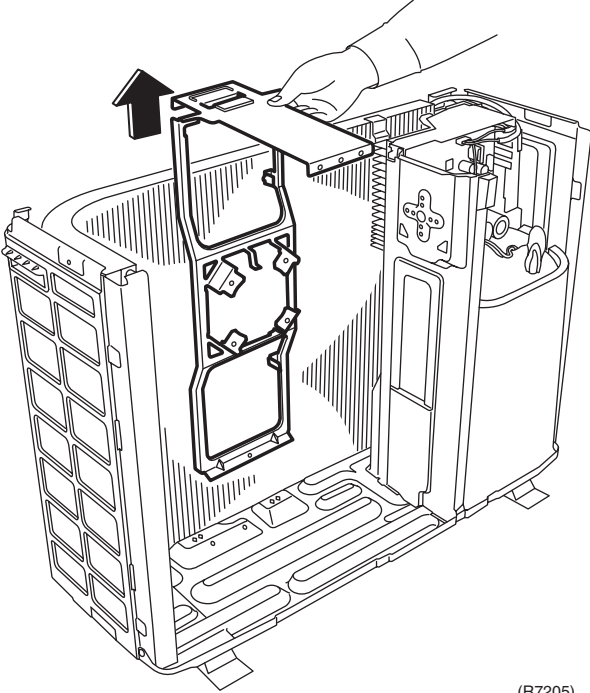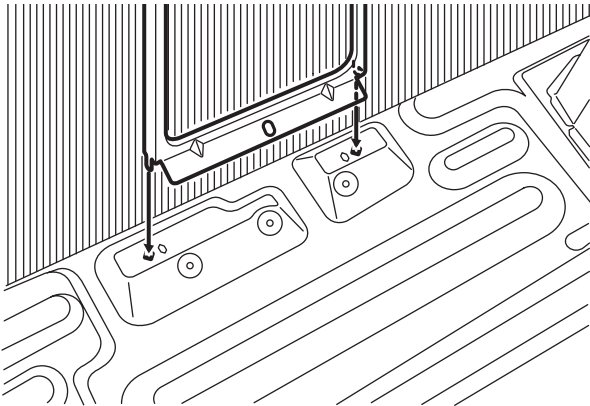Step	Procedure	Points
<p>8</p>	<p>Loosen the screw to remove the fan motor fixing frame.</p>  <p>Fan motor fixing frame</p> <p>(R7204)</p>  <p>(R7205)</p>  <p>(R7206)</p>	<p>■ When reassembling, fit the lower hook into the bottom frame.</p>

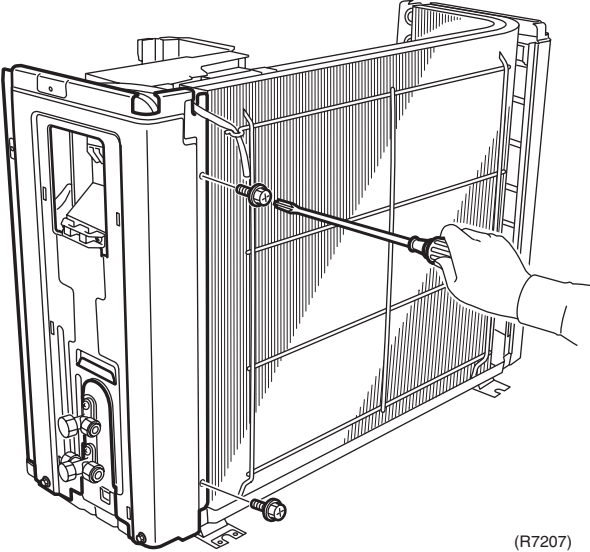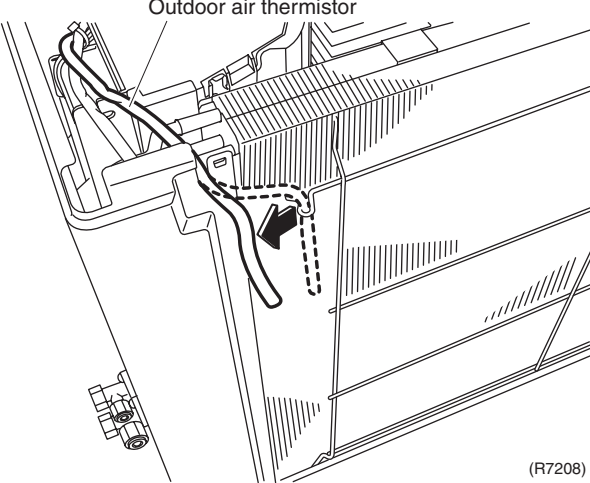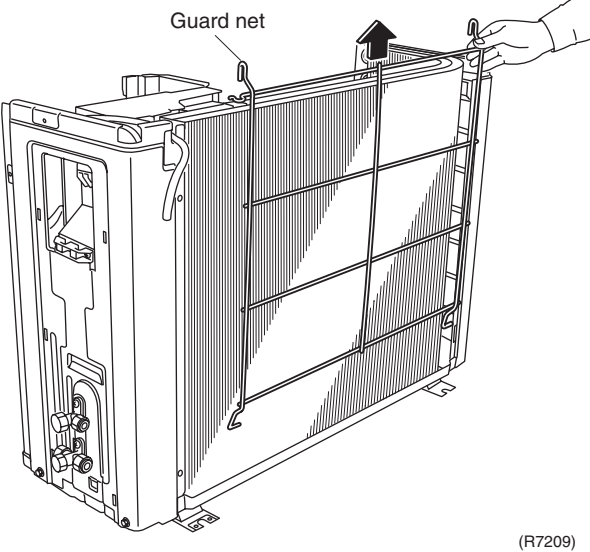Step	Procedure	Points
<p>4. Remove the right side panel.</p>	<p>1 Loosen the 2 screws on the rear side.</p>  <p>(R7207)</p> <p>2 Unhook the outdoor air thermistor.</p>  <p>Outdoor air thermistor</p> <p>(R7208)</p> <p>3 Lift up the guard net to remove.</p>  <p>Guard net</p> <p>(R7209)</p>	

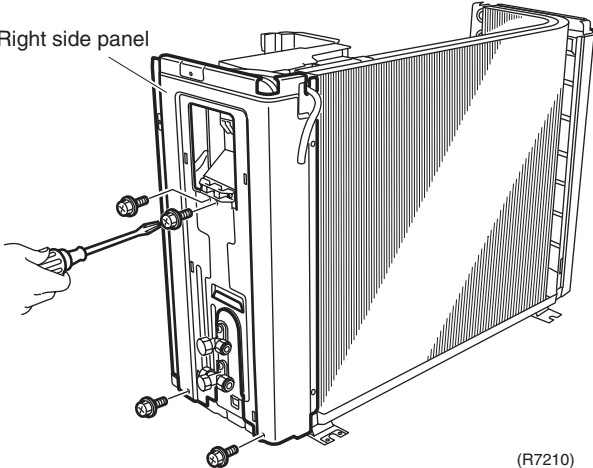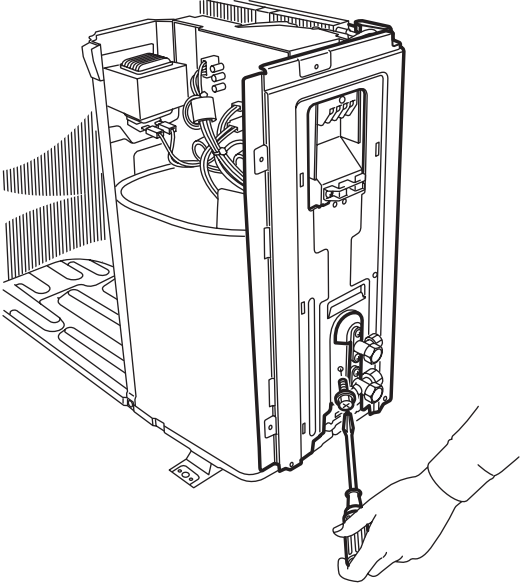Step	Procedure	Points
4	<p data-bbox="199 215 467 275">Loosen the 4 screws on the right side.</p>  <p data-bbox="1002 678 1062 696">(R7210)</p>	
5	<p data-bbox="199 719 451 815">Loosen the screw and lift the connection port to remove.</p>  <p data-bbox="975 1323 1035 1341">(R7211)</p>	


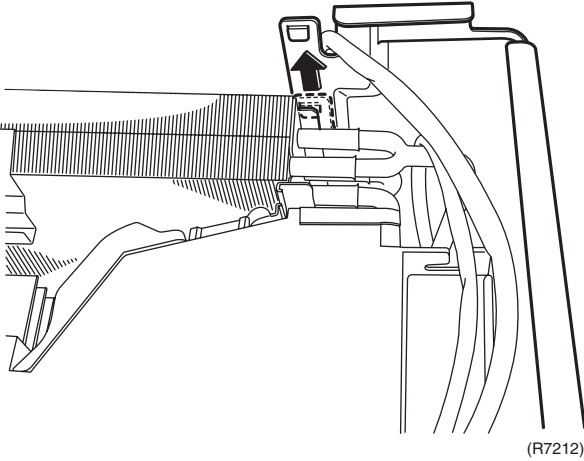
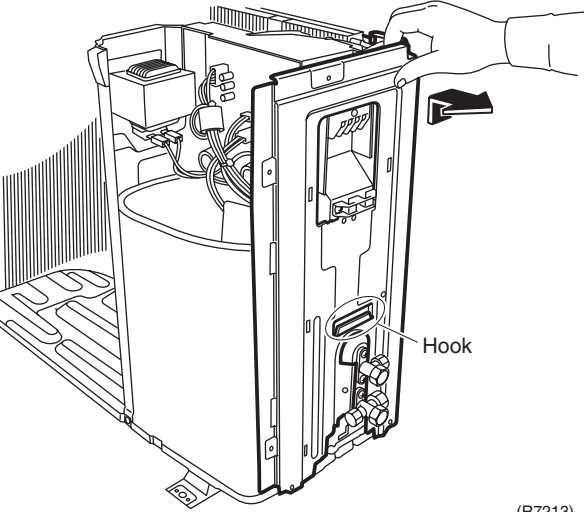
Step	Procedure	Points
<p>6</p>	<p>Lift up the right side panel to remove.</p>  	<ul style="list-style-type: none"> ■ When reassembling, make sure to fit the hook.

2.2 Removal of Electrical Box




Procedure








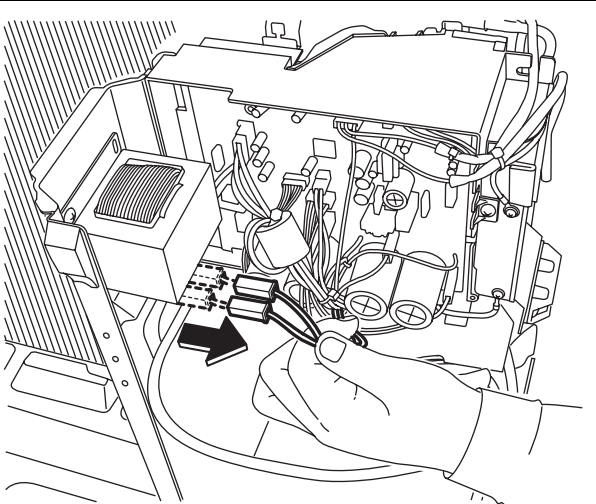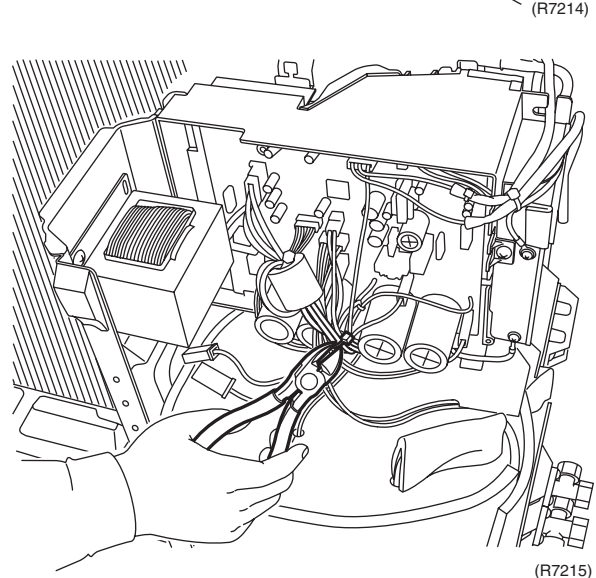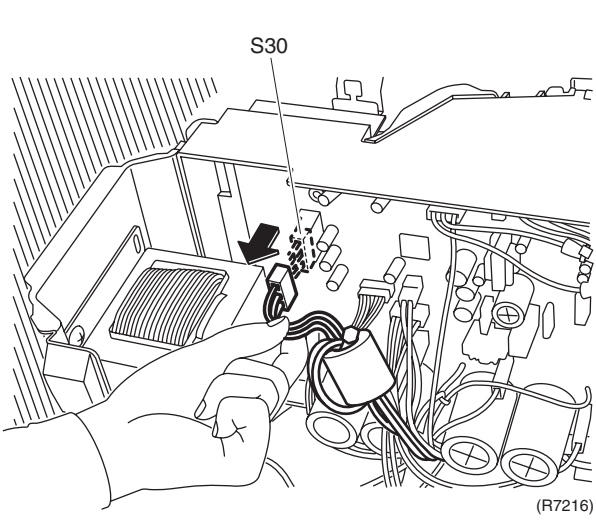
Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<ul style="list-style-type: none"> ■ Remove the top panel. ■ Disconnect the connector for fan motor. 	 <p style="text-align: right;">(R7214)</p>	<ul style="list-style-type: none"> ■ When reassembling, coil the excessive lead wire and hang the loop on the hook.
1. Remove the electrical box.	 <p style="text-align: right;">(R7215)</p>	
1 Disconnect the 2 reactor harnesses.	 <p style="text-align: right;">(R7216)</p>	
2 Cut the clamp.		
3 Disconnect the connector for compressor motor [S30].		

Step	Procedure	Points
4	<p>Disconnect the connector for overload protector [S40].</p>	<p>■ The positions of connectors on PCB are different according to the models.</p>
5	<p>Disconnect the connector for electronic expansion valve coil [S20].</p>	
6	<p>Disconnect the connector for four way valve coil [S80].</p>	

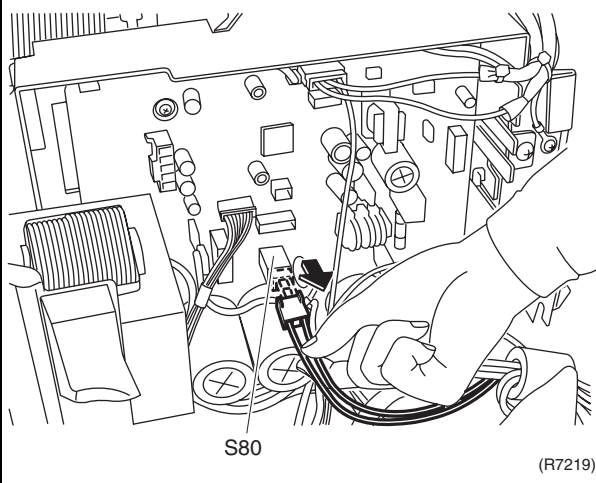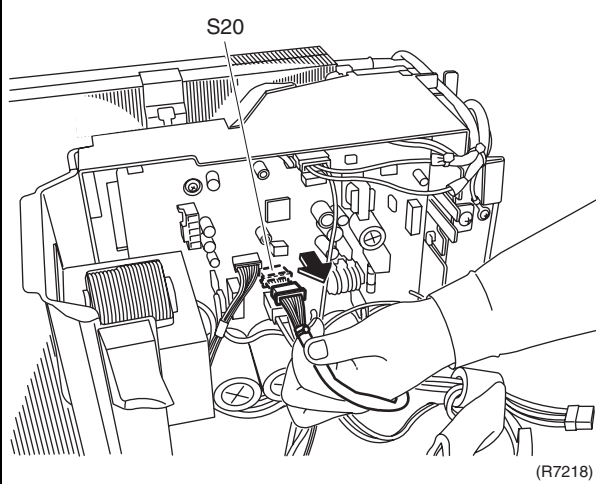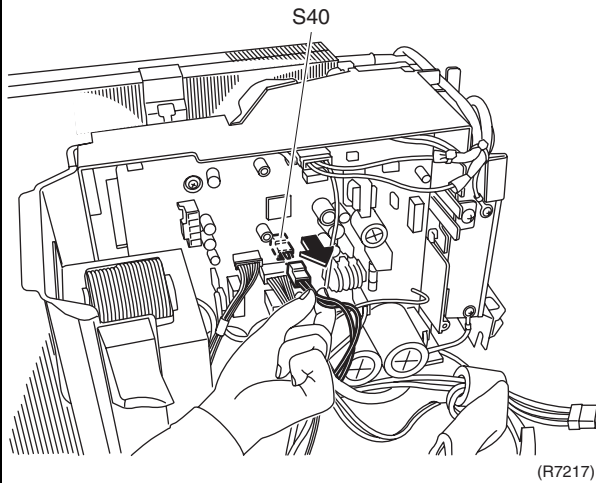

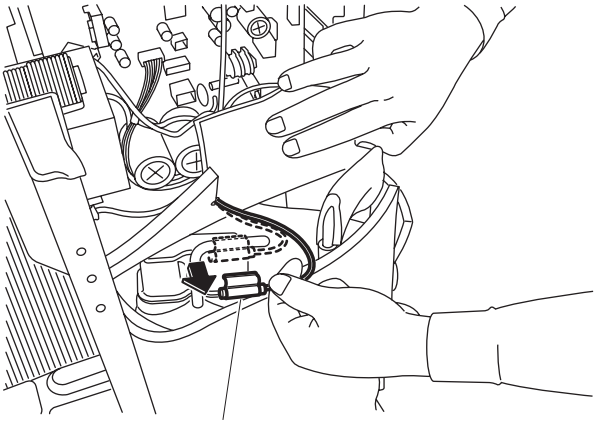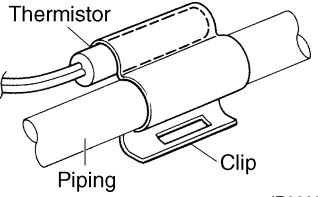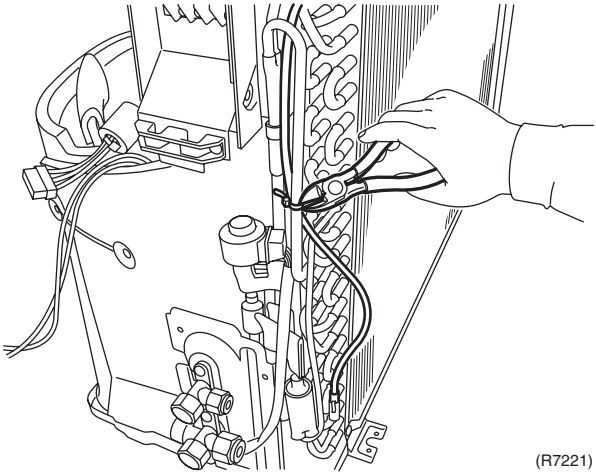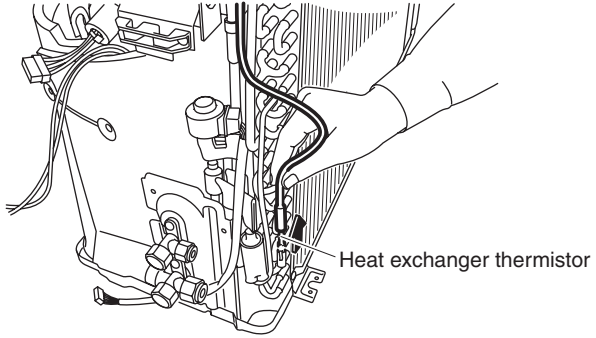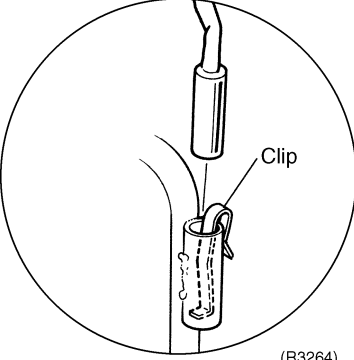Step	Procedure	Points
7	<p>Release the discharge pipe thermistor.</p>  <p style="text-align: center;">Discharge pipe thermistor (R7220)</p>	<p>■ Pay attention so as not to lose the clip for thermistor.</p>  <p style="text-align: right;">(R3262)</p>
8	<p>Cut the clamp.</p>  <p style="text-align: right;">(R7221)</p>	
9	<p>Pull out the heat exchanger thermistor.</p>  <p style="text-align: center;">Heat exchanger thermistor (R7222)</p>	<p>■ Pay attention so as not to lose the clip.</p>  <p style="text-align: right;">(R3264)</p>



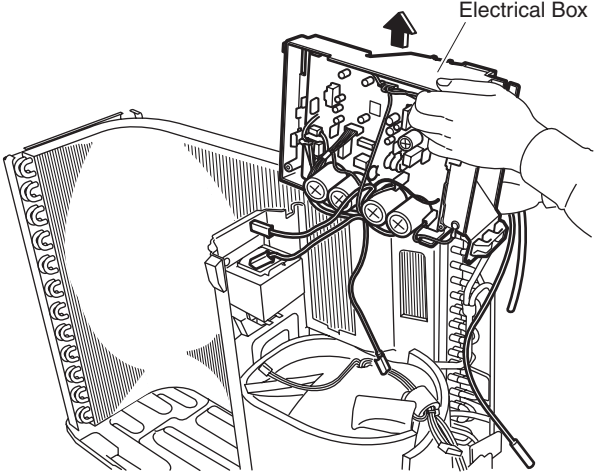
Step	Procedure	Points
10	<p>Lift and remove the electrical box.</p>  <p>(R7223)</p>	



2.3 Removal of Reactor and Partition Plate

Procedure



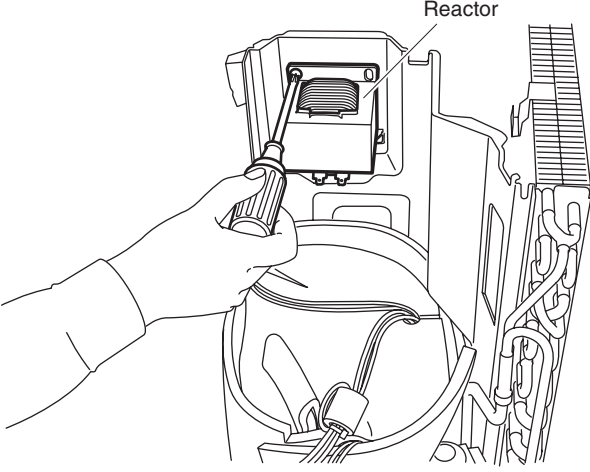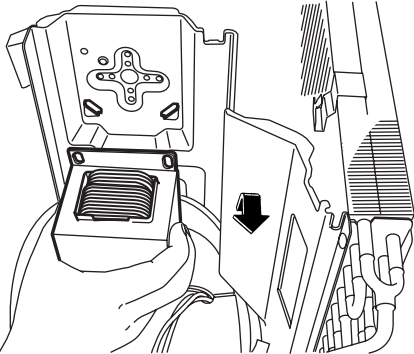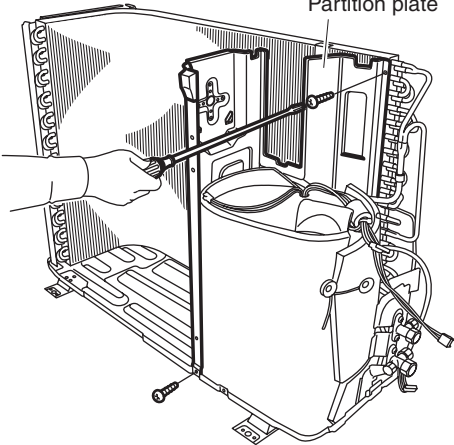Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<ul style="list-style-type: none"> ■ Remove the outer panels. ■ Remove the electrical box. 		
1.	Remove the reactor.	
1	Loosen the screw. Lift and remove the reactor.	 <p style="text-align: right;">(R7224)</p>  <p style="text-align: right;">(R7225)</p>
2.	Remove the partition plate.	
1	Loosen the 2 screws.	 <p style="text-align: right;">(R7226)</p>


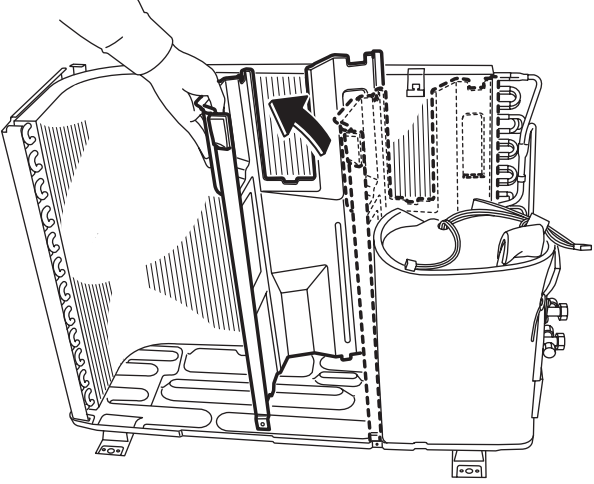
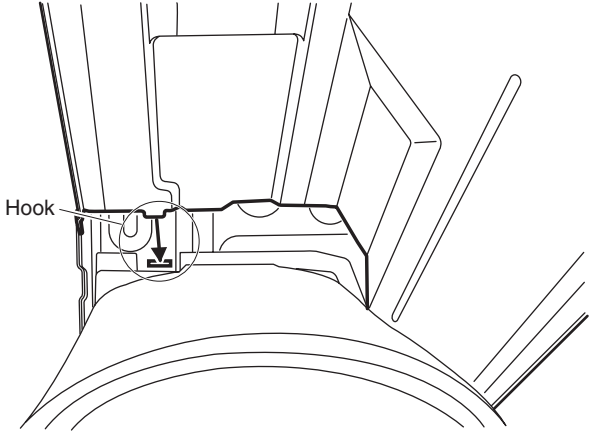
Step	Procedure	Points
<p>2</p>	<p>The partition plate has a hook on the lower side. Lift and pull the partition plate to remove.</p>  <p>(R7227)</p>  <p>Hook</p> <p>(R7228)</p>	<ul style="list-style-type: none"> ■ When reassembling, fit the lower hook into the bottom frame.


2.4 Removal of Sound Blanket

Procedure



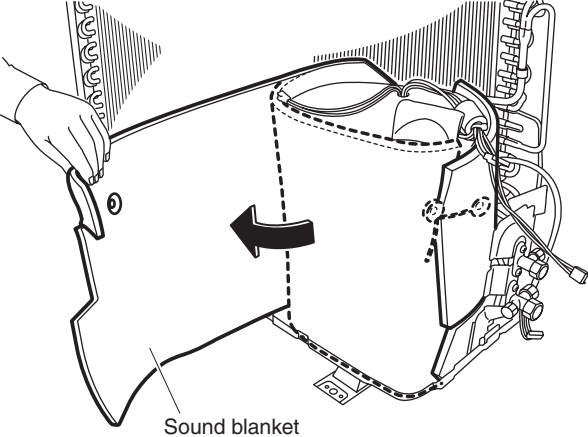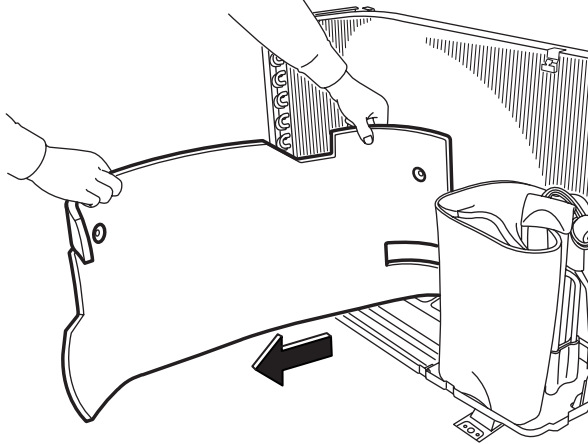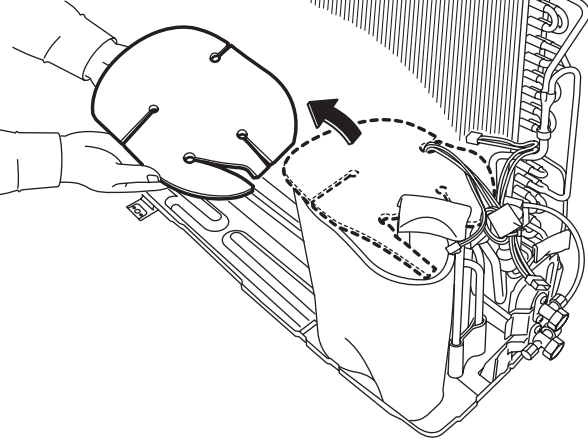Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<ul style="list-style-type: none"> ■ Remove the outer panels. ■ Remove the electrical box. 		
<p>1. Remove the sound blanket.</p>		
<p>1 Untie the strings and open the sound blanket.</p>	 <p style="text-align: right;">(R7229)</p>	
<p>2 Lift and remove the sound blanket (body) as it is opened.</p>	 <p style="text-align: right;">(R7230)</p>	<ul style="list-style-type: none"> ■ Since the piping ports on the sound blanket are torn easily, remove the blanket carefully.
<p>3 Lift and remove the sound blanket (top).</p>	 <p style="text-align: right;">(R7231)</p>	



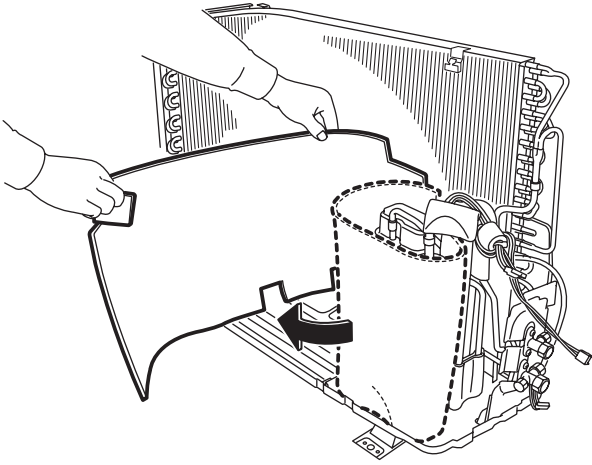
Step	Procedure	Points
4	<p>Pull the sound blanket (inner) out.</p>  <p>(R7232)</p>	<ul style="list-style-type: none"> ■ Since the piping ports on the sound blanket are torn easily, remove the blanket carefully.




2.5 Removal of Four Way Valve


Procedure



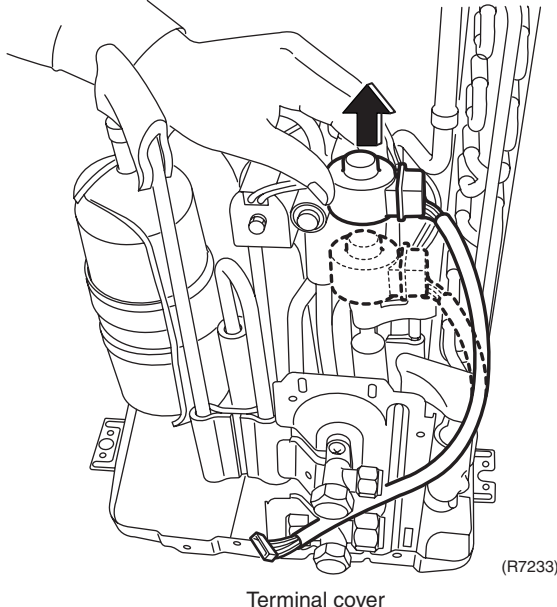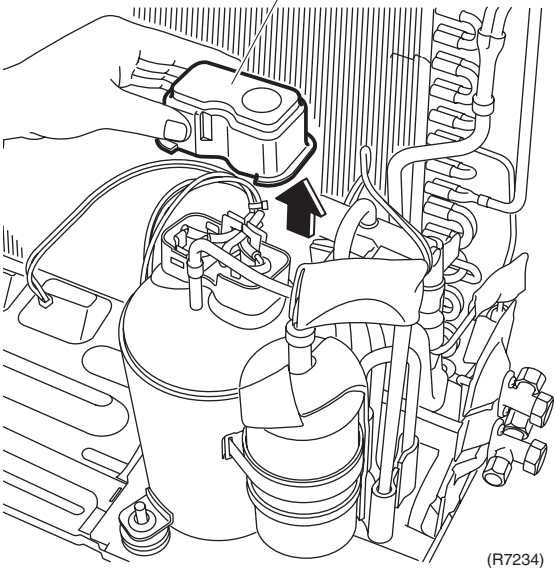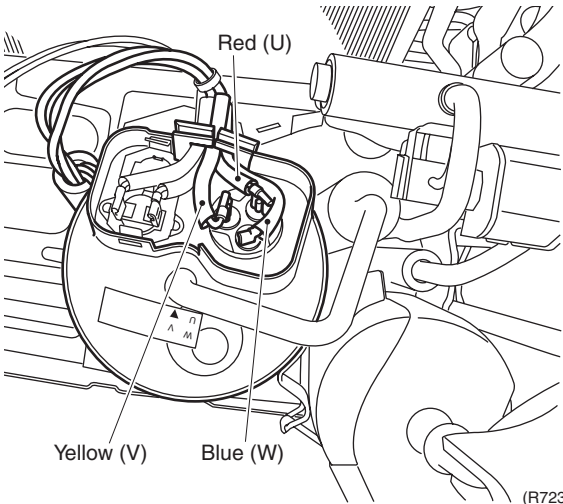Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the peripheries.		
1 Remove the electronic expansion valve coil.		
2 Remove the terminal cover.		<ul style="list-style-type: none"> ■ Remove the four way valve and the sheets of putty so as not to burn them. ■ Be careful so as not to burn the compressor terminals or the name plate.
		<p>Make a note.</p>

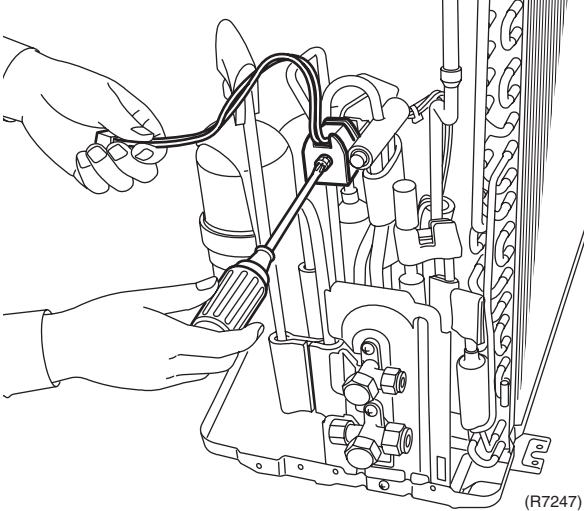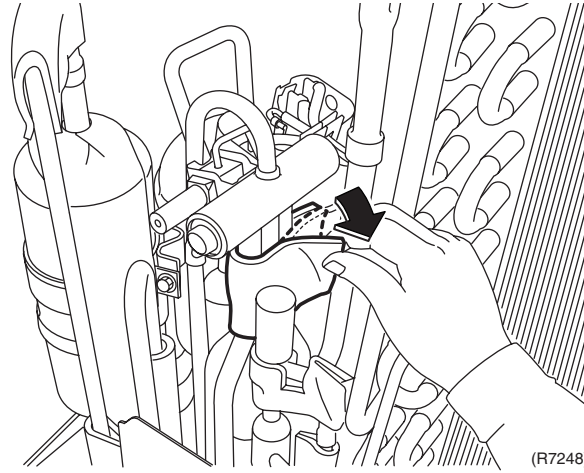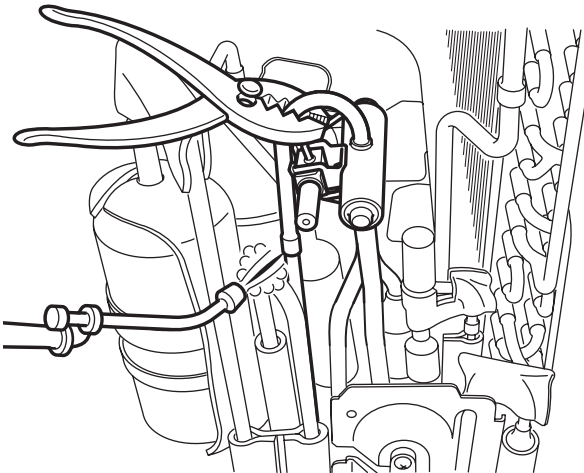Step	Procedure	Points
3	<p>Loosen the screw of the four way valve coil.</p>  <p>(R7247)</p>	<p>Caution Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas welding rod.</p> <p>Caution From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to recover the refrigerant gas with the recovery system.</p>
4	<p>Remove the sheets of putty.</p>  <p>(R7248)</p>	<p>Reassembling precautions</p> <ol style="list-style-type: none"> 1. Use non-oxidizing brazing method. If nitrogen gas is not available, braze the parts speedily. 2. Avoid deterioration of the gaskets due to carbonization of oil inside the four way valve or thermal influence. For this purpose, wrap the four way valve with wet cloth. Splash water over the cloth against becoming too hot (keep it below 120°C).
5	<p>Heat up the brazed part and withdraw the piping with pliers.</p>  <p>(R7249)</p>	<p>■ In pulling the pipes, be careful not to over-tighten them with pliers. The pipes may get deformed.</p> <p>If the gas welding machine fails to remove the four way valve, take the steps below.</p> <ol style="list-style-type: none"> 1. Disconnect the brazed pipe sections that are readily easy to separate and join together later. 2. With a small copper tube cutter, cut off the internal pipes to easily take out the four way valve. <p>Note: Never use a metal saw. The sawdust may come into the circuit.</p>
<p>■ Before working, make sure that the refrigerant is empty in the circuit.</p> <p>■ Be sure to apply nitrogen replacement when heating up the brazed part.</p>		


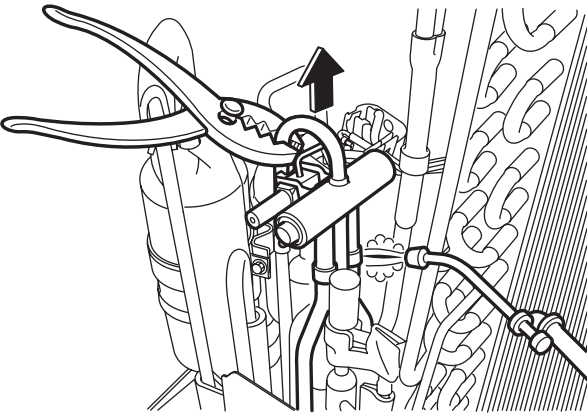
Step	Procedure	Points
	<p data-bbox="199 226 467 539">Warning If refrigerant gas leaks during the job, ventilate the room. (Bear in mind that if the refrigerant gas is exposed to open flames, noxious gas may be generated.)</p>  <p data-bbox="1018 638 1075 656">(R7250)</p>	<ul data-bbox="1093 215 1455 477" style="list-style-type: none">■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.■ Be careful so as not to break the pipes by pressing it excessively by pliers when withdrawing it.



2.6 Removal of Compressor

Procedure



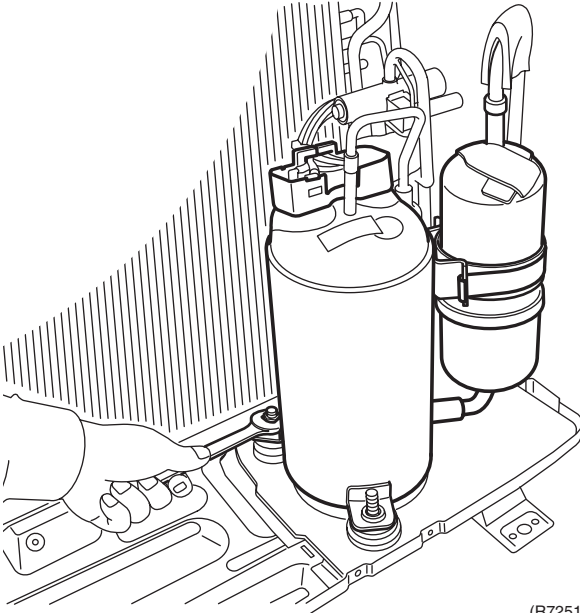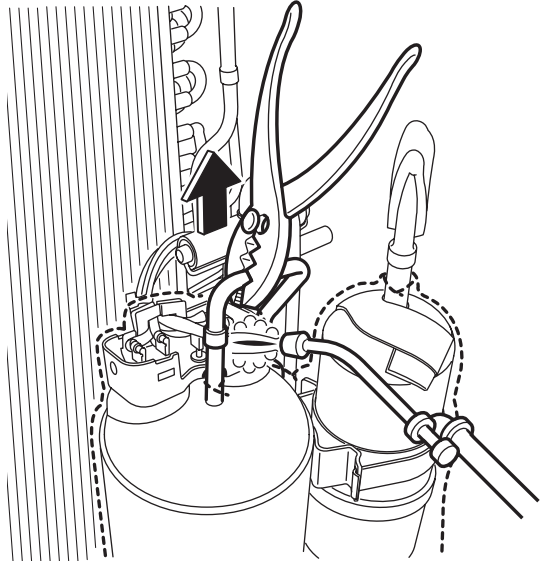Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the compressor.		
<p>1 Unscrew the nut of the compressor.</p> <ul style="list-style-type: none"> ■ Before working, make sure that the refrigerant is empty in the circuit. ■ Be sure to apply nitrogen replacement when heating up the brazed part. 	 <p style="text-align: right;">(R7251)</p>	<p>Warning Ventilate when refrigerant leaks during the work. (If refrigerant contacts fire, it will cause to arise toxic gas.)</p> <ul style="list-style-type: none"> ■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries. ■ Be careful so as not to burn the compressor terminals or the name plate. ■ Be careful so as not to burn the heat exchanger fin. <p>Warning Since it may happen that refrigeration oil in the compressor will catch fire, prepare wet cloth so as to extinguish fire immediately.</p>
<p>2 Heat up the brazed part of the discharge side and disconnect.</p>	 <p style="text-align: right;">(R7252)</p>	<p>In case of the difficulty with gas brazing machine</p> <ol style="list-style-type: none"> 1. Disconnect the brazed part where is easy to disconnect and restore. 2. Cut pipes on the main unit by a miniature copper tube cutter in order to make it easy to disconnect. <p>Cautions for restoration</p> <ol style="list-style-type: none"> 1. Restore the piping by non-oxidation brazing. 2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth will not be dried and avoid excessive heating. (Keep below 120°C) <p>Note: Do not use a metal saw for cutting pipes by all means because the sawdust come into the circuit.</p>


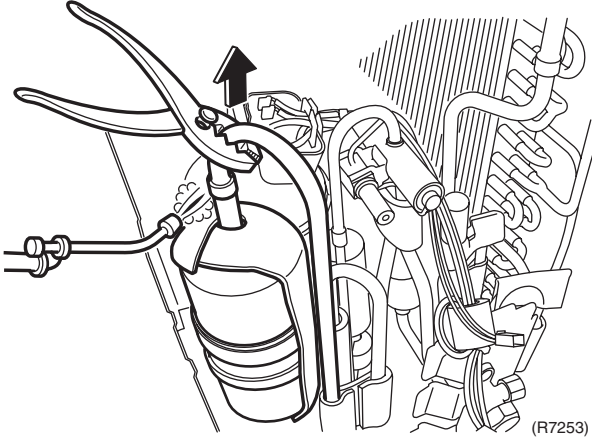
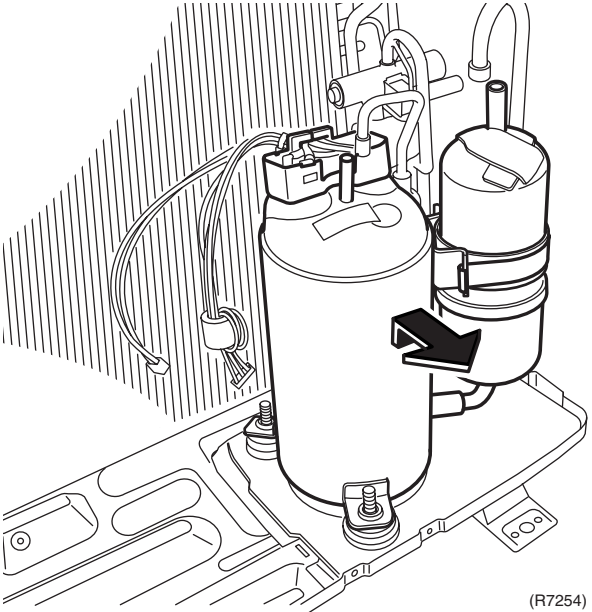
Step	Procedure	Points
3	<p data-bbox="199 217 467 309">Heat up the brazed part of the suction side and disconnect.</p>  <p data-bbox="1018 658 1074 678">(R7253)</p>	
4	<p data-bbox="199 698 454 768">Lift the compressor up and remove it.</p>  <p data-bbox="1018 1319 1074 1339">(R7254)</p>	




2.7 Removal of PCB


Procedure



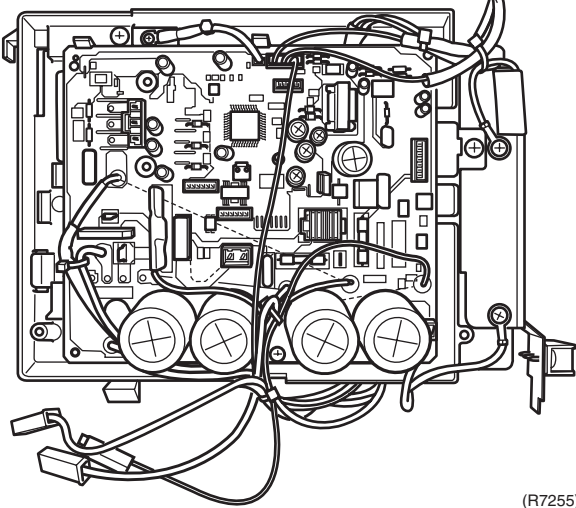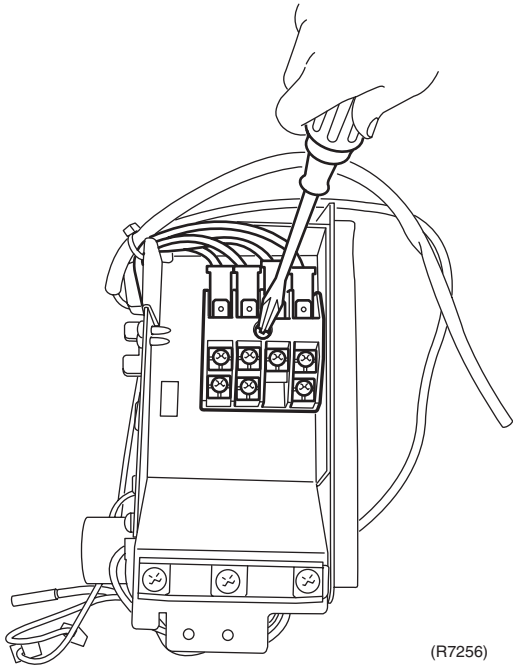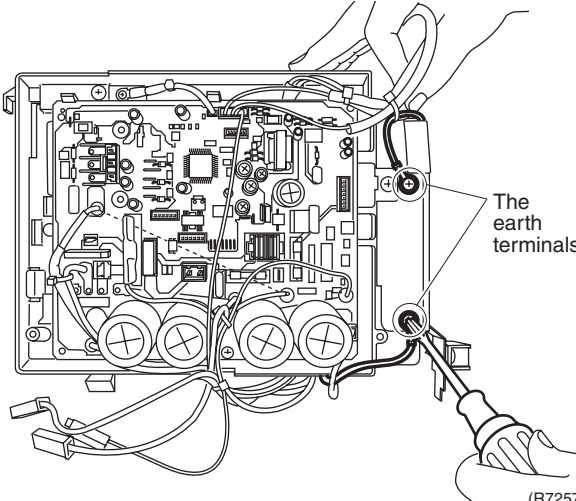Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the PCB.</p> <p>1 Feature of the PCB</p> <p>2 Loosen the screw on the terminal board.</p> <p>3 Release the 2 earth terminals.</p>	 <p>(R7255)</p>  <p>(R7256)</p>  <p>The earth terminals</p> <p>(R7257)</p>	<ul style="list-style-type: none"> ■ You can remove the PCB when you disconnect the read wires on the terminal board without removing the electrical box. ■ PbF (Pb free brazing) is adopted. ■ See page 27 for detail.

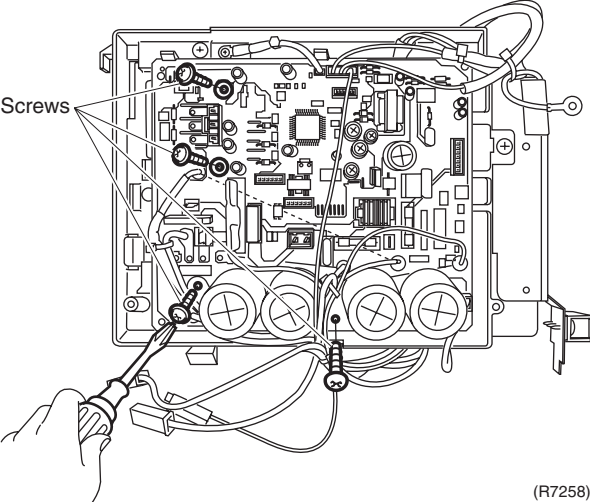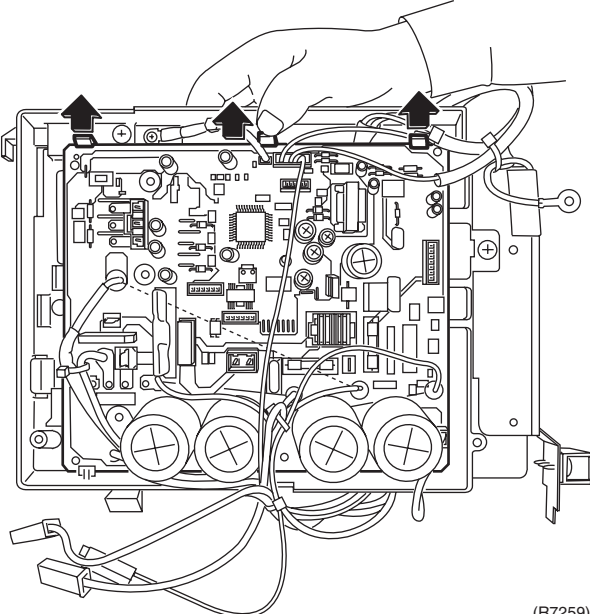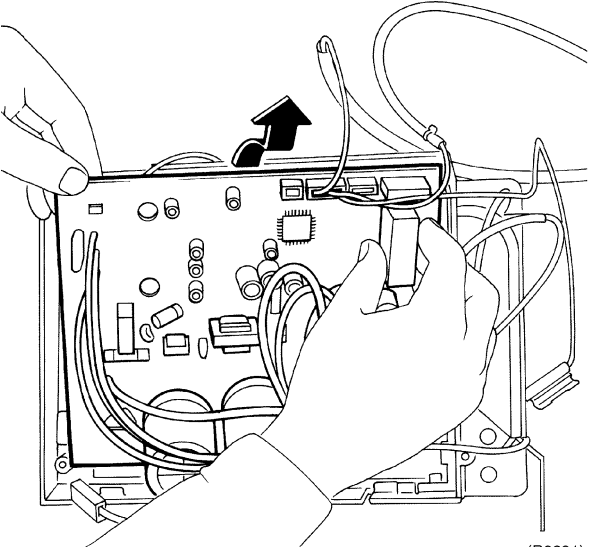Step	Procedure	Points
4	<p data-bbox="199 215 443 241">Loosen the 4 screws.</p>  <p data-bbox="1018 712 1078 730">(R7258)</p>	<ul style="list-style-type: none"> <li data-bbox="1093 215 1445 309">■ The positions of screws are different according to the models.
5	<p data-bbox="199 757 437 819">Undo the 3 hooks on the upper side.</p>  <p data-bbox="1018 1373 1078 1391">(R7259)</p>	
6	<p data-bbox="199 1406 416 1469">Lift and pull out the PCB.</p>  <p data-bbox="1018 1962 1078 1980">(R3291)</p>	

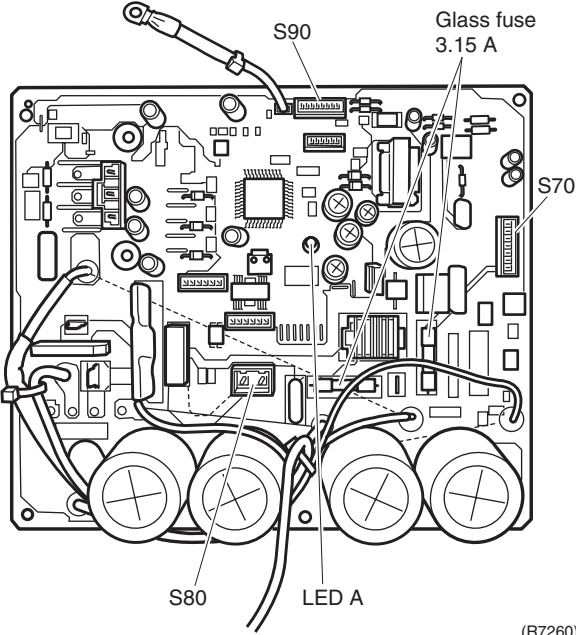Step	Procedure	Points
<p>7</p> <p>Feature of the PCB S70: fan motor S80: four way valve S90: thermistor (outdoor air, heat exchanger, discharge pipe)</p>	 <p>The diagram shows a top-down view of a printed circuit board (PCB) assembly. A thermistor (S90) is being inserted into a hole at the top center. A glass fuse (3.15 A) is located at the top right. A fan motor (S70) is on the right side. A four-way valve (S80) is at the bottom left. An LED (LED A) is at the bottom center. Wires connect these components to a terminal block at the bottom. The PCB is populated with various electronic components like capacitors, resistors, and integrated circuits.</p> <p>(R7260)</p>	<p>■ See page 27 for detail.</p>

Part 8 Others

1. Others	196
1.1 Test Run from the Remote Controller	196
1.2 Jumper Settings	197
1.3 Application of Silicon Grease to a Power Transistor and a Diode Bridge.....	198

1. Others

1.1 Test Run from the Remote Controller

For Heat pump

In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

- Trial operation may be disabled in either mode depending on the room temperature.
- After trial operation is complete, set the temperature to a normal level.
(26°C to 28°C in cooling mode, 20°C to 24°C in heating mode)
- For protection, the system disables restart operation for 3 minutes after it is turned off.

For Cooling Only

Select the lowest programmable temperature.

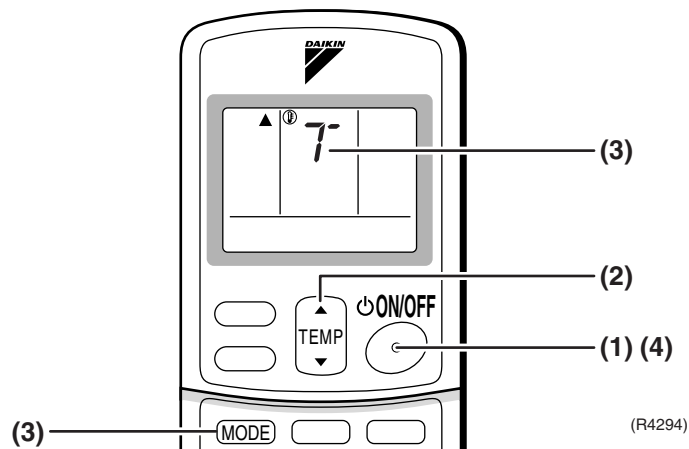
- Trial operation in cooling mode may be disabled depending on the room temperature.
Use the remote control for trial operation as described below.
- After trial operation is complete, set the temperature to a normal level (26°C to 28°C).
- For protection, the machine disables restart operation for 3 minutes after it is turned off.

Trial Operation and Testing

1. Measure the supply voltage and make sure that it falls in the specified range.
 2. Trial operation should be carried out in either cooling or heating mode.
 3. Carry out the test operation in accordance with the Operation Manual to ensure that all functions and parts, such as louver movement, are working properly.
- The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
 - If the circuit breaker trips to shut off the power to the air conditioner, the system will restore the original operation mode when the circuit breaker is opened again.

Trial operation from Remote Controller

- (1) Press ON/OFF button to turn on the system.
- (2) Simultaneously press center of TEMP button and MODE buttons.
- (3) Press MODE button twice.
("T" will appear on the display to indicate that Trial Operation mode is selected.)
- (4) Trial run mode terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press ON/OFF button.



1.2 Jumper Settings

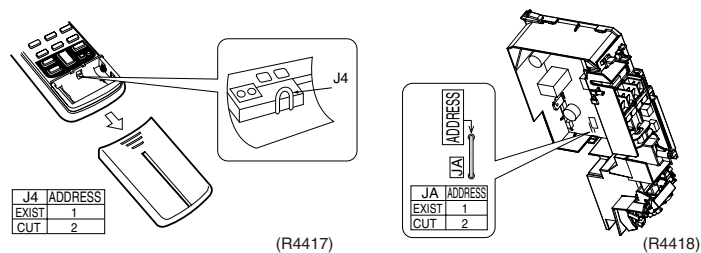
1.2.1 When Two Units are Installed in One Room

When two indoor units are installed in one room, the two wireless remote controllers can be set for different addresses.

How to set the different addresses

- Control PCB of the indoor unit
 - (1) Remove the front grille. (3 screws)
 - (2) Remove the electrical box (1-screw).
 - (3) Remove the drip proof plate. (4 tabs)
 - (4) Cut the address jumper **JA** on the control PCB.

- Wireless remote controller
 - (1) Slide the front cover and take it off.
 - (2) Cut the address jumper **J4**.



1.2.2 Jumper Setting

Jumper (On indoor control PCB)	Function	When connected (factory set)	When cut
JC	Power failure recovery function	Auto-restart	Unit does not resume operation after recovering from a power failure. Timer ON-OFF settings are cleared.
JB	Fan speed setting when compressor is OFF on thermostat. (effective only at cooling operation)	Fan speed setting ; Remote controller setting	Fan rpm is set to "0" <Fan stop>

1.3 Application of Silicon Grease to a Power Transistor and a Diode Bridge

Applicable Models

All outdoor units using inverter type compressor for room air conditioner.

When the printed circuit board of an outdoor unit is replaced, it is required that silicon grease (*1) is certainly applied to the heat radiation part (the contact point to the heat radiation fin) of the power transistor and diode bridge.

*1: Parts number of the silicon grease – 1172698 (Drawing number 3FB03758-1)

Details

The silicon grease is an essential article for encouraging the heat radiation of the power transistor and the diode bridge. Applying the paste should be implemented in accordance with the following instruction.

Remark: There is the possibility of failure with smoke in case of bad heat radiation.

- To completely wipe off the old silicon grease on a heat radiation fin.
- To evenly apply the silicon grease to the whole.
- Do not have any foreign object such as solder or paper waste between the power transistor, the diode bridge and the heat radiation fin.
- To firmly tighten the screws of the power transistor and the diode bridge, and to surely contact to the heat radiation fin without any gap.

<Example>

Take out a PCB

Diode bridge (Diode bridge, Rectifier stack, etc.)

Power transistor (TRM, TPM, IGBT, IPM, SPM, etc.)

Not applied.

Paper wastage

OK : Evenly applied silicon grease.

NG : Not evenly applied

NG : Foreign object.

(R7100)


Part 9 Appendix

1. Piping Diagrams.....	200
1.1 Indoor Units.....	200
1.2 Outdoor Units.....	202
2. Wiring Diagrams.....	205
2.1 Indoor Units.....	205
2.2 Outdoor Units.....	207

1. Piping Diagrams


1.1 Indoor Units

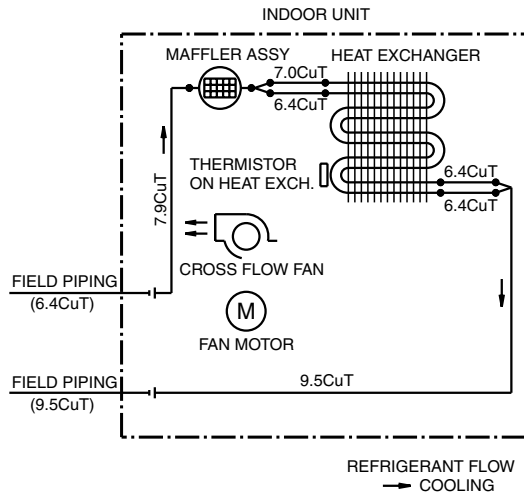FTKS25/35DVM, FTKS25/35EVMA




4D050757B

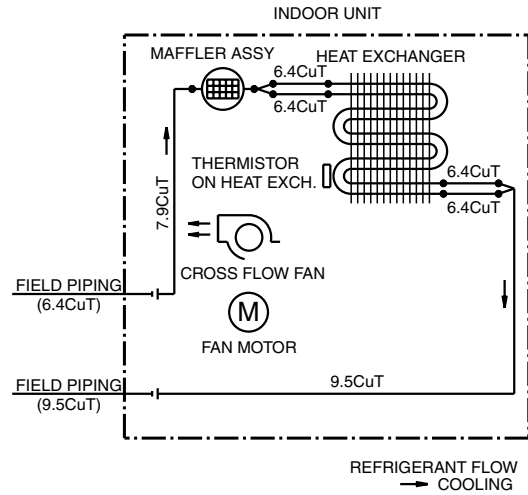FTKD25DVM, FTKD25DVMA, FTKD25DV2Z




4D051578B

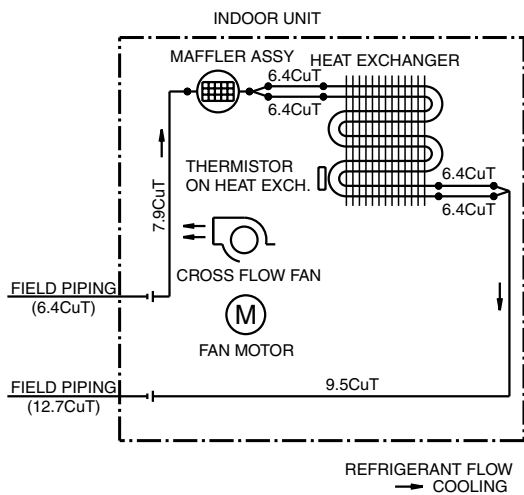FTKD35DVM, FTKD35DVMA, FTKD35DV2Z



4D051579B


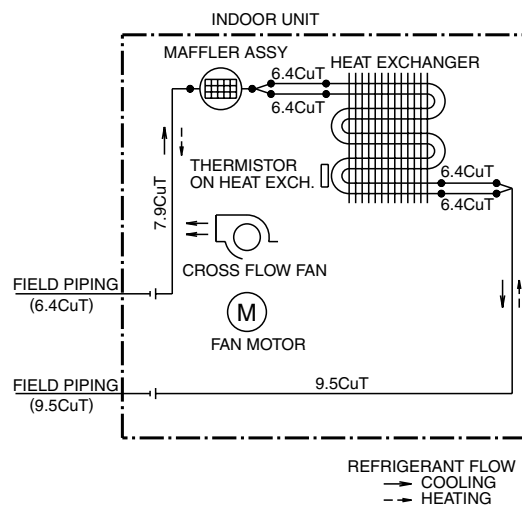
FTXD25DVMA, FTXD25DV2Z



4D048944E

FTXD35DVMA, FTXD35DV2Z

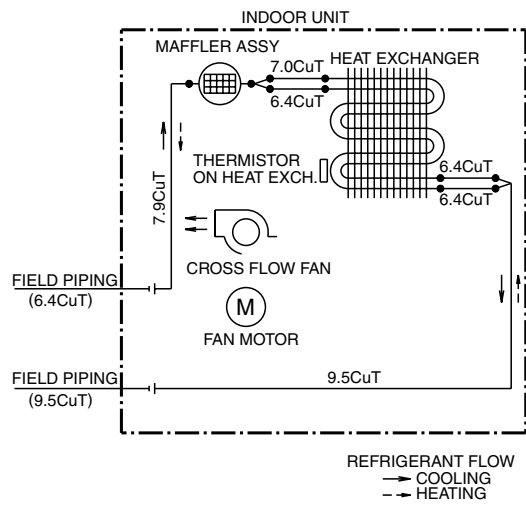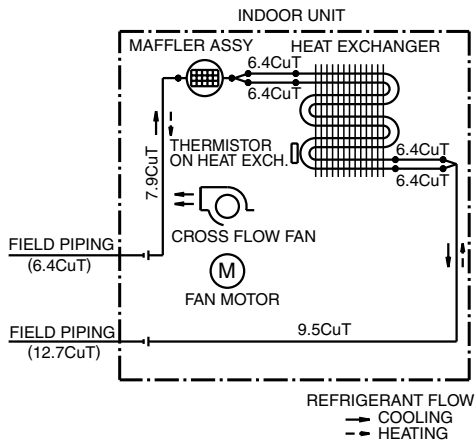
FTXS25/35EVMA, FTYN25/35DV1A



4D048856F


4D047912J

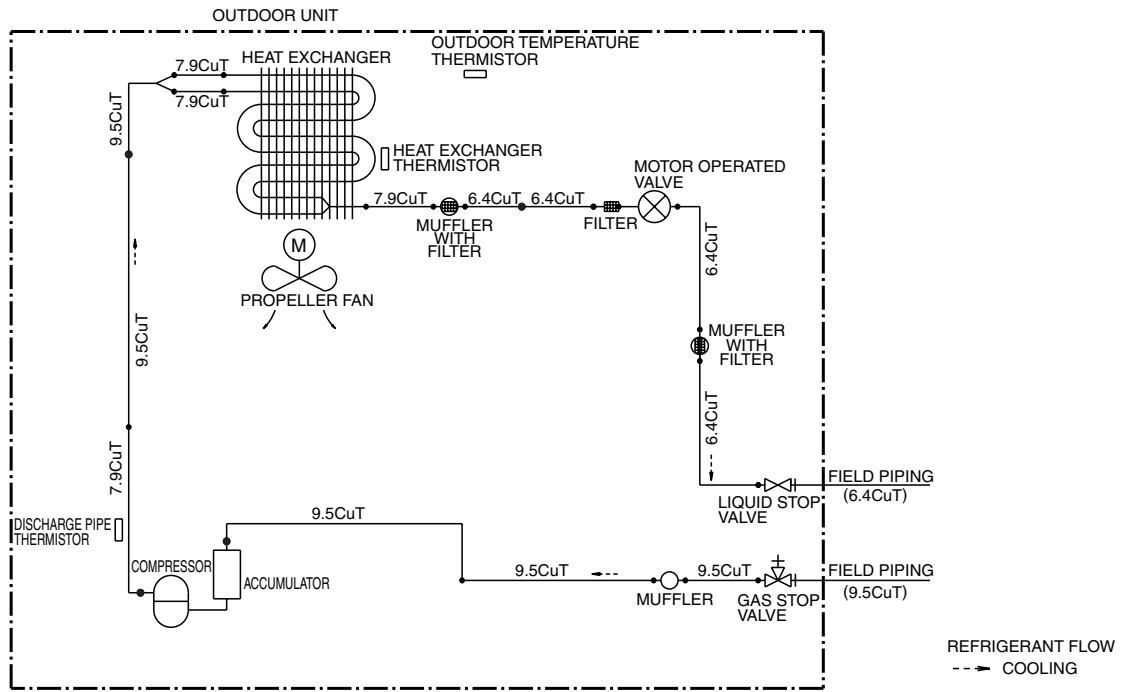RKD25DAVM, RKD25DAVMA, RKD25DAV2Z



3D048081D

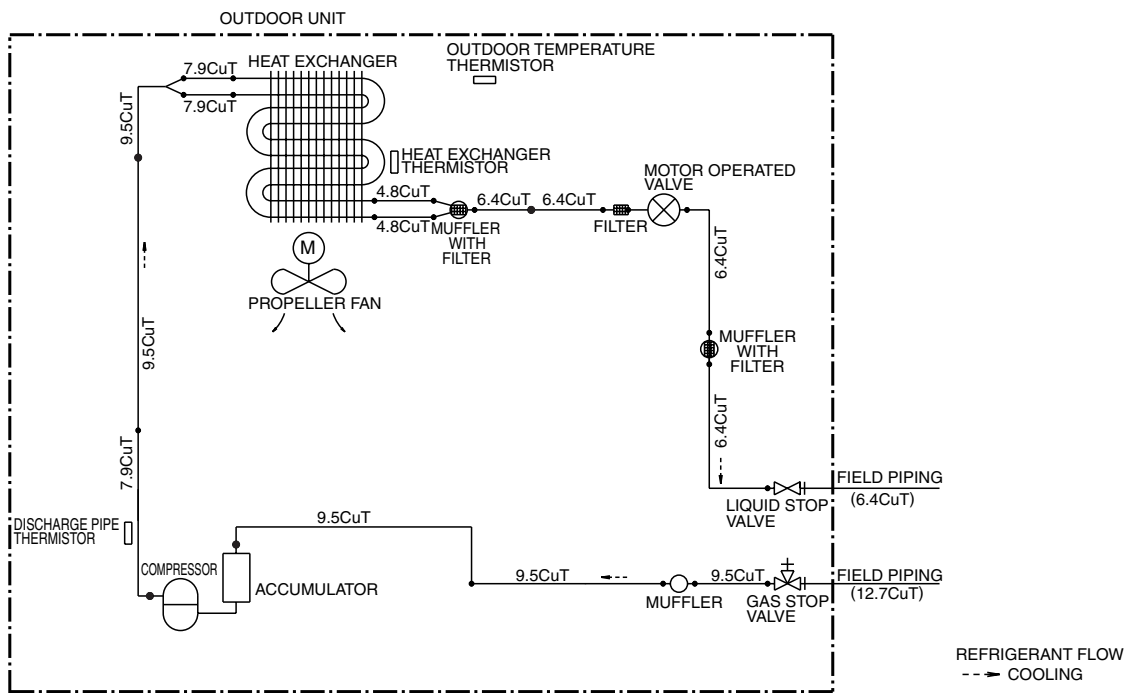
RKD35DAVM, RKD35DAVMA, RKD35DAV2Z



3D048082D


1.2.2 Heat Pump

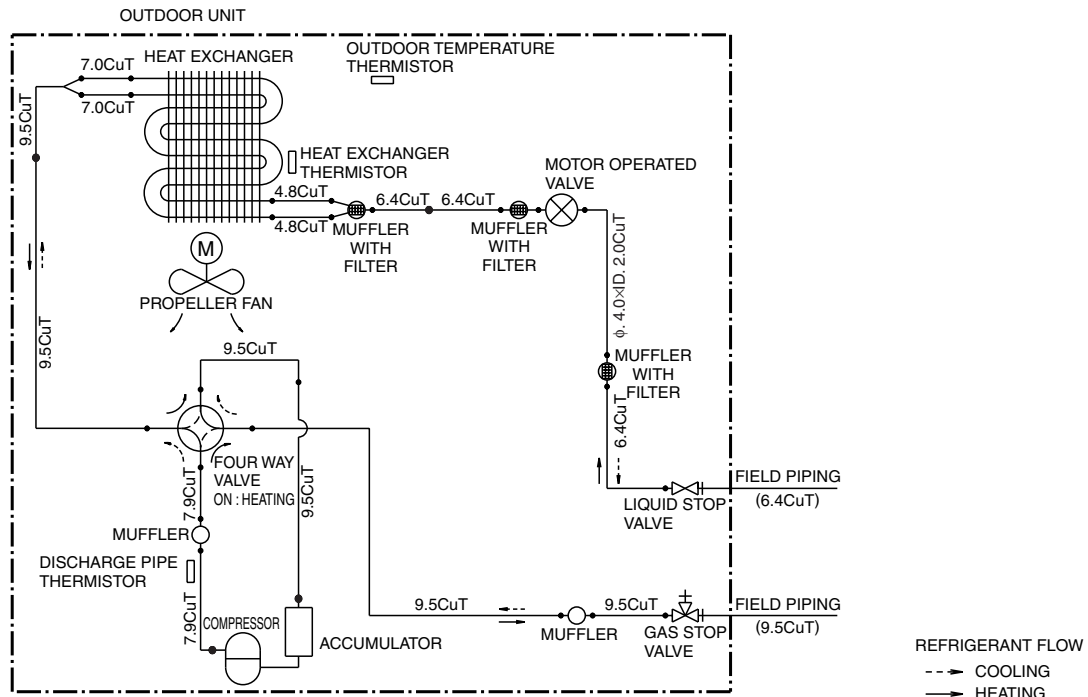RXS25/35EBVMA, RYN35DAV1A




3D047316J

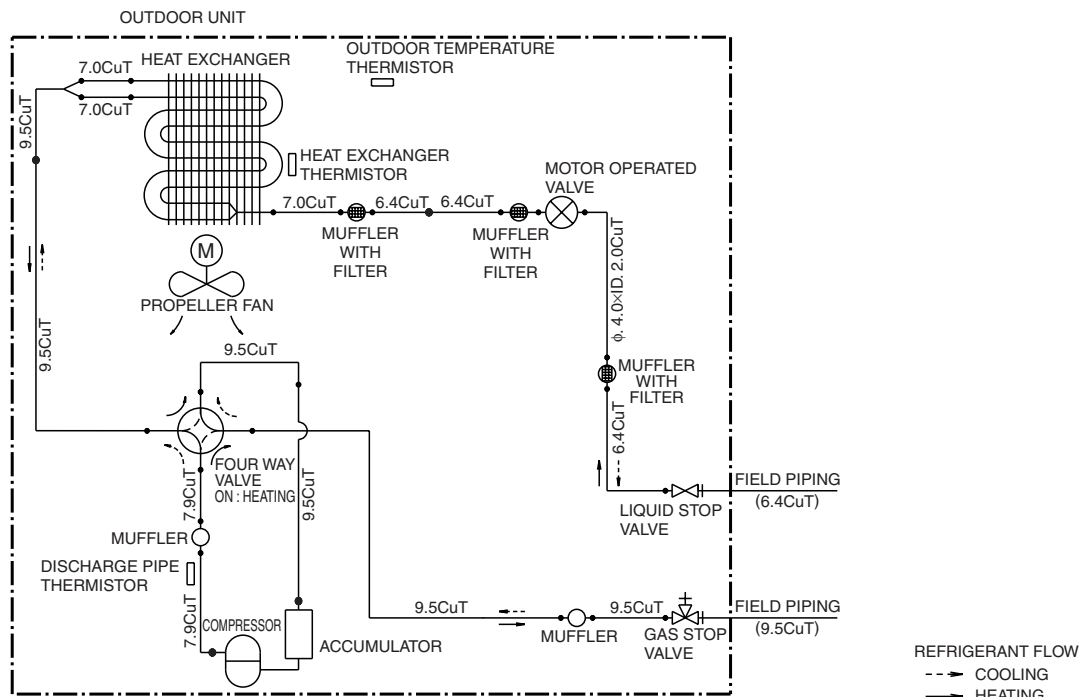RYN25DAV1A




3D047315F

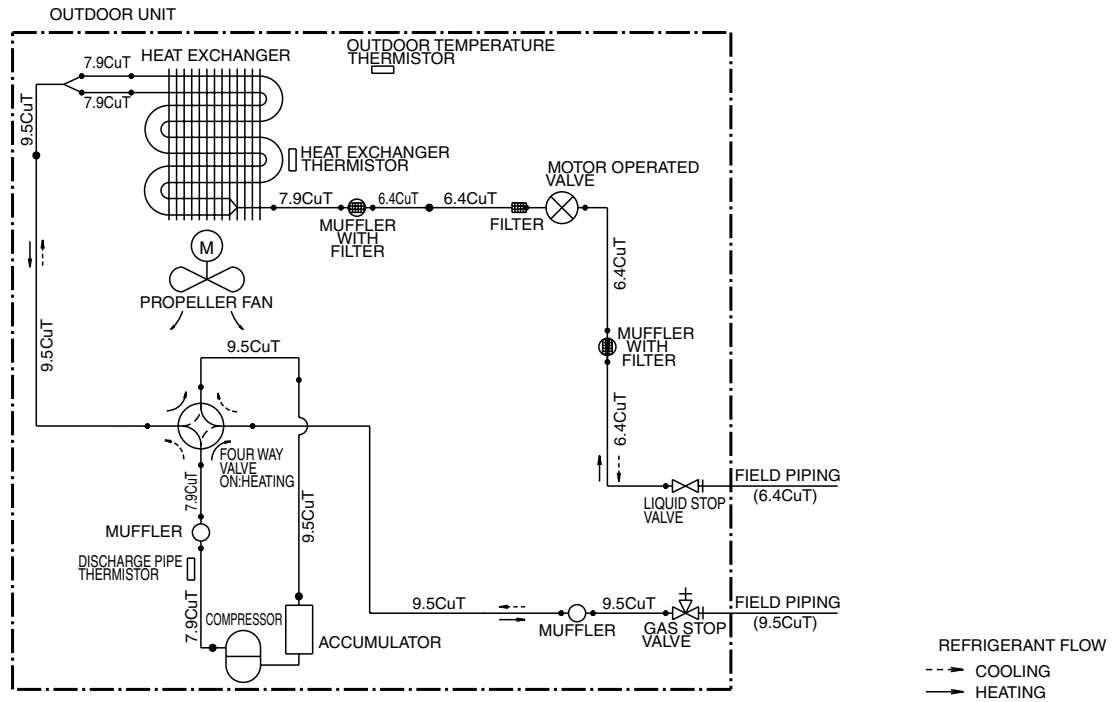RXD25DAVMA, RXD25DAV2Z



3D048076D

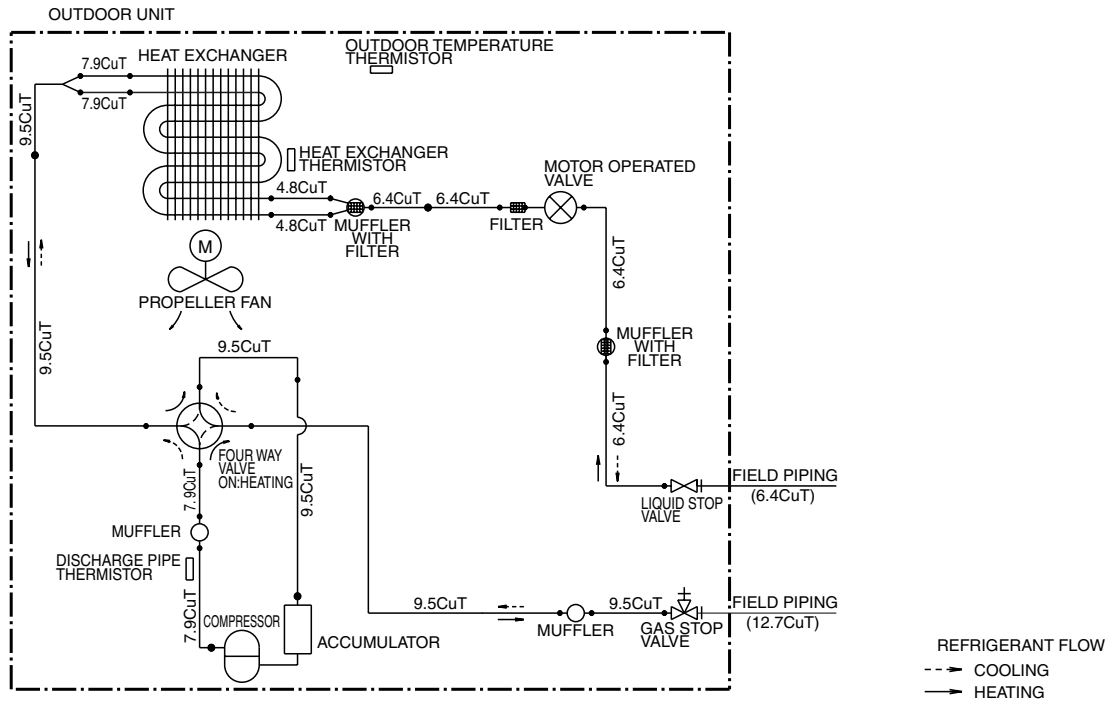RXD35DAVMA, RXD35DAV2Z




3D048077D

2. Wiring Diagrams


2.1 Indoor Units

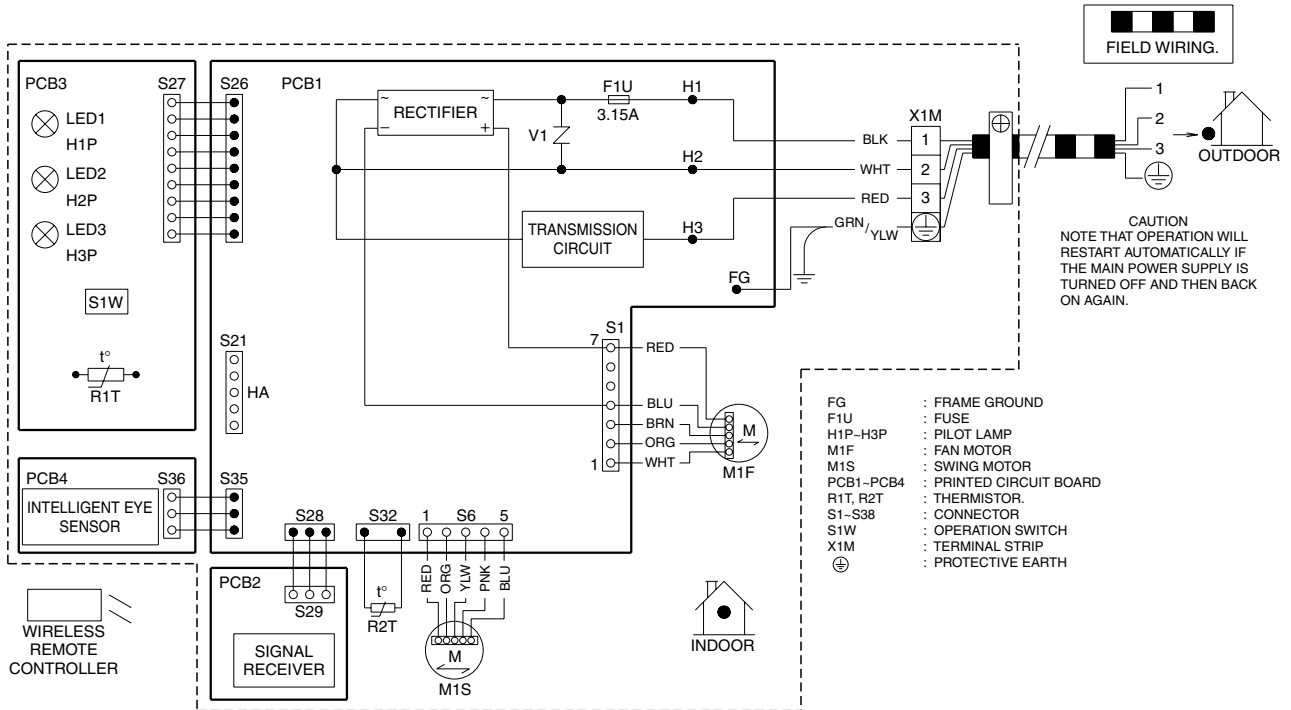FTKS25/35DVM, FTK(X)S25/35EVMA




3D046453B

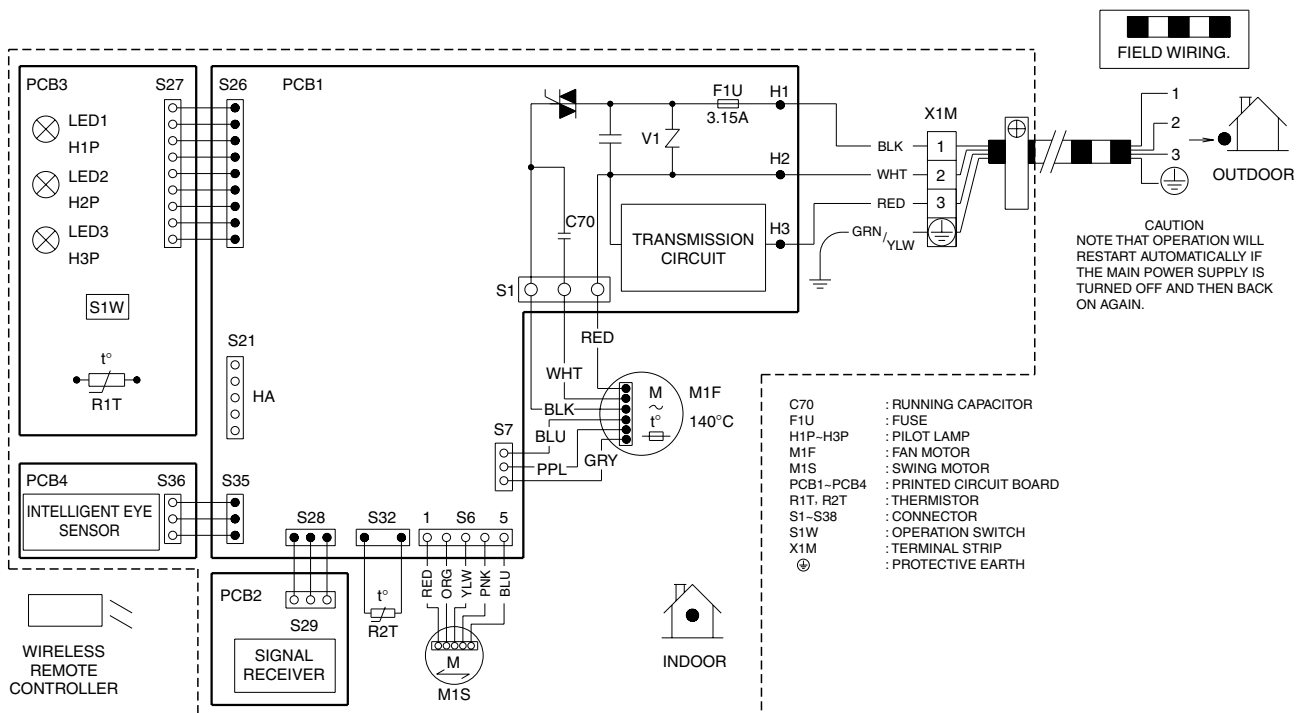FTKD25/35DVM, FTK(X)D25/35DVMA, FTK(X)D25/35DV2Z



3D046468B

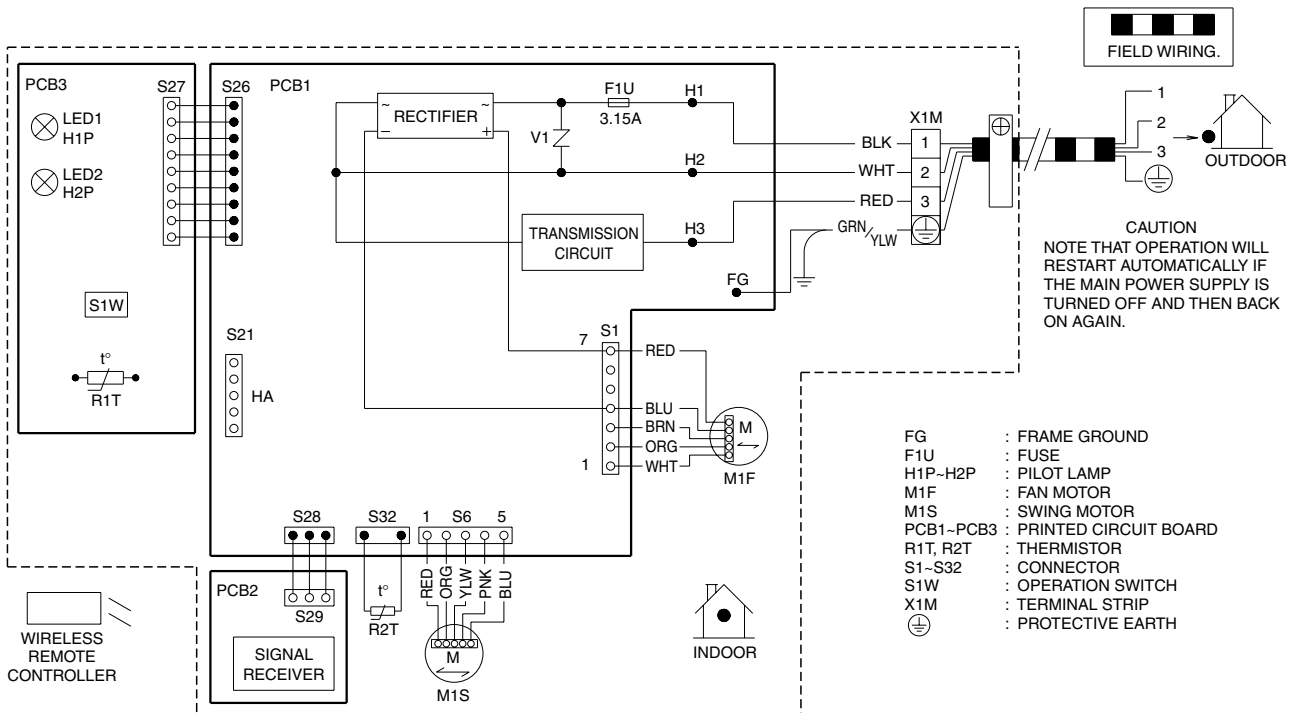
FTYN25/35DV1A




3D052476

2.2 Outdoor Units

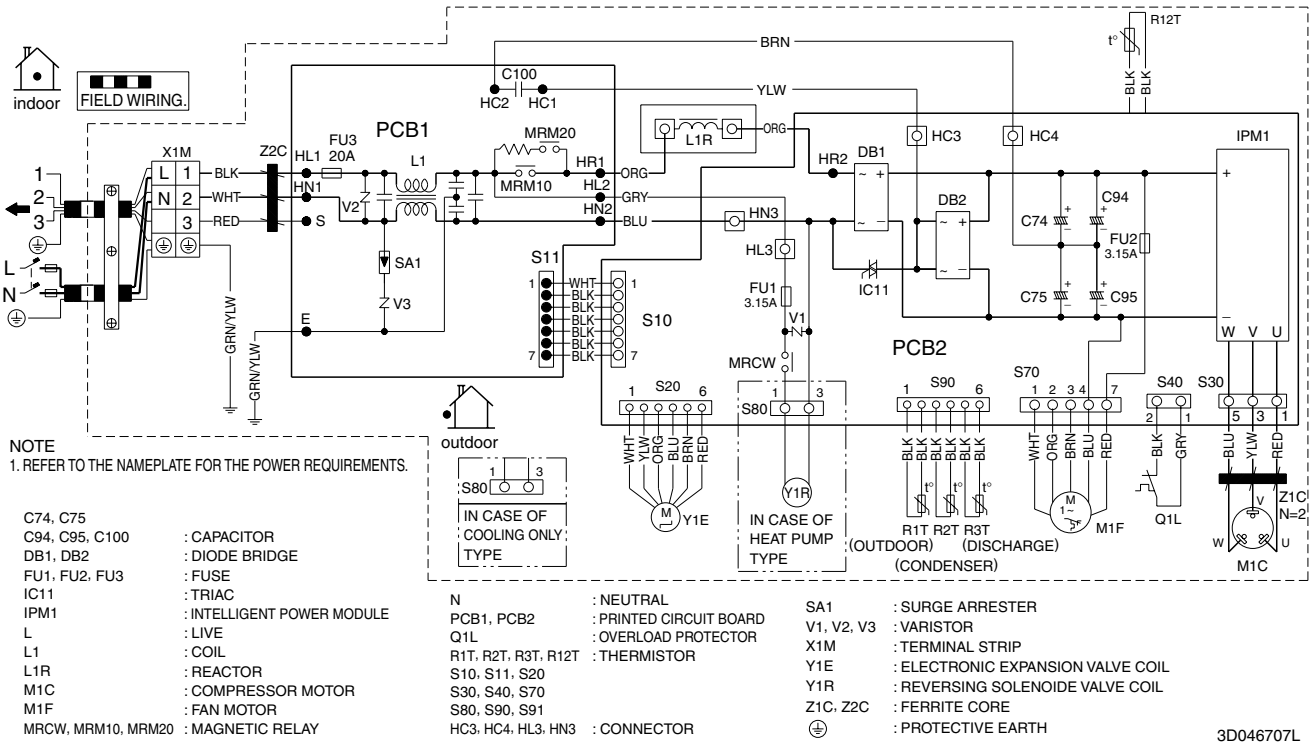RKS25/35DAVM, RK(X)S25/35EBVMA, RYN25/35DAV1A



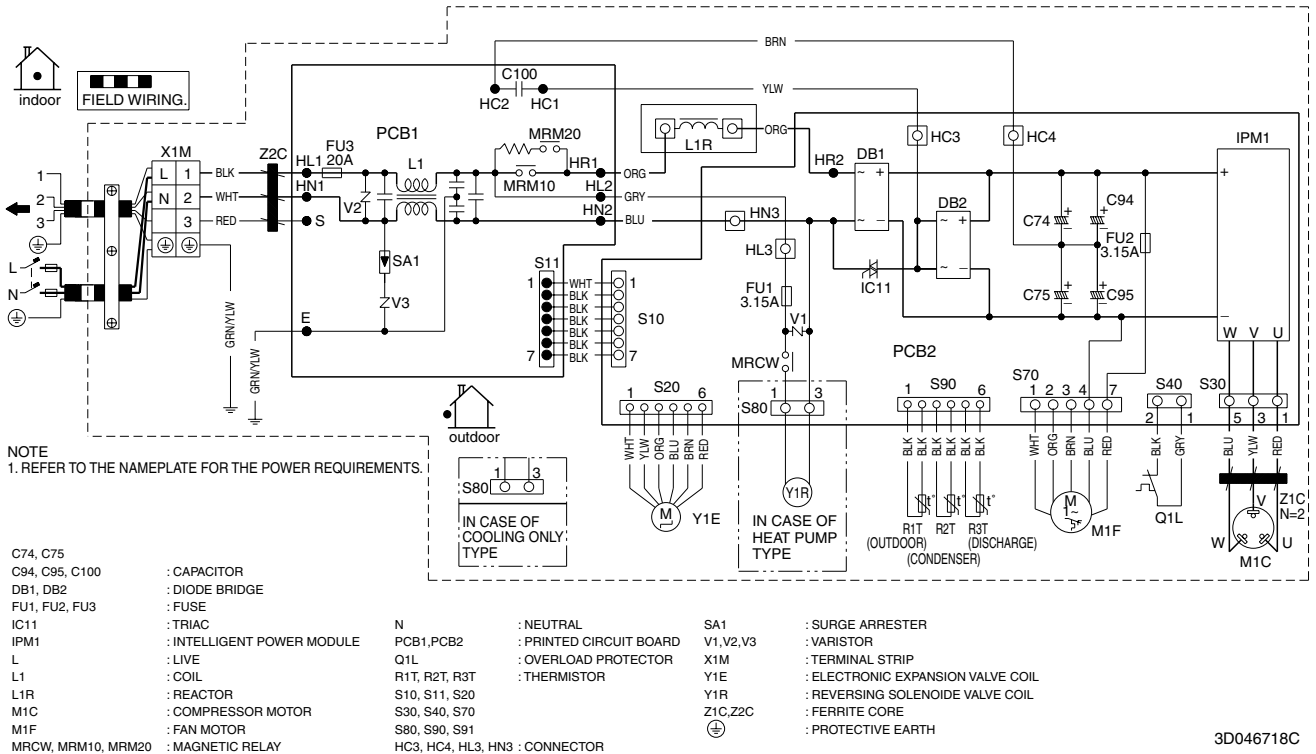RKD25/35DAVM, RK(X)D25/35DAVMA, RK(X)D25/35DAV2Z



Index

Numerics

00	95
3-minute standby	43, 50

A

A1	96
A5	97
A6	99, 100
address setting jumper	20, 22, 24
adjusting the airflow direction	73
air filter	138
airflow direction control	32
ARC433	92
AUTO · DRY · COOL · HEAT · FAN operation	71
automatic airflow control	33
automatic operation	35
auto-restart	20, 22, 24, 43, 197
auto-swing	32

C

C4	102
C9	102
care and cleaning	83
centralized control	20, 22, 24
check	
discharge pressure check	133
electronic expansion valve check	130
fan motor connector output check	130
four way valve performance check	131
Hall IC check	136
installation condition check	133
inverter units refrigerant system check	134
outdoor unit fan system check	134
power supply waveforms check	134
power transistor check	135
thermistor resistance check	132
turning speed pulse input on the outdoor unit PCB check	135
check No.01	130
check No.04	130
check No.05	131
check No.06	132
check No.07	133
check No.08	133
check No.09	134
check No.10	134
check No.11	134
check No.13	135
check No.15	135
check No.16	136
compressor	190
compressor lock	108
compressor motor	179
compressor overload	107
compressor protection function	50

compressor system sensor abnormality	116
connectors	20, 22, 24, 26
control PCB (indoor unit)	21, 23, 25
control PCB (outdoor unit)	27

D

DC fan lock	109
DC voltage / current sensor abnormality	118
defrost control	54
diagnosis mode	93
diode bridge	198
discharge pipe temperature control	50, 113
discharge pipe thermistor	44, 45, 56, 120, 181
discharge pressure check	133
display PCB	21, 23, 25
drain pan unit	158
drip proof plate	171

E

E1	106
E5	107
E6	108
E7	109
E8	110
EA	111
ECONO mode	38
ECONO operation	77
electrical box	148, 179
electrical box temperature rise	121
electronic expansion valve check	130
electronic expansion valve coil	180
electronic expansion valve control	55
error codes	
00	95
A1	96
A5	97
A6	99, 100
C4	102
C9	102
E1	106
E5	107
E6	108
E7	109
E8	110
EA	111
F3	113
F6	114
H0	116
H6	117
H8	118
H9	119
J3	119
J6	119
L3	121
L4	123

L5	125
P4	119
U0	127
U2	129
U4	103
UA	105
error codes and description	95
F	
F3	113
F6	114
fan control	53
fan motor	149, 162, 170, 174
fan motor connector output check	130
fan motor fixing frame	175
fan motor or related abnormality	
AC motor	99
DC motor	100
fan rotor	167
fan speed control	33
fan speed setting	20, 22, 24, 197
filter	
mold proof air filter	43
titanium apatite photocatalytic	
air-purifying filter	43
filter PCB	27
forced operation mode	59
forced operation ON/OFF switch	20, 22, 24
four way valve	187
four way valve abnormality	111
four way valve coil	180
four way valve operation compensation	49
four way valve performance check	131
four way valve switching	49
freeze-up protection control	52, 97
frequency control	30, 47
frequency principle	30
front grille	142
front panel	140, 172
FU1	20, 22, 24, 26
FU2	26
FU3	26
function of thermistor	44
functions	2
fuse	20, 22, 24, 26
H	
H0	116
H6	117
H8	118
H9	119
HA	20, 22, 24, 156, 157
Hall IC	33, 99, 100
Hall IC check	136
HC3	26
HC4	26
heat exchanger	164
heating peak-cut control	52
high pressure control	97
high pressure control in cooling	114
high temperature of the discharge pipe	56
HL3	26
HN3	26
horizontal blades	145
hot-start function	43
I	
indoor heat exchanger thermistor ...	44, 45, 102, 151
indoor unit PCB abnormality	96
input current control	51
input over current detection	110
installation condition check	133
instruction	63
insufficient gas	127
insufficient gas control	58
INTELLIGENT EYE	40
INTELLIGENT EYE operation	79
INTELLIGENT EYE sensor PCB	21, 23
inverter POWERFUL operation	42
inverter principle	30
inverter units refrigerant system check	134
J	
J3	119
J4	197
J6	119
JA	20, 22, 24, 197
JB	20, 22, 24, 197
JC	20, 22, 24, 197
jumper settings	197
L	
L3	121
L4	123
L5	125
LED A	20, 22, 24, 26
LED1	20, 22, 24
LED2	20, 22, 24
LED3	20, 22
liquid compression protection function 2	53
M	
mode hierarchy	46
mold proof air filter	43
mold proof operation	39, 78
N	
names of parts	65
NIGHT SET mode	37
O	
OL activation	107
ON/OFF button on indoor unit	43
opening limit	56
operation lamp	90
outdoor air temperature thermistor	120
outdoor heat exchanger thermistor	
.....	44, 45, 120, 181
outdoor unit fan system check	134
outdoor unit PCB abnormality	106
OUTDOOR UNIT QUIET operation	76
output over current detection	125

- over current58, 110, 125
 overload58, 107
 overload protector26, 180
 over-voltage detection129
- P**
- P4119
 panels170
 partition plate183
 PCB, removal of151, 192
 PI control48
 piping diagrams200
 position sensor abnormality117
 power failure recovery function20, 22, 24, 197
 power supply waveforms check134
 power transistor198
 power transistor check135
 power-airflow dual flaps32
 POWERFUL operation42, 75
 POWERFUL operation mode59
 preheating operation49
 preparation before operation68
 pressure equalization control56
 printed circuit board (PCB)
 control PCB (indoor unit)21, 23, 25
 control PCB (outdoor unit)27
 display PCB21, 23, 25
 filter PCB27
 INTELLIGENT EYE sensor PCB21, 23
 signal receiver PCB21, 23, 25
 problem symptoms and measures91
 programme dry function34
 propeller fan173
- R**
- radiation fin temperature rise123
 radiation fin thermistor120
 reactor183
 reactor harnesses179
 remote controller92
 room temperature thermistor102
 RTH120, 22, 24
- S**
- S120, 22, 24, 156, 157
 S1026
 S1126
 S2026, 180
 S2120, 22, 24, 156, 157
 S2620, 22, 24, 156, 157
 S2720, 22, 24
 S2820, 22, 24, 156, 157
 S2920, 22, 24
 S3026, 179
 S3220, 22, 24, 156, 157
 S3520, 22, 156, 157
 S3620, 22
 S4026, 180
 S620, 22, 24, 148, 156, 157
 S720, 149, 156
 S7026, 174, 194
- S8026, 180, 194
 S9026, 194
 safety precautions63
 self-diagnosis digital display43
 sensor malfunction detection58
 service check function92
 shelter170
 side panel176
 signal receiver PCB21, 23, 25
 signal receiver unit152
 signal receiving sign43
 signal transmission error103
 silicon grease198
 sound blanket185
 specifications10
 starting operation control56
 stop valve cover170
 SW120, 22, 24
 swing motor148
- T**
- target discharge pipe temperature control57
 terminal board152, 192
 terminal cover187
 test run196
 thermistor
 discharge pipe thermistor ... 44, 45, 56, 120, 181
 indoor heat exchanger thermistor
 44, 45, 102, 151
 outdoor air temperature thermistor120
 outdoor heat exchanger thermistor
 44, 45, 120, 181
 radiation fin thermistor120
 room temperature thermistor102
 thermistor or related abnormality (indoor unit)102
 thermistor or related abnormality (outdoor unit) ..119
 thermistor resistance check132
 thermostat control36
 TIMER operation81
 titanium apatite photocatalytic air-purifying filter ...43
 top panel171
 troubleshooting86, 95
 troubleshooting with LED indication90
 turning speed pulse input on the outdoor unit PCB
 check135
- U**
- U0127
 U2129
 U4103
 UA105
 unspecified voltage105
- V**
- V120, 22, 24, 26
 V226
 V326
 varistor20, 22, 24, 26
 vertical blades145
 voltage detection function59

W

wide-angle louvres	32
wiring diagrams	206

Drawings & Flow Charts

A			
ARC433	92		
automatic airflow control	33		
automatic operation	35		
auto-swing	32		
C			
compressor lock	108		
compressor protection function	50		
compressor system sensor abnormality	116		
control PCB (indoor unit)	21, 23, 25		
control PCB (outdoor unit)	27		
D			
DC fan lock	109		
DC voltage / current sensor abnormality	118		
defrost control	54		
diagnosis mode	93		
diode bridge	198		
discharge pipe temperature control	50, 113		
discharge pressure check	133		
display PCB	21, 23, 25		
E			
ECONO mode	38		
electrical box temperature rise	121		
electronic expansion valve check	130		
electronic expansion valve control	55		
F			
fan motor connector output check	130		
fan motor or related abnormality			
AC motor	99		
DC motor	100		
fan speed steps	33		
filter PCB	27		
four way valve abnormality	111		
four way valve performance check	131		
freeze-up protection control	52		
freeze-up protection control or			
high pressure control	97		
frequency control	47		
frequency principle	30		
function of thermistor			
cooling only model	45		
heat pump model	44		
H			
Hall IC check	136		
heating peak-cut control	52		
high pressure control in cooling	114		
I			
indoor unit PCB abnormality	96		
input current control	51		
input over current detection	110		
installation condition check	133		
insufficient gas	127		
insufficient gas control	58		
INTELLIGENT EYE	40		
INTELLIGENT EYE sensor PCB	21, 23		
inverter features	31		
inverter POWERFUL operation	42		
inverter units refrigerant system check	134		
J			
jumper settings	197		
M			
mode hierarchy	46		
mold proof operation	39		
N			
NIGHT SET mode	37		
O			
OL activation (compressor overload)	107		
ON/OFF button on indoor unit	43		
operation lamp	90		
outdoor unit fan system check	134		
outdoor unit PCB abnormality	106		
output over current detection	125		
over-voltage detection	129		
P			
piping diagrams			
FTKD25DV2Z	200		
FTKD25DVM	200		
FTKD25DVMA	200		
FTKD35DV2Z	200		
FTKD35DVM	200		
FTKD35DVMA	200		
FTKS25/35DVM	200		
FTKS25/35EVMA	200		
FTXD25DV2Z	200		
FTXD25DVMA	200		
FTXD35DV2Z	201		
FTXD35DVMA	201		
FTXS25/35EVMA	201		
FTYN25/35DV1A	201		
RKD25DAV2Z	203		
RKD25DAVM	203		
RKD25DAVMA	203		
RKD35DAV2Z	203		
RKD35DAVM	203		
RKD35DAVMA	203		
RKS25/35EBVMA	202		
RKS25DAVM	202		
RKS35DAVM	202		
RXD25DAV2Z	205		

RXD25DAVMA	205
RXD35DAV2Z	205
RXD35DAVMA	205
RXS25/35EBVMA	204
RYN25DAV1A	204
RYN35DAV1A	204
position sensor abnormality	117
power supply waveforms check	134
power transistor	198
power transistor check	135
POWERFUL operation	42
programme dry function	34

R

radiation fin temperature rise	123
remote controller	92

S

service check function	92
signal receiver PCB	21, 23, 25
signal transmission error (between indoor and outdoor units)	103
silicon grease	198

T

target discharge pipe temperature control	57
thermistor or related abnormality (indoor unit)	102
thermistor or related abnormality (outdoor unit)	119
thermistor resistance check	132
thermostat control	36
trial operation from remote controller	196
turning speed pulse input on the outdoor unit PCB check	135

U

unspecified voltage (between indoor and outdoor units)	105
-----------------------------------------------------------------	-----

W

wiring diagrams	
FTK(X)D25/35DV2Z	206
FTK(X)D25/35DVMA	206
FTK(X)S25/35EVMA	206
FTKD25/35DVM	206
FTKS25/35DVM	206
FTYN25/35DV1A	207
RK(X)D25/35DAV2Z	208
RK(X)D25/35DAVMA	208
RK(X)S25/35EBVMA	208
RKD25/35DAVM	208
RKS25/35DAVM	208
RYN25/35DAV1A	208

Warning



- Daikin Industries, Ltd.'s products are manufactured for export to numerous countries throughout the world. Daikin Industries, Ltd. does not have control over which products are exported to and used in a particular country. Prior to purchase, please therefore confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107



JQA-1452

About ISO 9001

ISO 9001 is a plant certification system defined by the International Organization for Standardization (ISO) relating to quality assurance. ISO 9001 certification covers quality assurance aspects related to the "design, development, manufacture, installation, and supplementary service" of products manufactured at the plant.



EC99J2044

About ISO 14001

ISO 14001 is the standard defined by the International Organization for Standardization (ISO) relating to environmental management systems. Our group has been acknowledged by an internationally accredited compliance organisation as having an appropriate programme of environmental protection procedures and activities to meet the requirements of ISO 14001.

Dealer

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved