





HITACHI

AW**NO. 0001**

SERVICE MANUAL TECHNICAL INFORMATION

**RAS-25YH4/RAC-25YH4
RAS-35YH4/RAC-35YH4**

REFER TO THE FOUNDATION MANUAL

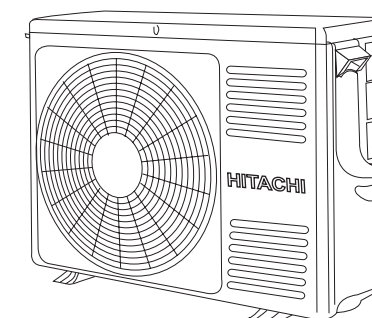FOR SERVICE PERSONNEL ONLYRAS-25YH4
RAS-35YH4RAC-25YH4
RAC-35YH4

HITACHI

CONTENTS

SPECIFICATIONS	4
HOW TO USE	6
CONSTRUCTION AND DIMENSIONAL DIAGRAM	25
MAIN PARTS COMPONENT	27
WIRING DIAGRAM	29
CIRCUIT DIAGRAM	31
PRINTED WIRING BOARD LOCATION DIAGRAM	37
BLOCK DIAGRAM	41
BASIC MODE	43
REFRIGERATING CYCLE DIAGRAM	55
DESCRIPTION OF MAIN CIRCUIT OPERATION	56
SERVICE CALL Q & A	84
TROUBLE SHOOTING	87
PROCEDURE FOR DISASSEMBLY AND REASSEMBLY	113
PARTS LIST AND DIAGRAM	115

SPECIFICATIONS

TYPE	DC INVERTER (WALL TYPE)				
	INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT	
MODEL	RAS-25YH4	RAC-25YH4	RAS-35YH4	RAC-35YH4	
POWER SOURCE	1 PHASE, 50 Hz, 230V		1 PHASE, 50 Hz, 230V		
COOLING	TOTAL INPUT (W)	560 (155 ~ 1,080)		950 (155 ~ 1,300)	
	TOTAL AMPERES (A)	2.86		4.35	
	CAPACITY (kW)	2.50 (0.90 ~ 3.10)		3.50 (0.90 ~ 4.00)	
	(B.T.U./h)	8,530 (3,070 ~ 10,575)		11,942 (3,070 ~ 13,650)	
HEATING	TOTAL INPUT (W)	770 (115 ~ 1,120)		980 (115 ~ 1,300)	
	TOTAL AMPERES (A)	3.72		4.49	
	CAPACITY (kW)	3.40 (0.90 ~ 4.40)		4.20 (0.90 ~ 5.00)	
	(B.T.U./h)	11,601 (3,070 ~ 15,695)		14,331 (3,070 ~ 17,745)	
DIMENSIONS (mm)	W	780	750	780	750
	H	280	548	280	548
	D	205	288	205	288
NET WEIGHT (kg)	9.5	35	9.5	35	

※ After installation

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT

**RAS-25YH4/RAC-25YH4
RAS-35YH4/RAC-35YH4**

AW NO. 0001


ROOM AIR CONDITIONER

INDOOR UNIT + OUTDOOR UNIT

DECEMBER 2003 Hitachi Household Appliance(Wuhu) Co.,Ltd.


SAFETY DURING REPAIR WORK

1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

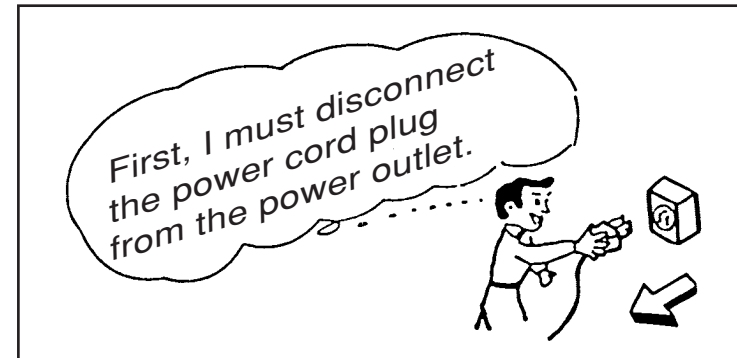

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

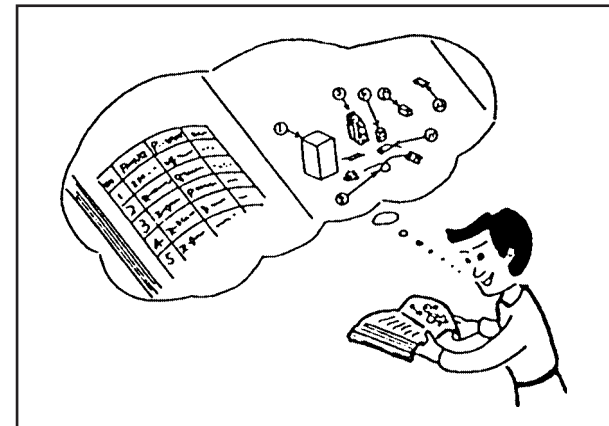

3. After completion of repairs, the initial state should be restored.
4. Lead wires should be connected and laid as in the initial state.
5. Modification of the unit by user himself should absolutely be prohibited.
6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be 1M or more as measured by a 500V DC megger.
9. The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again. If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
10. Any inflammable thing should never be placed about the location of installation.
11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.





WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

2. Object parts

- (1) Micro computer
- (2) Integrated circuits (IC)
- (3) Field-effect transistors (FET)
- (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.

3. Items to be observed in handling

- (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

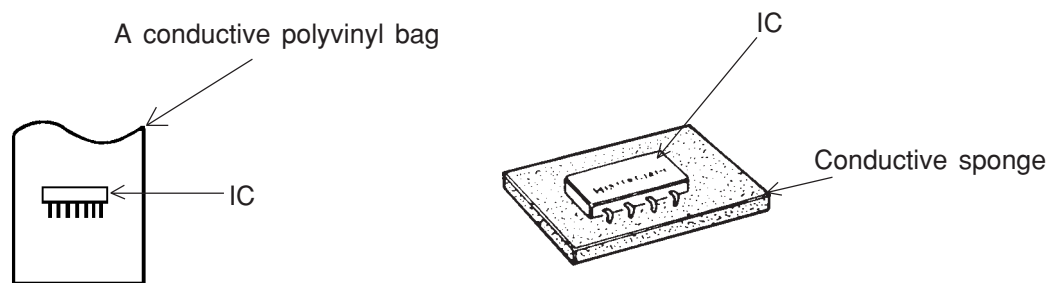


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet).

- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.

- (4) Be sure to place a part on a metal plate with grounding.

- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

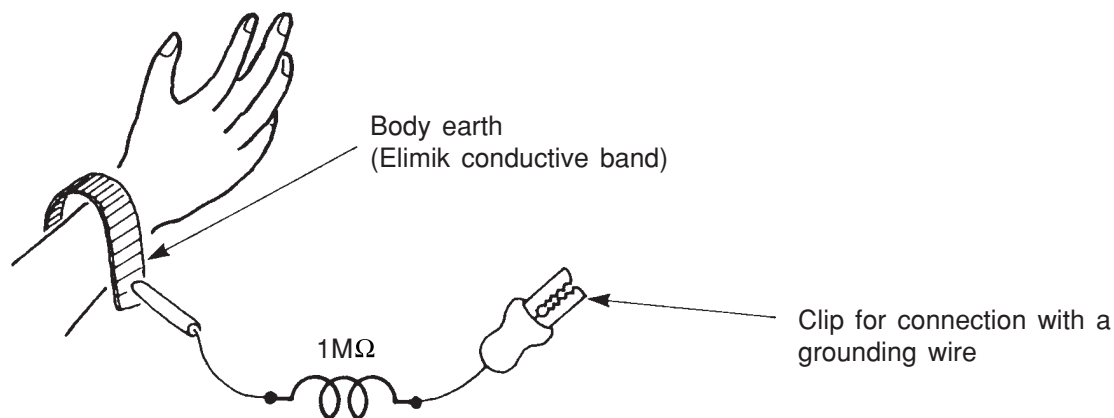


Fig. 2. Body Earth

(6) Use a three wire type soldering iron including a grounding wire.

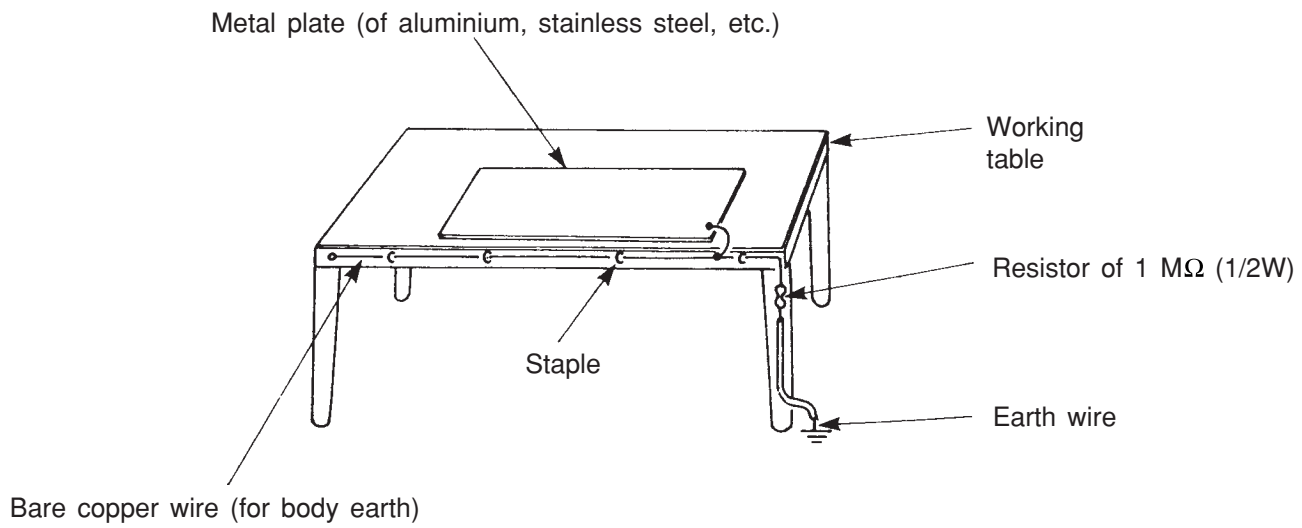


Fig. 3. Grounding of the working table

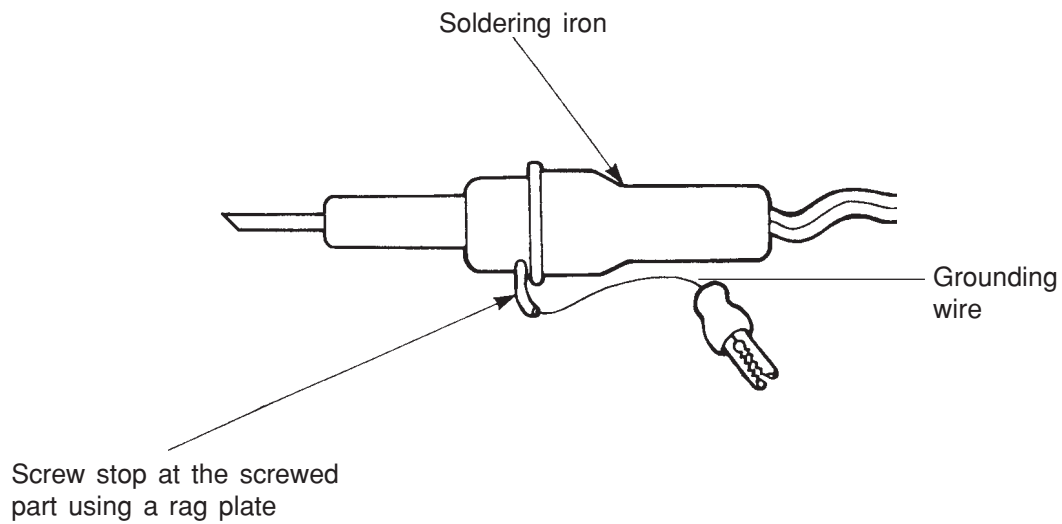


Fig. 4. Grounding a soldering iron

Use a high insulation mode (100V, 10M or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.



▲ CAUTION

1. In quiet operation or stopping the running, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
3. The room air conditioner does not start automatically after recovery of the electric power failure for preventing fuse blowing. Re-press START/STOP button after 3 minutes from when unit stopped.
4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
5. This room air conditioner should not be used at the cooling operation when the outside temperature is below 10°C (50°F).
6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -10°C (14°F).
If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.

SPECIFICATIONS

MODEL		RAS-25YH4 RAS-35YH4	RAC-25YH4 RAC-35YH4
FAN MOTOR		PWM DC35V	40 W
FAN MOTOR CAPACITOR		NO	NO
FAN MOTOR PROTECTOR		NO	NO
COMPRESSOR		—	EU1011DF
COMPRESSOR MOTOR CAPACITOR		NO	NO
OVERLOAD PROTECTOR		NO	YES
OVERHEAT PROTECTOR		NO	YES
FUSE (for MICROPROCESSOR)		NO	3.0A
POWER RELAY		NO	G4A
POWER SWITCH		YES	NO
TEMPORARY SWITCH		YES	NO
SERVICE SWITCH		NO	YES
TRANSFORMER		NO	NO
VARISTOR		NO	450NR
NOISE SUPPRESSOR		NO	YES
THERMOSTAT		YES(IC)	YES(IC)
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO
REFRIGERANT CHARGING VOLUME (Refrigerant 410A)	UNIT	-----	870g
	PIPES (MAX. 20m)	WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE.	









SAFETY PRECAUTION

- Please read the “Safety Precaution” carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of “ **▲ Warning**” and “ **▲ Caution**”. The “Warning” section contains matters which, if not observed strictly, may cause death or serious injury. The “Caution” section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The signs indicate the following meanings. (The following are examples of signs.)







 This sign in the figure indicates prohibition.	 Indicates the instructions that must be followed.
--	---

- Please keep this manual after reading.

PRECAUTIONS DURING INSTALLATION

 WARNING	<ul style="list-style-type: none"> • Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself. 	 PROHIBITION
	<ul style="list-style-type: none"> • Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself. 	
	<ul style="list-style-type: none"> • Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock. 	 CONNECT EARTH LINE
 CAUTION	<ul style="list-style-type: none"> • Be sure to use the specified piping set for R410A. Otherwise, this may result in broken copper pipes or faults. 	
	<ul style="list-style-type: none"> • A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists. 	 PROHIBITION
	<ul style="list-style-type: none"> • Do not install the unit near a location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. Piping shall be suitable supported with a maximum spacing of 1m between the supports. 	
	<ul style="list-style-type: none"> • Please ensure smooth flow of water when installing the drain hose. If any failure is found in the drain path, water drops from the indoor and outdoor units, causing wet household effects. 	
	<ul style="list-style-type: none"> • Make sure that a single phase 230V power source is used. The use of other power sources may cause electrical components to overheat and lead to fire. 	 PROHIBITION

PRECAUTIONS DURING SHIFTING OR MAINTENANCE

 WARNING	<ul style="list-style-type: none"> • Should abnormal situation arise (like burning smell), please stop operating the unit and remove plug from the socket or turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation. 	
	<ul style="list-style-type: none"> • Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire. 	
	<ul style="list-style-type: none"> • Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly. 	
	<ul style="list-style-type: none"> • Avoid an extended period of direct air flow for your health. 	 PROHIBITION
	<ul style="list-style-type: none"> • Do not connect the power cable with an extension cable or do not plug too many leads of the other electric appliance into the socket where this cable is plugged. In addition, wire the cable with some allowances to prevent the cable from stretching. Not doing so will cause an electrical shock, heat generation or fire. 	 PROHIBITION
	<ul style="list-style-type: none"> • Do not bundle the power cable, pull it, put something on it, heat it, process it, or put it between things. Breakage of the power cable may result. Use of a damaged cable may cause an electrical shock or a fire. 	 PROHIBITION
 PROHIBITION	<ul style="list-style-type: none"> • Do not put objects like thin rods into the panel of blower and suction side because the high-speed fan inside may cause danger. 	




PRECAUTIONS DURING OPERATION

WARNING	<ul style="list-style-type: none"> Do not use any conductor as fuse wire, this could cause fatal accident. 	 PROHIBITION
	<ul style="list-style-type: none"> During thunder storm, disconnect the plug top or turn off the circuit breaker. 	
	<ul style="list-style-type: none"> Spray cans and other combustibles should not be located within a meter of the air outlets of both indoor and outdoor units. As a spray can's internal pressure can be increased by hot air, a rupture may result. 	 PROHIBITION
CAUTION	<ul style="list-style-type: none"> The product shall be operated under the manufacturer specification and not for any other intended use. 	 PROHIBITION
	<ul style="list-style-type: none"> Do not attempt to operate the unit with wet hands, this could cause fatal accident. 	 DON'T WET
	<ul style="list-style-type: none"> When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency. 	 STRICTLY OBSERVE PRECAUTIONS
	<ul style="list-style-type: none"> Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc. 	 PROHIBITION
	<ul style="list-style-type: none"> Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger. 	 PROHIBITION
	<ul style="list-style-type: none"> Do not wash the unit with water or place a water container such as a vase on the indoor unit. Electrical leakage could be present and cause electric shock. 	 PROHIBITION
	<ul style="list-style-type: none"> Do not place plants or animals directly under the air flow as it is bad for the plants or animals. 	 PROHIBITION
	<ul style="list-style-type: none"> Do not climb on the outdoor unit or put objects on it. 	 PROHIBITION
	<ul style="list-style-type: none"> When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time. 	 PROHIBITION
	<ul style="list-style-type: none"> If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved. 	 PROHIBITION
	<ul style="list-style-type: none"> Indoor unit cleaning must be performed by authorized personnel only. Consult your sales agent. Using a commercially available detergent or similar can damage the plastic parts or clog the drain pipe, causing water to drip with potential electric shock hazard. 	 PROHIBITION
	<ul style="list-style-type: none"> Do not touch the air outlet, bottom surface and aluminum fin of the outdoor unit. You may get hurt. 	 DON'T TOUCH
	<ul style="list-style-type: none"> Do not touch the refrigerant pipe and connecting valve. Burns may result. 	 DON'T TOUCH




NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT

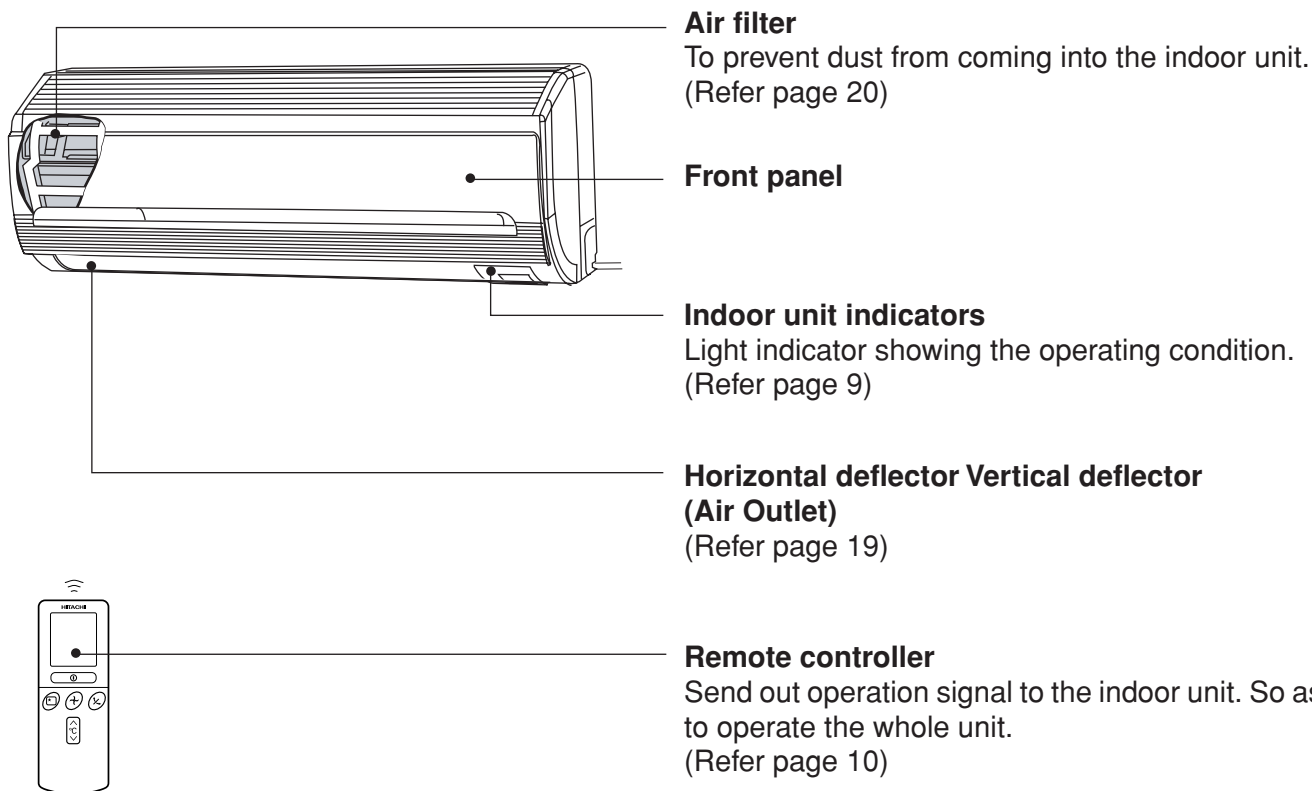

OUTDOOR UNIT

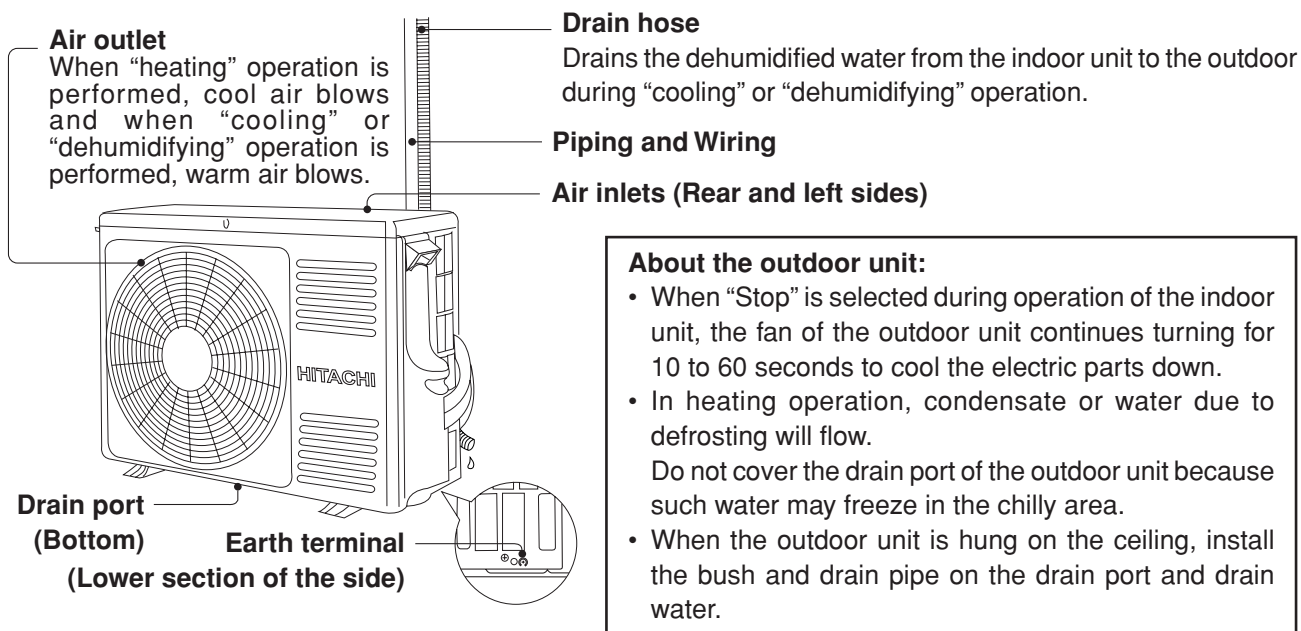


MODEL NAME AND DIMENSIONS


MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAS-25YH4, RAS-35YH4	780	280	205
RAC-25YH4, RAC-35YH4	750	548	288

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT INDICATIONS

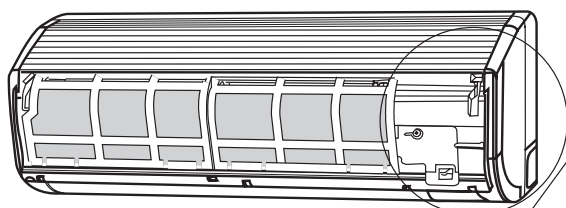

POWER SWITCH

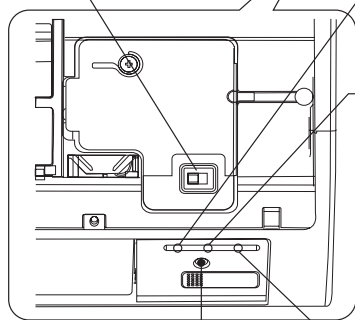

FILTER LAMP (Green)

When the device is operated for a total of about 200 hours, the FILTER lamp lights indicates that it is time to clean the filter. The lamp goes out when the "⏸ (AUTO SWING)" button is pressed while the operation is stopped.

OPERATION LAMP (Yellow)

This lamp lights during operation. The OPERATION LAMP flashes in the following cases during heating.

(1) During preheating

For about 2-3 minutes after starting up.

(2) During defrosting

Defrosting will be performed about once an hour when frost forms on the heat exchanger of the outdoor unit, for 5-10 minutes each time.

TIMER LAMP (Orange)

This lamp lights when the timer is working.

TEMPORARY SWITCH

- Use this switch to start and stop when the remote controller does not work.
- By pressing the temporary switch, the operation is done in automatic mode.


⚠ CAUTION

Turn off the circuit breaker or pull out the power plug if the unit is not be operated for a long period.

☆ If the power stays on and the unit is not operated, power is slightly consumed in the control circuit. The power is saved by turning off the power switch (or the circuit breaker when the power is supplied from the outdoor unit).

■ Attaching the air cleansing and deodorizing filters (Accessories) to the filter frame.

- Attach the air cleansing and deodorizing filters to the frame by gently compress its both sides and release after insertion into filter frame.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air cleansing and deodorizing filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Air cleansing and deodorizing filters are washable and reusable up to 20 times by using vacuum cleaner or water rinse under running tap water. When you want to renew it, please ask your sales agent.

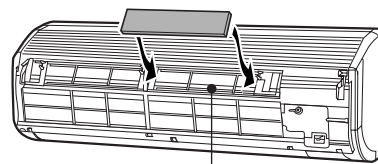


Frame

NAMES AND FUNCTIONS OF EACH PART

REMOTE CONTROLLER

- This controls the operation of the indoor unit.
The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter, in some cases, the control signal may not be received.
This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care.
Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.

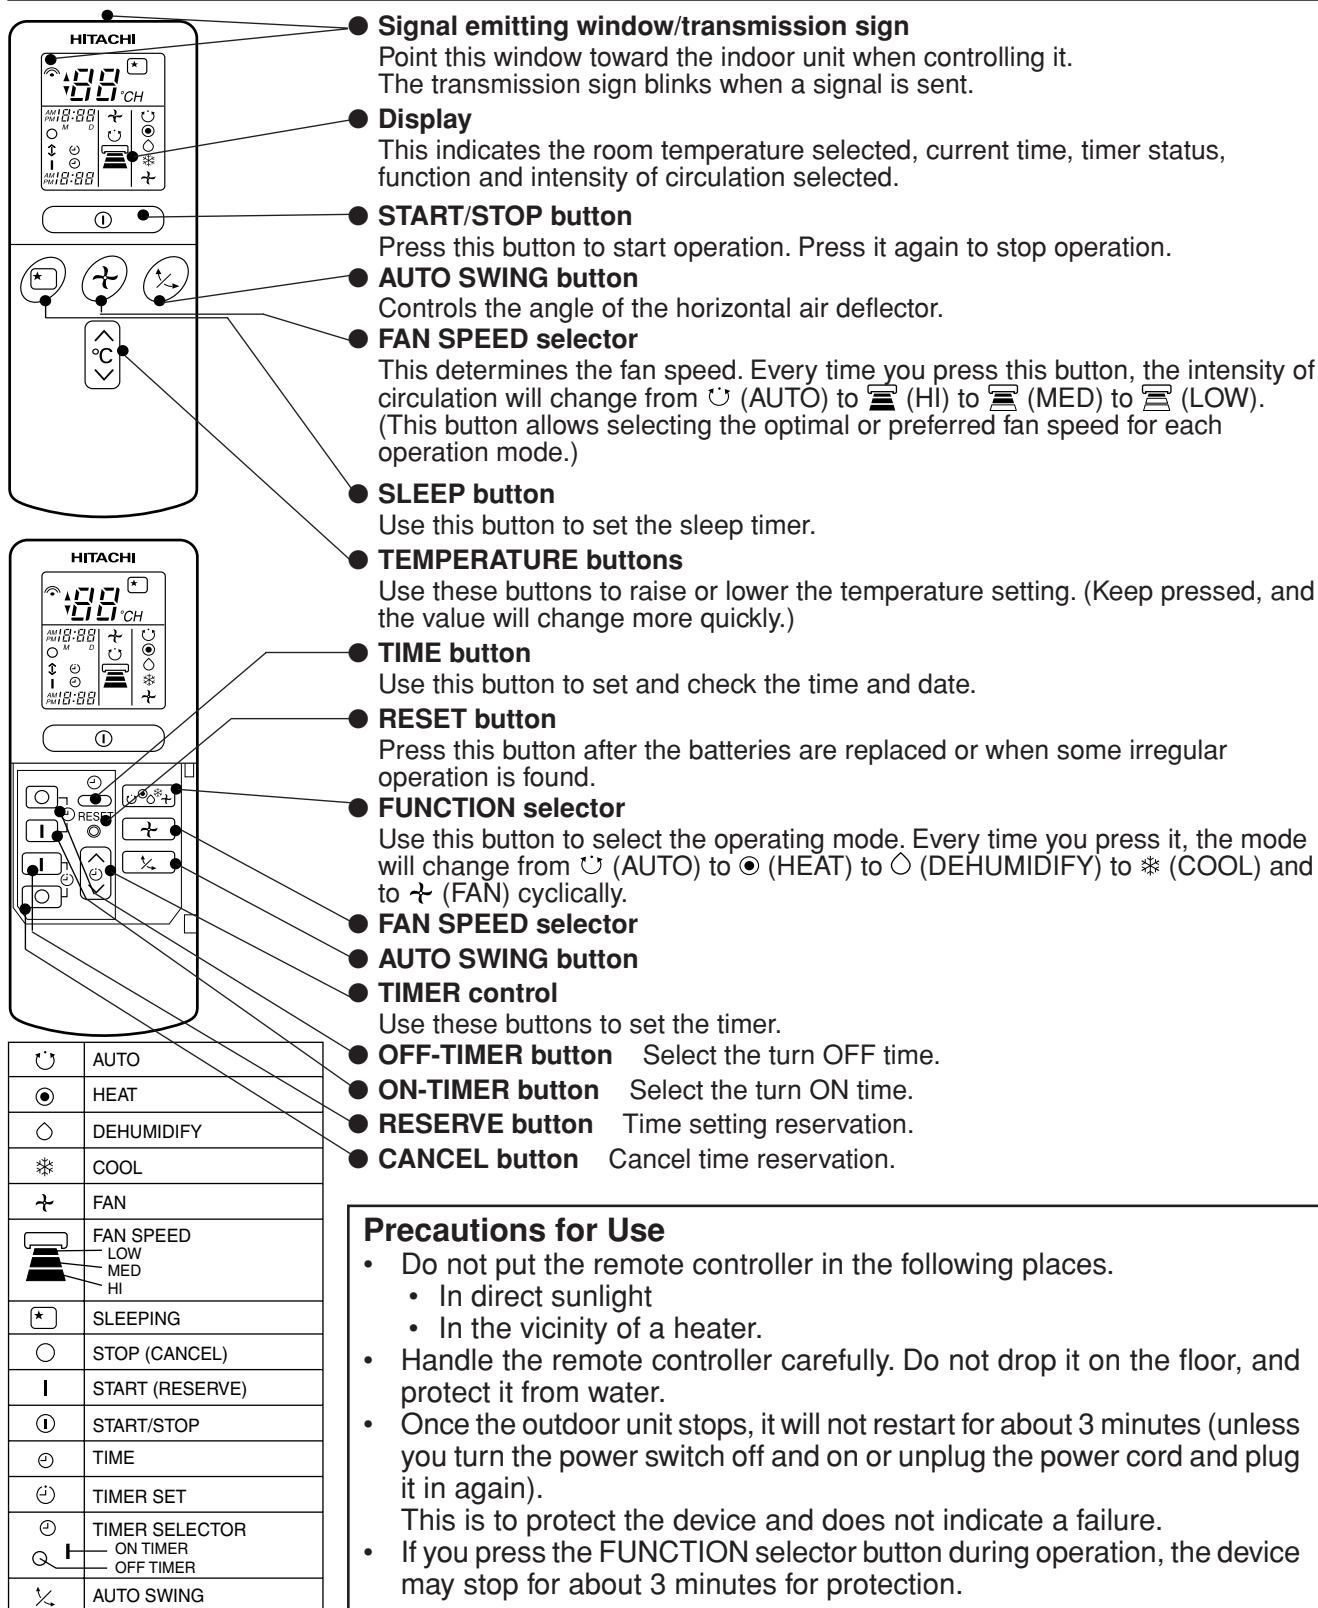

Signal emitting window/transmission sign
Point this window toward the indoor unit when controlling it. The transmission sign blinks when a signal is sent.

Display
This indicates the room temperature selected, current time, timer status, function and intensity of circulation selected.

START/STOP button
Press this button to start operation. Press it again to stop operation.

AUTO SWING button
Controls the angle of the horizontal air deflector.

FAN SPEED selector
This determines the fan speed. Every time you press this button, the intensity of circulation will change from ♪ (AUTO) to 🌀 (HI) to 🌀 (MED) to 🌀 (LOW). (This button allows selecting the optimal or preferred fan speed for each operation mode.)

SLEEP button
Use this button to set the sleep timer.

TEMPERATURE buttons
Use these buttons to raise or lower the temperature setting. (Keep pressed, and the value will change more quickly.)

TIME button
Use this button to set and check the time and date.

RESET button
Press this button after the batteries are replaced or when some irregular operation is found.

FUNCTION selector
Use this button to select the operating mode. Every time you press it, the mode will change from ♪ (AUTO) to ● (HEAT) to ○ (DEHUMIDIFY) to ❄️ (COOL) and to ↻ (FAN) cyclically.

FAN SPEED selector

AUTO SWING button

TIMER control
Use these buttons to set the timer.

OFF-TIMER button Select the turn OFF time.

ON-TIMER button Select the turn ON time.

RESERVE button Time setting reservation.

CANCEL button Cancel time reservation.

♪	AUTO
●	HEAT
○	DEHUMIDIFY
❄️	COOL
↻	FAN
🌀	FAN SPEED LOW MED HI
★	SLEEPING
○	STOP (CANCEL)
I	START (RESERVE)
⌚	START/STOP
⌚	TIME
⌚	TIMER SET
⌚	TIMER SELECTOR ON TIMER OFF TIMER
↻	AUTO SWING

Precautions for Use

- Do not put the remote controller in the following places.
 - In direct sunlight
 - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).
This is to protect the device and does not indicate a failure.
- If you press the FUNCTION selector button during operation, the device may stop for about 3 minutes for protection.

VARIOUS FUNCTIONS


■ Auto Restart Control

- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode and airflow direction.
(As the operation is not stopped by remote controller.)
- If you intend not to continue the operation when the power is resumed, switch off the power supply. When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode and airflow direction.


Note: 1. If you do not require Auto Restart Control, please consult your sales agent.
2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

AUTOMATIC OPERATION

The device will automatically determine the mode of operation, HEAT or COOL depending on the initial room temperature. The selected mode of operation will change when the room temperature varies.

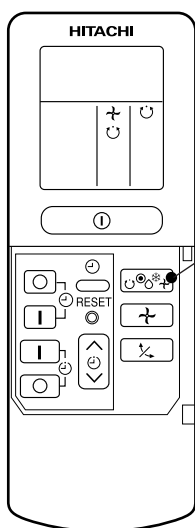

1

Press the FUNCTION selector so that the display indicates the  (AUTO) mode of operation.

- When AUTO has been selected, the device will automatically determine the mode of operation, HEAT or COOL depending on the current room temperature.
- When AUTO is first selected, the device will determine the current room temperature and select the proper operation mode accordingly.
- When the air conditioner has adjusted the room's temperature to the near preset temperature, it will begin to monitor operation. If the room temperature subsequently changes, the air conditioner will once again select the appropriate operation (heating or cooling) to adjust the temperature to the preset temperature. The monitoring operation range is $\pm 3^{\circ}\text{C}$ relative to the preset temperature.
- If the mode automatically selected by the unit is not satisfactory, manually change the mode setting (heat, dehumidify, cool or fan).

**START
STOP**


Press the  (START/STOP) button.

Operation starts with a beep.

Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the  (START/STOP) button next time.

You can raise or lower the temperature setting as necessary by maximum of 3°C .




Press the temperature button and the temperature setting will change by 1°C each time.

- The preset temperature and the actual room temperature may vary somewhat depending on conditions.

Press the  (FAN SPEED) button, AUTO and LOW is available.

HEATING OPERATION

- Use the device for heating when the outdoor temperature is under 21°C. When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -10°C of the outdoor temperature.

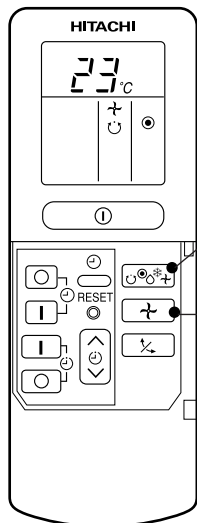

1 Press the FUNCTION selector so that the display indicates ● (HEAT).


Set the desired FAN SPEED with the ↻ (FAN SPEED) button (the display indicates the setting).

⏻ (AUTO) : The fan speed changes automatically according to the temperature of the air which blows out.

🌀 (HI) : Economical as the room will become warm quickly. But you may feel a chill at the beginning.

🌀 (MED) : Quiet.

🌀 (LOW) : More quiet.

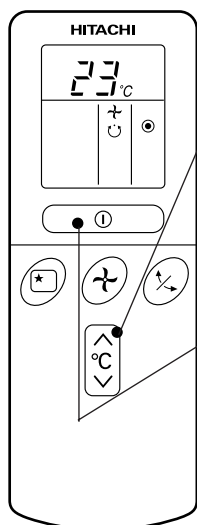

3 Set the desired room temperature with the TEMPERATURE buttons (the display indicates the setting).
The temperature setting and the actual room temperature may vary somewhat depending on conditions.

START STOP Press the ⏻ (START/STOP) button. Heating operation starts with a beep. Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the ⏻ (START/STOP) button next time.

■ Defrosting

Defrosting will be performed about once an hour when frost forms on the heat exchange of the outdoor unit, for 5~10 minutes each time.


During defrosting operation, the operation lamp blinks in cycle of 3 seconds on and 0.5 second off.

The maximum time for defrosting is 20 minutes.

(If the piping length used is longer than usual, frost will likely to form.)

DEHUMIDIFYING OPERATION

Use the device for dehumidifying when the room temperature is over 16°C.
When it is under 15°C, the dehumidifying function will not work.

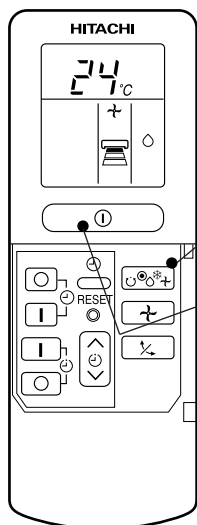

1 Press the FUNCTION selector so that the display indicates ◯ (DEHUMIDIFY).
The FAN SPEED is set at LOW automatically.
The FAN SPEED button does not work.

START STOP Press the ① (START/STOP) button.


- When you want to change the operation mode, please use the FUNCTION selector.
- Set the desired temperature is available.
- You also can use the FUNCTION selector to select this operation.

■ Dehumidifying Function

- Dehumidifying takes place with a target temperature which is slightly lower than the room temperature setting. (However, target temperature is 16°C for a temperature setting of 16°C.) If the room temperature becomes lower than the target value, operation stops. If the room temperature becomes higher than the target value, operation restarts.
- The preset room temperature may not be reached depending on the number of people present in the room conditions.


COOLING OPERATION

Use the device for cooling when the outdoor temperature is 22-42°C.
If humidity is very high (over 80%) indoors, some dew may form on the air outlet grille of the indoor unit.

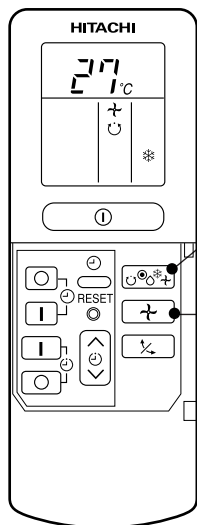

1

Press the FUNCTION selector so that the display indicates * (COOL).

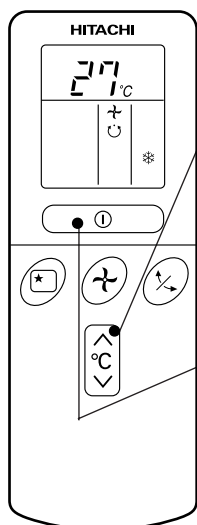

2

Set the desired FAN SPEED with the ↻ (FAN SPEED) button (the display indicates the setting).

⏻ (AUTO) : The FAN SPEED is HI at first and varies to MED automatically when the preset temperature has been reached.

🌀 (HI) : Economical as the room will become cool quickly.

🌀 (MED) : Quiet.

🌀 (LOW) : More quiet.

3

Set the desired room temperature with the TEMPERATURE buttons (the display indicates the setting).

The temperature setting and the actual room temperature may vary somewhat depending on conditions.

START STOP


Press the ⏻ (START/STOP) button. Cooling operation starts with a beep. Press the button again to stop operation. The cooling function does not start if the temperature setting is higher than the current room temperature (even though the ⏻ (OPERATION) lamp lights).


The cooling function will start as soon as you set the temperature below the current room temperature.


■ As the settings are stored in memory in the remote controller, you only have to press the ⏻ (START/STOP) button next time.




FAN OPERATION

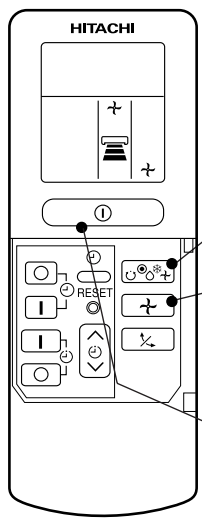
You can use the device simply as an air circulator. Use this function to dry the interior of the indoor unit at the end of summer.



1 Press the FUNCTION selector so that the display indicates  (FAN).

2 Press the  (FAN SPEED) button.


-  (HI) : The strongest air blow.
-  (MED) : Quiet.
-  (LOW) : More quiet.

START STOP Press the  (START/STOP) button. Fan operation starts with a beep. Press the button again to stop operation.

FAN SPEED (AUTO) ... When the AUTO fan speed mode is set in the cooling/heating operation:

For the heating operation	<ul style="list-style-type: none"> • The fan speed will automatically change according to the temperature of discharged air. • As room temperature reaches the preset temperature, a very light breeze will blow.
For the cooling operation	<ul style="list-style-type: none"> • Operation starts in the "HI" mode to reach the preset temperature. • As room temperature approaches the preset temperature, fan speed automatically switches to "LOW".

HOW TO SET THE TIMER

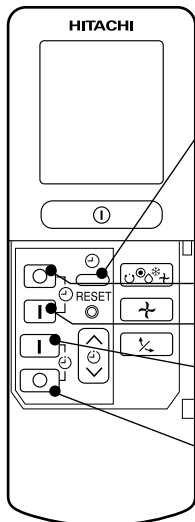

TIME, DAY, MONTH (current time, day, month)

OFF TIMER


ON TIMER

RESERVE

CANCEL


Time, Day, Month

After you change the batteries;




1 Set the current month and day with the TIMER control button.

OFF-Timer




You can set the device to turn off at the present time.

1 Press the ○ (OFF-TIMER) button. The ○ (OFF) mark blinks on the display.




ON-Timer


The device will turn on at the designated times.



1 Press the I (ON-TIMER) button. The I (ON) mark blinks on the display.




ON/OFF-Timer




- The device will turn on (off) and off (on) at the designated times.
- The switching occurs first at the preset time that comes earlier.
- The arrow mark appearing on the display indicates the sequence of switching operations.


1 Press the ○ (OFF-TIMER) button so that the ○ (OFF) mark blinks.



2 Set the turn-off time with the TIMER control button. Press the I (RESERVE) button.



3 Press the I (ON-TIMER) button so that the ○ (OFF) mark lights and the I (ON) mark blinks.

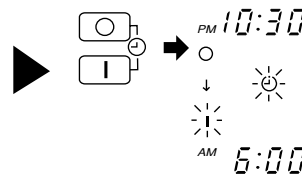

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the ○ (CANCEL) button.


The ☺ (RESERVED) sign goes out with a beep and the ☺ (TIMER) lamp turns off on the indoor unit.

NOTE


You can set only one of the OFF-timer, ON-timer and ON/OFF-timer.




2 Set the ☹ (TIME) button.



3 Set the current time with the TIMER control button.




4 Press the ☹ (TIME) button again. The time indication starts lighting instead of flashing.



- The time indication will disappear automatically in 10 seconds.
- To check the current time setting, press the ☹ (TIME) button twice. The setting of the current time is now complete.


Example: The current time is 1:30p.m.

2 Set the turn-off time with the TIMER control button.




3 Point the signal window of the remote controller toward the indoor unit, and press the I (RESERVE) button.

The ○ (OFF) mark starts lighting instead of flashing and the ☹ (RESERVED) sign lights. A beep occurs and the ☹ (TIMER) lamp lights on the indoor unit.




Example: The device will turn off at 11:00p.m. The setting of turn-off time is now complete.

2 Set the turn-on time with the TIMER control button.




3 Point the signal window of the remote controller toward the indoor unit, and press the I (RESERVE) button.

The I (ON) mark starts lighting instead of flashing and the ☹ (RESERVED) sign lights. A beep occurs and the ☹ (TIMER) lamp lights on the indoor unit.




Example: The device will turn on at 7:00a.m. The setting of turn-on time is now complete.

4 Set the turn-on time with the TIMER control button.

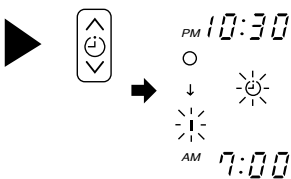

5 Point the signal window of the remote controller toward the indoor unit, and press the I (RESERVE) button.


The I (ON) mark starts lighting instead of flashing and the ☹ (RESERVED) sign lights. A beep occurs and the ☹ (TIMER) lamp lights on the indoor unit.

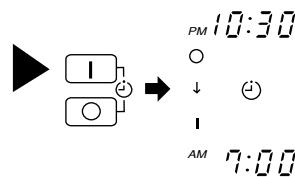


Example: The device will turn off at 10:30p.m. and it will be turned on at 7:00 a.m. The settings of the turn-on/off time are now complete.

- The timer may be used in three ways: off-timer, on-timer and ON/OFF (OFF/ON)-timer. Set the current time at first because it serves as a reference.
- As the time settings are stored in memory in the remote controller, you only have to press the I (RESERVE) button in order to use the same settings next time.


HOW TO SET THE SLEEP TIMER

Set the current time at first if it is not set before (see the pages for setting the current time). Press the  (SLEEP) button and the display changes as shown below.

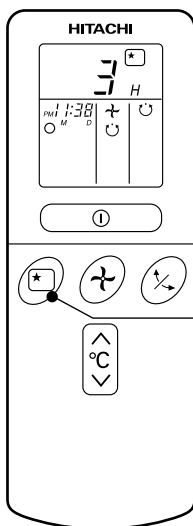


Mode	Indication
Sleep Timer	

Sleep Timer: The device will continue working for the desired number of hours and then turn off.
Point the signal window of the remote controller toward the indoor unit, and press the SLEEP button.
The timer information will be displayed on the remote controller. The TIMER lamp lights with a beep from the indoor unit. When the sleep timer has been set, the display indicates the turn-off time.

 ^{AM} 2:38




Example: If you set 3 hours sleep time at 11:38 p.m., the turn-off time is 2:38 a.m.



The device will be turned off by the sleep timer and turned on by on-timer.

1 Set the ON-timer.


2 Press the  (SLEEP) button and set the sleep timer.

 ^{AM} 1:38
↓ 
↓ 
^{AM} 6:00

For heating:

In this case, the device will turn off in 2 hours (at 1:38 a.m.) and turn on early so that the preset temperature will be almost reached at 6:00 next morning.

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the  (CANCEL) button.


The  (RESERVED) sign goes out with a beep and the  (TIMER) lamp turns off on the indoor unit.


NOTE

If you set the sleep timer when the off-time or on/off-timer has been set earlier, the sleep timer becomes effective instead of the off - or on/off-timer set earlier.

ADJUSTING THE AIR DEFLECTORS

- 1** Adjustment of the conditioned air in the upward and downward directions.

The horizontal air deflector is automatically set to the proper angle suitable for each operation. The deflector can be swung up and down continuously and also set to the desired angle using the “ (AUTO SWING)” button.


- If the “ (AUTO SWING)” button is pressed once, the horizontal air deflector swings up and down. If the button is pressed again, the deflector stops in its current position. Several seconds (about 6 seconds) may be required before the deflector starts to move.
- Use the horizontal air deflector within the adjusting range shown in the right.
- When the operation is stopped, the horizontal air deflector moves and stops at the position where the air outlet closes.

CAUTION

- In “Cooling” operation, do not keep the horizontal air deflector swinging for a long time. Some dew may form on the horizontal air deflector and dew may drop.




- 2** Adjustment of the conditioned air to the left and right.

Hold the vertical air deflector as shown in the figure and adjust the conditioned air to the left and right.

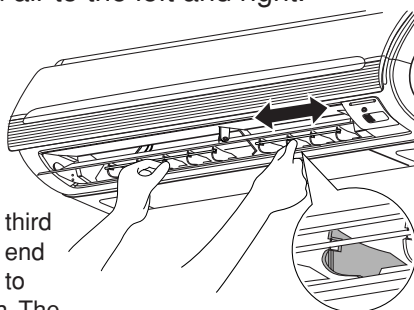

Left side: Hold the third blade from the left end of the air deflector to adjust the direction. The pull for the blade is marked.

Right side: Hold the third blade from the right end of the air deflector to adjust the direction. The pull for the blade is marked.

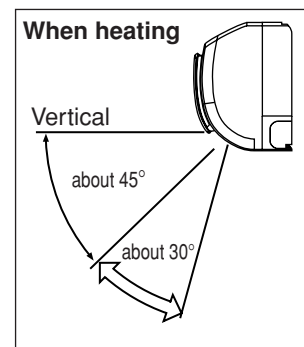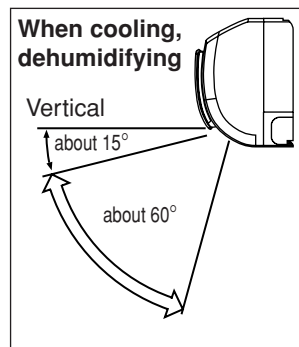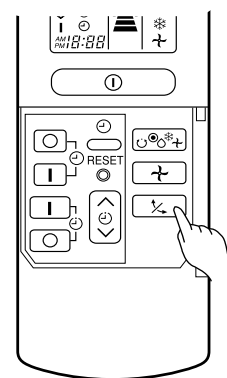

HOW TO EXCHANGE THE BATTERIES IN THE REMOTE CONTROLLER


- 1** Remove the cover as shown in the figure and take out the old batteries.



- 2** Install the new batteries. The direction of the batteries should match the marks in the case.

CAUTION

1. Do not use new and old batteries, or different kinds of batteries together.
2. Take out the batteries when you do not use the remote controller for 2 or 3 months.

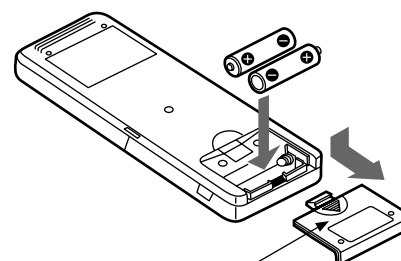

Push and pull to the direction of arrow.

MAINTENANCE

⚠ CAUTION


Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.

1. AIR FILTER


When the filter indicator lamp comes on, be sure to clean the filter. By doing so, the power rates are saved. In case the air filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the filter following the procedure below.

PROCEDURE


- 1** Open the front panel carefully and remove the filter.

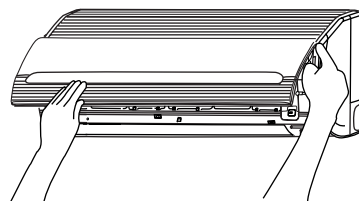

- 2** Vacuum dust from the air filter using vacuum cleaner. If there is too much dust, wash the filter with a detergent and rinse it thoroughly. After that, dry it in the shade.

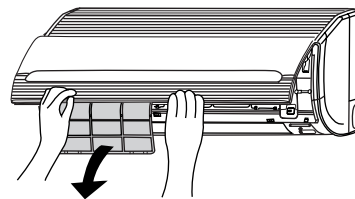

- 3**
- Set the filter with "FRONT" mark facing front, and slot them into the original state.
 - After attaching the filters, push the front panel at three arrow portions as shown in figure and close it.

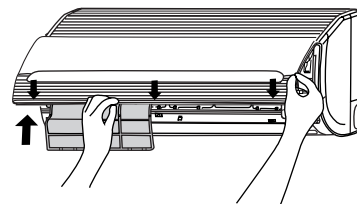


⚠ CAUTION

- Do not wash with hot water at more than 40°C. The filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Don't operate the unit without filter. Fault may occur if you continue.




2. CLEANING OF FRONT PANEL

- Remove the front panel and wash with clean water. Wash it with a soft sponge. After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly. If water remains at indicators or signal receiver of indoor unit, it causes trouble.

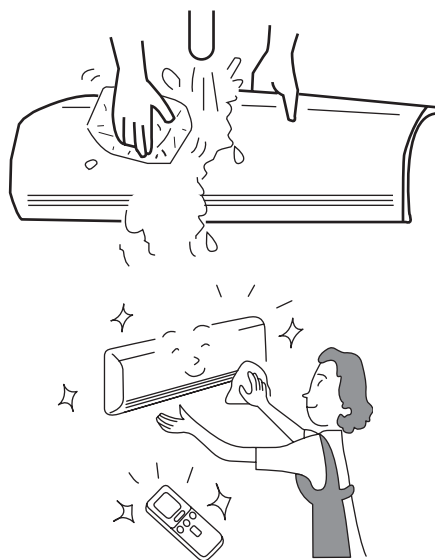


Method of removing the front panel.
Be sure to hold the front panel with both hands to detach and attach it.

Removing the Front Panel

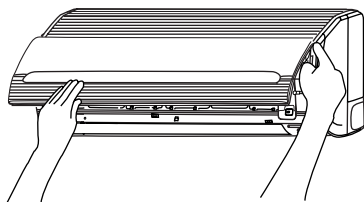

Attaching the Front Panel

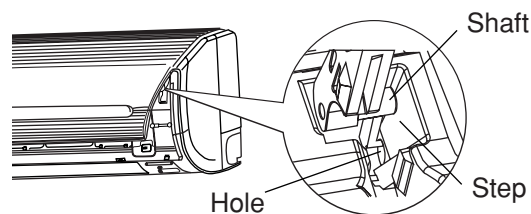

- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.
- Move the shafts of the left and right arms into the **steps** in the unit and securely insert them into the holes.


CAUTION

- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.



3. MAINTENANCE AT BEGINNING OF LONG OFF PERIOD

- Run the unit by setting the operation mode to \rightarrow (FAN) and the fan speed to HI for about half a day on a fine day, and dry the whole of the unit.
- Switch off the power plug or turn off the circuit breaker.

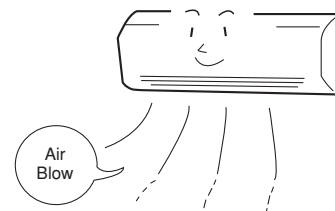

INFORMATION

CAPABILITIES

Heating Capability

- This room air conditioner utilizes a heat pump system that absorbs exterior heat and brings it into a room to be heated. As the ambient temperature gets lower, heating capability will also lower. In such a situation, the inverter works to increase compressor rpm to keep the unit's heating capability from decreasing. If the unit's heating performance is still unsatisfactory, other heating appliances should be used to augment this unit's performance.
- The air conditioner is designed to heat an entire room so that it may take some time before you feel warm. Timer operation is recommended for effective preheating ahead of the desired time.

CAUTION






Do not use a stove or any other high-temperature devices in proximity to the indoor unit.






Cooling and Dehumidifying Capabilities

- If the heat present in a room exceeds the unit's cooling capacity (for example, if there are many people in the room or other heating appliances are used), the preset room temperature may not be reached.

VARIOUS FUNCTIONS




- When fan speed, room temperature are set with the remote controller before starting manual operation and the buttons are released, the indication of settings will go off in 10 seconds and only the operation mode will be displayed.
- Pressing the  button while the unit is in operation will let the protective circuit work so that the unit will not operate for approximately 3 minutes.
- During heating operation, the indoor unit's color indicator lamp may flash with no air emitted for a while.
- If you feel cold wind during heating operation with the  (HI) fan speed or want to make the unit operation quieter after the room is heated, use of  (AUTO) setting is recommended.
- With the  (LOW) setting, the unit's cooling capability will lower slightly.
- With the  (LOW) setting, the unit's heating capacity will vary with the operating conditions.

TIMER PROGRAMMING/SLEEP TIMER OPERATION

- When the timer has been programmed, the unit will not operate even if the set time is reached unless the unit receives a signal from the remote controller. Confirm that timer programming is complete (beep) and the TIMER lamp of the indoor unit lights.
- If the  (SLEEP) button is pressed while the ON/OFF timer is programmed, the sleep timer takes priority.
- During sleep timer operation, the fan speed sets to  (LOW) regardless of the preset speed. The remote controller display indication will remain unchanged even with the  (LOW) setting.




REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS EVERY EITHER HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT SHOULD YOU NEED ANY HELP.

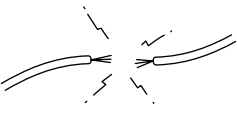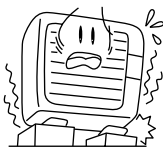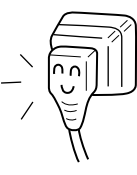1		WARNING	Check to see if the unit's earth line has been connected correctly. If the earth line is disconnected or faulty, unit failure or electric shock hazard may result.
2		WARNING	Check to see if the mounting frame has rusted excessively or if the outdoor unit has tilted or become unstable. It could collapse or fall, causing injury.
3		WARNING	Check to see if the power plug is securely inserted into the wall socket. If the power plug is not inserted into the wall socket securely or becomes hot, an electric shock or fire may result. If dust or dirt is found on the power plug, clean the plug and insert it into the wall socket.

AFTER SALES SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

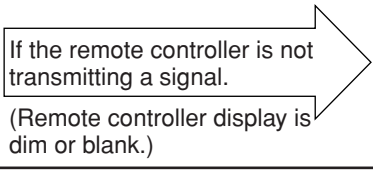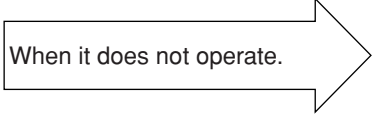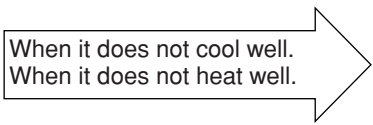CONDITION	CHECK THE FOLLOWING POINTS
 <p>If the remote controller is not transmitting a signal. (Remote controller display is dim or blank.)</p>	<ul style="list-style-type: none"> Do the batteries need replacement? Is the polarity of the inserted batteries correct?
 <p>When it does not operate.</p>	<ul style="list-style-type: none"> Is the fuse all right? Is the voltage extremely high or low? Is the circuit breaker "ON"? Is the power plug inserted? Do you have any power cut?
 <p>When it does not cool well. When it does not heat well.</p>	<ul style="list-style-type: none"> Is the air filter blocked with dust? Is the set temperature suitable? Have horizontal air deflectors been adjusted to their correct positions according to the operation mode selected? Are the air inlets or air outlets of indoor and outdoor units blocked? Is the fan speed "LOW"?

■ The following phenomena do not indicate unit failure.

During heating, the operation indicator blinks and air blow stops	<Operation start> The unit is preparing to blow warm air. Please wait. <In operation> The outdoor unit is defrosting. Please wait.
Hissing or fizzy sounds	Refrigerant flow noise in the pipe or valve sound generated when flow rate is adjusted.
Squeaking noise	Noise generated when the unit expands or contracts due to temperature changes.
Rustling noise	Noise generated with the indoor unit fan's rpm changing such as operation start times.
Clicking noise	Noise of the motorized valve when the unit is switched on.



Perking noise	Noise of the ventilation fan sucking in air present in the drain hose and blowing out dehumidifying water that had accumulated in the condensed water collector. For details, consult your sales agent.
Changing operation noise	Operation noise changes due to power variations according to room temperature changes.
Mist emission	Mist is generated as the air within the room is suddenly cooled by conditioned air.
Steam emitted from the outdoor unit	Water generated during defrosting operation evaporates and steam is emitted.
Odors	Caused as the smells and particles of smoke, food, cosmetics, etc. present in room air become attached the unit and blown off into the room again.
The outdoor unit continues to operate even if operation is stopped.	Defrosting is underway (as the heating operation is stopped, the microcomputer checks frost accumulated in the outdoor unit and instructs the unit to perform automatic defrosting if necessary).
The OPERATION lamp is blinking.	Shows preheating or defrosting operation is underway. As the protective circuit or preheat sensor operates when unit operation is stopped during preheating and then restarted, or when operation mode is switched from cooling to heating, the lamp continues to blink.
Does not reach the temperature setting	Actual room temperature may deviate slightly from the remote controller's temperature setting depending on the number of people in the room, indoor or outdoor conditions.

- If the unit still fails to operate normally after performing the above inspections, turn the circuit breaker off, or pull the power plug out, and contact your sales agent immediately.

Contact your sales agent immediately if the following phenomena should occur:

- The circuit breaker switches off or the fuse blows frequently.
- The switch operation is not stable.
- Foreign matter or water accidentally enters the unit interior.
- The power cord gets excessively hot or its insulation is torn or stripped.
- TIMER lamp on the indoor unit display blinks.



(As the nature of the failure can be identified by the blinking cycle, check the blinking cycle before turning off the circuit breaker.)



Notes

- In quiet operation or stopping the running, the following phenomena may occasionally occur, but they are not abnormal for the operation.
 - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
 - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So please clean the air filter and the evaporator regularly to reduce the odor.

- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.

Please note:

On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.


The conditions of the local Power Supply Companies are to be observed.



CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAS-25YH4, RAS-35YH4

INDOOR UNIT

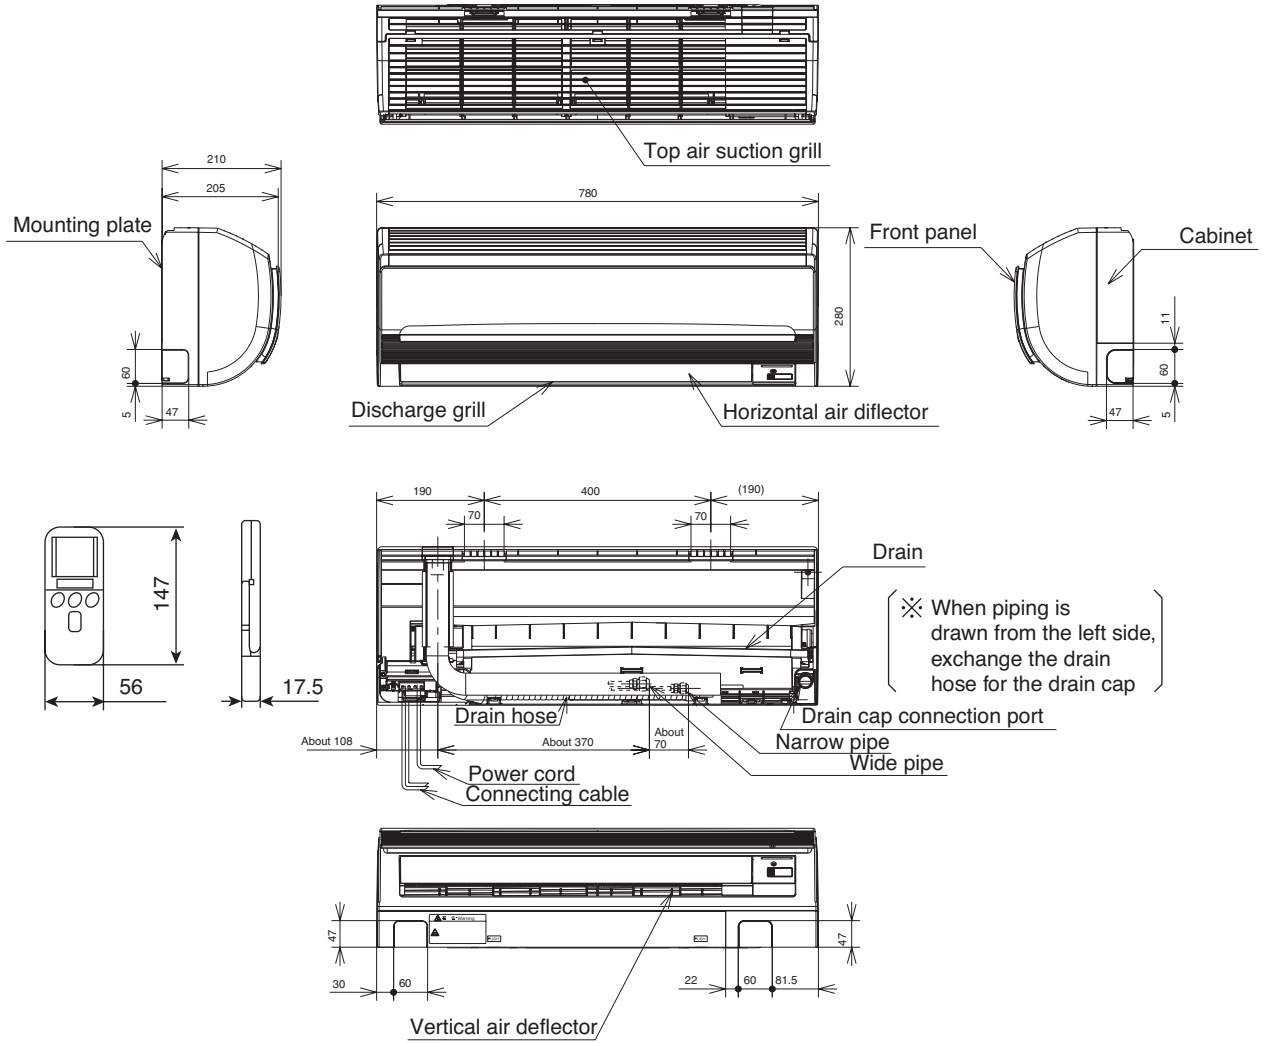




CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAC-25YH4, RAC-35YH4

OUTDOOR UNIT

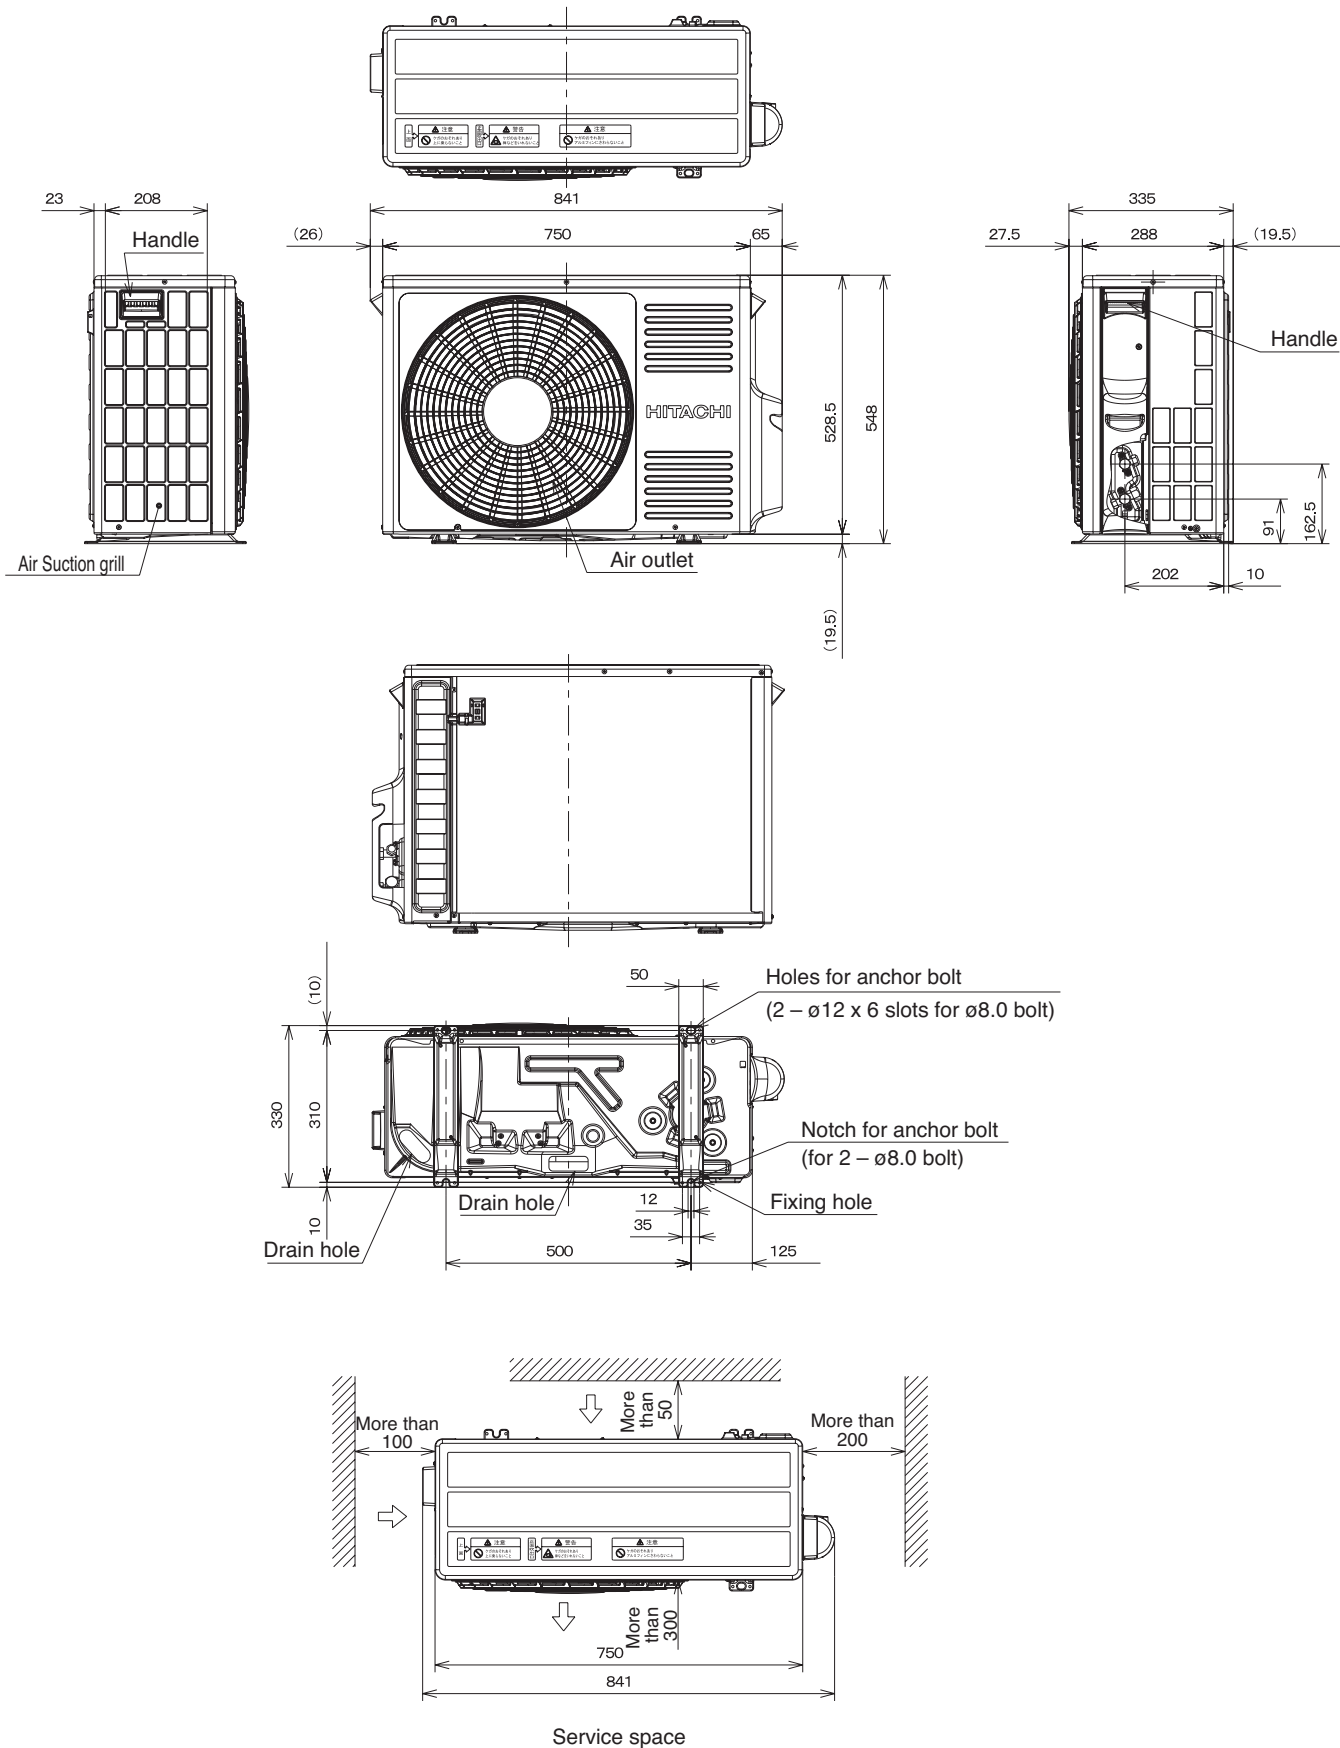

MAIN PARTS COMPONENT



THERMOSTAT

Thermostat Specifications

MODEL			RAS-25YH4, RAS-35YH4	
THERMOSTAT MODEL			IC	
OPERATION MODE			COOL	HEAT
TEMPERATURE °C (°F)	INDICATION 16	ON	16.7 (62.1)	18.7 (65.7)
		OFF	16.0 (60.8)	19.3 (66.7)
	INDICATION 24	ON	24.7 (76.5)	26.7 (80.1)
		OFF	24.0 (75.2)	27.3 (81.1)
	INDICATION 32	ON	32.7 (90.9)	34.7 (94.5)
		OFF	32.0 (89.6)	35.3 (95.5)

FAN MOTOR

Fan Motor Specifications

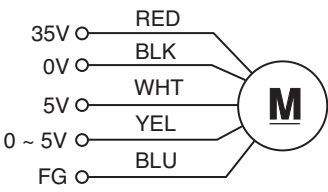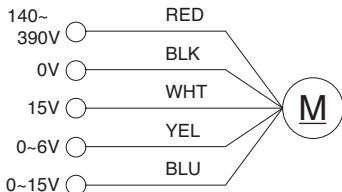MODEL	RAS-25YH4, RAS-35YH4	RAC-25YH4, RAC-35YH4
POWER SOURCE	DC 5V, 35V	DC 140 ~ 350V
OUTPUT	25W	40W
CONNECTION	 <p>(Control circuit built in)</p>	

BLU : BLUE
GRY : GRAY
BLK : BLACK

YEL : YELLOW
ORN : ORANGE
PNK : PINK

BRN : BROWN
GRN : GREEN
VIO : VIOLET


WHT : WHITE
RED : RED


MAIN ELECTRIC COMPONENTS FOR OUTDOOR UNIT

NAME	RATING	APPLICABLE MODELS
REVERSING VALVE COIL	135 Ω (20 °C)	RAC-25YH4, 35YH4
REACTOR L1	13 (mH), 0.224 Ω	RAC-25YH4, 35YH4
REACTOR L2	25.5 (mH), 0.37 Ω	RAC-25YH4, 35YH4
FILM CAPACITOR	45 (F)	RAC-25YH4, 35YH4

COMPRESSOR MOTOR

Compressor Motor Specifications

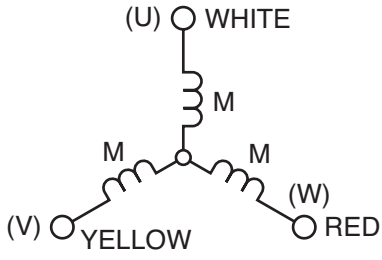ITEM		MODEL	RAC-25YH4, RAC-35YH4
COMPRESSOR TYPE			EU1011DF
POWER SOURCE			DC 270 ~ 320 V
OUTPUT			800W
WINDING			
RESISTANCE (Ω)	25°C		U-V 1.090 U-W 1.090 W-U 1.090

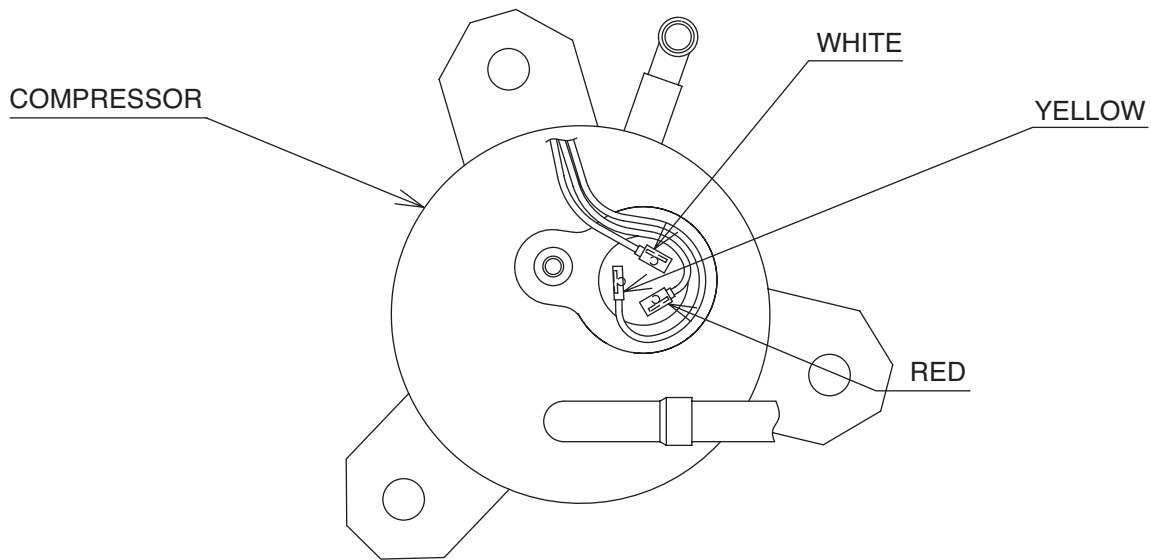


FRONT SIDE OF OUTDOOR UNIT

CAUTION


When the refrigerating cycle has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerating machine oil inside the compressor. If the color has been changed conspicuously, replace the compressor.

WIRING DIAGRAM

MODEL RAS-25YH4/RAC-25YH4
RAS-35YH4/RAC-35YH4

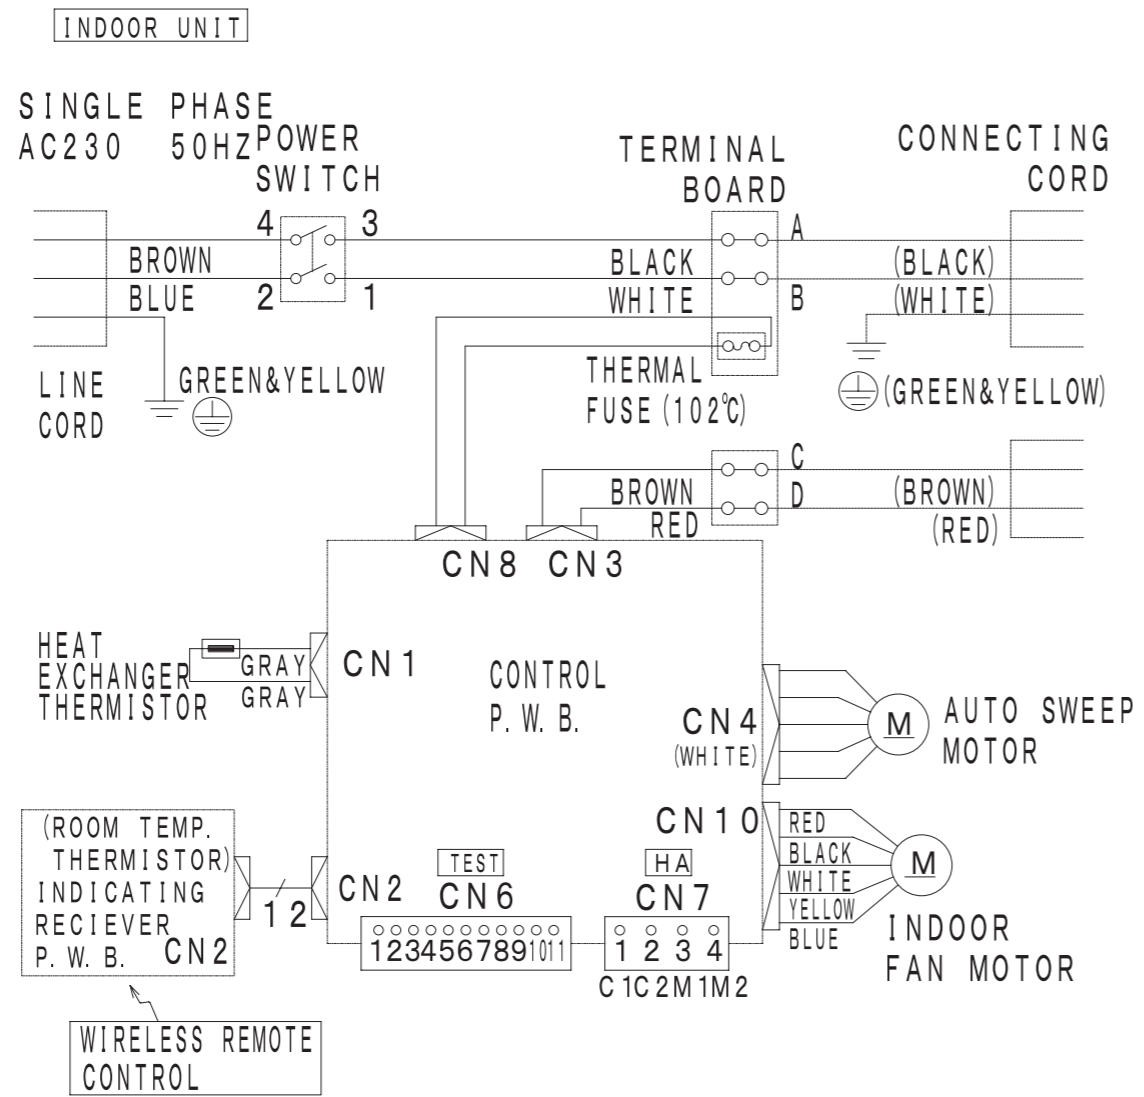


OUTDOOR UNIT

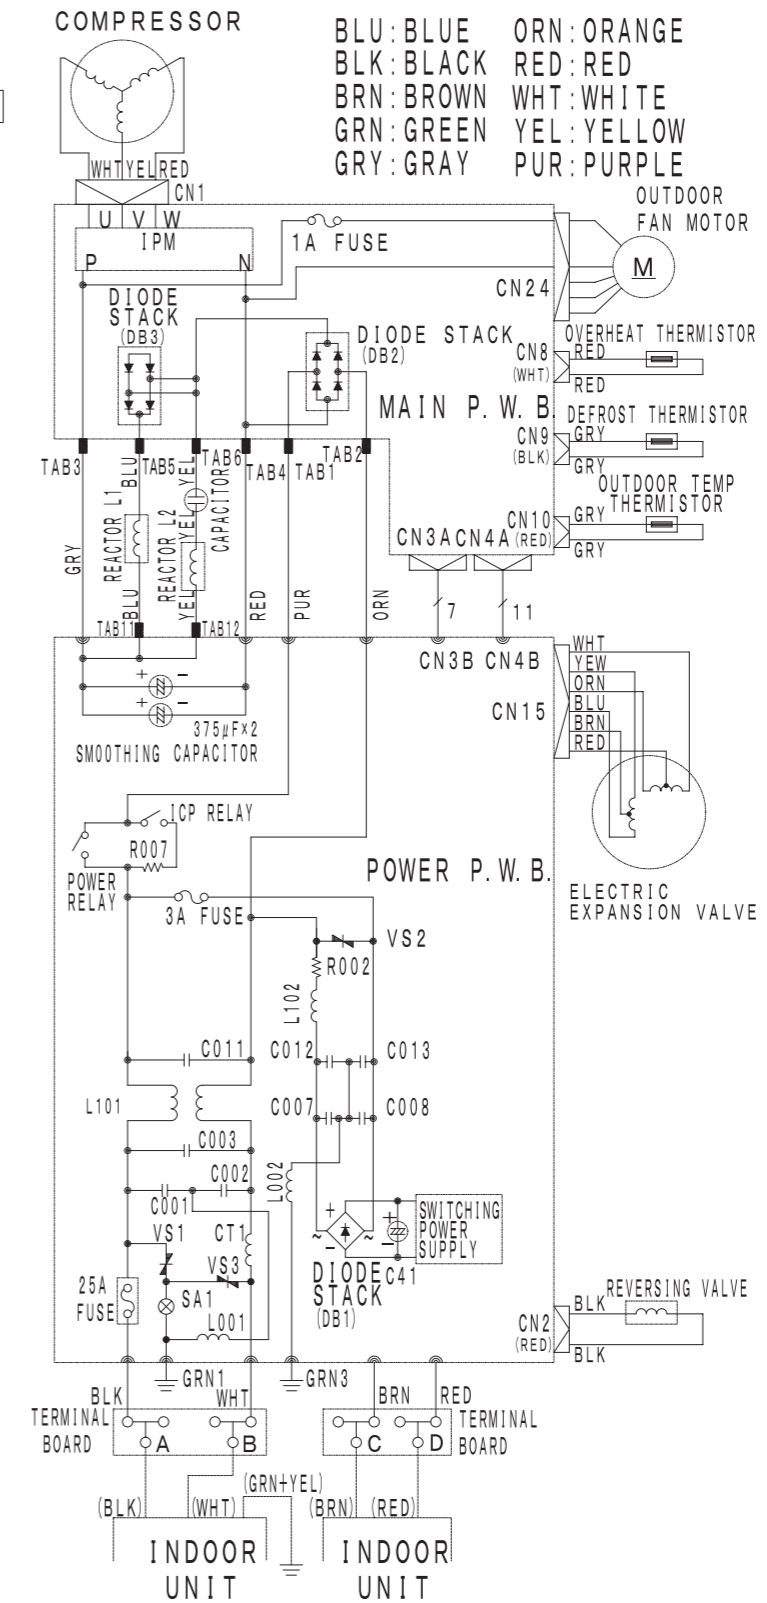



CIRCUIT DIAGRAM


Remote Control

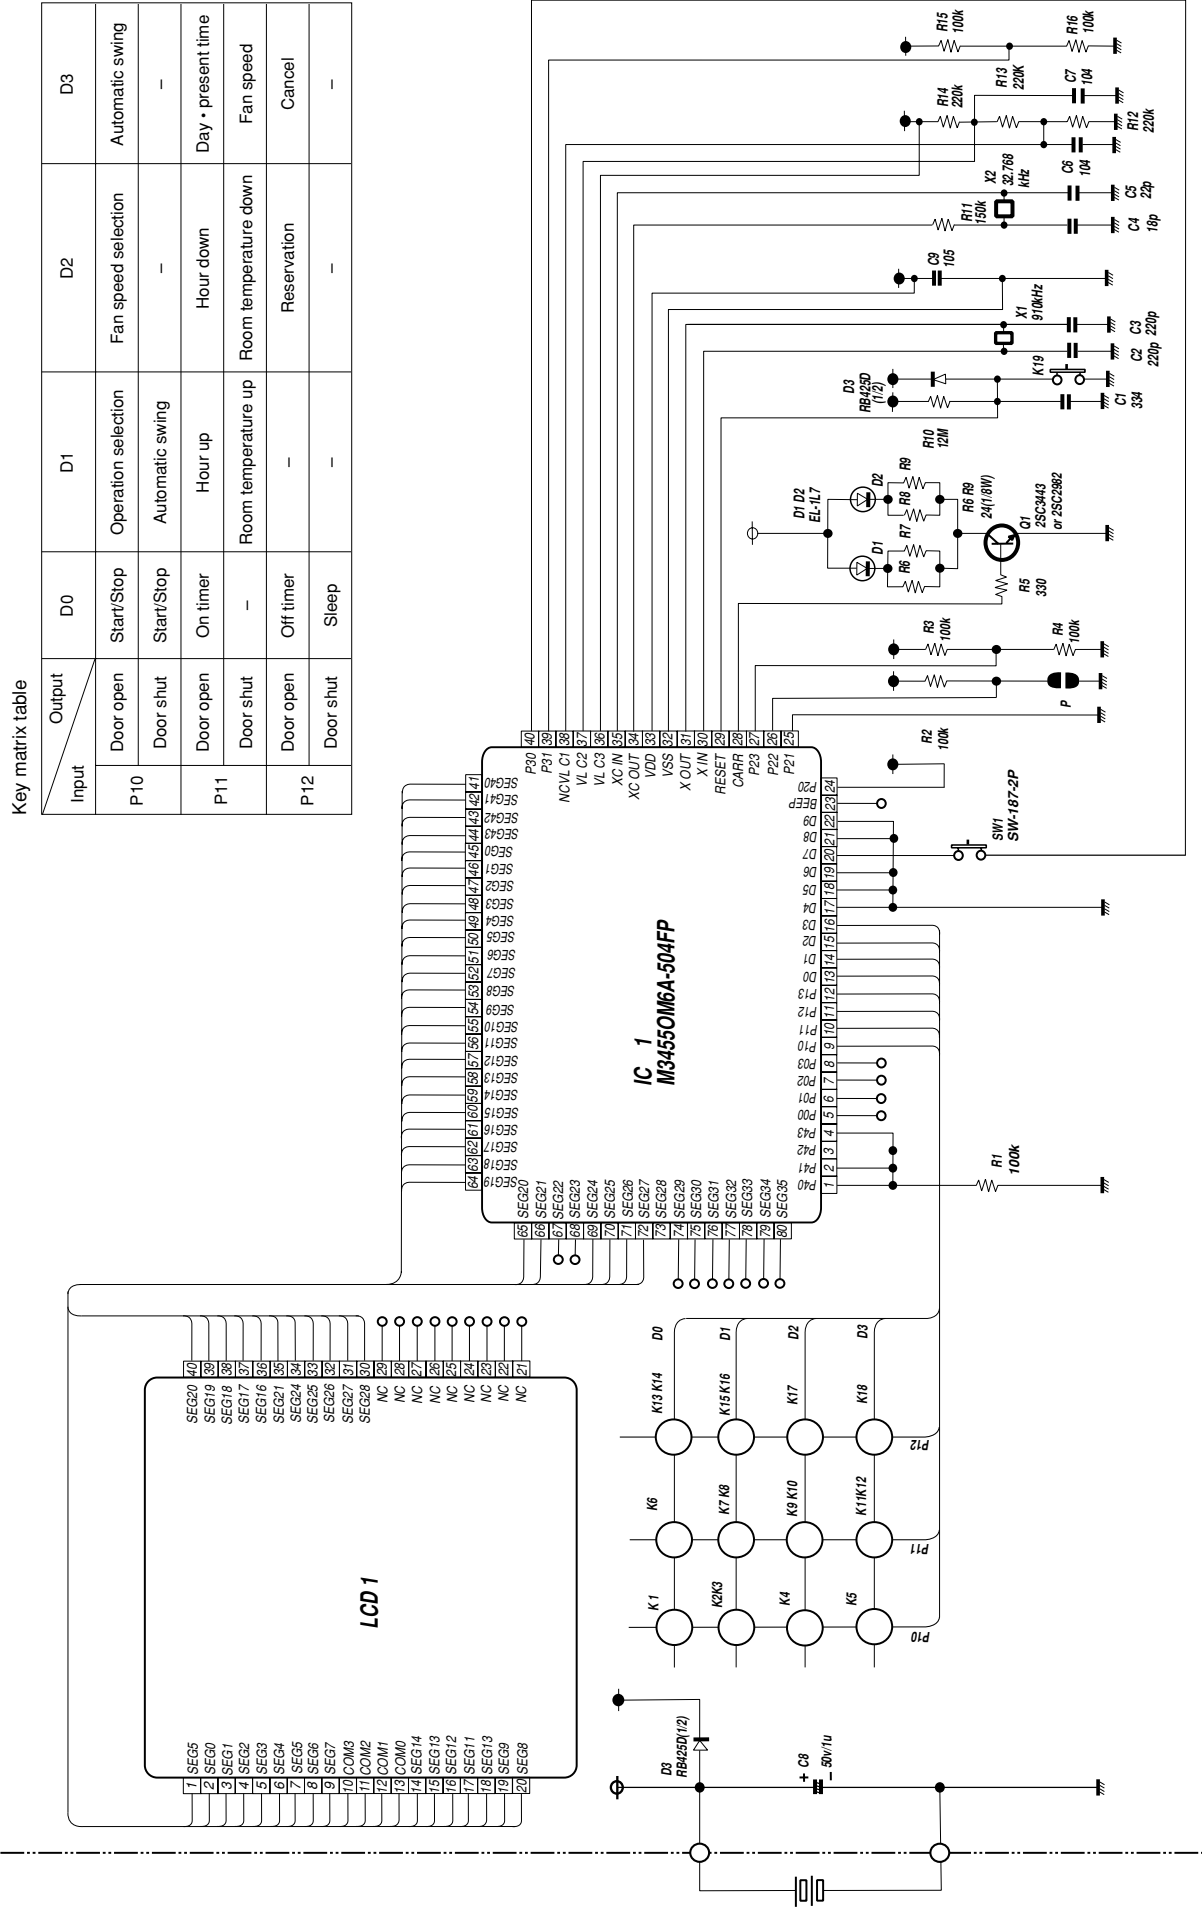

Key matrix table

Input	Output			
	D0	D1	D2	D3
P10	Start/Stop	Operation selection	Fan speed selection	Automatic swing
P11	Door shut	Automatic swing	Hour down	Day · present time
	Door open	Hour up	Room temperature down	Fan speed
P12	Door shut	Room temperature up	Reservation	Cancel
	Door open	Off timer	—	—
Door shut	Sleep	—	—	—



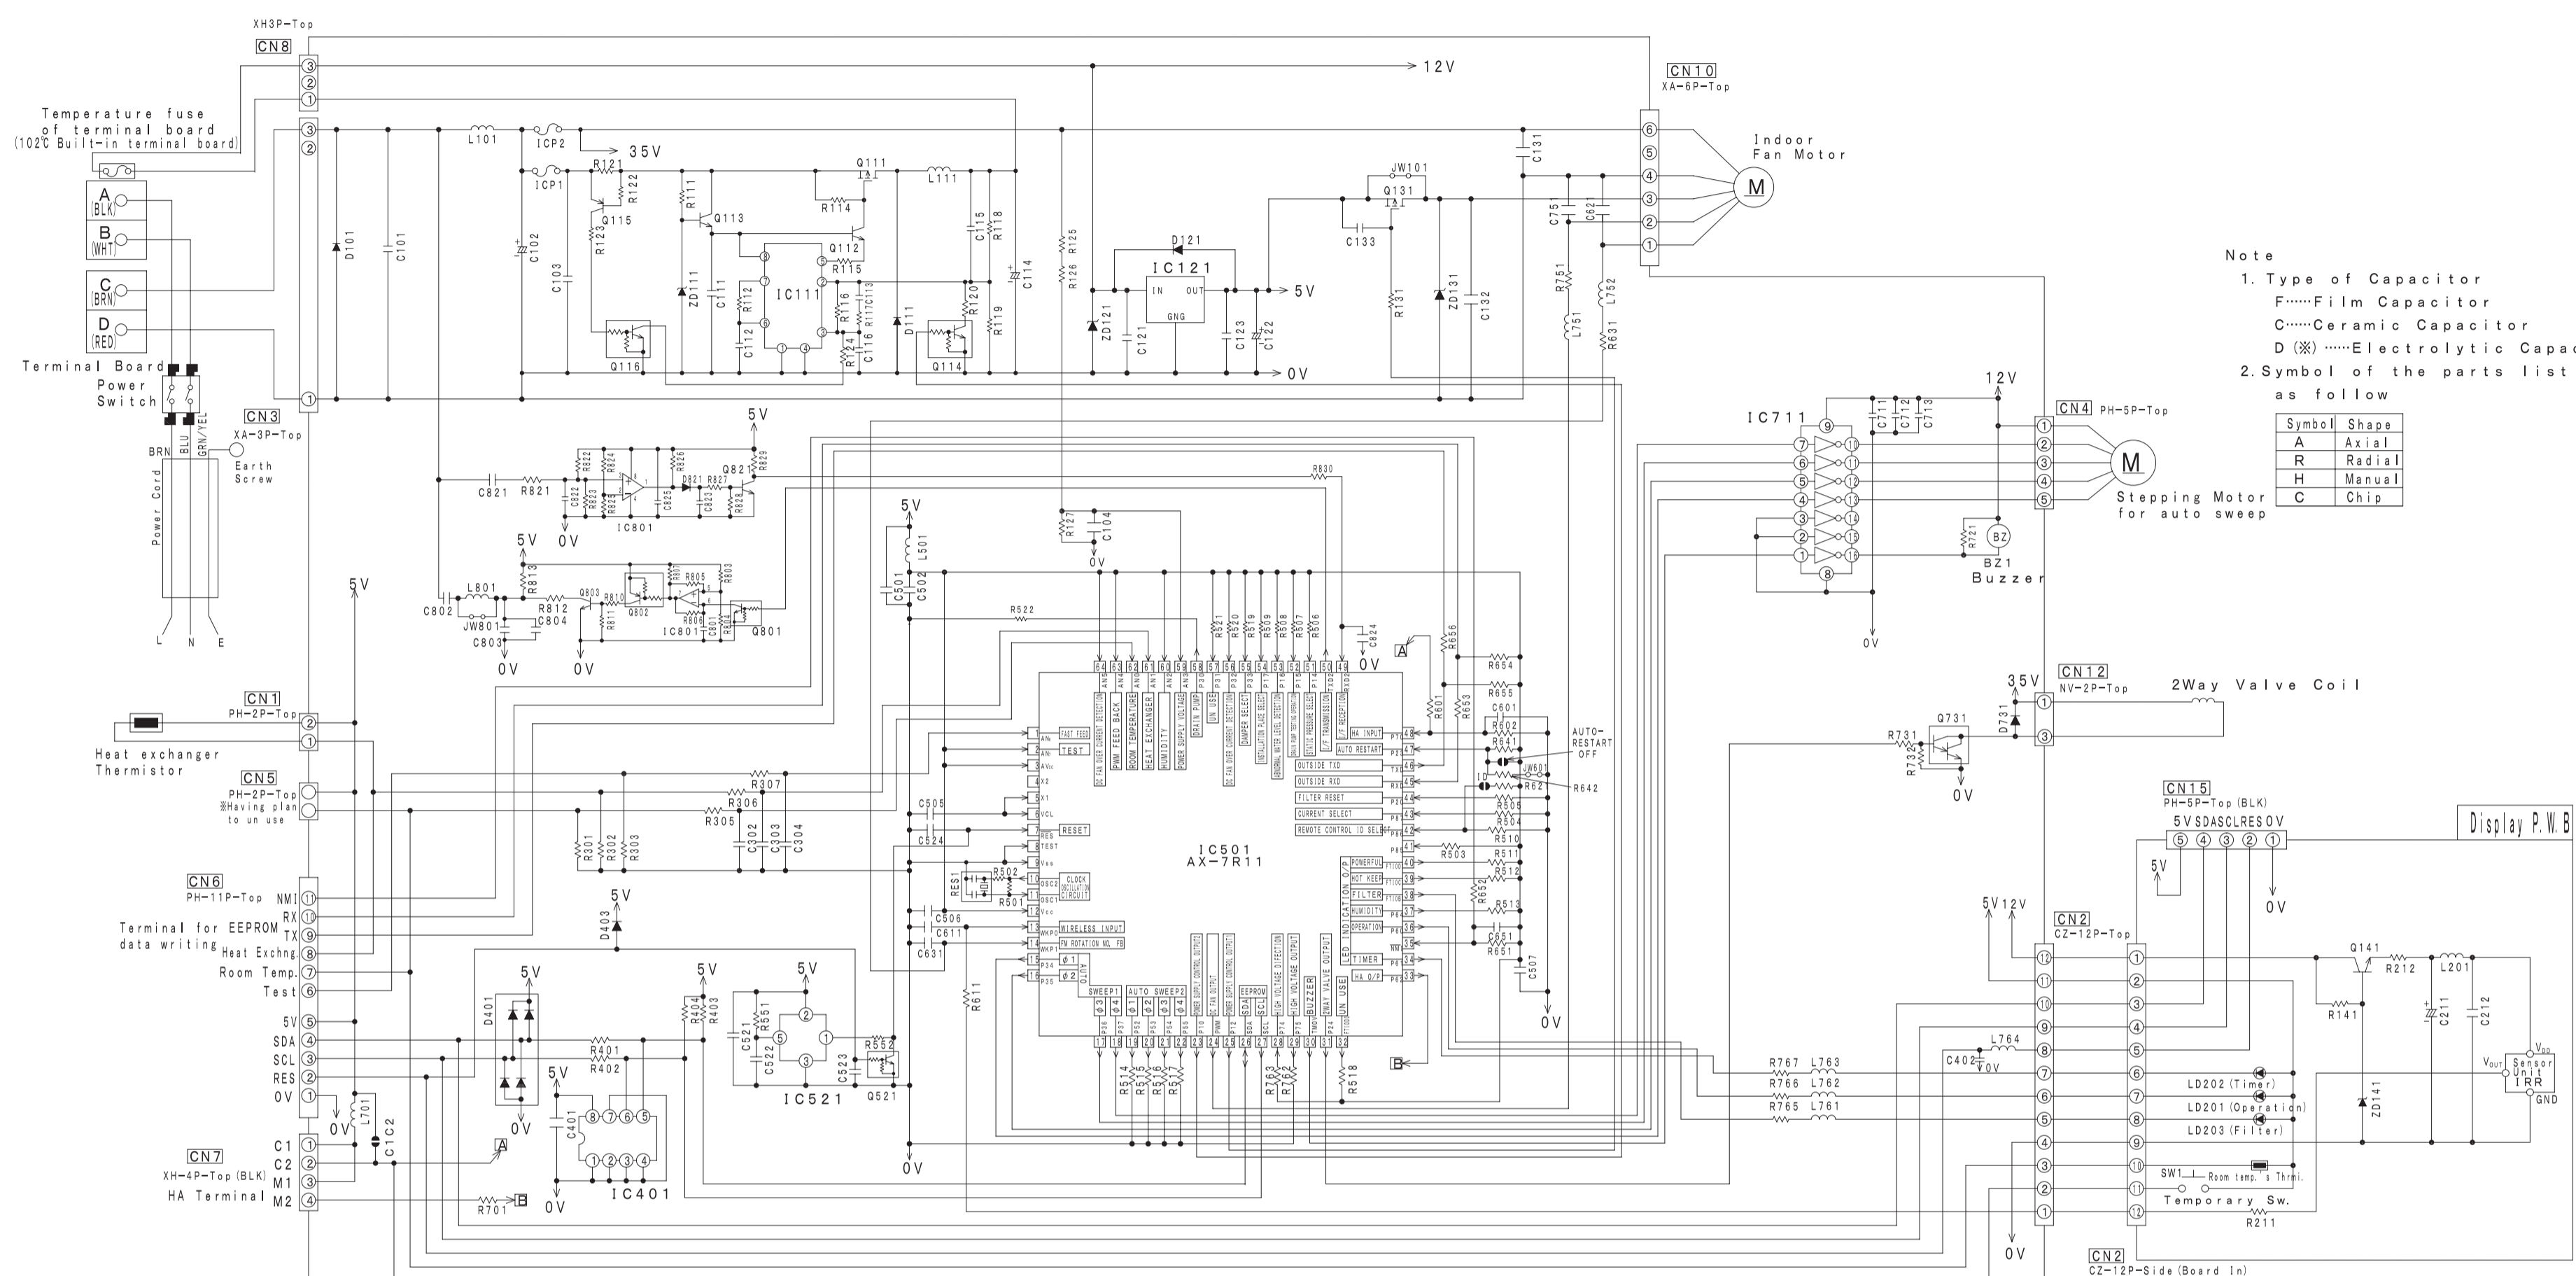

Note

- Type of Capacitor
 F.....Film Capacitor
 C.....Ceramic Capacitor
 D (⊗).....Electrolytic Capacitor
- Symbol of the parts list is as follow

Symbol	Shape
A	Axial
R	Radial
H	Manual
C	Chip

RESISTOR

Circuit's Symbol	Numerical Value (Ω)	Component Value (Ω)	Power (W)	Drawing's part's No.	Shape
R111	2.7K	±5%	1/16W	014	C
R112	30K	±5%	1/16W	015	C
R114	750	±5%	1/8W	010	C
R115	560	±5%	1/8W	011	C
R116	-	-	-	-	-
R117	68K	±5%	1/8W	024	C
R118	75K	±2%	1/8W	021	C
R119	6.8K	±2%	1/8W	022	C
R121	0.56	±5%	1/4W	008	C
R122	100	±5%	1/8W	042	C
R123	33K	±5%	1/8W	043	C
R124	100	±5%	1/8W	042	C
R125	30K	±5%	1/8W	039	C
R126	30K	±5%	1/8W	039	C
R127	5.1K	±5%	1/8W	040	C
R131	5.1K	±5%	1/8W	030	C
R141	2.7K	±5%	1/8W	015	C
R211	1K	±5%	1/8W	033	C
R212	47	±5%	1/8W	018	C
R213	10K	±5%	1/8W	033	C
R214	10K	±5%	1/8W	033	C
R215	10K	±5%	1/8W	033	C
R216	10K	±5%	1/8W	033	C
R217	10K	±5%	1/8W	033	C
R218	10K	±5%	1/8W	033	C
R219	10K	±5%	1/8W	033	C
R220	10K	±5%	1/8W	033	C
R221	10K	±5%	1/8W	033	C
R222	10K	±5%	1/8W	033	C

Capacitor

Circuit's Symbol	Numerical Value (F)	Component Value (F)	Power (W)	Drawing's part's No.	Shape
C101	0.22μ	±5%	50V	001	R
C102	220μ	±5%	50V	005	R
C103	470μ	±5%	63V	001	C
C104	0.1μ	±5%	25V	045	C
C111	2.2μ	±5%	10V	058	C
C112	1000p	±5%	50V	047	C
C113	0.047μ	±5%	25V	058	C
C114	220μ	±5%	25V	066	R
C115	-	-	-	-	-
C116	-	-	-	-	-
C121	0.1μ	±5%	25V	045	C
C122	100μ	±5%	10V	058	R
C123	0.1μ	±5%	25V	045	C
C131	0.22μ	±5%	50V	046	C
C132	0.1μ	±5%	25V	045	C
C133	0.1μ	±5%	25V	045	C
C211	47μ	±5%	16V	069	R
C212	1μ	±5%	16V	049	C
C302	0.1μ	±5%	25V	045	C
C303	0.1μ	±5%	25V	045	C
C304	0.1μ	±5%	25V	045	C
C401	0.1μ	±5%	25V	045	C
C402	-	-	-	-	-

Transistor

Circuit's Symbol	Model	Drawing's part's No.	Shape
Q111	2S1519	076	C
Q112	2SC5209H	074	C
Q113	2SC5209H	074	C
Q114	RN1102	078	C
Q115	2SA1162Y	079	C
Q116	RN1102	078	C
Q131	-	-	-
Q141	2SC2462LC	071	C
Q521	RN1102	078	C
Q731	-	-	-

Diode

Circuit's Symbol	Model	Drawing's part's No.	Shape
D101	DSM3MA2	091	C
D111	D1FS6	092	C
D121	1SS355	095	C
D401	HN1DD3FU	093	C
D731	-	-	-
D821	1SS355	095	C

IC

Circuit's Symbol	Model	Drawing's part's No.	Shape
IC111	NJM2340M	082	C
IC121	LF60CDT	083	C
IC401	S-24C04BFJ	084	C
IC501	H0643866420H (AX-7R11)	087	C
IC521	RNEVD42C	089	C
IC711	ULN2003ANS	090	C
IC801	NJM2903M	085	C

Coil

Circuit's Symbol	Numerical Value (H)	Rating (V)	Current (A)	Drawing's part's No.	Shape
L101	82μ	1.3A	112	H	
L111	560μ	0.6A	113	H	
L201	300μH	0.2A	110	C	
L501	1800μ	-	025	C	
L701	BLM1040S1	0.2A	110	C	
L751	1608CJ	-	025	C	
L762	1608CJ	-	025	C	
L763	1608CJ	-	025	C	
L764	1608CJ	-	025	C	
L801	100μ	55mA	111	C	

Connector

Circuit's Symbol	Model	Drawing's part's No.	Shape
CN1	PH-2P-Top	116	H
CN2	CZ-12P-Top	117	H
CN3	XA-2P-Top	118	H
CN4	PH-5P-Top	119	H
CN5	PH-3P-Top (on use)	-	-
CN6	PH-11P-Top	120	H
CN7	XH-4P-Top (BLK)	121	H
CN8	XH-3P-Top	125	H
CN10	XA-6P-Top	122	H
CN12	-	-	-
CN15	PH-5P-Top (BLK)	124	H

LED

Circuit's Symbol	Model	Drawing's part's No.	Shape
LD201	HLMF-K305	133	H
LD202	HLMF-K405	134	H
LD203	HLMF-K505	135	H

Jumper

Circuit's Symbol	Use/Don't Use	Drawing's part's No.	Shape
JW101	Use	1608	-
JW601	Use	1608	-
JW801	-	1608	-

Over Current Protector

Circuit's Symbol	Model	Rating (A)	Drawing's part's No.	Shape
ICP1	OPPE-50	0.8A	103	C
ICP2	OPPE-50	2.0A	104	C

LED

Circuit's Symbol	Model	Drawing's part's No.	Shape
LD201	HLMF-K305	133	H
LD202	HLMF-K405	134	H
LD203	HLMF-K505	135	H

Oscillator

Circuit's Symbol	Model	Drawing's part's No.	Shape	
RES1	OST1510M055	10MHz	107	R

Buzzer



Circuit's Symbol	Model	Drawing's part's No.	Shape
BZ1	PKM13EPV	137	H


Switch

Circuit's Symbol	Model	Drawing's part's No.	Shape
SW1	EVQ07K-SW	132	H

Zener Diode

Circuit's Symbol	Model	Rating (V)	Drawing's part's No.	Shape
ZD111	RD6.2UJN2	10.1	C	
ZD121	PT220A	098	C	
ZD131	RL26.8A	099	C	
ZD141	RD5.6UJN2	10.0	C	



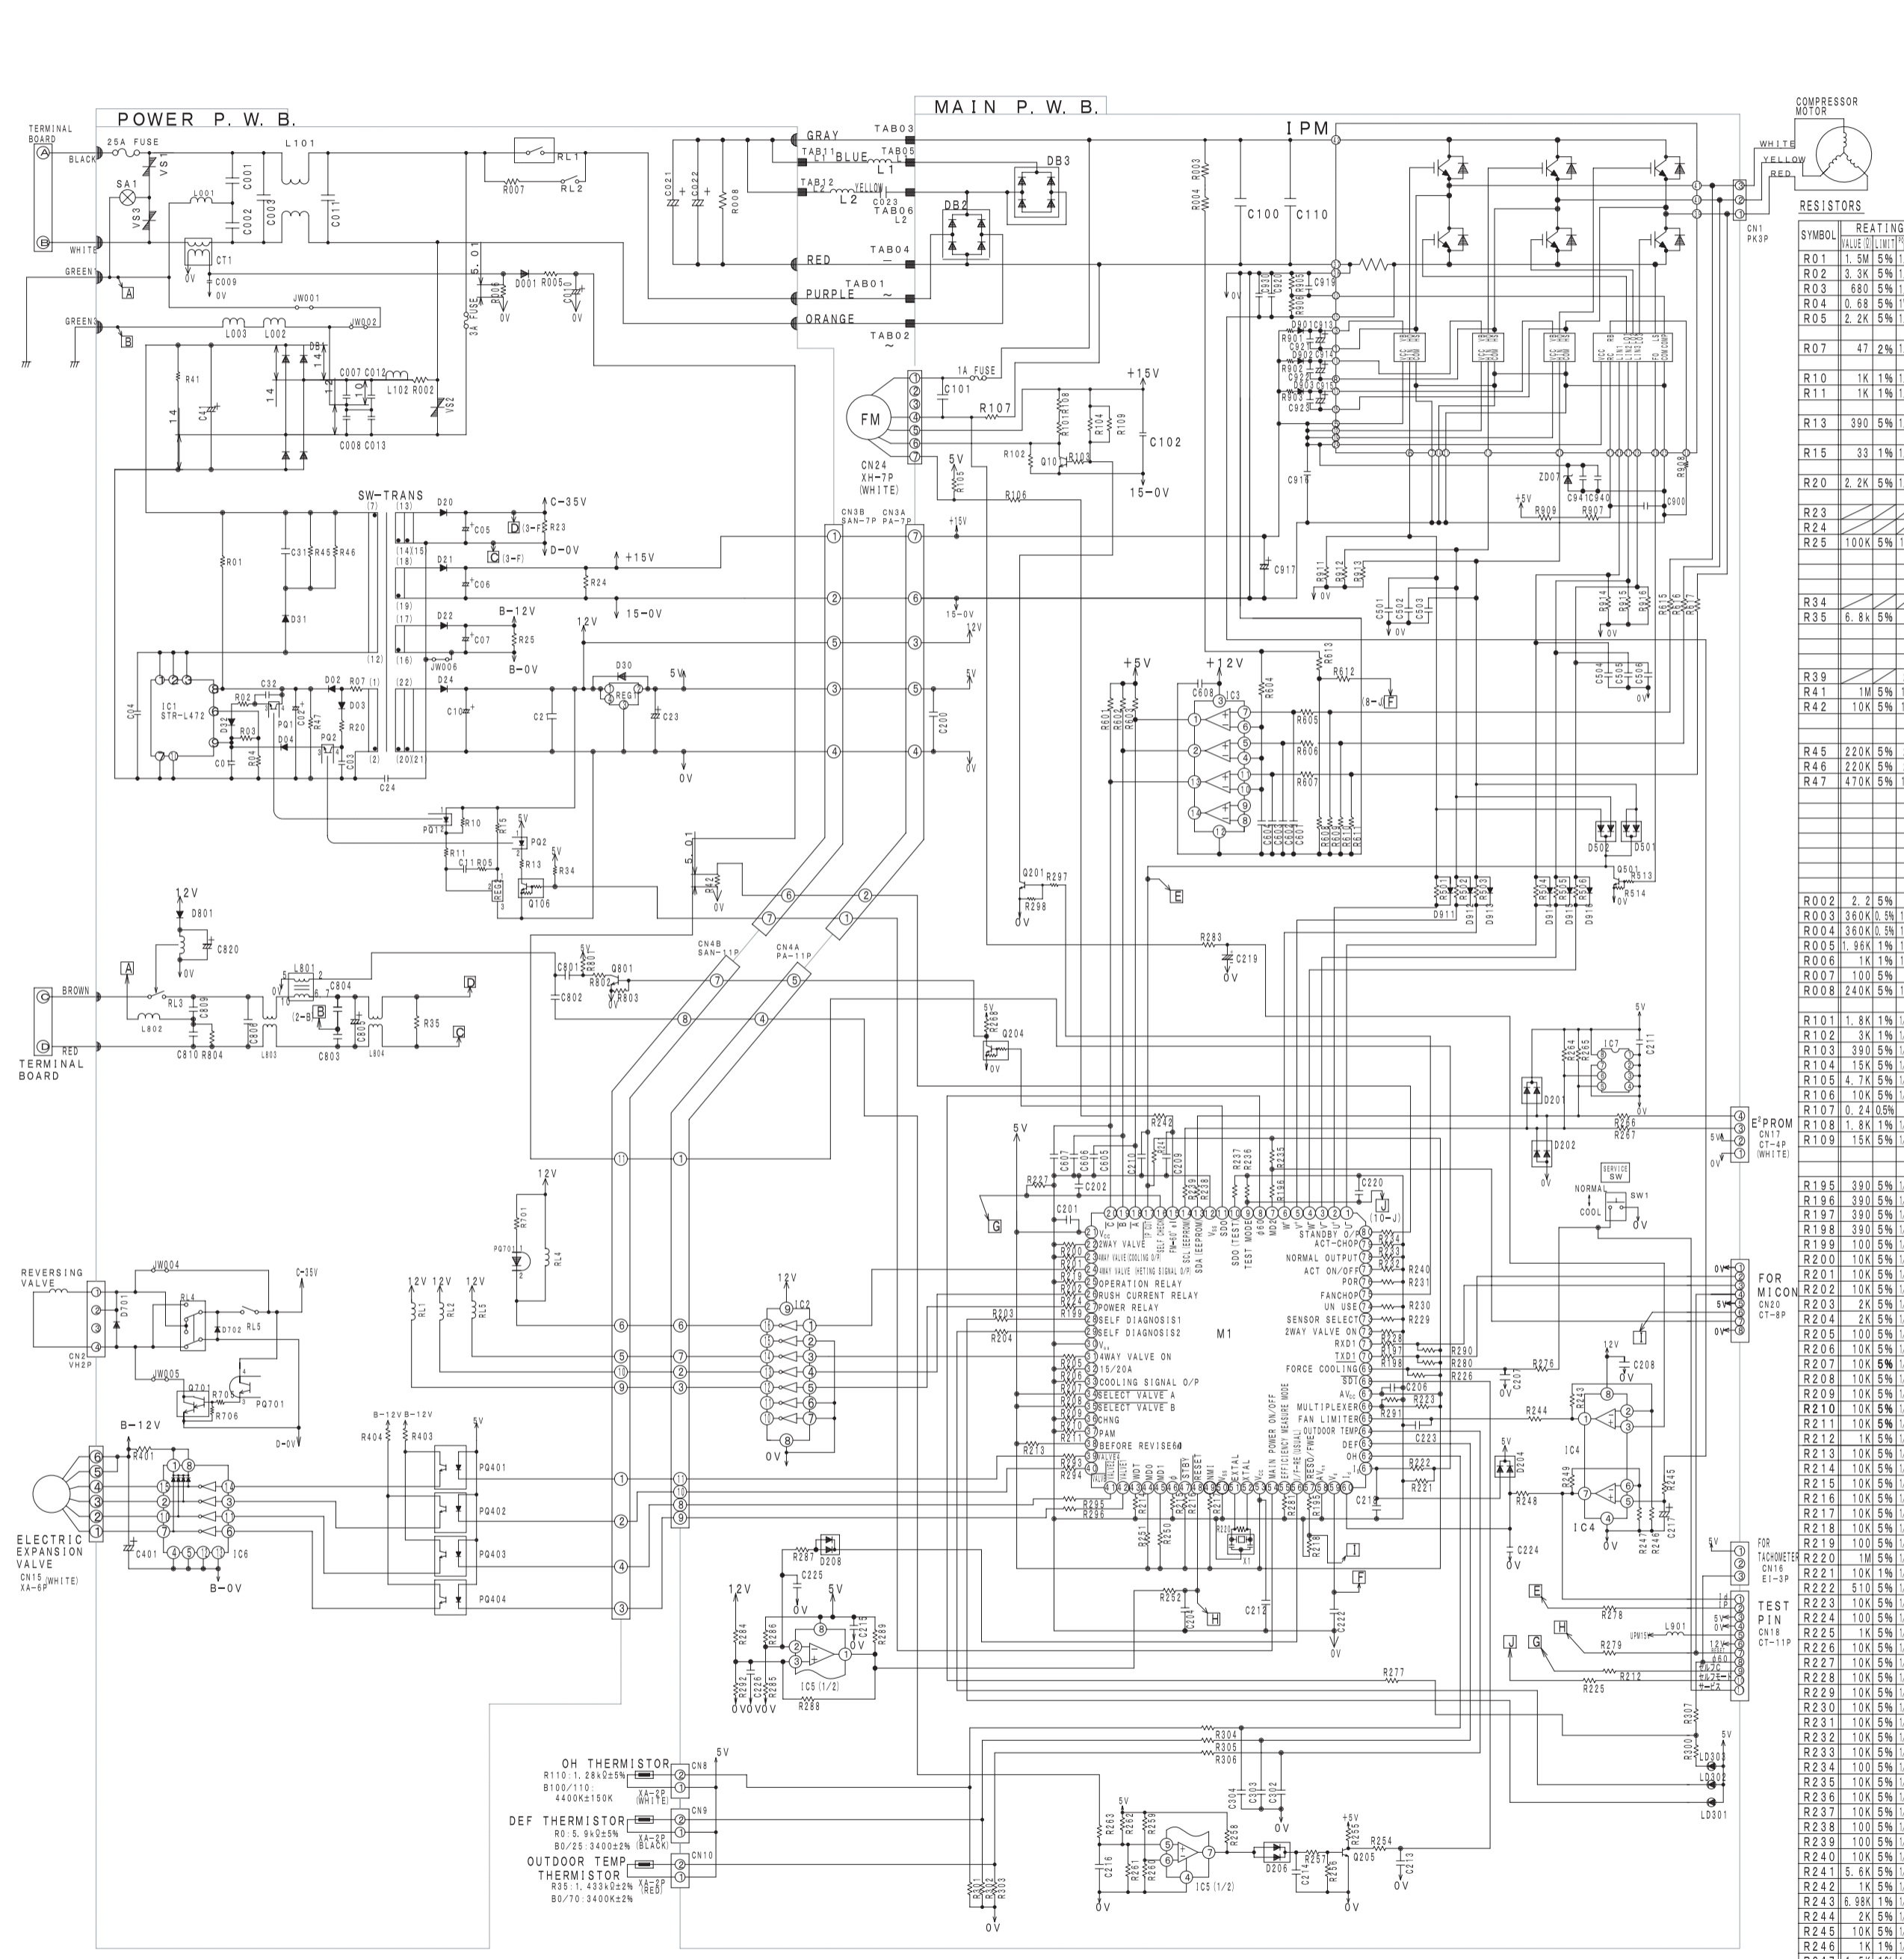

MOUNTING BOARD
 A: AXIAL BOARD P: POWER P. W. B.
 R: RADIAL M: MAIN P. W. B.
 H: MANUAL INSERT C: CHIP SMT
 S: OTHER SMT

CAPACITOR TYPE
 C: CERAMIC F: FILM
 D: ELECTROLYTIC

RESISTORS

SYMBOL	RATING	W	RES
R01	1.5K 5%	1/4 A	P
R02	3.3K 5%	1/4 A	P
R03	680 5%	1/4 A	P
R04	0.68 5%	1/4 A	P
R05	2.2K 5%	1/4 A	P
R07	47 2%	1/4 A	P
R10	1K 1%	1/4 A	P
R11	1K 1%	1/4 A	P
R13	390 5%	1/4 A	P
R15	33 1%	1/4 A	P
R20	2.2K 5%	1/4 A	P
R23	10K 5%	1/4 A	P
R24	10K 5%	1/4 A	P
R25	100K 5%	1/4 A	P
R34	10K 5%	1/4 A	P
R35	6.8K 5%	1/4 A	P
R39	10K 5%	1/4 A	P
R41	1M 5%	1/4 A	P
R42	10K 5%	1/4 A	P
R45	220K 5%	1/4 A	P
R46	220K 5%	1/4 A	P
R47	470K 5%	1/4 A	P
R002	2.2 5%	3 H	P
R003	390K 5%	1/4 A	M
R004	390K 5%	1/4 A	M
R005	1.5K 5%	1/4 A	M
R006	1K 1%	1/4 A	M
R007	100 5%	1/4 A	M
R008	240K 5%	1/4 A	M
R101	1.8K 1%	1/4 A	M
R102	3K 1%	1/4 A	M
R103	390 5%	1/4 A	M
R104	15K 5%	1/4 A	M
R105	4.7K 5%	1/4 A	M
R106	10K 5%	1/4 A	M
R107	0.24 5%	1/4 A	M
R108	1.8K 1%	1/4 A	M
R109	15K 5%	1/4 A	M
R195	390 5%	1/4 A	M
R196	390 5%	1/4 A	M
R197	390 5%	1/4 A	M
R198	390 5%	1/4 A	M
R199	100 5%	1/4 A	M
R200	10K 5%	1/4 A	M
R201	10K 5%	1/4 A	M
R202	10K 5%	1/4 A	M
R203	2K 5%	1/4 A	M
R204	2K 5%	1/4 A	M
R205	2K 5%	1/4 A	M
R206	2K 5%	1/4 A	M
R207	100 5%	1/4 A	M
R208	100 5%	1/4 A	M
R209	100 5%	1/4 A	M
R210	10K 5%	1/4 A	M
R211	10K 5%	1/4 A	M
R212	1K 5%	1/4 A	M
R213	10K 5%	1/4 A	M
R214	10K 5%	1/4 A	M
R215	390K 5%	1/4 A	M
R216	10K 5%	1/4 A	M
R217	10K 5%	1/4 A	M
R218	10K 5%	1/4 A	M
R219	100 5%	1/4 A	M
R220	1M 5%	1/4 A	M
R221	10K 5%	1/4 A	M
R222	510 5%	1/4 A	M
R223	10K 5%	1/4 A	M
R224	10K 5%	1/4 A	M
R225	1K 5%	1/4 A	M
R226	10K 5%	1/4 A	M
R227	10K 5%	1/4 A	M
R228	10K 5%	1/4 A	M
R229	10K 5%	1/4 A	M
R230	100 5%	1/4 A	M
R231	10K 5%	1/4 A	M
R232	10K 5%	1/4 A	M
R233	10K 5%	1/4 A	M
R234	100 5%	1/4 A	M
R235	10K 5%	1/4 A	M
R236	10K 5%	1/4 A	M
R237	10K 5%	1/4 A	M
R238	100 5%	1/4 A	M
R239	100 5%	1/4 A	M
R240	10K 5%	1/4 A	M
R241	5.6K 5%	1/4 A	M
R242	1K 5%	1/4 A	M
R243	5.6K 5%	1/4 A	M
R244	2K 5%	1/4 A	M
R245	10K 5%	1/4 A	M
R246	1K 1%	1/4 A	M
R247	1.5K 1%	1/4 A	M

RESISTORS



SYMBOL	RATING	W	RES
R248	2K 5%	1/4 A	M
R249	20K 1%	1/4 A	M
R250	10K 5%	1/4 A	M
R251	10K 5%	1/4 A	M
R252	1K 5%	1/4 A	M
R254	100 5%	1/4 A	M
R255	2K 5%	1/4 A	M
R256	10K 5%	1/4 A	M
R257	3K 5%	1/4 A	M
R258	1K 5%	1/4 A	M
R259	5.6K 1%	1/4 A	M
R260	10K 1%	1/4 A	M
R261	10K 1%	1/4 A	M
R262	10K 1%	1/4 A	M
R263	1K 5%	1/4 A	M
R264	5.1K 5%	1/4 A	M
R265	390 5%	1/4 A	M
R267	390 5%	1/4 A	M
R268	2K 5%	1/4 A	M
R276	100 5%	1/4 A	M
R277	100 5%	1/4 A	M
R278	100 5%	1/4 A	M
R279	100 5%	1/4 A	M
R280	10K 5%	1/4 A	M
R281	10K 5%	1/4 A	M
R283	10K 5%	1/4 A	M
R284	10K 2%	1/4 A	M
R285	4.7K 2%	1/4 A	M
R286	5.1K 2%	1/4 A	M
R287	1.8K 2%	1/4 A	M
R288	5.1K 5%	1/4 A	M
R289	1K 5%	1/4 A	M
R290	10K 5%	1/4 A	M
R291	10K 5%	1/4 A	M
R292	3K 2%	1/4 A	M
R293	390 5%	1/4 A	M
R294	390 5%	1/4 A	M
R295	390 5%	1/4 A	M
R296	390 5%	1/4 A	M
R297	10K 5%	1/4 A	M
R298	5.1K 5%	1/4 A	M
R300	2K 5%	1/4 A	M
R301	3.74K 1%	1/4 A	M
R302	3.01K 1%	1/4 A	M
R303	3.01K 1%	1/4 A	M
R304	100 5%	1/4 A	M
R305	100 5%	1/4 A	M
R306	100 5%	1/4 A	M
R307	1K 5%	1/4 A	M
R401	100 5%	1/4 A	P
R403	1K 5%	1/4 A	P
R404	1K 5%	1/4 A	P
R501	2K 5%	1/4 A	M
R502	2K 5%	1/4 A	M
R503	2K 5%	1/4 A	M
R504	2K 5%	1/4 A	M
R505	2K 5%	1/4 A	M
R506	2K 5%	1/4 A	M
R513	10K 5%	1/4 A	M
R514	5.1K 5%	1/4 A	M
R601	2K 5%	1/4 A	M
R602	2K 5%	1/4 A	M
R603	2K 5%	1/4 A	M
R604	2K 5%	1/4 A	M
R605	100 5%	1/4 A	M
R606	100 5%	1/4 A	M
R607	100 5%	1/4 A	M
R608	6.65K 1%	1/4 A	M
R609	6.65K 1%	1/4 A	M
R610	6.65K 1%	1/4 A	M
R611	6.65K 1%	1/4 A	M
R612	1100K 5%	1/4 A	M
R613	0 7/10	1/4 A	M
R615	390K 5%	1/4 A	M
R616	390K 5%	1/4 A	M
R617	390K 5%	1/4 A	M
R701	1.2K 5%	1/4 A	P
R705	7.5K 5%	1/4 A	P
R706	10K 5%	1/4 A	P
R801	39 5%	1/4 A	P
R802	39 5%	1/4 A	P
R803	3K 5%	1/4 A	P
R804	3K 5%	1/4 A	P
R901	10 5%	1/4 A	M
R902	10 5%	1/4 A	M
R903	10 5%	1/4 A	M
R905	453 1%	1/4 A	M
R906	10K 1%	1/4 A	M
R907	1M 5%	1/4 A	M
R908	30K 1%	1/4 A	M
R909	510K 5%	1/4 A	M
R911	10K 5%	1/4 A	M
R912	10K 5%	1/4 A	M
R913	10K 5%	1/4 A	M
R914	100K 5%	1/4 A	M
R915	100K 5%	1/4 A	M
R916	100K 5%	1/4 A	M

CAPACITORS

SYMBOL	RATING	W	RES
C01	470 5%	0.1	M
C02	1050	0.1	M
C03	1500 5%	0.1	M
C04	470 2K	0.1	M
C05	50 5%	0.1	M
C06	330 25	0.1	M
C07	330 25	0.1	M
C10	330 25	0.1	M
C11	0.150	0.1	M
C21	0.150	0.1	M
C23	470 10	0.1	M
C24	470 2K	0.1	M
C31	0.0150	0.1	M
C32	0.0150	0.1	M
C41	68 450	0.1	M
C001	0.01 10	0.1	M
C002	0.01 10	0.1	M
C003	0.47 10	0.1	M
C006	100 5%	0.1	M
C007	0.01 10	0.1	M
C008	0.01 10	0.1	M
C009	0.150	0.1	M
C010	100 10	0.1	M
C011	0.47 10	0.1	M
C012	0.01 10	0.1	M
C013	0.01 10	0.1	M
C021	400 10	0.1	M
C022	400 10	0.1	M
C023	45 10	0.1	M
C100	0.01 10	0.1	M
C101	0.01 10	0.1	M
C102	0.125	0.1	M
C110	100 5%	0.1	M
C200	0.125	0.1	M
C201	0.125	0.1	M
C202	0.125	0.1	M
C204	0.047 50	0.1	M
C206	0.125	0.1	M
C207	0.047 50	0.1	M
C208	0.047 50	0.1	M
C210	0.047 50	0.1	M
C211	0.047 50	0.1	M
C212	0.125	0.1	M
C213	0.047 50	0.1	M
C214	0.047 50	0.1	M
C215	0.125	0.1	M
C216	0.047 50	0.1	M
C217	22 10	0.1	M
C218	0.125	0.1	M
C219	22 10	0.1	M
C220	0.125	0.1	M
C222	0.022 25	0.1	M
C223	0.01 10	0.1	M
C224	0.0150	0.1	M
C225	0.0150	0.1	M
C226	0.125	0.1	M
C302	0.125	0.1	M
C303	0.125	0.1	M
C304	0.125	0.1	M
C401	100 25	0.1	M
C501	470 50	0.1	M
C502	470 50	0.1	M
C503	470 50	0.1	M
C504	470 50	0.1	M
C505	470 50	0.1	M
C506	470 50	0.1	M
C601	0.001 50	0.1	M
C602	0.001 50	0.1	M
C603	0.001 50	0.1	M
C604	0.001 50	0.1	M
C605	0.001 50	0.1	M
C606	0.001 50	0.1	M
C607	0.001 50	0.1	M
C608	0.125	0.1	M
C801	0.150	0.1	M
C802	0.022 50	0.1	M
C803	0.01 10	0.1	M
C804	0.01 10	0.1	M
C805	68 50	0.1	M
C806	0.150	0.1	M
C809	0.01 10	0.1	M
C810	0.01 10	0.1	M
C820	100 25	0.1	M

CAPACITORS

SYMBOL	RATING	W	RES
C900	2200 50	0.1	M
C913	10 25	0.1	M
C914	10 25	0.1	M
C915	10 25	0.1	M
C916	0.125	0.1	M
C917	10 25	0.1	M
C919	0.0150	0.1	M
C920	0.125	0.1	M
C921	470 10	0.1	M
C922	470 2K	0.1	M
C923	470 2K	0.1	M
C930	100 5%	0.1	M
C940	1.25	0.1	M
C941	1.25	0.1	M
C001	0.01 10	0.1	M
C002	0.01 10	0.1	M
C003	0.47 10	0.1	M
C006	100 5%	0.1	M
C007	0.01 10	0.1	M
C008	0.01 10	0.1	M
C009	0.150	0.1	M
C010	100 10	0.1	M
C011	0.47 10	0.1	M
C012	0.01 10	0.1	M
C013	0.01 10	0.1	M
C021	400 10	0.1	M
C022	400 10	0.1	M
C023	45 10	0.1	M
C100	0.01 10	0.1	M
C101	0.01 10	0.1	M
C102	0.125	0.1	M
C110	100 5%	0.1	M
C200	0.125	0.1	M
C201	0.125	0.1	M
C202	0.125	0.1	M
C204	0.047 50	0.1	M
C206	0.125	0.1	M
C207	0.047 50	0.1	M
C208	0.047 50	0.1	M
C210	0.047 50	0.1	M
C211	0.047 50	0.1	M
C212	0.125	0.1	M
C213	0.047 50	0.1	M
C214	0.047 50	0.1	M
C215	0.125	0.1	M
C216	0.047 50	0	







PRINTED WIRING BOARD LOCATION DIAGRAM

MODEL RAS-25YH4, RAS-35YH4
 MAIN P.W.B.
 MARKING ON P.W.B.

COMPONENT SIDE

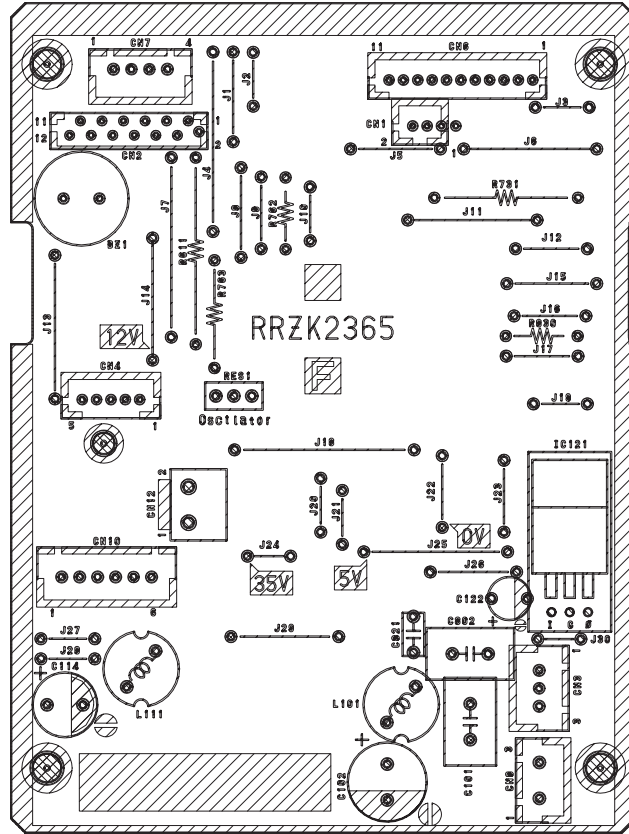


SOLDERING SIDE

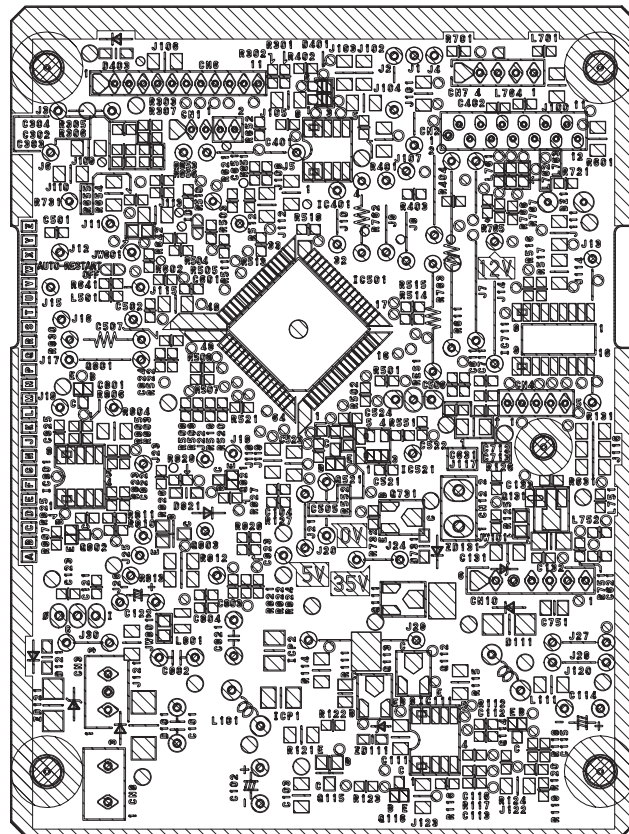




MODEL RAS-25YH4, RAS-35YH4
RECEIVING P.W.B.
MARKING ON P.W.B.

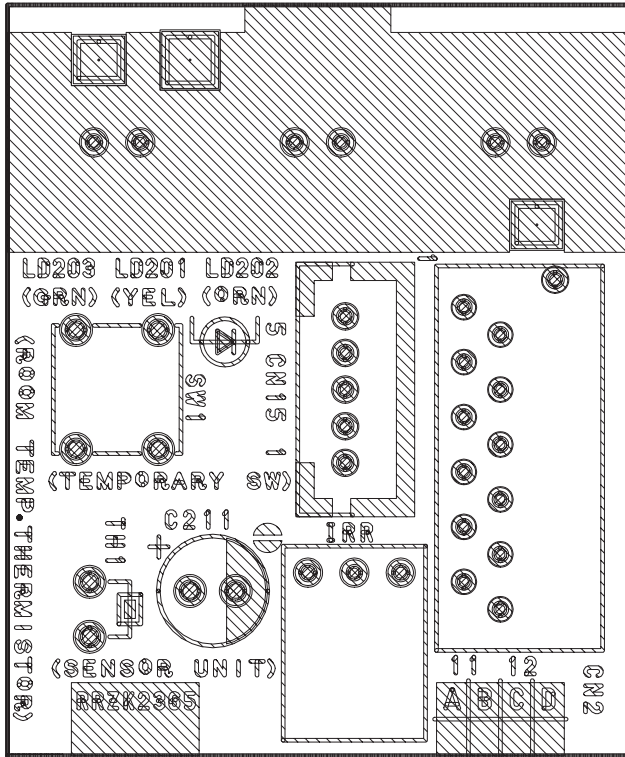


COMPONENT SIDE

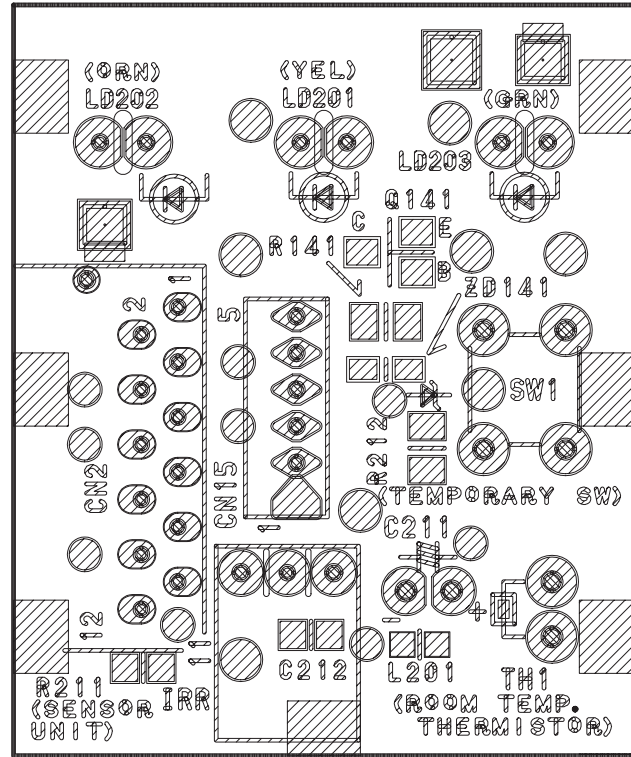

SOLDERING SIDE

MODEL RAC-25YH4, RAC-35YH4
POWER P.W.B.
MARKING ON P.W.B.

COMPONENT SIDE

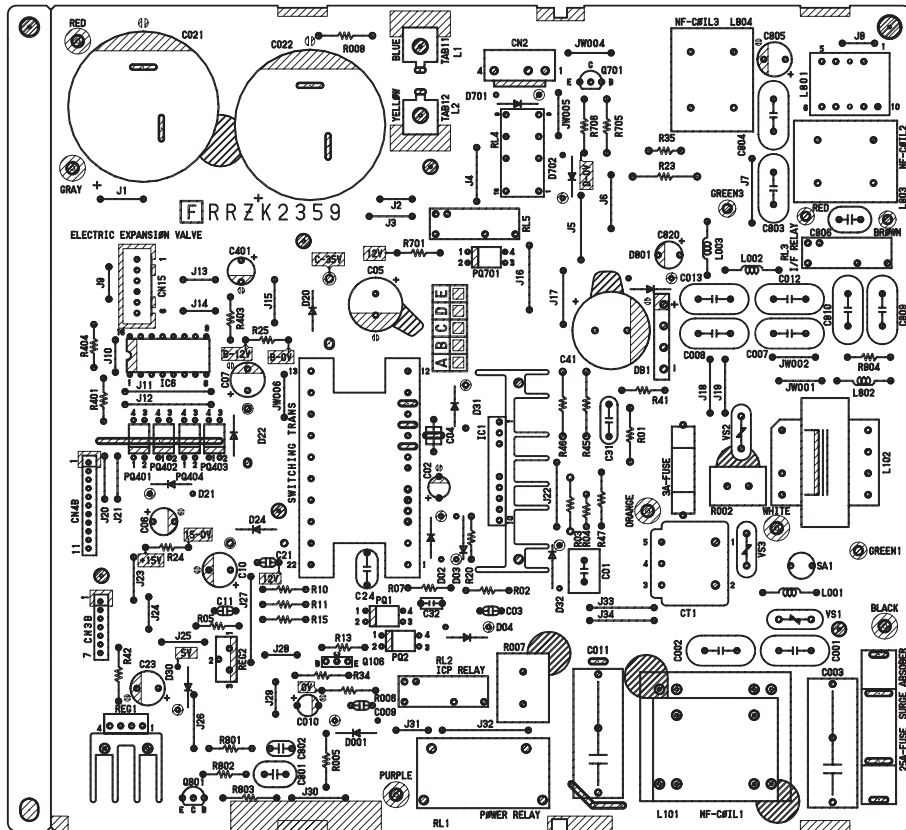






BLOCK DIAGRAM

MODEL RAS-25YH4 / RAC-25YH4
RAS-35YH4 / RAC-35YH4

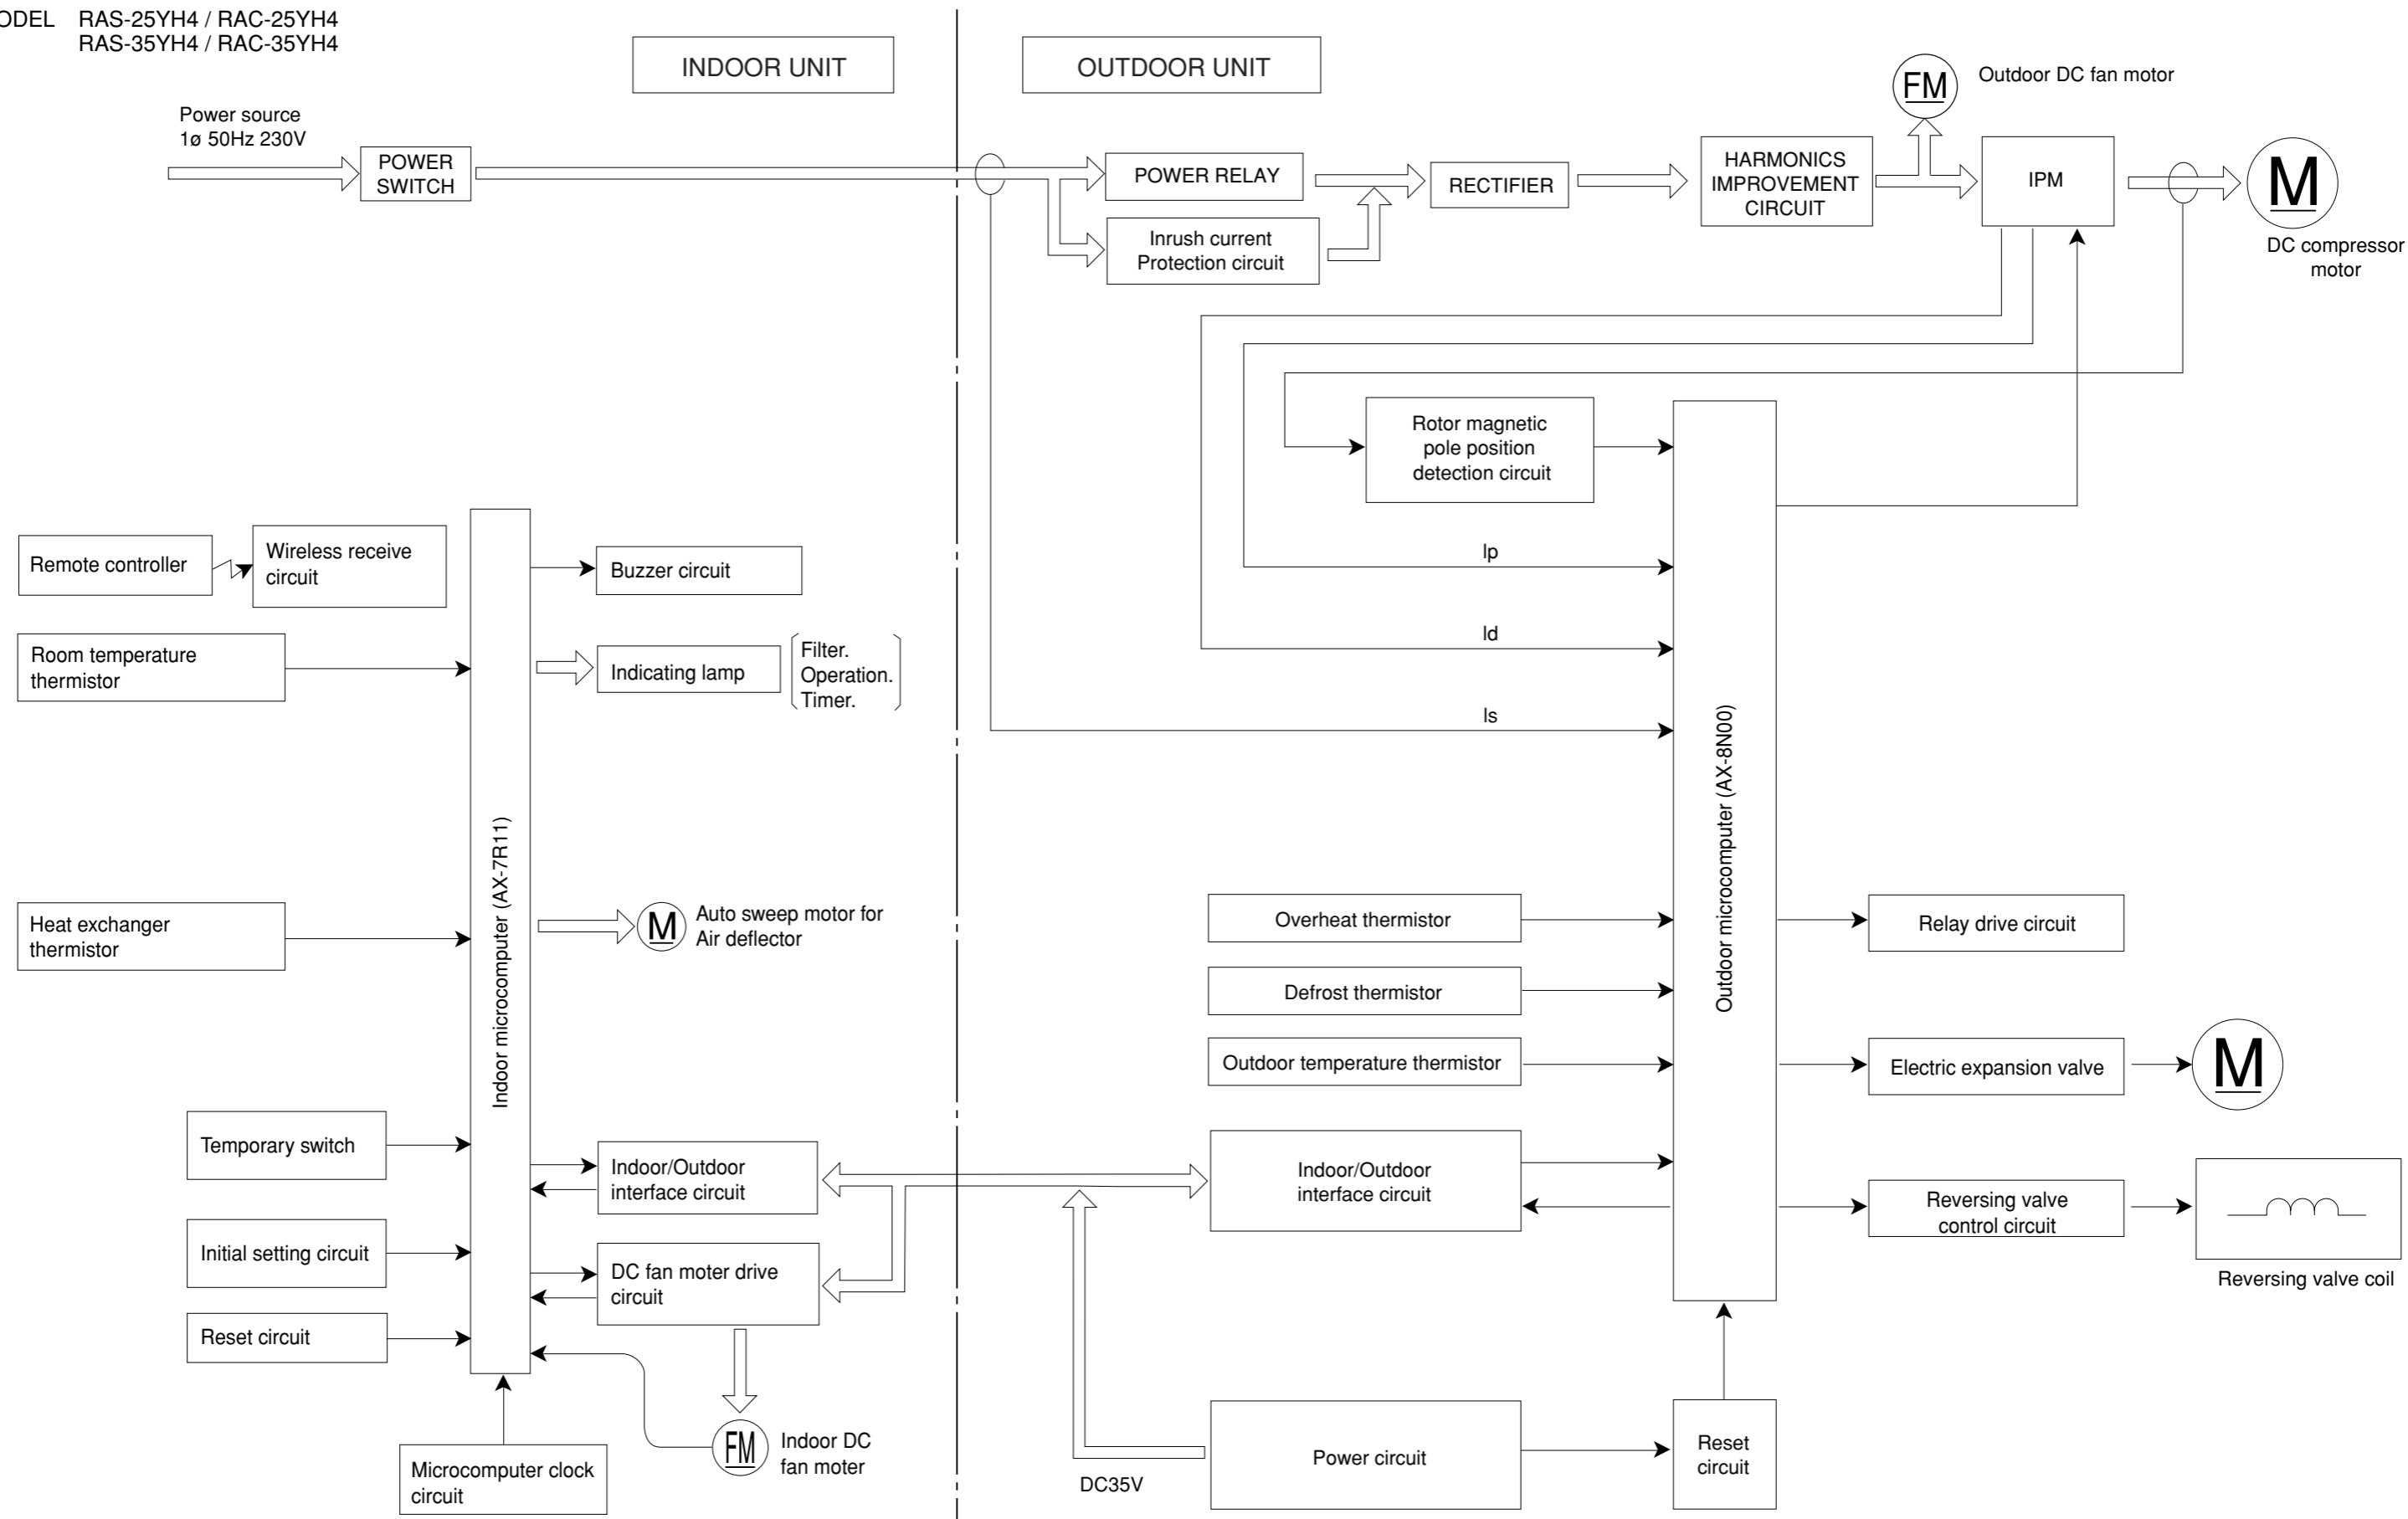



BASIC MODE

MODEL RAS-25YH4, RAS-35YH4

Operation mode	Fan	Cooling	Dehumidifying (dehumidifying operation by the function select button only, not including that engaged by the dehumidify button)	Heating	auto	
Basic operation of start/stop button						
Timer functions	Off-timer					
	On-timer					
	Off -> On On -> Off timer					
Fan speed mode (indoor fan)	Auto	<p>Changes from "Hi" to "Med" or "Lo" depending on room temperature.</p> <ol style="list-style-type: none"> Runs at "Hi" until first thermo off after operation is started. Runs at "Lo" when thermo is off. 		<p>Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchange temperature. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).</p> <p>When the compressor is running at maximum speed during hot dash or when recovered from defrosting.</p> <p>In modes other than left</p>	<p>Operating mode is judged by room temperature and outdoor temperature.</p> <p>(1) Judging by outdoor temperature Operating mode is judged by outdoor temperature. Only when the mode is not restricted by this judgment, the judgment by room temperature in the next paragraph will be performed.</p> <p>(a) Outdoor temperature $\geq 27^\circ\text{C}$: Restricted to cooling (b) Outdoor temperature $\leq 16^\circ\text{C}$: Restricted to heating</p> <p>(2) Judging by room temperature Operating mode at start up is judged (initial judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> When auto operation is started after 1 hour has elapsed since the operation was stopped. When auto operation is started after the previous manual mode operation. When the operating mode is switched to auto while operating at manual mode. <p>(b) Judging method</p> <ul style="list-style-type: none"> Room temperature $\geq 25^\circ\text{C} \pm 3^\circ\text{C}$: Cooling Room temperature $< 25^\circ\text{C} \pm 3^\circ\text{C}$: Heating <p>※ $\pm 3^\circ\text{C}$ is the fine adjustment value from the remote controller.</p>	
	Hi	Operates at "Hi" regardless of the room temperature.	Set to "ultra-Hi" when the compressor runs at maximum speed, and to "Hi" in other modes.		<p>Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).</p> <p>Set to "ultra-Hi" when the compressor is running at maximum speed during hot dash or when recovered from defrosting.</p>	<p>Judging operating mode change during operation (Continuous judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> The mode is reviewed at every interval time. When auto operation is started again before 1 hour has elapsed since the operation was stopped. <p>(b) Judging method</p> <ul style="list-style-type: none"> Judge by setting the hysteresis on the final preset temperature. <p>The final preset temperature is the actually targeted preset temperature which is the sum of the basic preset temperature and each type of shift value (e.g. $\pm 3^\circ\text{C}$ by remote controller, preset temperature correction value, powerful shift value, etc.)</p> <p>[Currently cooling]</p> <ul style="list-style-type: none"> Room temperature \leq Final preset temperature -2°C Change to heating Room temperature $>$ Final preset temperature -2°C Continue cooling <p>[Currently heating]</p> <ul style="list-style-type: none"> Room temperature \geq Final preset temperature $+3^\circ\text{C}$ Change to cooling Room temperature $<$ Final preset temperature $+3^\circ\text{C}$ Continue heating
	Med	Operates at "Med" regardless of the room temperature.	Same as at left.		<p>Set to "ultra-Lo", "Lo", "Med" or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).</p>	
	Lo	Operates at "Lo" regardless of the room temperature.	Same as at left.	Set to "Lo" in modes other than when the compressor stops.	<p>Set to "ultra-Lo", "Lo", or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:</p>	
Basic operation of temperature controller	Performs only fan operation at the set speed regardless of the room temperature.	See page 36.	See page 37.	See page 38.		
Sleep operation (with sleep button ON)	<ul style="list-style-type: none"> Enters sleep operation after set as on the left. Action during sleep operation Lo (sleep) operation 	<ul style="list-style-type: none"> Same as at left See page 37. 	<ul style="list-style-type: none"> Same as at left See page 37. 	<ul style="list-style-type: none"> Same as at left See page 39. 	<ul style="list-style-type: none"> Same as at left. Performs the sleep operation of each operation mode. 	



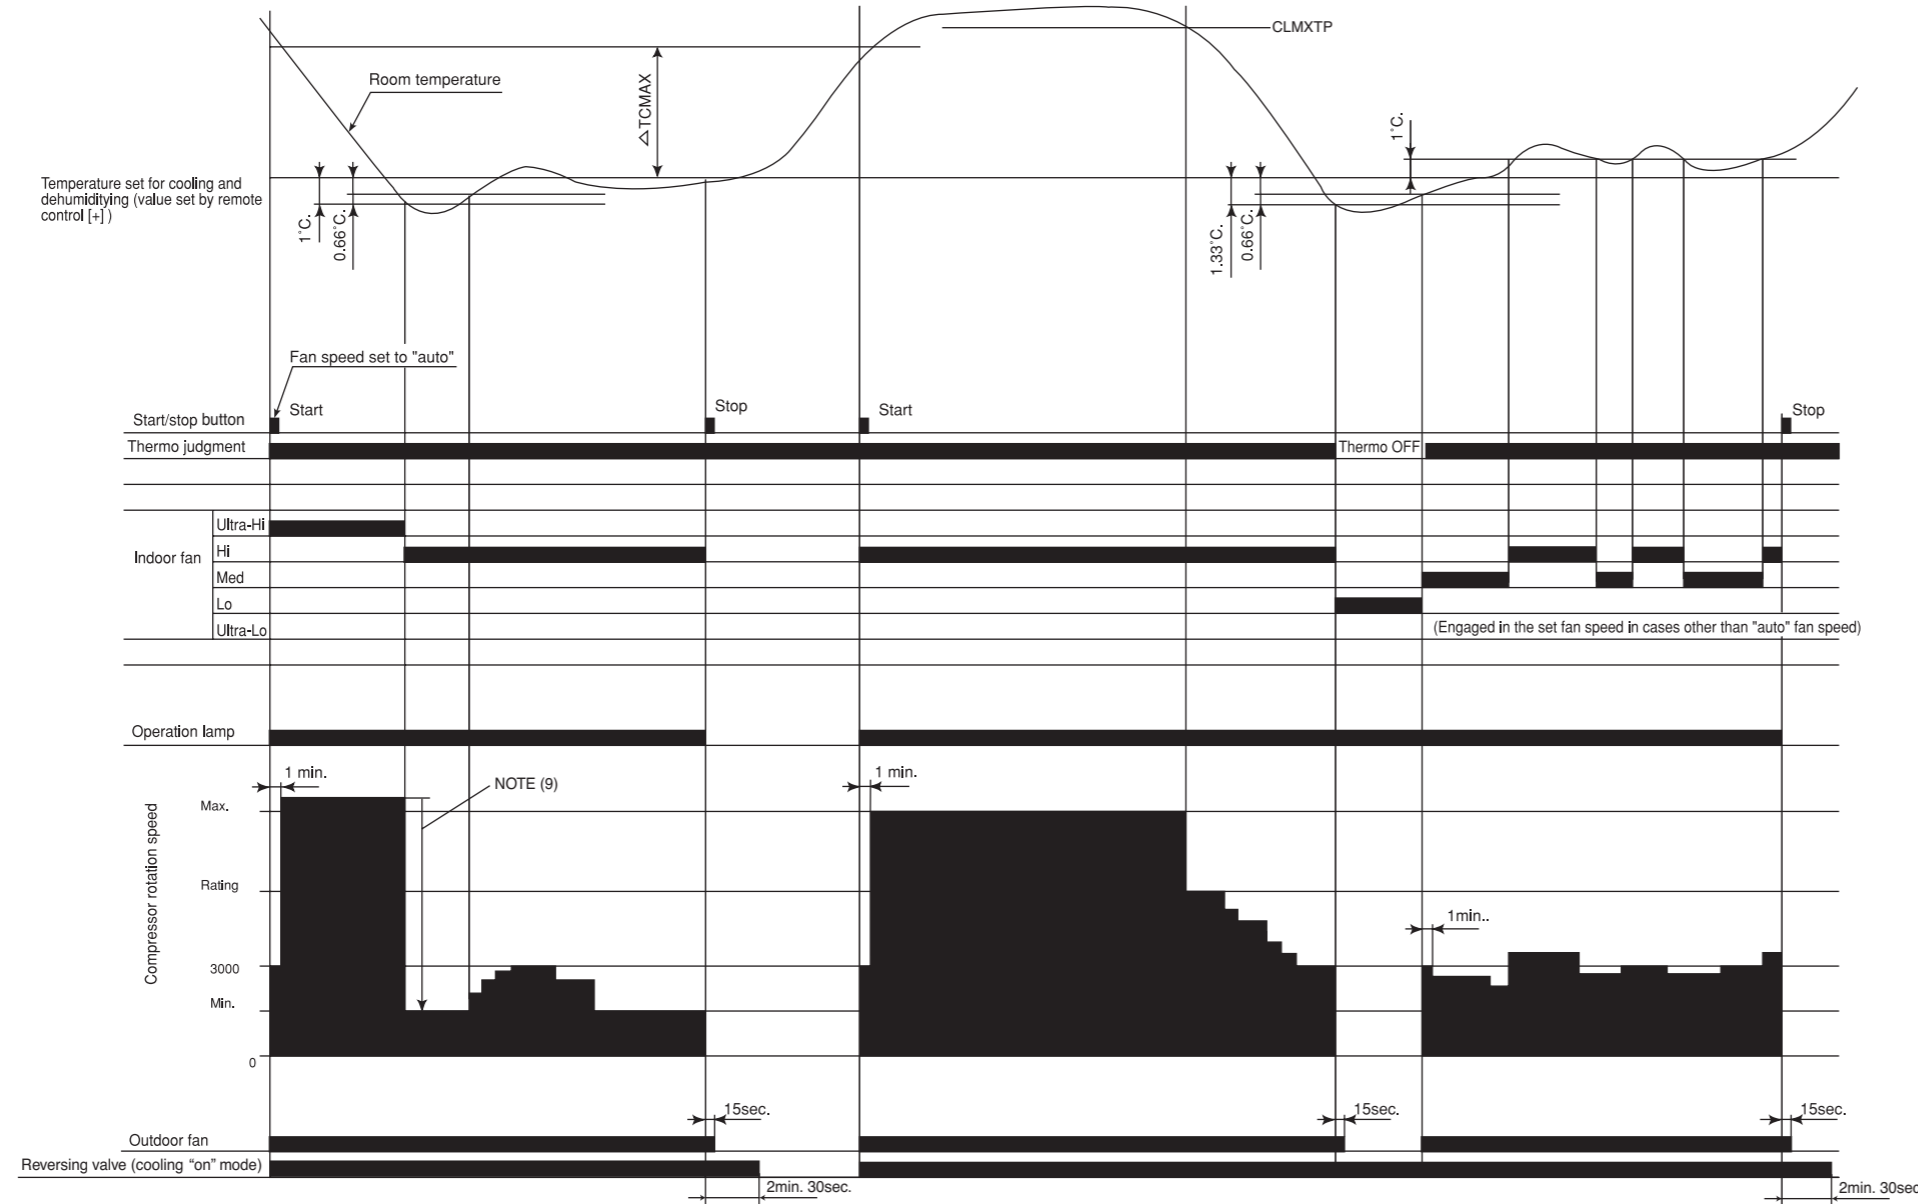


Table 1 Mode data file

	RAS-25YH4	RAS-35YH4
LABEL NAME	VALUE	
WMAX	3800 min ⁻¹	4500 min ⁻¹
WMAX2	3800 min ⁻¹	4500 min ⁻¹
WSTD	3150 min ⁻¹	3750 min ⁻¹
WBEMAX	2500 min ⁻¹	2800 min ⁻¹
CMAX	3300 min ⁻¹	3800 min ⁻¹
CMAX2	3300 min ⁻¹	3800 min ⁻¹
CSTD	2050 min ⁻¹	3150 min ⁻¹
CKYMAX	2050 min ⁻¹	3000 min ⁻¹
CJKMAX	1800 min ⁻¹	2200 min ⁻¹
CBEMAX	1600 min ⁻¹	1700 min ⁻¹
WMIN	800 min ⁻¹	800 min ⁻¹
CMIN	1400 min ⁻¹	1400 min ⁻¹
STARTMC	90 Seconds	90 Seconds
DWNRATEW	80%	80%
DWNRATEC	60%	60%
SHIFTW	2.00°C	2.00°C
SHIFTC	1.33°C	1.33°C
CLMXTP	30.00°C	30.00°C
YNEOF	25.00°C	25.00°C
TEION	5.00°C	5.00°C
TEIOF	9.00°C	9.00°C
SFTDSW	1.00°C	1.00°C
DFTIM1	43 Minutes	43 Minutes
DFTIM2	60 Minutes	60 Minutes



Basic Cooling Operation



Notes:

- (1) Condition for entering into Cool Dashed mode. When fan set to “Hi” or “Auto mode” and temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 2) larger than CMAX.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature -3°C (thermo off) and iii) when room temperature has achieved setting temperature -1°C then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- (3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value) -3°C . After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum “ON” time and “OFF” time is 3 minutes.
- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTP. No time constrain if indoor temperature is higher than CLMXTP.
- (6) When fan speed setting on remote control is “Hi” or “Auto” mode, and both room and outdoor temperatures (data based on out door unit) meet temperature judgment (Off) shown in the table 1, the compressor rpm will be limited to CKYMAX.
- (7) When fan is set to “Med”, compressor rpm will be limited to CJKMAX.
- (8) When fan is set to “Lo”, compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature -1°C compressor rpm is actual rpm x DWNRATEC.

Table 1 Thermo judgment


Item		Temperature
Room temperature	Thermo judgment (ON)	30°C
	Thermo judgment (OFF)	32°C
Outdoor temperature	Thermo judgment (ON)	32°C
	Thermo judgment (OFF)	33°C

Table 2 Compressor rpm

Calculated compressor rpm	Temperature difference (with shift value)
2500 min^{-1}	1.66°C
3000 min^{-1}	2.00°C
3500 min^{-1}	2.33°C
4000 min^{-1}	2.66°C




Cooling Sleep Operation

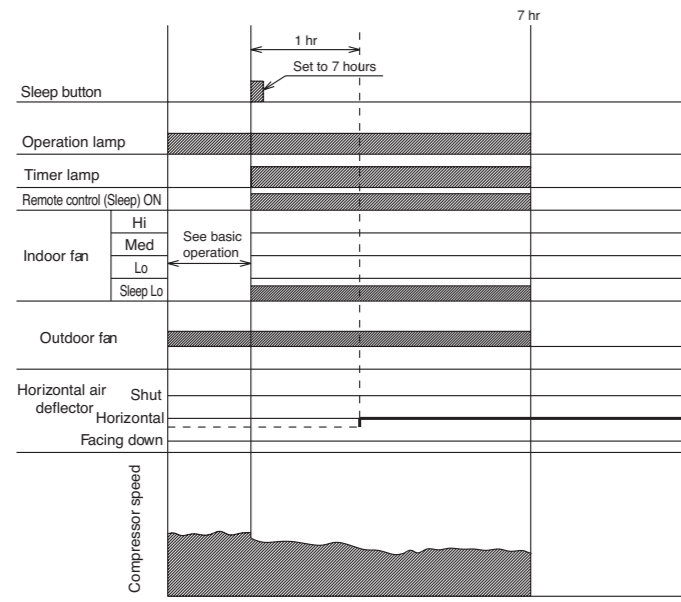


- Notes:**
- (1) The sleep operation starts when the sleep button is pressed.
 - (2) When the sleep button is set, the maximum compressor speed is limited to CBEMAX, and the indoor fan is set to "sleep Lo".
 - (3) The indoor fan speed does not change even when the fan speed mode is changed.
 - (4) If sleep operation is canceled by the cancel button or sleep button, all data is cleared.

Dehumidifying Operation

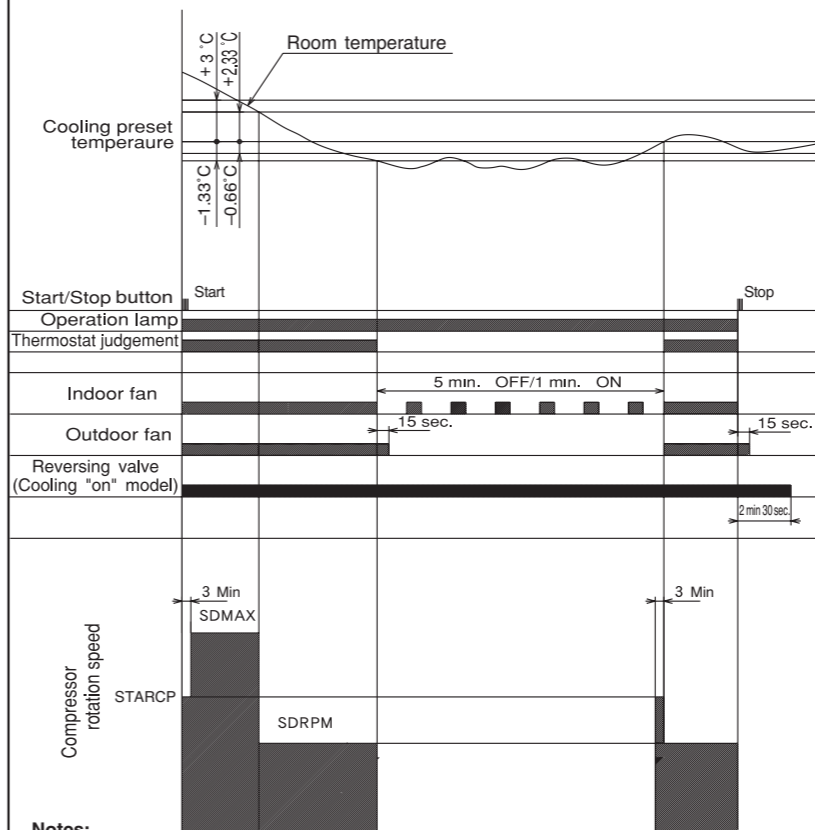


- Notes:**
- (1) The operation is done assuming as the preset temperature = (room temperature at the time) - (2°C).
 - (2) The indoor fan is operated in the "Lo" mode. During thermo OFF indoor fan will be OFF for 5 minutes and ON for 1 minute.
 - (3) When the operation is started by the thermostat turning ON, the start of the indoor fan is delayed 32 seconds after the start of compressor operation.
 - (4) The compressor is operated forcibly for 3 minutes after operation is started.
 - (5) The minimum ON time and OFF time of the compressor are 3 minutes.

Cooling Defrost

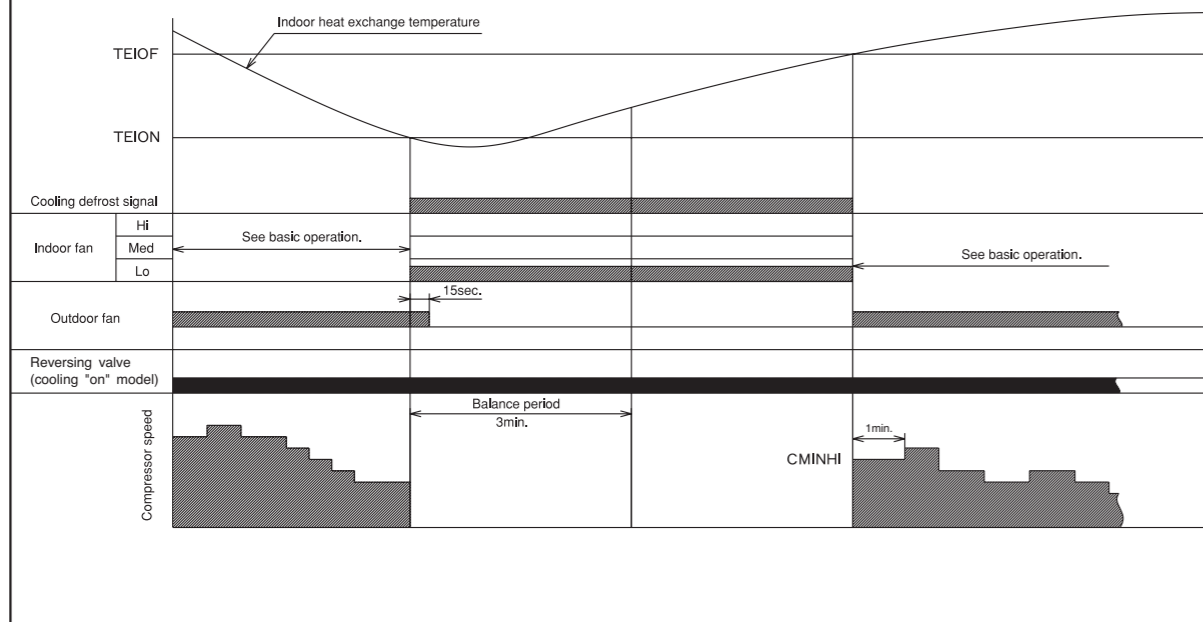

Dehumidifying Sleep Operation

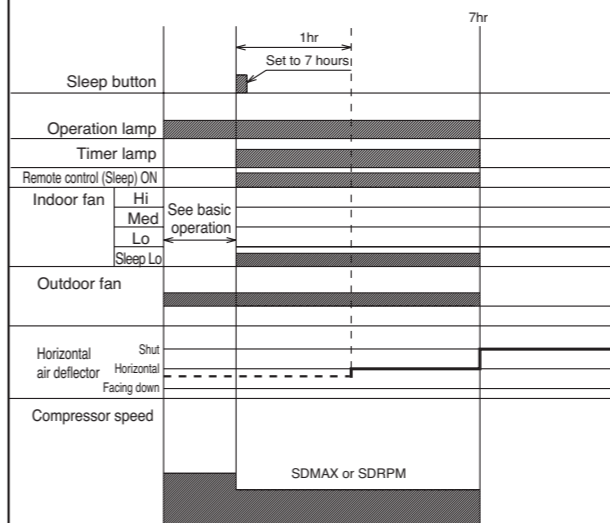

- Notes:**
- (1) The sleep operation starts when the sleep button is pressed.
 - (2) When the sleep button is set, the indoor fan is set to "sleep Lo".
 - (3) The indoor fan speed does not change even when the fan speed mode is changed.
 - (4) If sleep operation is canceled by the cancel button or sleep button, all data is cleared.



Basic Heating Operation

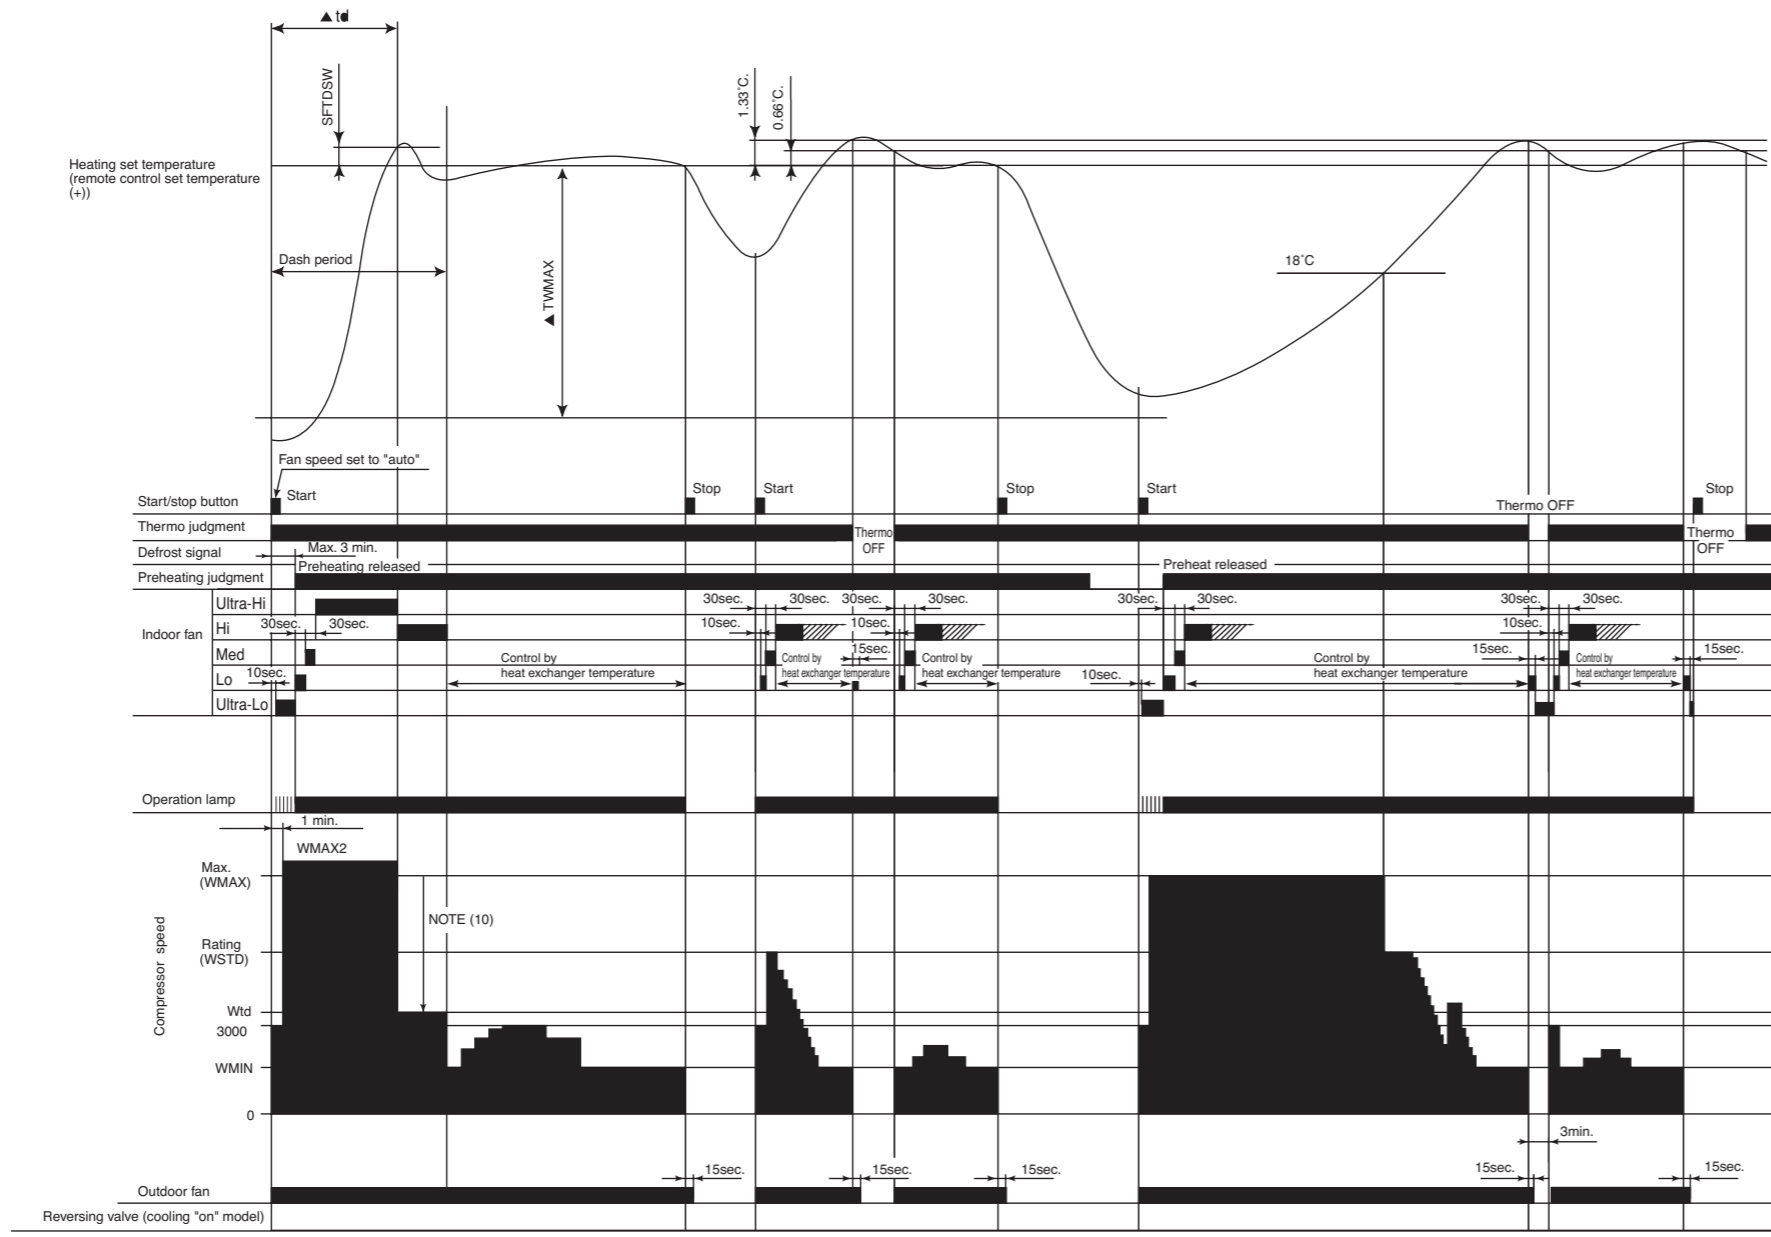


Table 3 Compressor rpm


Calculated compressor rpm	Temperature difference (with shift value)
1900 min ⁻¹	1.66°C
2400 min ⁻¹	2.00°C
2900 min ⁻¹	2.33°C
3400 min ⁻¹	2.66°C
3900 min ⁻¹	3.00°C
4400 min ⁻¹	3.33°C
4900 min ⁻¹	3.66°C

Notes:

- (1) Condition for entering into Hot Dashed mode. When fan set to "Hi" or "Auto mode" and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
- (2) Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off.
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if outdoor temperature is lower than 4°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 0.5 seconds "ON" and 0.5 second "OFF".
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- (8) When fan is set to "Lo", compressor rpm will be limited to WBEMAX. When fan is set to "Med", compressor rpm will be limited to WJKMAX.
- (9) In "Ultra-Lo" fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in "Ultra-Lo" mode. During Hotkeep or Defrost mode, fan will continue in "Ultra-Lo" mode.
- (10) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.




Reversing Valve Defrosting

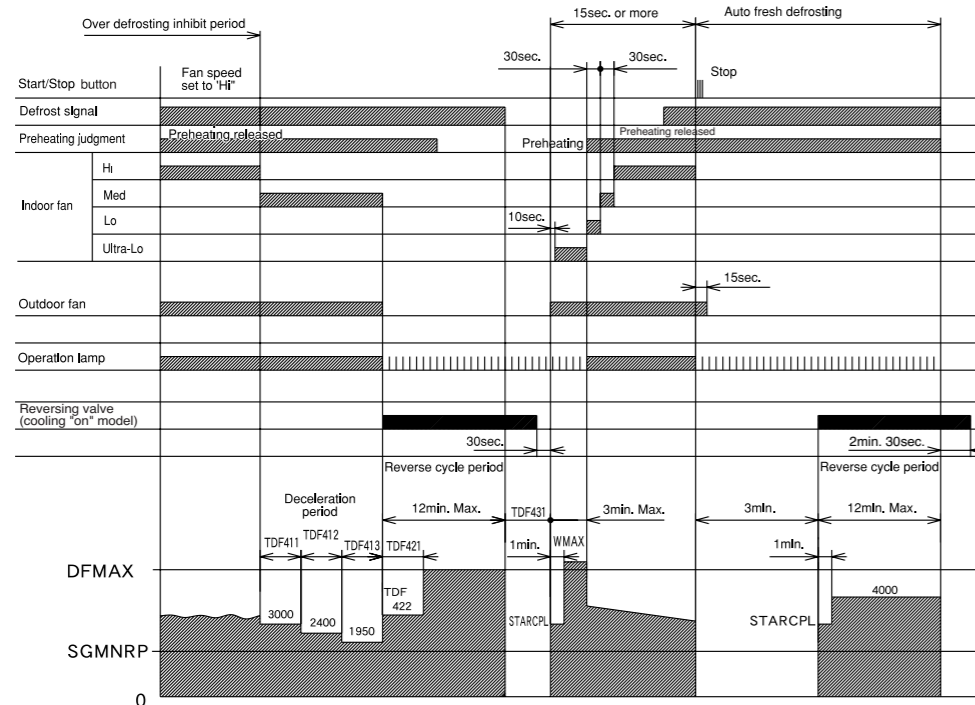

Notes:

- (1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.
- (2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
- (3) The defrosting period is 12 minutes maximum.
- (4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.
- (5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.


Heating Sleep Operation

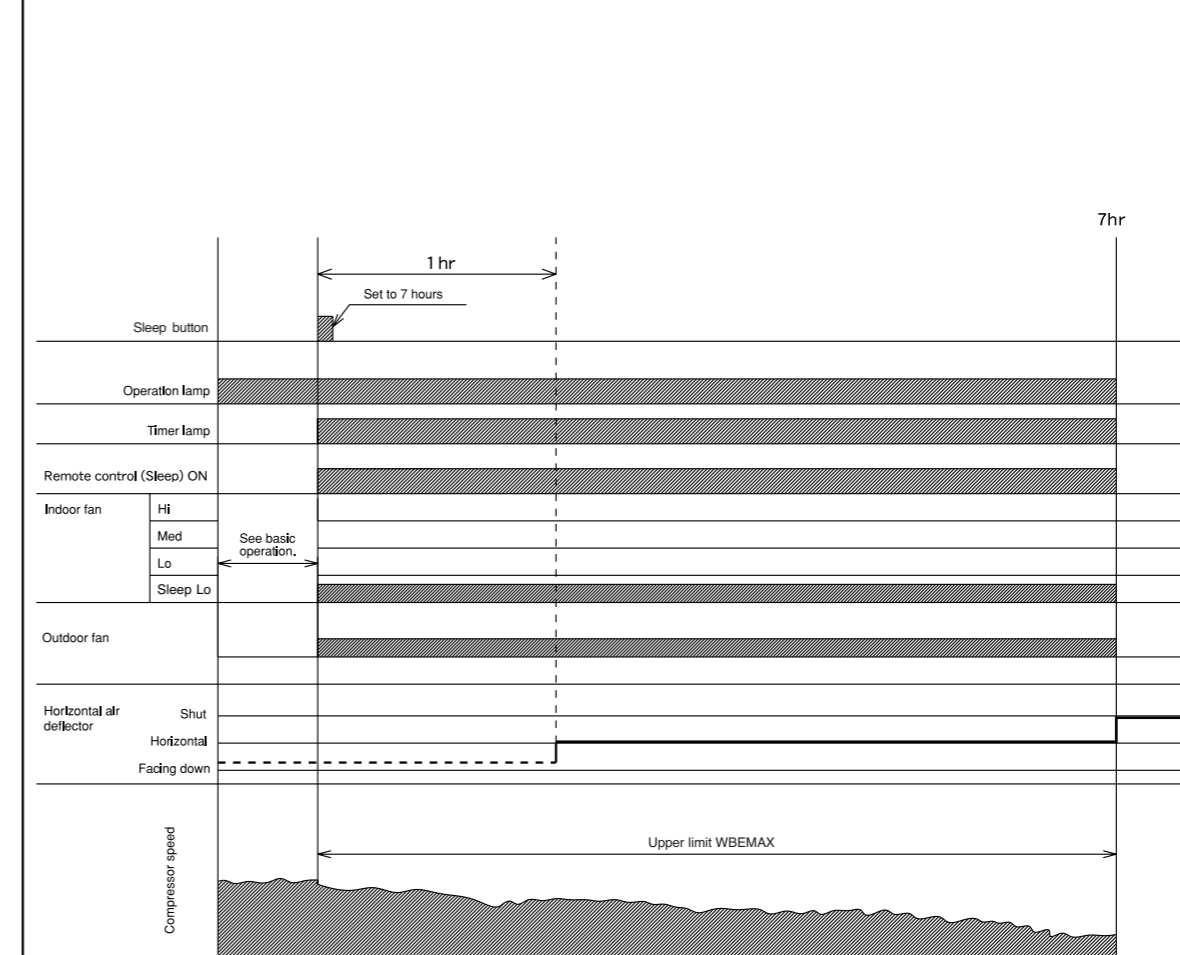

Notes:

- (1) The sleep operation starts when the sleep button is pressed.
- (2) When the sleep button is set, the maximum compressor speed is limited to WBEMAX, and the indoor fan is set to "sleep Lo".
- (3) The indoor fan speed does not change even when the fan speed mode is changed. (Sleep Lo)
- (4) When defrosting is to be set during sleep operation, defrosting is engaged and sleep operation is restored after defrosting.
- (5) If sleep operation is cancelled by the cancel button or sleep button, all data is cleared.

Setting Defrosting Inhibit Period

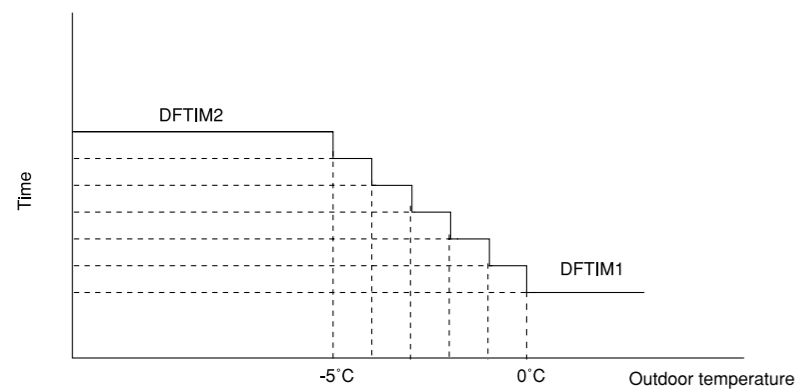


Notes:

- (1) The time is set according to the outdoor temperature when it is between 0°C and -5°C.
- (2) DFTIM1 is used when the outdoor temperature $\geq 0^\circ\text{C}$.
- (3) DFTIM2 is used when the outdoor temperature $\leq -5^\circ\text{C}$.



REFRIGERATING CYCLE DIAGRAM

MODEL RAS-25YH4 / RAC-25YH4
RAS-35YH4 / RAC-35YH4

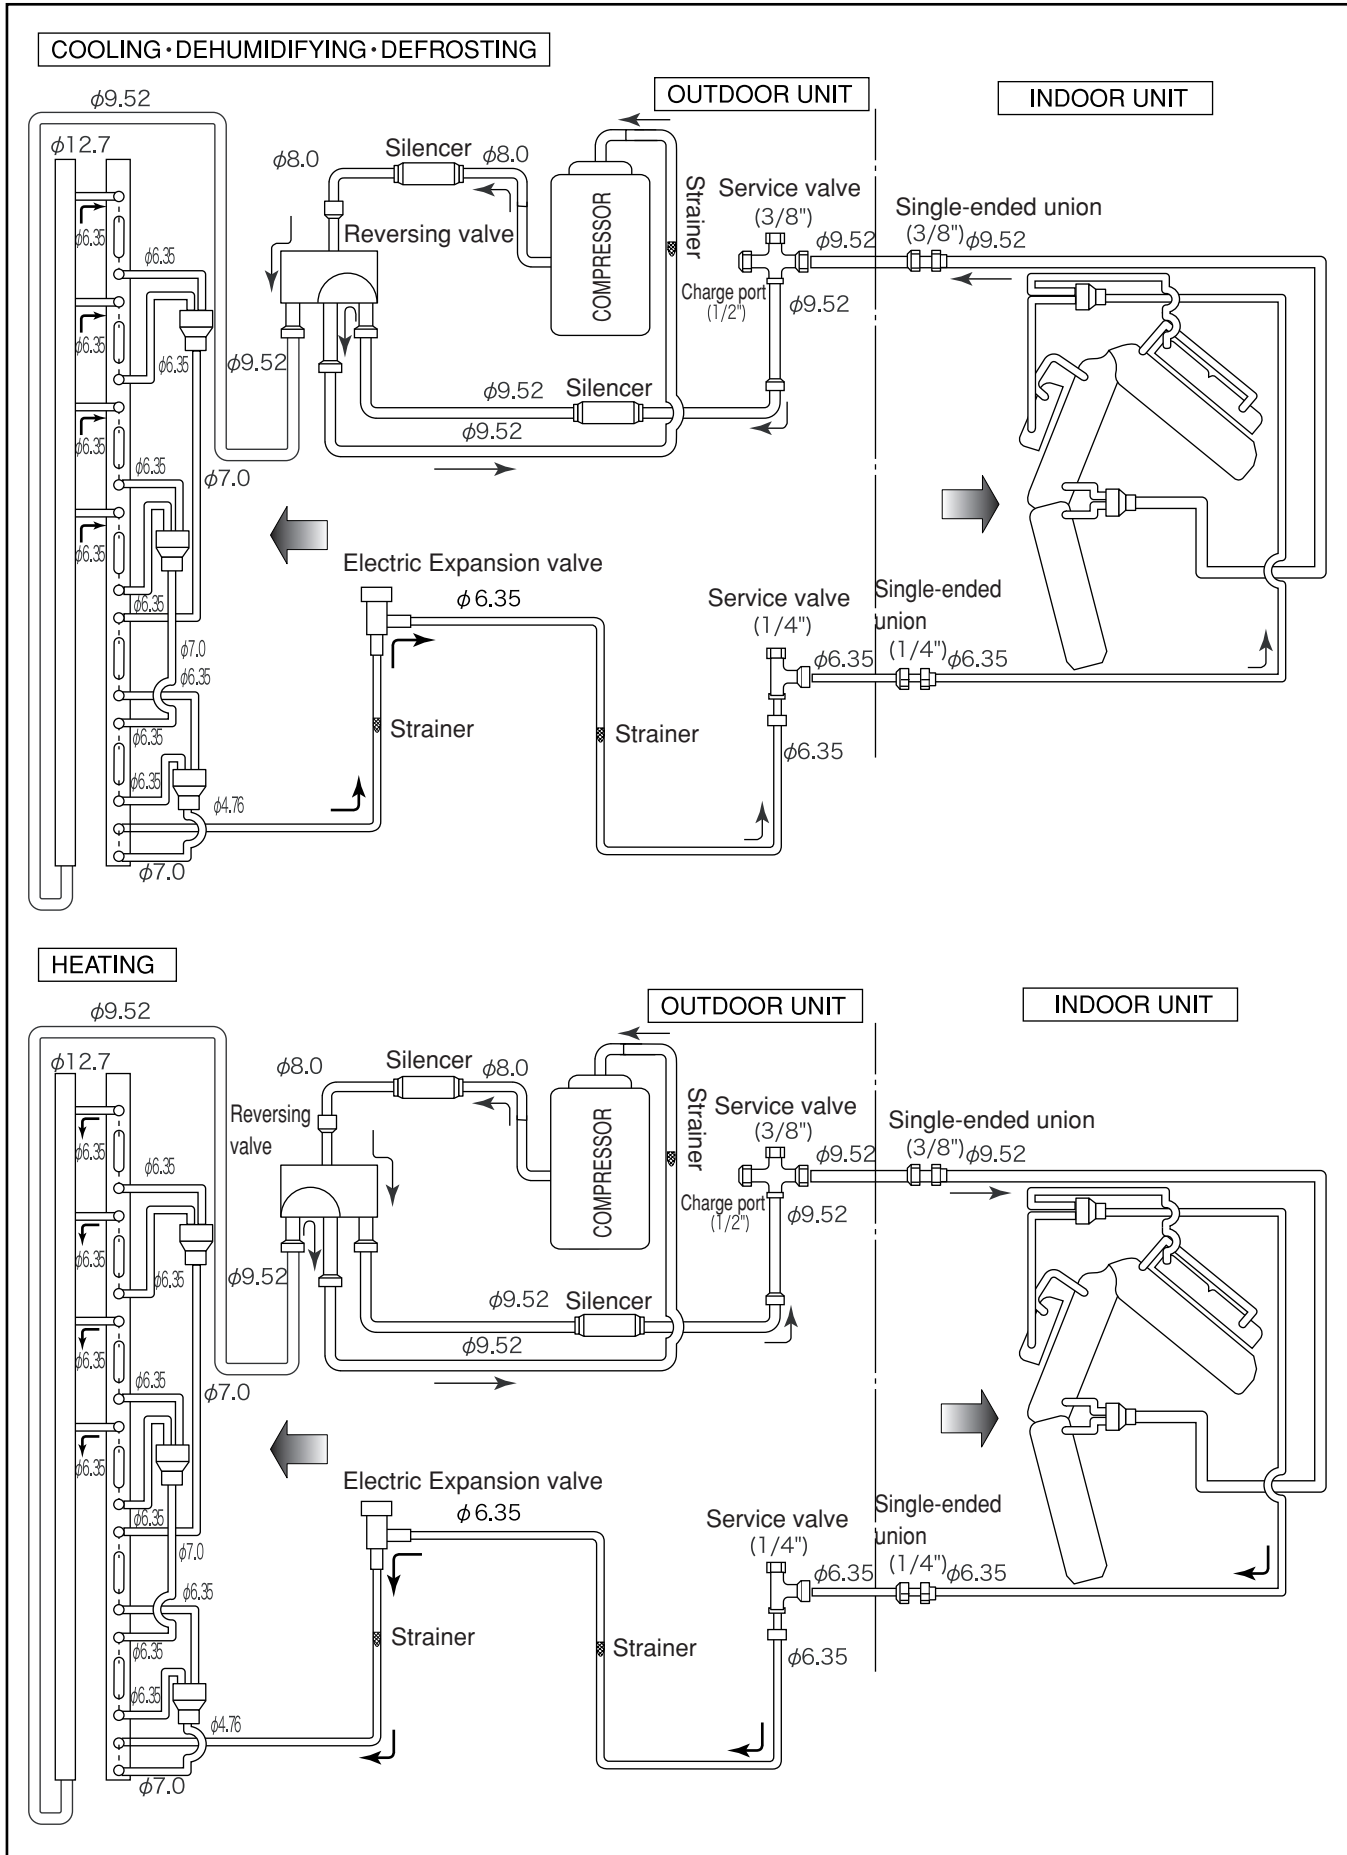

DESCRIPTION OF MAIN CIRCUIT OPERATION

MODEL RAS-25YH4, RAS-35YH4

1. Reset Circuit

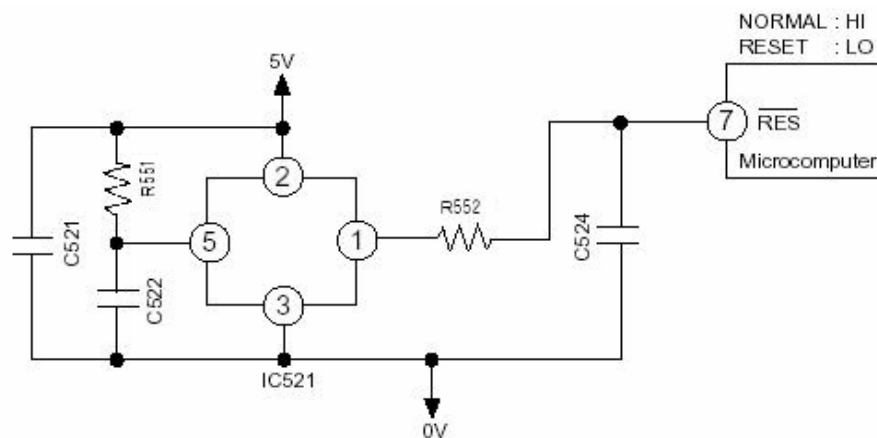


Fig. 1-1

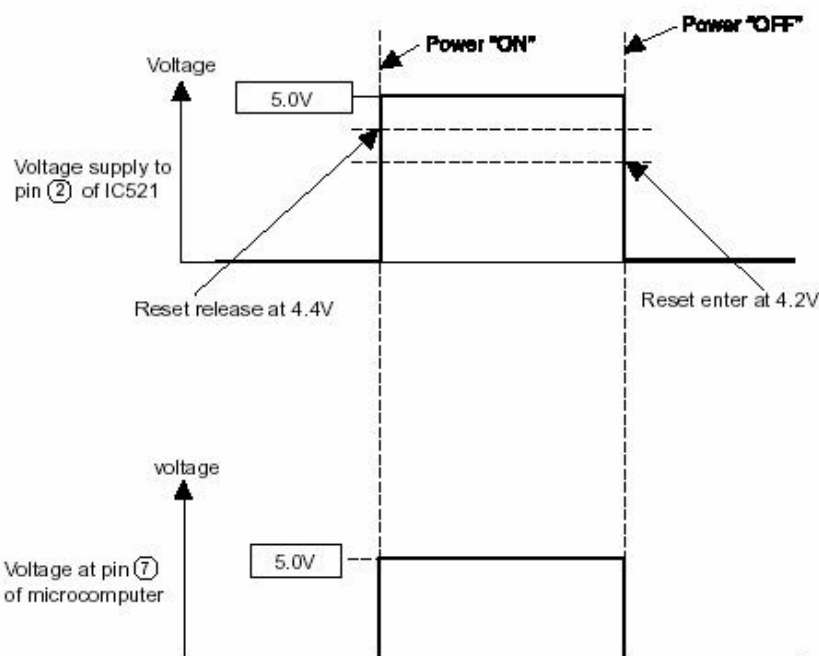


Fig. 1-2

The reset circuit initializes the microcomputer program when power is ON or OFF
Low voltage at pin (7) resets the microcomputer and Hi activates the microcomputer
When power "ON" 5V voltage rises and reaches 4.4V, pin (1) of IC521 is set to "Hi". At this time the microcomputer starts operation.
When power "OFF" voltage drops and reaches 4.2V, pin (1) of IC521 is set to "Low". This will RESET the microcomputer.

2. Receiver Circuit

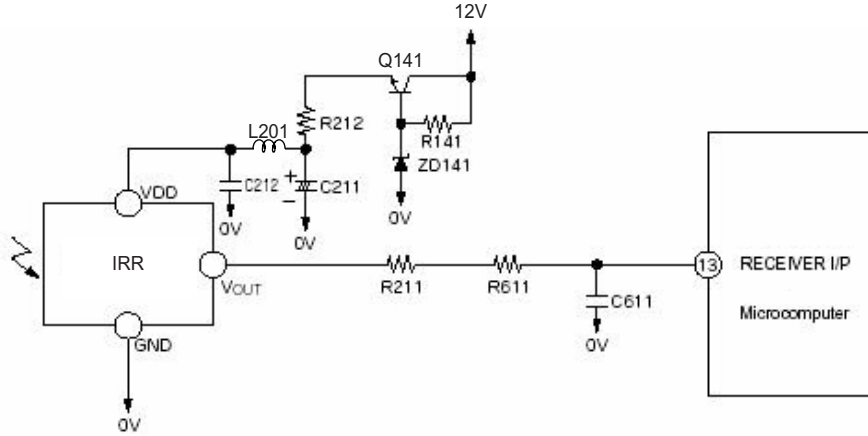


Fig.2-1

IRR (light receiver unit) receives the infrared signal from the wireless remote controller. The receiver amplifies and shapes the signal and outputs it.

3. Buzzer Circuit

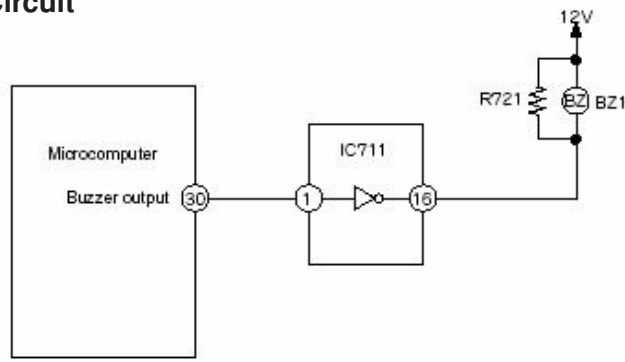


Fig.3-1 Buzzer circuit

When the buzzer sounds, an approx 3.9kHz square signal is output from buzzer output pin (30) of the microcomputer. After the amplitude of this signal has been set to 12Vp-p by IC711, it is applied to the buzzer. The piezoelectric element in the buzzer oscillates to generate the buzzer's sound.

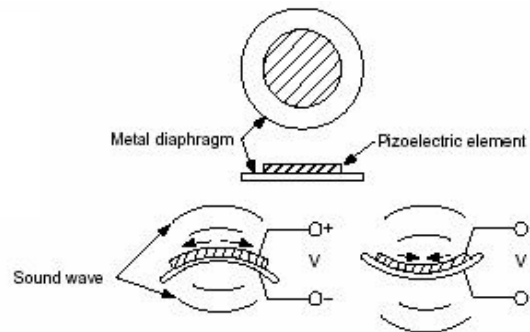


Fig. 3-2 Buzzer Operation

4. Auto Sweep Motor Circuit

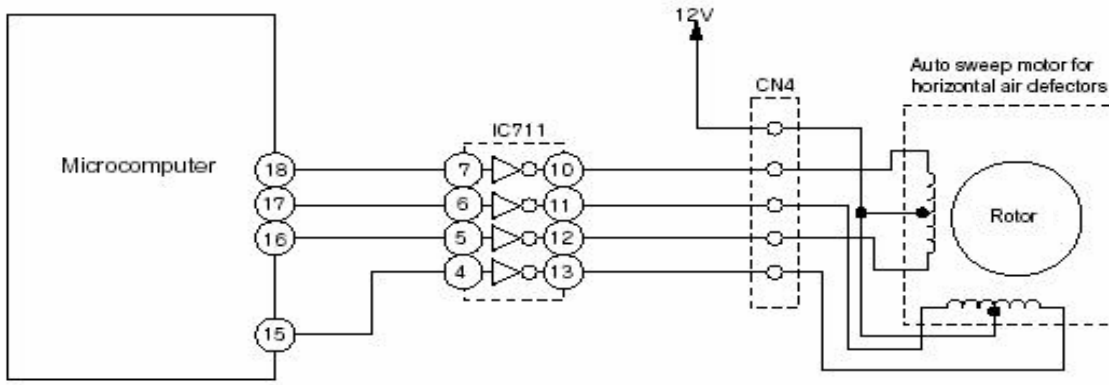


Fig.4-1

Fig. 4-1 shows the Auto sweep motor drive circuit; the signals shown in Fig.4-2 are output from pin (15) ~ (18) of microcomputer.

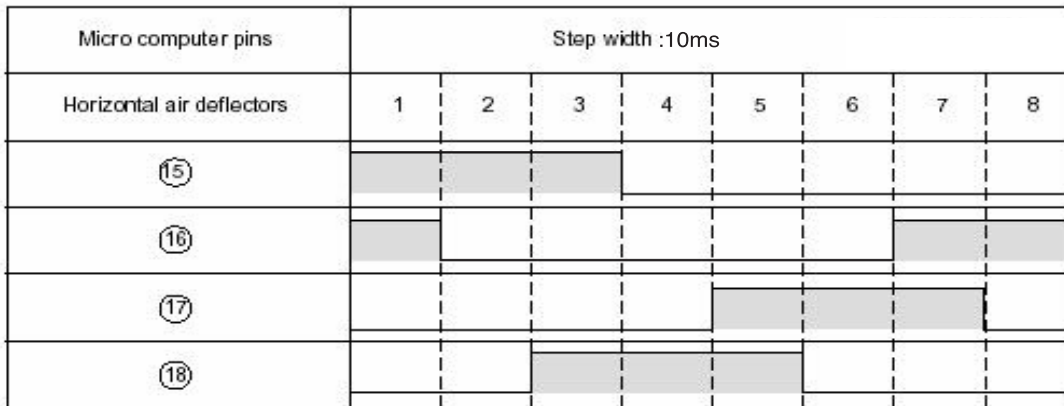


Fig.4-2 Microcomputer Output Signals

As the microcomputer's outputs change as shown in Fig.4-2, the coils of the auto sweep motor is excite to turn the rotor. Table 4-1 shows the rotation angle of horizontal air deflectors.

Table 4-1 Auto sweep Motor Rotation

	Rotation angle per step (°)	Time per step (ms.)
Horizontal air deflectors	0.0882	10

5. Initial Setting Circuit (IC401)

- When power is supplied, the microcomputer reads the data in IC401 or IC402 (E²PROM) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.
- Data of self-diagnosis mode is stored in IC401 or IC402; data will not be erased even when power is turned off.

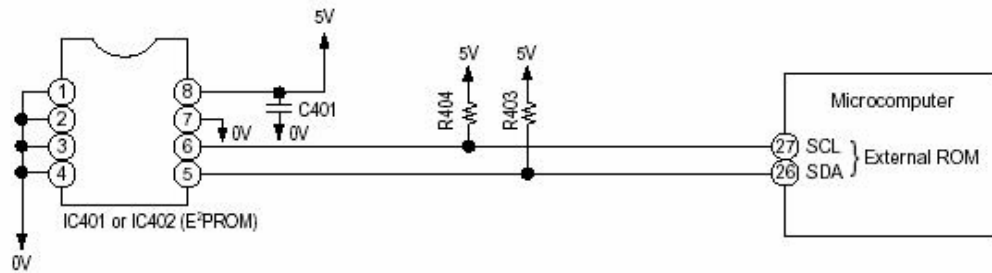


Fig. 5-1

6. Power Supply

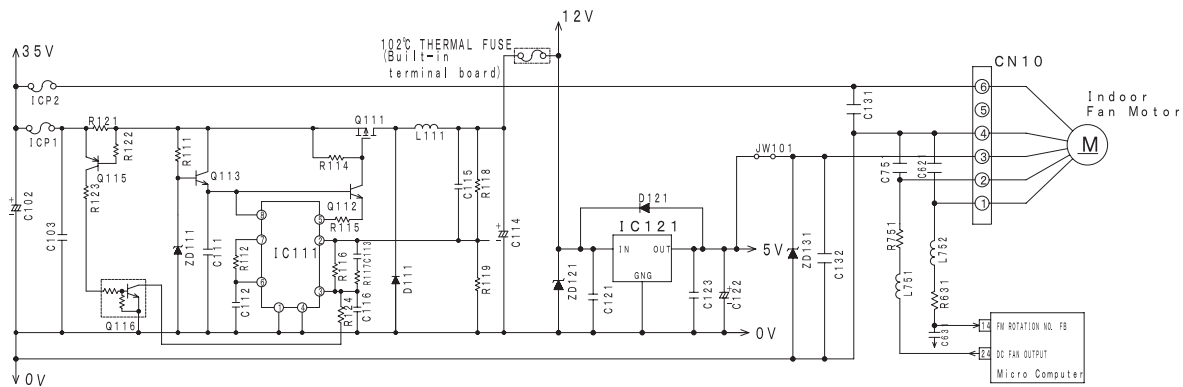


Fig. 6-1

First, 35V power which operates the indoor unit is generated by the power source section of the outdoor unit and supplied to the indoor unit through the C and D lines of the connecting cable.

Second, use the DC/DC converter and the 35 V power supply from the outdoor unit to generate 12 V control power, which drives the stepping motor during the operation.

In addition, use the regulator IC 121 to generate 5 V power required for driving the micro computer and controlling fan motor.

If the terminal block was overheated due to a connecting cable improper connection, the thermal fuse built in the terminal block will burnt to shut off the 12 V line and stop the operation of the indoor unit. Then, the outdoor unit cannot be communicated with the indoor unit and a communication error occurs (the outdoor LD301 will blink 9 times), stop all operations.

7. Fan Motor Drive Circuit

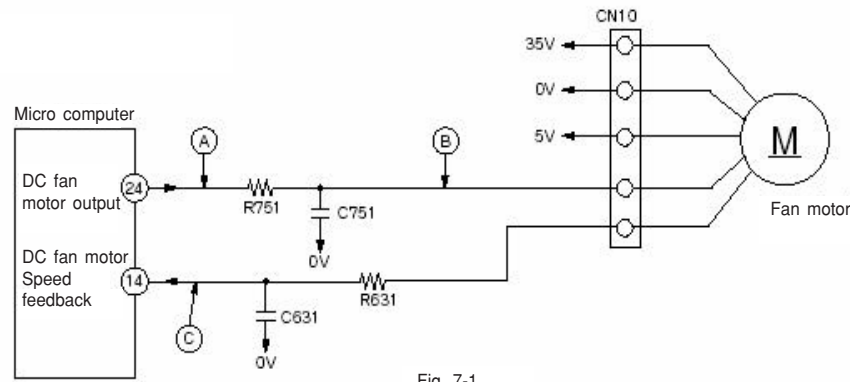


Fig. 7-1

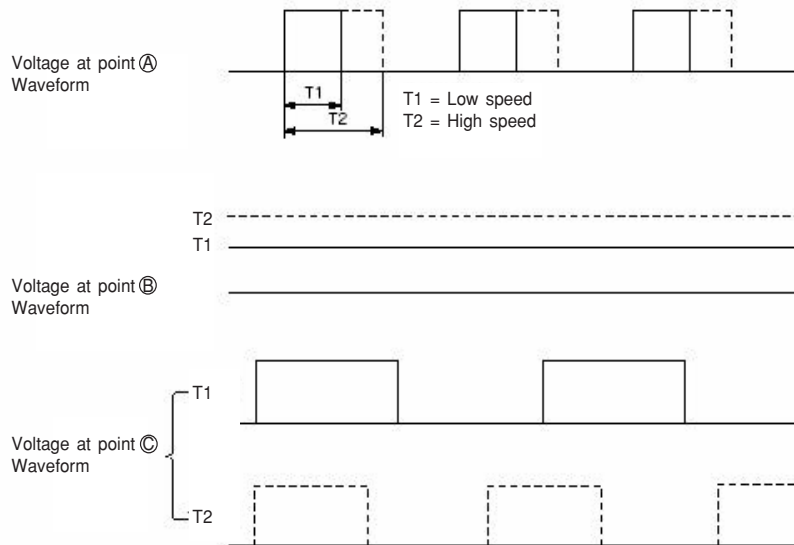


Fig. 7-2

- For the point (A), 15.7 kHz PWM pulse will be output from the pin (24) on the micro computer as shown in Fig. 7-2. The pulse range will vary with different command speed.
- The pulse is converted into the analog voltage by the R751 and C751 and applied to the fan motor as the speed command voltage. Fig. 7-3 shows the relation between the voltage at the point B and the speed. (Some differences will occur due to the condition of the unit.)
- The fan motor outputs the feedback pulse of the speed, which is input into the pin (14) on the micro computer. This pulse is equivalent to a frequency of $12/60$ speed. (Example: $1000 \text{ min}^{-1} \times 12/60 = 200 \text{ Hz}$)

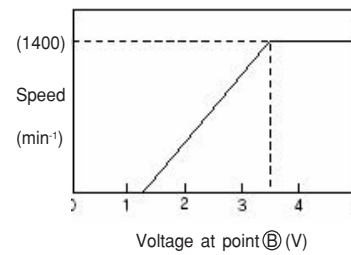


Fig. 7-3

- The micro computer monitors the frequency and adjusts the output pulse range of the pin (24) so as to keep the command speed.
- If the feedback pulse is 100 min^{-1} or less due to a locked fan motor or failure, the fan output will be stopped temporarily as fan lock error. After 10 seconds, restart the output of the pulse. If fan lock error is detected twice within 30 minutes, all units are stopped and the unit will come in the failure mode. (The timer lamp will blink 10 times.)

■ RAC-25YH4, 35YH4

1. The electrical parts for the outdoor unit is composed of two P.W.B (a power P.W.B. and main P.W.B.) and a harmonics improvement circuit as shown in Fig. 1-1.

- **Main P.W.B**
This P.W.B. is equipped with the rectification diode, DC fan motor control circuit and the circuits around the micro computer which take various controls.
- **POWER P.W.B.**
This P.W.B. is equipped with the noise filter, ICP power circuit, interface circuit, smoothing capacitor, expansion valve control circuit and four-way valve control circuit.
- **HARMONICS IMPROVEMENT CIRCUIT**
This circuit is composed of the capacitor at the bottom of the electrical parts box and two reactors attached to the BULKHEAD.

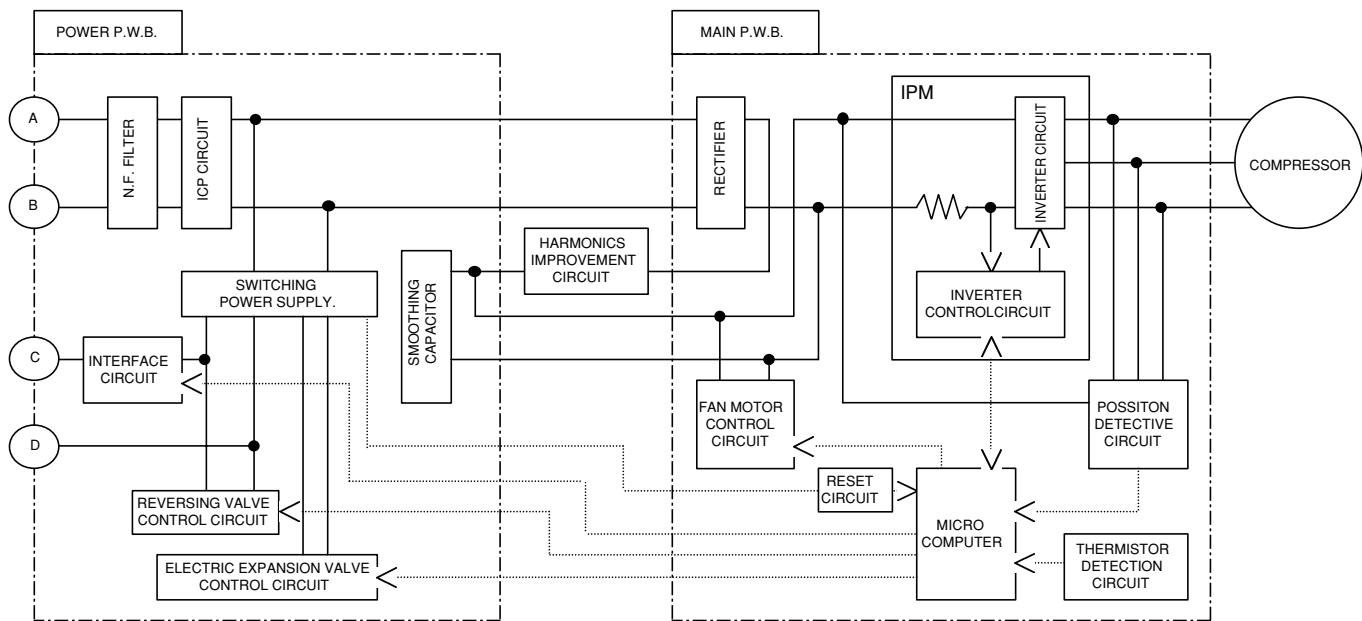


FIG1—1



(3) C021 and C022

This smoothes the voltage rectified for operating the compressor.

When the input voltage is taken for the sine wave as shown in the top of Fig. 2-4, it is rectified by the DB2 and becomes the waveform as shown in the middle of Fig. 2-4. After that, the voltage is smoothed by the C021 and C022, and becomes the waveform shown in the bottom of Fig. 2-4.

(4) DB1 and C41

The DB1 rectifies the input voltage and the C41 smoothes it for the control power supply.

If the units above have any failure, the control power supply won't operate. In such a case, replace the power P.W.B.

(5) C001 to C003, C011, L101, and L102

They absorb electrical noise generated during operation of compressor, and also absorb external noise entering from power line to protect electronic parts.

Be sure to connect the earth cable between the indoor unit and the outdoor unit. Otherwise, the noise filter circuit won't operate properly.

(6) SA1 and VS1 to VS3

These surge absorber and varistors absorb external power surge such as induced thunder.

Be sure to connect the earth cable between the indoor unit and the outdoor unit. Otherwise, the surge absorber and the varistors won't operate.

(7) R002 and R007

The resistor R002 protects the rush current when the power is turned on while the resistor R007 protects the rush current when the compressor starts.

When the R002 has any failure, the control power supply won't operate. When the R007 has any failure and a strong rush current is generated, the DB2, C021 or C022 may be damaged.

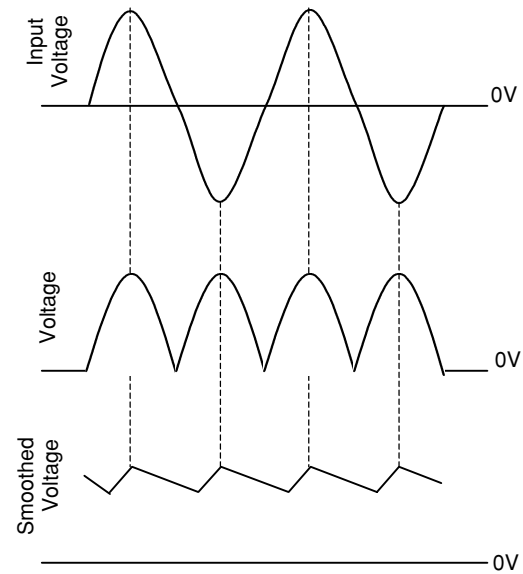


FIG2-4

3. Indoor/Outdoor Interface Circuit

The interface circuit superimposes an interface signal on the DC 35V line to perform communications between indoor and outdoor units. This circuit consists of a transmitting circuit which superimposes an interface signal transmit from the microcomputer on the DC 35V line and a circuit which detects the interface signal on the DC 35V line.

Communications are performed alternatively transmitting and receiving.

3-1 Communication signal from outdoor microcomputer to indoor microcomputer.

At first outdoor microcomputer will send a request signal (SDO) to indoor microcomputer.

38 KHz of carrier signal is generated and modulated by the request signal (SDO) from the outdoor microcomputer pin 11.

This signal is superimposed to DC 35V line via C801 and L801.

To prevent erroneous reception, the outdoor microcomputer is designed so that it cannot receive a signal while it is outputting a request signal.

The receiving circuit in the indoor unit consists of a comparator and transistor. The interface signal from the outdoor unit on the DC 35V line is supplied to C821, where DC components are eliminated, and is then shaped by the comparator. The shaped signal is detected by diode, amplified by amp, and output to pin 49 of the indoor microcomputer.

Fig. 3-2 shows the waveforms at each component when data is transferred from the outdoor microcomputer to the indoor microcomputer.

3-2 Communication signal from indoor microcomputer to outdoor microcomputer.

The request signal (SDO) generates by indoor microcomputer is output to pin 50, and amplifies by Q801.


I/F signal approx. 38 kHz is generated by comparator, then modulated by the signal from pin 50 of indoor microprocessor.

This modulated I/F signal is then amplified and superimposed to DC 35V line via L801 and C802 of indoor interface circuit.

Fig. 3-3 shows the waveforms at each component when data is transferred from outdoor microcomputer to indoor microcomputer.

The circuit operation of the outdoor receiving circuit is same as indoor receiving circuit.

Fig. 3-1 shows the interface circuit used for the indoor and outdoor microcomputers to communicate with each other.

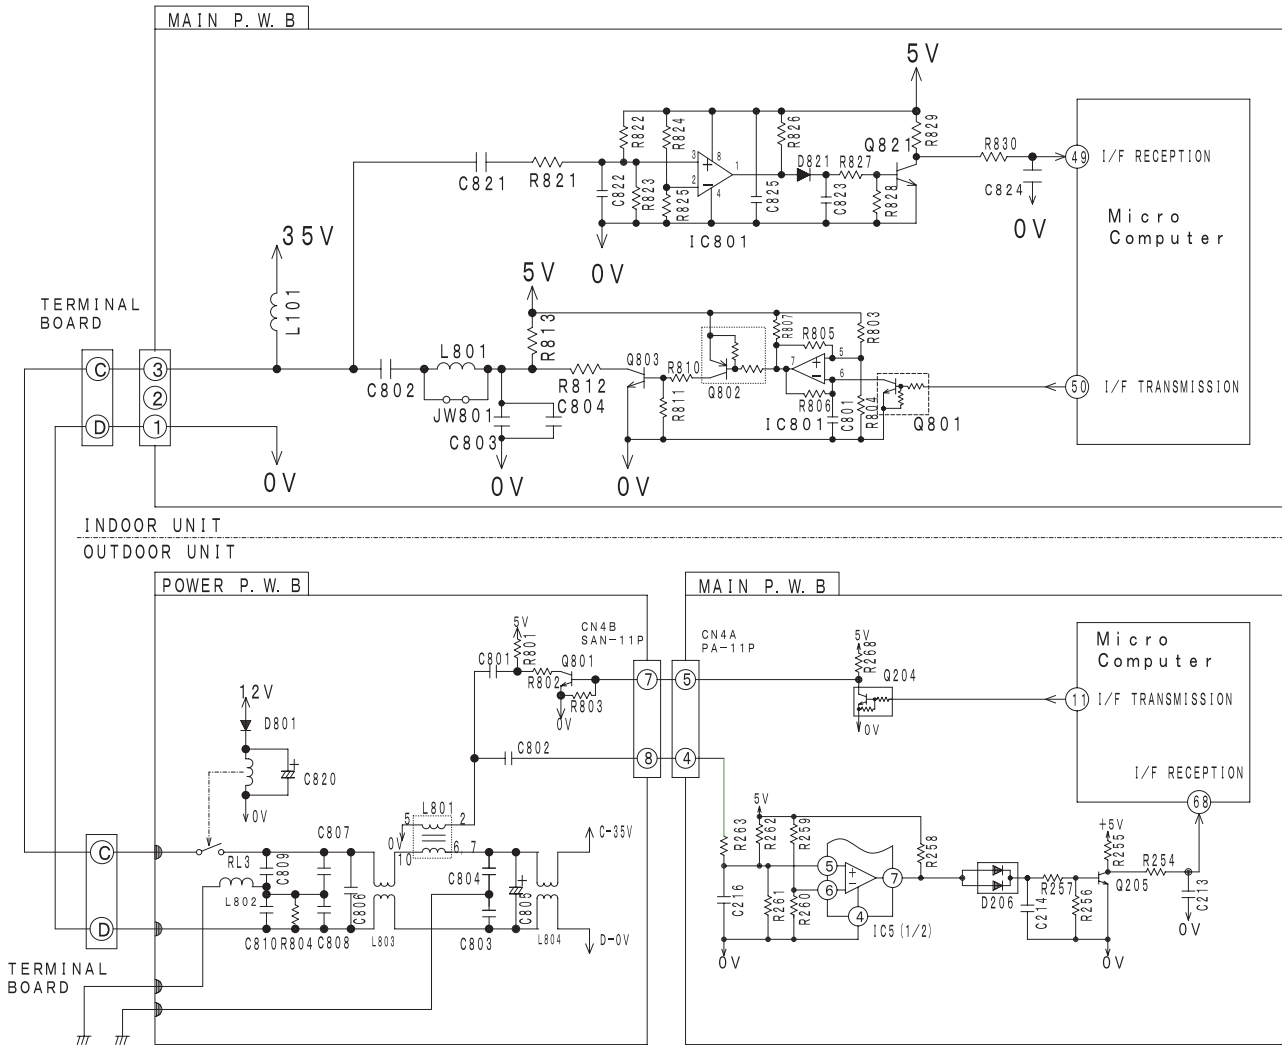

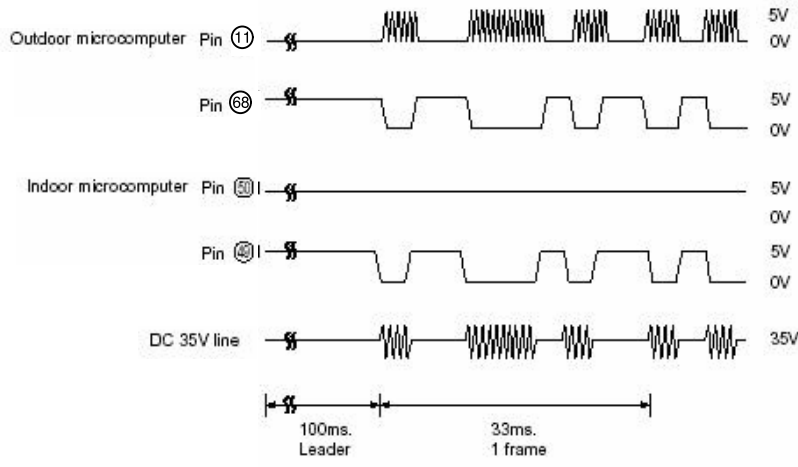


Fig. 3-2 Voltages Waveforms of indoor / Outdoor Microcomputers (Outdoor to Indoor Communications)

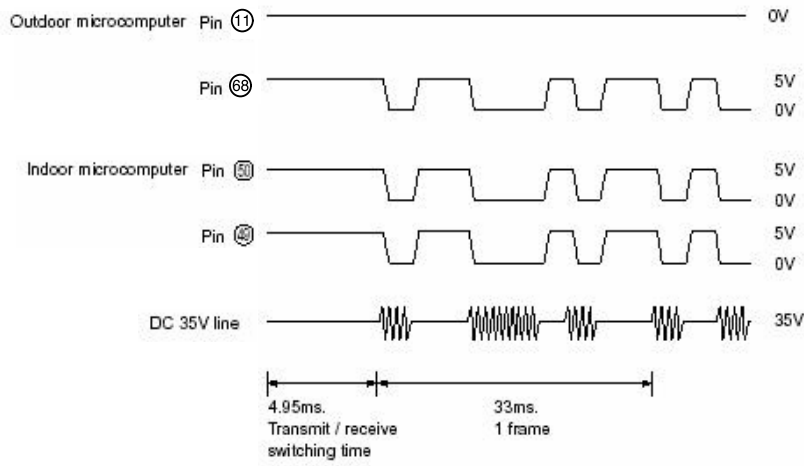


Fig. 3-3 Voltages Waveforms of indoor / Outdoor Microcomputers (Indoor to Outdoor Communications)

[Serial Communications Data]

(1) Outdoor message

Character No.	0								1							2							3									
Bit No.	0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7
Contents	Multi-bit		During forced operation	Defrost request signal	Self-diagnosis (0 LSB)	Self-diagnosis (1)	Self-diagnosis (2)	Self-diagnosis (3 MSB)	Outside temperature (0 LSB)	Outside temperature (1)	Outside temperature (2)	Outside temperature (3)	Outside temperature (4)	Outside temperature (5)	Outside temperature (6)	Outside temperature (7 MSB)	Compressor during operation	Compressor during operation	Actual compressor rotation speed (0 LSB)	Actual compressor rotation speed (1)	Actual compressor rotation speed (2)	Actual compressor rotation speed (3)	Actual compressor rotation speed (4)	Actual compressor rotation speed (5 MSB)	Fan-7-step request							
Data	1/0	0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	0	1	0	0	0	0	0	

(2) Indoor message

Character No.	0								1							2							3									
Bit No.	0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7	0	1	2	3	4	5	6	7
Contents	Operation mode (0 LSB)	Operation mode (1)	Operation mode (2 MSB)	Indoor in-operation bit	Capacity code (0 LSB)	Capacity code (1)	Capacity code (2)	Capacity code (3 MSB)	Fan (0 LSB)	Fan (1)	Fan (2 MSB)	2-way valve	Reversing valve		Compressor ON	Compressor command speed (0 LSB)	Compressor command speed (1)	Compressor command speed (2)	Compressor command speed (3)	Compressor command speed (4)	Compressor command speed (5)	Compressor command speed (6)	Compressor command speed (7 MSB)	15/20(A)	OVL up							
Data	1/0	1/0	1/0	1/0	0	0	0	0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0		

4. IPM (Intelligent Power Module)

- Fig.4-1 shows the intelligent power module and its peripheral circuit. The three transistors on the positive e side are called the upper arm, and the three transistors on the negative d side, the lower arm.

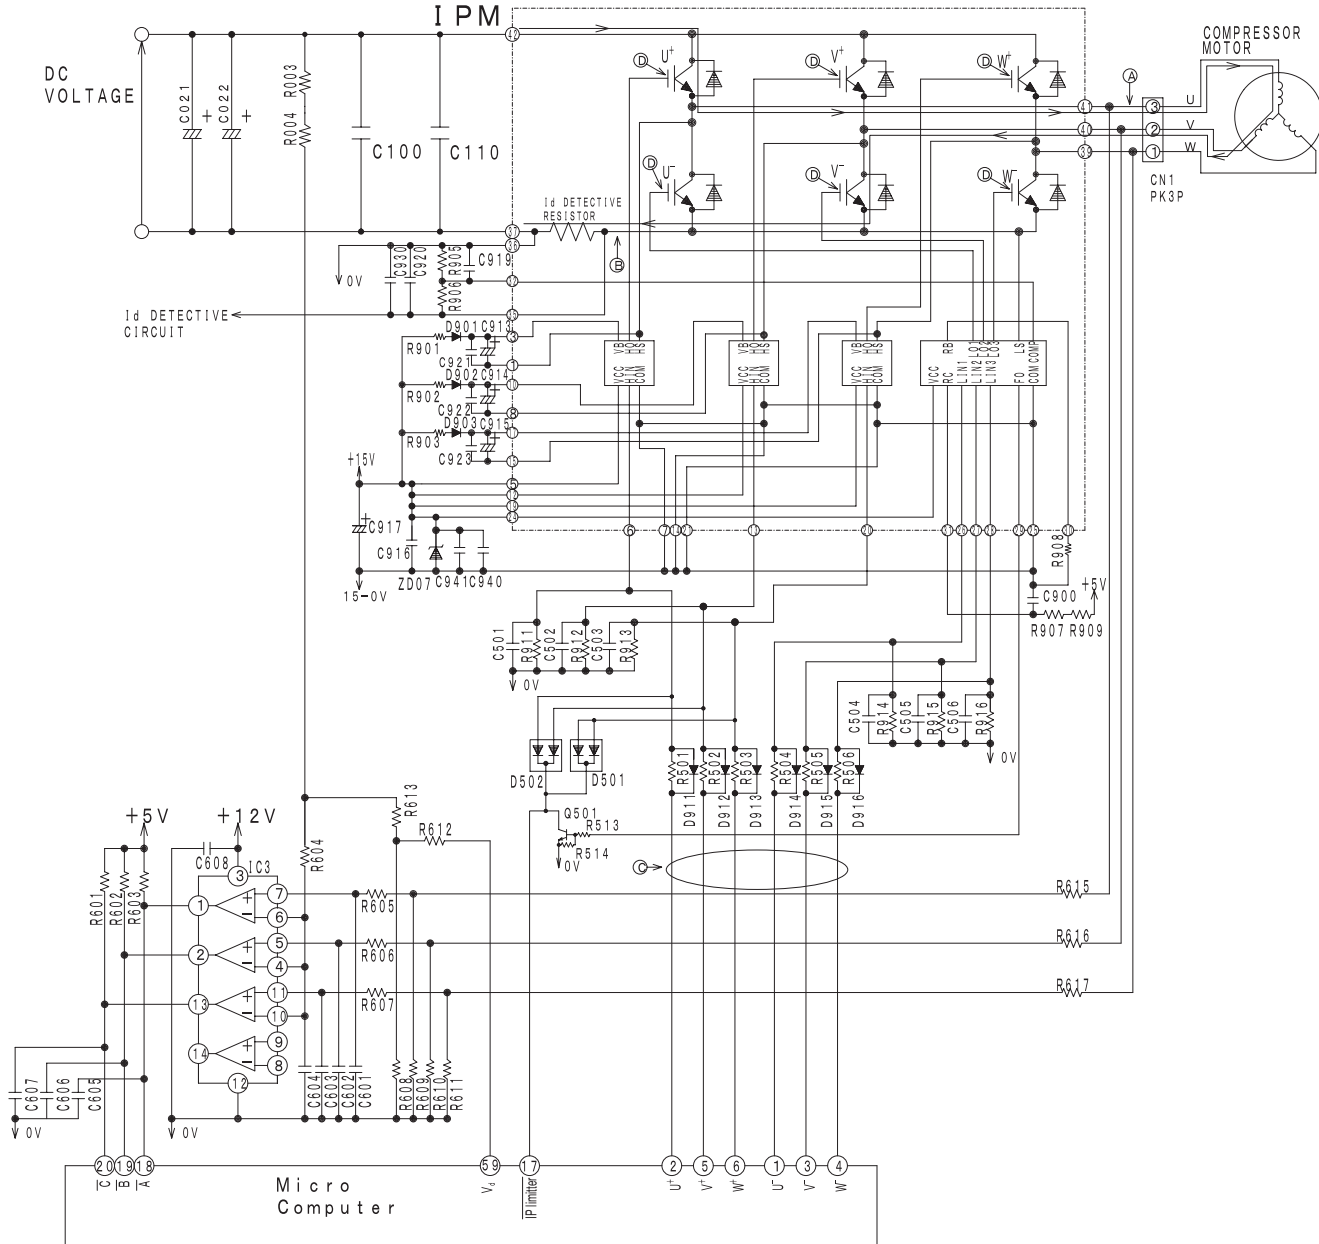


Fig. 4-1 Intelligent power module circuit (U⁺ is ON, V is ON)



Intelligent power module switches power supply current according to position of the compressor motor rotor.

The switching order is as shown in Fig. 4-2.

At point E: U⁺ is ON, V is ON (circuit in Fig. 4-1)

At point F: U⁺ is chopped (OFF), V is ON (circuit in Fig. 4-4)

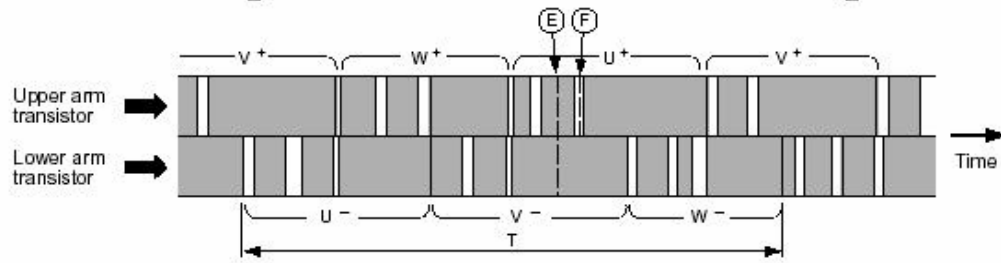


Fig. 4-2 Switching order of power module

Upper arm transistor is controlled to ON/OFF by 3.3kHz chopper signal. Rotation speed of the compressor is proportional to duty ratio (ON time/ ON time + OFF time) of this chopper signal.

Time T in Fig. 4-2 shows the switching period, and relation with rotation speed (N) of the compressor is shown by formula below;

$$N = 60/2 \times 1/T$$

Fig. 4-3 shows voltage waveform at each point shown in Figs. 4-1 and 4-4. First half of upper arm is chopper, second half is ON, and first half of lower arm is chopper, second half is ON.

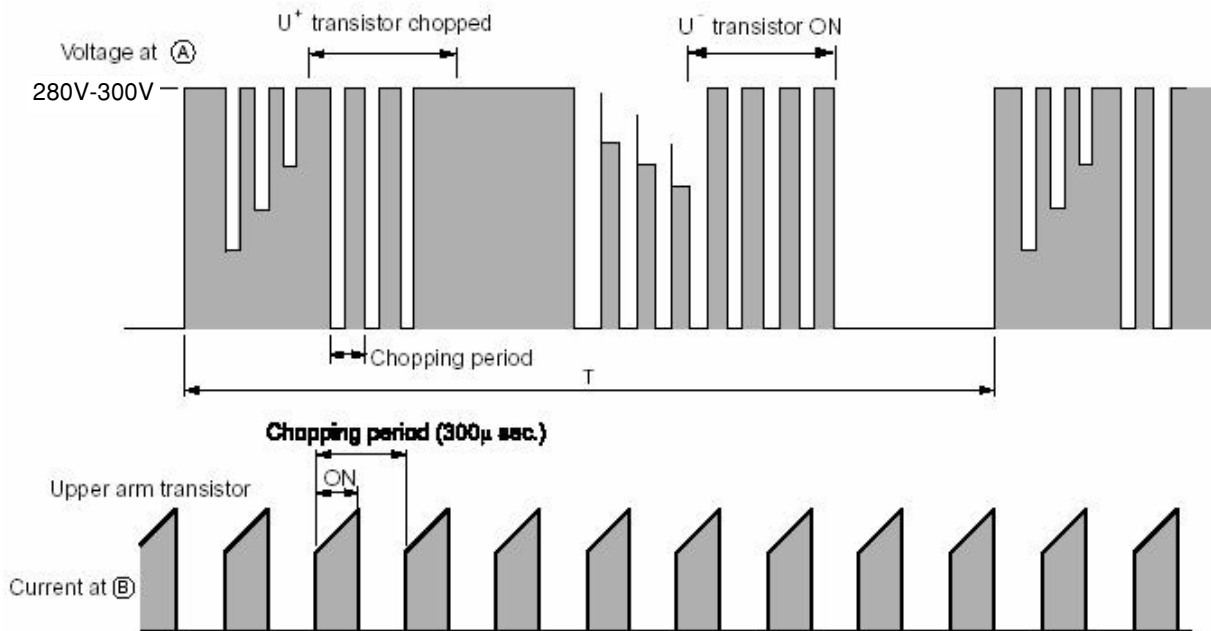


Fig. 4-3 Voltage waveform at each point

When power is supplied U⁺ [U, because of that U⁺ is chopped, current flows as shown below;

- (1) When U⁺ transistor is ON: U⁺ transistor → U coil → V coil → V transistor → DC current detection resistor → Point (B) (Fig. 4-5)
- (2) When U⁺ transistor is OFF: (by inductance of motor coil) U coil → V coil → V transistor → Return diode → Point (A) (Fig. 4-5)



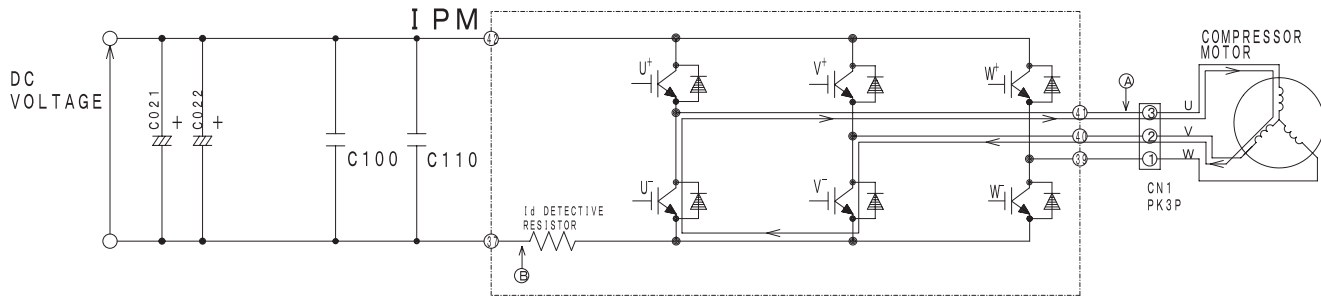


Fig. 4-4 Power module circuit (U⁺ is ON, V⁻ is ON)

Since current flows at point (B) only when U⁺ transistor is ON, the current waveform at point (B) becomes intermittent waveform as shown in Fig. 4-3. Since current at point (B) is approximately proportional to the input current of the air conditioner, input current is controlled by using DC current (I_d) detection resistor.

<Reference>

If power module is defected, self diagnosis lamps on the MAIN P.W.B. may indicate as shown below:

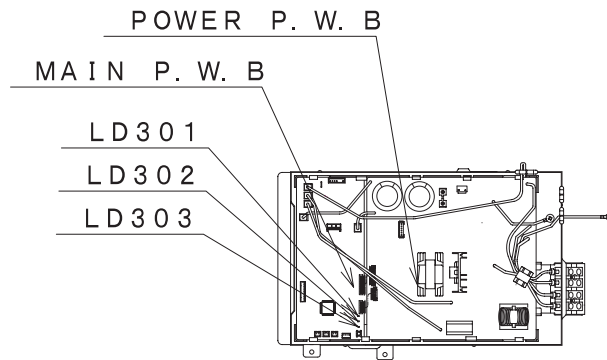


Fig. 4-5

Table 4-1

Self-diagnosis	Self-diagnosis lamp and mode	
I _p (peak current cut)	LD301	Blinks 2 times
Abnormal low speed rotation	LD301	Blinks 3 times
Switching incomplete	LD301	Blinks 4 times





- IPM drive circuit

The inverter driving device (IGBT) and the drive circuit are built in the IPM. The IPM receives the signal from the microcomputer and convert it to 0 – 15 V signal to drive the IGBT.

When the unit operates at low speed, a chopper signal is emitted from the micro computer as shown in Fig. 4-6. (0 to 5 V)

The signal is converted to 0 – 15 V at inside the IPM and transmitted to the gate of the transistor (IGBT) in each phase to drive the IGBT.

When abnormal peak current was detected while the inverter is driving, the IPM outputs the Fail signal immediately from the pin (29) and forces the lower arm transistor to shut off at the same time. In this step, the Q501 is turned on and the input signal of the upper arm is also shut off through the D501 and D502, so that all signals to the IGBT are shut off. This signal is also distributed to microcomputer (17 pin) as a Lo signal to stop the drive signal and blink the self diagnosis lamp as two time.

When the peak current is detected, the IPM keeps the lower arm off for about 4mS and the drive signal into stand-by state. 3 minutes after this state, the micro computer outputs the drive signal and restarts the operation.


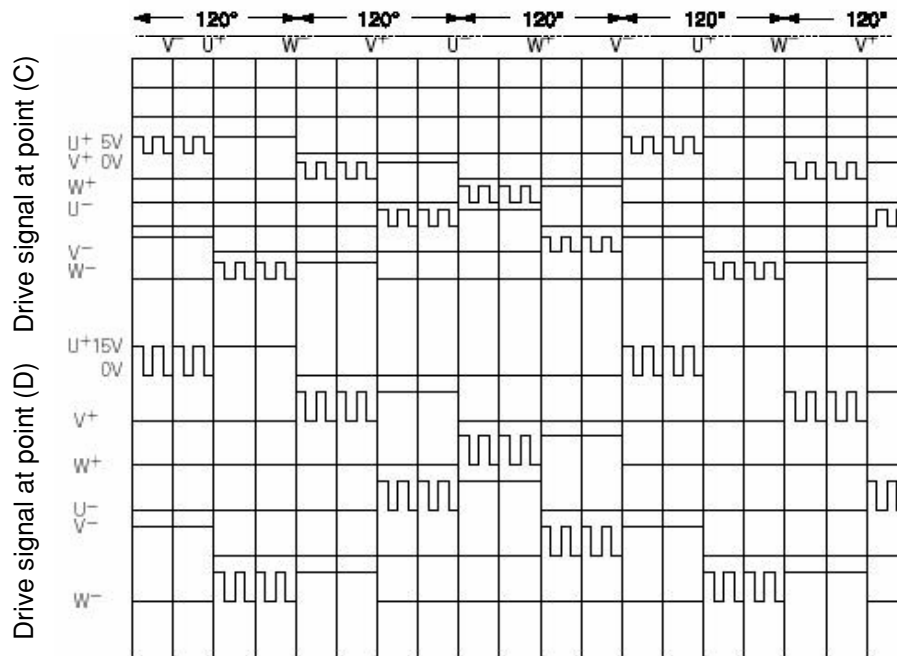


Fig. 4-6

5. Power Circuit for P.W.B

- Fig. 5-1 shows the power circuit for P.W.B.

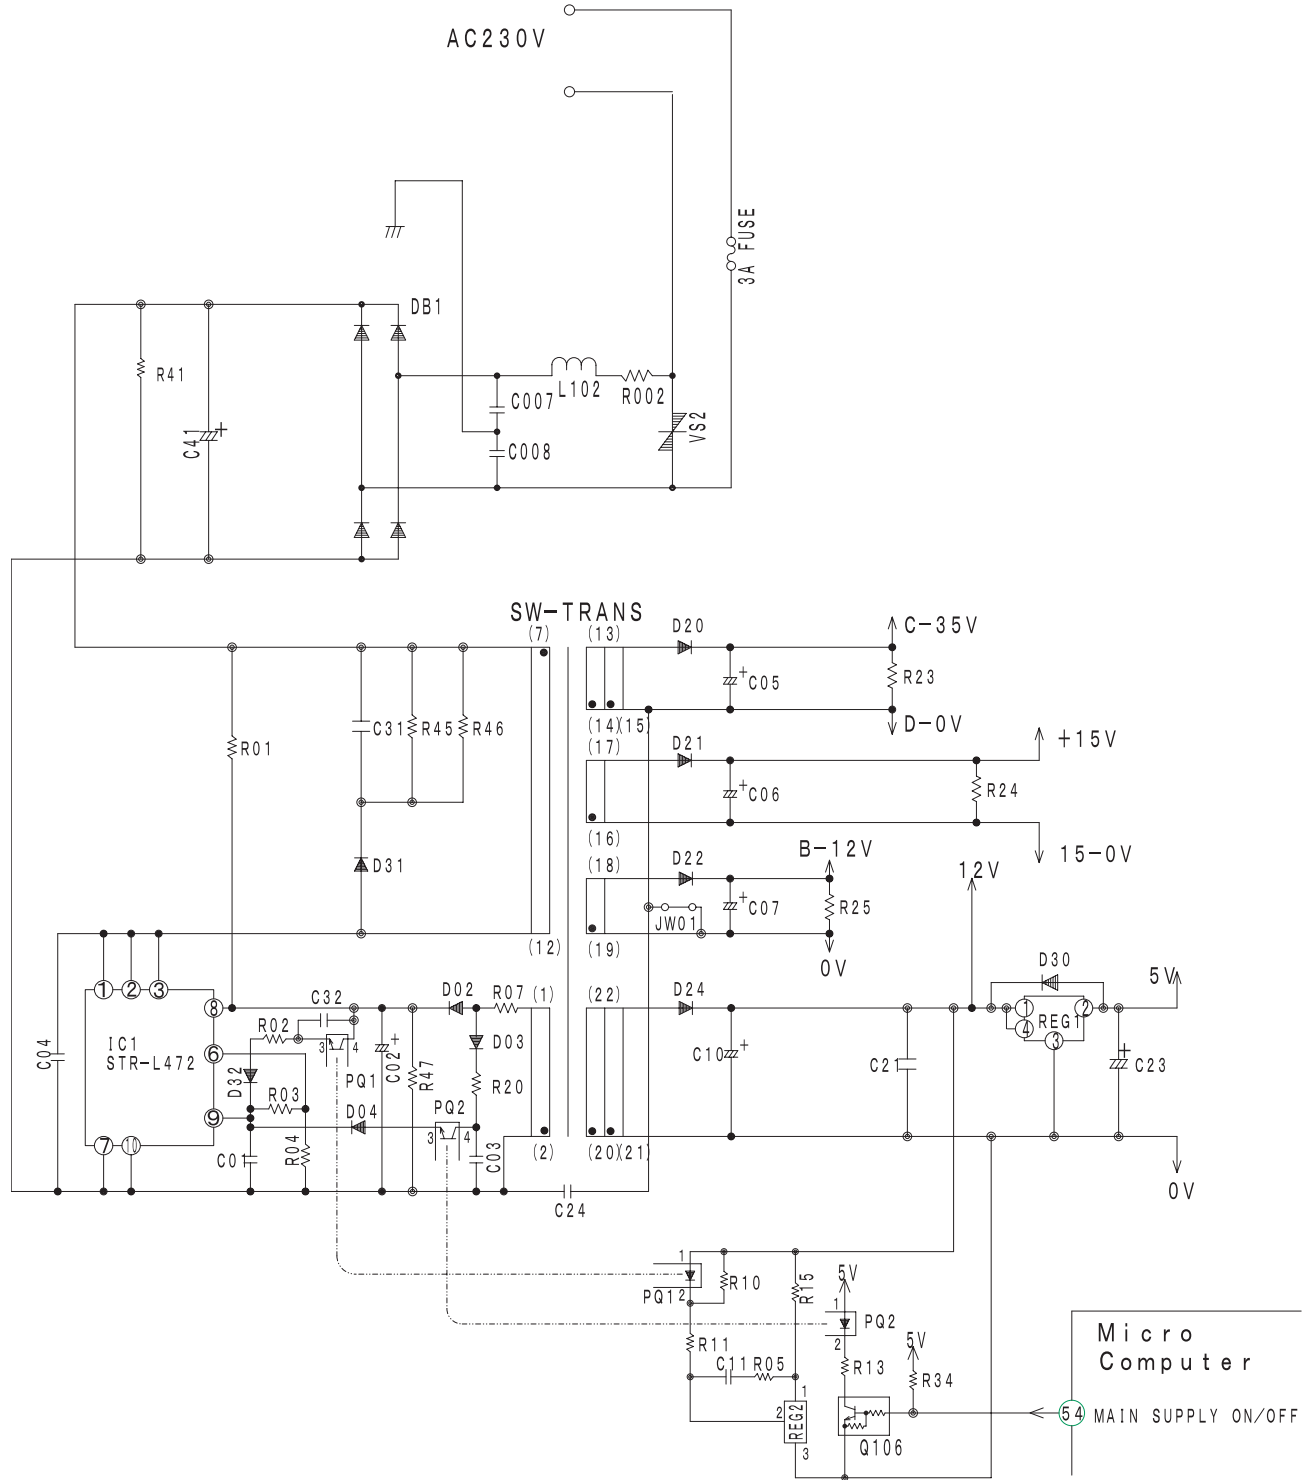

- In the power circuit for P.W.B., power supply for microcomputer, peripheral circuits, and IPM driver circuit and, as well as DC 35V, are produced by switching power circuit.
- Switching power circuit performs voltage conversion effectively by switching transistor IC1 to convert DC 330V voltage to high frequency of about 20kHz to 200kHz.

- The voltage specification of the power circuit is as follows.

<Check points>

Output	Voltage spec.	Main load	Measuring points		Potential failure modes
			+	-	
12V	11-13V	MAIN P.W.B. (CN3, CN4)	R701 ("12V" display) C21 ("12V" display)	R006 ("0V" display) J27, J30	The unit won't operate MAIN P.W.B. error
5V	4.5-6V	MAIN P.W.B. (CN3, CN4)	D30 anode ("5V" display) J25	R006 ("0V" display) J27, J30	The unit won't operate MAIN P.W.B. error
B-12V	11-16V	Expansion valve	R25 ("B-12V" display)	R25 ("B-0V" display)	LD301 blinks 5 times; Expansion valve error
15V	14-17V	DC fan motor (CN24) MAIN P.W.B. (CN3, CN4)	C06+ side	C06- side	LD301 blinks 3 times,
35V	33.5-38V	Indoor unit electrical parts (Terminal C,D) Reversing valve (CN2)	D20 cathode ("C-35V" display) Terminal C (blown line)	J5, j17 Terminal D (red line)	Indoor unit won't operate

- Check each voltage. If each voltage meets the voltage specification above, the power circuit is normal.
- If any error is found after checking, remove all loads and recheck each voltage.
If no error is found in this step, the power circuit is normal. Check the removed loads.
If any error is found in this step, the power circuit has any failure. Replace the power P.W.B.
- * A short-circuited load may cause an output error not only in the load but also in the others. Be sure to check all outputs of the loads.
- * Be sure to wait 15 minutes or more in order to discharge all the remaining voltage in the circuit to connect/disconnect the wiring, other wise, the components may be damaged.
- The failures of the loads are as follows.

Failed output	Possible causes	Criterion
35V	Reversed connection of the cable. Electrical part for the indoor unit has a failure. Short-circuited reversing valve	Connect the cable correctly. Remove the connection cable and measure the voltage. If the voltage is correct, check the electrical parts for the indoor unit. Remove the CN2 and measure the voltage. If the voltage is correct, check the reversing valve.
15V	DC fan motor error Main P.W.B. error	Remove the CN24 and measure the voltage. (connect the CN3.) If the voltage is correct, check the DC fan motor. Also, check the main P.W.B 1 A fuse for blow out in this step. Remove the CN3 and CN4 and measure the voltage. If the voltage is correct, check the main P.W.B.
12V, 5V	Main P.W.B. error	Remove the CN3 and CN4 and measure the voltage. If the voltage is correct, check the main P.W.B.

6. Microcomputer's Peripheral Circuits

6-1. Overload control circuit (OVL control circuit)

Overload control is to decrease the speed of the compressor and reduce the load when the load on the air conditioner increases to an overload state, in order to protect the compressor, electronic components and power breaker.

Overloads are judged by comparing the DC current level and set value

Fig.6-1 shows the overload control system configuration and Fig. 6-4 is a characteristic diagram on overload judgement values. There are two types of control which has named IS OVL and ID OVL.

IS OVL is limiting the whole input of this room air conditioner system through the current sensor CT1 in order to keep the maximum rating of components by reading total operating current.

ID OVL is watching and limits the compressor current through the detection resistor, which is built in IPM in order to control the compressor reliability. Since the compressor reliability is related with its speed, the ID OVL value is also linked with the compressor speed. FIG6-2 shows an ID OVL limitation curve.

All of OVL operation values were programmed into EEPROM memory.

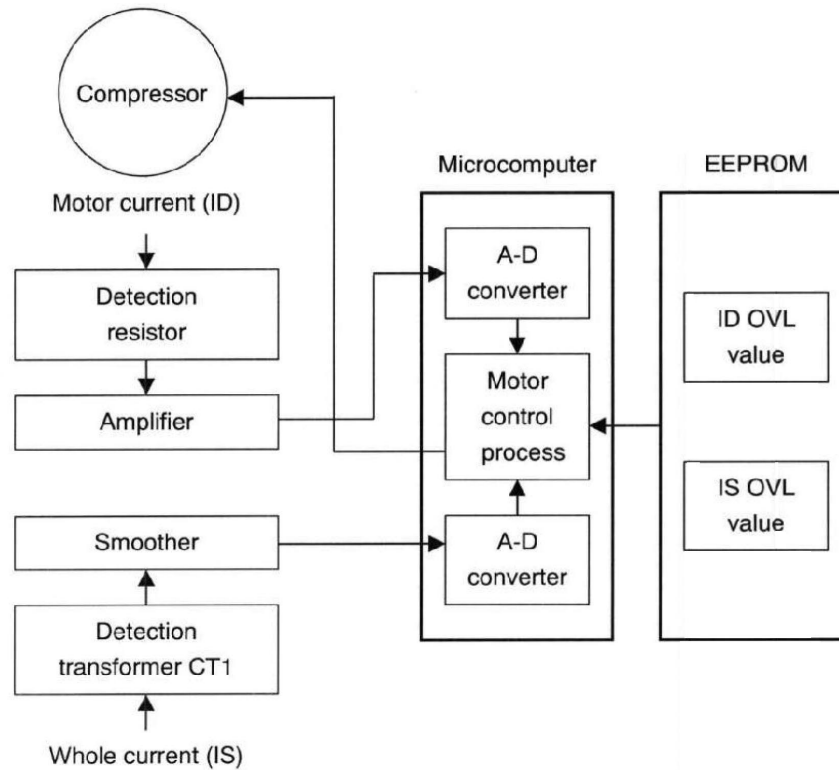


Fig. 6-1 Overload Control System

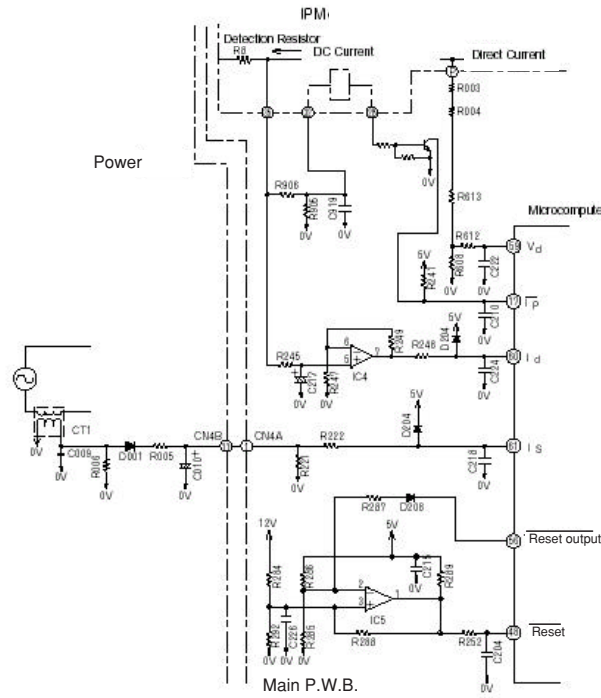


Fig. 6-2

(1). IS OVL

The voltage amp. circuit amplifies the DC current level detected by the detection transformer CT1. Receiving this, the microcomputer converts it to a digital signal and compares it with the internal data to judge whether or not overload control is required.

< During overload control >

The filter consisting of R245 and C217 removes high harmonic components from the voltage generate from the DC current flowing to the detection resistor, and supplies it to IC4 pin (5). IC4 forms a non-inverting voltage amp. circuit together with the peripheral elements.

The microcomputer stores the set values which vary according to the rotation speed. When the DC current level exceeds the set value, the microcomputer enters the overload control state.

The set Value is determined by the amplification of the voltage amp. circuit

- Amplification : high → DC current : low
- Amplification : low → DC current: high

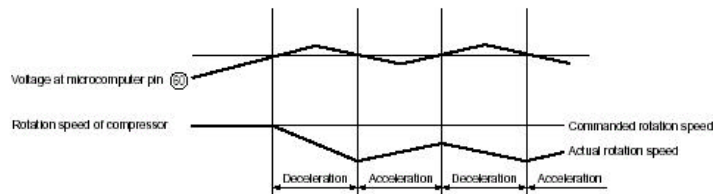


Fig. 6-3

(2). ID OVL

Fig. 6-2. The filter consisting of R245 and C217 removes high harmonic frequencies from the voltage generated by the current flowing to Detection resistor; R245 and C217 average the voltage. This voltage is then input to IC4 pin (5) and supplied to microcomputer pin (60) . The microcomputer compares this input with the set value, and if the input exceeds the set value, it enters overload control status.

Fig. 6-3 shows the rotation speed control. When the voltage at pin (60) of the microcomputer exceeds the set value, the microcomputer decreases the rotation speed of the compressor and reduces the load.

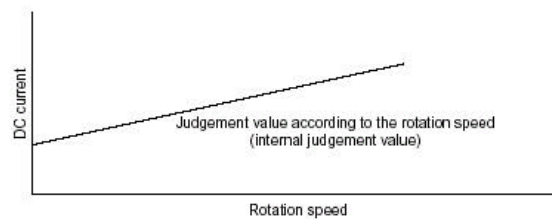


Fig. 6-4



R003,R004,R608,R613, detect the DC voltage at the power circuit. The microcomputer receives a DC voltage (260-380V) and applies correction to the overload set value so the DC current will be low when the DC voltage is high.

(Since the load level is indicated by the DC voltage multiplied by DC current, R247, R248, R249 are provided to perform the same overload judgement even when the voltage varies.)

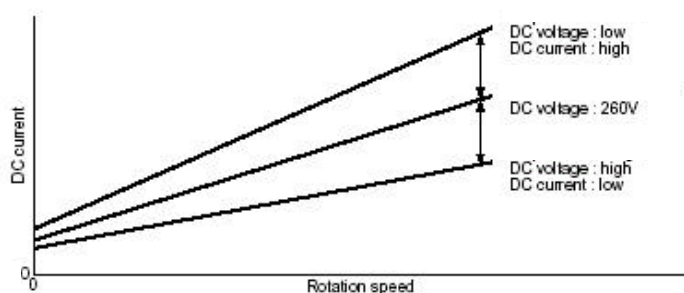


Fig. 6-5

(3). Start current control

It is required to maintain the start current (DC current) constant to smooth the start of the DC motor of the compressor.

RAC-25YH4, RAC-35YH4 uses software to control the start current

The start current varies when the supply voltage varies. This control method copes with variations in the voltages as follows.

- (1) Turns on the power module's U+ and V transistors so the current flows to the motor windings as shown in Fig. 6-6.
- (2) Varies the turn-ON time of the W+ transistor according to the DC voltage level and the start is controlled so the start current is approx. 10A .

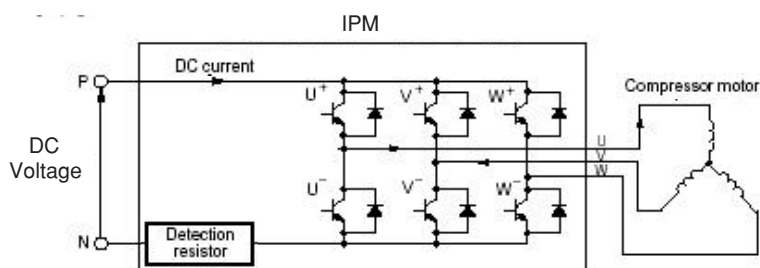


Fig. 6-6

6-2. Reset Circuit

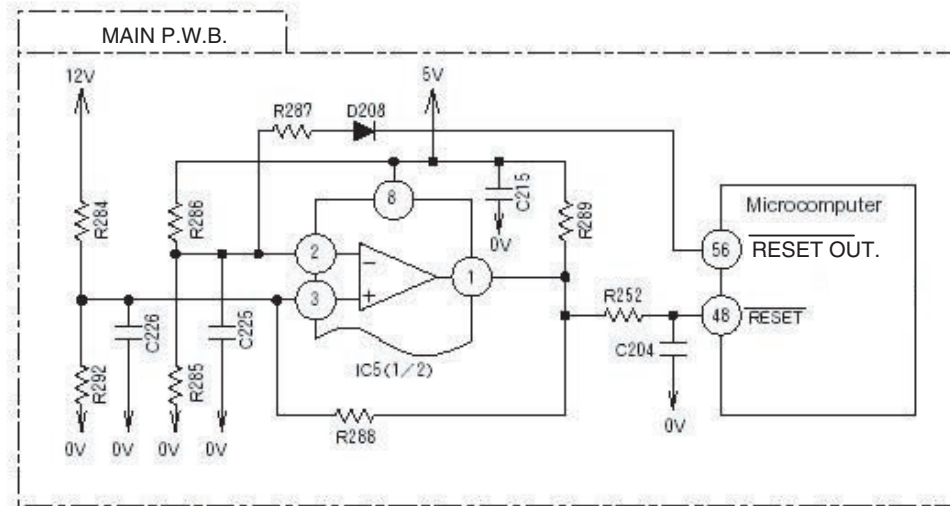


Fig. 6-7

The reset circuit initializes the microcomputer program when Power is "ON" from "OFF". Low voltage at pin (48) resets the microcomputer, and HI activates the microcomputer. Fig. 6-7 shows the reset circuit and Fig. 6-8 shows waveform at each point when power is turned on and off.

When power is turned on, 12V line and 5V line voltages rise and 12V line voltage reaches 10.9V, a reset voltage input to pin (48) of microcomputer is set to Hi.

Reset voltage will be hold "Hi" until the 12V line voltage drops to 9.90V even though the power shuts down.

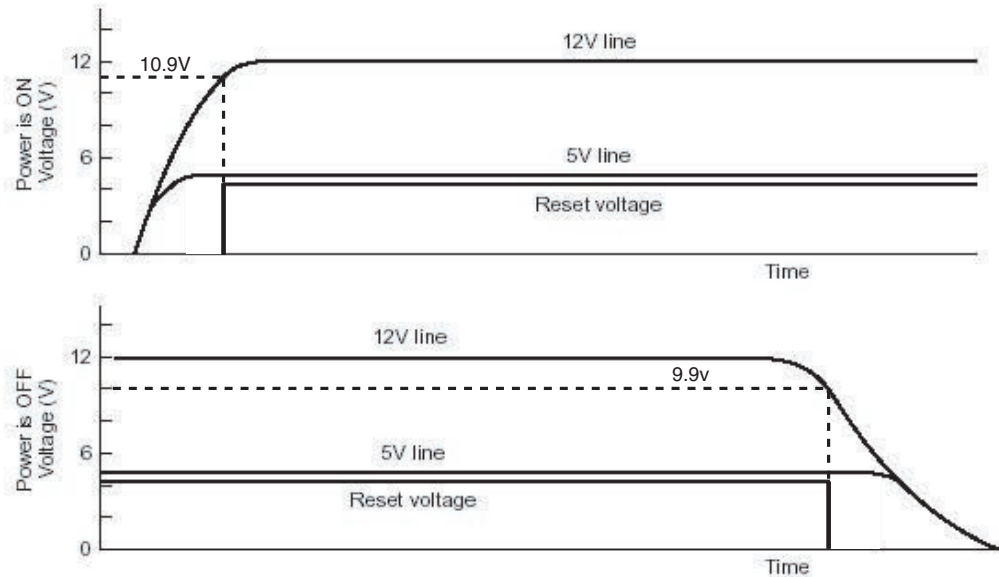


Fig. 6-8

7. Temperature Detection Circuit

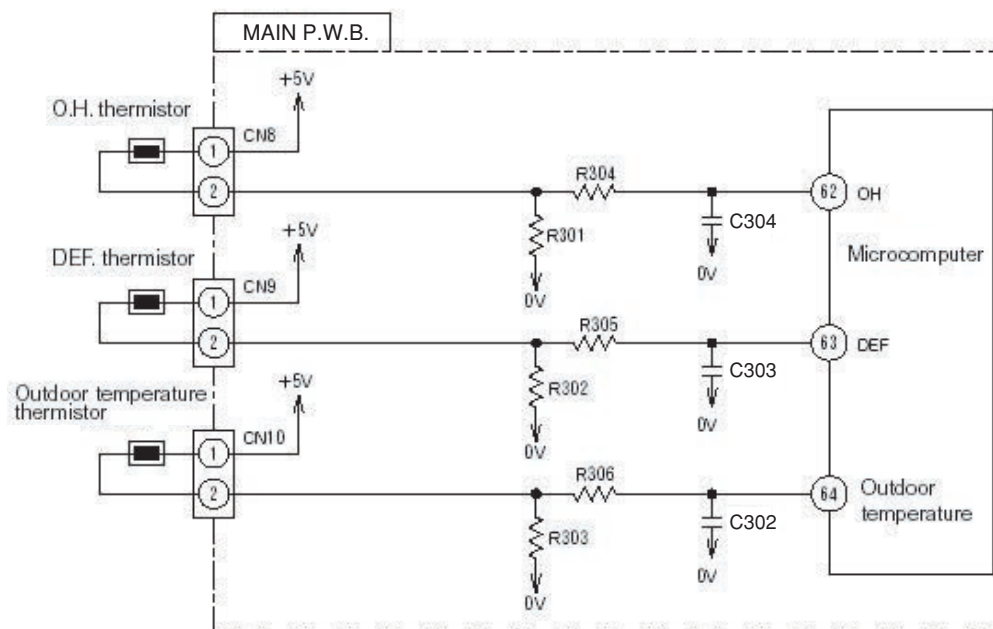


Fig. 7-1

The Over heat thermistor circuit detects the temperature at the surface of the compressor head, the Defrost thermistor circuit detects the defrosting operation temperature.

A thermistor is a negative resistor element which has the characteristics that the higher (lower) the temperature, the lower (higher) the resistance.

When the compressor is heated, the resistance of the Over heat thermistor becomes low and voltage to a pin (62) of microcomputer is increased.

Microcomputer compares the voltage at pin (62) with the internal set value, if it exceeded the set value microcomputer judges that the compressor is overheated and stops operation.

When frost forms on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the Defrost thermistor becomes high and the voltage at pin (63) of microcomputer drops. If this voltage becomes lower than the set value stored inside, the microcomputer starts defrosting control. During defrosting operation the microcomputer transfers the defrosting condition command to the indoor microcomputer via the circuit interface.

The microcomputer always reads the outdoor temperature via a thermistor (microcomputer pin (64)), and transfers it to the indoor unit, thus controlling the compressor rotation speed according to the value set at the EEPROM in the indoor unit, and switching the operation status (outdoor fan on/off, etc.) in the dehumidifying mode.

The following shows the typical values of outdoor temperature in relation to the voltage:

Table 7-1

Outdoor temperature (°C)	-10	0	10	20	30	40
R303 Voltage(V)	1.19	1.69	2.23	2.75	3.22	3.62

<Reference>

When the thermistor is open, in open status, or is disconnected, microcomputer pins (62) (64) are approx. 0V; when the thermistor is shorted, they are approx. 5 V, and LD301 blinks seven times.

However, an error is detected only when the OH thermistor is shorted; in such a case, the blinking mode is entered 12 minutes after the compressor starts operation.

8. Reversing valve control circuit

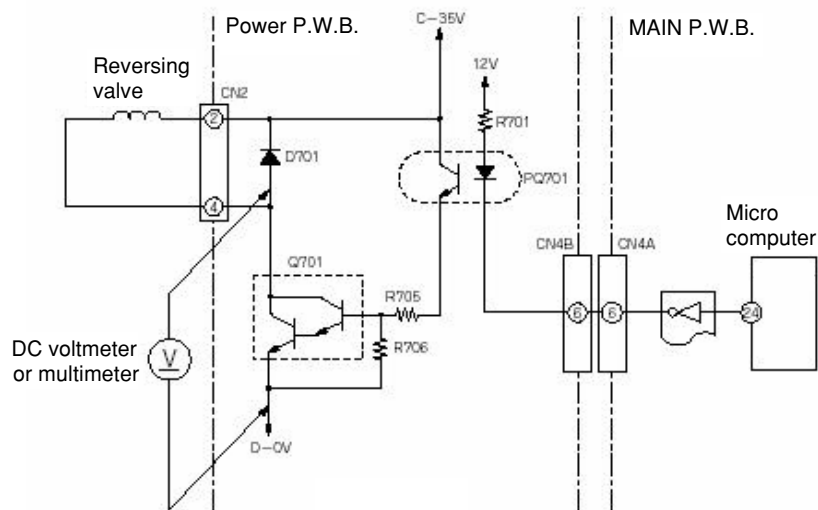


Fig. 8-1

Reversing valve control circuit will switch reversing valve ON/OFF according to instruction from indoor microcomputer depending on the operation condition shows in Table 8-1. Voltage at Q701 (between Collector and Emitter) in each operation condition is approximately as shown in Table 8-1 when measured by multimeter.

Table 8-1

Operation condition		Collector voltage of Q701
Cooling	General operation of Cooling	About 35V
Heating	In normal heating operation	About 0.8V
	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 0.8V
	Defrosting	About 35V
Dehumidifying	Sensor dry	About 35V

9. Electric expansion valve control circuit

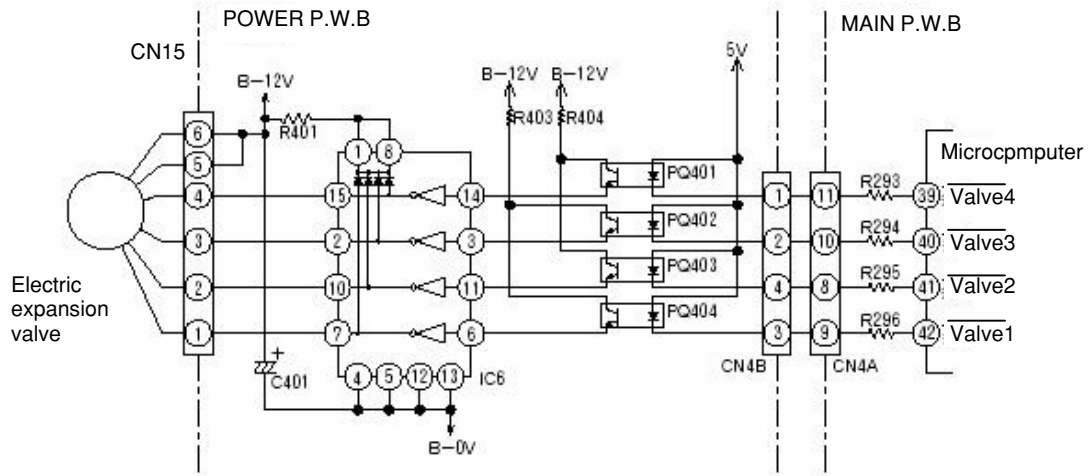


Fig. 9-1

- To drive the expansion valve, use the B-12 V output. Use a 4-phase coil and feed power to the phases 1 and 2, then switch over the filed poles to control the opening of the valve.
- The reference between conducting phase switch over direction and the open/close direction are shown in Table 9-1. When the power is turned on, approx. 0.9 V is applied to the CN15 and the pins ((1) to (4)) and when no power is supplied, 12 V is applied. When the power is reset, the expansion valve starts initial operation for 5 to 10 seconds.
- During the initial operation, measure each pin of the CN15 ((1) to (4)) with a multimeter. If no change is found around 0.9 V or 12V in this step, the expansion valve or the micro computer has failure.
- The logic waveform during the operating of the expansion valve is shown in Fig. 9-2.

Table 9-1

CN15 pin#	Lead wire	Driving state							
		1	2	3	4	5	6	7	8
④	White	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
③	Yellow	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
②	Orange	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
①	Blue	OFF	OFF	OFF	OFF	OFF	ON	ON	ON
Operation mode 1→2→3→4→5→6→7→8 VALVE CLOSE 8→7→6→5→4→3→2→1 VALVE OPEN									


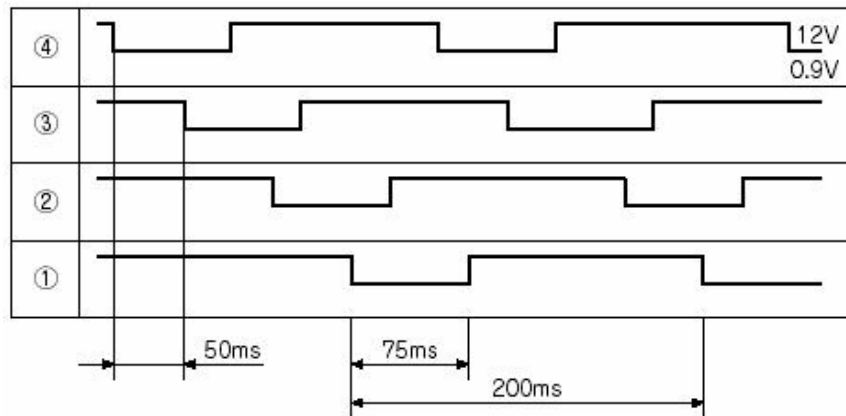


Fig.9-2

10. Outdoor DC Fan Motor control circuit

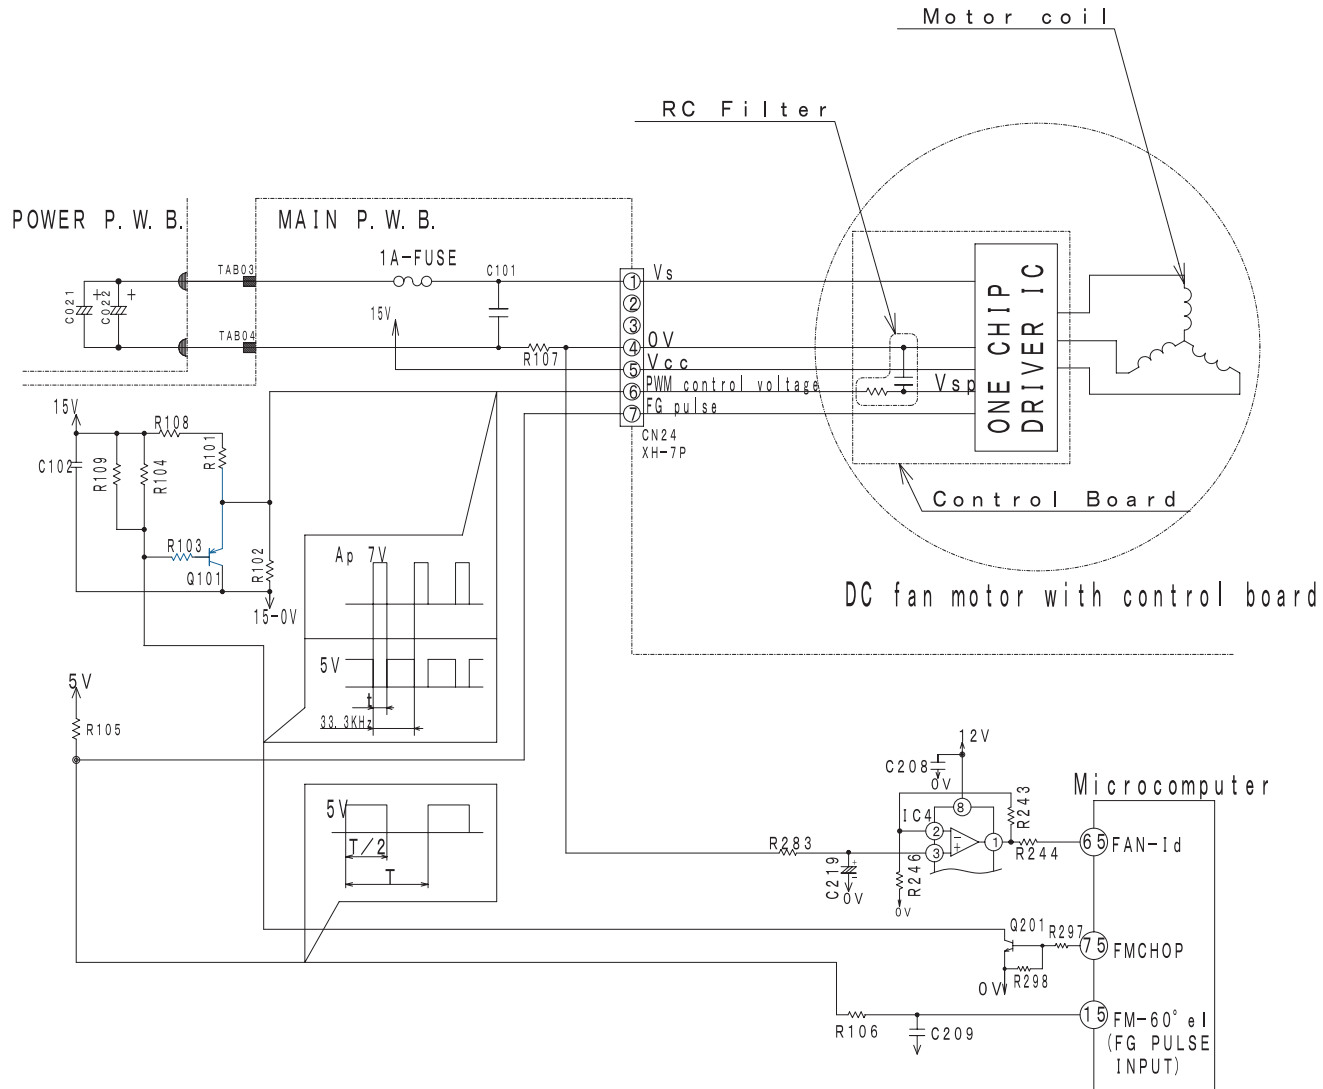

This model uses DC Fan Motor which has a controller circuit built in the Motor

This DC Fan Motor will rotate by control voltage apply to Vsp input. (Voltage range: 1.7 to 7V DC

Vsp high : Faster ; Vsp low : slower ; Vsp lower than 1.7V : stop

Motor will output FG pulse by following this motor revolution

Outdoor microcomputer will output PWM control signal from (75) by following the instruction from indoor microcomputer.

This PWM control signal will convert to Vsp voltage by smoothing circuit (R242 & C209)

Fan motor will start to rotate when Vsp was proceeding over than 1.7V, and generate FG pulse by rotation speed.

FG pulse will feed back to Outdoor microcomputer (15)

DC Fan Motor circuit has to match the Fan Motor revolution with instructed revolution. Such as...

FG feedback: Faster Instruction: Slower ... Decrease pulse width

FG feedback: Slower Instruction: Faster ... Increase pulse width

FG pulse is also used for Fan Motor failure detection

Microcomputer will monitor FG pulse 30 seconds after start the fan motor. If there is no signal detected, it will consider that the Fan Motor was malfunction and stop the operation. In this case, LD302 on control PWB will blink 12 times. (Fan Motor lock detected)

R107 and IC4 are used for Fan Motor over current.



< Reference >

When operation stop with LD301 blinks 12 times, it may be caused by faulty DC fan motor

In this case, please check CN6 and CN12 connection first. It makes Fan Motor Lock also if those connectors are in misconnection.

DC Fan Motor has broken invites 1A Fuse burned. Please replace both DC Fan Motor and 1A Fuse together.

It will makes "Fan Lock Stop" when something has disturb the Fan rotation by inserting materials into propeller fan or ice has growing inside of outdoor unit by snowing.

It may make "Fan Lock Stop" by strong wind (ex. 17m/sec or above) against the Fan rotation. In this case unit will be restart again after a while.

In case of " Fan Lock Stop" even though the DC Fan Motor is rotating correctly, the possible cause in Fan Motor problem or control board problem. Stop after the Fan motor runs 2 minutes, Fan Motor may be broken.

< Caution >

Please take care for the electrical shock by high voltage of DC Fan Motor power source which is common with compressor when you are servicing this unit.

You can not confirm the coil and wiring of Motor directly due to the built in control circuit in Fan Motor

SERVICE CALL Q & A

Model RAS-25YH4 / RAC-25YH4
RAS-35YH4 / RAC-35YH4

COOLING MODE

Q1 The compressor has stopped suddenly during cooling operation.

A1 Check if the indoor heat exchanger is frosted. Wait for 3-4 minutes until it is defrosted.

If the air conditioner operates in cooling mode when it is cold, the evaporator may get frosted.

DEHUMIDIFYING MODE

Q2 Fan speed is not switched over during dehumidifying operation.

A2 Fans speed is normally set to LOW during dehumidifying operation.

Q3 Cool air comes from the unit during dehumidifying operation.

A3 To have an operation with high dehumidifying effect, the unit operates at low fan speed. As a result, cool air comes from the unit. This phenomenon is not a fault.

HEATING MODE

Q4 The circulation stops occasionally during Heating mode.

A4 It occurs during defrosting. Wait for 5-10 minutes until the condenser is defrosted.

Q5 When the fan speed is set at HIGH or MED, the flow is actually Weak.

A5 At the beginning of heating, the fan speed remains LOW for 30 seconds. If HIGH is selected, it switches to LOW and again to MED after additional 30 seconds.

Q6 Heating operation stops while the temperature is preset at "30".

A6 If temperature is high in the outdoor, heating operation may stop to protect internal devices.

Q7 When "Auto fan" mode is set, the indoor fan speed changes from HIGH through MED to LOW.

A7 This is not an error. The anti cool air function shows this phenomenon.

In the fan "Auto" mode, the unit detects the heat exchange temperature. When the temperature becomes low, the fan speed changes from HIGH, through MED to LOW.



AUTO FRESH DEFROSTING

Q8) After the ON/OFF button is pressed to stop heating, the outdoor unit is still working with the OPERATION lamp lighting.



A8) Auto Fresh Defrosting is carried out : the system checks the outdoor heat exchanger and defrosts it as necessary before stopping operation.

AUTO OPERATION

Q9) Fan speed does not change when fan speed selector is changed during auto operation.



A9) At this point fan speed is automatic.

NICE TEMPERATURE RESERVATION

Q10) When on-timer has been programmed, operation starts before the preset time has been reached.



A10) This is because Nice temperature reservation function is operating. This function starts operation earlier so the preset temperature is reached at the preset time. Operation may start maximum 60 minutes before the preset time.

Q11) Does Nice temperature reservation function operate during dehumidifying?



A11) It does not work. It works only during cooling and heating.

Q12) Even if the same time is preset, the operation start time varies.



A12) This is because Nice temperature reservation function is operating. The start time varies according to the load of room. Since load varies greatly during heating, the operation start time is corrected, so it will vary each day.

INFRARED REMOTE CONTROL

Q13) Timer cannot be set.



A13) Has the clock been set? Timer cannot be set unless the clock has been set.

Q14) The current time display disappears soon.



A14) The current time disappears in approx. 10 seconds. The time set display has priority.

When the current time is set the display flashes for approx 3 minutes.

Q15) The timer has been programmed, but the preset time disappears.



A15) Is the current time past the preset time? When the preset time reaches the current time, it disappears.



Q16 When the "Sleep" timer is set during operation,
 (1) The indoor fan won't rotate.
 (No air comes from the unit)
 (2) The air speed won't change.



A16 (1) The temperature arrives at the preset indoor temperature and the air conditioner unit is temporarily stopped. Within about 3 minutes, the fan starts rotation.
 (2) When the unit operates at "LOW" air speed, it continues to operate at the same speed.

Q17 The preset temperature is not indicated on the remote control.



A17 When automatic operation is performed, the preset temperature won't be indicated. However, you can adjust the temperature within a range of $\pm 3^{\circ}\text{C}$ by pressing the "Room Temperature" button.
 If the temperature is 1°C higher than the auto preset temperature, $\blacktriangle 1^{\circ}\text{C}$ will appear.
 If the temperature is 1°C lower than the auto preset temperature, $\blacktriangledown 1^{\circ}\text{C}$ will appear.

OTHERS

Q18 The indoor fan varies among high air flow, low air flow and breeze in the auto fan speed mode. (Heating operation)



A18 This is because the cool wind prevention function is operating, and does not indicate a fault.

The heat exchanger temperature is sensed in the auto speed mode. When the temperature is low, the fan speed varies among high air flow, low air flow and breeze.

Q19 Loud noise from the outdoor unit is heard when operation is started.



A19 When operation is started, the compressor rotation speed goes to maximum to increase the heating or cooling capability, so noise becomes slightly louder. This does not indicate a fault.

Q20 Noise from the outdoor unit occasionally changes.



A20 The compressor rotation speed changes according to the difference between the thermostat set temperature and room temperature. This does not indicate a fault.

Q21 There is a difference between the set temperature and room temperature.



A21 There may be a difference between the set temperature and room temperature because of construction of room, air current, etc. Set the temperature at a comfortable for the space.

Q22 Air does not flow immediately after operation is started.




A22 Preliminary operation is performed for one minute when the power switch on and heating or dehumidifying is set. The operation lamp blinks during this time for heating. This does not indicate a fault.

TROUBLE SHOOTING


RAS-25YH4, 35YH4 PRECAUTIONS FOR CHECKING



WARNING
Remember that voltage of 175 V is applied to the 0V line on the P.W.C or the like as shown in the right diagram.

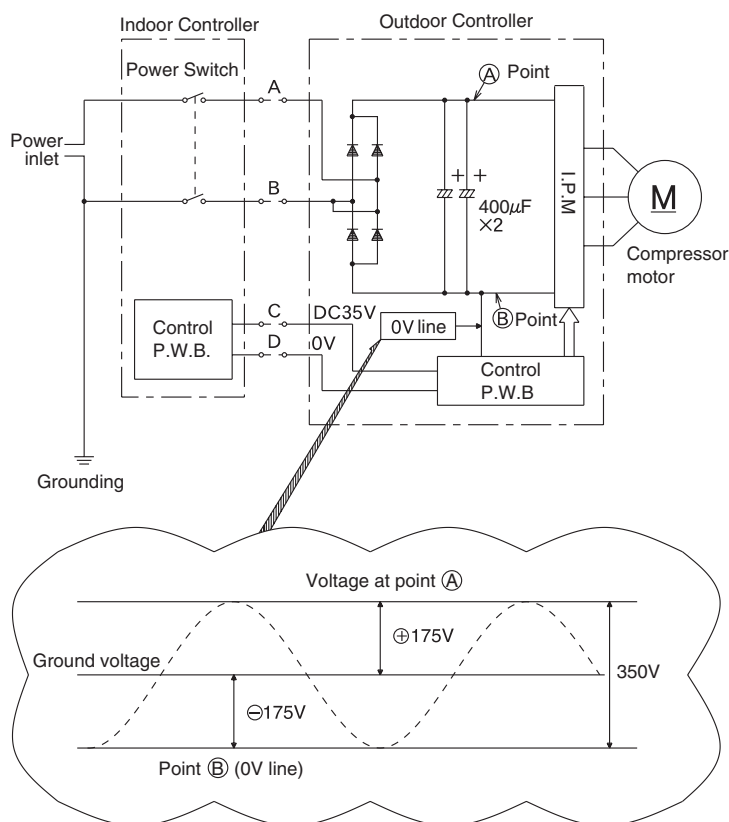

WARNING
When using an oscilloscope, never ground it. Don't forget that high voltage as noted in the figure above may apply to the oscilloscope.

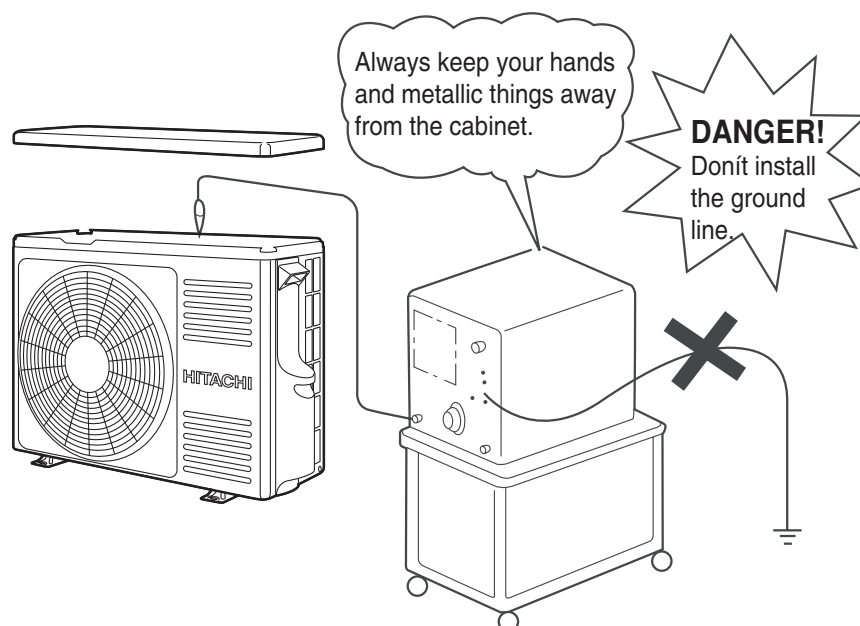

DISCHARGE, PROCEDURE AND POWER SHUT OFF METHOD FOR POWER CIRCUIT



WARNING




Caution

- Voltage of about 350 V is charged between the terminal of smoothing capacitors (400 μ F x 2)
- During continuity check for each circuit part of the outdoor unit, be sure to discharge the smoothing capacitors.

Discharge Procedure


1. Turn off the power of the indoor unit or pull out the power supply plug.
2. After power is turned off, wait for 10 minutes or more. Then, remove electrical parts cover and apply soldering iron of 30 to 75 W for 15 seconds or more to TAB3(GRAY) and TAB4(RED) terminals on the main P.W.B. as shown in the figure below, in order to discharge voltage in smoothing capacitor.

Do not use a soldering iron with transformer: Otherwise, thermal fuse inside transformer will be blown.

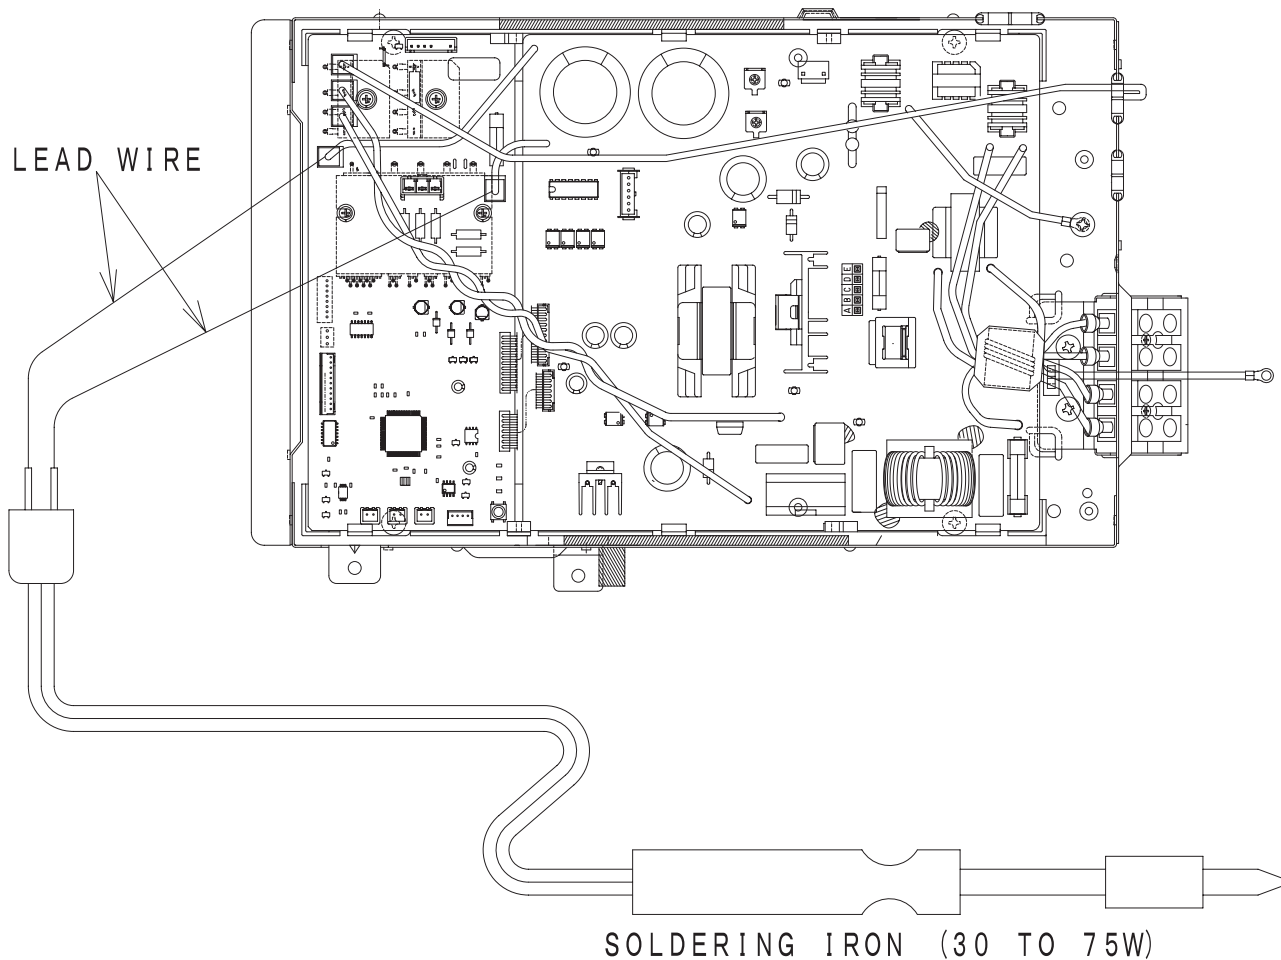

STRUCTURE OF AN INDOOR UNIT ELECTRIC PARTS


RAS-25YH4, 35YH4

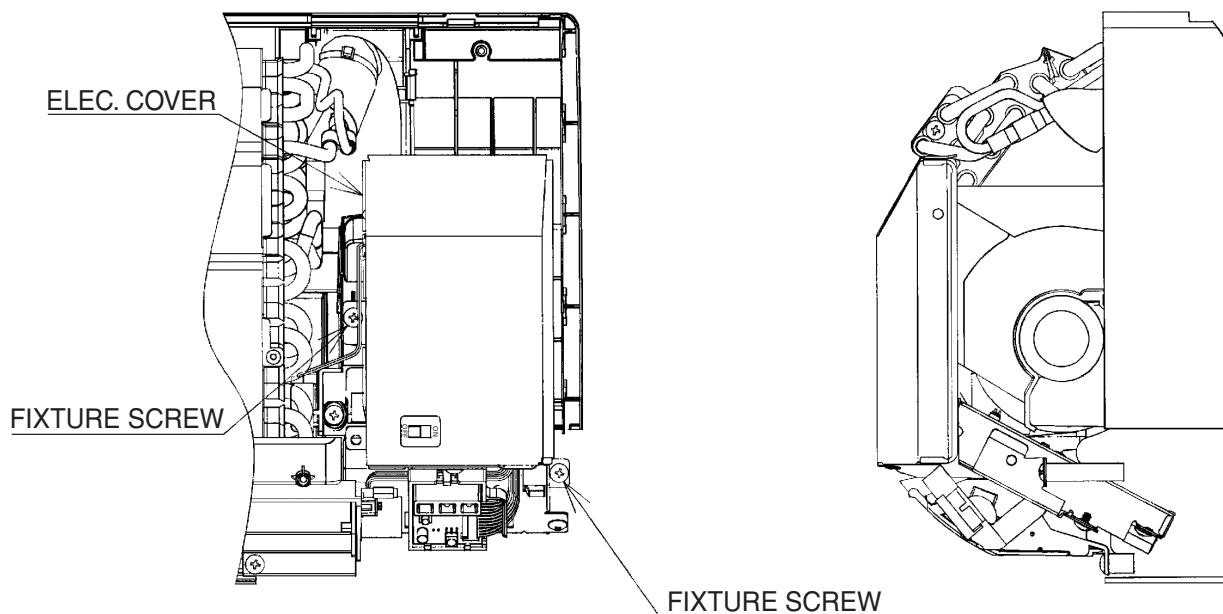

Removing electrical parts

1. Remove the electrical parts cover.
2. Remove the connectors from the CN1 (heat exchange thermistor), CN4 (stepping motor) and CN10 (fan motor).
3. Remove two lock screws.
4. Remove the electrical parts in the direction of arrow.

When installing the parts, use caution not to pinch any code between the part and cabinet.

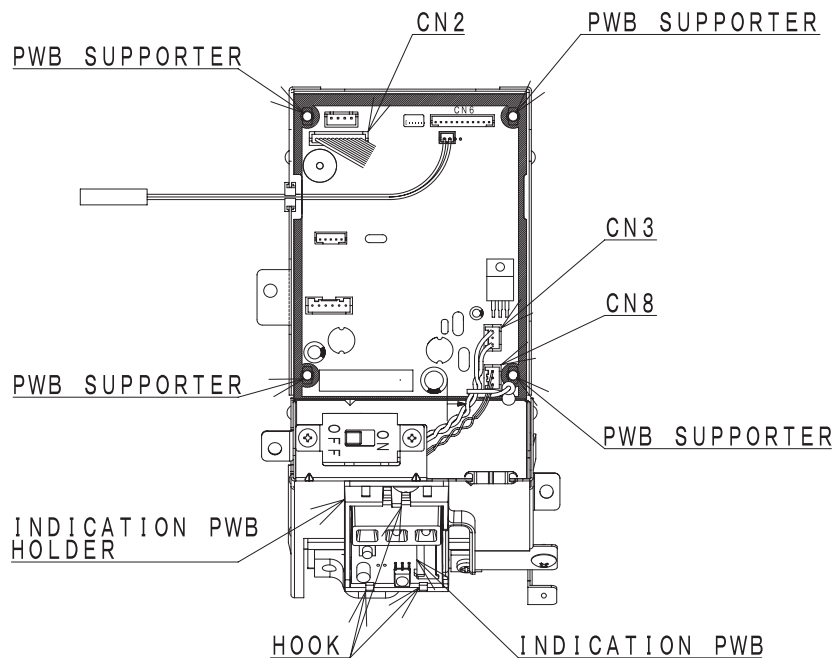

Removing control P.W.C.

1. Remove the connectors from the CN2 and CN3.
2. Remove the P.W.C. from the P.W.C. support.


Removing the indication P.W.C.

1. Remove the connector from the CN2 on the control P.W.C.
2. Remove the upper hook from the indication P.W.C. lock resin, pull the P.W.C. forward a little and remove it.


Other Cautions

(1) Cautions concerning ICP (IC Protector)


1. Use due caution for short circuit in servicing.
Short circuit will open the ICP immediately.
2. When the ICP opens, remove the cause of this phenomenon and replace the ICP.
If the remedy is improper, the ICP may open again.

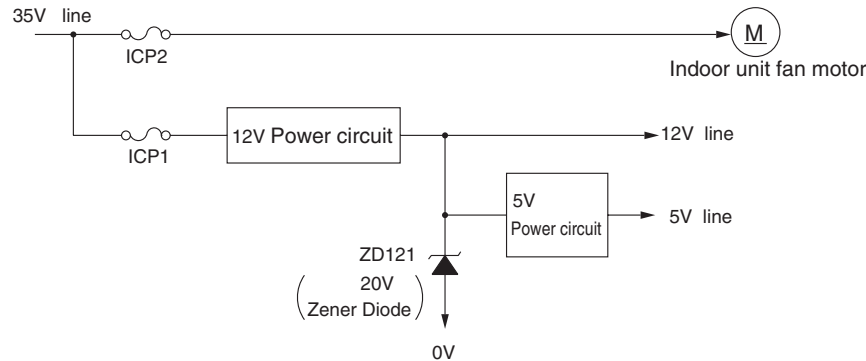

(2) The CN3 (power supply) and CN10 (fan motor) are the connectors with lock mechanism. Press the lock with your fingers to unlock and remove the connector.

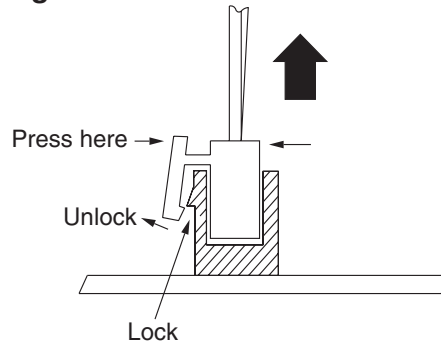

(3) When checking the voltage and waveform, do not connect the probes to the forbidden areas show below. Touching them may cause the ICP1 blowout and Q111 failure.

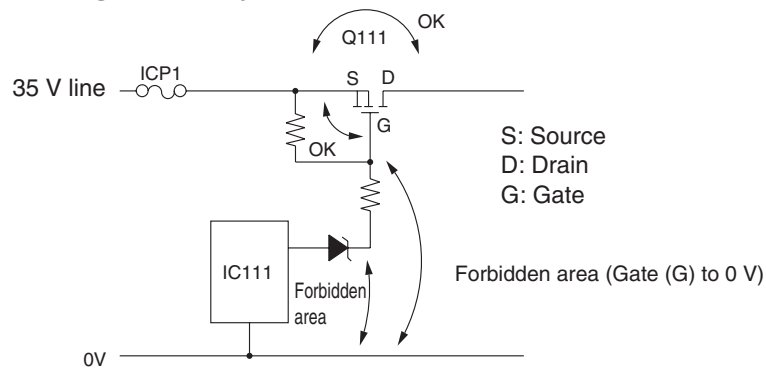

The Q111 is a MOS-FET and its gate terminal is a high impedance. When a probe such as a multimeter is contacted with the gate (G), the Q111 may have the continuous ON state to supply overcurrent in the circuit, causing the ICP1 blowout and Q111 failure.

When checking the switching waveform of the Q111, set the source (S) to the base and measure the gate (G) and drain (D).

(4) During power feeding to the P.W.B., do not remove and insert the CN10 (fan motor connector). Failure to do so may cause overcurrent to the fan motor and P.W.Bs (micro computer, IC and the like) and a failure may occur. To remove or insert the CN10, be sure to shut off the power.







TROUBLESHOOTING WHEN TIMER LAMP BLINKS.

Model RAS-25YH4, RAS-35YH4

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.

SELF-DIAGNOSIS LIGHTING MODE

Model: RAS-25YH4, RAS-35YH4

No.	Blinking of Timer lamp	Reason for indication	Possible cause
1	 1 time	<u>Reversing valve defective</u> When the indoor heat exchanger temperature is too low in the heating mode or it is too high in the cooling mode.	(1) Reversing valve defective (2) Heat exchanger thermistor disconnected (only in the heating mode) (Note) The malfunction mode is entered the 3rd time this abnormal indication appears (read every 3 minutes).
2	 2 time	<u>Outdoor unit is under forced operation</u> When the outdoor unit is in forced operation or balancing operation after forced operation	Electrical parts in the outdoor unit
3	 3 times	<u>Indoor/outdoor interface defective</u> When the interface signal from the outdoor unit is interrupted.	(1) Indoor interface circuit (2) Outdoor interface circuit
4	 9 times	<u>Room thermistor or heat exchanger thermistor is faulty</u> When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor (2) Heat exchanger thermistor
5	 10 times	<u>Over-current detection at the DC fan motor</u> When over-current is detected at the DC fan motor of the indoor unit.	(1) Indoor fan locked (2) Indoor fan motor (3) Indoor control P.W.B.
※1 6	 13 times	<u>IC401 or IC402 data reading error</u> When data read from IC401 or IC402 is incorrect.	IC401 or IC402 abnormal

( --- Lights for 0.35 sec. at interval of 0.35 sec..)

<Cautions>

- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check if the connecting cable is connected to the outdoor unit.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ※1).

SELF-DIAGNOSIS LIGHTING MODE

MODEL RAC-25YH4, RAC-35YH4

⚠ DANGER (DC350V)

- CUT THE POWER SOURCE AND WAIT MORE THAN 10 MINUTES BEFORE SERVICE WORK.
- CONFIRM THE DC VOLTAGE AT THE MEASURING POINT SHOWN IN FIGURE MUST BE LESS THAN 10V.
- DO NOT TOUCH THE OTHER COMPONENTS WHEN OPERATING THE SERVICE SWITCH.

SERVICE OPERATION

PROCEDURE OF REFRIGERANT PUMP DOWN OR INDEPENDENT OPERATION OF OUTDOOR UNIT.

- CUT OFF THE POWER SOURCE ONCE THEN ON AGAIN.
- WAIT 1 MINUTE AT LEAST.
- PRESS THE SERVICE SWITCH (WHICH IS ON THE PWB) MORE THAN 1 SECOND.

SERVICE OPERATION WILL BE STARTED.

TO STOP THIS OPERATION, PRESS THE SERVICE SWITCH AGAIN (MORE THAN 1 SECOND).


TO RESUME TO NORMAL OPERATION, CUT THE POWER SOURCE ONCE THEN ON AGAIN.

IN ORDER TO PROTECT THE DAMAGE OF COMPRESSOR, DO NOT OPERATE MORE THAN 5 MINUTES WITH SERVICE VALVE CLOSE.

SELF-DIAGNOSIS LIGHTING MODE		■: LIGHT	▨: BLINK	□: OFF
SELF-DIAGNOSIS NAME	DETAILS	MAIN CHECK POINT		
[1] DURING OPERATION	LD303 (RED) LIGHTS. ■			
<input type="checkbox"/> NORMAL OPERATION	COMPRESSOR OPERATION	NOT MALFUNCTION		
<input type="checkbox"/> OVERLOAD (1)	<p>RATIO OF ROTATION SPEED (1) (2) SET VALUE (3) TIME</p> <p>THE ROTATION SPEED IS AUTOMATICALLY CONTROLLED TO PROTECT THE COMPRESSOR IN THE OVERLOAD CONDITION.</p>	THIS SHOWS AN OVERLOAD PROTECTION STATUS.		
<input type="checkbox"/> OVERLOAD (2)		NOT MALFUNCTION.		
<input type="checkbox"/> OVERLOAD (3)		NOT MALFUNCTION.		
[2] DURING STOP	LD303 (RED) GOES OFF. □			
<input type="checkbox"/> NORMAL STOP	STOPPED BY THERMOSTAT OR CONTROLLER.	NOT MALFUNCTION.		
<input type="checkbox"/> RESET STOP	MICROPROCESSOR WAS REBOOTED. (IT IS NORMAL WHEN POWER SW HAS BEEN TURNED ON)	⊙POWER P. W. B. ⊙MAIN P. W. B.		
<input type="checkbox"/> PEAK CURRENT CUT	COMPRESSOR PEAK CURRENT WAS BEYOND MAXIMUM LIMIT.	⊙MAIN P. W. B. ⊙COMPRESSOR ⊙POWER P. W. B.		
<input type="checkbox"/> ABNORMAL LOW SPEED ROTATION	LOST THE COMPRESSOR ROTOR POSITION.	⊙MAIN P. W. B. ⊙COMPRESSOR ⊙POWER P. W. B.		
<input type="checkbox"/> SWITCHING FAILURE	SWITCHING FROM LOW FREQUENCY SYNC START TO POSITION DETECTION OPERATION FAILURE.	⊙MAIN P. W. B. ⊙COMPRESSOR ⊙POWER P. W. B.		
<input type="checkbox"/> OVERLOAD LOWER LIMIT CUT	OVERLOAD PROTECTION FUNCTION IS REQUESTING LOWER SPEED THAN MINIMUM SPEED OF COMPRESSOR.	⊙OUTDOOR UNIT IS EXPOSED TO DIRECT SUNLIGHT OR ITS AIRFLOW BLOCKED. ⊙FAN MOTOR ⊙MAIN P. W. B. ⊙THE VOLTAGE IS EXTREMELY LOW.		
<input type="checkbox"/> OH THERMISTOR TEMP. RISE	COMPRESSOR OVERHEAT WAS DETECTED BY OH THERMISTOR.	⊙LEAK OF REFRIGERANT ⊙COMPRESSOR ⊙OH THERMISTOR CIRCUIT (MAIN P. W. B.)		
<input type="checkbox"/> THERMISTOR ABNORMAL	ABNORMAL THERMISTOR VALUE (OPEN OR SHORT) WAS DETECTED.	⊙THERMISTOR CONNECTION OF THERMISTOR DEFECTIVE ⊙THERMISTOR CIRCUIT		
<input type="checkbox"/> ACCELERATION FAILURE	COMPRESSOR WAS NOT ACCELERATED MORE THAN MINIMUM SPEED.	⊙LEAK OF REFRIGERANT ⊙COMPRESSOR		
<input type="checkbox"/> COMMUNICATIONS ERROR	COMMUNICATIONS BETWEEN INDOOR UNIT AND OUTDOOR UNIT ARE INTERRUPTED	⊙CABLE IS WRONG CONNECTED ⊙CABLE IS OPEN ⊙INTERFACE CIRCUIT OF BETWEEN INDOOR UNIT AND OUTDOOR UNIT		
<input type="checkbox"/> ABNORMAL POWER SOURCE	ABNORMAL POWER SOURCE WAS DETECTED	⊙ABNORMAL POWER SOURCE ⊙CABLE IS WRONG CONNECTED ⊙POWER P. W. B. ⊙MAIN P. W. B.		
<input type="checkbox"/> FAN LOCK ERROR	OUTDOOR FAN RPM IS NOT ROTATE AS INTENDED RPM	⊙FAN MOTOR ⊙FAN MOTOR CIRCUIT		
<input type="checkbox"/> EEPROM READ ERROR	MICROCOMPUTER CANNOT READ THE DATA IN EEPROM.	⊙MAIN P. W. B.		

EXAMPLE OF BLINKING (5 TIMES) 2SEC


■ LIGHTS FOR 0.25 SEC AT INTERVAL OF 0.25 SEC.

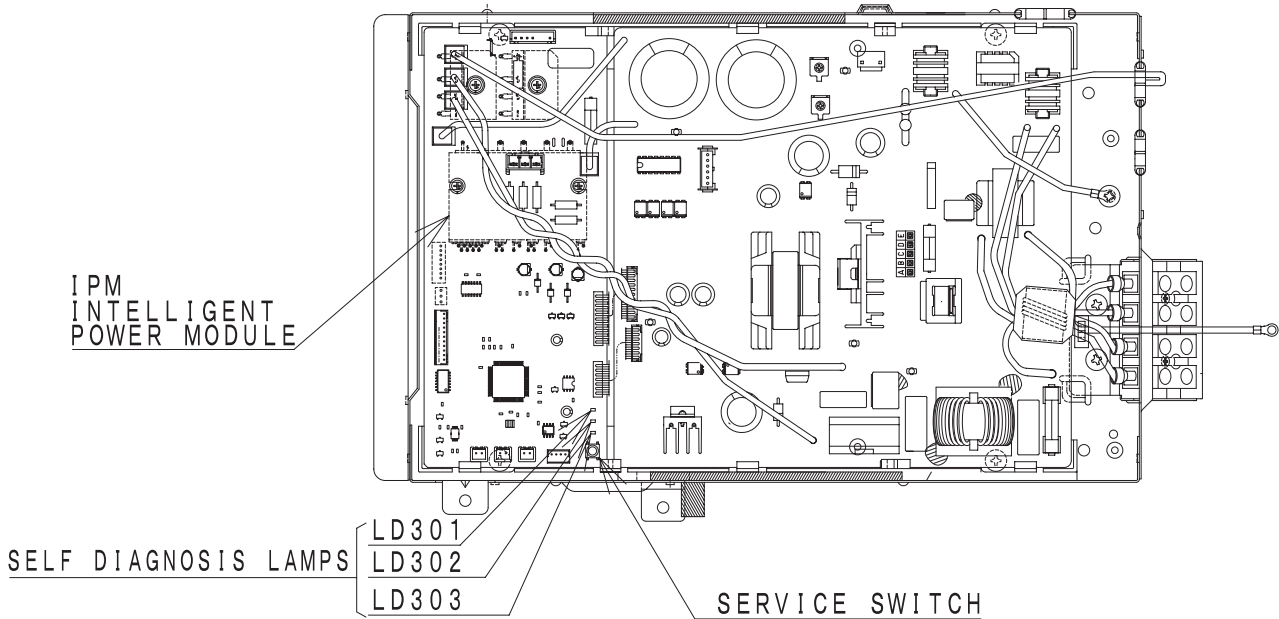

OUTDOOR UNIT

Remove the compressor connector.

- 1/ 2/ IPM (Intelligent Power Module)
- 3/ Service Switch
- 4/ Self-Diagnosis Lamp

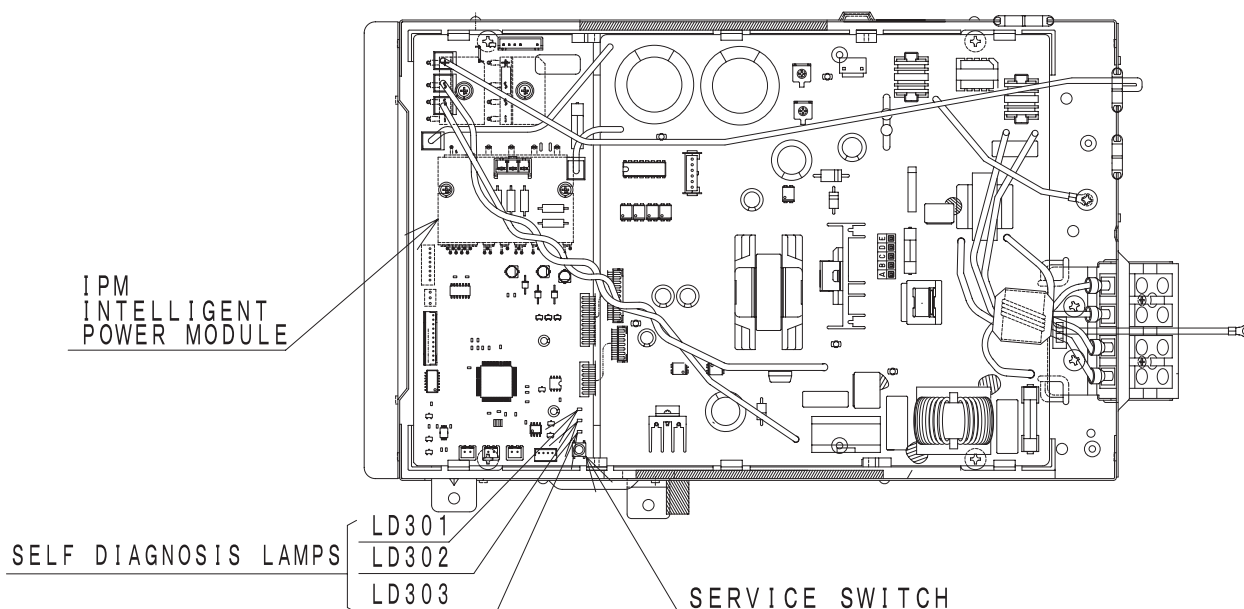

If your first attempt fails, wait 3 minutes (for the unit to re-start) and check the self-diagnosis lamp status again.

With the unit set in the operating state, press the start/stop button.
Does the unit operate for approximately 2 seconds (the LD303 coming on) and then stop due to a failure of switching (the lamp blinking 4 times)?

Yes

- Check the drive circuit (IMP) using the PRD checker.
- Check the position sensor circuit.


Normal

Check the refrigerating cycle.

No


Check outdoor electrical parts.

CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING

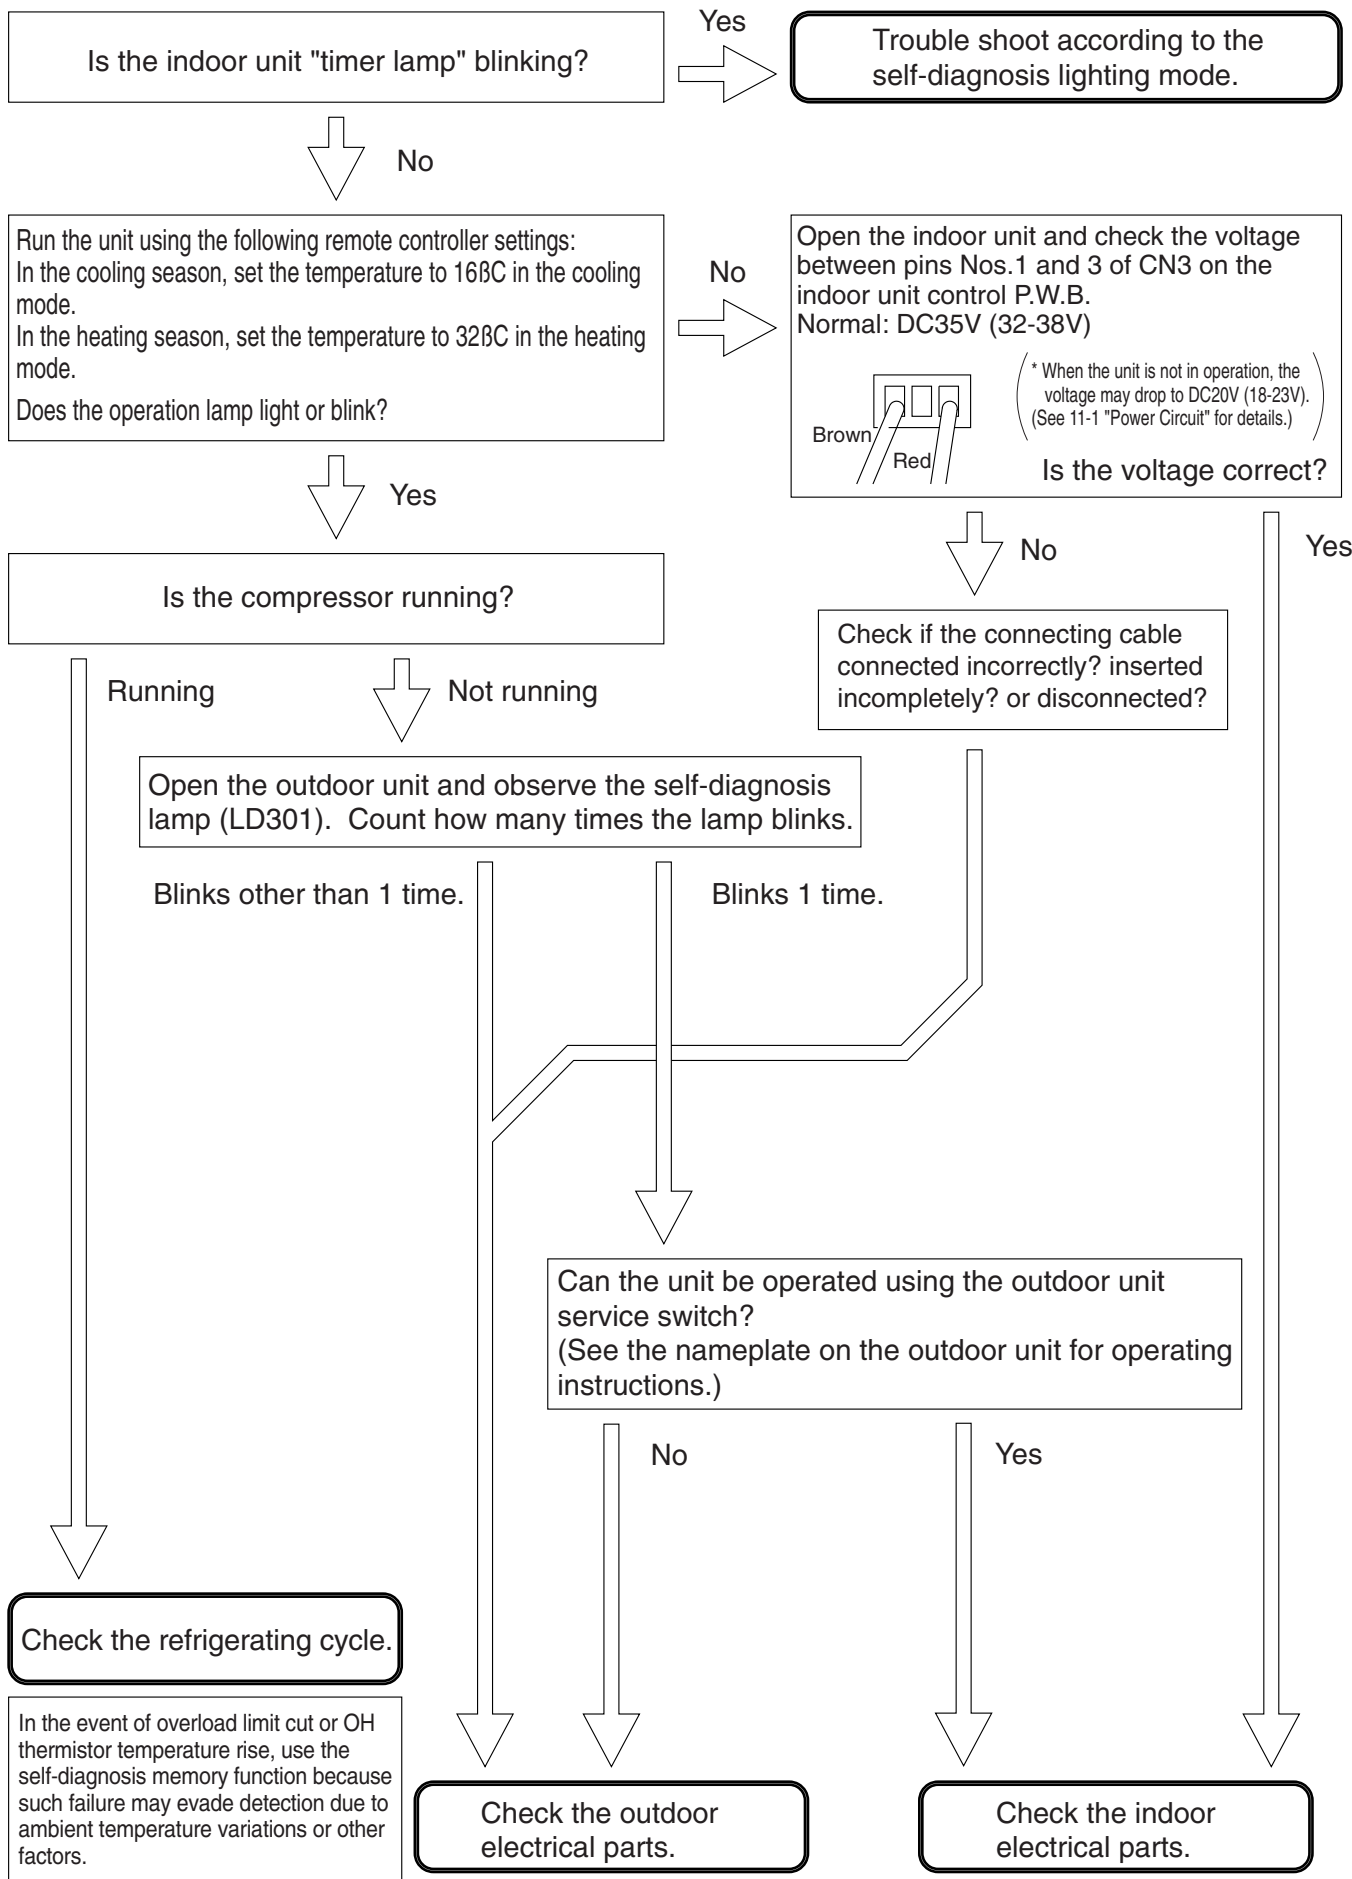

CHECKING THE INDOOR UNIT ELECTRICAL PARTS


1. Power does not come on (no operation)

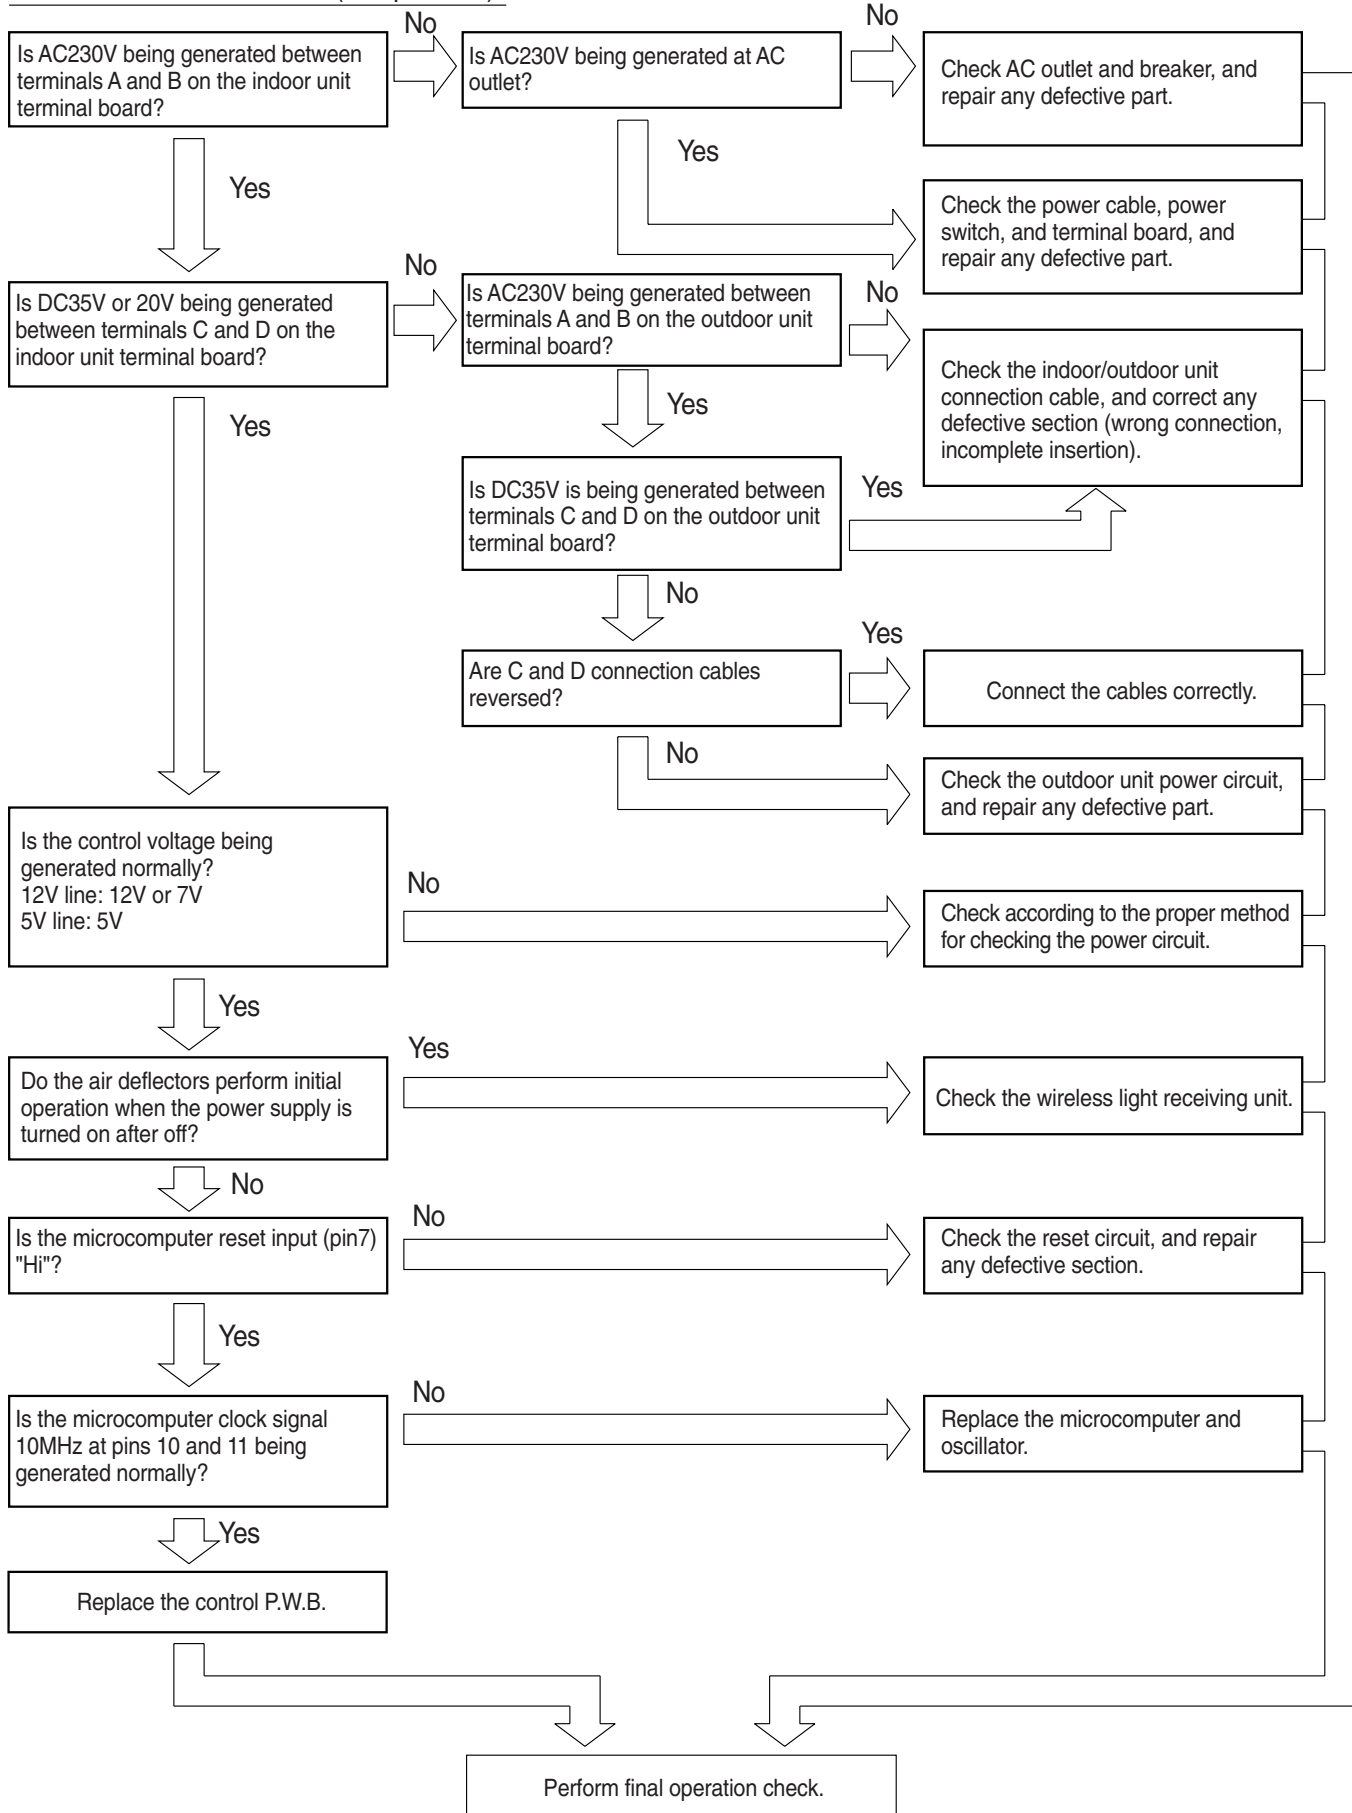


*1: When not in operation, the unit will enter into a low-power standby state, possibly causing a voltage drop to the 12V and 35V lines as shown below.

25V - 20V
12V - 7V


2. Indoor fan does not operate (others are normal)

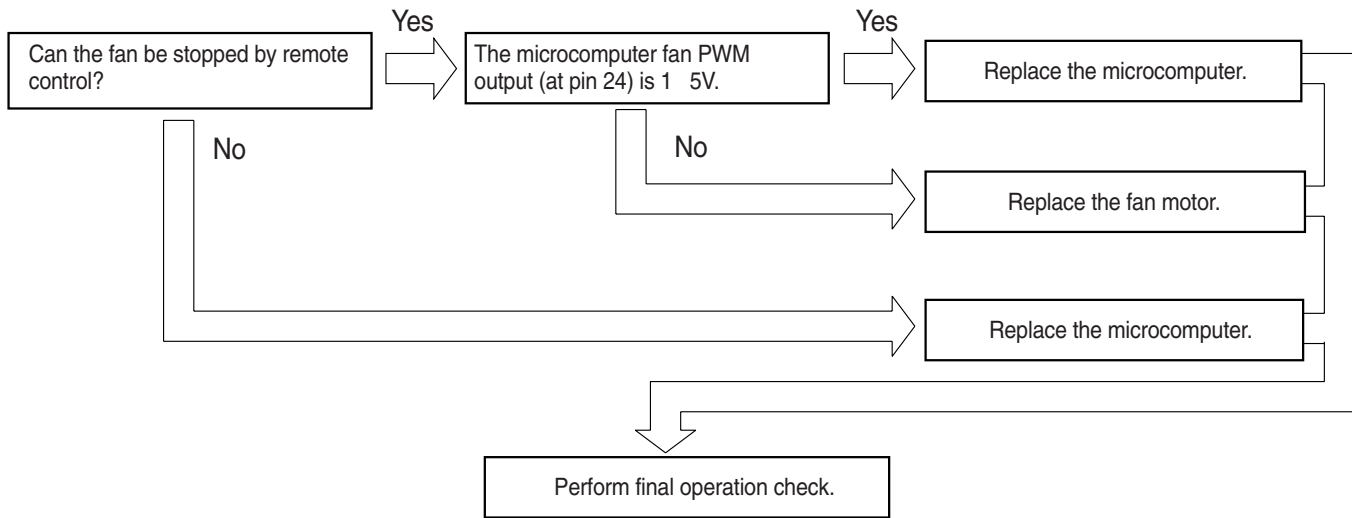

3. Air deflector does not move (others are normal)

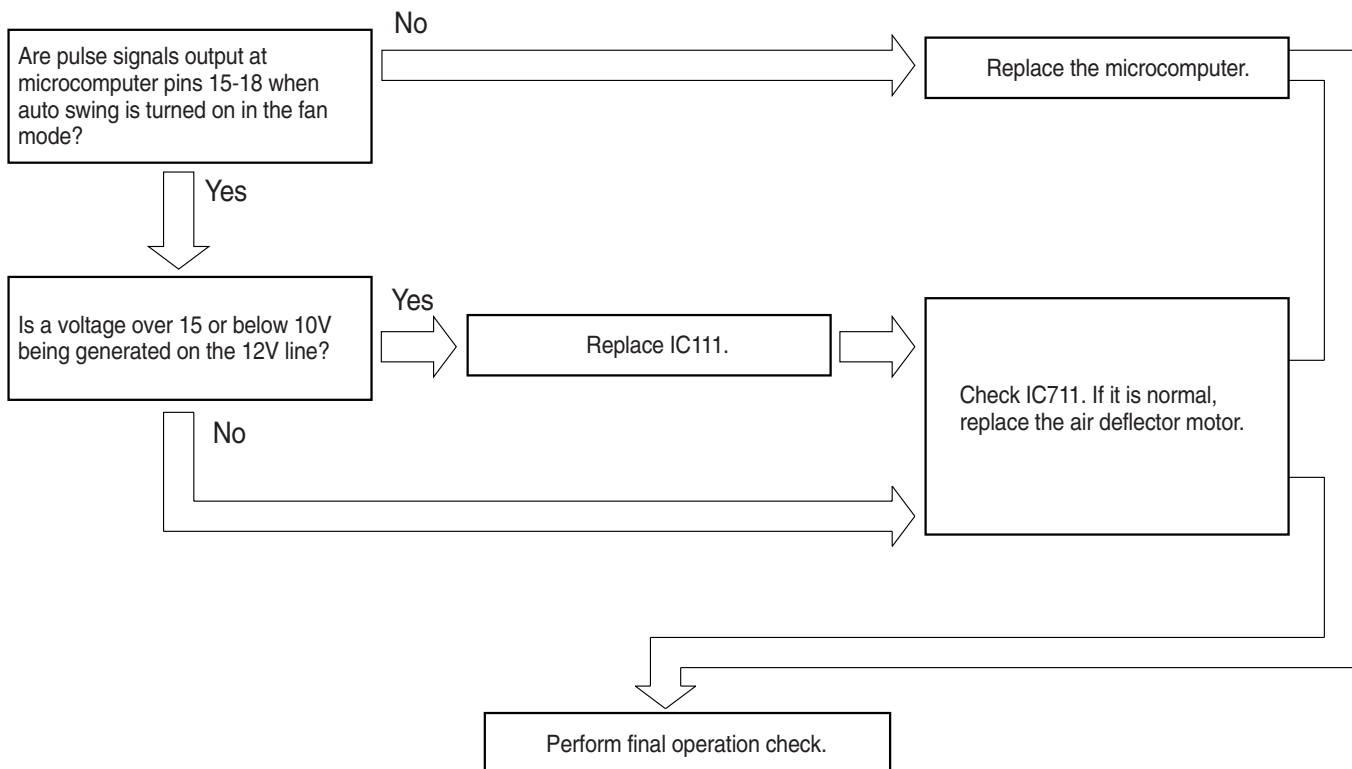


4. Check the control P.W.B. (power circuit)

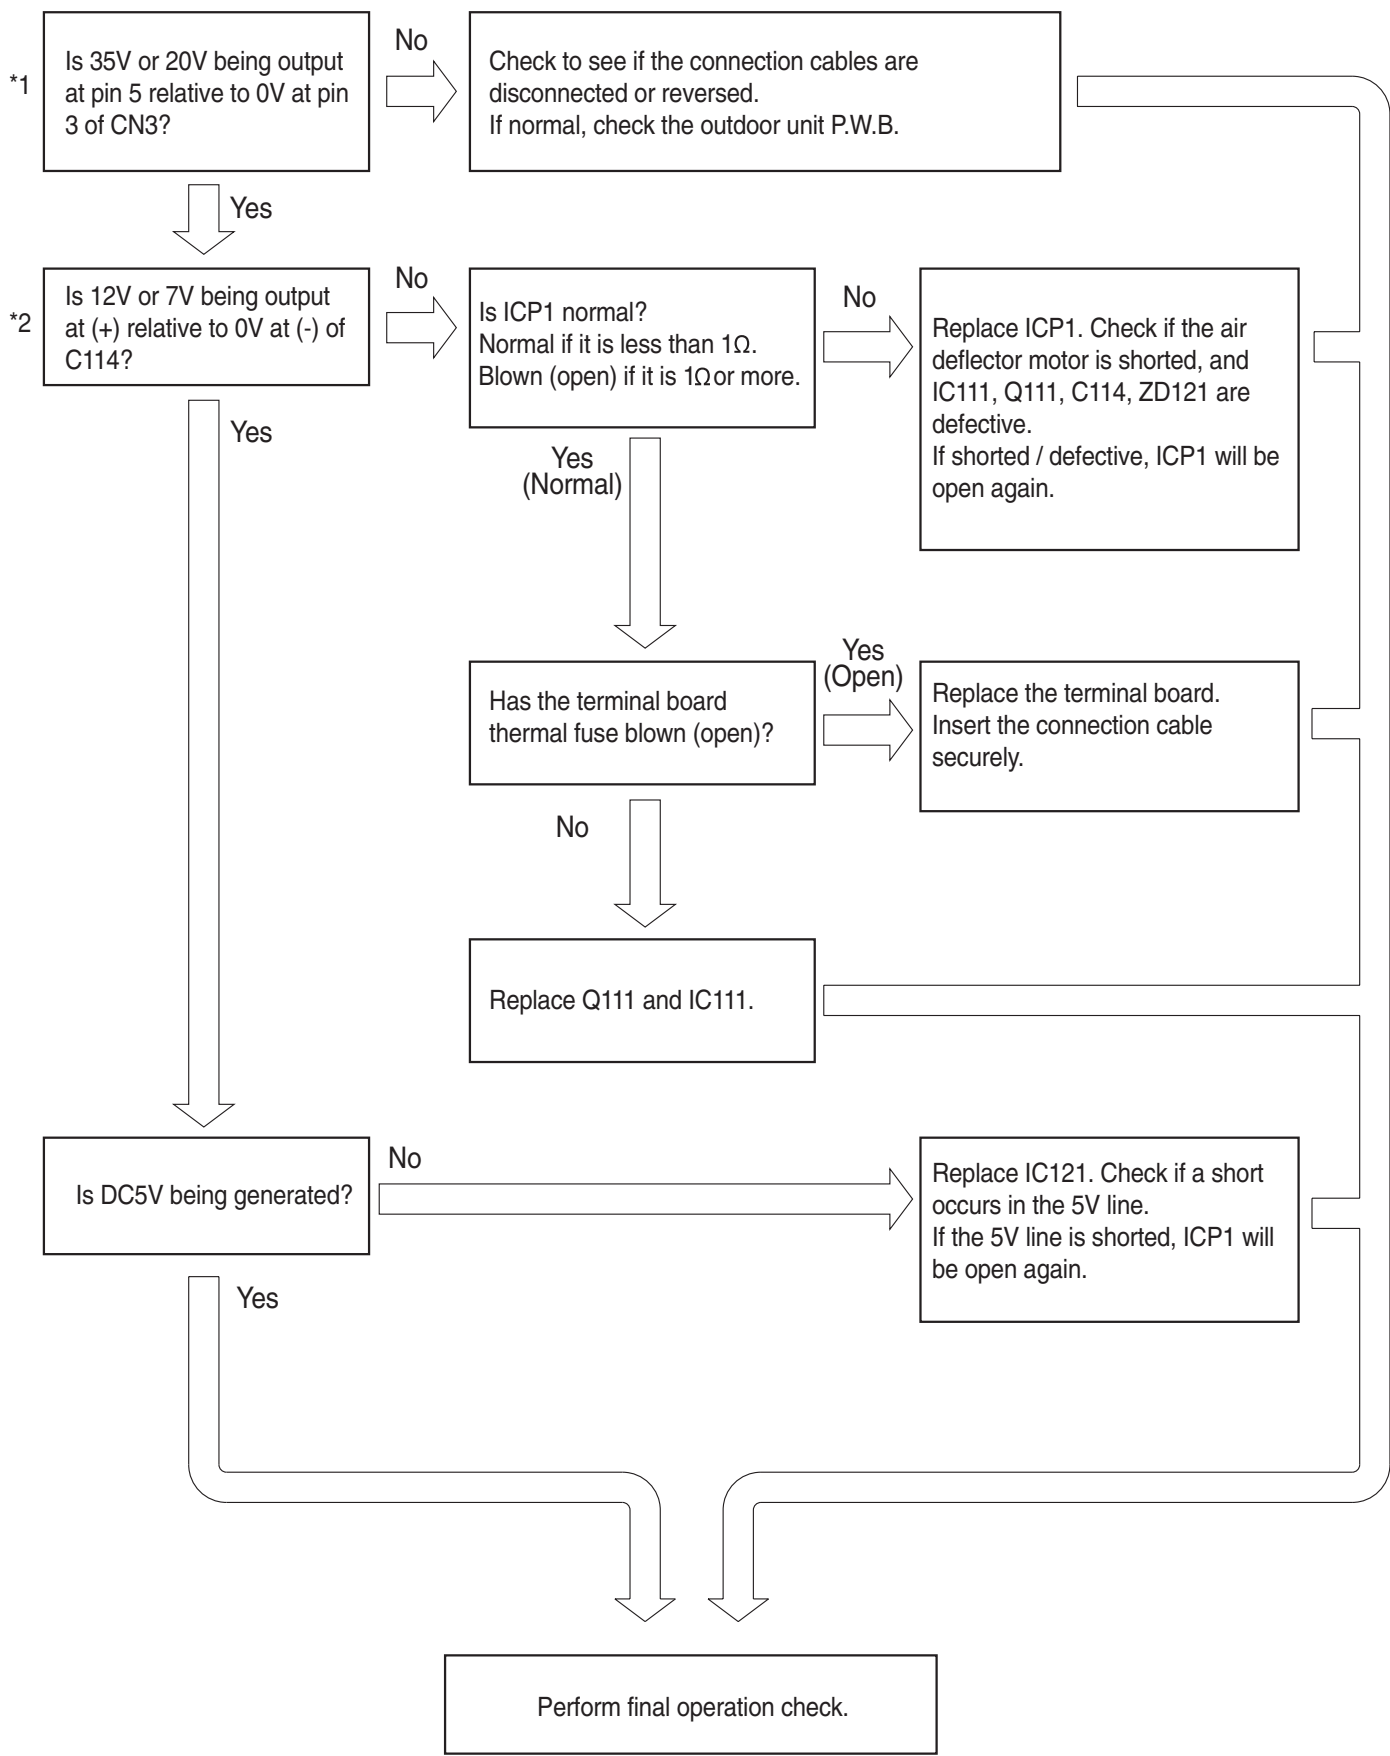

*1: When the unit is not in operation, the voltage across the 35V line may drop to 20V.
 *2: When the unit is not in operation, the voltage across the 12 V line may drop to 7V.

CHECKING THE REMOTE CONTROLLER

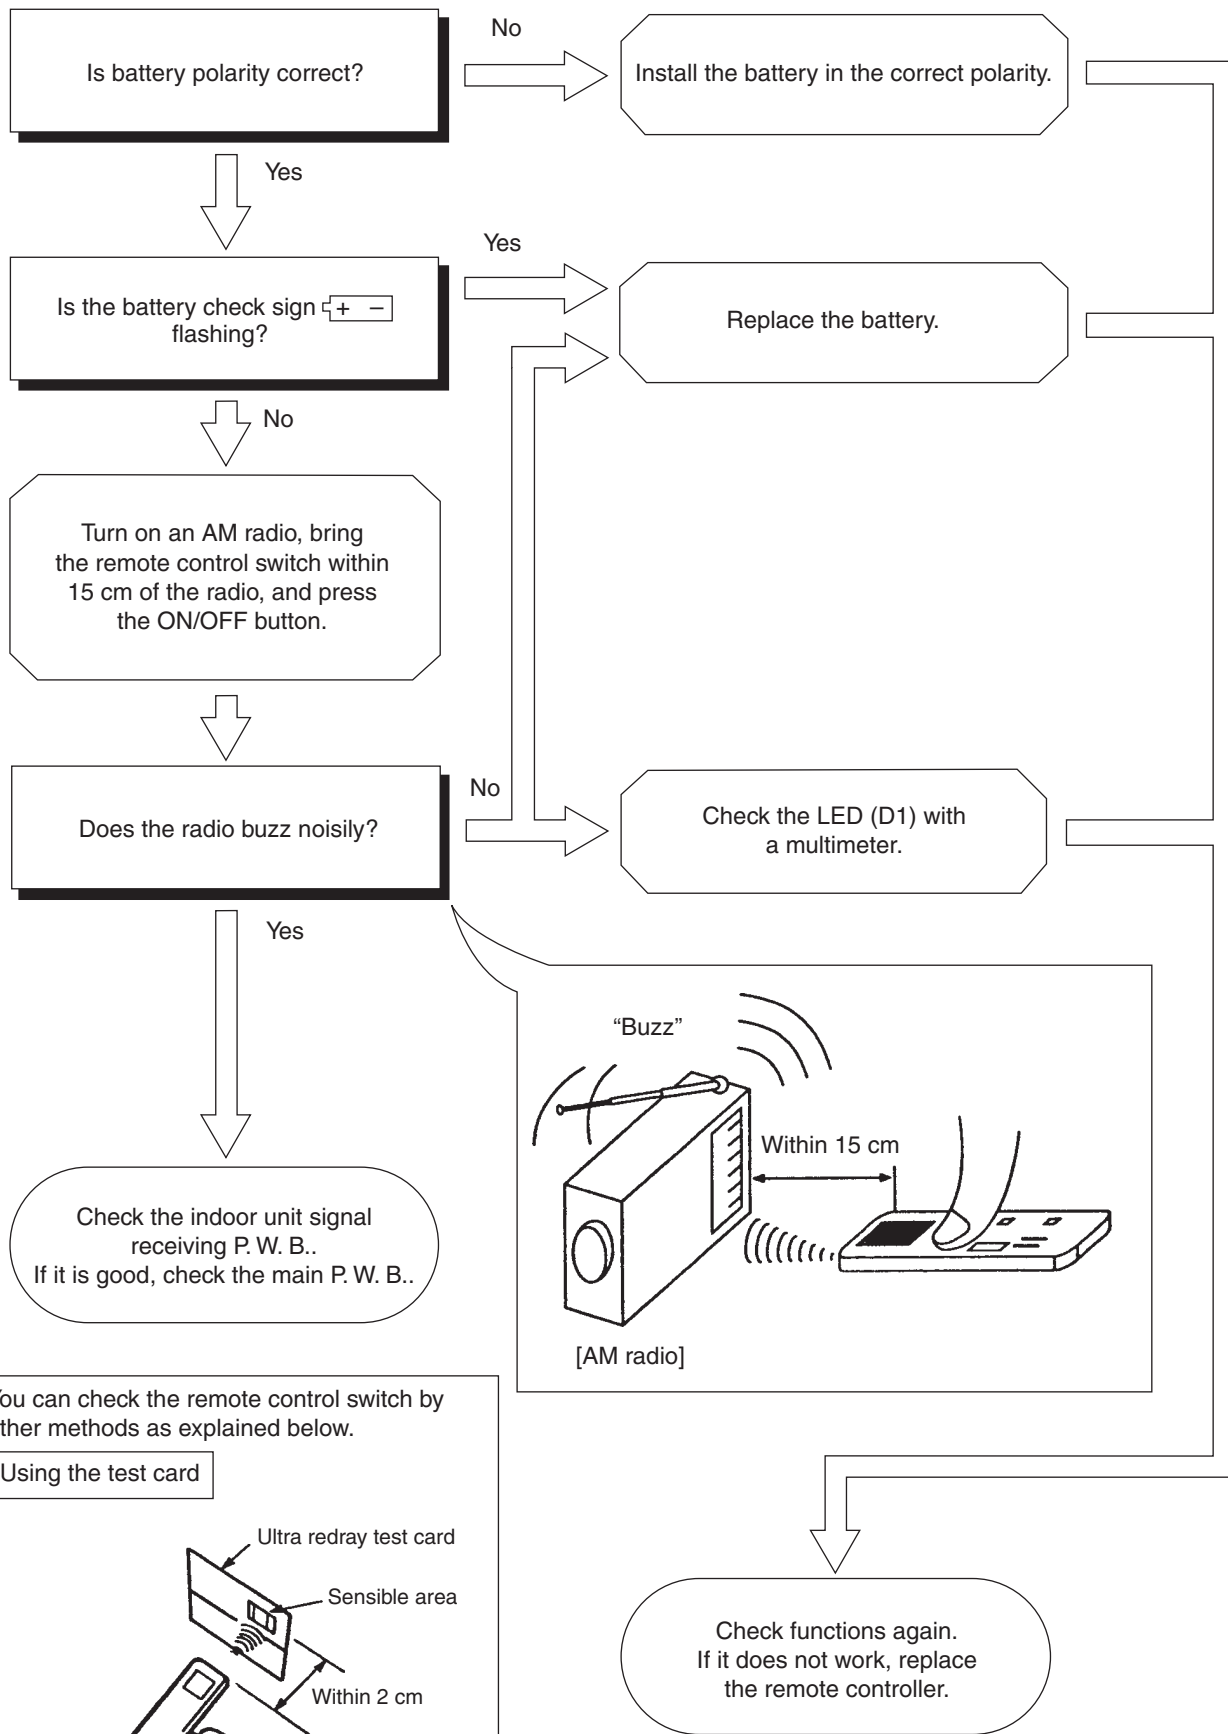

You can check the remote control switch by other methods as explained below.

Using the test card

The sensible area should flash in orange when you operate the remote control unit if it is good.



WARNING



PRECAUTIONS FOR SERVICING

Be sure that the power switch is turned off or the power cable is disconnected before servicing.

Removing the PWBs.

System Configuration of Outdoor Unit Electrical Parts

The outdoor unit electrical parts consist of two PWBs as shown in the figure.

<Control P.W.B. (M board)>

Contains a rectifier circuit and inverter module, their controlling microcomputer and microcomputer peripheral control circuits. The board incorporates high and low current sections.

<Power P.W.B. (P board)>



Contains a switching power circuit, noise filter, power factor improvement circuit, etc. The switching power circuit supplies power to electronic circuits on the control P.W.B. through CN3.

* When replacing any P.W.B., disconnect all the cables (including ground wires).

[A. Control P.W.B.]

- 1 Remove four screws securing the control P.W.B. to the cooling fins, and remove the control P.W.B. from the cooling fins.
- 2 Open the support latches and raise the control P.W.B. in the direction of the arrow as shown in Fig. A.

<Direction of the control P.W.B. removal>

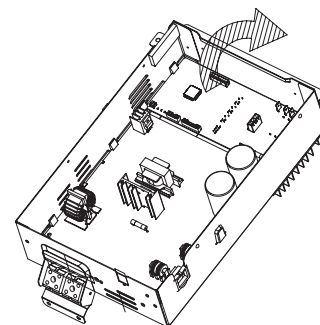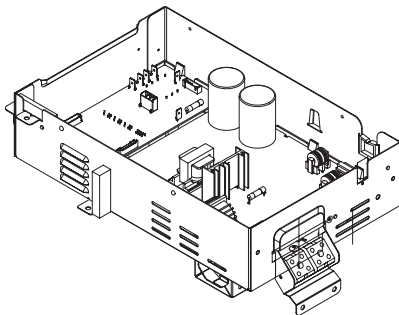

[B. Power P.W.B.]

- 1 Open the support latches and raise the power P.W.B. in the direction of the arrow as shown in Fig. A.

<Direction of the power P.W.B. removal>


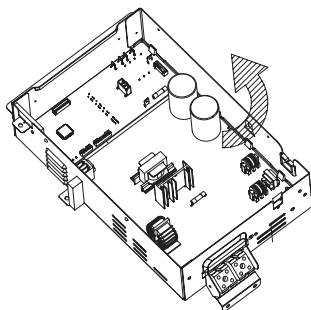


Fig. A

Open these support latches to remove the power P.W.B.



Open these support latches to remove the control P.W.B.


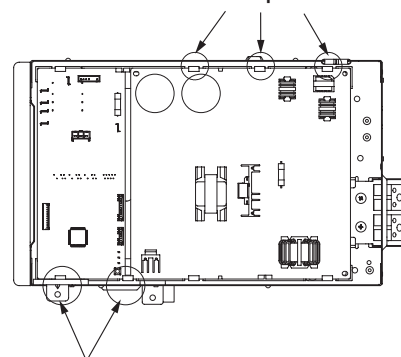


[C. Power Factor Improvement capacitor]

Designed to improve power factor.

To replace the capacitor, remove the power P.W.B. and then:


1. Remove two screws fastening the capacitor seat.
2. Slide the capacitor seat in the direction of the arrow.

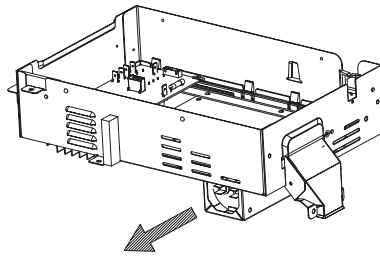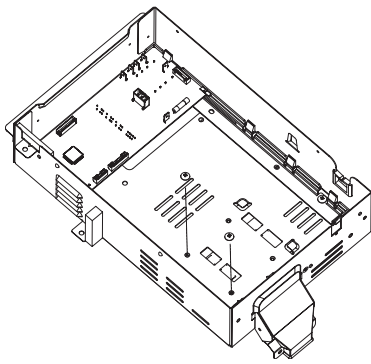



Sliding Direction


CHECKING OUTDOOR UNIT ELECTRICAL PARTS


[No operation or abnormal operation]

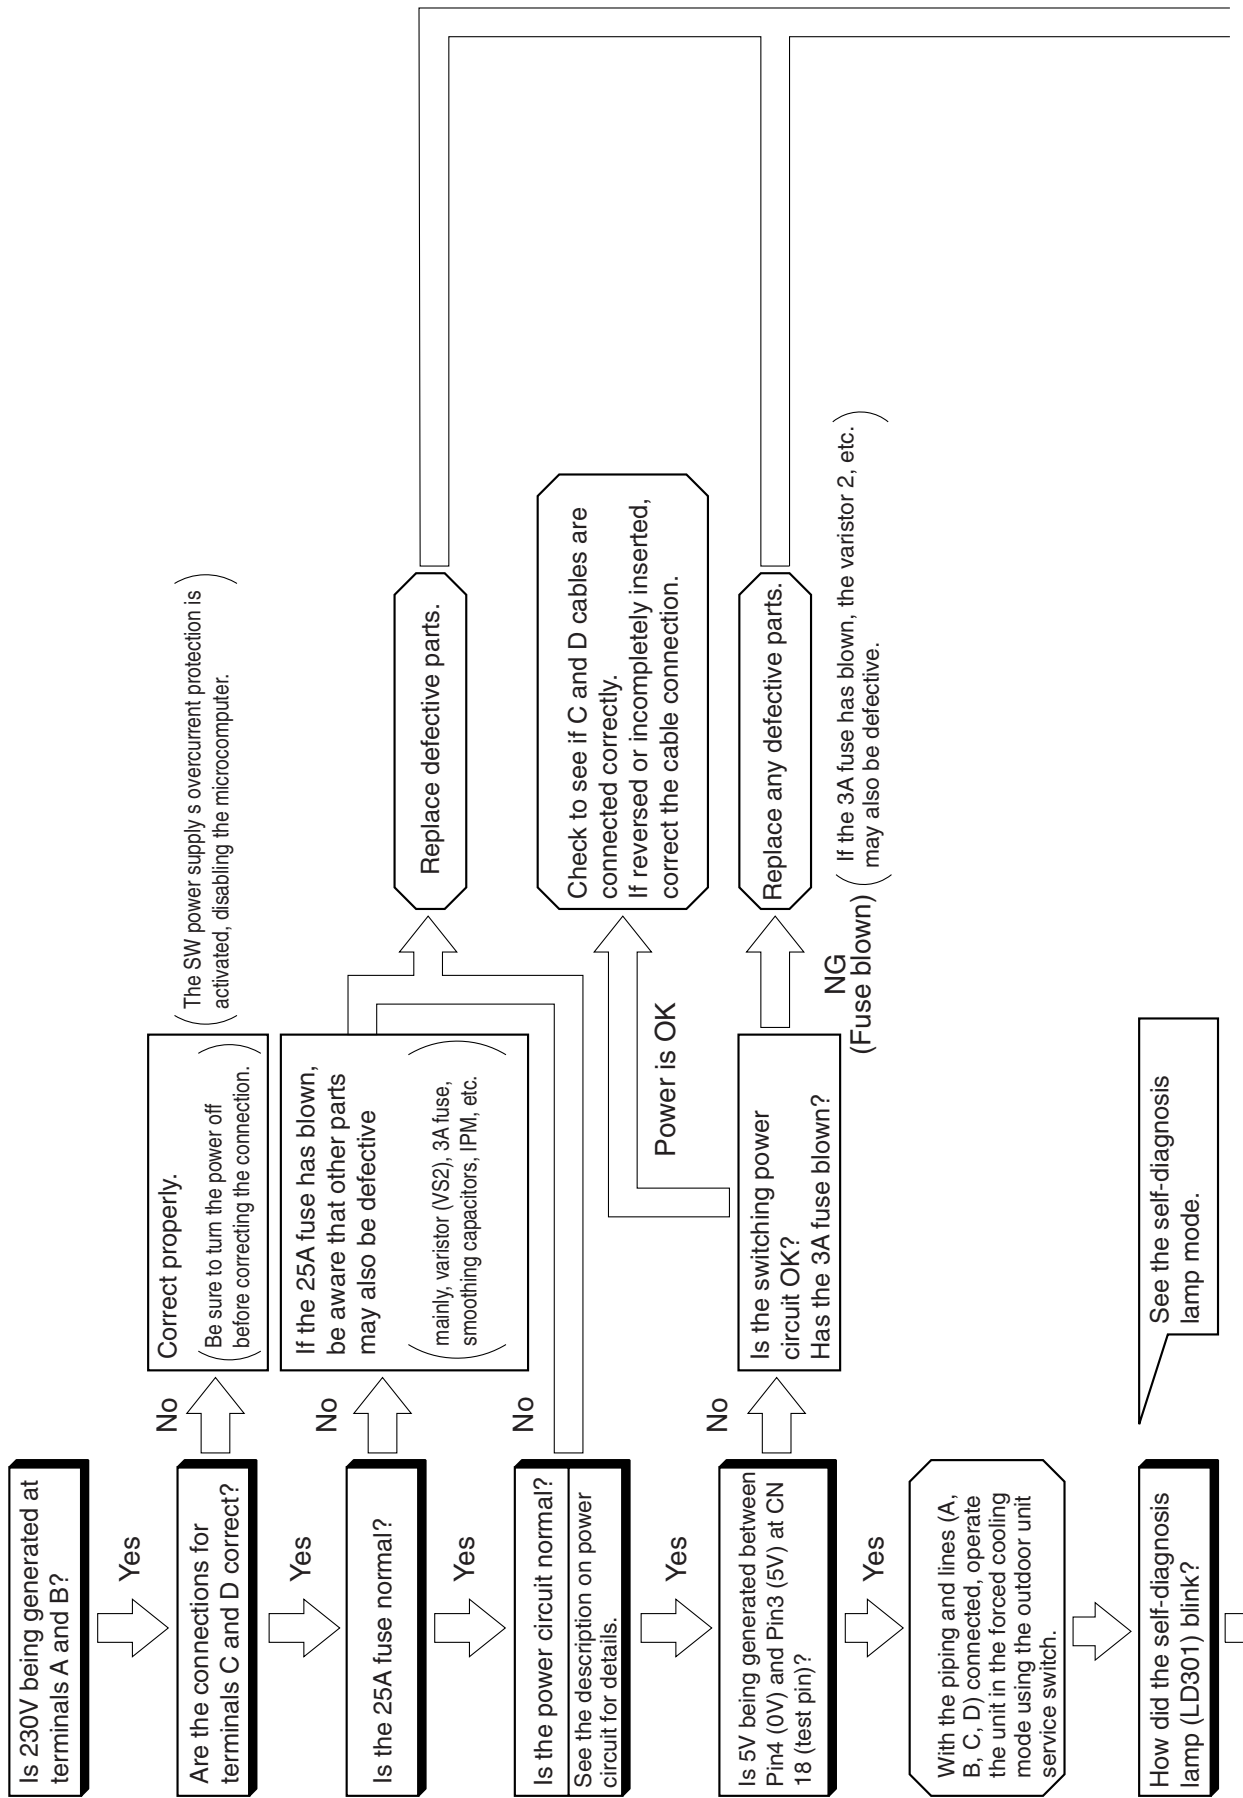


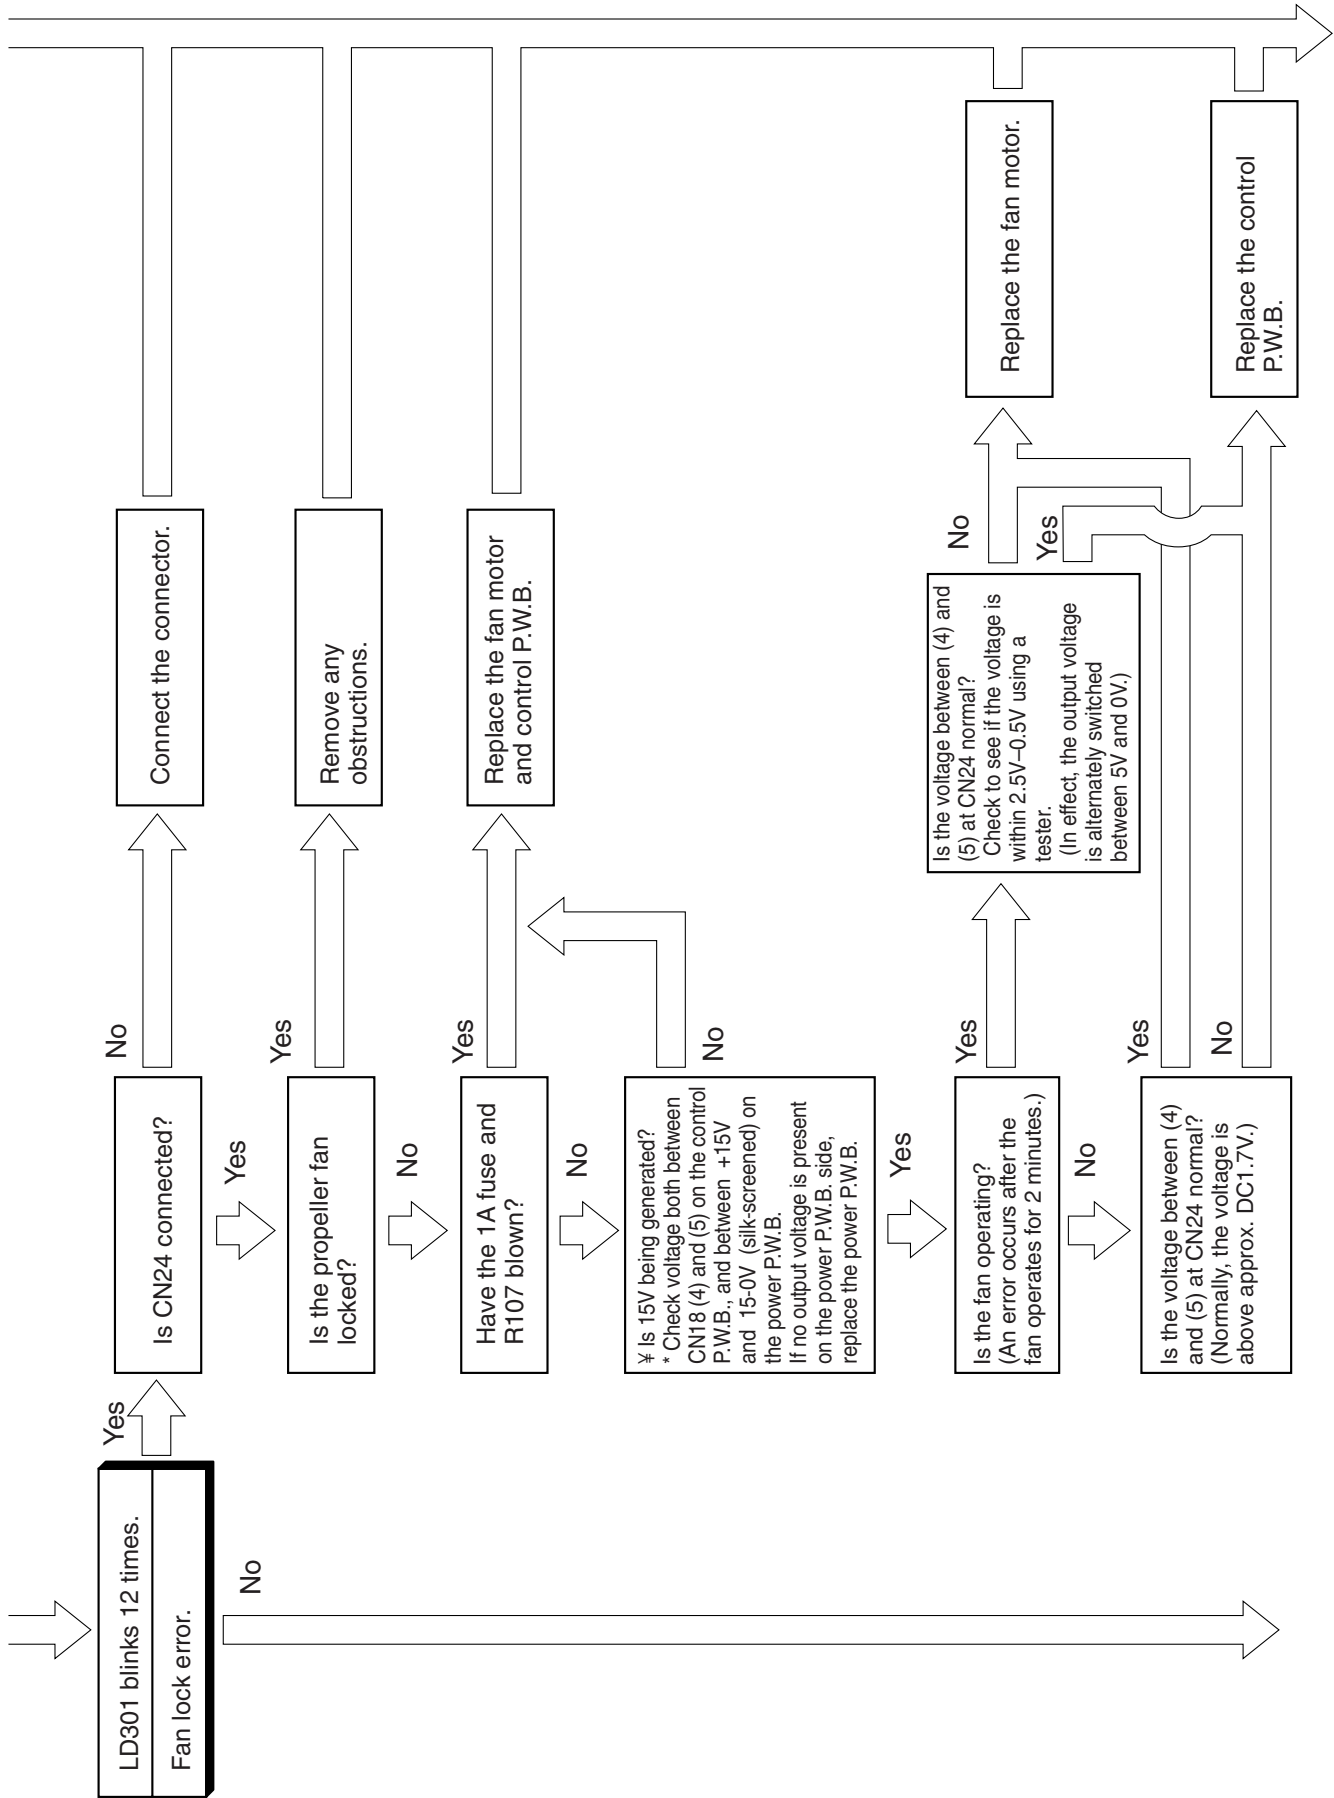


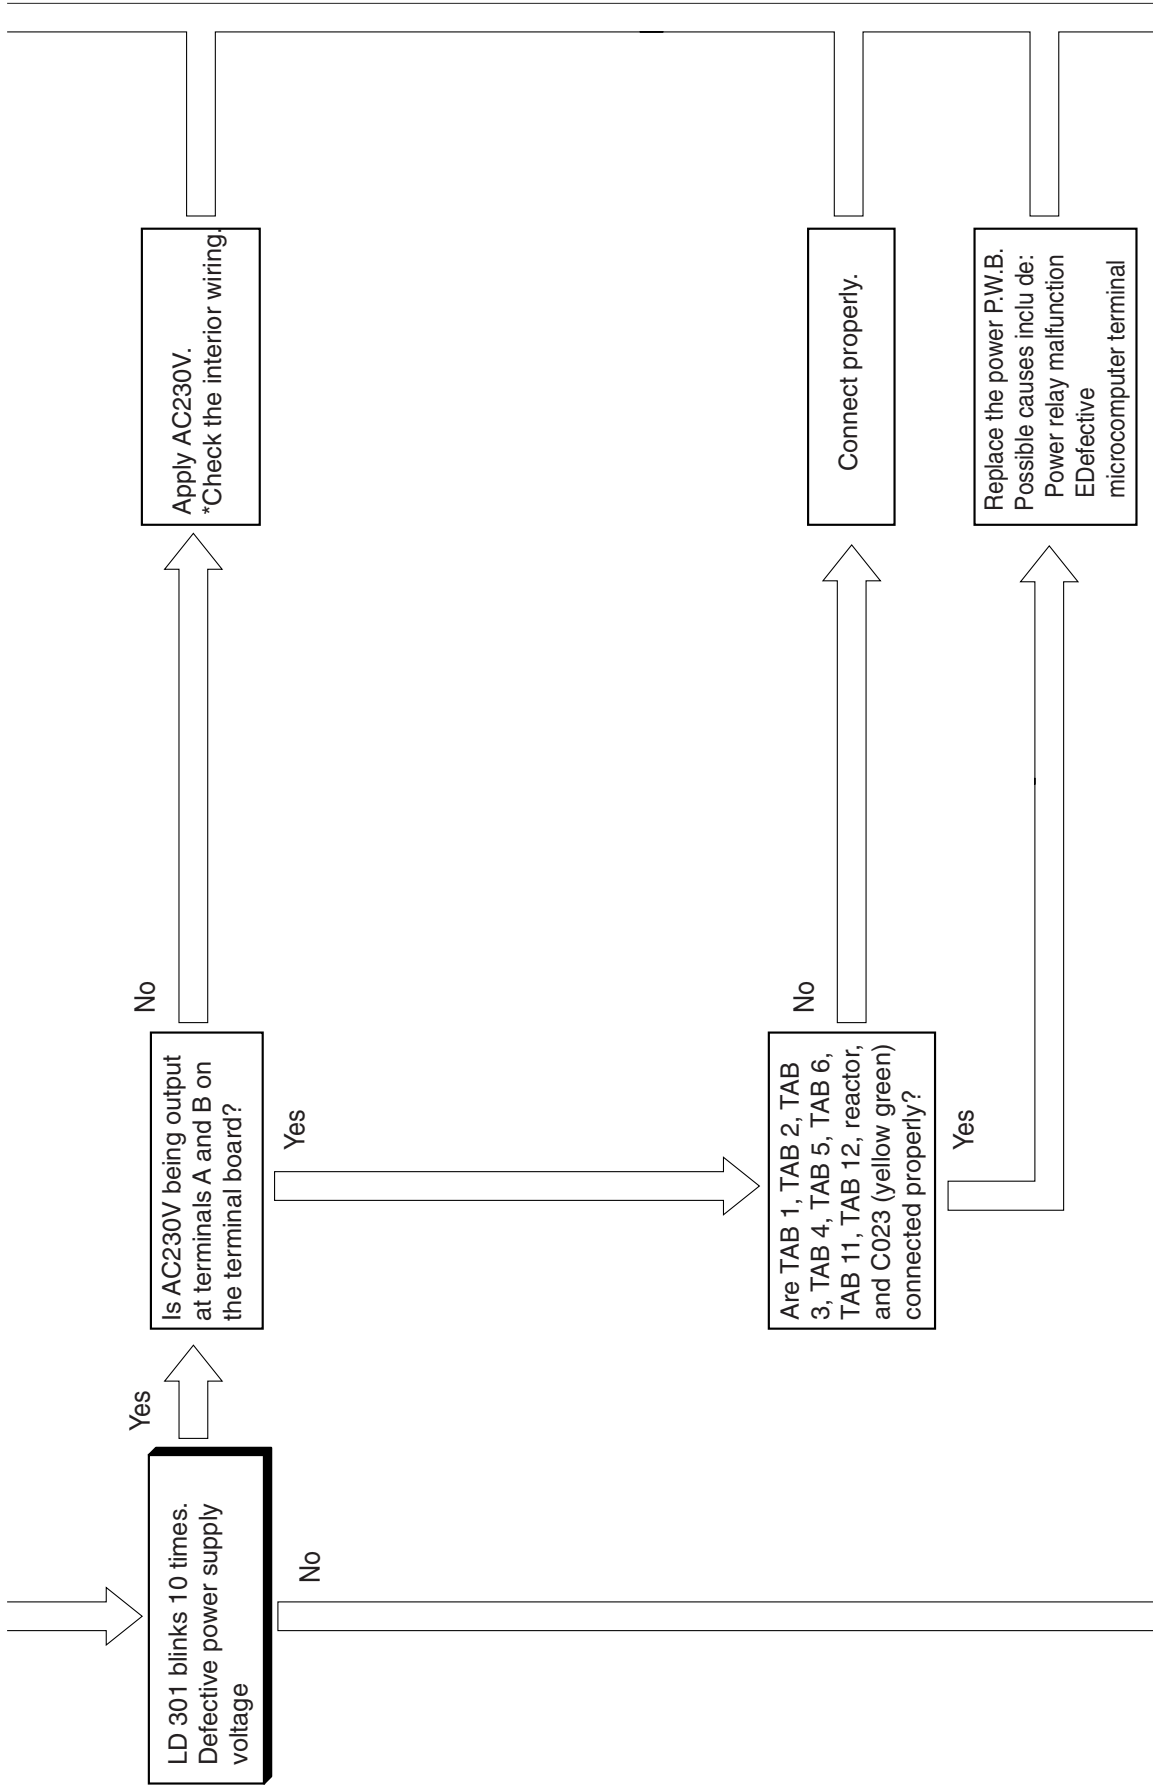

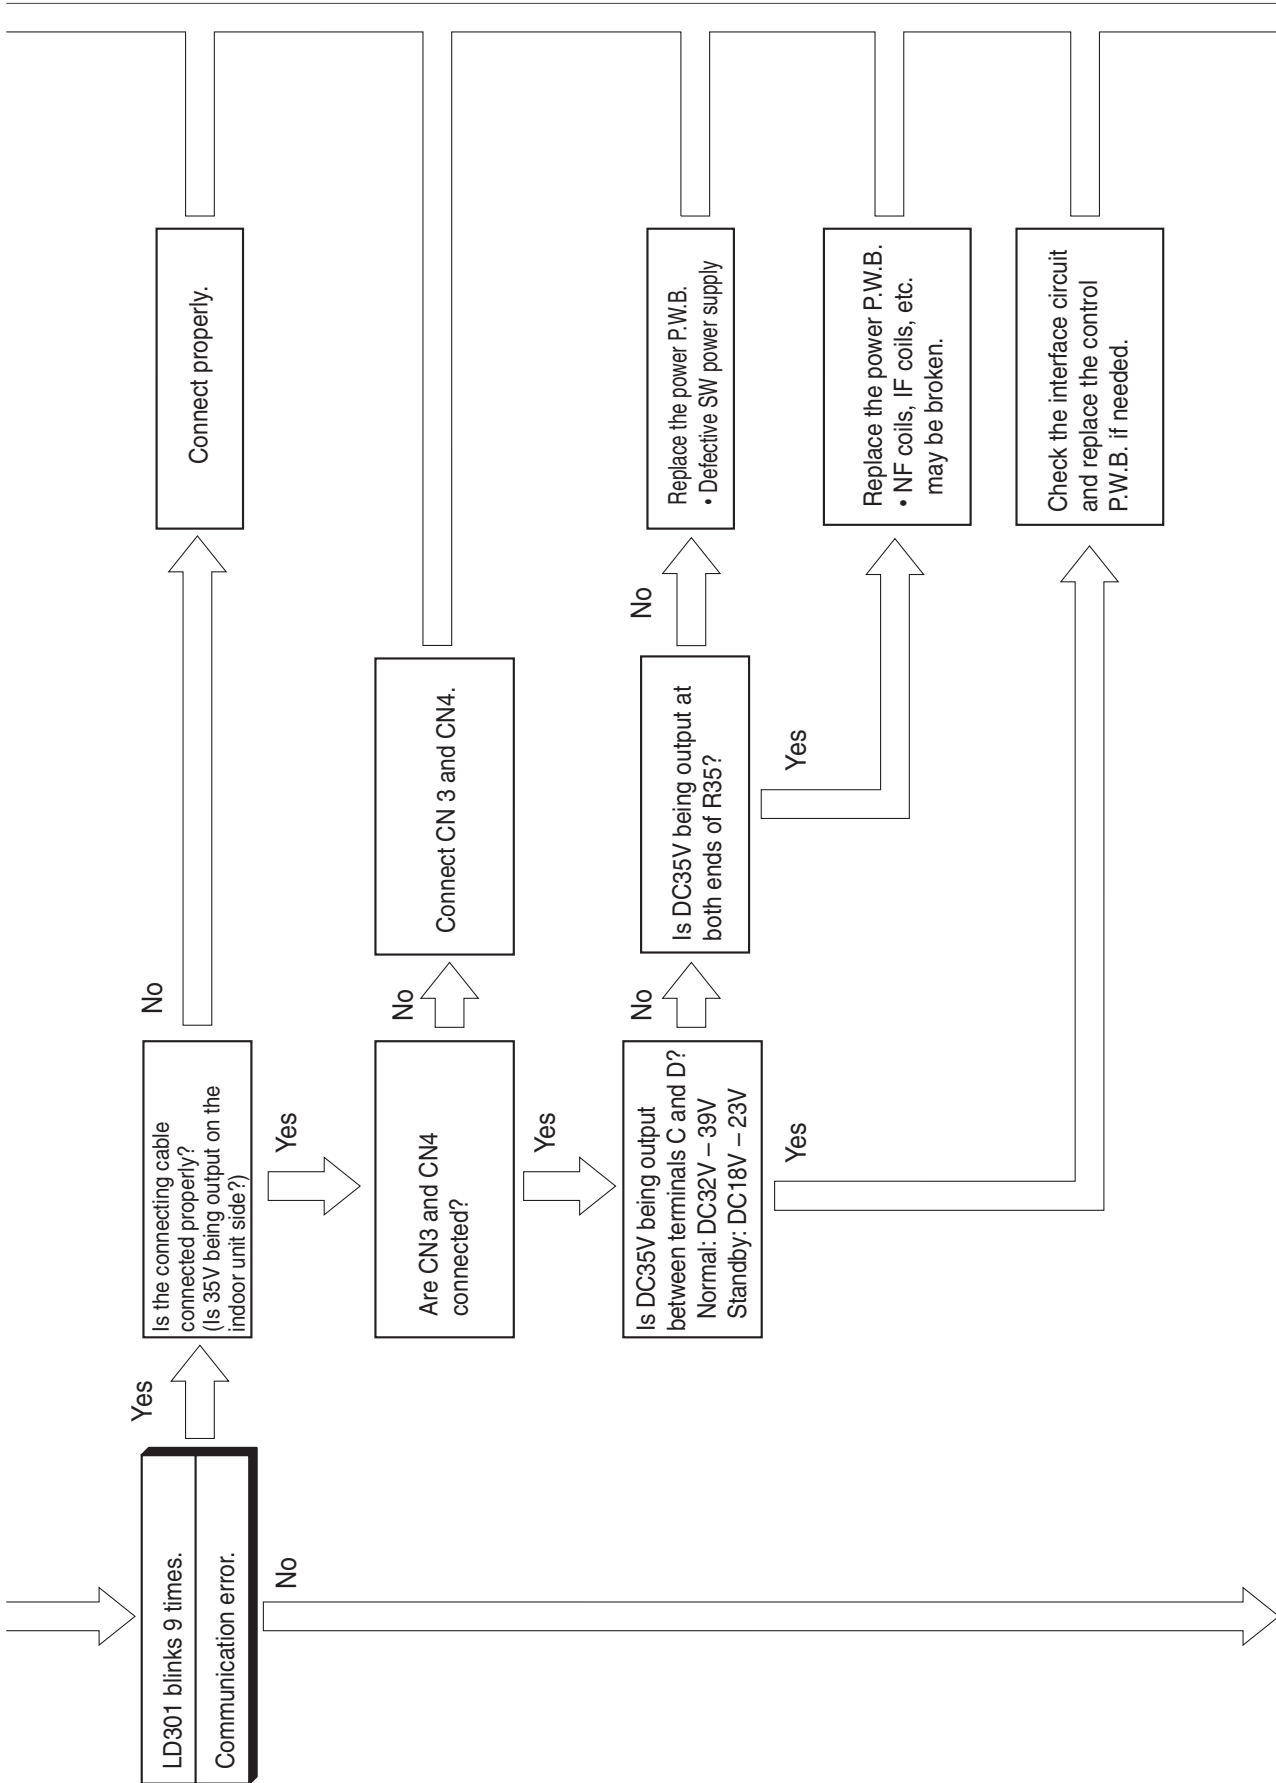

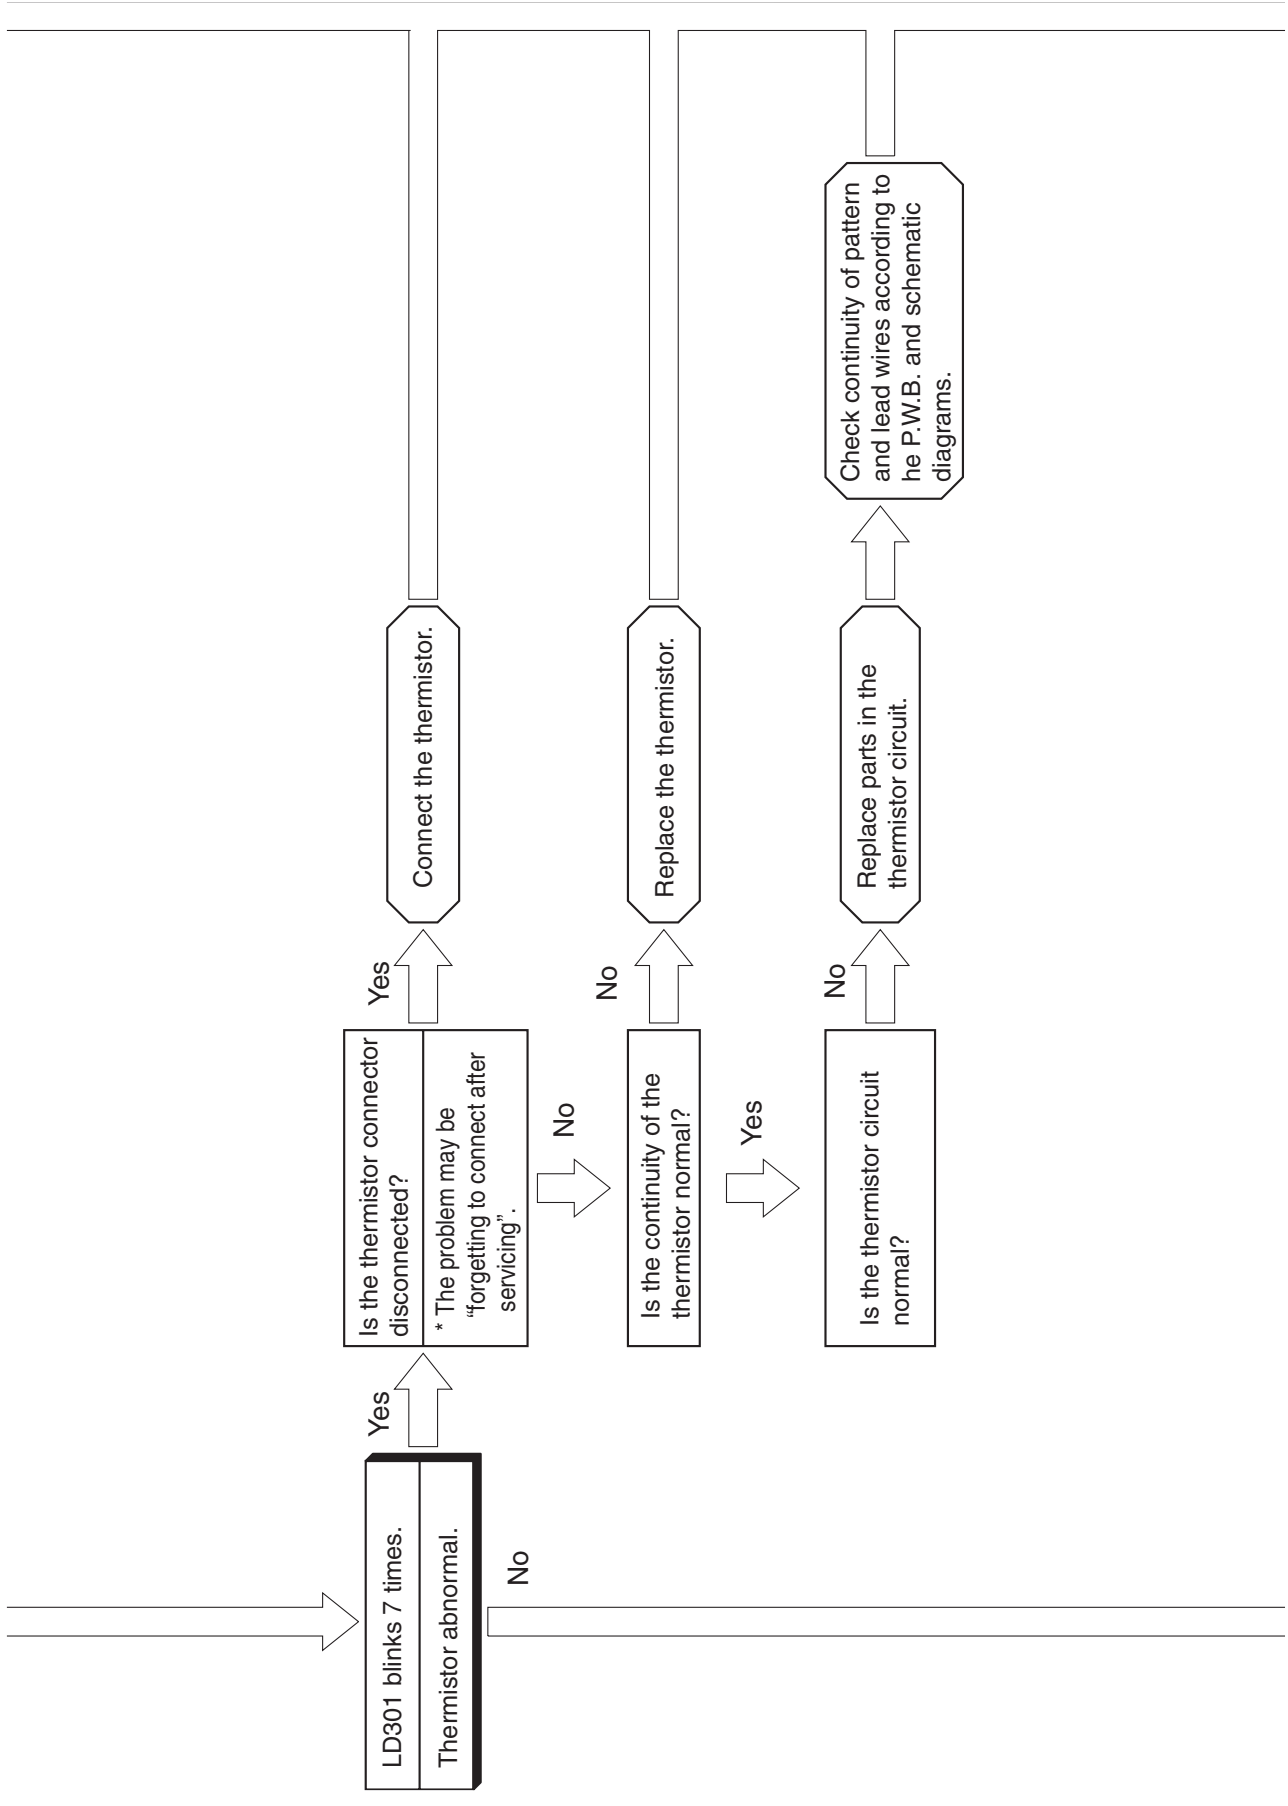

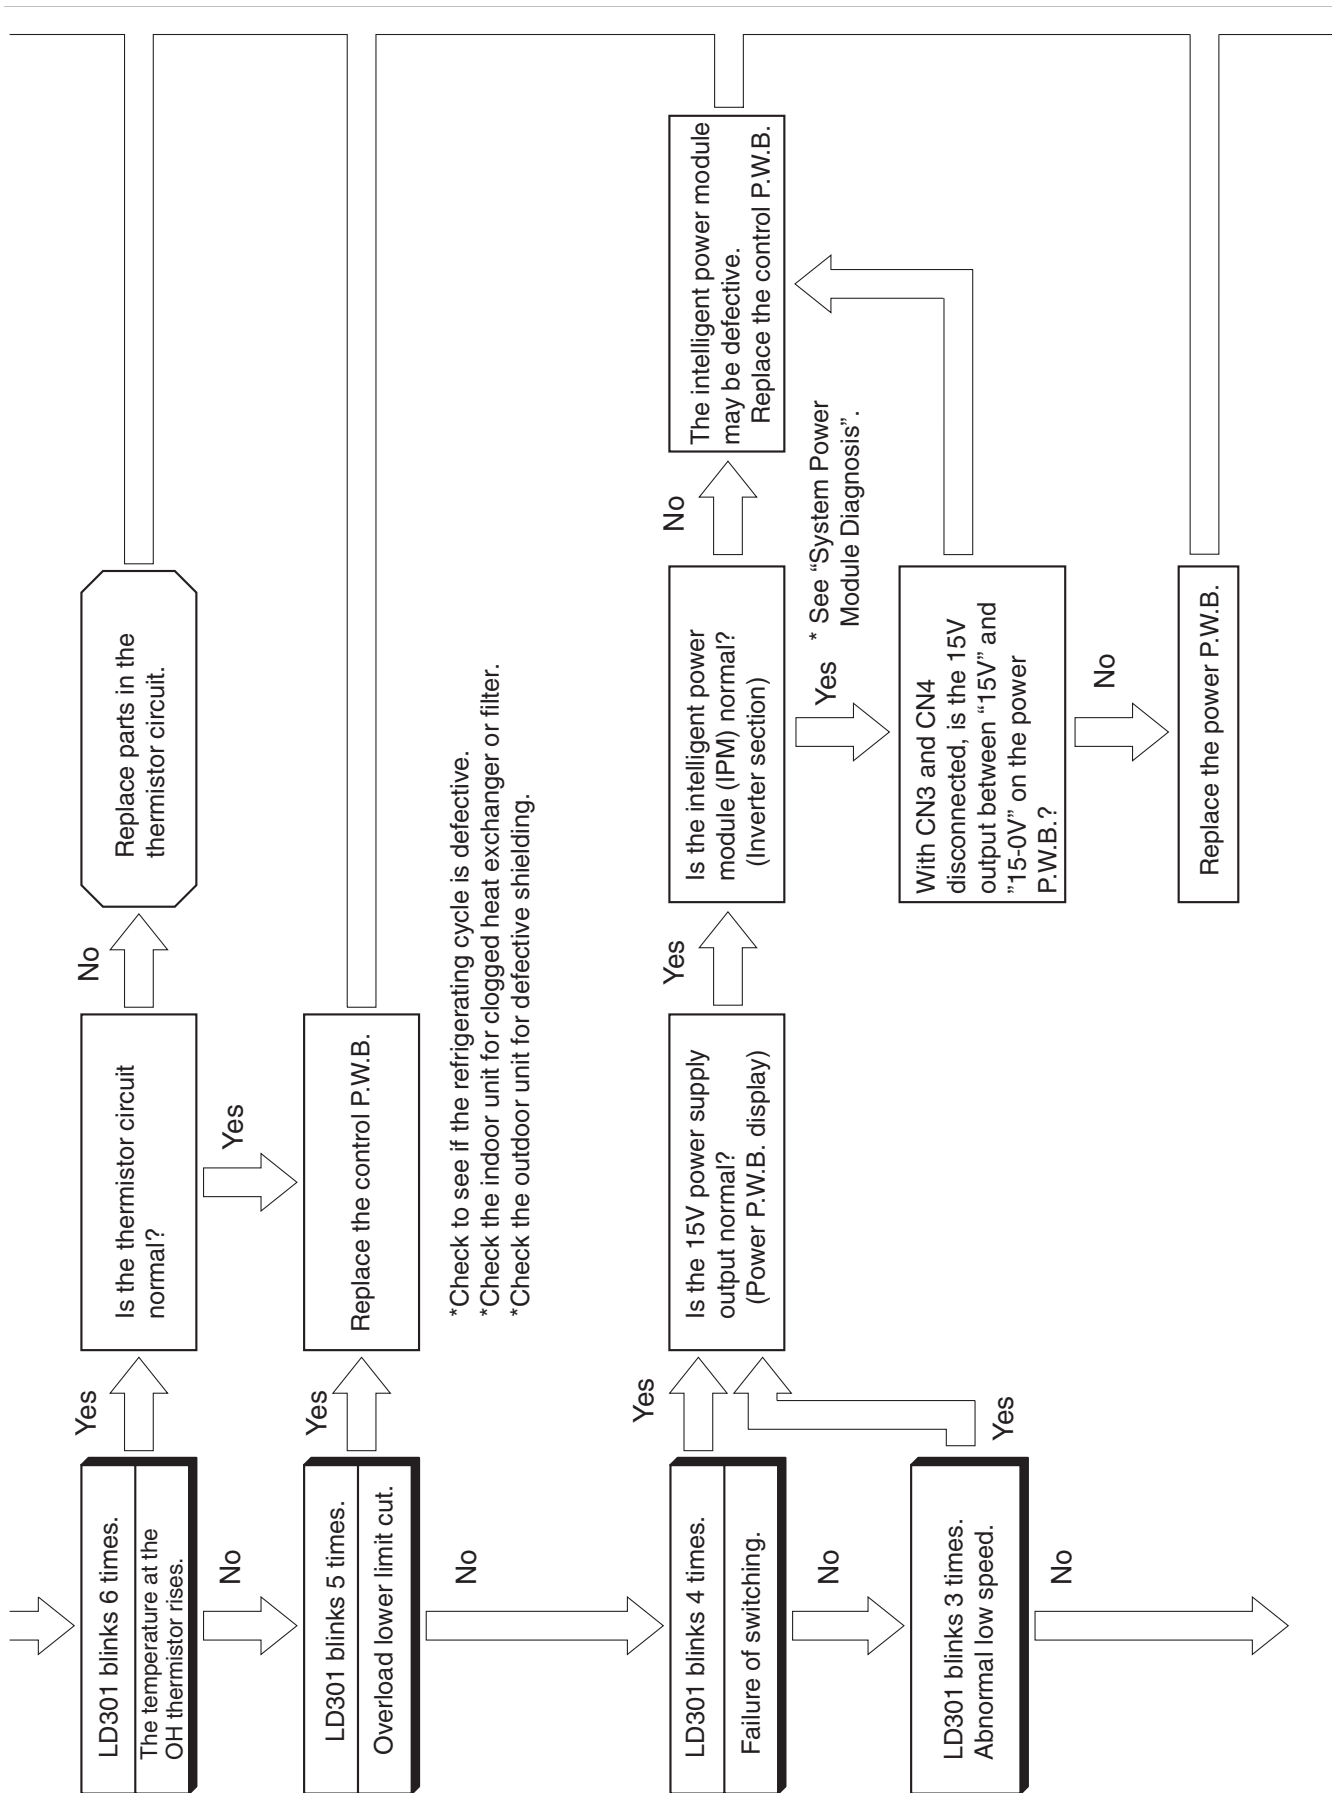


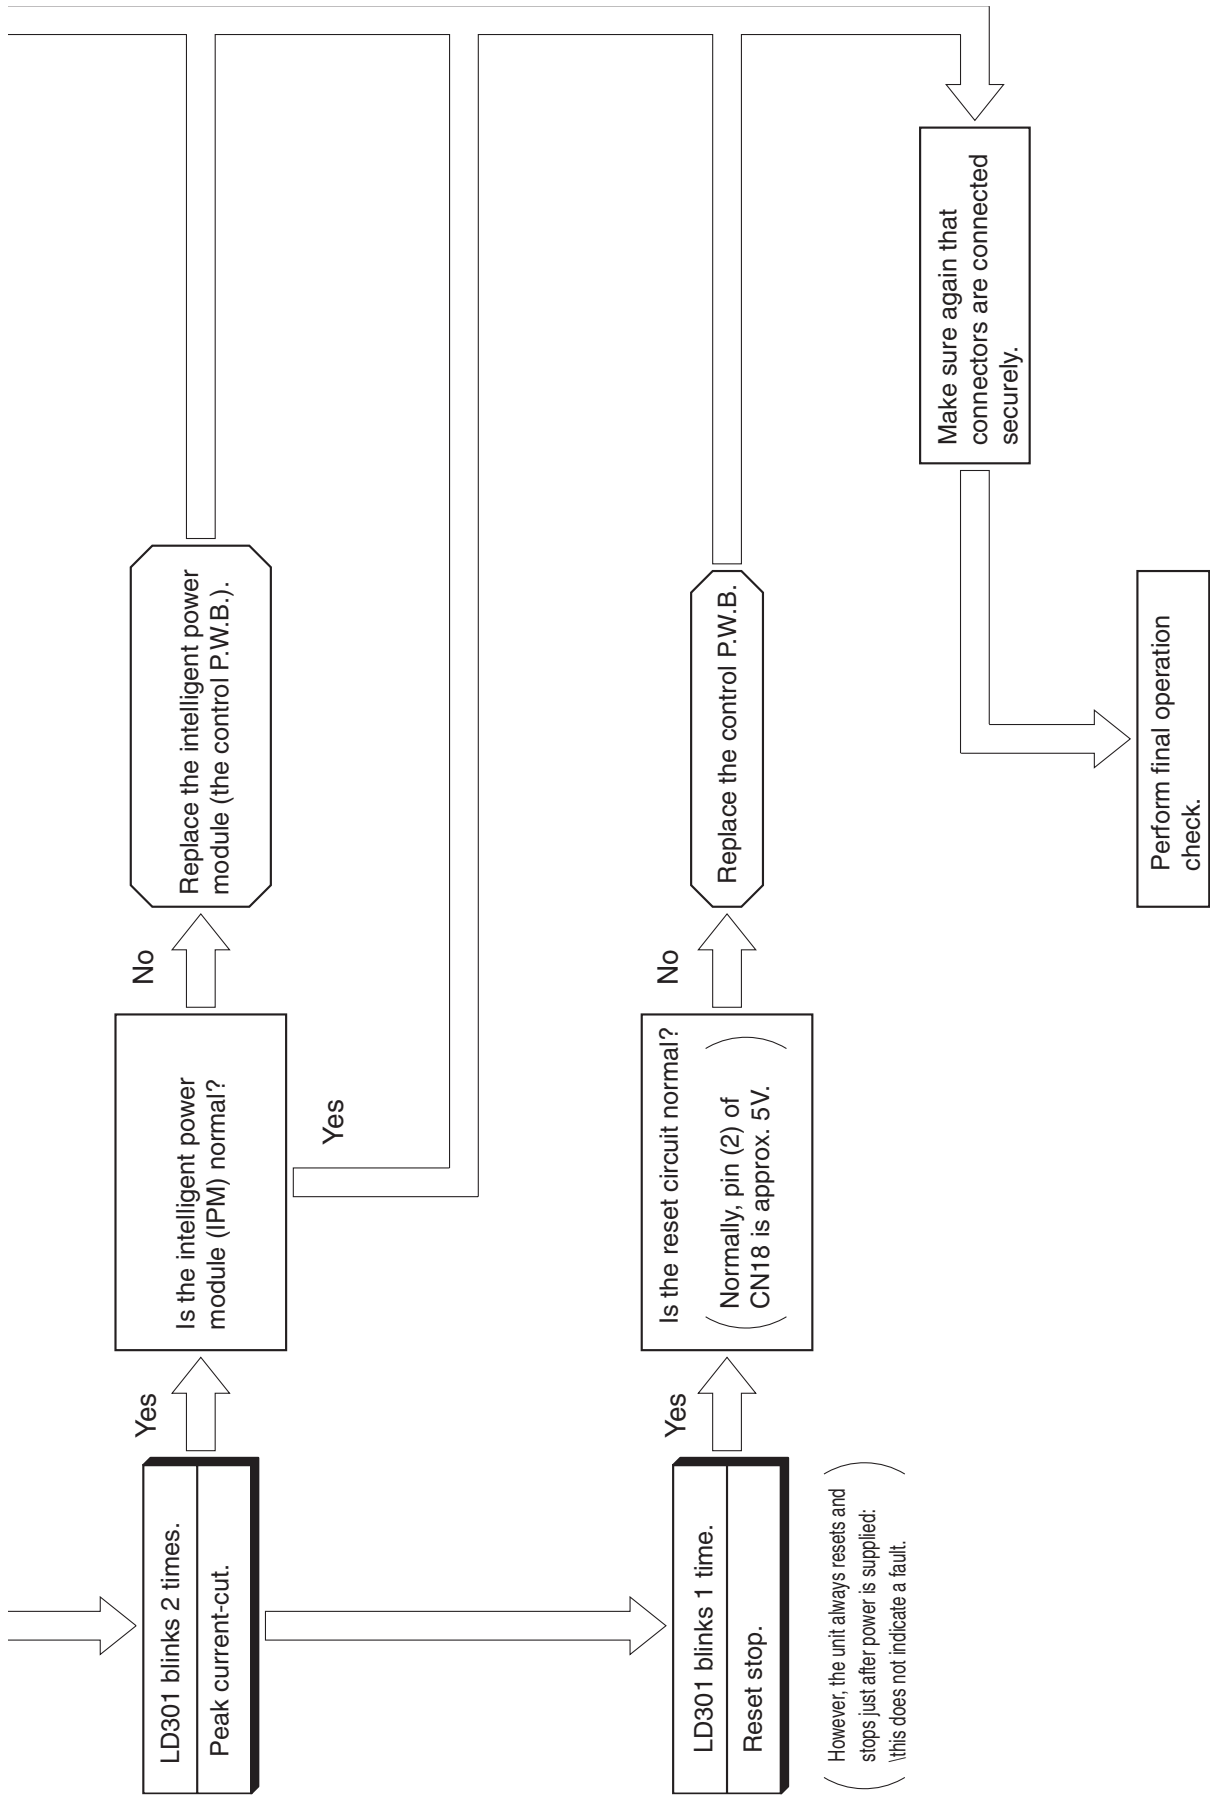

CHECKING THE REFRIGERATING CYCLE

(JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

1. Troubleshooting procedure (No operation, No heating, No cooling)

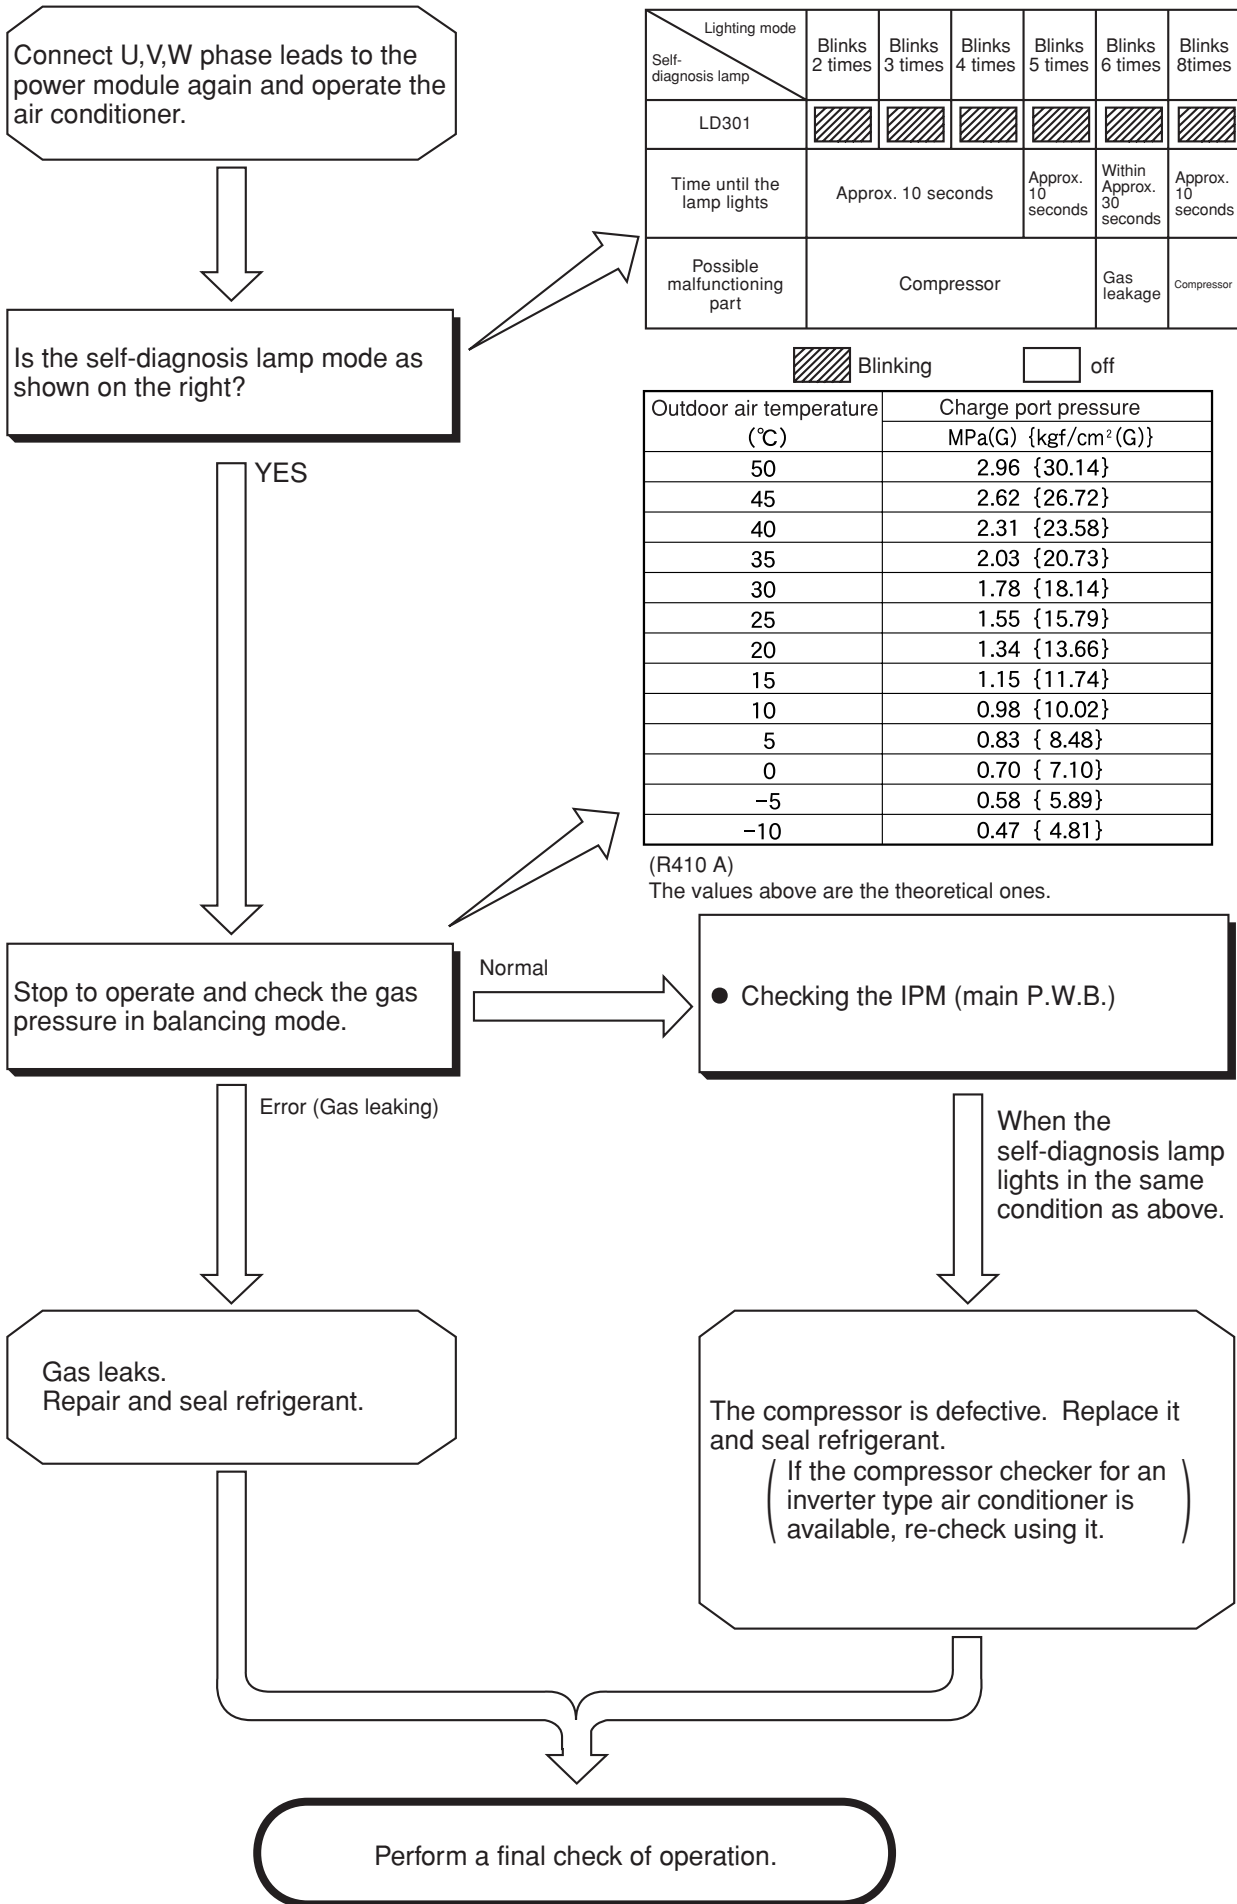


HOW TO OPERATE USING THE SERVICE SWITCH THE OUTDOOR UNIT

MODEL RAC-25YH4, RAC-35YH4

1. Turn off the power switch.
2. Remove the electrical box cover.
3. Turn on the power switch
4. After waiting for 30 seconds, push the service switch for a second.

LD303 (red) will light and the unit will operate in the forced cooling mode at this time.

Never operate the unit for more than 5 minutes.

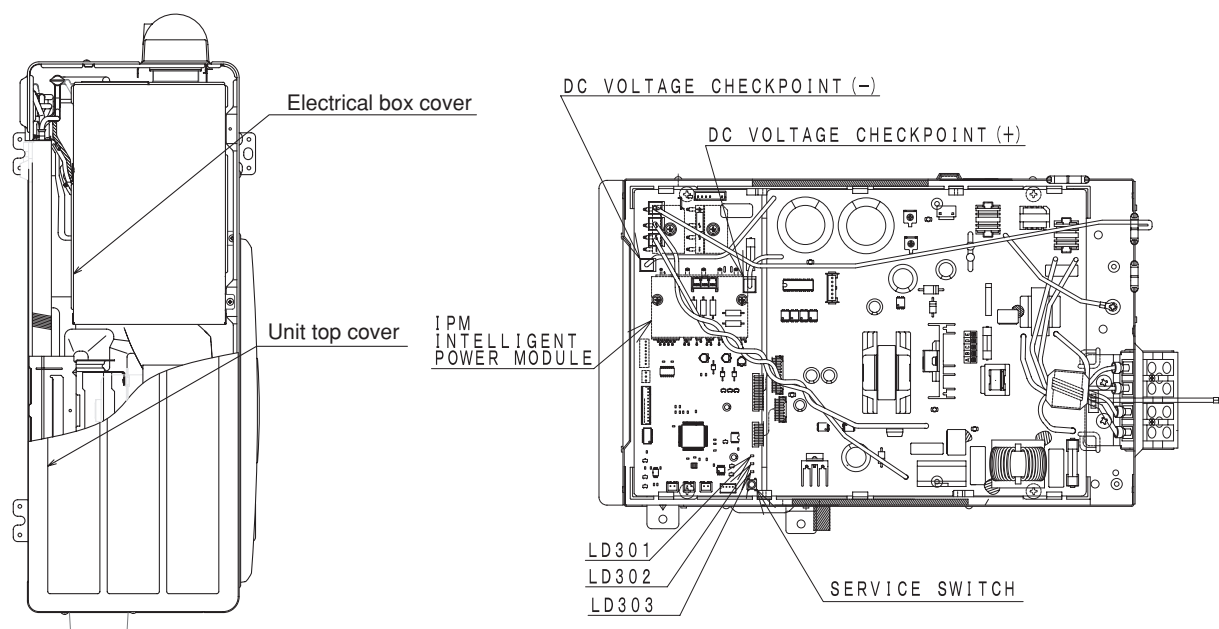

(Cautions)

- (1) If interface signal (DC 35V) terminals C and D are not connected when the outdoor unit is in forced cool mode, the outdoor unit defect indicator (LD301) will blink 9 times during operation to indicate communication error.
- (2) If checking is done with the compressor connector disconnected, the unit will stop and LD301 will blink 4 times.


Be sure to push the service switch for a second again to stop the forced cool operation..

HOW TO OPERATE THE OUTDOOR UNIT INDEPENDENTLY

1. Connect the large dia. pipe side and small dia. pipe side service valve using a pipe.

Connect the small diameter service valve and the large diameter service valve using the reducing union and copper pipe as shown on the right.

Charge refrigerant of 300g after vacuuming (*1)

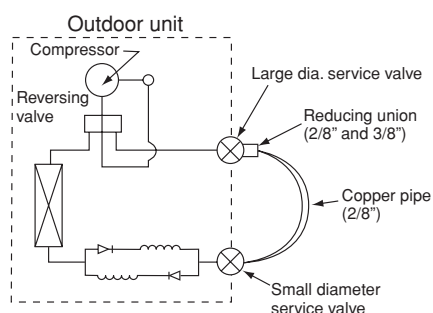

Parts to be prepared

- (1) Reducing union
2/8" (6.35 mm)
3/8" (9.52 mm)
- (2) Copper pipe (2/8" and 3/8")

Do not operate for more than 5 minutes

The operation method is the same as "How to operate using the connector to servicing the outdoor unit".

*1 The charging amount of 200g is equivalent to the load in normal operation.

IPM (Intelligent Power Module) DIAGNOSIS

SSM1001M	
<p>Circuit diagram of the device</p>	
<p>Circuit diagram of the module</p>	
<p>Terminals symbol mark of the module</p> <p>* See next page for measuring value using multimeter</p>	

- | | |
|--------|----------------|
| 6:PGU | 29:Fail signal |
| 13:PGV | 35:INVOV |
| 20:PGW | 36:0V |
| 26:NGU | 37:N |
| 27:NGV | 39:W |
| 28:NGW | 40:V |
| | 41:U |
| | 42:P |

Diagnosis procedure of IPM using multimeter.

<Inverter section>


Set the multimeter function to resistance x 100. If the multimeter does not have x 100 range, please select its range from x 1 to x 100.

The judgment shall be OK. When the measurement was high resistance.

(Please consider that the probe polarity will be reverse when use a digital multimeter due to its battery connection inside)

<note>


Sometimes, it may misjudge as OK because of low conductivity when power module was damaged as disconnect mode. In this case, please check the resistance by reversing the probe polarity and consider OK when it was low resistance. Also, it is OK if the resistance was as same as the other phases (U,V,W).

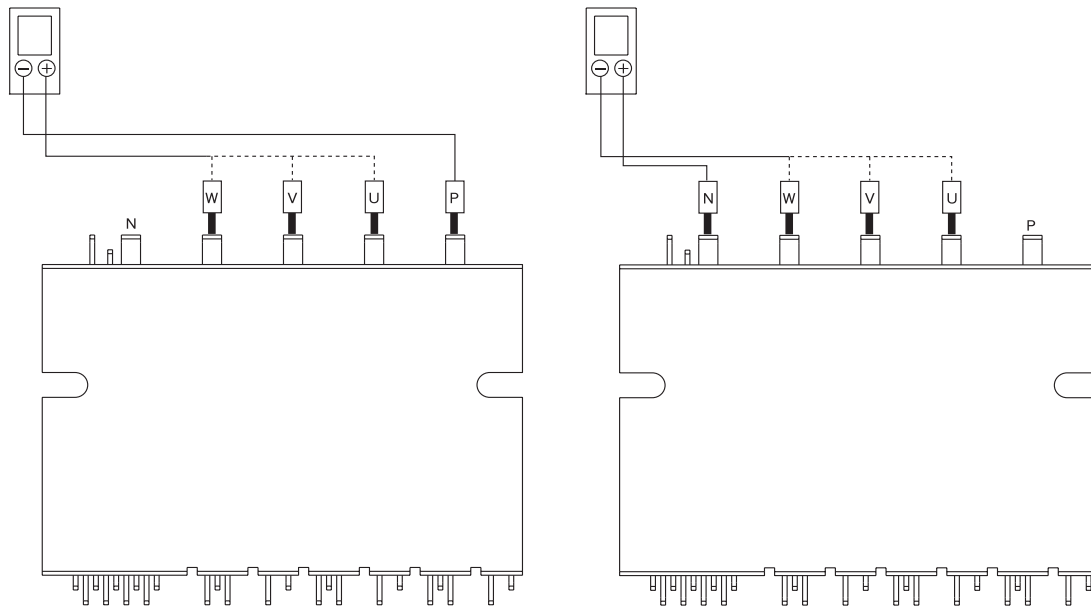

<Driver circuit (internal IC)>

15V will not be generated when the internal IC has malfunctioned.

To find the malfunction either the power supply of power P.W.B or internal IC, please follow the procedure following.

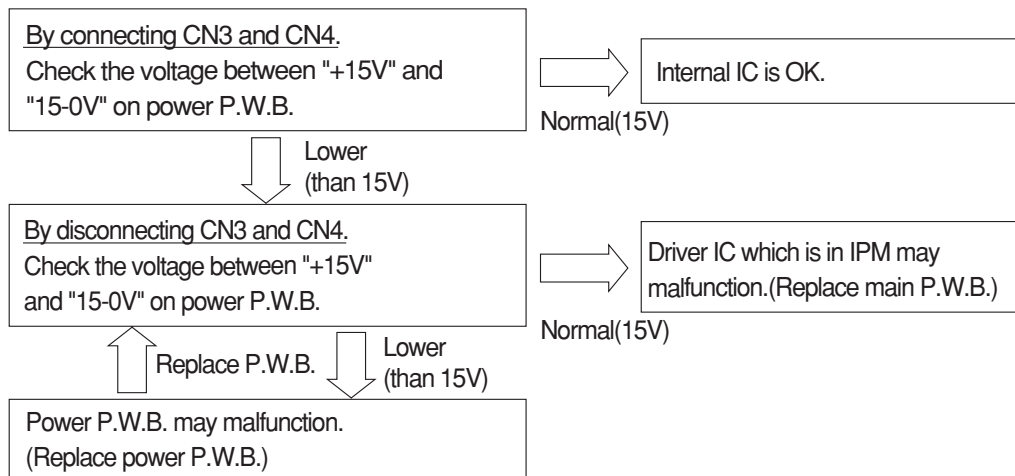



Procedure for Disassembly and Reassembly

INDOOR UNIT RAS-25YH4, RAS-35YH4

1. Front Panel

- (1) Pull up the washable panel by holding it at both lower sides with both hands.

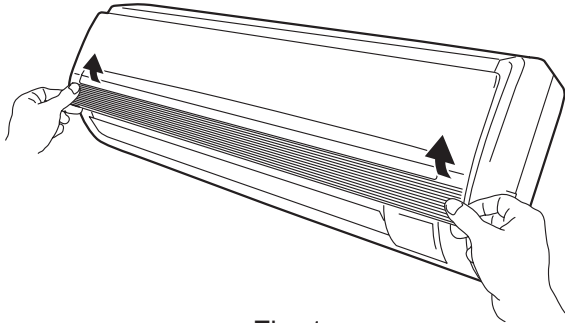


Fig. 1

- (2) When the panel opens full, push the inner part of the right arm into the inside and pull the panel forward while closing it gradually.

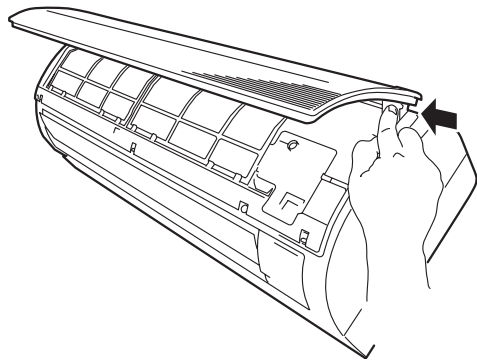


Fig. 2

2. Front cover

- (1) After removing two screws, pull the center of the front cover forward and release the claws.
- (2) Hold the front cover at both lower sides and pull them forward to remove.

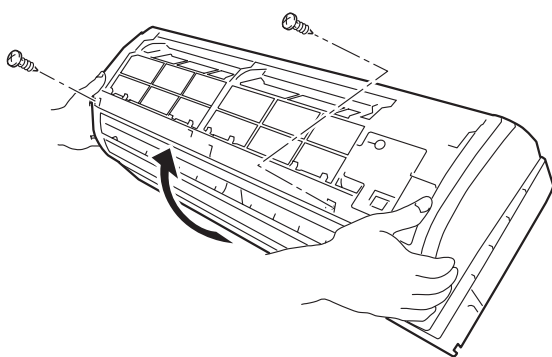


Fig. 3

3. Main P.W.B. and Reception/Indication P.W.B

- (1) Remove each connector from the lead wire.
- (2) Remove the four P.W.B supports from the main P.W.B..
- (3) Pull the support hook at the upper side of the indication lamp of the reception/indication P.W.B and pull out the P.W.B forward.

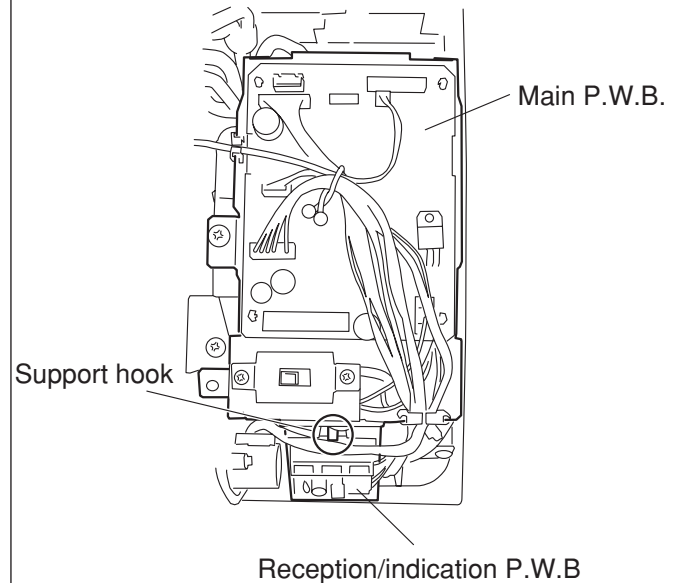


Fig. 4



4. Tangential air flow fan and fan motor

- (1) Remove two screws locking the drain pan.
- (2) Press to lower the hook at the center of the unit a little and pull the claw forward to remove the drain pan.

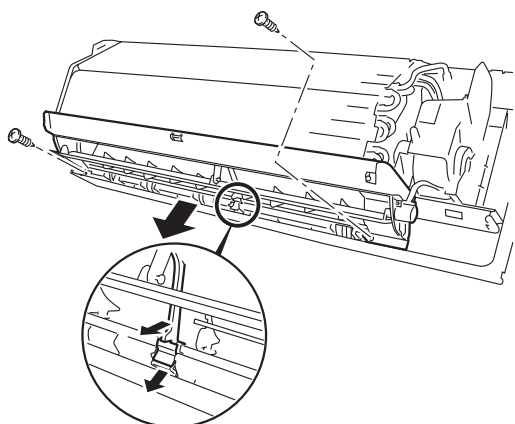


Fig. 5

- (3) Remove the screws from the upper and lower bearing covers.
- (4) Remove the locking hook of the lower bearing cover from the Cabinet.

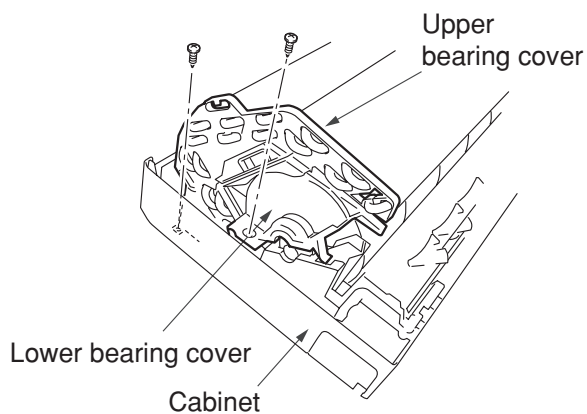


Fig. 6

- (5) Remove two lock screws from the fan motor holder.
- (6) Pull up the evaporator by holding it at the lower side. Insert a screwdriver through the space between the evaporator and drain chute and loosen the fan lock screw to remove the fan and fan motor.

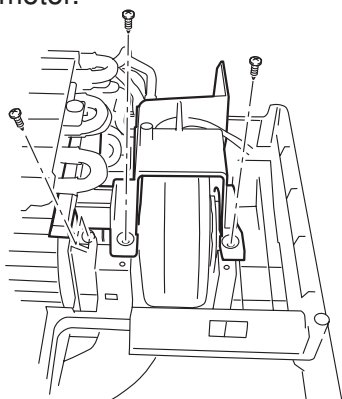


Fig. 7

OUTDOOR UNIT RAC-25YH4, RAC-35YH4

1. Electrical parts

- (1) Remove the service value cover lock screws and lower the cover to remove it.
- (2) Remove the top cover lock screw and raise the cover to remove it.

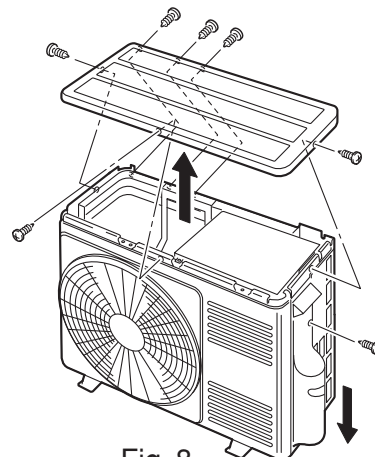


Fig. 8

- (3) Remove the front cover lock screw.
- (4) Lower the right side of the front cover and pull it forward. Then, remove the cover from the hook.
- (5) Pull the right side of the front cover a little and pull up the left side to remove it from the hook.

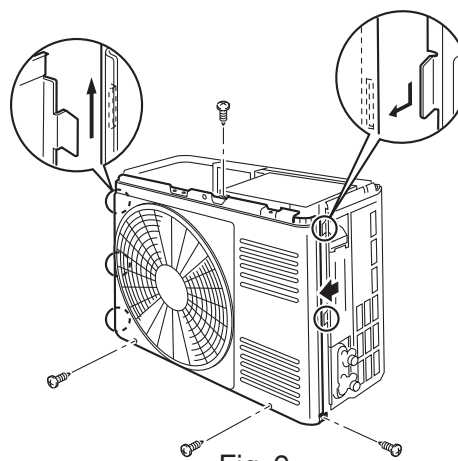


Fig. 9

- (6) Remove each connector and earth cable from the lead wire.
- (7) Remove four lock screws from the main P.W.B. and pull two support hooks at the front side to remove the P.W.B.
- (8) Pull three support hooks at the rear side of the Power P.W.B. to remove the P.W.B.


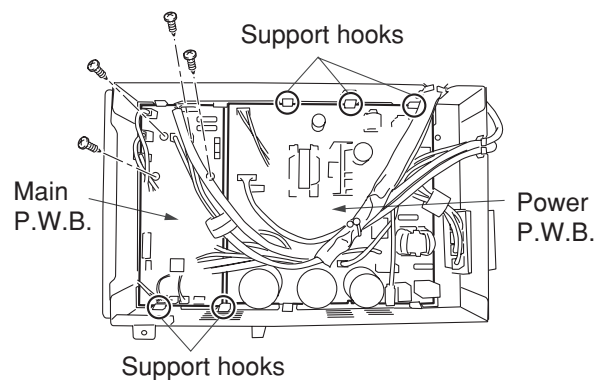


Fig. 10



PARTS LIST AND DIAGRAM

INDOOR UNIT MODEL: RAS-25YH4, RAS-35YH4

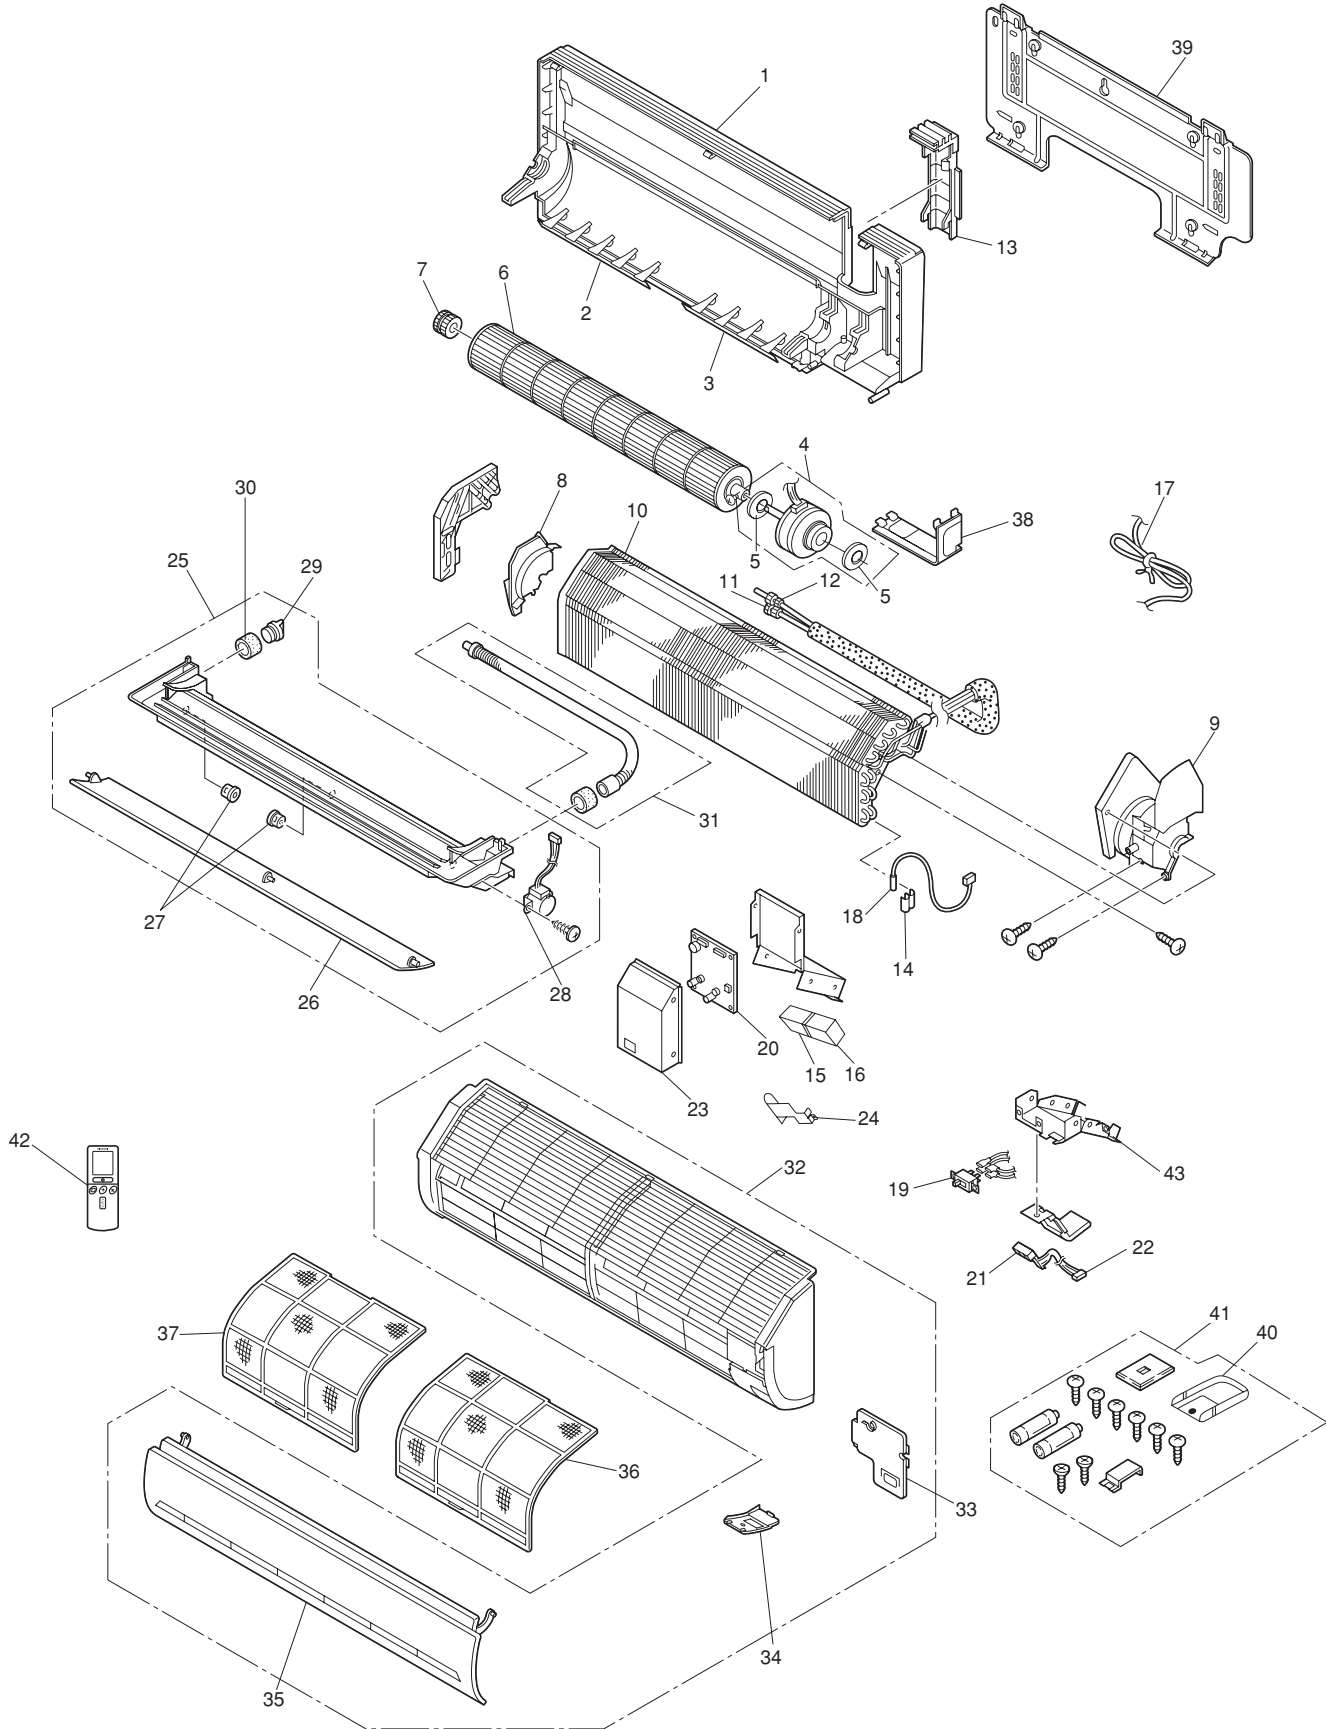


INDOOR UNIT

NO	PARTS NO.		Q'TY	PARTS NAME
	RAS-25YH4	RAS-35YH4		
1	HWRAS-25YH4901		1	CABINET
2	HWRAS-25YH4902		1	VERTICAL AIR DEFLECTOR-L
3	HWRAS-25YH4903		1	VERTICAL AIR DEFLECTOR-R
4	HWRAS-25YH4904		1	FAN MOTOR 25W 1.1kg
5	HWRAS-25YH4905		1	ANTI VAIBRATION BUSHING
6	HWRAS-25YH4907		1	TANGENTIAL AIR FLOW FAN
7	HWRAS-25YH4908		1	FAN SUPPORT ASS'Y
8	HWRAS-25YH4909		1	FAN COVER
9	HWRAS-25YH4910		1	FAN MOTOR SUPPORT
10	HWRAS-25YH4911		1	EVAPORATOR ASS'Y
11	HWRAS-25YH4912		1	PIPE SET(IN)
12	HWRAS-25YH4913		1	PIPE SET(OUT)
13	HWRAS-25YH4914		1	UPPER COVER
14	HWRAS-25YH4915		1	SPRING
15	HWRAS-25YH4916		1	TERMINAL BOARD(2P)
16	HWRAS-25YH4917		1	TERMINAL BOARD(2P)
17	HWRAS-25YH4918		1	POWER SUPPLY CORD
18	HWRAS-25YH4919		1	THERMISTOR ASS'Y
19	HWRAS-25YH4920		1	POWER SWICHI
20	HWRAS-25YH4921	HWRAS-35YH4901	1	P.W.B(MAIN)
21	HWRAS-25YH4922		1	P.W.B(INDICATION)
22	HWRAS-25YH4923		1	CONNECTING CORD(12PIN)
23	HWRAS-25YH4924		1	ELECTRIC PARTS COVER
24	HWRAS-25YH4925		1	COVER(TERMINAL)
25	HWRAS-25YH4926		1	DRAIN PAN
26	HWRAS-25YH4927		1	HORIZONTAL AIR DEFLECTOR
27	HWRAS-25YH4928		2	DEFLECTOR SUPPORT
28	HWRAS-25YH4929		1	AUTO SWEEP MOTOR
29	HWRAS-25YH4930		1	DRAIN CAP
30	HWRAS-25YH4931		1	HEAT INSULATOR PIPE
31	HWRAS-25YH4932		1	DRAIN HOSE
32	HWRAS-25YH4933		1	FRONT COVER ASS'Y
33	HWRAS-25YH4934		1	COVER(EARTH)
34	HWRAS-25YH4935		1	COVER(SWICHI)
35	HWRAS-25YH4936		1	FRONT PANEL
36	HWRAS-25YH4937		1	AIR FILTER(R)
37	HWRAS-25YH4938		1	AIR FILTER(L)
38	HWRAS-25YH4939		1	COVER(LOWER)(R)
39	HWRAS-25YH4940		1	MOUNTING PLATE
40	HWRAS-25YH4941		1	REMOCON. SUPPORT
41	HWRAS-25YH4942		1	SCREW ASS'Y
42	HWRAS-25YH4943		1	REMOTE CONTROL ASS'Y
43	HWRAS-25YH4906		1	COVER(ELECTRIC)



OUTDOOR UNIT MODEL: RAC-25YH4, RAC-35YH4

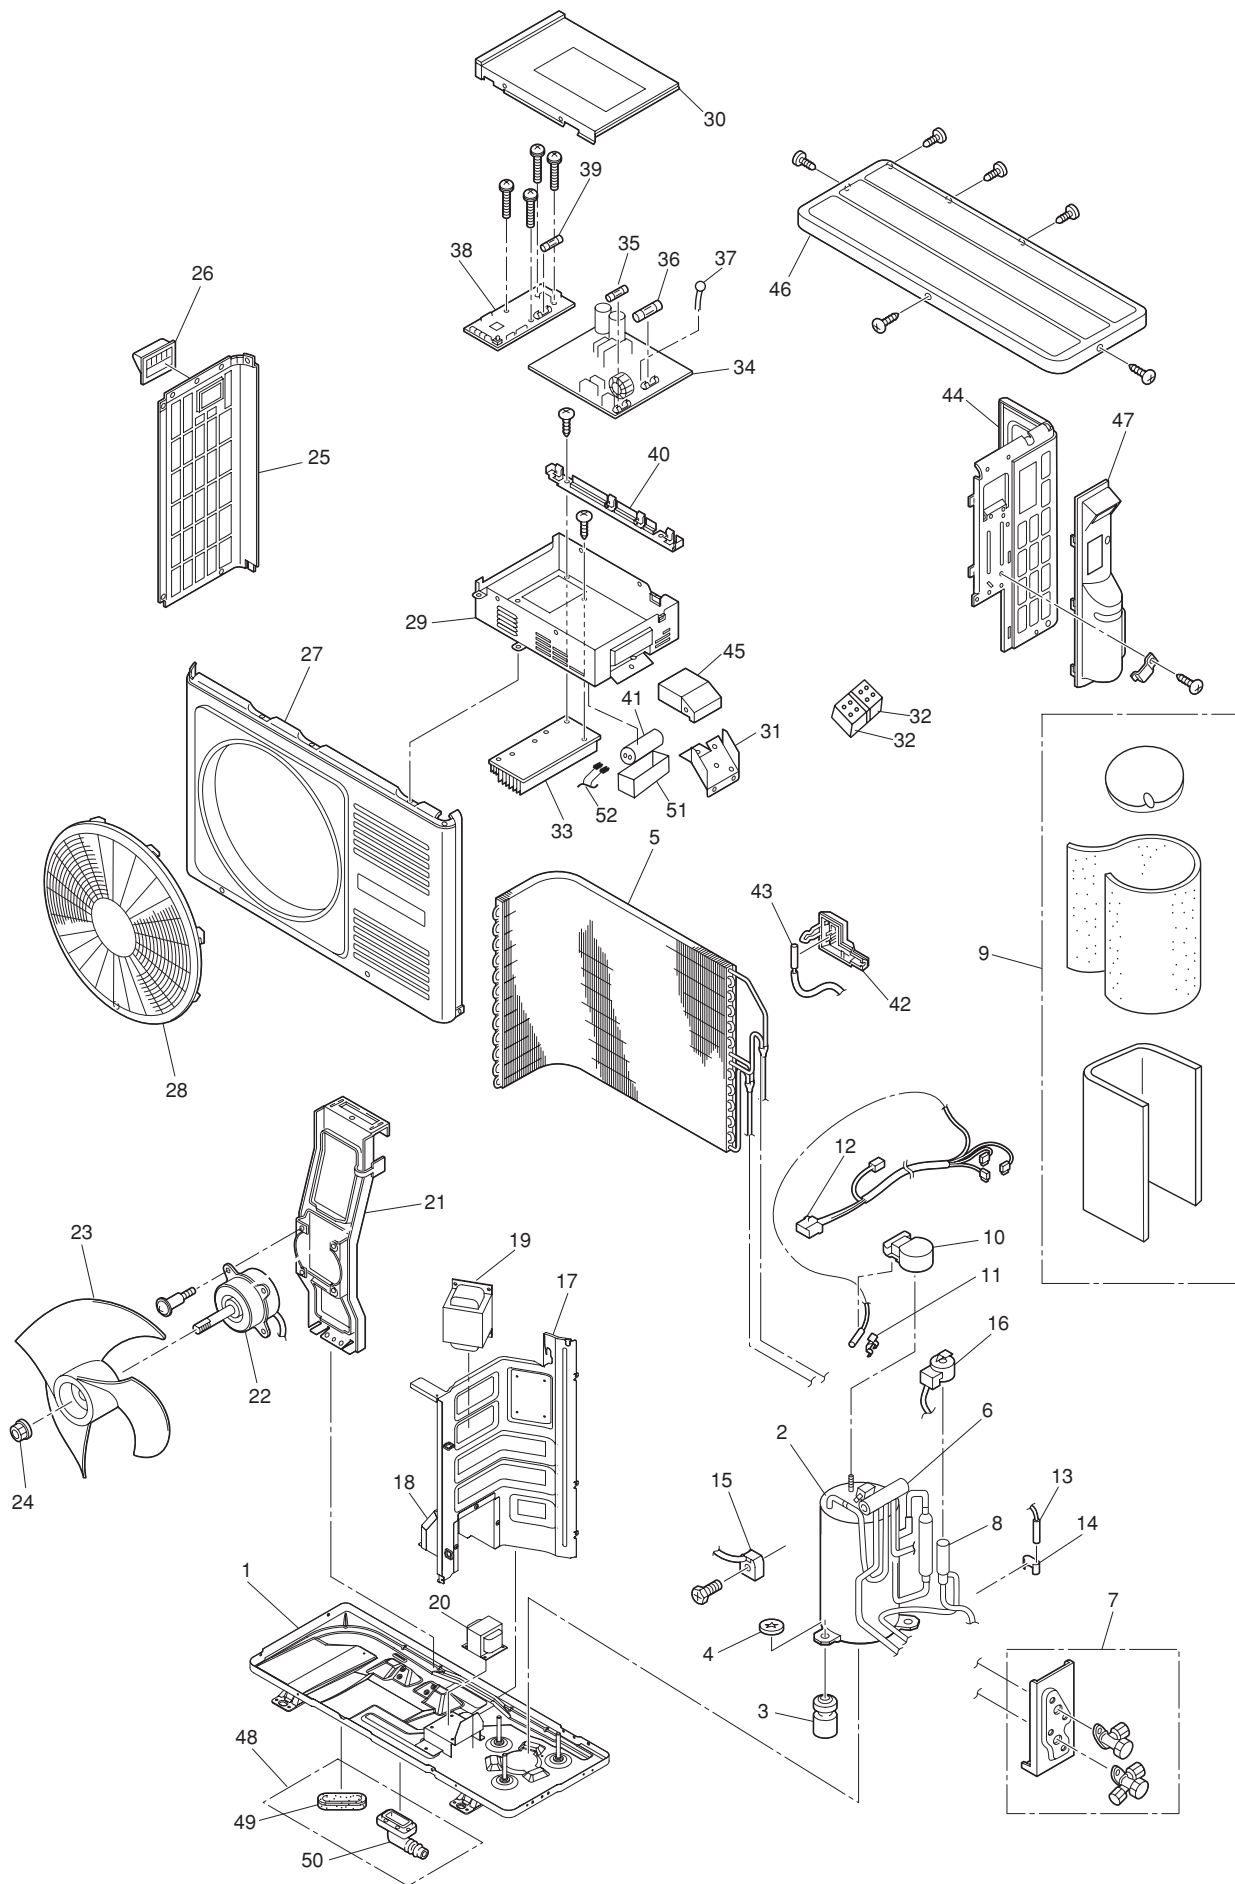

OUTDOOR UNIT

NO	PARTS No.		Q'TY	PARTS NAME
	RAC-25YH4	RAC-35YH4		
1	HWRAC-25YH4901		1	BASE
2	HWRAC-25YH4902		1	COMPRESSOR 1000W 9.7kg
3	HWRAC-25YH4903		3	COMPRESSOR RUBBER
4	HWRAC-25YH4904		3	PUSH NUT
5	HWRAC-25YH4905		1	CONDENSER
6	HWRAC-25YH4906		1	REVERSING VALVE
7	HWRAC-25YH4907		1	SERVICE VALVE ASS'Y
8	HWRAC-25YH4908		1	ELECTRIC EXPAN. VALVE
9	HWRAC-25YH4909		1	SOUND PROOF COVER ASS'Y
10	HWRAC-25YH4910		1	O.L.R COVER
11	HWRAC-25YH4911		1	O.H THERMI. SUPPORT
12	HWRAC-25YH4912		1	CONNECTING CORD(COMP)
13	HWRAC-25YH4913		1	THERMISTOR(DEFROST)
14	HWRAC-25YH4914		1	THERMISTOR SUPPORT
15	HWRAC-25YH4915		1	COIL(REVERS.VALVE)
16	HWRAC-25YH4916		1	COIL(EXPAN.VALVE)
17	HWRAC-25YH4917		1	PARTITION
18	HWRAC-25YH4918		1	REACTOR COVER
19	HWRAC-25YH4919		1	REACTOR1
20	HWRAC-25YH4920		1	REACTOR2
21	HWRAC-25YH4921		1	FAN MOTOR SUPPORT
22	HWRAC-25YH4922		1	FAN MOTOR 40W 1.5kg
23	HWRAC-25YH4923		1	PROPELLER FAN
24	HWRAC-25YH4924		1	NUT(PROPELLER.FAN)
25	HWRAC-25YH4925		1	SIDE COVER(L)
26	HWRAC-25YH4926		1	HANDLE
27	HWRAC-25YH4927		1	FRONT COVER
28	HWRAC-25YH4928		1	DISCHARGE GRILL
29	HWRAC-25YH4929		1	ELECTRIC PARTS PLATE
30	HWRAC-25YH4930		1	ELECTRIC PARTS COVER
31	HWRAC-25YH4931		1	TERMINAL PLATE
32	HWRAC-25YH4932		2	TERMINAL BOARD(2P)
33	HWRAC-25YH4933		1	HEAT SINK(REGURATOR1)
34	HWRAC-25YH4934		1	P.W.B.(POWER)
35	HWRAC-25YH4935		1	FUSE(25A)
36	HWRAC-25YH4936		1	FUSE(3A)
37	HWRAC-25YH4937		3	VARISTOR
38	HWRAC-25YH4938	HWRAC-35YH4901	1	P.W.B.(MAIN)
39	HWRAC-25YH4939		1	FUSE(1A)
40	HWRAC-25YH4940		2	SUPPORT(P.W.B.)
41	HWRAC-25YH4941		1	CAPACITOR 45 μ F 200V
42	HWRAC-25YH4942		1	COVER(OUT DOOR THERMISTOR)
43	HWRAC-25YH4943		1	THERMISTOR(OUT DOOR TEMP.)
44	HWRAC-25YH4944		1	SIDE COVER(R)
45	HWRAC-25YH4945		1	TERMINAL COVER
46	HWRAC-25YH4946		1	TOP COVER
47	HWRAC-25YH4947		1	SERVICE VALVE COVER
48	HWRAC-25YH4948		1	BUSH ASS'Y
49	HWRAC-25YH4949		1	BUSH
50	HWRAC-25YH4950		1	DRAIN PIPE
51	HWRAC-25YH4951		1	COVER(CAPACITOR)
52	HWRAC-25YH4952		1	CORD ASS'Y