



HITACHI

SERVICE MANUAL TECHNICAL INFORMATION


FOR SERVICE PERSONNEL ONLY

AW


NO. 0011E

**RAS-25YH5/RAC-25YH5
RAS-35YH5/RAC-35YH5**

REFER TO THE FOUNDATION MANUAL

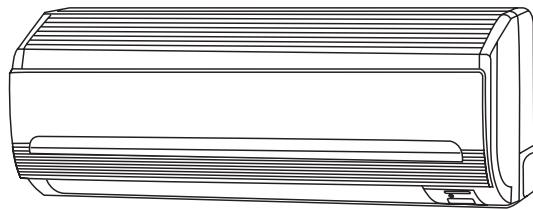

RAS-25YH5
RAS-35YH5

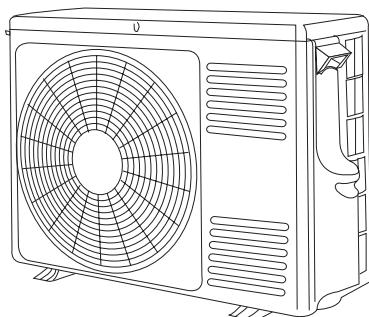

RAC-25YH5
RAC-35YH5



SPECIFICATIONS

TYPE		DC INVERTER (WALL TYPE)			
		INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT
MODEL		RAS-25YH5	RAC-25YH5	RAS-35YH5	RAC-35YH5
POWER SOURCE		1 PHASE, 50 Hz, 220-230V		1 PHASE, 50 Hz, 220-230V	
COOLING	TOTAL INPUT (W)	580 (155 ~ 1,080)		980 (155 ~ 1,300)	
	TOTAL AMPERES (A)	3.11-2.97		4.69-4.49	
	(kW)	2.50 (0.90 ~ 3.10)		3.50 (0.90 ~ 4.00)	
	(B.T.U./h)	8,530 (3,070 ~ 10,575)		11,942 (3,070 ~ 13,650)	
HEATING	TOTAL INPUT (W)	790 (115 ~ 1,120)		1010 (115 ~ 1,300)	
	TOTAL AMPERES (A)	3.99-3.82		4.84-4.63	
	(kW)	3.40 (0.90 ~ 4.40)		4.20 (0.90 ~ 5.00)	
	(B.T.U./h)	11,601 (3,070 ~ 15,695)		14,331 (3,070 ~ 17,745)	
DIMENSIONS (mm)	W	780	750 (+91)*	780	750 (+91)*
	H	280	548	280	548
	D	210	288 (+47)*	210	288 (+47)*
NET WEIGHT (kg)		9.5	35	9.5	35

* After installation

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT

ROOM AIR CONDITIONER


INDOOR UNIT + OUTDOOR UNIT

Hitachi Household Appliances(Wuhu) Co.,Ltd.




SAFETY DURING REPAIR WORK

1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

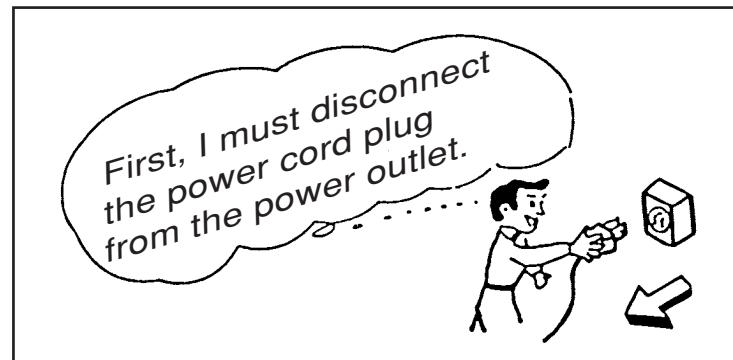

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

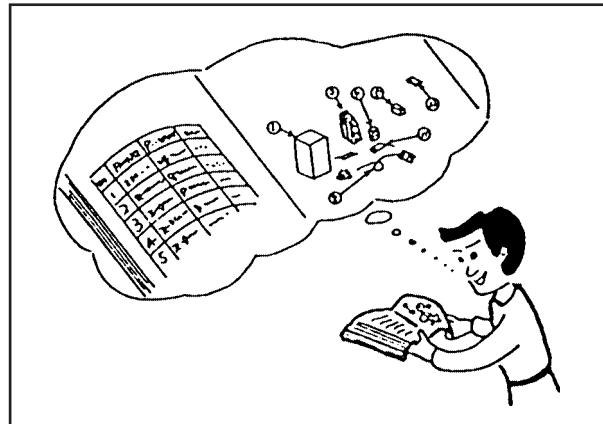

3. After completion of repairs, the initial state should be restored.
4. Lead wires should be connected and laid as in the initial state.
5. Modification of the unit by user himself should absolutely be prohibited.
6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be 1M or more as measured by a 500V DC megger.
9. The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again.
If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
10. Any inflammable thing should never be placed about the location of installation.
11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.





WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

2. Object parts

- (1) Micro computer
- (2) Integrated circuits (IC)
- (3) Field-effect transistors (FET)
- (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.

3. Items to be observed in handling

- (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

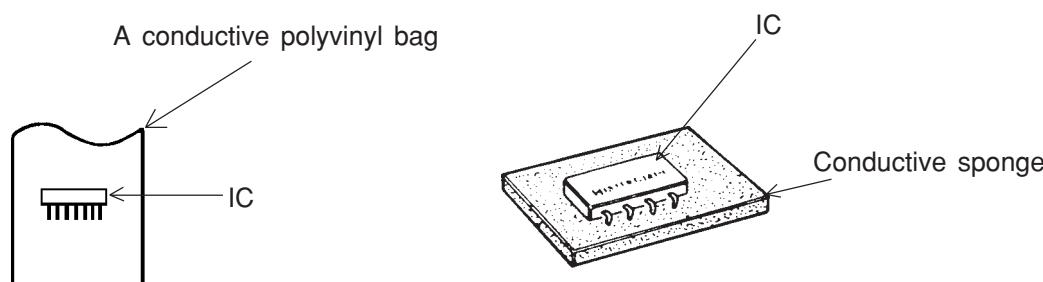


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet).

- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.

- (4) Be sure to place a part on a metal plate with grounding.

- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

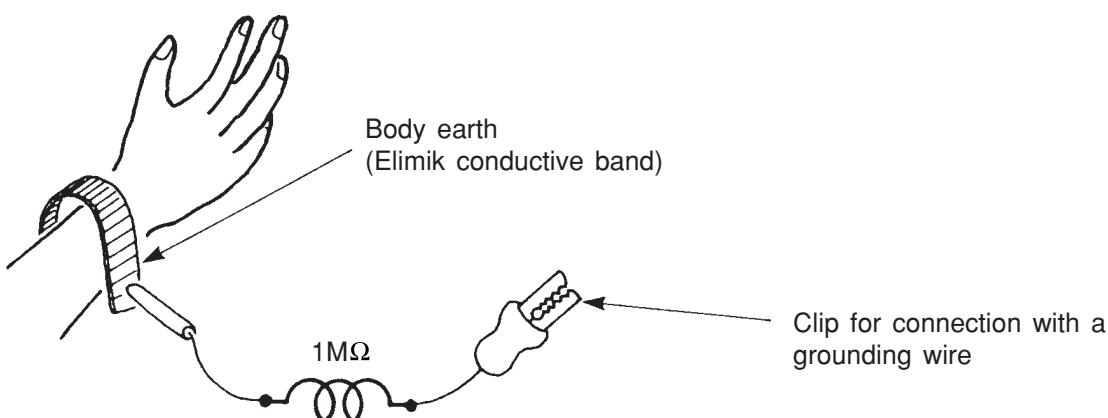


Fig. 2. Body Earth



(6) Use a three wire type soldering iron including a grounding wire.

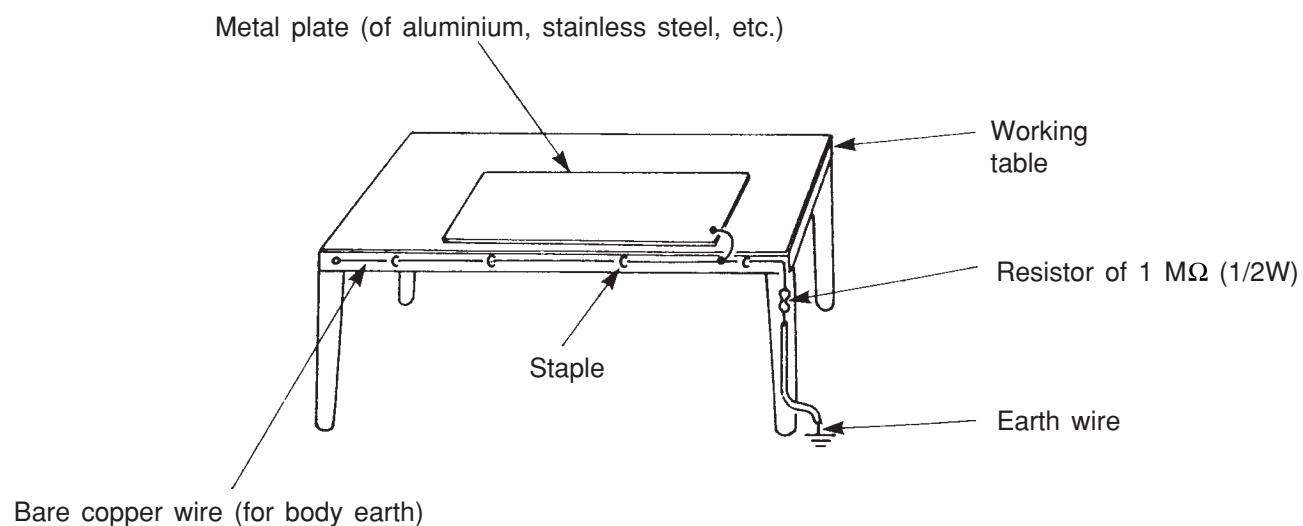


Fig. 3. Grounding of the working table

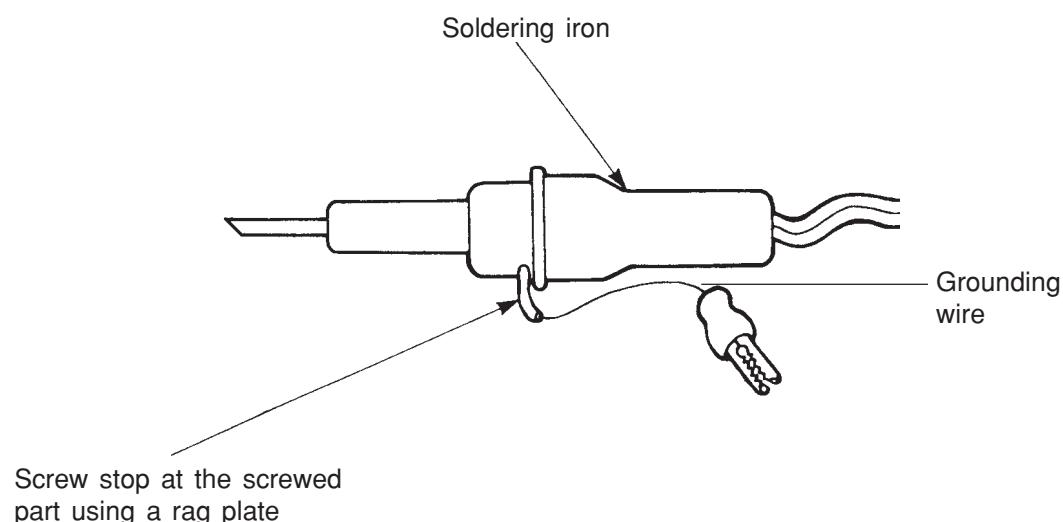


Fig. 4. Grounding a soldering iron

Use a high insulation mode (100V, 10M or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.



⚠ CAUTION

1. In quiet operation or stopping the running, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
3. The room air conditioner does not start automatically after recovery of the electric power failure for preventing fuse blowing. Re-press START/STOP button after 3 minutes from when unit stopped.
4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
5. This room air conditioner should not be used at the cooling operation when the outside temperature is below -10°C (14°F).
6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -15°C (5°F).
If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.





SPECIFICATIONS

MODEL	RAS-25YH5 RAS-35YH5	RAC-25YH5 RAC-35YH5
FAN MOTOR	PWM DC35V	40 W
FAN MOTOR CAPACITOR	NO	NO
FAN MOTOR PROTECTOR	NO	NO
COMPRESSOR	-	EU1011DF
COMPRESSOR MOTOR CAPACITOR	NO	NO
OVERLOAD PROTECTOR	NO	YES
OVERHEAT PROTECTOR	NO	YES
FUSE (for MICROPROCESSOR)	NO	3.0A
POWER RELAY	NO	G4A
POWER SWITCH	YES	NO
TEMPORARY SWITCH	YES	NO
SERVICE SWITCH	NO	YES
TRANSFORMER	NO	NO
VARISTOR	NO	450NR
NOISE SUPPRESSOR	NO	YES
THERMOSTAT	YES(IC)	YES(IC)
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)	YES	NO
REFRIGERANT CHARGING VOLUME (Refrigerant 410A)	UNIT	-----
	PIPES (MAX. 20m)	WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE.



HOW TO USE

SAFETY PRECAUTION

- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "▲ Warning" and "▲ Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The signs indicate the following meanings. (The following are examples of signs.)

- This sign in the figure indicates prohibition.
 Indicates the instructions that must be followed.

PRECAUTIONS DURING INSTALLATION

WARNING	<ul style="list-style-type: none"> Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself. Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself. Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock. Be sure to use the specified piping set for R410A. Otherwise, this may result in broken copper pipes or faults. A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists. Do not install the unit near a location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. Piping shall be suitable supported with a maximum spacing of 1m between the supports. Please ensure smooth flow of water when installing the drain hose. If any failure is found in the drain path, water drops from the indoor and outdoor units, causing wet household effects. Make sure that a single phase 230V power source is used. The use of other power sources may cause electrical components to overheat and lead to fire.
CAUTION	<ul style="list-style-type: none"> Should abnormal situation arise (like burning smell), please stop operating the unit and remove plug from the socket or turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation. Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire. Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly. Avoid an extended period of direct air flow for your health. Do not connect the power cable with an extension cable or do not plug too many leads of the other electric appliance into the socket where this cable is plugged. In addition, wire the cable with some allowances to prevent the cable from stretching. Not doing so will cause an electrical shock, heat generation or fire. Do not bundle the power cable, pull it, put something on it, heat it, process it, or put it between things. Breakage of the power cable may result. Use of a damaged cable may cause an electrical shock or a fire. Do not put objects like thin rods into the panel of blower and suction side because the high-speed fan inside may cause danger.


PRECAUTIONS DURING OPERATION

WARNING	<ul style="list-style-type: none"> Do not use any conductor as fuse wire, this could cause fatal accident. Spray cans and other combustibles should not be located within a meter of the air outlets of both indoor and outdoor units. As a spray can's internal pressure can be increased by hot air, a rupture may result. The product shall be operated under the manufacturer specification and not for any other intended use. When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency. Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc. Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger. Do not wash the unit with water or place a water container such as a vase on the indoor unit. Electrical leakage could be present and cause electric shock. Do not place plants or animals directly under the air flow as it is bad for the plants or animals. Do not climb on the outdoor unit or put objects on it.
CAUTION	<ul style="list-style-type: none"> When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drip down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time. If the amount of heat in the room is above the cooling or heating capability of the unit (for example, more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved. Indoor unit cleaning must be performed by authorized personnel only. Consult your sales agent. Using a commercially available detergent or similar can damage the plastic parts or clog the drain pipe, causing water to drip with potential electric shock hazard. Do not touch the air outlet, bottom surface and aluminum fin of the outdoor unit. You may get hurt. Do not touch the refrigerant pipe and connecting valve. Burns may result.




NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT

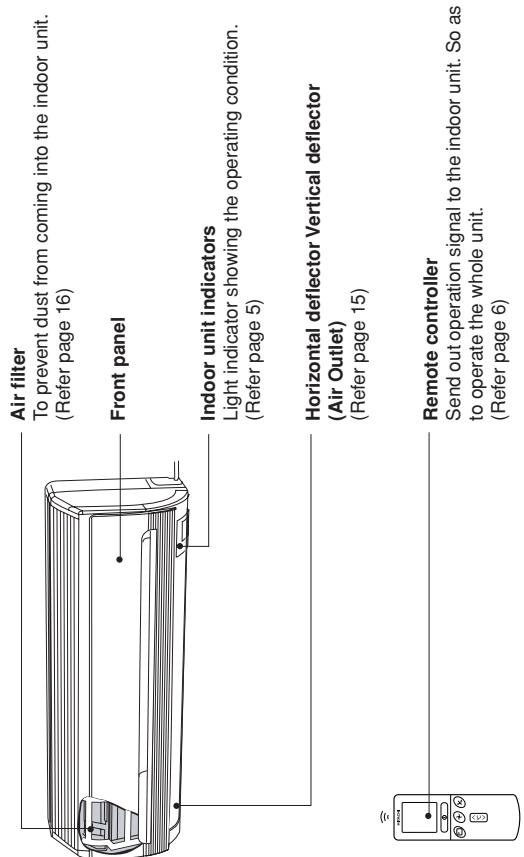

OUTDOOR UNIT

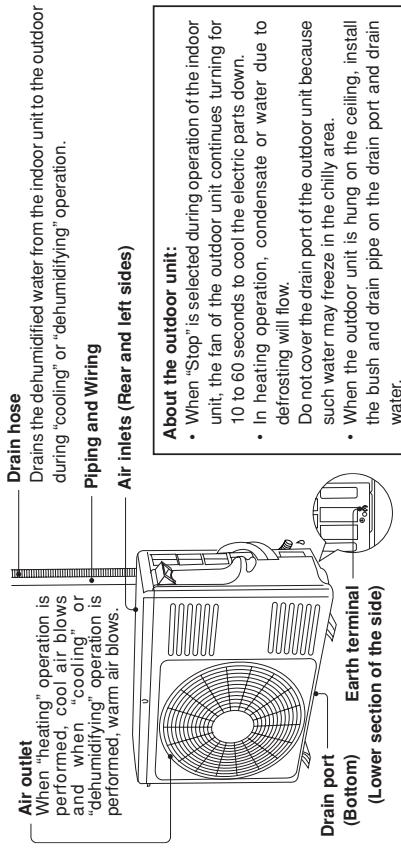


About the outdoor unit:			
• When "Stop" is selected during operation of the indoor unit, the fan of the outdoor unit continues turning for 10 to 60 seconds to cool the electric parts down.	Drains the dehumidified water from the indoor unit to the outdoor drain during "cooling" or "dehumidifying" operation.	Piping and Wiring	
• In heating operation, condensate or water due to defrosting will flow.	Do not cover the drain port of the outdoor unit because such water may freeze in the chilly area.	Air inlets (Rear and left sides)	
• When the outdoor unit is hung on the ceiling, install the bush and drain pipe on the drain port and drain water.			

MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAS-18YH5, RAS-25YH5, RAS-35YH5	780	280	210
RAC-18YH5, RAC-25YH5, RAC-35YH5	750	548	288

INDOOR UNIT INDICATIONS

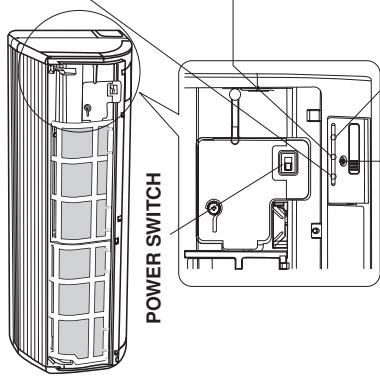

FILTER LAMP (Green)

When the device is operated for a total of about 200 hours, the FILTER LAMP indicates that it is time to clean the filter. The lamp goes out when the "AUTO SWING" button is pressed while the operation is stopped.

OPERATION LAMP (Yellow)

This lamp lights during operation. The OPERATION LAMP flashes in the following cases during heating.

- (1) During preheating
For about 2-3 minutes after starting up.
- (2) During defrosting
Defrosting will be performed about once an hour when frost forms on the heat exchanger of the outdoor unit, for 5-10 minutes each time.

TEMPORARY SWITCH

- Use this switch to start and stop when the remote controller does not work.
- This temporary operation will be at the most recent setting made. (The unit will immediately go into automatic operation once power is switched on.)

CAUTION

- Turn off the circuit breaker or pull out the power plug if the unit is not be operated for a long period.

☆ If the power stays on and the unit is not operated, power is slightly consumed in the control circuit. The power is saved by turning off the power switch (or the circuit breaker when the power is supplied from the outdoor unit).

■ Attaching the air cleansing and deodorizing filters (Accessories) to the filter frame.


- Attach the air cleansing and deodorizing filters to the frame by gently compress its both sides and release after insertion into filter frame.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air cleansing and deodorizing filters are used.
- Air cleansing and deodorizing filters are washable and reusable up to 20 times by using vacuum cleaner or water rinse under running tap water. When you want to renew it, please ask your sales agent.



NAMES AND FUNCTIONS OF EACH PART

REMOTE CONTROLLER

- This controls the operation of the indoor unit.
- The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter, in some cases, the control signal may not be received.
- This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care.
- Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.

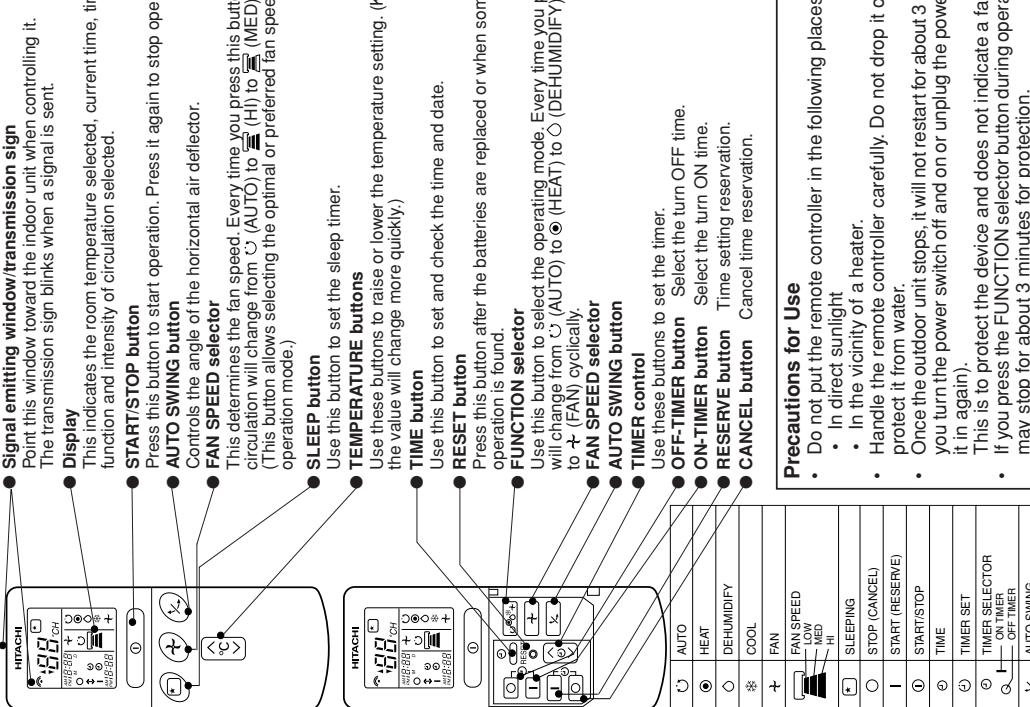

- 7 -


VARIOUS FUNCTIONS

Auto Restart Control

- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode and airflow direction.
(As the operation is not stopped by remote controller.)
- If you intend not to continue the operation when the power is resumed, switch off the power supply. When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode and airflow direction.
- Note: 1. If you do not require Auto Restart Control, please consult your sales agent.
2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

AUTOMATIC OPERATION


- The device will automatically determine the mode of operation, HEAT or COOL depending on the initial room temperature. The selected mode of operation will change when the room temperature varies.

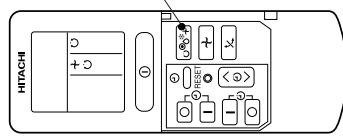

Press the FUNCTION selector so that the display indicates the \odot (AUTO) mode of operation.

- When AUTO has been selected, the device will automatically determine the mode of operation, HEAT or COOL depending on the current room temperature.
- When AUTO is first selected, the device will determine the current room temperature and select the proper operation mode accordingly.
- When the air conditioner has adjusted the room's temperature to the near preset temperature, it will begin to monitor operation. If the room temperature subsequently changes, the air conditioner will once again select the appropriate operation (heating or cooling) to adjust the temperature to the preset temperature.
- If the mode automatically selected by the unit is not satisfactory, manually change the mode setting (heat, dehumidify, cool or fan).

1
Press the \odot (START/STOP) button.
 \odot Operation starts with a beep.
Press the button again to stop operation.

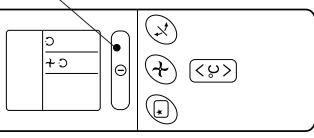

■ As the settings are stored in memory in the remote controller, you only have to press the \odot (START/STOP) button next time.

You can raise or lower the temperature setting as necessary by maximum of 3°C .

\wedge \vee Press the temperature button and the temperature setting will change by 1°C each time.

- The preset temperature and the actual room temperature may vary somewhat depending on conditions.



Press the \leftarrow (FAN SPEED) button, AUTO and LOW is available.

- 7 -



HEATING OPERATION

- Use the device for heating when the outdoor temperature is under 21°C.
- When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -15°C of the outdoor temperature.

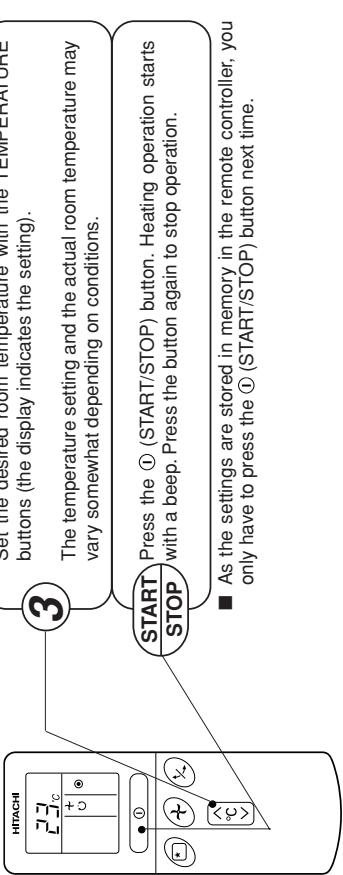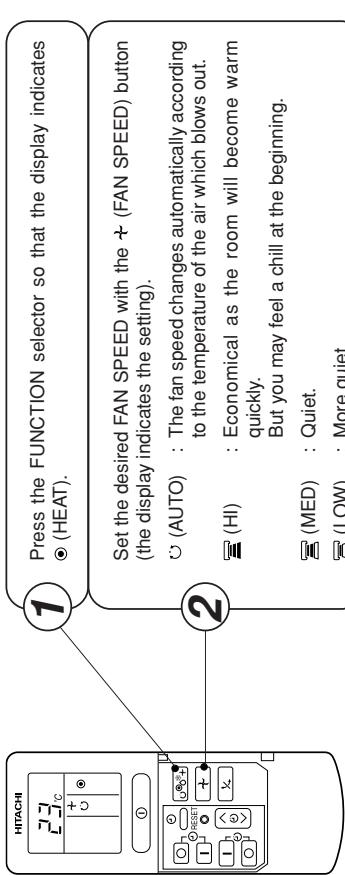

■ Defrosting

Defrosting will be performed about once an hour when frost forms on the heat exchange of the outdoor unit, for 5~10 minutes each time.


During defrosting operation, the operation lamp blinks in cycle of 3 seconds on and 0.5 second off.

The maximum time for defrosting is 20 minutes.

(If the piping length used is longer than usual, frost will likely to form.)

DEHUMIDIFYING OPERATION



- Use the device for dehumidifying when the room temperature is over 16°C.
- When it is under 15°C, the dehumidifying function will not work.

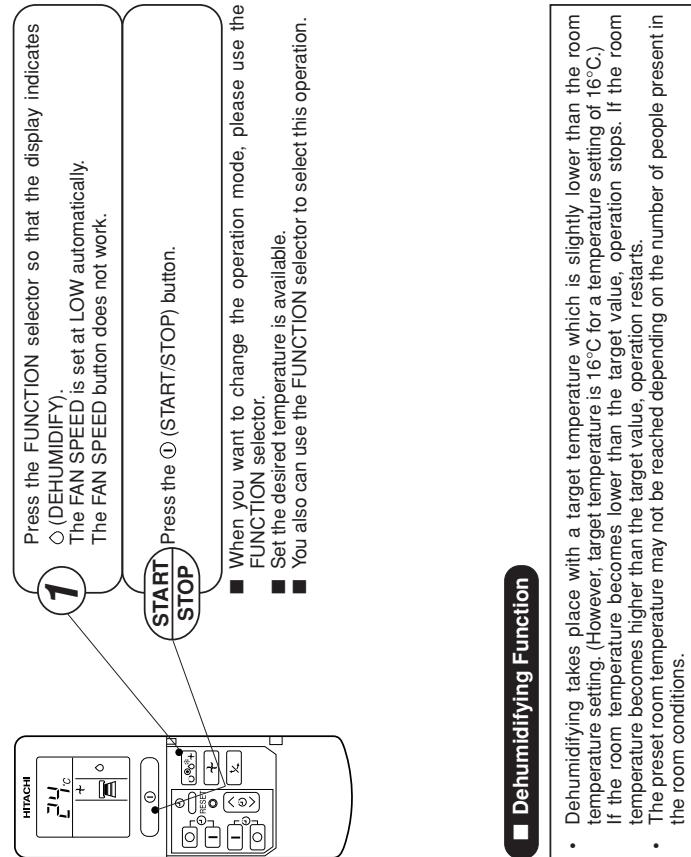



COOLING OPERATION

Use the device for cooling when the outdoor temperature is -10 to 42°C.
If humidity is very high (over 80%) indoors, some dew may form on the air outlet grille of the indoor unit.

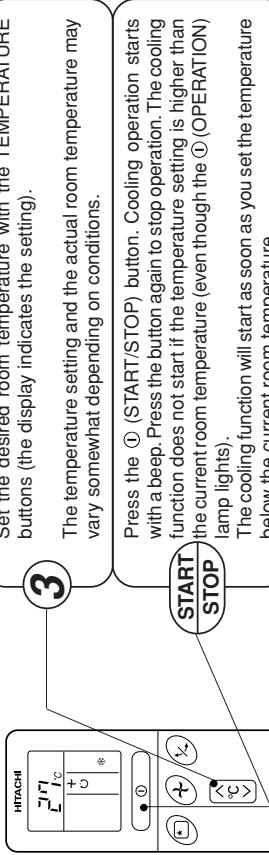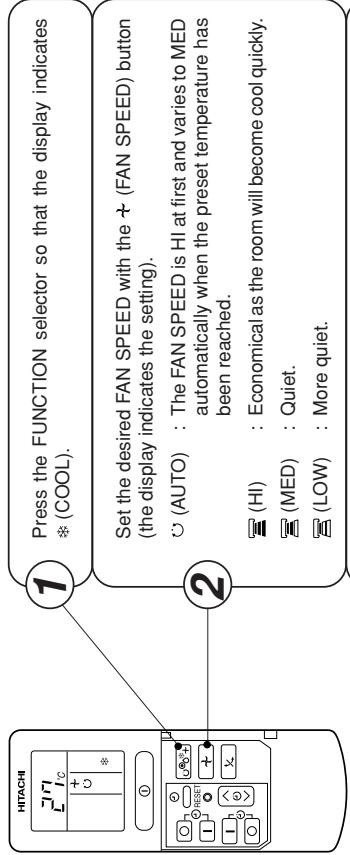


- As the settings are stored in memory in the remote controller, you only have to press the \leftarrow (START/STOP) button next time.

- 10 -




FAN OPERATION

You can use the device simply as an air circulator. Use this function to dry the interior of the indoor unit at the end of summer.

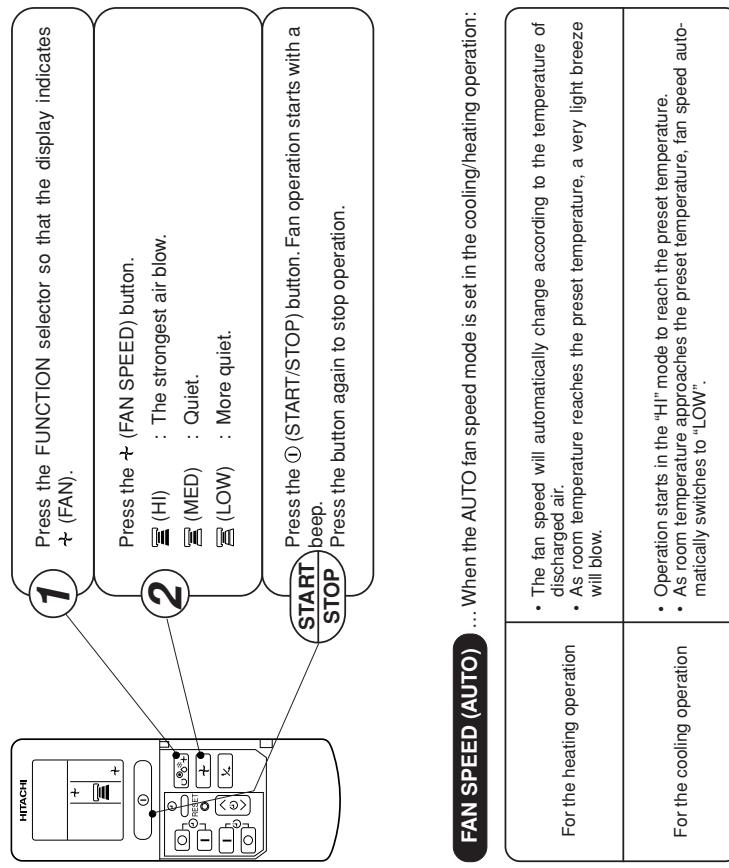



HOW TO SET THE TIMER

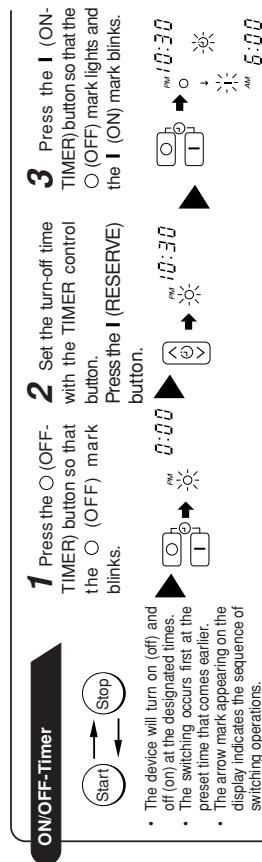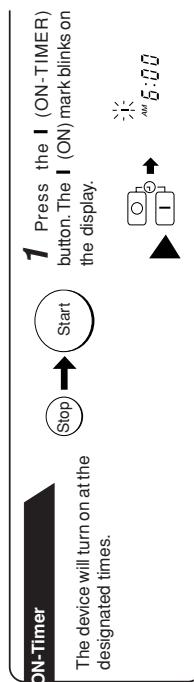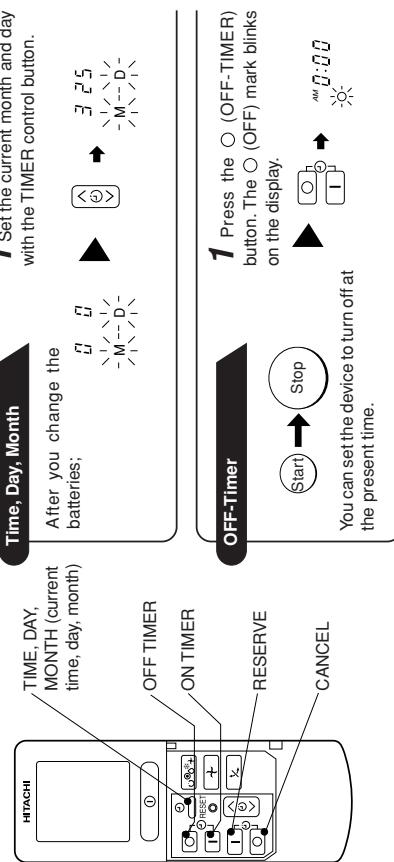

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the ○ (CANCEL) button. The ⊖ (RESERVED) sign goes out with a beep and the ○ (TIMER) lamp turns off on the indoor unit.

NOTE
You can set only one of the OFF-timer, ON-timer and ON/OFF-timer.

- 2** Set the ⊖ (TIME) button.
- 3** Set the current time with the TIMER control button.
- 4** Press the ⊖ (TIME) button again. The time indication starts lighting instead of flashing.
- 5** Point the signal window of the remote controller toward the indoor unit, and press the | (RESERVE) button.

* To check the current time setting press the ⊖ (TIME) button twice. The setting of the current time is now complete.

Example: The current time is 1:30p.m.

2 Set the turn-off time with the TIMER control button.

3 Point the signal window of the remote controller toward the indoor unit, and press the | (RESERVE) button.

The ○ (OFF) mark starts lighting instead of flashing and the ○ (TIMER) lamp lights on the indoor unit. Example: The device will turn off at 11:00p.m. The setting of turn-off time is now complete.

2 Set the turn-on time with the TIMER control button.

3 Point the signal window of the remote controller toward the indoor unit, and press the | (RESERVE) button.


The | (ON) mark starts lighting instead of flashing and the ○ (TIMER) lamp lights on the indoor unit. Example: The device will turn on early so that the preset temperature be almost reached at 7:00 a.m. The setting of the turn-on time is now complete.

- The timer may be used in three ways: off-timer, on-timer and ON/OFF (OFF/ON)-timer. Set the current time at first because it serves as a reference.
- As the time settings are stored in memory in the remote controller, you only have to press the | (RESERVE) button in order to use the same settings next time.



HOW TO SET THE SLEEP TIMER

Set the current time at first if it is not set before (see the pages for setting the current time). Press the (SLEEP) button and the display changes as shown below.

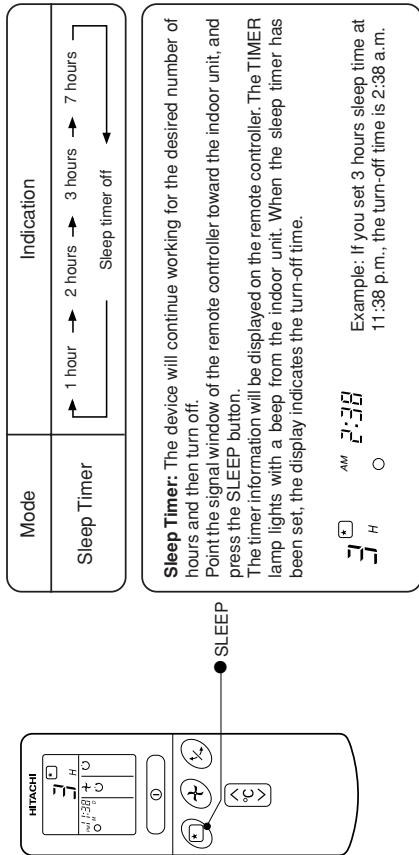

Sleep Timer: The device will continue working for the desired number of hours and then turn off. Point the signal window of the remote controller toward the indoor unit, and press the SLEEP button. The timer information will be displayed on the remote controller. The TIMER lamp lights with a beep from the indoor unit. When the sleep timer has been set, the display indicates the turn-off time.


Example: If you set 3 hours sleep time at 11:38 p.m., the turn-off time is 2:38 a.m.

	The device will be turned off by the sleep timer and turned on by on-timer.
	2 Press the (SLEEP) button and set the sleep timer. For heating: In this case, the device will turn off in 2 hours (at 1:38 a.m.) and turn on early so that the preset temperature will be almost reached at 6:00 next morning.


- 11 -

ADJUSTING THE AIR DEFLECTORS

- 1** Adjustment of the conditioned air in the upward and downward directions. The horizontal air deflector is automatically set to the proper angle suitable for each operation. The deflector can be swung up and down continuously and also set to the desired angle using the " (AUTO SWING)" button.

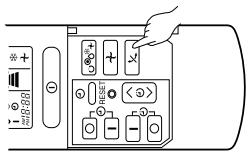


- If the " (AUTO SWING)" button is pressed once, the horizontal air deflector swings up and down. If the button is pressed again, the deflector stops in its current position. Several seconds (about 6 seconds) may be required before the deflector starts to move.
- Use the horizontal air deflector within the adjusting range shown in the right.
- When the operation is stopped, the horizontal air deflector moves and stops at the position where the air outlet closes.

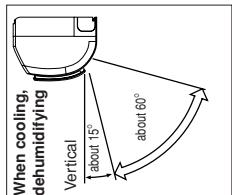

- 2** Adjustment of the conditioned air to the left and right.

- Hold the vertical air deflector as shown in the figure and adjust the conditioned air to the left and right.

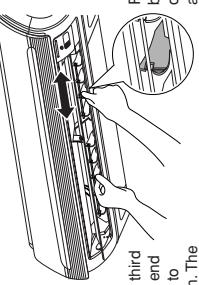

- In "Cooling" operation, do not keep the horizontal air deflector swinging for a long time. Some dew may form on the horizontal air deflector and dew may drop.
- When heating

Vertical
about 45°

about 60°

HOW TO EXCHANGE THE BATTERIES IN THE REMOTE CONTROLLER


- 1** Remove the cover as shown in the figure and take out the old batteries.



- 2** Install the new batteries. The direction of the batteries should match the marks in the case.

CAUTION

- Do not use new and old batteries, or different kinds of batteries together.
- Take out the batteries when you do not use the remote controller for 2 or 3 months.

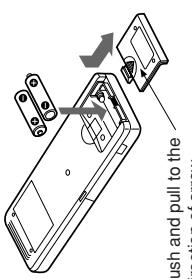

Push and pull to the direction of arrow.

- 15 -

NOTE

- If you set the sleep timer when the off-time or on/off-timer has been set earlier, the sleep timer becomes effective instead of the off- or on/off-timer set earlier.

- 14 -



Maintenance

CAUTION


Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.

AIR FILTER


When the filter indicator lamp comes on, be sure to clean the filter. By doing so, the power rates are saved. In case the air filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the filter following the procedure below.

PROCEDURE

- ① Open the front panel carefully and remove the filter.

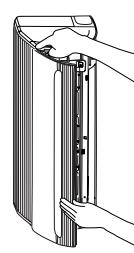

- ② Vacuum dust from the air filter using vacuum cleaner. If there is too much dust, wash the filter with a detergent and rinse it thoroughly. After that, dry it in the shade.

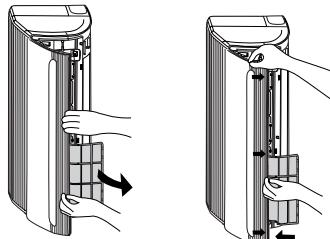

- ③ Set the filter with "FRONT" mark facing front, and slot them into the original state.
 - After attaching the filters, push the front panel at three arrow portions as shown in figure and close it.



CAUTION


- Do not wash with hot water at more than 40°C.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Don't operate the unit without filter. Fault may occur if you continue.

2. CLEANING OF FRONT PANEL

- Remove the front panel and wash with clean water.
- Wash it with a soft sponge. After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly. If water remains at indicators or signal receiver of indoor unit, it causes trouble.




- Method of removing the front panel.
Be sure to hold the front panel with both hands to detach and attach it.

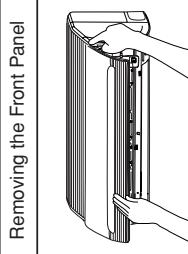

- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.


CAUTION

- Move the shafts of the left and right arms into the holes in the unit and securely insert them into the holes.

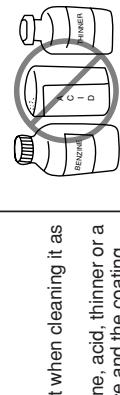

3. MAINTENANCE AT BEGINNING OF LONG OFF PERIOD

- Run the unit by setting the operation mode to + (FAN) and the fan speed to HI for about half a day on a fine day, and dry the whole of the unit.
- Switch off the power plug or turn off the circuit breaker.

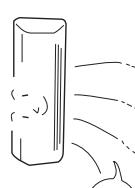



INFORMATION

CAPABILITIES

Heating Capability



CAUTION
This room air conditioner utilizes a heat pump system that absorbs exterior heat and brings it into a room to be heated. As the ambient temperature gets lower, heating capability will also lower. In such a situation, the inverter work to increase compressor rpm to keep the unit's heating capability from decreasing. If the units heating performance is still unsatisfactory other heating appliances should be used to augment this unit's performance.

- The air conditioner is designed to heat an entire room so that it may take some time before you feel warm.
- Timer operation is recommended for effective preheating ahead of the desired time.
- If the heat present in a room exceeds the unit's cooling capacity (for example, if there are many people in the room or other heating appliances are used), the preset room temperature may not be reached.

VARIOUS FUNCTIONS

Cooling and Dehumidifying Capabilities

- When fan speed, room temperature are set with the remote controller before starting manual operation and the buttons are released, the indication of settings will go off in 10 seconds and only the operation mode will be displayed.

Pressing the button while the unit is in operation will let the protective circuit work so that the unit will not operate for approximately 3 minutes.

- During heating operation, the indoor unit's color indicator lamp may flash with no air emitted for a while.
- If you feel cold wind during heating operation with the (HIGH) fan speed or want to make the unit operation quieter after the room is heated, use of 'C' (AUTO) setting is recommended.

With the (LOW) setting, the unit's cooling capability will lower slightly.

- With the (LOW) setting, the unit's heating capacity will vary with the operating conditions.
- When fan speed, room temperature are set with the remote controller before starting manual operation and the buttons are released, the indication of settings will go off in 10 seconds and only the operation mode will be displayed.
- Pressing the button while the unit is in operation will let the protective circuit work so that the unit will not operate for approximately 3 minutes.
- During heating operation, the indoor unit's color indicator lamp may flash with no air emitted for a while.
- If you feel cold wind during heating operation with the (HIGH) fan speed or want to make the unit operation quieter after the room is heated, use of 'C' (AUTO) setting is recommended.
- With the (LOW) setting, the unit's cooling capability will lower slightly.
- With the (LOW) setting, the unit's heating capacity will vary with the operating conditions.

TIMER PROGRAMMING/SLEEP TIMER OPERATION

- When the timer has been programmed, the unit will not operate even if the set time is reached unless the unit receives a signal from the remote controller. Confirm that timer programming is complete (beep) and the TIMER lamp of the indoor unit lights.
- If the (SLEEP) button is pressed while the ON/OFF timer is programmed, the sleep timer takes priority.
- During sleep timer operation, the fan speed sets to (LOW) regardless of the preset speed. The remote controller display indication will remain unchanged even with the (LOW) setting.

REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS EVERY EITHER HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT SHOULD YOU NEED ANY HELP.

			WARNING	
1			WARNING	Check to see if the unit's earth line has been connected correctly. If the earth line is disconnected or faulty, unit failure or electric shock hazard may result.
2			WARNING	Check to see if the mounting frame has rusted excessively or if the outdoor unit has tilted or become unstable. It could collapse or fall, causing injury.
3			WARNING	Check to see if the power plug is securely inserted into the wall socket. If the power plug is not inserted into the wall socket securely or becomes hot, an electric shock or fire may result. If dust or dirt is found on the power plug, clean the plug and insert it into the wall socket.

AFTER SALES SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

CONDITION	CHECK THE FOLLOWING POINTS
If the remote controller is not transmitting a signal. (Remote controller display is dim or blank.)	<ul style="list-style-type: none"> Do the batteries need replacement? Is the polarity of the inserted batteries correct?
When it does not operate.	<ul style="list-style-type: none"> Is the fuse all right? Is the set temperature suitable? Is the circuit breaker "ON"? Is the power plug inserted? Do you have any power cut?
When it does not cool well. When it does not heat well.	<ul style="list-style-type: none"> Is the air filter blocked with dust? Is the set temperature suitable? Have horizontal air deflectors been adjusted to their correct positions according to the operation mode selected? Are the air inlets or air outlets of indoor and outdoor units blocked? Is the fan speed "LOW"?

■ The following phenomena do not indicate unit failure.

During heating, the operation indicator blinks and air blow stops	<Operation start> The unit is preparing to blow warm air. Please wait. <In operation> The outdoor unit is defrosting. Please wait.
Hissing or fizzy sounds	Refrigerant flow noise in the pipe or valve sound generated when flow rate is adjusted.
Squeaking noise	Noise generated when the unit expands or contracts due to temperature changes.
Rustling noise	Noise generated with the indoor unit fan's rpm changing such as operation start times.
Clicking noise	Noise of the motorized valve when the unit is switched on.



Parking noise	Noise of the ventilation fan sucking in air present in the drain hose and blowing out dehumidifying water that had accumulated in the condensed water collector. For details, consult your sales agent.
Changing operation noise	Operation noise changes due to power variations according to room temperature changes.
Mist emission	Mist is generated as the air within the room is suddenly cooled by conditioned air.
Steam emitted from the outdoor unit	Water generated during defrosting operation evaporates and steam is emitted.
Odors	Caused as the smells and particles of smoke, food, cosmetics, etc. present in room air become attached the unit and blown off into the room again.
The outdoor unit continues to operate even if operation is stopped.	Defrosting is underway (as the heating operation is stopped, the microcomputer checks frost accumulated in the outdoor unit and instructs the unit to perform automatic defrosting if necessary).
The OPERATION lamp is blinking.	Shows reheating or defrosting operation is underway. As the protective circuit or preheat sensor operates when unit operation is stopped during preheating and then restarted, or when operation mode is switched from cooling to heating, the lamp continues to blink.
Does not reach the temperature setting	Actual room temperature may deviate slightly from the remote controller's temperature setting depending on the number of people in the room, indoor or outdoor conditions.

Contact your sales agent immediately if the following phenomena should occur:

- The circuit breaker switches off or the fuse blows frequently.
 - The switch operation is not stable.
 - Foreign matter or water accidentally enters the unit interior.
 - The power cord gets excessively hot or its insulation is torn or stripped.
 - TIMER lamp on the indoor unit display blinks.
- (As the nature of the failure can be identified by the blinking cycle, check the blinking cycle before turning off the circuit breaker.)



Notes

- In quiet operation or stopping the running, the following phenomena may occasionally occur, but they are not abnormal for the operation.
 - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
 - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So please clean the air filter and the evaporator regularly to reduce the odor.



- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.


Please note:
On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence. The conditions of the local Power Supply Companies are to be observed.



CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAS-25YH5, RAS-35YH5

INDOOR UNIT

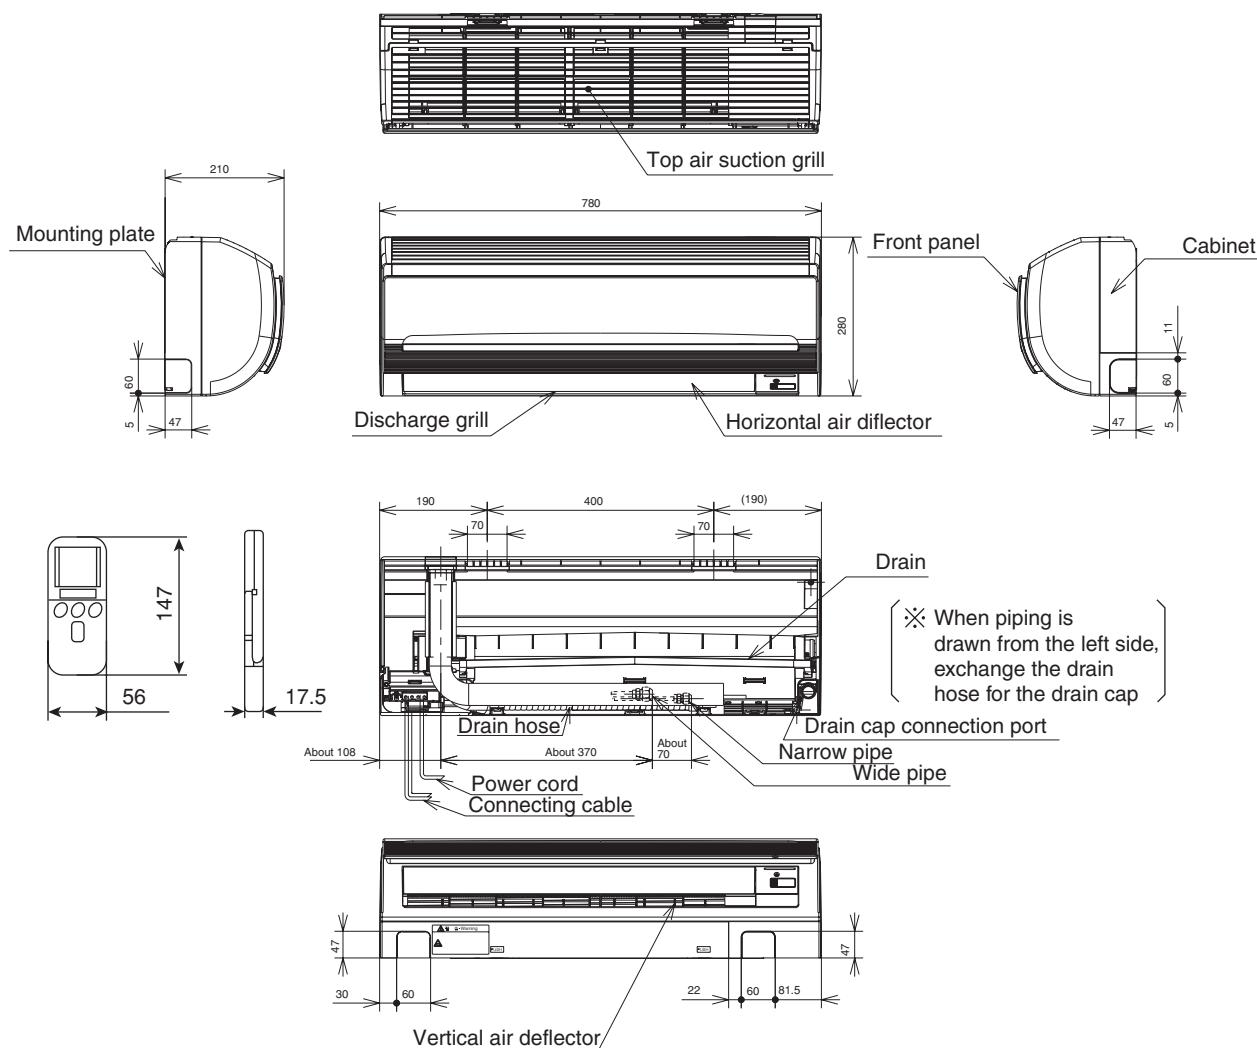




CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAC-25YH5, RAC-35YH5

OUTDOOR UNIT

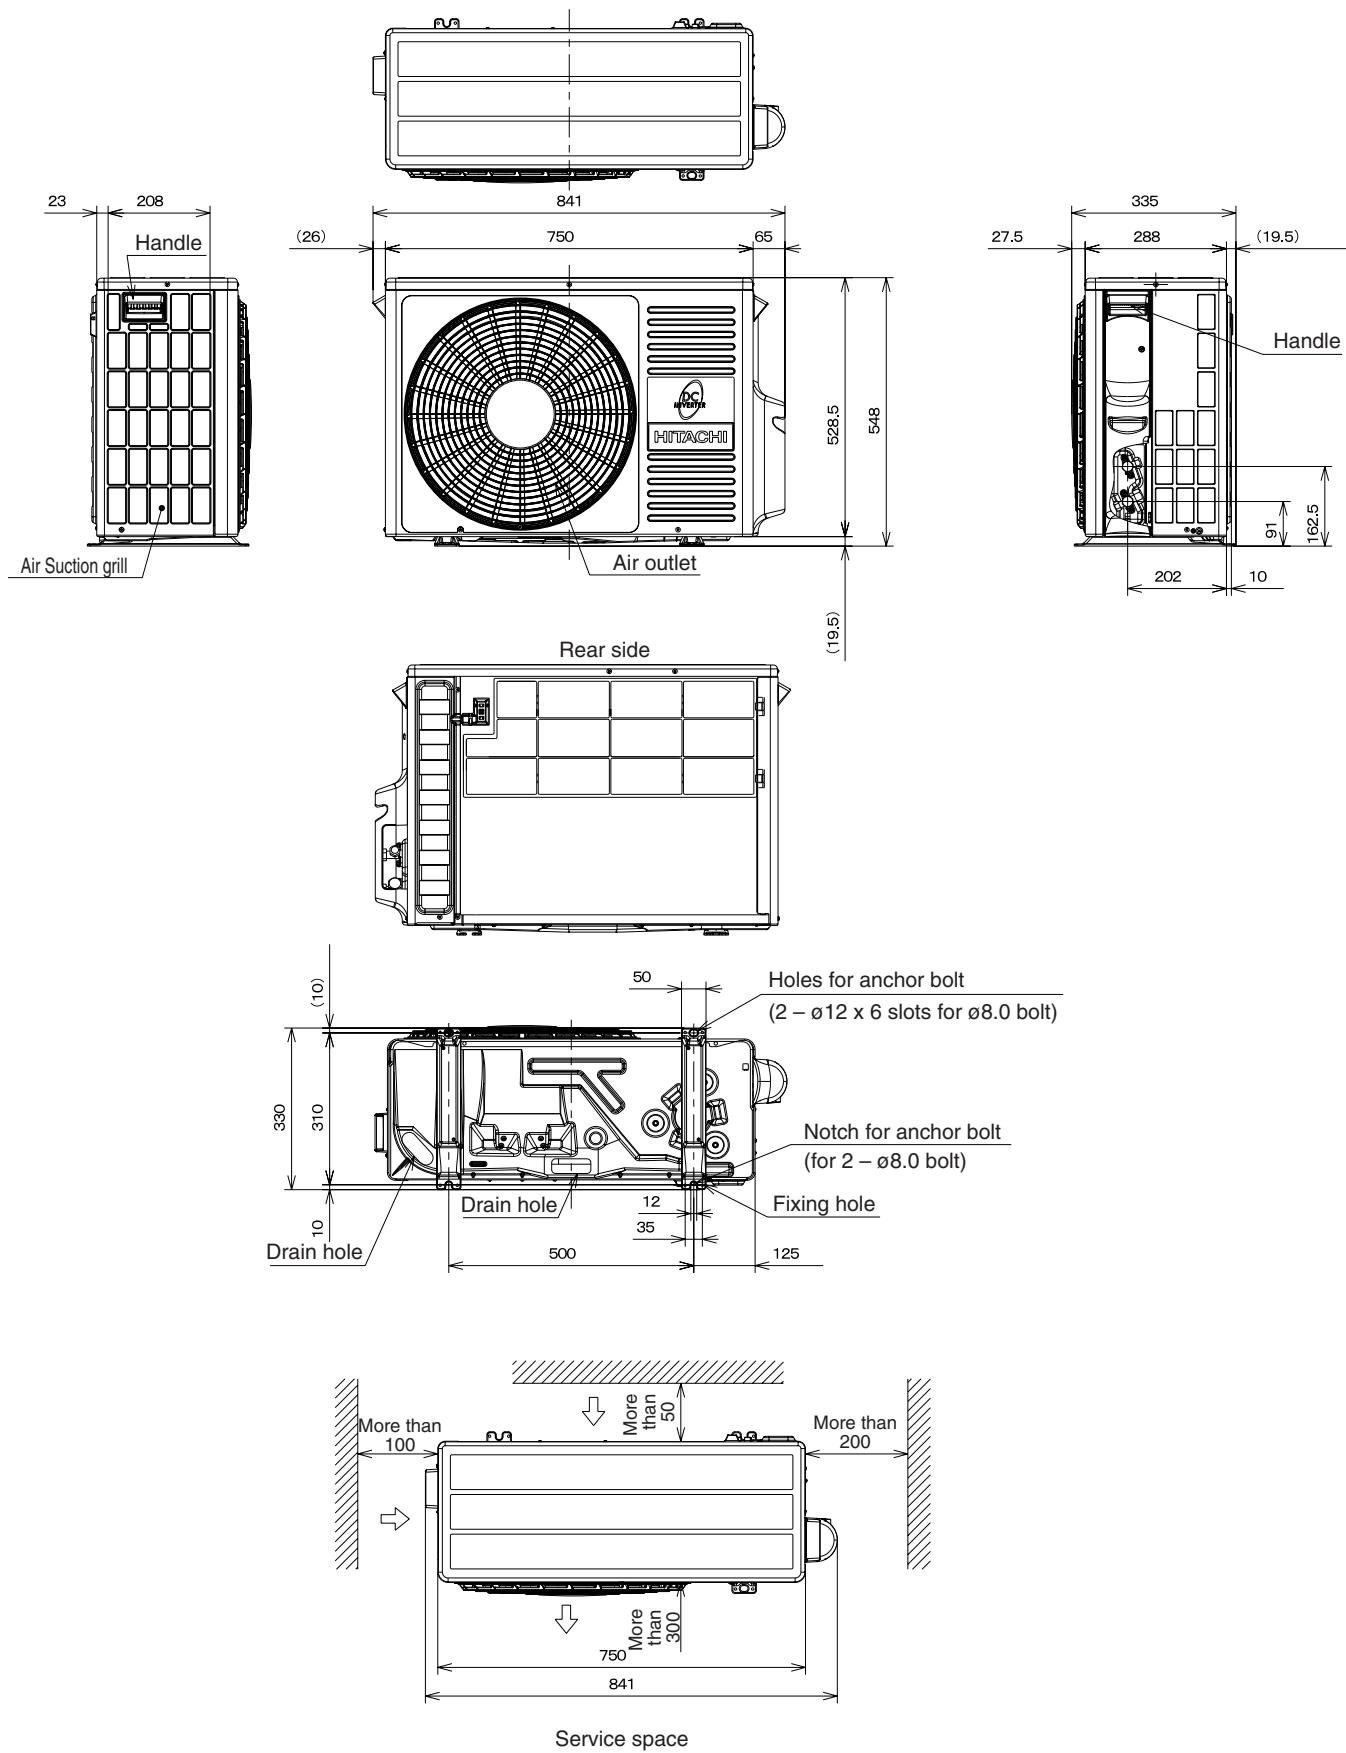



MAIN PARTS COMPONENT

THERMOSTAT

Thermostat Specifications

MODEL			RAS-25YH5, RAS-35YH5	
THERMOSTAT MODEL			IC	
OPERATION MODE		COOL		HEAT
TEMPERATURE °C (°F)	INDICATION 16	ON	16.7 (62.1)	18.7 (65.7)
		OFF	16.0 (60.8)	19.3 (66.7)
	INDICATION 24	ON	24.7 (76.5)	26.7 (80.1)
		OFF	24.0 (75.2)	27.3 (81.1)
	INDICATION 32	ON	32.7 (90.9)	34.7 (94.5)
		OFF	32.0 (89.6)	35.3 (95.5)

FAN MOTOR

Fan Motor Specifications

MODEL	RAS-25YH5, RAS-35YH5	RAC-25YH5, RAC-35YH5
POWER SOURCE	DC 5V, 35V	DC 140 - 350V
OUTPUT	25W	40W
CONNECTION	 (Control circuit built in)	

BLU : BLUE

YEL : YELLOW

BRN : BROWN

WHT : WHITE

GRY : GRAY

ORN : ORANGE

GRN : GREEN

RED : RED

BLK : BLACK

PNK : PINK

VIO : VIOLET

MAIN ELECTRIC COMPONENTS FOR OUTDOOR UNIT


NAME	RATING	APPLICABLE MODELS
REVERSING VALVE COIL	135 Ω (20 °C)	RAC-25YH5, 35YH5
REACTOR L1	13 (mH), 0.224 Ω	RAC-25YH5, 35YH5
REACTOR L2	25.5 (mH), 0.37 Ω	RAC-25YH5, 35YH5
FILM CAPACITOR	45 (μF)	RAC-25YH5, 35YH5



COMPRESSOR MOTOR

Compressor Motor Specifications

ITEM	MODEL	RAC-25YH5, RAC-35YH5
COMPRESSOR TYPE	EU1011DF	
POWER SOURCE	DC 220 - 350 V	
OUTPUT	800W	
WINDING		
RESISTANCE (Ω)	20°C	2M=1.069
	75°C	2M=1.300

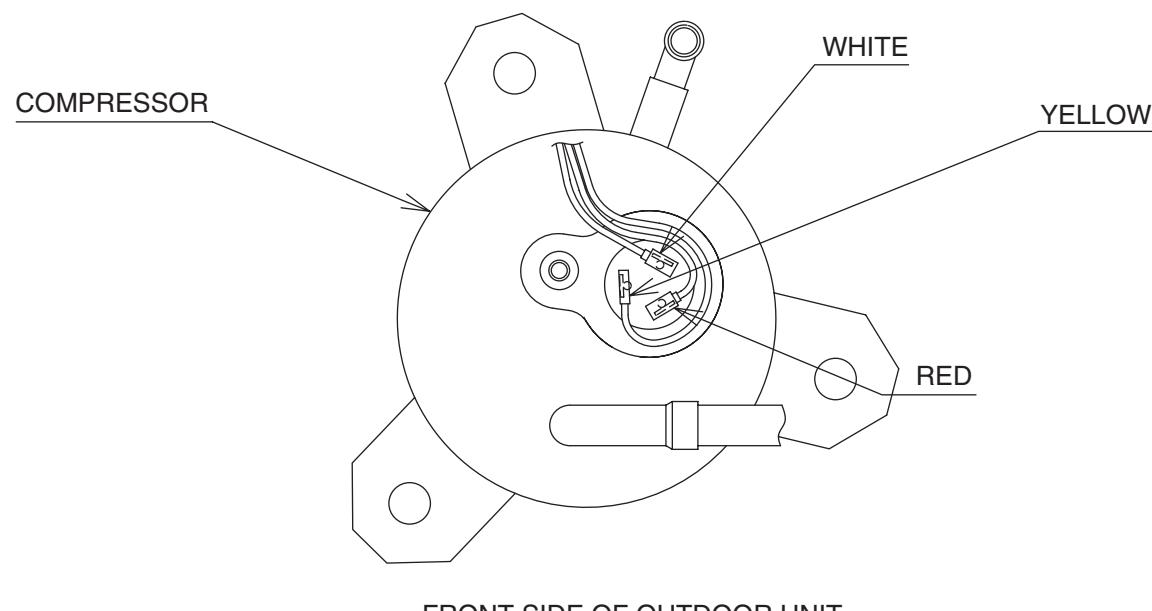


FRONT SIDE OF OUTDOOR UNIT

CAUTION


When the refrigerating cycle has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerating machine oil inside the compressor. If the color has been changed conspicuously, replace the compressor.

WIRING DIAGRAM

MODEL RAS-25YH5/RAC-25YH5
RAS-35YH5/RAC-35YH5

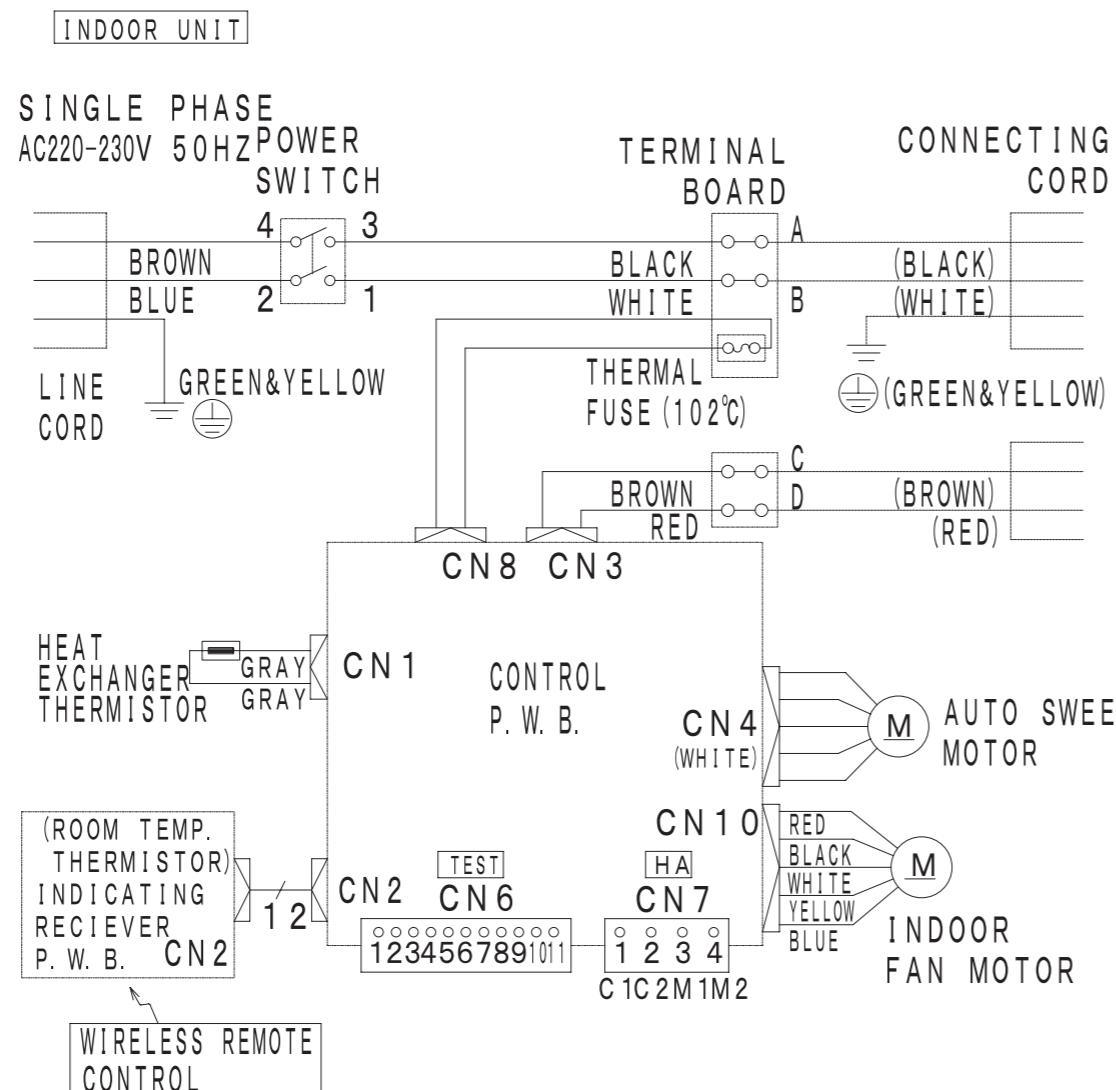


OUTDOOR UNIT

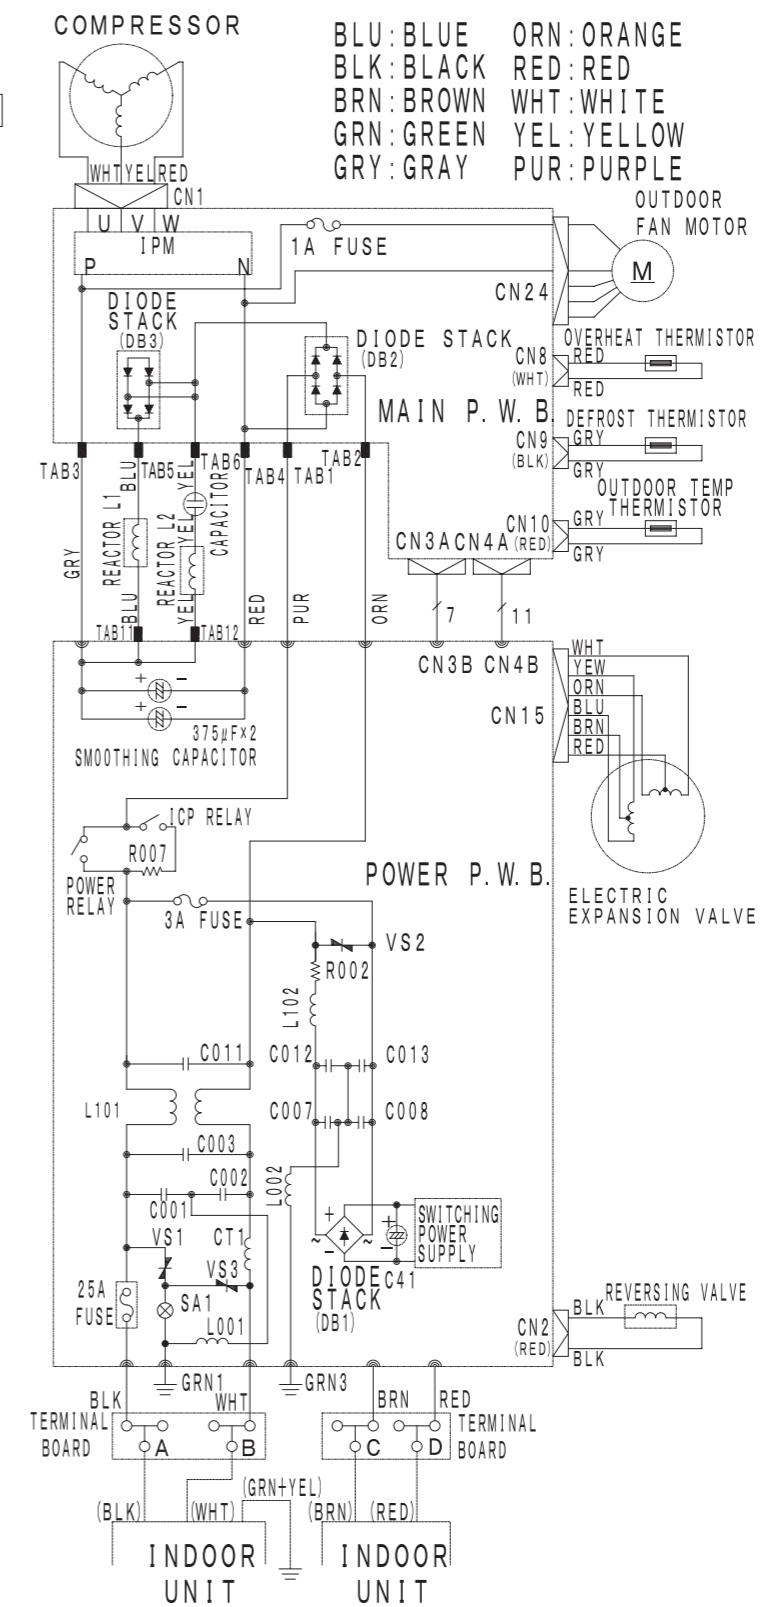




WIRING DIAGRAM OF THE PRINTED WIRING BOARD

Remote Control

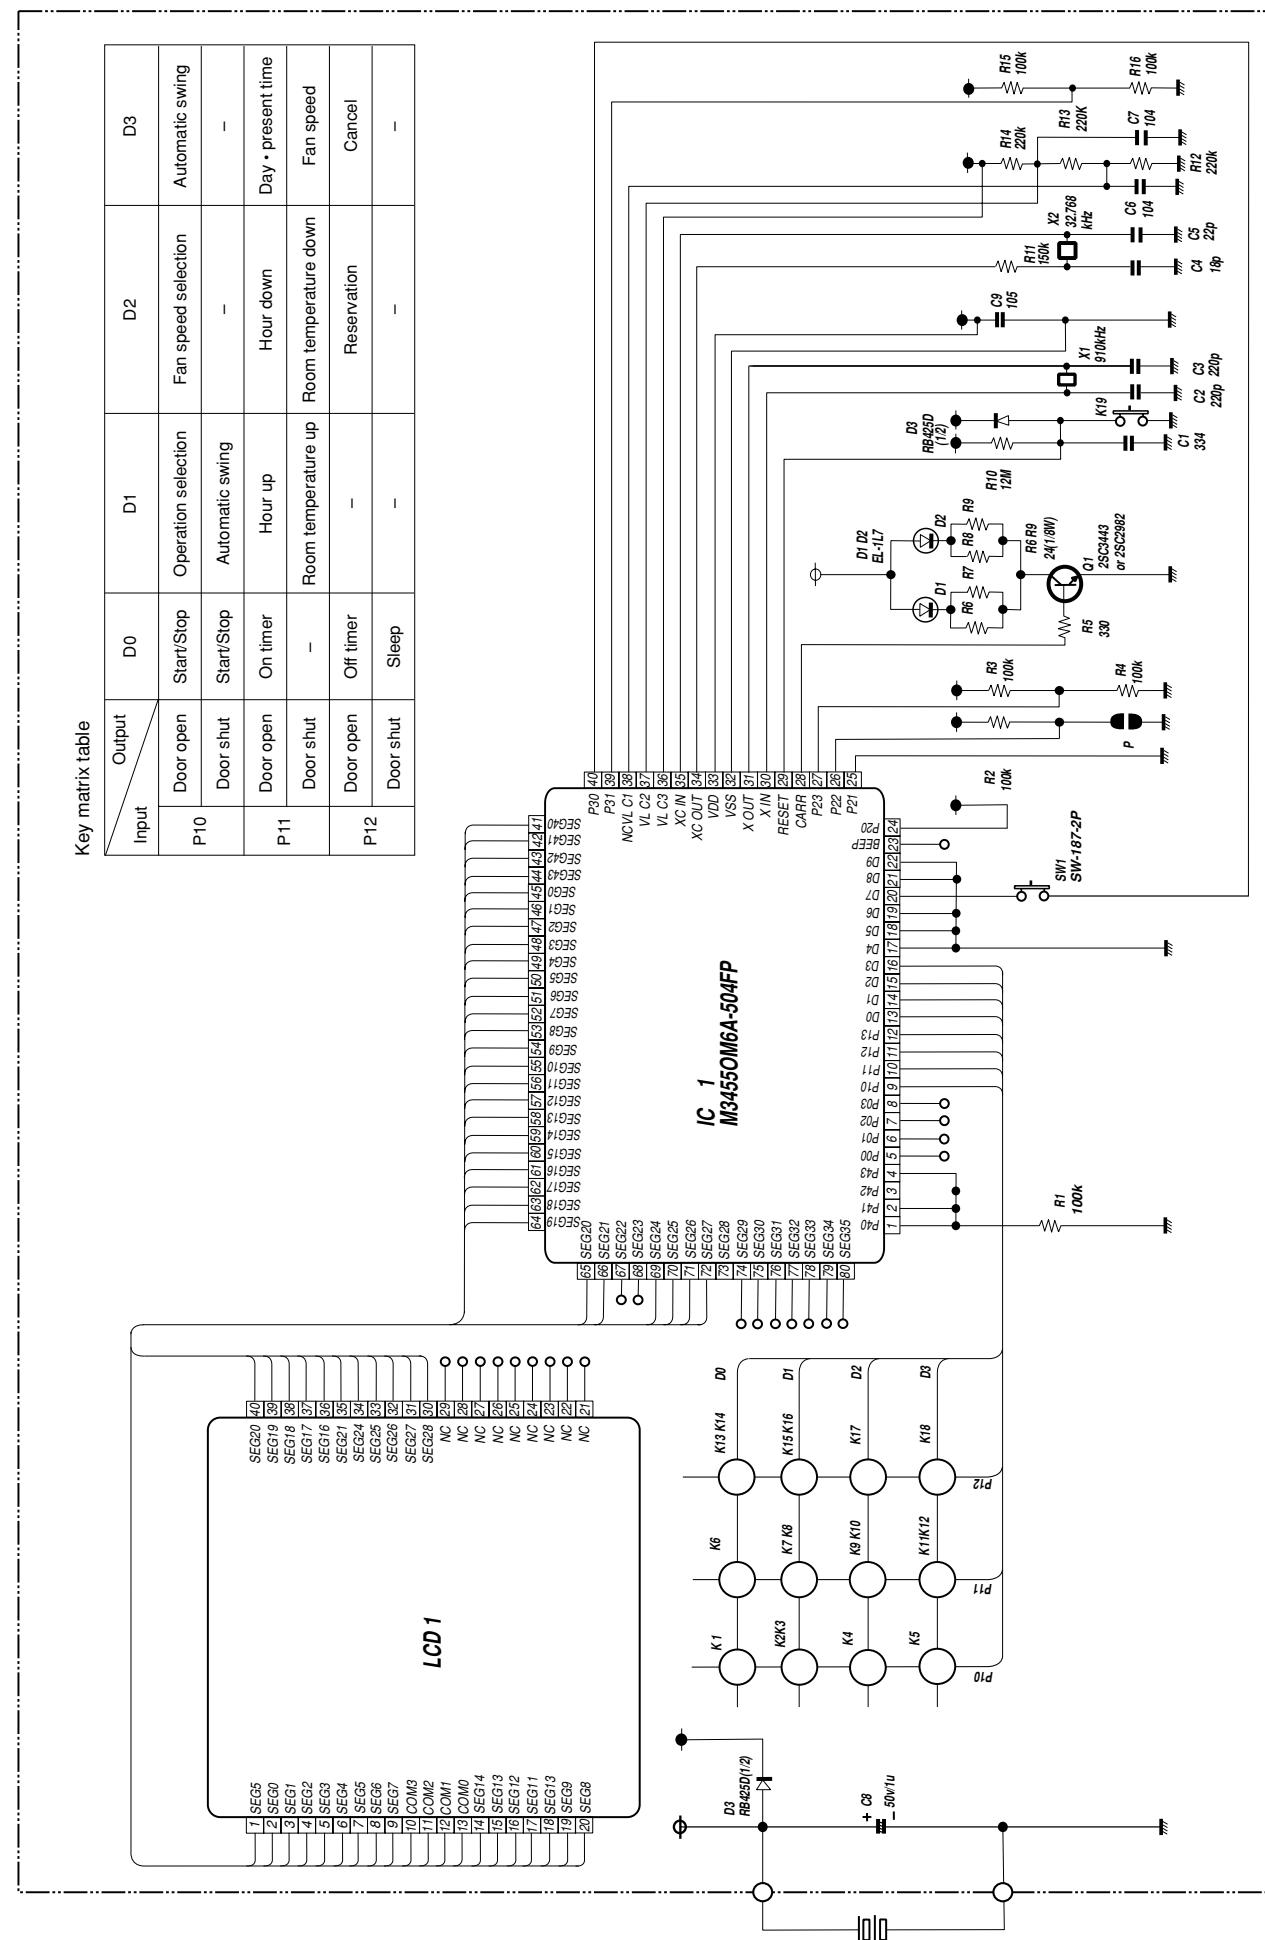

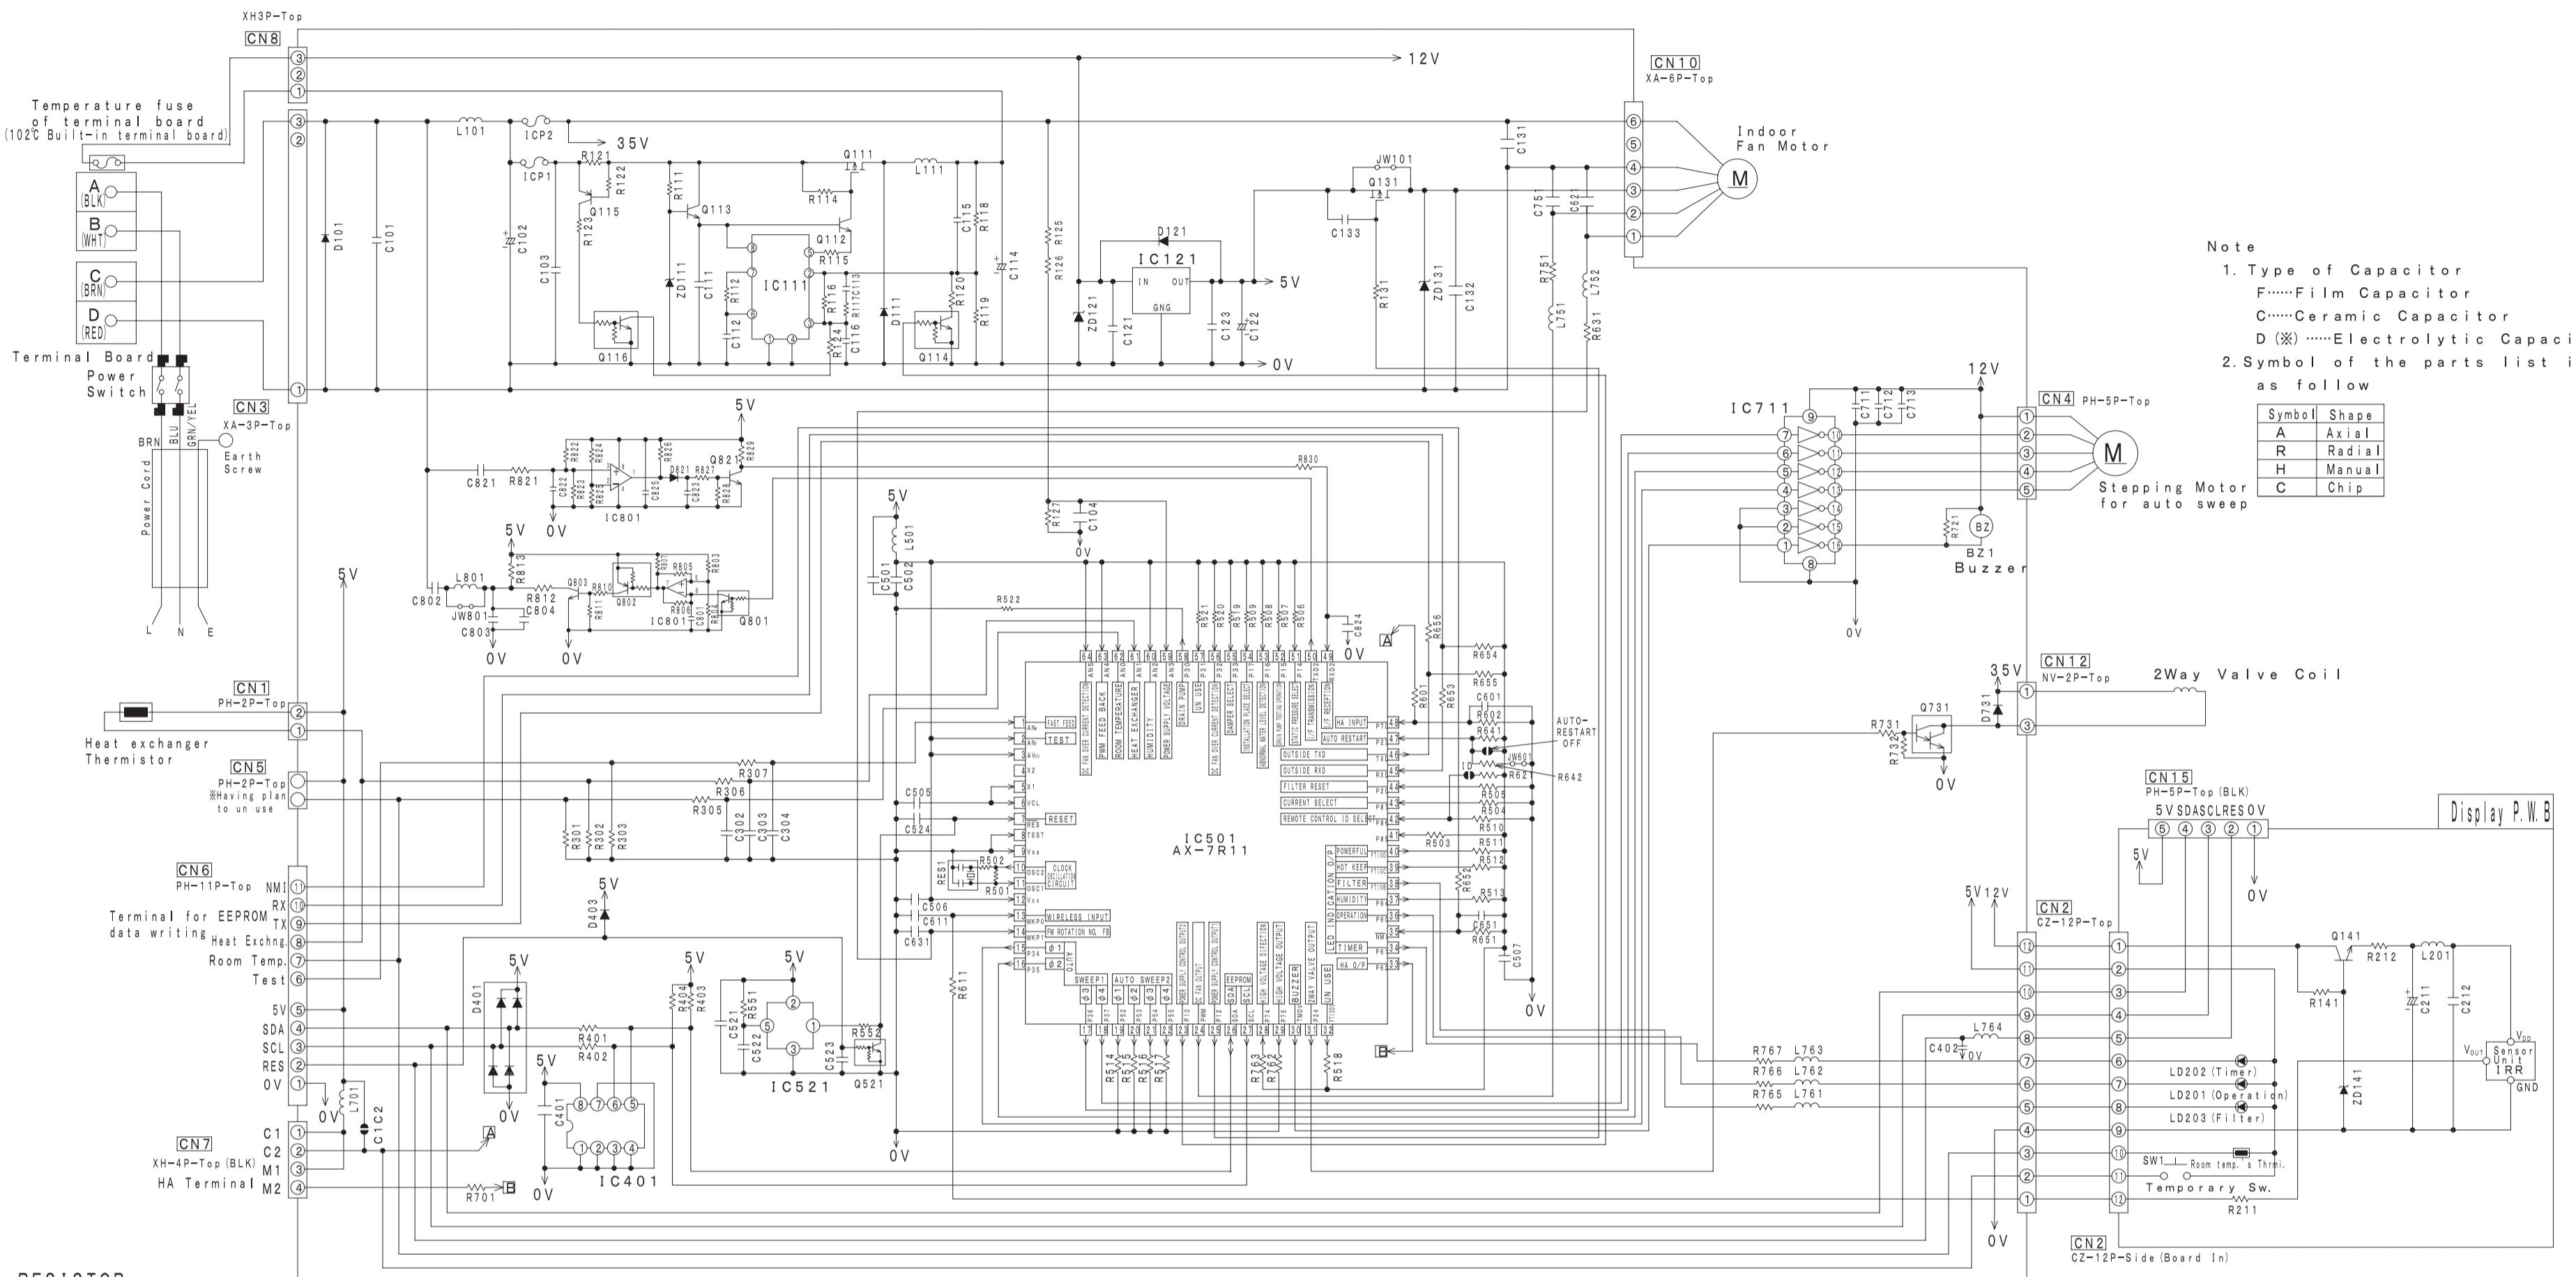

Note
 1. Type of Capacitor
 F.....Film Capacitor
 C.....Ceramic Capacitor
 D (※).....Electrolytic Capacitor
 2. Symbol of the parts list is as follow


Symbol	Shape
A	Axial
R	Radial
H	Manual
C	Chip

RESISTOR

Circuit's Symbol	Numerical Value (Ω)	Common Symbol	Power (W)	Draining current (mA)	Part No.
R111	27K ±5%	1/10W	014	C	
R112	30K ±5%	1/10W	029	C	
R114	750 ±5%	1/10W	010	C	
R115	560 ±5%	1/10W	011	C	
R116	-	-	-	-	
R117	68K ±5%	1/10W	024	C	
R118	75K ±5%	1/10W	021	C	
R119	6.8K ±5%	1/10W	022	C	
R121	0.56 ±5%	1/10W	008	C	
R122	1.0 ±5%	1/10W	004	C	
R123	3.3K ±5%	1/10W	033	C	
R124	1.0 ±5%	1/10W	042	C	
R125	3.0K ±5%	1/10W	029	C	
R126	3.0K ±5%	1/10W	029	C	
R127	5.1K ±5%	1/10W	040	C	
R131	5.1K ±5%	1/10W	020	C	
R141	2.7K ±5%	1/10W	015	C	
R142	1.0K ±5%	1/10W	033	C	
R143	1.0K ±5%	1/10W	033	C	
R144	1.0K ±5%	1/10W	033	C	
R211	1K ±5%	1/10W	033	C	
R212	4.7 ±5%	1/10W	016	C	
R301	12.7K ±1%	1/10W	018	C	
R302	12.7K ±1%	1/10W	018	C	
R303	10K ±5%	1/10W	030	C	
R321	10K ±5%	1/10W	030	C	

Capacitor

Circuit's Symbol	Numerical Value (μF)	Common Symbol	Power (W)	Draining current (mA)	Part No.
C305	10K ±5%	1/10W	030	C	
C306	1K ±5%	1/10W	033	C	
C307	10K ±5%	1/10W	033	C	
C401	3.90 ±5%	1/10W	027	C	
C403	5.1K ±5%	1/10W	040	C	
C404	5.1K ±5%	1/10W	040	C	
C501	10K ±5%	1/10W	041	C	
C502	1K ±5%	1/10W	033	C	
C503	10K ±5%	1/10W	041	C	
C504	10K ±5%	1/10W	041	C	
C505	10K ±5%	1/10W	041	C	
C506	10K ±5%	1/10W	041	C	
C507	10K ±5%	1/10W	030	C	
C601	1K ±5%	1/10W	033	C	
C602	1K ±5%	1/10W	033	C	
C603	1K ±5%	1/10W	033	C	
C604	1K ±5%	1/10W	033	C	
C605	10K ±5%	1/10W	033	C	
C606	10K ±5%	1/10W	033	C	
C607	10K ±5%	1/10W	033	C	
C608	10K ±5%	1/10W	033	C	
C609	10K ±5%	1/10W	033	C	
C610	10K ±5%	1/10W	033	C	
C611	10K ±5%	1/10W	033	C	
C612	10K ±5%	1/10W	033	C	
C613	10K ±5%	1/10W	033	C	
C614	10K ±5%	1/10W	033	C	
C615	10K ±5%	1/10W	033	C	
C616	10K ±5%	1/10W	033	C	
C617	10K ±5%	1/10W	033	C	
C618	10K ±5%	1/10W	033	C	
C619	10K ±5%	1/10W	033	C	
C620	10K ±5%	1/10W	033	C	
C621	10K ±5%	1/10W	033	C	
C622	10K ±5%	1/10W	033	C	
C623	10K ±5%	1/10W	033	C	
C624	10K ±5%	1/10W	033	C	
C625	10K ±5%	1/10W	033	C	
C626	10K ±5%	1/10W	033	C	
C627	10K ±5%	1/10W	033	C	
C628	10K ±5%	1/10W	033	C	
C629	10K ±5%	1/10W	033	C	
C630	10K ±5%	1/10W	033	C	
C631	10K ±5%	1/10W	033	C	
C632	10K ±5%	1/10W	033	C	
C633	10K ±5%	1/10W	033	C	
C634	10K ±5%	1/10W	033	C	
C635	10K ±5%	1/10W	033	C	
C636	10K ±5%	1/10W	033	C	
C637	10K ±5%	1/10W	033	C	
C638	10K ±5%	1/10W	033	C	
C639	10K ±5%	1/10W	033	C	
C640	10K ±5%	1/10W	033	C	
C641	10K ±5%	1/10W	033	C	
C642	10K ±5%	1/10W	033	C	
C643	10K ±5%	1/10W	033	C	
C644	10K ±5%	1/10W	033	C	
C645	10K ±5%	1/10W	033	C	
C646	10K ±5%	1/10W	033	C	
C647	10K ±5%	1/10W	033	C	
C648	10K ±5%	1/10W	033	C	
C649	10K ±5%	1/10W	033	C	
C650	10K ±5%	1/10W	033	C	
C651	10K ±5%	1/10W	033	C	
C652	10K ±5%	1/10W	033	C	
C653	10K ±5%	1/10W	033	C	
C654	10K ±5%	1/10W	033	C	
C655	10K ±5%	1/10W	033	C	
C656	10K ±5%	1/10W	033	C	
C657	10K ±5%	1/10W	033	C	
C658	10K ±5%	1/10W	033	C	
C659	10K ±5%	1/10W	033	C	
C660	10K ±5%	1/10W	033	C	
C661	10K ±5%	1/10W	033	C	
C662	10K ±5%	1/10W	033	C	
C663	10K ±5%	1/10W	033	C	
C664	10K ±5%	1/10W	033	C	
C665	10K ±5%	1/10W	033	C	
C666	10K ±5%	1/10W	033	C	
C667	10K ±5%	1/10W	033	C	
C668	10K ±5%	1/10W	033	C	
C669	10K ±5%	1/10W	033	C	
C670	10K ±5%	1/10W	033	C	
C671	10K ±5%	1/10W	033	C	
C672	10K ±5%	1/10W	033	C	
C673	10K ±5%	1/10W	033	C	
C674	10K ±5%	1/10W	033	C	
C675	10K ±5%	1/10W	033	C	
C676	10K ±5%	1/10W	033	C	
C677	10K ±5%	1/10W	033	C	
C678	10K ±5%	1/10W	033	C	
C679	10K ±5%	1/10W	033	C	
C680	10K ±5%	1/10W	033	C	
C681	10K ±5%	1/10W	033	C	
C682	10K ±5%	1/10W	033	C	
C683	10K ±5%	1/10W	033	C	
C684	10K ±5%	1/10W	033	C	
C685	10K ±5%	1/10W	033	C	
C686	10K ±5%	1/10W	033	C	
C687	10K ±5%	1/10W	033	C	
C688	10K ±5%	1/10W	033	C	
C689	10K ±5%	1/10W	033	C	
C690	10K ±5%	1/10W	033	C	
C691	10K ±5%	1/10W	033	C	
C692	10K ±5%	1/1			

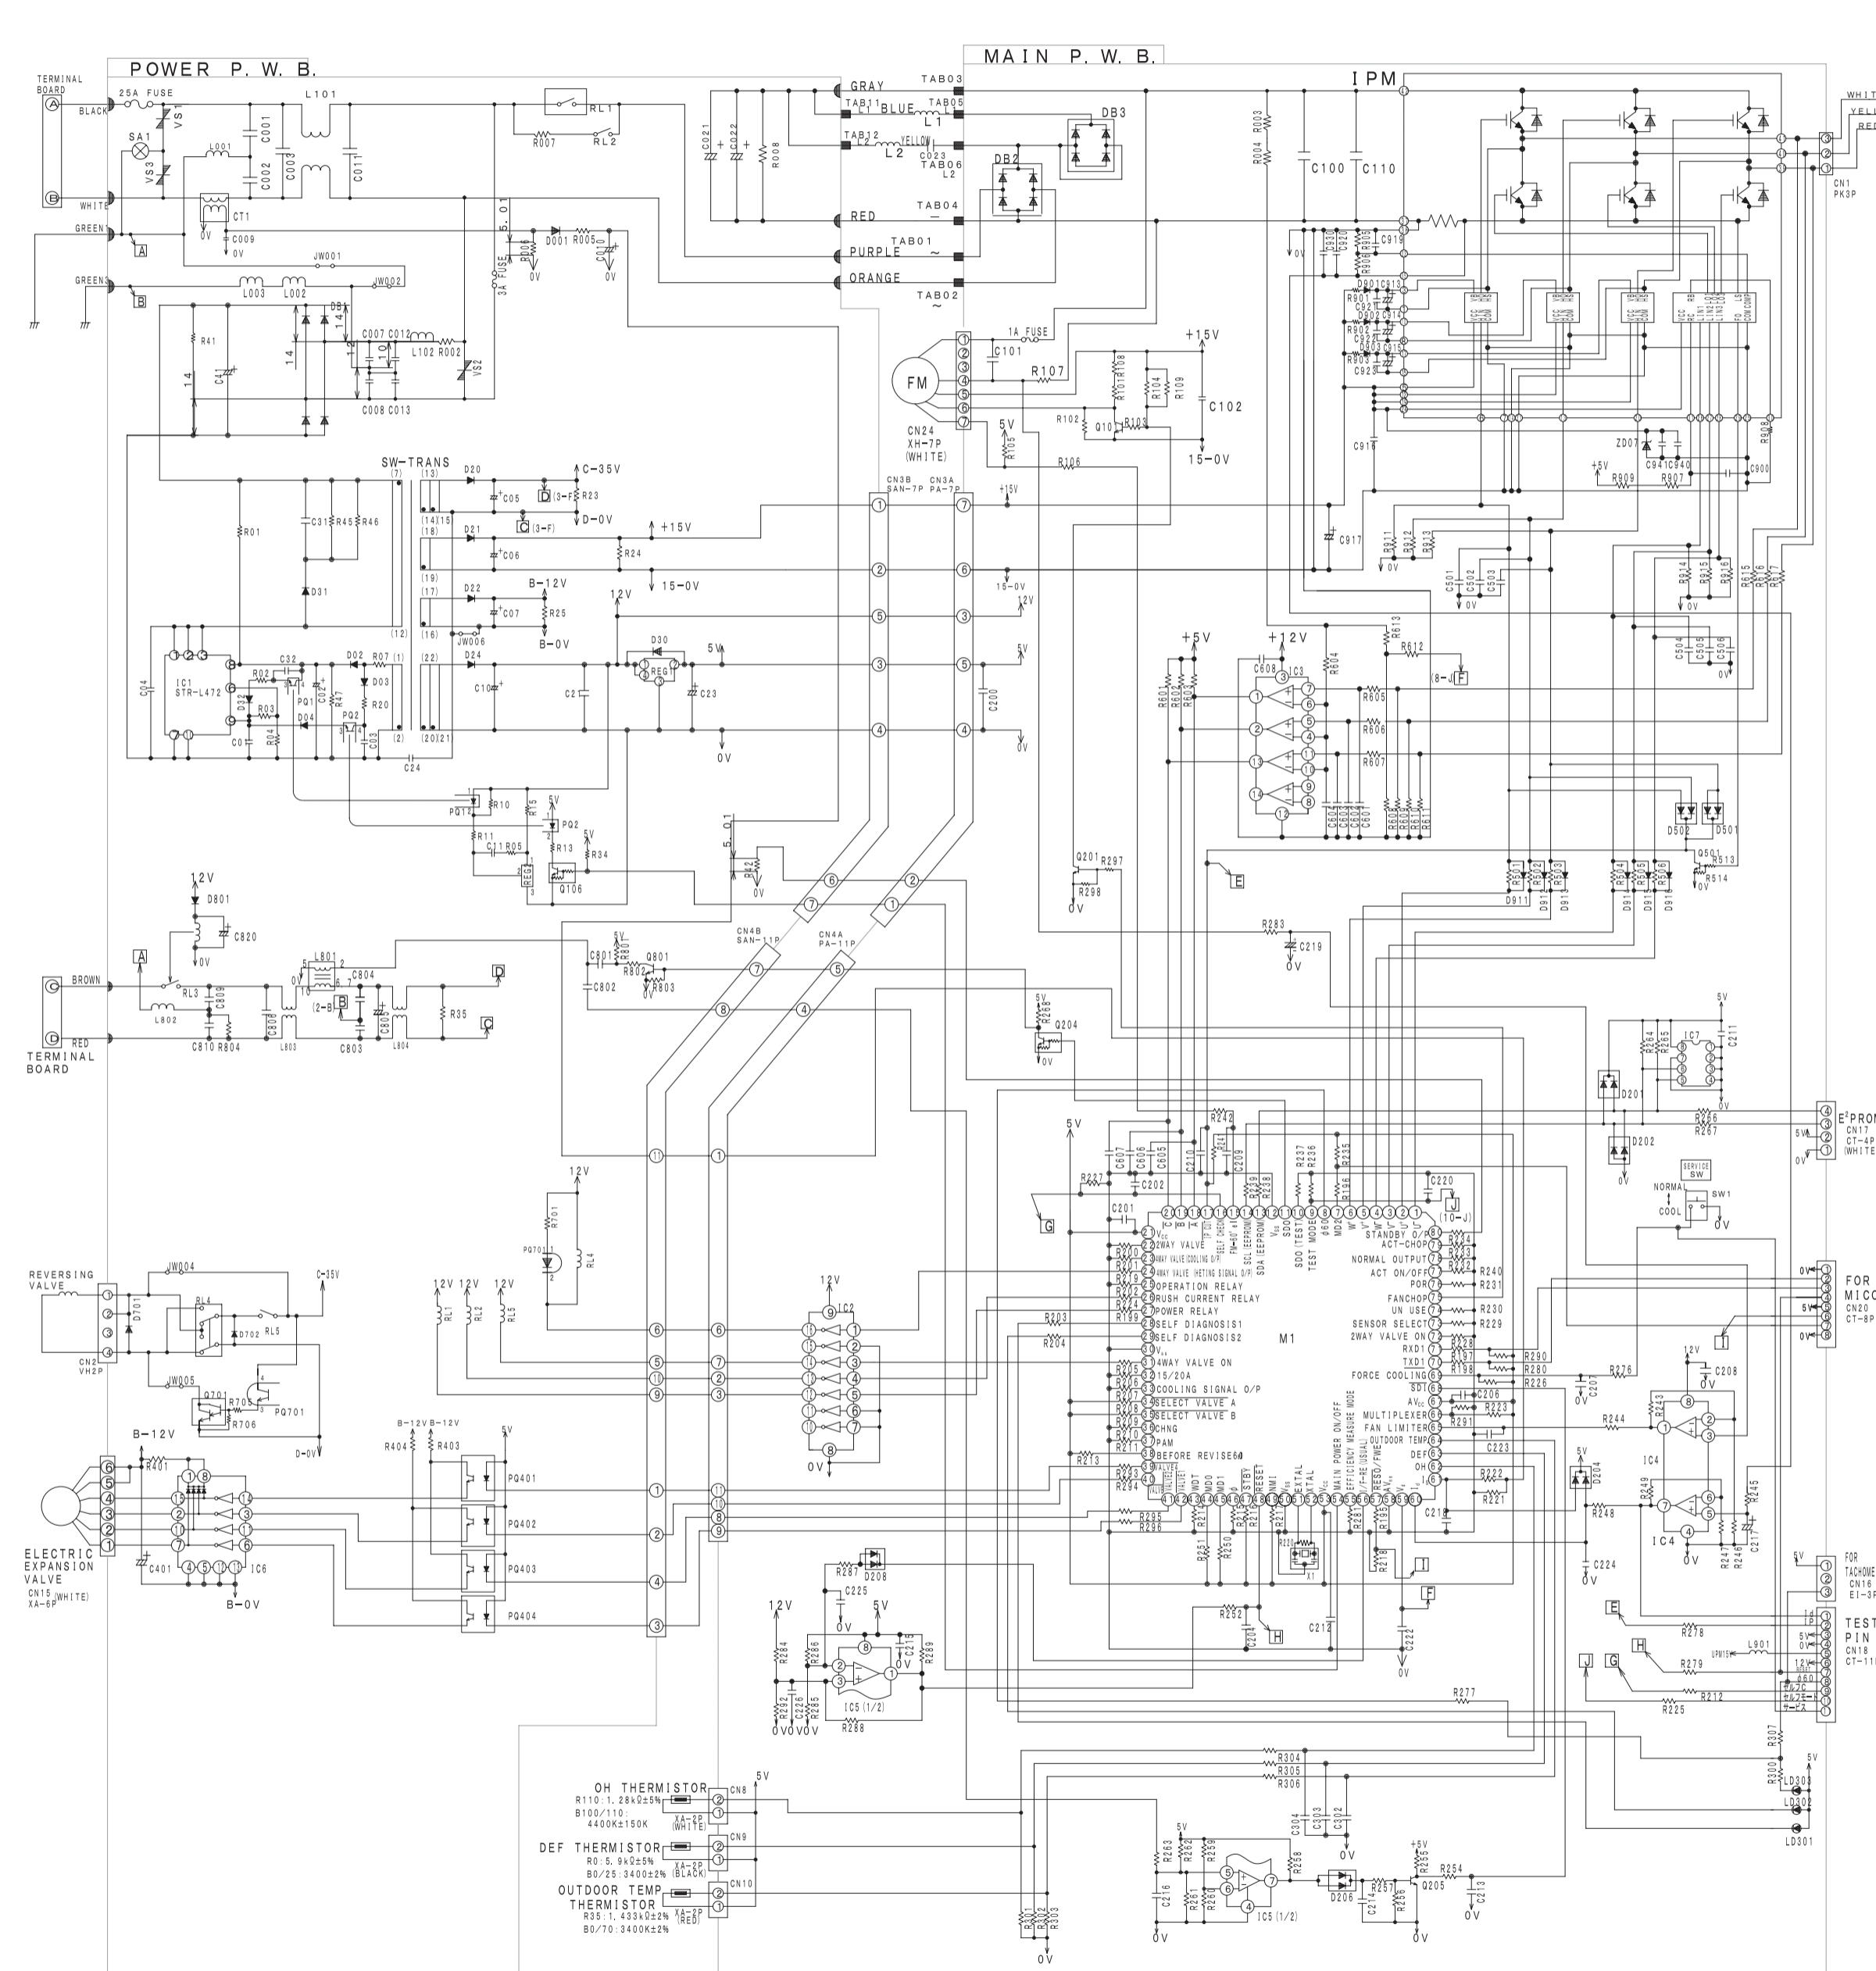

MOUNTING
A: AXIAL
R: RADIAL
S: SMT
C: CHIP SMT
S: OTHER SMT

CAPACITOR TYPE
C: CERAMIC
F: FILM
D: ELECTROLYTIC


RESISTORS

SYMBOL	REATING	TYPE	UNIT
R01	1.5M 5%	A	P
R02	3.3K 5%	A	P
R03	6.80K 5%	A	P
R04	6.88K 5%	A	P
R05	2.2K 5%	A	P
R07	47 2%	A	P
R10	1K 1%	A	P
R11	1K 1%	A	P
R13	390 5%	A	P
R15	33 1%	A	P
R20	2.2K 5%	A	P
R23		P	
R24		P	
R25	100K 5%	A	P
R34	2.2K 5%	A	P
R35	5.8K 5%	A	P
R39		R	P
R41	1M 5%	A	P
R42	10K 5%	A	P
R45	220K 5%	A	P
R46	220K 5%	A	P
R47	470K 5%	A	P
R50		R	P
R51	10K 5%	A	P
R52	3K 2%	A	P
R53	390 5%	A	P
R54	390 5%	A	P
R55	390 5%	A	P
R56	390 5%	A	P
R57	10K 5%	A	P
R58	10K 5%	A	P
R59	10K 5%	A	P
R60	2.2 5%	A	P
R63	3.60K 0.5%	A	M
R64	1.88K 1%	A	P
R65	1.88K 1%	A	P
R67	100 5%	A	P
R68	240K 5%	A	P
R70	1.8K 1%	A	P
R72	3.90 5%	A	P
R73	3.90 5%	A	P
R74	100 5%	A	P
R75	100 5%	A	P
R76	100 5%	A	P
R77	100 5%	A	P
R78	100 5%	A	P
R79	100 5%	A	P
R80	10K 5%	A	P
R81	10K 5%	A	P
R83	10K 5%	A	P
R84	10K 5%	A	P
R85	10K 5%	A	P
R86	10K 5%	A	P
R87	10K 5%	A	P
R88	10K 5%	A	P
R89	10K 5%	A	P
R90	10K 5%	A	P
R91	10K 5%	A	P
R92	10K 5%	A	P
R93	10K 5%	A	P
R94	10K 5%	A	P
R95	10K 5%	A	P
R96	10K 5%	A	P
R97	10K 5%	A	P
R98	10K 5%	A	P
R99	100 5%	A	P
R100	10K 5%	A	P
R101	10K 5%	A	P
R102	10K 5%	A	P
R103	10K 5%	A	P
R105	4.7K 5%	A	P
R107	0.24 0.5%	A	P
R108	10K 5%	A	P
R109	15K 5%	A	P
R110	10K 5%	A	P
R111	10K 5%	A	P
R112	10K 5%	A	P
R113	10K 5%	A	P
R114	10K 5%	A	P
R115	10K 5%	A	P
R116	10K 5%	A	P
R117	10K 5%	A	P
R118	10K 5%	A	P
R119	10K 5%	A	P
R120	10K 5%	A	P
R121	10K 5%	A	P
R122	10K 5%	A	P
R123	10K 5%	A	P
R124	10K 5%	A	P
R125	10K 5%	A	P
R126	10K 5%	A	P
R127	10K 5%	A	P
R128	10K 5%	A	P
R129	10K 5%	A	P
R130	10K 5%	A	P
R131	10K 5%	A	P
R132	10K 5%	A	P
R133	10K 5%	A	P
R134	100 5%	A	P
R135	100 5%	A	P
R136	100 5%	A	P
R137	100 5%	A	P
R138	100 5%	A	P
R139	100 5%	A	P
R140	100 5%	A	P
R141	100 5%	A	P
R142	100 5%	A	P
R143	100 5%	A	P
R144	100 5%	A	P
R145	100 5%	A	P
R146	100 5%	A	P
R147	100 5%	A	P
R148	100 5%	A	P
R149	100 5%	A	P
R150	100 5%	A	P
R151	100 5%	A	P
R152	100 5%	A	P
R153	100 5%	A	P
R154	100 5%	A	P
R155	100 5%	A	P
R156	100 5%	A	P
R157	100 5%	A	P
R158	100 5%	A	P
R159	100 5%	A	P
R160	100 5%	A	P
R161	100 5%	A	P
R162	100 5%	A	P
R163	100 5%	A	P
R164	100 5%	A	P
R165	100 5%	A	P
R166	100 5%	A	P
R167	100 5%	A	P
R168	100 5%	A	P
R169	100 5%	A	P
R170	100 5%	A	P
R171	100 5%	A	P
R172	100 5%	A	P
R173	100 5%	A	P
R174	100 5%	A	P
R175	100 5%	A	P
R176	100 5%	A	P
R177	100 5%	A	P
R178	100 5%	A	P
R179	100 5%	A	P
R180	100 5%	A	P
R181	100 5%	A	P
R182	100 5%	A	P
R183	100 5%	A	P
R184	100 5%	A	P
R185	100 5%	A	P
R186	100 5%	A	P
R187	100 5%	A	P
R188	100 5%	A	P
R189	100 5%	A	P
R190	100 5%	A	P
R191	100 5%	A	P
R192	100 5%	A	P
R193	100 5%	A	P
R194	100 5%	A	P
R195	390 5%	A	P
R196	390 5%	A	P
R197	390 5%	A	P
R198	390 5%	A	P
R199	100 5%	A	P
R200	100 5%	A	P
R201	10K 5%	A	P
R202	10K 5%	A	P
R203	10K 5%	A	P
R204	10K 5%	A	P
R205	100 5%	A	P
R206	100 5%	A	P
R207	100 5%	A	P
R208	100 5%	A	P
R209	100 5%	A	P
R210	100 5%	A	P
R211	100 5%	A	P
R212	100 5%	A	P
R213	100 5%	A	P
R214	100 5%	A	P
R215	100 5%	A	P
R216	100 5%	A	P
R217	100 5%	A	P
R218	100 5%	A	P
R219	220 10	D	M
R220	100 5%	A	P
R221	100 5%	A	P
R222	100 5%	A	P
R223	100 5%	A	P
R224	100 5%	A	P
R225	100 5%	A	P
R226	100 5%	A	P
R227	100 5%	A	P
R228	100 5%	A	P
R229	100 5%	A	P
R230	100 5%	A	P
R231	100 5%	A	P
R232	100 5%	A	P
R233	100 5%	A	P
R234	100 5%	A	P
R235	100 5%	A	P
R236	100 5%	A	P
R237	100 5%	A	P
R238	100 5%	A	P
R239	100 5%	A	P
R240	100 5%	A	P
R241	100 5%	A	P
R242	100 5%	A	P
R243	100 5%	A	P
R244	100 5%	A	P
R245	100 5%	A	P
R246	100 5%	A	P
R247	100 5%	A	P
R248	100 5%	A	P
R249	100 5%	A	P
R250	100 5%	A	P
R251	100 5%	A	P
R252	100 5%	A	P
R253	100 5%	A	P
R254	100 5%	C	M
R255	2K 5%	C	M
R256	10K 5%	C	M
R257	1K 5%	C	M
R258	8.25K 1%	C	M
R259	1.25K 1%	C	M
R260	1.04K 1%	C	M
R261			



BLOCK DIAGRAM

MODEL RAS-25YH5 / RAC-25YH5
RAS-35YH5 / RAC-35YH5

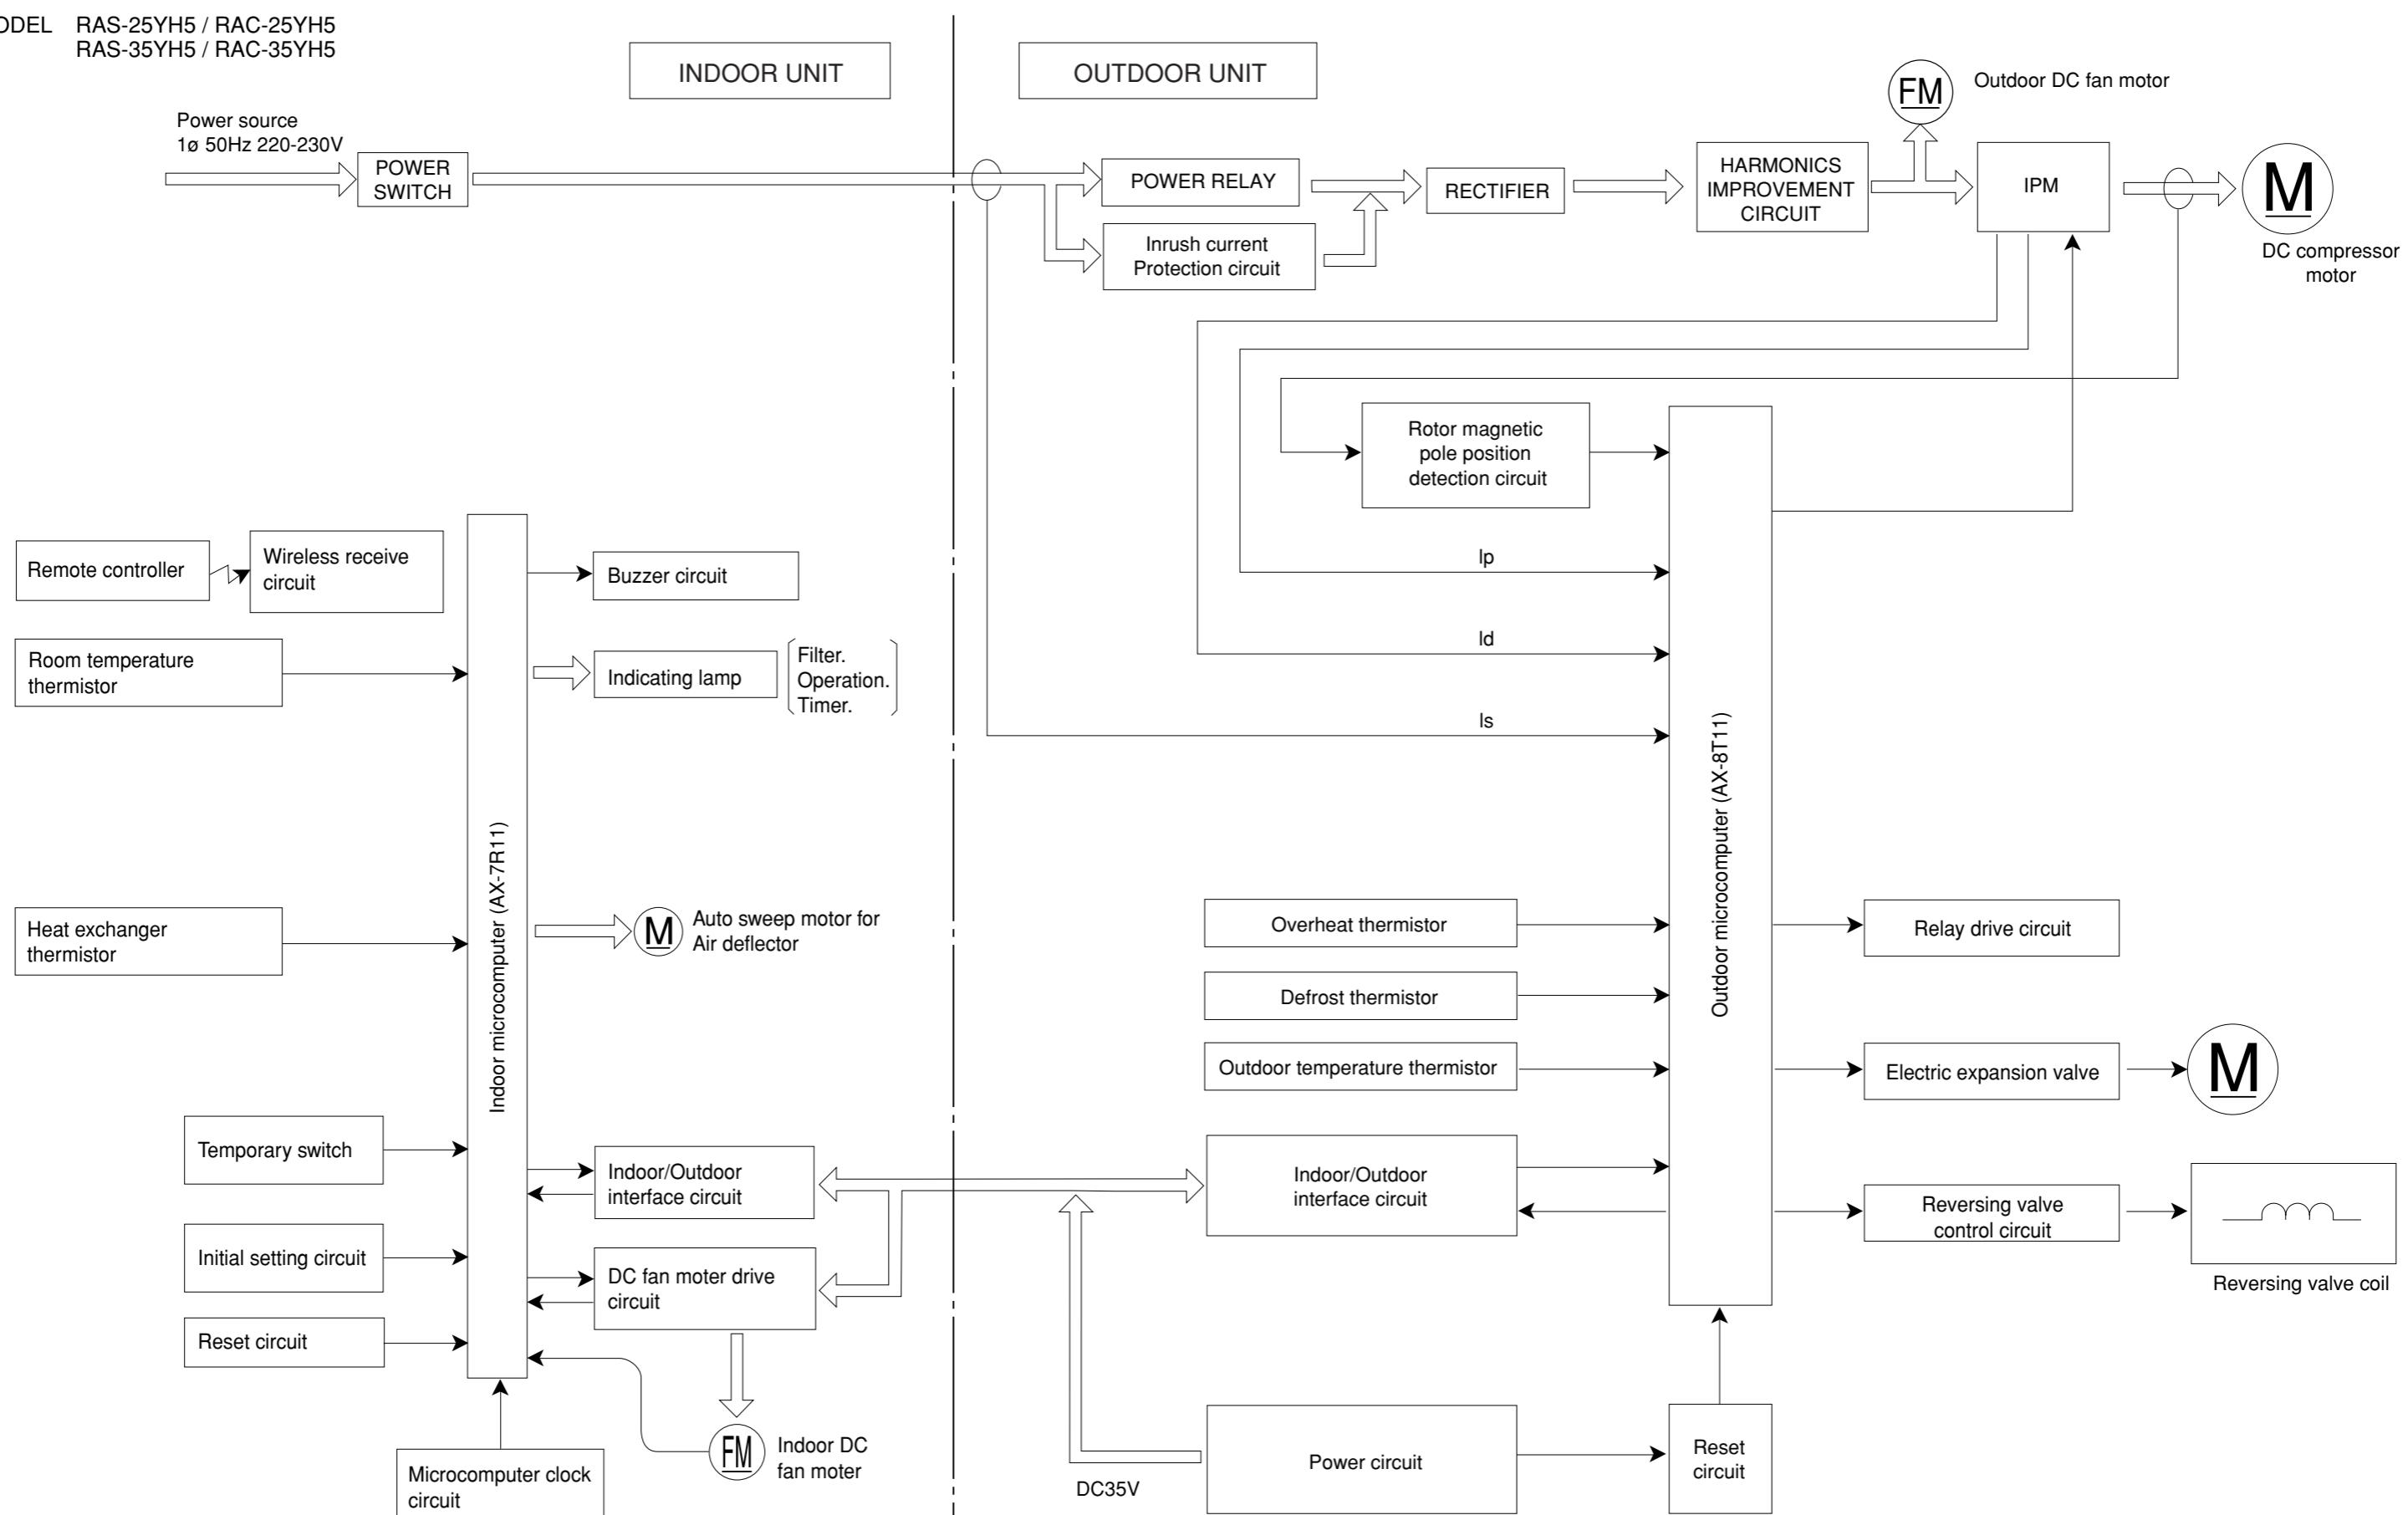



BASIC MODE

MODEL RAS-25YH5, RAS-35YH5

Operation mode	Fan	Cooling	Dehumidifying (dehumidifying operation by the function select button only, not including that engaged by the dehumidify button)	Heating	auto	
Basic operation of start/stop button						
Timer functions	Off-timer					
	On-timer					
	Off -> On On -> Off timer					
Fan speed mode (indoor fan)	Auto	<p>Changes from "Hi" to "Med" or "Lo" depending on room temperature.</p> <p>1. Runs at "Hi" until first thermo off after operation is started. 2. Runs at "Lo" when thermo is off.</p>	<p>Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchange temperature. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).</p> <p>When the compressor is running at maximum speed during hot dash or when recovered from defrosting.</p> <p>In modes other than left</p>	<p>Operating mode is judged by room temperature and outdoor temperature.</p> <p>(1) Judging by outdoor temperature</p> <p>Operating mode is judged by outdoor temperature. Only when the mode is not restricted by this judgment, the judgment by room temperature in the next paragraph will be performed.</p> <ul style="list-style-type: none"> (a) Outdoor temperature $\geq 27^{\circ}\text{C}$: Restricted to cooling (b) Outdoor temperature $\leq 16^{\circ}\text{C}$: Restricted to heating <p>(2) Judging by room temperature</p> <p>Operating mode at start up is judged (initial judgment)</p> <ul style="list-style-type: none"> (a) Conditions for judgment (any of the followings) <ul style="list-style-type: none"> • When auto operation is started after 1 hour has elapsed since the operation was stopped. • When auto operation is started after the previous manual mode operation. • When the operating mode is switched to auto while operating at manual mode. (b) Judging method <ul style="list-style-type: none"> • Room temperature $\geq 25^{\circ}\text{C} \pm 3^{\circ}\text{C}$: Cooling • Room temperature $< 25^{\circ}\text{C} \pm 3^{\circ}\text{C}$: Heating <p>* $\pm 3^{\circ}\text{C}$ is the fine adjustment value from the remote controller.</p> 	<p>Room temperature</p> <p>16°C 27°C Outdoor temperature</p> <p>Judging operating mode change during operation (Continuous judgment)</p> <ul style="list-style-type: none"> (a) Conditions for judgment (any of the followings) <ul style="list-style-type: none"> • The mode is reviewed at every interval time. • When auto operation is started again before 1 hour has elapsed since the operation was stopped. (b) Judging method <ul style="list-style-type: none"> • Judge by setting the hysteresis on the final preset temperature. <p>The final preset temperature is the actually targeted preset temperature which is the sum of the basic preset temperature and each type of shift value (e.g. $\pm 3^{\circ}\text{C}$ by remote controller, preset temperature correction value, powerful shift value, etc.)</p> <p>[Currently cooling]</p> <ul style="list-style-type: none"> • Room temperature \leq Final preset temperature -2°C Change to heating • Room temperature $>$ Final preset temperature -2°C Continue cooling <p>[Currently heating]</p> <ul style="list-style-type: none"> • Room temperature \geq Final preset temperature $+3^{\circ}\text{C}$ Change to cooling • Room temperature $<$ Final preset temperature $+3^{\circ}\text{C}$ Continue heating 	
	Hi	Operates at "Hi" regardless of the room temperature.	Set to "ultra-Hi" when the compressor runs at maximum speed, and to "Hi" in other modes.	Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). Set to "ultra-Hi" when the compressor is running at maximum speed during hot dash or when recovered from defrosting.		
	Med	Operates at "Med" regardless of the room temperature.	Same as at left.	Set to "ultra-Lo", "Lo", "Med" or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preseating (cooling is recovered at 18.33°C).		
	Lo	Operates at "Lo" regardless of the room temperature.	Same as at left.	Set to "ultra-Lo", "Lo", or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preseating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:		
	Basic operation of temperature controller	Performs only fan operation at the set speed regardless of the room temperature.	<p>See page 33.</p>	See page 35.	See page 37.	
Sleep operation (with sleep button ON)	<ul style="list-style-type: none"> • Enters sleep operation after set as on the left. • Action during sleep operation Lo (sleep) operation 	<ul style="list-style-type: none"> • Same as at left • See page 35. 	<ul style="list-style-type: none"> • Same as at left • See page 35. 	<ul style="list-style-type: none"> • Same as at left • See page 39. 	<ul style="list-style-type: none"> • Same as at left. • Performs the sleep operation of each operation mode. 	



Table 1 Mode data file

	RAS-25YH5	RAS-35YH5
LABEL NAME	VALUE	
WMAX	3800 min ⁻¹	4500 min ⁻¹
WMAX2	3800 min ⁻¹	4500 min ⁻¹
WSTD	3150 min ⁻¹	3750 min ⁻¹
WBEMAX	2500 min ⁻¹	2800 min ⁻¹
CMAX	3300 min ⁻¹	3800 min ⁻¹
CMAX2	3300 min ⁻¹	3800 min ⁻¹
CSTD	2050 min ⁻¹	3150 min ⁻¹
CKYMAX	2050 min ⁻¹	3000 min ⁻¹
CJKMAX	1800 min ⁻¹	2200 min ⁻¹
CBEMAX	1600 min ⁻¹	1700 min ⁻¹
WMIN	800 min ⁻¹	800 min ⁻¹
CMIN	1400 min ⁻¹	1400 min ⁻¹
STARTMC	90 Seconds	90 Seconds
DWNRATEW	80%	80%
DWNRATEC	60%	60%
SHIFTW	2.00°C	2.00°C
SHIFTC	1.33°C	1.33°C
CLMXTP	30.00°C	30.00°C
YNEOF	25.00°C	25.00°C
TEION	5.00°C	5.00°C
TEIOF	9.00°C	9.00°C
SFTDSW	1.00°C	1.00°C
DFTIM1	43 Minutes	43 Minutes
DFTIM2	60 Minutes	60 Minutes





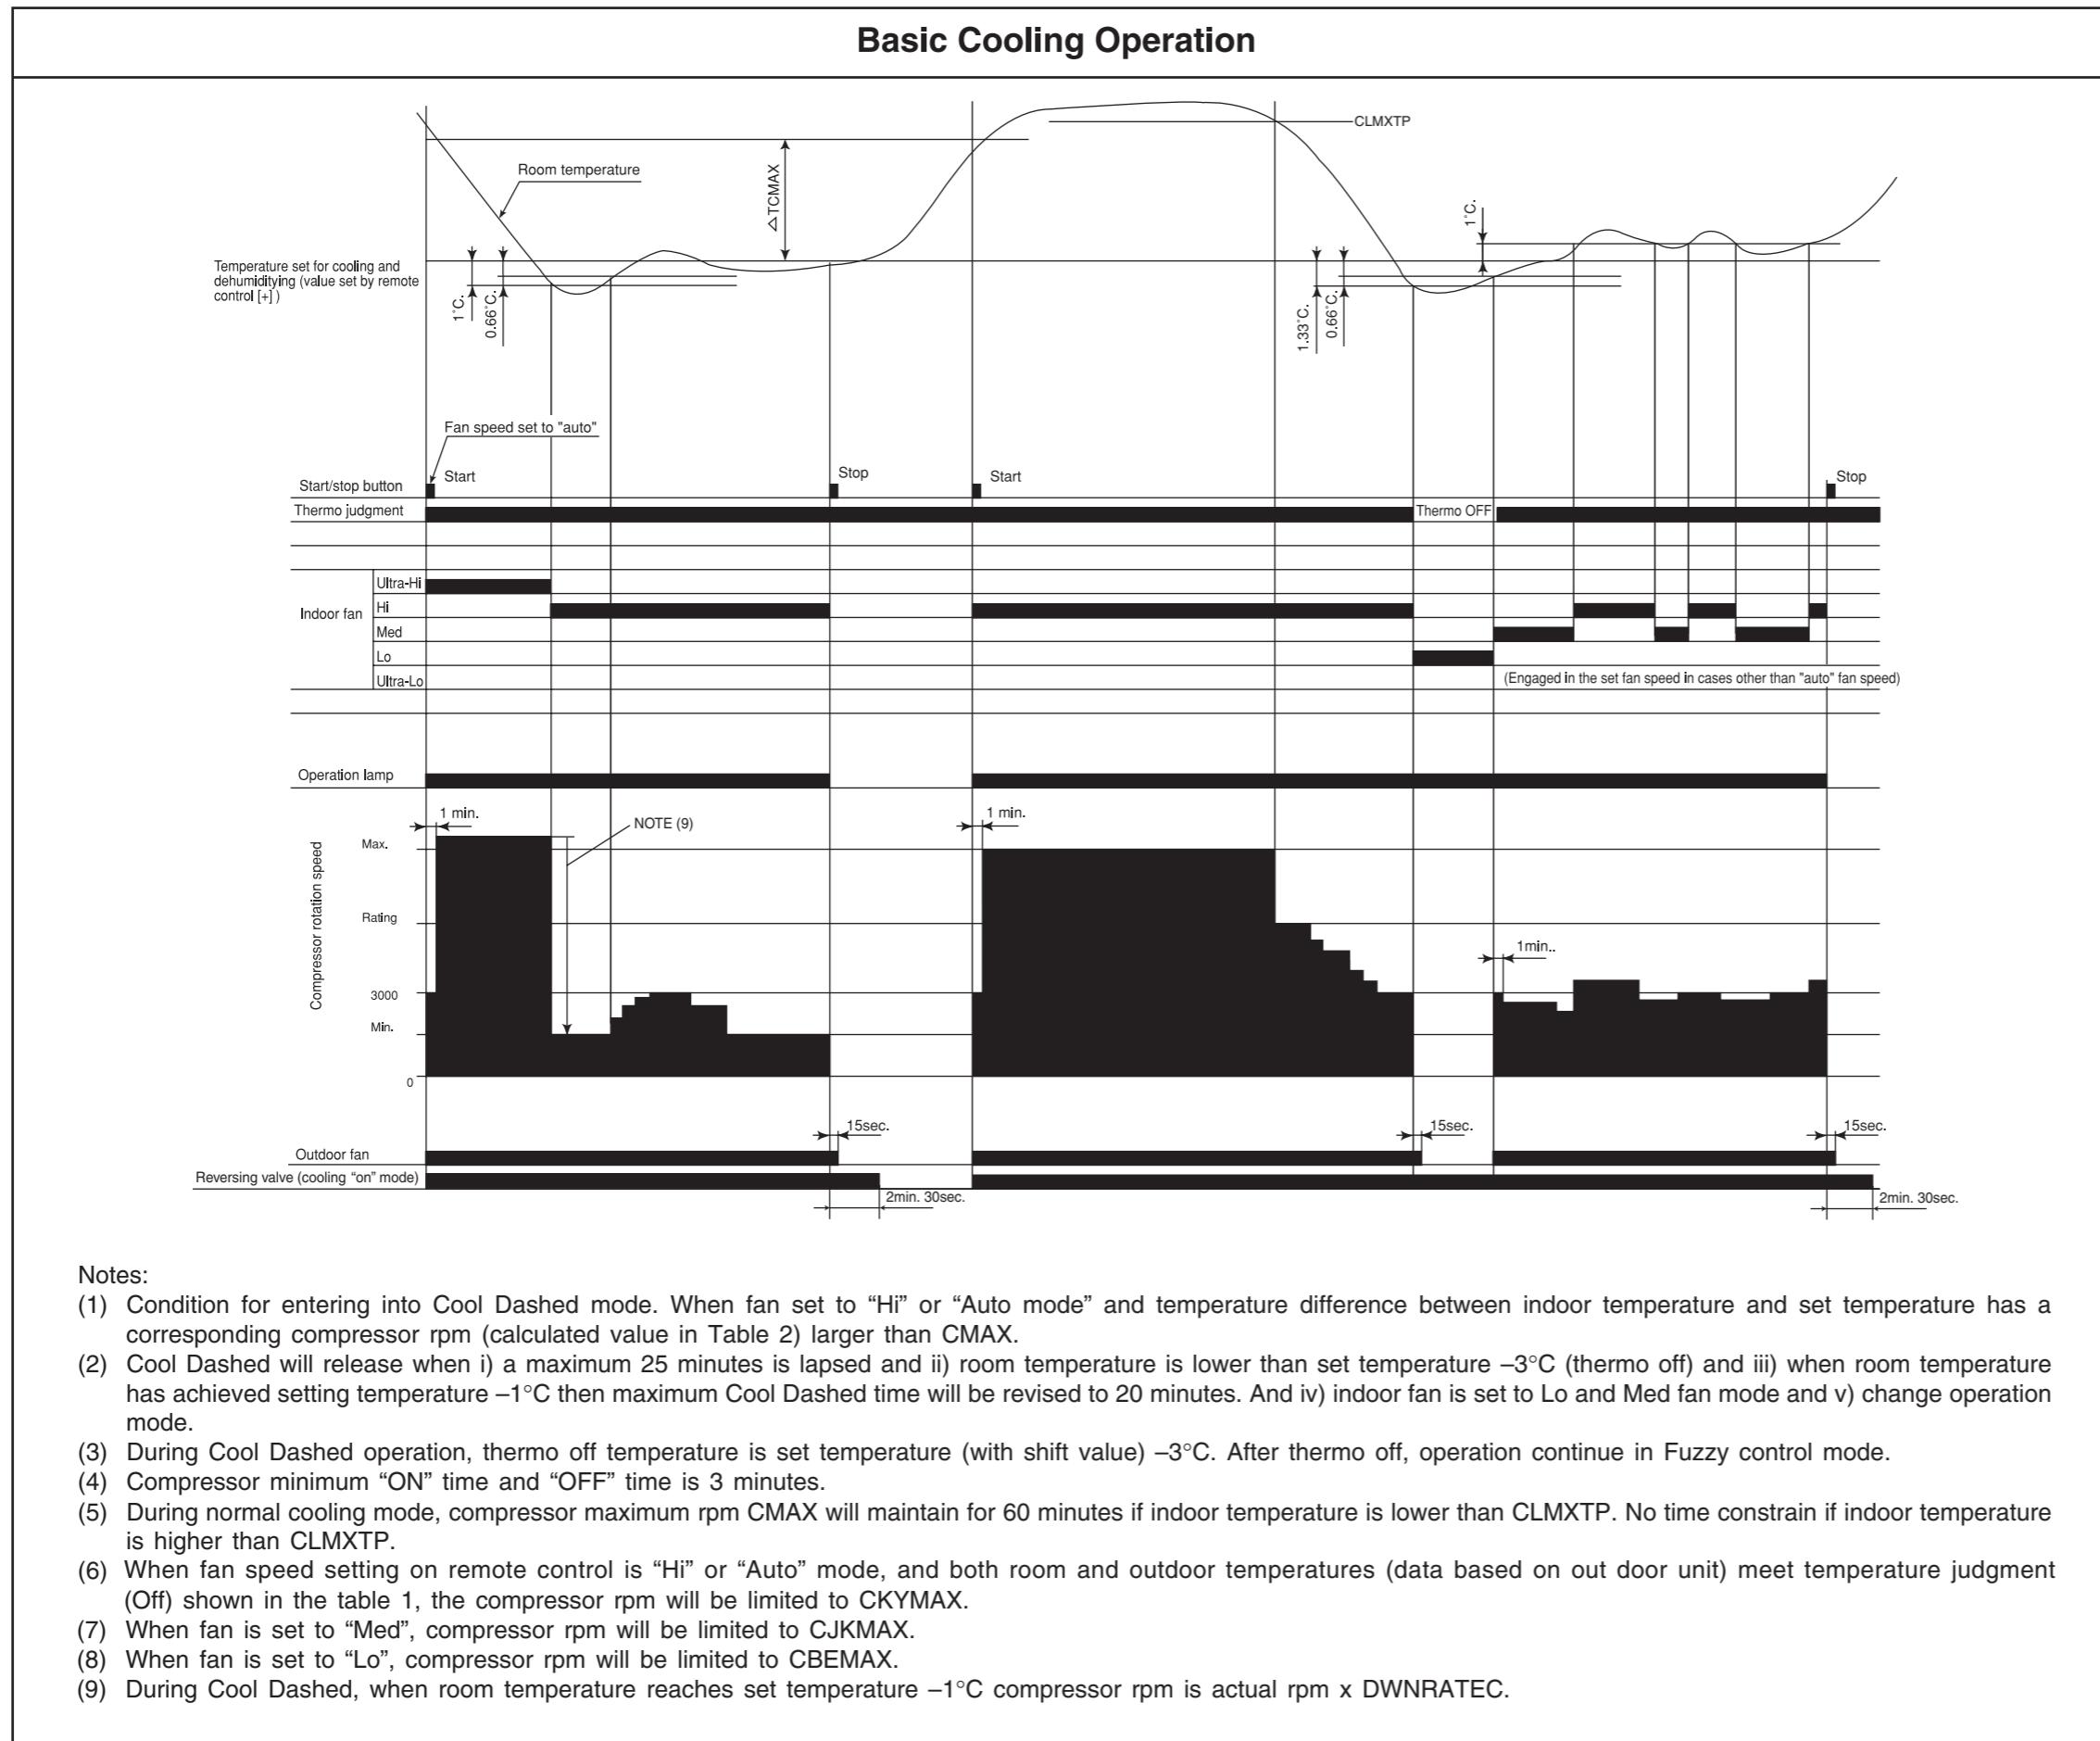


Table 1 Thermo judgment

Item		Temperature
Room temperature	Thermo judgment (ON)	30°C
Room temperature	Thermo judgment (OFF)	32°C
Outdoor temperature	Thermo judgment (ON)	32°C
Outdoor temperature	Thermo judgment (OFF)	33°C

Table 2 Compressor rpm

Calculated compressor rpm	Temperature difference (with shift value)
2500 min^{-1}	1.66°C
3000 min^{-1}	2.00°C
3500 min^{-1}	2.33°C
4000 min^{-1}	2.66°C

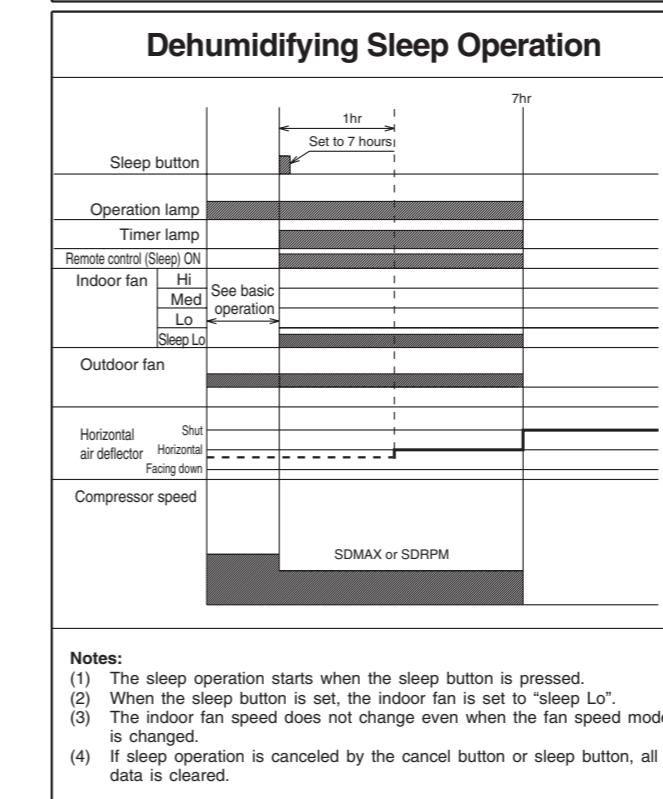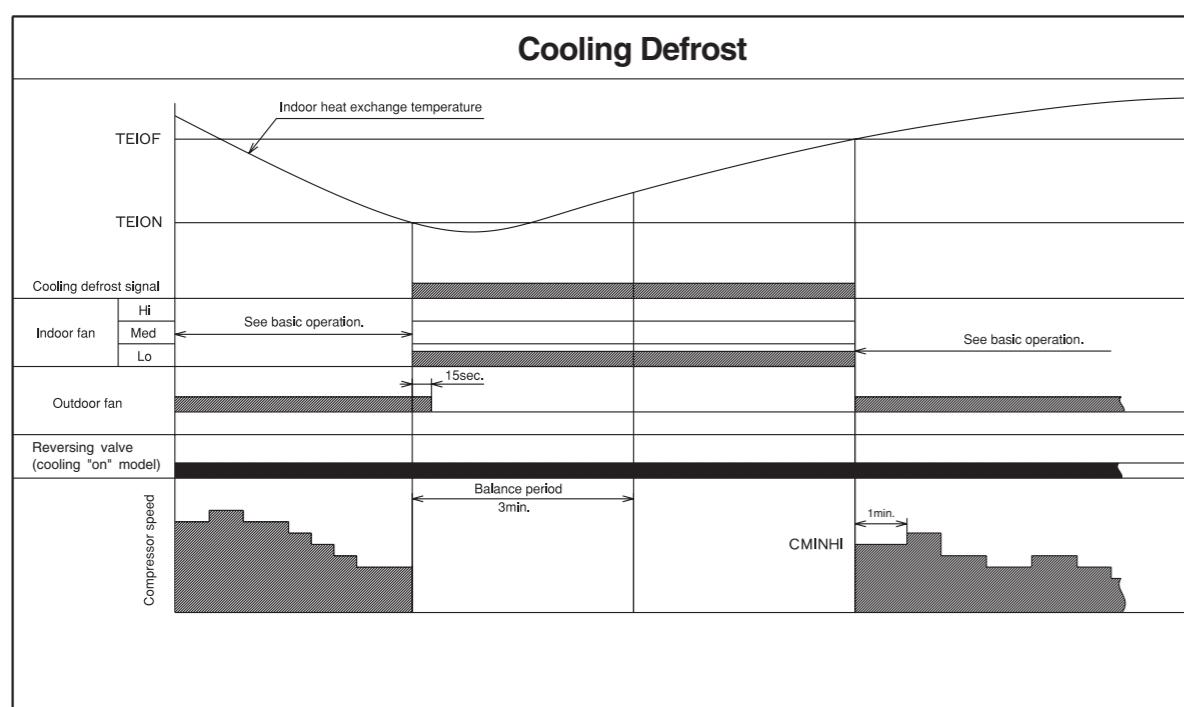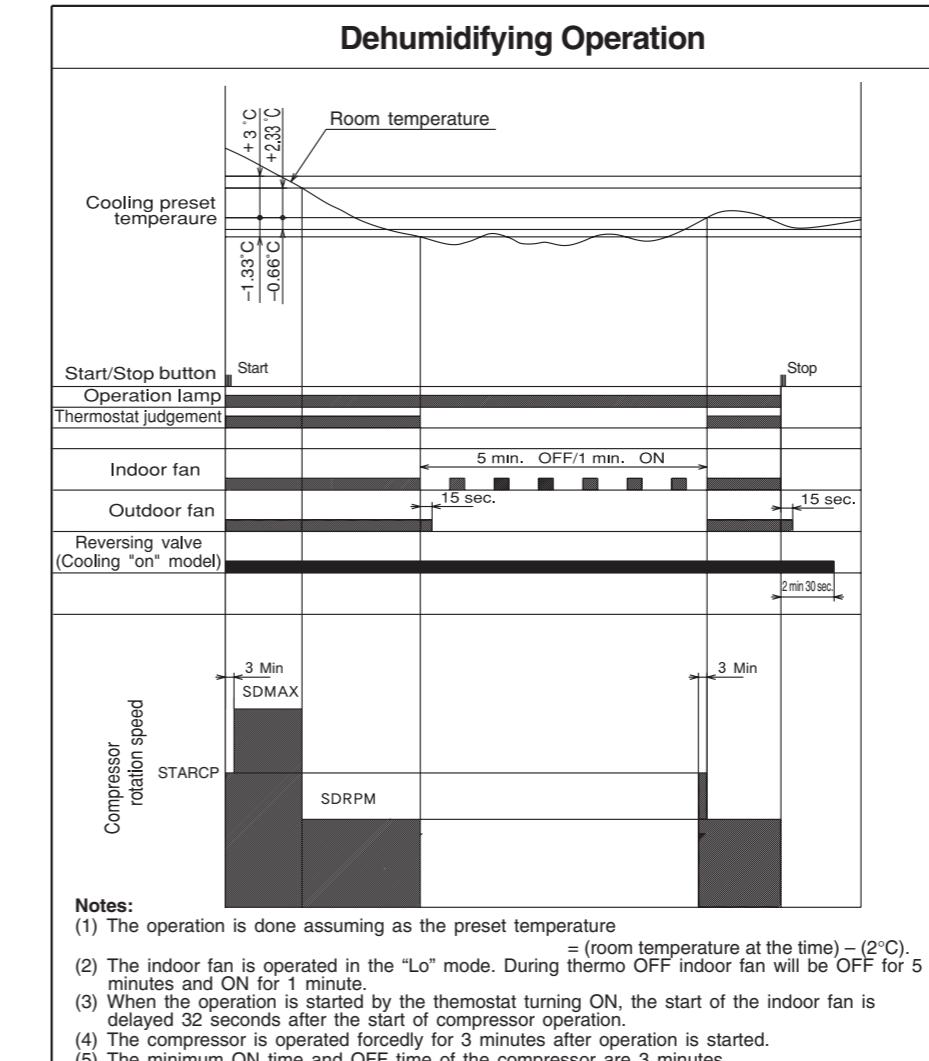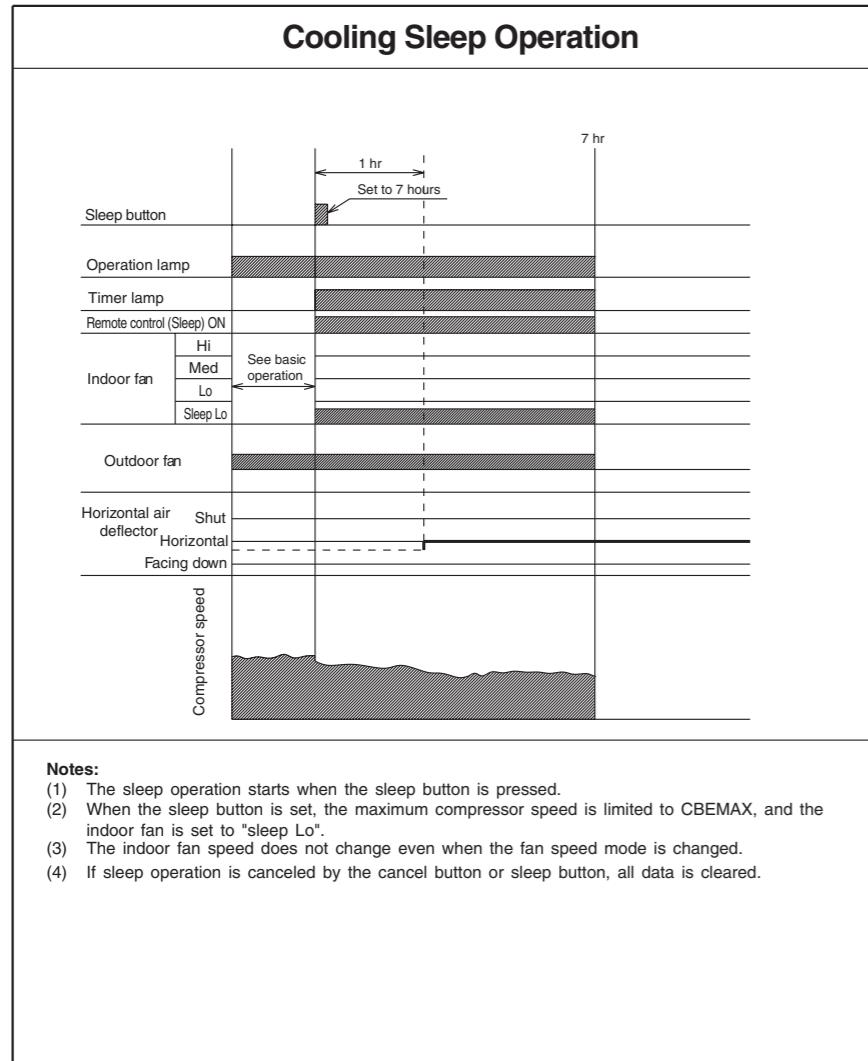



Basic Heating Operation




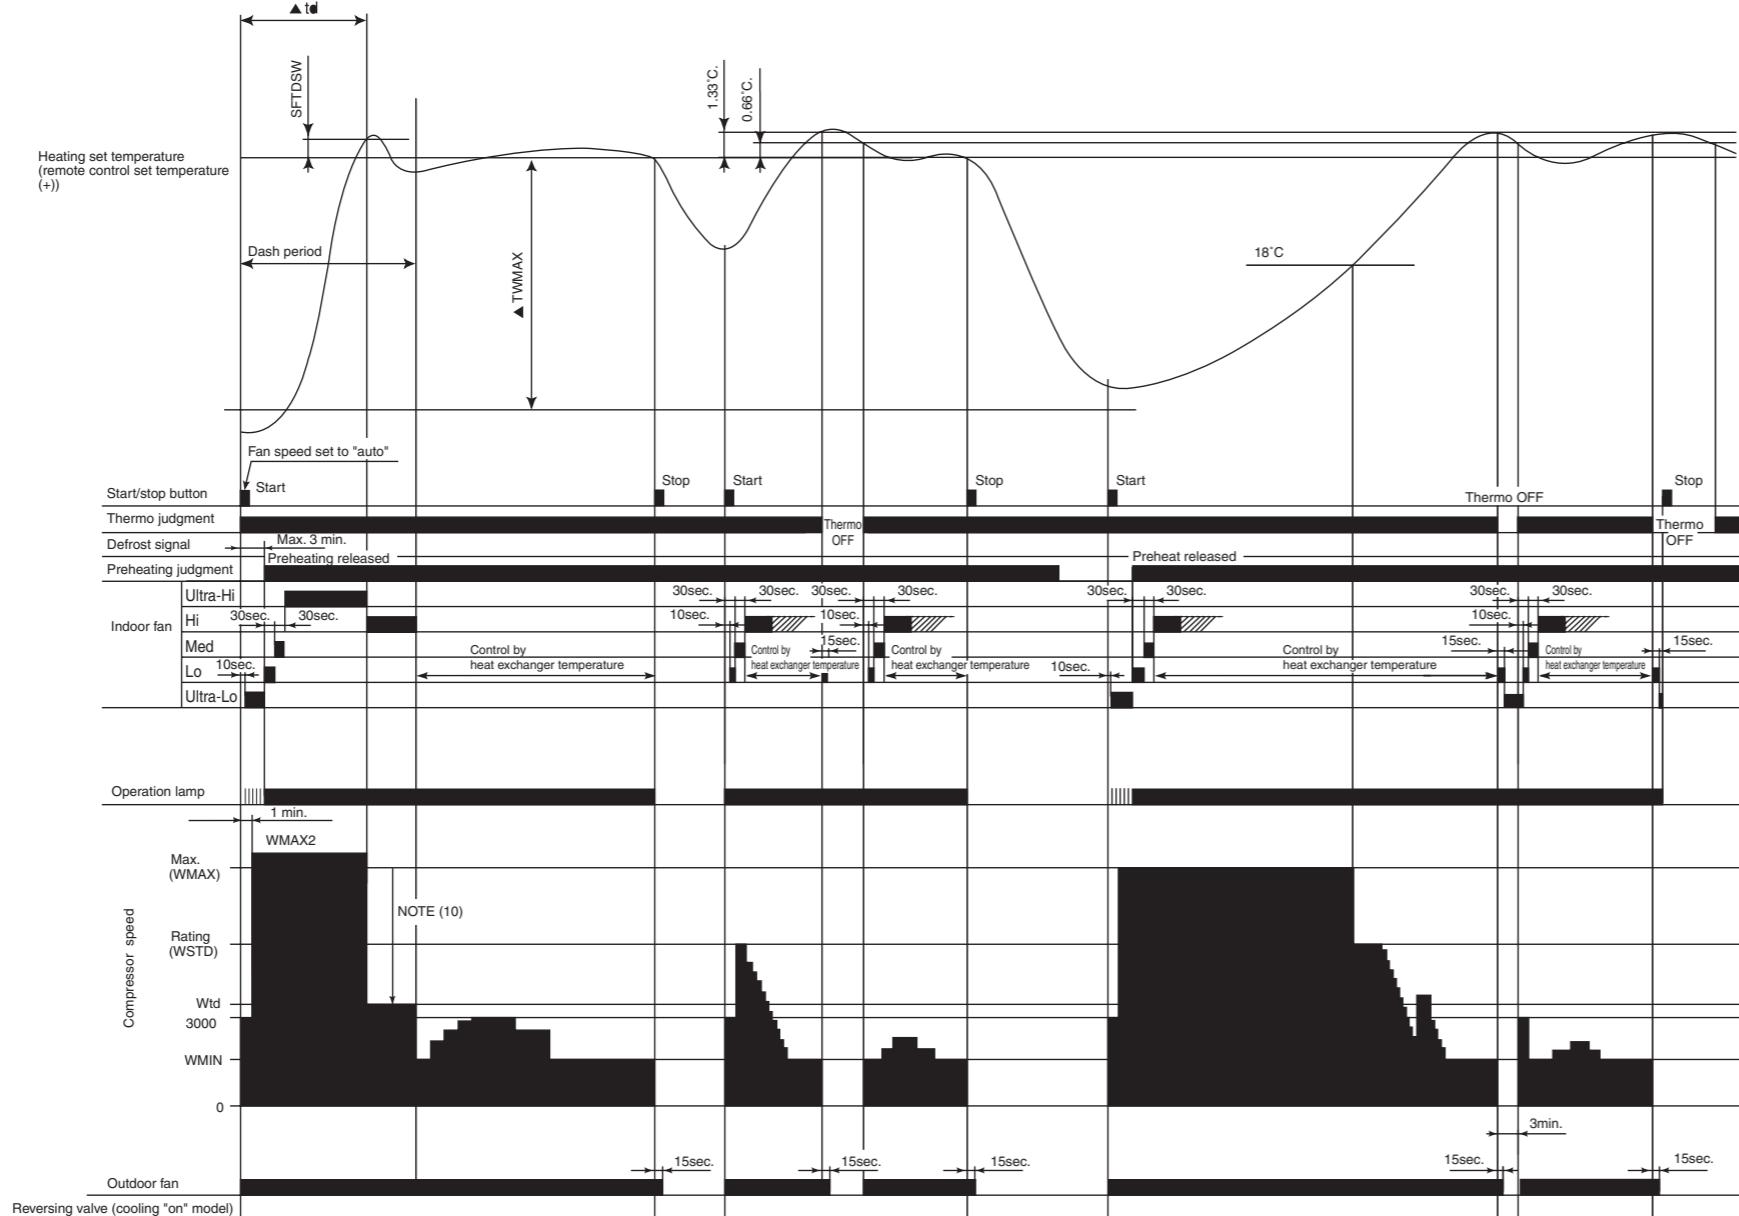


Table 3 Compressor rpm

Calculated compressor rpm	Temperature difference (with shift value)
1900 min ⁻¹	1.66°C
2400 min ⁻¹	2.00°C
2900 min ⁻¹	2.33°C
3400 min ⁻¹	2.66°C
3900 min ⁻¹	3.00°C
4400 min ⁻¹	3.33°C
4900 min ⁻¹	3.66°C

Notes:


- (1) Condition for entering into Hot Dashed mode. When fan set to "Hi" or "Auto mode" and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
- (2) Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off.
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if outdoor temperature is lower than 4°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 0.5 seconds "ON" and 0.5 second "OFF".
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- (8) When fan is set to "Lo", compressor rpm will be limited to WBEMAX. When fan is set to "Med", compressor rpm will be limited to WJKMAX.
- (9) In "Ultra-Lo" fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in "Ultra-Lo" mode. During Hotkeep or Defrost mode, fan will continue in "Ultra-Lo" mode.
- (10) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.

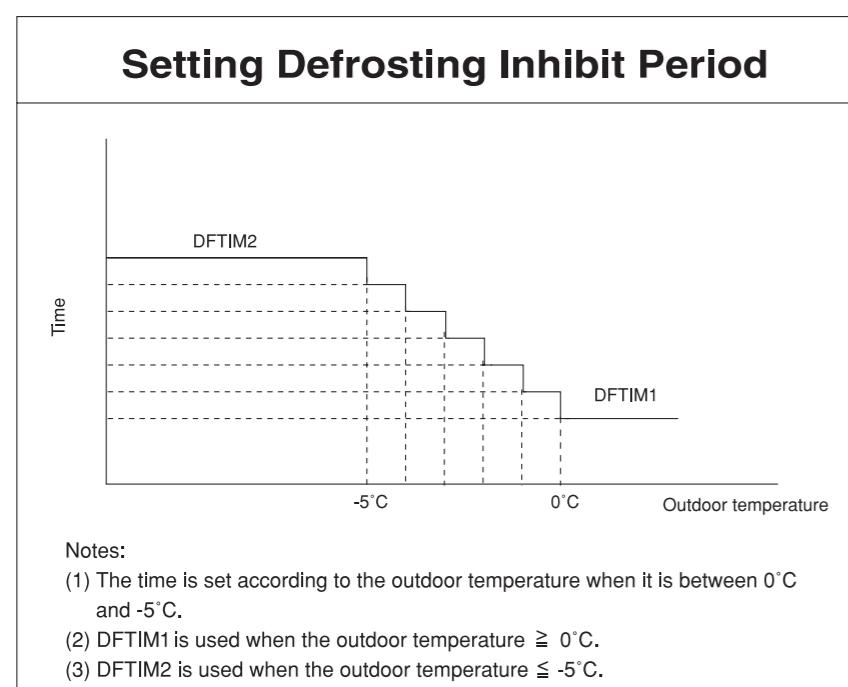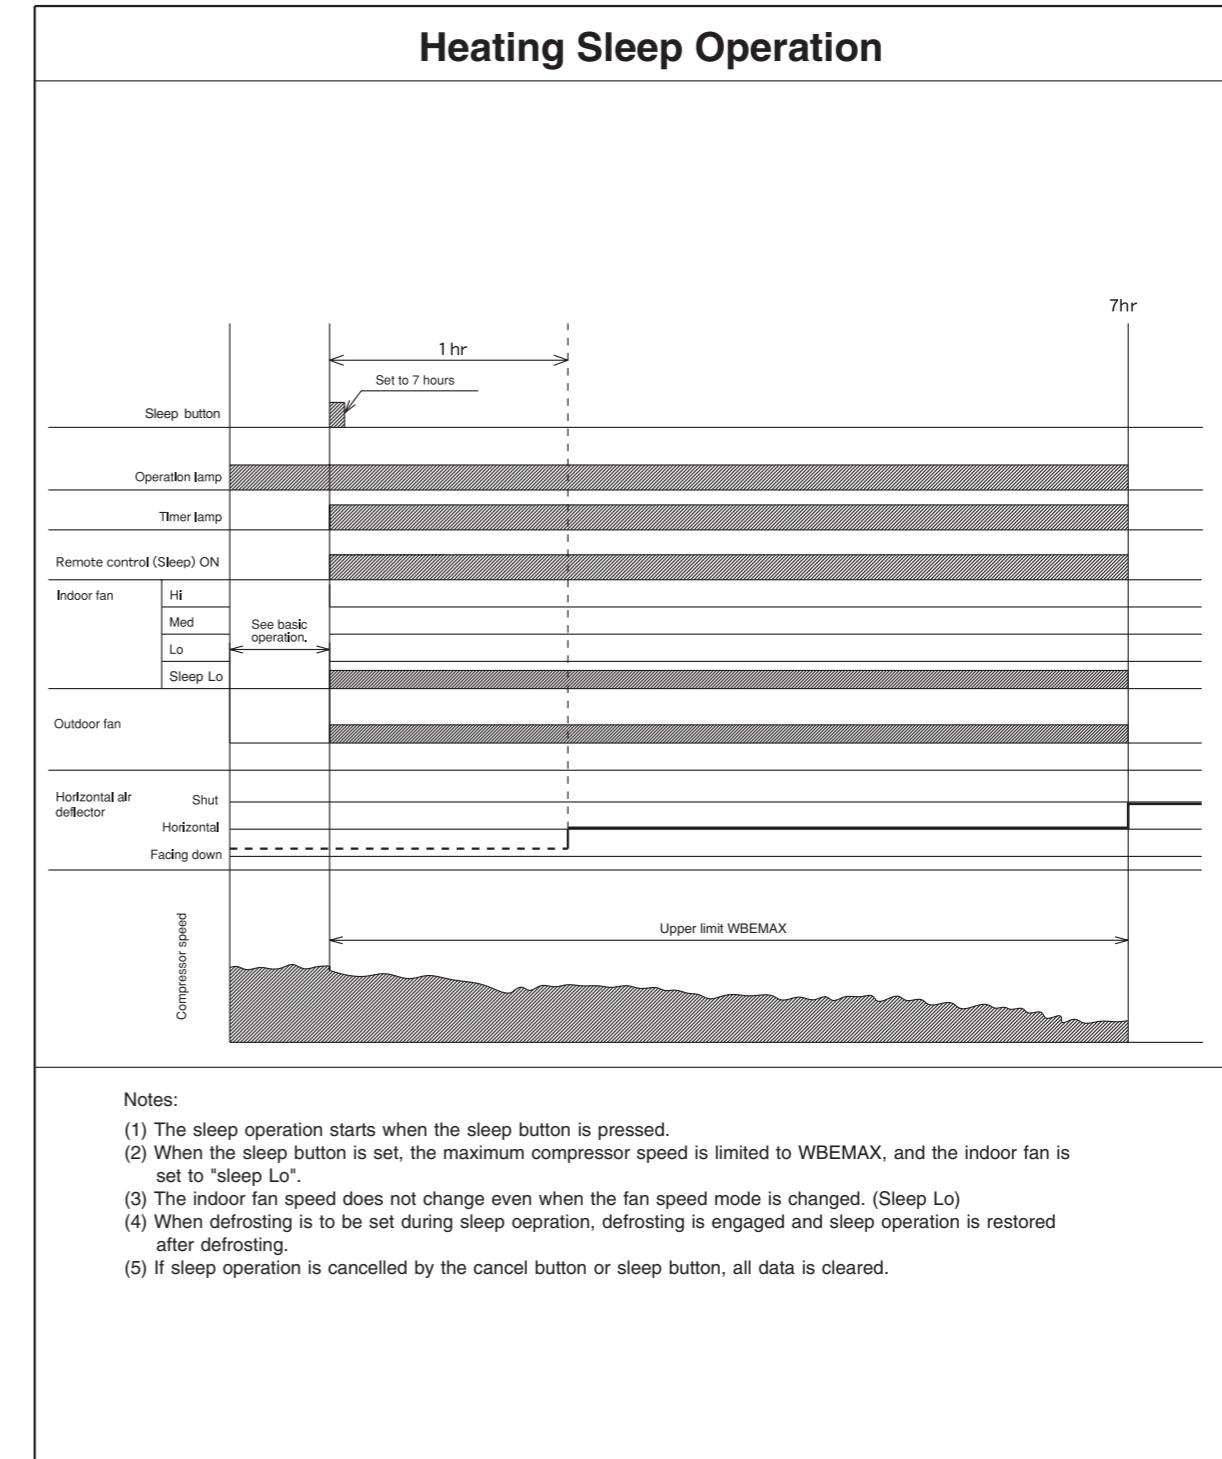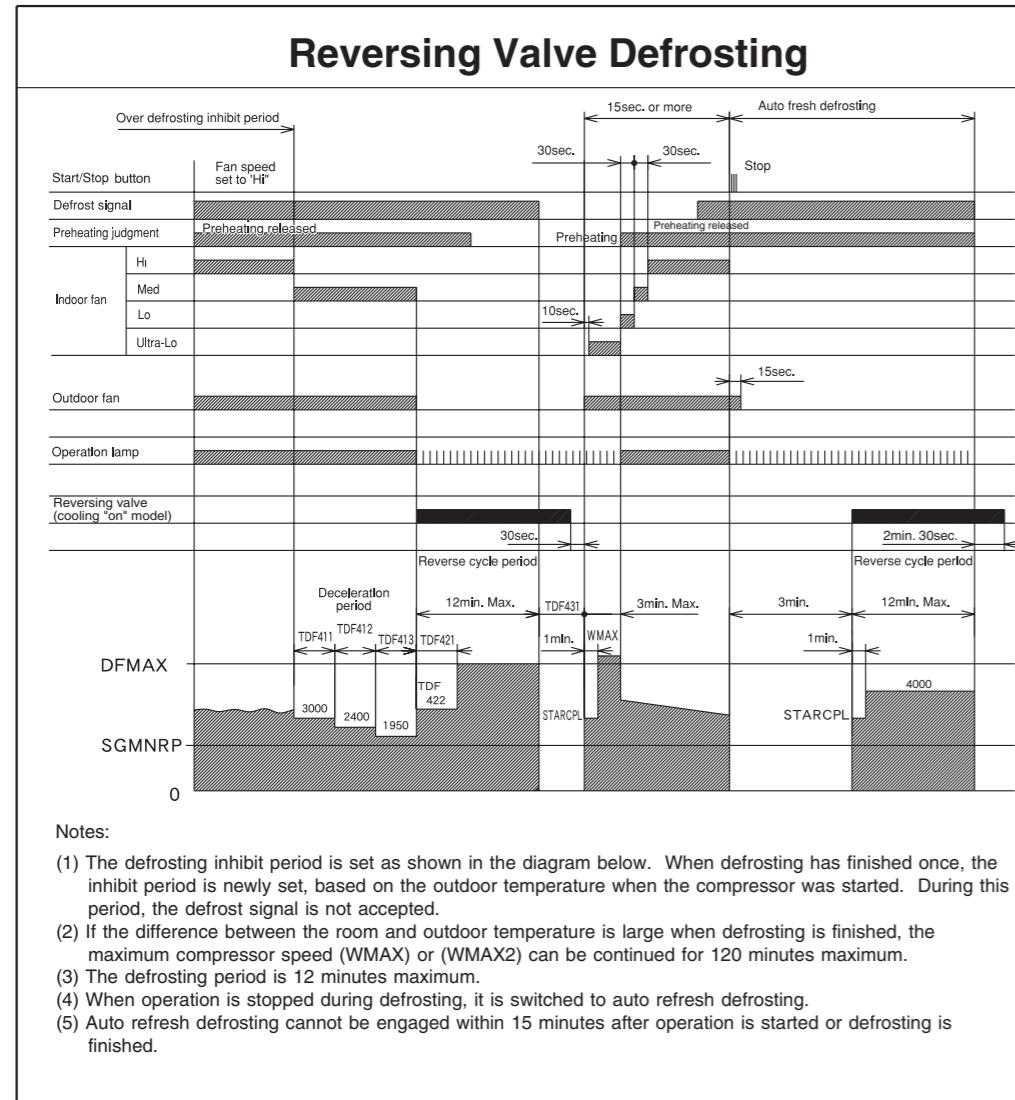



REFRIGERATING CYCLE DIAGRAM

MODEL RAS-25YH5 / RAC-25YH5
RAS-35YH5 / RAC-35YH5

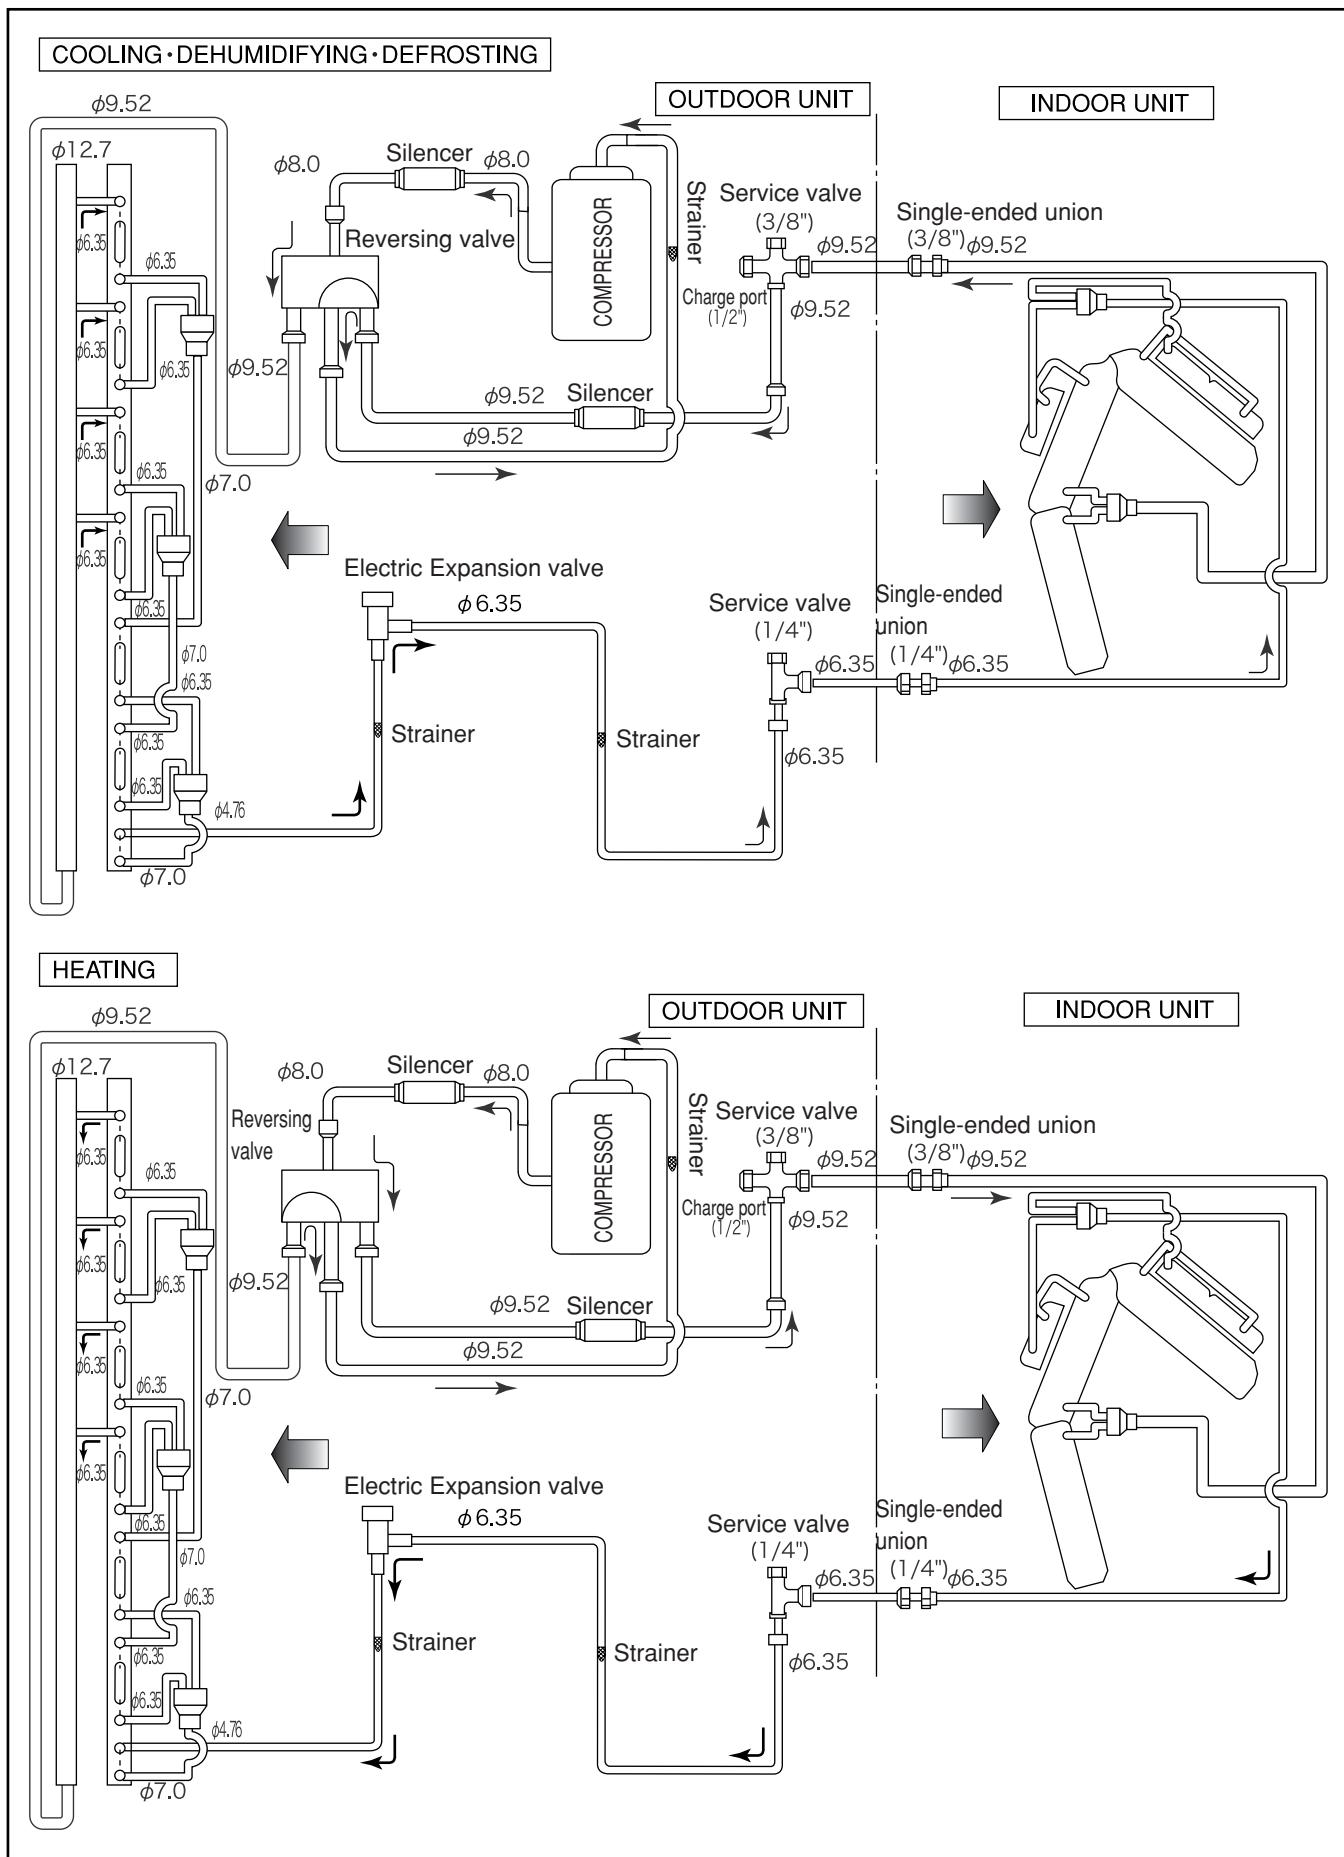



DESCRIPTION OF MAIN CIRCUIT OPERATION

MODEL RAS-25YH5, RAS-35YH5

1. Reset Circuit

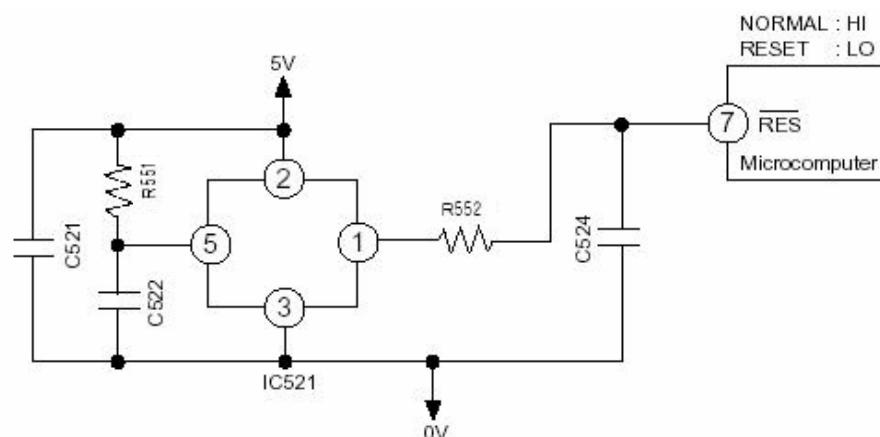


Fig. 1-1

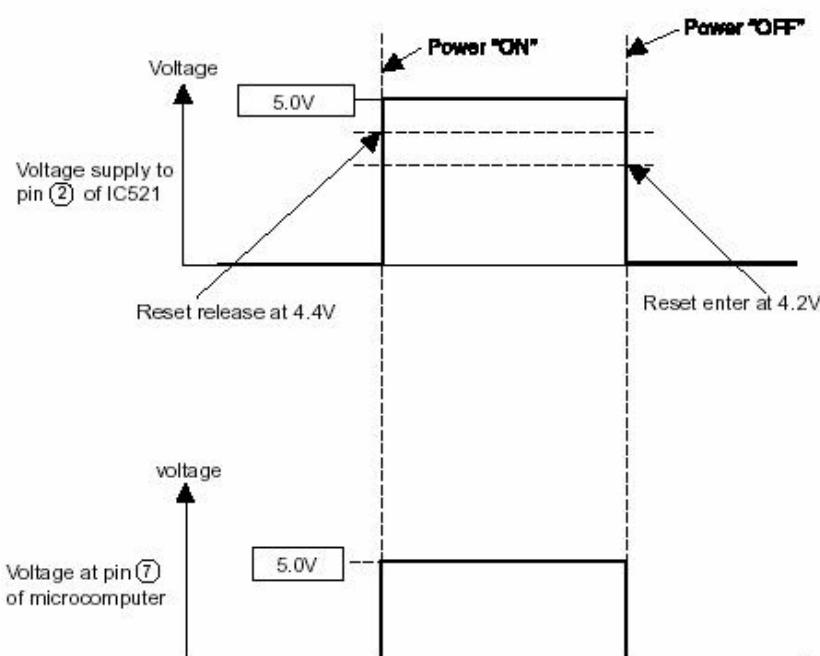


Fig. 1-2

The reset circuit initializes the microcomputer program when power is ON or OFF.
Low voltage at pin (7) resets the microcomputer and Hi activates the microcomputer.
When power "ON" 5V voltage rises and reaches 4.4V, pin (1) of IC521 is set to "Hi". At this time the microcomputer starts operation.
When power "OFF" voltage drops and reaches 4.2V, pin (1) of IC521 is set to "Low". This will RESET the microcomputer.



2. Receiver Circuit

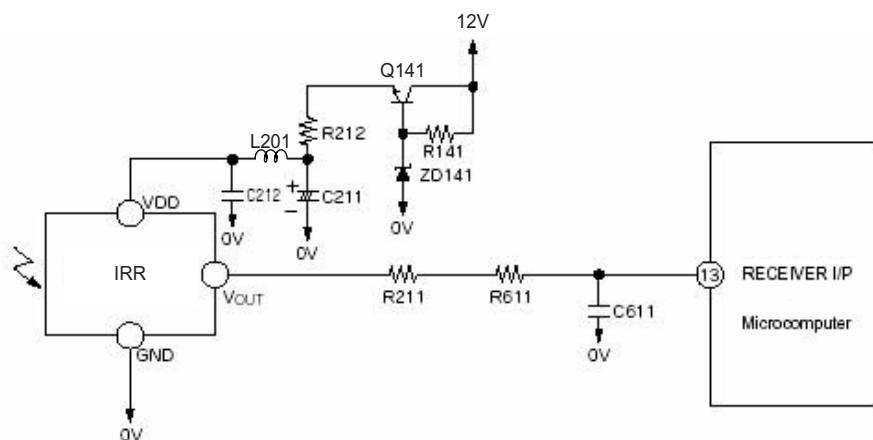


Fig.2-1

IRR (light receiver unit) receives the infrared signal from the wireless remote controller. The receiver amplifies and shapes the signal and outputs it.

3. Buzzer Circuit

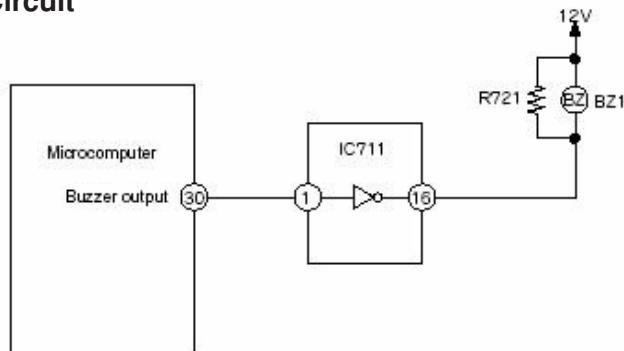


Fig.3-1 Buzzer circuit

When the buzzer sounds, an approx 3.9kHz square signal is output from buzzer output pin (30) of the microcomputer. After the amplitude of this signal has been set to 12Vp-p by IC711, it is applied to the buzzer. The piezoelectric element in the buzzer oscillates to generate the buzzer's sound.

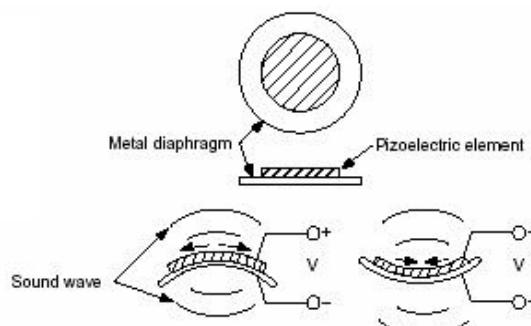


Fig. 3-2 Buzzer Operation



4. Auto Sweep Motor Circuit

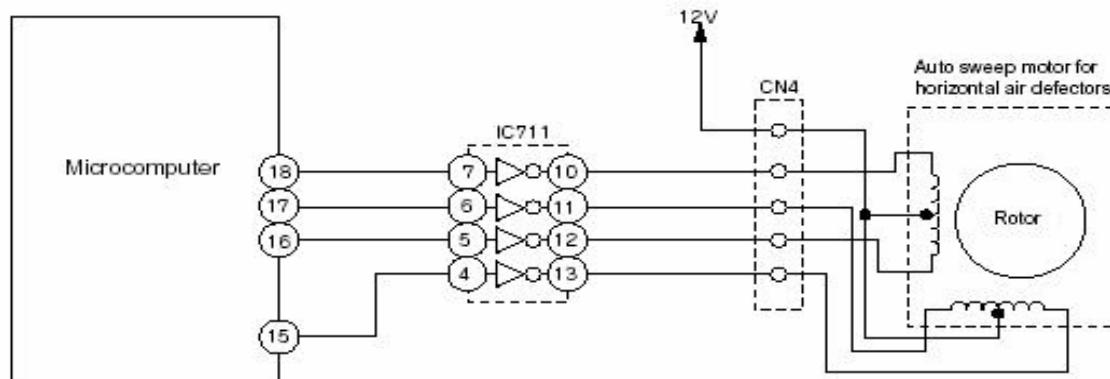


Fig.4-1

Fig. 4-1 shows the Auto sweep motor drive circuit; the signals shown in Fig.4-2 are output from pin (15) ~ (18) of microcomputer.

Micro computer pins	Step width :10ms							
Horizontal air deflectors	1	2	3	4	5	6	7	8
(15)								
(16)								
(17)								
(18)								

Fig.4-2 Microcomputer Output Signals

As the microcomputer's outputs change as shown in Fig.4-2, the coils of the auto sweep motor is excited to turn the rotor. Table 4-1 shows the rotation angle of horizontal air deflectors.

Table 4-1 Auto sweep Motor Rotation

	Rotation angle per step (°)	Time per step (ms.)
Horizontal air deflectors	0.0882	10



5. Initial Setting Circuit (IC401)

- When power is supplied, the microcomputer reads the data in IC401 or IC402 (E²PROM) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.
- Data of self-diagnosis mode is stored in IC401 or IC402; data will not be erased even when power is turned off.

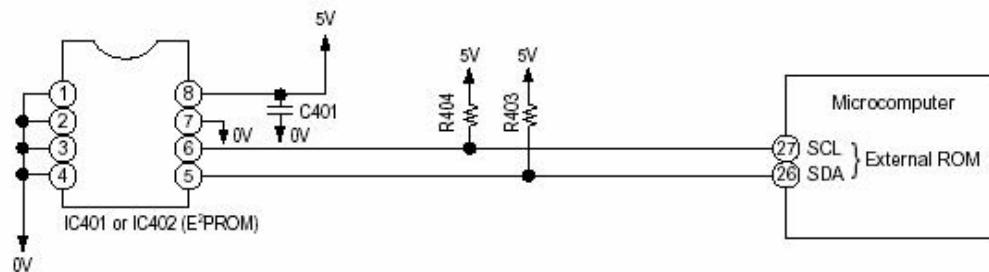


Fig. 5-1

6. Power Supply

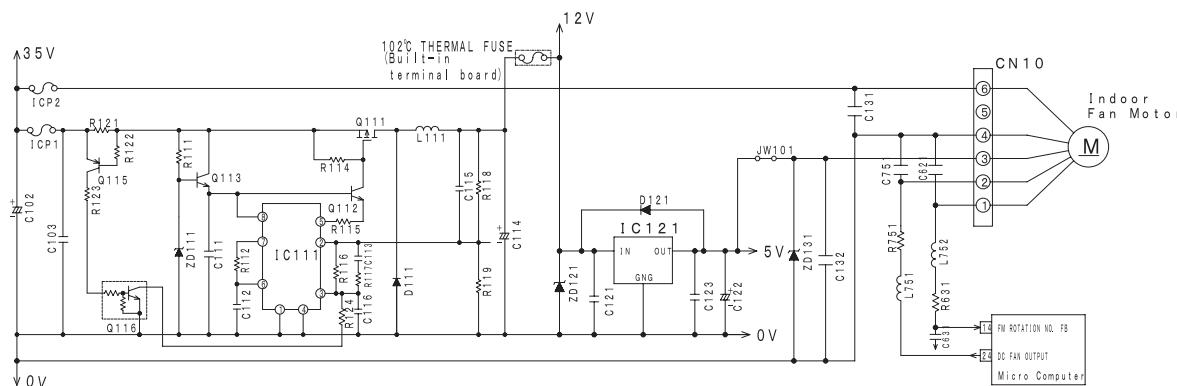


Fig. 6-1

First, 35V power which operates the indoor unit is generated by the power source section of the outdoor unit and supplied to the indoor unit through the C and D lines of the connecting cable.

Second, use the DC/DC converter and the 35 V power supply from the outdoor unit to generate 12 V control power, which drives the stepping motor during the operation.

In addition, use the regulator IC 121 to generate 5 V power required for driving the micro computer and controlling fan motor.

If the terminal block was overheated due to a connecting cable improper connection, the thermal fuse built in the terminal block will burn to shut off the 12 V line and stop the operation of the indoor unit. Then, the outdoor unit cannot be communicated with the indoor unit and a communication error occurs (the outdoor LD301 will blink 9 times), stop all operations.



7. Fan Motor Drive Circuit

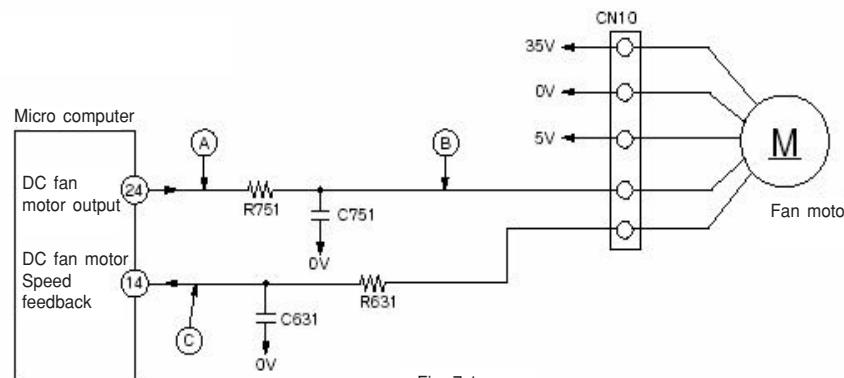


Fig. 7-1

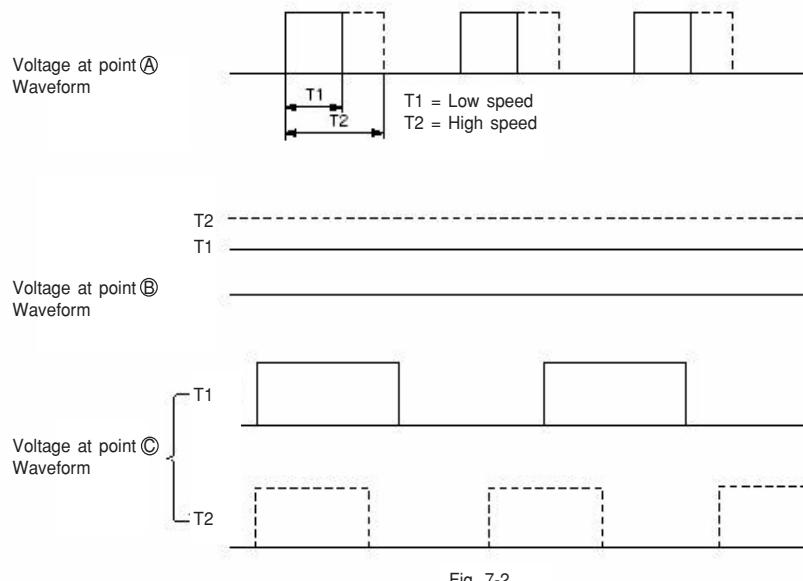


Fig. 7-2

- For the point (A), 15.7 kHz PWM pulse will be output from the pin (24) on the micro computer as shown in Fig. 7-2. The pulse range will vary with different command speed.
 - The pulse is converted into the analog voltage by the R751 and C751 and applied to the fan motor as the speed command voltage.
- Fig. 7-3 shows the relation between the voltage at the point B and the speed. (Some differences will occur due to the condition of the unit.)
- The fan motor outputs the feedback pulse of the speed, which is input into the pin (14) on the micro computer. This pulse is equivalent to a frequency of 12/60 speed. (Example: $1000 \text{ min}^{-1} \times 12/60 = 200 \text{ Hz}$)
The micro computer monitors the frequency and adjusts the output pulse range of the pin (24) so as to keep the command speed.
 - If the feedback pulse is 100 min⁻¹ or less due to a locked fan motor or failure, the fan output will be stopped temporarily as fan lock error. After 10 seconds, restart the output of the pulse. If fan lock error is detected twice within 30 minutes, all units are stopped and the unit will come in the failure mode. (The timer lamp will blink 10 times.)

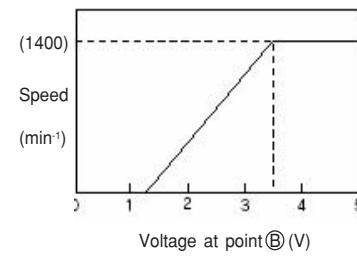


Fig. 7-3



■ RAC-25YH5, 35YH5

1. The electrical parts for the outdoor unit is composed of two P.W.B (a power P.W.B. and main P.W.B.) and a harmonics improvement circuit as shown in Fig. 1-1.

- Main P.W.B

This P.W.B. is equipped with the rectification diode, DC fan motor control circuit and the circuits around the micro computer which take various controls.

- POWER P.W.B.

This P.W.B. is equipped with the noise filter, ICP power circuit, interface circuit, smoothing capacitor, expansion valve control circuit and four-way valve control circuit.

- HARMONICS IMPROVEMENT CIRCUIT

This circuit is composed of the capacitor at the bottom of the electrical parts box and two reactors attached to the BULKHEAD.

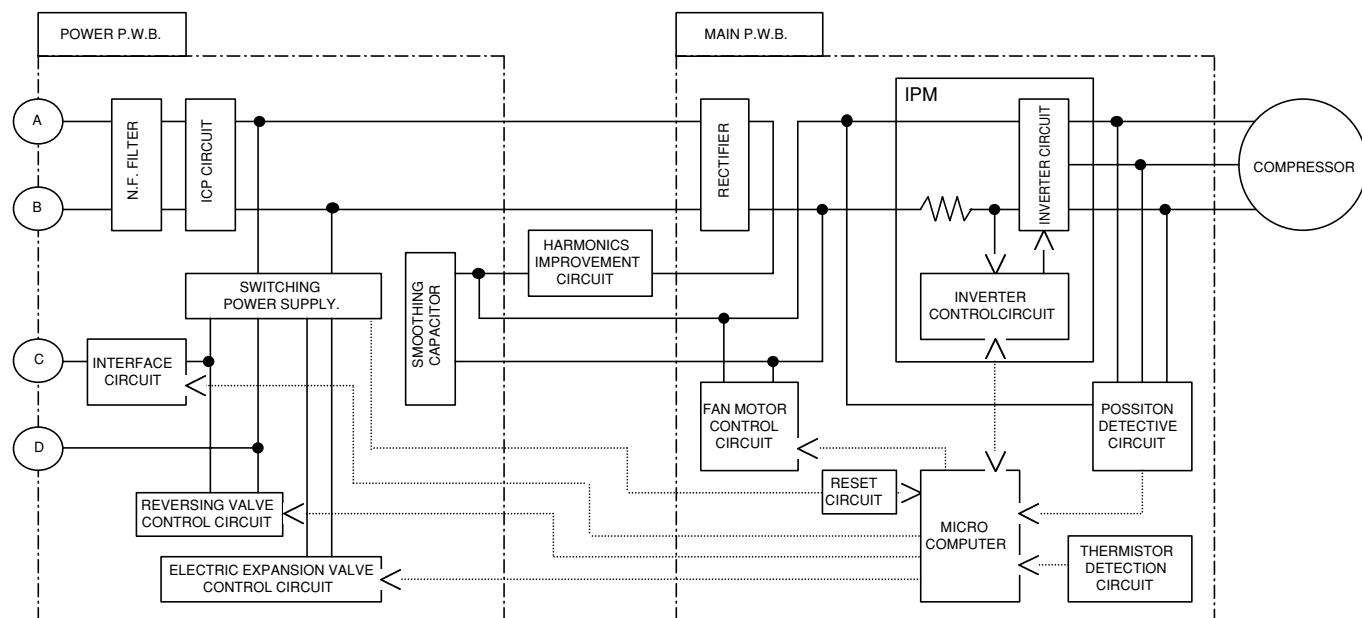


FIG1—1



2. Power circuit

This circuit is to convert the power from AC which is provided from the terminal A and B to DC voltage And produces an AC current which does not exceed the harmonic amplitude limit of the IEC61000-3-2. When the compressor is stopped, the AC voltage becomes about 300 V and while the compressor operates, it is about 280 V.

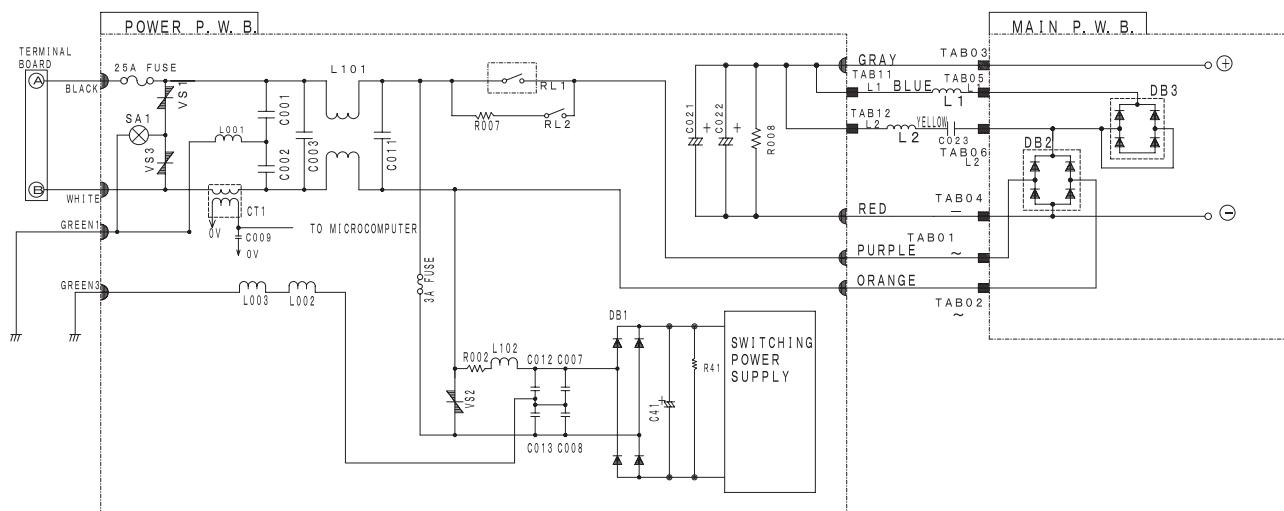


FIG2-1

Main parts

(1) DB2

The DB2 rectifies the AC voltage.

The possible causes for the DB2 failure are as follows. The 25 A fuse may be blown out or the IPM for the main P.W.B. may have a failure. In such a case, check the 25 A fuse for blowout and replace the main P.W.B. if necessary.

(2) DB3, L1, C023 and L2

The DB3, L1, C023 and L2 shape waveform of the input current.

When the current runs through the L1 is taken for I₁ and the current runs through the L2 is taken for I₂ as shown in Fig. 2-2, I₁ becomes an input current to the capacitor which peak value was crushed by the L1 and I₂ becomes a resonance current which causes the LC resonance using the L2 and C023. By combining the I₁ and I₂, the input current from the main power shapes a waveform shown in the right side of Fig. 2-3, indicating that the waveform is similar to sine wave. The more the waveform is similar to the sine wave, the lower the harmonic current becomes.

If the C023 has any failure, the protection unit activates and the C023 is open mode. In such a case, replace the failed parts.

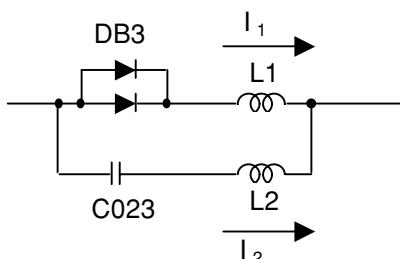


FIG2-2

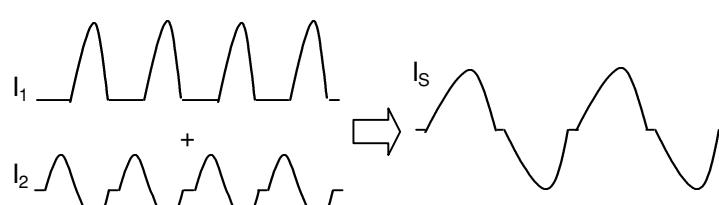


FIG2-3



(3) C021 and C022

This smoothes the voltage rectified for operating the compressor.

When the input voltage is taken for the sine wave as shown in the top of Fig. 2-4, it is rectified by the DB2 and becomes the waveform as shown in the middle of Fig. 2-4. After that, the voltage is smoothed by the C021 and C022, and becomes the waveform shown in the bottom of Fig. 2-4.

(4) DB1 and C41

The DB1 rectifies the input voltage and the C41 smoothes it for the control power supply.

If the units above have any failure, the control power supply won't operate. In such a case, replace the power P.W.B.

(5) C001 to C003, C011, L101, and L102

They absorb electrical noise generated during operation of compressor, and also absorb external noise entering from power line to protect electronic parts.

Be sure to connect the earth cable between the indoor unit and the outdoor unit. Otherwise, the noise filter circuit won't operate properly.

(6) SA1 and VS1 to VS3

These surge absorber and varistors absorb external power surge such as induced thunder.

Be sure to connect the earth cable between the indoor unit and the outdoor unit. Otherwise, the surge absorber and the varistors won't operate.

(7) R002 and R007

The resistor R002 protects the rush current when the power is turned on while the resistor R007 protects the rush current when the compressor starts.

When the R002 has any failure, the control power supply won't operate. When the R007 has any failure and a strong rush current is generated, the DB2, C021 or C022 may be damaged.

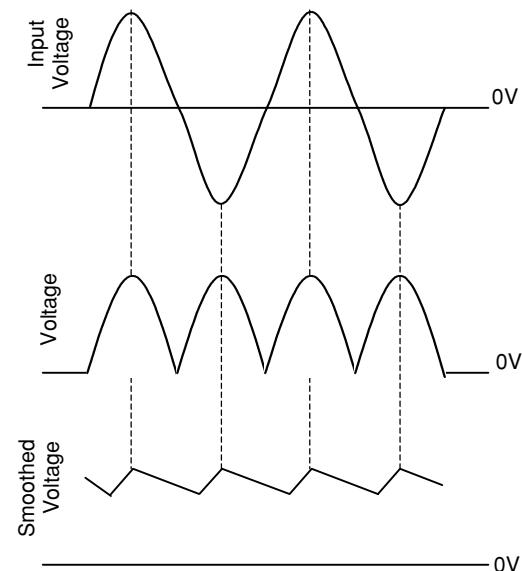


FIG2-4



3. Indoor/Outdoor Interface Circuit

The interface circuit superimposes an interface signal on the DC 35V line to perform communications between indoor and outdoor units. This circuit consists of a transmitting circuit which superimposes an interface signal transmit from the microcomputer on the DC 35V line and a circuit which detects the interface signal on the DC 35V line.

Communications are performed alternatively transmitting and receiving.

3-1 Communication signal from outdoor microcomputer to indoor microcomputer.

At first outdoor microcomputer will send a request signal (SDO) to indoor microcomputer.

38 KHz of carrier signal is generated and modulated by the request signal (SDO) from the outdoor microcomputer pin 11.

This signal is superimposed to DC 35V line via C801 and L801.

To prevent erroneous reception, the outdoor microcomputer is designed so that it cannot receive a signal while it is outputting a request signal.

The receiving circuit in the indoor unit consists of a comparator and transistor. The interface signal from the outdoor unit on the DC 35V line is supplied to C821, where DC components are eliminated, and is then shaped by the comparator. The shaped signal is detected by diode, amplified by amp, and output to pin 49 of the indoor microcomputer.

Fig. 3-2 shows the waveforms at each component when data is transferred from the outdoor microcomputer to the indoor microcomputer.

3-2 Communication signal from indoor microcomputer to outdoor microcomputer.

The request signal (SDO) generates by indoor microcomputer is output to pin 50, and amplifies by Q801.

I/F signal approx. 38 kHz is generated by comparator, then modulated by the signal from pin 50 of indoor microprocessor.


This modulated I/F signal is then amplified and superimposed to DC 35V line via L801 and C802 of indoor interface circuit.

Fig. 3-3 shows the waveforms at each component when data is transferred from outdoor microcomputer to indoor microcomputer.

The circuit operation of the outdoor receiving circuit is same as indoor receiving circuit.



Fig. 3-1 shows the interface circuit used for the indoor and outdoor microcomputers to communicate with each other.

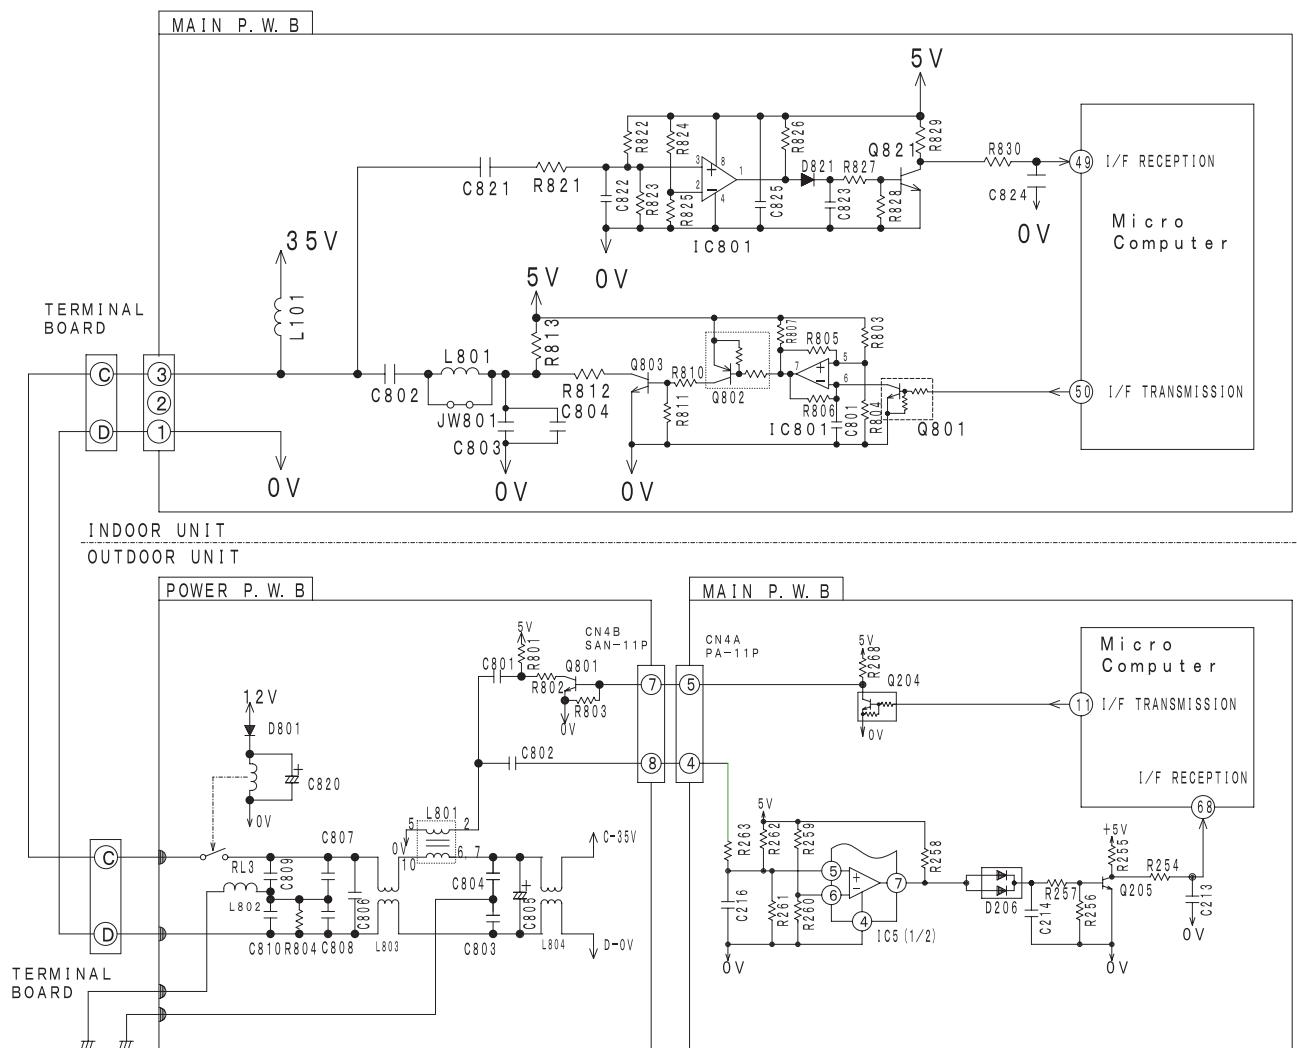

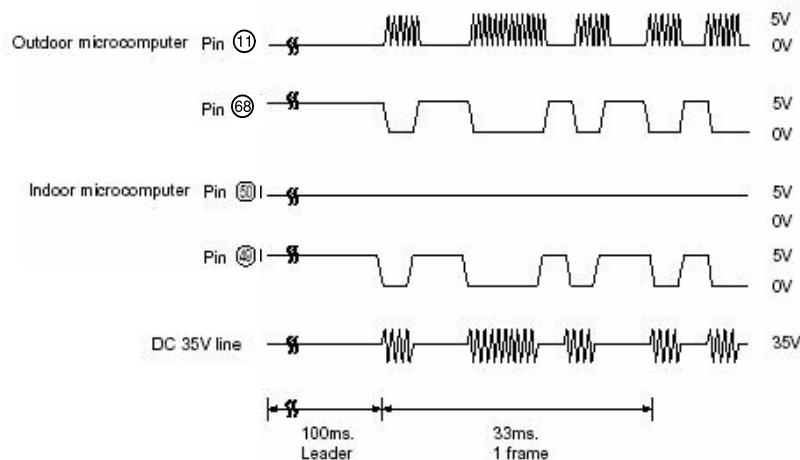


Fig. 3-2 Voltages Waveforms of indoor / Outdoor Microcomputers (Outdoor to Indoor Communications)

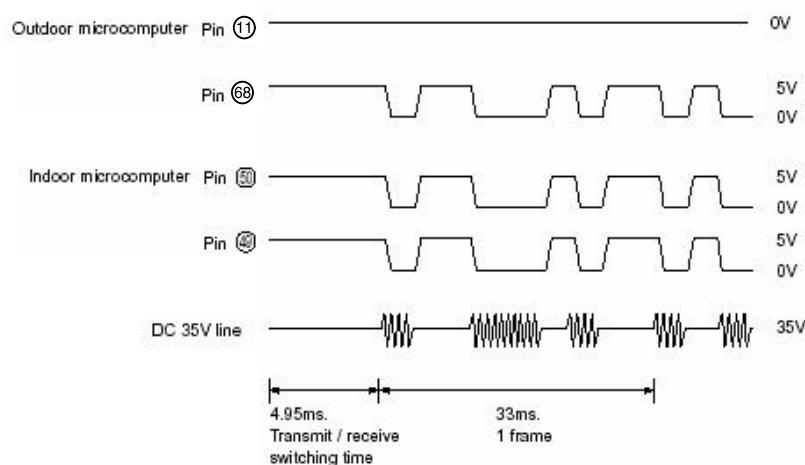


Fig. 3-3 Voltages Waveforms of indoor / Outdoor Microcomputers (Indoor to Outdoor Communications)

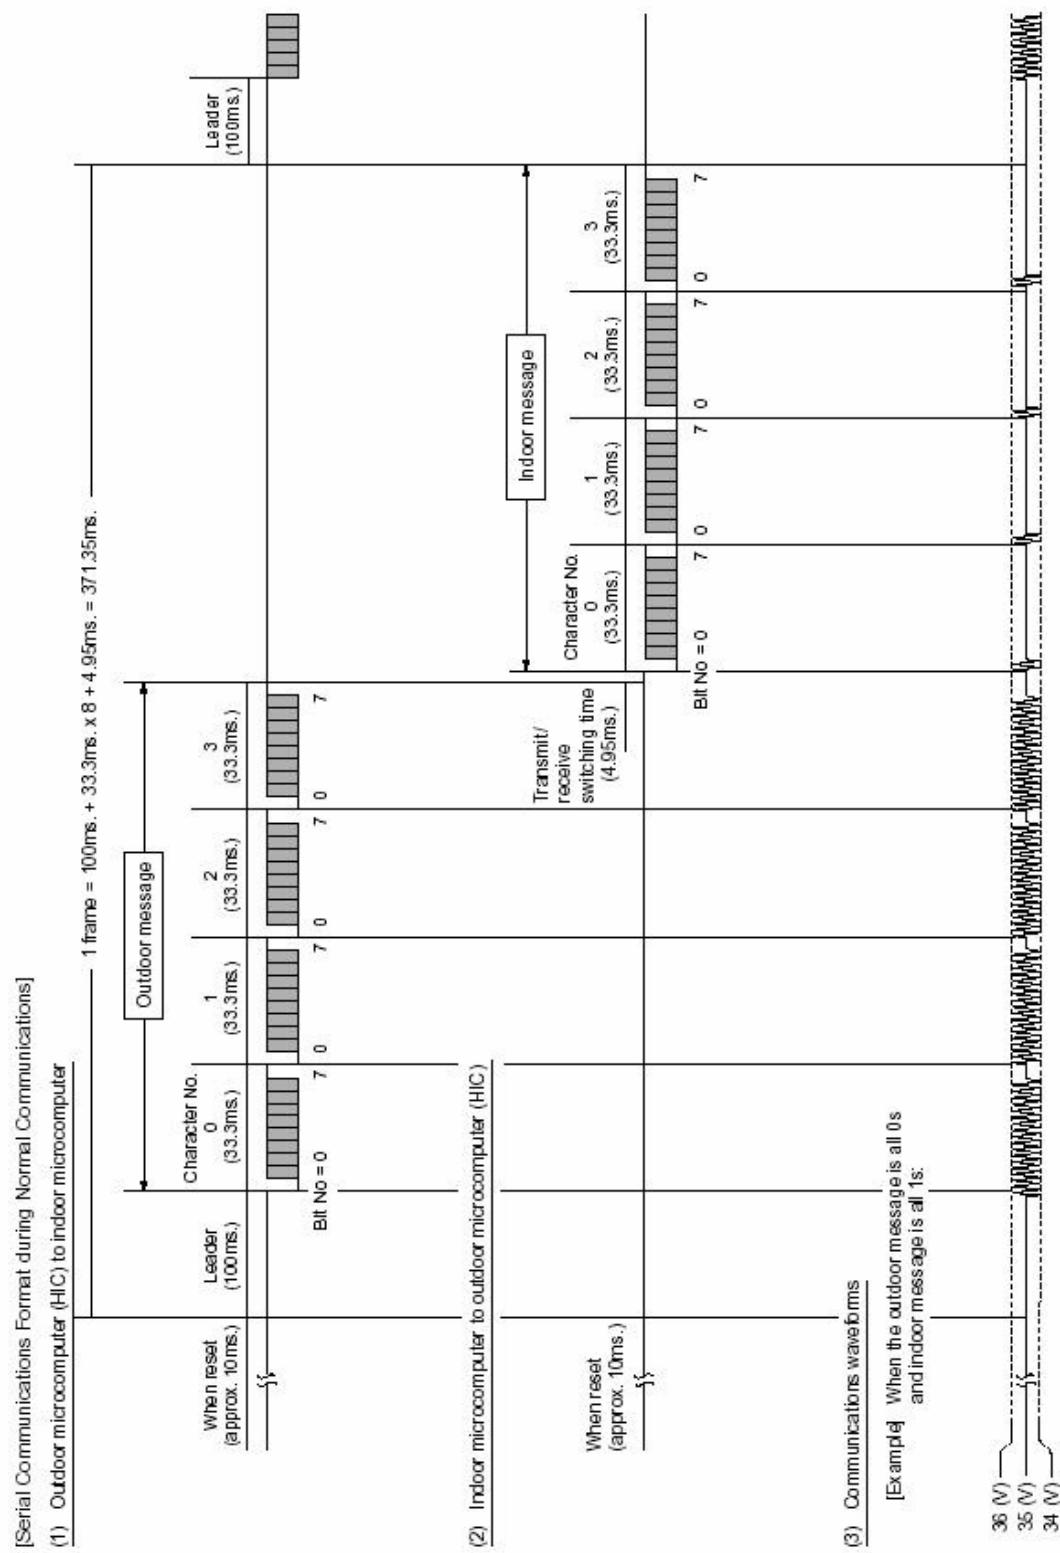


Fig. 3-4



[Serial Communications Data]

(1) Outdoor message

(2) Indoor message

Character No. 3	7	Compressor minimum rotation speed (4 MSB)	1	1	1	1	1	1	1	1
	6	Compressor minimum rotation speed (3)								
	5	Compressor minimum rotation speed (2)								
	4	Compressor minimum rotation speed (1)								
	3	Compressor minimum rotation speed (0 LSB)								
	2									
	1	OVL up								
	0	15/20(A)								
Character No. 2	7	Compressor command speed (7 MSB)	1	1	1	1	1	1	1	1
	6	Compressor command speed (6)								
	5	Compressor command speed (5)								
	4	Compressor command speed (4)								
	3	Compressor command speed (3)								
	2	Compressor command speed (2)								
	1	Compressor command speed (1)								
	0	Compressor command speed (0 LSB)								
Character No. 1		Compressor ON	1	0	0	0	0	0	0	0
	7	Reversing valve	1	0	0	0	0	0	0	0
	6	2-way valve	1	0	0	0	0	0	0	0
	5	Fan (2 MSB)	1	0	0	0	0	0	0	0
	4	Fan (1	1	0	0	0	0	0	0	0
	3	Fan (0 LSB)	0	0	0	0	0	0	0	0
	2									
	1									
Character No. 0	7	Capacity code (3 MSB)	1	0	0	0	0	0	0	0
	6	Capacity code (2)	1	0	0	0	0	0	0	0
	5	Capacity code (1)	1	0	0	0	0	0	0	0
	4	Capacity code (0 LSB)	1	0	0	0	0	0	0	0
	3	Indoor in-operation bit	1	0	0	0	0	0	0	0
	2	Operation mode (2 MSB)	1	0	0	0	0	0	0	0
	1	Operation mode (1)	0	0	0	0	0	0	0	0
	0	Operation mode (0 LSB)	0	0	0	0	0	0	0	0
Character No.		Contents					Data			
Bit No.										



4. IPM (Intelligent Power Module)

- Fig.4-1 shows the intelligent power module and its peripheral circuit. The three transistors on the positive e side are called the upper arm, and the three transistors on the negative d side, the lower arm.

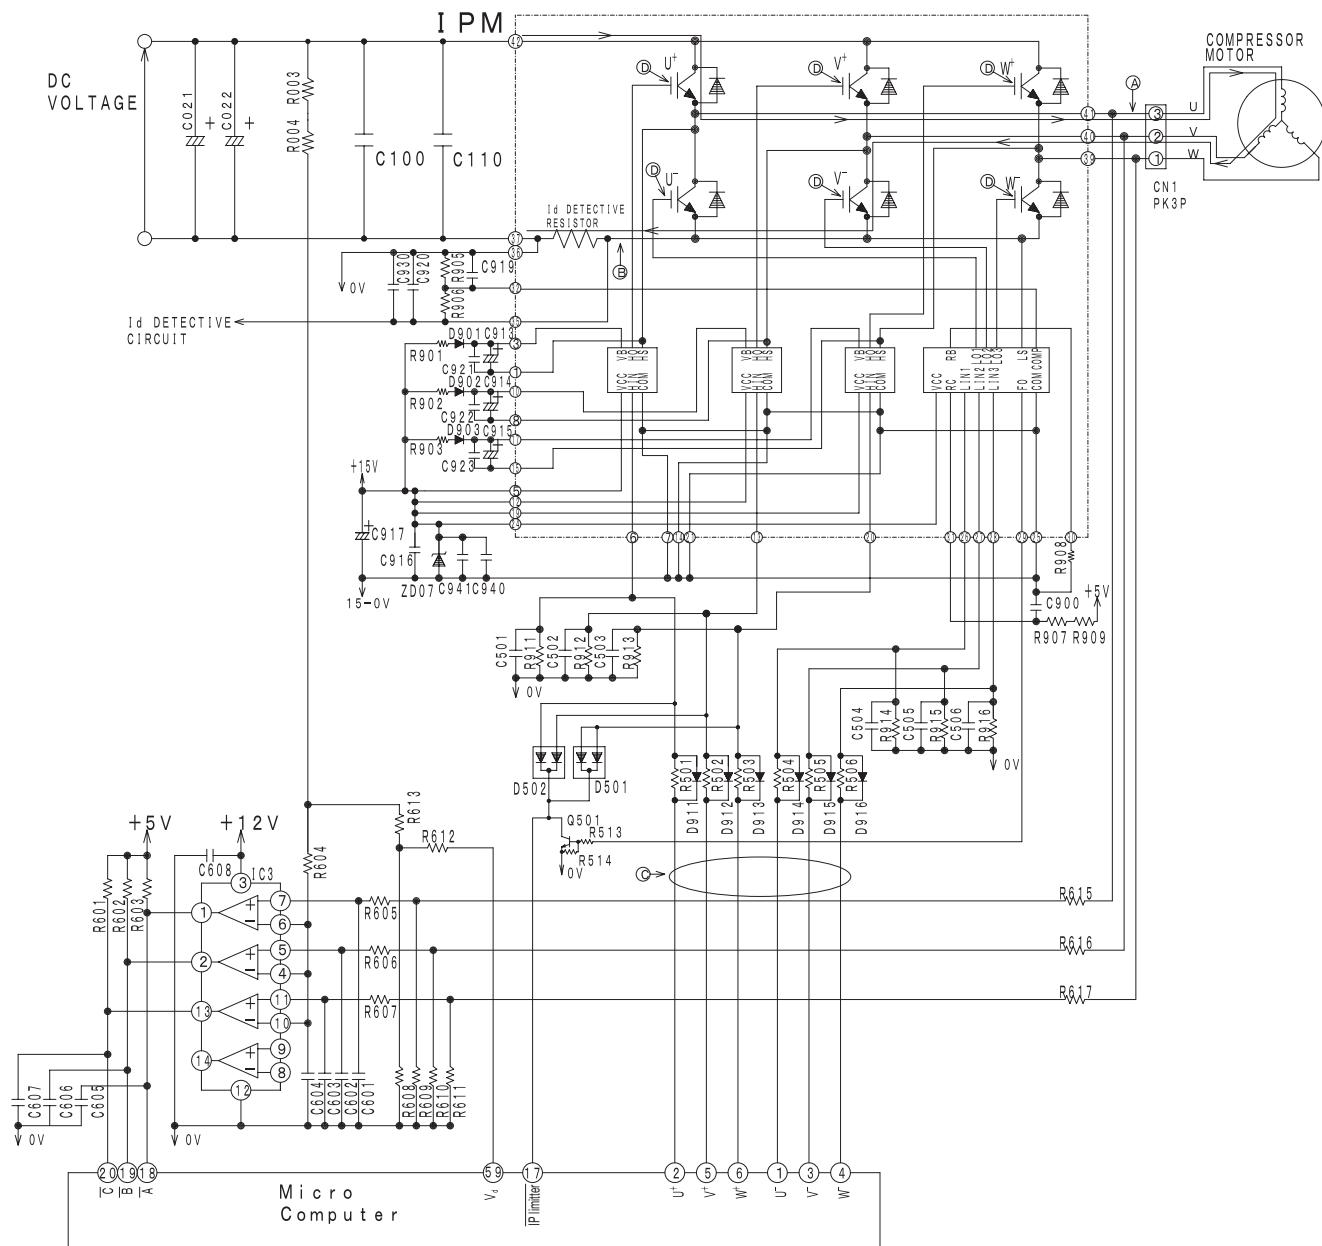


Fig. 4-1 Intelligent power module circuit (U^+ is ON, V is ON)



Intelligent power module switches power supply current according to position of the compressor motor rotor.

The switching order is as shown in Fig. 4-2.

At point ⑤: U+ is ON, V is ON (circuit in Fig. 4-1)

At point ⑥: U+ is chopped (OFF), V is ON (circuit in Fig. 4-4)

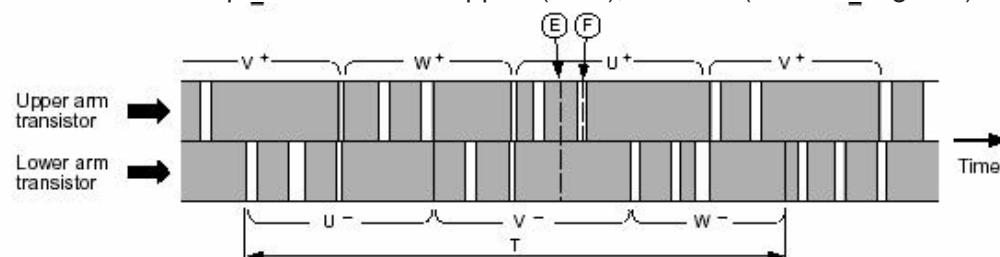


Fig. 4-2 Switching order of power module

Upper arm transistor is controlled to ON/OFF by 3.3kHz chopper signal. Rotation speed of the compressor is proportional to duty ratio (ON time/ ON time + OFF time) of this chopper signal.

Time T in Fig. 4-2 shows the switching period, and relation with rotation speed (N) of the compressor is shown by formula below;

$$N = 60/2 \times 1/T$$

Fig. 4-3 shows voltage waveform at each point shown in Figs. 4-1 and 4-4. First half of upper arm is chopper, second half is ON, and first half of lower arm is chopper, second half is ON.

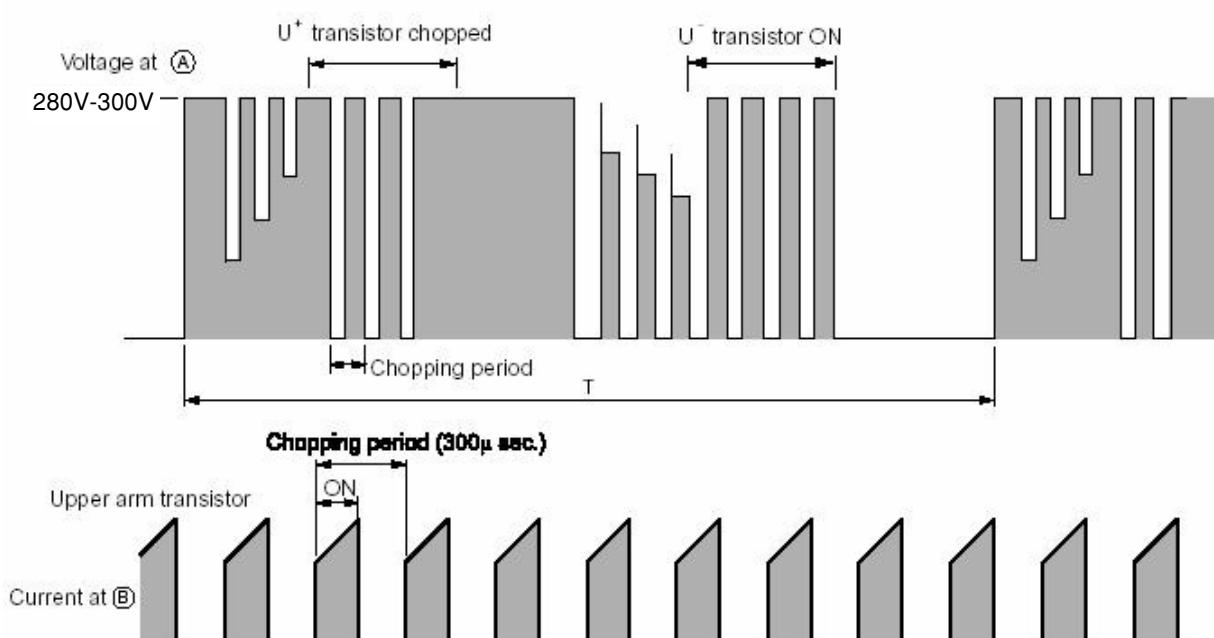


Fig. 4-3 Voltage waveform at each point

When power is supplied $U^+ \rightarrow V^-$, because of that U^+ is chopped, current flows as shown below;

- (1) When U^+ transistor is ON: U^+ transistor \rightarrow U coil \rightarrow V coil \rightarrow V^- transistor \rightarrow DC current detection resistor \rightarrow Point ⑧ (Fig. 4-1)
- (2) When U^+ transistor is OFF: (by inductance of motor coil) U coil \rightarrow V coil \rightarrow V^- transistor \rightarrow Return diode \rightarrow Point ⑧ (Fig. 4-4)

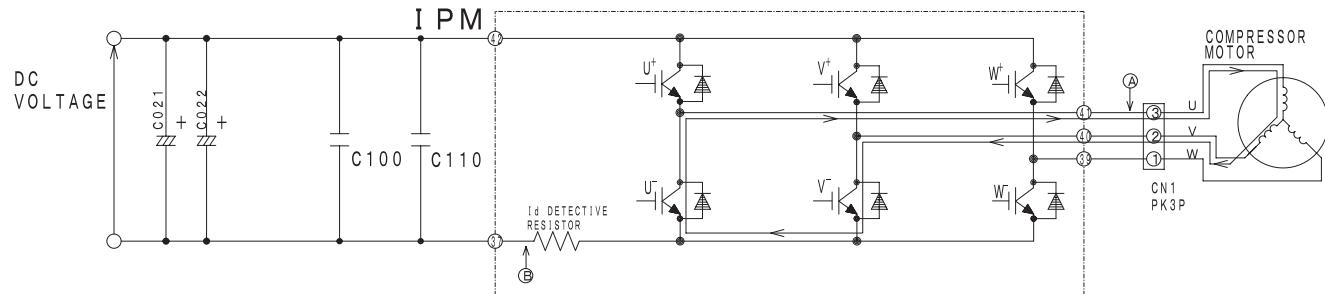


Fig. 4-4 Power module circuit (U^+ is ON, V^- is ON)

Since current flows at point (B) only when U^+ transistor is ON, the current waveform at point (B) becomes intermittent waveform as shown in Fig. 4-3. Since current at point (B) is approximately proportional to the input current of the air conditioner, input current is controlled by using DC current (I_d) detection resistor.

<Reference>

If power module is defected, self diagnosis lamps on the MAIN P.W.B. may indicate as shown below:

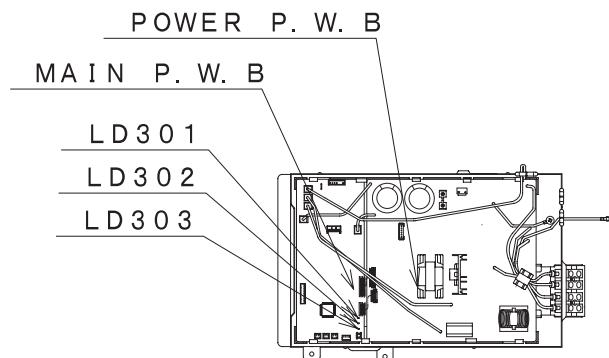


Table 4-1

Self-diagnosis	Self-diagnosis lamp and mode	
I_p (peak current cut)	LD301	Blinks 2 times
Abnormal low speed rotation	LD301	Blinks 3 times
Switching incomplete	LD301	Blinks 4 times

Fig. 4-5



- IPM drive circuit

The inverter driving device (IGBT) and the drive circuit are built in the IPM. The IPM receives the signal from the microcomputer and convert it to 0 – 15 V signal to drive the IGBT.

When the unit operates at low speed, a chopper signal is emitted from the micro computer as shown in Fig. 4-6. (0 to 5 V)

The signal is converted to 0 – 15 V at inside the IPM and transmitted to the gate of the transistor (IGBT) in each phase to drive the IGBT.

When abnormal peak current was detected while the inverter is driving, the IPM outputs the Fail signal immediately from the pin (29) and forces the lower arm transistor to shut off at the same time. In this step, the Q501 is turned on and the input signal of the upper arm is also shut off through the D501 and D502, so that all signals to the IGBT are shut off. This signal is also distributed to microcomputer (17 pin) as a Lo signal to stop the drive signal and blink the self diagnosis lamp as two time.

When the peak current is detected, the IPM keeps the lower arm off for about 4mS and the drive signal into stand-by state. 3 minutes after this state, the micro computer outputs the drive signal and restarts the operation.


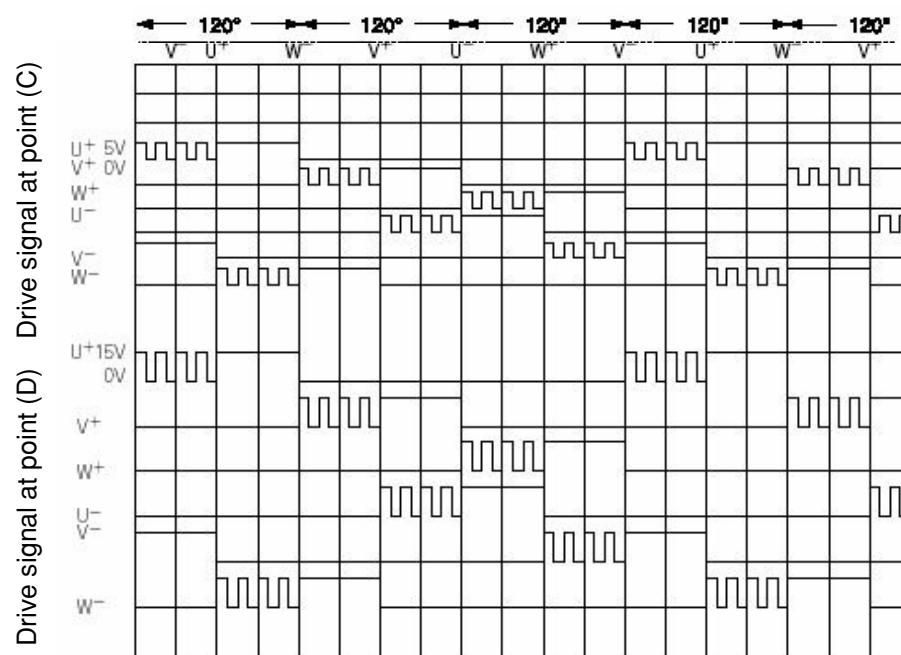


Fig. 4-6



5. Power Circuit for P.W.B

- Fig. 5-1 shows the power circuit for P.W.B.

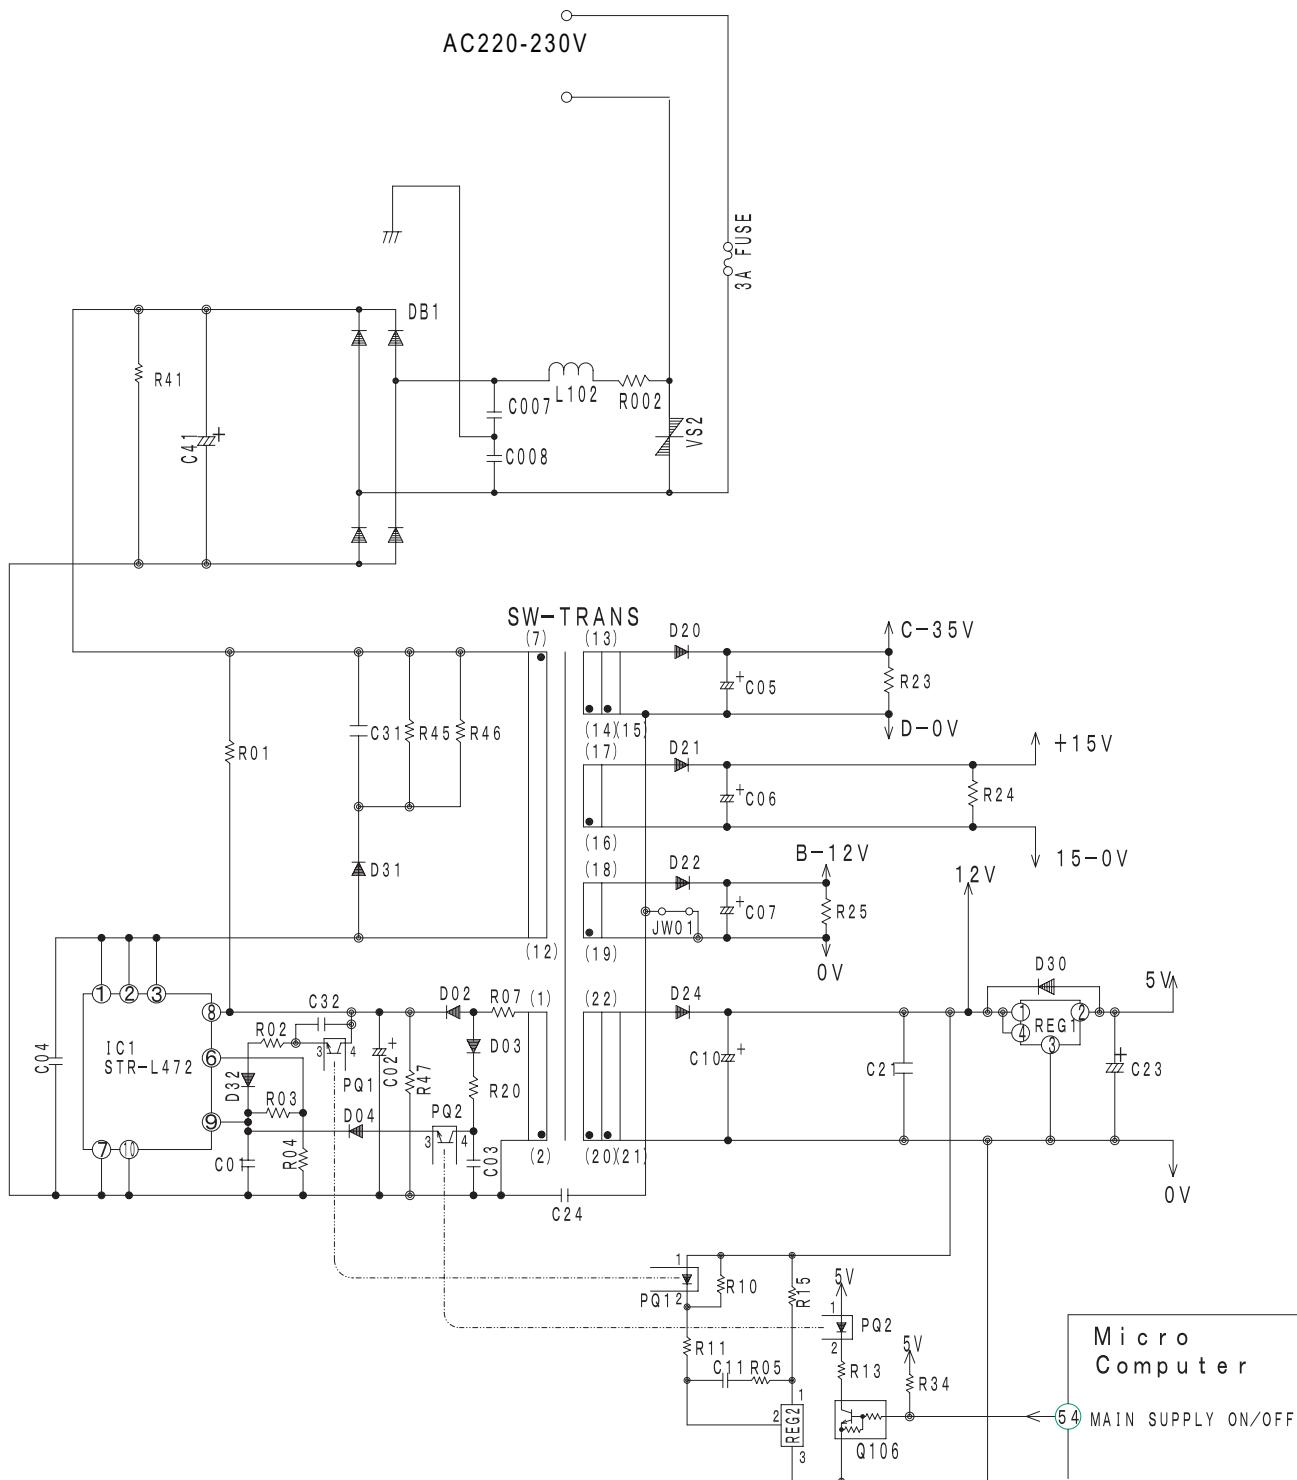

- In the power circuit for P.W.B., power supply for microcomputer, peripheral circuits, and IPM driver circuit and, as well as DC 35V, are produced by switching power circuit.
- Switching power circuit performs voltage conversion effectively by switching transistor IC1 to convert DC 330V voltage to high frequency of about 20kHz to 200kHz.



- The voltage specification of the power circuit is as follows.

<Check points>

Output	Voltage spec.	Main load	Measuring points		Potential failure modes
			+	-	
12V	11-13V	MAIN P.W.B. (CN3, CN4)	R701 ("12V" display) C21 ("12V" display)	R006 ("0V" display) J27, J30	The unit won't operate MAIN P.W.B. error
5V	4.5-6V	MAIN P.W.B. (CN3, CN4)	D30 anode ("5V" display) J25	R006 ("0V" display) J27, J30	The unit won't operate MAIN P.W.B. error
B-12V	11-16V	Expansion valve	R25 ("B-12V" display)	R25 ("B-0V" display)	LD301 blinks 5 times; Expansion valve error
15V	14-17V	DC fan motor (CN24) MAIN P.W.B. (CN3, CN4)	C06+ side	C06- side	LD301 blinks 3 times,
35V	33.5-38V	Indoor unit electrical parts (Terminal C,D) Reversing valve (CN2)	D20 cathode ("C-35V" display) Terminal C (blown line)	J5, j17 Terminal D (red line)	Indoor unit won't operate

- Check each voltage. If each voltage meets the voltage specification above, the power circuit is normal.
- If any error is found after checking, remove all loads and recheck each voltage.
If no error is found in this step, the power circuit is normal. Check the removed loads.
If any error is found in this step, the power circuit has any failure. Replace the power P.W.B.

* A short-circuited load may cause an output error not only in the load but also in the others. Be sure to check all outputs of the loads.

* Be sure to wait 15 minutes or more in order to discharge all the remaining voltage in the circuit to connect/disconnect the wiring, other wise, the components may be damaged.

- The failures of the loads are as follows.

Failed output	Possible causes	Criterion
35V	Reversed connection of the cable. Electrical part for the indoor unit has a failure. Short-circuited reversing valve	Connect the cable correctly. Remove the connection cable and measure the voltage. If the voltage is correct, check the electrical parts for the indoor unit. Remove the CN2 and measure the voltage. If the voltage is correct, check the reversing valve.
15V	DC fan motor error Main P.W.B. error	Remove the CN24 and measure the voltage. (connect the CN3.) If the voltage is correct, check the DC fan motor. Also, check the main P.W.B 1 A fuse for blow out in this step. Remove the CN3 and CN4 and meaure the voltage. If the voltage is correct, check the main P.W.B.
12V, 5V	Main P.W.B. error	Remove the CN3 and CN4 and meaure the voltage. If the voltage is correct, check the main P.W.B.



6. Microcomputer's Peripheral Circuits

6-1. Overload control circuit (OVL control circuit)

Overload control is to decrease the speed of the compressor and reduce the load when the load on the air conditioner increases to an overload state, in order to protect the compressor, electronic components and power breaker.

Overloads are judged by comparing the DC current level and set value

Fig.6-1 shows the overload control system configuration and Fig. 6-4 is a characteristic diagram on overload judgement values. There are two types of control which has named IS OVL and ID OVL. IS OVL is limiting the whole input of this room air conditioner system through the current sensor CT1 in order to keep the maximum rating of components by reading total operating current.

ID OVL is watching and limits the compressor current through the detection resistor, which is built in IPM in order to control the compressor reliability. Since the compressor reliability is related with its speed, the ID OVL value is also linked with the compressor speed. FIG6-2 shows an ID OVL limitation curve.

All of OVL operation values were programmed into EEPROM memory.

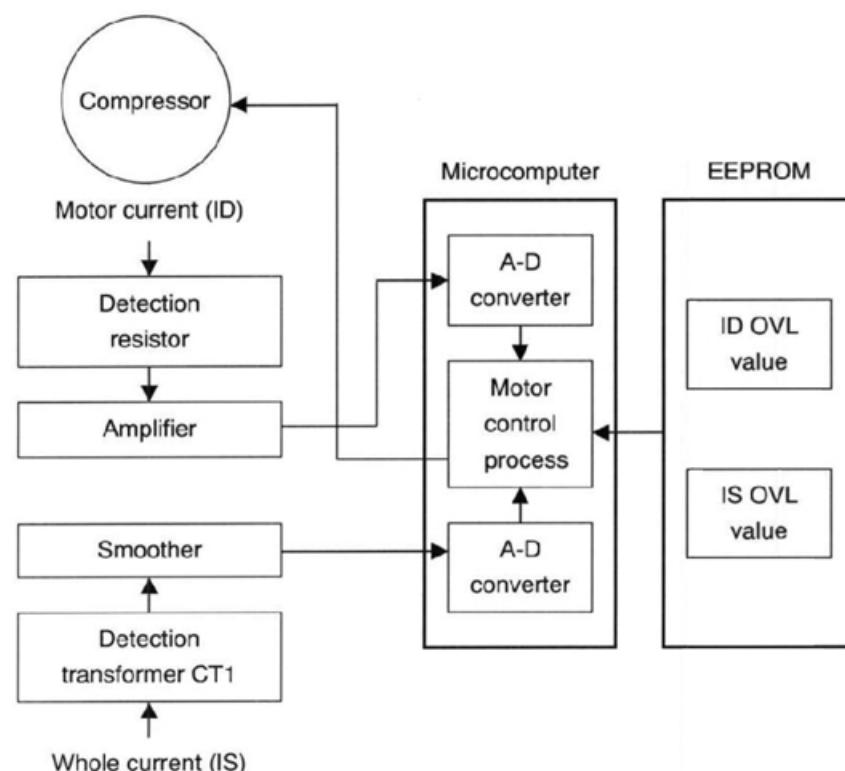


Fig. 6-1 Overload Control System

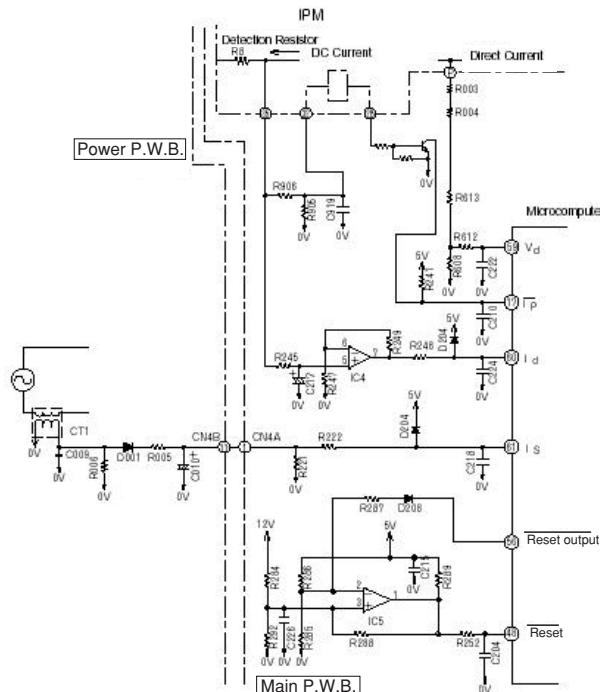


Fig. 6-2

(1). IS OVL

Current transformer CT1 reads the input flowing current and detected to the microcomputer as a voltage signal. Receiving this, the microcomputer converts it to a digital signal and compares it with the internal data to judge whether or not overload control is required.

Fig. 6-3 shows the rotation speed control. When the voltage at pin ⑥ of the microcomputer exceeds the set value, the microcomputer decreases the rotation speed of the compressor and reduces the load.

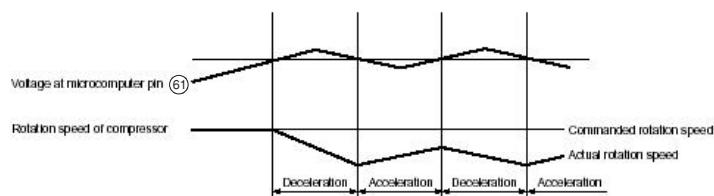


Fig. 6-3

(2). ID OVL

Fig. 6-2. The filter consisting of R245 and C217 removes high harmonic frequencies from the voltage generated by the current flowing to Detection resistor; R245 and C217 average the voltage. This voltage is then input to IC4 pin ⑤ and supplied to microcomputer pin ⑩. The microcomputer compares this input with the set value, and if the input exceeds the set value, it enters overload control status.

The set Value is determined by the amplification of the voltage amp. circuit

$$\begin{cases} \text{Amplification : high} \rightarrow \text{DC current : low} \\ \text{Amplification : low} \rightarrow \text{DC current: high} \end{cases}$$

Fig. 6-4 shows the rotation speed control. When the voltage at pin ⑩ of the microcomputer exceeds the set value, the microcomputer decreases the rotation speed of the compressor and reduces the load.

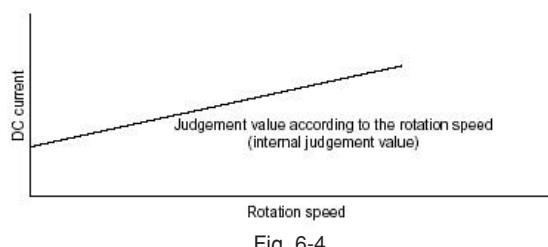


Fig. 6-4



R003, R004, R608, R613, detect the DC voltage at the power circuit. The microcomputer receives a DC voltage and applies correction to the overload set value so the DC current will be low when the DC voltage is high.

(Since the load level is indicated by the DC voltage multiplied by DC current, R247, R248, R249 are provided to perform the same overload judgement even when the voltage varies.)

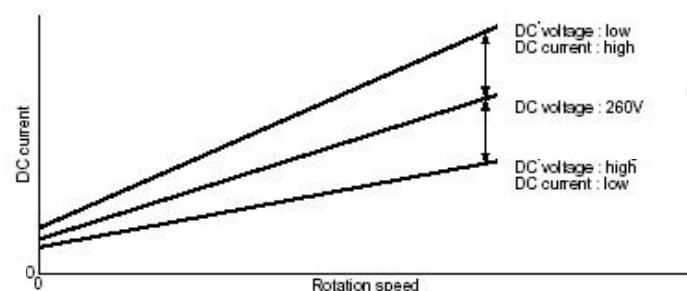


Fig. 6-5

(3). Start current control

It is required to maintain the start current (DC current) constant to smooth the start of the DC motor of the compressor.

RAC-25YH5, RAC-35YH5 uses software to control the start current

The start current varies when the supply voltage varies. This control method copes with variations in the voltages as follows.

(1) Turns on the power module's U+ and V- transistors so the current flows to the motor windings as shown in Fig. 6-6.

(2) Varies the turn-ON time of the W+ transistor according to the DC voltage level and the start is controlled so the start current is approx. 10A .

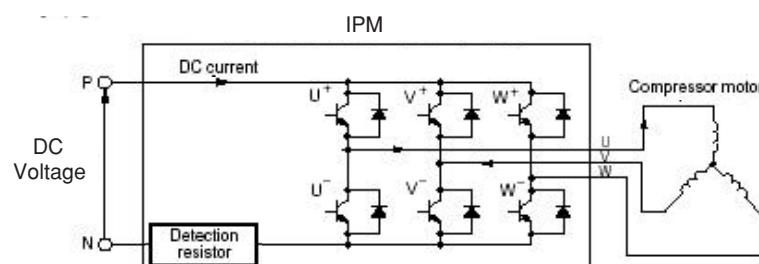


Fig. 6-6



6-2. Reset Circuit

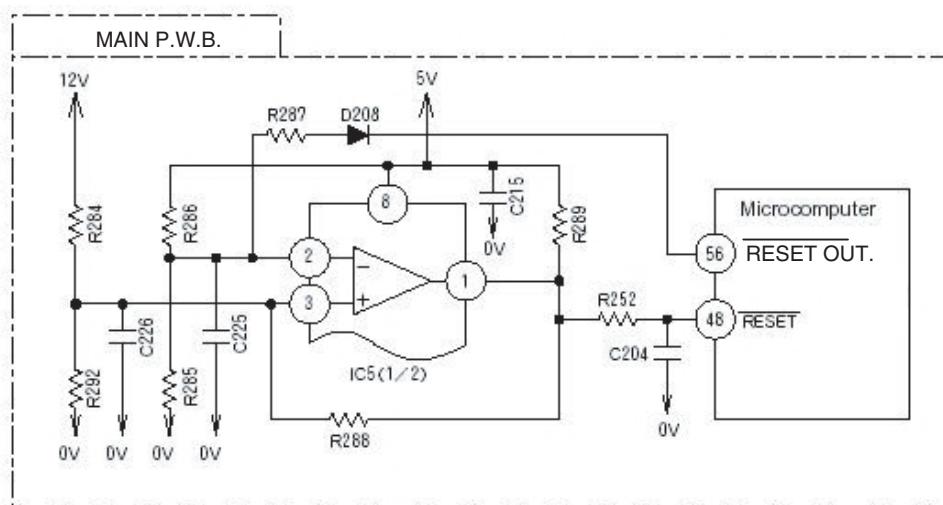


Fig. 6-7

The reset circuit initializes the microcomputer program when Power is "ON" from "OFF".

Low voltage at pin 48 resets the microcomputer, and HI activates the microcomputer

Fig. 6-7 shows the reset circuit and Fig. 6-8 shows waveform at each point when power is turned on and off.

When power is turned on, 12V line and 5V line voltages rise and 12V line voltage reaches 10.9V and reset voltage input to pin ④ of microcomputer is set to Hi.

Reset voltage input is μ V. If microcomputer is set to 1V, Reset voltage will be hold "Hi" until the 12V line voltage drops to 9.90V even though the power shuts down.

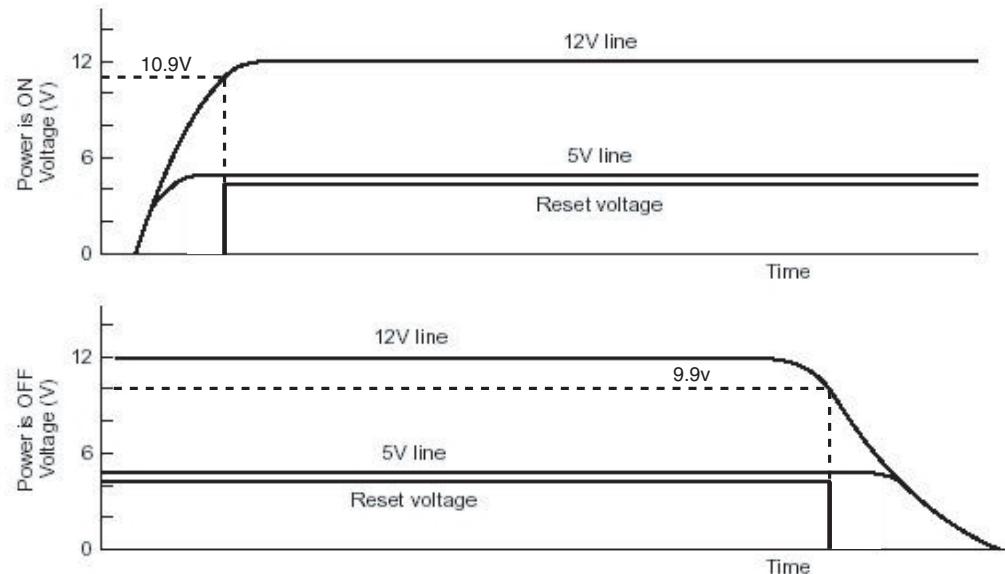


Fig. 6-8

7. Temperature Detection Circuit

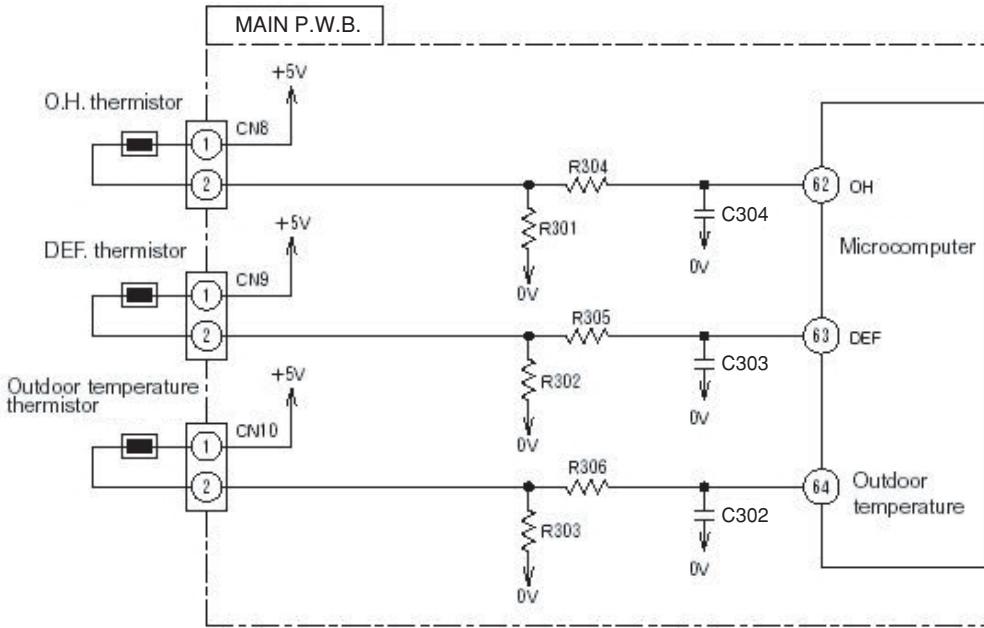


Fig. 7-1

The Over heat thermistor circuit detects the temperature at the surface of the compressor head, the Defrost. thermistor circuit detects the defrosting operation temperature.

A thermistor is a negative resistor element which has the characteristics that the higher (lower) the temperature, the lower (higher) the resistance.

When the compressor is heated, the resistance of the Over heat thermistor becomes low and voltage to a pin ⑥2 of microcomputer is increased.

Microcomputer compares the voltage at pin ⑥2 with the internal set value, if it is exceeded the set value microcomputer judges that the compressor is overheated and stops operation.

When frost forms on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the Defrost. thermistor becomes high and the voltage at pin ⑥3 of microcomputer drops.

If this voltage becomes lower than the set value stored inside, the microcomputer starts defrosting control. During defrosting operation the microcomputer transfers the defrosting condition command to the indoor microcomputer via the circuit interface.

The microcomputer always reads the outdoor temperature via a thermistor (microcomputer pin ⑥4), and transfers it to the indoor unit, thus controlling the compressor rotation speed according to the value set at the EEPROM in the indoor unit, and switching the operation status (outdoor fan on/off, etc.) in the dehumidifying mode.

The following shows the typical values of outdoor temperature in relation to the voltage:

Table 7-1

Outdoor temperature (°C)	-10	0	10	20	30	40
R303 Voltage(V)	1.19	1.69	2.23	2.75	3.22	3.62

<Reference>

When the thermistor is open, in open status, or is disconnected, microcomputer pins ⑥2⑥4 are approx. 0V; when the thermistor is shorted, they are approx. 5 V, and LD301 blinks seven times.

However, an error is detected only when the OH thermistor is shorted; in such a case, the blinking mode is entered 12 minutes after the compressor starts operation.



8. Reversing valve control circuit

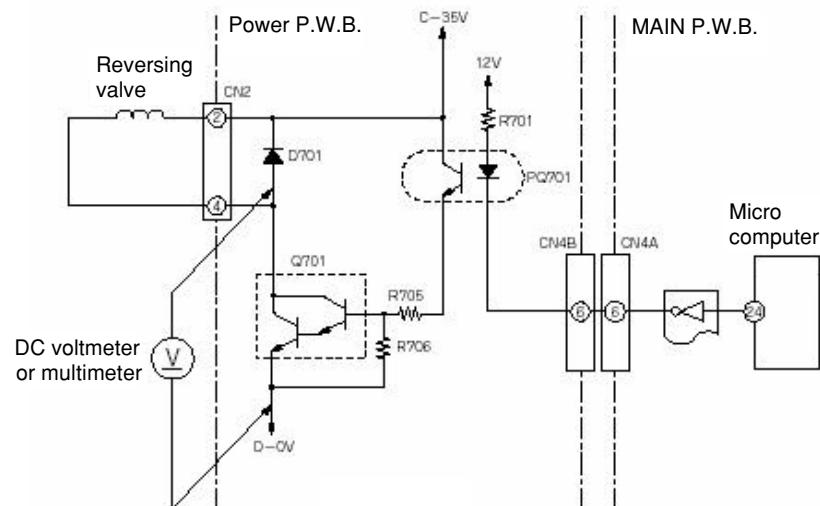


Fig. 8-1

Reversing valve control circuit will switch reversing valve ON/OFF according to instruction from indoor microcomputer depending on the operation condition shows in Table 8-1.
Voltage at Q701 (between Collector and Emitter) in each operation condition is approximately as shown in Table 8-1 when measured by multimeter.

Table 8-1

Operation condition		Collector voltage of Q701
Cooling	General operation of Cooling	About 0.8V
Heating	In normal heating operation	About 35V
	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 35V
	Defrosting	About 0.8V
	Dehumidifying	About 0.8V



9. Electric expansion valve control circuit

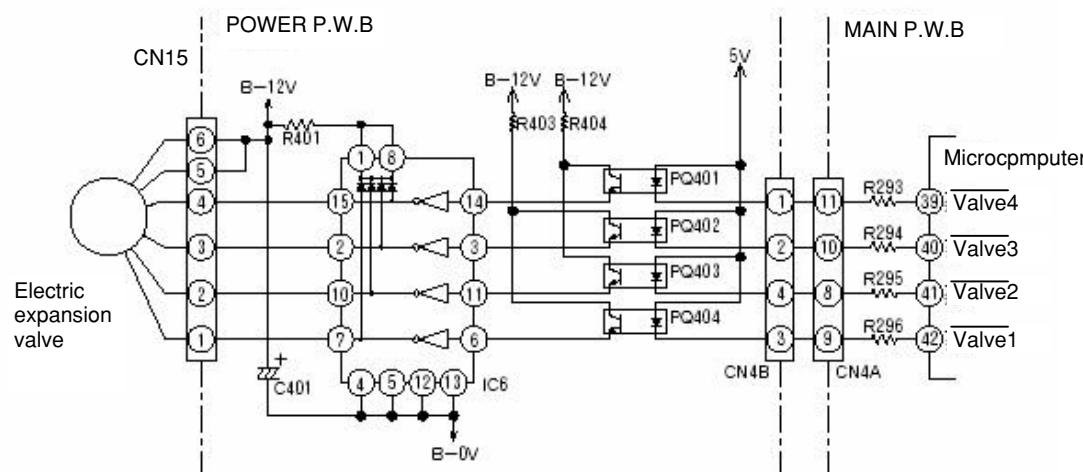


Fig. 9-1

- To drive the expansion valve, use the B-12 V output. Use a 4-phase coil and feed power to the phases 1 and 2, then switch over the field poles to control the opening of the valve.
- The reference between conducting phase switch over direction and the open/close direction are shown in Table 9-1. When the power is turned on, approx. 0.9 V is applied to the CN15 and the pins ((1) to (4)) and when no power is supplied, 12 V is applied. When the power is reset, the expansion valve starts initial operation for 5 to 10 seconds.
- During the initial operation, measure each pin of the CN15 ((1) to (4)) with a multimeter. If no change is found around 0.9 V or 12V in this step, the expansion valve or the micro computer has failure.
- The logic waveform during the operating of the expansion valve is shown in Fig. 9-2.

Table 9-1

CN15 pin#	Lead wire	Driving state							
		1	2	3	4	5	6	7	8
(4)	White	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
(3)	Yellow	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
(2)	Orange	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
(1)	Blue	OFF	OFF	OFF	OFF	OFF	ON	ON	ON

Operation mode
1→2→3→4→5→6→7→8 VALVE CLOSE
8→7→6→5→4→3→2→1 VALVE OPEN


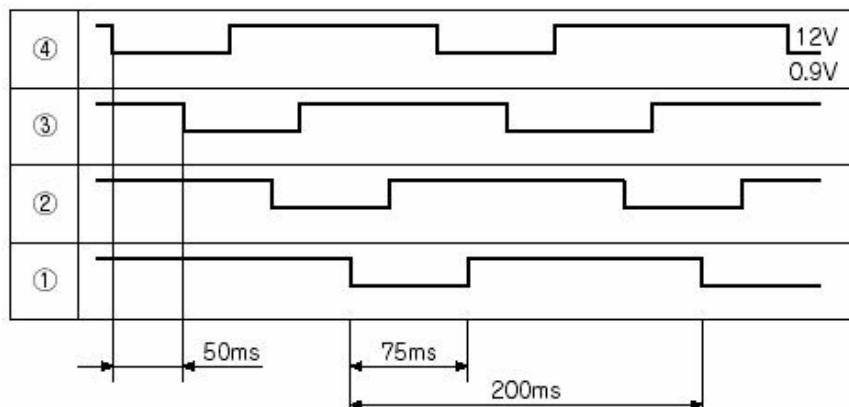


Fig.9-2



10. Outdoor DC Fan Motor control circuit

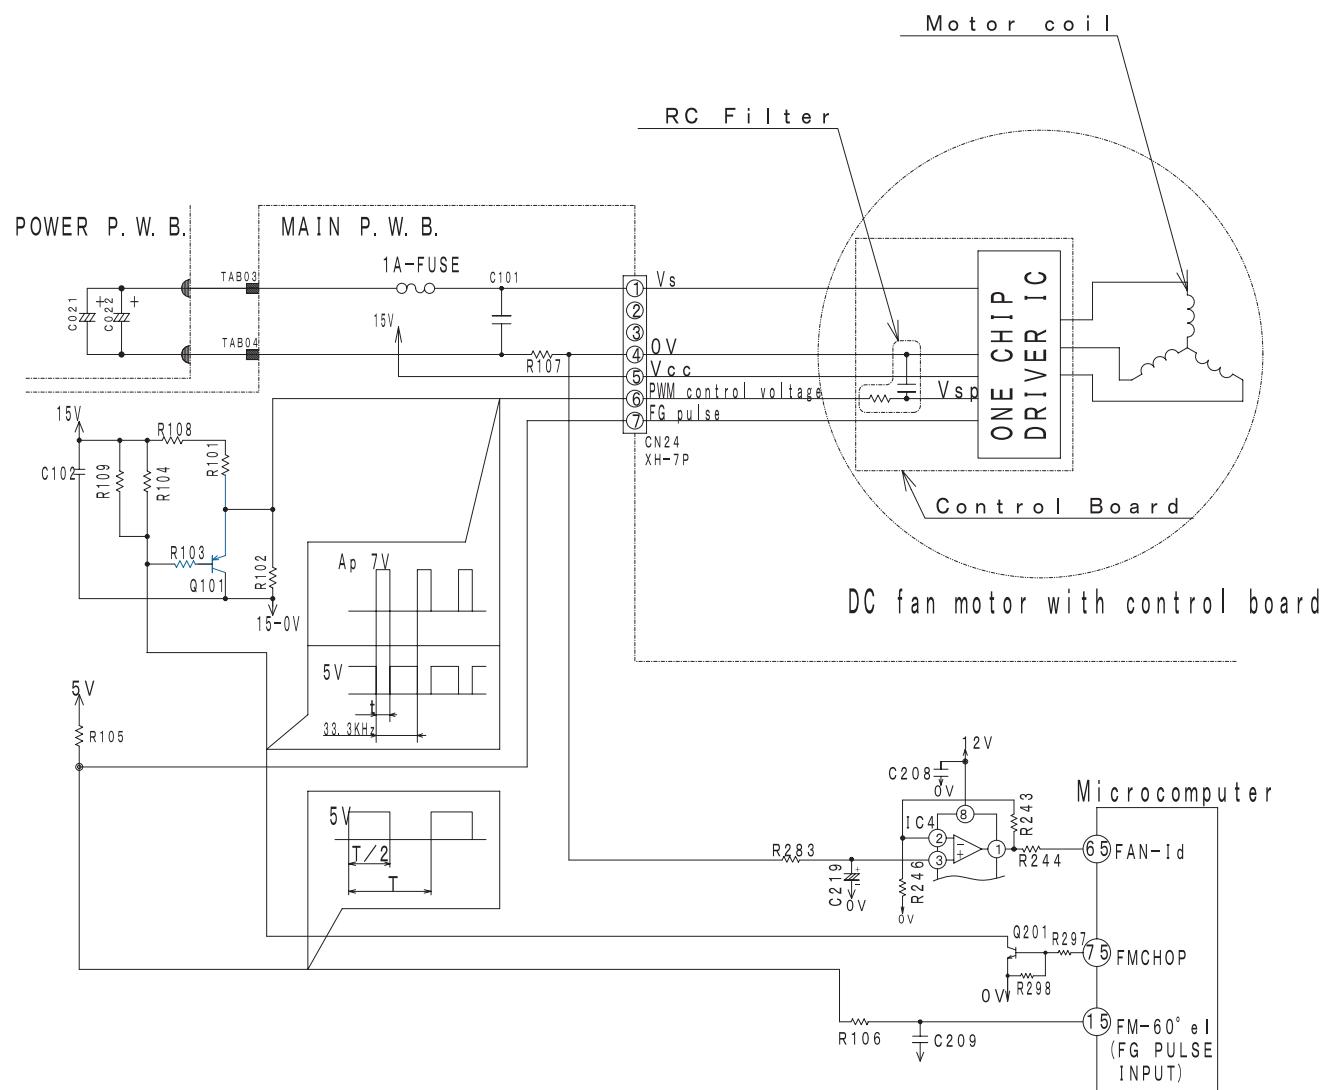

This model uses DC Fan Motor which has a controller circuit built in the Motor
 This DC Fan Motor will rotate by control voltage apply to Vsp input. (Voltage range: 1.7 to 7V DC)
 Vsp high : Faster ; Vsp low : slower ; Vsp lower than 1.7V : stop
 Motor will output FG pulse by following this motor revolution
 Outdoor microcomputer will output PWM control signal from ⑦ by following the instruction from indoor microcomputer.
 This PWM control signal will convert to Vsp voltage by smoothing circuit (R242 & C209)
 Fan motor will start to rotate when Vsp was proceeding over than 1.7V, and generate FG pulse by rotation speed.
 FG pulse will feed back to Outdoor microcomputer ⑮
 DC Fan Motor circuit has to match the Fan Motor revolution with instructed revolution. Such as...
 FG feedback: Faster Instruction: Slower ... Decrease pulse width
 FG feedback: Slower Instruction: Faster ... Increase pulse width
 FG pulse is also used for Fan Motor failure detection
 Microcomputer will monitor FG pulse 30 seconds after start the fan motor. If there is no signal detected, it will consider that the Fan Motor was malfunction and stop the operation. In this case, LD302 on control PWB will blink 12 times. (Fan Motor lock detected)
 R107 and IC4 are used for Fan Motor over current.



< Reference >

When operation stop with LD301 blinks 12 times, it may be caused by faulty DC fan motor
In this case, please check CN6 and CN12 connection first. It makes Fan Motor Lock also if those connectors are in misconnection.

DC Fan Motor has broken invites 1A Fuse burned. Please replace both DC Fan Motor and 1A Fuse together.

It will makes "Fan Lock Stop" when something has disturb the Fan rotation by inserting materials into propeller fan or ice has growing inside of outdoor unit by snowing.

It may make "Fan Lock Stop" by strong wind (ex. 17m/sec or above) against the Fan rotation. In this case unit will be restart again after a while.

In case of " Fan Lock Stop" even though the DC Fan Motor is rotating correctly, the possible cause in Fan Motor problem or control board problem. Stop after the Fan motor runs 2 minutes, Fan Motor may be broken.

< Caution >

Please take care for the electrical shock by high voltage of DC Fan Motor power source which is common with compressor when you are servicing this unit.

You can not confirm the coil and wiring of Motor directly due to the built in control circuit in Fan Motor



SERVICE CALL Q & A

Model RAS-25YH5 / RAC-25YH5
 RAS-35YH5 / RAC-35YH5

COOLING MODE

- Q1** The compressor has stopped suddenly during cooling operation.
- A1** Check if the indoor heat exchanger is frosted. Wait for 3-4 minutes until it is defrosted.
- If the air conditioner operates in cooling mode when it is cold, the evaporator may get frosted.

DEHUMIDIFYING MODE

- Q2** Fan speed is not switched over during dehumidifying operation.
- A2** Fans speed is normally set to LOW during dehumidifying operation.
- Q3** Cool air comes from the unit during dehumidifying operation.
- A3** To have an operation with high dehumidifying effect, the unit operates at low fan speed. As a result, cool air comes from the unit. This phenomenon is not a fault.

HEATING MODE

- Q4** The circulation stops occasionally during Heating mode.
- A4** It occurs during defrosting. Wait for 5-10 minutes until the condenser is defrosted.
- Q5** When the fan speed is set at HIGH or MED, the flow is actually Weak.
- A5** At the beginning of heating, the fan speed remains LOW for 30 seconds. If HIGH is selected, it switches to LOW and again to MED after additional 30 seconds.
- Q6** Heating operation stops while the temperature is preset at "30".
- A6** If temperature is high in the outdoor, heating operation may stop to protect internal devices.
- Q7** When "Auto fan" mode is set, the indoor fan speed changes from HIGH through MED to LOW.
- A7** This is not an error. The anti cool air function shows this phenomenon.
- In the fan "Auto" mode, the unit detects the heat exchange temperature. When the temperature becomes low, the fan speed changes from HIGH, through MED to LOW.



AUTO FRESH DEFROSTING

Q8 After the ON/OFF button is pressed to stop heating, the outdoor unit is still working with the OPERATION lamp lighting.

A8 Auto Fresh Defrosting is carried out : the system checks the outdoor heat exchanger and defrosts it as necessary before stopping operation.

AUTO OPERATION

Q9 Fan speed does not change when fan speed selector is changed during auto operation.

A9 At this point fan speed is automatic.

NICE TEMPERATURE RESERVATION

Q10 When on-timer has been programmed, operation starts before the preset time has been reached.

A10 This is because Nice temperature reservation function is operating. This function starts operation earlier so the preset temperature is reached at the preset time. Operation may start maximum 60 minutes before the preset time.

Q11 Does Nice temperature reservation function operate during dehumidifying?

A11 It does not work. It works only during cooling and heating.

Q12 Even if the same time is preset, the operation start time varies.

A12 This is because Nice temperature reservation function is operating. The start time varies according to the load of room. Since load varies greatly during heating, the operation start time is corrected, so it will vary each day.

INFRARED REMOTE CONTROL

Q13 Timer cannot be set.

A13 Has the clock been set? Timer cannot be set unless the clock has been set.

Q14 The current time display disappears soon.

A14 The current time disappears in approx. 10 seconds. The time set display has priority.

When the current time is set the display flashes for approx 3 minutes.

Q15 The timer has been programmed, but the preset time disappears.

A15 Is the current time past the preset time? When the preset time reaches the current time, it disappears.



Q16 When the "Sleep" timer is set during operation,
(1) The indoor fan won't rotate.
(No air comes from the unit)
(2) The air speed won't change.



A16 (1) The temperature arrives at the preset indoor temperature and the air conditioner unit is temporarily stopped. Within about 3 minutes, the fan starts rotation.
(2) When the unit operates at "LOW" air speed, it continues to operate at the same speed.

Q17 The preset temperature is not indicated on the remote control.



A17 When automatic operation is performed, the preset temperature won't be indicated. However, you can adjust the temperature within a range of $\pm 3^{\circ}\text{C}$ by pressing the "Room Temperature" button. If the temperature is 1°C higher than the auto preset temperature, $\blacktriangle 1^{\circ}\text{C}$ will appear. If the temperature is 1°C lower than the auto preset temperature, $\blacktriangledown 1^{\circ}\text{C}$ will appear.

OTHERS

Q18 The indoor fan varies among high air flow, low air flow and breeze in the auto fan speed mode. (Heating operation)



A18 This is because the cool wind prevention function is operating, and does not indicate a fault.

The heat exchanger temperature is sensed in the auto speed mode. When the temperature is low, the fan speed varies among high air flow, low air flow and breeze.

Q19 Loud noise from the outdoor unit is heard when operation is started.



A19 When operation is started, the compressor rotation speed goes to maximum to increase the heating or cooling capability, so noise becomes slightly louder. This does not indicate a fault.

Q20 Noise from the outdoor unit occasionally changes.



A20 The compressor rotation speed changes according to the difference between the thermostat set temperature and room temperature. This does not indicate a fault.

Q21 There is a difference between the set temperature and room temperature.



A21 There may be a difference between the set temperature and room temperature because of construction of room, air current, etc. Set the temperature at a comfortable for the space.

Q22 Air does not flow immediately after operation is started.



A22 Preliminary operation is performed for one minute when the power switch on and heating or dehumidifying is set. The operation lamp blinks during this time for heating. This does not indicate a fault.




TROUBLE SHOOTING

RAC-25YH5, 35YH5 PRECAUTIONS FOR CHECKING




WARNING

Remember that voltage of 175 V is applied to the 0V line on the P.W.C or the like as shown in the right diagram.

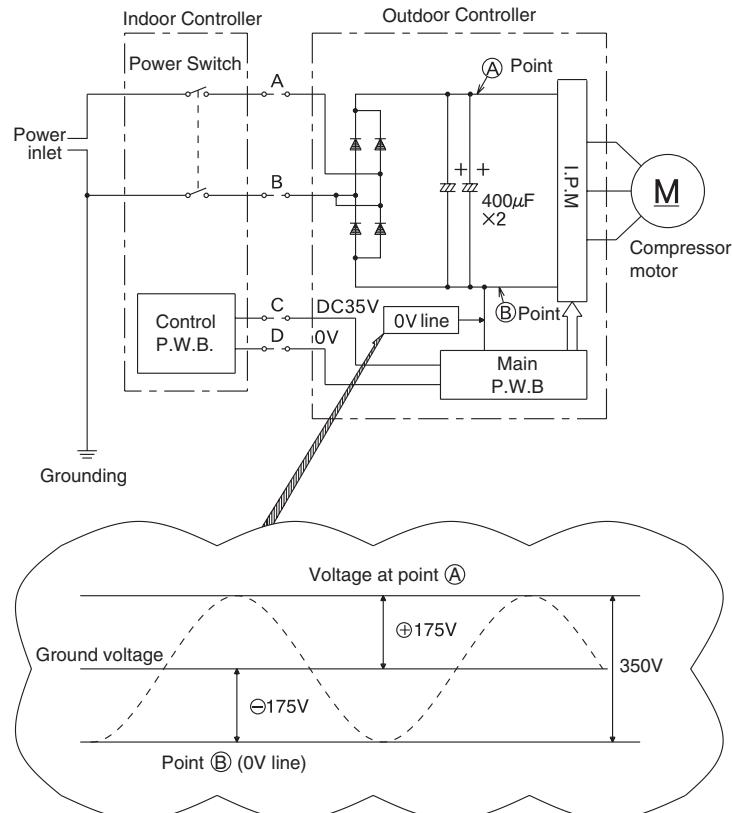

WARNING

When using an oscilloscope, never ground it. Don't forget that high voltage as noted in the figure above may apply to the oscilloscope.

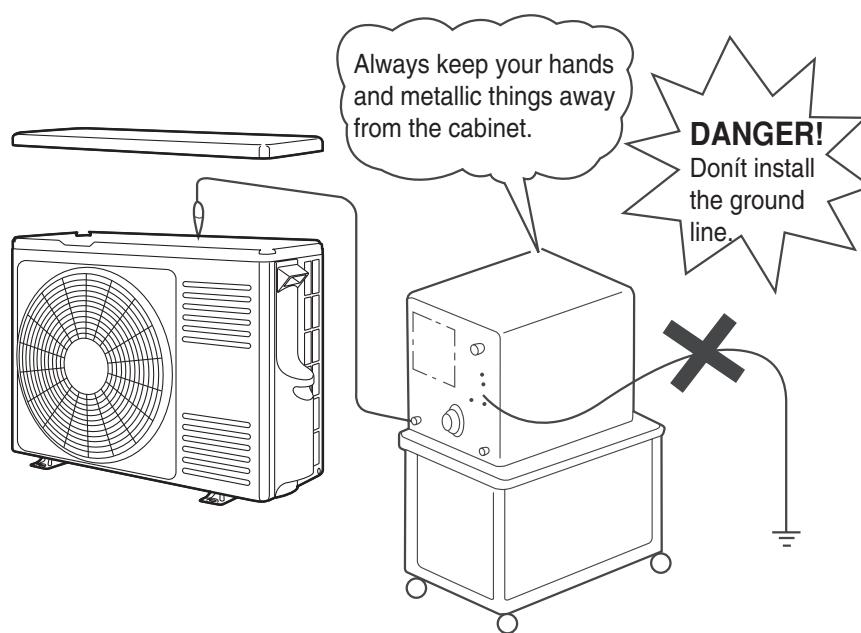



DISCHARGE, PROCEDURE AND POWER SHUT OFF METHOD FOR POWER CIRCUIT



WARNING




Caution

- Voltage of about 350 V is charged between the terminal of smoothing capacitors (400 μ F x 2)
- During continuity check for each circuit part of the outdoor unit, be sure to discharge the smoothing capacitors.

Discharge Procedure

1. Turn off the power of the indoor unit or pull out the power supply plug.
2. After power is turned off, wait for 10 minutes or more. Then, remove electrical parts cover and apply soldering iron of 30 to 75 W for 15 seconds or more to TAB3(GRAY) and TAB4(RED) terminals on the main P.W.B. as shown in the figure below, in order to discharge voltage in smoothing capacitor.


Do not use a soldering iron with transformer: Otherwise, thermal fuse inside transformer will be blown.

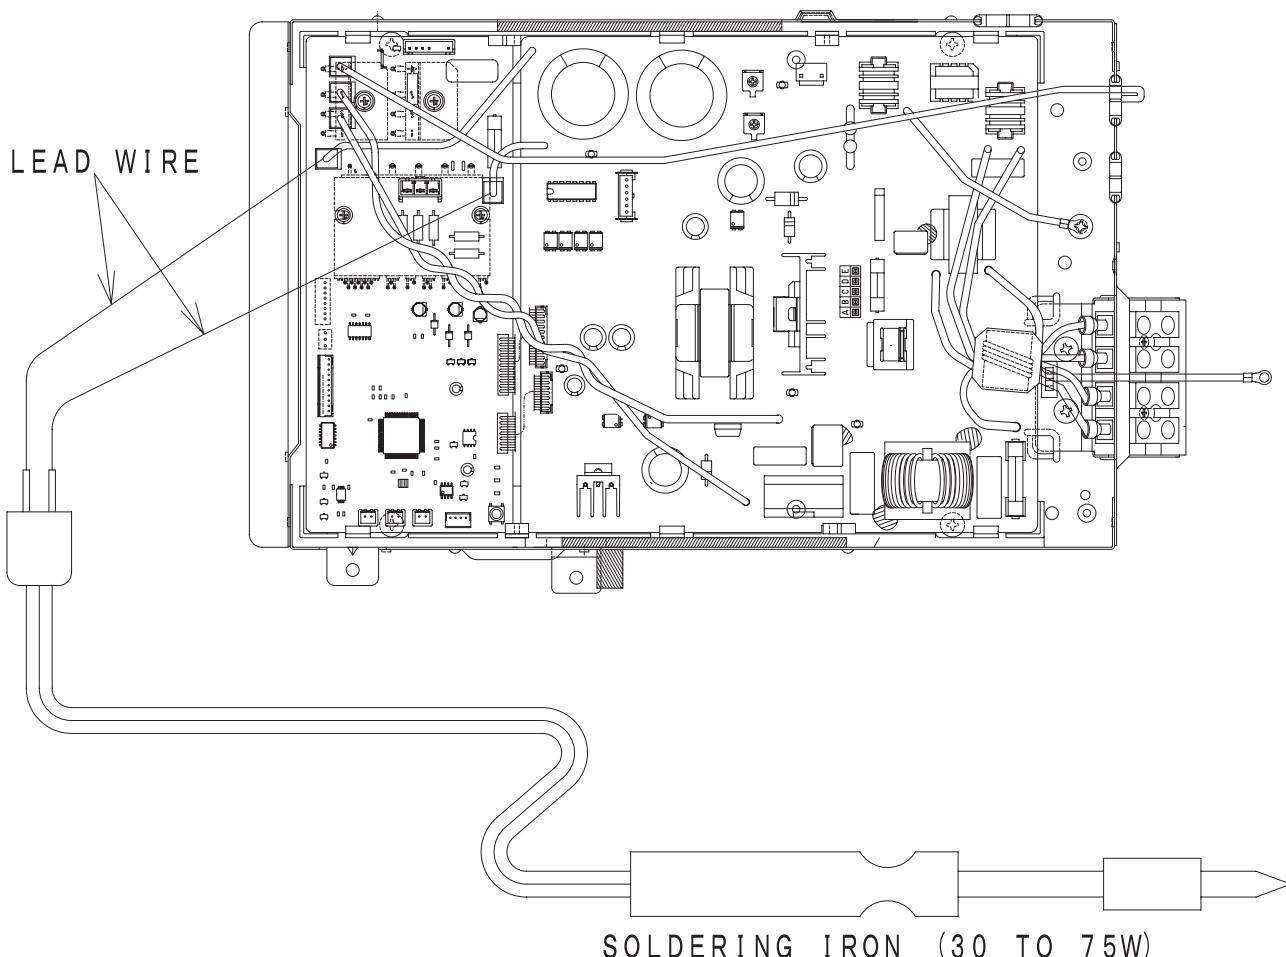



STRUCTURE OF AN INDOOR UNIT ELECTRIC PARTS


RAS-25YH5, 35YH5

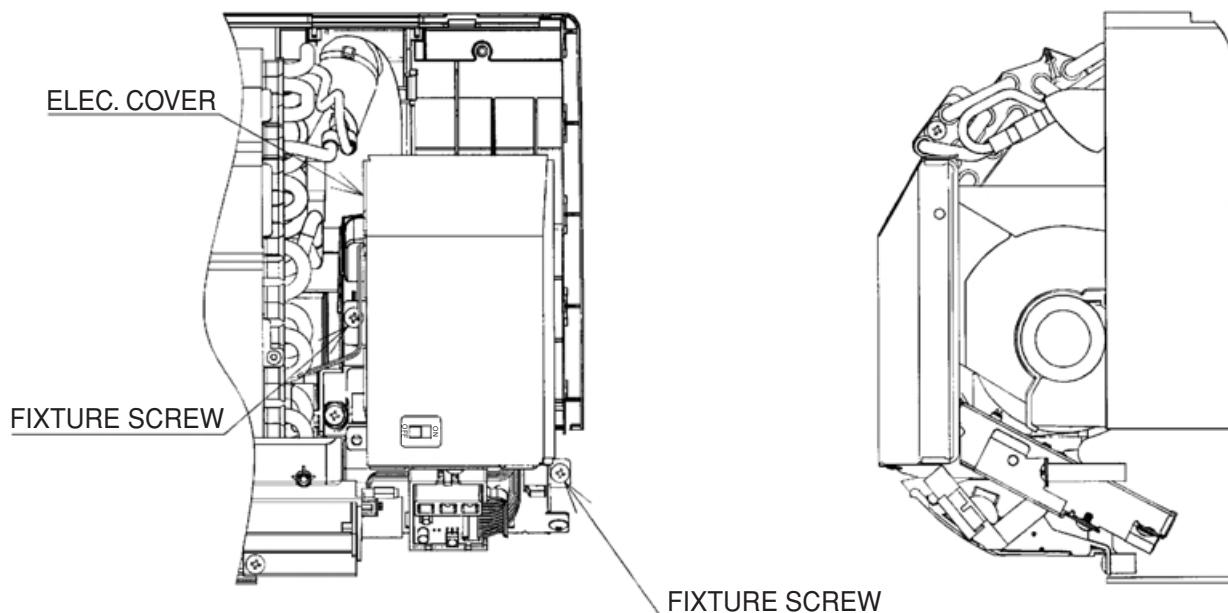

Removing electrical parts

1. Remove the electrical parts cover.
2. Remove the connectors from the CN1 (heat exchange thermistor), CN4 (stepping motor) and CN10 (fan motor).
3. Remove two lock screws.
4. Remove the electrical parts in the direction of arrow.

When installing the parts, use caution not to pinch any code between the part and cabinet.

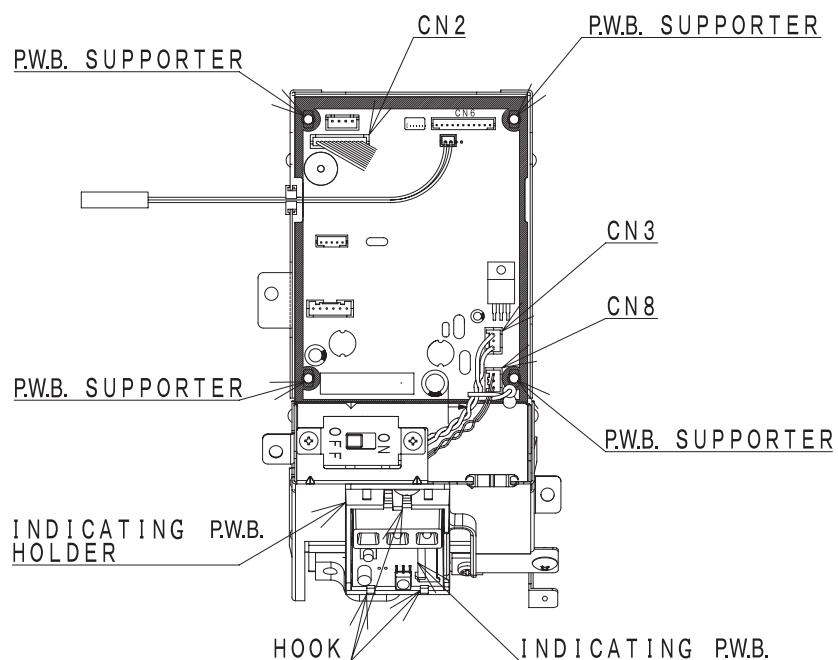

Removing control P.W.B.

1. Remove the connectors from the CN2 and CN3.
2. Remove the P.W.B. from the P.W.B. support.

Removing the indicating P.W.B.


1. Remove the connector from the CN2 on the control P.W.B.
2. Remove the upper hook from the indicating P.W.B. lock resin, pull the P.W.B. forward a little and remove it.




Other Cautions

(1) Cautions concerning ICP (IC Protector)


1. Use due caution for short circuit in servicing.
Short circuit will open the ICP immediately.
2. When the ICP opens, remove the cause of this phenomenon and replace the ICP.
If the remedy is improper, the ICP may open again.

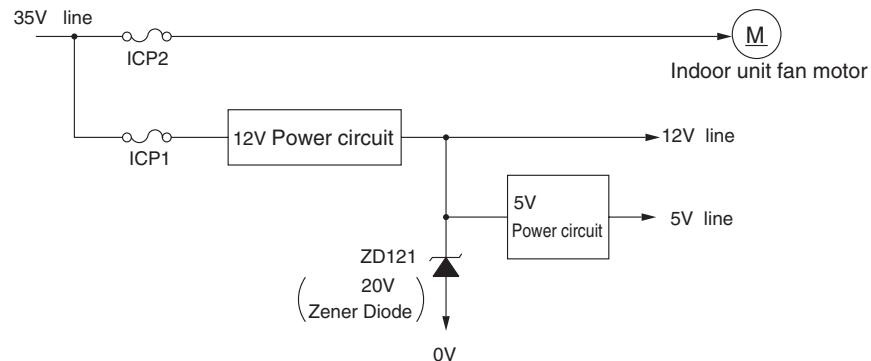

**(2) The CN3 (power supply) and CN10 (fan motor) are the connectors with lock mechanism.
Press the lock with your fingers to unlock and remove the connector.**

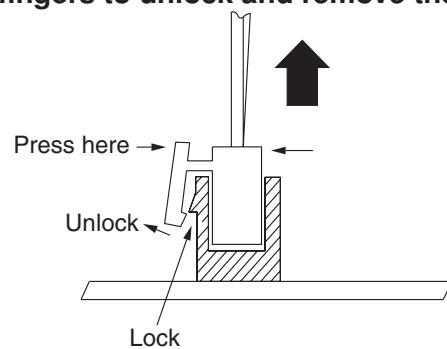

(3) When checking the voltage and waveform, do not connect the probes to the forbidden areas show below. Touching them may cause the ICP1 blowout and Q111 failure.

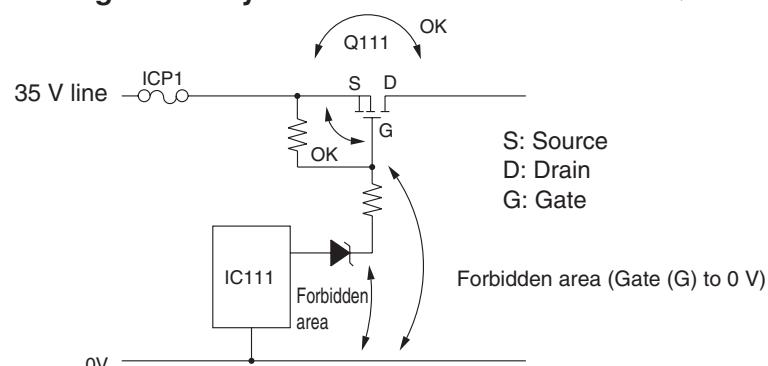

The Q111 is a MOS-FET and its gate terminal is a high impedance. When a probe such as a multimeter is contacted with the gate (G), the Q111 may have the continuous ON state to supply overcurrent in the circuit, causing the ICP1 blowout and Q111 failure.

When checking the switching waveform of the Q111, set the source (S) to the base and measure the gate (G) and drain (D).

(4) During power feeding to the P.W.B., do not remove and insert the CN10 (fan motor connector). Failure to do so may cause overcurrent to the fan motor and P.W.Bs (micro computer, IC and the like) and a failure may occur. To remove or insert the CN10, be sure to shut off the power.



THE SUPPORT FUNCTION OF FAILURE DIAGNOSIS

No.	Function Name	Description
1	<p>Self-diagnosis indication function <Indicating a failure on the indoor unit side></p> <p><Indicating a failure on the outdoor unit side></p>	<ul style="list-style-type: none">The “timer lamp” indicates a mode of failure detected on the indoor or outdoor unit side by blinking frequency.A failure detected on the outdoor unit side will be indicated by the “timer lamp” blinking 4 times after a retry operation has been performed several times. Note: In some failure modes, only the retry operation is repeated without lamp indication. <p><Failure modes that will repeat a retry operation without the indoor unit lamp indication are as follows:></p> <ul style="list-style-type: none">OH thermistor temperature riseOutdoor unit communication errorPower voltage abnormalLess frequent defects <ul style="list-style-type: none">The “LD301” indicates a mode of failure detected on the outdoor unit side by blinking frequency. Upon failure detection, the outdoor unit will shut down and the LD301 continues to blink until the unit is reset. (In the event of communication errors, the LD301 continues to blink until communication is restored.)



TROUBLESHOOTING WHEN TIMER LAMP BLINKS.

Model RAS-25YH5, RAS-35YH5

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.

SELF-DIAGNOSIS LIGHTING MODE

Model: RAS-25YH5, RAS-35YH5

No.	Blinking of Timer lamp	Reason for indication	Possible cause
1		<u>Reversing valve defective</u> When the indoor heat exchanger temperature is too low in the heating mode or it is too high in the cooling mode.	(1) Reversing valve defective (2) Heat exchanger thermistor disconnected (only in the heating mode) (Note) The malfunction mode is entered the 3rd time this abnormal indication appears (read every 3 minutes).
2		<u>Outdoor unit is under forced operation</u> When the outdoor unit is in forced operation or balancing operation after forced operation	Electrical parts in the outdoor unit
3		<u>Indoor/outdoor interface defective</u> When the interface signal from the outdoor unit is interrupted.	(1) Indoor interface circuit (2) Outdoor interface circuit
4		<u>Room thermistor or heat exchanger thermistor is faulty</u> When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor (2) Heat exchanger thermistor
5		<u>Over-current detection at the DC fan motor</u> when over-current is detected at the DC fan motor of the indoor unit.	(1) Indoor fan locked (2) Indoor fan motor (3) Indoor control P.W.B.
※1		<u>IC401 or IC402 data reading error</u> When data read from IC401 or IC402 is incorrect.	IC401 or IC402 abnormal

(--- Lights for 0.35 sec. at interval of 0.35 sec..)


<Caution>

- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check if the connecting cable is connected to the outdoor unit.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ※1).




SELF-DIAGNOSIS LIGHTING MODE

MODEL RAC-25YH5, RAC-35YH5

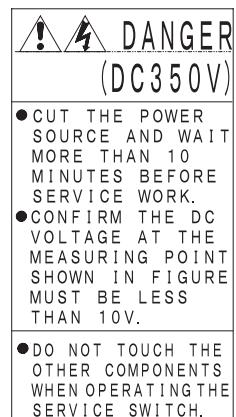

SELF-DIAGNOSIS		LIGHTING MODE		■:BLINK □:OFF
L D 3 0 1	D I G N O N	SELF-DIA- GNOSIS NAME	DETAILS	MAIN CHECK POINT
[1] DURING OPERATION		LD303 (RED) LIGHTS.	LD303 (RED)	■
<input type="checkbox"/>	<input type="checkbox"/>	NORMAL OPERATION	COMPRESSOR OPERATION	NOT MALFUNCTION
<input checked="" type="checkbox"/>	<input type="checkbox"/>	OVERLOAD (1)	ROTATION SPEED (1) (2) SET VALUE (3) TIME	THIS SHOWS AN OVERLOAD PROTECTION STATUS.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	OVERLOAD (2)	THE ROTATION SPEED IS AUTOMATICALLY CONTROLLED TO PROTECT THE COMPRESSOR IN THE OVERLOAD CONDITION.	NOT MALFUNCTION.
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	OVERLOAD (3)		
[2] DURING STOP		LD303 (RED) GOES OFF.	LD303 (RED)	□
<input type="checkbox"/>	<input type="checkbox"/>	NORMAL STOP	STOPPED BY THERMOSTAT OR CONTROLLER.	NOT MALFUNCTION
<input checked="" type="checkbox"/>	<input type="checkbox"/>	RESET STOP 1 TIME	MICROPROCESSOR WAS REBOOTTED. IT IS NORMAL WHEN POWER SW HAS BEEN TURNED ON.	OPOWER P. W. B. OMAIN P. W. B.
<input checked="" type="checkbox"/>	<input type="checkbox"/>	PEAK CURRENT CUT 2 TIMES	COMPRESSOR PEAK CURRENT WAS BEYOND MAXIMUM LIMIT.	OMAIN P. W. B. OPRESSOR OPOWER P. W. B.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	ABNORMAL LOW SPEED ROTATION 3 TIMES	LOST THE COMPRESSOR ROTOR POSITION.	OMAIN P. W. B. OPRESSOR OPOWER P. W. B.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	SWITCHING FAILURE 4 TIMES	SWITCHING FROM LOW FREQUENCY SYNC START TO POSITION DETECTION OPERATION FAILURE.	OMAIN P. W. B. OPRESSOR OPOWER P. W. B.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	OVERLOAD LOWER LIMIT CUT 5 TIMES	OVERLOAD PROTECTION FUNCTION IS REQUESTING LOWER SPEED THAN MINIMUM SPEED OF COMPRESSOR.	OUTDOOR UNIT IS EXPOSED TO DIRECT SUNLIGHT OR ITS AIRFLOW BLOCKED. FAN MOTOR MAIN P. W. B. THE VOLTAGE IS EXTREMELY LOW.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	OH THERMISTOR TEMP. RISE 6 TIMES	COMPRESSOR OVERHEAT WAS DETECTED BY OH THERMISTOR.	LEAK OF REFRIGERANT OH THERMISTOR CIRCUIT (MAIN P. W. B.)
<input type="checkbox"/>	<input checked="" type="checkbox"/>	THERMISTOR ABNORMAL 7 TIMES	ABNORMAL THERMISTOR VALUE (OPEN OR SHORT) WAS DETECTED.	OH THERMISTOR CONNECTION OF THERMISTOR DEFECTIVE OTHERRMISTOR CIRCUIT
<input type="checkbox"/>	<input checked="" type="checkbox"/>	ACCELERATION FAILURE 8 TIMES	COMPRESSOR WAS NOT ACCELERATED MORE THAN MINIMUM SPEED.	LEAK OF REFRIGERANT OPRESSOR
<input type="checkbox"/>	<input checked="" type="checkbox"/>	COMMUNICATIONS ERROR 9 TIMES	COMMUNICATIONS BETWEEN INDOOR UNIT AND OUTDOOR UNIT ARE INTERRUPTED.	OCABLE IS WRONG CONNECTED OCABLE IS OPEN INTERFACE CIRCUIT OF BETWEEN INDOOR UNIT AND OUTDOOR UNIT
<input type="checkbox"/>	<input checked="" type="checkbox"/>	ABNORMAL POWER SOURCE 10 TIMES	ABNORMAL POWER SOURCE WAS DETECTED.	OABNORMAL POWER SOURCE OCABLE IS WRONG CONNECTED OPOWER P. W. B. OMAIN P. W. B.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	FAN LOCK ERROR 12 TIMES	OUTDOOR FAN RPM IS NOT ROTATE AS INTENDED RPM	OFAN MOTOR OFAN MOTOR CIRCUIT
<input type="checkbox"/>	<input checked="" type="checkbox"/>	EEPROM READ 13 TIMES	MICROCOMPUTER CANNOT READ THE DATA IN EEPROM.	OMAIN P. W. B.
EXAMPLE OF BLINKING (5 TIMES)			2SEC	■ - LIGHTS FOR 0.25 SEC AT INTERVAL OF 0.25 SEC

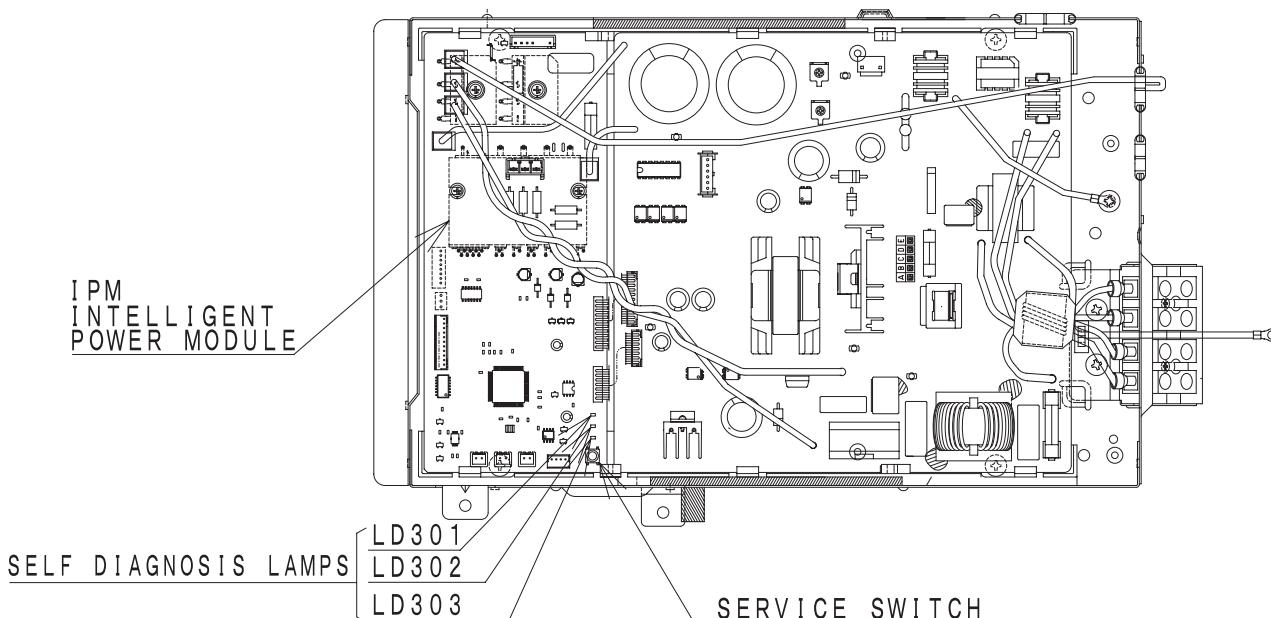





OUTDOOR UNIT

Remove the compressor connector.

1/ 2/ IPM (Intelligent Power Module)


3/ Service Switch

4/ Self-Diagnosis Lamp

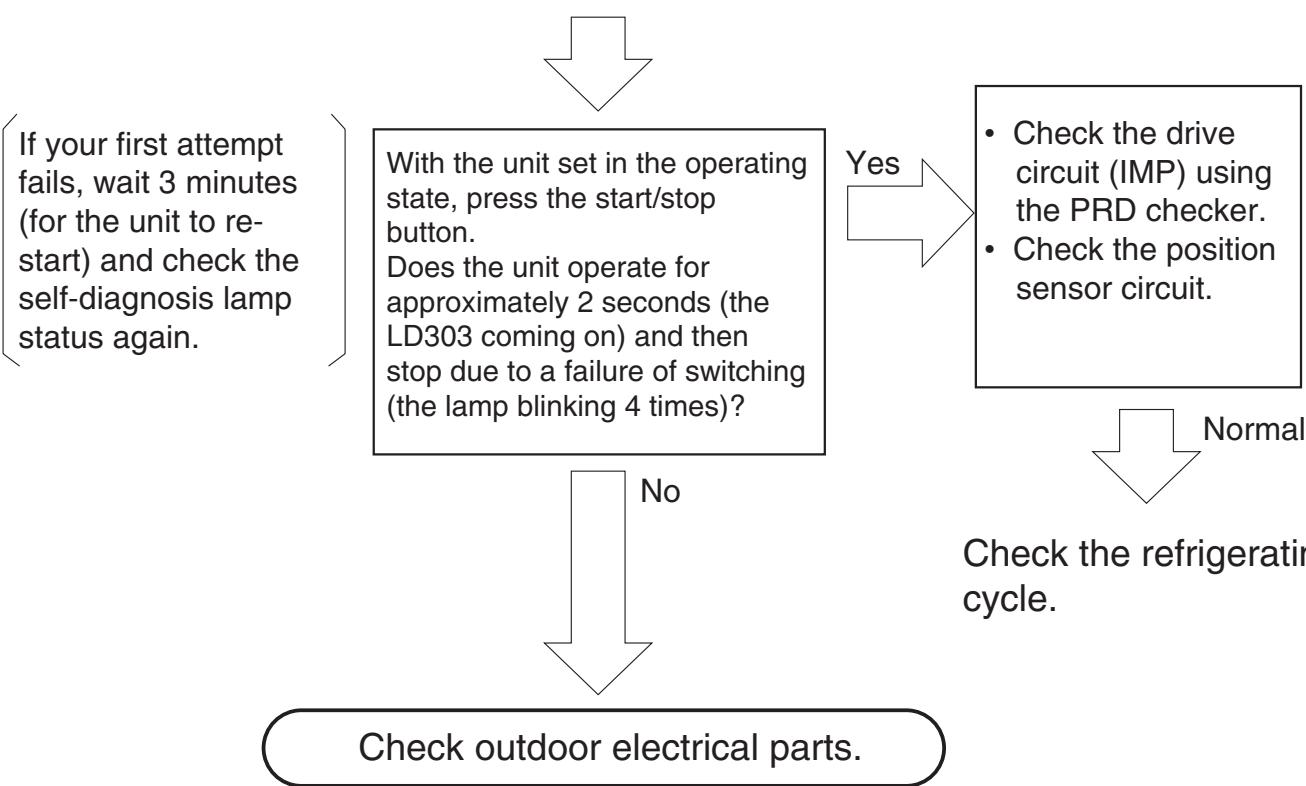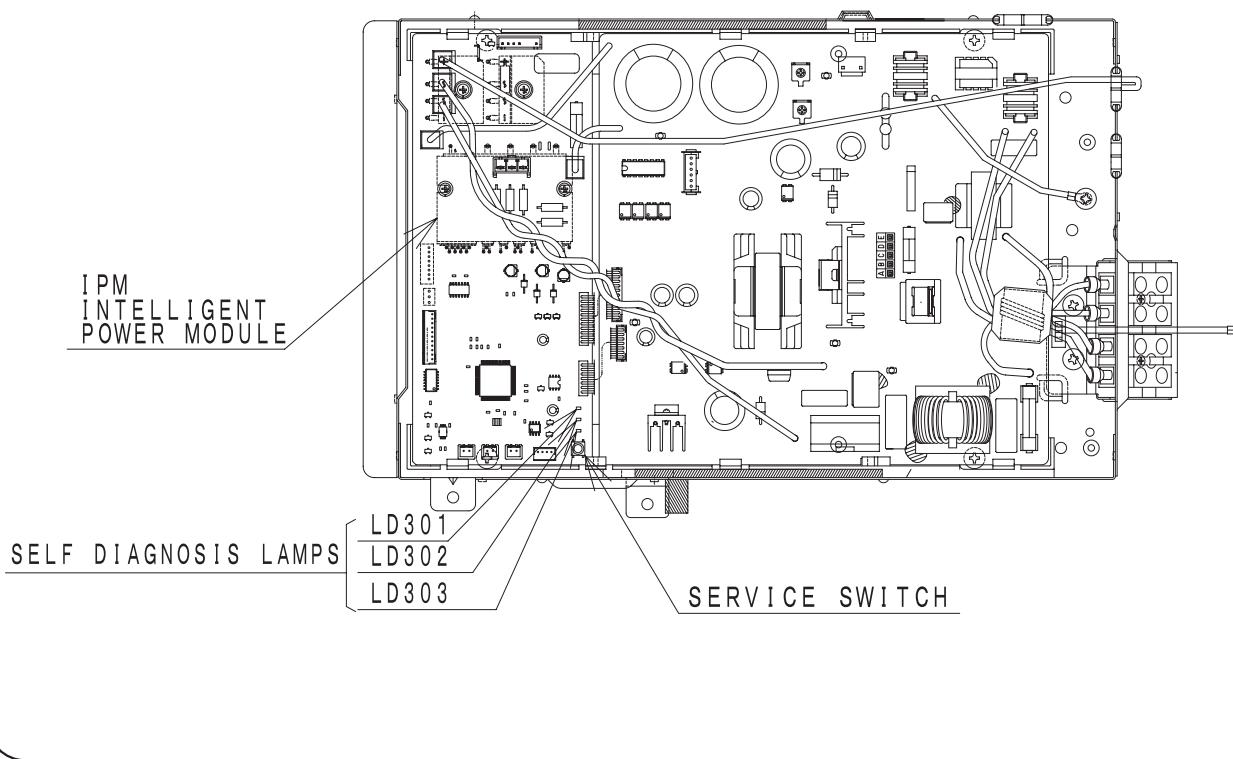




CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING

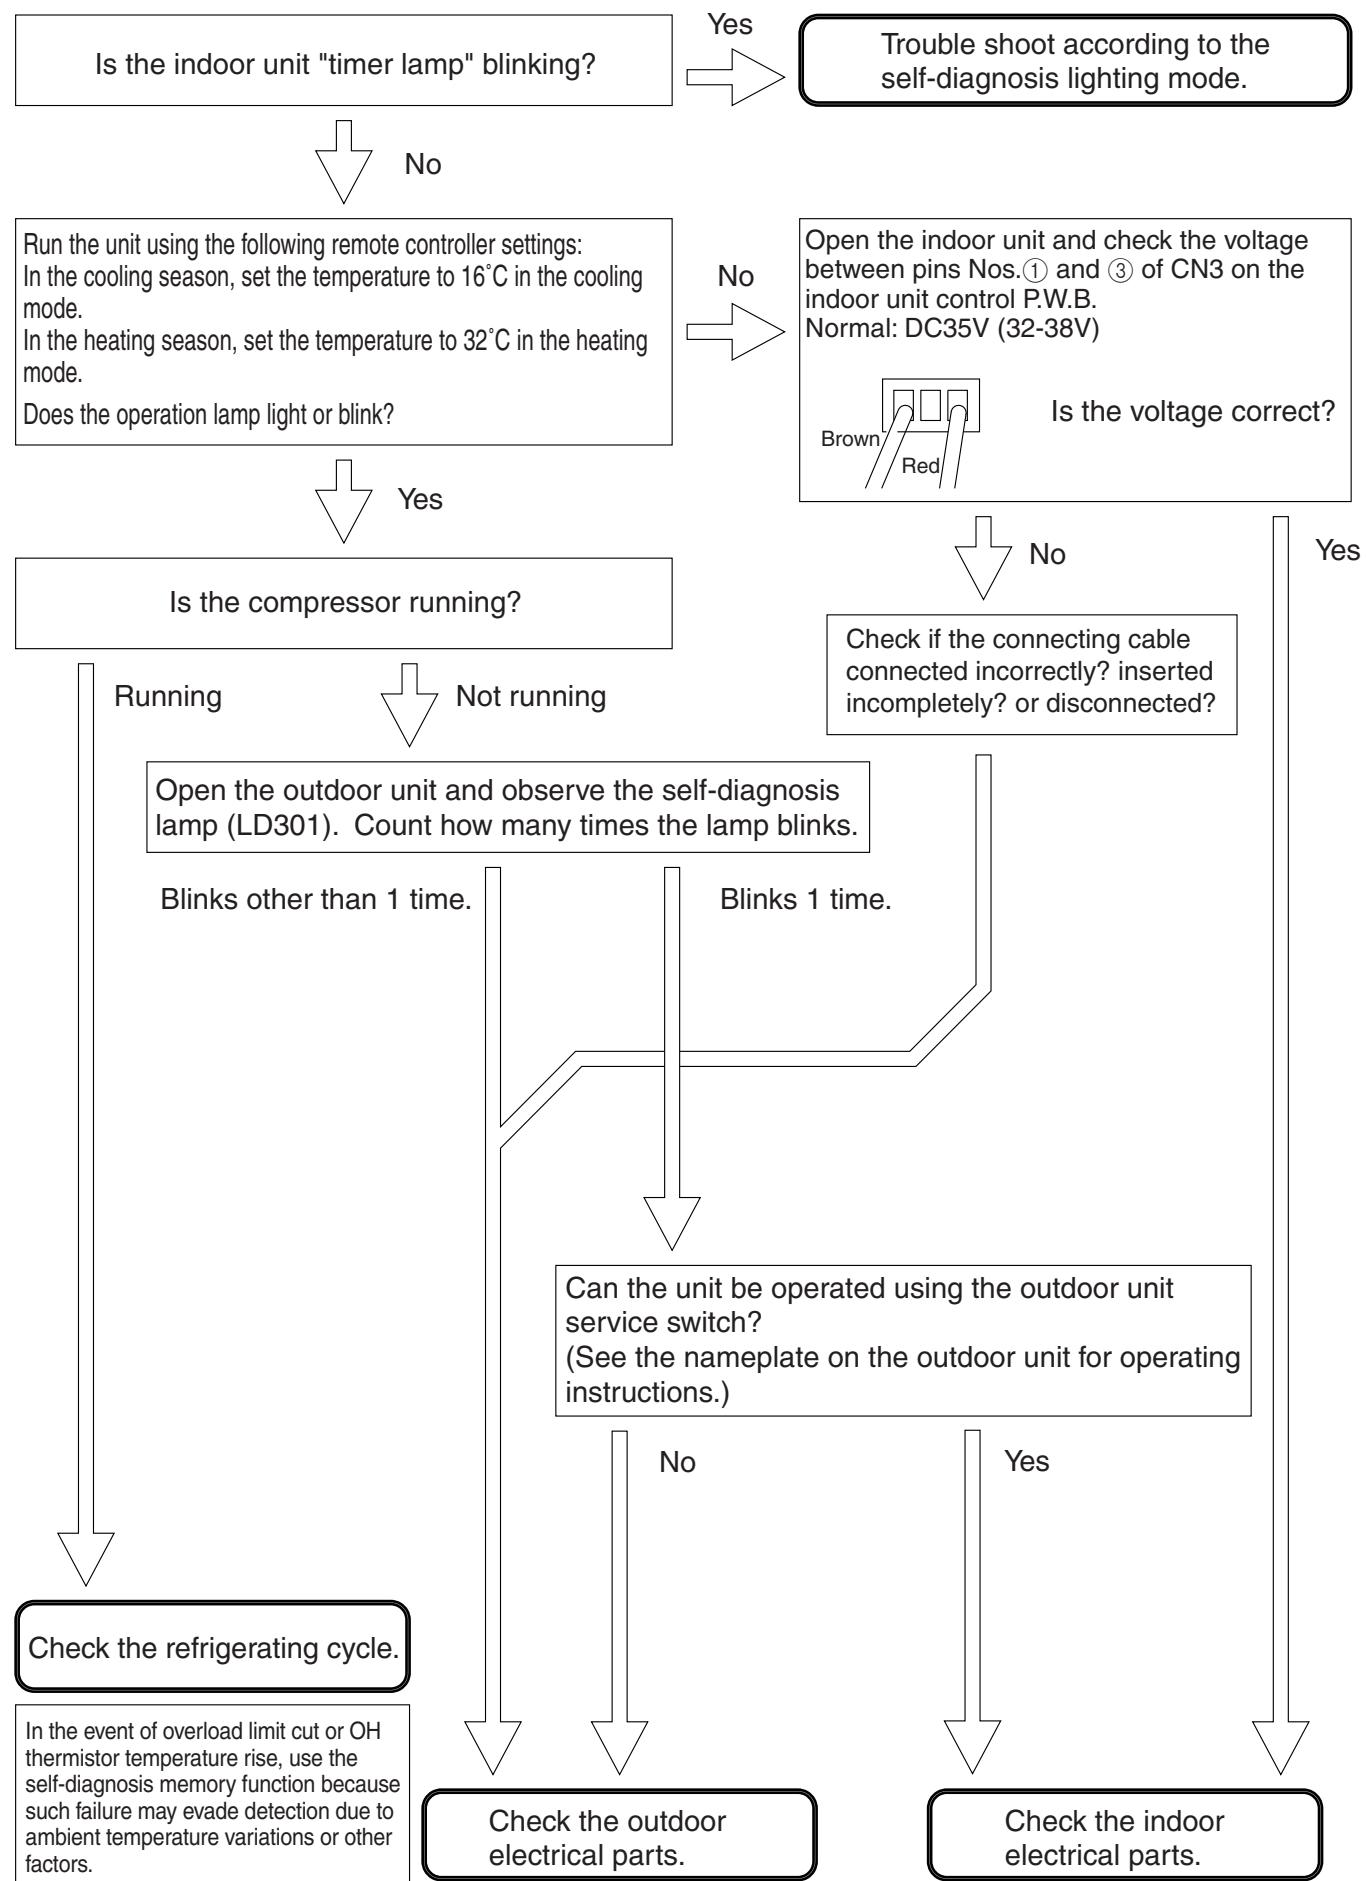



CHECKING THE INDOOR UNIT ELECTRICAL PARTS

1. Power does not come on (no operation)

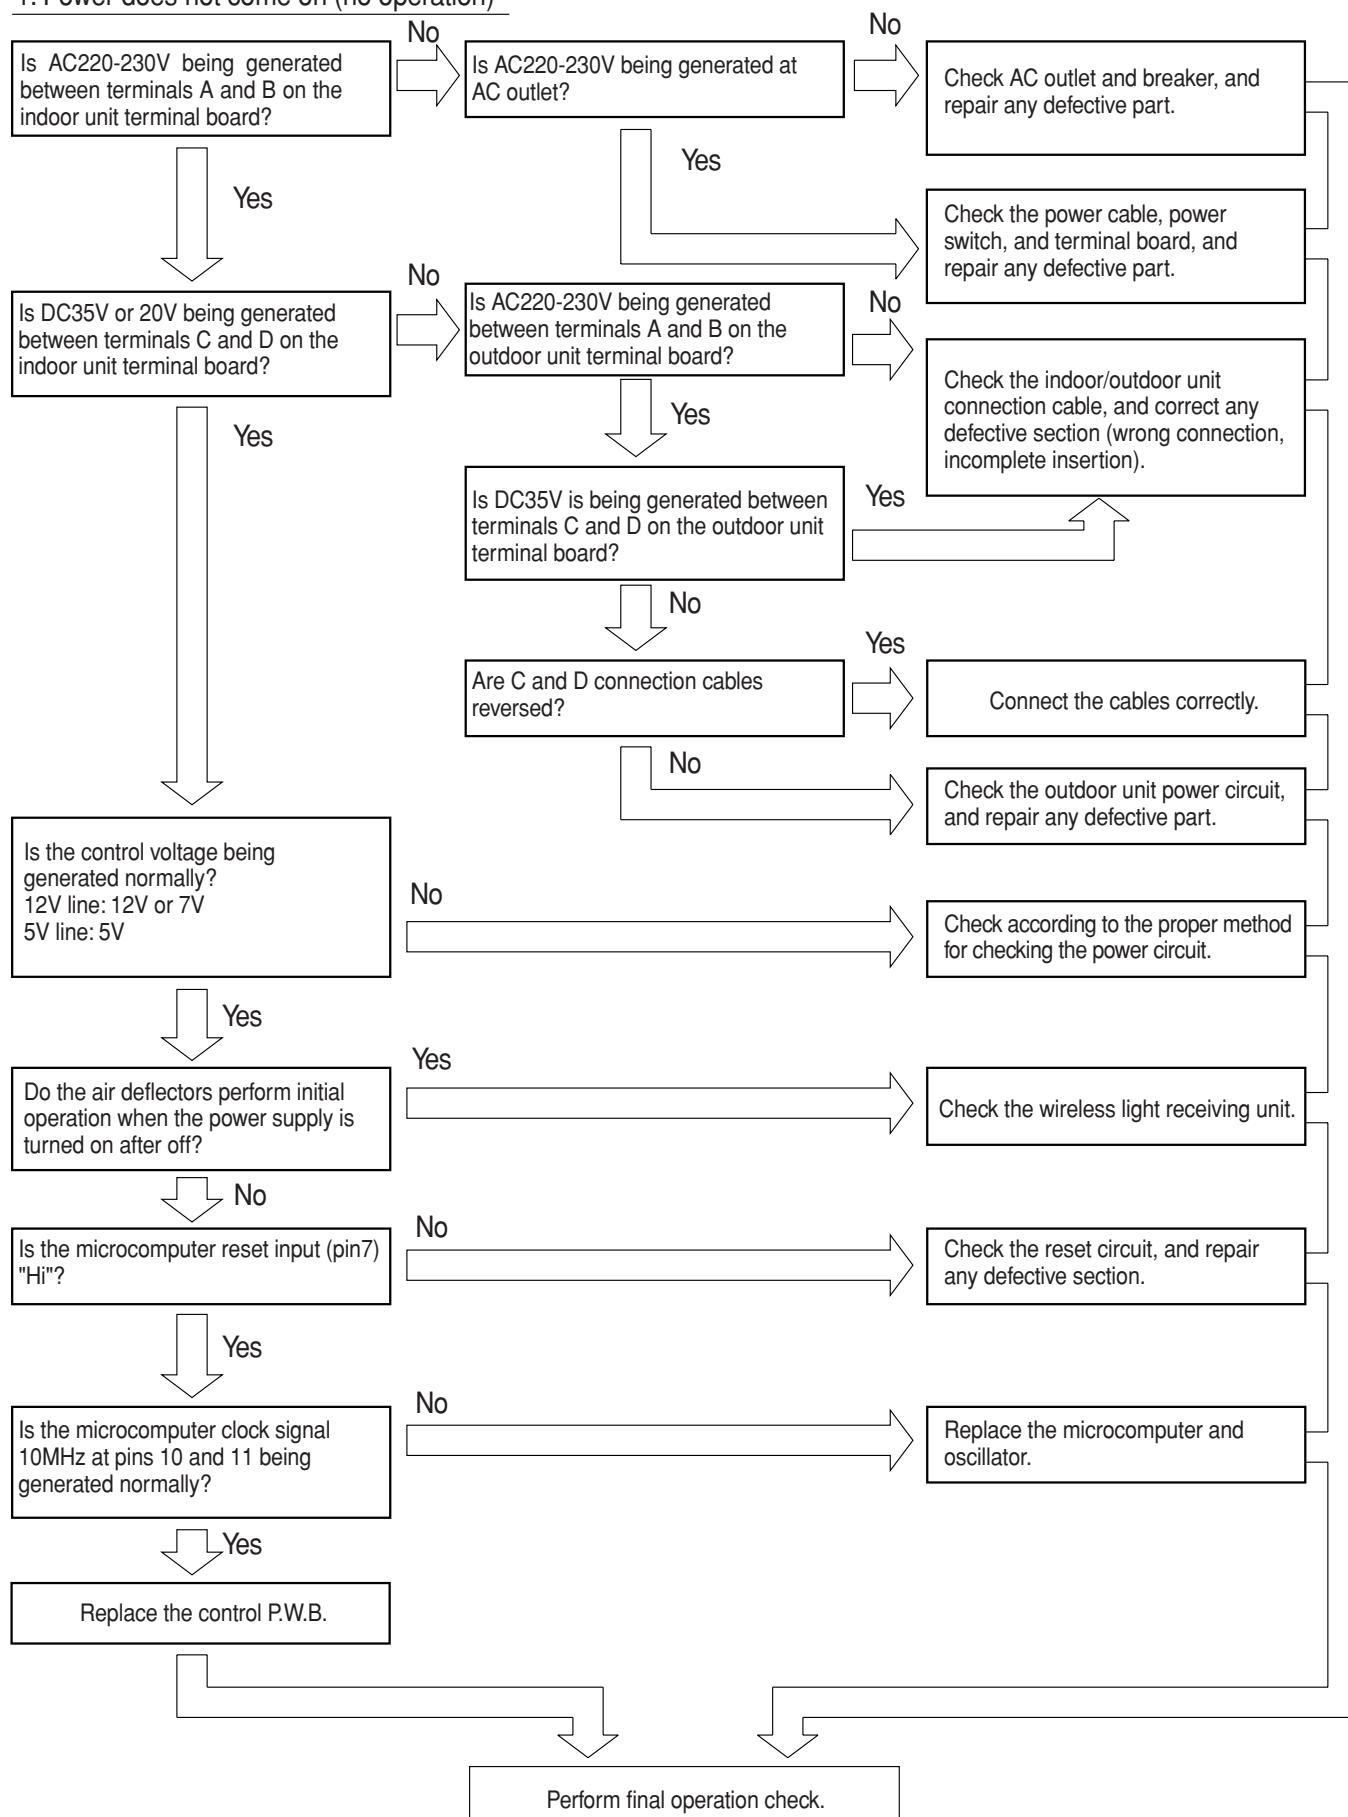


*1: When not in operation, the unit will enter into a low-power standby state, possibly causing a voltage drop to the 12V and 35V lines as shown below.


25V - 20V
12V - 7V



2. Indoor fan does not operate (others are normal)

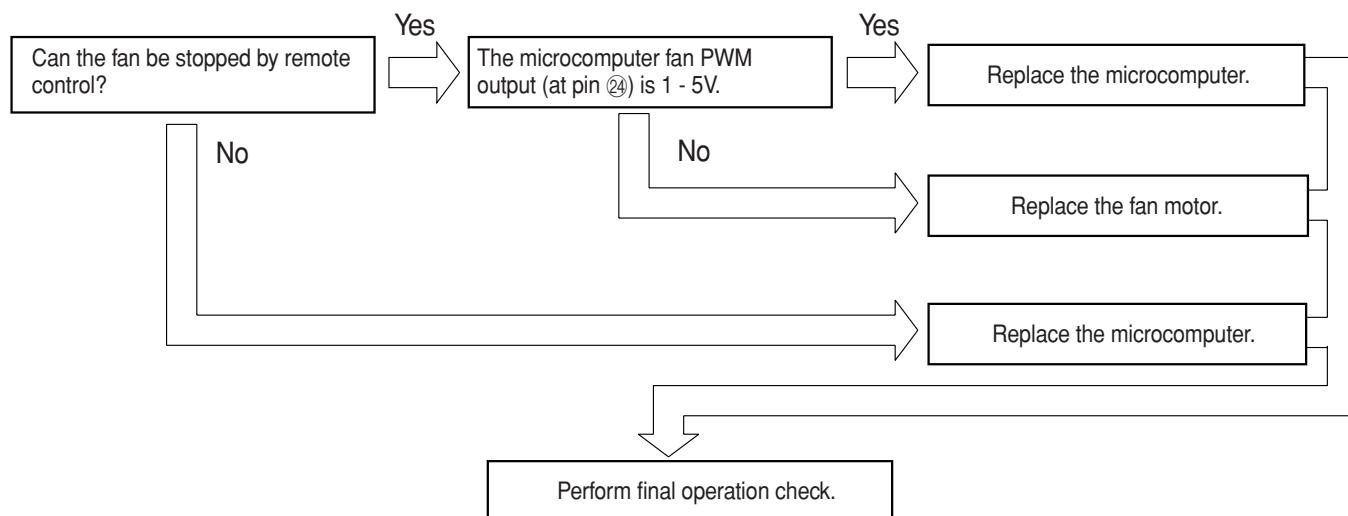


3. Air deflector does not move (others are normal)

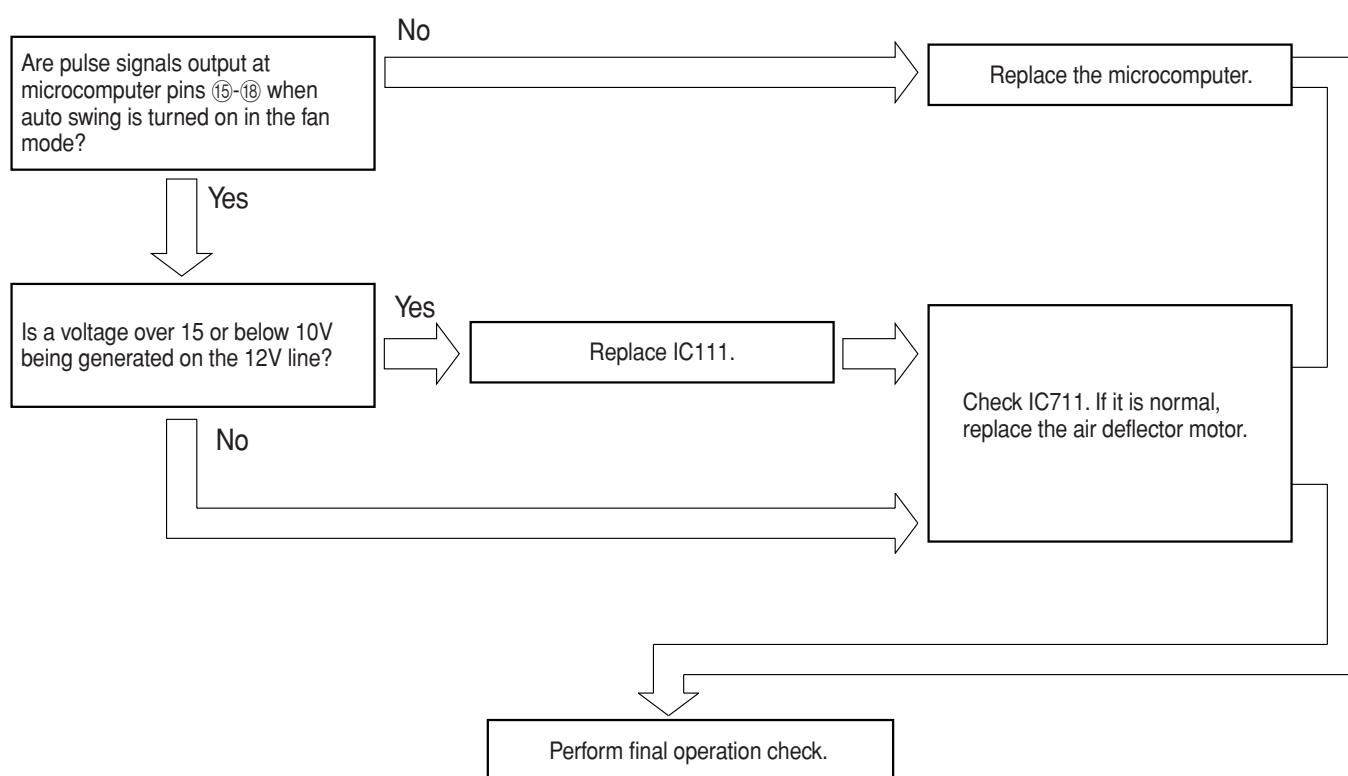




4. Check the control P.W.B. (power circuit)

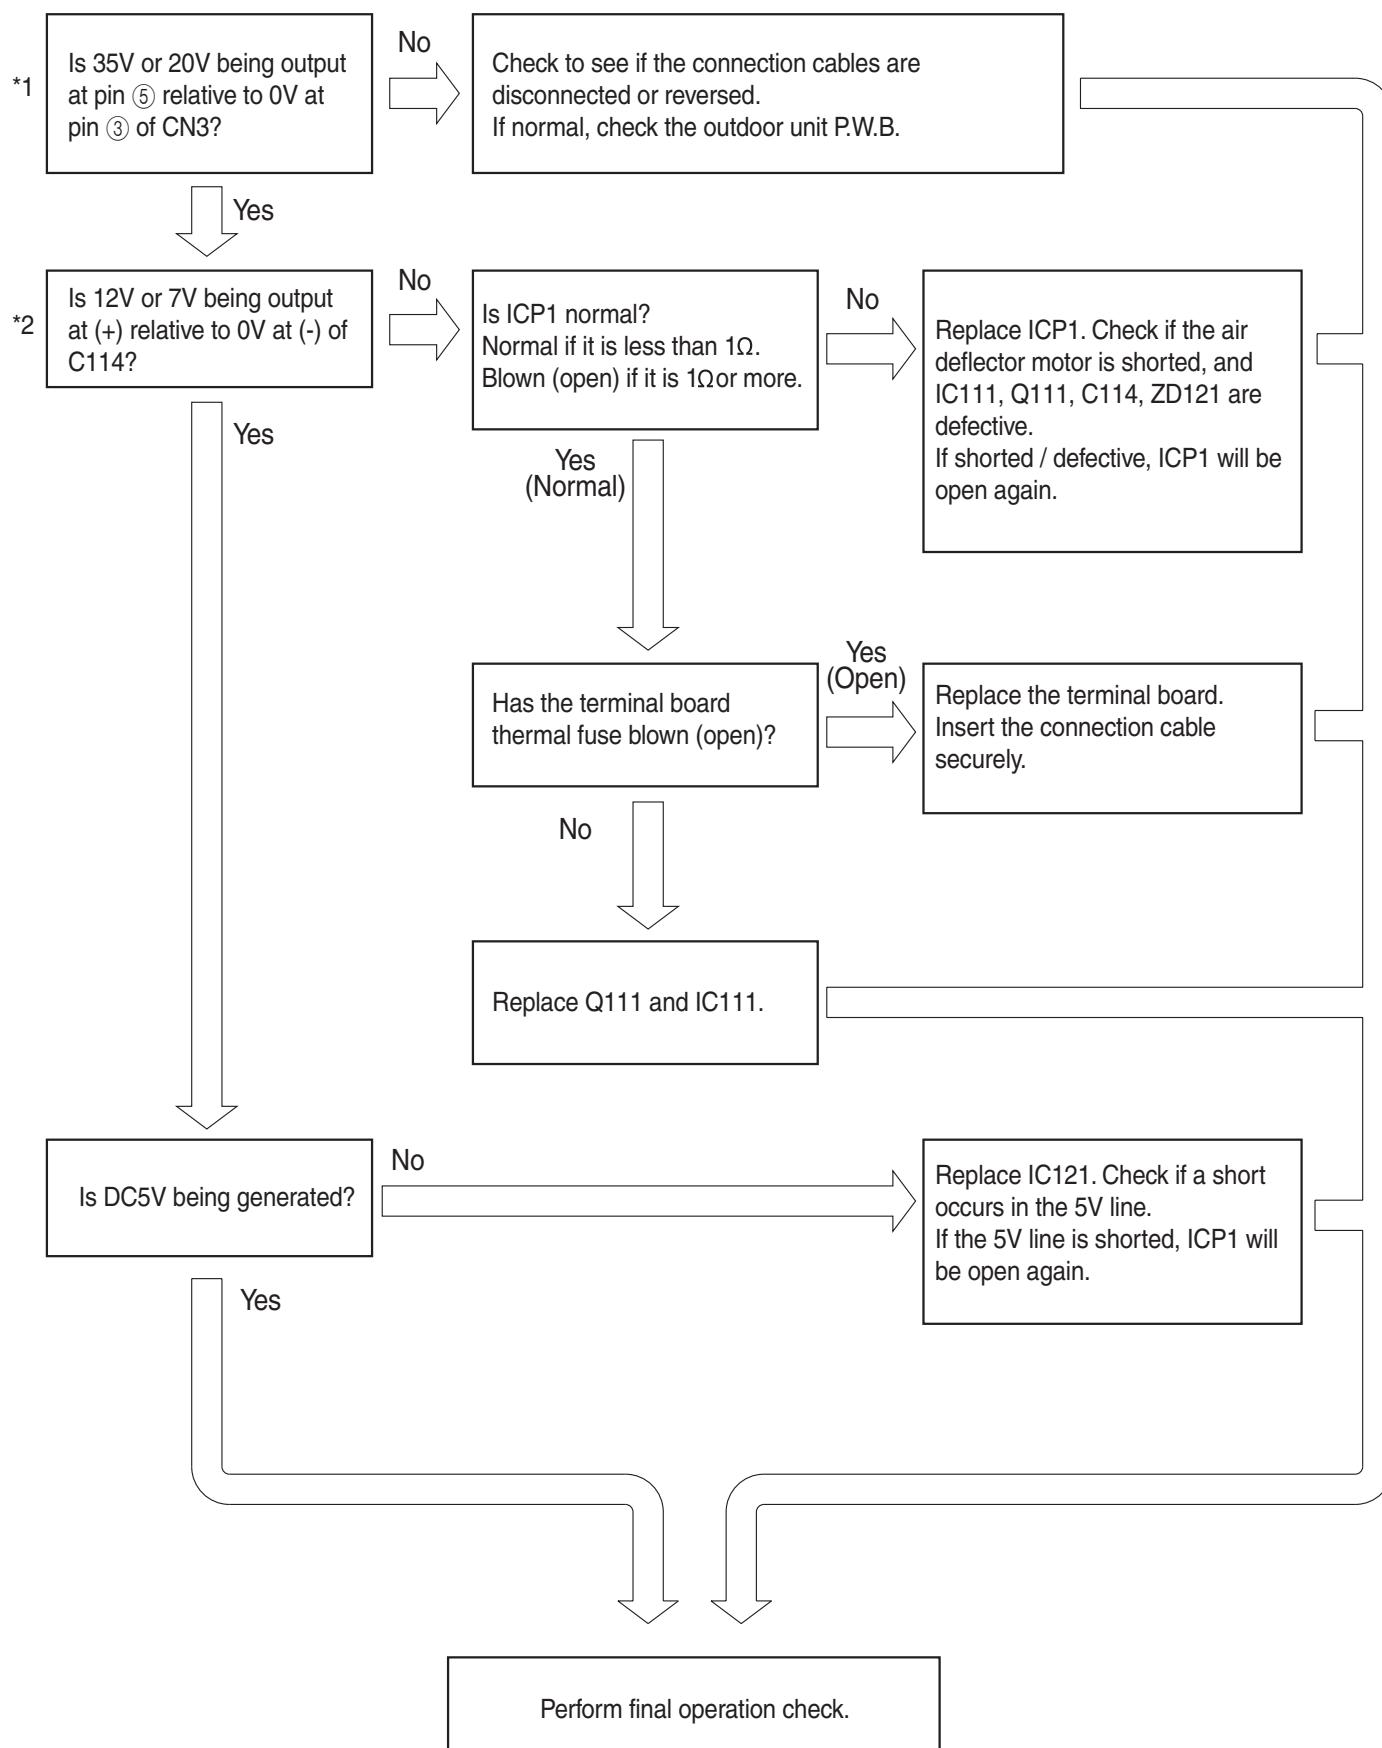



CHECKING THE REMOTE CONTROLLER

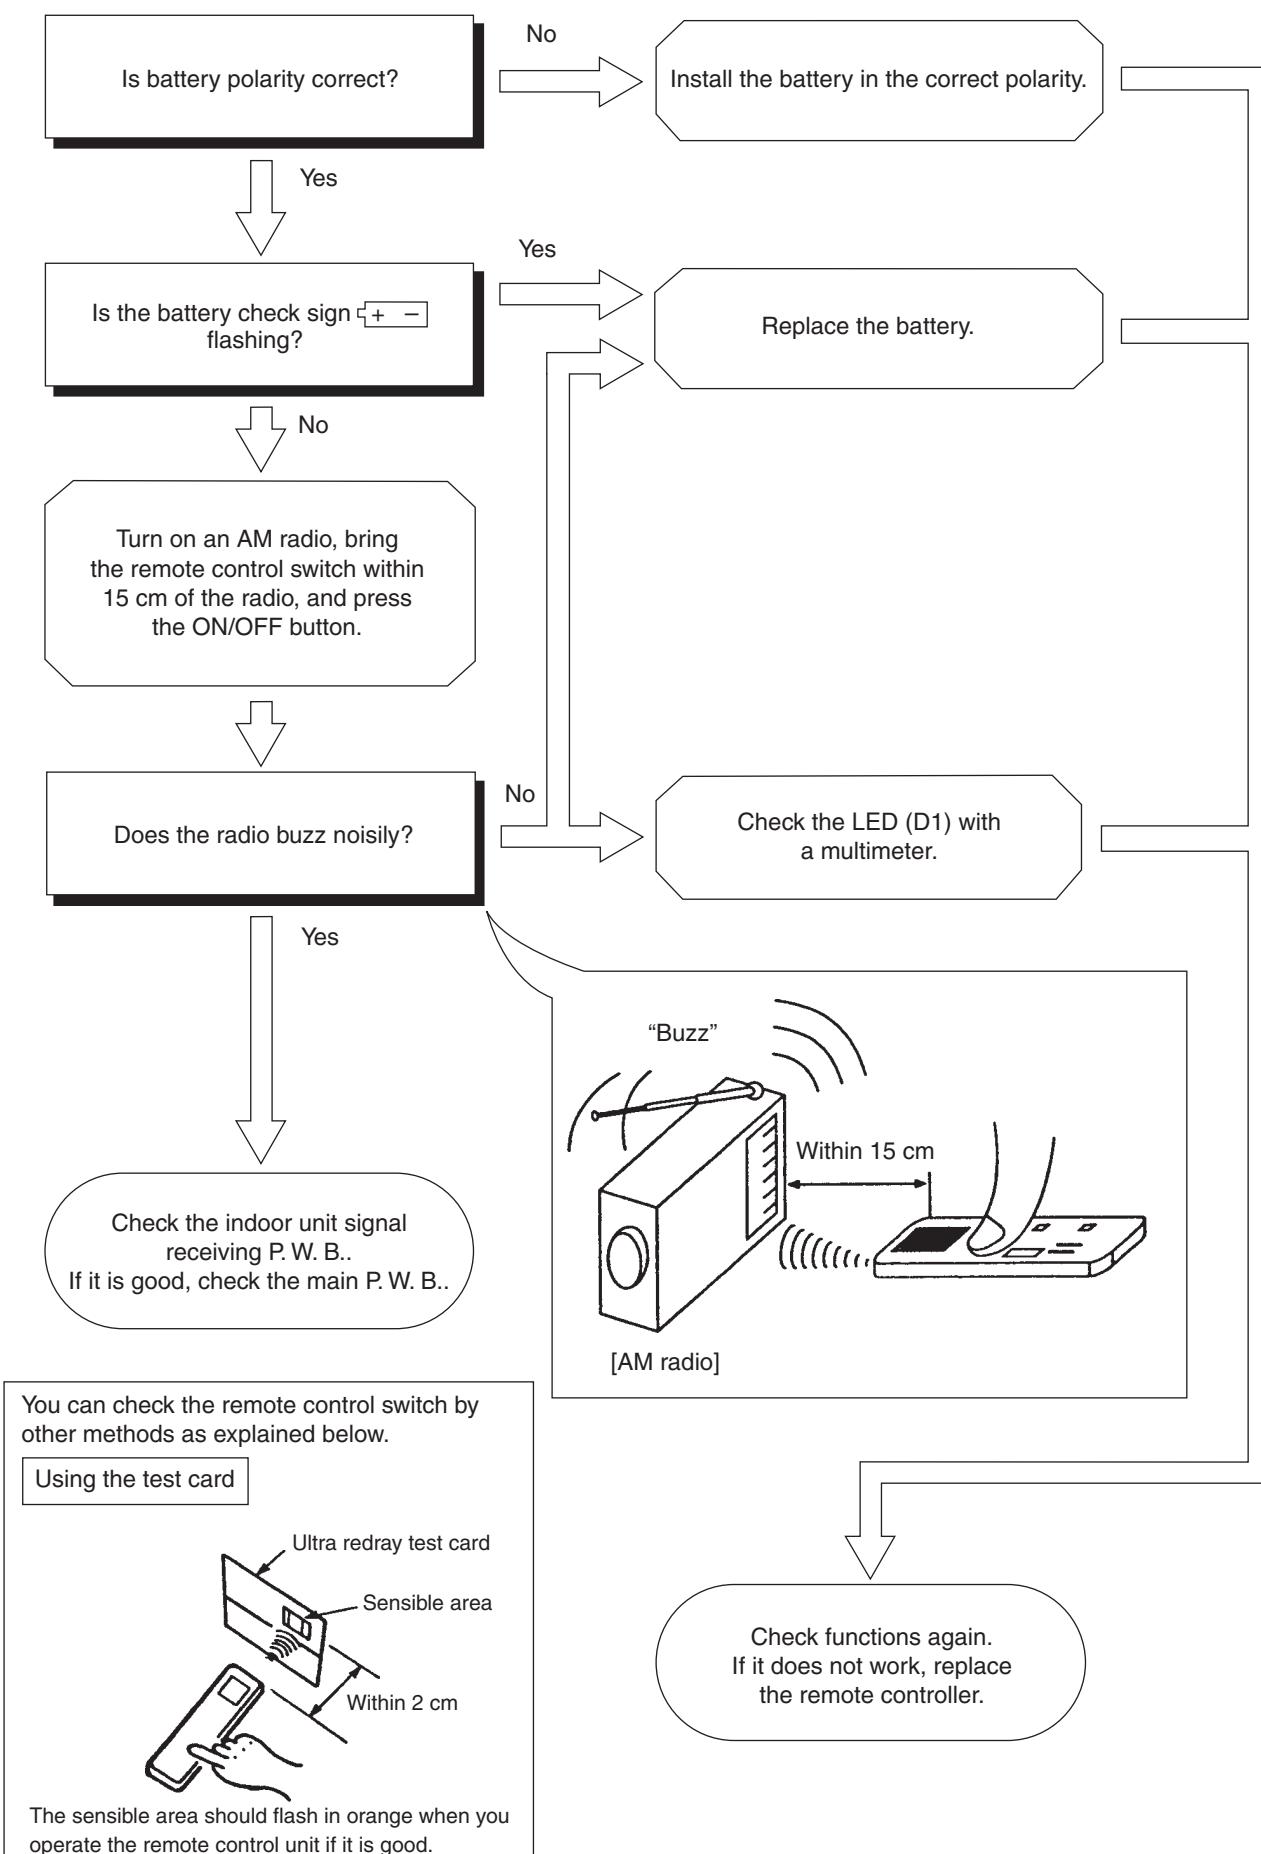



WARNING



PRECAUTIONS FOR SERVICING

Be sure that the power switch is turned off or the power cable is disconnected before servicing.

Removing the PWBs.

System Configuration of Outdoor Unit Electrical Parts

The outdoor unit electrical parts consist of two P.W.B. as shown in the figure.

<Main P.W.B. (M board)>

Contains a rectifier circuit and inverter module, their controlling microcomputer and microcomputer peripheral control circuits. The board incorporates high and low current sections.

<Power P.W.B. (P board)>


Contains a switching power circuit, noise filter, power factor improvement circuit, etc.

The switching power circuit supplies power to electronic circuits on the main P.W.B. through CN3.

* When replacing any P.W.B., disconnect all the cables (including ground wires).


[A. Main P.W.B.]

- 1 Remove four screws securing the main P.W.B. to the cooling fins, and remove the main P.W.B. from the cooling fins.

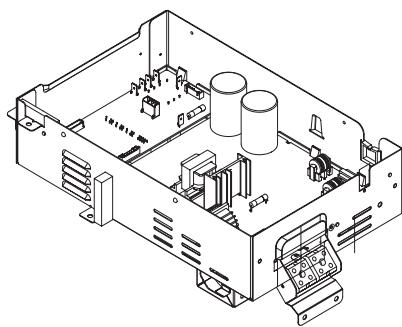

- 2 Open the support latches and raise the main P.W.B. in the direction of the arrow as shown in Fig. A.

<Direction of the main P.W.B. removal>

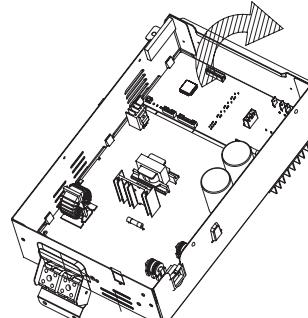

[B. Power P.W.B.]

- 1 Open the support latches and raise the power P.W.B. in the direction of the arrow as shown in Fig. A.

<Direction of the power P.W.B. removal>


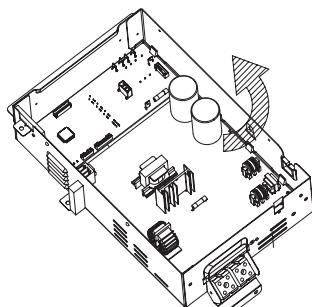


Fig. A

Open these support latches to remove the power P.W.B.



Open these support latches to remove the main P.W.B.


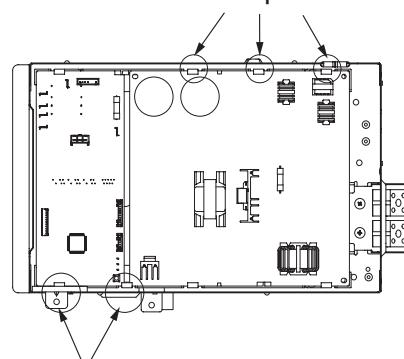


[C. Power Factor Improvement capacitor]

Designed to improve power factor.

To replace the capacitor, remove the power P.W.B. and then:

1. Remove two screws fastening the capacitor seat.
2. Slide the capacitor seat in the direction of the arrow.

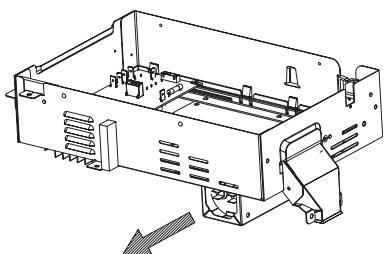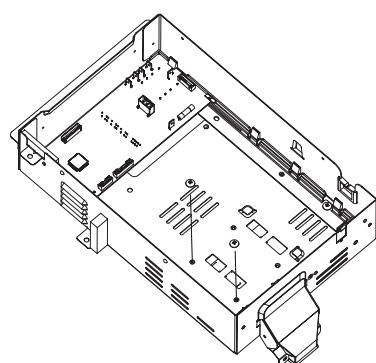


Sliding Direction








CHECKING OUTDOOR UNIT ELECTRICAL PARTS


[No operation or abnormal operation]

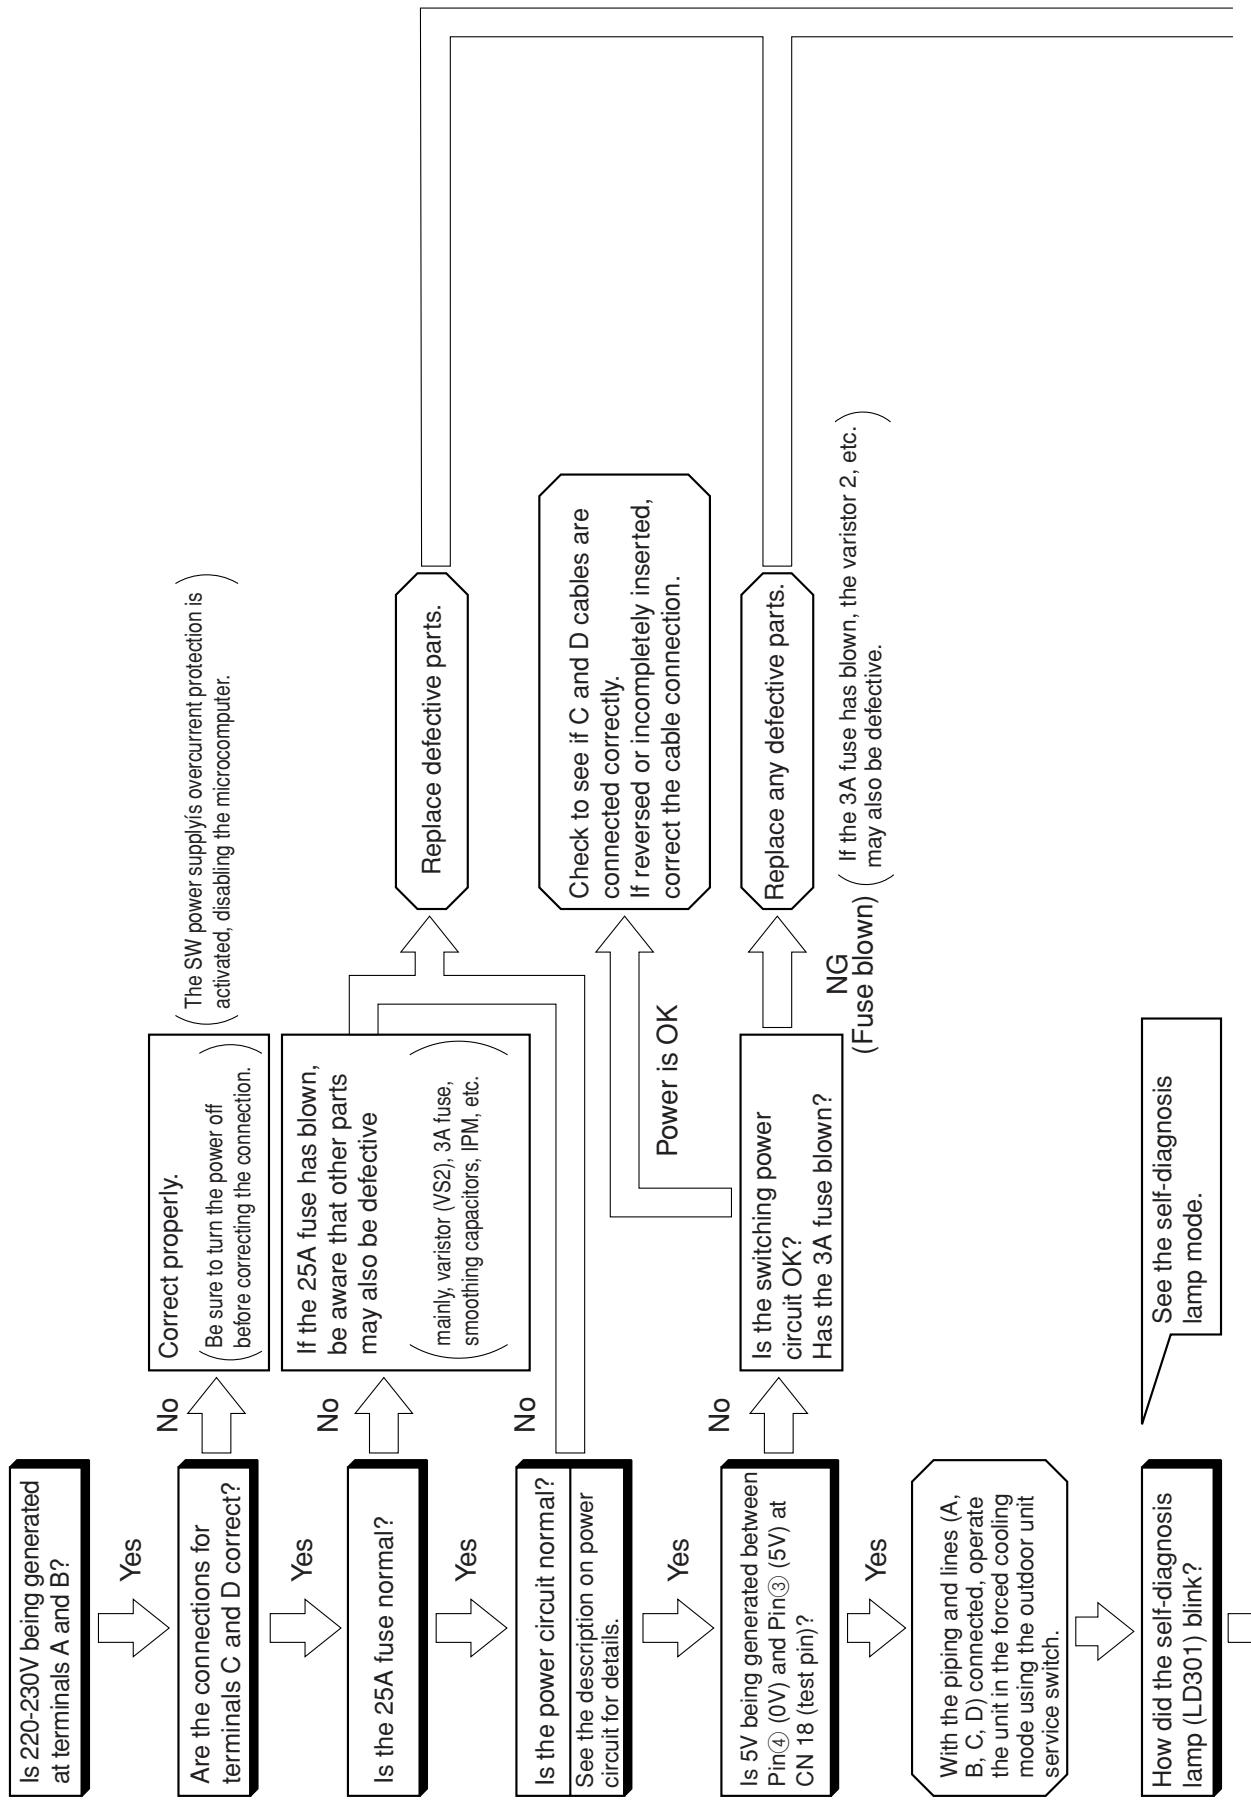


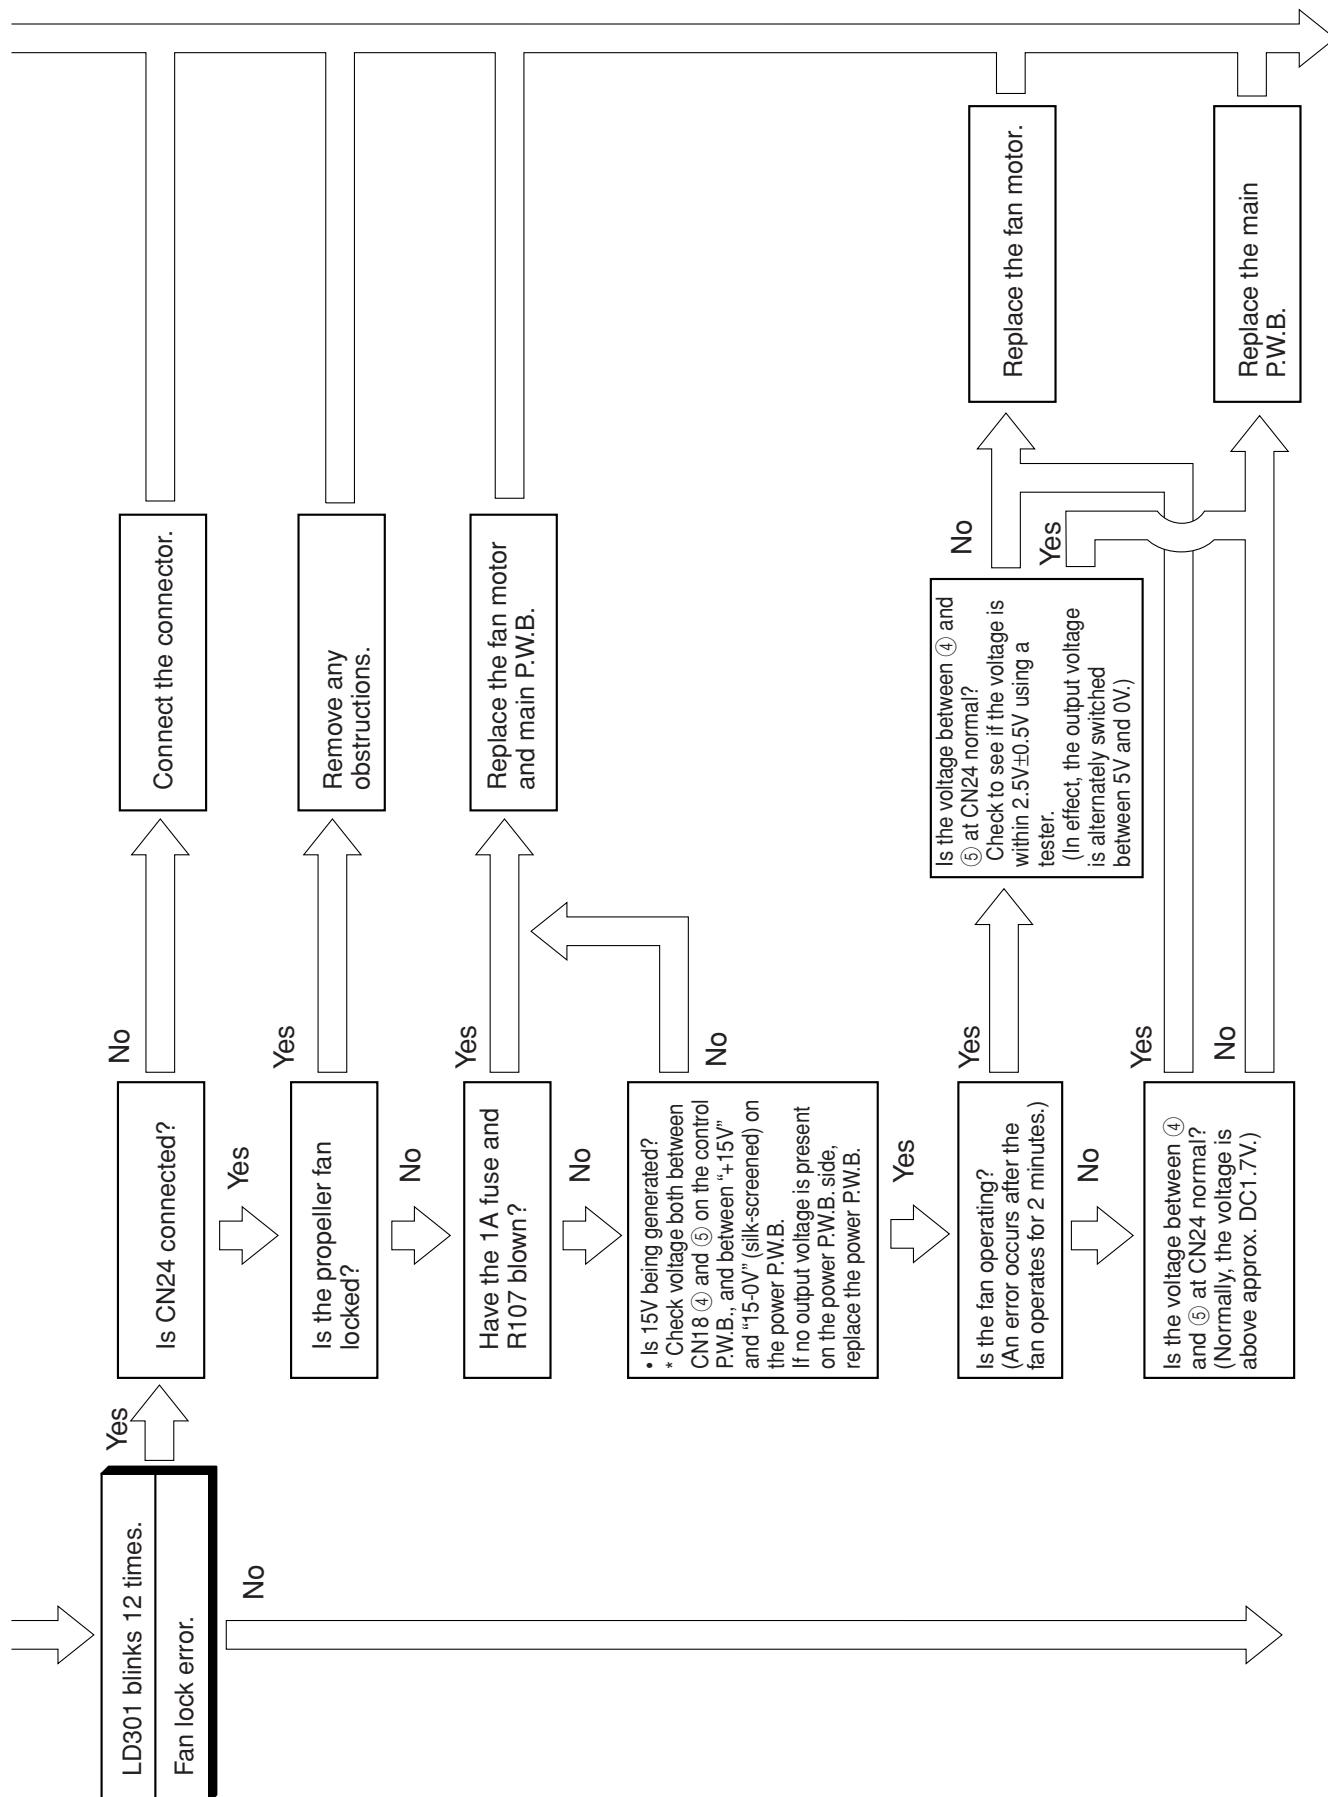


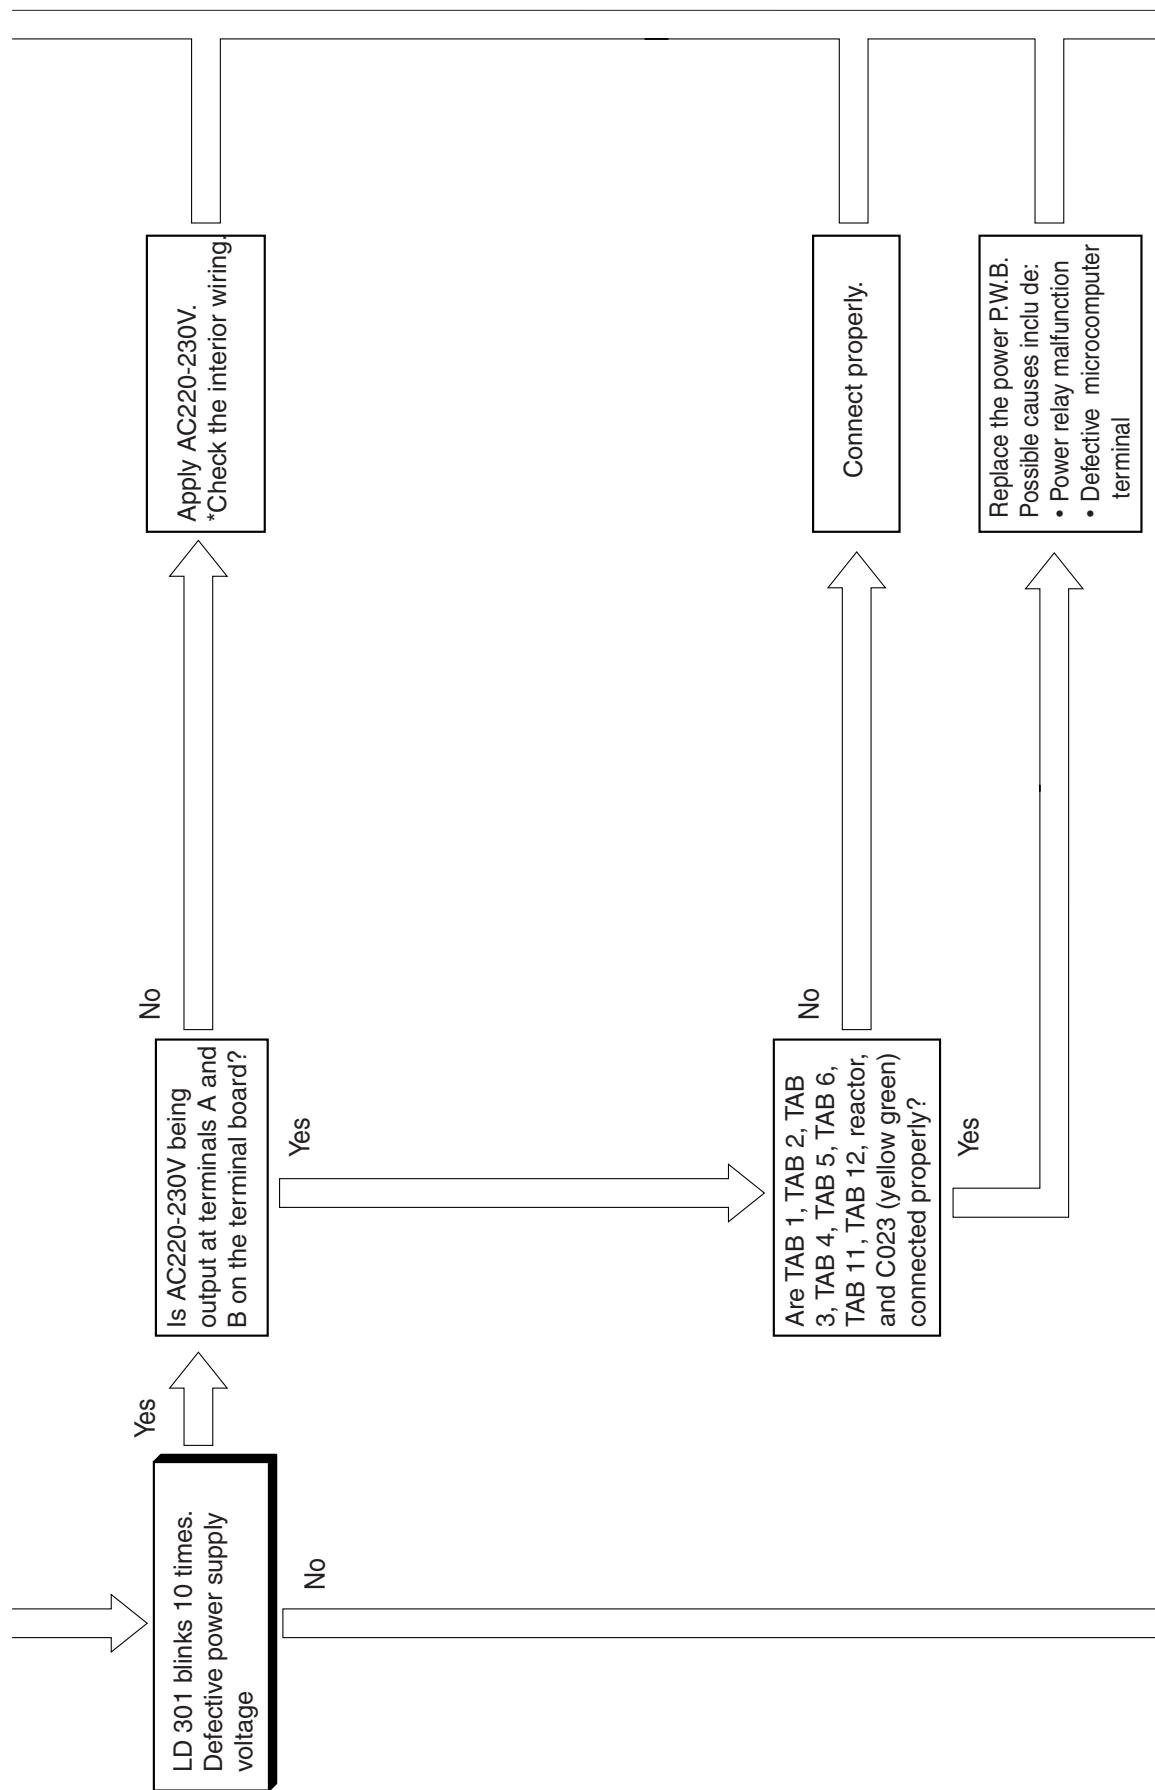

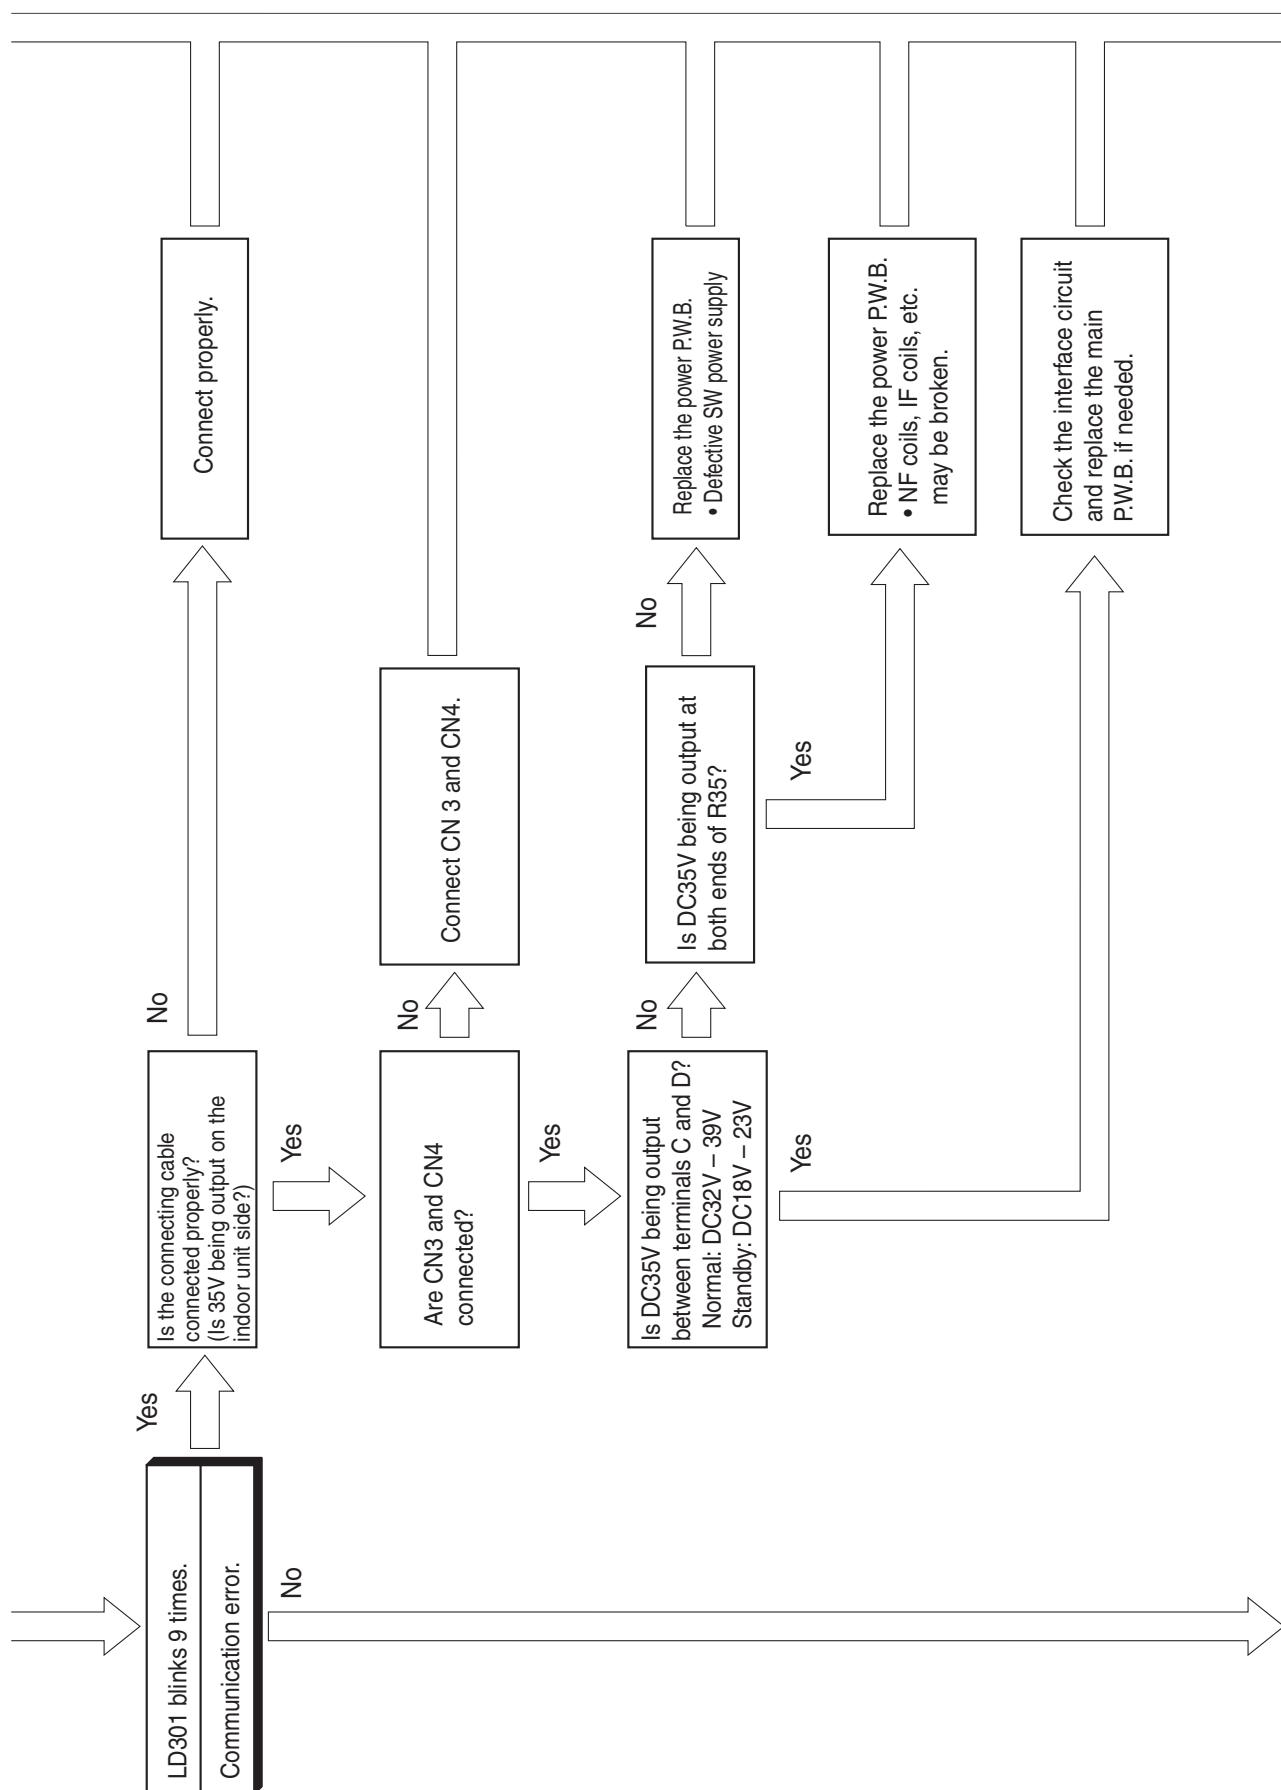

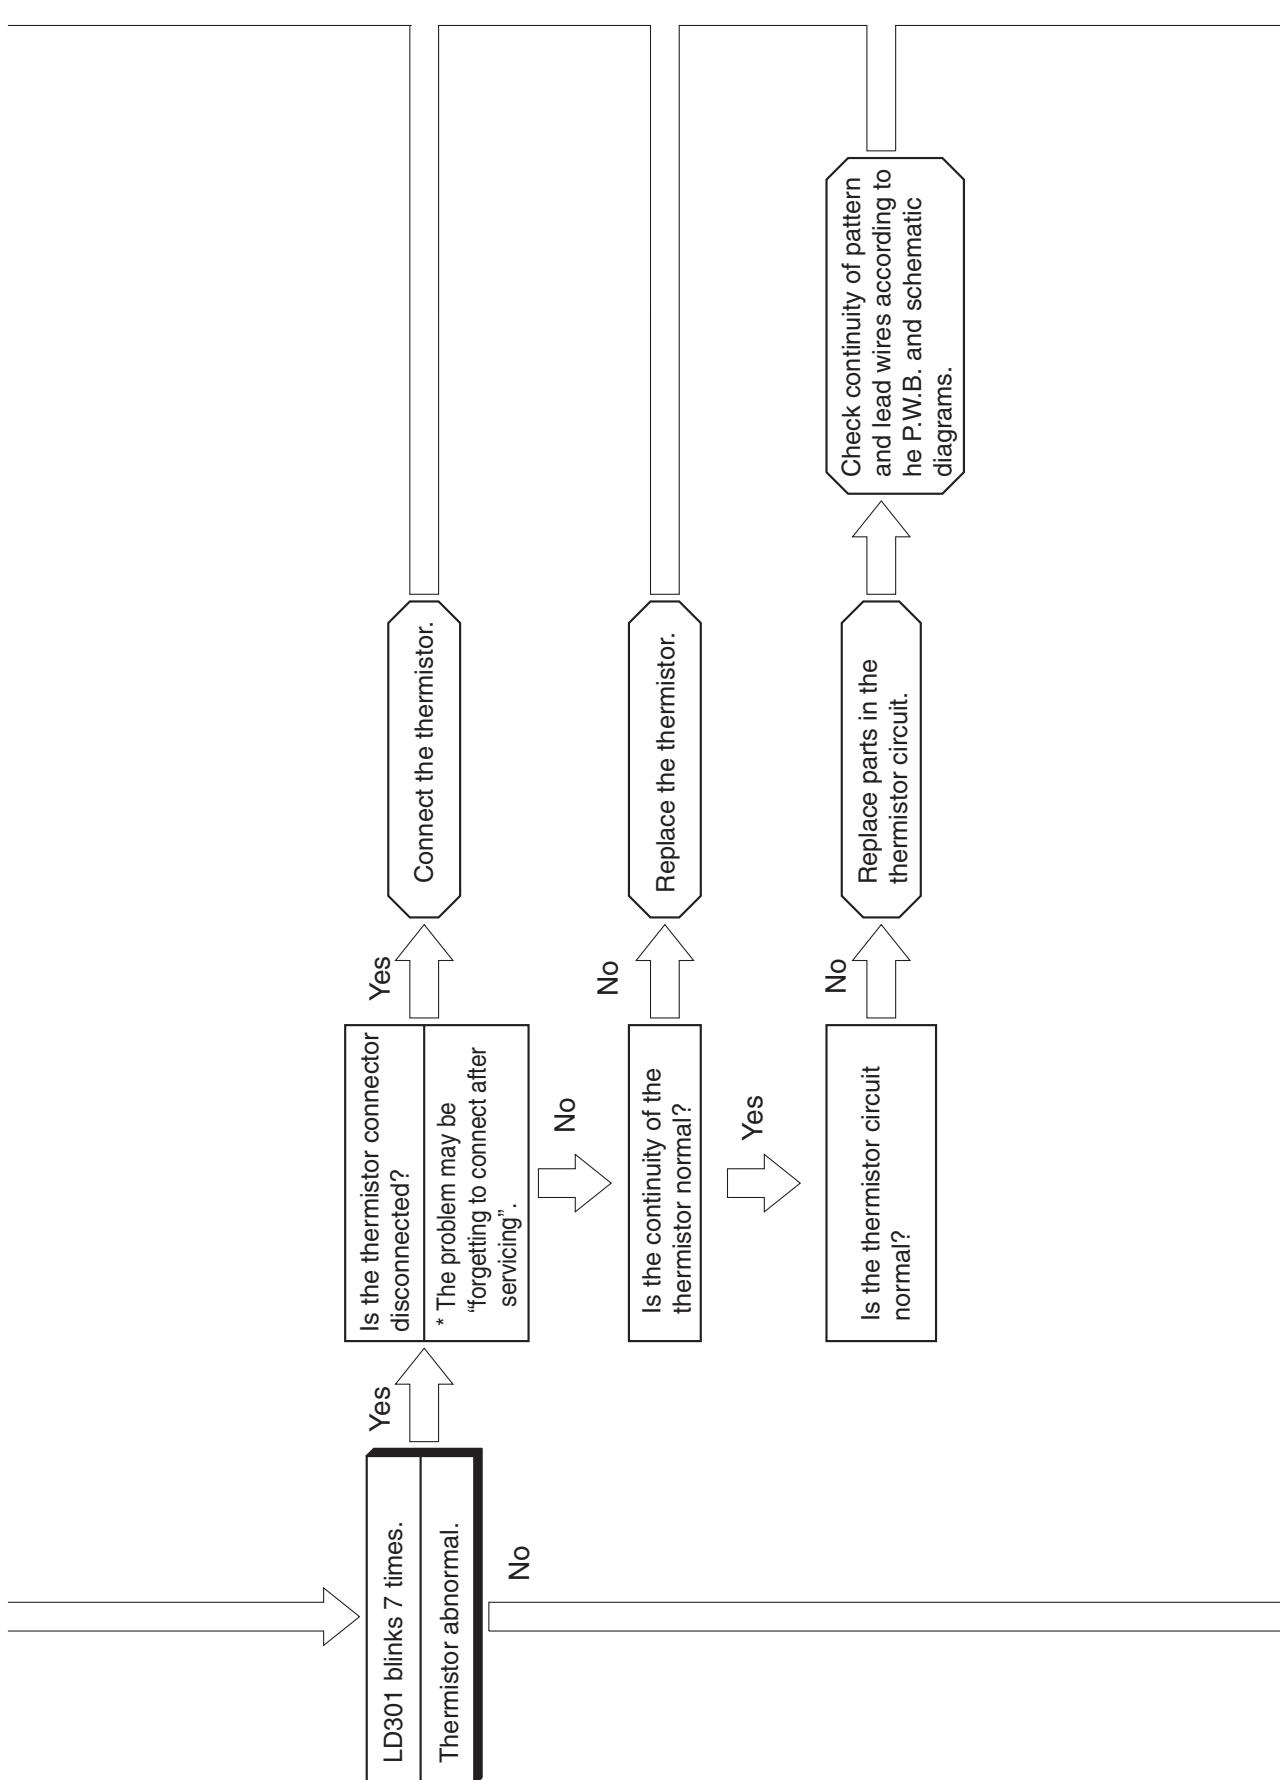

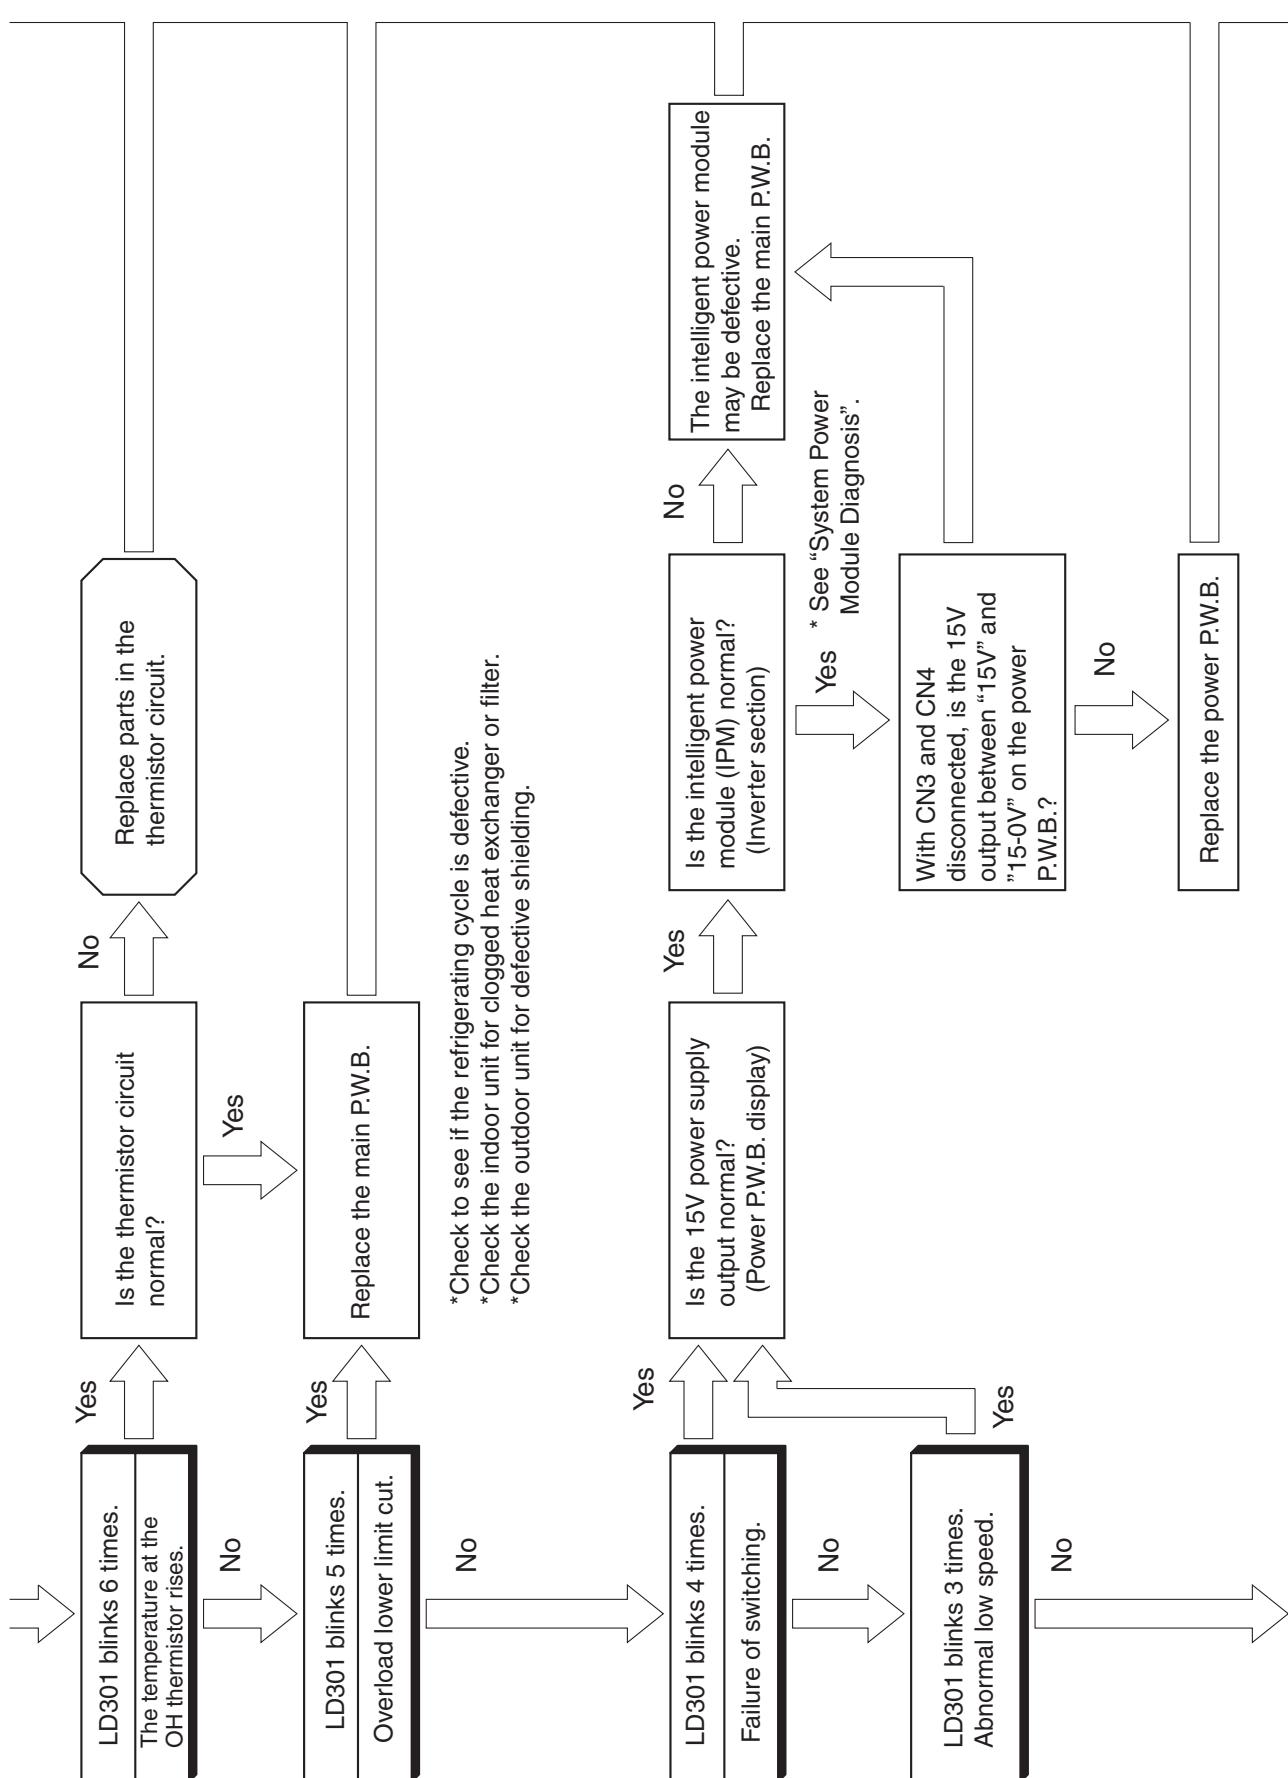

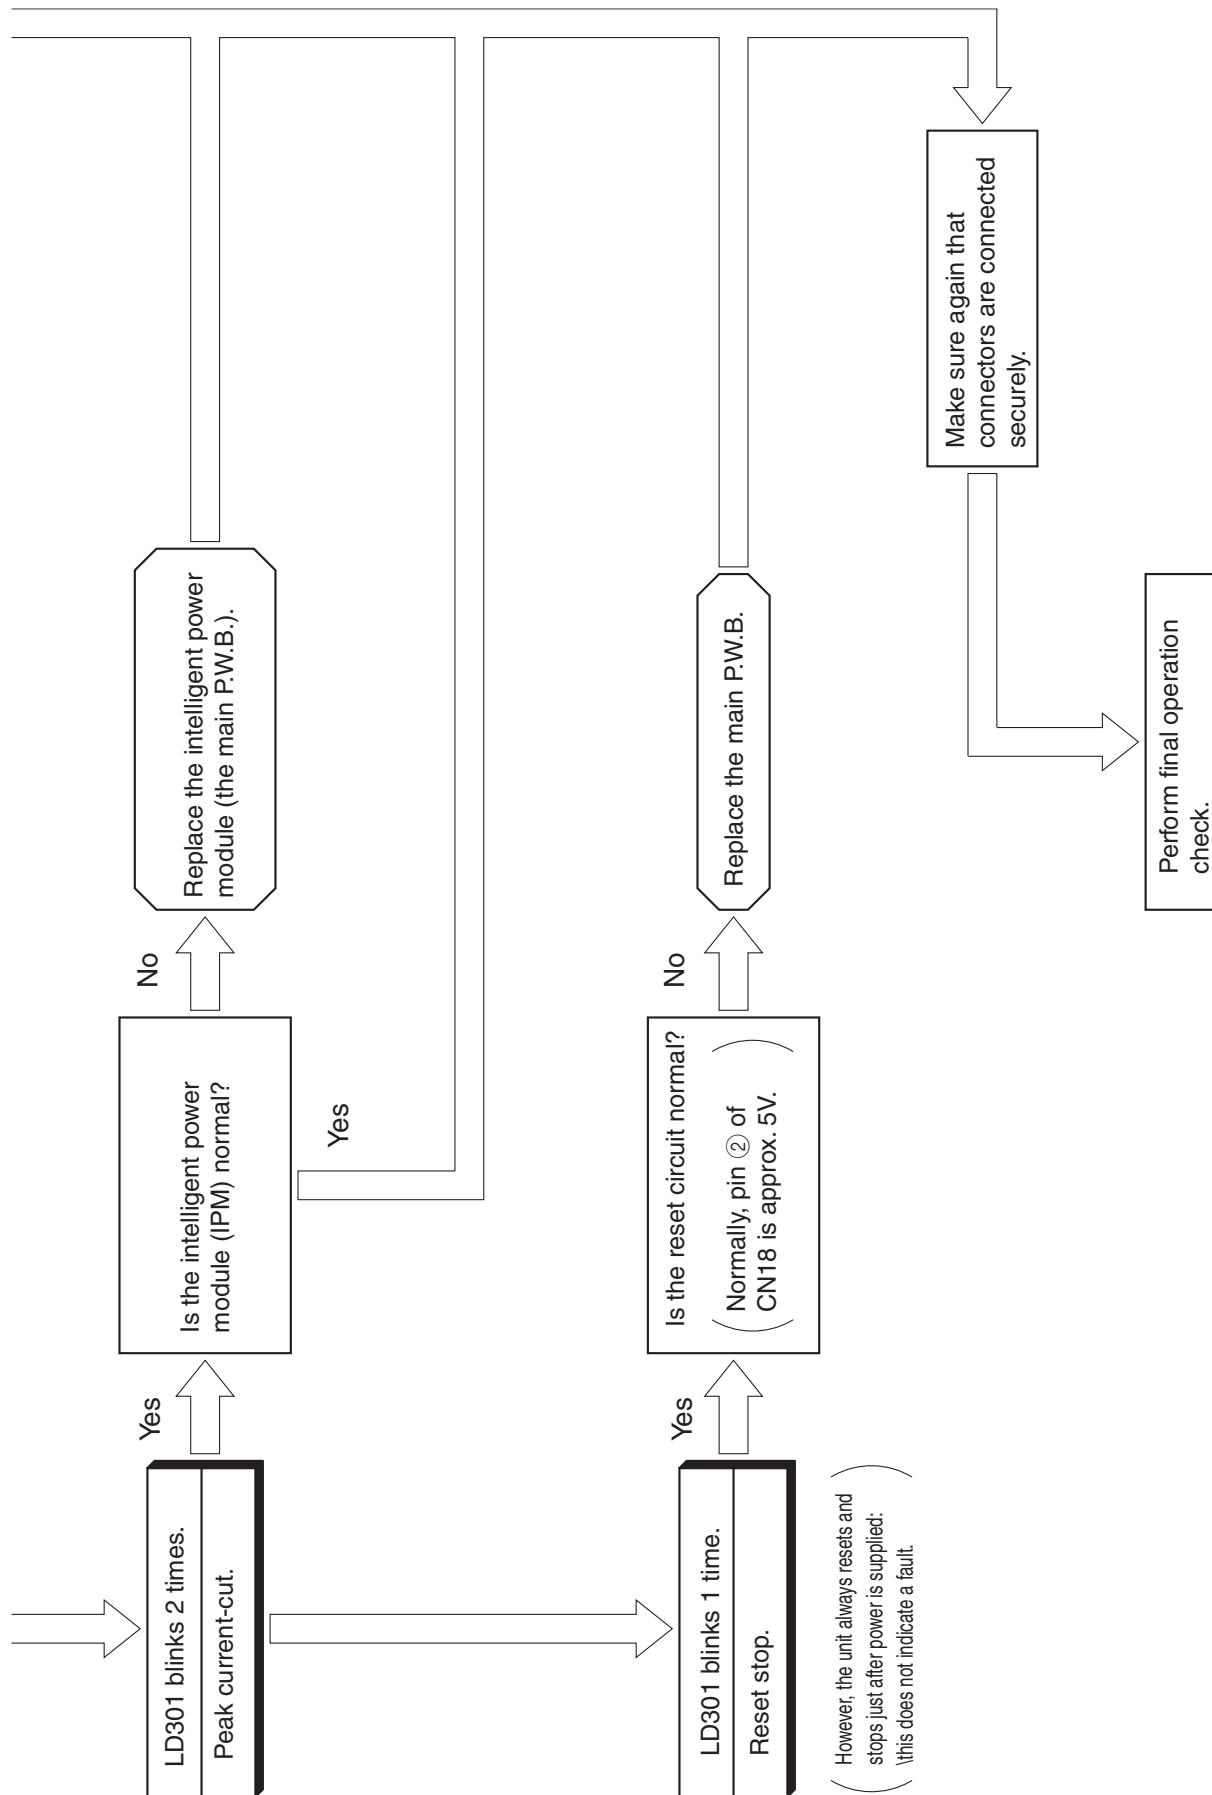




CHECKING THE REFRIGERATING CYCLE

(JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

1. Troubleshooting procedure (No operation, No heating, No cooling)

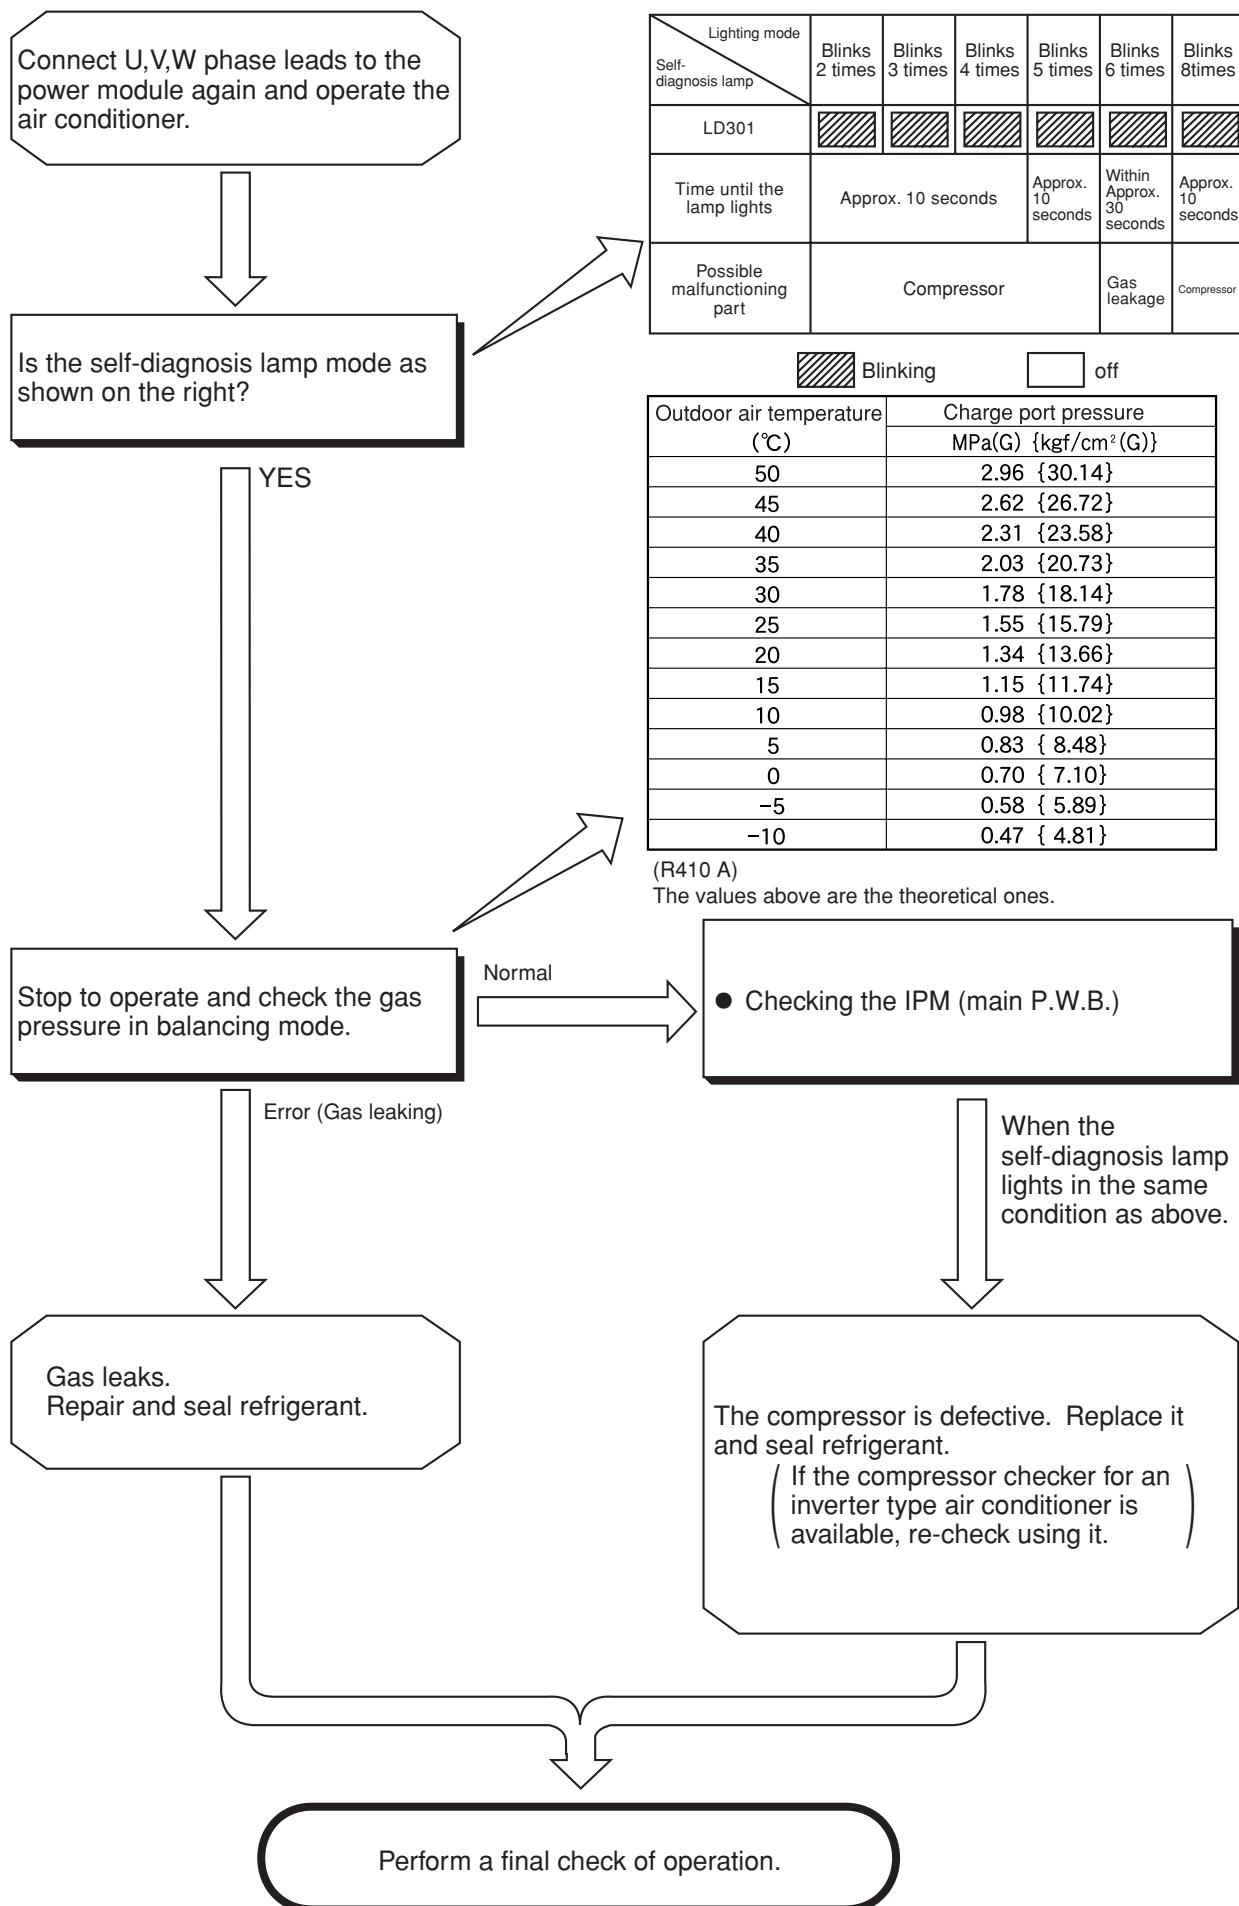




HOW TO OPERATE USING THE SERVICE SWITCH THE OUTDOOR UNIT

MODEL RAC-25YH5, RAC-35YH5

1. Turn off the power switch.
2. Remove the electrical box cover.
3. Turn on the power switch
4. After waiting for 30 seconds, push the service switch for a second.

LD303 (red) will light and the unit will operate in the forced cooling mode at this time.

Never operate the unit for more than 5 minutes.

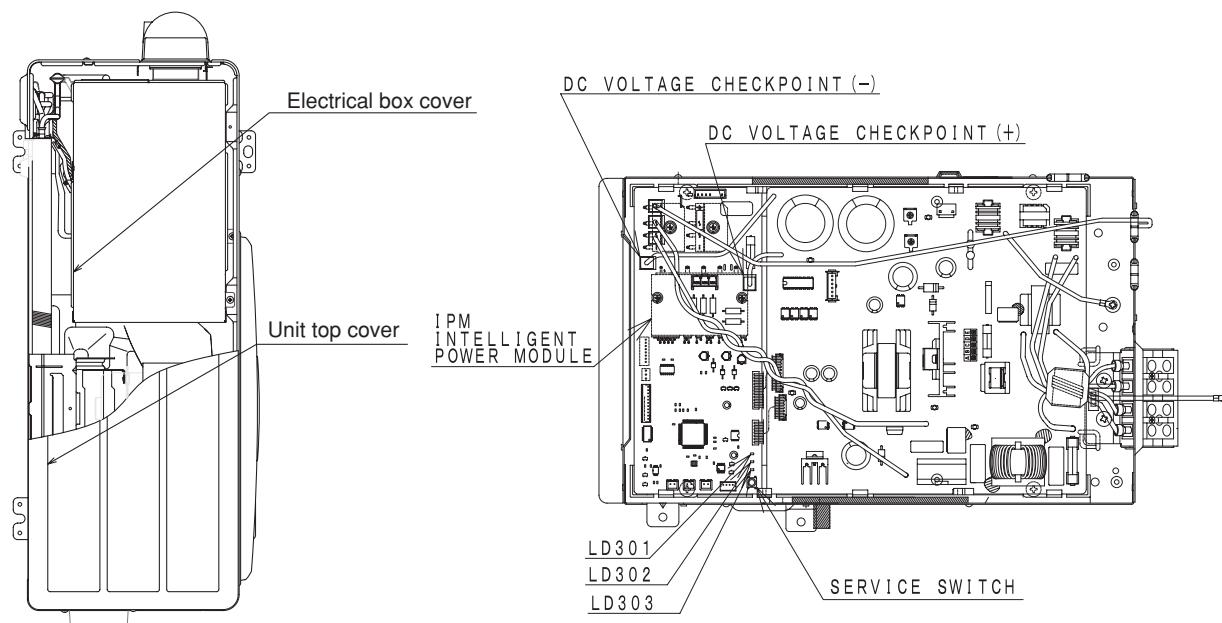

(Cautions)

- (1) If interface signal (DC 35V) terminals C and D are not connected when the outdoor unit is in forced cool mode, the outdoor unit defect indicator (LD301) will blink 9 times during operation to indicate communication error.
- (2) If checking is done with the compressor connector disconnected, the unit will stop and LD301 will blink 4 times.


Be sure to push the service switch for a second again to stop the forced cool operation..

HOW TO OPERATE THE OUTDOOR UNIT INDEPENDENTLY

1. Connect the large dia. pipe side and small dia. pipe side service valve using a pipe.

Connect the small diameter service valve and the large diameter service valve using the reducing union and copper pipe as shown on the right.

Charge refrigerant of 300g after vacuuming (*1)

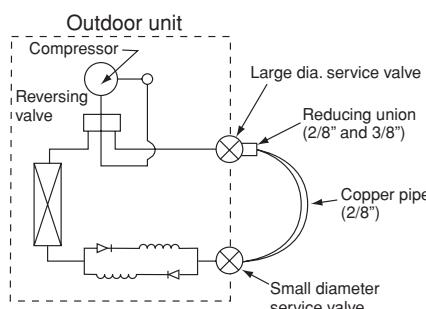

Parts to be prepared

- (1) Reducing union
2/8" (6.35 mm)
3/8" (9.52 mm)
- (2) Copper pipe (2/8" and 3/8")

Do not operate for more than 5 minutes

The operation method is the same as "How to operate using the connector to servicing the outdoor unit".

*1 The charging amount of 200g is equivalent to the load in normal operation.



IPM (Intelligent Power Module) DIAGNOSIS

	SSM1001M
Circuit diagram of the device	
Circuit diagram of the module	
Terminals symbol mark of the module * See next page for measuring value using multimeter	



Diagnosis procedure of IPM using multimeter.

<Inverter section>


Set the multimeter function to resistance $\times 100$. If the multimeter dose not have $\times 100$ range, please select its range from $\times 1$ to $\times 100$.

The judgment shall be OK. When the measurement was high resistance.

(Please consider that the probe polarity will be reserve when use a digital mulimeter due to its battery connection inside)

<note>


Sometimes, it may misjudge as OK because of low conductivity when power module was damaged as disconnect mode. In this case, please check the resistance by reversing the probe polarity and consider OK when it was low resistance. Also, it is OK if the resistance was as same as the other phases (U,V,W).

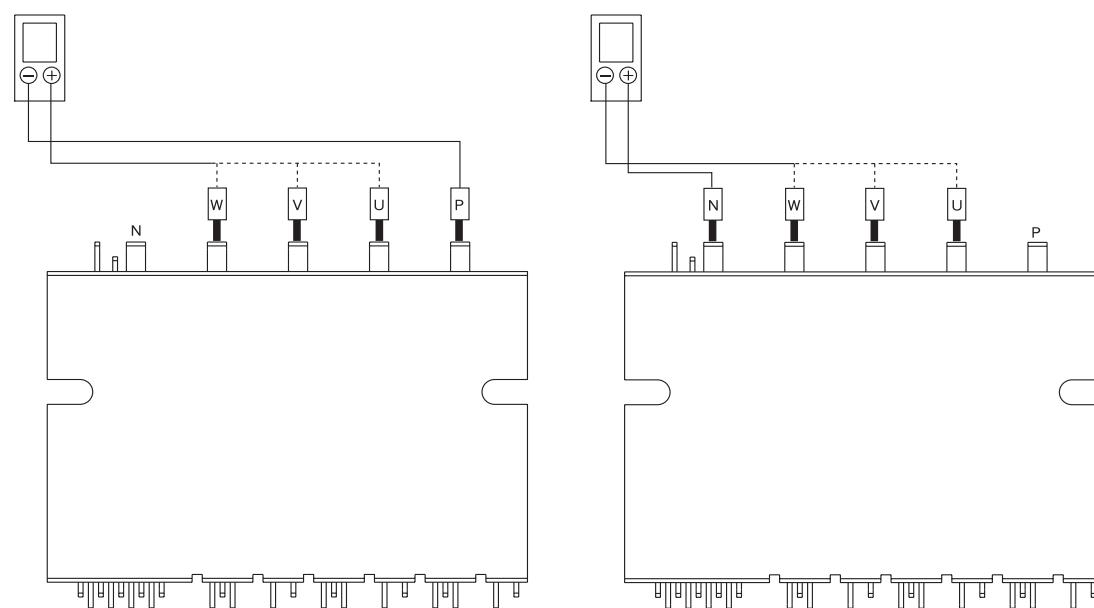

<Driver circuit (internal IC)>

15V will not be generated when the internal IC has malfunctioned.

To find the malfunction either the power supply of power P.W.B or internal IC, please follow the procedure following.

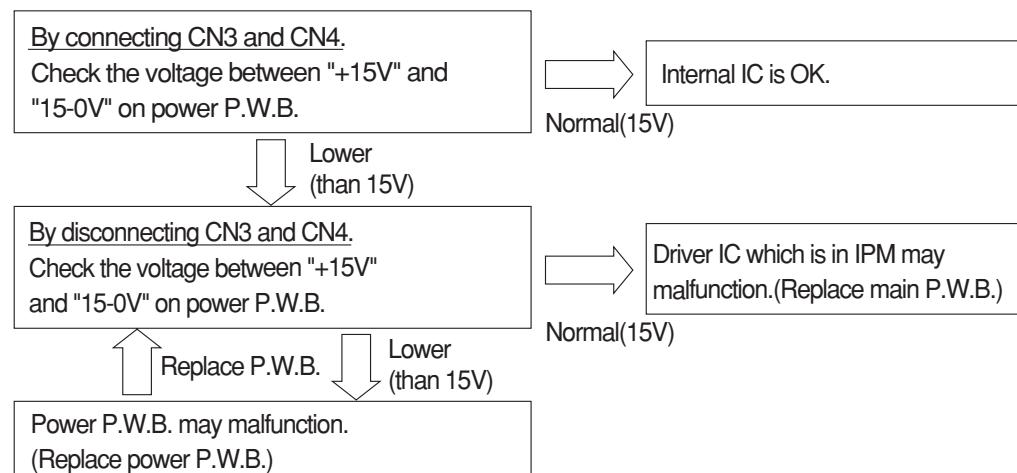



Procedure for Disassembly and Reassembly

INDOOR UNIT RAS-25YH5, RAS-35YH5

1. Front Panel

- (1) Pull up the washable panel by holding it at both lower sides with both hands.

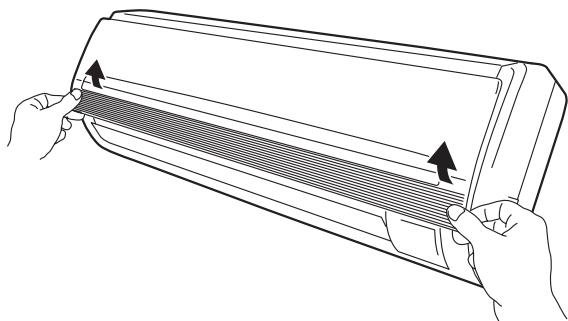


Fig. 1

- (2) When the panel opens full, push the inner part of the right arm into the inside and pull the panel forward while closing it gradually.

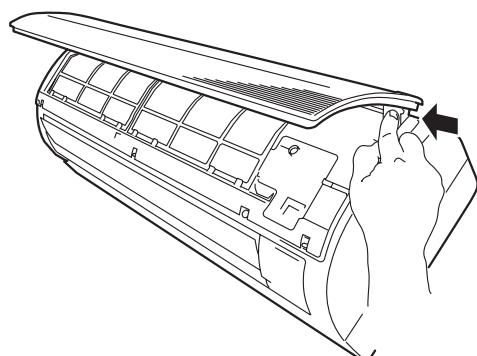


Fig. 2

2. Front cover

- (1) After removing two screws, pull the center of the front cover forward and release the claws.
(2) Hold the front cover at both lower sides and pull them forward to remove.


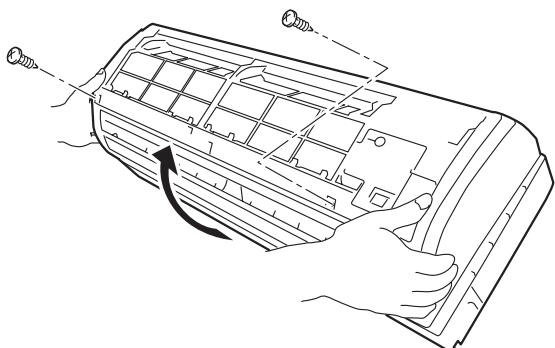


Fig. 3

3. Control P.W.B. and Indicating P.W.B

- (1) Remove each connector from the lead wire.
(2) Remove the four P.W.B supports from the control P.W.B..
(3) Pull the support hook at the upper side of the indication lamp of the indicating P.W.B and pull out the P.W.B forward.

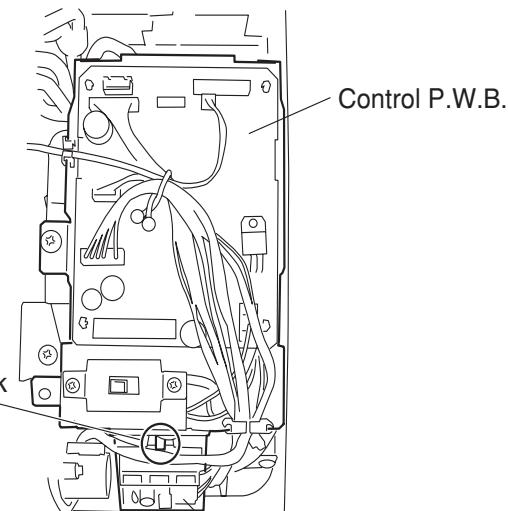

Indicating P.W.B

Fig. 4



4. Tangential air flow fan and fan motor

- (1) Remove two screws locking the drain pan.
- (2) Press to lower the hook at the center of the unit a little and pull the claw forward to remove the drain pan.

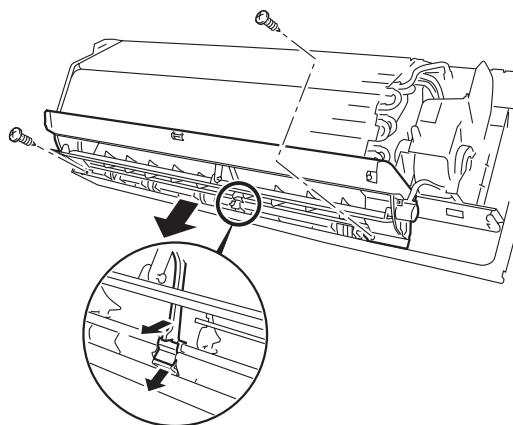


Fig. 5

- (3) Remove the screws from the upper and lower bearing covers.
- (4) Remove the locking hook of the lower bearing cover from the Cabinet.

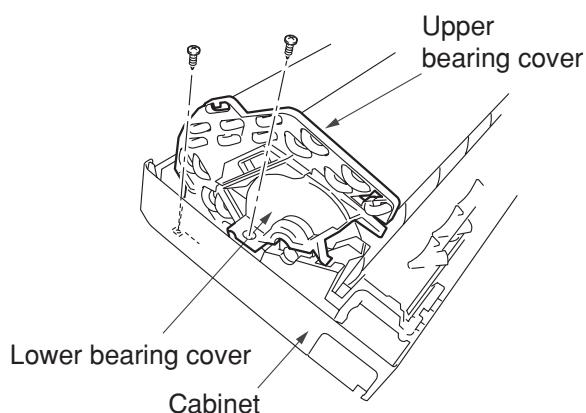


Fig. 6

- (5) Remove two lock screws from the fan motor holder.
- (6) Pull up the evaporator by holding it at the lower side. Insert a screwdriver through the space between the evaporator and drain chute and loosen the fan lock screw to remove the fan and fan motor.

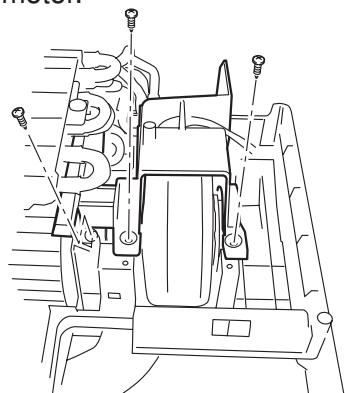


Fig. 7

OUTDOOR UNIT RAC-25YH5, RAC-35YH5

1. Electrical parts

- (1) Remove the service value cover lock screws and lower the cover to remove it.
- (2) Remove the top cover lock screw and raise the cover to remove it.

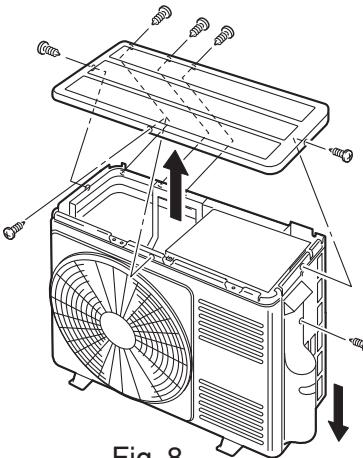


Fig. 8

- (3) Remove the front cover lock screw.
- (4) Lower the right side of the front cover and pull it forward. Then, remove the cover from the hook.
- (5) Pull the right side of the front cover a little and pull up the left side to remove it from the hook.

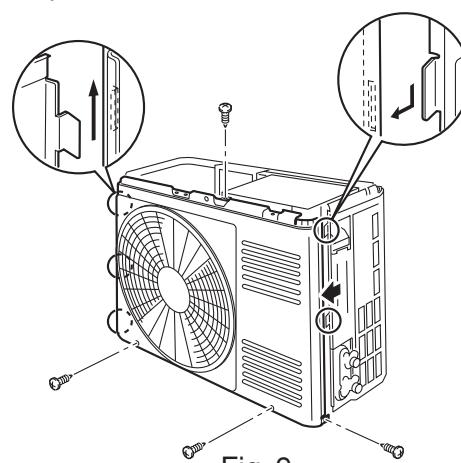


Fig. 9

- (6) Remove each connector and earth cable from the lead wire.
- (7) Remove four lock screws from the main P.W.B. and pull two support hooks at the front side to remove the P.W.B.
- (8) Pull three support hooks at the rear side of the Power P.W.B. to remove the P.W.B.


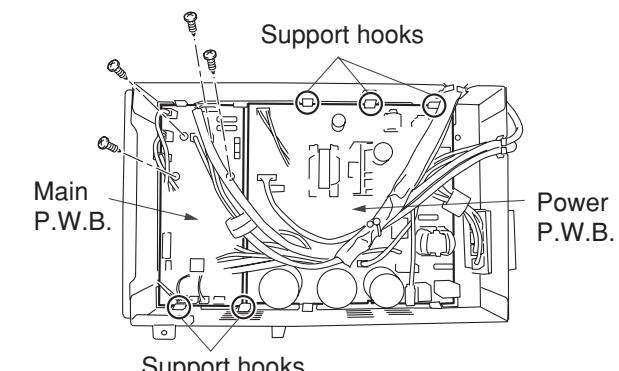


Fig. 10



PARTS LIST AND DIAGRAM

INDOOR UNIT MODEL: RAS-25YH5, RAS-35YH5

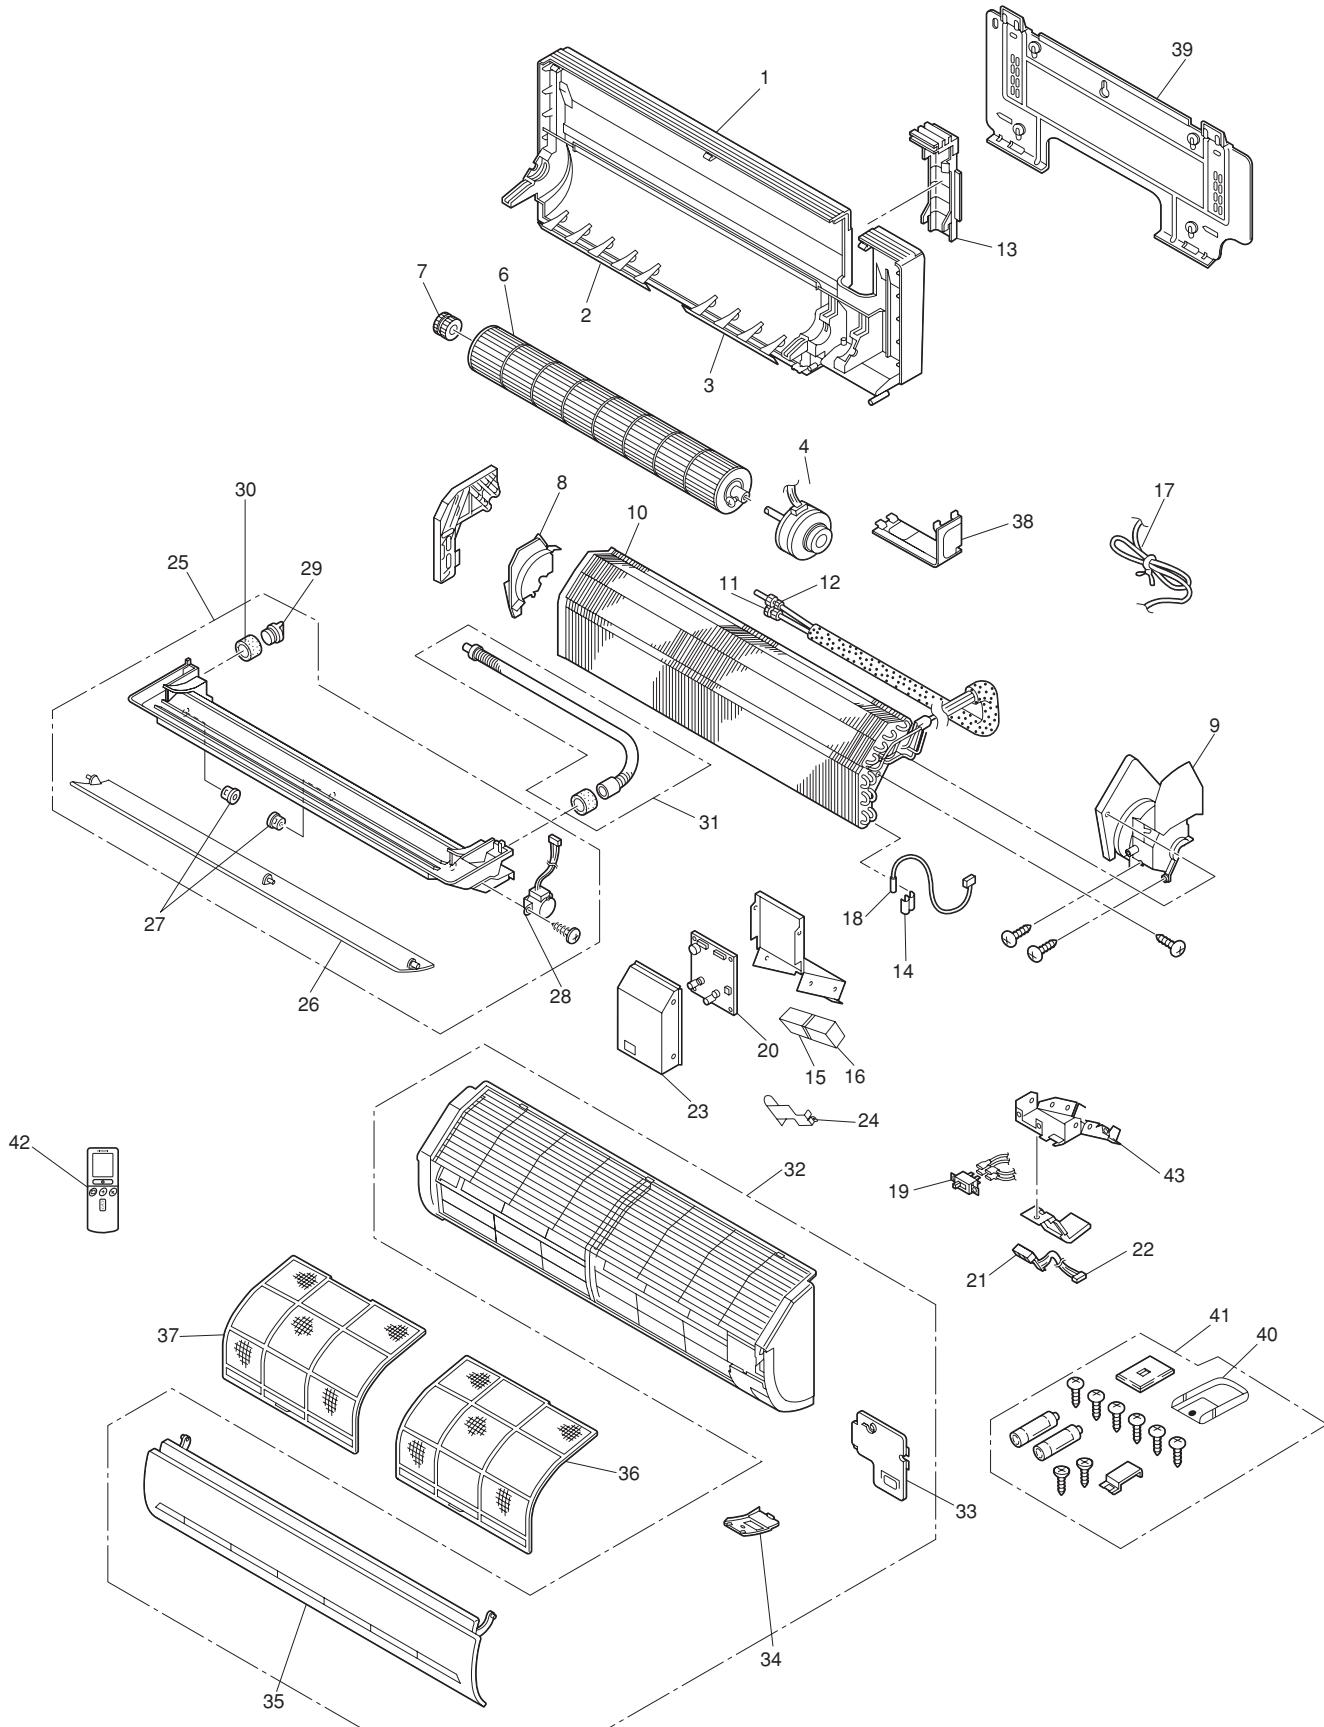




INDOOR UNIT

NO	PARTS NO.		Q'TY	PARTS NAME
	RAS-25YH5	RAS-35YH5		
1	HWRAS-25YH5 901		1	CABINET
2	HWRAS-25YH5 902		1	VERTICAL AIR DEFLECTOR-L
3	HWRAS-25YH5 903		1	VERTICAL AIR DEFLECTOR-R
4	HWRAS-25YH5 904		1	FAN MOTOR 25W 1.1kg
6	HWRAS-25YH4 907		1	TANGENTIAL AIR FLOW FAN
7	HWRAS-25YH4 908		1	FAN SUPPORT ASS'Y
8	HWRAS-25YH4 909		1	FAN COVER
9	HWRAS-25YH4 910		1	FAN MOTOR SUPPORT
10	HWRAS-25YH5 905		1	EVAPORATOR ASS'Y
11	HWRAS-25YH4 912		1	PIPE SET(IN)
12	HWRAS-25YH4 913		1	PIPE SET(OUT)
13	HWRAS-25YH5 906		1	UPPER COVER
14	HWRAS-25YH4 915		1	SPRING
15	HWRAS-25YH4 916		1	TERMINAL BOARD(2P)
16	HWRAS-25YH4 917		1	TERMINAL BOARD(2P)
17	HWRAS-E08H 901		1	POWER SUPPLY CORD
18	HWRAS-25YH4 919		1	THERMISTOR ASS'Y
19	HWRAS-25YH4 920		1	POWER SWICHI
20	HWRAS-25YH4 921 HWRAS-35YH4 901		1	P.W.B(MAIN)
21	HWRAS-25YH4 922		1	P.W.B(INDICATION)
22	HWRAS-25YH4 923		1	CONNECTING CORD(12PIN)
23	HWRAS-25YH4 924		1	ELECTRIC PARTS COVER
24	HWRAS-25YH4 925		1	COVER(TERMINAL)
25	HWRAS-25YH5 907		1	DRAIN PAN
26	HWRAS-25YH5 908		1	HORIZONTAL AIR DEFLECTOR
27	HWRAS-25YH4 928		2	DEFLECTOR SUPPORT
28	HWRAS-25YH4 929		1	AUTO SWEEP MOTOR
29	HWRAS-25YH4 930		1	DRAIN CAP
30	HWRAS-25YH4 931		1	HEAT INSULATOR PIPE
31	HWRAS-D10EX2 902		1	DRAIN HOSE
32	HWRAS-25YH5 909		1	FRONT COVER ASS'Y
33	HWRAS-25YH5 910		1	COVER(EARTH)
34	HWRAS-25YH5 911		1	COVER(SWICHI)
35	HWRAS-25YH5 912		1	FRONT PANEL
36	HWRAS-25YH5 913		1	AIR FILTER(R)
37	HWRAS-25YH5 914		1	AIR FILTER(L)
38	HWRAS-25YH5 915		1	COVER(LOWER)(R)
39	HWRAS-25YH5 916		1	MOUNTING PLATE
40	HWRAS-25YH4 941		1	REMOCON. SUPPORT
41	HWRAS-25YH4 942		1	SCREW ASS'Y
42	HWRAS-25YH4 943		1	REMOTE CONTROL ASS'Y
43	HWRAS-25YH4 906		1	COVER(ELECTRIC)



OUTDOOR UNIT

MODEL: RAC-25YH5, RAC-35YH5

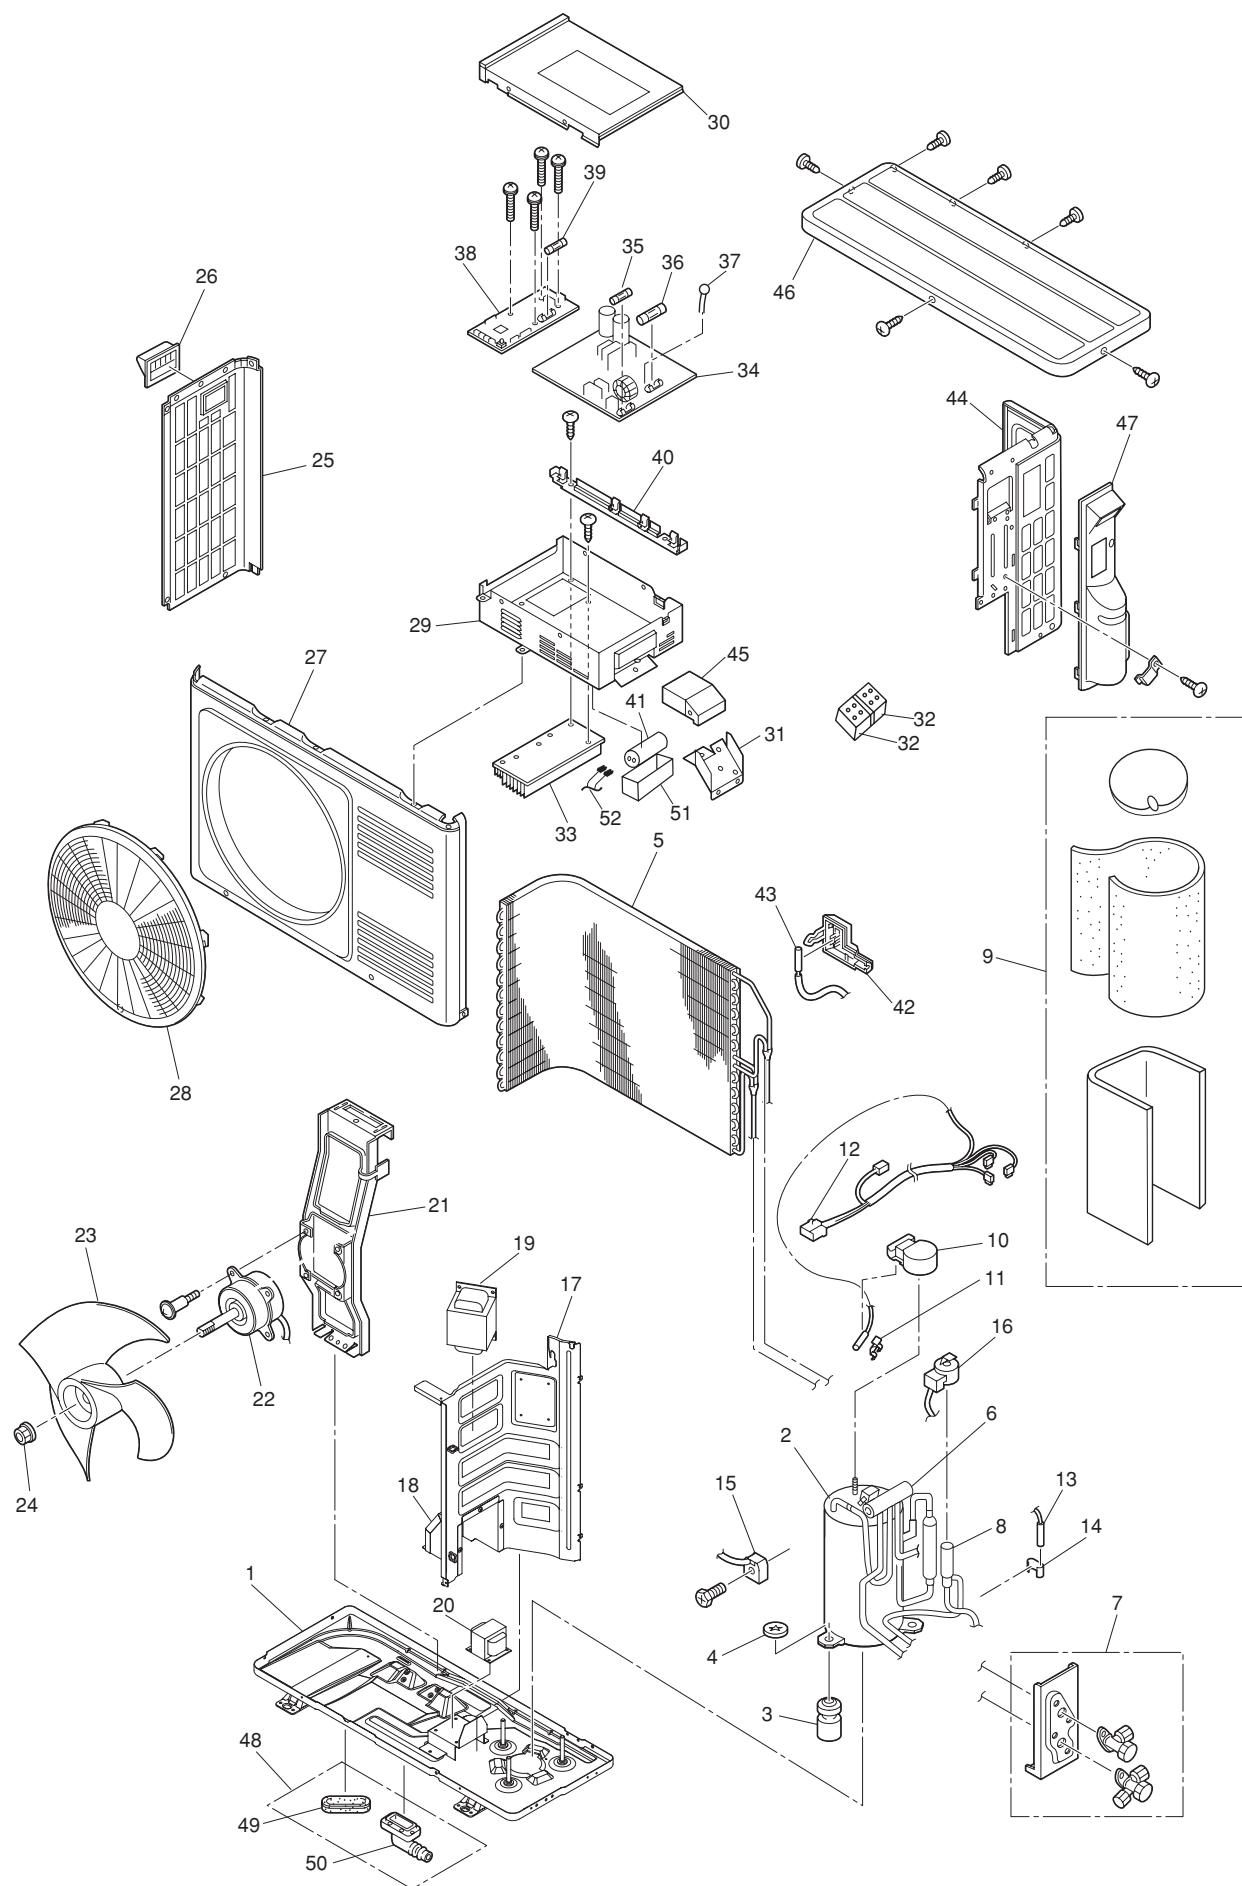



OUTDOOR UNIT

NO	PARTS No.		Q'TY	PARTS NAME
	RAC-25YH5	RAC-35YH5		
1	HWRAC-D10EX2 901		1	BASE
2	HWRAC-25YH4 902		1	COMPRESSOR 1000W 9.7kg
3	HWRAC-25YH4 903		3	COMPRESSOR RUBBER
4	HWRAC-25YH4 904		3	PUSH NUT
5	HWRAC-D10EX2 902		1	CONDENSER
6	HWRAC-D10EX2 903		1	REVERSING VALVE
7	HWRAC-25YH4 907		1	SERVICE VALVE ASS'Y
8	HWRAC-D10EX2 904		1	ELECTRIC EXPAN. VALVE
9	HWRAC-D10EX2 905		1	SOUND PROOF COVER ASS'Y
10	HWRAC-25YH4 910		1	O.L.R COVER
11	HWRAC-25YH4 911		1	O.H THERMI. SUPPORT
12	HWRAC-25YH4 912		1	CONNECTING CORD(COMP)
13	HWRAC-D10EX 908		1	THERMISTOR(DEFROST)
14	HWRAC-25YH4 914		1	THERMISTOR SUPPORT
15	HWRAC-25YH4 915		1	COIL(REVERS. VALVE)
16	HWRAC-D10EX2 907		1	COIL(EXPAN. VALVE)
17	HWRAC-25YH4 917		1	PARTITION
18	HWRAC-25YH4 918		1	REARCTOR COVER
19	HWRAC-25YH4 919		1	REACTOR1
20	HWRAC-25YH4 920		1	REACTOR2
21	HWRAC-D10EX2 911		1	FAN MOTOR SUPPORT
22	HWRAC-25YH4 922		1	FAN MOTOR 40W 1.5kg
23	HWRAC-25YH4 923		1	PROPELLER FAN
24	HWRAC-25YH4 924		1	NUT(PROPELLER.FAN)
25	HWRAC-25YH4 925		1	SIDE COVER(L)
26	HWRAC-25YH4 926		1	HANDLE
27	HWRAC-E08H 910		1	FRONT COVER
28	HWRAC-25YH4 928		1	DISCHARGE GRILL
29	HWRAC-25YH4 929		1	ELECTRIC PARTS PLATE
30	HWRAC-E08H 915		1	ELECTRIC PARTS COVER
31	HWRAC-25YH4 931		1	TERMINAL PLATE
32	HWRAC-25YH4 932		2	TERMINAL BOARD(2P)
33	HWRAC-25YH4 933		1	HEAT SINK(REGULATOR1)
34	HWRAC-25YH5 901		1	P.W.B.(POWER)
35	HWRAC-E08H 911		1	FUSE(25A)
36	HWRAC-25YH4 936		1	FUSE(3A)
37	HWRAC-25YH4 937		3	VARISTOR
38	HWRAC-25YH5 902	HWRAC-35YH5 901	1	P.W.B.(MAIN)
39	HWRAC-25YH4 939		1	FUSE(1A)
40	HWRAC-25YH4 940		2	SUPPORT(P.W.B.)
41	HWRAC-25YH4 941		1	CAPACITOR 45 μ F 200V
42	HWRAC-25YH4 942		1	COVER(OUT DOOR THERMISTOR)
43	HWRAC-D10EX 917		1	THERMISTOR(OUT DOOR TEMP.)
44	HWRAC-25YH5 903		1	SIDE COVER(R)
45	HWRAC-25YH4 945		1	TERMINAL COVER
46	HWRAC-25YH4 946		1	TOP COVER
47	HWRAC-25YH4 947		1	SERVICE VALVE COVER
48	HWRAC-25YH4 948		1	BUSH ASS'Y
49	HWRAC-25YH4 949		1	BUSH
50	HWRAC-25YH4 950		1	DRAIN PIPE
51	HWRAC-25YH4 951		1	COVER(CAPACITOR)
52	HWRAC-25YH4 952		1	CORD ASS'Y



HITACHI

**RAS-25YH5/RAC-25YH5
RAS-35YH5/RAC-35YH5**

AW NO. 0011E