

## SERVICE MANUAL TECHNICAL INFORMATION



**RAD-18NH7  
RAD-25NH7/RAC-25NH5  
RAD-35NH7/RAC-35NH5  
RAD-50NH7/RAC-50NH5**

**FOR SERVICE PERSONNEL ONLY**

**REFER TO THE FOUNDATION MANUAL**

### CONTENTS

SPECIFICATIONS .....	4
HOW TO USE .....	6
CONSTRUCTION AND DIMENSIONAL DIAGRAM .....	24
MAIN PARTS COMPONENT .....	27
WIRING DIAGRAM .....	29
CIRCUIT DIAGRAM .....	31
BLOCK DIAGRAM .....	37
BASIC MODE .....	39
REFRIGERATING CYCLE DIAGRAM .....	53
DESCRIPTION OF MAIN CIRCUIT OPERATION .....	55
SERVICE CALL Q & A .....	87
TROUBLE SHOOTING .....	90
PARTS LIST AND DIAGRAM .....	110

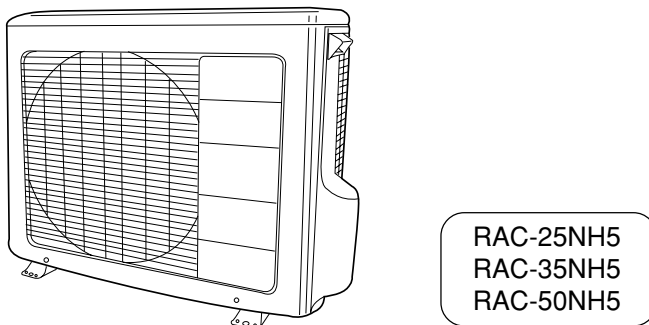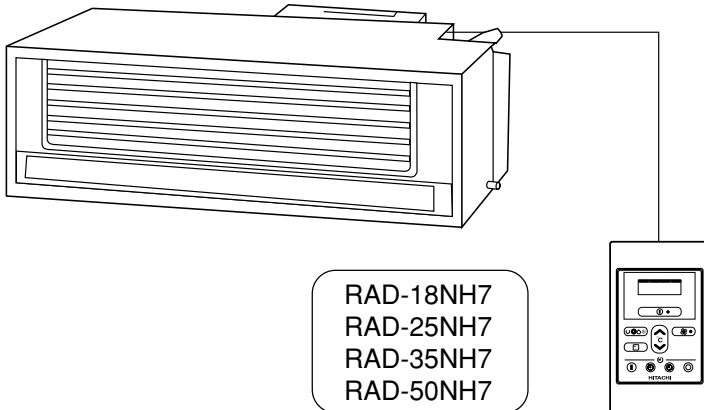

### SPECIFICATIONS

TYPE		DC INVERTER (DUCT TYPE)						
		INDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT
MODEL		RAD-18NH7	RAD-25NH7	RAC-25NH5	RAD-35NH7	RAC-35NH5	RAD-50NH7	RAC-50NH5
POWER SOURCE		1 PHASE, 50 Hz, 220-240V	1 PHASE, 50 Hz, 220-240V	1 PHASE, 50 Hz, 220-240V	1 PHASE, 50 Hz, 220-240V	1 PHASE, 50 Hz, 220-240V	1 PHASE, 50 Hz, 220-240V	1 PHASE, 50 Hz, 220-240V
COOLING	TOTAL INPUT (W)	560 (155-850)	695 (155-1,050)		1,240 (155-1,280)		2,000 (155-2,060)	
	TOTAL AMPERES (A)	2.56-2.35	3.20-2.92		5.70-5.24		9.20-8.40	
	CAPACITY	(kW)	1.80 (0.9 ~ 2.5)	2.50 (0.9 ~ 3.0)		3.50 (0.9 ~ 4.0)		5.0 (0.9 ~ 5.6)
(B.T.U./h)		6,150 (3,070-8,540)	8,540 (3,070-10,240)		11,950 (3,070-13,660)		17,070 (3,070-19,120)	
HEATING	TOTAL INPUT (W)	690 (155-1,050)	970 (155-1,400)		1,700 (155-1,920)		2,300 (155-2,530)	
	TOTAL AMPERES (A)	3.20-2.92	4.50-4.10		7.84-7.19		10.60-9.70	
	CAPACITY	(kW)	2.50 (0.9 ~ 3.2)	3.50 (0.9 ~ 5.0)		4.80 (0.9 ~ 6.6)		6.0 (0.9 ~ 7.5)
(B.T.U./h)		8,540 (3,070-10,930)	11,950 (3,070-17,070)		16,390 (3,070-22,530)		20,490 (3,070-25,610)	
DIMENSIONS (mm)	W	750	750	750	750	750	750	850
	H	235	235	570	235	570	235	650
	D	400	400	280	400	280	400	298
NET WEIGHT (kg)		19	19	38	19	38	19	60

**SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT**



## M AIR CONDITIONER


Большая библиотека технической документации

<https://splitsystema48.ru/instrukcii-po-ekspluatatsii-kondicionerov.html>

каталоги, инструкции, сервисные мануалы, схемы.


## SAFETY DURING REPAIR WORK

1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

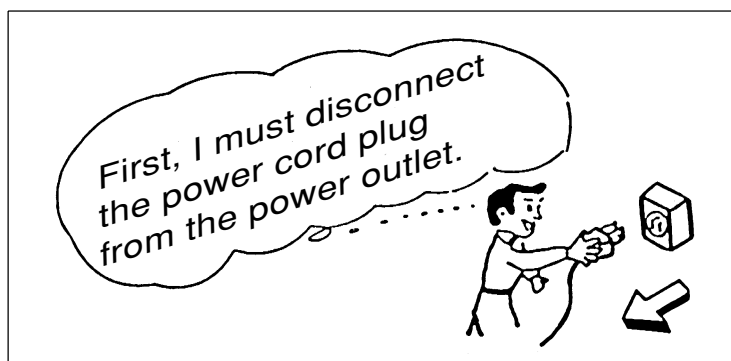

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

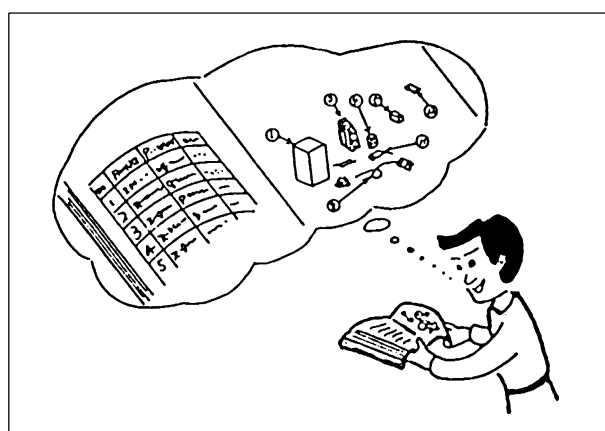

3. After completion of repairs, the initial state should be restored.
4. Lead wires should be connected and laid as in the initial state.
5. Modification of the unit by user himself should absolutely be prohibited.
6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be  $1M\Omega$  or more as measured by a 500V DC megger.
9. The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again. If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
10. Any inflammable thing should never be placed about the location of installation.
11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



## WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

### 1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

### 2. Object parts

- (1) Micro computer
- (2) Integrated circuits (IC)
- (3) Field-effect transistors (FET)
- (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.

### 3. Items to be observed in handling

- (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

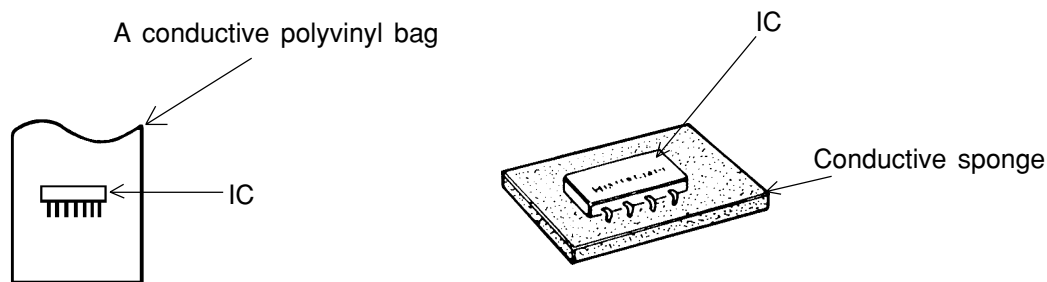


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet).
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

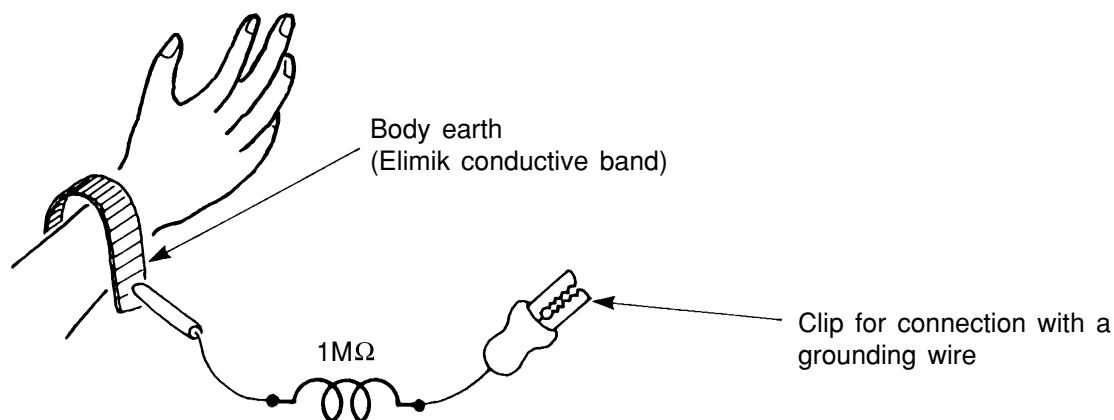


Fig. 2. Body Earth

(6) Use a three wire type soldering iron including a grounding wire.

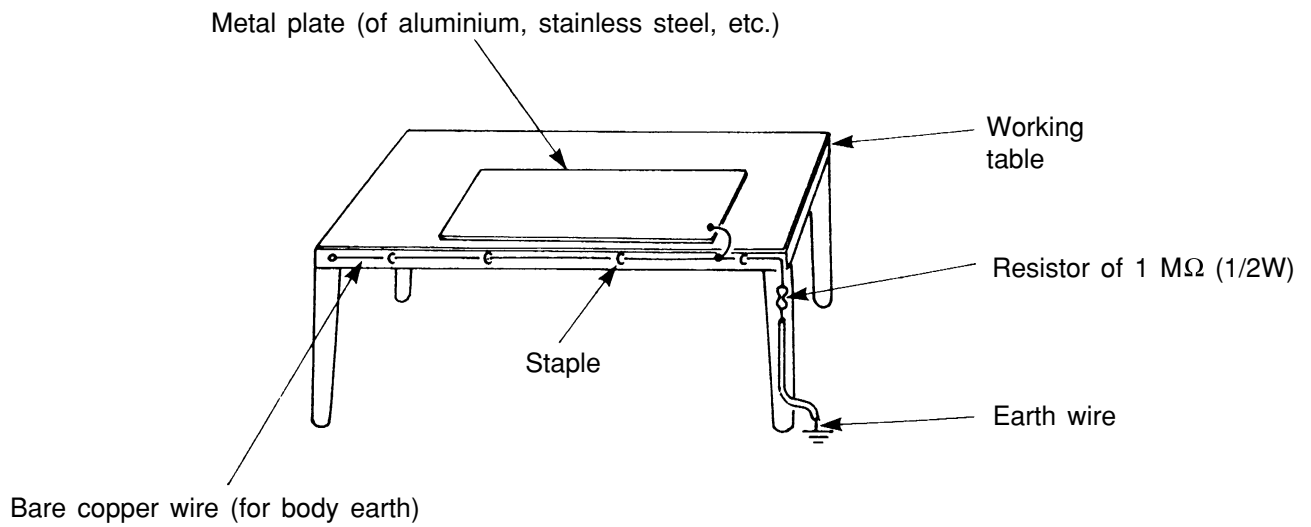


Fig. 3. Grounding of the working table

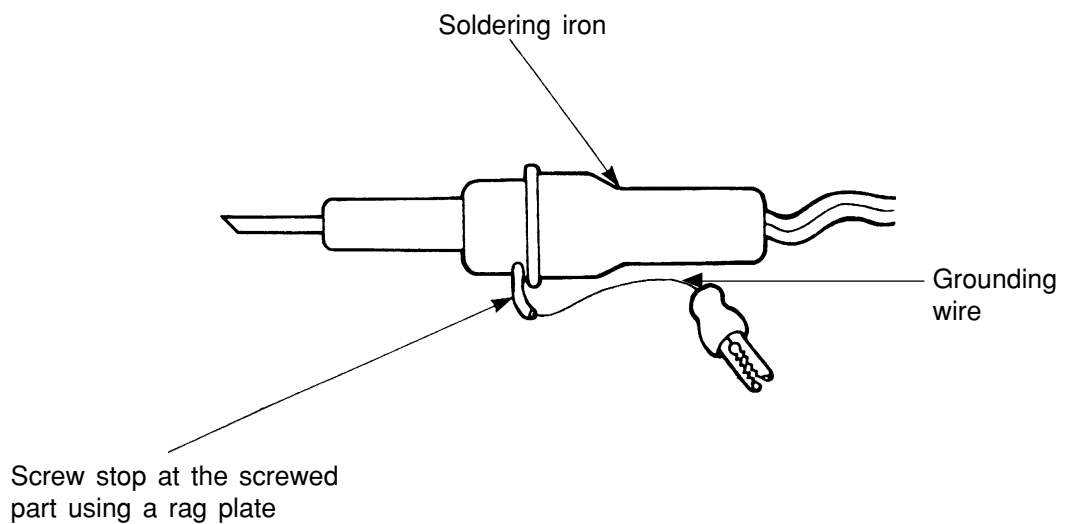


Fig. 4. Grounding a soldering iron

Use a high insulation mode (100V, 10MΩ or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.

 **CAUTION**

1. In quiet operation or stopping the running, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
3. The room air conditioner does not start automatically after recovery of the electric power failure for preventing fuse blowing. Re-press START/STOP button after 3 minutes from when unit stopped.
4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
5. This room air conditioner should not be used at the cooling operation when the outside temperature is below 10°C (50°F).
6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -15°C (5°F).  
If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.


## SPECIFICATIONS

MODEL		RAD-18NH7 RAD-25NH7 RAD-35NH7 RAD-50NH7	RAC-25NH5 RAC-35NH5	RAC-50NH5
FAN MOTOR		20W	40 W	
FAN MOTOR CAPACITOR		NO	NO	
FAN MOTOR PROTECTOR		NO	NO	
COMPRESSOR		–	JU1012D	JU1013D
COMPRESSOR MOTOR CAPACITOR		NO	NO	
OVERLOAD PROTECTOR		NO	YES	
OVERHEAT PROTECTOR		NO	YES	
FUUSE (for MICROPROCESSOR)		NO	3.0A	
POWER RELAY		NO	G4A	
POWER SWITCH		NO	NO	
TEMPORARY SWITCH		NO	NO	
SERVICE SWITCH		NO	YES	
TRANSFORMER		NO	NO	
VARISTOR		NO	450NR	
NOISE SUPPRESSOR		NO	YES	
THERMOSTAT		YES(IC)	YES(IC)	
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO	
REFRIGERANT CHARGING VOLUME (Refrigerant 410A)	UNIT	-----	1150g	1400g
	PIPES (MAX. 20m)	WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE.		

## [Indoor unit installation]

### ⚠ CAUTION

Always install the indoor unit at level. If the indoor unit is inclined, water may leak.

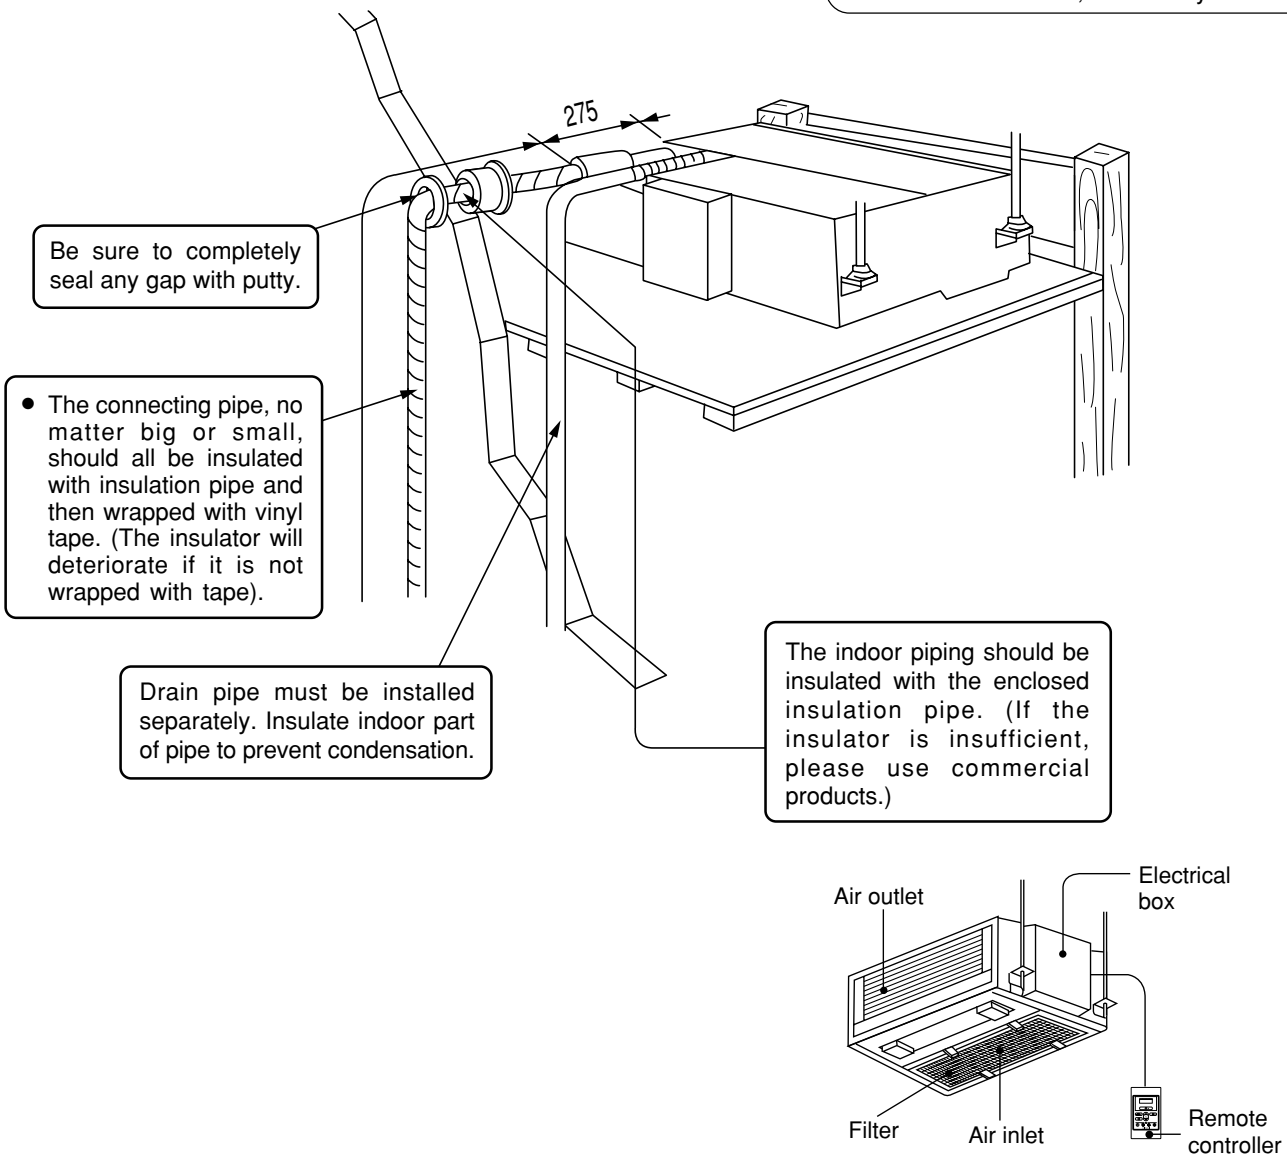




- “Height difference” and “Piping length” of Indoor and Outdoor unit are different by Outdoor unit. Please refer to the installation manual in Outdoor unit.








# SAFETY PRECAUTION

- Please read the “Safety Precaution” carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of “**▲ Warning**” and “**▲ Caution**”. The “Warning” section contains matters which, if not observed strictly, may cause death or serious injury. The “Caution” section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.



 Make sure to connect earth line.	 The sign in the figure indicates prohibition.
 Indicates the instructions that must be followed.	

- Please keep this manual after reading.




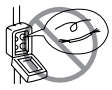

## PRECAUTIONS DURING INSTALLATION

 <b>WARNING</b>	<ul style="list-style-type: none"> <li>● Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock.</li> </ul>	
 <b>CAUTION</b>	<ul style="list-style-type: none"> <li>● A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Do not install near location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Please ensure smooth flow of water when installing the drain hose.</li> </ul>	

## PRECAUTIONS DURING SHIFTING OR MAINTENANCE

 <b>WARNING</b>	<ul style="list-style-type: none"> <li>● Should abnormal situation arises (like burning smell), please stop operating the unit and turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly.</li> </ul>	
	<ul style="list-style-type: none"> <li>● If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.</li> </ul>	

## PRECAUTIONS DURING OPERATION

 <b>WARNING</b>	<ul style="list-style-type: none"> <li>● Avoid an extended period of direct air flow for your health.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF.</li> </ul>	
	<ul style="list-style-type: none"> <li>● Do not use any conductor as fuse wire, this could cause fatal accident.</li> </ul>	
	<ul style="list-style-type: none"> <li>● During thunder storm, disconnect and turn off the circuit breaker.</li> </ul>	




## PRECAUTIONS DURING OPERATION

- The product shall be operated under the manufacturer specification and not for any other intended use.




- Do not attempt to operate the unit with wet hands, this could cause fatal accident.

- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.

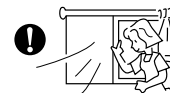

- Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

- Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.

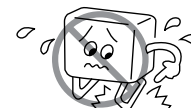


- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.

- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.



C  
A  
U  
T  
I  
O  
N

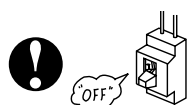


- Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

- Turn off the circuit breaker if the unit is not to be operated for a long period.



- Do not climb on the outdoor unit or put objects on it.

- Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.

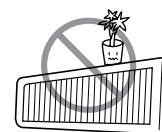

- Do not place plants directly under the air flow as it is bad for the plants.

- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.
- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

# MULTI-AIR CONDITIONER

With this multi-air conditioner, several indoor units can be connected to one outdoor unit to be driven. You can operate the required number of indoor units.

## Combination of Operations:

When operation mode is selected:

- You cannot operate the indoor units in the following combinations.

One unit	Other unit
Heating	Cooling
	Dehumidifying
	Circulating (fan)


- The indoor unit which is switched on first continues to operate, but other indoor units which is switched on later does not operate while the lamp lights.
- To re-start an indoor unit which was operated later, stop the indoor unit which was operated first or later and reset the type of operation, then perform operation again.

During automatic operation:

- When heating operation is automatically selected for the first indoor unit, the next indoor unit will then start to heat. Also, if cooling or dehumidifying is automatically selected for the first indoor unit, the next indoor unit will also start to cool or dehumidify.

## Adjusting the Number of Indoor Units:

Decrease the number of indoor units to be operated especially when it is very hot or cold or when you want to reach the present temperature quickly.

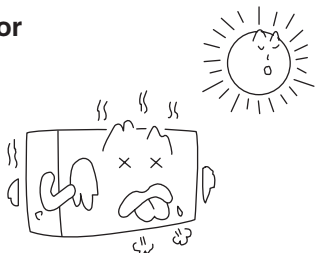


## Stopped Indoor Units:

When an indoor unit is operated in the cooling, heating or dehumidifying mode in the room, the sound of refrigerant flow may be heard from a stopped indoor unit or a stopped indoor unit may become warm. This is because the indoor unit returns refrigerant to the outdoor unit to be ready for operation.

# NAMES AND FUNCTIONS OF EACH PART

## INDOOR UNIT

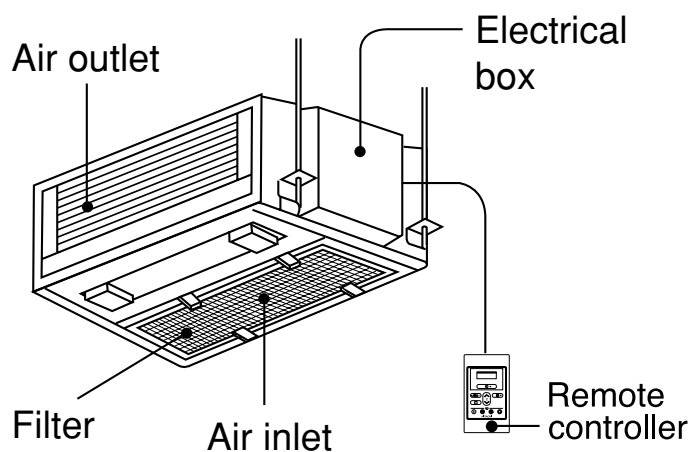

## MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAD-18NH7/RAD-25NH7/RAD-35NH7/RAD-50NH7	750	235	400

# NAMES AND FUNCTIONS OF REMOTE CONTROL UNIT

■ This controls the operation function and timer setting of the room air conditioner.

## START/STOP Button

Press this button to start operation.  
Press it again to stop operation.

## FUNCTION Button

Use this button to select the operating mode. Every time you press it, the mode will change from ☺ (AUTO) to ☀ (HEAT) to ☹ (DEHUMIDIFY) and to ❄ (COOL) cyclically.

## SLEEP Button

Use this button to set the sleep timer. (☞ Page 16)

## Reserve Button

Timer setting reservation.

## OFF TIMER Button

Select the turn OFF time.

## ON TIMER Button

Select the turn ON time.

## Transmission Sign

The transmission sign blinks when a signal has been send.

## TEMPERATURE Button


Room temperature setting.  
Value will change quicker when keep pressing.

## FAN SPEED Button

This determines the fan speed.  
Every time you press this button, the intensity of circulation will change from ☺ (AUTO) to ≡ (HI) to ≡ (MED) to ≡ (LOW) (This button allows selecting the optimal or preferred fan speed for each operation mode).

## CANCEL Button

Cancel timer reservation.

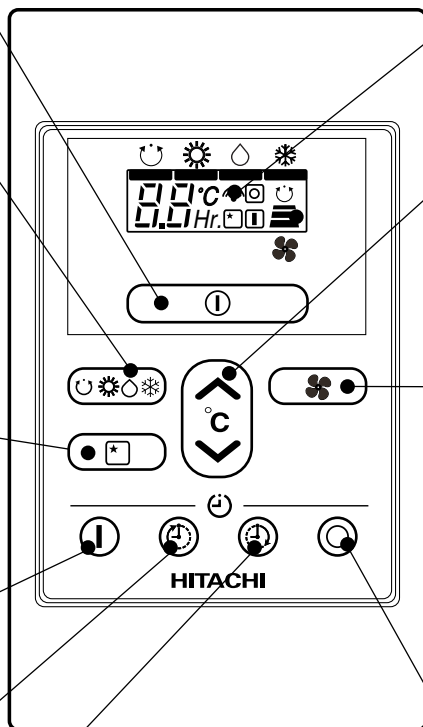

## Precautions for Use

- Do not put the remote controller in the following places.
  - Under direct sunlight.
  - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).  
This is to protect the device and does not indicate a failure.
- If you press the FUNCTION selector button during operation, the device may stop for about 3 minutes for protection.


# VARIOUS FUNCTIONS

## Auto Restart Control

- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode. (As the operation is not stopped by remote controller.)
  - If you intend not to continue the operation when the power is resumed, switch off the power supply. When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode.
- Note: 1. If you do not require Auto Restart Control, please consult your sales agent or OFF by remote control.  
2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

# AUTOMATIC OPERATION

The device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the current room temperature. The selected mode of operation will change when the room temperature varies. However the mode of operation will not change when indoor unit connected to multi type outdoor unit.

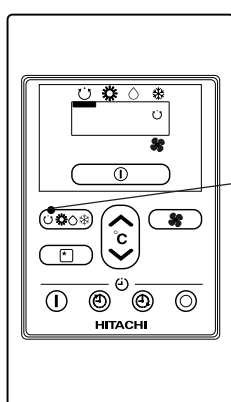


Press the FUNCTION selector so that the display indicates the (AUTO) mode of operation.

- When AUTO has been selected, the device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the current room temperature. However the mode of operation will not change when indoor unit connected to multi type outdoor unit.
- If the mode automatically selected by the unit is not satisfactory, manually change the mode setting (heat, dehumidify, cool or fan).

**START STOP**

Press the (START/STOP) button.  
Operation starts with a beep.  
Press the button again to stop operation.

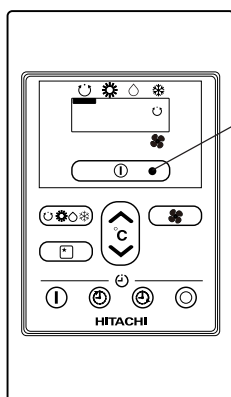

- As the settings are stored in memory in the remote controller, you only have to press the (START/STOP) button next time.


## FAN SPEED (AUTO)

..... When the AUTO fan speed mode is set in the cooling/heating operation:

For the heating operation	<ul style="list-style-type: none"> <li>● The fan speed will automatically change according to the temperature of discharged air.</li> <li>● When the difference of room temperature and setting temperature is large, fan starts to run at HI speed.</li> <li>● When the room temperature reaches setting temperature, fan speed changes to LOW automatically.</li> </ul>
For the cooling operation	<ul style="list-style-type: none"> <li>● When the difference of room temperature and setting temperature is large, fan starts to run at HI speed.</li> <li>● After room temperature reaches the preset temperature, the cooling operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful cooling will be performed.</li> </ul>

# HEATING OPERATION

- Use the device for heating when the outdoor temperature is under 21°C.  
When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -15°C of the outdoor temperature.

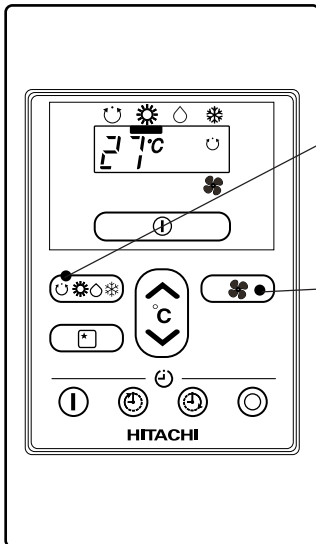

**1**

Press the FUNCTION selector so that the display indicates ☀ (HEAT).

Set the desired FAN SPEED with the 🌀 (FAN SPEED) button (the display indicates the setting).

🌀 (AUTO): The fan speed is HI at first and varies to MED or LOW automatically when the preset temperature has been reached.

☰ (HI) : Economical as the room will become warm quickly.  
But you may feel a chill at the beginning.

☰ (MED) : Fan speed slow.

☰ (LOW) : Fan speed slower.

**2**

Set the desired room temperature with the TEMPERATURE buttons (the display indicates the setting).


**3**

The temperature setting and the actual room temperature may vary somewhat depending on conditions.

**START  
STOP**


Press the ⏻ (START/STOP) button. Heating operation starts with a beep. Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the ⏻ (START/STOP) button next time.

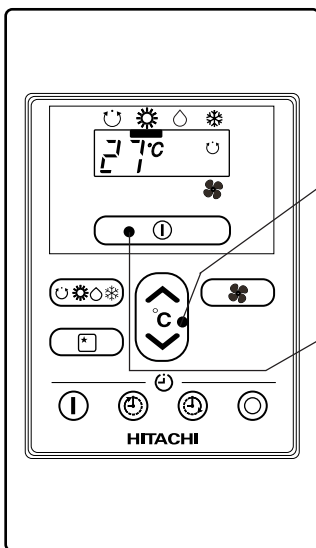

# DEHUMIDIFYING OPERATION

Use the device for dehumidifying when the room temperature is over 16°C.  
When it is under 15°C, the dehumidifying function will not work.

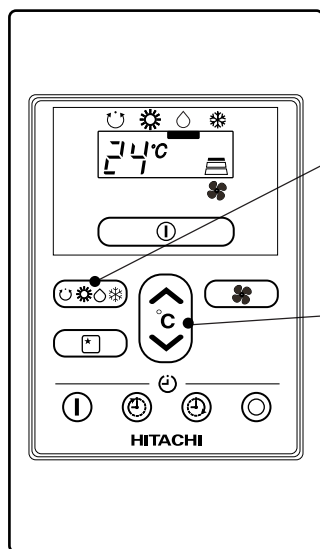


**1**

Press the FUNCTION selector so that the display indicates ◊ (DEHUMIDIFY).  
The FAN SPEED is set at LOW automatically.  
The FAN SPEED button does not work.

**2**


Set the desired room temperature with the TEMPERATURE button (the display indicates the setting).

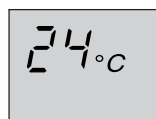

The range of 20-26°C is recommended as the room temperature for dehumidifying.

**START  
STOP**

Press the Ⓜ (START/STOP) button. Dehumidifying operation starts with a beep. Press the button again to stop operation.

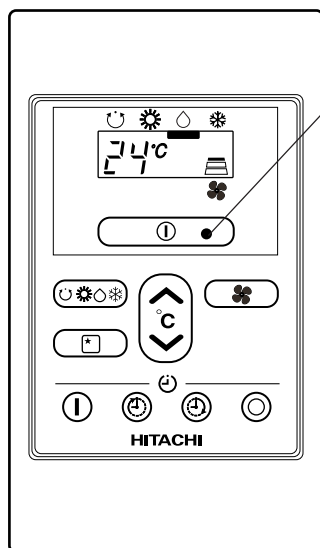

- As the settings are stored in memory in the remote controller, you only have to press the Ⓜ (START/STOP) button next time.


## ■ Dehumidifying Function

When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level.

When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting. The function will stop (the indoor unit will stop emitting air) as soon as the room temperature becomes lower than the setting temperature.

# COOLING OPERATION

Use the device for cooling when the outdoor temperature is  $-10 \sim 43^{\circ}\text{C}$ .  
If indoor humidity is very high (80%), some dew may form on the air outlet grille of the indoor unit.

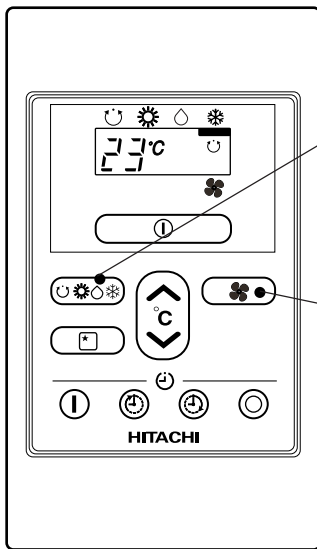

1

Press the FUNCTION selector so that the display indicates ❄️ (COOL).

Set the desired FAN SPEED with the 🌀 (FAN SPEED) button (the display indicates the setting).

- 🔄 (AUTO): The FAN SPEED is HI at first and varies to MED or LOW automatically when the preset temperature has been reached.
- ↓
- 🌀 (HI) : Economical as the room will become cool quickly.
- 🌀 (MED) : Fan speed slow.
- 🌀 (LOW) : Fan speed slower.

2

Set the desired room temperature with the TEMPERATURE button (the display indicates the setting).


The temperature setting and the actual room temperature may vary some how depending on conditions.

3

Press the ⏻ (START/STOP) button. Cooling operation starts with a beep. Press the button again to stop operation. The cooling function does not start if the temperature setting is higher than the current room temperature (even though the ⏻ (OPERATION) lamp lights). The cooling function will start as soon as you set the temperature below the current room temperature.

START  
STOP

- As the settings are stored in memory in the remote controller, you only have to press the ⏻ (START/STOP) button next time.

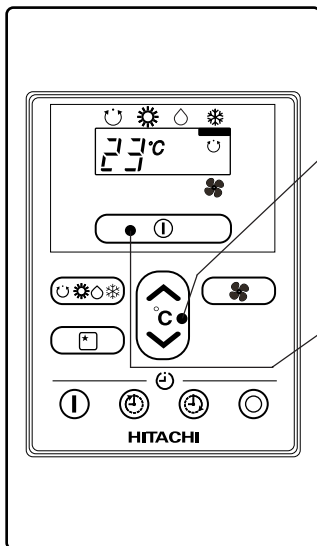




# TIMER RESERVATION

■ ON Timer and OFF Timer are available.

## OFF Timer Reservation

### 1 ⌚ OFF TIME setting

- Select the OFF TIME by pressing the ⌚ (OFF) Button.
- Setting time will change according to the below sequence when you press the button.

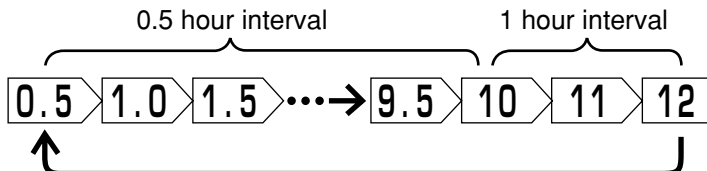

- The value change quicker if you keep pressing the button.


### 2 Press the Ⓜ (Reserve) button

- OFF TIMER reserved with a signal received sound "beep".
- The Ⓜ (OFF) Mark starts lighting instead of blinking.

## ON Timer Reservation

### 1 ⌚ ON TIME setting

- Select the ON TIMER by pressing the ⌚ (ON) Button.
- At the beginning of setting, time 6 hours was set.
- Setting time will change according to the below sequence.

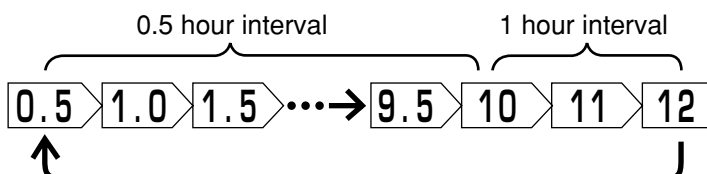

- The value change quicker if you keep pressing the button.

### 2 Press the Ⓜ (Reserve) button



- ON TIMER reserved with a signal received sound "beep".
- The Ⓜ (ON) Mark starts lighting instead of blinking.

## CANCELLATION of Timer Reservation



### 1 Press the Ⓞ (Cancel) button

- As the time settings are stored in remote controller memory, you only have to press the Ⓞ (Reserve) button in order to use the same setting next time.


■ Operation stop at setting time

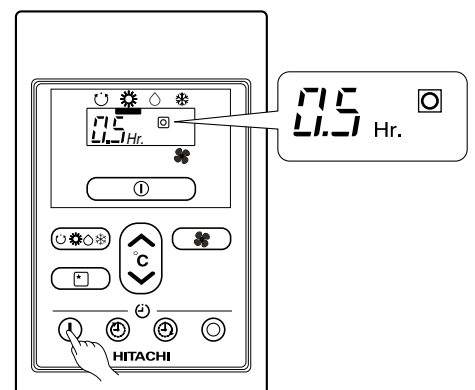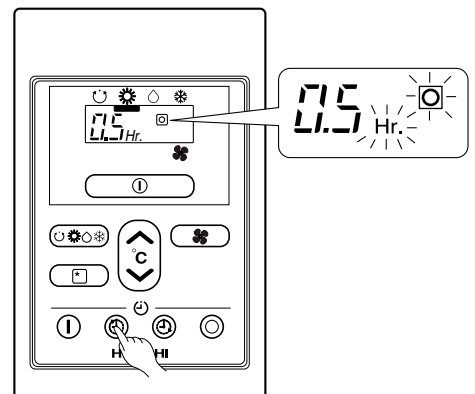

■ Operation will start for setting temperature at setting time (The starting time may different depend on the room temperature and set temperature).

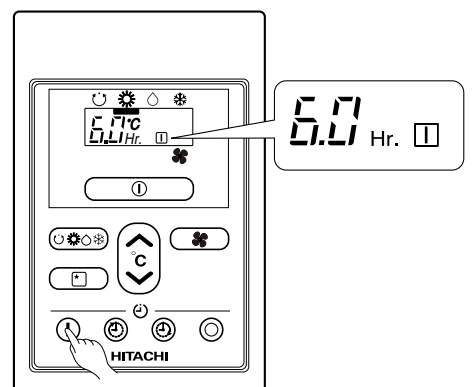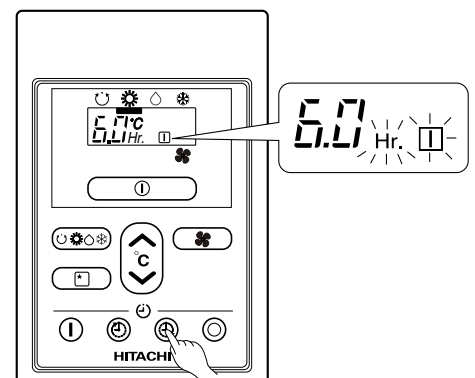

## HOW TO SET THE SLEEP TIMER

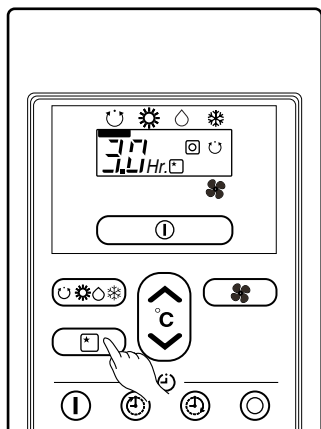

Mode	Indication
Sleep timer	→ 1 hour → 2 hours → 3 hours → 7 hours → Sleep timer off ←

**Sleep Timer:** The device will continue working for the designated number of hours and then turn off.  
Press the SLEEP button, indoor unit will produce a beep.  
The timer information will be displayed on the remote controller.

Example: Setting 3 hours sleep time.

### How to Cancel Reservation

Press the ○ (CANCEL) button. The ⓘ (RESERVED) sign goes out with a beep.

## Explanation of the sleep timer

The device will control the FAN SPEED and room temperature automatically so as to be quiet and good for people's health.

### NOTE

- If you set the sleep timer after the off or on-timer has been set, the sleep timer becomes effective instead of the off or on-timer set earlier.
- You can not set other timer during sleep timer operation.
- After sleep timer time is up and when press sleep button again, the sleep timer will be set as last setting.
- Sleep timer effective only once.

# CIRCUIT BREAKER

---

When you do not use the room air conditioner, set the circuit breaker to “OFF”.

## HOW TO USE THE AIR CONDITIONER EFFECTIVELY

---

**1. An average room temperature setting is probably the best for you as well as being economical.**

- Excessive cooling or heating is not recommended for health reasons. High electricity bills may also result.
- Close the curtains or blinds to prevent heat from flowing into or escaping the room as well as to make more effective use of electricity.



**2. At intervals, the doors and windows should be opened to let fresh air in.**



Make sure the room is ventilated when operating the air conditioner at the same time as other heating appliances.



**3. Using the timer is recommended before going to sleep or going out.**



**4. The following must never be used for cleaning the indoor and outdoor units.**

- Benzine, thinner and scrub can damage plastic surfaces or coating.
- Hot water above 40°C can shrink the filter and deform plastic parts.




**5. Do not block the air intake and air outlet.**

- Do not block the air outlets and intakes of the indoor and outdoor units with curtains or other obstacles which could degrade air conditioner performance and cause unit failure.


# THE IDEAL WAYS OF OPERATION

## Suitable Room Temperature

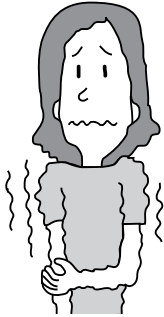

**⚠ Warning**  
Freezing temperature is bad for health and a waste of electric power.

## Install curtain or blinds

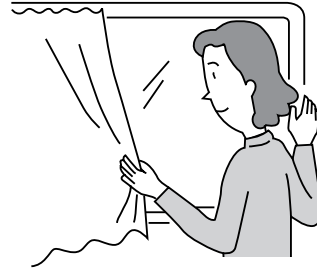

It is possible to reduce heat entering the room through windows.


## Ventilation

**⚠ Caution**  
Do not close the room for a long period of time. Occasionally open the door and windows to allow the entrance of fresh air.




## Effective Usage Of Timer

At night, please use the "OFF or ON timer operation mode", together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.

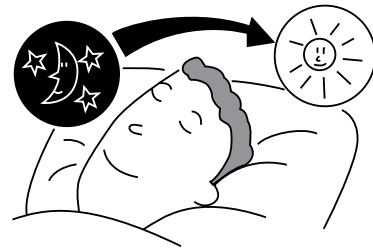


## Do Not Forget To Clean The Air Filter

Dusty air filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.

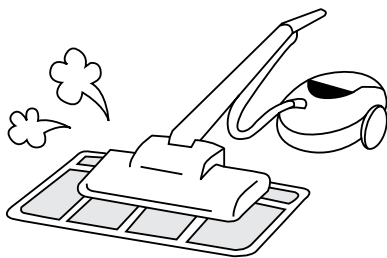

## Please Adjust Suitable Temperature For Baby And Children

Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.

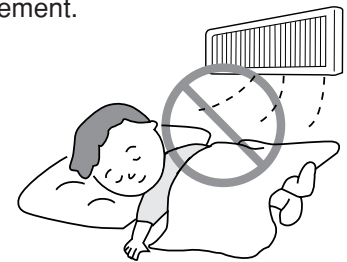


# FOR USER'S INFORMATION

## The Air Conditioner And The Heat Source In The Room


### ⚠ Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

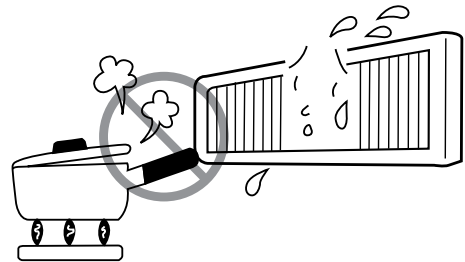

## Not Operating For A Long Time


When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 8W in the operation control circuit even if it is in "OFF" mode.

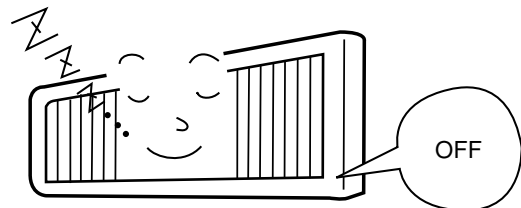

## When Lightning Occurs

### ⚠ Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

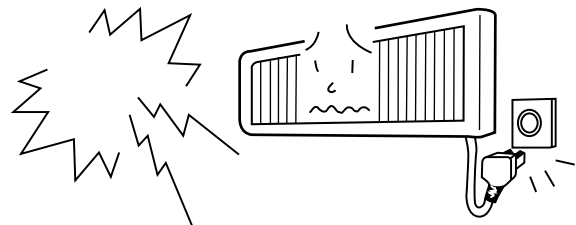

## Interference From Electrical Products

### ⚠ Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

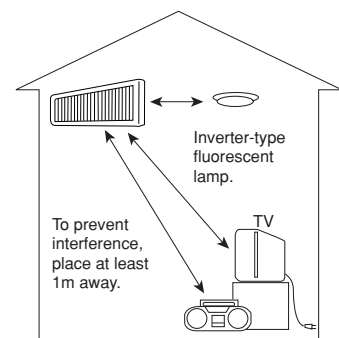

# MAINTENANCE

## ▲ WARNING

- Before cleaning, stop unit operation with the remote controller and turn off the circuit breaker.

## ▲ CAUTION



- Do not expose the unit to water as it may cause an electric shock.
- For cleaning inside the air conditioner, consult your sales agent.
- Avoid using detergent when cleaning the heat exchanger of the indoor unit. Unit failure may result.
- When cleaning the heat exchanger with a vacuum cleaner, make sure to wear gloves so as not to injure your hands on the heat exchanger fins.

## 1. AIR FILTER

Clean the air filter, as it removes dust inside the room. Be sure to clean the filter once every two weeks so as not to consume electricity unnecessarily.

### PROCEDURE

- 1** Pull the filter toward the center until it detached from the holders. Then take it out from holders (refer to diagram).
- 2** Remove dust from the filter using a vacuum cleaner. If there is too much dust, use neutral detergent. After using neutral detergent, wash with clean water and dry in the shade.
- 3** Install the filters. Gently insert back the filter into the holders.


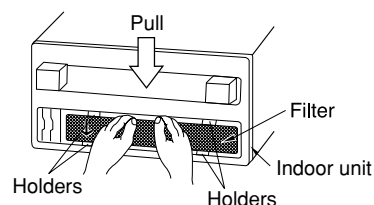
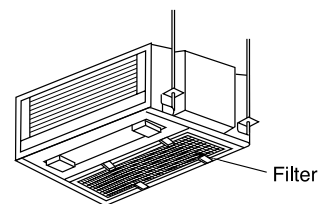


## ▲ CAUTION

- Do not wash with hot water at more than 40°C. The filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Do not operate the air conditioner with the filter removed. Dust may enter the air conditioner and cause trouble.



# REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONAL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

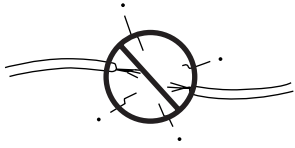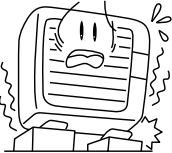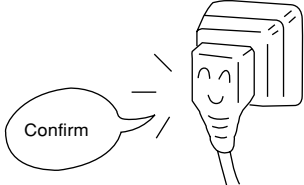1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3		Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).

# AFTER SALE SERVICE AND WARRANTY

## WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

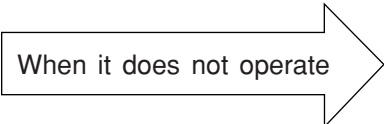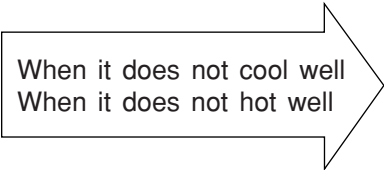CONDITION	CHECK THE FOLLOWING POINTS
	<ul style="list-style-type: none"> <li>● Is the fuse all right?</li> <li>● Is the voltage extremely high or low?</li> <li>● Is the circuit breaker "ON"?</li> </ul>
	<ul style="list-style-type: none"> <li>● Was the air filter cleaned?</li> <li>● Does sunlight fall directly on the outdoor unit?</li> <li>● Is the air flow of the outdoor unit obstructed?</li> <li>● Are the doors or windows opened, or is there any source of heat in the room?</li> <li>● Is the set temperature suitable?</li> </ul>



### Notes

- In quiet or stop operation, the following phenomena may occasionally occur, but they are not abnormal for the operation.
  - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
  - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So the air filter and the evaporator regularly must be cleaned to reduce the odor.

- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.
- Power supply shall be connected at the rated voltage, otherwise electronic component of the unit will be broken or could not reach the specified capacity.









# CONSTRUCTION AND DIMENSIONAL DIAGRAM FOR INDOOR



MODEL RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7\*

Unit: mm


wired remote controller

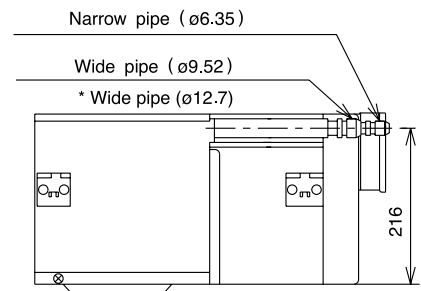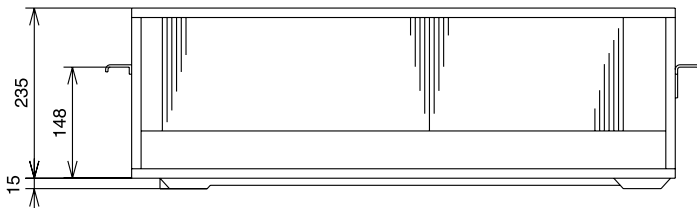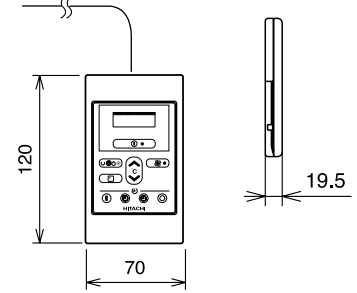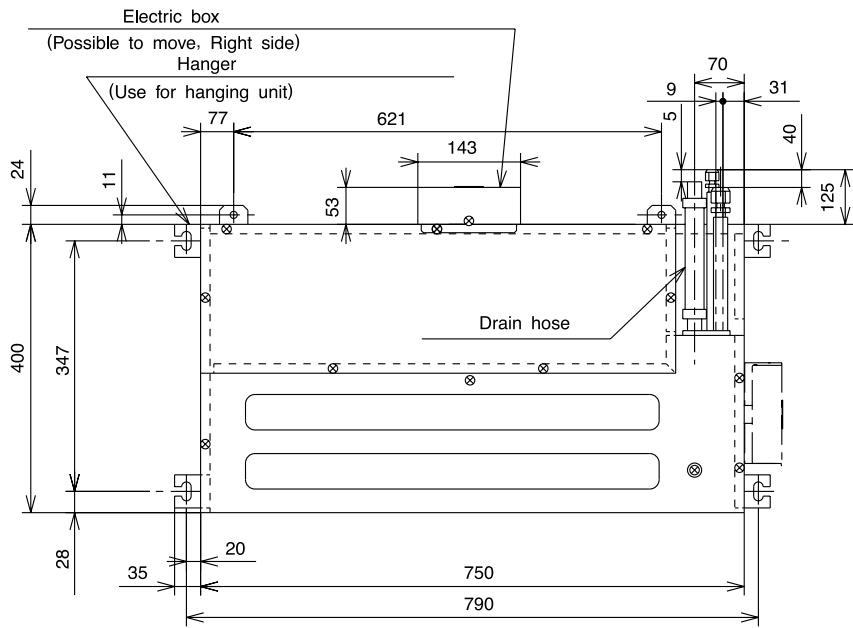


### BACK SUCTION

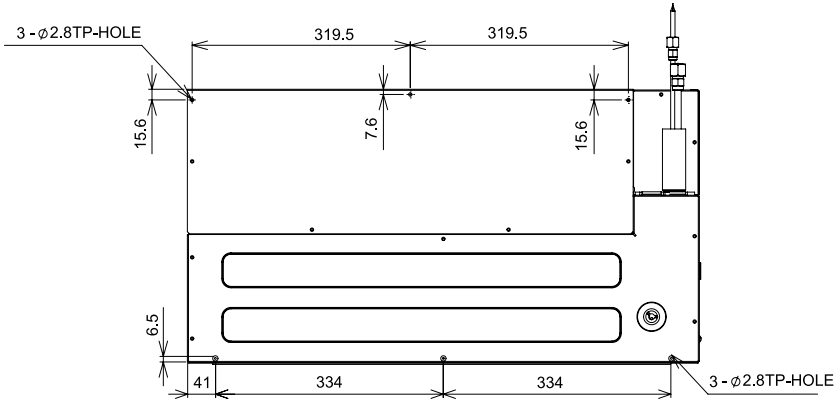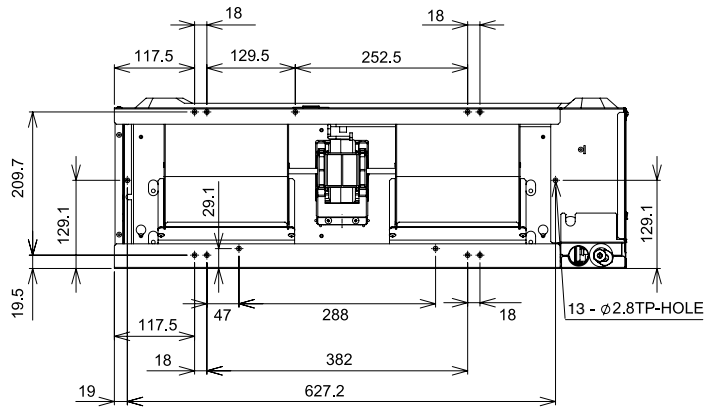

### DISCHARGE

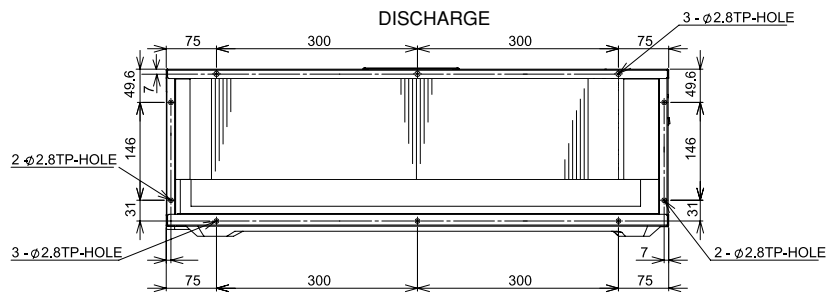

### BOTTOM SUCTION

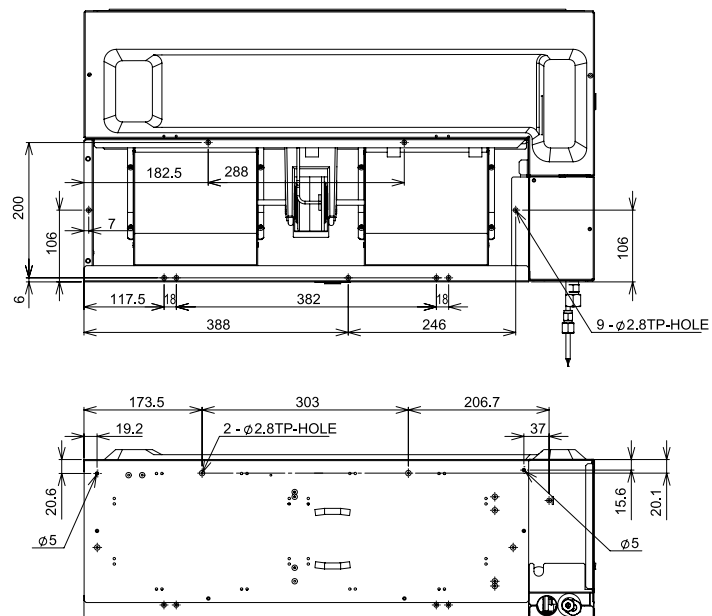


#### Cautions:


1. Use insulated pipes for both large and small diameters.
2. An connection cable.

# CONSTRUCTION AND DIMENSIONAL DIAGRAM FOR OUTDOOR

MODEL RAC-25NH5, RAC-35NH5

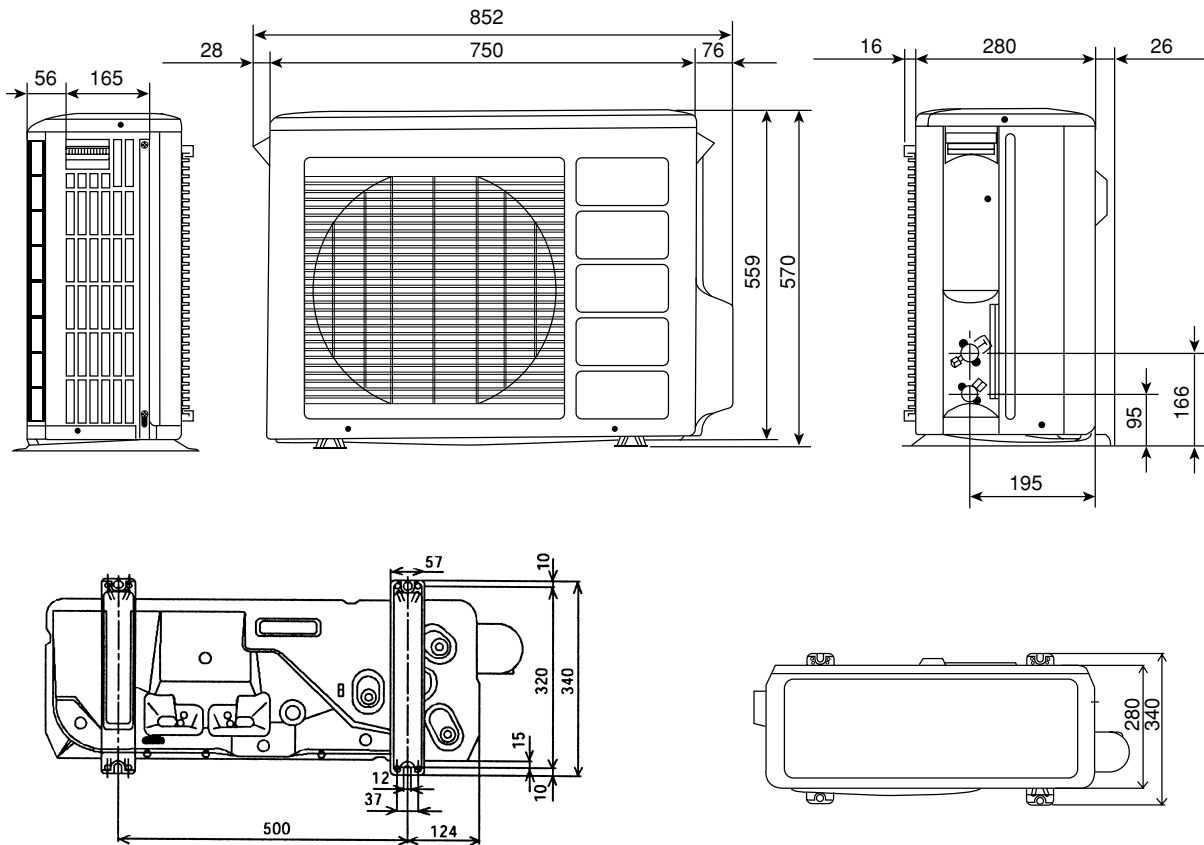

MODEL RAC-50NH5

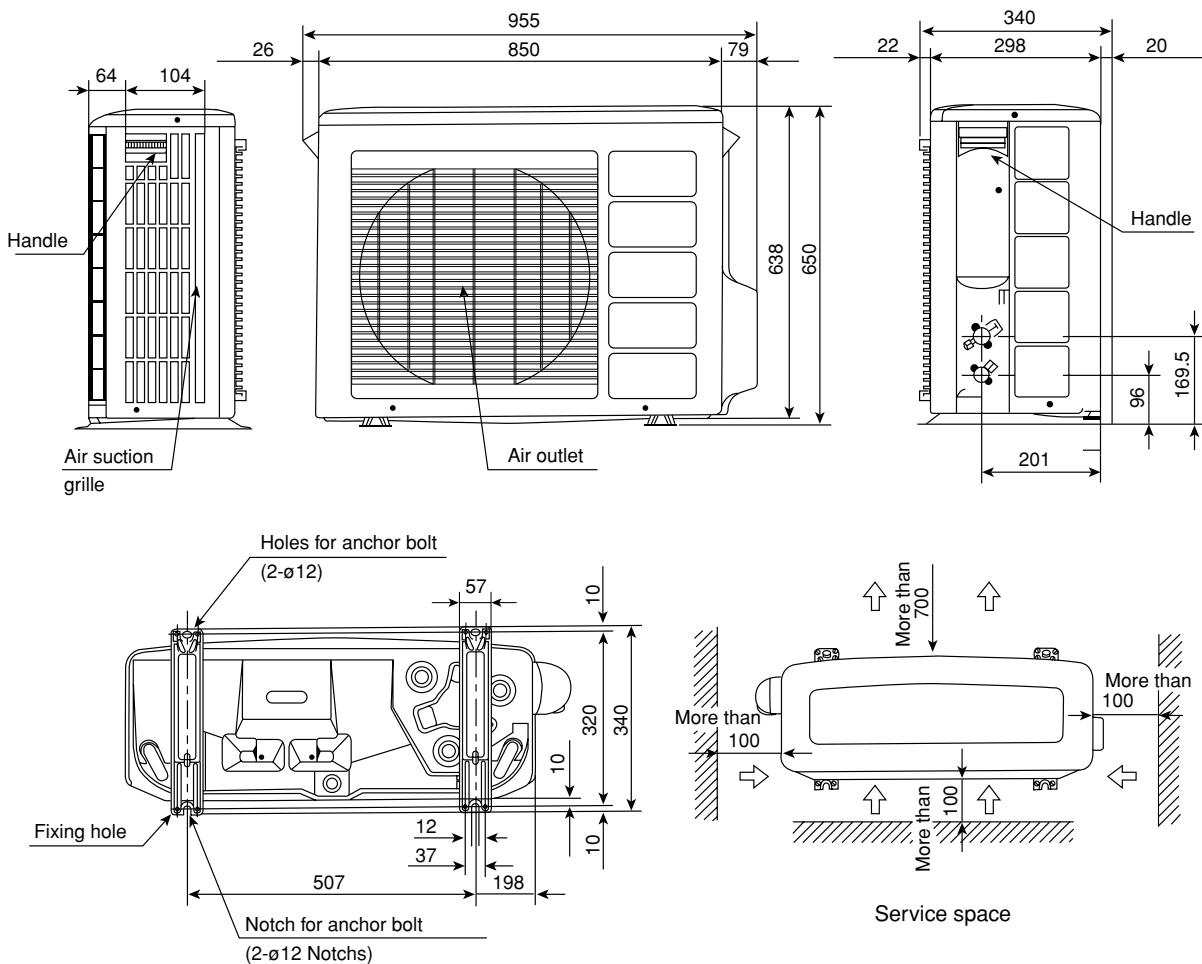

# MAIN PARTS COMPONENT



## THERMOSTAT

Thermostat Specifications

MODEL			RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7	
THERMOSTAT MODEL			IC	
OPERATION MODE			COOL	HEAT
TEMPERATURE °C (°F)	INDICATION 16	ON	14.9 (59.3)	20.4 (68.8)
		OFF	14.3 (58.3)	21.0 (69.1)
	INDICATION 24	ON	22.9 (73.7)	28.4 (83.1)
		OFF	22.3 (72.7)	29.0 (84.1)
	INDICATION 32	ON	30.9 (88.1)	36.4 (97.7)
		OFF	30.3 (87.1)	37.0 (98.8)

## FAN MOTOR

Fan Motor Specifications

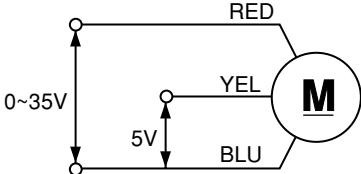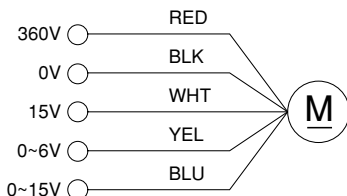MODEL	RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7	RAC-25NH5, RAC-35NH5, RAC-50NH5
POWER SOURCE	DC: 0 ~ 35V	DC360V
OUTPUT	20W	40W
CONNECTION		

BLU : BLUE

YEL : YELLOW

BRN : BROWN

WHT : WHITE

GRY : GRAY

ORN : ORANGE

GRN : GREEN

RED : RED

BLK : BLACK


PNK : PINK

VIO : VIOLET

# COMPRESSOR MOTOR

## Compressor Motor Specifications

MODEL		RAC-25NH5. RAC-35NH5	RAC-50NH5
COMPRESSOR MODEL		JU1012D	JU1013D
PHASE		SINGLE	
RATED VOLTAGE		AC 220 ~ 240 V	
RATED FREQUENCY		50 Hz	
POLE NUMBER		4	
CONNECTION			
RESISTANCE VALUE ( $\Omega$ )	20°C (68°F)	2M = 1.05	
	75°C (167°F)	2M = 1.28	

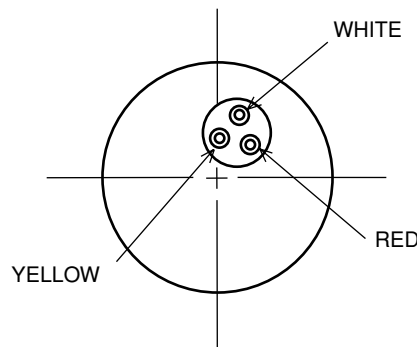

### ⚠ CAUTION

When the refrigerating cycle has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerating machine oil inside the compressor. If the color has been changed conspicuously, replace the compressor.

# WIRING DIAGRAM


MODEL RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7  
 RAC-25NH5, RAC-35NH5, RAC-50NH5

BLU : BLUE  
 GRY : GRAY  
 BLK : BLACK

YEL : YELLOW  
 ORN : ORANGE  
 PNK : PINK


BRN : BROWN  
 GRN : GREEN  
 VIO : VIOLET

WHT : WHITE  
 RED : RED

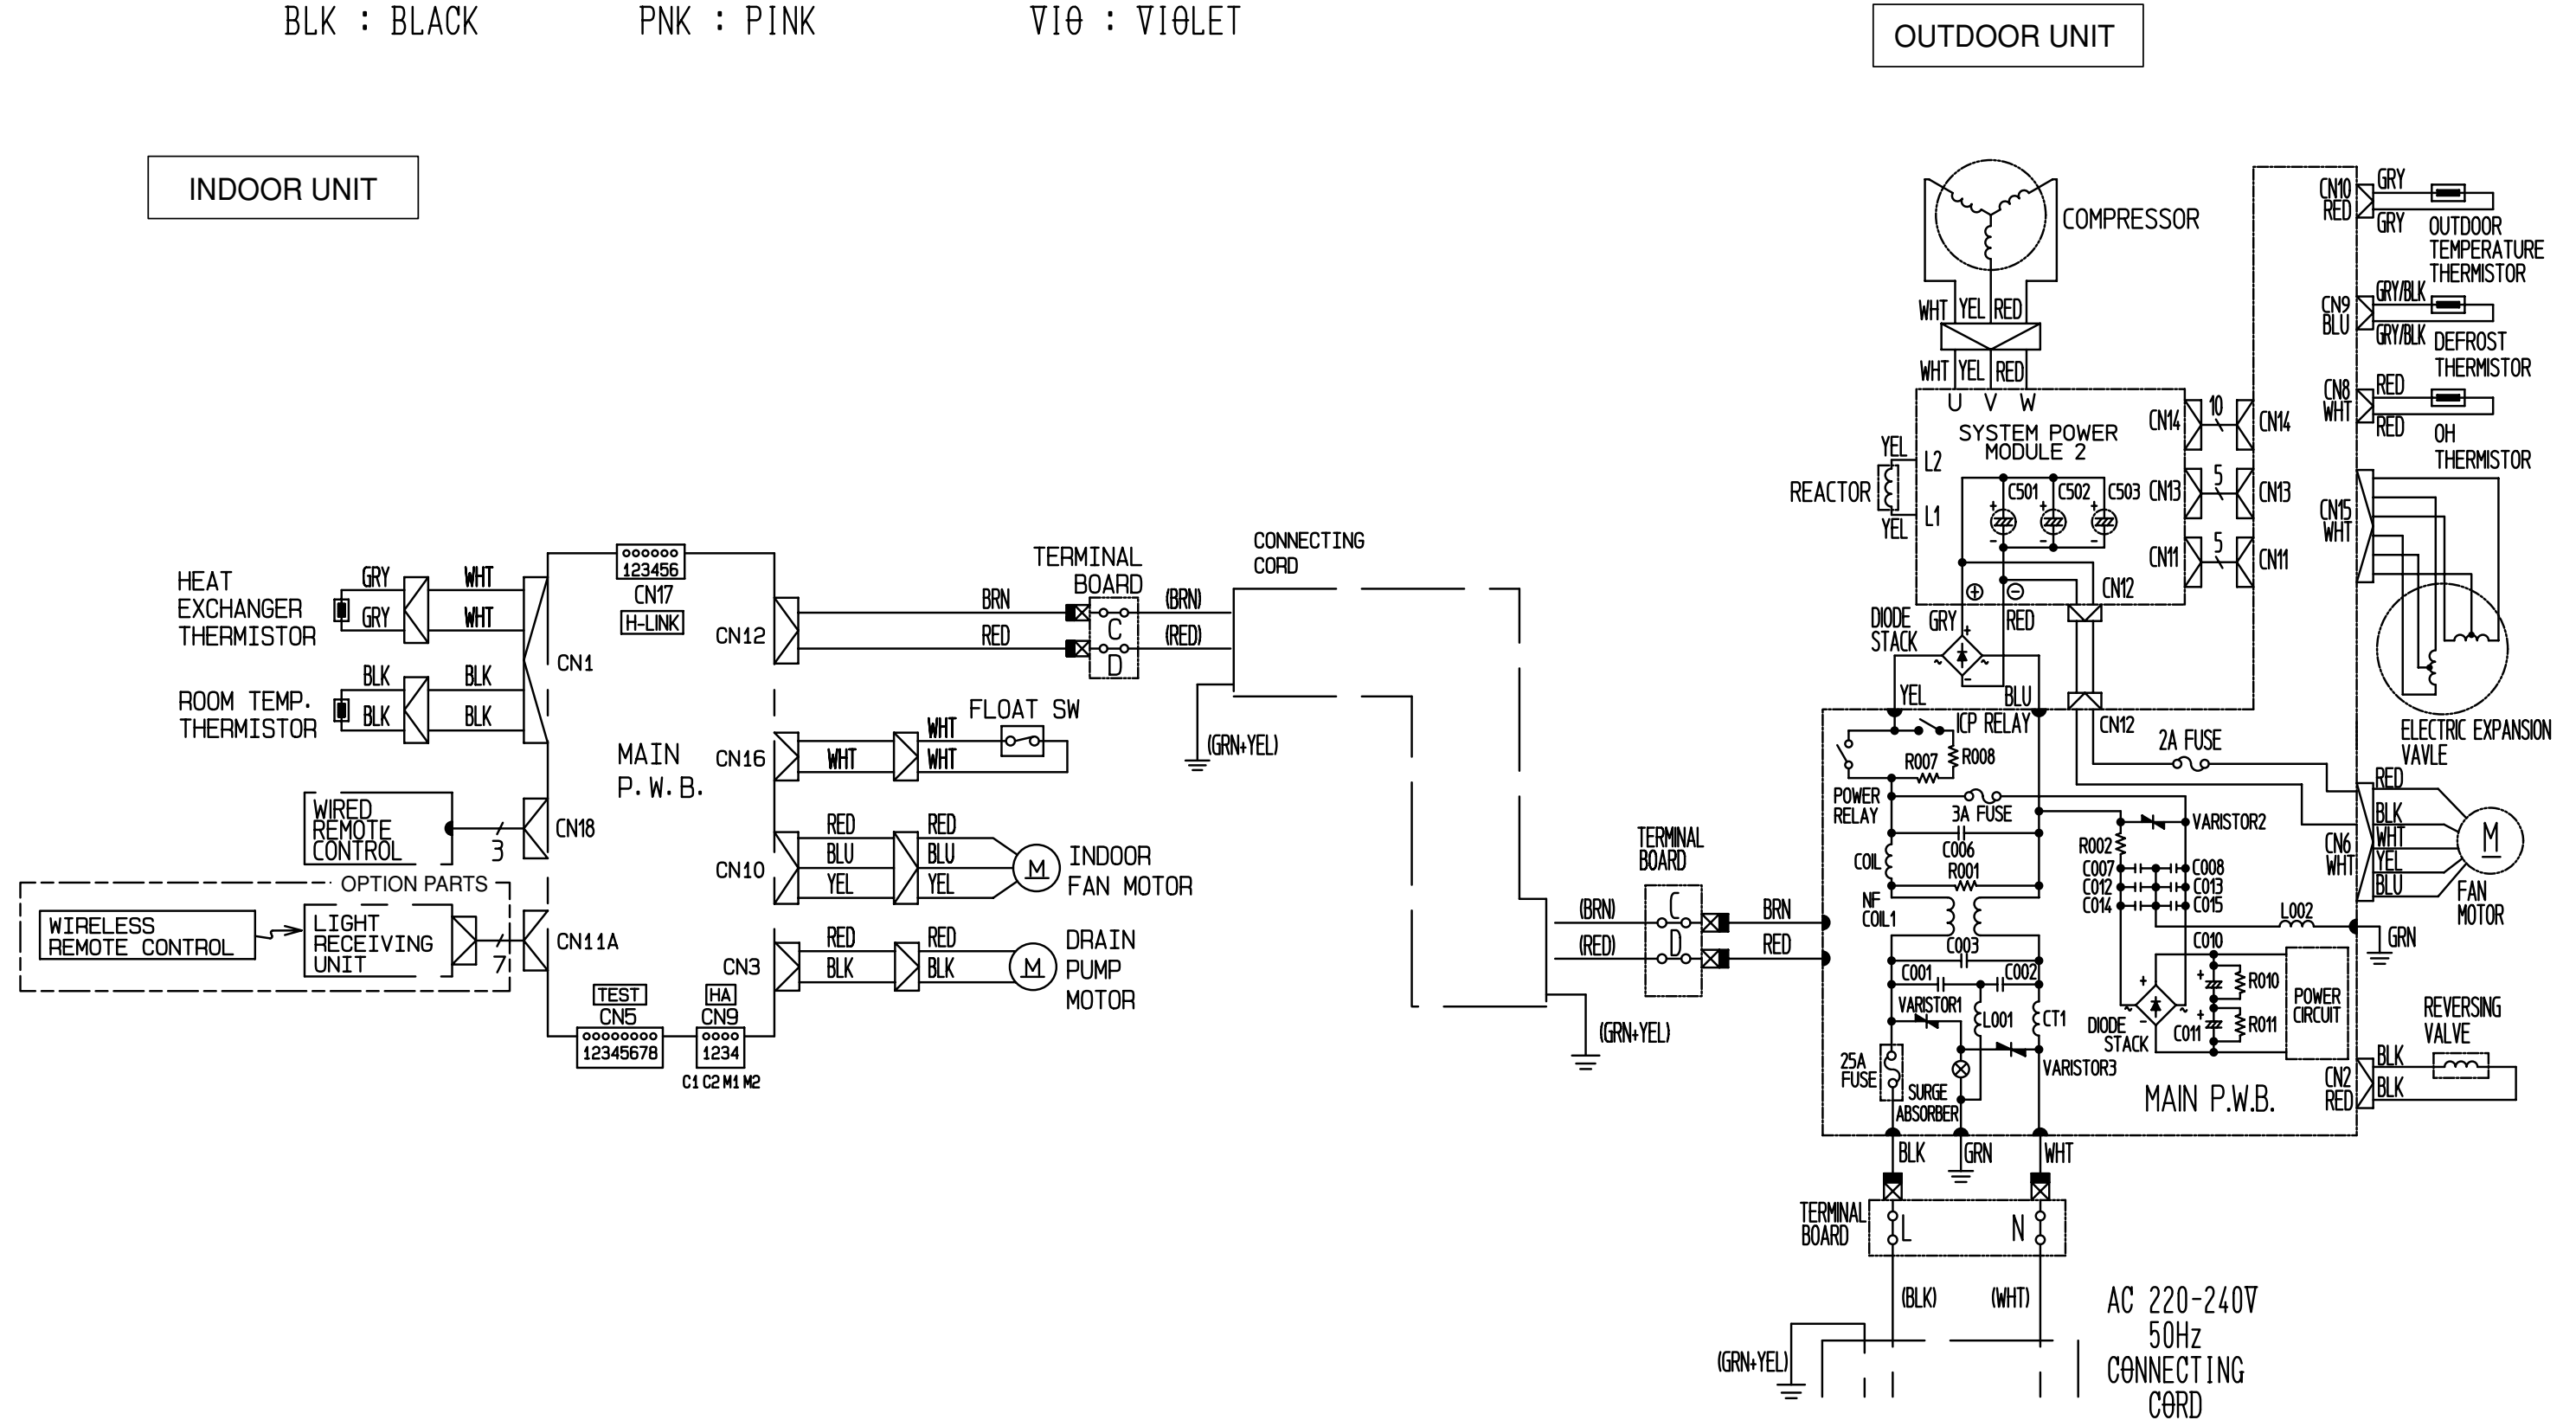

# CIRCUIT DIAGRAM

Wired Remote Control

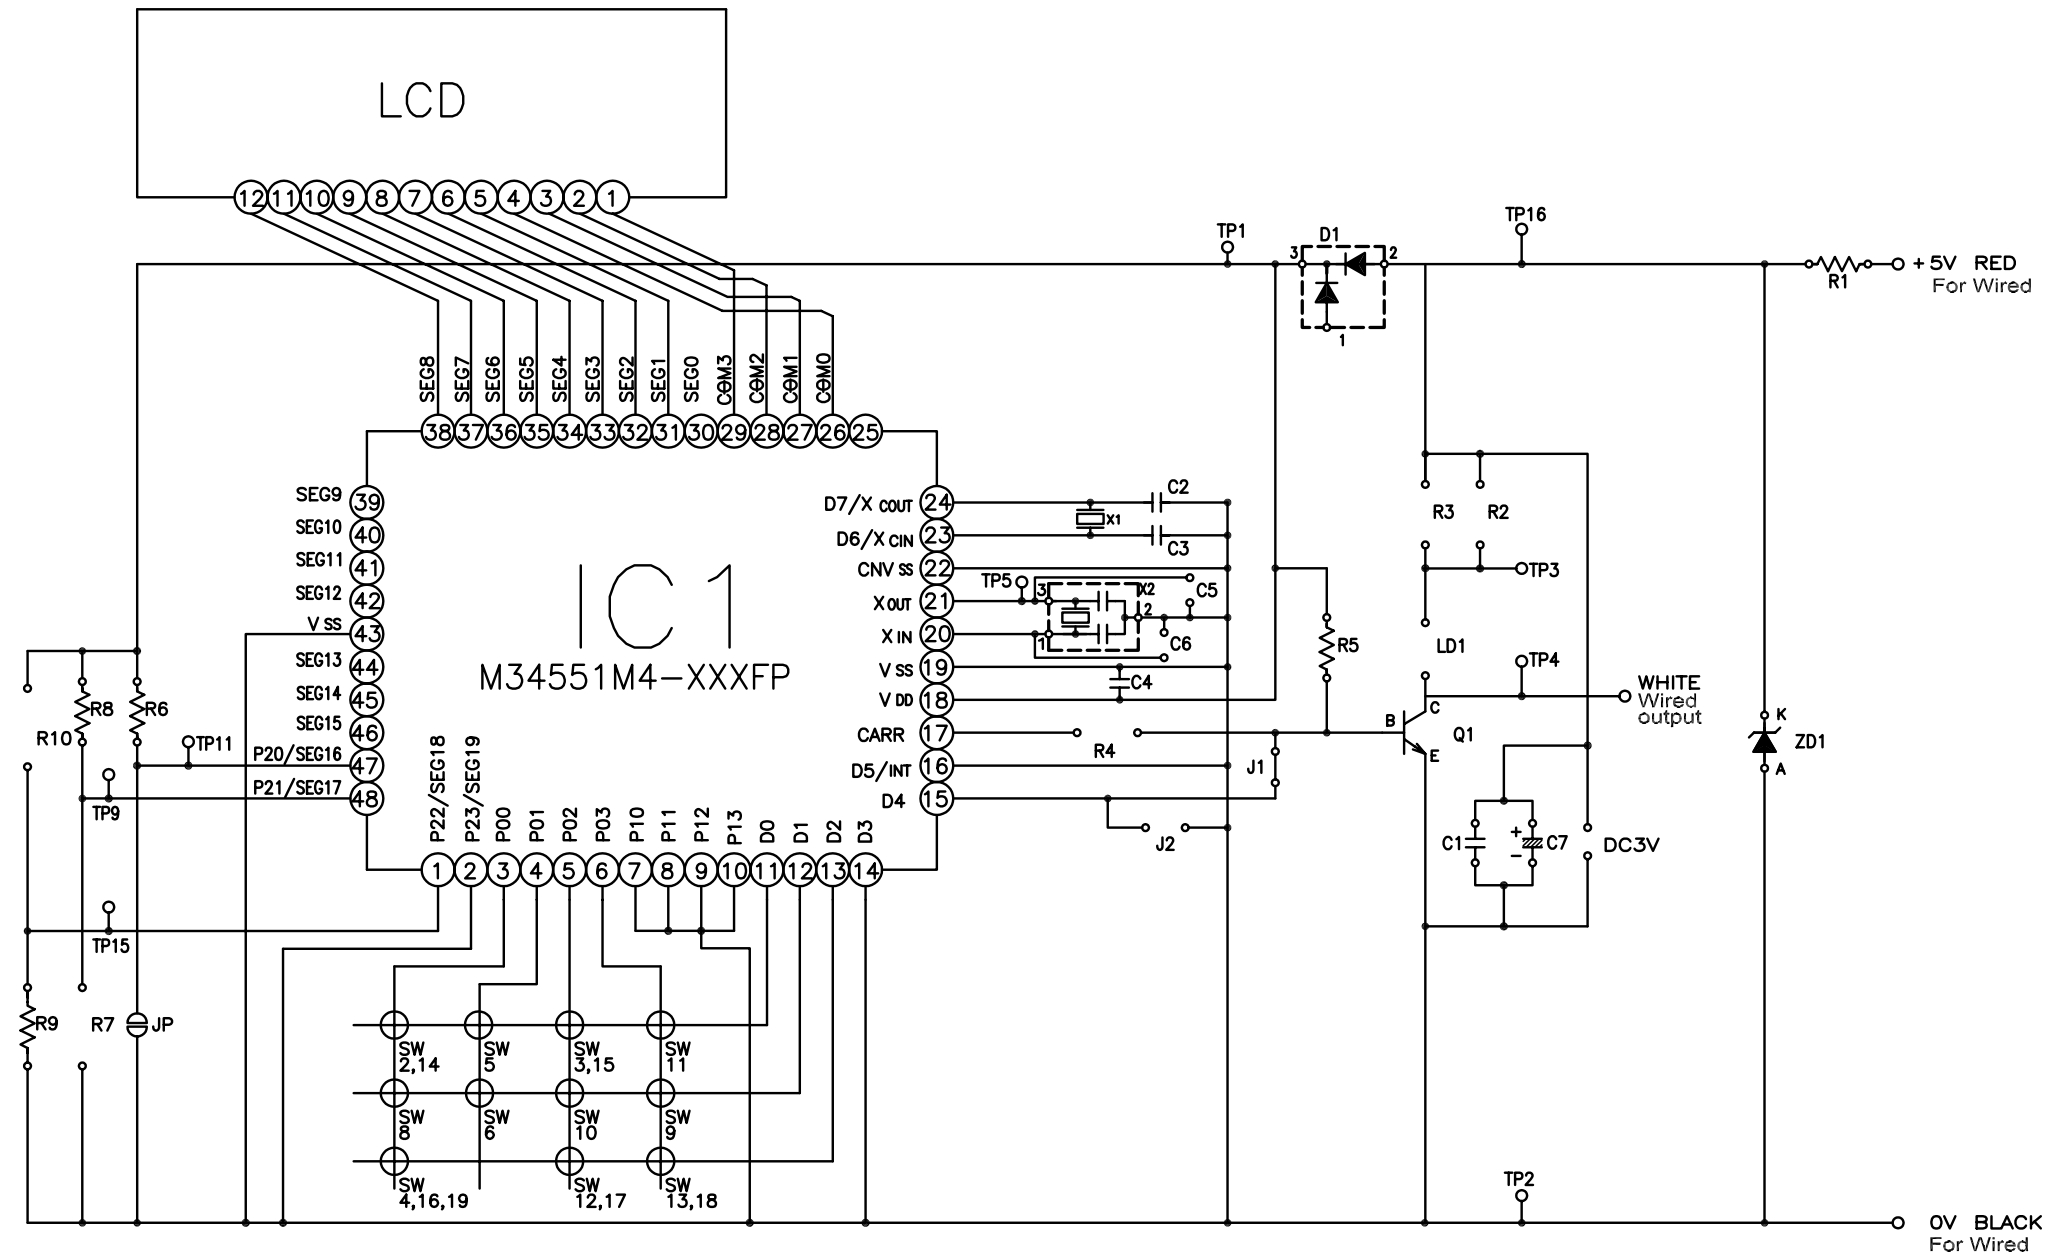

## IC

Symbol	Specification	Form
IC1	M34551M4-071FP	F

## LCD

Symbol	Specification	Form
LCD	LCD-52AB	H

## Diode

Symbol	Specification	Form
D1	RB425D	C

## Zener diode

Symbol	Specification	Form
ZD1	HZK3BTR	C

## D-Capacitor

Symbol	Specification	Form
C7	100μF, 6.3V	F

## Transistor

Symbol	Specification	Form
Q1	2SD1328S-TX	C

Size of Resistor and C-Capacitor  
 3 . . . 3216 Size  
 2 . . . 2125 Size  
 1 . . . 1608 Size

## Resonators

Symbol	Specification	Form
X1	C-R002RX 32.768kHz	H
X2	CSTCC3.64MGOH6 3.64MHz	F

## Resistor

Symbol	Specification	Size	Form
R1	150Ω, 1/10W	2	C
R5	3kΩ, 1/16W	1	C
R6	100kΩ, 1/16W	1	C
R8	10kΩ, 1/16W	1	C
R9	10kΩ, 1/16W	1	C

## Chip-jumper

Symbol	Specification	Size	Form
J1	0Ω	1	C

## C-Capacitor

Symbol	Specification	Characteristics	Size	Form
C1	1μF, 16V	F	2	C
C2	22pF, 50V	CH	2	C
C3	22pF, 50V	CH	2	C
C4	1μF, 16V	F	2	C


Table1 Key-matrix table

	P00	P01	P02	P03
D0	⊗	○	⊗	
D1	⊗	⊗	∧	∨
D2	⊗	⊗	⊗	⊗



# CIRCUIT DIAGRAM

MODEL RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7

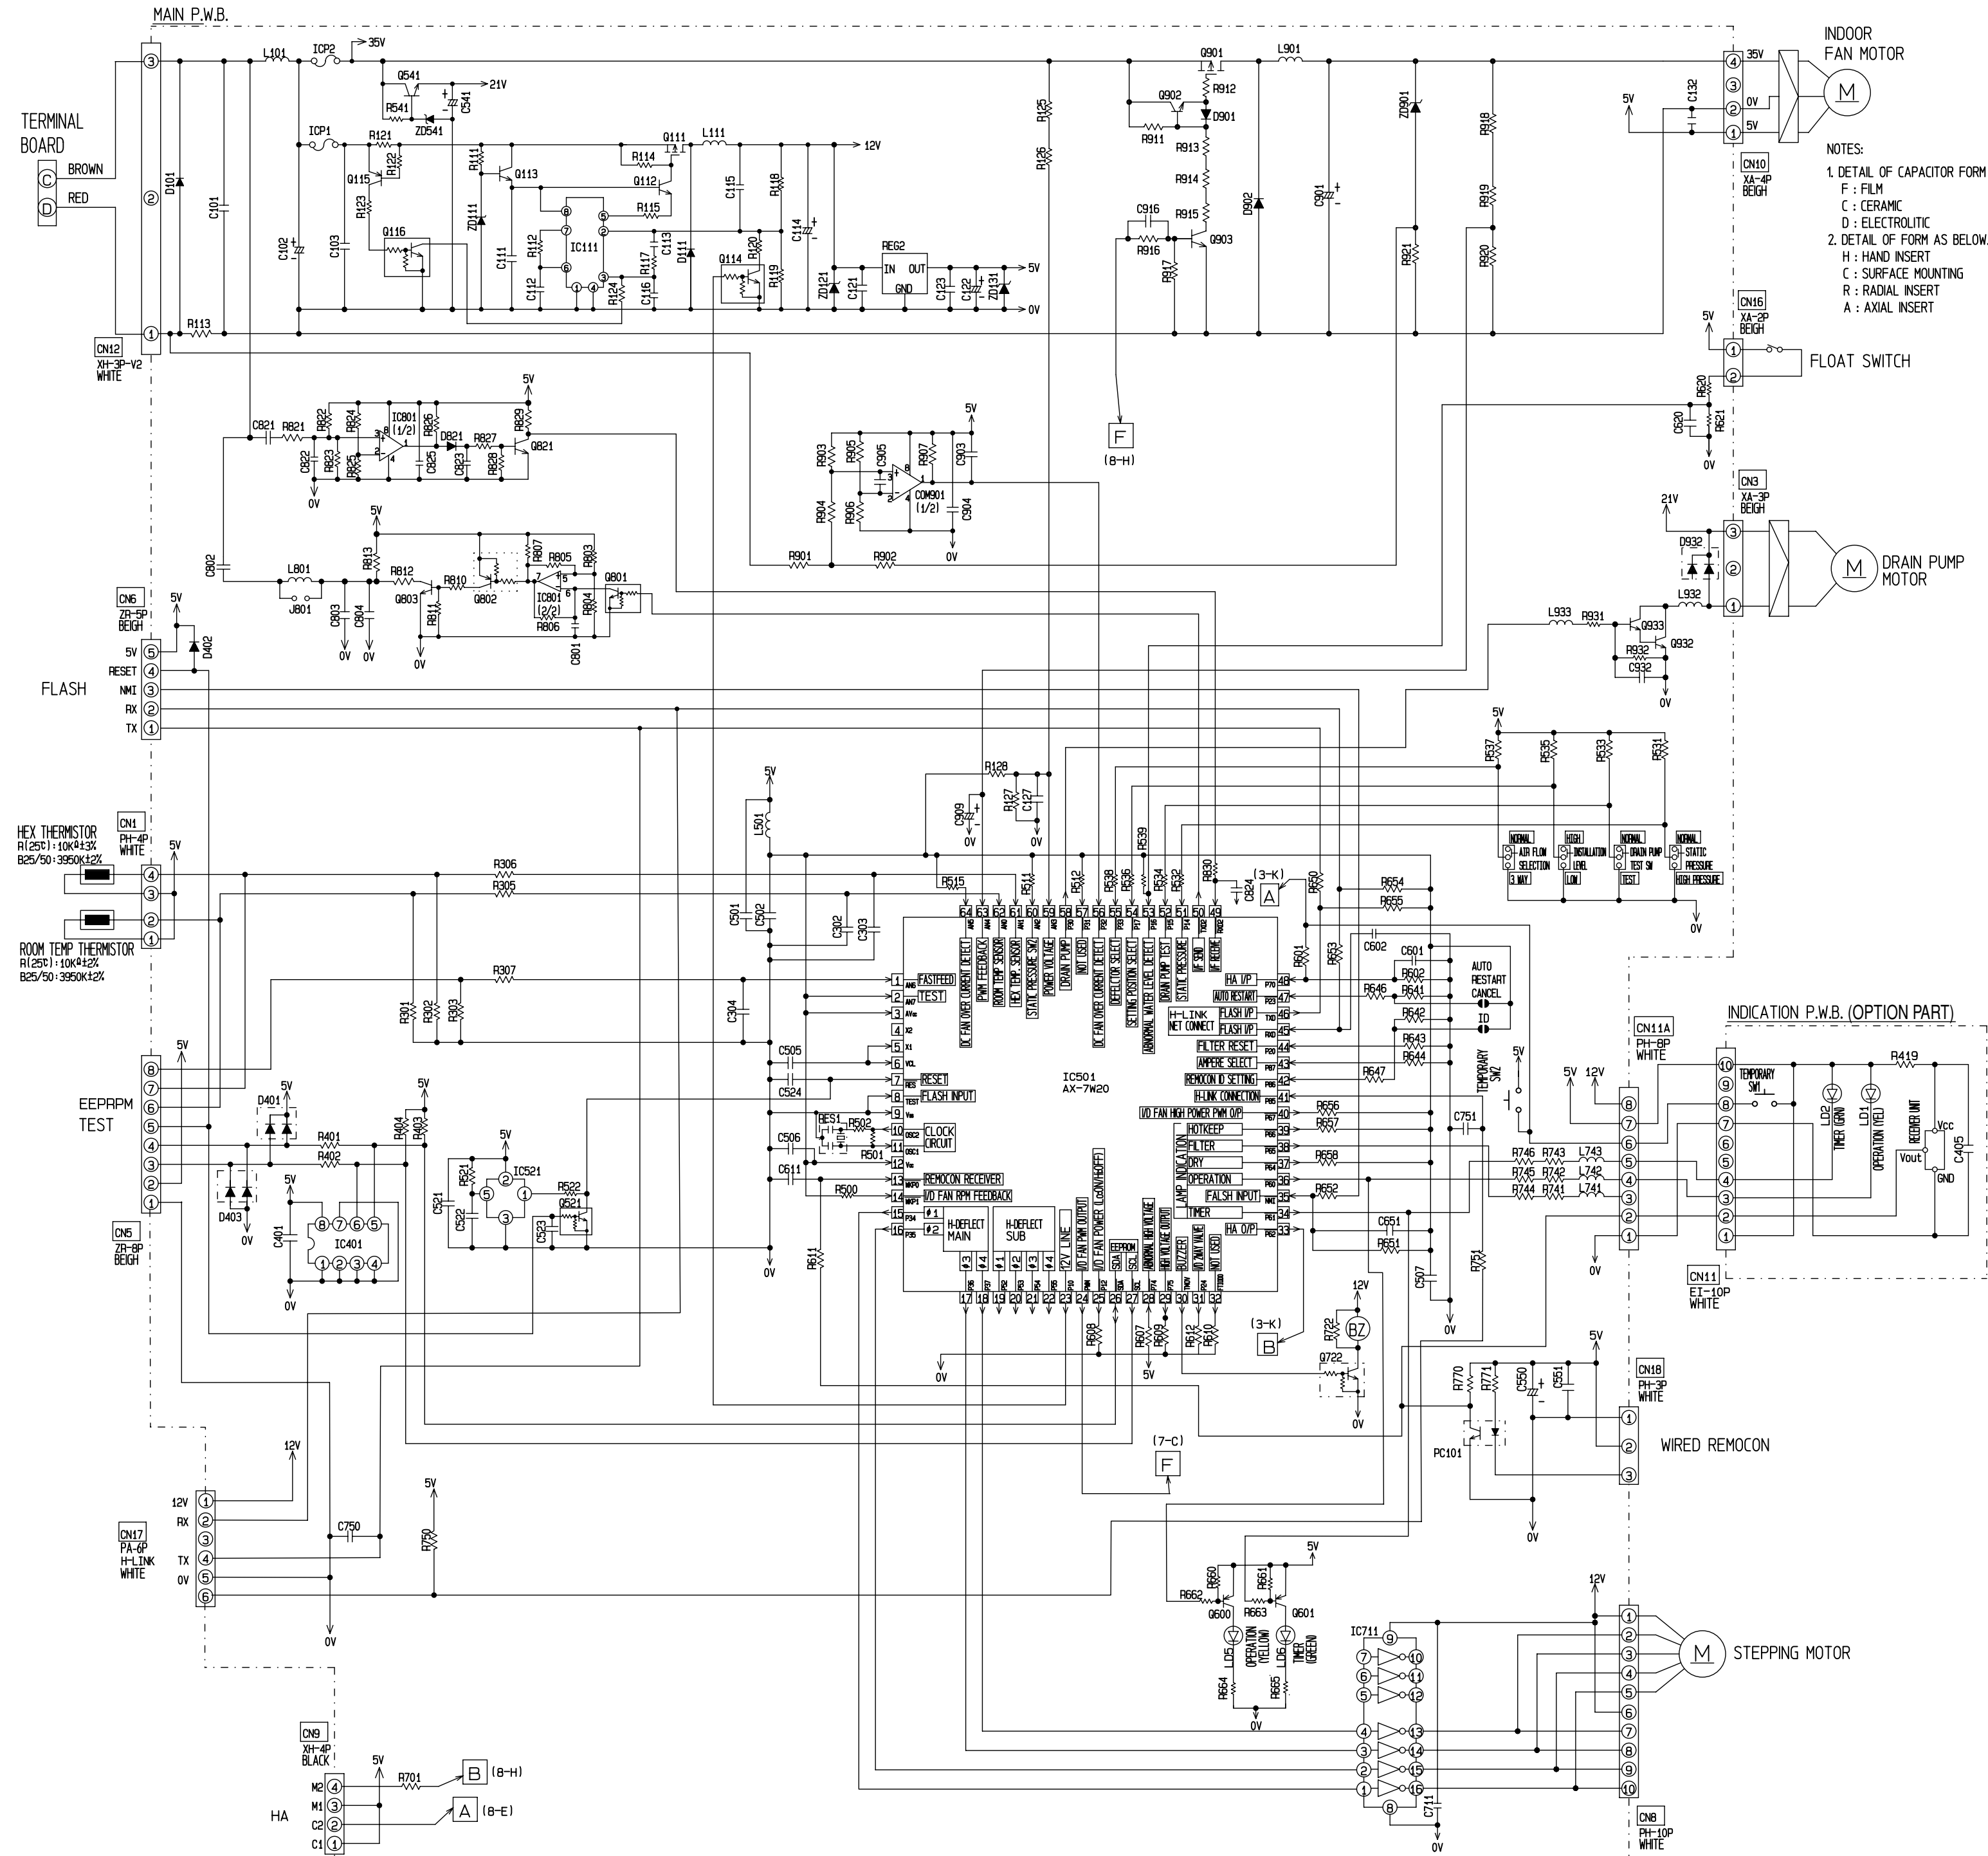

INDOOR FAN MOTOR  
 NOTES:  
 1. DETAIL OF CAPACITOR FORM AS BELOW.  
 F: FILM  
 C: CERAMIC  
 D: ELECTROLYTIC  
 H: HAND INSERT  
 S: SURFACE MOUNTING  
 R: RADIAL INSERT  
 A: AXIAL INSERT

**RESISTOR**

SYM	RESISTANCE (Ω)	TOL	POWER (W)	FORM
R111	27K	5%	1/10	C
R112	30K	5%	1/10	C
R113	0.3	5%	1	H
R114	750	5%	1/8	C
R115	560	5%	1/8	C
R117	68K	5%	1/10	C
R118	75K	2%	1/10	C
R119	6.98K	1%	1/10	C
R120	15K	2%	1/10	C
R121	0.56	5%	1/4	C
R122	100	5%	1/10	C
R123	33K	5%	1/10	C
R124	100	5%	1/10	C
R125	30K	5%	1/10	C
R126	30K	5%	1/10	C
R127	5.1K	5%	1/10	C
R128	10K	5%	1/10	C
R301	12.7K	1%	1/10	C
R302	12.7K	1%	1/10	C
R303	10K	5%	1/10	C
R305	1K	5%	1/10	C
R306	1K	5%	1/10	C
R307	1K	5%	1/10	C
R401	390	5%	1/10	C
R402	390	5%	1/10	C
R403	5.1K	5%	1/10	C
R404	5.1K	5%	1/10	C
R419	47.5K	1/6	A	
R495	10K	5%	1/10	C
R500	10K	5%	1/10	C
R501	1M	5%	1/10	C
R502	0.5K	1/10	C	
R503	120K	5%	1/10	C
R504	120K	5%	1/10	C
R505	120K	5%	1/10	C
R506	120K	5%	1/10	C
R507	120K	5%	1/10	C
R508	120K	5%	1/10	C
R509	120K	5%	1/10	C
R510	120K	5%	1/10	C
R511	120K	5%	1/10	C
R512	120K	5%	1/10	C
R513	120K	5%	1/10	C
R514	120K	5%	1/10	C
R515	120K	5%	1/10	C
R516	120K	5%	1/10	C
R517	120K	5%	1/10	C
R518	120K	5%	1/10	C
R519	120K	5%	1/10	C
R520	120K	5%	1/10	C
R521	120K	5%	1/10	C
R522	120K	5%	1/10	C
R523	120K	5%	1/10	C
R524	120K	5%	1/10	C
R525	120K	5%	1/10	C
R526	120K	5%	1/10	C
R527	120K	5%	1/10	C
R528	120K	5%	1/10	C
R529	120K	5%	1/10	C
R530	120K	5%	1/10	C
R531	120K	5%	1/10	C
R532	120K	5%	1/10	C
R533	120K	5%	1/10	C
R534	120K	5%	1/10	C
R535	120K	5%	1/10	C
R536	120K	5%	1/10	C
R537	120K	5%	1/10	C
R538	120K	5%	1/10	C
R539	120K	5%	1/10	C
R540	120K	5%	1/10	C
R541	120K	5%	1/10	C
R542	120K	5%	1/10	C
R543	120K	5%	1/10	C
R544	120K	5%	1/10	C
R545	120K	5%	1/10	C
R546	120K	5%	1/10	C
R547	120K	5%	1/10	C
R548	120K	5%	1/10	C
R549	120K	5%	1/10	C
R550	120K	5%	1/10	C
R551	120K	5%	1/10	C
R552	120K	5%	1/10	C
R553	120K	5%	1/10	C
R554	120K	5%	1/10	C
R555	120K	5%	1/10	C
R556	120K	5%	1/10	C
R557	120K	5%	1/10	C
R558	120K	5%	1/10	C
R559	120K	5%	1/10	C
R560	120K	5%	1/10	C
R561	120K	5%	1/10	C
R562	120K	5%	1/10	C
R563	120K	5%	1/10	C
R564	120K	5%	1/10	C
R565	120K	5%	1/10	C
R566	120K	5%	1/10	C
R567	120K	5%	1/10	C
R568	120K	5%	1/10	C
R569	120K	5%	1/10	C
R570	120K	5%	1/10	C
R571	120K	5%	1/10	C
R572	120K	5%	1/10	C
R573	120K	5%	1/10	C
R574	120K	5%	1/10	C
R575	120K	5%	1/10	C
R576	120K	5%	1/10	C
R577	120K	5%	1/10	C
R578	120K	5%	1/10	C
R579	120K	5%	1/10	C
R580	120K	5%	1/10	C
R581	120K	5%	1/10	C
R582	120K	5%	1/10	C
R583	120K	5%	1/10	C
R584	120K	5%	1/10	C
R585	120K	5%	1/10	C
R586	120K	5%	1/10	C
R587	120K	5%	1/10	C
R588	120K	5%	1/10	C
R589	120K	5%	1/10	C
R590	120K	5%	1/10	C
R591	120K	5%	1/10	C
R592	120K	5%	1/10	C
R593	120K	5%	1/10	C
R594	120K	5%	1/10	C
R595	120K	5%	1/10	C
R596	120K	5%	1/10	C
R597	120K	5%	1/10	C
R598	120K	5%	1/10	C
R599	120K	5%	1/10	C
R600	120K	5%	1/10	C

**CAPACITOR**

SYM	APPROXIMATE VALUE (μF)	VOL (V)	TYPE	FORM
C101	0.22	50	F	H
C102	330	63	D	H
C103	470P	630	C	C
C111	2.2	10	C	C
C112	1000P	50	C	C
C113	0.047	25	C	C
C114	220	35	D	H
C115	0.1	25	C	C
C116	0.1	25	C	C
C121	0.1	25	C	C
C122	100	10	D	H
C123	0.1	25	C	C
C127	0.1	25	C	C
C132	0.1	25	C	C
C302	0.1	25	C	C
C303	0.1	25	C	C
C304	0.1	25	C	C
C401	0.1	25	C	C
C405	47	16	D	H
C501	0.1	25	C	C
C502	0.1	25	C	C
C505	0.1	25	C	C
C506	0.1	25	C	C
C507	0.1	25	C	C
C521	0.1	25	C	C
C522	0.22	10	C	C
C523	0.1	25	C	C
C524	0.1	25	C	C
C525	0.1	25	C	C
C526	0.1	25	C	C
C527	0.1	25	C	C
C528	0.1	25	C	C
C529	0.1	25	C	C
C530	0.1	25	C	C
C531	0.1	25	C	C
C532	0.1	25	C	C
C533	0.1	25	C	C
C534	0.1	25	C	C
C535	0.1	25	C	C
C536	0.1	25	C	C
C537	0.1	25	C	C
C538	0.1	25	C	C
C539	0.1	25	C	C
C540	0.1	25	C	C
C541	100	50	D	H
C550	47	25	D	H
C551	0.1	25	C	C
C601	0.1	25	C	C
C602	1000P	50	C	C
C611	1000P	50	C	C
C620	0.1	25	C	C
C651	0.1	25	C	C
C711	0.1	25	C	C
C712	1	16	D	H
C750	1000P	50	C	C
C751	0.1	25	C	C
C762	0.1	25	C	C
C763	0.1	25	C	C
C801	150P	50	C	C
C802	0.22	50	F	H
C803	0.1	25	C	C
C804	0.1	25	C	C
C821	0.01	50	F	H
C822	1000P	50	C	C
C823	0.047	25	C	C
C824	0.01	50	F	H
C825	0.1	25	C	C
C901	330	63	D	H
C903	1000P	50	C	C
C904	0.1	25	C	C
C905	1	16	D	H
C909	10	16	D	H
C916	0.1	25	C	C
C932	1	16	D	H

**CONNECTOR**

SYM	MAKER PART NO.	COLOR	FORM	REMARK
CN1	PH-4P	WHITE	H	ROOM/HEX THERMISTOR
CN3	XA-3P-V2	BEIGH	H	DRAIN PUMP
CN5	ZR-8P	BEIGH	H	EEPROM/TEST
CN6	ZR-5P	BEIGH	H	FLASH
CN8	PH-10P	WHITE	H	STEP MOTOR
CN9	XH-4P	BLACK	H	HA
CN10	XA-4P	BEIGH	H	INDOOR FAN MOTOR
CN11	EL-10P	WHITE	H	INDICATION P.W.B.
CN14	PH-8P	WHITE	H	INDICATION P.W.B.
CN12	XH-3P-V2	WHITE	H	35V POWER
CN14	XA-4P	RED	H	MINUS ION
CN16	XA-2P	BEIGH	H	FLOAT SWITCH
CN17	PA-6P	WHITE	H	F-LINK
CN18	PH-3P	WHITE	H	WIRED REMOCON

**SWITCH**


SYM	MAKER PART NO.	FORM
SW1	SKH+LU-SW	H
SW2	SKH+LU-SW	H
SW3	SSSS912000	H
SW4	SSSS912000	H
SW5	SSSS912000	H
SW6	SSSS912000	H
SW7	SSSS912000	H
SW8	SSSS912000	H
SW9	SSSS912000	H
SW10	SSSS912000	H
SW11	SSSS912000	H
SW12	SSSS912000	H
SW13	SSSS912000	H
SW14	SSSS912000	H
SW15	SSSS912000	H
SW16	SSSS912000	H
SW17	SSSS912000	H
SW18	SSSS912000	H
SW19	SSSS912000	H
SW20	SSSS912000	H
SW21	SSSS912000	H
SW22	SSSS912000	H
SW23	SSSS912000	H
SW24	SSSS912000	H
SW25	SSSS912000	H
SW26	SSSS912000	H
SW27	SSSS912000	H
SW28	SSSS912000	H
SW29	SSSS912000	H
SW30	SSSS912000	H
SW31	SSSS912000	H
SW32	SSSS912000	H
SW33	SSSS912000	H
SW34	SSSS912000	H
SW35	SSSS912000	H
SW36	SSSS912000	H
SW37	SSSS912000	H
SW38	SSSS912000	H
SW39	SSSS912000	H
SW40	SSSS912000	H
SW41	SSSS912000	H
SW42	SSSS912000	H
SW43	SSSS912000	H
SW44	SSSS912000	H
SW45	SSSS912000	H
SW46	SSSS912000	H
SW47	SSSS912000	H
SW48	SSSS912000	H
SW49	SSSS912000	H
SW50	SSSS912000	H

**TRANSISTOR**

SYM	MAKER PART NO.	FORM
Q111	2S5J18	C
Q112	2SC5209H	C
Q113	2SC5209H	C
Q114	KRC402E	C
Q115	KTA1504S	C
Q116	KRC402E	C
Q521	PNV5D42C	C
Q522	KRC402E	C
Q523	2SD1266P	H
Q524	KTA1504S	C
Q525	KTA1504S	C
Q526	KTA1504S	C
Q527	KTA1504S	C
Q528	KTA1504S	C
Q529	KTA1504S	C
Q530	KTA1504S	C
Q531	KTA1504S	C
Q532	KTA1504S	C
Q533	KTA1504S	C
Q534	KTA1504S	C
Q535	KTA1504S	C
Q536	KTA1504S	C
Q537	KTA1504S	C
Q538	KTA1504S	C
Q539	KTA1504S	C
Q540	KTA1504S	C
Q541	KTA1504S	C
Q542	KTA1504S	C
Q543	KTA1504S	C
Q544	KTA1504S	C
Q545	KTA1504S	C
Q546	KTA1504S	C
Q547	KTA1504S	C
Q548	KTA1504S	C
Q549	KTA1504S	C
Q550	KTA1504S	C
Q551	KTA1504S	

# CIRCUIT DIAGRAM

MODEL RAC-25NH5, RAC-35NH5, RAC-50NH5

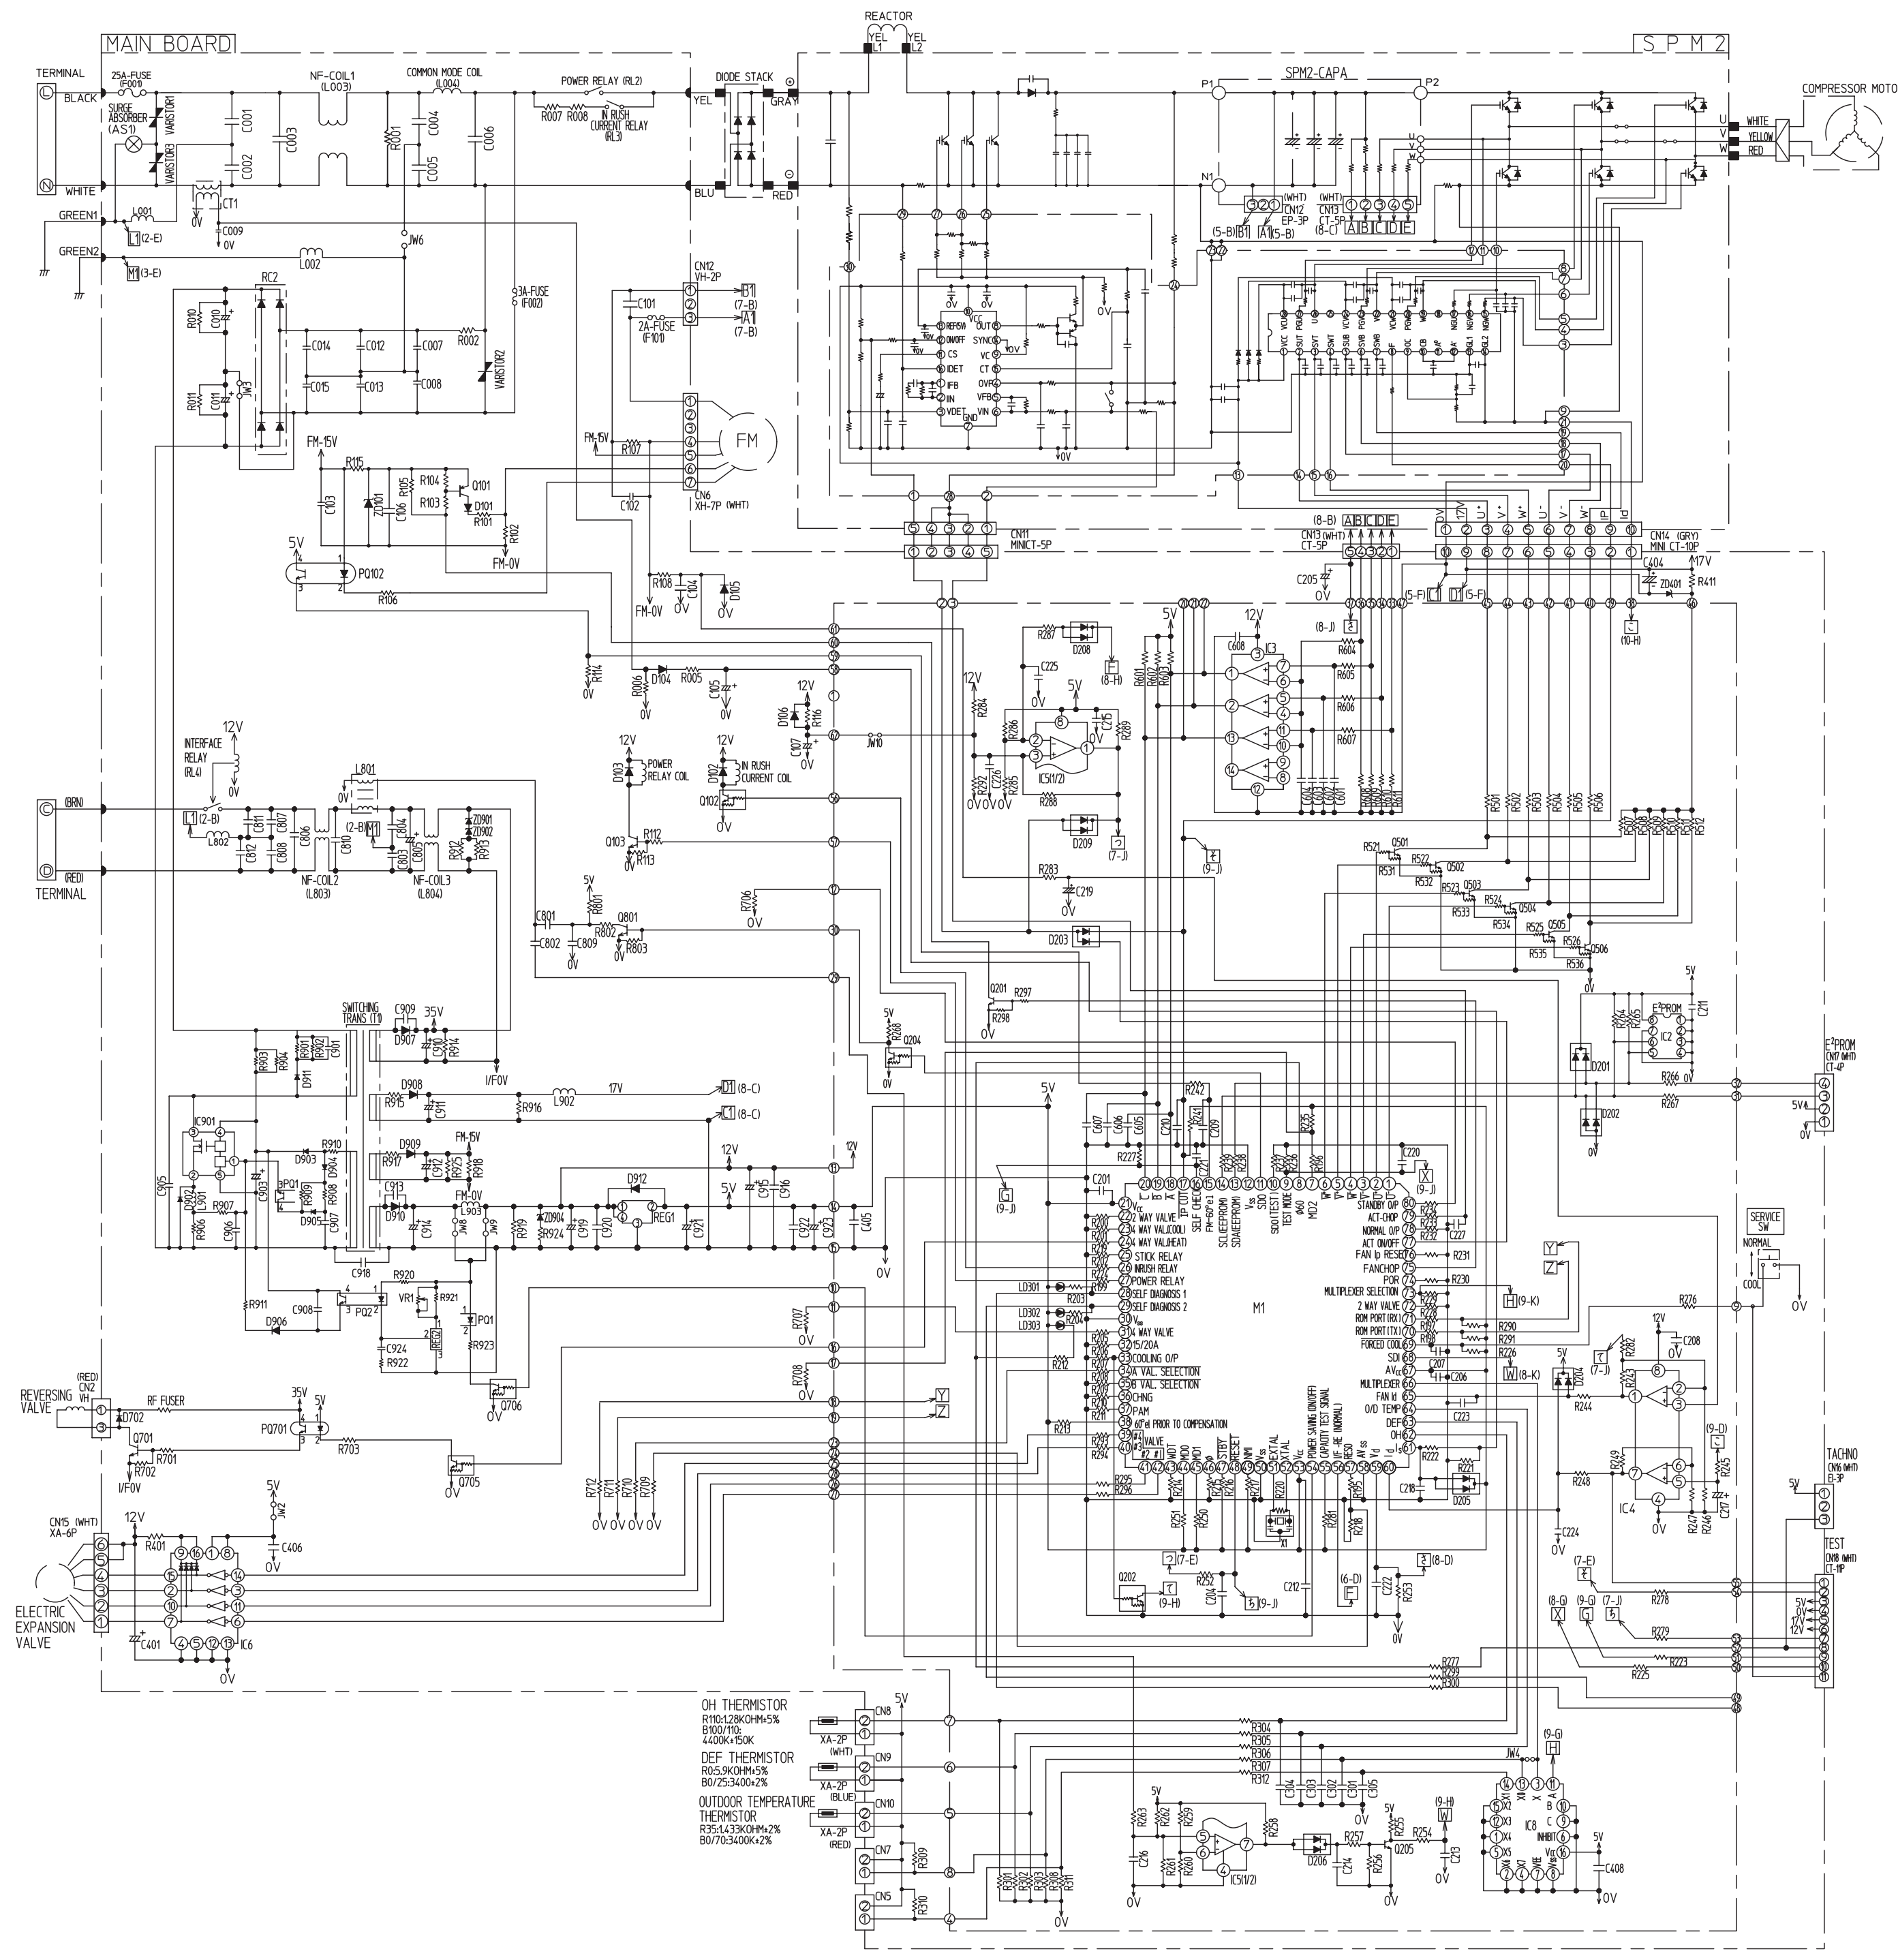

**COMPONENT TYPE**  
 A: AXIAL (R1, R2)  
 R: RADIAL (7, 5MM PITCH)  
 H: MANUAL INSERT  
 C: CERAMIC  
 F: FILM  
 D: ELECTROLYTIC  
**BOARD**  
 HIC: HYBRID IC  
 M: MAIN BOARD

**RESISTORS**

MARK	RATING (R) (%) (W)	REMARK
R001	470K 5% 1/2 A M	
R002	2.2 5% 1/4 A M	
R003	169K 1% 1/4 A M	
R004	1K 1% 1/4 A M	
R005	100 5% 1/4 H M	
R006	470K 5% 1/2 A M	
R007	470K 5% 1/2 A M	
R008	100 5% 1/4 H M	
R009	100 5% 1/4 A M	
R010	470K 5% 1/2 A M	
R011	470K 5% 1/2 A M	

**RESISTORS**

MARK	RATING (R) (%) (W)	REMARK
R401	100 5% 1/4 A M	
R411	JUMPER	
R501	1K 5% 1/4 C HIC	
R502	1K 5% 1/4 C HIC	
R503	1K 5% 1/4 C HIC	
R504	1K 5% 1/4 C HIC	
R505	1K 5% 1/4 C HIC	
R506	1K 5% 1/4 C HIC	
R507	1K 5% 1/4 C HIC	
R508	1K 5% 1/4 C HIC	
R509	1K 5% 1/4 C HIC	
R510	1K 5% 1/4 C HIC	
R511	1K 5% 1/4 C HIC	
R512	1K 5% 1/4 C HIC	
R513	1K 5% 1/4 C HIC	
R514	1K 5% 1/4 C HIC	
R515	1K 5% 1/4 C HIC	
R516	1K 5% 1/4 C HIC	
R517	1K 5% 1/4 C HIC	
R518	1K 5% 1/4 C HIC	
R519	1K 5% 1/4 C HIC	
R520	1K 5% 1/4 C HIC	
R521	1K 5% 1/4 C HIC	
R522	1K 5% 1/4 C HIC	
R523	1K 5% 1/4 C HIC	
R524	1K 5% 1/4 C HIC	
R525	1K 5% 1/4 C HIC	
R526	1K 5% 1/4 C HIC	
R527	1K 5% 1/4 C HIC	
R528	1K 5% 1/4 C HIC	
R529	1K 5% 1/4 C HIC	
R530	1K 5% 1/4 C HIC	
R531	1K 5% 1/4 C HIC	
R532	1K 5% 1/4 C HIC	
R533	1K 5% 1/4 C HIC	
R534	1K 5% 1/4 C HIC	
R535	1K 5% 1/4 C HIC	
R536	1K 5% 1/4 C HIC	

**CAPACITORS**

MARK	RATING (U) (F) (V)	REMARK
C001	0.01 25 C P M	
C002	0.01 25 C P M	
C003	0.01 25 C P M	
C004	0.01 25 C P M	
C005	0.01 25 C P M	
C006	4 400 F H M	
C007	0.01 25 C P M	
C008	0.01 25 C P M	
C009	0.1 50 C R M	
C010	100 250 D R M	
C011	100 250 D R M	
C012	0.01 25 C P M	
C013	0.01 25 C P M	
C014	0.01 25 C P M	
C015	0.01 25 C P M	
C016	0.082 630 F H M	
C017	0.01 25 C P M	
C018	0.1 50 C R M	
C019	100 250 D R M	
C020	100 250 D R M	
C021	0.047 25 C C HIC	
C022	0.047 25 C C HIC	
C023	0.047 25 C C HIC	
C024	0.047 25 C C HIC	
C025	0.047 25 C C HIC	
C026	0.047 25 C C HIC	
C027	0.047 25 C C HIC	
C028	0.047 25 C C HIC	
C029	0.047 25 C C HIC	
C030	0.047 25 C C HIC	
C031	0.047 25 C C HIC	
C032	0.047 25 C C HIC	
C033	0.047 25 C C HIC	
C034	0.047 25 C C HIC	
C035	0.047 25 C C HIC	
C036	0.047 25 C C HIC	
C037	0.047 25 C C HIC	
C038	0.047 25 C C HIC	
C039	0.047 25 C C HIC	
C040	0.047 25 C C HIC	
C041	0.047 25 C C HIC	
C042	0.047 25 C C HIC	
C043	0.047 25 C C HIC	
C044	0.047 25 C C HIC	
C045	0.047 25 C C HIC	
C046	0.047 25 C C HIC	
C047	0.047 25 C C HIC	
C048	0.047 25 C C HIC	
C049	0.047 25 C C HIC	
C050	0.047 25 C C HIC	
C051	0.047 25 C C HIC	
C052	0.047 25 C C HIC	
C053	0.047 25 C C HIC	
C054	0.047 25 C C HIC	
C055	0.047 25 C C HIC	
C056	0.047 25 C C HIC	

**LEDS**

MARK	MODEL	REMARK
L0301	LTD067A	C HIC RED
L0302	LTD067A	C HIC RED
L0303	LTD067A	C HIC RED
L801	TD02	H M H
L802	FBAD2M450	A M H
L803	CM204	A M H
L804	CM137	A M H
L901	BL08RN1	A M H
L902	JUMPER	A M H
L903	JUMPER	A M H
L904	JUMPER	A M H
L905	JUMPER	A M H
L906	JUMPER	A M H
L907	JUMPER	A M H
L908	JUMPER	A M H
L909	JUMPER	A M H
L910	JUMPER	A M H
L911	JUMPER	A M H
L912	JUMPER	A M H
L913	JUMPER	A M H
L914	JUMPER	A M H
L915	JUMPER	A M H
L916	JUMPER	A M H
L917	JUMPER	A M H
L918	JUMPER	A M H
L919	JUMPER	A M H
L920	JUMPER	A M H
L921	JUMPER	A M H
L922	JUMPER	A M H
L923	JUMPER	A M H
L924	JUMPER	A M H
L925	JUMPER	A M H
L926	JUMPER	A M H
L927	JUMPER	A M H
L928	JUMPER	A M H
L929	JUMPER	A M H
L930	JUMPER	A M H
L931	JUMPER	A M H
L932	JUMPER	A M H
L933	JUMPER	A M H
L934	JUMPER	A M H
L935	JUMPER	A M H
L936	JUMPER	A M H
L937	JUMPER	A M H
L938	JUMPER	A M H
L939	JUMPER	A M H
L940	JUMPER	A M H
L941	JUMPER	A M H
L942	JUMPER	A M H
L943	JUMPER	A M H
L944	JUMPER	A M H
L945	JUMPER	A M H
L946	JUMPER	A M H
L947	JUMPER	A M H
L948	JUMPER	A M H
L949	JUMPER	A M H
L950	JUMPER	A M H
L951	JUMPER	A M H
L952	JUMPER	A M H
L953	JUMPER	A M H
L954	JUMPER	A M H
L955	JUMPER	A M H
L956	JUMPER	A M H
L957	JUMPER	A M H
L958	JUMPER	A M H
L959	JUMPER	A M H
L960	JUMPER	A M H
L961	JUMPER	A M H
L962	JUMPER	A M H
L963	JUMPER	A M H
L964	JUMPER	A M H
L965	JUMPER	A M H
L966	JUMPER	A M H
L967	JUMPER	A M H
L968	JUMPER	A M H
L969	JUMPER	A M H
L970	JUMPER	A M H
L971	JUMPER	A M H
L972	JUMPER	A M H
L973	JUMPER	A M H
L974	JUMPER	A M H
L975	JUMPER	A M H
L976	JUMPER	A M H
L977	JUMPER	A M H
L978	JUMPER	A M H
L979	JUMPER	A M H
L980	JUMPER	A M H
L981	JUMPER	A M H
L982	JUMPER	A M H
L983	JUMPER	A M H
L984	JUMPER	A M H
L985	JUMPER	A M H
L986	JUMPER	A M H
L987	JUMPER	A M H
L988	JUMPER	A M H
L989	JUMPER	A M H
L990	JUMPER	A M H
L991	JUMPER	A M H
L992	JUMPER	A M H
L993	JUMPER	A M H
L994	JUMPER	A M H
L995	JUMPER	A M H
L996	JUMPER	A M H
L997	JUMPER	A M H
L998	JUMPER	A M H
L999	JUMPER	A M H
L1000	JUMPER	A M H

**GENERAL DIODES**

MARK	MODEL	REMARK
ZD01	HZD10PK	H M H
ZD02	HZD10PK	H M H
ZD03	HZD10PK	H M H
ZD04	HZD10PK	H M H
ZD05	HZD10PK	H M H
ZD06	HZD10PK	H M H
ZD07	HZD10PK	H M H
ZD08	HZD10PK	H M H
ZD09	HZD10PK	H M H
ZD10	HZD10PK	H M H
ZD11	HZD10PK	H M H
ZD12	HZD10PK	H M H
ZD13	HZD10PK	H M H
ZD14	HZD10PK	H M H
ZD15	HZD10PK	H M H
ZD16	HZD10PK	H M H
ZD17	HZD10PK	H M H
ZD18	HZD10PK	H M H
ZD19	HZD10PK	H M H
ZD20	HZD10PK	H M H
ZD21	HZD10PK	H M H
ZD22	HZD10PK	H M H
ZD23	HZD10PK	H M H
ZD24	HZD10PK	H M H
ZD25	HZD10PK	H M H
ZD26	HZD10PK	H M H
ZD27	HZD10PK	H M H
ZD28	HZD10PK	H M H
ZD29	HZD10PK	H M H
ZD30	HZD10PK	H M H
ZD31	HZD10PK	H M H
ZD32	HZD10PK	H M H
ZD33	HZD10PK	H M H
ZD34	HZD10PK	H M H
ZD35	HZD10PK	H M H
ZD36	HZD10PK	H M H
ZD37	HZD10PK	H M H
ZD38	HZD10PK	H M H
ZD39	HZD10PK	H M H
ZD40	HZD10PK	H M H
ZD41	HZD10PK	H M H
ZD42	HZD10PK	H M H
ZD43	HZD10PK	H M H
ZD44	HZD10PK	H M H
ZD45	HZD10PK	H M H
ZD46	HZD10PK	H M H
ZD47	HZD10PK	H M H
ZD48	HZD10PK	H M H
ZD49	HZD10PK	H M H
ZD50	HZD10PK	H M H
ZD51	HZD10PK	H M H
ZD52	HZD10PK	H M H
ZD53	HZD10PK	H M H
ZD54	HZD10PK	H M H
ZD55	HZD10PK	H M H
ZD56	HZD10PK	H M H
ZD57	HZD10PK	H M H
ZD58	HZD10PK	H M H
ZD59	HZD10PK	H M H
ZD60	HZD10PK	H M H
ZD61	HZD10PK	H M H
ZD62	HZD10PK	H M H
ZD63	HZD10PK	H M H
ZD64	HZD10PK	H M H
ZD65	HZD10PK	H M H
ZD66	HZD10PK	H M H
ZD67	HZD10PK	H M H
ZD68	HZD10PK	H M H
ZD69	HZD10PK	H M H
ZD70	HZD10PK	H M H
ZD71	HZD10PK	H M H
ZD72	HZD10PK	H M H
ZD73	HZD10PK	H M H
ZD74	HZD10PK	H M H
ZD75	HZD10PK	H M H
ZD76	HZD10PK	H M H
ZD77	HZD10PK	H M H
ZD78	HZD10PK	H M H
ZD79	HZD10PK	H M H
ZD80	HZD10PK	H M H
ZD81	HZD10PK	H M H
ZD82	HZD10PK	H M H
ZD83	HZD10PK	H M H
ZD84	HZD10PK	H M H
ZD85	HZD10PK	H M H
ZD86	HZD10PK	H M H
ZD87	HZD10PK	H M H
ZD88	HZD10PK	H M H
ZD89	HZD10PK	H M H
ZD90	HZD10PK	H M H
ZD91	HZD10PK	H M H
ZD92	HZD10PK	H M H
ZD93	HZD10PK	H M H
ZD94	HZD10PK	H M H
ZD95	HZD10PK	H M H
ZD96	HZD10PK	H M H
ZD97	HZD10PK	H M H
ZD98	HZD10PK	H M H
ZD99	HZD10PK	H M H
ZD100	HZD10PK	H M H

**OSCILLATOR**


MARK	MODEL	REMARK
X1	CS1V6XKXDC3	C HIC BRN

**TRANSISTORS**

MARK	MODEL	REMARK
Q01	2SA673	R M H
Q02	DT144YSATP	R M H
Q03	2SC3246	R M H
Q04	2SC3246	R M H
Q05	2SC3246	R M H
Q06	2SC3246	R M H
Q07	2SC3246	R M H
Q08	2SC3246	R M H
Q09	2SC3246	R M H
Q10	2SC3246	R M H
Q11	2SC3246	R M H
Q12	2SC3246	R M H
Q13	2SC3246	R M H
Q14	2SC3246	R M H
Q15	2SC3246	R M H
Q16	2SC3246	R M H
Q17	2SC3246	R M H
Q18	2SC3246	R M H
Q19	2SC3246	R M H
Q20	2SC3246	R M H
Q21	2SC3246	R M H
Q22	2SC3246	R M H
Q23	2SC3246	R M H
Q24	2SC3246	R M H
Q25	2SC3246	R M H
Q26	2SC3246	R M H
Q27	2SC3246	R M H
Q28	2SC3246	R M H
Q29	2SC3246	R M H
Q30	2SC3246	R M H
Q31	2SC3246	R M H
Q32	2SC3246	R M H
Q33	2SC3246	R M H
Q34	2SC3246	R M H
Q35	2SC3246	R M H
Q36	2SC3246	R M H
Q37	2SC3246	R M H
Q38	2SC3246	R M H
Q39	2SC3246	R M H
Q40	2SC3246	R M H
Q41	2SC3246	R M H
Q42	2SC3246	R M H
Q43	2SC3246	R M H
Q44	2SC3246	R M H
Q45	2SC3246	R M H
Q46	2SC3246	R M H
Q47	2SC3246	R M H
Q48	2SC3246	R M H
Q49	2SC3246	R M H
Q50	2SC3246	R M H
Q51	2SC3246	R M H
Q52	2SC3246	R M H
Q53	2SC3246	R M H
Q54	2SC3246	R M H
Q55	2SC3246	R M H
Q56	2SC3246	R M H
Q57	2SC3246	R M H
Q58	2SC3246	R M H
Q59	2SC3246	R M H
Q60	2SC3246	R M H
Q61	2SC3246	R M H

# BLOCK DIAGRAM

MODEL RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7  
 RAC-25NH5, RAC-35NH5, RAC-50NH5

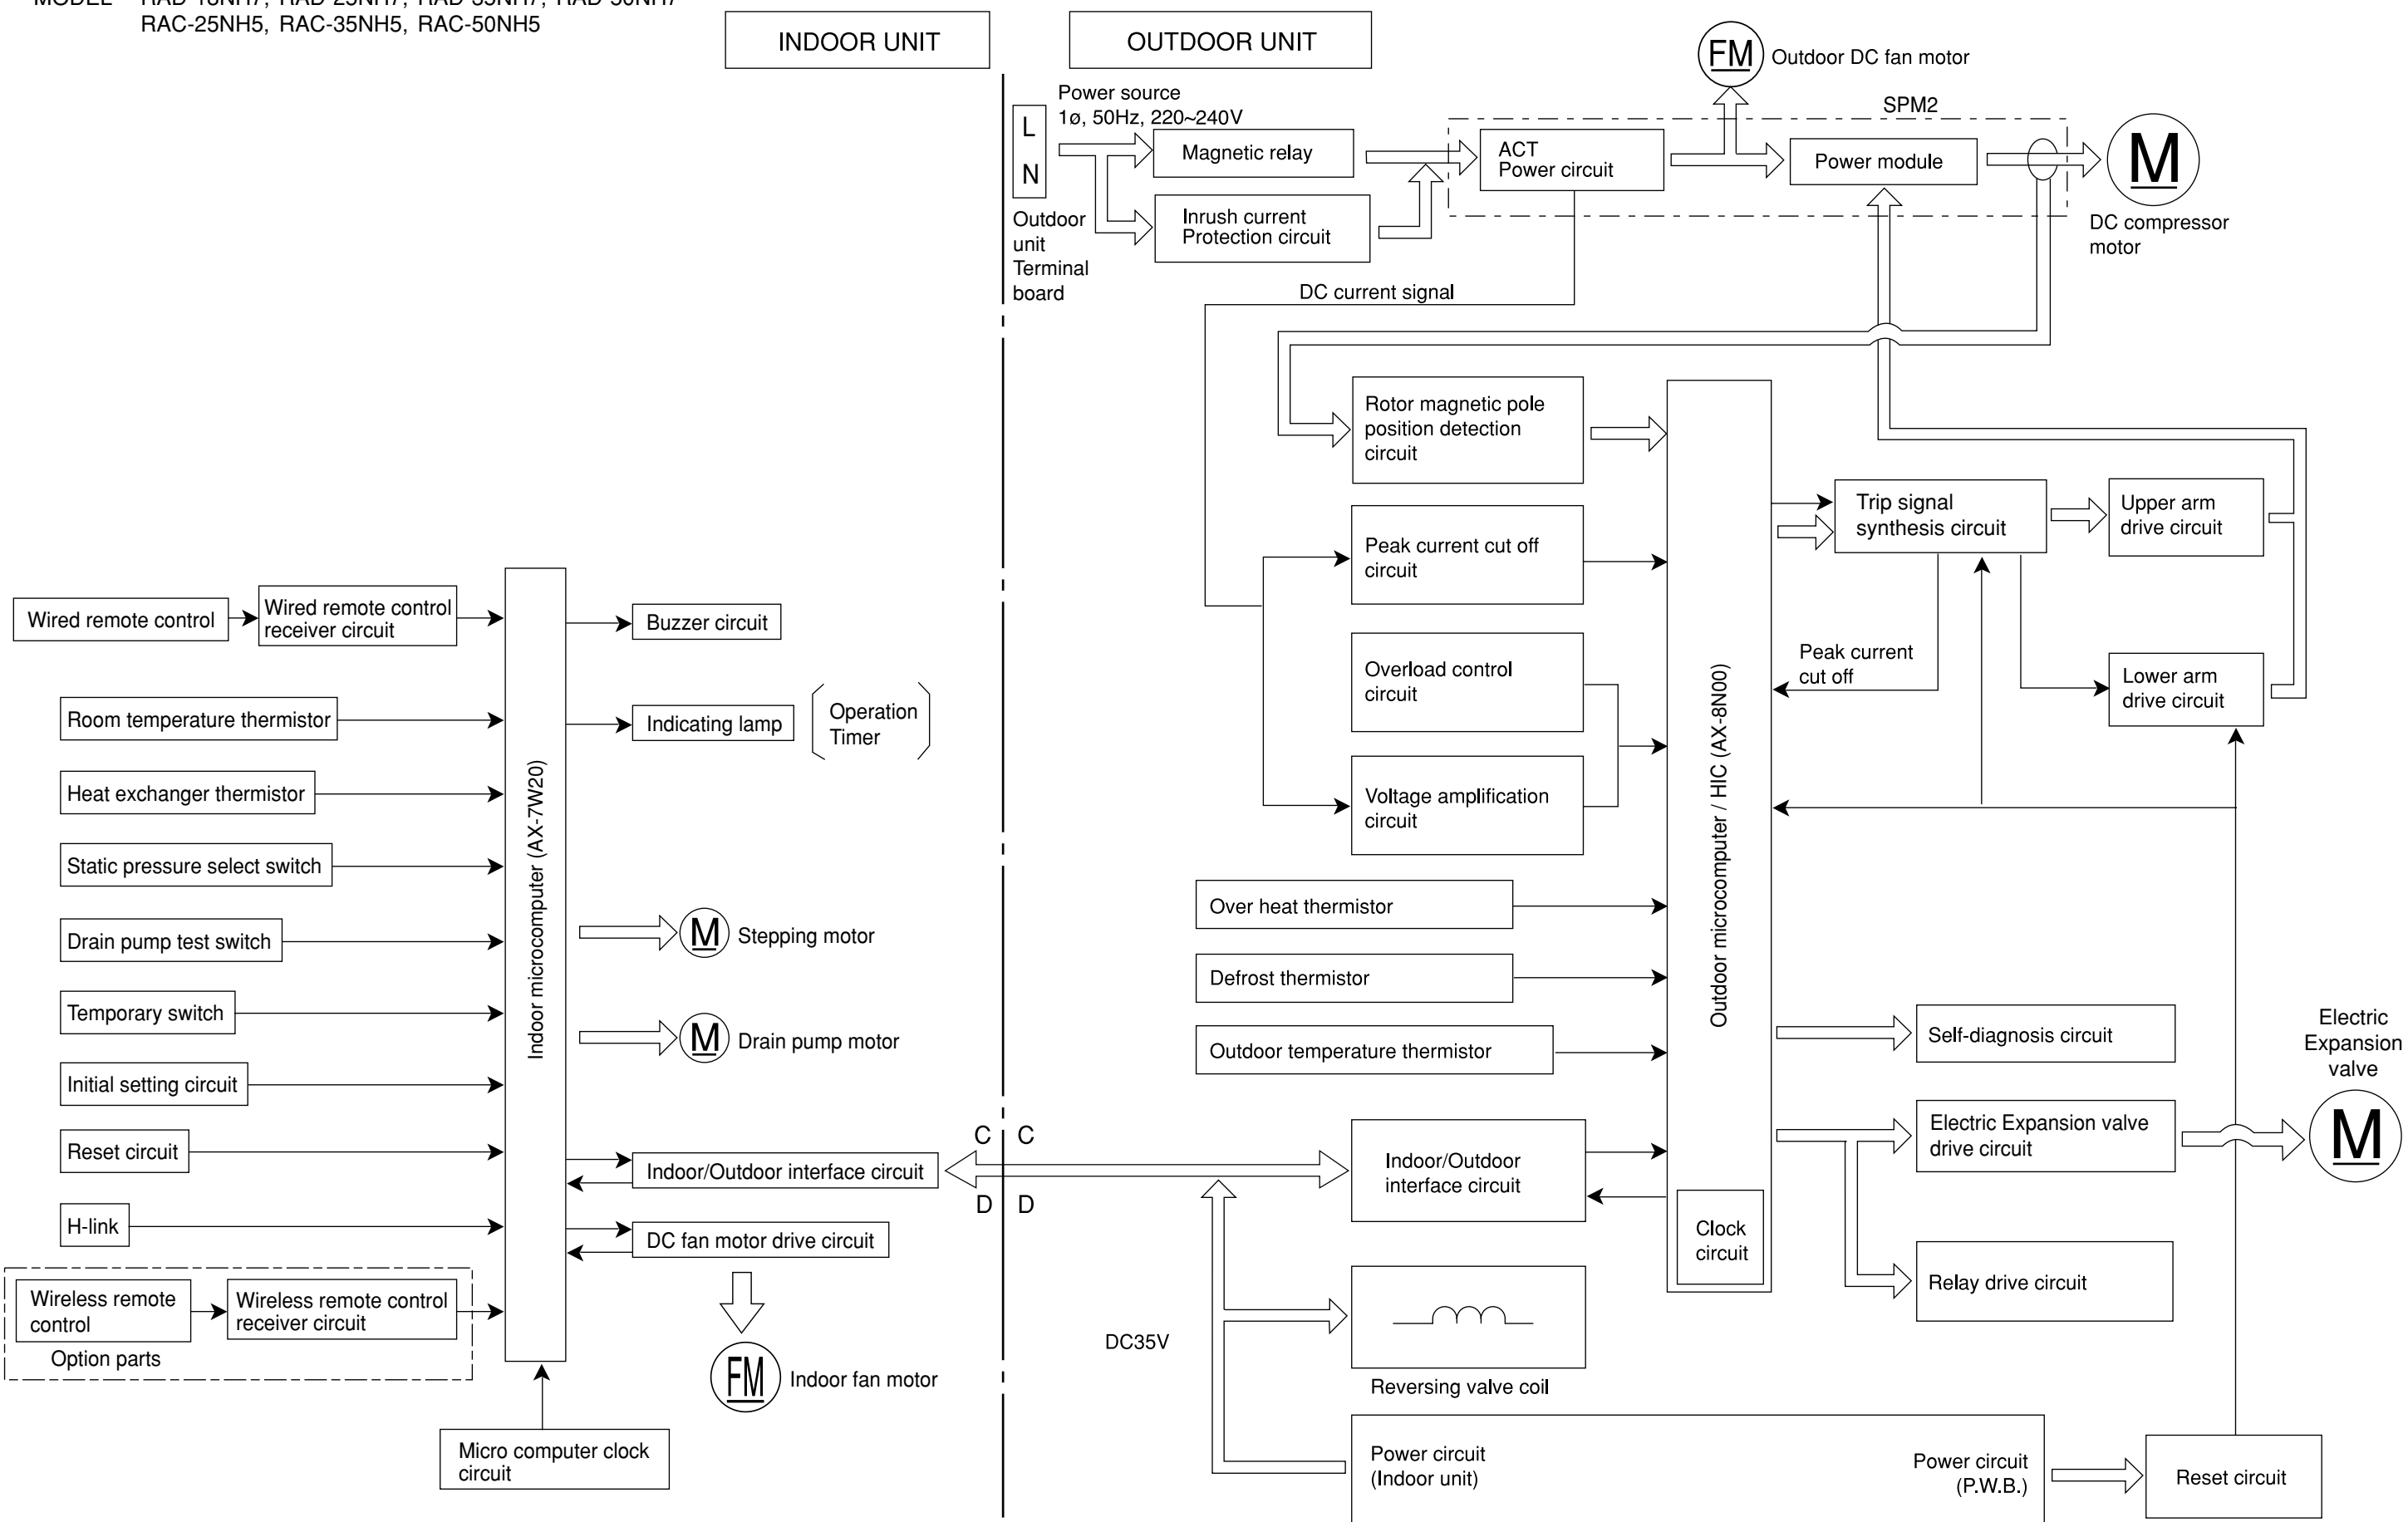

# BASIC MODE


MODEL RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7

Operation mode	Fan	Cooling	Dehumidifying (dehumidifying operation by the function select button only, not including that engaged by the dehumidify button)	Heating	Auto										
Basic operation of start/stop switch															
Timer functions	Off-timer														
	On-timer														
	Off -> On On -> Off timer														
Fan speed mode (indoor fan)	Auto	<p>Changes from "Hi" to "Med" or "Lo" depending on room temperature.</p> <ol style="list-style-type: none"> <li>Runs at "Hi" until first thermo off after operation is started.</li> <li>Runs at "Lo" when thermo is off.</li> </ol>	<p>Changes between "Lo" and "Med" depending on the room temperature.</p> <table border="1"> <thead> <tr> <th>Temperature division</th> <th>Fan speed</th> </tr> </thead> <tbody> <tr> <td>Division 1</td> <td>Lo</td> </tr> <tr> <td>Division 2</td> <td>Lo</td> </tr> <tr> <td>Division 3</td> <td>Med</td> </tr> <tr> <td>Division 4</td> <td>Med</td> </tr> </tbody> </table> <p>1. The indoor fan also stops when the compressor is in stop status.</p>	Temperature division	Fan speed	Division 1	Lo	Division 2	Lo	Division 3	Med	Division 4	Med	<p>Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchange temperature. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).</p> <p>When the compressor is running at maximum speed during hot dash or when recovered from defrosting.</p> <p>In modes other than left</p>	<p>Operating mode is judged by room temperature and outdoor temperature.</p> <p>(1) Judging by outdoor temperature</p> <ul style="list-style-type: none"> <li>Operating mode is judged by outdoor temperature. Only when the mode is not restricted by this judgment, the judgment by room temperature in the next paragraph will be performed.</li> <li>(a) Outdoor temperature <math>\geq 27^{\circ}\text{C}</math> : Restricted to cooling</li> <li>(b) Outdoor temperature <math>\leq 16^{\circ}\text{C}</math> : Restricted to heating</li> </ul> <p>(2) Judging by room temperature</p> <p>Operating mode at start up is judged (initial judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> <li>When auto operation is started after 1 hour has elapsed since the operation was stopped.</li> <li>When auto operation is started after the previous manual mode operation.</li> <li>When the operating mode is switched to auto while operating at manual mode.</li> </ul> <p>(b) Judging method</p> <ul style="list-style-type: none"> <li>Room temperature <math>\geq 25^{\circ}\text{C} \pm 3^{\circ}\text{C}</math> : Cooling</li> <li>Room temperature <math>&lt; 25^{\circ}\text{C} \pm 3^{\circ}\text{C}</math> : Heating</li> <li>* <math>\pm 3^{\circ}\text{C}</math> is the fine adjustment value from the wireless remote controller.</li> </ul> <p>Judging operating mode change during operation (Continuous judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> <li>The mode is reviewed at every interval time.</li> <li>When auto operation is started again before 1 hour has elapsed since the operation was stopped.</li> </ul> <p>(b) Judging method</p> <ul style="list-style-type: none"> <li>Judge by setting the hysteresis on the final preset temperature.</li> <li>The final preset temperature is the actually targeted preset temperature which is the sum of the basic preset temperature and each type of shift value (e.g. by remote controller, preset temperature correction value, powerful shift value, etc.).</li> </ul> <p>[Currently cooling]</p> <ul style="list-style-type: none"> <li>Room temperature <math>\leq</math> Final preset temperature <math>-3^{\circ}\text{C}</math> Change to heating</li> <li>Room temperature <math>&gt;</math> Final preset temperature <math>-3^{\circ}\text{C}</math> Continue cooling</li> </ul> <p>[Currently heating]</p> <ul style="list-style-type: none"> <li>Room temperature <math>\geq</math> Final preset temperature <math>+2^{\circ}\text{C}</math> Change to cooling</li> <li>Room temperature <math>&lt;</math> Final preset temperature <math>+2^{\circ}\text{C}</math> Continue heating</li> </ul>
	Temperature division	Fan speed													
	Division 1	Lo													
	Division 2	Lo													
Division 3	Med														
Division 4	Med														
Hi	Operates at "Hi" regardless of the room temperature.	Set to "ultra-Hi" when the compressor runs at maximum speed, and to "Hi" in other modes.	Set to "Hi" in modes other than when the compressor stops.	Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). Set to "ultra-Hi" when the compressor is running at maximum speed during hot dash or when recovered from defrosting.											
Med	Operates at "Med" regardless of the room temperature.	Same as at left.	Set to "Med" in modes other than when the compressor stops.	Set to "ultra-Lo", "Lo", "Med" or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:											
Lo	Operates at "Lo" regardless of the room temperature.	Same as at left.	Set to "Lo" in modes other than when the compressor stops.	Set to "ultra-Lo", "Lo", or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:											
Basic operation of temperature controller	<p>Performs only fan operation at the set speed regardless of the room temperature.</p>	See page 47.	See page 51.	See page 53.											
Sleep operation (with sleep button ON)	<ul style="list-style-type: none"> <li>Enters sleep operation after set as on the left.</li> <li>Action during sleep operation Lo (sleep) operation</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left</li> <li>See page 49.</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left</li> <li>See page 51.</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left</li> <li>See page 55.</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left.</li> <li>Performs the sleep operation of each operation mode.</li> </ul>										

**Table 1 Mode data file**

	<b>RAD-18NH7</b>	<b>RAD-25NH7</b>	<b>RAD-35NH7</b>	<b>RAD-50NH7</b>
<b>LABEL NAME</b>	<b>VALUE</b>			
WMAX	4400 min <sup>-1</sup>	4400 min <sup>-1</sup>	5500 min <sup>-1</sup>	5100 min <sup>-1</sup>
WMAX2	4500 min <sup>-1</sup>	4500 min <sup>-1</sup>	5600 min <sup>-1</sup>	5100 min <sup>-1</sup>
WSTD	3500 min <sup>-1</sup>	3500 min <sup>-1</sup>	4950 min <sup>-1</sup>	5100 min <sup>-1</sup>
WBEMAX	3000 min <sup>-1</sup>	2800 min <sup>-1</sup>	2800 min <sup>-1</sup>	3500 min <sup>-1</sup>
CMAX	2700 min <sup>-1</sup>	2700 min <sup>-1</sup>	4400 min <sup>-1</sup>	5500 min <sup>-1</sup>
CSTD	2450 min <sup>-1</sup>	2450 min <sup>-1</sup>	4000 min <sup>-1</sup>	5500 min <sup>-1</sup>
CKYMAX_TY1	2200 min <sup>-1</sup>	2200 min <sup>-1</sup>	3500 min <sup>-1</sup>	3500 min <sup>-1</sup>
CJKMAX	1800 min <sup>-1</sup>	1800 min <sup>-1</sup>	2800 min <sup>-1</sup>	2700 min <sup>-1</sup>
CBEMAX	1600 min <sup>-1</sup>	1600 min <sup>-1</sup>	2200 min <sup>-1</sup>	2000 min <sup>-1</sup>
WMIN	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1800 min <sup>-1</sup>
CMIN	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1500 min <sup>-1</sup>	1800 min <sup>-1</sup>
STARTMC	60 Seconds	60 Seconds	60 Seconds	60 Seconds
DWNRATEW	80%	80%	80%	80%
DWNRATEC	80%	80%	80%	80%
SHIFTW	5.00°C	5.00°C	5.00°C	5.00°C
SHIFTC	1.66°C	1.66°C	1.66°C	1.66°C
CLMXTP	30.00°C	30.00°C	30.00°C	30.00°C
YNEOF	20.00°C	20.00°C	20.00°C	20.00°C
TEION	0.00°C	0.00°C	0.00°C	0.00°C
TEIOF	9.00°C	9.00°C	9.00°C	9.00°C

## Basic Cooling Operation

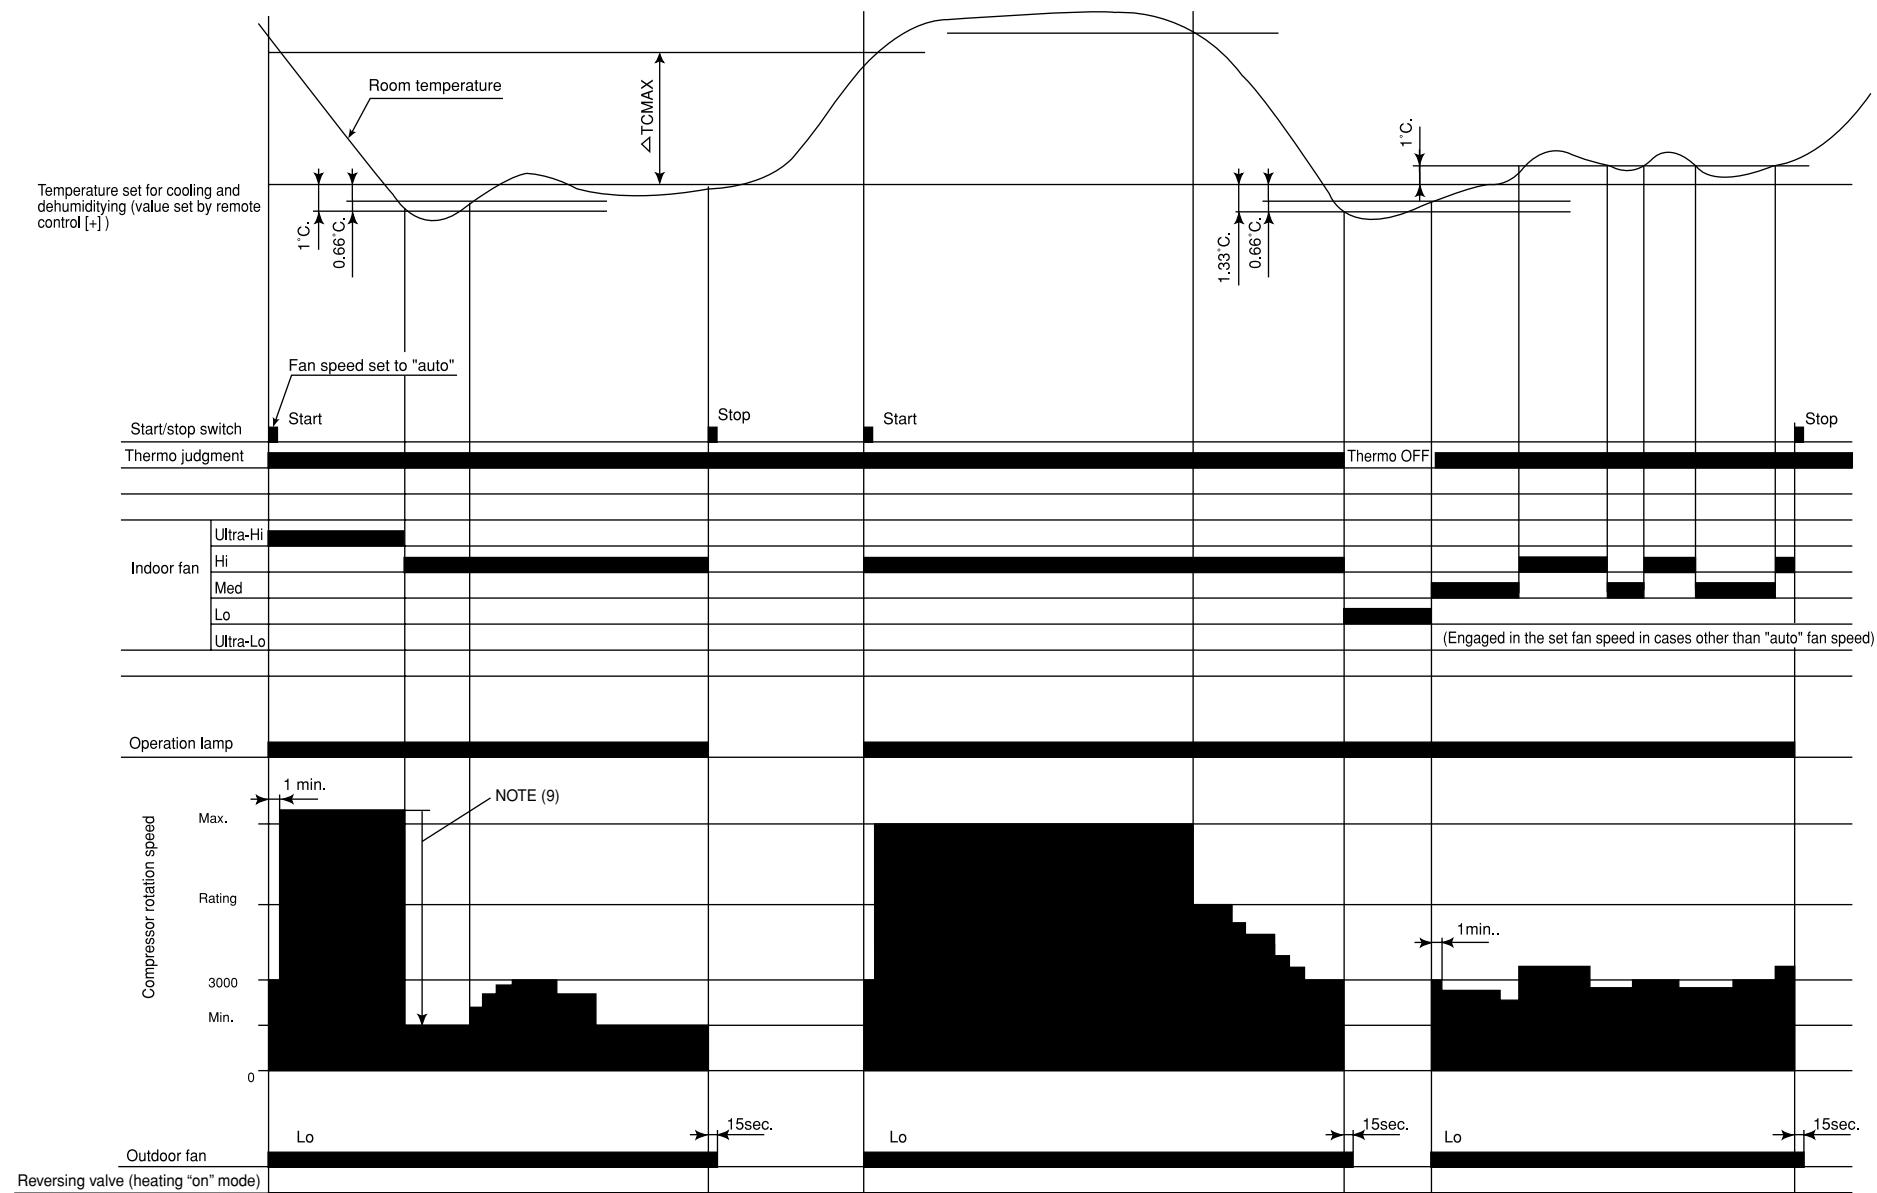

**Notes:**



- (1) Condition for entering into Cool Dashed mode. When fan set to “Hi” or “Auto mode” and temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 7) larger than WMAX.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature  $-3^{\circ}\text{C}$  (thermo off) and iii) when room temperature has achieved setting temperature  $-1^{\circ}\text{C}$  then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- (3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value)  $-3^{\circ}\text{C}$ . After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum “ON” time and “OFF” time is 3 minutes.
- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTTP. No time constrain if indoor temperature is higher than CLMXTTP.
- (6) When fan is set to “Hi”, compressor rpm will be limited to CKYMAX-TY1.
- (7) When fan is set to “Med”, compressor rpm will be limited to CJKMAX.
- (8) When fan is set to “Lo”, compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature  $-1^{\circ}\text{C}$  compressor rpm is actual rpm x DWNRATEC.

Table 2  $\Delta\text{TCMAX}$

Temperature difference	Calculated compressor rpm
1.66	2265 $\text{min}^{-1}$
2	2435 $\text{min}^{-1}$
2.33	2600 $\text{min}^{-1}$
2.66	2765 $\text{min}^{-1}$
3	2935 $\text{min}^{-1}$
3.33	3100 $\text{min}^{-1}$
3.66	3265 $\text{min}^{-1}$
4	3435 $\text{min}^{-1}$
4.33	3600 $\text{min}^{-1}$
4.66	3765 $\text{min}^{-1}$
5	3935 $\text{min}^{-1}$
5.33	4100 $\text{min}^{-1}$
5.66	4265 $\text{min}^{-1}$
6	4435 $\text{min}^{-1}$
6.33	4600 $\text{min}^{-1}$
6.66	4765 $\text{min}^{-1}$
7	4935 $\text{min}^{-1}$
7.33	5100 $\text{min}^{-1}$
7.66	5265 $\text{min}^{-1}$
8	5435 $\text{min}^{-1}$
8.33	5600 $\text{min}^{-1}$
8.66	5765 $\text{min}^{-1}$
9	5935 $\text{min}^{-1}$
9.33	6100 $\text{min}^{-1}$
9.66	6265 $\text{min}^{-1}$
10	6435 $\text{min}^{-1}$
10.33	6600 $\text{min}^{-1}$
10.66	6765 $\text{min}^{-1}$
11	6935 $\text{min}^{-1}$

**Note:**


1. See the data in Table 1 on page 43 for each constant in capital letters in the diagrams.

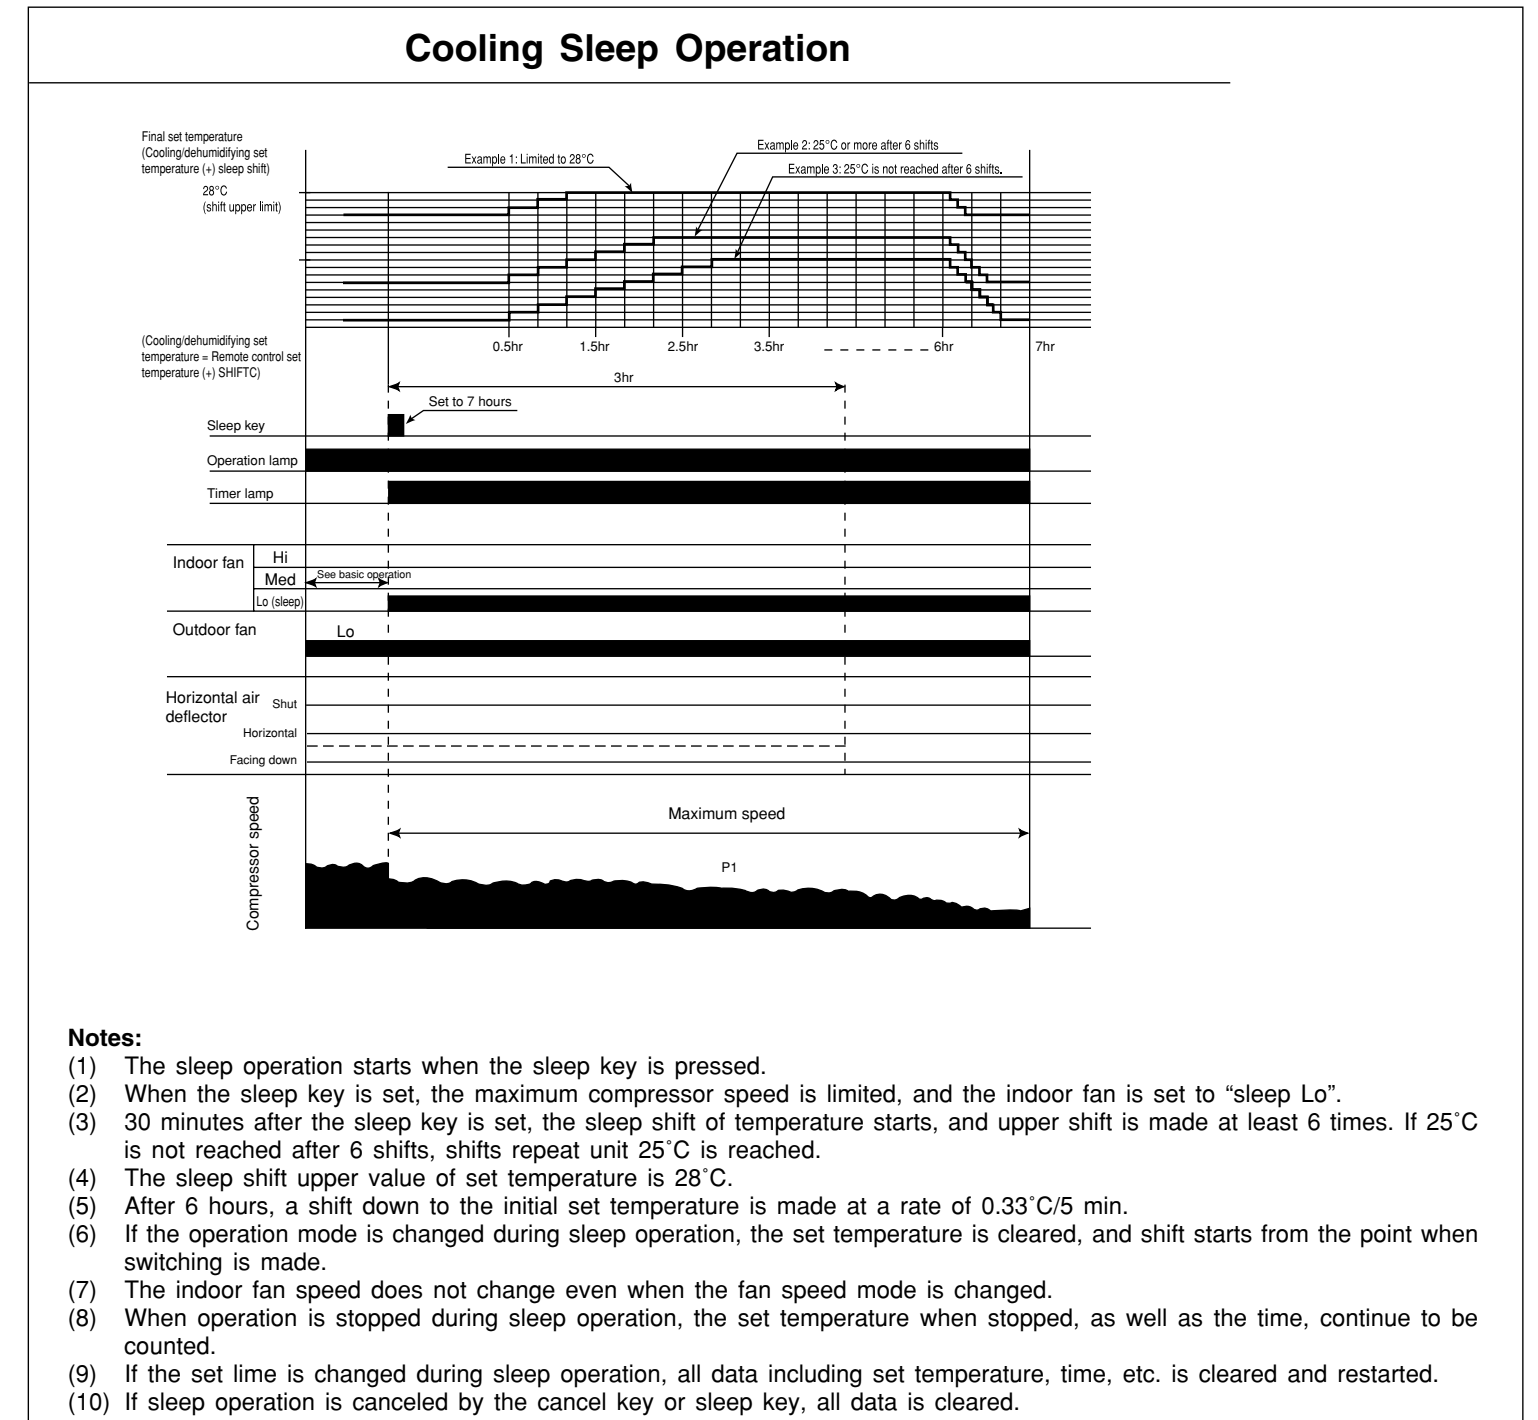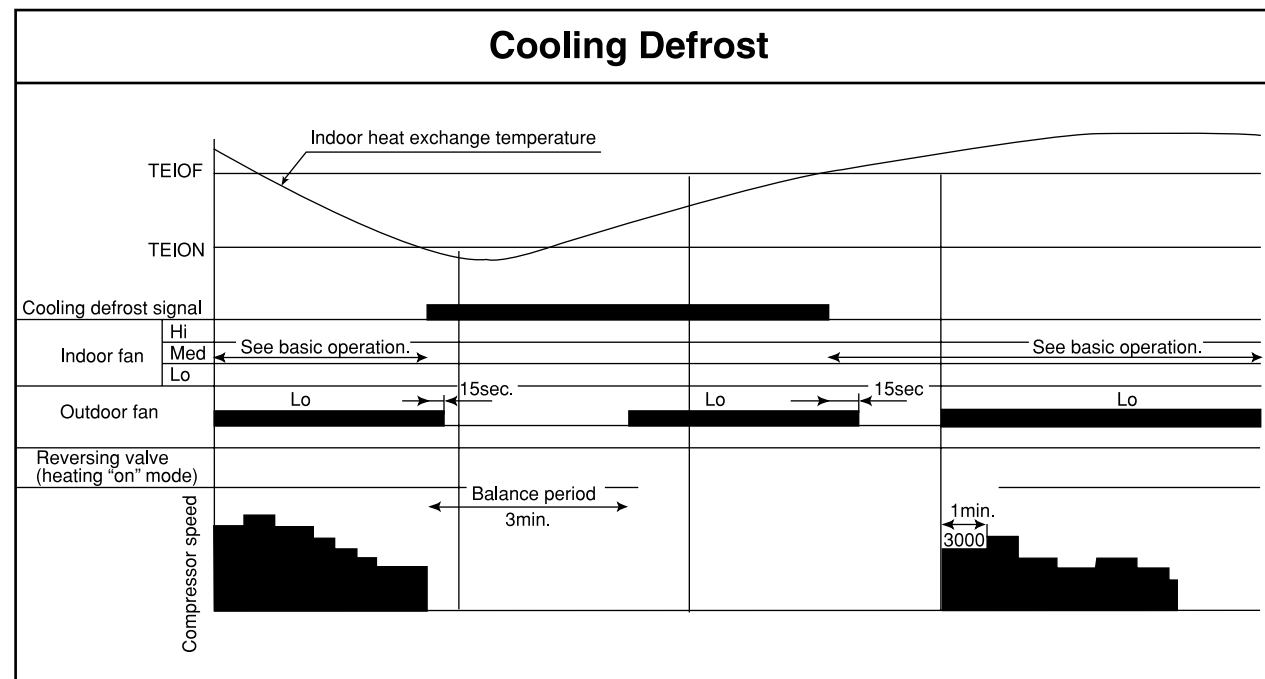

**Notes:**

- (1) The sleep operation starts when the sleep key is pressed.
- (2) When the sleep key is set, the maximum compressor speed is limited, and the indoor fan is set to "sleep Lo".
- (3) 30 minutes after the sleep key is set, the sleep shift of temperature starts, and upper shift is made at least 6 times. If 25°C is not reached after 6 shifts, shifts repeat until 25°C is reached.
- (4) The sleep shift upper value of set temperature is 28°C.
- (5) After 6 hours, a shift down to the initial set temperature is made at a rate of 0.33°C/5 min.
- (6) If the operation mode is changed during sleep operation, the set temperature is cleared, and shift starts from the point when switching is made.
- (7) The indoor fan speed does not change even when the fan speed mode is changed.
- (8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
- (9) If the set time is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.
- (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.

# Dehumidifying

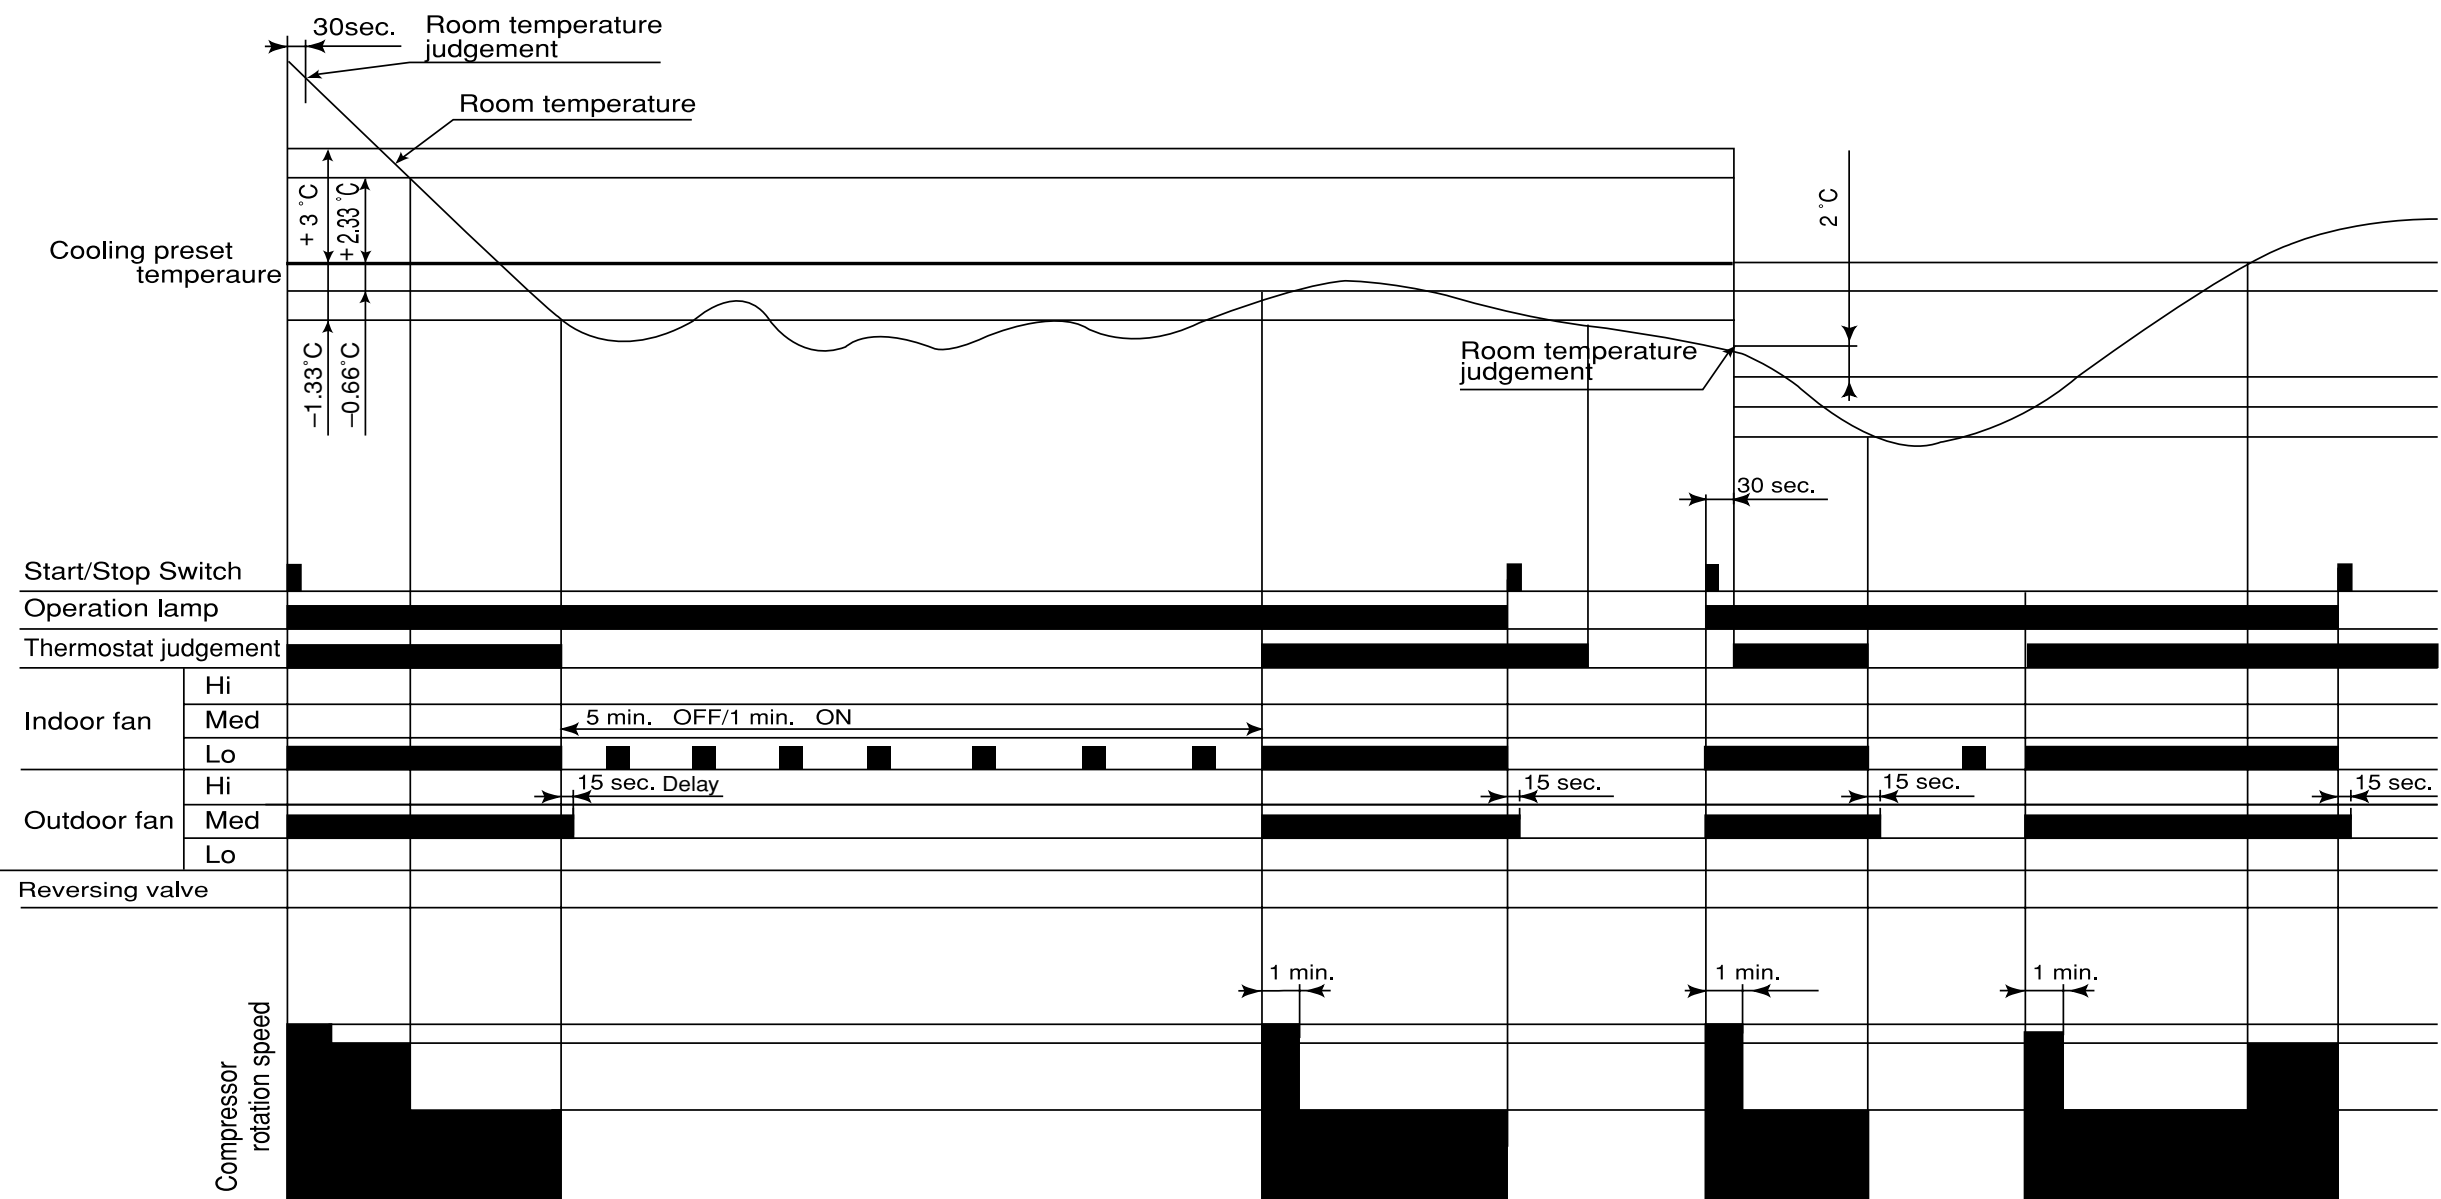


**Notes:**

- (1) If the room temperature is (cooling preset temperature) -  $(1.33^{\circ}\text{C})$  or less after 30 seconds from starting the operation, the operation is done assuming as the preset temperature = (room temperature at the time) -  $(2^{\circ}\text{C})$ .
- (2) The indoor fan is operated in the "Lo" mode. During thermo OFF indoor fan will be OFF for 5 minutes and ON for 1 minute.
- (3) When the operation is started by the thermostat turning ON, the start of the indoor fan is delayed 32 seconds after the start of compressor operation.
- (4) The compressor is operated forcedly for 3 minutes after operation is started.
- (5) The minimum ON time and OFF time of the compressor are 3 minutes.



## Basic Heating Operation

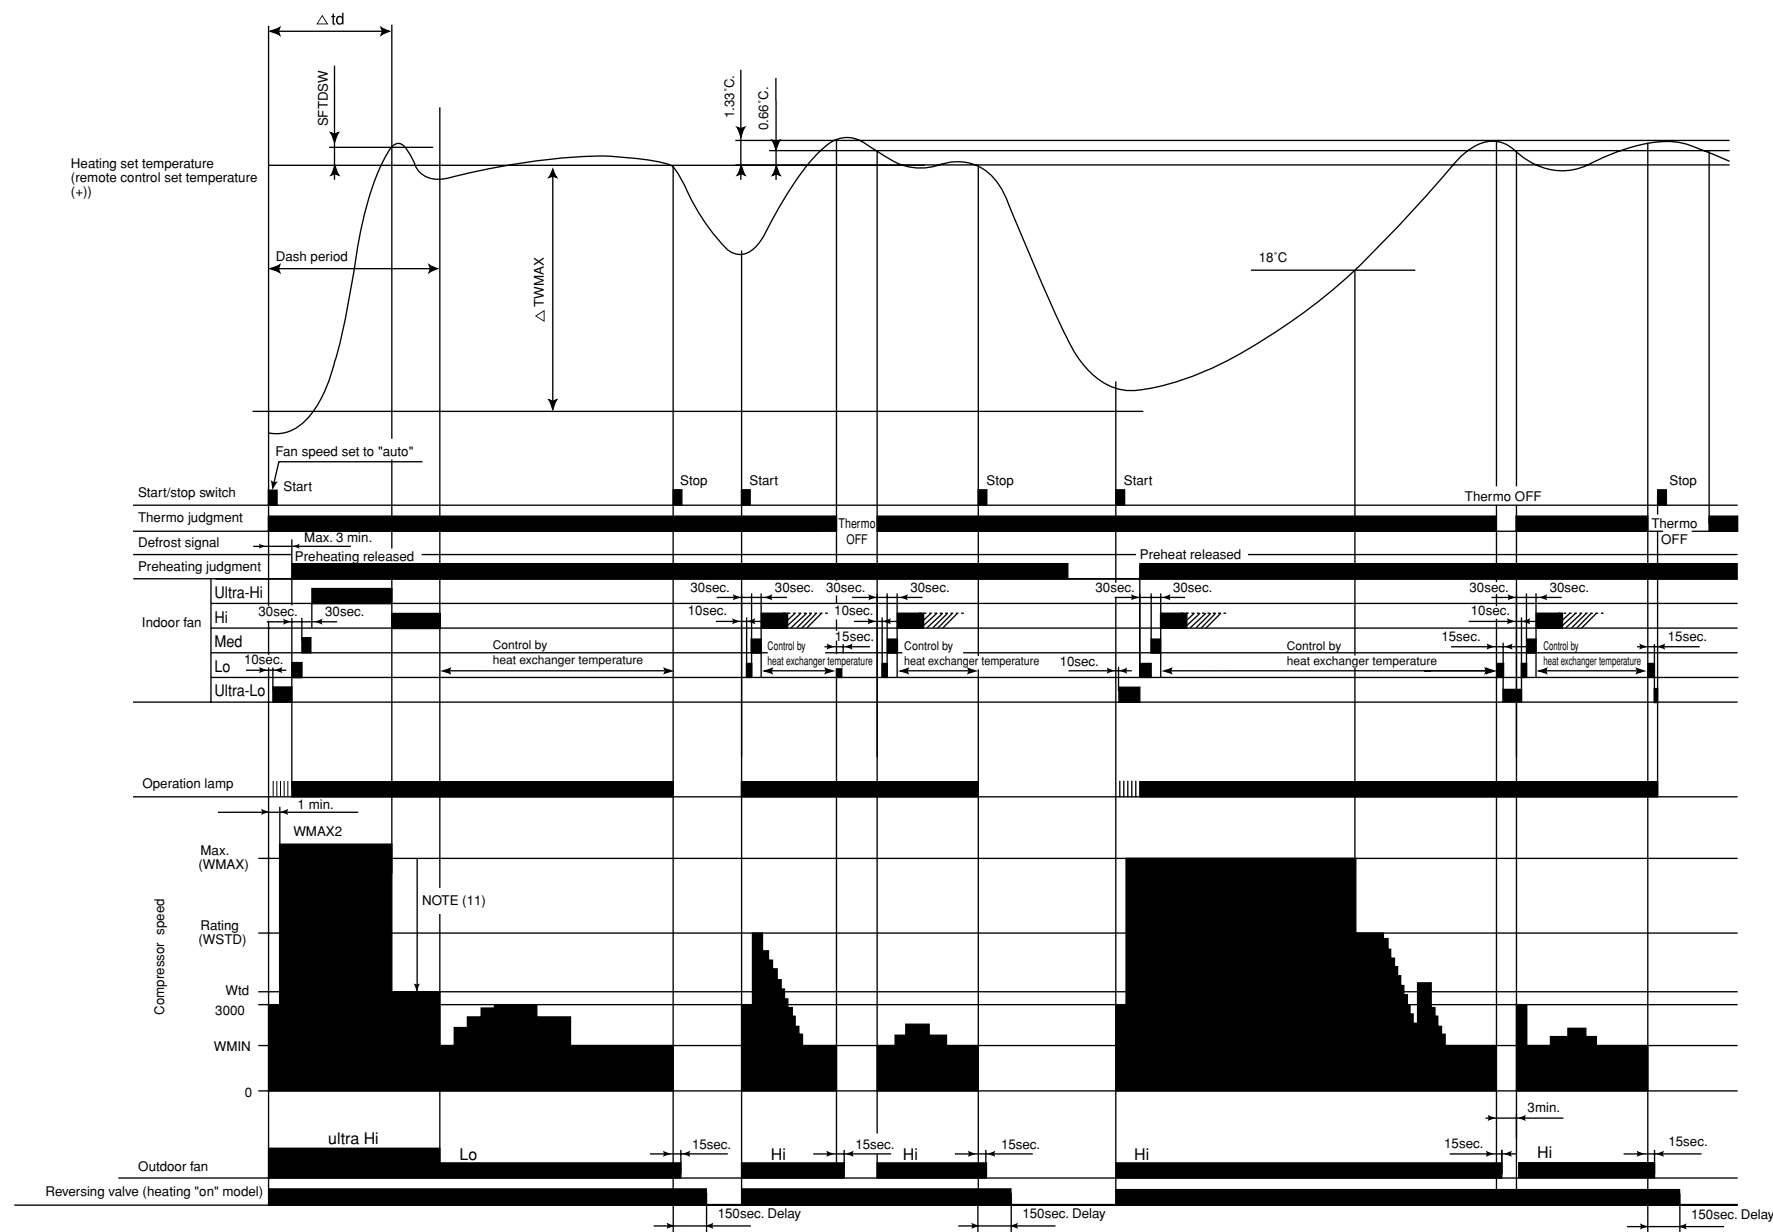

**Notes:**

- (1) Condition for entering into Hot Dashed mode. When fan set to "Hi" or "Auto mode" and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
- (2) Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off.
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if indoor temperature is lower than 18°C and outdoor temperature is lower than 2°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 3 seconds "ON" and 0.5 second "OFF".
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- (8) When fan is set to "Med" or "Lo", compressor rpm will be limited to WBEMAX.
- (9) In "Ultra-Lo" fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in "Ultra-Lo" mode. During Hotkeep or Defrost mode, fan will continue in "Ultra-Lo" mode.
- (10) During Hot Dashed or outdoor temperature is lower than -5°C, compressor rpm is WMAX2.
- (11) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.


Table 3 ΔTWMAX

Temperature difference	Calculated compressor rpm
1.66	1965 min <sup>-1</sup>
2	2135 min <sup>-1</sup>
2.33	2300 min <sup>-1</sup>
2.66	2465 min <sup>-1</sup>
3	2635 min <sup>-1</sup>
3.33	2800 min <sup>-1</sup>
3.66	2965 min <sup>-1</sup>
4	3135 min <sup>-1</sup>
4.33	3300 min <sup>-1</sup>
4.66	3465 min <sup>-1</sup>
5	3635 min <sup>-1</sup>
5.33	3800 min <sup>-1</sup>
5.66	3965 min <sup>-1</sup>
6	4135 min <sup>-1</sup>
6.33	4300 min <sup>-1</sup>
6.66	4465 min <sup>-1</sup>
7	4635 min <sup>-1</sup>
7.33	4800 min <sup>-1</sup>
7.66	4965 min <sup>-1</sup>
8	5135 min <sup>-1</sup>
8.33	5300 min <sup>-1</sup>
8.66	5465 min <sup>-1</sup>
9	5635 min <sup>-1</sup>
9.33	5800 min <sup>-1</sup>
9.66	5965 min <sup>-1</sup>
10	6135 min <sup>-1</sup>
10.33	6300 min <sup>-1</sup>
10.66	6465 min <sup>-1</sup>
11	6635 min <sup>-1</sup>

**Notes:**

1. See the data in Table 1 on page 43 for each constant in capital letters in the diagrams.


## Reversing Valve Defrosting

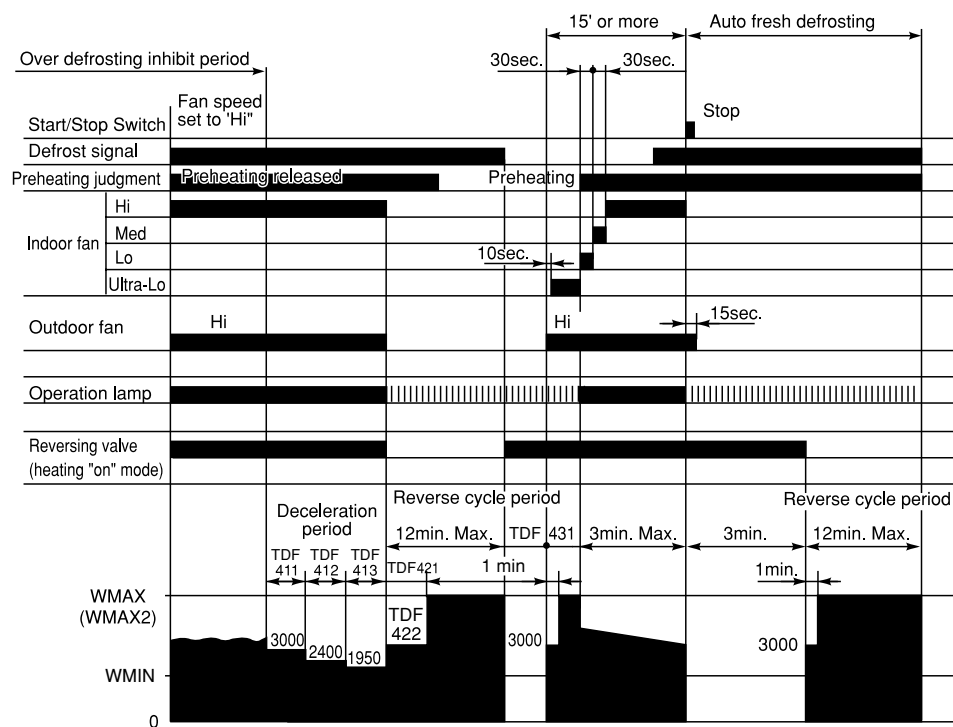

### Notes:

- (1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.
- (2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
- (3) The defrosting period is 12 minutes maximum.
- (4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.
- (5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.


## Setting Defrosting Inhibit Period

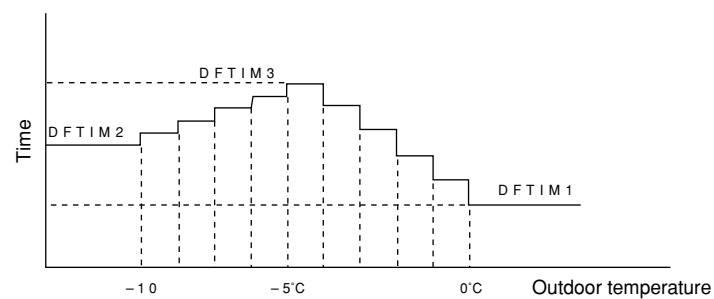

### Notes:

- (1) The first inhibit time after operation start is set to DFTIM1.
- (2) From the second time onwards, the inhibit time is set according to the time required for defrosting.  
Reverse cycle operation time  $\geq$  [DEFCOL] : DFTIM1 is set.  
Reverse cycle operation time  $<$  [DEFCOL] : The time corresponding to outdoor temperature is set.

## Heating Sleep Operation

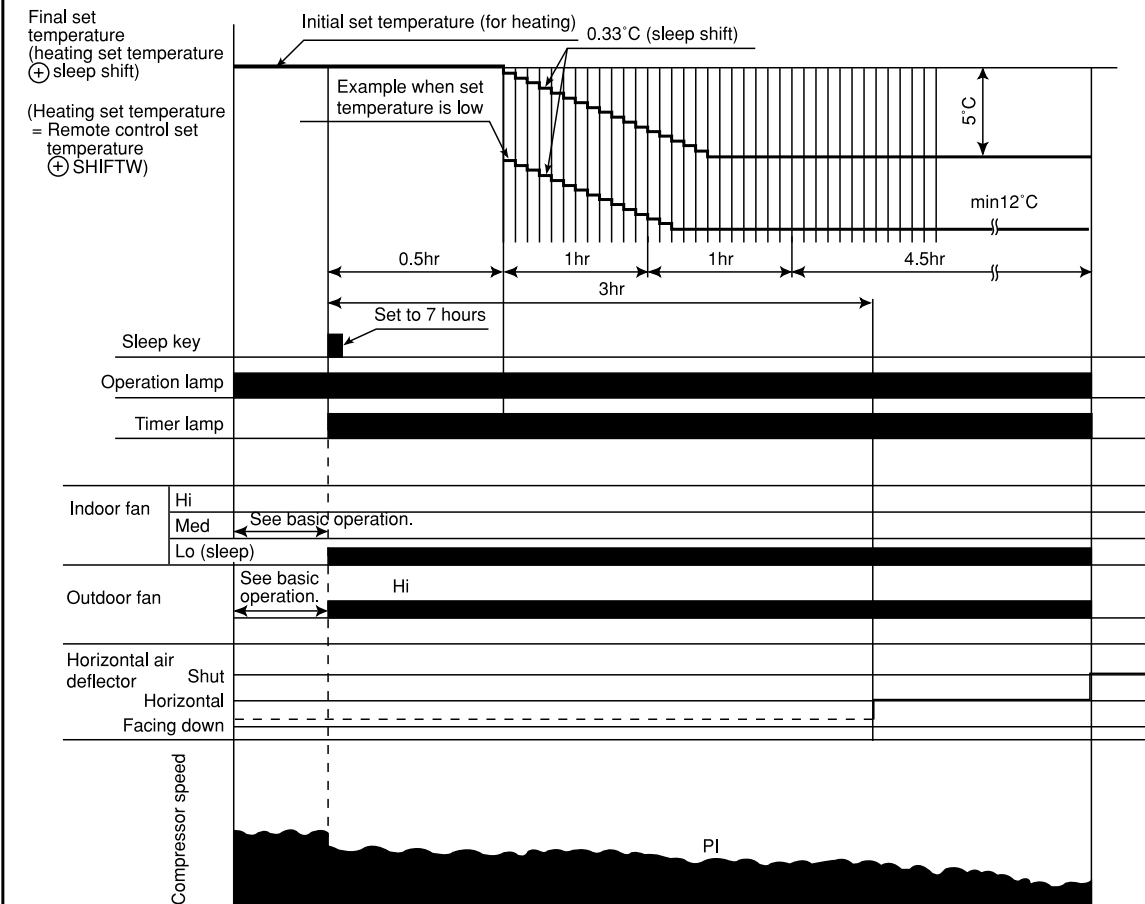

### Notes:


- (1) The sleep operation starts when the sleep key is pressed.
- (2) When the sleep key is set, the maximum compressor speed is limited to WSTD+2000/2, and the indoor fan is set to "sleep Lo".
- (3) 30 minutes after the sleep key is set, the sleep shift of set temperature starts.
- (4) The maximum sleep shift of set temperature is 5°C, and the minimum is 12°C.
- (5) If the operation mode is changed during sleep operation, the changed operation mode is set and sleep control starts.
- (6) The indoor fan speed does not change even when the fan speed mode is changed. (Lo)
- (7) When defrosting is to be set during sleep operation, defrosting is engaged and sleep operation is restored after defrosting.
- (8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
- (9) If the set time is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.
- (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.

# REFRIGERATING CYCLE DIAGRAM

MODEL RAD-18NH7/RAD-25NH7/RAC-25NH5,  
RAD-35NH7/RAC-35NH5


COOLING, DEHUMIDIFYING, DEFROSTING

OUTDOOR UNIT

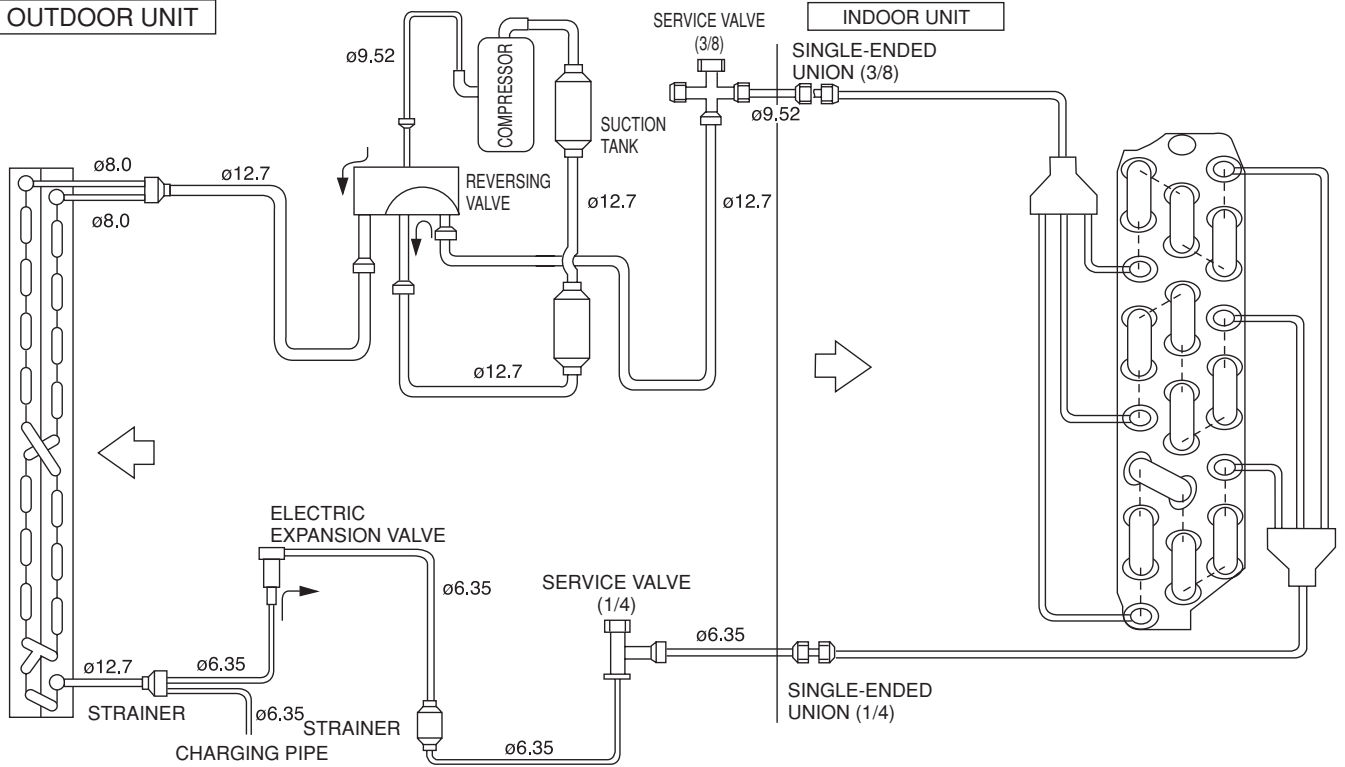

HEATING

OUTDOOR UNIT

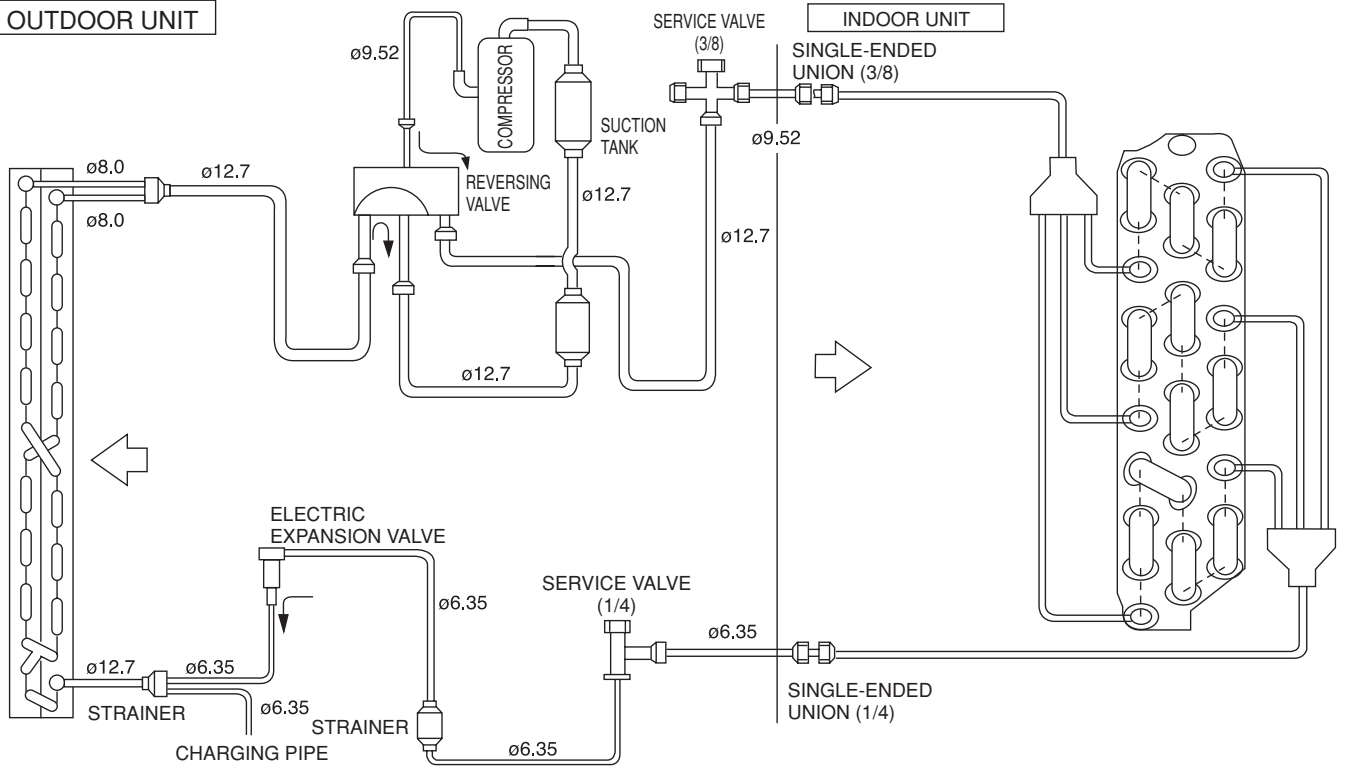


# REFRIGERATING CYCLE DIAGRAM

MODEL RAD-50NH7

RAC-50NH5


COOLING, DEHUMIDIFYING, DEFROSTING

OUTDOOR UNIT

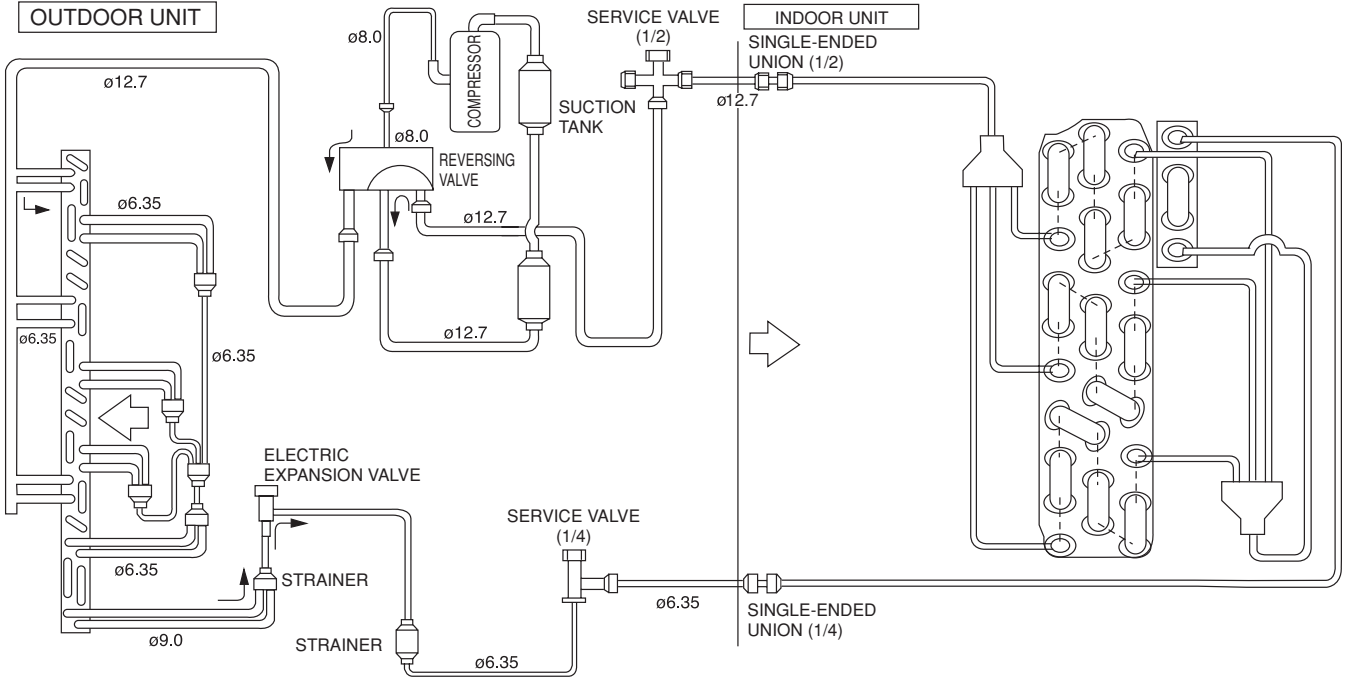

HEATING

OUTDOOR UNIT

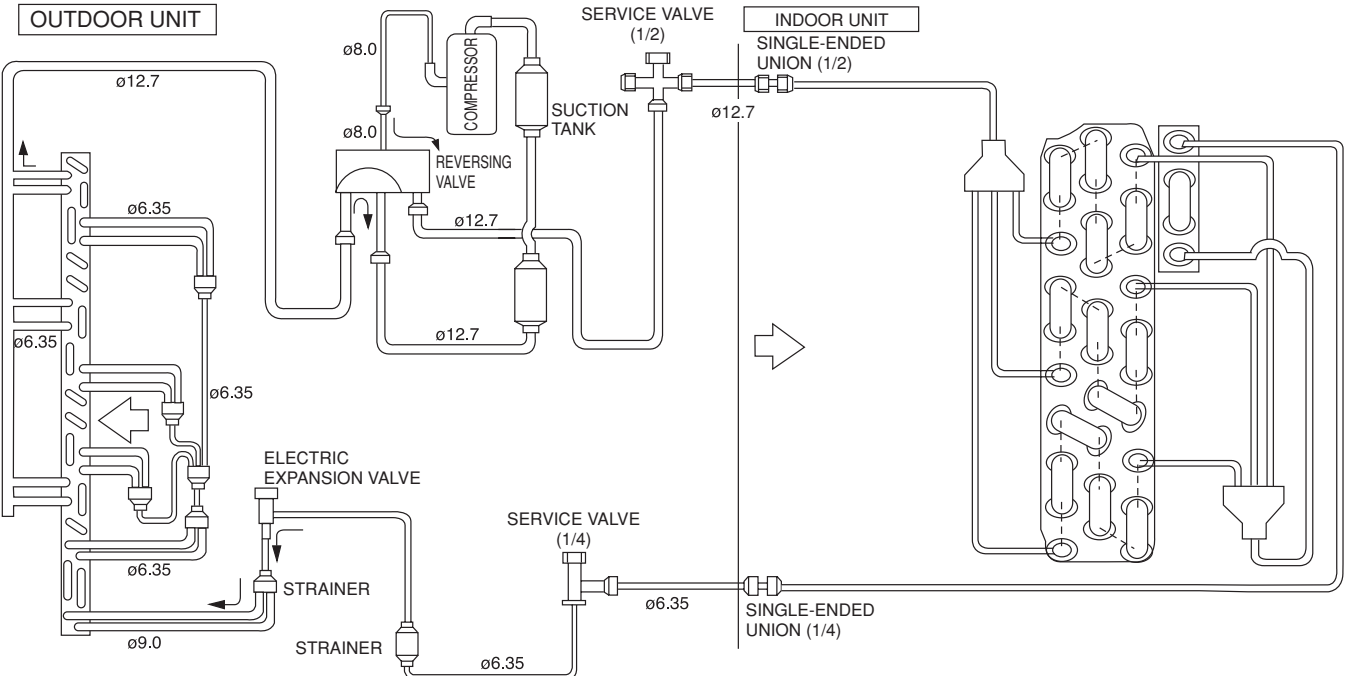

# DESCRIPTION OF MAIN CIRCUIT OPERATION

MODEL RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7

## 1. Reset Circuit

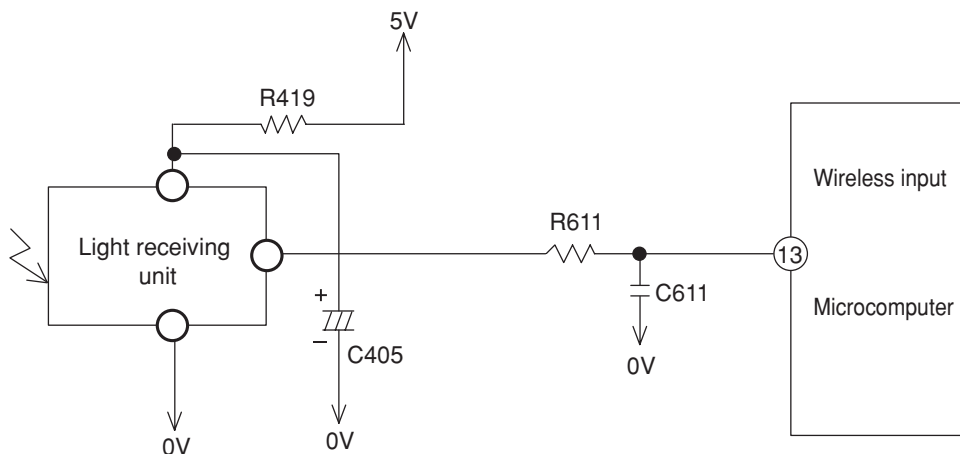


Fig. 1-1

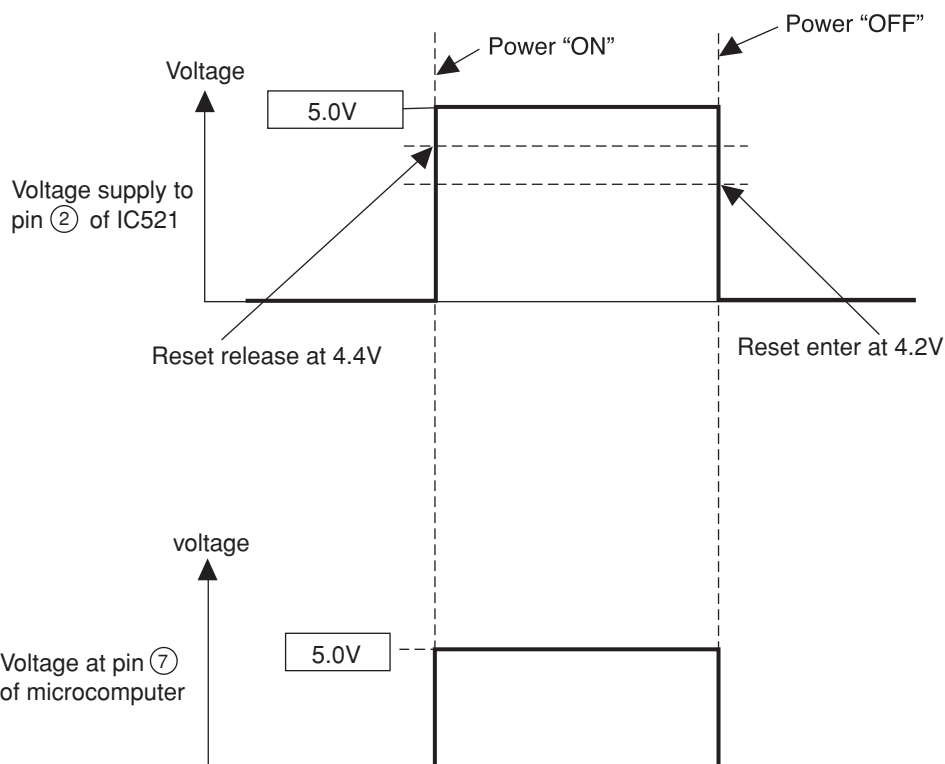


Fig. 1-2

- The reset circuit initializes the microcomputer program when power is ON or OFF.
- Low voltage at pin ⑦ resets the microcomputer and Hi activates the microcomputer.
- When power "ON" 5V voltage rises and reaches 4.4V, pin ① of IC521 is set to "Hi". At this time the microcomputer starts operation.
- When power "OFF" voltage drops and reaches 4.2V, pin ① of IC521 is set to "Low". This will RESET the microcomputer.

## 2. Receiver Circuit

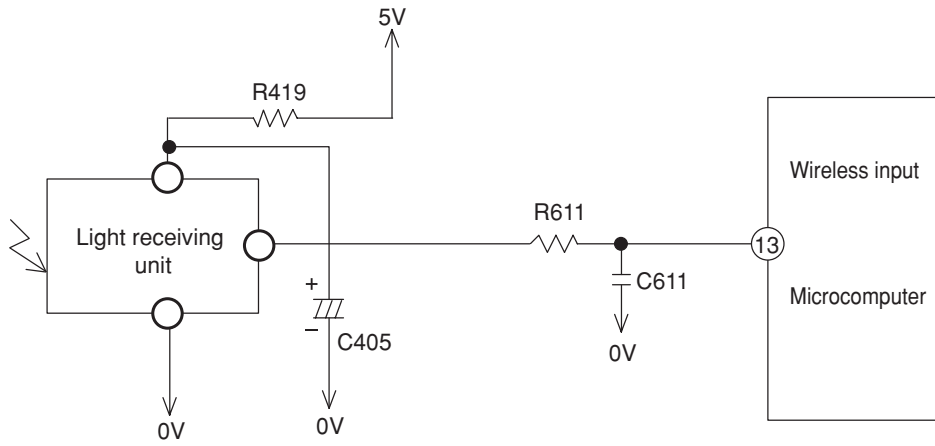


Fig. 2-1

- The light receiver unit receives the infrared signal from the wireless remote control (option part). The receiver amplifies and shapes the signal and outputs it.

## 3. Buzzer Circuit

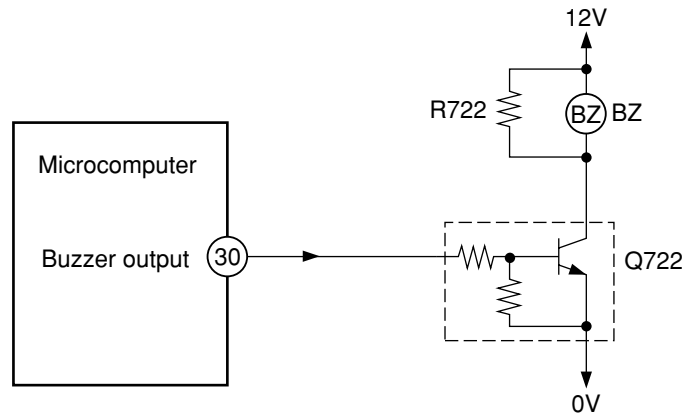


Fig. 3-1 Buzzer Circuit

- When the buzzer sounds, an approx. 3.9kHz square signal is output from buzzer output pin ③⑩ of the microcomputer. After the amplitude of this signal has been set to 12Vp-p by a transistor, it is applied to the buzzer. The piezoelectric element in the buzzer oscillates to generate the buzzer's sound.

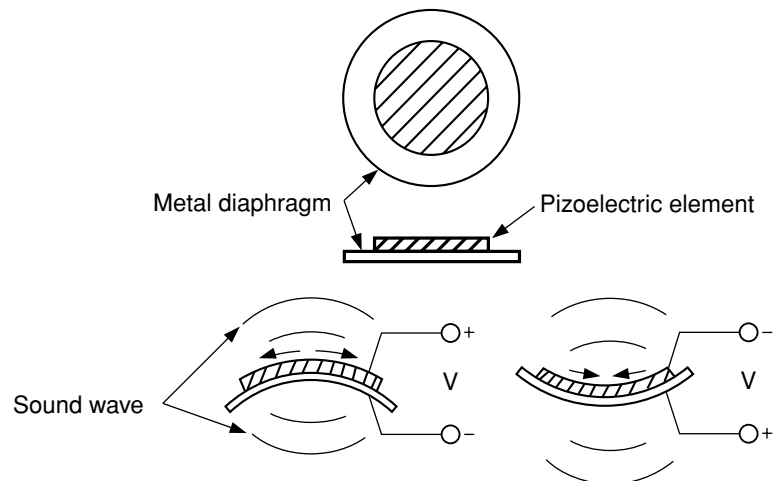


Fig. 3-2 Buzzer Operation

## 4. Room Temperature Thermistor Circuit

- Fig. 4-1 shows the room temperature thermistor circuit.

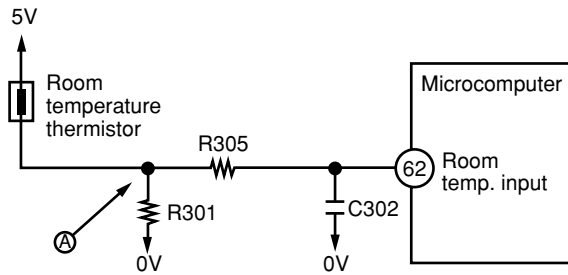


Fig. 4-1

- The voltage at Ⓐ depends on the room temperature as shown in Fig. 4-2.

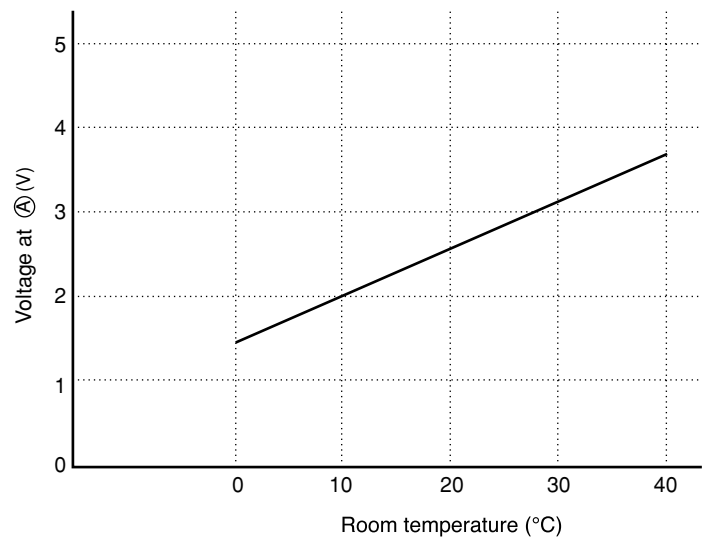


Fig. 4-2

## 5. Heat exchanger temperature thermistor circuit

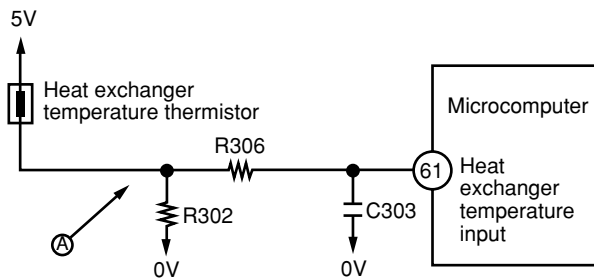


Fig. 5-1

- The circuit detects the indoor heat exchanger temperature and controls the following.

- (1) Preheating.
- (2) Low-temperature defrosting during cooling and dehumidifying operation.
- (3) Detection of the reversing valve non-operation or heat exchanger temperature thermistor open.

The voltage at Ⓐ depends on the heat exchanger temperature as shown in Fig. 5-2.

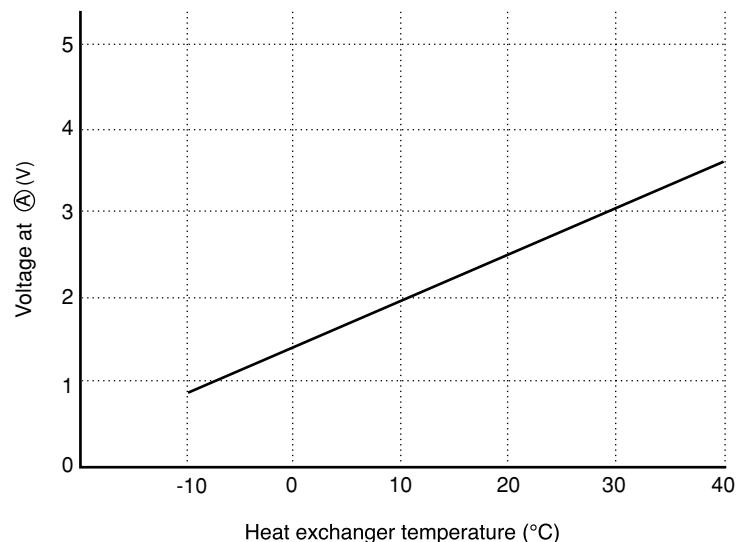


Fig. 5-2

## 6. Initial Setting Circuit (IC401)

- When power is supplied, the microcomputer reads the data in IC401 (E<sup>2</sup>PROM) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.
- Data of self-diagnosis mode is stored in IC401; data will not be erased even when power is turned off.

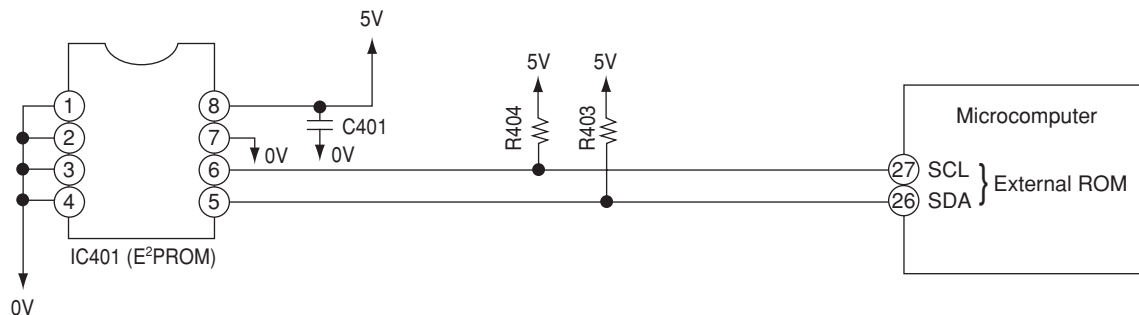


Fig. 6-1

## 7. Temporary Switch

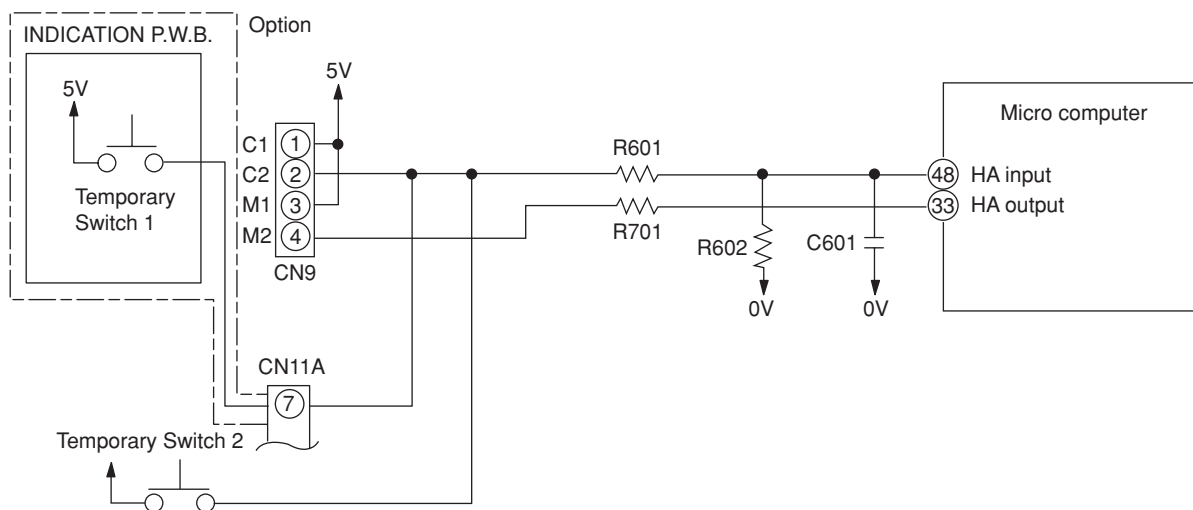


Fig. 7-1

- The temporary switch is used to operate the air conditioner temporarily when the wireless remote control is lost or faulty.



## 8. Drain pump drive circuit

When cool or dehumidifying operation, pin ⑤⑧ of the micro computer goes “Hi”, Q933 and Q932 turn on and the drain pump drive.


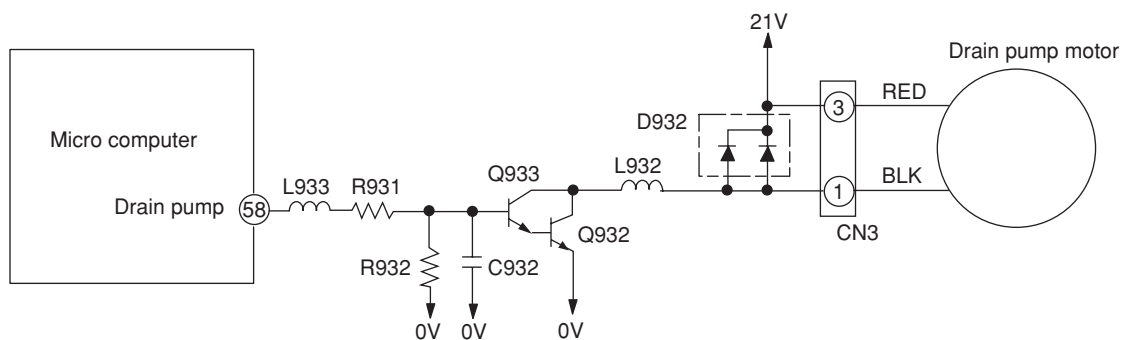



Fig. 8-1

## 9. Drain pump trial run switch

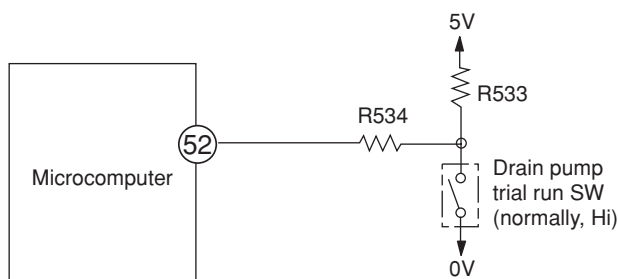

- This switch forcibly turns the drain pump on. When the drain pump trial run switch is turned on, the timer indicator will blink seven times, and no remote signal will be accepted.

## 10. Float switch

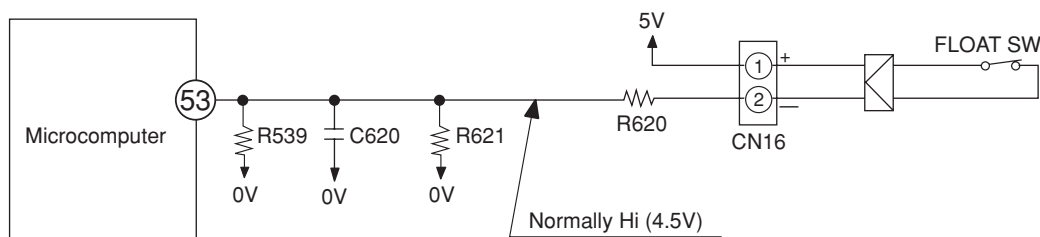

- This is a float type switch that monitors the drain level of drain pan. The switch will be activated and will stop operation if the drain pump is faulty or drain hose is stopped up, disabling drainage, causing the drain level to rise abnormally.
- When the float switch is activated, the timer indicator will flash six times. Note that the float switch will also be activated, disabling operation if the connector of float switch has defective contact or is connected incompletely.

## 11. High static-pressure switch (Full duct type and semi duct type)


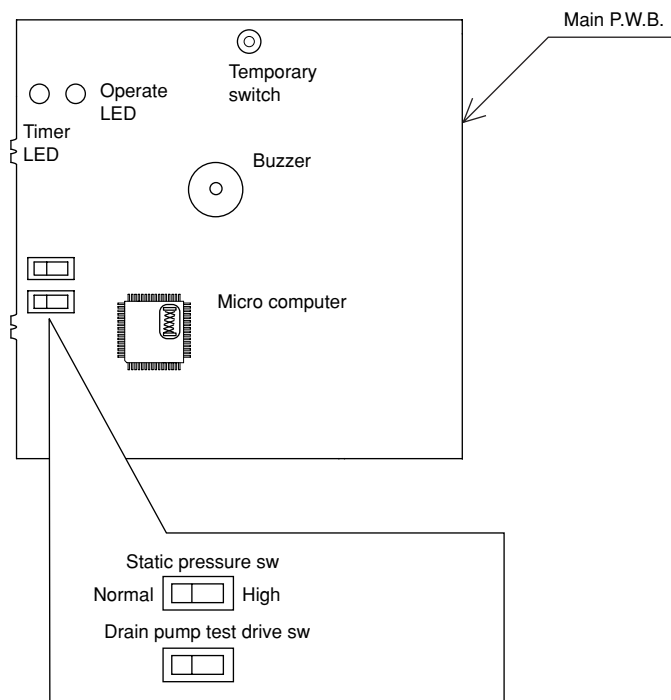


Fig. 11-1

- For full duct type and semi duct type, set the high to HIGH STATIC-PRESSURE.
- If not set to HIGH, there will be reduction of cooling and heating capacities.

## 12. Wired remote control receiver circuit

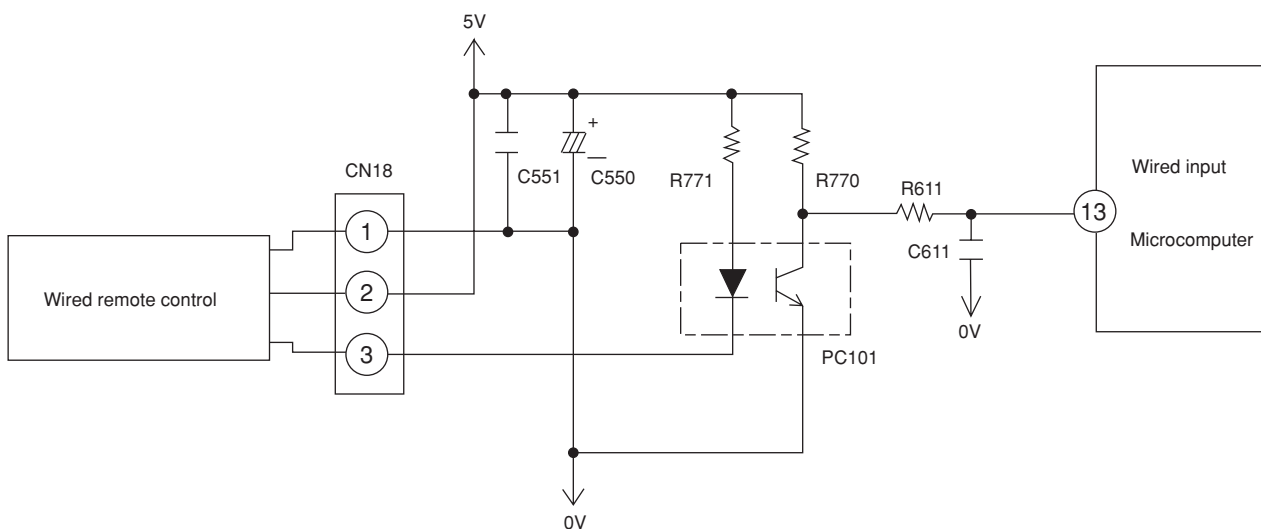

- In wired remote control receiver circuit, the signal will transmit to micro computer pin 3 by using photocopler PC101.

# Model RAC-25NH5, RAC-35NH5, RAC-50NH5

## 1. Power Circuit

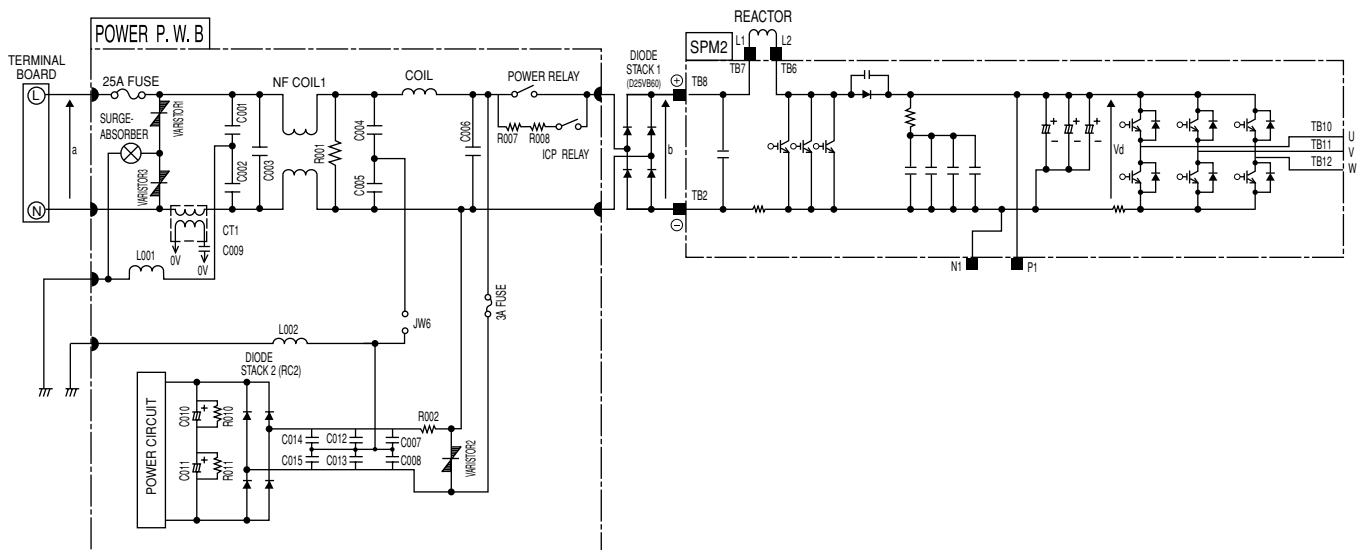


Fig. 1-1

- This circuit full-wave rectifies 220-240V AC applied between terminals L and N, and boosts it to a required voltage with the active module, to create a DC voltage.

**The voltage becomes 260-360V when the compressor is operated**

### (1) Active module

The active filter, consisting of a reactor and switching element, eliminates higher harmonic components contained in the current generated when the compressor is operated, and improves the power-factor.

### (2) Diode stacks

These rectify the 220-240V AC from terminals L and N to a DC power supply.

### < Reference >

- In case of malfunction or defective connection: Immediately after the compressor starts, it may stop due to “abnormally low speed” active error, etc.

The compressor may continue to operate normally, but the power-factor will decrease, the operation current will increase, and the overcurrent breaker of the household power board will probably activate.

- In case of active module faulty or defective connection:

Although the compressor continues to operate normally, the power-factor will decrease, the operation current will increase, and the overcurrent breaker of the household power board will probably activate.

### < Reference >

- If diode stack 1 is faulty, the compressor may stop due to “Ip”, “abnormally low speed”, etc. immediately after it starts, or it may not operate at all because no DC voltage is generated between the positive ⊕ and negative ⊖ terminals.

If diode stack 1 is faulty, be aware that the 25A fuse might also have blown.

- If diode stack 2 is faulty, DC voltage may not be generated and the compressor may not operate at all. Also, be aware that the 3A fuse might have blown.

(3) Smoothing capacitor (C501, C502, C503)

This smoothes (averages) the voltage rectified by the diode stacks.

<Notes> Smoothing capacitor C501 is not available for model RAC-25NH5 and RAC-35NH5.

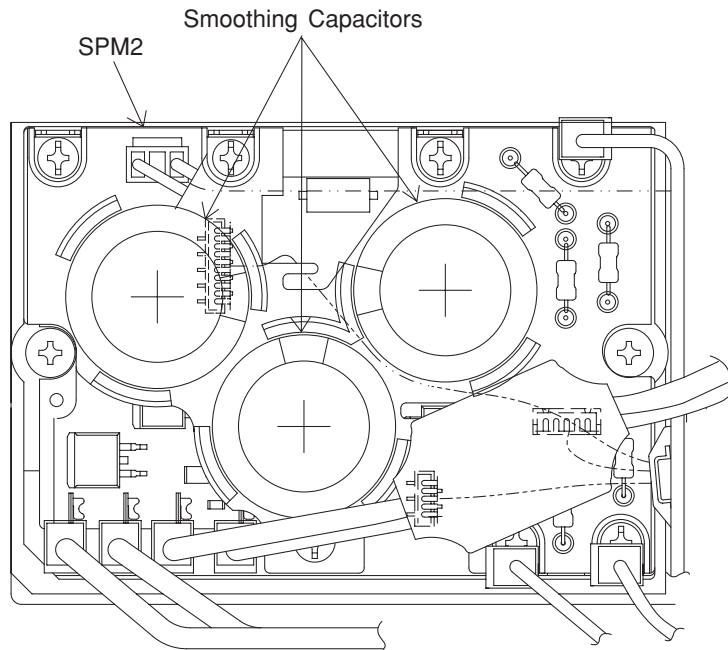


Fig. 1-2

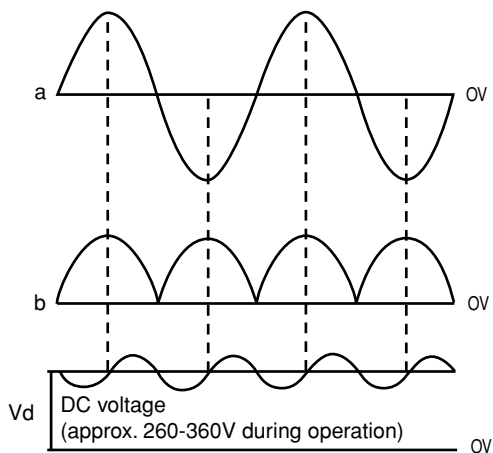


Fig. 1-3

- Be careful to avoid an electric shock as a high voltage is generated. Also take care not to cause a short-circuit through incorrect connection of test equipment terminals. The circuit board could be damaged.

(4) Smoothing capacitor (C010, C011)

This smoothes (averages) the voltage rectified by the diode stack. A DC voltage is generated in the same way as in Fig. 1-3.

Voltage between + side of C010 and - side of C011 is about 330V.

(5) C001 to C003, C012 to C015, C007, C008, NF COIL1, COIL, absorb electrical noise generated during operation of compressor, and also absorb external noise entering from power line to protect electronic parts.

(6) Surge absorber, Varistor 1, 2, 3, absorbs external power surge.

(7) Inrush protective resistor (R007, R008)

This works to protect from overcurrent when power is turned on.

< Reference >

- When inrush protective resistor is defective, diode stack may malfunction. As a result, DC voltage is not generated and no operation can be done.

## 2. Indoor/Outdoor Interface Circuit

- The interface circuit superimposes an interface signal on the DC 35V line supplied from the outdoor unit to perform communications between indoor and outdoor units. This circuit consists of a transmitting circuit which superimposes an interface signal transmit from the microcomputer on the DC 35V line and a transmitting circuit which detects the interface signal on the DC 35V line and outputs it to the microcomputer.
- Communications are performed by mutually transmitting and receiving the 4-frame outdoor request signal one frame of which consists of a leader of approx. 100 ms., start bit, 8-bit data and stop bit and the command signal with the same format transmit from the indoor unit.
- Communication signal from outdoor microcomputer to indoor microcomputer. At first outdoor microcomputer will send a request signal (SDO) to indoor microcomputer. A high-frequency IF signal approx. 38 KHz is generated and modulated by the request signal (SDO) inside the outdoor microcomputer then output to pin (11) of microcomputer. This modulated IF signal is output to pin (30) of HIC and amplified by amp. This signal is superimposed to DC 35V line via C801 and L801.  
To prevent erroneous reception, the outdoor microcomputer is designed so that it cannot receive a signal while it is outputting a request signal.  
The receiving circuit in the indoor unit consists of a comparator and transistor. The interface signal from the outdoor unit on the DC 35V line is supplied to C821, where DC components are eliminated, and is then shaped by the comparator. The shaped signal is detected by diode, amplified by amp, and output to pin (49) of the indoor microcomputer.  
Fig. 2-2 shows the voltages at each component when data is transferred from the outdoor microcomputer to the indoor microcomputer.
- Communication signal from indoor microcomputer to outdoor microcomputer. The request signal (SDO) generates by indoor microcomputer is output to pin (50), and amplifies by C801. IF signal approx. 38 kHz is generated by comparator, then modulate by the request signal from pin (50) of indoor microprocessor. This modulated IF signal is then amplified and superimposed to DC 35V line via L801 and C802 of indoor interface circuit.  
Fig. 2-3 shows the voltages at each component when data is transferred from outdoor microcomputer to indoor microcomputer.  
The circuit operation of the outdoor receiving circuit is same as indoor receiving circuit.

- Fig. 2-1 shows the interface circuit used for the indoor and outdoor microcomputers to communicate with each other.

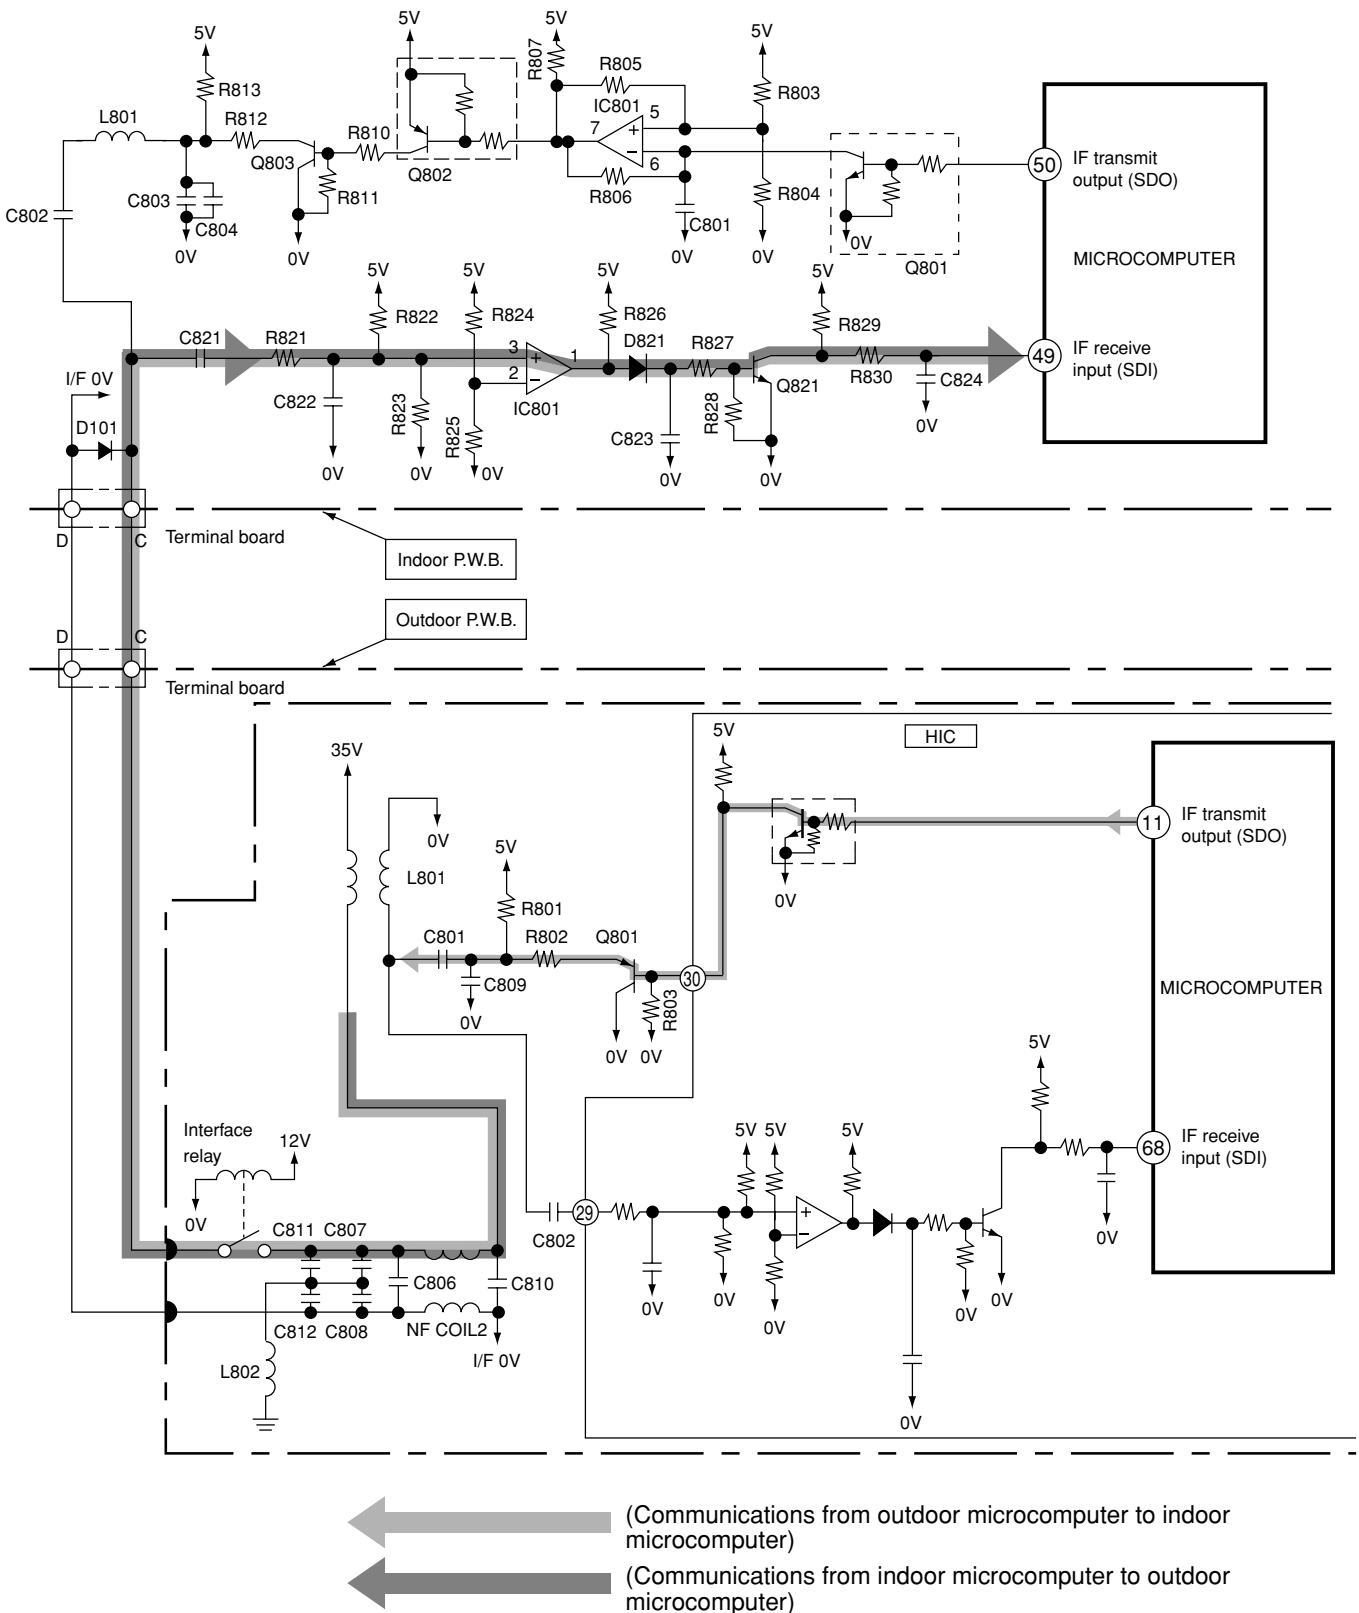


Fig. 2-1 Indoor/outdoor interface Circuit

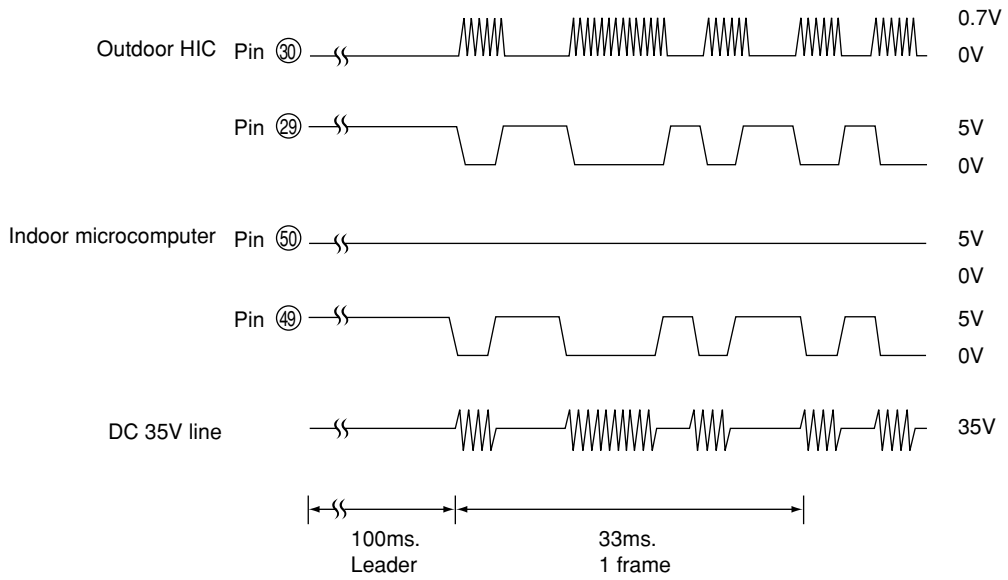


Fig. 2-2 Voltages Waveforms of indoor / Outdoor Microcomputers (Outdoor to Indoor Communications)


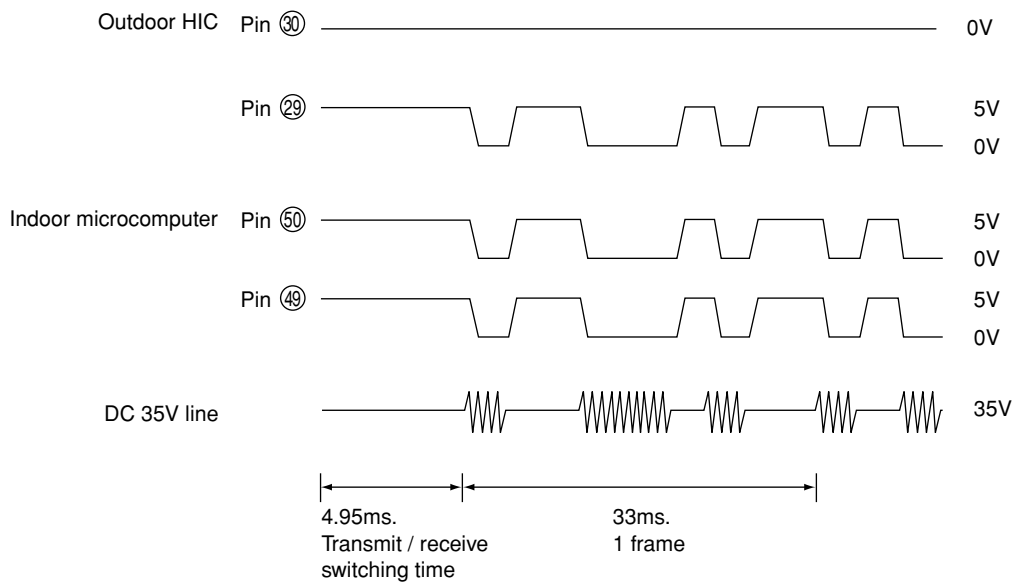



Fig. 2-3 Voltages Waveforms of indoor / Outdoor Microcomputers (Indoor to Outdoor Communications)

[Serial Communications Format during Normal Communications]

(1) Outdoor microcomputer (HIC) to indoor microcomputer

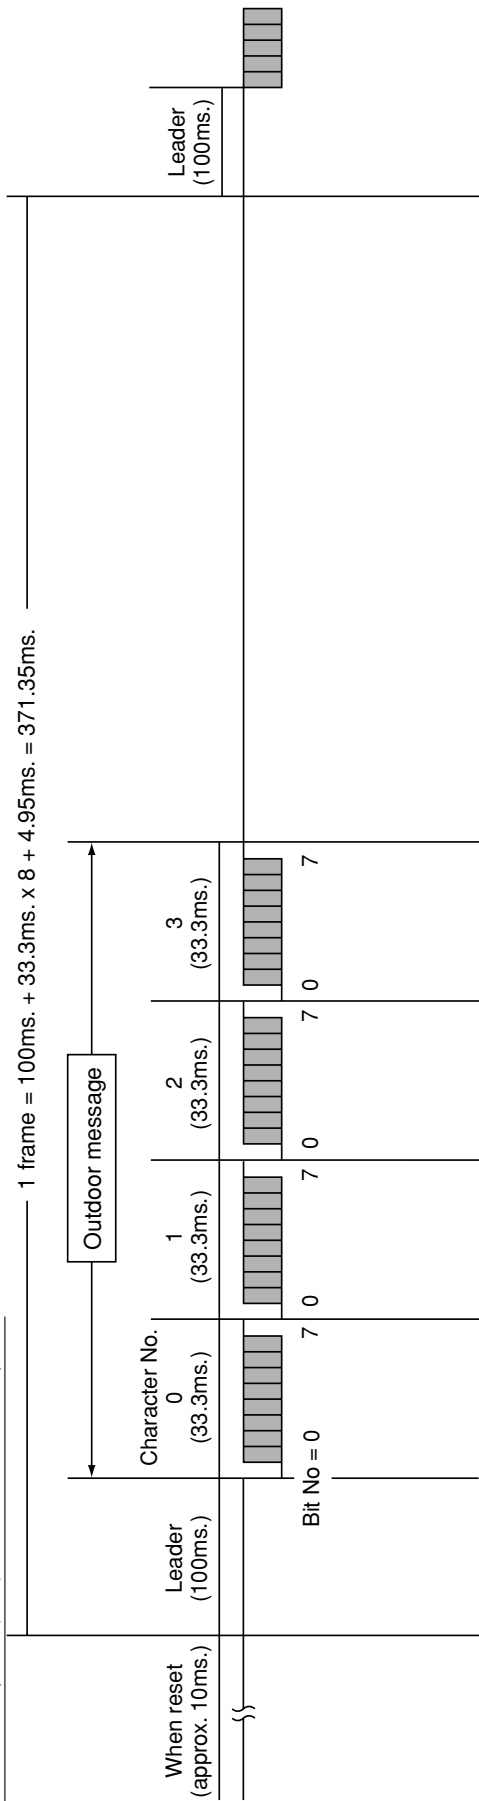

(2) Indoor microcomputer to outdoor microcomputer (HIC)

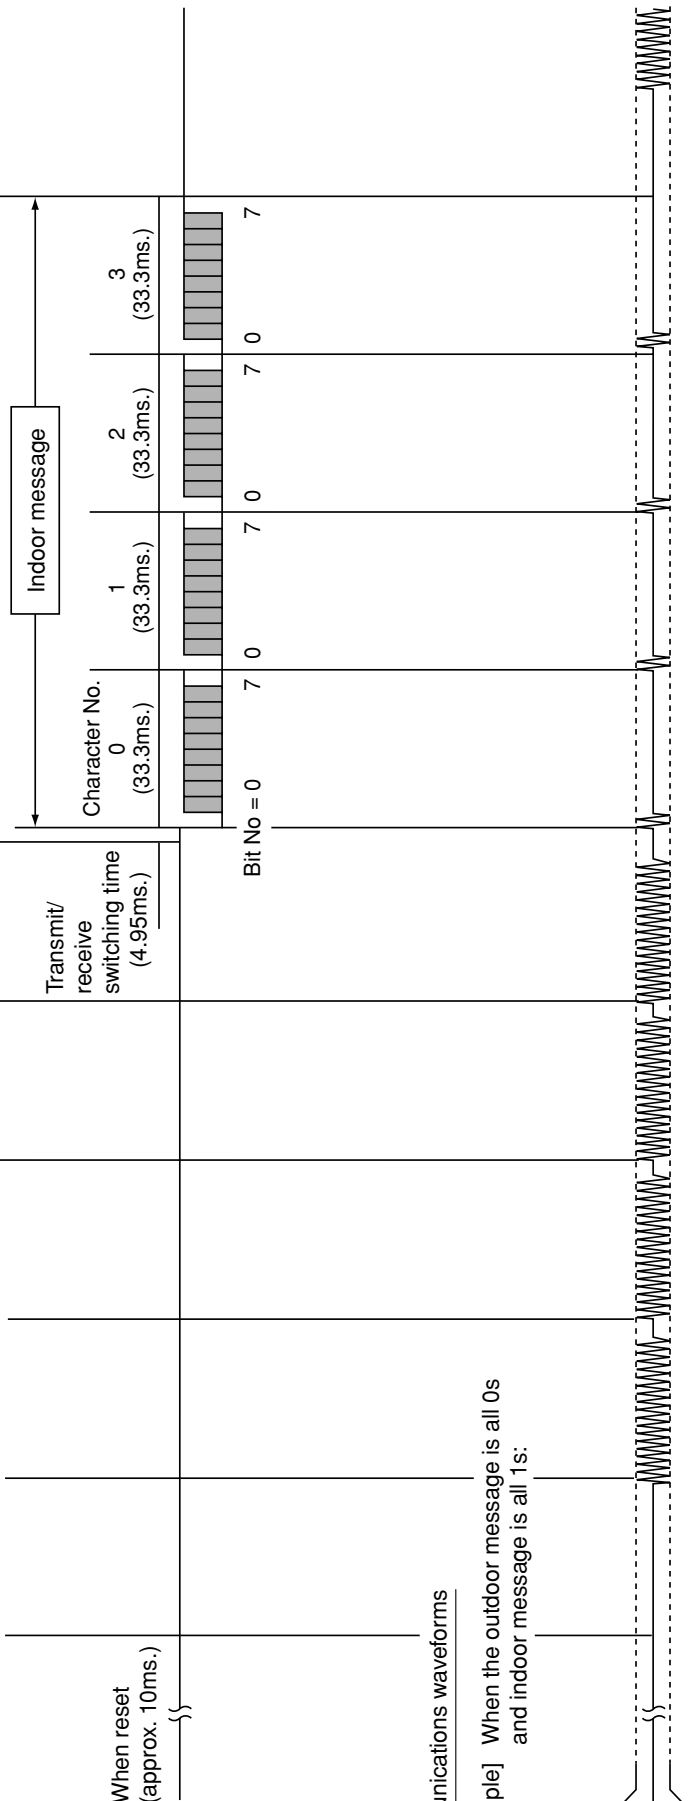

(3) Communications waveforms

[Example] When the outdoor message is all 0s and indoor message is all 1s:

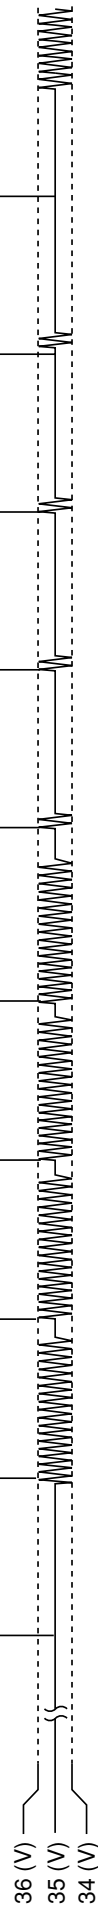


Fig. 2-4



[ Serial Communications Data ]

(1) Outdoor message

Character No.	0								1								2								3															
Bit No.	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0								
Contents	Multi-bit								Outside temperature (0 LSB)	Outside temperature (1)	Outside temperature (2)	Outside temperature (3)	Outside temperature (4)	Outside temperature (5)	Outside temperature (6)	Outside temperature (7 MSB)	Compressor during operation	Compressor during operation	Actual compressor rotation speed (0 LSB)	Actual compressor rotation speed (1)	Actual compressor rotation speed (2)	Actual compressor rotation speed (3)	Actual compressor rotation speed (4)	Actual compressor rotation speed (5 MSB)	Fan-7-step request															
Data	1/0	0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

(2) Indoor message

Character No.	0								1								2								3															
Bit No.	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0								
Contents	Operation mode (0 LSB)	Operation mode (1)	Operation mode (2 MSB)	Indoor in-operation bit	Capacity code (0 LSB)	Capacity code (1)	Capacity code (2)	Capacity code (3 MSB)	Fan (0 LSB)	Fan (1)	Fan (2 MSB)	2-way valve	Reversing valve			Compressor ON	Compressor command speed (0 LSB)	Compressor command speed (1)	Compressor command speed (2)	Compressor command speed (3)	Compressor command speed (4)	Compressor command speed (5)	Compressor command speed (6)	Compressor command speed (7 MSB)	15/20(A)	OVL up							Compressor minimum rotation speed (0 LSB)	Compressor minimum rotation speed (1)	Compressor minimum rotation speed (2)	Compressor minimum rotation speed (3)	Compressor minimum rotation speed (4 MSB)			
Data	1/0	1/0	1/0	1/0	0	0	0	0	1/0	1/0	1/0	0	1/0	0	0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0

### 3. Power Module Circuit

- Fig. 3-1 shows the system power module and its peripheral circuit. The three transistors on the positive ⊕ side are called the upper arm, and the three transistors on the negative ⊖ side are called the lower arm.

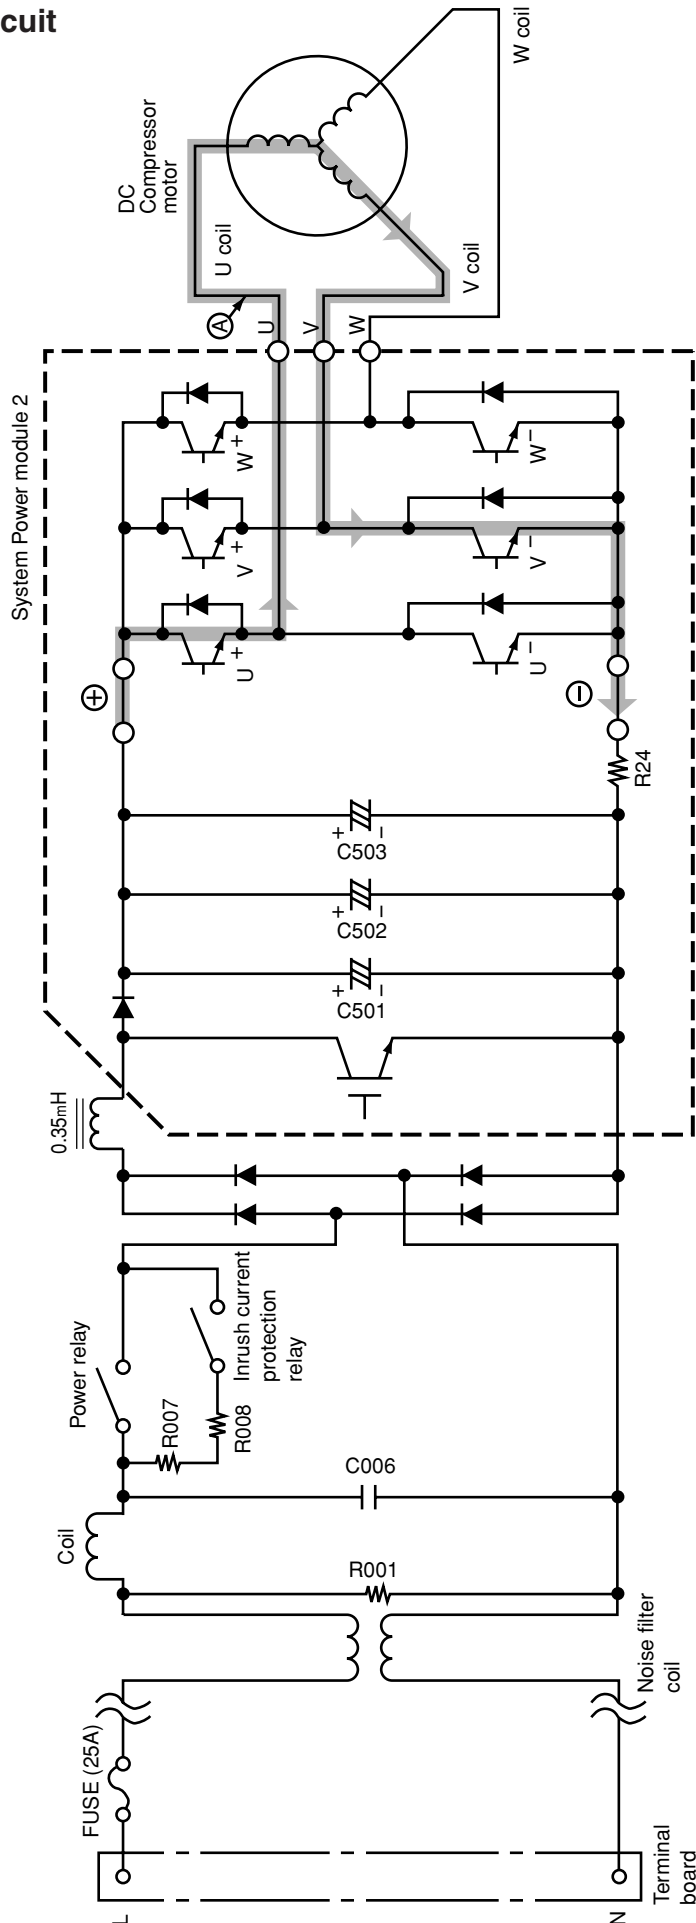


Fig. 3-1 Power module circuit (U<sup>+</sup> is ON, V<sup>-</sup> is ON)

- DC 260-360V is input to system power module and system power module switches power supply current according to rotation position of magnet rotor. The switching order is as shown in Fig. 3-2.

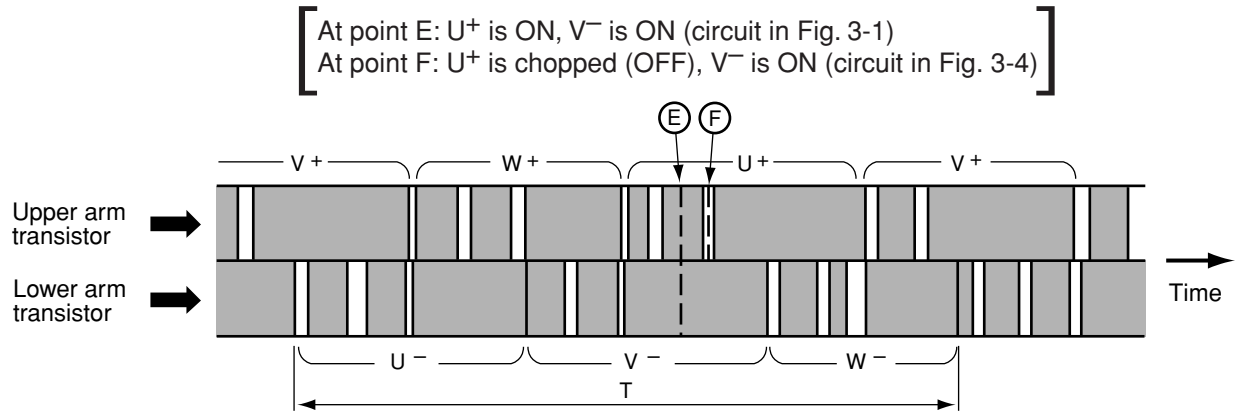


Fig. 3-2 Switching order of power module

- Upper arm transistor is controlled to ON/OFF by 3.3kHz chopper signal. Rotation speed of the compressor is proportional to duty ratio (ON time/ ON time + OFF time) of this chopper signal.
- Time T in Fig. 3-2 shows the switching period, and relation with rotation speed (N) of the compressor is shown by formula below;

$$N = 60/2 \times 1/T$$

- Fig. 3-3 shows voltage waveform at each point shown in Figs. 3-1 and 3-4. First half of upper arm is chopper, second half is ON, and first half of lower arm is chopper, second half is ON.

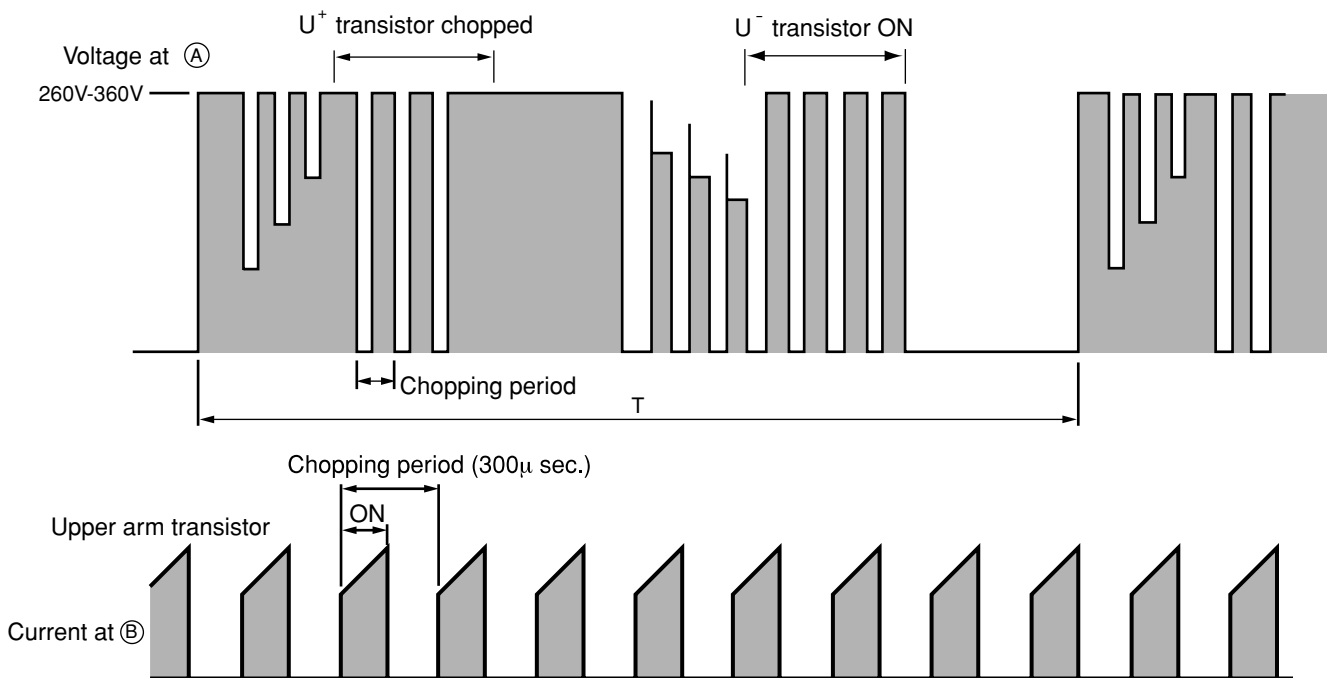


Fig. 3-3 Voltage waveform at each point

- When power is supplied U<sup>+</sup> → U<sup>-</sup>, because of that U<sup>+</sup> is chopped, current flows as shown below; (B)
  - (1) When U<sup>+</sup> transistor is ON: U<sup>+</sup> transistor → U coil → V coil → V<sup>-</sup> transistor → DC current detection resistor → Point (B) (Fig. 3-1)
  - (2) When U<sup>+</sup> transistor is OFF: (by inductance of motor coil) U coil → V coil → V<sup>-</sup> transistor → Return diode → Point (A) (Fig. 3-4)

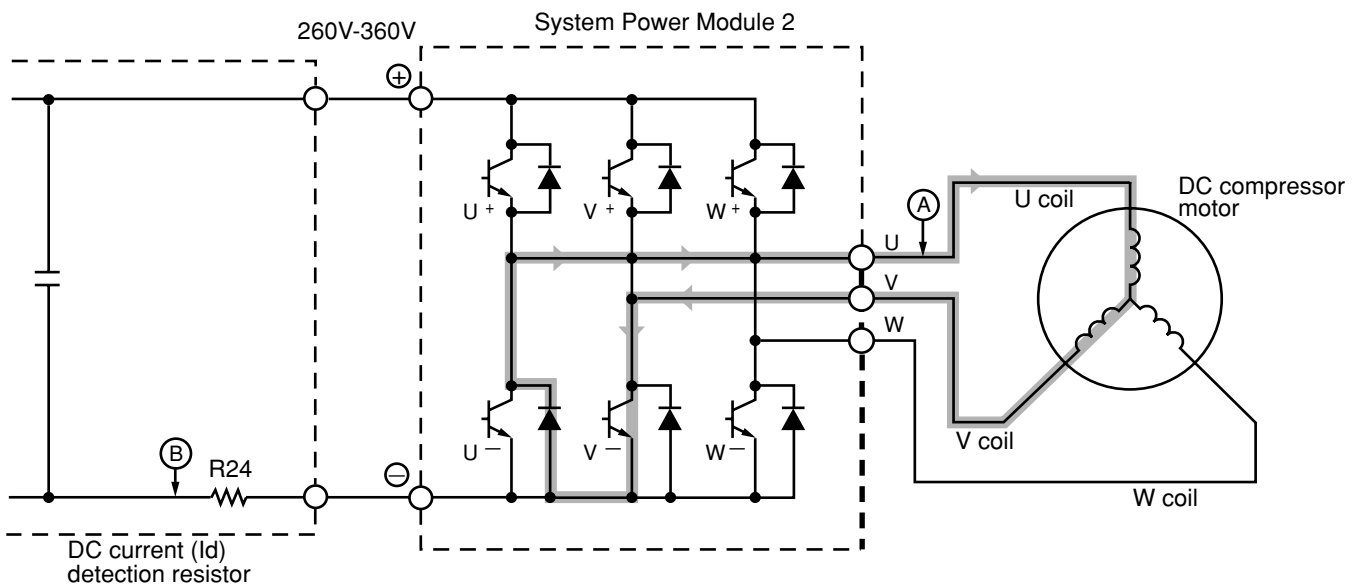


Fig. 3-4 Power module circuit (U<sup>+</sup> is ON, V<sup>-</sup> is ON)

- Since current flows at point (B) only when U<sup>+</sup> transistor is ON, the current waveform at point (B) becomes intermittent waveform as shown in Fig. 3-3. Since current at point (B) is approximately proportional to the input current of the air conditioner, input current is controlled by using DC current (I<sub>d</sub>) detection resistor.

<Reference>

If power module is detective, self diagnosis lamps on the control P.W.B. may indicate as shown below:

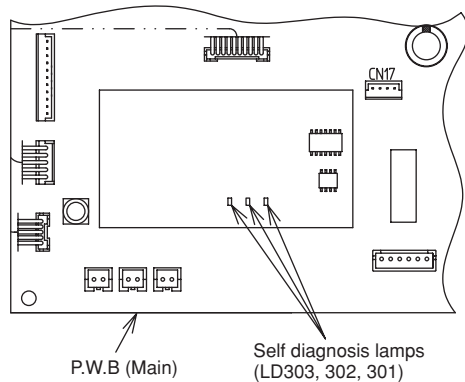


Fig. 3-5

Table 3-1

Self-diagnosis	Self-diagnosis lamp and mode	
I <sub>p</sub> (peak current cut)	LD301	Blinks 2 times
Abnormal low speed rotation	LD301	Blinks 3 times
Switching incomplete	LD301	Blinks 4 times

- Simplified check of power module (Lighting mode when operated with compressor leads disconnected)
  - (1) Disconnect connector of 3-pole (WHT, YEL, RED) lead wire connecting to compressor located at the lower part of electric parts box.
  - (2) Set to compressor operation state (other than FAN mode) and press Start/stop switch of remote control.
  - (3) If normal operation continues for more than 1 minute (LD303 lights), power module is considered normal.
- \* Refer to other item (troubleshooting on page 94) for independent checking of power module.



(2) During ON

- The drain current at IC901 increases linearly. During this period, the gate voltage and current become constant because of the saturation characteristics of the transformer.

(3) Shifting from ON to OFF

- This circuit applies a negative feedback signal from the 12V output. When the voltage across C919 reaches the specified value, REG2 turns on and current flows to PQ2 ①-②. This turns the secondary circuits on, sets IC901 pin ① to "Hi", and turns IC901 off.

(4) During OFF

- While IC901 is on, the following energy charges the primary windings of the transformer:

Energy=LI<sup>2</sup>/2. Here, L : Primary inductance

I : Current when IC1 is off

This energy discharges to the secondary windings during power off. That is, C910, C911, C912, C914 is charged according to the turn ratio of each winding.

- At the start, an overcurrent flows to IC901 because of the charged current at C910, C911, C912, C914.
- The drain current at IC901 generates a voltage across R906. If it exceeds the IC901 base voltage, it sets the IC901 gate voltage to "Hi".
- R906 limits the gate voltage to prevent excessive collector current from flowing to IC901.

<Reference>

If the power circuit for P.W.B. seems to be faulty:

- (1) Make sure that 5V and 12V on the control P.W.B., upper arm U, V and W, and the lower arm power voltage are the specified values.

- (2) When only the 5V output is low:

REG 1 (regulator) faulty, 5V-0V shorted, output is too high, or REG 1 is abnormal.

- (3) When 12V and 5V are abnormal:

The following defects can be considered:

① Fan, operation, power, rush prevention relay (shorting in relay, etc.)

② Microcomputer is abnormal.

③ REG 1 (regulator is abnormal), etc.

Shorting on primary circuits.

When shorting occurs in the secondary circuits, there is no abnormality in the primary circuits because of overcurrent protection.

The voltage rises when an opening occurs in the primary circuits, or the feedback system is abnormal.

- (4) When 15V and 17V are abnormal:

D908, D909 or drive circuit is abnormal.

- (5) When all voltage are abnormal:

IC901, R906, etc. are possibly abnormal.

\* If IC901 is abnormal, be aware that other components, such as the power module, REG (regulator), etc. are possibly defective.

[When the switching power supply seems to be abnormal, the voltage between IC901 pin ④ (to be measured at the leads of R904 and R903) and IC901 pin ⑤ (to be measured at R906 lead) may be between 11 and 16V. This is because the protection circuit of IC901 is operating.]

## 5. Reversing valve control circuit

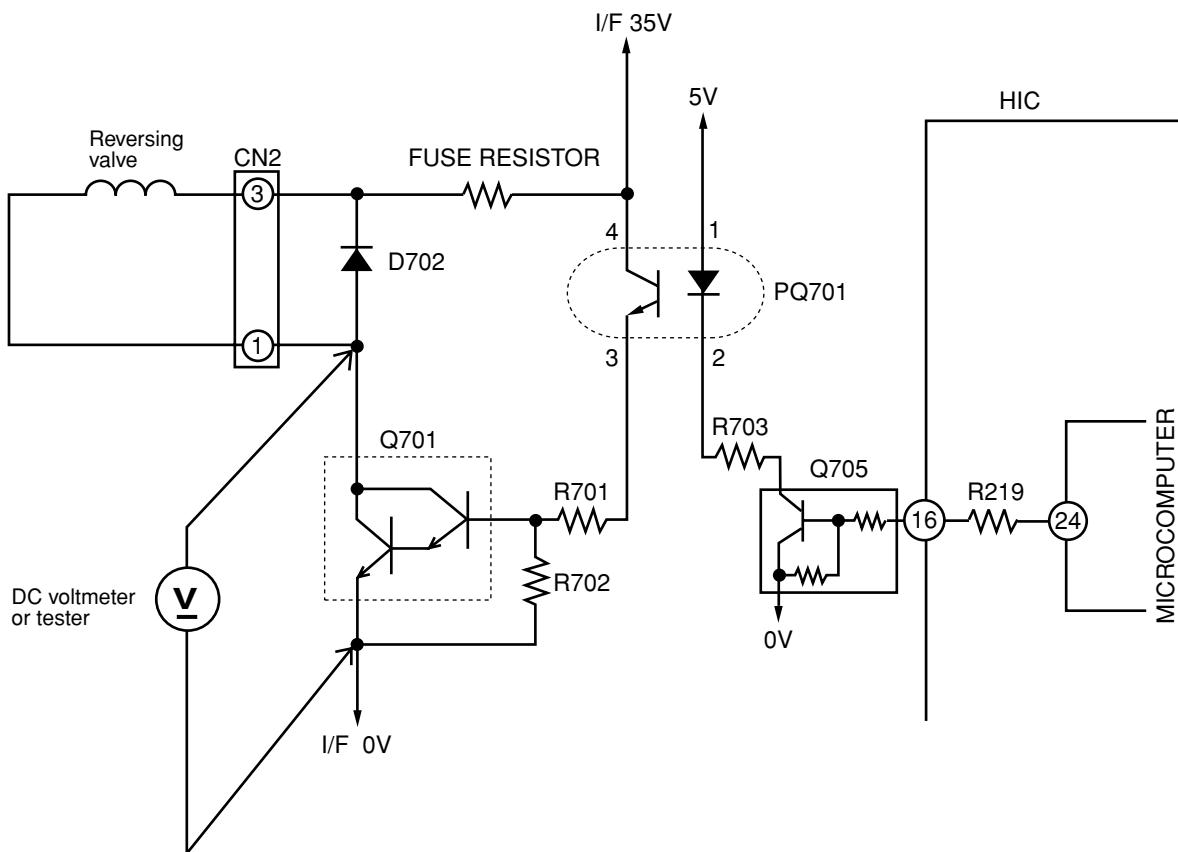


Fig. 5 – 1

- Reversing valve control circuit can switch reversing valve ON/OFF according to instruction from indoor microcomputer depending on the operation condition shows in Table 5-1. Voltage at each point in each operation condition is approximately as shown below when measured by tester. (When collector voltage of Q701 is measured)

Table 5-1

Operation condition		Collector voltage of Q701
Cooling	General operation of Cooling	About 35V
Heating	In normal heating operation	About 0.8V
	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 0.8V
	Defrosting	About 35V
Dehumidifying	Sensor dry	About 35V

## 6. Rotor magnetic pole position detection circuit


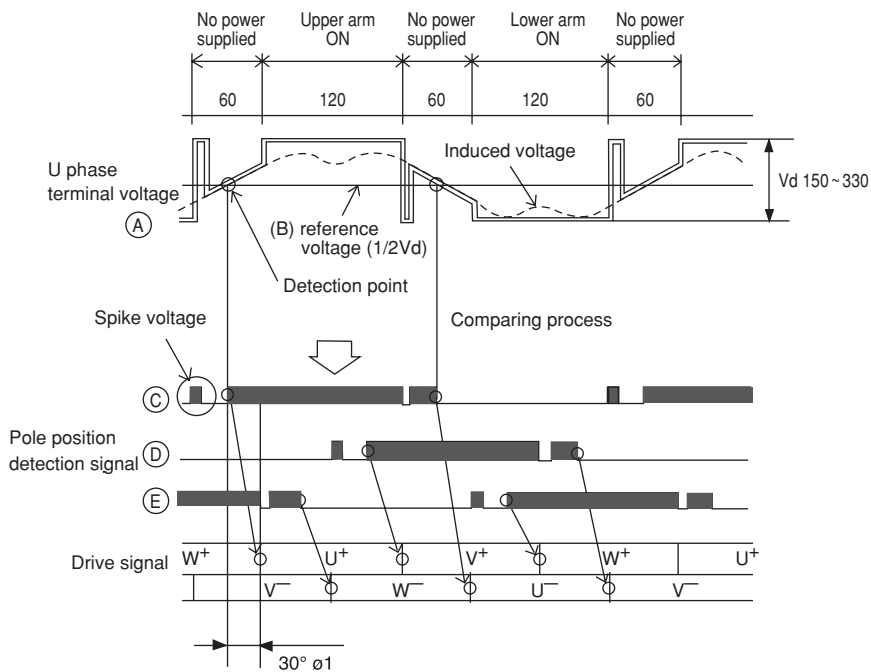


Fig. 6-1 Rotor magnetic pole position detection circuit and voltage waveform at each point

- To detect U phase, voltage at point © is produced by driving motor induced voltage signal (voltage at point (A)) and 1/2 voltage of  $V_d$  (voltage at point (B)), and comparing with comparator.
- For V phase and W phase, voltage at point (D) and voltage at point (E) are produced in the same way as above. Voltage at point © is taken into indoor unit microcomputer, switching timing to  $U^+$  transistor from  $W^+$  transistor is produced by delaying  $30^\circ$  from rise waveform, ignoring spike voltage. In addition, switching timing to U-transistor from W-transistor is produced by delaying  $30^\circ$  from fall waveform.
- For V phase and W phase, in the same way as above, drive signals are produced from voltages at point (D) and point (E). Phases are shifted by  $120^\circ$  and  $240^\circ$ , respectively, comparing with U phase.

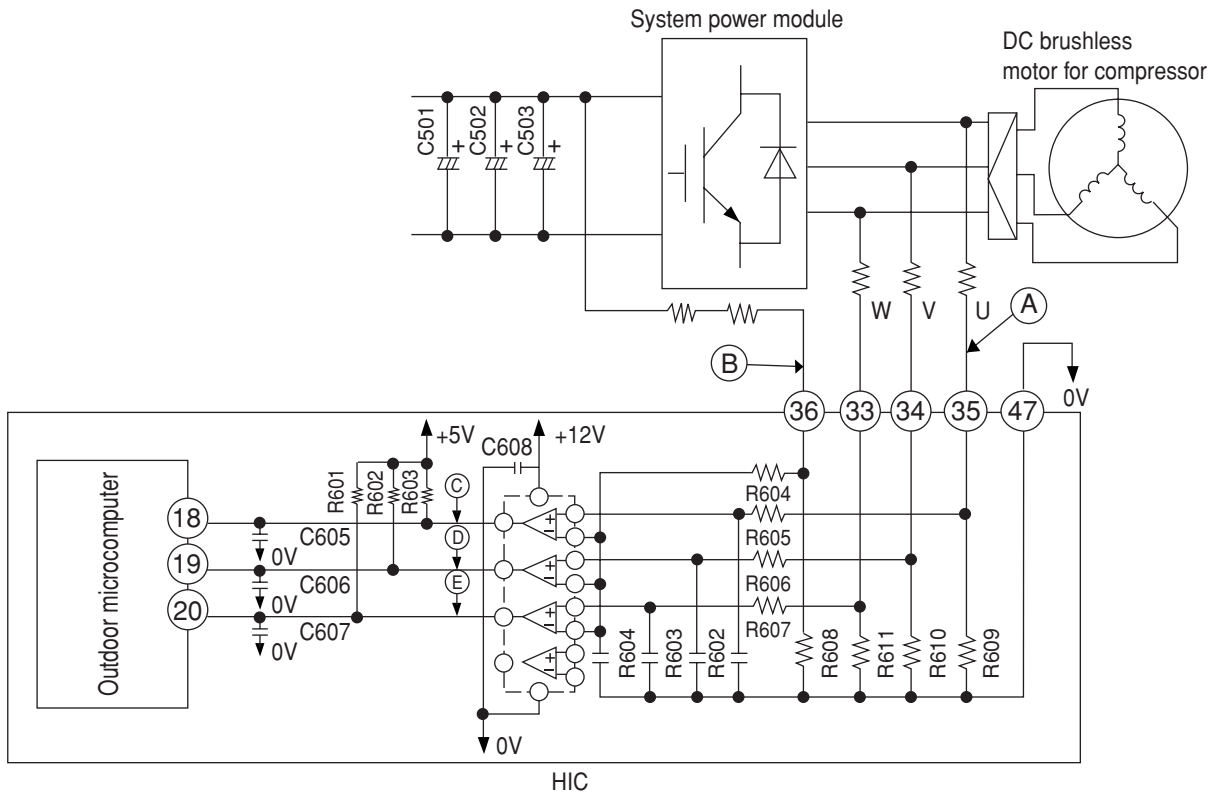

## 7. Drive Circuit

Fig. 7-1 shows the drive circuit. The circuits for U phase, V phase and W phase have the same Configuration.

- In low speed rotation mode (PWM range), as shown in Fig. 7-2, 0-5V chopper signal is output from microcomputer for each phase. Signal output from microcomputer is output to IC1 and is inverted by active Lo to become 0-15V chopper signal; it is then drive the transistor of each phase.
- In high speed rotation mode (PWM range), as shown in Fig. 7-3, 0-5V drive signal is output from microcomputer for each phase (with no chopper because of full duty). Signal output from microcomputer is input to IC1 and is inverted by active Lo to become 0-15V drive signal; it is then drive the transistor of each phase.

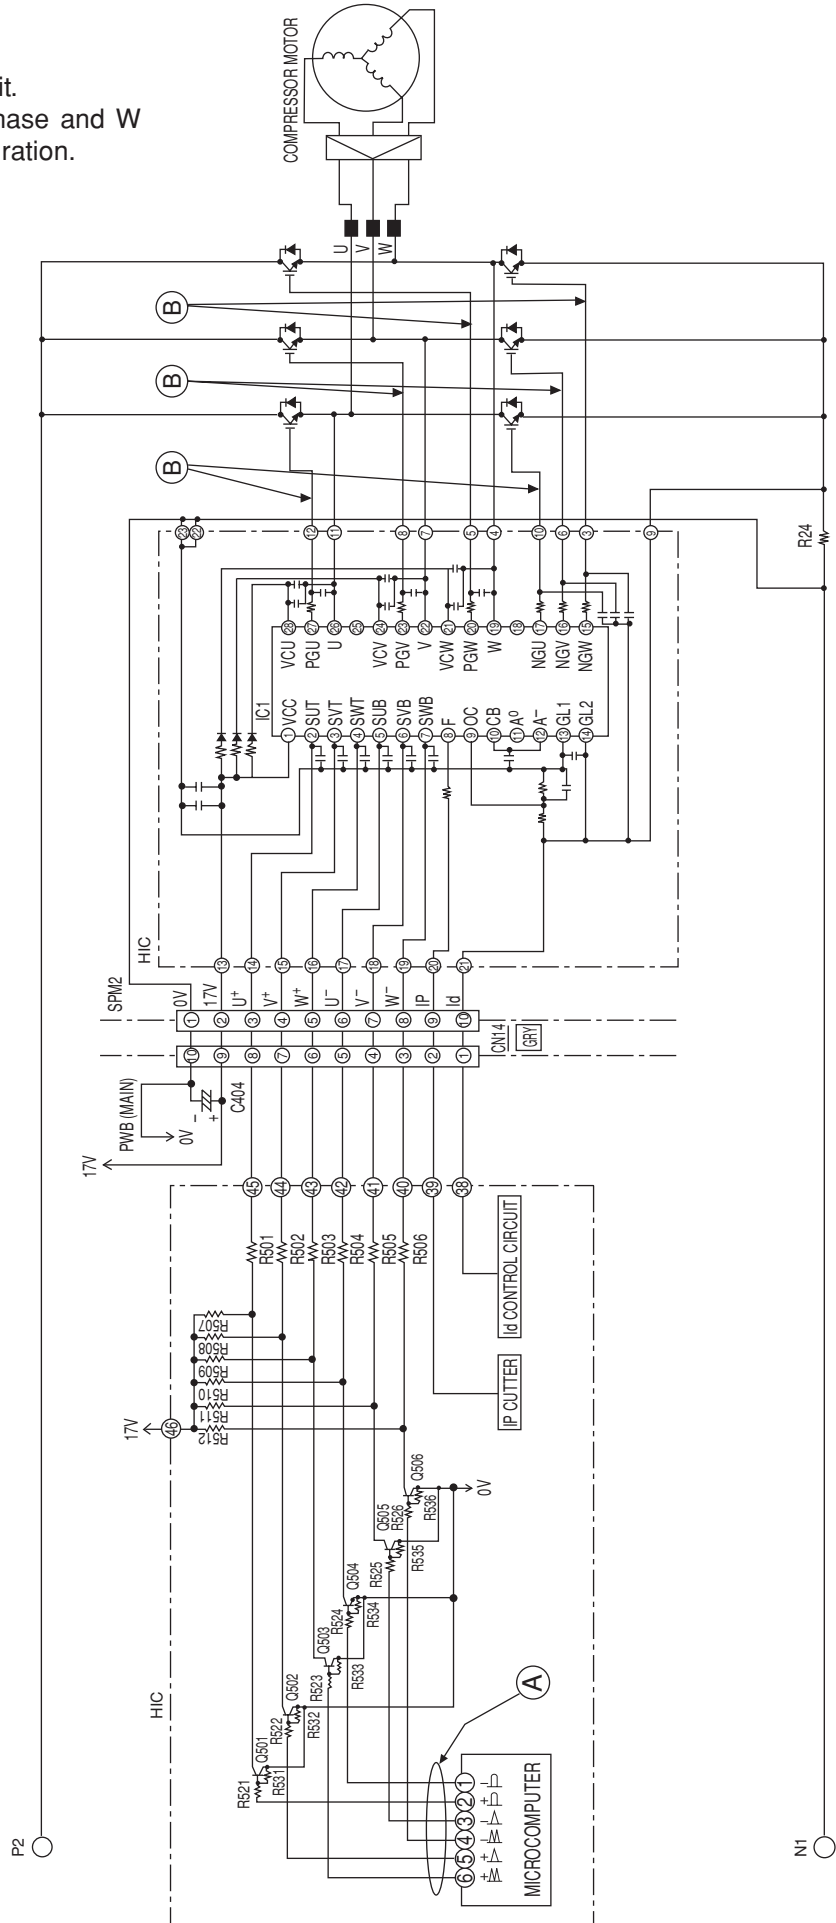


Fig.. 7-1

[Low speed rotation mode]

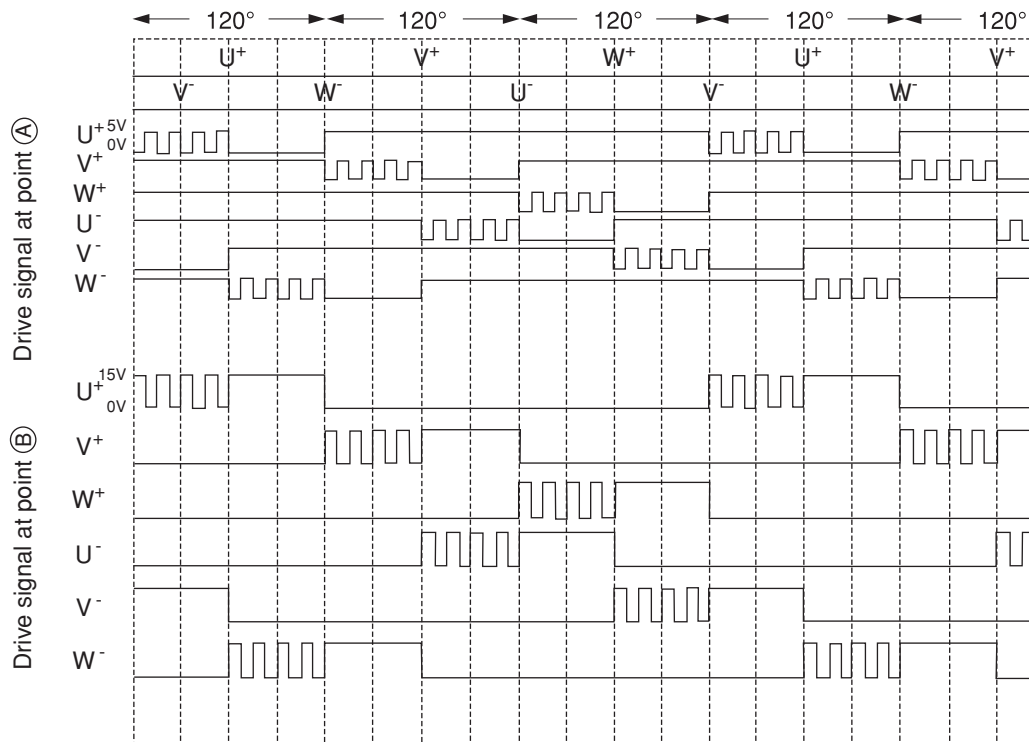


Fig. 7-2

[High speed rotation mode]

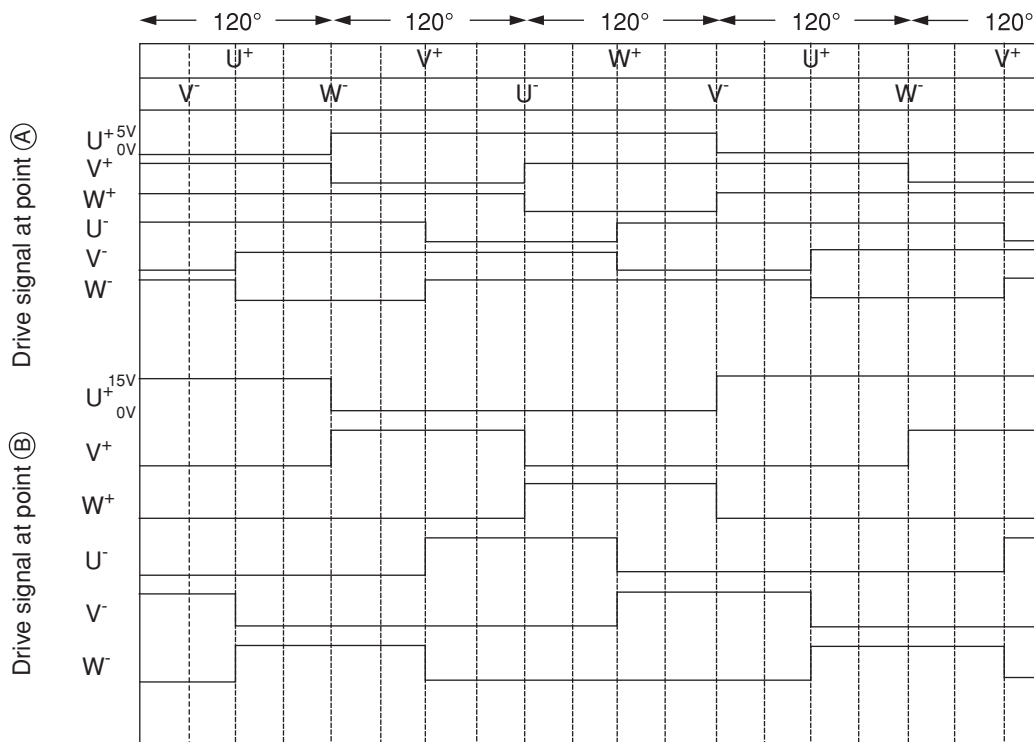


Fig. 7-3

## 8. HIC and Peripheral Circuits

- Fig. 8-1 shows the micro computer and its peripheral circuits, Table 8-1, the basic operations of each circuit block, and Fig. 8-2, the system configuration.

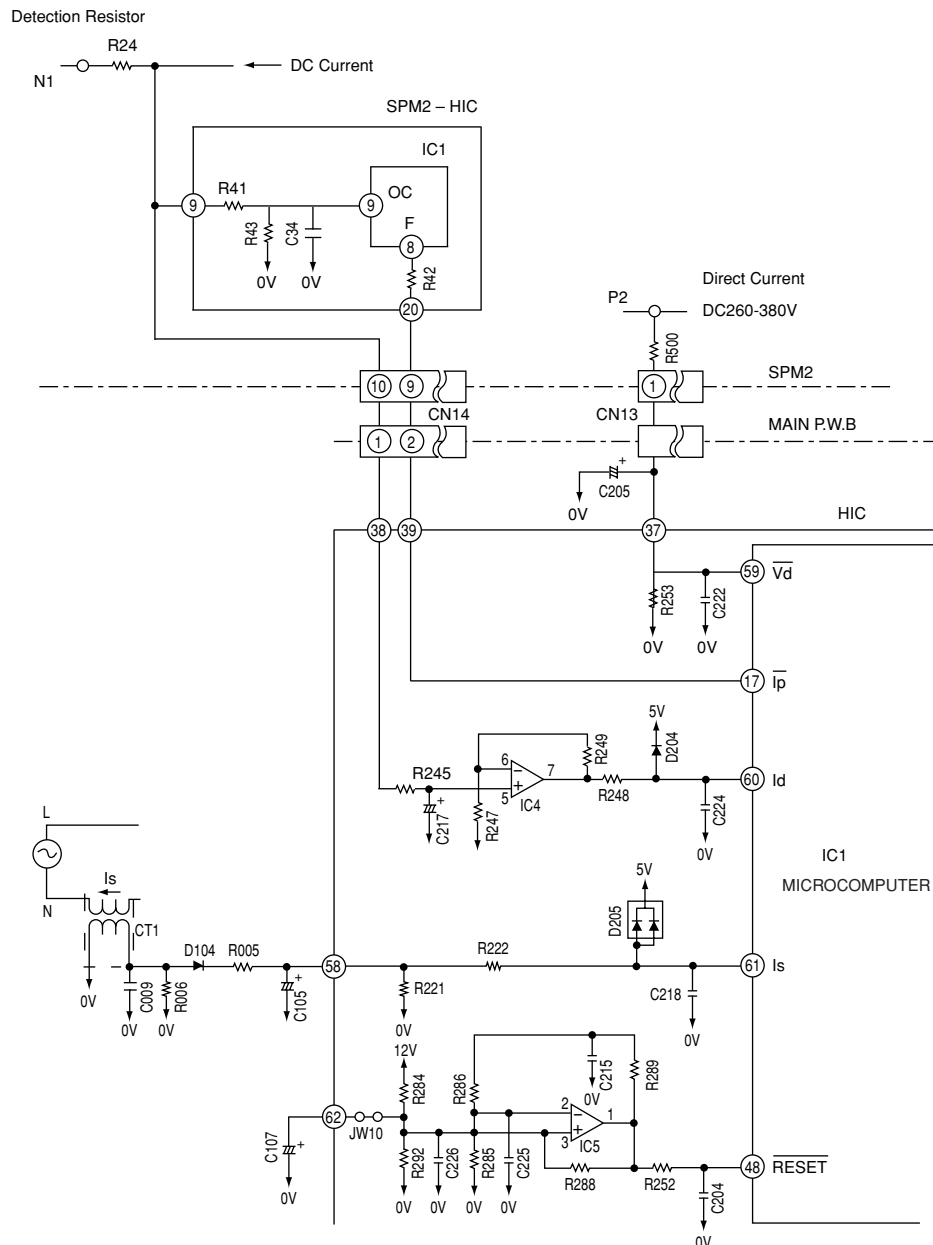


Fig. 8-1 Microcomputer and Peripheral Circuits

Table 8-1

Circuit block	Basic operation
Peak current cutoff circuit	Detects DC current flowing power module and during overcurrent (instantaneous value) flows, stops upper/lower arm drive circuits and also produces $I_p$ signal by which drive signal output is stopped.
Set value circuit	Compares voltage detected, amplified and input to HIC with set voltage value in microcomputer, and controls overload when set value exceeds input voltage.
Voltage amplifier circuit	Voltage-amplifies DC current level detected by the detection resistor and inputs this to microcomputer. Internal or external overload is judged in microcomputer.
Reset circuit	Produces reset voltage.
Trip signal synthesis circuit	Modulates chopper signal to drive signal and stops according to presence/absence of $I_p$ signal or reset signal.

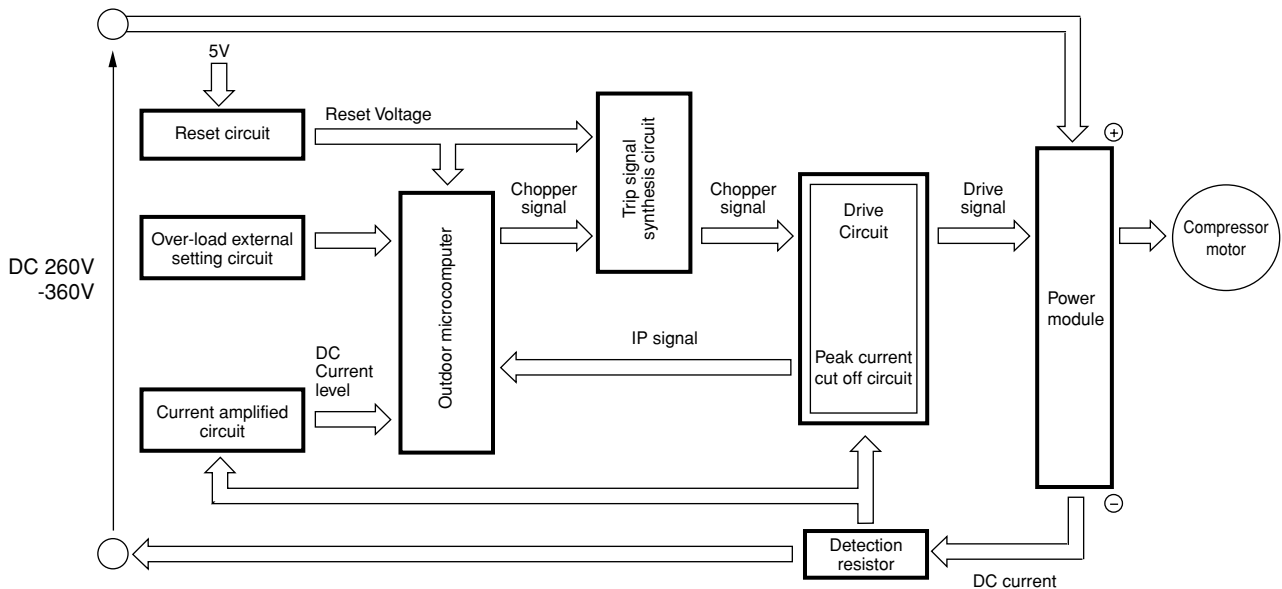


Fig. 8-2

- The following describes the operations of each circuit in detail.

(1) Peak current cut off circuit

Fig.8-3 Peak Current Cut off Circuit and Waveforms at Each Section.

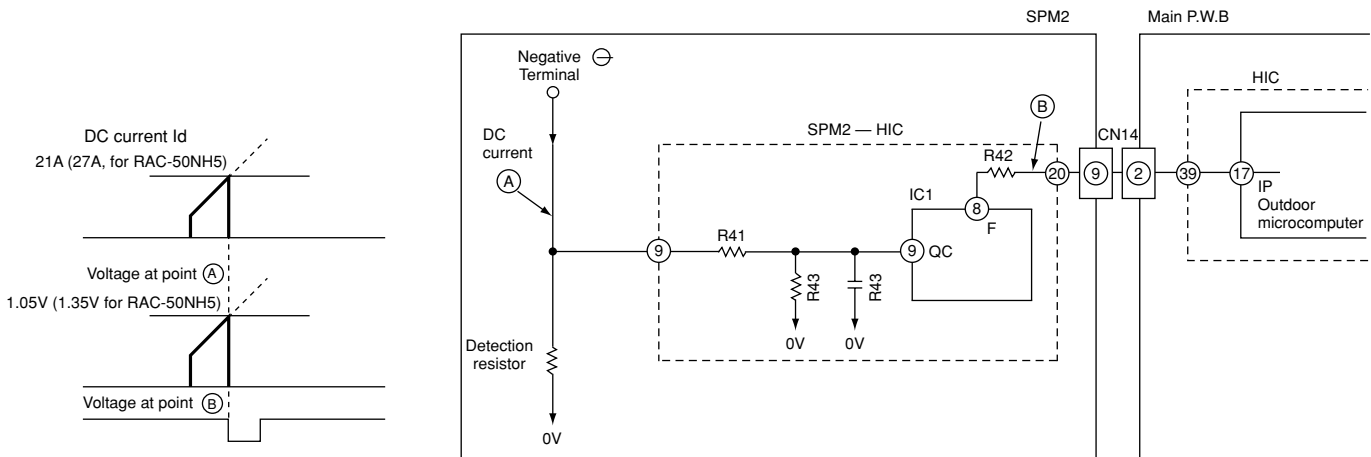


Fig.8-3

- The Ip cut off circuit detects an instantaneous excessive current and stops inverter to protect parts such as SPM2, etc.
- As shown in diagram, if current exceeding 21A (27A for RAC-50NH5) flows, voltage at point A recognized by detecting resistor is input to pin ⑩ of SPM2 – HIC, and voltage divided by R41 and R43 is input to pin ⑨ of IC1. Since threshold of IC1 is exceeded in this case, Lo signal is input from pin ⑧ (Voltage at point B). When Lo signal is input to pin ⑰ of microcomputer, microcomputer stops drive output.
- When drive output from microcomputer is stopped, all drive output goes Hi, and microcomputer is initialized to enter drive signal standby mode. 3 minutes later, microcomputer outputs drive signal again, to start operation.

(2) Overload control circuit (OVL control circuit)

- Overload control is to decrease the speed of the compressor and reduce the load when the load on the air conditioner increases to an overload state, in order to protect the compressor, electronic components and power breaker.
- Overloads are judged by comparing the DC current level and set value.
- Fig. 8-4 shows the overload control system configuration and Fig. 8-5 is a characteristic diagram of overload judgement values. There are two judgement methods-external judgement which compares the externally set value with the DC current value regardless of the rotation speed and internal judgement which compares the set value that varies according to the rotation speed programmed in the microcomputer software with the DC current value.

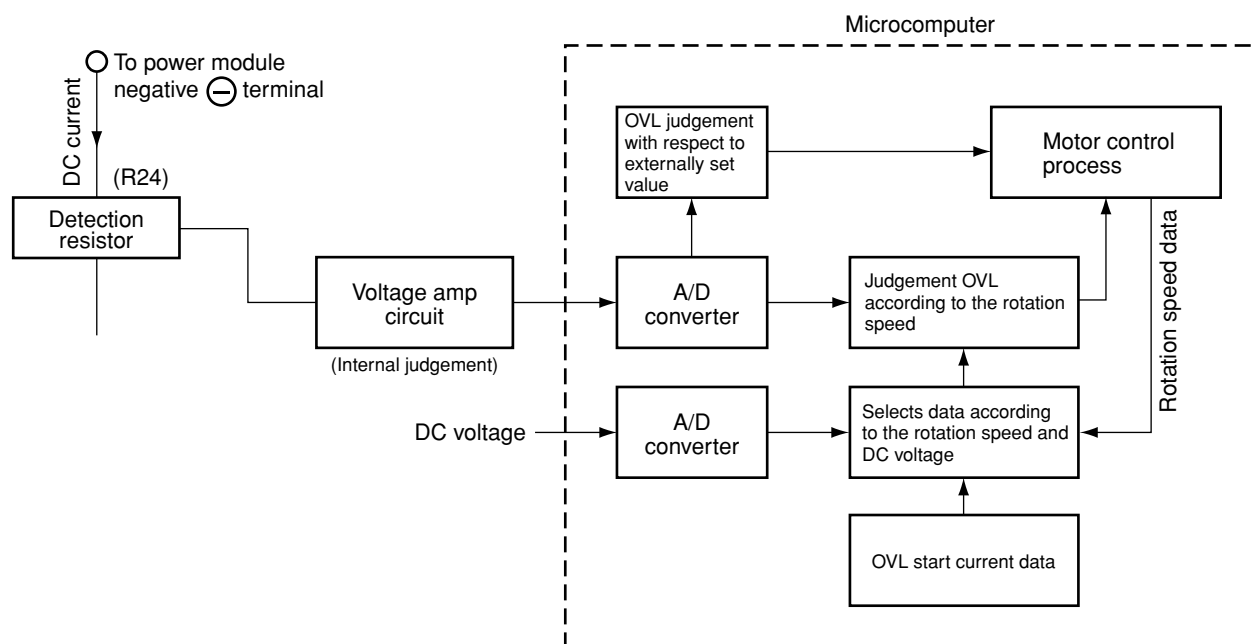


Fig. 8-4 Overload Control System Configuration

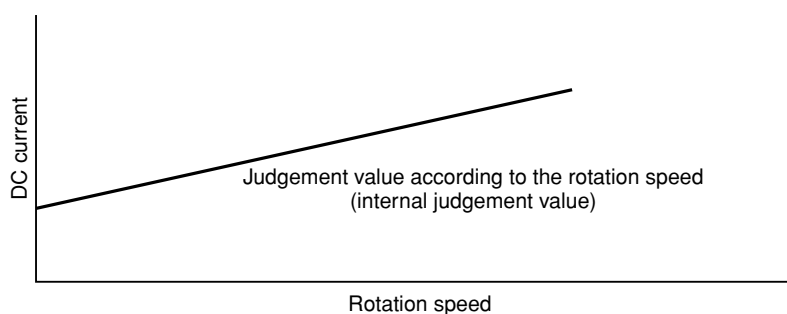


Fig. 8-5

①. Overload external judgement circuit

- Fig. 8-1. The filter consisting of R245 and C217 removes high harmonic components from the voltage generated by the current flowing to Detection resistor; R245 and C217 average the voltage. This voltage is then input to IC4 pin ⑤ is then amplified and supplied to microcomputer pin ⑩. The microcomputer compares this input with the internally set value, and if the input exceeds the set value, it enters overload control status.
- Fig. 8-7 shows the rotation speed control. When the voltage at pin ⑩ of the microcomputer exceeds the set value, the microcomputer decreases the rotation speed of the compressor and reduces the load regardless of the rotation speed commanded by the indoor microcomputer.

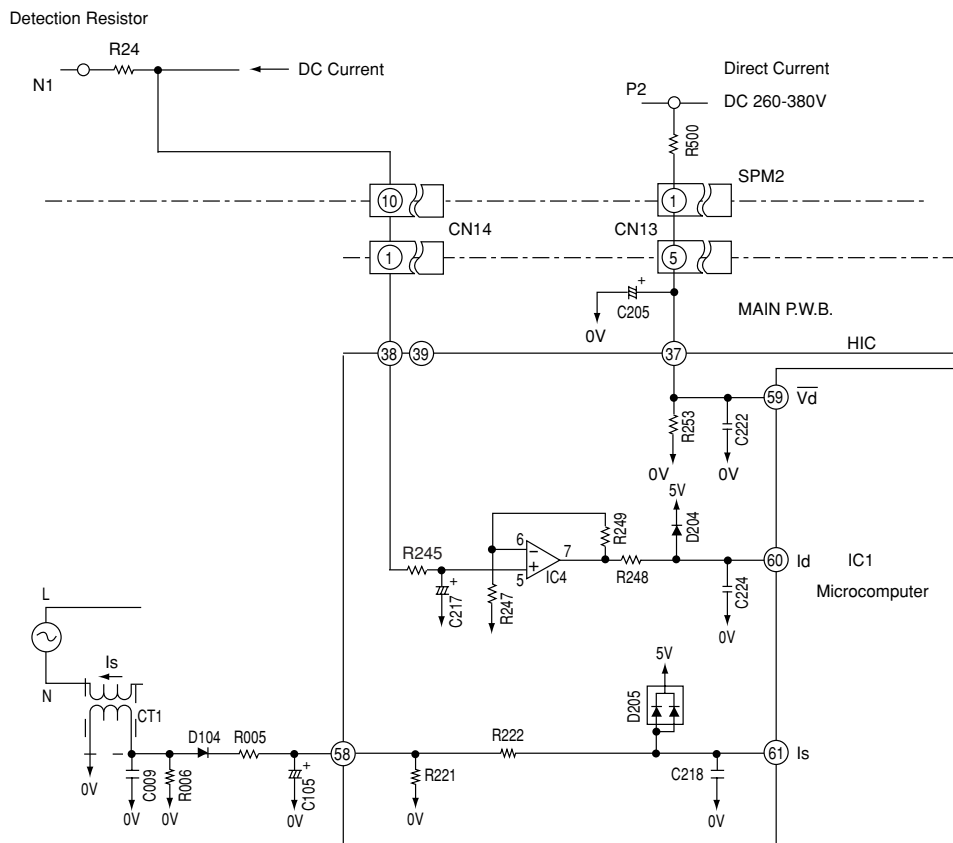


Fig. 8-6

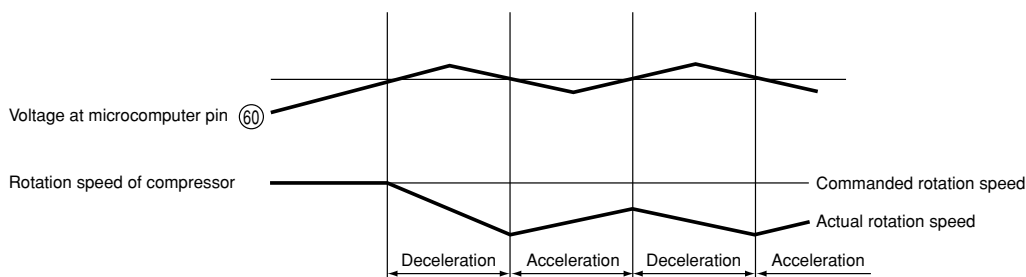


Fig. 8-7

## ②. Voltage amp. circuit

- The voltage amp. circuit amplifies the DC current level detected by the detection resistor after being converted to a voltage and supplies it to the microcomputer. Receiving this, the microcomputer converts it to a digital signal and compares it with the internal data to judge whether or not overload control is required.

< During overload control >

- The filter consisting of R245 and C217 removes high harmonic components from the voltage generated from the DC current flowing to the detection resistor, and supplies it to IC4 pin ⑤ IC4 forms a non-inverting voltage amp. circuit together with the peripheral elements.
- The microcomputer stores the set values which vary according to the rotation speed. When the DC current level exceeds the set value, the microcomputer enters the overload control state.
- The set Value is determined by the amplification of the voltage amp. circuit.

- Amplification : high → DC current : low
- Amplification : low → DC current: high

- R500, R253, detect the DC voltage at the power circuit. The microcomputer receives a DC voltage (260-380V) via HIC ③7 and applies correction to the overload set value so the DC current is low (high) when the DC voltage is high (low).

(Since the load level is indicated by the DC voltage multiplied by DC current, R247, R248, R249 are provided to perform the same overload judgement even when the voltage varies.)

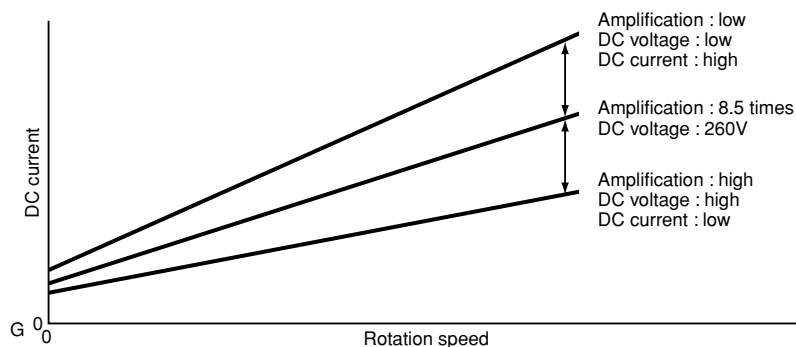


Fig. 8-8

< During start current control >

- It is required to maintain the start current (DC current) constant to smooth the start of the DC motor for the compressor.
- RAC-25NH5, RAC-35NH5, RAC-50NH5 uses software to control the start current.
- The start current varies when the supply voltage varies. This control method copes with variations in the voltages as follows.

(1) Turns on the power module's U<sup>+</sup> and V<sup>-</sup> transistors so the current flows to the motor windings as shown in Fig8-9.

(2) Varies the turn-ON time of the W<sup>+</sup> transistor according to the DC voltage level and the start is controlled so the start current is approx. 10A as shown in Fig. 8-10.

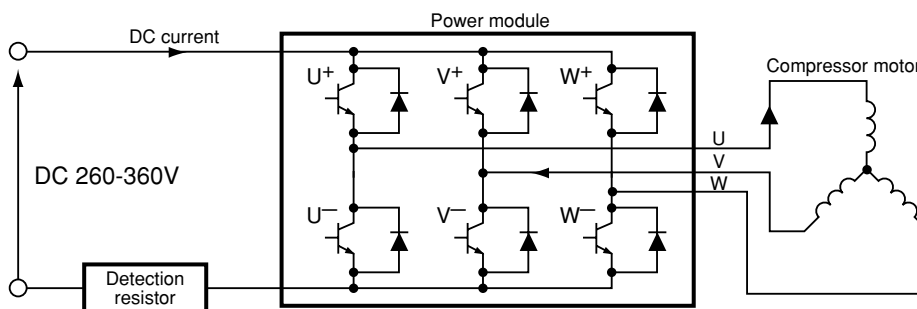


Fig. 8-9

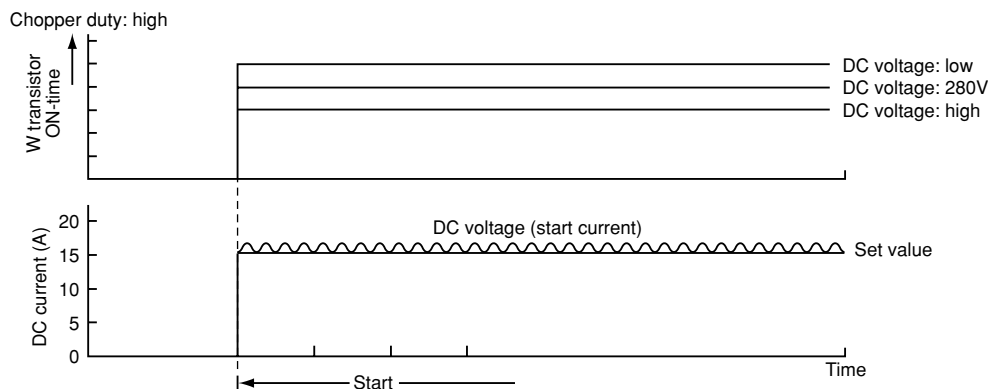


Fig. 8-10

## 9. Temperature Detection Circuit

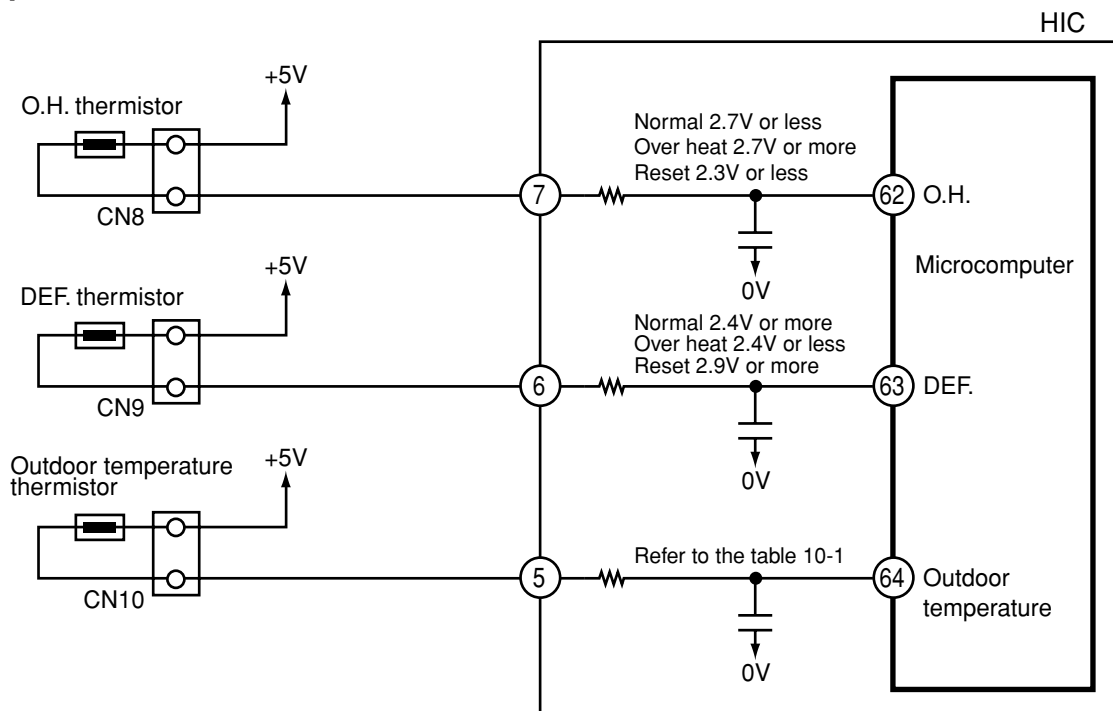


Fig. 9-1

- The Over heat thermistor circuit detects the temperature at the surface of the compressor head, the Defrost. thermistor circuit detects the defrosting operation temperature.
- A thermistor is a negative resistor element which has the characteristics that the higher (lower) the temperature, the lower (higher) the resistance.
- When the compressor is heated, the resistance of the Over heat thermistor becomes low and voltage at pin ⑥② of microcomputer is increased.
- Microcomputer compares the voltage present at pin ⑥② with the internal set value, if it is exceeded the set value microcomputer judges that the compressor is overheated and stops operation.
- When frost forms on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the Defrost. thermistor becomes high and the voltage at pin ⑥③ of microcomputer drops. If this voltage becomes lower than the set value stored inside, the microcomputer starts defrosting control.
- During defrosting operation the microcomputer transfers the defrosting condition command to the indoor microcomputer via the circuit interface.
- The microcomputer always reads the outdoor temperature via a thermistor (microcomputer pin ⑥④), and transfers it to the indoor unit, thus controlling the compressor rotation speed according to the value set at the EEPROM in the indoor unit, and switching the operation status (outdoor fan on/off, etc.) in the dry mode.

The following shows the typical values of outdoor temperature in relation to the voltage:

Table 9-1

Outdoor temperature (°C)	-10	0	10	20	30	40
Microcomputer pin ⑤ voltage (V)	1.19	1.69	2.23	2.75	3.22	3.62

<Reference>

When the thermistor is open, in open status, or is disconnected, microcomputer pins ⑥②–⑥④ are approx. 0V; when the thermistor is shorted, they are approx. 5 V, and LD301 blinks seven times.

However, an error is detected only when the OH thermistor is shorted; in such a case, the blinking mode is entered 12 minutes after the compressor starts operation.



## 10. Reset Circuit

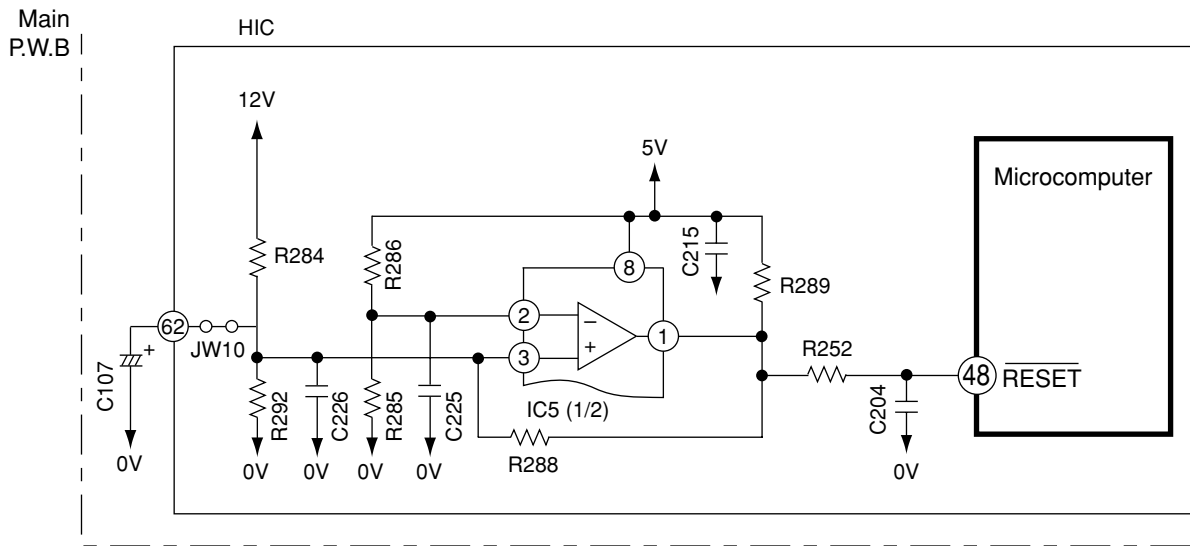


Fig. 10-1

- The reset circuit initializes the microcomputer program when Power is "ON" or "OFF".
- Low voltage at pin (48) resets the microcomputer, and HI activates the microcomputer.
- Fig. 10-1 shows the reset circuit and Fig. 10-2 shows waveform at each point when power is turned on and off.
- When power is turned on, 12V line and 5V line voltages rise and 12V line voltage reaches 10.9V and reset voltage input to pin (48) of microcomputer is set to Hi.
- Reset voltage will be hold "Hi" until the 12V line voltage drops to 9.90V even though the power shuts down.

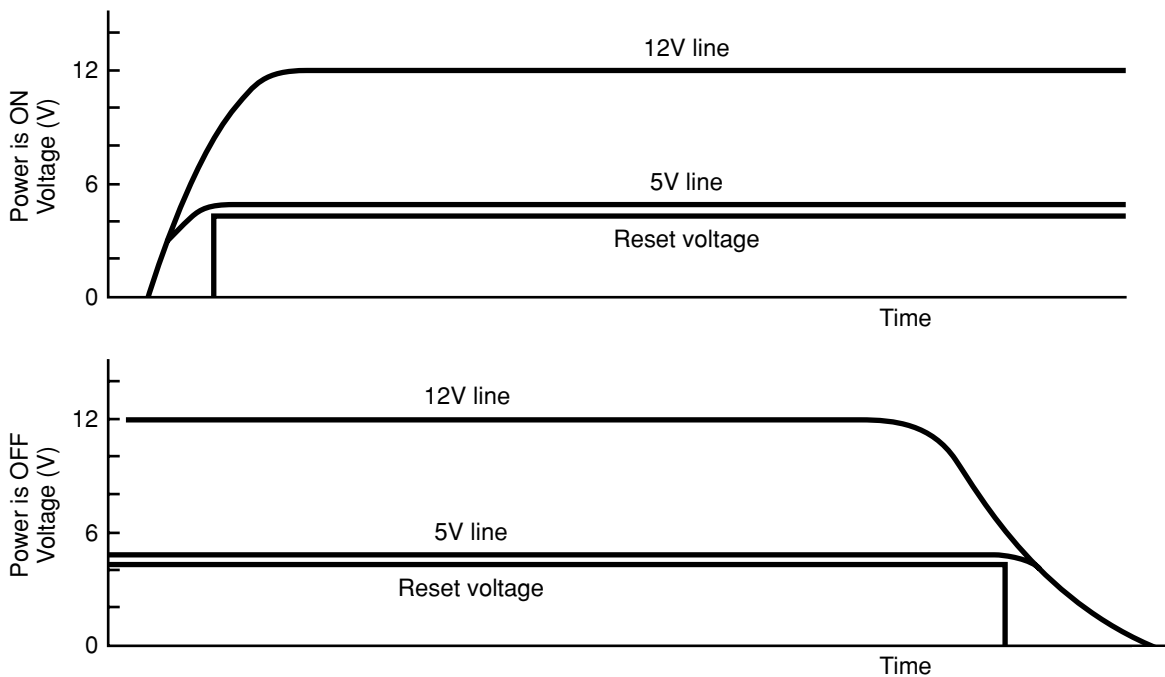


Fig. 10-2

## 11. Outdoor DC Fan Motor control circuit.

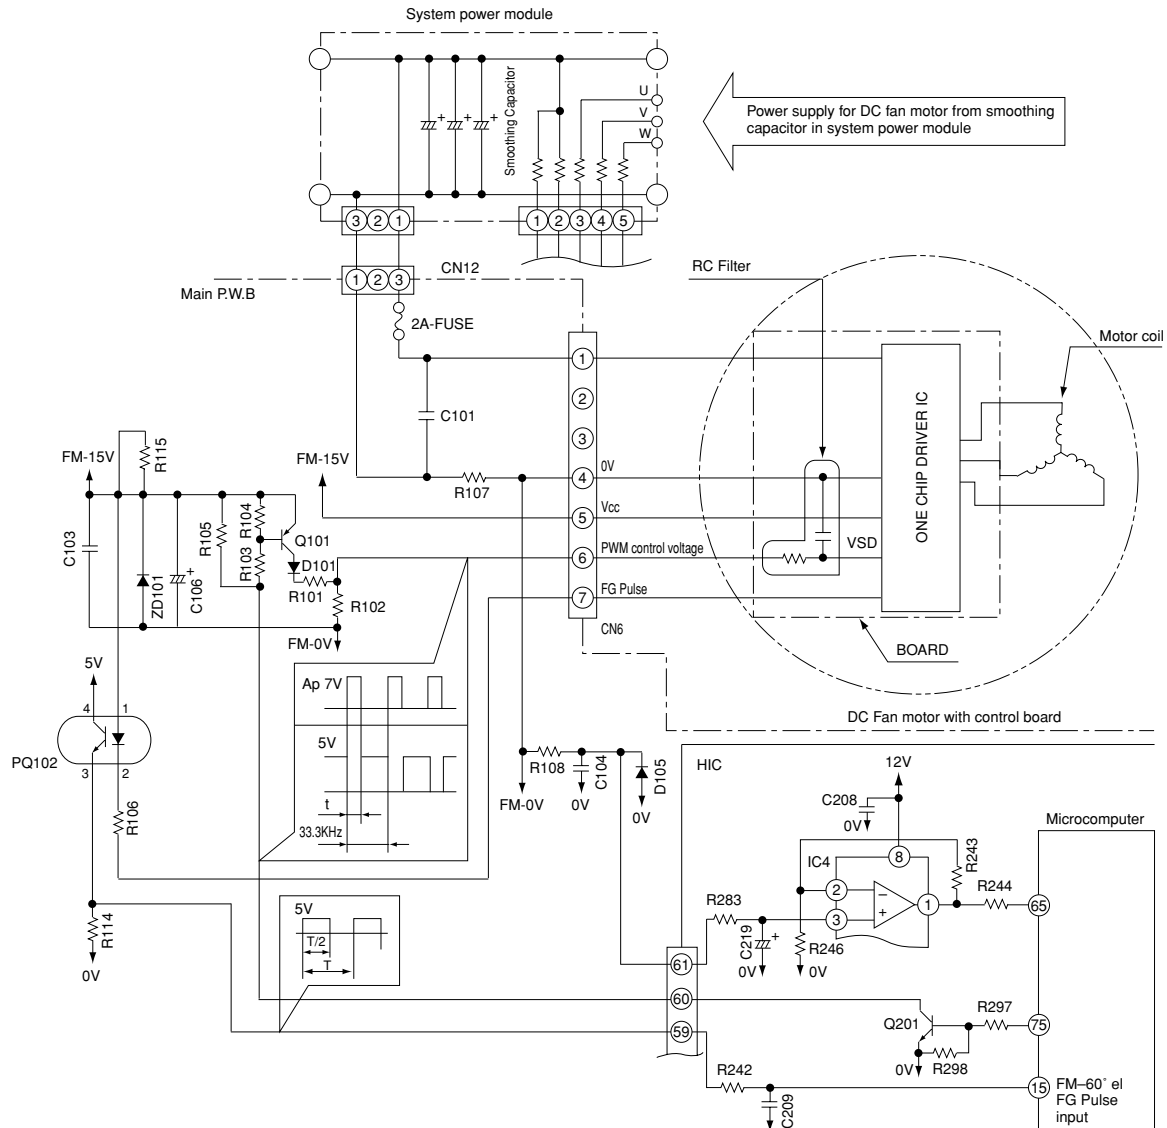


Fig. 11-1

- This model uses DC Fan Motor which has a controller circuit in the Motor.
- This DC Fan Motor will rotate by control voltage apply to Vsp input. (Voltage range: 1.7 to 7V DC)  
Vsp high : Faster ; Vsp low : slower ; Vsp lower than 1.7V : stop
- Motor will output FG pulse by following this motor revolution.
- Outdoor Microprocessor will output PWM control signal from FMCHOP terminal by following the instruction from indoor Microprocessor.
- This PWM control signal will convert to Vsp voltage by smoothing circuit (Q101 & RC filter)
- Fan motor will start to rotate when Vsp was proceeding over than 1.7V, and generate FG pulse by rotation speed.
- FG pulse will feed back to Outdoor Microprocessor through PQ102.
- PQ102 is the isolator between Microprocessor circuit and DC Fan Motor circuit, which has to match the Fan Motor revolution with instructed revolution. Such as...  
FG feedback: Faster – Instruction: Slower ... Decrease pulse width  
FG feedback: Slower – Instruction: Faster ... Increase pulse width
- FG pulse is also used for Fan Motor failure detection
- Microprocessor will monitor FG pulse 30 seconds after start the fan motor. If there is no signal detected, it will consider that the Fan Motor was malfunction and stop the operation. In this case, LD302 on control PWB will blink 12 times. (Fan Motor lock detected)
- R107 and IC4 are used for Fan Motor over current

< Reference >

- When operation stop with LD301 blinks 12 times, it may be caused by faulty DC fan motor.
- In this case, please check CN6 and CN12 connection first. It makes Fan Motor Lock also if those connectors are in misconnection.
- DC Fan Motor has broken when 2A Fuse was burned. Please replace both DC Fan Motor and 2A Fuse together.
- It will makes "Fan Lock Stop" when something has disturb the Fan rotation by inserting materials into propeller fan or ice has growing inside of outdoor unit by snowing.
- It may make "Fan Lock Stop" by strong wind (ex. 17m/sec or above) against the Fan rotation. In this case, unit will be restart again after a while.
- In case of "Fan Lock Stop" even though the DC Fan Motor is rotating correctly, the possible casue is Fan Motor problem or PQ102 on board or control board problem. Stop after the Fan motor runs 2 minutes, Fan Motor may be broken.


< Caution >

- Please take care for the electrical shock by high voltage of DC Fan Motor power source which is common with compressor when you are servicing this unit.
- You can not confirm the coil and wiring of Motor due to the built in control circuit in Fan Motor.

## 12. Power Factor Control Circuit

Power factor is controlled to almost 100%. (Effective use of power)

With IC in ACT module, control is performed so that input current waveform will be similar to waveform of input voltage

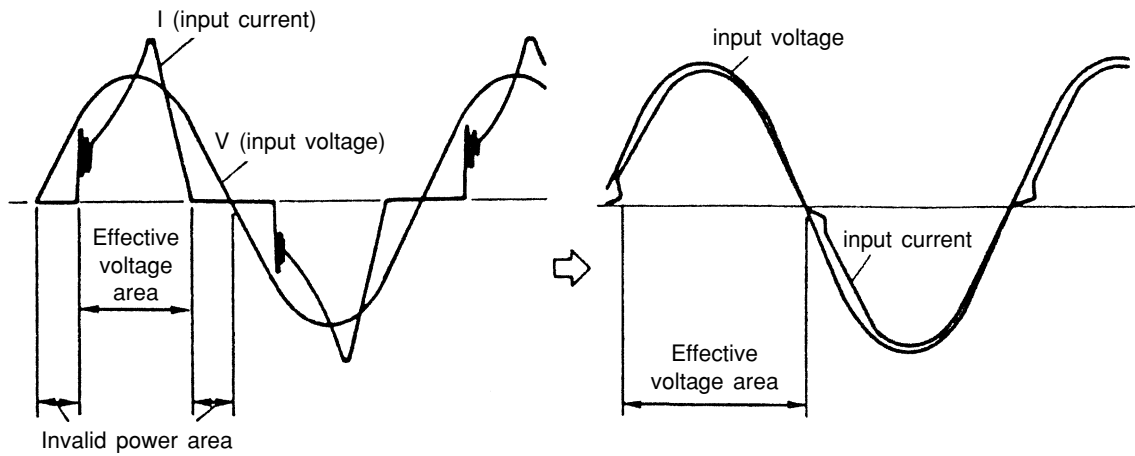

(Even if voltage is applied, current does not flow)

\* Assuming the same current capacity (20A), power can be used about 10% effective, comparing with current use (power factor of 90%), and maximum capacity is thereby improved.

## SERVICE CALL Q & A

Model RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7

### COOLING MODE

- Q1** The compressor has stopped suddenly during cooling operation.
- A1** Check if the indoor heat exchanger is frosted. Wait for 3-4 minutes until it is defrosted.
- If the air conditioner operates in cooling mode when it is cold, the evaporator may get frosted.

### DEHUMIDIFYING MODE

- Q2** Sound of running water is heard from indoor unit during dehumidifying.
- A2** Normal sound when refrigerant flows in pipe.
- Q3** Compressor occasionally does not operate during dehumidifying.
- A3** Compressor may not operate when room temperature is 10°C or less. It also stops when the humidity is preset humidity or less.

### HEATING MODE

- Q4** The circulation stops occasionally during Heating mode.
- A4** It occurs during defrosting. Wait for 5-10 minutes until the condenser is defrosted.
- Q5** When the fan speed is set at HIGH or MED, the flow is actually Weak.
- A5** At the beginning of heating, the fan speed remains LOW for 30 seconds. If HIGH is selected, it switches to LOW and again to MED after additional 30 seconds.
- Q6** Heating operation stops while the temperature is preset at "30".
- A6** If temperature is high in the outdoor, heating operation may stop to protect internal devices.

## AUTO FRESH DEFROSTING

**Q7)** After the ON/OFF button is pressed to stop heating, the outdoor unit is still working with the OPERATION lamp lighting.



**A7)** Auto Fresh Defrosting is carried out : the system checks the outdoor heat exchanger and defrosts it as necessary before stopping operation.

## AUTO OPERATION

**Q8)** Fan speed does not change when fan speed selector is changed during auto operation.



**A8)** At this point fan speed is automatic.

## NICE TEMPERATURE RESERVATION

**Q9)** When on-timer has been programmed, operation starts before the preset time has been reached.



**A9)** This is because "Nice temperature reservation" function is operating. This function starts operation earlier so the preset temperature is reached at the preset time. Operation may start maximum 60 minutes before the preset time.

**Q10)** Does "Nice temperature reservation" function operate during dehumidifying?



**A10)** It does not work. It works only during cooling and heating.

**Q11)** Even if the same time is preset, the operation start time varies.



**A11)** This is because "Nice temperature reservation" function is operating. The start time varies according to the load of room. Since load varies greatly during heating, the operation start time is corrected, so it will vary each day.

## INFRARED REMOTE CONTROL

**Q12)** Timer cannot be set.



**A12)** Has the clock been set? Timer cannot be set unless the clock has been set.

**Q13)** The current time display disappears soon.



**A13)** The current time disappears in approx. 10 seconds. The time set display has priority.

When the current time is set the display flashes for approx 3 minutes.

**Q14)** The timer has been programmed, but the preset time disappears.



**A14)** Is the current time past the preset time? When the preset time reaches the current time, it disappears.

## OTHERS

**Q15** The indoor fan varies among high air flow, low air flow and breeze in the auto fan speed mode. (Heating operation)



**A15** This is because the cool wind prevention function is operating, and does not indicate a fault.

The heat exchanger temperature is sensed in the auto speed mode. When the temperature is low, the fan speed varies among high air flow, low air flow and breeze.

**Q16** Loud noise from the outdoor unit is heard when operation is started.



**A16** When operation is started, the compressor rotation speed goes to maximum to increase the heating or cooling capability, so noise becomes slightly louder. This does not indicate a fault.

**Q17** Noise from the outdoor unit occasionally changes.



**A17** The compressor rotation speed changes according to the difference between the thermostat set temperature and room temperature. This does not indicate a fault.

**Q18** There is a difference between the set temperature and room temperature.



**A18** There may be a difference between the set temperature and room temperature because of construction of room, air current, etc. Set the temperature at a comfortable for the space.

**Q19** Air does not flow immediately after operation is started.



**A19** Preliminary operation is performed for one minute when the power switch on and heating or dehumidifying is set. The operation lamp blinks during this time for heating. This does not indicate a fault.


# TROUBLE SHOOTING

Model RAC-25NH5, RAC-35NH5, RAC-50NH5

## PRECAUTIONS FOR CHECKING




- Remember that the 0V line is biased to 155-170V in reference to the ground level.
- Also note that it takes about 10 minutes until the voltage fall after the power switch is turned off.

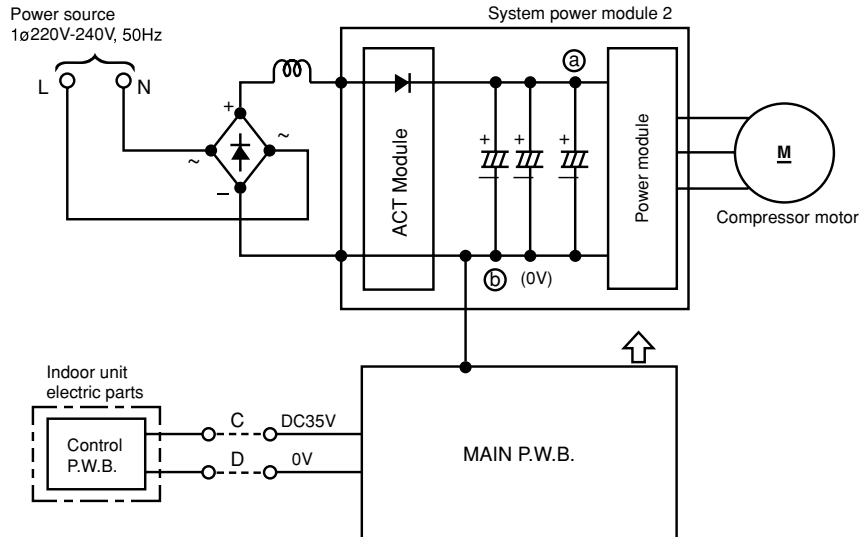

- Across (a) – (b) (0V line)..... approx 260-360V
- Across (a) – ground..... approx 155-170V
- Across (b) (0V line)– ground..... approx 155-170V



When using an oscilloscope, never ground it. Don't forget that high voltages as noted above may apply to the oscilloscope.

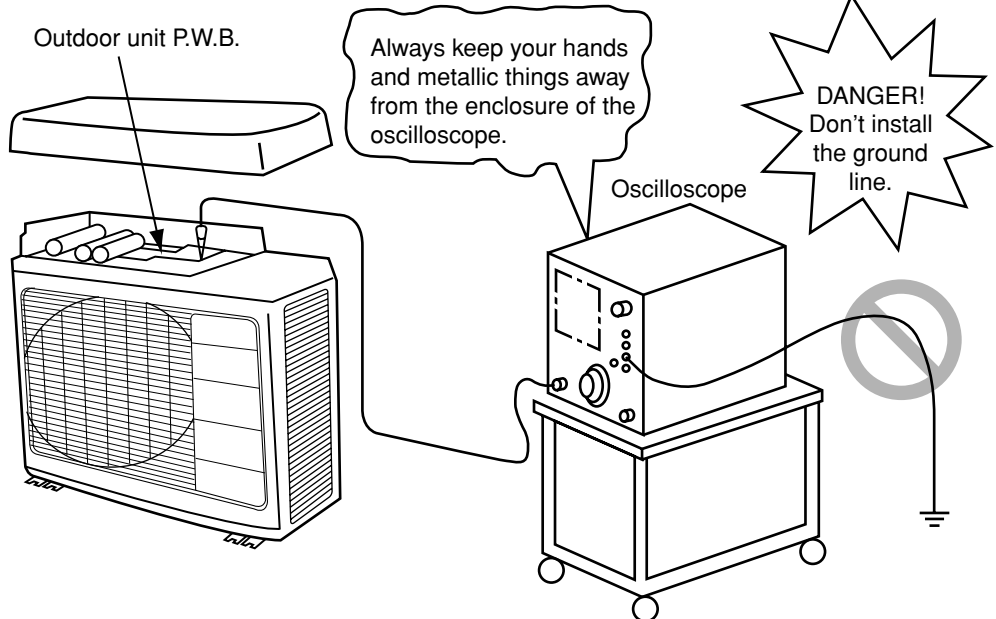




# DISCHARGE PROCEDURE AND POWER SHUT OFF METHOD FOR POWER CIRCUIT



## Caution

- Voltage of about 300-330V is charged between both ends of smoothing capacitors
- During continuity check for each part of circuit in indoor unit electrical parts, disconnect red/gray lead wire connected from diode stack to system power module (SPM2) to prevent secondary trouble. (Be sure to discharge smoothing capacitor)

1. Turn OFF the Power supply to the outdoor unit.
2. After power is turned off, wait for 10 minutes or more. Then, remove electrical parts cover and apply soldering iron of 30 to 75W for 15 seconds or more to P2 and N1 terminals on system power module, in order to discharge voltage in smoothing capacitor.
3. Remove receptacle of red/gray lead wire connected to system power module from diode stack before performing operation check of each circuit.

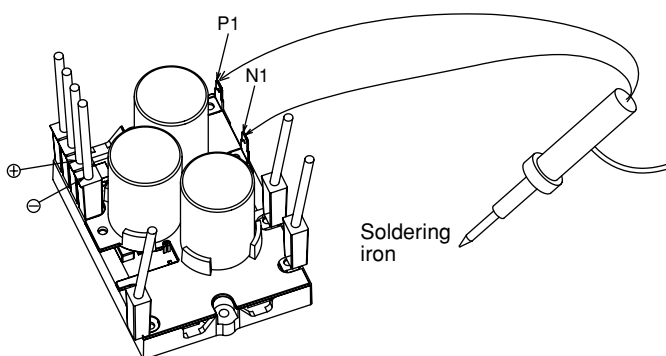


System power module


Do not use a soldering iron with transformer: If one is used, thermal fuse inside transformer will be blown

As shown above, apply soldering iron to metal parts (receptacle) inside the sleeve corresponding to P1 and N1 terminals of system power module: Do this with smoothing capacitors kept connected. By removing red/gray lead wire from diode stack, power supply can be shut off. (corresponding to ⊕ and ⊖ terminals of system power module)

## RAC-25NH5, RAC-35NH5

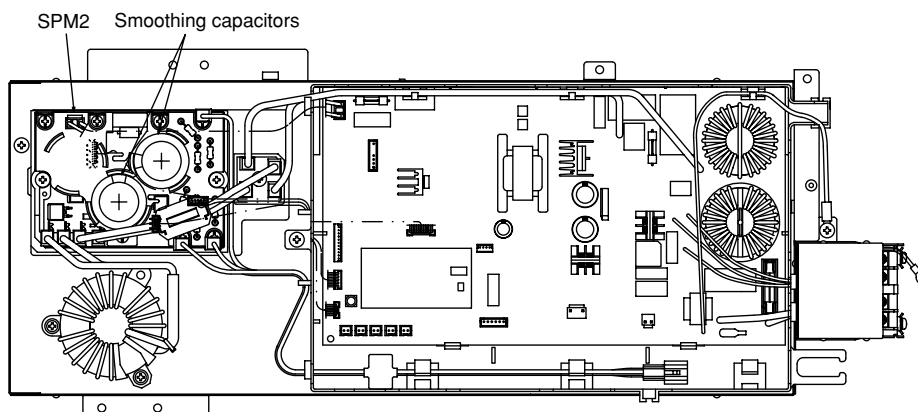

## RAC-50NH5

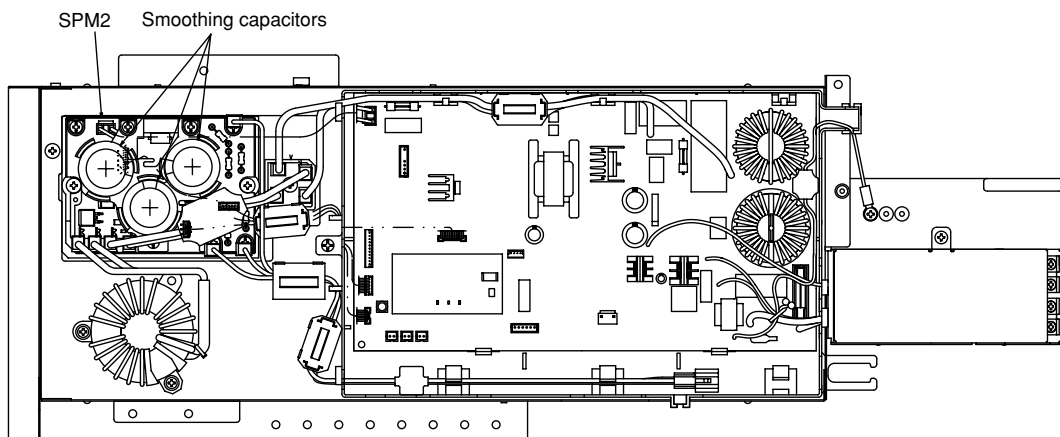

## TROUBLESHOOTING WHEN TIMER LAMP BLINKS

Model RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.

## SELF-DIAGNOSIS LIGHTING MODE

Model: RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7

<Remark>

If using wired remote controller, electrical cover have to be opened so that timer lamp at indoor p.w.b can be seen as Fig. 1.

If using wireless remote controller (optional part), no need to open electrical cover. Refer the timer lamp at panel-as (Fig. 2).

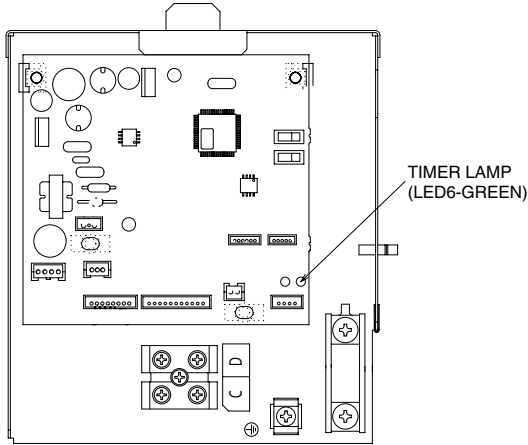


Fig. 1

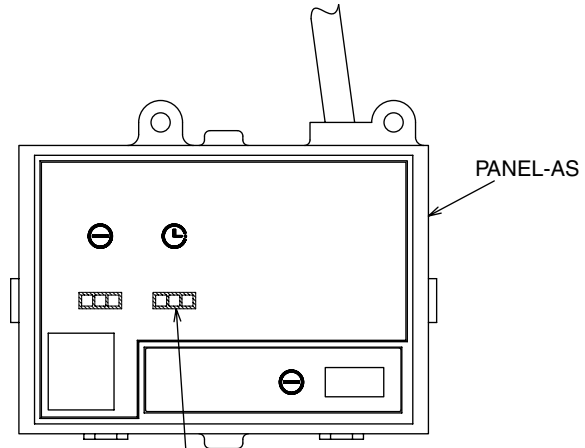


Fig. 2

No.	Timer indicator flashing mode	Reason for display	Section of estimated fault
1	Once	<b>Four-way valve faulty</b> The room heat exchange temperature is low during heating, or it is high during cooling.	(1) Four-way valve faulty. (2) Disconnection in heat exchange thermistor (only during heating)
2	Twice	<b>Outdoor unit forced operation</b> The outdoor unit is in forced operation or undergoing balancing after forced operation.	Service SW in outdoor electrical parts turned ON.
3	3 times	<b>Indoor/outdoor interface faulty</b> The interface signal from the outdoor unit has been interrupted.	(1) Indoor interface circuit (2) Outdoor interface circuit
4	-- 4 times	Outdoor electrical assembly defective.	Please check at the outdoor electrical led lamp blinking (LD301) and refer to self diagnosis lighting mode for outdoor unit.
5	-- 6 times	<b>Abnormal water level detection</b> All stop when the float switch has been activated.	(1) Drain stopped up (2) Drain pump (3) Float switch
6	-- 7 times	<b>Drain pump forced operation.</b> When the knob of drain pump test switch at Indoor P.W.B main slide to 'test' position.	(1) Indoor P.W.B. Main.
7	-- 9 times	<b>Room thermistor or heat exchanger thermistor is faulty</b> When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor (2) Heat exchanger thermistor
8	-- 10 times	<b>DC fan motor overcurrent detection</b> Overcurrent in indoor DC fan motor has been detected.	(1) Indoor fan locked (2) Indoor fan motor (3) Indoor P.W.B. Main
※1 9	-- 13 times	<b>IC401 data reading fault</b> There was error in the data read from IC401	IC401 faulty


( -- Lights for 0.35 sec. at interval of 0.35 sec..)

<Cautions>

- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check to see if the F-cable is connected or disconnected.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ※1).

# SELF-DIAGNOSIS LIGHTING MODE


MODEL: RAC-25NH5, RAC-35NH5, RAC-50NH5



**DANGER (DC360V)**

- SWITCH OFF MAIN POWER SUPPLY TO THE OUTDOOR UNIT AT LEAST 10 MINUTES BEFORE START THE SERVICING WORK.
- DO NOT TOUCH THE SCREWS OF THE SYSTEM POWER MODULE WHEN THE UNIT IS TURNED ON. HIGH VOLTAGE STILL REMAIN EVEN AFTER THE UNIT IS TURNED OFF.
- MAKE SURE THE DC VOLTAGE LEVEL AT MEASURING POSITION (P1) AND (N1) IS LESS THAN 10V.
- DO NOT TOUCH ANY OTHER PARTS EXCEPT THE SERVICE SWITCH WHEN SERVICE OPERATION IS CONDUCTED.


SELF-DIAGNOSIS LIGHTING MODE ■ LIT ■ BLINKING □ OFF

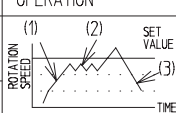LD303	SELF-DIAGNOSIS NAME	DETAILS	MAIN CHECK POINT
□ □	[1] DURING OPERATION		LD303 LIGHTS. ■
□ □	NORMAL OPERATION	COMPRESSOR OPERATION	NOT MALFUNCTION
■ □	OVERLOAD (1)	 <p>(1) (2) SET VALUE (3)</p> <p>ROTATION SPEED</p> <p>TIME</p>	THIS SHOWS AN OVERLOAD, NOT MALFUNCTION.
□ ■	OVERLOAD (2)	UNDER OVERLOAD CONDITION, THE ROTATION SPEED IS CONTROLLED AUTOMATICALLY IN ORDER TO PROTECT THE COMPRESSOR.	
■ ■	OVERLOAD (3)		

Loud	Sound	[2] DURING STOP	LD303 GOES OFF. □
□ □	□ □	NORMAL STOP	INDOOR THERMOSTAT OFF. MAIN OPERATION OFF. NOT MALFUNCTION.
□ □	□ □	RESET STOP	WHEN STOPPED WITH POWER RESET. NORMAL WHEN POWER HAS BEEN TURNED ON. P.W.B.s (POWER CIRCUIT.HIC, ETC.)
□ □	□ □	1 TIME PEAK CURRENT CUT	OVER CURRENT IS DETECTED. SYSTEM POWER MODULE COMPRESSOR P.W.B.s
□ □	□ □	2 TIMES ABNORMAL LOW SPEED ROTATION	POSITION DETECTION SIGNAL IS NOT INPUT DURING OPERATION. SYSTEM POWER MODULE COMPRESSOR P.W.B.s
□ □	□ □	3 TIMES SWITCHING FAILURE	FAIL TO SWITCH FROM INITIAL LOW FREQUENCY SYNC. TO POSITION DETECTION SYNC. SYSTEM POWER MODULE COMPRESSOR P.W.B.s
□ □	□ □	4 TIMES OVERLOAD LOWER LIMIT CUT	OVERLOAD CONDITION STILL PERSISTING EVEN WHEN ROTATION SPEED IS BELOW THE LOWER RPM LIMIT. OUTDOOR UNIT IS EXPOSED TO DIRECT SUNLIGHT OR ITS AIRFLOW BLOCKED. FAN MOTOR FAN MOTOR CIRCUIT THE VOLTAGE IS EXTREMELY LOW. COMPRESSOR
□ □	□ □	5 TIMES OH THERMISTOR TEMP. RISE	OH THERMISTOR IS OPERATING. LEAK OF REFRIGERANT COMPRESSOR OH THERMISTOR CIRCUIT FAN MOTOR FAN MOTOR CIRCUIT
□ □	□ □	6 TIMES ABNORMAL THERMISTOR	THERMISTOR IS OPENED OR SHORTED. THERMISTOR CONNECTION OF THERMISTOR IS FAULTY THERMISTOR CIRCUIT
□ □	□ □	7 TIMES ACCELERATION DEFECTIVE	NO ACCELERATION ABOVE THE LOWER LIMIT OF THE ROTATION SPEED. LEAK OF REFRIGERANT COMPRESSOR
□ □	□ □	8 TIMES COMMUNICATION ERROR	COMMUNICATION BETWEEN INDOOR UNIT AND OUTDOOR UNIT ARE INTERRUPTED. C, D CABLE IS REVERSED CABLE IS DISCONNECTED INTER-FACE CIRCUIT OF INDOOR AND OR OUTDOOR UNIT
□ □	□ □	9 TIMES POWER SUPPLY VOLTAGE ERROR	POWER SUPPLY VOLTAGE IS INCORRECT. POWER SUPPLY VOLTAGE AT SYSTEM POWER MODULE IS NOT PROPERLY INSERTED
□ □	□ □	10 TIMES FAN LOCK ERROR	OUTDOOR FAN RPM IS NOT ROTATE AS INTENDED RPM. FAN MOTOR FAN MOTOR CIRCUIT
□ □	□ □	12 TIMES EEPROM READING ERROR	MICROCOMPUTER CANNOT READ THE DATA IN EEPROM. HIC
□ □	□ □	13 TIMES ACTIVE CONVERTER DEFECTIVE	OVER VOLTAGE IS DETECTED BY SYSTEM POWER MODULE. SYSTEM POWER MODULE
* EXAMPLE OF BLINKING (5 TIMES) ■■■■■ 2SEC (■■■■■ * LIGHTS FOR 0.25 SEC. AT INTERVAL OF 0.25 SEC.)			

## WIRING DIAGRAM


BLK : BLACK GRY : GRAY  
 BLU : BLUE RED : RED  
 BRN : BROWN WHT : WHITE  
 GRN : GREEN YEL : YELLOW

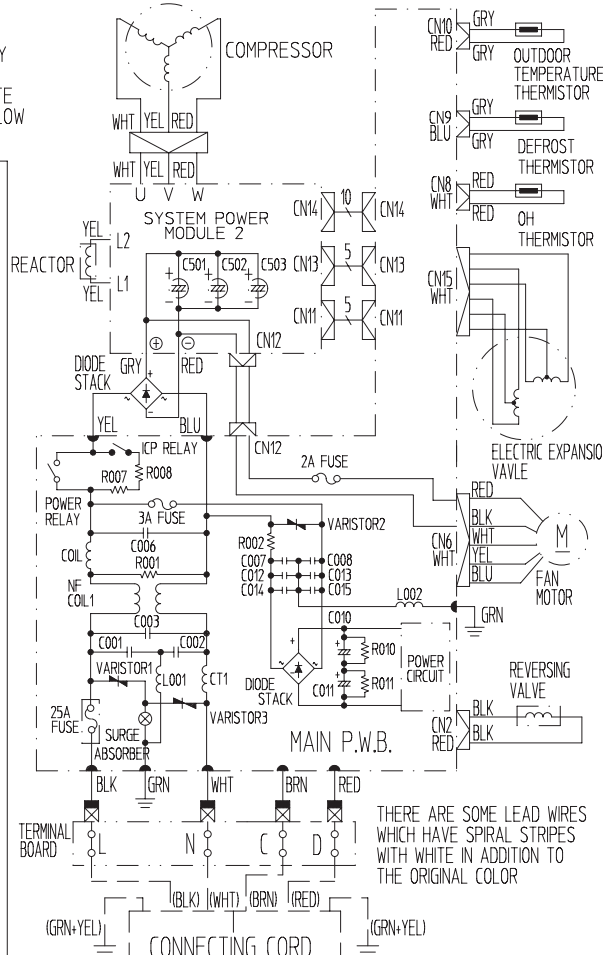

**SERVICE OPERATION**

COLLECT REFRIGERANT FROM INDOOR UNIT AND STORE AT OUTDOOR UNIT.

1. SWITCH OFF THE MAIN POWER SUPPLY AND THEN SWITCH IT ON AGAIN. WAIT FOR 1 MINUTE.
2. PRESS AND HOLD THE SERVICE SWITCH FOR 1 SECOND TO START OUTDOOR UNIT IN COOLING OPERATION. IN ORDER TO PREVENT PARTS FROM DAMAGE, DO NOT OPERATE THE OUTDOOR UNIT FOR MORE THAN 5 MINUTES.
3. PRESS AND HOLD THE SERVICE SWITCH FOR 1 SECOND TO STOP THE SERVICE OPERATION.
4. REPEAT STEP 1 TO 3 IF SERVICE OPERATION NEED TO BE REPEATED.

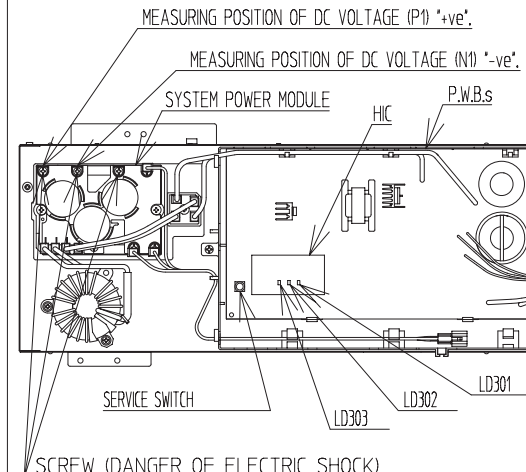

MEASURING POSITION OF DC VOLTAGE (P1) '+ve'.

MEASURING POSITION OF DC VOLTAGE (N1) '-ve'.

SERVICE SWITCH

LD303

LD302

LD301


SCREW (DANGER OF ELECTRIC SHOCK)

THERE ARE SOME LEAD WIRES WHICH HAVE SPIRAL STRIPES WITH WHITE IN ADDITION TO THE ORIGINAL COLOR

CONNECTING CORD


# CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING CYCLE

Model **RAC-25NH5**  
**RAC-35NH5**  
**RAC-50NH5**

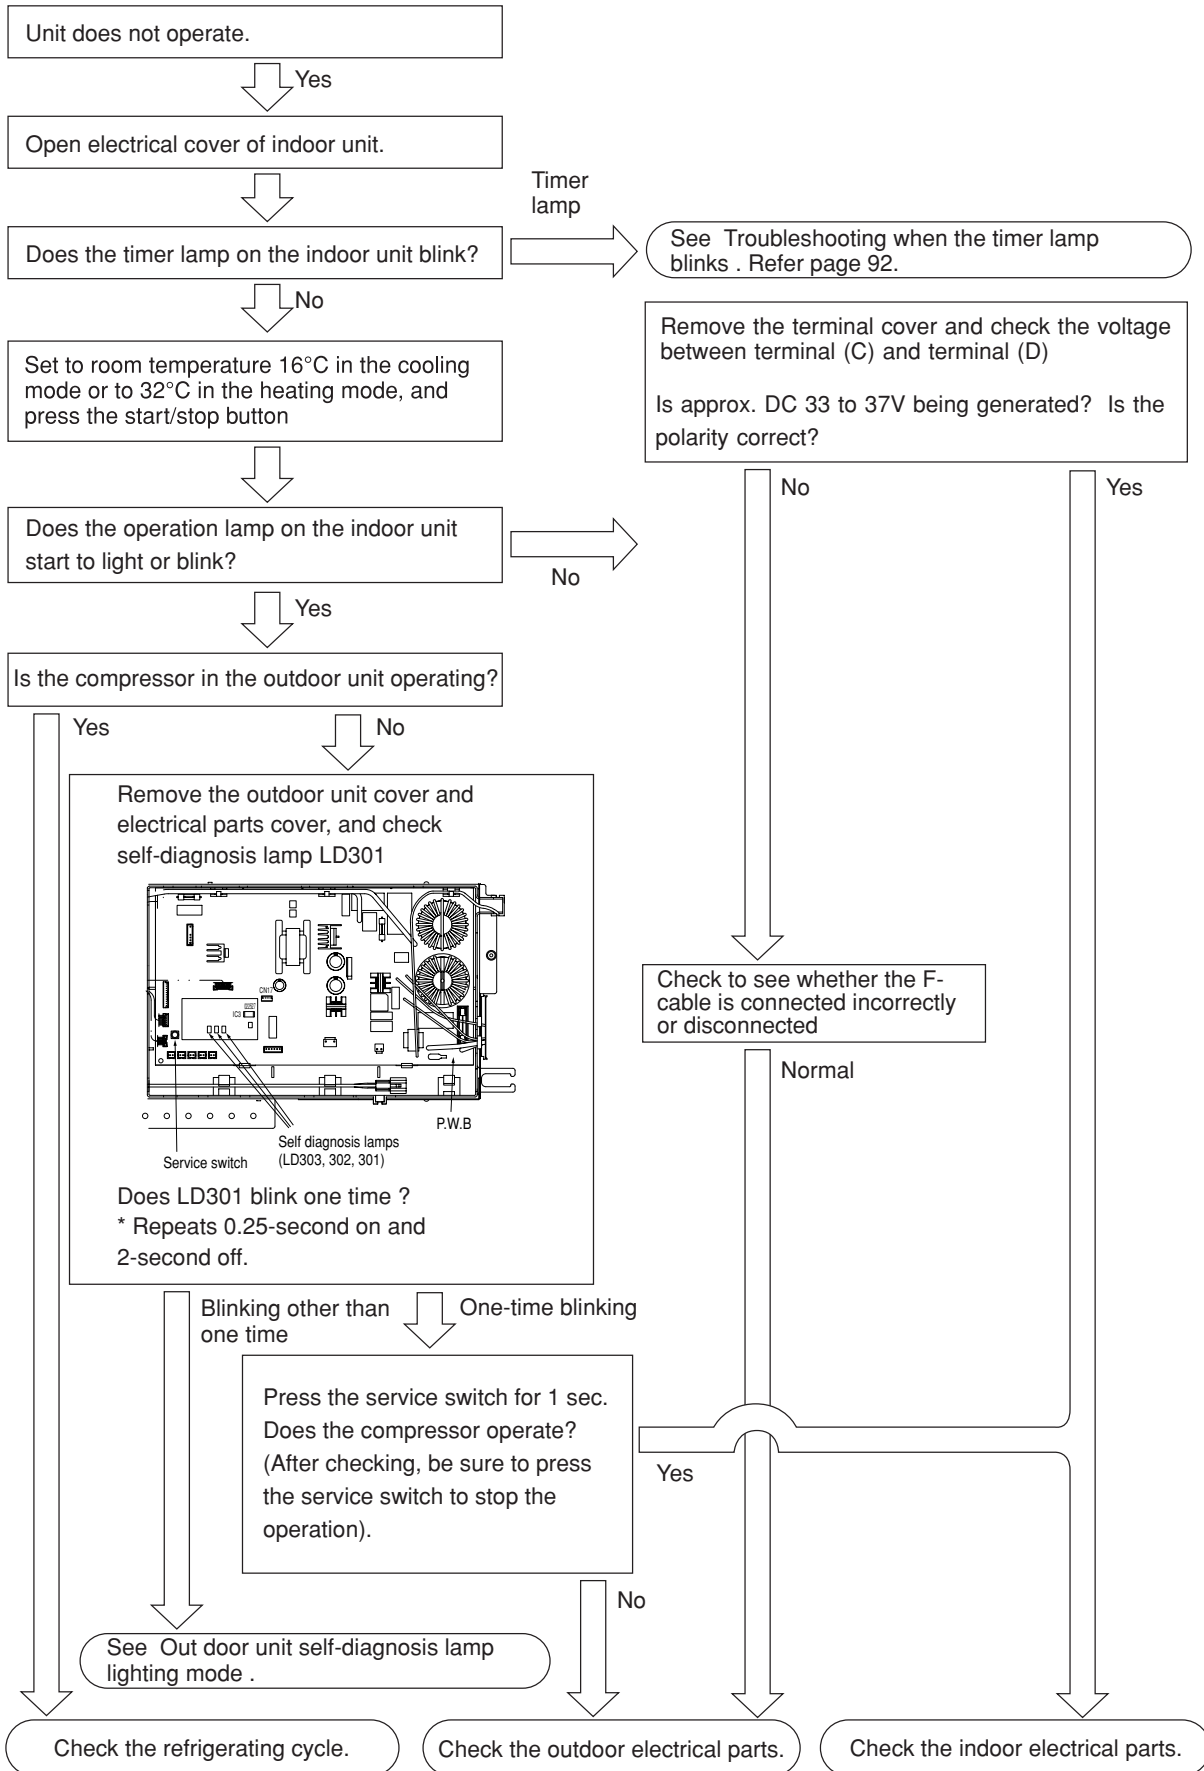


# CHECKING INDOOR UNIT ELECTRICAL PARTS


## 1. Power does not come on (no operation)

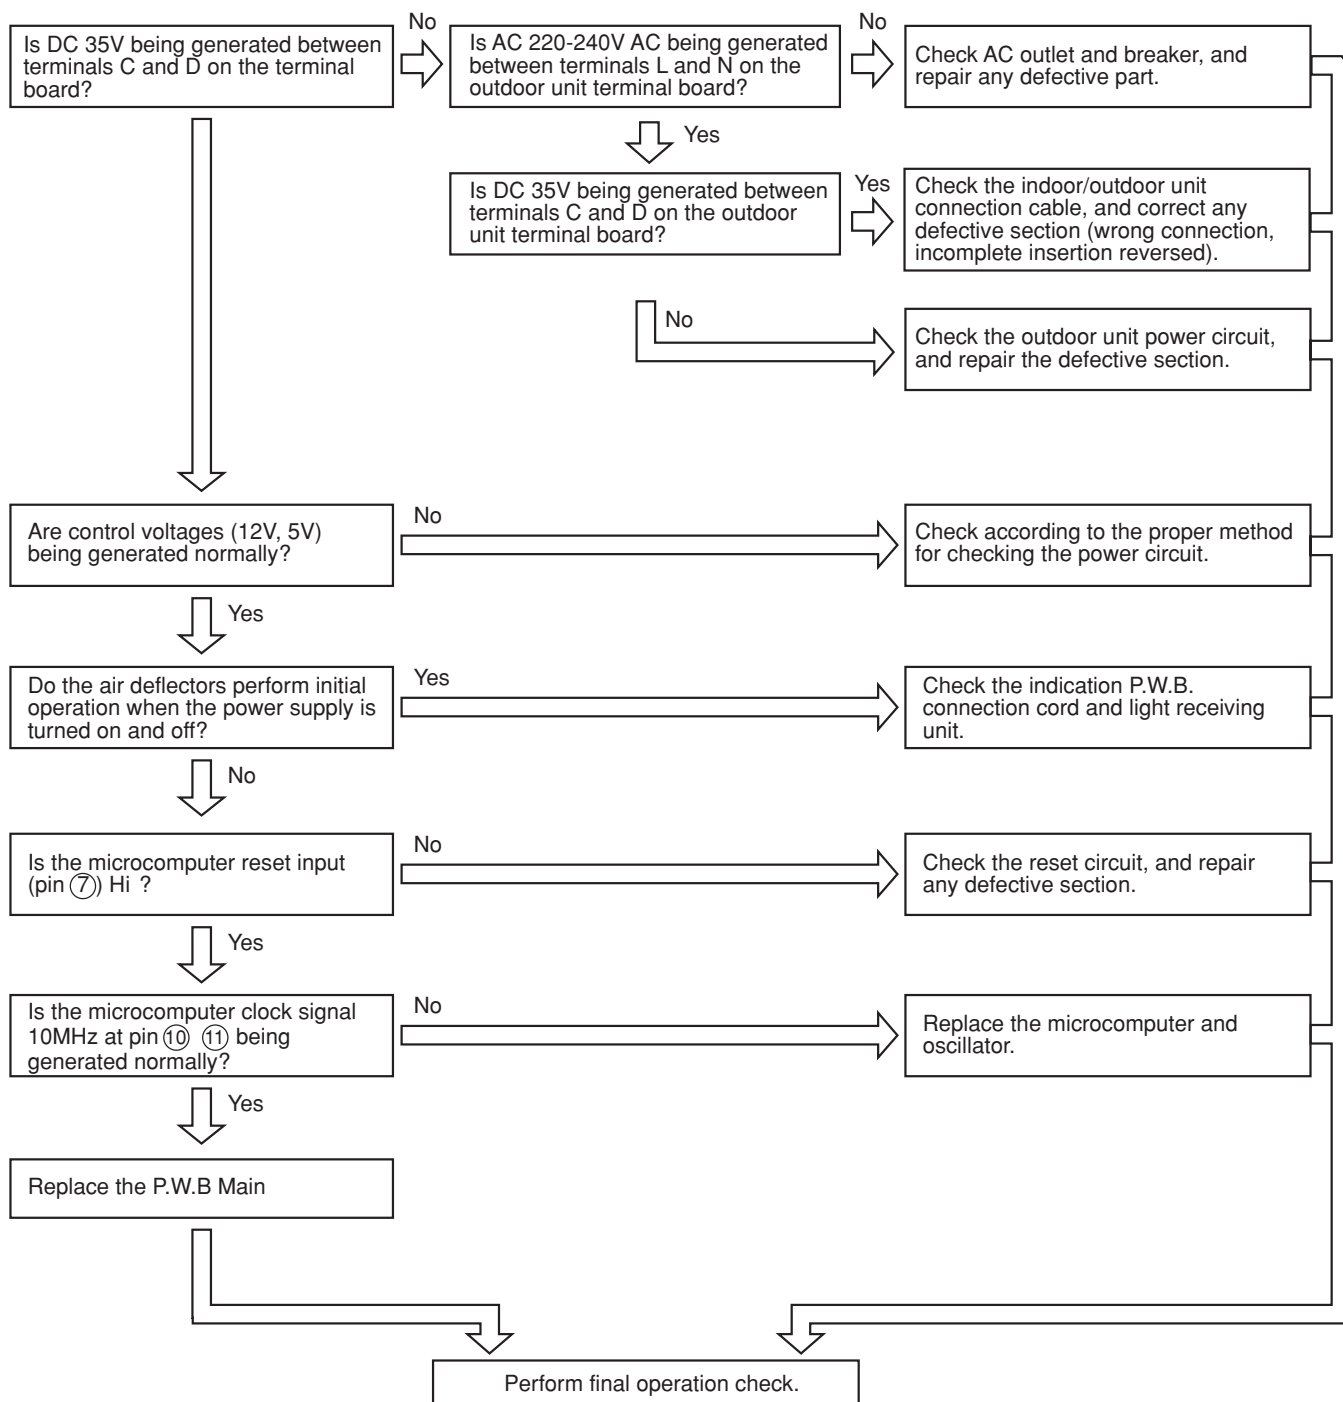


## 2. Outdoor unit does not operate (but receives remote infrared signal)

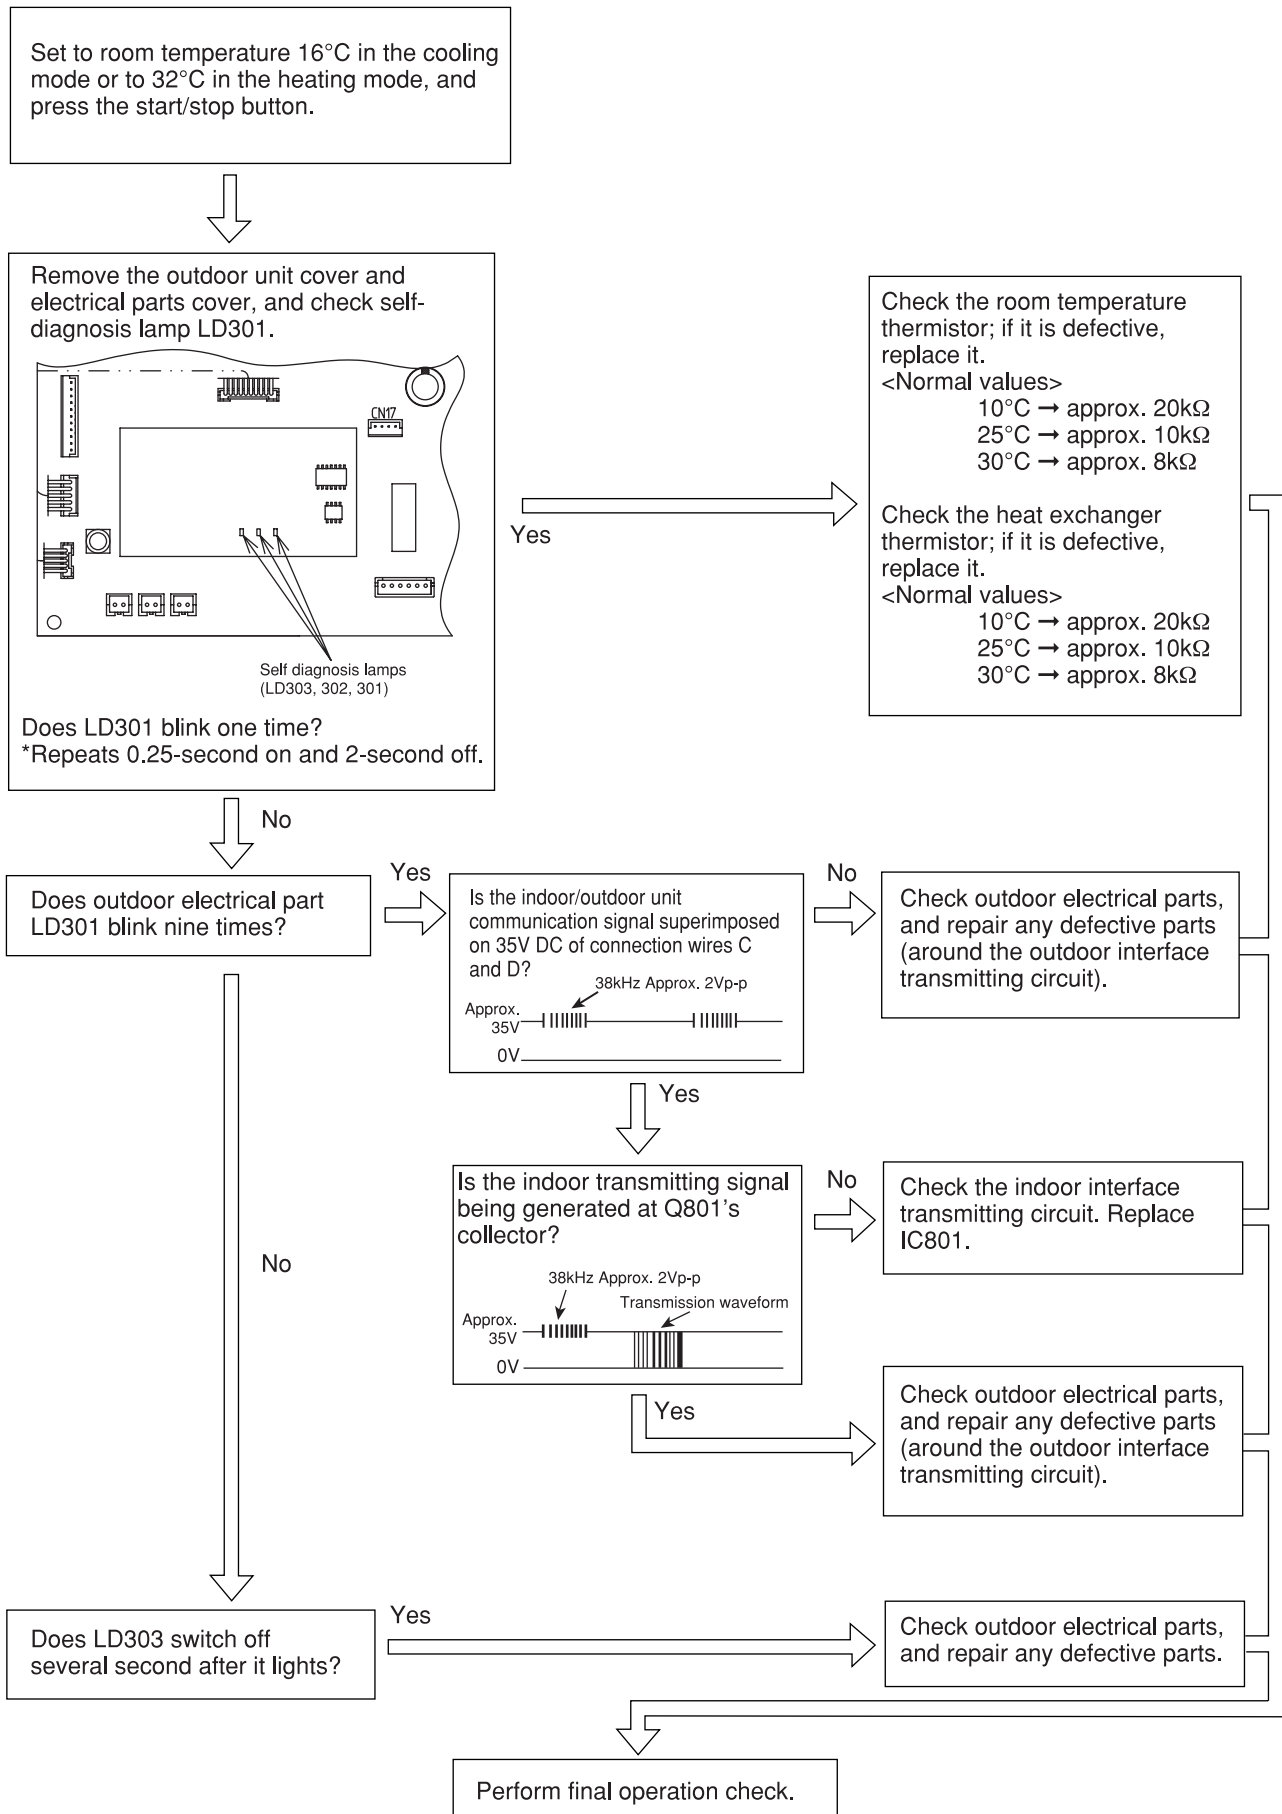


### 3. Only indoor fan does not operate (other is normal)

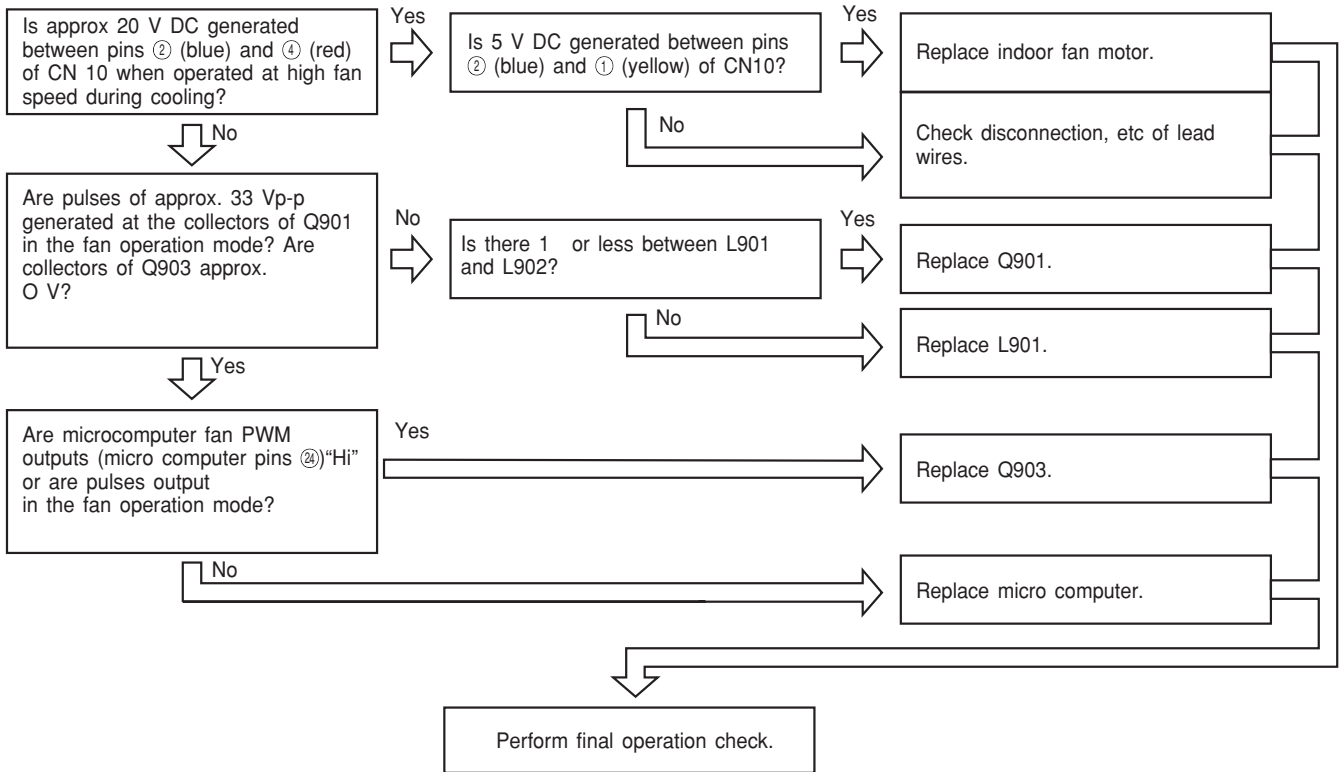

### 4. Indoor fan speed does not change (other is normal)

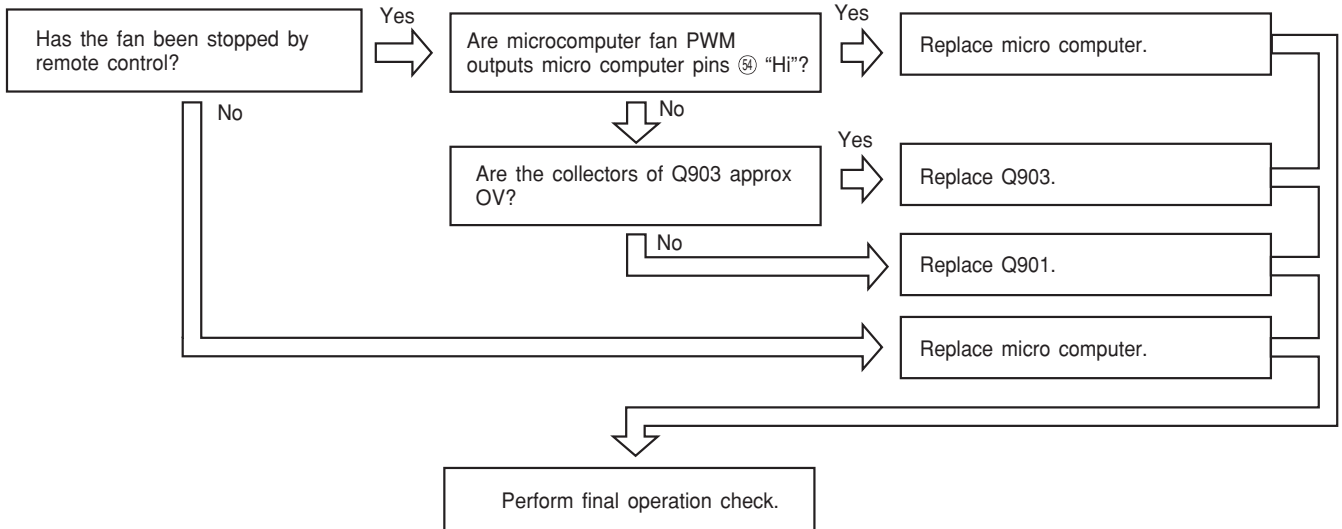


**5. All systems stop from several seconds to several minutes after operation is started (all indicators are also off)**

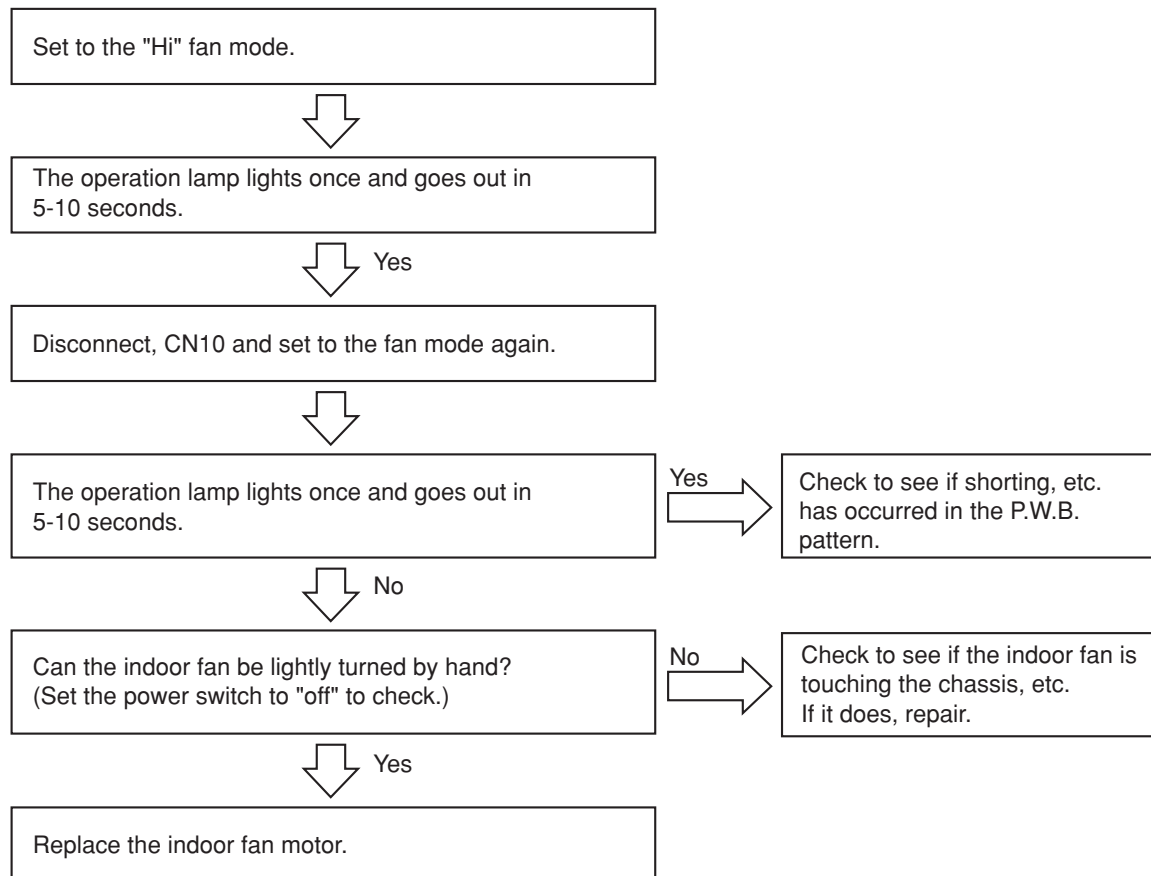






# CHECKING THE OUTDOOR UNIT ELECTRICAL PARTS


MODEL RAC-25NH5, RAC-35NH5, RAC-50NH5

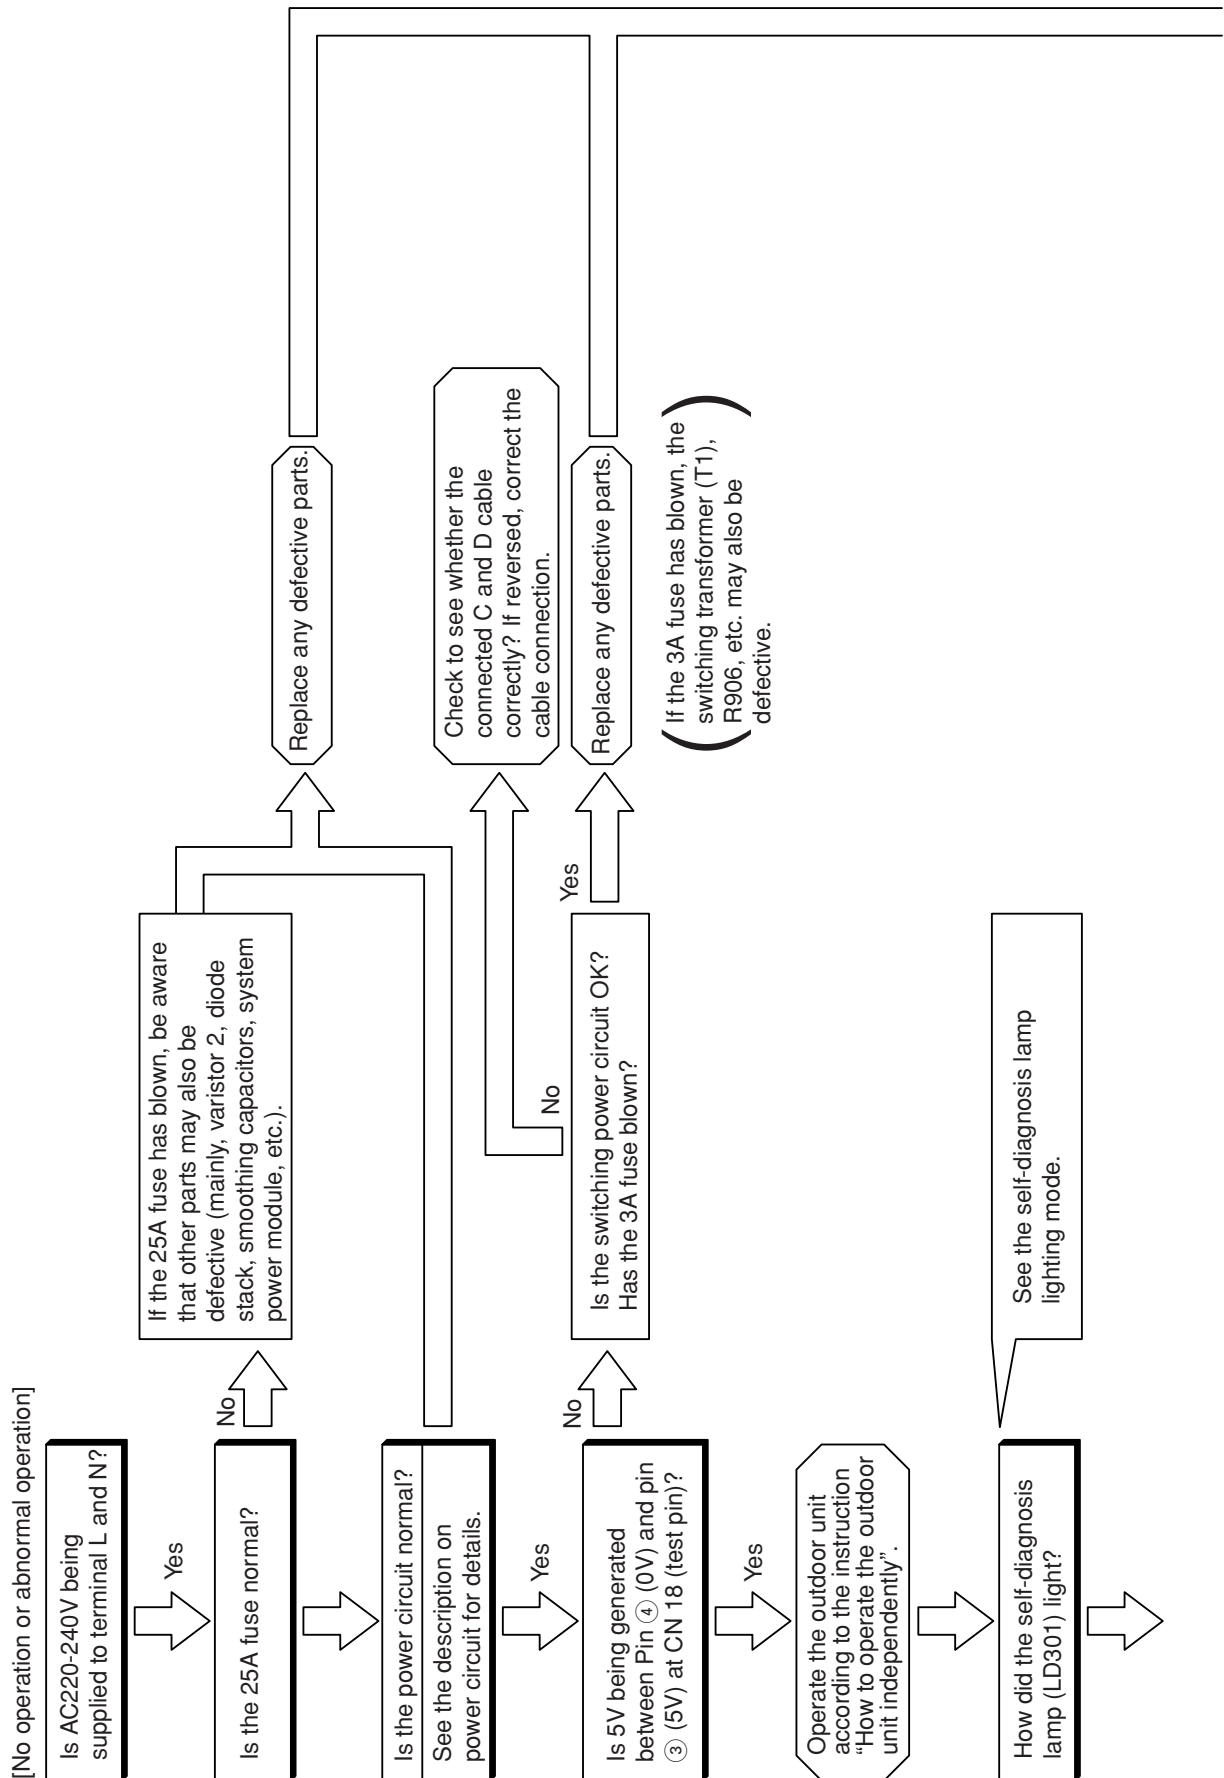

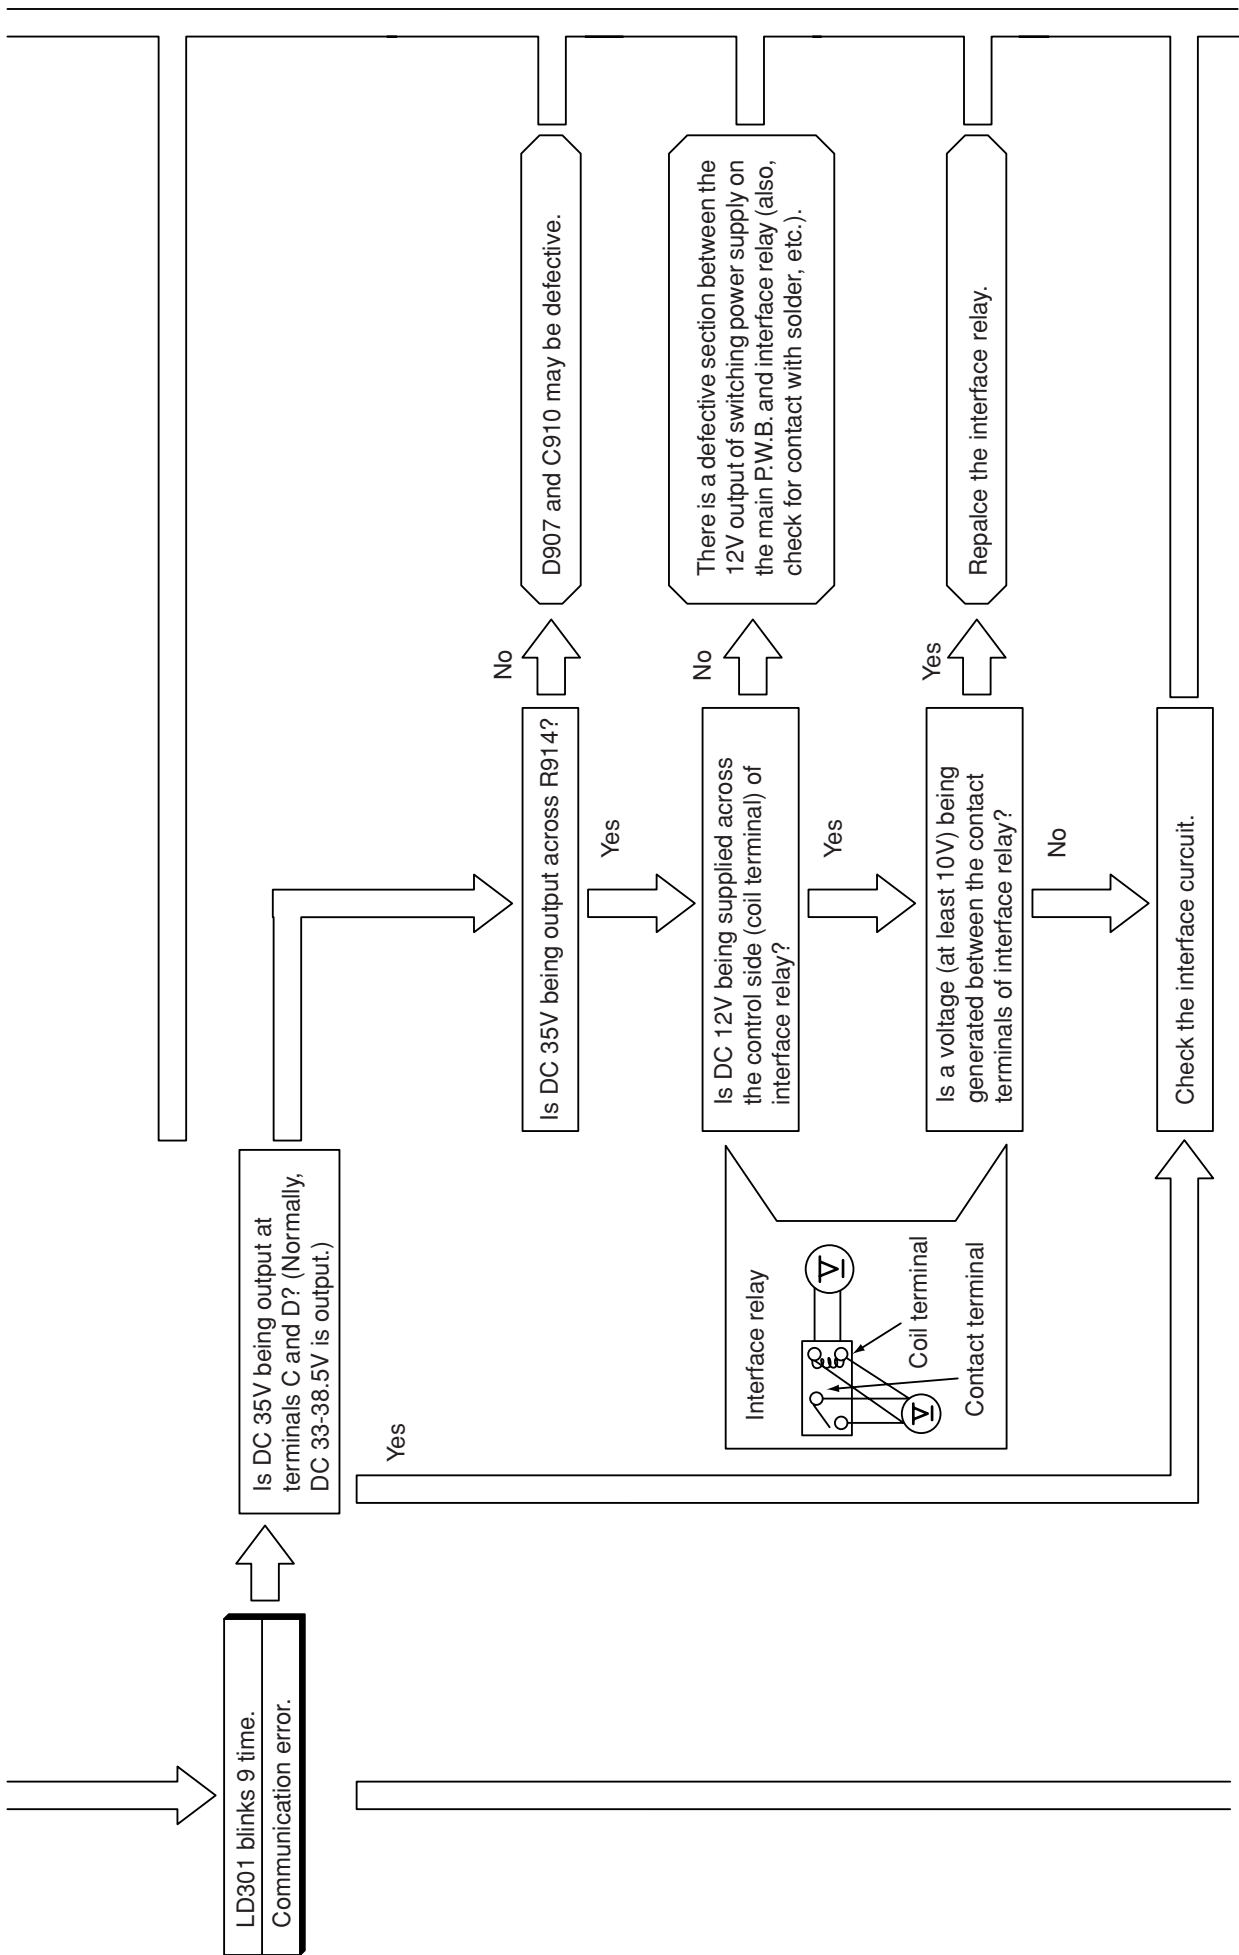

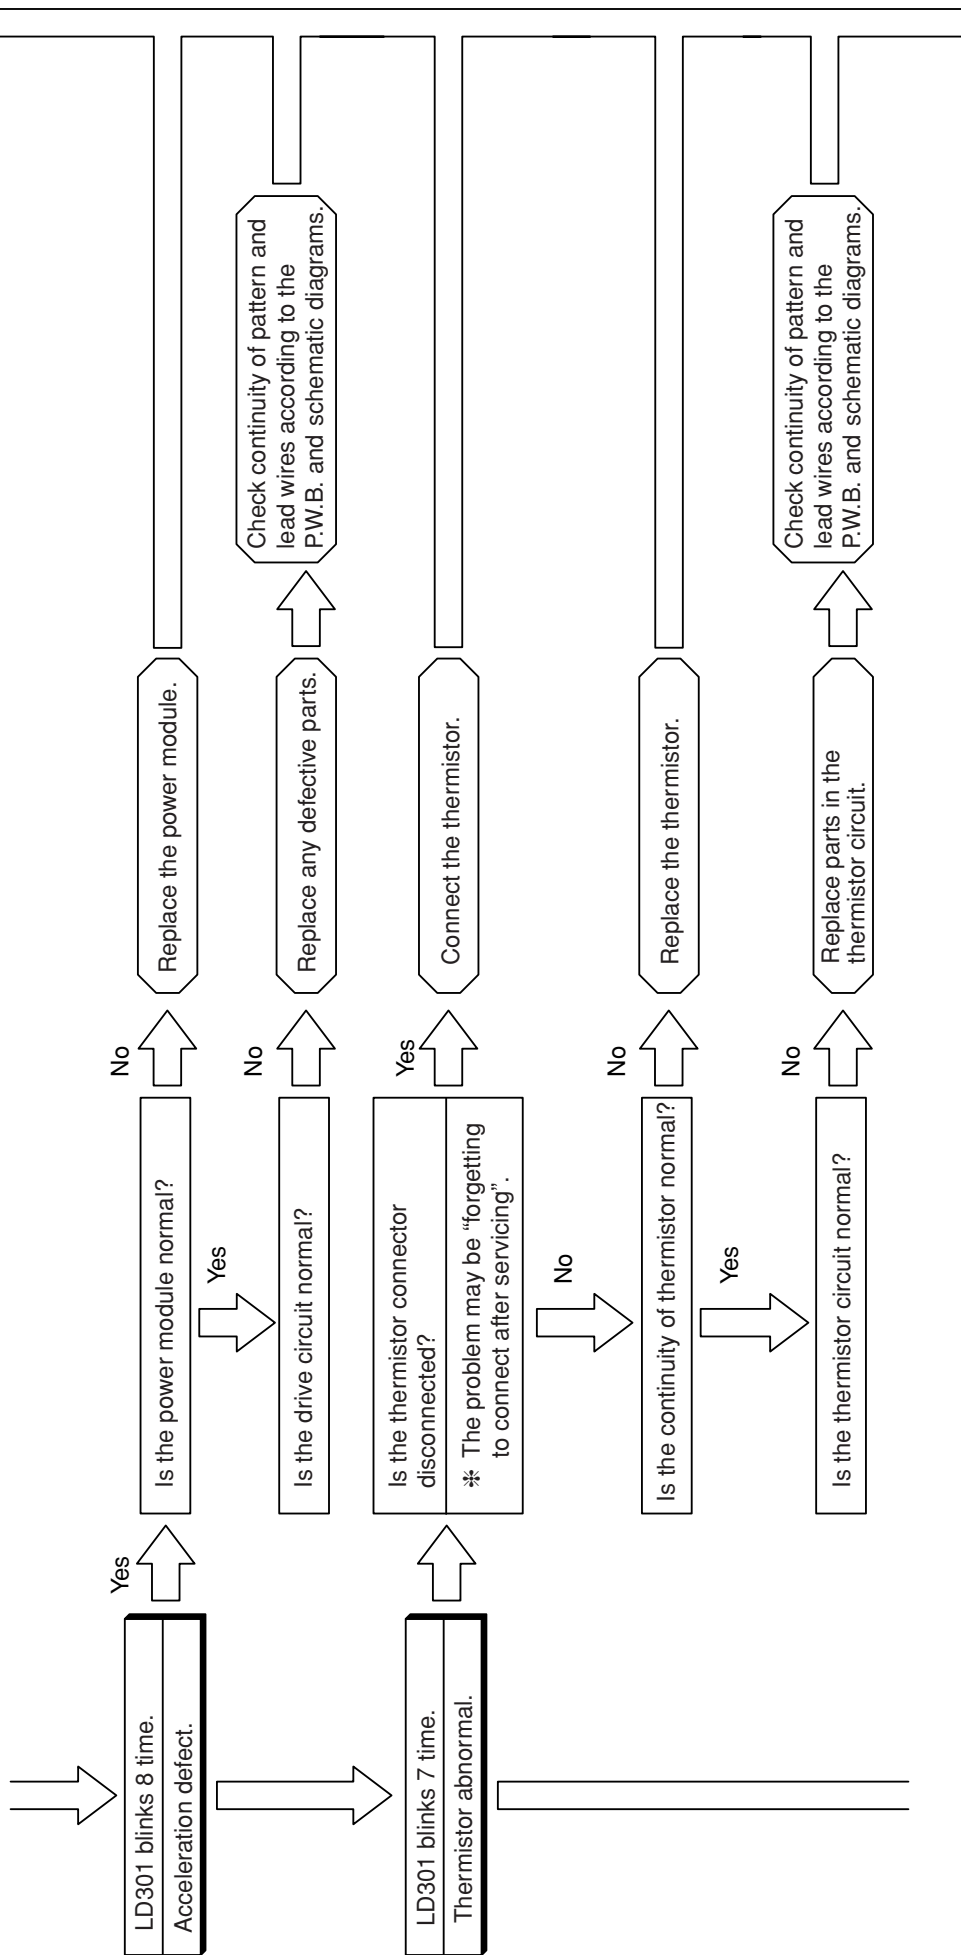


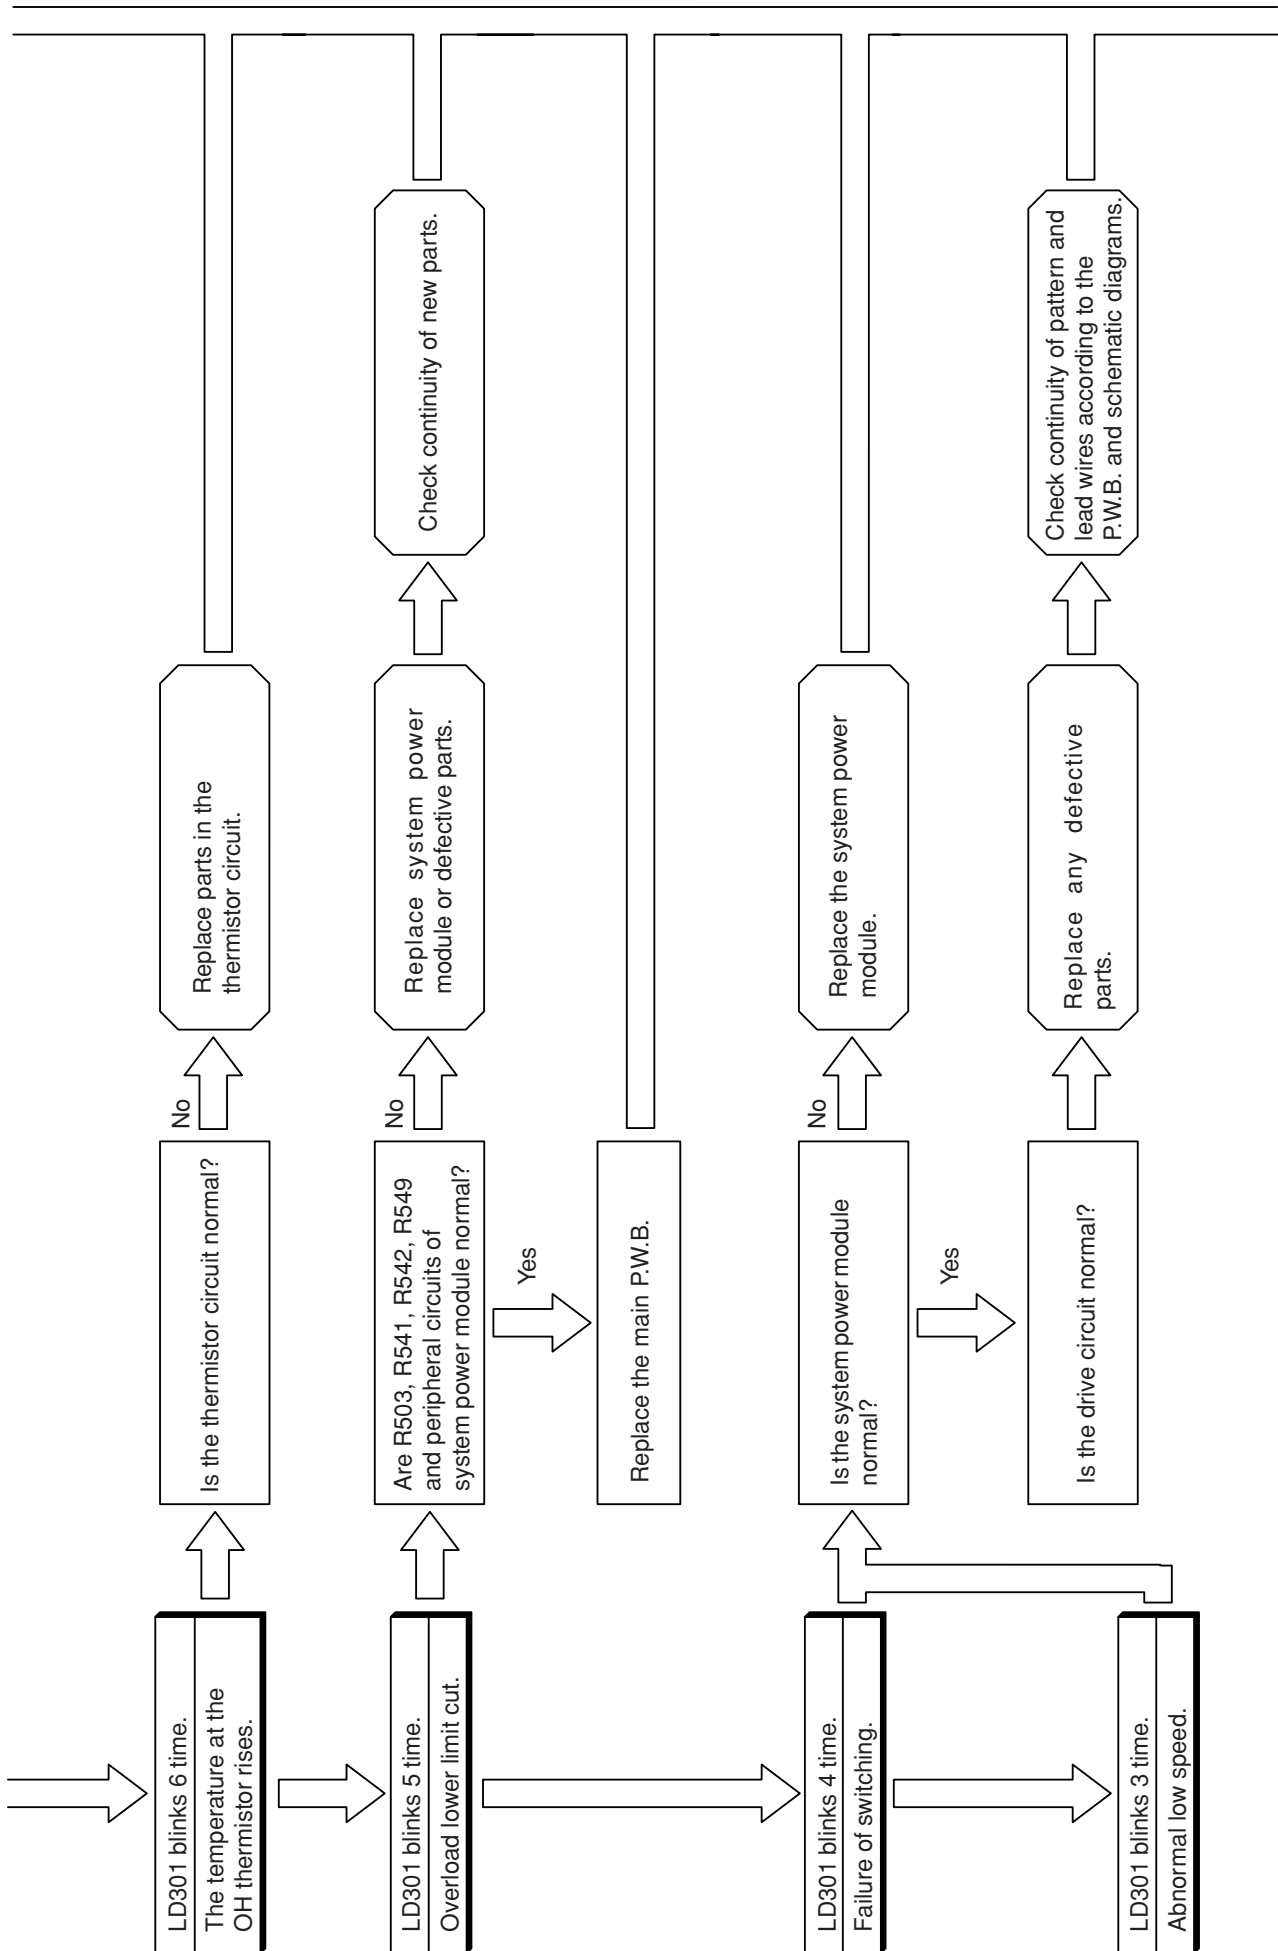

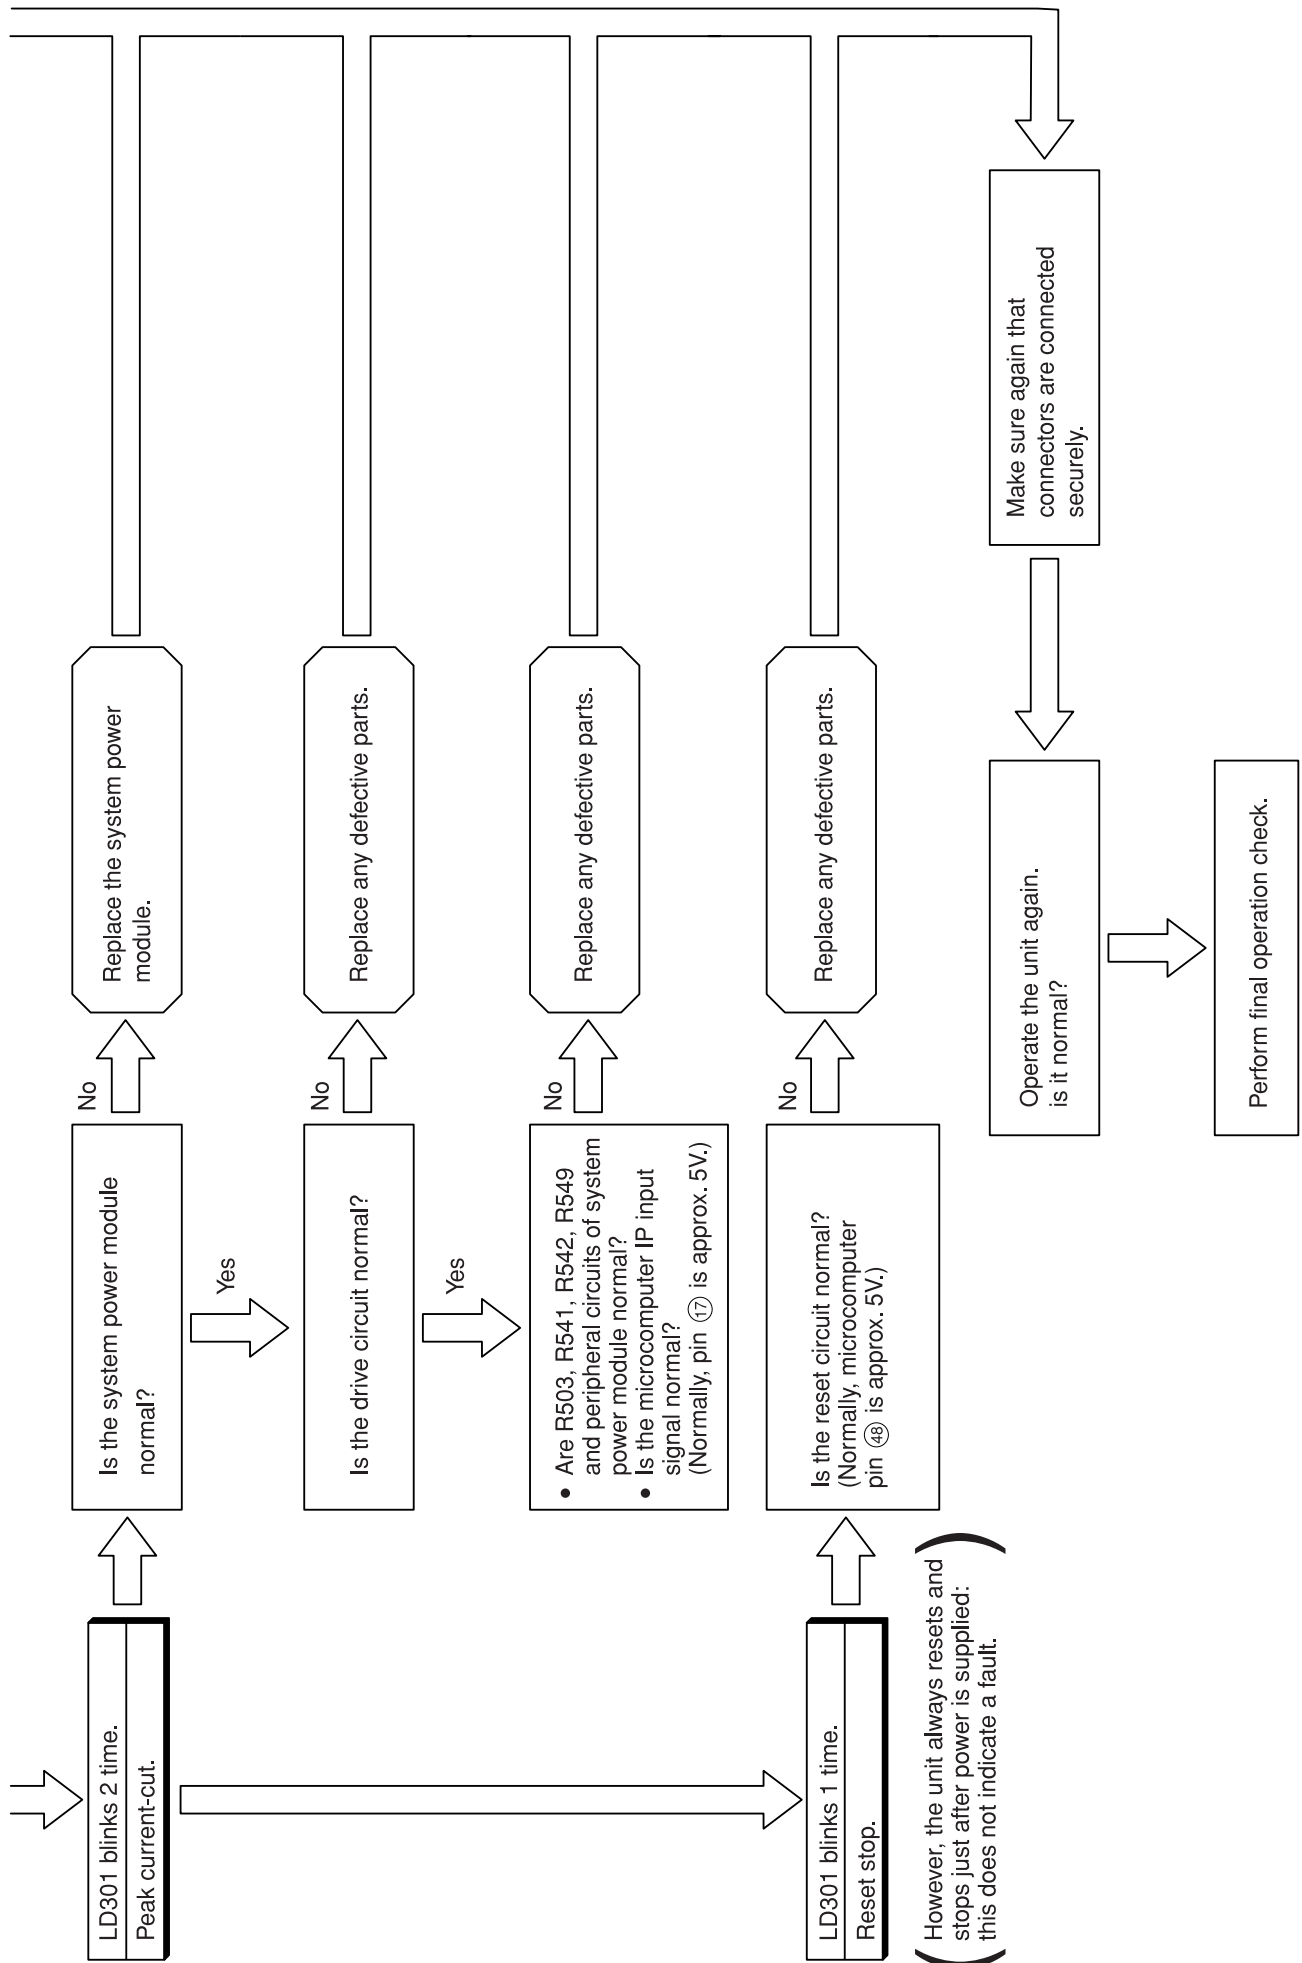

# POWER CIRCUIT

## Phenomenon 1 <Rotation speed does not increase>

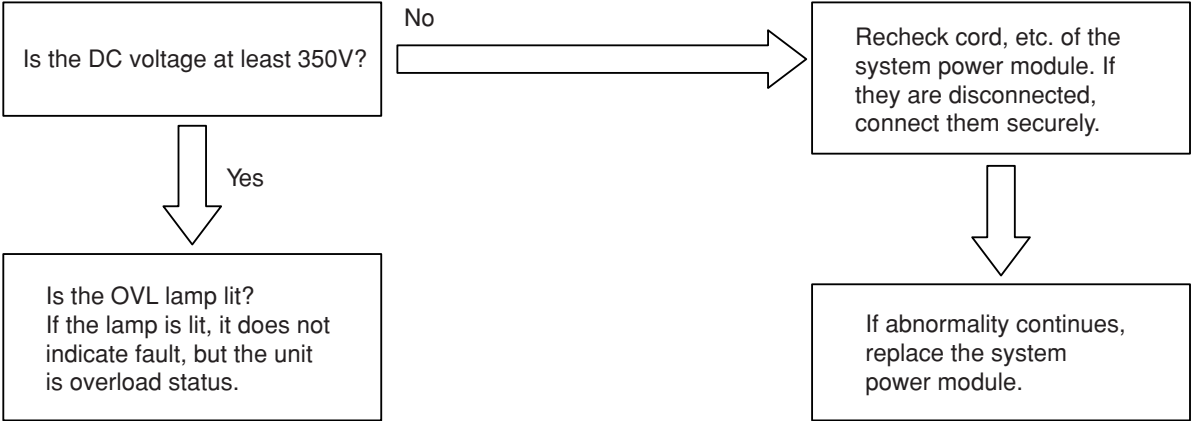


Overvoltage defect: system power module faulty (15-times blinking)

# CHECKING THE REFRIGERATING CYCLE

## (JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

### 1. Troubleshooting procedure (No operation, No heating, No cooling)

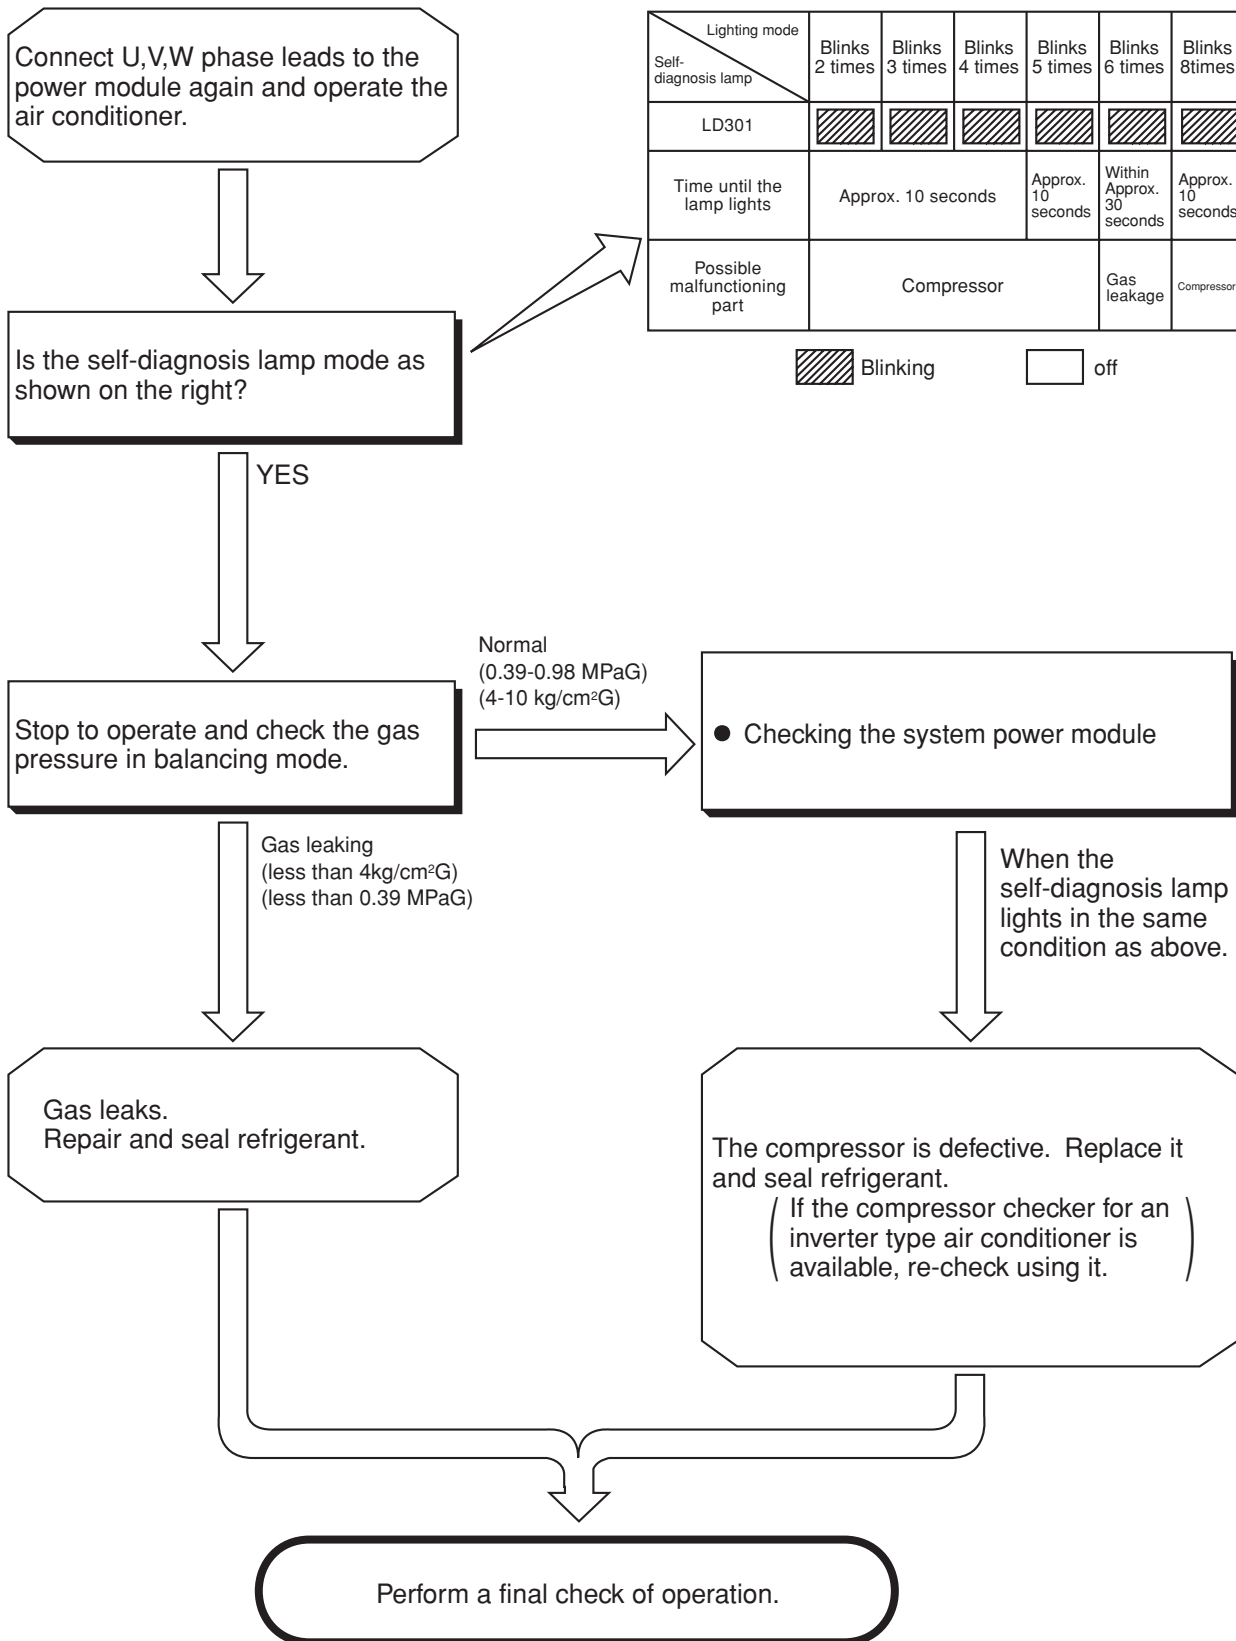

## HOW TO CHECK SYSTEM POWER MODULE

### Checking system power module using tester


Set tester to resistance range (X 100)

If indicator does not swing in the following conductivity check, the system power module is normal.

(In case of digital tester, since built-in battery is set in reverse direction, ⊕ and ⊖ terminals are reversed.)

#### ⚠ CAUTION

If inner circuit of system power module is disconnected (open), the indicator of tester will not swing and this may assumed as normal. In this case, if indicator swings when ⊕ and ⊖ terminals are connected in reverse of diagram below, it is normal. Furthermore, compare how indicator swings at U, V and W phases. If indicator swings the same way at each point, it is normal.

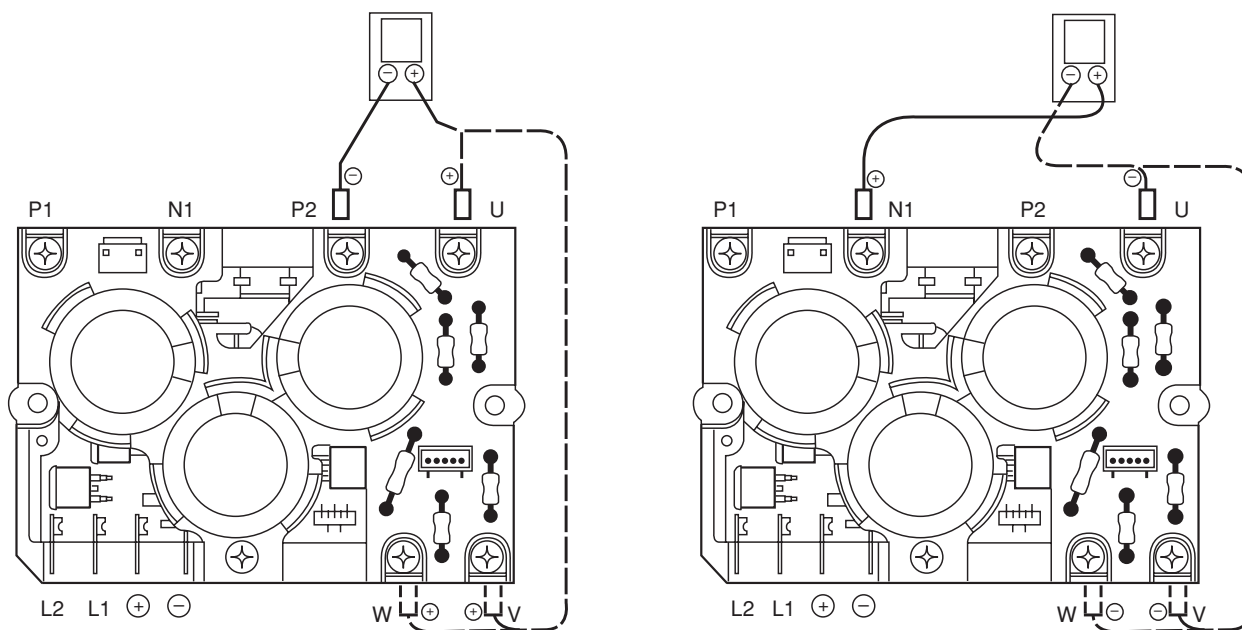





## HOW TO OPERATE USING THE SERVICE SWITCH THE OUTDOOR UNIT

MODEL RAC-25NH5, RAC-35NH5, RAC-50NH5

1. Turn off the power supply to outdoor unit and then turn on again.
2. Remove the electrical box cover.

**LD303 (red) will light and the unit will operate in the forced cooling mode at this time.**

Never operate the unit for more than 5 minutes.

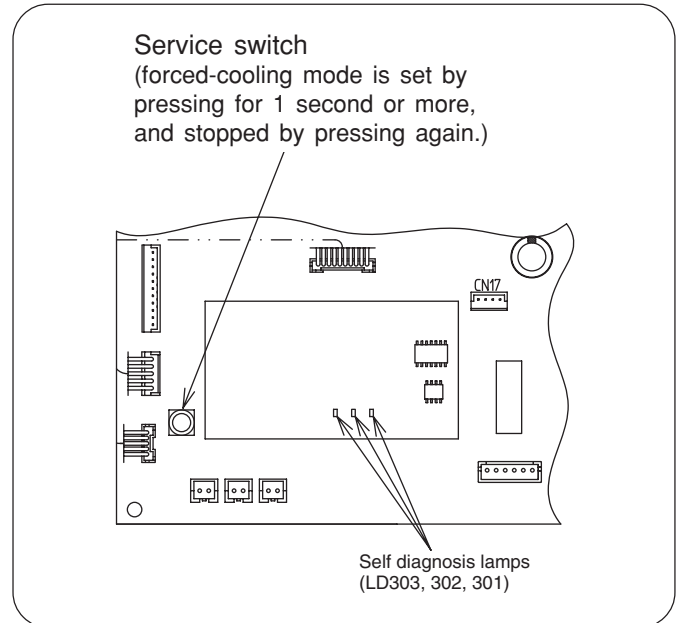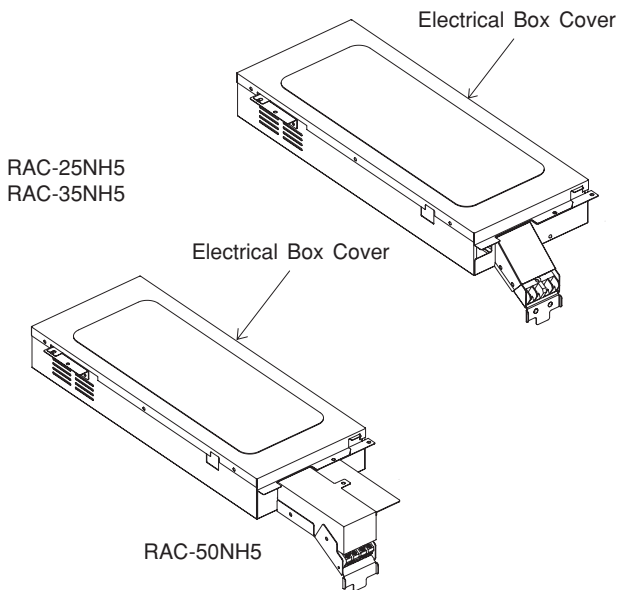

### (Cautions)

- (1) If interface signal (DC 35V) terminals C and D are not connected when the outdoor unit is in forced cool mode, the outdoor unit defect indicator (LD301) will blink 9 times during operation to indicate communication error.
- (2) If checking is done with the compressor connector disconnected, the unit will continue normal operation when the electrical parts are normal, or it will repeat operating for approx. one minute and stop due to overload power limit cut, or it will operate in the overload status.


Be sure to push the service switch again to stop the forced cool operation.

## HOW TO OPERATE THE OUTDOOR UNIT INDEPENDENTLY

1. Connect the large dia. pipe side and small dia. pipe side service valves using a pipe.

Connect the small diameter service valve and the large diameter service valve using the reducing union and copper pipe as shown on the right.

Charge refrigerant of 300g after vacuuming (※ 1)

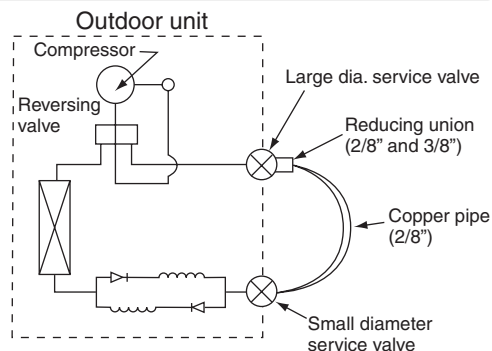

### Parts to be prepared




- (1) Reducing union  
2/8" (6.35mm)  
1/2" (12.7mm)
- (2) Copper pipe (2/8" and 1/2")
- (3) Shorting leads  
2 leads approx. 10 cm long with alligator clip or IC clip

**Do not operate for more than 5 minutes**

The operation method is the same as "How to operate using the connector to servicing the outdoor unit".

※ 1 The charging amount of 300g is equivalent to the load in normal operation.


# SYSTEM POWER MODULE DIAGNOSIS
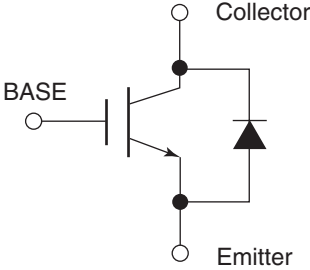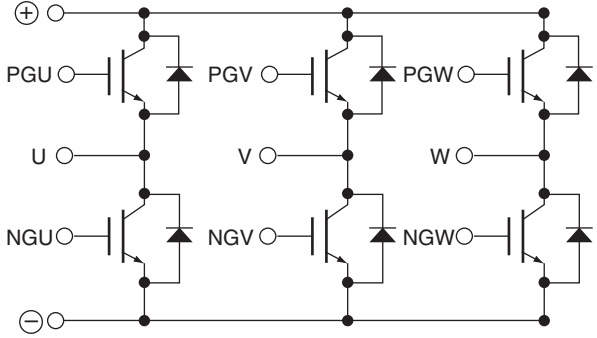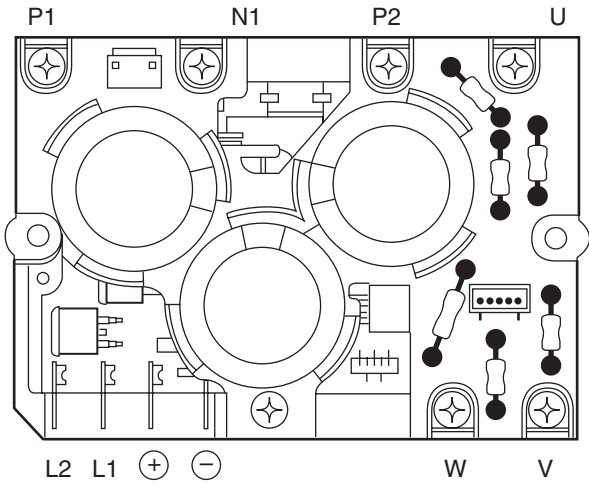
<p>Circuit diagram of the device (excepting the reflux diode)</p>	
<p>Circuit diagram of the module</p>	
<p>Terminals symbol mark of the module</p> <p>※ See next page for measuring value using tester</p>	

# PARTS LIST AND DIAGRAM

## INDOOR UNIT

MODEL : RAD-18NH7, RAD-25NH7, RAD-35NH7, RAD-50NH7

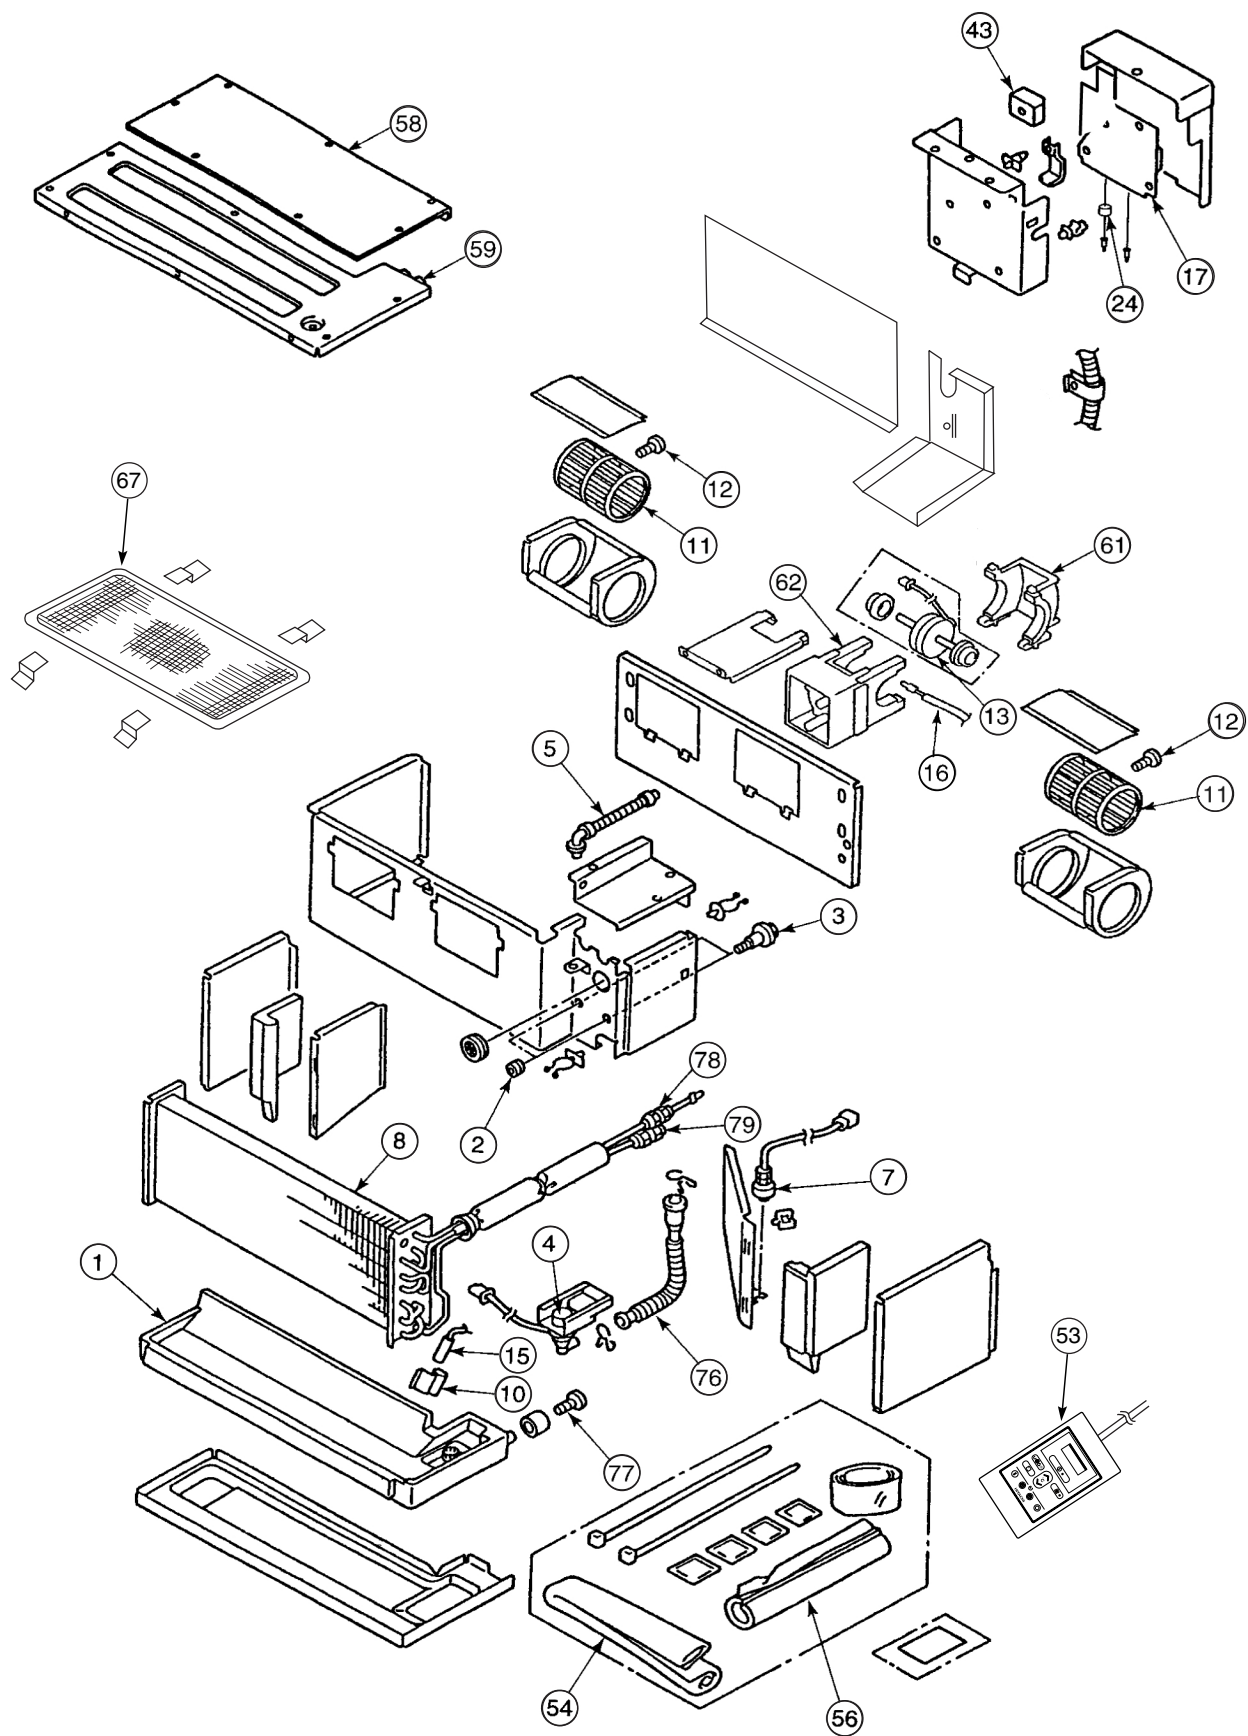

**MODEL RAD-18NH7**

NO.	PART NO. RAD-18NH7	Q'TY / UNIT	PARTS NAME
1	PMRAD-28MX R01	1	DRAIN PAN
2	PMRAMD-350BW R03	2	FAN MOTOR SUPPORT RUBBER
3	PMRAMD-350BW R04	2	SPECIAL SCREW
4	PMRAD-28MX R02	1	DRAIN PUMP
5	PMRAMD-350BW R05	1	DRAIN HOSE ASSY
7	PMRAMD-350BW R11	1	FLOAT SWITCH
8	PMRAD-18NH7 R01	1	CYCLE ASSY
10	PMRAS-10C8M R03	1	BULB SUPPORT
11	PMRAD-32CNH2 S06	2	SIROCCO FAN
12	PMRA-353B R04	2	FAN BOLT
13	PMRAD-32CNH2 S05	1	FAN MOTOR 20W, 1kg
15	PMRAMD-40GX R02	1	THERMISTOR (HEAT)
16	PMRAD-28MX R05	1	THERMISTOR (TEMPERATURE)
17	PMRAD-18NH7 S01	1	P.W.B. (MAIN)
24	PMRAC4010KX2 S08	1	FERITE CORE (935)
43	PMRAM-90QH5 901	1	TERMINAL BOARD (2P)
53	PMRAD-18NH7 001	1	REMOTE CONTROL ASSEMBLY
54	PMRAMJ-250BW R09	1	INSULATOR PIPE
56	PMRAD-28MX R09	1	INSULATOR PIPE (236L)
58	PMRAD-18NH7 S03	1	UPPER PLATE (2)
59	PMRAD-25QH4 S04	1	UPPER PLATE (1)
61	PMRAD-28QH1 S07	1	FAN MOTOR SUPPORT
62	PMRAD-25QH4 S01	1	BASE (FAN MOTOR)
67	PMRAD-18NH7 002	1	FILTER
76	PMRAD-28MX R03	1	DRAIN PIPE
77	PMRAS5645TWU R08	1	DRAIN CAP
78	PMRAS-287AX S01	1	UNION (2)
79	PMRAS-287AX S02	1	UNION (3)

**MODEL RAD-25NH7**

NO.	PART NO. RAD-25NH7	Q'TY / UNIT	PARTS NAME
1	PMRAD-28MX R01	1	DRAIN PAN
2	PMRAMD-350BW R03	2	FAN MOTOR SUPPORT RUBBER
3	PMRAMD-350BW R04	2	SPECIAL SCREW
4	PMRAD-28MX R02	1	DRAIN PUMP
5	PMRAMD-350BW R05	1	DRAIN HOSE ASSY
7	PMRAMD-350BW R11	1	FLOAT SWITCH
8	PMRAD-18NH7 R01	1	CYCLE ASSY
10	PMRAS-10C8M R03	1	BULB SUPPORT
11	PMRAD-32CNH2 S06	2	SIROCCO FAN
12	PMRA-353B R04	2	FAN BOLT
13	PMRAD-32CNH2 S05	1	FAN MOTOR 20W, 1kg
15	PMRAMD-40GX R02	1	THERMISTOR (HEAT)
16	PMRAD-28MX R05	1	THERMISTOR (TEMPERATURE)
17	PMRAD-25NH7 S01	1	P.W.B. (MAIN)
24	PMRAC4010KX2 S08	1	FERITE CORE (935)
43	PMRAM-90QH5 901	1	TERMINAL BOARD (2P)
53	PMRAD-18NH7 001	1	REMOTE CONTROL ASSEMBLY
54	PMRAMJ-250BW R09	1	INSULATOR PIPE
56	PMRAD-28MX R09	1	INSULATOR PIPE (236L)
58	PMRAD-18NH7 S03	1	UPPER PLATE (2)
59	PMRAD-25QH4 S04	1	UPPER PLATE (1)
61	PMRAD-28QH1 S07	1	FAN MOTOR SUPPORT
62	PMRAD-25QH4 S01	1	BASE (FAN MOTOR)
67	PMRAD-18NH7 002	1	FILTER
76	PMRAD-28MX R03	1	DRAIN PIPE
77	PMRAS5645TWU R08	1	DRAIN CAP
78	PMRAS-287AX S01	1	UNION (2)
79	PMRAS-287AX S02	1	UNION (3)

**MODEL RAD-35NH7**


NO.	PART NO. RAD-35NH7	Q'TY / UNIT	PARTS NAME
1	PMRAD-28MX R01	1	DRAIN PAN
2	PMRAMD-350BW R03	2	FAN MOTOR SUPPORT RUBBER
3	PMRAMD-350BW R04	2	SPECIAL SCREW
4	PMRAD-28MX R02	1	DRAIN PUMP
5	PMRAMD-350BW R05	1	DRAIN HOSE ASSY
7	PMRAMD-350BW R11	1	FLOAT SWITCH
8	PMRAD-18NH7 R01	1	CYCLE ASSY
10	PMRAS-10C8M R03	1	BULB SUPPORT
11	PMRAD-32CNH2 S06	2	SIROCCO FAN
12	PMRA-353B R04	2	FAN BOLT
13	PMRAD-32CNH2 S05	1	FAN MOTOR 20W, 1kg
15	PMRAMD-40GX R02	1	THERMISTOR (HEAT)
16	PMRAD-28MX R05	1	THERMISTOR (TEMPERATURE)
17	PMRAD-35NH7 S01	1	P.W.B. (MAIN)
24	PMRAC4010KX2 S08	1	FERITE CORE (935)
43	PMRAM-90QH5 901	1	TERMINAL BOARD (2P)
53	PMRAD-18NH7 001	1	REMOTE CONTROL ASSEMBLY
54	PMRAMJ-250BW R09	1	INSULATOR PIPE
56	PMRAD-28MX R09	1	INSULATOR PIPE (236L)
58	PMRAD-18NH7 S03	1	UPPER PLATE (2)
59	PMRAD-25QH4 S04	1	UPPER PLATE (1)
61	PMRAD-28QH1 S07	1	FAN MOTOR SUPPORT
62	PMRAD-25QH4 S01	1	BASE (FAN MOTOR)
67	PMRAD-18NH7 002	1	FILTER
76	PMRAD-28MX R03	1	DRAIN PIPE
77	PMRAS5645TWU R08	1	DRAIN CAP
78	PMRAS-287AX S01	1	UNION (2)
79	PMRAS-287AX S02	1	UNION (3)

**MODEL RAD-50NH7**

NO.	PART NO. RAD-50NH7	Q'TY / UNIT	PARTS NAME
1	PMRAD-28MX R01	1	DRAIN PAN
2	PMRAMD-350BW R03	2	FAN MOTOR SUPPORT RUBBER
3	PMRAMD-350BW R04	2	SPECIAL SCREW
4	PMRAD-28MX R02	1	DRAIN PUMP
5	PMRAMD-350BW R05	1	DRAIN HOSE ASSY
7	PMRAMD-350BW R11	1	FLOAT SWITCH
8	PMRAD-50NH7 R01	1	CYCLE ASSY
10	PMRAS-10C8M R03	1	BULB SUPPORT
11	PMRAD-32CNH2 S06	2	SIROCCO FAN
12	PMRA-353B R04	2	FAN BOLT
13	PMRAD-32CNH2 S05	1	FAN MOTOR 20W, 1kg
15	PMRAMD-40GX R02	1	THERMISTOR (HEAT)
16	PMRAD-28MX R05	1	THERMISTOR (TEMPERATURE)
17	PMRAD-50NH7 S01	1	P.W.B. (MAIN)
24	PMRAC4010KX2 S08	1	FERITE CORE (935)
43	PMRAM-90QH5 901	1	TERMINAL BOARD (2P)
53	PMRAD-18NH7 001	1	REMOTE CONTROL ASSEMBLY
54	PMRAMJ-250BW R09	1	INSULATOR PIPE
56	PMRAD-28MX R09	1	INSULATOR PIPE (236L)
58	PMRAD-18NH7 S03	1	UPPER PLATE (2)
59	PMRAD-25QH4 S04	1	UPPER PLATE (1)
61	PMRAD-28QH1 S07	1	FAN MOTOR SUPPORT
62	PMRAD-25QH4 S01	1	BASE (FAN MOTOR)
67	PMRAD-18NH7 002	1	FILTER
76	PMRAD-28MX R03	1	DRAIN PIPE
77	PMRAS5645TWU R08	1	DRAIN CAP
78	PMRAS-287AX S01	1	UNION (2)
79	PMRAS-287AX S03	1	UNION (4)

# OUTDOOR UNIT

## MODEL : RAC-25NH5, RAC-35NH5, RAC-50NH5

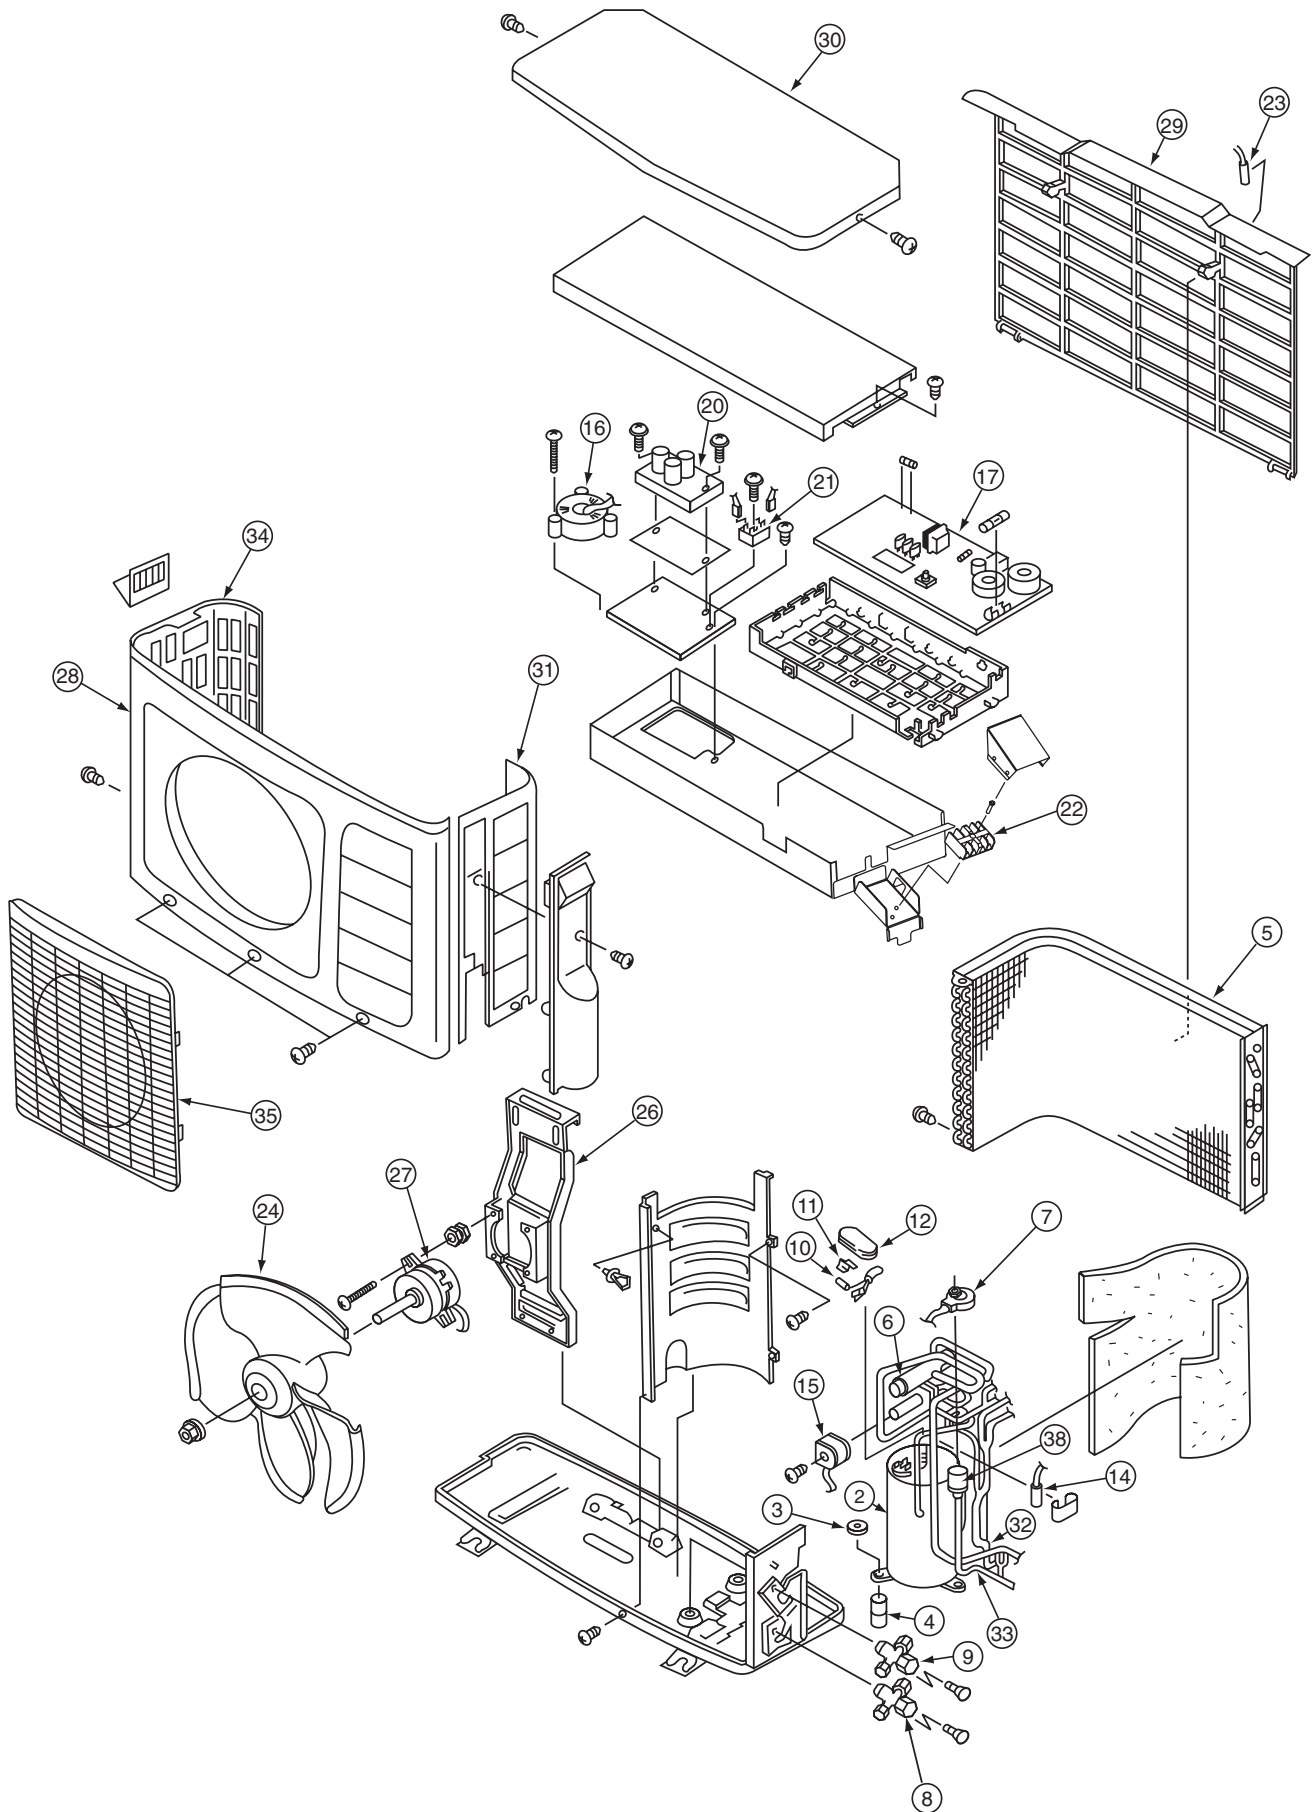



**MODEL RAC-25NH5**

NO.	PART NO. RAC-25NH5	Q'TY / UNIT	PARTS NAME
2	PMRAC-25NH4 908	1	COMPRESSOR
3	KPNT1 001	6	PUSH NUT
4	RAC-2226H 805	3	COMPRESSOR RUBBER
5	PMRAC-25NH4 S01	1	CONDENSER
6	PMRAC-50YHA1 905	1	REVERSING VALVE
7	PMRAC-25NH4 S03	1	ELECTRICAL EXPANSION COIL
8	PMRAC-25NH4 904	1	VALVE (2S)
9	PMRAC-25NH4 905	1	VALVE (3S)
10	PMRAC-40CNH2 914	1	THERMISTOR (OH)
11	PMRAC-25NH4 S09	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4 910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2 915	1	THERMISTOR (DEFROST)
15	PMRAC-50YHA1 903	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4 S01	1	REACTOR
17	PMRAC-25NH5 S01	1	P.W.B (MAIN)
20	PMRAC-25NH4 S12	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2 902	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4 S13	1	TERMINAL BOARD (4P)
23	PMRAC-40CNH2 916	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-25CNH2 902	1	PROPELLER FAN
26	PMRAC-25NH4 S14	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2 S19	1	FAN MOTOR (40W)
28	PMRAC-51CA1 S01	1	CABINET
29	PMRAC-51CA1 908	1	NET
30	PMRAC-51CA1 909	1	TOP COVER
31	PMRAC-25NH4 S17	1	SIDE PLATE-R
32	PMRAC-25NH4 915	1	STRAINER
33	PMRAC-25NH4 907	1	STRAINER (COND)
34	PMRAC-25NH4 917	1	SIDE PLATE-L
35	PMRAC-09CHA1 903	1	GRILL
38	PMRAC-25NH4 S16	1	EXPANSION VALVE

**MODEL RAC-35NH5**

<b>NO.</b>	<b>PART NO. RAC-35NH5</b>	<b>Q'TY / UNIT</b>	<b>PARTS NAME</b>
2	PMRAC-25NH4 908	1	COMPRESSOR
3	KPNT1 001	6	PUSH NUT
4	RAC-2226H 805	3	COMPRESSOR RUBBER
5	PMRAC-25NH4 S01	1	CONDENSER
6	PMRAC-50YHA1 905	1	REVERSING VALVE
7	PMRAC-25NH4 S03	1	ELECTRICAL EXPANSION COIL
8	PMRAC-25NH4 904	1	VALVE (2S)
9	PMRAC-25NH4 905	1	VALVE (3S)
10	PMRAC-40CNH2 914	1	THERMISTOR (OH)
11	PMRAC-25NH4 S09	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4 910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2 915	1	THERMISTOR (DEFROST)
15	PMRAC-50YHA1 903	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4 S01	1	REACTOR
17	PMRAC-35NH5 S01	1	P.W.B (MAIN)
20	PMRAC-25NH4 S12	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2 902	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4 S13	1	TERMINAL BOARD (4P)
23	PMRAC-40CNH2 916	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-25CNH2 902	1	PROPELLER FAN
26	PMRAC-25NH4 S14	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2 S19	1	FAN MOTOR (40W)
28	PMRAC-51CA1 S01	1	CABINET
29	PMRAC-51CA1 908	1	NET
30	PMRAC-51CA1 909	1	TOP COVER
31	PMRAC-25NH4 S17	1	SIDE PLATE-R
32	PMRAC-25NH4 915	1	STRAINER
33	PMRAC-25NH4 907	1	STRAINER (COND)
34	PMRAC-25NH4 917	1	SIDE PLATE-L
35	PMRAC-09CHA1 903	1	GRILL
38	PMRAC-25NH4 S16	1	EXPANSION VALVE

**MODEL RAC-50NH5**

NO.	PART NO. RAC-50NH5	Q'TY / UNIT	PARTS NAME
2	PMRAC-50NH4 S07	1	COMPRESSOR
3	KPNT1 001	4	PUSH NUT
4	RAC-2226HV 805	3	COMPRESSOR RUBBER
5	PMRAC-50NH4 S02	1	CONDENSER
6	PMRAC-50YHA1 905	1	REVERSING VALVE
7	PMRAC-25NH4 S03	1	ELECTRICAL EXPANSION COIL
8	PMRAC-50NH4 S03	1	VALVE (2S)
9	PMRAC-50NH4 S04	1	VALVE (4S)
10	PMRAC-40CNH2 S14	1	THERMISTOR (OH)
11	PMRAC-25NH4 S09	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4 910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2 S15	1	THERMISTOR (DEFROST)
15	PMRAC-50YHA1 903	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4 S01	1	REACTOR
17	PMRAC-50YH5 S01	1	P.W.B (MAIN)
20	PMRAC-40CNH2 S01	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2 S02	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4 S13	1	TERMINAL BOARD (4P)
23	PMRAC-19SH4 S01	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-40CNH2 S17	1	PROPELLER FAN
26	PMRAC-40CNH2 S18	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2 S19	1	FAN MOTOR (40W)
28	PMRAC-40CNH2 S04	1	CABINET
29	PMRAC-40CNH2 921	1	NET
30	PMRAC-40CNH2 922	1	TOP COVER
31	PMRAC-50NH4 S10	1	SIDE PLATE-R
32	PMRAC-50NH4 906	1	STRAINER (PIPE)
33	PMRAC-50NH4 909	1	STRAINER (COND)
34	PMRAC-40CNH2 926	1	SIDE PLATE-L
35	PMRAC-40CNH2 928	1	GRILL
38	PMRAC-25NH4 S16	1	EXPANSION VALVE

# HITACHI

**RAD-18NH7/RAD-25NH7/RAD-35NH7/RAD-50NH7  
RAC-25NH5/RAC-35NH5/RAC-50NH5**

**PM NO. 0366E**

Printed in Malaysia