


• FXYH32H(J)/63H(J)/100H(J)/V1,VAL

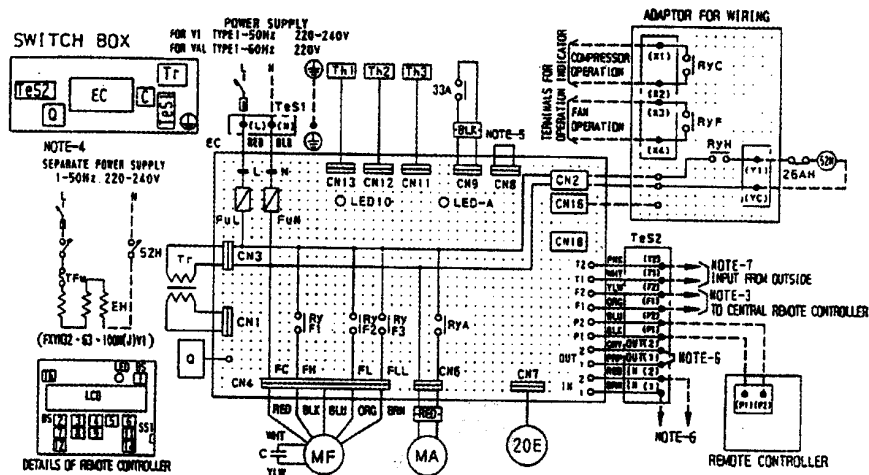

| CODE  | DESCRIPTION                                  | CODE | DESCRIPTION                      | CODE | DESCRIPTION               |
|-------|----------------------------------------------|------|----------------------------------|------|---------------------------|
| 22E   | EXPANSION VALVE (ELECTRONIC TYPE)            | TA52 | TERMINAL STRIP (CONTROL)         | BS1  | PUSH BUTTON (ON/OFF)      |
| 33A   | LIGHT SWITCH (SWING FLAP)                    | TA53 | TERMINAL STRIP (POWER)           | BS2  | PUSH BUTTON (FAN SPEED)   |
| 49F   | THERMO SWITCH (MP COMBINED)                  | TA54 | TERMINAL STRIP (FAN)             | BS3  | PUSH BUTTON (TEMPERATURE) |
| 49F   | ONLY FOR FXYH100H(J)/V1                      | TA55 | TERMINAL STRIP (AIR)             | BS4  | PUSH BUTTON (FAN STOP)    |
| C     | CAPACITOR (MP)                               | TA56 | TERMINAL STRIP (HEATER)          | BS5  | PUSH BUTTON (FAN STOP)    |
| EC    | PRINTED CIRCUIT BOARD                        | TA57 | TERMINAL STRIP (LED)             | BS6  | PUSH BUTTON (FAN STOP)    |
| FBL-N | FUSE (250V, 5A)                              | TA58 | TERMINAL STRIP (OPT. PARTS)      | BS7  | PUSH BUTTON (FAN STOP)    |
| LED10 | LIGHT EMISSION DIODE (SERVICE MONITOR-RED)   | TA59 | TERMINAL STRIP (THERMO SWITCH)   | BS8  | PUSH BUTTON (FAN STOP)    |
| LED-A | LIGHT EMISSION DIODE (SERVICE MONITOR-GREEN) | TA60 | TERMINAL STRIP (ELECTRIC HEATER) | BS9  | PUSH BUTTON (FAN STOP)    |
| MA    | MOTOR (SWING FLAP)                           | TA61 | TERMINAL STRIP (THERMO SWITCH)   | BS10 | PUSH BUTTON (FAN STOP)    |
| Q     | POWER TRANSISTOR                             | TA62 | TERMINAL STRIP (ELECTRIC HEATER) | BS11 | PUSH BUTTON (FAN STOP)    |
| RFA   | MAGNETIC RELAY (MA)                          | TA63 | TERMINAL STRIP (THERMO SWITCH)   | BS12 | PUSH BUTTON (FAN STOP)    |
| RFF1  | MAGNETIC RELAY (MP)                          | TA64 | TERMINAL STRIP (THERMO SWITCH)   | BS13 | PUSH BUTTON (FAN STOP)    |
| RFF2  | MAGNETIC RELAY (MP)                          | TA65 | TERMINAL STRIP (THERMO SWITCH)   | BS14 | PUSH BUTTON (FAN STOP)    |
| RFF3  | MAGNETIC RELAY (MP)                          | TA66 | TERMINAL STRIP (THERMO SWITCH)   | BS15 | PUSH BUTTON (FAN STOP)    |
| TA51  | TERMINAL STRIP (POWER)                       | TA67 | TERMINAL STRIP (THERMO SWITCH)   | BS16 | PUSH BUTTON (FAN STOP)    |

#### ПРИМЕЧАНИЯ:

1. —: контакт —: панель печатных плат —: переключатель  
□: разъем —: наконечник —: разъем с переключателем
2. —: проводка на месте установки
3. Для подключения центрального ПДУ см. Инструкцию
4. Для подключения электронагревателя необходима дополнительная проводка для контура нагревателя (26AH, 52H, EH). В этом случае необходим независимый источник питания
5. При подключении к входам (1) и (2) и выходам (1) и (2) см. "Предосторожности при проводке на месте установки"
6. Не удаляйте разъем с переключателем, иначе блок не будет работать
7. При подключении внешних кабелей к входам задайте с ПДУ принудительное выключение или выберите режим включения/выключения (см. Инструкцию по установке блока).
8. Используйте только медные провода
9. Приняты следующие обозначения:  
PNK: розовый WHT: белый YLW: желтый ORG: оранжевый  
BLK: черный GRY: серый PRL: пурпурный RED: красный  
BLU: синий BRN: коричневый

DU228-523D



Большая библиотека технической документации

<https://splitsystema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html>

каталоги, инструкции, сервисные мануалы, схемы.