


• RSXY8HJ • 10HJY1

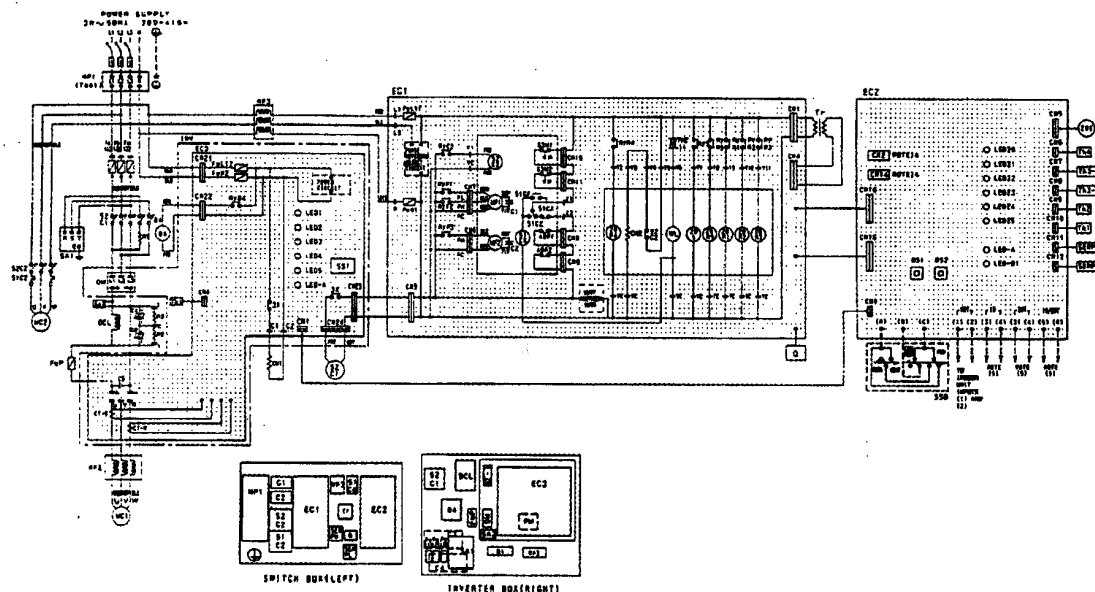

L1-RED	L2-WHITE	L3-BLACK	H-BLUE	DM	DIODE MODULE	Q	POWER TRANSISTOR
3X	MAGNETIC RELAY	EC1-2-3	PRINTED CIRCUIT BOARD	R1-3	RESISTOR		
20E	EXPANSION VALVE(ELECTRONIC TYPE)	FUL1-1-N1	FUSE(AC250V, 10A)(EC1)	SA1-2	MAGNETIC RELAY		
20R1	SOLENOID VALVE(HOT GAS)	FUL1-2-N2	FUSE(AC250V, 3A)(EC3)	SENPH	PRESSURE SENSOR(HIGH)		
20R2	SOLENOID VALVE(SUB CONDENSER)	FUL1-3-23-33	FUSE(AC600V, 30A)	SENPL	PRESSURE SENSOR(LOW)		
20R3	SOLENOID VALVE(INJECTION MC1)	FUP	FUSE(DC700V, 30A)	SS1	SELECTOR SWITCH(MONITOR)		
20R4	SOLENOID VALVE(INJECTION MC2)	INV	INVERTER	TA1	THERMISTOR(FIN)(EC3)		
20R5	SOLENOID VALVE(HOT GAS EQUALIZING)	LED1-5	LIGHT EMISSION DIODE (SERVICE MONITOR-RED)	TA1	THERMISTOR(AIR)(EC2)		
20S	4WAY VALVE	LED20-25	LIGHT EMISSION DIODE (MONITOR:MODE, SETTING-ORANGE)	TA2	THERMISTOR(COIL)		
51C1-2	THERMO SWITCH(MF1-2)	LED-A	LIGHT EMISSION DIODE(EC2) (SERVICE MONITOR-GREEN)	TA3-1-2	THERMISTOR(DISCHARGE)		
51C2	OVER-CURRENT RELAY(MC2)	LED-A	LIGHT EMISSION DIODE(EC2) (SERVICE MONITOR-GREEN)	TA4	THERMISTOR(DISCHARGE)		
51C3	MAGNETIC RELAY	LED-A	LIGHT EMISSION DIODE(EC3) (SERVICE MONITOR-GREEN)	T7	TRANSFORMER(220V-240V/25V)		
63M1-2	PRESSURE SWITCH(HIGH)	LED-A	LIGHT EMISSION DIODE(EC3) (SERVICE MONITOR-GREEN)	WL	PILLOT LAMP(ALARM-WHITE)		
84	MAGNETIC CONTACTOR	LED-01	LIGHT EMISSION DIODE (SERVICE MONITOR-GREEN)				
BS1	PUSH BUTTON SWITCH(SELECT)						
BS2	PUSH BUTTON SWITCH(CONFIRMATION)						
C1-5	CAPACITOR	MC1-2	MOTOR(COMPRESSOR)	SSO	COOL/HEAT SELECTOR		
CM1-2	CRANKCASE HEATER	MF1-2	MOTOR(FAN)		CONNECTOR FOR OPTIONAL PARTS		
CT-U	CURRENT TRANSFORMER	MF1-3	NOISE FILTER	CR2-14	CONNECTOR		
QCL	REACTOR	PMC14	SOLID STATE RELAY		(ADAPTOR FOR SEQUENTIAL START)		

ПРИМЕЧАНИЯ:

1. —: контакт —: разъем —: разъем —: панель печатных плат —: проводка на месте установки
2. Используются только медные проводники
3. Эта схема относится только к внешнему блоку
4. При подключении адаптера последовательного запуска см. Инструкцию по установке адаптера
5. При подключении к входам (3), (4) и выходам (3), (4), служащим для соединения внешних блоков между собой, а также к входу и выходу для последовательного запуска см. Инструкцию по установке системы
6. Приняты следующие обозначения:
BLK: черный BLU: синий BRN: коричневый GRY: серый ORG: оранжевый
PNK: розовый RED: красный WHT: белый YLW: желтый

I3-550A



Большая библиотека технической документации

<https://splitsystema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html>

каталоги, инструкции, сервисные мануалы, схемы.