


• FXYA25G/40GV1, VG

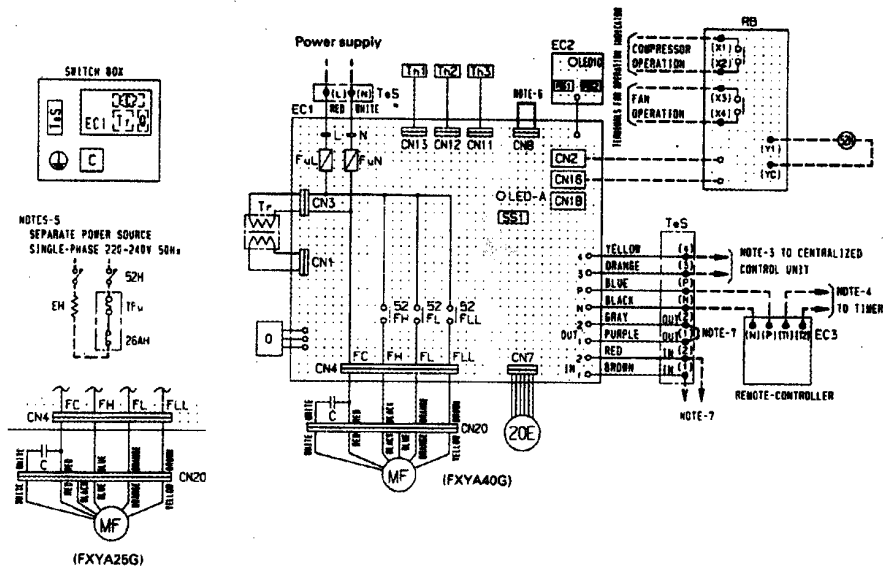

20E	EXPANSION VALVE (ELECTRIC TYPE)
52FH	MAGNETIC RELAY (MF)
52FL	MAGNETIC RELAY (MF)
52ELL	MAGNETIC RELAY (MF)
C	CAPACITOR (MF)
CN1-3, 4-7, 8-11-13	CONNECTOR (EC1)
CN20	CONNECTOR
EC1-2	PRINTED CIRCUIT BOARD
F1, 2, 3	FUSE (250V, 10A)
LED10	LIGHT-EMISSION DIODE (MONITOR OF WIRING CONNECTION BETWEEN INDOOR UNIT AND OUTDOOR UNIT-RED)
LED-A	LIGHT-EMISSION DIODE (MONITOR OF MICRO-COMPUTER-GREEN)
MF	MOTOR (FAN)
Q	POWER TRANSISTOR
RS1	ROTARY SWITCH (SETTING OF UNIT NO. AT GROUP CONTROL)
RS2	ROTARY SWITCH (SETTING OF GROUP NO. AT CENTRALIZED CONTROL)
SS1	SELECTOR SWITCH (EMERGENCY OPERATION)
TsS	TERMINAL STRIP (POWER CONTROL)
TF-F	THERMO FUSE (MF EMBEDDED)
T1	THERMISTOR (AIR)
T12-3	THERMISTOR (REFRIGERANT)
T1	TRANSFORMER (220/230V)
OPTIONAL ACCESSORIES	
26AH	THERMO SWITCH (PREVENTION OF OVERHEATING)
52H	MAGNETIC CONTACTOR (EH)
EC3	REMOTE-CONTROLLER (KRC31A-13)
EH	ELECTRIC HEATER
RA	WIRE ADAPTOR (KRC31-0)
TF	THERMO FUSE (130V)
CONNECTOR FOR OPTIONAL ACCESSORIES	
CN2	CONNECTOR (WIRE ADAPTOR)
CN16	CONNECTOR (WIRE ADAPTOR)
CN18	CONNECTOR (ADAPTOR FOR REMOTE CONTROL)

ПРИМЕЧАНИЯ:

1. — под винт, —O— наконечник, —□— панель печатной платы, —□— переключатель, —□— разъем для доп. приборов, —□— клемма для переключки.
2. .... соединения на месте установки.
3. При использовании пульта централизованного управления подключите его к блоку согласно инструкции.
4. При использовании таймера подключите его к блоку согласно инструкции таймера.
5. При установке электронагревателя обеспечьте дополнительные цепи (26AH, 52H, EH).

Model	Power supply
V1	1 φ, 220~240V, 50Hz
VG	1 φ, 200/200~220V, 50/60Hz



Большая библиотека технической документации

<https://splitsystema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html>

каталоги, инструкции, сервисные мануалы, схемы.