


• RSXY8KYAL · 10KYAL

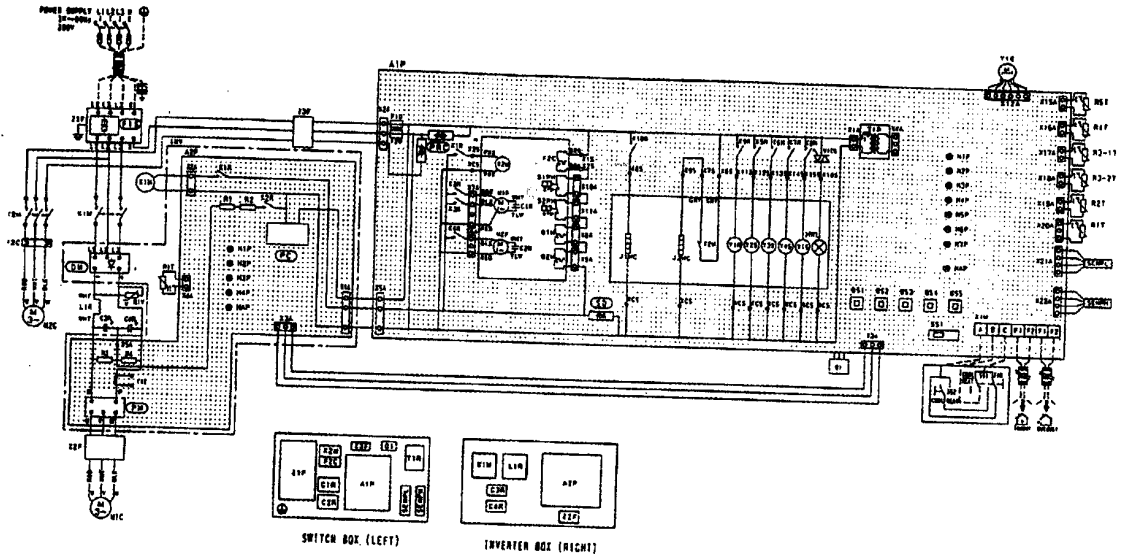

| L1-RED | L2-WHT | L3-BLK | 4-BLU | | |
|----------|-------------------------------------|----------|------------------------------|-------------------------------|--|
| A1P | PRINTED CONCRETE BOARD | F4R | MAGNETIC RELAY (42V) | S1P · 2P | PRESSURE SWITCH (HIGH) |
| A2P | PRINTED CONCRETE BOARD (10V) | F5R | MAGNETIC RELAY (27V) | T1C | DC CURRENT TRANSFORMER |
| BS1-5 | POWER SWITCH SWITCH | F6R | MAGNETIC RELAY (27V) | T1R | TRANSFORMER (270V/27V) |
| | HOME. RT. MTRON. PUBLIC ONCS. RESET | F7R | MAGNETIC RELAY (27V) | V1TR | SOLENOID STATE RELAY |
| C1R-4R | CAPACITOR | F8R | MAGNETIC RELAY (27V) | X1M | TERMINAL STRIP |
| F2C | FUSE (250V, 10A) | F9R | MAGNETIC RELAY (27V) | Y1E | EXPANSION VALVE (ELECTROMAGNETIC TYPE) |
| F1U-2U | FUSE (250V, 10A) | K1OR | MAGNETIC RELAY (27V) | Y1R | 4 WAY VALVE |
| H1P-7P | LIGHT EMITTING DIODE | L1M | INDUCTOR | Y1S | SOLENOID VALVE (MOTORS CONTROL) |
| | (SERVICE MONITOR -ORANGE)(A1P) | M1C-2C | MOTOR (COMPRESSOR) | Y2S | SOLENOID VALVE (MOTORS) |
| H1P-4P | LIGHT EMITTING DIODE | M1F-2F | MOTOR (FAN) | Y2S | SOLENOID VALVE (EXTRACTION) |
| | (SERVICE MONITOR -RED)(A2P) | Q1 | POWER TRANSISTOR | Y4S | SOLENOID VALVE (EXTRACTION) |
| HAP | LIGHT EMITTING DIODE | Q1M-2M | TRIMMER SWITCH (MIG. VSP) | Z1F-3F | NOISE FILTER |
| | (SERVICE MONITOR -GREEN)(A1P) | R1-J | RESISTOR | (QW) | DIODE MODULE |
| HAP | LIGHT EMITTING DIODE | R1T | TRIMMER (FIR) (A2P) | (P1S) | SUNSHINE AMPLIFIER |
| | (SERVICE MONITOR -GREEN)(A2P) | R1T | TRIMMER (AIR) (A1P) | (PC) | POWER (CIRCUIT) |
| HWL | PILOT LAMP (LAMP-WHITE) | R2T | TRIMMER (COIL) | (PM) | POWER MODULE |
| I1W | INVERTER | R3-1T-2T | TRIMMER (DISCHARGE) | (PRC) | PHASE INVERTAL DEFECT CIRCUIT |
| J1MC-2MC | SPRINGCASE HEATER | R4T | TRIMMER (SECTION) | (SD) | SAFETY DEVICES (MPP) |
| K1M | MAGNETIC CONTACTOR (27V) | R5T | TRIMMER (OIL) | | |
| K2M | MAGNETIC CONTACTOR (42V) | R1V | TRIMMER | OPTIONAL PARTS | |
| X1R-2R | MAGNETIC RELAY (A2P) | SENPH | PRESSURE SENSOR (HIGH) | COOL/HEAT SELECTOR (ERC19-26) | |
| K1R | MAGNETIC RELAY (A2P) | SENPL | PRESSURE SENSOR (LOW) | S51 | SELECTOR SWITCH (COOL/COOL-HEAT) |
| K2R-3R | MAGNETIC RELAY (H1P)(A1P) | S51 | SELECTOR SWITCH (C/A SELECT) | S52 | SELECTOR SWITCH (COOL/HEAT) |

ПРИМЕЧАНИЯ:

1. : контакты : разъем : земляная шина (экранировка)
 : зажим : проводка на месте установки

2. Обозначения цветов:

BLK: черный RED: красный BLU: синий WHT: белый YLW: желтый ORG: оранжевый BRN: коричневый PNK: розовый
 GRN: зеленый GRV: серый

3. При подключении к контактам F1 и F2 для соединения внешнего блока с внутренним и внешним блоком между собой см. Инструкцию по установке блоков. При подключении центрального ПДУ см. Инструкцию по установке ПДУ

4. Эта схема относится только к внешнему блоку

DU233-578A



Большая библиотека технической документации

<https://splitsystema48.ru/instrukcii-po-ekspluatatsii-kondicionerov.html>

каталоги, инструкции, сервисные мануалы, схемы.