• RX8G/10GTG

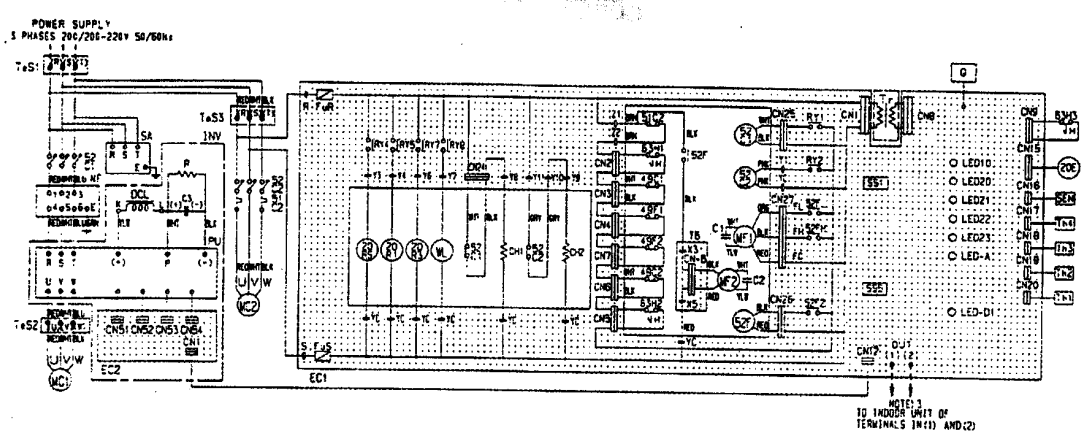

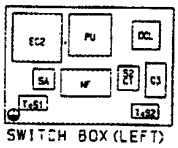

SWITCH BOX (LEFT)

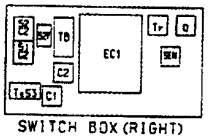

SWITCH BOX (RIGHT)

R-RED | S-WHITE | T-BLUE

20E	EXPANSION VALVE(ELECTRONIC TYPE)	EC1·2	PRINTED CIRCUIT BOARD	SS1	SELECTOR SWITCH(EWG)
20S1	SOLENOID VALVE(HOT GAS)	FuR·S	FUSE(250V.10A)	SS5	SELECTOR SWITCH(PIPE-LENGTH)
20S3	SOLENOID VALVE(INJECTION)	INV	INVERTER	TB	TERMINAL BOARD(RELAY)
20S5	SOLENOID VALVE(UNLOAD)	LED10	LIGHT-EMISSION DIODE (SERVICE MONITOR.INVERTER-RED)	TeS1	TERMINAL STRIP(POWER)
49C1·2	THERMO SWITCH(WC)	LED20-23	LIGHT-EMISSION DIODE (SERVICE MONITOR.INVERTER FREQUENCY-ORANGE)	TeS2·3	TERMINAL STRIP(RELAY)
49F1·2	THERMO SWITCH(WF)	LED-A	LIGHT-EMISSION DIODE (SERVICE MONITOR.MICRO-COMPUTER-GREEN)	TeA1	THERMISTOR(AIR)
51C2	OVER-CURRENT RELAY(WC2)	LED-D1	LIGHT-EMISSION DIODE (SERVICE MONITOR.NORMAL RECEPTION-GREEN)	TeA2	THERMISTOR(COIL)
52C1·2	MAGNETIC CONTACTOR(WC)	WC1·2	MOTOR(COMPRESSOR)	TeA3	THERMISTOR(DISCHARGE)
52F	MAGNETIC RELAY(WF)	WF1·2	MOTOR(FAN)	TeA4	THERMISTOR(SUCTION)
52F2	MAGNETIC RELAY	NF	NOISE FILTER	Tr	TRANSFORMER(200V/25V)
52FH	MAGNETIC RELAY(WF)	PU	POWER UNIT	WL	PILOT LAMP(ALARM-WHITE)
52FL	MAGNETIC RELAY(WF)	Q	POWER TRANSISTOR		
63H1·2	PRESSURE SWITCH(HIGH)	R	RESISTOR		
63H3	PRESSURE SWITCH(CONTROL)	RY1·2·4·5·7·8	MAGNETIC RELAY		
C1·2·3	CAPACITOR	SA	SURGE ABSORBER		
CH1·2	CRANKCASE HEATER	SEN	PURESSURE SENSOR		
CN1·2,5,7	CONNECTOR(EC1)				
CN1·51-54	CONNECTOR(EC2)				
CN-B	CONNECTOR(TB)				
DCL	REACTOR				

ПРИМЕЧАНИЯ:

1. —•—: КОНТАКТ —•—: НАКОНЕЧНИК —⊐—: РАЗЪЕМ ▭: ПАНЕЛЬ ПЕЧАТНЫХ ПЛАТ
2. - - - -: ПРОВОДКА НА МЕСТЕ УСТАНОВКИ
3. ПРИ ПОДКЛЮЧЕНИИ К ВХОДАМ (1) И (2) ВНУТРЕННЕГО БЛОКА СМОТРИ "ПРЕДОСТОРОЖНОСТИ ПРИ ПРОВОДКЕ НА МЕСТЕ УСТАНОВКИ
4. ЭТА СХЕМА ОТНОСИТСЯ ТОЛЬКО К ВНЕШНЕМУ БЛОКУ
5. ПРИНЯТЫ СЛЕДУЮЩИЕ ОБОЗНАЧЕНИЯ:

BLK: ЧЕРНЫЙ BRN: КОРИЧНЕВЫЙ GRY: СЕРЫЙ PNK: РОЗОВЫЙ WHT: БЕЛЫЙ
BLU: СИНИЙ GRN: ЗЕЛЕНЫЙ ORG: ОРАНЖЕВЫЙ RED: КРАСНЫЙ YLW: ЖЕЛТЫЙ

splitoff.ru
Большая библиотека технической документации
https://splitsystema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html
каталоги, инструкции, сервисные мануалы, схемы.