



# Air Conditioner Service Manual



Большая библиотека технической документации

<https://splitsistema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html>

каталоги, инструкции, сервисные мануалы, схемы.

# MODEL: **AC-W10CG**

---

Model No.: AC-W10CG  
Version: 1.0



## CONTENTS

TECHNICAL SPECIFICATION.....	4
PERFORMANCE CURVE .....	5
OUTLINE & DIMENSIONS .....	6
EXPLODED VIEW & PARTLIST.....	7
CIRCUIT DIAGRAM .....	9
PCB FUNCTION MANUAL.....	10


## TECHNICAL SPECIFICATION

Content	AC-W10CG	
Function	Cooling	
Power supply	1Ph 220~230V-50Hz	
Capacity (W)	2500	
Rated input (W)	1020	
Rated current (A)	4.8	
Air flow (m <sup>3</sup> /h)	380	
Dehumidifying volume (L/h)	1.19	
EER(W/W)	2.4	
Indoor side	Fan type/piece	Centrifugal fan-1
	Diameter-length(mm)	180mm x 85
	Evaporator	Aluminum -copper
	Row-fin distance(mm)	2-1.3
	Working area(m <sup>2</sup> )	0.074
	Swing motor	SM021
	Input/Speed	2.5W-6r/min
	Noise(dB(A))	50
	Compressor type	Rotary
Outdoor unit	Compressor Model	2P17C225C NB
	Compressor input Power (W)	910
	L.R.A. (A)	20
	Protection device	External overload protector
	Starting method	Capacity
	Working temp.	≤115°C
	Condenser	Aluminum-copper
	Row-fin distance (mm)	2-1.8
	Working area (m <sup>2</sup> )	0.12
	Fan type-piece	Axial flow fan-1
	Fan diameter (mm)	310
	Throttling method	55
	Noise (dB(A))	55
Motor fan speed (rpm)	1100	
Working capacitor (μF)	3.5μ F/450V45	
Dimension (W x H x D) (mm)	450 x 350 x 580	
Net weight (kg)	35	
Refrigerant charge	R22/550g	


## PERFORMANCE CURVE

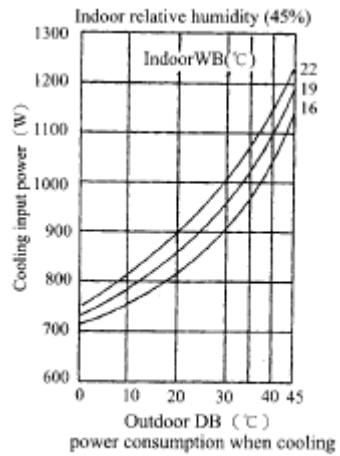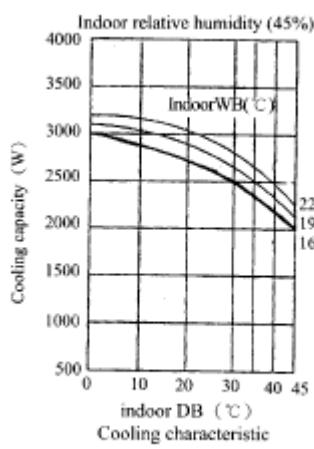

## OUTLINES AND DIMENSIONS

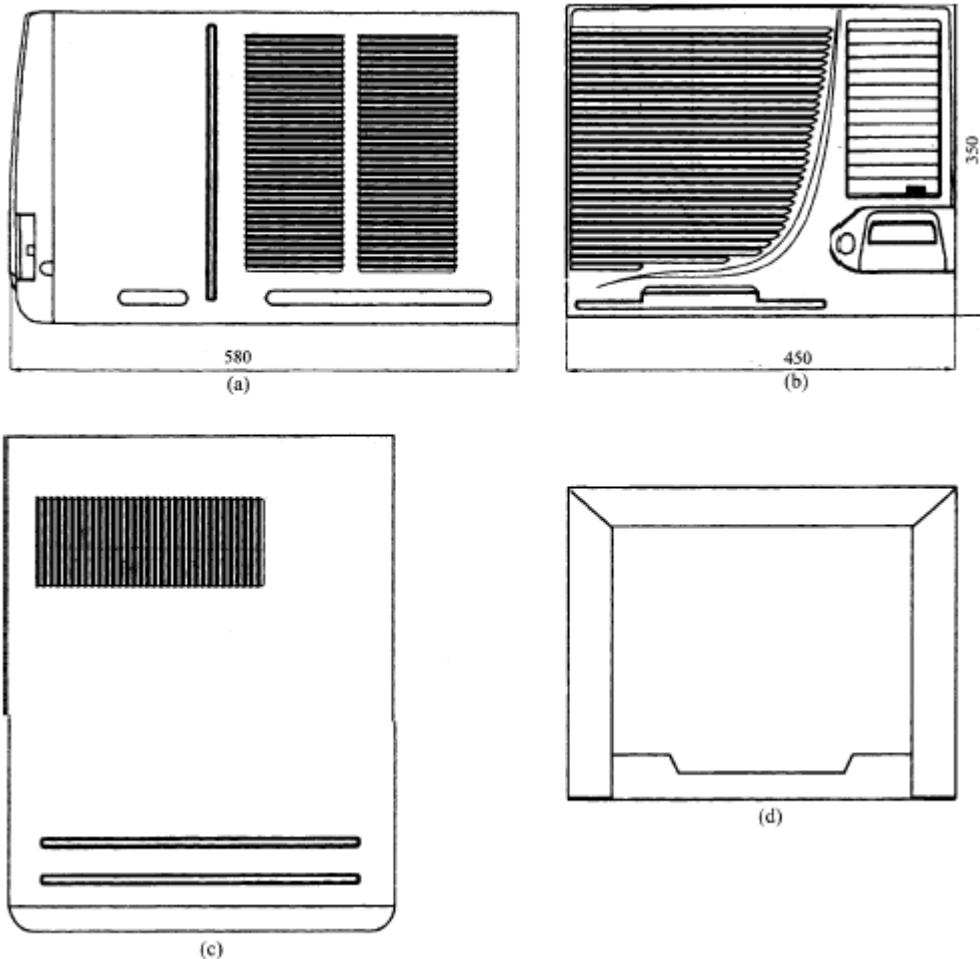

## EXPLODED VIEW & PART LIST

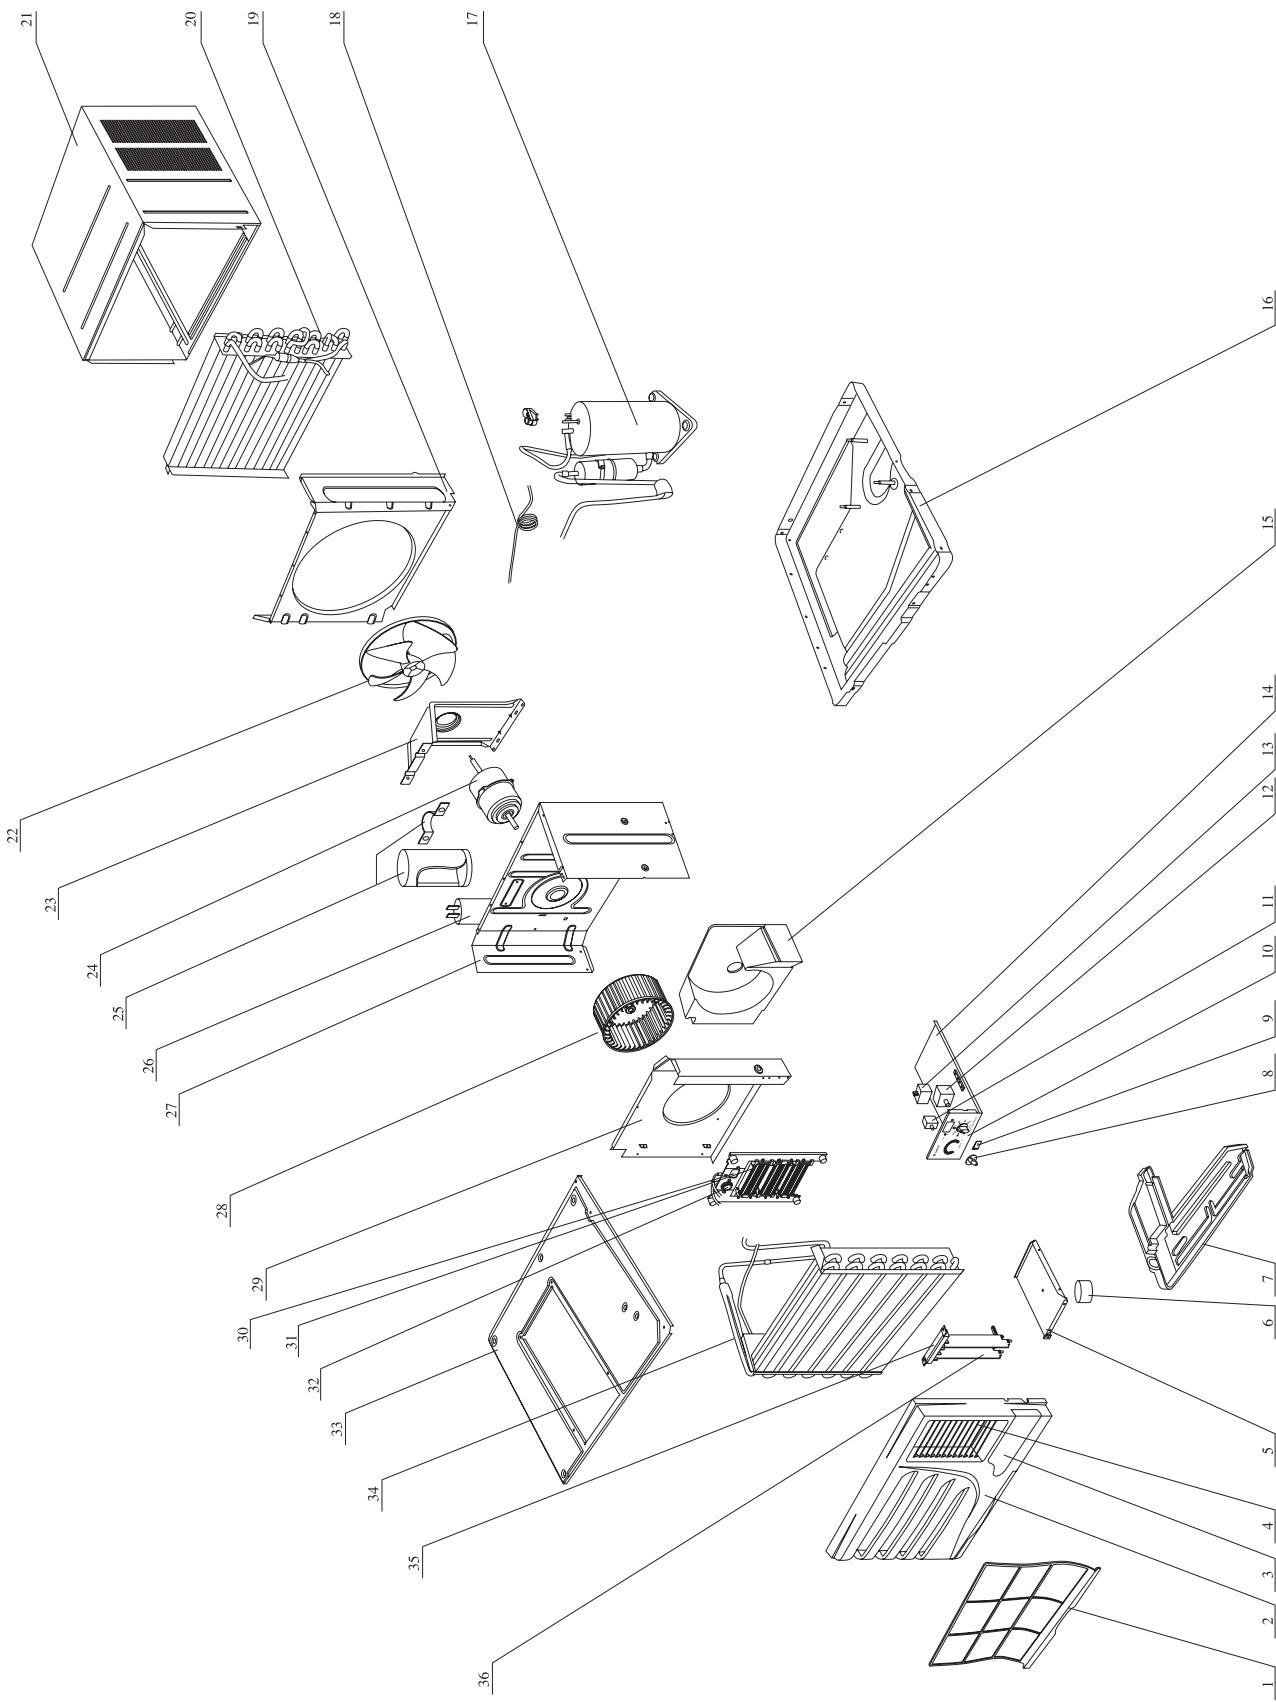


Model No.: AC-W10CG  
Version: 1.0

No.	Description	Qty
1	Fliter net A	1
2	Front panel	1
3	Cover of switch	1
4	Horizontal air guider	12
5	base plate	1
6	Swing motor	1
7	Drain pan	1
8	Knob	2
9	Swing switch	1
10	Mask	1
11	Thermostat	1
12	Main switch	1
13	fan capacitor	1
14	Electric box	1
15	Propeller housing	1
16	Chassis assembly	1
17	Compressor	1
18	Capillary assembly	1
19	Rear insulation plate	1
20	Condensor	1
21	Cabinet	1
22	Axial flow fan	1
23	Motor support	1
24	Motor	1
25	Capacitor box clamp	1
26	Compressor capacitor	1
27	front insulation plate	1
28	Centrifugal fan	1
29	insulation plate of housing	1
33	Top connection plate	1
34	Evaporator	1
35	Cross beam assembly	1
36	Air guider	1
	Power cord	1

## CIRCUIT DIAGRAM

These circuit diagrams are subject to change without notice. Please refer to the ones stuck on the machines.

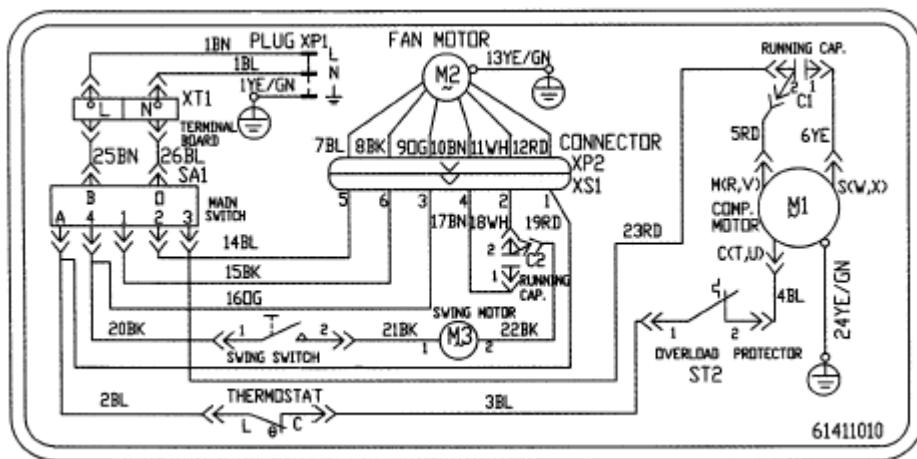

# PCB FUNCTION MANUAL

## A. Running mode

1. Cool
2. Dry
3. Fan
4. Heat
5. Auto
6. Manual operation

## B. Controlling contents

1. Indoor unit fan motor (high, middle and low speed)
2. Compressor
3. Sweep fan motor
4. Buzzer
5. Reversing valve
6. Electrical heater

## C. The parameter to be input

1. The set mode
2. The set temperature of the indoor (shorten form is Test)
3. The set speed
4. The mode of timer
5. The ambient temperature of the indoor unit (shorten form is Tin)
6. The temperature of the defrosting sensor (shorten form is Tde)
7. The sweep mode

## D. The basal control modes

### Cooling mode

- 1 If  $T_{in} \geq T_{set} + 1^{\circ}C$  cooling mode act, compressor run, unit fan motor and sweep fan motor run in the set speed, reversing valve stop.
- 2 If  $T_{in} \leq T_{set} - 2^{\circ}C$  compressor stop, unit fan motor and sweep fan motor run in the set speed.
- 3 If  $T_{set} - 2^{\circ}C < T_{in} < T_{set} + 1^{\circ}C$  keep running in the old mode.
- 4 In the cooling mode, the range of  $T_{set}$  is  $16^{\circ}C \sim 30^{\circ}C$  and it can be set in CON.
- 5 Compressor restart in 3 min after the unit stop and won't stop during the following 6 min because  $T_{in}$  and  $T_{set}$ .

### Drying mode

- 1 If  $T_{in} > T_{set}$ , drying mode act.
- 2 If  $T_{in} < T_{set}$  drying mode stop, compressor stop, unit fan motor run in low speed.
- 3 If  $T_{in} \leq T_{set} - 2^{\circ}C$ , compressor and fan motor stop.
- 4 Unit fan motor run for 6 min in low speed, compressor stop, fan motor run in low speed. After 4 min, unit fan motor running low speed for 6min. Then run by this cycle.
- 5 In drying mode, the range of  $T_{set}$  is  $18^{\circ}C \sim 30^{\circ}C$  and it can be set in CON.
- 6 The protecting functions are same as cooling mode.

### **Fan mode**

- 1 Unit fan motor can run in high, middle, low and auto speed, compressor stop.
- 2 If the different in temperature of  $T_{in}$  and  $T_{set}$  is  $2\sim4^{\circ}\text{C}$ , motor run in middle speed.
- 3 If the different in temperature of  $T_{in}$  and  $T_{set}$  is less than  $2^{\circ}\text{C}$ , motor run in low speed.
- 4 If the different in temperature changed, fan speed will change when the new difference is more or less  $1^{\circ}\text{C}$  than the old one.
- 5 In drying mode, the range of  $T_{set}$  is  $18^{\circ}\text{C} \sim 30^{\circ}\text{C}$  and it can be set in CON.
- 6 There is no protection mode in fan mode.

### **Heating mode**

- 1 If  $T_{in} \leq T_{set}-1^{\circ}\text{C}$ , heating mode act, reversing, compressor run, unit fan motor run in the set speed and the condition of avoiding the cold wind, sweep fan motor run in the set mode.
- 2 If  $T_{in} \geq T_{set}+2^{\circ}\text{C}$ , compressor stop, reserving valve is still electric then unit fan motor run in the low speed.
- 3 If  $T_{set} < T_{in} < T_{set}+2^{\circ}\text{C}$ , keep running in the old mode.
- 4 4-way valve stop in 4 min after unit stop.
- 5 When heating time exceed 45 min and  $T_{de} \leq -8^{\circ}\text{C}$ , defrosting mode act reversing valve and fan motor stop, compressor still run.
- 6 When defrosting time exceed 8 min and  $T_{de} \geq +10^{\circ}\text{C}$ , defrosting stop, heating mode act. Reversing valve run, fan motor run in the set speed and condition of avoiding cold wind.
- 7 Once heating mode act, and fan motor run in high or middle speed, electrical heater work and it won't work when fan motor run in low speed.
- 8 In heating mode, the range of  $T_{set}$  is  $16^{\circ}\text{C} \sim 30^{\circ}\text{C}$  or it can be set in CON.
- 9 The conditions of avoiding cold wind, fan motor run in 30sec after compressor start.
- 10 The protection of compressor's delay. Compressor restart in 3min later after it stop and won't stop in the following by  $T_{in}$  and  $T_{set}$ .

### **AUTO mode**

- 1 If  $T_{in} \geq T_{set}+1^{\circ}\text{C}$ , cooling mode act,  $T_{set}=26^{\circ}\text{C}$  unit fan motor run in set speed.  
If  $T_{in} \leq T_{set}-2^{\circ}\text{C}$ , compressor stop and fan motor run in low speed.  
If  $T_{set}+2^{\circ}\text{C} < T_{in} < T_{set}+1^{\circ}\text{C}$  the unit run in old mode.
- 2 If  $T_{in} \leq T_{set}$ , heating mode act  $T_{set}=20^{\circ}\text{C}$ . If  $T_{in} \geq T_{set}+3^{\circ}\text{C}$ , compressor and reversal valve stop, unit fan motor run in low speed. If  $T_{set} < T_{in} < T_{set}+3^{\circ}\text{C}$ , keep the old mode.
- 3 Press  $\Delta$  or  $\nabla$  to change  $T_{set} 1 \sim 2^{\circ}\text{C}$  more or less.

#### Protection function

They are same as the protection functions of cooling or heating mode.

If  $T_{in}$  change, mode change first. There is no protection of compressor that compressor won't stop in the following 6 min once it run.

### **Others control**

- 1 Timer
- 2 Manual operation
- 3 Sleep
- 4 Motor speed
- 5 Sweep motor
- 6 Running indicate light
- 7 Timer indicate light
- 8 Compressor indicate light
- 9 Buzzer



**Большая библиотека технической документации**

<https://splitsistema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html>

**каталоги, инструкции, сервисные мануалы, схемы.**