



Air Conditioners

Technical Data



Individual control systems





Air Conditioners

Technical Data



Individual control systems



TABLE OF CONTENTS

Individual control systems

1	Possible individual control systems	2
	Survey	4
2	BRC2C51 - Simplified remote control	5
	Explanation of buttons and functions	5
3	BRC3A61 - Simplified remote control for hotel applications ..	6
	Dimensional drawing	6
	Explanation of buttons and functions	7
4	BRC1D61 - Wired remote control with weekly shedule timer.	8
	Dimensional drawing	8
	Explanation of buttons and functions	9
5	BRC4C61,62,63,64,65,66 - Infrared remote control	11
	Dimensional drawing	11
	Explanation of buttons and functions	12
6	BRC7C62,67 - Infrared remote control	13
	Dimensional drawing	13
	Explanation of buttons and functions	14
7	BRC7F635F,634F - Infrared remote control	15
	Dimensional drawing	15
	Explanation of buttons and functions	16
8	BRC7C529W,528W - Infrared remote control	17
	Dimensional drawing	17
9	BRC7E63W,66 - Infrared remote control	18
	Dimensional drawing	18
	Explanation of buttons and functions	19
10	BRC7E618,619 - Infrared remote control	20
	Dimensional drawing	20
11	Survey of various control systems	21

1 Possible individual control systems



Simplified remote control - BRC2C51

- simple, compact and easy to operate unit
- suitable for use in hotel bedrooms

Operation buttons:

- ON / OFF
- Operation mode selection
- Fan speed control
- Temperature setting

Display

- Cool / heat changeover control
- Heat Recovery Ventilation (HRV) in operation
- Set temperature
- Operating mode
- Centralised control indication
- Fan speed
- Defrost / hot start
- Malfunction adjustment
- Operating mode selection
- Fan speed control
- Filter sign reset
- Inspection test / operation



Simplified remote control for hotel applications - BRC3A61

- compact, user friendly unit
- ideal for use in hotel bedrooms

Operation buttons:

- ON / OFF
- Fan speed control
- Temperature setting

Display

- Heat Recovery Ventilation (HRV) in operation
- Set temperature
- Operating mode
- Centralised control indication
- Fan speed
- Defrost / hot start
- Malfunction



Infrared remote control - BRC4C* / BRC7C*

Operation buttons:

- ON / OFF
- Timer mode start / stop
- Timer mode on / off
- Programmed time
- Temperature setting
- Air flow direction (FXHQ, FXFQ, FXCQ and FXAQ models only)
- Operating mode
- Fan speed control
- Filter sign reset
- Inspection test / operation

Display

- Operating mode
- Battery change
- Set temperature
- Air flow direction (FXHQ, FXFQ, FXCQ and FXAQ models only)
- Programmed time
- Inspection test / operation
- Fan speed

1 Possible individual control systems



BRC1D61

Wired remote control with weekly schedule - BRC1D61

Adds advanced functions to the wired remote control

- Limit operation (min/max): room temperature is controlled within adjustable upper and lower limits. Limit operation can be activated manually or by schedule timer.
- Real time clock: indicates real time and day.
- Schedule timer:
 - It is possible to program a weekly schedule timer
 - It is possible to program the remote control for each day of the week.
 - Five day actions can be set as follows:
 - Set point: unit is switched ON and normal operation is maintained
 - OFF: unit is switched OFF
 - Limits: unit is switched ON and min / max control (cf. limit operation for more details)
- Home leave (frost protection): during occupants' absence, the indoor temperature can be maintained at a certain level. This function can also switch the unit ON/OFF

Operation buttons:

- ON / OFF, timer mode start / stop, timer ON / OFF, programmed time, temperature setting, air flow direction adjustment, operating mode selection, fan speed control, filter sign reset, inspection test / operation

Display:

- Operating mode, Heat Recovery Ventilation (HRV) in operation, cool / heat changeover control, centralised control indication, group control indication, set temperature, air flow direction, programmed time, inspection / test operation, fan speed, clear air filter, defrost / hot start, malfunction.

1 Possible individual control systems

1 - 1 Survey


DESCRIPTION	FXFQ-P	FXCQ-M	FXKQ-MA	FXDQ-PB/NB	FXSQ-M	FXMQ-P	FXMQ-MA	FXAQ-MV	FXUQ-MA	FXHQ-MA	FXLQ-MA	FXNQ-MA	
Wired remote control	BRC1D52												
Wired remote control with weekly schedule timer	BRC1D61												
Infrared remote control	cooling only	BRC7F635F	BRC7C67	BRC4C63	BRC4C66	BRC4C64	BRC4C66	BRC4C64	BRC7E619	BRC7C529W	BRC7E66	BRC4C64	BRC4C64
	heat pump	BRC7F634F	BRC7C62	BRC4C61	BRC4C65	BRC4C62	BRC4C65	BRC4C62	BRC7E618	BRC7C528W	BRC7E63W	BRC4C62	BRC4C62
Simplified remote control	-	-	-	BRC2C51	BRC2C51	BRC2C51	BRC2C51	-	-	-	BRC2C51	BRC2C51	
Simplified remote control for hotel use	-	-	-	BRC3A61	BRC3A61	BRC3A61	BRC3A61	-	-	-	BRC3A61	BRC3A61	

1

1

2 BRC2C51 - Simplified remote control

2 - 1 Explanation of buttons and functions

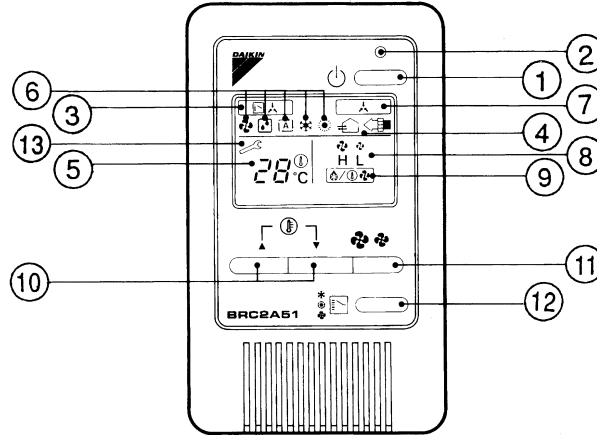

1
2


1	ON/OFF BUTTON	8	DISPLAY ' ' (FAN SPEED)
	Press the button and the system will start. Press the button again and the system will stop.		The display shows the fan speed: "HIGH" or "LOW".
2	OPERATION LAMP (RED)	9	DISPLAY ' ' (DEFROST/HOT START)
	The lamp lights up during operation and blinks in case of stop due to malfunction.		Indicates that defrost or hot start (during which the fan is stopped till the temperature of air supply rises enough at the start of a heating run) is in progress.
3	DISPLAY ' ' (CHANGEOVER UNDER CONTROL)	10	TEMPERATURE SETTING BUTTON
	It is impossible to changeover heat/cool with the remote controller when it shows this display. (As for details, see "SETTINGS OF MASTER REMOTE CONTROL" in the operation manual attached to the indoor unit).		Use this button for SETTING TEMPERATURE of the thermostat. ▲; Each press raises the set temperature by 1°C. ▼; Each press lowers the set temperature by 1°C. The variable temperature range is 16°C to 32°C.
4	DISPLAY " , " ", "OPTION" (VENTILATION / AIR CLEANING)	11	FAN SPEED CONTROL BUTTON
	This display shows that the total heat exchange unit and the air cleaning unit are in operation. (These are optional accessories).		Press this button to select the fan speed, HIGH or LOW, of your choice.
5	DISPLAY ' ' (SET TEMPERATURE)	12	OPERATION MODE SELECTOR BUTTON
	This display shows the set temperature. Only given during a cooling or heating operation.		Press this button to select OPERATION MODE.
6	DISPLAY ' ' (OPERATION MODE)	13	DISPLAY ' ' (MALFUNCTION)
	This display shows the current OPERATION MODE. ' ' is not available with outdoor units specially designed for cooling only. ' ' is reserved only for outdoor units capable of heat recovery.		Indicates malfunction and blinks if the unit stops operating due to the malfunction. (As for details, see "TROUBLE SHOOTING" in the operation manual attached to the indoor unit.)
7	DISPLAY ' ' (UNDER CENTRALIZED CONTROL)		
	When this display shows, the system is UNDER CENTRALIZED CONTROL. (This is not a standard specification)		

NOTE

- 1 Please note that the display shows all indications for the purpose of explanation only. This is contrary to actual running situations.

3 BRC3A61 - Simplified remote control for hotel applications


3 - 1 Dimensional drawing

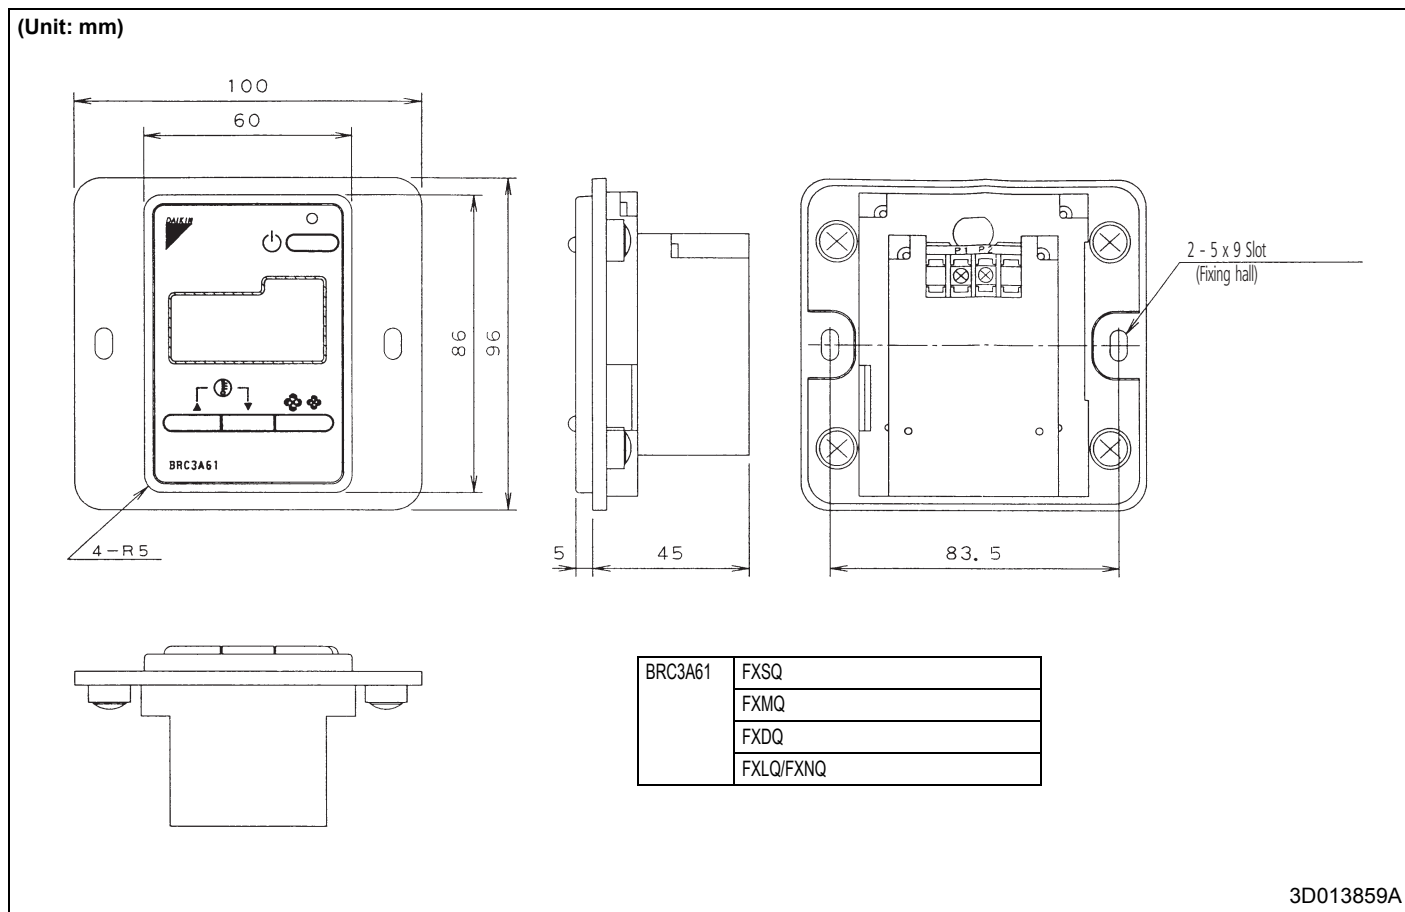

1
3

3 BRC3A61 - Simplified remote control for hotel applications

3 - 2 Explanation of buttons and functions

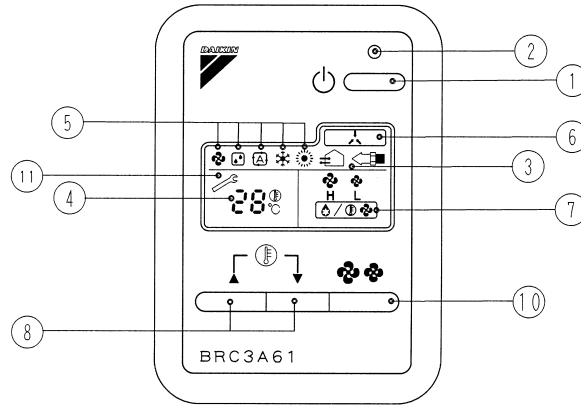

1
3

1	ON/OFF BUTTON	7	DISPLAY '🌀🌀' (FAN SPEED)
	Press the button and the system will start. Press the button again and the system will stop.		The display shows the set fan speed: 'HIGH' or 'LOW'.
2	OPERATION LAMP (RED)	8	DISPLAY '🧊🔥' (DEFROST/HOT START)
	The lamp lights up during operation or blinks if a malfunction occurs.		Indicates that defrost or hot start (during which the fan is stopped till the temperature of air supply rises enough at the start of a heating run) is in progress.
3	DISPLAY '🏠🌀' (VENTILATION / AIR CLEANING)	9	TEMPERATURE SETTING BUTTON
	This display shows that the total heat exchange unit is in operation. (These is an optional accessory).		Use this button for SETTING TEMPERATURE of the thermostat. ▲; Each press raises the set temperature by 1°C. ▼; Each press lowers the set temperature by 1°C. The variable temperature range is 16°C to 32°C.
4	DISPLAY '🌡️' (SET TEMPERATURE)	10	FAN SPEED CONTROL BUTTON
	This display shows the set temperature. Only given during a cooling or heating operation.		Press this button to select the fan speed, HIGH or LOW, of your choice.
5	DISPLAY '🌀🏠🌡️🌞🌙' (OPERATION MODE)	11	DISPLAY '🚨' (MALFUNCTION)
	This display shows the current OPERATION MODE. 🌞 is not available with outdoor units specially designed for cooling only. 🌙 is reserved only for heat recovery outdoor units.		Indicates malfunction and blinks if the unit stops operating due to the malfunction. (As for details, see "TROUBLE SHOOTING" in the operation manual attached to the indoor unit.)
6	DISPLAY '🏠' (UNDER CENTRALIZED CONTROL)		
	When this display shows, the system is UNDER CENTRALIZED CONTROL. (This is not a standard specification)		


NOTES

- Please note that the display shows all indications for the purpose of explanation only. This is contrary to actual running situations.
- This remote controller does not have "AIR FLOW DIRECTION ADJUST BUTTON." Don't operate the flap adjusting air flow direction by your hand. (FXFQ, FXCQ, FXAQ, FXKQ)

4 BRC1D61 - Wired remote control with weekly shedule timer

4 - 1 Dimensional drawing


(Unit: mm)

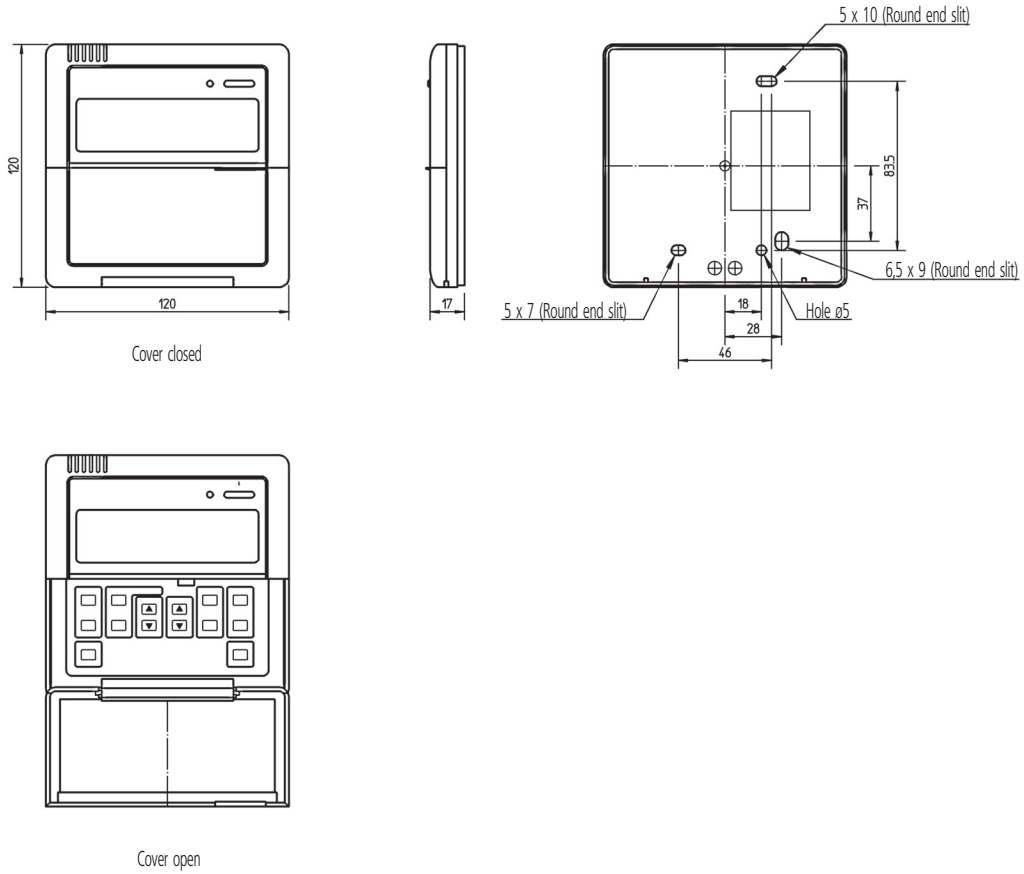

3TW23651-2

4 BRC1D61 - Wired remote control with weekly shedule timer

4 - 2 Explanation of buttons and functions

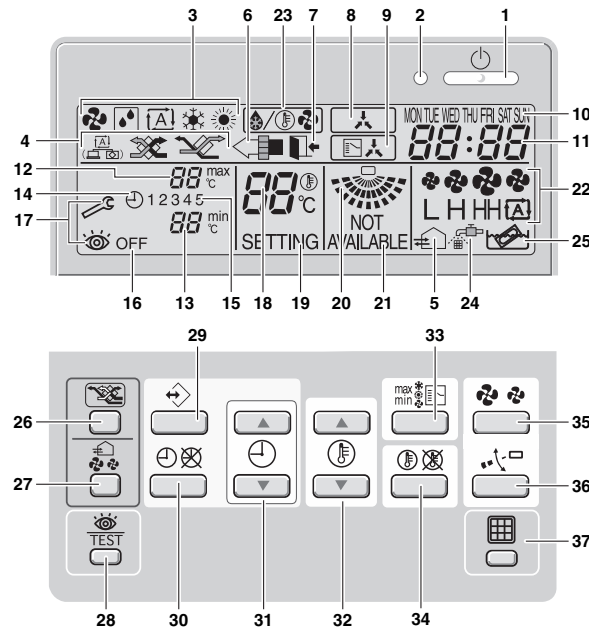


1	ON/OFF BUTTON ' '	13	MINIMUM SET TEMPERATURE ' 88°min '		
	Press the ON/OFF button to start or stop the system.		The minimum set temperature indicates the minimum set temperature when in limit operation.		
2	OPERATION LAMP ' '	14	SCHEDULE TIMER ICON ' '		
	The operation lamp lights up during operation or blinks if a malfunction occurs.		This icon indicates that the schedule timer is enabled.		
3	OPERATION MODE ICON ' '	15	ACTION ICONS ' 1 2 3 4 5 '		
	These icons indicate the current operation mode (FAN, DRY, AUTOMATIC, COOLING, HEATING).		These icons indicate the actions for each day of the schedule timer.		
4	VENTILATION MODE ICON ' '	16	OFF ICON ' OFF '		
	These icons indicate the current ventilation mode (HRV only) (AUTOMATIC, HEAT EXCHANGE, BYPASS).		This icon indicates that the OFF action is selected when programming the schedule timer.		
5	VENTILATION ICON ' '	17	INSPECTION REQUIRED ' ' and ' '		
	The ventilation icon appears when the ventilation is adjusted with the ventilation amount button (HRV only). Simultaneously, the ventilation amount is indicated by the fan speed icon (see 22).		These icons indicate that inspection is required. Consult your installer.		
6	AIR CLEANING ICON ' '	18	SET TEMPERATURE DISPLAY ' 27.8° '		
	This icon indicates that the air cleaning unit (option) is operational.		This indicates the current set temperature of the installation (not shown in LIMIT operation or in FAN or DRY mode).		
7	LEAVE HOME ICON ' '	19	SETTING ' SETTING '		
	The leave home icon shows the status of the leave home function.		Not used, for service purposes only.		
	ON		Leave home is enabled	20	AIR FLOW DIRECTION ICON ' '
	FLASHING		Leave home is active		This icon indicates the air flow direction (only for installations with motorised air flow flaps).
OFF	Leave home is disabled	21	NOT AVAILABLE ' NOT AVAILABLE '		
			This is displayed whenever a non-installed option is addressed or a function is not available.		
8	EXTERNAL CONTROL ICON ' '	22	FAN SPEED ICON ' '		
	This icon indicates that another controller with higher priority is controlling or disabling your installation.		This icon indicates the set fan speed.		
9	CHANGE-OVER UNDER CENTRALISED CONTROL ICON ' '	23	DEFROST/HOTSTART MODE ICON ' '		
	This icon indicates that the change-over of the installation is under centralised control assigned to another indoor unit or optional cool/heat selector connected to the outdoor unit (= master remote controller).		This icon indicates that the defrost/hotstart mode is active.		
10	DAY OF THE WEEK INDICATOR ' MON TUE WED THU FRI SAT SUN '	24	AIR FILTER CLEANING TIME ICON ' '		
	The day of the week indicator shows the current week day (or the set day when reading or programming the schedule timer).		This icon indicates the air filter must be cleaned. Refer to the manual of the indoor unit.		
11	CLOCK DISPLAY ' $88:88$ '	25	ELEMENT CLEANING TIME ICON ' '		
	The clock display indicates the current time (or the action time when reading or programming the schedule timer).		This icon indicates the element must be cleaned (HRV only).		
12	MAXIMUM SET TEMPERATURE ' 88°max '	26	VENTILATION MODE BUTTON ' '		
	The maximum set temperature indicates the maximum set temperature when in limit operation.		The ventilation mode button operates the HRV; refer to the HRV manual for more details.		

4 BRC1D61 - Wired remote control with weekly shedule timer

4 - 2 Explanation of buttons and functions


1
4

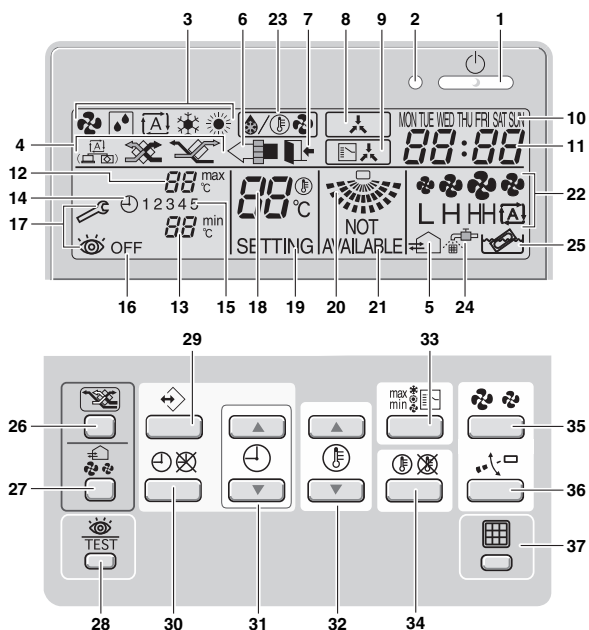

27	VENTILATION AMOUNT BUTTON ' '	33	OPERATION CHANGE/MIN-MAX BUTTON ' '
	This button sets the ventilation amount; refer to the HRV manual for more details.		This button is a multi-purpose button. Depending on the previous manipulations of the user, it can have following functions: 1 select the operation mode of the installation (FAN, DRY, AUTOMATIC, COOLING, HEATING) 2 toggle between minimum temperature and maximum temperature when in limit operation
28	INSPECTION/TEST OPERATION BUTTON ' TEST '	34	SETPOINT/LIMIT BUTTON ' '
	Not used, for service purposes only.		This button toggles between setpoint, limit operation or 'OFF' (programming mode only).
29	PROGRAMMING BUTTON ' '	35	FAN SPEED BUTTON ' '
	This button is a multi-purpose button. Depending on the previous manipulations of the user, the programming button can have various functions.		This button toggles between L (Low), H (High), HH (very High), (Automatic).
30	SCHEDULE TIMER BUTTON ' '	36	AIR FLOW DIRECTION ADJUST BUTTON ' '
	This button enables or disables the schedule timer.		This button enables to adjust the air flow direction.
31	TIME ADJUST BUTTON ' '	37	AIR FILTER CLEANING TIME ICON RESET BUTTON ' '
	These buttons are used to adjust the clock or, when in programming mode, to adjust the programmed action time. Both buttons have an auto-repeat function.		This button is used to reset the air filter cleaning time icon.
32	TEMPERATURE ADJUST BUTTON ' '		
	These buttons are used to adjust the current setpoint or, when in programming mode, to adjust the programmed setpoint temperature (step = 1°C). Both buttons are also used to adjust the day of the week.		


5 BRC4C61,62,63,64,65,66 - Infrared remote control

5 - 1 Dimensional drawing

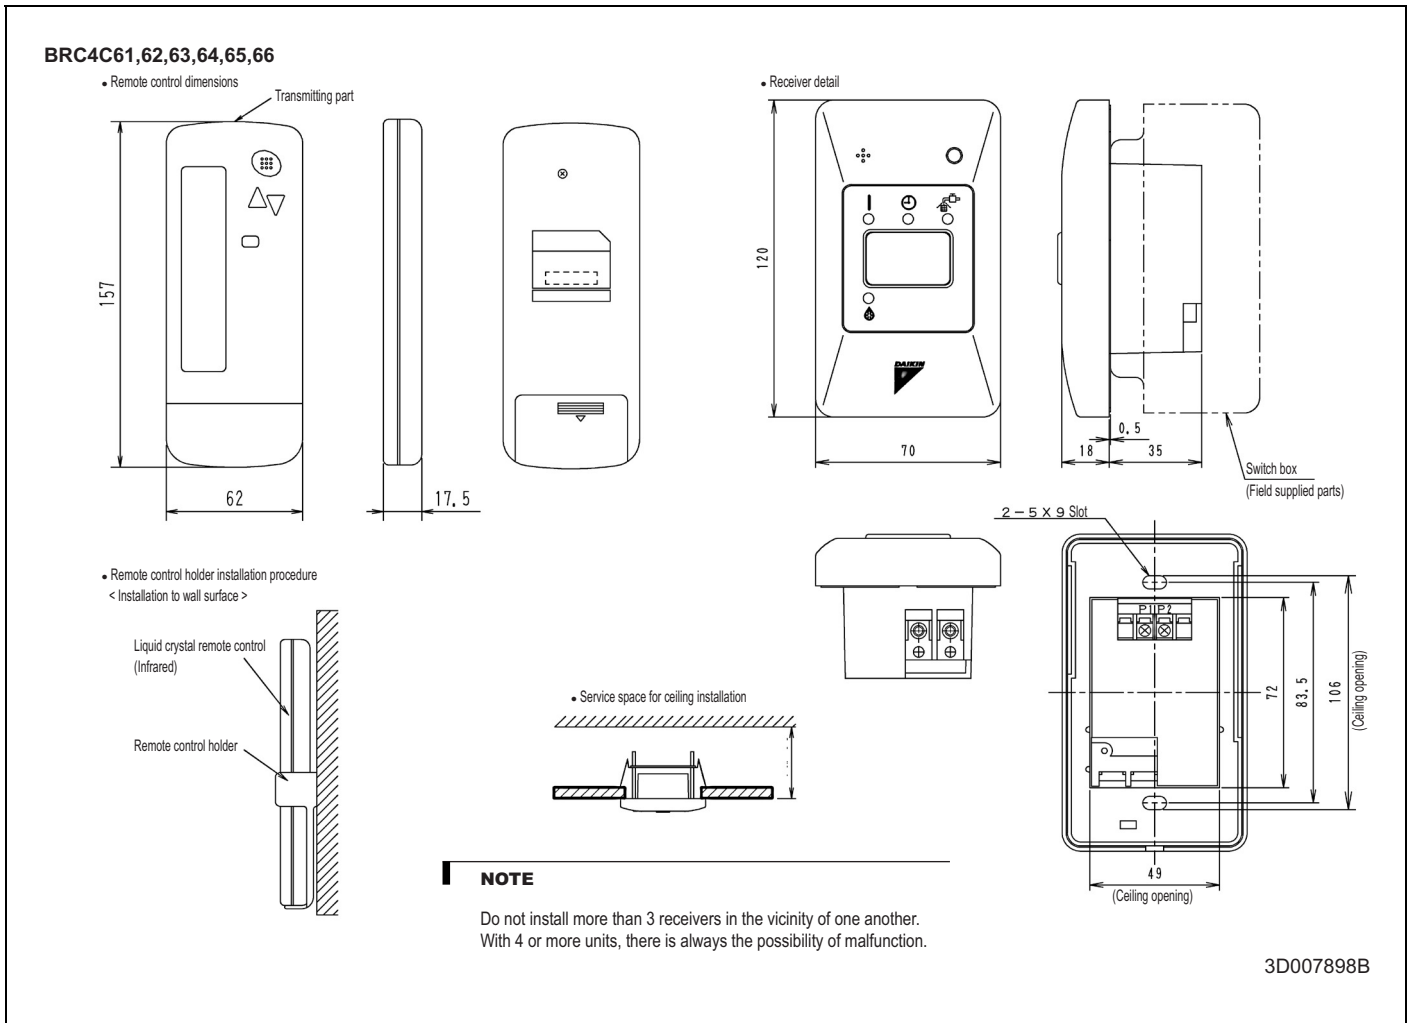

5 BRC4C61,62,63,64,65,66 - Infrared remote control

5 - 2 Explanation of buttons and functions

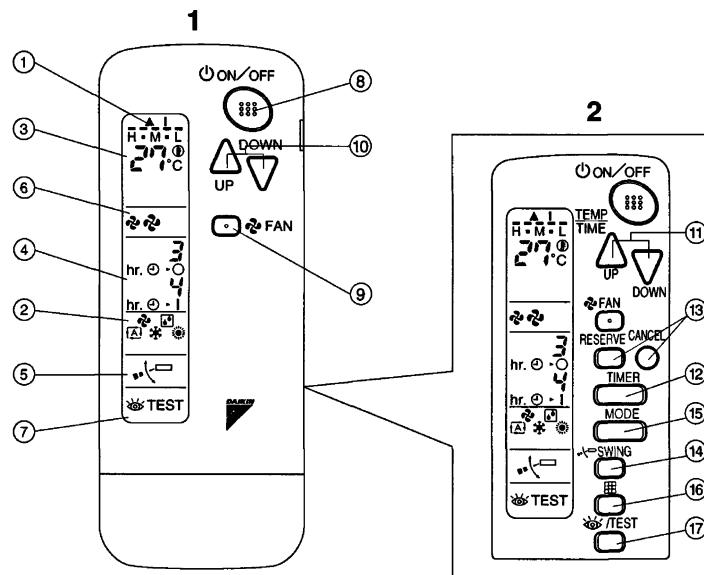

1	DISPLAY '7' (SIGNAL TRANSMISSION)	13	TIMER RESERVE/CANCEL BUTTON
	This lights up when a signal is being transmitted.	14	AIR FLOW DIRECTION ADJUST BUTTON (BRC4C61,63 only)
2	DISPLAY 'H-M-L' (OPERATION MODE)	15	OPERATION MODE SELECTOR BUTTON
	This display shows the current OPERATION MODE. For cooling only type, 'H-M-L' (Auto) and 'L' (Heating) are not installed.	16	FILTER SIGN RESET BUTTON
3	DISPLAY '27.0' (SET TEMPERATURE)	17	INSPECTION/TEST OPERATION BUTTON
	This display shows the set temperature.	17	This button is used only by qualified service persons for maintenance purposes.
4	DISPLAY '3hr 00' (PROGRAMMED TIME)	18	EMERGENCY OPERATION SWITCH
	This display shows PROGRAMMED TIME of the system start or stop.	18	This switch is readily used if the remote control does not work.
5	DISPLAY '▲□' (AIR FLOW FLAP) (BRC4C61,63 only)	19	RECEIVER
	DISPLAY '2' (FAN SPEED)	19	This receives the signals from the remote control.
6	DISPLAY '2' (FAN SPEED)	20	OPERATING INDICATOR LAMP (RED)
	The display shows the set fan speed.	20	This lamp stays lit while the air conditioner runs. It flashes when the unit is in trouble.
7	DISPLAY 'TEST' (INSPECTION/TEST OPERATION)	21	TIMER INDICATOR LAMP (GREEN)
	When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.	21	This lamp stays lit while the timer is set.
8	ON/OFF BUTTON	22	AIR FILTER CLEANING TIME INDICATOR LAMP (RED)
	Press the button and the system will start. Press the button again and the system will stop.	22	Lights up when it is time to clean the air filter.
9	FAN SPEED CONTROL BUTTON	23	DEFROST LAMP (ORANGE)
	Press this button to select the fan speed, HIGH or LOW, of your choice.	23	Lights up when the defrosting operation has started. (For straight cooling type this lamp does not turn on.)
10	TEMPERATURE SETTING BUTTON	24	FAN/AIR CONDITIONING SELECTOR SWITCH
	Use this button for SETTING TEMPERATURE. (Operates with the front cover of the remote control closed.)	24	Set the switch to 'FAN' (FAN) for FAN and 'A/C' (A/C) for HEAT or COOL.
11	PROGRAMMING TIME BUTTON	25	COOL/HEAT CHANGEOVER SWITCH
	Use this button for programming "START and/or STOP" time. (Operates with the front cover of the remote control closed.)	25	Set the switch to 'COOL' (COOL) for COOL and 'HEAT' (HEAT) for HEAT.
12	TIMER MODE START/STOP BUTTON		

NOTES

- Please note that the display shows all indications for the purpose of explanation only. This is contrary to actual running situations.
- Figure 2 shows the remote control with the front cover opened.

6 BRC7C62,67 - Infrared remote control

6 - 1 Dimensional drawing

(Unit: mm)

Remote control dimensions

Transmitting part

157

62

17.5

Remote control holder installation procedure (installation to wall surface)

Liquid crystal infrared remote control

Remote control holder

Receiver installation procedure

Receiver

Decoration panel


Receiver detail

BRC7C62	Heat pump	FXCQ
BRC7C67	Cooling only	

3D007588A

6 BRC7C62,67 - Infrared remote control

6 - 2 Explanation of buttons and functions

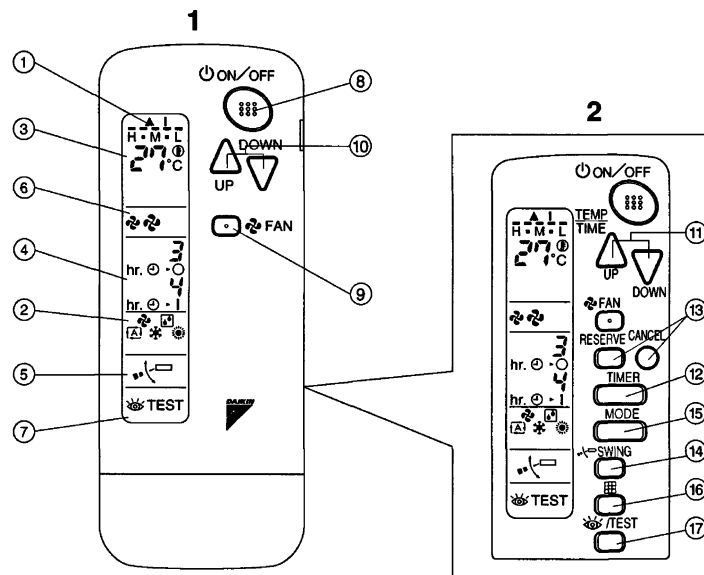

1	DISPLAY '7' (SIGNAL TRANSMISSION)	13	TIMER RESERVE/CANCEL BUTTON
	This lights up when a signal is being transmitted.	14	AIR FLOW DIRECTION ADJUST BUTTON
2	DISPLAY 'H-M-L' (OPERATION MODE)	15	OPERATION MODE SELECTOR BUTTON
	This display shows the current OPERATION MODE. For cooling only type, 'H-M-L' (Auto) and 'H' (Heating) are not installed.	16	Press this button to select OPERATION MODE.
3	DISPLAY 'TEMP' (SET TEMPERATURE)	17	INSPECTION/TEST OPERATION BUTTON
	This display shows the set temperature.	17	This button is used only by qualified service persons for maintenance purposes.
4	DISPLAY 'hr.' (PROGRAMMED TIME)	18	EMERGENCY OPERATION SWITCH
	This display shows PROGRAMMED TIME of the system start or stop.	18	This switch is readily used if the remote control does not work.
5	DISPLAY 'AIR FLOW' (AIR FLOW FLAP)	19	RECEIVER
	This display shows the set fan speed.	19	This receives the signals from the remote control.
6	DISPLAY 'FAN' (FAN SPEED)	20	OPERATING INDICATOR LAMP (RED)
	The display shows the set fan speed.	20	This lamp stays lit while the air conditioner runs. It flashes when the unit is in trouble.
7	DISPLAY 'TEST' (INSPECTION/TEST OPERATION)	21	TIMER INDICATOR LAMP (GREEN)
	When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.	21	This lamp stays lit while the timer is set.
8	ON/OFF BUTTON	22	AIR FILTER CLEANING TIME INDICATOR LAMP (RED)
	Press the button and the system will start. Press the button again and the system will stop.	22	Lights up when it is time to clean the air filter.
9	FAN SPEED CONTROL BUTTON	23	DEFROST LAMP (ORANGE)
	Press this button to select the fan speed, HIGH or LOW, of your choice.	23	Lights up when the defrosting operation has started. (For straight cooling type this lamp does not turn on.)
10	TEMPERATURE SETTING BUTTON	24	FAN/AIR CONDITIONING SELECTOR SWITCH
	Use this button for SETTING TEMPERATURE. (Operates with the front cover of the remote control closed.)	24	Set the switch to "FAN" (FAN) for FAN and "A/C" (A/C) for HEAT or COOL.
11	PROGRAMMING TIMER BUTTON	25	COOL/HEAT CHANGEOVER SWITCH
	Use this button for programming "START and/or STOP" time. (Operates with the front cover of the remote control closed.)		Set the switch to "COOL" (COOL) for COOL and "HEAT" (HEAT) for HEAT.
12	TIMER MODE START/STOP BUTTON		

NOTES

- Please note that the display shows all indications for the purpose of explanation only. This is contrary to actual running situations.
- Figure 2 shows the remote control with the front cover opened.

7 BRC7F635F,634F - Infrared remote control

7 - 1 Dimensional drawing

FXFQ-P

Remote control dimensions

Transmitting part

157

62

17.5

Receiver installation procedure

Pipe connection side

Drain connection side

Receiver

Decoration panel

Remote control holder installation procedure (installation to wall surface)

Liquid crystal - remote control (wireless)

Remote control holder

Receiver detail

Receiver detail


Wireless remote control kit for each decoration panel

Wireless remote control kit	Decoration panel
BRC7F634F BRC7F635F	BYCP125K-W1

3D056851

7 BRC7F635F,634F - Infrared remote control

7 - 2 Explanation of buttons and functions

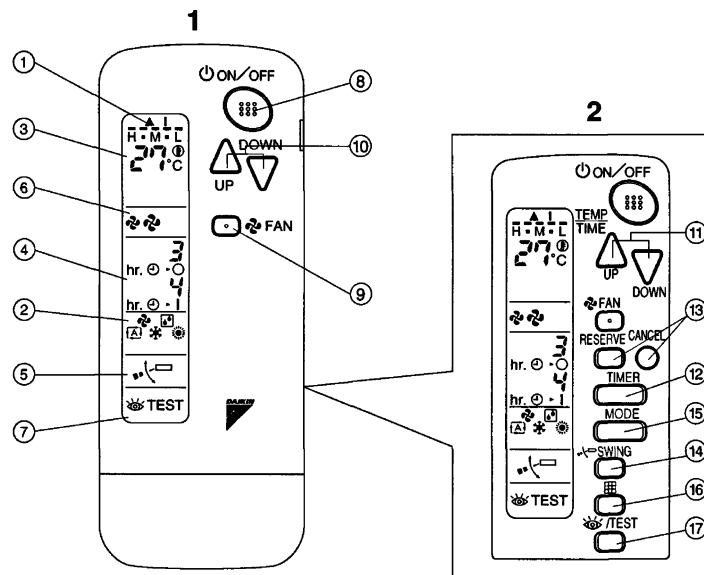

1	DISPLAY '7' (SIGNAL TRANSMISSION)	13	TIMER RESERVE/CANCEL BUTTON
	This lights up when a signal is being transmitted.	14	AIR FLOW DIRECTION ADJUST BUTTON
2	DISPLAY 'H-M-L' (OPERATION MODE)	15	OPERATION MODE SELECTOR BUTTON
	This display shows the current OPERATION MODE. For cooling only type, 'H-M-L' (Auto) and 'L' (Heating) are not installed.	16	FILTER SIGN RESET BUTTON
3	DISPLAY '27.0' (SET TEMPERATURE)	17	INSPECTION/TEST OPERATION BUTTON
	This display shows the set temperature.	17	This button is used only by qualified service persons for maintenance purposes.
4	DISPLAY '3hr 00' (PROGRAMMED TIME)	18	EMERGENCY OPERATION SWITCH
	This display shows PROGRAMMED TIME of the system start or stop.	18	This switch is readily used if the remote control does not work.
5	DISPLAY '▲' (AIR FLOW FLAP)	19	RECEIVER
6	DISPLAY '2' (FAN SPEED)	20	OPERATING INDICATOR LAMP (RED)
	The display shows the set fan speed.	20	This lamp stays lit while the air conditioner runs. It flashes when the unit is in trouble.
7	DISPLAY 'TEST' (INSPECTION/TEST OPERATION)	21	TIMER INDICATOR LAMP (GREEN)
	When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.	21	This lamp stays lit while the timer is set.
8	ON/OFF BUTTON	22	AIR FILTER CLEANING TIME INDICATOR LAMP (RED)
	Press the button and the system will start. Press the button again and the system will stop.	22	Lights up when it is time to clean the air filter.
9	FAN SPEED CONTROL BUTTON	23	DEFROST LAMP (ORANGE)
	Press this button to select the fan speed, HIGH or LOW, of your choice.	23	Lights up when the defrosting operation has started. (For straight cooling type this lamp does not turn on.)
10	TEMPERATURE SETTING BUTTON	24	FAN/AIR CONDITIONING SELECTOR SWITCH
	Use this button for SETTING TEMPERATURE. (Operates with the front cover of the remote control closed.)	24	Set the switch to 'FAN' (FAN) for FAN and 'A/C' (A/C) for HEAT or COOL.
11	PROGRAMMING TIME BUTTON	25	COOL/HEAT CHANGEOVER SWITCH
	Use this button for programming "START and/or STOP" time. (Operates with the front cover of the remote control closed.)	25	Set the switch to 'COOL' (COOL) for COOL and 'HEAT' (HEAT) for HEAT.
12	TIMER MODE START/STOP BUTTON		

NOTES

- Please note that the display shows all indications for the purpose of explanation only. This is contrary to actual running situations.
- Figure 2 shows the remote control with the front cover opened.

8 BRC7C529W,528W - Infrared remote control

8 - 1 Dimensional drawing

(Unit: mm)

• Remote control dimensions

• Remote control holder installation procedure
(installation to wall surface)

• Receiver installation procedure

• Receiver installation procedure

• Infrared remote control kit for each indoor unit

BRC7E529W	Cooling only	FXUQ
BRC7C528W	Heat pump	

3D014035A

1


8

9 BRC7E63W,66 - Infrared remote control


9 - 1 Dimensional drawing

BRC7EA63W,66


• Remote control dimensions

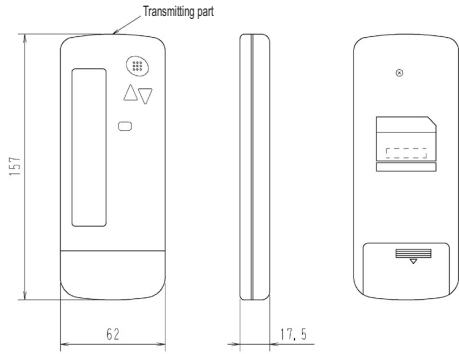


• Receiver installation procedure

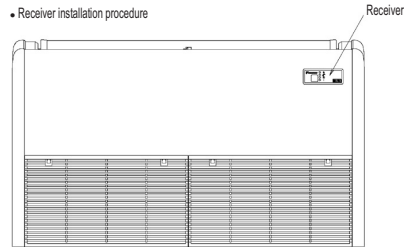

• Remote control holder installation procedure
< Installation to wall surface >

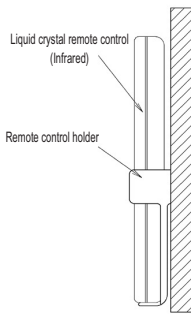


• Receiver detail

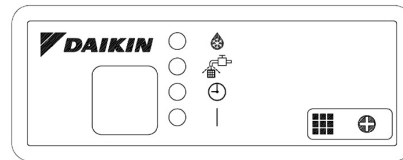

3D028963B

9 BRC7E63W,66 - Infrared remote control

9 - 2 Explanation of buttons and functions

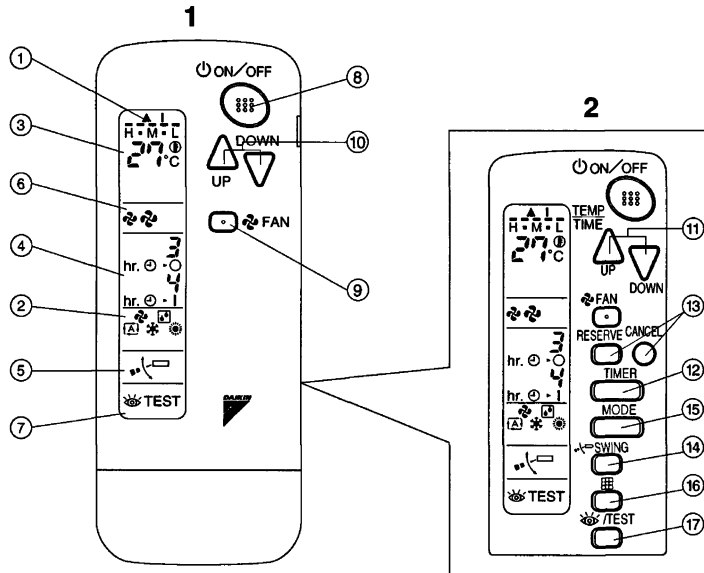

1	DISPLAY '7' (SIGNAL TRANSMISSION)	13	TIMER RESERVE/CANCEL BUTTON
	This lights up when a signal is being transmitted.	14	AIR FLOW DIRECTION ADJUST BUTTON
2	DISPLAY 'AUTO', 'HEAT', 'COOL' (OPERATION MODE)	15	OPERATION MODE SELECTOR BUTTON
	This display shows the current OPERATION MODE. For cooling only type, 'HEAT' (Auto) and 'COOL' (Heating) are not installed.	16	FILTER SIGN RESET BUTTON
3	DISPLAY '27.0' (SET TEMPERATURE)	17	INSPECTION/TEST OPERATION BUTTON
	This display shows the set temperature.	18	EMERGENCY OPERATION SWITCH
4	DISPLAY '2hr', '4hr' (PROGRAMMED TIME)	19	RECEIVER
	This display shows PROGRAMMED TIME of the system start or stop.	20	OPERATING INDICATOR LAMP (RED)
5	DISPLAY 'FLAP' (AIR FLOW FLAP)	21	TIMER INDICATOR LAMP (GREEN)
	DISPLAY 'FAN' (FAN SPEED)	22	AIR FILTER CLEANING TIME INDICATOR LAMP (RED)
6	The display shows the set fan speed.	23	DEFROST LAMP (ORANGE)
	DISPLAY 'TEST' (INSPECTION/TEST OPERATION)	24	FAN/AIR CONDITIONING SELECTOR SWITCH
7	When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.	25	COOL/HEAT CHANGEOVER SWITCH
	ON/OFF BUTTON		
8	Press the button and the system will start. Press the button again and the system will stop.		
	FAN SPEED CONTROL BUTTON		
9	Press this button to select the fan speed, HIGH or LOW, of your choice.		
	TEMPERATURE SETTING BUTTON		
10	Use this button for SETTING TEMPERATURE. (Operates with the front cover of the remote control closed.)		
	PROGRAMMING TIME BUTTON		
11	Use this button for programming "START and/or STOP" time. (Operates with the front cover of the remote control opened.)		
	TIMER MODE START/STOP BUTTON		

NOTES





- Please note that the display shows all indications for the purpose of explanation only. This is contrary to actual running situations.
- Figure 2 shows the remote control with the front cover opened.

10 BRC7E618,619 - Infrared remote control

10 - 1 Dimensional drawing

1
10

BRC7E618,619

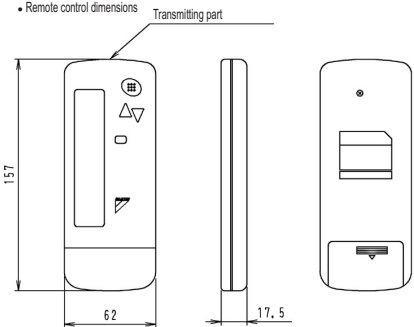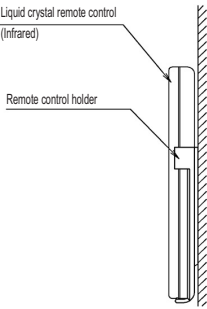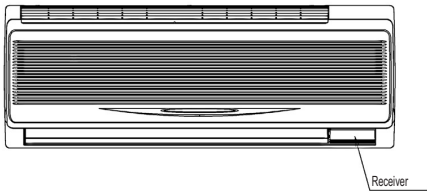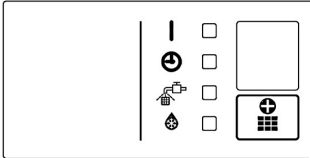








- Remote control dimensions
 
- Remote control holder installation procedure
< Installation to wall surface >
 
- Receiver installation procedure
 
- Receiver detail
 
- Infrared remote control kit

Infrared remote control kit		Indoor unit
BRC7E618	BRC7EA618 (For HIP)	FXAQ

3D034905B

11 Survey of various control systems

For more effective localized environmental control Daikin offers various control systems such as single or double remote control or centralized control. This enables the construction of a variety of operational control systems which can be adapted for various uses from remote control to building automation (BA).

Control method	Objective / use	Unit name and model	Outline of system	Function	Standard number of units
Local operation of remote control	Example of typical use			<ul style="list-style-type: none"> Operational functions <ul style="list-style-type: none"> - Start/Stop (ON/OFF) - Operation mode selection - Temperature setting - Timer setting (Settings in units of 1 hour up to a maximum of 72 hours) - Air flow setting - Air flow direction adjustment (Swing flap) - Ventilation mode selection - Ventilation air flow selection - Indication function - Operating display - Program dry function display - Deros/Hot start display - Filter sign - Temperature setting display - Timer display - Air flow display - Abnormal operation display In case of group control all the indoor units in the system are set to the same value and each unit is controlled individually by its internal thermostat. (Not by the thermostat equipped in remote control) In common case of double remote control the most recent takes priority. (Selection between master and slave control is essential) Only in case of BRC1D61: <ul style="list-style-type: none"> - Includes ventilation mode and air flow rate - 24-hour clock function (1-hour backup for power failures) - Programming function for each day of the week - Scheduling possible of start/stop and temperature limit (5 settings/day) - Programming can be enabled or disabled - Copy function for programmed schedules 	1 remote control controls 1 indoor unit
Remote operation of remote control	For control from a distant place	 BRC1D61			
2 remote controls	For control from 2 places (remote or local)	 ★2 BRC2C51			2 remote controls control 1 indoor unit
Group control (1)	Control of several indoor units on a floor at the same time				1 remote control controls up to 16 indoor units simultaneously
Group control by 2 remote controls (1)	For above control from distant place	Connected to indoor units • For group control it is connected to 1 unit out of the group			2 remote controls control up to 16 indoor units from 2 different places simultaneously
Forced OFF command from outside	If forgotten to turn equipment off, or in case of emergency	In case of control by 2 remote controls both controls are connected to the indoor unit		<ul style="list-style-type: none"> Forcibly stops indoor unit operation by command from outside. During remote control group control, input a command from outside to any one of the indoor units. 	Same as the number of units controlled by remote control
Combining control by remote control	Operation of other equipment combined with the operation of indoor unit			<ul style="list-style-type: none"> Operates HRV in accordance with indoor unit operation. In case of group control, the thermostat equipped in remote control is not available. 	Same as the number of units controlled by remote control

NOTES

- ★1 In case of group control, the remote control used as master control must be selected with auto-swing function (BRC1A61). When the group has cassette or ceiling suspended or cassette corner or wall mounted models.
- ★2 In case of using BRC2A51 (S-REMOCON) to heat recovery series, be sure not to use this independently. Use with other remote controls (BRC1A51-52, BRC1C62 or KRC19-26 or DCS302A51).

In all of us,
a green heart



Daikin's unique position as a manufacturer of air conditioning equipment, compressors and refrigerants has led to its close involvement in environmental issues. For several years Daikin has had the intention to become a leader in the provision of products that have limited impact on the environment. This challenge demands the eco design and development of a wide range of products and an energy management system, resulting in energy conservation and a reduction of waste.



VRV® products are not within the scope of the Eurovent certification programme.

The present publication is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V. Daikin Europe N.V. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Europe N.V.

Daikin products are distributed by: