

YUTAKI SERIES



Service manual

Air to water heat pump

- RHUE3AVHN
- RHUE4AVHN
- RHUE5AVHN
- RHUE5AHN



HITACHI

Inspire the Next

Specifications in this manual are subject to change without notice in order that HITACHI may bring the latest innovations to their customers.

Whilst every effort is made to ensure that all specifications are correct, printing errors are beyond Hitachi's control; Hitachi cannot be held responsible for these errors.

Contents

Model codification and accessory codes	0
Units installation	1
Water pipe installation	2
Electrical wiring	3
Controller pack	4
Units control system	5
Available optional functions	6
Test run	7
Troubleshooting	8
Spare parts	9
Servicing	10

GENERAL INDEX

0. Model codification and accessory codes	12
1. Units installation	14
1.1. RHUE(3~5)A(V)HN	16
1.1.1. Transportation	16
1.1.2. Center of gravity	17
1.1.3. Installation space (Initial check)	17
1.1.4. Place provision	18
1.1.5. Installation of wind guard and snow protection hood	21
2. Water pipe installation	26
2.1. General notes	27
2.2. Piping work connection considerations	28
2.2.1. Minimum water volume description	28
2.2.2. Correction factor due to use of glycol	31
2.3. Water control	31
2.4. Water check valve	32
2.5. Pump kit pipe installation (accessory)	33
2.5.1. Water pump kit (Hitachi supplied)	33
2.5.2. Pump kit assembly	35
2.5.3. Installation	35
2.6. Water electric heater installation (accessory)	36
2.6.1. Three-stage water heater assembly	36
2.6.2. Water electric heater (Hitachi supplied)	37
2.7. Drain piping	39
3. Electrical wiring	40
3.1. General check	41
3.2. Electrical wiring connection	42
3.2.1. Field minimum wire sizes for the power source	43
3.2.2. Main switches and fuses	43
3.3. Setting the DIP switches	44
3.4. LED indication	48
3.5. Pump electrical installation	49
3.5.1. Electrical connection	50
3.5.2. Operation	50

0

3.5.3.	Troubleshooting.....	51
3.6.	Heater electric installation	51
3.7.	Electrical wiring between Yutaki and System Controller	53
3.8.	Electrical wiring diagrams.....	53
3.8.1.	Electrical wiring diagram for models RHUE(3~5)AVHN	54
3.8.2.	Electrical wiring diagram for RHUE5AHN	55
4.	Controller pack	56
4.1.	System description and configurations.....	59
4.1.1.	Description	59
4.1.2.	System overview	59
4.1.3.	Contents of the controller pack	60
4.1.4.	Quick-start installation steps	60
4.2.	System controller.....	61
4.2.1.	Software version.....	61
4.2.2.	System controller - overview	61
4.2.3.	Operation & user interface	62
4.2.4.	Abbreviations & terminology	62
4.2.5.	System component connections	65
4.2.5.1.	Heat pump.....	65
4.2.5.2.	Electric heater	65
4.2.5.3.	Boiler	66
4.2.5.4.	Mixing valve.....	66
4.2.5.5.	Secondary pump	66
4.2.5.6.	Domestic hot water (DHW).....	67
4.2.5.7.	RF receiver box.....	67
4.2.5.8.	DHW electric heater	67
4.2.5.9.	DHW time clock.....	67
4.2.5.10.	Tariff-switching device	68
4.2.5.11.	Temperature sensors.....	68
4.2.6.	User interface	69
4.2.6.1.	Display.....	69
4.2.6.2.	Controls.....	69
4.2.7.	Installation configuration settings	70
4.2.7.1.	Reviewing and setting the installer parameters	70
4.2.7.2.	Installer parameter list.....	71
4.2.8.	System testing.....	72
4.2.8.1.	System start-up	72
4.2.8.2.	System test.....	73
4.2.8.3.	Reviewing the operational data	73
4.2.8.4.	Manually overriding the outputs	74
4.2.9.	Troubleshooting.....	75
4.2.9.1.	Fault codes and diagnostics.....	75
4.2.9.2.	Reset to factory default condition	75

4.3. Applications	76
4.3.1. Application configurations	76
4.3.2. Principle of Bi-Valent or Mono-Energetic Operation	76
4.3.3. Mono-valent systems 'conf 1'	78
4.3.4. Mono-energetic systems 'conf 2'	79
4.3.5. Bi-Valent parallel systems - direct 'conf 3'	80
4.3.6. Bi-Valent system - parallel operation - mixing loop 'conf 4'	81
4.3.7. Bi-Valent system - serial operation 'conf 5'	82
4.4. Supply setpoint calculation	83
4.5. Heating control functions	84
4.5.1. Heating circuit - general	84
4.5.2 Heating characteristic curve (OTC control)	84
4.5.2.1. Room setpoint parallel shift	88
4.5.2.2. Room temperature compensation	89
4.5.3. Heating circuit minimum/maximum temperature limits	89
4.5.4. Heating circuit (secondary) pump	90
4.5.5. Automatic no-load function	90
4.5.6. Floor screed drying function	91
4.5.7. System frost protection	91
4.5.8. Anti-seize protection for pumps and valves	92
4.6. DHW control functions	92
4.6.1. DHW Storage Tank Loading	92
4.6.2. DHW Control	93
4.6.3. Maximum DHW Loading Time	94
4.6.4. DHW Electric Heater	95
4.6.5. Using the Boiler for DHW loading	96
4.6.6. Response of the Heat pump to a DHW demand	96
4.6.7. DHW Time Program	96
4.7. Heatpump control functions	97
4.7.1. Heatpump Control	97
4.7.2 Heatpump Setting Control Signal	98
4.7.3. Heatpump Sensor Offset	99
4.7.4. Heatpump Maximum Return High Limit	99
4.7.5. Heatpump Operating Limits	100
4.7.6 Tariff Switch (Heat Pump blocking) Input	100
4.8. Boiler control functions	101
4.8.1. Boiler Control	101
4.8.2. Supply-Return Difference Check	102
4.8.3. Boiler Minimum On / Off Times	103
4.8.4. Boiler Waiting Time	103
4.8.5. Maximum Outdoor Temperature for Boiler Operation	104
4.9. Electric heater control functions	104
4.9.1. Electric Heater Control	104
4.9.2. Supply-Return Difference Check	106
4.9.3. Electric Heater Waiting Time	107
4.9.4. Electric Heater Return High Limit Check	107

4.9.5. Maximum Outdoor Temperature for Electrical Heater Operation	108
4.10. Mixing valve control functions	108
4.10.1. Mixing Valve Control.....	108
4.10.2. Mixing / Bypass Valve Control.....	108
4.10.3. Mixed Heating Circuit Maximum Temperature Limit Protection.....	109
4.11. General functions	109
4.11.1. System Frost Protection.....	109
4.11.2. Automatic Summer Switch-Off	110
4.11.3. Pump and Valve Seizure Protection.....	110
4.11.4. Screed function (drying for new floors)	110
4.12. Parameter tables	111
4.12.1. Installer Parameters	111
4.12.2. Engineering Parameters	113
4.13. Conversion table: heat pump supply temperature to ma.....	114
4.14. Sensor resistance tables	115
4.15. Technical data	116
4.15.2. System Controller (XEK23232 A).....	116
4.15.2. Water Temperature Sensor (XEK35524 A)	116
4.15.3. Outdoor Temperature Sensor (XEK35438 A).....	116
4.16. System MMI Pack (Room unit and RF receiver).....	117
4.16.1. Room Unit installation guide	117
4.16.1.1. Description	117
4.16.1.2. Installation information	117
4.16.1.3. Installing the System MMI Pack	118
4.16.1.4. Installing the RF Receiver	118
4.16.2. Installing the Room Unit	119
4.16.2.1. Power up	119
4.16.2.2. RF Communication check (test mode).....	120
4.16.2.3. Locating the Room Unit.....	120
4.16.3. Communication loss	121
4.16.4. Installer mode.....	121
4.16.4.1. Entering installer mode.....	122
4.16.4.2. Fail-Safe mode setup	122
4.16.4.3. Using the Room Unit for specific applications	122
4.16.4.4. Using the special features of the Room Unit.....	123
4.16.5. Installer parameters table.....	123
4.16.5.1. Category 1 - Room Unit settings	123
4.16.5.2. Category 2 - System settings	124
4.16.6. Binding / Rebinding procedure	125
4.16.7. Technical data	126
4.16.7.1. Specifications	126
4.16.7.2. Standards, approvals and function definition	126
4.16.8. Room Unit user guide	127
4.16.8.1. Setting-up.....	128
4.16.8.2. Programming.....	129
4.16.8.3. Operating.....	131

4.16.8.4. Troubleshooting System MMI Pack.....	132
4.16.8.5. Diagnostic mode.....	132
4.16.8.6. FAQ's.....	133
4.17. Sensor pack	133
4.17.1. Water Temperature Sensor	133
4.17.2. Outside Temperature Sensor	134
5. Units control system	136
5.1. Device control system	137
5.2. Yutaki unit PCB	138
5.3. Safety and control device setting	139
6. Available optional functions	140
6.1. Freeze protection	141
6.2. Restart after power failure	141
7. Test run	142
7.1. Checking procedure before the test run	143
7.1.1. Check before start up.....	144
7.2. Test run procedure for Yutaki	145
8. Troubleshooting	146
8.1. Unit and System controller - Power Supply failure	147
8.1.1. Abnormal operation of the devices.....	149
8.2. Initial troubleshooting	155
8.2.1. Troubleshooting by alarm code	157
8.2.2. Incidents of operation.....	196
8.3. Failure diagnosis method	197
8.4. Checking procedure for main parts	199
8.4.1. RHUE(3~5)AVHN. Procedure for checking the DIP-IPM.	199
8.4.2. RHUE5AHN. Procedure for checking the ISPM.....	201
8.4.3. Checking capacitors CB1 & CB2.	203
8.4.4. Fault diagnosis of DC fan motor.....	204
9. Spare parts	206
9.1. RHUE(3~5)AVHN	207
9.2. RHUE5AHN.....	208
9.3. RHUE(3~5)A(V)HN	209

10. Servicing	210
10.1. RHUE(3~5)A(V)HN	212
10.1.1. Removing service cover	212
10.1.2. Removing air outlet grille.....	212
10.1.3. Removing upper cover	213
10.1.4. Removing the lower part of service panel and rear panel.....	213
10.1.5. Removing Yutaki fan motor	214
10.1.7. Removing the compressor	215
10.1.6. Mounting Yutaki fan motor.....	215
10.1.8. Removing high pressure switch	218
10.1.9. Opening electrical box (P-mounting plate)	219
10.1.10. Removing the coils for the reversing and solenoid valves	220
10.1.11. Removing electronic expansion valve coils.....	221
10.1.12. Removing pressure switches	222
10.1.13. Removing reversing valve	223
10.1.14. Removing expansion valve	223
10.1.15. Removing solenoid valve	224
10.1.16. Removing electrical components	225
10.1.17. Removing inverter components	226
10.1.18. Removing the ISPM	227
10.1.19. Removing the DIP-IPM.....	228
10.1.20. Removing the electrical-noise filter	229
10.1.21. Removing other electrical components	230

0. MODEL CODIFICATION AND ACCESSORY CODES





◆ Unit code list

List of air to water units and accessories available in this service manual.


YUTAKI RHUE UNITS

AVHN UNITS		AHN UNITS	
Unit	Code	Unit	Code
RHUE3AVHN	9E311100		
RHUE4AVHN	9E411100		
RHUE5AVHN	9E511100	RHUE5AHN	9E531100

	
☀ 1~	☀ 3N~

Meaning of model codification:

RHUE 5 A V H N

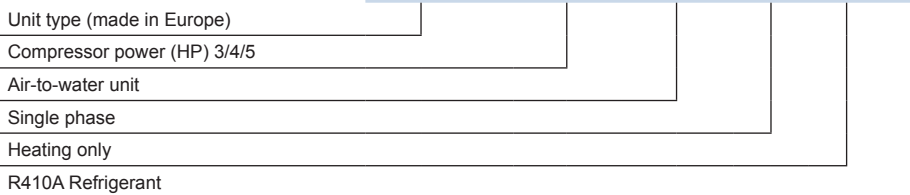

LIST OF ACCESSORY CODES

Name	Description	Code	Figure
STE1	Water temperature sensor	9E500004	
RMPID1	Extension controller	9E500005	
CCW11	Pump kit 1	9E500001	
CCW21	Pump kit 2	9E500002	
EH61	Heater 6 kW	EH61	
BDHM1	Hydraulic separator	BDHM1	
VID3V1	3-way valve	VID3V1	
CDH2Z1	Disconnection vessel	CDH2Z1	
ASMSH1	Aquastat	ASMSH1	

1. UNITS INSTALLATION

This chapter provides information concerning the installation of Yutaki units.

CONTENTS

1.1. RHUE(3~5)A(V)HN	16
1.1.1. Transportation	16
1.1.2. Center of gravity	17
1.1.3. Installation space (Initial check)	17
1.1.4. Place provision	18
1.1.5. Installation of wind guard and snow protection hood.	21

**WARNING**


- For easy operation and maintenance, install the Yutaki unit with sufficient clearance around it as shown in the next pages.
- Install the unit where good ventilation is available.
- Do not install the unit where exists a high level of oil mist, salty air or sulphurous atmosphere.
- Install the unit as far as possible (being at least 3 meters) from electromagnetic wave radiator, such as medical equipment.
- When installing more than one unit together, keep clearance of more than 50 mm between units and avoid obstacles that could hamper air intake.
- Install the unit in the shade or not exposed to direct sunshine or direct radiation from high temperature heat source.
- Do not install the unit in a place where a seasonal wind might directly blow into the outdoor fan.
- Use of inflammable agent may cause explosion or fire. For cleaning operation, use non-inflammable and nontoxic cleaning liquid.
- Work with sufficient ventilation, for working in an enclosed space could cause oxygen deficiency. Toxic gas may be produced when cleaning agent is heated to high temperature by, e.g., being exposed to fire.
- Cleaning liquid shall be collected after cleaning operation.
- In order to avoid electric shock or fire, pay attention not to clamp cables when attaching the service cover.

**CAUTION**

- Make sure that the foundation is flat, levelled and strong enough.
- Install the unit in a restricted area not accessible by the general public.
- Aluminium fins have very sharp edges. Pay attention to the fins in order to avoid injury.
- This appliance is not intended to be used by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision and instruction concerning the use of the appliance by a person responsible for their safety.
- Before obtaining access to terminals or performing any maintenance operation, turn OFF all power switches and disconnect all supply circuits.
- Children must be supervised to ensure that they do not play with the electrical appliances.
- This unit contains condensers that might remain charged once the unit is switched off. Wait at least five minutes after the stop of the unit before to start any cleaning or maintenance operation allowing the discharge of the condensers.

1.1. RHUE(3~5)A(V)HN


1.1.1. Transportation


	WARNING
<p>- Do not put any foreign material into the unit and make sure that none exists inside the unit before the installation or test run. Otherwise, a fire or failure might occur.</p>	

1

• Hanging method


When hanging the unit, ensure its balance and lift it up smoothly and safely. Do not remove any packing materials until the unit is positioned and hang the unit under packing condition with two ropes, as shown in the figure below.

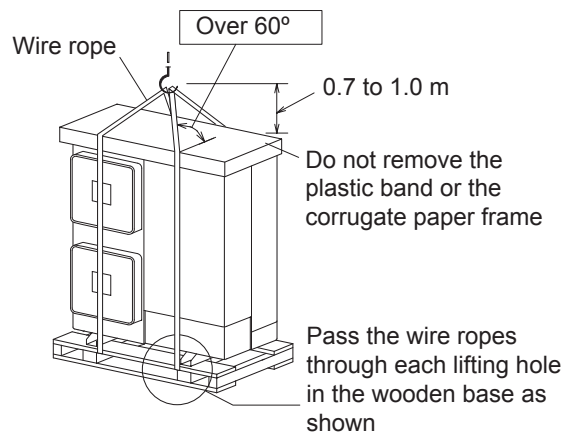

	CAUTION
<p>- Lift the unit with 2 wire ropes and without removing its factory packaging.</p> <p>- Make sure that the unit is lifted smoothly and does not lean.</p> <p>- Do not attach lifting equipment to the plastic band or the corrugated paper frame, since the ropes might slip or break the materials.</p> <p>- Make sure that the exterior of the unit is adequately protected with cloth or paper.</p>	

1.1.2. Center of gravity

When the unit is lifted manually (using the handles), pay attention to the following: do not remove the wooden base from the unit to prevent its overturning. Pay attention to the center of gravity shown in the below figure.

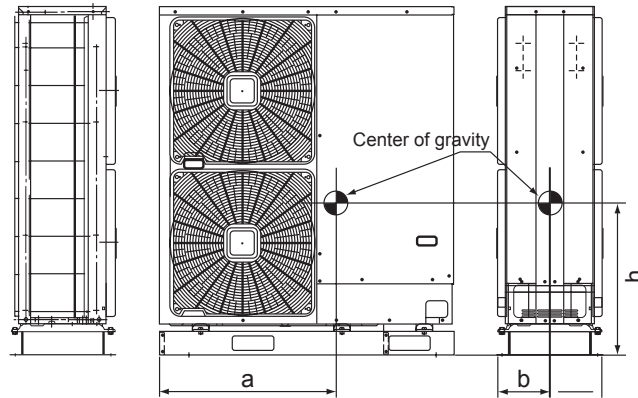

Unit model	Operation weight (kg)	Center of gravity position (mm)		
		a	b	h
RHUE3AVHN	152	705	223	645
RHUE4AVHN	152	705	223	645
RHUE5AVHN	157	695	228	660
RHUE5AHN	162	695	228	660

	NOTE
- It is recommended that at least two people participate when lifting is done manually.	

1.1.3. Installation space (Initial check)

Single installation				
Around sides are open			Around sides are open with obstacles above	
	$0 < L \leq 1/2H$; $A \geq 350$ $1/2H < L \leq H$; $A \geq 450$ $H = 1480$	$0 < L \leq 1/2H$; $A \geq 600$ $1/2H < L \leq H$; $A \geq 1200$ $H = 1480$	$H = 1480$	$0 < L \leq 1/2H$; $A \geq 600$ $1/2H < L \leq H$; $A \geq 1200$ $H = 1480$

Around sides are closed			
Around sides are open with obstacles above			
Around sides are open		Around sides are open with obstacles above	
<p> $0 < L \leq 1/2H$; $A \geq 350$ $1/2H < L \leq H$; $A \geq 450$ $H = 1480$ </p>		<p> $0 < L \leq 1/2H$; $A \geq 600$ $1/2H < L \leq H$; $A \geq 1200$ $H = 1480$ </p>	



NOTE




- All measuring units are in millimetres (mm).

1.1.4. Place provision

- **Concrete foundation**

Foundation shall be on a levelled surface and it is recommended to be 100-300 mm higher than ground level. Use M10 anchor bolts to fix the unit to the foundation. (Foundation bolts, nuts and washers are not included, and must be field supplied). Drain water might turn into ice on cold weather areas. Therefore, when installing the unit on a roof or a veranda, avoid to drain on a public area, since it may become slippery.

- ① Drain water
- ② Drain water place
- ③ Concrete base
- ④ Foundation bolt
- ⑤ Mortar charge
- ⑥ Front side
- ⑦ Back side

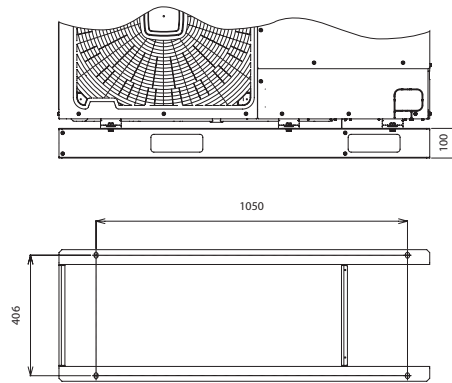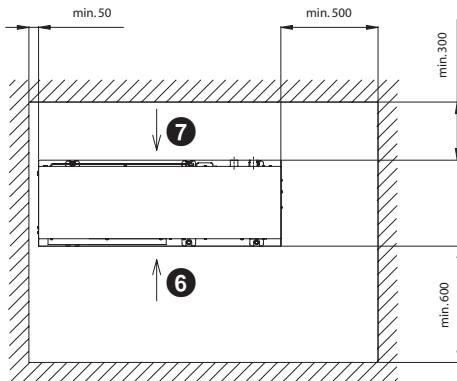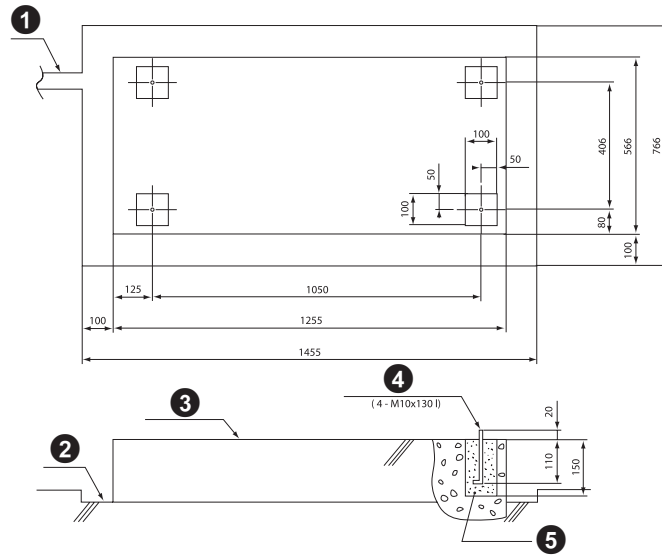

- The foundation drawing shown above is an example.


The unit is low-vibration model, but consider the use of some floor reinforcement or anti-vibration mat/rubber when vibration may occur due to weakness of attached surface. The foundation shall be unified with the floor slab. If not, calculate the vibration proof of the installation of the unit with the foundation in order to ensure strength against a fall or in case that the unit has to be moved. Drain water and rainwater are discharged from the bottom of the unit when in operation as well as when stopped.

Choose a location with good drainage or place a water drain as in the drawing. Make the foundation flat and waterproof, as a water pool may appear in case of, for instance, rain. This is a low-profile product with a shallow depth. It may also be able to fix on the wall as shown below when fixing only with the foundation bolt does not seem sufficiently stable depending on the conditions of the installation. (Metal fittings must be field supplied).

• **Fix unit to the wall**

1. Fix the unit onto the wall as indicated in the figure. (Stay field supplied).
2. The foundation shall be strong enough to avoid any deformation and vibration.
3. In order to prevent vibration transfer to the building, place rubber material between the stay and the wall.

Both sides can be fixed to the wall. (Metal fittings are field supplied)

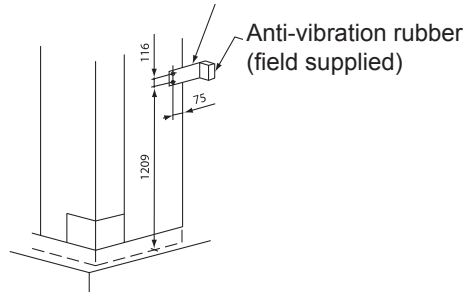


	CAUTION
<p>- Installation must ensure that the unit will not incline, vibrate, make noise or fall down by a blast of wind or in an earthquake. Calculate quake-resistance strength to ensure that installation is strong enough against falling. Fix the unit with wires (field supplied) when installing in a location without walls or windbreak and likely exposed to a blast of wind.</p> <p>- Apply vibration-proof material where necessary.</p>	

• **Installing location where the unit will be exposed to strong wind**

Follow the instructions below to install on a rooftop or a location without surrounding buildings, where strong wind is expected against the unit.

1. Choose a location where the outlet or inlet side of the product will not be exposed to strong wind.
2. When the outlet is exposed to strong wind:
Direct strong wind against the outlet might cause lack of air flow and adversely affect to normal function.

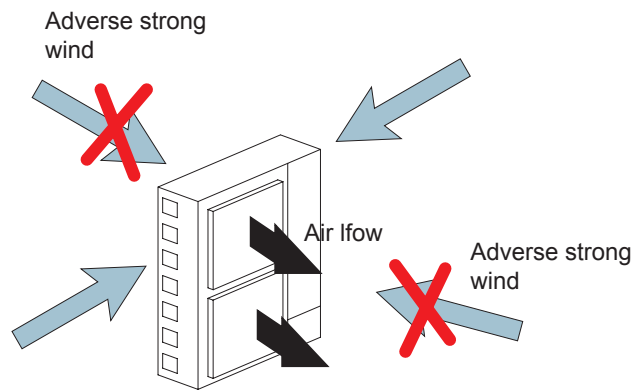


	CAUTION
<p>- Excessive strong wind against the unit outlet may cause inverse rotation and damage the fan motor.</p>	

1.1.5. Installation of wind guard and snow protection hood.

- Air flow guide, wind guard and snow protection hood


Optional parts		HP	Model
Air flow guide		(3~5)	AG-335A X 2
Wind guard			WSP-335A X 2
Stainless plate (SUS304)	Air outlet		ASG-NP335F X 2
	Air inlet of rear side		ASG-NP335B
	Air inlet of side face		ASG-NP335L
Zinc plate	Air outlet		ASG-NP335FS X 2
	Air inlet of rear side		ASG-335BS
	Air inlet of side face		ASG-NP335LS

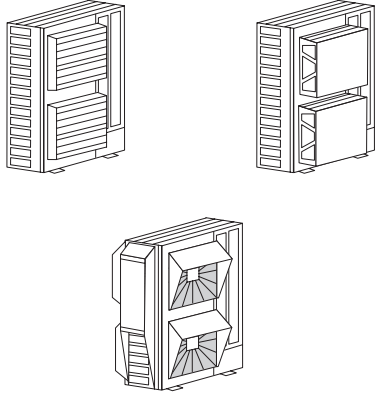

- Air flow guide


Specifications

Model	AG-335A
Quantity	2 per unit
Air discharge direction	Upward (downward), left & right
Material	Weather proof polypropylene resin
Color	Gray
Weight	1.9 kg
Accessories	Fixing screw x 4 [M5 (SUS) x 20] Installation manual
Installation restriction	"Wind Guard" or "Snow protection hood" is not available to install with air flow guide. ("Guard net" is available to be installed together.)

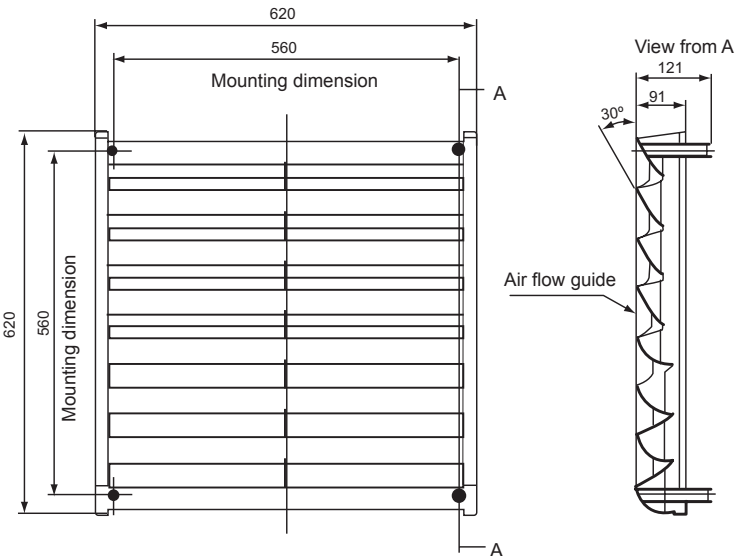


Attaching example of air flow guide:

- Attach the air flow guide to the air discharge grille with four (4) screws (supplied).
- The fixing holes are located at 4 positions on the grille. (Screw tightening torque 2.4~3.1N.m)
- Do not remove the air discharge grille for air flow guide installation.


	CAUTION
- If the air guide is installed without discharge grille, it may cause injury due to rotating fan.	

Two windbreak covers installation

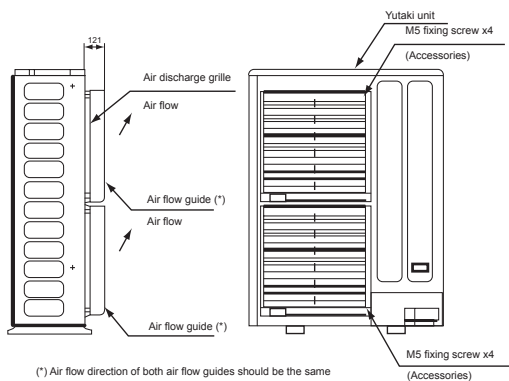

Service space (In case of upward air discharge)


- In case of right and left sides air discharge, enough space for air discharge is required.
- The downward air discharge is also available. In such case, install the base under the unit to secure enough space for air discharge.
- In case of serial units installation, air discharge direction should be upwards.

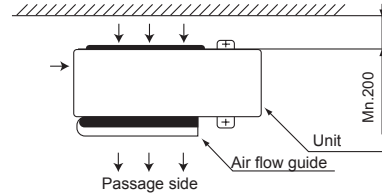

• **Wind guard**

Specifications

Model	WSP-335A
Quantity	2 per unit
Material	Galvanized sheet metal + baked painting
Color	Gray (1.oY8.5/0.5)
Weight	5.5 kg
Accessories	Fixing screw x 4 [M5 (SUS) x 20] Installation manual
Installation restriction	"Guard net", "Air flow guide" or "Snow protection hood" is not available to install with Wind guard

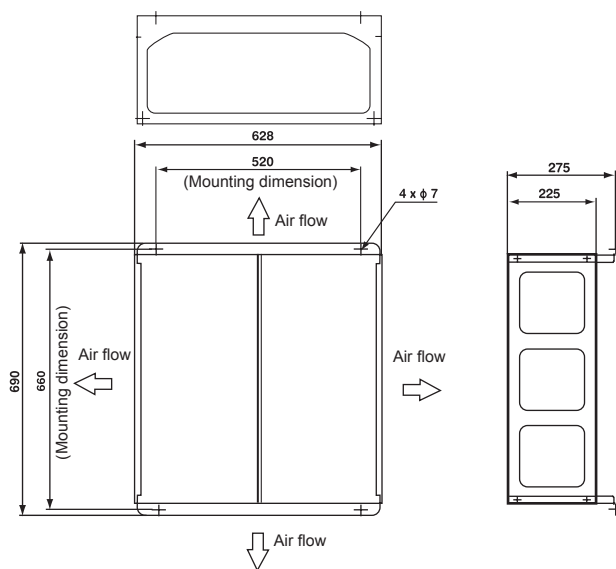


Attaching example of air wind guard:

- Attach the air flow guide to the air discharge grille with four (4) screws (supplied).
- The fixing holes are located at 4 positions on the grille. (Screw tightening torque 2.4~3.1 N.m)
- Do not remove the air discharge grille for air flow guide installation.


	CAUTION
- If the air guide is installed without discharge grille, it may cause injury due to rotating fan.	

Two windguard covers installation

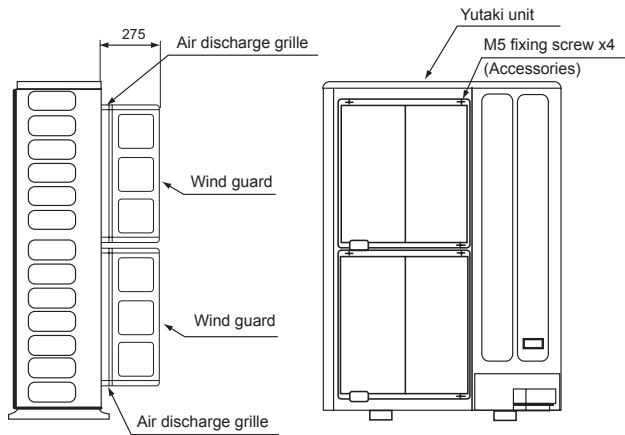

Service space

- Both sides of the unit should be open.
- No obstacles should be placed in the air discharge side.

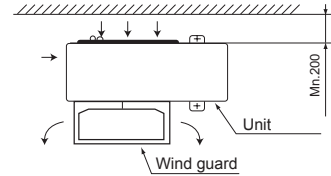

• **Snow protection hood**

Air discharge hood

No.	Part name	Qty.
1	Right side plate	1
2	Left side plate	1
3	Front panel	1
4	Stay	4

Fixing screw (Accessories)

4 x φ 7

φ 8

Hole for safety wire rope to prevent overturning

Rear suction hood


No.	Part name	Qty.
1	Upper right side plate	1
2	Upper left side plate	1
3	Upper front panel (Upside)	1
4	Upper front panel (Downside)	1
5	Lower right side plate	1
6	Lower left side plate	1
7	Upper front panel (Upside)	1
8	Upper front panel (Downside)	1

Fixing screw (Accessories)


φ8

Hole for safety wire rope to prevent overturning

Left suction hood

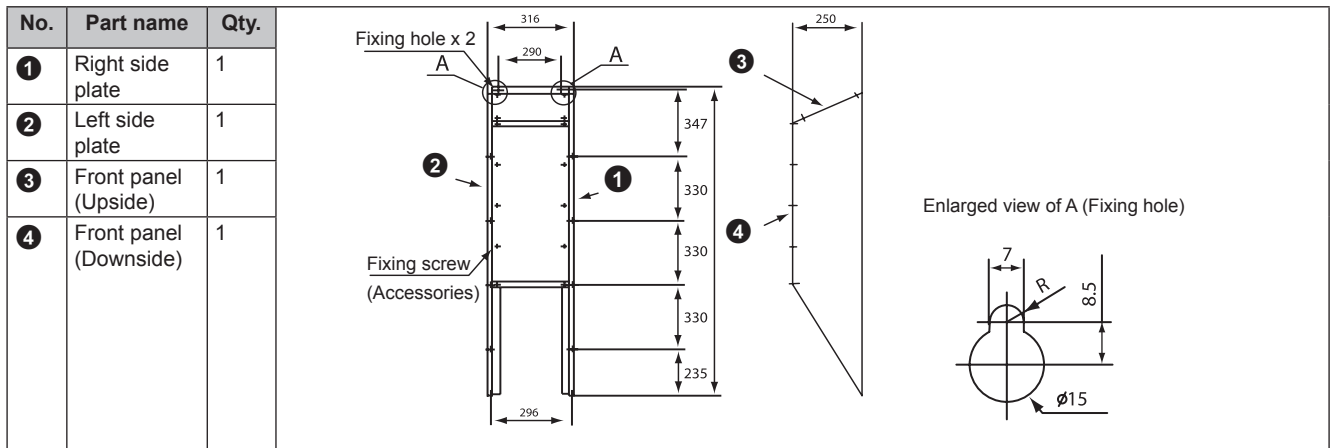

• Attaching example of snow protection hood

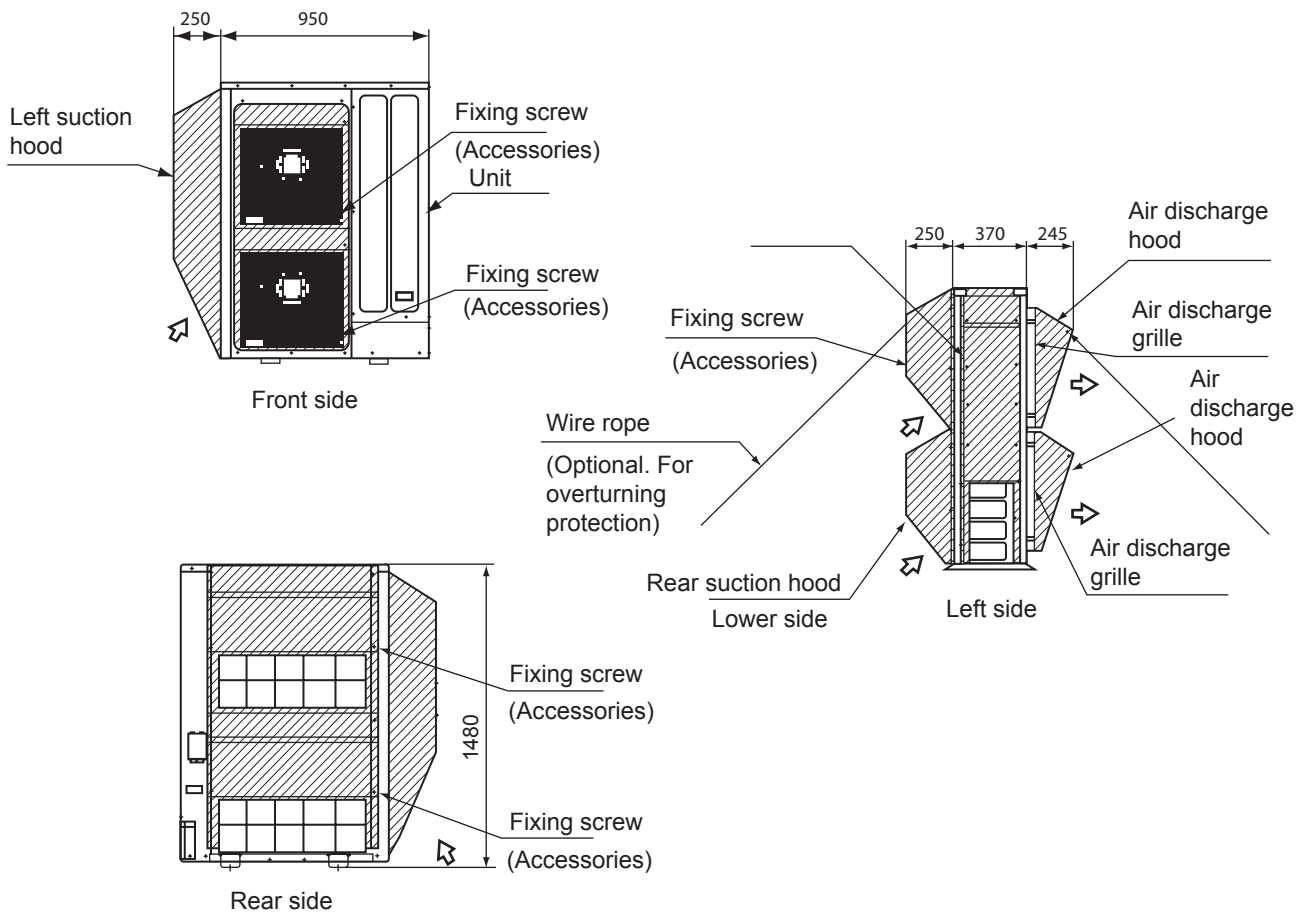

Specifications of snow protection hood

Product name		Air discharge hood		Rear suction hood		Left suction hood	
Model		ASG-NP335F	ASG-NP335FS	ASG-NP335B	ASG-NP335BS	ASG-NP335L	ASG-NP335LS
Quantity		2 per unit		1 per unit			
Material		Bonderized steel sheet Iron	Stainless (SUS304)	Bonderized steel sheet Iron	Stainless (SUS304)	Bonderized steel sheet Iron	Stainless (SUS304)
Color		Gray (1.0Y8.5/0.5 or approximation)	-	Gray (1.0Y8.5/0.5 or approximation)		Gray (1.0Y8.5/0.5 or approximation)	-
Weight		3 kg		14 kg		8 kg	
Assembling		Knockingdown parts (assembled at field)					
Components	Hood	For air discharge part x 1		For rear side air intake x 1 (Upper side x 1, lower side x 1)		For left side air intake x 1	
	Fixing screw	8 (M5x12 tapping screw)		10 (M5x14 tapping screw)		8 (M5x12 tapping screw)	
	Fixing screw (SUS)	6 (M5x12 tapping screw)	6 (M5x14)	24 (M5x12 tapping screw)	24 (M5x14)	14 (M5x12 tapping screw)	14 (M5x14)
		Installation manual					
Installation restriction		Installation with "Guard net", "Wind guard" or "Air flow guide" is not available		Installation with "Guard net" is not available			
Safety wire rope for overturning prevention (optional parts)		ASG-SW20A					

2. WATER PIPE INSTALLATION

This chapter provides information about the procedures to perform water piping work connections for Yutaki units.

CONTENTS


2.1	General notes.....	27
2.2	Piping work connection considerations	28
2.2.1.	Minimum water volume description	28
2.2.2.	Correction factor due to use of glycol.....	31
2.3.	Water control	31
2.4.	Water check valve	32
2.5.	Pump kit pipe installation (accessory).....	33
2.5.1.	Water pump kit (Hitachi supplied)	33
2.5.2.	Pump kit assembly	35
2.5.3.	Installation	35
2.6.	Water electric heater installation (accessory).....	36
2.6.1.	Three-stage water heater assembly.....	36
2.6.2.	Water electric heater (Hitachi supplied)	37
2.7.	Drain piping	39

2.1 GENERAL NOTES

1. Connect all pipes as close as possible to the unit, so that disconnection can be easily performed when required.
2. It is recommended to use flexible joints for the piping of water inlet and outlet, so vibration will not be transmitted.
3. Whenever possible, sluice valves should be installed for water piping, in order to minimise flow resistance and to maintain sufficient water flow.
4. Proper leak inspection should be performed to check for leaking parts inside and outside the system, by completely opening the hot water inlet and outlet valves to the water condenser. Additionally, install equip valves to the inlet and outlet piping.
5. This unit is equipped with an air purge at the highest position of the water system. If this position is not the highest one within the whole water installation, equip another air purge.


Also, equip a drain cock on the outlet piping. The cock handle should be removed so that the cock can not be opened under normal circumstances. If this cock is opened during operation, trouble will occur due to water blow-off.

6. When necessary, put insulation on the pipes in order to avoid heat losses.
7. Under the condition where the ambient temperature is low in winter, there is a case where equipment and piping will become damaged during long shutdown periods, because the water in the pump or piping will be frozen. To prevent freezing of the water, it is effective to remove the water of the installation or keep the unit powered ON, since it equips an electric heater to avoid freezing on the water circuit.
Additionally, in a case where measures such as water draining are difficult, use an antifreeze mixture of ethylene glycol type or propylene glycol type.

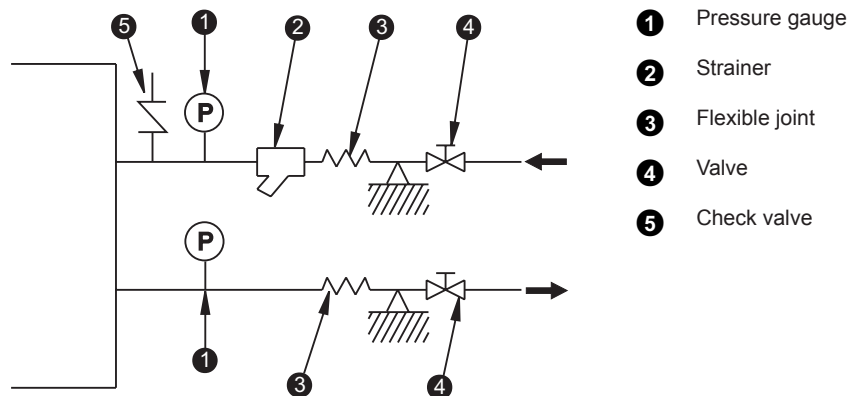

	CAUTION
<p>- This product is equipped with plate heat exchanger type. In the heat exchanger, water flows through a narrow space between the plates. Therefore, there is a possibility that freezing may occur if foreign particles or dust are clogged. In order to avoid this clogging, mesh water strainer shall be installed in the water inlet pipe and as close as possible to the plate heat exchanger. In case of punching metal type strainer, mesh hole size shall be \varnothing 1.5mm or less. Never use the salt type antifreeze mixture, since it possesses strong corrosion characteristics, and water equipment might be damaged.</p>	

	CAUTION
<p>- When connecting several units to a common pipe, its design should ensure that the water flow on each unit is the same (see below figure). Imbalance of water distribution may cause a serious damage like water freezing in the plate heat exchanger.</p>	

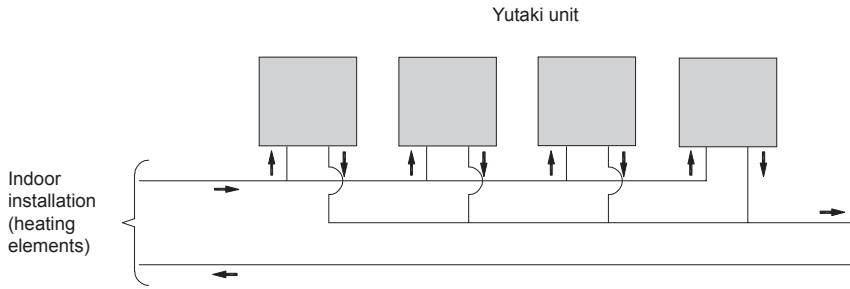

Working condition	
Pressure range	0 MPa ~ 1.0 MPa
Water temp. range	- 20°C ~ 90°C
Pressure range of water main	0.17~ 0.2 MPa

2.2. PIPING WORK CONNECTION CONSIDERATIONS


2

2.2.1. Minimum water volume description

- Necessity of water in system and summary of its calculation

The following problems may occur when the quantity of water in the forced circulation system⁽¹⁾ on water side is insufficient.


1. Compressor in operation repeats numerous "start/stop" when light-loaded, which may result in shorter life or failure.
2. Low temperature in water circulation during defrost operation, which may cause an alarm (freeze protection) at the stop of the unit.


 NOTE
- ⁽¹⁾ The shaded part of the pipe system below. (Excluding the expansion tank (cistern))

Calculate and ensure that the water volume in the system is equal or greater than the larger value obtained from:

- Protective water volume for product
- Minimum water volume for temperature drop during defrost operation

When the minimum water volume can not be ensured, use a Buffer tank to compensate the shortage (<0) of water (2). See figure below.

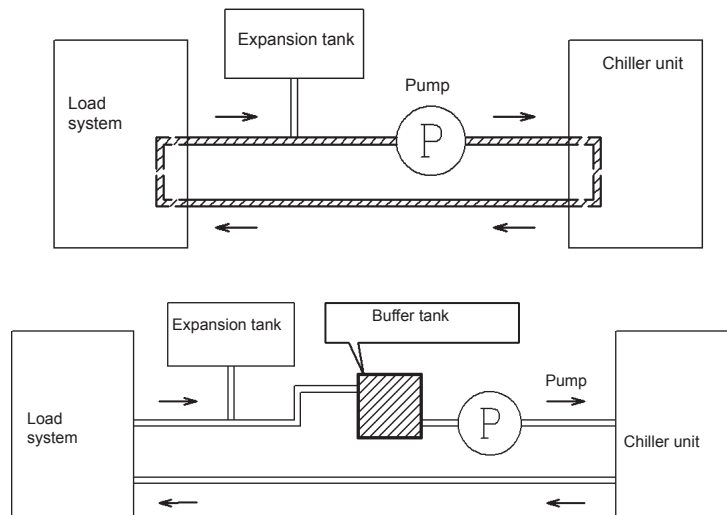


	NOTE
- ⁽²⁾ Shortage = Minimum water volume – Water volume in circulation system	

The following part shows how to calculate the minimum water volume in the system for product protection and temperature drop during defrost operation.

- **Protective water volume for product**

Ensure that the water volume is equal or greater than those shown below, in order to reduce ON/OFF frequency of the unit at no load or extreme light load. When water volume is less than the volume indicated (minimum water volume), compressor operation frequently stops at light load, which may result in shorter life or failure.

ON/OFF Temp. differential	Model	RHUE3AVHN	RHUE4AVHN	RHUE5AVHN RHUE5AHN
4°C		28	38	46
3°C		36	48	58
2°C		50	65	80
1°C		80	107	130
(Units are in ltrs.)				

	NOTE
- The factory default ON/OFF temperature differential is "4 °C". Note that the minimum water volume varies for different setting for each purpose as shown in the table above.	

- **Minimum required water volume during defrosting**

The following formula is used to make the calculation:

$$V = \frac{Q_{DEF}}{\Delta T \times 4168.8} ; Q_{DEF} = Q_I + Q_Y$$

Where:

v = Required water volume (m3)

The minimum volume of water needed in the installation to cover the heat loss caused by a reduction in the delivery water temperature during defrosting.

ΔT = Permissible water temperature drop (°C)

Drop in the delivery water temperature that the client is willing to allow in the installation.

Q_{DEF} = Heat loss during defrosting (kJ)

Heat loss caused in the system by reducing the delivery water temperature, which may affect the user's comfort level of warmth. This value is 10% of the sum of the two following items:


Q_I = Heat demand from the installation (kJ)

While defrosting is taking place, the unit is not providing the heat required to cover the heat demand from the installation. This value can be obtained in 2 ways:

1. By using the value of the energy demand from the installation, if known.
2. If this value is not known, it can be estimated by using the heating capacity of the unit at an air temperature of 0°C WB and a delivery water temperature at, for example, 45°C.

Q_y = Cooling load on the YUTAKI unit (kJ)


In addition to not providing the heat required to cover the heat demanded by the installation during defrosting, the unit is also producing cold. It can be estimated that this value is approximately 85% of the heating capacity on the unit under standard conditions (air temperature: 6/7°C (WB/DB) and input/output temperature of the water: 40 / 45 °C)

	NOTE
- The 10% applied to QEDF is due to the fact that the maximum time for defrosting is 6 minutes per hour.	

2

The following table shows the minimum water volume needed in each YUTAKI unit in case of a permitted drop in temperature of 10°C.

Permissible temp. drop differential	Model	RHUE3AVHN	RHUE4AVHN	RHUE5AVHN RHUE5AHN
	10°C		106	138
(Units are in ltrs.)				

	NOTE
- The values shown on the table are based on theoretical installation conditions, and therefore, it rests with the client to recalculate these values depending on the real conditions of the installation.	

- **Heat taken by load (kJ)**

Heat taken by Load is equivalent to 10% of the estimated heat load (kW). (Heat for six minutes which is the longest defrosting time).

The estimated heat load varies for different use conditions and purposes of Chiller Unit. Use the value of normal actual load when it is identified. The estimated heat load in the specifications is “equivalent to heat capacity at outdoor air 0 °CWB and heated water outlet temperature 45 °C”.

- **Heat taken by chiller unit (kJ)**

Heat taken by Yutaki is 8.5% of the heat capacity at JIS Standard conditions. (Heat for six minutes which is the longest defrosting time).


- **Permissible temperature drop (°C)**

Permissible temperature drop shows the permissible differential of temperature drop at Yutaki inlet from before defrosting.

E.g.) When up to Inlet/Outlet before defrosting = 40/45 °C --> Inlet/Outlet at defrosting End 15/10 °C is permissible, the permissible temperature drop is 40 °C – 15 °C = 25 °C.

Note that it is not the permissible temperature drop of water delivered to the load. Permissible temperature drop in the specifications is “10 °C”.

Permissible temp. drop differential	Model	RHUE3AVHN	RHUE4AVHN	RHUE5AVHN RHUE5AHN
	10°C		106	138
(Units are in ltrs.)				

	NOTE
<p>- As the value shown includes assumed conditions, greater or less water volume may be required depending on the use of the unit. In such a case, recalculate with the "estimated heat load", "installation conditions" and "permissible temperature drop" corresponding to the actual use conditions.</p>	

2.2.2. Correction factor due to use of glycol


When the ambient temperature is low in winter, it is possible that the unit will be damaged by freezing water in the pipes and in the circulating pump during the shutdown periods.

In order to prevent this, it is useful to empty the water from the installation or to maintain the supply to the installation, as an electric cord can prevent the water from freezing in the circuit.

Additionally, in cases where water drainage is difficult, an antifreeze mixture of ethylene glycol or propylene should be used (Between 10 % and 40 %).

The performance of the unit when working with glycol may decrease in proportion to the percentage of glycol used, as the density of glycol is higher than that of water. (For more information, see TCGB0044)


2.3. WATER CONTROL


	CAUTION
<p>- Industrial water rarely causes deposits of scales or other foreign substances on equipment and the most vulnerable components are plate heat exchangers. However, well water or river water may in most cases contain suspended solid matter, organic matter, and scales in great quantities. Therefore, such water should be subjected to filtration or softening treatment with chemicals before its use as heat transporter in Yutaki unit.</p>	

The following table shows the reference values for the most important parameters concerning the quality of the water:

Item	Water System		Tendency	
	Circulating Water (20 C Less than)	Supply Water	Corrosion	Deposits of scales
Standard quality pH (25 °C)	6.8 ~ 8.0	6.8 ~ 8.0	●	●
Electrical conductivity (mS/m) (25°C) {μS/cm} (25 °C) (2)	Less than 40 Less than 400	Less than 30 Less than 300	●	●
Chlorine Ion (mg Cl ⁻ /l)	Less than 50	Less than 50	●	
Sulphur acid Ion (mg SO ₄ ²⁻ /l)	Less than 50	Less than 50	●	
The amount of acid consumption (pH 4.8) (mg CaCO ₃ /l)	Less than 50	Less than 50		●
Total hardness (mg CaCO ₃ /l)	Less than 70	Less than 70		●
Calcium hardness (mg CaCO ₃ /l)	Less than 50	Less than 50		●
Silica L (mg SiO ₂ /l)	Less than 30	Less than 30		●
Reference quality total iron (mg Fe/l)	Less than 1.0	Less than 0.3	●	●
Total copper (mg Cu/l)	Less than 1.0	Less than 0.1	●	
Sulphur ion (mg S ₂ ⁻ /l)	It shall not be detected.		●	
Ammonium ion (mg NH ₄ ⁺ /l)	Less than 1.0	Less than 0.1	●	
Remaining chlorine (mg Cl/l)	Less than 0.3	Less than 0.3	●	
Floating carbonic acid (mg CO ₂ /l)	Less than 4.0	Less than 4.0	●	
Index of stability	6.8 ~ 8.0	-	●	●

2

	NOTE
<ul style="list-style-type: none"> - The mark "●" in the table means the factor concerned with the tendency of corrosion or deposits of scales. - The value showed in "{}" are for reference only according to the former unit. 	

	WARNING
<ul style="list-style-type: none"> - Should the well water not fulfil the above limits, the use of industrial water or other water sources should be considered 	


2.4. WATER CHECK VALVE

Attached to the unit there is a water check valve (non return valve). This component is a safety device to protect the system against back pressure, back flow and back syphonage of non-potable water into service pipe, plants and equipments.

This valve shall be installed at site.

Main Characteristics:

- Maximum working pressure: 16bar
- Maximum working temperature: 70°C (short term 90°C)
- Threaded connection R1/2"
- Available test and drain plugs 1/4"
- Length: 137mm
- Kvs value: 6
- Weight: 0.24kg

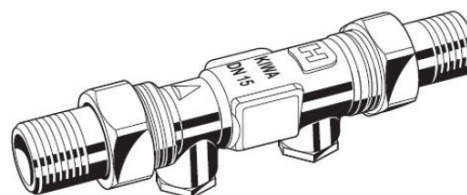

Installation guidelines:

1. Note flow direction (indicated by arrow) when installing the check valve.
2. In a drinking water supply the check valves are fitted immediately after water meter. This position ensures optimum protection for the drinking water supply.
3. Install in horizontal pipework with test plugs directed downwards. This position ensures optimum protection efficiency and is the best for testing the valve.
4. Shutt off valves should be fitted on each side of the check valve for easier and faster valve testing.
5. The installation location should be protected against frost and be easily accessible.

2.5. PUMP KIT PIPE INSTALLATION (ACCESSORY)

Main Characteristics:

- Working range: Observe pump rating plate data.
- Maximum working temperature: +130°C (short term (2h) +140°C)
- Minimum working temperature: -20°C
- Medium flow: Water and water glycol mixture of a ratio of up to 1:1
- Minimum inlet pressure at the pump suction side in order to prevent cavitation noises at an ambient temperature of +40°C and a water temperature of Tmax:



T _{max}	Rp 3/4	Rp1	Rp 1/4	Rp 32/40	DN 50	DN 65	DN 80	DN10
+50°C	0.05 bar				0.3 bar			
+95°C	0.5 bar				1.0 bar			
+110°C	1.1 bar				1.6 bar			
+130°C	2.4 bar				2.9 bar			

2.5.1. Water pump kit (Hitachi supplied)


Components supplied:

- Complete pump.
- Two-part heat insulation (for single pump only).
- 2 seals (for threaded connections only).


Installation guidelines:


- The pump must be installed in a dry, well-ventilated and frost-free place.
- Before installing the pump, remove the two halves of the heat insulation shell.
- Installation should only take place once all welding and soldering work has been completed and the pipe network has been rinsed. Dirt can have an adverse effect on the functioning of the pump.
- The pump must be installed in an easily accessible place to facilitate inspection and replacement.

- It is recommend that shut-off devices be installed in front of and behind the pump. This will avoid the draining and refilling of the entire system in case the pump needs to be replaced.
- Assemble the pump such that water cannot drip into the pump motor or terminal box.
- Carry out stress-free installation with the pump motor shaft in horizontal plane (see installation position in the next figure).

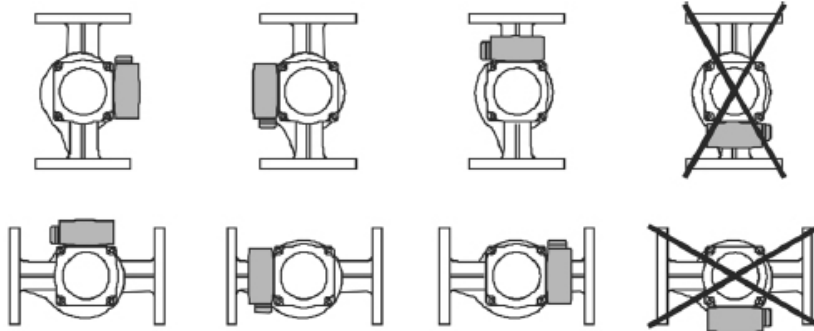


- The flow direction of the pump must correspond to the directional arrow on the pump housing.
- The motor terminal box must not point downwards (see admissible installation position in previous figure). It may be necessary to turn the motor housing round after loosening the hexagon socket screws.


	CAUTION
<p>- Risk of damage to the O-ring. When turning the motor housing round, ensure the O-ring between the can pot and the pump housing does not become damaged. The O-ring must not be turned and must remain at the edge of the can pot pointing towards the impeller.</p> <p>- Risk of build-up of condensation water. For units that require insulation and for which the standard insulation provided cannot be used, only the pump housing may be insulated. The condensation water openings on the motor flange must be left open.</p>	

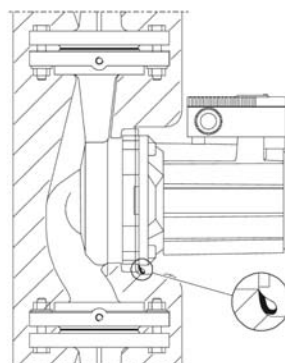

Lateral view of a generic pump


	CAUTION
<p>- Assembly and installation should only be carried out by qualified personnel.</p> <p>- The pumps range must not be used for drinking water or foodstuffs.</p>	

2.5.2. Pump kit assembly

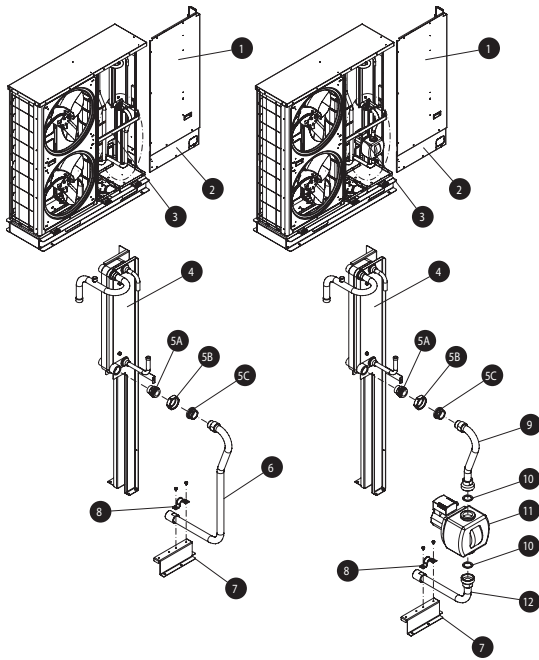


No.	Name
1	Service Cover 1
2	Service Cover 2
3	Stay
4	Plate Heat Exchanger Assembly
5A	Male insert of coupling
5B	Nut of coupling
5C	Female insert of coupling
6	Standard Pipe Assembly
7	Pipe Support
8	Band
9	Pipe Assembly 1
10	Packing
11	Water Pump
12	Pipe Assembly 2

Standard heater assembly:



Standard heater assembly:



NOTE

- To obtain more information about pump kit refer to the installation and operation manual of the respective pump.

2.5.3. Installation

1. Prepare the pump assembly.

- Connect the pipe assembly 1 (item 9) with the pump, placing a packing (item 10) between them carefully.
- Connect the pipe assembly 2 (item 12) with the pump, placing a packing (item 10) between them carefully.

2. Prepare the Yutaki for the pump installation.

- Remove Service Cover 1 (item 1), Service Cover 2 (item 2) and horizontal stay (item 3) in order to make easier the change of piping.
- Unscrew the nut of Rotalock coupling (item 5B) in order to disassemble the standard pipe assembly (item 6) from the unit.
- Remove the fixing band (item 8) from the pipe support (item 7). Now it is possible to remove the standard pipe assembly.
- Unscrew the female insert of Rotalock coupling (item 5C) from the pipe assembly (item 6). Remove rests of teflon tape on internal thread of item 5C.


3. Pump assembly installation on the unit.

1. Add enough teflon tape to the screw of pump assembly. Connect the female insert of Rotalock coupling (item 5C) with the pump assembly.
2. Place the pump assembly inside the unit and fix it to the pipe support (item 7) with the fixing band (item 8).
3. Connect the pump assembly to the plate heat exchanger assembly (item 4) with the nut of Rotalock coupling (item 5B).
4. Add the Water Heater (item 13) and put the insulations on the inlet water pipe (except for the pump section) as shown in Heater Assembly detail.



NOTE

- Refer to point 3.5. in chapter "3" to check the electrical installation procedure of the pump kit.

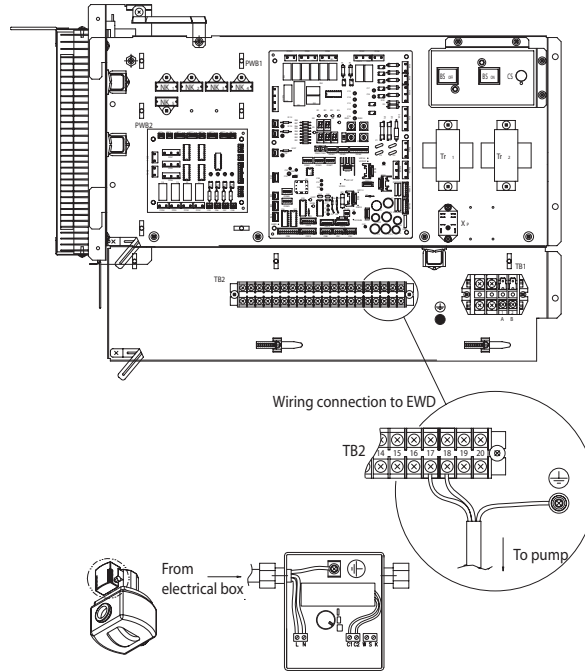


2

5. Assemble the horizontal stay (item 3), Service Cover 2 (item 2) and Service Cover 1 (item 1) to finish the installation.

2.6. WATER ELECTRIC HEATER INSTALLATION (ACCESSORY)


2.6.1. Three-stage water heater assembly

In a mono-energetic system (CONF 2), the electric heater is used if required to increase the supply water temperature.

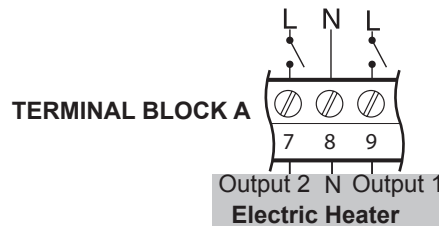

- Follow installation guide attached to water electric heater.
- Ensure that maximum pressure of water circuit is inside water heater range. If necessary, install some high pressure switch to protect the heater.
- Ensure that water heater includes protection against:
 - No water flow.
 - Water leakage or no water inside water circuit.
 - Other possible abnormal performance.

2.6.2. Water electric heater (Hitachi supplied)

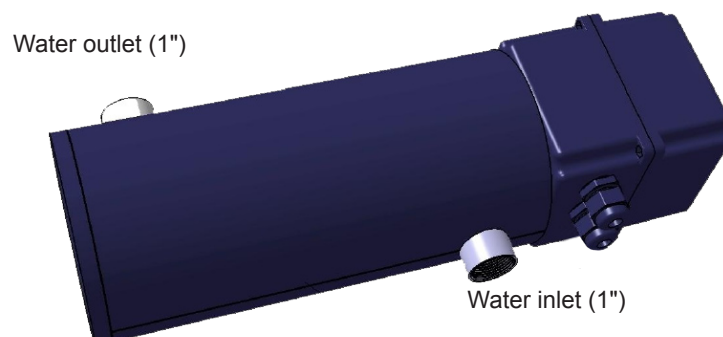

General data:

Concept	Range
Electric power supply	1~ 230 V 50 Hz or 3N~ 400 V 50 Hz (See wiring connection diagram)
Electric power input	6 kW
Regulation	3 steps, 2/ 4/ 6 kW
Dimensions	475 mm x 186 mm x 145 mm
Weight	3.920 kg
Standards	EN60335-1; EN60335-2-40

Working range:


Concept	Range	
	Min.	Max.
Water flow	0.4 m ³ /h	4 m ³ /h
Water temperature	+20°C	+65°C
Water pressure	1 bar	7 bar

Supplied components:

- Water Electric Heater
- Low water pressure switch:
 - 1 bar set (Max. pressure 7 bar)
 - Auxiliar Contact N.O. (16 A, 250 V)
- Water Electric Heater Manual

• Installation

The heater will be installed horizontally with inlet piping water down and outlet piping water up to purge the air naturally inside the heater.

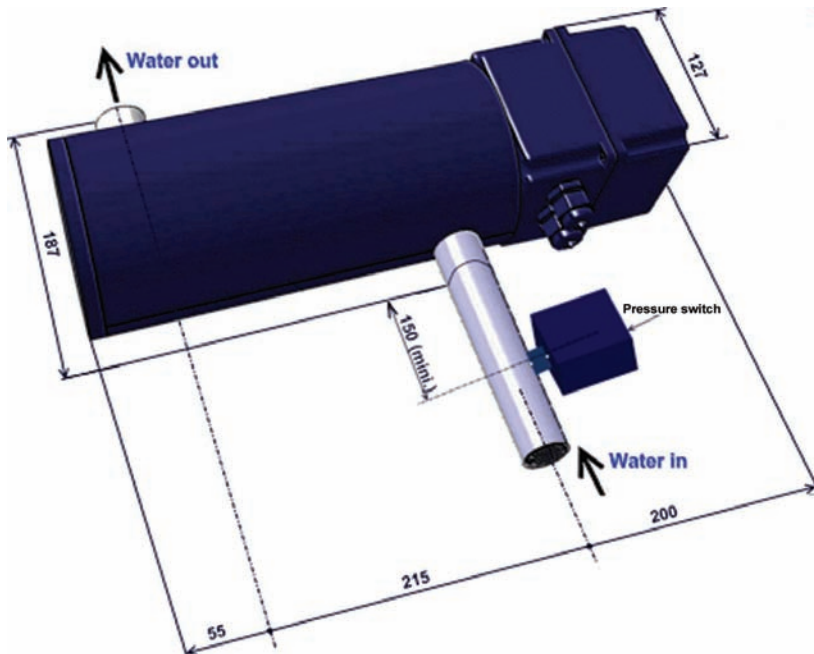


2

- Circulation heater will be fixed with inlet and outlet piping.
- The free space for the installation of the heater should be at least 650 mm x 200 mm x 200 mm.
- Forced ventilation of the area is not necessary, simply avoid the containment of this area to protect against a possible rise in temperature.
- Ensure that there are no flammable substances less than 500 mm near to the heater.
- Ensure that a bleed-tap is automatically installed on the hydraulic.
- Provide easy access for electrical connections and easy disassembly of the heater for servicing.
- The water heater connection is made with threaded fittings size 1" male; ensure to seal inlet and outlet connections and a good anchor to the wall or floor supports.
- These supports must be within 100 mm maximum from heater inlet & outlet.
- Ensure that the hydraulic system has a device allowing to reduce water pressure under 7 bar.
- Check there aren't water leakages in connections before switching the heater.
- Check that the hydraulic connections are tight.
- Check that the water flow is constant and that the purge of the circuit is correct.
- Check that the protections and electrical connections are correct regarding at the electrical diagramm.
- Install low water pressure switch according to water heater instructions.
- Install water thermistor sensor (TSVP) as near as possible to the heater water outlet.

2.7. DRAIN PIPING

- **Drain discharging boss**


When the base of the Yutaki is temporarily used as a drain receiver, the drain boss should be connected to the drain pipe. See the below figure for further details.

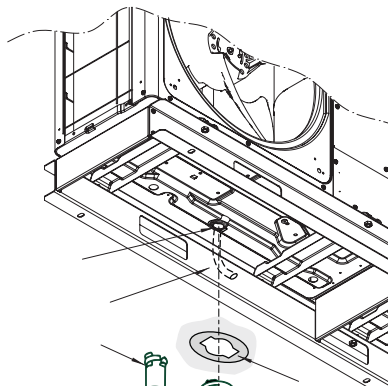

Model	Applicable Model
DBS-26	RHUE(3-5)A(V)HN

- **Connection procedure**

1. Insert the rubber cap into the drain boss up to the extruded portions.
2. Insert the boss into the unit base and turn approximately 40 degree counterclockwise.
3. The outer diameter section of the drain boss is 32 mm.
4. A drain pipe should be field-supplied.

	NOTE
	<p>- Do not use this drain boss set in a cold area, since the drain water may freeze.</p> <p>- This drain boss may not be sufficient to collect drain water. In such a case, a bigger drain pan should be field-supplied and installed under the unit.</p>


3. ELECTRICAL WIRING


This chapter describes the procedures to carry out the electrical wiring connections for the Yutaki and its control system.

CONTENTS

3.1. General check	41
3.2. Electrical wiring connection	42
3.2.1. Field minimum wire sizes for the power source	43
3.2.2. Main switches and fuses	43
3.3. Setting the DIP switches	44
3.4. LED indication	48
3.5. Pump electrical installation	49
3.5.1. Electrical connection	50
3.5.2. Operation	50
3.5.3. Troubleshooting	51
3.6. Heater electric installation	51
3.7. Electrical wiring between Yutaki and System Controller	53
3.8. Electrical wiring diagrams	53
3.8.1. Electrical wiring diagram for models RHUE(3~5)AVHN	54
3.8.2. Electrical wiring diagram for RHUE5AHN	55

3.1. GENERAL CHECK

	DANGER
<ul style="list-style-type: none"> - Before installing the electrical wiring or before performing a periodical check, turn OFF the main switch of the Yutaki unit. - Make sure that all the power sources are switched OFF. - Check that the Yutaki fans have stopped before electrical wiring work or periodical check is performed. - To prevent the wires from being damaged, avoid to place them touching the pipes, the plate or cutting edges as well as the electrical components inside the unit. - Tightly secure the wires with the cord clamp inside the unit. - Check that the screws for terminal block are tightened. - Check that the earth wire is securely connected, tagged and locked in accordance with national and local codes. 	

	CAUTION
<ul style="list-style-type: none"> - Protect the wires, drain pipe and electrical parts from rats or other small animals. Otherwise, unprotected parts may be damaged. - Wrap the accessory packing around the wires, and plug the wiring connection hole with the seal material to protect the product from any condensed water and insects. - When using conduit, lead the wires through the knockout hole on the side cover. - Secure the cable of the remote control switch with the cord clamp inside the electrical box. - Electrical wiring must comply with national and local codes. Contact your local authority in regards to standards, rules and regulations. - Connect a fuse of specified capacity. 	

Make sure that the field-supplied electrical components (main power switches, circuit breakers, wires, connectors and wire terminals) have been properly selected according to the electrical data indicated. Make sure that they comply with national and regional electrical codes.

Following the Council Directive 2004/108/EC(89/336/EEC), relating to electromagnetic compatibility, next table indicates the maximum permissible system impedance Z_{max} at the interface point of the user's supply, in accordance with EN61000-3-11.


MODEL	Z_{max} (Ω)
RHUE3AVHN	0,41
RHUE4AVHN	0,41
RHUE5AVHN	0,29
RHUE5AHN	-

Harmonics situation of each model regarding IEC 61000-3-2 and IEC 61000-3-12 is as follows:

MODELS SITUATION REGARDING IEC 61000-3-2 AND IEC 61000-3-12 Ssc "xx"	MODELS	Ssc "xx" (KVA)
Equipment complying with IEC 61000-3-2 (Professional use)	RHUE5AHN	-
Equipment complying with IEC 61000-3-12	RHUE3AVHN RHUE4AVHN RHUE5AVHN	-

Check that the power supply voltage is within +/-10% of the rated voltage. And that power supply has an impedance low enough to warranty not reduce the starting voltage more than 85% of the rated voltage.

3.2. ELECTRICAL WIRING CONNECTION

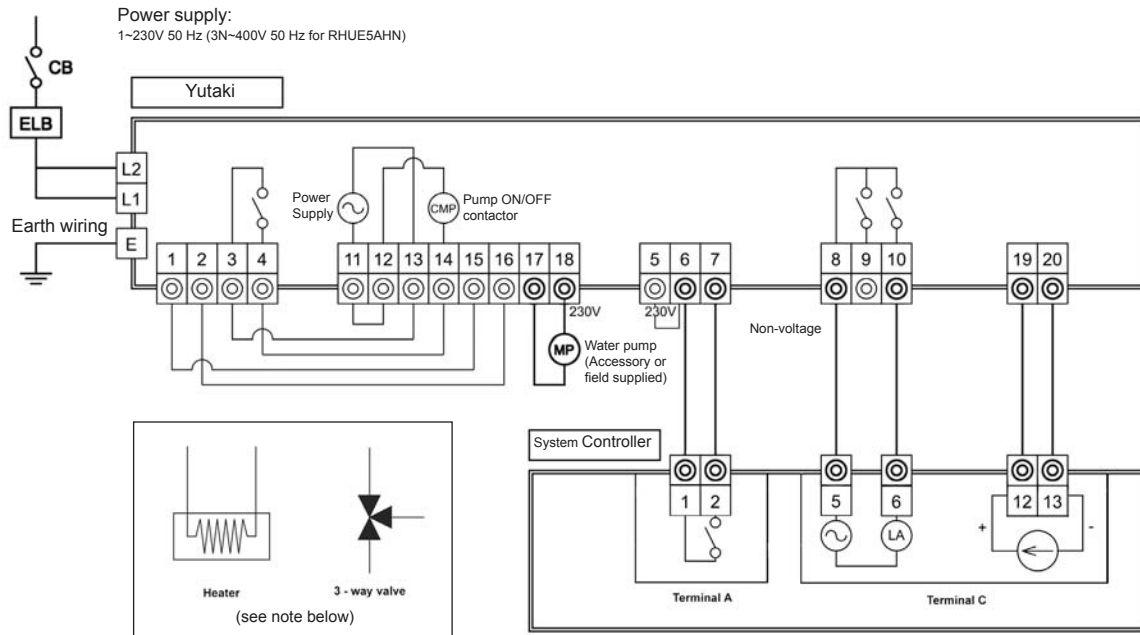


NOTE


- The heater and the 3-way valve are accessories. (Their codes are EH61 and VID3V1 respectively).
- Refer to chapter "4" for more information.

The correct electrical wiring connection for the unit is shown below.

1. Connect the three-phase power supply source wires L1, L2, L3 and N (for 400V 50Hz) to the terminal board in case of RHUE-5AHN unit, and L1 and N in case of RHUE(3~5)AVHN units. Connect the ground wire to the plate in the electrical box.

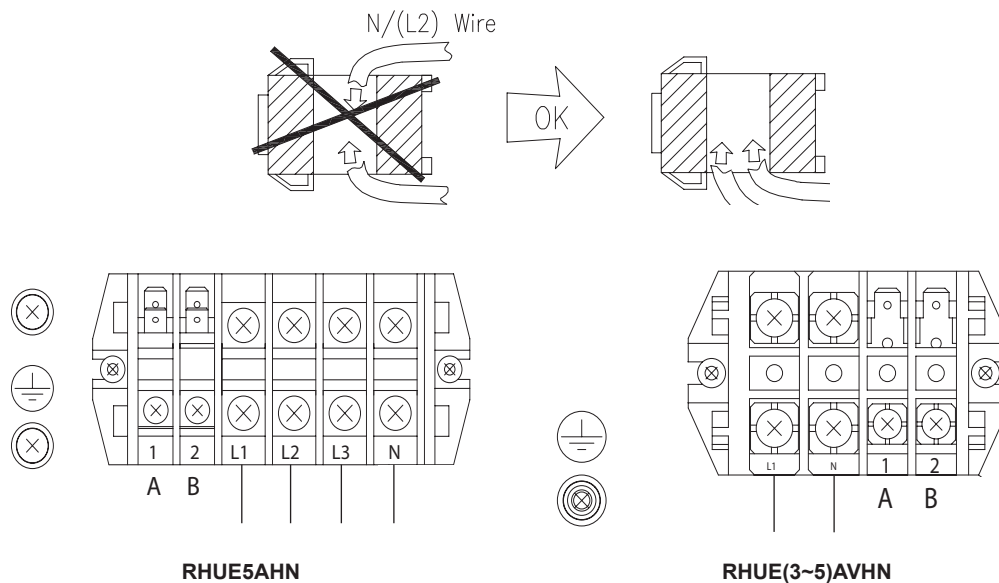

3

	DANGER
- Always connect ground wires to the respective terminals or plates to avoid electrical hazard.	

3.2.1. Field minimum wire sizes for the power source

Model	Power source	Max. current (A)	Power source cable size	Signal cable size
			EN60 335-1 ①	EN60 335-1 ①
RHUE3AVHN	1~ 230V 50Hz	18	4.0 mm ²	0.75 mm ²
RHUE4AVHN		18	4.0 mm ²	
RHUE5AVHN		26	6.0 mm ²	
RHUE5AHN	3N~ 400V 50Hz	11	2.5 mm ²	

3.2.2. Main switches and fuses

Select the main switches (current breaker) according to the next table:


Model	Power source	CB (Circuit Break) (A)	ELB (Earth Leakage Breaker) (no. poles/A/ma)
RHUE3AVHN	1~ 230V 50Hz	32	2/40/30
RHUE4AVHN		32	
RHUE5AVHN		32	
RHUE5AHN	3N~ 400V 50Hz	20	4/40/30

3.3. SETTING THE DIP SWITCHES

- Number and position of DIP switches**

The PCB of the Yutaki unit contains 9 DIP switches.

DIP switches location on the PCB:

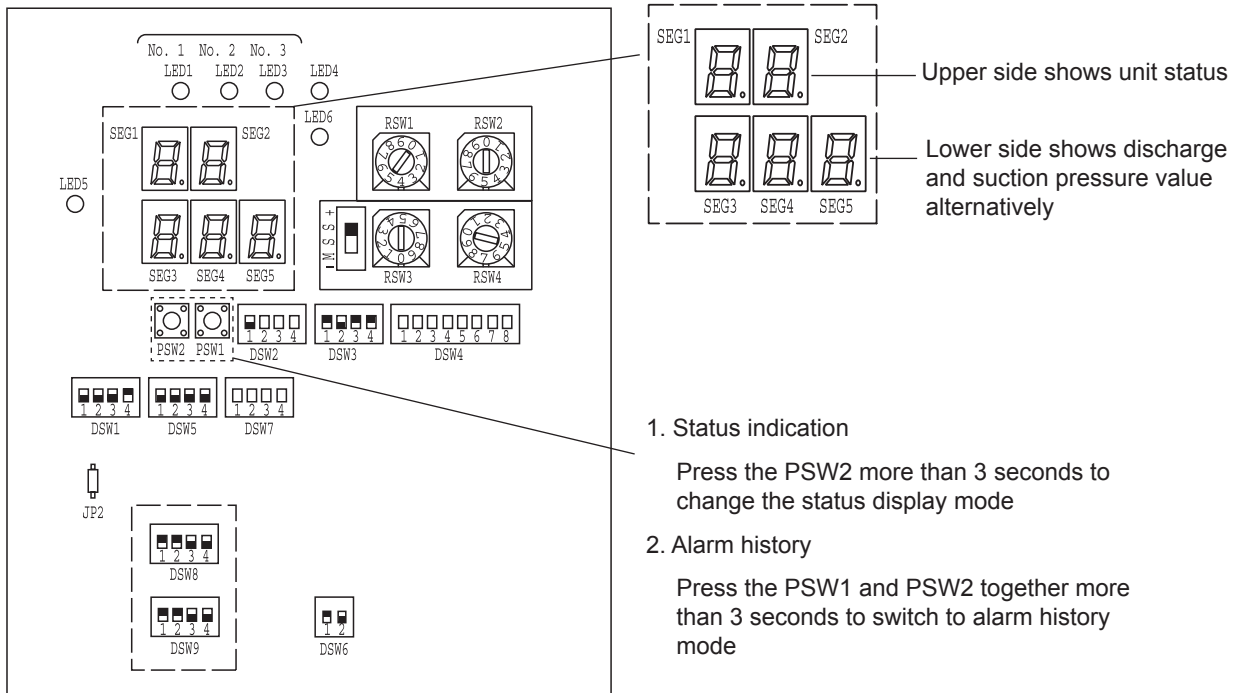

1. Status indication

Press the PSW2 more than 3 seconds to change the status display mode

2. Alarm history

Press the PSW1 and PSW2 together more than 3 seconds to switch to alarm history mode

	NOTE
<ul style="list-style-type: none"> - The mark "■" indicates the position of dips switches. - No mark "■" or "not available" indicates pin position is not affecting. - The figures show the settings before shipment or after selection. - "Not used" means that the pin must not be changed. A malfunction might happen if changed. 	

	WARNING
<ul style="list-style-type: none"> - Before setting dips switches, first turn the power source off. Otherwise, the changes will not be taken into account. 	

• **DIP switch factory set for all units:**

DSW	RHUE3AVHN	RHUE4AVHN	RHUE5AVHN	RHUE5AHN
DSW1				
DSW2				
DSW3				
DSW4				
DSW5				
DSW6				
DSW7				
DSW8				
DSW9				

• **Rotary switches**

	<p>RSW1 & RSW2: heating temperature setting</p>
	<p>RSW3 & RSW4 & SSW: not used</p>

• **DSW1: optional functions**

Function	Set PINs
Factory setting	
PCB self checking	
Pump / High cut test	
Optional functions setting mode	
Compressor enable	

• **DSW2: unit control configuration / unit HP**

Function		Set PINs	Function	Set PINs
Remote ON/OFF signal	Pulse signal commissioning		3HP unit	
	Level signal (System controller)		4HP unit	
PHEX flow direction	(Not used)		5 HP unit	
	Counter flow (Yutaki)		Not used	



• **DSW3: unit control configuration**

Function	Set PINs
Yutaki unit	
Available low ambient for cooling mode (Not available)	
Heating only (Not used)	
Set temp by rotary switch (Commissioning)	
Set temp by system controller (4 to 20 mA)	



• **DSW4: unit model configurations**

Function	Set PINs	Function	Set PINs
(Not used)		(Not used)	
(Not used)		(Not used)	
Heat pump		R410A	
Yutaki heat pump		CO ₂ (Not used)	
(Not used)		Power save (Max Hz=Nominal)	
(Not used)		(Not available)	
(Not used)		230 V	
(Not used)		400 V	







- **DSW5: H-LINK available / settings**

Function	Set PINs
Not used	
Not used	



- **DSW6: end resistance / fuse recovery**

Function	Set PINs
Not used	
Not used	

- **DSW7: unit control configuration**

Function	Set PINs
Three phase	
Single phase	
Not used	
Inverter compresor	
Cancel zero-reset expansion valve	
Liquid injection enable	

- **DSW8 (Pd) / DSW9 (Ps): setting Pd / Ps pressure sensor type**

Function	Set PINs
Not used	
Pressure sensor R410A	

- **Jumper lead setting (JP2): Automatic restart after power failure**

Keep the same status as before. Setting before shipment:

JP2
1

0 = Open; 1 = Short circuit

The function selection using the jumper lead setting is shown in the table below.

Setting	Function	Details
0	Enable	If this function is 'Enable', in case of power failure the unit will restart automatically once the power is recovered
1	Disable	

3.4. LED INDICATION

3

- **LED1, LED2 and LED3: Power supply indication**

Status	LED1	LED2	LED3
Power supply ON	ON	OFF	OFF
Power supply OFF	OFF	OFF	OFF
Not available for Yutaki			

- **LED4: Operation status indication**

Status	LED4
Unit stopped	OFF
Unit running	ON
Alarm	OFF

- **LED5: Alarm indication**


Status	LED5
Normal	OFF
Alarm	ON


- **LED6: Setting mode indication**


Status	LED6
Setting mode disable	OFF
Setting mode enable (DSW1#3: ON)	ON

3.5. PUMP ELECTRICAL INSTALLATION


Yutaki is controlling the pump by itself. The pump kits CCW11 or CCW21 must be always connected according to the wiring below:

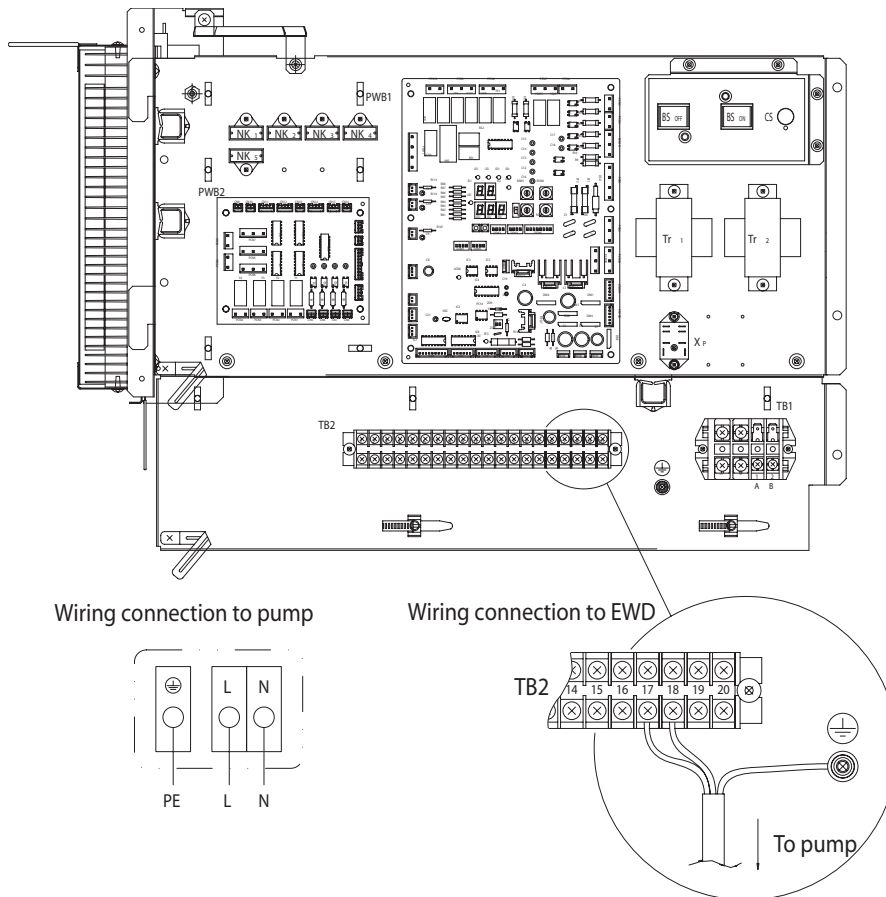


	NOTE
<ul style="list-style-type: none"> - The generic pump must be connected to terminals 17 and 18 in the terminal board (TB2). - Terminals 17 and 18 were designed for 230V/3A. Take it into account when installing the pump. An external relay might be necessary. Do not install a pump with more than 3A consumption. - Earth screw terminal is used for both pump and power supply wiring connection. - Install a pump accordingly to the necessary supply water delivery. - Hitachi recommends the use of accessory pump kits CCW11 or CCW21. 	

Hitachi pump kit accessory name	Code	Figure
CCW11	9E500001	
CCW21	9E500002	

Follow the procedure described in chapter "2" to assemble the pump kit. Remove the front cover according to the procedures described in chapter "9".


	CAUTION
<p>- <i>The pumps must not be used for drinking water or food stuffs.</i></p>	

3.5.1. Electrical connection

	DANGER
<p>- <i>Due to the presence of a hazardous contact voltage (capacitors).</i></p>	

The supply cable must be laid in such a way that it never touches the pipework and/or the pump and motor casing. To guarantee protection against dripping water and to ensure strain relief of the cable, use a cable gland (PG 13.5), a connecting cable with an external diameter of 10-12 mm must be used and assembled as shown in the next figure.


3

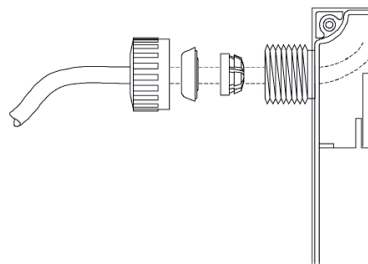

3.5.2. Operation



The system must be filled and vented properly. The pump rotor chamber will vent automatically after a short running period. Brief dry running will not damage the pump. The pumps which are equipped with vent screws can be ventilated as follows if necessary:

1. Switch off the pump.
2. Close the shut-off valve on the discharge side.

	CAUTION
<p>- <i>Risk of scalding</i> <i>Depending on the fluid temperature and the system pressure, if the vent screw is completely loosened hot liquid or gas should escape or even shoot out at high pressure. Protect all electrical parts against the water released from the unit.</i></p>	

3.5.3. Troubleshooting


Problem	Cause	Remedy
Motor is switched on but falls to run	Electrical fuse faulty / has switched off	Change fuse/switch on electrical connection. Should the fuse blow several times in a row: Check the pump for electrical faults Check the pump mains cable and electrical connection
	Residual current operated circuit-breaker has triggered	Switch residual current operated circuit-breaker back on Should the circuit-breaker trip several times in a row: Check the pump for electrical faults Check the pump mains cable and electrical connection
	Undervoltage	Check the voltage at the pump (observe rating plate data)
	Winding damage	Call customer services
	Faulty terminal box	Call customer services
	Faulty capacitor (with 1~ only). Terminal box type 1/2/3/6/7	Replace the capacitor
	Speed selection connector not installed Terminal box type 3/4/5	Fit speed selection connector
	Bridge not or incorrectly assembled Terminal box type 6/7 for 1~3- operation: green LED on	Correctly assemble bridge, see connection diagrams

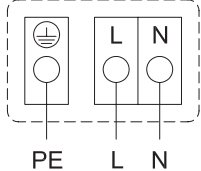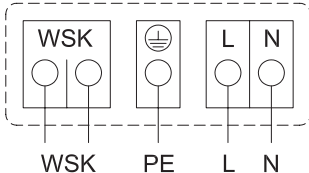Model	Protection type (Cut-out)	Connection terminals	
TOP-S 25/7	Auto reset	 PE L N	1~ 230 V, 50 Hz
TOP-S 25/10	Manual reset	 WSK PE L N	

3.6. HEATER ELECTRIC INSTALLATION

- Install the unit in a restricted area not accessible by the general public.
- Follow local codes and regulations when selecting field wires, circuit breakers and earth Leakage breakers. (See Heater manual).

Customer connection:

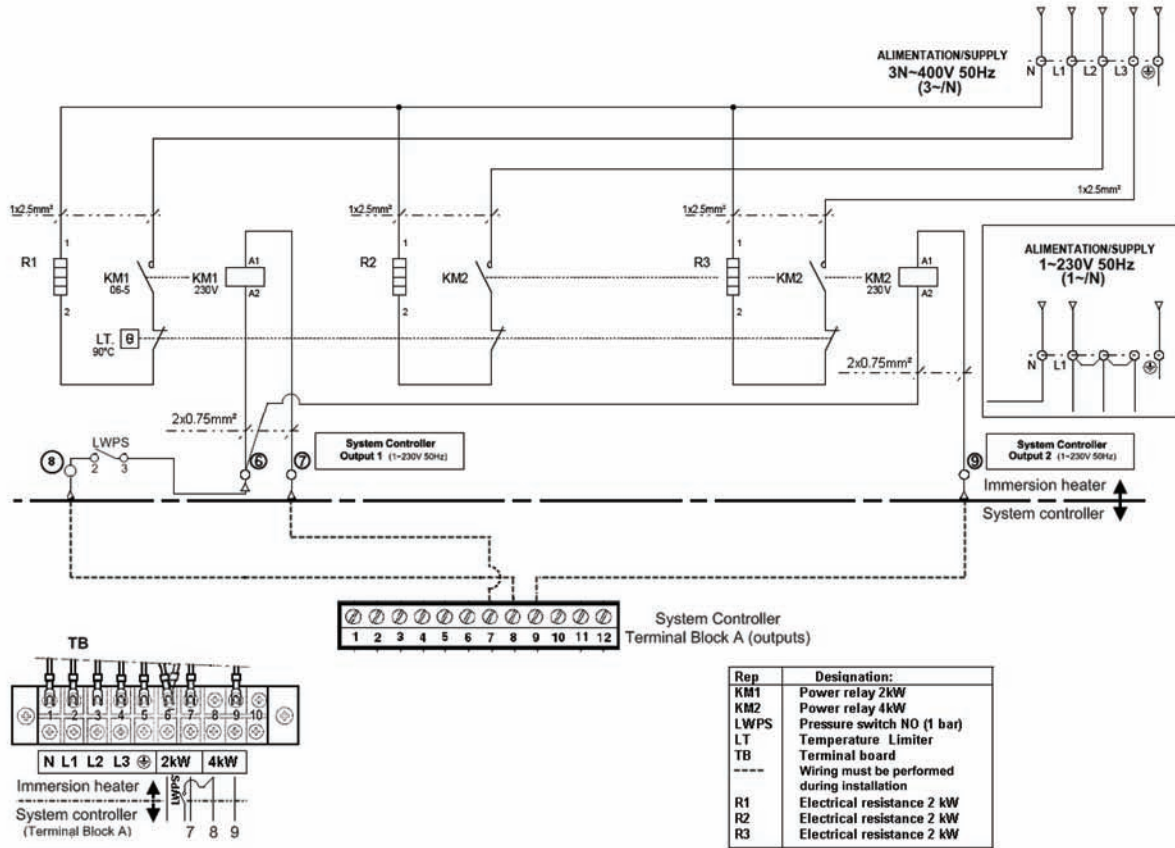

3

Operation:

The heater operation is controlled by the System Control. The heating needs are calculated and regulated by the heat pump controller by using 3 steps:

Regulation step	R1 - electric resistance 1	R2 - electric resistance 2	R3 - electric resistance 3	Total power
Step 0:	OFF	OFF	OFF	0 kW
Step 1:	ON	OFF	OFF	2 kW
Step 2:	OFF	ON	ON	4 kW
Step 3:	ON	ON	ON	6 kW

Troubleshooting

Before checking ensure to disconnect any electrical power supply to the heater. In case of non-functioning heater, the following items should be checked:


- Signals to the heat pump are correctly connected.
- Fuse protection of heater are in good condition.


- Water flow is assured permanently
- There is a minimum water pressure of 1 bar and LPSW has not cut out the circuit
- Thermostat button and ensure that it has not cut out by exceeding temperature

Press firmly on the safety manual reset button located between the 2 relays electrical power to rearm the safety cut out (It may occur that safety cut out is triggered due to a stoppage of water flow).

In case of non-function, remove circulation heater.

3.7. ELECTRICAL WIRING BETWEEN YUTAKI AND SYSTEM CONTROLLER

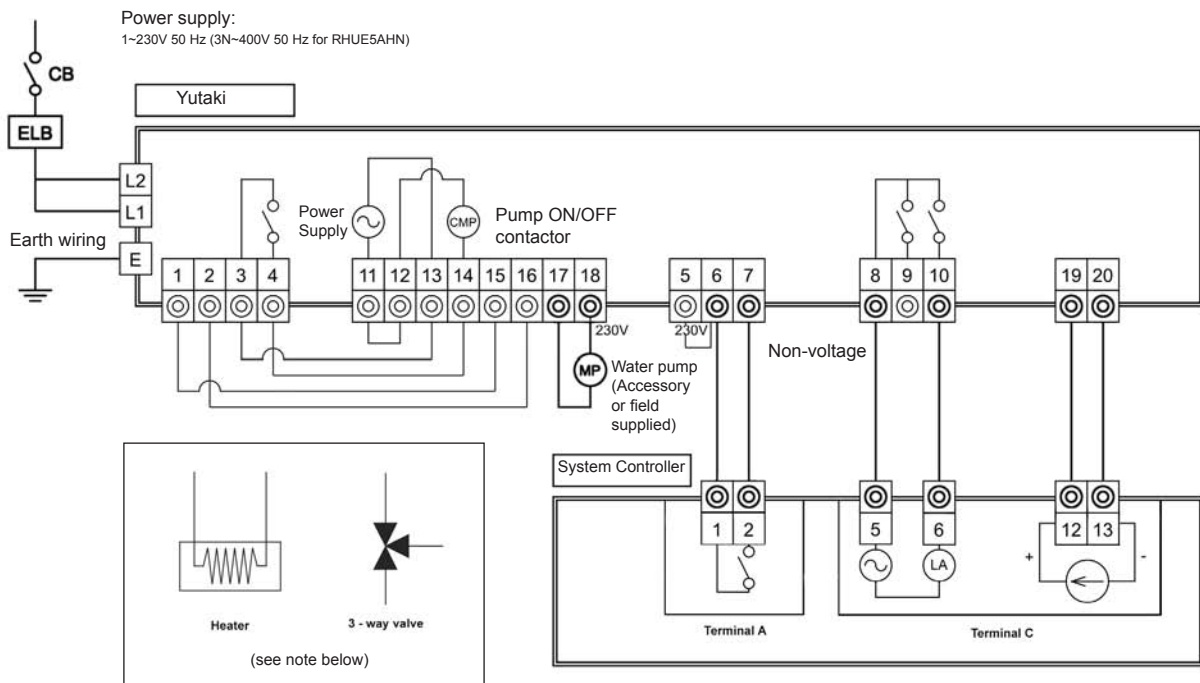

	NOTE
<ul style="list-style-type: none"> - For details of connection between Yutaki and system controller, refer to chapter "4". - The heater and the 3-way valve are accessories. (Their codes are EH61 and VID3V1 respectively). - Refer to chapter "4" for more information. 	

3.8. ELECTRICAL WIRING DIAGRAMS

This sub-chapter shows the electrical wiring diagram for each unit of the Yutaki series.

Unit model	Page number
RHUE(3~5)AVHN	54
RHUE5AHN	55

4. CONTROLLER PACK

This chapter presents the control system flowcharts for the Yutaki series.

CONTENTS

4.1. System description and configurations.....	59
4.1.1. Description	59
4.1.2. System overview	59
4.1.3. Contents of the controller pack	60
4.1.4. Quick-start installation steps	60
4.2. System controller.....	61
4.2.1. Software version.....	61
4.2.2. System controller - overview	61
4.2.3. Operation & user interface	62
4.2.4. Abbreviations & terminology	62
4.2.5. System component connections	65
4.2.5.1. Heat pump	65
4.2.5.2. Electric heater	65
4.2.5.3. Boiler	66
4.2.5.4. Mixing valve.....	66
4.2.5.5. Secondary pump	66
4.2.5.6. Domestic hot water (DHW).....	67
4.2.5.7. RF receiver box.....	67
4.2.5.8. DHW electric heater	67
4.2.5.9. DHW time clock.....	67
4.2.5.10. Tariff-switching device	68
4.2.5.11. Temperature sensors.....	68
4.2.6. User interface	69
4.2.6.1. Display.....	69
4.2.6.2. Controls.....	69
4.2.7. Installation configuration settings	70
4.2.7.1. Reviewing and setting the installer parameters	70
4.2.7.2. Installer parameter list.....	71
4.2.8. System testing.....	72
4.2.8.1. System start-up	72
4.2.8.2. System test.....	73
4.2.8.3. Reviewing the operational data	73
4.2.8.4. Manually overriding the outputs	74
4.2.9. Troubleshooting.....	75
4.2.9.1. Fault codes and diagnostics.....	75
4.2.9.2. Reset to factory default condition.....	75
4.3. Applications	76
4.3.1. Application configurations	76
4.3.2. Principle of Bi-Valent or Mono-Energetic Operation.....	76
4.3.3. Mono-valent systems 'conf 1'.....	78
4.3.4. Mono-energetic systems 'conf 2'	79
4.3.5. Bi-Valent parallel systems - direct 'conf 3'	80
4.3.6. Bi-Valent system - parallel operation - mixing loop 'conf 4'	81
4.3.7. Bi-Valent system - serial operation 'conf 5'	82

4.4.	Supply setpoint calculation.....	83
4.5.	Heating control functions.....	84
4.5.1.	Heating circuit - general	84
4.5.2	Heating characteristic curve (OTC control).....	84
4.5.2.1.	Room setpoint parallel shift.....	88
4.5.2.2.	Room temperature compensation.....	89
4.5.3.	Heating circuit minimum/maximum temperature limits.....	89
4.5.4.	Heating circuit (secondary) pump	90
4.5.5.	Automatic no-load function.....	90
4.5.6.	Floor screed drying function.....	91
4.5.7.	System frost protection.....	91
4.5.8.	Anti-seize protection for pumps and valves	92
4.6.	DHW control functions.....	92
4.6.1.	DHW Storage Tank Loading.....	92
4.6.2.	DHW Control	93
4.6.3.	Maximum DHW Loading Time.....	94
4.6.4.	DHW Electric Heater	95
4.6.5.	Using the Boiler for DHW loading	96
4.6.6.	Response of the Heat pump to a DHW demand.....	96
4.6.7.	DHW Time Program	96
4.7.	Heatpump control functions.....	97
4.7.1.	Heatpump Control	97
4.7.2	Heatpump Setting Control Signal.....	98
4.7.3.	Heatpump Sensor Offset.....	99
4.7.4.	Heatpump Maximum Return High Limit	99
4.7.5.	Heatpump Operating Limits	100
4.7.6	Tariff Switch (Heat Pump blocking) Input	100
4.8.	Boiler control functions.....	101
4.8.1.	Boiler Control.....	101
4.8.2.	Supply-Return Difference Check.....	102
4.8.3.	Boiler Minimum On / Off Times	103
4.8.4.	Boiler Waiting Time	103
4.8.5.	Maximum Outdoor Temperature for Boiler Operation	104
4.9.	Electric heater control functions	104
4.9.1.	Electric Heater Control	104
4.9.2.	Supply-Return Difference Check.....	106
4.9.3.	Electric Heater Waiting Time	107
4.9.4.	Electric Heater Return High Limit Check.....	107
4.9.5.	Maximum Outdoor Temperature for Electrical Heater Operation	108
4.10.	Mixing valve control functions	108
4.10.1.	Mixing Valve Control.....	108
4.10.2.	Mixing / Bypass Valve Control.....	108
4.10.3.	Mixed Heating Circuit Maximum Temperature Limit Protection.....	109

4.11. General functions	109
4.11.1. System Frost Protection	109
4.11.2. Automatic Summer Switch-Off	110
4.11.3. Pump and Valve Seizure Protection	110
4.11.4. Screed function (drying for new floors)	110
4.12. Parameter tables	111
4.12.1. Installer Parameters	111
4.12.2. Engineering Parameters	113
4.13. Conversion table: heat pump supply temperature to ma.....	114
4.14. Sensor resistance tables	115
4.15. Technical data	116
4.15.2. System Controller (XEK23232 A).....	116
4.15.2. Water Temperature Sensor (XEK35524 A)	116
4.15.3. Outdoor Temperature Sensor (XEK35438 A).....	116
4.16. System MMI Pack (Room unit and RF receiver).....	117
4.16.1. Room Unit installation guide	117
4.16.1.1. Description	117
4.16.1.2. Installation information	117
4.16.1.3. Installing the System MMI Pack	118
4.16.1.4. Installing the RF Receiver	118
4.16.2. Installing the Room Unit	119
4.16.2.1. Power up	119
4.16.2.2. RF Communication check (test mode).....	120
4.16.2.3. Locating the Room Unit.....	120
4.16.3. Communication loss	121
4.16.4. Installer mode.....	121
4.16.4.1. Entering installer mode.....	122
4.16.4.2. Fail-Safe mode setup	122
4.16.4.3. Using the Room Unit for specific applications.....	122
4.16.4.4. Using the special features of the Room Unit	123
4.16.5. Installer parameters table.....	123
4.16.5.1. Category 1 - Room Unit settings	123
4.16.5.2. Category 2 - System settings	124
4.16.6. Binding / Rebinding procedure	125
4.16.7. Technical data	126
4.16.7.1. Specifications	126
4.16.7.2. Standards, approvals and function definition	126
4.16.8. Room Unit user guide	127
4.16.8.1. Setting-up.....	128
4.16.8.2. Programming.....	129
4.16.8.3. Operating.....	131
4.16.8.4. Troubleshooting System MMI Pack.....	132
4.16.8.5. Diagnostic mode.....	132
4.16.8.6. FAQ's.....	133
4.17. Sensor pack	133
4.17.1. Water Temperature Sensor	133
4.17.2. Outside Temperature Sensor	134

4.1. SYSTEM DESCRIPTION AND CONFIGURATIONS

4.1.1. Description


The System Controller is a configurable outdoor-temperature-compensated heating controller.


The System Controller is a part of the Heat Pump Controller Pack and is linked to the other components of the hydronic control system, such as the wireless Room Unit, RF Receiver, Water Temperature Sensor and Outside Sensor.

The Room Unit is connected to the System Controller via radio signals, enabling simpler installation and offering the end user a choice of how the system operates.

The System Controller operates the heat pump, electric heater or boiler, valves and pumps to ensure optimal operation of the heating system.

The System Controller has an LCD display with a simple menu structure operated by five buttons, so that it can easily be configured to many different applications with specific installation settings.

 NOTE
<ul style="list-style-type: none"> - When performing any work with this product (installation, mounting, start-up), all instructions given by the manufacturer and in particular the safety instructions provided in the installation instructions must be followed. - The System Controller may only be installed and mounted by authorised and suitably trained personnel. - If the unit is modified in any way, except by the manufacturer, all warranties concerning operation and safety are invalidated. - Make sure that local standards and regulations are respected at all times. - Use only accessory equipment that comes from or has been approved by Honeywell.

 CAUTION
<ul style="list-style-type: none"> - Disconnect the mains power supply before you start to install the System Controller. Do not reconnect the power supply until you have completed all installation work. - Before the controller is dismantled, disconnect the main power supply.



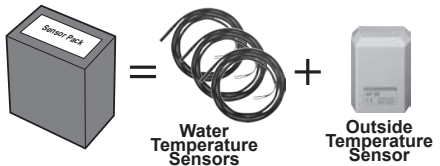
4.1.2. System overview

The System Controller is designed for controlling the heat pump in a mono-valent, mono-energetic or bi-valent heating system. It provides efficient control and reduces energy use while maintaining comfort in the building.

- Modulating control of heat pump.
- Control of an Auxiliary heat source (electric heater or boiler).
- Outside temperature compensated (OTC) control.
- Control of heating circuit pumps/valves and, optionally, domestic hot water storage.
- System frost protection.

The functionality of the System Controller depends on the installed components and the selected configuration. The System Controller is designed in a way that it can be configured and upgraded to meet many application requirements.

4.1.3. Contents of the controller pack

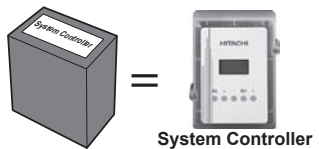 <p>System Controller</p>	<p>- System Controller</p> <ul style="list-style-type: none"> • Controls the heat pump. • Controls other system components. • Measures system sensors. • Allows system configuration and settings.
 <p>Room Unit RF Receiver</p>	<p>- System MMI Pack</p> <ul style="list-style-type: none"> • Room Unit - The user interface for the system and allows time / temperature profile programming. • RF Receiver - Receives wireless signals from the Room Unit and is wired directly to the System Controller.
 <p>Water Temperature Sensors Outside Temperature Sensor</p>	<p>- Sensor Pack</p> <ul style="list-style-type: none"> • 3 x Water Temperature Sensors. • 1 x Outside Temperature Sensor. • Sensors connect directly to System Controller.

4

4.1.4. Quick-start installation steps

1. Select which type of system you wish to install.
2. Determine where the various system components should be installed.
3. Mount the system components- for System Controller and Sensors. For room Unit and RF Receiver : see installation instructions in the System MMI Pack.
4. Connect the Sensors, RF Receiver, heat pump and other system components to the System Controller according to your selected system configuration.
5. Change installer parameters on the System Controller according to your selected system configuration.
6. Review settings and time/temperature profile on the Room Unit (see installation instructions in the System MMI Pack).
7. Test the system.
8. Show end-user how to operate the Room Unit.
9. Leave literature pack with the end-user.

The System Controller can be used for several different hydraulic system configurations. The hydraulic configuration is selected by an installer parameter (CONF). Each of the system configurations is described in more detail on the following pages.

Hydraulic Configuration	Description	Heat Pump	Electric Heater	Boiler	DHW	Direct circuit	Mixing circuit
CONF 1	Mono-Valent System Heat Pump only Direct circuit	X			(X)	X	
CONF 2	Mono-Energetic System Heat Pump and Electric Heater Direct circuit	X	X		(X)	X	
CONF 3	Bi-Valent Parallel System Heat Pump and Boiler Direct circuit	X		X	(X)	X	
CONF 4	Bi-Valent Parallel System Heat Pump and Boiler Mixing circuit	X		X			X
CONF 5	Bi-Valent Series System Heat Pump and Boiler Mixing by-pass circuit	X		X	(X)		X


DHW Storage

The System Controller can also be used in a system which has a DHW storage tank, with either a diverting valve or pump. If the system has a separate DHW pump, then a hydraulic separator or buffer tank has to be used to ensure proper hydraulic balancing of the system.

The DHW system type is selected by an installer parameter (P1).

Secondary pump

When a hydraulic separator or buffer tank is used in CONF 1 & 2, the system requires a secondary pump to be controlled. In this case it is necessary to set installer parameter P2 to 1.

	NOTE
- Electrical wiring is different for each system. Please refer to the wiring diagrams on the following pages.	


4.2. SYSTEM CONTROLLER

4.2.1. Software version

This documentation refers to the functionality of software version v7 of the System Controller. The software version is shown on the display for 2 seconds during the power-up sequence. The software and hardware version numbers are also printed on the label inside the unit, attached to the mains transformer.



LCD display
Software version shown at power-up

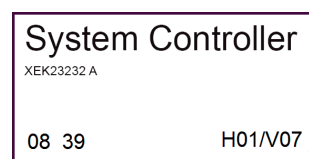

Label
Production date (year:08, week:39)
Hardware version H01
Software version V07

4.2.2. System controller - overview

The System Controller is designed for controlling the heat pump in a mono-valent, mono-energetic or bivalent heating system. It provides efficient control and reduces energy use while maintaining comfort in the building.

- Modulating Control of Heat Pump
- Control of an Auxiliary Heat Source (electric heater or boiler)
- Outside Temperature Compensated (OTC) Control
- Control of Heating Circuit pumps/valves and, optionally, domestic hot water storage.
- System Frost Protection

The functionality of the System Controller depends on the installed components and the selected configuration. The System Controller is designed in a way that it can be configured and upgraded to meet many application requirements.

4.2.3. Operation & user interface


Please refer to the System Controller Installation Guide for details on the user interface of the system controller, and how to operate the device.

4.2.4. Abbreviations & terminology

Mono-Valent	One heating source (electric heat pump)	TSUP	Supply water temperature
Mono- Energetic	One energy source (electric heat pump and electric heater)	TRET	Return water temperature
Bi-Valent	Two heating sources (electric heat pump and gas/oil boiler)	TDHW	Dhw temperature
OTC	Outside temperature compensated control	TEXT	Outside (external) air temperature
DHW	Domestic hot water	TMIX	Mixed water temperature
Zone 1	The main heating loop controlled by the system controller.	TR1	Room temperature
Zone 2	The extension mixed heating loop controlled by the extension controller.	V	Mixing valve position
		FAUL	Fault status
		SSUP	Overall system supply setpoint
		S1	Zone 1 supply setpoint
		SR1	Zone 1 room temperature setpoint
		S2	Zone 2 supply setpoint
		DSET	Dhw setpoint
		SDHW	Dhw supply setpoint

- **Installing the System Controller**
- **Mounting**

The system controller is designed to be mounted either directly onto the wall or on a DIN-rail.



- **Fitting or removing the front cover**


To remove the front cover from the mounting base

1. Unscrew the two retaining screws ①.
2. Pull the front cover off the mounting base ②.

To fit the front cover onto the mounting base:


1. Line up the mounting base and front cover.
2. Push the front cover firmly onto the mounting base.
3. Secure the front cover using the two retaining screws.



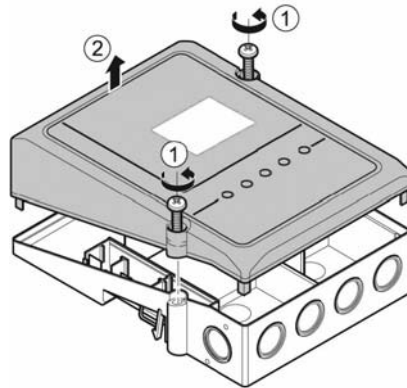

• **Wall Mounting**


- Four 4.0 mm holes for installation are located on the System Controller mounting base for wall mounting.
- Before wall mounting, remove the four break-outs (A).

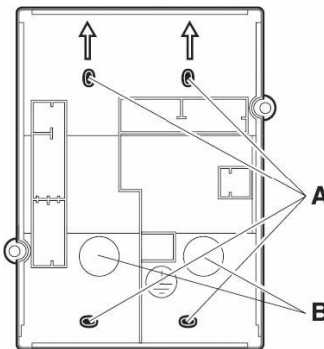

- For wire entry, remove the appropriate break-outs in the mounting box.
- Use screws (max diameter 4mm) and wall plugs suitable for the wall material (not included).

• **Mounting on a DIN rail**

- The system controller can easily be clicked on to a DIN-rail via the locating clips on both sides of the mounting base.
 1. Hold the controller at an angle, and hook onto the top of the DIN-rail.
 2. Push the controller straight and against the DIN-rail.
 3. The locating clips will snap on the bottom of the DIN-rail.
 4. For removal, bend the clips ① and pull the controller off the DIN-rail ②.

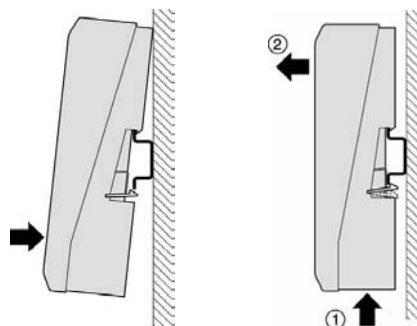

• **Electrical wiring**

	CAUTION
<ul style="list-style-type: none"> - Isolate the mains power supply before installing the System Controller. Do not reconnect the mains power supply until the installation is completed. - The system controller must be intalled by a suitably qualified person, in accordance with local standards and guidelines. 	

The mounting base has two options for wiring: wall or surface-wiring, with wires from the rear or wiring from the bottom or sides. For safety reasons, the power source wiring and signal wires are separated and in different compartments of the mounting base

- On the left side the signal wiring is laid out.
- On the right side, the power source and earth wiring are situated (power and output relay contacts).


• **Wiring holes for wall or surface-wiring**

When wiring through the back of the mounting base remove the breakout ports from the wiring holes at the rear base.

• **Wiring holes for bottom or side-wiring**

When wiring through the bottom or side of the mounting base, insulated cables must be used. Use appropriate cable glands (not include with the System Controller).

To install the cable glands, remove the breakout ports from the wiring holes at the required location in the base.

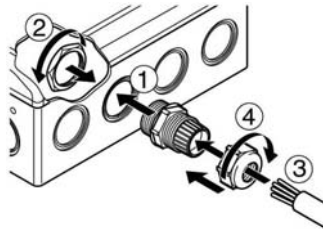

4

• **Wiring connections**


	CAUTION
<ul style="list-style-type: none"> - The electronic components within the W6560C are susceptible to damage caused by static electricity. - Therefore, appropriate measures must be taken when handling the device: <ul style="list-style-type: none"> - Do not touch internal components. - Touch an earthed piece of metal to discharge static electricity from your body. 	

	CAUTION
<ul style="list-style-type: none"> - A short circuit or incorrect installation will damage the system controller. 	

• **The terminal blocks**


The terminal blocks (A, B and C) have the same terminals and are suitable for wires from 0.3 to 1.6mm². The earth connector block D is suitable for wires from 0.3 to 2.7mm².

	CAUTION
<ul style="list-style-type: none"> - In some applications, there may be several input and output cables that cannot be connected directly within the system controller terminal blocks. In such cases, it is recommended that a separate wiring block is used with an appropriate cover. 	

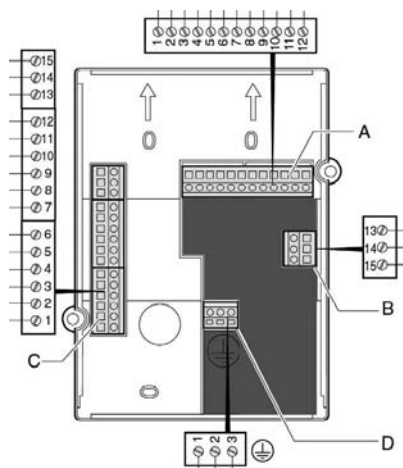


- **Main power supply – Terminal block B**

The main power connection (230VAC) is wired to connector block B, terminals 13 and 15.



- **Earth terminals – Terminal block D**


The earth wires coming from the power source wiring and the pump, mixing valve, heat pump and boiler, can be combined and connected to connector block D. All three terminals are internally connected.



4.2.5. System component connections

◆ 4.2.5.1. Heat pump


The System Controller controls the heat pump outlet water temperature by a 4-20mA signal. When there is no demand for the heat pump to be on, the System Controller directly switches the heat pump off. The heat pump can signal to the System Controller when it has a fault so that a fault code can be displayed and appropriate action taken.

	NOTE
- The 4-20mA signal wire has polarity.	

◆ 4.2.5.2. Electric heater

In a mono-energetic system (CONF 2), the electric heater is used if required to increase the supply water temperature.


P19 Waiting time for boiler/electric heater

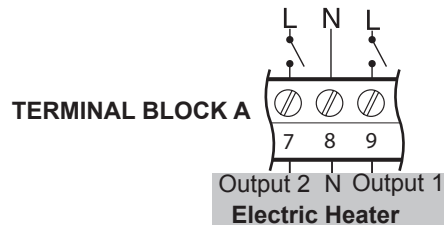

◆ 4.2.5.3. Boiler

In a Bi-Valent System (CONF 3,4,5), the boiler is used when the heat pump cannot achieve the desired supply temperature on its own. Set the minimum on and off times (P17 and P18), according to boiler type, to prevent inefficient short-cycling.

- P17 Boiler Minimum ON Time
- P18 Boiler Minimum OFF Time
- P19 Waiting time for boiler/electric heater

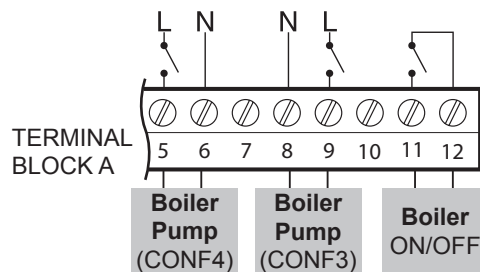


4

◆ 4.2.5.4. Mixing valve

In a mixing system (CONF 4,5), the mixing valve is controlled to maintain the required supply temperature. Set the parameter (P9) according to the running time of the actuator used.


- P9 Actuator Run Time for Mixing Valve

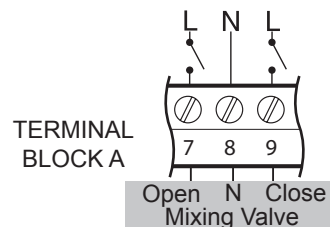

◆ 4.2.5.5. Secondary pump

The secondary pump is the circulating pump for the main heating loop. In mono-valent and mono-energetic systems (CONF 1, 2), a secondary pump is only required if a hydraulic separator or buffer tank is used and in this case it is necessary to set the parameter (P2) to 1. Before the heating is switched off, the pump continues to run for a short time - pump overrun time (P3) – to distribute the energy through the system.


- P2 Secondary Pump Selection (CONF 1,2)
- P3 Pump Overrun Time

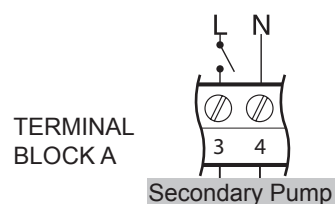

◆ 4.2.5.6. Domestic hot water (DHW)


The System Controller can use the heat pump and boiler (bi-valent systems) to maintain the DHW storage tank at the DHW setpoint (P10).

- P10 DHW setpoint
- P11 DHW control differential
- P12 DHW supply offset

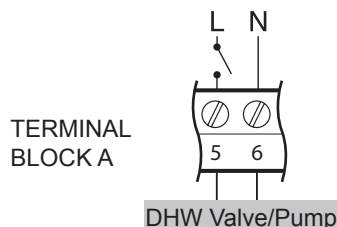

◆ 4.2.5.7. RF receiver box


The RF Receiver is connected to the polarity-free terminals 7 and 8. The Room Unit and RF Receiver are already configured to communicate with each other. If the Room Unit or RF Receiver is replaced, it is necessary to use the RF Binding procedure (see 9.2)



◆ 4.2.5.8. DHW electric heater

(CONF 1 and 2 only)

If the DHW storage tank contains a thermostatic electric heater, the System Controller can enable it if the heat pump cannot achieve the required DHW temperature by itself. The controller waits 10 minutes after DHW storage heating is required before enabling this output.

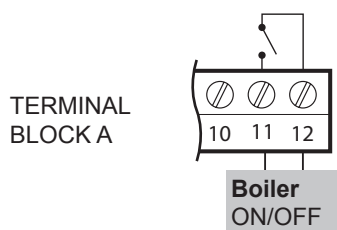


◆ 4.2.5.9. DHW time clock

It is possible to connect an external time clock to the System Controller to provide time-of-day switching of the DHW storage. The input can be configured so that heating of the DHW storage tank is blocked (disabled) on either an open circuit or closed circuit condition.

- P24 Configuration of Tariff/Timer Input

Note that the Tariff/Timer input (terminals 10 & 11) can be used for DHW Time Switching OR Tariff-Switching, not both.

P24	Open Circuit on terminals 10/11	Closed Circuit on terminals 10/11
0	Tariff/Timer Input is ignored	
1	Tariff/Timer input is used for Heat Pump blocking	
2	Tariff/Timer input is used for Heat Pump blocking	
3	DHW is blocked	DHW is enabled
4	DHW is enabled	DHW is blocked




◆ 4.2.5.10. Tariff-switching device

If a tariff-switching device (load shedding management) is provided by the electricity utility, it can be used to prevent the heat pump switching on, and the System Controller will use the boiler instead to satisfy the heating requirements (bi-valent systems only). The input can be configured so that the heat pump is blocked (disabled) on either an open circuit or closed circuit condition.

P24 Configuration of Tariff/Timer Input

Note that the Tariff/Timer input (terminals 10 & 11) can be used for DHW Time Switching OR Tariff-Switching, not both.


P24	Open Circuit on terminals 10/11	Closed Circuit on terminals 10/11
0	Tariff/Timer Input is ignored	
1	Heat Pump is enabled	Heat Pump is blocked
2	Heat Pump is blocked	Heat Pump is enabled
3	Tariff/Timer input is used for DHW time clock	
4	Tariff/Timer input is used for DHW time clock	



◆ 4.2.5.11. Temperature sensors

All sensors used are of type NTC 20K (at 25°C).


- The outdoor sensor (T EXT) is used for OTC control, frost protection, summer switch-off, and bi-valent system management.
- The DHW sensor (T DHW) is used for control of the domestic hot water storage tank.
- The supply sensor (T SUP) is used to control the water temperature from the heat sources. Please see hydraulic diagrams for sensor positioning.
- The mixed supply sensor (T MIX) is used in systems with a mixing valve (CONF 4 & 5 only) and should be positioned after the mixing valve and the circulation pump.
- The return water sensor (T RET) is used for heat pump return temperature protection and should be positioned on the return pipe to the heat pump.

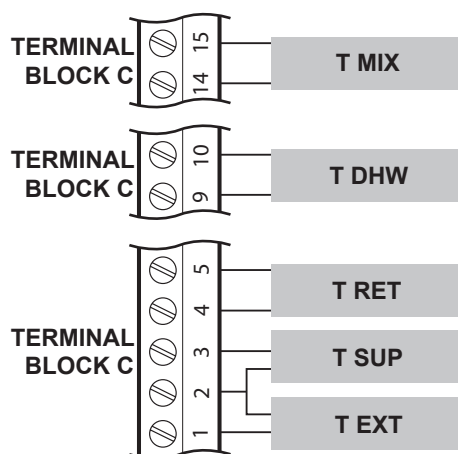







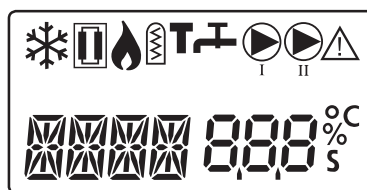


4.2.6. User interface

◆ 4.2.6.1. Display


The display of the System Controller is simple to understand and has extra segments to indicate the operating mode, failures and status.



-  Frost Protection Symbol
Displayed when the frost protection feature is active.
-  Heat Pump Symbol
Indicates that the Heat Pump is switched on by the controller.
-  Boiler Symbol
Displayed when the boiler (bi-valent system) is switched on to provide additional heating.
-  Electric Heater Symbol
Displayed when the electric heater (mono-energetic system) is switched on to provide additional heating.
-  Tariff/Timer Symbol
Displayed when external tariff/timer blocking function is activated.
-  DHW Symbol
Displayed when the system is heating the DHW storage tank.
-  Pump I Symbol
Displayed when the primary boiler pump (bi-valent systems) is running.
-  Pump II Symbol
Displayed when the secondary pump (if connected) is running.
-  Fault Symbol
Displayed in case of a fault. The display will show the text "FAUL" and the fault number.

◆ 4.2.6.2. Controls

The System Controller has a simple five buttons interface with an user friendly display.

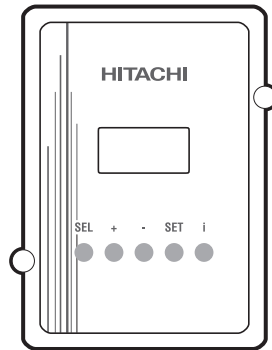

- SEL** Select button
- Used to leave setting mode.
 - Used to cancel a new setting and retain old value.
- +** Increase button
- Used to select the next parameter.
 - Used to increase the value of the selected parameter.
- Decrease button
- Used to select the previous parameter.
 - Use to decrease the value of the selected parameter.
- SET** Set button
- Used to enter setting mode
 - Used to accept new value for a parameter.
- i** Info button
- Used to enter Operational Data Display mode.
 - Used to select next operational data item

4

Pressing particular combinations of these buttons will allow display or alteration of the various operating parameters.

4.2.7. Installation configuration settings

The configuration of the System Controller is performed using the 5 buttons on the front cover. Via these buttons, a simple menu structure can be accessed to adjust all the controller parameters.

All menus use the 4 characters in the left of the display to show an abbreviated name, and the three digits in the right for the value. Units are shown in the far right of the display next to the value.

If no button is pressed for 10 minutes, the display will return to the default menu, or the relevant fault code.


◆ 4.2.7.1. Reviewing and setting the installer parameters

The System Controller is delivered with a set of pre-programmed parameters to allow a quick start-up procedure. The factory default settings are shown in the table on the next page. Should it be necessary to adjust any of these parameter settings, please refer to the table and follow the instructions below.

To enter Parameter Display mode from the Normal Operation mode, press **+** and **-** buttons together for at least one second. The display will show "CONF" to indicate that the System Controller is in Parameter Display mode, and shows the first parameter CONF (Hydraulic Configuration) and its current setting.

1. Use the **+** and **-** buttons to move up or down the parameter list according to the table.
2. To change a parameter setting, use the **SET** button to enter Parameter Setting mode. The value of the parameter will flash to show that it can now be changed. Use the **+** and **-** buttons to change the value to the desired setting.


3. To store the parameter setting, press the **SET** button. The flashing will stop to show the value has been saved. Instead, to cancel the change, and retain the previously stored value, press the **SEL** button.
4. Continue to change the parameters as required. When finished, or at any time, pressing the **i** button will return the display to Normal Operation mode.

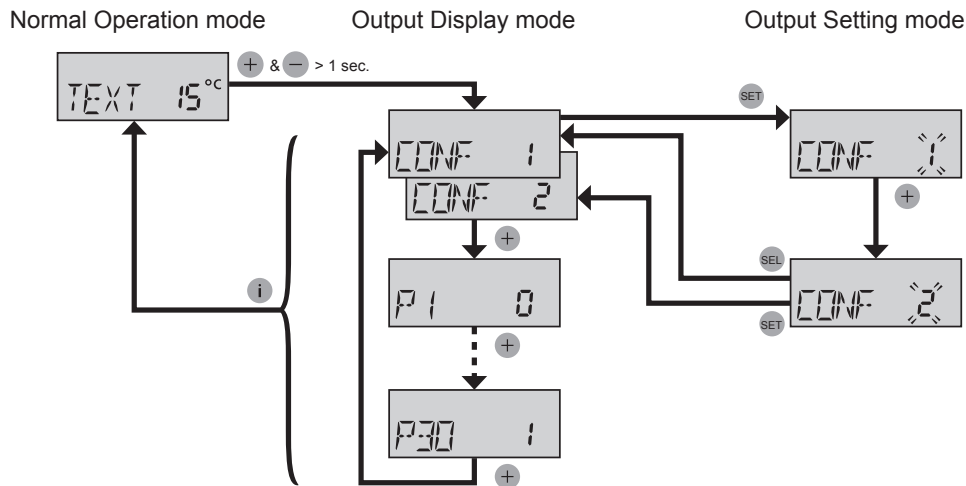

◆ 4.2.7.2. Installer parameter list

ID	Parameter	CONF	Description	Min	Max	Step	Default	Setting
CONF	System configuration	12345	Set according to the type of hydraulic configuration installed	1	5	1	2	
P1	DHW configuration	123-5	Set to 0=No DHW, 1=DHW valve, 2=DHW pump	0	2	1	0	
P2	Secondary pump	12---	Set to 1 if a buffer/hydraulic separator and a secondary pump is used (CONF 1 or CONF 2 only)	0	1	1	0	
P3	Pump overrun time	12345	Sets how long the pumps run after the heating is switched off.	1	10	1	2 min.	
P4	OTC heating curve gradient	12345	Sets the heating curve for OTC control function	0.2	5	0.1	0.6	
P5	Minimum supply temperature	12345	Sets the minimum supply water temperature for the heating	5	40	1	10°C	
P6	Zone 1: maximum supply temperature	12345	Sets the maximum supply water temperature for the heating (zone 1)	20	55/ 65/ 90*	1	50°C	
P7	Room compensation factor	12345	Sets the room temperature influence for the OTC control function	0	5	0.5	2	
P9	Actuator run time / mixing valve control	---45	Set to the running time of the actuator (see actuator manufacturer's instructions)	30	600	10	120 s	
P10	"DHW setpoint (not available if p1=0)"	123-5	Setpoint for the DHW control function	45	65	1	60°C	
P11	"DHW differential (not available if p1=0)"	123-5	DHW control differential	1	10	1	5 K	
P12	"DHW supply offset (not available if p1=0)"	123-5	Influences how quickly the hot water tank is heated	1	30	1	10 K	
P15	Maximum outdoor temperature for boiler/ electric operation.	-2345	Boiler / Electric heater will be disabled above this temperature (Heat Pump works on its own). OFF means the boiler/electric heater is always enabled.	-20	20, then OFF	1	5°C	
P17	Boiler minimum on time	--345	Sets the minimum ON time of the boiler to reduce inefficient short-cycling	1	30	1	2 min	
P18	Boiler minimum off time	--345	Sets the minimum OFF time of the boiler to reduce inefficient short-cycling	1	30	1	5 min.	
P19	Waiting time for boiler/ electric heater	-2345	Sets the minimum time the controller will wait (after the heat pump is switched on) before using the boiler or electric heater	1	90	1	30 min.	

ID	Parameter	CONF	Description	Min	Max	Step	Default	Setting
P21	Minimum supply setpoint during frost protection	12345	Sets the minimum supply water temperature when the frost protection function is active	10	35	1	20 °C	
P22	Frost protection activation temperature	12345	Sets the outdoor temperature below which the frost protection function will activate.	-20, then OFF	5	1	3°C	
P23	Zone2: maximum supply temperature	12345	Sets the maximum supply water temperature for the heating (zone 2 extension)	20	55/ 65/ 90*	1	50°C	
P24	Configuration of tariff/timer input	12345	The sets the meaning of the digital input "Tariff/Timer"	0	4	1	0	
P25	Start screed-drying function	12345	Set to 1 to start immediately the underfloor screed-drying function	0	1	1	0	
P26	Summer switch-off temperature	12345	Sets the daily average outdoor temperature above which the heating will be switched off	10	25, then OFF	1	20°C	
P27	"Maximum allowed dhw loading time (not available if p1=0)"	123-5	Sets the maximum time allowed for DHW loading. After this time, if the DHW setpoint is not achieved, the controller will nevertheless return to heating	1	12	1	2 hr	
P30	No-load function enable	12345	Disables the heating in Zone 1 if the OTC calculated supply setpoint falls below the room temperature (or room setpoint, if no room temp)	0	1	1	1	

	NOTE
<ul style="list-style-type: none"> - Operational data shown depends on the system configuration (CONF) setting. - Zone 1 is the heating loop controlled by the System Controller. - Zone 2 is the heating loop controlled by the Extension Controller. 	

4

* Maximum supply temperature limit depends on configuration

- CONF 1: limit = 55°C
- CONF 2: limit = 65°C
- CONF 3,4,5: limit = 55°C

4.2.8. System testing


◆ 4.2.8.1. System start-up

After the installation of sensors and outputs, the System Controller can be started for the first time.

Switch on the mains power supply.

The controller will be initialised with the default configuration stored in the internal memory.

A test procedure is performed to check the validity of the data in the internal memory, and the various inputs are tested. All sensors and communications devices are automatically detected. All faults and warnings are automatically reset and the software version is displayed for reference.

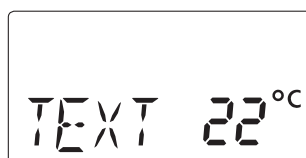

◆ 4.2.8.2. System test

Once the system has been installed, it is recommended that the following tests are carried out:


1. Check that you have selected the correct configuration, and that the necessary installation parameters have been set.
2. Check the wiring of the inputs and outputs. Use the procedure in 7.3 to view the temperature sensor values. It is possible to manually override the outputs to test the system operation.
3. Check that the Room Unit is communicating with the RF Receiver. To do this, change the temperature setpoint on the Room Unit to the maximum or minimum value and check that the heat pump reacts appropriately.

◆ 4.2.8.3. Reviewing the operational data

The table below shows the values that are available to be viewed during Normal Operation mode. These can be shown by pressing the **i** button

	Abbr.	Operational Data	Units	CONF
Sensor Temperatures	TEXT	Outdoor temperature	°C	12345
	TSUP	Supply water temperature	°C	12345
	TMIX	Zone1: Mixed supply temperature	°C	---45
	TRET	Return temperature	°C	12345
	TDHW	DHW temperature	°C	123-5
	TR1	Room temperature	°C	12345
	V	Mixing valve position	-	---45
	FAUL	Fault status	-	12345
Controller Setpoints	SSUP	Overall system supply setpoint	°C	12345
	S1	Zone1: supply setpoint	°C	12345
	SR1	Zone1: room setpoint	°C	12345
	S2	Zone2: supply setpoint	°C	12345
	DSET	DHW setpoint	°C	123-5
	SDHW	DHW supply setpoint	°C	123-5

Normal Operation mode

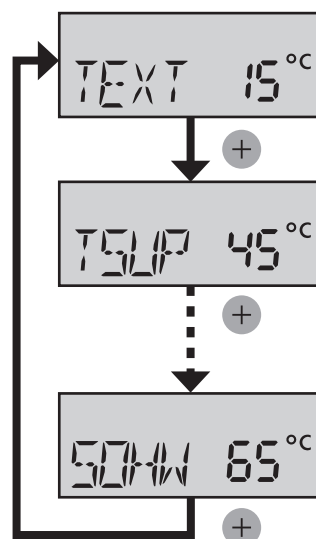

i	NOTE
<ul style="list-style-type: none"> - Operational data shown depends on the system configuration (CONF) setting. - Zone 1 is the heating loop controlled by the System Controller. - Zone 2 is the heating loop controlled by the Extension Controller. 	

◆ 4.2.8.4. Manually overriding the outputs

This feature allows the status of the outputs to be changed in order to test the electrical connections.


To enter Output Display mode from Normal Operating mode, press the **SEL** and **SET** buttons together for at least one second. The display will show “HPS” to indicate that the controller is in Output Display mode and shows the first output “HPS” and its current status.

1. Use the **+** and **-** buttons to move up or down the output list according to the table.
2. To change an output, use the **SET** button to enter Output Setting mode. The value of the output will flash to show that it can now be changed. To change the output value, use the **+** and **-** buttons.
3. To save the output setting, press the **SET** button. The flashing will stop to show the value has been saved, and the letter F (Fixed) will appear to show that the output is being overridden. Note that the value must be saved before it takes effect. Instead, to cancel the change, and retain the previously stored value, press the **SEL** button.

To cancel the manual override of an output, enter the Output Setting mode and then press **+** and **-** together for one second. The “F” disappears from the display to show that the output is no longer overridden.

At any time, pressing the **i** button will return the display to normal operation mode.


Please refer to the electrical wiring connections to identify which relays should be connected to which output for a particular system configuration.

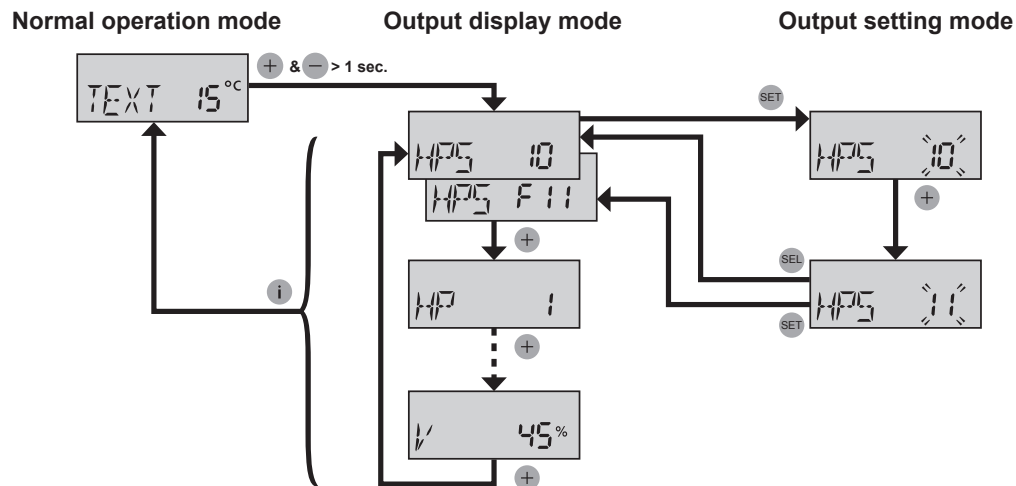

ID	Output	Min	Max	CONF
HPS	Heat pump setting (mA)	2	20	12345
HP	Heat pump remote on/off	0	1	12345
PO2	Secondary pump (not displayed if P2=0)	0	1	12345
DHWV	DHW valve/pump (not shown if P1=0)	0	1	123-5
EHS1	Electric heater output 1	0	1	-2---
EHS2	Electric heater output 2	0	1	-2---



ID	Output	Min	Max	CONF
DHWE	DHW electric heater enable (not shown if P1=0)	0	1	12---
PO1	Boiler pump	0	1	--34
BLR	Boiler on/off	0	1	--345
V	Mixing valve position (%)	0	99	---45

	NOTE
- Operational data shown depends on the system configuration (CONF) setting.	



4.2.9. Troubleshooting

◆ 4.2.9.1. Fault codes and diagnostics

Fault codes are displayed in the default display as “FAUL 1” to “FAUL 13”. The table below describes the meaning of the fault code, the behaviour of the system during that fault condition and suggested remedial action to solve the problem.

Code	Fault Description	System Behaviour	Remedy
FAUL 0	No fault detected	System operates normally	
FAUL 1	No supply water temperature sensor (TSUP) or sensor failure.	Heat Pump and Boiler (or Electric Heater) will be disabled.	Check sensor operation and sensor wiring.
FAUL 2	No return water temperature sensor (TRET) or sensor failure.	The system will continue to operate, but the heat pump may operate even when the return temperature is too high.	Check sensor operation and sensor wiring.
FAUL 3	No mixed water temperature sensor (TMIX) or sensor failure.	The mixing valve will close and no heating will be available.	Check sensor operation and sensor wiring.
FAUL 4	No DHW temperature sensor (TDHW) or sensor failure.	There will be no DHW tank heating available.	Check sensor operation and sensor wiring.
FAUL 5	No outdoor temperature sensor (TEXT) or sensor failure.	The system will continue to operate, but with a fixed outdoor temperature of 10°C.	Check sensor operation and sensor wiring.
FAUL 6	Loss of communications with RF receiver.	System will continue to operate, but no room influence is possible, and control will not follow the thermostat time programme.	Check wiring to RF Receiver. Please refer to the RF Receiver installation guide.
FAUL 7	Loss of connection to the heat pump control signal.	The heat pump and electric heater will be disabled.	Check control wiring to heat pump.
FAUL 8	Water temperature goes above maximum (mixing system only).	The mixing valve will close to prevent overheating of underfloor system.	If problem persists, check system sensors and valve operation.
FAUL 9	Fault notified by the heat pump.	Heat Pump and Electric Heater will be disabled.	Refer to the heat pump installation guide. To allow the electric heater or boiler to continue operating (manual release), press the + and SEL buttons simultaneously.
FAUL 10	Failure of the binding between RF receiver and thermostat	System will continue to operate, but no room influence is possible, and control will not follow the thermostat time programme.	Check wiring to RF Receiver. Please refer to the RF Receiver installation guide.
FAUL 11	Incorrect device connected to RF receiver terminals.	System will continue to operate, but no room influence is possible, and control will not follow the thermostat time programme.	Check wiring to RF Receiver. Please refer to the RF Receiver installation guide.
FAUL 12	Failure of the RF receiver to receive messages from the thermostat.	System will continue to operate, but no room influence is possible, and control will not follow the thermostat time programme.	Check wiring to RF Receiver. Please refer to the RF Receiver installation guide.
FAUL 13	The chosen extension is not allowed in this configuration.	The system will continue to operate normally without the extension.	Select a configuration where the extension is allowed.

◆ 4.2.9.2. Reset to factory default condition

Should it be necessary to reset the controller to the factory default condition, press the  and  buttons together during the power-on cycle. Remember to re-select the desired hydraulic configuration and set the necessary installation parameters.

4.3. APPLICATIONS

4.3.1. Application configurations

The System Controller can be used for several different hydraulic system configurations, including monovalent systems, mono-energetic systems with auxiliary electric heater, and bi-valent systems with gas/oil boiler. The hydraulic system configuration should be selected by setting the parameter CONF.

Hydraulic configuration	Description	Heat pump	Electric heater	Boiler	DHW	Direct circuit	Mixing circuit
CONF 1	Mono-valent system heat pump only direct circuit	X			(X)	X	
CONF 2	Mono-energetic system heat pump and electric heater direct circuit	X	X		(X)	X	
CONF 3	Bi-valent parallel system heat pump and boiler direct circuit	X		X	(X)	X	
CONF 4	Bi-valent parallel system heat pump and boiler mixing circuit	X		X			X
CONF 5	Bi-valent series system heat pump and boiler mixing by-pass circuit	X		X	(X)		X

- **DHW Storage**

The System Controller can be used in a system which has a DHW storage tank, with either a diverting valve or pump. If the system has a separate DHW pump, then a hydraulic separator or buffer tank has to be used to ensure proper hydraulic balancing of the system.

The DHW system type is selected by an installer parameter (P1)

- **Buffer Tank or Hydraulic Separator**

When a hydraulic separator or buffer tank is used in CONF 1 & 2, the system will contain a secondary pump on the distribution side of the separator/buffer. In this case it is necessary to set installer parameter P2 to 1.

In bi-valent systems (CONF 3,4,5) a hydraulic separator or buffer tank is always needed.

4.3.2. Principle of Bi-Valent or Mono-Energetic Operation

- **Function**

Bi-valent and mono-energetic systems use an auxiliary heat source (boiler or electric heater respectively) in addition to the heat pump.

At higher outdoor temperatures, the heat pump can provide all the heating requirements of the system, and it is not necessary to switch on the auxiliary heat source. However at lower outdoor temperatures, the electric heater or boiler is used to provide the increased heating demand. The changeover point for bivalent or mono-energetic operation is called the balance point. A +/-0.5K control differential is applied to the switching between the operating modes.


Outdoor temperature (TEXT) > Balance Point (BP)+0.5K, the boiler or electric heater is not used.


(Exception is that the boiler can be used for DHW loading.)

Outdoor temperature (TEXT) < Balance point (BP)-0.5K, the system controller determines whether to switch on the boiler or electric heater depending on the heating requirements. Refer to the sections on Boiler Control and Electric Heater Control for more details.

• **Installer Parameters**

P15 Maximum Outdoor Temperature for Boiler/Electric Heater Operation
= Balance Point (BP) (default 0°C)

	NOTE
<p>- Parameter P15 can be set to OFF, in which case the boiler or electric heater is allowed to operate at all outdoor temperatures.</p>	

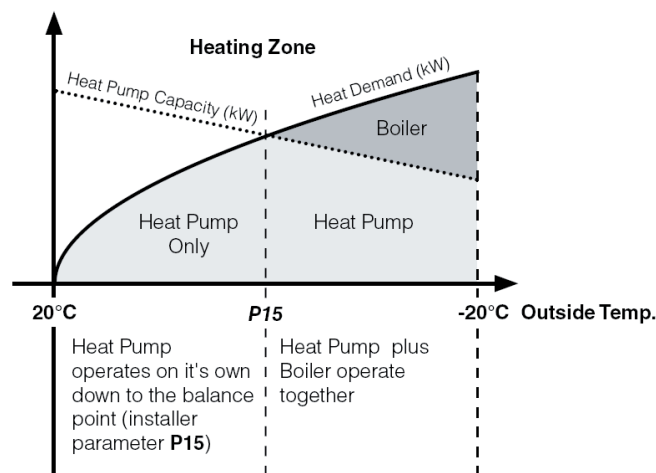

• **Configartion specific**

CONF 2 Mono-Energetic Systems

The electric heater is used to “top-up” the energy required for the system. The System Controller tries to ensure that the heat pump is always running when the electric heater is used, but there may be some circumstances where the electric heater is providing all the energy for the heating system.

CONF 3,5 Bi-Valent Parallel Systems

The normal operation in these systems is that when the heat pump cannot meet the heating load, the boiler will take over the full energy requirements of the system (alternative operation).

4.3.3. Mono-valent systems 'conf 1'

- **Summary**

In mono-valent systems, the heat pump is the sole provider of heating energy to the system. The Heat Pump is sized to provide 100% of the heating requirements on the coldest day of the year. It is recommended for low-energy houses and for moderate climates without severe winters. Used in new builds or in boiler-replacement applications.

This configuration is suitable for low-temperature radiators and underfloor heating systems.

- **Important parameter settings**

CONF = 1

P1 = 0,1,2 according to DHW system type.

P2 = 0,1 according to whether a buffer tank/hydraulic separator and secondary pump is installed.

P4 = heating curve according to building and system characteristics.


It is also recommended to review all parameter settings, and make modifications as required by the installation.

In order to achieve higher DHW temperatures, the system can operate with an auxiliary DHW electric heater.

- **Example**


Mono-Valent System with DHW.
DHW controlled by diverting valve
Auxiliary DHW electric heater.

CONF=1 Mono-valent system
P1=1 DHW valve
P2=0 no secondary pump

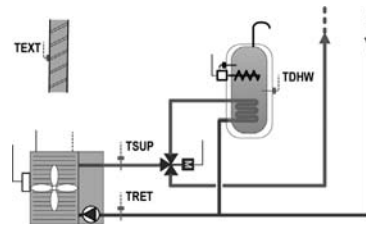


Mono-Valent System with DHW.
Hydraulic separator or buffer tank.
Secondary pump for heating system.
DHW controlled by separate pump.
Auxiliary DHW electric heater.


CONF=1 Mono-valent system
P1=2 DHW pump
P2=1 Secondary pump

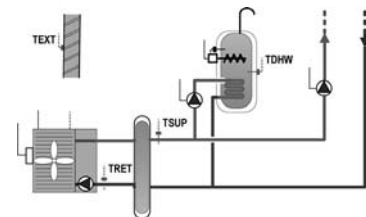

Terminal block C (inputs)

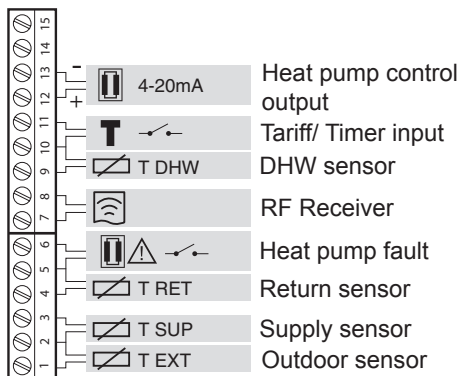

Terminal block A (outputs)

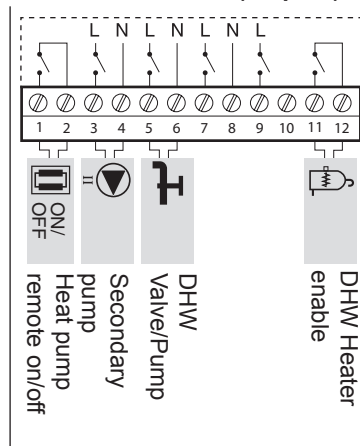

Terminal block B (Power Supply)



4.3.4. Mono-energetic systems 'conf 2'

• **Summary**

In mono-energetic systems, the heat pump is supplemented by a 3-stage electric heater to provide additional heating energy to the system. The Heat Pump is sized to provide around 60% of the heating requirements on the coldest day of the year, and will typically provide 90-95% of the heating requirements over the whole heating season. An electric auxiliary heater is used to provide the additional heating required on cold days. Used in new builds or in boiler-replacement applications.

• **Important parameter settings**

CONF = 2

P1 = 0,1,2 according to DHW system type.

P2 = 0,1 according to whether a buffer tank/hydraulic separator and secondary pump is installed.

P4 = heating curve according to building and system characteristics.

P33 = 5K (electric heater return high limit offset)

The Electric Heater Return High Limit is an important check to help ensure that the heat pump operates as much as possible even when higher supply temperatures are required, thus emphasising energy economy operation. To enable this feature parameter P33 (return temperature limit offset) should be set to a value of 5K. Refer to the section on Electric Heater Control for more information. It is also recommended to review all parameter settings, and make modifications as required by the installation.

In order to achieve higher DHW temperatures, the system can operate with an auxiliary DHW electric heater.



• **Example**

Mono-Energetic System with DHW.
DHW controlled by diverting valve
Auxiliary DHW electric heater.


CONF=2 Mono-energetic system
P1=1 DHW valve
P2=0 no secondary pump

Mono-Energetic System with DHW.
Hydraulic separator or buffer tank.
Secondary pump for heating system.
DHW controlled by separate pump.
Auxiliary DHW electric heater.


CONF=1 Mono-energetic system
P1=2 DHW pump
P2=1 Secondary pump

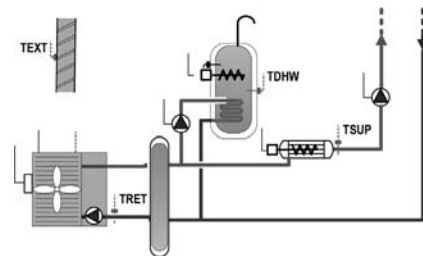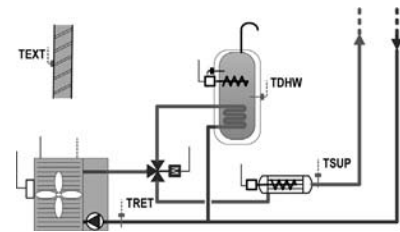


Terminal block C (inputs)

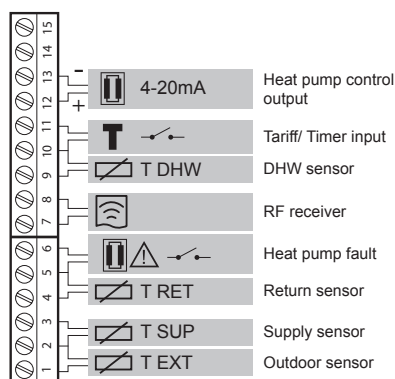

Terminal block A (outputs)

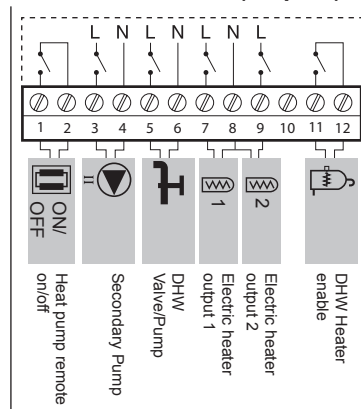

Terminal block B (Power Supply)



4.3.6. Bi-Valent system - parallel operation - mixing loop 'conf 4'

- **Summary**

This is a bivalent system where the boiler is configured in parallel with the heat pump. A hydraulic separator or buffer tank has to be used to ensure proper hydraulic balancing. This system is recommended for retrofit (upgrade) applications where an existing gas/oil boiler will be retained to provide the full heating requirements on the coldest days of the year.

- **Important parameter settings**

CONF = 4

P4 = heating curve according to building and system characteristics.


DHW tank control is not possible with this system.

It is also recommended to review all parameter settings, and make modifications as required by the installation.


- **Example**

Bi-Valent System with DHW & mixed heating loop.
Hydraulic separator or buffer tank.


CONF=4 Bi-valent Parallel system

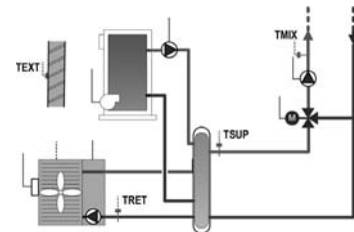

Terminal block C (inputs)

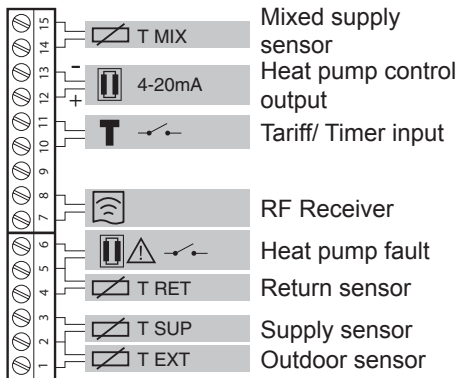

Terminal block A (outputs)

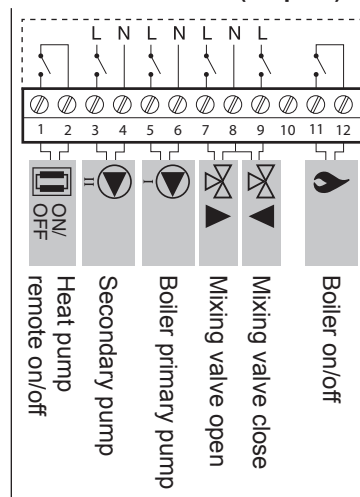

Terminal block B (Power Supply)



4.3.7. Bi-Valent system - serial operation 'conf 5'

• Summary

This is a bivalent system where the boiler is configured in series with the heat pump. A hydraulic separator or buffer tank has to be used to ensure proper hydraulic balancing. This system is also used for retrofit (upgrade) applications, but operates like the mono-energetic system using the gas/oil boiler, similarly to the electric heater, in series with the heat-pump. The boiler only needs to provide the additional peak load capacity

• Important parameter settings

CONF = 5

P1 = 0,1,2 according to DHW system type.

P4 = heating curve according to building and system characteristics.

It is also recommended to review all parameter settings, and make modifications as required by the installation.



• Example

Bi-Valent System with DHW.
Serial operation with bypass/mixing valve.
DHW controlled by diverting valve
Hydraulic separator or buffer tank.


CONF=5 Bi-valent Parallel system
P1=1 DHW valve

Bi-Valent System with DHW.
Serial operation with bypass/mixing valve.
DHW controlled by separate pump.
Hydraulic separator or buffer tank.


CONF=5 Bi-Valent Parallel system
P1=2 DHW pump

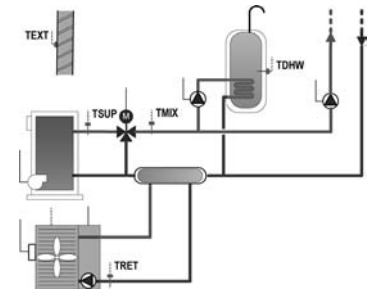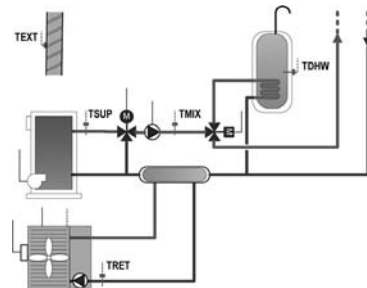

Terminal block C (inputs)

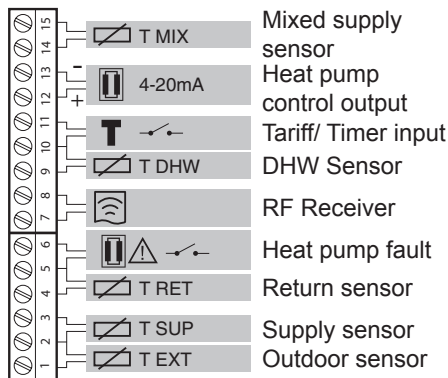

Terminal block A (outputs)

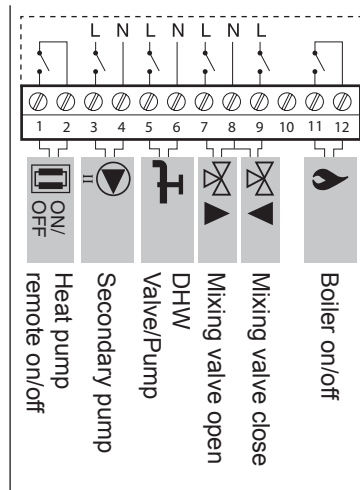

Terminal block B (Power Supply)



4.4. SUPPLY SETPOINT CALCULATION

• Calculation

The System Controller uses the “zone of greatest demand” strategy for calculating the supply water temperature required from the Heat Pump (and/or 3-stage electric heater or boiler).

The system controller recognises three “zones”:

- Zone 1: The normal heating loop controlled directly by the System Controller (direct or mixed depending on the system configuration).
- Zone 2: The mixed heating loop controlled by the Extension Controller.
- DHW zone: The DHW storage tank loading loop.

Each zone can generate a demand to the heat pump (and/or boiler/electric heater) for a particular supply water temperature

- S1: The supply setpoint water temperature required by the “zone 1” heating loop.
- S2: The supply setpoint water temperature required by the “zone 2” heating loop.
- SDHW: The supply setpoint water temperature required by the DHW loop.


The actual supply setpoint used at any time is the maximum of the three zone supply setpoints.

$SSUP = \text{maximum}(S1, S2, SDHW)$

It is the objective of the system controller to manage the Heat Pump, 3-stage electric heater and boiler appropriately to control the supply water temperature (TSUP) to this setpoint (SSUP).

• Illustration

The diagram below shows the three possible “zones” and illustrates the required water temperatures (S1, S2, SDHW) for each zone, and the resulting overall supply setpoint (SSUP).

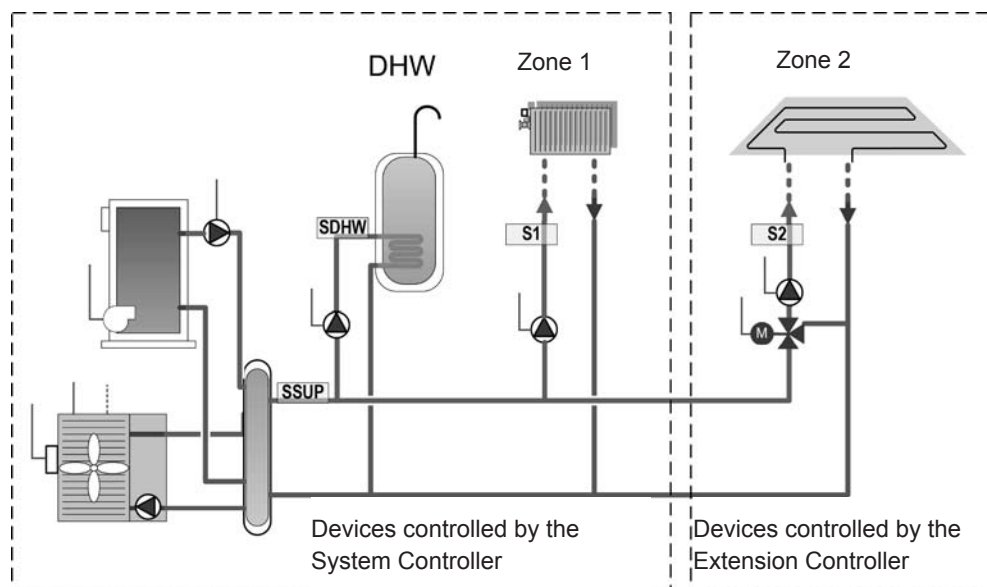

• Example

- Heating zone 1 requires 50°C (calculated from OTC heating curve)
- Heating zone 2 requires 35°C (calculated by extension controller)
- DHW loading not required

S1 = 50°C, S2 = 35°C, SDHW = 0°C

Therefore SSUP = maximum of (50°C, 35°C, 0°C) = 50°C

Note that the extension controller will then control the mixing circuit to achieve comfort conditions in zone 2.

- **Binding RF components together**

The Room Unit and RF receiver included in the system pack are already factory configured to work together. If either of these units have to be replaced, please follow the instructions below for the method of binding RF components together.

To enter the RF Binding procedure, press and hold the button on the RF Receiver for 5 seconds. The red LED will begin to flash.

When binding the RF Receiver to the Room Unit, the System Controller display will show a flashing "ZONE 1", meaning that the system will bind to the first heating zone by default. Zone 1 is the zone controlled directly by the System Controller.

To bind Zone 2 (the extension system), press the + button on the System Controller. "ZONE 2" will be displayed, and the RF system will be bound to that zone. The bound zone can be changed by following the re-binding procedure on the RF Receiver/Room Unit and adjusting the zone selected on the System Controller display.

4.5. HEATING CONTROL FUNCTIONS

4

4.5.1. Heating circuit - general

- **Function**

The heating circuit is usually always enabled which means the controller will always try to provide the Correct water temperature to maintain the desired comfort conditions based on the heating characteristic curve as described below.

However, the heating circuit is disabled when:

- DHW storage tank loading is required.
- Or the summer switch-off condition is active
- Or the no-load condition is active

4.5.2 Heating characteristic curve (OTC control)

- **Function**


The system controller is an outside temperature compensated (OTC) control system that uses the outside temperature, the room temperature setpoint, and optionally the room temperature, to calculate the correct supply water temperature for the system in order to maintain comfort conditions. A prerequisite for constant room comfort conditions is the correct setting of the heating characteristic curve as well as the correct design of the heating system by the heating installer according to heat demand calculations.

The heating curve should be selected according to the local climatic conditions, building structure and type of heating distribution system. The gradient of the heating curve describes the relation between the change in the supply temperature and the change in outside temperature. In the case of large heating surfaces (and therefore low supply temperatures) like floor heating systems the heating characteristic curve is less steep compared to smaller heating surfaces (eg radiators). Typically a well-insulated, modern building with underfloor heating would use a heating curve value of 0.4-0.6 And one with radiator heating a value of around 1.6.

• **Parameter settings**

- P4 OTC heating curve gradient (default value 1.1)
- P7 Room Compensation Factor
- P6 Maximum Supply Setpoint

The graph shows the supply water temperature setpoint, when the room setpoint=20°C and no room compensation is applied. The heating curve can be limited by the maximum supply setpoint parameter (P6) to prevent for example high temperatures going to the floor heating system.


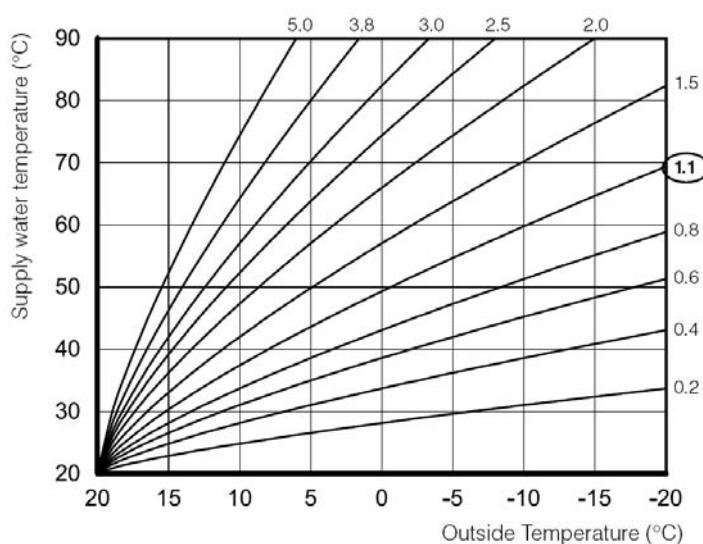


• **Example**

P4 = 1.1
 TEXT (outside temperature) = 0°C
 SR1 (room setpoint) = 20°C
 => From graph, s1 (supply setpoint) = 49°C



• **MONO-VALENT**

Maximum temperature is fixed by Yutaki working range. Over that value, the supply water temperature cannot be achieved. The installation should be designed considering this range.

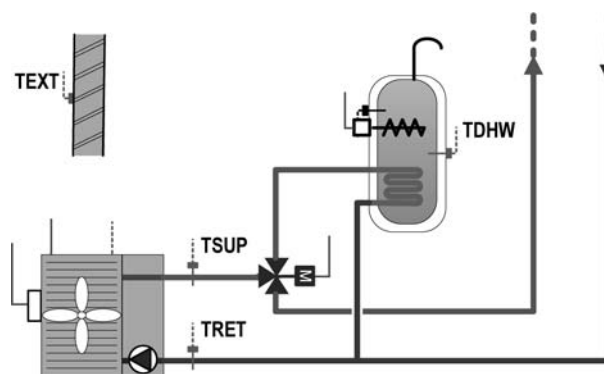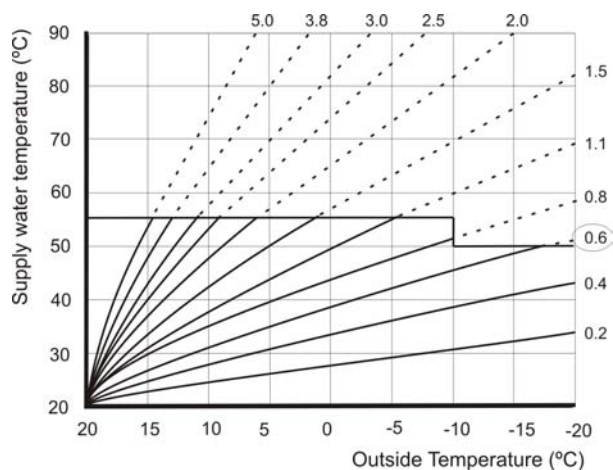

• **MONO-ENERGETIC**


- P15: Max outdoor temp for boiler/E. heater operation.
- Maximum temperature is fixed by Yutaki working range between 20°C and the value P15.
- From P15 to -20 maximum temperature is increased to 65°C.
- P6 adjust the total maximum temperature (from 65°C to 20°C).
- Over that value, the supply water temperature cannot be achieved.
- The installation should be designed considering this range.

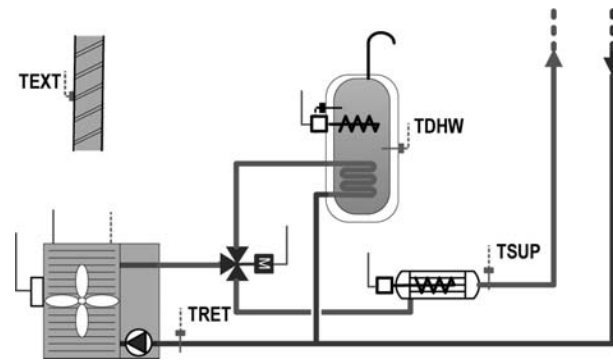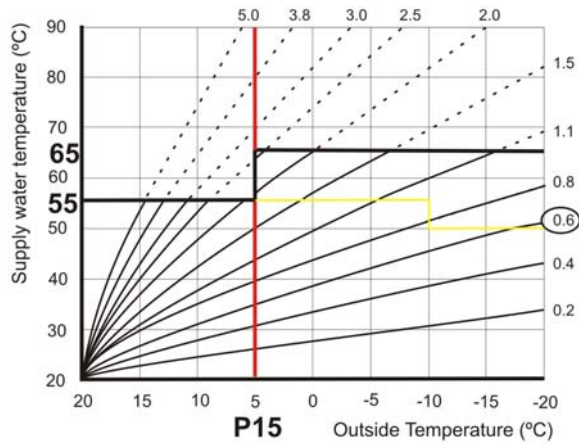

4

• Offset factor:

- Factor to compensate the difference between T SUP (Temperature read after heater) and discharge temperature reach by Yutaki (Cannot be read by system controller).
- This factor avoid the activation of the electric heater when Yutaki can really reach the requested water temperature.

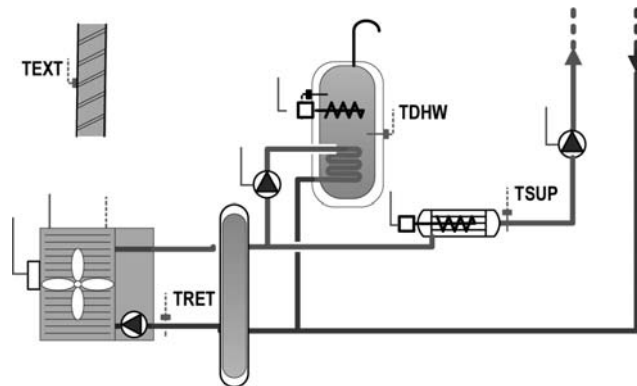

- Default value offset = 2
- Variable from 2 to 5

• Yutaki OFF factor:



- System control will not activate the heater if Yutaki unit is in or near Thermo Off.
- Fixed in factory (Cannot be changed).

• Economy system factor:


- When heater is ON and return temperature is over 52°C, Yutaki unit is automatically Thermo OFF (Protection).
- In that cases, only the heater is working, so the power supply cost will be highly increased.
- Economy system operates to reduce the cost, so if return temperature (TR) > Max range -5 (55-5=50 or 50-5=45), the heater is not activated.

• **BI-VALENT**

At higher outdoor temperatures, the heat pump can provide all the heating requirements of the system, and it is not necessary to use the auxiliary heating (boiler or electric heater). However, at lower outside temperatures, it becomes necessary to allow the electric heater or boiler to provide the increased heating demand.

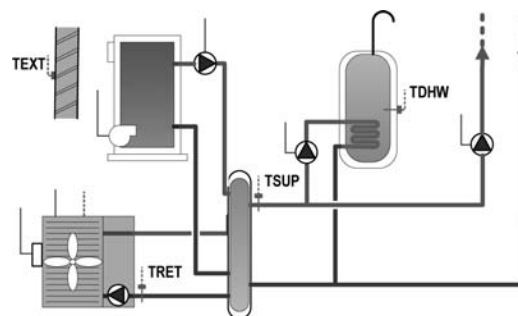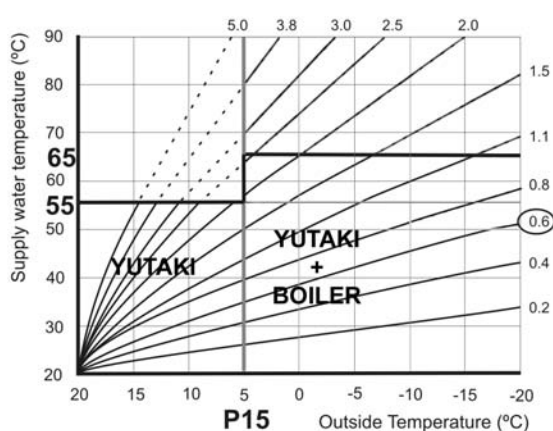

- The boiler is only used when the heat pump cannot achieve the desired supply temperature.
- The controller waits some time (waiting time for boiler/electric heater) before switching on the boiler.
- The function is based on P+I control of supply temperature.
- To prevent short-cycling, the boiler stays ON for at least the minimum on time, and stays OFF for at least the minimum off time settings.
- Boiler pump is ON whenever boiler is ON, and includes a pump overrun feature.

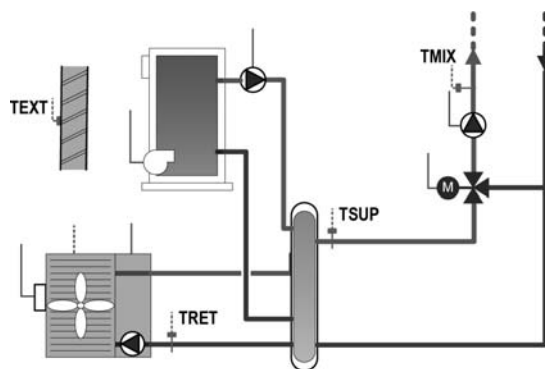


• The upper limit operation of the heat pump to satisfy the heating demand:

- The maximum outlet temperature of the Heat pump is 55°C down to -10°C outside temperature/ 50° from -10°C~-20°C.

- At higher outside temperatures it doesn't make sense to keep heating the building. The System Controller will switch the heating off when the average daily outdoor temperature (averaged over 24hrs) rises above the parameter P26.

To disable this feature set the parameter to OFF.

- P26 Summer Switch-Off temperature.
- The switch-off is reversed when the average outside temperature drops below the set value by more than 1 K.
- The average outside temperature is calculated over a 24hr period.

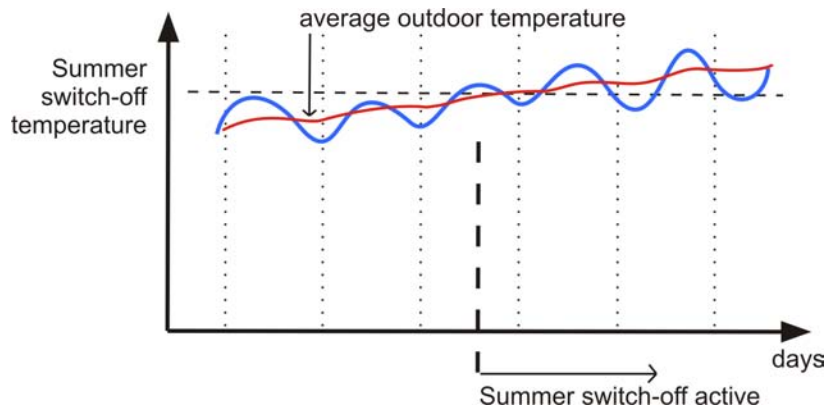

	Parameter setting	Range	Units	Default
P26	Summer switch-off temperature	15..20, Off	°C	16

4

◆ 4.5.2.1. Room setpoint parallel shift

● Function

At different times of the day, according to the time programme in the room unit, the room temperature setpoint will cause a parallel shift of the heating curve. The change in supply setpoint due to the room setpoint is dependant on the actual value of the outside temperature and the selected heating curve.

● Example

P4 = 1.1

Text (outside temperature) = 0°C

Sr1 (room setpoint) = 18°C

=> S1 (supply setpoint) = 45°C

In this case, for a 2k change in room setpoint, the supply setpoint is changed by 4 k.



NOTE

- The room setpoint value is sent from the room unit to the system controller by a wireless signal. There can be a short delay in response between a room setpoint change and the system controller changing the supply setpoint.

◆ 4.5.2.2. Room temperature compensation

- **Function**

If room compensation is enabled, the calculated otc supply setpoint is adjusted based on the difference between room temperature and room setpoint in order to reduce the room error. The amount of room influence can be adjusted by the room temperature compensation factor setting.

- **Parameter setting**

P27 Room compensation factor (default value 2)

To increase or decrease the amount of room compensation, adjust the room compensation factor. A higher value will give more priority to the room temperature error, and a lower value will mean the controller follows more closely the selected heating curve.

- **Example**

P7 = 2

Sr1 (room setpoint) = 20


Tr1 (room temperature) = 23

=> S1 (supply setpoint) reduced by $2 * (23 - 20) = 6k$

- **Enable / Disable**

To disable room compensation completely, set p7=0. It is also recommended to change the setting 8:su=1 on the room unit. This will prevent the room temperature being transmitted to the system controller and the room temperature will not be displayed to the end-user on the room unit. Please refer to the system

Mmi pack installation and operation manual for further details.

	NOTE
- Room compensation should not be used when the room unit is located in a position unrepresentative of the desired temperature in the living spaces, for example in a warm cupboard.	

The room setpoint and room temperature values are sent from the room unit to the system controller by a wireless signal. There can be a short delay in response between a room setpoint or temperature change and the system controller changing the supply setpoint.

4.5.3. Heating circuit minimum/maximum temperature limits

- **Function**

the calculated supply water temperature setpoint is limited between the minimum supply temperature and the maximum supply temperature settings. The maximum temperature limit can be used for example to prevent high temperatures going to floor heating systems. The minimum temperature limit can be used when it is desired to keep a minimum level of heating in the heating circuit.

- **Parameter setting**

P5 minimum supply temperature (default 15°C)

P6 maximum supply temperature (default 55°C)

- **Configuration specific**

CONF 1: P6 can be set up to a maximum value of 55°C

CONF 2: P6 can be set up to a maximum value of 65°C

CONF 3,4,5: P6 can be set up to a maximum value of 90°C

4.5.4. Heating circuit (secondary) pump

- **Function**

When the heating circuit is enabled, the secondary pump will be switched on. When the heating circuit is disabled, the secondary pump is switched off after a pump overrun time.

If the screed function is activated or system frost protection is active, the secondary pump continues to run.

If the system uses a dhw diverting valve and dhw storage tank loading is active, then the secondary pump continues to run, since it is also used for the dhw loading.

- **Parameter Settings**

P2 secondary pump selection (default 0 –no secondary pump)

P3 pump overrun time (default 2 min)

- **Configuration specific**

CONF 1,2: If a buffer tank or hydraulic separator is used between the heat pump and the heating circuit, it is necessary to set parameter p2=1 to enable control of the secondary pump.

CONF 3,4,5: Secondary pump control is always enabled.

CONF 4,5: If the mixed circuit maximum temperature limit is active, then the secondary pump is switched off.

4.5.5. Automatic no-load function

- **Function**

When the calculated supply temperature setpoint (from otc heating curve + room setpoint shift + room

Compensation shift) is less than the room temperature, then the heating circuit can be switched off to save energy. A switching differential of +/- 1k is applied.

- **Algorithm**

OTC supply setpoint < room temperature (TR1) –1K => no-load condition is active

OTC supply setpoint > room temperature (TR1) + 1K => no-load condition is not active.

When the no-load condition is active, the heating circuit is switched off.

- **Parameter settings**

P30 No-load function enable/disable (default 1)

= 0 Disabled

= 1 Enabled

4.5.6. Floor screed drying function

This function can be used exclusively to assist the drying of newly-laid screed on floor heating systems. The function is activated by setting parameter (P25) to 1. When the screed function is complete, the control returns to normal operation. The screed function can be deactivated at any time by setting the parameter (P25) to 0. Screed function according to EN 1264 part 1

- Constant heating at 25°C for 3 days.
- Heating set at maximum supply temperature for 4 days (limited to 55°C).




4.5.7. System frost protection

The System Controller has a frost protection function to help prevent the heating system pipe-work freezing. When the actual outside temperature falls below the parameter (P22), the supply water temperature will be maintained at least at the parameter value (P21). Note that:

- P21 Minimum supply temperature while frost protection is active.
- P22 Frost protection outside temperature activation temperature.

When the outdoor temperature falls below the frost protection activation temperature, the supply temperature is set to at least the frost protection minimum supply set point.

Frost protection finishes when the outdoor temperature rises above the frost protection activation temperature + 1 K.

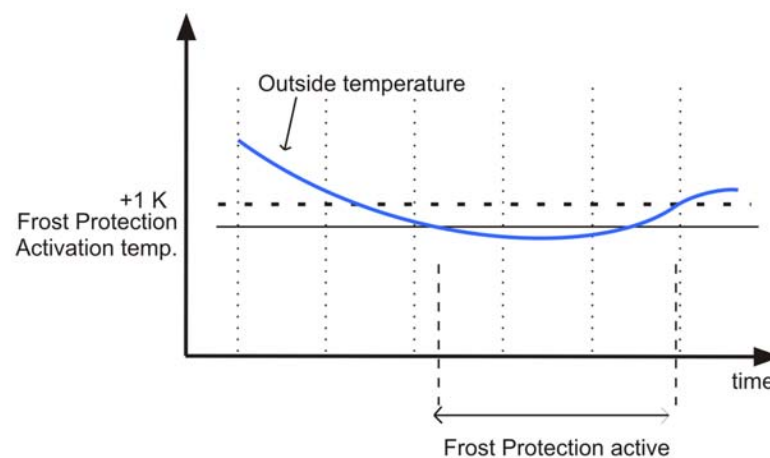

Parameter setting		Range	Units	Default
P21	Frost protection minimum supply set point	15 to 30	°C	20
P22	Frost protection activation temperature	-20 to 5, off	°C	3

4.5.8. Anti-seize protection for pumps and valves

This function helps to prevent pumps and valves seizing due to corrosion or sticking.

Only one component is exercised at a time. Every 24hrs, the controller checks to see if pumps and valves have been used and performs the following actions:

- Unused pumps are run.
- Unused mixing valve is opened fully then closed.
- Unused diverting valve is opened for 10 seconds.

4.6. DHW CONTROL FUNCTIONS


4.6.1. DHW Storage Tank Loading

- **Configuration Specific**

The DHW control function is available for configurations CONF1,2,3, and 5.

- **Enable/ Disable**

To enable DHW control, parameter P1 should be set according to whether the system uses a diverting valve or separate pump for the DHW circuit.

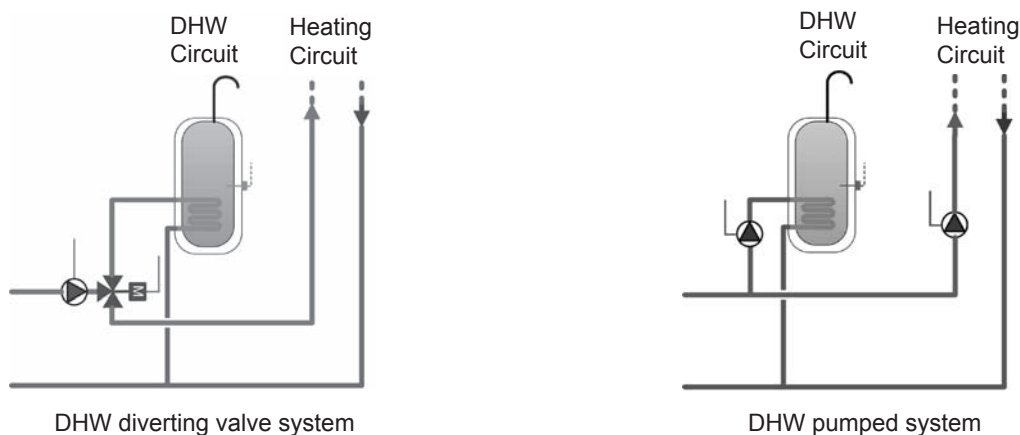

- **Function**

The DHW function has priority over the Heating Circuit, which means that when the DHW storage tank is being loaded, the heating circuit will be switched off.

The DHW function will be blocked (temporarily disabled) when the Tariff/Timer input is configured for DHW and the input is open circuit (or alternatively short circuit as defined by parameter — see DHW Tme Program”).

- **Parameter Settings**

- P1 System DHW Choice (default 0)
- P1=0 No DHW function
 - P1=1 System with DHW diverting valve
 - P1=2 System with DHW pump



4.6.2. DHW Control

• Function

When DHW control is enabled, the system controller heats the DHW tank temperature to the DHW setpoint (P10). When the DHW temperature drops below the DHW setpoint minus the DHW differential (P11), this function switches on the DHW Pump or opens the DHW valve, and sets a supply setpoint equal to DHW setpoint + DHW supply offset (P12). The DHW loading is complete when the DHW temperature rises above the DHW setpoint.


Supply Setpoint for DHW loading = DHW setpoint + DHW Supply Offset (P12)

DSET = DHW setpoint (P10)

SDHW = Supply Setpoint for DHW loading.

TDHW = DHW tank temperatura

• Diagram

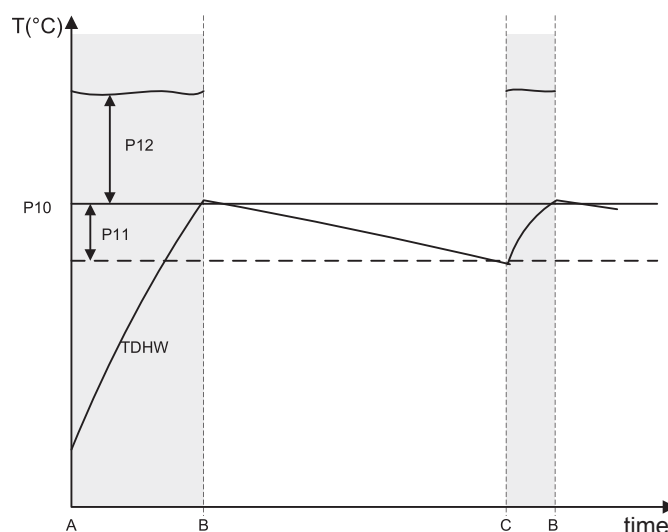

• Parameter Settings

P10 DHW setpoint (default 45°C)

P11 DHW differential (default 5K)

P12 DHW supply offset (default 10K)

• Configuration Specific

CONF 1,2: Heat Pump heats the DHW storage tank directly. If the storage tank also has an internal DHW electric heater this can also be used if necessary.

CONF 2: The 3-stage electric heater cannot be used for DHW loading. When DHW loading starts, the 3-stage electric heater is switched off.

CONF 3,5: If the Heat Pump is not able to reach the DHW supply setpoint by itself, the boiler may also be used to raise the temperature of the DHW tank (see "Using the Boiler for DHW loading").

• Parameter Notes

P10: DHW setpoint

CONF 1,2: If there is no internal DHW electric heater, setting the DHW setpoint higher than 45°C may result in very long DHW loading times, and the desired temperature may not be reached. This is because the maximum outlet temperature from the Heat Pump is normally 55°C, and at low outdoor temperatures 50°C.

CONF 3,5: The DHW setpoint may be set higher since the boiler will also be used to heat the DHW storage tank.

P11: DHW differential

A small DHW differential will increase the frequency of the DHW loading periods while making them shorter. A large DHW differential will reduce the frequency of the DHW loading periods, while making each period longer, and will cause larger swings in DHW temperatures.

P12: DHW supply offset

CONF 1,2: setting a value higher than 10K will not affect the DHW loading period since the maximum outlet temperature from the Heat Pump is 55°C.


CONF 3,5: setting a value higher than 10K will allow faster DHW loading times since the boiler can be used.

4.6.3. Maximum DHW Loading Time

- **Function**

In case there is a continuous high demand for DHW over a very long period, or the DHW setpoint is set too high, the Heat Pump may not be able to reach the desired temperature. In this case, to ensure that heat is provided in the living space (heating circuit), the DHW loading is stopped after a preset time (parameter P27) and the system controller returns to satisfy the demand from the heating circuit.

- **Diagram**

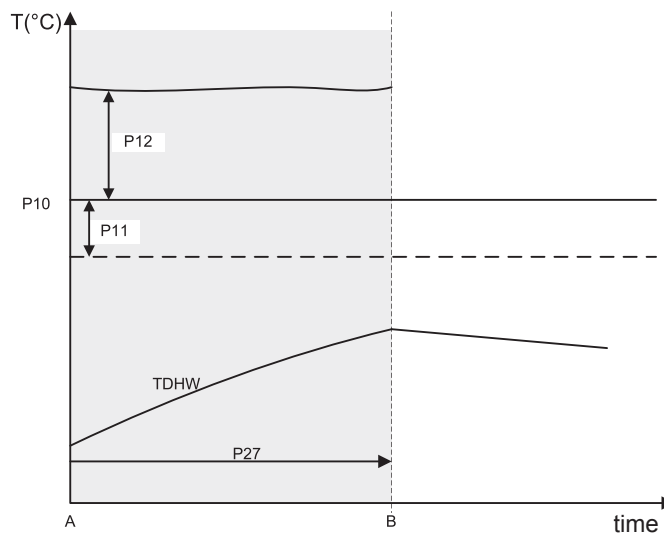

- **Parameter Setting**

P27 Maximum allowed DHW loading time (default 1.5hr)

	NOTE
<p>- After the DHW loading has stopped, the DHW electric heater (if connected) will continue to be enabled until the DHW setpoint temperature is reached.</p>	

- **Automatic reset**

Only after 24hrs, or at the next time clock enable period (if an external DHW time clock is used), the system controller will use the Heat Pump once again to load the DHW tank.

4.6.4. DHW Electric Heater


- **Configuration Specific**

This function is only available in configurations 1 and 2 (CONF 1,2).

- **Function**


The DHW tank may have an internal electric heater for situations when the heatpump is unable to fully load the DHW tank. After the DHW electric heater waiting time, if the DHW temperature has not reached the DHW setpoint, the DHW electrical heater enable output is switched on. The electrical heater operates on its own thermostat to raise the temperature of the DHW tank.

- **Diagram**

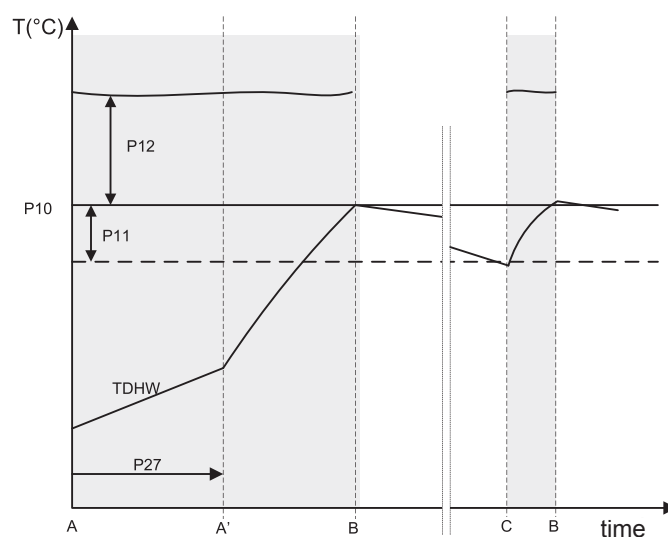

- **Parameter settings**

P34 DHW Electric Heater Waiting Time (default 45 min)

	NOTE
<p>- The electric heater should have its own thermostat set to a higher value than the DHW setpoint of the System Controller. Please take care about the type of DHW storage tank fitted and the position of the electric heater.</p>	

4.6.5. Using the Boiler for DHW loading

- **Configuration Specific**

Applies only to configurations CONF 3,5

- **Function**

The boiler may also be used to raise the temperature of the DHW tank if the Heat Pump is not able to reach the DHW supply setpoint by itself. The boiler will only start after a time delay defined by parameter P19 (waiting time for boiler) in order to allow the Heat Pump time to satisfy the DHW loading demand by itself.

- **Parameter setting**

P19 Waiting Time for Boiler (default 30 min)


4.6.6. Response of the Heat pump to a DHW demand

- **Function**

Since the heat pump only reads the control signal (mA) once every 20 minutes there can be a delay before the system responds to the DHW request. In order to improve this response time, the System Controller uses a feature of the heat pump that when the control signal is set to its highest value, it responds immediately. So if the supply setpoint has to be increased due to a DHW demand, then the supply setpoint is set to the parameter EP29 (Heat Pump maximum supply temperature) for a certain time. This time is the Heat Pump Max Time High Setpoint (EP35). When this time period expires, the Supply Setpoint is set to the normal calculated DHW supply setpoint.

- **Parameter setting**

EP35 Heat Pump Max Time High Setpoint (default 180sec)

	NOTE
- Engineering Parameters (EP) are only available for service engineers.	

4.6.7. DHW Time Program

- **Function**


A DHW time program is not provided inside the controller. An external timer can be used by itself or together with a tariff-switch device. For example, with an external timer it is possible to block DHW loading during daytime periods.

It is possible to use

1. Only a external timer. Operates according to EP24 setting.
2. An external timer in series with a tariff-switch device. In this case:
 - if EP24=3 both the external timer and the tariff-switch contacts must be closed to allow DHW loading
 - if EP24=4 either of the external timer or the tariff-switch contacts can be open to allow DHW loading.
3. An external timer in parallel with a tariff-switch device. In this case:
 - if EP24=3 either of the external timer or the tariff-switch contacts can be open to allow DHW loading
 - if EP24=4 both the external timer and the tariff-switch contacts must be closed to allow DHW loading.
4. Only a tariff switch device. Operates according to EP24 setting.

Depending on the setting of the configuration of tariff/timer input parameter (EP24), DHW loading can be blocked according to the status of the input (open or closed).

• **Diagram**

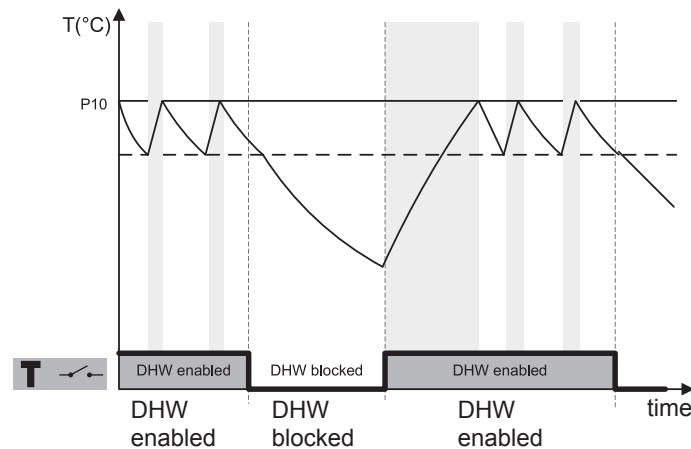

• **Parameter setting**

P24 Configuration of Tariff/Timer Input (default 4)

P24	Open Circuit on termináis 10/11	Closed Circuit on termináis 10/11
0	Tariff/Timer input is ignored	
1	Tariff/Timer input is used for Heat Pump blocking	
2	Tariff/Timer input is used for Heat Pump blocking	
3	DHW is blocked	DHW is enabled
4	DHW is enabled	DHW is blocked

i **NOTE**
- The tariff/timer input can be used for DHW time switching OR Heat Pump blocking, not both.

4.7. HEATPUMP CONTROL FUNCTIONS

4.7.1. Heatpump Control

The System Controller normally switches the heat pump on when there is a demand from the heating or the DHW circuit. The Heat Pump on/off output of the System Controller is connected to the Remote on/off input of the heat pump.

The heat pump will start the water circulation pump (primary pump) when the remote on/off input is switched on, and enable its internal control of the compressor and heat pump system components.


The System Controller switches the heat pump off when :

- the outdoor temperature (TEXT) < -20°C adusabe, see Heat Pump operating limits)
- or, the return water temperature > 60°C adusabe, see Heat Pump Return High Lmt")
- or, heat pump blocking is active (tariff/timer input)

i	NOTE
<p>- The compressor will not always run when the remote on/off signal is switched on by the System Controller. The Heat Pump has an internal control function thermo-off which will switch the compressor off when the target water temperature is exceeded. The compressor will also be switched off when there is an internal heat pump fault.</p>	

4.7.2 Heatpump Setting Control Signal

When there is a demand for heating or DHW, the System Controller will send to the heat pump a signal for the required Heat Pump outlet temperature. The System controller uses the 4-20mA connection to represent the outlet water temperature setpoint. The heatpump will modulate the appliance according to its own control strategy to achieve the correct output water temperature.

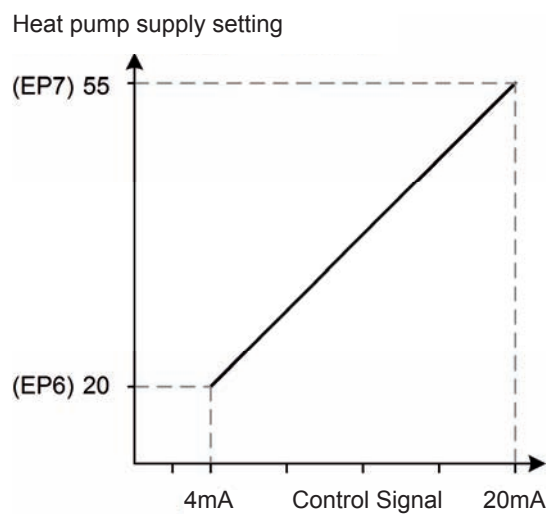

4

A conversion table from water temperature setting to mA signal is provided at the end of this guide.

Calculation: Heat Pump Supply Setting = SSUP (supply setpoint) + P31 (Heat Pump Sensor Offset)

The Heat Pump Supply setting is always constrained within the maximum and minimum heat pump supply temperatures. These limits depend on the current outside temperature; see Heat Pump Operating Limits. Heat Pump Sensor Offset is explained in the next section.

- Parameter settings**

EP6 Heat Pump Supply Setpoint at 4mA (default 20°C)

EP7 Heat Pump Supply Setpoint at 20mA (default 55°C)

i	NOTE
<p>- These parameters should only be changed with the approval of the manufacturer. Engineering Parameters (EP) are only available for service engineers.</p>	

4.7.3. Heatpump Sensor Offset


In practice, there may be a difference between the heat pump outlet temperature (measured by the Heat Pump) and the supply temperature (measured by the system controller). This can be caused by:

1. Different measuring position. The Heat Pump is outside and some loss of heat is possible between the heat pump and the supply pipes inside the house.
2. Different types of sensor. The Heat Pump measures the outlet temperature using an immersion-type sensor directly in the water flow after the condenser. The System Controller uses a strap-on type sensor, which depending on the ambient conditions, will typically measure a lower temperature than an immersion-type in the same location.

This difference needs to be taken into account for optimum control performance, and parameter P31 is provided so this can be adjusted according to the installation.

- **Parameter Settings**

P31 Heat Pump Sensor Offset (default 3K)

	NOTE
<p>- It is important to minimise this effect as much as possible during installation. The following precautions should be taken :</p> <p style="padding-left: 40px;"><i>Fully insulate the supply and return pipes.</i></p> <p style="padding-left: 40px;"><i>Ensure that the supply temperature sensor is tightly strapped-on to the pipe with the metal clip provided.</i></p> <p>- The metal clip should be used directly around the sensor element itself (since it itself improves the heat transfer) and then insulation should be placed around the sensor and fixed securely in place.</p>	

4.7.4. Heatpump Maximum Return High Limit


The Heat Pump itself ensures good control of the outlet water temperature, and switches off the compressor when the return water temperature gets too high. However, in some circumstances with bi-valent systems, the boiler may be operating at high supply and return temperatures. If the return water temperature to the Heat Pump rises above 65°C it will generate a system fault ("excessively high water temperature"). To prevent this happening, the System Controller will directly switch off the heat pump if the return temperature rises above a set limit.

Return water temperature (TRET) > EP13 + 0.5K
Return water temperature (TRET) < EP13 - 0.5K

Heat Pump is switched off
Heat Pump may be switched on.

- **Parameter Settings**

EP13 Heat Pump Maximum Return Temperature (default 60°C).
This value should not normally need to be changed.

	NOTE
<p>- Engineering Parameters (EP) are only available for service engineers.</p>	


4.7.5. Heatpump Operating Limits

Heat Pump operation is only possible within certain temperature ranges as defined below. Parameters are provided in order to adjust the working area if required to do so by Hitachi.

The Heat Pump water temperature setting sent by the System Controller is always constrained to lie between the maximum and minimum limits defined by the operating limits.

If the outdoor temperature is below -20°C (EP14), the heat pump will always be switched off.

- **Heat Pump working area** Heat Pump Outlet Temperature ($^{\circ}\text{C}$)

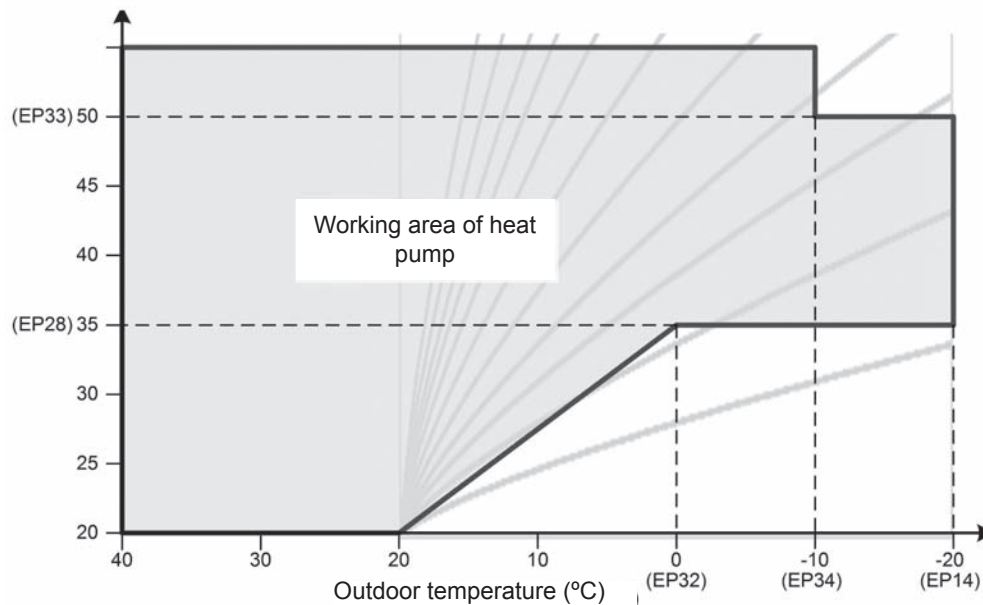

4

- **Parameter Settings**

EP14	Heat Pump minimum outdoor temperature (default -20°C)
EP28	Heat Pump minimum supply temperature below outdoor temperature of EP32 (default 35°C)
EP29	Heat Pump maximum supply temperature above outdoor temperature of EP34 (default 55°C)
EP32	Heat Pump minimum supply inflexión point (default 0°C)
EP33	Heat Pump maximum supply temperature below outdoor temperature of EP34 (default 50°C)
EP34	Heat Pump maximum supply changing point (default -10°C)



NOTE

- Engineering Parameters (EP) are only available for service engineers.


4.7.6 Tariff Switch (Heat Pump blocking) Input

This function allows an external tariff-switch device to switch off the heat pump and electric heater during times of peak electricity demand. When the controller is working in bi-valent mode, the boiler will be switched on to provide the necessary heating. In mono-valent or mono-energetic systems, no heating will be provided during the period of high-tariff switching.

- **Parameter Setting**

P24 Configuration of Tariff/Timer Input (default 4)

P24	Open Circuit on terminals 10/11	Closed Circuit on terminals 10/11
0	Tariff/Timer input is ignored	
1	Heat Pump is enabled	Heat Pump is blocked
2	Heat Pump is blocked	Heat Pump is enabled
3	Tariff/Timer input is used for DHW time clock	
4	Tariff/Timer input is used for DHW time clock	

	NOTE
- The tariff/timer input can be used for DHW time switching OR Heat Pump blocking, not both.	

4.8. BOILER CONTROL FUNCTIONS

4.8.1. Boiler Control

- **Configuration Specific**


Boiler control is available only in configurations 3,4,5 (CONF3, CONF4,CONF5)

The boiler control decides whether to switch the boiler on or off based on a proportional plus integral action (P+I) control algorithm and the difference between the Boiler Setpoint and the Supply Water Temperature (TSUP).

The boiler will only be used when:

- the outdoor temperature is below the bivalence point (máximum outdoor temperature for boiler operation)
- or the boiler has been manually released (after a heat pump fault).

In addition the Supply-Return Difference Check is performed before allowing the boiler to switch on, unless the heat pump is switched off or has an internal fault.

	NOTE
- Parameter P33 should be set = OFF in configurations 3, 4, and 5. P33 reates o a uncion Reurn Lmt Ose" for eecric heaer conro. It is not recommended to use this function for boiler control. If P33 is not set to OFF, then the boiler will be prevented from starting until this special condition is met.	
- The boiler is always enabled when there is DHW loading required.	

- **Boiler Setpoint & Supply Setpoint Control Offset**

If the heat pump is switched off, or has an internal fault, the Boiler Setpoint = Supply Setpoint (SSUP)

If the heat pump is switched on, the water setpoint used for the boiler control depends on the value of the Supply Setpoint. When the supply setpoint is low the boiler will only be used if the actual supply temperature is much lower than the desired setpoint. To achieve this, the boiler setpoint is offset lower than the supply setpoint. When the supply setpoint is higher than can be achieved by the heat pump alone, the boiler setpoint is equal to the supply setpoint. This function is intended to help reduce the number of times the boiler is used, to emphasise energy saving operation.

If Supply Setpoint > Heat Pump maximum supply temperature –Heat Pump Sensor Offset + 0.5K, then Boiler Setpoint = Supply Setpoint (SSUP)


If Supply Setpoint < Heat Pump maximum supply temperature –Heat Pump Sensor Offset - 0.5K, then Boiler Setpoint = Supply Setpoint (SSUP) –Supply Setpoint Control Offset (EP31)

The heat pump maximum supply temperature depends on the outdoor temperature and the heat pump operating limits.

• **Control Algorithm**

The P+I algorithm calculates a “Load factor” from 0% to 100% . The boiler is switched on when the Load Factor reaches 100% and switched off when the Load Factor reaches 0%.

Required Load Factor = PI function (Boiler Setpoint –TSUP).

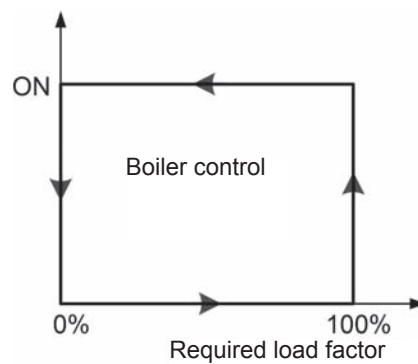

• **Parameter Settings**

EP2 Integral Factor Required Load - Boiler/Electric Heater Control (default 2.5 %/Kmin.)

EP16 Proportional Band Required Load - Boiler/Electric Heater Control (default 6 K/100%)

EP31 Supply Setpoint Control Offset (default 4 K)

It is not normally recommended to change these parameters. They have been selected during laboratory tests for best performance in most situations.

	NOTE
- Engineering Parameters (EP) are only available for service engineers.	

4.8.2. Supply-Return Difference Check

This function helps prevent the boiler operating unless the heat pump is already providing heat. When the heat pump is in “thermo-off” state (compressor off) or in “defrost”, the difference between the supply temperature TSUP and return temperature TRET will be small (or negative in case of defrost) since no heating is provided. The boiler is prevented from switching on until this difference is greater than the Supply-Return Difference Limit (P32). A +/-0.5K control differential is applied.

$TSUP-TRET > P32 + 0.5K$	Boiler is allowed to switch on.
$TSUP-TRET < P32 - 0.5K$	Boiler is not allowed to switch on.

When the boiler starts from cold, the supply temperature can drop for a small time as the cold water in the heat exchanger is pumped into the system. This function would then cause the boiler to be switched off. In order to prevent this, this function does not operate when the boiler is switched on until a certain time has passed from the boiler starting. This delay time is defined by a parameter Boiler Delay Time (EP36).

- **Enable/ Disable**


This function can be disabled by setting parameter P32=OFF

- **Parameter Settings**

P32 Supply-Return Difference Limit (default 3K)

EP36 Boiler Delay Time (default 5min)

A high value of P32 will prevent the boiler switching on until a large temperature difference is seen by the System Controller. With a low value of P32 or with the function disabled, the boiler may start more often, for example during defrost cycles.

	NOTE
	<ul style="list-style-type: none"> - PThis check is ignored if the Heat Pump is switched off or has a fault. - Engineering Parameters (EP) are only available for service engineers.

4.8.3. Boiler Minimum On / Off Times


In order to prevent inefficient short-cycling of the boiler, this function prevents the boiler from switching on or switching off until either the boiler minimum off time or boiler minimum on time, respectively, has elapsed.

- **Parameter Settings**

P17 Boiler minimum ON time (default 2 min.)

P18 Boiler minimum OFF time (default 5 min.)

High values of minimum ON and OFF times may cause large fluctuations in water temperature and should usually be avoided.

	NOTE
	<ul style="list-style-type: none"> - If the boiler is disabled, rather than off due to normal control (load=0%), then the boiler minimum ON time does not apply.

4.8.4. Boiler Waiting Time

It is important with bi-valent systems that the Heat pump should first try to satisfy the heating demand by itself. For this reason a boiler waiting time applies. This means that when the heatpump cannot meet the heating demand, then the boiler is switched on only after the waiting time has elapsed.

The waiting time starts:

- When the heat pump is switched on, or

- When the boiler switches off (but only also when the Supply Setpoint SSUP < heat pump maximum temperature — heat pump sensor offset).

This means that when the heatpump should normally be able to meet the heating demand on its own, the boiler waiting time applies, but when the supply setpoint is so high that the heat pump cannot meet the heating demand on its own, the waiting time does not apply.

- **Parameter Settings**

P19 Waiting Time for Boiler (default 30min.)

A higher value of P19 will reduce the number of times that the boiler is used at lower supply setpoints, but the desired supply temperature may not be reached quickly if there is a high heating load (slower response). Conversely, a lower value of P19 will increase the number of times the boiler is used at lower supply setpoints, but ensure that the desired supply temperature is reached more quickly (better response).

4.8.5. Maximum Outdoor Temperature for Boiler Operation


This function disables the boiler control when the outdoor temperature is above the boiler maximum outdoor temperature setting. Above this setting it is assumed that the heat-pump is able to deliver all the requested heat by itself and the boiler is therefore not required.

- **Parameter Setting**

P15 Maximum Outdoor Temperature for Boiler Operation (default 0°C)

- **Enable/Disable**

To disable this function and allow boiler operation at all outdoor temperatures, set the parameter P15=OFF.

	NOTE
- The boiler is always available for DHW loading, independent of outdoor temperature.	

4.9. ELECTRIC HEATER CONTROL FUNCTIONS

4.9.1. Electric Heater Control

- **Configuration Specific**

Electric Heater control is available only in configuration 2 (CONF 2).

When the heatpump cannot meet the heating demand the 3-stage electric heater can be switched on to raise the supply temperature up to a maximum of 65°C. The electric heater control decides whether to switch on one or more of the electric heater stages based on a proportional plus integral action (P+I) control algorithm and the difference between the Electric Heater Setpoint and the Supply Water Temperature (TSUP).


The electric heater will only be used when:

- the outdoor temperature is below the bivalence point (maximum outdoor temperature for electric heater operation)
- or the electric heater has been manually released (after a heat pump fault)

In addition, two further checks are made before the electric heater is allowed to switch on. The purpose of these checks are to help ensure that the electric heater only switches on when the heat pump is working at its maximum capacity.

1. The Supply-Return Difference Check
2. The Electric Heater Return High Limit Check

These checks are not carried out if the heat pump is switched off or has an internal fault.

	NOTE
- The boiler is always enabled when there is DHW loading required.	

• **Electric Heater Setpoint & Supply Setpoint Control Offset**

If the heat pump is switched off, or has an internal fault, the Electric Heater Setpoint = Supply Setpoint (SSUP)

If the heat pump is switched on, the water setpoint used for the electric heater control depends on the value of the Supply Setpoint. When the supply setpoint is low, the electric heater will only be used if the actual supply temperature is much lower than the desired setpoint. To achieve this, the electric heater setpoint is offset lower than the supply setpoint. When the supply setpoint is higher than can be achieved by the heat pump alone, the electric heater setpoint is equal to the supply setpoint. This function is intended to help reduce the number of times the electric heater is used, to emphasise energy saving operation.

If Supply Setpoint > Heat Pump maximum supply temperature –Heat Pump Sensor Offset + 0.5K, then Electric Heater Setpoint = Supply Setpoint (SSUP)


If Supply Setpoint < Heat Pump maximum supply temperature –Heat Pump Sensor Offset - 0.5K, then Electric Heater Setpoint = Supply Setpoint (SSUP) –Supply Setpoint Control Offset (EP31)

The heat pump maximum supply temperature depends on the outdoor temperature and the heat pump operating limits.

• **Control Algorithm**

The P+I algorithm calculates a “Load factor” from 0% to 100%. The electric heater stages are switched on depending on the load factor

Required Load Factor = PI function (Electric Heater Setpoint –TSUP)

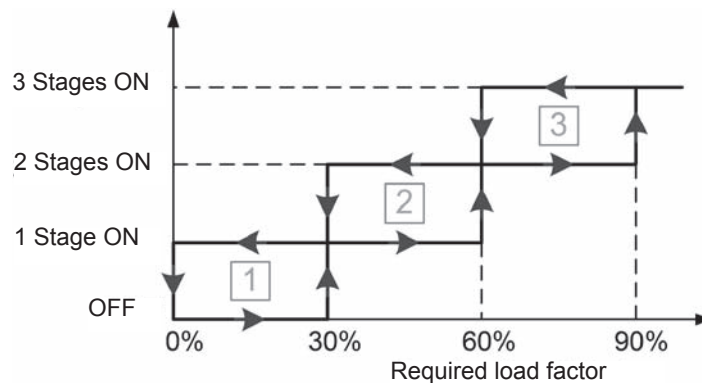


Before switching in more or fewer stages (for example between stage 1 and stage 2), the System Controller waits for a certain time to prevent too fast switching. This time is the Inter-Stage Waiting Time, parameter EP20.

- **Parameter Settings**

- EP2 Integral Factor Required Load - Boiler/Electric Heater Control (default 2.5 %/Kmin)
- EP16 Proportional Band Required Load - Boiler/Electric Heater Control (default 6 K/100%)
- EP20 Inter-Stage Waiting Time (default 10 sec)
- EP31 supply Setpoint Control Offset (default 4 K)

It is not normally recommended to change these parameters. They have been selected during laboratory tests for best performance in most situations. Correct positioning of the Supply Temperature Sensor close to the outlet of the Electric Heater should result in good control performance. If necessary, adjusting these parameters can correct unstable control behaviour in certain circumstances.

	NOTE
- Engineering Parameters (EP) are only available for service engineers.	

4.9.2. Supply-Return Difference Check

This function helps prevent the electric heater operating unless the heat pump is already providing heat. When the heat pump is in “thermo-off” state (compressor off) or in “defrost”, the difference between the supply temperature TSUP and return temperature TRET will be small (or negative in case of defrost) since no heating is provided. The electric heater is prevented from switching on until this difference is greater than the Supply-Return Difference Limit (P32). A +/-0.5K control differential is applied.

TSUP-TRET > P32 + 0.5K Electric Heater is allowed to switch on.

TSUP-TRET < P32 — 0.5K Electric Heater is not allowed to switch on.


- **Enable/ Disable**

This function can be disabled by setting parameter P32=OFF.

- **Parameter Settings**

- P32 Supply-Return Difference Limit (default 3K)

A high value will prevent the electric heater switching on until a large temperature difference is seen by the System Controller. With a low value or with the function disabled, the electric heater may start more often, for example during defrost cycles.

	NOTE
- This check is ignored if the Heat Pump is switched off or has an internal fault.	

4.9.3. Electric Heater Waiting Time

It is important with mono-energetic systems that the Heat pump should first try to satisfy the heating demand by itself. For this reason an electric heater waiting time applies. This means that when the heat pump cannot meet the heating demand, then the electric heater is switched on only after the waiting time has elapsed.

The waiting time starts:

- When the heat pump is switched on, or
- When the electric heater switches off (but only also when the Supply Setpoint SSUP < heat pump maximum temperature — heat pump sensor offset).

This means that when the heat pump should normally be able to meet the heating demand on its own, the electric heater waiting time applies, but when the supply setpoint is so high that the heat pump cannot meet the heating demand on its own, the waiting time does not apply.

- **Parameter Settings**

P19 Waiting Time for Electric Heater (default 30min.)

A higher value of P19 will reduce the number of times that the electric heater is used at lower supply setpoints, but the desired supply temperature may not be reached quickly if there is a high heating load (slower response). Conversely, a lower value of P19 will increase the number of times the electric heater is used at lower supply setpoints, but ensure that the desired supply temperature is reached more quickly (better response).

4.9.4. Electric Heater Return High Limit Check

The return high limit check is used to help ensure that the heat pump operates as much as possible even when higher supply temperatures are required, thus emphasising energy economy operation. The electric heater is disabled when the return water temperature (TRET) rises above the maximum heat pump outlet temperature minus the return limit offset (P33). A +/-0.5K control differential applies.


TRET > Heat Pump maximum supply temperature — P33 + 0.5K Electric Heater disabled

TRET < Heat Pump maximum supply temperature — P33 - 0.5K Electric Heater enabled

Since the electric heater is switched off then the return temperature rises too high, the effect will be that in some system conditions it will not be possible to reach 65°C supply temperature. If it is important to allow 65°C operation, then the parameter can be reduced or set to OFF, but the result is that in some situations the electric heater will operate on its own and the heat pump will not be used. This will cause higher energy costs.

- **Parameter Settings**

P33 Return Temperature Limit Offset (default OFF)

	NOTE
<p>- It is highly recommended for CONF 2, that the parameter P33 is not left in the default OFF state. Recommended setting is 5K.</p>	

- **Enable/ Disable**

This function can be disabled by setting the parameter P33=OFF.

4.9.5. Maximum Outdoor Temperature for Electrical Heater Operation

This function disables the electric heater control when the outdoor temperature is above the electric heater maximum outdoor temperature setting. Above this setting it is assumed that the heat-pump is able to deliver all the requested heat by itself and the electric heater is therefore not required.

- **Parameter Setting**

P15 Maximum Outdoor Temperature for Electric Heater Operation (default 0°C)

- **Enable/ Disable**

To disable this function and allow electric heater operation at all outdoor temperatures, set the parameter P15=OFF.

4.10. MIXING VALVE CONTROL FUNCTIONS

4.10.1. Mixing Valve Control

- **Configuration Specific**

This function only applies to configuration 4 (CONF 4)

When heating is required, the System Controller controls the mixing valve so that the mixed water temperature is close to the Supply Setpoint. The mixing valve position is calculated with a proportional plus integral action (P+I) control algorithm based on the difference between the Supply Setpoint and mixed water temperature (TMIX).

Desired Mixing Valve Position = PI function (Supply Setpoint –TRET)


The System Controller then decides how much to open or close the mixing valve to achieve the desired position of the valve. This is dependent on the running time of the actuator used on the valve. The running time is defined as the time it takes to drive the valve from the fully closed to the fully open position. Typically this can be between 1 and 4 minutes.

- **Parameter Setting**

P9 Mixing Valve Runtime (default 120 sec)

EP1 Mixing Valve Integral factor (default 2.5)

The installer should set the parameter p9 based on his selection of actuator and mixing valve. The value for EP1 has been chosen based on laboratory tests and it is not recommended to change it.

	NOTE
- Engineering Parameters (EP) are only available for service engineers.	

4.10.2. Mixing / Bypass Valve Control

- **Configuration Specific**

This function only applies to configuration 5 (CONF 5)


When the boiler is switched on, the mixing valve control is enabled and operates in the same manner as described above (Mixing Valve Control).

When the boiler is switched off, and the difference between the supply water temperature (TSUP) and mixed supply temperature (TMIX) is small (less than EP3), the mixing valve is always closed (by-pass operation) so that the hot supply water from the heat Pump does not circulate through the boiler heat exchanger, which may cause unnecessary heat loss and reduction in system efficiency. While the water from the boiler (TSUP) is much hotter than the mixed supply temperature (TSUP), the mixing control continues to operate.

- **Parameter Setting**

P9 Mixing Valve Runtime (default 120 sec)
EP3 Difference Supply water temperature (default 1.5K)

The value for EP3 has been chosen based on laboratory tests and it is not recommended to change it.

	NOTE
- Engineering Parameters (EP) are only available for service engineers.	

4.10.3. Mixed Heating Circuit Maximum Temperature Limit Protection

- **Configuration Specific**


This function only applies to configurations 4 and 5 (CONF 4,5)

The secondary circulation pump is switched off and the mixing valve closed when the maximum supply temperature (mixing circuit) setting is exceeded. This function helps prevent damage to floor heating systems by very high temperatures.

TMIX > P6 Pump switched off, mixing valve closed.
TMIX < P6 -5K Returns to normal control.

- **Parameter Setting**

P6 Maximum Supply Temperature

	NOTE
- A fault code is displayed when the maximum limit is exceeded.	

4.11. GENERAL FUNCITONS

4.11.1. System Frost Protection

The System Controller has a frost protection function to help prevent the heating system pipe-work freezing. When the actual outside temperature falls below the parameter (P22) , the supply water temperature will be maintained at least at the parameter value (P21). A switching differential of 1K is applied.

Outside temperature (TEXT) < P22 Supply Setpoint (SSUP) determined by heating or DHW demand but always >= P21

Outside temperatura (TEXT) > P22+1K Supply Setpoint (SSUP) determined by heating or DHW demand.

- **Parameter Settings**

P21 Frost Protection minimum Supply Temperatura (default 20°C)
P22 Frost Protection Activation Temperatura (default 2°C)

- **Enable/ Disable**

To disable the system frost protection function, set P22=OFF.

4.11.2. Automatic Summer Switch-Off

At higher outside temperatures it doesn't make sense to keep heating the building. The System Controller will switch the heating off when the average daily outdoor temperature (averaged over 24hrs) rises above the parameter (P26). A control differential of +/-0.5K is applied.

- **Algorithm**

Average Outside Temperatura > P26 Summer Switch-Off condition is active.

Average Outside Temperatura < P26-0.5K Summer Switch-Off condition is not active.

When the Summer Switch-Off condition is active, the heating is switched off. To disable the automatic summer switch-off function, set P26=OFF.

- **Parameter Settings**

P26 Summer Switch-off Temperature (default 20°C)

- **Enable/ Disable**

To disable the automatic summer switch-off function, set P26=OFF

4.11.3. Pump and Valve Seizure Protection

The System Controller has an anti-seize protection function for valves and pumps which helps to prevent these components sticking during long periods of inactivity. Every 24hrs the components which have not been used will be run for a short period.

4.11.4. Screed function (drying for new floors)


The screed function is used exclusively for the required drying of newly applied screed on floor heating systems. The process is based on EN 1264 part 4. When the screed function is activated :

1. The flow temperature is kept constant at 25°C for 3 days
2. Heating is set at the maximum supply setpoint (P6) for 4 days (water temperature is always limited to 55°C)

On completion of the screed function, the controller returns to normal operation.


- **To Activate**

The function is activated by setting parameter P25 to 1. The screed function can be deactivated at any time by setting the parameter P25 to 0.

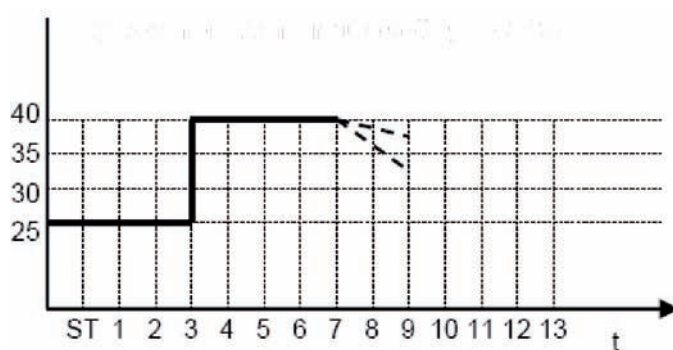

• **Parameter Settings**

P25 Start Screed-Drying Function (default 0)

	NOTE
- If there is a power interruption, the screed function will continue when the power is restored.	

4.12. PARAMETER TABLES

4.12.1. Installer Parameters

• **Setting Instructions**

Please refer to the System Controller Installation & Operation Manual for instructions on how to set the installer parameters.

ID	Parameter	CONF	Description	Min	Max	Step	Default
CONF	System Configuraron	12345	Set according to trie type of hydraulic configuraron installed.	1	5	1	3
P1	DHW Configuration	123-5	Set to 0=No DHW, 1 =DHW valve, 2=DHW pump	0	2	1	0
P2	Secondary Pump	12	Set to 1 if a buffer/hydraulic separator and a secondary pump is used (CONF 1 or CONF 2 only)	0	1	1	0
P3	Pump Overrun Time	12345	Sets how long trie pumps run afterthe heating is switched off.	1	10	1	2 min.
P4	OTC Heating Curve Gradient	12345	Sets the heating curve for OTC control function	0.2	2.2	0.1	1.1
P5	Minimum Supply Temperature	12345	Sets the minimum supply water temperature for the heating.	5	40	1	15°C
P6	Zone 1: Máximum Supply Temperature	12345	Sets the maximum supply water temperature for the heating (zone 1)	20	55/65/90*	1	55°C
P7	Room Compensation Factor	12345	Sets the room temperature influence for the OTC control function	0	5	0.5	2
P9	Actuator Run Time / Mixing valve Control	45	Set to the running time of the actuator (see actuator manufacturer's technical data)	30	600	10	120 s
P10	DHW setpoint (not available if P1 =0)	123-5	Setpoint for the DHW control function.	45	65	1	45° C
P11	DHW differential (not available if P1 =0)	123-5	DHW control differential	1	10	1	5 K
P12	DHW supply offset (not available if P1=0)	123-5	Influences how quickly the hot water tank is heated	1	30	1	10 K

ID	Parameter	CONF	Description	Min	Max	Step	Default
P15	Máximum Outdoor Temperature for Boiler / Electric Operation.	-2345	Boiler / Electric heater will be disabled above this temperature (Heat Pump works on its own). OFF means the boiler/electric heater is always enabled.	-20	20, then OFF	1	0°C
P17	Boiler Minimum ON Time	--345	Sets the minimum ON time of the boiler to reduce inefficient short-cycling	1	30	1	2 min
P18	Boiler minimum OFF time	--345	Sets the minimum OFF time of the boiler to reduce inefficient short-cycling	1	30	1	5 min.
P19	Waiting Time for Boiler/ Electric Heater	-2345	Sets the minimum time the controller will wait (after the heat pump is switched on) before using the boiler or electric heater	1	90	1	30 min.
P21	Mínimum Supply Setpoint during Frost Protection	12345	Sets the minimum supply water temperature when the frost protection function is active.	10	35	1	20 °C
P22	Frost Protection Activation Temperature	12345	Sets trie outdoor temperature below which trie frost protection function will activate.	-20, then OFF	5	1	2°C
P23	Zone2: Máximum Supply Temperature	12345	Sets the maximum supply water temperature for the heating (zone 2 extension)	20	55/65/90*	1	50°C
P24	Configuraron of Tariff/ Timer Input	12345	The sets the meaning of the digital input "Tariff/Timer"	0	4	1	4
P25	Start Screed-Drying Function	12345	Set to 1 to start immediately trie underfloor screed-drying function	0	1	1	0
P26	Summer switch-off temperature	12345	Sets the daily average outdoor temperature above which the heating will be switched off.	10	25, then OFF	1	20°C
P27	Maximum allowed DHW loading time (not available if P1=0)	123-5	Sets the maximum time allowed for DHW loading. After this time, if the DHW setpoint is not achieved, the controller will nevertheless return to heating.	1	12	0.5	1.5 hr
P30	No-load function enable	12345	Disables the heating in Zone 1 if the OTC calculated supply setpoint falls below the room temperature	0	1	1	1
P31	Heat Pump Sensor Offset	12345	Compensates for differences in temperature measurement between the Heat Pump and the Supply Sensor.	0	5	1	3°C
P32	Supply-Return Difference Control Limit	-2345	Control parameter to help maximise running time of the heat pump and minimise use of the electric heater or boiler.	1, then OFF	10	1	3°C
P33	Return Temperature Limit Offset	-2345	Control parameter to prevent electric heater use when the return temperature is too high for heat pump operation.	1, then OFF	15	1	OFF
P34	DHW Electric Heater Waiting Time (not available if P1=0)	12	Sets the time to wait after starting to heat the DHW tank before enabling the special output for "DHW electric heater enable"	0	60	1	45min

CONF: Only parameters that are allowed in a particular configuration are shown on the display.

4.12.2. Engineering Parameters

Engineering Parameters (EP) are provided for service engineers or the manufacturer to make adjustments that may be required to fix difficult or unusual problems. They are accessed in a similar way to the installer parameters via the front panel keypad.

• Setting Instructions

To enter Engineering Parameter Display mode from the Normal Operation mode, press the **SET**, **SEL** and **i** buttons together for at least one second. The display will show EP1" (or EP2" or EP5" depending on the system configuration) to indicate that the System Controller is in Engineering Parameter Display mode, and shows the parameter abbreviation and its current setting.

1. Use the "+" and "-" buttons to move up or down the parameter list according to the table.
2. To change a parameter setting, use the set button to enter Parameter Setting Mode. The value of the parameter will flash to show that it can now be changed. Use the "+" and "-" buttons to change the value to the desired setting.
3. To store the parameter setting, press the **SET** button. The flashing will stop to show the value has been saved. Instead, to cancel the change, and retain the previously stored value, press the **SEL** button.
4. Continue to change the parameters as required. When finished, or at any time, pressing the **i** button will return the display to Normal Operation mode.

ID	Parameter	CONF	Description	Min	Max	Step	Default
EP1	Mixing Valve Integral Factor	45	Mixing Valve Control: the integral reset factor of the P+I control algorithm.	0.0	20.0	0.1	2.5 %/Kmin
EP2	Integral Factor Required Load	-2345	Electric Heater or Boiler Control: the integral reset factor of the P+I control algorithm.	0.0	20.0	0.1	2.5 %K/min
EP3	Difference Supply Water Temperature	5	Mixing / Bypass Valve Control: offset to decide when to start the mixing control.	0.0	5.0	0.1	1.5 K
EP5	Show Entire Menu	12345	Setting EP5=1 shows all installer and engineering parameters independent of configuration.	0	1	1	0
EP6	Heat Pump supply setpoint at 4mA	12345	Heat Pump Control: the outlet supply setpoint of the Heat Pump for a 4mA control signal.	10	30	1	20°C
EP7	Heat Pump supply setpoint at 20mA	12345	Heat Pump Control: the outlet supply setpoint of the Heat Pump for a 20mA control signal.	40	70	1	55°C
EP8	Mixing Valve Proportional Band	45	Mixing Valve Control: the proportional band of the P+I control algorithm.	0.2	20.0	0.2	6.0K
EP13	Heat Pump Maximum Return Temperature	12345	Heat Pump Control: the maximum return temperature allowed while the heat pump is on.	20	70	1	60°C
EP14	Heat Pump Minimum Outdoor Temperature	12345	Heat Pump Operating Limits: Defines the lowest possible outside temperature of operation of the heat pump.	-25	20, then OFF	1	-20 °C
EP16	P band Required Load	-2345	Electric Heater or Boiler Control: the proportional band of the P+I control algorithm.	0.2	20.0	0.2	6.0K
EP20	Inter-Stage Waiting Time	-2	Electric Heater Control: The minimum time between switching stages of the electric heater.	10	250	10	10sec
EP28	Heat Pump Minimum Supply Temperature.	12345	Heat Pump Operating Limits: minimum supply temperature below outside temperature of EP32	10	40	1	35°C
EP29	Heat Pump Maximum Supply Temperature	12345	Heat Pump Operating Limits: maximum supply above outdoor temperature of EP34.	40	70	1	55°C
EP31	Offset Supply Setpoint	-2345	Electric Heater or Boiler Control: reduced supply setpoint offset for control of electric heater or boiler.	0	10	1	4K
EP32	Heat Pump Minimum Supply Inflexión Point	12345	Heat Pump Operating Limits: parameter to define shape of minimum supply temperature operating curve.	-25	20	1	0°C
EP33	Heat Pump Maximum Supply Temperature	12345	Heat Pump Operating Limits: maximum supply temperature below outside temperature of EP34	40	70	1	50°C
EP34	Heat Pump Maximum Supply Changing Point	12345	Heat Pump Operating Limits: parameter to define point at which maximum supply temperature changes.	-25	20	1	-10°C
EP35	Heat Pump Max Time High Setpoint	12345	DHW Control: time that supply setpoint is held at maximum when DHW demand occurs.	0	180	1	180sec
EP36	Boiler Delay Time	--345	Boiler Control: Inhibits the Supply-Return Difference Check until this time has expired after the boiler is switched on.	1	15	1	5min

4.13. CONVERSION TABLE: HEAT PUMP SUPPLY TEMPERATURE TO mA

The following table converts the Heat Pump supply temperature setting in °C to current (I) in mA.

mA	Setting (°C)
2.0 <i>i</i> < 22	15.5
2.2 <i>i</i> < 24	16.0
2.4 <i>i</i> < 27	16.5
2.7 <i>á</i> < 29	17.0
2.9 <i>á</i> < 31	17.5
3.1 <i>i</i> < 33	18.0
3.3 <i>i</i> < 36	18.5
3.6 <i>i</i> < 38	19.0
3.8 <i>i</i> < 40	19.5
4.0 <i>i</i> < 43	20.0
4.3 <i>i</i> < 45	20.5
4.5 <i>á</i> < 47	21.0
4.7 <i>i</i> < 49	21.5
4.9 <i>i</i> < 52	22.0
5.2 <i>i</i> < 54	22.5
5.4 <i>i</i> < 56	23.0
5.6 <i>i</i> < 59	23.5
5.9 <i>i</i> < 61	24.0
6.1 <i>i</i> < 63	24.5
6.3 <i>i</i> < 65	25.0
6.5 <i>i</i> < 68	25.5
6.8 <i>i</i> < 70	26.0
7.0 <i>i</i> < 72	26.5
7.2 <i>i</i> < 75	27.0
7.5 <i>á</i> < 77	27.5
7.7 <i>i</i> < 79	28.0
7.9 <i>i</i> < 81	28.5

mA	Setting (°C)
8.1 <i>i</i> < 84	29.0
8.4 <i>i</i> < 86	29.5
8.6 <i>i</i> < 88	30.0
8.8 <i>i</i> < 91	30.5
9.1 <i>i</i> < 93	31.0
9.3 <i>i</i> < 95	31.5
9.5 <i>i</i> < 97	32.0
9.7 <i>i</i> < 100	32.5
10.0 <i>i</i> < 102	33.0
10.2 <i>i</i> < 104	33.5
10.4 <i>i</i> < 107	34.0
10.7 <i>i</i> < 109	34.5
10.9 <i>i</i> < 111	35.0
11.1 <i>á</i> < 113	35.5
11.3 <i>i</i> < 116	36.0
11.6 <i>á</i> < 118	36.5
11.8 <i>á</i> < 120	37.0
12.0 <i>i</i> < 123	37.5
12.3 <i>i</i> < 125	38.0
12.5 <i>i</i> < 127	38.5
12.7 <i>i</i> < 129	39.0
12.9 <i>i</i> < 132	39.5
13.2 <i>i</i> < 134	40.0
13.4 <i>i</i> < 136	40.5
13.6 <i>á</i> < 139	41.0
13.9 <i>i</i> < 141	41.5

mA	Setting (°C)
14.1 <i>i</i> < 143	42.0
14.3 <i>i</i> < 145	42.5
14.5 <i>i</i> < 148	43.0
14.8 <i>i</i> < 150	43.5
15.0 <i>i</i> < 152	44.0
15.2 <i>i</i> < 155	44.5
15.5 <i>i</i> < 157	45.0
15.7 <i>i</i> < 159	45.5
15.9 <i>i</i> < 161	46.0
16.1 <i>i</i> < 164	46.5
16.4 <i>i</i> < 166	47.0
16.6 <i>i</i> < 168	47.5
16.8 <i>i</i> < 171	48.0
17.1 <i>i</i> < 173	48.5
17.3 <i>i</i> < 175	49.0
17.5 <i>i</i> < 177	49.5
17.7 <i>i</i> < 180	50.0
18.0 <i>i</i> < 182	50.5
18.2 <i>i</i> < 184	51.0
18.4 <i>i</i> < 187	51.5
18.7 <i>i</i> < 189	52.0
18.9 <i>i</i> < 191	52.5
19.1 <i>i</i> < 193	53.0
19.3 <i>i</i> < 196	53.5
19.6 <i>á</i> < 198	54.0
19.8 <i>i</i> < 200	54.5
20.0 <i>i</i> < 203	55.0

4.14. SENSOR RESISTANCE TABLES

NTC 20k Celsius Temperature Characteristic

temp. (°C)	resist. (Ω)	temp. (°C)	resist. (Ω)	temp. (°C)	resist. (Ω)	temp. (°C)	resist. (Ω)	temp. (°C)	resist. (Ω)
-50.0	1659706	-9.0	115575	31.0	15180	71.0	2989	111.0	793.7
-49.0	1541379	-8.0	109189	32.0	14511	72.0	2882	112.0	770.3
-48.0	1432919	-7.0	103194	33.0	13875	73.0	2779	113.0	747.7
-47.0	1332091	-6.0	97564	34.0	13270	74.0	2681	114.0	725.8
-46.0	1238358	-5.0	92274	35.0	12695	75.0	2587	115.0	704.7
-45.0	1153525	-4.0	87303	36.0	12148	76.0	2496	116.0	684.2
-44.0	1073429	-3.0	82628	37.0	11627	77.0	2409	117.0	664.5
-43.0	999894	-2.0	78232	38.0	11131	78.0	2325	118.0	645.3
-42.0	932327	-1.0	74094	39.0	10659	79.0	2245	119.0	626.9
-41.0	869327	0.0	70200	40.0	10210	80.0	2168	120.0	609.0
-40.0	814000	1.0	66515	41.0	9781	81.0	2094	121.0	591.7
-39.0	759391	2.0	63046	42.0	9373	82.0	2022	122.0	575.0
-38.0	708806	3.0	59777	43.0	8983	83.0	1954	123.0	558.8
-37.0	661924	4.0	56697	44.0	8612	84.0	1888	124.0	543.2
-36.0	618451	5.0	53793	45.0	8258	85.0	1824	125.0	528.0
-35.0	578119	6.0	51055	46.0	7920	86.0	1763	126.0	513
-34.0	540677	7.0	48472	47.0	7598	87.0	1705	127.0	499
-33.0	505902	8.0	46034	48.0	7291	88.0	1648	128.0	485
-32.0	473588	9.0	43733	49.0	6998	89.0	1594	129.0	472
-31.0	443546	10.0	41560	50.0	6718	90.0	1542	130.0	459
-30.0	415600	11.0	39500	51.0	6450	91.0	1491		
-29.0	389298	12.0	37553	52.0	6195	92.0	1443		
-28.0	364833	13.0	35714	53.0	5951	93.0	1396		
-27.0	342063	14.0	33975	54.0	5718	94.0	1351		
-26.0	320860	15.0	32331	55.0	5495	95.0	1308		
-25.0	301107	16.0	30775	56.0	5282	96.0	1266		
-24.0	282696	17.0	29303	57.0	5078	97.0	1226		
-23.0	265528	18.0	27909	58.0	4883	98.0	1187		
-22.0	249511	19.0	26590	59.0	4696	99.0	1150		
-21.0	234561	20.0	25340	60.0	4518	100.0	1114		
-20.0	220600	21.0	24155	61.0	4347	101.0	1079		
-19.0	207607	22.0	23032	62.0	4184	102.0	1046		
-18.0	195459	23.0	21967	63.0	4027	103.0	1014		
-17.0	184096	24.0	20958	64.0	3877	104.0	982.8		
-16.0	173463	25.0	20000	65.0	3734	105.0	952.8		
-15.0	163508	26.0	19089	66.0	3596	106.0	923.9		
-14.0	154185	27.0	18224	67.0	3464	107.0	896.0		
-13.0	145450	28.0	17404	68.0	3338	108.0	869.1		
-12.0	137262	29.0	16624	69.0	3216	109.0	843.1		
-11.0	129583	30.0	15884	70.0	3100	110.0	818.0		
-10.0	122380								

4.15. TECHNICAL DATA

4.15.2. System Controller (XEK23232 A)

Power supply	230Vac +10%, -15%, 50Hz
Power Consumption	Max 5VA
Ambient Operating Temperature	0 to 50°C
Storage Temperature	-20 to 55°C
Humidity	0 to 90% RH non-condensing
Dimensions	121 x 161.5 x 46mm (WxHxD)
Material Base	PA-GF 25-FR
Material Cover	PC-FR (VO certified)
Degree of Protection	IP20 (IP30 with cable glands)
Fire Class	V0
Protection class	Class I (according to EN60730-1)
Emissions Standards	Complies with EN61000-6-3
Immunity Standards	Complies with EN61000-6-1
Safety Standards	Complies with EN60730-1:2007
CE Compliance	93/68/EEC
WEEE Compliance	2002/96/EC
RoHS Compliance	2002/95/EC
Heat Pump Control Signal	0-20mA, (max 10V @ 20mA), cable length max 20m (with wire cross-section 0.5mm ²)
Boiler output relay	Potential free contacts (24V-230Vac 0.5A)
DHW electric heater enable output relay	Potential-free contacts (230Vac 0.5A)
All other output relays	230Vac 0.5A
Tariff / Timer Input	Input for potential-free contact (rated 5Vdc, switching current 1mA)
Heat Pump Fault Input	Input for potential-free contact (rated 5Vdc, switching current 100mA)
RF Receiver connection	Serial communications according to OpenTherm® technical specification v2.3 (max 18V, 23mA, 1000 baud)
Diagnostic Interface	I ² C Bus Specification v2.1. An I ² C to RS232 interface is required for connection to a PC.

4

4.15.2. Water Temperature Sensor (XEK35524 A)

Element Type	NTC 20k @ 25°C
Mounting	Insertion well, or strap-on pipe with provided metal clip
Range, Precision	+5 to +90°C, +/-1K
Cable Length	2m cable, 2 core. (max cable length 100m)
Dimensions (cartridge)	6.5mm Ø, 50mm long
Protection class	IP62

4.15.3. Outdoor Temperature Sensor (XEK35438 A)


Element Type	NTC 20k @ 25°C
Mounting	Outside wall mounting
Range, Precision	-30 to +40°C, +/-1K
Dimensions	95 x 65 x 70mm (HxWxD)
Housing	Plastic (ABS)
Electric Connection	Terminals for 2 x 1.5mm ² cable
Cable Length	Max 100m
Protection Class	IP30


4.16. SYSTEM MMI PACK (ROOM UNIT AND RF RECEIVER)

4.16.1. Room Unit installation guide

◆ 4.16.1.1. Description

The Room Unit communicates with the RF Receiver on an 868MHz Radio Frequency (RF) band to control the Heat Pump System Controller. Neither product will communicate with other RF products that use different frequencies or communication protocols.

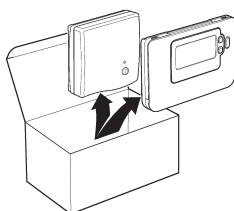


	NOTE
<p>- The RF link between the Room Unit and RF Receiver in system packs is pre-configured at the factory and therefore should be installed at the same site. This makes the installation process fast and easy, but if products from individual system packs are separated, or mixed with other pre-configured system packs during installations please refer to the section Binding / Rebinding procedure to bind the desired units together and allow them to communicate with each other.</p>	

◆ 4.16.1.2. Installation information

As these products communicate using RF technology special care must be taken during installation. The location of the RF components as well as the building structure may influence performance of the RF system. To assure system reliability, please review and apply the information given below.

Within a typical residential building the two products should communicate reliably within a 30m range. It is important to take into consideration that walls and ceilings will reduce the RF signal. The strength of the RF signal reaching the RF Receiver depends on the number of walls and ceilings separating it from the Room Unit, as well as the building construction - the diagram below illustrates an example of typical signal strength reduction. Walls and ceilings reinforced with steel or plasterboard walls lined with metal foil reduce the RF signal significantly more.

Once a position is selected for the Room Unit this can be checked using the RF Communication Test mode as described in section Locating the Room Unit. If the position is unsuitable the RF Receiver will not respond and an alternative position for the Room Unit must be selected.

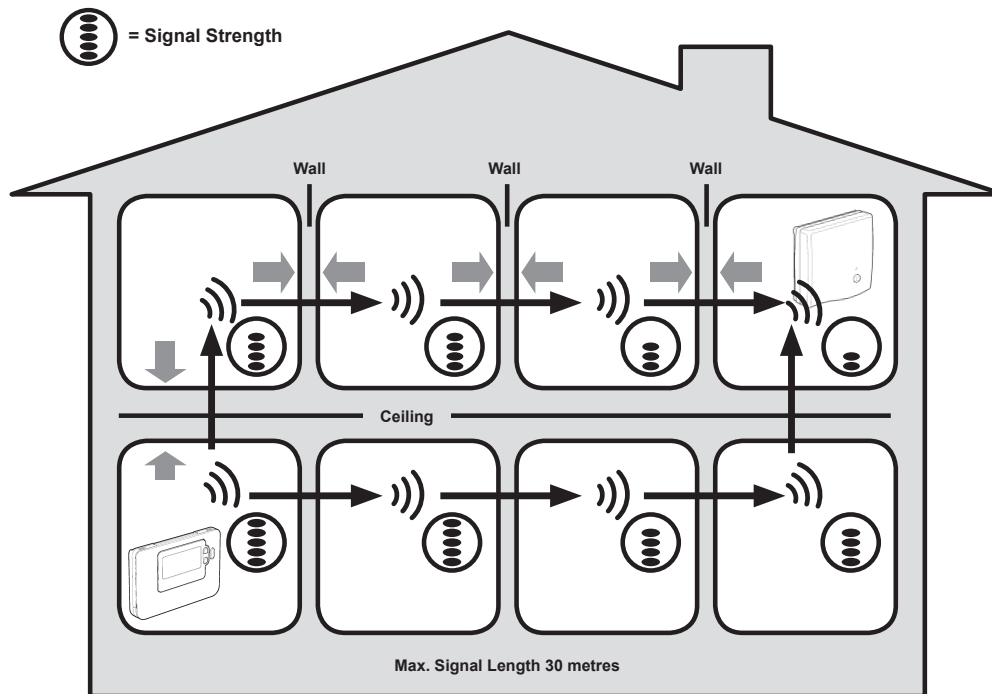

Typical example of building fabric signal losses

4


◆ 4.16.1.3. Installing the System MMI Pack


Please follow the illustrations and information below in sequence to install the RF Receiver and Room Unit correctly. To enable special features and see what other system options are available refer to section Installer Mode.

◆ 4.16.1.4. Installing the RF Receiver

	NOTE
- The RF Receiver contains no user serviceable parts. It should be opened and installed by qualified installer only.	

	CAUTION
- Electrostatic sensitive device! Do not touch the circuit board.	

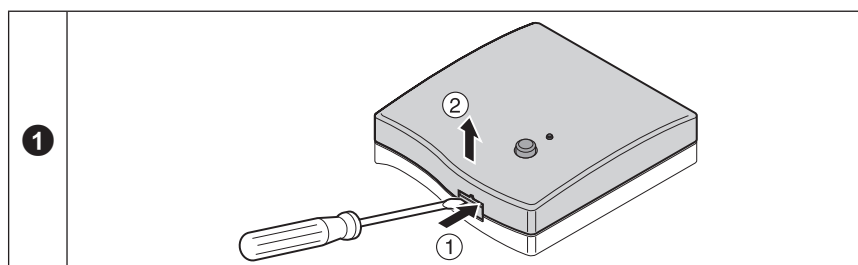

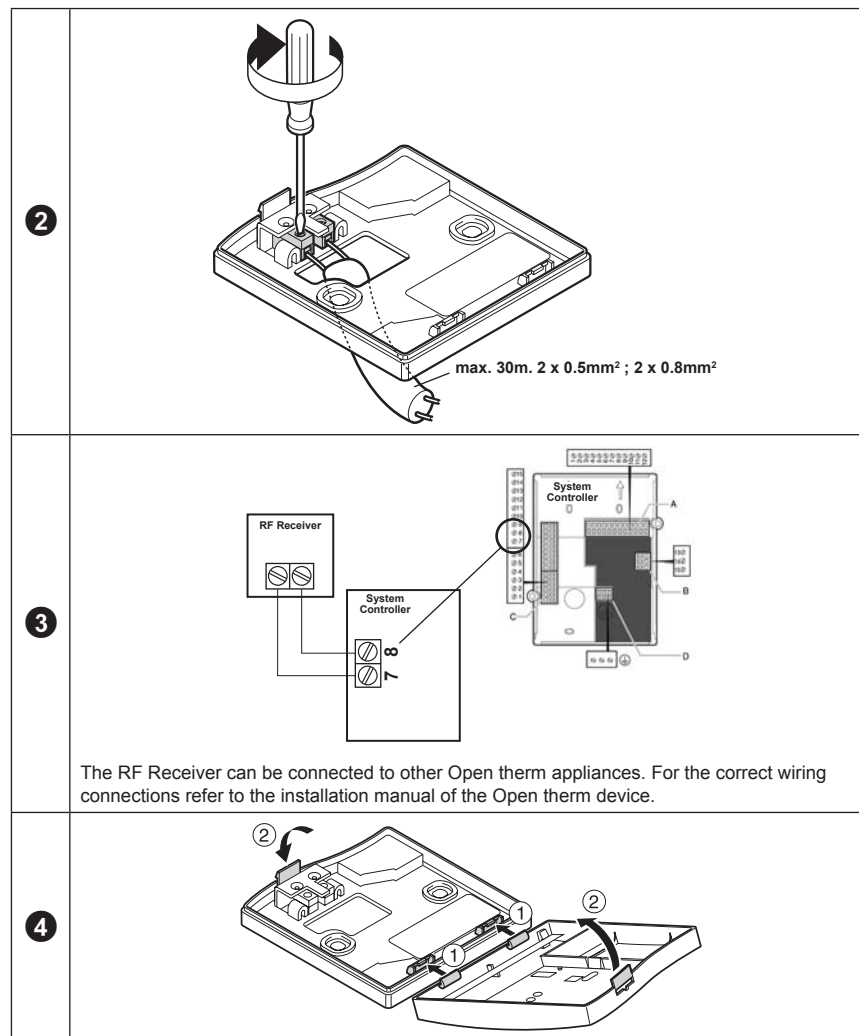

i **NOTE**
- All wiring must be in accordance with IEE regulations.

! **CAUTION**
- Observe ambient temperature and current limits (see the RF Receiver wiring label).

4.16.2. Installing the Room Unit


























◆ 4.16.2.1. Power up

Installing the Batteries:

- a. Lift up the front cover of the Room Unit to reveal the battery cover and product controls.
- b. Remove the battery cover by pressing down and sliding out.
- c. Insert the 2 x AA LR6 Alkaline Batteries supplied with the Room Unit, ensuring the correct orientation.






- d. After a short pause the Room Unit will display information on the screen and is now ready for use.
- e. Replace the battery cover by sliding it firmly back into the front of the Room Unit.


Setting the date and time:

<p>a. Press the  button to begin setting the date. When you set the date for the first time after the batteries are inserted, the display will show:</p> <p>Press the   or  buttons to set the current day of the month (e.g. d 01 = 1st day of the month) then press the green  button to confirm.</p>	
<p>b. Press the   or  buttons to set the current month of the year (e.g. m 01 = January) then press the green  button to confirm.</p>	
<p>c. Press the   or  buttons to set the current year (e.g. yr 07 = 2007) then press the green  button to confirm.</p> <p>The date is now stored and the Day Indicator will be displayed under the current day of the week (e.g. 1 = Monday, 2 = Tuesday, etc.)</p>	
<p>d. Use the   or  buttons to set the correct time then press the green  button to confirm. Each press of the buttons will change the time by one minute and holding them down will change the time slowly at first and get progressively quicker.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> NOTE</p> <p>- If this mode is entered accidentally then press the ,  or  buttons to exit.</p> </div>	



◆ 4.16.2.2. RF Communication check (test mode)

To check the RF communication, hold the **Room Unit** about 2-3 metres from the installed RF Receiver. Set the **Room Unit** to off by pressing the  button. then press the   and  buttons together with the  button for 3 seconds. The unit will display “test” and it will send test signals to the **RF Receiver**. If the test signals are received the LED on the RF Receiver will flash between 1 and 5 times. The number of flashes indicates the strength of the radio signal. The higher the number of flashes, the stronger the signal is.


	<p style="text-align: center;">NOTE</p>
<p>- If the LED does not flash or if you are installing a replacement RF Receiver or Room Unit, follow the procedures described in section Binding / Rebinding Procedure.</p>	

◆ 4.16.2.3. Locating the Room Unit

While still in the Test Mode, the Room Unit should be located taking the following into consideration and reviewing the illustrations below:

1. Find a suitable location where the signal transmission is reliable. Reliable transmission is indicated when the RF Receiver is flashing the green LED every 6 seconds.

2. Install the **Room Unit** EITHER on the wall using the wall bracket OR attach the optional table stand as shown in below.
3. Exit the Test Mode by pressing the **A** or **U** button.

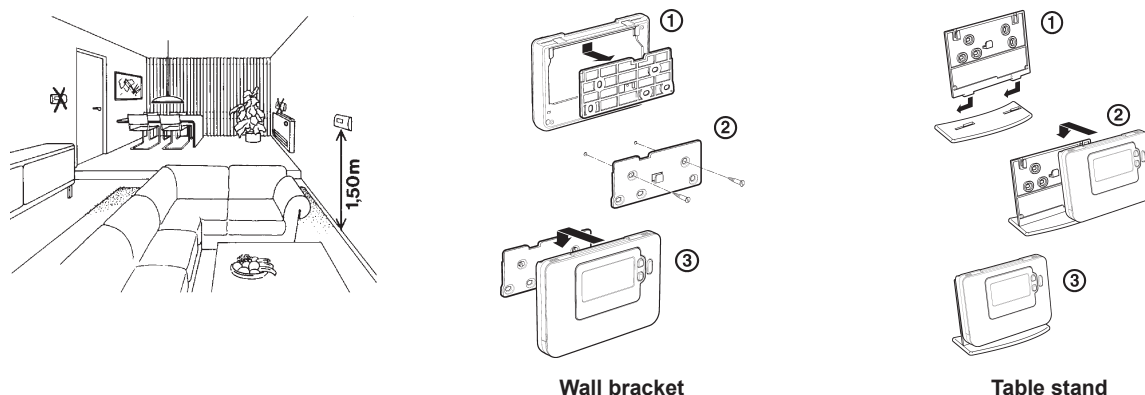

- The **Room Unit** should be installed in an open space for best performance as it is a radio frequency device.
- Leave at least 30cm distance from any metal objects including wall boxes and at least 1 metre from any other electrical equipment as radio, TV, PC etc.
- Do not mount onto metal wall boxes.
- It is recommended that the RF Receiver is fully installed.

4.16.3. Communication loss

In the event of an RF communications loss, the LED on the RF Receiver will indicate which type of fault has occurred.

- If there is a communications fault between the RF Receiver and the Room Unit, then the LED on the RF Receiver will flash red for 0.1 sec ON every three seconds.
- If there is a fault in communications between the boiler or System Controller, then the LED on the RF Receiver will flash 3 times quickly and then be off for three seconds.
- If there is more than one Room Unit installed, as in multi-zone systems for example, and communications is lost with one zone, then the red LED on the RF Receiver will flash two times quickly and then be off for two seconds.
- If there is more than one Room Unit installed, as in multi-zone systems for example, and communications is lost with both zones, then the red LED on the RF Receiver will flash once for 0.1 sec ON, and 0.9 sec OFF.















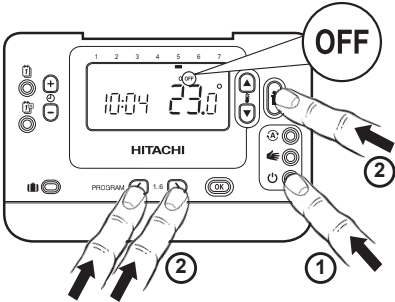


Once the faulty device has been identified, replace as necessary and follow the re-binding procedure as described in section Binding / Rebinding Procedure.

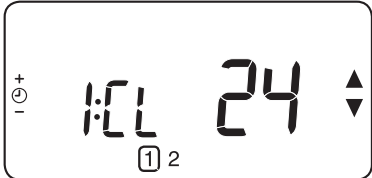4.16.4. Installer mode

Installer Mode is used to alter the system settings for specific applications, to use the special features of the Room Unit in a different way or to alter the factory preset parameters. Parameters are divided into two groups:

- Category 1 parameters – Room Unit Setup
- Category 2 parameters – System Setup. (These are all listed in section Installer Parameters Table.).

◆ 4.16.4.1. Entering installer mode

<p>1</p>		<p>Press the  button. Press and hold the  button and the PROGRAM  &  buttons together.</p>
<p>2</p>		<p>The unit will display the first parameter of installer parameter group category 1 (from Parameter n.1 to n.19) as shown</p>
<p>3</p>		<p>Press the  or  to change factory setting. The display will flash indicating that a change has been made.</p>
<p>4</p>		<p>Press the green  button to confirm the change. The display will stop flashing. (Continues in the next page)</p>
<p>5</p>		<p>Press   button to go to the next parameter.</p>
<p>6</p>	<p>Press the  button to go to Installer parameter group category 2 (2) (from Parameter n.4 to</p>	
<p>7</p>	<p>To exit the installer mode press the  or  buttons.</p>	


4

◆ 4.16.4.2. Fail-Safe mode setup

The fail-safe mode defines the system status if the RF communication is lost (e.g. when the **Room Unit** stops communicating due to discharged batteries). If the system is a direct (radiator one), then the factory setting will make the system revert to a set point of 10°C for frost protection. If indirect loops are added, the system will continue to operate at the last communicated setpoint.

◆ 4.16.4.3. Using the Room Unit for specific applications

The Room Unit is a versatile controller that can be used to control many different applications. Please note that when the Room Unit is installed in conjunction with a System Controller, the functionality will differ to that when installed with a standard boiler system. Most of the functions shown below will be controlled by the System Controller and be set within its parameters. Therefore, some of the system parameters within the Room Unit menu will not apply. Please also note other changes to the setting of the optimisation and proportional band settings as shown in the the next tables.

	NOTE
<p>- In order for the Room Unit to send the heating demand signal to the RF Receiver, it is essential that the Category 2 parameter 8:Su is set to the correct value (see Installer Parameters Table, 3.5.2 Category 2 – System Settings). Failure to do this will mean that the heating system will not respond to changes in the setpoint on the Room Unit. Under these circumstances the system will operate with no input from the Room Unit and may not therefore provide adequate temperature control.</p>	

◆ 4.16.4.4. Using the special features of the Room Unit

Special feature	Description:	Enable/Disable
Heating operation	(This feature is not available with the system) This product can be used for heating applications. You can independently modify the profile.	To enable: Set parameter 4:HC (category 2) to 1.
Summer/winter auto time change	This feature moves time automatically on the last Sunday of March and the last Sunday of October. The feature is factory enabled.	To enable: Set parameter 3:tC (category 1) to 1.
Temperature offset	If the Room Unit is located in a particularly hot/cold location for reliable signal transmission reasons then the measured/displayed temperature can be adjusted by +/- 3°C. This is useful if the homeowner wants the reading to match another appliance temperature display.	Set parameter 12:tO (category 1) to the required offset value.
Upper/lower temperature limit	The normal upper temperature limit of 35°C can be reduced to 21°C to save the homeowner energy. The normal lower limit of 5°C can be increased up to 21°C to protect inhabitants from cold.	Set parameter 6:uL (category 1) to the desired upper limit. Set parameter 7:lL (category 1) to the desired lower limit.





4.16.5. Installer parameters table

◆ 4.16.5.1. Category 1 - Room Unit settings


Parameter	Parameter No.	Factory Default Setting		Optional Setting	
Category 1 Parameters – Room Unit Settings					
		Display	Description	Display	Description
AM-PM / 24hr Display	1:CL	24	24 hr clock display format	12	12 hr – AM/PM clock display format
Reset Time/ Temp Program	2:rP	1	Time / Temp profile set to factory default Changes to 0 when one of the time/temp profiles are changed	0	Time / Temperature are as programmed To restore the factory profile set to 1
Auto Summer/ Winter Time Change	3:tC	1	Auto Summer/ Winter Time Change Enabled	0	Auto Summer/Winter Time Change Disabled
LCD Backlighting	5:bL	1	Backlighting Enable	0	Backlighting Disabled
Upper Temp Limit	6:uL	35	35°C Upper Temp. Limit	21 to 34	21°C to 34°C adjustment in 1°C steps


Parameter	Parameter No.	Factory Default Setting	Optional Setting		
Category 1 Parameters – Room Unit Settings					
Lower Temp Limit	7:LL	5	5°C Lower Temp. Limit	5 to 21	6°C to 21°C adjustment in 1°C steps
Optimisation Note: This parameter will not function with the System Controller.	8:OP	0	Optimisation Disabled	1	Optimisation Enabled DO NOT CHANGE
Temperature Offset	12:tO	0	No temperature offset	-3 to +3	-3°C to +3°C adjustment in 0.1°C steps
Proportional Band Width Note: This function is for use with the extension system only. It will not function with the System Controller alone	13:Pb	1.5	Proportional band of 1.5 degrees	1.6 to 3.0	1.6°C to 3.0°C adjustment in 0.1°C steps
Reset Parameters to Factory Defaults	19:FS	1	All settings at factory defaults Changes to 0 when one of the parameter is changed	0	Settings are as modified above To restore the factory profile set to 1


4





	NOTE
<p>- Remember to always press the green  button to confirm that you want to store your new Installer Set-Up setting. To exit the Installer Mode press the  or  button.</p>	

◆ 4.16.5.2. Category 2 - System settings

	NOTE
<p>- To ensure correct heat pump system operation, parameter "8:Su" must be set correctly. See note in section Using the Room Unit for Specific Applications.</p>	

Parameter	Parameter No.	Factory Default Setting	Optional Setting		
Category 2 Parameters – System Settings (press the  button to access this category)					
Heat/Cool selection enable / disable	4:HC	0	Disabled	1	Enabled DO NOT CHANGE
Room Temperature Sensor Use	8:Su	0	Programmer and room compensation unit	1	Programmer only. Transmits demand and room setpoint (no temperature displayed)
Maximum Flow Setpoint (extension systems only)	11:uF	55	55°C Maximum Flow Temp.	0 to 99	0°C to 99°C adjustment in 1°C steps


Parameter	Parameter No.	Factory Default Setting	Optional Setting		
Category 2 Parameters – System Settings (press the  button to access this category)					
Minimum Flow Setpoint (extension systems only)	12:LF	15	15°C Minimum Flow Temp.	0 to 50	0°C to 50°C adjustment in 1°C steps
Mixing Value Run Time (extension systems only)	13:Ar	150	150 seconds	0 to 240	0 to 240 sec. adjustment in 1sec steps
Pump Overrun Run Time (extension systems only)	14:Pr	15	15 minutes	0 to 99	0 to 99 mins adjustment in 1min steps

	NOTE
- Remember to always press the green  button to confirm that you want to store your new Installer Set-Up setting. To exit the Installer Mode press the  or  button.	






4.16.6. Binding / Rebinding procedure

The binding operation described below is required if:

- Any of the system components (Room Unit or RF Receiver) are replaced.
- The RF Receiver has incorrect or no binding data stored (e.g. when pre-bound system pack components have been mismatched).

	NOTE
- During the binding procedure keep approximately 1m distance between the Room Unit and the RF Receiver.	

To bind/rebind:

1. Hold button on RF Receiver for 15 seconds. LED will flash red 0.1 sec ON, and 0.9 sec OFF.
2. Hold button on RF Receiver for 5 seconds. LED will flash red for 0.5 sec ON, and 0.5 sec OFF.
3. Press the  button on the Room Unit.
4. Hold ,  and  buttons for 2 seconds. Display will show "InSt CO". The boiler and RF signal icons will be displayed.
5. Press the green  button.
6. When Red LED on the RF Receiver goes off, the devices are bound.
7. If binding is unsuccessful, then the LED will stay on. In this case, move the Room Unit and repeat the procedure from the beginning.
8. The LED on the RF Receiver will flash green every 10 seconds to indicate that the device is live.
9. Now go to Section 2. Installing the System MMI Pack to setup the system.

4.16.7. Technical data

◆ 4.16.7.1. Specifications

System Controller

Power Supply	230Vac, 50Hz
Power Consumption	Max. 5 VA
Ambient Temperature	0 to 50 °C
Storage Temperature	-20 to 55 °C
Humidity	0 to 90% RH non-condensing
Dimensions	121 x 161.5 x 46mm (WxHxD)
Material Base	PA-GF 25-FR
Material Cover	PC-FR (VO certified)
Degree of Protection	IP20 / IP30 with cable glands
Fire Class	V0
Heat Pump Control Signal	4-20 mA, (max10V @ 20mA)
Boiler / DHW electric heater enable output	230Vac 0.5A (potential-free)
All other relay outputs	230Vac 0.5A (not potential-free)
Tariff/Timer input	5V, 1mA (a potential-free contact should be used)
Heat Pump Fault input	5V, 1mA (a potential-free contact should be used)

TEMPERATURE SENSOR

Water temperature sensor element	Type NTC20k @ 25°C
Range, precision	+5 to +90 °C, +/-1 K
Cable length	2m cable, 2 core (max 100m)
Dimensions (cartridge)	6.5 mm Ø, 50 mm long
Protection class	IP 62

OUTSIDE SENSOR

Outdoor temperature sensor element	Type NTC20k @ 25°C
Range, precision	-30 to 40 °C, +/-1 K
Dimensions (HxWxD)	95 x 65 x 70 mm
Housing	Plastic (ABS)
Electric connection	Terminals for 2 x 1.5mm ² cable
Cable length	1m (max 100m)
Protection Class	IP 30

◆ 4.16.7.2. Standards, approvals and function definition

Purpose of the device is temperature controlling
Device meets Protection class 1, EN 60730-1,
Device meets EN61000-6-3 : emission standard, residential, commercial and light industry.
Device meets immunity standard EN61000-6-1
Refer to Code of Practice standards EN61000-5-1 and -2 for guidance
The unit complies with OpenTherm Protocol Specification v2.3c
Independently installable electronic control system with fixed installation
Type of action is Type 1.B
Temperature for ball-thrust hardness test for housing components is 75 °C and for live parts such as, for example, terminals is 125 °C
Pollution severity is 2
Rated impulse voltage is 4000 V (corresponding to Overvoltage category III)
Software class is A
NB1: Keep AC mains supply/load cables separate from signal wiring
NB2: Installation to be carried out by a suitably qualified person
Refer to Code of Practice standards EN61000-5-1 and -2 for guidance

4.16.8. Room Unit user guide


• **Description**

The Hitachi programmable wireless room unit is designed to control your heating system efficiently, providing comfortable temperatures when you are at home and energy savings when you are away. The following instructions explain how to program and use the Hitachi room unit to provide the highest home comfort with a minimum cost.

• **Features**

- Ergonomic user interface featuring an 'OK-button'.
- Large LCD (Liquid Crystal Display) Screen with backlight.
- 7-day heating program to match your lifestyle, whilst maximising energy savings.
- 6 independent temperature levels per day (from 5°C to 35°C).
- Holiday button saves energy by letting you reduce the temperature for 1 to 99 days.
- Built-in Memory holds the user program indefinitely.

• **Controls layout**

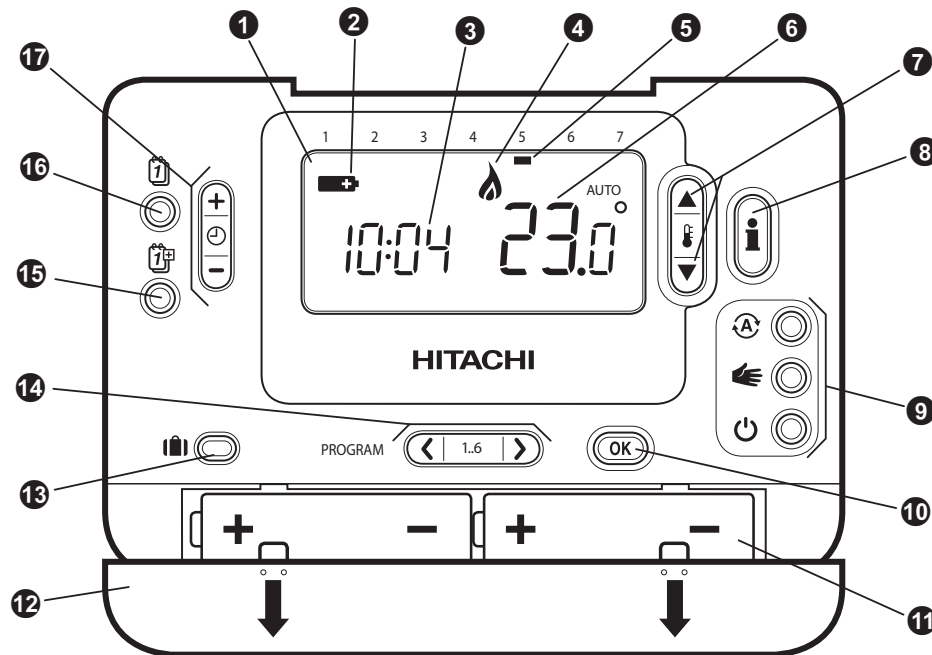


- | | | |
|-------------------------|------------------------------|---------------------------|
| ① LCD screen | ⑦ Temperature change buttons | ⑬ Holiday function button |
| ② Battery low indicator | ⑧ Temperature enquiry button | ⑭ Program buttons |
| ③ Time display | ⑨ Operating mode buttons | ⑮ Copy day button |
| ④ Burner on indicator | ⑩ Green OK button | ⑯ Set date/Day button |
| ⑤ Day indicator | ⑪ Battery compartment | ⑰ Time change buttons |
| ⑥ Temperature display | ⑫ Battery cover | |

◆ 4.16.8.1. Setting-up

This section shows you how to setup and run the Hitachi room unit in 3 simple steps:

STEP 1: Installing the batteries

	NOTE
<p>- Please follow the instructions in this section only if the Hitachi room unit screen is blank (no symbols or digits are displayed). If the room temperature is already displayed move on to Step 2: Setting the date and time.</p>	













To install the batteries:





- a. Lift up the front cover of the Hitachi room unit to reveal the battery cover and product controls.
- b. Remove the battery cover by pressing down and sliding out.
- c. Insert the 2 x AA LR6 Alkaline Batteries supplied with the Hitachi room unit, ensuring the correct orientation (see 'Controls Layout' on page 12).
- d. After a short pause the Hitachi room unit will display information on the screen and is now ready for use.
- e. Replace the battery cover by sliding it firmly back into the front of the Hitachi room unit.

4

STEP 2: Setting the date and time


To set the Date and Time:

- a. Press the  button to begin setting the date.
- b. Press the  or  buttons to set the current day of the month (e.g. d01 = 1st day of the month) then press the green  button to confirm.
- c. Press the  or  buttons to set the current month of the year (e.g. m01 = January) then press the green  button to confirm.
- d. Press the  or  buttons to set the current year (e.g. yr08 = 2008) then press the green button to confirm. The date is now stored and the Day Indicator will be displayed under the current day of the week (e.g. 1 = Monday, 2 = Tuesday, etc.)
- e. Use the  or  buttons to set the correct time then press the green  button to confirm. Each press of the buttons will change the time by one minute and holding them down will change the time slowly at first and get progressively quicker.

	NOTE
<p>- If this mode is entered accidentally then press the ,  or  buttons to exit.</p>	

STEP 3: Running the built-in heating program

The Hitachi room unit is now ready for operation. Press the  button and the built-in heating program will start running.

	NOTE
<p>- The built-in heating program has been designed to provide normal comfort requirements, but if you want to customise the settings please see the next section 'Programming the Hitachi room unit'.</p>	

◆ 4.16.8.2. Programming




The built-in heating program

The built-in heating program has 6 temperature level changes per day that can be set between 3.00am and 2.50am the following day - allowing you to maintain the evening temperature after midnight. Each temperature level can be set between 5°C and 35°C, and adjusted in 0.5°C increments. The factory default program for heating is as follows.

Monday to Friday (Day 1 to 5)	Period	1	2	3	4	5	6
	Time	6:30	8:00	12:00	14:00	18:00	22:30
	Temperature	21°C	18°C	21°C	18°C	21°C	16°C



Saturday to Sunday (Day 6 to 7)	Period	1	2	3	4	5	6
	Time	8:00	10:00	12:00	14:00	18:00	23:00
	Temperature	21°C	21°C	21°C	21°C	21°C	16°C


Reviewing the heating program

To review or edit the heating program use the PROGRAM  or  buttons to navigate between the 6 individual programming periods for that day. Use the button  to step through each day of the week, so the complete 7 day heating program can be reviewed or edited.





Modifying the heating program

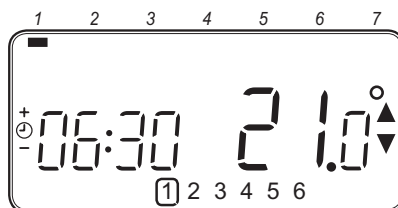To change the heating program:


- a. Press either of the PROGRAM  or  buttons to enter the programming mode. The time / temperature settings for period 1 on Monday (Day 1) will be flashing as shown. The active period is highlighted by a flashing square around the numbers at the bottom of the screen and the selected day is shown with the day indicator.







- b. To adjust the period start time use the ,  or  buttons, the 'OK?' indicator will be displayed to confirm the change. Holding the button down will change the time quickly.

	NOTE
<p>- If you are pressing the ,  or  buttons and the display flashes the next period, it means the next period will be pushed forward.</p>	



- c. Once the required time is reached press the green **OK** button to confirm.



	NOTE
- If the original time setting did not require adjustment press the green OK button to move to step 'd'.	

- d. The temperature setting for period 1 on Monday (Day 1) will now be flashing. To adjust this press the   or  buttons and confirm the setting again by pressing the green **OK** button.

- e. The next time and temperature period will now be active. Adjust this by repeating steps b - d above until all 6 periods are set for Monday or press the  button to run the program as set, at any time.






You now have a choice of how to set the program for the next day:


- f. i) Press the button  to copy Monday's program into Tuesday. The display will go blank apart from the 'non flashing' day indicator, which indicates the day copied and the 'flashing' target day to copy the program to. To accept this day press the green **OK** button. To select a different target day press the  button until the 'flashing' day indicator is under the required day, then accept it by pressing the green **OK** button.

	NOTE
- Once the target day is confirmed it becomes the day that is copied if the  button is pressed again.	

4

OR





- ii) Press the  button to move the day indicator to Tuesday (Day 2). The program for that day can then be adjusted by following steps b to e. Programs for the remaining days can be set in the same way, using the  button to move to the next day. To exit the programming mode select the desired operating mode by pressing the ,  or  buttons.

	NOTE
- To run the adjusted program select the AUTO mode.	

Disabling / Enabling time periods




The Hitachi room unit has 6 periods each day that can be programmed, but you may not need all of these switch points for your heating requirements. Therefore, any period from 2 to 4 can be removed from (or returned to) the heating program profile.







To disable or enable time periods:

- a. To disable unwanted periods go to the desired period (2 to 6) using the PROGRAM  or  buttons to navigate, ensure the correct period is highlighted with the flashing square symbol. Press and hold the  button for at least 2 seconds and the display will indicate the period has been removed from the program.
- b. To enable periods again follow the same procedure as above, navigating to the already disabled period. To enable this period again press and hold the  button for at least 2 seconds.

◆ 4.16.8.3. Operating







Choosing the operating mode

The Hitachi room unit can operate in three different modes: Automatic, Manual or Off. To set the operating mode press either of the ,  or  buttons. The screen indicates which mode is currently active by displaying AUTO, MAN or OFF.


- AUTOMATIC () mode sets the Hitachi room unit to follow the built-in temperature program (default or personalised). Operating the Hitachi room unit in this mode is the best way to maintain a high level of temperature comfort whilst maximising your energy savings.
- MANUAL () mode sets the Hitachi room unit to act as a simple thermostat with a fixed setpoint throughout the day. The setpoint can be adjusted from 5°C to 35°C by using the   or  buttons. The Hitachi room unit will continue to maintain this temperature until another operating mode or temperature is selected.
- OFF () mode sets the Hitachi room unit to control to a minimum temperature setting of 5°C (default) that acts as a frost protection measure for your home.

During normal operation

- Temperature Override

During normal operation (AUTO () or mode) the programmed temperature can be adjusted manually by pressing the  or  buttons or the  button. The 'target' temperature will be displayed and flash for 5 seconds - during this time the  or  buttons can be used to modify the set value. Note: This temperature override is cancelled at the next programmed temperature change.

- Temperature Enquiry













When the Hitachi room unit is configured to control the room temperature directly it will display the current room temperature. To review the programmed 'target' temperature (the temperature which the Hitachi room unit is trying to maintain) press the  button. This 'target' temperature value will be displayed flashing for 5 seconds before returning to the current room temperature value.




Using the special functions

- HOLIDAY Function

The holiday function allows you to set a constant temperature (default = 10°C) for a specified number of days (from 1 - 99 days). This lets you save energy and related costs when you are away from home, but resumes normal operation on the day of your return.

To set the Holiday function:






- Ensure the Hitachi room unit is running in AUTO () or MAN () operating modes.
- Press the holiday button to display the holiday  days counter and temperature setting, along with the holiday indicator .
- Press the   or  time buttons to set the holiday time (1 to 99 days) and press the green  button to confirm.
- Press the   or  buttons to set the holiday temperature (5°C to 35°C) and press the green  button to confirm.

The Hitachi room unit will now control to the new temperature for the set number of days that your home is vacant. At midnight the holiday counter will be reduced by one until the selected number of days have passed. The Hitachi room unit will then return to normal operation as set by the AUTO () or MAN () mode. To cancel the HOLIDAY function or to exit the function at any time press the  button a second time.

Adjusting the time







To adjust only the time during normal operation use the   or  buttons to adjust the time and press the green  button again to confirm any changes.

◆ 4.16.8.4. Troubleshooting System MMI Pack


Symptom	Possible cause	Remedy
The Hitachi room unit has a blank LCD screen.	Batteries not installed.	Check to see if there are batteries in the battery compartment and the paper tab has been removed.
	Incorrect battery orientation.	Check that the batteries have been installed in the correct orientation.
	Exhausted batteries.	Replace with new batteries.
The Hitachi room unit shows a flashing  symbol on the LCD screen.	Batteries are exhausted and need replacing.	Replace with new batteries.
The Hitachi room unit shows a flashing  symbol on the LCD screen.	Fault in Hitachi room unit	Remove and re-insert the batteries in the Hitachi room unit. If the symbol  does not clear itself in a few minutes call the installer.
The Hitachi room unit's LCD display works but the heating does not switch on.	No power to heating system.	Check that there is power to the heating system.
	Program does not call for heat.	Press the  button and then press the  to increase the temperature a few degrees above the current room temperature. The heating should come on after a few seconds.
	Wrong electrical connection.	Call the installer to check the electrical connections
The red LED on the receiver located next to heat pump controller is constantly on or flashing.	RF communication lost due to the wrong location of the Hitachi room unit.	Hook the Hitachi room unit back on the wall bracket or replace the Hitachi room unit on the table stand in the position where RF communication was reliable.
	RF communication fault.	Call installer.
The RF Receiver does not react to setpoint changes on the Room Unit.	The Room Unit and RF Receiver are not bound or the installer parameter 8:Su has not been set correctly.	Make sure that the 8:Su parameter value is set correctly. Reset the RF Receiver by pressing and holding the push button for 15 seconds. Then follow the binding / rebinding procedure as described in section 4. Binding / Rebinding Procedure.
After the binding procedure the red LED continues to flash on the RF Receiver.	Incorrect or incomplete binding procedure. Incorrect position of the Room Unit during binding.	Repeat the binding procedure. Repeat the binding procedure keeping approx. 1m distance between the RF Receiver and the Room Unit.
The red LED is on the RF Receiver (Communication loss)	The RF Receiver receives no RF messages from the Room Unit: RF signal is blocked due to wrong location of the Room Unit. Room Unit batteries are exhausted.	Re-locate the Room Unit . Installing the System MMI Pack. Replace batteries in the Room Unit.

4

◆ 4.16.8.5. Diagnostic mode

The Room Unit has a user accessible mode that provides information useful to a remote service person and a means of checking whether the heating system is working. To access this press the  button then press and hold the  button for 5 seconds. The Room Unit will enter the user settings mode. Next press and hold the  and  buttons together. The following information can be viewed on the display by pressing the  or  buttons : model ID, date code (WW/YY) & checksum.

◆ 4.16.8.6. FAQ's**How do I change the batteries on the thermostat when they run out?**

The Hitachi room unit constantly monitors the battery power level, which typically lasts for about 2 years before needing replaced. When the power is running low a flashing  symbol will be displayed on the screen. To change the batteries follow the steps in the above section ('STEP 1: Installing the Batteries' on page 3), replacing the used batteries with new ones in Step c. Note: While changing the batteries your program settings will be stored but you may need to adjust the time settings to be correct.

I want to use the table stand instead of wall mounted bracket. Where can I position the room unit?

It is important to keep the room unit in a location where reliable RF communication was proven. Advise your installer where would you like to position the room unit and he will check if the RF communication is reliable in the selected location(s).

Important: As this is a wireless device certain objects could interfere with the RF signal - Leave at least 30cm distance from any metal objects (including wall boxes) and at least 1 metre from any other electrical equipment eg. radio, TV, PC, etc.


4.17. SENSOR PACK

4.17.1. Water Temperature Sensor

The best location for measuring the temperature and, therefore, inserting the KTF 20, is the immersion well for boiler temperature displays, boiler thermostat, and safe temperature guard. There is usually space for the KTF 20 sensor in this well (sensor cartridge: 6.5 mm Ø, 50 mm long).

In order to have good heat transmission between the sensor cartridge and the immersion well, the contact strip supplied must be inserted along with the cartridge. If there is no space in the well for the KTF 20, another separate well can be used near the aforementioned immersion well.

Either the VF 20T, -NT is to be used or only the immersion well of the VF 20T, -NT together with the KTF 20. Again, in order to have sufficient heat transmission, the sensor cartridge of the KTF 20 must be inserted with the contact strip supplied.

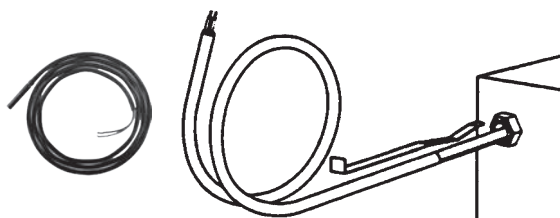


4.17.2. Outside Temperature Sensor

- **Location of device**

The most important rule for locating the Outdoor Temperature Sensor is that it should have the same temperature, wind, and solar conditions as the occupied rooms. In most cases, the Outdoor Temperature Sensor is to be mounted on the coldest side of the building (N–NW side) so as not to be affected by direct sunshine. This is to ensure that it will be warm enough in each room of the house. Only when the windows of all the rooms to be regulated face in the same direction can the sensor element be mounted onto the outside of this same wall. This can also be the south side of the house. The Outdoor Temperature Sensor's protective housing prevents the sun's rays from affecting the sensor. If the sensor has been mounted on the south side of a house with large windows facing in this direction, it is recommended that you remove the sun guard. Do not mount the Outdoor Temperature Sensor in a protected area, such as a wall niche or under the balcony. It should be put on an open façade so that it can detect all weather conditions. Avoid mounting the sensor above doors and windows since warm air movements may otherwise influence the measurement results. The Outdoor Temperature Sensor should be mounted about 2/3 the way up the wall on buildings of no more than 3 stories; on taller buildings, between the second and third stories.

- **Mounting**

Press in the clasp (**R**) and pull off the top (**H**). Pull the clip (**B**) out of the housing (**G**). Screw on the clip (**B**) and put on the housing. To wire, unscrew the lid. Slide the top (**H**) over the housing until the clasp is firmly attached.

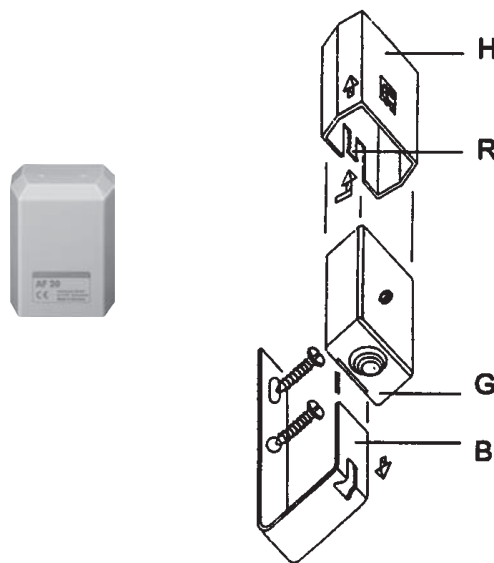

5. UNITS CONTROL SYSTEM

CONTENTS

5.1. Device control system.....	137
5.2. Yutaki unit PCB.....	138
5.3. Safety and control device setting.....	139

5.1. DEVICE CONTROL SYSTEM

Control subject	Purpose	
	Heating operation	Defrost operation
Control frequency of inverter compressor	The frequency control is determined with the next parameters: - Temperature difference between water outlet temp. and target water temperature.	Fixed frequency
Opening degree expansion valve for main circuit	- Control range of expansion valve opening degree is determined to optimize TsSH.	Fully open
Opening degree expansion valve for liquid injection	- Specified opening degree controlled by temp. on the top of compressor (Td.).	-
Fan	- Fan Step is controlled according to PS (Suction pressure)	Fan stop.
4-Way valve (RVR)	ON	OFF
Solenoid valve (SVG) (Hot gas bypass)	- Turn ON at starting before 4-way valve ON.	Turn ON for 1 minute at defrosting
Solenoid valve (SVI) (Liquid injection)	- Turn ON if Td \geq 90°C continue 3 seconds	OFF

Temp.:Temperature

Td: discharge temperature


TsSH: Suction gas super heat

Ps: suction pressure

5.2. YUTAKI UNIT PCB

• PCB drawing

The PCB in the Yutaki unit operates with nine DIP switches, six LEDs and two rotary switches. The location is as follows:

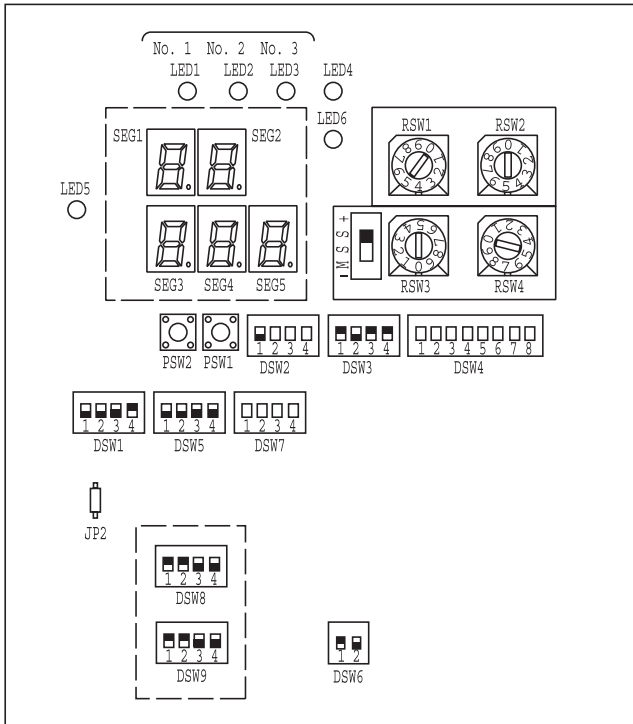



LED indication	Function
LED 1	Power supply indication
LED 2	
LED 3	
LED 4	Operation status indication
LED 5	Alarm indication
LED 6	Setting mode indication

Switch indication	
DSW1	Optional functions
DSW2	Unit control configuration / Unit HP
DSW3	Unit control configuration
DSW4	Unit model configuration
DSW5	H-Link available / H-Link address
DSW6	End resistance / Fuse recovery
DSW7	Unit control configuration
DSW8	Setting Pd Pressure Sensor Type
DSW9	Setting Ps Pressure Sensor Type

Rotatory switch	
RSW1 & RSW2	Heating setting temperature
RSW3 & RSW4	Not used
SSW	UP="+ Temp." / DOWN="-Temp."

Jumper setting	
JP2	Cut ⇒ Re-Start after power failure

	NOTE
	<ul style="list-style-type: none"> - The mark "■" indicates position of dips switches. Figures show setting before shipment or after selection. - Not mark "■" indicates pin position is not affecting.

	CAUTION
	<ul style="list-style-type: none"> - Before setting dips switches, firstly turn off power source and set the position of the dips switches. If the switches are set without turning off the power source, the contents of the setting are invalid.

5.3. SAFETY AND CONTROL DEVICE SETTING

MODEL		RHUE3AVHN	RHUE4AVHN	RHUE5A(V)HN
For compressor				
Pressure switches		Automatic Reset, Non-Adjustable (one per unit)		
HIGH Cut-Out	MPa	4.15 ^{-0.05} _{-0.15}	4.15 ^{-0.05} _{-0.15}	4.15 ^{-0.05} _{-0.15}
Cut-In	MPa	3.20±0.15	3.20±0.15	3.20±0.15
Fuse				
1~ 230V 50Hz	A	40	40	50
3N~ 400V 50Hz	A	-	-	2x20
For condenser fan motor				
Internal thermostat		Automatic Reset, Non-Adjustable (one per each fan)		
Cut-Out	°C	-	-	-
For control circuit				
Fuse (on PCBw1)	A	5	5	5
Fuse (on PCBw3)	A	5	5	5
Fuse (on PCBw4)	A	5	5	5
For water pump circuit				
Fuse	A	3.15	3.15	3.15


6. AVAILABLE OPTIONAL FUNCTIONS

CONTENTS

6.1. Freeze protection.....	141
6.2. Restart after power failure	141

6.1. FREEZE PROTECTION

Using setting point $PR=1$. The unit is controlling the pump in order to avoid water circuit freeze as the following graphic indicates:

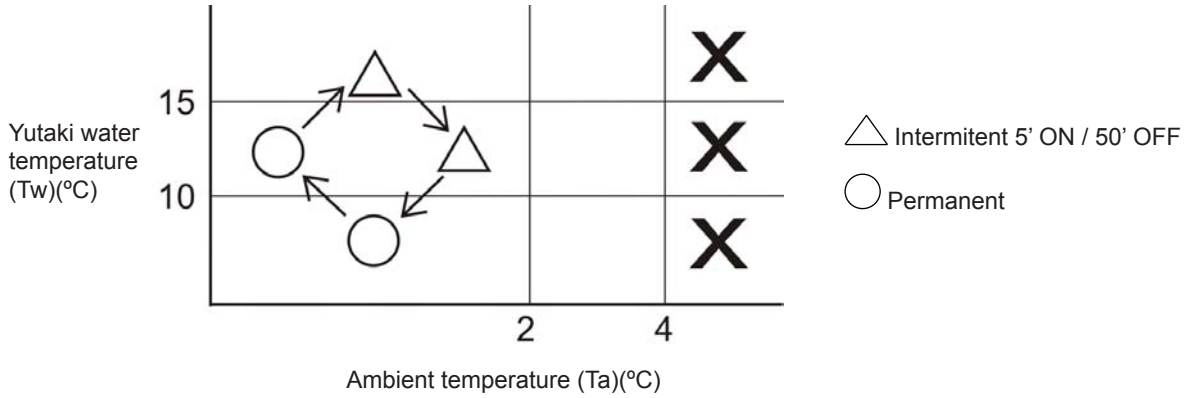


When ambient temperature is going down, the pump will be activated and will be off if $Ta > 4^{\circ}\text{C}$.

When T_w is going down, the pump will be at intermittent status. If $T_w \leq 10^{\circ}\text{C}$, pump will be at permanent status. It will come back to intermittent status when $T_w > 15^{\circ}\text{C}$.

6.2. RESTART AFTER POWER FAILURE

Jumper JP2 forces the unit to maintain the status before the failure.

If the unit was running, once the power is recovered the unit will run again. On the other hand, if the unit was stopped, it will remain stopped.

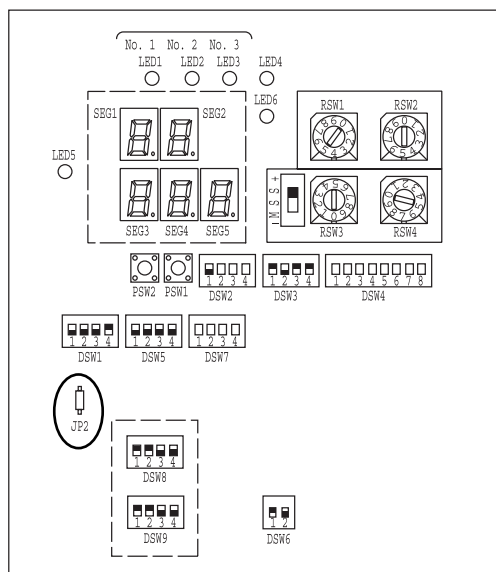

7. TEST RUN


CONTENTS


7.1. Checking procedure before the test run	143
7.1.1. Check before start up.....	144
7.2. Test run procedure for Yutaki.....	145

7.1. CHECKING PROCEDURE BEFORE THE TEST RUN

When you have finished the installation, perform the test run according to the following procedure. After performing the test run, hand over the system to the customer.


- Perform the test run of the Yutaki one by one.
- Make sure that the electrical wiring and the refrigerant piping are correctly connected.
- You should perform the test run according to the "7.2 Test Run Procedure for Yutaki" on the next pages.

	WARNING
<ul style="list-style-type: none"> - Do not operate the system until all the check points have been cleared. - Measure the resistance between the ground and the terminal of the electrical components. Make sure that the electrical resistance is more than 1 MΩ. Otherwise, do not operate the system until you find the electrical leakage and you repair it. Do not impress the voltage on the terminals for transmission 1 and 2. - Make sure that the terminals for the power supply wiring ("L1" to "L1", "L2" to "L2", "L3" to "L3" and "N" to "N" of each terminal board for AC230V or AC400V match correctly. Otherwise, you may damage some components. - Make sure that the stop valves of the Yutaki are fully open. Then, start the system. - Make sure that the switch on the main power source has been ON for more than twelve hours in order to warm the compressor oil by the oil heater. The operation is not available within 4 hours after turning ON the power supply. - Pay attention to the following items while the system is running: <ul style="list-style-type: none"> - Do not touch any of the parts at the discharge gas side with your hands because the compressor chamber and the pipes at the discharge gas side are hot at a temperature that is higher than 90°C. - Do not touch any electrical components for more than three minutes after turning OFF the main switch. Make sure that the stop valve of the gas line and the stop valve of the liquid line are fully open. 	

	DANGER
<ul style="list-style-type: none"> - Do not push the button of the magnetic switch(es). If you do so, you might cause a serious accident. 	

• Checking procedure

1. Make sure that the stop valve of the gas line and the stop valve of the liquid line are fully open.
2. Make sure that there is no refrigerant leakage. (The flare nuts sometimes loosen because of the vibration during the transportation).
3. Make sure that the switch on the main power source has been ON for more than twelve hours in order to warm the compressor oil by means of the oil heater.
4. Check whether or not the electrical wiring of the Yutaki is connected as shown in chapter "3" Electrical Wiring.
5. Make sure that each wire terminal is correctly connected at the power source.

	NOTE
<ul style="list-style-type: none"> - Make sure that the field-supplied electrical components (main switch fuse, fuse-free breaker, earth leakage breaker, wires and terminals) have been properly selected according to the electrical data in the technical catalog of the unit. Also, make sure that the field-supplied electrical components comply with both national and local codes. - Use the shielded cables for the field wiring in order to avoid the electrical noise. (The length of the shielded cable should be less than 1000m. The size of shielded cable should comply with the local codes.) 	

7.1.1. Check before start up

- Check that the hydraulic connections are tight.
- Check that water pressure is 1 bar minimum.
- Check that the water flow is constant and that the purge of the circuit is correct.
- Check that the protections and electrical connections are in line with the electrical patterns and this leaflet.
- Turning on the heat pump YUTAKI
- Turning on the electric heater EH 6 1.
- The power relays for heater are controlled by the Yutaki controller.
- Set the temperature for water (on YUTAKI) to a value of 55°C to ensure the engagement of the resistance, whatever the temperature outside.

7.2. TEST RUN PROCEDURE FOR YUTAKI

DIP switch can be set while the power source is ON.

- **Setting of DIP switches (before shipment)**

DSW	RHUE3AVHN	RHUE4AVHN	RHUE5AVHN	RHUE5AHN
DSW1				
DSW2				
DSW3				
DSW4				
DSW5				
DSW6				
DSW7				
DSW8				
DSW9				

	WARNING
<ul style="list-style-type: none"> - Do not touch any other electrical components while you are setting the switches on the PCB. - Do not attach or detach the service access panel when the power source for the Yutaki is ON. 	

- **Parameters check using 7-Segment**

Press PSW2 more than 3 seconds. Now you can consult the Yutaki parameters by pressing PSW2 (up) or PSW1 (down).

Code (Upper side)	Data (Lower side)	Content	Code (Upper side)	Data (Lower side)	Content
. .	OFF	Operation status	εP	OFF	Liquid refrigerant temperature
Pd	OFF	Pd	εH	OFF	Evaporating temperature
PS	OFF	Ps	εS	OFF	Ts
εc	OFF	Chilled water setting temperature	εo	OFF	Exp. V pulse
εc.	OFF	Chilled water setting temperature 2	εF	OFF	Compressor Hz
εh	OFF	Hot water setting temperature	F5	OFF	Fan stop
εh.	OFF	Hot water setting temperature 2	□	dEF	Manual defrost ON (if PSW1 & PSW2 pushed together for 3 sec.)
in	OFF	Water inlet	no.	OFF	ROM No.
oε	OFF	Water outlet	εd	OFF	Model identification
εR	OFF	Ambient temperature	oP	OFF	Optional Function selection status
εd	OFF	Td	-	-	-

8. TROUBLESHOOTING

CONTENTS

8.1. Unit and System controller - Power Supply failure	147
8.1.1. Abnormal operation of the devices	149
8.2. Initial troubleshooting	155
8.2.1. Troubleshooting by alarm code	157
8.2.2. Incidents of operation	196
8.3. Failure diagnosis method	197
8.4. Checking procedure for main parts	199
8.4.1. RHUE(3~5)AVHN. Procedure for checking the DIP-IPM.	199
8.4.2. RHUE5AHN. Procedure for checking the ISPM.....	201
8.4.3. Checking capacitors CB1 & CB2.	203
8.4.4. Fault diagnosis of DC fan motor.....	204

8.1. UNIT AND SYSTEM CONTROLLER - POWER SUPPLY FAILURE

- The LED and the 7-segment display are not indicated.
- Not operated.

If the fuses are blown out or a circuit breaker is activated, investigate the cause of the overcurrent and take the necessary action.

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
Power failure or power is not ON			Measure the voltage using a voltmeter	Supply the power
Blown out fuse or activation of the breaker at the power source	Accidental grounding for live cables		Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
	Failure of compressor motor		Measure the interphase resistance, insulation resistance	Replace compressor and fuse
	Failure of fan motor			Replace fan motor and fuse
Blown out fuse at the control circuit	Live cables short circuit		Check for any un-insulated part of the wires	Remove the cause of the short circuit and replace the fuse
	Short circuit of the control circuit to earth		Measure the insulation resistance	Remove the cause of the short circuit and replace the fuse
	Failure of the magnetothermic switch for the compressor	Insufficient contact	Check for magnetothermic switch to activate correctly	Replace magnetothermic switch and fuse
		Coil failure	Measure coil resistance	
	Failure of the magnetothermic switch for the pump	Insufficient contact	Check for magnetothermic switch to activate correctly	Replace magnetothermic switch and fuse
		Coil failure	Measure coil resistance	
	Failure of auxiliary relay	Insufficient contact	Check for magnetothermic switch to activate correctly	Replace auxiliary relay and fuse
		Coil failure	Measure coil resistance	
	Failure of solenoid valve coil	Coil failure	Measure coil resistance	Replace coil and fuse
	Short circuit in PCB		Check for the existance of any conductive contaminants	Remove the particles and replace fuse
	Oil heater failure		Meassure resistance	Replace heater and fuse
Failure of freeze protection heater for water piping		Meassure resistance	Replace heater and fuse	
Failure of the transformer			Check the transformer voltage output	Replace the transformer

Observed failure	Cause	Check item	Action (Turn OFF the main switch)
System controller cable disconnected		Connect the cable	Replace the cable or repair the cable
One (or several) phase failure, or inverted phase order ("U5" alarm). Only in three phase unit.		Check the connection of R,S and T phase.	Reorder the phases
Failure of remote/local switch or remote/local switch set at "local"		Check remote/local switch	Turn the switch to "remote" or replace switch
Deficient contact at terminal controller connectors	Insufficient connection or incorrect connection of the Yutaki unit PCB	Check the connectors and terminals	Remove rust, dust or any contaminants, check the correct tightening of the terminals
	Insufficient connection or incorrect connection of the terminal in remote controller		
Failure of the system controller		See point 4.2.5. "Troubleshooting of system controller"	
Undefined PCB failure	Unconnected wires to PCB	Check the connectors	Correctly connect the wires
	Failure of PCB	Check PCB through its self-diagnostic mode	Replace PCB if it failed
Incorrect wiring connection		Take action according to the procedure that is displayed in "TEST RUN"	

8.1.1. Abnormal operation of the devices

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
Cooling mode (1 minute power on)	Excessively high discharge pressure (high pressure switch activated)	Insufficient air flow to the heat exchanger	clogging of the air side heat exchanger?	Remove the clogging
			Obstacles at the inlet or the outlet of the airside heat exchanger	Remove the obstacles
			Is the service area for the unit sufficient?	Make sure the service area
			correct fan speed?	Replace the fan motor
		Excessive inlet air temperature at the airside exchanger	Short circuited air to the unit?	Remove the cause of the shor-circuit air
			Any heating source near to the unit?	Remove the heat source
		Excessively charged refrigerant	Expansion valve opening & sub cool	Correctly charge the refrigerant
		Non -condensed gas during the cycle	Check each temperature and each pressure	Charge the refrigerant after the vacuum pumping
		Discharge pipe clogged	Check the clogging	Remove the clogging
		Clogging of the strainer	Check for clogging (Symptom: You can appreciate a temperature gradient between strainer inlet and outlet)	Clean or replace the strainer
		Clogging of the heat exchanger	Check for clogging	Remove the clogging
		Failure or malfunction of the expansion valve	Check the connection cord and the connector	Replace the connector
	Is there an operation sound from the coil?		Replace the coil	
	Is the thermistor for the compressor normal?		Replace the themistor or pressure sensor	
	Is the thermistor correctly installed on the suction pipe?		Install correctly the thermistor	
	Excessively high water inlet temperature	Check water temperature	Refer to the customer	
	Failure fan motor (not running)		Measure the motor's terminals resistance	Replace fan motor
	Excessively high suction pressure	Malfunction or internal leakage of the 4-way valve	Check the temperature difference between the inlet and outlet of the 4-way valve	Replace the 4-way valve

Abnormal operation of the devices (Cont.)

Observed failure	Cause		Check item	Action (Turn OFF the main switch)	
Cooling mode (1 minute power on)	Excessively high discharge gas temperature	Too much super-heat	Clogging of the expansion valve	Replace the expansion valve	
			Clogging of the strainer	Clean or repair the strainer	
			Malfunction or internal leakage of the 4-way valve		
	Excessively high suction gas temperature		Gas leakage or insufficient refrigerant	Replace the 4-way valve	
			Td. thermistor failure	Measure the thermistor resistance	Replace thermistor
			Failure solenoid valve for liquid injection	Check the solenoid valve activation	Replace the solenoid valve
			Clogging of the liquid injection capillary tube	Check for clogging	Replace capillary
Blown out fuse at the pump suction	Pump block		Check water freezing or clogging	Removes the clogging	
	Over current of the pump		Check pump current	Replace the pump	
Freeze protection control activated	Insufficient water flow		Check inlet and outlet water temperature difference	Increase the water flow	
	Pump reverse rotation		Check pump running direction	Connect correctly the pump wiring	
	Air mixed in the water		Check air purger	Empty the air contained	
	Water inlet and outlet temperature themistor failure		Measure the thermistor resistance	Replace the thermistor	
	Pump reverse rotation		Check the rotation direction	Change rotation direction	
	Water outlet temperature excessively low		Check that water outlet temperature is not out of working range	Check correct installation	
	Clogging of the water strainer		Check the water strainer	Remove the clogging	
	Clogging of the water side heat exchanger		Check the water side heat exchanger	Chemical cleannig	
	Malfunction of the low pressure sensor		Sensor wiring - Check the sensor characteristics	Fix wire. Replace low pressure sensor	
	Gas leakage or low quantity of refrigerant		Check leakage and super-heat	Charge correctly the refrigerant quantity	

Abnormal operation of the devices (Cont.)

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
Unit stopped in heating operation	High cut caused by Pd (high pressure) surpassing	Insufficient water flow	Check the water temperature difference between inlet and outlet	Increase the water flow
		Too much refrigerant	Check clogging of discharge side pipe	Remove the clogging
		Clogging of the expansion valve	Check clogging of discharge side pipe	Remove the clogging
		Clogging strainer (not water)	Check the temperature difference before/after strainer	Replace or cleaning strainer
		Clogging of the 4-way valve	Check the clogging	Remove the clogging or replace the 4-way valve
		Water scale attaching inside the water side heat exchanger	Check the water side exchanger	Chemical cleaning
		Excessively high water outlet temperature	Check water temperature	Check the installation
	Excessively high discharge gas temperature (too much super-heat)	Malfunction of the 4-way valve and also internal leakage	Check gas leakage or shortage of refrigerant	Replace the 4-way valve
			Malfunction of check valve	Replace check valve
			Clogging of the expansion valve	Remove the clogging
			Clogging of the refrigerant side strainer	Replace or clean the strainer
		Failure discharge gas temperature thermistor	Measure the resistance of thermistor	Replace the thermistor
		Failure liquid bypass solenoid valve	Check solenoid valve	Replace the solenoid valve
		Clogging of the solenoid liquid solenoid bypass capillary	Clogging of capillary	Replace capillary
	Over current compressor	Excessive current consumption	Voltage supply too high/low	Check the limits in "working range". (I-III phase)
			Check the interface impedance or power supply	Measure each interface voltage & contact the electrical company
			Excessively high pressure in the high pressure sensor	Check the cause
		Single or double phase operation (only 3 phase model)	Check the main fuse	Replace the fuse
			Check the loose of the screw power supply terminal	Tighten the screw
			Check contact point or magnetic contact for compressor	Replace magnetic contact

Abnormal operation of the devices (Cont.)

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
	Over current compressor	Failure compressor bearing	Check bearing seal state	Replace the compressor
		Failure in the compressor motor insulation	Check insulation resistance	Replace the compressor (option "replace the insulation")
		Failure current sensor for compressor	Check the connector	Repair the wiring connection or replace the current sensor
	Blown out fuse at the pump circuit	Blocked pump	Check if there exist any solid particle, or iced water	Chemical cleaning of the foreign particle
		Failure of the magnetic contact of the pump	Check the magnetic contact	replace the magnetic contact
A lot of ice is attached on the airside (heating mode heat exchanger)	Automatic defrost is deactivated	Failure of the thermistor	Measure the resistance of the thermistor	Replace the thermistor
		Failure of the 4-way valve	Check the activation 4-way valve	Replace the 4-way valve
	Short circuited		Check obstacles around the unit	Remove the obstacles
	Failure of the low pressure sensor		Check the display pressure and actual pressure	Remove the low pressure sensor
	Unit is in ice condition		-----	Perform manual defrosting
Unit is stopped by highcut in defrost operation	Failure of high pressure sensor		Check the pressure & actual value of the high pressure sensor	Replace high pressure sensor

Abnormal operation of the devices (Cont.)

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
Insufficient heating process	Heating load is higher than heating capacity		Check the heating load	Install an adequate size unit
	Excessively low suction pressure	Gas leakage	Check gas leakage & super-heat	Charge correctly the quantity of refrigerant
	Clogging of the expansion valve		Check the clogging of expansion valve	Remove clogging
	Clogging of the strainer		Check temperature difference before/after strainer	Clean or replace the strainer
	Clogging of side low pressure pipe		Check the temperature difference of each pipe	Remove the clogging
	Malfunction of the check valve		Check the difference temperature before/after check valve	Replace the check valve
	Shortage air flow in the air side heat exchanger		Excessively dust in airside heat exchanger	Remove it
			Clogging of the inlet/outlet at the air side heat exchanger is clock	
			Shortage the service space for Yutake unit	Secure service space
			Device rotation fan motor	Correct wiring of the fan motor
	Air temperature through heat exchanger air flow		Check the air short circuit	Repair short circuit
	Defrosting it is not enough		Check the evaporating thermistor	Replace the thermistor
			Check the 4-way valve	Replay 4-way valve
	Excessively high discharge pressure	Shortage of waterflow	Check the difference of temperature between inlet/outlet of the unit	Increase the water flow
		Pump reverse rotation	Check the rotation direction	Correct the direction
Air mixing in the water		Check air purger	Empty the air contained	
Excessively high hot water temperature		Check the water thermistor of the unit	Replace the water thermistor or PCB	
Refrigerant excessively discharged		Check refrigerant cycle temperature	Charge the correct quantity	


Abnormal operation of the devices (Cont.)

Observed failure	Cause		Check item	Action (Turn OFF the main switch)
Insufficient heating process	Excessively high discharge pressure	Non-condensable gas in the refrigerant cycle	Turn off the unit & check the relation between temperature and pressure	Evacuate and charge refrigerant again
		Clogging of the high pressure pipe	Check the clogging	Remove the clogging
		Clogging of the expansion valve	Check the clogging	Remove the clogging
		Clogging of the strainer	Check the difference temperature before/after strainer	Replace the strainer
		Water scale is attached in the water side heat exchanger	Check the heat exchanger	Chemical cleaning
		Malfunction or internal leakage of the 4-way valve	Check the difference temp. between inlet & outlet of the 4-way valve	Replace the 4-way valve
		Wiring failure of the 4-way valve	Check the electrical continuity at the terminals	Repair wiring or replace 4-way valve
		Failure compressor	Check pressure cycle temperature & running current	Replace the compressor
Unit is running but does not make any sound	Unit propeller fan is hitting the shroud		Visually inspect it	Adjust the position of the propeller fan
	Abnormal sound from the compressor	Faulty installation	Check that each part is tightly fixed	Tightly fix each part
		Liquid ref. compression	Adjust the suction gas temperature and pressure	Ensure super-heat
		Wear or breakage of the internal compressor parts	Abnormal sound from the inside of the compressor	Replace the compressor
		No heat by the oil heater	Check the resistance of the oil heater and its fuse	Replace the oil heater and the fuse
	Humming sound from the magnetic conductor		Check the surface of the contacts	Replace the magnetothermic switch
	Abnormal vibration of the cabinets		Check each fixing screw	Tightly fix each screw

8.2. INITIAL TROUBLESHOOTING

- Checking using the 7-segment display.

7-seg. display info.

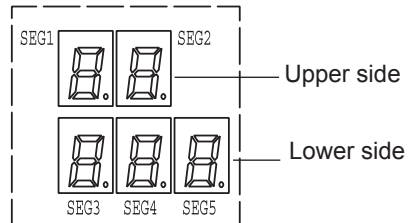

(See the following table for details)


General Indication	Content
<i>BB</i>	Proceeding Initialization
<i>BB</i>	Power ON (During unit stoppage)
<i>PU</i>	Pump Operation (During unit stoppage)
<i>PU</i>	Waiting of pump feedback (During unit operation)
<i>oF</i>	Stoppage by Thermo-OFF
<i>HE</i>	Heating operation (Normal operation)
<i>HE↔P0</i>	Heating operation (Activation of forced compressor frequency control due to low pressure difference:forced up)
<i>HE↔P1</i>	Heating operation (Activation of forced compressor frequency control due to high pressure difference:forced down)
<i>HE↔P2</i>	Heating operation (Activation of forced compressor frequency control due to excessively high discharge pressure: forced down)
<i>HE↔P3</i>	Heating operation (Activation of forced compressor frequency control due to excessively high current :forced down)
<i>HE↔P4</i>	Heating operation (Activation of forced compressor frequency control due to excessively high inverter fin temperature: forced down)
<i>P↔06</i>	Retry operation (by alarm 02-91, t1)
<i>P↔11</i>	Retry operation (by alarm 02-e1)
<i>P↔12</i>	Retry operation (by alarm 02-h1)
<i>P↔17</i>	Retry operation (by alarm 51, 52, 53, 54)
<i>P↔18</i>	Retry operation (by alarm 04, 06)
<i>EQ</i> (Flickering)	Initializing electronic expansion valve
<i>Fo</i>	Fan manual operation


Alarm code	Content
<i>02↔H 1</i>	Activation of high pressure swith
<i>02↔h 1</i>	Activation of protection control for excessively high pressure
<i>02↔L 1</i>	Activation of low pressure control
<i>02↔E 1</i>	Excessively low pressure difference
<i>02↔6 1</i>	Excessively high discharge gas temperature
<i>02↔9 1</i>	Excessively low temperature of heating exchanger refrigerant inlet
<i>02↔t 1</i>	Excessively low suction gas temperature
<i>04</i>	Abnormal transmission between Inverter PCB and Main PCB
<i>05</i>	Abnormality of Power Supply Phase
<i>06</i>	Excessively low voltage or excessively high voltage for the inverter
<i>11</i>	Failure of water inlet temperature thermistor
<i>12</i>	Failure of water outlet temperature thermistor
<i>13</i>	Activation of freeze protection control (water inlet)
<i>02↔13</i>	Activation of freeze protection control (water outlet)
<i>14</i>	Excessively high water temperature (compressor running)
<i>21</i>	Failure of refrigerant evaporating temperature thermistor (Open/Short)
<i>22</i>	Failure of ambient temperature thermistor (Open/Short)
<i>23</i>	Failure of discharge gas temperature thermistor (Open/Short)
<i>24</i>	Failure of refrigerant liquid temperature thermistor (Open/Short)
<i>26</i>	Failure of suction gas temperature thermistor (Open/Short)
<i>27</i>	Failure of discharge gas pressure sensor (Open/Short)
<i>28</i>	Failure of suction gas pressure sensor (Open/Short)
<i>30</i>	Incorrect PCB Setting
<i>32</i>	Transmission error between Main PCBs (this alarm code is not available in this model)
<i>40</i>	Incorrect PCB operation
<i>51</i>	Abnormal operation of the current sensor
<i>52</i>	Activation of protection for inverter instantaneous over current
<i>53</i>	Transistor module protection activation
<i>54</i>	Increase in the inverter fin temperature
<i>57</i>	Abnormality of fan motor protection
<i>5P</i>	No feed back signal from water pump
<i>6E</i>	Cooler water failure (this alarm is not available in this unit)
<i>6C</i>	Condenser water failure (this alarm is not available in this unit)
<i>PU</i> (flickering)	Excessively high water temperature (compressor stop)
<i>FA</i>	Failure of fan motor (MF1)
<i>Fb</i>	Failure of fan motor (MF2)

8.2.1. Troubleshooting by alarm code

Alarm code	Description
02↔H 1	Activation of high pressure switch
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> This alarm code is displayed when the high pressure (Pd) is increased to more than 4.15 MPa, and high pressure switch (63H) is activated. 	

PCB monitoring position: PCB1, PCN5

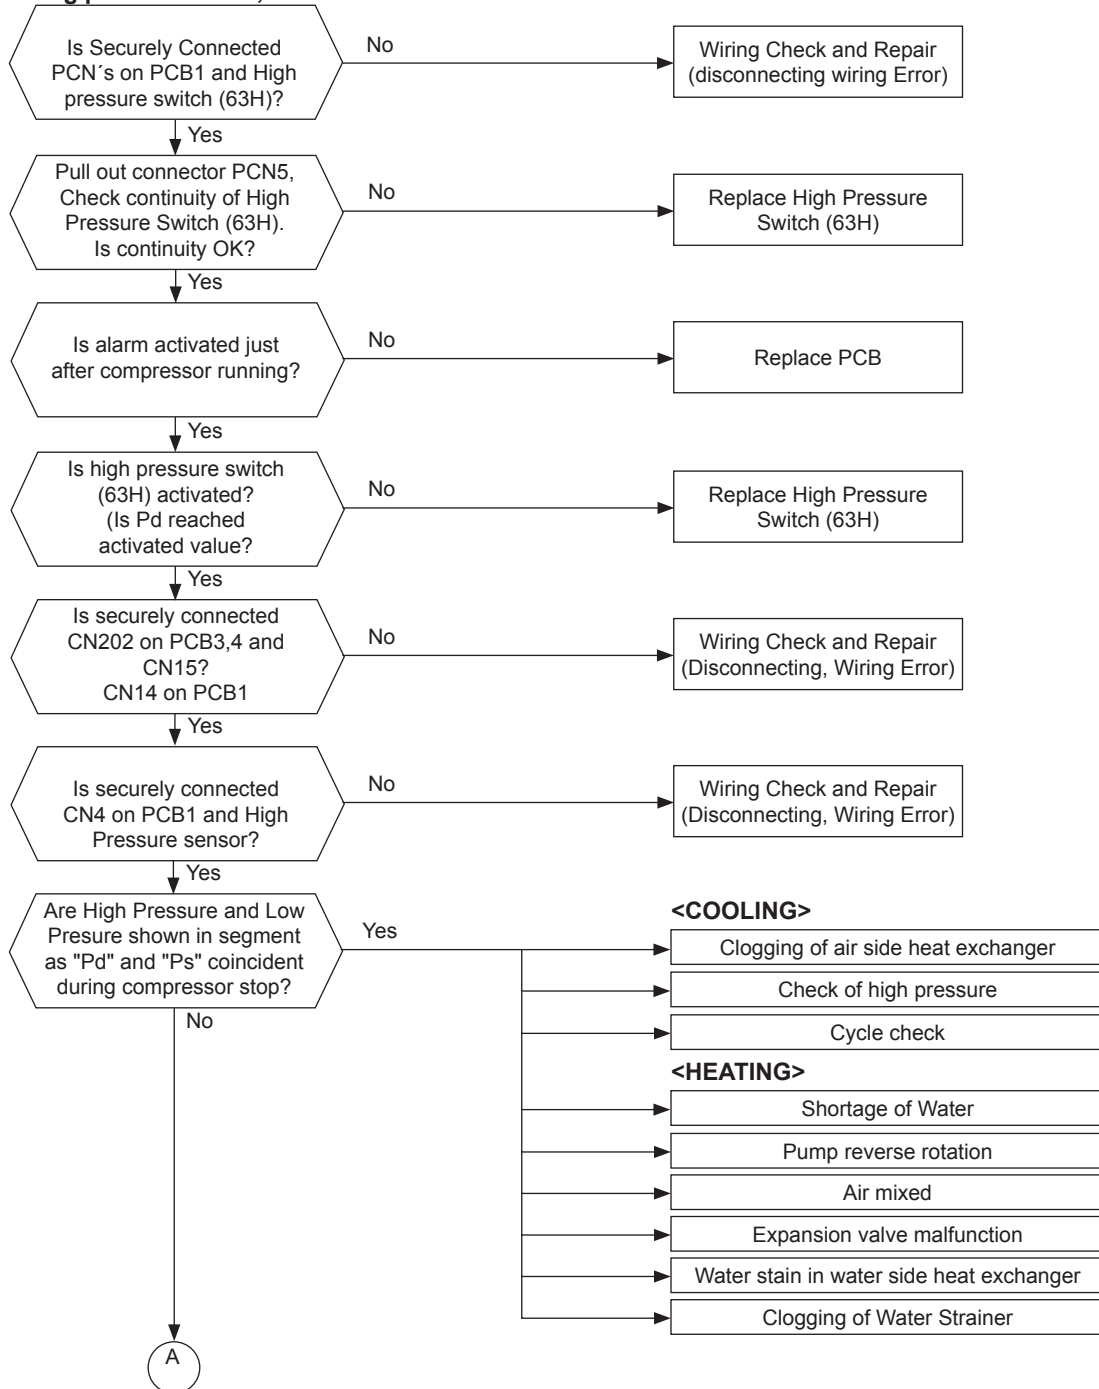

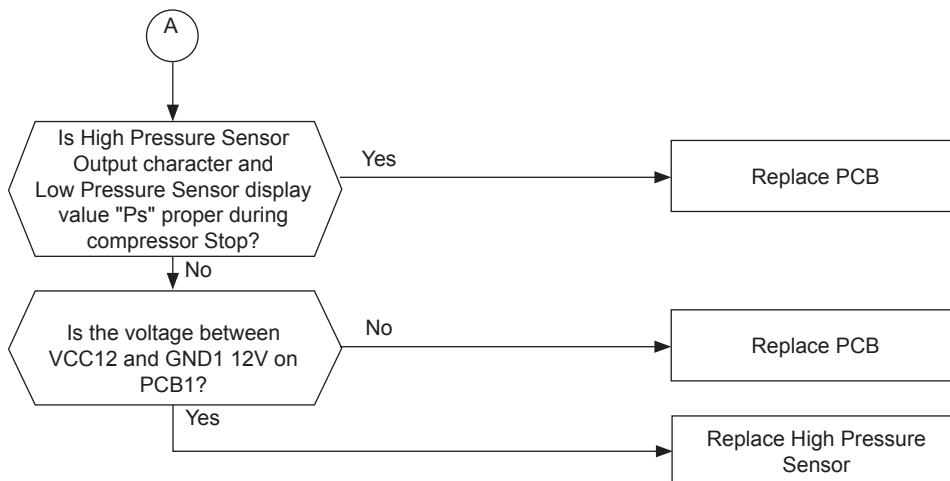


NOTE

- In case that the low pressure is higher than 2.2 Mpa, segment shows 2.2 Mpa.
- In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge.

Alarm code	Description
02↔h 1	Activation of protection control for excessively high pressure
<ul style="list-style-type: none"> • The alarm code is displayed on the PCB's display. • During normal operation, (in cooling o heating operation mode) the Electronic Control stops and restarts automatically after 3 minutes. • The Stop alarm appears after 3 retries during 30 minutes. <ul style="list-style-type: none"> –This alarm code is displayed when the high pressure (Pd) is increased to more than 3.9 MPa, during 10 seconds in compressor running frequency more than 40 Hz or, –This alarm code is displayed when the high pressure (Pd) is increased to more than 3.5 MPa, during 10 seconds in compressor running frequency lees than 40 Hz. 	


PCB monitoring position: PCB1, CN4

Retry code: P-12

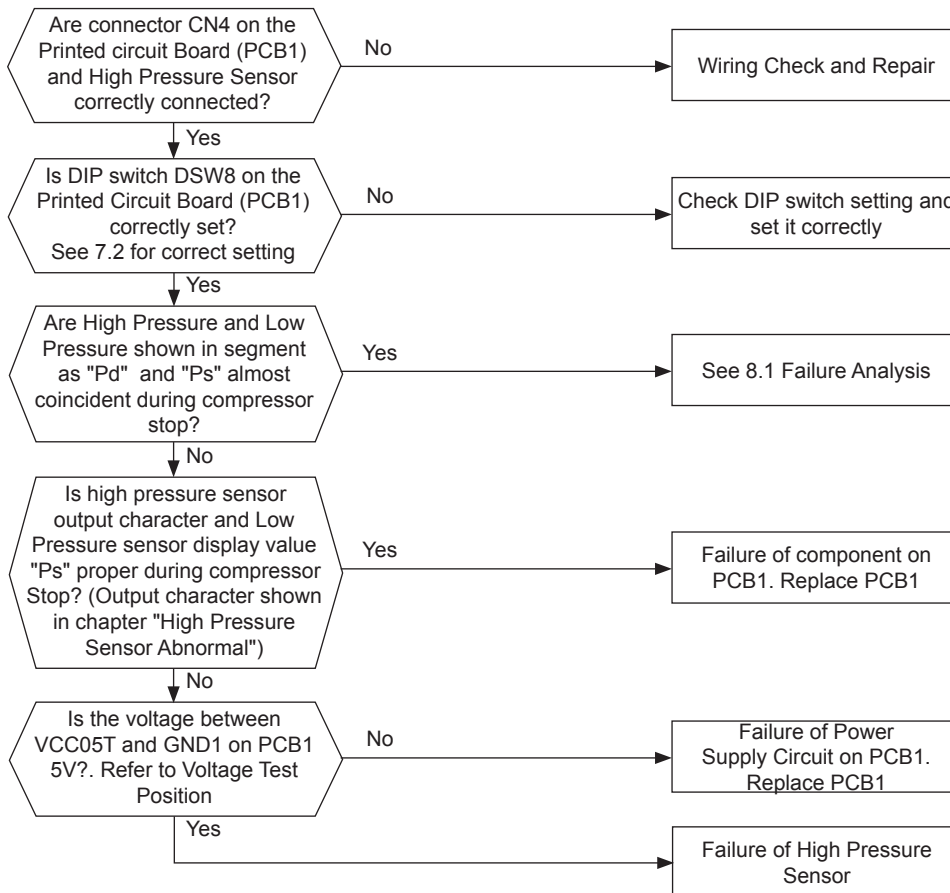


NOTE

- In case that the low pressure is higher than 2.2 Mpa, segment shows 2.2 Mpa.
- In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge.

Alarm code	Description
	Activation of low pressure control
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. It appears The electronic control displays the alarm during the operation in heathing or cooling mode. <ul style="list-style-type: none"> –This alarm code is displayed when the suction pressure (Ps) is less than 0.1 Mpa during 3 seconds. 	

PCB monitoring position: PCB1, CN3

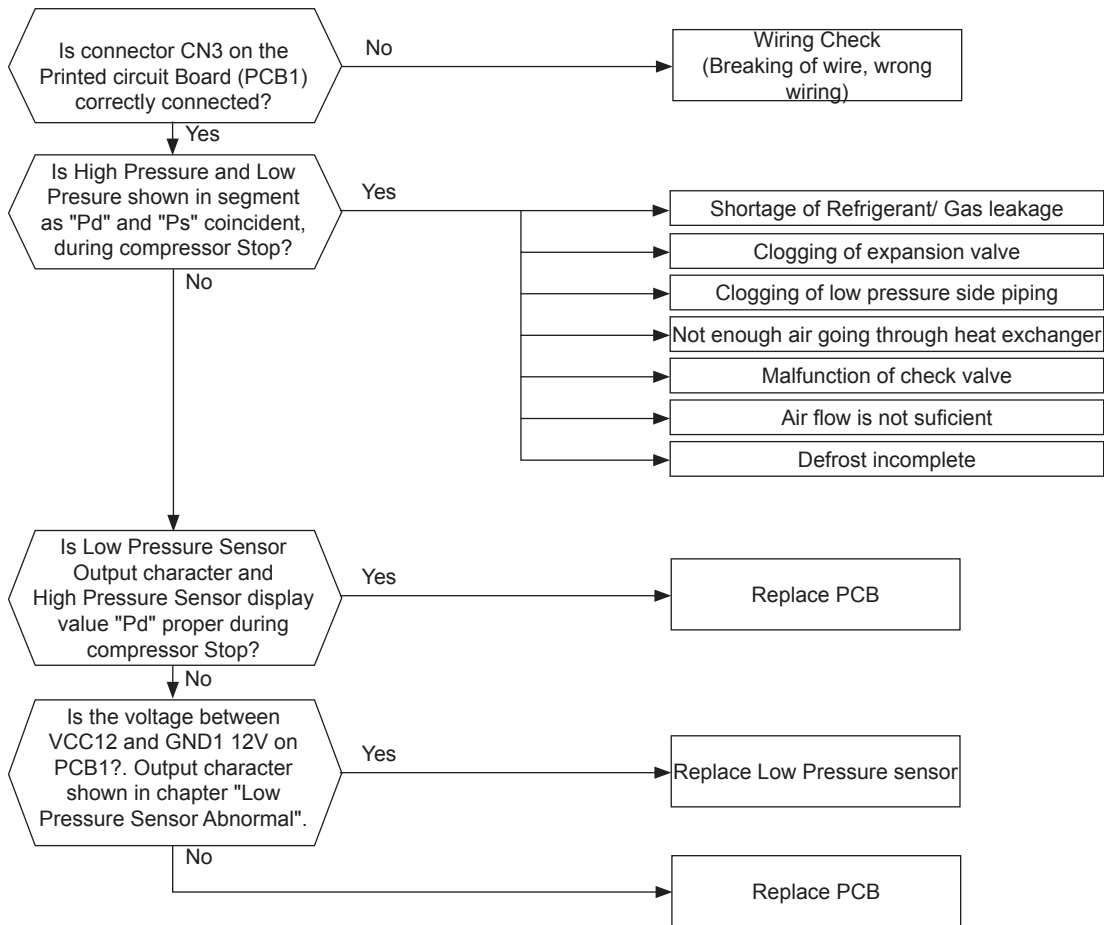

NOTE

- In case that the low pressure is higher than 2.0 Mpa, segment shows 2.0 Mpa.
- In this case, check if the high pressure value "Pd" shown in segment is higher than 1.0 Mpa.

Alarm code	Description
02↔E1	Excessively low pressure difference
<ul style="list-style-type: none"> • The alarm code is displayed on the PCB's display. • The compressor stops and restarts automatically in 3 minutes. • The Stop alarm appears after 3 retries during 30 minutes. <ul style="list-style-type: none"> – This alarm code is displayed when the Pressure Ratio calculated from High Pressure "Pd" and Low Pressure "Ps" is less than 1.8 MPa during 3 minutes. 	

PCB monitoring position: PCB1, CN3 and CN4

Retry code: P-11

Calculation Formula for Pressure Ratio:


$$\text{Pressure Ratio} = \frac{\text{High Pressure "Pd"} + 0.1}{\text{Low Pressure "Ps"} + 0.1}$$

Example:

Pd= 1.6 Mpa

$$\text{Pressure Ratio} = \frac{1.6 + 0.1}{0.7 + 0.1} = 2.13$$


Ps= 0.7 Mpa

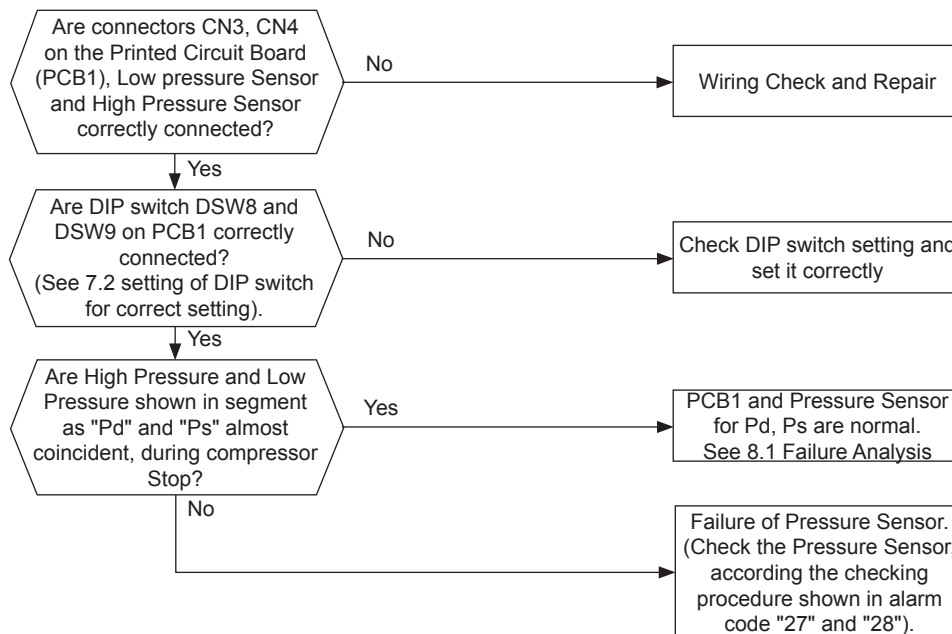

	NOTE
<ul style="list-style-type: none"> - In case that the low pressure is higher than 2.2 Mpa, segment shows 2.2 Mpa. - In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge. 	

Alarm code	Description
02↔61	Excessively high discharge gas temperature
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the discharge gas temperature is increased to 120°C and continues for 10 minutes. –The discharge gas, temperature is increased over 140 °C during more than 5 seconds. 	


PCB monitoring position: PCB2, CN15

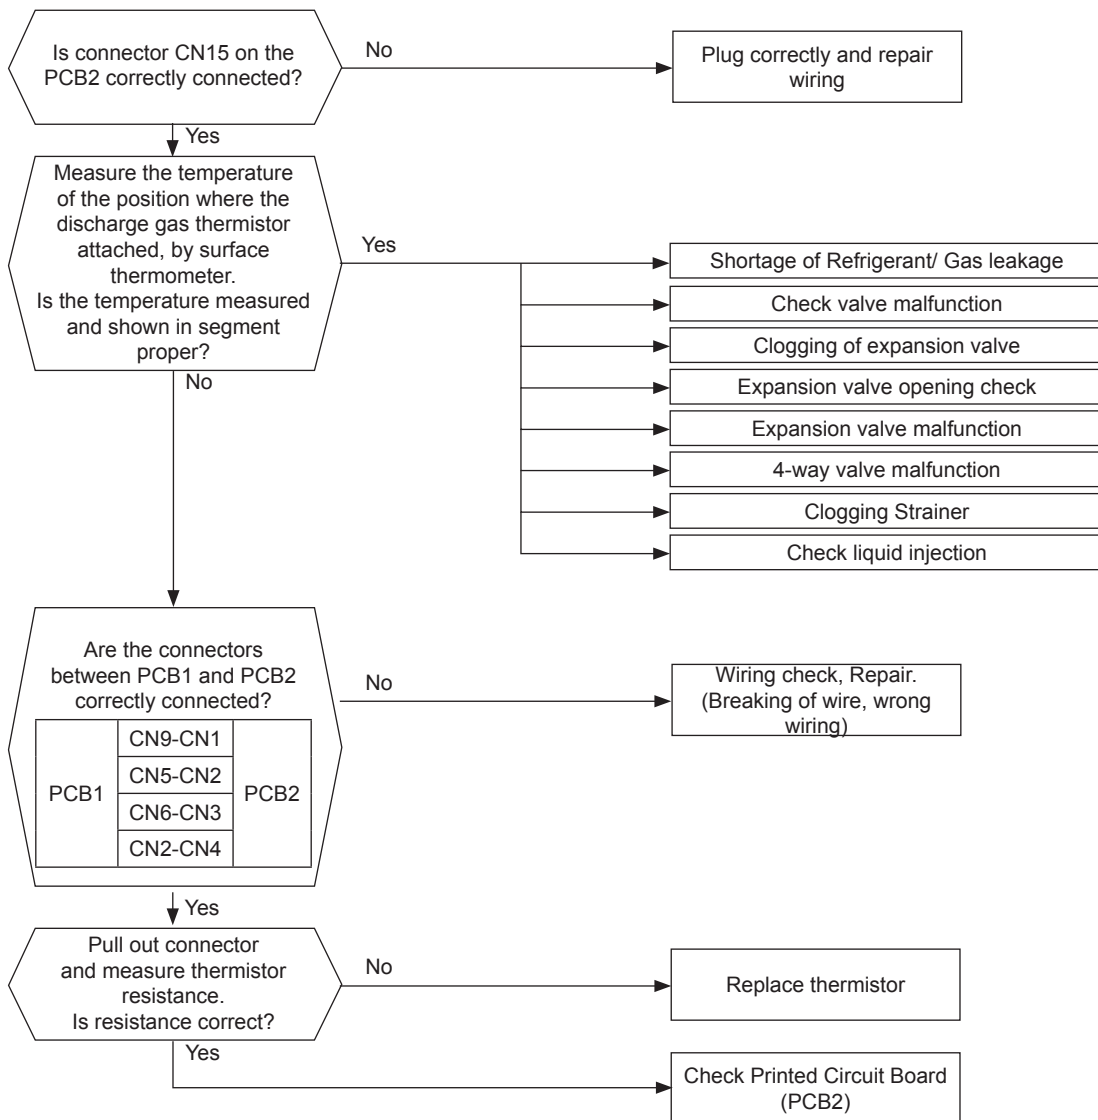

Alarm code	Description
02↔91	Excessively low temperature of heat exchanger refrigerant inlet
<ul style="list-style-type: none"> • The alarm code is displayed on the PCB's display. • The compressor stops and restarts automatically in 3 minutes. • The alarm appears after 3 retries during 30 minutes. <ul style="list-style-type: none"> –This alarm code is displayed when the Refrigerant temperature in water side heat exchanger inlet (Tp) is less than -6°C during 3 seconds. (Only for cooling operation). –The Refrigerant temperature in water side heat exchanger inlet (Tp) is less than -20°C during 10 seconds. (Only for defrosting operation). No retry during defrosting operation. Alarm stop immediately. 	

PCB monitoring position: PCB2, CN14


Retry code: P- 06

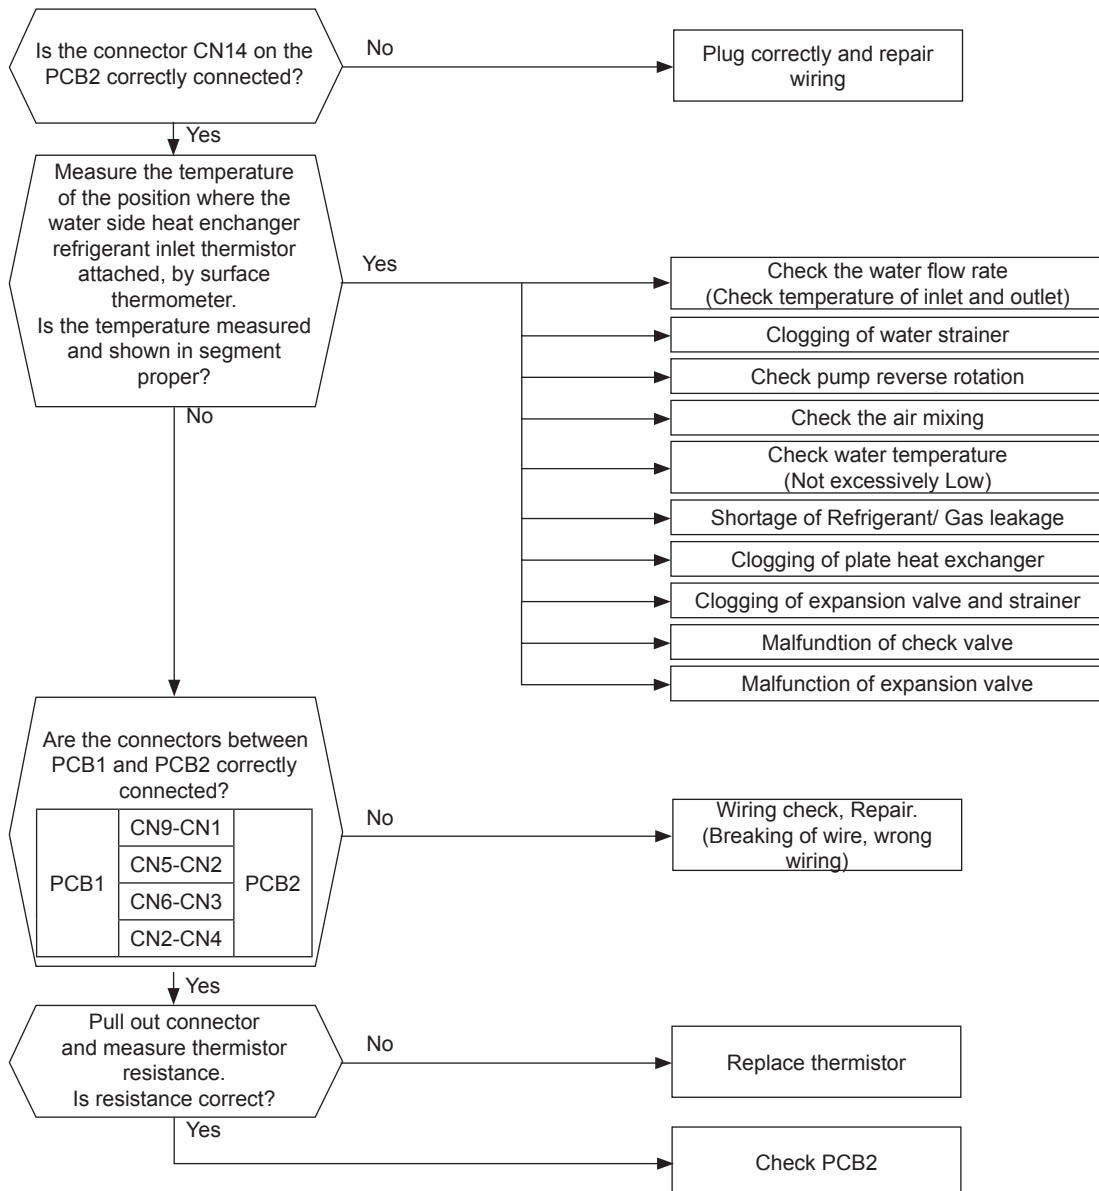

Alarm code	Description
02 ↔ E1	Excessively low suction gas temperature
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. The compressor stops and restarts automatically in 3 minutes. The alarm appears after 3 retries during 30 minutes. <ul style="list-style-type: none"> –This alarm code is displayed when the suction gas temperature (Ts) is lower than -5°C during 10 seconds. (Only cooling operation). 	


PCB monitoring position: PCB2, CN11

Retry code: P-06

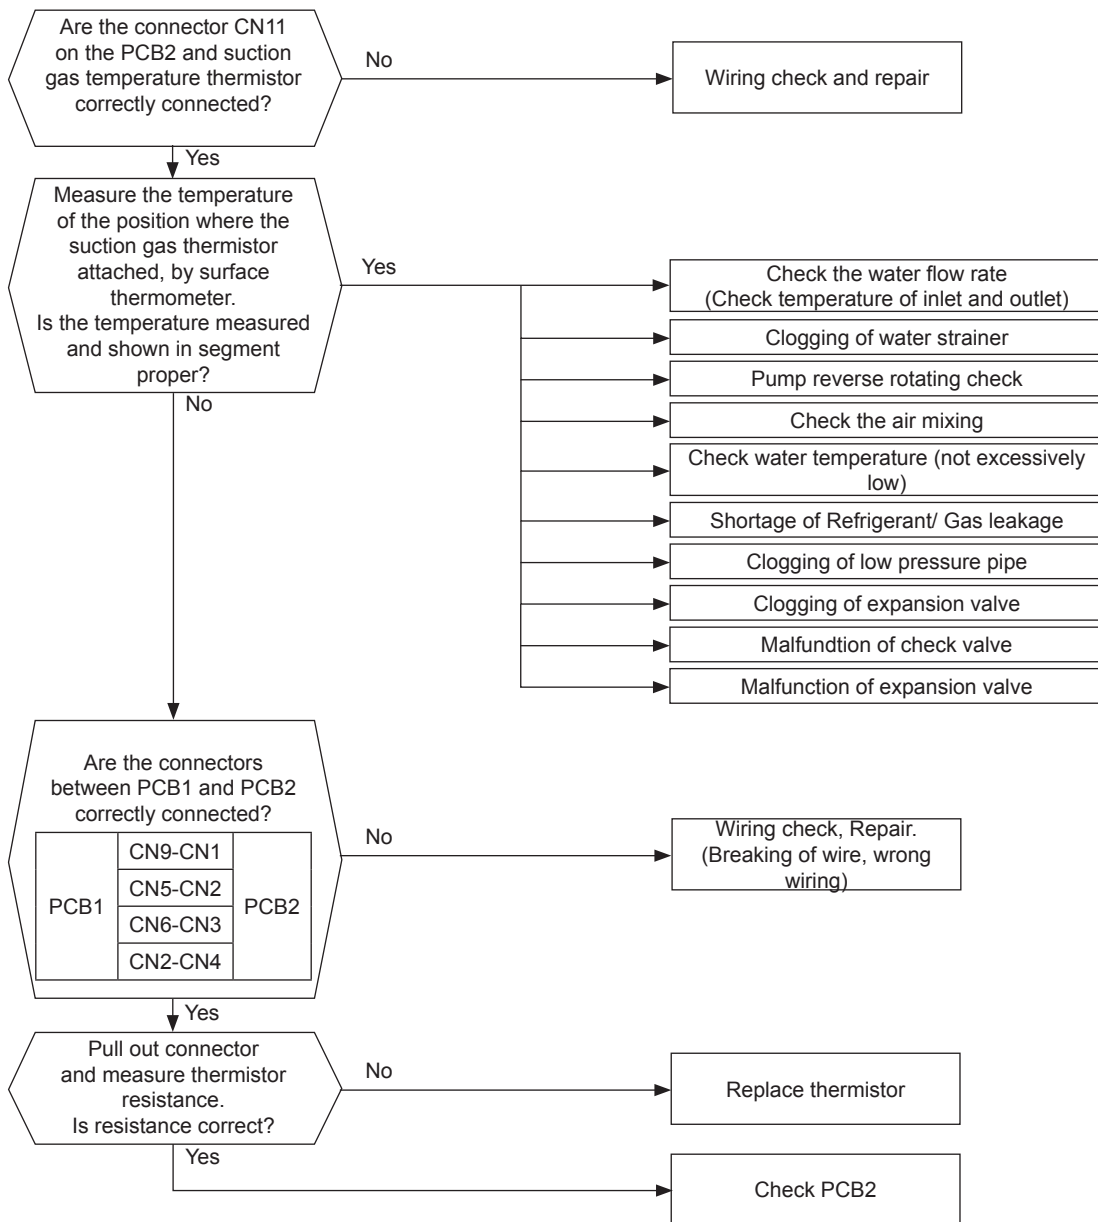


Alarm code	Description
04	Abnormal transmission between Inverter PCB and Main PCB
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> This alarm code is displayed when the communication between Main PCB (PCB1) and Inverter (DIP- IPM/ISPM) is not performed correctly during 30 seconds. 	

PCB monitoring position: PCB1, CN8

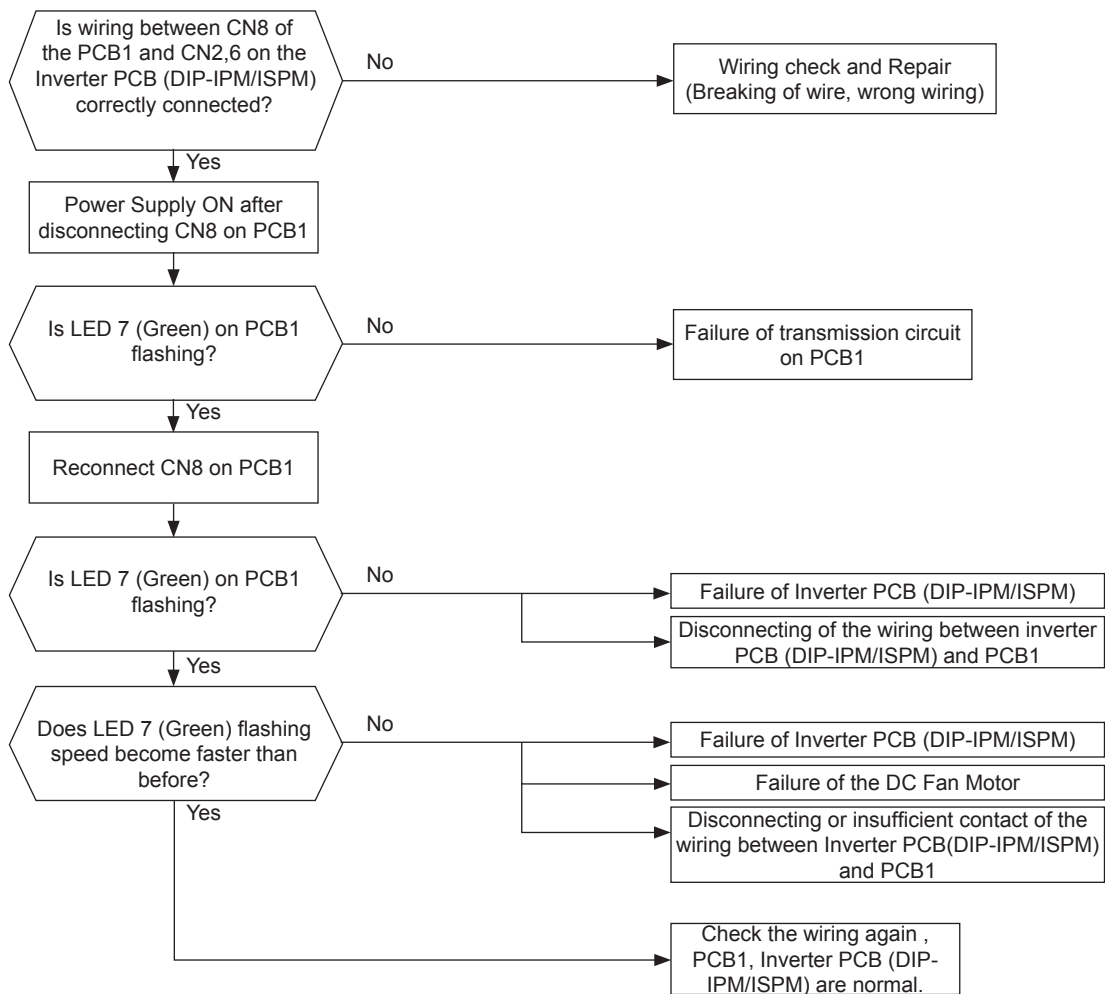


Alarm code	Description
05	Abnormality of Power Supply Phase
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the power source phases are reversely connected or one phase is not connected. 	

PCB monitoring position: PCB1, PCN1

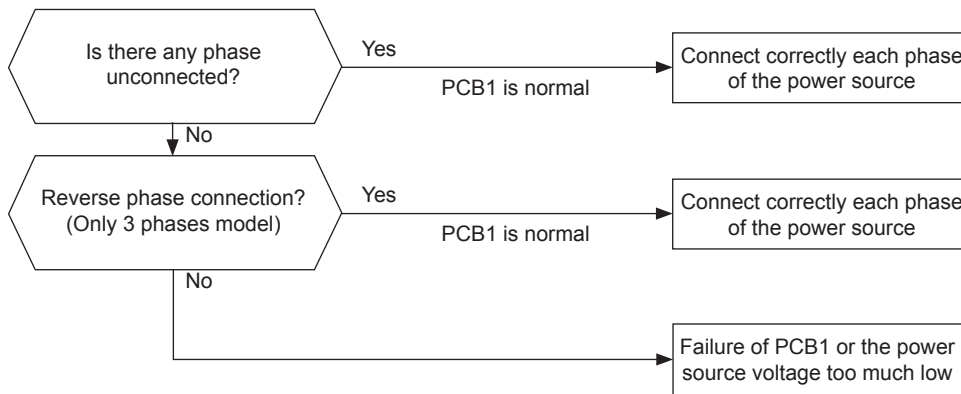


See below:

• **RHUE5AHN (Three phase)**

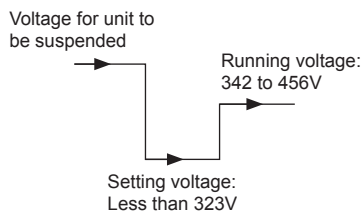

• **RUE3~5AVHN (Single phase)**

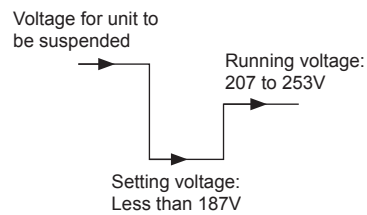


Alarm code	Description
06	Excessively low voltage or excessively high voltage for the inverter (RHUE3~5AVHN)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. The alarm appears after 3 retries during 30 minutes. <ul style="list-style-type: none"> This alarm code is displayed when the voltage between terminal "P" and "N" of DIP-IPM is insufficient. 	

Retry code: P-18

WARNING

- Be extremely carefull because of the high voltage.

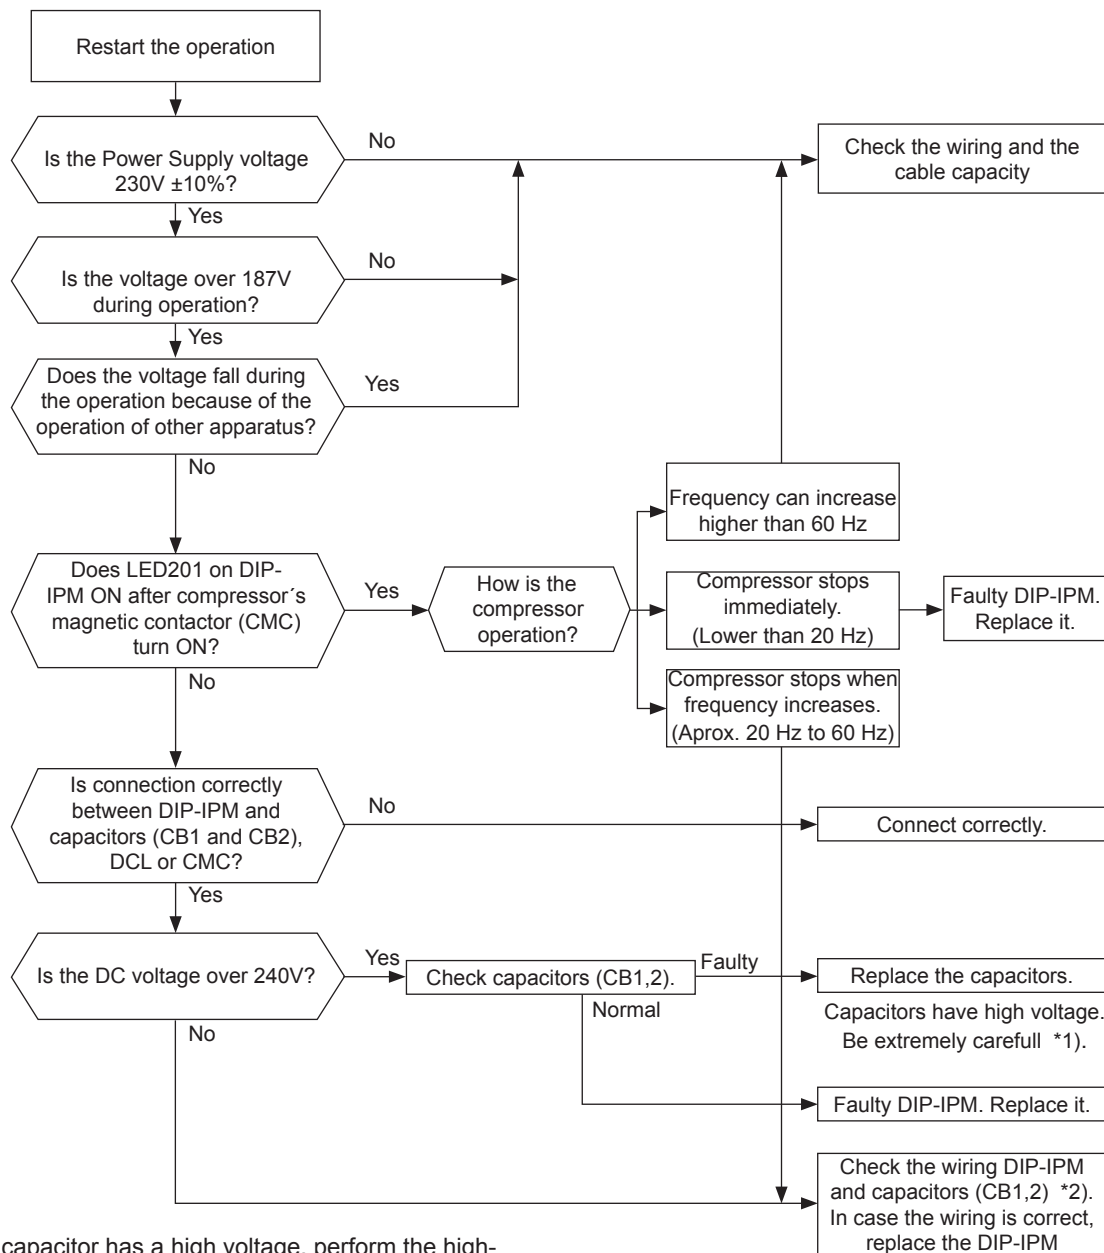

*1): If the capacitor has a high voltage, perform the high-voltage discharge pocedure. Refer to section 8.4.1.


*2): Checking procedures of the diode module are displayed in item 8.4.1.

Alarm code	Description
06	Excessively low voltage or excessively high voltage for the inverter (RHUE5AHN)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display of the outdoor unit. The alarm appears after 3 retries during 30 minutes. <ul style="list-style-type: none"> This alarm code is displayed when the voltage between terminal "P" and "N" of ISPM is insufficient. 	


Retry code: P-18

WARNING


- Be extremely carefull because of the high voltage.

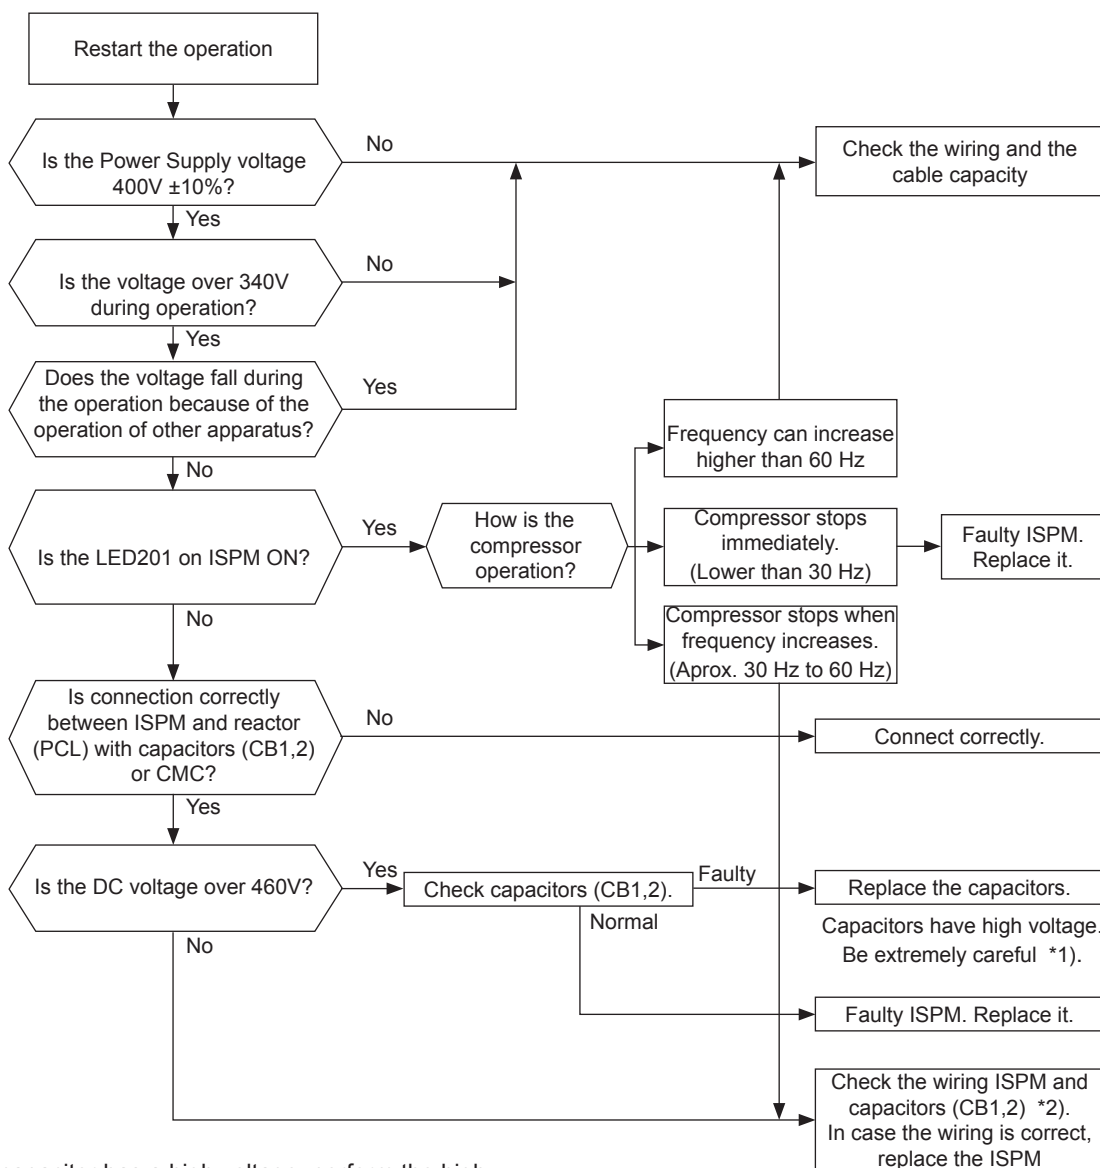

*1): If the capacitor has a high voltage, perform the high-voltage discharge procedure. Refer to section 8.4.1.
 *2): Checking procedures of the diode module are displayed in item 8.4.1.
 *3): DC voltage measuring position: ISPM "P" terminal to "+" terminal of tester, "N" terminal to "-" terminal of tester measuring position: DC 1000V.


Alarm code	Description
	<h3>Failure of water inlet temperature thermistor</h3>
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> -This alarm code is displayed when the water inlet temperature thermistor is short circuited or cut. 	

PCB monitoring position: PCB2, CN9

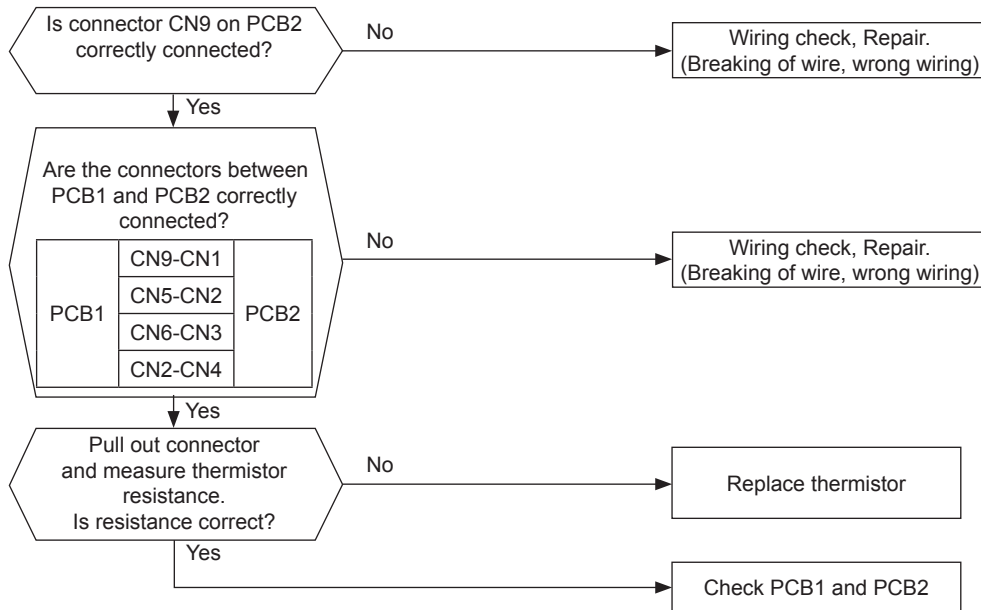

Measuring the thermistor resistance value:

Thermistor characteristics

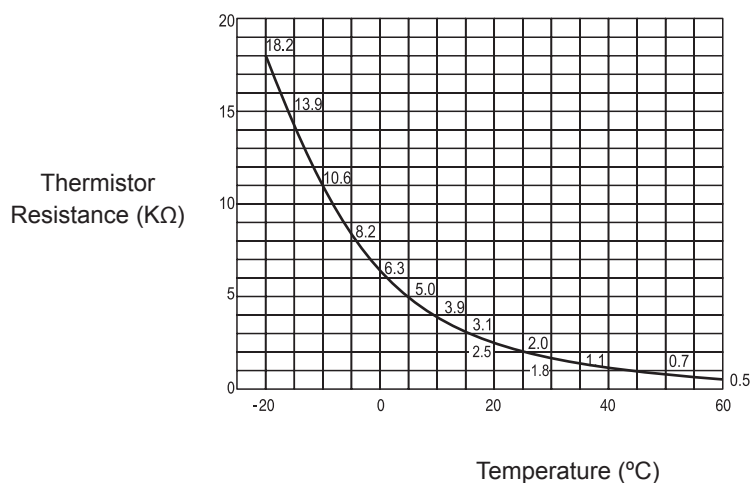


NOTE

- Measure the resistance at least in 2 different points which the temperature is different more than 10 °C.


Alarm code	Description
12	Failure of water outlet temperature thermistor
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. –This alarm code is displayed when the water outlet temperature thermistor is short circuited or cut. 	

PCB monitoring position: PCB2, CN13

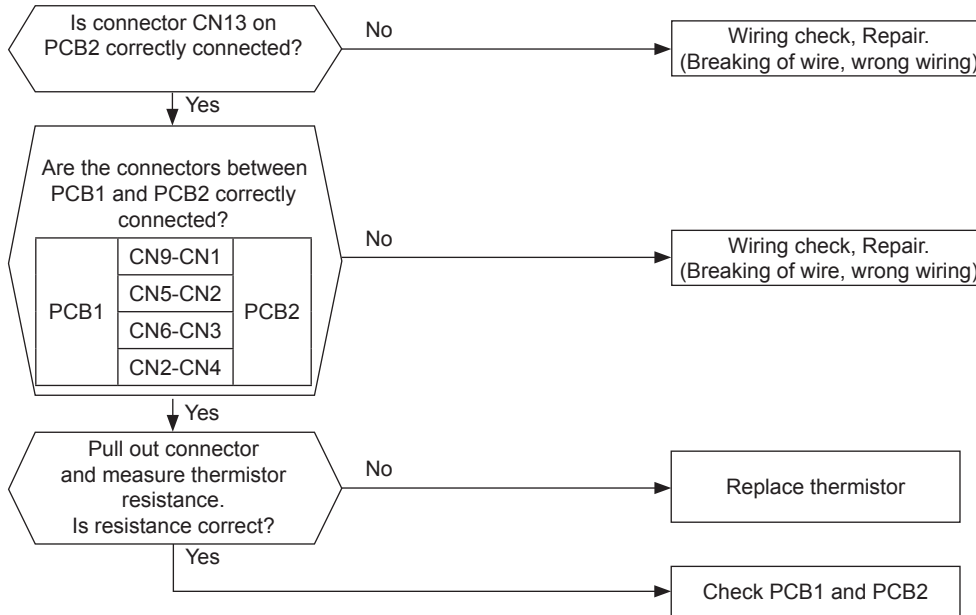

Measuring the thermistor resistance value:

Thermistor characteristics

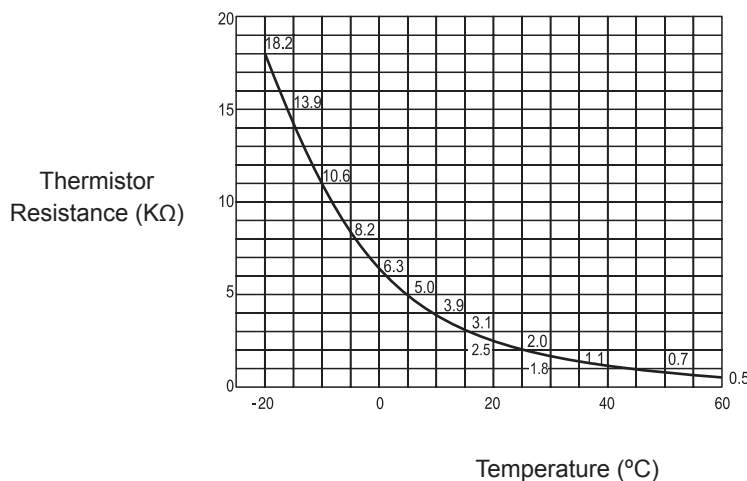


NOTE

- Measure the resistance at least in 2 different points which the temperature is different more than 10 °C.


Alarm code	Description
13	Activation of freeze protection control (water inlet)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the chilled water temperature is lower than 2°C. 	

PCB monitoring position: PCB2, CN9

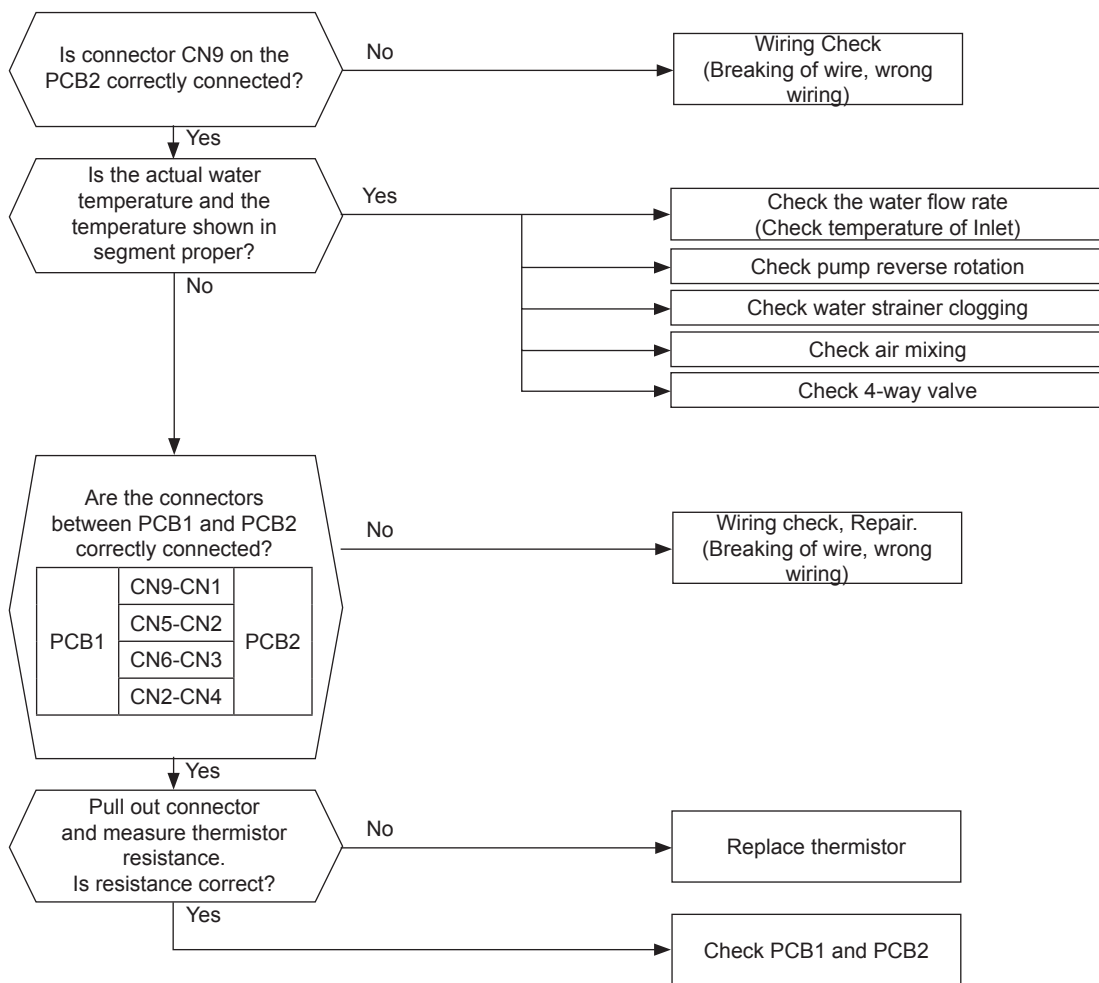


Alarm code	Description
02 ↔ 13	Activation of freeze protection control (water outlet)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the chilled water temperature is lower than 2°C. 	

PCB monitoring position: PCB2, CN13

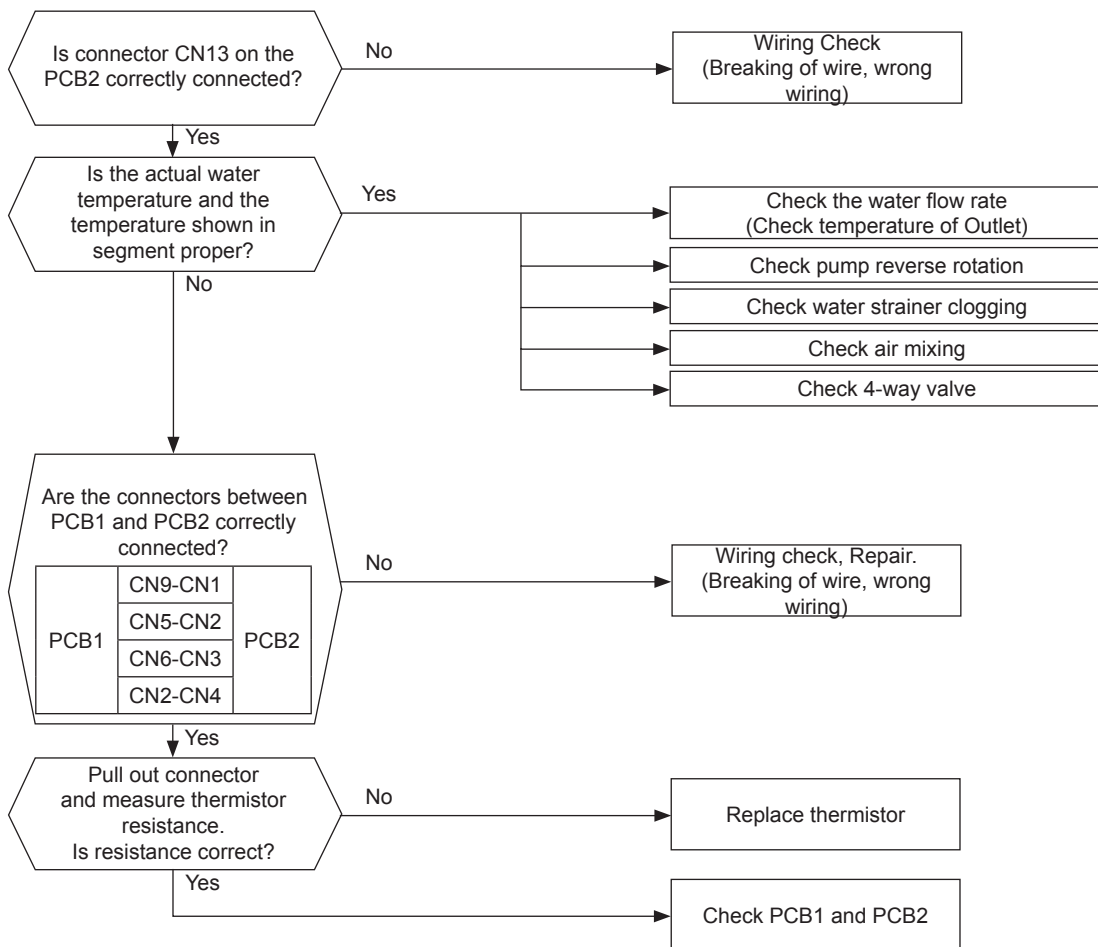


Alarm code	Description
14	Excessively high water temperature (compressor running)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. –This alarm code is displayed when the water temperature is above 59°C during compressor operation. (Only heating operation). 	

PCB monitoring position: PCB2, CN9 (Water Inlet)
PCB2, CN13 (Water Outlet)

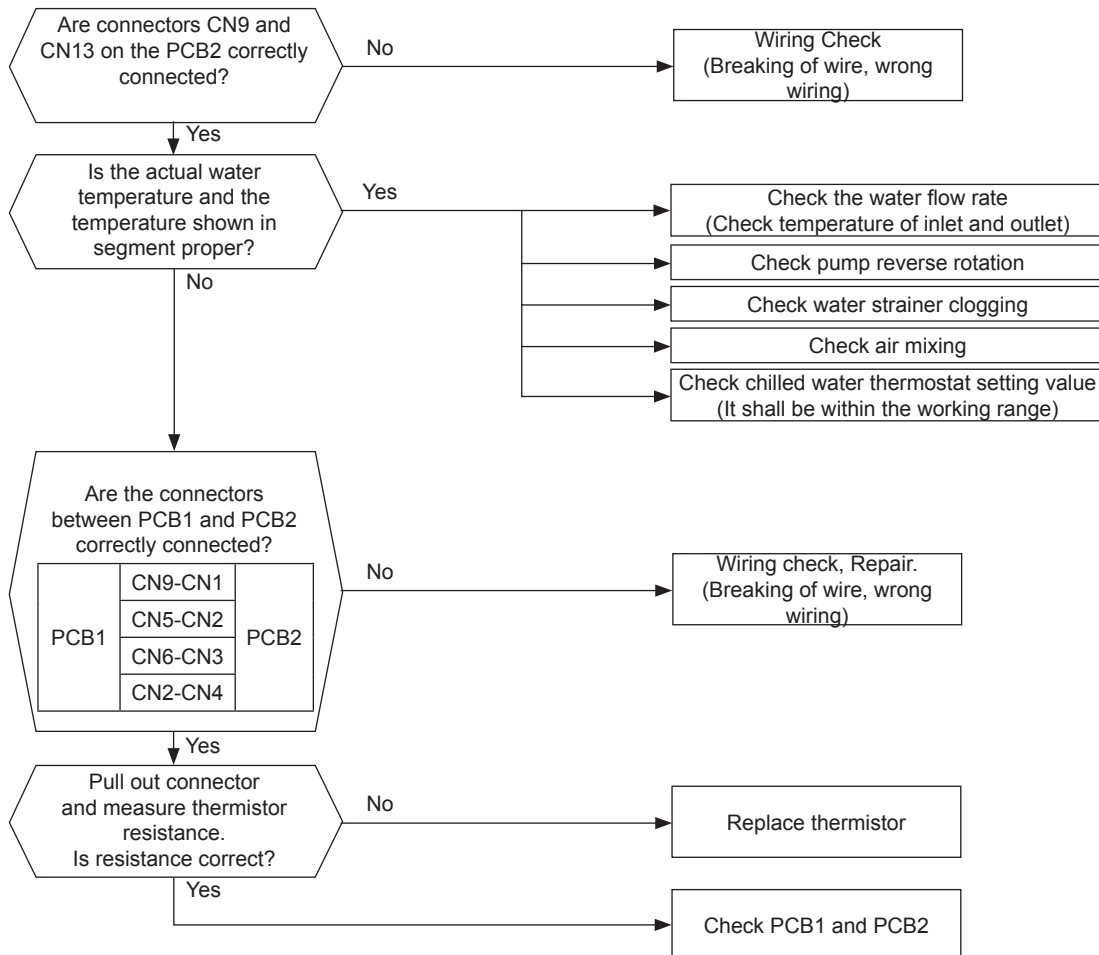


Alarm code	Description
21	Failure of refrigerant liquid temperature thermistor (Open/Short)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. –This alarm code is displayed when the thermistor is short circuited or cut. 	

PCB monitoring position: PCB2, CN14

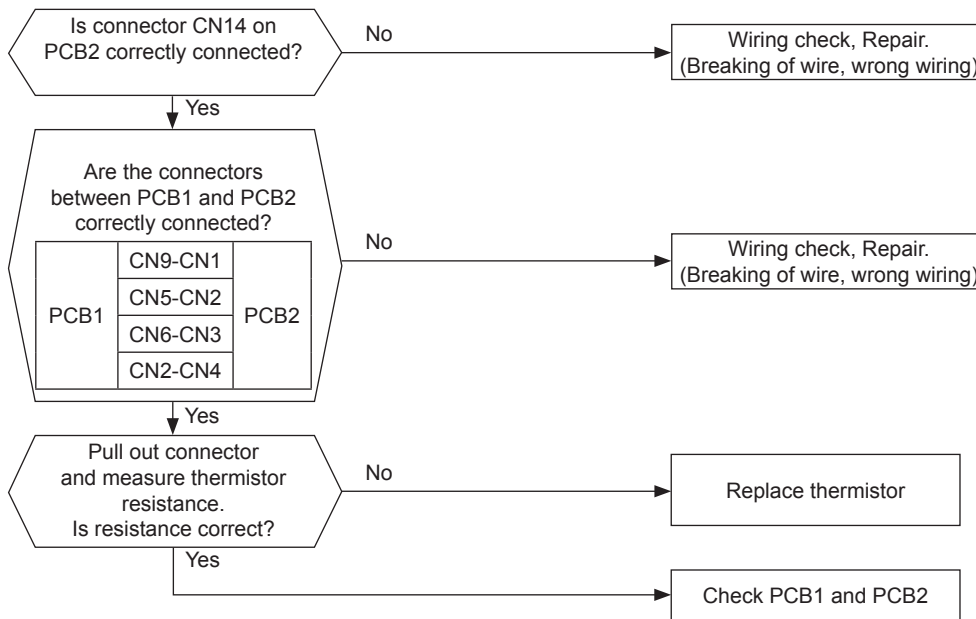

Measuring the thermistor resistance value:

Thermistor characteristics

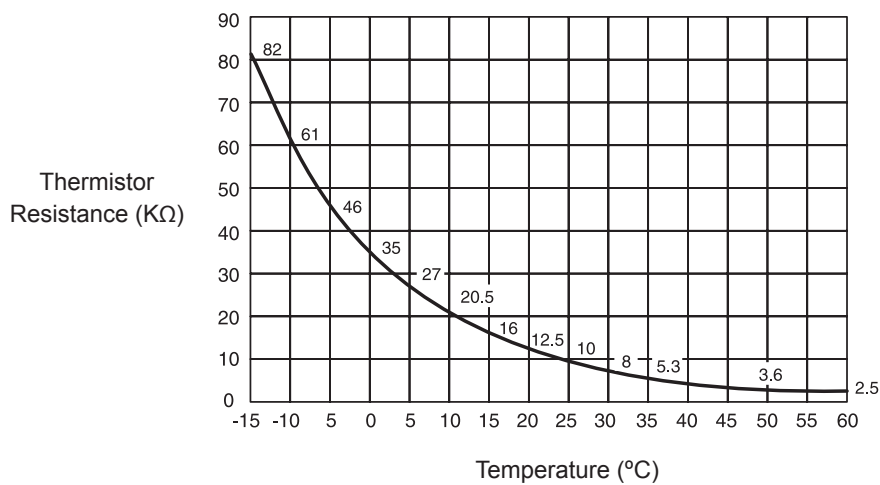


NOTE

- Measure the resistance at least in 2 different points which the temperature is different more than 10 °C.


Alarm code	Description
22	Failure of ambiente temperature thermistor (Open/short)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the thermistor is short circuited or cut. 	

PCB monitoring position: PCB2, CN10

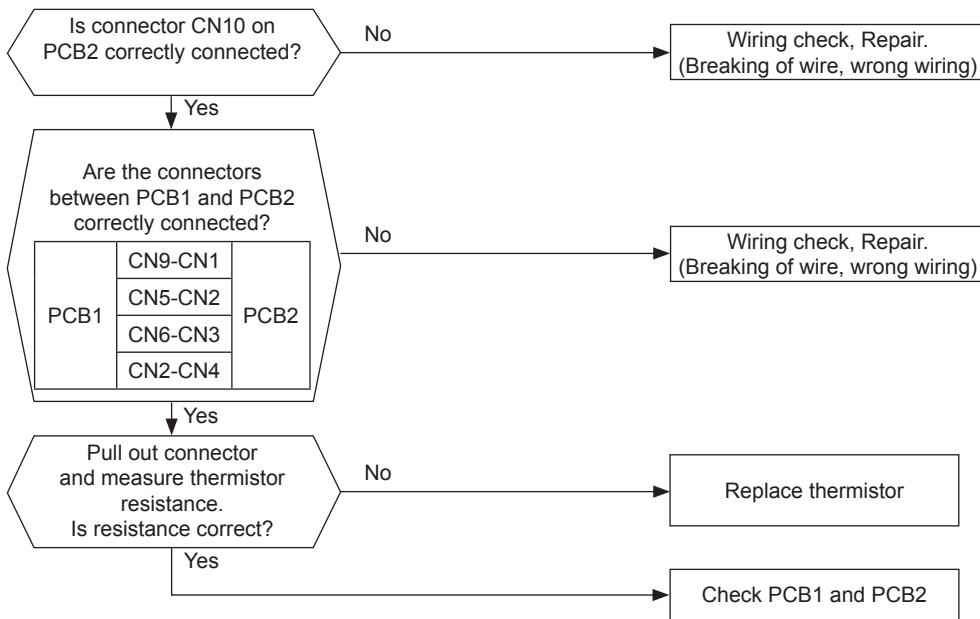

Measuring the thermistor resistance value:

Thermistor characteristics

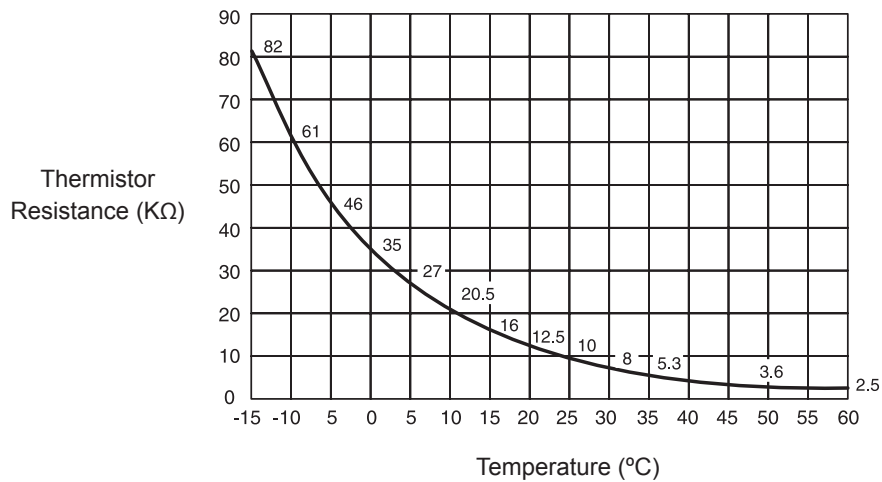


NOTE

- Measure the resistance at least in 2 different points which the temperature is different more than 10 °C.


Alarm code	Description
23	Failure of discharge gas temperature thermistor (Open/Short)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. –This alarm code is displayed when the thermistor is short circuited or cut. 	

PCB monitoring position: PCB2, CN15

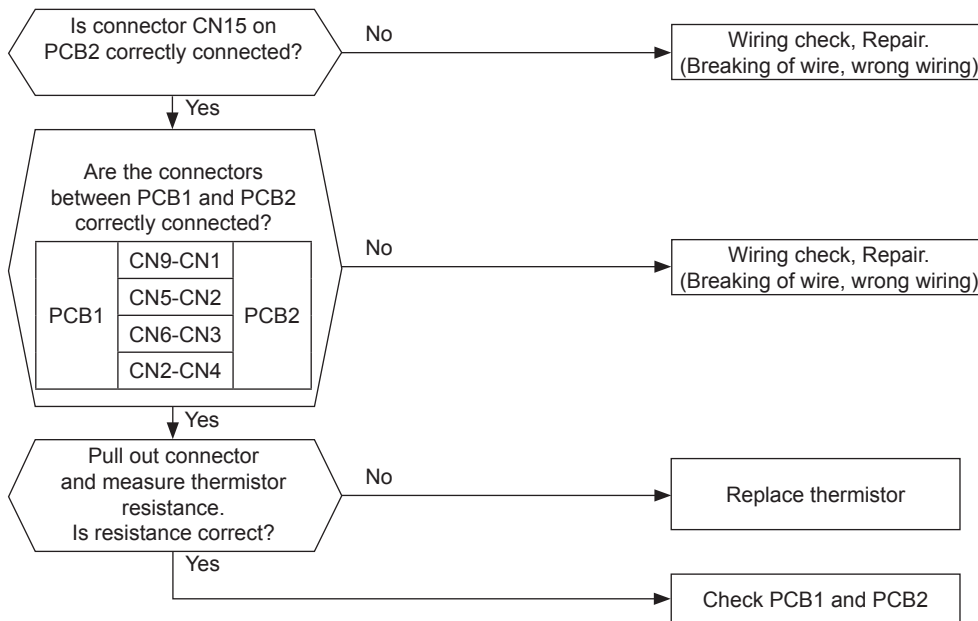

Measuring the thermistor resistance value:


Thermistor characteristics

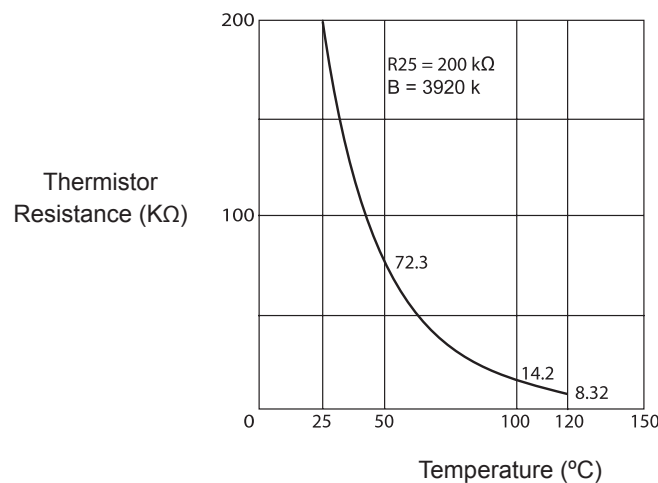

NOTE
- Measure the resistance at least in 2 different points which the temperature is different more than 10 °C.


Alarm code	Description
24	Failure of refrigerant evaporating temperature thermistor (Open/Short)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the thermistor is short circuited or cut. 	

PCB monitoring position: PCB2, CN12

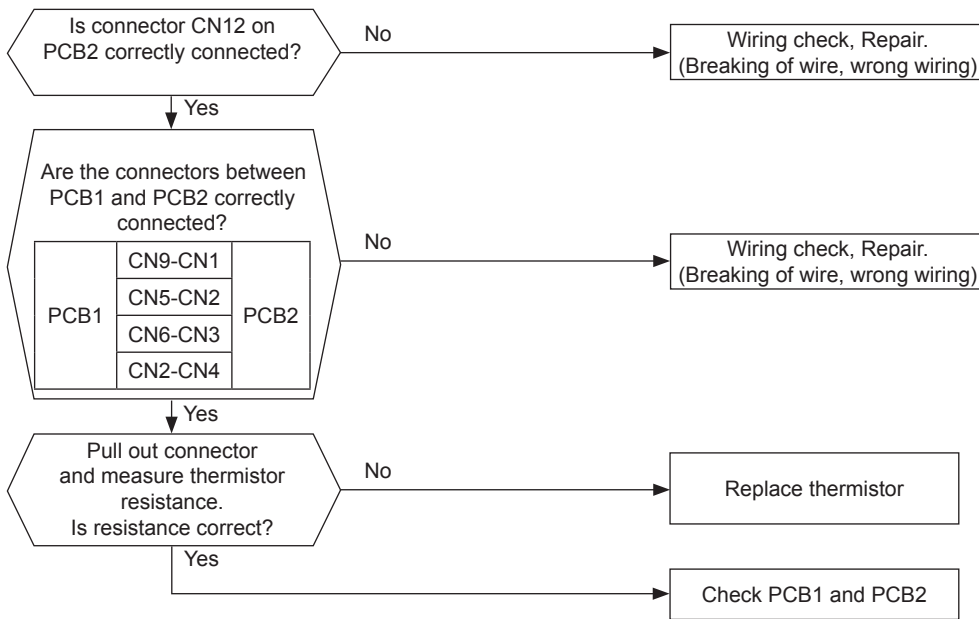

Measuring the thermistor resistance value:


Thermistor characteristics

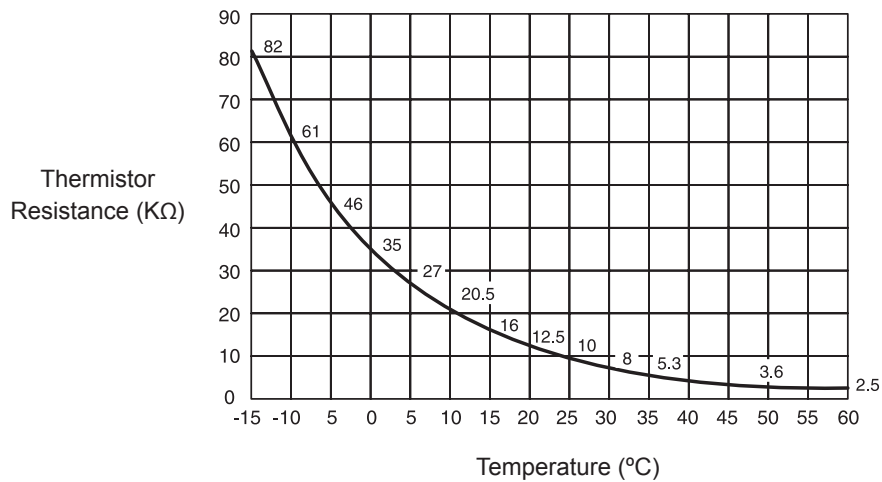

NOTE
- Measure the resistance at least in 2 different points which the temperature is different more than 10 °C.


Alarm code	Description
26	Failure of suction gas temperature thermistor (Open/Short)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the thermistor is short circuited or cut. 	

PCB monitoring position: PCB2, CN11

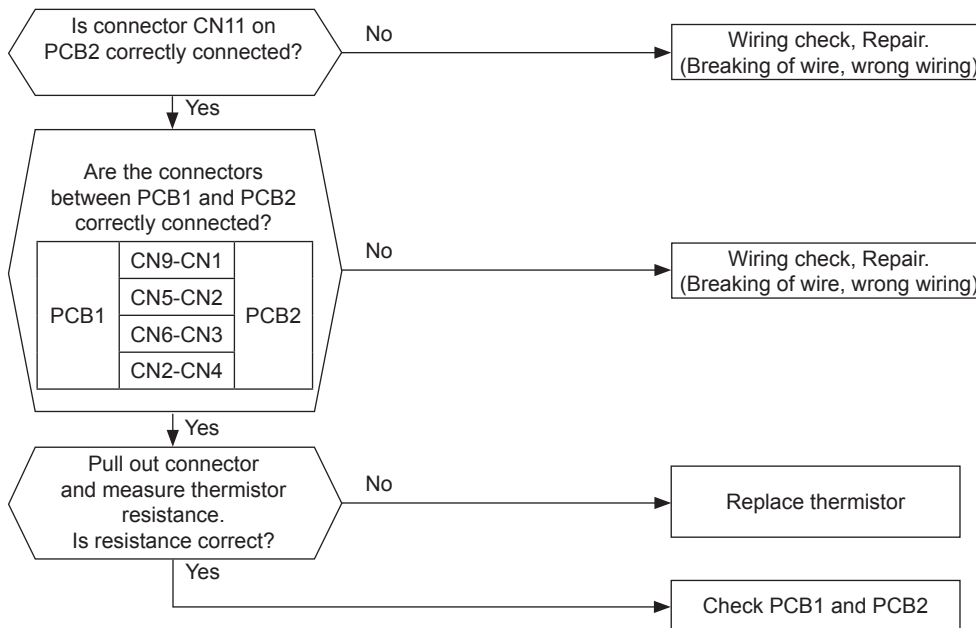

Measuring the thermistor resistance value:


Thermistor characteristics

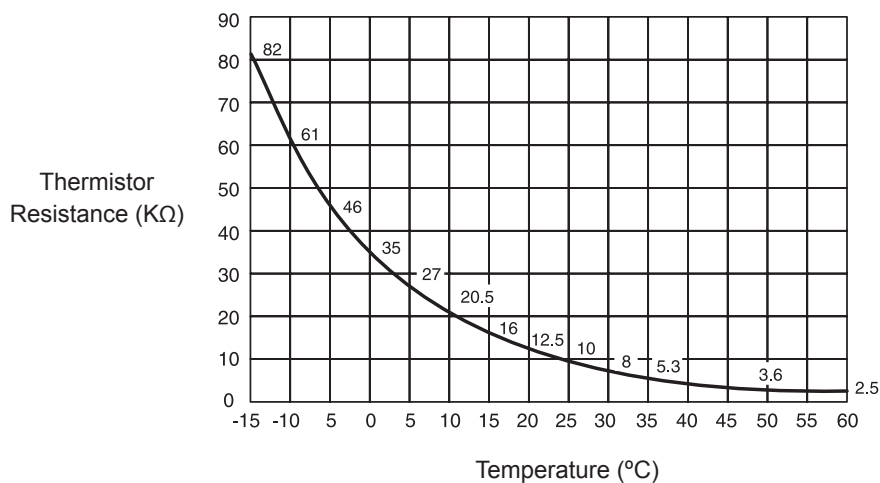


i **NOTE**
- Measure the resistance at least in 2 different points which the temperature is different more than 10 °C.

Alarm code	Description
27	Failure of discharge gas pressure sensor (Open/Short)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the high pressure sensor is short circuited or cut. 	

PCB monitoring position: PCB1, CN4

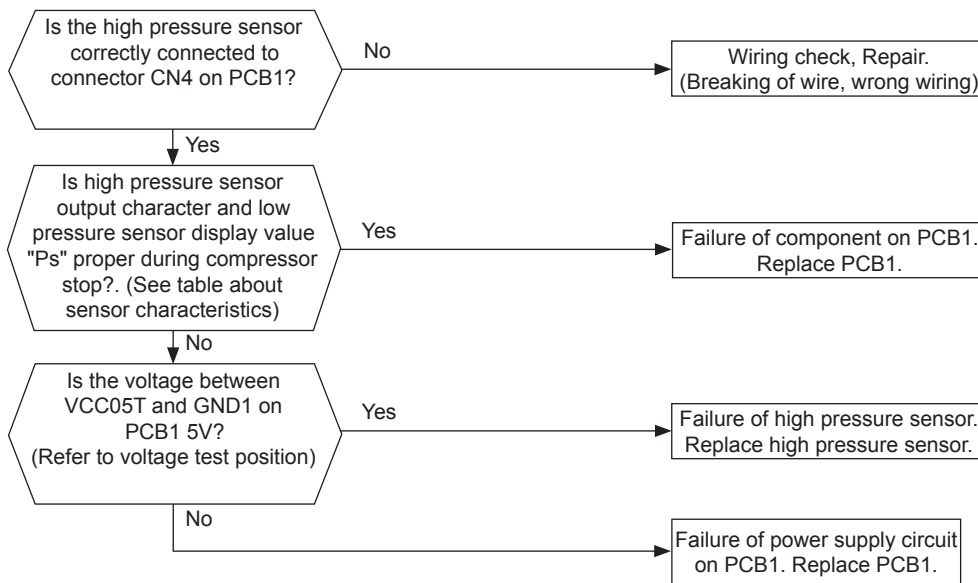

Characteristics of high pressure sensor

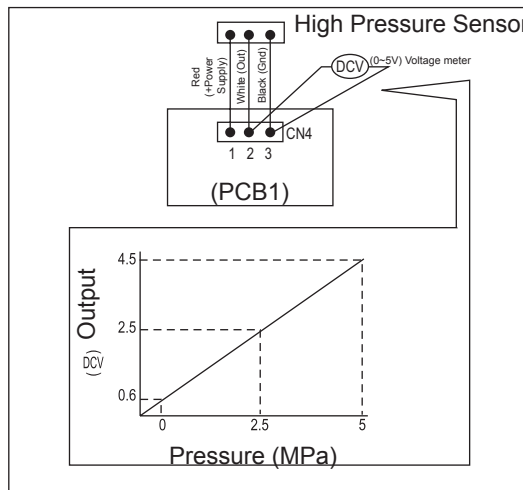


NOTE


- In case that the low pressure is higher than 2.2 Mpa, segment shows 2.2 Mpa.
- In this case, connect a pressure gauge to high pressure check joint, check the pressure shown in the gauge.

Alarm code	Description
28	Failure of suction gas pressure sensor (Open/Short)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. <ul style="list-style-type: none"> –This alarm code is displayed when the low pressure sensor is short circuited or cut. 	


PCB monitoring position: PCB1, CN3

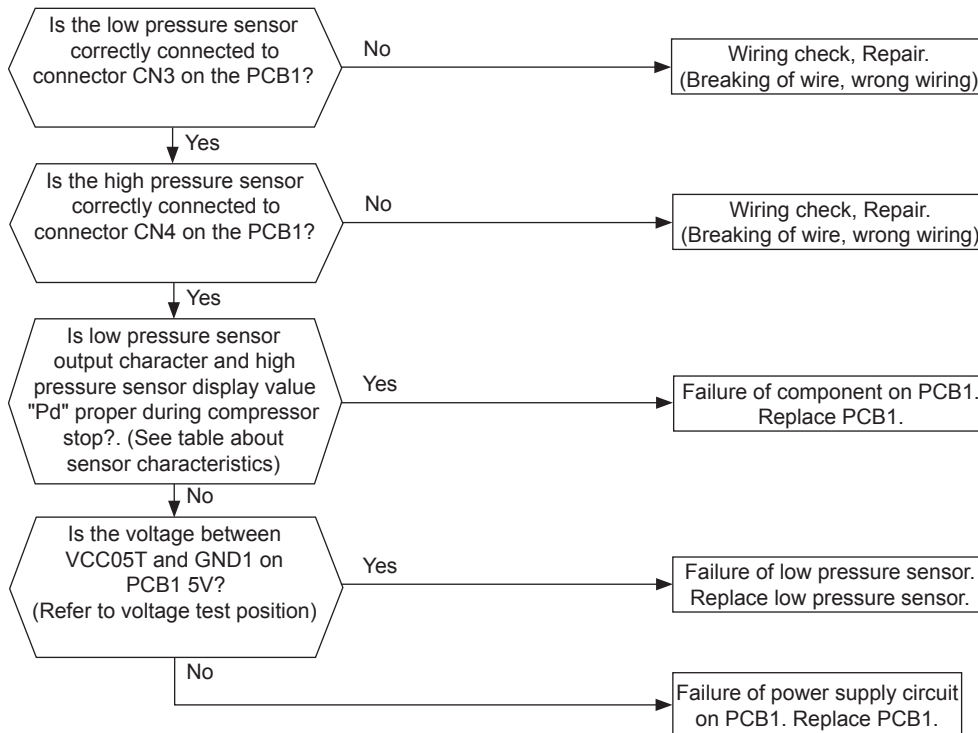


Characteristics of low pressure sensor

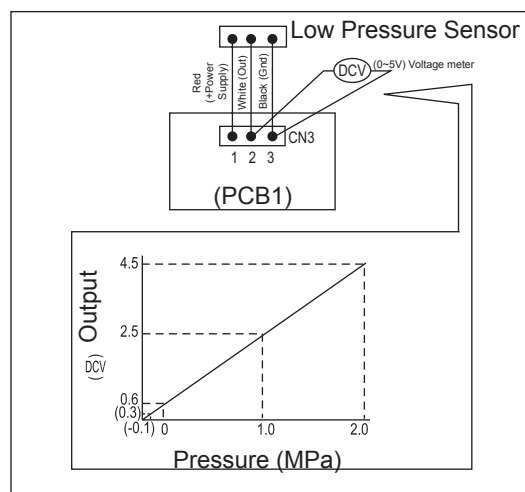


Alarm code	Description
30	Incorrect PCB Setting
<ul style="list-style-type: none">The alarm code is displayed on the PCB's display. –This alarm code is displayed when wrong settings are performed in DIP switches on PCB.	

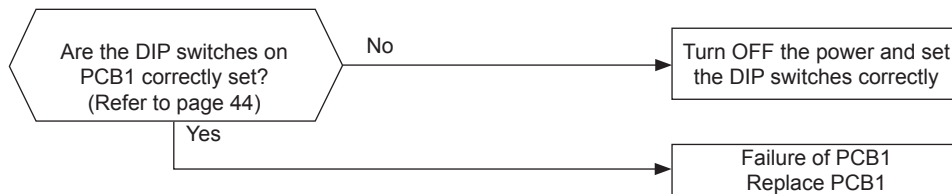

Alarm code	Description
32	Transmission error between Main PCBs (this alarm code is not available in this unit)
<ul style="list-style-type: none">The alarm code is displayed on the PCB's display.	

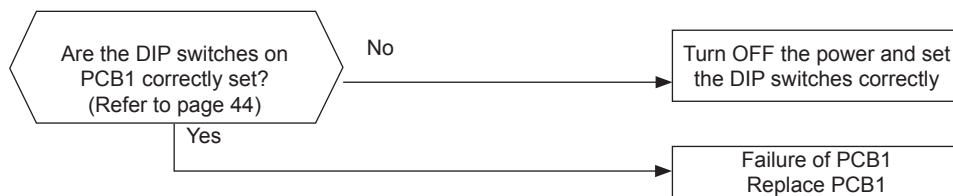


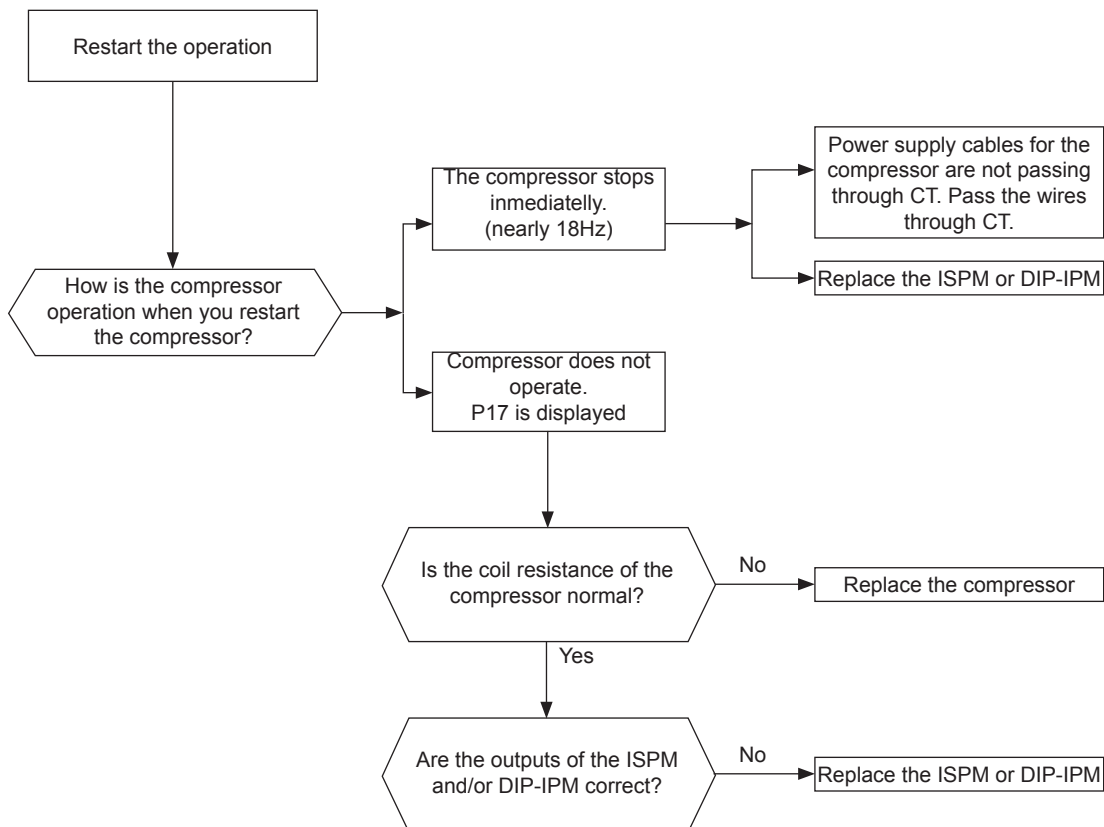
Alarm code	Description
40	Incorrect operation
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display –This alarm code is displayed when wrong settings is performed in DIP switch on PCB or prohibited operation is performed. 	

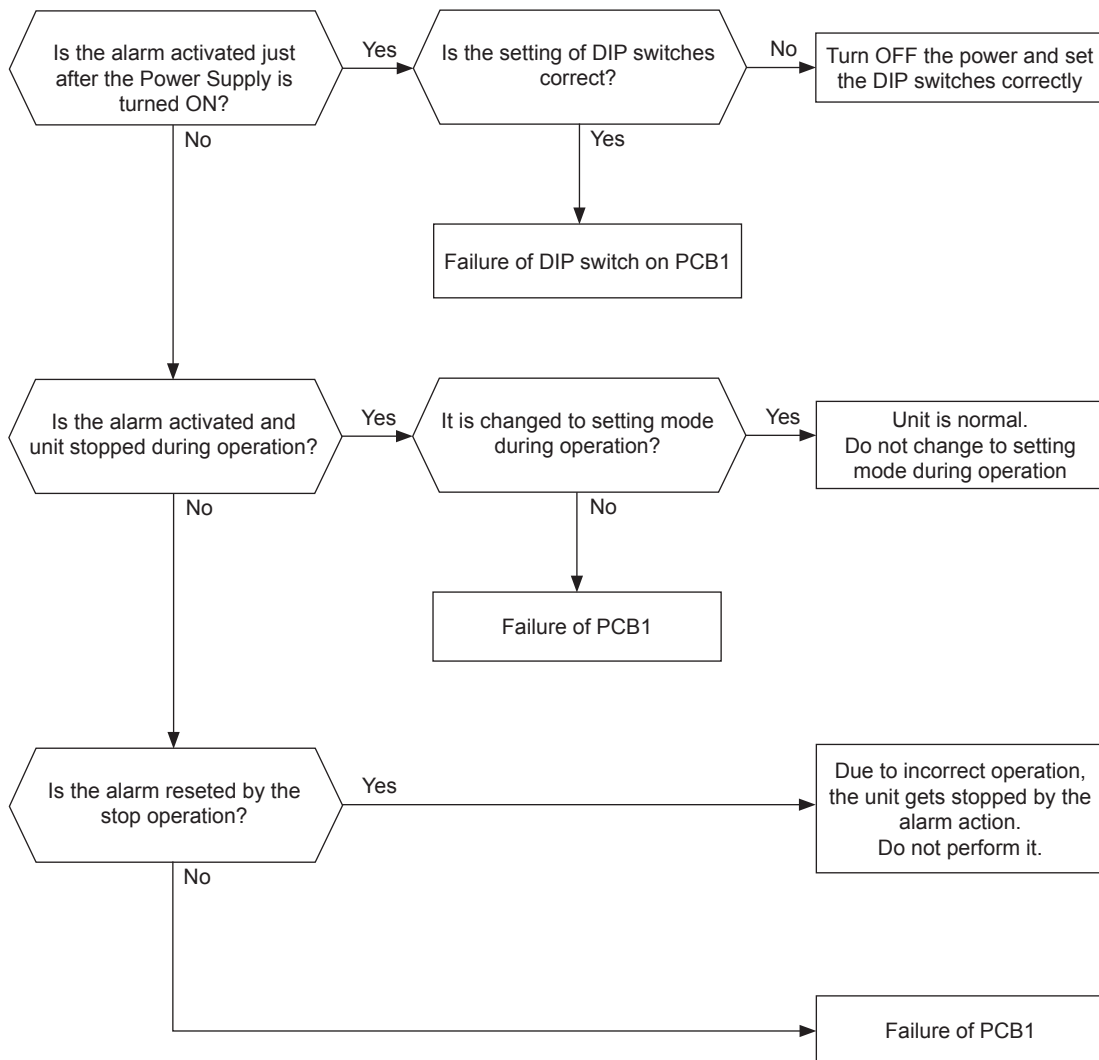

Alarm code	Description
51	Failure of the current sensor for "Inverter" (0 A detection)
<ul style="list-style-type: none"> • The alarm code is displayed on the PCB's display • The compressor stops and restarts automatically in 3 minutes. • The alarm appears after 3 retries during 30 minutes. <ul style="list-style-type: none"> –This alarm code is displayed when the frequency of the compressor is maintained at 15~18 Hz after the compressor is started, one of the absolute values of the running current at each phase U+, U-, V+ and V- is less than 1.5A (including 1.5A). 	


Retry code: P-17

	CAUTION
<p>- Before checking and replacing the inverter parts perform the high voltage discharge procedure by referring to the item 8.4.1.</p>	



Alarm code	Description
52	Activation of protection for inverter instantaneous over current (1)
<ul style="list-style-type: none"> • The alarm code is displayed on the PCB's display. • The compressor stops and restarts automatically in 3 minutes. • The alarm appears after 6 retries during 30 minutes. <ul style="list-style-type: none"> – This alarm code is displayed when the compressor current is higher than the set value. Totally 3 minutes during 10 minutes. 	

Retry code: P-17

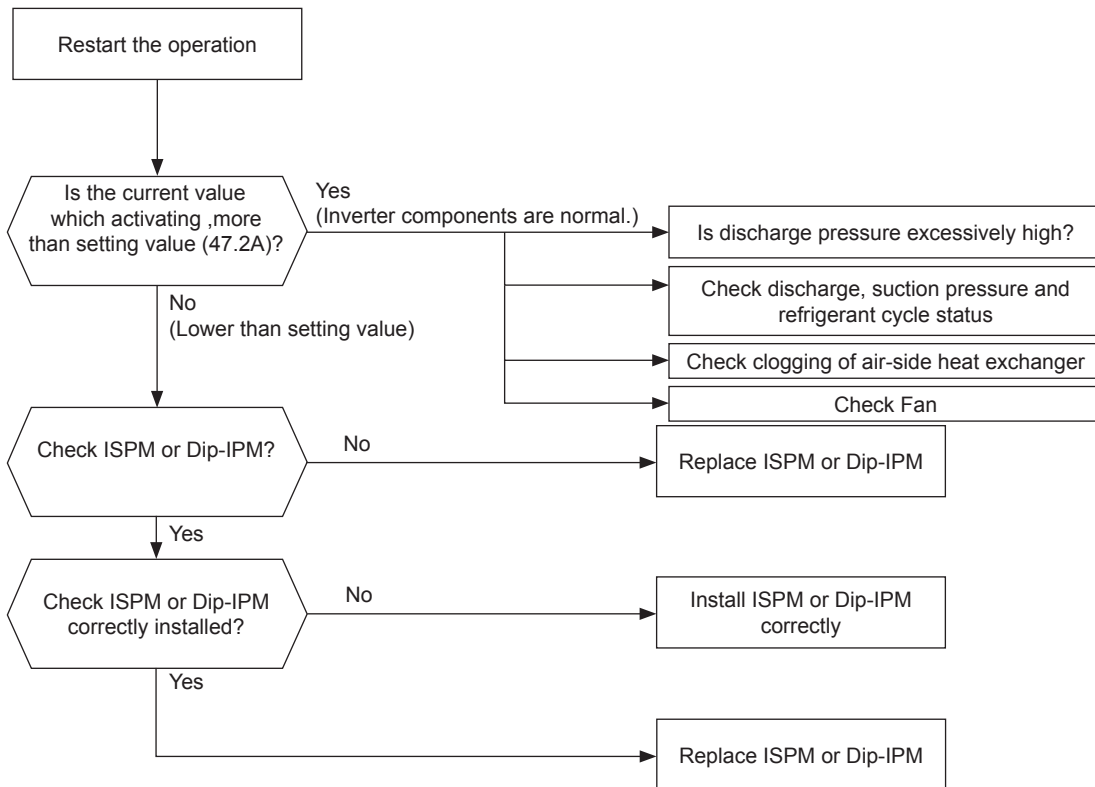

NOTE


- Regarding replacing or checking method for inverter components, refer to the item 8.4.

CAUTION

- Before checking and replacing the inverter parts perform the high voltage discharge procedure by referring to the item 8.4.1.

Alarm code	Description
52	Activation of protection for inverter instantaneous over current (2)
<ul style="list-style-type: none"> The alarm code is displayed on the PCB's display. The compressor stops and restarts automatically in 3 minutes. The alarm appears after 6 retries during 30 minutes. <ul style="list-style-type: none"> –This alarm code is displayed when the compressor current is higher than the set value. 	

Retry code: P-17

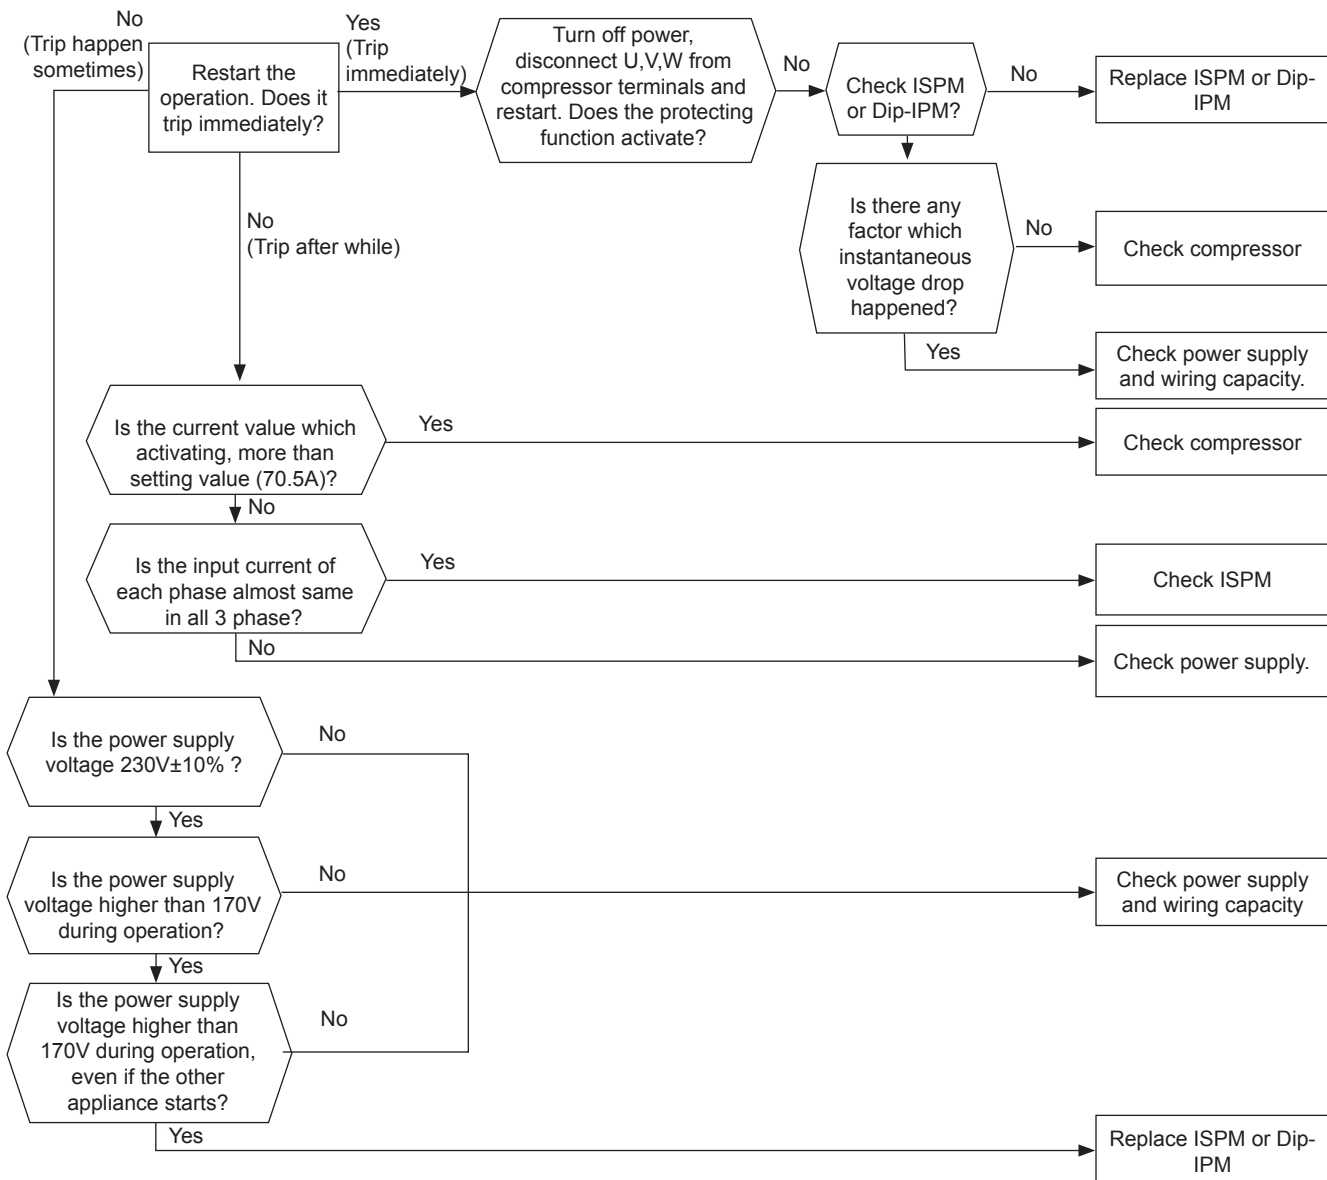


NOTE

- Regarding replacing or checking method for inverter components, refer to the item 8.4.

CAUTION


- Before checking and replacing the inverter parts perform the high voltage discharge procedure by referring to the item 8.4.1.

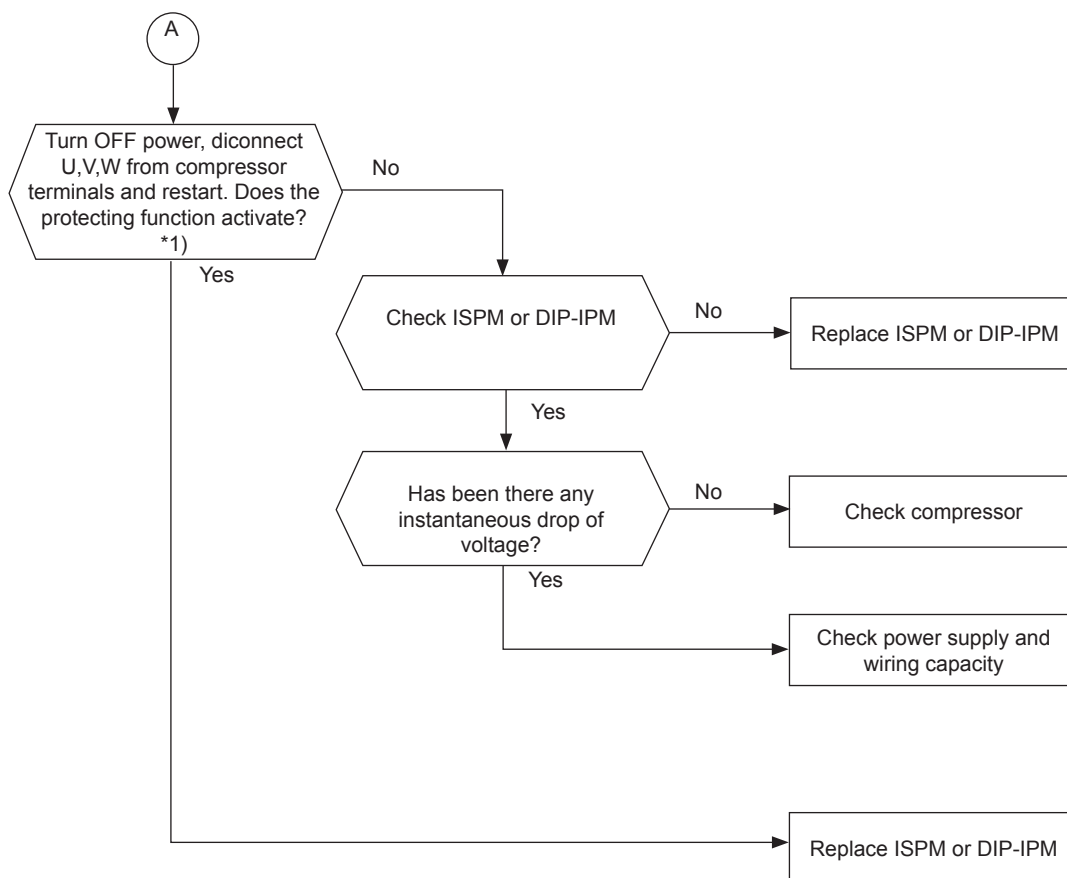

*1): Turn ON the No.1 switch of the DIP switch on ISPM when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the No.1 switch of the DIP switch on ISPM.

Alarm code	Description
53	ISPM or DIP-IPM protection activation
<p>– IPM or Dip IPM have detecting function of abnormality. This alarm is indicated when the transistor module detect the abnormality 3 times in 30 minutes including 3. Retry operation is performed up to the occurrence of 2 times. (The compressor restarts automatically in 3 min.)</p> <p>Conditions: Abnormal current to the transistor module such as Short circuited or grounded or Abnormal temperature of the IPM or Dip IPM or Control voltage decrease</p>	

Retry code: P-17

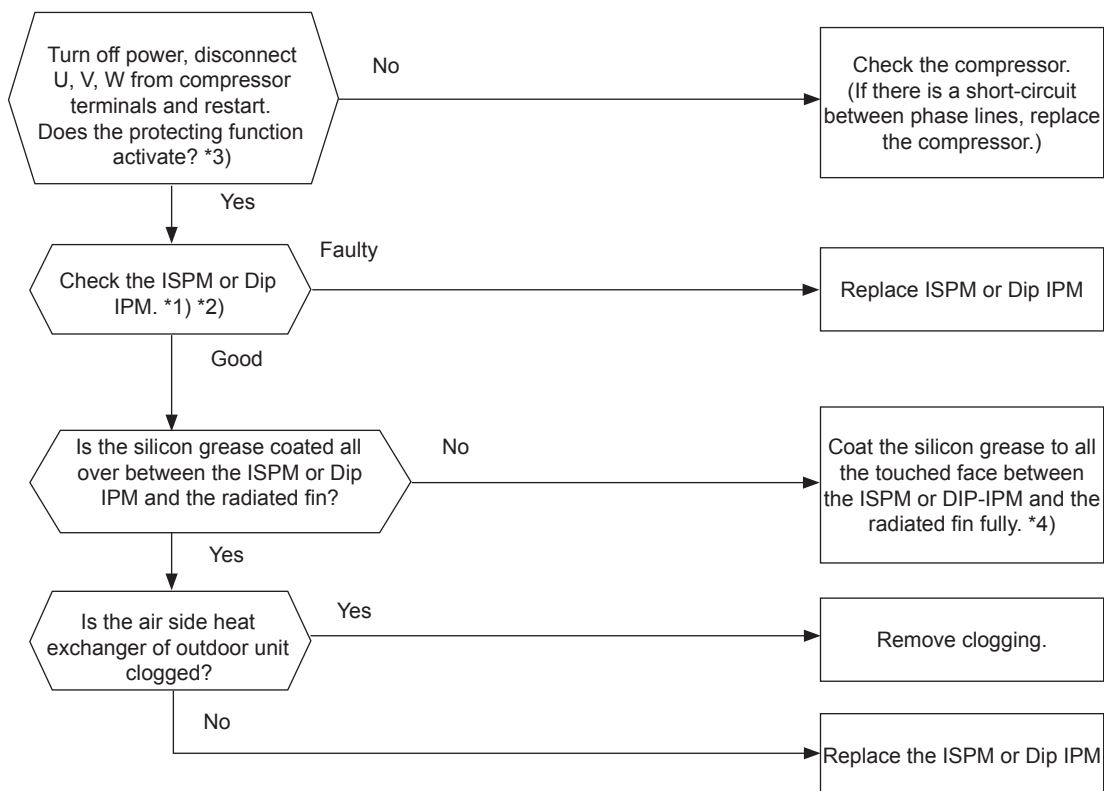


*1) Perform the high voltage discharge work by referring to the item 8.4.1 before checking and replacing the inverter components.

*2) Regarding replacing or checking method for inverter components, refer to the item 8.4


*3) Turn ON the No.1 switch of the dip switch DSW1 on Inverter PCB when restarting with disconnecting the terminals of the compressor. After troubleshooting, turn OFF the No.1 switch of the dip switch DSW1 on Inverter PCB.

*4) Use the silicon grease provided as accessory (Service parts No. P22760).

	NOTE
<p>- When alarm code "53" is indicated, the fan motor (DC motor) ensure that DC fan motor is checked according to the item 8.4.4.</p>	

Alarm code	Description
54	Increase in the inverter fin temperature
<ul style="list-style-type: none"> The compressor stops when the temperature of the thermistor for inverter fin excess 100°C, and restarts automatically in 3 minutes. The alarm appears after 3 retries during 30 minutes. 	


Retry code: P-17

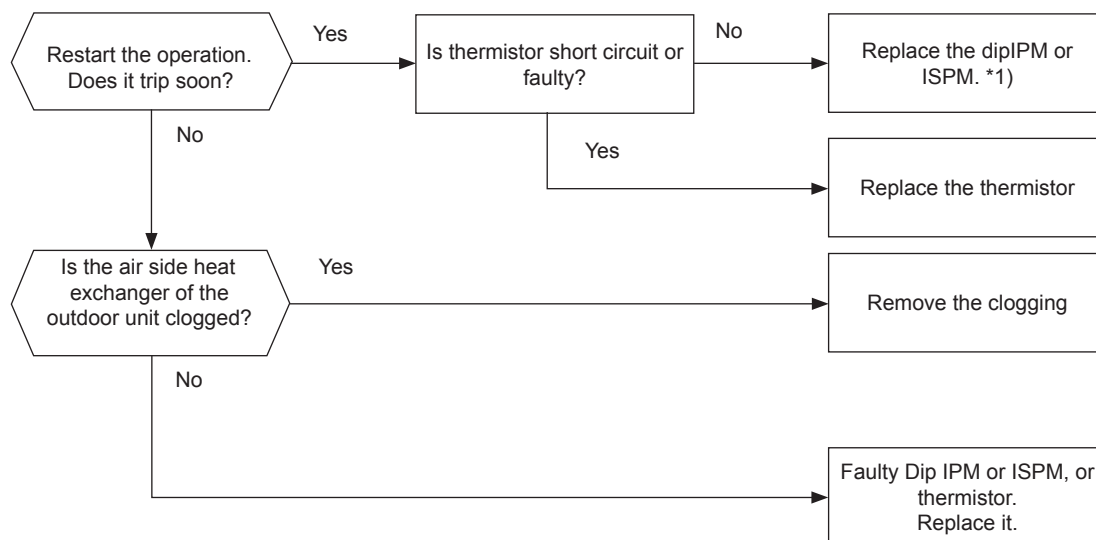

1*): Perform the high voltage discharge work by referring to the item 8.4.1 before checking and replacing the inverter components.

Alarm code	Description
57	Abnormality of fan motor protector (DC fan motor)

- The fan motor is stopped once, and restarted after 10 seconds.
This alarm code is displayed when the revolution pulse output detected from the fan motor is 10rpm or less. If it occurs more than 10 times in 30 minutes, this alarm is indicated.
–This alarm code is displayed when the fan motor is stopped by an abnormal reason like fan motor lock.

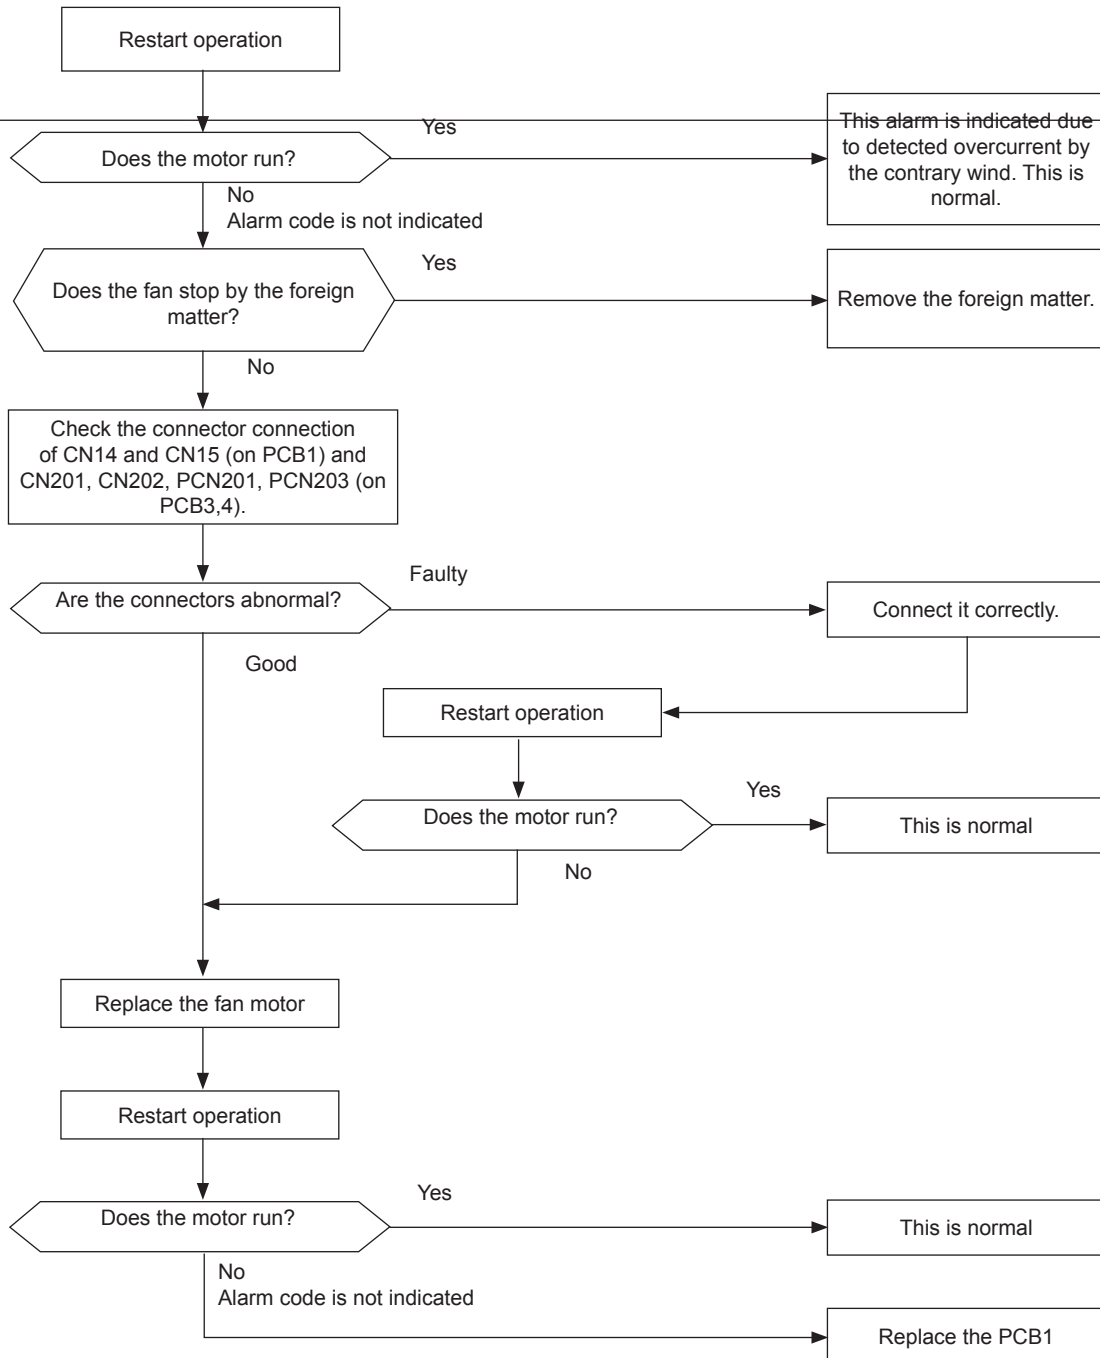


NOTE
- Check to ensure that DC Fan motor is checked according to the item 8.4.4.

In the case that the fan motor does not run even the PCB1 is replaced, replace fan inverter PCB (PCB4,5).


Alarm code	Description
SP	No feed back signal from water pump
<ul style="list-style-type: none"> • The alarm code is displayed on the PCB's display. • It is available once feedback signal confirmed. <ul style="list-style-type: none"> – This alarm code is displayed when the Pump operation feedback signal (terminals 1-2) is OFF during pump interlock (CMP) ON (terminals 3-4). 	

PCB monitoring position: PCB1, PCN4

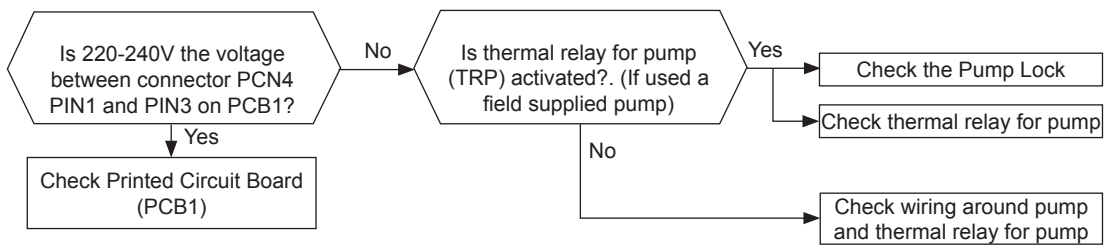


Alarm code	Description
EE	Cooler water failure (this alarm is not available in this unit)
<p>–This alarm code is displayed when the contact between #1 and #2 of CN6 is not closed.</p>	

PCB monitoring position: PCB1, CN6

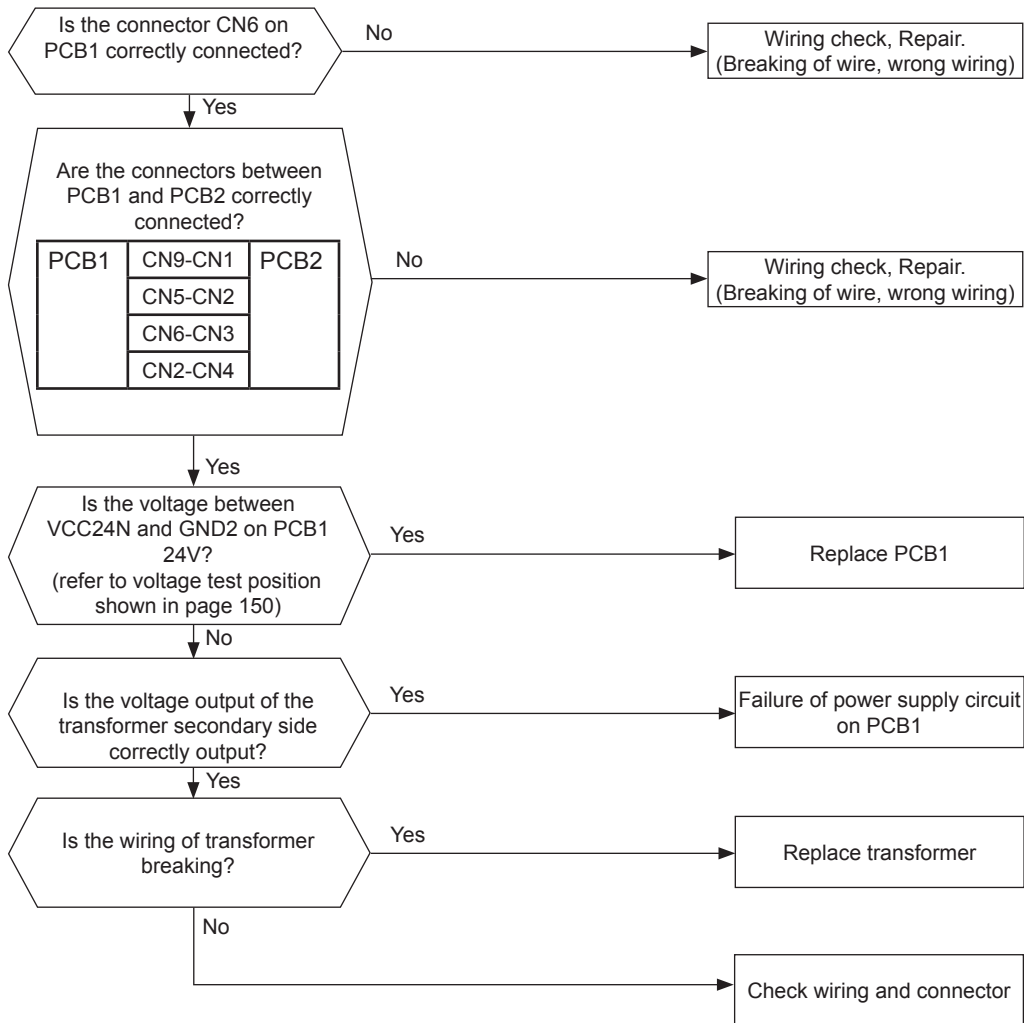


Alarm code	Description
6C	Condenser water failure (this alarm is not available in this unit)
<p>–This alarm code is displayed when the contact between #1 and #2 of CN7 is not closed.</p>	

PCB monitoring position: PCB1, CN7

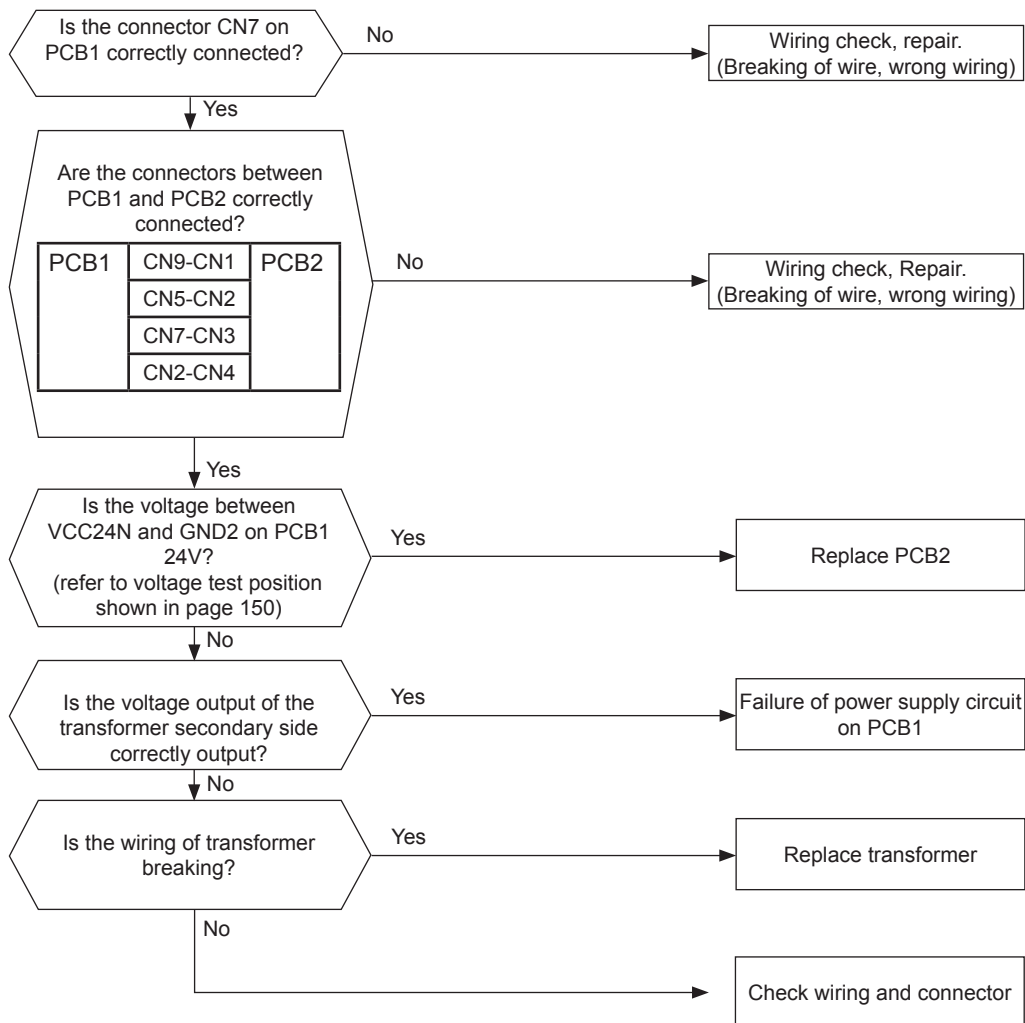

Alarm code	Description
PU (flickering)	Excessively high water temperature (compressor stop)
<ul style="list-style-type: none"> Water temperature is increased to 65°C by heat generation in pump or other heat source during only pump running (during compressor stop: during thermo off or during pump automatic operation in winter). If water temperature is decreased less than 6°C due to pump stop, it becomes normal status automatically. Since this is not an abnormality of unit, it is not saved in alarm history. <p>When this alarm happen, check the water system first. If any cause can not be detected, check the unit according to the following procedure.</p>	


PCB monitoring position: PCB2, CN3 and CN9

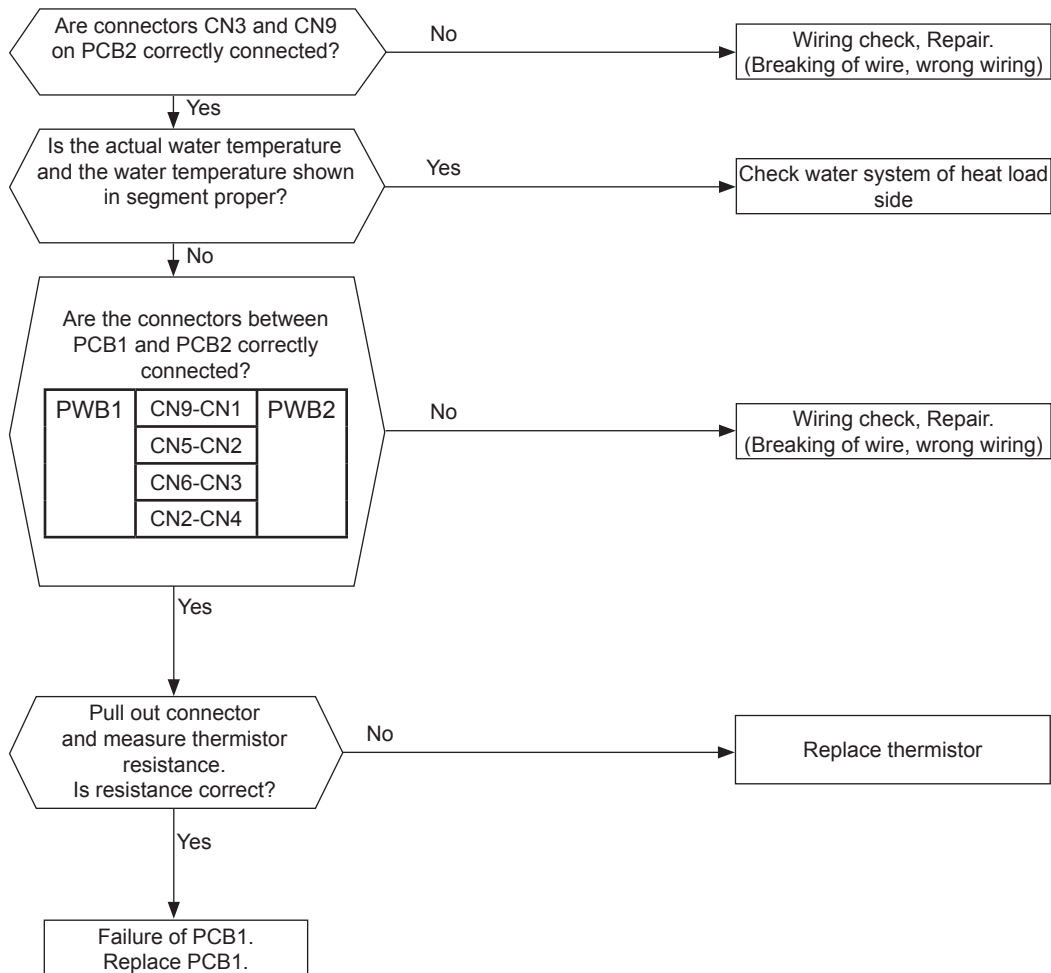

i **NOTE**
- Measure the resistance at least in 2 different points which is different more than 10 °C.

Alarm code	Description
FA, Fb	Failure of fan motor
<ul style="list-style-type: none"> This alarm is indicated when the revolution pulse output from the fan motor is the reverse revolution signal is detected. The fan motor is stopped once, and restarted after 10 seconds. If it occurs more than 10 times in 30 minutes, this alarm is indicated. 	

Alarm code	Fan Motor
<i>FA</i>	MF1
<i>Fb</i>	MF2

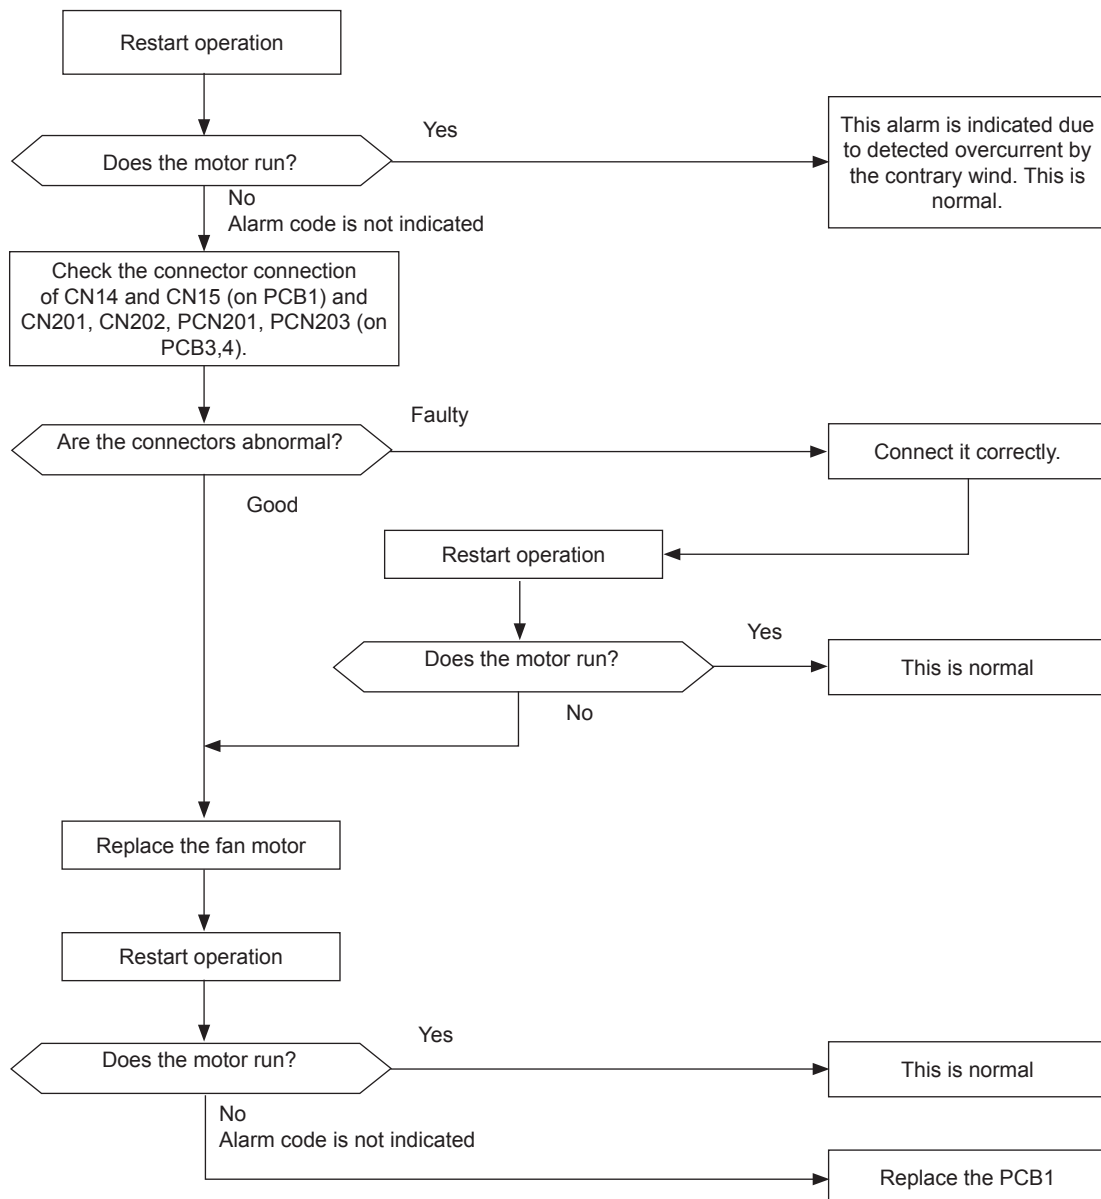

NOTE
- Check to ensure that DC Fan Motor is checked according to the item 8.4.4

In the case that the fan motor does not run even the PCB1 is replaced, replace fan inverter PCB (PCB4,5).

8.2.2. Incidents of operation

The operation of the heater is bonded to the Yutaki heat pump.

(If that is in default, the heater can be activated only if specific programming controller Yutaki is done). The heater can be activated by the controller Yutaki under request for additional power or temperature.

In case of non-functioning heater should check:

- That signals to the heat pump function.
- That fuse protection heater in a state.
- That the water pressure is at least 1 bar.
- That the water flow is assured permanently.

If the above checks are correct:

- Turn off the heater isolating fuses.
- Open the hood of connecting the heater.
- Check the good son tightening supply and command.

Press firmly on the push rearmament security heat between the 2 relays electrical power to rearm security heat. (It is possible that safety heater thermal be triggered due to a stoppage of water flow).


- Close the door connecting the heater.
- Switch on the power and restart the heat pump.

In case of non-functioning heater, remove the heater and demand its replacement.


8.3. FAILURE DIAGNOSIS METHOD

- General check of failure diagnosis.

In the case of no segment indication, unit can not operate.

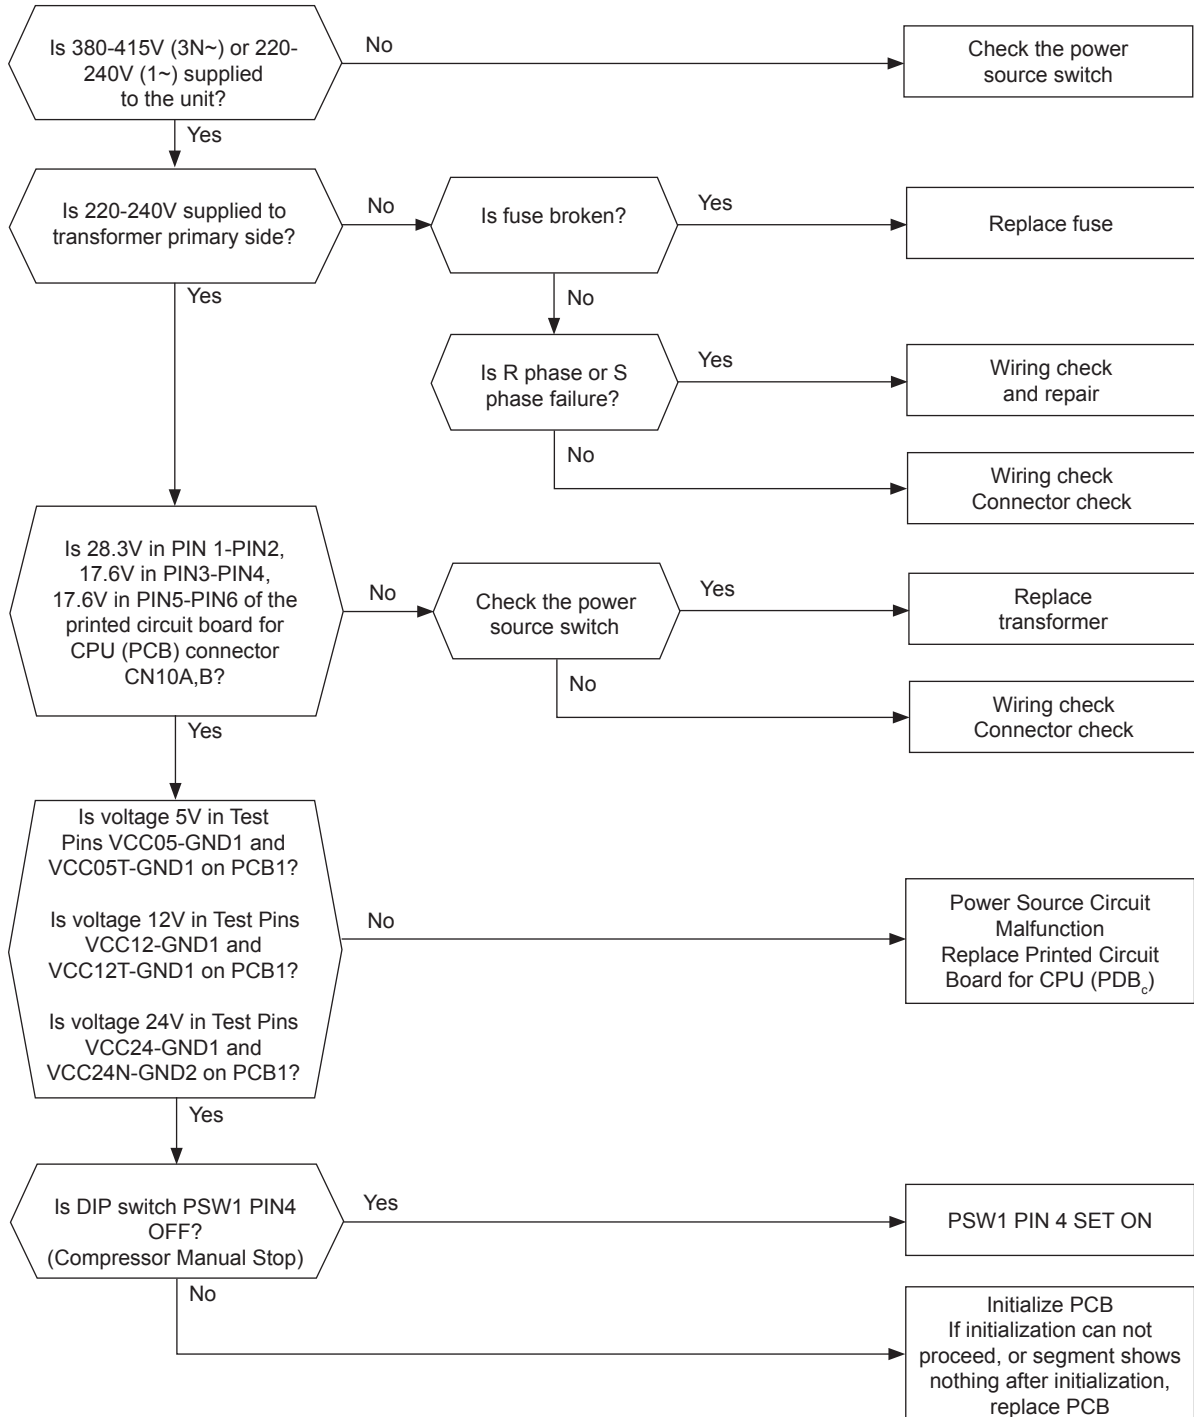


Voltage test position:

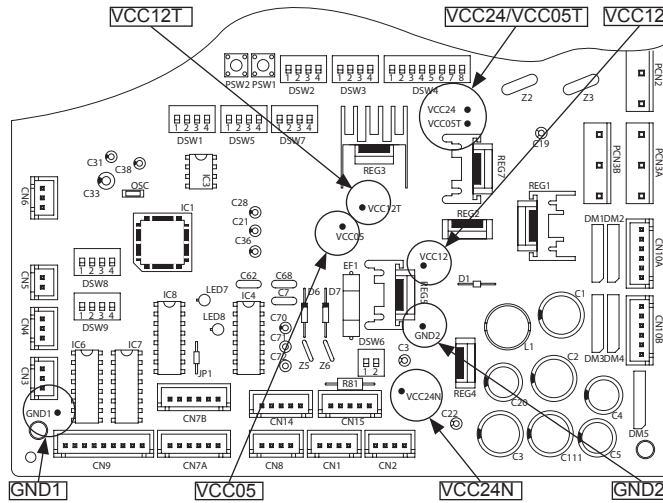


Initialization procedure

Power Supply OFF, and set DSW1-1, DSW5-2,3 ON, and DSW 5-1,4 OFF on PCB
(Record original DIP switch setting)

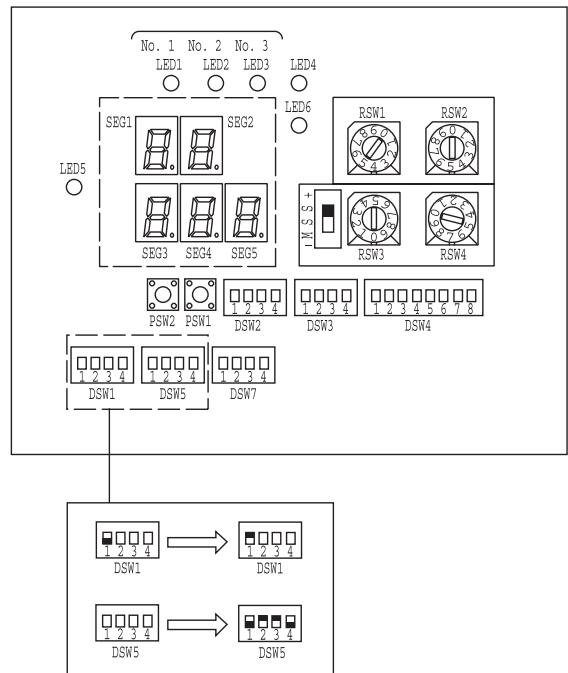


Power Supply ON, and confirm segment shows as follows:

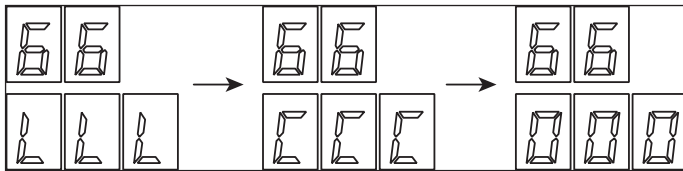

<Initialization successfully done>

If segment shows as follows, Power Supply OFF once, and Power ON again:

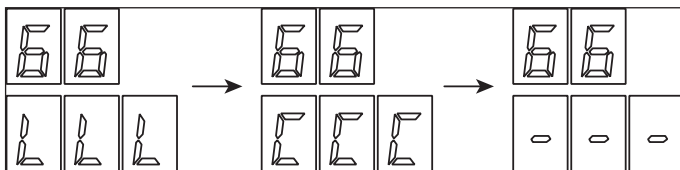


<Initialization failure>

If segment shows as "Initialization Successfully Done", Initialization Succeed. Power Supply OFF, and DSW1-1, DSW5-2,3 set original setting again. Initialization is finished. In other case, if segment shows nothing even if doing Initialization procedure, or shown Initialization Failure, PCB1 is broken and replace PCB1.

8.4. CHECKING PROCEDURE FOR MAIN PARTS

8.4.1. RHUE(3~5)AVHN. Procedure for checking the DIP-IPM.

High voltage discharge is an imperative work for replacing parts.



	WARNING
<p>- Perform this high voltage discharge work to avoid an electric shock.</p>	


1. Turn OFF the main switches and wait for three minutes. Make sure that no high voltage exists. If LED201 is ON after start-up and LED201 is OFF after turning OFF power source, the voltage will decrease lower than DC50V.
2. Connect connecting wires to an electrical soldering iron
3. Connect the wires to terminals, P and N on DIP-IPM.
=> Discharging is started, resulting in hot soldering iron. Pay attention not to short-circuit between terminal P(+) and N(-)
4. Wait for 2 or 3 minutes and measure the voltage once again. Check to ensure that no voltage is charged.

• **Inverter module checking procedure**


Internal circuit of rectified part of DIP-IPM

Non-faulty if [1] – [8] are checked and satisfied. (Measure with 1 kΩ range of a tester.)

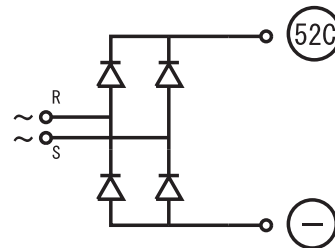
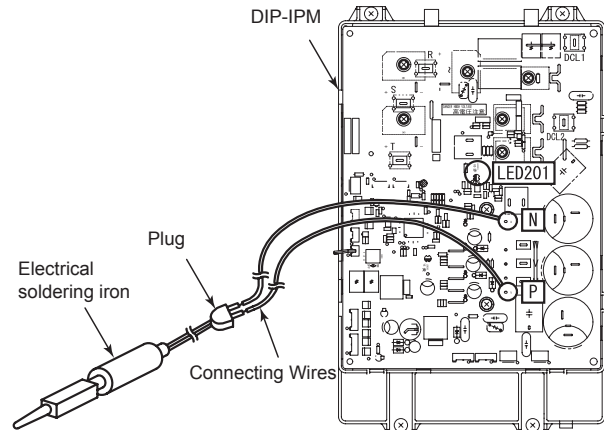


	NOTE
<p>- DO NOT use a digital tester.</p>	

1. Touch [+] of the tester to DIP-IPM 52C terminal, and [-] to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 1 kΩ or greater.
2. Contrary to [1], touch [-] of the tester to DIP-IPM 52C terminal, and [+] to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 100 kΩ or greater.
3. Touch [-] of the tester to [-] of DIP-IPM DMI (soldered part), and [+] of the tester to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 1 kΩ or greater
4. Contrary to [3], touch [+] of the tester to [-] of DIP-IPM DMI, and [-] of the tester to DIP-IPM R, S terminals to measure the resistance. Normal if all three terminals have 100 kΩ or greater.

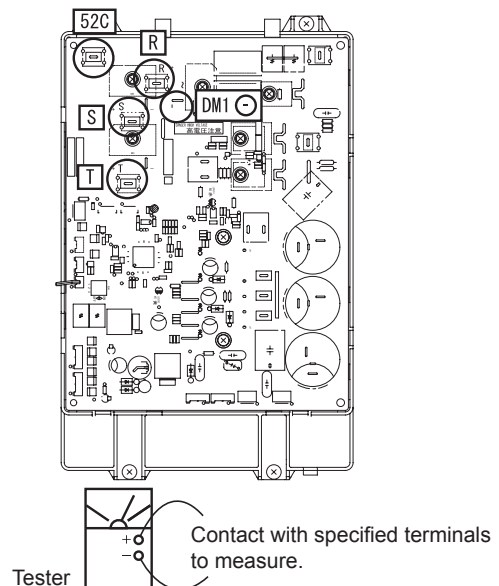

5. Touch [+] of the tester to [P] of DIP-IPM (soldered part), and [-] to DIP-IPM U, V, W terminals to measure the resistance.
Normal if all three terminals have 1 kΩ or greater.
6. Contrary to [5], touch [-] of the tester to [P] of DIP-IPM (soldered part), and [+] to DIP-IPM U, V, W terminals to measure the resistance.
Normal if all three terminals have 30 kΩ or greater.
(Resistance gradually increases during measurement.)
7. Touch [-] of the tester to [N] of ISPM (soldered part), and [+] to ISPM U, V, W terminals to measure the resistance.
Normal if all three terminals have 1 kΩ or greater.
8. Contrary to [7], touch [+] of the tester to [N] of DIP-IPM (soldered part), and [-] to DIP-IPM U, V, W terminals to measure the resistance.
Normal if all three terminals have 30 kΩ or greater.
(Resistance gradually increases during measurement.)

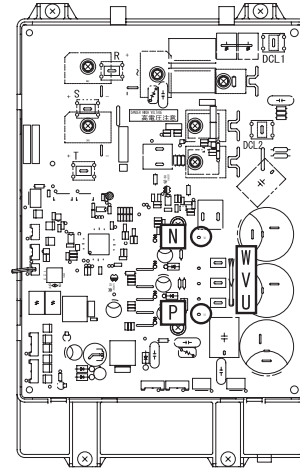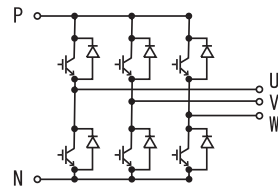




Internal circuit of ACT part of inverter module

Non-faulty if [9] – [13] are checked and satisfied.

(Measure with 1 kΩ range of a tester.)


i	NOTE
- DO NOT use a digital tester	


9. Check items [1] – [8].
10. Touch [+] of the tester to DIP-IPM DCL2 terminal, and [-] to [P] of ISPM/DIP-IPM (soldered part) to measure the resistance.
Normal if all three terminals have 100 kΩ or greater.
11. Contrary to [10], touch [-] of the tester to DIP-IPM DCL2 terminal, and [+] to [P] of DIP-IPM (soldered part) to measure the resistance.
Normal if all three terminals have 1 kΩ or greater.
12. Touch [+] of the tester to DIP-IPM DCL2 terminal, and [-] to [N] of DIP-IPM (soldered part) to measure the resistance.
Normal if all three terminals have 100 kΩ or greater.
13. Contrary to [12], touch [-] of the tester to DIP-IPM DCL2 terminal, and [+] to [N] of DIP-IPM (soldered part) to measure the resistance.
Normal if all three terminals have 10 kΩ or greater.
(Resistance gradually increases during measurement.)

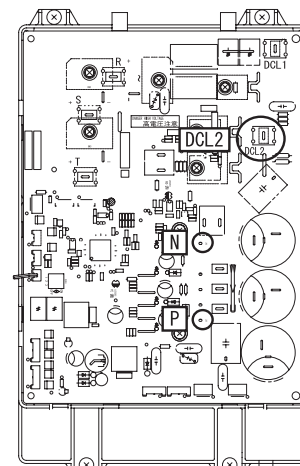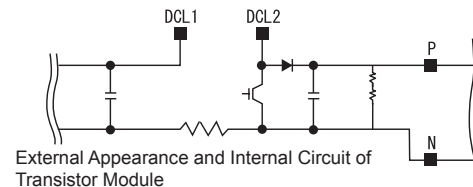

8.4.2. RHUE5AHN. Procedure for checking the ISPM.

Remove all the terminals of the ISPM before check. If items (a) to (h) are performed and the results are satisfactory, ISPM is normal. Measure it under 1 k Ω range of a tester.

	CAUTION
- Perform the high voltage discharge procedure as described.	

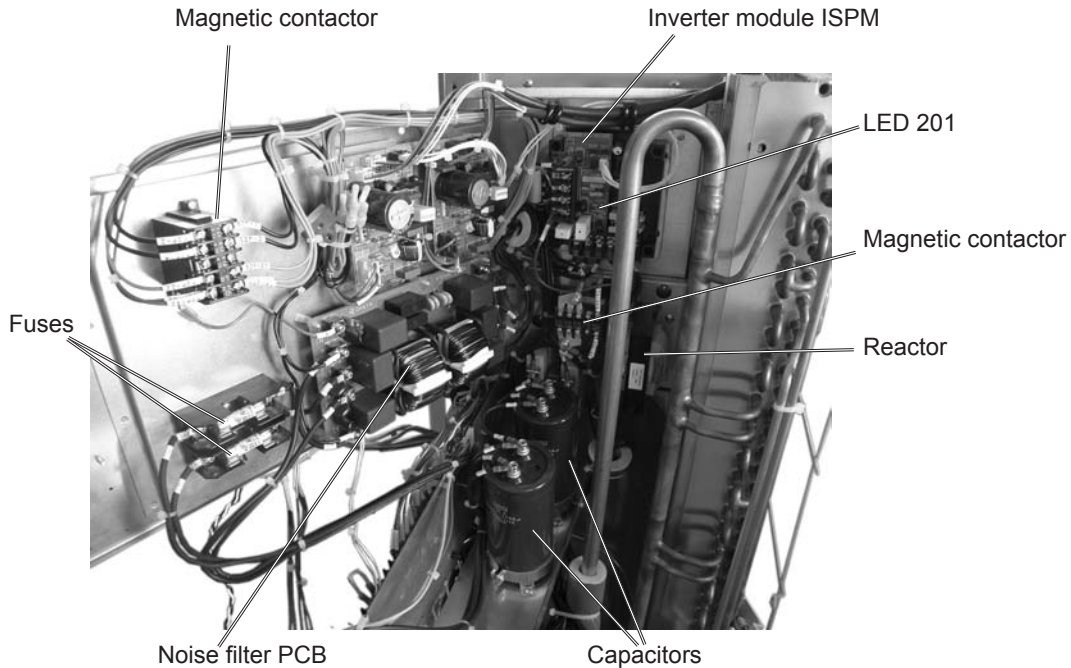


- Procedure using an analog tester:

Checking the diode module:


1. By touching the + side of the tester to the P1 terminal of ISPM and the - side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 1 k Ω , it is normal.
2. By touching the - side of the tester to the P1 terminal of ISPM and the + side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 100 k Ω , it is normal.
3. By touching the - side of the tester to the N terminal of ISPM and the + side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 1 k Ω , it is normal.
4. By touching the + side of the tester to the N terminal of ISPM and the - side of the tester to R and S of ISPM, measure the resistance. If all the resistances are more than 100 k Ω , it is normal.

Rectification parts of internal circuit of ISPM (common)

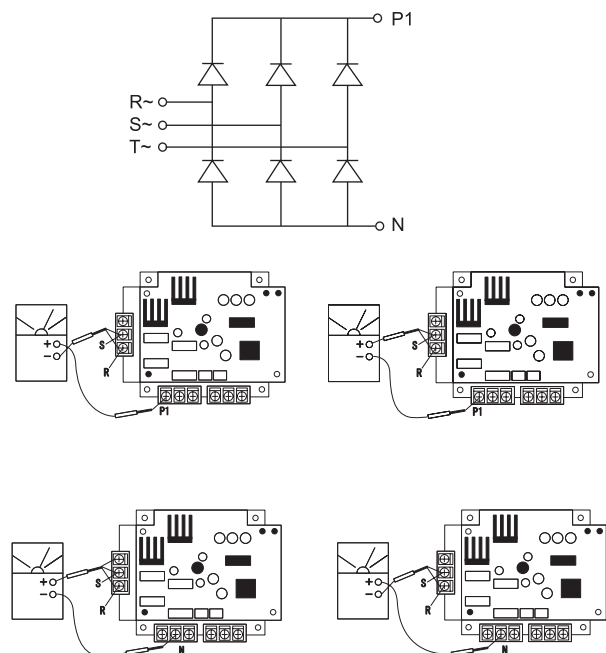

Checking the transistor module:


1. By touching the + side of the tester to the P terminal of ISPM and the - side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 1 kΩ, it is normal.
2. By touching the - side of the tester to the P terminal of ISPM and the + side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 100 kΩ, it is normal.
3. By touching the - side of the tester to the N terminal of ISPM and the + side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 100 kΩ, it is normal.
4. By touching the + side of the tester to the N terminal of ISPM and the - side of the tester to U, V and W of ISPM, measure the resistance. If all the resistances are more than 1 kΩ, it is normal.

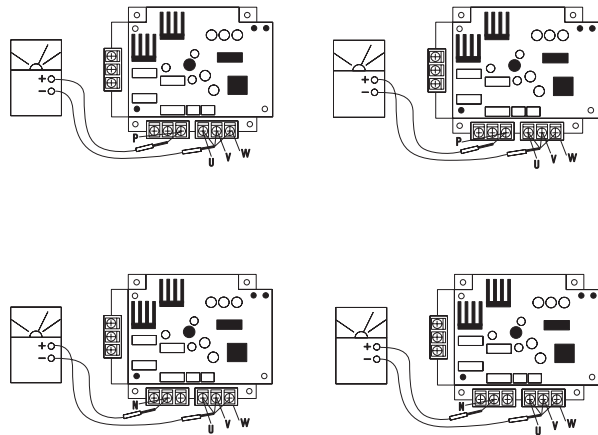

- Procedure using a digital tester:

	NOTE
- The digital tester must be able to check semiconductors and continuity.	

Based on the following scheme of ISPM with the contactor, the reactor, capacitors and the resistance, follow the next procedures.

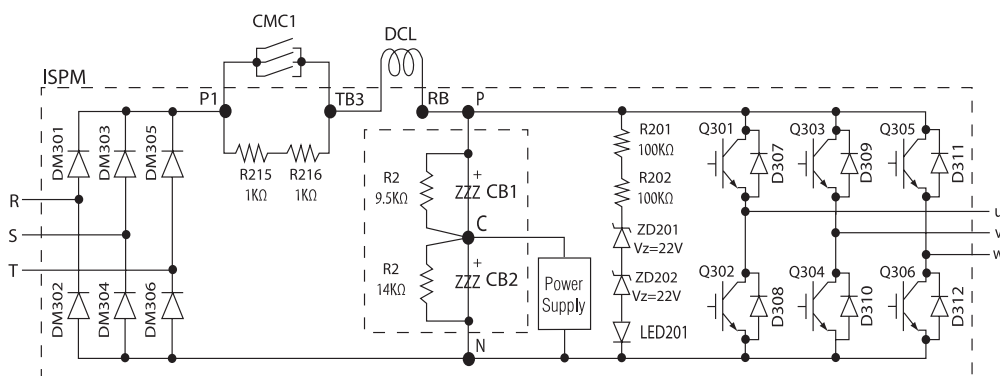


- **Checking the diode module**

1. By placing a jumper from +P1 to -RST or -N to +RST, no continuity and no variation on voltage drop should appear.
2. By placing a jumper from P1 to +RST or +N to RST: continuity and variation on voltage drop (nearly 0,365) should be displayed, and the same value in all cases. Not the same value means that the diode module is damaged.

• **Checking the transistor module**


1. By bonding +P to -UVW or -N to +UVW, no continuity and no variation on voltage drop should appear.
2. By bonding -P to +UVW or +N to -UVW: continuity and variation on voltage drop (nearly 0,405) should be displayed, and the same value in all cases. Not the same value means that the diode module is damaged.

8.4.3. Checking capacitors CB1 & CB2.

	DANGER
<p>- Before installing the electrical wiring or before performing a periodical check, turn OFF the main switch of the unit. For safety reasons, be sure that the fan is stopped.</p> <p>- Prevent from touching the capacitors' terminals. High voltage should be present before discharging them.</p> <p>- Turn off the unit and wait for the LED 201 to be off before touching the components.</p>	

If it's possible, check the capacitance of each capacitor : $4700\mu\text{F} \pm 20\%$ (between $3760\mu\text{F}$ to $5640\mu\text{F}$).

A visual check of the pressure valve of capacitors must be done to ensure it's integrity:

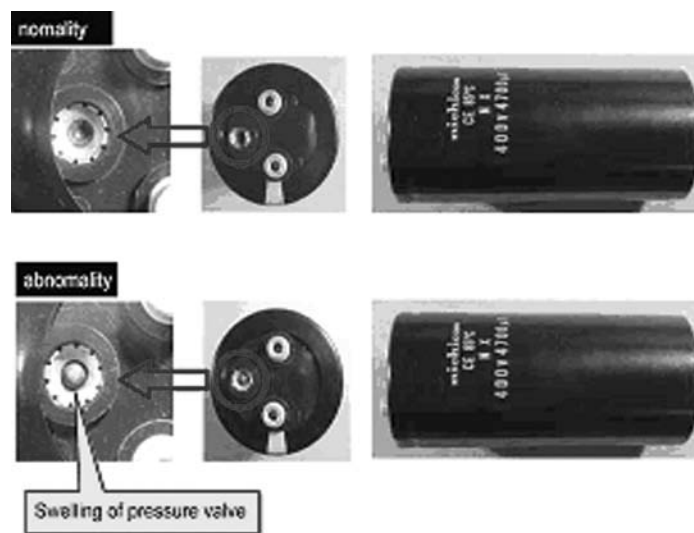

It is not recommended to check tension.

$PN = \text{Power source} \times \sqrt{2}$, $PC=CN$ is nearly equal to $PN/2$.

R1 & R2:

1) If the value is different:


- Capacitor could be damaged by overload.
- 04 alarm could be displayed if low supply voltage (CN) for ISPM control part is present.

2) $R1 = 9.5\Omega$ & $R2 = 14.0\Omega$. If these values are different, the capacitors will be not properly charged.

Resistance between P1 & TB3 = $2k\Omega$ (white resistance in the ISPM).

In case that Mg. SW 52C (CMC1) is not ON, the compressor current will travel through these resistances, and they will be broken. Mg. SW 52C (CMC1) should be checked. Check the resistance between the primary and secondary terminal where the contact point is melted for Mg. SW 42C. If there is continuity, the contact is melted and 52C is broken (NG).


Reactor resistance can be measured between TB3 and RB = 0,2Ω. Checking this component is not necessary.

	NOTE
<ul style="list-style-type: none"> - Noise filter does not affect ISPM directly, so is not necessary to check it when ISPM fails. - Both digital or analog testers are valid to check the values. 	

8.4.4. Fault diagnosis of DC fan motor.

About DC fan motor fault diagnosis:

When ISPM/DIP-IPM is faulty and Alarm 53 appears, the fan motor may also be damaged. To prevent ISPM/DIP-IPM damage which may result from operation combined with a faulty fan motor, check also if the fan motor is not damaged when ISPM/DIP-IPM is replaced

	CAUTION
<ul style="list-style-type: none"> - Turn OFF main power before start working. - Working and checking with the power ON may disturb correct diagnosis and may result in failure. 	

DC motor(s) included in different models:

Model	Pieces
RHUE3AVHN	2
RHUE4AVHN	2
RHUE5AVHN	2
RHUE5AHN	2

- **Fault diagnosis procedure**

1. Remove fan motor connectors from the control PCB ISPM or DIP-IPM and turn the fan motor shaft by hand.

Normal	Fan motor shaft turns smoothly
Faulty:	No continuous rotary torque movement felt when turning the motor by hand. This occurs because the internal magnet of the fan motor breaks the movement when the internal electronic circuit of the fan motor has a short-circuit fault

2. Measure the fan motor resistance using a tester.

Measurement procedure	
1.	Remove the fan motor connector from the control PCB, ISPM or DIP-IPM.
2.	Connect the black test lead of the tester to the black wire pin of the fan motor connector
3.	Connect the red test lead to the wire connector pin to be checked
Results	
Normal:	Observed values will be close to the normal values in the table below
Faulty:	Observed values will be deviated from the normal values in the table below. Generally an open-circuit fault shows ∞ , and a short-circuit fault shows several Ω -k Ω .)

Internal electronic circuit fault of the fan motor including short-circuit and breakage can be checked.

Model	Motor model	Wire color for checking (Normal value) Ω			
		Red-black	White-black	Yellow-black	Blue-black
RHUE(3~5)A(V)HN	SIC-68FV-D851-7.8	1 M Ω or greater	42-78 K Ω	168-312 K Ω	1 M Ω or greater

(*) Values are shown for referential purpose. While actual values may vary depending on the type of the tester; any tester can be used to determine any short-circuit or breakage based on ∞ or several Ω /several k Ω or 0 Ω .

- Other parts

Part name	Unit models	Model code	Resistance (Ω)
Solenoid valve for gas bypass		105-52-52 (50Hz)	1540.00 at 20 °C
Solenoid valve for liquid injection		105-52-52 (50Hz)	1540.00 at 20°C
Reversing valve		STF-01AJ502D1 (50Hz)	1435.00 at 20°C
Compressor motor	RHUE3.4AVHN	EK306AHD-27A2	0.24 at 20°C
	RHUE5AVHN	EK406AHD-36A2	0.20 at 20°C
	RHUE5AHN	EK405AHD-36D2	0.239 at 20°C




9. SPARE PARTS

CONTENTS

9.1. RHUE(3~5)AVHN	207
9.2. RHUE5AHN.....	208
9.3. RHUE(3~5)A(V)HN	209


9.1. RHUE(3~5)AVHN

◆ Cycle and structural parts

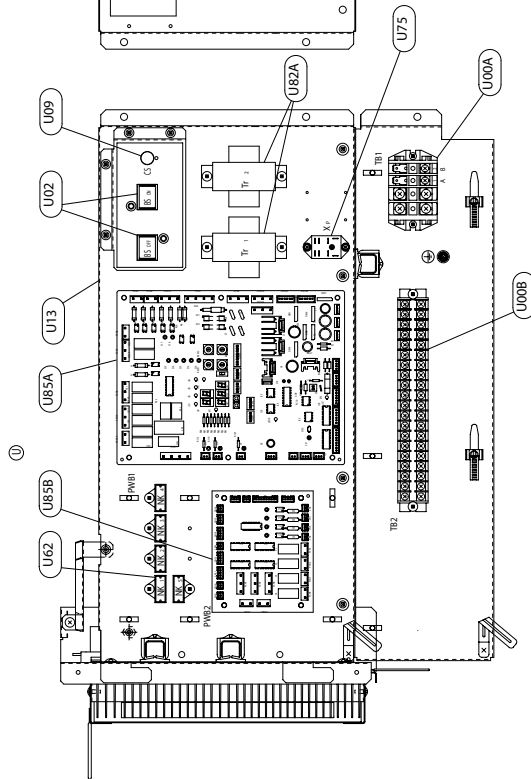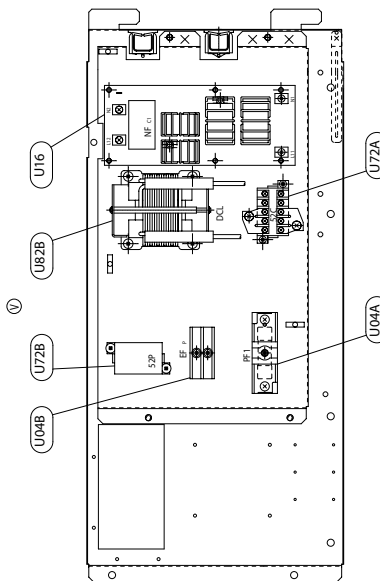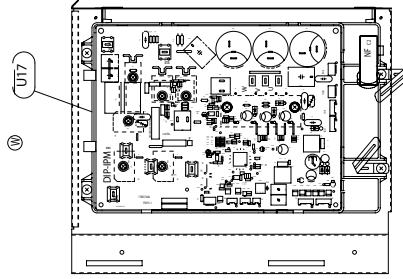


PRODUCT CODE	MODEL NAME
9E311100	RHUE3AVHN, 1~230V 50Hz
9E411100	RHUE4AVHN, 1~230V 50Hz
9E511100	RHUE5AVHN, 1~230V 50Hz

No	DESCRIPTION	PART#	Qty.	Qty.	REMARKS
U00A	Terminal Board	E01818	1	1	
U00B	Terminal Board	EC00494	1	1	
U02	Push Button Switch	EC00551	1	1	40A
U04A	Fuse	P24776	1	1	50A
U04B	Fuse	P24728	1	1	3A, Power Fuse for Pump
U09	Snap Switch	EC00003	1	1	
U13	Electrical Wiring Diagram	EC00497	1	1	Assembly (Steel Plates+Components+Harness)
U13	Electrical Wiring Diagram	EC00498	1	1	Assembly (Steel Plates+Components+Harness)
U13	Electrical Wiring Diagram	EC00499	1	1	Assembly (Steel Plates+Components+Harness)
U16	Noise Filter	P26446	1	1	50A
U17	Inverter Fin Assy	E01821	1	1	DIP-IPM (17A)
U17	Inverter Fin Assy	E01822	1	1	DIP-IPM (25A)
U2A	Spark Killer	P45366	5	5	
U2A	Spacer	EC00510	4	4	
U65A	Magnetic Contactor	P24721	6	6	
U72B	Magnetic Contactor	EC00515	1	1	Contactor for Pump
U75	Aux Relay	C39550	1	1	
U82A	Transformer	EC00516	2	2	
U82B	Reactor	P26450	1	1	
U85A	Printed Circuit Board	E01828	1	1	PCB Main (CO041 Assy)
U85B	Printed Circuit Board	EC00535	1	1	PCB Main (CO041 Assy)
U85B	Printed Circuit Board	EC00536	1	1	I/O PCB (CO011 Assy)

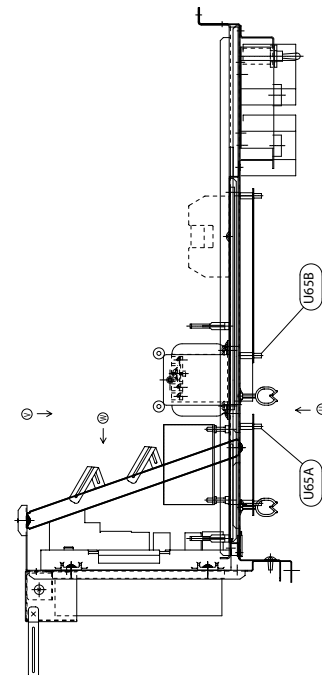


9.2. RHUE5AHN

◆ Cycle and structural parts

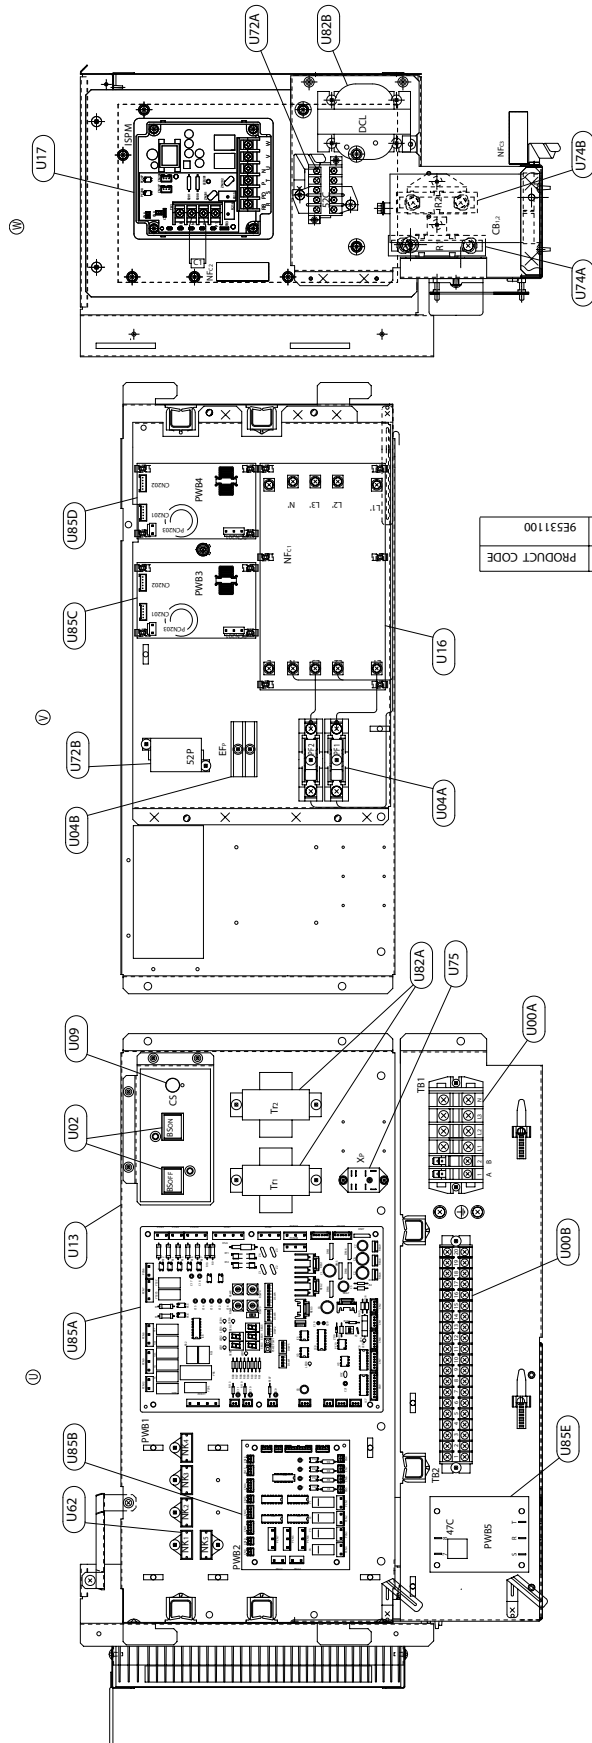

MODEL NAME	RHUE5AHN, 3~400V 50HZ
PRODUCT CODE	9E531100


No	DESCRIPTION	PART#	QTY	REMARKS
U000	Terminal Board	EC00493	1	
U008	Terminal Board	EC00494	1	
U002	Push Button Switch	EC00551	1	
U044	Fuse	E00810	2	20A
U048	Fuse	E00003	1	3A, Power Fuse for Pump
U09	Snap Switch	EC00552	1	
U13	Electrical Wiring Diagram	EC00500	1	Assembly (Steel Plates+Components+Harness)
U14	Capacitor	E01820	2	2700µF
U16	Noise Filter	E01430	1	30A
U17	Inverter Module	E01823	1	ISPM
U62	Spark Killer	P14366	5	
U65A	Spacer	EC00510	4	
U65B	Spacer	EC00511	6	
U72A	Magnetic Contactor	EC00515	1	Contactor for Pump
U74B	Beater	P22791	1	
U74B	Beater	P22796	1	
U75	Aux Relay	C3950	1	
U82A	Transformer	EC00516	2	
U82B	Beater	P24381	1	
U85A	Printed Circuit Board	EC00535	1	PCB Main (CO041 Assy)
U85B	Printed Circuit Board	EC00536	1	I/O PCB (CO011 Assy)
U85C	Printed Circuit Board	E01365	1	PCB2 For Motor 1 (PO024 Assy)
U85D	Printed Circuit Board	E01366	1	PCB2 For Motor 2 (PO024 Assy)
U85E	PPP Relay	E01367	1	Reversing Phase Protection

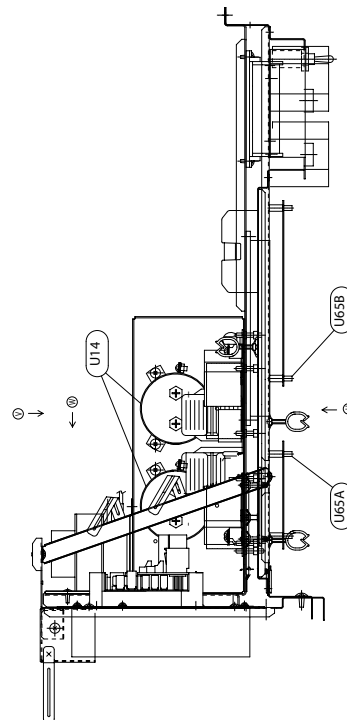

9.3. RHUE(3~5)A(V)HN

◆ Cycle and structural parts


No	DESCRIPTION	PART#	Qty.	QTY.	REMARKS
U00G	Acoustical Cover46	EC00547	1	1	Compressor Jacket
U01	Pressure SW	P25043	1	1	Protection
U15A	Thermistor	NI223	1	1	THHWI
U15B	Thermistor	NI223	1	1	THMWO
U15C	Thermistor	P25255	1	1	THMBA
U15D	Thermistor	E01431	1	1	THMBA
U15E	Thermistor	E01431	1	1	THMBA
U15F	Thermistor	E01421	1	1	THMec
U15G	Thermistor	E00695	1	1	THMs
U19A	High Pressure Sensor	P26013	1	1	Pd
U19B	Low Pressure Sensor	P26014	1	1	P5
U21A	Expansion Valve	P24975	1	1	
U21B	EXPV Coil	EC00501	1	1	
U21C	Expansion Valve	EC00502	1	1	
U21D	EXPV Coil	P26009	1	1	
U21E	Capillary Assy	EC00550	1	1	
U28	Check JA	P25044	3	3	
U29	Strainer	P25037	3	3	
U30C	Silencer	EC00503	2	2	
U32A	VP-RUBBER 2	P13109	2	2	
U32B	VP-RUBBER 1	P13308	4	4	
U34A	Front Protector Net	P26799	2	2	Outlet (for Fan)
U34B	Protector Net L Assy	E01796	1	1	Inlet (for Condenser)
U40	Air Heat Exchanger	EC00504	1	1	Assembly
U41	Water Heat Exchanger	EC00506	1	1	
U51	Propeller Fan	EC00507	1	1	
U58A	Accumulator	P27001	2	2	
U58B	L-Block	EC00508	1	1	
U58C	U-Block	EC00509	1	1	
U58D	H-Cover	EC00543	3	3	
U65F	Rubber Cap	EC00545	1	1	
U65F	TH Plate	EC00546	1	1	
U70	Compressor	EC00512	1	1	EK306AHD-27A2
U70	Compressor	EC00513	1	1	EK406AHD-36A2
U70	Compressor	EC00514	1	1	EK405AHD-36D2
U71A	Fan Motor	P27040	1	1	74W
U71B	Fan Motor	E01825	1	1	
U77A	Solenoid Valve	P25246	1	1	
U77B	Solenoid Valve	P25246	1	1	
U77C	Oil Filter Solenoid valve	P25230	2	2	
U79	4-Way Valve	P26337	4	4	40W
U81	Oil for 4-Way Valve	P26678	1	1	
U82	Air Purge	EC00554	1	1	
U88A	Service Cover L Assy	EC00519	1	1	Assembly
U88B	Rear Cover L Assy	EC00520	1	1	Assembly
U88C	Upper Cover Assy	EC00521	1	1	Assembly
U88D	Shroud L	E01810	1	1	
U88E	S-Cover B Assy	EC00522	1	1	Assembly
U88F	Pipe Cover B	P27003	1	1	
U88G	FrameB	EC00537	1	1	
U88H	FrameB	EC00538	1	1	
U88I	FrameB	EC00539	1	1	
U88K	Partition Assy	EC00540	1	1	
U88K	Partition Assy	EC00541	1	1	Assembly
U88M	Motor Clamp L Assy	EC00544	1	1	Assembly

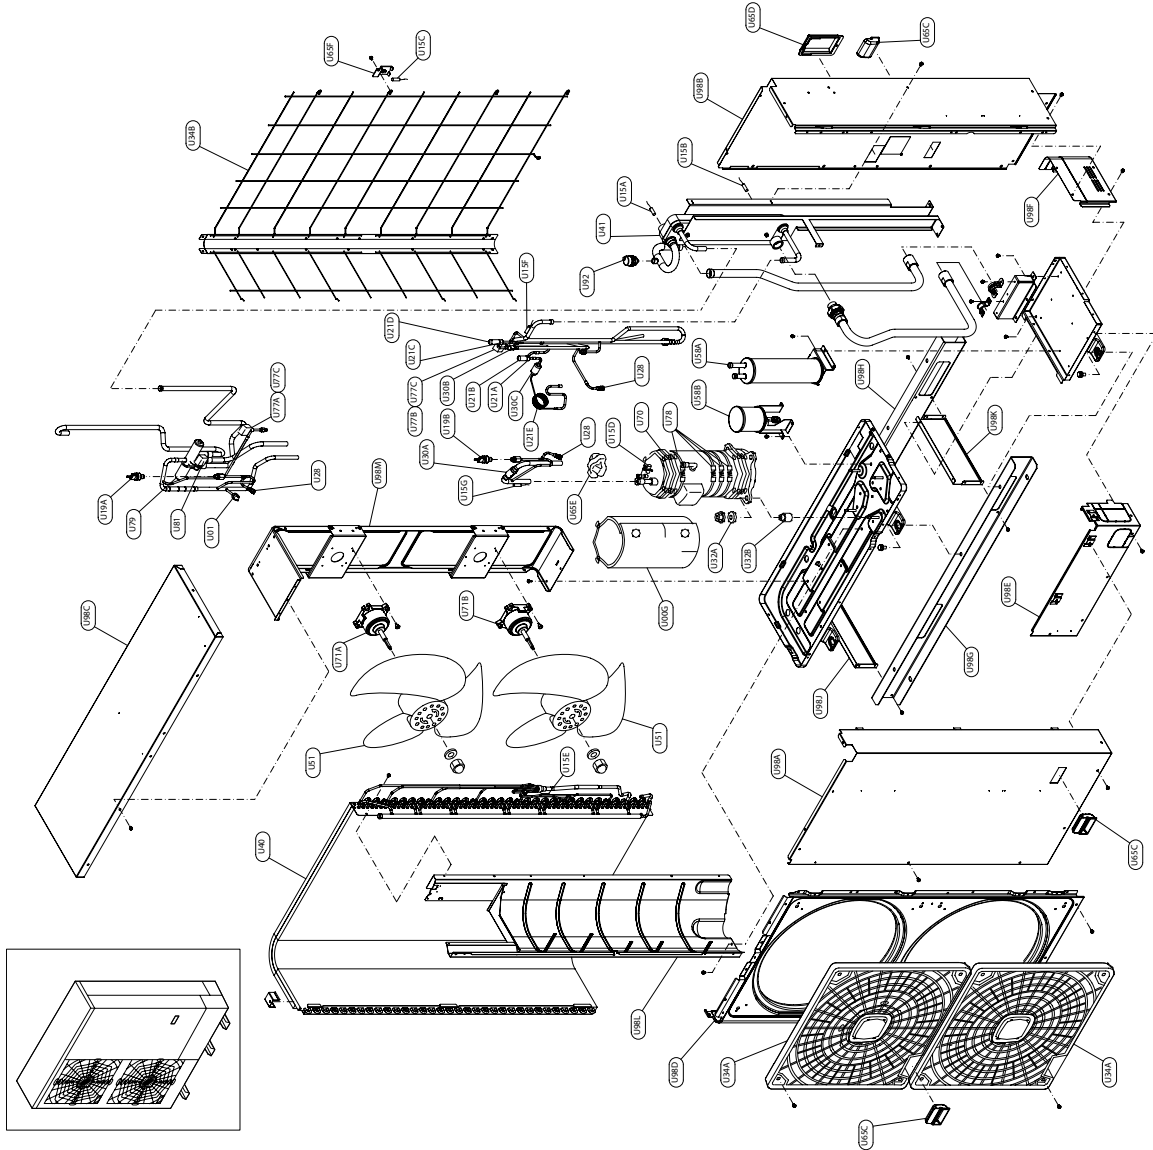


10. SERVICING

CONTENTS

10.1. RHUE(3~5)A(V)HN	212
10.1.1. Removing service cover	212
10.1.2. Removing air outlet grille.....	212
10.1.3. Removing upper cover	213
10.1.4. Removing the lower part of service panel and rear panel.....	213
10.1.5. Removing Yutaki fan motor	214
10.1.7. Removing the compressor	215
10.1.6. Mounting Yutaki fan motor.....	215
10.1.8. Removing high pressure switch	218
10.1.9. Opening electrical box (P-mounting plate)	219
10.1.10. Removing the coils for the reversing and solenoid valves	220
10.1.11. Removing electronic expansion valve coils.....	221
10.1.12. Removing pressure switches	222
10.1.13. Removing reversing valve	223
10.1.14. Removing expansion valve	223
10.1.15. Removing solenoid valve	224
10.1.16. Removing electrical components	225
10.1.17. Removing inverter components	226
10.1.18. Removing the ISPM	227
10.1.19. Removing the DIP-IPM.....	228
10.1.20. Removing the electrical-noise filter	229
10.1.21. Removing other electrical components	230


	DANGER
<ul style="list-style-type: none">- Before performing any of the service operations described in this chapter, turn all the main switches off and place security lockers or convenient warning indicators in order to prevent them from turning on accidentally.- In case of blocked or stucked parts, use appropriated tools and eventually lubricants to release them.- In case of sharped edged parts, as covers, use security gloves to avoid getting injured.- When performing brazing work, besides security gloves it is a must to wear convenient eye protection.- Check and be sure that the LED201 (Red) located on the inverter module is OFF during the whole electrical maintenance operation.- Do NOT touch the electrical components when the LED201 (Red) located on the inverter module is ON to avoid electrical shock.- Do not pour water into the unit. These products are equipped with electrical parts. If water contacts with electrical components then it will cause a serious electrical shock.- Do not touch or adjust safety devices inside the units. If these devices are touched or adjusted, it may cause a serious accident.- Do not open the service cover or access the unit without disconnecting the main power supply.- In case of fire turn OFF the main switch, put out the fire at once and contact your service contractor.	


	NOTE
<ul style="list-style-type: none">- All compressors are connected by brazing. Check whether there are flammable things around when using a burner for pipe connections, if not, oil existing pipe inside may ignite.- Do not expose the refrigerant cycle to the atmosphere for a long period in order to avoid mixing the water and foreign particles into the refrigerant cycle. After removing compressor, replace it quickly. If exposed for a long period, seal the suction pipe and discharge pipe.- Remove the cap for the compressor just before replacing the compressor. Before mounting the compressor, seal the suction pipe and discharge pipe with a tape to protect the compressor from foreign particles. Remove the tape at pipe connection.- Do not use any sprays such as insecticide, lacquer, hair spray or other flammable gases within approximately one (1) meter from the system.- If circuit breaker or fuse is often activated, stop the system and contact your service contractor.- Do not put any strange material (sticks, etc) into the air inlet and outlet. These units have high speed rotating fans and it is dangerous that any object touches them.	

10.1. RHUE(3~5)A(V)HN


10.1.1. Removing service cover

Remove the main parts according to the following procedures.

 NOTE
<ul style="list-style-type: none"> - Screws are represented as black points in the figure besides. To reassemble, perform the procedures in reverse. - To prevent contamination of the refrigerant with water or foreign particles, do not expose open pipes to atmosphere for long periods. - If necessary, seal pipe ends using caps or tape.

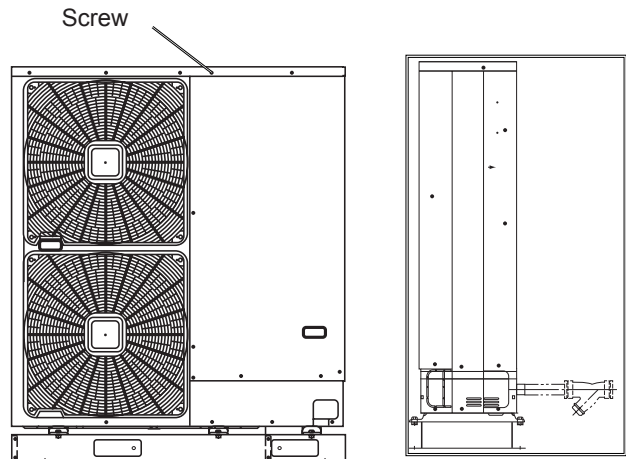


1. Remove the nine (9) fixing screws of the upper cover.
2. Remove the fourteen (14) fixing screws of the front cover.
3. Slide the service cover downward and remove it.
4. Pay attention of not falling off the service cover.

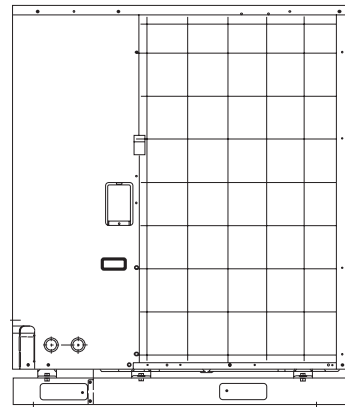


10.1.2. Removing air outlet grille

1. Remove the eight (8) fixing screws.
2. Lift the air outlet grille holding the lower parts.
3. Release the extruded hook of the air outlet grille from the shroud.

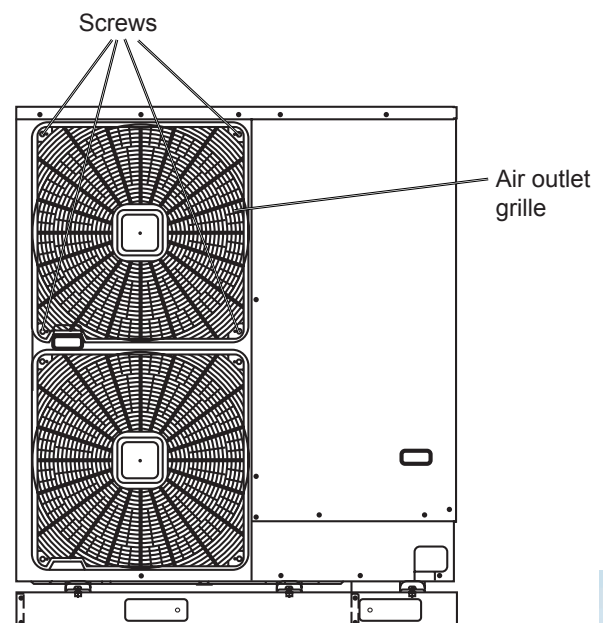

10.1.3. Removing upper cover

1. Remove the nine (9) screws fixing the upper cover
2. Lift the upper cover upwards.

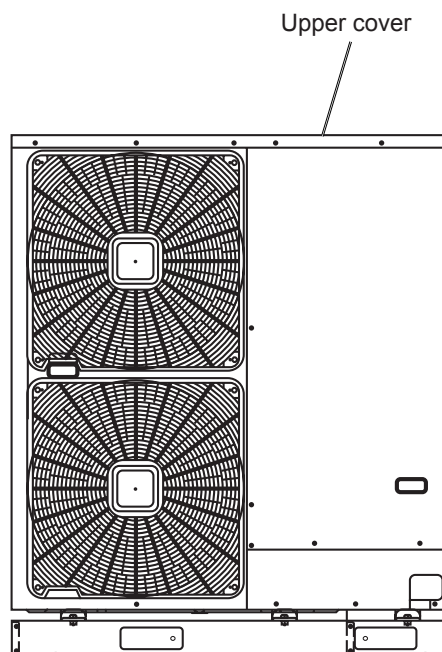


10.1.4. Removing the lower part of service panel and rear panel

1. Remove the four (4) fixing screws at the lower part of the service panel and remove the lower part of the service panel by pulling towards the front side. Remove the upper cover according to section "Removing upper cover" in this chapter.




NOTE

- The length of fixing screws for the Yutaki temperature thermistor is different than all other screws in the machine, as an assembly poka-yoke.

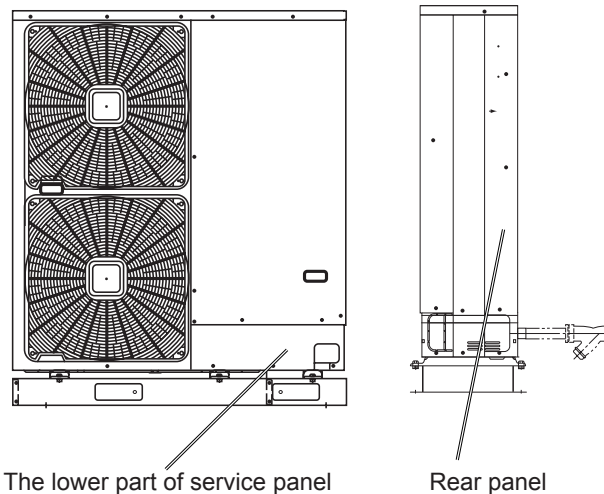

10.1.5. Removing Yutaki fan motor

1. Remove the service cover according to the section "Removing service cover" in this chapter.
2. Remove the air outlet grille according to the section "Removing air outlet grille" in this chapter.
3. Remove the upper cover according to the section "Removing upper cover" in this chapter.
4. Disassembly the fan blade by removing the cap nuts and washers fixing the fan blade onto the motor shaft.

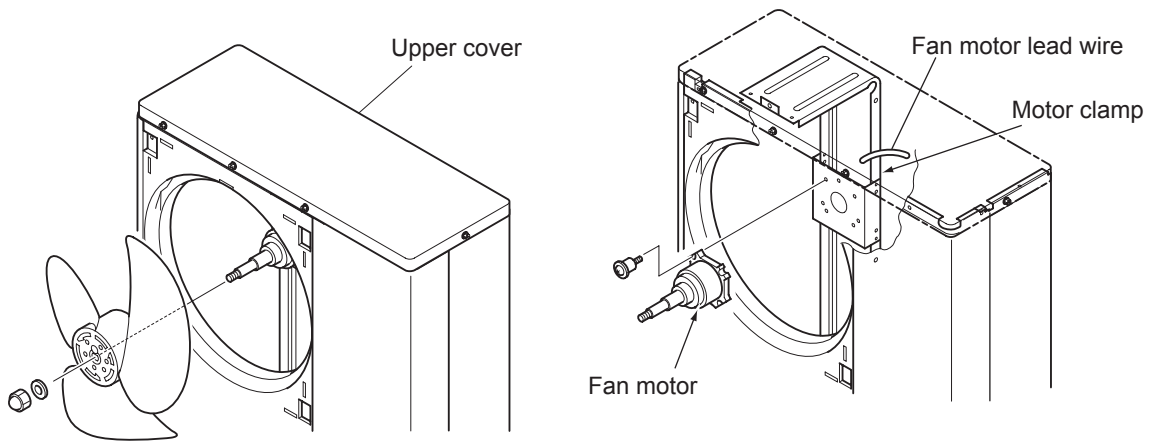


Fan components and technical features		
Power supply		380V/60Hz 380-415V/50Hz
Fan motor comp. No.	DC fan motor	PCB5 PCN203 (1, 3) CN201 (2, 3, 4)
	AC fan motor	PCB3 PCN404(White)
Screw for motor fixing	DC Fan Motor	M6 Screw with spacer x 4
	AC Fan Motor	M8 Screw x 4
Motor clamp and wiring fixing position		

10.1.6. Mounting Yutaki fan motor

1. Remove the service cover according to the section "Removing service cover" in this chapter.
2. Remove the air outlet grille according to the section "Removing air outlet grille" in this chapter.
3. Remove the upper cover according to the section "Removing upper cover" in this chapter.
4. Disassembly the fan blade by removing the cap nuts and washers fixing the fan blade onto the motor shaft.

If the fan blade get stuck when trying to remove it, use a puller to disassembly the fan.

5. Remove the fan motor connector from the PCB3 and PCB5 at the electrical box.
 - Cut off the cable tie that fixes the lead wire of the fan motor.
 - Remove the four (4) screws that fix the motor to the motor clamp.
6. Fix the motor wire with the cable tie or the cord clamp. If not, it may cause the disconnection of the fan motor's lead wire.
7. In order to avoid cutting edges, mount the rubber bush at the partition plate when inserting the motor wire through it. If not, it may cause the disconnection to the fan motor's lead wire.

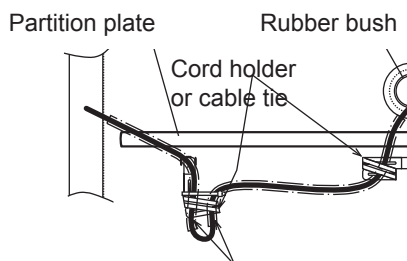

Install DC motor to this position facing down the trap



NOTE

- When assembling the motor, ensure the cables section directly downwards. Fix the protection tube edge end downwards to ensure water from keeping inside it
- Fix the motor wires onto the motor clamp with a cable tie to prevent them from colliding the fan blades.
- Assembling the fan blade: Insert the skidding protection part of fan boss in accordance with the cutting part of the motor shaft, and fix the screw after dismantling the screwed part of the shaft. (Tightening Torque of 20 N.m)
- When connecting the motor wire, check to ensure that the colors of the connectors on the PCB3 and PCB5 are matched with the wires.
- Fix the air outlet grille firmly to the shroud.

10.1.7. Removing the compressor


1. Remove the service cover and the lower part of the service panel according to the section "Removing service cover" and the section "Removing lower part of service panel and rear panel". In case that the Yutaki is installed close to a wall closely, separate first the Yutaki from the wall.
2. Collect the refrigerant from the liquid stop valve, the gas stop valve and the check joint at the piping.
3. Open the sound insulation cover wrapped around the compressor and remove the terminal box cover at the compressor fixed by one (1) screw. Disconnect the compressor wires in the terminal box and remove the sound insulation cover.




NOTE


- Check and take note of each terminal number and indications for its correct connection at the reassembling process. If wires are connected in incorrect order, it will lead to a compressor failure.

4. Remove the rubber cap and the thermistor on the top of the compressor.

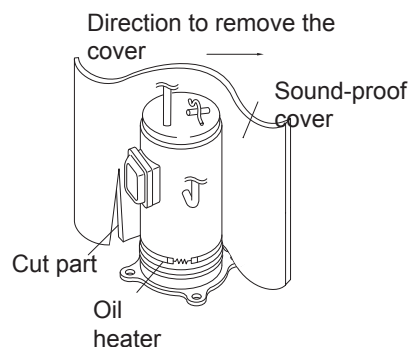

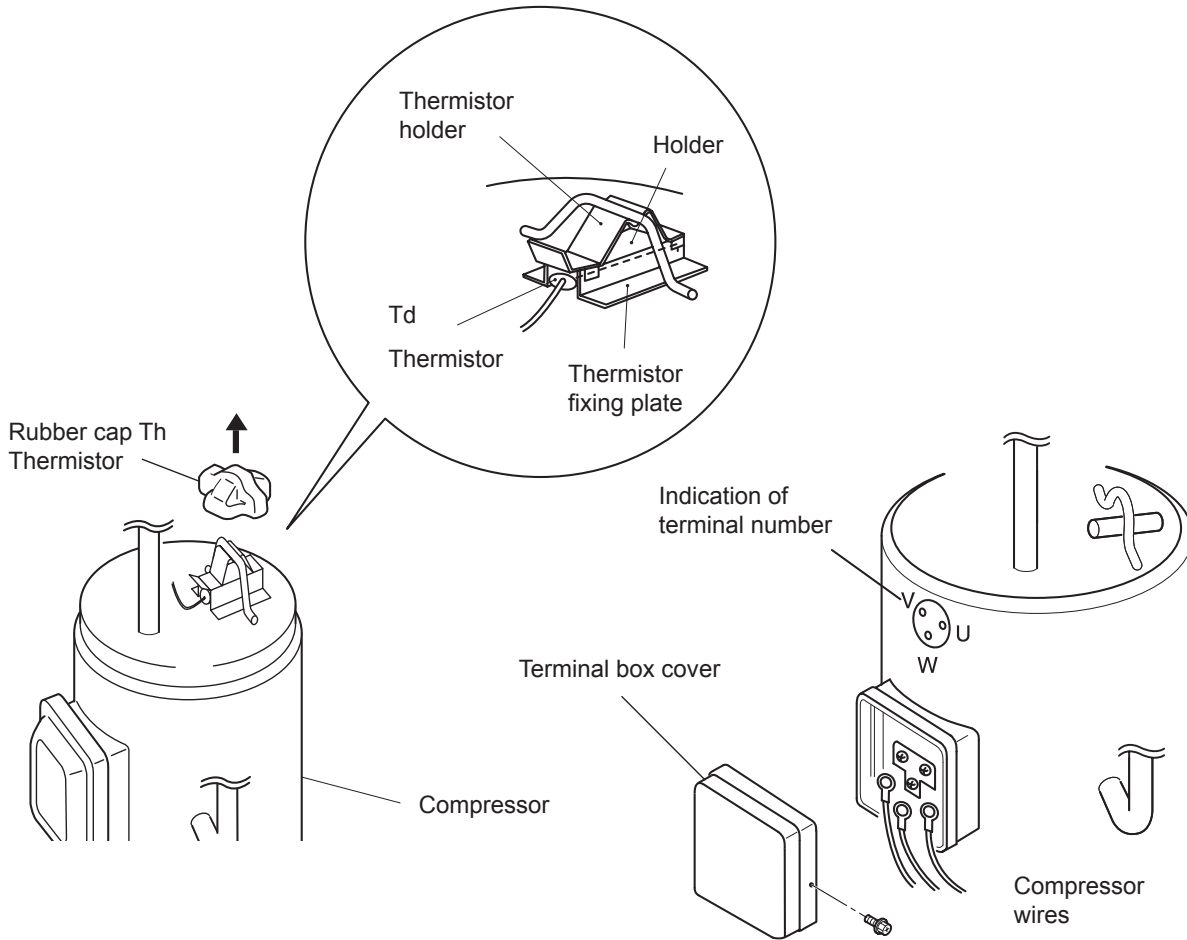

Details for compressor terminals

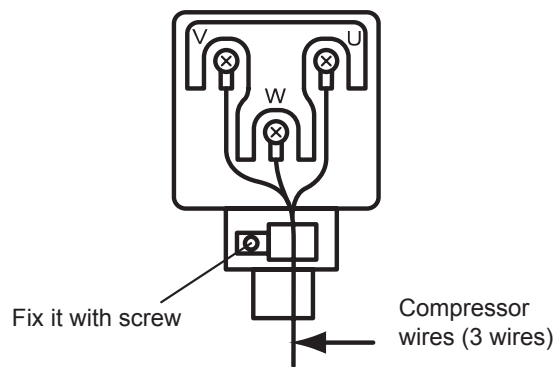

NOTE

- Do not expose the refrigerant cycle to the atmosphere for a long period in order to avoid water and foreign particles entering into the refrigerant cycle. After removing the compressor, replace it quickly. If it is exposed to the ambience for a long period, seal both suction and discharge pipes.
- Remove the cap for the compressor just before replacing the compressor. Before assembling the compressor, seal the suction pipe and discharge pipe with tape to protect the compressor interior from foreign particles. Remove the tape when connecting the pipes.

WARNING


- All compressor pipes must be brazed to be connected to the refrigerant circuit. Ensure that all the surrounding is free of flammable objects and liquids when performing piping brazing work.

5. Remove the crankcase heater. (Oil heater on the lower case).
6. Remove the suction pipe and the discharge pipe from the compressor. Isolate the wires and electrical components to protect them from the burner flame when brazing the connection pipes.
7. Remove the two (2) nuts fixing the compressor and remove the compressor from the unit by lifting it. Slightly incline it forward and lift.
8. For brazing the compressor connection pipes, first cool down the compressor piping side covering it with wet cloth. Then brazing material will not enter into the compressor. If the brazing material enters the compressor, it will cause compressor failures.
9. Reassemble the parts in the reverse order of the indicated removing procedures.
 - Tighten the screws (U, V and W) for compressor wires with 2.5N.m.
 - Fix the lead wire firmly.



NOTE

- Fix the lead wire for the compressor firmly using a cable tie to avoid the contact between the metal sheet sharp edges and the high temperature piping.

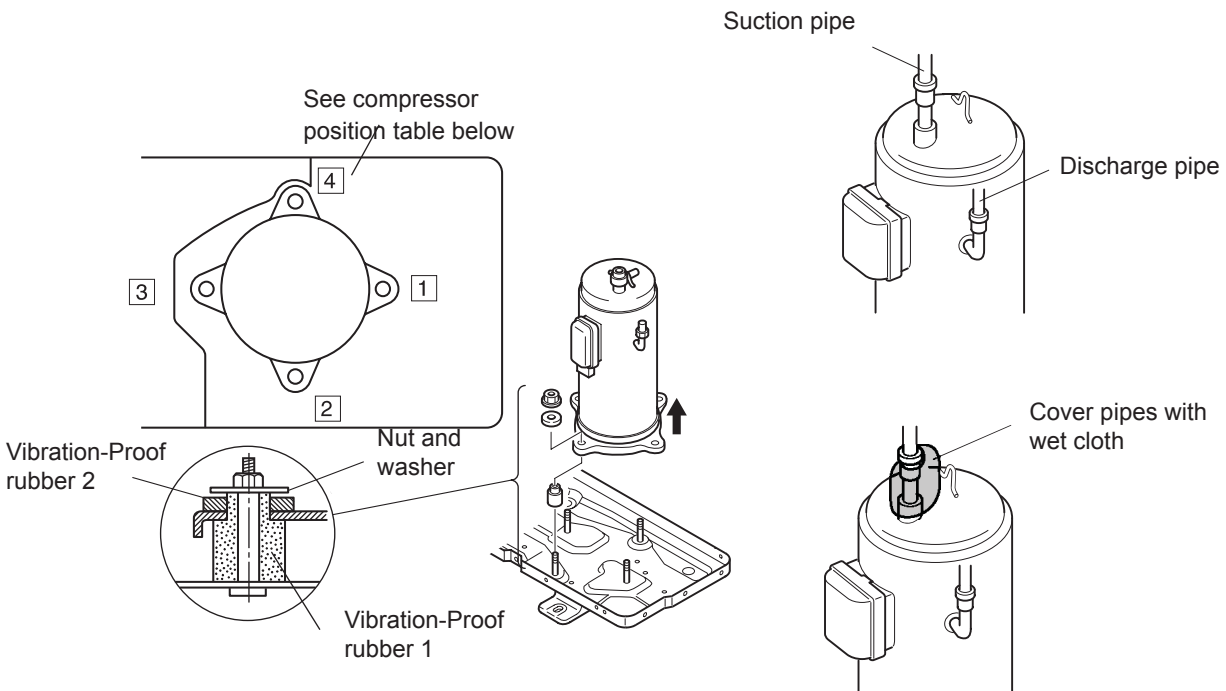


Fixation of the compressor to the bottom plate				
Compressor position	1	2	3	4
Vibration-proof rubber 1	○	○	○	○
Vibration-proof rubber 2	○	○	-	-
Nut	○	○	-	-

10.1.8. Removing high pressure switch

1. Remove the service cover according to the section "Removing service cover" in this chapter.
2. Collect the refrigerant from the check joint according to the section "Removing the compressor" in this chapter.
3. Disconnect the faston terminals from the pressure switch.
 - Cut the high pressure switch from the brazing neck using a burner.

High pressure switch structure

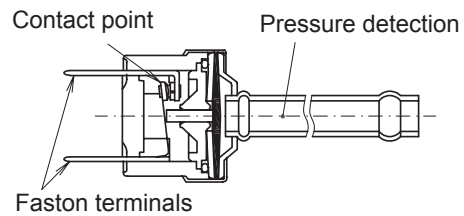


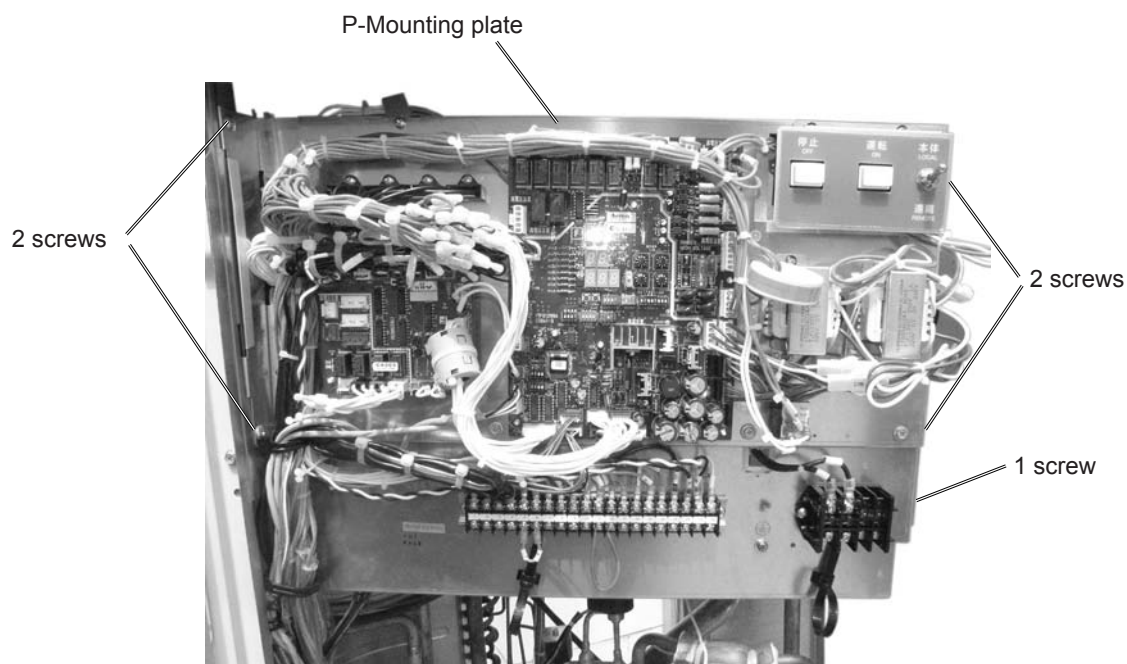
	DANGER
<ul style="list-style-type: none">- Do not change the high pressure switch locally or change the high pressure cut-out set value locally. If changed, it will cause serious injury or death due to explosion.- Do not attempt to turn service valve rod beyond its stop.	



10.1.9. Opening electrical box (P-mounting plate)

1. Remove the service cover according to the section "Removing the service cover" in this chapter.
 - Remove the five (5) screws fixing the electrical box. Open the P-mounting plate by rotating it 90 degrees to the left.

	DANGER
<ul style="list-style-type: none">- Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate.- Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock.	



10.1.10. Removing the coils for the reversing and solenoid valves

1. Remove the service cover according to the section "Removing service cover" in this chapter.
2. Remove the reversing valve coil by removing the screw fixing the coil.


i	NOTE
<ul style="list-style-type: none">- Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.- Remove the connectors on the control PCB of the electrical box.	

3. Remove the connector on the control PCB of the electrical box.



10.1.11. Removing electronic expansion valve coils

1. Remove the service cover according to the section "Removing service cover".

	DANGER
<ul style="list-style-type: none">- Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate.- Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock.	

2. Remove the connector on the control PCB of the electrical box.
3. Hold the electronic expansion valve coil and slightly rotate, then pull it up. Refer to the figure below to replace the electrical valve. The lock mechanism is equipped with the expansion valve coil. Check to ensure that the expansion valve coil is locked.

Electronic expansion valve coils





10.1.12. Removing pressure switches

1. Remove the service cover according to the section "Removing service cover" in this chapter.
2. There are two pressure switches: one green (low pressure) and one black (high pressure).
3. Remove the pressure switches

i	NOTE
<ul style="list-style-type: none">- Do not touch the electrical components when the LED201 (Red) located on the inverter module is ON in order to avoid electrical shock.- Remove the connectors on the control PCB of the electrical box.	

4. Remove the connector on the control PCB of the electrical box.

Pressure switch

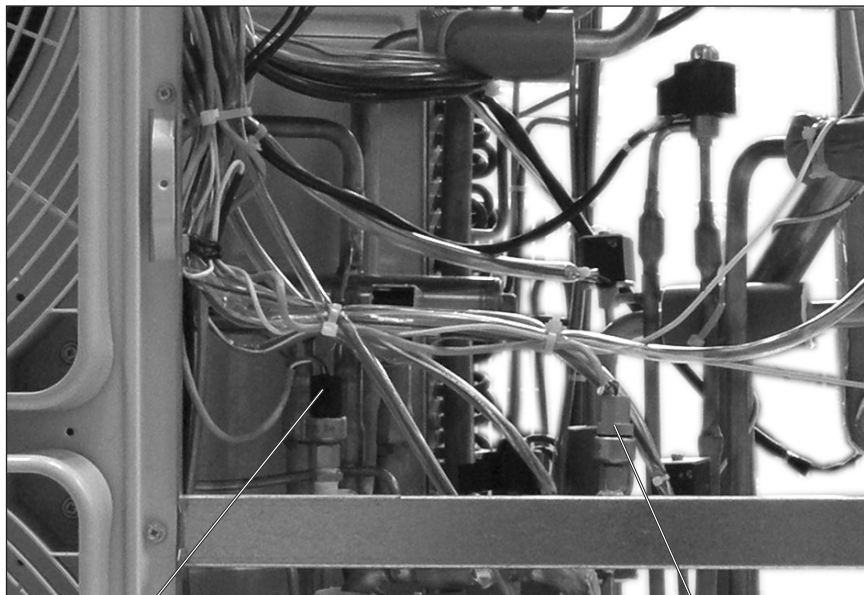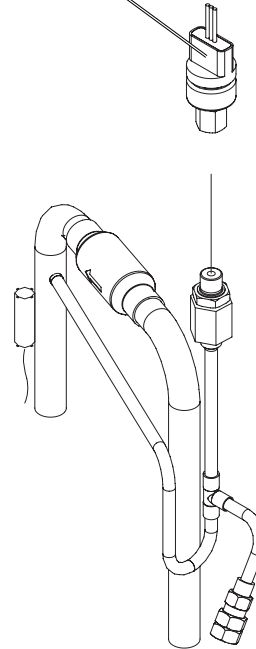

Pressure switch (Black, high pressure)


Pressure switch (Green, low pressure)

10.1.13. Removing reversing valve

1. Remove the service cover and the rear service panel according to the section "Removing Service Cover" and the section "Removing lower part of service panel and rear service panel" in this chapter.
2. Collect the refrigerant from the check joint according to the section "Removing compressor".
3. Remove the reversing valve coil according to the section "Removing reversing valve coil".
4. Remove one (1) fixing screw for the valve-mounting plate.
5. Remove the stop valve at the gas side from the valve-mounting plate by removing the two (2) screws.
6. Remove the reversing valve assemblies from the 4 brazed parts where it is fixed. Remove the brazing of the reversing valve and the stop valve at the gas using a blowtorch. Cool down the piping side covering it with wet cloth, in order to avoid brazing material entering the reversing valve. Protect the connecting wires and pipe insulation from the brazing flame.
7. Remove the reversing valves from its assemblies 4 brazed parts ✕.

Perform the brazing with a blowtorch to remove and reassemble the reversing valve by cooling the pipes first with wet cloth in order to avoid brazing material entering the reversing valve.

8. Reassemble the parts in the reverse order of removing procedures contained in this chapter. When SFV is removed, fix it according to the section "Removing the Reversing Valve and the Solenoid Valve" contained in this chapter.

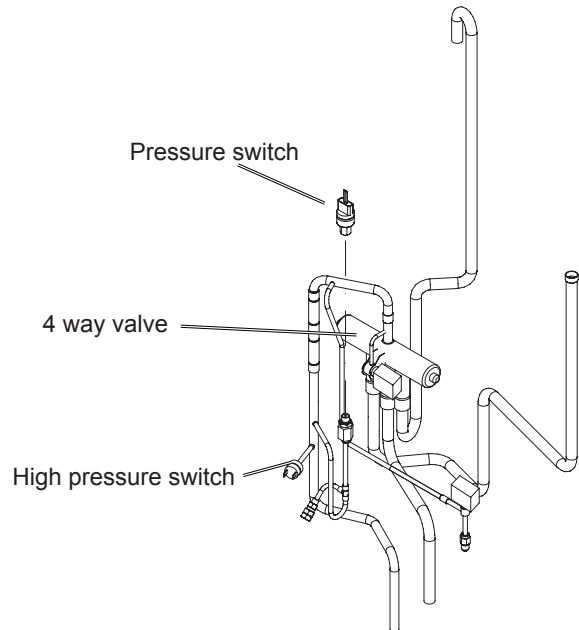

10.1.14. Removing expansion valve



1. Remove the service cover and rear service panel according to the section "Removing Service Cover" and the section "Removing Lower Part of Service Panel and Rear Service Panel".
2. Collect the refrigerant from the check joint according to the section "Removing Compressor".
3. Remove the coils according to the section "Removing Electronic Expansion Valve Coil".
4. Remove the brazing as shown in the figure below.

Electronic Expansion Valve: 2 brazing parts.

Perform the brazing to remove and reassemble the electronic expansion valve by cooling with wet cloth.

Protect the connecting wires and pipe insulation from brazing flame.

5. Reassemble the parts in the reverse order of removing procedures.

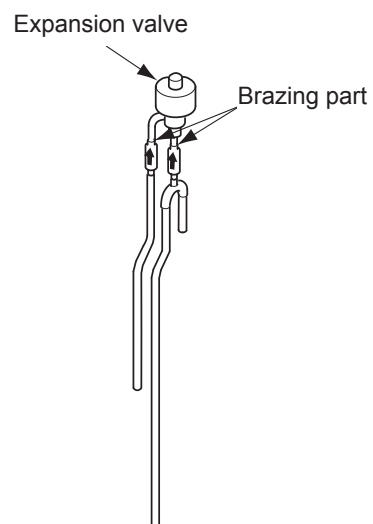
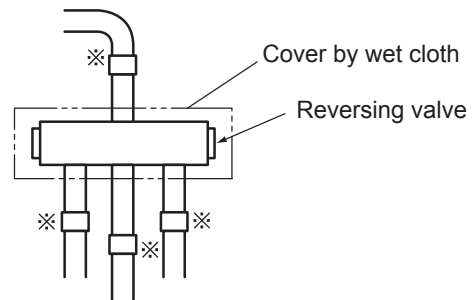


10.1.15. Removing solenoid valve


1. Remove the service cover and the rear service panel according to the sections "Removing Service Cover" and "Removing lower part of service panel and rear panel", described in this chapter .
2. Collect the refrigerant from the check joint according to the section "Removing compressor" in this chapter.
3. Remove the solenoid valve coil according to the section "Removing coils for reversing valve and solenoid valve (SVA1, SVA2 and SVF)" in this chapter.
4. Remove the brazing and flare nuts as shown in the figure below. Using a blowtorch and previously cooling the pipe side with wet cloth in order to avoid brazing material entering the reversing valve.
 - Solenoid Valve (SVA1): 2 brazing parts
 - Solenoid Valve (SVA2): 2 brazing parts
 - Solenoid Valve (SVF): 2 brazing coils
5. Perform the brazing to remove and reassemble the solenoid valve.
6. Protect the connecting wires and pipe insulation from the brazing flame.

7. Remove the flare nuts with two spanners to avoid twisting.
8. Reassemble the parts in the reverse order of removing order of removing procedures.

Fix the solenoid valve SVF as shown in the figure below.

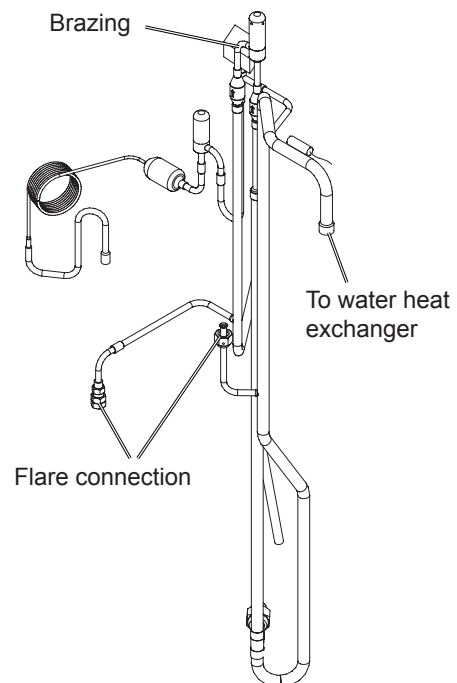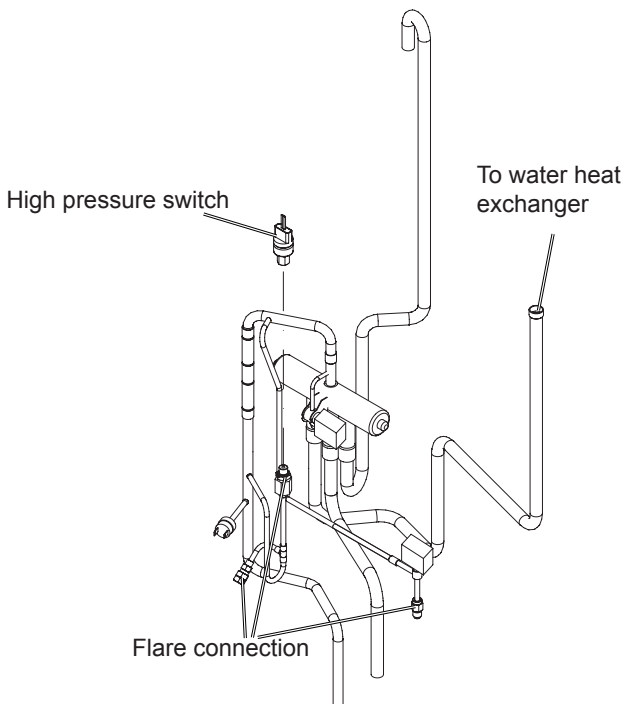


10.1.16. Removing electrical components


	DANGER
<ul style="list-style-type: none"> - Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate. - Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock. 	

1. Remove the service cover according to section "Removing service cover" in this chapter.
 - Disconnect all the connectors in the PCB.
 - Remove the PCB by sliding four (4) holders in the arrow direction.
 - Remove the PCB for power distribution of the compressor and the motor.

2. Removing the relay PCB
 - Remove the service cover according to the section "Removing Service Cover" in this chapter.
 - Disconnect all the wires connected to the relay PCB.

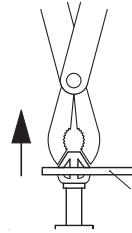


Extraction of the PCB from the holders

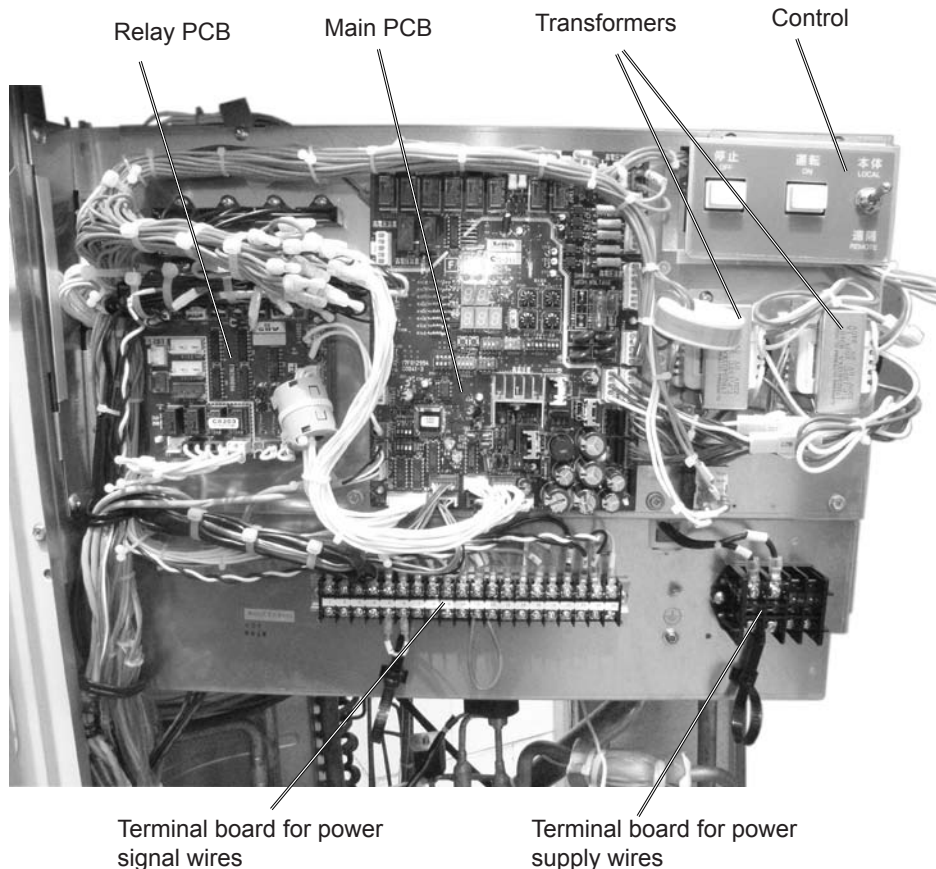

10.1.17. Removing inverter components


1. Remove the service cover according to the section "Removing service cover" in this chapter.
2. Open the P-mounting plate by rotating 90 degrees to the left according to the section "Opening electrical box (P-Mounting Plate)" in this chapter.



	DANGER
<ul style="list-style-type: none"> - Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate. - Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock. 	

• **Removing the relay PCB**

Check to ensure that the LED201 (Red) of the PCB is OFF.

Remove holders from the PCB. When reassembling the components, pass those holders again through the holes of the PCB.


	DANGER
<ul style="list-style-type: none"> - Do not touch the electrical parts when LED201 (Red) located on the inverter module is ON to prevent from an electrical shock. - When replacing the transistor module (IPM) and diode module (DM) on heat radiation fin, slightly apply the heat conducting silicon grease (Manufacture: Shin-Etsu Chemical Co., Ltd, Product No.: G-746) over the fin contact surface. - Identify the terminal numbers with mark band. When reassembling, the terminals have to be connected to the correct numbers. If incorrectly connected, malfunctions or damages will occur. - Correctly insert two wires of U and V phases for the power cable of inverter compressor into the current sensor, CTU and CTV on PCB2. Connect Phase U power cable with the current sensor Phase U (CTU) and Phase V power line with current sensor Phase V (CTV). If connected incorrectly, malfunction or electrical component damage will occur. - When mounting PCB and the sheet metal part for PCB, pay attention not to clamp the electrical wiring together. - In case of replacing control PCB, set all the dip switches as the same position before replacing. If not, malfunction may occur. - Do not apply strong force to the electric components and PCBs to avoid damage. 	

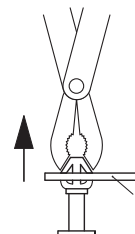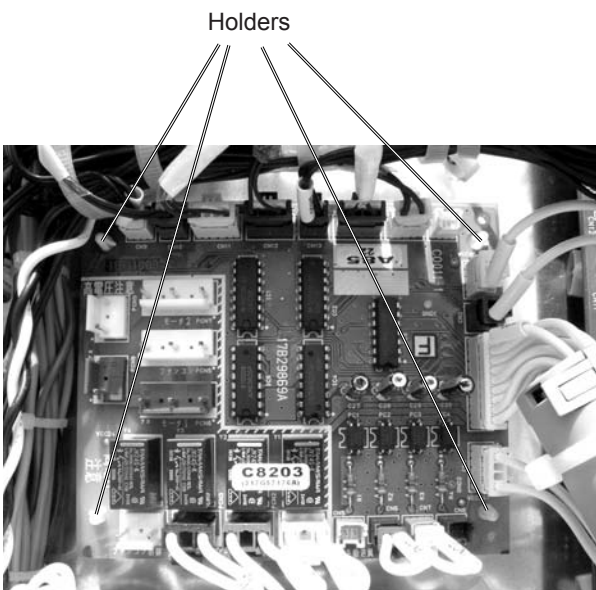


Extraction of the PCB from the holders

10.1.18. Removing the ISPM

The ISPM is equipped in the RHUE-5AHN unit.


	DANGER
<ul style="list-style-type: none"> - Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate. - Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock. 	

module to remove it..

	NOTE
<ul style="list-style-type: none"> - Identify the terminal numbers with the mark band numbers when reassembling. If incorrectly connected, malfunction or damage will occur. - Check to ensure that the electrical wires will not be caught between the mounting electrical components and the mounting plates when the PCB is remounted. - Apply silicon grease evenly on the whole rear side of the diode module and the transistor module when mounting. Silicon grease is available as a field-supplied accessory. 	

1. Disconnect all the wirings connected to the module.
 - Disconnect the wirings of the terminals +, -, U, V, W


2. Disconnect all the wirings connected to the transistor module as shown below.
 - Disconnect the wirings of connector CN2, CN206 and CN207.
 - Disconnect the wirings from P, N, U, V, W on the transistor module.
 - Remove the four (4) fixing screws on the ISPM

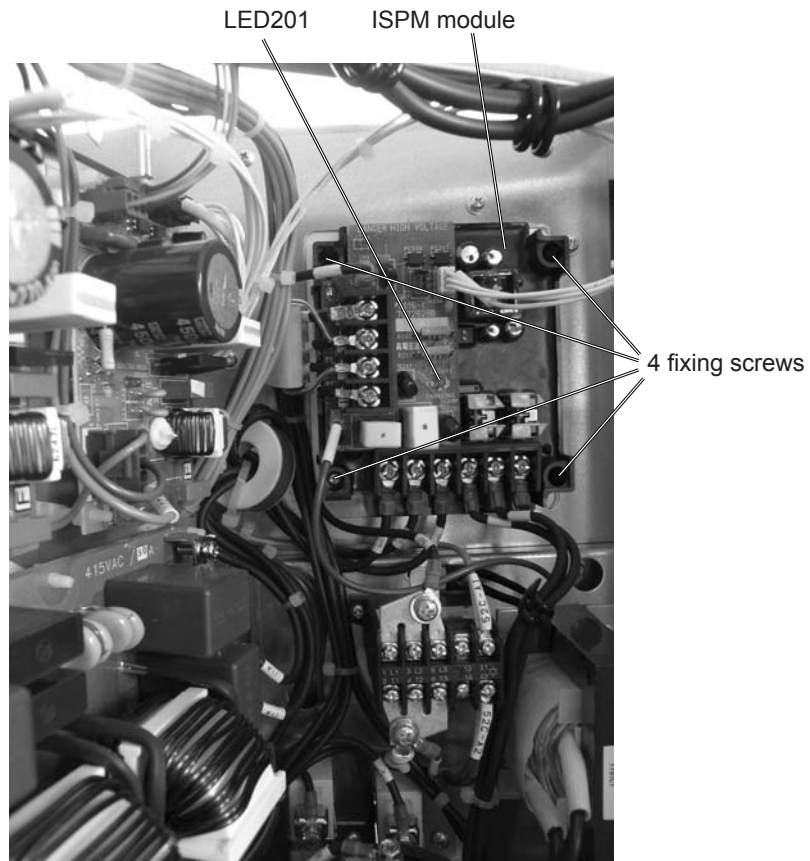


10.1.19. Removing the DIP-IPM


The DIP-IPM is equipped in the RHUE-(3~5)A(V)HN units.

module to remove it.

 DANGER
<ul style="list-style-type: none"> - Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate. - Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock.


 NOTE
<ul style="list-style-type: none"> - Identify the terminal numbers with the mark band numbers when reassembling. If incorrectly connected, malfunction or damage will occur. - Check to ensure that the electrical wires will not be caught between the mounting electrical components and the mounting plates when the PCB is remounted. - Apply silicon grease evenly on the whole rear side of the diode module and the transistor module when mounting. Silicon grease is available as a field-supplied accessory.


1. Disconnect all the wirings connected to the module.
 - Disconnect the wirings of the terminals +, -, U, V, W
2. Disconnect all the wirings connected to the module.
 - Remove the four (4) fixing screws on the DIP-IPM

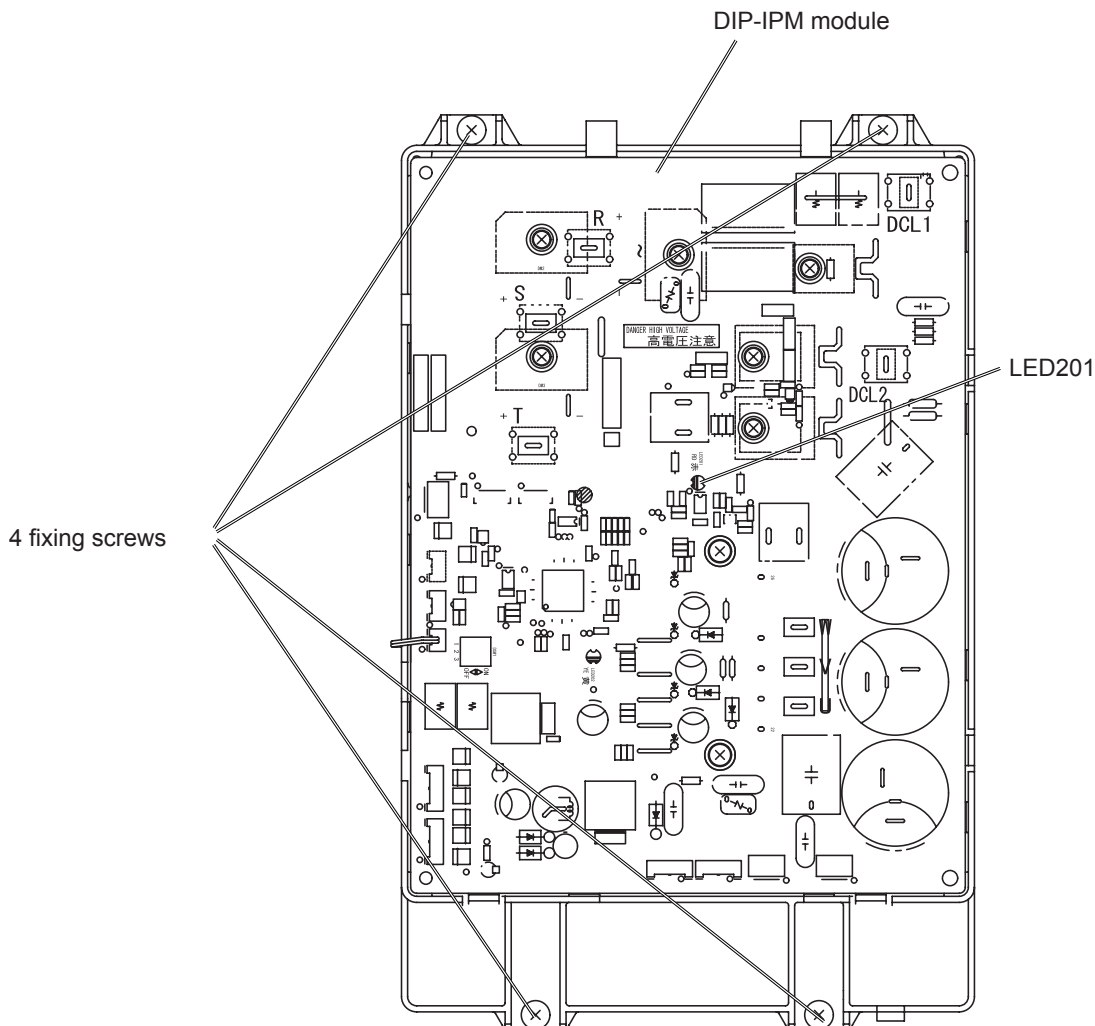

10.1.20. Removing the electrical-noise filter


All RHUE Yutaki units are equipped with electrical-noise filter PCB.

	DANGER
<ul style="list-style-type: none"> - Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate. - Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock. 	

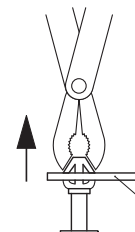


Extraction of the PCB from the holders


1. Disconnect all the wirings (9 in total) connected to the electrical-noise filter.
2. Remove the six (6) holders from the PCB. When reassembling the components, pass those holders again through the holes of the PCB.

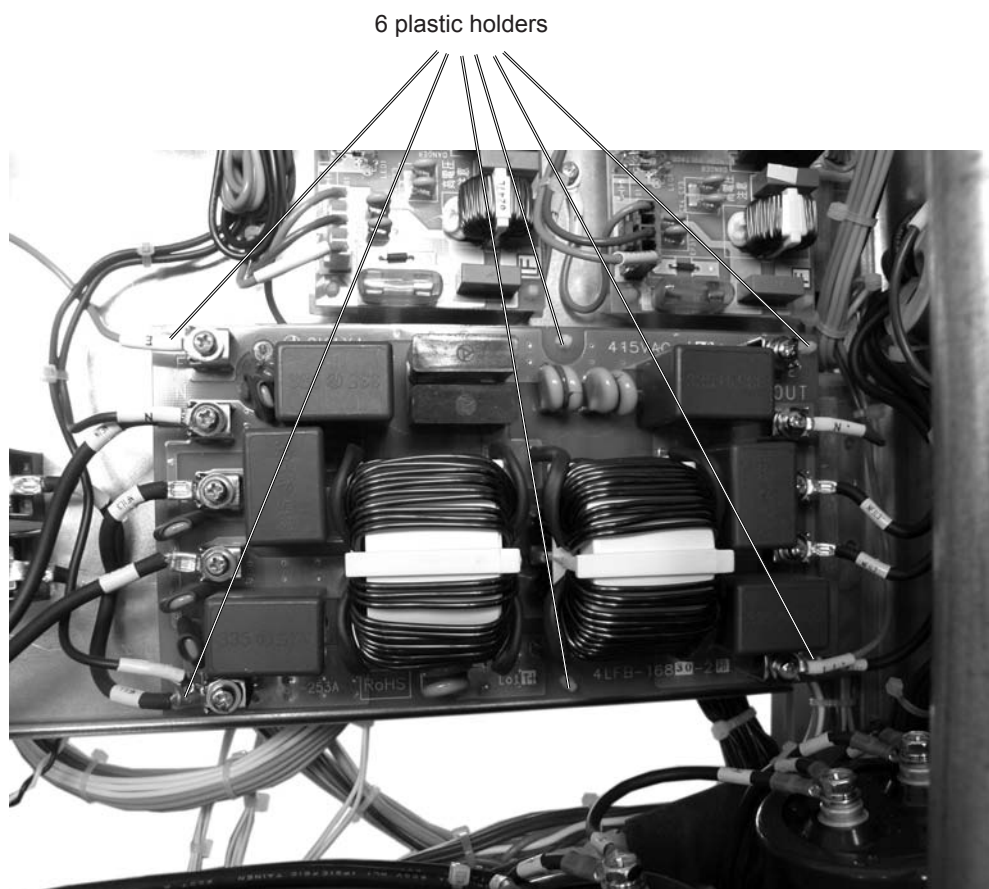

10.1.21. Removing other electrical components

1. Remove the service cover according to the section "Removing service cover" in this chapter.
2. Open the P-mounting plate by rotating it 90 degrees to the left according to the section "Opening electrical box (P-Mounting Plate)" in this chapter.
3. Check to ensure the LED201 (Red) of the inverter PCB is off when opening P-mounting plate.
4. Remove other electrical components according to the procedure below, and the figures on chapter 9.

	DANGER
<ul style="list-style-type: none"> - Check that the LED201 (red) located on the inverter module is OFF when opening the P-mounting plate. - Do not touch the electrical components when LED201 (Red) located on the inverter module is ON in order to avoid an electrical shock. 	

	NOTE
<ul style="list-style-type: none"> - Disconnect all the wires connected with the smoothing capacitor (CB, CB1, CB2, CA). - If the wire has polar characters. Identify the wire mark band and the indication on the smoothing capacitor when wire connecting. - Remove the two (2) screws fixing the smoothing capacitor and remove the smoothing capacitor. - Disconnect all the wires connecting with the magnetic contactor (CMC1). - Remove the two (2) screws fixing the magnetic contactor and remove the magnetic contactor. - Remove the four (4) screws fixing the reactor and remove the reactor (DCL). - Disconnect all the wires connected with the electrical-noise filter (NF1). - Remove the noise filter by clamping the top of the holder (6 portions) with a pincher. - Identify the terminal numbers with mark band. When reassembling, the terminals have to be connected to the correct numbers. If incorrectly connected, malfunctions or damages will occur. 	



HITACHI is participating in the EUROVENT Certification Programme. Products are as specified in the EUROVENT Directory of Certified Products.



Hitachi Air Conditioning Products Europe, S.A.
Ronda Shimizu, 1 - Políg. Ind. Can Torrella
08233 Vacarisses (Barcelona) España
ISO 9001 Certified by AENOR, Spain
ISO 14001 Certified by AENOR, Spain



Hitachi Air Conditioning Systems Operation
Shimizu-shi, Shizuoka-ken, Japan
ISO 9001 Certified by JQA, Japan
ISO 14001 Certified by JQA, Japan



Hitachi Air Conditioning Products (M) Sdn. Bnd.
Lot No. 10, Jalan Kemajuan Industri Bangi
43650 Bandar Baru Bangi, Selangor Darul Ehsan, Malaysia
Certification ISO 9001, Malaysia
Certification ISO 14001, Malaysia

HITACHI
Inspire the Next