

# Service Manual

## Inverter Pair Floor Standing Type F-Series



**[Applied Models]**

- Inverter Pair : Cooling Only
- Inverter Pair : Heat Pump

# Inverter Pair Floor Standing Type F-Series

## ●Cooling Only

### Indoor Unit

FVXS25FV1B  
FVXS35FV1B  
FVXS50FV1B

### Outdoor Unit

RKS25F2V1B	RKS25G2V1B	RKS25G2V1B9
RKS35F2V1B	RKS35G2V1B	RKS35G2V1B9
RKS50F2V1B	RKS50G2V1B	

## ●Heat Pump

### Indoor Unit

FVXS25FV1B  
FVXS35FV1B  
FVXS50FV1B

### Outdoor Unit

RXS25F2V1B	RXS25G2V1B	RXS25G2V1B9
RXS35F2V1B	RXS35G2V1B	RXS35G2V1B9
RXS50F2V1B	RXS50G2V1B	

1. Introduction .....	vi
1.1 Safety Cautions .....	vi
1.2 Used Icons .....	x
<b>Part 1 List of Functions .....</b>	<b>1</b>
1. Functions.....	2
1.1 Cooling Only.....	2
1.2 Heat Pump .....	5
<b>Part 2 Specifications .....</b>	<b>8</b>
1. Specifications .....	9
1.1 Cooling Only.....	9
1.2 Heat Pump .....	14
<b>Part 3 Printed Circuit Board Connector Wiring Diagram .....</b>	<b>19</b>
1. Printed Circuit Board Connector Wiring Diagram.....	20
1.1 Indoor Unit.....	20
1.2 Outdoor Unit.....	22
<b>Part 4 Function and Control.....</b>	<b>30</b>
1. Main Functions.....	31
1.1 Temperature Control .....	31
1.2 Frequency Principle.....	31
1.3 Airflow Direction Control.....	33
1.4 Fan Speed Control for Indoor Units.....	34
1.5 Program Dry Operation .....	35
1.6 Automatic Operation.....	36
1.7 Thermostat Control.....	37
1.8 NIGHT SET Mode .....	38
1.9 ECONO Operation .....	39
1.10 Inverter POWERFUL Operation .....	40
1.11 Other Functions.....	41
2. Function of Thermistor .....	42
3. Control Specification .....	43
3.1 Mode Hierarchy .....	43
3.2 Frequency Control.....	44
3.3 Controls at Mode Changing / Start-up.....	46
3.4 Discharge Pipe Temperature Control.....	48
3.5 Input Current Control.....	49
3.6 Freeze-up Protection Control .....	50
3.7 Heating Peak-cut Control .....	50
3.8 Outdoor Fan Control.....	51
3.9 Liquid Compression Protection Function.....	51
3.10 Defrost Control .....	52
3.11 Electronic Expansion Valve Control .....	53
3.12 Malfunctions .....	56
3.13 Forced Operation Mode .....	57
3.14 Standby Electricity Saving.....	57

<b>Part 5 Operation Manual .....</b>	<b>58</b>
1. System Configuration.....	59
2. Operation Manual.....	60
2.1 Names of Parts.....	60
2.2 AUTO · DRY · COOL · HEAT · FAN Operation .....	63
2.3 Adjusting the Airflow Direction.....	65
2.4 POWERFUL Operation .....	67
2.5 OUTDOOR UNIT QUIET Operation.....	68
2.6 ECONO Operation .....	69
2.7 TIMER Operation .....	70
2.8 WEEKLY TIMER Operation .....	72
<b>Part 6 Service Diagnosis.....</b>	<b>77</b>
1. Caution for Diagnosis.....	78
1.1 Troubleshooting with LED .....	78
2. Problem Symptoms and Measures .....	79
3. Service Check Function .....	80
3.1 ARC452 Series.....	80
4. Troubleshooting .....	83
4.1 Error Codes and Description .....	83
4.2 Indoor Unit PCB Abnormality .....	84
4.3 Freeze-up Protection Control or Heating Peak-cut Control.....	85
4.4 Fan Motor (DC Motor) or Related Abnormality.....	87
4.5 Thermistor or Related Abnormality (Indoor Unit).....	89
4.6 Signal Transmission Error (between Indoor Unit and Outdoor Unit) .....	90
4.7 Unspecified Voltage (between Indoor Unit and Outdoor Unit) .....	91
4.8 Outdoor Unit PCB Abnormality.....	92
4.9 OL Activation (Compressor Overload) .....	94
4.10 Compressor Lock .....	95
4.11 DC Fan Lock .....	96
4.12 Input Overcurrent Detection .....	97
4.13 Four Way Valve Abnormality .....	98
4.14 Discharge Pipe Temperature Control.....	100
4.15 High Pressure Control in Cooling .....	101
4.16 Compressor System Sensor Abnormality .....	103
4.17 Position Sensor Abnormality .....	105
4.18 DC Voltage / Current Sensor Abnormality (25/35 Class) .....	108
4.19 CT or Related Abnormality (50 Class).....	109
4.20 Thermistor or Related Abnormality (Outdoor Unit).....	111
4.21 Electrical Box Temperature Rise.....	113
4.22 Radiation Fin Temperature Rise .....	116
4.23 Output Overcurrent Detection .....	119
4.24 Refrigerant Shortage .....	121
4.25 Low-voltage Detection or Over-voltage Detection.....	124
4.26 Signal Transmission Error on Outdoor Unit PCB (50 Class Only).....	126
5. Check .....	127
5.1 How to Check.....	127

<b>Part 7 Removal Procedure .....</b>	<b>136</b>
1. Indoor Unit.....	137
1.1 Removal of Air Filter / Front Panel / Front Grille .....	137
1.2 Removal of Horizontal Blade .....	141
1.3 Removal of Electrical Box .....	142
1.4 Removal of PCB.....	144
1.5 Removal of Vertical Blades .....	148
1.6 Removal of Heat Exchanger .....	151
1.7 Removal of Fan Rotor / Fan Motor.....	152
2. Outdoor Unit - RK(X)S25/35F2V1B .....	154
2.1 Removal of Outer Panels / Fan Motor.....	154
2.2 Removal of Electrical Box .....	163
2.3 Removal of PCB.....	167
2.4 Removal of Reactor / Partition Plate .....	169
2.5 Removal of Sound Blanket.....	171
2.6 Removal of Four Way Valve.....	172
2.7 Removal of Compressor.....	175
3. Outdoor Unit - RK(X)S25/35G2V1B.....	177
3.1 Removal of Outer Panels / Fan Motor.....	177
3.2 Removal of Electrical Box .....	186
3.3 Removal of Thermistors .....	190
3.4 Removal of PCB.....	192
3.5 Removal of Reactor / Partition Plate .....	195
3.6 Removal of Sound Blanket.....	197
3.7 Removal of Four Way Valve.....	198
3.8 Removal of Compressor.....	201
4. Outdoor Unit - RK(X)S25/35G2V1B9.....	203
4.1 Removal of Outer Panels / Fan Motor.....	203
4.2 Removal of Electrical Box .....	212
4.3 Removal of PCB.....	215
4.4 Removal of Reactor / Partition Plate .....	223
4.5 Removal of Sound Blanket.....	225
4.6 Removal of Four Way Valve.....	227
4.7 Removal of Compressor.....	230
5. Outdoor Unit - RK(X)S50F2V1B, RK(X)S50G2V1B.....	232
5.1 Removal of Outer Panels .....	232
5.2 Removal of Outdoor Fan / Fan Motor.....	236
5.3 Removal of Electrical Box .....	240
5.4 Removal of PCB.....	245
5.5 Removal of Sound Blanket / Thermistors.....	248
5.6 Removal of Four Way Valve.....	250
5.7 Removal of Electronic Expansion Valve.....	251
5.8 Removal of Compressor.....	252
<b>Part 8 Trial Operation and Field Settings.....</b>	<b>255</b>
1. Trial Operation .....	256
2. Field Settings .....	257
2.1 Model Type Setting .....	257
2.2 When 2 Units are Installed in 1 Room.....	258
2.3 Standby Electricity Saving.....	259

---

2.4 Facility Setting Jumper and Switch (cooling at low outdoor temperature).....	260
2.5 Jumper and Switch Settings.....	261
3. Application of Silicon Grease to a Power Transistor and a Diode Bridge .....	262





**Part 9 Appendix..... 263**

1. Piping Diagrams.....	264
1.1 Indoor Unit.....	264
1.2 Outdoor Unit.....	265
2. Wiring Diagrams.....	268
2.1 Indoor Unit.....	268
2.2 Outdoor Unit.....	269








# 1. Introduction




## 1.1 Safety Cautions









### Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
  - △ This symbol indicates the item for which caution must be exercised.  
The pictogram shows the item to which attention must be paid.
  - This symbol indicates the prohibited action.  
The prohibited item or action is shown in the illustration or near the symbol.
  - This symbol indicates the action that must be taken, or the instruction.  
The instruction is shown in the illustration or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.

### 1.1.1 Cautions Regarding Safety of Workers












 <b>Warning</b>	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for repair. Working on the equipment that is connected to the power supply may cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	
If the refrigerant gas is discharged during the repair work, do not touch the discharged refrigerant gas. The refrigerant gas may cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, evacuate the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it may cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas may generate toxic gases when it contacts flames.	
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor may cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment may cause an electrical shock or fire.	






 <b>Warning</b>	
Be sure to wear a safety helmet, gloves, and a safety belt when working at a high place (more than 2 m). Insufficient safety measures may cause a fall accident.	
In case of R-410A refrigerant models, be sure to use pipes, flare nuts and tools for the exclusive use of the R-410A refrigerant. The use of materials for R-22 refrigerant models may cause a serious accident such as a damage of refrigerant cycle as well as an equipment failure.	







 <b>Caution</b>	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands may cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water may cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Be sure to conduct repair work with appropriate tools. The use of inappropriate tools may cause injury.	
Be sure to check that the refrigerating cycle section has cooled down enough before conducting repair work. Working on the unit when the refrigerating cycle section is hot may cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room may cause oxygen deficiency.	








## 1.1.2 Cautions Regarding Safety of Users

 <b>Warning</b>	
<p>Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools may cause an electrical shock, excessive heat generation or fire.</p>	
<p>If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Be sure to use an exclusive power circuit for the equipment, and follow the local technical standards related to the electrical equipment, the internal wiring regulations, and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work may cause an electrical shock or fire.</p>	
<p>Be sure to use the specified cable for wiring between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections may cause excessive heat generation or fire.</p>	
<p>When wiring between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not damage or modify the power cable. Damaged or modified power cable may cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable may damage the cable.</p>	
<p>Do not mix air or gas other than the specified refrigerant (R-410A / R-22) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.</p>	
<p>If the refrigerant gas leaks, be sure to locate the leaking point and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leaking point cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it may generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.</p>	
<p>When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment may fall and cause injury.</p>	





 <b>Warning</b>	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet securely. If the plug has dust or loose connection, it may cause an electrical shock or fire.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation may cause the equipment to fall, resulting in injury.	For unitary type only 
Be sure to install the product securely in the installation frame mounted on the window frame. If the unit is not securely mounted, it may fall and cause injury.	For unitary type only 
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 <b>Caution</b>	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If the combustible gas leaks and remains around the unit, it may cause a fire.	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections may cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame may cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding may cause an electrical shock.	

 <b>Caution</b>	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 MΩ or higher. Faulty insulation may cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage may cause the water to enter the room and wet the furniture and floor.	
Do not tilt the unit when removing it. The water inside the unit may spill and wet the furniture and floor.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water may enter the room and wet the furniture and floor.	For unitary type only  

## 1.2 Used Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

# Part 1

# List of Functions

1. Functions.....	2
1.1 Cooling Only.....	2
1.2 Heat Pump .....	5

# 1. Functions

## 1.1 Cooling Only

Category	Functions	FVXS25/35FV1B RKS25/35F2V1B	FVXS50FV1B RKS50F2V1B	Category	Functions	FVXS25/35FV1B RKS25/35F2V1B	FVXS50FV1B RKS50F2V1B	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	-10 ★	-10 ★		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	○	○		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○	
	Standby Electricity Saving	—	—		Air Filter (Pre-filter)	○	○	
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	○	○		
	Swing Compressor	○	○	Washable Grille	—	—		
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—		
	Reluctance DC Motor	○	○	Good-Sleep Cooling Operation	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	○	○	
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	○	○	
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○	
	Wide-Angle Louvers	○	○		Auto-Restart (after Power Failure)	○	○	
	Vertical Auto-Swing (Up and Down)	○	○		Self-Diagnosis (Digital, LED) Display	○	○	
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—	
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	○	○	
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Quiet Operation	○	○		H/P, C/O Compatible Indoor Unit	○	○	
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Voltage Correspondence	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	○	○		Chargeless	10 m	10 m	
	INTELLIGENT EYE Operation	—	—		Either Side Drain (Right or Left)	—	—	
	Quick Warming Function (Preheating Operation)	—	—		Power Selection	—	—	
	Hot-Start Function	—	—		Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Automatic Defrosting	—	—			Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○
Operation	Automatic Operation	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		○	○	
	Program Dry Operation	○	○	DIII-NET Compatible (Adaptor) (Option)		○	○	
	Fan Only	○	○	Remote Controller		Wireless	○	○
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—			Wired (Option)	—	—
	Inverter POWERFUL Operation	○	○					
	Priority-Room Setting	—	—					
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Operation	○	○					
	Indoor Unit ON/OFF Button	○	○					
	Signal Receiving Sign	○	○					
R/C with Back Light	○	○						
Temperature Display	—	—						

**Note:** ○ : Holding Functions  
— : No Functions

★: Lower limit can be extended to -15°C by cutting jumper (25/35 class) or turning switch (50 class). (facility use only)

Category	Functions	FVXS25/35FV1B FKS25/35G2V1B	FVXS50FV1B FKS50G2V1B	Category	Functions	FVXS25/35FV1B FKS25/35G2V1B	FVXS50FV1B FKS50G2V1B	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	-10 ~46 ★	-10 ~46 ★		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	○	○		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○	
	Standby Electricity Saving	○	—		Air Filter (Prefilter)	○	○	
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	○	○		
	Swing Compressor	○	○	Washable Grille	—	—		
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—		
	Reluctance DC Motor	○	○	Good-Sleep Cooling Operation	—	—		
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	○	○	
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	○	○	
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○	
	Wide-Angle Louvers	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○	
	Vertical Auto-Swing (Up and Down)	○	○		Self-Diagnosis (Digital, LED) Display	○	○	
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—	
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	○	○	
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
	Indoor Unit Quiet Operation	○	○		H/P, C/O Compatible Indoor Unit	○	○	
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Voltage Correspondence	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	○	○		Chargeless	10 m	10 m	
	INTELLIGENT EYE Operation	—	—	Operation	Either Side Drain (Right or Left)	—	—	
	Quick Warming Function (Preheating Operation)	—	—		Power Selection	—	—	
	Hot-Start Function	—	—		Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Automatic Defrosting	—	—			Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○
Operation	Automatic Operation	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		○	○	
	Program Dry Operation	○	○	DIII-NET Compatible (Adaptor) (Option)	○	○		
	Fan Only	○	○	Remote Controller	Wireless	○	○	
	Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—		—	Wired (Option)	—	—
		Inverter POWERFUL Operation	○	○	Temperature Display			
		Priority-Room Setting	—	—				
		COOL / HEAT Mode Lock	—	—				
		HOME LEAVE Operation	—	—				
		ECONO Operation	○	○				
Indoor Unit ON/OFF Button		○	○					
Signal Receiving Sign		○	○					
R/C with Back Light	○	○						
Temperature Display	—	—						

**Note:** ○ : Holding Functions  
— : No Functions

★ : Lower limit can be extended to -15°C by cutting jumper (25/35 class) or turning switch (50 class). (facility use only)

Category	Functions	FYXS25/35FV1B RKS25/35G2V1B9	Category	Functions	FYXS25/35FV1B RKS25/35G2V1B9			
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air-Purifying Filter	—			
	Operation Limit for Cooling (°CDB)	-10 ~46 ★						
	Operation Limit for Heating (°CWB)	—						
	PAM Control	○						
	Standby Electricity Saving	○						
Compressor	Oval Scroll Compressor	—		Titanium Apatite Photocatalytic Air-Purifying Filter	○			
	Swing Compressor	○						
	Rotary Compressor	—						
	Reluctance DC Motor	○						
Comfortable Airflow	Power-Airflow Flap	—	Air Filter (Prefilter)			○		
	Power-Airflow Dual Flaps	—						
	Power-Airflow Diffuser	—						
	Wide-Angle Louvers	○						
	Vertical Auto-Swing (Up and Down)	○						
	Horizontal Auto-Swing (Right and Left)	—						
	3-D Airflow	—						
Comfort Control	Auto Fan Speed	○	Timer			WEEKLY TIMER Operation	○	
	Indoor Unit Quiet Operation	○						
	NIGHT QUIET Mode (Automatic)	—						
	OUTDOOR UNIT QUIET Operation (Manual)	○	Worry Free “Reliability & Durability”	24-Hour ON/OFF TIMER	○			
	INTELLIGENT EYE Operation	—						
	Quick Warming Function (Preheating Operation)	—						
	Hot-Start Function	—						
	Automatic Defrosting	—						
Operation	Automatic Operation	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○			
	Program Dry Operation	○						
	Fan Only	○						
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	Remote Control	H/P, C/O Compatible Indoor Unit	○			
	Inverter POWERFUL Operation	○						
	Priority-Room Setting	—						
	COOL / HEAT Mode Lock	—						
	HOME LEAVE Operation	—						
	ECONO Operation	○						
	Indoor Unit ON/OFF Button	○				Remote Controller	Flexible Voltage Correspondence	—
	Signal Receiving Sign	○						
	R/C with Back Light	○						
	Temperature Display	—						
				Chargeless	10 m			
				Either Side Drain (Right or Left)	—			
				Power Selection	—			
				5-Rooms Centralized Controller (Option)	○			
				Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○			
				Remote Control Adaptor (Normal Open Contact) (Option)	○			
				DIII-NET Compatible (Adaptor) (Option)	○			
				Wireless	○			
				Wired (Option)	—			

**Note:** ○ : Holding Functions  
— : No Functions

★: Lower limit can be extended to -15°C by cutting jumper (25/35 class). (facility use only)

## 1.2 Heat Pump

Category	Functions			Category	Functions		
		FVXS25/35FV1B RXS25/35F2V1B	FVXS50FV1B RXS50F2V1B			FVXS25/35FV1B RXS25/35F2V1B	FVXS50FV1B RXS50F2V1B
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	-10 ~46	-10 ~46		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	-15 ~20	-15 ~18		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	○	○		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	○	○
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	○	○	
	Swing Compressor	○	○	Washable Grille	—	—	
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—	
	Reluctance DC Motor	○	○	Good-Sleep Cooling Operation	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	○	○
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	○	○
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○
	Wide-Angle Louvers	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Vertical Auto-Swing (Up and Down)	○	○		Self-Diagnosis (Digital, LED) Display	○	○
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	○	○
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○
	Indoor Unit Quiet Operation	○	○		H/P, C/O Compatible Indoor Unit	○	○
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Voltage Correspondence	—	—
	OUTDOOR UNIT QUIET Operation (Manual)	○	○		Chargeless	10 m	10 m
	INTELLIGENT EYE Operation	—	—	Remote Control	Either Side Drain (Right or Left)	—	—
	Quick Warming Function (Preheating Operation)	○	○		Power Selection	—	—
	Hot-Start Function	○	○		5-Rooms Centralized Controller (Option)	○	○
	Automatic Defrosting	○	○		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○
Operation	Automatic Operation	○	○	Remote Controller	Remote Control Adaptor (Normal Open Contact) (Option)	○	○
	Program Dry Operation	○	○		DIII-NET Compatible (Adaptor) (Option)	○	○
	Fan Only	○	○		Wireless	○	○
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller	Wired (Option)	—	—
	Inverter POWERFUL Operation	○	○				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	○	○				
	Indoor Unit ON/OFF Button	○	○				
	Signal Receiving Sign	○	○				
	R/C with Back Light	○	○				
Temperature Display	—	—					

**Note:** ○ : Holding Functions  
 — : No Functions



Category	Functions	FVXS25/35FV1B FXS25/35G2V1B	FVXS50FV1B FXS50G2V1B	Category	Functions	FVXS25/35FV1B FXS25/35G2V1B	FVXS50FV1B FXS50G2V1B
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	-10 ~46	-10 ~46		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	-15 ~20	-15 ~18		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	○	○		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○
	Standby Electricity Saving	○	—		Air Filter (Prefilter)	○	○
Compressor	Oval Scroll Compressor	—	—	Wipe-Clean Flat Panel	○	○	
	Swing Compressor	○	○	Washable Grille	—	—	
	Rotary Compressor	—	—	MOLD PROOF Operation	—	—	
	Reluctance DC Motor	○	○	Good-Sleep Cooling Operation	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	○	○
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	○	○
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○
	Wide-Angle Louvers	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Vertical Auto-Swing (Up and Down)	○	○		Self-Diagnosis (Digital, LED) Display	○	○
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	○	○
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○
	Indoor Unit Quiet Operation	○	○		H/P, C/O Compatible Indoor Unit	○	○
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Voltage Correspondence	—	—
	OUTDOOR UNIT QUIET Operation (Manual)	○	○		Chargeless	10 m	10 m
	INTELLIGENT EYE Operation	—	—	Either Side Drain (Right or Left)	—	—	
	Quick Warming Function (Preheating Operation)	○	○	Power Selection	—	—	
	Hot-Start Function	○	○	Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Automatic Defrosting	○	○		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○
			Remote Control Adaptor (Normal Open Contact) (Option)		○	○	
Operation	Automatic Operation	○	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○
	Program Dry Operation	○	○		Wireless	○	○
	Fan Only	○	○	Wired (Option)	—	—	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	○	○				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	○	○				
	Indoor Unit ON/OFF Button	○	○				
	Signal Receiving Sign	○	○				
	R/C with Back Light	○	○				
Temperature Display	—	—					

**Note:** ○ : Holding Functions  
— : No Functions

Category	Functions	FYXS25/35FV1B RXS25/35G2V1B9	Category	Functions	FYXS25/35FV1B RXS25/35G2V1B9	
Basic Function	Inverter (with Inverter Power Control)	○	Health & Clean	Air-Purifying Filter	—	
	Operation Limit for Cooling (°CDB)	-10 ~46		Photocatalytic Deodorizing Filter	—	
	Operation Limit for Heating (°CWB)	-15 ~20		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	
	PAM Control	○		Titanium Apatite Photocatalytic Air-Purifying Filter	○	
	Standby Electricity Saving	○		Air Filter (Prefilter)	○	
Compressor	Oval Scroll Compressor	—		Wipe-Clean Flat Panel	○	
	Swing Compressor	○		Washable Grille	—	
	Rotary Compressor	—		MOLD PROOF Operation	—	
	Reluctance DC Motor	○		Good-Sleep Cooling Operation	—	
Comfortable Airflow	Power-Airflow Flap	—		Timer	WEEKLY TIMER Operation	○
	Power-Airflow Dual Flaps	—	24-Hour ON/OFF TIMER		○	
	Power-Airflow Diffuser	—	NIGHT SET Mode		○	
	Wide-Angle Louvers	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	
	Vertical Auto-Swing (Up and Down)	○		Self-Diagnosis (Digital, LED) Display	○	
	Horizontal Auto-Swing (Right and Left)	—		Wiring Error Check Function	—	
	3-D Airflow	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	○	
Comfort Control	Auto Fan Speed	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	
	Indoor Unit Quiet Operation	○		H/P, C/O Compatible Indoor Unit	○	
	NIGHT QUIET Mode (Automatic)	—		Flexible Voltage Correspondence	—	
	OUTDOOR UNIT QUIET Operation (Manual)	○		Chargeless	10 m	
	INTELLIGENT EYE Operation	—	Operation	Either Side Drain (Right or Left)	—	
	Quick Warming Function (Preheating Operation)	○		Power Selection	—	
	Hot-Start Function	○		Remote Control	5-Rooms Centralized Controller (Option)	○
	Automatic Defrosting	○			Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○
Operation	Automatic Operation	○	Remote Control	Remote Control Adaptor (Normal Open Contact) (Option)	○	
	Program Dry Operation	○		DIII-NET Compatible (Adaptor) (Option)	○	
	Fan Only	○	Remote Controller	Wireless	○	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—		Wired (Option)	—	
	Inverter POWERFUL Operation	○				
	Priority-Room Setting	—				
	COOL / HEAT Mode Lock	—				
	HOME LEAVE Operation	—				
ECONO Operation	○					
Indoor Unit ON/OFF Button	○					
Signal Receiving Sign	○					
R/C with Back Light	○					
Temperature Display	—					

**Note:** ○ : Holding Functions  
— : No Functions

# Part 2

# Specifications

1. Specifications .....	9
1.1 Cooling Only .....	9
1.2 Heat Pump .....	14

# 1. Specifications

## 1.1 Cooling Only

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS25FV1B	FVXS35FV1B
	Outdoor Units		RKS25F2V1B	RKS35F2V1B
Capacity Rated (Min. ~ Max.)		kW	2.5 (1.3 ~ 3.0)	3.5 (1.4 ~ 3.8)
		Btu/h	8,500 (4,400 ~ 10,200)	11,900 (4,800 ~ 13,000)
		kcal/h	2,150 (1,120 ~ 2,580)	3,010 (1,200 ~ 3,270)
Moisture Removal		L/h	1.2	1.9
Running Current (Rated)		A	3.5 - 3.3 - 3.2	4.9 - 4.7 - 4.5
Power Consumption Rated (Min. ~ Max.)		W	570 (300 ~ 920)	1,020 (300 ~ 1,250)
Power Factor		%	74.0 - 75.1 - 74.2	94.6 - 94.4 - 94.4
COP (Rated)		W/W	4.39	3.43
Piping Connections	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 20.0	φ 20.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Max. Interunit Piping Length		m	20	20
Max. Interunit Height Difference		m	15	15
Chargeless		m	10	10
Amount of Additional Charge of Refrigerant		g/m	20	20
<b>Indoor Unit</b>			<b>FVXS25FV1B</b>	<b>FVXS35FV1B</b>
Front Panel Color			White	White
Airflow Rate	m <sup>3</sup> /min (cfm)	H	8.2 (290)	8.5 (300)
		M	6.5 (229)	6.7 (237)
		L	4.8 (169)	4.9 (174)
		SL	4.1 (146)	4.5 (158)
Fan	Type		Turbo Fan	Turbo Fan
	Motor Output	W	48	48
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current		A	0.14 - 0.13 - 0.12	0.14 - 0.13 - 0.12
Power Consumption		W	15	15
Power Factor		%	48.7 - 50.2 - 52.1	48.7 - 50.2 - 52.1
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286	696 x 786 x 286
Weight		kg	14	14
Gross Weight		kg	18	18
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23	39 / 33 / 27 / 24
Sound Power		dBA	54	55
<b>Outdoor Unit</b>			<b>RKS25F2V1B</b>	<b>RKS35F2V1B</b>
Casing Color			Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		1YC23NXD	1YC23NXD
	Motor Output	W	600	600
Refrigerant Oil	Type		FVC50K	FVC50K
	Charge	L	0.375	0.375
Refrigerant	Type		R-410A	R-410A
	Charge	kg	1.0	1.0
Airflow Rate	m <sup>3</sup> /min (cfm)	H	33.5 (1,183)	33.5 (1,183)
		L	23.4 (826)	23.4 (826)
Fan	Type		Propeller	Propeller
	Motor Output	W	23	23
Running Current		A	3.4 - 3.2 - 3.1	4.8 - 4.6 - 4.4
Power Consumption		W	555	1,005
Power Factor		%	74.2 - 75.4 - 74.6	95.1 - 95.0 - 95.1
Starting Current		A	3.5	4.9
Dimensions (H x W x D)		mm	550 x 765 x 285	550 x 765 x 285
Packaged Dimensions (H x W x D)		mm	612 x 906 x 364	612 x 906 x 364
Weight		kg	34	34
Gross Weight		kg	40	40
Operation Sound	H / L	dBA	46 / 43	47 / 44
Sound Power	H	dBA	61	62
Drawing No.			3D056295A	3D056296A

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	7.5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae

kcal/h = kW × 860  
Btu/h = kW × 3412  
cfm = m<sup>3</sup>/min × 35.3

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS50FV1B
	Outdoor Units		RKS50F2V1B
Capacity Rated (Min. ~ Max.)		kW	5.0 (1.4 ~ 5.6)
		Btu/h	17,100 (4,800 ~ 19,100)
		kcal/h	4,300 (1,200 ~ 4,820)
Moisture Removal		L/h	2.9
Running Current (Rated)		A	7.2 - 6.8 - 6.6
Power Consumption Rated (Min. ~ Max.)		W	1,550 (500 ~ 2,000)
Power Factor		%	99.2 - 99.1 - 99.4
COP (Rated)		W/W	3.23
Piping Connections	Liquid	mm	φ 6.4
	Gas	mm	φ 12.7
	Drain	mm	φ 20.0
Heat Insulation			Both Liquid and Gas Pipes
Max. Interunit Piping Length		m	30
Max. Interunit Height Difference		m	20
Chargeless		m	10
Amount of Additional Charge of Refrigerant		g/m	20
<b>Indoor Unit</b>			<b>FVXS50FV1B</b>
Front Panel Color			White
Airflow Rate	m <sup>3</sup> /min (cfm)	H	10.7 (378)
		M	9.2 (326)
		L	7.8 (274)
		SL	6.6 (233)
Fan	Type		Turbo Fan
	Motor Output	W	48
	Speed	Steps	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof
Running Current		A	0.18 - 0.17 - 0.16
Power Consumption		W	27
Power Factor		%	68.1 - 69.1 - 70.3
Temperature Control			Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286
Weight		kg	14
Gross Weight		kg	18
Operation Sound	H / M / L / SL	dBA	44 / 40 / 36 / 32
Sound Power		dBA	56
<b>Outdoor Unit</b>			<b>RKS50F2V1B</b>
Casing Color			Ivory White
Compressor	Type		Hermetically Sealed Swing Type
	Model		2YC36BXD
	Motor Output	W	1,100
Refrigerant Oil	Type		FVC50K
	Charge	L	0.65
Refrigerant	Type		R-410A
	Charge	kg	1.5
Airflow Rate	m <sup>3</sup> /min (cfm)	HH	50.9 (1,797)
		H	48.9 (1,727)
		L	41.7 (1,472)
Fan	Type		Propeller
	Motor Output	W	53
Running Current		A	7.02 - 6.64 - 6.44
Power Consumption		W	1,523
Power Factor		%	98.6 - 99.7 - 98.5
Starting Current		A	7.2
Dimensions (H x W x D)		mm	735 x 825 x 300
Packaged Dimensions (H x W x D)		mm	797 x 960 x 390
Weight		kg	48
Gross Weight		kg	52
Operation Sound	H / L	dBA	47 / 44
Sound Power	H	dBA	61
Drawing No.			3D056297

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	7.5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS25FV1B	FVXS35FV1B
	Outdoor Units		RKS25G2V1B	RKS35G2V1B
Capacity Rated (Min. ~ Max.)		kW	2.5 (1.3 ~ 3.0)	3.5 (1.4 ~ 3.8)
		Btu/h	8,500 (4,400 ~ 10,200)	11,900 (4,800 ~ 13,000)
		kcal/h	2,150 (1,120 ~ 2,580)	3,010 (1,200 ~ 3,270)
Moisture Removal		L/h	1.2	1.9
Running Current (Rated)		A	3.5 - 3.3 - 3.2	4.9 - 4.7 - 4.5
Power Consumption Rated (Min. ~ Max.)		W	570 (300 ~ 920)	1,020 (300 ~ 1,250)
Power Factor		%	74.0 - 75.1 - 74.2	94.6 - 94.4 - 94.4
COP (Rated)		W/W	4.39	3.43
Piping Connections	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 20.0	φ 20.0
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Max. Interunit Piping Length		m	20	20
Max. Interunit Height Difference		m	15	15
Chargeless		m	10	10
Amount of Additional Charge of Refrigerant		g/m	20	20
<b>Indoor Unit</b>			<b>FVXS25FV1B</b>	<b>FVXS35FV1B</b>
Front Panel Color			White	White
Airflow Rate	m³/min (cfm)	H	8.2 (290)	8.5 (300)
		M	6.5 (229)	6.7 (237)
		L	4.8 (169)	4.9 (174)
		SL	4.1 (146)	4.5 (158)
Fan	Type		Turbo Fan	Turbo Fan
	Motor Output	W	48	48
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current		A	0.14 - 0.13 - 0.12	0.14 - 0.13 - 0.12
Power Consumption		W	15	15
Power Factor		%	48.7 - 50.2 - 52.1	48.7 - 50.2 - 52.1
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286	696 x 786 x 286
Weight		kg	14	14
Gross Weight		kg	18	18
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23	39 / 33 / 27 / 24
Sound Power		dBA	54	55
<b>Outdoor Unit</b>			<b>RKS25G2V1B</b>	<b>RKS35G2V1B</b>
Casing Color			Ivory White	Ivory White
Compressor	Type		Hermetically Sealed Swing Type	Hermetically Sealed Swing Type
	Model		1YC23AFXD	1YC23AFXD
	Motor Output	W	600	600
Refrigerant Oil	Type		FVC50K	FVC50K
	Charge	L	0.375	0.375
Refrigerant	Type		R-410A	R-410A
	Charge	kg	1.0	1.2
Airflow Rate	m³/min (cfm)	H	33.5 (1,183)	36.0 (1,272)
		SL	31.4 (1,109)	31.4 (1,109)
Fan	Type		Propeller	Propeller
	Motor Output	W	50	50
Running Current		A	3.4 - 3.2 - 3.1	4.8 - 4.6 - 4.4
Power Consumption		W	555	1,005
Power Factor		%	74.2 - 75.4 - 74.6	95.1 - 95.0 - 95.1
Starting Current		A	3.2	4.4
Dimensions (H x W x D)		mm	550 x 765 x 285	550 x 765 x 285
Packaged Dimensions (H x W x D)		mm	612 x 906 x 364	612 x 906 x 364
Weight		kg	34	34
Gross Weight		kg	40	40
Operation Sound	H / SL	dBA	46 / 43	48 / 44
Sound Power	H	dBA	61	63
Drawing No.			3D059858	3D059859

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae
kcal/h = kW × 860 Btu/h = kW × 3412 cfm = m³/min × 35.3

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS50FV1B
	Outdoor Units		RKS50G2V1B
Capacity Rated (Min. ~ Max.)		kW	5.0 (1.4 ~ 5.6)
		Btu/h	17,100 (4,800 ~ 19,100)
		kcal/h	4,300 (1,200 ~ 4,820)
Moisture Removal		L/h	2.9
Running Current (Rated)		A	7.2 - 6.8 - 6.6
Power Consumption Rated (Min. ~ Max.)		W	1,550 (500 ~ 2,000)
Power Factor		%	99.2 - 99.1 - 99.4
COP (Rated)		W/W	3.23
Piping Connections	Liquid	mm	φ 6.4
	Gas	mm	φ 12.7
	Drain	mm	φ 20.0
Heat Insulation			Both Liquid and Gas Pipes
Max. Interunit Piping Length		m	30
Max. Interunit Height Difference		m	20
Chargeless		m	10
Amount of Additional Charge of Refrigerant		g/m	20
<b>Indoor Unit</b>			<b>FVXS50FV1B</b>
Front Panel Color			White
Airflow Rate	m <sup>3</sup> /min (cfm)	H	10.7 (378)
		M	9.2 (326)
		L	7.8 (274)
		SL	6.6 (233)
Fan	Type		Turbo Fan
	Motor Output	W	48
	Speed	Steps	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof
Running Current		A	0.18 - 0.17 - 0.16
Power Consumption		W	27
Power Factor		%	68.1 - 69.1 - 70.3
Temperature Control			Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286
Weight		kg	14
Gross Weight		kg	18
Operation Sound	H / M / L / SL	dBA	44 / 40 / 36 / 32
Sound Power		dBA	56
<b>Outdoor Unit</b>			<b>RKS50G2V1B</b>
Casing Color			Ivory White
Compressor	Type		Hermetically Sealed Swing Type
	Model		2YC36BXD
	Motor Output	W	1,100
Refrigerant Oil	Type		FVC50K
	Charge	L	0.65
Refrigerant	Type		R-410A
	Charge	kg	1.7
Airflow Rate	m <sup>3</sup> /min (cfm)	H	50.9 (1,797)
		SL	48.9 (1,727)
Fan	Type		Propeller
	Motor Output	W	53
Running Current		A	7.02 - 6.64 - 6.44
Power Consumption		W	1,523
Power Factor		%	98.6 - 99.7 - 98.5
Starting Current		A	7.1
Dimensions (H x W x D)		mm	735 x 825 x 300
Packaged Dimensions (H x W x D)		mm	797 x 960 x 390
Weight		kg	47
Gross Weight		kg	52
Operation Sound	H / SL	dBA	48 / 44
Sound Power	H	dBA	62
Drawing No.			3D059860

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS25FV1B		FVXS35FV1B	
	Outdoor Units		RKS25G2V1B9		RKS35G2V1B9	
Capacity Rated (Min. ~ Max.)		kW	2.5 (1.3 ~ 3.0)		3.5 (1.4 ~ 3.8)	
		Btu/h	8,500 (4,400 ~ 10,200)		11,900 (4,800 ~ 13,000)	
		kcal/h	2,150 (1,120 ~ 2,580)		3,010 (1,200 ~ 3,270)	
Moisture Removal		L/h	1.2		1.9	
Running Current (Rated)		A	3.5 - 3.3 - 3.2		4.9 - 4.7 - 4.5	
Power Consumption Rated (Min. ~ Max.)		W	570 (300 ~ 920)		1,020 (300 ~ 1,250)	
Power Factor		%	74.0 - 75.1 - 74.2		94.6 - 94.4 - 94.4	
COP (Rated)		W/W	4.39		3.43	
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 20.0		φ 20.0	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length		m	20		20	
Max. Interunit Height Difference		m	15		15	
Chargeless		m	10		10	
Amount of Additional Charge of Refrigerant		g/m	20		20	
<b>Indoor Unit</b>			<b>FVXS25FV1B</b>		<b>FVXS35FV1B</b>	
Front Panel Color			White		White	
Airflow Rate	m³/min (cfm)	H	8.2 (290)		8.5 (300)	
		M	6.5 (229)		6.7 (237)	
		L	4.8 (169)		4.9 (174)	
		SL	4.1 (146)		4.5 (158)	
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	48		48	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current		A	0.14 - 0.13 - 0.12		0.14 - 0.13 - 0.12	
Power Consumption		W	15		15	
Power Factor		%	48.7 - 50.2 - 52.1		48.7 - 50.2 - 52.1	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	600 x 700 x 210		600 x 700 x 210	
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286		696 x 786 x 286	
Weight		kg	14		14	
Gross Weight		kg	18		18	
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23		39 / 33 / 27 / 24	
Sound Power		dBA	54		55	
<b>Outdoor Unit</b>			<b>RKS25G2V1B9</b>		<b>RKS35G2V1B9</b>	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23AEXD		1YC23AEXD	
	Motor Output	W	600		600	
Refrigerant Oil	Type		FVC50K		FVC50K	
	Charge	L	0.375		0.375	
Refrigerant	Type		R-410A		R-410A	
	Charge	kg	1.0		1.2	
Airflow Rate	m³/min (cfm)	H	33.5 (1,183)		36.2 (1,278)	
		SL	30.1 (1,064)		32.7 (1,153)	
Fan	Type		Propeller		Propeller	
	Motor Output	W	23		23	
Running Current		A	3.4 - 3.2 - 3.1		4.8 - 4.6 - 4.4	
Power Consumption		W	555		1,005	
Power Factor		%	74.2 - 75.4 - 74.6		95.1 - 95.0 - 95.1	
Starting Current		A	3.2		4.4	
Dimensions (H x W x D)		mm	550 x 765 x 285		550 x 765 x 285	
Packaged Dimensions (H x W x D)		mm	612 x 906 x 364		612 x 906 x 364	
Weight		kg	34		34	
Gross Weight		kg	38		38	
Operation Sound	H / SL	dBA	46 / 43		48 / 44	
Sound Power	H	dBA	61		63	
Drawing No.			3D065722		3D065723	

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$



## 1.2 Heat Pump

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS25FV1B		FVXS35FV1B	
	Outdoor Units		RXS25F2V1B		RXS35F2V1B	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min. ~ Max.)	kW		2.5 (1.3 ~ 3.0)	3.4 (1.3 ~ 4.5)	3.5 (1.4 ~ 3.8)	4.5 (1.4 ~ 5.0)
	Btu/h		8,500 (4,400 ~ 10,200)	11,600 (4,400 ~ 17,100)	11,900 (4,800 ~ 13,000)	15,400 (4,800 ~ 17,100)
	kcal/h		2,150 (1,120 ~ 2,580)	2,920 (1,120 ~ 4,300)	3,010 (1,200 ~ 3,270)	3,870 (1,200 ~ 4,300)
Moisture Removal	L/h		1.2	—	1.9	—
Running Current Rated	A		3.5 - 3.3 - 3.2	4.5 - 4.3 - 4.1	4.9 - 4.7 - 4.5	5.9 - 5.6 - 5.4
Power Consumption Rated (Min. ~ Max.)	W		570 (300 ~ 920)	790 (290 ~ 1,390)	1,020 (300 ~ 1,250)	1,220 (310 ~ 1,880)
Power Factor	%		74.0 - 75.1 - 74.2	79.8 - 79.9 - 80.3	94.6 - 94.4 - 94.4	94.0 - 94.7 - 94.1
COP Rated (Min. ~ Max.)	W/W		4.39	4.30	3.43	3.69
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 20		φ 20	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	m		20		20	
Max. Interunit Height Difference	m		15		15	
Chargeless	m		10		10	
Amount of Additional Charge of Refrigerant	g/m		20		20	
<b>Indoor Unit</b>			<b>FVXS25FV1B</b>		<b>FVXS35FV1B</b>	
Front Panel Color			White		White	
Airflow Rate	m <sup>3</sup> /min (cfm)	H	8.2 (290)	8.8 (311)	8.5 (300)	9.4 (332)
		M	6.5 (229)	6.9 (244)	6.7 (237)	7.3 (258)
		L	4.8 (169)	5.0 (178)	4.9 (174)	5.2 (184)
		SL	4.1 (146)	4.4 (155)	4.5 (158)	4.7 (168)
Fan	Type	Turbo Fan		Turbo Fan		
	Motor Output	W		48		
	Speed	Steps		5 Steps, Quiet, Auto		
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13	0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13
Power Consumption (Rated)	W		15	17	15	17
Power Factor	%		48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5	48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm		600 x 700 x 210		600 x 700 x 210	
Packaged Dimensions (H x W x D)	mm		696 x 786 x 286		696 x 786 x 286	
Weight	kg		14		14	
Gross Weight	kg		18		18	
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23	38 / 32 / 26 / 23	39 / 33 / 27 / 24	39 / 33 / 27 / 24
Sound Power	dBA		54	54	55	55
<b>Outdoor Unit</b>			<b>RXS25F2V1B</b>		<b>RXS35F2V1B</b>	
Casing Color			Ivory White		Ivory White	
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model	1YC23NXD		1YC23NXD		
Refrigerant Oil	Motor Output	W		600		
	Type	FVC50K		FVC50K		
Refrigerant	Charge	L		0.375		
	Type	R-410A		R-410A		
Refrigerant	Charge	kg		1.0		
	Type	R-410A		R-410A		
Airflow Rate	m <sup>3</sup> /min (cfm)	H	33.5 (1,183)	30.2 (1,066)	33.5 (1,183)	30.2 (1,066)
		L	23.4 (826)	28.3 (999)	23.4 (826)	28.3 (999)
Fan	Type	Propeller		Propeller		
	Motor Output	W		23		
Running Current (Rated)	A		3.4 - 3.2 - 3.1	4.4 - 4.2 - 4.0	4.8 - 4.6 - 4.4	5.8 - 5.5 - 5.3
Power Consumption (Rated)	W		555	773	1,005	1,203
Power Factor (Rated)	%		74.2 - 75.4 - 74.6	80.3 - 80.0 - 80.5	95.1 - 95.0 - 95.1	94.3 - 95.1 - 94.6
Starting Current	A		4.5		5.9	
Dimensions (H x W x D)	mm		550 x 765 x 285		550 x 765 x 285	
Packaged Dimensions (H x W x D)	mm		612 x 906 x 364		612 x 906 x 364	
Weight	kg		34		34	
Gross Weight	kg		40		40	
Operation Sound	H / L	dBA	46 / 43	47 / 44	47 / 44	48 / 45
Sound Power	H	dBA	61	62	62	63
Drawing No.			3D056274A		3D056275A	

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	7.5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS50FV1B	
	Outdoor Units		RXS50F2V1B	
			Cooling	Heating
Capacity Rated (Min. ~ Max.)		kW	5.0 (1.4 ~ 5.6)	5.8 (1.4 ~ 8.1)
		Btu/h	17,100 (4,800 ~ 19,100)	19,800 (4,800 ~ 27,600)
		kcal/h	4,300 (1,200 ~ 4,820)	4,990 (1,200 ~ 6,970)
Moisture Removal		L/h	2.9	—
Running Current (Rated)		A	7.2 - 6.8 - 6.6	7.3 - 7.0 - 6.7
Power Consumption Rated (Min. ~ Max.)		W	1,550 (500 ~ 2,000)	1,600 (500 ~ 2,600)
Power Factor		%	99.2 - 99.1 - 99.4	99.6 - 99.3 - 99.5
COP (Rated)		W/W	3.23	3.63
Piping Connections	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	φ 20.0	
Heat Insulation			Both Liquid and Gas Pipes	
Max. Interunit Piping Length		m	30	
Max. Interunit Height Difference		m	20	
Chargeless		m	10	
Amount of Additional Charge of Refrigerant		g/m	20	
<b>Indoor Unit</b>			<b>FVXS50FV1B</b>	
Front Panel Color			White	
Airflow Rate	m³/min (cfm)	H	10.7 (378)	11.8 (417)
		M	9.2 (326)	10.1 (358)
		L	7.8 (274)	8.5 (300)
		SL	6.6 (233)	7.1 (250)
Fan	Type		Turbo Fan	
	Motor Output	W	48	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof	
Running Current		A	0.18 - 0.17 - 0.16	0.20 - 0.19 - 0.18
Power Consumption		W	27	34
Power Factor		%	68.1 - 69.1 - 70.3	77.3 - 77.8 - 78.7
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)		mm	600 x 700 x 210	
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286	
Weight		kg	14	
Gross Weight		kg	18	
Operation Sound	H / M / L / SL	dBA	44 / 40 / 36 / 32	45 / 40 / 36 / 32
Sound Power		dBA	56	57
<b>Outdoor Unit</b>			<b>RXS50F2V1B</b>	
Casing Color			Ivory White	
Compressor	Type		Hermetically Sealed Swing Type	
	Model		2YC36BXD	
	Motor Output	W	1,100	
Refrigerant Oil	Type		FVC50K	
	Charge	L	0.65	
Refrigerant	Type		R-410A	
	Charge	kg	1.5	
Airflow Rate	m³/min (cfm)	HH	50.9 (1,797)	—
		H	48.9 (1,727)	45.0 (1,589)
		L	41.7(1,472)	45.0 (1,589)
Fan	Type		Propeller	
	Motor Output	W	53	
Running Current		A	7.02 - 6.64 - 6.44	7.14 - 6.83 - 6.54
Power Consumption		W	1,523	1,566
Power Factor		%	98.6 - 99.7 - 98.5	99.7 - 99.7 - 99.8
Starting Current		A	7.3	
Dimensions (H x W x D)		mm	735 x 825 x 300	
Packaged Dimensions (H x W x D)		mm	797 x 960 x 390	
Weight		kg	48	
Gross Weight		kg	53	
Operation Sound	H / L	dBA	47 / 44	48 / 45
Sound Power	H	dBA	61	62
Drawing No.			3D056276	

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	7.5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae

kcal/h = kW x 860  
Btu/h = kW x 3412  
cfm = m³/min x 35.3

## 50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FXVS25FV1B		FXVS35FV1B	
	Outdoor Units		RXS25G2V1B		RXS35G2V1B	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min. ~ Max.)	kW		2.5 (1.3 ~ 3.0)	3.4 (1.3 ~ 4.5)	3.5 (1.4 ~ 3.8)	4.5 (1.4 ~ 5.0)
	Btu/h		8,500 (4,400 ~ 10,200)	11,600 (4,400 ~ 17,100)	11,900 (4,800 ~ 13,000)	15,400 (4,800 ~ 17,100)
	kcal/h		2,150 (1,120 ~ 2,580)	2,920 (1,120 ~ 4,300)	3,010 (1,200 ~ 3,270)	3,870 (1,200 ~ 4,300)
Moisture Removal	L/h		1.2	—	1.9	—
Running Current Rated	A		3.5 - 3.3 - 3.2	4.5 - 4.3 - 4.1	4.9 - 4.7 - 4.5	5.9 - 5.6 - 5.4
Power Consumption Rated (Min. ~ Max.)	W		570 (300 ~ 920)	790 (290 ~ 1,390)	1,020 (300 ~ 1,250)	1,220 (310 ~ 1,880)
Power Factor	%		74.0 - 75.1 - 74.2	79.8 - 79.9 - 80.3	94.6 - 94.4 - 94.4	94.0 - 94.7 - 94.1
COP Rated (Min. ~ Max.)	W/W		4.39	4.30	3.43	3.69
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 20		φ 20	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	m		20		20	
Max. Interunit Height Difference	m		15		15	
Chargeless	m		10		10	
Amount of Additional Charge of Refrigerant	g/m		20		20	
<b>Indoor Unit</b>			<b>FXVS25FV1B</b>		<b>FXVS35FV1B</b>	
Front Panel Color			White		White	
Airflow Rate	m <sup>3</sup> /min (cfm)	H	8.2 (290)	8.8 (311)	8.5 (300)	9.4 (332)
		M	6.5 (229)	6.9 (244)	6.7 (237)	7.3 (258)
		L	4.8 (169)	5.0 (178)	4.9 (174)	5.2 (184)
		SL	4.1 (146)	4.4 (155)	4.5 (158)	4.7 (168)
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	48		48	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13	0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13
Power Consumption (Rated)	W		15	17	15	17
Power Factor	%		48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5	48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H × W × D)	mm		600 × 700 × 210		600 × 700 × 210	
Packaged Dimensions (H × W × D)	mm		696 × 786 × 286		696 × 786 × 286	
Weight	kg		14		14	
Gross Weight	kg		18		18	
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23	38 / 32 / 26 / 23	39 / 33 / 27 / 24	39 / 33 / 27 / 24
Sound Power		dBA	54	54	55	55
<b>Outdoor Unit</b>			<b>RXS25G2V1B</b>		<b>RXS35G2V1B</b>	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23AFXD		1YC23AFXD	
Refrigerant Oil	Motor Output	W	600		600	
	Type		FVC50K		FVC50K	
Refrigerant	Charge	L	0.375		0.375	
	Type		R-410A		R-410A	
Airflow Rate	m <sup>3</sup> /min (cfm)	H	33.5 (1,183)	30.2 (1,066)	36.0 (1,272)	30.2 (1,066)
		SL	31.4 (1,109)	22.6 (798)	31.4 (1,109)	22.6 (798)
Fan	Type		Propeller		Propeller	
	Motor Output	W	50		50	
Running Current (Rated)	A		3.4 - 3.2 - 3.1	4.4 - 4.2 - 4.0	4.8 - 4.6 - 4.4	5.8 - 5.5 - 5.3
Power Consumption (Rated)	W		555	773	1,005	1,203
Power Factor (Rated)	%		74.2 - 75.4 - 74.6	80.3 - 80.0 - 80.5	95.1 - 95.0 - 95.1	94.3 - 95.1 - 94.6
Starting Current	A		4.3		4.8	
Dimensions (H × W × D)	mm		550 × 765 × 285		550 × 765 × 285	
Packaged Dimensions (H × W × D)	mm		612 × 906 × 364		612 × 906 × 364	
Weight	kg		34		34	
Gross Weight	kg		40		40	
Operation Sound	H / SL	dBA	46 / 43	47 / 44	48 / 44	48 / 45
Sound Power	H	dBA	61	62	63	63
Drawing No.			3D059825		3D059826	

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae
kcal/h = kW × 860 Btu/h = kW × 3412 cfm = m <sup>3</sup> /min × 35.3

50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS50FV1B	
	Outdoor Units		RXS50G2V1B	
			Cooling	Heating
Capacity Rated (Min. ~ Max.)		kW	5.0 (1.4 ~ 5.6)	5.8 (1.4 ~ 8.1)
		Btu/h	17,100 (4,800 ~ 19,100)	19,800 (4,800 ~ 27,600)
		kcal/h	4,300 (1,200 ~ 4,820)	4,990 (1,200 ~ 6,970)
Moisture Removal		L/h	2.9	—
Running Current (Rated)		A	7.2 - 6.8 - 6.6	7.3 - 7.0 - 6.7
Power Consumption Rated (Min. ~ Max.)		W	1,550 (500 ~ 2,000)	1,600 (500 ~ 2,600)
Power Factor		%	99.2 - 99.1 - 99.4	99.6 - 99.3 - 99.5
COP (Rated)		W/W	3.23	3.63
Piping Connections	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	φ 20.0	
Heat Insulation			Both Liquid and Gas Pipes	
Max. Interunit Piping Length		m	30	
Max. Interunit Height Difference		m	20	
Chargeless		m	10	
Amount of Additional Charge of Refrigerant		g/m	20	
<b>Indoor Unit</b>			<b>FVXS50FV1B</b>	
Front Panel Color			White	
Airflow Rate	m³/min (cfm)	H	10.7 (378)	11.8 (417)
		M	9.2 (326)	10.1 (358)
		L	7.8 (274)	8.5 (300)
		SL	6.6 (233)	7.1 (250)
Fan	Type		Turbo Fan	
	Motor Output	W	48	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof	
Running Current		A	0.18 - 0.17 - 0.16	0.20 - 0.19 - 0.18
Power Consumption		W	27	34
Power Factor		%	68.1 - 69.1 - 70.3	77.3 - 77.8 - 78.7
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)		mm	600 x 700 x 210	
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286	
Weight		kg	14	
Gross Weight		kg	18	
Operation Sound	H / M / L / SL	dBA	44 / 40 / 36 / 32	45 / 40 / 36 / 32
Sound Power		dBA	56	57
<b>Outdoor Unit</b>			<b>RXS50G2V1B</b>	
Casing Color			Ivory White	
Compressor	Type		Hermetically Sealed Swing Type	
	Model		2YC36BXD	
	Motor Output	W	1,100	
Refrigerant Oil	Type		FVC50K	
	Charge	L	0.65	
Refrigerant	Type		R-410A	
	Charge	kg	1.7	
Airflow Rate	m³/min (cfm)	H	50.9 (1,797)	45.0 (1,589)
		SL	48.9 (1,727)	43.1 (1,522)
Fan	Type		Propeller	
	Motor Output	W	53	
Running Current		A	7.02 - 6.64 - 6.44	7.14 - 6.83 - 6.54
Power Consumption		W	1,523	1,566
Power Factor		%	98.6 - 99.7 - 98.5	99.7 - 99.7 - 99.8
Starting Current		A	7.3	
Dimensions (H x W x D)		mm	735 x 825 x 300	
Packaged Dimensions (H x W x D)		mm	797 x 960 x 390	
Weight		kg	48	
Gross Weight		kg	53	
Operation Sound	H / SL	dBA	48 / 44	48 / 45
Sound Power	H	dBA	62	62
Drawing No.			3D059827	

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae

kcal/h = kW x 860  
Btu/h = kW x 3412  
cfm = m³/min x 35.3

## 50 Hz, 220 - 230 - 240 V

Model	Indoor Units		FVXS25FV1B		FVXS35FV1B	
	Outdoor Units		RXS25G2V1B9		RXS35G2V1B9	
			Cooling	Heating	Cooling	Heating
Capacity Rated (Min. ~ Max.)	kW		2.5 (1.3 ~ 3.0)	3.4 (1.3 ~ 4.5)	3.5 (1.4 ~ 3.8)	4.5 (1.4 ~ 5.0)
	Btu/h		8,500 (4,400 ~ 10,200)	11,600 (4,400 ~ 17,100)	11,900 (4,800 ~ 13,000)	15,400 (4,800 ~ 17,100)
	kcal/h		2,150 (1,120 ~ 2,580)	2,920 (1,120 ~ 4,300)	3,010 (1,200 ~ 3,270)	3,870 (1,200 ~ 4,300)
Moisture Removal	L/h		1.2	—	1.9	—
Running Current Rated	A		3.5 - 3.3 - 3.2	4.5 - 4.3 - 4.1	4.9 - 4.7 - 4.5	5.9 - 5.6 - 5.4
Power Consumption Rated (Min. ~ Max.)	W		570 (300 ~ 920)	790 (290 ~ 1,390)	1,020 (300 ~ 1,250)	1,220 (310 ~ 1,880)
Power Factor	%		74.0 - 75.1 - 74.2	79.8 - 79.9 - 80.3	94.6 - 94.4 - 94.4	94.0 - 94.7 - 94.1
COP Rated (Min. ~ Max.)	W/W		4.39	4.30	3.43	3.69
Piping Connections	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 20		φ 20	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Max. Interunit Piping Length	m		20		20	
Max. Interunit Height Difference	m		15		15	
Chargeless	m		10		10	
Amount of Additional Charge of Refrigerant	g/m		20		20	
<b>Indoor Unit</b>			<b>FVXS25FV1B</b>		<b>FVXS35FV1B</b>	
Front Panel Color			White		White	
Airflow Rate	m <sup>3</sup> /min (cfm)	H	8.2 (290)	8.8 (311)	8.5 (300)	9.4 (332)
		M	6.5 (229)	6.9 (244)	6.7 (237)	7.3 (258)
		L	4.8 (169)	5.0 (178)	4.9 (174)	5.2 (184)
		SL	4.1 (146)	4.4 (155)	4.5 (158)	4.7 (168)
Fan	Type		Turbo Fan		Turbo Fan	
	Motor Output	W	48		48	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A		0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13	0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13
Power Consumption (Rated)	W		15	17	15	17
Power Factor	%		48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5	48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H × W × D)	mm		600 × 700 × 210		600 × 700 × 210	
Packaged Dimensions (H × W × D)	mm		696 × 786 × 286		696 × 786 × 286	
Weight	kg		14		14	
Gross Weight	kg		18		18	
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23	38 / 32 / 26 / 23	39 / 33 / 27 / 24	39 / 33 / 27 / 24
Sound Power		dBA	54	54	55	55
<b>Outdoor Unit</b>			<b>RXS25G2V1B9</b>		<b>RXS35G2V1B9</b>	
Casing Color			Ivory White		Ivory White	
Compressor	Type		Hermetically Sealed Swing Type		Hermetically Sealed Swing Type	
	Model		1YC23AEXD		1YC23AEXD	
Refrigerant Oil	Motor Output	W	600		600	
	Type		FVC50K		FVC50K	
Refrigerant	Charge	L	0.375		0.375	
	Type		R-410A		R-410A	
Airflow Rate	m <sup>3</sup> /min (cfm)	H	33.5 (1,183)	28.3 (999)	36.0 (1,272)	28.3 (999)
		SL	30.1 (1,064)	25.6 (905)	30.1 (1,064)	25.6 (905)
Fan	Type		Propeller		Propeller	
	Motor Output	W	23		23	
Running Current (Rated)	A		3.4 - 3.2 - 3.1	4.4 - 4.2 - 4.0	4.8 - 4.6 - 4.4	5.8 - 5.5 - 5.3
Power Consumption (Rated)	W		555	773	1,005	1,203
Power Factor (Rated)	%		74.2 - 75.4 - 74.6	80.3 - 80.0 - 80.5	95.1 - 95.0 - 95.1	94.3 - 95.1 - 94.6
Starting Current	A		4.3		4.8	
Dimensions (H × W × D)	mm		550 × 765 × 285		550 × 765 × 285	
Packaged Dimensions (H × W × D)	mm		612 × 906 × 364		612 × 906 × 364	
Weight	kg		34		34	
Gross Weight	kg		38		38	
Operation Sound	H / SL	dBA	46 / 43	47 / 44	48 / 44	48 / 45
Sound Power	H	dBA	61	62	63	63
Drawing No.			3D065718		3D065719	

**Note:** ■ The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB / 24°CWB	5 m

■ SL : The quiet fan level of the airflow rate setting.

Conversion Formulae
kcal/h = kW × 860 Btu/h = kW × 3412 cfm = m <sup>3</sup> /min × 35.3

# Part 3 Printed Circuit Board Connector Wiring Diagram

1. Printed Circuit Board Connector Wiring Diagram.....	20
1.1 Indoor Unit.....	20
1.2 Outdoor Unit.....	22

# 1. Printed Circuit Board Connector Wiring Diagram

## 1.1 Indoor Unit

---

### Connectors and Other Parts

#### PCB(1): Sensor PCB

- |               |                             |
|---------------|-----------------------------|
| 1) S49        | Connector for control PCB   |
| 2) RTH2 (R1T) | Room temperature thermistor |

#### PCB(2): Control PCB

- |               |  |
|---------------|--|
| 1) S1         | Connector for fan motor  |
| 2) S21        | Connector for centralized control (HA)                             |
| 3) S26        | Connector for service PCB  |
| 4) S32        | Connector for indoor heat exchanger thermistor                     |
| 5) S41        | Connector for lower air outlet motor                               |
| 6) S42        | Connector for swing motor  |
| 7) S46        | Connector for display PCB  |
| 8) S48        | Connector for sensor PCB   |
| 9) H1, H2, H3 | Connector for terminal board                                       |
| 10) E1        | Connector for earth  |
| 11) V1, V2    | Varistor   |
| 12) JA        | Address setting jumper<br>* Refer to page 258 for detail.          |
| JB            | Fan speed setting when compressor stops for thermostat OFF         |
| JC            | Power failure recovery function<br>* Refer to page 261 for detail. |
| 13) FU1 (F1U) | Fuse (3.15A, 250V)   |
| 14) LED A     | LED for service monitor (green)                                    |

#### PCB(3): Service PCB

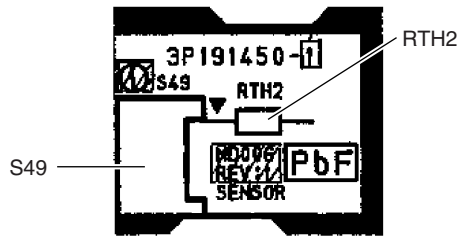
- |              |  |
|--------------|--|
| 1) S27       | Connector for control PCB  |
| 2) SW2-4     | Switch for upward airflow limit setting<br>* Refer to page 261 for detail. |
| 3) SW4 (S4W) | Switch for air outlet selection<br>* Refer to page 60, 66 for detail.      |

#### PCB(4): Display PCB

- |               |                                |
|---------------|--------------------------------|
| 1) S47        | Connector for control PCB      |
| 2) SW1 (S1W)  | Forced operation ON/OFF button |
| 3) LED1 (H1P) | LED for operation (green)      |
| 4) LED2 (H2P) | LED for timer (yellow)         |


PCB Detail

PCB(1): Sensor PCB




3P191450-1

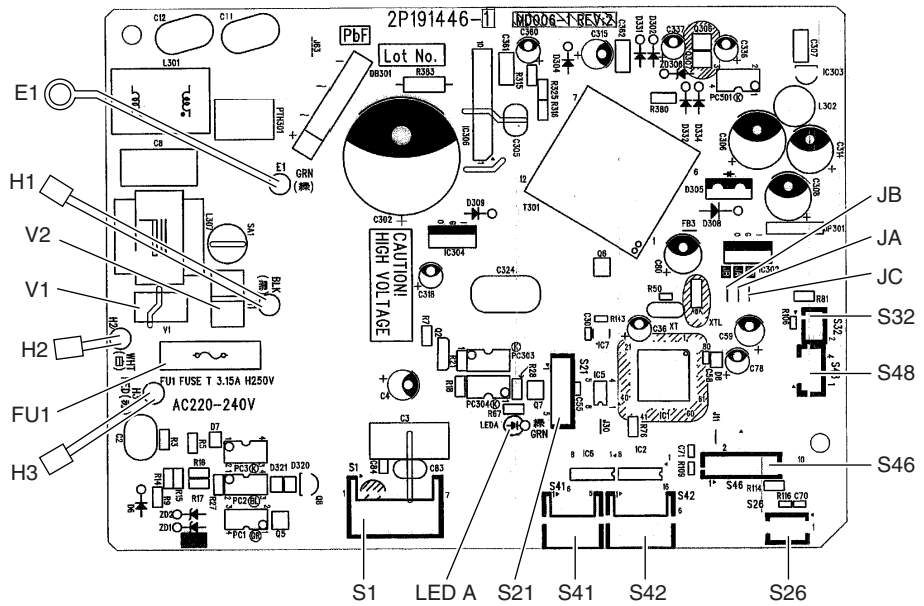PCB(2): Control PCB




2P191446-1

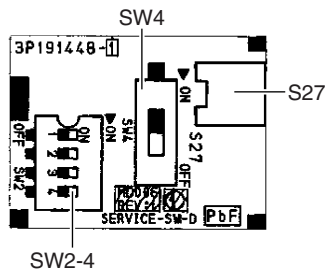PCB(3): Service PCB



3P191448-1

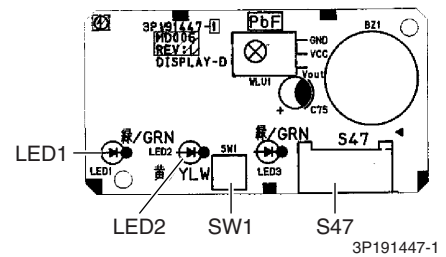PCB(4): Display PCB



3P191447-1



## 1.2 Outdoor Unit

### 1.2.1 RK(X)S25/35F2V1B

#### Connectors and Other Parts

#### PCB (1): Filter PCB

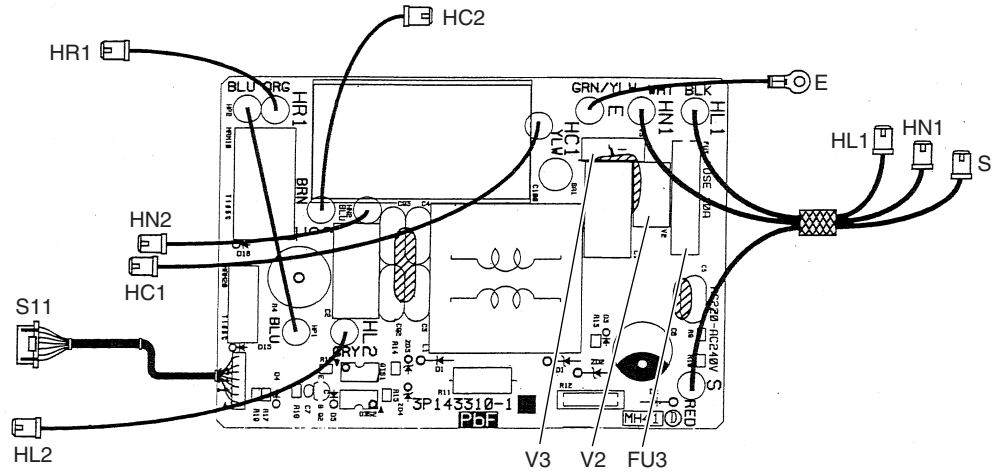
- |                         |                              |
|-------------------------|------------------------------|
| 1) S11                  | Connector for main PCB       |
| 2) HL1, HN1, S          | Connector for terminal board |
| 3) E                    | Terminal for earth           |
| 4) HC1, HC2<br>HL2, HN2 | Connector for main PCB       |
| 5) HR1                  | Connector for reactor        |
| 6) FU3                  | Fuse (20 A, 250 V)           |
| 7) V2, V3               | Varistor                     |

#### PCB (2): Main PCB

- |                         |  |
|-------------------------|--|
| 1) S10                  | Connector for filter PCB   |
| 2) S20                  | Connector for electronic expansion valve coil  |
| 3) S30                  | Connector for compressor   |
| 4) S40                  | Connector for overload protector   |
| 5) S70                  | Connector for fan motor  |
| 6) S80                  | Connector for four way valve coil  |
| 7) S90                  | Connector for thermistors<br>(outdoor temperature, outdoor heat exchanger, discharge pipe) |
| 8) HC3, HC4<br>HL3, HN3 | Connector for filter PCB   |
| 9) HR2                  | Connector for reactor  |
| 10)FU1, FU2             | Fuse (3.15 A, 250 V)   |
| 11)LED A                | LED for service monitor (green)  |
| 12)V1                   | Varistor   |
| 13)J5                   | Jumper for improvement of defrost performance<br>* Refer to page 261 for detail.           |
| 14)J8                   | Jumper for facility setting<br>* Refer to page 260 for detail.                             |


PCB Detail

PCB(1): Filter PCB



3P143310-1

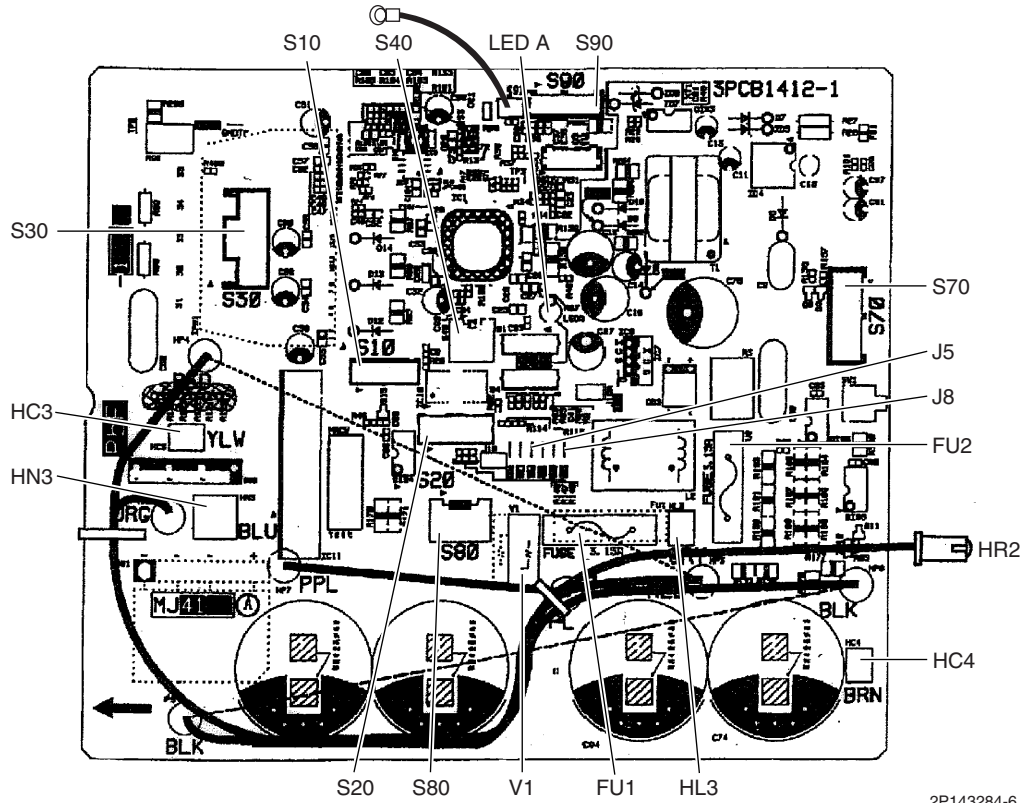PCB(2): Main PCB



2P143284-6

## 1.2.2 RK(X)S25/35G2V1B

### Connectors and Other Parts

#### PCB (1): Filter PCB

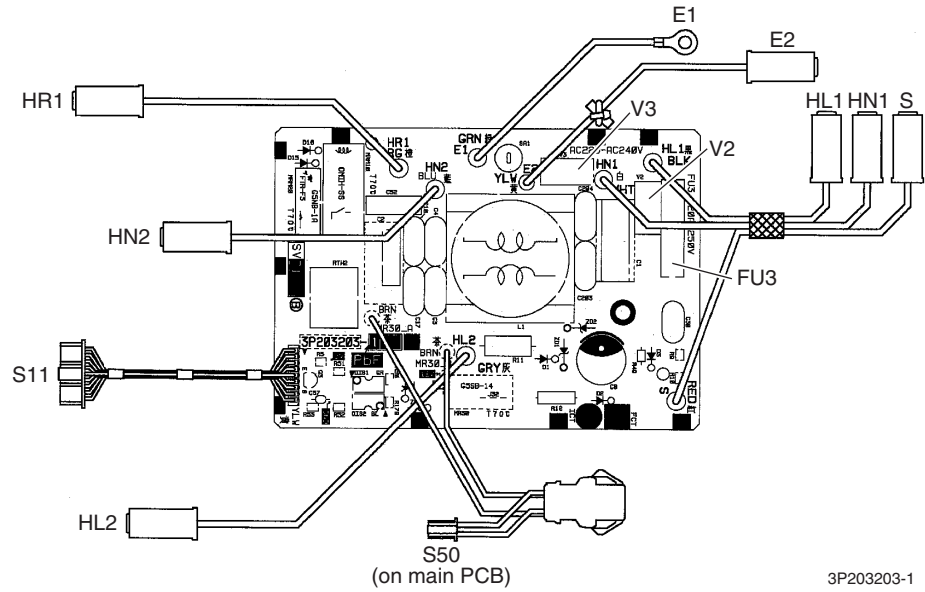
- |                |                                      |
|----------------|--------------------------------------|
| 1) S11         | Connector for main PCB               |
| 2) HL1, HN1, S | Connector for terminal board         |
| 3) E1          | Terminal for earth                   |
| 4) E2          | Connector for terminal board (earth) |
| 5) HL2, HN2    | Connector for main PCB               |
| 6) HR1         | Connector for reactor                |
| 7) FU3         | Fuse (20 A, 250 V)                   |
| 8) V2, V3      | Varistor                             |

#### PCB (2): Main PCB


- |             |  |
|-------------|--|
| 1) S10      | Connector for filter PCB   |
| 2) S20      | Connector for electronic expansion valve coil  |
| 3) S30      | Connector for compressor   |
| 4) S40      | Connector for overload protector   |
| 5) S50      | Connector for magnetic relay   |
| 6) S70      | Connector for fan motor  |
| 7) S80      | Connector for four way valve coil  |
| 8) S90      | Connector for thermistors<br>(outdoor temperature, outdoor heat exchanger, discharge pipe) |
| 9) HL3, HN3 | Connector for filter PCB   |
| 10)HR2      | Connector for reactor  |
| 11)FU1, FU2 | Fuse (3.15 A, 250 V)   |
| 12)LED A    | LED for service monitor (green)  |
| 13)V1       | Varistor   |
| 14)J5       | Jumper for improvement of defrost performance<br>* Refer to page 261 for detail.           |
| 15)J8       | Jumper for facility setting<br>* Refer to page 260 for detail.                             |

PCB Detail

PCB (1): Filter PCB



PCB (2): Main PCB

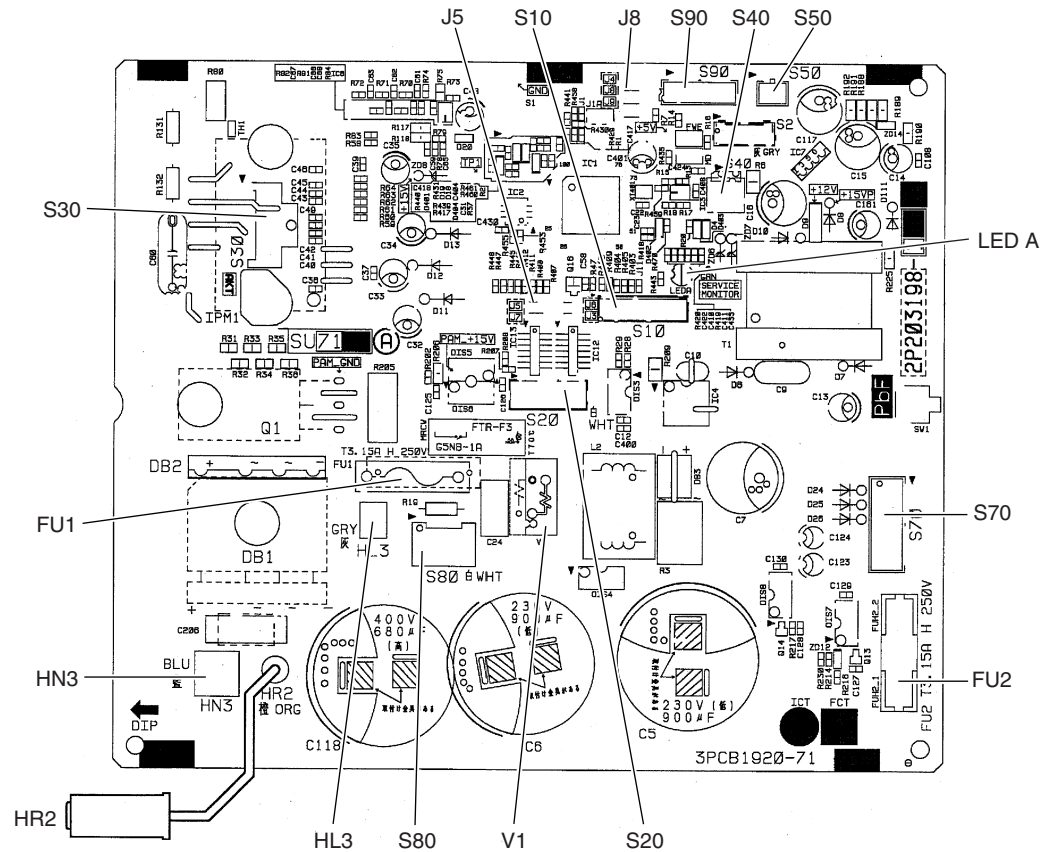

2P203198-1

### 1.2.3 RK(X)S25/35G2V1B9

#### Connectors and Other Parts

#### PCB (1): Filter PCB

- |                |                              |
|----------------|------------------------------|
| 1) S11         | Connector for main PCB       |
| 2) AC1, AC2, S | Connector for terminal board |
| 3) E1, E2      | Terminal for earth           |
| 4) HL2, HN2    | Connector for main PCB       |
| 5) HR1         | Connector for reactor        |
| 6) FU1         | Fuse (3.15 A, 250 V)         |
| 7) FU3         | Fuse (20 A, 250 V)           |
| 8) V2, V3      | Varistor                     |

#### PCB (2): Main PCB

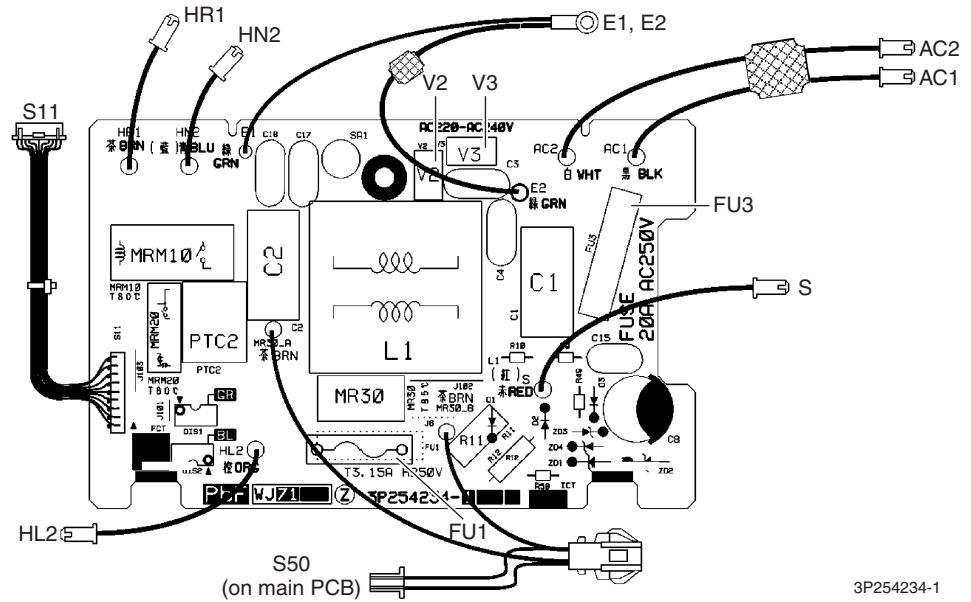
- |             |  |
|-------------|--|
| 1) S10      | Connector for filter PCB   |
| 2) S20      | Connector for electronic expansion valve coil  |
| 3) S40      | Connector for overload protector   |
| 4) S50      | Connector for magnetic relay   |
| 5) S70      | Connector for fan motor  |
| 6) S80      | Connector for four way valve coil  |
| 7) S90      | Connector for thermistors<br>(outdoor temperature, outdoor heat exchanger, discharge pipe) |
| 8) S100     | Connector for forced operation button PCB  |
| 9) HL3, HN3 | Connector for filter PCB   |
| 10)HR2      | Connector for reactor  |
| 11)U, V, W  | Connector for compressor   |
| 12)FU2      | Fuse (3.15 A, 250 V)   |
| 13)LED A    | LED for service monitor (green)  |
| 14)V1       | Varistor   |
| 15)J4       | Jumper for facility setting<br>* Refer to page 260 for detail.                             |
| 16)J5       | Jumper for improvement of defrost performance<br>* Refer to page 261 for detail.           |

#### PCB (3): Forced Operation Button PCB


- |         |                                |
|---------|--------------------------------|
| 1) S110 | Connector for main PCB         |
| 2) SW1  | Forced operation ON/OFF button |

PCB Detail


PCB (1): Filter PCB



PCB (2): Main PCB

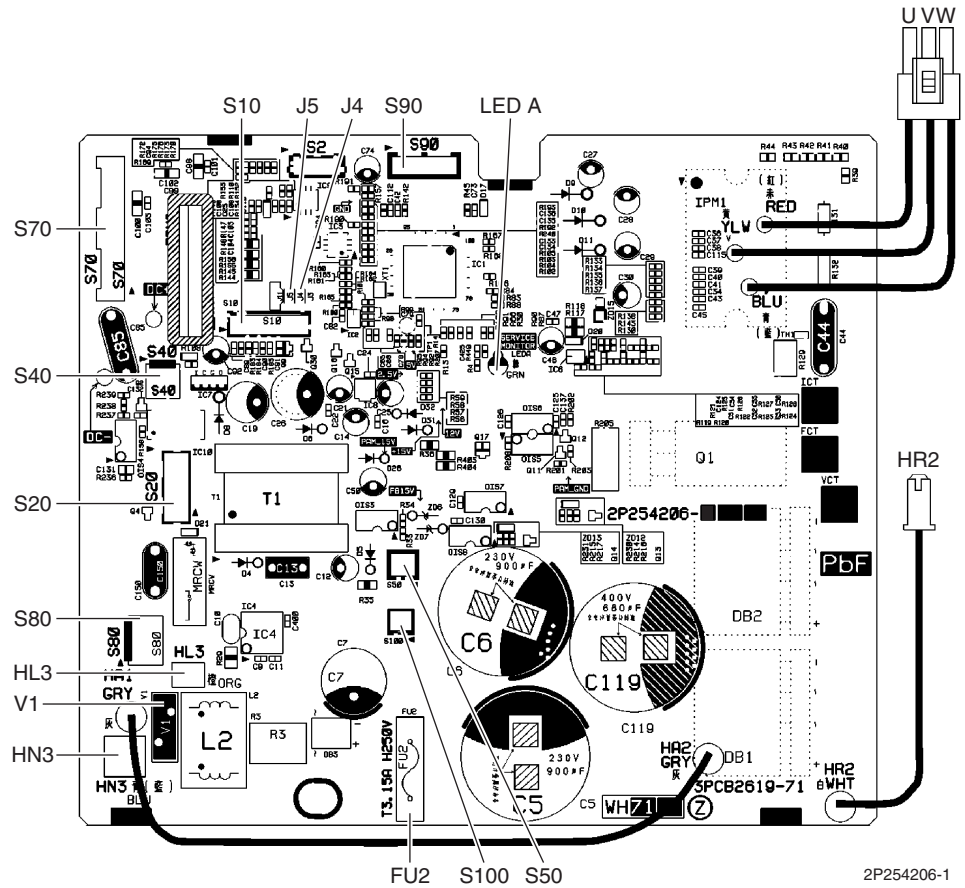

PCB (3): Forced Operation Button PCB

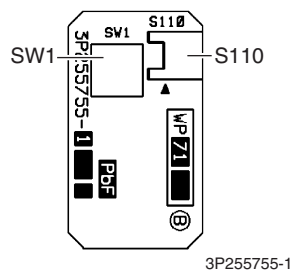

## 1.2.4 RK(X)S50F2V1B, RK(X)S50G2V1B

### Connectors and Other Parts

#### PCB (1): Main PCB

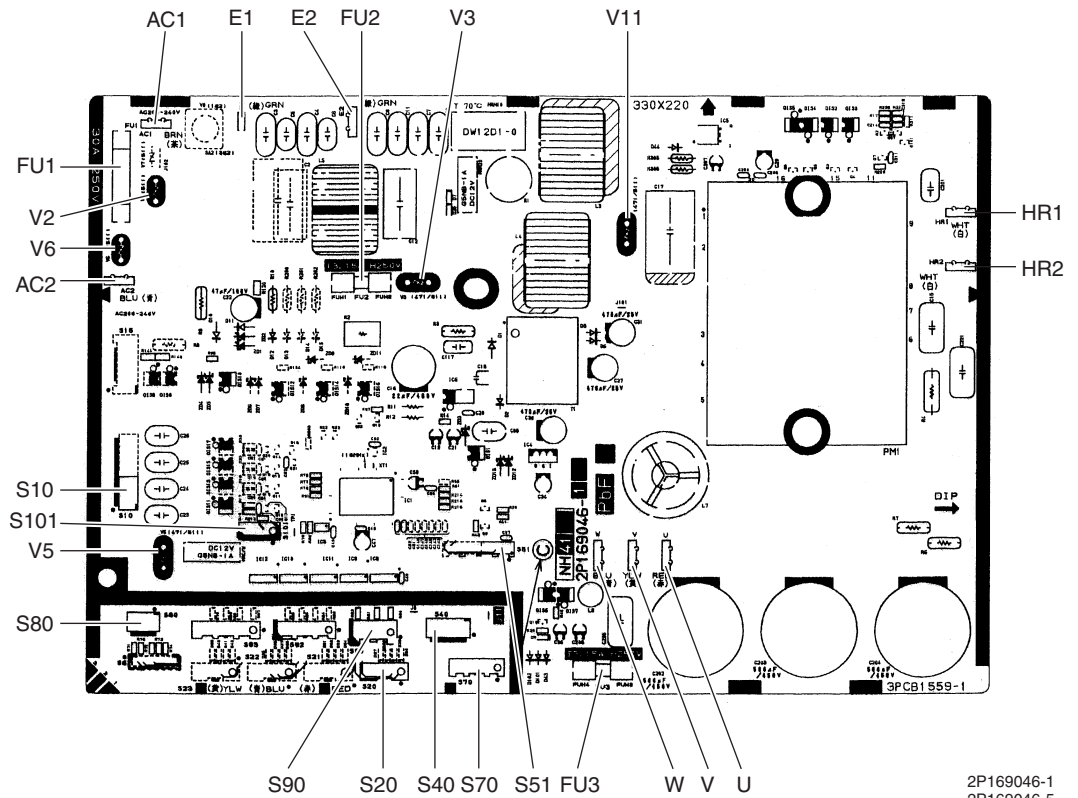
1) S10	Connector for terminal board (indoor-outdoor transmission)
2) S20	Connector for electronic expansion valve coil
3) S40	Connector for overload protector
4) S51, S101	Connector for service monitor PCB
5) S70	Connector for fan motor
6) S80	Connector for four way valve coil
7) S90	Connector for thermistors (outdoor temperature, outdoor heat exchanger, discharge pipe)
8) AC1, AC2	Connector for terminal board (power supply)
9) E1, E2	Connector for earth
10) HR1, HR2	Connector for reactor
11) U, V, W	Connector for compressor
12)FU1	Fuse (30 A, 250 V)
13)FU2, FU3	Fuse (3.15 A, 250 V)
14)V2, V3, V5 V6, V11	Varistor

#### PCB (2): Service Monitor PCB


1) S52, S102	Connector for main PCB
2) LED A	LED for service monitor (green)
3) SW1	Forced operation ON/OFF switch
4) SW4-B	Switch for facility setting * Refer to page 261 for detail
SW4-C	Switch for improvement of defrost performance * Refer to page 260 for detail.

PCB Detail

PCB (1): Main PCB



PCB (2): Service Monitor PCB

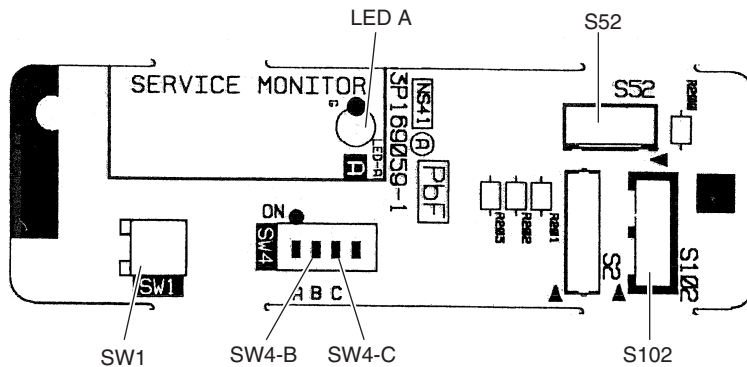

3P169059-1



# Part 4

## Function and Control

1. Main Functions.....	31
1.1 Temperature Control .....	31
1.2 Frequency Principle.....	31
1.3 Airflow Direction Control.....	33
1.4 Fan Speed Control for Indoor Units.....	34
1.5 Program Dry Operation .....	35
1.6 Automatic Operation.....	36
1.7 Thermostat Control.....	37
1.8 NIGHT SET Mode .....	38
1.9 ECONO Operation .....	39
1.10 Inverter POWERFUL Operation .....	40
1.11 Other Functions.....	41
2. Function of Thermistor .....	42
3. Control Specification .....	43
3.1 Mode Hierarchy .....	43
3.2 Frequency Control.....	44
3.3 Controls at Mode Changing / Start-up.....	46
3.4 Discharge Pipe Temperature Control.....	48
3.5 Input Current Control.....	49
3.6 Freeze-up Protection Control .....	50
3.7 Heating Peak-cut Control .....	50
3.8 Outdoor Fan Control.....	51
3.9 Liquid Compression Protection Function.....	51
3.10 Defrost Control .....	52
3.11 Electronic Expansion Valve Control .....	53
3.12 Malfunctions .....	56
3.13 Forced Operation Mode .....	57
3.14 Standby Electricity Saving.....	57

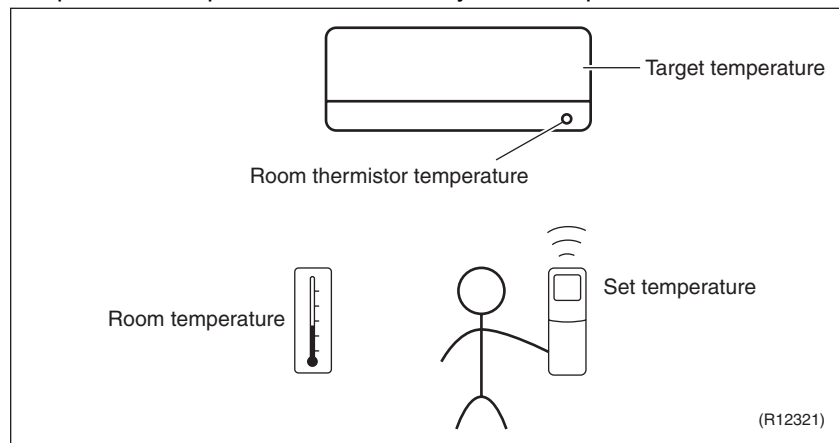
# 1. Main Functions

## 1.1 Temperature Control

### Definitions of Temperatures

The definitions of temperatures are classified as following.

- ◆ Room temperature: temperature of lower part of the room
- ◆ Set temperature: temperature set by remote controller
- ◆ Room thermistor temperature: temperature detected by room temperature thermistor
- ◆ Target temperature: temperature determined by microcomputer



★ The illustration is for wall mounted type as representative.

### Temperature Control

The temperature of the room is detected by the room temperature thermistor. However, there is difference between the “temperature detected by room temperature thermistor” and the “temperature of lower part of the room”, depending on the type of the indoor unit or installation condition. Practically, the temperature control is done by the “target temperature appropriately adjusted for the indoor unit” and the “temperature detected by room temperature thermistor”.

## 1.2 Frequency Principle

### Main Control Parameters

The compressor is frequency-controlled during normal operation. The target frequency is set by the following 2 parameters coming from the operating indoor unit:

- The load condition of the operating indoor unit
- The difference between the room thermistor temperature and the target temperature

### Additional Control Parameters

The target frequency is adapted by additional parameters in the following cases:

- Frequency restrictions
- Initial settings
- Forced cooling operation


### Inverter Principle

To regulate the capacity, a frequency control is needed. The inverter makes it possible to vary the rotation speed of the compressor. The following table explains the conversion principle:

Phase	Description
1	The supplied AC power source is converted into the DC power source for the present.
2	The DC power source is reconverted into the three phase AC power source with variable frequency. <ul style="list-style-type: none"> <li>■ When the frequency increases, the rotation speed of the compressor increases resulting in an increased refrigerant circulation. This leads to a higher amount of the heat exchange per unit.</li> <li>■ When the frequency decreases, the rotation speed of the compressor decreases resulting in a decreased refrigerant circulation. This leads to a lower amount of the heat exchange per unit.</li> </ul>

## Drawing of Inverter

The following drawing shows a schematic view of the inverter principle:

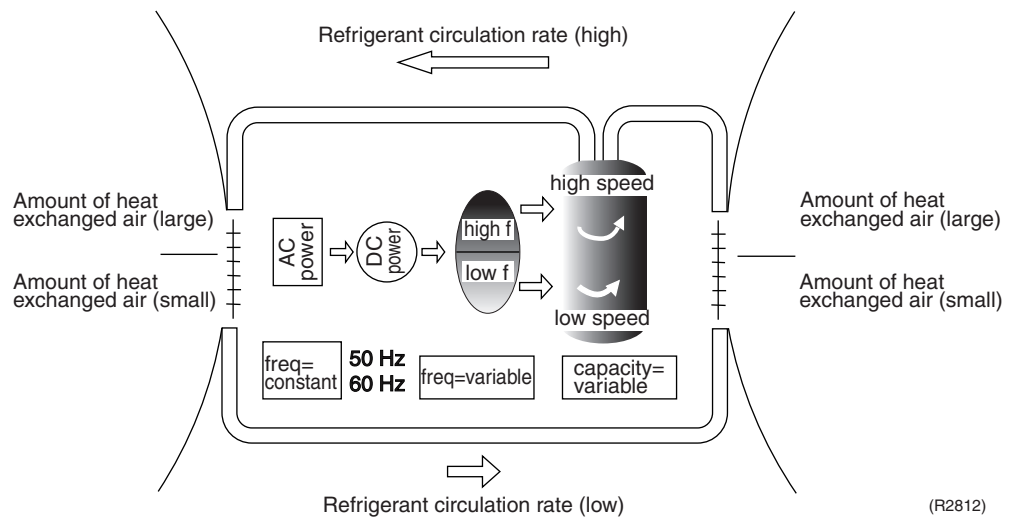

## Inverter Features

The inverter provides the following features:

- The regulating capacity can be changed according to the changes in the outdoor temperature and cooling / heating load.
- Quick heating and quick cooling  
The compressor rotational speed is increased when starting the heating (or cooling). This enables to reach the set temperature quickly.
- Even during extreme cold weather, the high capacity is achieved. It is maintained even when the outdoor temperature is 2°C.
- Comfortable air conditioning  
A fine adjustment is integrated to keep the room temperature constant.
- Energy saving heating and cooling  
Once the set temperature is reached, the energy saving operation enables to maintain the room temperature at low power.

## Frequency Limits

The following functions regulate the minimum and maximum frequency:

Frequency	Functions
Low	<ul style="list-style-type: none"> <li>■ Four way valve operation compensation. Refer to page 47.</li> </ul>
High	<ul style="list-style-type: none"> <li>■ Compressor protection function. Refer to page 47.</li> <li>■ Discharge pipe temperature control. Refer to page 48.</li> <li>■ Input current control. Refer to page 49.</li> <li>■ Freeze-up protection control. Refer to page 50.</li> <li>■ Heating peak-cut control. Refer to page 50.</li> <li>■ Defrost control. Refer to page 52.</li> </ul>



## Forced Cooling Operation

Refer to "Forced operation mode" on page 57 for detail.

## 1.3 Airflow Direction Control





### Wide-Angle Louvers

The louvers, made of elastic synthetic resin, provide a wide range of airflow that guarantees a comfortable air distribution.

	right and left (manual)
upper air outlet	 (R6827)
lower air outlet	 (R6828)

### Auto-Swing

The following table explains the auto-swing process for cooling, dry, and heating :

	up and down	
	cooling / dry	heating
upward airflow limit OFF	 (R6831)	 (R6829)
upward airflow limit ON	 (R6832)	 (R6830)

## 1.4 Fan Speed Control for Indoor Units

### Outline



Phase control and fan speed control contains 9 steps: LLL, LL, SL, L, ML, M, MH, H, and HH. The airflow rate can be automatically controlled depending on the difference between the room thermistor temperature and the target temperature. This is done through phase control and Hall IC control.




For more information about Hall IC, refer to the troubleshooting for fan motor on page 87.

### Automatic Fan Speed Control


In automatic fan speed operation, the step "SL" is not available.

Step	Cooling	Heating
LLL	 (R6833)	 (R6834)
LL		
L		
ML		
M		
MH		
H		
HH (POWERFUL)		

 = The airflow rate is automatically controlled within this range when the FAN setting button is set to automatic.

#### <Cooling>

The following drawing explains the principle of fan speed control for cooling.

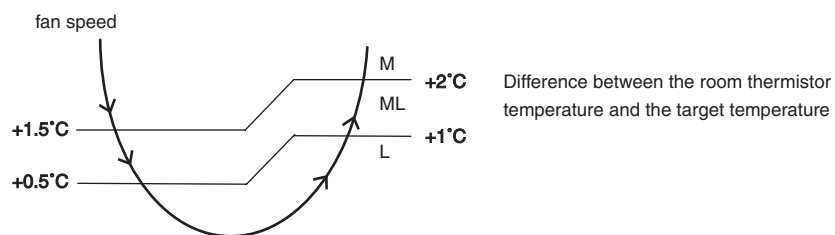

(R12390)

#### <Heating>

On heating mode, the fan speed is regulated according to the indoor heat exchanger temperature and the difference between the room thermistor temperature and the target temperature.



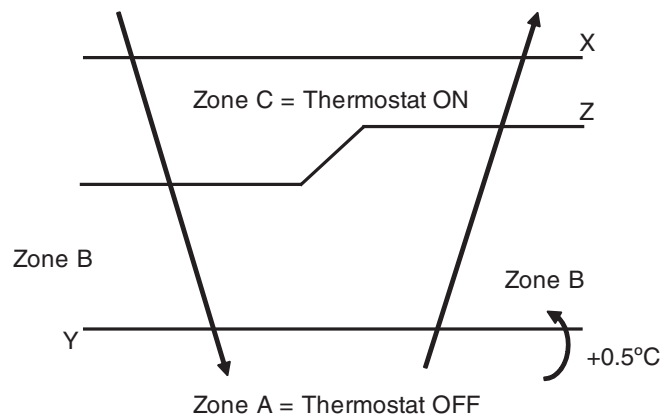
- Note:**
1. During POWERFUL operation, the fan rotates at H tap + 40 rpm.
  2. The fan stops during defrost operation.

## 1.5 Program Dry Operation

**Outline** Program dry operation removes humidity while preventing the room temperature from lowering. Since the microcomputer controls both the temperature and airflow rate, the temperature adjustment and fan adjustment buttons are inoperable in this mode.

**Detail** The microcomputer automatically sets the temperature and airflow rate. The difference between the room thermistor temperature at start-up and the target temperature is divided into two zones. Then, the unit operates in the dry mode with an appropriate capacity for each zone to maintain the temperature and humidity at a comfortable level.

Room thermistor temperature at start-up	Target temperature X	Thermostat OFF point Y	Thermostat ON point Z
24°C or more	Room thermistor temperature at start-up	$X - 2.5^{\circ}\text{C}$	$X - 0.5^{\circ}\text{C}$ or $Y + 0.5^{\circ}\text{C}$ (zone B) continues for 10 min.
23.5°C ⋮ 18°C		$X - 2.0^{\circ}\text{C}$	$X - 0.5^{\circ}\text{C}$ or $Y + 0.5^{\circ}\text{C}$ (zone B) continues for 10 min.
17.5°C ⋮	18°C	$X - 2.0^{\circ}\text{C}$	$X - 0.5^{\circ}\text{C} = 17.5^{\circ}\text{C}$ or $Y + 0.5^{\circ}\text{C}$ (zone B) continues for 10 min.



(R11581)

## 1.6 Automatic Operation

### Outline

#### Automatic Cooling / Heating Function

When the AUTO mode is selected with the remote controller, the microcomputer automatically determines the operation mode as cooling or heating according to the room temperature and the set temperature at start-up, and automatically operates in that mode.

The unit automatically switches the operation mode to maintain the room temperature at the set temperature.

### Detail

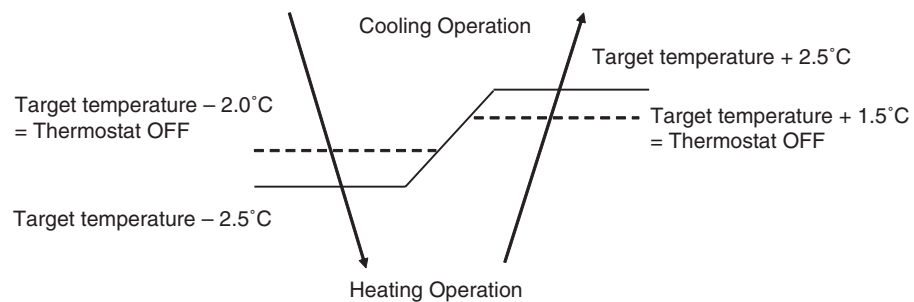
Ts: set temperature (set by remote controller)

Tt: target temperature (determined by microcomputer)

Tr: room thermistor temperature (detected by room temperature thermistor)

C: correction value

- The set temperature (Ts) determines the target temperature (Tt).  
(Ts = 18 ~ 30°C).
- The target temperature (Tt) is calculated as;  
 $Tt = Ts + C$   
where C is the correction value.  
C = 0°C
- Thermostat ON/OFF point and mode switching point are as follows.  
Tr means the room thermistor temperature.
  - Heating → Cooling switching point:  
 $Tr \geq Tt + 2.5^\circ\text{C}$
  - Cooling → Heating switching point:  
 $Tr < Tt - 2.5^\circ\text{C}$
  - Thermostat ON/OFF point is the same as the ON/OFF point of cooling or heating operation.
- During initial operation
  - $Tr \geq Ts$ : Cooling operation
  - $Tr < Ts$ : Heating operation



(R11893)

Ex: When the target temperature is 25°C

Cooling → 23°C: Thermostat OFF → 22°C: Switch to heating

Heating → 26.5°C: Thermostat OFF → 27.5°C: Switch to cooling

## 1.7 Thermostat Control

Thermostat control is based on the difference between the room thermistor temperature and the target temperature.

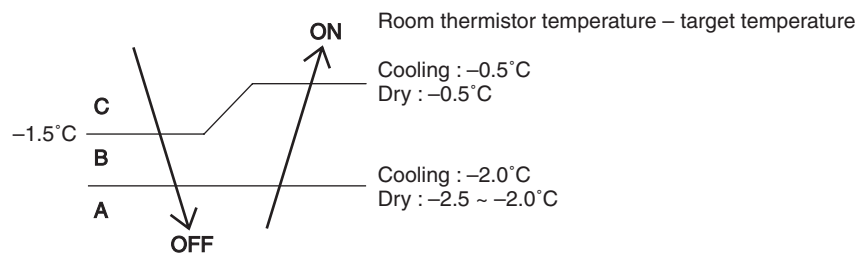
### Thermostat OFF Condition

- ◆ The temperature difference is in the zone A.


### Thermostat ON Condition

- ◆ The temperature difference returns to the zone C after being in the zone A.
- ◆ The system resumes from defrost control in any zones except A.
- ◆ The operation turns on in any zones except A.
- ◆ The monitoring time has passed while the temperature difference is in the zone B.  
(Cooling / Dry : 10 minutes, Heating : 10 seconds)

### Cooling / Dry



### Heating

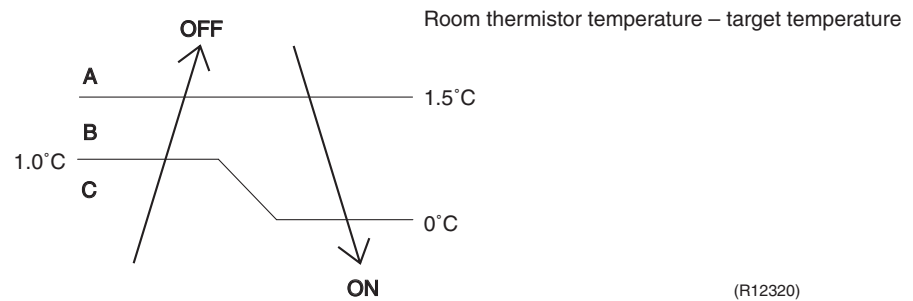

Refer to “Temperature Control” on page 31 for detail.




## 1.8 NIGHT SET Mode

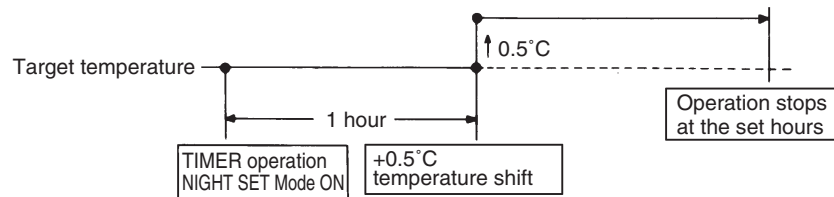**Outline** When the OFF timer is set, the NIGHT SET Mode is automatically activated. The NIGHT SET Mode keeps the airflow rate setting.


**Detail** The NIGHT SET Mode continues operation at the target temperature for the first one hour, then automatically raises the target temperature slightly in the case of cooling, or lowers it slightly in the case of heating. This prevents excessive cooling in summer and excessive heating in winter to ensure comfortable sleeping conditions, and also conserves electricity.

### Cooling



(R10870)

### Heating

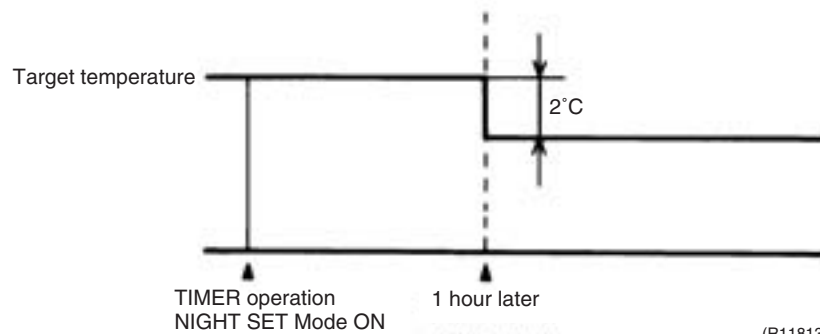

(R11813)


## 1.9 ECONO Operation
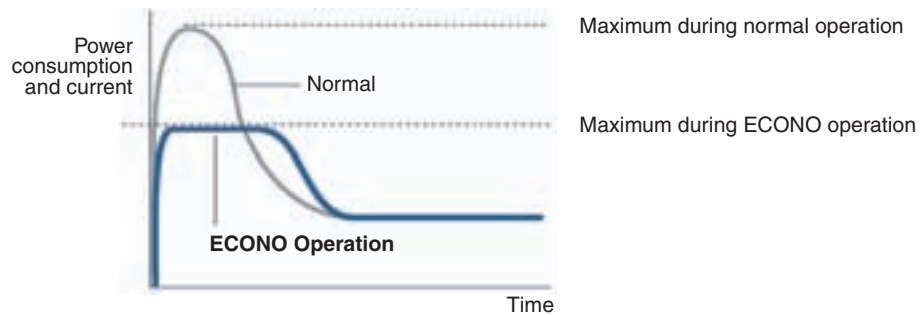
### Outline

The "ECONO operation" reduces the maximum operating current and the power consumption. This operation is particularly convenient for energy-saving-oriented users. It is also a major bonus for those whose breaker capacities do not allow the use of multiple electrical devices and air conditioners.

It is easily activated from the wireless remote controller by pushing the ECONO button.

- When this function is activated, the maximum capacity also decreases.
- The remote controller can send the ECONO command when the unit is in COOL, HEAT, DRY, or AUTO operation. This function can only be set when the unit is running. Pressing the ON/OFF button on the remote controller cancels the function.
- This function and POWERFUL operation cannot be used at the same time. The latest command has the priority.



(R9288)

### Detail

- When the ECONO command is valid, the input current has upper limit. (Refer to "Input current control" on page 49.)

## 1.10 Inverter POWERFUL Operation

### Outline

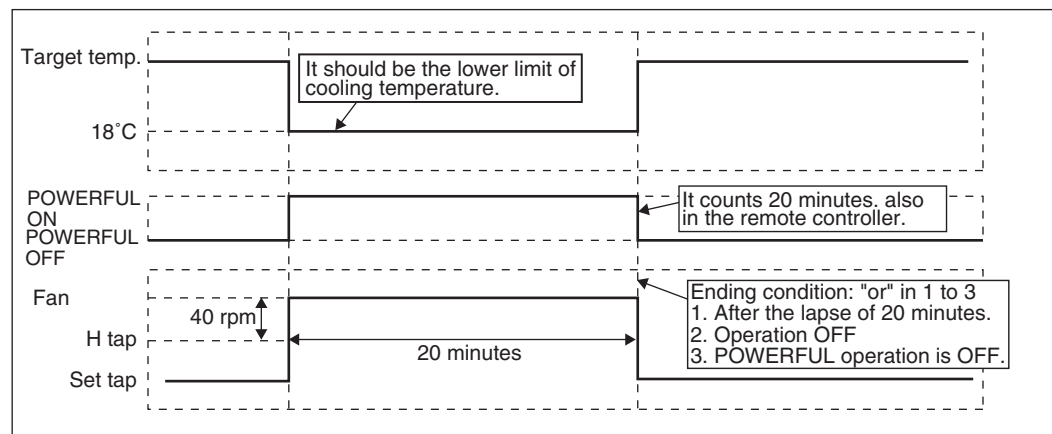
In order to exploit the cooling and heating capacity to full extent, operate the air conditioner by increasing the indoor fan rotating speed and the compressor frequency.

### Detail

When POWERFUL button is pressed, the fan speed and target temperature are converted to the following states for 20 minutes.

Operation mode	Fan speed	Target temperature
COOL	H tap + 40 rpm	18°C
DRY	Dry rotating speed + 40 rpm	Lowered by 2.5°C
HEAT	H tap + 40 rpm	32°C
FAN	H tap + 40 rpm	—
AUTO	Same as cooling / heating in POWERFUL operation	The target temperature is kept unchanged.

Ex.) : POWERFUL operation in cooling mode.



(R11576)

## 1.11 Other Functions

### 1.11.1 Hot-Start Function

In order to prevent the cold air blast that normally comes when heating operation is started, the temperature of the indoor heat exchanger is detected, and either the airflow is stopped or is made very weak thereby carrying out comfortable heating of the room.

\*The cold air blast is also prevented using a similar control when the defrosting operation is started or when the thermostat is turned ON.

### 1.11.2 Signal Receiving Sign

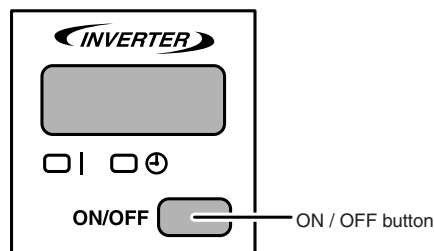
When the indoor unit receives a signal from the remote controller, the unit emits a signal receiving sound.

### 1.11.3 Indoor Unit ON/OFF Button

An ON/OFF button is provided on the display of the unit.

- Press this button once to start operation. Press once again to stop it.
- This button is useful when the remote controller is missing or the battery has run out.
- The operation mode refers to the following table.

	Mode	Temperature setting	Airflow rate
Cooling Only	COOL	22°C	Automatic
Heat Pump	AUTO	25°C	Automatic



(R6839)

#### <Forced operation mode>

Forced operation mode can be started by pressing the ON/OFF button for 5 to 9 seconds while the unit is not operating.

Refer to "Forced operation mode" on page 57 for detail.

**Note:** When the ON/OFF button is pressed for 10 seconds or more, the forced operation is stopped.

### 1.11.4 Titanium Apatite Photocatalytic Air-Purifying Filter

This filter combines the Air-Purifying Filter and Titanium Apatite Photocatalytic Deodorizing Filter as a single highly effective filter. The filter traps microscopic particles, decompose odors and even deactivates bacteria and viruses. It lasts for 3 years without replacement if washed about once every 6 months.

### 1.11.5 Auto-restart Function

Even if a power failure (including one for just a moment) occurs during the operation, the operation restarts automatically when the power is restored in the same condition as before the power failure.

**Note:** It takes 3 minutes to restart the operation because the 3-minute standby function is activated.

### 1.11.6 WEEKLY TIMER Operation

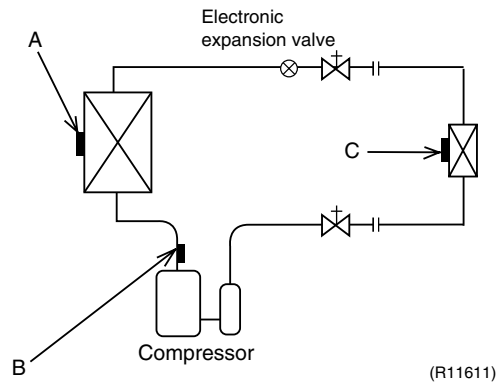
Up to 4 timer settings can be saved for each day of the week (up to 28 settings in total). Those 3 items of "ON/OFF", "temperature" and "time" can be set.




Refer to "WEEKLY TIMER Operation" on page 72 for detail.

## 2. Function of Thermistor

### Cooling Only



### Heat Pump

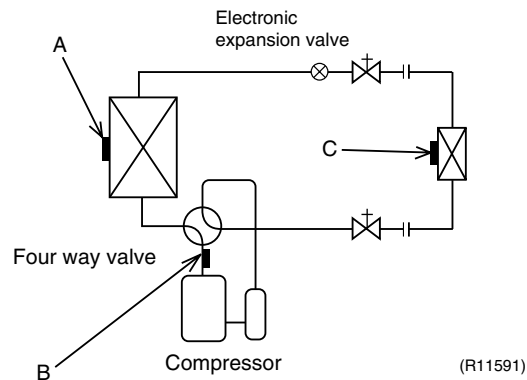

#### A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge pipe temperature. The system sets the target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge pipe temperature can be obtained.
2. In cooling operation, the outdoor heat exchanger thermistor is used for detecting disconnection of the discharge pipe thermistor. When the discharge pipe temperature becomes lower than the outdoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
3. In cooling operation, the outdoor heat exchanger thermistor is used for high pressure protection.

#### B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used for controlling discharge pipe temperature. If the discharge pipe temperature (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency becomes lower or the operation halts.
2. The discharge pipe thermistor is used for detecting disconnection of the discharge pipe thermistor.

#### C Indoor Heat Exchanger Thermistor

1. The indoor heat exchanger thermistor is used for controlling target discharge pipe temperature. The system sets the target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge pipe temperature can be obtained.
2. In cooling operation, the indoor heat exchanger thermistor is used for freeze-up protection control. If the indoor heat exchanger temperature drops abnormally, the operating frequency becomes lower or the operation halts.
3. In heating operation, the indoor heat exchanger thermistor is used for detecting disconnection of the discharge pipe thermistor. When the discharge pipe temperature becomes lower than the indoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.

## 3. Control Specification

### 3.1 Mode Hierarchy

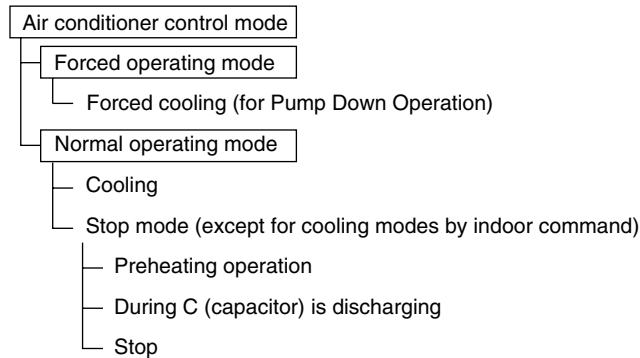
#### Outline

There are two modes; the one is the normal operation mode and the other is the forced operation mode for installation and providing service.

#### Detail

##### For Cooling Only Model


There are following modes; stop and cooling (including drying).



(R2830)

##### For Heat Pump Model

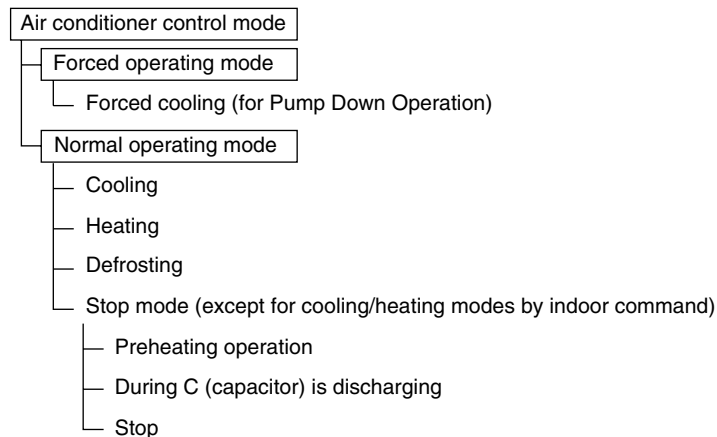There are following modes; stop, cooling (includes drying), heating (include defrosting)



(R2829)



**Note:** Unless specified otherwise, an indoor dry operation command is regarded as cooling operation.

## 3.2 Frequency Control

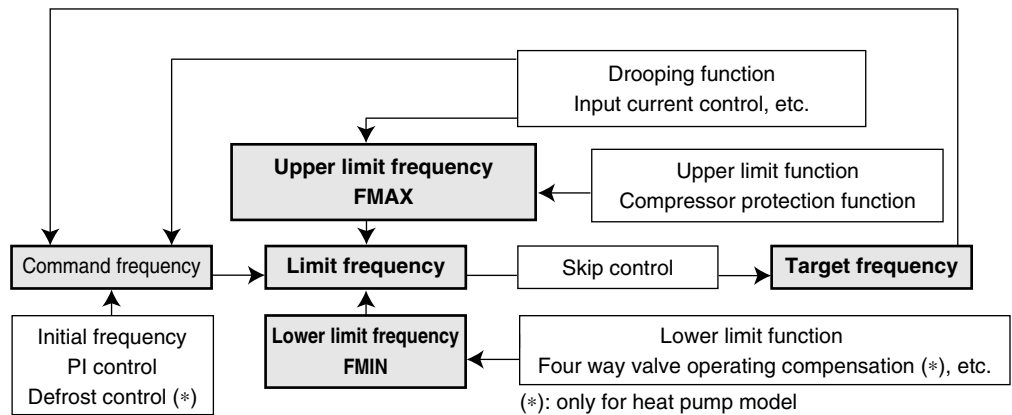
### Outline

Frequency is determined according to the difference between the room thermistor temperature and the target temperature.

The function is explained as follows.

1. How to determine frequency
2. Frequency command from the indoor unit (Difference between the room thermistor temperature and the target temperature)
3. Frequency initial setting
4. PI control

When the shift of the frequency is less than zero ( $\Delta F < 0$ ) by PI control, the target frequency is used as the command frequency.



(R11592)

### Detail

#### How to Determine Frequency

The compressor's frequency is determined by taking the following steps.

##### For Cooling Only Model

#### 1. Determine command frequency

- ◆ Command frequency is determined in the following order of priority.

1. Forced cooling
2. Indoor frequency command

#### 2. Determine upper limit frequency

- ◆ The minimum value is set as an upper limit frequency among the frequency upper limits of the following functions:  
Compressor protection, input current, discharge pipe temperature, freeze-up protection.

#### 3. Determine lower limit frequency

- ◆ The maximum value is set as a lower limit frequency among the frequency lower limits of the following function:  
Pressure difference upkeep

#### 4. Determine prohibited frequency

- ◆ There is a certain prohibited frequency such as a power supply frequency.

##### For Heat Pump Model

#### 1. Determine command frequency

- ◆ Command frequency is determined in the following order of priority.

1. Limiting defrost control time
2. Forced cooling
3. Indoor frequency command

**2. Determine upper limit frequency**

- ♦ The minimum value is set as an upper limit frequency among the frequency upper limits of the following functions:  
Compressor protection, input current, discharge pipe temperature, heating peak-cut, freeze-up protection, defrost.

**3. Determine lower limit frequency**

- ♦ The maximum value is set as a lower limit frequency among the frequency lower limits of the following functions:  
Four way valve operation compensation, draft prevention, pressure difference upkeep.

**4. Determine prohibited frequency**

- ♦ There is a certain prohibited frequency such as a power supply frequency.

**Indoor Frequency Command ( $\Delta D$  signal)**

The difference between the room thermistor temperature and the target temperature is taken as the " $\Delta D$  signal" and is used for frequency command.

Temperature difference	$\Delta D$ signal	Temperature difference	$\Delta D$ signal	Temperature difference	$\Delta D$ signal	Temperature difference	$\Delta D$ signal
-2.0	*Th OFF	0	4	2.0	8	4.0	C
-1.5	1	0.5	5	2.5	9	4.5	D
-1.0	2	1.0	6	3.0	A	5.0	E
-0.5	3	1.5	7	3.5	B	5.5	F

\*Th OFF = Thermostat OFF

**Frequency Initial Setting****<Outline>**

When starting the compressor, the frequency is initialized according to the  $\Delta D$  value and the Q value of the indoor unit.

Q value: Indoor unit output determined from indoor unit volume, airflow rate and other factors.

**PI Control (Determine Frequency Up / Down by  $\Delta D$  Signal)****1. P control**

The  $\Delta D$  value is calculated in each sampling time (15 ~ 20 seconds), and the frequency is adjusted according to its difference from the frequency previously calculated.

**2. I control**

If the operating frequency does not change for more than a certain fixed time, the frequency is adjusted according to the  $\Delta D$  value.

When the  $\Delta D$  value is small, the frequency is lowered.

When the  $\Delta D$  value is large, the frequency is increased.

**3. Frequency management when other controls are functioning**

- ♦ When frequency is drooping;  
Frequency management is carried out only when the frequency droops.
- ♦ For limiting lower limit  
Frequency management is carried out only when the frequency rises.

**4. Upper and lower limit of frequency by PI control**

The frequency upper and lower limits are set according to the command on indoor unit.

When the indoor or outdoor unit quiet operation command comes from the indoor unit, the upper limit frequency is lowered than the usual setting.



## 3.3 Controls at Mode Changing / Start-up

### 3.3.1 Preheating Operation

#### Outline

The inverter operation in open phase starts with the conditions of the preheating command from the indoor unit, the outdoor temperature, and the discharge pipe temperature.

#### Detail

##### ■ RK(X)S25/35F2V1B, RK(X)S25/35G2V1B

##### ON Condition

- ◆ When the discharge pipe temperature is below 10°C, the inverter operation in open phase starts.

##### OFF Condition

- ◆ When the discharge pipe temperature is higher than 12°C, the inverter operation in open phase stops.

##### ■ RK(X)S25/35G2V1B9

Outdoor temperature  $\geq 7^{\circ}\text{C}$  → Control A

Outdoor temperature  $< 7^{\circ}\text{C}$  → Control B

##### Control A

- ◆ ON condition  
Discharge pipe temperature  $< 10^{\circ}\text{C}$
- ◆ OFF condition  
Discharge pipe temperature  $> 12^{\circ}\text{C}$   
Radiation fin temperature  $\geq 90^{\circ}\text{C}$

##### Control B

- ◆ ON condition  
Discharge pipe temperature  $< 20^{\circ}\text{C}$
- ◆ OFF condition  
Discharge pipe temperature  $> 22^{\circ}\text{C}$   
Radiation fin temperature  $\geq 90^{\circ}\text{C}$

##### ■ RK(X)S50F2V1B, RK(X)S50G2V1B

Outdoor temperature  $\geq 10^{\circ}\text{C}$  → Control A

Outdoor temperature  $< 10^{\circ}\text{C}$  → Control B

##### Control A

- ◆ ON condition  
Discharge pipe temperature  $< 6^{\circ}\text{C}$
- ◆ OFF condition  
Discharge pipe temperature  $> 8^{\circ}\text{C}$   
Radiation fin temperature  $\geq 90^{\circ}\text{C}$

##### Control B

- ◆ ON condition  
Discharge pipe temperature  $< 10.5^{\circ}\text{C}$
- ◆ OFF condition  
Discharge pipe temperature  $> 12^{\circ}\text{C}$   
Radiation fin temperature  $\geq 90^{\circ}\text{C}$

### 3.3.2 Four Way Valve Switching

#### Outline

In heating operation, current is conducted, and in cooling and defrosting, current is not conducted. In order to eliminate the switching sound when the heating is stopped, as the four way valve coil switches from ON to OFF, the OFF delay switch of the four way valve is carried out after the operation stopped.

#### Detail

##### OFF delay switch of four way valve:

The four way valve coil is energized for 150 ~ 160 seconds after the operation is stopped.

### 3.3.3 Four Way Valve Operation Compensation

#### Outline

At the beginning of the operation as the four way valve is switched, the differential pressure to activate the four way valve is acquired by having output frequency which is more than a certain fixed frequency, for a certain fixed time.

#### Detail

##### Starting Conditions

1. When starting compressor for heating.
  2. When the operation mode changes to cooling from heating.
  3. When starting compressor for defrosting or resetting.
  4. When starting compressor for the first time after the reset with the power is ON.
  5. When starting compressor for heating next to the suspension of defrosting.
  6. When starting compressor next to the fault of switching over cooling / heating.
- Set the lower limit frequency  $\Delta$  Hz for  $\text{B}$  seconds with any conditions 1 through 6 above.

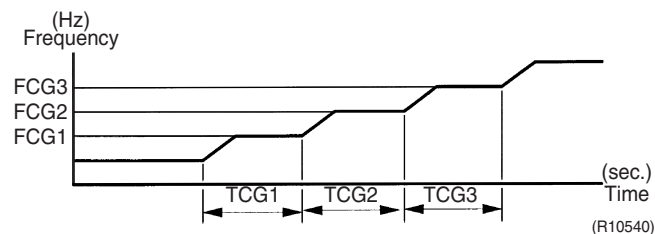
	25/35 class		50 class	
	Cooling	Heating	Cooling	Heating
$\Delta$ (Hz)	68	66	48	48
$\text{B}$ (seconds)	45		70	

### 3.3.4 3-minute Standby

Turning on the compressor is prohibited for 3 minutes after turning it off.  
(Except when defrosting.)

### 3.3.5 Compressor Protection Function

When turning the compressor from OFF to ON, the upper limit of frequency is set as follows.  
(The function is not activated when defrosting.)




	25/35 class	50 class	Unit
FCG 1	48	55	Hz
FCG 2	64	70	
FCG 3	88	85	
TCG 1	240	120	seconds
TCG 2	360	200	
TCG 3	180	470	

## 3.4 Discharge Pipe Temperature Control
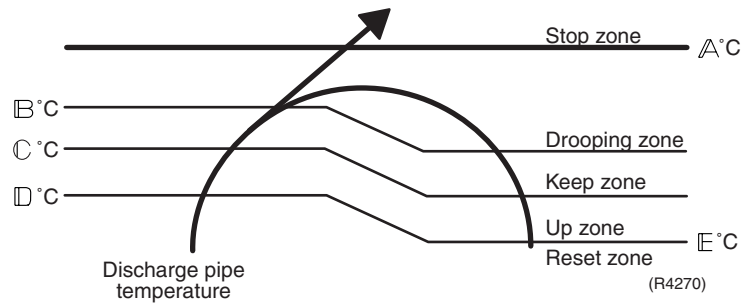
### Outline

The discharge pipe temperature is used as the internal temperature of the compressor. If the discharge pipe temperature rises above a certain level, the upper limit of frequency is set to keep this temperature from going up further.

### Detail



Zone	Control
Stop zone	When the temperature reaches the stop zone, the compressor stops.
Drooping zone	The timer starts, and the frequency is drooping.
Keep zone	The upper limit of frequency is kept.
Up zone	The upper limit of frequency is increased.
Reset zone	The upper limit of frequency is canceled.

	25/35 class	50 class
A (°C)	110	110
B (°C)	105	103
C (°C)	101	101.5
D (°C)	99	100
E (°C)	97	95


## 3.5 Input Current Control
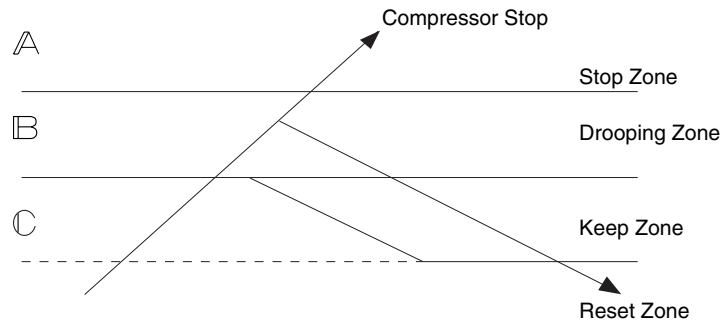
### Outline

The microcomputer calculates the input current during the compressor is running, and sets the frequency upper limit from the input current.

In case of heat pump model, this control which is the upper limit control of the frequency takes priority to the lower limit of control of four way valve operation compensation.

### Detail



(R4304)

#### Frequency control in each zone

##### Stop zone

- After 2.5 seconds in this zone, the compressor is stopped.

##### Drooping zone

- The upper limit of the compressor frequency is defined as operation frequency – 2 Hz.
- After this, the output frequency is pulled down by 2 Hz every second until it reaches the keep zone.

##### Keep zone

- The present maximum frequency goes on.

##### Reset zone

- Limit of the frequency is canceled.

		RK(X)S25F2V1B		RK(X)S25G2V1B		RK(X)S25G2V1B9	
		Cooling	Heating	Cooling	Heating	Cooling	Heating
A (A)		9.25		9.25		9.25	
B (A)	Normal mode	6.0	7.5	6.5	7.5	6.25	7.5
	ECONO mode	3.25		3.25		3.25	
C (A)	Normal mode	5.25	6.75	5.75	6.75	5.5	6.75
	ECONO mode	2.5		2.5		2.5	

		RK(X)S35F2V1B RK(X)S35G2V1B		RK(X)S35G2V1B9		RK(X)S50F2V1B RK(X)S50G2V1B	
		Cooling	Heating	Cooling	Heating	Cooling	Heating
A (A)		9.25		9.25		20.0	
B (A)	Normal mode	7.25	8.25	8.25		10.0	15.0
	ECONO mode	3.25		3.25		7.0	10.5
C (A)	Normal mode	6.5	7.5	7.5		9.0	14.0
	ECONO mode	2.5		2.5		6.0	9.5

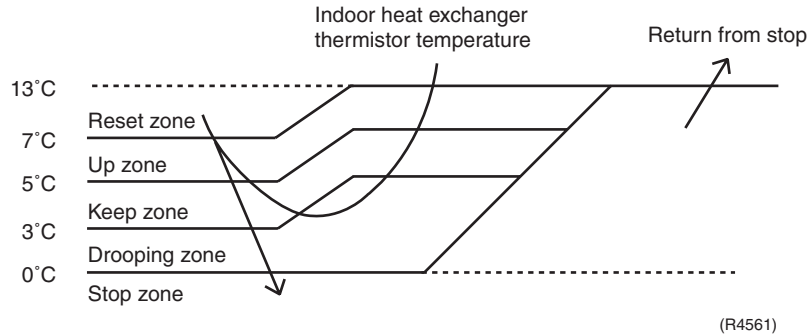
#### Limitation of current drooping and stop value according to the outdoor temperature

- The current droops when outdoor temperature becomes higher than a certain level (depending on the model).

## 3.6 Freeze-up Protection Control

**Outline** During cooling operation, the signal sent from the indoor unit controls the operating frequency limitation and prevents freezing of the indoor heat exchanger. (The signal from the indoor unit is divided into zones.)


**Detail** The operating frequency limitation is judged with the indoor heat exchanger temperature.



## 3.7 Heating Peak-cut Control

**Outline** During heating operation, the indoor heat exchanger temperature determines the frequency upper limit to prevent abnormal high pressure.

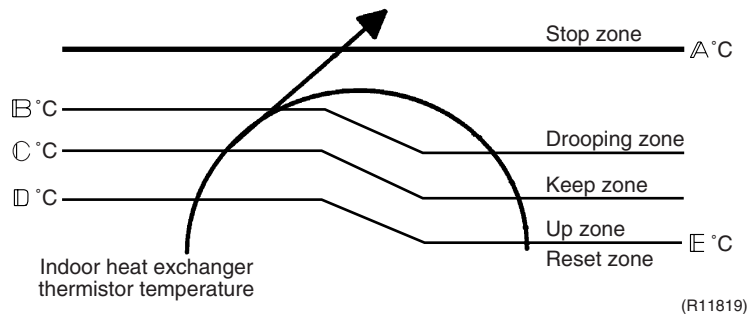**Detail**



Zone	Control
Stop zone	When the temperature reaches the stop zone, the compressor stops.
Drooping zone	The timer starts, and the frequency is drooping.
Keep zone	The upper limit of frequency is kept.
Up zone	The upper limit of frequency is increased.
Reset zone	The upper limit of frequency is canceled.

	25/35 class	50 class
A (°C)	65	65
B (°C)	56	56
C (°C)	53	55
D (°C)	51	53
E (°C)	46	51

## 3.8 Outdoor Fan Control

### 1. Fan OFF delay when stopped

The outdoor fan is turned OFF 60 seconds after the compressor stops.

### 2. Fan ON control to cool down the electrical box

The outdoor fan is turned ON when the electrical box temperature is high while the compressor is OFF.

### 3. Fan OFF control while defrosting

The outdoor fan is turned OFF while defrosting.

### 4. Fan ON/OFF control when operation starts / stops

The outdoor fan is turned ON when the operation starts. The outdoor fan is turned OFF when the operation stops.

### 5. Fan control while forced operation

The outdoor fan is controlled as well as normal operation while the forced operation.

### 6. Fan speed control while indoor / outdoor quiet operation

The rotation speed of the outdoor fan is reduced by the command of the indoor/outdoor quiet operation.

### 7. Fan control for POWERFUL operation

The rotation speed of the outdoor fan is increased while the POWERFUL operation.

### 8. Fan speed control for pressure difference upkeep

The rotation speed of the outdoor fan is controlled for keeping the pressure difference while cooling with low outdoor temperature.

- ◆ When the pressure difference is small, the rotation speed of the outdoor fan is reduced.
- ◆ When the pressure difference is large, the rotation speed of the outdoor fan is increased.

## 3.9 Liquid Compression Protection Function

### Outline

In order to obtain the dependability of the compressor, the compressor is stopped according to the outdoor temperature and temperature of the outdoor heat exchanger.

### Detail

- Operation stops depending on the outdoor temperature

Compressor turns off under the conditions that the system is in cooling operation and outdoor temperature is below  $-12^{\circ}\text{C}$ .

## 3.10 Defrost Control

### Outline

Defrosting is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than a certain value to finish.

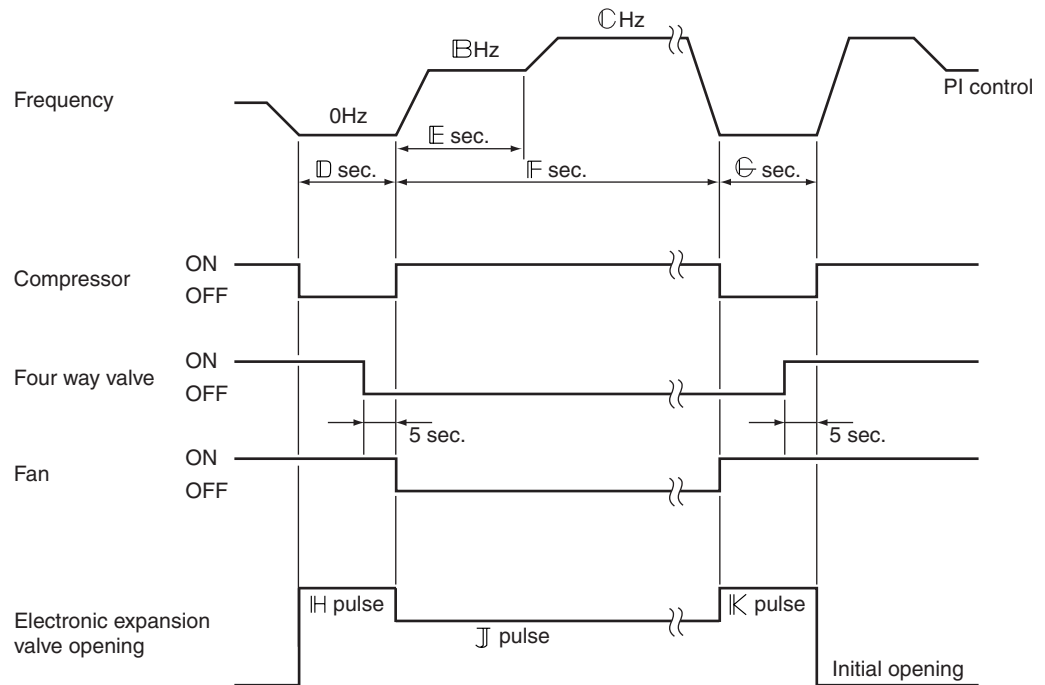
### Detail

#### Conditions for Starting Defrost

- The starting conditions is determined with the outdoor temperature and the outdoor heat exchanger temperature.
- The system is in heating operation.
- The compressor operates for 6 minutes.
- More than  $\Delta$  minutes of accumulated time pass since the start of the operation, or ending the previous defrosting.

#### Conditions for Canceling Defrost

The judgment is made with outdoor heat exchanger temperature. ( $IL^{\circ}C$ )



(R12211)

	RK(X)S25/35F2V1B	RK(X)S25/35G2V1B RK(X)S25/35G2V1B9	RK(X)S50F2V1B RK(X)S50G2V1B
$\Delta$ (minutes)	28	28	44
B (Hz)	76	76	55
C (Hz)	86	86	90
D (seconds)	50	50	60
E (seconds)	60	60	120
F (seconds)	600	600	460
G (seconds)	50	60	30
H (pulse)	450	450	450
J (pulse)	350	350	450
K (pulse)	450	450	450
L ( $^{\circ}C$ )	4 ~ 22	4 ~ 18	4 ~ 12

### 3.11 Electronic Expansion Valve Control

**Outline**

The following items are included in the electronic expansion valve control.

**Electronic expansion valve is fully closed**

1. Electronic expansion valve is fully closed when turning on the power.
2. Pressure equalizing control

**Open Control**

1. Electronic expansion valve control when starting operation
2. Electronic expansion valve control when frequency changed
3. Electronic expansion valve control for defrosting
4. Electronic expansion valve control when the discharge pipe temperature is abnormally high
5. Electronic expansion valve control when the discharge pipe thermistor is disconnected

**Feedback Control**

1. Discharge pipe temperature control

**Detail**

The followings are the examples of control which function in each mode by the electronic expansion valve control.

Operation pattern		Control when frequency changed	Control for abnormally high discharge pipe temperature
When power is turned ON	○ : function × : not function		
↓			
Fully closed when power is turned ON		×	×
↓			
Cooling operation			
↓			
Open control when starting		×	○
↓			
(Control of target discharge pipe temperature)		○	○
↓			
Stop			
↓			
Pressure equalizing control		×	×
↓			
Heating operation			
↓			
Open control when starting		×	○
↓			
(Control of target discharge pipe temperature)		○	○
↓			
Pressure equalizing control		×	×
↓			
Stop			
↓			
Heating operation			
↓			
Continue		×	○
↓			
Control of discharge pipe thermistor disconnection		×	×
↓			
Stop			
↓			
Pressure equalizing control		×	×

(R2833)



### 3.11.1 Fully Closing with Power ON

The electronic expansion valve is initialized when turning on the power. The opening position is set and the pressure equalization is developed.

### 3.11.2 Pressure Equalization Control

When the compressor is stopped, the pressure equalization control is activated. The electronic expansion valve opens, and develops the pressure equalization.

### 3.11.3 Opening Limit

#### Outline

A maximum and minimum opening of the electronic expansion valve are limited.

#### Detail

	25/35 class	50 class
Maximum opening (pulse)	480	480
Minimum opening (pulse)	52	54

The electronic expansion valve is fully closed when cooling operation stops, and is opened at fixed degree during defrosting.

### 3.11.4 Starting Operation Control

The electronic expansion valve opening is controlled when the operation starts, and prevents the superheating or liquid compression.

### 3.11.5 High Discharge Pipe Temperature

When the compressor is operating, if the discharge pipe temperature exceeds a certain value, the electronic expansion valve opens and the refrigerant runs to the low pressure side. This procedure lowers the discharge pipe temperature.

### 3.11.6 Disconnection of the Discharge Pipe Thermistor

#### Outline

The disconnection of the discharge pipe thermistor is detected by comparing the discharge pipe temperature with the condensation temperature. If the discharge pipe thermistor is disconnected, the electronic expansion valve opens according to the outdoor temperature and the operation frequency, and operates for a specified time, and then stops.

After 3 minutes of waiting, the operation restarts and checks if the discharge pipe thermistor is disconnected. If the discharge pipe thermistor is disconnected, the system stops after operating for a specified time.

If the disconnection is detected 4 ~ 5 times (depending on the model) in succession, then the system is shut down. When the compressor runs for 60 minutes without any error, the error counter is reset.

**Detail**

When the starting control (cooling :  $\Delta$  seconds, heating :  $\text{B}$  seconds) finishes, the detection timer for disconnection of the discharge pipe thermistor (  $\text{C}$  seconds) starts. When the timer is over, the following adjustment is made.

## 1. When the operation mode is cooling

When the following condition is fulfilled, the discharge pipe thermistor disconnection is ascertained.

Discharge pipe temperature + 6°C < outdoor heat exchanger temperature

## 2. When the operation mode is heating

When the following condition is fulfilled, the discharge pipe thermistor disconnection is ascertained.

Discharge pipe temperature + 6°C < indoor heat exchanger temperature

	25/35 class	50 class
$\Delta$ (seconds)	10	10
$\text{B}$ (seconds)	120	30
$\text{C}$ (seconds)	810	630

**Adjustment when the thermistor is disconnected**

When the disconnection is ascertained, the compressor continues operation for 9 minutes and then stops.

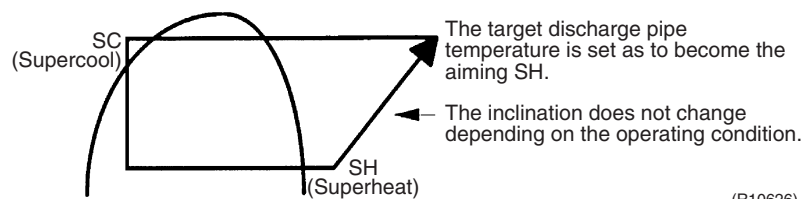
When the compressor stops repeatedly, the system is shut down.

**3.11.7 Control when frequency is changed**

When the target discharge pipe temperature control is active, if the target frequency is changed for a specified value in a certain time period, the target discharge pipe temperature control is canceled and the target opening of the electronic expansion valve is changed according to the shift.

**3.11.8 Target Discharge Pipe Temperature Control**

The target discharge pipe temperature is obtained from the indoor and outdoor heat exchanger temperature, and the electronic expansion valve opening is adjusted so that the actual discharge pipe temperature becomes close to the target discharge pipe temperature. (Indirect SH (superheating) control using the discharge pipe temperature)



(R10626)

The electronic expansion valve opening and the target discharge pipe temperature are adjusted every 20 seconds. The target discharge pipe temperature is controlled by indoor heat exchanger temperature and outdoor heat exchanger temperature. The opening degree of the electronic expansion valve is controlled by followings.

- ◆ Target discharge pipe temperature
- ◆ Actual discharge pipe temperature
- ◆ Previous discharge pipe temperature

## 3.12 Malfunctions

### 3.12.1 Sensor Malfunction Detection

Sensor malfunction may occur in the thermistor.

#### Relating to Thermistor Malfunction

1. Outdoor heat exchanger thermistor
2. Discharge pipe thermistor
3. Radiation fin thermistor
4. Outdoor temperature thermistor

### 3.12.2 Detection of Overcurrent and Overload

#### Outline

An excessive output current is detected and, the OL temperature is observed to protect the compressor.

#### Detail

- If the OL (compressor head) temperature exceeds 120 ~ 130°C (depending on the model), the system shuts down the compressor.
- If the inverter current exceeds 9.25 ~ 20 A (depending on the model), the system shuts down the compressor.

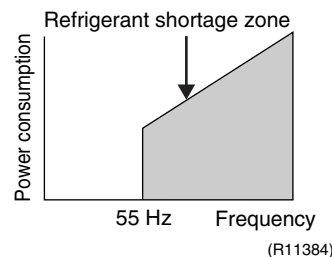
### 3.12.3 Refrigerant Shortage Control

#### Outline

##### I Detecting by power consumption


If the power consumption is below the specified value and the frequency is higher than the specified frequency, it is regarded as refrigerant shortage.

The power consumption is small comparing with that in the normal operation when refrigerant is insufficient, and refrigerant shortage is detected by checking a power consumption.



##### II Detecting by discharge pipe temperature

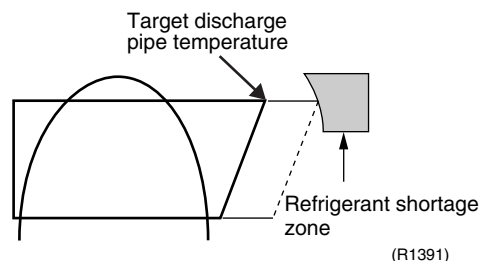If the discharge pipe temperature is higher than the target discharge pipe temperature, and the electronic expansion valve is fully open for more than the specified time, it is regarded as refrigerant shortage.



##### III Detecting by the difference of temperature

If the difference between suction and discharge temperature is smaller than the specified value, it is regarded as refrigerant shortage.



Refer to "Refrigerant shortage" on page 121 for detail.

### 3.13 Forced Operation Mode

**Outline** Forced operation mode includes only forced cooling.

**Detail**

Item	Forced Cooling
Conditions	1) The outdoor unit is not abnormal and not in the 3-minute standby mode.
	2) The outdoor unit is not operating.
	The forced operation is allowed when the above both conditions are met.
Start	The forced operation starts when any of the following conditions is fulfilled. 1) Press the forced operation ON/OFF button (SW1) on the indoor unit for 5 seconds. 2) Press the forced operation ON/OFF button (SW1) on the outdoor unit. (RK(X)S25/35G2V1B9 models only)
Command frequency	RK(X)S25/35F2V1B, RK(X)S25/35G2V1B: 68 Hz RK(X)S25/35G2V1B9: 58 Hz RK(X)S50F2V1B, RK(X)S50G2V1B: 66 Hz
End	The forced operation ends when any of the following conditions is fulfilled. 1) The operation ends automatically after 15 minutes. 2) Press the forced operation ON/OFF button (SW1) on the indoor unit again. 3) Press the ON/OFF button on the remote controller. 4) Press the forced operation ON/OFF button (SW1) on the outdoor unit.
Others	The protection functions are prior to all others in the forced operation.

### 3.14 Standby Electricity Saving

**RK(X)S25/35G2V1B, RK(X)S25/35G2V1B9 Models Only**

This function turns power supply OFF to the outdoor unit and sets the indoor unit into energy-saving mode, thus reducing the power consumption of the air conditioner.

**Field setting is required for turning ON the function.**



Refer to “Standby Electricity Saving” on page 259 for detail.

# Part 5

# Operation Manual

1. System Configuration.....	59
2. Operation Manual.....	60
2.1 Names of Parts.....	60
2.2 AUTO · DRY · COOL · HEAT · FAN Operation .....	63
2.3 Adjusting the Airflow Direction.....	65
2.4 POWERFUL Operation .....	67
2.5 OUTDOOR UNIT QUIET Operation.....	68
2.6 ECONO Operation .....	69
2.7 TIMER Operation .....	70
2.8 WEEKLY TIMER Operation .....	72

# 1. System Configuration

After the installation and test operation of the room air conditioner have been completed, it should be operated and handled as described below. Every user would like to know the correct method of operation of the room air conditioner, to check if it is capable of cooling (or heating) well, and to know a clever method of using it.

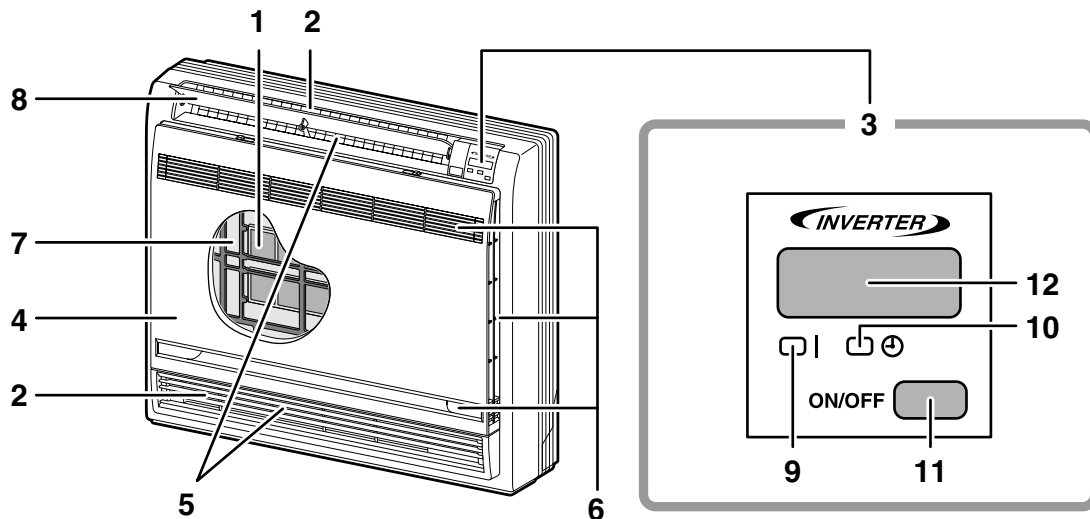
In order to meet this expectation of the users, giving sufficient explanations taking enough time can be said to reduce about 80% of the requests for servicing. However good the installation work is and however good the functions are, the customer may blame either the room air conditioner or its installation work because of improper handling. The installation work and handing over of the unit can only be considered to have been completed when its handling has been explained to the user without using technical terms but giving full knowledge of the equipment.

## 2. Operation Manual


### 2.1 Names of Parts

#### Names of parts

##### ■ Indoor Unit




##### ■ Opening the Front Panel

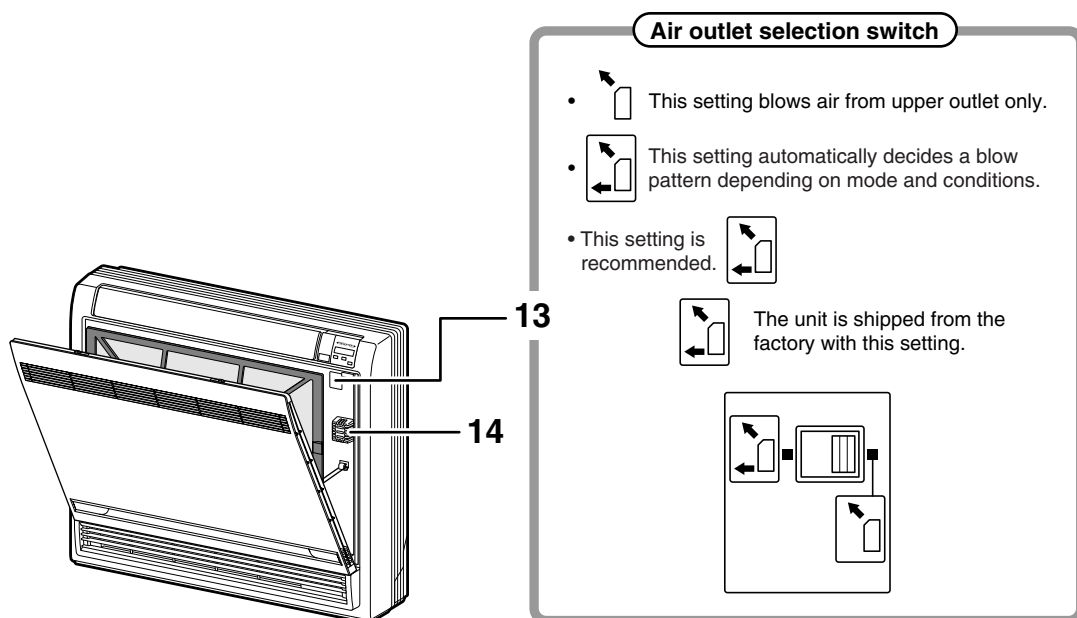

#### **⚠ CAUTION**

Before opening the front panel, be sure to stop the operation and turn the breaker OFF. Do not touch the metal parts on the inside of the indoor unit, as it may result in injury.
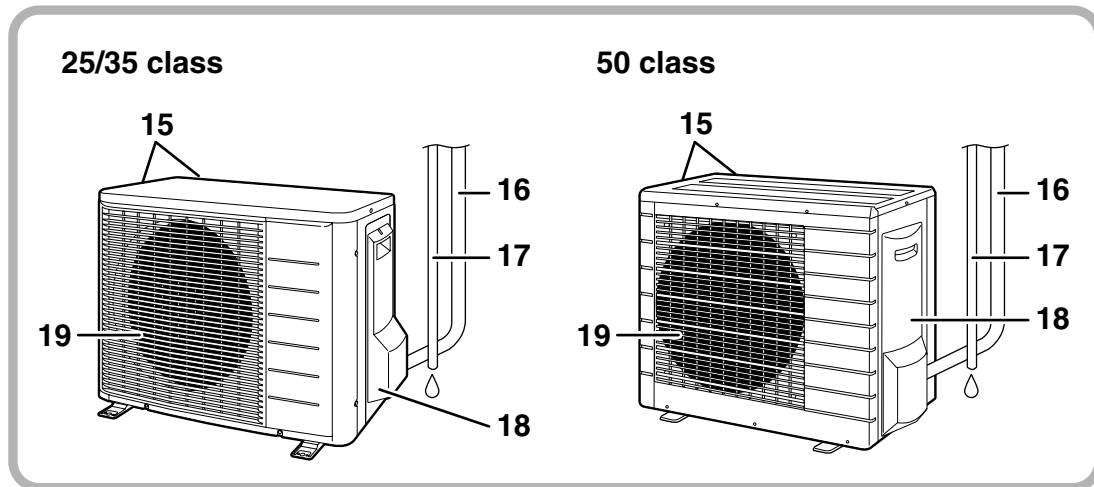
## ■ Outdoor Unit



## ■ Indoor Unit

### 1. Titanium Apatite Photocatalytic Air-Purifying Filter:

- These filters are attached to the inside of the air filters.

### 2. Air outlet

### 3. Display

### 4. Front panel

### 5. Vertical blades (louvers): (page 12.)

- The louvers are inside of the air outlet.

### 6. Air inlet

### 7. Air filter

### 8. Horizontal blade (flap): (page 12.)

### 9. Operation lamp (green)

### 10. TIMER lamp (yellow): (page 17.)

### 11. Indoor Unit ON/OFF switch:

- Push this switch once to start operation.  
Push once again to stop it.

- The operation mode refers to the following table.

Model	Mode	Temperature setting	Airflow rate
COOLING ONLY	COOL	22°C	AUTO
HEAT PUMP	AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

### 12. Signal receiver:

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a short beep.
  - Operation start ..... beep-beep
  - Settings changed ..... beep
  - Operation stop..... beeeep

### 13. Air outlet selection switch: (page 13.)

### 14. Room temperature sensor:

- It senses the air temperature around the unit.

## ■ Outdoor Unit

15. Air inlet: (Back and side)

16. Refrigerant piping and inter-unit cable

17. Drain hose

18. Earth terminal:

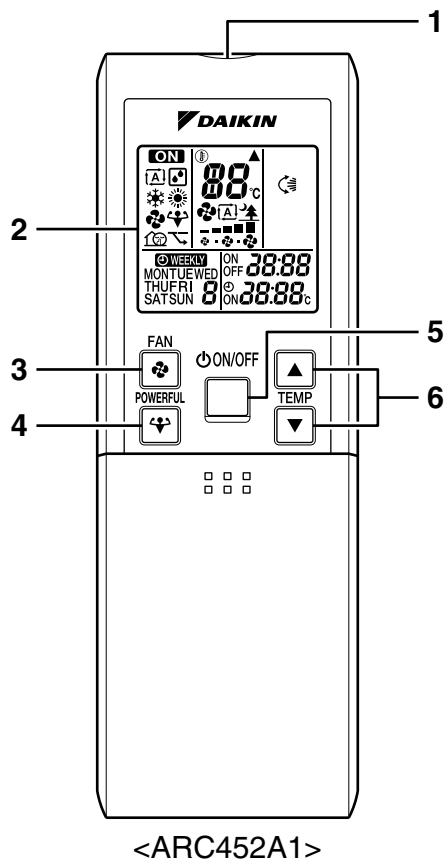
- It is inside of this cover.

19. Air outlet


Appearance of the outdoor unit may differ from some models.




## ■ Remote Controller



- 1. Signal transmitter:**
  - It sends signals to the indoor unit.
- 2. Display:**
  - It displays the current settings.  
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
- 3. FAN setting button:**
  - It selects the airflow rate setting.
- 4. POWERFUL button:**
  - POWERFUL operation (page 14.)
- 5. ON/OFF button:**
  - Press this button once to start operation.  
Press once again to stop it.
- 6. TEMPERATURE adjustment buttons:**
  - It changes the temperature setting.
- 7. MODE selector button:**
  - It selects the operation mode.  
(AUTO/DRY/COOL/HEAT/FAN) (page 10.)
- 8. QUIET button:**
  - OUTDOOR UNIT QUIET operation (page 15.)

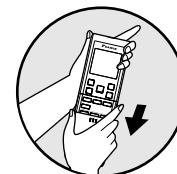

<Open the lid>

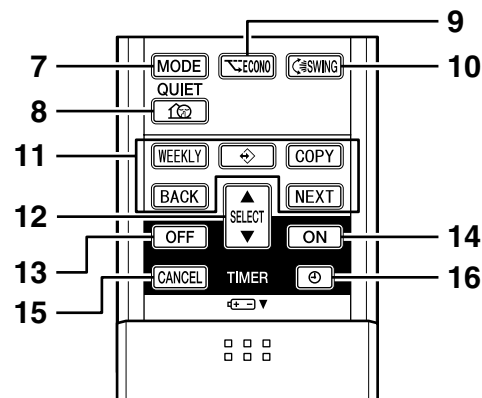

- 9. ECONO button:**
  - ECONO operation (page 16.)
- 10. SWING button:**
  - Adjusting the Airflow Direction (page 12.)
- 11. WEEKLY/PROGRAM/COPY/BACK/NEXT button:**
  - WEEKLY TIMER operation (page 19.)
- 12. SELECT button:**
  - It changes the ON/OFF TIMER and WEEKLY TIMER settings. (page 17, 19.)
- 13. OFF TIMER button:** (page 17.)
- 14. ON TIMER button:** (page 18.)
- 15. TIMER CANCEL button:**
  - It cancels the timer setting. (page 17, 18.)
  - It cannot be used for the WEEKLY TIMER operation.
- 16. CLOCK button**

## 2.2 AUTO · DRY · COOL · HEAT · FAN Operation

# AUTO · DRY · COOL · HEAT · FAN Operation

The air conditioner operates with the operation mode of your choice.



From the next time on, the air conditioner will operate with the same operation mode.

### ■ To start operation

#### 1. Press “MODE selector button” and select a operation mode.



- Each pressing of the button advances the mode setting in sequence.

- : AUTO
- : DRY
- : COOL
- : HEAT
- : FAN



#### 2. Press “ON/OFF button”.

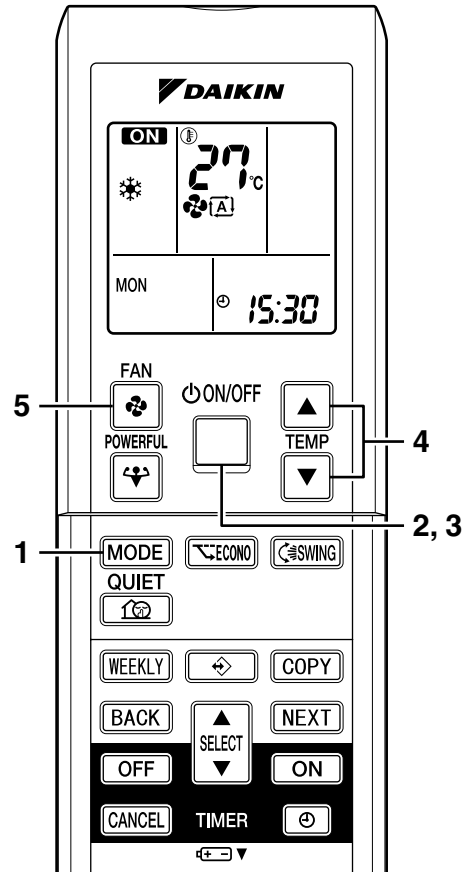- The OPERATION lamp lights up.



### ■ To stop operation

#### 3. Press “ON/OFF button” again.

- Then OPERATION lamp goes off.






### ■ To change the temperature setting

#### 4. Press “TEMPERATURE adjustment button”.


DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like. 

## ■ To change the airflow rate setting

### 5. Press “FAN setting button”.

DRY mode	AUTO or COOL or HEAT or FAN mode
The airflow rate setting is not variable.	Five levels of airflow rate setting from “  ” to “  ” plus “  ” “  ” are available. 

- Indoor unit quiet operation

When the airflow is set to “”, the noise from the indoor unit will become quieter.  
Use this when making the noise quieter.

## NOTE

### ■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.

### ■ Note on COOL operation

- This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, the performance of the air conditioner drops.

### ■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.

### ■ Note on AUTO operation

- In AUTO operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, manually change the set temperature.

### ■ Note on airflow rate setting





- At smaller airflow rates, the cooling (heating) effect is also smaller.

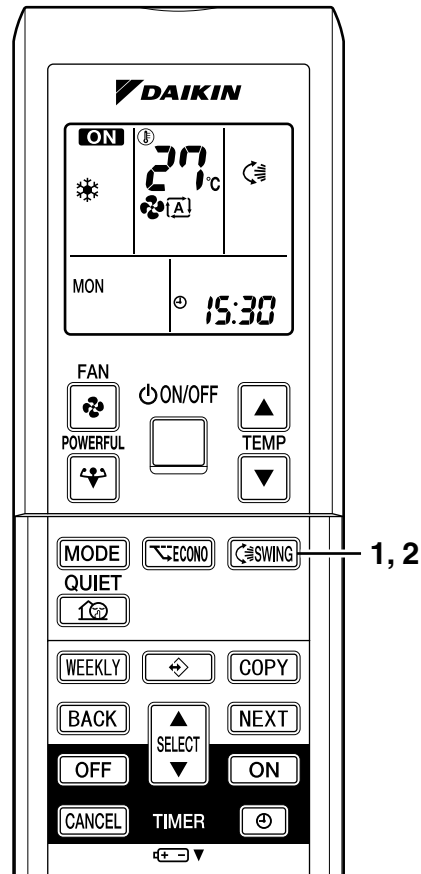
## 2.3 Adjusting the Airflow Direction

# Adjusting the Airflow Direction

You can adjust the airflow direction to increase your comfort.


### ■ To adjust the horizontal blade (flap)

1. Press “SWING button ”.
  - “” is displayed on the LCD and the flaps will begin to swing.
2. When the flap has reached the desired position, press “SWING button ” once more.
  - The flap will stop moving.
  - “” disappears from the LCD.



### ■ To adjust the vertical blades (louvers)

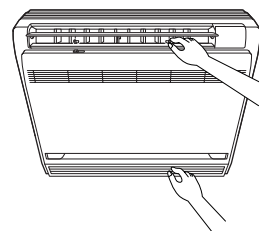Hold the knob and move the louver.  
(You will find a knob on the left-side and the right-side blades.)




### Notes on flap and louvers angle

- Unless “SWING” is selected, you should set the flap at a near-horizontal angle in HEAT mode and at a upward position in COOL or DRY mode to obtain the best performance.

#### ■ ATTENTION

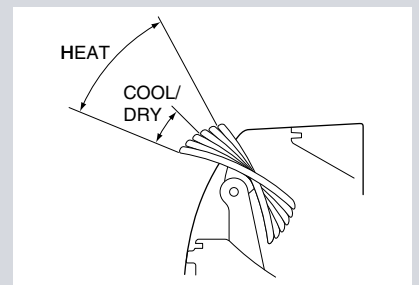- When adjusting the flap by hand, turn off the unit, and use the remote controller to restart the unit.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.




## ■ Airflow selection

- Make airflow selection according to what suits you.

### When setting the airflow selection switch to .

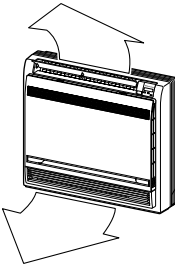- Air conditioner automatically decides the appropriate blowing pattern depending on the operating mode/situation.

Operating mode	Situation	Blowing pattern
COOL mode	<ul style="list-style-type: none"> <li>• When the room has become fully cool, or when one hour has passed since turning on the air conditioner.</li> </ul>	<ul style="list-style-type: none"> <li>• So that air does not come into direct contact with people, air is blown upper air outlet, room temperature is equalized.</li> </ul>
	<ul style="list-style-type: none"> <li>• At start of operation or other times when the room is not fully cooled.</li> </ul>	 <ul style="list-style-type: none"> <li>• Air is blown from the upper and lower air outlets for high speed cooling during COOL mode, and for filling the room with warm air during HEAT mode.</li> </ul>
HEAT mode	<ul style="list-style-type: none"> <li>• At times other than below. (Normal time.)</li> </ul>	
	<ul style="list-style-type: none"> <li>• At start or when air temperature is low.</li> </ul>	<ul style="list-style-type: none"> <li>• So that air does not come into direct contact with people. Air is blown upper air outlet.</li> </ul>

- During Dry mode, so that cold air does not come into direct contact with people, air is blown upper air outlet.

### When setting the air outlet selection switch to .

- Regardless of the operating mode or situation, air blows from the upper air outlet.
- Use this switch when you do not want air coming out of the lower air outlet. (While sleeping etc.)

## CAUTION

- Do not try to adjust the flap by hand.
- When adjusting by hand, the mechanism may not operate properly or condensation may drip from air outlets.


## 2.4 POWERFUL Operation

# POWERFUL Operation

POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.

### ■ To start POWERFUL operation

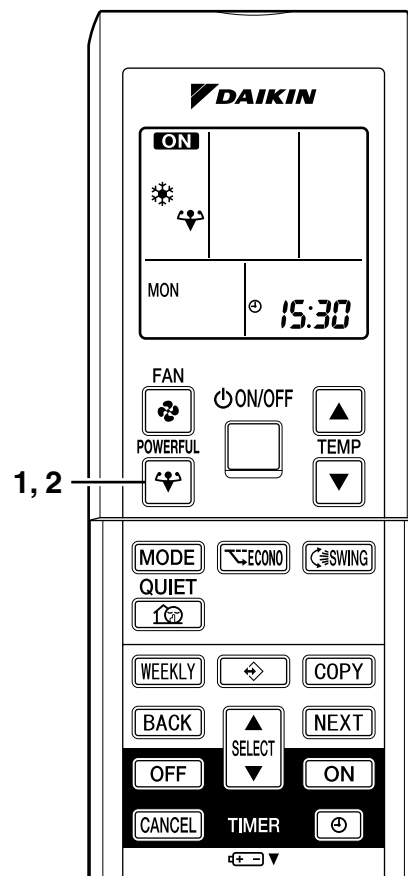
#### 1. Press “POWERFUL button”.

- POWERFUL operation ends in 20minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” is displayed on the LCD.
- When using POWERFUL operation, there are some functions which are not available.

### ■ To cancel POWERFUL operation


#### 2. Press “POWERFUL button” again.

- “” disappears from the LCD.



## NOTE
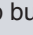
### ■ Notes on POWERFUL operation

- POWERFUL Operation cannot be used together with ECONO or QUIET Operation. Priority is given to the function of whichever button is pressed last.
- POWERFUL Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- POWERFUL Operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
- **In COOL and HEAT mode**  
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting. The temperature and airflow settings are not variable.
- **In DRY mode**  
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
- **In FAN mode**  
The airflow rate is fixed to the maximum setting.

## 2.5 OUTDOOR UNIT QUIET Operation

# OUTDOOR UNIT QUIET Operation

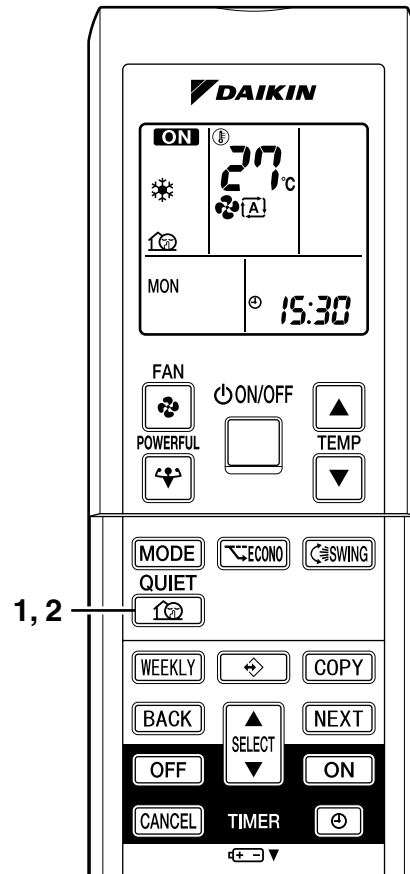
OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

### ■ To start OUTDOOR UNIT QUIET operation

1. Press “QUIET button”.
  - “” is displayed on the LCD.


### ■ To cancel OUTDOOR UNIT QUIET operation

2. Press “QUIET button” again.
  - “” disappears from the LCD.



## NOTE

### ■ Note on OUTDOOR UNIT QUIET operation

- This function is available in COOL, HEAT, and AUTO modes. (This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- If operation is stopped using the remote controller or the main unit ON/OFF switch when using OUTDOOR UNIT QUIET operation, “” will remain on the remote controller display.
- OUTDOOR UNIT QUIET operation will drop neither the frequency nor fan speed if the frequency and fan speed have been already dropped low enough.

## 2.6 ECONO Operation

# ECONO Operation

ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value.

This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.

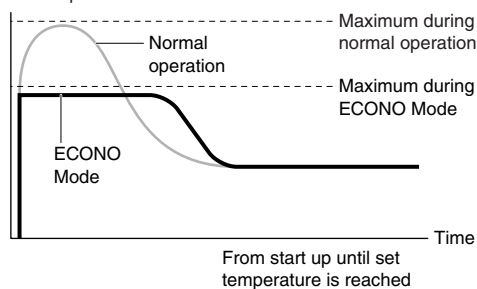
### ■ To start ECONO operation

1. Press “ECONO button”.
  - “” is displayed on the LCD.


### ■ To cancel ECONO operation

2. Press “ECONO button” again.
  - “” disappears from the LCD.


Running current and power consumption



- This diagram is a representation for illustrative purposes only.
- \* The maximum running current and power consumption of the air conditioner in ECONO mode vary with the connecting outdoor unit.

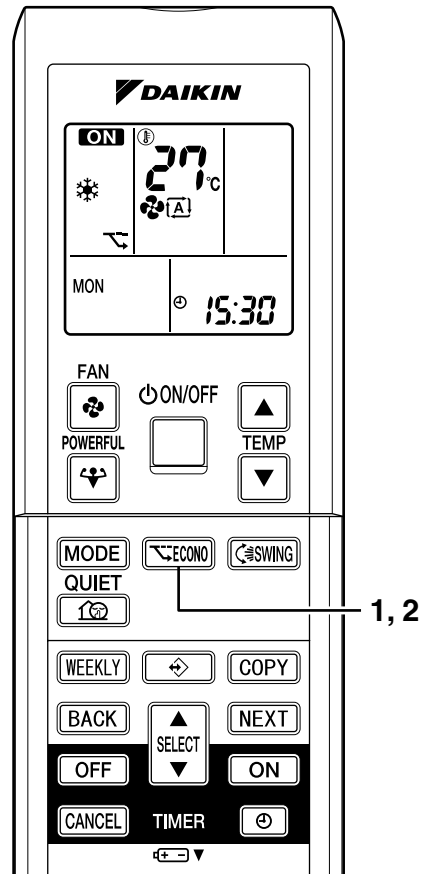

### NOTE

- ECONO Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY, and HEAT modes.
- POWERFUL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- Power consumption may not drop even if ECONO operation is used if the level of power consumption is already low.



## 2.7 TIMER Operation

# TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

### ■ To use OFF TIMER operation

- Check that the clock is correct.  
If not, set the clock to the present time.

#### 1. Press “OFF TIMER button”.

0:00 is displayed.

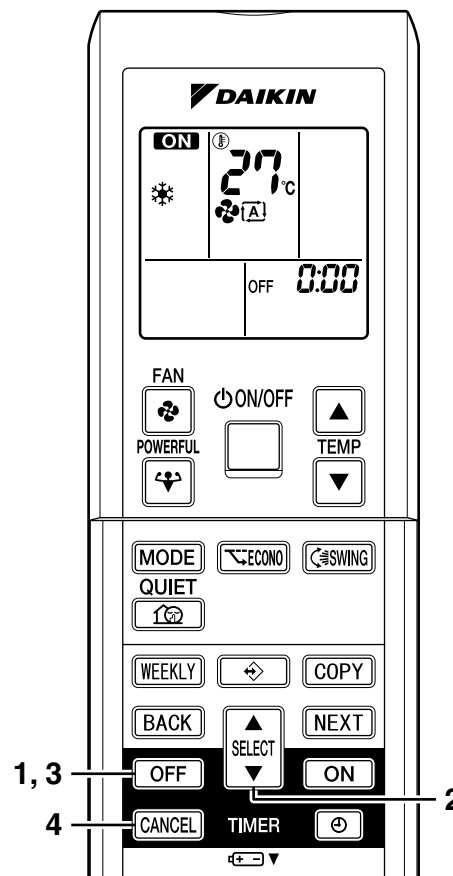

OFF blinks.

#### 2. Press “SELECT button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

#### 3. Press “OFF TIMER button” again.

- The TIMER lamp lights up.



### ■ To cancel the OFF TIMER Operation

#### 4. Press “CANCEL button”.

- The TIMER lamp goes off.

### NOTE

- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes)

#### ■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

# TIMER Operation

## ■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time.

### 1. Press “ON TIMER button”.

6:00 is displayed.


ON blinks.

### 2. Press “SELECT button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

### 3. Press “ON TIMER button” again.

- The TIMER lamp lights up.




## ■ To cancel ON TIMER operation

### 4. Press “CANCEL button”.

- The TIMER lamp goes off.

## ■ To combine ON TIMER and OFF TIMER

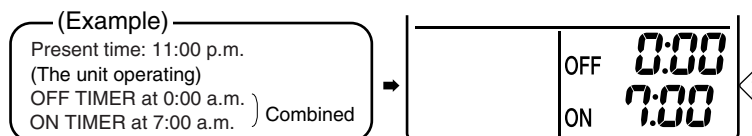
- A sample setting for combining the two timers is shown below.



## ATTENTION

### ■ In the following cases, set the timer again.

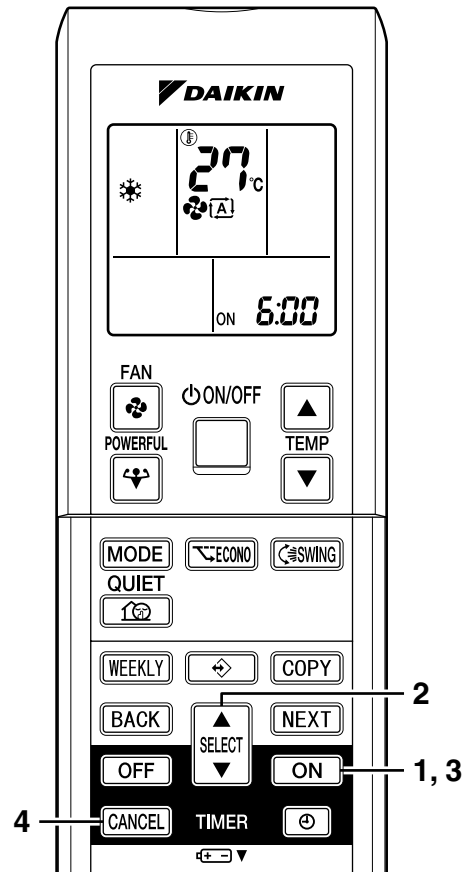- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote controller.



## 2.8 WEEKLY TIMER Operation

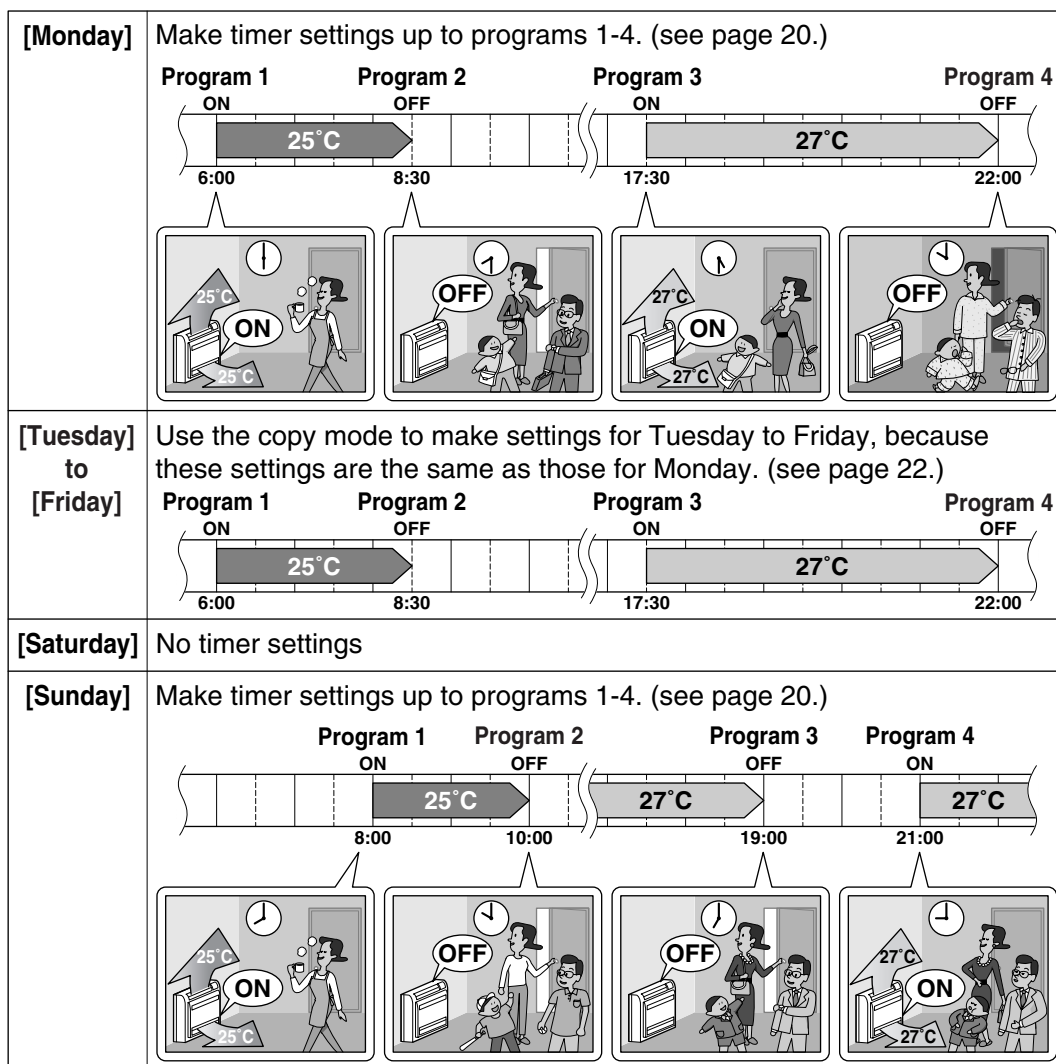
# WEEKLY TIMER Operation

Up to 4 timer settings can be saved for each day of the week. It is convenient if the WEEKLY TIMER is set according to the family's life style.

### ■ Using in these cases of WEEKLY TIMER

An example of WEEKLY TIMER settings is shown below.

**Example:** The same timer settings are made for the week from Monday through Friday while different timer settings are made for the weekend.




- Up to 4 reservations per day and 28 reservations per week can be set in the WEEKLY TIMER. The effective use of the copy mode ensures ease of making reservations.
- The use of ON-ON-ON-ON settings, for example, makes it possible to schedule operating mode and set temperature changes. Furthermore, by using OFF-OFF-OFF-OFF settings, only the turn-OFF time of each day can be set. This will turn OFF the air conditioner automatically if the user forgets to turn it OFF.

# WEEKLY TIMER Operation
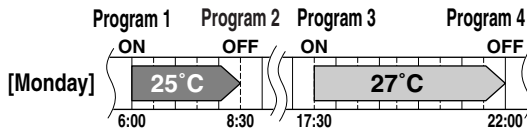
## ■ To use WEEKLY TIMER operation

### Setting mode

- Make sure the day of the week and time are set. If not, set the day of the week and time.




**1. Press “” button.”**

- The day of the week and the reservation number of the current day will be displayed.
- 1 to 4 settings can be made per day.

**2. Press the “SELECT button” to select the desired day of the week and reservation number.**

- Pressing the “SELECT button” changes the reservation number and the day of the week.

**3. Press “NEXT button”.**

- The day of the week and reservation number will be set.
- “” and “ON” blink.


**4. Press “SELECT button” to select the desired mode.**

- Pressing the “SELECT button” changes “ON” or “OFF” setting in sequence.



- In case the reservation has already been set, selecting “blank” deletes the reservation.
- Go to STEP 9 if “blank” is selected.


**5. Press “NEXT button”.**

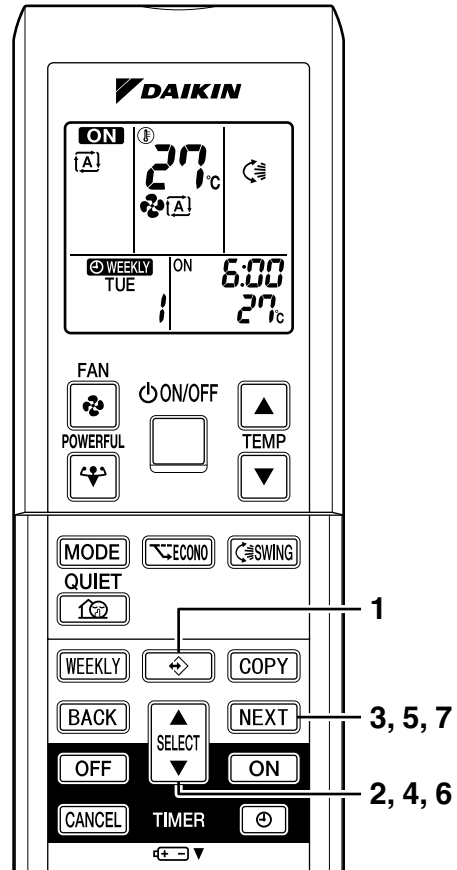
- The ON/OFF TIMER mode will be set.
- “” and the time blink.

**6. Press “SELECT button” to select the desired time.**


- The time can be set between 0:00 and 23:50 in 10 minute intervals.
- To return to the ON/OFF TIMER mode setting, press “BACK button”.
- Go to STEP 9 when setting the OFF TIMER.

**7. Press “NEXT button”.**

- The time will be set.
- “” and the temperature blink.



### Setting Displays

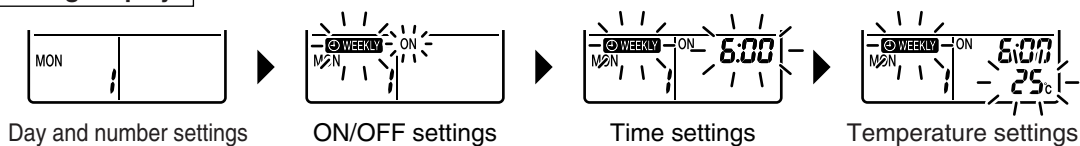


### 8. Press “SELECT button” to select the desired temperature.

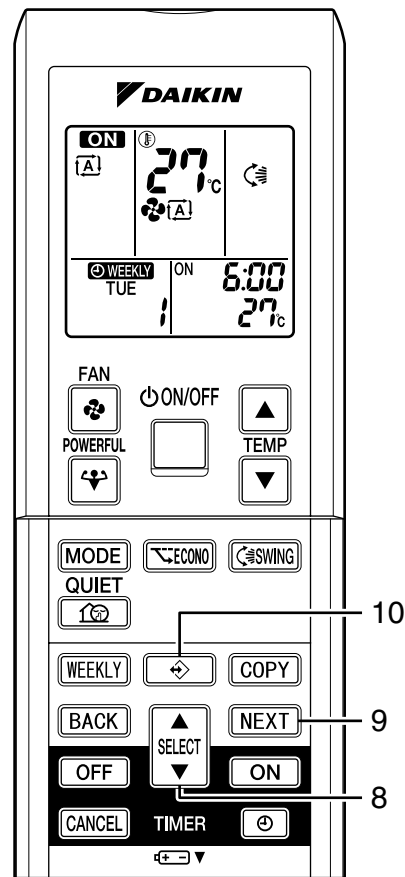
- The temperature can be set between 10°C and 32°C.  
Cooling: The unit operates at 18°C even if it is set at 10 to 17°C.  
Heating: The unit operates at 30°C even if it is set at 31 to 32°C.
- To return to the time setting, press “BACK button”.
- The set temperature is only displayed when the mode setting is on.

### 9. Press “NEXT button”.

- The temperature will be set and go to the next reservation setting.
- To continue further settings, repeat the procedure from STEP 4.



### 10. Press “ button” to complete the setting.

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and flashing the operation lamp.
  - “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
  - The TIMER lamp lights up.
  - A reservation made once can be easily copied and the same settings used for another day of the week.
- Refer to **Copy mode** . (page 22.)



## NOTE

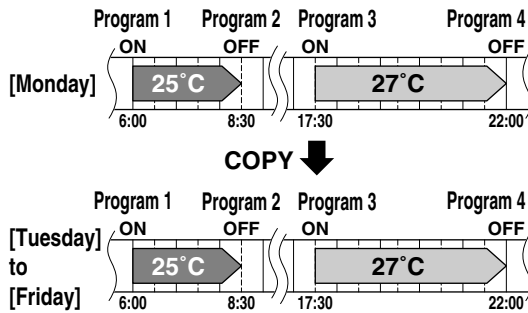
### ■ Notes on WEEKLY TIMER operation




- Do not forget to set the clock on the remote control first.
- The day of the week, ON/OFF TIMER mode, time and set temperature (only for ON TIMER mode) can be set with WEEKLY TIMER. Other settings for ON TIMER are based on the settings just before the operation.
- Both WEEKLY TIMER and ON/OFF TIMER operation cannot be used at the same time. The ON/OFF TIMER operation has priority if it is set while WEEKLY TIMER is still active. The WEEKLY TIMER will go into standby state, and “ WEEKLY” will disappear from the LCD. When ON/OFF TIMER is up, the WEEKLY TIMER will automatically become active.
- Only the time and set temperature set with the weekly timer are sent with the “ button”. Set the weekly timer only after setting the operation mode, the fan strength, and the fan direction ahead of time.
- Shutting the breaker off, power failure, and other similar events will render operation of the indoor unit’s internal clock inaccurate. Reset the clock.
- The “BACK button” can be used only for the time and temperature settings. It cannot be used to go back to the reservation number.


# WEEKLY TIMER Operation

## Copy mode


- A reservation made once can be copied another day of the week. The whole reservation of the selected day of the week will be copied.



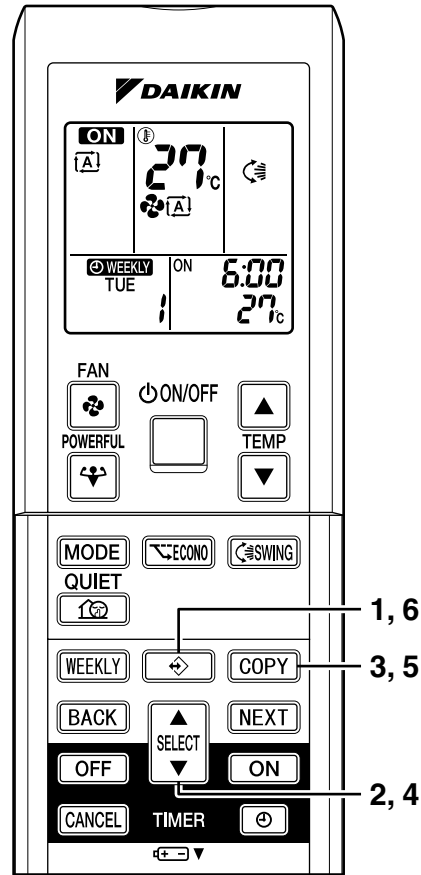1. Press “” button.
2. Press “SELECT button” to confirm the day of the week to be copied.
3. Press “COPY button” to activate copy mode.
  - The whole reservation of the selected day of the week will be copied.
4. Press “SELECT button” to select the destination day of the week.
5. Press “COPY button”.
  - The reservation will be copied to the selected day of the week. The whole reservation of the selected day of the week will be copied.
  - To continue copying the settings to other days of the week, repeat STEP 4 and STEP 5.
6. Press “” button to complete the setting.
  - “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.




## Setting Displays

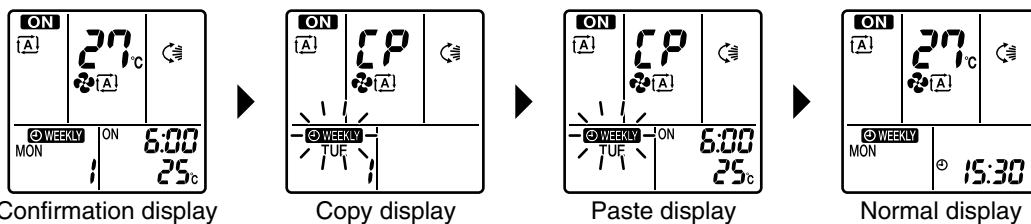

## NOTE

### ■ COPY MODE

- The entire reservation of the source day of the week is copied in the copy mode. In the case of making a reservation change for any day of the week individually after copying the content of weekly reservations, press “” button and change the settings in the steps of **Setting mode**. (page 20.)

## ■ Confirming a reservation

- The reservation can be confirmed.

### 1. Press “” button”.


- The day of the week and the reservation number of the current day will be displayed.

### 2. Press “SELECT button” to select the day of the week and the reservation number to be confirmed.


- Pressing the “SELECT button” displays the reservation details.
- To change the confirmed reserved settings, select the reservation number and press “NEXT button”. The mode is switched to setting mode. Go to

**Setting mode** STEP 4. (page 20.)


### 3. Press “” button” to exit confirming mode.

- “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
- The TIMER lamp lights up.

#### Setting Displays



Normal display



Confirmation display

## ■ To deactivate WEEKLY TIMER operation

### 4. Press “WEEKLY button” while

“ WEEKLY” is displayed on the LCD.

- The “ WEEKLY” will disappear from the LCD.
- The TIMER lamp goes off.
- To reactivate the WEEKLY TIMER operation, press the “WEEKLY button” again.
- If a reservation deactivated with “WEEKLY button” is activated once again, the last reservation mode will be used.

## ■ To delete reservations

#### The individual reservation

- Refer to **Setting mode** (page 20.)  
When selecting desired mode at STEP 4 in setting mode, select “blank”. The reservation will be deleted.

#### The reservations for each day of the week

- This function can be used for deleting reservations for each day of the week.

### 5. Press “” button”.

### 6. Select the day of the week to be canceled with the “SELECT button”.

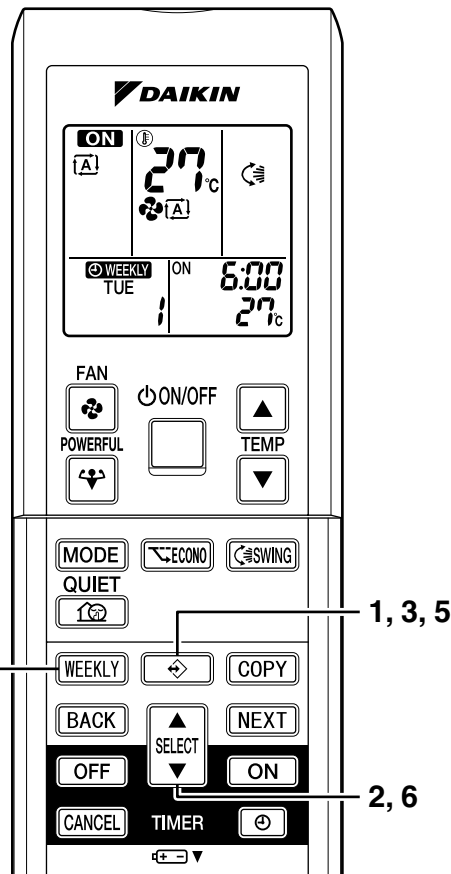
### 7. Hold the “WEEKLY button” for 5 seconds.

- The reservation of the selected day of the week will be deleted.

#### All reservations

### 8. Hold “WEEKLY button” for 5 seconds while normal display.

- Be sure to direct the remote control toward the main unit and check for a receiving tone.
- This operation is not effective while WEEKLY TIMER is being set.
- All reservations will be deleted.



# Part 6

## Service Diagnosis

1. Caution for Diagnosis.....	78
1.1 Troubleshooting with LED .....	78
2. Problem Symptoms and Measures .....	79
3. Service Check Function .....	80
3.1 ARC452 Series.....	80
4. Troubleshooting .....	83
4.1 Error Codes and Description .....	83
4.2 Indoor Unit PCB Abnormality .....	84
4.3 Freeze-up Protection Control or Heating Peak-cut Control .....	85
4.4 Fan Motor (DC Motor) or Related Abnormality.....	87
4.5 Thermistor or Related Abnormality (Indoor Unit).....	89
4.6 Signal Transmission Error (between Indoor Unit and Outdoor Unit) .....	90
4.7 Unspecified Voltage (between Indoor Unit and Outdoor Unit) .....	91
4.8 Outdoor Unit PCB Abnormality.....	92
4.9 OL Activation (Compressor Overload) .....	94
4.10 Compressor Lock .....	95
4.11 DC Fan Lock .....	96
4.12 Input Overcurrent Detection .....	97
4.13 Four Way Valve Abnormality .....	98
4.14 Discharge Pipe Temperature Control.....	100
4.15 High Pressure Control in Cooling .....	101
4.16 Compressor System Sensor Abnormality .....	103
4.17 Position Sensor Abnormality .....	105
4.18 DC Voltage / Current Sensor Abnormality (25/35 Class) .....	108
4.19 CT or Related Abnormality (50 Class).....	109
4.20 Thermistor or Related Abnormality (Outdoor Unit).....	111
4.21 Electrical Box Temperature Rise.....	113
4.22 Radiation Fin Temperature Rise .....	116
4.23 Output Overcurrent Detection .....	119
4.24 Refrigerant Shortage .....	121
4.25 Low-voltage Detection or Over-voltage Detection.....	124
4.26 Signal Transmission Error on Outdoor Unit PCB (50 Class Only).....	126
5. Check .....	127
5.1 How to Check.....	127



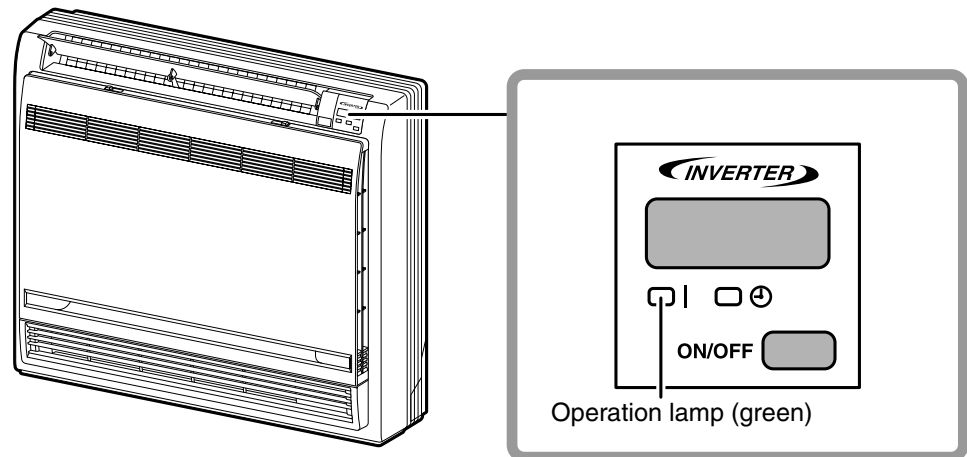
# 1. Caution for Diagnosis

## 1.1 Troubleshooting with LED

### Indoor Unit

The operation lamp blinks when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated, or when the thermistor malfunctions.
  2. When a signal transmission error occurs between the indoor and outdoor units.
- In either case, conduct the diagnostic procedure described in the following pages.



(R12426)

### Outdoor Unit

The outdoor unit has one green LED (LED A) on the PCB. When the LED A blinks, the microcomputer works in order.

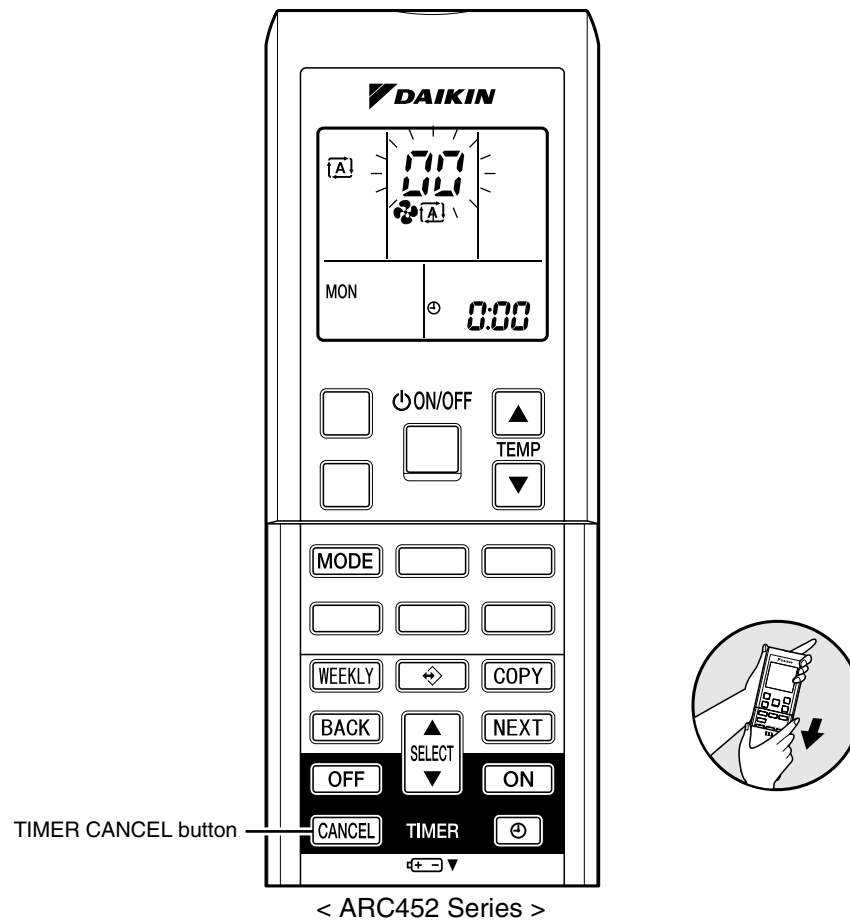
## 2. Problem Symptoms and Measures

Symptom	Check Item	Details of Measure	Reference Page
The units does not operate.	Check the power supply.	Check to make sure that the rated voltage is supplied.	—
	Check the type of the indoor units.	Check to make sure that the indoor unit type is compatible with the outdoor unit.	—
	Check the outdoor temperature.	Heating operation cannot be used when the outdoor temperature is 20°C or higher, and cooling operation cannot be used when the outdoor temperature is below -10°C.	—
	Diagnose with remote controller indication.	—	83
	Check the remote controller addresses.	Check to make sure that address settings for the remote controller and indoor unit are correct.	—
Operation sometimes stops.	Check the power supply.	A power failure of 2 to 10 cycles stops air conditioner operation. (Operation lamp OFF)	—
	Check the outdoor temperature.	Heating operation cannot be used when the outdoor temperature is 20°C or higher, and cooling operation cannot be used when the outdoor temperature is below -10°C.	—
	Diagnose with remote controller indication.	—	83
The unit operates but does not cool, or does not heat.	Check for wiring and piping errors in the connection between the indoor and outdoor units.	Conduct the wiring/piping error check described on the product diagnosis label.	—
	Check for thermistor detection errors.	Check to make sure that the thermistor is mounted securely.	—
	Check for faulty operation of the electronic expansion valve.	Set the units to cooling operation, and check the temperature of the liquid pipe to see if the electronic expansion valve works.	—
	Diagnose with remote controller indication.	—	83
	Diagnose by service port pressure and operating current.	Check for refrigerant shortage.	121
Large operating noise and vibrations	Check the output voltage of the power module.	—	132
	Check the power module.	—	—
	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the installation manual, etc.) are provided.	—

## 3. Service Check Function

### 3.1 ARC452 Series

- Check Method 1**
- When the timer cancel button is held down for 5 seconds, “00” indication appears on the temperature display section.



(R12205)

- Press the timer cancel button repeatedly until a long beep sounds.
  - The code indication changes in the sequence shown below.


No.	Code	No.	Code	No.	Code
1	00	13	07	25	UR
2	04	14	R3	26	UR
3	15	15	H8	27	P4
4	E6	16	H9	28	L3
5	H6	17	09	29	L4
6	H0	18	04	30	H7
7	R6	19	05	31	U2
8	E7	20	J3	32	ER
9	U0	21	J6	33	RR
10	F3	22	E5	34	FR
11	R5	23	R1		
12	F6	24	E1		




- Note:**
- A short beep “pi” and two consecutive beeps “pi pi” indicate non-corresponding codes.
  - To return to the normal mode, hold the timer cancel button down for 5 seconds. When the remote controller is left untouched for 60 seconds, it also returns to the normal mode.

## Check Method 2

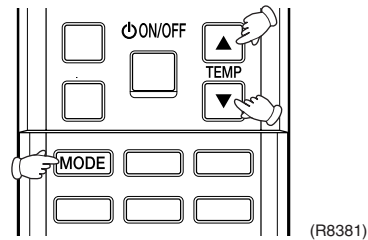
1. Press the 3 buttons (TEMP▲, TEMP▼, MODE) at the same time.



The figure of the ten's place blinks.

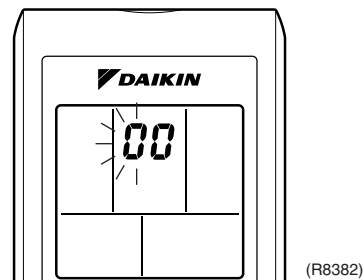


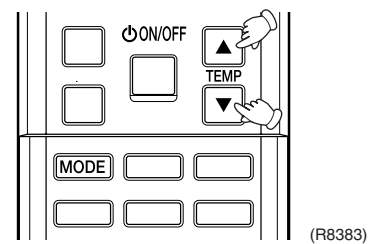2. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of "beep" or "pi pi".




3. Diagnose by the sound.
  - ★"pi" : The figure of the ten's place does not accord with the error code.
  - ★"pi pi" : The figure of the ten's place accords with the error code but the one's not.
  - ★"beep" : The both figures of the ten's and one's place accord with the error code.  
(The figures indicated when you hear the "beep" sound are error code. →Refer to page 83.)

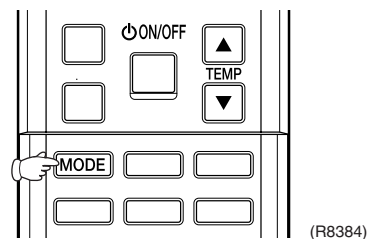
4. Press the MODE button.




The figure of the one's place blinks.

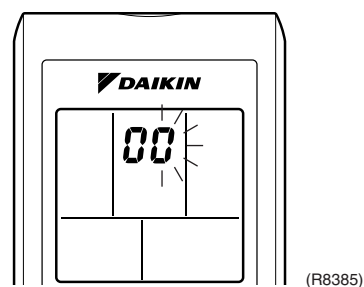

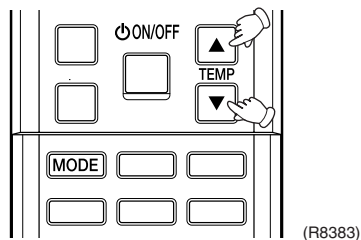
5. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of “beep”.



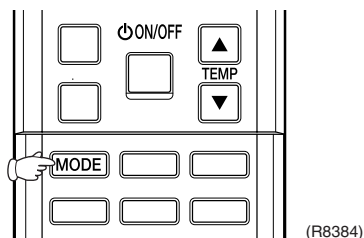
6. Diagnose by the sound.
- ★“pi” : The figure of the ten’s place does not accord with the error code.
  - ★“pi pi” : The figure of the ten’s place accords with the error code but the one’s not.
  - ★“beep” : The both figures of the ten’s and one’s place accord with the error code.
7. Determine the error code.  
The figures indicated when you hear the “beep” sound are error code.  
(Error codes and description → Refer to page 83.)
8. Press the MODE button to exit from the diagnosis mode.



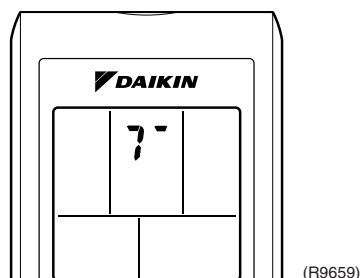The display “7-” means the trial operation mode.  
(Refer to page 256 for trial operation.)



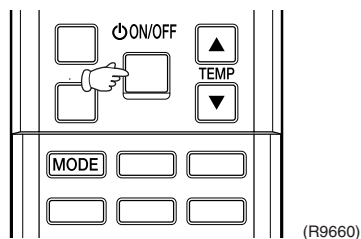9. Press the ON/OFF button twice to return to the normal mode.



**Note:** When the remote controller is left untouched for 60 seconds, it returns to the normal mode.

## 4. Troubleshooting

### 4.1 Error Codes and Description

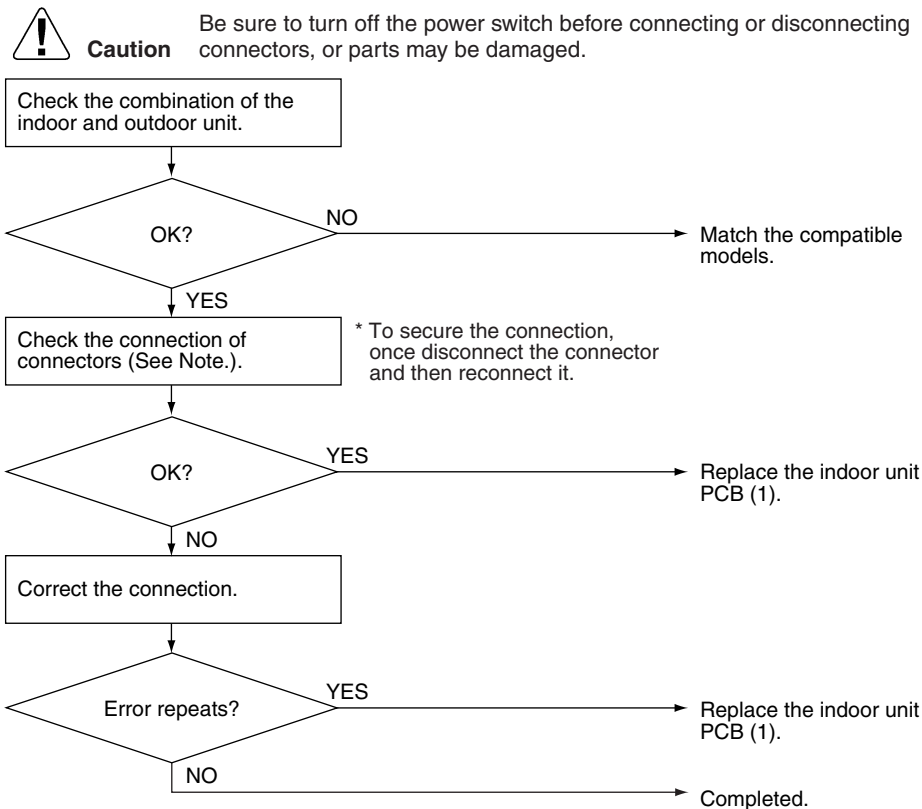
	Error Codes	Description	Reference Page
System	00	Normal	—
	U0★	Refrigerant shortage	121
	U2	Low-voltage detection or over-voltage detection	124
	U4	Signal transmission error (between indoor unit and outdoor unit)	90
	U8	Unspecified voltage (between indoor unit and outdoor unit)	91
Indoor Unit	R1	Indoor unit PCB abnormality	84
	R5	Freeze-up protection control or heating peak-cut control	85
	R6	Fan motor (DC motor) or related abnormality	87
	C4	Indoor heat exchanger thermistor or related abnormality	89
	C9	Room temperature thermistor or related abnormality	89
Outdoor Unit	E1	Outdoor unit PCB abnormality	92
	E5★	OL activation (compressor overload)	94
	E6★	Compressor lock	95
	E7	DC fan lock	96
	E8	Input overcurrent detection	97
	E9	Four way valve abnormality	98
	F3	Discharge pipe temperature control	100
	F6	High pressure control in cooling	101
	H0	Compressor system sensor abnormality	103
	H6	Position sensor abnormality	105
	H8	DC voltage / current sensor abnormality (25/35 class)	108
		CT or related abnormality (50 class)	109
	H9	Outdoor temperature thermistor or related abnormality	111
	J3	Discharge pipe thermistor or related abnormality	111
	J6	Outdoor heat exchanger thermistor or related abnormality	111
	L3	Electrical box temperature rise	113
	L4	Radiation fin temperature rise	116
	L5	Output overcurrent detection	119
	P4	Radiation fin thermistor or related abnormality	111
	U7	Signal transmission error on outdoor unit PCB (50 class only)	126

★: Displayed only when system-down occurs.

## 4.2 Indoor Unit PCB Abnormality

<b>Remote Controller Display</b>	
<b>Method of Malfunction Detection</b>	Evaluation of zero-cross detection of power supply by the indoor unit PCB.
<b>Malfunction Decision Conditions</b>	There is no zero-cross detection in approximately 10 seconds.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Wrong models interconnected</li> <li>■ Defective indoor unit PCB</li> <li>■ Disconnection of connector</li> </ul>

### Troubleshooting



(R11704)

**Note:** Check the following connector.

Model Type	Connector
Floor Standing Type	Terminal board ~ Control PCB

## 4.3 Freeze-up Protection Control or Heating Peak-cut Control

Remote  
Controller  
Display

85

Method of  
Malfunction  
Detection

- Freeze-up protection control  
During cooling operation, the freeze-up protection control (operation halt) is activated according to the temperature detected by the indoor heat exchanger thermistor.
- Heating peak-cut control  
During heating operation, the temperature detected by the indoor heat exchanger thermistor is used for the heating peak-cut control (operation halt, outdoor fan stop, etc.)

Malfunction  
Decision  
Conditions

- Freeze-up protection control  
During cooling operation, the indoor heat exchanger temperature is below 0°C.
- Heating peak-cut control  
During heating operation, the indoor heat exchanger temperature is above 65°C

Supposed  
Causes

- Short-circuited air
- Clogged air filter of the indoor unit
- Dust accumulation on the indoor heat exchanger
- Defective indoor heat exchanger thermistor
- Defective indoor unit PCB



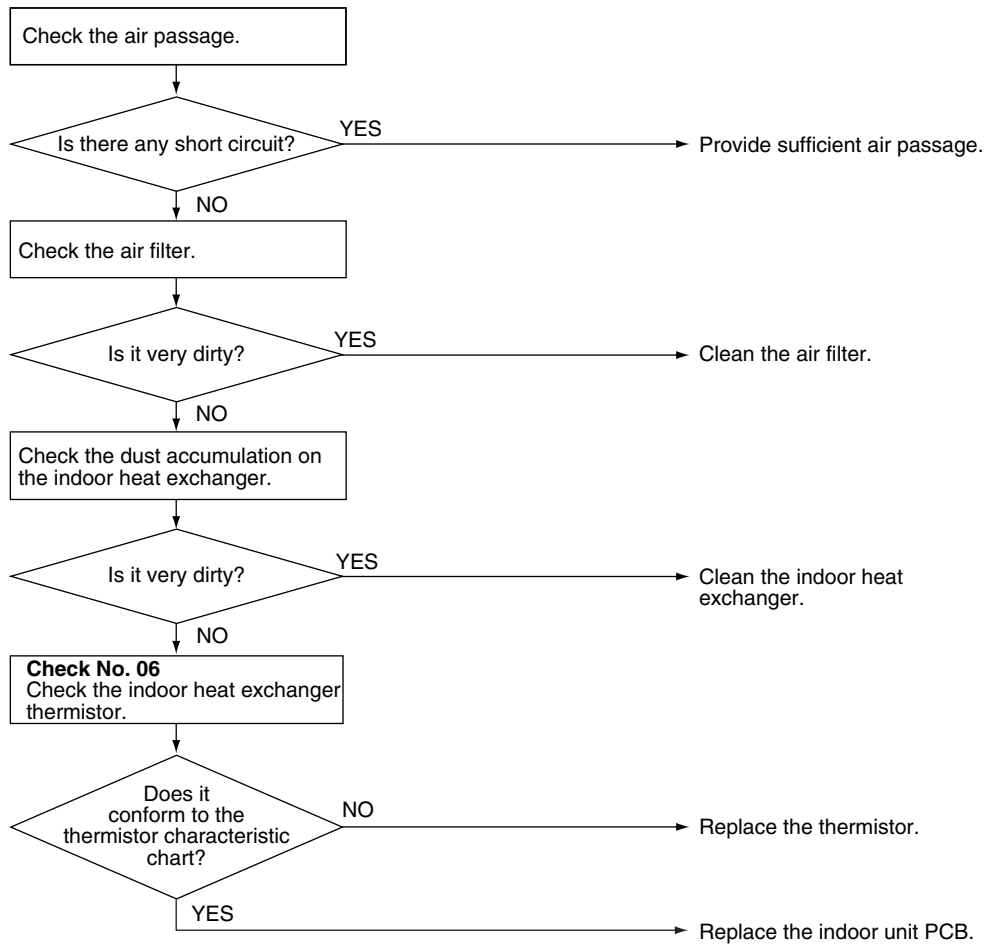
## Troubleshooting



**Check No.06**  
Refer to P.129

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



(R7131)

## 4.4 Fan Motor (DC Motor) or Related Abnormality

---

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

---

Malfunction  
Decision  
Conditions

The detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

---

Supposed  
Causes

- Layer short inside the fan motor winding
- Breaking of wire inside the fan motor
- Breaking of the fan motor lead wires
- Defective capacitor of the fan motor
- Defective indoor unit PCB

Troubleshooting

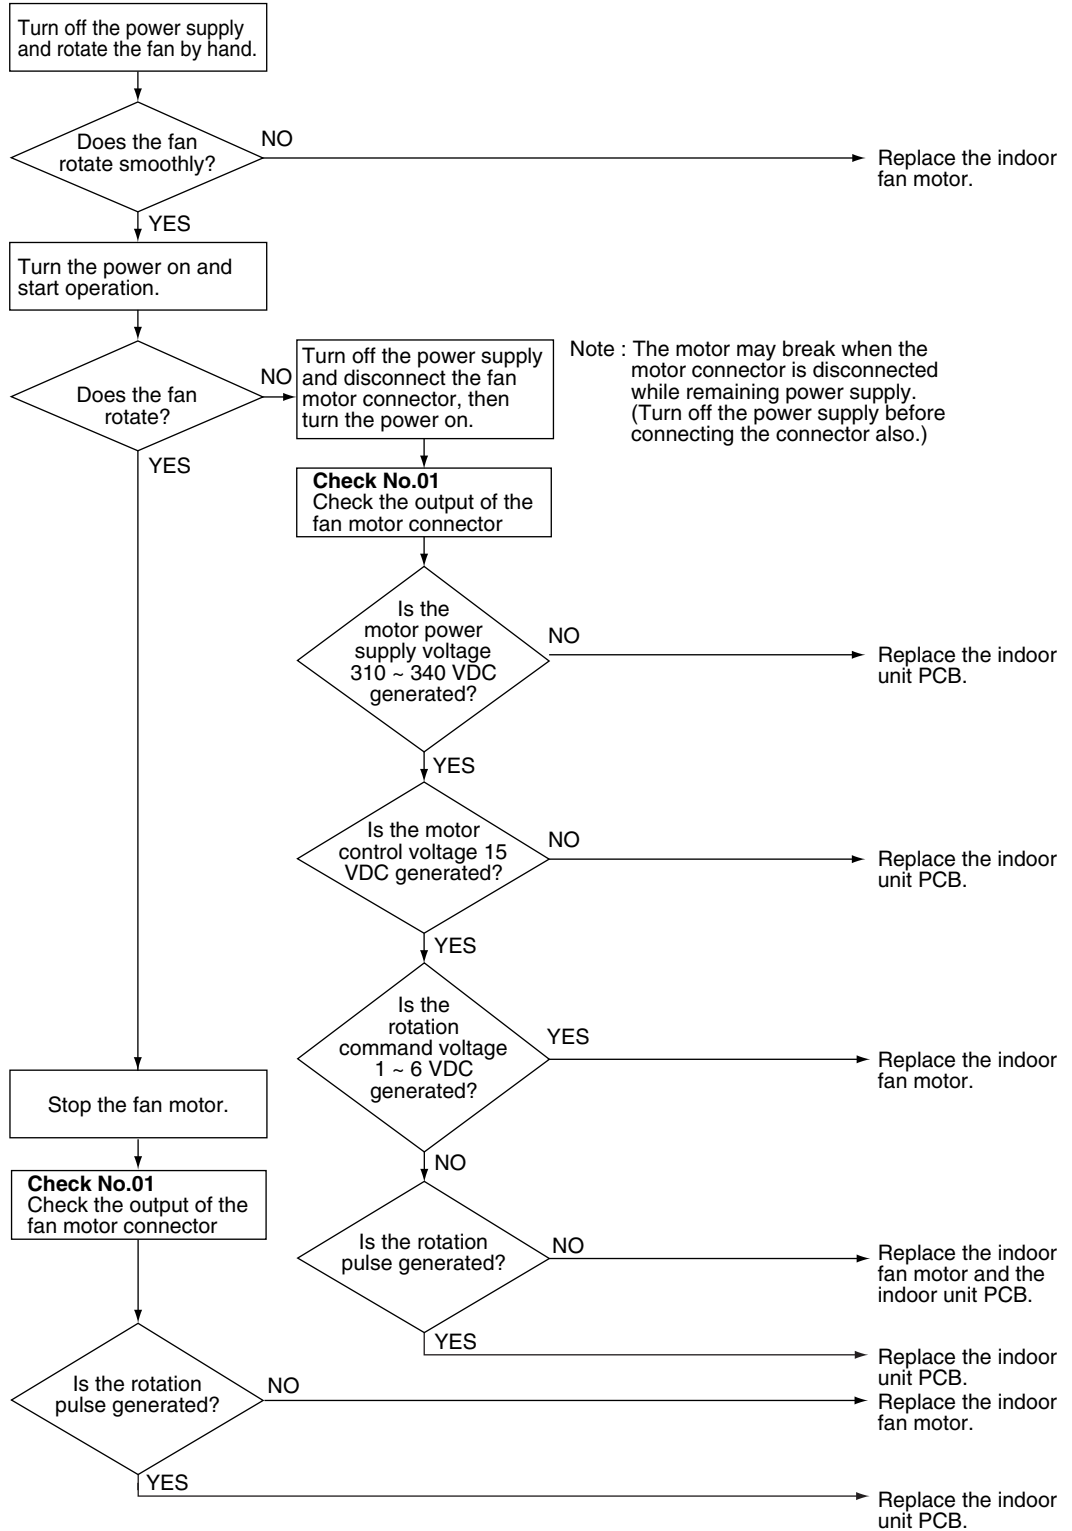


**Check No.01**  
Refer to P.127



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.




(R12033)

## 4.5 Thermistor or Related Abnormality (Indoor Unit)
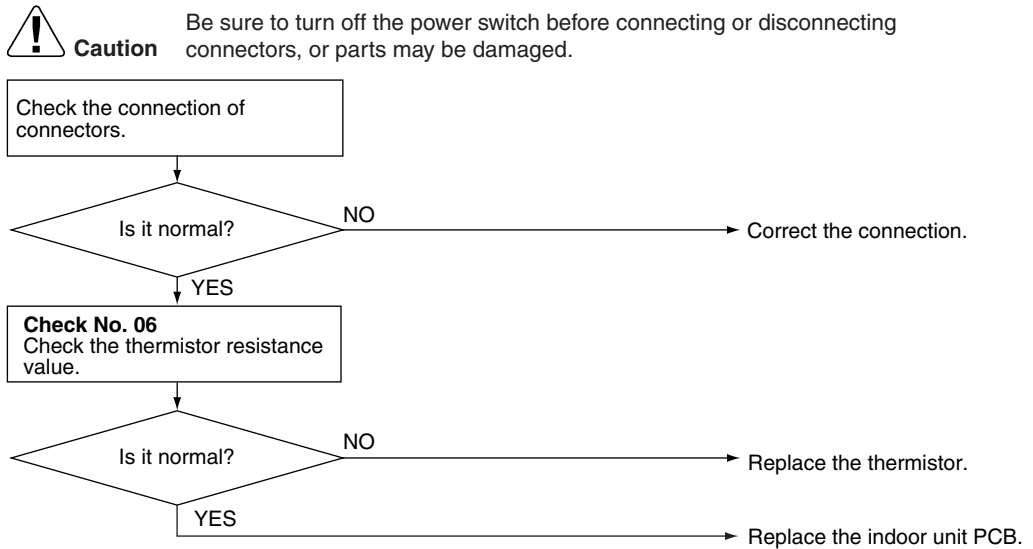
<b>Remote Controller Display</b>	Ⓔ4,Ⓔ9
<b>Method of Malfunction Detection</b>	The temperatures detected by the thermistors determine thermistor errors.
<b>Malfunction Decision Conditions</b>	The thermistor input is more than 4.96 V or less than 0.04 V during compressor operation.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Disconnection of connector</li> <li>■ Defective thermistor</li> <li>■ Defective indoor unit PCB</li> </ul>

### Troubleshooting

  
**Check No.06**  
 Refer to P.129



(R7134)

Ⓔ4 : Indoor heat exchanger thermistor  
 Ⓔ9 : Room temperature thermistor

## 4.6 Signal Transmission Error (between Indoor Unit and Outdoor Unit)

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

The data received from the outdoor unit in indoor unit-outdoor unit signal transmission is checked whether it is normal.

Malfunction  
Decision  
Conditions

The data sent from the outdoor unit cannot be received normally, or the content of the data is abnormal.

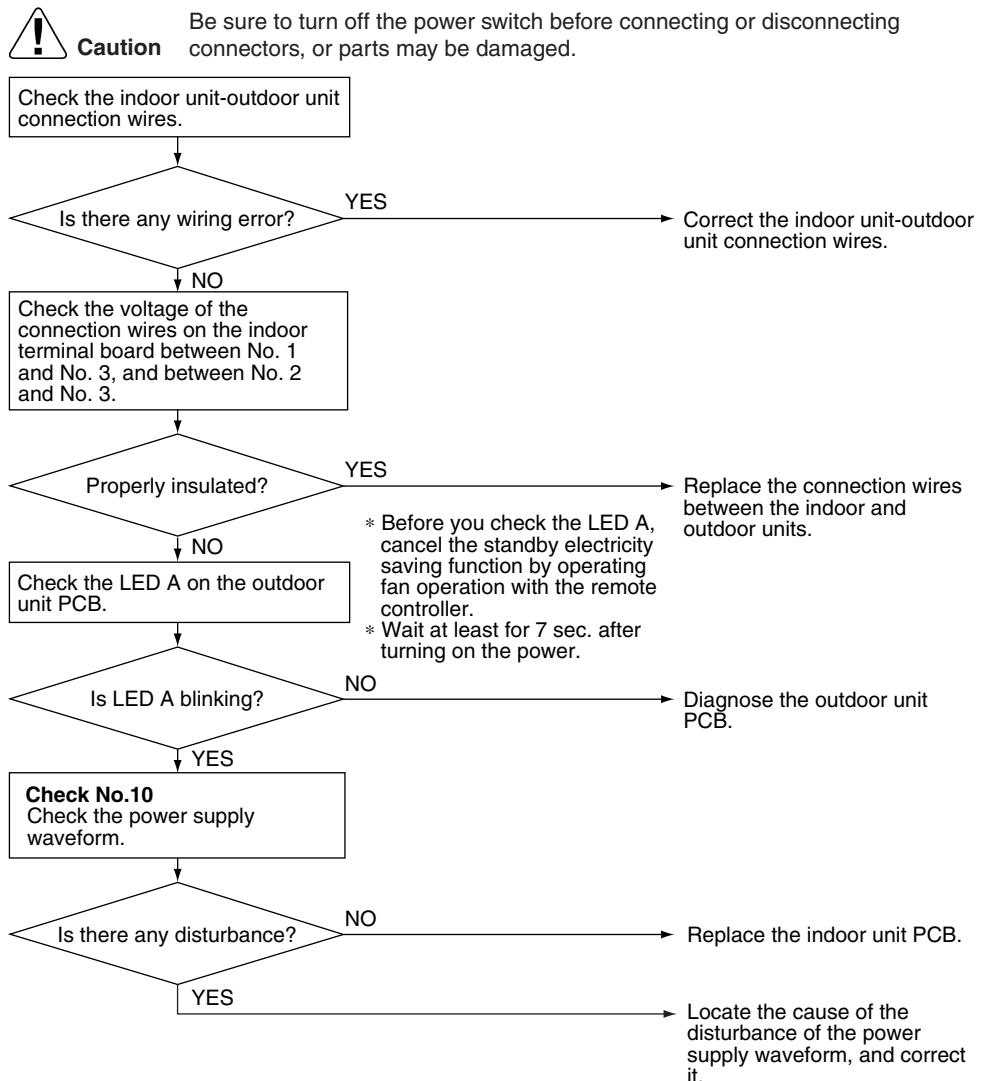
Supposed  
Causes

- Wiring error
- Breaking of the connection wires between the indoor and outdoor units (wire No. 3)
- Defective outdoor unit PCB
- Defective indoor unit PCB
- Disturbed power supply waveform

Troubleshooting



Check No.10  
Refer to P.131




(R12160)

# 4.7 Unspecified Voltage (between Indoor Unit and Outdoor Unit)
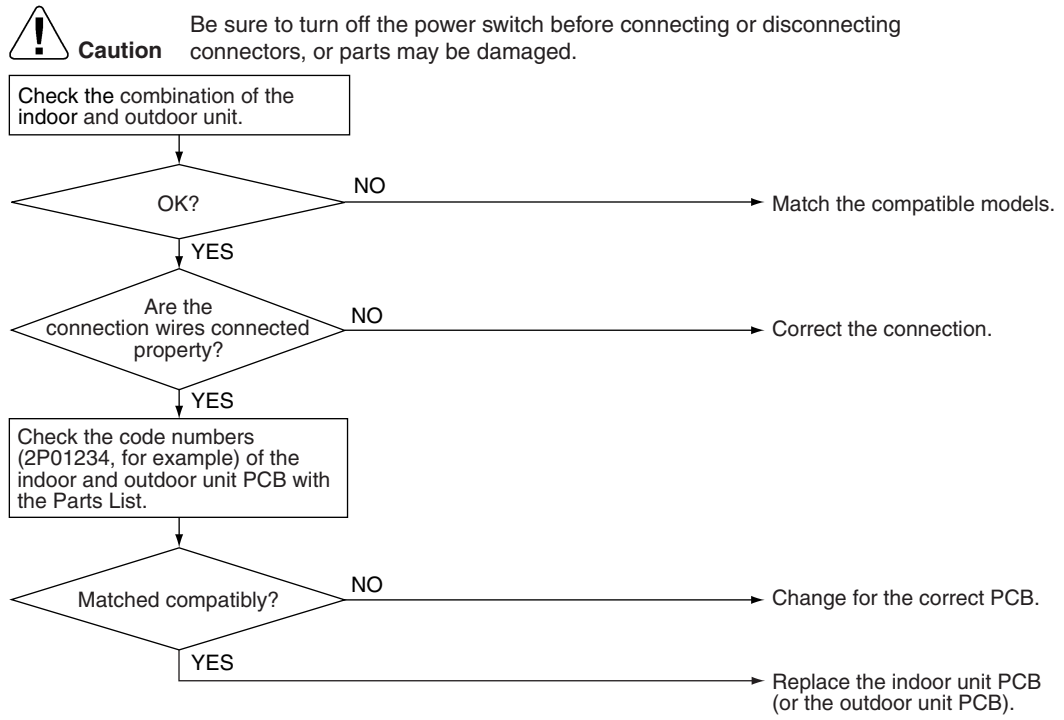
<b>Remote Controller Display</b>	UR
<b>Method of Malfunction Detection</b>	The supply power is detected for its requirements (different from pair type and multi type) by the indoor / outdoor transmission signal.
<b>Malfunction Decision Conditions</b>	The pair type and multi type are interconnected.
<b>Supposed Causes</b>	<ul style="list-style-type: none"> <li>■ Wrong models interconnected</li> <li>■ Wrong wiring of connecting wires</li> <li>■ Wrong indoor unit PCB or outdoor unit PCB mounted</li> <li>■ Defective indoor unit PCB</li> <li>■ Defective outdoor unit PCB</li> </ul>

## Troubleshooting



(R11707)

## 4.8 Outdoor Unit PCB Abnormality

### 4.8.1 25/35 Class

Remote  
Controller  
Display

E 1

Method of  
Malfunction  
Detection

- The system follows the microprocessor program as specified.
- The system checks to see if the zero-cross signal comes in properly.

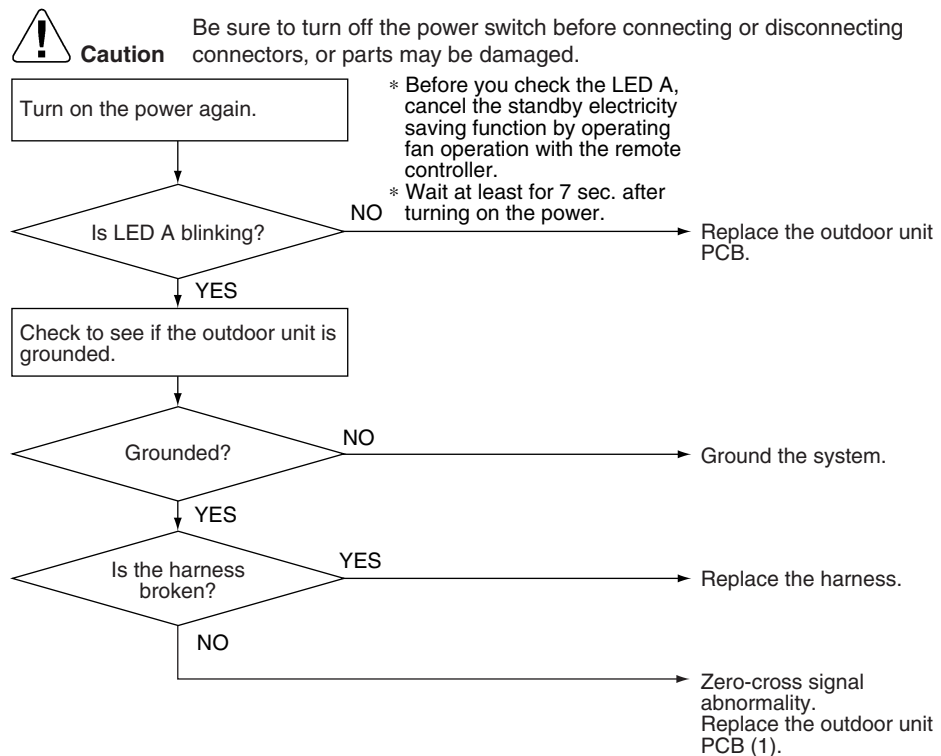
Malfunction  
Decision  
Conditions

- The microprocessor program runs out of control.
- The zero-cross signal is not detected.

Supposed  
Causes

- Defective outdoor unit PCB
- Broken harness between PCBs
- Noise
- Momentary fall of voltage
- Momentary power failure, etc.

#### Troubleshooting



(R12161)

### 4.8.2 50 Class

Remote  
Controller  
Display

E I

Method of  
Malfunction  
Detection

- Detection within the program of the microcomputer

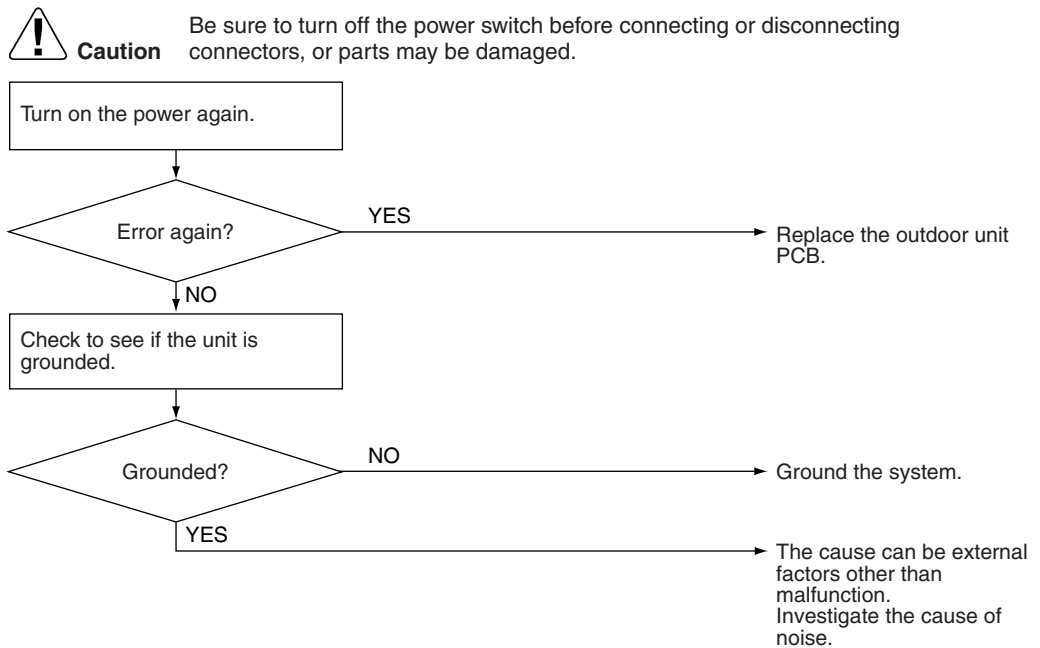
Malfunction  
Decision  
Conditions

- The program of the microcomputer is in abnormal running order.

Supposed  
Causes

- Defective outdoor unit PCB
- Noise
- Momentary fall of voltage
- Momentary power failure

#### Troubleshooting



(R7183)



## 4.9 OL Activation (Compressor Overload)

Remote  
Controller  
Display

ES

Method of  
Malfunction  
Detection

A compressor overload is detected through compressor OL.

Malfunction  
Decision  
Conditions

- If the error repeats twice, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error
- \* The operating temperature condition is not specified.

Supposed  
Causes

- Defective discharge pipe thermistor
- Defective electronic expansion valve or coil
- Defective four way valve or coil
- Defective outdoor unit PCB
- Refrigerant shortage
- Water mixed in refrigerant
- Defective stop valve

Troubleshooting



Check No.04  
Refer to P.127



Check No.05  
Refer to P.128



Check No.06  
Refer to P.129

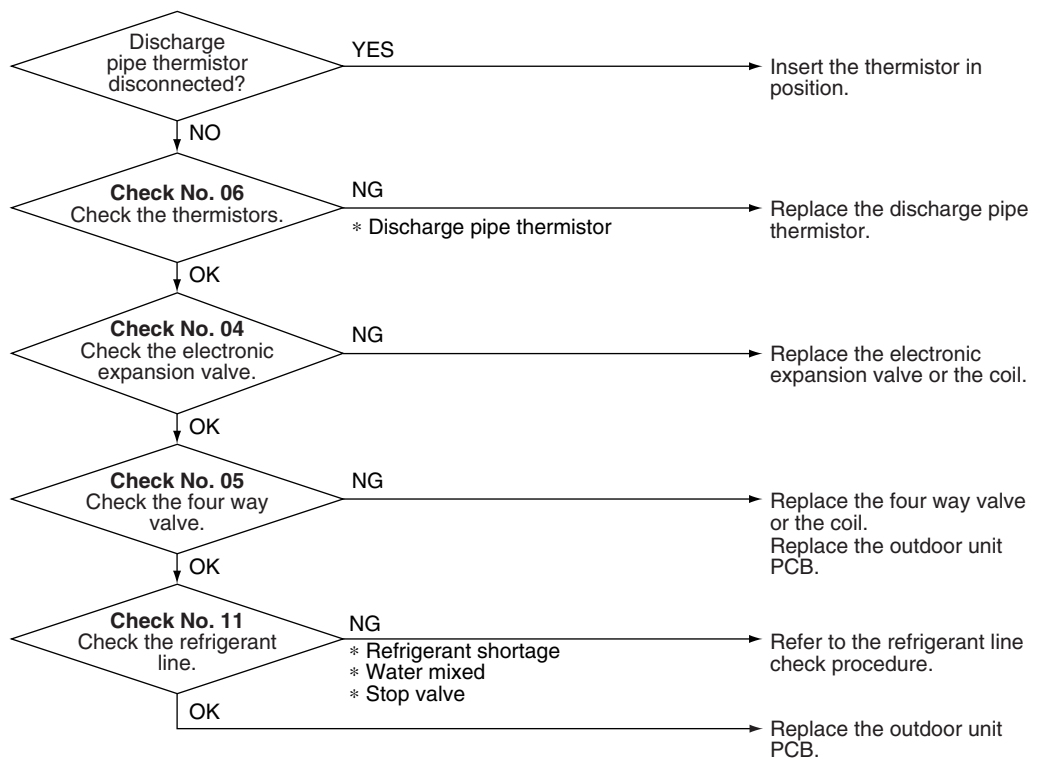


Check No.11  
Refer to P.131



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



(R11999)

# 4.10 Compressor Lock

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

A compressor lock is detected by checking the compressor running condition through the position detection circuit.

Malfunction  
Decision  
Conditions

**<25/35 class>**

- Operation stops due to overcurrent.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 11 minutes without any other error

**<50 class>**

- A compressor lock is detected by the current waveform generated when applying high-frequency voltage to the motor.
- If the error repeats 16 times, the system is shut down
- Reset condition: Continuous run for about 5 minutes without any other error

Supposed  
Causes

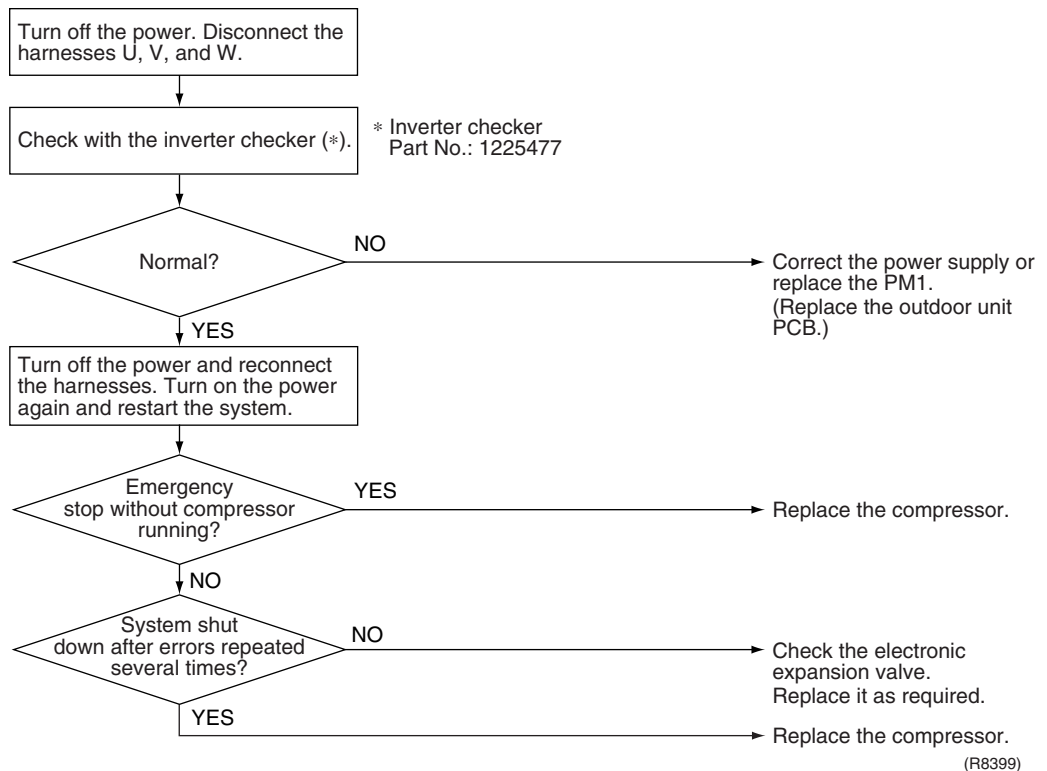
- Compressor locked
- Compressor harness disconnected

Troubleshooting



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.  
(Precaution before turning on the power again)  
Make sure the power has been off for at least 30 seconds.



## 4.11 DC Fan Lock

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

An error is determined with the high-voltage fan motor rotation speed detected by the Hall IC.

Malfunction  
Decision  
Conditions

- The fan does not start in 15 ~ 60 seconds (depending on the model) even when the fan motor is running.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 11 minutes (50 class: 5 minutes) without any other error

Supposed  
Causes

- Disconnection of the fan motor
- Foreign matters stuck in the fan
- Defective fan motor
- Defective outdoor unit PCB

Troubleshooting

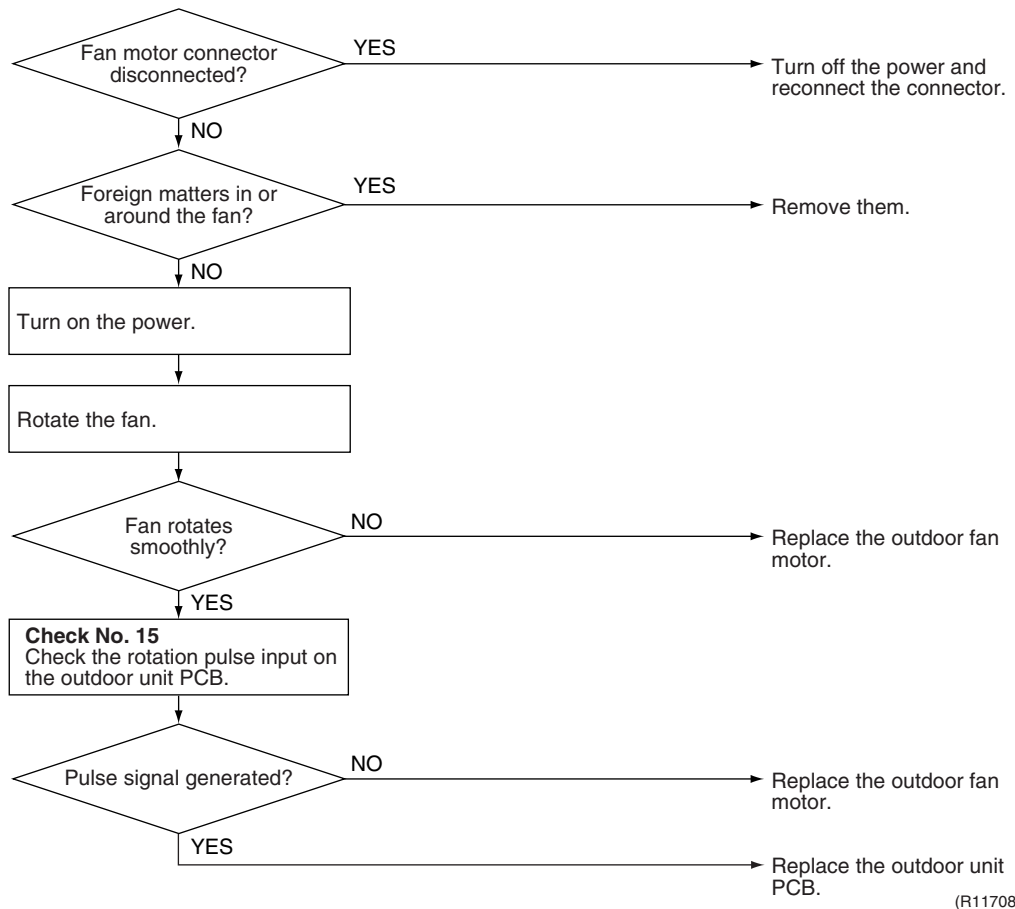


Check No.15  
Refer to P.133



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



## 4.12 Input Overcurrent Detection

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

An input overcurrent is detected by checking the input current value with the compressor running.

Malfunction  
Decision  
Conditions

- The following current with the compressor running continues for 2.5 seconds.  
Cooling / Heating: Above 9.25 ~ 20 A (Refer to “Input current control” on page 49 for detail.)

Supposed  
Causes

- Defective compressor
- Defective power module
- Defective outdoor unit PCB
- Short circuit

### Troubleshooting



**Check No.07**  
Refer to P.130



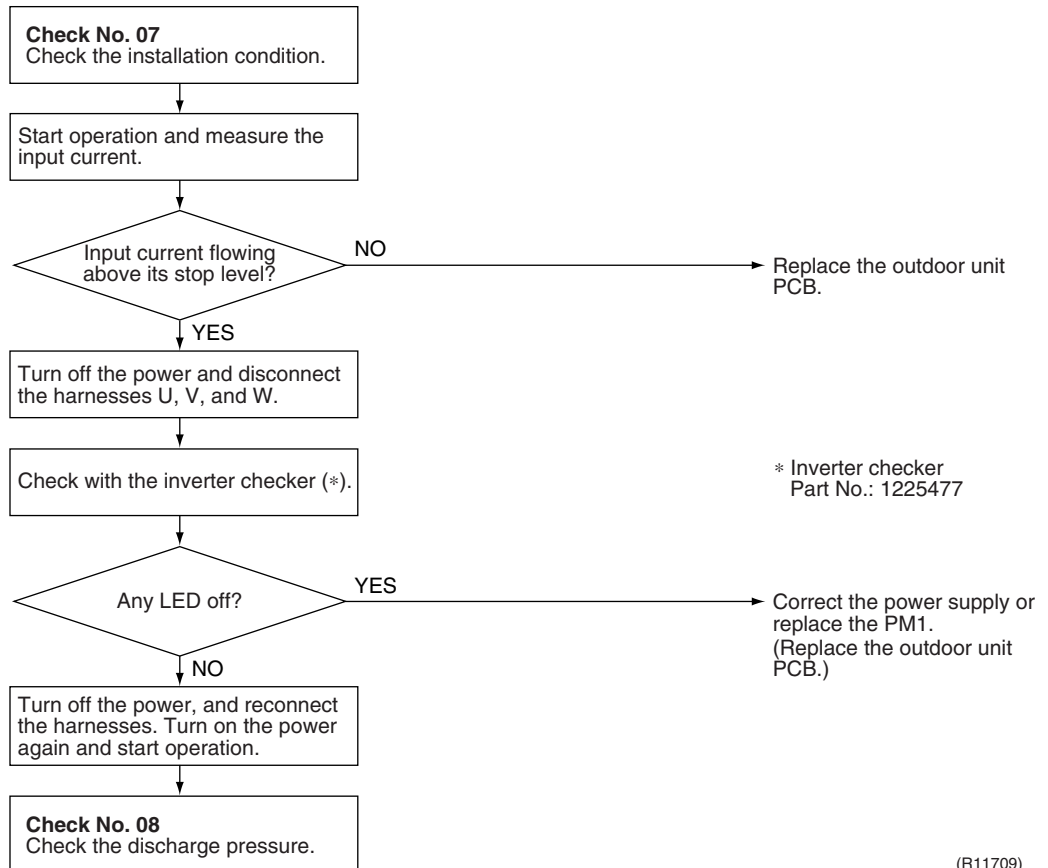
**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

\* An input overcurrent may result from wrong internal wiring. If the wires have been disconnected and reconnected for part replacement, for example, and the system is interrupted by an input overcurrent, take the following procedure.



**Check No.08**  
Refer to P.130



(R11709)

## 4.13 Four Way Valve Abnormality

### Remote Controller Display

EA

### Method of Malfunction Detection

The room temperature thermistor, the indoor heat exchanger thermistor, the outdoor temperature thermistor, and the outdoor heat exchanger thermistor are checked if they function within their normal ranges in each operation mode.

### Malfunction Decision Conditions

A following condition continues over 1 ~ 10 minutes (depending on the model) after operating for 5 ~ 10 minutes (depending on the model).

- Cooling / Dry  
(room thermistor temp. – indoor heat exchanger temp.) < –5°C
- Heating  
(indoor heat exchanger temp. – room thermistor temp.) < –5°C
- If the error repeats, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

### Supposed Causes

- Disconnection of four way valve coil
- Defective four way valve, coil, or harness
- Defective outdoor unit PCB
- Defective thermistor
- Refrigerant shortage
- Water mixed in refrigerant
- Defective stop valve

Troubleshooting



**Check No.05**  
Refer to P.128



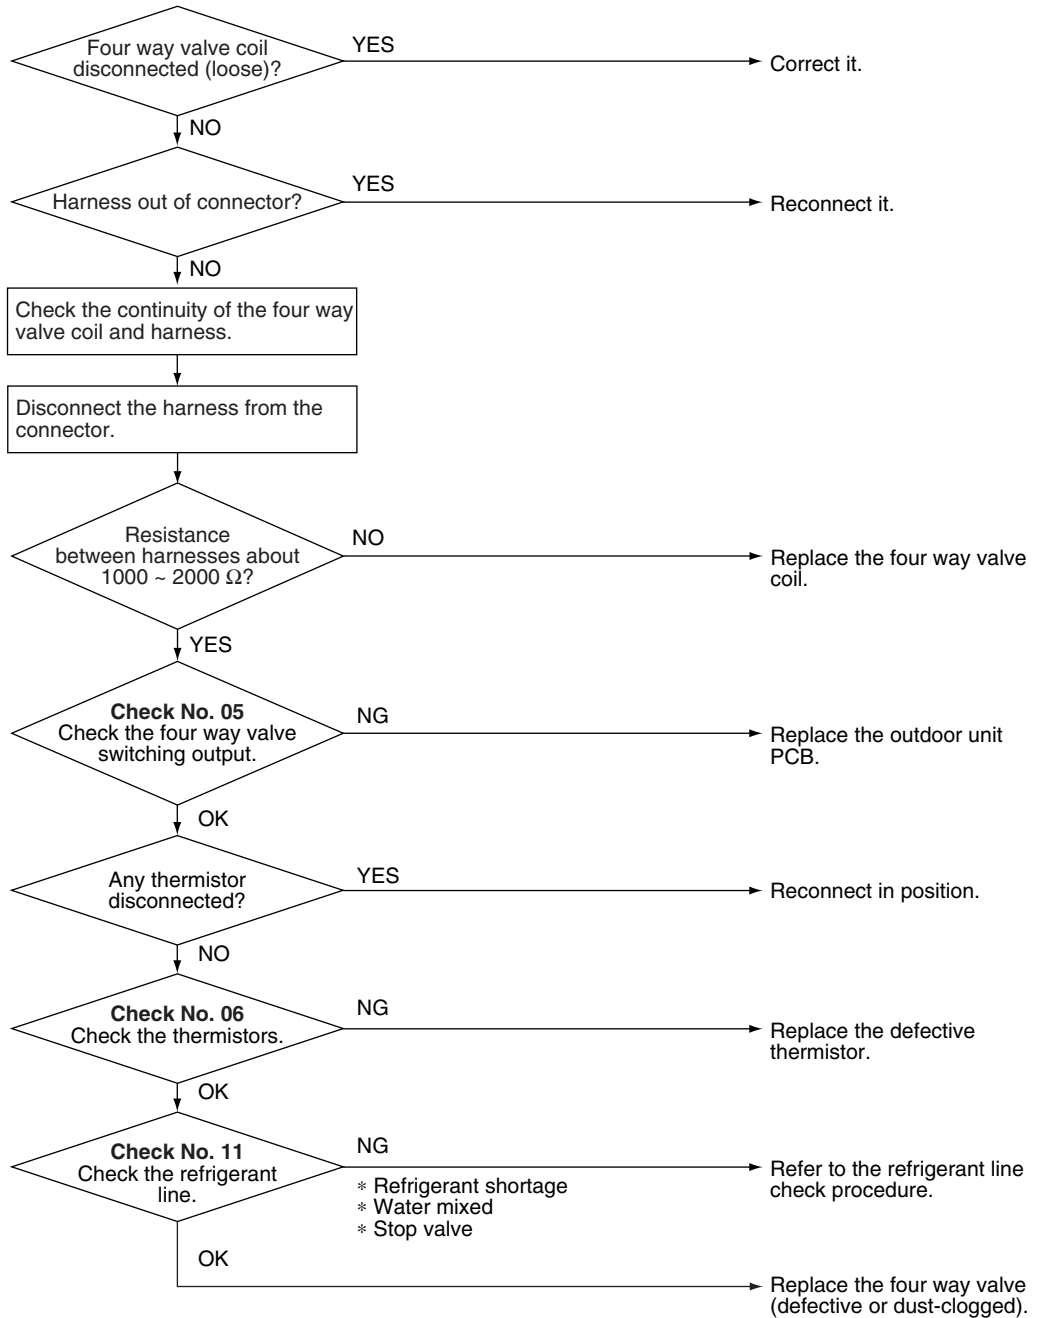
**Check No.06**  
Refer to P.129



**Check No.11**  
Refer to P.131



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



(R11710)

## 4.14 Discharge Pipe Temperature Control

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

An error is determined with the temperature detected by the discharge pipe thermistor.

Malfunction  
Decision  
Conditions

- If the temperature detected by the discharge pipe thermistor rises above  $A$  °C, the compressor stops.
- The error is cleared when the discharge pipe temperature has dropped below  $B$  °C.

<25/35 class>

Stop temperatures	A (°C)	B (°C)
(1) above 45 Hz (rising), above 40 Hz (dropping)	110	97
(2) 30 ~ 45 Hz (rising), 25 ~ 40 Hz (dropping)	105	92
(3) below 30 Hz (rising), below 25 Hz (dropping)	99	86

<50 class>

A (°C)	B (°C)
110	95

- If the error repeats, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

Supposed  
Causes

- Defective discharge pipe thermistor  
(Defective outdoor heat exchanger thermistor or outdoor temperature thermistor)
- Defective electronic expansion valve or coil
- Refrigerant shortage
- Defective four way valve
- Water mixed in refrigerant
- Defective stop valve
- Defective outdoor unit PCB

Troubleshooting



Check No.04  
Refer to P.127



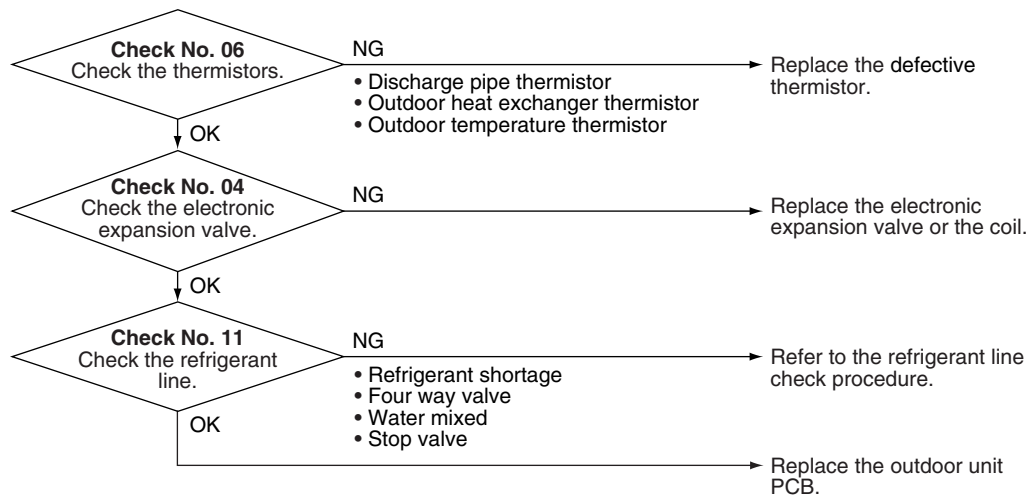
Check No.06  
Refer to P.129



Check No.11  
Refer to P.131



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



(R7141)

## 4.15 High Pressure Control in Cooling

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

High-pressure control (operation halt, frequency drop, etc.) is activated in cooling operation if the temperature sensed by the outdoor heat exchanger thermistor exceeds the limit.

Malfunction  
Decision  
Conditions

- The temperature sensed by the outdoor heat exchanger thermistor rises above  $\Delta$  °C.
- The error is cleared when the temperature drops below  $\text{B}$  °C.

	$\Delta$ (°C)	$\text{B}$ (°C)
RK(X)S25/35F2V1B, RK(X)S25/35G2V1B	65	54
RK(X)S25/35G2V1B9	65	52
RK(X)S50F2V1B, RK(X)S50G2V1B	65	51

Supposed  
Causes

- The installation space is not large enough.
- Dirty outdoor heat exchanger
- Defective outdoor fan motor
- Defective stop valve
- Defective electronic expansion valve or coil
- Defective outdoor heat exchanger thermistor
- Defective outdoor unit PCB



Troubleshooting



**Check No.04**  
Refer to P.127



**Check No.06**  
Refer to P.129



**Check No.07**  
Refer to P.130



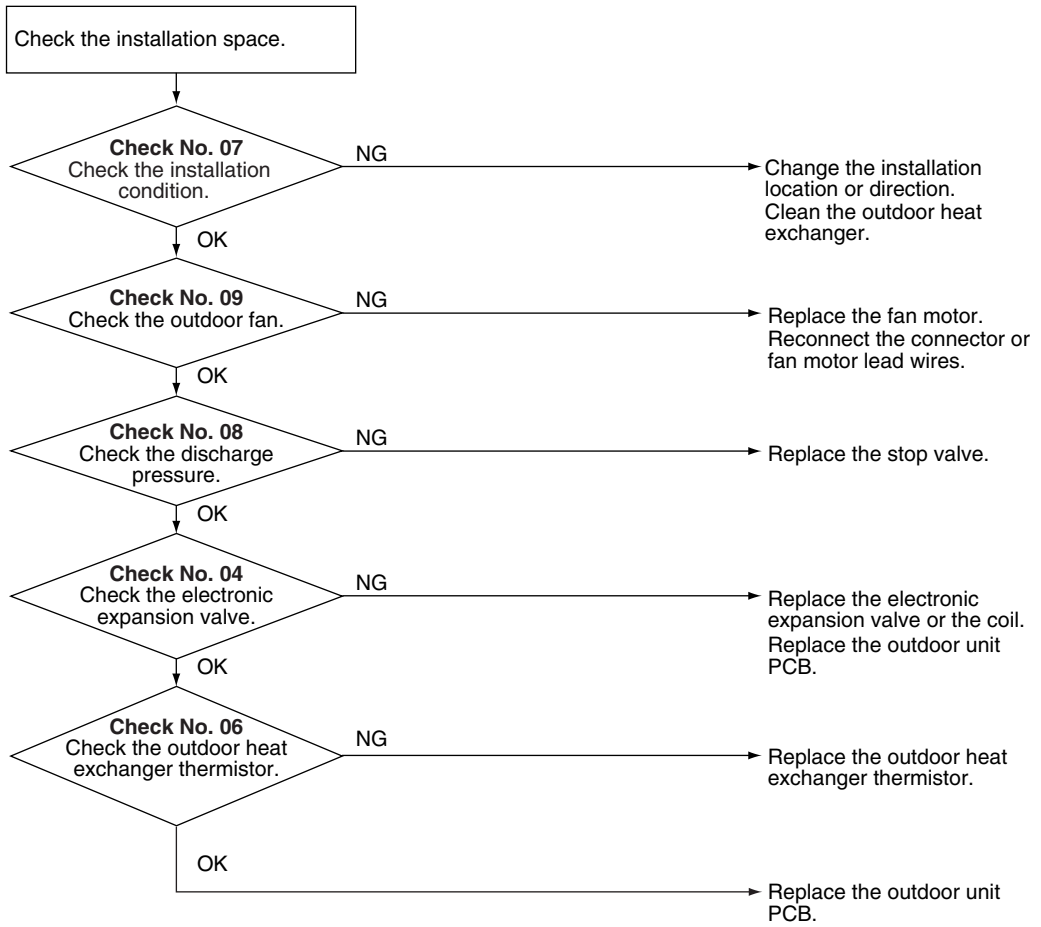
**Check No.08**  
Refer to P.130



**Check No.09**  
Refer to P.131



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



(R11897)

## 4.16 Compressor System Sensor Abnormality

### 4.16.1 25/35 Class

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

- The system checks the DC current before the compressor starts.

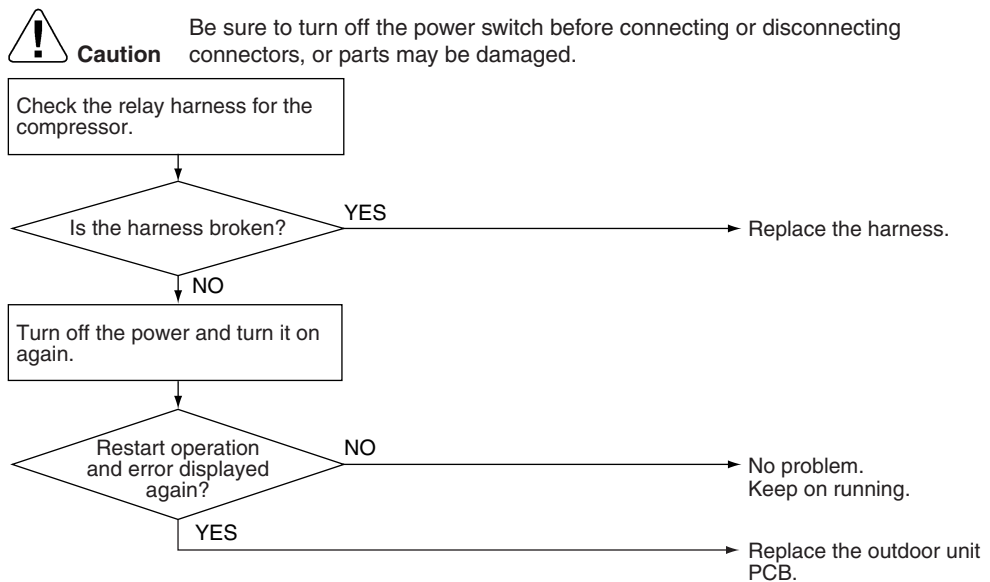
Malfunction  
Decision  
Conditions

- The DC current before compressor start-up is out of the range 0.5 ~ 4.5 V (sensor output converted to voltage value)
- The DC voltage before compressor start-up is below 50 V.

Supposed  
Causes

- Broken or disconnection of harness
- Defective outdoor unit PCB

### Troubleshooting



(R11712)

## 4.16.2 50 Class

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

- The system checks the supply voltage and the DC voltage before the compressor starts.
- The system checks the compressor current right after the compressor starts.

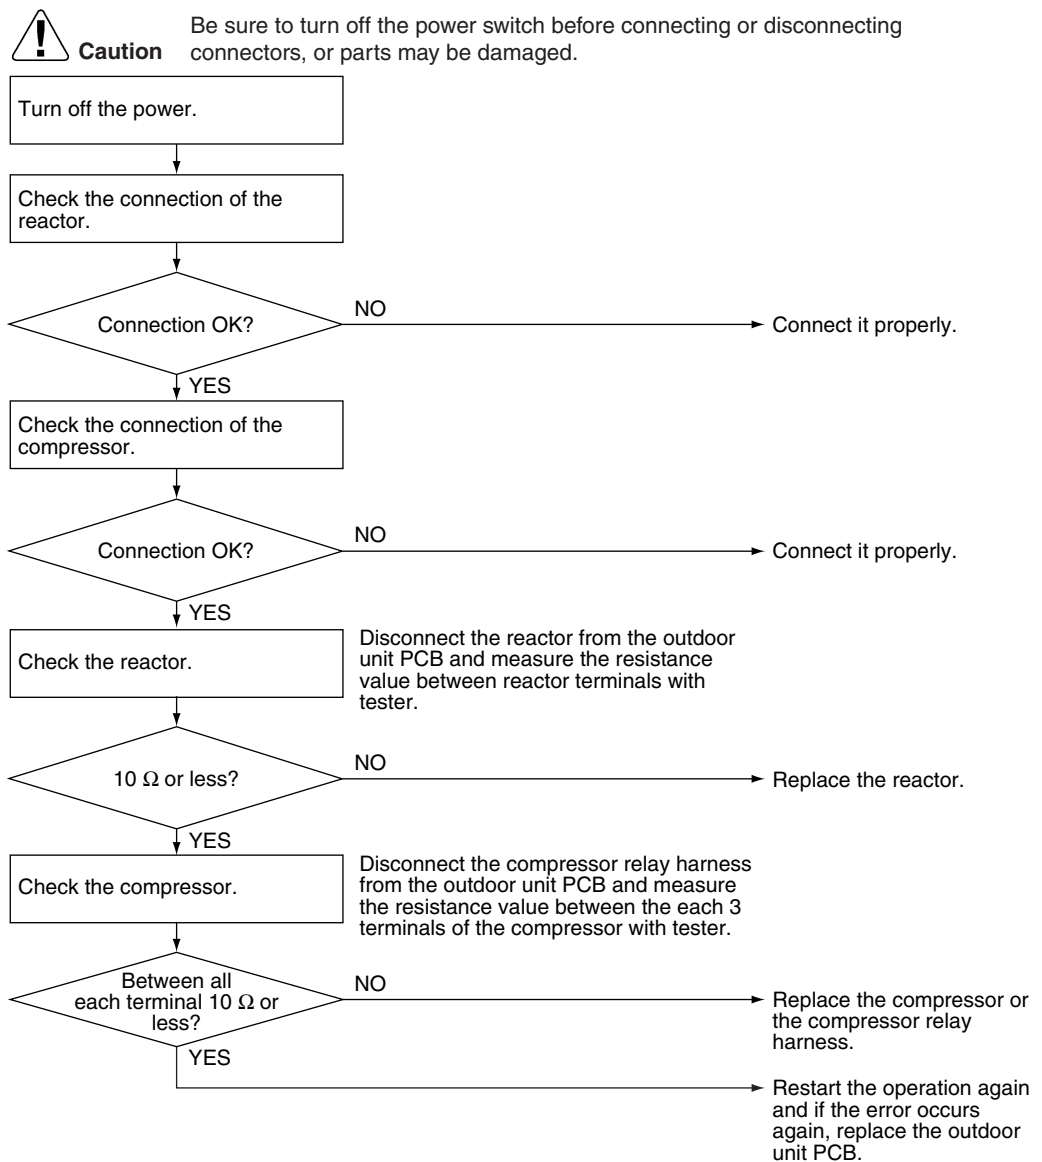
Malfunction  
Decision  
Conditions

- The supply voltage and the DC voltage is obviously low or high.
- The compressor current does not run when the compressor starts.

Supposed  
Causes

- Disconnection of reactor
- Disconnection of compressor harness
- Defective outdoor unit PCB
- Defective compressor

### Troubleshooting



(R7174)

## 4.17 Position Sensor Abnormality

---

**Remote  
Controller  
Display**



**Method of  
Malfunction  
Detection**

A compressor start-up failure is detected by checking the compressor running condition through the position detection circuit.

---

**Malfunction  
Decision  
Conditions**

- If the error repeats, the system is shut down.
  - Reset condition: Continuous run for about 11 minutes (50 class: 5 minutes) without any other error
- 


**Supposed  
Causes**

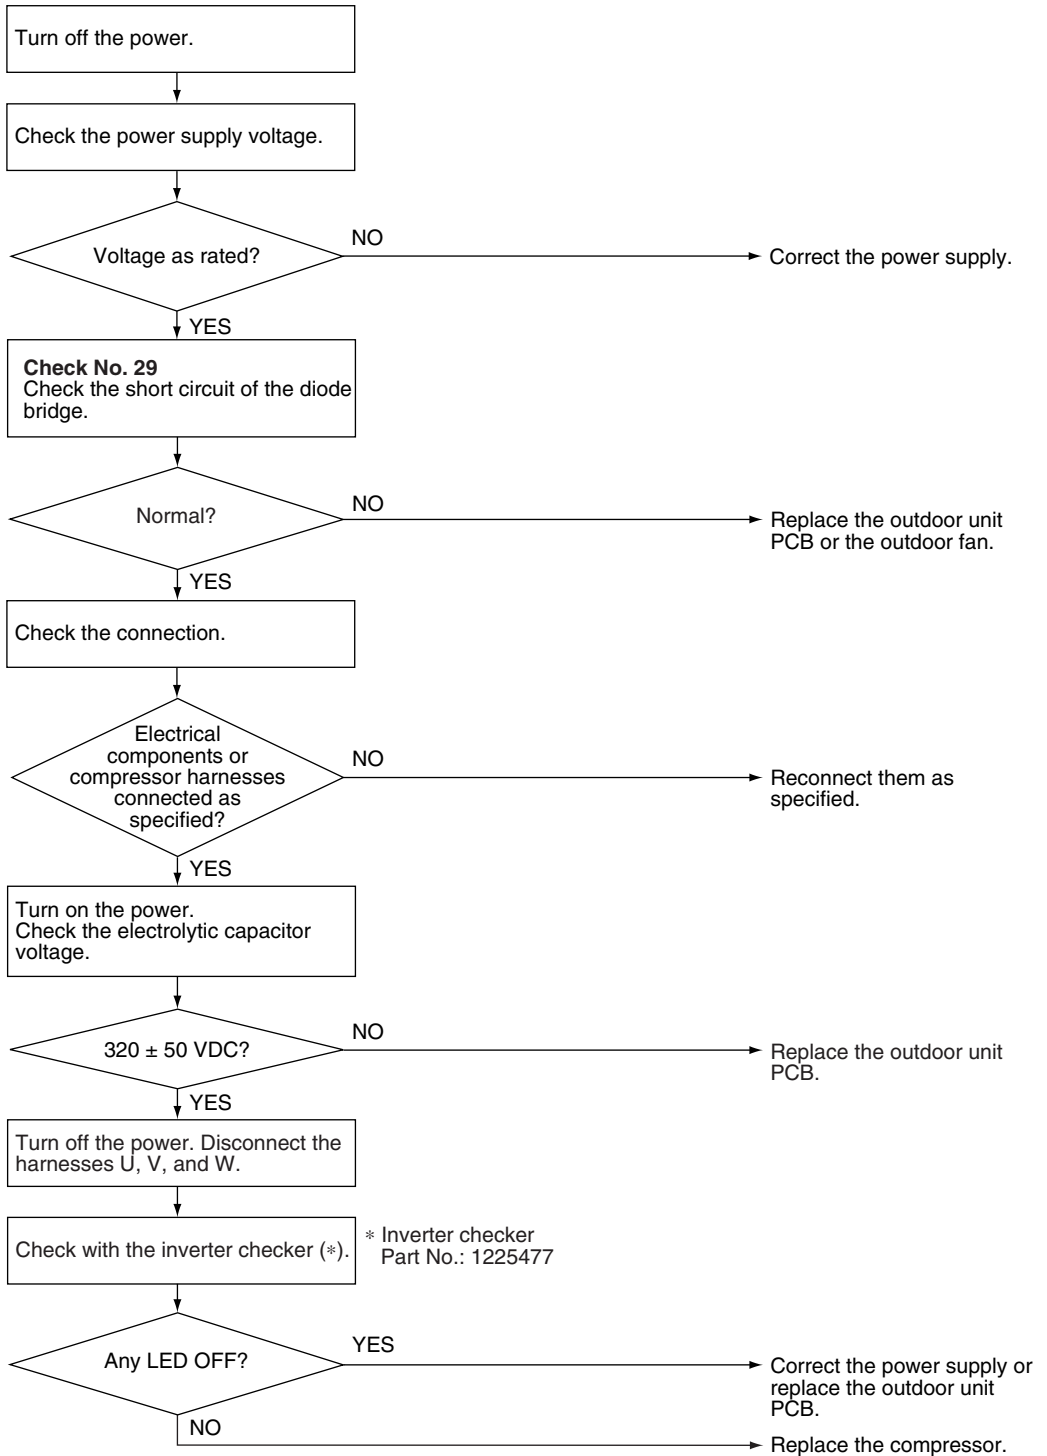
- Disconnection of the compressor relay cable
- Defective compressor
- Defective outdoor unit PCB
- Start-up failure caused by the closed stop valve
- Input voltage is out of specification

Troubleshooting

25/35 class

  
**Check No.29**  
 Refer to P.134

 **Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



\* Inverter checker  
 Part No.: 1225477


(R11380)

Troubleshooting 50 class



**Caution**

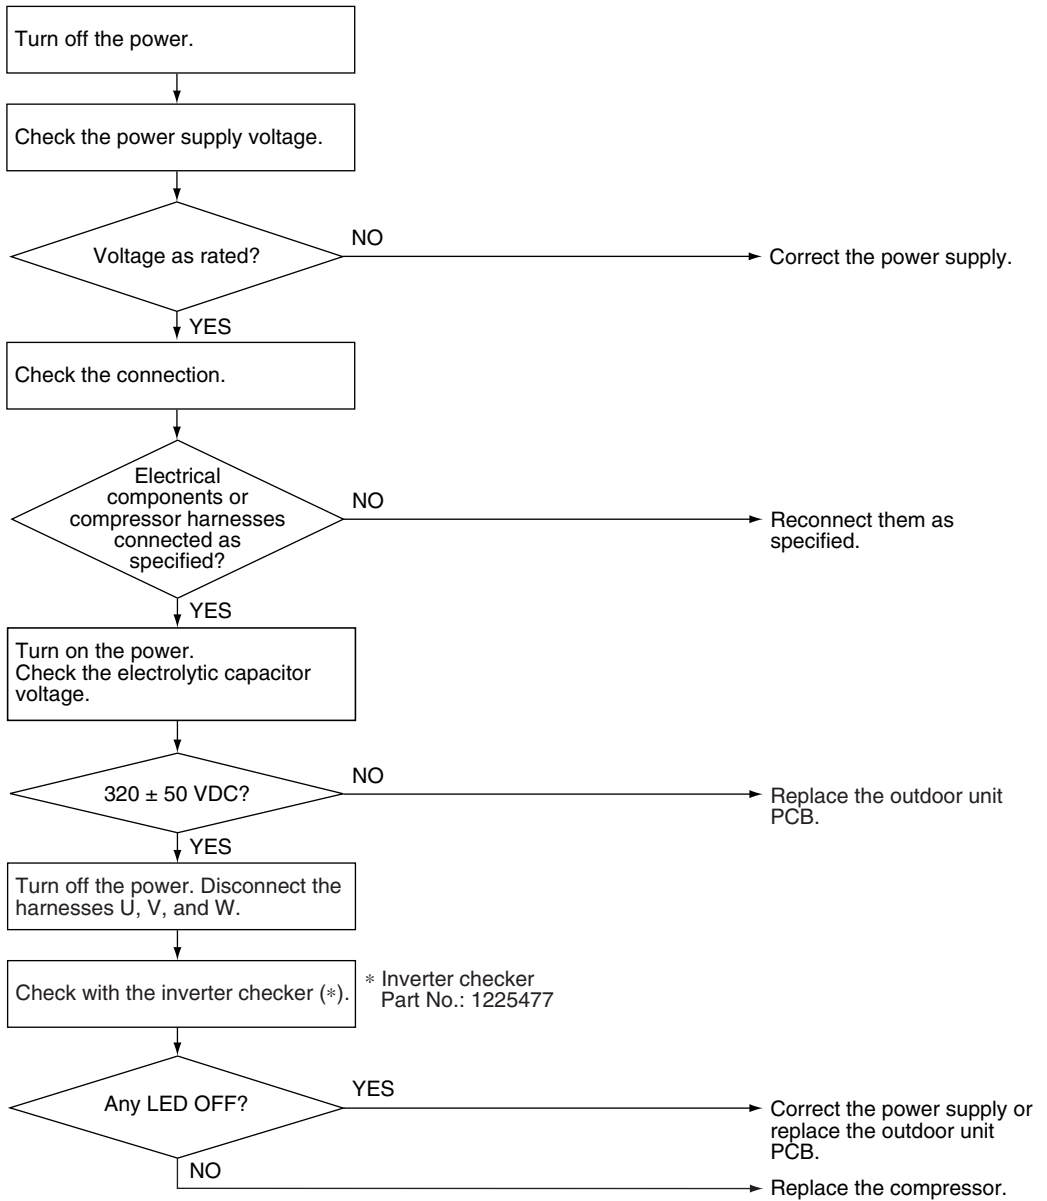Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



\* Inverter checker  
Part No.: 1225477

(R11471)

## 4.18 DC Voltage / Current Sensor Abnormality (25/35 Class)

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

DC voltage or DC current sensor abnormality is identified based on the compressor running frequency and the input current.

Malfunction  
Decision  
Conditions

- The compressor running frequency is above 52 Hz.
- If the error repeats 4 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

Supposed  
Causes

- Defective outdoor unit PCB

Troubleshooting



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

**Replace the outdoor unit PCB.**

## 4.19 CT or Related Abnormality (50 Class)

**Remote  
Controller  
Display**



**Method of  
Malfunction  
Detection**

A CT or related error is detected by checking the compressor running frequency and CT-detected input current.

**Malfunction  
Decision  
Conditions**

- The compressor running frequency is more than 55 Hz, and the CT input current is below 0.5 A.
- If the error repeats 4 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

**Supposed  
Causes**

- Defective power module
- Breakage of wiring or disconnection
- Defective reactor
- Defective outdoor unit PCB



Troubleshooting



**Check No.12**  
Refer to P.132



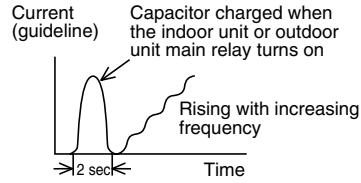
**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again.

Start operation.

\* Running current as shown at right with relay cable 1 or 2?

YES → Replace the outdoor unit PCB.



**Check No. 12**  
Check the capacitor voltage.

320 ± 50 VDC?

YES → Turn off the power. Disconnect the harnesses U, V, and W.

Measure the rectifier input voltage.

Check with the inverter checker (\*).

\* Inverter checker Part No.: 1225477

Any LED OFF?

YES → Correct the power supply or replace the PM1. (Replace the outdoor unit PCB.)

Turn off the power and reconnect the harnesses. Then turn on the power again and restart operation.

Compressor running?

YES → Replace the outdoor unit PCB.

NO → Replace the compressor.

Voltage within the allowable range (Supply voltage ± 15%)?

YES → Replace the outdoor unit PCB.

NO → Check the supply voltage.

(R11134)

## 4.20 Thermistor or Related Abnormality (Outdoor Unit)

Remote  
Controller  
Display

*H3, U3, U5, P4*

Method of  
Malfunction  
Detection

This fault is identified based on the thermistor input voltage to the microcomputer.  
A thermistor fault is identified based on the temperature sensed by each thermistor.

Malfunction  
Decision  
Conditions

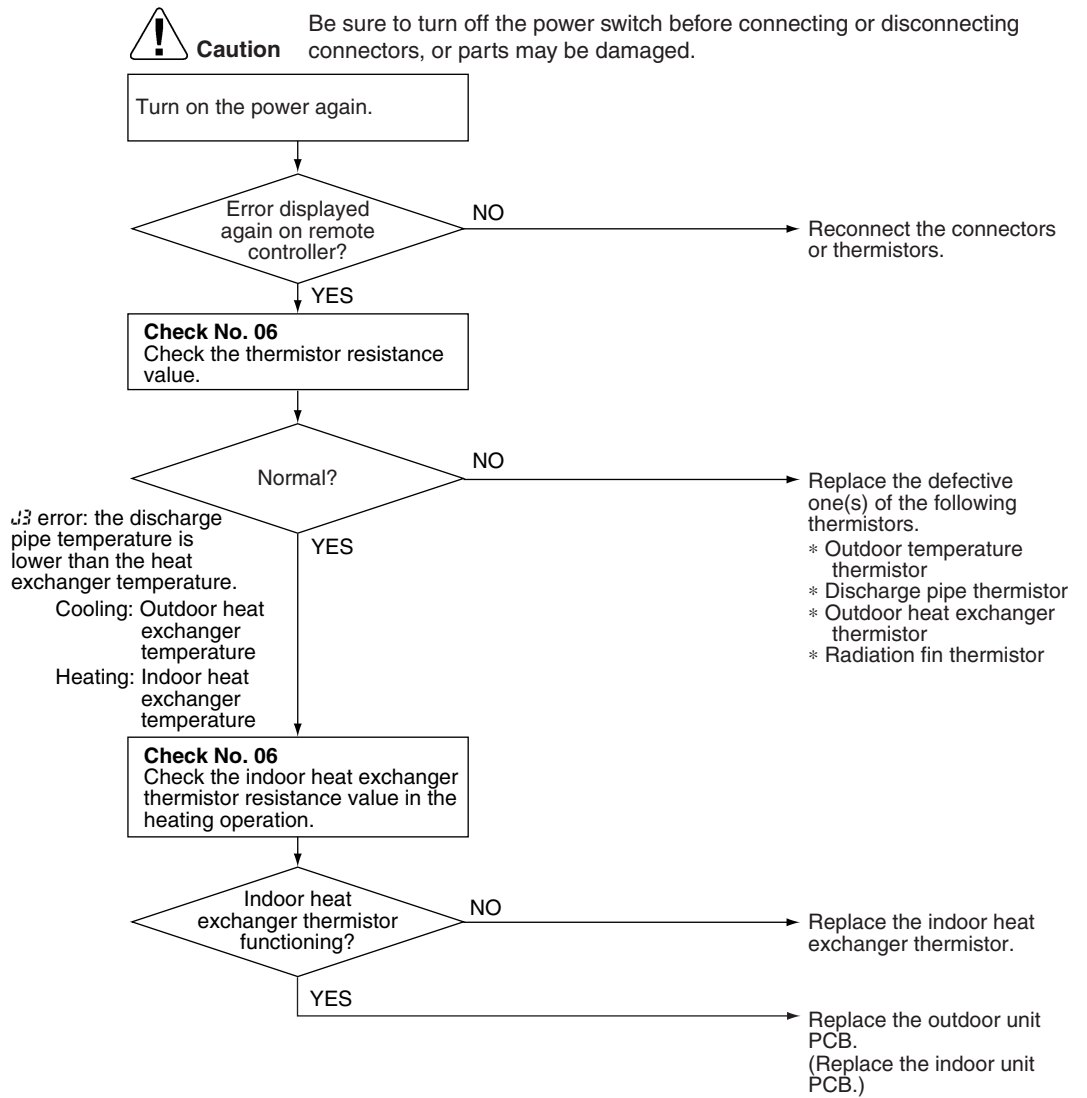
- The thermistor input voltage is above 4.96 V or below 0.04 V with the power on.
- *U3* error is judged if the discharge pipe temperature is lower than the heat exchanger temperature.

Supposed  
Causes

- Disconnection of the connector for the thermistor
- Defective thermistor
- Defective heat exchanger thermistor in the case of *U3* error (outdoor heat exchanger thermistor in cooling operation, or indoor heat exchanger thermistor in heating operation)
- Defective outdoor unit PCB
- Defective indoor unit PCB

Troubleshooting


  
**Check No.06**  
 Refer to P.129



(R11926)

- W3 : Outdoor temperature thermistor
- J3 : Discharge pipe thermistor
- J5 : Outdoor heat exchanger thermistor
- P4 : Radiation fin thermistor

 **Note:** In case of “P4” for RK(X)S25/35G2V1B, RK(X)S25/35G2V1B9, RK(X)S50F2V1B, RK(X)S50G2V1B models

 **Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

**Replace the outdoor unit PCB.**

P4 : Radiation fin thermistor

## 4.21 Electrical Box Temperature Rise

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

An electrical box temperature rise is detected by checking the radiation fin thermistor with the compressor off.

Malfunction  
Decision  
Conditions

- With the compressor off, the radiation fin temperature is above  $A^{\circ}\text{C}$ .
- The error is cleared when the radiation fin temperature drops below  $B^{\circ}\text{C}$ .
- To cool the electrical components, the outdoor fan starts when the radiation fin temperature rises above  $C^{\circ}\text{C}$  and stops when it drops below  $B^{\circ}\text{C}$ .

	A (°C)	B (°C)	C (°C)
RK(X)S25/35F2V1B, RK(X)S25/35G2V1B	80	70	80
RK(X)S25/35G2V1B9	98	75	83
RK(X)S50F2V1B, RK(X)S50G2V1B	95	80	85

Supposed  
Causes

- Defective outdoor fan motor
- Short circuit
- Defective radiation fin thermistor
- Disconnection of connector
- Defective outdoor unit PCB


Troubleshooting

RK(X)S25/35F2V1B models


 **Check No.06**  
Refer to P.129

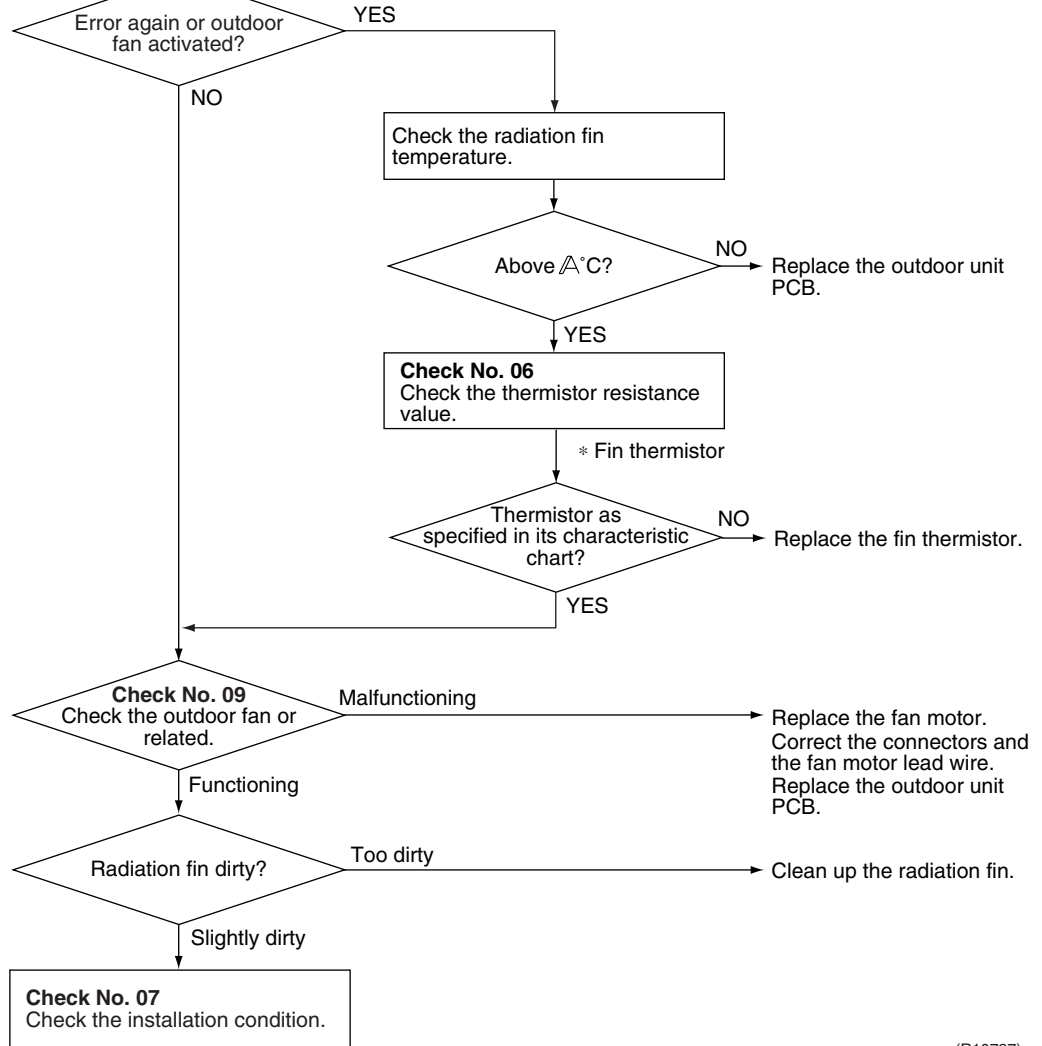
 **Check No.07**  
Refer to P.130

 **Check No.09**  
Refer to P.131

 **Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again.

 **WARNING**  
To cool the electrical components, the outdoor fan starts when the radiation fin temperature rises above C°C and stops when it drops below B°C.



(R10727)

	A (°C)	B (°C)	C (°C)
RK(X)S25/35F2V1B	80	70	80

Troubleshooting

RK(X)S25/35G2V1B, RK(X)S25/35G2V1B9, RK(X)S50F2V1B, RK(X)S50G2V1B models

 **Check No.07**  
Refer to P.130

 **Check No.09**  
Refer to P.131



**Caution**

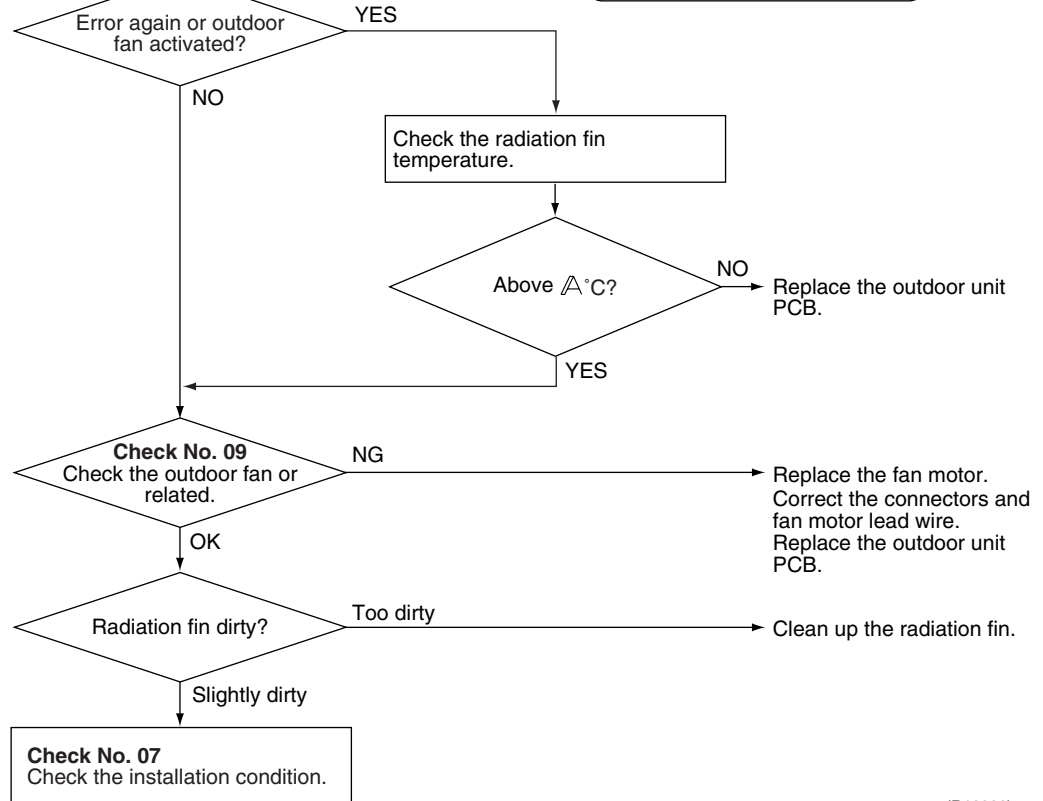
Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again.



**WARNING**

To cool the electrical components, the outdoor fan starts when the radiation fin temperature rises above  $\text{C}^{\circ}\text{C}$  and stops when it drops below  $\text{B}^{\circ}\text{C}$ .



(R12000)

	A (°C)	B (°C)	C (°C)
RK(X)S25/35G2V1B	80	70	80
RK(X)S25/35G2V1B9	98	75	83
RK(X)S50F2V1B, RK(X)S50G2V1B	95	80	85

## 4.22 Radiation Fin Temperature Rise

Remote  
Controller  
Display

L4

Method of  
Malfunction  
Detection

A radiation fin temperature rise is detected by checking the radiation fin thermistor with the compressor on.

Malfunction  
Decision  
Conditions

- If the radiation fin temperature with the compressor on is above  $\Delta$  °C.
- The error is cleared when the radiation fin temperature drops below  $\text{B}$  °C.
- If the error repeats, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

	$\Delta$ (°C)	$\text{B}$ (°C)
RK(X)S25/35F2V1B, RK(X)S25/35G2V1B	90	85
RK(X)S25/35G2V1B9	98	78
RK(X)S50F2V1B, RK(X)S50G2V1B	105	99

Supposed  
Causes

- Defective outdoor fan motor
- Short circuit
- Defective radiation fin thermistor
- Disconnection of connector
- Defective outdoor unit PCB
- Silicon grease is not applied properly on the radiation fin after replacing the outdoor unit PCB.

Troubleshooting

RK(X)S25/35F2V1B models

 **Check No.06**  
Refer to P.129

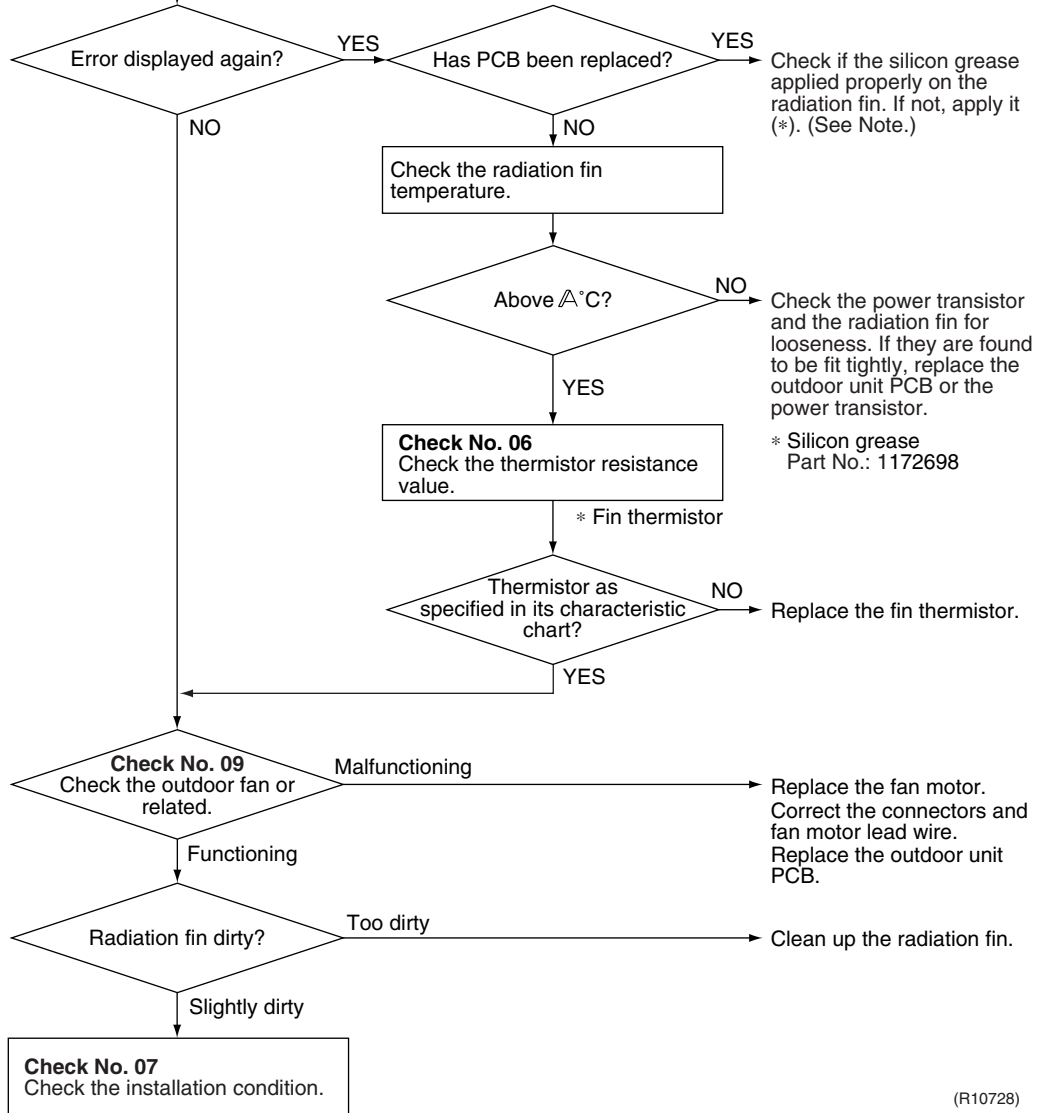
 **Check No.07**  
Refer to P.130

 **Check No.09**  
Refer to P.131



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again to start the system.



(R10728)

	Δ (°C)
RK(X)S25/35F2V1B	90



**Note:** Refer to “Application of silicon grease to a power transistor and a diode bridge” on page 262 for detail.



Troubleshooting

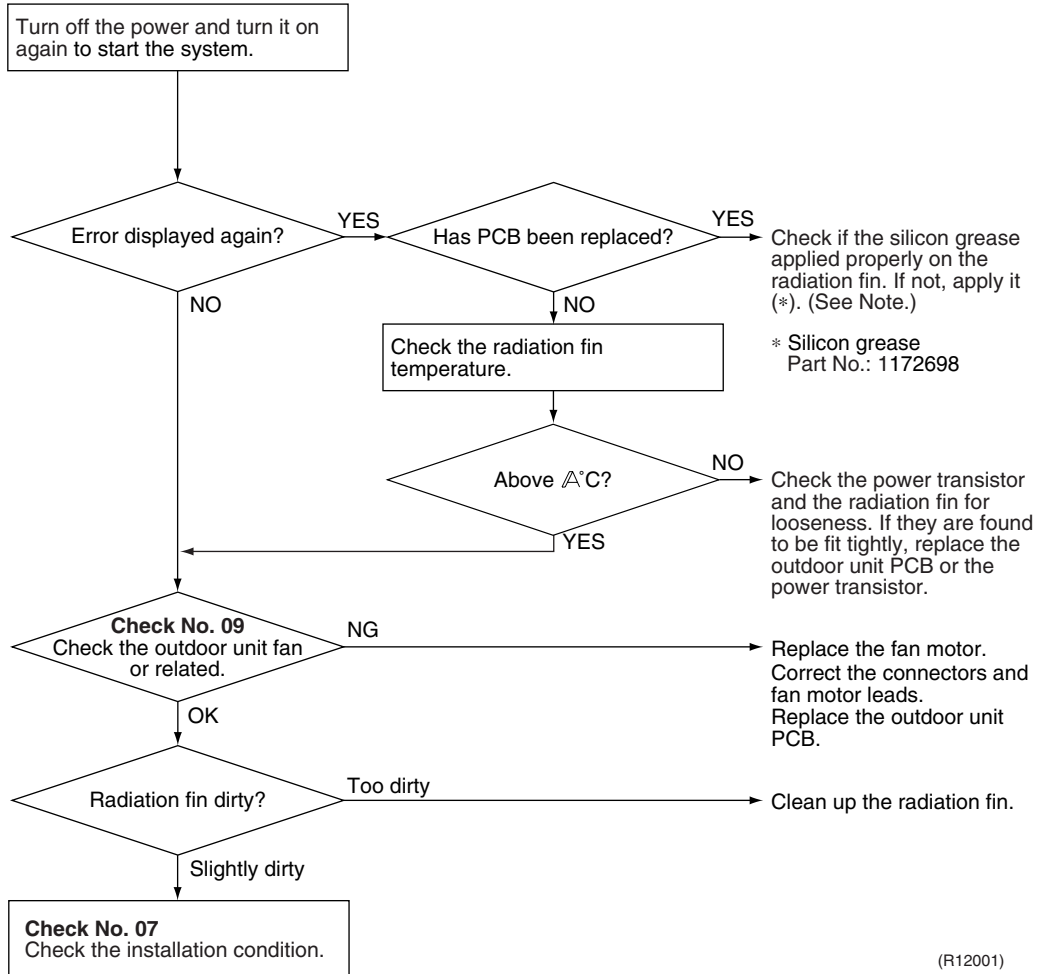
RK(X)S25/35G2V1B, RK(X)S25/35G2V1B9, RK(X)S50F2V1B, RK(X)S50G2V1B models

 **Check No.07**  
Refer to P.130

 **Check No.09**  
Refer to P.131



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



(R12001)

	Δ (°C)
RK(X)S20-35G2V1B	90
RK(X)S20-35G2V1B9	98
RK(X)S50F2V1B, RK(X)S50G2V1B	105



**Note:** Refer to “Application of silicon grease to a power transistor and a diode bridge” on page 262 for detail.

## 4.23 Output Overcurrent Detection

---

Remote  
Controller  
Display

LS

---

Method of  
Malfunction  
Detection

An output overcurrent is detected by checking the current that flows in the inverter DC section.

---

Malfunction  
Decision  
Conditions

- A position signal error occurs while the compressor is running.
  - A speed error occurs while the compressor is running.
  - An output overcurrent signal is fed from the output overcurrent detection circuit to the microcomputer.
  - If the error repeats, the system is shut down.
  - Reset condition: Continuous run for about 11 minutes (50 class: 5 minutes) without any other error
- 

Supposed  
Causes

- Poor installation condition
- Closed stop valve
- Defective power module
- Wrong internal wiring
- Abnormal supply voltage
- Defective outdoor unit PCB
- Defective compressor

Troubleshooting



**Check No.07**  
Refer to P.130



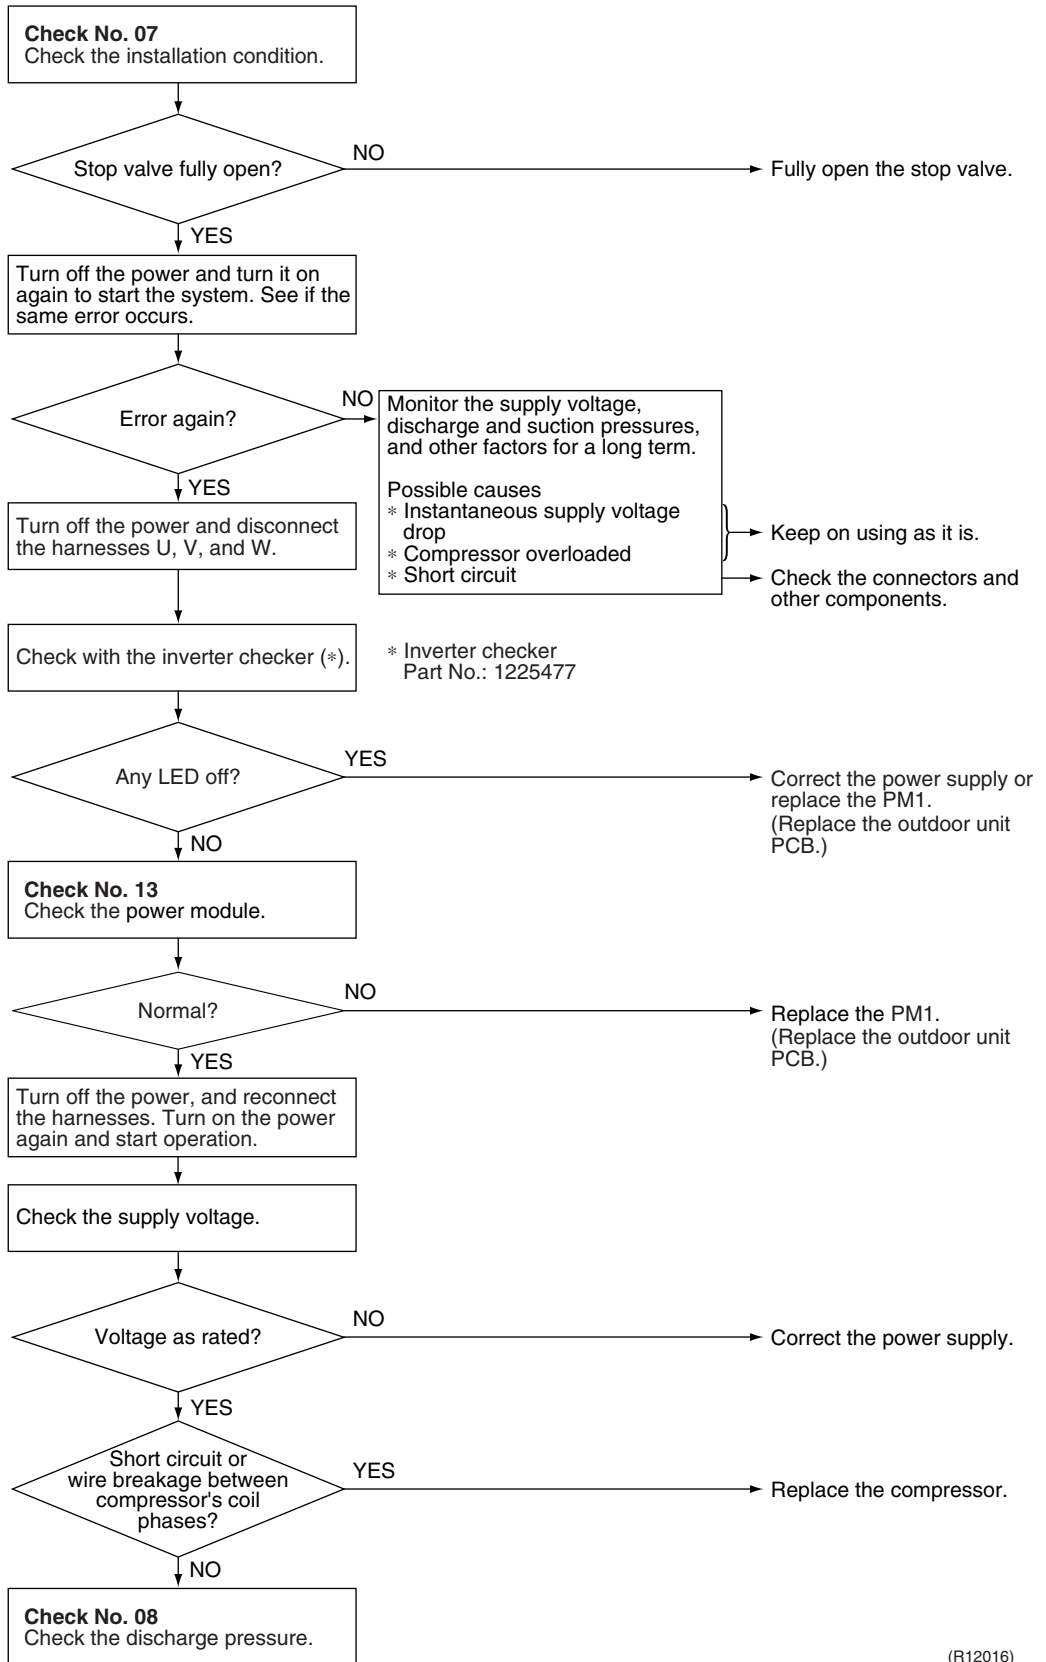
**Check No.08**  
Refer to P.130



**Check No.13**  
Refer to P.132

**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

\* An output overcurrent signal may result from wrong internal wiring. If the wires have been disconnected and reconnected and the system is interrupted by an output overcurrent, take the following procedure.



(R12016)

## 4.24 Refrigerant Shortage

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

**Refrigerant shortage detection I:**

Refrigerant shortage is detected by checking the input current value and the compressor running frequency. If the refrigerant is short, the input current is smaller than the normal value.

**Refrigerant shortage detection II:**

Refrigerant shortage is detected by checking the discharge pipe temperature and the opening of the electronic expansion valve. If the refrigerant is short, the discharge pipe temperature tends to rise.

**Refrigerant shortage detection III:**

Refrigerant shortage is detected by checking the difference between suction and discharge temperature.

Malfunction  
Decision  
Conditions

**Refrigerant shortage detection I:**

The following conditions continue for 7 minutes.

**<25/35 class>**

- ◆ Input current × input voltage ≤ A × output frequency + B
- ◆ Output frequency > C

A (-)	B (W)	C (Hz)
640/256	0	55

**<50 class>**

- ◆ Input current ≤ D × output frequency + E
- ◆ Output frequency > F

D (-)	E (A)	F (Hz)
18/1000	0.7	55

**Refrigerant shortage detection II :**

The following conditions continue for 80 seconds.

- ◆ Opening of the electronic expansion valve ≥ G
- ◆ Discharge pipe temperature > H × target discharge pipe temperature + J

	G (pulse)	H (-)	J (°C)
RK(X)S25/35F2V1B	480	255/256	30
RK(X)S25/35G2V1B RK(X)S25/35G2V1B9	480	128/128	30
RK(X)S50F2V1B RK(X)S50G2V1B	480	128/128	Cooling: 20 Heating: 45

**Refrigerant shortage detection III : (25/35 class only)**

When the difference of the temperature is smaller than  $\text{K} \text{ } ^\circ\text{C}$ , it is regarded as refrigerant shortage.

		K (°C)
Cooling	room thermistor temperature – indoor heat exchanger temperature	4.0
	outdoor heat exchanger temperature – outdoor temperature	4.0
Heating	indoor heat exchanger temperature – room thermistor temperature	3.0
	outdoor temperature – outdoor heat exchanger temperature	3.0

- If the error repeats 4 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

**Supposed Causes**

- Disconnection of the discharge pipe thermistor, indoor or outdoor heat exchanger thermistor, room or outdoor temperature thermistor
- Closed stop valve
- Refrigerant shortage (refrigerant leakage)
- Poor compression performance of compressor
- Defective electronic expansion valve

Troubleshooting



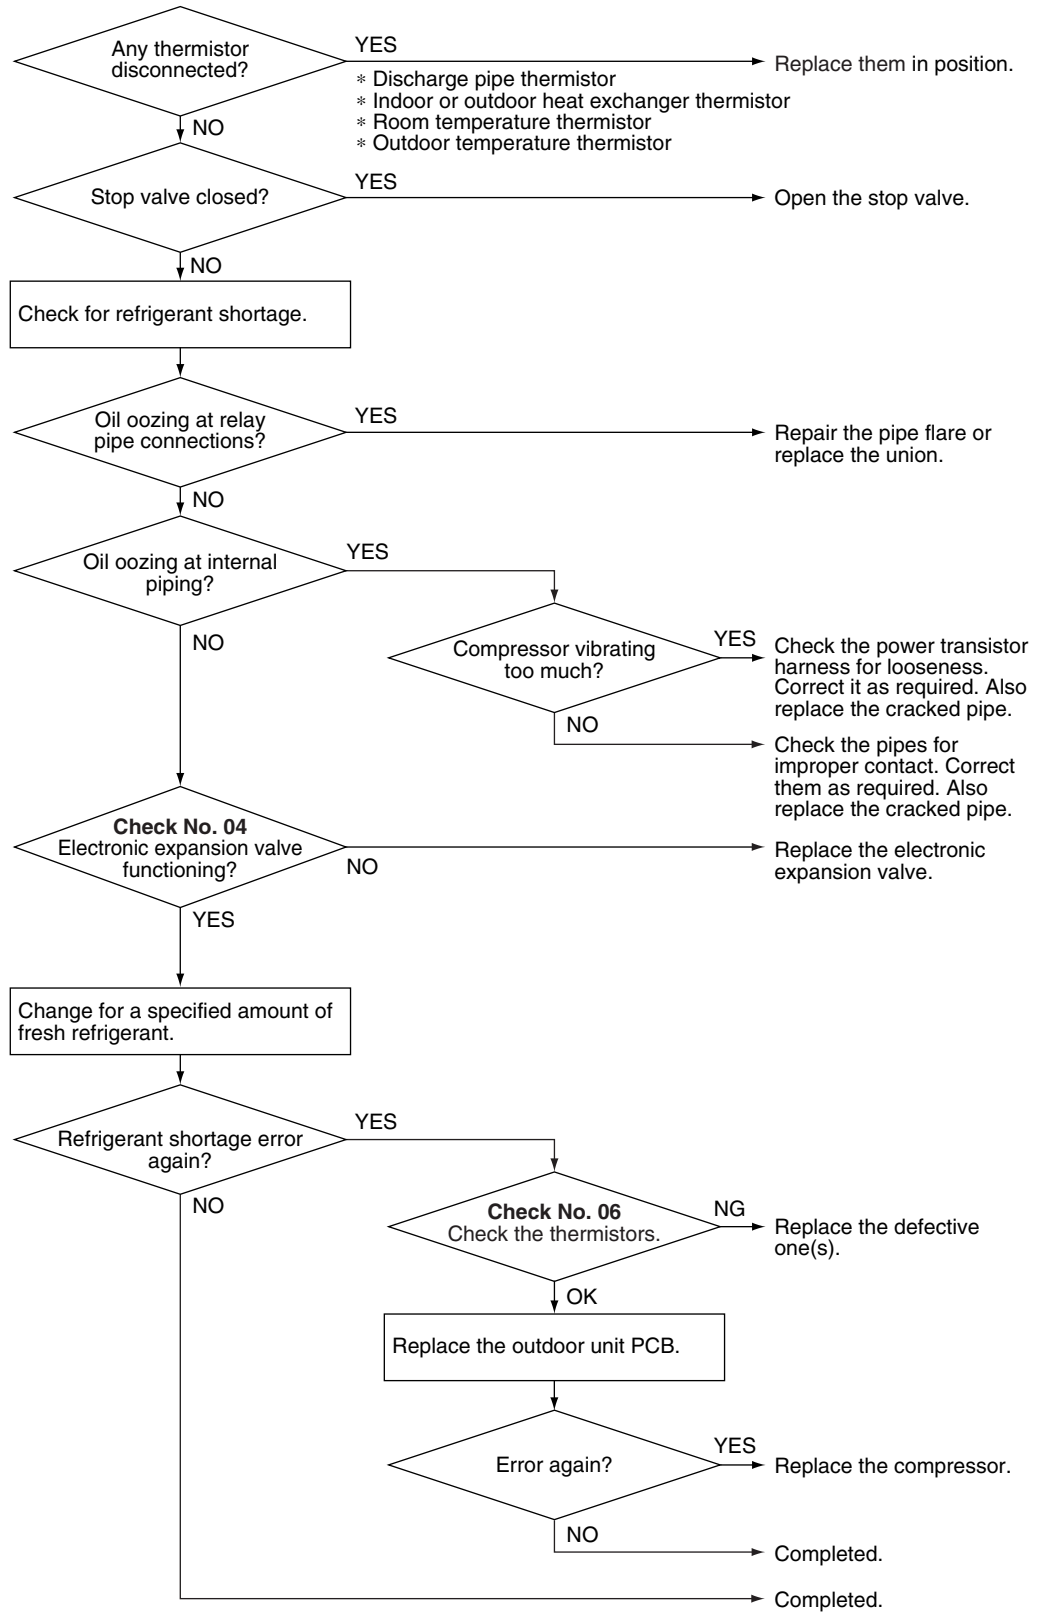
Check No.04  
Refer to P.127



Check No.06  
Refer to P.129



**Caution** Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.



(R12015)

## 4.25 Low-voltage Detection or Over-voltage Detection

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

**Low-voltage detection:**

An abnormal voltage drop is detected by the DC voltage detection circuit.

**Over-voltage detection:**

An abnormal voltage rise is detected by the over-voltage detection circuit.

Malfunction  
Decision  
Conditions

**Low-voltage detection:**

- The voltage detected by the DC voltage detection circuit is below 150 ~ 180 V (depending on the model).

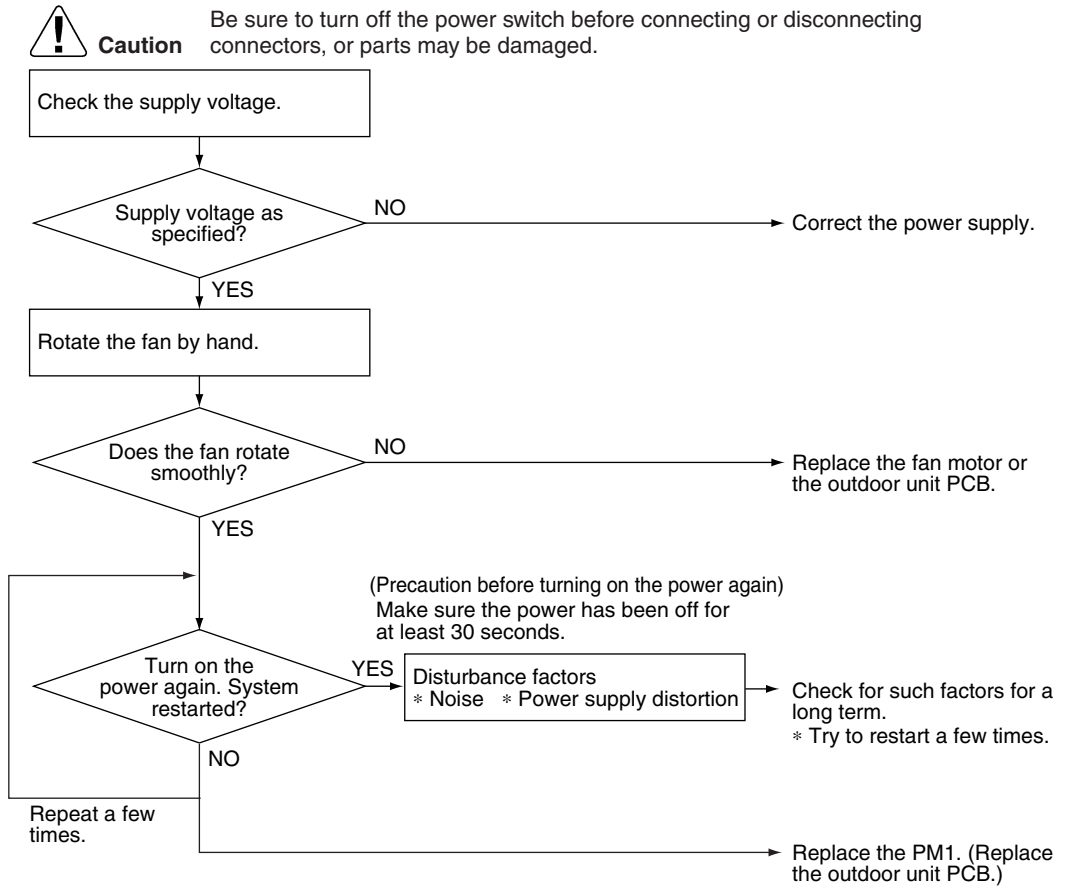
**Over-voltage detection:**

- An over-voltage signal is fed from the over-voltage detection circuit to the microcomputer. (The voltage is over 400 V.)
- If the error repeats, the system is shut down.
- Reset condition: Continuous run for about 11 minutes (50 class: 5 minutes) without any other error

Supposed  
Causes

- Supply voltage is not as specified.
- Defective DC voltage detection circuit
- Defective over-voltage detection circuit
- Defective PAM control part
- Layer short inside the fan motor winding

Troubleshooting



(R8402)



## 4.26 Signal Transmission Error on Outdoor Unit PCB (50 Class Only)

Remote  
Controller  
Display



Method of  
Malfunction  
Detection

Communication error between microcomputer mounted on the main microcomputer and PM1.

Malfunction  
Decision  
Conditions

- The abnormality is determined when the data sent from the PM1 can not be received for 9 seconds.
- The error counter is reset when the data from the PM1 can be successfully received.

Supposed  
Causes

- Defective outdoor unit PCB

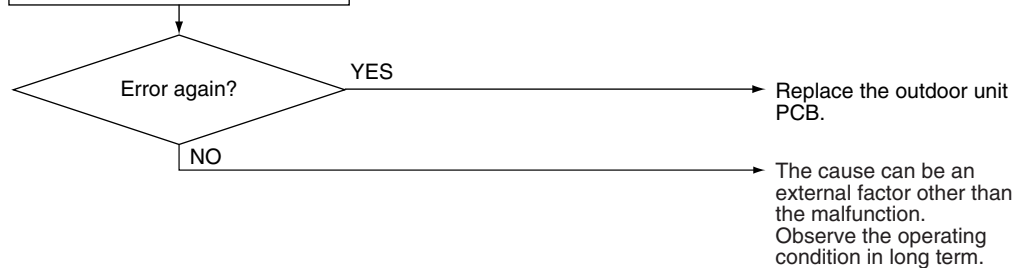
Troubleshooting



**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again.



(R7185)


# 5. Check
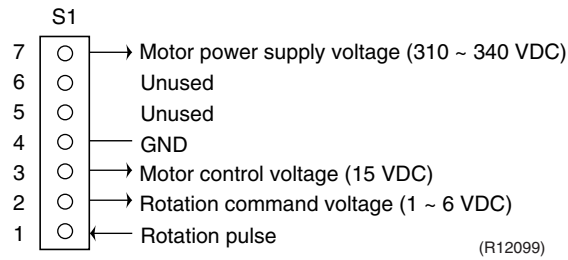
## 5.1 How to Check

### 5.1.1 Fan Motor Connector Output Check

**Check No.01**

1. Check the connection of connector.
2. Check the motor power supply voltage output (pins 4 - 7).
3. Check the motor control voltage (pins 4 - 3).
4. Check the rotation command voltage (pins 4 - 2).
5. Check the rotation pulse (pins 4 - 1).




### 5.1.2 Electronic Expansion Valve Check

**Check No.04**

Conduct the followings to check the electronic expansion valve (EV).

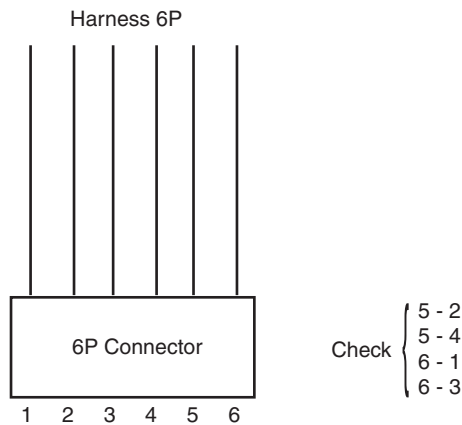1. Check to see if the EV connector is correctly connected to the PCB.
2. Turn the power off and on again, and check to see if the EV generate latching sound.
3. If the EV does not generate latching sound in the above step 2, disconnect the connector and check the continuity using a tester.
4. Check the continuity between the pins 1 - 6 and 3 - 6, and between the pins 2 - 5 and 4 - 5. If there is no continuity between the pins, the EV coil is faulty.




5. If the continuity is confirmed in the above step 3, the outdoor unit PCB is faulty.



**Note:** Please note that the latching sound varies depending on the valve type.


### 5.1.3 Four Way Valve Performance Check
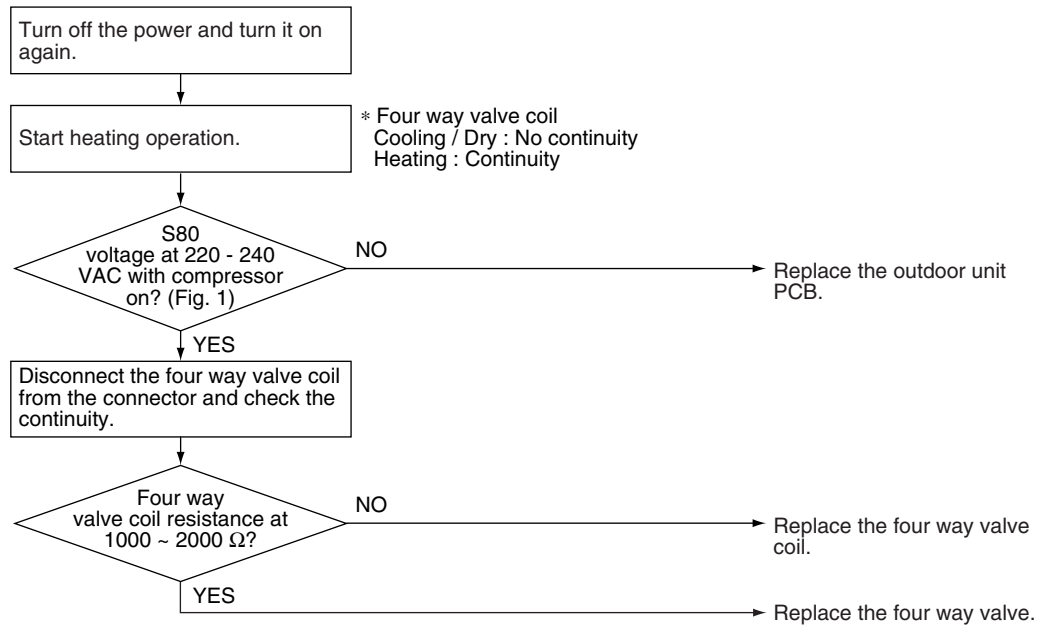
#### Check No.05



(R11903)

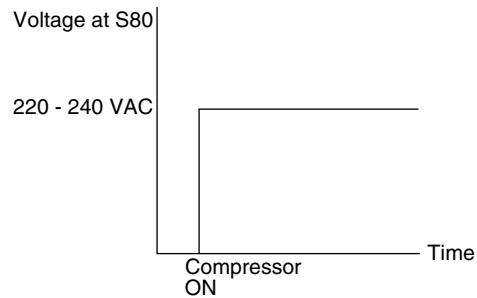(Fig. 1)



(R11904)

### 5.1.4 Thermistor Resistance Check

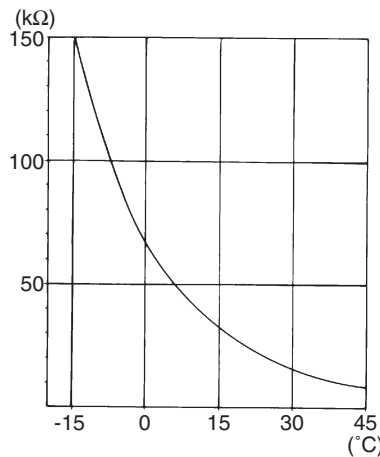
**Check No.06**

Disconnect the connectors of the thermistors from the PCB, and measure the resistance of each thermistor using tester.


The relationship between normal temperature and resistance is shown in the table and the graph below.

Thermistor temperature (°C)	Resistance (kΩ)
-20	211.0
-15	150.0
-10	116.5
-5	88.0
0	67.2
5	51.9
10	40.0
15	31.8
20	25.0
25	20.0
30	16.0
35	13.0
40	10.6
45	8.7
50	7.2

(R25°C = 20 kΩ, B = 3950 K)




(R11905)

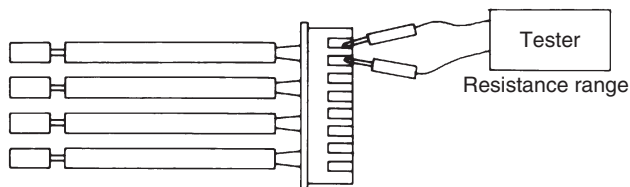

(R11906)

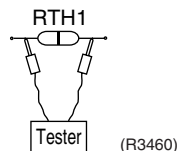
- For the models in which the thermistor is directly mounted on the PCB, disconnect the connector for the PCB and measure.



(R3460)


## 5.1.5 Installation Condition Check
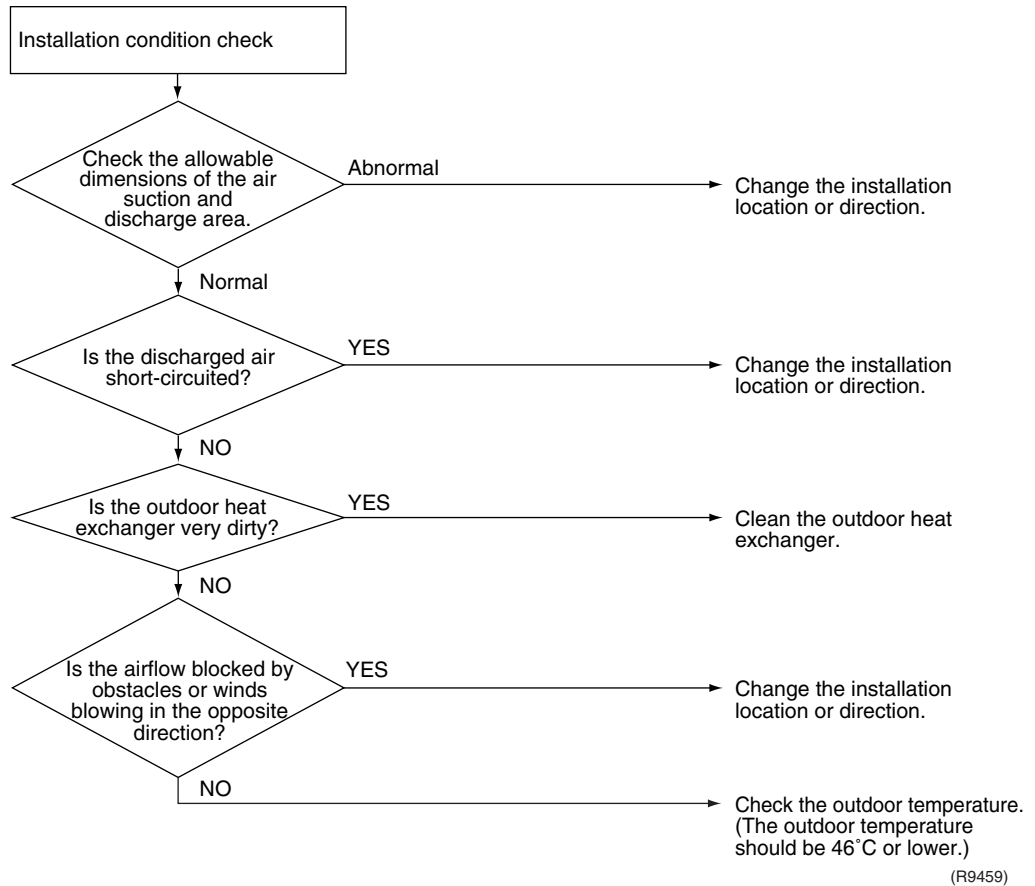
### Check No.07



## 5.1.6 Discharge Pressure Check

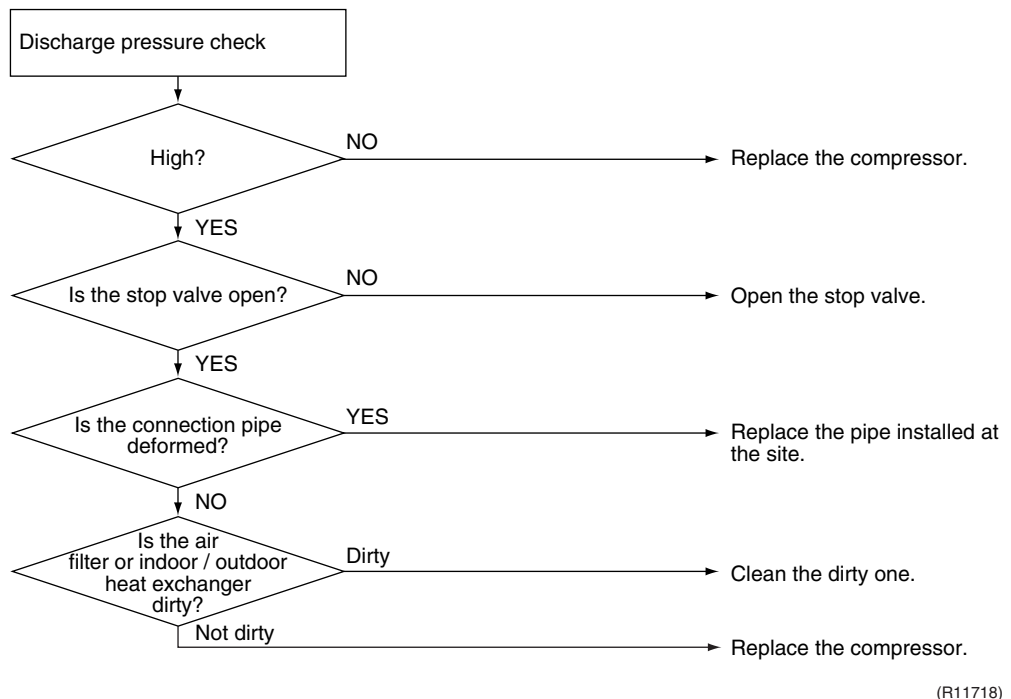
### Check No.08



### 5.1.7 Outdoor Fan System Check

Check No.09

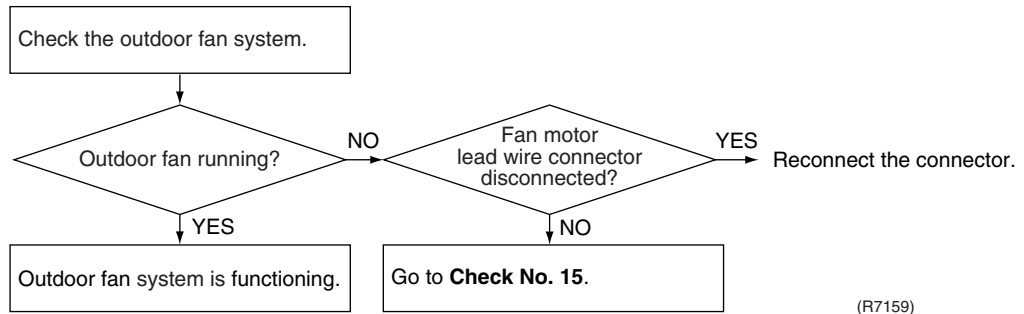DC motor



(R7159)


### 5.1.8 Power Supply Waveforms Check

Check No.10

Measure the power supply waveform between No. 1 and No. 2 on the terminal board, and check the waveform disturbance.


- Check to see if the power supply waveform is a sine wave. (Fig.1)
- Check to see if there is waveform disturbance near the zero cross. (sections circled in Fig.2)

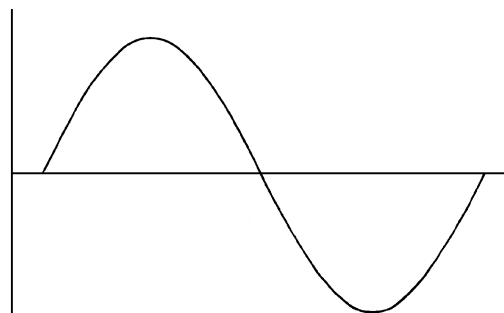Fig.1



(R1736)

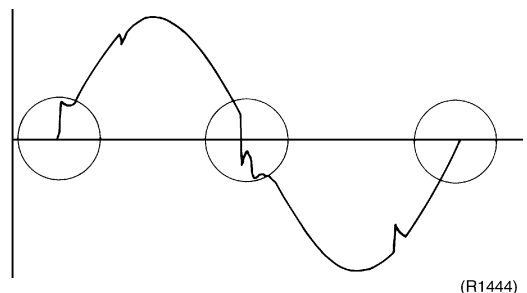
Fig.2



(R1444)

### 5.1.9 Inverter Units Refrigerant System Check

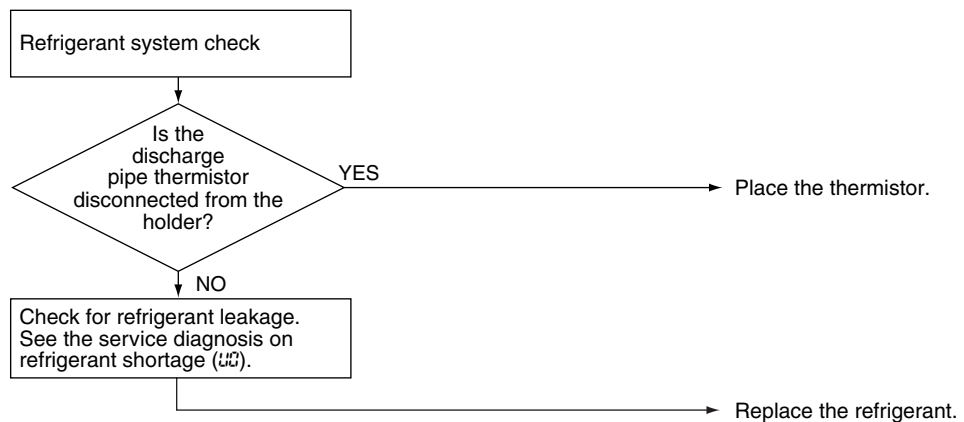Check No.11




(R8259)

## 5.1.10 Capacitor Voltage Check
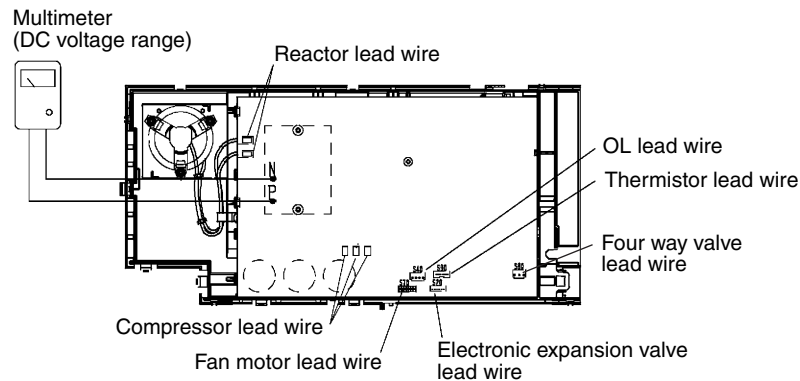
### Check No.12

Before this check, be sure to check the main circuit for short circuit.

With the circuit breaker still on, measure the voltage according to the drawing of the model in question. Be careful never to touch any live parts.



(R5222)

## 5.1.11 Power Module Check

### Check No.13



**Note:** Check to make sure that the voltage between (+) and (-) of the diode bridge (DB1) is approx. 0 V before checking.

- Disconnect the compressor harness connector from the outdoor unit PCB. To disengage the connector, press the protrusion on the connector.
- Follow the procedure below to measure resistance between the terminals of the DB1 and the terminals of the compressor with a multi-tester. Evaluate the measurement results for a judgment.

Negative (-) terminal of tester (positive terminal (+) for digital tester)	DB1 (+)	UVW	DB1 (-)	UVW
Positive (+) terminal of tester (negative terminal (-) for digital tester)	UVW	DB1 (+)	UVW	DB1 (-)
Resistance in OK	several k $\Omega$ ~ several M $\Omega$			
Resistance in NG	0 $\Omega$ or $\infty$			

### 5.1.12 Rotation Pulse Check on the Outdoor Unit PCB

**Check No.15**

**RK(X)S25/35/50F2V1B, RK(X)S25/35/50G2V1B**

Make sure that the voltage of  $320 \pm 30$  V is applied.

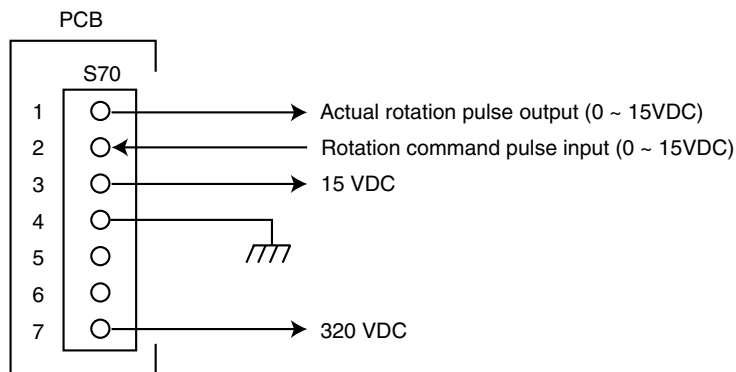
1. Set operation off and power off. Disconnect the connector S70.
2. Check that the voltage between the pins 4 - 7 is 320 VDC.
3. Check that the control voltage between the pins 3 - 4 is 15 VDC.
4. Check that the rotation command voltage between the pins 2 - 4 is 0 ~ 15 VDC.
5. Keep operation off and power off. Connect the connector S70.
6. Check whether 2 pulses (0 ~ 15 VDC) are output at the pins 1 - 4 when the fan motor is rotated 1 turn by hand.

When the fuse is melted, check the outdoor fan motor for proper function.

If NG in step 2 → Defective PCB → Replace the outdoor unit PCB.

If NG in step 4 → Defective Hall IC → Replace the outdoor fan motor.


If OK in both steps 2 and 4 → Replace the outdoor unit PCB.



(R10811)

**RK(X)S25/35G2V1B9**

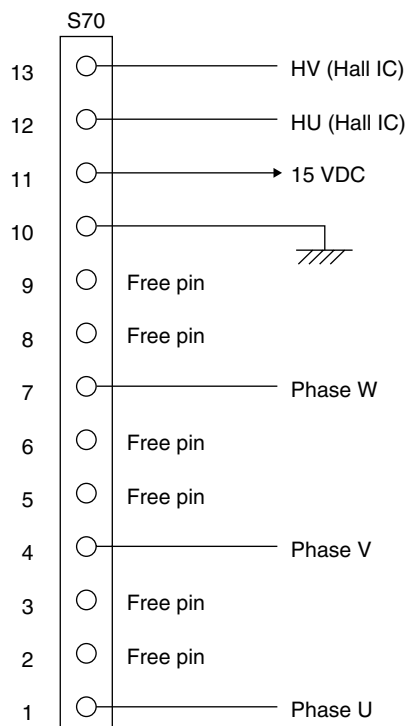1. Check that the voltage between the pins 10 - 11 is 15 VDC.
2. Check if the Hall IC generates the rotation pulse (0 ~ 15 VDC) 4 times between the pins 10 - 12, 10 - 13, when the fan motor is manually rotated once.



(R11907)



### 5.1.13 Main Circuit Short Check

Check No.29

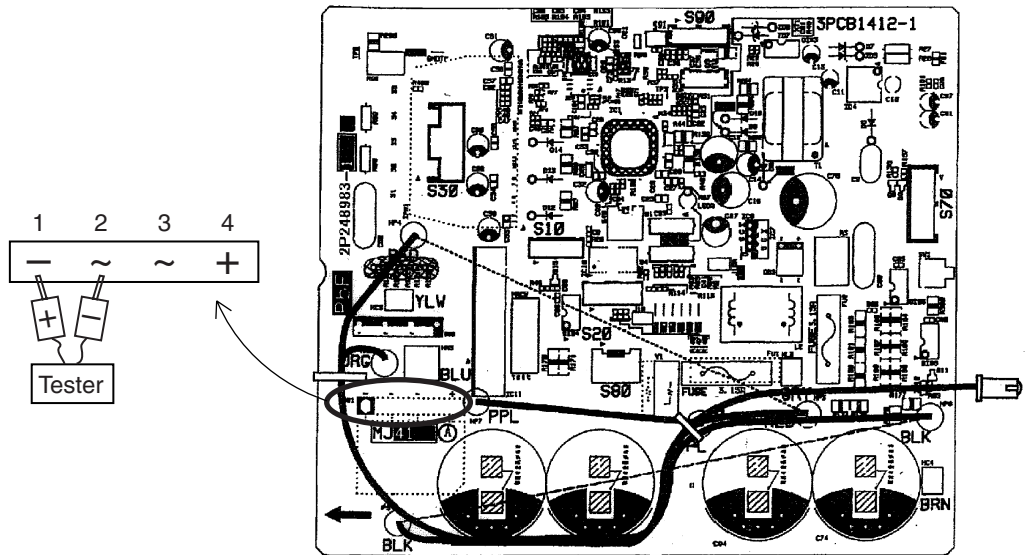


**Note:** Check to make sure that the voltage between (+) and (-) of the diode bridge (DB1) is approx. 0 V before checking.

- Measure the resistance between the pins of the DB1 as below.
- If the resistance is  $\infty$  or less than 1 k $\Omega$ , short circuit occurs on the main circuit.


(-) terminal of the tester (in case of digital, (+) terminal)	~ (2, 3)	+ (4)	~ (2, 3)	- (1)
(+) terminal of the tester (in case of digital, (-) terminal)	+ (4)	~ (2, 3)	- (1)	~ (2, 3)
Resistance in OK	several k $\Omega$ ~ several M $\Omega$	$\infty$	$\infty$	several k $\Omega$ ~ several M $\Omega$
Resistance in NG	0 $\Omega$ or $\infty$	0	0	0 $\Omega$ or $\infty$

**RK(X)S25/35F2V1B models**




(R12412)

**RK(X)S25/35G2V1B models**

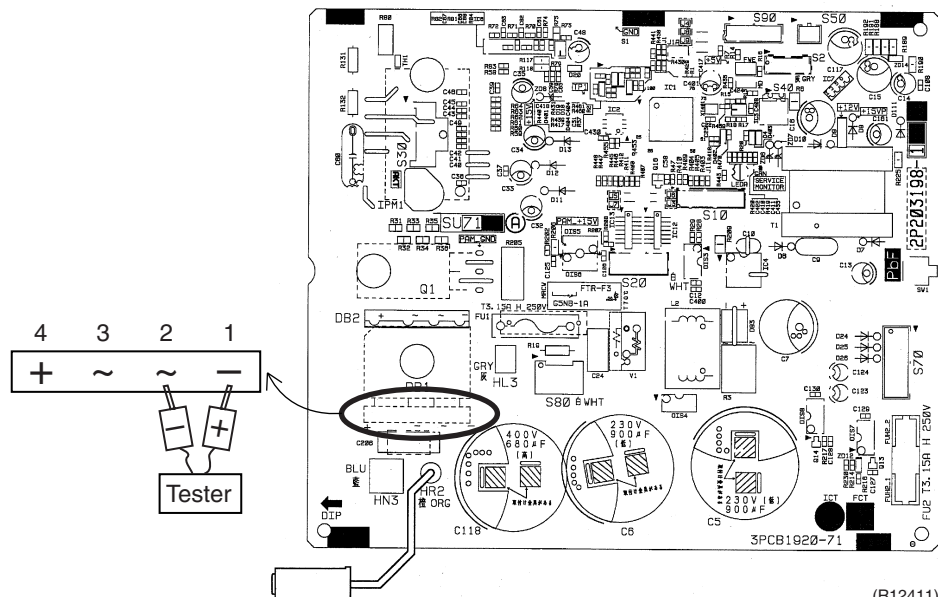

(R12411)

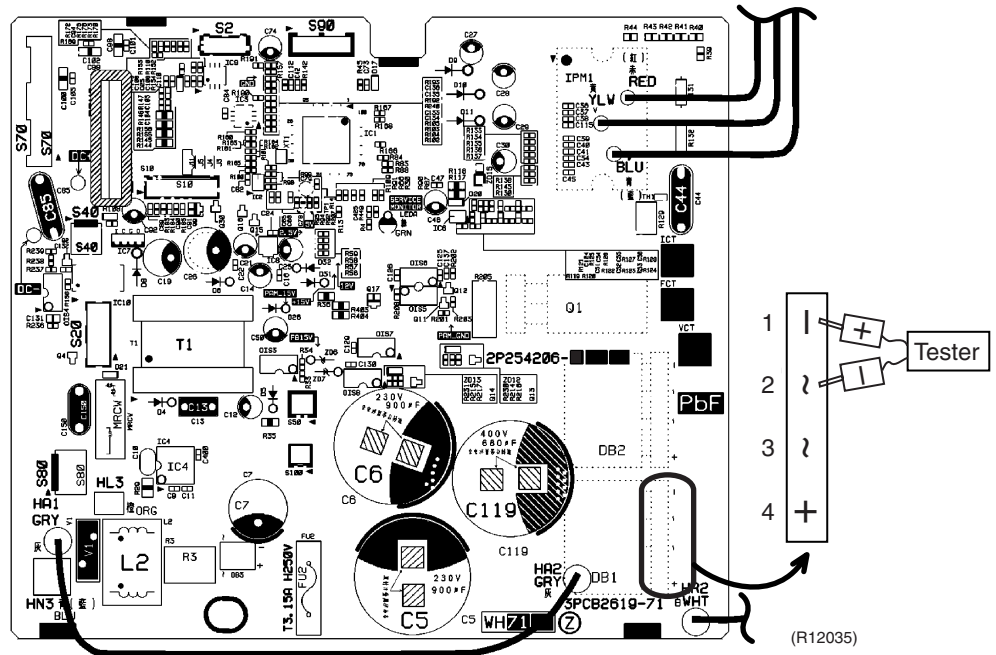RK(X)S25/35G2V1B9 models



# Part 7

## Removal Procedure

1. Indoor Unit.....	137
1.1 Removal of Air Filter / Front Panel / Front Grille .....	137
1.2 Removal of Horizontal Blade .....	141
1.3 Removal of Electrical Box .....	142
1.4 Removal of PCB.....	144
1.5 Removal of Vertical Blades .....	148
1.6 Removal of Heat Exchanger .....	151
1.7 Removal of Fan Rotor / Fan Motor .....	152
2. Outdoor Unit - RK(X)S25/35F2V1B .....	154
2.1 Removal of Outer Panels / Fan Motor.....	154
2.2 Removal of Electrical Box .....	163
2.3 Removal of PCB.....	167
2.4 Removal of Reactor / Partition Plate .....	169
2.5 Removal of Sound Blanket.....	171
2.6 Removal of Four Way Valve.....	172
2.7 Removal of Compressor.....	175
3. Outdoor Unit - RK(X)S25/35G2V1B.....	177
3.1 Removal of Outer Panels / Fan Motor.....	177
3.2 Removal of Electrical Box .....	186
3.3 Removal of Thermistors .....	190
3.4 Removal of PCB.....	192
3.5 Removal of Reactor / Partition Plate .....	195
3.6 Removal of Sound Blanket.....	197
3.7 Removal of Four Way Valve.....	198
3.8 Removal of Compressor.....	201
4. Outdoor Unit - RK(X)S25/35G2V1B9.....	203
4.1 Removal of Outer Panels / Fan Motor.....	203
4.2 Removal of Electrical Box .....	212
4.3 Removal of PCB.....	215
4.4 Removal of Reactor / Partition Plate .....	223
4.5 Removal of Sound Blanket.....	225
4.6 Removal of Four Way Valve.....	227
4.7 Removal of Compressor.....	230
5. Outdoor Unit - RK(X)S50F2V1B, RK(X)S50G2V1B.....	232
5.1 Removal of Outer Panels .....	232
5.2 Removal of Outdoor Fan / Fan Motor.....	236
5.3 Removal of Electrical Box .....	240
5.4 Removal of PCB.....	245
5.5 Removal of Sound Blanket / Thermistors.....	248
5.6 Removal of Four Way Valve.....	250
5.7 Removal of Electronic Expansion Valve.....	251
5.8 Removal of Compressor.....	252

# 1. Indoor Unit

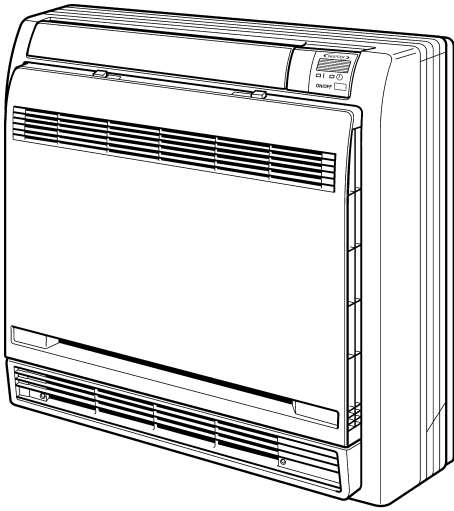
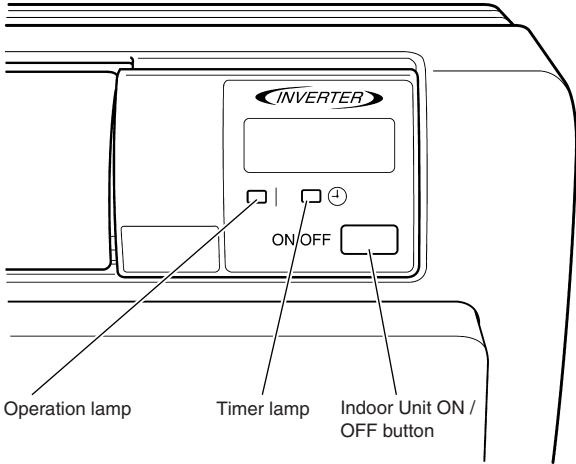
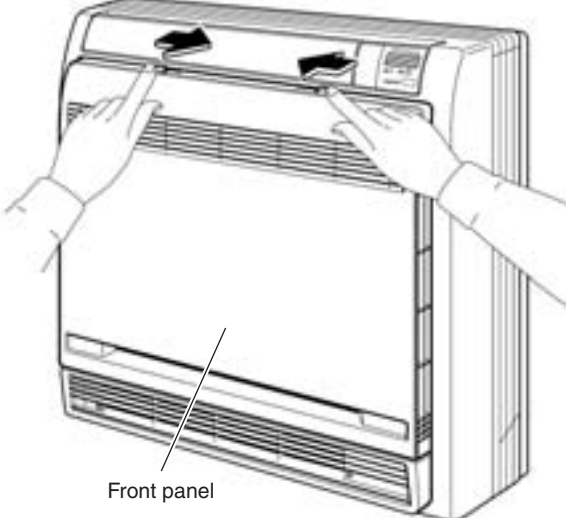
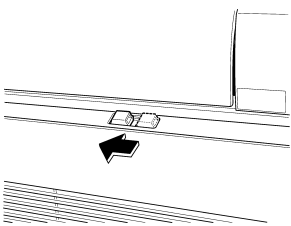
## 1.1 Removal of Air Filter / Front Panel / Front Grille




**Procedure**







**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. External appearance	 <p>(R6765)</p>  <p>(R6766)</p>	
2. Remove the front panel.	<p>1 Unfasten the 2 hooks on the top of the front panel.</p>  <p>(R6767)</p>	 <p>(R6768)</p> <ul style="list-style-type: none"> <li>Slide the right and the left hooks to the center.</li> </ul>

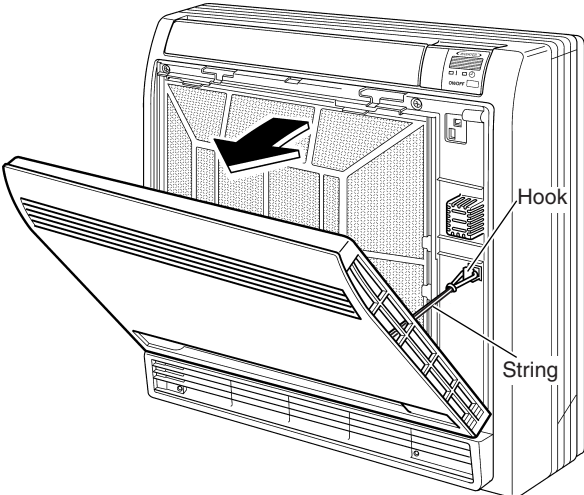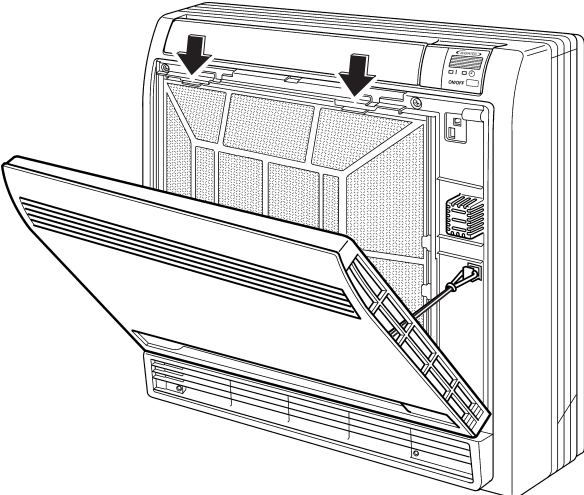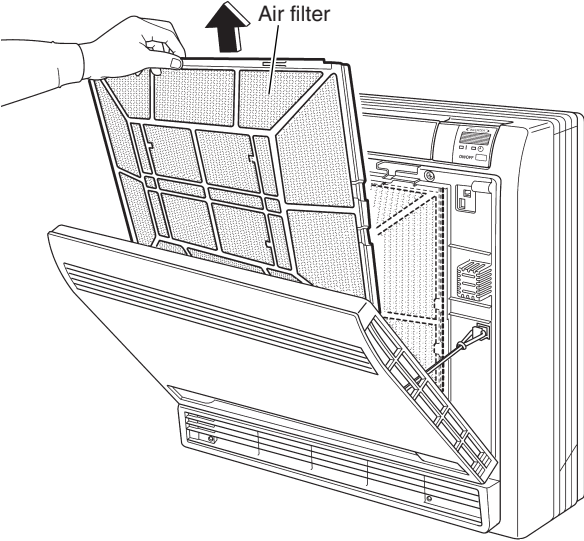Step		Procedure	Points
2	Open the front panel.	 <p>(R11496)</p>	
3	Press the 2 hooks of the top of the air filter downward to unfasten the hooks.	 <p>(R11497)</p>	
4	Pull the air filter up and remove it.	 <p>(R11498)</p>	

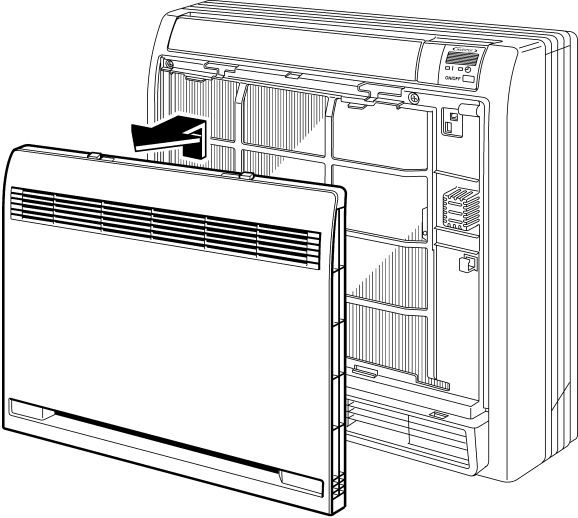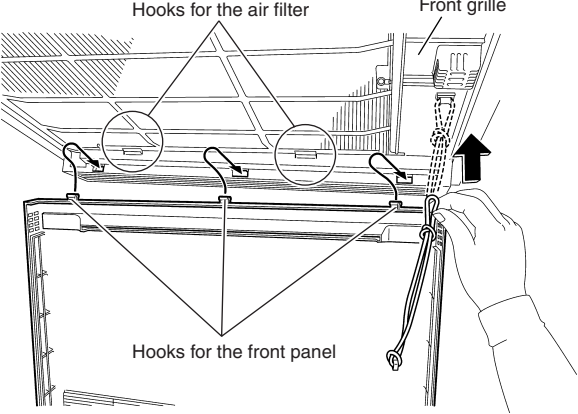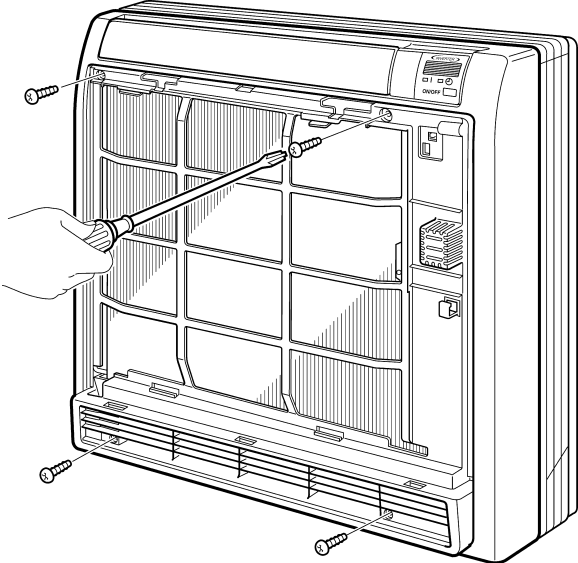Step	Procedure	Procedure	Points
5	<p>Release the string from the hook.</p> <p>Lift up the front panel to unfasten the 3 hooks at the bottom and then remove the front panel.</p>	 <p>(R6772)</p>	
6	<p>When installing the air filter, catch the 2 hooks at the bottom.</p> <p>When installing the front panel, catch the 3 hooks of the front grille and hook the string to prevent the front panel from dropping.</p>	 <p>(R6773)</p>	
7	<p>Remove the 4 screws from the front grille.</p>	 <p>(R6774)</p>	



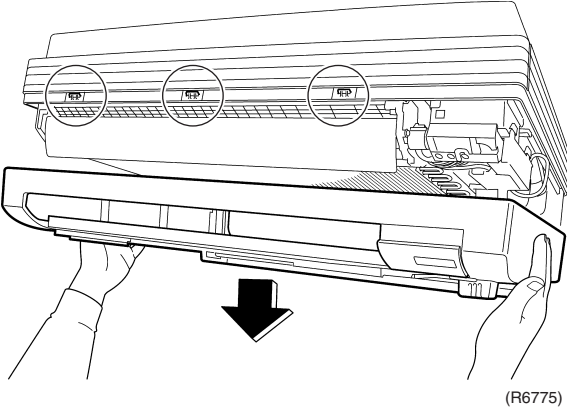
Step	Procedure	Points
8	Pull the front grille to your side to remove.	■ There are 3 hooks on the top of the main unit.
 <p>(R6775)</p>		

# 1.2 Removal of Horizontal Blade

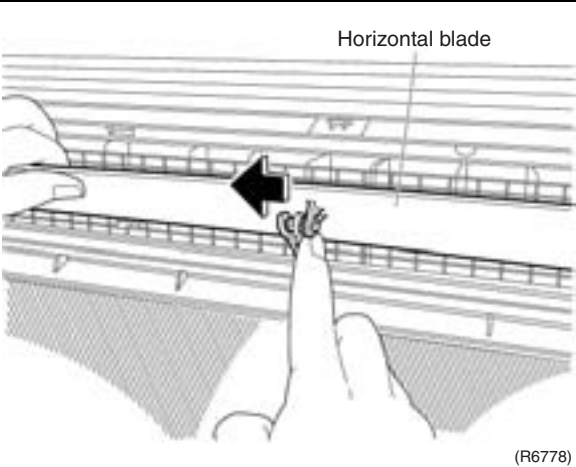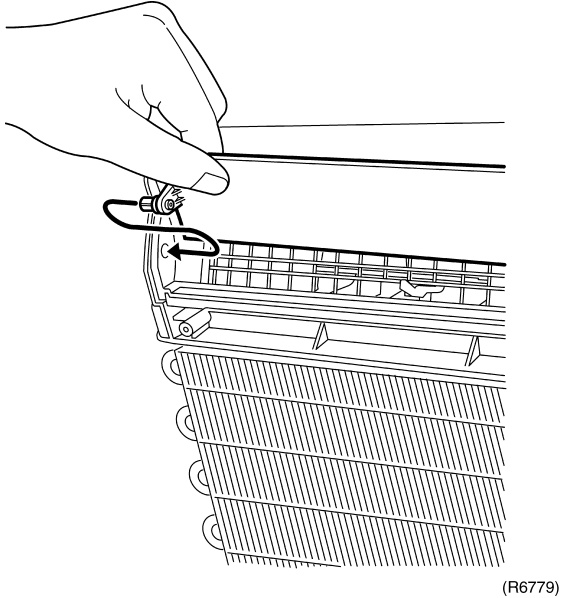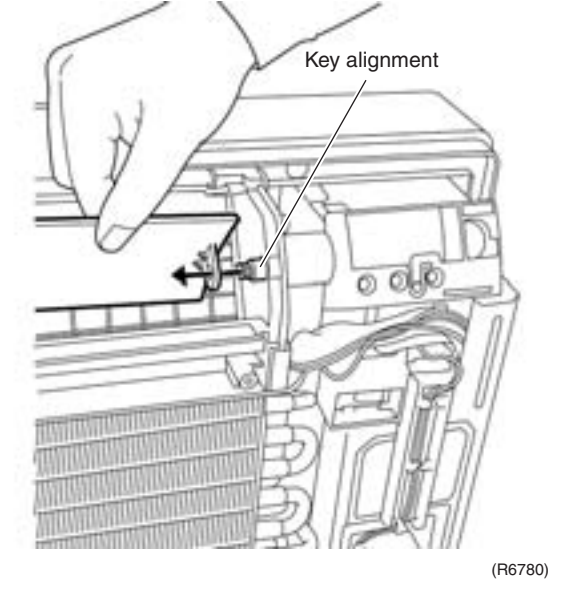**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1 Open the horizontal blade. 2 Release the center shaft.</p>	 <p style="text-align: right;">(R6778)</p>	<p>■ Release the left shaft first and then release the right shaft from the key alignment.</p>
<p>3 Bend the horizontal blade to release the right and the left shafts and remove the horizontal blade.</p>	 <p style="text-align: right;">(R6779)</p>	
	 <p style="text-align: right;">(R6780)</p>	







## 1.3 Removal of Electrical Box
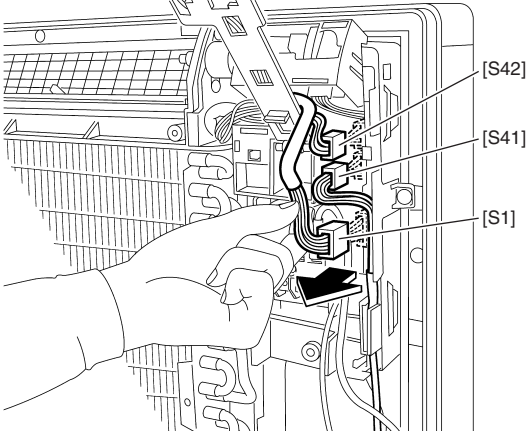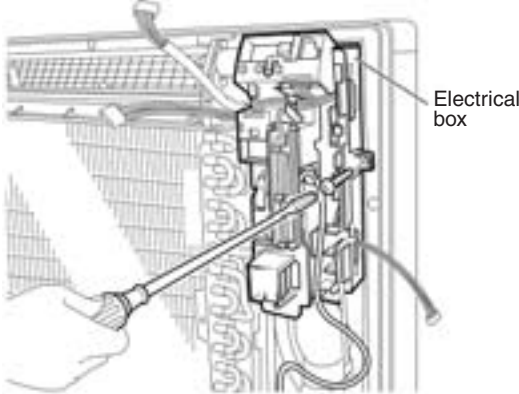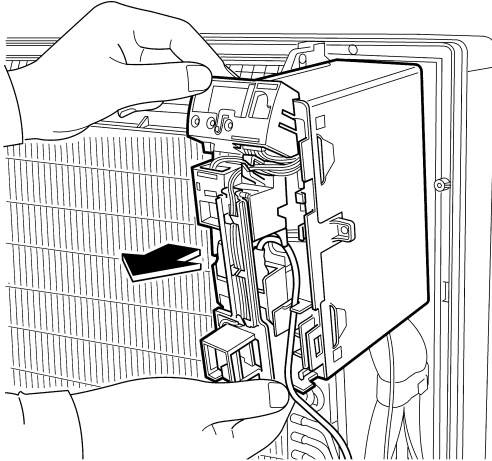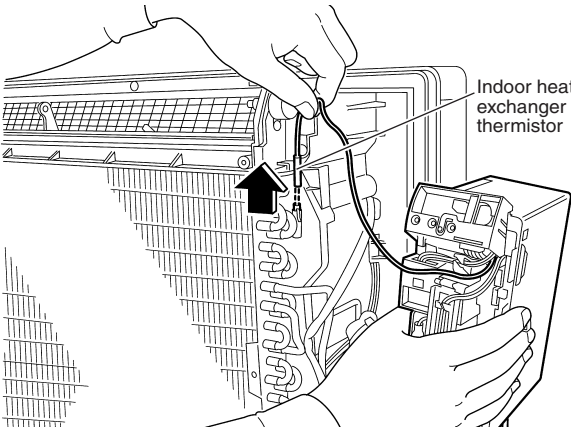
### Procedure



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points	
1 2	Remove the 2 earth screws. Unfasten the hook and open the sensor PCB fixing plate.	<p>(R6781)</p>	
3	Remove the front shield plate.	<p>(R6782)</p>	
4	To detach the connection wires, remove the 1 screw from the wiring fixture and remove the 4 screws from the terminal board.	<p>(R6783)</p>	

Step	Procedure	Procedure	Points
5	Disconnect the 3 connectors [S1] [S41] [S42].	 <p>(R6784)</p>	<ul style="list-style-type: none"> <li>■ [S1] : fan motor</li> <li>[S41] : lower air outlet motor</li> <li>[S42] : swing motor</li> </ul>
6	Remove the screw of the electrical box.	 <p>(R6785)</p>	
7	Pull out the electrical box.	 <p>(R6786)</p>	
8	Pull out the indoor heat exchanger thermistor.	 <p>(R6787)</p>	

# 1.4 Removal of PCB

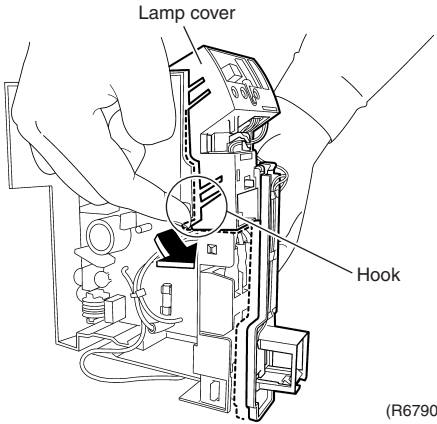
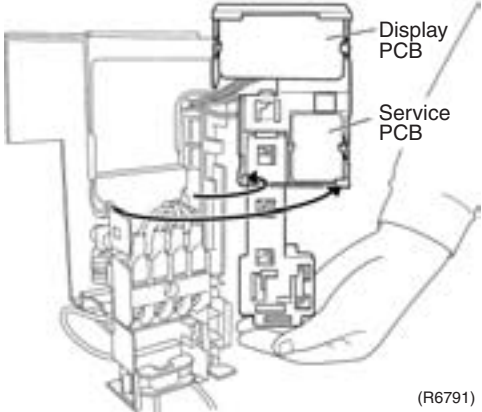
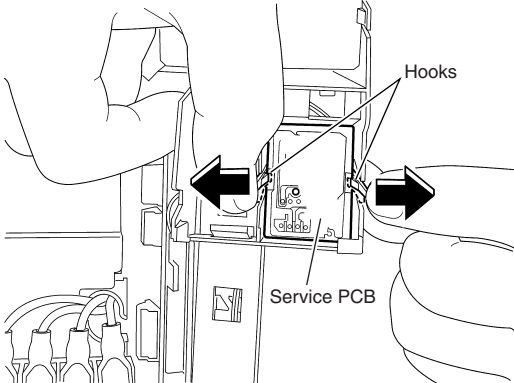
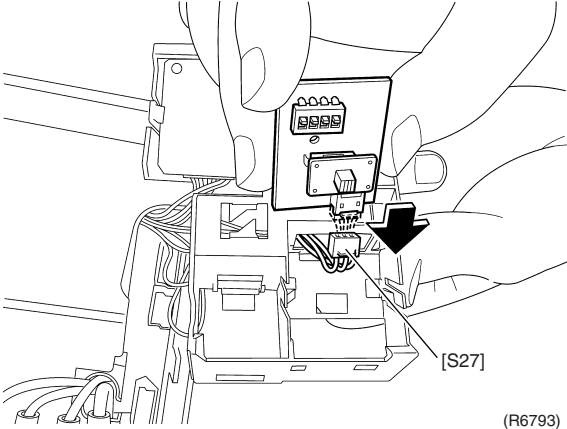
**Procedure**










**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the shield plate.</p> <p>1 Unfasten the 8 hooks of the shield plate and remove it.</p>		
<p>2. Remove the sensor PCB.</p> <p>1 Unfasten the 2 hooks of the sensor PCB.</p> <p>2 Disconnect the connector [S49] and remove the sensor PCB.</p>		

Step	Procedure	Points
<p>3. Remove the service PCB.</p> <p>1</p>	<p>Unfasten the 2 hooks of the lamp cover.</p>  <p>(R6790)</p>  <p>(R6791)</p> <p>2</p> <p>Unfasten the 2 hooks of the service PCB.</p>  <p>(R6792)</p> <p>3</p> <p>Disconnect the connector [S27] and remove the service PCB.</p>  <p>(R6793)</p>	<p>■ Release the left hook first.</p>

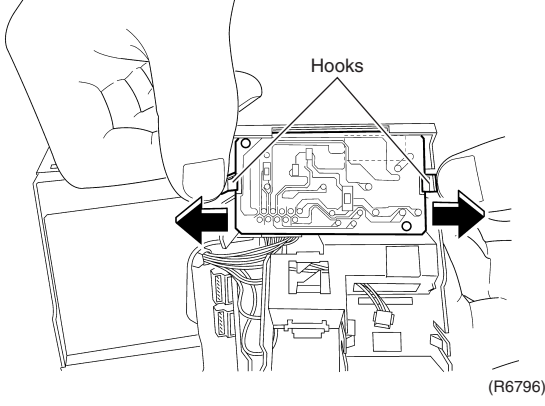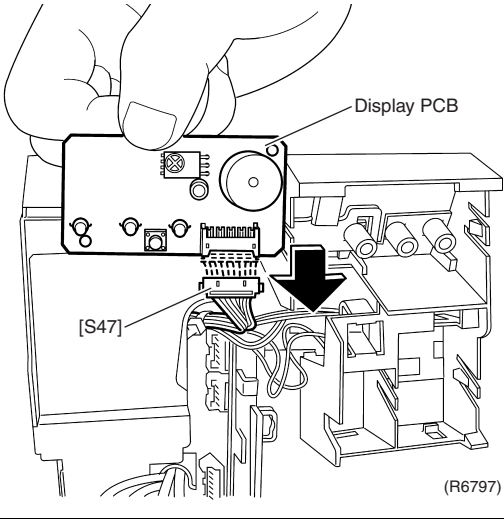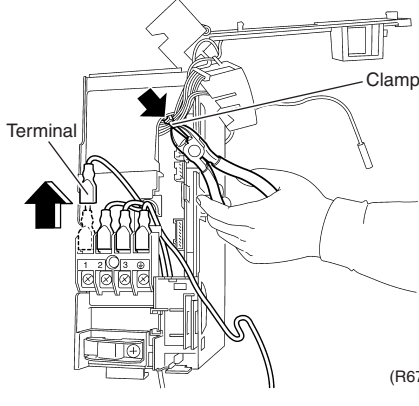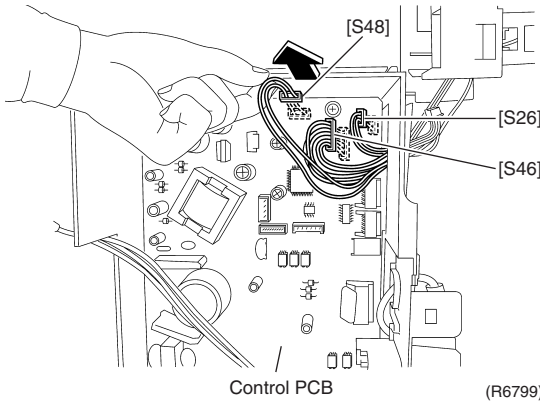Step	Procedure	Points
4. Remove the display PCB.		
1	Unfasten the 2 hooks of the display PCB. 	
2	Disconnect the connector [S47] and remove the display PCB. 	
5. Remove the control PCB.		
1	Cut the clamp and pull out the all terminals from the terminal board. 	
2	Disconnect the connectors [S26] [S46] [S48]. 	<ul style="list-style-type: none"> <li>■ [S26] : service PCB</li> <li>[S46] : display PCB</li> <li>[S48] : sensor PCB</li> </ul>

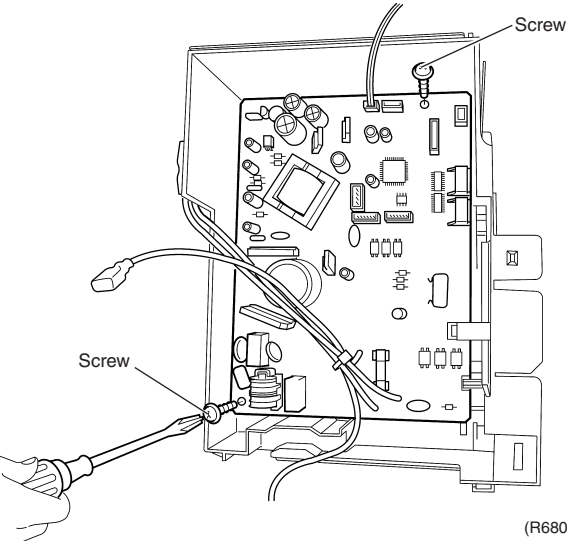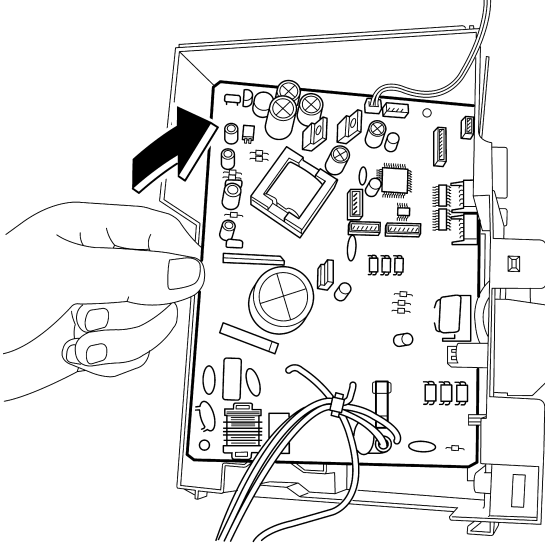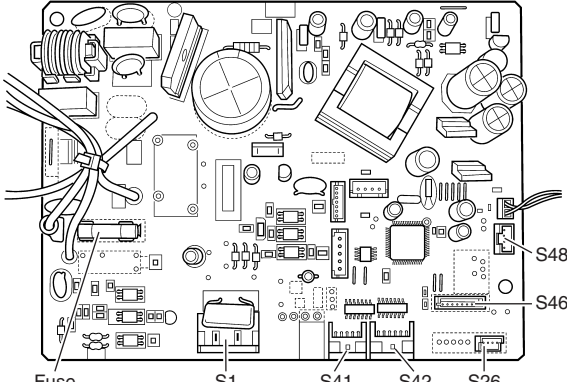Step	Procedure	Points
3	<p>Remove the 2 screws.</p>  <p>(R6800)</p>	
4	<p>Remove the control PCB.</p>  <p>(R6801)</p>  <p>(R6802)</p>	<p>■ Refer to page 21 for detail.</p>

# 1.5 Removal of Vertical Blades

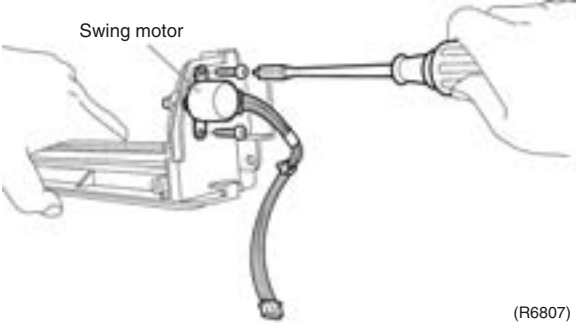
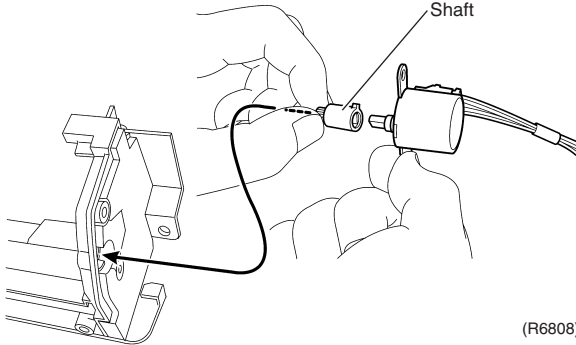
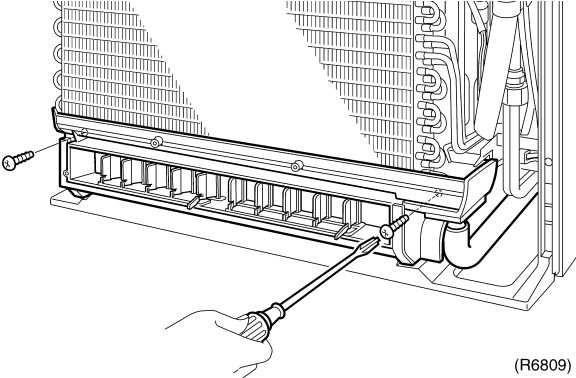
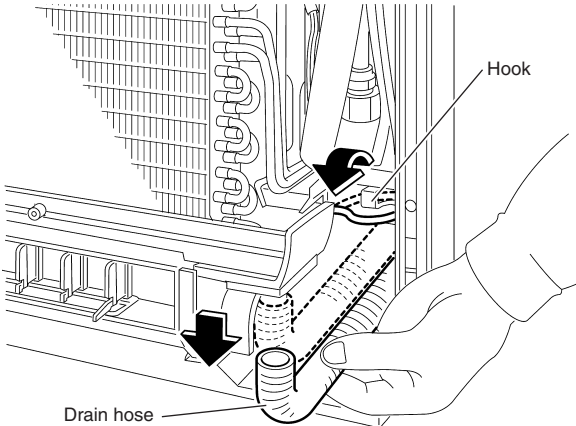
**Procedure**







**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the vertical blade (upper).	<p>(R6803)</p>	
1 Remove the 2 screws and remove the air outlet ASSY.	<p>(R6804)</p>	
2 The air outlet ASSY has the 2 vertical blades ASSYs.	<p>(R6805)</p>	
3 Unfasten the 2 hooks and the center hook to remove the vertical blades ASSY.	<p>(R6806)</p>	
4 Slide the protection net along the right and the left grooves and remove it.		

Step	Procedure	Points
5	<p>Remove the 2 screws to remove the swing motor.</p>  <p>(R6807)</p>  <p>(R6808)</p>	
2.	<p>Remove the vertical blade (lower).</p> <p>1 Remove the 2 screws.</p>  <p>(R6809)</p> <p>2 Remove the drain hose and release the harness of the lower air outlet motor from the hook.</p>  <p>(R6810)</p>	<p>■ Be careful not to wet the floor with drain.</p>

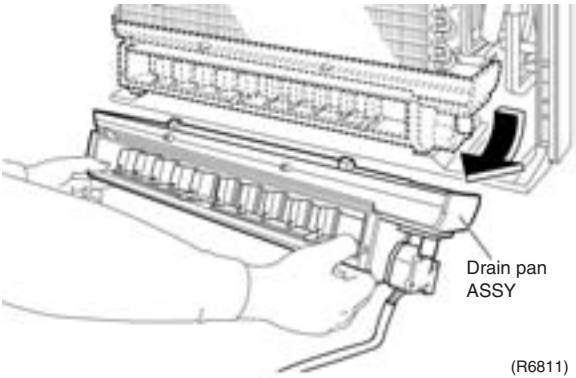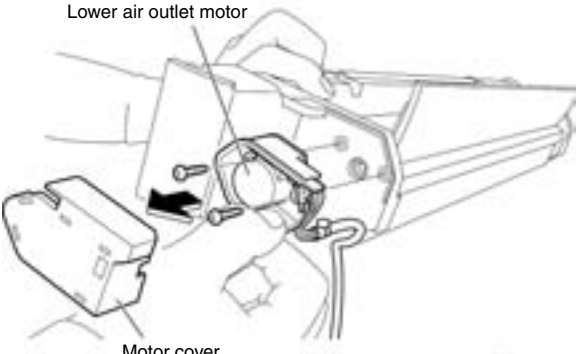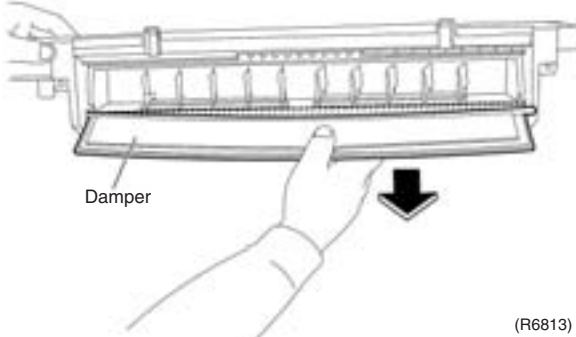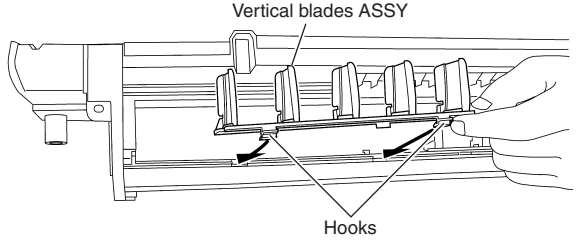

Step	Procedure	Procedure	Points
3	Pull out the drain pan ASSY.	 <p>(R6811)</p>	
4	Remove the motor cover. Remove the 2 screws to remove the lower air outlet motor.	 <p>(R6812)</p>	
5	Remove the damper.	 <p>(R6813)</p>	
6	Remove the sealing material from the front of the vertical blades ASSY, release the 2 hooks from the drain pan, and remove the vertical blades ASSY.	 <p>(R6814)</p>	

# 1.6 Removal of Heat Exchanger

**Procedure**



**Warning**

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>■ Make sure that the refrigerant gas is removed after the pump down work.</p>	<p>(R11499)</p>	<p> <b>Caution</b> When removing or reassembling the heat exchanger, be sure to wear gloves or wrap it with cloth before proceeding to the work. (You may be injured by the fins.)</p>
<p>1 Release the flared joint of the liquid pipe and the gas pipe using 2 wrenches.</p>	<p>Piping fixture</p> <p>(R11502)</p>	<p>Left hook</p> <p>Right hook</p> <p>(R9994)</p>
<p>2 Remove the piping fixture.</p>	<p>Hooks</p> <p>Heat exchanger</p> <p>(R11500)</p>	<p>Hook</p> <p>Hook</p> <p>(R11501)</p>
<p>3 Unfasten the 2 hooks on the left side of the heat exchanger.</p>		
<p>4 Unfasten the 2 hooks on the right side and remove the heat exchanger.</p>		

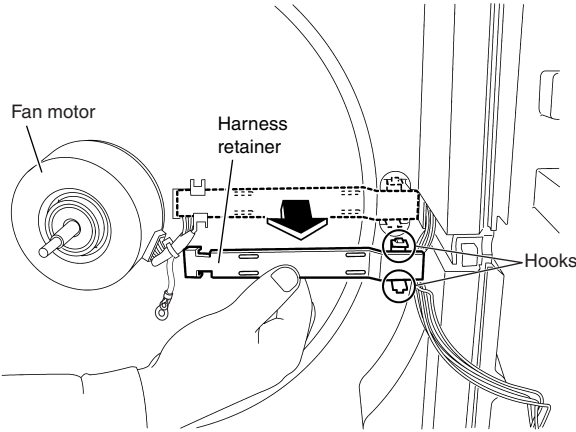
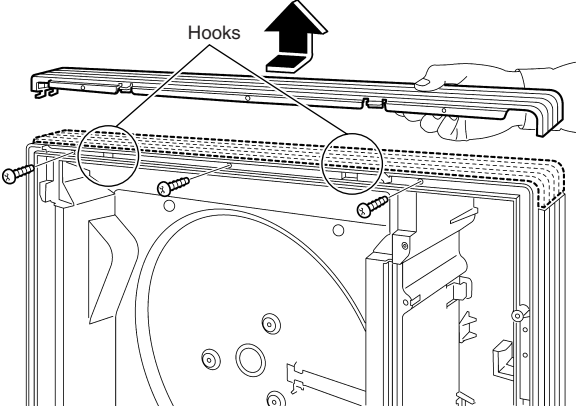
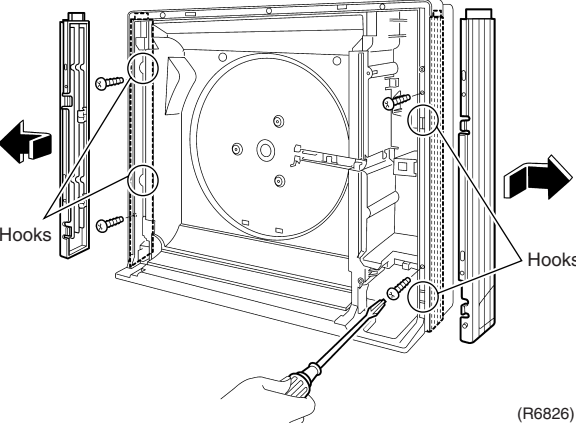
# 1.7 Removal of Fan Rotor / Fan Motor

**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the fan rotor.</p> <p>1 Remove the 4 screws and remove the bellmouth.</p> <p>2 Remove the nut (M6) to remove the fan rotor.</p>	<p>Bellmouth</p> <p>(R6820)</p> <p>Nut</p> <p>Fan rotor</p> <p>(R6821)</p>	<p>■ Wrench size: 10mm</p>
<p>2. Remove the fan motor.</p> <p>1 Release the harness of the fan motor from the hook.</p> <p>2 Remove the 3 screws and remove the fan motor cover.</p>	<p>Hook</p> <p>(R6822)</p> <p>Fan motor cover</p> <p>(R11503)</p>	

Step	Procedure	Points
3	<p>Unfasten the 2 hooks to remove the harness retainer and remove the fan motor.</p>  <p>(R11504)</p>	
<p>3. Remove the casing.</p> <p>1</p>	<p>Remove 3 screws and unfasten the 2 hooks to remove the upper casing.</p>  <p>(R6825)</p>	<ul style="list-style-type: none"> <li>■ Press the 2 hooks toward the back side and remove the casing.</li> </ul>
2	<p>Remove 2 screws and unfasten the 2 hooks to remove the right casing or the left casing.</p>  <p>(R6826)</p>	<ul style="list-style-type: none"> <li>■ Press the 2 hooks toward the back side and remove the casing.</li> </ul>

## 2. Outdoor Unit - RK(X)S25/35F2V1B

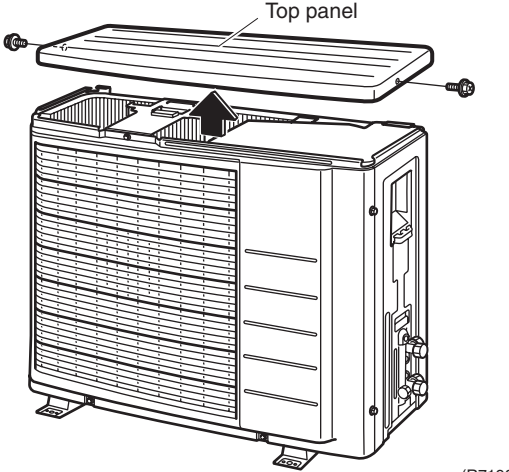
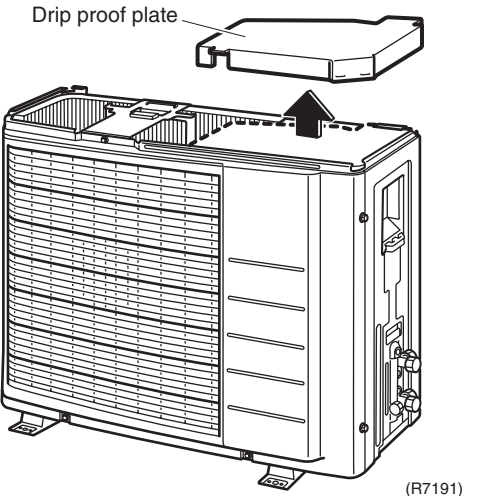
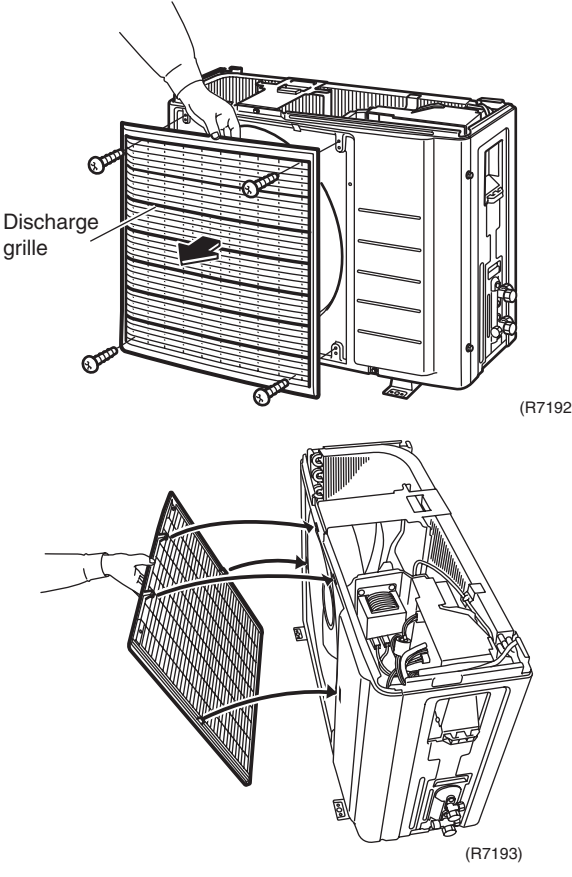
### 2.1 Removal of Outer Panels / Fan Motor



#### Procedure







**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.






Step	Procedure	Points
1. Appearance features	<p>(R7186)</p> <p>(R11890)</p>	<ul style="list-style-type: none"> <li>Take care not to cut your finger by the fins of the outdoor heat exchanger.</li> </ul>
2. Remove the panels.	<p>1 Remove the screw of the stop valve cover. Pull down the stop valve cover and remove it.</p> <p>Stop valve cover</p> <p>Shield plate</p> <p>Hooks</p> <p>(R7188)</p> <p>(R7189)</p>	<ul style="list-style-type: none"> <li>The stop valve cover is united with the shield plate.</li> <li>When reassembling, make sure to fit the 5 hooks.</li> </ul>




Step		Procedure	Points
2	Remove the 2 screws and lift the top panel.	 <p>Top panel</p> <p>(R7190)</p>	
3	Remove the drip proof plate.	 <p>Drip proof plate</p> <p>(R7191)</p>	
4	Remove the 4 screws and remove the discharge grille.	 <p>Discharge grille</p> <p>(R7192)</p> <p>(R7193)</p>	<p>■ The discharge grille has 4 hooks.</p>


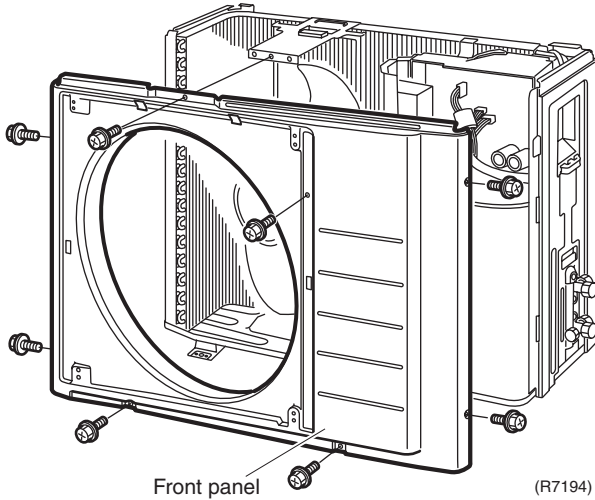
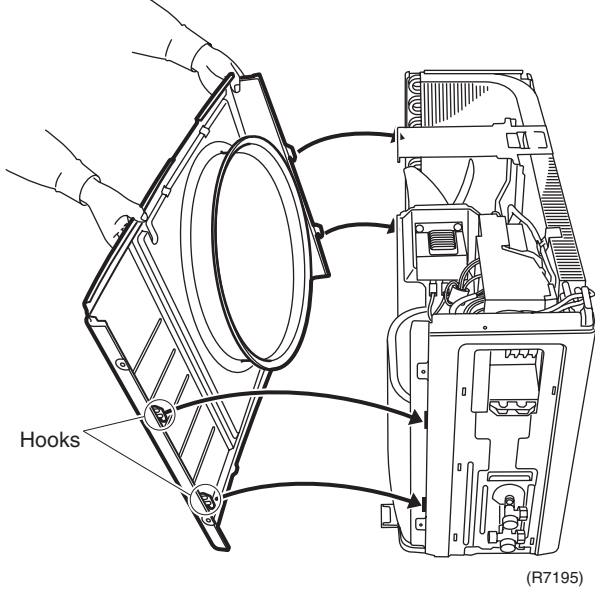
Step	Procedure	Points
5	Remove the 8 screws of the front panel.	
		
6	Unfasten the hooks. Pull and remove the front panel.	<ul style="list-style-type: none"> <li>■ The front panel has 4 hooks.</li> </ul>
		

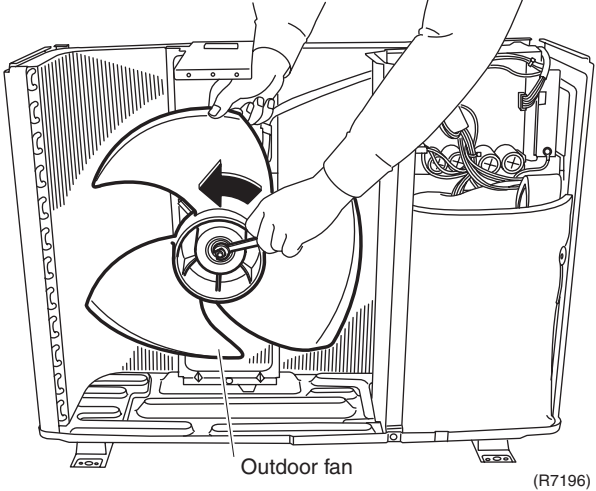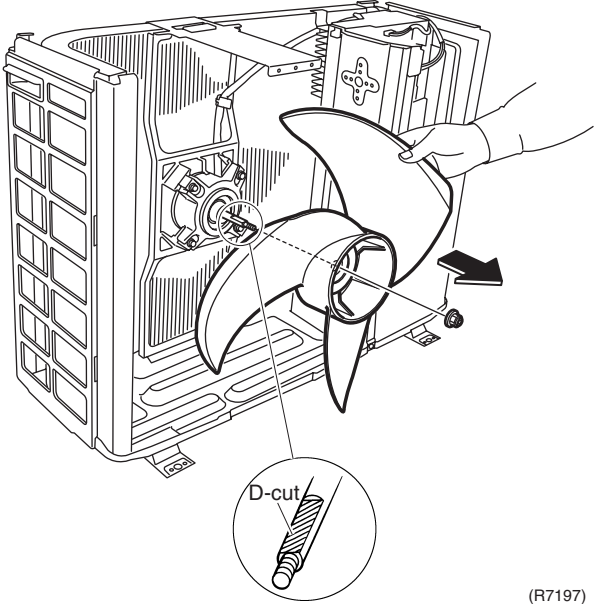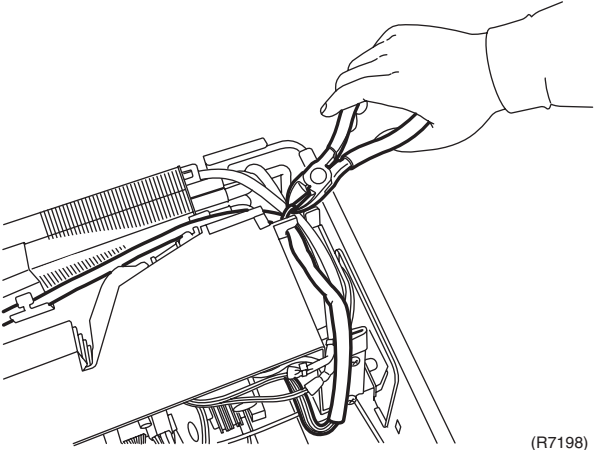
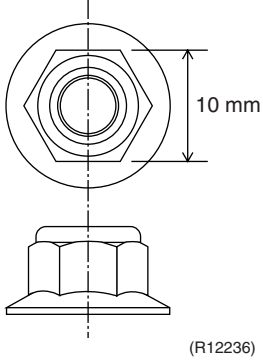
Step	Procedure	Points
<p>3. Remove the fan motor.</p>	<p>1 Remove the washer-fitted nut of the outdoor fan.</p>  <p>2 Remove the outdoor fan.</p>  <p>3 Cut the clamp.</p> 	<ul style="list-style-type: none"> <li>■ The screw has reverse winding.</li> <li>■ Nut size: M6</li> </ul>  <p>(R12236)</p> <ul style="list-style-type: none"> <li>■ When reassembling, align ▼ mark of the outdoor fan with D-cut section of the motor shaft.</li> </ul>

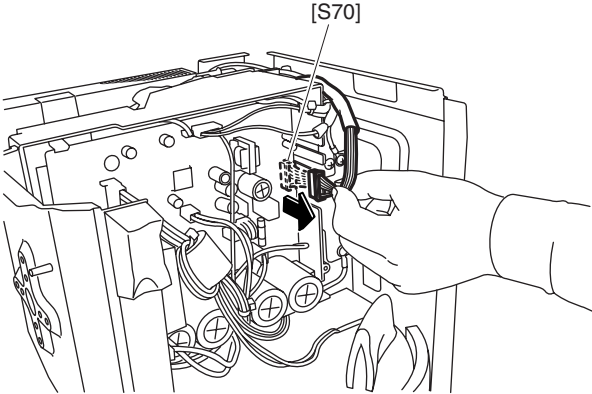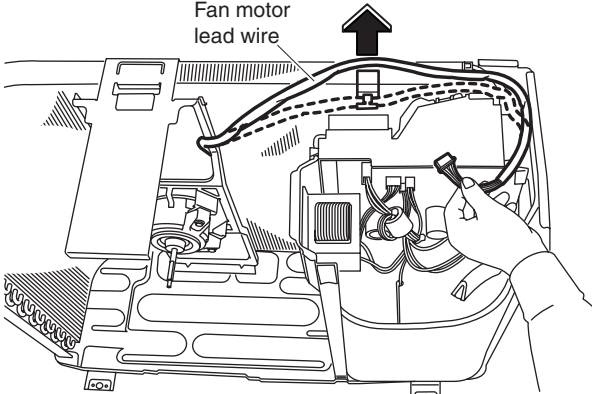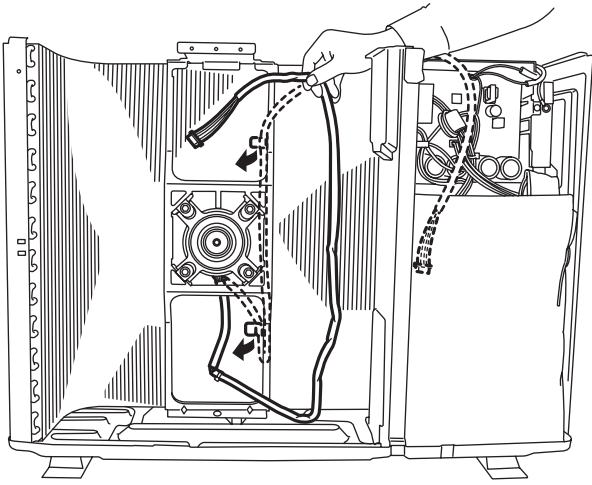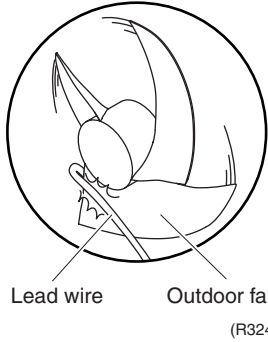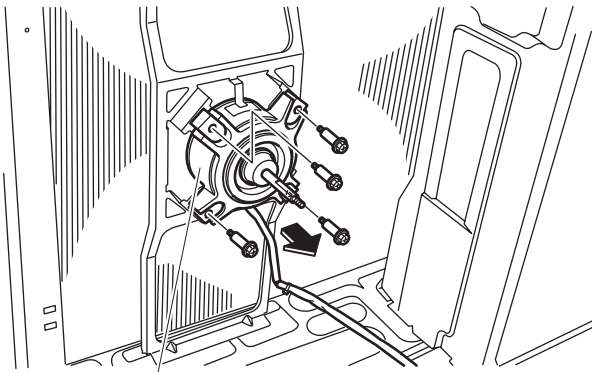



Step	Procedure	Points
4	Disconnect the connector for the fan motor [S70].	
	 <p style="text-align: right;">(R7199)</p>	
5	Release the fan motor lead wire from the hook.	
	 <p style="text-align: right;">(R7200)</p>	
6	Open the hooks and release the fan motor lead wire.	
	 <p style="text-align: right;">(R7201)</p>	<p>■ When reassembling, put the fan motor lead wire through the back of the fan motor (so as not to be entangled with the outdoor fan).</p>
		 <p style="text-align: center;">(R3249)</p>
7	Remove the 4 screws and remove the fan motor.	
	 <p style="text-align: center;">Fan motor</p> <p style="text-align: right;">(R7202)</p>	<p>■ Be sure to remove the lower screws first. If the upper screws are removed first, the fan motor, the center of gravity of which is toward the front, may tilt down or fall, getting you injured.</p>

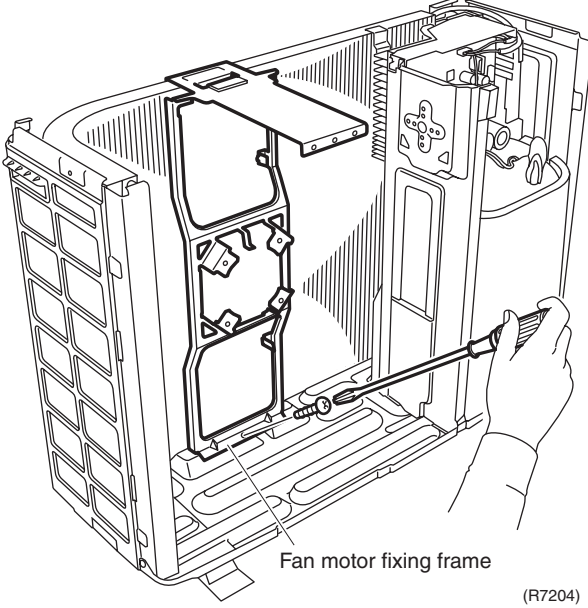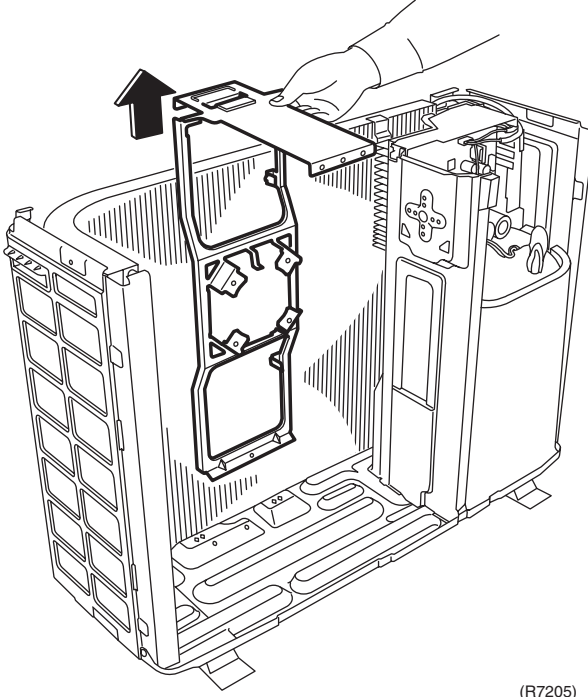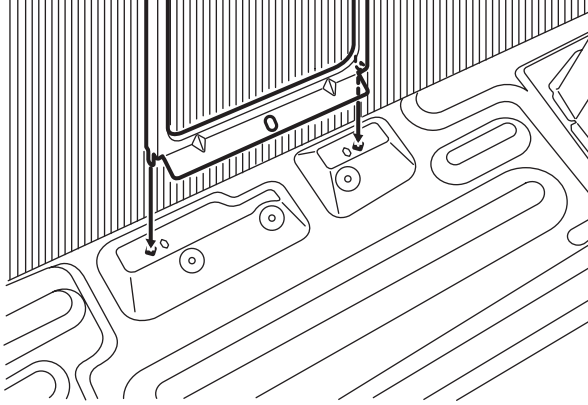Step	Procedure	Points
8	<p data-bbox="196 219 464 309">Remove the screw and remove the fan motor fixing frame.</p>  <p data-bbox="762 779 978 801">Fan motor fixing frame</p> <p data-bbox="1007 813 1066 835">(R7204)</p>  <p data-bbox="1007 1541 1066 1563">(R7205)</p>  <p data-bbox="1007 2011 1066 2033">(R7206)</p>	<ul style="list-style-type: none"> <li data-bbox="1090 1574 1445 1664">■ When reassembling, fit the lower hooks into the bottom frame.</li> </ul>

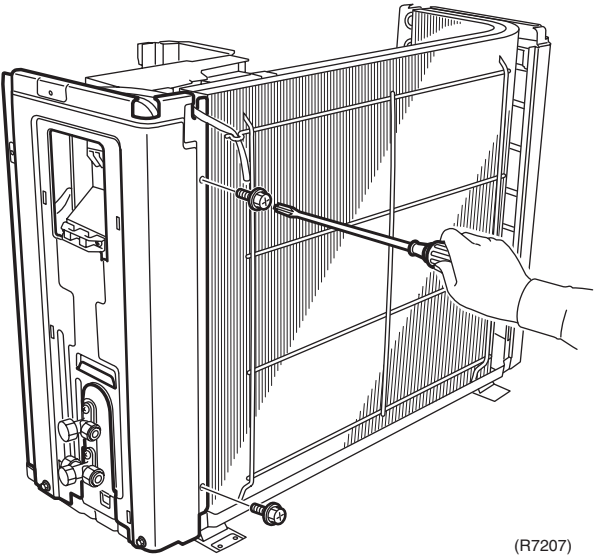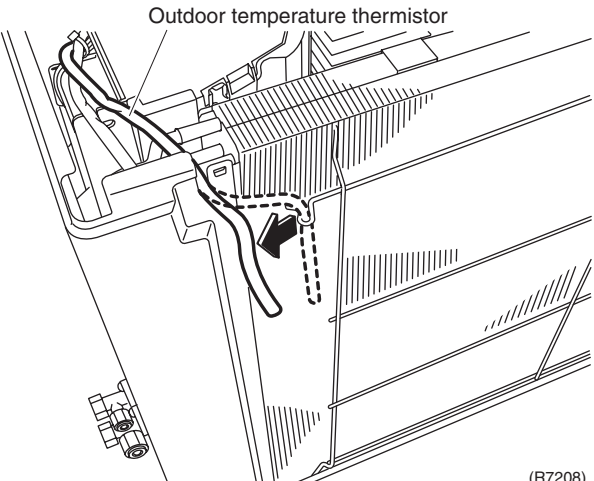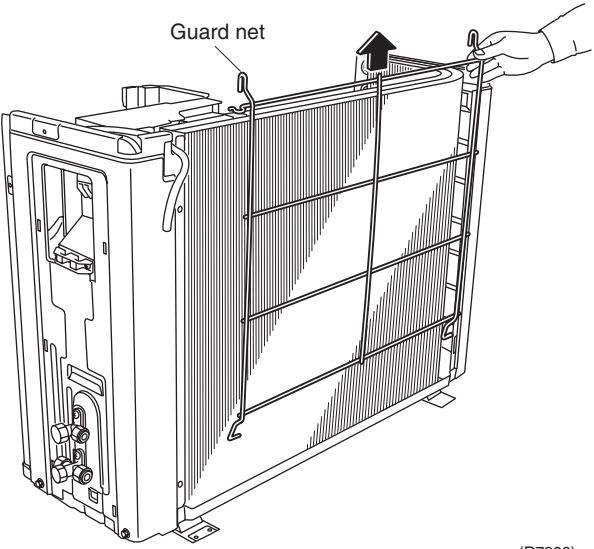Step	Procedure	Points
4. Remove the right side panel.		
1 Remove the 2 screws on the rear side.	 <p>(R7207)</p>	
2 Release the outdoor temperature thermistor.	 <p>Outdoor temperature thermistor</p> <p>(R7208)</p>	
3 Lift up the guard net and remove it.	 <p>Guard net</p> <p>(R7209)</p>	

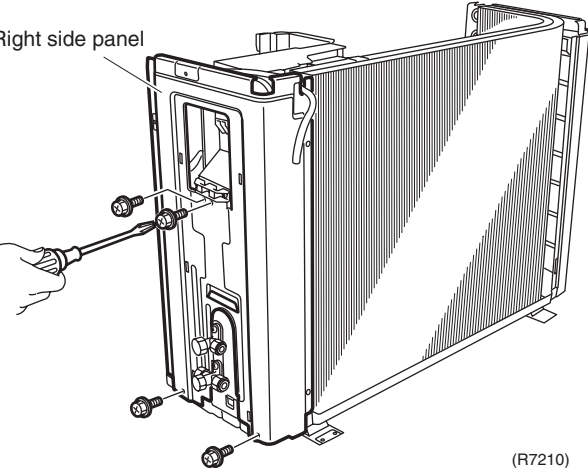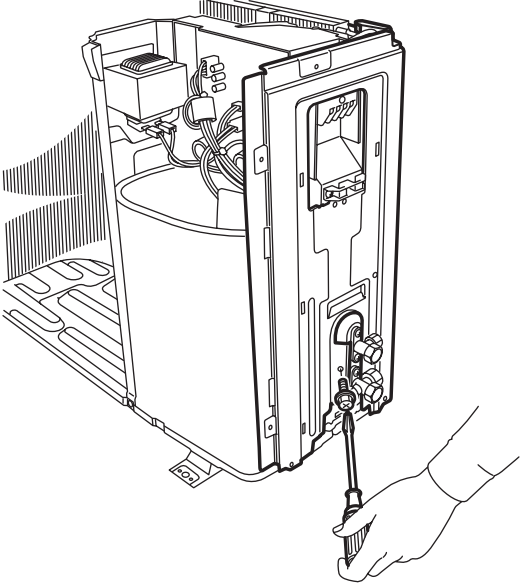Step	Procedure	Points
4	<p>Remove the 4 screws on the right side panel.</p>  <p style="text-align: right;">(R7210)</p>	
5	<p>Remove the screw near the stop valves.</p>  <p style="text-align: right;">(R7211)</p>	

Step	Procedure	Points
6	Unfasten the hook on the rear side.	<ul style="list-style-type: none"> <li>When reassembling, make sure to fit the hook.</li> </ul>
7	Lift up the right side panel and remove it.	<ul style="list-style-type: none"> <li>When reassembling, make sure to fit the hook.</li> </ul>

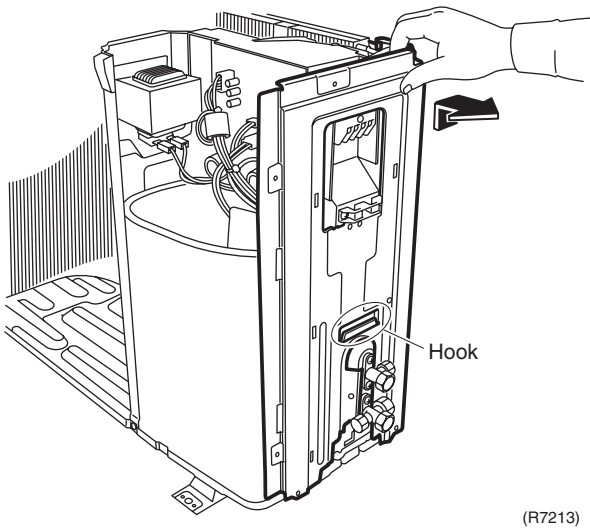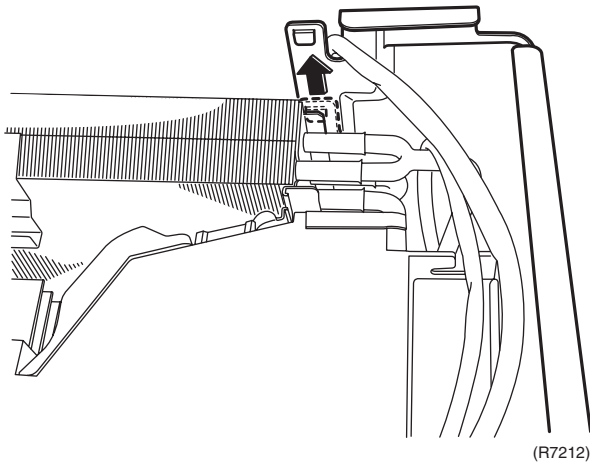

## 2.2 Removal of Electrical Box

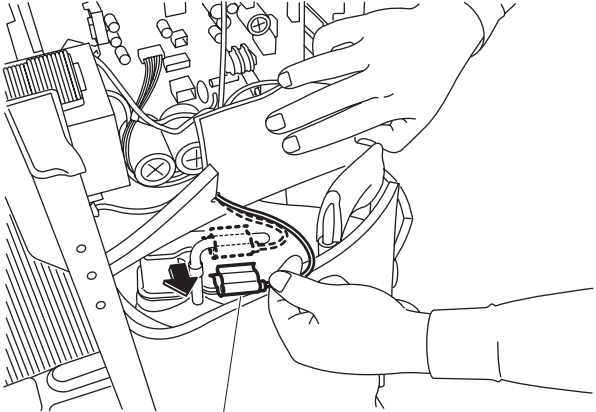
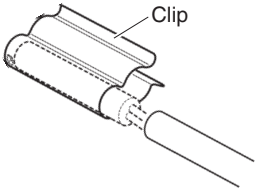
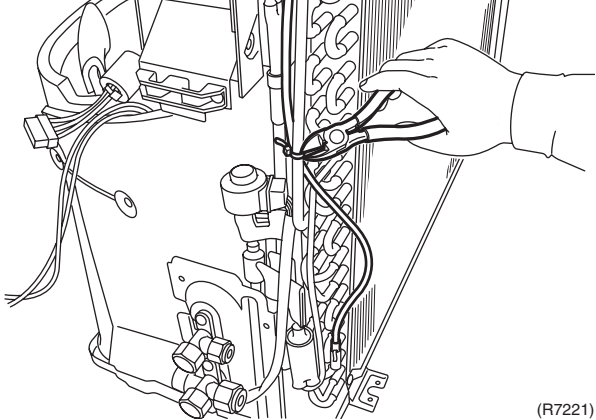
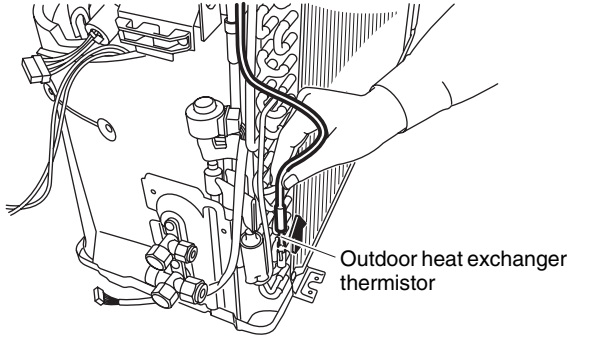
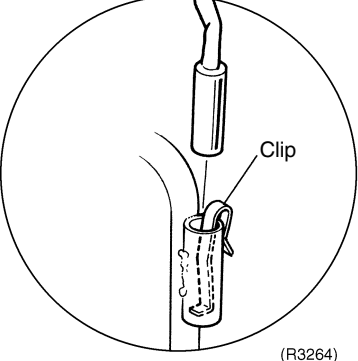
**Procedure**




**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the electrical box.		<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>Remove the panels and disconnect the connector for the fan motor according to "Removal of Outer Panels / Fan Motor".</li> </ul>
1 Disconnect the 2 connectors for the reactor.	<p style="text-align: right;">(R7214)</p>	
2 Cut the clamp.	<p style="text-align: right;">(R7215)</p>	
3 Disconnect the connector for the compressor [S30].	<p style="text-align: right;">(R7216)</p>	<ul style="list-style-type: none"> <li>When reassembling, coil the excessive lead wire and hang the loop on the hook.</li> </ul>

Step	Procedure	Points
4	Disconnect the connector for the overload protector [S40].	
	<p>[S40]</p> <p>(R7217)</p>	
5	Disconnect the connector for the electronic expansion valve coil [S20].	
	<p>[S20]</p> <p>(R7218)</p>	
6	Disconnect the connector for the four way valve coil [S80].	
	<p>[S80]</p> <p>(R7219)</p>	

Step	Procedure	Points
7	<p>Release the discharge pipe thermistor.</p>  <p style="text-align: center;">Discharge pipe thermistor (R0267)</p>	<p>■ Be careful not to lose the clip for the thermistor.</p>  <p style="text-align: right;">(R12279)</p>
8	<p>Cut the clamp.</p>  <p style="text-align: right;">(R7221)</p>	
9	<p>Pull out the outdoor heat exchanger thermistor.</p>  <p style="text-align: center;">Outdoor heat exchanger thermistor (R7222)</p>	<p>■ Be careful not to lose the clip for the thermistor.</p>  <p style="text-align: right;">(R3264)</p>

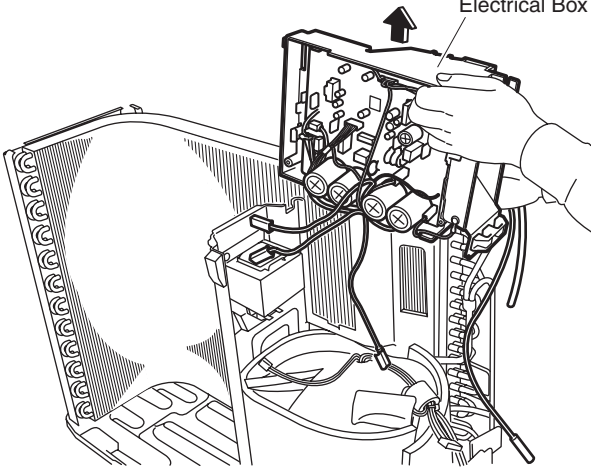




Step	Procedure	Points
10	<p data-bbox="199 219 422 280">Lift and remove the electrical box.</p>  <p data-bbox="1010 712 1070 734">(R7223)</p>	




## 2.3 Removal of PCB

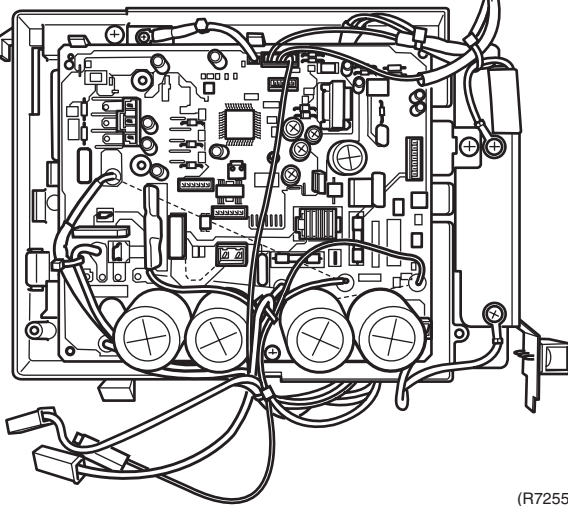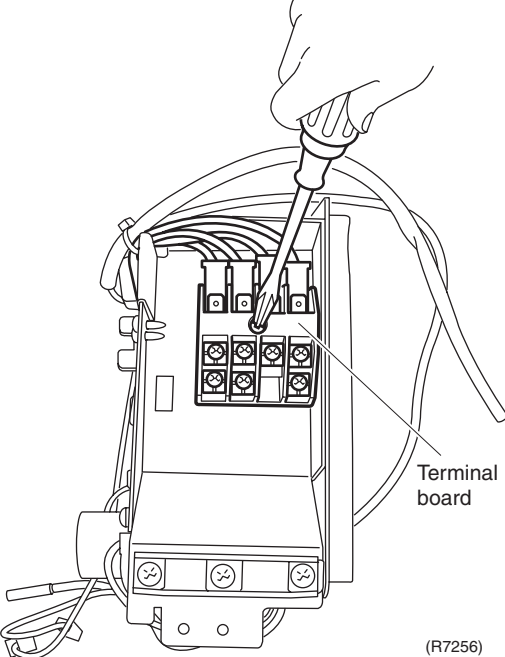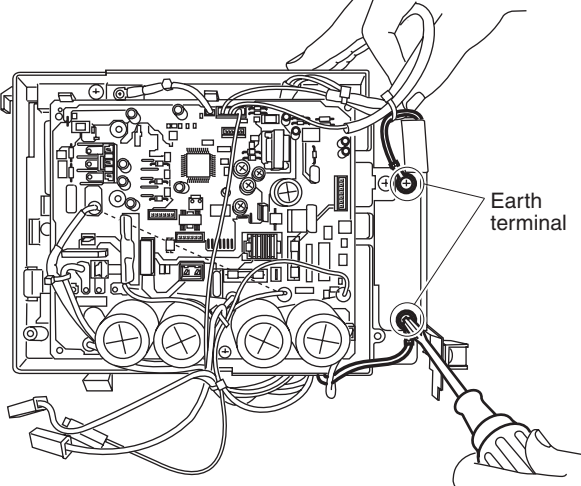**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Feature of the main PCB	 <p>(R7255)</p>	<ul style="list-style-type: none"> <li>■ You can remove the main PCB when you disconnect the lead wires on the terminal board without removing the electrical box.</li> </ul>
2	Remove the screw on the terminal board.	 <p>Terminal board</p> <p>(R7256)</p>	
3	Release the 2 earth terminals.	 <p>Earth terminal</p> <p>(R7257)</p>	

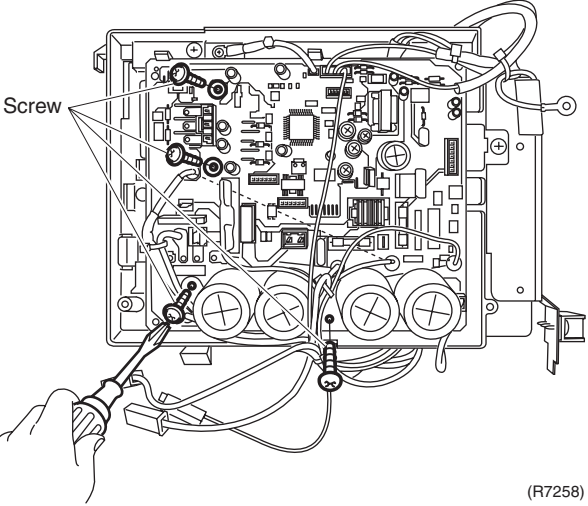
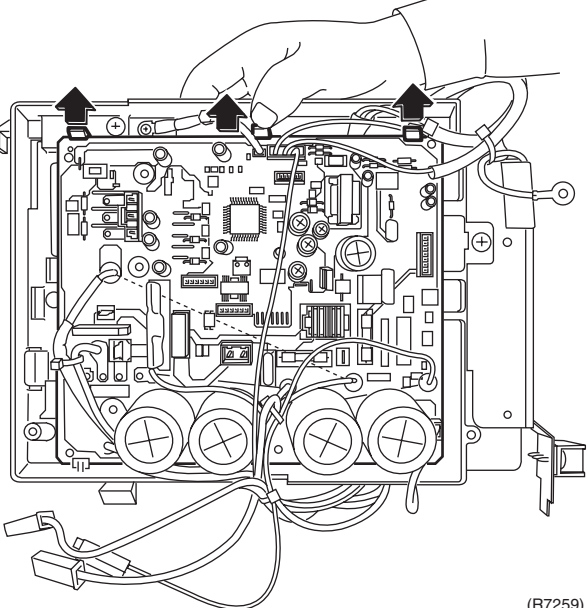
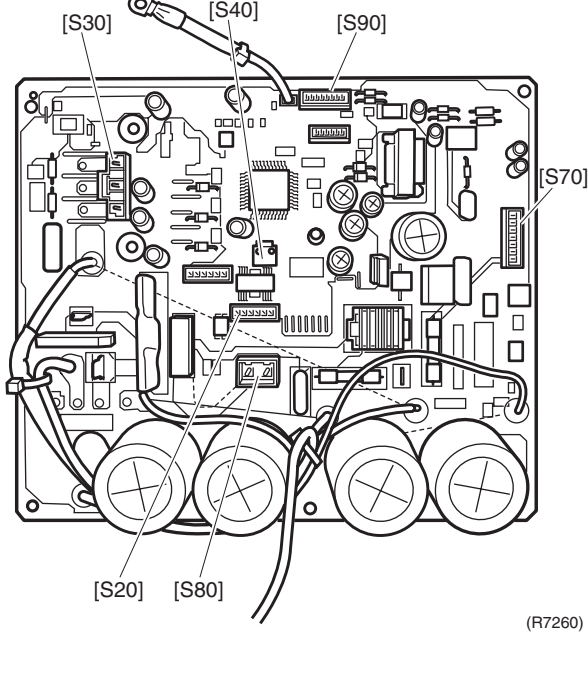
Step	Procedure	Points
4	<p>Remove the 4 screws.</p>  <p style="text-align: right;">(R7258)</p>	
5	<p>Unfasten the 3 hooks on the upper side.</p>  <p style="text-align: right;">(R7259)</p>	
6	<p>Lift and pull out the main PCB.</p>  <p style="text-align: right;">(R7260)</p>	<p>■ Refer to page 23 for detail.</p> <p>[S20]: electronic expansion valve coil          [S30]: compressor          [S40]: overload protector          [S70]: fan motor          [S80]: four way valve coil          [S90]: thermistors</p>



## 2.4 Removal of Reactor / Partition Plate

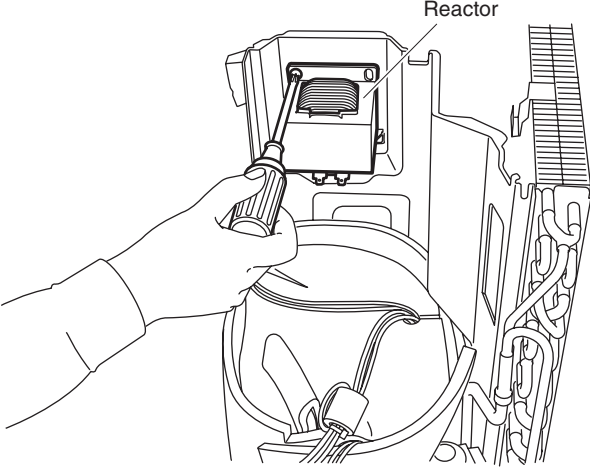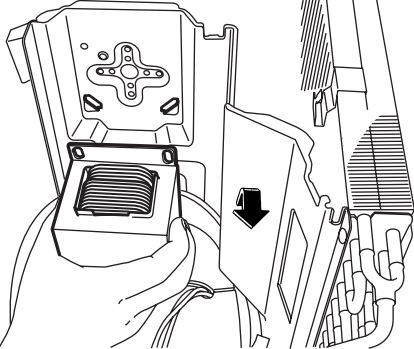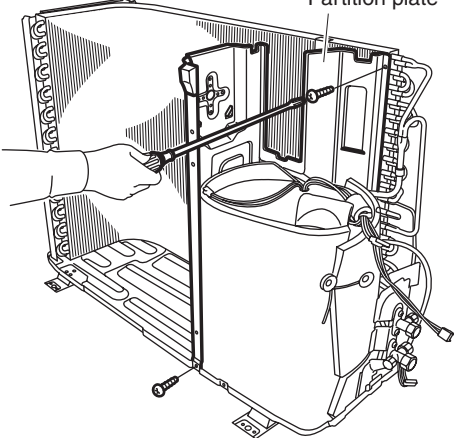**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the reactor.</p> <p>1 Remove the screw and remove the reactor.</p>	 <p>(R7224)</p>  <p>(R7225)</p>	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>■ Remove the outer panels according to the "Removal of Outer Panels / Fan Motor".</li> <li>■ Remove the electrical box according to the "Removal of Electrical Box".</li> </ul>
<p>2. Remove the partition plate.</p> <p>1 Remove the 2 screws.</p>	 <p>(R7226)</p>	



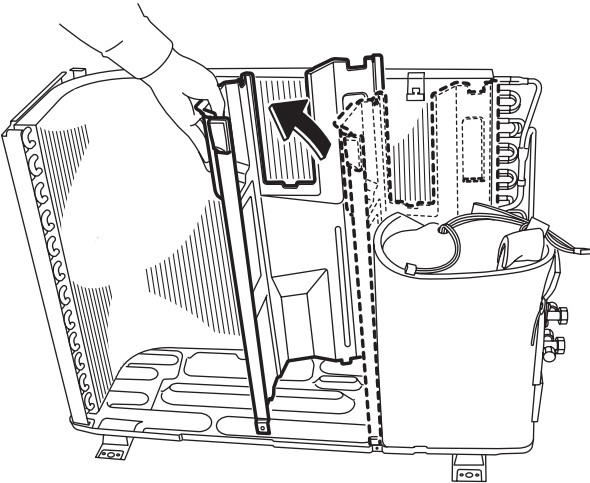
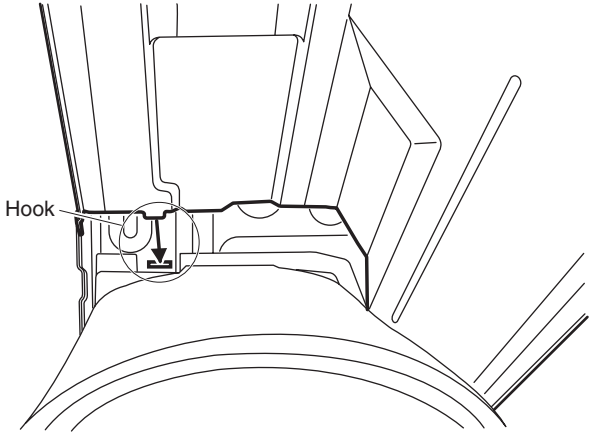
Step	Procedure	Points
<p>2</p>	<p>The partition plate has a hook on the lower side. Lift and pull the partition plate to remove.</p>  <p>(R7227)</p>  <p>Hook</p> <p>(R7228)</p>	<ul style="list-style-type: none"> <li>■ When reassembling, fit the lower hook into the bottom frame.</li> </ul>

## 2.5 Removal of Sound Blanket

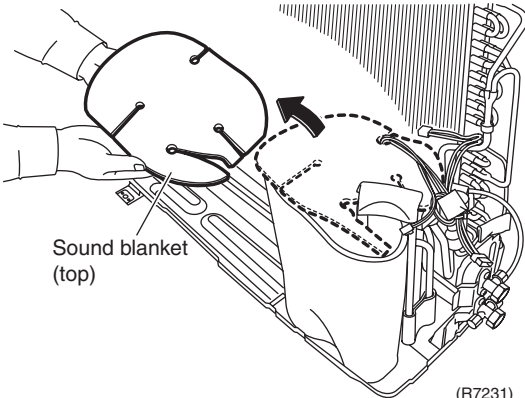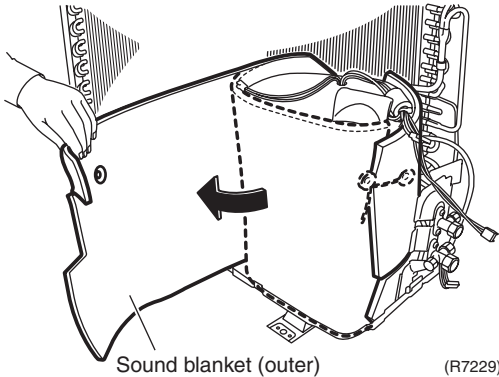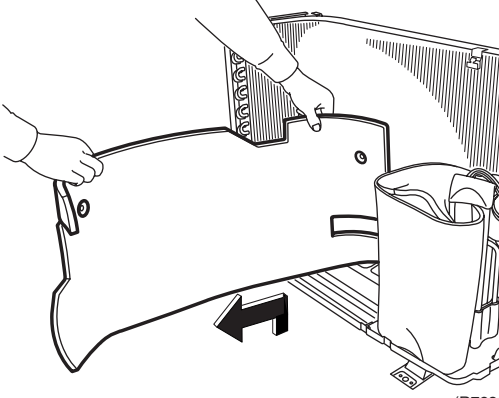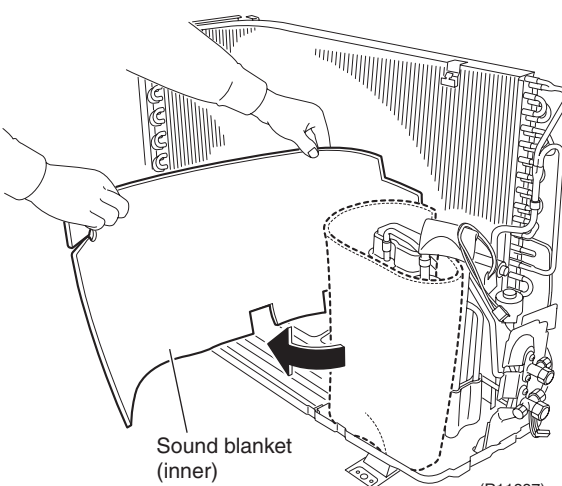**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.




Step	Procedure	Procedure	Points
1	Remove the sound blanket (top).	 <p style="text-align: right;">(R7231)</p>	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>■ Remove the outer panels according to the "Removal of Outer Panels / Fan Motor".</li> <li>■ Remove the electrical box according to the "Removal of Electrical Box".</li>   <li>■ Since the piping ports are torn easily, remove the sound blanket carefully.</li> </ul>
2	Untie the string and open the sound blanket (outer).	 <p style="text-align: right;">(R7229)</p>	
3	Lift and remove the sound blanket (outer).	 <p style="text-align: right;">(R7230)</p>	
4	Pull the sound blanket (inner) out.	 <p style="text-align: right;">(R11887)</p>	




## 2.6 Removal of Four Way Valve

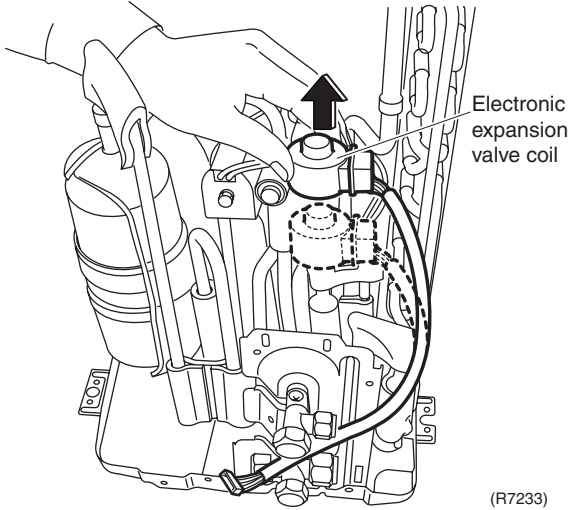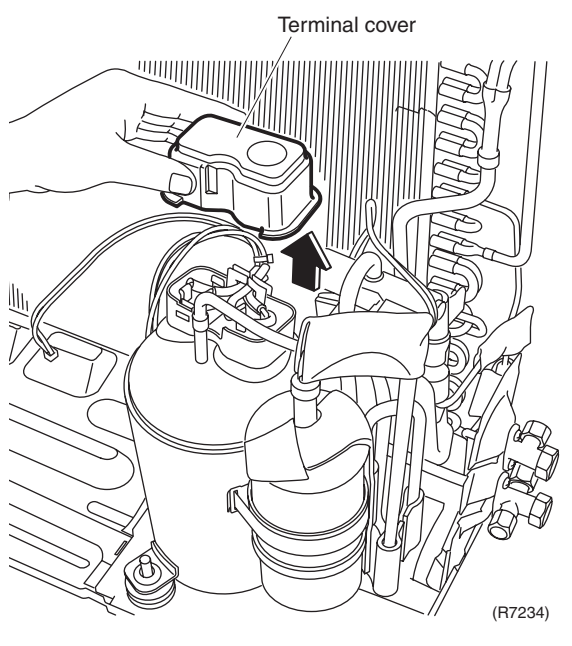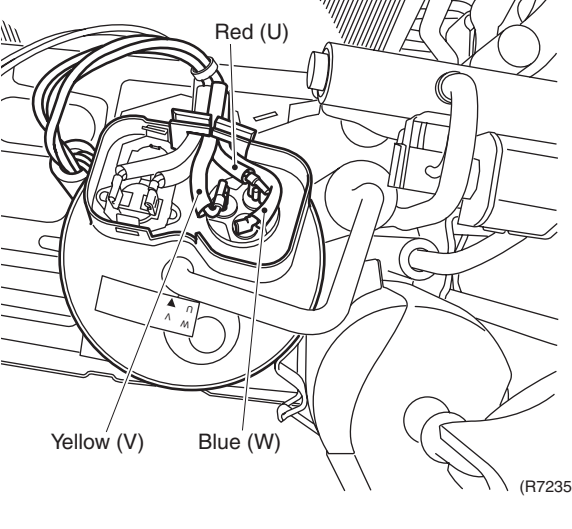**Procedure**




**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Pull out the electronic expansion valve coil.	 <p>(R7233)</p>	
2	Remove the terminal cover.	 <p>(R7234)</p>	
3	Disconnect the lead wires of the compressor.	 <p>(R7235)</p>	

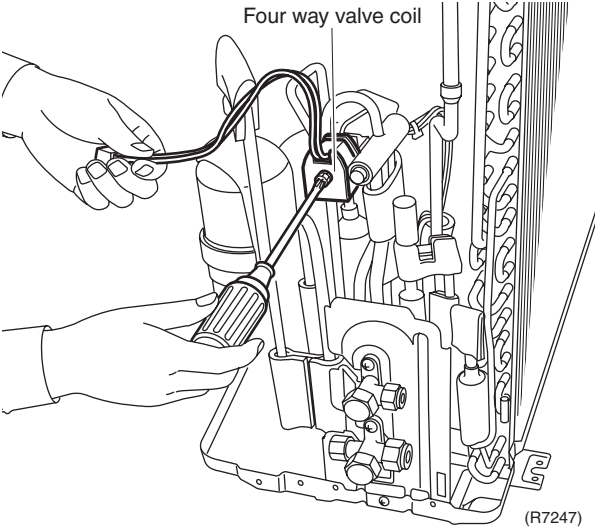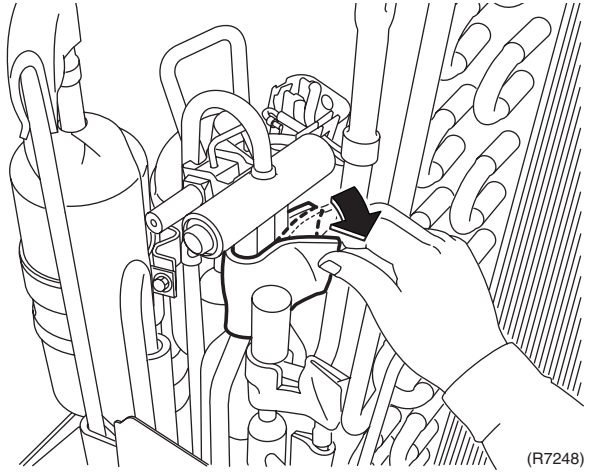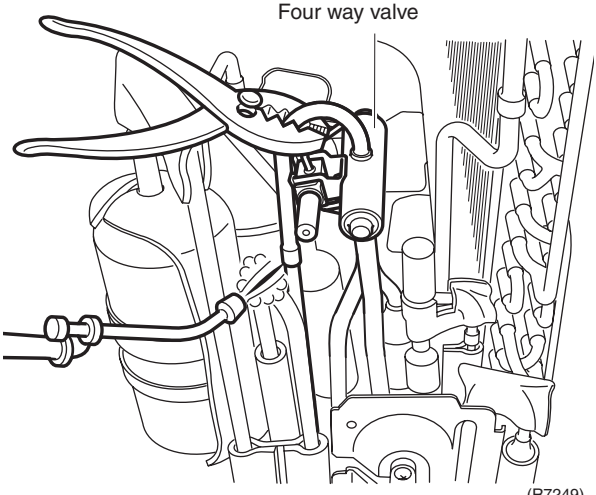Step	Procedure	Points
4	<p>Remove the screw and remove the four way valve coil.</p> 	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
5	<p>Remove the sheets of putty.</p> 	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
6	<p>Heat up the brazed part and withdraw the piping with pliers.</p> 	<p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>

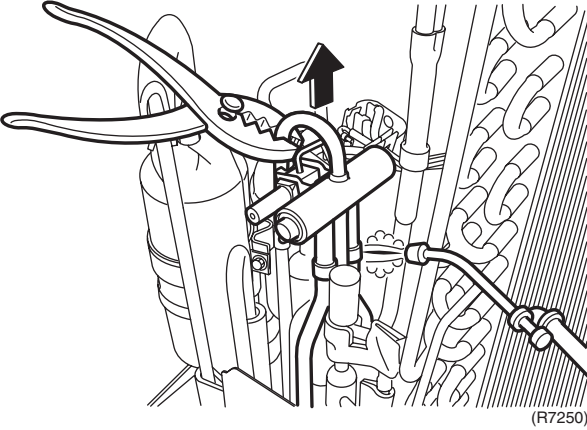



Step	Procedure	Points
	 <p>(R7250)</p>	<p><b>Note:</b></p> <ul style="list-style-type: none"><li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li><li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li><li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li></ul>

## 2.7 Removal of Compressor

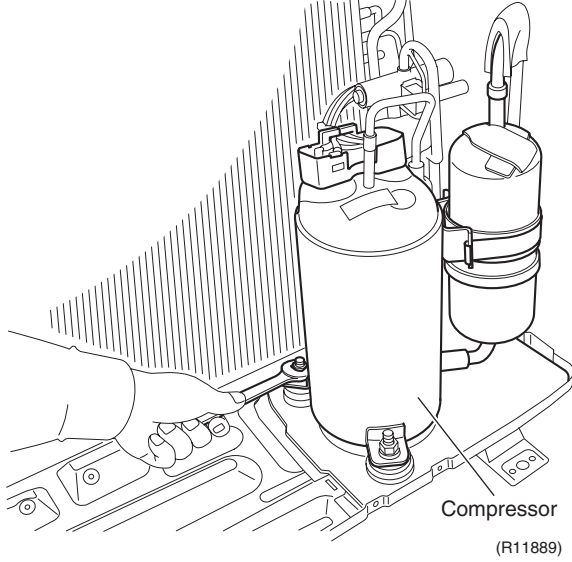
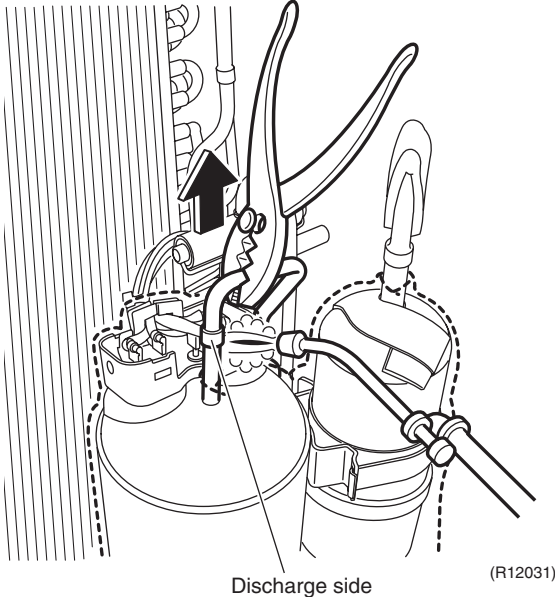
**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	<p>Remove the 2 nuts of the compressor.</p> 	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Warning</b> Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.</p>
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>		<p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
2	<p>Heat up the brazed part of the discharge side and disconnect.</p>	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol> <p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>

Step	Procedure	Points
3	Heat up the brazed part of the suction side and disconnect.	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> </ul>
4	Lift the compressor up and remove it.	<ul style="list-style-type: none"> <li>■ Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin.</li> </ul>

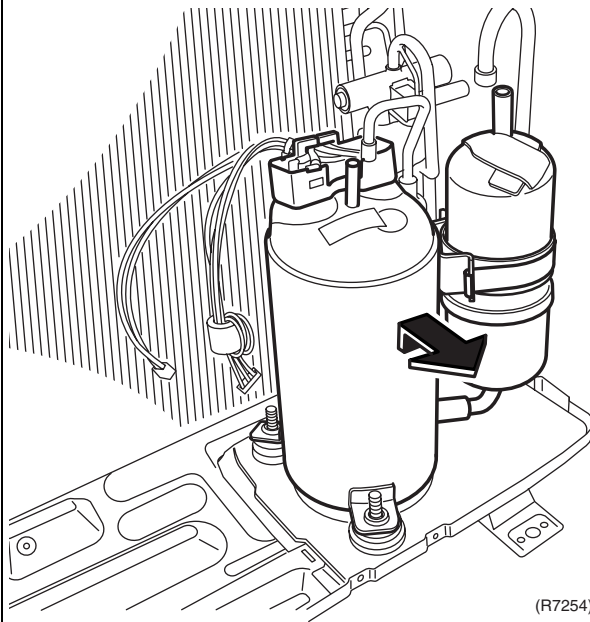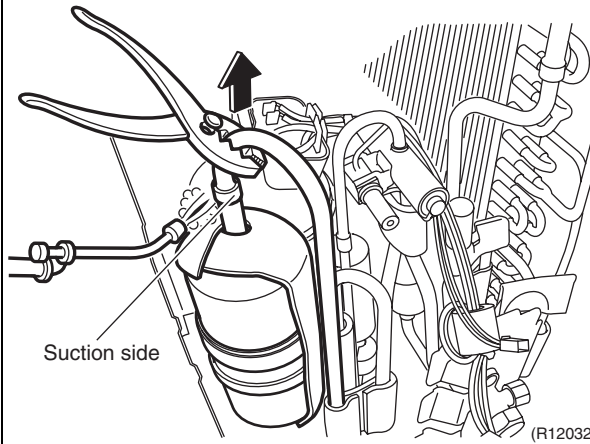

# 3. Outdoor Unit - RK(X)S25/35G2V1B

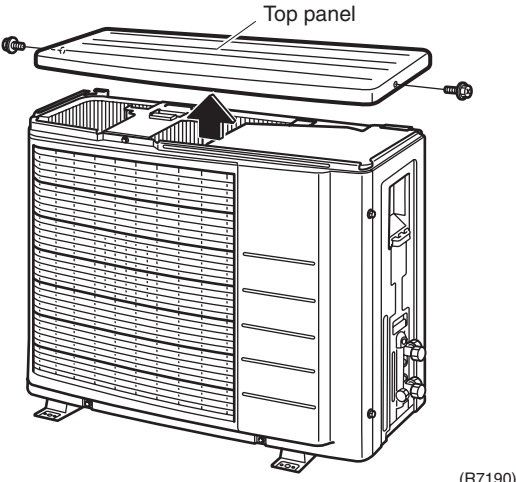
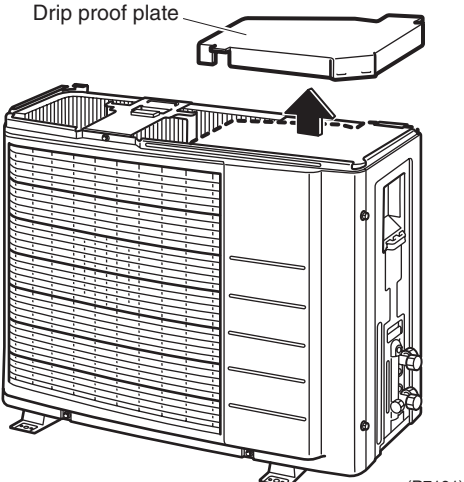
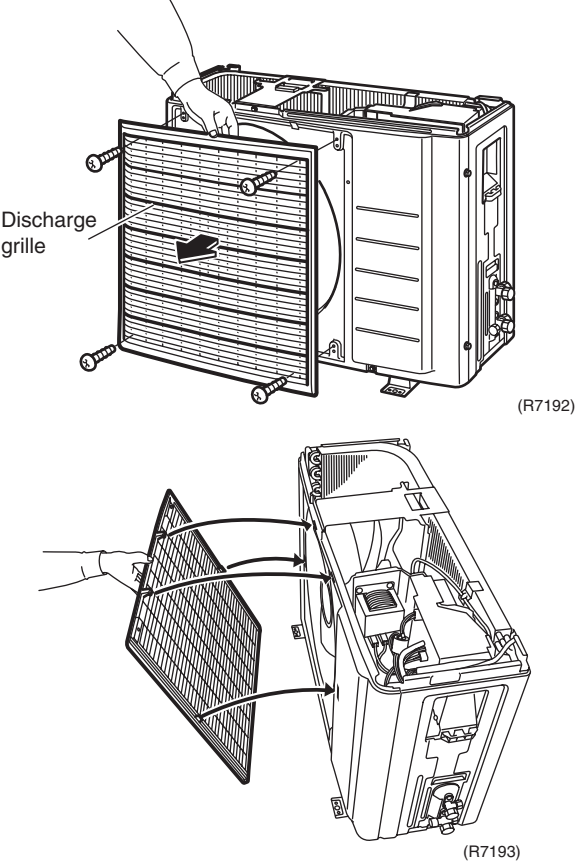
## 3.1 Removal of Outer Panels / Fan Motor



**Procedure**












**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Appearance features	<p>(R7186)</p> <p>(R11890)</p>	<ul style="list-style-type: none"> <li>Take care not to cut your finger by the fins of the outdoor heat exchanger.</li> </ul>
2. Remove the panels.	<p>1 Remove the screw of the stop valve cover. Pull down the stop valve cover and remove it.</p> <p>Stop valve cover</p> <p>Shield plate</p> <p>Hooks</p> <p>(R7188)</p> <p>(R7189)</p>	<ul style="list-style-type: none"> <li>The stop valve cover is united with the shield plate.</li> <li>When reassembling, make sure to fit the 5 hooks.</li> </ul>




Step		Procedure	Points
2	Remove the 2 screws and lift the top panel.	 <p>Top panel</p> <p>(R7190)</p>	
3	Remove the drip proof plate.	 <p>Drip proof plate</p> <p>(R7191)</p>	
4	Remove the 4 screws and remove the discharge grille.	 <p>Discharge grille</p> <p>(R7192)</p> <p>(R7193)</p>	<p>■ The discharge grille has 4 hooks.</p>


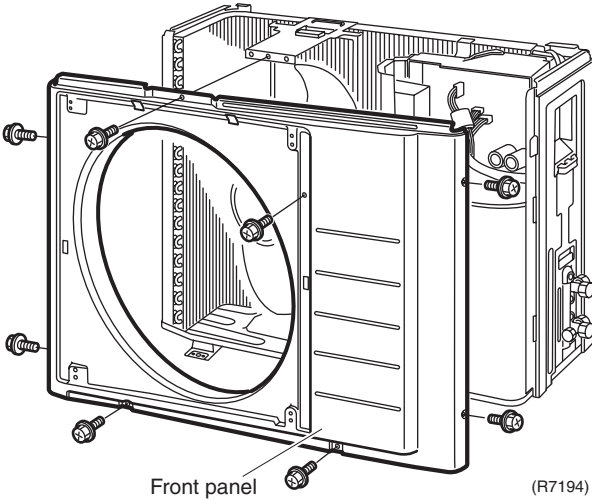
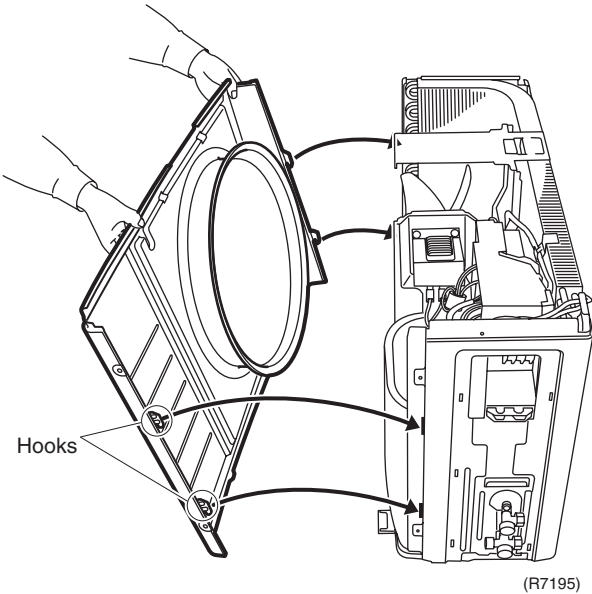
Step	Procedure	Points
5	Remove the 8 screws of the front panel.	
	 <p>Front panel (R7194)</p>	
6	Unfasten the hooks. Pull and remove the front panel.	<ul style="list-style-type: none"> <li>■ The front panel has 4 hooks.</li> </ul>
	 <p>Hooks (R7195)</p>	

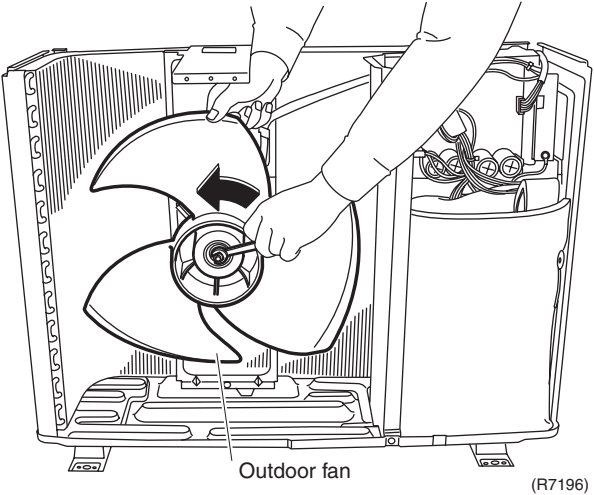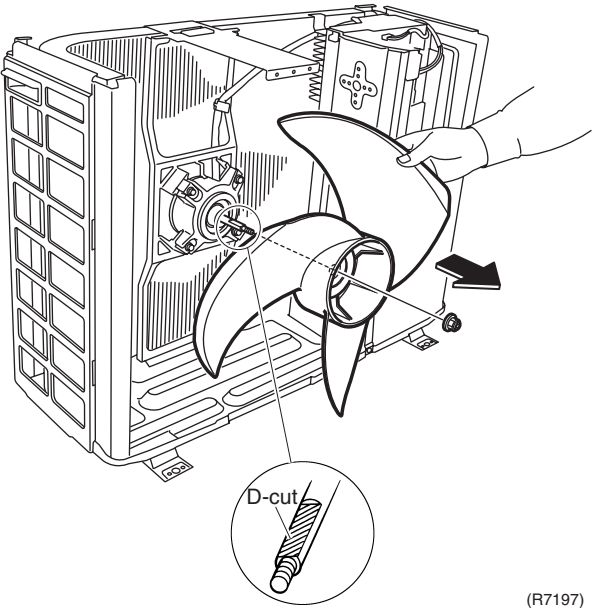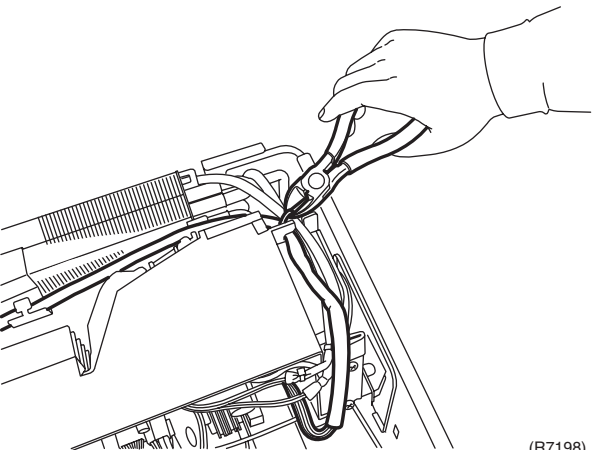
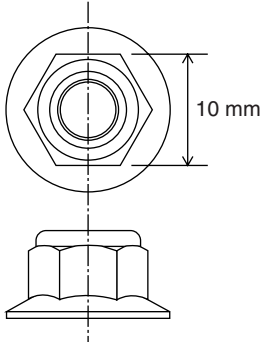
Step	Procedure	Points
<p>3. Remove the fan motor.</p>	<p>1 Remove the washer-fitted nut of the outdoor fan.</p>  <p>2 Remove the outdoor fan.</p>  <p>3 Cut the clamp.</p> 	<ul style="list-style-type: none"> <li>■ The screw has reverse winding.</li> <li>■ Nut size: M6</li> </ul>  <p style="text-align: right;">(R12236)</p> <ul style="list-style-type: none"> <li>■ When reassembling, align ▼ mark of the outdoor fan with D-cut section of the motor shaft.</li> </ul>

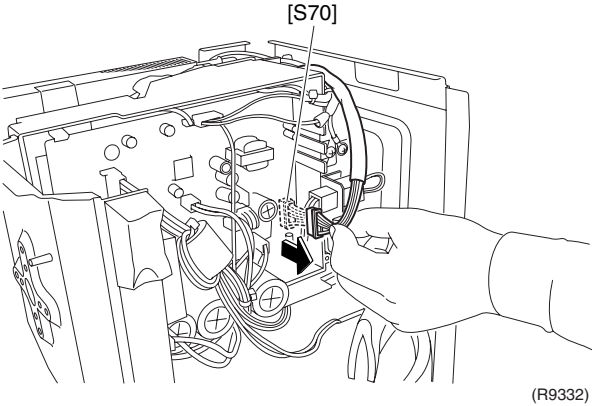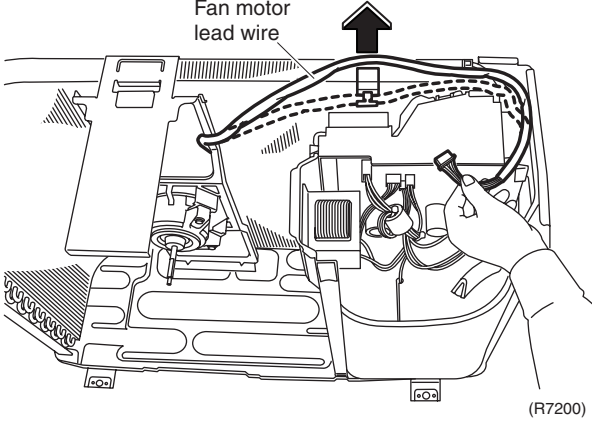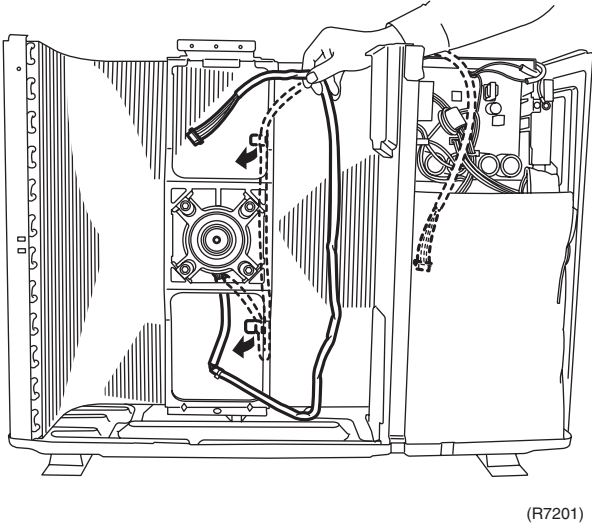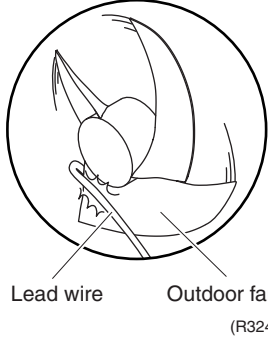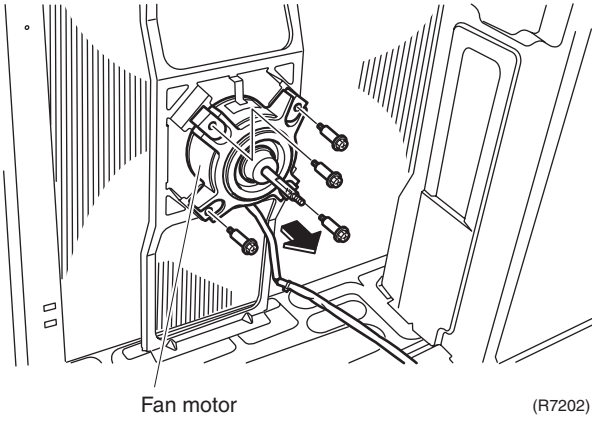Step	Procedure	Points
4	Disconnect the connector for the fan motor [S70].	
	 <p>(R9332)</p>	
5	Release the fan motor lead wire from the hook.	
	 <p>(R7200)</p>	
6	Open the hooks and release the fan motor lead wire.	
	 <p>(R7201)</p>	<p>■ When reassembling, put the fan motor lead wire through the back of the fan motor (so as not to be entangled with the outdoor fan).</p>
		 <p>Lead wire      Outdoor fan (R3249)</p>
7	Remove the 4 screws and remove the fan motor.	
	 <p>Fan motor (R7202)</p>	<p>■ Be sure to remove the lower screws first. If the upper screws are removed first, the fan motor, the center of gravity of which is toward the front, may tilt down or fall, getting you injured.</p>

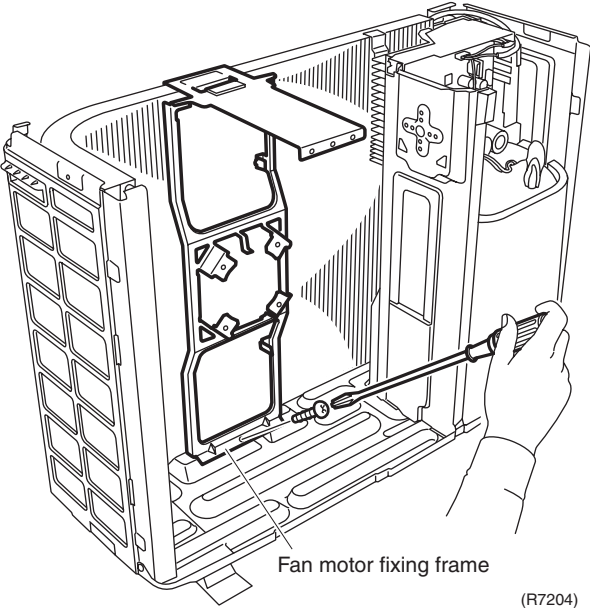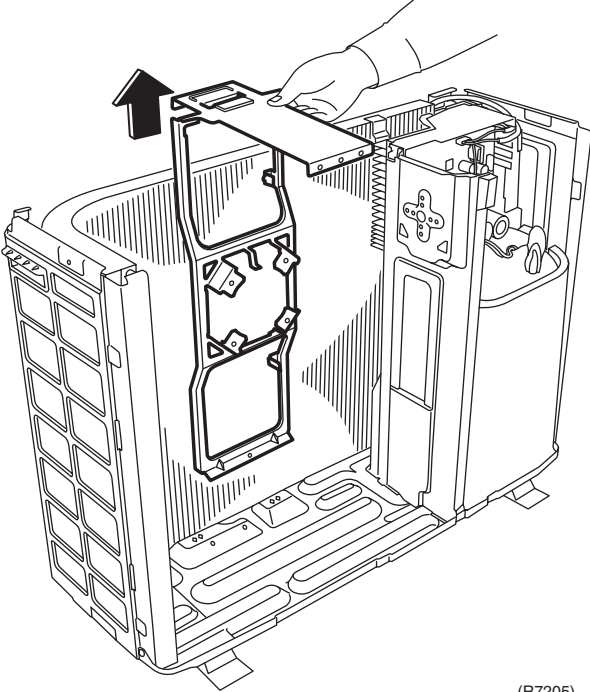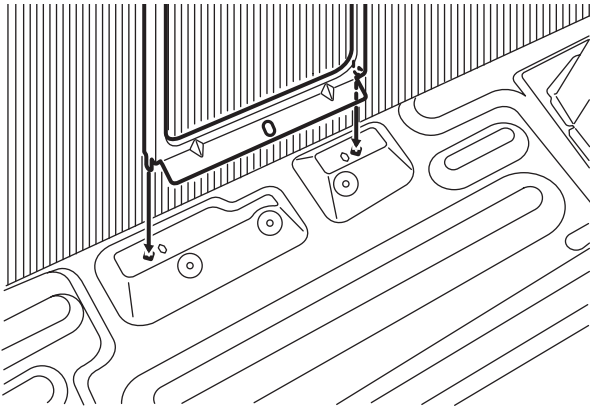


Step	Procedure	Points
8	<p data-bbox="197 217 464 309">Remove the screw and remove the fan motor fixing frame.</p>  <p data-bbox="762 775 975 801">Fan motor fixing frame</p> <p data-bbox="1007 813 1066 835">(R7204)</p>  <p data-bbox="1007 1536 1066 1559">(R7205)</p>  <p data-bbox="1015 2007 1074 2029">(R7206)</p>	<ul style="list-style-type: none"> <li data-bbox="1094 1576 1445 1668">■ When reassembling, fit the lower hooks into the bottom frame.</li> </ul>

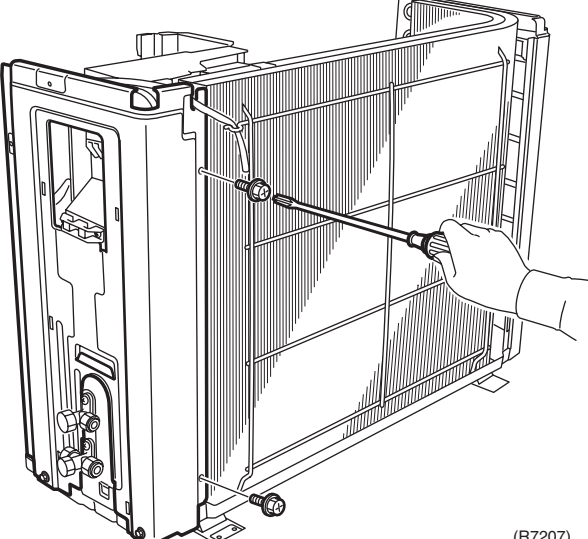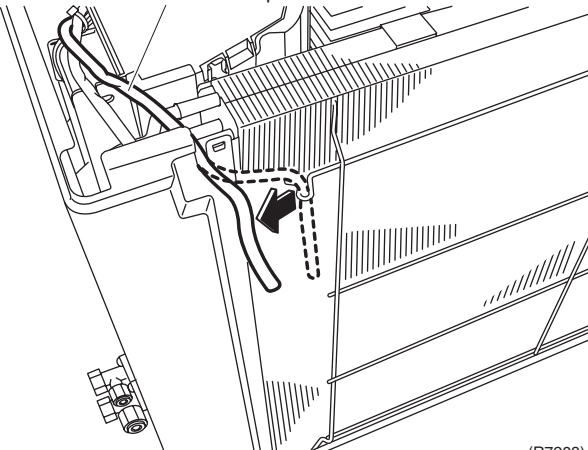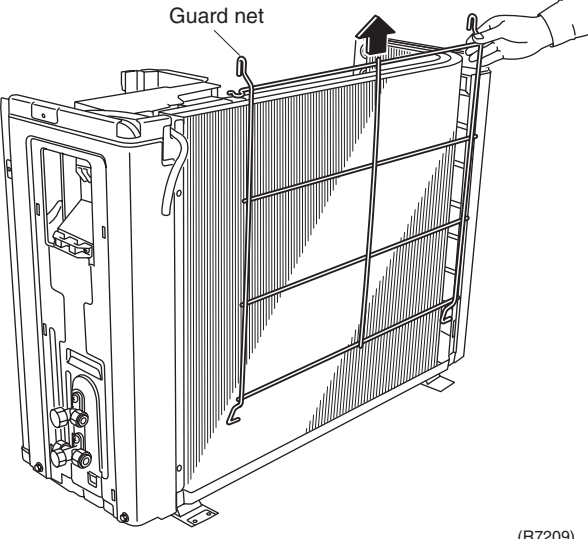
Step	Procedure	Points
4.	Remove the right side panel.	
1	<p>Remove the 2 screws on the rear side.</p>  <p>(R7207)</p>	
2	<p>Release the outdoor temperature thermistor.</p>  <p>Outdoor temperature thermistor</p> <p>(R7208)</p>	
3	<p>Lift up the guard net and remove it.</p>  <p>Guard net</p> <p>(R7209)</p>	

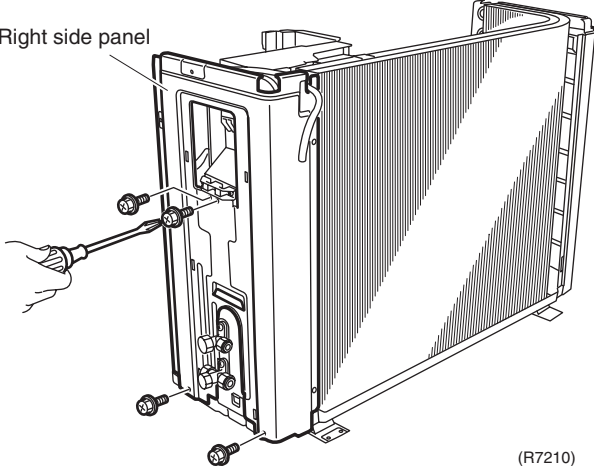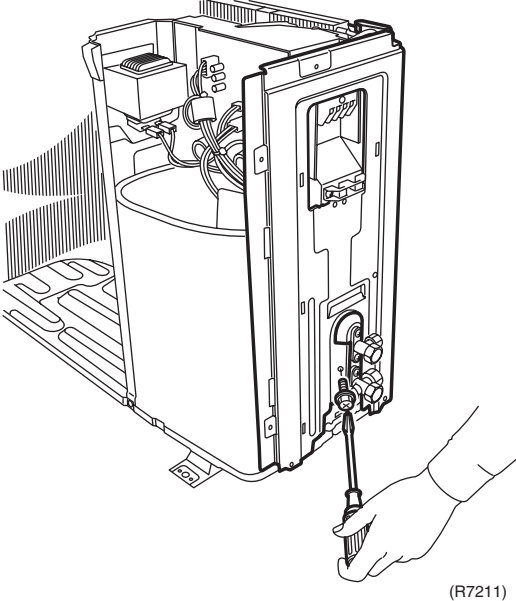Step	Procedure	Points
4	Remove the 4 screws on the right side panel.	
	 <p>Right side panel</p> <p>(R7210)</p>	
5	Remove the screw near the stop valves.	
	 <p>(R7211)</p>	

Step	Procedure	Points
6	Unfasten the hook on the rear side.	<ul style="list-style-type: none"> <li>■ When reassembling, make sure to fit the hook.</li> </ul>
7	Lift up the right side panel and remove it.	<ul style="list-style-type: none"> <li>■ When reassembling, make sure to fit the hook.</li> </ul>

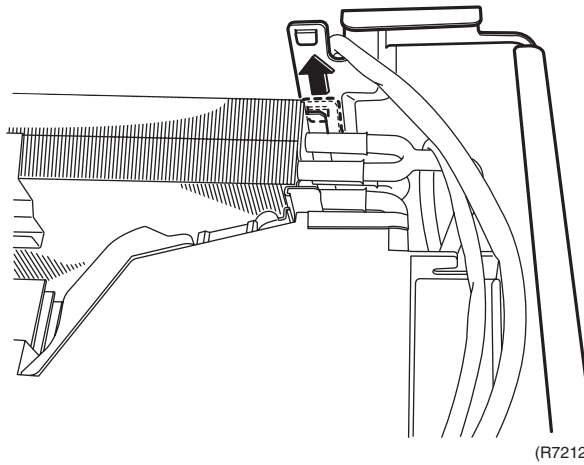

(R7212)

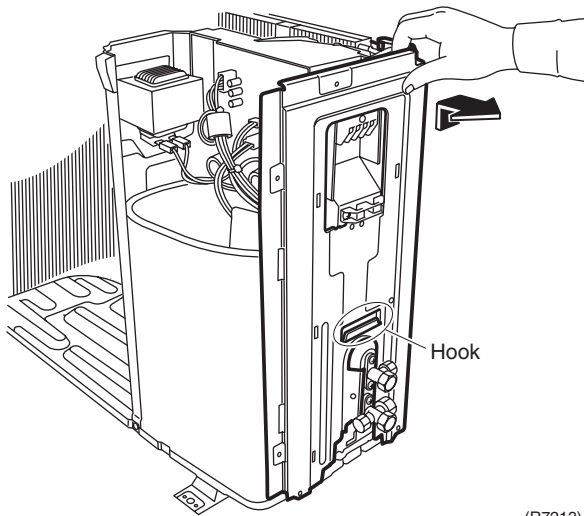




(R7213)




## 3.2 Removal of Electrical Box
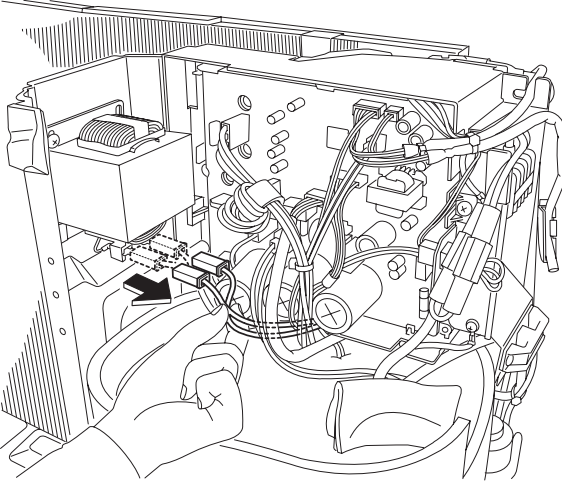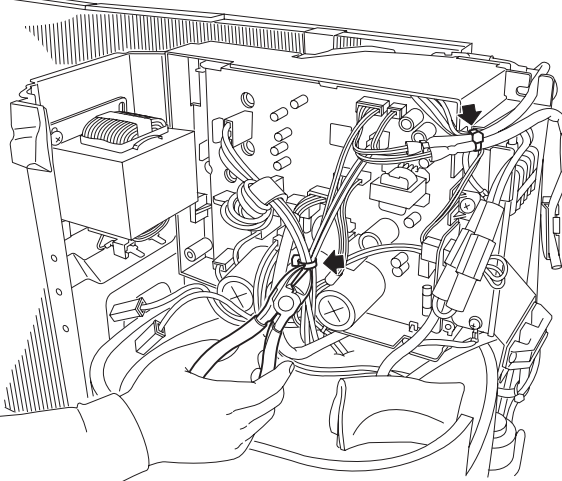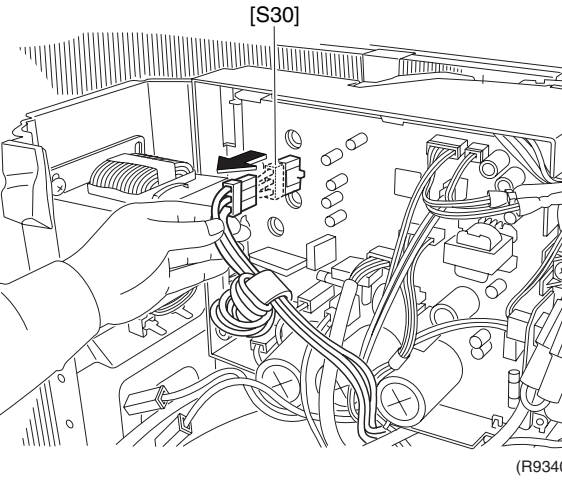
### Procedure







**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Disconnect the 2 connectors for the reactor.	 <p style="text-align: right;">(R9338)</p>	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>■ Remove the panels and disconnect the connector for the fan motor according to the “Removal of Outer Panels / Fan Motor”.</li> </ul>
2	Cut the clamps at 2 locations.	 <p style="text-align: right;">(R9339)</p>	
3	Disconnect the connector for the compressor [S30].	 <p style="text-align: right;">(R9340)</p>	<ul style="list-style-type: none"> <li>■ When reassembling, coil the excessive lead wire and hang the loop on the hook.</li> </ul>

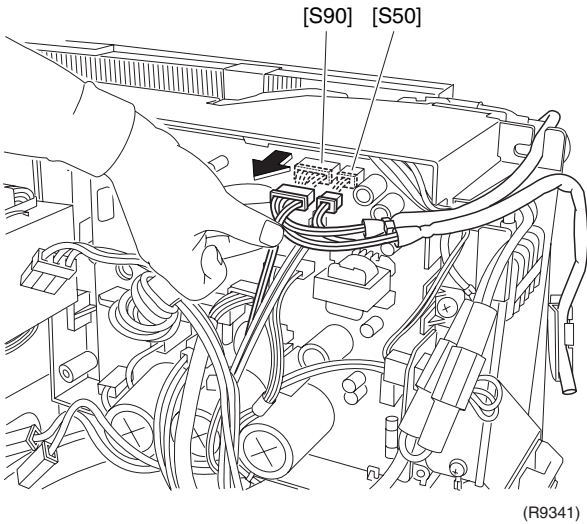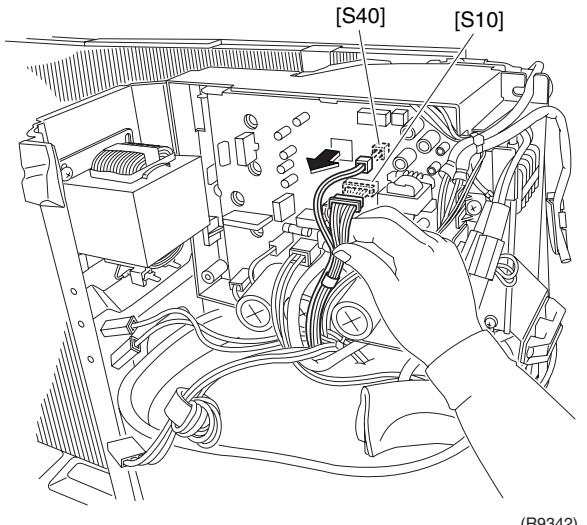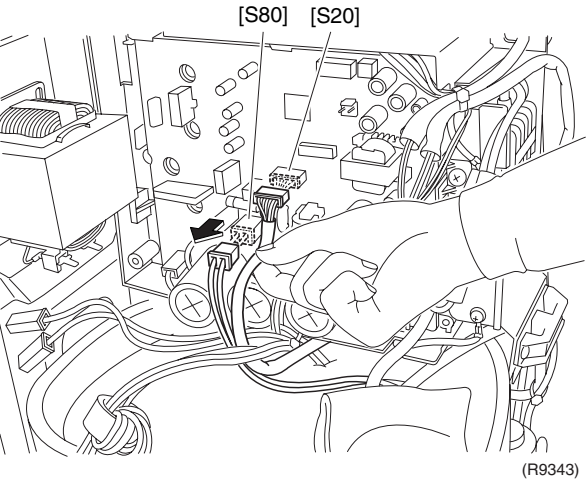Step	Procedure	Points
4	<p>Disconnect the connectors for the magnetic relay [S50] and for the thermistors [S90].</p>	 <p>(R9341)</p>
5	<p>Disconnect the connectors for the filter PCB [S10] and for the overload protector [S40].</p>	 <p>(R9342)</p>
6	<p>Disconnect the connectors for the electronic expansion valve coil [S20] and for the four way valve coil [S80].</p>	 <p>(R9343)</p>

Step	Procedure	Points
7	Disconnect the connectors for the filter PCB [HL3] [HN3].	
8	Remove the wire harness for standby electricity saving.	
9	Cut the clamps at 2 locations.	

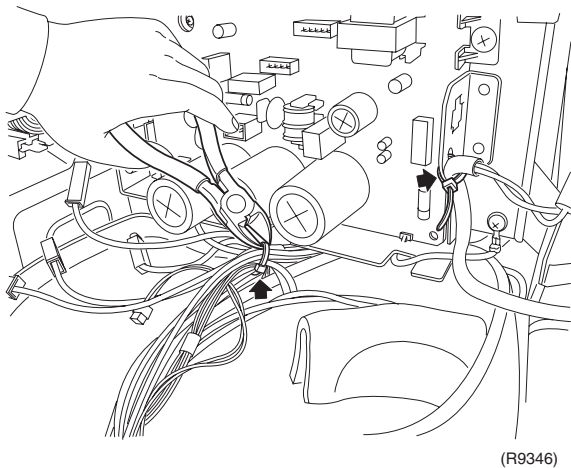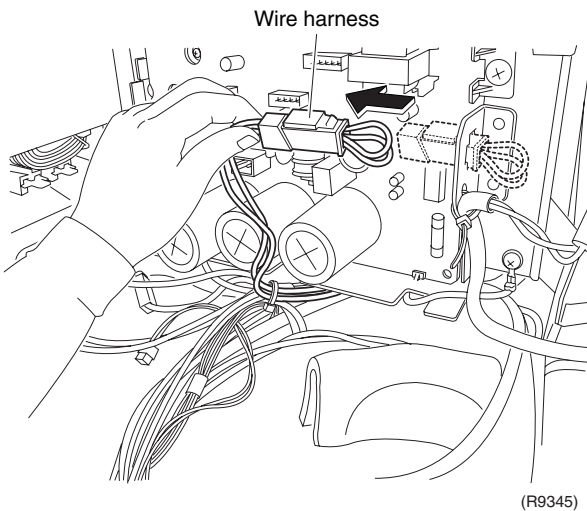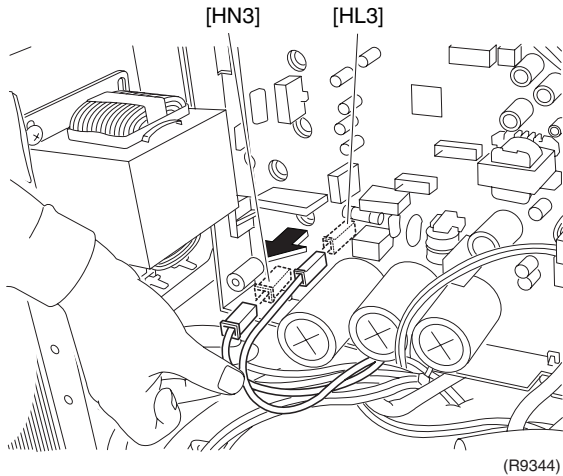

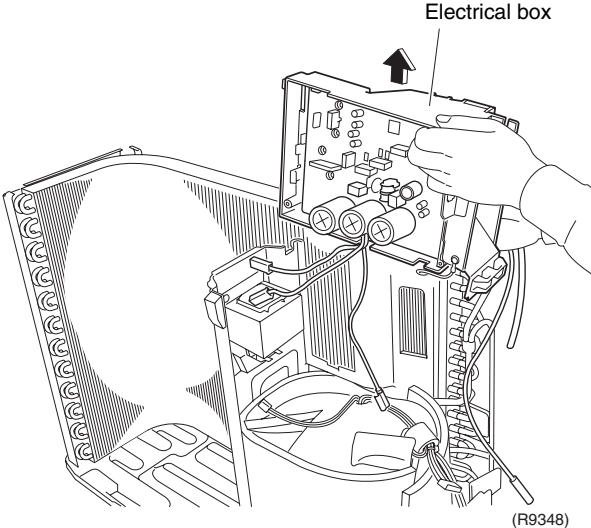Step	Procedure	Points
<p>10</p>	<p>Lift and remove the electrical box.</p> 	









### 3.3 Removal of Thermistors

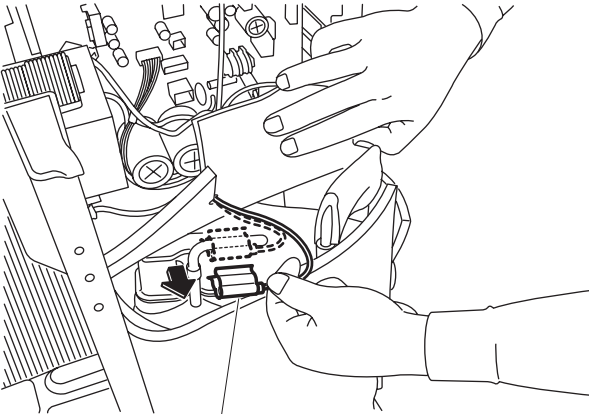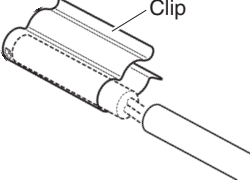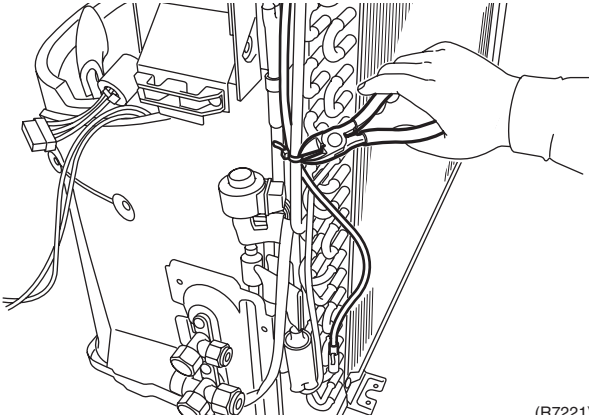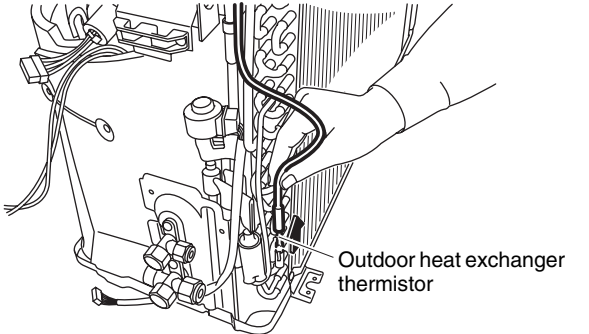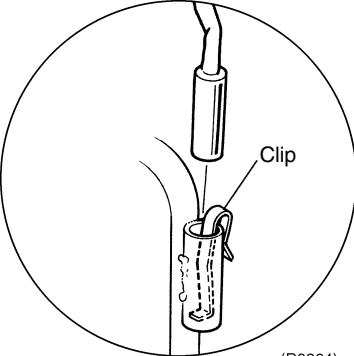**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Release the discharge pipe thermistor.	 <p style="text-align: center;">Discharge pipe thermistor (R0267)</p>	<p>■ Be careful not to lose the clip for the thermistor.</p>  <p style="text-align: center;">Clip</p> <p style="text-align: right;">(R12279)</p>
2	Cut the clamp.	 <p style="text-align: right;">(R7221)</p>	
3	Pull out the outdoor heat exchanger thermistor.	 <p style="text-align: center;">Outdoor heat exchanger thermistor</p> <p style="text-align: right;">(R7222)</p>	<p>■ Be careful not to lose the clip for the thermistor.</p>  <p style="text-align: center;">Clip</p> <p style="text-align: right;">(R3264)</p>



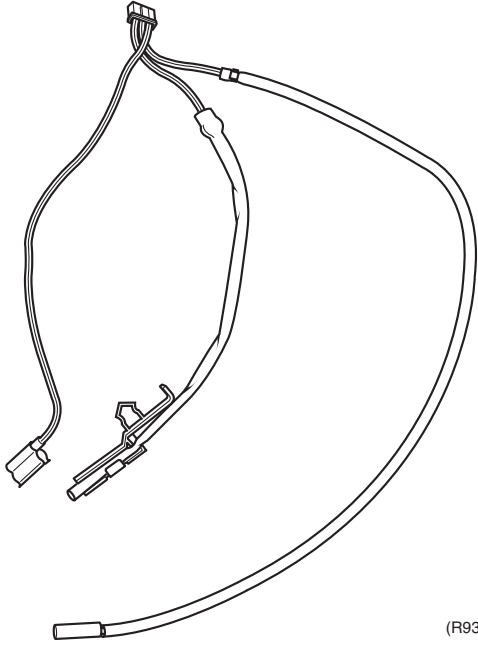
Step	Procedure	Points
4	<p data-bbox="199 219 363 277">Feature of the thermistors</p>  <p data-bbox="970 846 1034 869">(R9356)</p>	




### 3.4 Removal of PCB

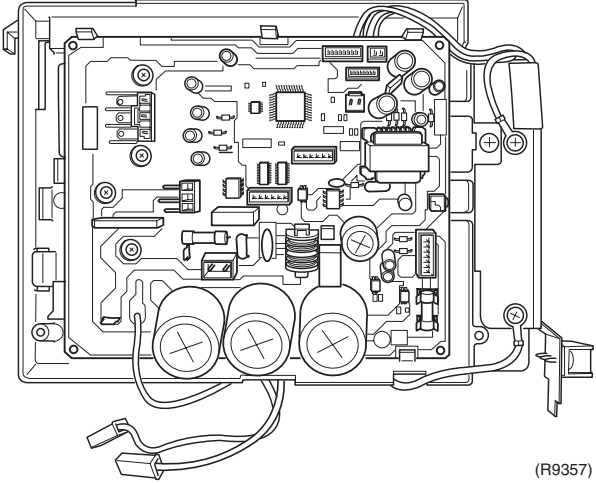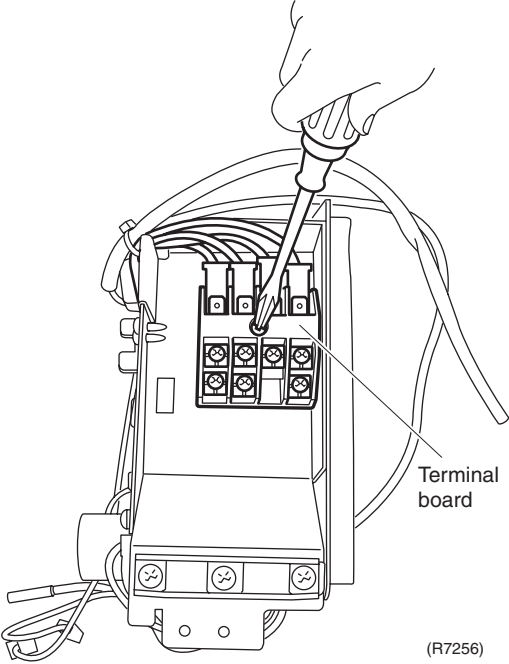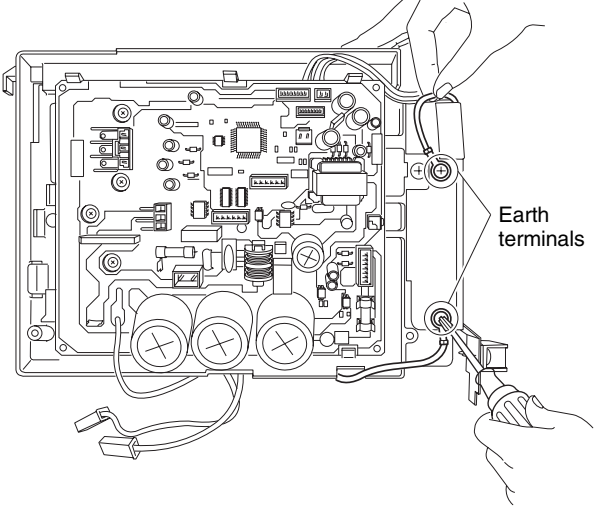**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the main PCB.</p> <p>1 Feature of the main PCB</p> <p>2 Remove the screw on the terminal board.</p> <p>3 Release the 2 earth terminals.</p>	 <p>(R9357)</p>  <p>Terminal board</p> <p>(R7256)</p>  <p>Earth terminals</p> <p>(R9358)</p>	<ul style="list-style-type: none"> <li>■ You can remove the main PCB when you disconnect the lead wires on the terminal board without removing the electrical box.</li> </ul>

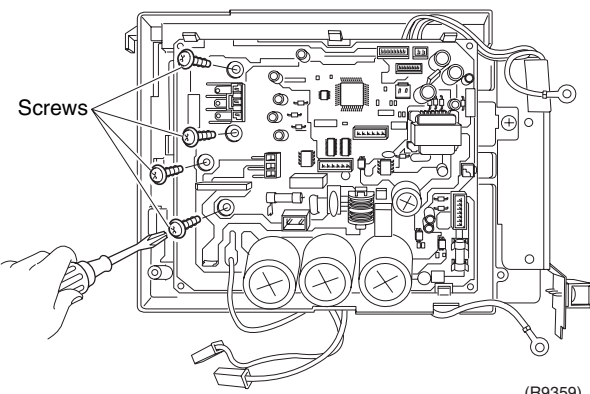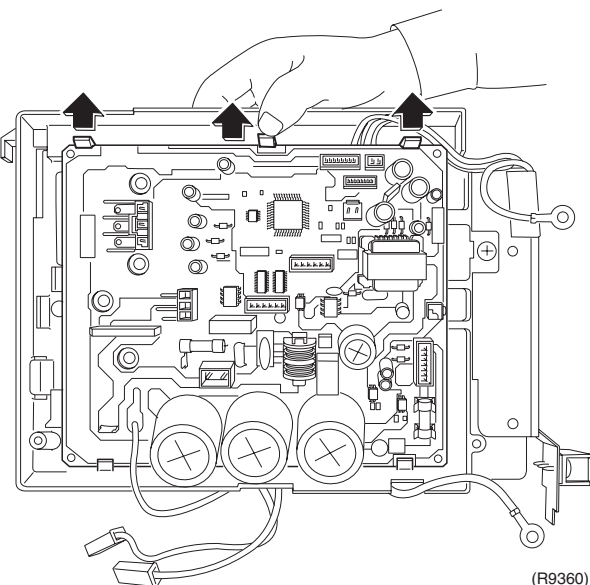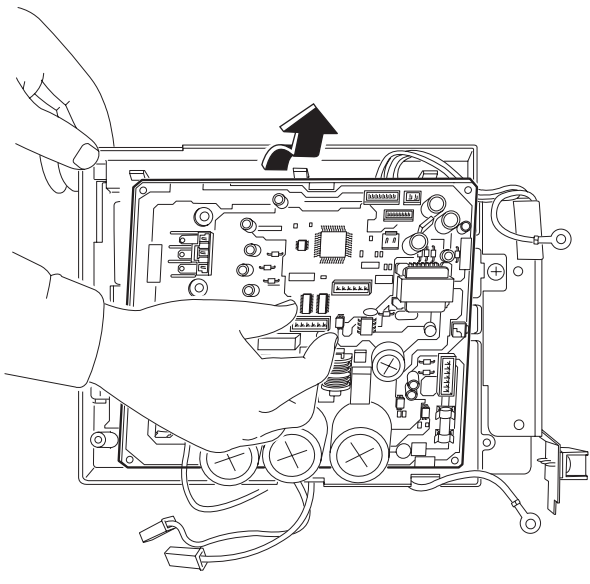Step	Procedure	Points
4	Remove the 4 screws.	
	 <p>(R9359)</p>	
5	Unfasten the 3 hooks on the upper side.	
	 <p>(R9360)</p>	
6	Lift and pull out the main PCB.	
	 <p>(R9361)</p>	




Step	Procedure	Points
7	<p data-bbox="199 215 422 275">Feature of the main PCB</p> <p data-bbox="986 801 1058 824">(R12189)</p>	<p data-bbox="1093 215 1437 246">■ Refer to page 25 for detail.</p> <p data-bbox="1093 280 1422 313">[S10] [HL3] [HN3]: filter PCB</p> <p data-bbox="1093 315 1401 376">[S20]: electronic expansion valve coil</p> <p data-bbox="1093 378 1302 412">[S30]: compressor</p> <p data-bbox="1093 414 1374 448">[S40]: overload protector</p> <p data-bbox="1093 450 1334 483">[S50]: magnetic relay</p> <p data-bbox="1093 486 1275 519">[S70]: fan motor</p> <p data-bbox="1093 521 1377 555">[S80]: four way valve coil</p> <p data-bbox="1093 557 1294 591">[S90]: thermistors</p>



### 3.5 Removal of Reactor / Partition Plate

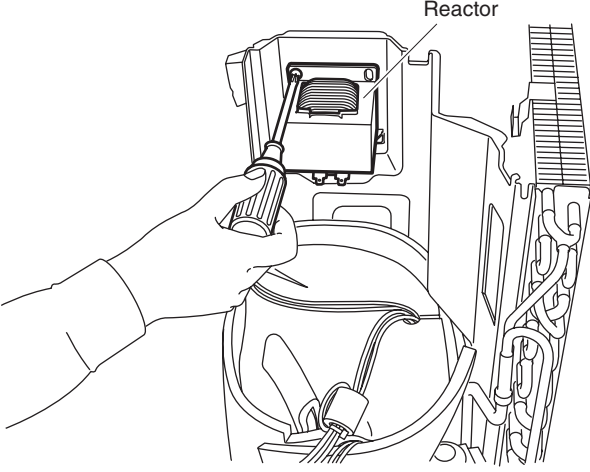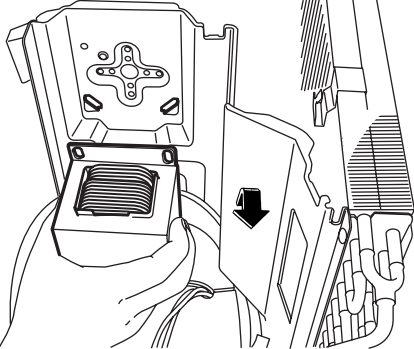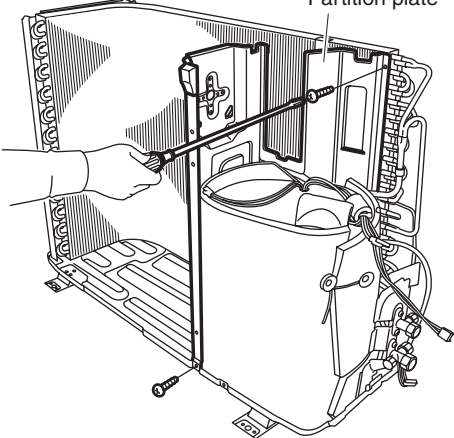**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the reactor.</p> <p>1 Remove the screw and remove the reactor.</p>	 <p>(R7224)</p>  <p>(R7225)</p>	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>■ Remove the outer panels according to the "Removal of Outer Panels / Fan Motor".</li> <li>■ Remove the electrical box according to the "Removal of Electrical Box".</li> </ul>
<p>2. Remove the partition plate.</p> <p>1 Remove the 2 screws.</p>	 <p>(R7226)</p>	



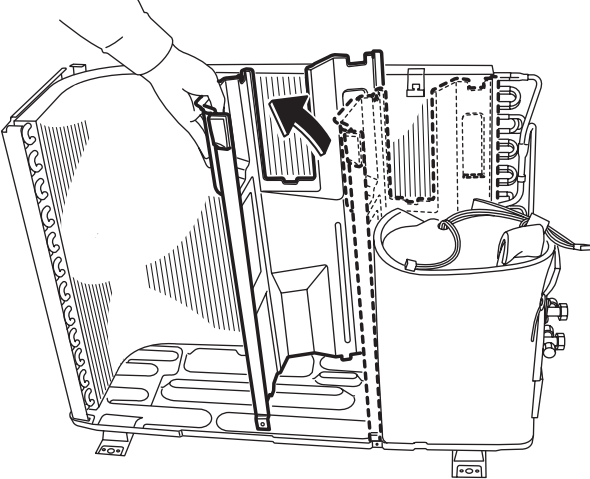
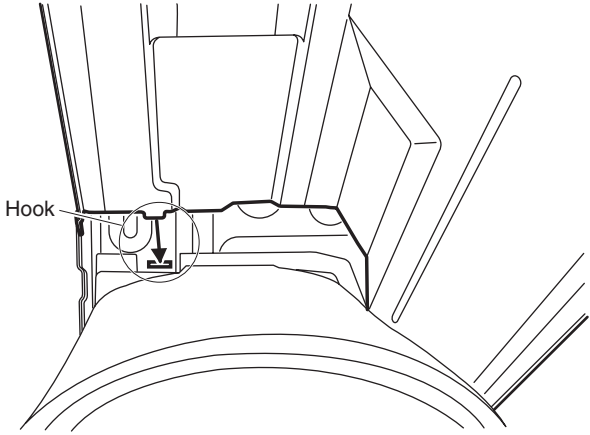
Step	Procedure	Points
<p>2</p>	<p>The partition plate has a hook on the lower side. Lift and pull the partition plate to remove.</p>  <p>(R7227)</p>  <p>(R7228)</p>	<ul style="list-style-type: none"> <li>■ When reassembling, fit the lower hook into the bottom frame.</li> </ul>

### 3.6 Removal of Sound Blanket

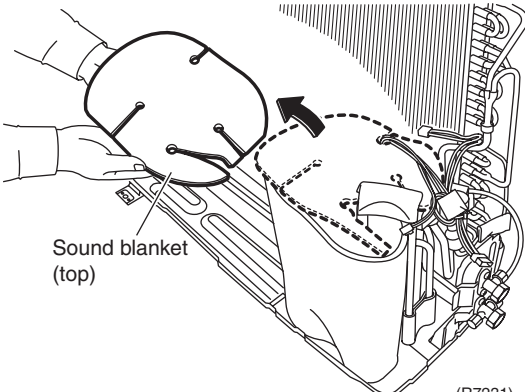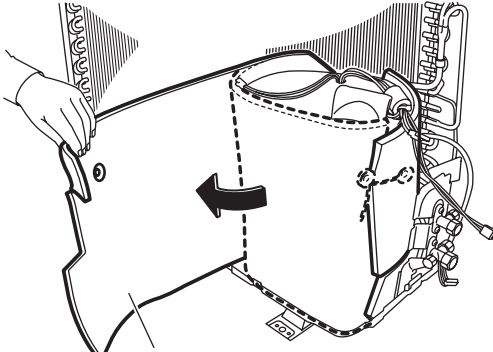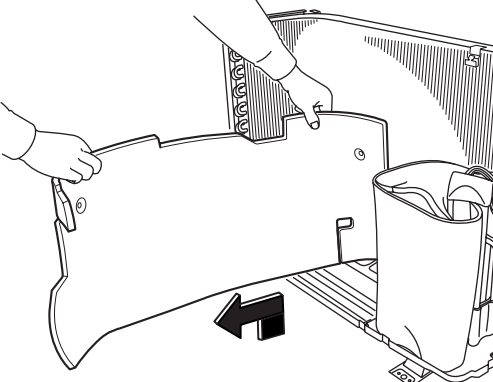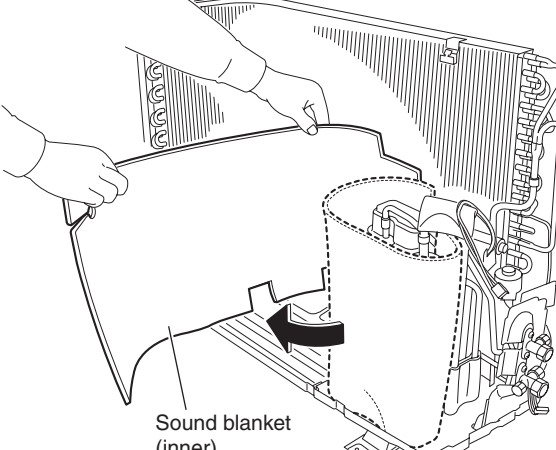**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the sound blanket (top).	 <p style="text-align: right;">(R7231)</p>	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>■ Remove the outer panels according to the "Removal of Outer Panels / Fan Motor".</li> <li>■ Remove the electrical box according to the "Removal of Electrical Box".</li>   <li>■ Since the piping ports are torn easily, remove the sound blanket carefully.</li> </ul>
2	Untie the string and open the sound blanket (outer).	 <p style="text-align: right;">(R7229)</p>	
3	Lift and remove the sound blanket (outer).	 <p style="text-align: right;">(R12212)</p>	
4	Pull the sound blanket (inner) out.	 <p style="text-align: right;">(R11887)</p>	









### 3.7 Removal of Four Way Valve

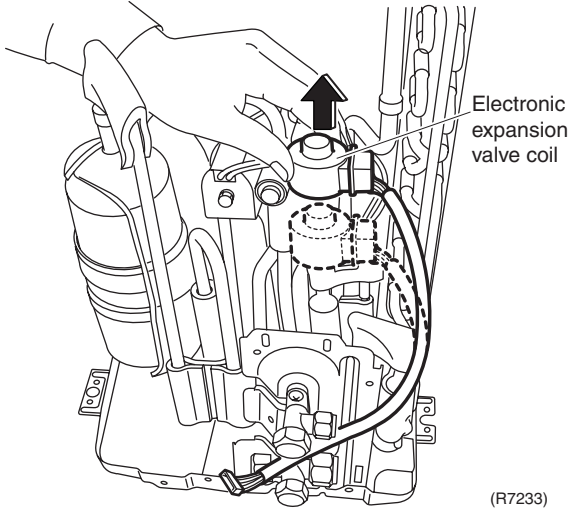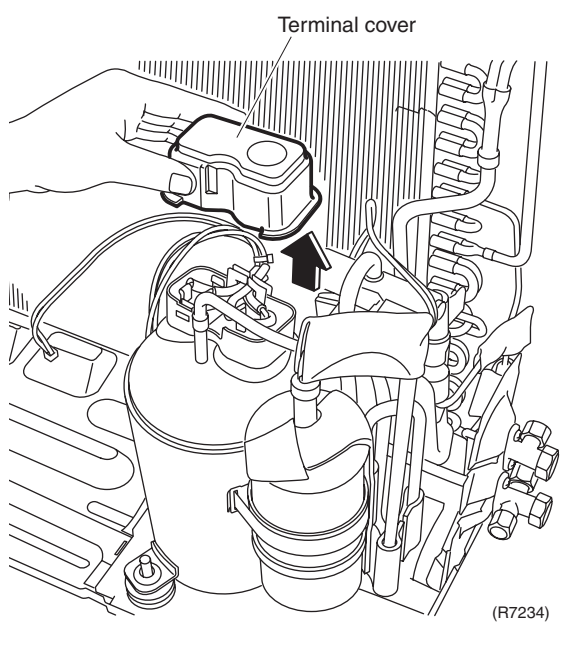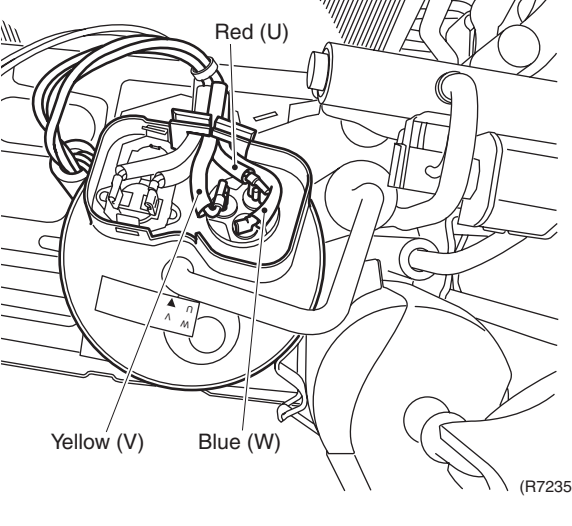
**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Pull out the electronic expansion valve coil.	 <p>(R7233)</p>	
2	Remove the terminal cover.	 <p>(R7234)</p>	
3	Disconnect the lead wires of the compressor.	 <p>(R7235)</p>	

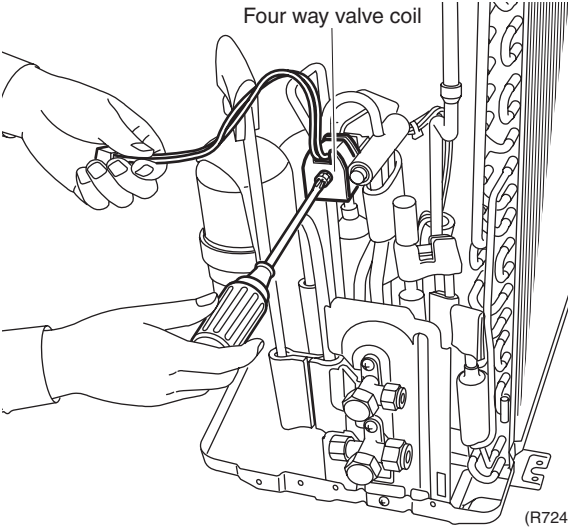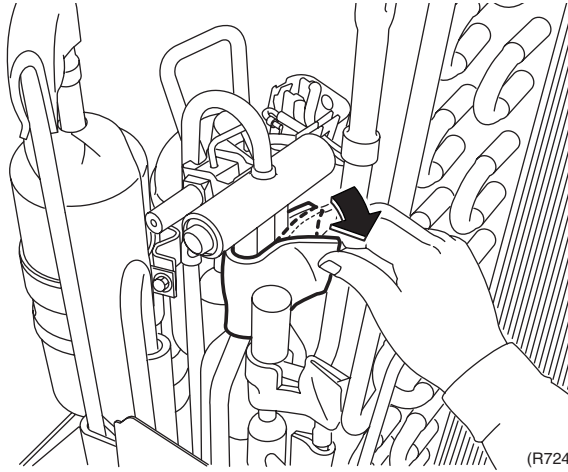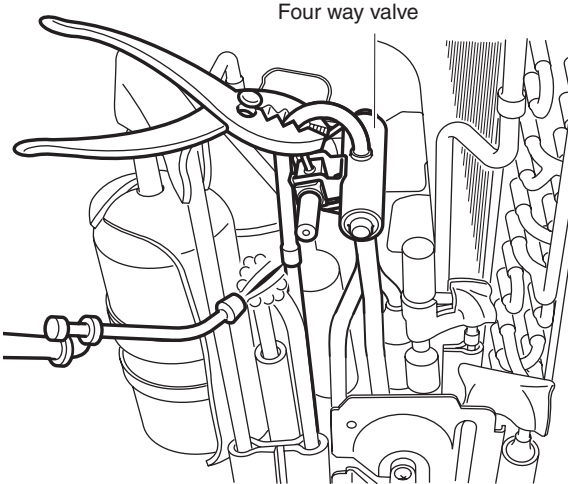Step	Procedure	Points
<p>4 Remove the screw and remove the four way valve coil.</p>	 <p style="text-align: center;">Four way valve coil</p> <p style="text-align: right;">(R7247)</p>	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p> <p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant gas is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>	 <p style="text-align: center;">Four way valve</p> <p style="text-align: right;">(R7248)</p>	<p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>
<p>6 Heat up the brazed part and withdraw the piping with pliers.</p>	 <p style="text-align: center;">Four way valve</p> <p style="text-align: right;">(R7249)</p>	


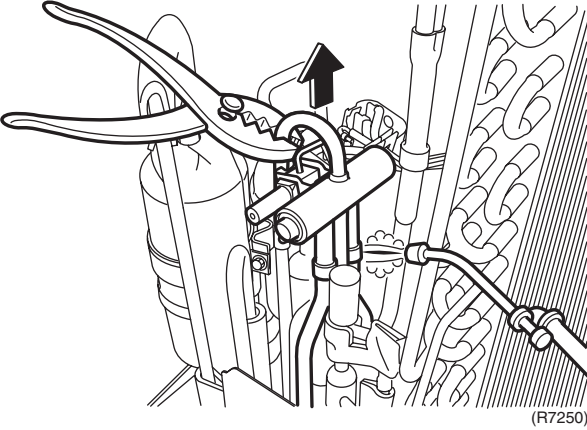
Step	Procedure	Points
	 <p>(R7250)</p>	<p><b>Note:</b></p> <ul style="list-style-type: none"><li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li><li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li><li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li></ul>

### 3.8 Removal of Compressor

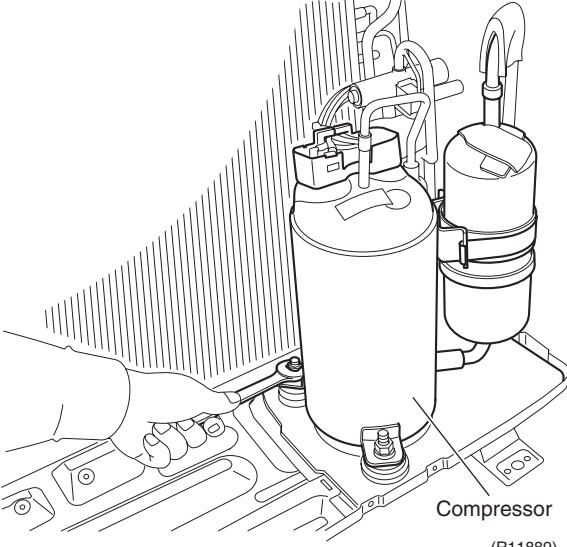
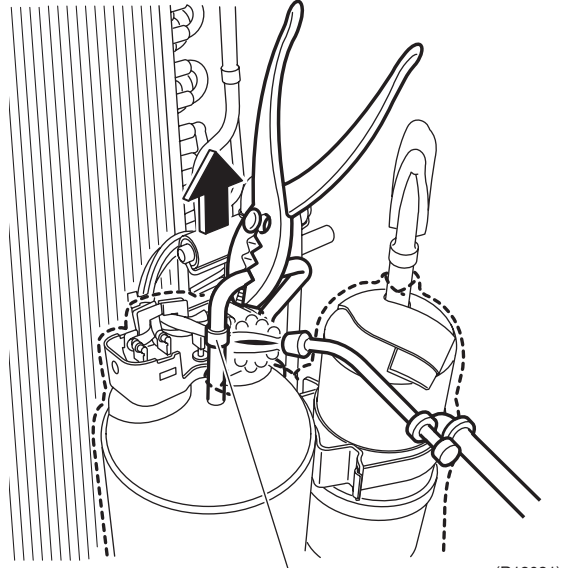
**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	<p>Remove the 2 nuts of the compressor.</p> 	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Warning</b> Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.</p>
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>		<p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
2	<p>Heat up the brazed part of the discharge side and disconnect.</p>	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol> <p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>

Step	Procedure	Points
3	Heat up the brazed part of the suction side and disconnect.	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> </ul>
4	Lift the compressor up and remove it.	<ul style="list-style-type: none"> <li>■ Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin.</li> </ul>

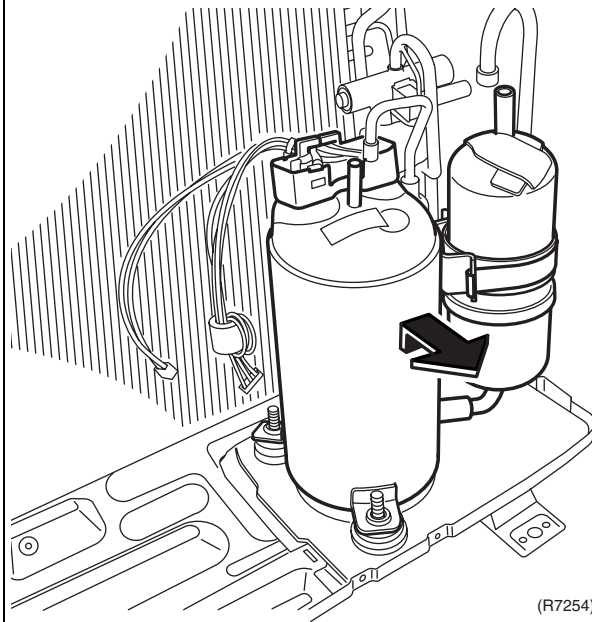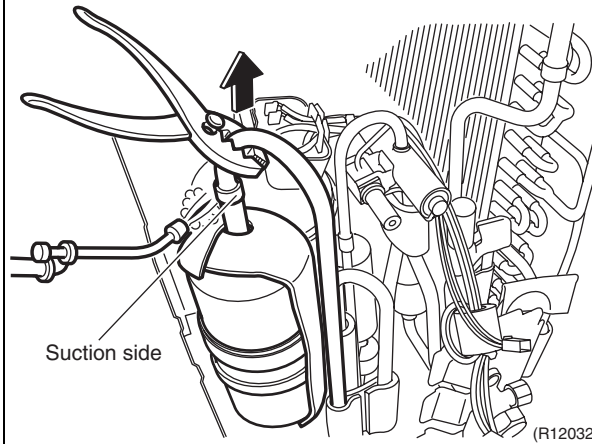

# 4. Outdoor Unit - RK(X)S25/35G2V1B9

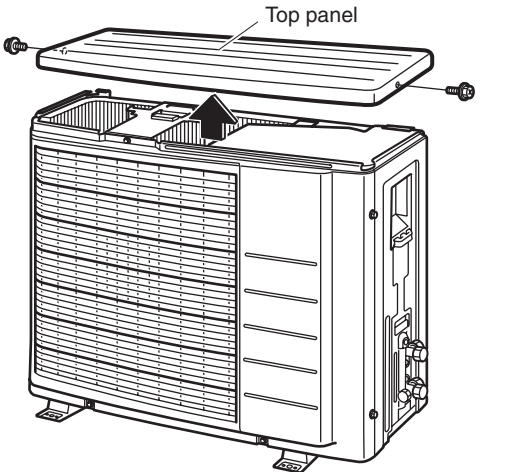
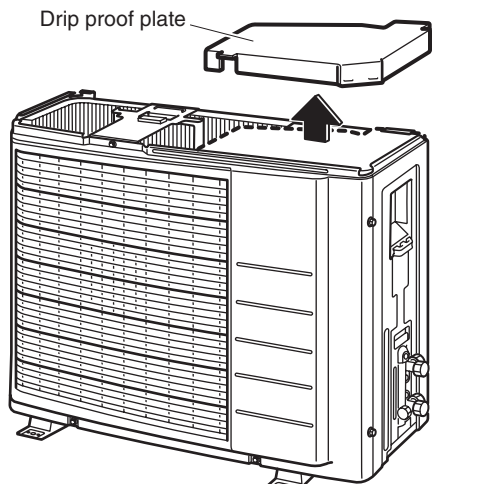
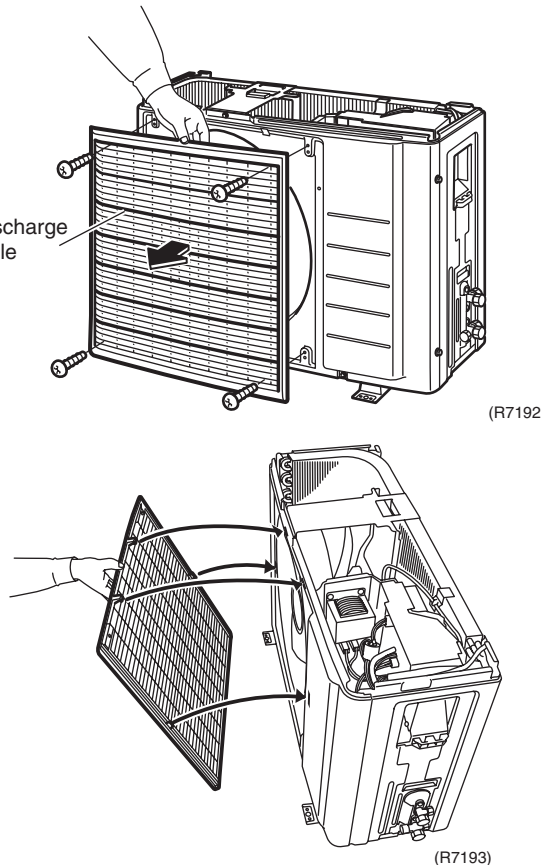
## 4.1 Removal of Outer Panels / Fan Motor



**Procedure**







**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.




Step	Procedure	Points
1. Appearance features		<ul style="list-style-type: none"> <li>Take care not to cut your finger by the fins of the outdoor heat exchanger.</li> </ul>
2. Remove the panels.	<p>1 Remove the screw of the stop valve cover. Pull down the stop valve cover and remove it.</p>	<ul style="list-style-type: none"> <li>The stop valve cover is united with the shield plate.</li> <li>When reassembling, make sure to fit the 5 hooks.</li> </ul>


Step	Procedure	Points
2	Remove the 2 screws and lift the top panel.	 <p>Top panel</p> <p>(R7190)</p>
3	Remove the drip proof plate.	 <p>Drip proof plate</p> <p>(R7191)</p>
4	Remove the 4 screws and remove the discharge grille.	 <p>Discharge grille</p> <p>(R7192)</p> <p>(R7193)</p> <ul style="list-style-type: none"> <li>■ The discharge grille has 4 hooks.</li> </ul>


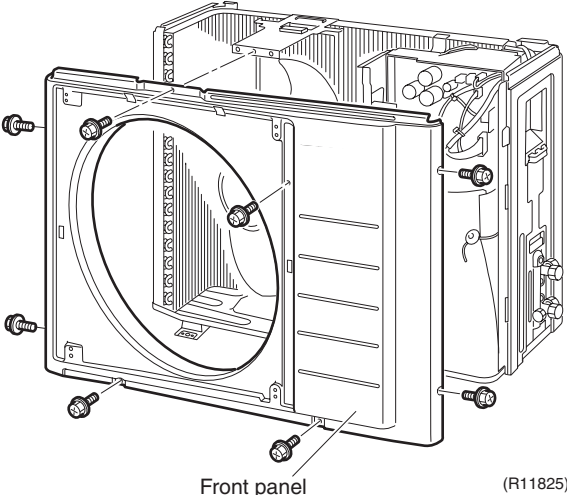
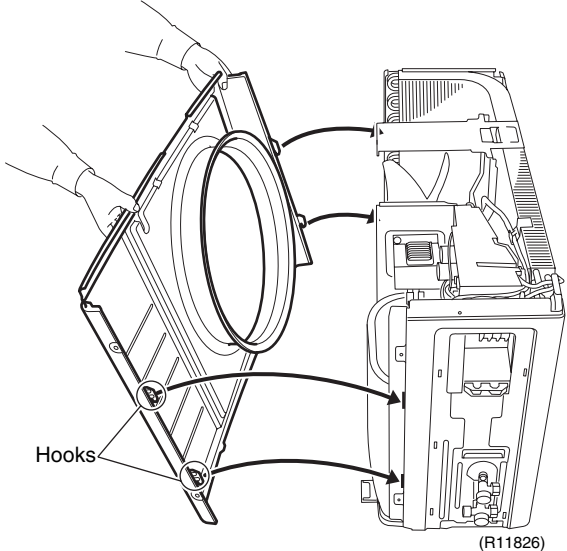
Step	Procedure	Points
5	<p>Remove the 8 screws of the front panel.</p> 	
6	<p>Unfasten the hooks. Pull and remove the front panel.</p> 	<p>■ The front panel has 4 hooks.</p>

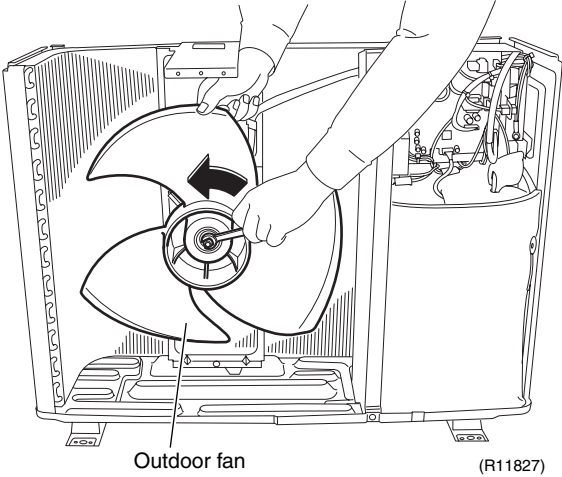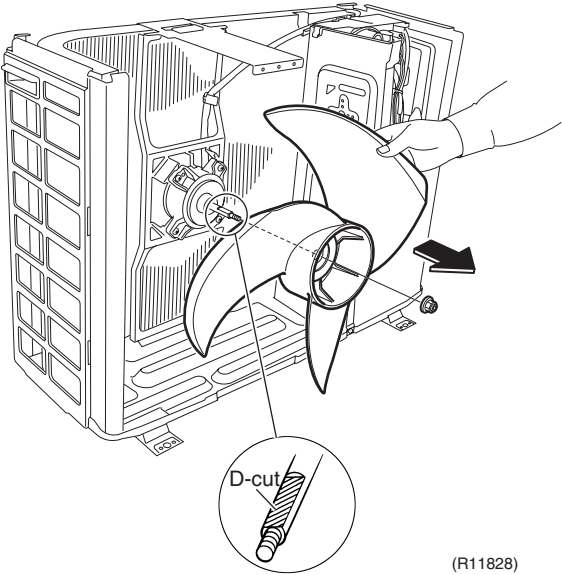
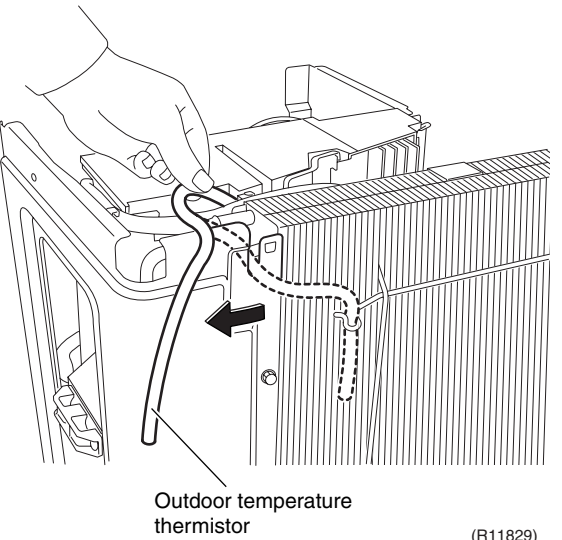
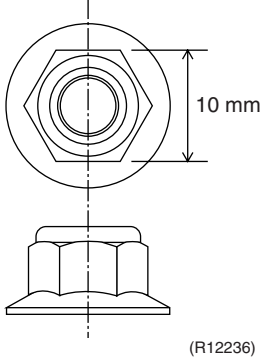




Step	Procedure	Points
<p>3. Remove the fan motor.</p>	<p>1 Remove the washer-fitted nut of the outdoor fan.</p>  <p>Outdoor fan (R11827)</p> <p>2 Remove the outdoor fan.</p>  <p>D-cut (R11828)</p> <p>3 Release the outdoor temperature thermistor.</p>  <p>Outdoor temperature thermistor (R11829)</p>	<ul style="list-style-type: none"> <li>■ The screw has reverse winding.</li> <li>■ Nut size: M6</li> </ul>  <p>10 mm (R12236)</p> <ul style="list-style-type: none"> <li>■ When reassembling, align ▼ mark of the outdoor fan with D-cut section of the motor shaft.</li> </ul>

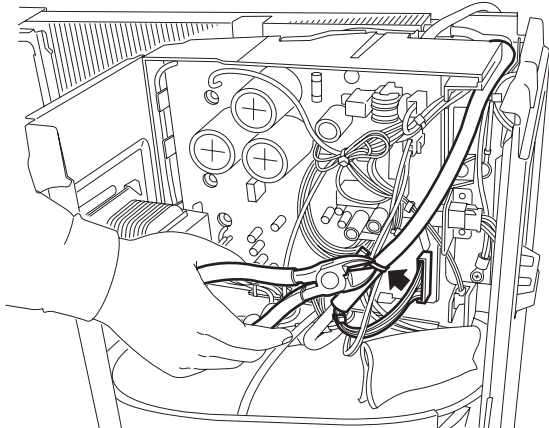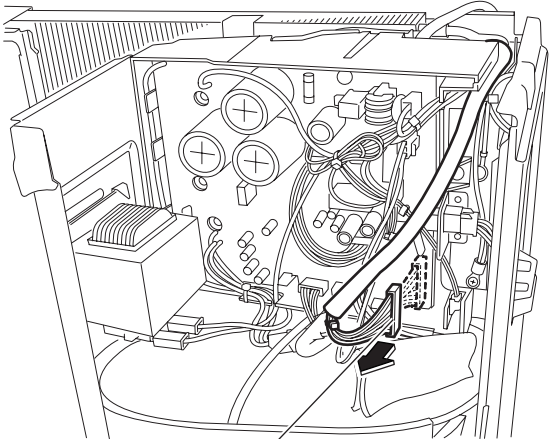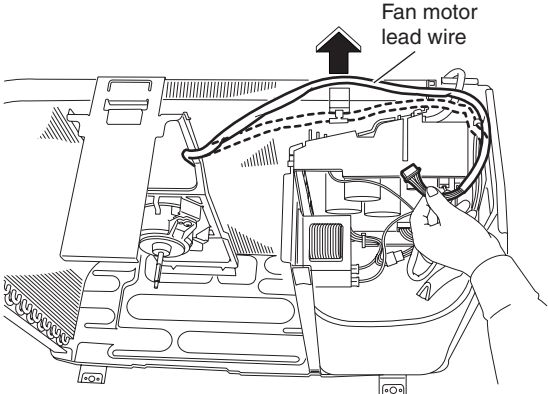Step	Procedure	Points
4	<p>Cut the clamp.</p>  <p>(R11830)</p>	
5	<p>Disconnect the connector for the fan motor [S70].</p>  <p>[S70] (R11831)</p>	
6	<p>Release the fan motor lead wire from the hook.</p>  <p>Fan motor lead wire</p> <p>(R11832)</p>	

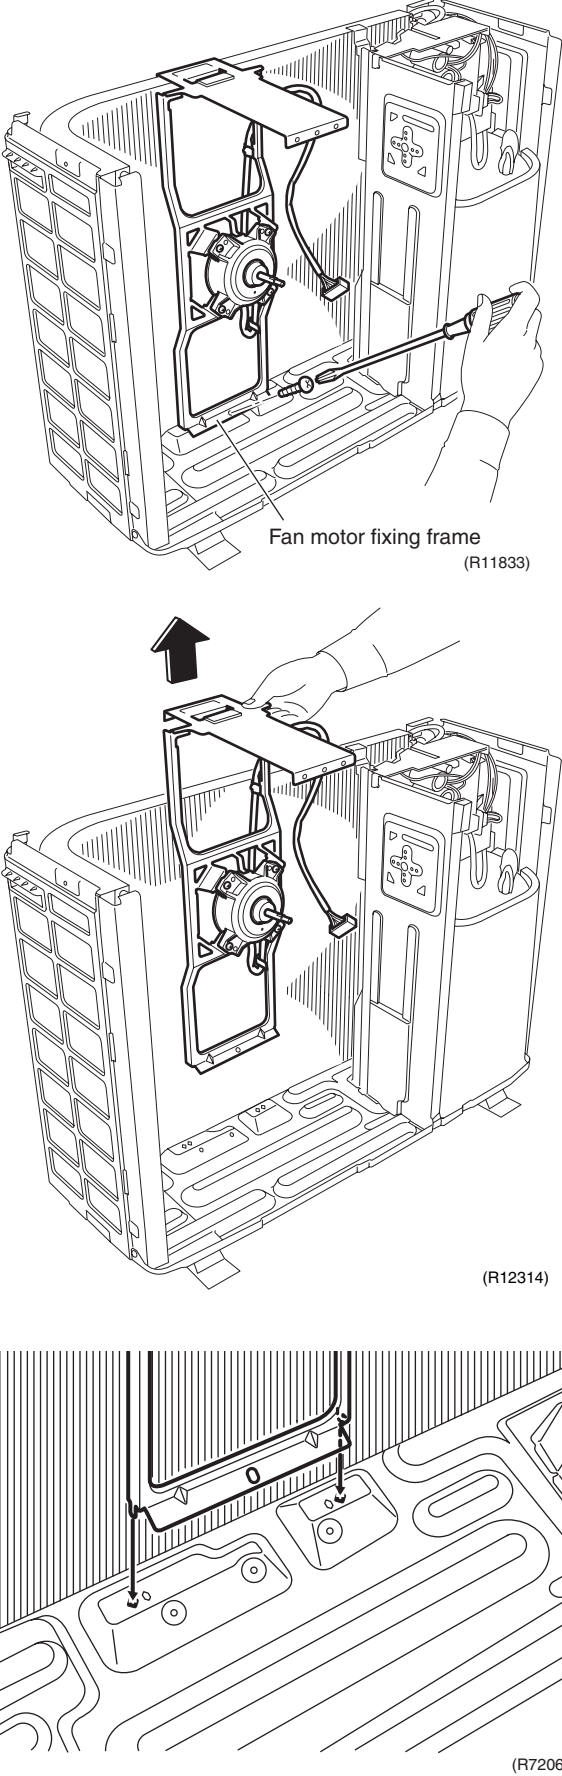Step	Procedure	Points
7	Remove the screw and remove the fan motor fixing frame.	<ul style="list-style-type: none"> <li>■ When reassembling, fit the lower hooks into the bottom frame.</li> </ul>
 <p data-bbox="767 763 1034 808">Fan motor fixing frame (R11833)</p> <p data-bbox="983 1503 1054 1525">(R12314)</p> <p data-bbox="1015 1984 1070 2007">(R7206)</p>		

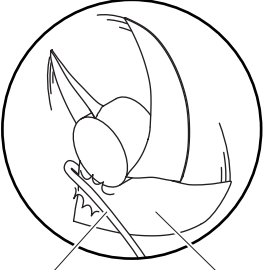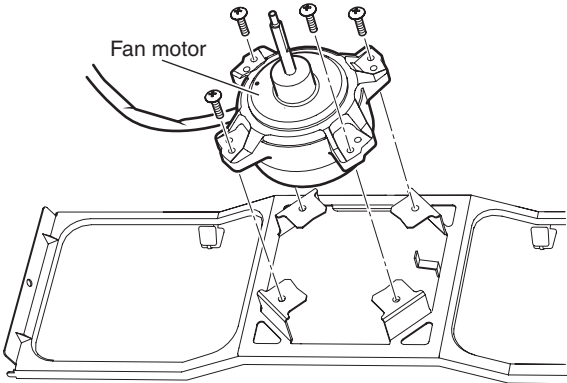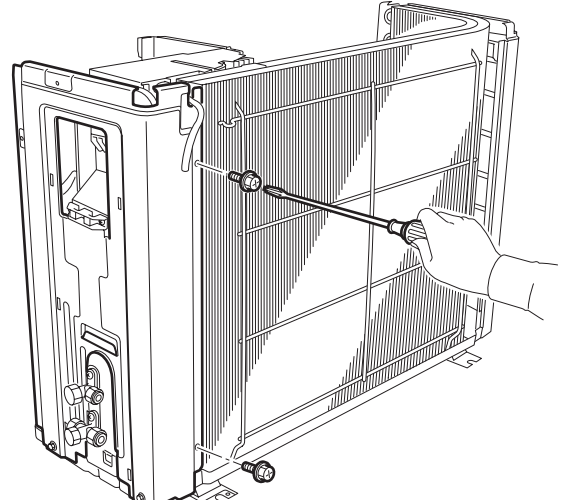Step	Procedure	Points
8	Open the hooks and release the fan motor lead wire.	<ul style="list-style-type: none"> <li>When reassembling, put the fan motor lead wire through the back of the fan motor (so as not to be entangled with the outdoor fan).</li> </ul>
9	Remove the 4 screws and remove the fan motor.	 <p>Lead wire      Outdoor fan (R3249)</p>
4. Remove the right side panel.	 <p>Fan motor (R12311)</p>	
1	Remove the 2 screws on the rear side.	 <p>(R12162)</p>

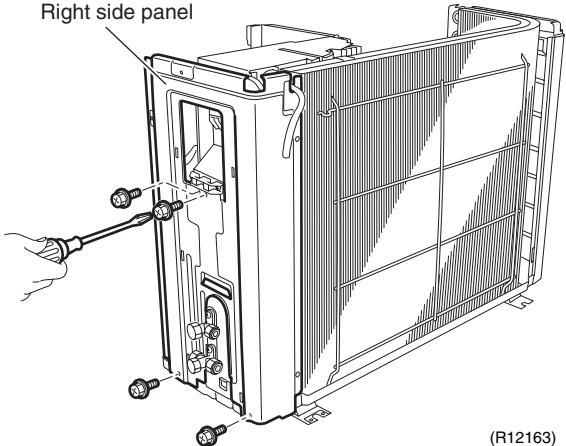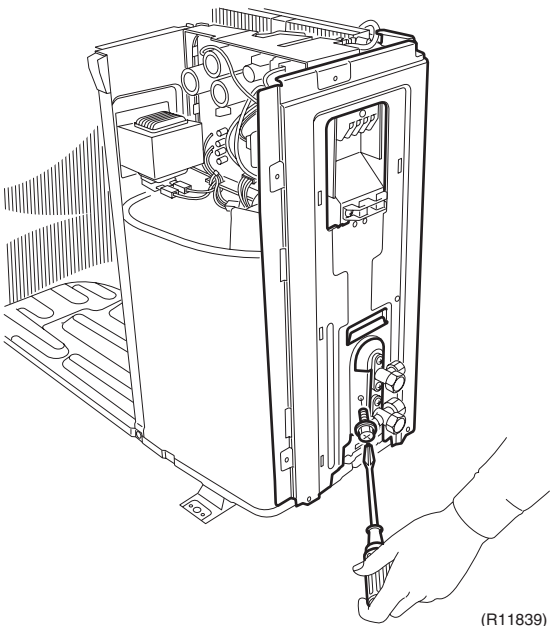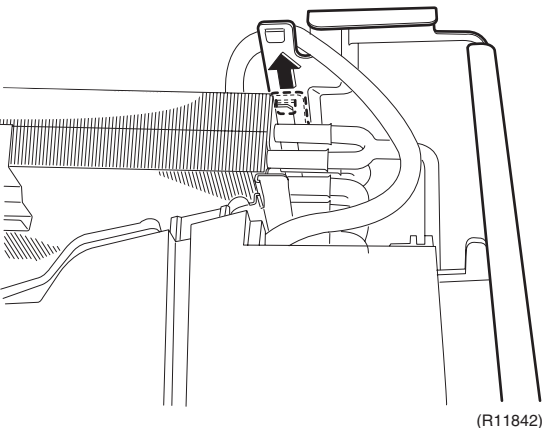Step	Procedure	Points
2	<p>Remove the 4 screws on the right side panel.</p>  <p>Right side panel</p> <p>(R12163)</p>	
3	<p>Remove the screw near the stop valves.</p>  <p>(R11839)</p>	
4	<p>Unfasten the hook on the rear side.</p>  <p>(R11842)</p>	<p>■ When reassembling, make sure to fit the hook.</p>

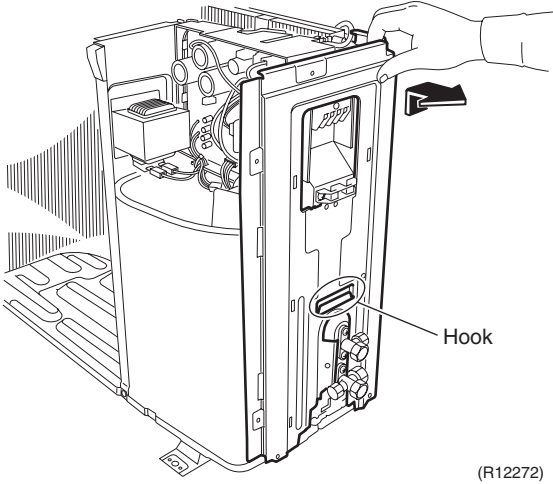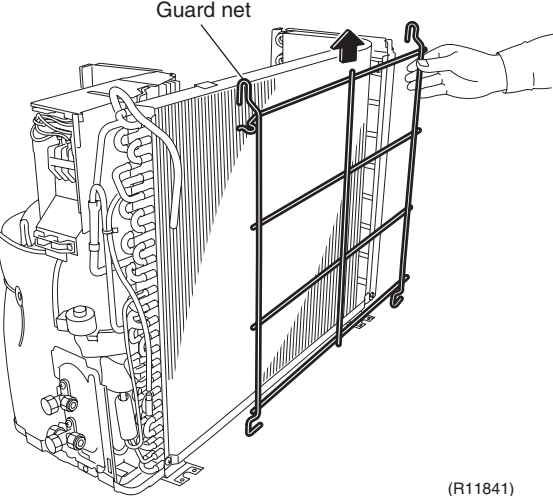Step	Procedure	Points
5	<p>Lift up the right side panel and remove it.</p> 	<ul style="list-style-type: none"> <li>When reassembling, make sure to fit the hook.</li> </ul>
6	<p>Lift up the guard net and remove it.</p> 	




## 4.2 Removal of Electrical Box

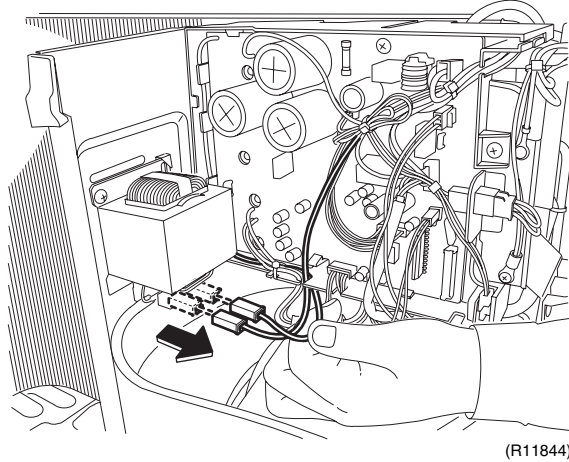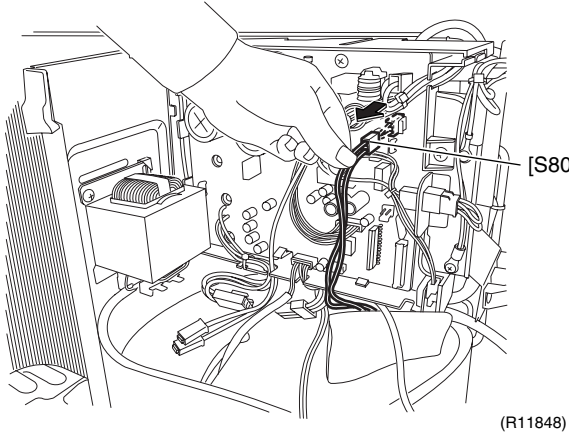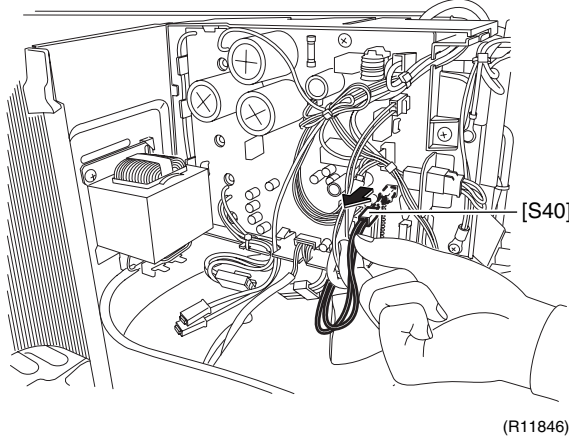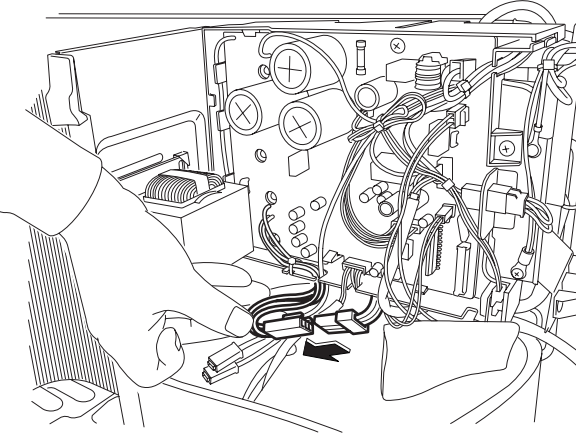
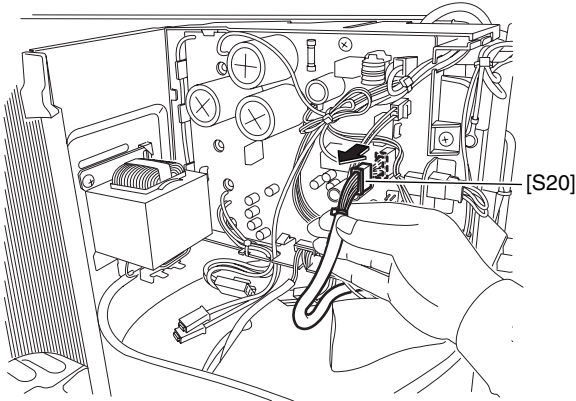
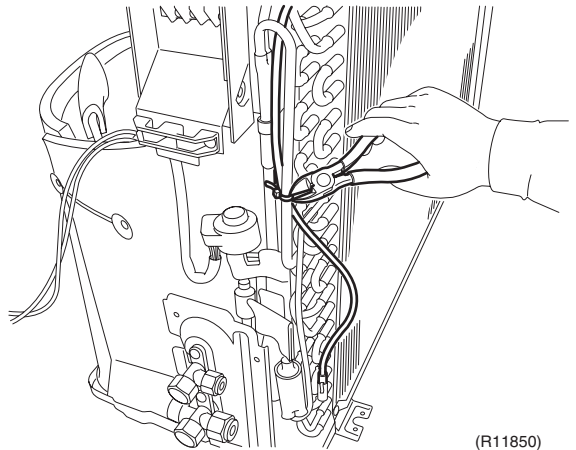
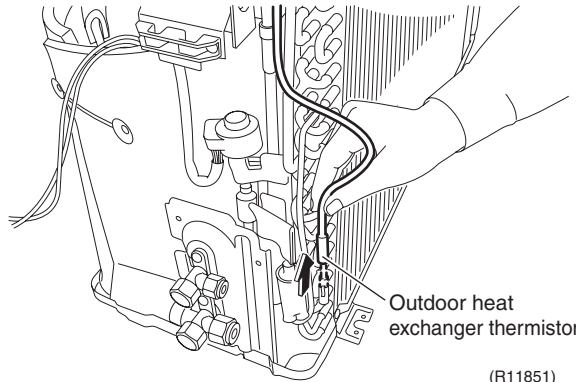
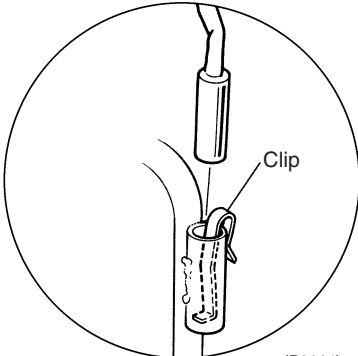
**Procedure**






**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Disconnect the connector for the overload protector [S40].	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>Remove the panels and disconnect the connector for the fan motor according to the “Removal of Outer Panels / Fan Motor”.</li> </ul>
2	Disconnect the connector for the four way valve coil [S80].	
3	Disconnect the 2 connectors for the reactor.	



Step	Procedure	Points
4	<p>Disconnect the relay connector for the compressor.</p>  <p>(R11845)</p>	
5	<p>Disconnect the connector for the electronic expansion valve coil [S20].</p>  <p>(R11847)</p>	
6	<p>Cut the clamp.</p>  <p>(R11850)</p>	
7	<p>Pull out the outdoor heat exchanger thermistor.</p>  <p>Outdoor heat exchanger thermistor</p> <p>(R11851)</p>	<p>■ Be careful not to lose the clip for the thermistor.</p>  <p>(R3264)</p>

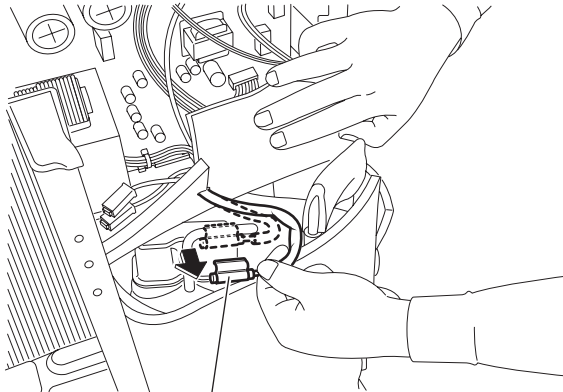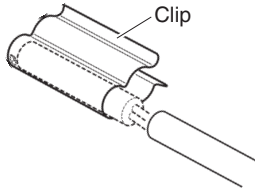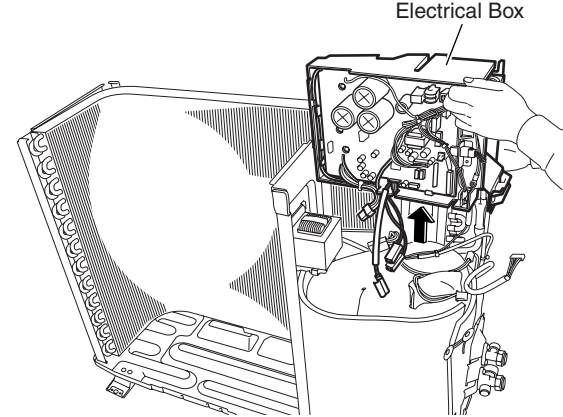




Step	Procedure	Points
8	Release the discharge pipe thermistor.	<ul style="list-style-type: none"> <li>Be careful not to lose the clip for the thermistor.</li> </ul>
 <p style="text-align: center;">Discharge pipe thermistor (R11849)</p>		 <p style="text-align: center;">Clip</p> <p style="text-align: right;">(R12279)</p>
9	Lift and remove the electrical box.	
 <p style="text-align: center;">Electrical Box</p> <p style="text-align: right;">(R11852)</p>		

### 4.3 Removal of PCB

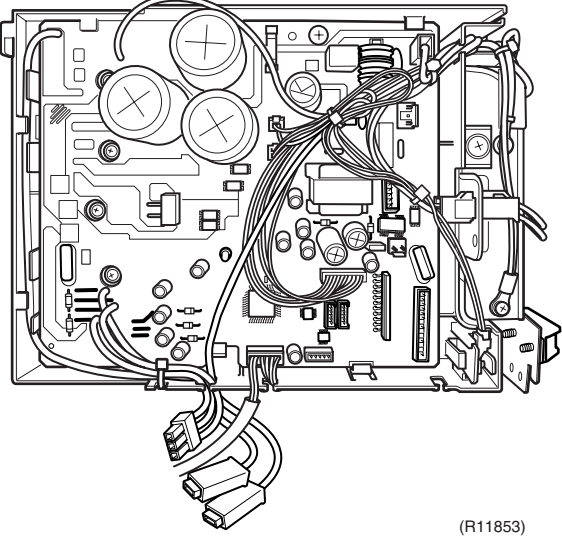
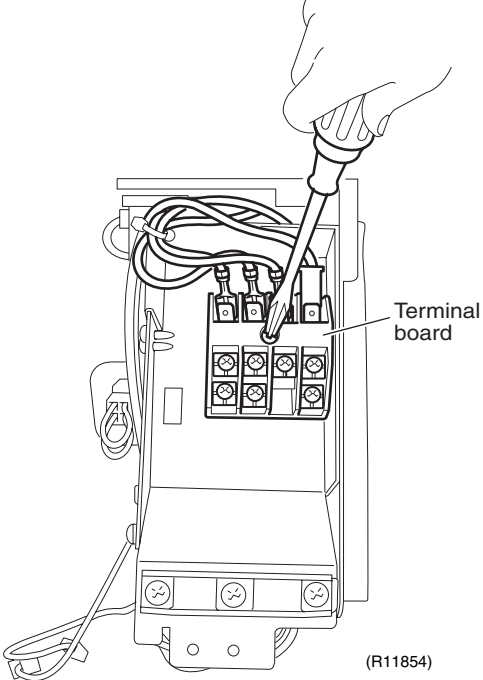
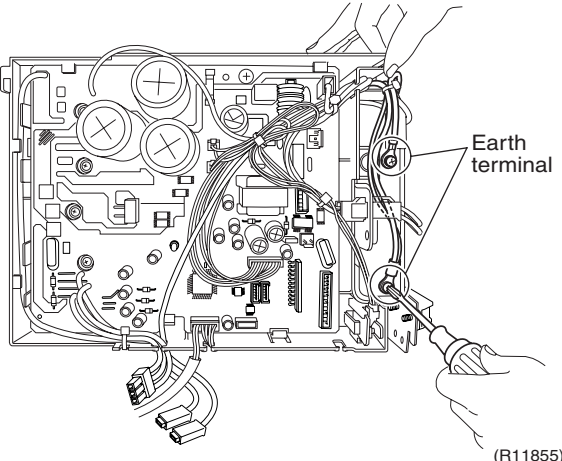
**Procedure**










**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.




Step	Procedure	Points
1. Remove the main PCB.		
1 Feature of the main PCB	 <p style="text-align: right;">(R11853)</p>	<ul style="list-style-type: none"> <li>■ You can remove the main PCB when you disconnect the lead wires on the terminal board without removing the electrical box.</li> </ul>
2 Remove the screw on the terminal board.	 <p style="text-align: right;">(R11854)</p>	
3 Release the 2 earth terminals.	 <p style="text-align: right;">(R11855)</p>	




Step	Procedure	Points
4	<p>Pull out the forced operation button PCB. Disconnect the connector [S110] to remove the forced operation PCB.</p>	<ul style="list-style-type: none"> <li>■ Be careful of a sharp protrusion at the back of the forced operation button PCB.</li> </ul>
5	<p>Disconnect the relay connector.</p>	
6	<p>Cut the clamp.</p>	


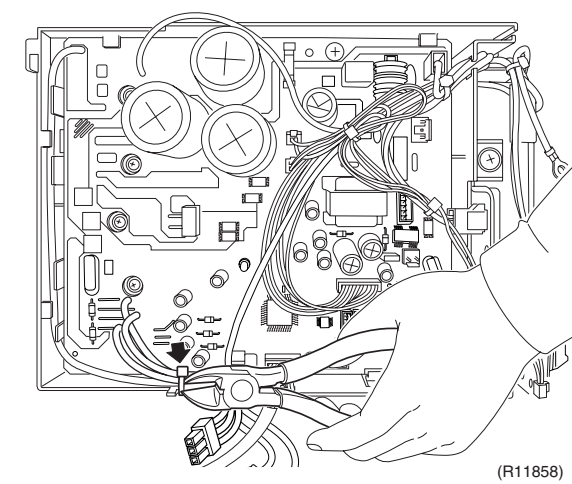
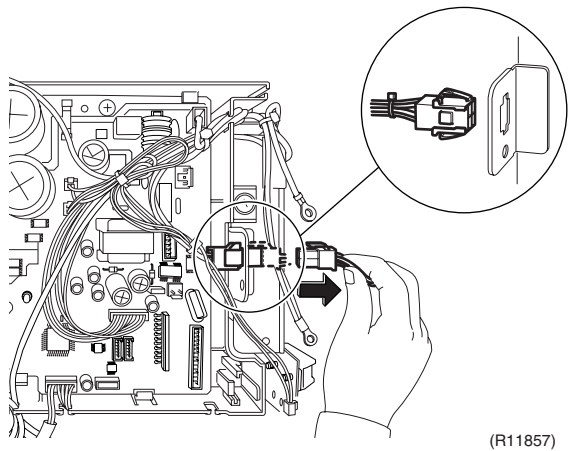
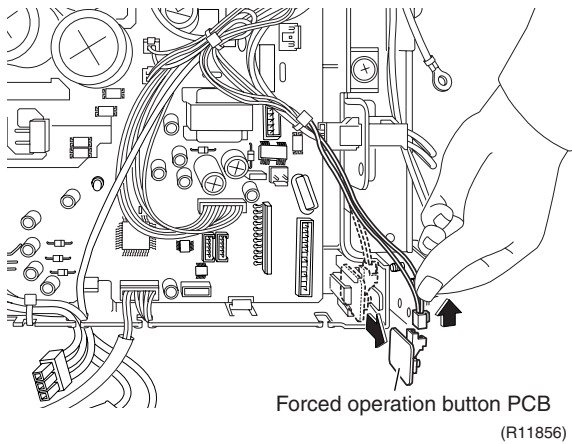


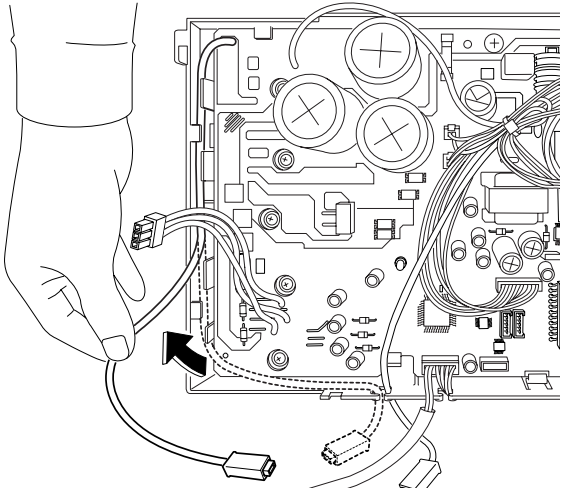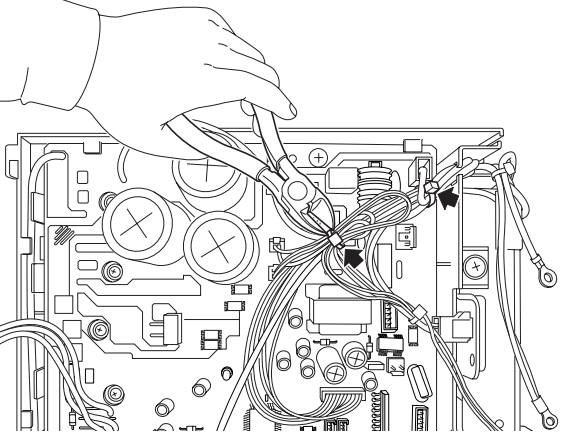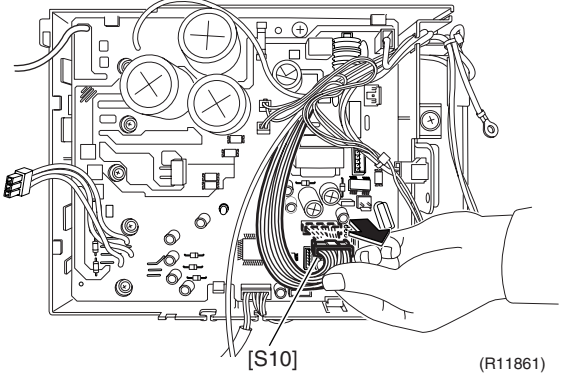Step	Procedure	Points
7	<p>Release the harness.</p>  <p>(R11859)</p>	
8	<p>Cut the clamps at the 2 locations.</p>  <p>(R11860)</p>	
9	<p>Disconnect the connector for the filter PCB [S10].</p>  <p>[S10] (R11861)</p>	

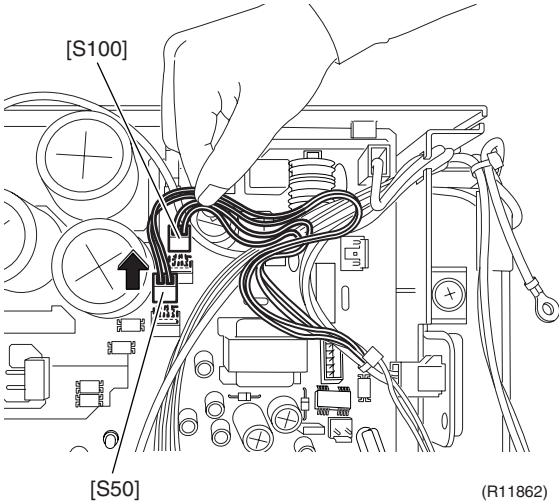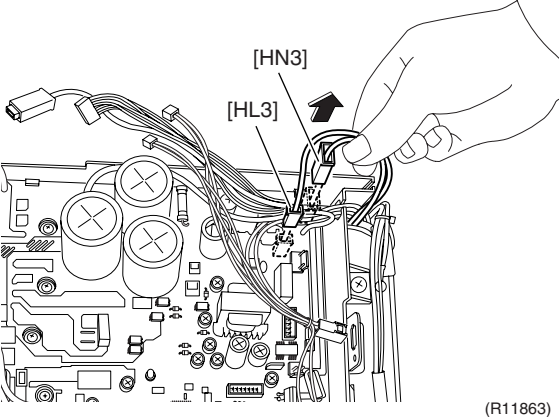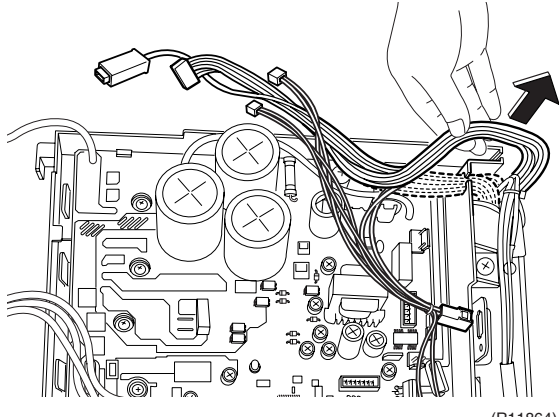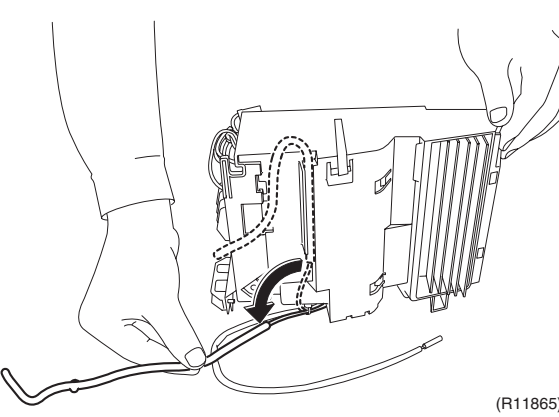
Step	Procedure	Points
10	Disconnect the connectors for the magnetic relay [S50] and for the forced operation button PCB [S100].	
11	Disconnect the connector for the filter PCB [HL3] [HN3].	
12	Release the harnesses from the hook.	
13	Release the harness for the outdoor temperature thermistor.	

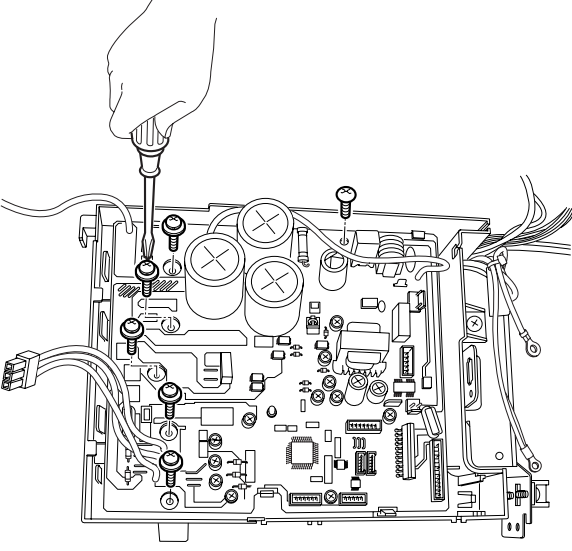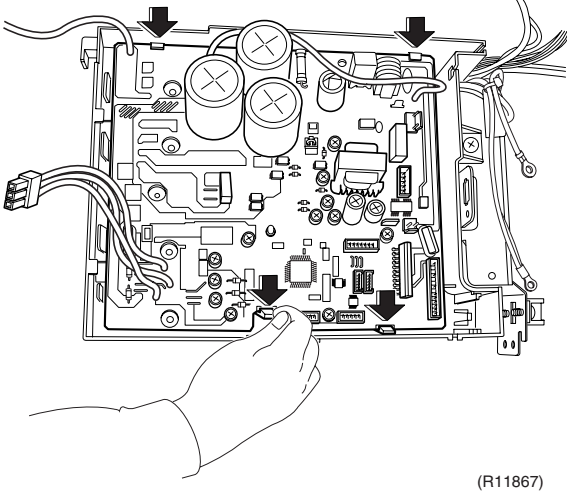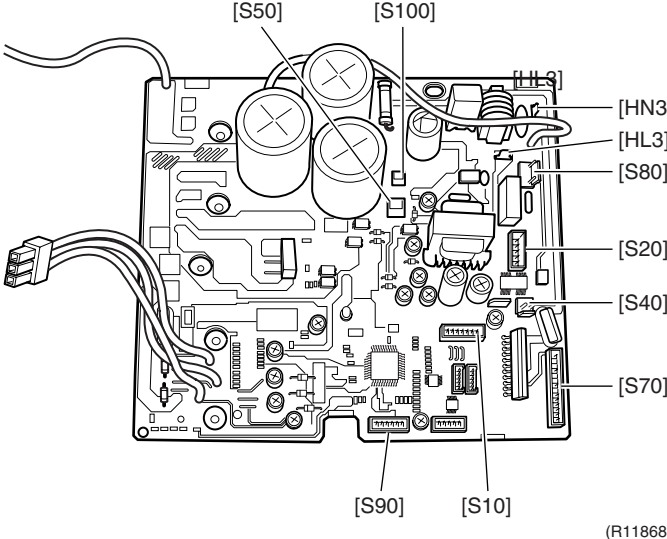Step	Procedure	Points
14	Remove the 6 screws.  <p style="text-align: right;">(R11866)</p>	
15	Unfasten the 4 hooks and remove the main PCB.  <p style="text-align: right;">(R11867)</p>	<p>■ Refer to page 27 for detail.</p> <p>[S10] [HL3] [HN3]: filter PCB                      [S20]: electronic expansion valve coil                      [S40]: overload protector                      [S50]: magnetic relay                      [S70]: fan motor                      [S80]: four way valve coil                      [S90]: thermistors                      [S100]: forced operation button PCB</p>
	 <p style="text-align: right;">(R11868)</p>	

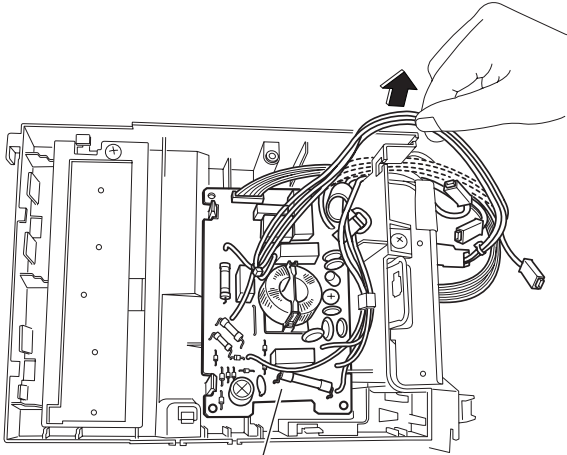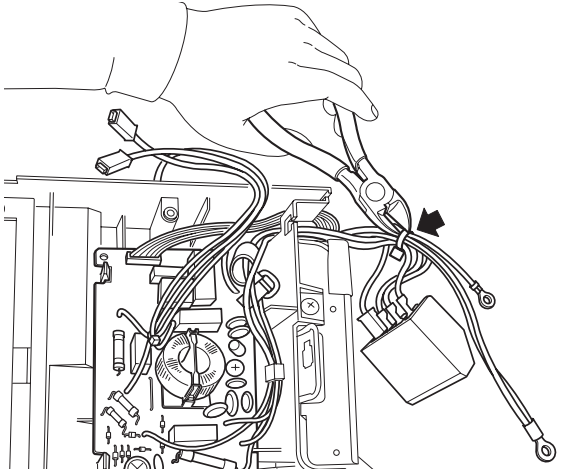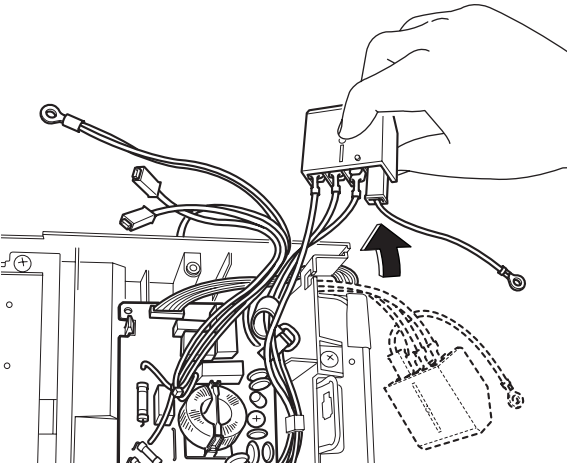Step	Procedure	Points
2.	Remove the filter PCB.	
1	Release the harnesses from the hook.  <p style="text-align: center;">Filter PCB (R11869)</p>	
2	Cut the clamp.  <p style="text-align: center;">(R11871)</p>	
3	Release the harnesses from the hook.  <p style="text-align: center;">(R11872)</p>	

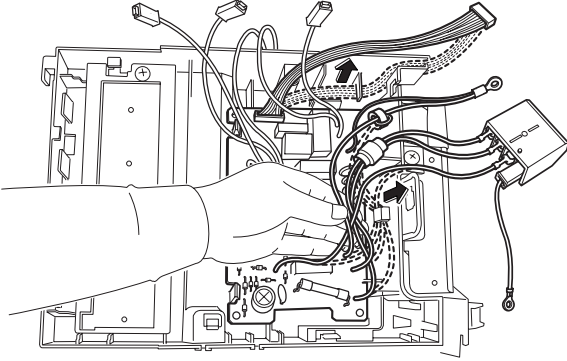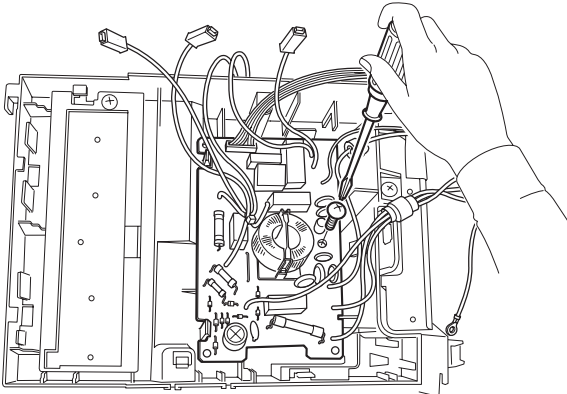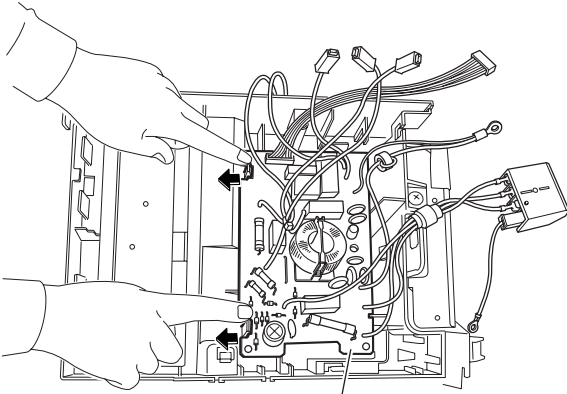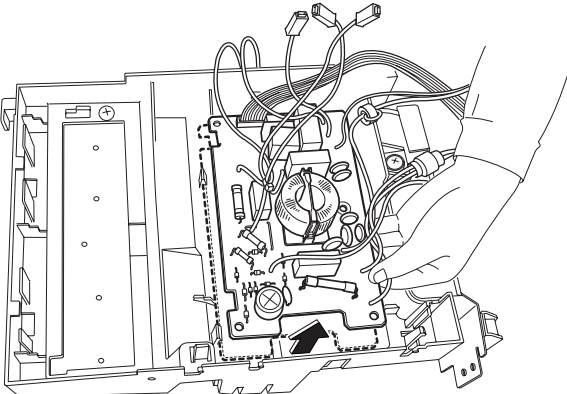Step	Procedure	Points
4	<p>Release the harnesses from the hooks.</p>  <p>(R11873)</p>	
5	<p>Remove the screw.</p>  <p>(R11874)</p>	
6	<p>Unfasten the 2 hooks.</p>  <p>Filter PCB (R11876)</p>	
7	<p>Lift and pull out the filter PCB.</p>  <p>(R11877)</p>	

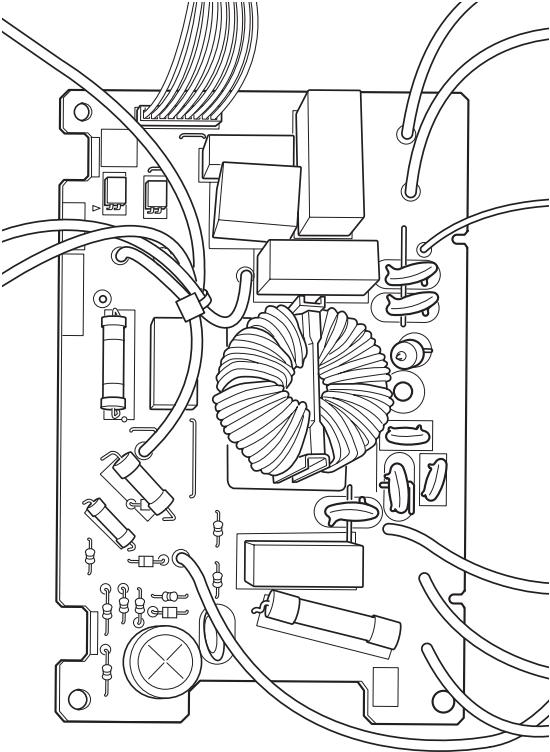




Step	Procedure	Points
8	<p data-bbox="199 215 416 275">Feature of the filter PCB</p>  <p data-bbox="986 999 1054 1021">(R11878)</p>	<ul style="list-style-type: none"><li data-bbox="1093 215 1437 244">■ Refer to page 27 for detail.</li></ul>



## 4.4 Removal of Reactor / Partition Plate

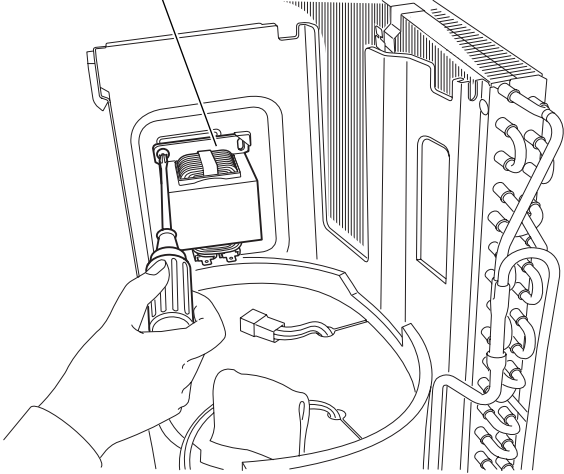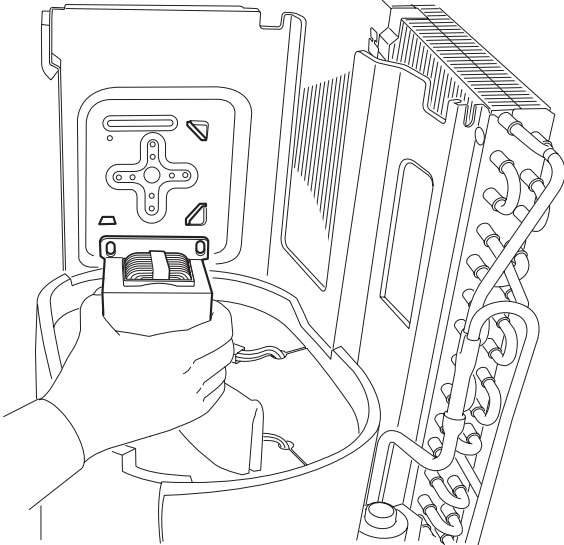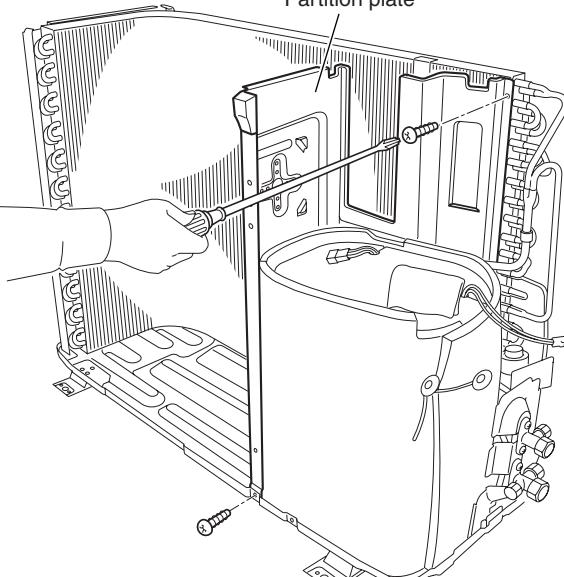**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Remove the reactor.</p> <p>1 Remove the screw and remove the reactor.</p>	<p style="text-align: center;">Reactor</p>  <p style="text-align: right;">(R11879)</p>  <p style="text-align: right;">(R11880)</p>	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>■ Remove the outer panels according to the “Removal of Outer Panels / Fan Motor”.</li> <li>■ Remove the electrical box according to the “Removal of Electrical Box”.</li> </ul>
<p>2. Remove the partition plate.</p> <p>1 Remove the 2 screws.</p>	<p style="text-align: center;">Partition plate</p>  <p style="text-align: right;">(R12273)</p>	


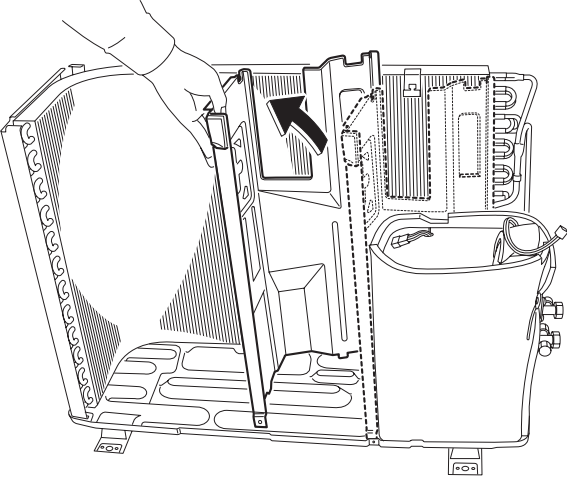
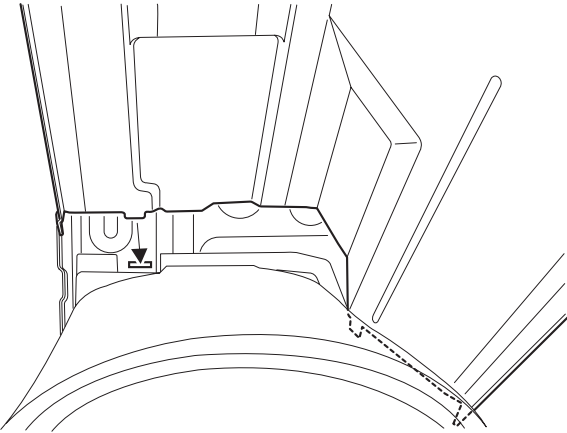
Step	Procedure	Points
2	<p data-bbox="199 219 454 376">The partition plate has a hook on the lower side. Lift and pull the partition plate to remove.</p>  <p data-bbox="979 712 1050 734">(R12280)</p>  <p data-bbox="995 1193 1066 1216">(R11883)</p>	<ul data-bbox="1093 739 1436 840" style="list-style-type: none"><li>■ When reassembling, fit the lower hook into the bottom frame.</li></ul>



# 4.5 Removal of Sound Blanket

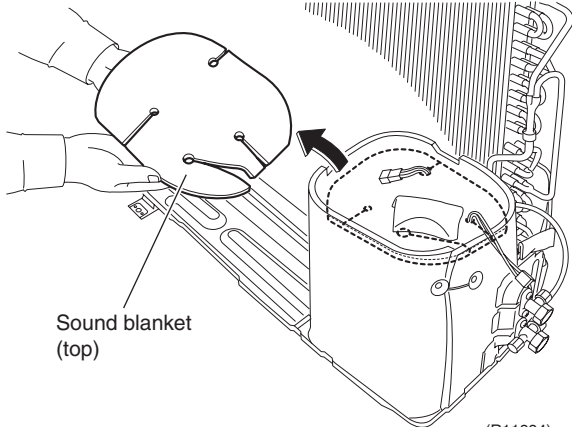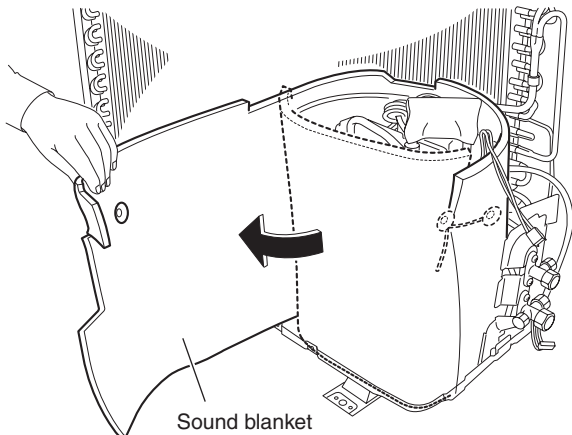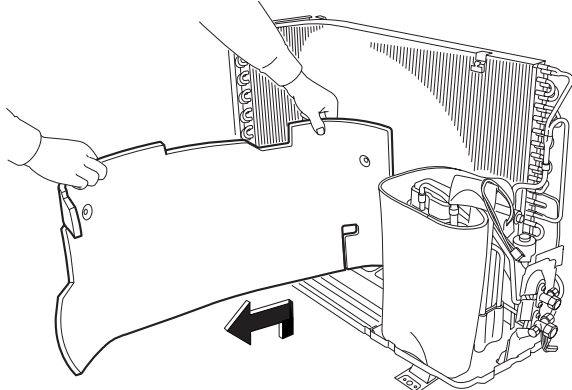**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the sound blanket (top).	 <p style="text-align: right;">(R11884)</p>	<ul style="list-style-type: none"> <li>■ Since the piping ports are torn easily, remove the sound blanket carefully.</li> </ul>
2	Untie the string and open the sound blanket (outer).	 <p style="text-align: right;">(R11885)</p>	
3	Lift and remove the sound blanket (outer).	 <p style="text-align: right;">(R11886)</p>	


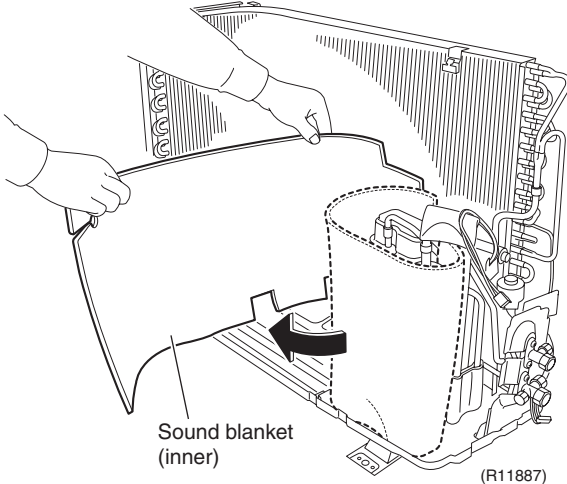
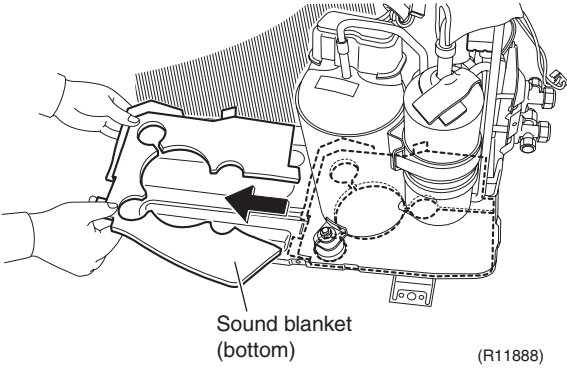
Step	Procedure	Points
4	<p>Pull the sound blanket (inner) out.</p> 	
5	<p>Pull the sound blanket (bottom) out.</p> 	




## 4.6 Removal of Four Way Valve

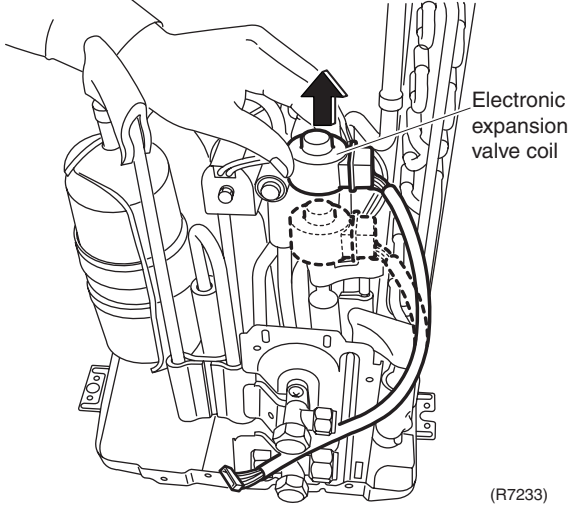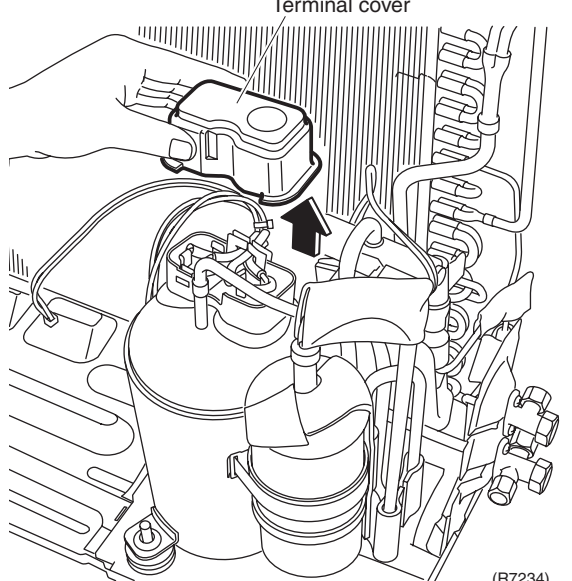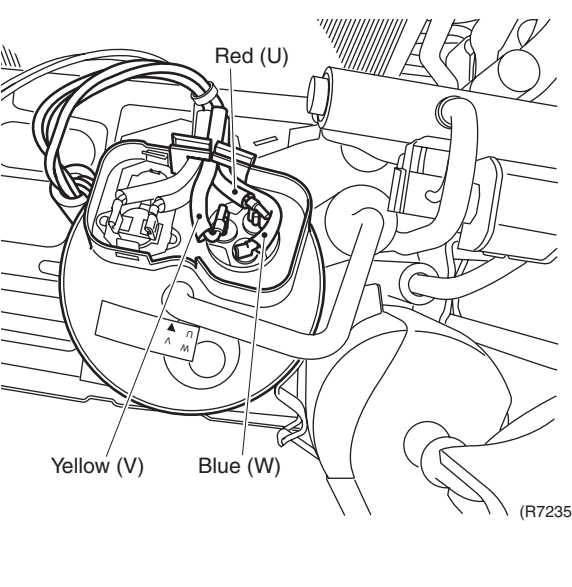
**Procedure**



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Pull out the electronic expansion valve coil.	 <p>(R7233)</p>	
2	Remove the terminal cover.	 <p>(R7234)</p>	
3	Disconnect the lead wires of the compressor.	 <p>(R7235)</p>	

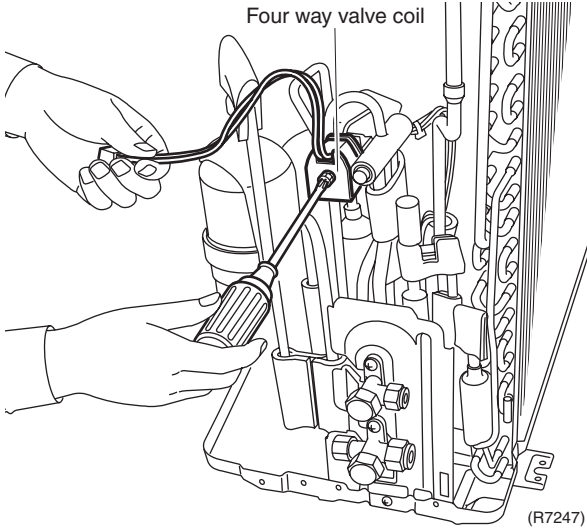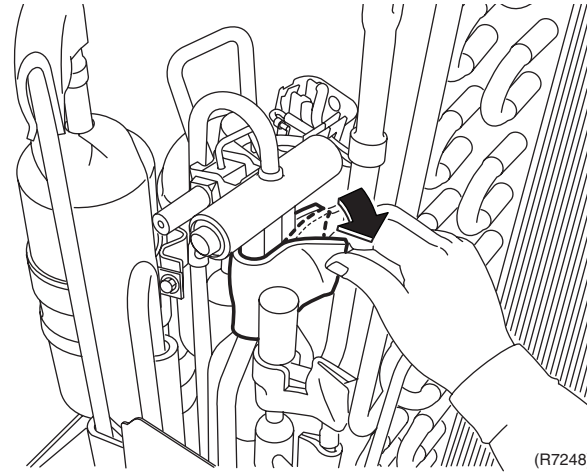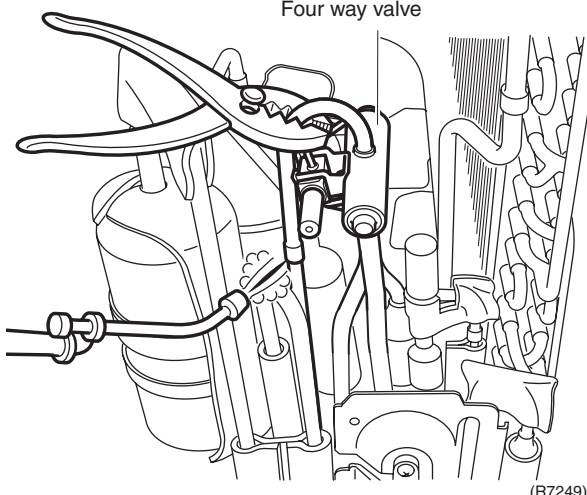Step	Procedure	Points
4	<p>Remove the screw and remove the four way valve coil.</p> 	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
5	<p>Remove the sheets of putty.</p> 	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
6	<p>Heat up the brazed part and withdraw the piping with pliers.</p> 	<p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>

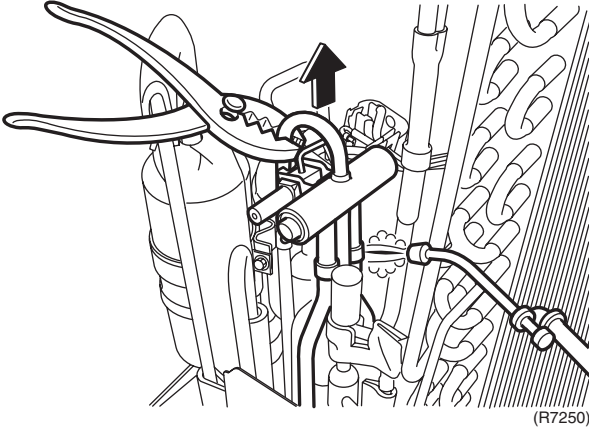Step	Procedure	Points
		<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> </ul>








## 4.7 Removal of Compressor
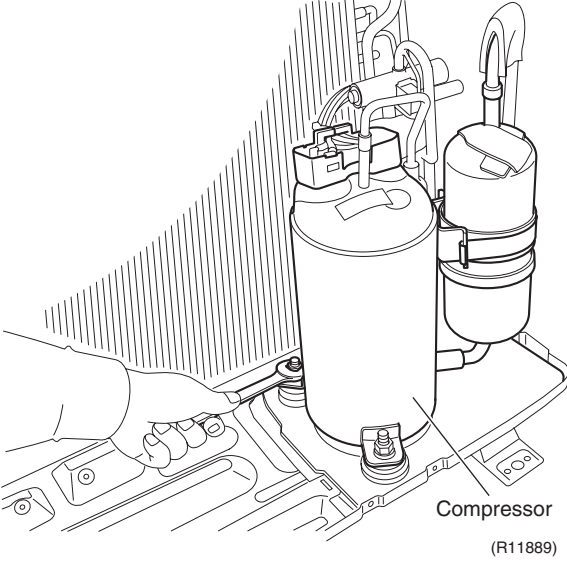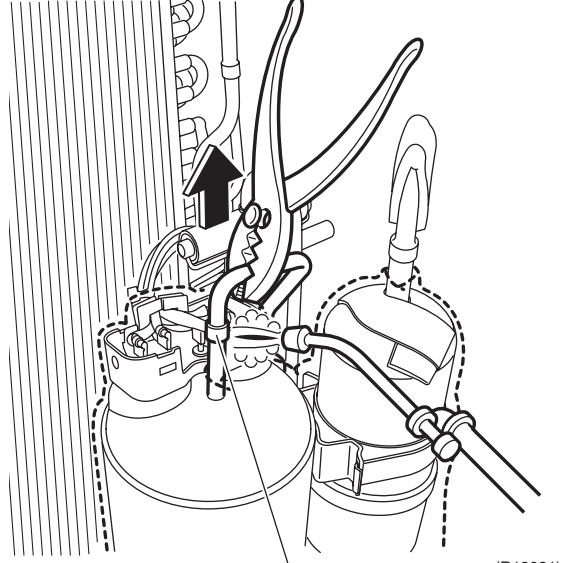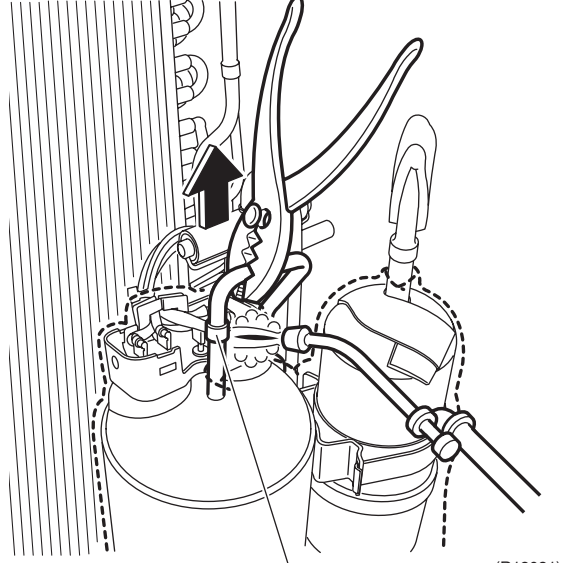
### Procedure



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Remove the 2 nuts of the compressor. 	<p><b>Warning</b> Be careful not to get yourself burnt with pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Warning</b> Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.</p>
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>		<p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
2	Heat up the brazed part of the discharge side and disconnect. 	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol> <p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>

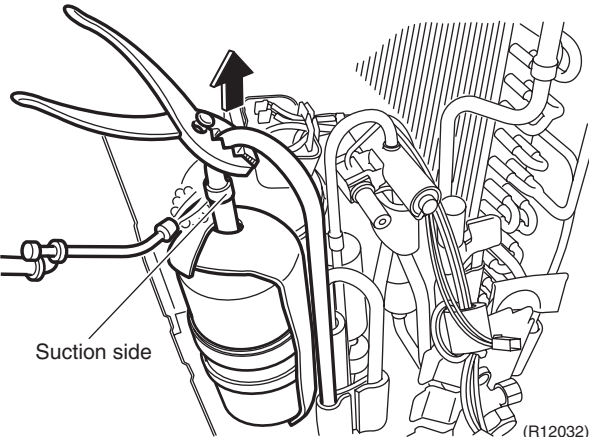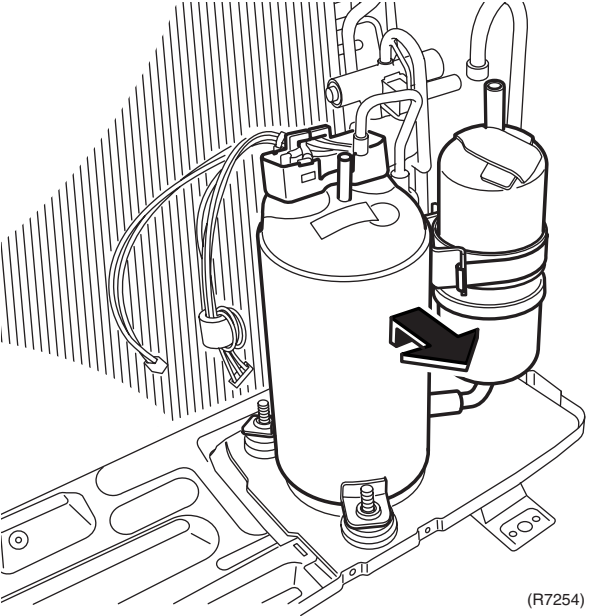Step		Procedure	Points
3	Heat up the brazed part of the suction side and disconnect.	 <p style="text-align: right;">(R12032)</p>	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> </ul>
4	Lift the compressor up and remove it.	 <p style="text-align: right;">(R7254)</p>	<ul style="list-style-type: none"> <li>■ Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin.</li> </ul>

## 5. Outdoor Unit - RK(X)S50F2V1B, RK(X)S50G2V1B

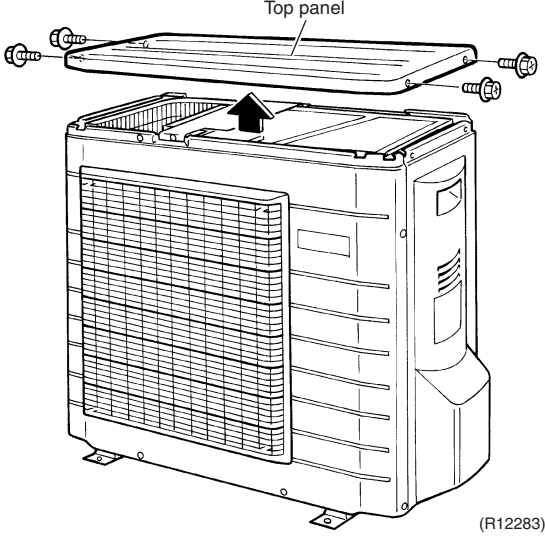
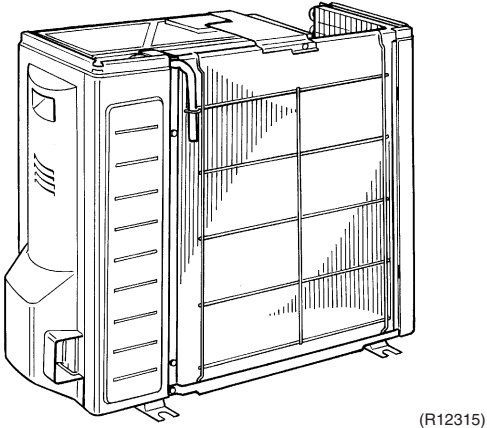
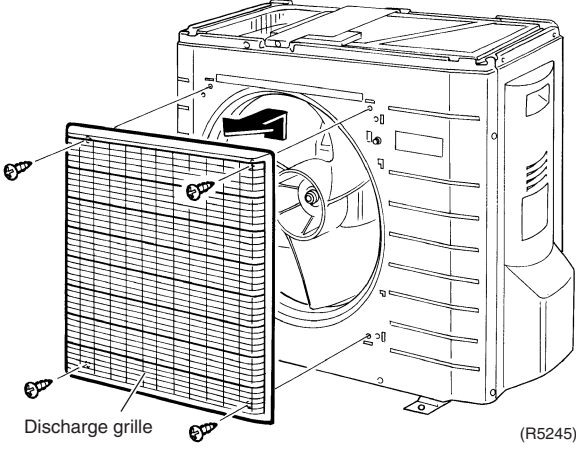
### 5.1 Removal of Outer Panels




#### Procedure






#### Warning




Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1.	Remove the panels.	
1	Remove the 4 screws and lift the top panel.  	<ul style="list-style-type: none"> <li>■ Take care not to cut your finger by the fins of the outdoor heat exchanger.</li> </ul>
2	Remove the 4 screws and remove the discharge grille. 	<ul style="list-style-type: none"> <li>■ Slide the discharge grille upwards and remove it.</li> </ul>

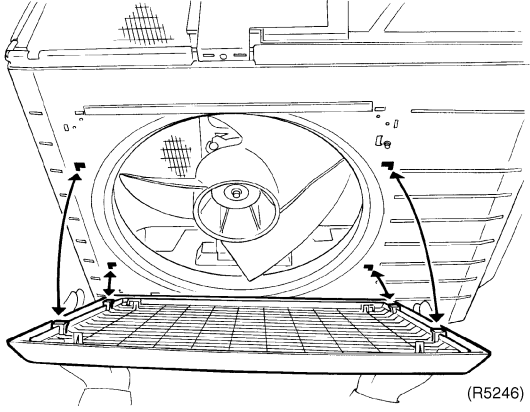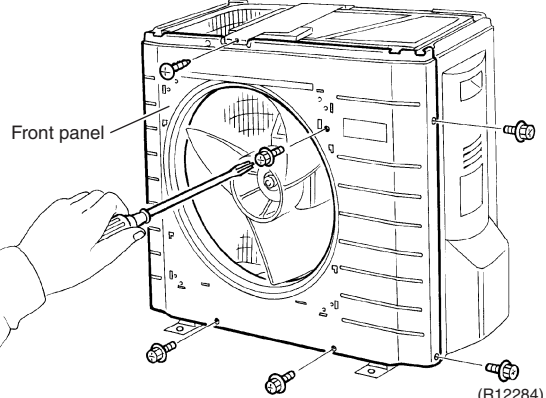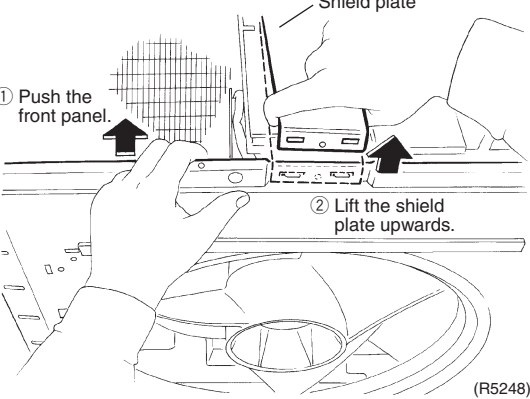Step	Procedure	Points
3	<p>Remove the 6 screws of the front panel.</p>  <p>(R5246)</p>	<ul style="list-style-type: none"> <li>■ The discharge grille has 4 hooks.</li> </ul>
4	<p>Push the front panel and lift the shield plate to unfasten the hooks.</p>  <p>(R12284)</p>  <p>(R5248)</p>	

Step	Procedure	Points
5	<p>Unfasten the left side hooks, and then the right side hook. Remove the front panel.</p>	<ul style="list-style-type: none"> <li>■ Lift the front panel while pushing the left side panel inwards.</li>   <li>■ Lift the front panel and unfasten the right side hook.</li>   <li>■ When reassembling, fit the right side of the front panel first.</li> </ul>

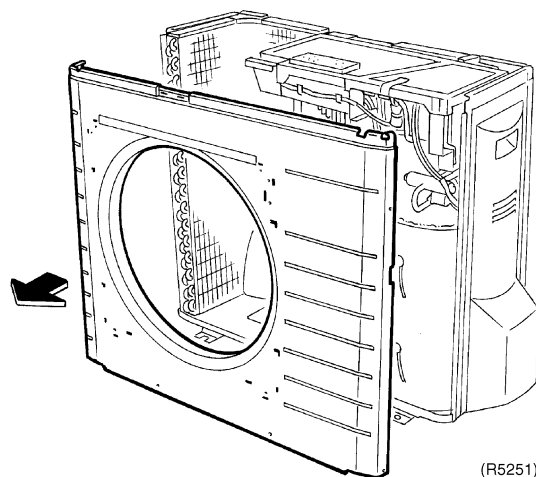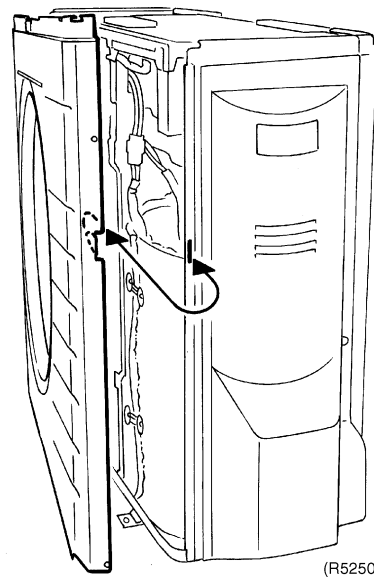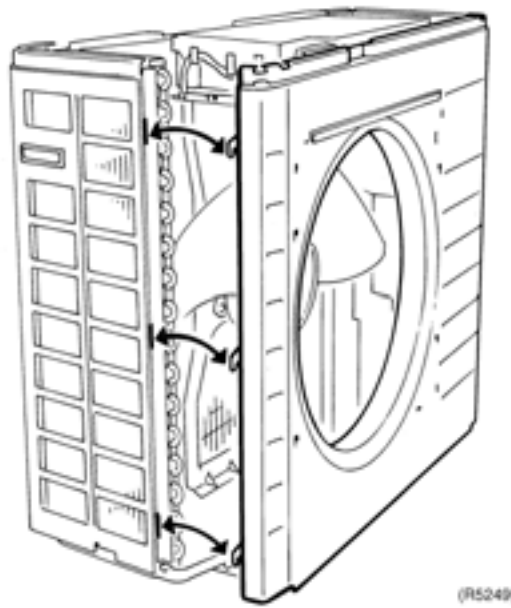

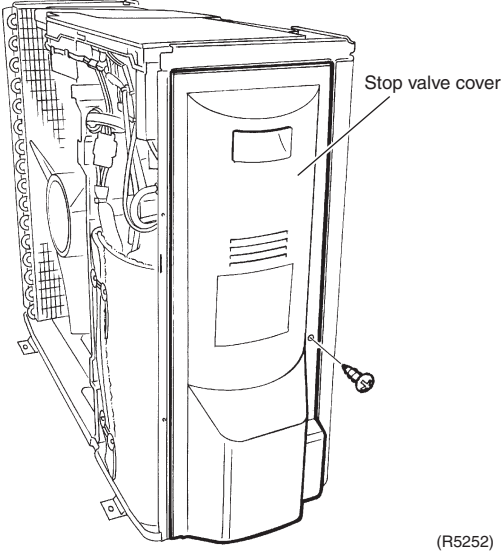
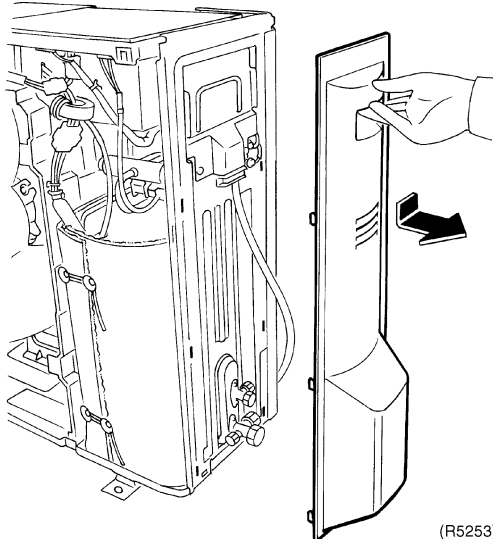
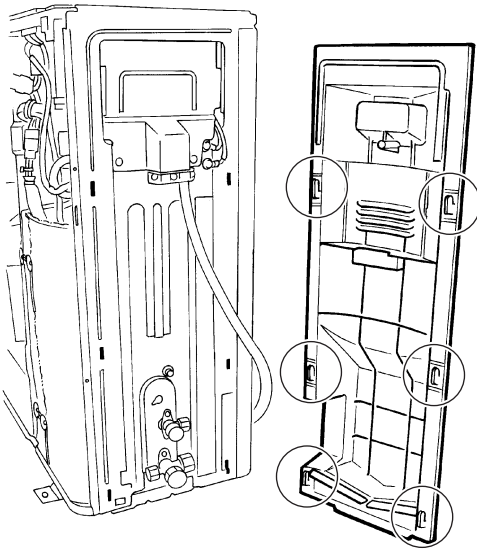
Step	Procedure	Points
2.	Remove the stop valve cover.	
1	<p>Remove the screw of the stop valve cover.</p>  <p>(R5252)</p>	
2	<p>Pull down the stop valve cover to unfasten the hooks and remove it.</p>  <p>(R5253)</p>	
	 <p>(R5254)</p>	<p>■ The stop valve cover has 6 hooks.</p>




## 5.2 Removal of Outdoor Fan / Fan Motor

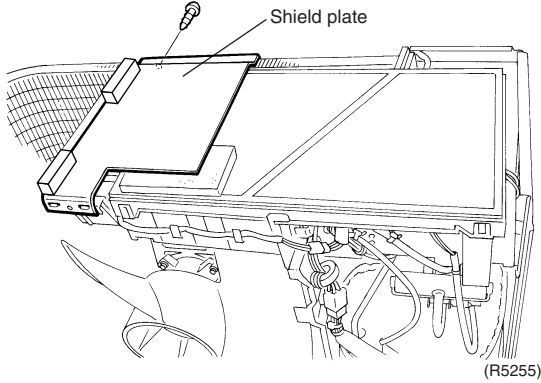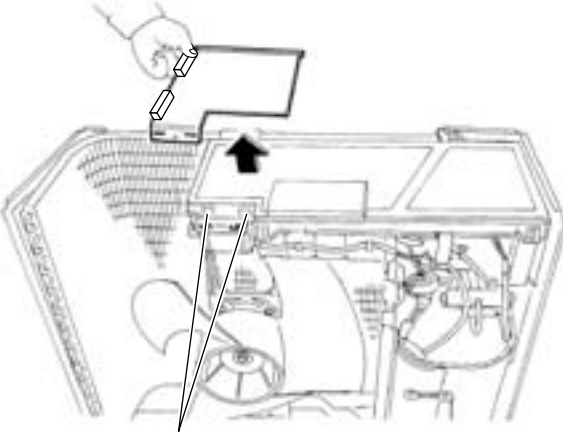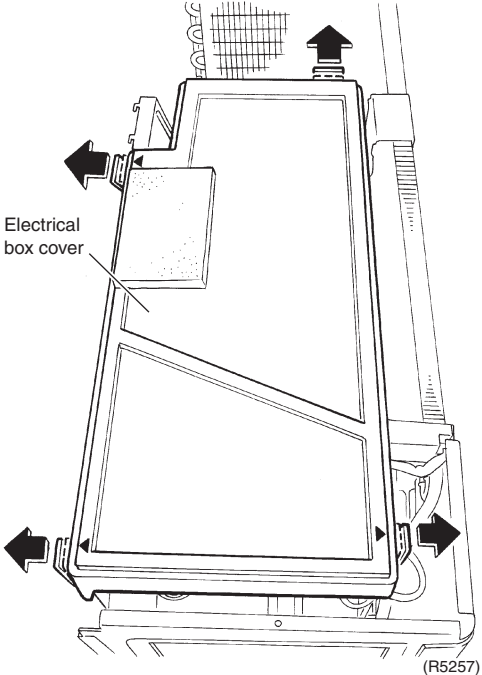**Procedure**







**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.


Step	Procedure	Points	
1. Remove the electrical box cover.			
1	Remove the screw of the shield plate.	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>■ Remove the top panel and the front panel according to the "Removal of Outer Panels".</li> <li>■ This procedure is not necessary to remove the outdoor fan only.</li> </ul>	
2	Unfasten the 2 hooks and remove the shield plate.		 <p style="text-align: right;">(R5255)</p>
3	Unfasten the 4 hooks of the electrical box cover and remove it.		 <p style="text-align: right;">(R12029)</p>
		 <p style="text-align: right;">(R5257)</p>	

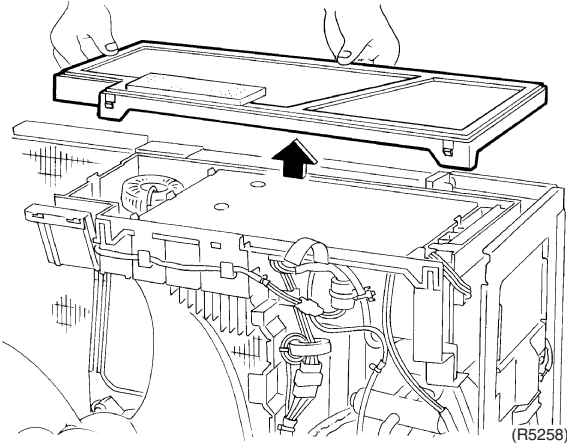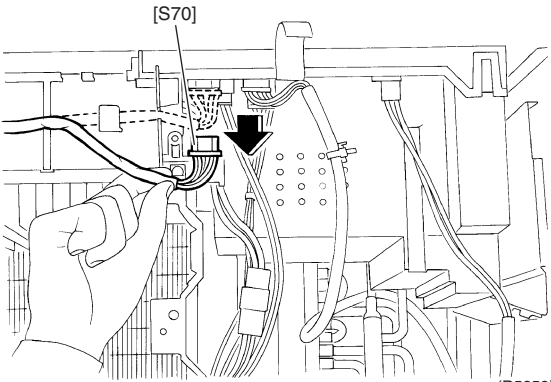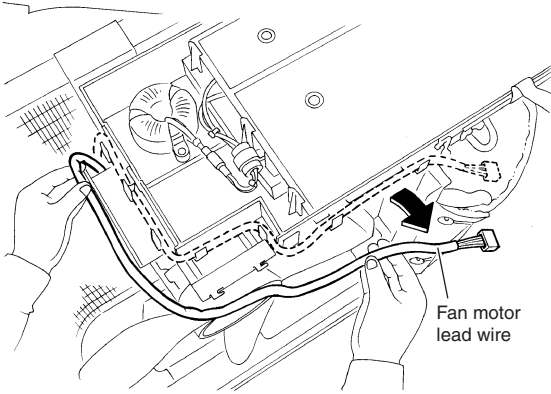Step	Procedure	Points
	 <p style="text-align: right;">(R5258)</p>	
<p>2. Remove the fan motor.</p> <p>1</p> <p>2</p>	<p>1 Disconnect the connector for the fan motor [S70].</p>  <p style="text-align: right;">(R5259)</p> <p>2 Release the fan motor lead wire from the 7 hooks.</p>  <p style="text-align: right;">(R5260)</p>	

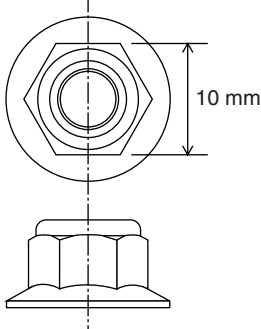

Step	Procedure	Points
3	Remove the washer-fitted nut of the outdoor fan.	<ul style="list-style-type: none"> <li>■ The screw has reverse winding.</li> <li>■ Nut size: M6</li> </ul>  <p style="text-align: right;">(R12236)</p> <ul style="list-style-type: none"> <li>■ When reassembling, align ▼ mark of the outdoor fan with D-cut section of the motor shaft.</li> </ul>
4	Remove the lower 2 screws from the fan motor first.	<ul style="list-style-type: none"> <li>■ Be sure to remove the lower screws first. If the upper screws are removed first, the fan motor, the center of gravity of which is toward the front, may tilt down or fall, getting you injured.</li> </ul>
5	Then, remove the upper 2 screws.	

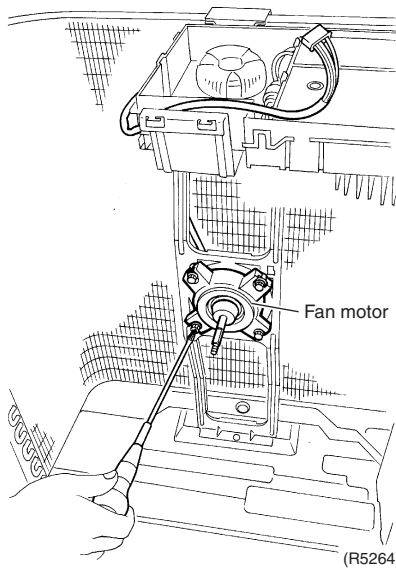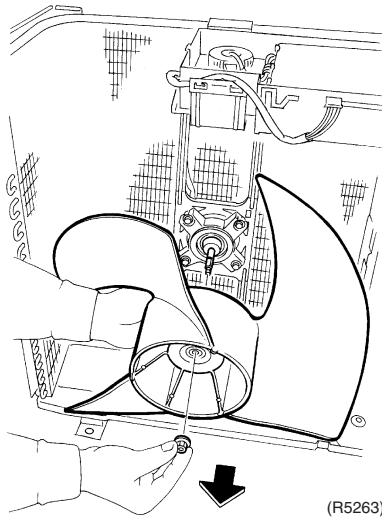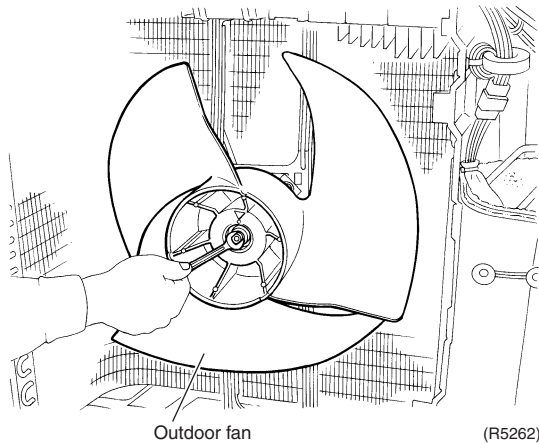

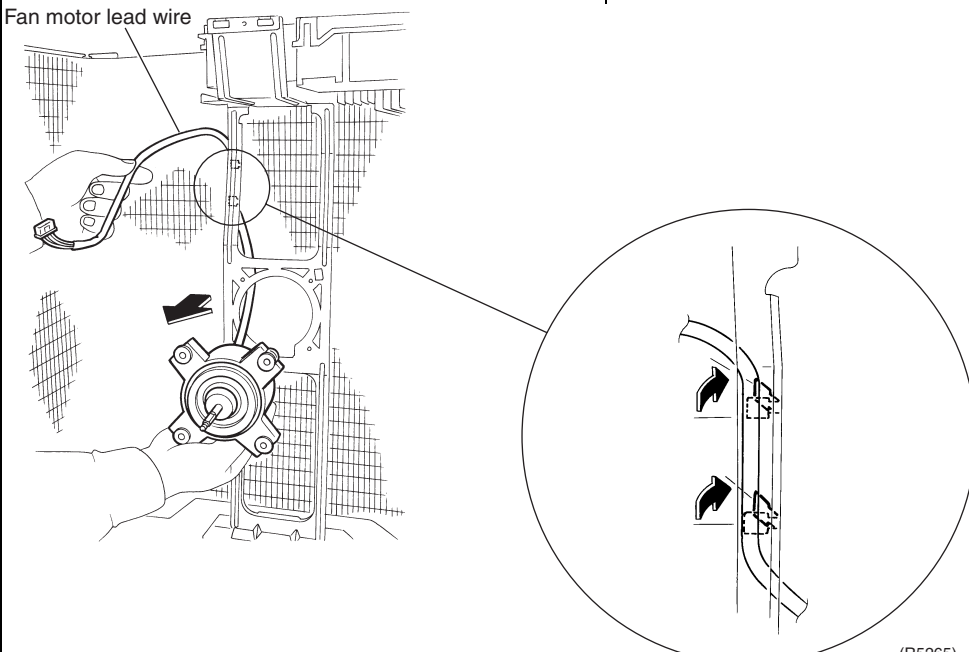Step	Procedure	Points
6	<p>Release the fan motor lead wire from the 2 hooks and pull the fan motor out.</p> 	<ul style="list-style-type: none"> <li>■ When reassembling, put the fan motor lead wire through the back of the fan motor (so as not to be entangled with the outdoor fan).</li> </ul>




(R5265)




## 5.3 Removal of Electrical Box
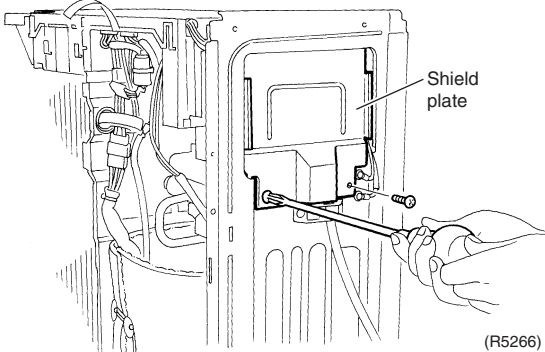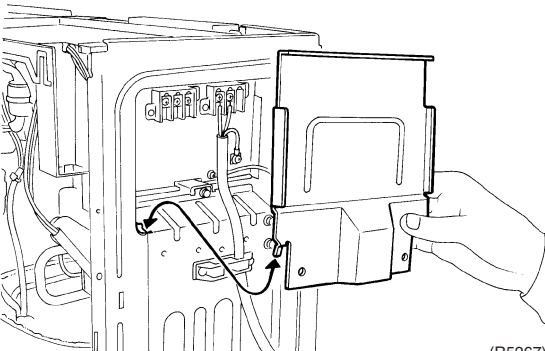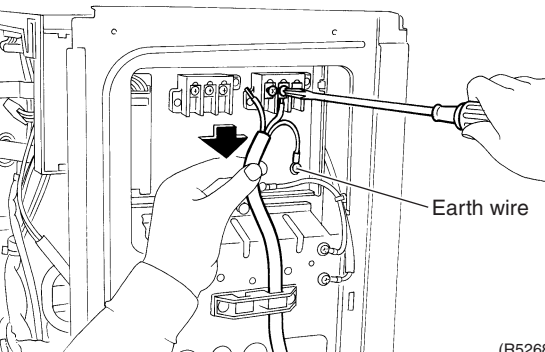
### Procedure










**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.



Step	Procedure	Procedure	Points
1	Remove the 2 screws of the shield plate.	 <p style="text-align: right;">(R5266)</p>	<b>Preparation</b> <ul style="list-style-type: none"> <li>■ Remove the top panel and the front panel according to the "Removal of Outer Panels".</li> </ul>
2	Slide the shield plate upward to unfasten the 1 hook on the bottom left, and then remove the shield plate.	 <p style="text-align: right;">(R5267)</p>	
3	Disconnect the 2 power supply cables and the 1 earth wire.	 <p style="text-align: right;">(R5268)</p>	

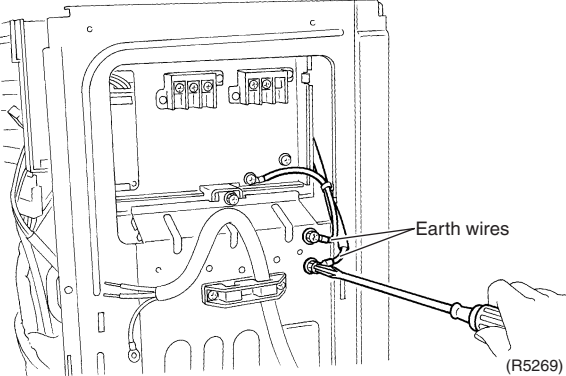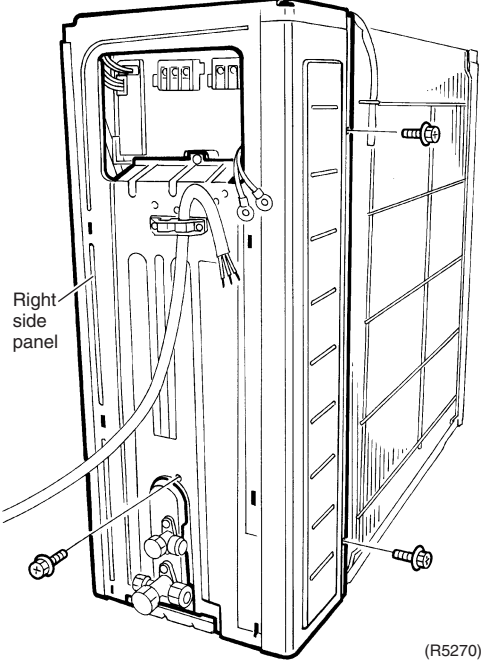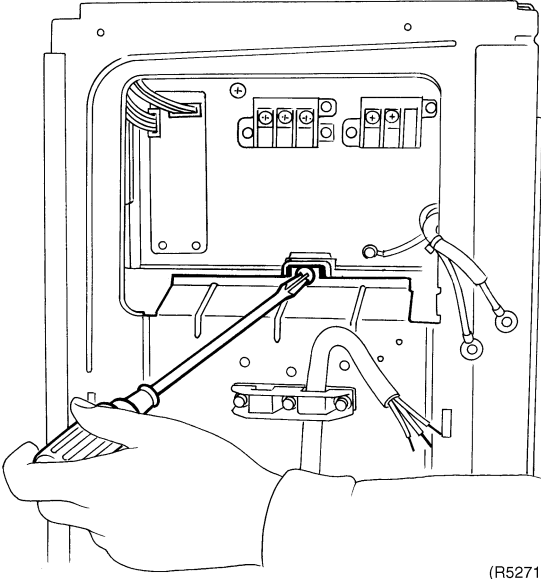Step	Procedure	Points
4	<p>Disconnect the 2 earth wires.</p>  <p>(R5269)</p>	
5	<p>Remove the 3 screws of the right side panel.</p>  <p>(R5270)</p>	
6	<p>Remove the screw of the electrical box.</p>  <p>(R5271)</p>	

Step	Procedure	Points
7	Unfasten the hooks and remove the right side panel.	■ When reassembling, insert the 2 hooks of the lower part and the 1 hook of the upper back.
8	Disconnect the connectors of the front side. [S20]: electronic expansion valve coil [S40]: overload protector [S80]: four way valve coil [S90]: thermistors	
9	Disconnect the relay connector for the compressor.	

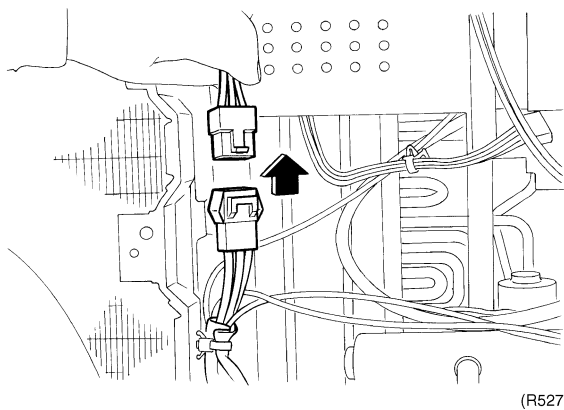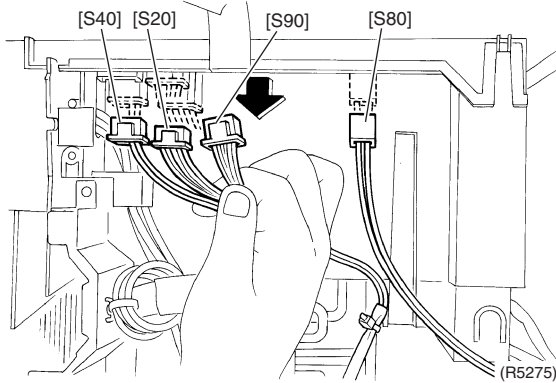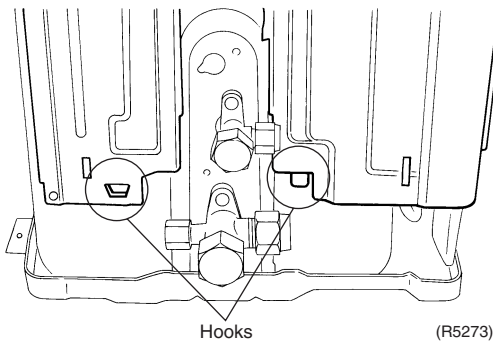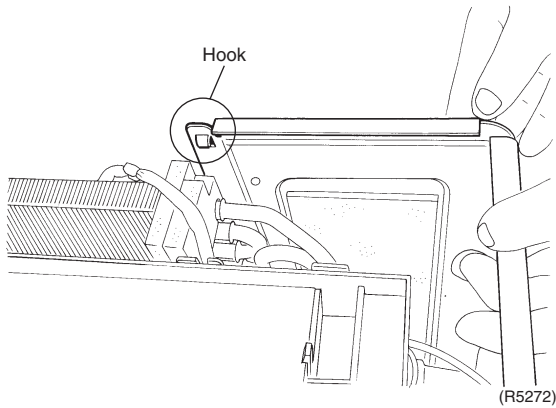

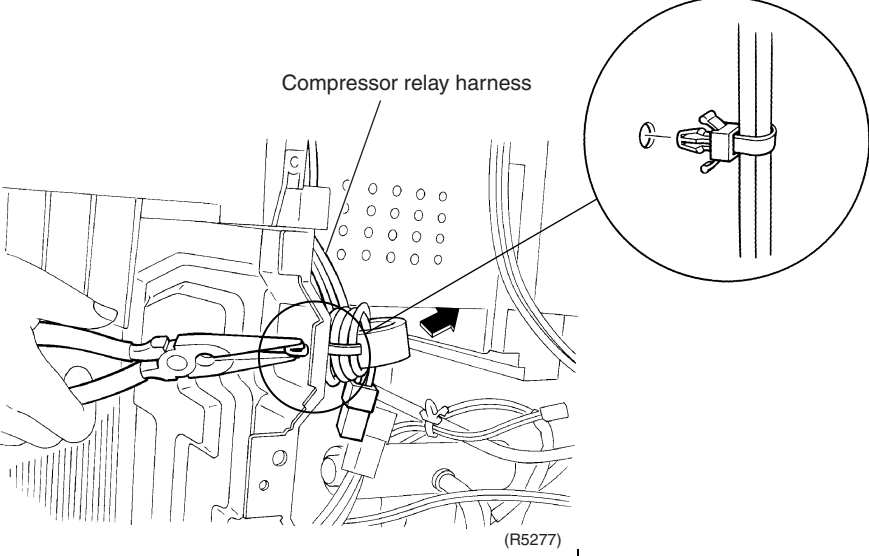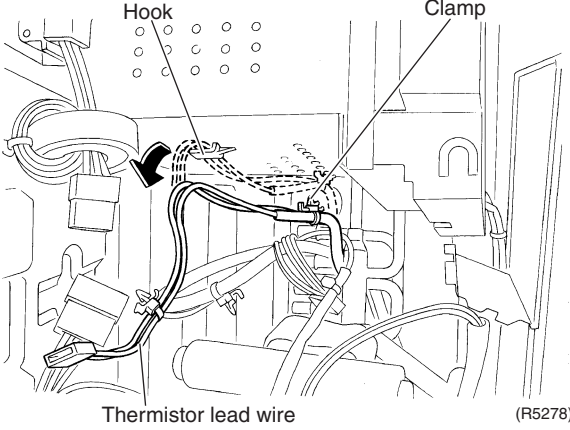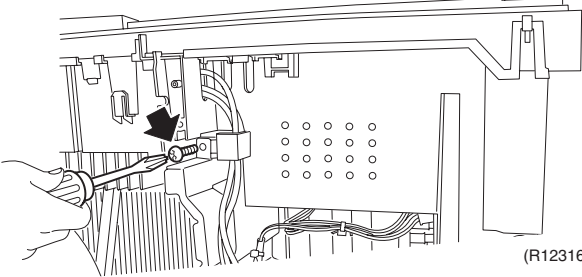Step	Procedure	Points
10	Release the clamp of the compressor relay harness with pliers.	
11	Detach the clamp and release the thermistor lead wires from the hook.	
12	Remove the screw.	

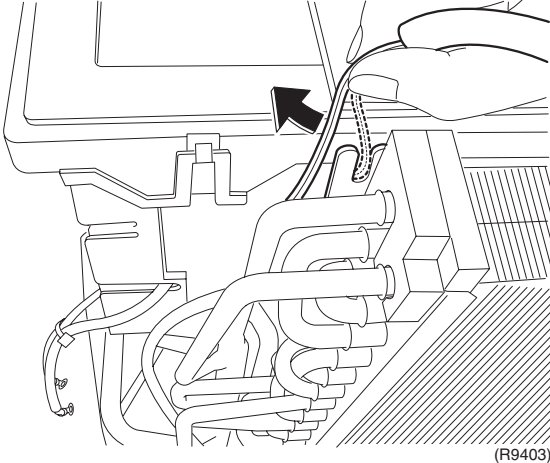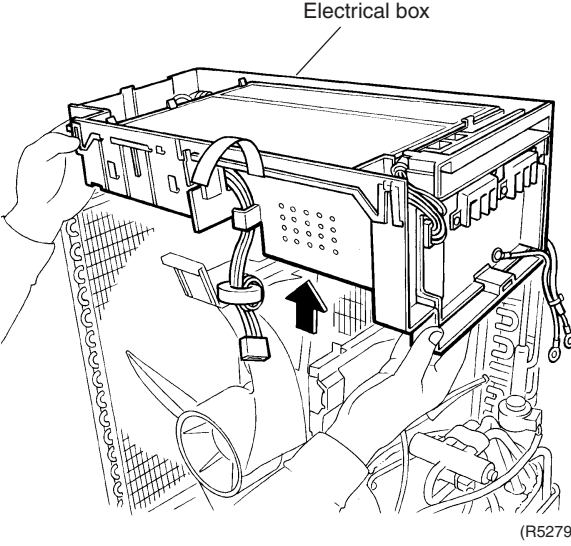Step	Procedure	Points
13	Release the harness of the outdoor temperature thermistor from the hook.	
	 <p>(R9403)</p>	
14	Lift and remove the electrical box.	
	 <p>Electrical box</p> <p>(R5279)</p>	




## 5.4 Removal of PCB

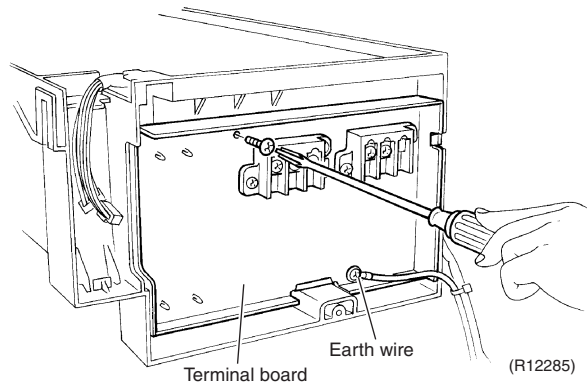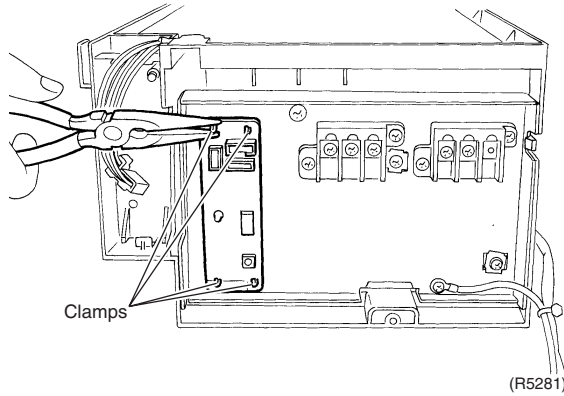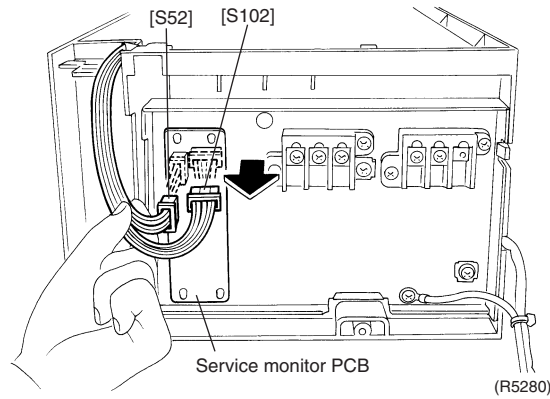**Procedure**

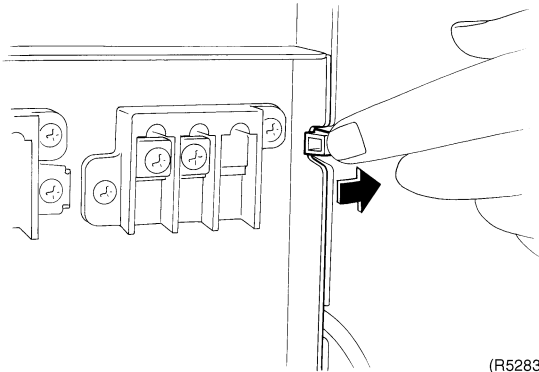
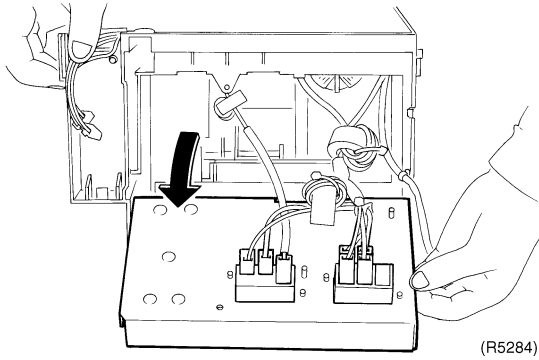
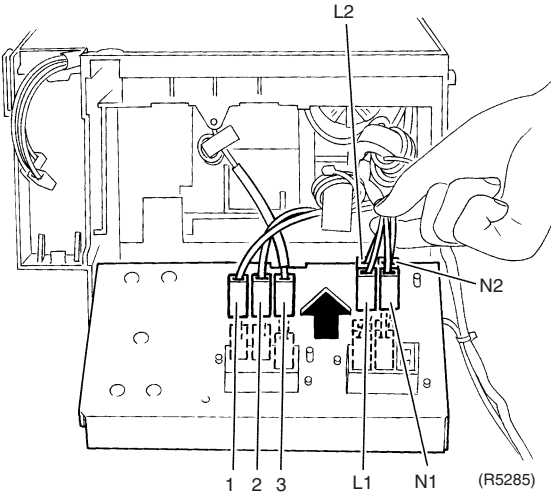
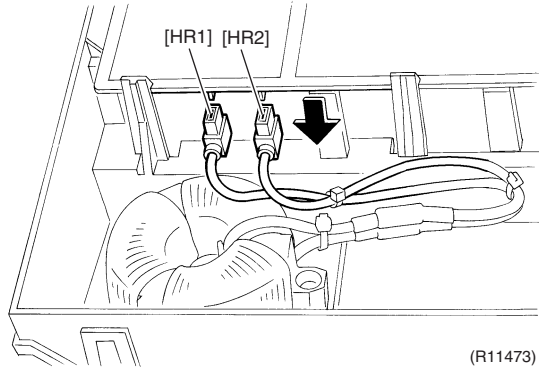





**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	Disconnect the connectors from the service monitor PCB [S52] [S102].	<p><b>Preparation</b></p> <ul style="list-style-type: none"> <li>Remove the electrical box according to the "Removal of Electrical Box".</li> </ul>
2	Detach the 4 clamps with pliers.	
3	Remove the screws of the terminal board and the earth wire.	





Step	Procedure	Points
4	Unfasten the hook on the right.	
	 <p>(R5283)</p>	
5	Open the terminal board.	
	 <p>(R5284)</p>	
6	Disconnect the harnesses.	
	 <p>(R5285)</p>	<p>1: Black                  2: White                  3: Red                  L1: Black                  L2: Brown                  N1: White                  N2: Blue</p>
7	Disconnect the 2 connectors for the reactor [HR1] [HR2].	
	 <p>(R11473)</p>	

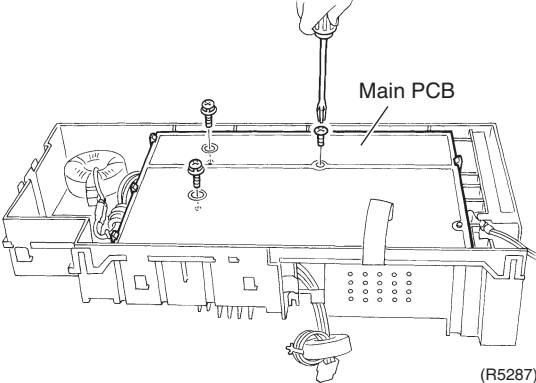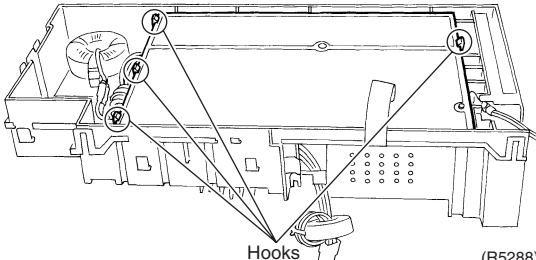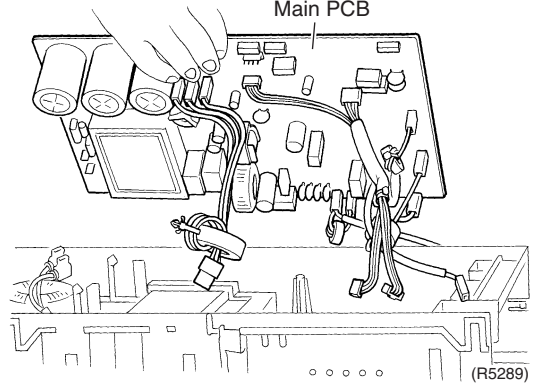Step	Procedure	Points
8	<p>Remove the 3 screws of the main PCB.</p>  <p>(R5287)</p>	
9	<p>Unfasten the 4 hooks.</p>  <p>(R5288)</p>	
10	<p>Lift up and remove the main PCB.</p>  <p>(R5289)</p>	<p>■ Refer to page 29 for detail.</p>






## 5.5 Removal of Sound Blanket / Thermistors

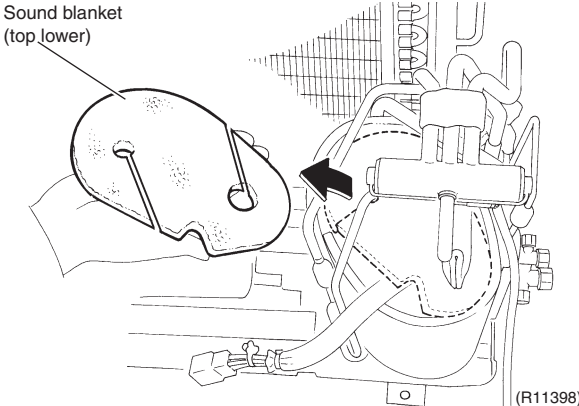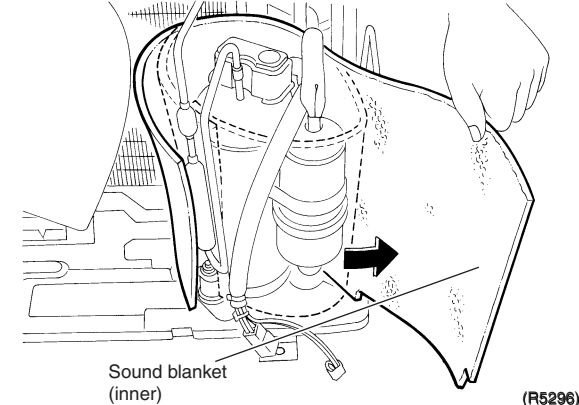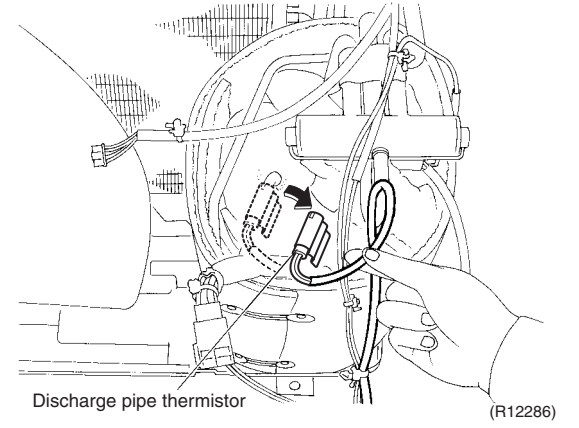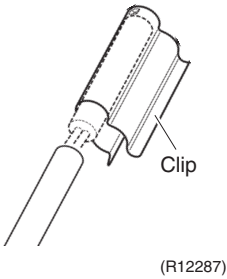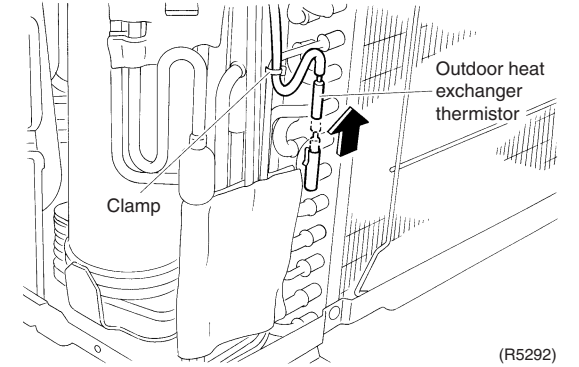**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the sound blanket (back).		
2	Remove the sound blanket (outer).		<ul style="list-style-type: none"> <li>■ Since the piping ports are torn easily, remove the sound blanket carefully.</li> </ul>
3	Remove the sound blanket (top upper).		

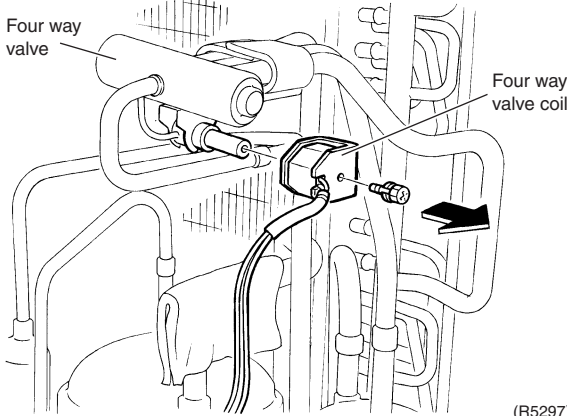



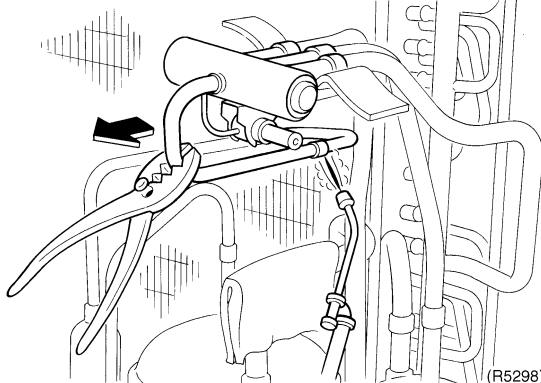
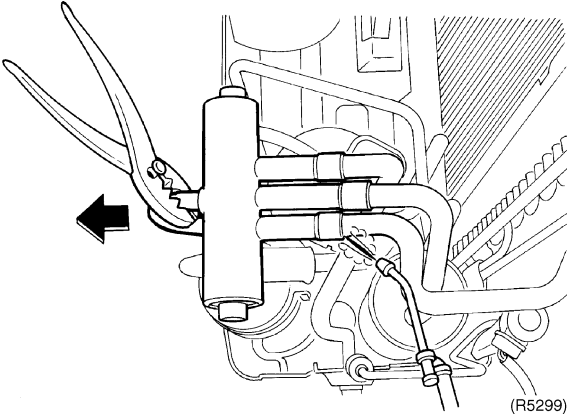
Step	Procedure	Points
4	Remove the sound blanket (top lower).	
		
5	Remove the sound blanket (inner).	
		
6	Release the discharge pipe thermistor.	<p>■ Be careful not to lose the clip for the thermistor.</p>
		
7	Cut the clamp and pull out the outdoor heat exchanger thermistor.	
		

## 5.6 Removal of Four Way Valve

### Procedure



**Warning** Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

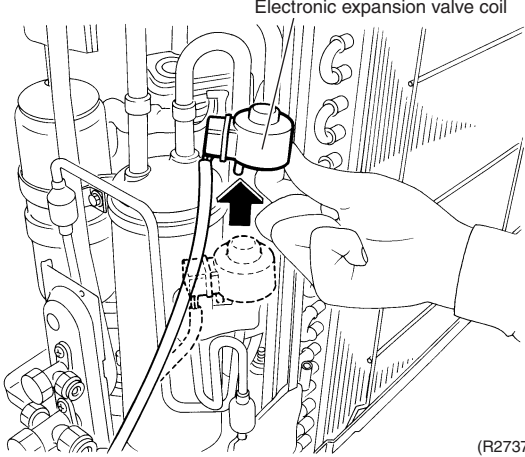
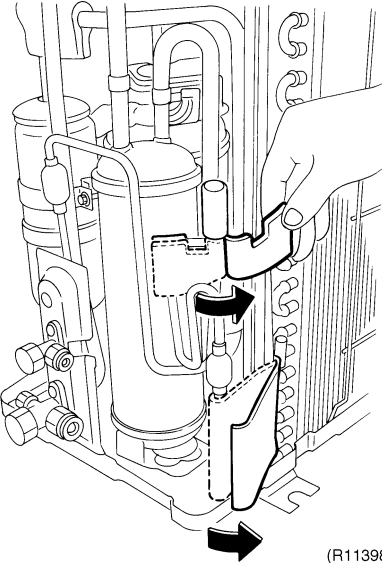
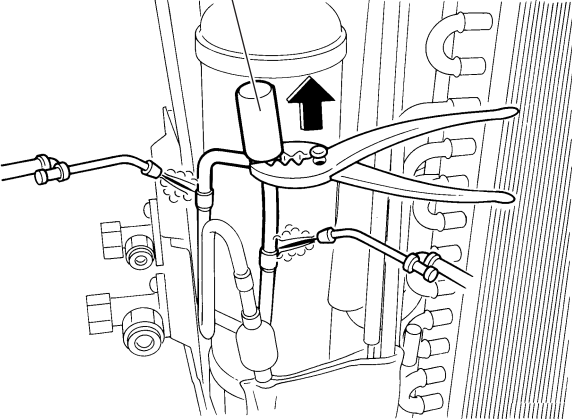
Step	Procedure	Points
1	<p>Remove the screw and remove the four way valve coil.</p>  <p style="text-align: right;">(R5297)</p>	<p> <b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p> <b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p> <b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant gas is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>	 <p style="text-align: right;">(R5298)</p>	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
2	<p>Heat up the brazed part of the four way valve and disconnect.</p>	<p> <p style="text-align: right;">(R5299)</p> </p>
3	<p>Heat up every brazed part in turn and disconnect.</p>	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> </ul>

## 5.7 Removal of Electronic Expansion Valve

**Procedure**



**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1	<p>Pull out the electronic expansion valve coil.</p>  <p style="text-align: right;">(R2737)</p>	
2	<p>Remove the sheets of putty.</p>  <p style="text-align: right;">(R11398)</p>	
3	<p>Heat up the 2 brazed parts of the electronic expansion valve and remove it.</p>  <p style="text-align: right;">(R2739)</p>	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>




# 5.8 Removal of Compressor

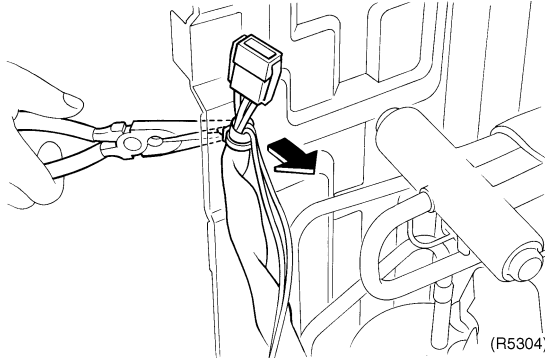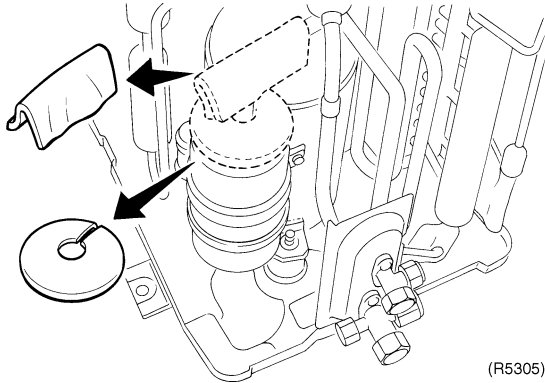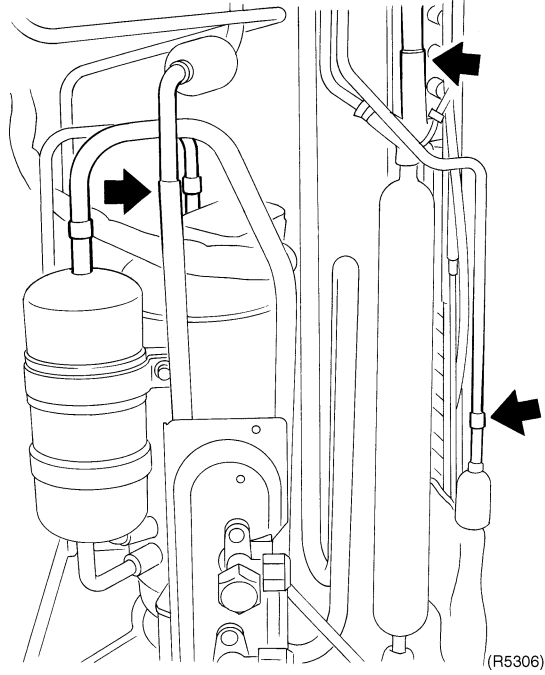**Procedure**






**Warning** Be sure to wait for 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the terminal cover.	<p>(R5301)</p> <p>(R5302)</p>	
2	Disconnect the lead wires of the compressor.	<p>(R12204)</p>	

Step	Procedure	Points
3	<p>Release the clamp with pliers to detach the compressor lead wires.</p>  <p>(R5304)</p>	
4	<p>Remove the putty.</p>  <p>(R5305)</p>	
5	<p>Heat up the brazed parts indicated by the arrows.</p>  <p>(R5306)</p>	<p><b>Warning</b> Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p><b>Warning</b> If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p><b>Warning</b> Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.</p> <p><b>Caution</b> From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
<ul style="list-style-type: none"> <li>■ Before working, make sure that the refrigerant gas is empty in the circuit.</li> <li>■ Be sure to apply nitrogen replacement when heating up the brazed part.</li> </ul>		



Step	Procedure	Points
6	Remove the 2 nuts of the compressor.	<p><b>Cautions for restoration</b></p> <ol style="list-style-type: none"> <li>1. Restore the piping by non-oxidation brazing.</li> <li>2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.</li> </ol>
7	Heat up the brazed part of the discharge side and disconnect.	<p><b>In case of difficulty with gas brazing machine</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the brazed part where is easy to disconnect and restore.</li> <li>2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.</li> </ol>
8	Heat up the brazed part of the suction side and disconnect.	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.</li> <li>■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.</li> <li>■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.</li> <li>■ Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin.</li> </ul>
9	Lift the compressor up and remove it.	

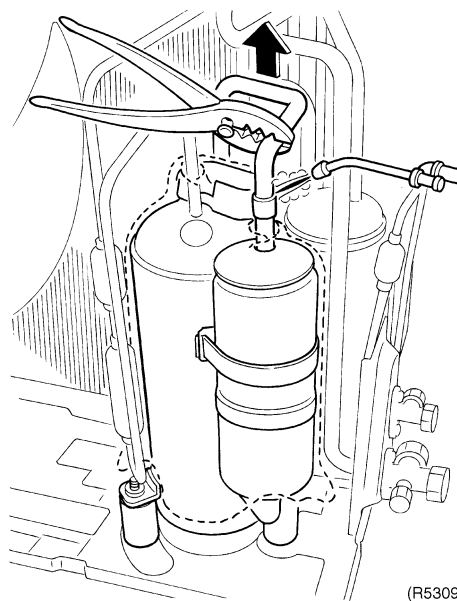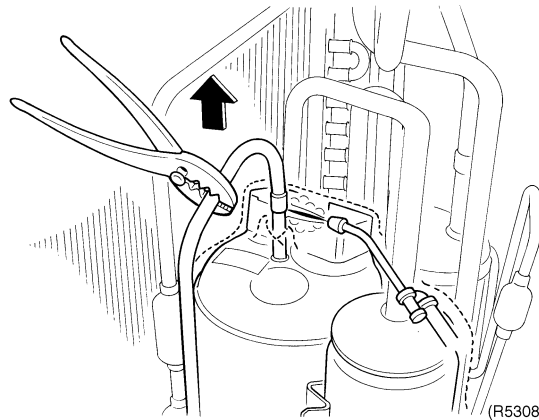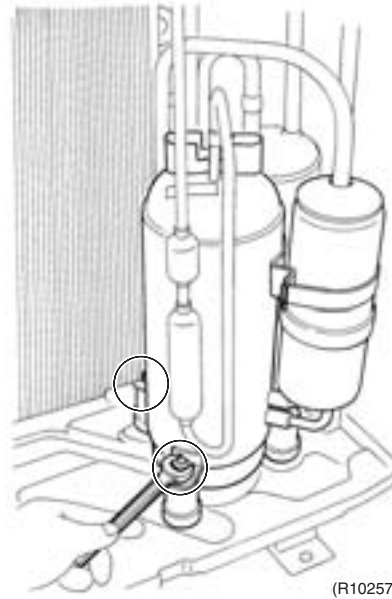

---

# Part 8

## Trial Operation and Field Settings

1. Trial Operation .....	256
2. Field Settings .....	257
2.1 Model Type Setting .....	257
2.2 When 2 Units are Installed in 1 Room.....	258
2.3 Standby Electricity Saving.....	259
2.4 Facility Setting Jumper and Switch (cooling at low outdoor temperature).....	260
2.5 Jumper and Switch Settings.....	261
3. Application of Silicon Grease to a Power Transistor and a Diode Bridge .....	262

# 1. Trial Operation

## Outline

1. Measure the supply voltage and make sure that it falls in the specified range.
2. Trial operation should be carried out in either cooling or heating mode.
3. Carry out the trial operation in accordance with the operation manual to ensure that all functions and parts, such as louver movement, are working properly.
  - The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
  - If the circuit breaker trips to shut off the power to the air conditioner, the system backs up the operation mode. The system then restarts operation with the previous mode when the circuit breaker is restored.

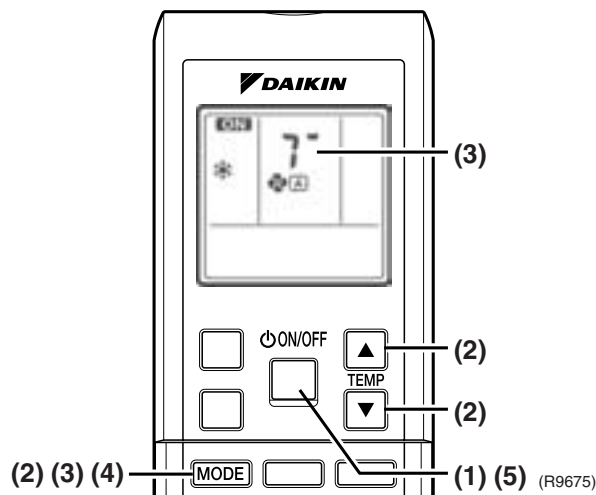
In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

- Trial operation may be disabled in either mode depending on the room temperature.
- After trial operation is complete, set the temperature to a normal level.  
(26°C to 28°C in cooling mode, 20°C to 24°C in heating mode)
- For protection, the system does not start for 3 minutes after it is turned off.

## Detail

### ARC452 Series

- (1) Press the ON / OFF button to turn on the system.
- (2) Press the both of TEMP buttons and the MODE button at the same time.
- (3) Press the MODE button twice.  
(“?” appears on the display to indicate that trial operation is selected.)
- (4) Press the MODE button and select operation mode.
- (5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press the ON / OFF button.




## 2. Field Settings

### 2.1 Model Type Setting

#### ARC452A1

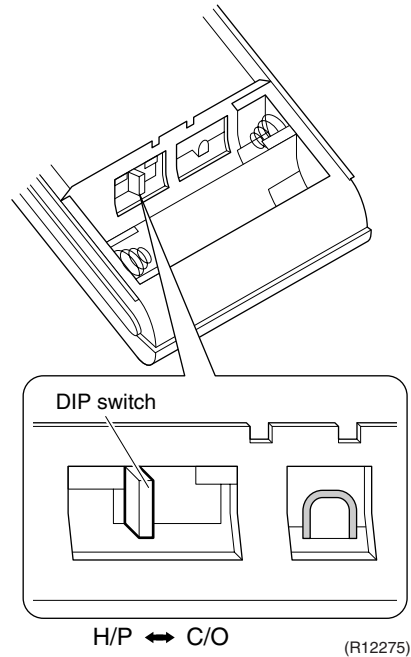- This remote controller is common to the heat pump model and cooling only model. Use the DIP switch on the remote controller to set the heat pump model or cooling only model.
- Make the setting as shown in the illustration. (The factory set is the heat pump side.)
  - Heat pump model: Set the DIP switch to H/P.
  - Cooling only model: Set the DIP switch to C/O.




## 2.2 When 2 Units are Installed in 1 Room

When 2 indoor units are installed in 1 room, 1 of the 2 pairs of indoor unit and wireless remote controller can be set for different address.

Both the indoor unit PCB and the wireless remote controller need alteration.

### How to set the different addresses

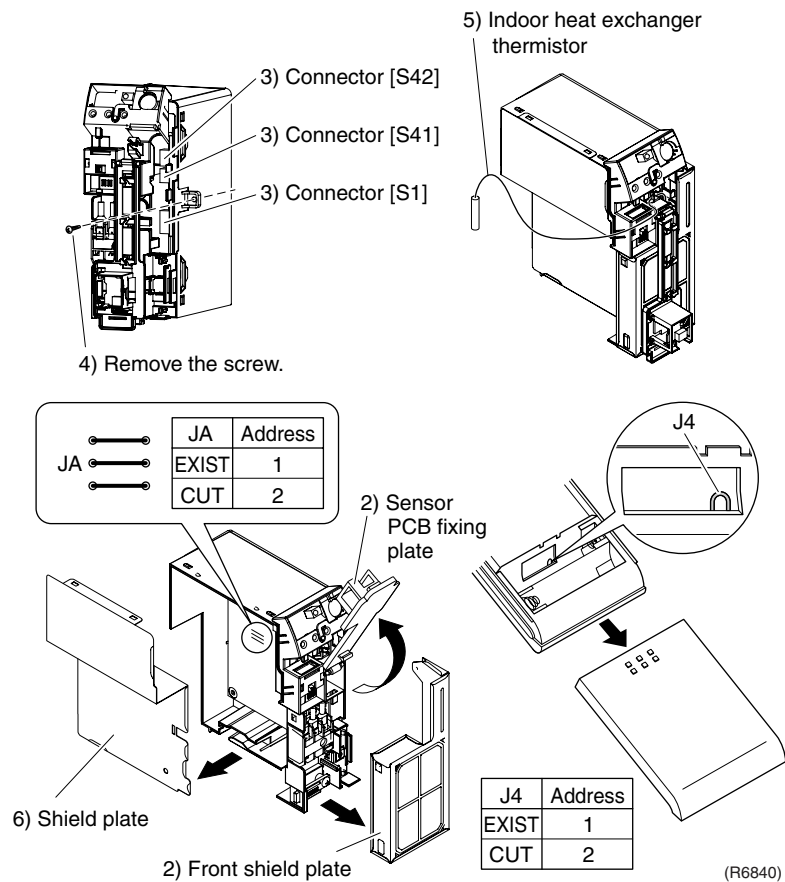- 1) Remove the front grille.
- 2) Lift the sensor PCB fixing plate and remove the front shield plate.
- 3) Disconnect the connectors [S1] [S41] [S42].
- 4) Remove the electric box (1 screw).
- 5) Pull out the indoor heat exchanger thermistor.
- 6) Remove the shield plate (8 tabs).
- 7) Cut the address jumper (JA) on the indoor unit PCB.
- 8) Cut the address jumper (J4) in the remote controller.



## 2.3 Standby Electricity Saving

### Outline

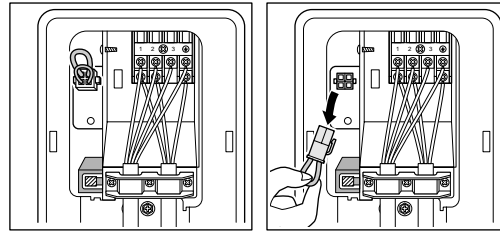
#### RK(X)S25/35G2V1B, RK(X)S25/35G2V1B9 Models Only

This function turns power supply OFF to the outdoor unit and sets the indoor unit into energy-saving mode, thus reducing the power consumption of the air conditioner.

### Detail

#### Following procedure is required for turning ON the function.

1. Check that the main power supply is turned OFF. Turn OFF if it has not been turned OFF.
2. Remove the stop valve cover.
3. Disconnect the selective connector for standby electricity saving.
4. Turn ON the main power supply.



Function OFF

Function ON

The standby electricity saving function is turned OFF before shipping.



#### Caution

Before connecting or disconnecting the selective connector for standby electricity saving, make sure that the main power supply is turned OFF.

(R11820)

## 2.4 Facility Setting Jumper and Switch (cooling at low outdoor temperature)

**Outline**

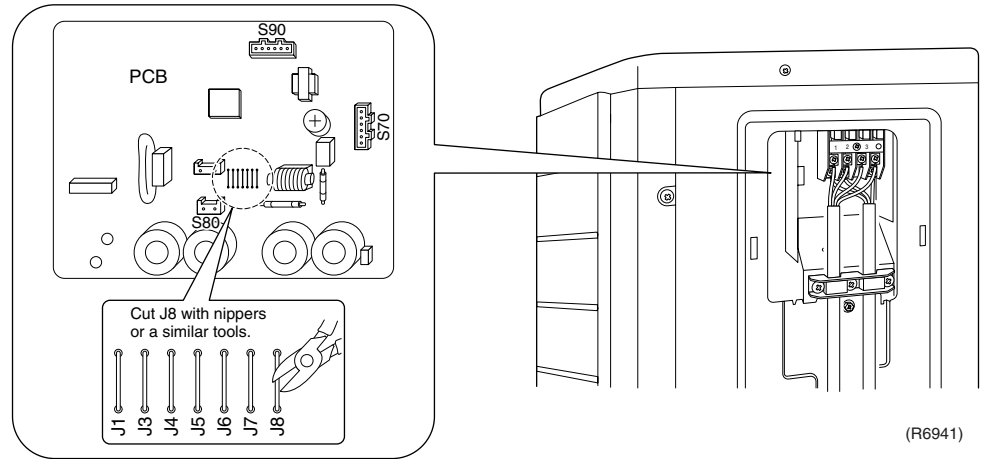
**For Cooling Only Model**

This function is limited only for facilities (the target of air conditioning is equipment (such as computer)). Never use it in a residence or office (the space where there is a human).


**Detail**

You can expand the operation range to  $-15^{\circ}\text{C}$  by cutting jumper or turning on switch on the outdoor unit PCB. If the outdoor temperature falls to  $-20^{\circ}\text{C}$  or lower, the operation stops. If the outdoor temperature rises, the operation starts again.


■ **RKS25/35F2V1B**




■ **RKS25/35G2V1B**

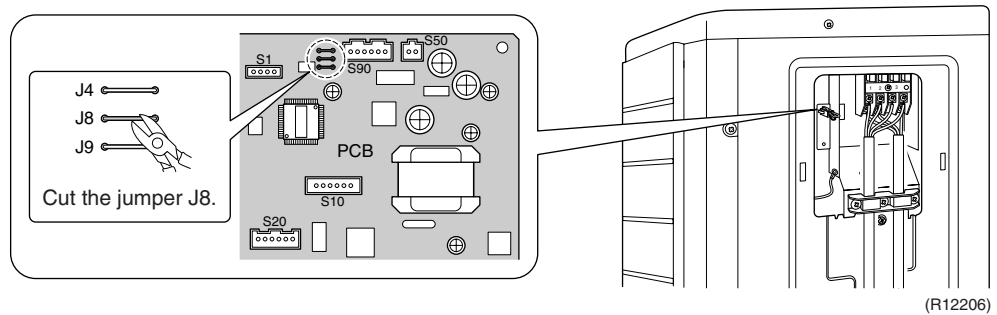

■ **RKS25/35G2V1B9**

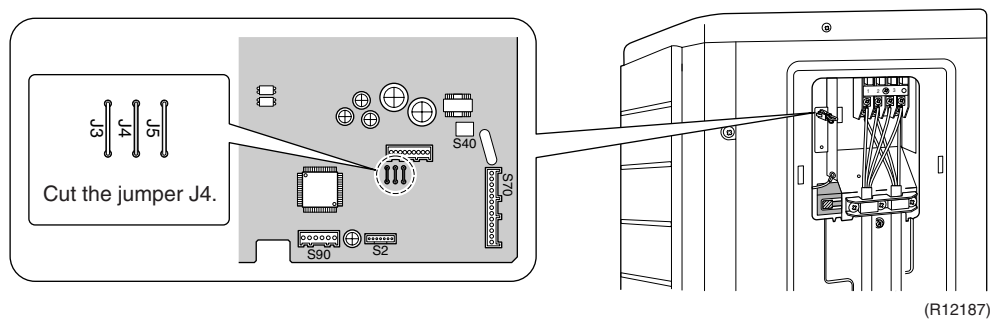

■ RKS50F2V1B, RKS50G2V1B

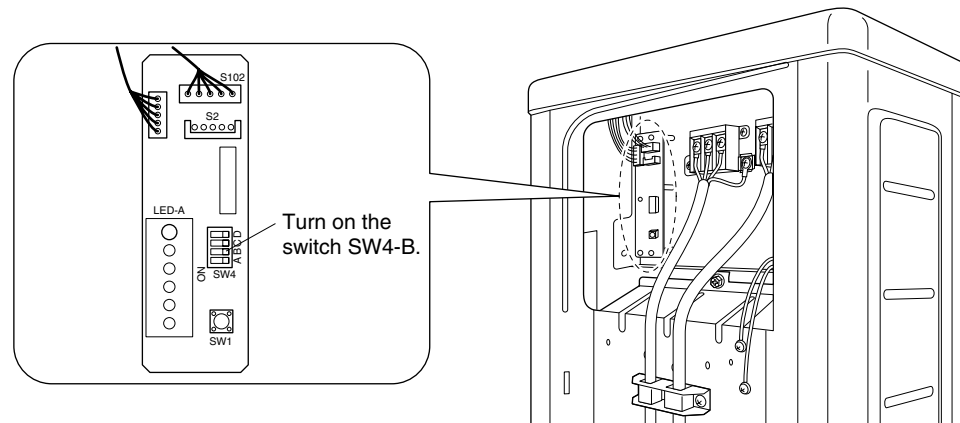

(R12186)



**Caution**

1. If the outdoor unit is installed where the outdoor heat exchanger of the unit is exposed to direct wind, provide a windbreak wall.
2. Intermittent noises may be produced by the indoor unit due to the outdoor fan turning on and off when using facility settings.
3. Do not place humidifiers or other items which might raise the humidity in rooms where facility settings are being used.  
A humidifier might cause dew jumping from the indoor unit outlet vent.
4. Cutting jumper sets the indoor fan tap to the highest position. (25/35 class)
5. Use the indoor unit at the highest level of airflow rate. (50 class)

## 2.5 Jumper and Switch Settings

Jumper	Function	When connected (factory set)	When cut
JB (on indoor unit PCB)	Fan speed setting when compressor stops for thermostat OFF. (effective only at cooling operation)	Fan speed setting ; Remote controller setting	Fan rpm is set to "0" <Fan stop>
JC (on indoor unit PCB)	Power failure recovery function	Auto-restart	The unit does not resume operation after recovering from a power failure. Timer ON/OFF settings are cleared.
J5 (on outdoor unit PCB of 25/35 class)	Improvement of defrost performance	Standard control	Reinforced control (ex. The frequency increases, the duration time of defrost lengthens.)

Switch	Function	OFF (factory set)	ON
SW4-C (on outdoor unit PCB of 50 class)	Improvement of defrost performance	Standard control	Reinforced control (ex. The frequency increases, the duration time of defrost lengthens.)

<Floor Standing Type>

Switch	Function	OFF (factory set)	ON
SW2-4 (on indoor unit PCB)	Upward airflow limit setting	Exposed or half embedded installation	Set the switch to ON position when you install the indoor unit embedded in the wall.



For the location of the jumper and the switch, refer to the following pages.

Indoor unit; page 21

Outdoor unit; page 23, 25, 27, 29



### 3. Application of Silicon Grease to a Power Transistor and a Diode Bridge

#### Applicable Models

All outdoor units using inverter type compressor for room air conditioner.

When the printed circuit board (PCB) of an outdoor unit is replaced, it is required that silicon grease (\*1) is certainly applied to the heat radiation part (the contact point to the radiation fin) of the power transistor and diode bridge.

\*1: Parts number of the silicon grease – 1172698 (Drawing number 3FB03758-1)

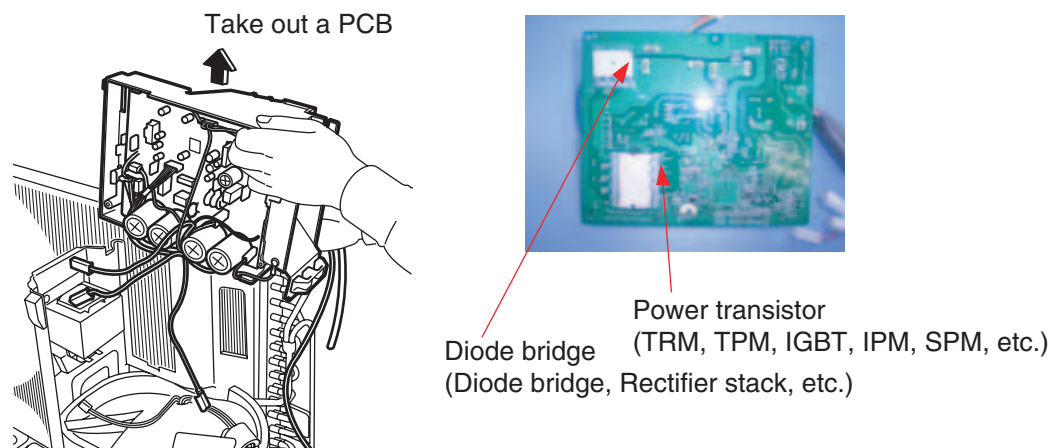
#### Details

The silicon grease is an essential article for encouraging the heat radiation of the power transistor and the diode bridge. Applying the paste should be implemented in accordance with the following instruction.

Remark: There is the possibility of failure with smoke in case of bad heat radiation.

- Wipe off the old silicon grease completely on a radiation fin.
- Apply the silicon grease evenly to the whole.
- Do not leave any foreign object such as solder or paper waste between the power transistor and the radiation fin, and also the diode bridge, and the radiation fin.
- Tighten the screws of the power transistor and the diode bridge, and contact to the radiation fin without any gap.


#### <Example>



**OK : Evenly applied silicon grease.**



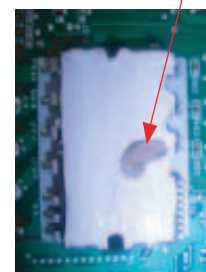**NG : Not evenly applied**



**NG : Foreign object**

(R9056)

---

# Part 9

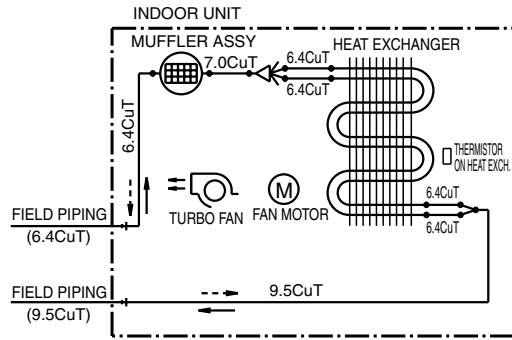
# Appendix

1. Piping Diagrams.....	264
1.1 Indoor Unit.....	264
1.2 Outdoor Unit.....	265
2. Wiring Diagrams.....	268
2.1 Indoor Unit.....	268
2.2 Outdoor Unit.....	269

# 1. Piping Diagrams

## 1.1 Indoor Unit


FVXS25/35FV1B



REFRIGERANT FLOW  
 —> COOLING  
 - - -> HEATING

4D056137A

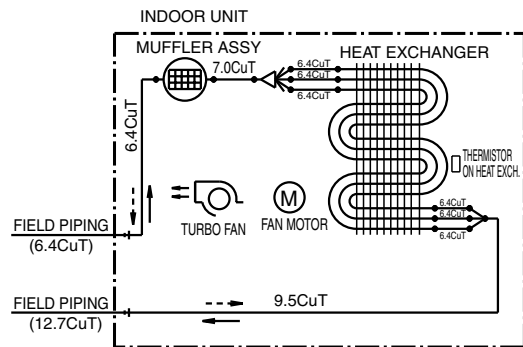FVXS50FV1B




REFRIGERANT FLOW  
 —> COOLING  
 - - -> HEATING

4D056138A

# 1.2 Outdoor Unit

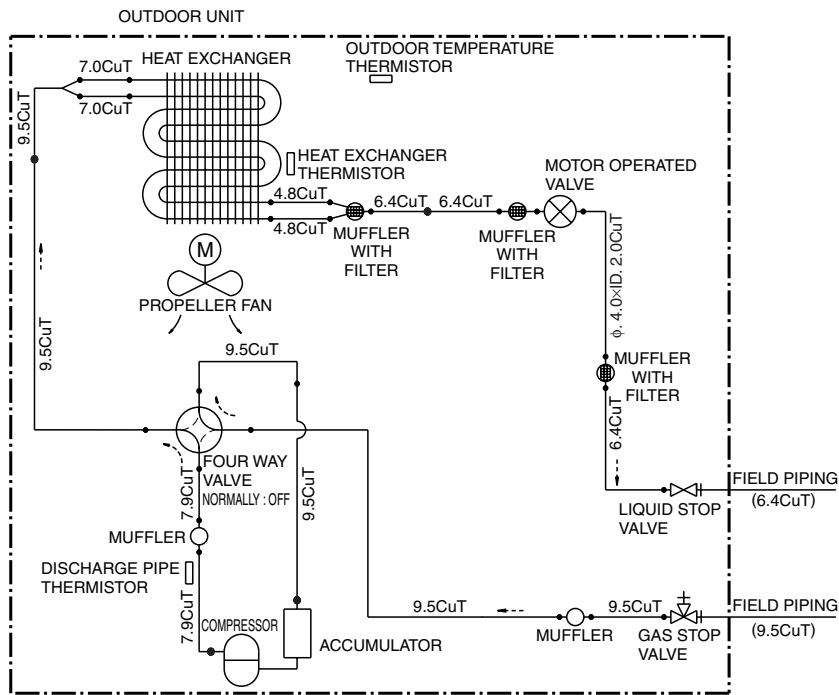
## RKS25/35F2V1B



REFRIGERANT FLOW  
 ---> COOLING

3D047318G


## RKS25/35G2V1B, RKS25/35G2V1B9

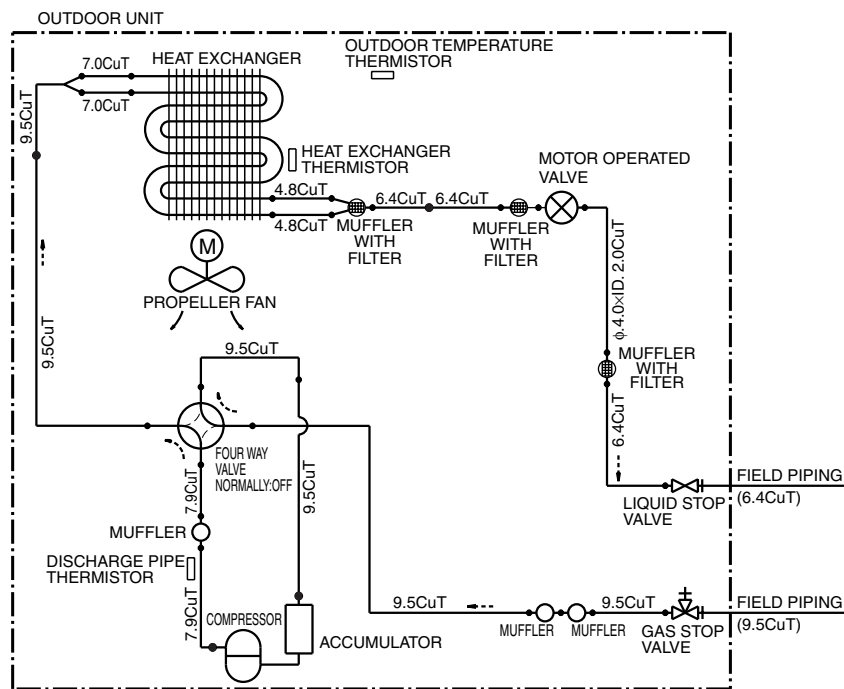

REFRIGERANT FLOW  
 ---> COOLING


3D059589B

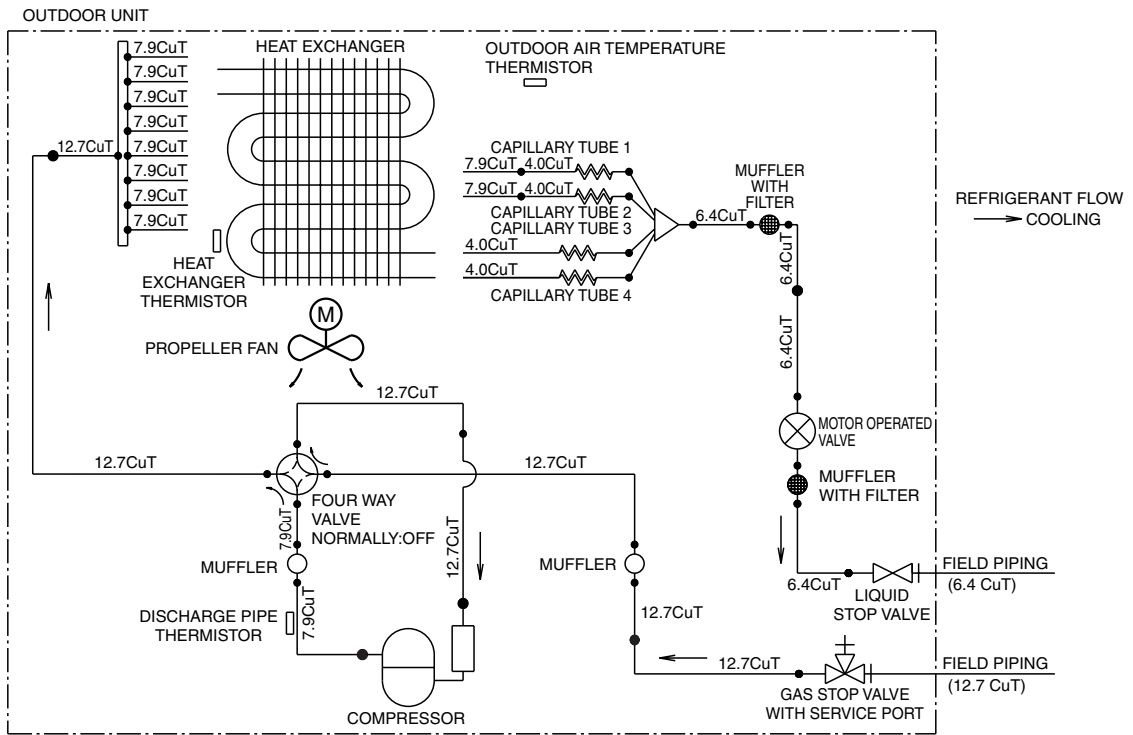RKS50F2V1B, RKS50G2V1B




3D051636N

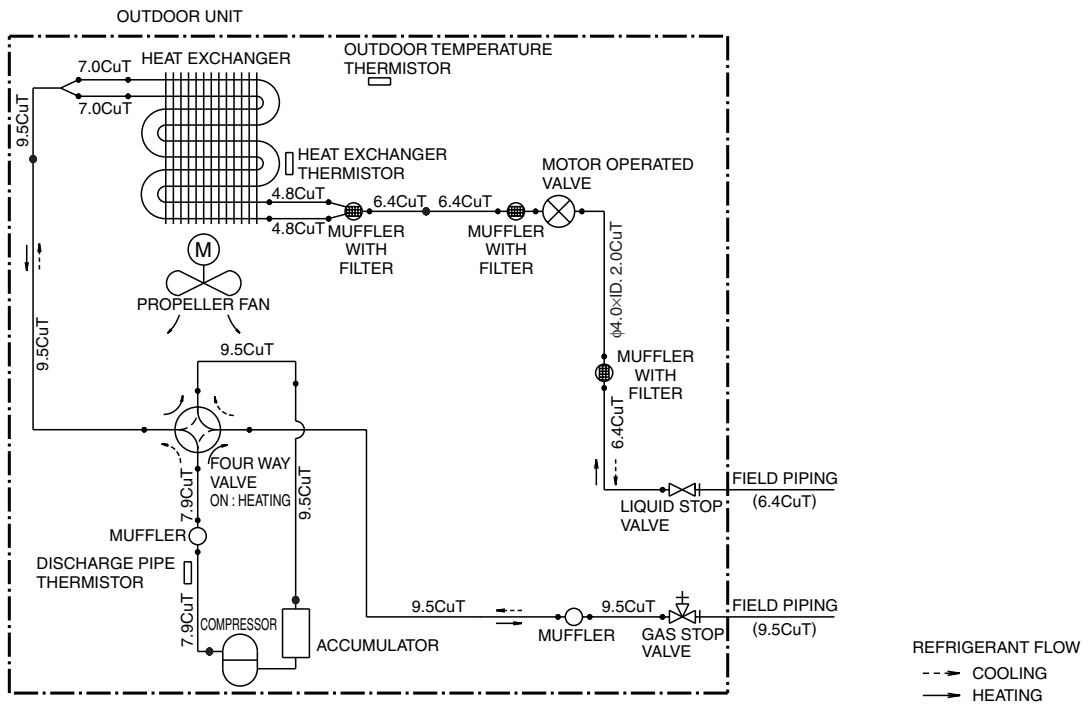RXS25/35F2V1B




3D047316Q

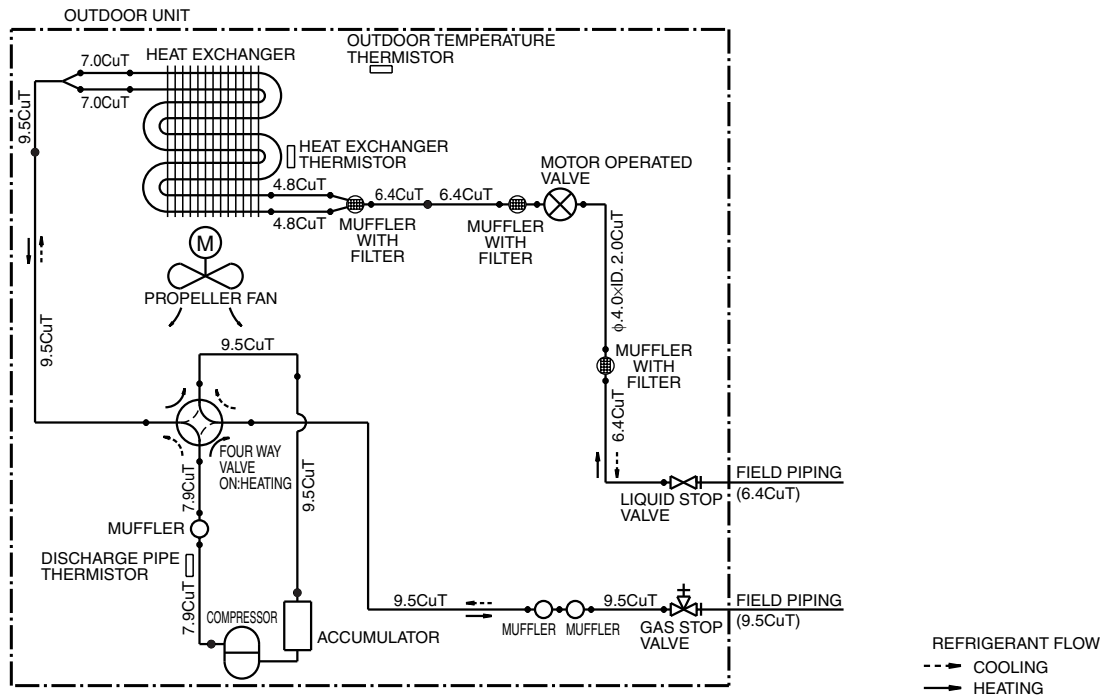RXS25/35G2V1B, RXS25/35G2V1B9



3D059586E

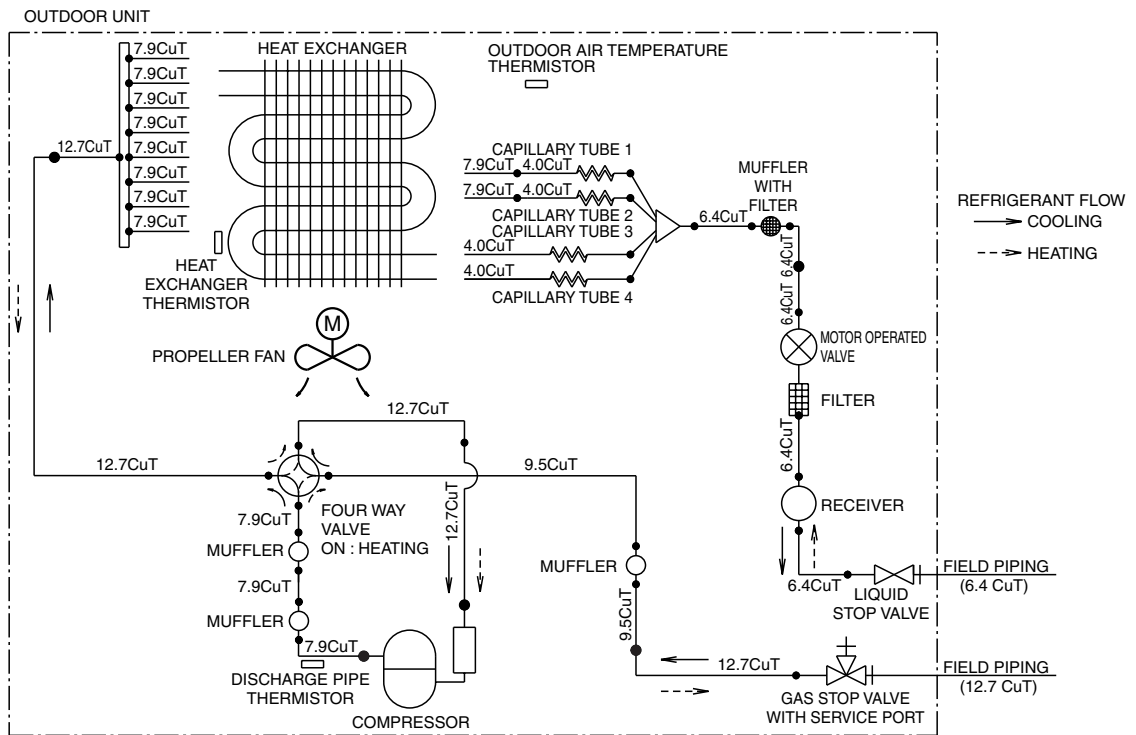RXS50F2V1B, RXS50G2V1B




3D051637Q

# 2. Wiring Diagrams
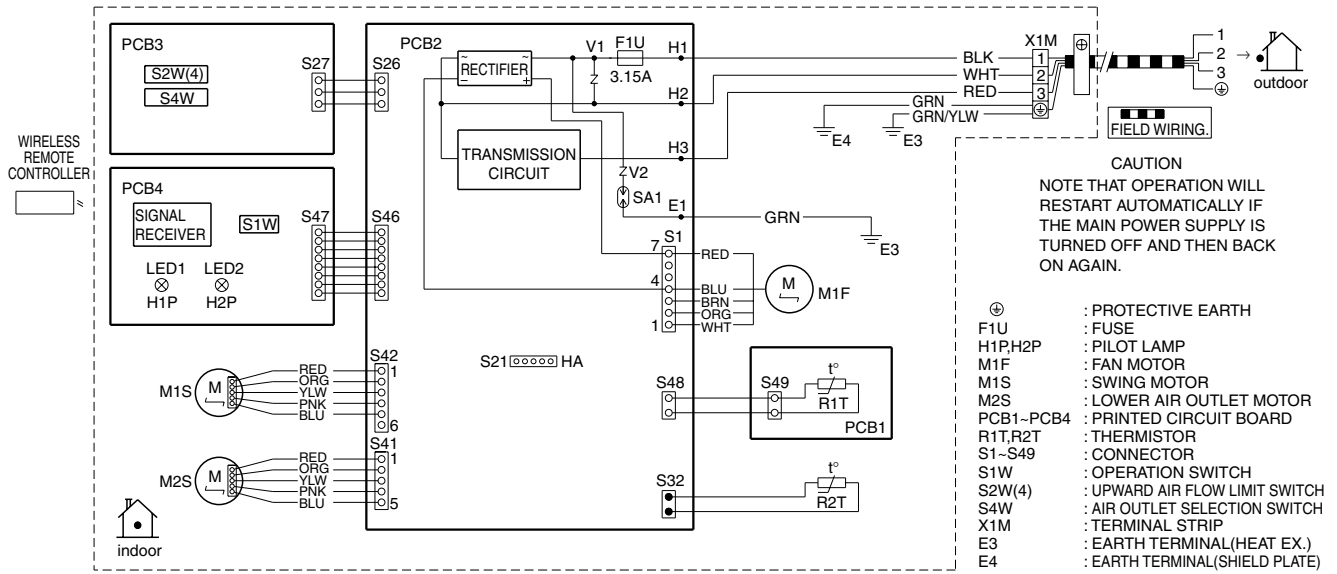
## 2.1 Indoor Unit


FVXS25/35/50FV1B




3D055953A

## 2.2 Outdoor Unit
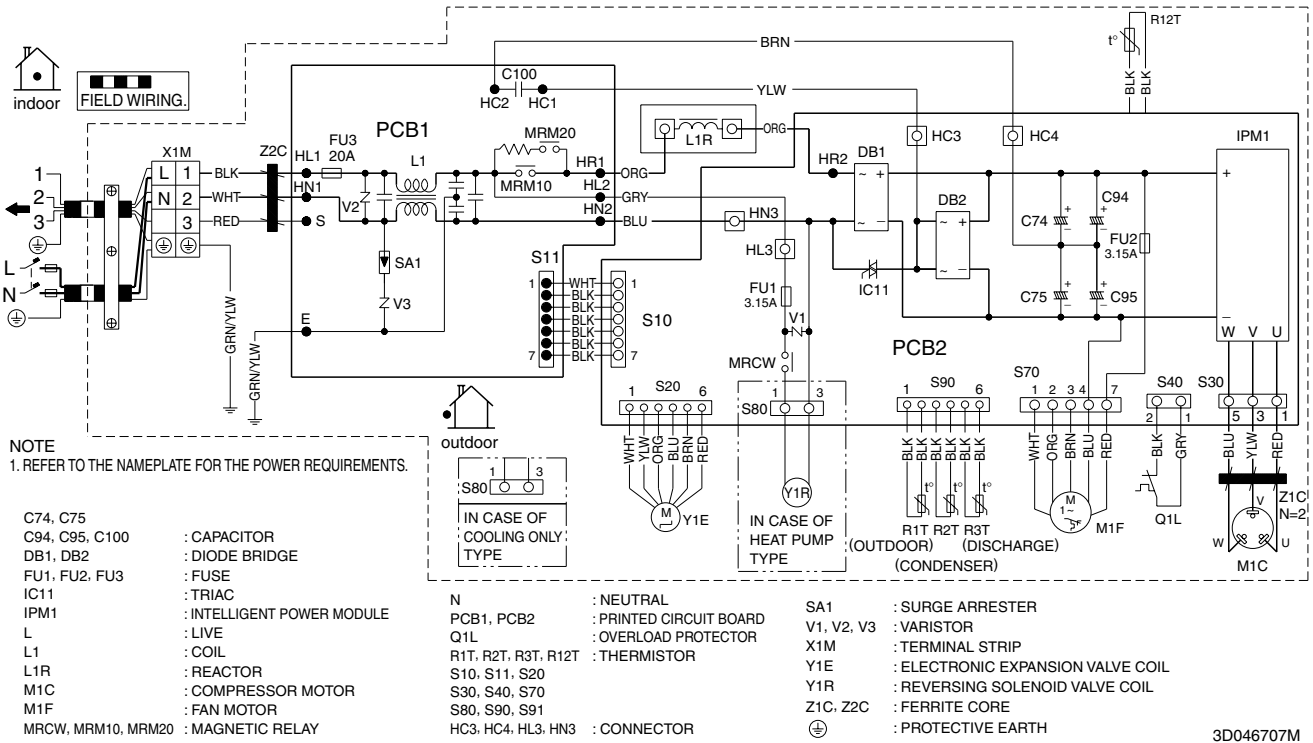
### RK(X)S25/35F2V1B




### RK(X)S25/35G2V1B

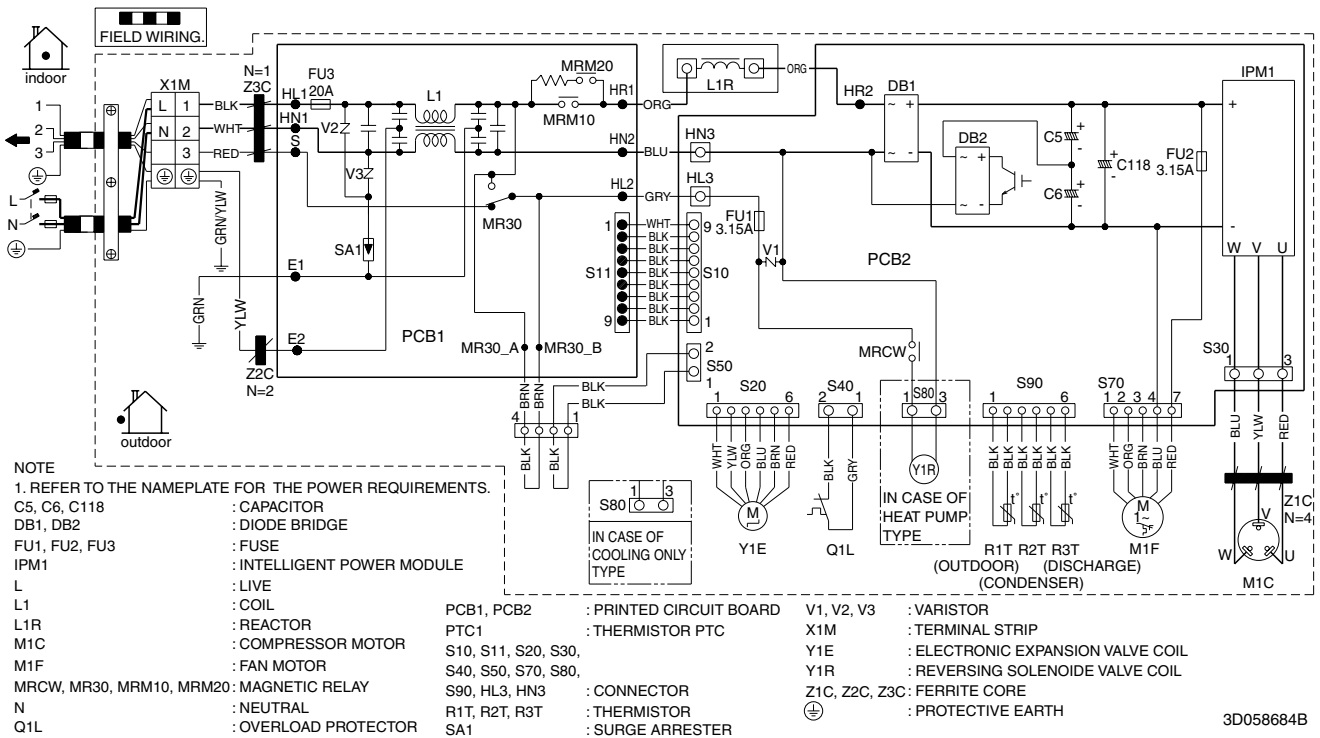





RK(X)S25/35G2V1B9

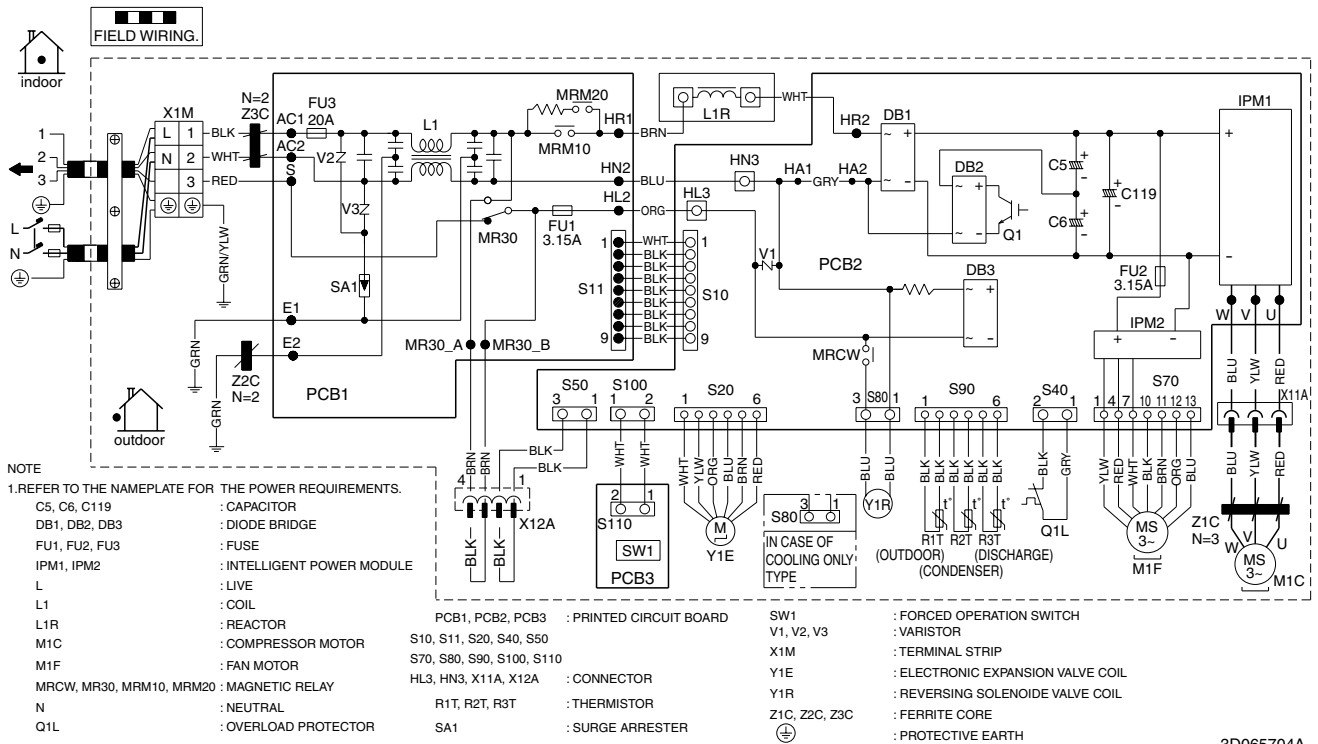

RKS50F2V1B, RKS50G2V1B

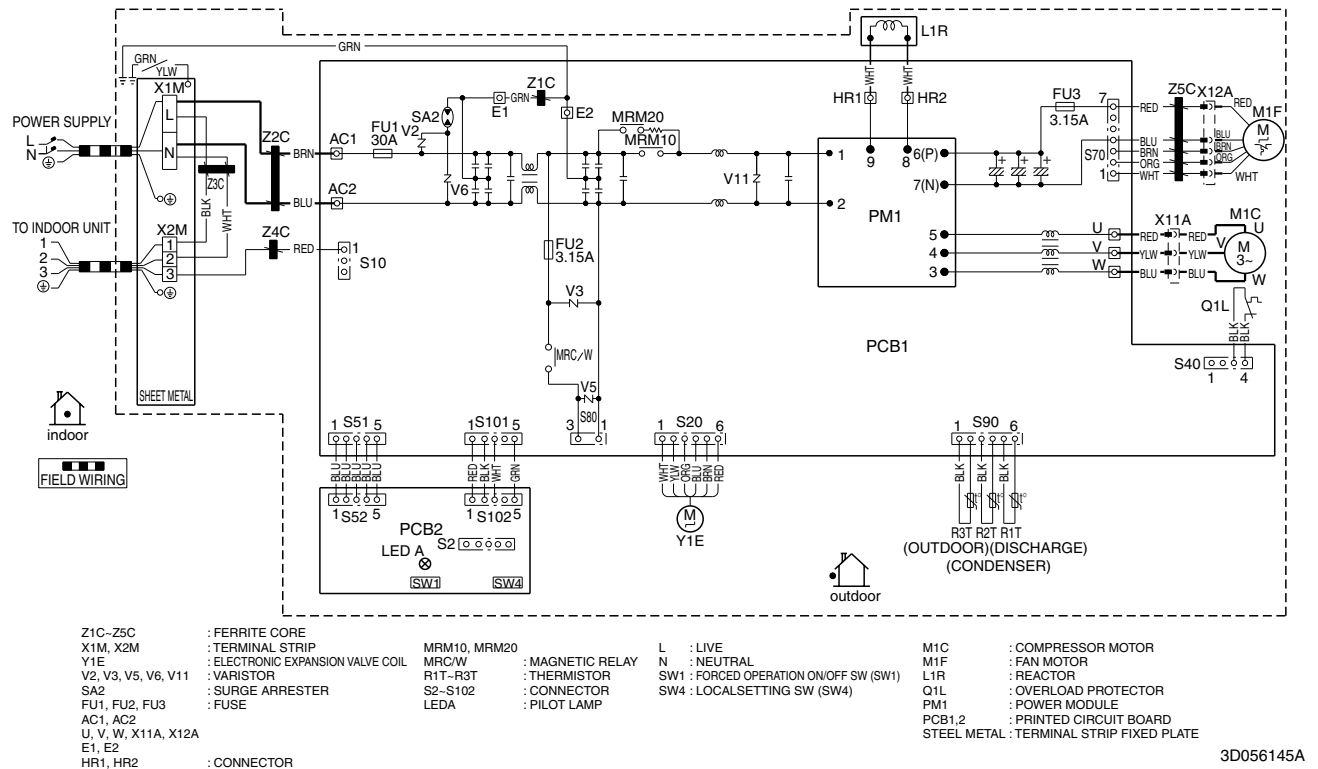

RXS50F2V1B, RXS50G2V1B

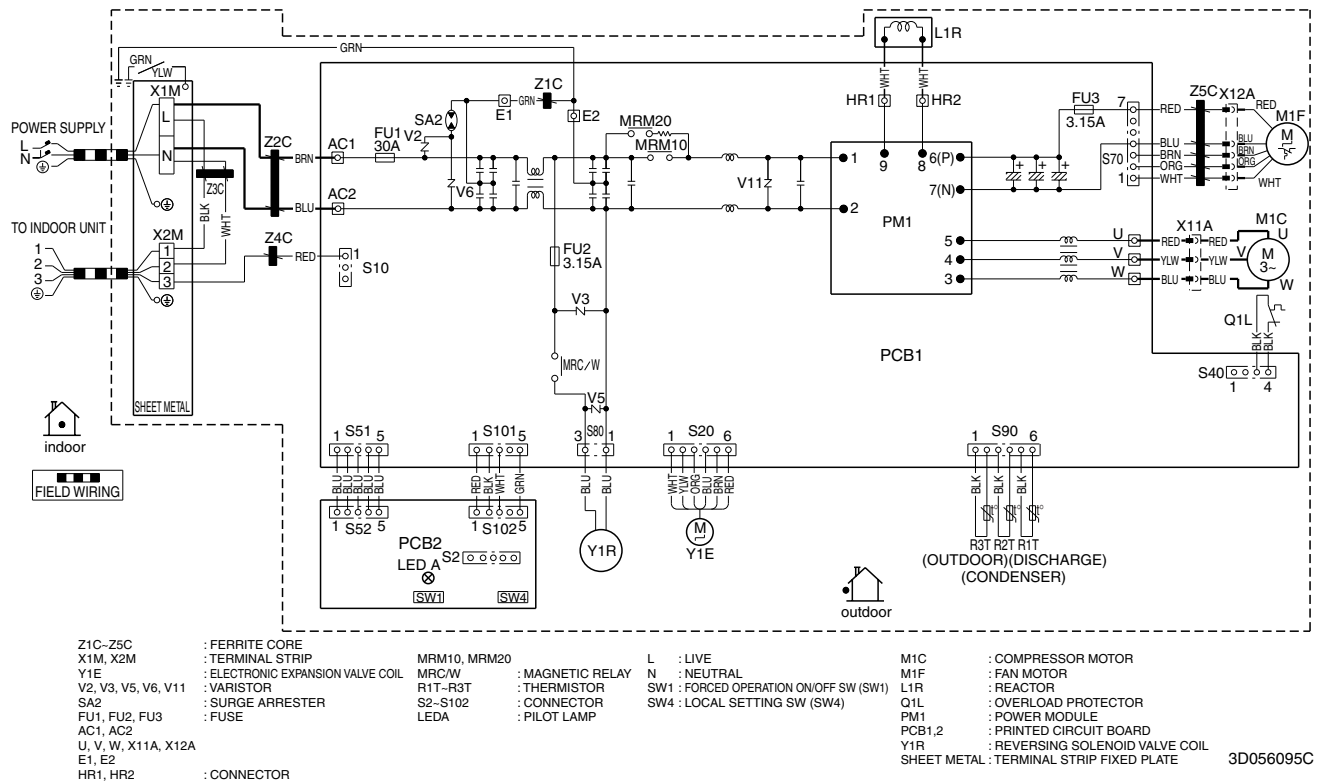

**Warning**



- Daikin Industries, Ltd.'s products are manufactured for export to numerous countries throughout the world. Daikin Industries, Ltd. does not have control over which products are exported to and used in a particular country. Prior to purchase, please therefore confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

### Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107

Organization:  
DAIKIN INDUSTRIES, LTD.  
AIR CONDITIONING MANUFACTURING DIVISION

Scope of Registration:  
THE DESIGN/DEVELOPMENT AND MANUFACTURE OF  
COMMERCIAL AIR CONDITIONING, HEATING, COOLING,  
REFRIGERATING EQUIPMENT, COMMERCIAL HEATING  
EQUIPMENT, RESIDENTIAL AIR CONDITIONING  
EQUIPMENT, HEAT RECLAIM VENTILATION, AIR  
CLEANING EQUIPMENT, MARINE TYPE CONTAINER  
REFRIGERATION UNITS, COMPRESSORS AND VALVES.



JQA-1452

Organization:  
DAIKIN INDUSTRIES  
(THAILAND) LTD.

Scope of Registration:  
THE DESIGN/DEVELOPMENT  
AND MANUFACTURE OF AIR  
CONDITIONERS AND THE  
COMPONENTS INCLUDING  
COMPRESSORS USED FOR THEM



EC99J2044

All of the Daikin Group's business facilities and subsidiaries in Japan are certified under the ISO 14001 international standard for environment management.

### Dealer

### **DAIKIN INDUSTRIES, LTD.**

Head Office:  
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,  
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:  
JR Shinagawa East Bldg., 2-18-1, Konan,  
Minato-ku, Tokyo, 108-0075 Japan

[http://www.daikin.com/global\\_ac/](http://www.daikin.com/global_ac/)

©All rights reserved