


Service Manual

Inverter Multi for 2 Rooms G-Series

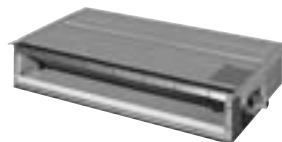

[Applied Models]

- Inverter Multi : Cooling Only
- Inverter Multi : Heat Pump

Inverter Multi for 2 Rooms G-Series

●Cooling Only

Outdoor Unit

2MKS40GV1B
2MKS40G2V1B
2MKS50GV1B
2MKS50G2V1B

Indoor Unit

FTXS20G2V1B
FTXS25G2V1B
FTXS35G2V1B
FTXS42G2V1B
FTXS50G2V1B
FVXS25FV1B
FVXS35FV1B
FVXS50FV1B

FLKS25BAVMB
FLKS35BAVMB
FLKS50BAVMB
FDKS25EAVMB
FDKS35EAVMB
FDKS50CVMB
FFQ25B8V1B
FFQ35B8V1B
FFQ50B8V1B

●Heat Pump

Outdoor Unit

2MXS40GV1B
2MXS40G2V1B
2MXS50GV1B
2MXS50G2V1B

Indoor Unit

FTXG25EV1BW(S)
FTXG35EV1BW(S)
CTXG50EV1BW(S)
FTXG25JV1BW(S)
FTXG35JV1BW(S)
CTXG50JV1BW(S)
FTXS20G2V1B
FTXS25G2V1B
FTXS35G2V1B
FTXS42G2V1B
FTXS50G2V1B
FVXS25FV1B
FVXS35FV1B
FVXS50FV1B

FLXS25BAVMB
FLXS35BAVMB
FLXS50BAVMB
FDXS25EAVMB
FDXS35EAVMB
FDXS50CVMB
FFQ25B8V1B
FFQ35B8V1B
FFQ50B8V1B

1. Introduction	vi
1.1 Safety Cautions	vi
1.2 Used Icons	x
Part 1 List of Functions	1
1. Functions.....	2
1.1 Cooling Only.....	2
1.2 Heat Pump	5
Part 2 Specifications	10
1. Specifications	11
1.1 Cooling Only - Indoor Units	11
1.2 Cooling Only - Outdoor Units	17
1.3 Heat Pump - Indoor Units.....	19
1.4 Heat Pump - Outdoor Units	28
Part 3 Printed Circuit Board Connector Wiring Diagram	30
1. Indoor Unit.....	31
1.1 Wall Mounted Type	31
1.2 Floor Standing Type	39
1.3 Floor / Ceiling Suspended Dual Type.....	41
1.4 Duct Connected Type.....	43
1.5 Ceiling Mounted Cassette Type	45
2. Outdoor Unit.....	48
2.1 2MK(X)S40/50GV1B, 2MK(X)S40/50G2V1B	48
Part 4 Function and Control.....	50
1. Main Functions.....	51
1.1 Temperature Control	51
1.2 Frequency Principle.....	51
1.3 Operation Starting Control.....	53
1.4 Airflow Direction Control.....	54
1.5 Fan Speed Control for Indoor Units.....	56
1.6 Program Dry Operation	57
1.7 Automatic Operation.....	58
1.8 Thermostat Control.....	59
1.9 NIGHT SET Mode	61
1.10 ECONO Operation	62
1.11 HOME LEAVE Operation	63
1.12 2-Area INTELLIGENT EYE Operation	64
1.13 INTELLIGENT EYE Operation	66
1.14 Inverter POWERFUL Operation	67
1.15 Other Functions.....	69
2. Function of Thermistor	71
3. Control Specification	73
3.1 Mode Hierarchy	73
3.2 Frequency Control.....	75
3.3 Controls at Mode Changing / Start-up.....	78
3.4 Discharge Pipe Temperature Control.....	79

3.5	Input Current Control.....	80
3.6	Freeze-up Protection Control	80
3.7	Heating Peak-cut Control	81
3.8	Outdoor Fan Control.....	81
3.9	Liquid Compression Protection Function.....	82
3.10	Defrost Control	82
3.11	Electronic Expansion Valve Control	83
3.12	Malfunctions	88

Part 5 Operation Manual 90

1.	System Configuration.....	91
2.	FTXG-J, CTXG-J Series	92
2.1	Name of Parts	92
2.2	AUTO · DRY · COOL · HEAT · FAN Operation	96
2.3	Adjusting the Airflow Direction and Rate	98
2.4	COMFORT AIRFLOW Operation	100
2.5	INTELLIGENT EYE Operation	101
2.6	POWERFUL Operation	103
2.7	OUTDOOR UNIT QUIET Operation	104
2.8	ECONO Operation	105
2.9	OFF TIMER Operation	106
2.10	ON TIMER Operation	107
2.11	WEEKLY TIMER Operation	108
3.	FTXS, FVXS Series	114
3.1	Manual Contents and Reference Page	114
3.2	Names of Parts.....	115
3.3	AUTO · DRY · COOL · HEAT · FAN Operation	121
3.4	Adjusting the Airflow Direction.....	123
3.5	COMFORT AIRFLOW and INTELLIGENT EYE Operation.....	127
3.6	POWERFUL Operation	130
3.7	OUTDOOR UNIT QUIET Operation.....	131
3.8	ECONO Operation	132
3.9	TIMER Operation	133
3.10	WEEKLY TIMER Operation	135
4.	FTXG-E, CTXG-E, FLK(X)S, FDK(X)S Series	141
4.1	Manual Contents and Reference Page	141
4.2	Remote Controller	142
4.3	AUTO · DRY · COOL · HEAT · FAN Operation	145
4.4	Adjusting the Airflow Direction.....	147
4.5	POWERFUL Operation	151
4.6	OUTDOOR UNIT QUIET Operation.....	152
4.7	HOME LEAVE Operation	153
4.8	INTELLIGENT EYE Operation	155
4.9	TIMER Operation	157
4.10	Note for Multi System	159
5.	FFQ Series.....	160

Part 6 Service Diagnosis..... 173

1.	Caution for Diagnosis.....	175
1.1	Troubleshooting with LED	175

2. Problem Symptoms and Measures	177
3. Service Check Function	178
3.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series	178
3.2 SA Indoor Unit - FFQ Series	187
4. Code Indication on Remote Controller	192
4.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series	192
4.2 SA Indoor Unit - FFQ Series	192
4.3 Outdoor Unit	193
5. Troubleshooting for RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series	194
5.1 Indoor Unit PCB Abnormality	194
5.2 Freeze-up Protection Control or Heating Peak-cut Control	195
5.3 Fan Motor or Related Abnormality	197
5.4 Thermistor or Related Abnormality (Indoor Unit)	200
6. Troubleshooting for SA Indoor Unit - FFQ Series	201
6.1 Indoor Unit PCB Abnormality	201
6.2 Drain Water Level System Abnormality	202
6.3 Fan Motor or Related Abnormality	204
6.4 Drain System Abnormality	205
6.5 Thermistor or Related Abnormality	206
6.6 Remote Controller Air Thermistor Abnormality	208
7. Troubleshooting for Outdoor Unit	209
7.1 Anti-icing Control for Indoor Unit	209
7.2 OL Activation (Compressor Overload)	211
7.3 Compressor Lock	212
7.4 DC Fan Lock	213
7.5 Input Overcurrent Detection	214
7.6 Discharge Pipe Temperature Control	215
7.7 High Pressure Control in Cooling	216
7.8 Compressor Sensor System Abnormality	217
7.9 Position Sensor Abnormality	218
7.10 DC Voltage / Current Sensor Abnormality	220
7.11 Thermistor or Related Abnormality (Outdoor Unit)	221
7.12 Electrical Box Temperature Rise	223
7.13 Radiation Fin Temperature Rise	224
7.14 Output Overcurrent Detection	226
7.15 Refrigerant Shortage	228
7.16 Low-voltage Detection or Over-voltage Detection	230
7.17 Outdoor Unit PCB Abnormality or Signal Transmission Error	231
7.18 Anti-icing control in Other Room / Unspecified Voltage (between Indoor Unit and Outdoor Unit)	234
8. Check	235
8.1 How to Check	235

Part 7 Removal Procedure 247

1. Outdoor Unit	248
1.1 Removal of Outer Panels	248
1.2 Removal of Electrical Box	250
1.3 Removal of PCB	255

1.4	Removal of Sound Blanket.....	260
1.5	Removal of Outdoor Fan / Fan Motor.....	262
1.6	Removal of Thermistors	265
1.7	Removal of Four Way Valve / Electronic Expansion Valve	267
1.8	Removal of Compressor.....	270

Part 8 Trial Operation and Field Settings.....272

1.	Pump Down Operation.....	273
2.	Forced Operation Mode	274
3.	Trial Operation	275
3.1	RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series.....	275
3.2	SA Indoor Unit - FFQ Series	277
4.	Field Settings	278
4.1	RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series.....	278
4.2	SA Indoor Unit - FFQ Series	282
4.3	Outdoor Unit.....	285
5.	Application of Silicon Grease to a Power Transistor and a Diode Bridge	286





Part 9 Appendix.....287

1.	Piping Diagrams.....	288
1.1	Indoor Unit.....	288
1.2	Outdoor Unit.....	292
2.	Wiring Diagrams.....	294
2.1	Indoor Unit.....	294
2.2	Outdoor Unit.....	298








1. Introduction




1.1 Safety Cautions









Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
 - △ This symbol indicates the item for which caution must be exercised.
The pictogram shows the item to which attention must be paid.
 - This symbol indicates the prohibited action.
The prohibited item or action is shown in the illustration or near the symbol.
 - This symbol indicates the action that must be taken, or the instruction.
The instruction is shown in the illustration or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.












1.1.1 Cautions Regarding Safety of Workers






 Warning	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for repair. Working on the equipment that is connected to the power supply may cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	
If the refrigerant gas is discharged during the repair work, do not touch the discharged refrigerant gas. The refrigerant gas may cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, evacuate the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it may cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas may generate toxic gases when it contacts flames.	
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor may cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment may cause an electrical shock or fire.	







 Warning	
Be sure to wear a safety helmet, gloves, and a safety belt when working at a high place (more than 2 m). Insufficient safety measures may cause a fall accident.	
In case of R-410A refrigerant models, be sure to use pipes, flare nuts and tools for the exclusive use of the R-410A refrigerant. The use of materials for R-22 refrigerant models may cause a serious accident such as a damage of refrigerant cycle as well as an equipment failure.	






 Caution	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands may cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water may cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Be sure to conduct repair work with appropriate tools. The use of inappropriate tools may cause injury.	
Be sure to check that the refrigerating cycle section has cooled down enough before conducting repair work. Working on the unit when the refrigerating cycle section is hot may cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room may cause oxygen deficiency.	

1.1.2 Cautions Regarding Safety of Users

 Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools may cause an electrical shock, excessive heat generation or fire.	
If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires may cause an electrical shock, excessive heat generation or fire.	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it may cause an electrical shock, excessive heat generation or fire.	
Be sure to use an exclusive power circuit for the equipment, and follow the local technical standards related to the electrical equipment, the internal wiring regulations, and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work may cause an electrical shock or fire.	
Be sure to use the specified cable for wiring between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections may cause excessive heat generation or fire.	
When wiring between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section may cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cable may cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable may damage the cable.	
Do not mix air or gas other than the specified refrigerant (R-410A / R-22) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leaking point and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leaking point cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it may generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment may fall and cause injury.	





 Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet securely. If the plug has dust or loose connection, it may cause an electrical shock or fire.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation may cause the equipment to fall, resulting in injury.	For unitary type only 
Be sure to install the product securely in the installation frame mounted on the window frame. If the unit is not securely mounted, it may fall and cause injury.	For unitary type only 
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If the combustible gas leaks and remains around the unit, it may cause a fire.	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections may cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame may cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding may cause an electrical shock.	

 Caution	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 MΩ or higher. Faulty insulation may cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage may cause the water to enter the room and wet the furniture and floor.	
Do not tilt the unit when removing it. The water inside the unit may spill and wet the furniture and floor.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water may enter the room and wet the furniture and floor.	For unitary type only 

1.2 Used Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

Part 1

List of Functions

1. Functions.....	2
1.1 Cooling Only.....	2
1.2 Heat Pump	5

1. Functions

1.1 Cooling Only

Category	Functions			Category	Functions		
		FTXS20/25/35/42/50G2V1B	FVXS25/35/50FV1B			FTXS20/25/35/42/50G2V1B	FVXS25/35/50FV1B
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○
Compressor	Oval Scroll Compressor	—	—	Timer	Air Filter (Prefilter)	○	○
	Swing Compressor	—	—		Wipe-Clean Flat Panel	○	○
	Rotary Compressor	—	—		Washable Grille	—	—
	Reluctance DC Motor	—	—		MOLD PROOF Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—	Worry Free "Reliability & Durability"	Good-Sleep Cooling Operation	—	—
	Power-Airflow Dual Flaps	○	—		WEEKLY TIMER Operation	○	○
	Power-Airflow Diffuser	—	—		24-Hour ON/OFF TIMER	○	○
	Wide-Angle Louvers	○	○		NIGHT SET Mode	○	○
	Vertical Auto-Swing (Up and Down)	○	○		Auto-Restart (after Power Failure)	○	○
	Horizontal Auto-Swing (Right and Left)	○	—		Self-Diagnosis (Digital, LED) Display	○	○
	3-D Airflow	○	—		Wiring Error Check Function	—	—
Comfort Control	COMFORT AIRFLOW Operation	○	—	Flexibility	Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
	Auto Fan Speed	○	○		Multi-Split / Split Type Compatible Indoor Unit	○	○
	Indoor Unit Quiet Operation	○	○		H/P, C/O Compatible Indoor Unit	○	○
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Voltage Correspondence	—	—
	OUTDOOR UNIT QUIET Operation (Manual)	○	○		High Ceiling Application	—	—
	2-Area INTELLIGENT EYE Operation	○	—		Chargeless	—	—
	INTELLIGENT EYE Operation	—	—		Either Side Drain (Right or Left)	○	—
	Quick Warming Function (Preheating Operation)	—	—		Power Selection	—	—
Operation	Hot-Start Function	—	—	Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Automatic Defrosting	—	—		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○
	Automatic Operation	—	—		Remote Control Adaptor (Normal Open Contact) (Option)	○	○
Lifestyle Convenience	Program Dry Operation	○	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○
	Fan Only	○	○		Wireless	○	○
	New POWERFUL Operation (Non-Inverter)	—	—		Wired (Option)	○	—
	Inverter POWERFUL Operation	○	○				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	○	○				
	Indoor Unit ON/OFF Button	○	○				
Signal Receiving Sign	○	○					
R/C with Back Light	—	○					
Temperature Display	—	—					

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FLKS25/35/50BAVMB	FDKS25/35EAYMB FDKS50CVMB	Category	Functions	FLKS25/35/50BAVMB	FDKS25/35EAYMB FDKS50CVMB
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	○	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	○	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—
	Standby Electricity Saving	—	—		Air Filter (Pre-filter)	○	○
Compressor	Oval Scroll Compressor	—	—		Wipe-Clean Flat Panel	—	—
	Swing Compressor	—	—		Washable Grille	—	—
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—
	Reluctance DC Motor	—	—		Good-Sleep Cooling Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—		Timer	WEEKLY TIMER Operation	—
	Power-Airflow Dual Flaps	—	—	24-Hour ON/OFF TIMER		○	○
	Power-Airflow Diffuser	—	—	NIGHT SET Mode		○	○
	Wide-Angle Louvers	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Vertical Auto-Swing (Up and Down)	○	—		Self-Diagnosis (Digital, LED) Display	○	○
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
COMFORT AIRFLOW Operation	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○	
Comfort Control	Auto Fan Speed	○		○	H/P, C/O Compatible Indoor Unit	—	—
	Indoor Unit Quiet Operation	○		○	Flexible Voltage Correspondence	○	○
	NIGHT QUIET Mode (Automatic)	—		—	High Ceiling Application	—	—
	OUTDOOR UNIT QUIET Operation (Manual)	○		○	Chargeless	—	—
	2-Area INTELLIGENT EYE Operation	—		—	Either Side Drain (Right or Left)	—	—
	INTELLIGENT EYE Operation	—		—	Power Selection	—	—
	Quick Warming Function (Preheating Operation)	—		—	Remote Control	5-Rooms Centralized Controller (Option)	○
	Hot-Start Function	—	—	Remote Control Adaptor (Normal Open Pulse Contact) (Option)		○	○
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)	○		○	
Operation	Automatic Operation	—	—	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○
	Program Dry Operation	○	○		Wireless	○	○
	Fan Only	○	○		Wired (Option)	—	○
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	○	○				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	○	○				
	ECONO Operation	—	—				
	Indoor Unit ON/OFF Button	○	○				
	Signal Receiving Sign	○	○				
	R/C with Back Light	—	—				
	Temperature Display	—	—				

Note: ○ : Holding Functions
 — : No Functions

Category	Functions	FFQ25/35/50B8V1B	2MKS40/50GV1B 2MKS40/50G2V1B	Category	Functions	FFQ25/35/50B8V1B	2MKS40/50GV1B 2MKS40/50G2V1B
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	—	10 ~46		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	○		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—
	Standby Electricity Saving	—	—		Longlife Filter (Option)	○	—
Compressor	Oval Scroll Compressor	—	—	Air Filter (Prefilter)	○	—	
	Swing Compressor	—	○	Wipe-Clean Flat Panel	—	—	
	Rotary Compressor	—	—	Washable Grille	—	—	
	Reluctance DC Motor	—	○	Filter Cleaning Indicator	○	—	
Comfortable Airflow	Power-Airflow Flap	—	—	MOLD PROOF Operation	—	—	
	Power-Airflow Dual Flaps	—	—	Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—	Timer	WEEKLY TIMER Operation	—	—
	Wide-Angle Louvers	—	—		72-Hour ON/OFF TIMER	○	—
	Vertical Auto-Swing (Up and Down)	○	—		NIGHT SET Mode	—	—
	Horizontal Auto-Swing (Right and Left)	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	—
	3-D Airflow	—	—		Self-Diagnosis (Digital, LED) Display	○	○
	COMFORT AIRFLOW Operation	—	—	Wiring Error Check Function	—	—	
Comfort Control	Auto Fan Speed	—	—	Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	○	
	Indoor Unit Quiet Operation	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	—
	NIGHT QUIET Mode (Automatic)	—	—		H/P, C/O Compatible Indoor Unit	○	—
	OUTDOOR UNIT QUIET Operation (Manual)	—	○		Flexible Voltage Correspondence	—	—
	2-Area INTELLIGENT EYE Operation	—	—		High Ceiling Application	—	—
	INTELLIGENT EYE Operation	—	—		Chargeless	—	20 m
	Quick Warming Function (Preheating Operation)	—	—		Either Side Drain (Right or Left)	—	—
	Hot-Start Function	—	—		Power Selection	—	○
Automatic Defrosting	—	—	Remote Control		5-Rooms Centralized Controller (Option)	—	—
Operation	Automatic Operation	—		—	Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—	—
	Program Dry Operation	○		—	Remote Control Adaptor (Normal Open Contact) (Option)	—	—
	Fan Only	○	—	DIII-NET Compatible (Adaptor) (Option)	○	—	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller	Wireless (Option)	○	—
	Inverter POWERFUL Operation	—	—		Wired	○	—
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	—	—				
	Indoor Unit ON/OFF Button	—	—				
	Signal Receiving Sign	—	—				
	R/C with Back Light	—	—				
	Temperature Display	—	—				

Note: ○ : Holding Functions
— : No Functions

1.2 Heat Pump

Category	Functions			Category	Functions			
		FTXG25/35EV1BW(S)	CTXG50EV1BW(S)			FTXG25/35EV1BW(S)	CTXG50EV1BW(S)	
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—	
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—	
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—	
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○	
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	○	○	
Compressor	Oval Scroll Compressor	—	—	Timer	Wipe-Clean Flat Panel	○	○	
	Swing Compressor	—	—		Washable Grille	—	—	
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—	
	Reluctance DC Motor	—	—		Good-Sleep Cooling Operation	—	—	
Comfortable Airflow	Power-Airflow Flap	—	—		WEEKLY TIMER Operation	○	○	
	Power-Airflow Dual Flaps	○	○		24-Hour ON/OFF TIMER	○	○	
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○	
	Wide-Angle Louvers	○	○		Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Vertical Auto-Swing (Up and Down)	○	○			Self-Diagnosis (Digital, LED) Display	○	○
	Horizontal Auto-Swing (Right and Left)	○	○			Wiring Error Check Function	—	—
	3-D Airflow	○	○	Anti-Corrosion Treatment of Outdoor Heat Exchanger		—	—	
COMFORT AIRFLOW Operation	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	—		
Comfort Control	Auto Fan Speed	○		○	H/P, C/O Compatible Indoor Unit	—	—	
	Indoor Unit Quiet Operation	○		○	Flexible Voltage Correspondence	—	—	
	NIGHT QUIET Mode (Automatic)	—		—	High Ceiling Application	—	—	
	OUTDOOR UNIT QUIET Operation (Manual)	○		○	Chargeless	—	—	
	INTELLIGENT EYE Operation	○		○	Either Side Drain (Right or Left)	○	○	
	2-Area INTELLIGENT EYE Operation	—		—	Power Selection	—	—	
	Quick Warming Function (Preheating Operation)	—		—	Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Hot-Start Function	○	○	Remote Control Adaptor (Normal Open Pulse Contact) (Option)		○	○	
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)	○		○		
Operation	Automatic Operation	○	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○	
	Program Dry Operation	○	○		Wireless	○	○	
	Fan Only	○	○		Wired (Option)	○	○	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—					
	Inverter POWERFUL Operation	○	○					
	Priority-Room Setting	—	—					
	COOL / HEAT Mode Lock	—	—					
	HOME LEAVE Operation	—	—					
	ECONO Operation	—	—					
	Indoor Unit ON/OFF Button	○	○					
	Signal Receiving Sign	○	○					
	Multi-Colored Indicator Lamp (Multi-Monitor Lamp)	—	—					
	R/C with Back Light	—	—					
Temperature Display	—	—						

Note: ○ : Holding Functions
 — : No Functions

Category	Functions			Category	Functions		
		FTXG25/35JV1BW(S)	CTXG50JV1BW(S)			FTXG25/35JV1BW(S)	CTXG50JV1BW(S)
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	○	○
Compressor	Oval Scroll Compressor	—	—		Wipe-Clean Flat Panel	○	○
	Swing Compressor	—	—		Washable Grille	—	—
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—
	Reluctance DC Motor	—	—		Good-Sleep Cooling Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	○	○
	Power-Airflow Dual Flaps	○	○		24-Hour ON/OFF TIMER	○	○
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○
	Wide-Angle Louvers	○	○	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Vertical Auto-Swing (Up and Down)	○	○		Self-Diagnosis (Digital, LED) Display	○	○
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
	COMFORT AIRFLOW Operation	○	○		Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○
Comfort Control	Auto Fan Speed	○	○	H/P, C/O Compatible Indoor Unit		—	—
	Indoor Unit Quiet Operation	○	○	Flexible Voltage Correspondence		—	—
	NIGHT QUIET Mode (Automatic)	—	—	High Ceiling Application		—	—
	OUTDOOR UNIT QUIET Operation (Manual)	○	○	Chargeless		—	—
	INTELLIGENT EYE Operation	○	○	Either Side Drain (Right or Left)		○	○
	2-Area INTELLIGENT EYE Operation	—	—	Power Selection		—	—
	Quick Warming Function (Preheating Operation)	—	—	Remote Control		5-Rooms Centralized Controller (Option)	○
	Hot-Start Function	○	○		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○
Automatic Defrosting	—	—	Remote Control Adaptor (Normal Open Contact) (Option)		○	○	
Operation	Automatic Operation	○	○	Remote Controller	DIII-NET Compatible (Adaptor) (Option)	○	○
	Program Dry Operation	○	○		Wireless	○	○
	Fan Only	○	○		Wired (Option)	○	○
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	○	○				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	○	○				
	Indoor Unit ON/OFF Button	○	○				
	Signal Receiving Sign	○	○				
	Multi-Colored Indicator Lamp (Multi-Monitor Lamp)	○	○				
	R/C with Back Light	○	○				
	Temperature Display	—	—				

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FTXS20/25/35/42/50G2V1B		Category	Functions	FTXS20/25/35/42/50G2V1B	
		○	○			○	○
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	○	○
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	○	○
Compressor	Oval Scroll Compressor	—	—	Worry Free "Reliability & Durability"	Wipe-Clean Flat Panel	○	○
	Swing Compressor	—	—		Washable Grille	—	—
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—
	Reluctance DC Motor	—	—		Good-Sleep Cooling Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	○	○
	Power-Airflow Dual Flaps	○	—		24-Hour ON/OFF TIMER	○	○
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○
	Wide-Angle Louvers	○	○	Flexibility	Auto-Restart (after Power Failure)	○	○
	Vertical Auto-Swing (Up and Down)	○	○		Self-Diagnosis (Digital, LED) Display	○	○
	Horizontal Auto-Swing (Right and Left)	○	—		Wiring Error Check Function	—	—
	3-D Airflow	○	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
Comfort Control	COMFORT AIRFLOW Operation	○	—	Remote Control	Multi-Split / Split Type Compatible Indoor Unit	○	○
	Auto Fan Speed	○	○		H/P, C/O Compatible Indoor Unit	○	○
	Indoor Unit Quiet Operation	○	○		Flexible Voltage Correspondence	—	—
	NIGHT QUIET Mode (Automatic)	—	—		High Ceiling Application	—	—
	OUTDOOR UNIT QUIET Operation (Manual)	○	○		Chargeless	—	—
	2-Area INTELLIGENT EYE Operation	○	—		Either Side Drain (Right or Left)	○	—
	INTELLIGENT EYE Operation	—	—		Power Selection	—	—
	Quick Warming Function (Preheating Operation)	—	—		5-Rooms Centralized Controller (Option)	○	○
Hot-Start Function	○	○	Operation	Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○	
Automatic Defrosting	—	—		Remote Control Adaptor (Normal Open Contact) (Option)	○	○	
Automatic Operation	○	○		DIII-NET Compatible (Adaptor) (Option)	○	○	
Lifestyle Convenience	Program Dry Operation	○	○	Remote Controller	Wireless	○	○
	Fan Only	○	○		Wired (Option)	○	—
	New POWERFUL Operation (Non-Inverter)	—	—				
	Inverter POWERFUL Operation	○	○				
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	○	○				
	Indoor Unit ON/OFF Button	○	○				
Signal Receiving Sign	○	○					
R/C with Back Light	—	○					
Temperature Display	—	—					

Note: ○ : Holding Functions
 — : No Functions

Category	Functions	FLXS25/35/50BAVMB	FDXS25/35EAVMB FDXS50CVMB	Category	Functions	FLXS25/35/50BAVMB	FDXS25/35EAVMB FDXS50CVMB
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	○	—
	Operation Limit for Cooling (°CDB)	—	—		Photocatalytic Deodorizing Filter	○	—
	Operation Limit for Heating (°CWB)	—	—		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	—		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—
	Standby Electricity Saving	—	—		Air Filter (Prefilter)	○	○
Compressor	Oval Scroll Compressor	—	—		Wipe-Clean Flat Panel	—	—
	Swing Compressor	—	—		Washable Grille	—	—
	Rotary Compressor	—	—		MOLD PROOF Operation	—	—
	Reluctance DC Motor	—	—		Good-Sleep Cooling Operation	—	—
Comfortable Airflow	Power-Airflow Flap	—	—	Timer	WEEKLY TIMER Operation	—	—
	Power-Airflow Dual Flaps	—	—		24-Hour ON/OFF TIMER	○	○
	Power-Airflow Diffuser	—	—		NIGHT SET Mode	○	○
	Wide-Angle Louvers	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	○
	Vertical Auto-Swing (Up and Down)	○	—		Self-Diagnosis (Digital, LED) Display	○	○
	Horizontal Auto-Swing (Right and Left)	—	—		Wiring Error Check Function	—	—
	3-D Airflow	—	—		Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	—
COMFORT AIRFLOW Operation	—	—					
Comfort Control	Auto Fan Speed	○	○	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	○
	Indoor Unit Quiet Operation	○	○		H/P, C/O Compatible Indoor Unit	—	—
	NIGHT QUIET Mode (Automatic)	—	—		Flexible Voltage Correspondence	○	○
	OUTDOOR UNIT QUIET Operation (Manual)	○	○		High Ceiling Application	—	—
	2-Area INTELLIGENT EYE Operation	—	—	Chargeless	—	—	
	INTELLIGENT EYE Operation	—	—	Either Side Drain (Right or Left)	—	—	
	Quick Warming Function (Preheating Operation)	—	—	Power Selection	—	—	
	Hot-Start Function	○	○	Remote Control	5-Rooms Centralized Controller (Option)	○	○
	Automatic Defrosting	—	—		Remote Control Adaptor (Normal Open Pulse Contact) (Option)	○	○
			Remote Control Adaptor (Normal Open Contact) (Option)		○	○	
Operation	Automatic Operation	○	○		DIII-NET Compatible (Adaptor) (Option)	○	○
	Program Dry Operation	○	○				
	Fan Only	○	○				
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller	Wireless	○	○
	Inverter POWERFUL Operation	○	○		Wired (Option)	—	○
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	○	○				
	ECONO Operation	—	—				
	Indoor Unit ON/OFF Button	○	○				
	Signal Receiving Sign	○	○				
	R/C with Back Light	—	—				
Temperature Display	—	—					

Note: ○ : Holding Functions
— : No Functions

Category	Functions	FFQ25/35/50B8V1B	2MXS40/50GV1B 2MXS40/50G2V1B	Category	Functions	FFQ25/35/50B8V1B	2MXS40/50GV1B 2MXS40/50G2V1B
Basic Function	Inverter (with Inverter Power Control)	○	○	Health & Clean	Air-Purifying Filter	—	—
	Operation Limit for Cooling (°CDB)	—	10 ~46		Photocatalytic Deodorizing Filter	—	—
	Operation Limit for Heating (°CWB)	—	-15 ~15.5		Air-Purifying Filter with Photocatalytic Deodorizing Function	—	—
	PAM Control	—	○		Titanium Apatite Photocatalytic Air-Purifying Filter	—	—
	Standby Electricity Saving	—	—		Longlife Filter (Option)	○	—
Compressor	Oval Scroll Compressor	—	—	Air Filter (Prefilter)	○	—	
	Swing Compressor	—	○	Wipe-Clean Flat Panel	—	—	
	Rotary Compressor	—	—	Washable Grille	—	—	
	Reluctance DC Motor	—	○	Filter Cleaning Indicator	○	—	
Comfortable Airflow	Power-Airflow Flap	—	—	MOLD PROOF Operation	—	—	
	Power-Airflow Dual Flaps	—	—	Good-Sleep Cooling Operation	—	—	
	Power-Airflow Diffuser	—	—	Timer	WEEKLY TIMER Operation	—	—
	Wide-Angle Louvers	—	—		72-Hour ON/OFF TIMER	○	—
	Vertical Auto-Swing (Up and Down)	○	—		NIGHT SET Mode	—	—
	Horizontal Auto-Swing (Right and Left)	—	—	Worry Free "Reliability & Durability"	Auto-Restart (after Power Failure)	○	—
	3-D Airflow	—	—		Self-Diagnosis (Digital, LED) Display	○	○
	COMFORT AIRFLOW Operation	—	—		Wiring Error Check Function	—	—
Comfort Control	Auto Fan Speed	—	—	Anti-Corrosion Treatment of Outdoor Heat Exchanger	—	○	
	Indoor Unit Quiet Operation	—	—	Flexibility	Multi-Split / Split Type Compatible Indoor Unit	○	—
	NIGHT QUIET Mode (Automatic)	—	—		H/P, C/O Compatible Indoor Unit	○	—
	OUTDOOR UNIT QUIET Operation (Manual)	—	○		Flexible Voltage Correspondence	—	—
	2-Area INTELLIGENT EYE Operation	—	—		High Ceiling Application	—	—
	INTELLIGENT EYE Operation	—	—		Chargeless	—	20 m
	Quick Warming Function (Preheating Operation)	—	○		Either Side Drain (Right or Left)	—	—
	Hot-Start Function	○	—		Power Selection	—	○
	Automatic Defrosting	—	○		Remote Control	5-Rooms Centralized Controller (Option)	—
Operation	Automatic Operation	○	—			Remote Control Adaptor (Normal Open Pulse Contact) (Option)	—
	Program Dry Operation	○	—	Remote Control Adaptor (Normal Open Contact) (Option)		—	—
	Fan Only	○	—	DIII-NET Compatible (Adaptor) (Option)	○	—	
Lifestyle Convenience	New POWERFUL Operation (Non-Inverter)	—	—	Remote Controller	Wireless (Option)	○	—
	Inverter POWERFUL Operation	—	—		Wired	○	—
	Priority-Room Setting	—	—				
	COOL / HEAT Mode Lock	—	—				
	HOME LEAVE Operation	—	—				
	ECONO Operation	—	—				
	Indoor Unit ON/OFF Button	—	—				
	Signal Receiving Sign	—	—				
	R/C with Back Light	—	—				
	Temperature Display	—	—				

Note: ○ : Holding Functions
— : No Functions

Part 2

Specifications

1. Specifications	11
1.1 Cooling Only - Indoor Units	11
1.2 Cooling Only - Outdoor Units	17
1.3 Heat Pump - Indoor Units	19
1.4 Heat Pump - Outdoor Units	28

1. Specifications

1.1 Cooling Only - Indoor Units

Wall Mounted Type

50 Hz, 220 - 230 - 240 V

Model			FTXS20G2V1B	FTXS25G2V1B
Rated Capacity			2.0 kW Class	2.5 kW Class
Front Panel Color			White	White
Airflow Rates	m ³ /min (cfm)	H	9.4 (332)	9.1 (321)
		M	7.4 (262)	7.1 (252)
		L	5.5 (193)	5.2 (182)
		SL	4.0 (141)	3.7 (130)
Fan	Type	Cross Flow Fan		Cross Flow Fan
	Motor Output	W	23	23
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)	A	0.09 - 0.08 - 0.08		0.09 - 0.08 - 0.08
Power Consumption (Rated)	W	18 - 18 - 18		18 - 18 - 18
Power Factor (Rated)	%	90.9 - 97.8 - 93.8		90.9 - 97.8 - 93.8
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H × W × D)	mm	295 × 800 × 215		295 × 800 × 215
Packaged Dimensions (H × W × D)	mm	274 × 870 × 366		274 × 870 × 366
Weight (Mass)	kg	9		9
Gross Weight (Gross Mass)	kg	13		13
Operation Sound	H / M / L / SL	dBA	38 / 32 / 25 / 22	
Sound Power		dBA	54	
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 9.5	
	Drain	mm	φ 18.0	
Drawing No.			3D059727	3D059728

Model			FTXS35G2V1B	FTXS42G2V1B
Rated Capacity			3.5 kW Class	4.2 kW Class
Front Panel Color			White	White
Airflow Rates	m ³ /min (cfm)	H	10.4 (367)	9.1 (321)
		M	7.7 (270)	7.7 (273)
		L	4.8 (170)	6.3 (221)
		SL	3.5 (125)	5.4 (190)
Fan	Type	Cross Flow Fan		Cross Flow Fan
	Motor Output	W	23	23
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)	A	0.12 - 0.12 - 0.11		0.11 - 0.11 - 0.10
Power Consumption (Rated)	W	26 - 26 - 26		24 - 24 - 24
Power Factor (Rated)	%	98.5 - 94.2 - 98.5		99.2 - 94.9 - 100.0
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H × W × D)	mm	295 × 800 × 215		295 × 800 × 215
Packaged Dimensions (H × W × D)	mm	274 × 870 × 366		274 × 870 × 366
Weight (Mass)	kg	10		10
Gross Weight (Gross Mass)	kg	13		13
Operation Sound	H / M / L / SL	dBA	42 / 34 / 26 / 23	
Sound Power		dBA	58	
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 9.5	
	Drain	mm	φ 18.0	
Drawing No.			3D059729	3D059730

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m ³ /min × 35.3

50 Hz, 220 - 230 - 240 V

Model			FTXS50G2V1B
Rated Capacity			5.0 kW Class
Front Panel Color			White
Airflow Rates	m ³ /min (cfm)	H	10.2 (360)
		M	8.6 (305)
		L	7.0 (246)
		SL	6.0 (212)
Fan	Type	Cross Flow Fan	
	Motor Output	W	23
	Speed	Steps	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.12 - 0.12 - 0.11
Power Consumption (Rated)		W	26 - 26 - 26
Power Factor (Rated)		%	98.5 - 94.2 - 98.5
Temperature Control			Microcomputer Control
Dimensions (H x W x D)		mm	295 x 800 x 215
Packaged Dimensions (H x W x D)		mm	274 x 870 x 366
Weight (Mass)		kg	10
Gross Weight (Gross Mass)		kg	13
Operation Sound	H / M / L / SL	dBA	43 / 39 / 34 / 31
Sound Power		dBA	59
Heat Insulation			Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ 12.7
	Drain	mm	φ 18.0
Drawing No.			3D059731

Conversion Formulae

kcal/h = kW × 860
 Btu/h = kW × 3412
 cfm = m³/min × 35.3

Floor Standing Type

50 Hz, 220 - 230 - 240 V

Model			FVXS25FV1B	FVXS35FV1B
Rated Capacity			2.5 kW Class	3.5 kW Class
Front Panel Color			White	White
Airflow Rates	m ³ /min (cfm)	H	8.2 (290)	8.5 (300)
		M	6.5 (229)	6.7 (237)
		L	4.8 (169)	4.9 (174)
		SL	4.1 (146)	4.5 (158)
Fan	Type	Turbo Fan		Turbo Fan
	Motor Output	W	48	48
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.14 - 0.13 - 0.12	0.14 - 0.13 - 0.12
Power Consumption (Rated)		W	15 - 15 - 15	15 - 15 - 15
Power Factor (Rated)		%	48.7 - 50.2 - 52.1	48.7 - 50.2 - 52.1
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286	696 x 786 x 286
Weight (Mass)		kg	14	14
Gross Weight (Gross Mass)		kg	18	18
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23	39 / 33 / 27 / 24
Sound Power		dBA	54	55
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 20.0	φ 20.0
Drawing No.			3D059858	3D059859

Model			FVXS50FV1B
Rated Capacity			5.0 kW Class
Front Panel Color			White
Airflow Rates	m ³ /min (cfm)	H	10.7 (378)
		M	9.2 (326)
		L	7.8 (274)
		SL	6.6 (233)
Fan	Type	Turbo Fan	
	Motor Output	W	48
	Speed	Steps	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.18 - 0.17 - 0.16
Power Consumption (Rated)		W	27 - 27 - 27
Power Factor (Rated)		%	68.1 - 69.1 - 70.3
Temperature Control			Microcomputer Control
Dimensions (H x W x D)		mm	600 x 700 x 210
Packaged Dimensions (H x W x D)		mm	696 x 786 x 286
Weight (Mass)		kg	14
Gross Weight (Gross Mass)		kg	18
Operation Sound	H / M / L / SL	dBA	44 / 40 / 36 / 32
Sound Power		dBA	56
Heat Insulation			Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ 12.7
	Drain	mm	φ 20.0
Drawing No.			3D059860

<p>Conversion Formulae</p> <p>kcal/h = kW x 860</p> <p>Btu/h = kW x 3412</p> <p>cfm = m³/min x 35.3</p>
--

Floor / Ceiling Suspended Dual Type

50 Hz, 220 - 230 - 240 V

Model			FLKS25BAVMB	FLKS35BAVMB
Rated Capacity			2.5 kW Class	3.5 kW Class
Front Panel Color			Almond White	Almond White
Airflow Rates	m ³ /min (cfm)	H	7.6 (268)	8.6 (304)
		M	6.8 (240)	7.6 (268)
		L	6.0 (212)	6.6 (233)
		SL	5.2 (184)	5.6 (198)
Fan	Type	Sirocco Fan		Sirocco Fan
	Motor Output	W	34	34
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Direction Control			Right, Left, Horizontal, Downward	Right, Left, Horizontal, Downward
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.33 - 0.32 - 0.31	0.38 - 0.36 - 0.35
Power Consumption (Rated)		W	70 - 70 - 70	78 - 78 - 78
Power Factor (Rated)		%	96.4 - 95.1 - 94.1	93.3 - 94.2 - 92.9
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	490 x 1,050 x 200	490 x 1,050 x 200
Packaged Dimensions (H x W x D)		mm	280 x 1,100 x 566	280 x 1,100 x 566
Weight (Mass)		kg	16	16
Gross Weight (Gross Mass)		kg	22	22
Operation Sound	H / M / L / SL	dBA	37 / 34 / 31 / 28	38 / 35 / 32 / 29
Sound Power		dBA	53	54
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	φ 18.0	φ 18.0
Drawing No.			3D059861	3D059862

Model			FLKS50BAVMB	
Rated Capacity			5.0 W Class	
Front Panel Color			Almond White	
Airflow Rates	m ³ /min (cfm)	H	11.4 (402)	
		M	10.0 (353)	
		L	8.5 (300)	
		SL	7.5 (265)	
Fan	Type	Sirocco Fan		
	Motor Output	W	34	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.48 - 0.45 - 0.43	
Power Consumption (Rated)		W	96 - 96 - 96	
Power Factor (Rated)		%	90.9 - 92.8 - 93.0	
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)		mm	490 x 1,050 x 200	
Packaged Dimensions (H x W x D)		mm	280 x 1,100 x 566	
Weight (Mass)		kg	17	
Gross Weight (Gross Mass)		kg	24	
Operation Sound	H / M / L / SL	dBA	47 / 43 / 39 / 36	
Sound Power		dBA	63	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	φ 18.0	
Drawing No.			3D059863	

Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

Duct Connected Type

50 Hz, 230 V

Model			FDKS25EAVMB	FDKS35EAVMB
Rated Capacity			2.5 kW Class	3.5 kW Class
Front Panel Color			—	—
Airflow Rates	m ³ /min (cfm)	H	8.7 (307)	8.7 (307)
		M	8.0 (282)	8.0 (282)
		L	7.3 (258)	7.3 (258)
		SL	6.2 (219)	6.2 (219)
Fan	Type	Sirocco Fan		Sirocco Fan
	Motor Output	W	62	62
	Speed	Steps	5 Steps, Quiet, Auto	5 Steps, Quiet, Auto
Air Filter			Removable / Washable / Mildew Proof	Removable / Washable / Mildew Proof
Running Current (Rated)		A	0.48	0.48
Power Consumption (Rated)		W	71	71
Power Factor (Rated)		%	64.3	64.3
Temperature Control			Microcomputer Control	Microcomputer Control
Dimensions (H x W x D)		mm	200 x 700 x 620	200 x 700 x 620
Packaged Dimensions (H x W x D)		mm	274 x 906 x 751	274 x 906 x 751
Weight (Mass)		kg	21	21
Gross Weight (Gross Mass)		kg	29	29
Operation Sound	H / M / L / SL	dBA	35 / 33 / 31 / 29	35 / 33 / 31 / 29
Sound Power		dBA	53	53
External Static Pressure		Pa	30	30
Heat Insulation			Both Liquid and Gas Pipes	Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4	φ 6.4
	Gas	mm	φ 9.5	φ 9.5
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	VP20 (O.D. φ 26 / I.D. φ 20)
Drawing No.			3D060036	3D060037

Model			FDKS50CVMB	
Rated Capacity			5.0 kW Class	
Front Panel Color			—	
Airflow Rates	m ³ /min (cfm)	H	12.0 (424)	
		M	11.0 (388)	
		L	10.0 (353)	
		SL	8.4 (297)	
Fan	Type	Sirocco Fan		
	Motor Output	W	130	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Filter			Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.64	
Power Consumption (Rated)		W	140	
Power Factor (Rated)		%	95.1	
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)		mm	200 x 900 x 620	
Packaged Dimensions (H x W x D)		mm	266 x 1,106 x 751	
Weight (Mass)		kg	27	
Gross Weight (Gross Mass)		kg	34	
Operation Sound	H / M / L / SL	dBA	37 / 35 / 33 / 31	
Sound Power		dBA	55	
External Static Pressure		Pa	40	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060040	

Conversion Formulae

kcal/h = kW x 860
 Btu/h = kW x 3412
 cfm = m³/min x 35.3

Ceiling Mounted Cassette Type

50 Hz, 230 V

Model			FFQ25B8V1B	FFQ35B8V1B
Rated Capacity			2.5 kW Class	3.5 kW Class
Decoration Panel	Color		White	
	Dimensions (H × W × D)	mm	55 × 700 × 700	55 × 700 × 700
Airflow Rates	m ³ /min (cfm)	H	9.0 (318)	10.0 (353)
		M	—	—
		L	6.5 (230)	6.5 (230)
		SL	—	—
Fan	Type		Turbo Fan	
	Motor Output	W	55	
	Speed	Steps	2 Steps	
Air Direction Control			Horizontal, Downward	
Air Filter			—	
Running Current (Rated)	A	0.37		0.40
Power Consumption (Rated)	W	73		84
Power Factor (Rated)	%	85.8		91.3
Temperature Control			Microcomputer Control	
Dimensions (H × W × D) ★1	mm	260 (286) × 575 × 575		260 (286) × 575 × 575
Packaged Dimensions (H × W × D)	mm	370 × 687 × 674		370 × 687 × 674
Weight (Mass)	kg	17.5		17.5
Gross Weight (Gross Mass)	kg	21		21
Operation Sound	H / L	dBA	29.5 / 24.5	
Sound Power		dBA	46.5	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 9.5	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060406	

Model			FFQ50B8V1B
Rated Capacity			5.0 kW Class
Decoration Panel	Color		White
	Dimensions (H × W × D)	mm	55 × 700 × 700
Airflow Rates	m ³ /min (cfm)	H	12.0 (424)
		M	—
		L	8.0 (283)
		SL	—
Fan	Type		Turbo Fan
	Motor Output	W	55
	Speed	Steps	2 Steps
Air Direction Control			Horizontal, Downward
Air Filter			—
Running Current (Rated)	A	0.49	
Power Consumption (Rated)	W	97	
Power Factor (Rated)	%	86.1	
Temperature Control			Microcomputer Control
Dimensions (H × W × D) ★1	mm	260 (286) × 575 × 575	
Packaged Dimensions (H × W × D)	mm	370 × 687 × 674	
Weight (Mass)	kg	17.5	
Gross Weight (Gross Mass)	kg	21	
Operation Sound	H / L	dBA	36.0 / 27.0
Sound Power		dBA	53.0
Heat Insulation			Both Liquid and Gas Pipes
Piping Connection	Liquid	mm	φ 6.4
	Gas	mm	φ 12.7
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)
Drawing No.			3D060410

★1 () : dimension including control box

Conversion Formulae

kcal/h = kW × 860
 Btu/h = kW × 3412
 cfm = m³/min × 35.3

1.2 Cooling Only - Outdoor Units

50 Hz, 220 - 240 V

Model			2MKS40GV1B	2MKS40G2V1B
Cooling Capacity	kW		—	—
Power Consumption	W		—	—
Running Current	A		—	—
Casing Color			Ivory White	Ivory White
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type
	Model	1YC23ABXD		1YC23AGXD
	Motor Output	W	600	600
Refrigerant Oil	Model	FVC50K		FVC50K
	Charge	L	0.45	0.45
Refrigerant	Type	R-410A		R-410A
	Charge	kg	1.20	1.20
Airflow Rate	m³/min	HH	36	36
		H	33	33
		L	30	30
	cfm	HH	1,271	1,271
		H	1,165	1,165
		L	1,059	1,059
Fan	Type	Propeller		Propeller
	Motor Output	W	50	50
Starting Current	A	5.9		5.9
Dimension (H × W × D)	mm	550 × 765 × 285		550 × 765 × 285
Packaged Dimension (H × W × D)	mm	612 × 906 × 364		612 × 906 × 364
Weight (Mass)	kg	38		38
Gross Weight (Gross Mass)	kg	43		43
Operation Sound	(Sound pressure)	dB	47	
Sound Power		dB	62	
Piping Connection	Liquid	mm	φ 6.4 × 2	
	Gas	mm	φ 9.5 × 2	
	Drain	mm	φ 18	
Heat Insulation			Both Liquid & Gas Pipes	
No. of Wiring Connection			3 for Power Supply, 4 for Interunit Wiring	
Max. Piping Length	m	30 (for Total of Each Room)		30 (for Total of Each Room)
		20 (for One Room)		20 (for One Room)
Min. Piping Length	m	3 (for One Room)		3 (for One Room)
Amount of Additional Charge	g/m	20 (20 m or more)		20 (20 m or more)
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)
		7.5 (between Indoor Units)		7.5 (between Indoor Units)
Drawing No.			3D059052A	3D058886A

Note: 1. The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	5 m

Conversion Formulae
kcal/h = kW × 860 Btu/h = kW × 3412 cfm = m³/min × 35.3

50 Hz, 220 - 240 V

Model		2MKS50GV1B	2MKS50G2V1B
Cooling Capacity	kW	—	—
Power Consumption	W	—	—
Running Current	A	—	—
Casing Color		Ivory White	Ivory White
Compressor	Type	Hermetically Sealed Swing Type	
	Model	2YC36BXD	2YC36BXD
	Motor Output	W	1,100
Refrigerant Oil	Model	FVC50K	FVC50K
	Charge	L	0.65
Refrigerant	Type	R-410A	R-410A
	Charge	kg	1.60
Airflow Rates	m ³ /min	HH	37
		H	34
		L	34
	cfm	HH	1,306
		H	1,200
		L	1,200
Fan	Type	Propeller	
	Motor Output	W	50
Starting Current	A	9.8	9.8
Dimensions (H x W x D)	mm	550 x 765 x 285	550 x 765 x 285
Packaged Dimensions (H x W x D)	mm	612 x 906 x 364	612 x 906 x 364
Weight (Mass)	kg	42	42
Gross Weight (Gross Mass)	kg	47	47
Operation Sound	(Sound Pressure)	dBA	48
Sound Power		dBA	63
Piping Connection	Liquid	mm	φ 6.4 x 2
	Gas	mm	φ 9.5 x 1, φ 12.7 x 1
	Drain	mm	φ 18.0
Heat Insulation		Both Liquid and Gas Pipes	
No. of Wiring Connection		3 for Power Supply, 4 for Interunit Wiring	
Max. Interunit Piping Length	m	30 (for Total of Each Room)	
	m	20 (for One Room)	
Min. Interunit Piping Length	m	3 (for One Room)	
Amount of Additional Charge	g/m	20 (20 m or more)	
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)	
	m	7.5 (between Indoor Units)	
Drawing No.		3D059053A	3D058887A

Note: 1. The data are based on the conditions shown in the table below.

Cooling	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	5 m

Conversion Formulae

$$\begin{aligned} \text{kcal/h} &= \text{kW} \times 860 \\ \text{Btu/h} &= \text{kW} \times 3412 \\ \text{cfm} &= \text{m}^3/\text{min} \times 35.3 \end{aligned}$$

1.3 Heat Pump - Indoor Units

Wall Mounted Type

50 Hz, 220 - 230 - 240 V

Model			FTXG25EV1BW		FTXG25EV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		2.5 kW Class	
Front Panel Color			Mat Crystal White		Mat Crystal Silver	
Airflow Rates	m ³ /min (cfm)	H	7.7 (271)	9.0 (317)	7.7 (271)	9.0 (317)
		M	6.1 (215)	7.9 (278)	6.1 (215)	7.9 (278)
		L	4.7 (165)	6.7 (236)	4.7 (165)	6.7 (236)
		SL	3.8 (134)	5.4 (190)	3.8 (134)	5.4 (190)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13
Power Consumption (Rated)		W	30 - 30 - 30	30 - 30 - 30	30 - 30 - 30	30 - 30 - 30
Power Factor (Rated)		%	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	275 x 840 x 150		275 x 840 x 150	
Packaged Dimensions (H x W x D)		mm	222 x 894 x 345		222 x 894 x 345	
Weight (Mass)		kg	9		9	
Gross Weight (Gross Mass)		kg	13		13	
Operation Sound	H / M / L / SL	dBA	38 / 32 / 25 / 22	38 / 33 / 28 / 25	38 / 32 / 25 / 22	38 / 33 / 28 / 25
Sound Power		dBA	56	56	56	56
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D051101		3D051102	

Model			FTXG35EV1BW		FTXG35EV1BS	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5 kW Class		3.5 kW Class	
Front Panel Color			Mat Crystal White		Mat Crystal Silver	
Airflow Rates	m ³ /min (cfm)	H	8.1 (285)	9.6 (338)	8.1 (285)	9.6 (338)
		M	6.5 (229)	8.2 (289)	6.5 (229)	8.2 (289)
		L	4.9 (173)	6.7 (236)	4.9 (173)	6.7 (236)
		SL	4.1 (144)	5.9 (208)	4.1 (144)	5.9 (208)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	40		40	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13
Power Consumption (Rated)		W	30 - 30 - 30	30 - 30 - 30	30 - 30 - 30	30 - 30 - 30
Power Factor (Rated)		%	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	275 x 840 x 150		275 x 840 x 150	
Packaged Dimensions (H x W x D)		mm	222 x 894 x 345		222 x 894 x 345	
Weight (Mass)		kg	9		9	
Gross Weight (Gross Mass)		kg	13		13	
Operation Sound	H / M / L / SL	dBA	39 / 33 / 26 / 23	39 / 34 / 29 / 26	39 / 33 / 26 / 23	39 / 34 / 29 / 26
Sound Power		dBA	57	57	57	57
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D051103		3D051104	

Conversion Formulae
 kcal/h = kW × 860
 Btu/h = kW × 3412
 cfm = m³/min × 35.3

50 Hz, 220 - 230 - 240 V

Model			CTXG50EV1BW				CTXG50EV1BS			
			Cooling		Heating		Cooling		Heating	
Rated Capacity			5.0 kW Class				5.0 kW Class			
Front Panel Color			Mat Crystal White				Mat Crystal Silver			
Airflow Rates	m ³ /min (cfm)	H	11.3 (398)	12.6 (444)	11.3 (398)	12.6 (444)				
		M	9.1 (320)	10.6 (373)	9.1 (320)	10.6 (373)				
		L	7.1 (250)	8.7 (306)	7.1 (250)	8.7 (306)				
		SL	6.7 (236)	7.7 (271)	6.7 (236)	7.7 (271)				
Fan	Type	Cross Flow Fan				Cross Flow Fan				
	Motor Output	W	40				40			
	Speed	Steps	5 Steps, Quiet, Auto				5 Steps, Quiet, Auto			
Air Direction Control			Right, Left, Horizontal, Downward				Right, Left, Horizontal, Downward			
Air Filter			Removable / Washable / Mildew Proof				Removable / Washable / Mildew Proof			
Running Current (Rated)	A	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13	0.15 - 0.14 - 0.13					
Power Consumption (Rated)	W	30	30	30	30					
Power Factor (Rated)	%	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2	90.9 - 93.2 - 96.2					
Temperature Control			Microcomputer Control				Microcomputer Control			
Dimensions (H x W x D)	mm	275 x 840 x 150				275 x 840 x 150				
Packaged Dimensions (H x W x D)	mm	222 x 894 x 345				222 x 894 x 345				
Weight (Mass)	kg	9				9				
Gross Weight (Gross Mass)	kg	13				13				
Operation Sound	H / M / L / SL	dBA	47 / 41 / 35 / 32	47 / 41 / 35 / 32	47 / 41 / 35 / 32	47 / 41 / 35 / 32				
Sound Power	dBA	64	64	64	64					
Heat Insulation			Both Liquid and Gas Pipes				Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4				φ 6.4			
	Gas	mm	φ 12.7				φ 12.7			
	Drain	mm	φ 18.0				φ 18.0			
Drawing No.			3D051105				3D051106			

Model			FTXG25JV1BW				FTXG25JV1BS			
			Cooling		Heating		Cooling		Heating	
Rated Capacity			2.5 kW Class				2.5 kW Class			
Front Panel Color			White				Silver			
Airflow Rates	m ³ /min (cfm)	H	8.8 (311)	9.6 (339)	8.8 (311)	9.6 (339)				
		M	6.8 (240)	7.9 (279)	6.8 (240)	7.9 (279)				
		L	4.7 (166)	6.2 (219)	4.7 (166)	6.2 (219)				
		SL	3.8 (134)	5.4 (191)	3.8 (134)	5.4 (191)				
Fan	Type	Cross Flow Fan				Cross Flow Fan				
	Motor Output	W	29				29			
	Speed	Steps	5 Steps, Quiet, Auto				5 Steps, Quiet, Auto			
Air Direction Control			Right, Left, Horizontal, Downward				Right, Left, Horizontal, Downward			
Air Filter			Removable / Washable / Mildew Proof				Removable / Washable / Mildew Proof			
Running Current (Rated)	A	0.09 - 0.08 - 0.08	0.12 - 0.11 - 0.11	0.09 - 0.08 - 0.08	0.12 - 0.11 - 0.11					
Power Consumption (Rated)	W	18 - 18 - 18	24 - 24 - 24	18 - 18 - 18	24 - 24 - 24					
Power Factor (Rated)	%	90.9 - 97.8 - 93.8	90.9 - 94.9 - 90.9	90.9 - 97.8 - 93.8	90.9 - 94.9 - 90.9					
Temperature Control			Microcomputer Control				Microcomputer Control			
Dimensions (H x W x D)	mm	295 x 915 x 155				295 x 915 x 155				
Packaged Dimensions (H x W x D)	mm	285 x 1,003 x 377				285 x 1,003 x 377				
Weight (Mass)	kg	11				11				
Gross Weight (Gross Mass)	kg	15				16				
Operation Sound	H / M / L / SL	dBA	38 / 32 / 25 / 22	39 / 34 / 28 / 25	38 / 32 / 25 / 22	39 / 34 / 28 / 25				
Sound Power	dBA	54	55	54	55					
Heat Insulation			Both Liquid and Gas Pipes				Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4				φ 6.4			
	Gas	mm	φ 9.5				φ 9.5			
	Drain	mm	φ 16.0 or φ 18.0				φ 16.0 or φ 18.0			
Drawing No.			3D066165A				3D066436A			

Conversion Formulae

kcal/h = kW × 860
 Btu/h = kW × 3412
 cfm = m³/min × 35.3

50 Hz, 220 - 230 - 240 V

Model			FTXG35JV1BW				FTXG35JV1BS				
			Cooling		Heating		Cooling		Heating		
Rated Capacity			3.5 kW Class				3.5 kW Class				
Front Panel Color			White				Silver				
Airflow Rates	m ³ /min (cfm)	H	10.1 (357)		10.8 (381)		10.1 (357)		10.8 (381)		
		M	7.3 (258)		8.6 (304)		7.3 (258)		8.6 (304)		
		L	4.6 (162)		6.4 (226)		4.6 (162)		6.4 (226)		
		SL	3.9 (138)		5.6 (198)		3.9 (138)		5.6 (198)		
Fan	Type	Cross Flow Fan				Cross Flow Fan					
	Motor Output	W	29				29				
	Speed	Steps	5 Steps, Quiet, Auto				5 Steps, Quiet, Auto				
Air Direction Control			Right, Left, Horizontal, Downward				Right, Left, Horizontal, Downward				
Air Filter			Removable / Washable / Mildew Proof				Removable / Washable / Mildew Proof				
Running Current (Rated)			A	0.13 - 0.12 - 0.12		0.16 - 0.15 - 0.14		0.13 - 0.12 - 0.12		0.16 - 0.15 - 0.14	
Power Consumption (Rated)			W	26 - 26 - 26		32 - 32 - 32		26 - 26 - 26		32 - 32 - 32	
Power Factor (Rated)			%	90.9 - 94.2 - 90.3		90.9 - 92.8 - 95.2		90.9 - 94.2 - 90.3		90.9 - 92.8 - 95.2	
Temperature Control			Microcomputer Control				Microcomputer Control				
Dimensions (H x W x D)			mm	295 x 915 x 155				295 x 915 x 155			
Packaged Dimensions (H x W x D)			mm	285 x 1,003 x 377				285 x 1,003 x 377			
Weight (Mass)			kg	11				11			
Gross Weight (Gross Mass)			kg	15				16			
Operation Sound	H / M / L / SL	dBA	42 / 34 / 26 / 23		42 / 36 / 29 / 26		42 / 34 / 26 / 23		42 / 36 / 29 / 26		
Sound Power			dBA	58		58		58		58	
Heat Insulation			Both Liquid and Gas Pipes				Both Liquid and Gas Pipes				
Piping Connection	Liquid	mm	φ 6.4				φ 6.4				
	Gas	mm	φ 9.5				φ 9.5				
	Drain	mm	φ 16.0 or φ 18.0				φ 16.0 or φ 18.0				
Drawing No.			3D066437A				3D066438A				

Model			CTXG50JV1BW				CTXG50JV1BS				
			Cooling		Heating		Cooling		Heating		
Rated Capacity			5.0 kW Class				5.0 kW Class				
Front Panel Color			White				White				
Airflow Rates	m ³ /min (cfm)	H	10.5 (371)		11.4 (402)		10.5 (371)		11.4 (402)		
		M	8.7 (307)		9.8 (346)		8.7 (307)		9.8 (346)		
		L	6.9 (244)		8.1 (286)		6.9 (244)		8.1 (286)		
		SL	5.9 (208)		7.1 (251)		5.9 (208)		7.1 (251)		
Fan	Type	Cross Flow Fan				Cross Flow Fan					
	Motor Output	W	29				29				
	Speed	Steps	5 Steps, Quiet, Auto				5 Steps, Quiet, Auto				
Air Direction Control			Right, Left, Horizontal, Downward				Right, Left, Horizontal, Downward				
Air Filter			Removable / Washable / Mildew Proof				Removable / Washable / Mildew Proof				
Running Current (Rated)			A	0.16 - 0.15 - 0.14		0.19 - 0.18 - 0.17		0.16 - 0.15 - 0.14		0.19 - 0.18 - 0.17	
Power Consumption (Rated)			W	32 - 32 - 32		38 - 38 - 38		32 - 32 - 32		38 - 38 - 38	
Power Factor (Rated)			%	90.9 - 92.8 - 95.2		90.9 - 91.8 - 93.1		90.9 - 92.8 - 95.2		90.9 - 91.8 - 93.1	
Temperature Control			Microcomputer Control				Microcomputer Control				
Dimensions (H x W x D)			mm	295 x 915 x 155				295 x 915 x 155			
Packaged Dimensions (H x W x D)			mm	285 x 1,003 x 377				285 x 1,003 x 377			
Weight (Mass)			kg	11				11			
Gross Weight (Gross Mass)			kg	15				15			
Operation Sound	H / M / L / SL	dBA	44 / 41 / 35 / 32		44 / 41 / 35 / 32		44 / 41 / 35 / 32		44 / 41 / 35 / 32		
Sound Power			dBA	60		60		60		60	
Heat Insulation			Both Liquid and Gas Pipes				Both Liquid and Gas Pipes				
Piping Connection	Liquid	mm	φ 6.4				φ 6.4				
	Gas	mm	φ 12.7				φ 12.7				
	Drain	mm	φ 16.0 or φ 18.0				φ 16.0 or φ 18.0				
Drawing No.			3D066439B				3D066440B				

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m ³ /min x 35.3

50 Hz, 220 - 230 - 240 V

Model			FTXS20G2V1B		FTXS25G2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.0 kW Class		2.5 kW Class	
Front Panel Color			White		White	
Airflow Rates	m³/min (cfm)	H	9.4 (332)	9.9 (350)	9.1 (321)	9.8 (346)
		M	7.4 (262)	8.2 (290)	7.1 (252)	7.9 (280)
		L	5.5 (193)	6.5 (228)	5.2 (182)	6.2 (217)
		SL	4.0 (141)	5.5 (193)	3.7 (130)	5.2 (183)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A	0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09	0.09 - 0.08 - 0.08	0.10 - 0.10 - 0.09	
Power Consumption (Rated)	W	18 - 18 - 18	21 - 21 - 21	18 - 18 - 18	21 - 21 - 21	
Power Factor (Rated)	%	90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2	90.9 - 97.8 - 93.8	95.5 - 91.3 - 97.2	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm	295 x 800 x 215		295 x 800 x 215		
Packaged Dimensions (H x W x D)	mm	274 x 870 x 366		274 x 870 x 366		
Weight (Mass)	kg	9		9		
Gross Weight (Gross Mass)	kg	13		13		
Operation Sound	H / M / L / SL	dBA	38 / 32 / 25 / 22	38 / 33 / 28 / 25	38 / 32 / 25 / 22	39 / 34 / 28 / 25
Sound Power		dBA	54	54	54	55
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D059722		3D059723	

Model			FTXS35G2V1B		FTXS42G2V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			3.5 kW Class		4.2 kW Class	
Front Panel Color			White		White	
Airflow Rates	m³/min (cfm)	H	10.4 (367)	10.6 (374)	9.1 (321)	11.2 (395)
		M	7.7 (270)	8.5 (302)	7.7 (273)	9.4 (333)
		L	4.8 (170)	6.4 (226)	6.3 (221)	7.7 (271)
		SL	3.5 (125)	5.4 (191)	5.4 (190)	6.8 (240)
Fan	Type	Cross Flow Fan		Cross Flow Fan		
	Motor Output	W	23		23	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A	0.12 - 0.12 - 0.11	0.13 - 0.13 - 0.12	0.11 - 0.11 - 0.10	0.14 - 0.14 - 0.13	
Power Consumption (Rated)	W	26 - 26 - 26	28 - 28 - 28	24 - 24 - 24	30 - 30 - 30	
Power Factor (Rated)	%	98.5 - 94.2 - 98.5	97.9 - 93.6 - 97.2	99.2 - 94.9 - 100.0	97.4 - 93.2 - 96.2	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm	295 x 800 x 215		295 x 800 x 215		
Packaged Dimensions (H x W x D)	mm	274 x 870 x 366		274 x 870 x 366		
Weight (Mass)	kg	10		10		
Gross Weight (Gross Mass)	kg	13		13		
Operation Sound	H / M / L / SL	dBA	42 / 34 / 26 / 23	42 / 36 / 29 / 26	42 / 38 / 33 / 30	42 / 38 / 33 / 30
Sound Power		dBA	58	58	58	58
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D059724		3D059725	

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m³/min × 35.3

50 Hz, 220 - 230 - 240 V

Model			FTXS50G2V1B	
			Cooling	Heating
Rated Capacity			5.0 kW Class	
Front Panel Color			White	
Airflow Rates	m ³ /min (cfm)	H	10.2 (360)	11.0 (388)
		M	8.6 (305)	9.3 (330)
		L	7.0 (246)	7.6 (267)
		SL	6.0 (212)	6.7 (236)
Fan	Type	Cross Flow Fan		
	Motor Output	W	23	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.12 - 0.12 - 0.11	0.15 - 0.14 - 0.14
Power Consumption (Rated)		W	26 - 26 - 26	32 - 32 - 32
Power Factor (Rated)		%	98.5 - 94.2 - 98.5	97.0 - 99.4 - 95.2
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)		mm	295 x 800 x 215	
Packaged Dimensions (H x W x D)		mm	274 x 870 x 366	
Weight (Mass)		kg	10	
Gross Weight (Gross Mass)		kg	13	
Operation Sound	H / M / L / SL	dBA	43 / 39 / 34 / 31	44 / 39 / 34 / 31
Sound Power		dBA	59	60
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	φ 18.0	
Drawing No.			3D059726	

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m ³ /min × 35.3

Floor Standing Type

50 Hz, 220 - 230 - 240 V

Model			FVXS25FV1B		FVXS35FV1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Front Panel Color			White			
Airflow Rates	m ³ /min (cfm)	H	8.2 (290)	8.8 (311)	8.5 (300)	9.4 (332)
		M	6.5 (229)	6.9 (244)	6.7 (237)	7.3 (258)
		L	4.8 (169)	5.0 (178)	4.9 (174)	5.2 (184)
		SL	4.1 (146)	4.4 (155)	4.5 (158)	4.7 (168)
Fan	Type	Turbo Fan				
	Motor Output	W	48			
	Speed	Steps	5 Steps, Quiet, Auto			
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)			A	0.14 - 0.13 - 0.12	0.15 - 0.14 - 0.13	0.14 - 0.13 - 0.12
Power Consumption (Rated)			W	15 - 15 - 15	17 - 17 - 17	15 - 15 - 15
Power Factor (Rated)			%	48.7 - 50.2 - 52.1	51.5 - 52.8 - 54.5	48.7 - 50.2 - 52.1
Temperature Control			Microcomputer Control			
Dimensions (H x W x D)			mm	600 x 700 x 210		600 x 700 x 210
Packaged Dimensions (H x W x D)			mm	696 x 786 x 280		696 x 786 x 280
Weight (Mass)			kg	14		14
Gross Weight (Gross Mass)			kg	18		18
Operation Sound	H / M / L / SL	dBA	38 / 32 / 26 / 23		39 / 33 / 27 / 24	
Sound Power			dBA	54	54	55
Heat Insulation			Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 20.0		φ 20.0	
Drawing No.			3D059825		3D059826	

Model			FVXS50FV1B		
			Cooling	Heating	
Rated Capacity			5.0 kW Class		
Front Panel Color			White		
Airflow Rates	m ³ /min (cfm)	H	10.7 (378)	11.8 (417)	
		M	9.2 (326)	10.1 (358)	
		L	7.8 (274)	8.5 (300)	
		SL	6.6 (233)	7.1 (250)	
Fan	Type	Turbo Fan			
	Motor Output	W	48		
	Speed	Steps	5 Steps, Quiet, Auto		
Air Direction Control			Right, Left, Horizontal, Downward		
Air Filter			Removable / Washable / Mildew Proof		
Running Current (Rated)			A	0.18 - 0.17 - 0.16	
Power Consumption (Rated)			W	27 - 27 - 27	
Power Factor (Rated)			%	68.1 - 69.1 - 70.3	
Temperature Control			Microcomputer Control		
Dimensions (H x W x D)			mm	600 x 700 x 210	
Packaged Dimensions (H x W x D)			mm	696 x 786 x 280	
Weight (Mass)			kg	14	
Gross Weight (Gross Mass)			kg	18	
Operation Sound	H / M / L / SL	dBA	44 / 40 / 36 / 32		
Sound Power			dBA	56	
Heat Insulation			Both Liquid and Gas Pipes		
Piping Connection	Liquid	mm	φ 6.4		
	Gas	mm	φ 12.7		
	Drain	mm	φ 20.0		
Drawing No.			3D059827		

Conversion Formulae

kcal/h = kW × 860
 Btu/h = kW × 3412
 cfm = m³/min × 35.3

Floor / Ceiling Suspended Dual Type

50 Hz, 220 - 230 - 240 V

Model			FLXS25BAVMB		FLXS35BAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Front Panel Color			Almond White		Almond White	
Airflow Rates	m ³ /min (cfm)	H	7.6 (268)	9.2 (325)	8.6 (304)	9.8 (346)
		M	6.8 (240)	8.3 (293)	7.6 (268)	8.9 (314)
		L	6.0 (212)	7.4 (261)	6.6 (233)	8.0 (282)
		SL	5.2 (184)	6.6 (233)	5.6 (198)	7.2 (254)
Fan	Type	Sirocco Fan		Sirocco Fan		
	Motor Output	W	34		34	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward		Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)	A	0.33 - 0.32 - 0.31	0.36 - 0.34 - 0.33	0.38 - 0.36 - 0.35	0.38 - 0.36 - 0.35	
Power Consumption (Rated)	W	70 - 70 - 70	74 - 74 - 74	78 - 78 - 78	78 - 78 - 78	
Power Factor (Rated)	%	96.4 - 95.1 - 94.1	93.4 - 94.6 - 93.4	93.3 - 94.2 - 92.9	93.3 - 94.2 - 92.9	
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)	mm	490 x 1,050 x 200		490 x 1,050 x 200		
Packaged Dimensions (H x W x D)	mm	566 x 1,100 x 280		566 x 1,100 x 280		
Weight (Mass)	kg	16		16		
Gross Weight (Gross Mass)	kg	22		22		
Operation Sound	H / M / L / SL	dBA	37 / 34 / 31 / 28	37 / 34 / 31 / 29	38 / 35 / 32 / 29	39 / 36 / 33 / 30
Sound Power		dBA	53	53	54	—
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	φ 18.0		φ 18.0	
Drawing No.			3D059828		3D059829	

Model			FLXS50BAVMB	
			Cooling	Heating
Rated Capacity			5.0 kW Class	
Front Panel Color			Almond White	
Airflow Rates	m ³ /min (cfm)	H	11.4 (402)	12.1 (427)
		M	10.0 (353)	9.8 (346)
		L	8.5 (300)	7.5 (265)
		SL	7.5 (265)	6.8 (240)
Fan	Type	Sirocco Fan		
	Motor Output	W	34	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Direction Control			Right, Left, Horizontal, Downward	
Air Filter			Removable / Washable / Mildew Proof	
Running Current (Rated)	A	0.48 - 0.45 - 0.43	0.47 - 0.45 - 0.44	
Power Consumption (Rated)	W	96 - 96 - 96	96 - 96 - 96	
Power Factor (Rated)	%	90.9 - 92.8 - 93.0	92.8 - 92.8 - 90.9	
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)	mm	490 x 1,050 x 200		
Packaged Dimensions (H x W x D)	mm	566 x 1,100 x 280		
Weight (Mass)	kg	17		
Gross Weight (Gross Mass)	kg	24		
Operation Sound	H / M / L / SL	dBA	47 / 43 / 39 / 36	46 / 41 / 35 / 33
Sound Power		dBA	63	32
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	φ 18.0	
Drawing No.			3D059830	

Conversion Formulae
kcal/h = kW × 860
Btu/h = kW × 3412
cfm = m ³ /min × 35.3

Duct Connected Type

50 Hz, 230 V

Model			FDXS25EAVMB		FDXS35EAVMB	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Front Panel Color			—		—	
Airflow Rates	m ³ /min (cfm)	H	8.7 (307)	8.7 (307)	8.7 (307)	8.7 (307)
		M	8.0 (282)	8.0 (282)	8.0 (282)	8.0 (282)
		L	7.3 (258)	7.3 (258)	7.3 (258)	7.3 (258)
		SL	6.2 (219)	6.2 (219)	6.2 (219)	6.2 (219)
Fan	Type	Sirocco Fan		Sirocco Fan		
	Motor Output	W	62		62	
	Speed	Steps	5 Steps, Quiet, Auto		5 Steps, Quiet, Auto	
Air Filter			Removable / Washable / Mildew Proof		Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.48	0.48	0.48	0.48
Power Consumption (Rated)		W	71	71	71	71
Power Factor (Rated)		%	64.3	64.3	64.3	64.3
Temperature Control			Microcomputer Control		Microcomputer Control	
Dimensions (H x W x D)		mm	200 x 700 x 620		200 x 700 x 620	
Packaged Dimensions (H x W x D)		mm	274 x 906 x 751		274 x 906 x 751	
Weight (Mass)		kg	21		21	
Gross Weight (Gross Mass)		kg	29		29	
Operation Sound	H / M / L / SL	dBA	35 / 33 / 31 / 29	35 / 33 / 31 / 29	35 / 33 / 31 / 29	35 / 33 / 31 / 29
Sound Power		dBA	53	53	53	53
External Static Pressure		Pa	30		30	
Heat Insulation			Both Liquid and Gas Pipes		Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4		φ 6.4	
	Gas	mm	φ 9.5		φ 9.5	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)		VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060029		3D060030	

Model			FDXS50CVMB	
			Cooling	Heating
Rated Capacity			5.0 kW Class	
Front Panel Color			—	
Airflow Rates	m ³ /min (cfm)	H	12.0 (424)	12.0 (424)
		M	11.0 (388)	11.0 (388)
		L	10.0 (353)	10.0 (353)
		SL	8.4 (297)	8.4 (297)
Fan	Type	Sirocco Fan		
	Motor Output	W	130	
	Speed	Steps	5 Steps, Quiet, Auto	
Air Filter			Removable / Washable / Mildew Proof	
Running Current (Rated)		A	0.64	0.64
Power Consumption (Rated)		W	140	140
Power Factor (Rated)		%	95.1	95.1
Temperature Control			Microcomputer Control	
Dimensions (H x W x D)		mm	200 x 900 x 620	
Packaged Dimensions (H x W x D)		mm	266 x 1,106 x 751	
Weight (Mass)		kg	27	
Gross Weight (Gross Mass)		kg	34	
Operation Sound	H / M / L / SL	dBA	37 / 35 / 33 / 31	37 / 35 / 33 / 31
Sound Power		dBA	55	55
External Static Pressure		Pa	40	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	VP20 (O.D. φ 26 / I.D. φ 20)	
Drawing No.			3D060033	

Conversion Formulae

kcal/h = kW × 860
 Btu/h = kW × 3412
 cfm = m³/min × 35.3

Ceiling Mounted Cassette Type

50 Hz, 230 V

Model			FFQ25B8V1B		FFQ35B8V1B	
			Cooling	Heating	Cooling	Heating
Rated Capacity			2.5 kW Class		3.5 kW Class	
Decoration Panel	Color		White			
	Dimensions (H x W x D)		55 x 700 x 700			
Airflow Rates	m ³ /min (cfm)	H	9.0 (318)	9.0 (318)	10.0 (353)	10.0 (353)
		M	—	—	—	—
		L	6.5 (230)	6.5 (230)	6.5 (230)	6.5 (230)
		SL	—	—	—	—
Fan	Type		Turbo Fan			
	Motor Output	W	55			
	Speed	Steps	2 Steps			
Air Direction Control			Horizontal, Downward			
Air Filter			—			
Running Current (Rated)	A	0.37	0.32	0.40	0.36	
Power Consumption (Rated)	W	73	64	84	76	
Power Factor (Rated)	%	85.8	87.0	91.3	91.8	
Temperature Control			Microcomputer Control			
Dimensions (H x W x D) ★1		mm	260 (286) x 575 x 575			
Packaged Dimensions (H x W x D)		mm	370 x 687 x 674			
Weight (Mass)		kg	17.5			
Gross Weight (Gross Mass)		kg	21			
Operation Sound	H / L	dBA	29.5 / 24.5			
Sound Power		dBA	46.5			
Heat Insulation			Both Liquid and Gas Pipes			
Piping Connection	Liquid	mm	φ 6.4			
	Gas	mm	φ 9.5			
	Drain	mm	VP20 (O.D φ 26 / I.D φ 20)			
Drawing No.			3D060405		3D060407	

Model			FFQ50B8V1B	
			Cooling	Heating
Rated Capacity			5.0 kW Class	
Decoration Panel	Color		White	
	Dimensions (H x W x D)		55 x 700 x 700	
Airflow Rates	m ³ /min (cfm)	H	12.0 (424)	12.0 (424)
		M	—	—
		L	8.0 (283)	8.0 (283)
		SL	—	—
Fan	Type		Turbo Fan	
	Motor Output	W	55	
	Speed	Steps	2 Steps	
Air Direction Control			Horizontal, Downward	
Air Filter			—	
Running Current (Rated)	A	0.49	0.45	
Power Consumption (Rated)	W	97	89	
Power Factor (Rated)	%	86.1	86.0	
Temperature Control			Microcomputer Control	
Dimensions (H x W x D) ★1		mm	260 (286) x 575 x 575	
Packaged Dimensions (H x W x D)		mm	370 x 687 x 674	
Weight (Mass)		kg	17.5	
Gross Weight (Gross Mass)		kg	21	
Operation Sound	H / L	dBA	36.0 / 27.0	
Sound Power		dBA	53.0	
Heat Insulation			Both Liquid and Gas Pipes	
Piping Connection	Liquid	mm	φ 6.4	
	Gas	mm	φ 12.7	
	Drain	mm	VP20 (O.D φ 26 / I.D φ 20)	
Drawing No.			3D060409	

Note: ★1 () : dimension including control box

Conversion Formulae
kcal/h = kW x 860
Btu/h = kW x 3412
cfm = m ³ /min x 35.3

1.4 Heat Pump - Outdoor Units

50 Hz, 220 - 240 V

Model		2MXS40GV1B		2MXS40G2V1B		
		Cooling	Heating	Cooling	Heating	
Capacity	kW	—		—		
Power Consumption	W	—		—		
Running Current	A	—		—		
Casing Color		Ivory White		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model	1YC23ABXD		1YC23AGXD		
	Motor Output	600		600		
Refrigerant Oil	Model	FVC50K		FVC50K		
	Charge	L	0.45		0.45	
Refrigerant	Type	R-410A		R-410A		
	Charge	kg	1.20		1.20	
Airflow Rate	m ³ /min	HH	36	32	36	32
		H	33	32	33	32
		L	30	32	30	32
	cfm	HH	1,271	1,130	1,271	1,130
		H	1,165	1,130	1,165	1,130
		L	1,059	1,130	1,059	1,130
Fan	Type	Propeller		Propeller		
	Motor Output	W	50		50	
Starting Current	A	5.9		5.9		
Dimension (H × W × D)	mm	550 × 765 × 285		550 × 765 × 285		
Packaged Dimension (H × W × D)	mm	612 × 906 × 364		612 × 906 × 364		
Weight (Mass)	kg	38		38		
Gross Weight (Gross Mass)	kg	43		43		
Operation Sound (Sound Pressure)	dBA	47	48	47	48	
Sound Power	dBA	62	—	62	—	
Piping Connection	Liquid	mm	φ 6.4 × 2		φ 6.4 × 2	
	Gas	mm	φ 9.5 × 2		φ 9.5 × 2	
	Drain	mm	φ 18		φ 18	
Heat Insulation		Both Liquid & Gas Pipes		Both Liquid & Gas Pipes		
No. of Wiring Connection		3 for Power Supply, 4 for Interunit Wiring		3 for Power Supply, 4 for Interunit Wiring		
Max. Piping Length	m	30 (for Total of Each Room)		30 (for Total of Each Room)		
		20 (for One Room)		20 (for One Room)		
Min. Piping Length	m	3 (for One Room)		3 (for One Room)		
Amount of Additional Charge	g/m	20 (20 m or more)		20 (20 m or more)		
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)		
		7.5 (between Indoor Units)		7.5 (between Indoor Units)		
Drawing No.		3D059050A		3D058721B		

Note: 1. The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB / 6°CWB	5 m

Conversion Formulae
kcal/h = kW × 860 Btu/h = kW × 3412 cfm = m ³ /min × 35.3

50 Hz, 220 - 240 V

Model		2MXS50GV1B		2MXS50G2V1B		
		Cooling	Heating	Cooling	Heating	
Capacity	kW	—		—		
Power Consumption	W	—		—		
Running Current	A	—		—		
Casing Color		Ivory White		Ivory White		
Compressor	Type	Hermetically Sealed Swing Type		Hermetically Sealed Swing Type		
	Model	2YC36BXD		2YC36BXD		
	Motor Output	W	1,100	1,100		
Refrigerant Oil	Model	FVC50K		FVC50K		
	Charge	L	0.65	0.65		
Refrigerant	Type	R-410A		R-410A		
	Charge	kg	1.60	1.60		
Airflow Rates	m³/min	HH	37	34	37	34
		H	34	34	34	34
		L	34	34	34	34
	cfm	HH	1,306	1,200	1,306	1,200
		H	1,200	1,200	1,200	1,200
		L	1,200	1,200	1,200	1,200
Fan	Type	Propeller		Propeller		
	Motor Output	W	50	50		
Starting Current	A	9.8		9.8		
Dimensions (H x W x D)	mm	550 x 765 x 285		550 x 765 x 285		
Packaged Dimensions (H x W x D)	mm	612 x 906 x 364		612 x 906 x 364		
Weight (Mass)	kg	42		42		
Gross Weight (Gross Mass)	kg	47		47		
Operation Sound	(Sound Pressure)	dBA	48	50	48	50
Sound Power		dBA	63	—	63	—
Piping Connection	Liquid	mm	φ 6.4 x 2		φ 6.4 x 2	
	Gas	mm	φ 9.5 x 1, φ 12.7 x 1		φ 9.5 x 1, φ 12.7 x 1	
	Drain	mm	φ 18.0		φ 18.0	
Heat Insulation		Both Liquid and Gas Pipes		Both Liquid and Gas Pipes		
No. of Wiring Connection		3 for Power Supply, 4 for Interunit Wiring		3 for Power Supply, 4 for Interunit Wiring		
Max. Interunit Piping Length	m	30 (for Total of Each Room)		30 (for Total of Each Room)		
	m	20 (for One Room)		20 (for One Room)		
Min. Interunit Piping Length	m	3 (for One Room)		3 (for One Room)		
Amount of Additional Charge	g/m	20 (20 m or more)		20 (20 m or more)		
Max. Installation Height Difference	m	15 (between Indoor Unit and Outdoor Unit)		15 (between Indoor Unit and Outdoor Unit)		
	m	7.5 (between Indoor Units)		7.5 (between Indoor Units)		
Drawing No.		3D059051A		3D058722B		

Note: 1. The data are based on the conditions shown in the table below.

Cooling	Heating	Piping Length
Indoor ; 27°CDB / 19°CWB Outdoor ; 35°CDB	Indoor ; 20°CDB Outdoor ; 7°CDB / 6°CWB	5 m

Conversion Formulae
kcal/h = kW x 860 Btu/h = kW x 3412 cfm = m³/min x 35.3

Part 3

Printed Circuit Board

Connector Wiring Diagram

1. Indoor Unit.....	31
1.1 Wall Mounted Type	31
1.2 Floor Standing Type	39
1.3 Floor / Ceiling Suspended Dual Type.....	41
1.4 Duct Connected Type.....	43
1.5 Ceiling Mounted Cassette Type	45
2. Outdoor Unit.....	48
2.1 2MK(X)S40/50GV1B, 2MK(X)S40/50G2V1B	48

1. Indoor Unit

1.1 Wall Mounted Type

1.1.1 FTXG25/35EV1BW(S), CTXG50EV1BW(S)

Connectors and Other Parts

PCB (1): Control PCB

1) S1	Connector for fan motor
2) S21	Connector for centralized control (HA)
3) S32	Indoor heat exchanger thermistor
4) S36	Connector for INTELLIGENT EYE sensor PCB
5) S41	Connector for swing motors
6) S46	Connector for signal receiver PCB
7) S49	Connector for reduction motor (front panel mechanism)
8) S51	Connector for front panel limit switch
9) H1B, H2, H3	Connector for terminal board
10) FG	Terminal for earth
11) JA	Address setting jumper * Refer to page 278 for detail.
JB	Fan speed setting when compressor stops for thermostat OFF
JC	Power failure recovery function (auto-restart) * Refer to page 281 for detail.
12) LED A	LED for service monitor (green)
13) FU (F1U)	Fuse (3.15 A, 250 V)
14) V1	Varistor

PCB (2): Signal Receiver PCB


1) S47	Connector for control PCB
2) SW1 (S1W)	Forced operation ON/OFF button
3) LED2 (H2P)	LED for INTELLIGENT EYE (green)
4) LED3 (H3P)	LED for timer (yellow)
5) LED4 (H4P)	LED for operation (green)
6) RTH1 (R2T)	Room temperature thermistor

PCB (3): INTELLIGENT EYE Sensor PCB


1) S36	Connector for control PCB
--------	---------------------------

PCB Detail


PCB (1): Control PCB

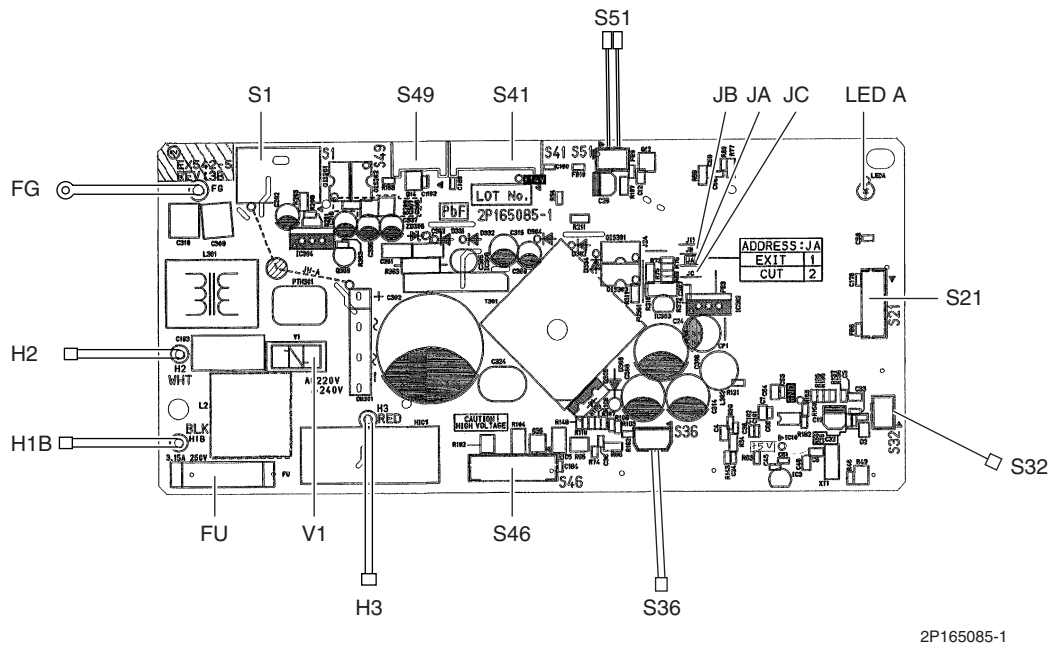

PCB (2): Signal Receiver PCB

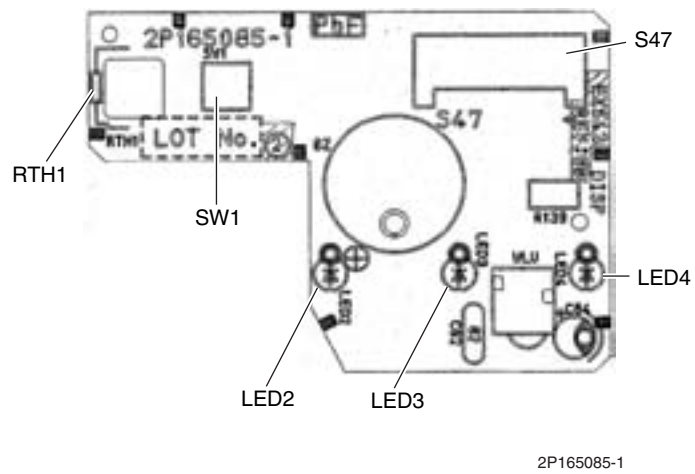

PCB (3): INTELLIGENT EYE Sensor PCB

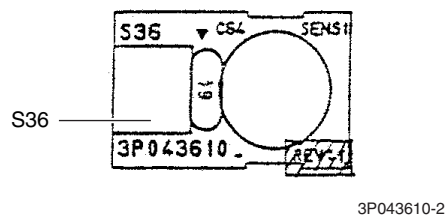

1.1.2 FTXG25/35JV1BW(S), CTXG50JV1BW(S)

Connectors and Other Parts

PCB (1): Control PCB

- | | |
|----------------------|---|
| 1) S21 | Connector for centralized control (HA) |
| 2) S25 | Connector for INTELLIGENT EYE sensor PCB |
| 3) S32 | Indoor heat exchanger thermistor |
| 4) S41 | Connector for swing motors |
| 5) S42 | Connector for reduction motor (front panel mechanism) and limit switch |
| 6) S46 | Connector for signal receiver / display PCB |
| 7) S200 | Connector for fan motor |
| 8) H1, H2, H3,
FG | Connector for terminal board |
| 9) JB | Fan speed setting when compressor stops for thermostat OFF |
| JC | Power failure recovery function (auto-restart)
* Refer to page 281 for detail. |
| 10) LED A | LED for service monitor (green) |
| 11) F1U | Fuse (3.15 A, 250 V) |
| 12) V1 | Varistor |

PCB (2): Signal Receiver / Display PCB


- | | |
|--------|---|
| 1) S51 | Connector for control PCB |
| 2) S52 | Connector for room temperature thermistor |
| 3) S1W | Forced operation ON/OFF button |
| 4) H1P | LED for operation (multi-color) |
| 5) H2P | LED for INTELLIGENT EYE (green) |
| 6) JA | Address setting jumper
* Refer to page 278 for detail. |

PCB (3): INTELLIGENT EYE Sensor PCB

- | | |
|--------|---------------------------|
| 1) S36 | Connector for control PCB |
|--------|---------------------------|


PCB Detail

PCB (1): Control PCB

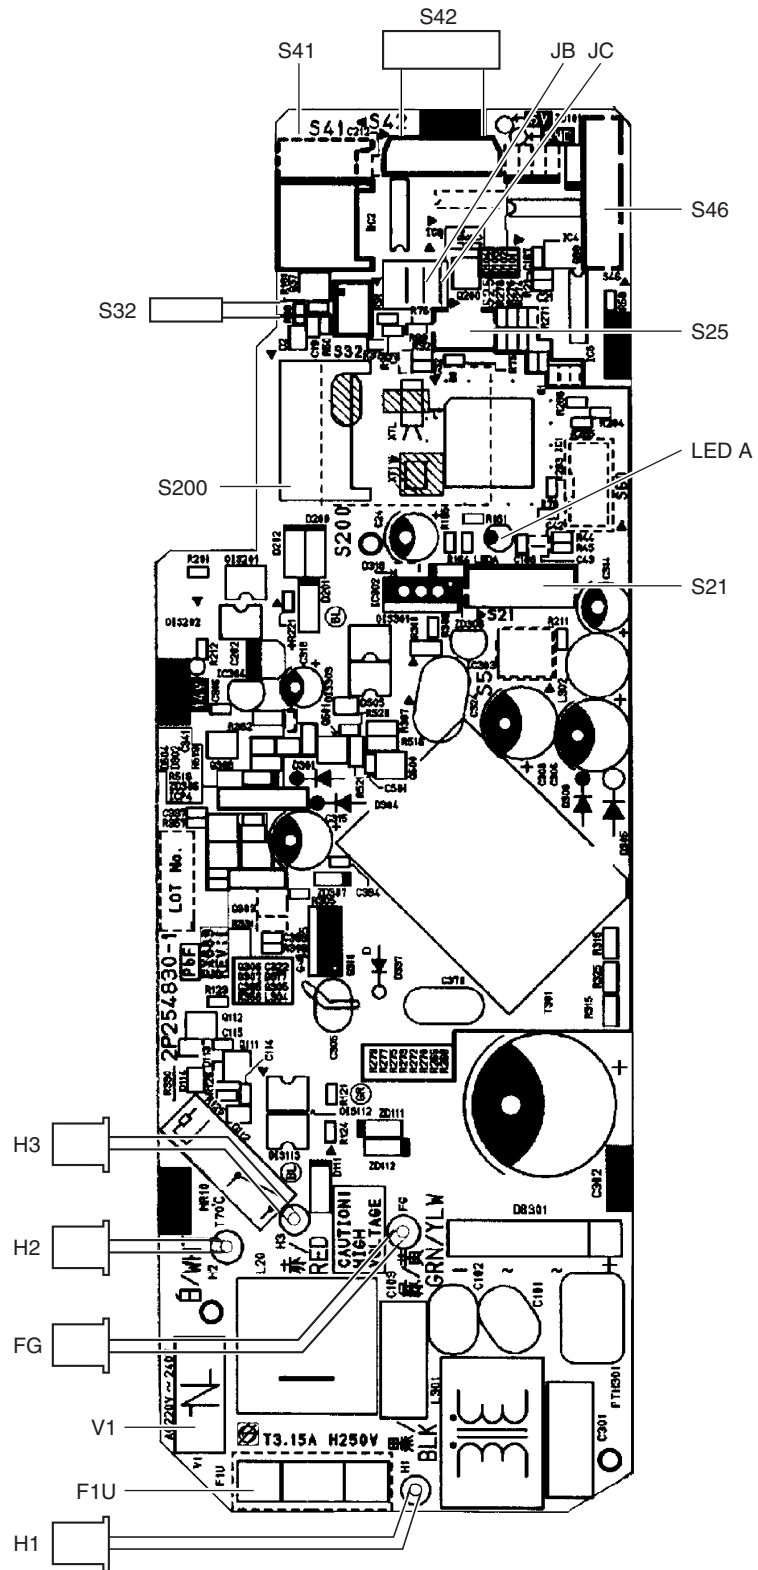


2P254830-1

PCB (2): Signal Receiver / Display PCB

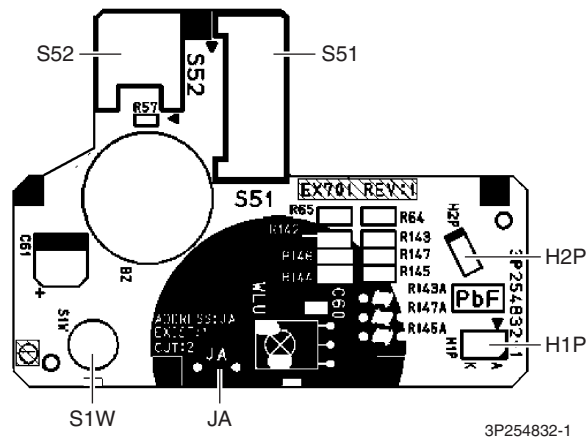

PCB (3): INTELLIGENT EYE Sensor PCB

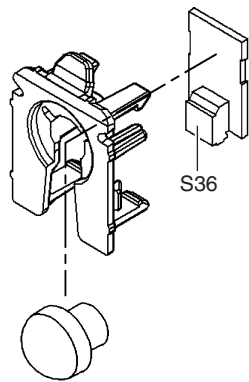

3P255914-1

1.1.3 FTXS20/25/35/42/50G2V1B

Connectors and Other Parts

PCB (1): Control PCB

- | | |
|----------------------|---|
| 1) S1 | Connector for DC fan motor |
| 2) S21 | Connector for centralized control (HA) |
| 3) S25 | Connector for INTELLIGENT EYE sensor PCB |
| 4) S32 | Indoor heat exchanger thermistor |
| 5) S41 | Connector for swing motors |
| 6) S46 | Connector for display PCB |
| 7) S47 | Connector for signal receiver PCB |
| 8) H1, H2, H3,
FG | Connector for terminal board |
| 9) JA | Address setting jumper
* Refer to page 278 for detail. |
| JB | Fan speed setting when compressor stops for thermostat OFF |
| JC | Power failure recovery function (auto-restart)
* Refer to page 281 for detail. |
| 10) LED A | LED for service monitor (green) |
| 11) FU1 (F1U) | Fuse (3.15 A, 250 V) |
| 12) V1 | Varistor |

PCB (2): Signal Receiver PCB

- | | |
|--------|---------------------------|
| 1) S48 | Connector for control PCB |
|--------|---------------------------|

PCB (3): Display PCB


- | | |
|---------------|---------------------------------|
| 1) S49 | Connector for control PCB |
| 2) SW1 | Forced operation ON/OFF button |
| 3) LED1 (H1P) | LED for operation (green) |
| 4) LED2 (H2P) | LED for timer (yellow) |
| 5) LED3 (H3P) | LED for INTELLIGENT EYE (green) |
| 6) RTH1 (R1T) | Room temperature thermistor |

PCB (4): INTELLIGENT EYE Sensor PCB

- | | |
|--------|---------------------------|
| 1) S26 | Connector for control PCB |
|--------|---------------------------|


PCB Detail

PCB (1): Control PCB

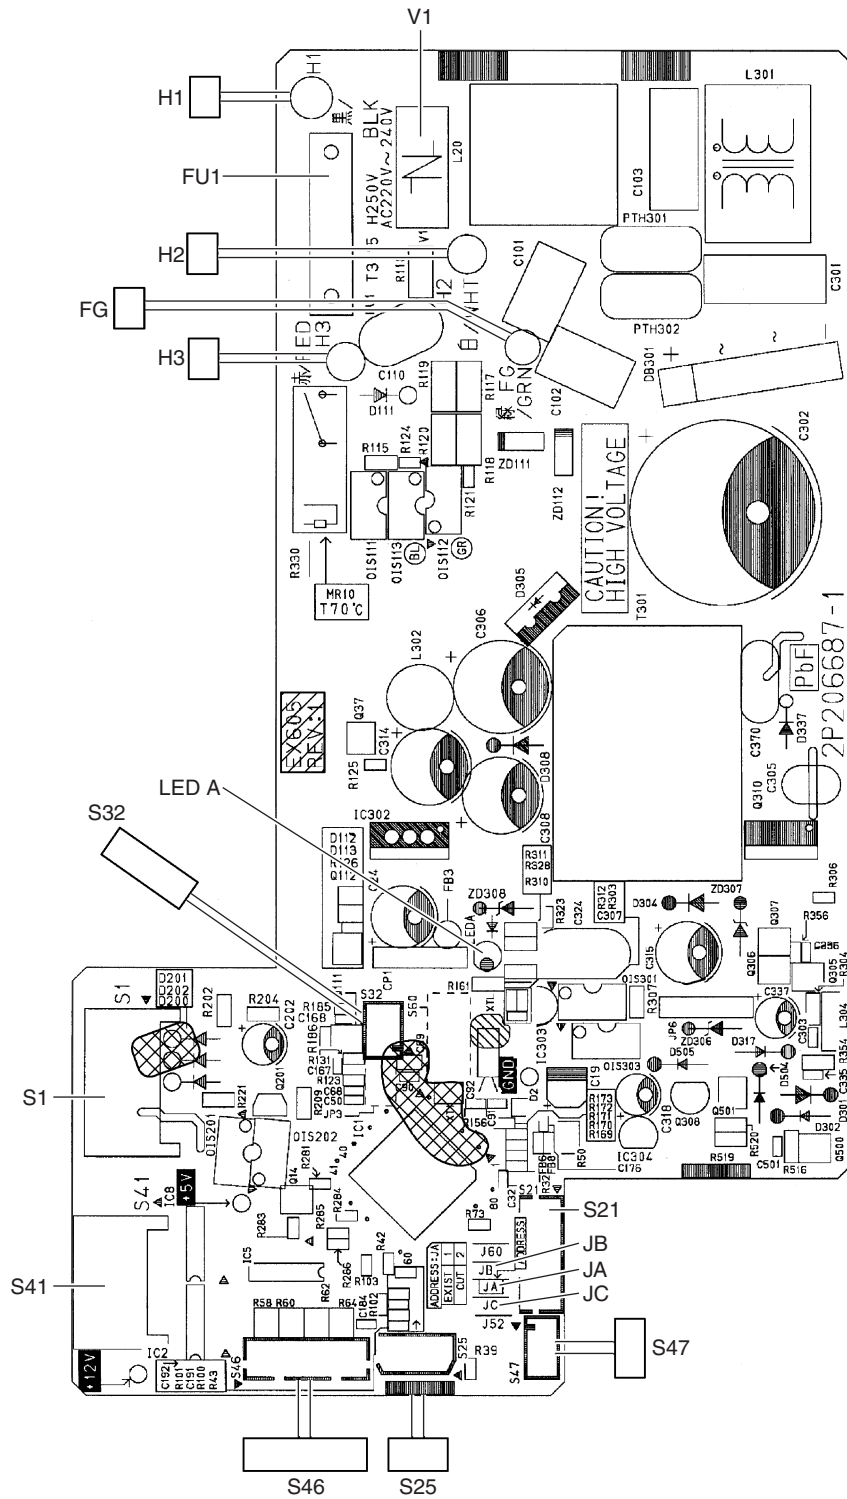


2P206687-1


PCB (2): Signal Receiver PCB

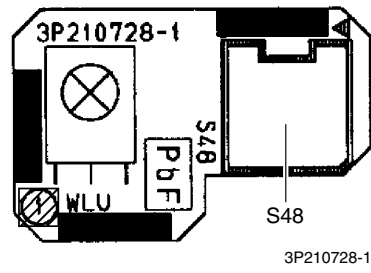

PCB (3): Display PCB

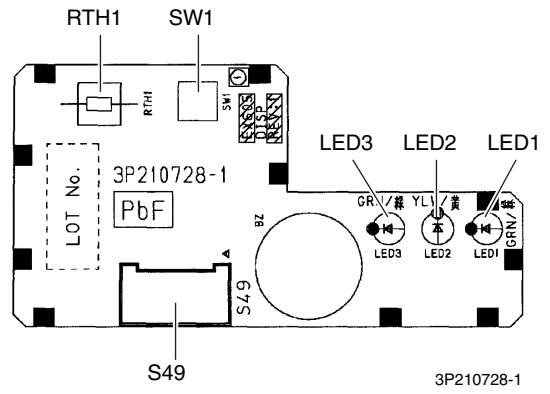

PCB (4): INTELLIGENT EYE Sensor PCB

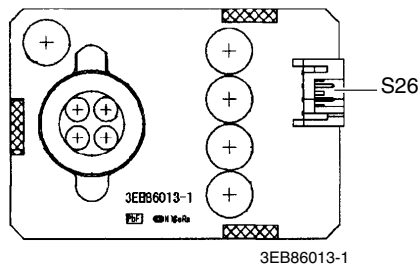

1.2 Floor Standing Type

1.2.1 FVXS25/35/50FV1B

Connectors and Other Parts

PCB (1): Sensor PCB

- | | |
|---------------|-----------------------------|
| 1) S49 | Connector for control PCB |
| 2) RTH2 (R1T) | Room temperature thermistor |

PCB (2): Control PCB

- | | |
|---------------|--|
| 1) S1 | Connector for fan motor |
| 2) S21 | Connector for centralized control (HA) |
| 3) S26 | Connector for service PCB |
| 4) S32 | Indoor heat exchanger thermistor |
| 5) S41 | Connector for lower air outlet motor |
| 6) S42 | Connector for swing motor |
| 7) S46 | Connector for display PCB |
| 8) S48 | Connector for sensor PCB |
| 9) H1, H2, H3 | Connector for terminal board |
| 10) E1 | Terminal for earth |
| 11) V1, V2 | Varistor |
| 12) JA | Address setting jumper |
| | * Refer to page 278 for detail. |
| JB | Fan speed setting when compressor stops for thermostat OFF |
| JC | Power failure recovery function |
| | * Refer to page 281 for detail. |
| 13) FU1 (F1U) | Fuse (3.15A, 250V) |
| 14) LED A | LED for service monitor (green) |

PCB (3): Service PCB


- | | |
|----------------------|--|
| 1) S27 | Connector for control PCB |
| 2) SW2-4
(S2W(4)) | Switch for upward airflow limit setting
* Refer to page 281 for detail. |
| 3) SW4 (S4W) | Switch for air outlet selection
* Refer to page 118, 126 for detail. |

PCB (4): Display PCB

- | | |
|---------------|--------------------------------|
| 1) S47 | Connector for control PCB |
| 2) SW1 (S1W) | Forced operation ON/OFF button |
| 3) LED1 (H1P) | LED for operation (green) |
| 4) LED2 (H2P) | LED for timer (yellow) |


PCB Detail

PCB (1): Sensor PCB

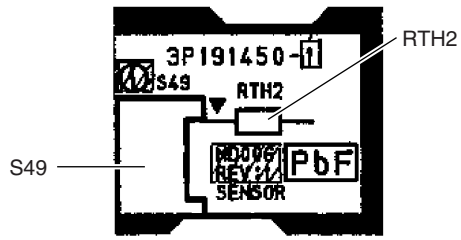


3P191450-1

PCB (2): Control PCB

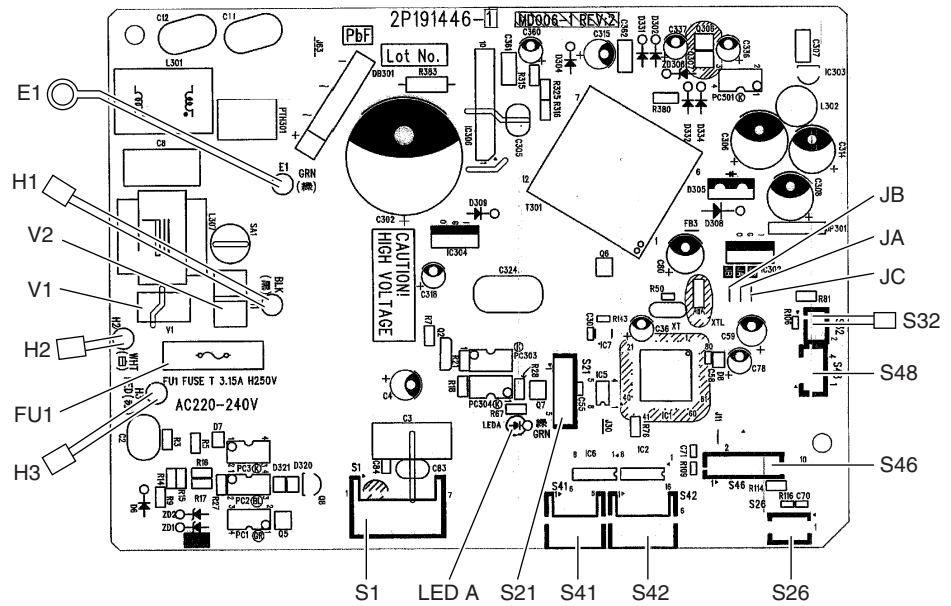


2P191446-1

PCB (3): Service PCB

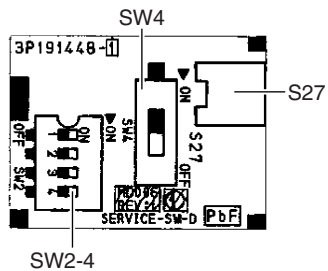

3P191448-1

PCB (4): Display PCB

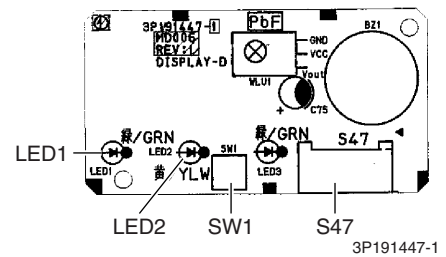

3P191447-1

★ LED3 does not function.

1.3 Floor / Ceiling Suspended Dual Type

1.3.1 FLK(X)S25/35/50BAVMB

Connectors and Other Parts

PCB (1): Control PCB

- | | |
|-----------|--|
| 1) S6 | Connector for swing motor (horizontal swing) |
| 2) S7 | Connector for AC fan motor |
| 3) S21 | Connector for centralized control (HA) |
| 4) S24 | Connector for display PCB |
| 5) S26 | Connector for signal receiver PCB |
| 6) S32 | Connector for indoor heat exchanger thermistor |
| 7) S37 | Connector for power supply PCB |
| 8) JA | Address setting jumper |
| | * Refer to page 278 for detail. |
| JB | Fan speed setting when compressor stops for thermostat OFF |
| JC | Power failure recovery function |
| | * Refer to page 281 for detail. |
| 9) SW2 | Select switch for installation (ceiling or floor) |
| | * Refer to page 281 for detail. |
| 10) LED A | LED for service monitor (green) |

PCB (2): Power Supply PCB

- | | |
|---------------|------------------------------|
| 1) S36 | Connector for control PCB |
| 2) H1, H2, H3 | Connector for terminal board |
| 3) H4, H5, H6 | Connector for AC fan motor |
| 4) V1 | Varistor |
| 5) FU1 | Fuse (3.15A, 250V) |

PCB (3): Display PCB


- | | |
|---------------|------------------------------------|
| 1) S25 | Connector for control PCB |
| 2) LED1 (H1P) | LED for operation (green) |
| 3) LED2 (H2P) | LED for timer (yellow) |
| 4) LED3 (H3P) | LED for HOME LEAVE operation (red) |

PCB (4): Signal Receiver PCB

- | | |
|--------------|--------------------------------|
| 1) S27 | Connector for control PCB |
| 2) S31 (RTH) | Room temperature thermistor |
| 3) SW1 (S1W) | Forced operation ON/OFF button |


PCB Detail

PCB (1): Control PCB

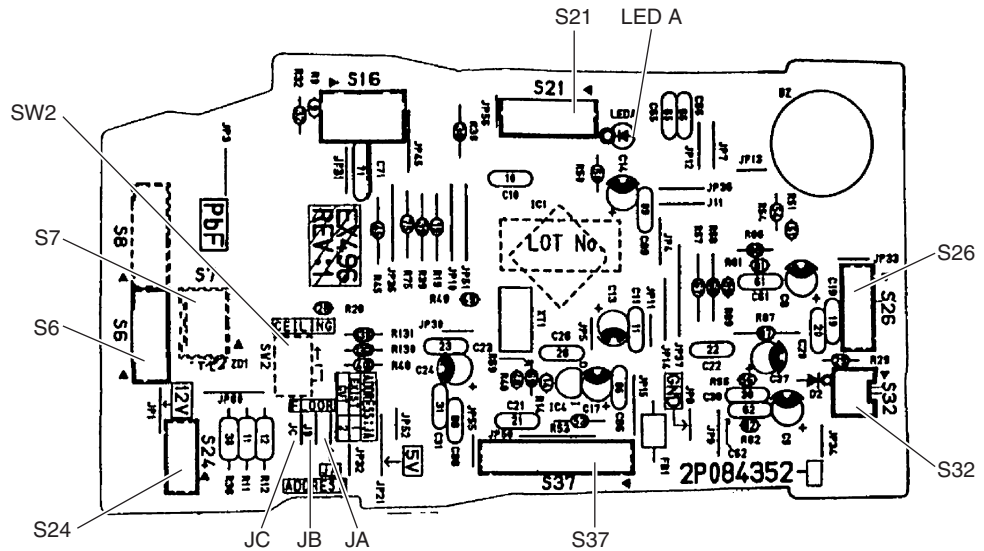


2P084352-3

PCB (2): Power Supply PCB

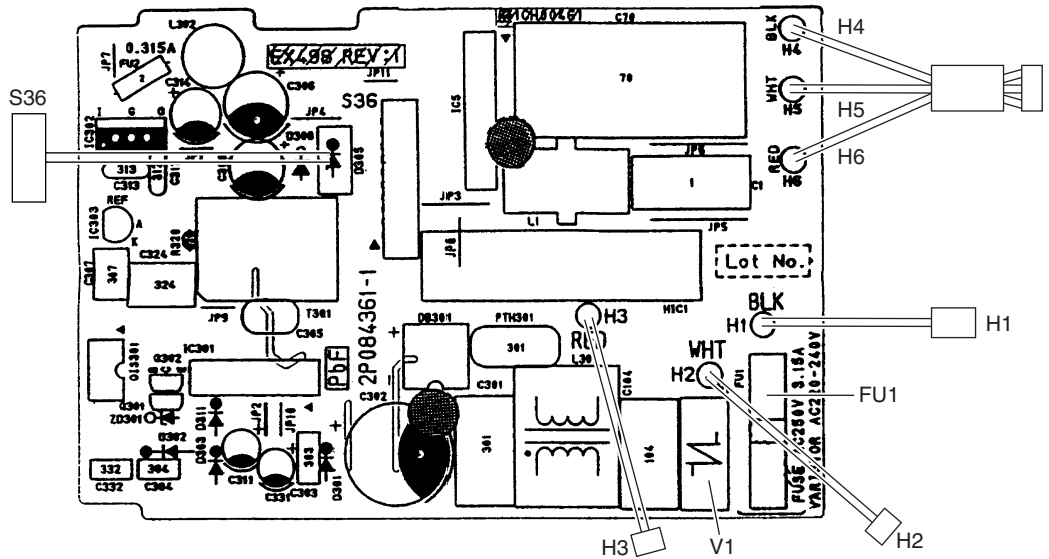


2P084361-1

PCB (3): Display PCB

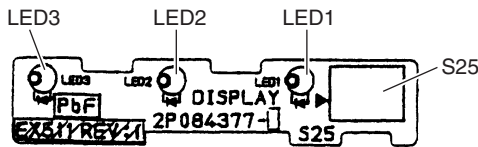

2P084377-5

PCB (4): Signal Receiver PCB

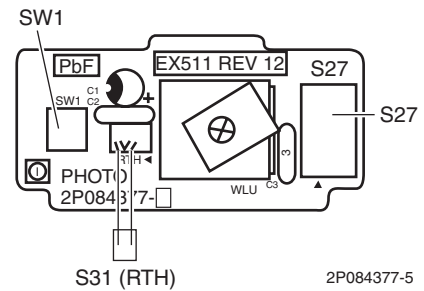

2P084377-5

1.4 Duct Connected Type

1.4.1 FDK(X)S25/35EAVMB, FDK(X)S50CVMB

Connectors and Other Parts

PCB (1): Control PCB


- | | |
|---------------|--|
| 1) S1 | Connector for AC fan motor |
| 2) S7 | Connector for AC fan motor (Hall IC) |
| 3) S21 | Connector for centralized control (HA) |
| 4) S26 | Connector for display PCB |
| 5) S32 | Connector for indoor heat exchanger thermistor |
| 6) H1, H2, H3 | Connector for terminal board |
| 7) GND | Connector for terminal board (earth) |
| 8) JA | Address setting jumper |
| | * Refer to page 278 for detail. |
| JB | Fan speed setting when compressor stops for thermostat OFF |
| JC | Power failure recovery function (auto-restart) |
| | Refer to page 281 for detail. |
| 9) LED A | LED for service monitor (green) |
| 10) FU1 (F1U) | Fuse (3.15A, 250V) |
| 11) V1 (V1TR) | Varistor |

PCB (2): Display PCB


- | | |
|---------------|------------------------------------|
| 1) S1 | Connector for control PCB |
| 2) SW1 (S1W) | Forced operation ON/OFF button |
| 3) LED1 (H1P) | LED for HOME LEAVE operation (red) |
| 4) LED2 (H2P) | LED for timer (yellow) |
| 5) LED3 (H3P) | LED for operation (green) |
| 6) RTH1 (R1T) | Room temperature thermistor |

PCB Detail

PCB (1): Control PCB

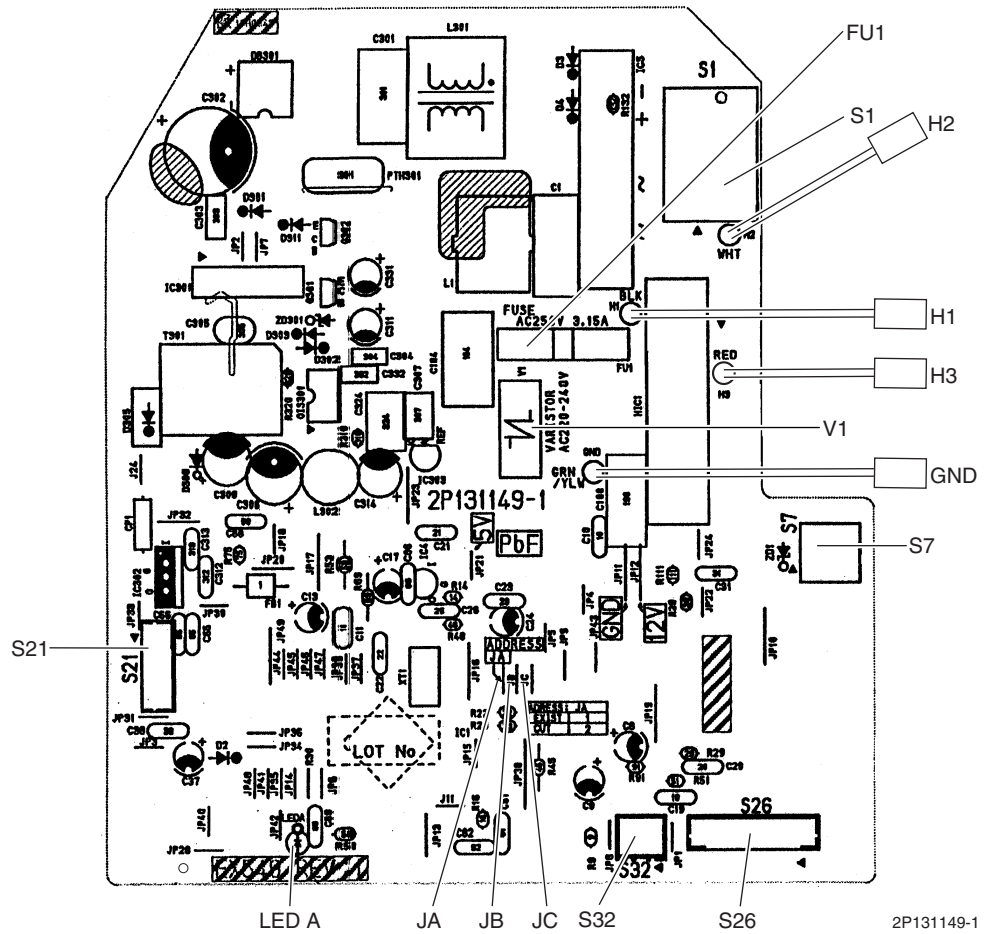

PCB (2): Display PCB

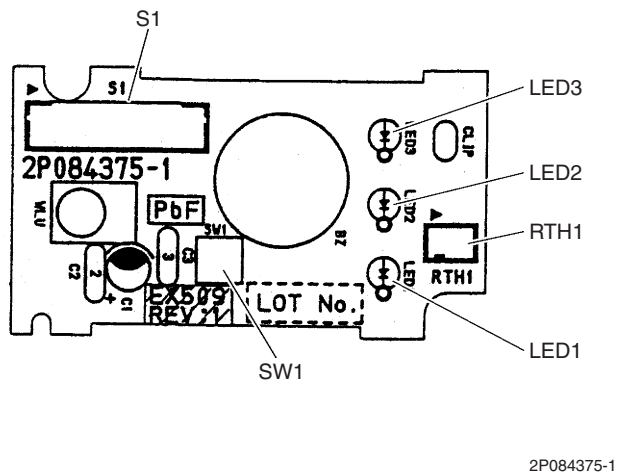

1.5 Ceiling Mounted Cassette Type

1.5.1 FFQ25/35/50B8V1B

Connectors and Other Parts

PCB (1): Control PCB [A1P]

1) X5A	Connector for terminal board (for wired remote controller)
2) X10A, X11A	Connector for transformer
3) X15A	Connector for float switch
4) X17A, X18A	Connector for indoor heat exchanger thermistor
5) X19A	Connector for room temperature thermistor
6) X20A	Connector for fan motor
7) X24A	Connector for signal receiver PCB (when the wireless remote controller is used)
8) X25A	Connector for drain pump motor
9) X27A	Connector for terminal board (for inter-unit wiring)
10) X33A	Optional connector for wiring adaptor PCB
11) X35A	Optional connector for group control adaptor
12) X36A	Connector for swing motor
13) X40A	Optional connector for ON/OFF input from outside
14) X60A, X61A	Optional connector for interface adaptor
15) HAP	LED for service monitor (green)

PCB (2): Wired Remote Controller PCB

1) TH (R1T)	Room temperature thermistor
2) SS1	MAIN / SUB setting switch * Refer to page 284 for detail.

PCB (3): Signal Receiver PCB [A3P]

1) X1A	Connector for display PCB
2) X2A	Connector for control PCB
3) SS1	MAIN / SUB setting switch
4) SS2	Address setting switch

PCB (4): Display PCB [A4P]


1) X1A	Connector for signal receiver PCB
2) BS1	Forced operation ON/OFF button
3) LED1 (H1P)	LED for operation (red)
4) LED2 (H2P)	LED for timer (green)
5) LED3 (H3P)	LED for filter cleaning sign (red)
6) LED4 (H4P)	LED for defrost operation (orange)



Note: The wireless remote controller kit contains [A3P] and [A4P].


PCB Detail

PCB (1): Control PCB [A1P]

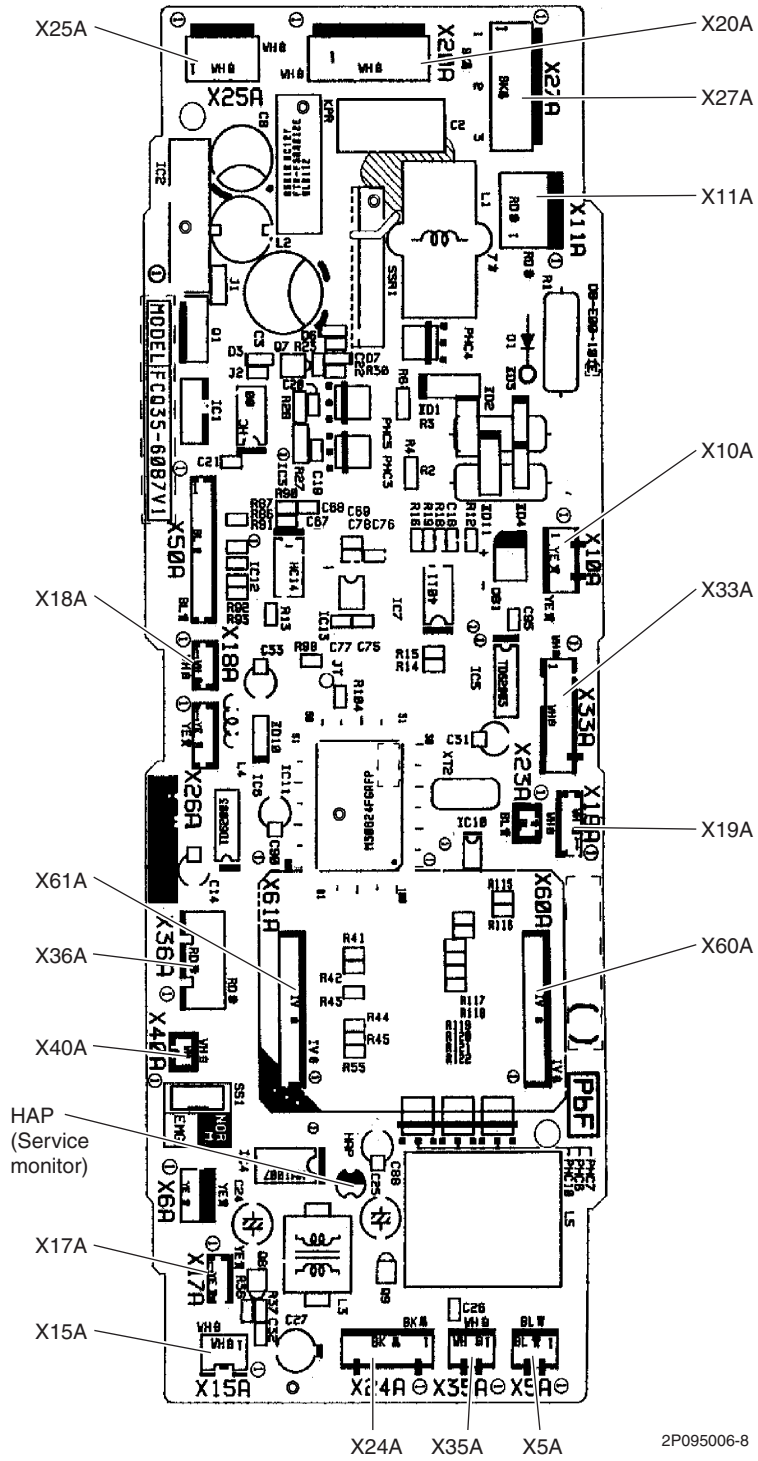


2P095006-8


PCB (2): Wired Remote Controller PCB

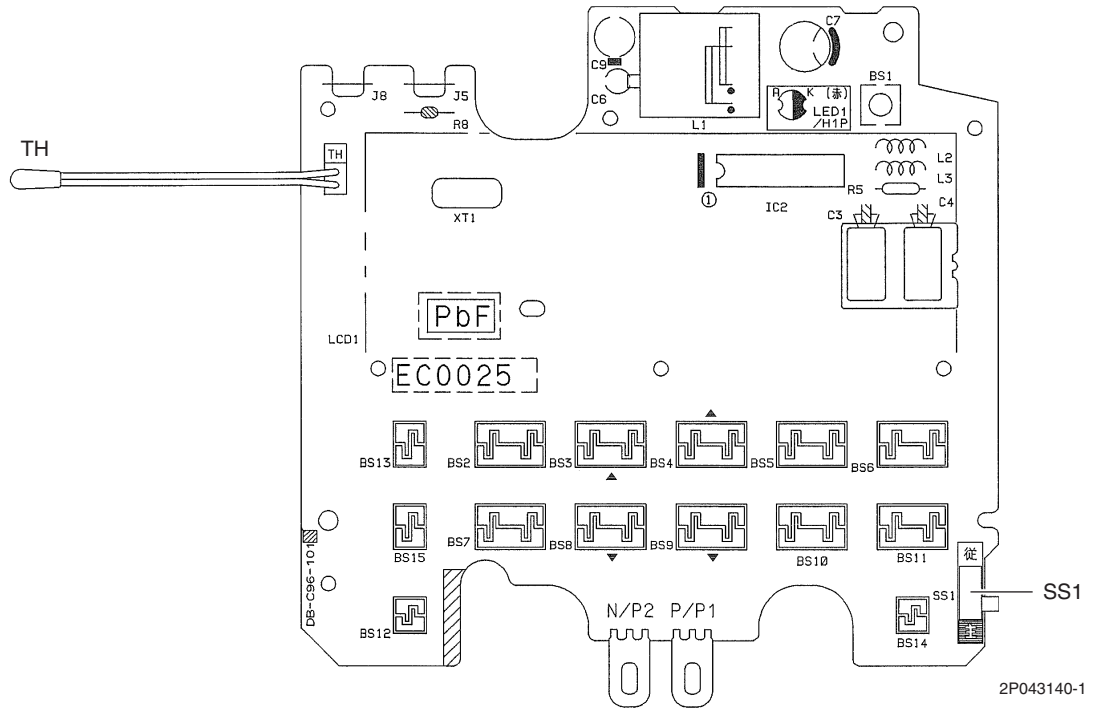

PCB (3): Signal Receiver PCB [A3P]

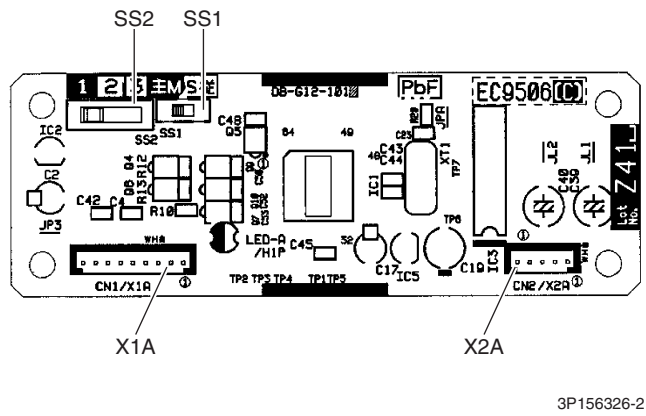

PCB (4): Display PCB [A4P]

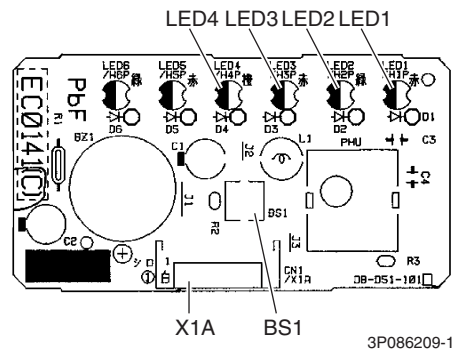

★ LED5 and LED6 do not function.

2. Outdoor Unit


2.1 2MK(X)S40/50GV1B, 2MK(X)S40/50G2V1B

Connectors and Other Parts


1) S20	Connector for electronic expansion valve coil A port
2) S21	Connector for electronic expansion valve coil B port
3) S40	Connector for overload protector
4) S45	Connector for terminal board (thermal fuse)
5) S70	Connector for fan motor
6) S80	Connector for four way valve coil
7) S90	Connector for thermistors (outdoor temperature, outdoor heat exchanger, discharge pipe)
8) S91	Connector for thermistors (gas pipe)
9) S92	Connector for thermistors (liquid pipe)
10) E	Terminal for earth (40 class)
E2	Terminal for earth (50 class)
11) HL1, HN1	Connector for terminal board (power supply)
12) HR1, HR2	Connector for reactor
13) S-A	Connector for terminal board (room A - outdoor transmission)
14) S-B	Connector for terminal board (room B - outdoor transmission)
15) U, V, W	Connector for compressor
16) LED A	LED for service monitor (green)
17) FU1, FU2	Fuse (3.15 A / 250 V)
18) FU3	Fuse (30 A / 250 V)
19) J3	Jumper for ECONO mode prohibition setting * Refer to page 285 for detail.
20) J4	Jumper for maximum power input limitation setting * Refer to page 285 for detail.
21) J5	Jumper for improvement of defrost performance * Refer to page 285 for detail.
22) V1, V3, V4	Varistor

PCB Detail

40 class

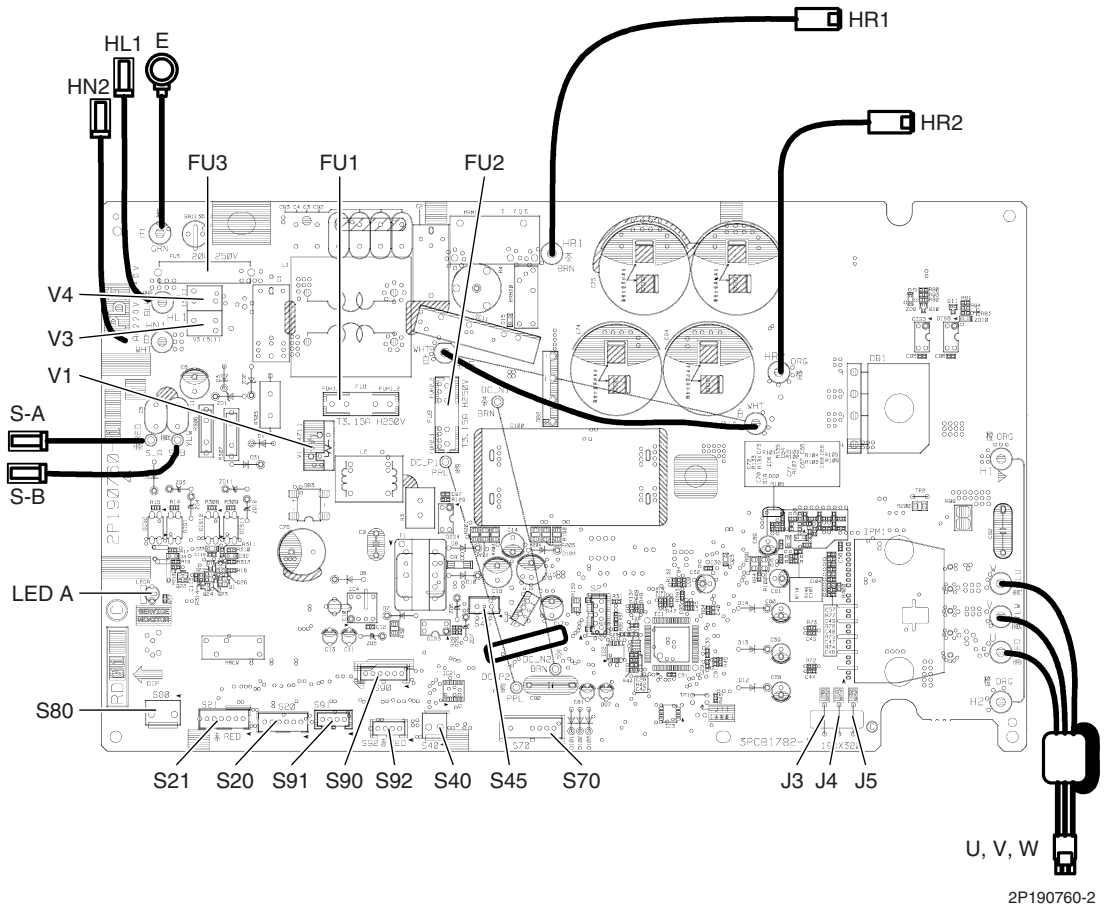

50 class

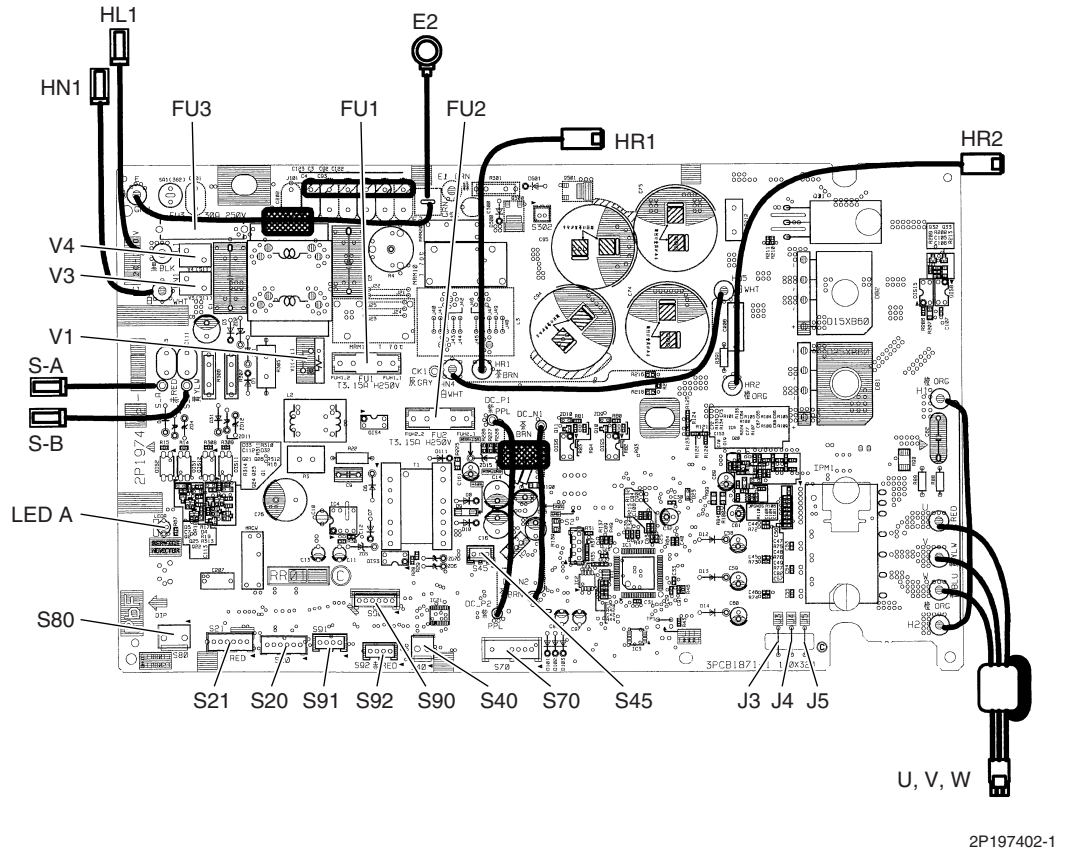

Part 4

Function and Control

1. Main Functions	51
1.1 Temperature Control	51
1.2 Frequency Principle.....	51
1.3 Operation Starting Control.....	53
1.4 Airflow Direction Control.....	54
1.5 Fan Speed Control for Indoor Units.....	56
1.6 Program Dry Operation	57
1.7 Automatic Operation.....	58
1.8 Thermostat Control.....	59
1.9 NIGHT SET Mode	61
1.10 ECONO Operation	62
1.11 HOME LEAVE Operation	63
1.12 2-Area INTELLIGENT EYE Operation	64
1.13 INTELLIGENT EYE Operation	66
1.14 Inverter POWERFUL Operation	67
1.15 Other Functions.....	69
2. Function of Thermistor	71
3. Control Specification	73
3.1 Mode Hierarchy	73
3.2 Frequency Control.....	75
3.3 Controls at Mode Changing / Start-up.....	78
3.4 Discharge Pipe Temperature Control.....	79
3.5 Input Current Control.....	80
3.6 Freeze-up Protection Control	80
3.7 Heating Peak-cut Control	81
3.8 Outdoor Fan Control.....	81
3.9 Liquid Compression Protection Function.....	82
3.10 Defrost Control	82
3.11 Electronic Expansion Valve Control	83
3.12 Malfunctions	88


1. Main Functions

1.1 Temperature Control

Definitions of Temperatures

The definitions of temperatures are classified as following.

- ◆ Room temperature: temperature of lower part of the room
- ◆ Set temperature: temperature set by remote controller
- ◆ Room thermistor temperature: temperature detected by room temperature thermistor
- ◆ Target temperature: temperature determined by microcomputer

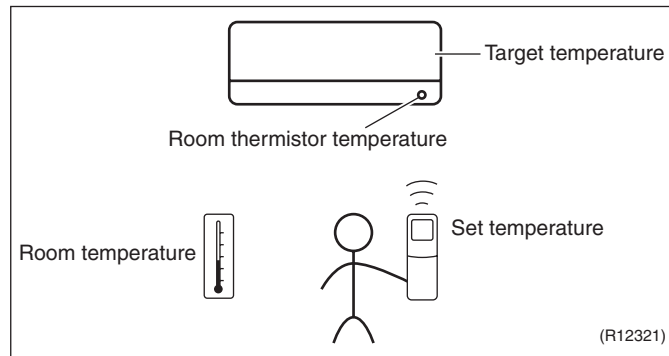

★ The illustration is for wall mounted type as representative.

Temperature Control

The temperature of the room is detected by the room temperature thermistor. However, there is difference between the “temperature detected by room temperature thermistor” and the “temperature of lower part of the room”, depending on the type of the indoor unit or installation condition. Practically, the temperature control is done by the “target temperature appropriately adjusted for the indoor unit” and the “temperature detected by room temperature thermistor”.

1.2 Frequency Principle

Main Control Parameters

The compressor is frequency-controlled during normal operation. The target frequency is set by the following 2 parameters coming from the operating indoor unit:

- The load condition of the operating indoor unit
- The difference between the room thermistor temperature and the target temperature

Additional Control Parameters

The target frequency is adapted by additional parameters in the following cases:

- Frequency restrictions
- Initial settings
- Forced cooling operation


Inverter Principle

To regulate the capacity, a frequency control is needed. The inverter makes it possible to vary the rotation speed of the compressor. The following table explains the conversion principle:

Phase	Description
1	The supplied AC power source is converted into the DC power source for the present.
2	The DC power source is reconverted into the three phase AC power source with variable frequency. <ul style="list-style-type: none"> ■ When the frequency increases, the rotation speed of the compressor increases resulting in an increased refrigerant circulation. This leads to a higher amount of the heat exchange per unit. ■ When the frequency decreases, the rotation speed of the compressor decreases resulting in a decreased refrigerant circulation. This leads to a lower amount of the heat exchange per unit.

Drawing of Inverter

The following drawing shows a schematic view of the inverter principle:

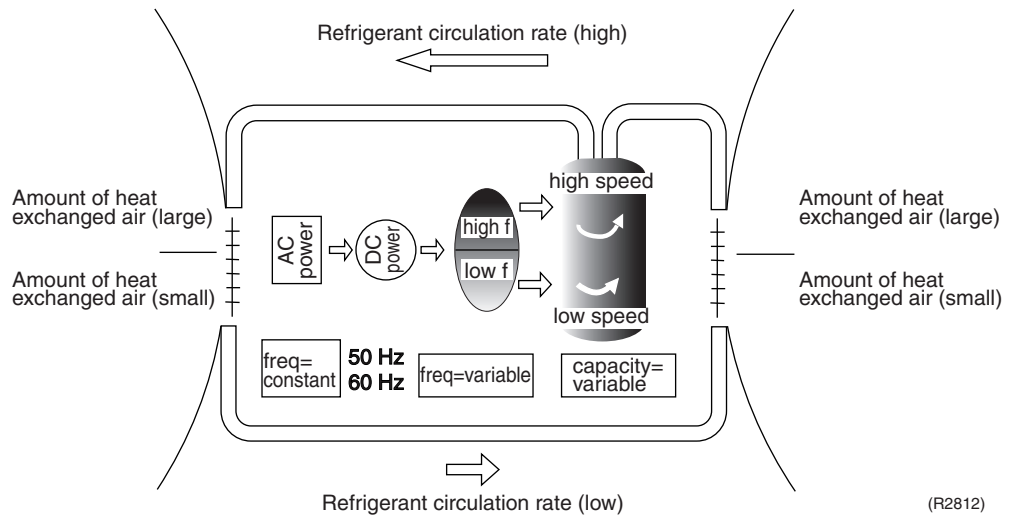

Inverter Features

The inverter provides the following features:

- The regulating capacity can be changed according to the changes in the outdoor temperature and cooling / heating load.
- Quick heating and quick cooling
The compressor rotational speed is increased when starting the heating (or cooling). This enables to reach the set temperature quickly.
- Even during extreme cold weather, the high capacity is achieved. It is maintained even when the outdoor temperature is 2°C.
- Comfortable air conditioning
A fine adjustment is integrated to keep the room temperature constant.
- Energy saving heating and cooling
Once the set temperature is reached, the energy saving operation enables to maintain the room temperature at low power.

Frequency Limits

The following functions regulate the minimum and maximum frequency:

Frequency	Functions
Low	<ul style="list-style-type: none"> ■ Four way valve operation compensation. Refer to page 78.
High	<ul style="list-style-type: none"> ■ Compressor protection function. Refer to page 79. ■ Discharge pipe temperature control. Refer to page 79. ■ Input current control. Refer to page 80. ■ Freeze-up protection control. Refer to page 80. ■ Heating peak-cut control. Refer to page 81. ■ Defrost control. Refer to page 82.

Forced Cooling Operation

Refer to "Forced operation mode" on page 274 for detail.


1.3 Operation Starting Control

Wall Mounted Type E-Series, J-Series


The system carries out the following control at the beginning to conduct every functional parts properly.

1. Opening the front panel fully
2. Output of the ΔD signal after the front panel starts moving
3. Opening the flap fully after the front panel opens fully
4. Making the fan rotate when the flap passes over the fan-banned area

Control Flow

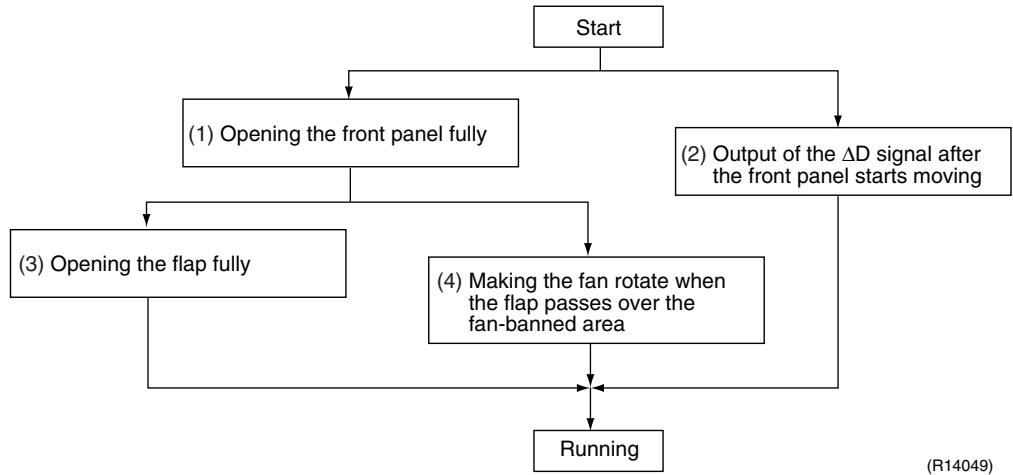

Timing Chart

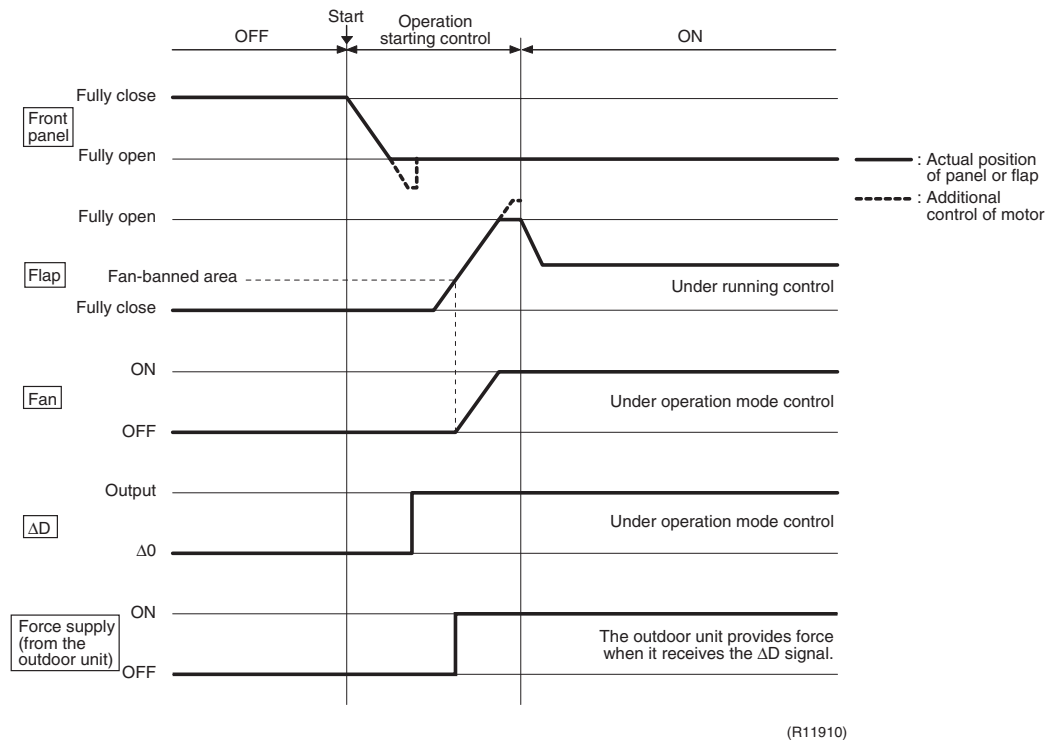

1.4 Airflow Direction Control

Power-Airflow Dual Flaps

The large flaps send a large volume of air downwards to the floor. The flap provides an optimum control in cooling, dry, and heating mode.

Cooling / Dry Mode

During cooling or dry mode, the flap retracts into the indoor unit. Then, cool air can be blown far and pervaded all over the room.

Heating Mode

During heating mode, the large flap directs airflow downwards to spread the warm air to the entire room.

Wide-Angle Louvers

The louvers, made of elastic synthetic resin, provide a wide range of airflow that guarantees a comfortable air distribution.

Auto-Swing

The following table explains the auto-swing process for cooling, dry, heating, and fan:





Wall Mounted Type

Series	Vertical Swing (up and down)			Horizontal Swing (right and left)
	Cooling / Dry	Heating	Fan	
E-Series	 (R3294)	 (R3293)	 (R3295)	 (R3296)
J-Series	 (R11662)	 (R11664)	 (R11663)	—
G-Series	 (R12182)	 (R11402)	 (R11403)	 (R11404)

Floor Standing Type

	Vertical Swing (up and down)	
	Cooling / Dry	Heating
Upward airflow limit OFF	 (R6831)	 (R6829)
Upward airflow limit ON	 (R6832)	 (R6830)

Floor / Ceiling Suspended Dual Type

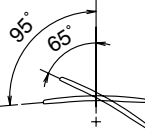	Vertical Swing (up and down)	
	Cooling / Dry / Fan	Heating
Ceiling	 (R2964)	 (R2963)
Floor	 (R2967)	 (R2966)


3-D Airflow

Wall Mounted Type G-Series

Alternative repetition of vertical and horizontal swing motions enables uniform air-conditioning of the entire room. This function is effective for starting the air conditioner.

When the horizontal swing and vertical swing are both set to auto mode, the airflow becomes 3-D airflow. The horizontal and vertical swing motions are alternated and the airflow direction changes in the order shown in the following diagram.



- (1): The vertical blades (louvers) move from the right to the left.
- (2): The horizontal blades (flaps) move downward.
- (3): The vertical blades (louvers) move from the left to the right.
- (4): The horizontal blades (flaps) move upward.

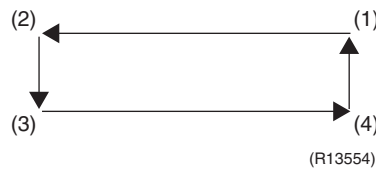

COMFORT AIRFLOW Operation

Wall Mounted Type

The vertical swing flap is controlled not to blow the air directly on the person in the room.

Cooling / Dry	Heating
 (R11665)	 (R12181)

	A	B
E-Series	5°	80°
J-Series	5°	75°
G-Series	5°	80°

1.5 Fan Speed Control for Indoor Units

Outline

Phase control and fan speed control contains 9 steps: LLL, LL, SL, L, ML, M, MH, H, and HH. The airflow rate can be automatically controlled depending on the difference between the room thermistor temperature and the target temperature. This is done through phase control and Hall IC control.



For more information about Hall IC, refer to the troubleshooting for fan motor on page 197, 198.

Automatic Fan Speed Control

In automatic fan speed operation, the step "SL" is not available.


Step	Wall Mounted Type Floor Standing Type		Floor / Ceiling Suspended Dual Type Duct Connected Type	
	Cooling	Heating	Cooling	Heating
LLL	↕ (R11681)	↕ (R6834)	↕ (R6833)	↕ (R6834)
LL				
L				
ML				
M				
MH				
H				
HH (POWERFUL)				

↕ = The airflow rate is automatically controlled within this range when the FAN setting button is set to automatic.

<Cooling>

The following drawing explains the principle of fan speed control for cooling.


Wall Mounted Type, Floor Standing Type

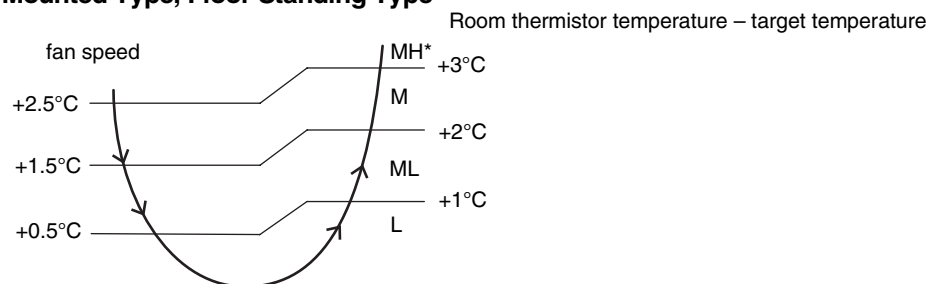

(R12317)

*In automatic fan speed operation, upper limit is at M tap in 30 minutes from the operation start.

Floor / Ceiling Suspended Dual Type, Duct Connected Type

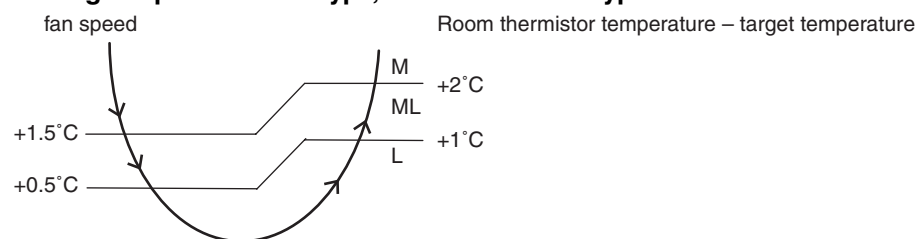

(R12390)

<Heating>

On heating mode, the fan speed is regulated according to the indoor heat exchanger temperature and the difference between the room thermistor temperature and the target temperature.



Note:

1. During POWERFUL operation, fan rotates at H tap + 40 ~ 50 rpm.
2. Fan stops during defrost operation.

**COMFORT
AIRFLOW
Operation**

Wall Mounted Type

- The fan speed is controlled automatically within the following steps.
Cooling: L tap – MH tap (same as AUTOMATIC)
Heating: ML tap – M tap ~ MH tap (depending on the model)
- The latest command has the priority between POWERFUL and COMFORT AIRFLOW.

1.6 Program Dry Operation


Outline

Program dry operation removes humidity while preventing the room temperature from lowering. Since the microcomputer controls both the temperature and airflow rate, the temperature adjustment and fan adjustment buttons are inoperable in this mode.

Detail

The microcomputer automatically sets the temperature and airflow rate. The difference between the room thermistor temperature at start-up and the target temperature is divided into two zones. Then, the unit operates in the dry mode with an appropriate capacity for each zone to maintain the temperature and humidity at a comfortable level.

Room thermistor temperature at start-up	Target temperature X	Thermostat OFF point Y	Thermostat ON point Z
24°C or more	Room thermistor temperature at start-up	X – 2.5°C	X – 0.5°C or Y + 0.5°C (zone B) continues for 10 min.
23.5°C ∴ 18°C		X – 2.0°C	X – 0.5°C or Y + 0.5°C (zone B) continues for 10 min.
17.5°C ∴		18°C	X – 2.0°C

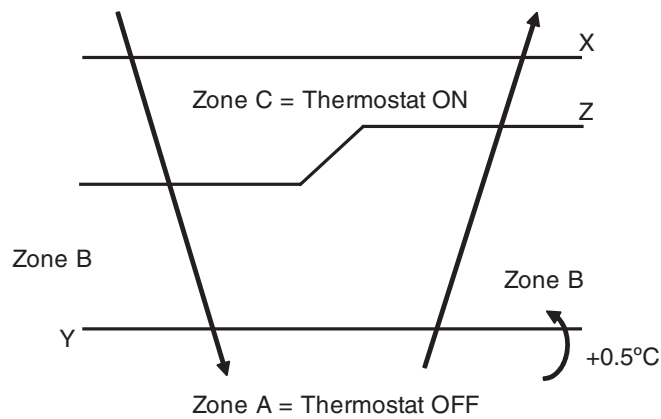

(R11581)

1.7 Automatic Operation

Outline

Automatic Cooling / Heating Function

When the AUTO mode is selected with the remote controller, the microcomputer automatically determines the operation mode as cooling or heating according to the room temperature and the set temperature at start-up, and automatically operates in that mode.

The unit automatically switches the operation mode to maintain the room temperature at the set temperature.

Detail

Ts: set temperature (set by remote controller)


Tt: target temperature (determined by microcomputer)

Tr: room thermistor temperature (detected by room temperature thermistor)

C: correction value

- The set temperature (Ts) determines the target temperature (Tt).
(Ts = 18 ~ 30°C).
- The target temperature (Tt) is calculated as;
 $Tt = Ts + C$
where C is the correction value.
C = 0°C
- Thermostat ON/OFF point and mode switching point are as follows.
Tr means the room thermistor temperature.
 - Heating → Cooling switching point:
 $Tr \geq Tt + 3.0^\circ\text{C}$ (wall mounted type J-series)
 $Tr \geq Tt + 2.5^\circ\text{C}$ (other models)
 - Cooling → Heating switching point:
 $Tr < Tt - 2.5^\circ\text{C}$
 - Thermostat ON/OFF point is the same as the ON/OFF point of cooling or heating operation.
- During initial operation
 $Tr \geq Ts$: Cooling operation
 $Tr < Ts$: Heating operation

◆ Wall Mounted Type J-Series

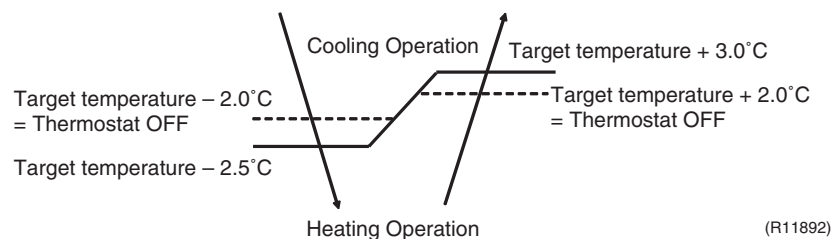


Ex: When the target temperature is 25°C

Cooling → 23°C: Thermostat OFF → 22°C: Switch to heating

Heating → 27°C: Thermostat OFF → 28°C: Switch to cooling

◆ Other Models

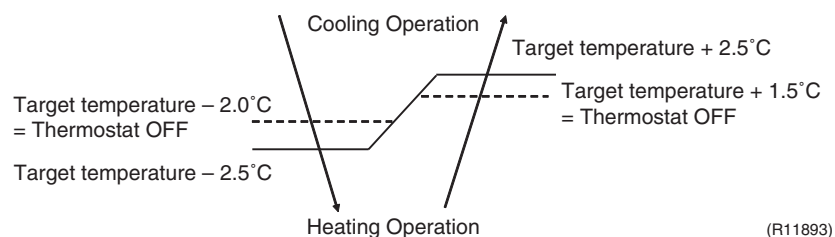

Ex: When the target temperature is 25°C

Cooling → 23°C: Thermostat OFF → 22°C: Switch to heating

Heating → 26.5°C: Thermostat OFF → 27.5°C: Switch to cooling

1.8 Thermostat Control

Thermostat control is based on the difference between the room thermistor temperature and the target temperature.

Thermostat OFF Condition


- ◆ The temperature difference is in the zone A.

Thermostat ON Condition


- ◆ The temperature difference returns to the zone C after being in the zone A.
- ◆ The system resumes from defrost control in any zones except A.
- ◆ The operation turns on in any zones except A.
- ◆ The monitoring time has passed while the temperature difference is in the zone B.
(Cooling / Dry : 10 minutes, Heating : 10 seconds)

Cooling / Dry

- ◆ Wall Mounted Type
- ◆ Floor Standing Type

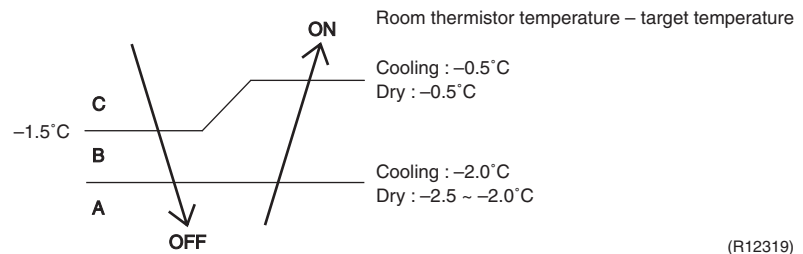


- ◆ Floor / Ceiling Suspended Dual Type
- ◆ Duct Connected Type

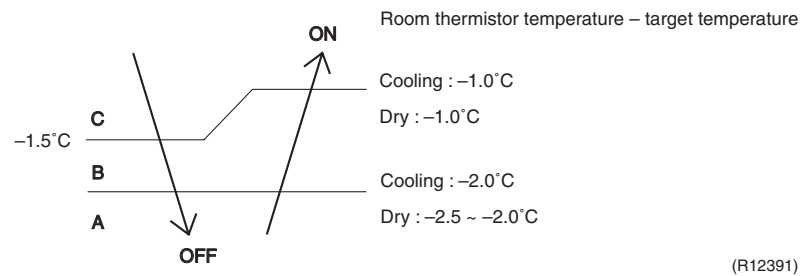


Heating


- ◆ Wall Mounted Type J-Series

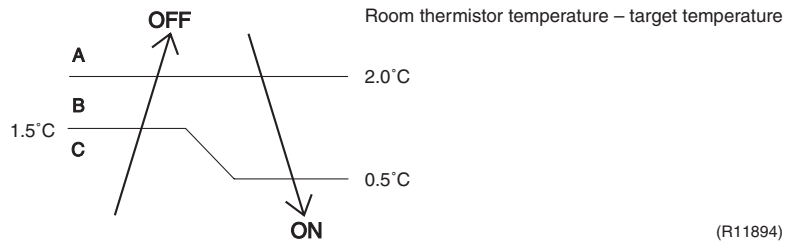

- ◆ Wall Mounted Type E-Series, G-Series
- ◆ Floor Standing Type

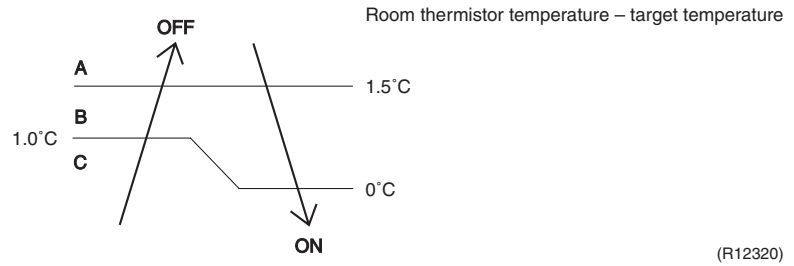

- ◆ Floor / Ceiling Suspended Dual Type
- ◆ Duct Connected Type

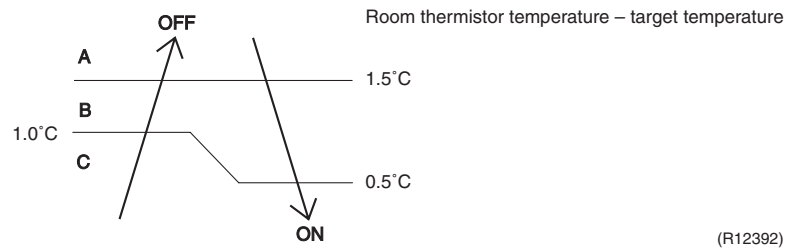

Refer to “Temperature Control” on page 51 for detail.


1.9 NIGHT SET Mode

Outline When the OFF timer is set, the NIGHT SET Mode is automatically activated. The NIGHT SET Mode keeps the airflow rate setting.

Detail The NIGHT SET Mode continues operation at the target temperature for the first one hour, then automatically raises the target temperature slightly in the case of cooling, or lowers it slightly in the case of heating. This prevents excessive cooling in summer and excessive heating in winter to ensure comfortable sleeping conditions, and also conserves electricity.


Cooling

- ◆ Wall Mounted Type
- ◆ Floor Standing Type

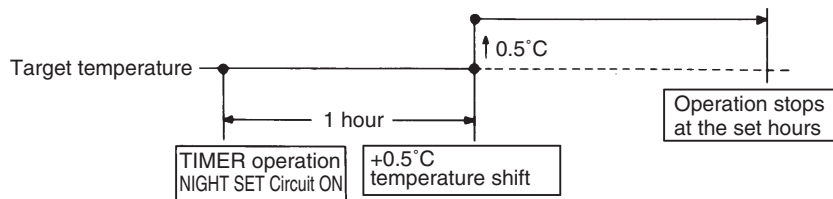

(R10870)


- ◆ Floor / Ceiling Suspended Dual Type
- ◆ Duct Connected Type

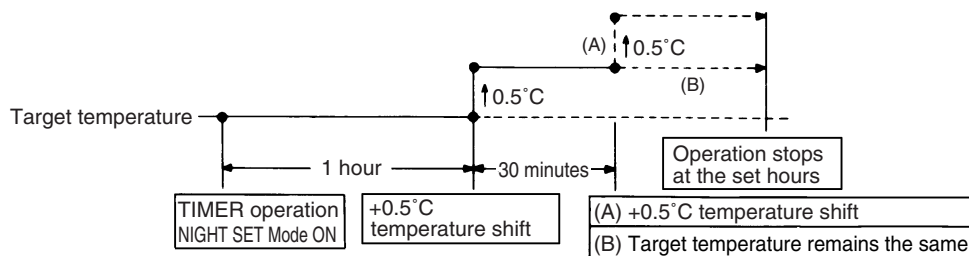

- (A) : ● When the outdoor temperature is normal and the room temperature is at the set temperature.
- (B) : ● When the outdoor temperature is high (27°C or higher).

(R14060)

Heating

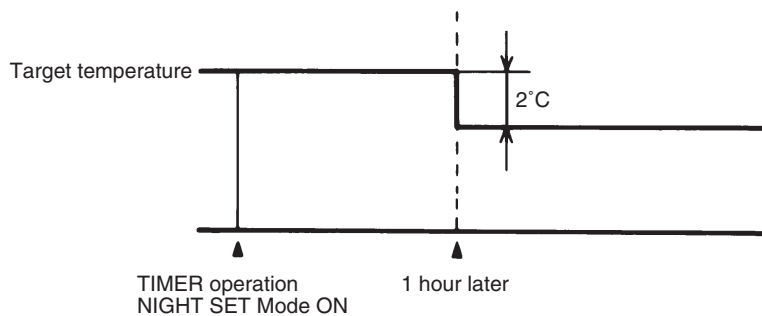

(R10871)


1.10 ECONO Operation

The "ECONO operation" reduces the maximum operating current and power consumption during start-up etc..

This operation is particularly convenient for energy-saving-oriented users. It is also a major bonus for those whose breaker capacities do not allow the use of multiple electrical devices and air conditioners.

It is easily activated from the wireless remote controller by pushing the ECONO button.

- When this function is activated, the maximum capacity decreases.
- The remote controller can send the ECONO command when the unit is in cooling, heating, dry, or automatic operation. This function can only be set when the unit is running. Pressing the ON/OFF button on the remote controller cancels the function.
- This function and POWERFUL operation cannot be used at the same time. The latest command has the priority.

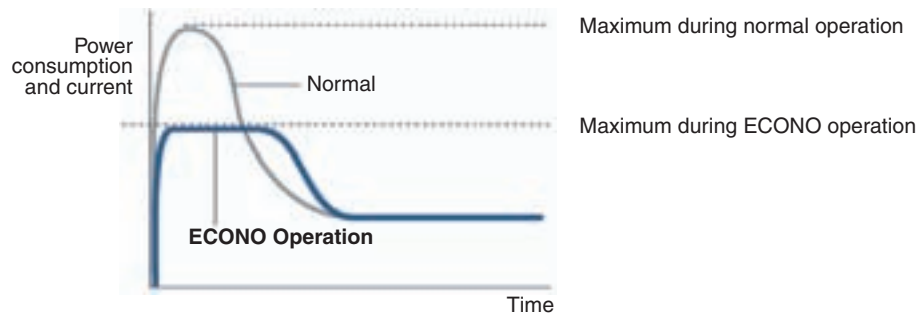

(R9288)

- When the ECONO command is valid, the input current is under reducing control.

1.11 HOME LEAVE Operation

Outline

HOME LEAVE operation is a function that allows you to record your favorite set temperature and airflow rate. You can start your favorite operation mode simply by pressing the [HOME LEAVE] button on the remote controller.

Detail

1. Start of Function

The function starts when the [HOME LEAVE] button is pressed in cooling mode, heating mode (including POWERFUL operation), or while the operation is stopped. If this button is pressed in POWERFUL operation, the POWERFUL operation is canceled and this function becomes effective.

- The [HOME LEAVE] button is ineffective in dry mode and fan mode.

2. Details of Function

A mark representing HOME LEAVE is indicated on the display of the remote controller. The indoor unit is operated according to the set temperature and airflow rate for HOME LEAVE which were pre-set in the memory of the remote controller.

The LED (red) of indoor unit representing HOME LEAVE lights up. (It goes out when the operation is stopped.)

3. End of Function

The function ends when the [HOME LEAVE] button is pressed again during HOME LEAVE operation or when the [POWERFUL] button is pressed.

<Cooling>



“HOME LEAVE operation”
set temp.



<Heating>



“HOME LEAVE operation”
set temp.



Others

The set temperature and airflow rate are memorized in the remote controller. When the remote controller is reset due to replacement of battery, it is necessary to set the temperature and airflow rate again for HOME LEAVE operation.

1.12 2-Area INTELLIGENT EYE Operation

Outline


Wall Mounted Type G-Series

The following functions can be performed by a motion sensor (INTELLIGENT EYE).


1. Reduction of the capacity when there is nobody in the room in order to save electricity (energy saving operation)
2. Dividing the room into plural areas and detecting existence of humans in each area.
Moving the airflow direction to the area with no human automatically to avoid direct airflow on humans.

Detail

1. Detection method of INTELLIGENT EYE

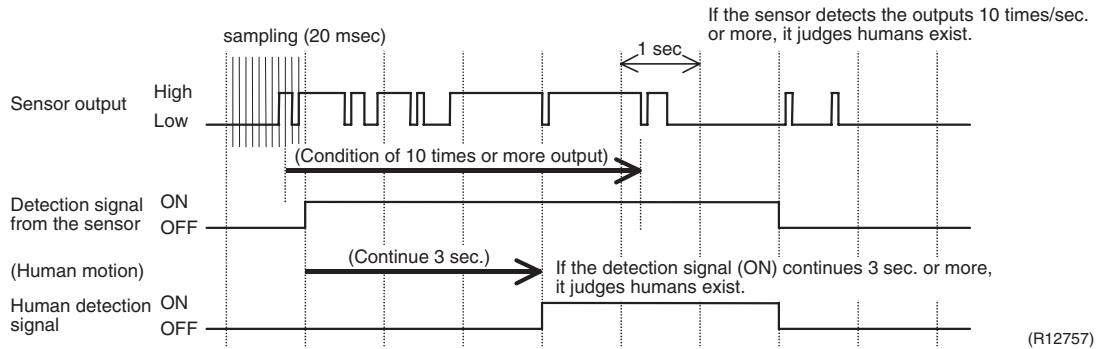


- This sensor detects human motion by receiving infrared rays and displays the pulse wave output.
- The microcomputer in the indoor unit carries out a sampling every 20 msec. and if it detects 10 cycles of the wave in one second in total (corresponding to $20 \text{ msec.} \times 10 = 200 \text{ msec.}$), and when the ON signal continues 3 sec., it judges human is in the room as the motion signal is ON
- 2-area INTELLIGENT EYE sensor is divided into 2 areas and detects humans in each area.
- Image of 2-area INTELLIGENT EYE

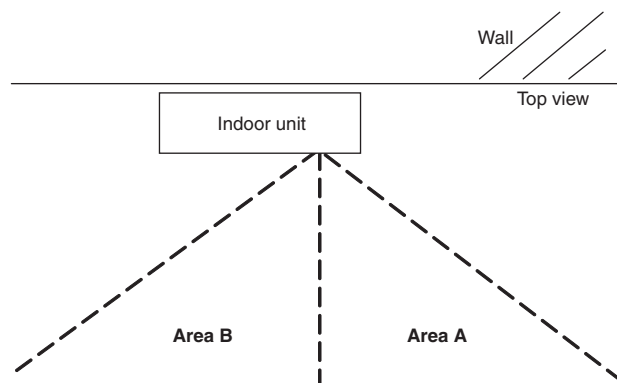

A microcomputer judges human existence by the sensor signal from each area A and B.

(R12276)

2. Motions (for example: in cooling)

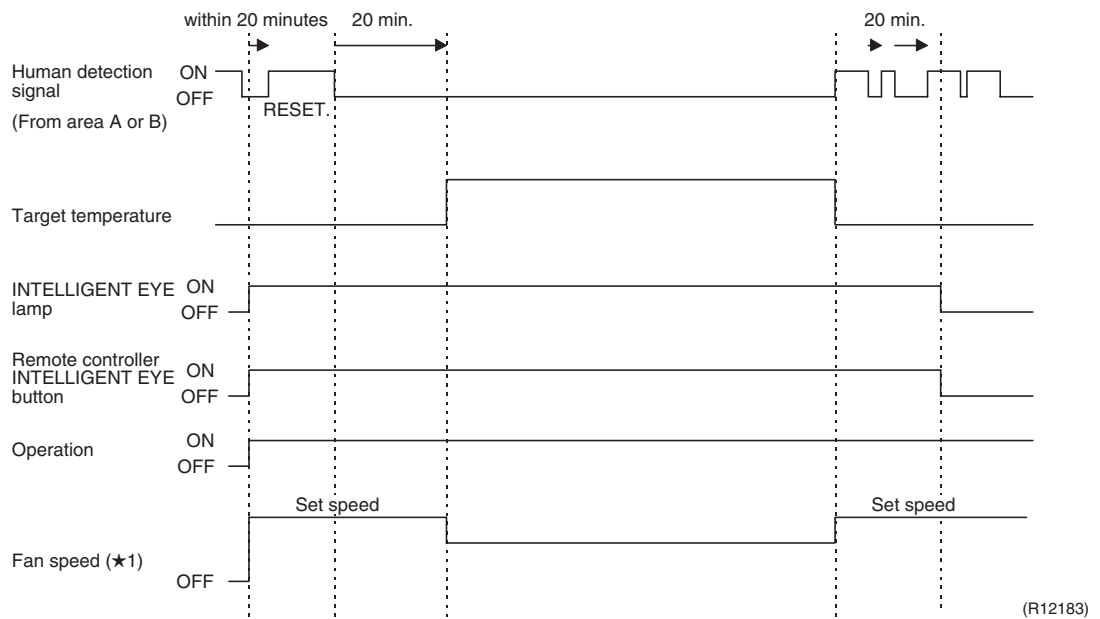


- When the microcomputer does not have a signal from the sensor in 20 minutes, it judges that nobody is in the room and operates the unit in temperature shifted from the target temperature. (Cooling / Dry : 2°C higher, Heating : 2°C lower, Auto : according to the operation mode at that time.)

★1 In case of FAN mode, the fan speed reduces by 60 rpm.

3. Airflow direction in 2-area INTELLIGENT EYE operation

- Detection method: The opposite area of detected area is set as the target direction.

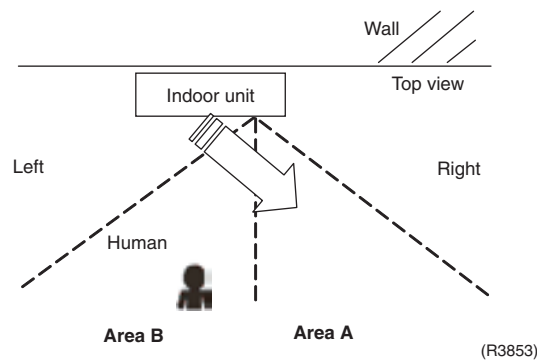

1. Detection signal ON in both area A and B: Shift the airflow direction to area B (left side)
2. Detection signal ON in area A: Shift the airflow direction to area B (left side)
3. Detection signal ON in area B: Shift the airflow direction to area A (right side)
4. Detection signal OFF in both area A and B: No change

* When the detection signal is OFF for 20 minutes in both area A and B, the unit starts energy saving operation.

Others

- For dry operation, you cannot set the temperature with remote controller, but internally the target temperature is shifted by 2°C.

1.13 INTELLIGENT EYE Operation


Outline

Wall Mounted Type E-Series, J-Series

This is the function that detects existence of humans in the room by a human motion sensor (INTELLIGENT EYE) and reduces the capacity when there is nobody in the room in order to save electricity.


Detail

1. Detection method by INTELLIGENT EYE

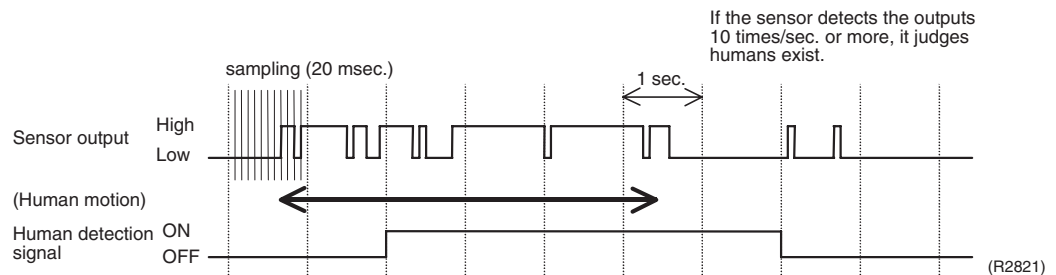

- This sensor detects human motion by receiving infrared rays and displays the pulse wave output.
- A microcomputer in an indoor unit carries out a sampling every 20 msec. and if it detects 10 cycles of the wave in one second in total (corresponding to $20 \text{ msec.} \times 10 = 200 \text{ msec.}$), it judges human is in the room as the motion signal is ON.

2. The motions (for example: in cooling)

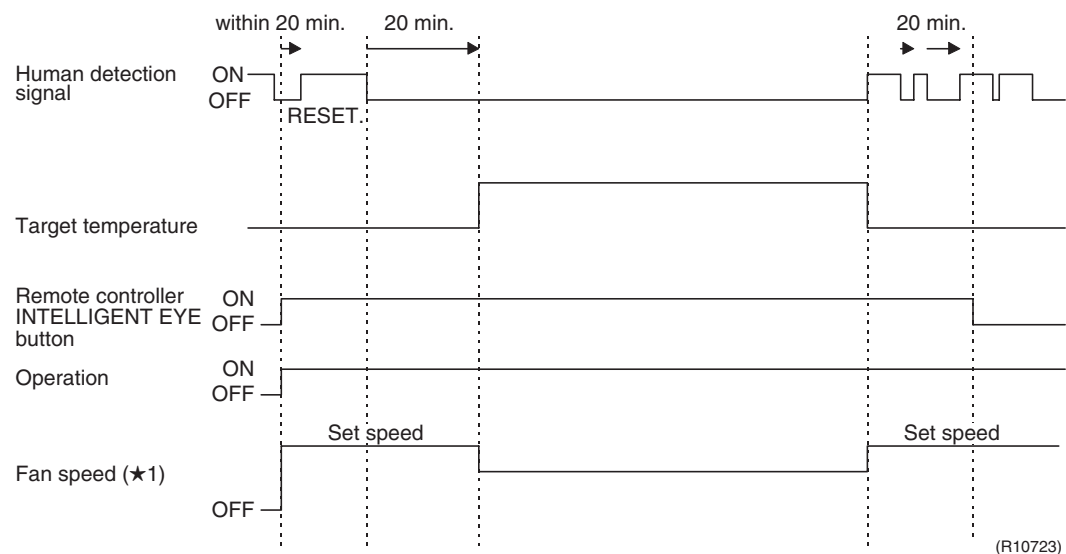

- When a microcomputer does not have a signal from the sensor in 20 minutes, it judges that nobody is in the room and operates the unit in temperature shifted from the target temperature. (Cooling / Dry : 2°C higher, Heating : 2°C lower, Auto : according to the operation mode at that time.)

★1 In case of FAN mode, the fan speed reduces by 60 rpm.

Others

- For dry operation, you cannot set the temperature with a remote controller, but internally the target temperature is shifted by 2°C.

1.14 Inverter POWERFUL Operation

Outline

In order to exploit the cooling and heating capacity to full extent, operate the air conditioner by increasing the indoor fan rotating speed and the compressor frequency.


Detail

When POWERFUL button is pressed, the fan speed and target temperature are converted to the following states for 20 minutes.

Operation mode	Fan speed	Target temperature
COOL	H tap + A rpm	18°C
DRY	Dry rotating speed + A rpm	Lowered by 2 ~ 2.5°C
HEAT	H tap + A rpm	30 ~ 32°C
FAN	H tap + A rpm	—
AUTO	Same as cooling / heating in POWERFUL operation	The target temperature is kept unchanged.

A = 40 ~ 50 rpm (depending on the model)

Ex.) : POWERFUL operation in cooling mode.

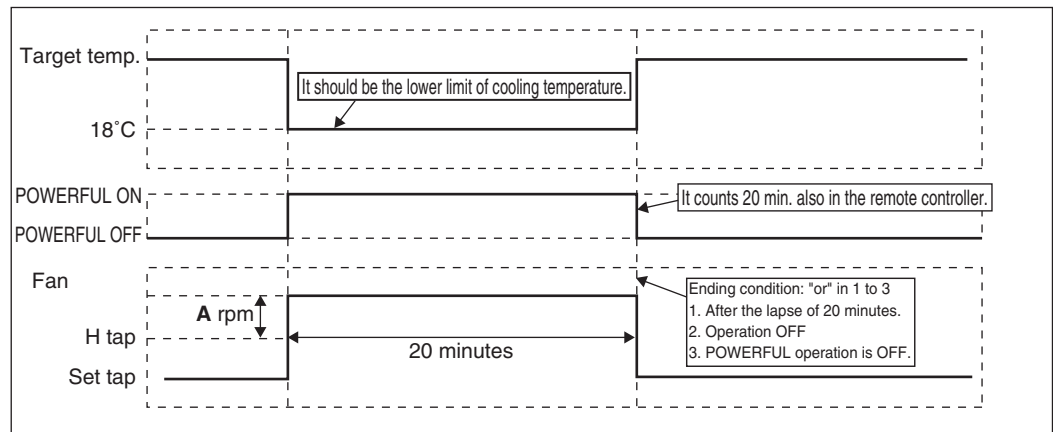


(R14061)

1.14.1 Multi-Colored Indicator Lamp / TIMER Lamp

Features

Wall Mounted Type J-Series

Current operation mode is displayed in color of the lamp of the indoor unit. Operating status can be monitored even in automatic operation in accordance with the mode of actual operation.

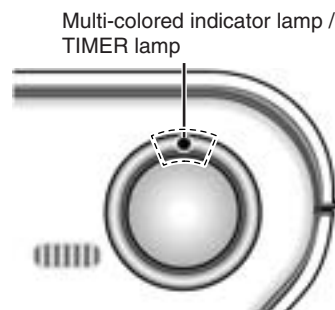

(R11815)


The lamp color changes according to the operation.

- * AUTO Red / Blue
- * DRY Green
- * COOL Blue
- * HEAT Red
- * FAN White
- * TIMER Orange


Brightness Setting

The brightness of the multi-colored indicator lamp can be adjusted L (low), H (high), or OFF.


1. Press the center of the Temp button and the Mode button at the same time.

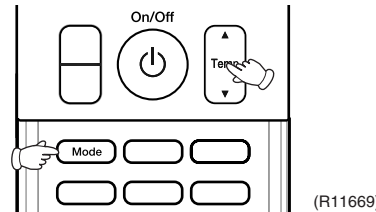


“5℃” is displayed on the LCD.

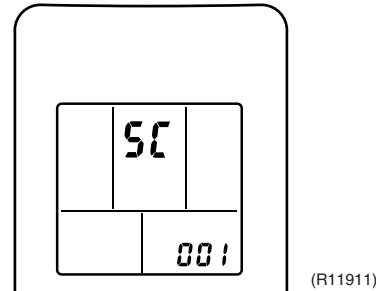

2. Select “L” (light) with the Temp ▲ or ▼ button.

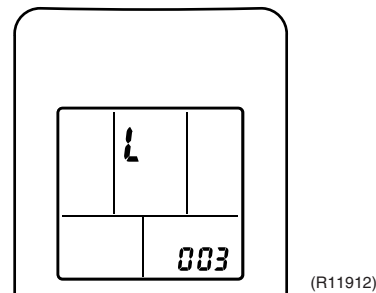

3. Press the Mode button to enter the brightness setting mode.
4. Press the Temp ▲ or ▼ button to adjust the brightness of the multi-colored indicator lamp.

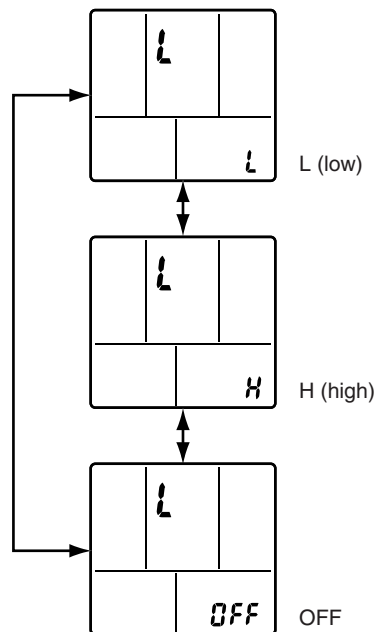

5. Press the Mode button for 5 seconds to exit from the brightness setting mode.
(When the remote controller is left untouched for 60 seconds, it returns to the normal mode also.)

1.15 Other Functions

1.15.1 Hot-Start Function

In order to prevent the cold air blast that normally comes when heating operation is started, the temperature of the indoor heat exchanger is detected, and either the airflow is stopped or is made very weak thereby carrying out comfortable heating of the room.

*The cold air blast is also prevented using a similar control when the defrosting operation is started or when the thermostat is turned ON.

1.15.2 Signal Receiving Sign

When the indoor unit receives a signal from the remote controller, the unit emits a signal receiving sound.

1.15.3 Indoor Unit ON/OFF Button


An ON/OFF button is provided on the display of the unit.

- Press this button once to start operation. Press once again to stop it.
- This button is useful when the remote controller is missing or the battery has run out.
- The operation mode refers to the following table.

	Mode	Temperature setting	Airflow rate
Cooling Only	COOL	22°C	Automatic
Heat Pump	AUTO	25°C	Automatic

- In the case of multi system operation, there are times when the unit does not activate with this button.

ex. Wall mounted type G-series

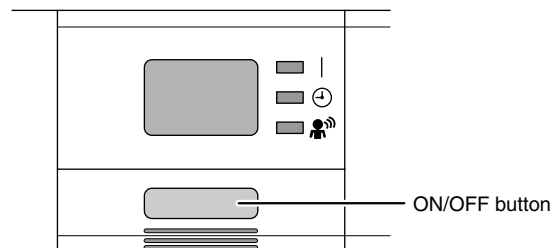

(R8302)

<Forced operation mode>

Forced operation mode can be started by pressing the ON/OFF button for 5 to 9 seconds while the unit is not operating.

Refer to "Forced operation mode" on page 274 for detail.



Note: When the ON/OFF button is pressed for 10 seconds or more, the forced operation is stopped.

1.15.4 Titanium Apatite Photocatalytic Air-Purifying Filter

This filter combines the Air-Purifying Filter and Titanium Apatite Photocatalytic Deodorizing Filter as a single highly effective filter. The filter traps microscopic particles, decompose odors and even deactivates bacteria and viruses. It lasts for 3 years without replacement if washed about once every 6 months.

1.15.5 Photocatalytic Deodorizing Filter

The photocatalytic deodorizing filter powerfully decomposes odor of tobacco, pet, etc. The deodorizing power is regenerated simply by being exposed to the sunshine. It is recommended to dry the filter in the sun for about 6 hours (after vacuuming the filter) every 6 months.

1.15.6 Air-Purifying Filter

The air-purifying filter collects tobacco smoke, pollen, etc. with electrostatic agency.

This filter includes a deodorizing active carbon filter that removes minute particles of odor.

Replace the air-purifying filter every 3 months.

1.15.7 Auto-restart Function

Even if a power failure (including one for just a moment) occurs during the operation, the operation restarts automatically when the power is restored in the same condition as before the power failure.



Note: It takes 3 minutes to restart the operation because the 3-minute standby function is activated.

1.15.8 WEEKLY TIMER Operation

Up to 4 timer settings can be saved for each day of the week (up to 28 settings in total). Those 3 items of “ON/OFF”, “temperature” and “time” can be set.




Refer to “WEEKLY TIMER Operation” on the following pages for detail.

Wall mounted type J-series: page 108

Wall mounted type G-series, Floor standing type: page 135

2. Function of Thermistor

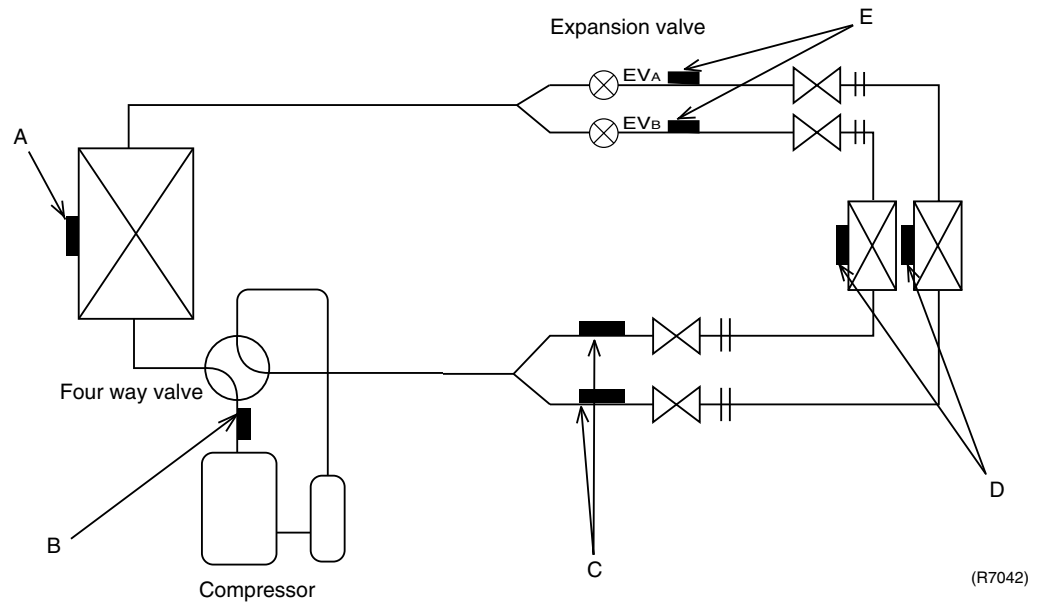

A Outdoor Heat Exchanger Thermistor

1. The outdoor heat exchanger thermistor is used for controlling target discharge pipe temperature. The system sets the target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge pipe temperature can be obtained.
2. In cooling operation, the outdoor heat exchanger thermistor is used for detecting disconnection of the discharge pipe thermistor. When the discharge pipe temperature becomes lower than the outdoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
3. In cooling operation, the outdoor heat exchanger thermistor is used for high pressure protection.

B Discharge Pipe Thermistor

1. The discharge pipe thermistor is used for controlling discharge pipe temperature. If the discharge pipe temperature (used in place of the inner temperature of the compressor) rises abnormally, the operating frequency becomes lower or the operation halts.
2. The discharge pipe thermistor is used for detecting disconnection of the discharge pipe thermistor.

C Gas Pipe Thermistor

1. In cooling operation, the gas pipe thermistor is used for gas pipe isothermal control. The system controls electronic expansion valve opening so that the gas pipe temperature in each room becomes equal.

D Indoor Heat Exchanger Thermistor

1. The indoor heat exchanger thermistor is used for controlling target discharge pipe temperature. The system sets the target discharge pipe temperature according to the outdoor and indoor heat exchanger temperature, and controls the electronic expansion valve opening so that the target discharge pipe temperature can be obtained.
2. In cooling operation, the indoor heat exchanger thermistor is used for freeze-up protection control. If the indoor heat exchanger temperature drops abnormally, the operating frequency becomes lower or the operation halts.
3. In cooling operation, the indoor heat exchanger thermistor is used for anti-icing function. If any of the following conditions are met in the room where operation halts, it is assumed as icing.
The conditions are
 $T_c \leq -1^\circ \text{C}$
 $T_a - T_c \geq 10^\circ \text{C}$
where T_a is the room thermistor temperature and T_c is the indoor heat exchanger temperature.
4. In heating operation, the indoor heat exchanger thermistor is used for heating peak-cut control. If the indoor heat exchanger temperature rises abnormally, the operating frequency becomes lower or the operation halts.
5. In heating operation, the indoor heat exchanger thermistor is used for detecting disconnection of the discharge pipe thermistor. When the discharge pipe temperature becomes lower than the maximum indoor heat exchanger temperature, the discharge pipe thermistor is judged as disconnected.
6. When only one indoor unit is operating, the indoor heat exchanger thermistor is used for supercooling control. The actual supercool is calculated with the liquid pipe temperature and the indoor heat exchanger temperature. The system controls the electronic expansion valve openings to obtain the target supercool.

E Liquid Pipe Thermistor

1. When only one indoor unit is in heating, the liquid pipe thermistor is used for supercooling control. The actual supercool is calculated with the liquid pipe temperature and the maximum indoor heat exchanger temperature. The system controls the electronic expansion valve openings to obtain the target supercool.
2. In heating operation, the liquid pipe thermistor is used for liquid pipes isothermal control. The system controls electronic expansion valve opening so that the liquid pipe temperatures in each room becomes equal.

3. Control Specification

3.1 Mode Hierarchy


Outline

There are two modes; the one is the normal operation mode and the other is the forced operation mode for installation and providing service.

Detail

Cooling only model


There are following models; stop and cooling (includes drying).

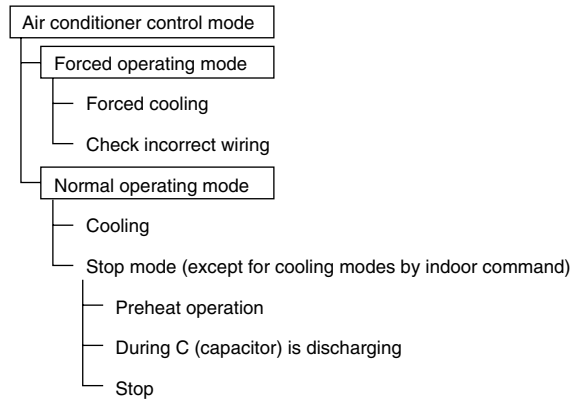

(R1374)

Heat Pump Model

There are following modes; stop, cooling (includes drying), heating (includes defrosting)

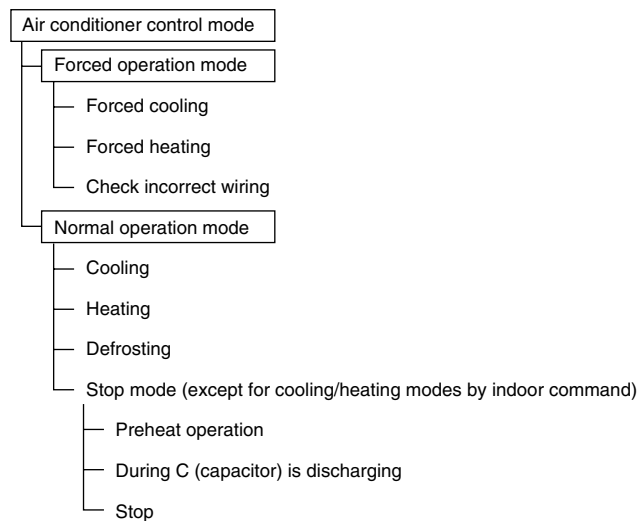

(R1373)



Note:

Unless specified otherwise, dry operation command is regarded as cooling operation. An indoor fan operation cannot be made in a multiple indoor unit. (A forced fan command to the indoor unit from the outdoor unit is made during forced operation.)

Determine Operation Mode

The system judges the operation mode command which is set by each room in accordance with the procedure, and determines the operation mode of the system.

The following procedure is taken when the modes conflict with each other.

*1. The system follows the mode which is set first. (First-push, first-set)

*2. For the rooms where the different mode is set, standby mode is activated. (The operation lamp blinks.)

Command from the first room	Command from the second room	Operation of the first room	Operation of the second room
Cooling	Heating	Cooling	Standby
Cooling	Fan	Cooling	Fan
Heating	Cooling	Heating	Standby
Heating	Fan	Heating	Standby
Fan	Cooling	Fan	Cooling
Fan	Heating	Standby	Heating

3.2 Frequency Control


Outline

Frequency that corresponds to each room's capacity is determined according to the difference between the target temperature and the temperature of each room.

The function is explained as follows.

1. How to determine frequency
2. Frequency command from an indoor unit (Difference between a room thermistor temperature and the target temperature)
3. Frequency command from an indoor unit (The ranked capacity of the operating room)
4. Frequency initial setting
5. PI control

When the shift of the frequency is less than zero ($\Delta F < 0$) by PI control, the target frequency is used as the command frequency.

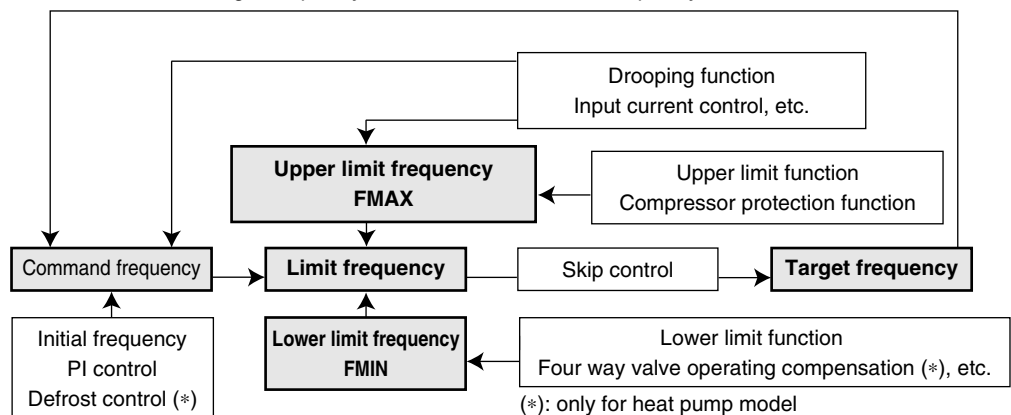

(R11592)

Detail

How to Determine Frequency

The compressor's frequency is determined by taking the following steps.

For Cooling Only Model

1. Determine command frequency

- ◆ Command frequency is determined in the following order of priority.
 1. Forced cooling
 2. Indoor frequency command

2. Determine upper limit frequency

- ◆ The minimum value is set as the upper limit frequency among the frequency upper limits of the following functions:
Compressor protection, input current, discharge pipe temperature, low Hz high pressure limit, freeze-up protection.

3. Determine lower limit frequency

- ◆ The maximum value is set as the lower limit frequency among the frequency lower limits of the following functions:
Draft prevention, pressure difference upkeep.

4. Determine prohibited frequency

- ◆ There is a certain prohibited frequency such as a power supply frequency.

For Heat Pump Model**1. Determine command frequency**

- ◆ Command frequency is determined in the following order of priority.
 1. Limiting defrost control time
 2. Forced cooling / heating
 3. Indoor frequency command

2. Determine upper limit frequency

- ◆ The minimum value is set as the upper limit frequency among the frequency upper limits of the following functions:
Compressor protection, input current, discharge pipe temperature, low Hz high pressure limit, heating peak-cut, freeze-up protection, defrost.

3. Determine lower limit frequency

- ◆ The maximum value is set as the lower limit frequency among the frequency lower limits of the following functions:
Four way valve operation compensation, draft prevention, pressure difference upkeep.

4. Determine prohibited frequency

- ◆ There is a certain prohibited frequency such as a power supply frequency.

Indoor Frequency Command (ΔD signal)

The difference between a room thermistor temperature and the target temperature is taken as the " ΔD signal" and is used for frequency command.

Temperature difference (°C)	ΔD signal	Temperature difference (°C)	ΔD signal	Temperature difference (°C)	ΔD signal	Temperature difference (°C)	ΔD signal
-2.0	*Th OFF	0	4	2.0	8	4.0	C
-1.5	1	0.5	5	2.5	9	4.5	D
-1.0	2	1.0	6	3.0	A	5.0	E
-0.5	3	1.5	7	3.5	B	5.5	F

Values depend on the type of indoor unit.

*Th OFF = Thermostat OFF

Indoor Unit Capacity (S value)

The capacity of the indoor unit is a "S" value and is used for frequency command.

ex.)

Capacity	S value
2.5 kW	25
3.5 kW	35

Frequency Initial Setting**<Outline>**

When starting the compressor, or when conditions are varied due to the change of the operating room, the frequency must be initialized according to the total of a maximum ΔD value of each room and a total value of Q (ΣQ) of the operating room (the room in which the thermos is set to ON).

Q value: Indoor unit output determined from indoor unit volume, airflow rate and other factors.

PI Control (Determine Frequency Up / Down by ΔD Signal)**1. P control**

A total of the ΔD value is calculated in each sampling time (20 seconds), and the frequency is adjusted according to its difference from the frequency previously calculated.

2. I control

If the operating frequency is not change more than a certain fixed time, the frequency is adjusted according to the $\Sigma\Delta D$ value.

When the $\Sigma\Delta D$ value is small...lower the frequency.

When the $\Sigma\Delta D$ value is large...increase the frequency.

3. Limit of frequency variation width

When the difference between input current and input current drooping value is less than 1.5 A, the frequency increase width must be limited.

4. Frequency management when other controls are functioning

- ◆ When each frequency is drooping;
Frequency management is carried out only when the frequency droops.
- ◆ For limiting lower limit
Frequency management is carried out only when the frequency rises.

5. Upper and lower limit of frequency by PI control

The frequency upper and lower limits are set depending on the total of S values of a room. When low noise commands come from the indoor unit more than one room or when outdoor unit low noise or quiet commands come from all the rooms, the upper limit frequency must be lowered than the usual setting.

3.3 Controls at Mode Changing / Start-up

3.3.1 Preheating Operation

Outline The inverter operation in open phase starts with the conditions of the preheating command from the indoor, the outdoor temperature, and discharge pipe temperature.

Detail

ON Condition

- ◆ When outdoor temperature is below 10.5°C and discharge pipe temperature is below 10.5°C, the inverter operation in open phase starts.

OFF Condition

- ◆ When outdoor temperature is higher than 12°C or discharge pipe temperature is higher than 12°C, the inverter operation in open phase stops.

3.3.2 Four Way Valve Switching

Outline

In heating operation, current is conducted, and in cooling and defrosting, current is not conducted. In order to eliminate the switching sound when the heating is stopped, as the four way valve coil switches from ON to OFF, the OFF delay switch of the four way valve is carried out after the operation stopped.

Detail

OFF delay switch of four way valve:

The four way valve coil is energized for 150 seconds after the operation is stopped.

3.3.3 Four Way Valve Operation Compensation

Outline

At the beginning of the operation as the four way valve is switched, acquire the differential pressure to activate the four way valve by having output frequency which is more than a certain fixed frequency, for a certain fixed time.

Detail

Starting Conditions

1. When starting compressor for heating.
 2. When the operating mode changes from the previous time.
 3. When starting compressor for starting defrosting or resetting.
 4. When starting compressor for the first time after the reset with the power is ON.
 5. When starting compressor after operation halt by failing cooling/heating mode change-over.
- The lower limit frequency is set to **A** Hz for 60 seconds with any conditions with 1 through 5 above.


		40 class	50 class
A (Hz)	Cooling	56	40
	Heating	68	54

3.3.4 3-Minute Standby

Turning on the compressor is prohibited for 3 minutes after turning off.
(Except when defrosting.)

3.3.5 Compressor Protection Function

When turning the compressor from OFF to ON, the upper limit of frequency is set as follows. (The function is not used when defrosting.)

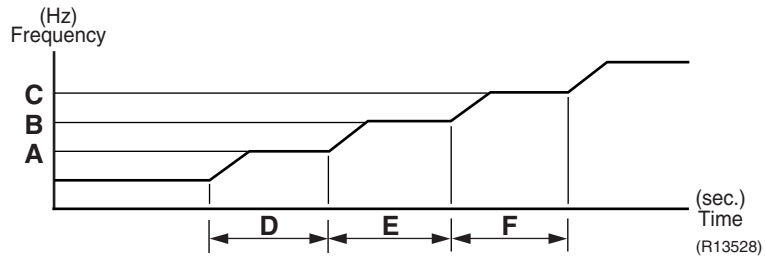


	40 class	50 class	Unit
A	62	55	Hz
B	72	70	
C	90	85	
D	140	150	seconds
E	180	180	
F	300	300	

3.4 Discharge Pipe Temperature Control

Outline

The discharge pipe temperature is used as the internal temperature of the compressor. If the discharge pipe temperature rises above a certain level, the upper limit of frequency is set to keep this temperature from going up further.

Detail

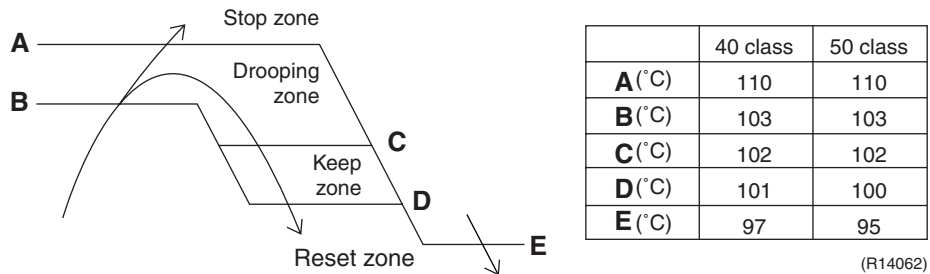


Zone	Control
Stop zone	When the temperature reaches the stop zone, the compressor stops.
Drooping zone	The timer starts, and the frequency is drooping.
Keep zone	The upper limit of frequency is kept.
Reset zone	The upper limit of frequency is canceled.

3.5 Input Current Control

Outline

An input current is detected by the CT during the compressor is running, and the frequency upper limit is set from the input current.
In case of heat pump model, this control, which is the upper limit control of the frequency, takes priority to the lower limit control of four way valve operation compensation.

Detail

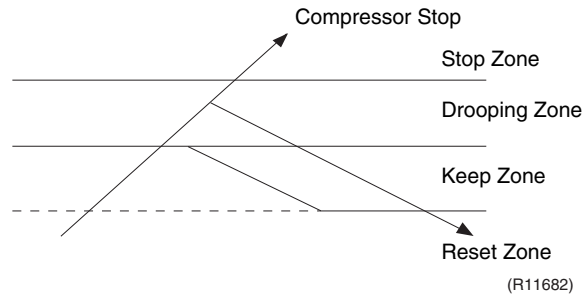

Frequency control in each zone

Stop zone

- ◆ After 2.5 seconds in this zone, the compressor is stopped.

Drooping zone

- ◆ The upper limit of the compressor frequency is defined as operation frequency – 2 Hz.
- ◆ After this, the output frequency is pulled down by 2 Hz every second until it reaches the keep zone.

Keep zone

- ◆ The present maximum frequency goes on.

Reset zone

- ◆ Limit of the frequency is canceled.

Limitation of current drooping and stop value according to the outdoor temperature

- ◆ The current droops when outdoor temperature becomes higher than a certain level (depending on the model).


3.6 Freeze-up Protection Control

Outline

During cooling operation, the signals sent from the indoor unit allow the operating frequency limitation and prevent freezing of the indoor heat exchanger. (The signal from the indoor unit is divided into zones.)

Detail

The operating frequency limitation is judged with the indoor heat exchanger temperature 2 seconds after operation starts and 30 seconds after the number of operation room is changed.

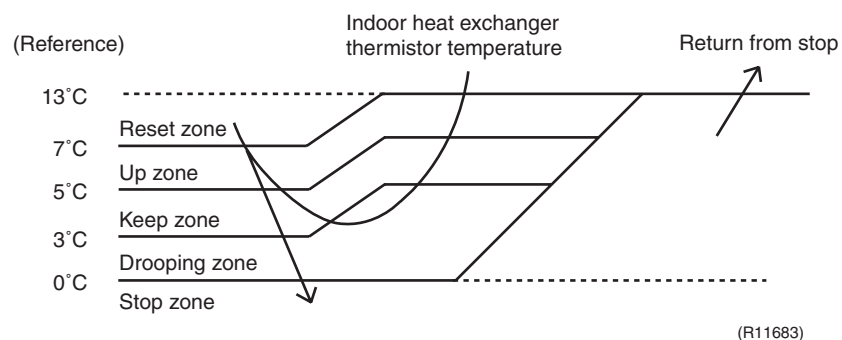


3.7 Heating Peak-cut Control

Outline During heating operation, the indoor heat exchanger temperature determines the frequency upper limit to prevent abnormal high pressure.

Detail

- The operating frequency is judged with the indoor heat exchanger temperature 2 minutes after the operation starts and **A** seconds after the number of operation room is changed.
- The maximum value of the indoor heat exchanger temperature controls the following (excluding stopped rooms).

	A
When increase	30
When decrease	2

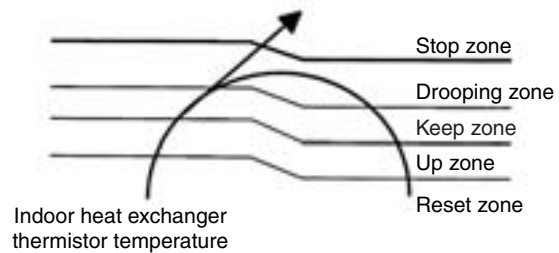

(R4579)

3.8 Outdoor Fan Control

1. Fan OFF delay when stopped

The outdoor fan is turned OFF 60 seconds after the compressor stops.

2. Fan ON control to cool down the electrical box

The outdoor fan is turned ON when the electrical box temperature is high while the compressor is OFF.

3. Fan OFF control while defrosting

The outdoor fan is turned OFF while defrosting.

4. Fan ON/OFF control when operation starts / stops

The outdoor fan is turned ON when the operation starts. The outdoor fan is turned OFF when the operation stops.

5. Fan control while forced operation

The outdoor fan is controlled as well as normal operation while the forced operation.

6. Fan speed control while indoor / outdoor quiet operation

The rotation speed of the outdoor fan is reduced by the command of the indoor / outdoor quiet operation.

7. Fan control when the number of heating room decreases

When the outdoor temperature is more than 10°C, the fan is turned off for 30 seconds.

8. Fan speed control for pressure difference upkeep

The rotation speed of the outdoor fan is controlled for keeping the pressure difference while cooling with low outdoor temperature.

- ◆ When the pressure difference is small, the rotation speed of the outdoor fan is reduced.
- ◆ When the pressure difference is large, the rotation speed of the outdoor fan is increased.

3.9 Liquid Compression Protection Function

Outline In order to obtain the dependability of the compressor, the compressor is stopped according to the outdoor temperature and temperature of the outdoor heat exchanger.

Detail

- Operation stops depending on the outdoor temperature

Compressor turns off under the conditions that the system is in cooling operation and outdoor temperature is below 0°C.

3.10 Defrost Control

Outline Defrosting is carried out by the cooling cycle (reverse cycle). The defrosting time or outdoor heat exchanger temperature must be more than a certain value to finish.


Detail

Conditions for Starting Defrost

- The starting conditions is determined with the outdoor temperature and the outdoor heat exchanger temperature.
- The system is in heating operation.
- The compressor operates for 6 minutes.
- More than 30 minutes of accumulated time pass since the start of the operation, or ending the previous defrosting.

Conditions for Canceling Defrost

The target heat exchanger temperature as the canceling condition is selected in the range of E°C according to the outdoor temperature.

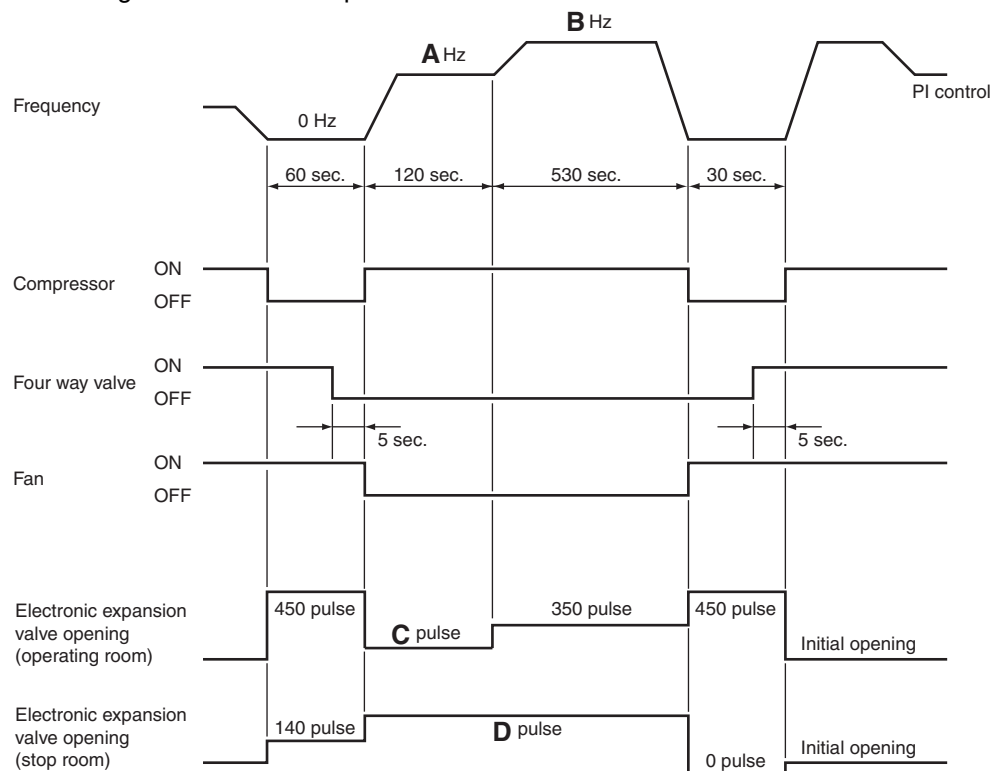

(R12739)

	40 class	50 class
A (Hz)	70	48
B (Hz)	86	70
C (pulse)	350	300
D (pulse)	160	200
E (°C)	4 ~ 12	4 ~ 15

3.11 Electronic Expansion Valve Control

Outline

The following items are included in the electronic expansion valve control.

Electronic expansion valve is fully closed

1. Electronic expansion valve is fully closed when turning on the power.
2. Pressure equalizing control

Room Distribution Control

1. SC (supercooling) control
2. Heat exchanger isothermal control during heating
3. Liquid pipe isothermal control during heating
4. Gas pipe isothermal control during cooling

Open Control

1. Electronic expansion valve control when starting operation
2. Electronic expansion valve control when frequency changed
3. Electronic expansion valve control for defrosting
4. Electronic expansion valve control for oil recovery
5. Electronic expansion valve control when a discharge pipe temperature is abnormally high
6. Electronic expansion valve control when the discharge pipe thermistor is disconnected
7. Electronic expansion valve control for anti-icing control for indoor unit

Feedback Control

1. Discharge pipe temperature control

Detail

The followings are the examples of control which function in each mode by the electronic expansion valve control.

Operation pattern		SC (supercooling) control	Control when frequency changed	Control for abnormally high discharge pipe temperature	Heat exchanger isothermal control during heating	Oil recovery control	Anti-icing control for indoor unit
When power is turned on		○ : function × : not function					
Fully closed when power is turned on		×	×	×	×	×	×
Cooling, 1 room operation	Open control when starting	×	×	○	×	○	○
	(Target discharge pipe temperature control)	×	○	○	×	○	○
Cooling, 2 rooms operation	Control when the operating room is changed	×	×	○	×	○	○
	(Target discharge pipe temperature control)	×	○	○	×	○	○
Stop	Pressure equalizing control	×	×	×	×	×	×
Heating operation	Open control when starting	×	×	○	○	×	×
	(Target discharge pipe temperature control)	○	○	○	○	×	×
	(Defrost control)	×	×	×	×	×	×
Stop	Pressure equalizing control	×	×	×	×	×	×
Heating operation	Open control when starting	×	×	○	○	×	×
Control of discharge pipe thermistor disconnection	Continue	○	×	×	○	×	×
Stop	Pressure equalizing control	×	×	×	×	×	×

(R12506)

3.11.1 Fully Closing with Power on

The electronic expansion valve is initialized when the power is turned on. The opening position is set and the pressure equalization is developed.

3.11.2 Pressure Equalization Control

When the compressor is stopped, the pressure equalization control is activated. The electronic expansion valve opens, and develops the pressure equalization.

3.11.3 Opening Limit

Outline

A maximum and minimum opening of the electronic expansion valve are limited.

Detail

- A maximum electronic expansion valve opening in the operating room: 450 pulses
 - A minimum electronic expansion valve opening in the operating room: 60 pulses
- The electronic expansion valve is fully closed in the room where cooling is stopped and is opened at the fixed degree during defrosting.

3.11.4 Starting Operation Control / Changing Operation Room

The electronic expansion valve opening is controlled when the operation starts, and prevent the superheating or liquid compression.

3.11.5 High Discharge Pipe Temperature

When the compressor is operating, if the discharge pipe temperature exceeds a certain value, the electronic expansion valve opens and the refrigerant runs to the low pressure side. This procedure lowers the discharge pipe temperature.

3.11.6 Oil Recovery Function

Outline

The electronic expansion valve opening in the cooling stopped room is set as to open for a certain time at a specified interval so that the oil in the cooling stopped room may not be accumulated.

Detail

During cooling operation, every 1 hour continuous operation, the electronic expansion valves in the operation stopped room is opened by 80 pulses for specified time.

3.11.7 Gas Pipe Isothermal Control During Cooling


When the units are operating in multiple rooms, the gas pipe temperature is detected and the electronic expansion valve opening is adjusted so that the temperature of the gas pipe in each room becomes equal.

- When the gas pipe temperature > the average gas pipe temperature,
 - open the electronic expansion valve in that room
- When the gas pipe temperature < the average gas pipe temperature,
 - close the electronic expansion valve in that room

The temperatures are monitored every 40 seconds.

3.11.8 Target Discharge Pipe Temperature Control

The target discharge pipe temperature is obtained from the indoor and outdoor heat exchanger temperature, and the electronic expansion valve opening is adjusted so that the actual discharge pipe temperature becomes close to the target discharge pipe temperature. (Indirect SH (superheating) control using the discharge pipe temperature)

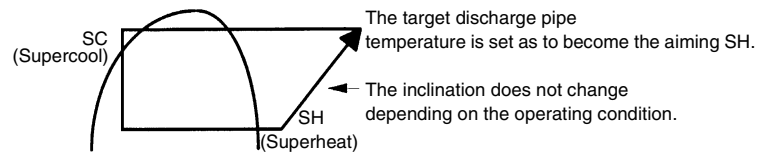

(R10626)

The electronic expansion valve opening and the target discharge pipe temperature are adjusted every 20 seconds. The target discharge pipe temperature is controlled by indoor heat exchanger temperature and outdoor heat exchanger temperature. The opening degree of the electronic expansion valve is controlled by followings.

- ◆ Target discharge pipe temperature
- ◆ Actual discharge pipe temperature
- ◆ Previous discharge pipe temperature

3.11.9 SC (Supercooling) Control

Outline

The liquid pipe temperature and the heat exchanger temperature are detected and the electronic expansion valve opening is compensated so that the SC of each room becomes the target SC.

- When the actual SC is > target SC, open the electronic expansion valve of the room.
- When the actual SC is < target SC, close the electronic expansion valve of the room.

Detail

Start Conditions

After finishing the starting control (about 660 seconds), all the electronic expansion valve(s) in the operating room is/are controlled.

Determine Electronic Expansion Valve Opening

The electronic expansion valve opening is adjusted so that the temperature difference between the maximum heat exchanger temperature of connected room and the liquid pipe temperature thermistor becomes constant.

3.11.10 Disconnection of the Discharge Pipe Thermistor

Outline

The disconnection of the discharge pipe thermistor is detected by comparing the discharge pipe temperature with the condensation temperature. If the discharge pipe thermistor is disconnected, the electronic expansion valve opens according to the outdoor temperature and the operation frequency, and operates for a specified time, and then stops.

After 3 minutes of waiting, the operation restarts and checks if the discharge pipe thermistor is disconnected. If the discharge pipe thermistor is disconnected, the system stops after operating for a specified time.

If the disconnection is detected 4 times in succession, then the system is shut down. When the compressor runs for 60 minutes without any error, the error counter is reset.

Detail**Detect Disconnection**

When the starting control (about 660 seconds) finishes, and the 9-minute timer for the compressor operation continuation is not counting time, the following adjustment is made.

1. When the operation mode is cooling

When the following condition is fulfilled, the discharge pipe thermistor disconnection is ascertained.

Discharge pipe temperature + 6°C < outdoor heat exchanger temperature

2. When the operation mode is heating

When the following condition is fulfilled, the discharge pipe thermistor disconnection is ascertained.

Discharge pipe temperature + 6°C < highest indoor heat exchanger temperature

Adjustment when the thermistor is disconnected

When the disconnection is ascertained, the compressor continues operation for 9 minutes and then stops.

When the compressor stops repeatedly, the system is shut down.

3.11.11 Control when frequency is changed

When the target discharge pipe temperature control is active, if the target frequency is changed for a specified value in a certain time period, the target discharge pipe temperature control is canceled and the target opening of the electronic expansion valve is changed.

3.12 Malfunctions

3.12.1 Sensor Malfunction Detection

Sensor malfunction may occur either in the thermistor or current transformer (CT) system.

Relating to Thermistor Malfunction

1. Outdoor heat exchanger thermistor
2. Discharge pipe thermistor
3. Fin thermistor
4. Gas pipe thermistor
5. Outdoor temperature thermistor
6. Liquid pipe thermistor

Relating to CT Malfunction

When the output frequency is more than 52 Hz, abnormal adjustment is carried out.

3.12.2 Detection of Overcurrent and Overload

Outline

In order to protect the inverter, an excessive output current is detected, the OL temperature is observed to protect the compressor.

Detail

- If the inverter current exceeds 11.5~12.5 A (depending on the model), the system shuts down the compressor.
- If the OL (compressor head) temperature exceeds 120 ~ 130°C, the compressor stops.


3.12.3 Refrigerant Shortage Control

Outline

I Detecting by power consumption

If the power consumption is below the specified value and the frequency is higher than the specified frequency, it is regarded as refrigerant shortage.


The power consumption is small comparing with that in the normal operation when refrigerant is insufficient, and refrigerant shortage is detected by checking a power consumption.

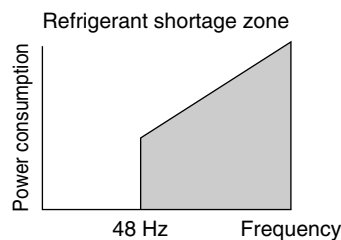

(R12507)

II Detecting by discharge pipe temperature

If the discharge pipe temperature is higher than the target discharge pipe temperature, and the electronic expansion valve is fully open for more than the specified time, it is regarded as refrigerant shortage.

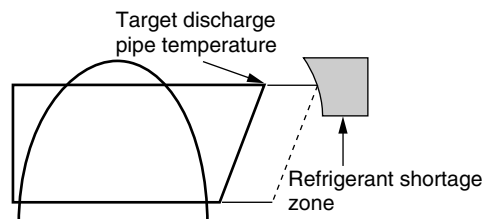

(R1391)



Refer to "Refrigerant shortage" on page 228 for detail.

3.12.4 Anti-icing Control

During cooling, if the indoor heat exchanger temperature in the operation stopped room becomes below the specified temperature for the specified time, the electronic expansion valve is opened in the operation stopped room as specified, and the fully closed operation is carried out. After this, if freezing abnormality occurs more than specified time, the system shuts down as the system abnormality.

Part 5

Operation Manual

1. System Configuration.....	91
2. FTXG-J, CTXG-J Series	92
2.1 Name of Parts	92
2.2 AUTO · DRY · COOL · HEAT · FAN Operation	96
2.3 Adjusting the Airflow Direction and Rate	98
2.4 COMFORT AIRFLOW Operation	100
2.5 INTELLIGENT EYE Operation	101
2.6 POWERFUL Operation	103
2.7 OUTDOOR UNIT QUIET Operation	104
2.8 ECONO Operation	105
2.9 OFF TIMER Operation	106
2.10 ON TIMER Operation	107
2.11 WEEKLY TIMER Operation	108
3. FTXS, FVXS Series	114
3.1 Manual Contents and Reference Page	114
3.2 Names of Parts.....	115
3.3 AUTO · DRY · COOL · HEAT · FAN Operation	121
3.4 Adjusting the Airflow Direction.....	123
3.5 COMFORT AIRFLOW and INTELLIGENT EYE Operation.....	127
3.6 POWERFUL Operation	130
3.7 OUTDOOR UNIT QUIET Operation.....	131
3.8 ECONO Operation	132
3.9 TIMER Operation	133
3.10 WEEKLY TIMER Operation	135
4. FTXG-E, CTXG-E, FLK(X)S, FDK(X)S Series	141
4.1 Manual Contents and Reference Page	141
4.2 Remote Controller	142
4.3 AUTO · DRY · COOL · HEAT · FAN Operation	145
4.4 Adjusting the Airflow Direction.....	147
4.5 POWERFUL Operation	151
4.6 OUTDOOR UNIT QUIET Operation.....	152
4.7 HOME LEAVE Operation	153
4.8 INTELLIGENT EYE Operation	155
4.9 TIMER Operation	157
4.10 Note for Multi System	159
5. FFQ Series.....	160

1. System Configuration

After the installation and test operation of the room air conditioner have been completed, it should be operated and handled as described below. Every user would like to know the correct method of operation of the room air conditioner, to check if it is capable of cooling (or heating) well, and to know a clever method of using it.

In order to meet this expectation of the users, giving sufficient explanations taking enough time can be said to reduce about 80% of the requests for servicing. However good the installation work is and however good the functions are, the customer may blame either the room air conditioner or its installation work because of improper handling. The installation work and handing over of the unit can only be considered to have been completed when its handling has been explained to the user without using technical terms but giving full knowledge of the equipment.

2. FTXG-J, CTXG-J Series

2.1 Name of Parts

Name of Parts

Indoor Unit

- Appearance of the indoor unit may differ.

INTELLIGENT EYE sensor

- It detects the movements of people and automatically switches between normal operation and energy saving operation. [▶ Page 16](#)

Room temperature sensor

- It detects the air temperature around the unit.

Front panel

Air outlet

Louvers (vertical blades)

- The louvers are inside of the air outlet. [▶ Page 13](#)

Flaps (horizontal blades) [▶ Page 13](#)

Model name plate

Panel tab

Display

INTELLIGENT EYE lamp (green) [▶ Page 16](#)

Signal receiver and Indoor unit ON/OFF switch

Signal receiver

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a beep sound.

Case	Sound type
Operation start	beep-beep
Setting changed	beep
Operation stop	long beep

Indoor unit ON/OFF switch

- Press this switch once to start operation. Press once again to stop it.
- The operation mode refer to the following table.

Mode	Temperature setting	Airflow rate
AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

Multi-monitor lamp and TIMER lamp

Multi-monitor lamp

- The lamp colour changes according to the operation.

Operation	Multi-monitor lamp
AUTO	Red/Blue
DRY	Green
COOL	Blue
HEAT	Red
FAN	White
TIMER	Orange

TIMER lamp

- When operation by timer has been set, the multi-monitor lamp periodically changes to orange. After lighting orange for about 5 seconds, it returns to the colour of the operation mode. The multi-monitor lamp will turn orange on and off in cyclic manner while the air conditioner is not in operation.

TIMER lamp colour : For COOL

TIMER lamp colour

DRY : Green → Orange


COOL : Blue → Orange

HEAT : Red → Orange

FAN : White → Orange


Stop : Off → Orange

■ Open the front panel

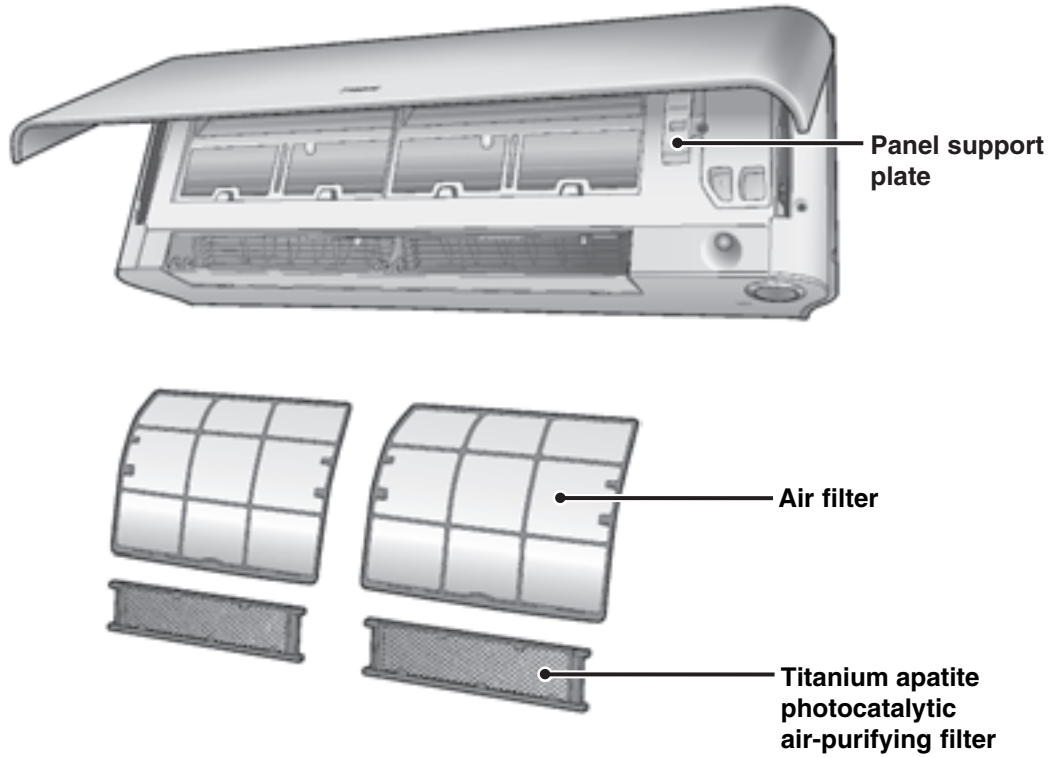

Outdoor Unit


• Appearance of the outdoor unit may differ from some models.

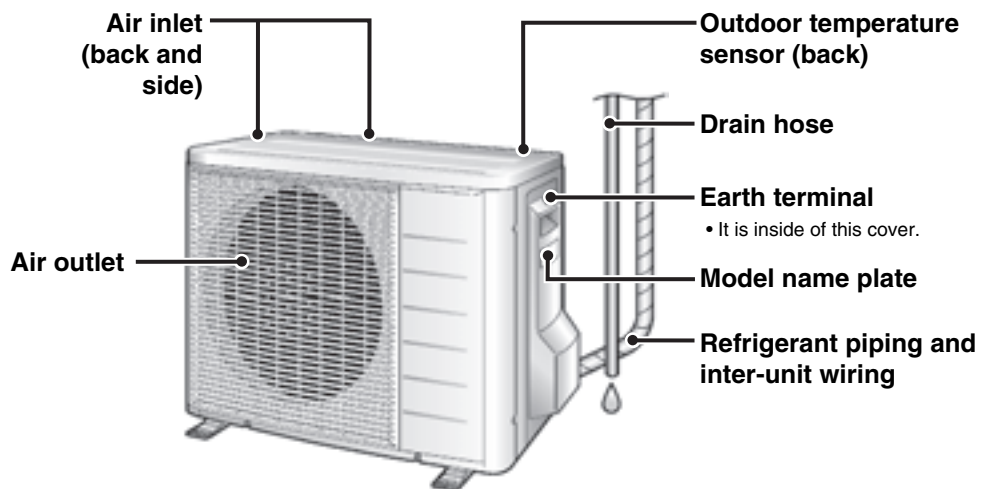

Name of Parts

Remote Controller

Signal transmitter

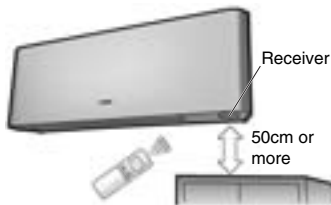


- To use the remote controller, aim the transmitter at the indoor unit. If there is anything to block signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller. Do not get it wet.
- The maximum distance for communication is approx. 6m. Make sure that there are no obstacles within 50cm under the signal receiver. Such obstacles, if any, may have an adverse influence on the reception performance of the receiver and the reception distance may be shortened.

FAN setting button

- It selects the airflow rate setting. [▶ Page 14](#)

POWERFUL button

- POWERFUL operation. [▶ Page 18](#)

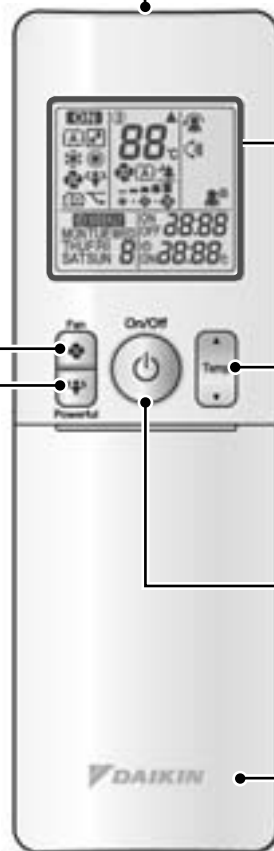

Display (LCD)

- It displays the current settings. (In this illustration, each section is shown with its displays on for the purpose of explanation.)

TEMPERATURE adjustment buttons

- It changes the temperature setting. [▶ Page 12](#)

ON/OFF button


- Press this button once to start operation. Press once again to stop it. [▶ Page 11](#)

Front cover

- Open the front cover. [▶ Page 8](#)

Model	ARC466A1
-------	----------

■ Open the front cover

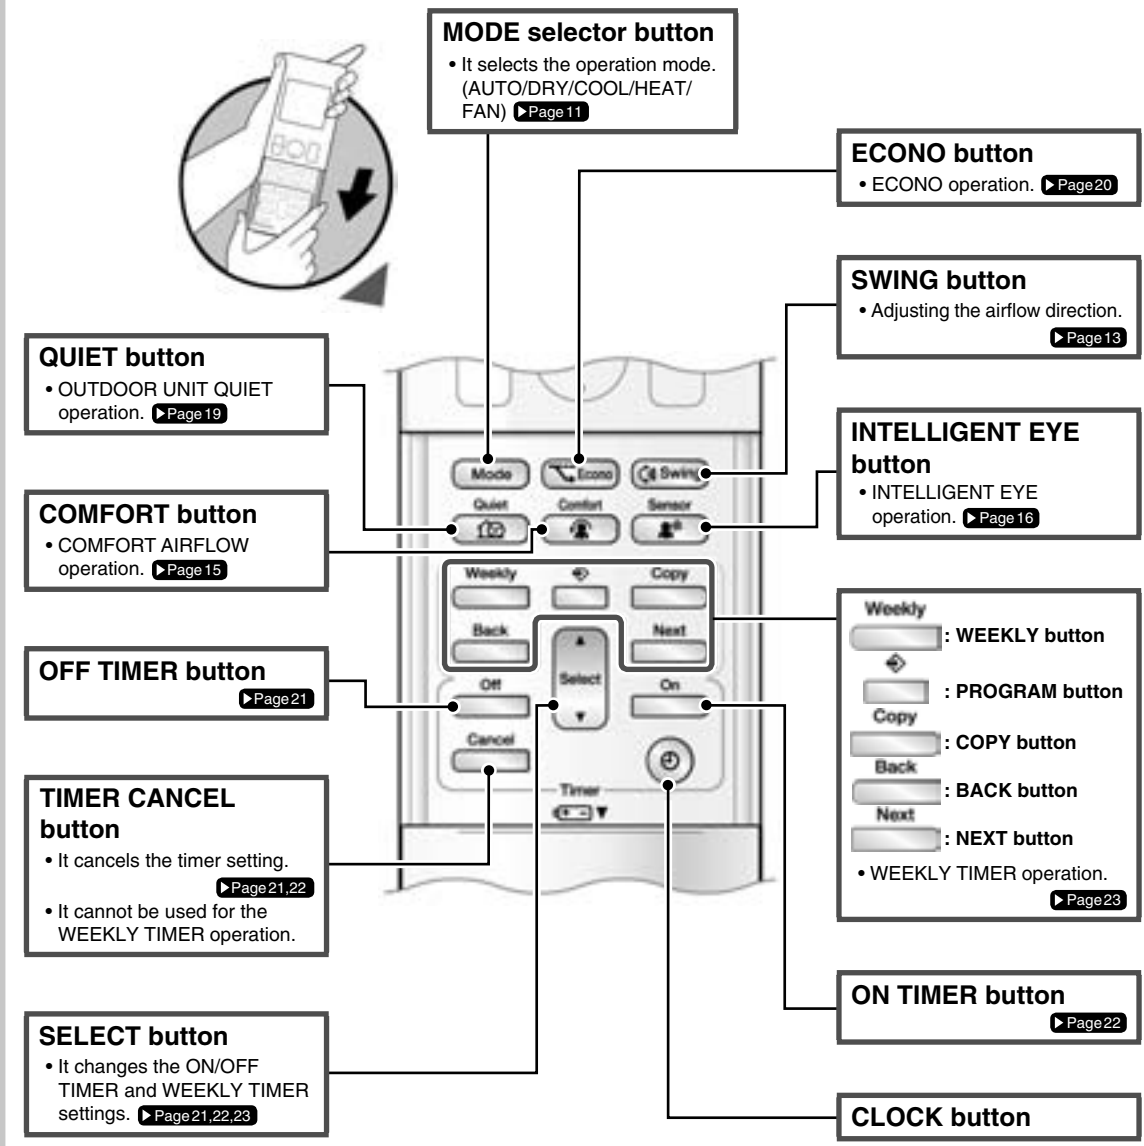

2.2 AUTO · DRY · COOL · HEAT · FAN Operation



AUTO · DRY · COOL · HEAT · FAN Operation




The air conditioner operates with the operation mode of your choice.
From the next time on, the air conditioner will operate with the same operation mode.

■ To start operation

1. Press **Mode** and select a operation mode.


- Each pressing of the button advances the mode setting in sequence.



2. Press .

- “**ON**” is displayed on the LCD.
- The multi-monitor lamp lights up.
The colour of the lamp varies depending on the operation mode.

Operation	Multi-monitor lamp
AUTO	Red/Blue
DRY	Green
COOL	Blue
HEAT	Red
FAN	White

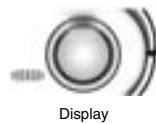

Display

■ To stop operation

Press  again.

- “**ON**” disappears from the LCD.
- The multi-monitor lamp goes off.

NOTE

MODE	Notes on each operation mode
HEAT	<ul style="list-style-type: none"> • Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner. • The heat pump system heats the room by circulating hot air around all parts of the room. After the start of HEAT operation, it takes some time before the room gets warmer. • In HEAT operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost. • During defrosting operation, hot air does not flow out of indoor unit.
COOL	<ul style="list-style-type: none"> • This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, the performance of the air conditioner drops.
DRY	<ul style="list-style-type: none"> • The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.
AUTO	<ul style="list-style-type: none"> • In AUTO operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation. • The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
FAN	<ul style="list-style-type: none"> • This mode is valid for fan only.



■ To change the temperature setting

Press  .

- The displayed items on the LCD will change whenever either one of the buttons is pressed.

COOL operation	HEAT operation	AUTO operation	DRY or FAN operation
18-32°C	10-30°C	18-30°C	The temperature setting is not variable.
Press ▲ to raise the temperature and press ▼ to lower the temperature.			

■ Operating conditions

■ Recommended temperature setting

- For cooling: 26-28°C
- For heating: 20-24°C

■ Tips for saving energy

- Be careful not to cool (heat) the room too much.
Keeping the temperature setting at a moderate level helps save energy.
- Cover windows with a blind or a curtain.
Blocking sunlight and air from outdoors increases the cooling (heating) effect.
- Clogged air filters cause inefficient operation and waste energy. Clean them once in about every 2 weeks.

■ Notes on the operating conditions

- The outdoor unit consumes some power to have its electric components work even while it is not operating.
Connecting outdoor unit RXG25/35: 1-15W
Other outdoor units: 15-20W
The outdoor unit consumes 40 to 55W of power at the time of compressor preheating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker off.
- Use the air conditioner in the following conditions.

MODE	Operating conditions	If operation is continued out of this range
COOL	Outdoor temperature : <2/3/4/5MXS> -10-46°C <RXG> -10-46°C Indoor temperature : 18-32°C Indoor humidity : 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. (In multi system, it may work to stop the operation of the outdoor unit only.) • Condensation may occur on the indoor unit and drip.
HEAT	Outdoor temperature : <2MXS> -10-24°C <3/4/5MXS> -15-24°C <RXG> -15-24°C Indoor temperature : 10-30°C	<ul style="list-style-type: none"> • A safety device may work to stop the operation.
DRY	Outdoor temperature : <2/3/4/5MXS> -10-46°C <RXG> -10-46°C Indoor temperature : 18-32°C Indoor humidity : 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

2.3 Adjusting the Airflow Direction and Rate



Adjusting the Airflow Direction and Rate




You can adjust the airflow direction to increase your comfort.

■ To start auto swing

Upper and lower airflow direction

Press  **Swing**.


- “” is displayed on the LCD.
- The flaps (horizontal blades) will begin to swing.



■ To set the flaps at desired position


- This function is effective while flaps are in auto swing mode.

Press  **Swing** when the flaps have reached the desired position.

- “” disappears from the LCD.

■ To adjust the louvers at desired position

Hold the knob and move the louvers.


- You will find a knob on the left-side and the right-side blades.
- When the unit is installed in the corner of a room, the direction of the louvers (vertical blades) should be facing away from the wall.
If they face the wall, the wall will block off the wind, causing the cooling (or heating) efficiency to drop.
- If the flaps are in the way, press  on the remote controller to move the flaps out of the way and then adjust the louvers.







■ To adjust the airflow rate setting

Press .

- Each pressing of  advances the airflow rate setting in sequence.

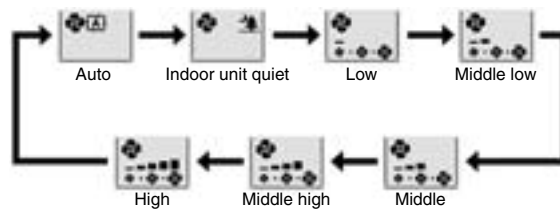


- When the airflow is set to “”, indoor unit quiet operation will start and the noise from the unit will become quieter.
- In indoor unit quiet operation, the airflow rate is set to a weak level.
- In DRY mode, the airflow rate setting is not variable.

NOTE

■ Note on the angles of the flaps

- The flaps swinging range depends on the operation. (See the figure.)

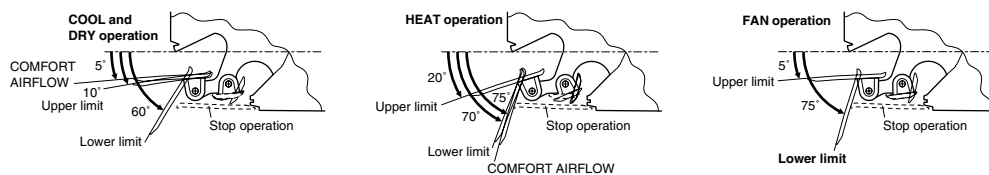

■ Note on airflow rate setting

- At smaller airflow rates, the cooling (heating) effect is also smaller.
- If the air conditioner is operated in COOL or DRY operation with the flaps kept stopped in the downward direction, the flaps will automatically start operating in approximately an hour in order to prevent dew condensation.

⚠ CAUTION

- Always use a remote controller to adjust the angles of the flaps. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers.
Inside the air outlet, a fan is rotating at a high speed.

2.4 COMFORT AIRFLOW Operation




COMFORT AIRFLOW Operation



The flow of air will be in the upward direction while in COOL operation and in the downward direction while in HEAT operation, which will provide a comfortable wind that will not come in direct contact with people.


■ To start COMFORT AIRFLOW operation

Press .

- “” is displayed on the LCD.
- Airflow rate is set to Auto.
COOL/DRY: The flaps will go up.
HEAT: The flaps will go down.

■ To cancel COMFORT AIRFLOW operation

Press  again.

- The flaps will return to the memory position from before COMFORT AIRFLOW operation.
- “” disappears from the LCD.



COOL operation



HEAT operation

NOTE

■ Notes on COMFORT AIRFLOW operation

- The flaps position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation and COMFORT AIRFLOW operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- The airflow rate will be set to Auto. If the upper and lower airflow direction is selected, the COMFORT AIRFLOW operation will be canceled.

2.5 INTELLIGENT EYE Operation




INTELLIGENT EYE Operation




“INTELLIGENT EYE” is the infrared sensor which detects the human movement. If nobody in the room for more than 20 minutes, the operation automatically changes to energy saving operation.

■ To start INTELLIGENT EYE operation

Press .


- “” is displayed on the LCD.
- The INTELLIGENT EYE lamp lights up.



Display

■ To cancel INTELLIGENT EYE operation


Press  again.

- “” disappears from the LCD.
- The INTELLIGENT EYE lamp goes off.



INTELLIGENT EYE Operation

[Example]

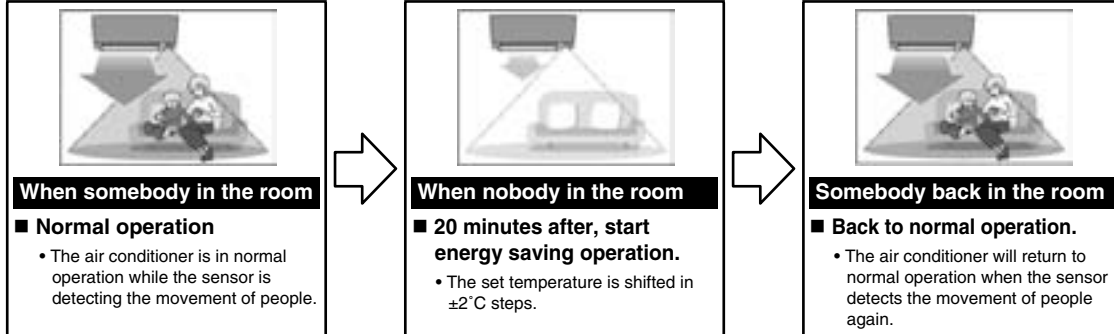

INTELLIGENT EYE operation is useful for energy saving


■ Energy saving operation

- If no presence detected in the room for 20 minutes, the energy saving operation will start.
- This operation changes the temperature -2°C in HEAT / $+2^{\circ}\text{C}$ in COOL / $+1^{\circ}\text{C}$ in DRY operation from set temperature.
- This operation decreases the airflow rate slightly in FAN operation only.

NOTE

■ Notes on INTELLIGENT EYE operation

- Application range is as follows.

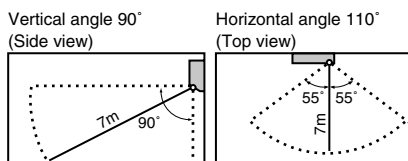

- Sensor may not detect moving objects further than 7m away. (Check the application range.)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during POWERFUL operation.
- NIGHT SET mode [▶Page 21](#) will not go on during use of INTELLIGENT EYE operation.

⚠ CAUTION

- Do not place large objects near the sensor.
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect undesirable objects.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

2.6 POWERFUL Operation




POWERFUL Operation



POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.


■ To start POWERFUL operation

Press  during operation.


- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” is displayed on the LCD.

■ To cancel POWERFUL operation

Press  again.



- “” disappears from the LCD.

[Example]

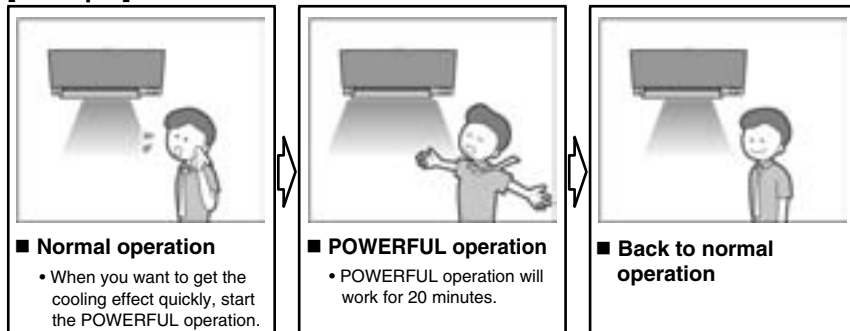

NOTE

■ Notes on POWERFUL operation

- When using POWERFUL operation, there are some functions which are not available.
- POWERFUL operation cannot be used together with ECONO, COMFORT AIRFLOW or OUTDOOR UNIT QUIET operation. Priority is given to the function of whichever button is pressed last.
- POWERFUL operation can only be set when the unit is running. Pressing  causes the settings to be canceled, and the “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
- **In COOL and HEAT operation**
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting. The temperature and airflow settings are not variable.
- **In DRY operation**
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
- **In FAN operation**
The airflow rate is fixed to the maximum setting.
- **In AUTO operation**
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting.

2.7 OUTDOOR UNIT QUIET Operation



OUTDOOR UNIT QUIET Operation



OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during the night.


■ To start OUTDOOR UNIT QUIET operation

Press .

- “” is displayed on the LCD.

■ To cancel OUTDOOR UNIT QUIET operation

Press  again.

- “” disappears from the LCD.


[Example] Using the OUTDOOR UNIT QUIET operation during the night.



- The noise level of the outdoor unit will be lower.
This is convenient when you need to consideration for your neighborhood.

NOTE

■ Notes on OUTDOOR UNIT QUIET operation

- This function is available in COOL, HEAT, and AUTO operation.
This is not available in FAN and DRY operation.
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time.
Priority is given to the function of whichever button is pressed last.
- Even the operation is stopped using the remote controller or the indoor unit ON/OFF switch when using OUTDOOR UNIT QUIET operation, “” will remain on the remote controller display.
- OUTDOOR UNIT QUIET operation will drop neither the frequency nor fan speed if they have been already dropped low enough.

2.8 ECONO Operation




ECONO Operation



ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value. This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.


■ To start ECONO operation

Press  during operation.

- “” is displayed on the LCD.

■ To cancel ECONO operation

Press  again.

- “” disappears from the LCD.

[Example]

Normal operation




- In case the air conditioner and other appliances which require high power consumption are used at same time, a circuit breaker may trip if the air conditioner operate with its maximum capacity.

ECONO operation



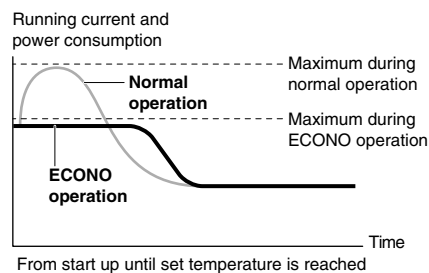

- The maximum power consumption of the air conditioner is limited by using ECONO operation. The circuit breaker will hardly trip even if the air conditioner and other appliances are used at same time.



- This diagram is a representation for illustrative purposes only. The maximum running current and power consumption of the air conditioner in ECONO operation vary with the connecting outdoor unit.

NOTE

■ Notes on ECONO operation

- ECONO operation can only be set when the unit is running. Pressing  causes the settings to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY, and HEAT operation.
- POWERFUL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- If the level of power consumption is already low, ECONO operation will not drop the power consumption.

2.9 OFF TIMER Operation



OFF TIMER Operation



Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

■ To use OFF TIMER operation

- Check that the clock is correct.
If not, set the clock to the present time.

1. Press .



- "0:00" is displayed on the LCD.
- "OFF" blinks.


- "⊕" and day of the week disappear from the LCD.

2. Press until the time setting reaches the point you like.

- Each pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the time setting rapidly.

3. Press again.

- "OFF" and setting time are displayed on the LCD.
- The multi-monitor lamp blinks twice.
The TIMER lamp periodically lights orange. [▶Page 5](#)

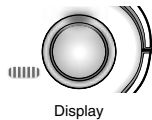

■ To cancel OFF TIMER operation

Press .

- "OFF" and setting time disappear from the LCD.
- "⊕" and day of the week are displayed on the LCD.

NOTE

■ Notes on TIMER operation

- When TIMER is set, the present time is not displayed.
- Once you set ON/OFF TIMER, the time setting is kept in the memory. The memory is canceled when remote controller batteries are replaced.
- When operating the unit via the ON/OFF TIMER, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes)

■ NIGHT SET mode

- When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

2.10 ON TIMER Operation




ON TIMER Operation



■ To use ON TIMER operation

- Check that the clock is correct.
If not, set the clock to the present time.

1. Press .



- "6:00" is displayed on the LCD.
- "ON" blinks.

- "⊕" and day of the week disappear from the LCD.

2. Press until the time setting reaches the point you like.

- Each pressing of either button increases or decreases the time setting by 10 minutes.
Holding down either button changes the setting rapidly.

3. Press again.

- "ON" and setting time are displayed on the LCD.
- The multi-monitor lamp blinks twice.
The TIMER lamp periodically lights orange. [▶ Page 5](#)



Display


■ To cancel ON TIMER operation

Press .

- "ON" and setting time disappear from the LCD.
- "⊕" and day of the week are displayed on the LCD.

■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the 2 timers is shown below.



NOTE

- In the following cases, set the timer again.
 - After a breaker has turned off.
 - After a power failure.
 - After replacing batteries in the remote controller.

2.11 WEEKLY TIMER Operation



WEEKLY TIMER Operation

Up to 4 timer settings can be saved for each day of the week. It is convenient if the WEEKLY TIMER is set according to the family's life style.

■ Using in these cases of WEEKLY TIMER

Example: The same timer settings are made for the week from Monday through Friday while different timer settings are made for the weekend.

<p>[Monday]</p>	<p>Make timer settings up to programs 1-4. ▶Page24</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Program 1</p> <p>ON</p> <p>25°C</p> <p>6:00 — 8:30</p> <p>ON</p> </div> <div style="text-align: center;"> <p>Program 2</p> <p>OFF</p> <p>8:30</p> <p>OFF</p> </div> <div style="text-align: center;"> <p>Program 3</p> <p>ON</p> <p>17:30</p> <p>27°C</p> <p>22:00</p> <p>ON</p> </div> <div style="text-align: center;"> <p>Program 4</p> <p>OFF</p> <p>22:00</p> <p>OFF</p> </div> </div>
<p>[Tuesday] to [Friday]</p>	<p>Use the copy mode to make settings for Tuesday to Friday, because these settings are the same as those for Monday. ▶Page26</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Program 1</p> <p>ON</p> <p>25°C</p> <p>6:00 — 8:30</p> </div> <div style="text-align: center;"> <p>Program 2</p> <p>OFF</p> <p>8:30</p> </div> <div style="text-align: center;"> <p>Program 3</p> <p>ON</p> <p>17:30</p> <p>27°C</p> <p>22:00</p> </div> <div style="text-align: center;"> <p>Program 4</p> <p>OFF</p> <p>22:00</p> </div> </div>
<p>[Saturday]</p>	<p>No timer settings</p>
<p>[Sunday]</p>	<p>Make timer settings up to programs 1-4. ▶Page24</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>Program 1</p> <p>ON</p> <p>25°C</p> <p>8:00 — 10:00</p> <p>ON</p> </div> <div style="text-align: center;"> <p>Program 2</p> <p>OFF</p> <p>10:00</p> <p>OFF</p> </div> <div style="text-align: center;"> <p>Program 3</p> <p>OFF</p> <p>19:00</p> <p>27°C</p> </div> <div style="text-align: center;"> <p>Program 4</p> <p>ON</p> <p>21:00</p> <p>27°C</p> <p>ON</p> </div> </div>


- Up to 4 reservations per day and 28 reservations per week can be set in the WEEKLY TIMER. The effective use of the copy mode ensures ease of making reservations.
- The use of ON-ON-ON-ON settings, for example, makes it possible to schedule operating mode and set temperature changes. Furthermore, by using OFF-OFF-OFF-OFF settings, only the turn off time of each day can be set. This will turn off the air conditioner automatically if the user forgets to turn it off.




■ To use WEEKLY TIMER operation

Setting mode

- Make sure the day of the week and time are set. If not, set the day of the week and time.

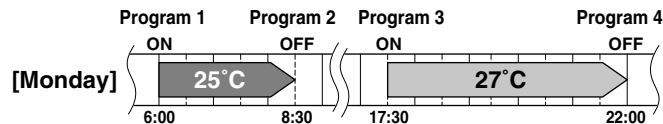

Setting Displays



1. Press .

- The day of the week and the reservation number of the current day will be displayed.
- 1 to 4 settings can be made per day.


2. Press to select the desired day of the week and reservation number.


- Pressing  changes the reservation number and the day of the week.


3. Press .


- The day of the week and reservation number will be set.
- "WEEKLY" and "ON" blink.

4. Press to select the desired mode.

- Pressing  changes "ON" or "OFF" setting in sequence.

Pressing  alternates the following items appearing on the LCD in rotational sequence.



- In case the reservation has already been set, selecting "blank" deletes the reservation.
- Go to step 9 if "blank" is selected.
- To return to the day of the week and reservation number setting, press .

5. Press .


- The ON/OFF TIMER mode will be set.
- "WEEKLY" and the time blink.




WEEKLY TIMER Operation




6. Press to select the desired time.

- The time can be set between 0:00 and 23:50 in 10 minute intervals.
- To return to the ON/OFF TIMER mode setting, press .
- Go to step 9 when setting the OFF TIMER.

7. Press .


- The time will be set.
- “ WEEKLY” and the temperature blink.

8. Press to select the desired temperature.


- The temperature can be set between 10°C and 32°C.
COOL or AUTO: The unit operates at 18°C even if it is set at 10 to 17°C.
HEAT or AUTO: The unit operates at 30°C even if it is set at 31 to 32°C.
- To return to the time setting, press .
- The set temperature is only displayed when the mode setting is on.

9. Press .

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and flashing the multi-monitor lamp.
- The temperature is set while in ON TIMER operation, and the time is set while in OFF TIMER operation.
- The next reservation screen will appear.
- To continue further settings, repeat the procedure from step 4.
- The multi-monitor lamp blinks twice.
The TIMER lamp periodically lights orange. [▶Page 5](#)
The multi-monitor lamp will not blink orange if all the reservation settings are deleted.

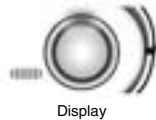


10. Press to complete the setting.

- “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
- A reservation made once can be easily copied and the same settings used for another day of the week. Refer to copy mode. [▶Page 26](#)

NOTE


■ Notes on WEEKLY TIMER operation

- Do not forget to set the clock on the remote controller first.
- The day of the week, ON/OFF TIMER mode, time and set temperature (only for ON TIMER mode) can be set with WEEKLY TIMER. Other settings for ON TIMER are based on the settings just before the operation.
- Both WEEKLY TIMER and ON/OFF TIMER operation cannot be used at the same time. The ON/OFF TIMER operation has priority if it is set while WEEKLY TIMER is still active. The WEEKLY TIMER will go into standby state, and “ WEEKLY” will disappear from the LCD. When ON/OFF TIMER is up, the WEEKLY TIMER will automatically become active.
- Shutting the breaker off, power failure, and other similar events will render operation of the indoor unit's internal clock inaccurate. Reset the clock.




Copy mode

- A reservation made once can be copied to another day of the week. The whole reservation of the selected day of the week will be copied.

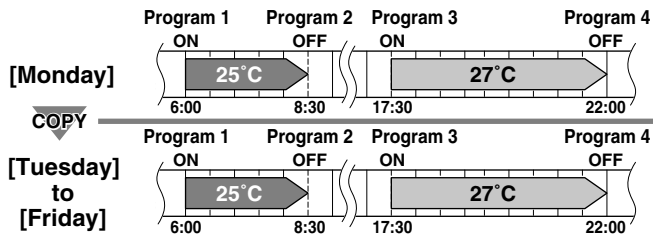

Setting Displays

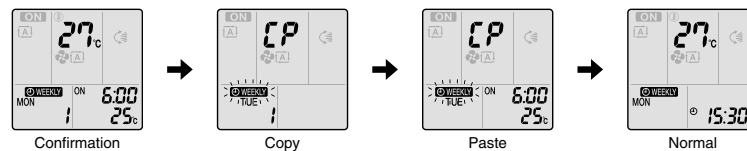

1. Press .
2. Press to confirm the day of the week to be copied.
3. Press .
 - The whole reservation of the selected day of the week will be copied.
4. Press to select the destination day of the week.
5. Press .
 - Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and flashing the multi-monitor lamp.
 - The reservation will be copied to the selected day of the week. The whole reservation of the selected day of the week will be copied.
 - To continue copying the settings to other days of the week, repeat step 4 and step 5.
 - The multi-monitor lamp blinks twice. The TIMER lamp periodically lights orange.
6. Press to complete the setting.
 - "WEEKLY" is displayed on the LCD and WEEKLY TIMER operation is activated.

NOTE

■ Note on copy mode

- The entire reservation of the source day of the week is copied in the copy mode.

In the case of making a reservation change for any day of the week individually after copying the content of weekly reservations, press and change the settings in the steps of setting mode. ▶ Page 24




WEEKLY TIMER Operation



■ Confirming a reservation

- The reservation can be confirmed.

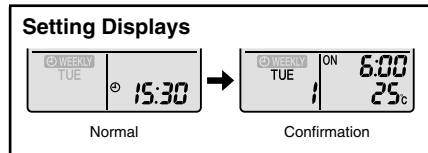

1. Press .

- The day of the week and the reservation number of the current day will be displayed.

2. Press to select the day of the week and the reservation number to be confirmed.

- Pressing displays the reservation details.
- To change the confirmed reserved settings, select the reservation number and press .
The mode is switched to setting mode. Go to setting mode step 2. [▶Page 24](#)

3. Press to exit confirming mode.


■ To deactivate WEEKLY TIMER operation

Press while “ WEEKLY” is displayed on the LCD.

- The “ WEEKLY” will disappear from the LCD.
- The TIMER lamp goes off.
- To reactivate the WEEKLY TIMER operation, press again.
- If a reservation deactivated with is activated once again, the last reservation mode will be used.








CAUTION




- If not all the reservation settings are reflected, deactivate the WEEKLY TIMER operation once. Then press again to reactivate the WEEKLY TIMER operation.



■ To delete reservations



The individual reservation

1. Press .
 - The day of the week and the reservation number will be displayed.
2. Press  to select the day of the week and the reservation number to be deleted.
3. Press .
 - “ WEEKLY” and “ON” or “OFF” blink.
4. Press  and select “blank”.
 - Pressing  changes ON/OFF TIMER mode.
 - Pressing  alternates the following items appearing on the LCD in rotational sequence.
 - The reservation will be no setting with selecting “blank”.



5. Press .
 - The selected reservation will be deleted.
6. Press .
 - If there are still other reservations, WEEKLY TIMER operation will be activated.

The reservations for each day of the week

- This function can be used for deleting reservations for each day of the week.
- It can be used while confirming or setting reservations.

1. Press  to select the day of the week to be deleted.
2. Hold  for 5 seconds.
 - The reservation of the selected day of the week will be deleted.

All reservations

Hold  for 5 seconds while normal display.

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone.
- This operation is not effective while WEEKLY TIMER is being set.
- All reservations will be deleted.

3. FTXS, FVXS Series

3.1 Manual Contents and Reference Page

Model Series	Wall Mounted Type	Floor Standing Type
	FTXS20-50G2V1B	FVXS25-50FV1B
Read Before Operation		
Names of Parts	115	118
Operation		
AUTO · DRY · COOL · HEAT · FAN Operation ★1	121	121
Adjusting the Airflow Direction	123	125
COMFORT AIRFLOW and INTELLIGENT EYE Operation	127	—
POWERFUL Operation ★1	130	130
OUTDOOR UNIT QUIET Operation ★1	131	131
ECONO Operation ★1	132	132
TIMER Operation ★1	133	133
WEEKLY TIMER Operation ★1	135	135
Note for Multi System ★1	140	140
Drawing No.	3P207037-1D	3P191290-1K


★1 : Illustrations are for wall mounted type as representative.

3.2 Names of Parts

FTXS20/25/35/42/50G2V1B

Names of parts

■ Indoor Unit

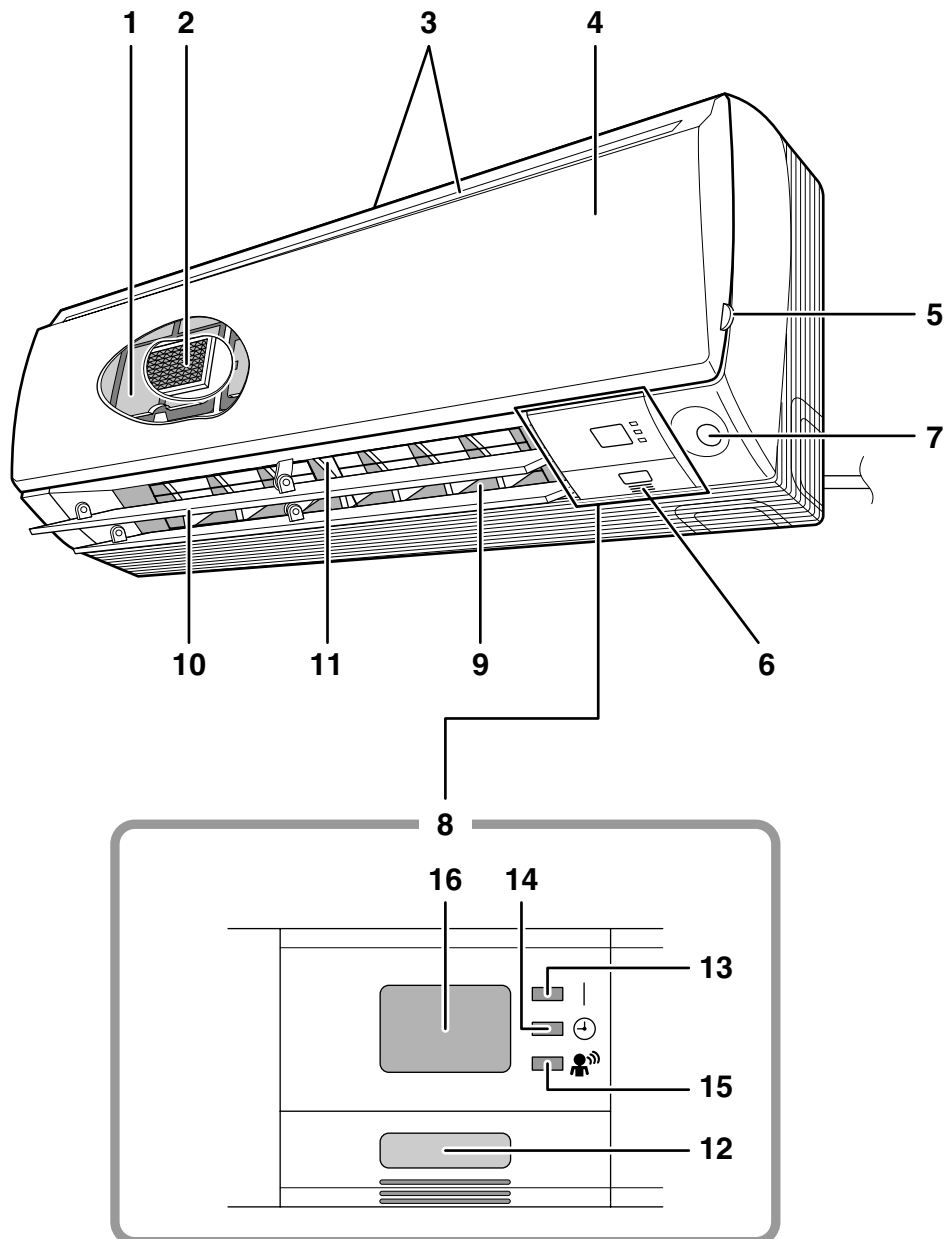

■ Indoor Unit

1. **Air filter**
2. **Titanium Apatite Photocatalytic Air-Purifying Filter:**
 - These filters are attached to the inside of the air filters.
3. **Air inlet**
4. **Front panel**
5. **Panel tab**
6. **Room temperature sensor:**
 - It senses the air temperature around the unit.
7. **INTELLIGENT EYE sensor**
8. **Display**
9. **Air outlet**
10. **Horizontal blades (flaps)**
11. **Vertical blades (louvers):**
 - The louvers are inside of the air outlet.

12. Indoor Unit ON/OFF switch

- Push this switch once to start operation. Push once again to stop it.
- The operation mode refers to the following table.

Model	Mode	Temperature setting	Airflow rate
COOLING ONLY	COOL	22°C	AUTO
HEAT PUMP	AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

13. Operation lamp (green)



14. TIMER lamp (yellow)

15. INTELLIGENT EYE lamp (green)


16. Signal receiver:

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a short beep.
 - Operation startbeep-beep
 - Settings changedbeep
 - Operation stop.....beeeeeeep

■ Remote Controller

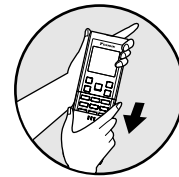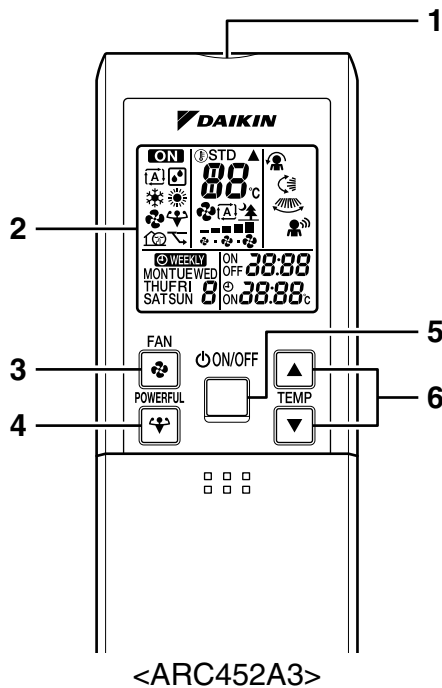

<Open the front cover>

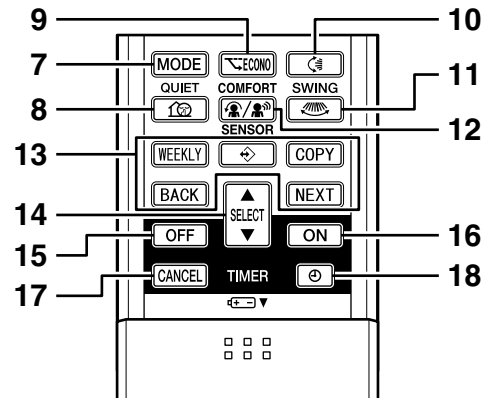


- 1. Signal transmitter:**
 - It sends signals to the indoor unit.
- 2. Display:**
 - It displays the current settings.
(In this illustration, each section is shown with its displays ON for the purpose of explanation.)
- 3. FAN setting button:**
 - It selects the airflow rate setting.
- 4. POWERFUL button:**
 - POWERFUL operation
- 5. ON/OFF button:**
 - Press this button once to start operation.
Press once again to stop it.
- 6. TEMPERATURE adjustment buttons:**
 - It changes the temperature setting.
- 7. MODE selector button:**
 - It selects the operation mode.
(AUTO/DRY/COOL/HEAT/FAN)
- 8. QUIET button:**
 - OUTDOOR UNIT QUIET operation
- 9. ECONO button:**
 - ECONO operation
- 10. SWING button:**
 - Horizontal blades (flaps)
- 11. SWING button:**
 - Vertical blades (louvers)
- 12. COMFORT/SENSOR button:**
 - COMFORT AIRFLOW and INTELLIGENT EYE operation
- 13. WEEKLY/PROGRAM/COPY/BACK/NEXT button:**
 - WEEKLY TIMER operation
- 14. SELECT button:**
 - It changes the ON/OFF TIMER and WEEKLY TIMER settings.
- 15. OFF TIMER button**
- 16. ON TIMER button**
- 17. TIMER CANCEL button:**
 - It cancels the timer setting.
 - It cannot be used for the WEEKLY TIMER operation.
- 18. CLOCK button**


FVXS25/35/50FV1B

Names of parts

Indoor Unit

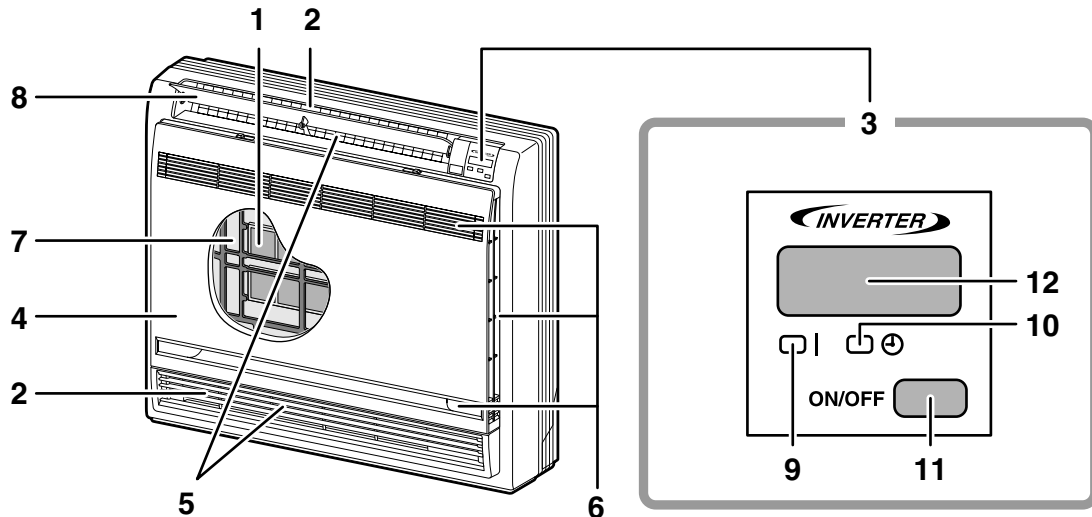

Opening the Front Panel

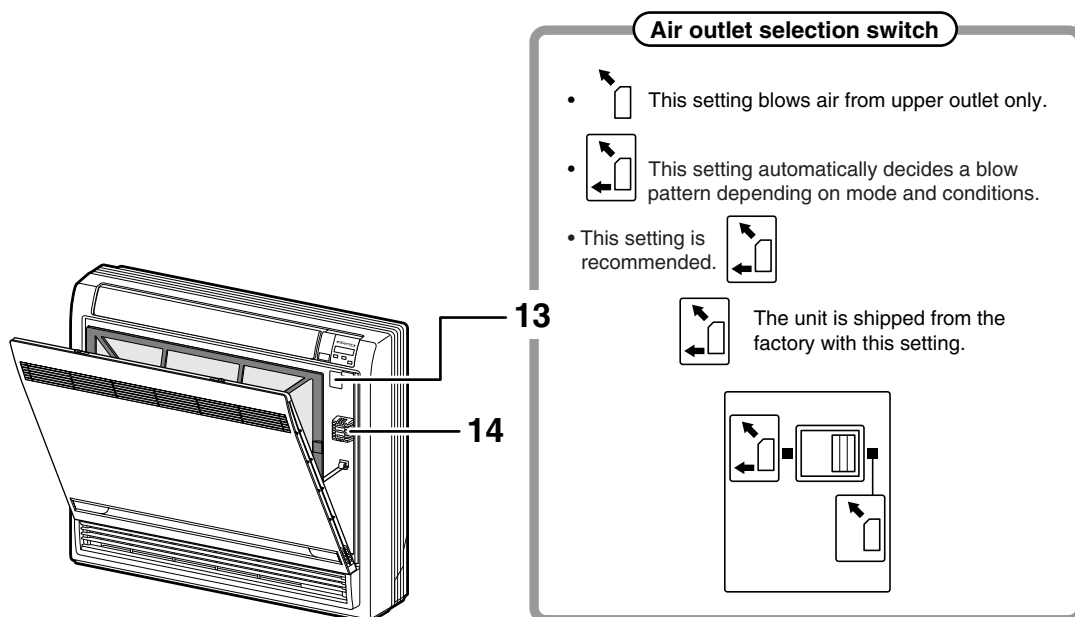

⚠ CAUTION

Before opening the front panel, be sure to stop the operation and turn the breaker OFF. Do not touch the metal parts on the inside of the indoor unit, as it may result in injury.

■ Indoor Unit

1. Titanium Apatite Photocatalytic Air-Purifying Filter:

- These filters are attached to the inside of the air filters.

2. Air outlet

3. Display

4. Front panel

5. Vertical blades (louvers)

- The louvers are inside of the air outlet.

6. Air inlet

7. Air filter

8. Horizontal blade (flap)

9. Operation lamp (green)

10. TIMER lamp (yellow)

11. Indoor Unit ON/OFF switch:

- Push this switch once to start operation.
Push once again to stop it.

- The operation mode refers to the following table.

Model	Mode	Temperature setting	Airflow rate
COOLING ONLY	COOL	22°C	AUTO
HEAT PUMP	AUTO	25°C	AUTO

- This switch is useful when the remote controller is missing.

12. Signal receiver:


- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a short beep.
 - Operation startbeep-beep
 - Settings changedbeep
 - Operation stop.....beeeeeep

13. Air outlet selection switch



14. Room temperature sensor:

- It senses the air temperature around the unit.

■ Remote Controller

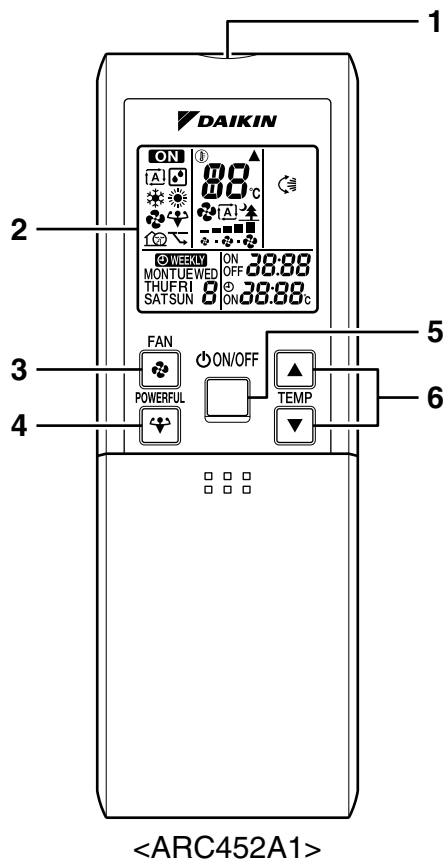

- 1. Signal transmitter:**
 - It sends signals to the indoor unit.
- 2. Display:**
 - It displays the current settings.
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)
- 3. FAN setting button:**
 - It selects the airflow rate setting.
- 4. POWERFUL button:**
 - POWERFUL operation
- 5. ON/OFF button:**
 - Press this button once to start operation.
Press once again to stop it.
- 6. TEMPERATURE adjustment buttons:**
 - It changes the temperature setting.
- 7. MODE selector button:**
 - It selects the operation mode.
(AUTO/DRY/COOL/HEAT/FAN)
- 8. QUIET button:**
 - OUTDOOR UNIT QUIET operation

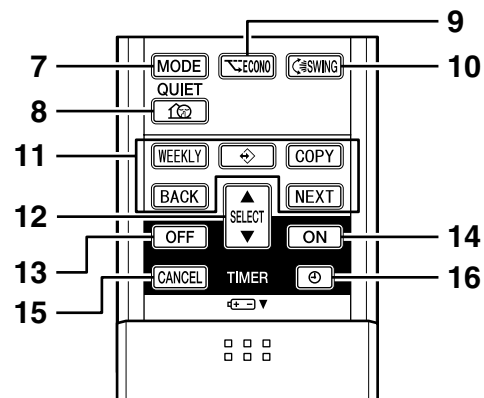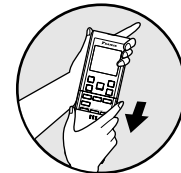

- 9. ECONO button:**
 - ECONO operation
- 10. SWING button:**
 - Adjusting the Airflow Direction
- 11. WEEKLY/PROGRAM/COPY/BACK/NEXT button:**
 - WEEKLY TIMER operation
- 12. SELECT button:**
 - It changes the ON/OFF TIMER and WEEKLY TIMER settings.
- 13. OFF TIMER button**
- 14. ON TIMER button**
- 15. TIMER CANCEL button:**
 - It cancels the timer setting.
• It cannot be used for the WEEKLY TIMER operation.
- 16. CLOCK button**

3.3 AUTO · DRY · COOL · HEAT · FAN Operation


AUTO · DRY · COOL · HEAT · FAN Operation


The air conditioner operates with the operation mode of your choice.
From the next time on, the air conditioner will operate with the same operation mode.

■ To start operation

1. Press “MODE selector button” and select a operation mode.


- Each pressing of the button advances the mode setting in sequence.

- : AUTO
- : DRY
- : COOL
- : HEAT
- : FAN

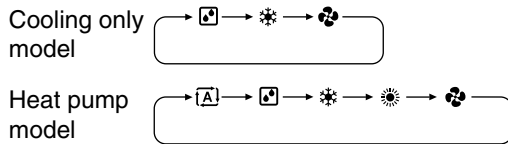

2. Press “ON/OFF button”.

- The OPERATION lamp lights up.

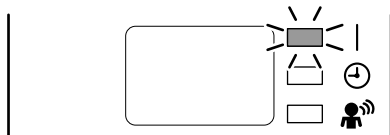


■ To stop operation


3. Press “ON/OFF button” again.

- Then OPERATION lamp goes off.

■ To change the temperature setting




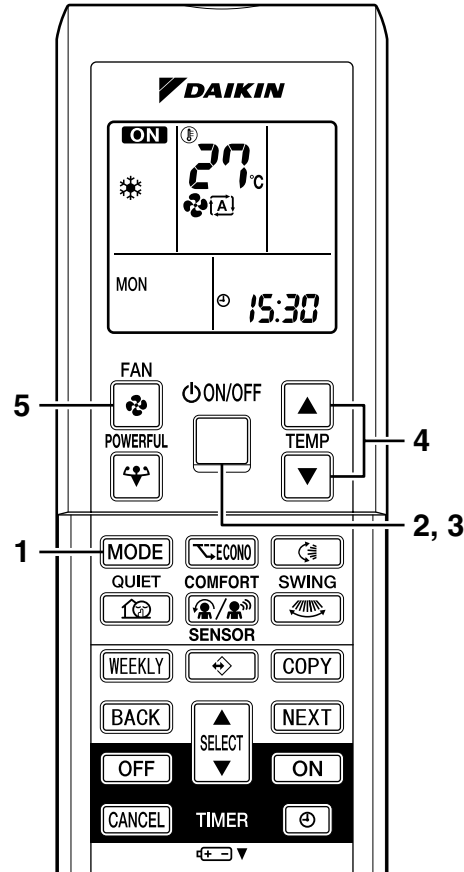

4. Press “TEMPERATURE adjustment button”.

DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like. 




■ To change the airflow rate setting

5. Press “FAN setting button”.

DRY mode	AUTO or COOL or HEAT or FAN mode
The airflow rate setting is not variable.	Five levels of airflow rate setting from “  ” to “  ” plus “  ” “  ” are available. 

- Indoor unit quiet operation

When the airflow is set to “”, the noise from the indoor unit will become quieter. Use this when making the noise quieter.

NOTE

■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.
- A pinging sound may be heard during defrosting operation, which, however does not mean that the air conditioner has failures.

■ Note on COOL operation

- This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, the performance of the air conditioner drops.

■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.

■ Note on AUTO operation

- In AUTO operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, manually change the set temperature.

■ Note on airflow rate setting

- At smaller airflow rates, the cooling (heating) effect is also smaller.


3.4 Adjusting the Airflow Direction


FTXS20/25/35/42/50G2V1B


Adjusting the Airflow Direction


You can adjust the airflow direction to increase your comfort.

■ To adjust the horizontal blades (flaps)


1. Press “SWING button ”.


 - “” is displayed on the LCD and the flaps will begin to swing.


2. When the flaps have reached the desired position, press “SWING button ” once more.


 - The flaps will stop moving.
 - “” disappears from the LCD.


■ To adjust the vertical blades (louvers)

3. Press “SWING button ”.





 - “” is displayed on the LCD.

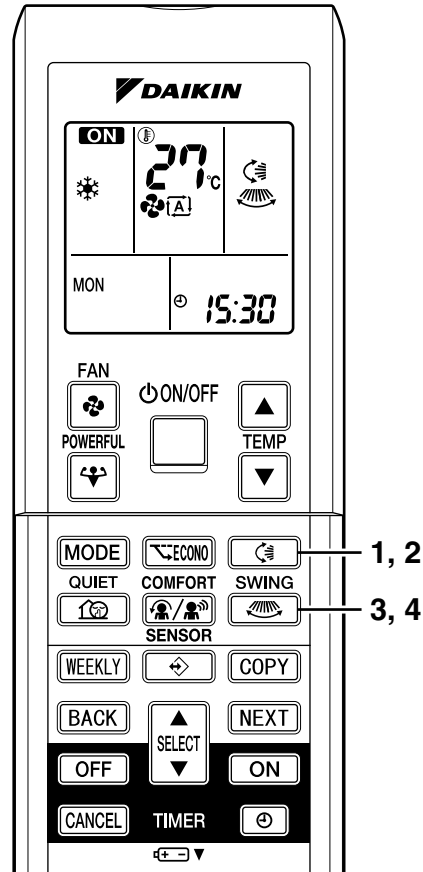4. When the louvers have reached the desired position, press the “SWING button ” once more.

 - The louvers will stop moving.
 - “” disappears from the LCD.



■ To start 3-D Airflow

3. Press the “SWING button ” and the “SWING button ”:
the “” and “” display will light up and the flap and louvers will move in turn.

■ To cancel 3-D Airflow

4. Press either the “SWING button ” or the “SWING button ”.

■ COMFORT AIRFLOW operation

- Check COMFORT AIRFLOW operation in the section of “COMFORT AIRFLOW Operation” and “INTELLIGENT EYE Operation”.

Notes on flaps and louvers angles


- When “SWING button” is selected, the flaps swinging range depends on the operation mode. (See the figure.)

Three-Dimensional (3-D) Airflow

- Using three-dimensional airflow circulates cold air, which tends to be collected at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.

■ ATTENTION

- Always use a remote controller to adjust the angles of the flaps and louvers. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Always use a remote controller to adjust the louvers angles. In side the air outlet, a fan is rotating at a high speed.

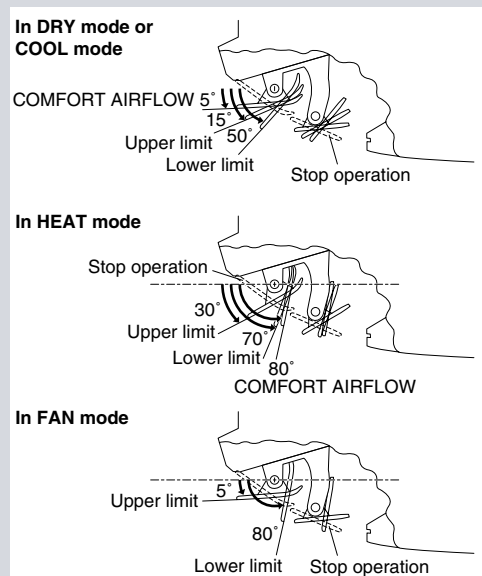


FVXS25/35/50FV1B

Adjusting the Airflow Direction


You can adjust the airflow direction to increase your comfort.


■ To adjust the horizontal blade (flap)

1. Press “SWING button ”.

- “” is displayed on the LCD and the flaps will begin to swing.


2. When the flap has reached the desired position, press “SWING button ” once more.

- The flap will stop moving.
- “” disappears from the LCD.

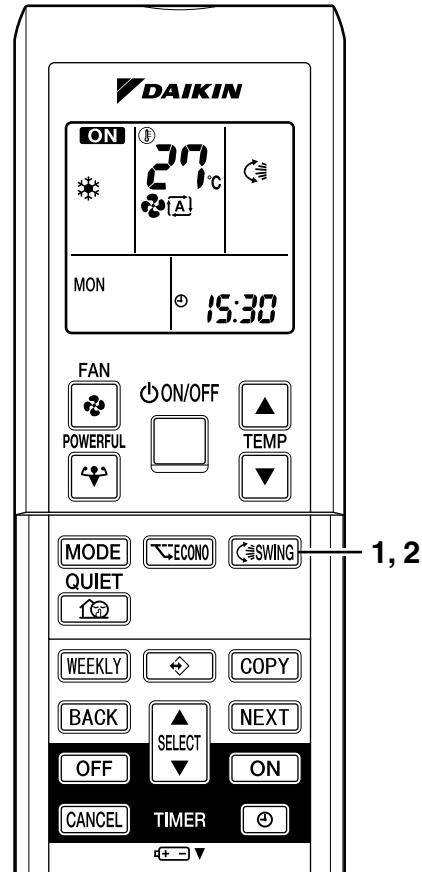

■ To adjust the vertical blades (louvers)

Hold the knob and move the louver.
(You will find a knob on the left-side and the right-side blades.)

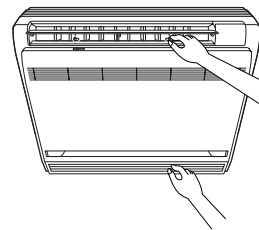


Notes on flap and louvers angle

- Unless “SWING” is selected, you should set the flap at a near-horizontal angle in HEAT mode and at a upward position in COOL or DRY mode to obtain the best performance.

■ ATTENTION

- When adjusting the flap by hand, turn off the unit, and use the remote controller to restart the unit.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.

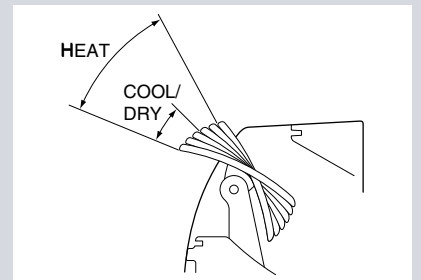


■ Airflow selection

- Make airflow selection according to what suits you.

When setting the airflow selection switch to .

- Air conditioner automatically decides the appropriate blowing pattern depending on the operating mode/situation.

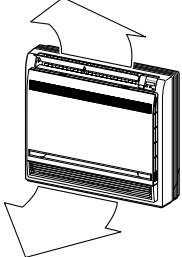Operating mode	Situation	Blowing pattern
COOL mode	<ul style="list-style-type: none"> • When the room has become fully cool, or when one hour has passed since turning on the air conditioner. 	<ul style="list-style-type: none"> • So that air does not come into direct contact with people, air is blown upper air outlet, room temperature is equalized.
	<ul style="list-style-type: none"> • At start of operation or other times when the room is not fully cooled. 	 <ul style="list-style-type: none"> • Air is blown from the upper and lower air outlets for high speed cooling during COOL mode, and for filling the room with warm air during HEAT mode.
HEAT mode	<ul style="list-style-type: none"> • At times other than below. (Normal time.) 	
	<ul style="list-style-type: none"> • At start or when air temperature is low. 	<ul style="list-style-type: none"> • So that air does not come into direct contact with people. Air is blown upper air outlet.

- During Dry mode, so that cold air does not come into direct contact with people, air is blown upper air outlet.

When setting the air outlet selection switch to .

- Regardless of the operating mode or situation, air blows from the upper air outlet.
- Use this switch when you do not want air coming out of the lower air outlet. (While sleeping etc.)

CAUTION

- Do not try to adjust the flap by hand.
- When adjusting by hand, the mechanism may not operate properly or condensation may drip from air outlets.

3.5 COMFORT AIRFLOW and INTELLIGENT EYE Operation

COMFORT AIRFLOW and INTELLIGENT EYE Operation

The INTELLIGENT EYE incorporates infrared sensors to detect the presence of people in the conditioned room.

When these sensors detect people, the louvers will adjust the airflow direction to an area where people are not present. When there are no people in the sensing areas, the air conditioner will go into energy-saving mode.


■ To start operation

1. Press “COMFORT/SENSOR button” and select an operation mode.
 - Choose the desired operation mode out of the following sequence.
 - Each time the “COMFORT/SENSOR button” is pressed a different setting option is displayed on the LCD.



■ To cancel operation


2. Press “COMFORT/SENSOR button”.
 - Press the button to select “Blank”.

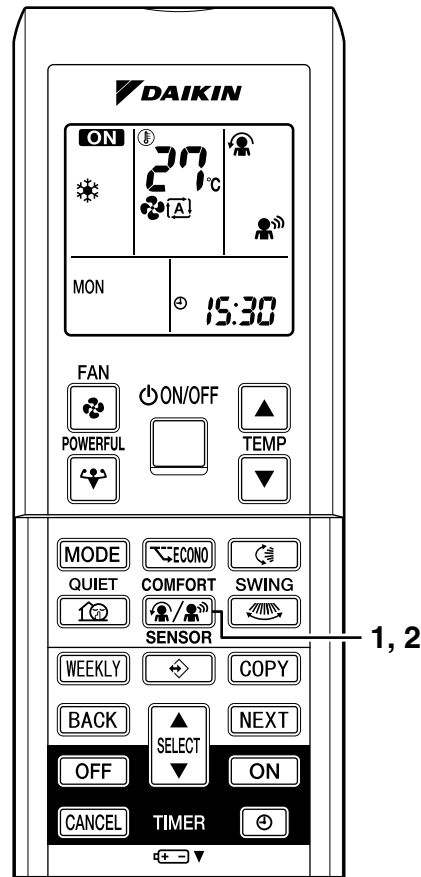


Display	Operation mode	Explanation
	COMFORT AIRFLOW	The flaps will adjust the airflow direction upward while cooling, and adjust the airflow direction downward while heating.
	INTELLIGENT EYE	The sensors will detect the movement of people in the sensing areas and the louvers will adjust the airflow direction to an area where people are not present. When there are no people in the sensing areas, the air conditioner will go into energy-saving mode.
	COMFORT AIRFLOW and INTELLIGENT EYE	The air conditioner will be in COMFORT AIRFLOW operation combined with INTELLIGENT EYE operation.
Blank	No function	—

Notes on “COMFORT AIRFLOW Operation”

- The flap position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation and COMFORT AIRFLOW operation cannot be used at the same time.
- The volume of air will be set to AUTO. If the upward and downward airflow direction is selected, the COMFORT AIRFLOW function will be canceled.
- Priority is given to the function of whichever button is pressed last.
- The COMFORT AIRFLOW function makes the following airflow direction adjustments.
The flaps will move upward while cooling so that the airflow will be directed upward.
The flaps will move downward while heating so that the airflow will be directed downward.

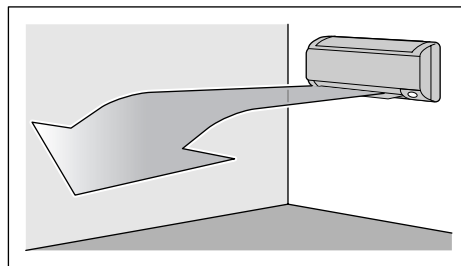

Cooling operation

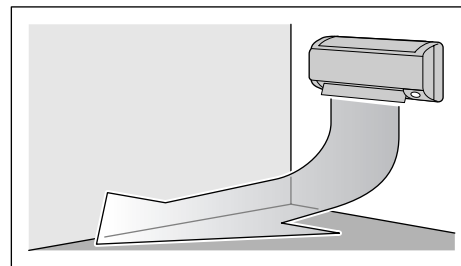


Heating operation



Notes on “INTELLIGENT EYE Operation”

- The INTELLIGENT EYE sensor according to the following situations.


Vertical angle 90°
(Side View)

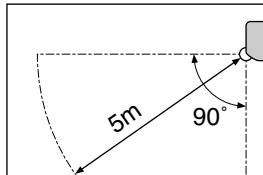


Horizontal angle 110°
(Top View)

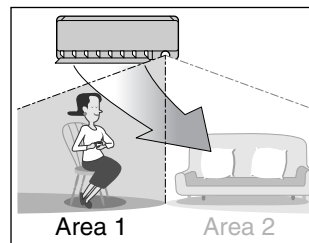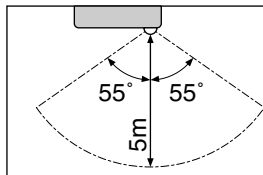

A person is detected in
area 1.

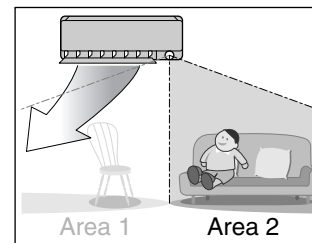


A person is detected in
area 2.

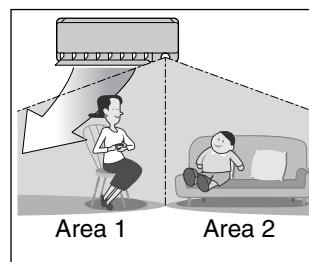

People are detected in
both areas.

(Use the INTELLIGENT EYE
Operation in combination with the
COMFORT AIRFLOW Operation.)

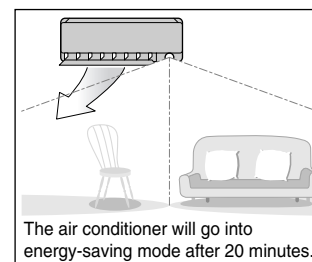

The air conditioner will go into
energy-saving mode after 20 minutes.

No people are detected in
the areas.

* The wind direction may differ from the
illustrated direction depending on the actions
and movements of the people in the areas.

COMFORT AIRFLOW and INTELLIGENT EYE Operation

Notes on “INTELLIGENT EYE Operation”

- While the air conditioner is in INTELLIGENT EYE operation, the louvers will adjust the airflow direction if there are people in the sensing areas of the INTELLIGENT EYE so that the leftward or rightward airflow will not be directed to the people.
If no people are detected in either area 1 or 2 in 20 minutes, the air conditioner will go into energy-saving mode with the set temperature shifted by 2°C.
The air conditioner may go into energy-saving operation even if there are people in the areas. This may occur depending on the clothes the people are wearing if there are no movements of the people in the areas.
- The airflow direction from the louvers will be leftward if there are people in both areas 1 and 2 or if there is a person right in front of the sensors because the sensors on the both sides will detect the person.
- Due to the position of the sensor, people might be exposed to the airflow of the indoor unit if they are close to the front side of the indoor unit.
If there are people close to the front side of the indoor unit or in both areas, it is recommended to use the COMFORT AIRFLOW and INTELLIGENT EYE functions simultaneously. When both of them are in use, the air conditioner will not direct the airflow towards the people.
- Sensor may not detect moving objects further than 5m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- NIGHT SET MODE will not go on during use of INTELLIGENT EYE operation.

“INTELLIGENT EYE” is useful for Energy Saving

■ Energy saving operation

- Change the temperature -2°C in heating / +2°C in cooling / +2°C in dry mode from set temperature.
- Decrease the airflow rate slightly in FAN mode only. If no presence detected in the room during 20 minutes.

■ To combine “COMFORT AIRFLOW Operation” and “INTELLIGENT EYE Operation”

- The air conditioner can go into operation with the COMFORT AIRFLOW and INTELLIGENT EYE functions combined.
The flaps adjust the airflow direction upward (while in cooling operation) and downward (while in heating operation), during which the sensors of the INTELLIGENT EYE are working to detect the movement of people. When the sensors detect people, the louvers will direct the airflow in such way that it will not be blown directly on them. If there are no people, the air conditioner will go into energy-saving operation after 20 minutes.

CAUTION

- Do not place large objects near the sensor.
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect undesirable objects.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.


3.6 POWERFUL Operation

POWERFUL Operation

POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.

■ To start POWERFUL operation


1. Press “POWERFUL button”.

- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” is displayed on the LCD.
- When using POWERFUL operation, there are some functions which are not available.

■ To cancel POWERFUL operation


2. Press “POWERFUL button” again.

- “” disappears from the LCD.

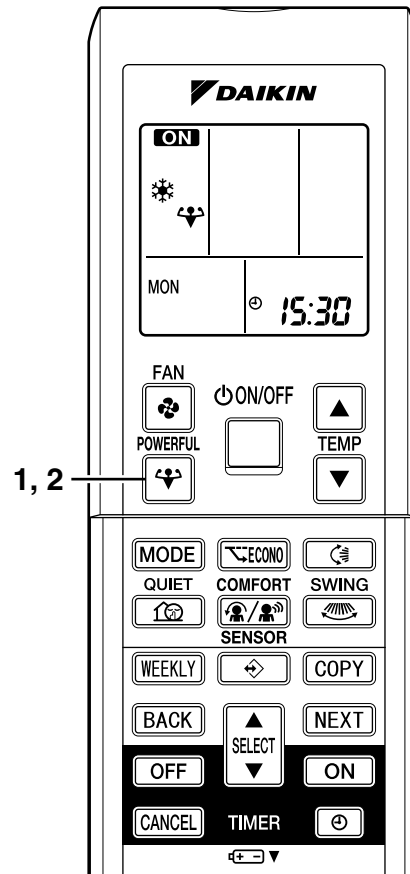

NOTE

■ Notes on POWERFUL operation

- POWERFUL Operation cannot be used together with ECONO, QUIET, or COMFORT Operation. Priority is given to the function of whichever button is pressed last.
- POWERFUL Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.
- **In COOL and HEAT mode**
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the airflow rate be fixed to the maximum setting. The temperature and airflow settings are not variable.
- **In DRY mode**
The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.
- **In FAN mode**
The airflow rate is fixed to the maximum setting.

3.7 OUTDOOR UNIT QUIET Operation

OUTDOOR UNIT QUIET Operation


OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

■ To start OUTDOOR UNIT QUIET operation

1. Press “QUIET button”.
 - “” is displayed on the LCD.

■ To cancel OUTDOOR UNIT QUIET operation

2. Press “QUIET button” again.
 - “” disappears from the LCD.

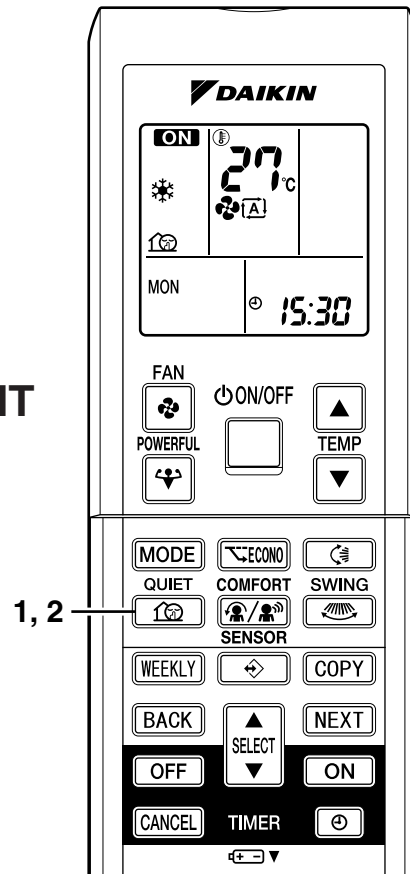

NOTE

■ Note on OUTDOOR UNIT QUIET operation

- This function is available in COOL, HEAT, and AUTO modes. (This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- OUTDOOR UNIT QUIET operation will drop neither the frequency nor fan speed if the frequency and fan speed have been already dropped low enough.

3.8 ECONO Operation

ECONO Operation

ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value.

This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.


■ To start ECONO operation

1. Press “ECONO button”.
 - “” is displayed on the LCD.

■ To cancel ECONO operation


2. Press “ECONO button” again.
 - “” disappears from the LCD.

Running current and power consumption

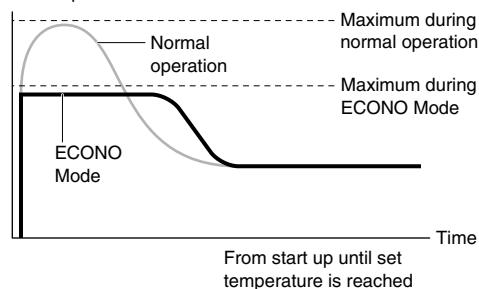


- This diagram is a representation for illustrative purposes only.

* The maximum running current and power consumption of the air conditioner in ECONO mode vary with the connecting outdoor unit.

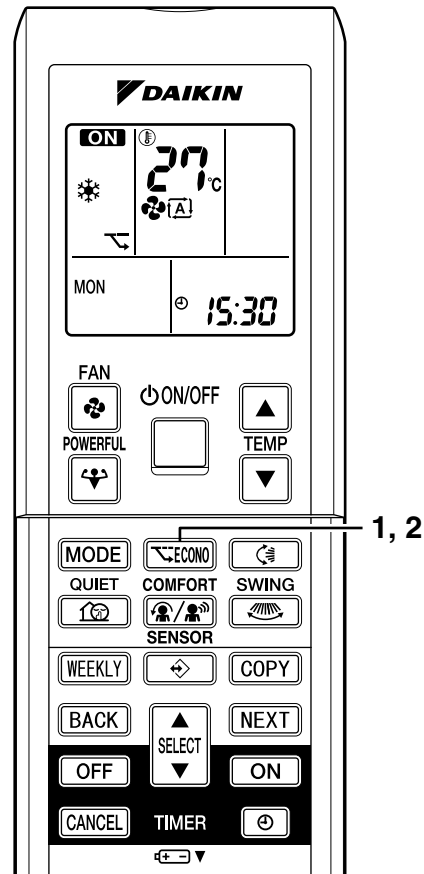

NOTE

- ECONO Operation can only be set when the unit is running. Pressing the OFF button causes the setting to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in AUTO, COOL, DRY and HEAT modes.
- POWERFUL and ECONO operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- Power consumption may not drop even if ECONO operation is used if the level of power consumption is already low.

3.9 TIMER Operation

TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

■ To use OFF TIMER operation

- Check that the clock is correct.
If not, set the clock to the present time.

1. Press “OFF TIMER button”.

0:00 is displayed.


OFF blinks.

2. Press “SELECT button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press “OFF TIMER button” again.

- The TIMER lamp lights up.

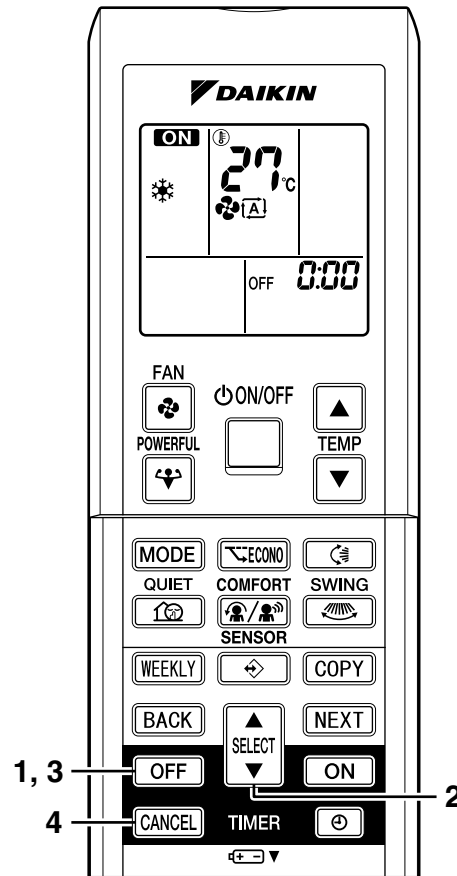

■ To cancel the OFF TIMER Operation

4. Press “CANCEL button”.

- The TIMER lamp goes off.

NOTE

- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user. (Maximum approx. 10 minutes)

■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time.

1. Press “ON TIMER button”.

6:00 is displayed.



ON blinks.

2. Press “SELECT button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press “ON TIMER button” again.

- The TIMER lamp lights up.

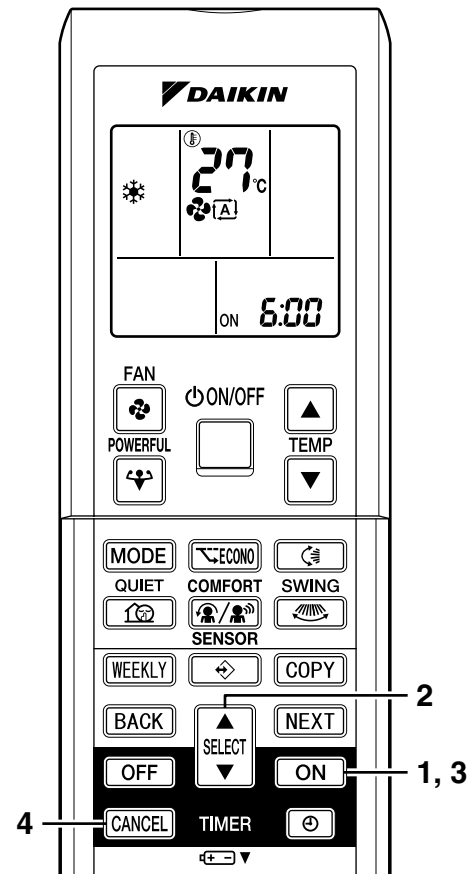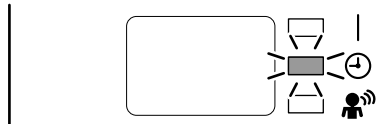


■ To cancel ON TIMER operation

4. Press “CANCEL button”.

- The TIMER lamp goes off.

■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the two timers is shown below.

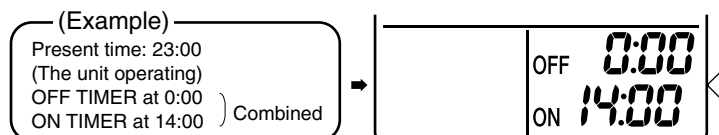

ATTENTION

- In the following cases, set the timer again.
 - After a breaker has turned OFF.
 - After a power failure.
 - After replacing batteries in the remote controller.

3.10 WEEKLY TIMER Operation


WEEKLY TIMER Operation

Up to 4 timer settings can be saved for each day of the week. It is convenient if the WEEKLY TIMER is set according to the family's life style.

■ Using in these cases of WEEKLY TIMER

An example of WEEKLY TIMER settings is shown below.

Example: The same timer settings are made for the week from Monday through Friday while different timer settings are made for the weekend.

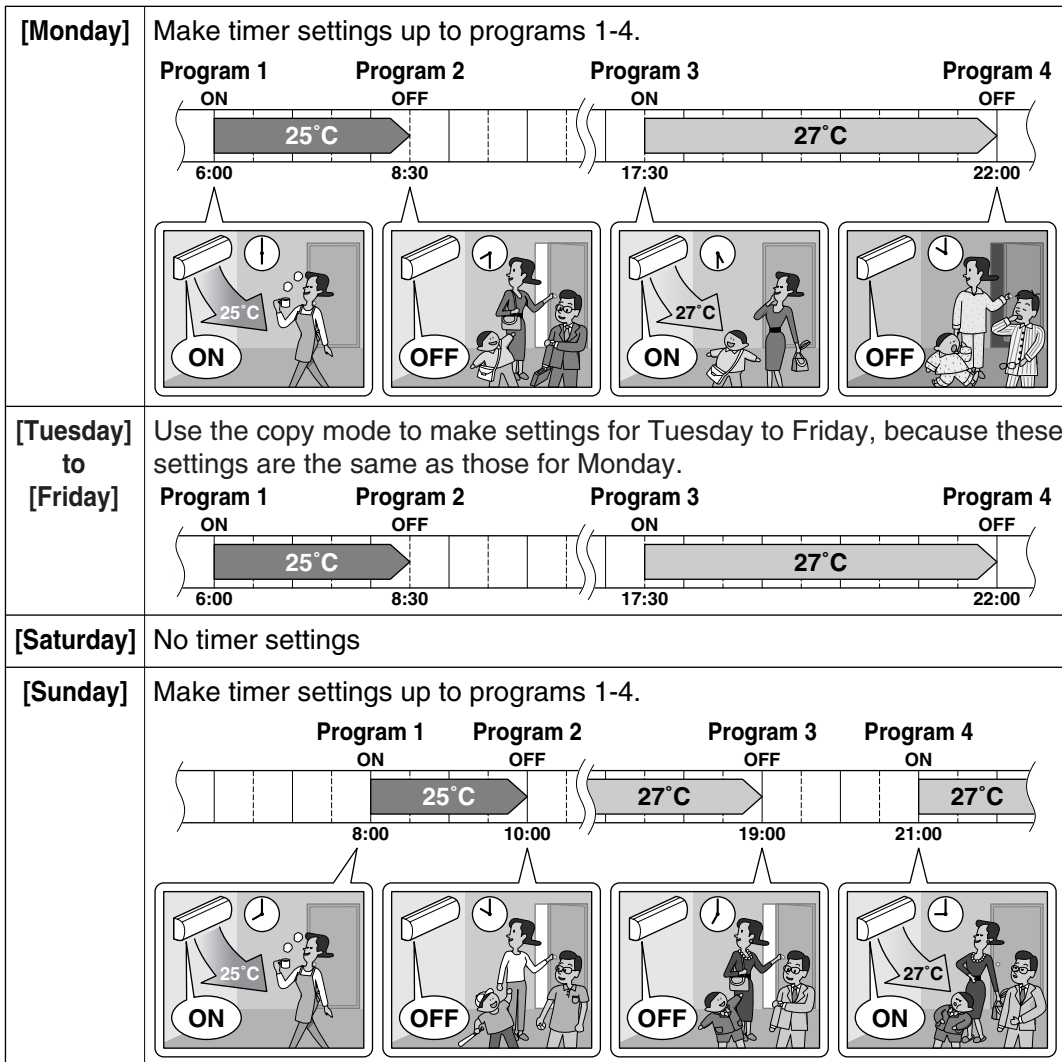



- Up to 4 reservations per day and 28 reservations per week can be set in the WEEKLY TIMER. The effective use of the copy mode ensures ease of making reservations.
- The use of ON-ON-ON-ON settings, for example, makes it possible to schedule operating mode and set temperature changes. Furthermore, by using OFF-OFF-OFF-OFF settings, only the turn-OFF time of each day can be set. This will turn OFF the air conditioner automatically if the user forgets to turn it OFF.

■ To use WEEKLY TIMER operation

Setting mode

- Make sure the day of the week and time are set. If not, set the day of the week and time.

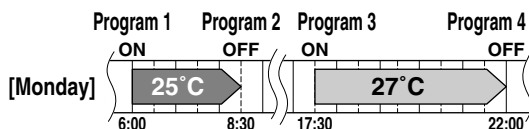


1. Press “ button”.

- The day of the week and the reservation number of the current day will be displayed.
- 1 to 4 settings can be made per day.

2. Press the “SELECT button” to select the desired day of the week and reservation number.


- Pressing the “SELECT button” changes the reservation number and the day of the week.

3. Press “NEXT button”.

- The day of the week and reservation number will be set.
- “ WEEKLY” and “ON” blink.


4. Press “SELECT button” to select the desired mode.

- Pressing the “SELECT button” changes “ON” or “OFF” setting in sequence.



- In case the reservation has already been set, selecting “blank” deletes the reservation.
- Go to STEP 9 if “blank” is selected.


5. Press “NEXT button”.


- The ON/OFF TIMER mode will be set.
- “ WEEKLY” and the time blink.

6. Press “SELECT button” to select the desired time.


- The time can be set between 0:00 and 23:50 in 10 minute intervals.
- To return to the ON/OFF TIMER mode setting, press “BACK button”.
- Go to STEP 9 when setting the OFF TIMER..

7. Press “NEXT button”.

- The time will be set.
- “ WEEKLY” and the temperature blink.

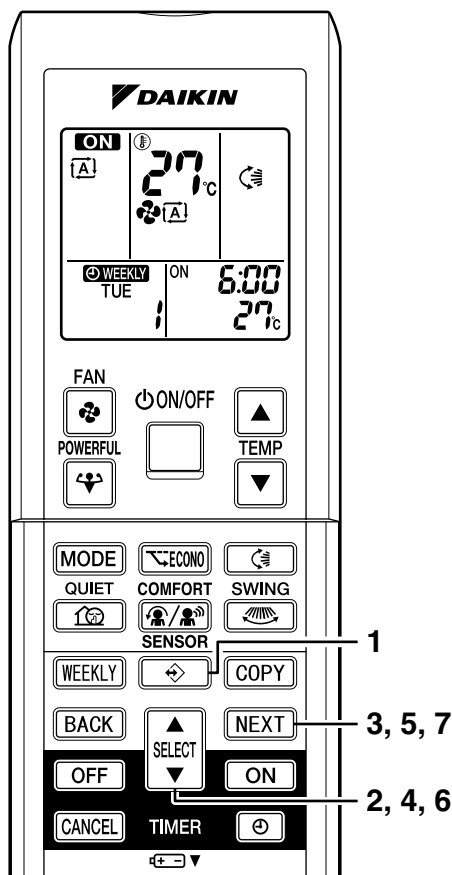

Setting Displays

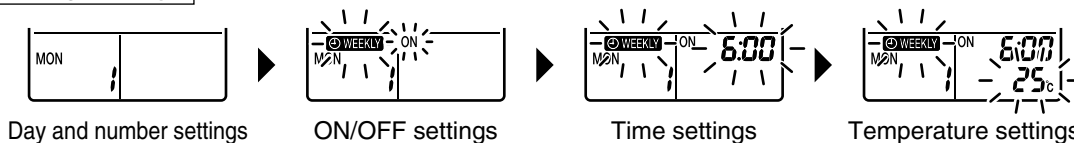

WEEKLY TIMER Operation


8. Press “SELECT button” to select the desired temperature.


- The temperature can be set between 10°C and 32°C.
Cooling: The unit operates at 18°C even if it is set at 10 to 17°C.
Heating: The unit operates at 30°C even if it is set at 31 to 32°C.
- To return to the time setting, press “BACK button”.
- The set temperature is only displayed when the mode setting is on.

9. Press “NEXT button”.

- The temperature will be set and go to the next reservation setting.
- To continue further settings, repeat the procedure from STEP 4.



10. Press “ button” to complete the setting.

- Be sure to direct the remote controller toward the indoor unit and check for a receiving tone and flashing the operation lamp.
- “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
- The TIMER lamp lights up.
- A reservation made once can be easily copied and the same settings used for another day of the week. Refer to **Copy mode**.

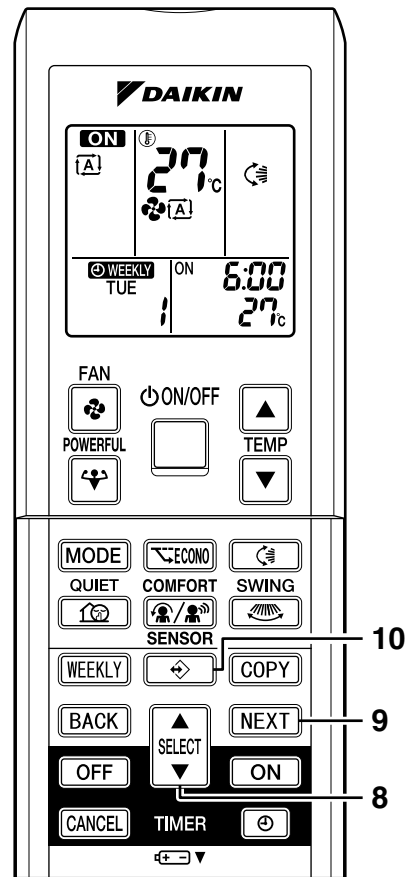


NOTE

■ Notes on WEEKLY TIMER operation

- Do not forget to set the clock on the remote control first.
- The day of the week, ON/OFF TIMER mode, time and set temperature (only for ON TIMER mode) can be set with WEEKLY TIMER. Other settings for ON TIMER are based on the settings just before the operation.
- Both WEEKLY TIMER and ON/OFF TIMER operation cannot be used at the same time. The ON/OFF TIMER operation has priority if it is set while WEEKLY TIMER is still active. The WEEKLY TIMER will go into standby state, and “ WEEKLY” will disappear from the LCD. When ON/OFF TIMER is up, the WEEKLY TIMER will automatically become active.
- Only the time and set temperature set with the weekly timer are sent with the “ button”. Set the weekly timer only after setting the operation mode, the fan strength, and the fan direction ahead of time.
- Shutting the breaker off, power failure, and other similar events will render operation of the indoor unit’s internal clock inaccurate. Reset the clock.
- The “BACK button” can be used only for the time and temperature settings. It cannot be used to go back to the reservation number.

Copy mode


- A reservation made once can be copied another day of the week. The whole reservation of the selected day of the week will be copied.

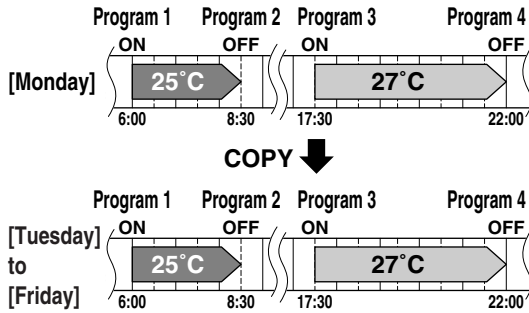


1. Press “” button”.
2. Press “SELECT button” to confirm the day of the week to be copied.
3. Press “COPY button” to activate copy mode.
 - The whole reservation of the selected day of the week will be copied.
4. Press “SELECT button” to select the destination day of the week.
5. Press “COPY button”.

 - The reservation will be copied to the selected day of the week. The whole reservation of the selected day of the week will be copied.
 - To continue copying the settings to other days of the week, repeat STEP 4 and STEP 5.

6. Press “” button” to complete the setting.
 - “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.

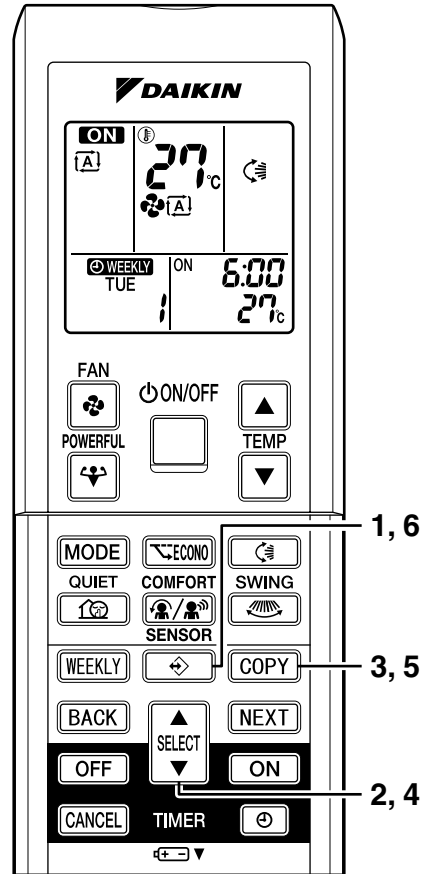

Setting Displays

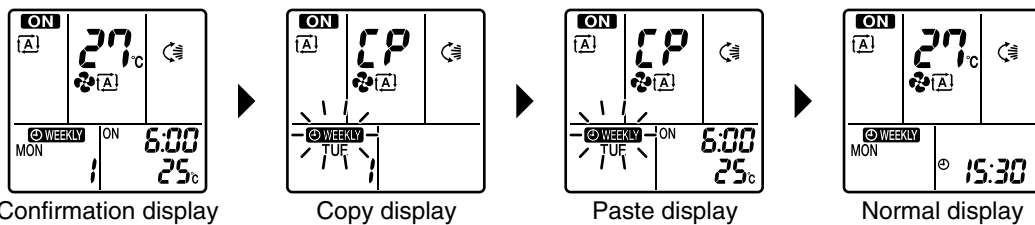




NOTE

■ COPY MODE


- The entire reservation of the source day of the week is copied in the copy mode. In the case of making a reservation change for any day of the week individually after copying the content of weekly reservations, press “” button” and change the settings in the steps of **Setting mode**.

WEEKLY TIMER Operation



■ Confirming a reservation

- The reservation can be confirmed.
- Press “” button.
 - The day of the week and the reservation number of the current day will be displayed.
 - Press “SELECT button” to select the day of the week and the reservation number to be confirmed.
 - Pressing the “SELECT button” displays the reservation details.
 - To change the confirmed reserved settings, select the reservation number and press “NEXT button”. The mode is switched to setting mode. Go to **Setting mode** STEP 4.
 - Press “” button” to exit confirming mode.
 - “ WEEKLY” is displayed on the LCD and WEEKLY TIMER operation is activated.
 - The TIMER lamp lights up.

Setting Displays



■ To deactivate WEEKLY TIMER operation


- Press “WEEKLY button” while “ WEEKLY” is displayed on the LCD.
 - The “ WEEKLY” will disappear from the LCD.
 - The TIMER lamp goes off.
 - To reactivate the WEEKLY TIMER operation, press the “WEEKLY button” again.
 - If a reservation deactivated with “WEEKLY button” is activated once again, the last reservation mode will be used.

■ To delete reservations

The individual reservation


- Refer to **Setting mode** .
When selecting desired mode at STEP 4 in setting mode, select “blank”. The reservation will be deleted.

The reservations for each day of the week

- This function can be used for deleting reservations for each day of the week.
- Press “” button”.
 - Select the day of the week to be canceled with the “SELECT button”.
 - Hold the “WEEKLY button” for 5 seconds.
 - The reservation of the selected day of the week will be deleted.

All reservations

- Hold “WEEKLY button” for 5 seconds while normal display.
 - Be sure to direct the remote control toward the main unit and check for a receiving tone.
 - This operation is not effective while WEEKLY TIMER is being set.
 - All reservations will be deleted.

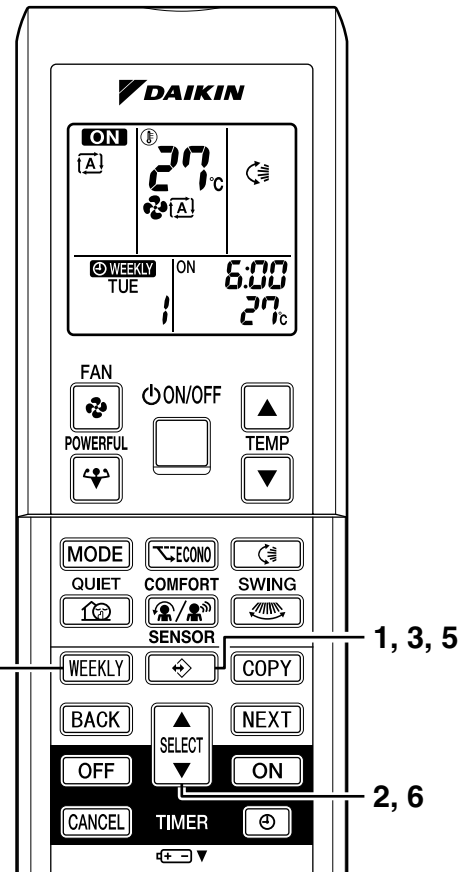


3.10.1 Note for Multi System

Note for Multi System

《《What is a “Multi System”?》》

This system has one outdoor unit connected to multiple indoor units.

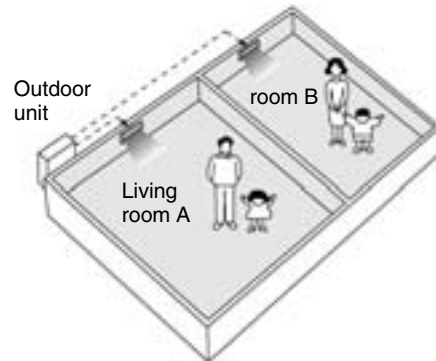

■ Selecting the operation mode

When more than one indoor unit is operating, priority is given to the first unit that was turned on.

In this case, set the units that are turned on later to the same operation mode (*1) as the first unit.

Otherwise, they will enter the Standby Mode, and the operation lamp will flash; this does not indicate malfunction.

(*1)

- COOL, DRY and FAN mode may be used at the same time.
- AUTO mode automatically selects COOL mode or HEAT mode based on the room temperature. Therefore, AUTO mode is available when selecting the same operation mode as that of the room with the first unit to be turned on.

《CAUTION》

Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.

If the operation mode of the first room is **FAN Mode**, then using **Heating Mode** in any room after this will give priority to **heating**. In this situation, the air conditioner running in FAN Mode will go on standby, and the operation lamp will flash.

■ OUTDOOR UNIT QUIET operation

When using the OUTDOOR UNIT QUIET operation feature with the Multi system, set all indoor units to OUTDOOR UNIT QUIET operation using their remote controllers.

When clearing OUTDOOR UNIT QUIET operation, clear one of the operating indoor units using their remote controller.

However OUTDOOR UNIT QUIET operation display remains on the remote controller for other rooms. We recommend you release all rooms using their remote controllers.

4. FTXG-E, CTXG-E, FLK(X)S, FDK(X)S Series

4.1 Manual Contents and Reference Page

Model Series	Wall Mounted Type	Floor/Ceiling Suspended Dual Type	Duct Connected Type
	FTXG25/35EV1BW(S) CTXG50EV1BW(S)	FLK(X)S25-50BAVMB	FDK(X)S25/35EAVMB FDK(X)S50CVMB
Read Before Operation			
Remote Controller	142	143	144
Operation			
AUTO, DRY, COOL, HEAT, FAN Operation ★1	145	145	145
Adjusting the Airflow Direction	147	149	—
POWERFUL Operation ★1	151	151	151
OUTDOOR UNIT QUIET Operation ★1	152	152	152
HOME LEAVE Operation ★2	—	153	153
INTELLIGENT EYE Operation	155	—	—
TIMER Operation ★1	157	157	157
Note for Multi System	159	159	159
Drawing No.	3P194513-2C	3P194444-5C	3P196326-9C


★1 : Illustrations are for wall mounted type as representative.

★2 : Illustrations are for duct connected type as representative.

4.2 Remote Controller

FTXG25/35EV1BW(S), CTXG50EV1BW(S)


■ Remote Controller

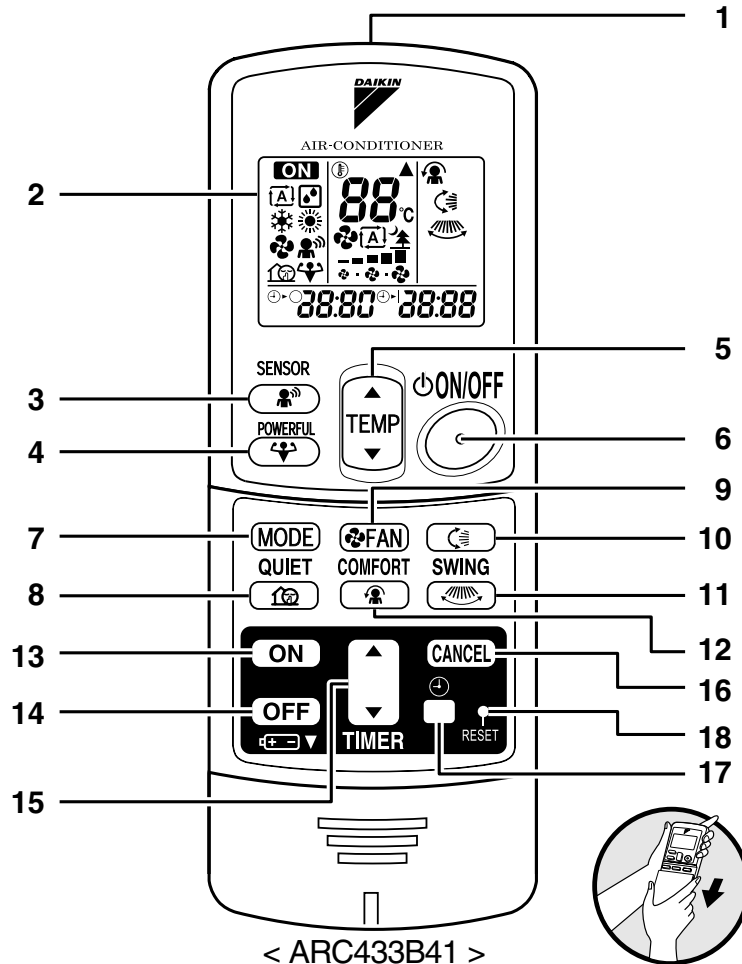

- | | |
|--|--|
| <p>1. Signal transmitter:</p> <ul style="list-style-type: none"> • It sends signals to the indoor unit. <p>2. Display:</p> <ul style="list-style-type: none"> • It displays the current settings. <p>(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)</p> <p>3. SENSOR button: INTELLIGENT EYE operation</p> <p>4. POWERFUL button:
POWERFUL operation</p> <p>5. TEMPERATURE adjustment buttons:</p> <ul style="list-style-type: none"> • It changes the temperature setting. <p>6. ON/OFF button:</p> <ul style="list-style-type: none"> • Press this button once to start operation. Press once again to stop it. <p>7. MODE selector button:</p> <ul style="list-style-type: none"> • It selects the operation mode. <p>(AUTO/DRY/COOL/HEAT/FAN)</p> | <p>8. QUIET button: OUTDOOR UNIT QUIET operation</p> <p>9. FAN setting button:</p> <ul style="list-style-type: none"> • It selects the air flow rate setting. <p>10. SWING button:</p> <ul style="list-style-type: none"> • Flap (Horizontal blade) <p>11. SWING button:</p> <ul style="list-style-type: none"> • Louvers (Vertical blades) <p>12. COMFORT AIRFLOW mode button</p> <p>13. ON TIMER button</p> <p>14. OFF TIMER button</p> <p>15. TIMER Setting button:</p> <ul style="list-style-type: none"> • It changes the time setting. <p>16. TIMER CANCEL button:</p> <ul style="list-style-type: none"> • It cancels the timer setting. <p>17. CLOCK button</p> <p>18. RESET button:</p> <ul style="list-style-type: none"> • Restart the unit if it freezes. |
|--|--|

FLK(X)S25/35/50BAVMB

■ Remote Controller

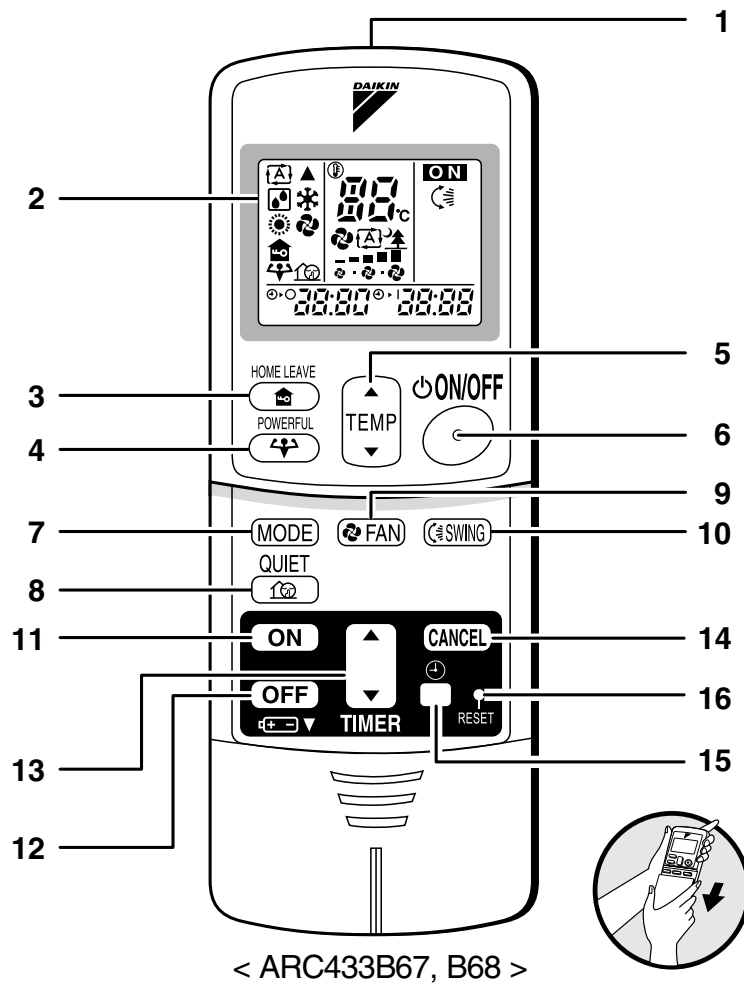**1. Signal transmitter:**

- It sends signals to the indoor unit.

2. Display:

- It displays the current settings.
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

3. HOME LEAVE button:

HOME LEAVE operation

4. POWERFUL button:

POWERFUL operation

5. TEMPERATURE adjustment buttons:

- It changes the temperature setting.

6. ON/OFF button:

- Press this button once to start operation.
Press once again to stop it.

7. MODE selector button:

- It selects the operation mode.
(AUTO/DRY/COOL/HEAT/FAN)

8. QUIET button: OUTDOOR UNIT QUIET operation**9. FAN setting button:**

- It selects the air flow rate setting.

10. SWING button**11. ON TIMER button****12. OFF TIMER button****13. TIMER Setting button:**

- It changes the time setting.

14. TIMER CANCEL button:


- It cancels the timer setting.

15. CLOCK button**16. RESET button:**

- Restart the unit if it freezes.
- Use a thin object to push.

FDK(X)S25/35EAVMB, FDK(X)S50CVMB

■ Remote Controller

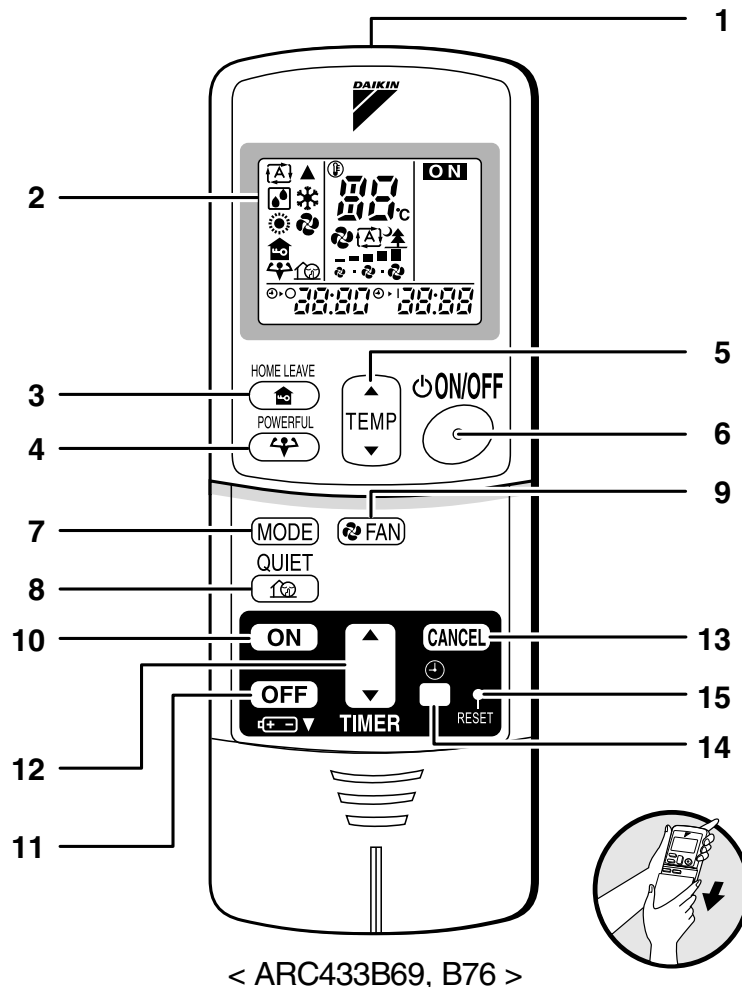**1. Signal transmitter:**

- It sends signals to the indoor unit.

2. Display:

- It displays the current settings.
(In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

3. HOME LEAVE button:

HOME LEAVE operation

4. POWERFUL button:

POWERFUL operation

5. TEMPERATURE adjustment buttons:

- It changes the temperature setting.

6. ON/OFF button:

- Press this button once to start operation.
Press once again to stop it.

7. MODE selector button:

- It selects the operation mode.
(AUTO/DRY/COOL/HEAT/FAN)

8. QUIET button: OUTDOOR UNIT QUIET operation**9. FAN setting button:**

- It selects the air flow rate setting.

10. ON TIMER button**11. OFF TIMER button****12. TIMER Setting button:**

- It changes the time setting.

13. TIMER CANCEL button:

- It cancels the timer setting.

14. CLOCK button**15. RESET button:**

- Restart the unit if it freezes.
- Use a thin object to push.

4.3 AUTO · DRY · COOL · HEAT · FAN Operation

AUTO · DRY · COOL · HEAT · FAN Operation

The air conditioner operates with the operation mode of your choice.
 From the next time on, the air conditioner will operate with the same operation mode.


■ To start operation

1. Press “MODE selector button” and select a operation mode.
 - Each pressing of the button advances the mode setting in sequence.

- : AUTO
- : DRY
- : COOL
- : HEAT
- : FAN



2. Press “ON/OFF button”.
 - The operation lamp will light up and the panel will open.

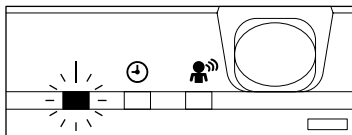


■ To stop operation

3. Press “ON/OFF button” again.
 - The operation lamp will go off and the panel will close.

■ To change the temperature setting



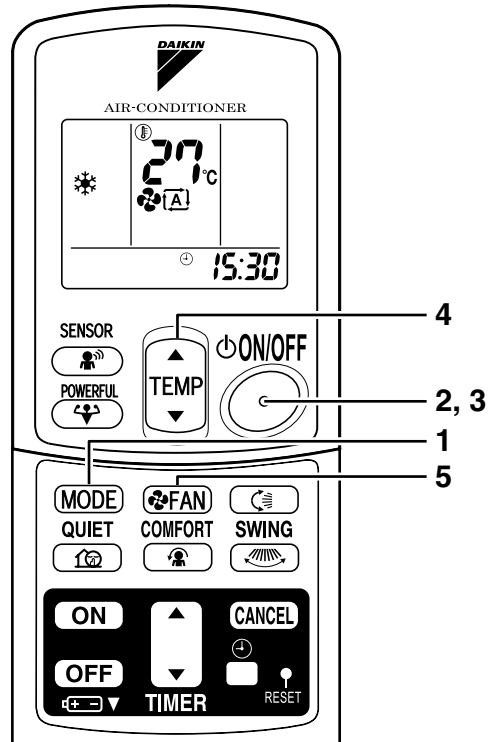


4. Press “TEMPERATURE adjustment button”.

DRY or FAN mode	AUTO or COOL or HEAT mode
The temperature setting is not variable.	Press “▲” to raise the temperature and press “▼” to lower the temperature.
	Set to the temperature you like.




■ To change the air flow rate setting

5. Press “FAN setting button”.

DRY mode	AUTO or COOL or HEAT or FAN mode
The air flow rate setting is not variable.	Five levels of air flow rate setting from “  ” to “  ” plus “  ” “  ” are available. 

- Indoor unit quiet operation

When the air flow is set to “”, the noise from the indoor unit will become quieter. Use this when making the noise quieter.

The unit might lose capacity when the air flow rate is set to a weak level.

NOTE

■ Note on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner.
- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of heating operation, it takes some time before the room gets warmer.
- In heating operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of indoor unit.

■ Note on COOL operation

- This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, performance drops.

■ Note on DRY operation

- The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and air flow rate, so manual adjustment of these functions is unavailable.

■ Note on AUTO operation

- In AUTO operation, the system selects an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects setting at a regular interval to bring the room temperature to user-setting level.
- If you do not like AUTO operation, you can manually select the operation mode and setting you like.

■ Note on air flow rate setting

- At smaller air flow rates, the cooling (heating) effect is also smaller.





4.4 Adjusting the Airflow Direction


FTXG25/35EV1BW(S), CTXG50EV1BW(S)

Adjusting the Air Flow Direction

You can adjust the air flow direction to increase your comfort.

■ To adjust the horizontal blade (flap)

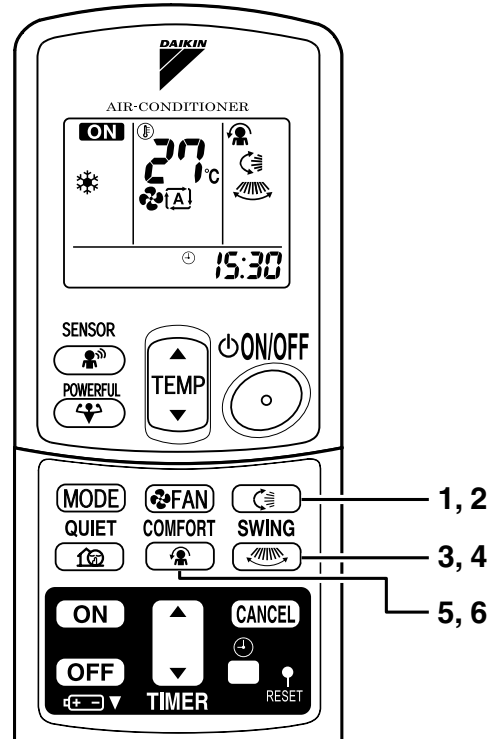



1. Press “SWING button ”.
 - “” is displayed on the LCD.
2. When the flap has reached the desired position, press “SWING button ” once more.
 - The flap will stop moving.
 - “” disappears from the LCD.



■ To adjust the vertical blades (louvers)

3. Press “SWING button ”.
 - “” is displayed on the LCD.
4. When the louvers have reached the desired position, press the “SWING button ” once more.
 - The louvers will stop moving.

■ To 3-D Airflow


3. Press the “SWING button ” and the “SWING button ”: the “” and “” display will light up and the flap and louvers will move in turn.

■ To cancel 3-D Airflow

4. Press either the “SWING button ” or the “SWING button ”.


■ To start COMFORT AIRFLOW operation

5. Press “COMFORT AIRFLOW button”.


- The flap orientation will change, preventing air from blowing directly on the occupants of the room.
 - “” is displayed on the LCD.
- <COOL/DRY> The flap will go up.
- <HEAT> The flap will go down.

■ To cancel COMFORT AIRFLOW operation

6. Press “COMFORT AIRFLOW button” again.

- The flaps will return to the memory position from before COMFORT AIRFLOW mode.
- “” disappears from the LCD.

NOTE

- When “SWING button ” is selected, the flap swinging range depends on the operation mode. (See the figure.)

Three-Dimensional (3-D) Airflow

- Using three-dimensional airflow circulates cold air, which tends to collect at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.


Comfort Airflow

- The air flow is set automatically.
- The air direction is as shown in the figure at right.


■ ATTENTION

- Always use a remote controller to adjust the flap angle. If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Always use a remote controller to adjust the louvers angles.


In COOL or DRY mode

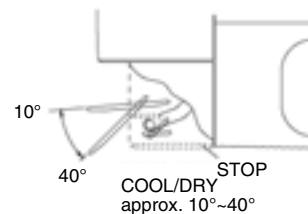

In HEAT or FAN mode

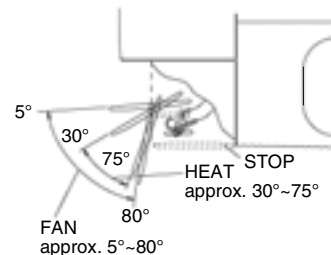

In COMFORT AIRFLOW mode

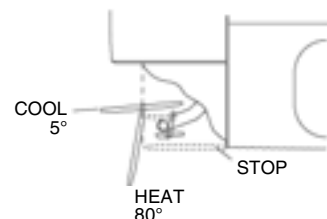


FLK(X)S25/35/50BAVMB

Adjusting the Airflow Direction


You can adjust the air flow direction to increase your comfort.


■ To adjust the horizontal blade (flap)

1. Press “SWING button”.

- “” is displayed on the LCD and the flaps will begin to swing.


2. When the flaps have reached the desired position, press “SWING button” once more.

- The flap will stop moving.
- “” disappears from the LCD.

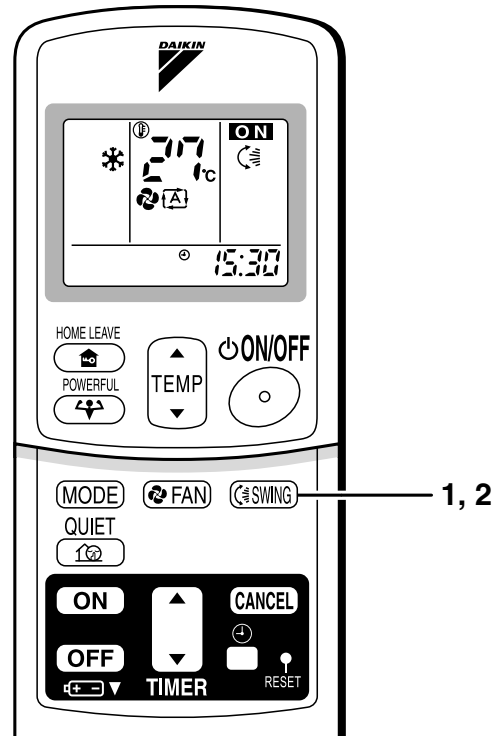

■ To adjust the vertical blades (louvers)

- When adjusting the louver, use a robust and stable stool and watch your steps carefully.
Hold the knob and move the louvers.
(You will find a knob on the left side and the right side blades.)

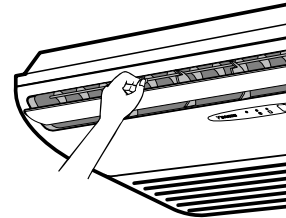


Notes on flap and louvers angles.

- Unless [SWING] is selected, you should set the flap at a near- horizontal angle in COOL or DRY mode to obtain the best performance.
- In COOL or DRY mode, if the flap is fixed at a downward position, the flap automatically moves in about 60 minutes to prevent condensation on it.

■ ATTENTION

- Always use a remote controller to adjust the flap angle.
If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvers. Inside the air outlet, a fan is rotating at a high speed.

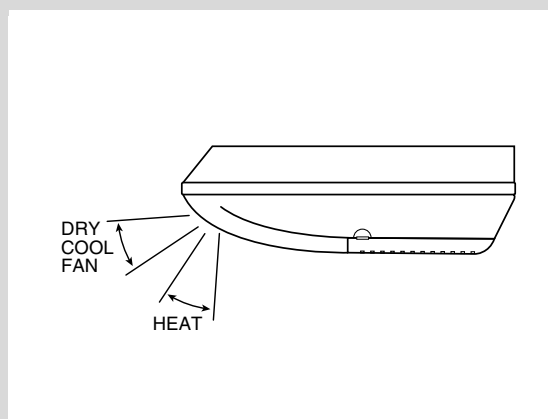


4.5 POWERFUL Operation

POWERFUL Operation

POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.

■ To start POWERFUL operation


1. Press “POWERFUL button”.

- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the settings which were used before POWERFUL operation.
- When using POWERFUL operation, there are some functions which are not available.
- “” is displayed on the LCD.

■ To cancel POWERFUL operation


2. Press “POWERFUL button” again.

- “” disappears from the LCD.

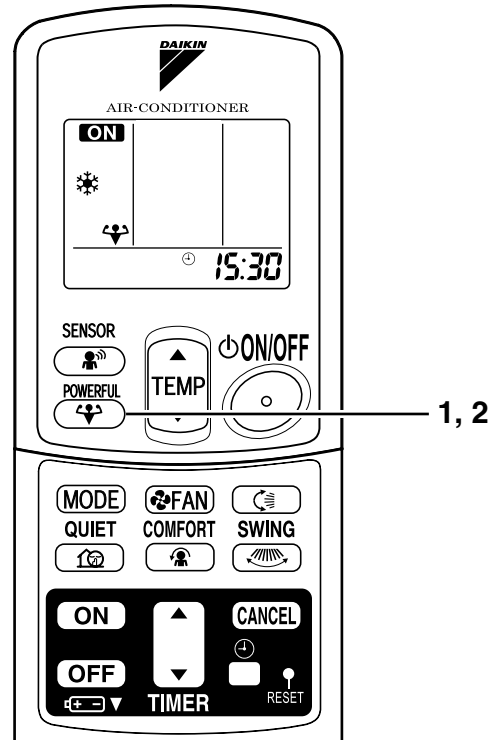

NOTE

■ Notes on POWERFUL operation

- POWERFUL Operation cannot be used together with QUIET, or COMFORT Operation. Priority is given to the function of whichever button is pressed last. (This does not include QUIET operation.)
- POWERFUL Operation can only be set when the unit is running. Pressing the operation stop button causes the settings to be canceled, and the “” disappears from the LCD.
- **In COOL and HEAT mode**
To maximize the cooling (heating) effect, the capacity of outdoor unit must be increased and the air flow rate be fixed to the maximum setting. The temperature and air flow settings are not variable.
- **In DRY mode**
The temperature setting is lowered by 2.5°C and the air flow rate is slightly increased.
- **In FAN mode**
The air flow rate is fixed to the maximum setting.
- **When using priority-room setting**
See “Note for multi system”

4.6 OUTDOOR UNIT QUIET Operation

OUTDOOR UNIT QUIET Operation


OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

■ To start OUTDOOR UNIT QUIET operation

1. Press “QUIET button”.
 - “” is displayed on the LCD.


■ To cancel OUTDOOR UNIT QUIET operation

2. Press “QUIET button” again.
 - “” disappears from the LCD.

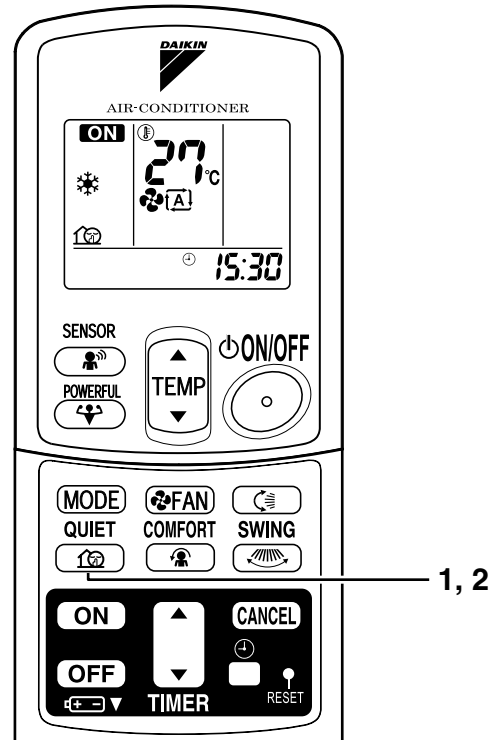

NOTE

■ Note on OUTDOOR UNIT QUIET operation

- If using a multi system, this function will work only when the OUTDOOR UNIT QUIET operation is set on all operated indoor units. However, if using priority-room setting, see “Note for multi system”
- This function is available in COOL, HEAT, and AUTO modes. (This is not available in FAN and DRY mode.)
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time. Priority is given to the function of whichever button is pressed last.
- If operation is stopped using the remote controller or the main unit ON/OFF switch when using OUTDOOR UNIT QUIET operation, “” will remain on the remote controller display.


4.7 HOME LEAVE Operation


HOME LEAVE Operation

HOME LEAVE operation is a function which allows you to record your preferred temperature and air flow rate settings.

■ To start HOME LEAVE operation


1. Press “HOME LEAVE button”.


- “” is displayed on the LCD.
- The HOME LEAVE lamp lights up.

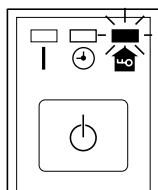

■ To cancel HOME LEAVE operation

2. Press “HOME LEAVE button” again.



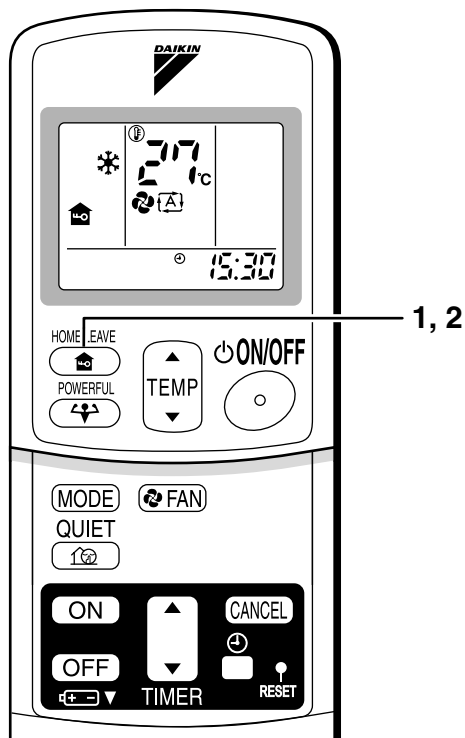



- The HOME LEAVE lamp goes off.
- “” disappears from the LCD.






Before using HOME LEAVE operation.

■ To set the temperature and air flow rate for HOME LEAVE operation

When using HOME LEAVE operation for the first time, please set the temperature and air flow rate for HOME LEAVE operation. Record your preferred temperature and air flow rate.

	Initial setting		Selectable range	
	temperature	Air flow rate	temperature	Air flow rate
Cooling	25°C	“  ”	18-32°C	5 step, “  ” and “  ”
Heating	25°C	“  ”	10-30°C	5 step, “  ” and “  ”

1. Press “HOME LEAVE button”. Make sure “” is displayed in the remote control display.
2. Adjust the set temperature with “” or “” as you like.
3. Adjust the air flow rate with “FAN” setting button as you like.

Home leave operation will run with these settings the next time you use the unit. To change the recorded information, repeat steps 1 – 3.

■ What's the HOME LEAVE operation?


Is there a set temperature and air flow rate which is most comfortable, a set temperature and air flow rate which you use the most? HOME LEAVE operation is a function that allows you to record your favorite set temperature and air flow rate. You can start your favorite operation mode simply by pressing the HOME LEAVE button on the remote control. This function is convenient in the following situations.

■ Useful in these cases


1. Use as an energy-saving mode.

Set the temperature 2-3°C higher (cooling) or lower (heating) than normal. Setting the fan strength to the lowest setting allows the unit to be used in energy-saving mode. Also convenient for use while you are out or sleeping.

- **Every day before you leave the house...**

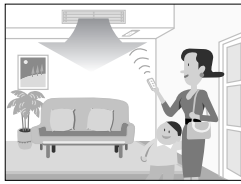

When you go out, push the "HOME LEAVE Operation" button, and the air conditioner will adjust capacity to reach the preset temperature for HOME LEAVE Operation.

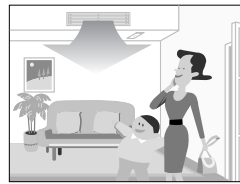


When you return, you will be welcomed by a comfortably air conditioned room.



Push the "HOME LEAVE Operation" button again, and the air conditioner will adjust capacity to the set temperature for normal operation.


- **Before bed...**

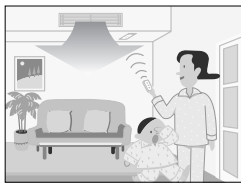

Set the unit to HOME LEAVE Operation before leaving the living room when going to bed.



The unit will maintain the temperature in the room at a comfortable level while you sleep.

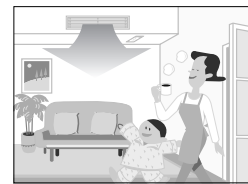

When you enter the living room in the morning, the temperature will be just right. Disengaging HOME LEAVE Operation will return the temperature to that set for normal operation. Even the coldest winters will pose no problem!

2. Use as a favorite mode.

Once you record the temperature and air flow rate settings you most often use, you can retrieve them by pressing HOME LEAVE button. You do not have to go through troublesome remote control operations.

NOTE

- Once the temperature and air flow rate for HOME LEAVE operation are set, those settings will be used whenever HOME LEAVE operation is used in the future. To change these settings, please refer to the "Before using HOME LEAVE operation" section above.
- HOME LEAVE operation is only available in COOL and HEAT mode. Cannot be used in AUTO, DRY, and FAN mode.
- HOME LEAVE operation runs in accordance with the previous operation mode (COOL or HEAT) before using HOME LEAVE operation.
- HOME LEAVE operation and POWERFUL operation cannot be used at the same time. Last button that was pressed has priority.
- The operation mode cannot be changed while HOME LEAVE operation is being used.
- When operation is shut off during HOME LEAVE operation, using the remote controller or the indoor unit ON/OFF switch, "🏠" will remain on the remote controller display.

4.8 INTELLIGENT EYE Operation

INTELLIGENT EYE Operation

“INTELLIGENT EYE” is the infrared sensor which detects the human movement.


■ To start INTELLIGENT EYE operation

1. Press “SENSOR button”.

- “” is displayed on the LCD.

■ To cancel the INTELLIGENT EYE operation


2. Press “SENSOR button” again.

- “” disappears from the LCD.

[EX.]

When somebody in the room

- Normal operation.
- The INTELLIGENT EYE lamp lights up.






When somebody in the room

- 20 min. after, start energy saving operation.
- The INTELLIGENT EYE lamp goes off.




Somebody back in the room

- Back to normal operation.
- The INTELLIGENT EYE lamp lights up.

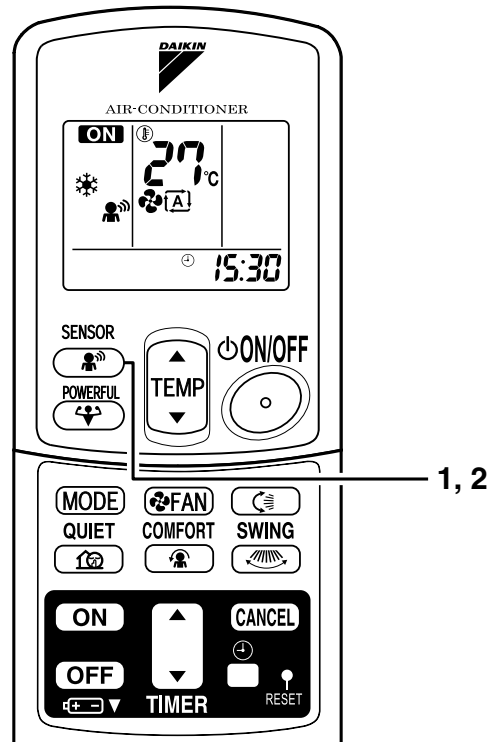
“INTELLIGENT EYE” is useful for Energy Saving

■ Energy saving operation

- Change the temperature -2°C in heating / $+2^{\circ}\text{C}$ in cooling / $+2^{\circ}\text{C}$ in dry mode from set temperature.
- Decrease the air flow rate slightly in fan operation. (In FAN mode only)

Notes on “INTELLIGENT EYE”

- Application range is as follows.

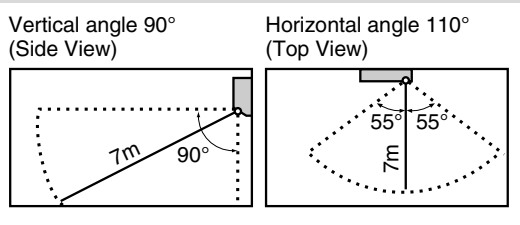

- Sensor may not detect moving objects further than 7m away. (Check the application range)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during powerful operation.
- Night set mode will not go on during you use INTELLIGENT EYE operation.

⚠ CAUTION

- Do not place large objects near the sensor.
Also keep heating units or humidifiers outside the sensor's detection area. This sensor can detect objects it shouldn't as well as not detect objects it should.
- Do not hit or violently push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.

4.9 TIMER Operation

TIMER Operation

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

■ To use OFF TIMER operation

- Check that the clock is correct.
If not, set the clock to the present time.

1. Press “OFF TIMER button”.

0:00 is displayed.



⊕-○ blinks.

2. Press “TIMER Setting button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press “OFF TIMER button” again.

- The TIMER lamp lights up.

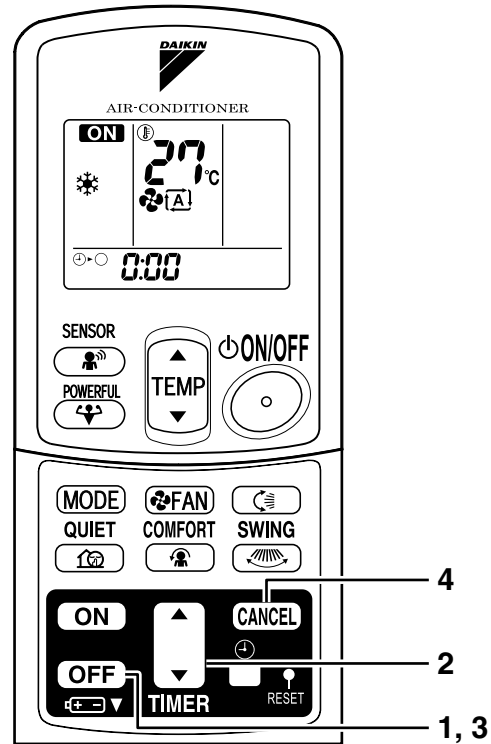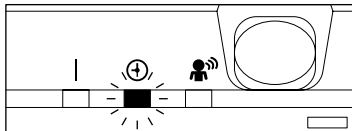

■ To cancel the OFF TIMER operation

4. Press “CANCEL button”.

- The TIMER lamp goes off.

NOTE

- When TIMER is set, the present time is not displayed.
- Once you set ON, OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF Timer, the actual length of operation may vary from the time entered by the user.

■ NIGHT SET MODE

When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL, 2.0°C down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep.

■ To use ON TIMER operation

- Check that the clock is correct. If not, set the clock to the present time.

1. Press “ON TIMER button”.

6:00 is displayed.



⊕| blinks.

2. Press “TIMER Setting button” until the time setting reaches the point you like.

- Every pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press “ON TIMER button” again.

- The TIMER lamp lights up.

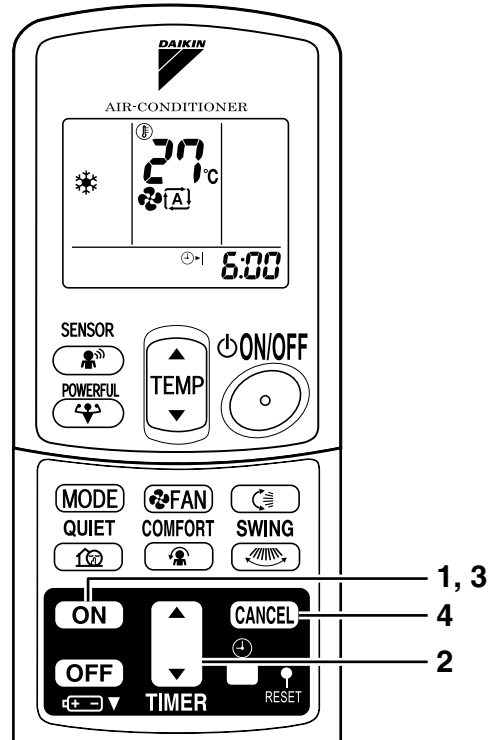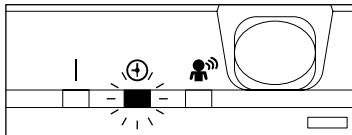


■ To cancel ON TIMER operation

4. Press “CANCEL button”.

- The TIMER lamp goes off.

■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the two timers is shown below.

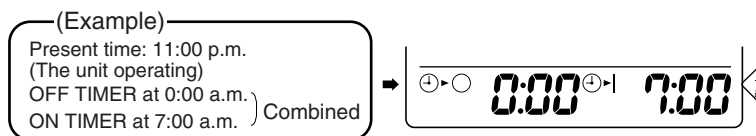

ATTENTION


- In the following cases, set the timer again.
 - After a breaker has turned OFF.
 - After a power failure.
 - After replacing batteries in the remote controller.

4.10 Note for Multi System

Note for Multi System

<< What is a “Multi System”? >>

This system has one outdoor unit connected to multiple indoor units.

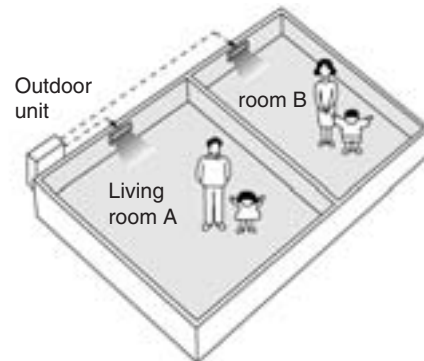

■ Selecting the Operation Mode

When more than one indoor unit is operating, priority is given to the first unit that was turned on.

In this case, set the units that are turned on later to the same operation mode (*1) as the first unit.

Otherwise, they will enter the Standby Mode, and the operation lamp will flash; this does not indicate malfunction.

(*1)

- COOL, DRY and FAN mode may be used at the same time.
- AUTO mode automatically selects COOL mode or HEAT mode based on the room temperature. Therefore, AUTO mode is available when selecting the same operation mode as that of the room with the first unit to be turned on.

<CAUTION>

Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.

If the operation mode of the first room is **FAN Mode**, then using **Heating Mode** in any room after this will give priority to **heating**. In this situation, the air conditioner running in FAN Mode will go on standby, and the operation lamp will flash.


■ OUTDOOR UNIT QUIET Operation

When using the OUTDOOR UNIT QUIET operation feature with the Multi system, set all indoor units to OUTDOOR UNIT QUIET operation using their remote controllers.


When clearing OUTDOOR UNIT QUIET operation, clear one of the operating indoor units using their remote controller. However OUTDOOR UNIT QUIET operation display remains on the remote controller for other rooms.

We recommend you release all rooms using their remote controllers.


5. FFQ Series

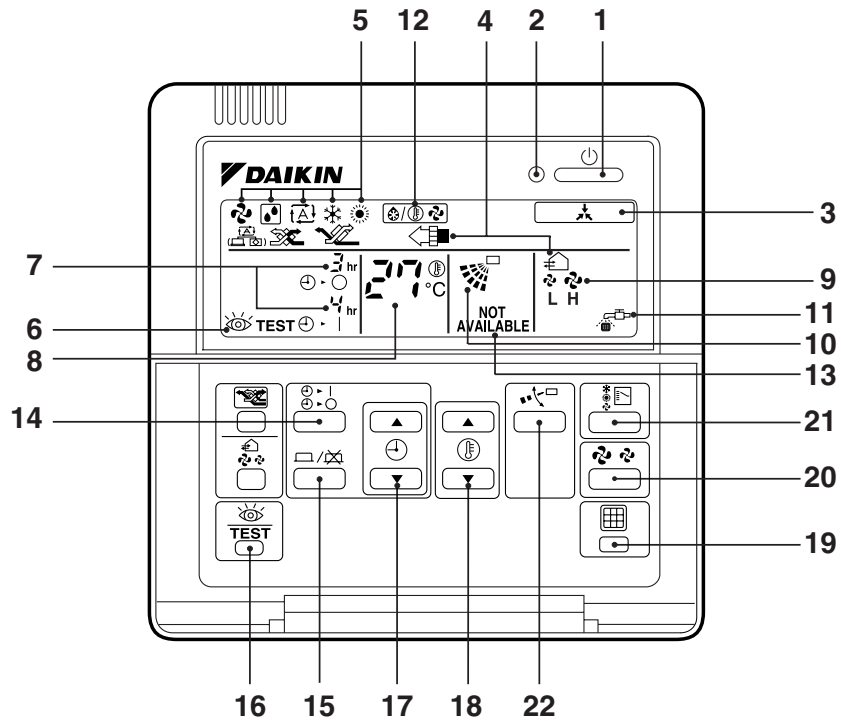


1

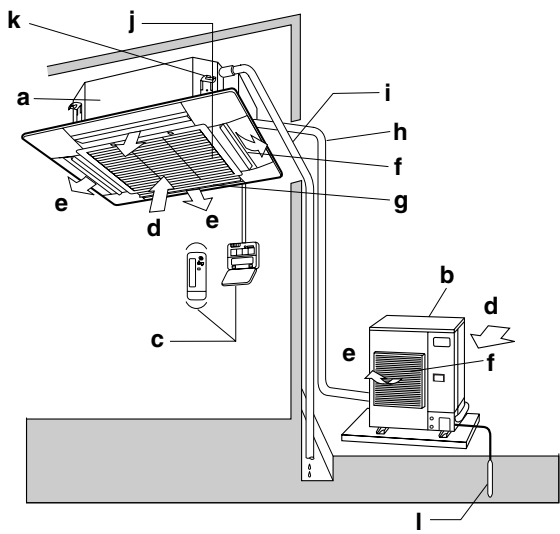

2

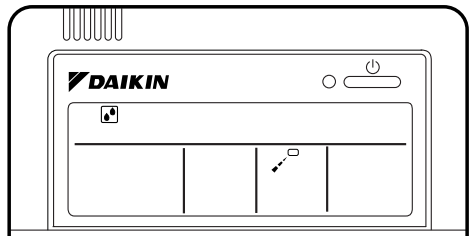

3

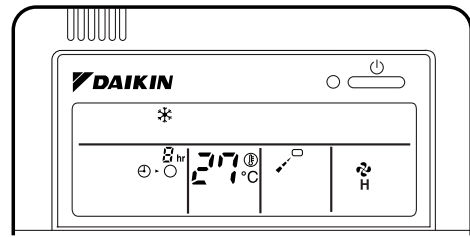

4

[1]

CONTENTS


ILLUSTRATIONS[1]

1. WHAT TO DO BEFORE OPERATION 1
2. SAFETY PRECAUTIONS 2
3. OPERATION RANGE 4
4. INSTALLATION SITE 4
5. NAME AND FUNCTION OF EACH SWITCH AND DISPLAY ON THE REMOTE CONTROLLER 5
6. OPERATION PROCEDURE 5
7. OPTIMUM OPERATION 8
8. MAINTENANCE (FOR SERVICE PERSONNEL) 8
9. NOT MALFUNCTION OF THE AIR CONDITIONER 10
10. TROUBLE SHOOTING 11


1. WHAT TO DO BEFORE OPERATION

This operation manual is for the following systems with standard control. Before initiating operation, contact your Daikin dealer for the operation that corresponds to your system.

- Pair system

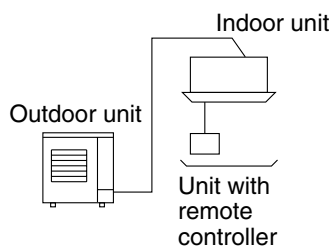

- Multi system

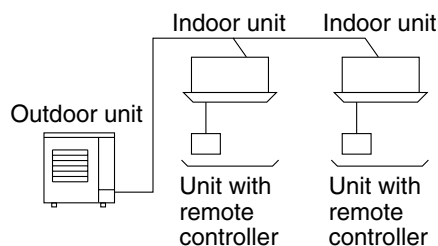

NOTE ⓘ

- If the unit you purchased is controlled by a wireless remote controller, also refer to the wireless remote controller's operation manual.

If your installation has a customized control system, ask your Daikin dealer for operation that corresponds to your system.

- Heat pump type
This system provides cooling, heating, automatic, program dry, and fan operation modes.
- Cooling only type
This system provides cooling, program dry, and fan operation modes.

PRECAUTIONS FOR GROUP CONTROL SYSTEM OR TWO REMOTE CONTROLLER CONTROL SYSTEM

This system provides two other control systems beside individual control (one remote controller controls one indoor unit) system. Confirm the following if your unit is of the following control system type.

- **Group control system**
One remote controller controls up to 16 indoor units.
All indoor units are equally set.
- **Two remote controllers control system**
Two remote controllers control one indoor unit (In case of group control system, one group of indoor units)
The unit is individually operated.

NOTE ⓘ

- Contact your Daikin dealer in case of changing the combination or setting of group control and two remote controllers control system.

Names and functions of parts

■ Refer to figure 2 on page [1] ■

a	Indoor unit
b	Outdoor unit • The external appearance of the outdoor unit varies depending on its capacity class. The outdoor unit shown in the figure is for reference to indicate features. Contact your Daikin Dealer and verify which outdoor unit you have.
c	Remote controller Depending on the system configuration, the remote controller is not provided.
d	Inlet air
e	Discharged air
f	Air outlet
g	Air flow flap (at air outlet)
h	Refrigerant piping, connection electric wire
i	Drain pipe
j	Air inlet The built-in air filter removes dust and dirt.
k	Drain pumping out device (built-in) Drains water removed from the room during cooling.
l	Ground wire Wire to ground from the outdoor unit to prevent electrical shocks.

2. SAFETY PRECAUTIONS

To gain full advantage of the air conditioner's functions and to avoid malfunction due to mishandling, we recommend that you read this instruction manual carefully before use. This air conditioner is classified under "appliances not accessible to the general public".

- **The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.**

⚠ WARNING ... Failure to follow these instructions properly may result in personal injury or loss of life.

⚠ CAUTION ... Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

- **After reading, keep this manual in a convenient place so that you can refer to it whenever necessary. If the equipment is transferred to a new user, be sure also to hand over the manual.**

⚠ WARNING

Be aware that prolonged, direct exposure to cool or warm air from the air conditioner, or to air that is too cool or too warm can be harmful to your physical condition and health.

When the air conditioner is malfunctioning (giving off a burning odour, etc.) turn off power to the unit and contact your local dealer.

Continued operation under such circumstances may result in a failure, electric shocks or fire hazards.

Consult your local dealer about installation work.

Doing the work yourself may result in water leakage, electric shocks or fire hazards.

Consult your local dealer regarding modification, repair and maintenance of the air conditioner.

Improper workmanship may result in water leakage, electric shocks or fire hazards.

Do not place objects, including rods, your fingers, etc., in the air inlet or outlet.

Injury may result due to contact with the air conditioner's high speed fan blades.

Beware of fire in case of refrigerant leakage.

If the air conditioner is not operating correctly, i.e. not generating cool or warm air, refrigerant leakage could be the cause.

Consult your dealer for assistance.

The refrigerant within the air conditioner is safe and normally does not leak.

However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas.

Do not longer use the air conditioner until a qualified service person confirms that the leakage has been repaired.

Consult your local dealer regarding what to do in case of refrigerant leakage.

When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the concentration limit in the event of a leakage. Otherwise, this may lead to an accident due to oxygen depletion.

Contact professional personnel about attachment of accessories and be sure to use only accessories specified by the manufacturer.

If a defect results from your own workmanship, it may result in water leaks, electric shock or fire.

Consult your local dealer regarding relocation and reinstallation of the air conditioner.

Improper installation work may result in leakage, electric shocks or fire hazards.

Be sure to use fuses with the correct ampere reading.

Do not use improper fuses, copper or other wires as a substitute, as this may result in electric shock, fire, injury or damage to the unit.

Be sure to earth the unit.

Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks or fire.

A high surge current from lightning or other sources may cause damage to the air conditioner.

Be sure to install an earth leakage breaker.

Failure to install an earth leakage breaker may result in electric shocks or fire.

Consult the dealer if the air conditioner submerges owing to a natural disaster, such as a flood or typhoon.

Do not operate the air conditioner in that case, or otherwise a malfunction, electric shock, or fire may result.

Do not start or stop operating the air conditioner with the power supply breaker turned ON or OFF.

Otherwise, fire or water leakage may result. Furthermore, the fan will rotate abruptly if power failure compensation is enabled, which may result in injury.

Do not use the product in the atmosphere contaminated with oil vapor, such as cooking oil or machine oil vapor.

Oil vapor may cause crack damage, electric shocks, or fire.

Do not use the product in places with excessive oily smoke, such as cooking rooms, or in places with flammable gas, corrosive gas, or metal dust.

Using the product in such places may cause fire or product failures.

Do not use flammable materials (e.g., hairspray or insecticide) near the product. Do not clean the product with organic solvents such as paint thinner.

The use of organic solvents may cause crack damage to the product, electric shocks, or fire.

Be sure to use a dedicated power supply for the air conditioner.

The use of any other power supply may cause heat generation, fire, or product failures.

⚠ CAUTION

Do not use the air conditioner for purposes other than those for which it is intended.

Do not use the air conditioner for cooling precision instruments, food, plants, animals or work of art as this may adversely affect the performance, quality and/or longevity of the object concerned.

Do not remove the outdoor unit's fan guard.

The guard protects against the unit's high speed fan, which may cause injury.

Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units.

Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.

To avoid oxygen depletion, ensure that the room is adequately ventilated if equipment such as a burner is used together with the air conditioner.

After prolonged use, check the unit stand and its mounts for damage.

If left in a damaged condition, the unit may fall and cause injury.

Do not place flammable sprays or operate spray containers near the unit as this may result in fire.

Before cleaning, be sure to stop unit operation, turn the breaker off or remove the power cord.

Otherwise, an electric shock and injury may result.

To avoid electric shocks, do not operate with wet hands.

Do not place appliances that produce naked flames in places exposed to the air flow from the unit as this may impair combustion of the burner.

Do not place heaters directly below the unit, as resulting heat can cause deformation.

Do not allow a child to mount on the outdoor unit or avoid placing any object on it.

Falling or tumbling may result in injury.

Do not block air inlets nor outlets.

Impaired air flow may result in insufficient performance or trouble.

Be sure that children, plants or animals are not exposed directly to airflow from the unit, as adverse effects may ensue.

Do not wash the air conditioner with water, as this may result in electric shocks or fire.

Do not install the air conditioner at any place where there is a danger of flammable gas leakage.

In the event of a gas leakage, build-up of gas near the air conditioner may result in fire hazards.

Do not put flammable containers, such as spray cans, within 1 m from the blow-off mouth.

The containers may explode because the warm air output of the indoor or outdoor unit will affect them.

Arrange the drain hose to ensure smooth drainage.

Imperfect drainage may cause wetting.

The appliance is not intended for use by unattended young children or infirm persons.

Impairment of bodily functions and harm to health may result.

Children should be supervised to ensure that they do not play with the unit or its remote controller.

Accidental operation by a child may result in impairment of bodily functions and harm health.

Do not let children play on or around the outdoor unit.

If they touch the unit carelessly, injury may be caused.

Consult your dealer regarding cleaning the inside of the air conditioner.

Improper cleaning may cause breakage of plastic parts, water leakage and other damage as well as electric shocks.

To avoid injury, do not touch the air inlet or aluminium fins of the unit.

Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.

Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.

Never touch the internal parts of the controller.

Do not remove the front panel. Touching certain internal parts will cause electric shocks and damage to the unit. Please consult your dealer about checking and adjustment of internal parts.

Do not leave the remote controller wherever there is a risk of wetting.

If water gets into the remote controller there is a risk of electrical leakage and damage to electronic components.

Watch your steps at the time of air filter cleaning or inspection.

High-place work is required, to which utmost attention must be paid.

If the scaffold is unstable, you may fall or topple down, thus causing injury.

3. OPERATION RANGE

If the temperature or the humidity is beyond the following conditions, safety devices may work and the air conditioner may not operate, or sometimes, water may drop from the indoor unit.

COOLING

OUTDOOR UNIT	INDOOR		OUTDOOR TEMPERATURE	
		TEMPERATURE	HUMIDITY	
RKS25 · 35 · 50 · 60 RXS25 · 35 · 50 · 60	D B	21 to 32		D B
	W B	14 to 23		-10 to 46 (-5)
RMXS112 · 140 · 160 RMKS112 · 140 · 160 3MKS58 · 75 4MKS90 3MXS52 · 68 4MXS80	D B	21 to 32	80% or below	D B
	W B	14 to 23		

HEATING

OUTDOOR UNIT	INDOOR TEMPERATURE		OUTDOOR TEMPERATURE	
RXS25 · 35	DB	10 to 30	DB	-14 to 24
			WB	-15 to 20
RXS50 · 60	DB	10 to 30	DB	-14 to 24
			WB	-15 to 18
RMXS112 · 140 · 160 3MXS52 · 68 4MXS80	DB	10 to 30	DB	-14 to 21
			WB	-15 to 15.5

DB: Dry bulb temperature (°C)

WB: Wet bulb temperature (°C)

The setting temperature range of the remote controller is 16°C to 32°C.

The numerical value in a parenthesis shows the operation range of the model for Australia.

■ Tips for saving energy

- Be careful not to cool (heat) the room too much. Keeping the temperature setting at a moderate level helps save energy.
- Cover windows with a blind or a curtain. Blocking sunlight and air from outdoors increases the cooling (heating) effect.

Recommended temperature setting	
For cooling	26 to 28 °C
For heating	20 to 24 °C

4. INSTALLATION SITE**Regarding places for installation**

- **Is the air conditioner installed at a well-ventilated place where there are no obstacles around?**
- **Do not use the air conditioner in the following places.**
 - Filled with much mineral oil such as cutting oil
 - Where there is much salt such as a beach area
 - Where sulfured gas exists such as a hot spring resort.
 - Where there are considerable voltage fluctuations such as a factory or plant
 - Vehicles and vessels
 - Where there is much spray of oil and vapor such as a cookery, etc.
 - Where there are machines generating electromagnetic waves.
 - Filled with acid and/or alkaline steam or vapor
- **Is a snow protection measure taken?**
For details, consult your dealer.

Regarding wiring

- **All wiring must be performed by an authorized electrician.**
To do wiring, ask your dealer. Never do it by yourself.
- **Make sure that a separate power supply circuit is provided for this air conditioner and that all electrical work is carried out by qualified personnel according to local laws and regulations.**

Pay attention to running noises, too

- **Are the following places selected?**
 - A place that can sufficiently withstand the weight of the air conditioner with less running noises and vibrations.
 - A place where the hot wind discharged from the air outlet of outdoor unit and the running noises.
- **Are you sure that there are no obstacles near the air outlet of the outdoor unit?**
Such obstacles may result in declined performance and increased running noises.
- **If abnormal noises occur in use, stop the operation of the air conditioner, and then consult your dealer or our service station.**













Regarding drainage of drain piping


- **Is the drain piping executed to perform complete drainage?**
If proper drainage is not carried out from the outdoor drain pipes during air-conditioning operation, chances are that dust and dirt are clogged in the pipe. This may result in a water leakage from the indoor unit. Under such circumstances, stop the operation of the air conditioner, and then consult your dealer or our service station.

5. NAME AND FUNCTION OF EACH SWITCH AND DISPLAY ON THE REMOTE CONTROLLER

■ Refer to figure 1 on page [1] ■

The illustrations in this operating manual correspond to the remote control format BRC1C type.

1	ON/OFF BUTTON Press the button and the system will start. Press the button again and the system will stop.
2	OPERATION LAMP (RED) The lamp lights up during operation.
3	DISPLAY “” (UNDER CENTRALIZED CONTROL) When this display shows, the system is UNDER CENTRALIZED CONTROL. (This is not a standard specification)
4	DISPLAY “” (VENTILATION/AIR CLEANING) This display shows that the total heat exchange and the air cleaning unit are in operation (These are optional accessories).
5	DISPLAY “” (OPERATION MODE) This display shows the current OPERATION MODE. For cooling only type, “  ” (Auto) and “  ” (Heating) are not installed.
6	DISPLAY “ TEST ” (INSPECTION/TEST OPERATION) When the INSPECTION/TEST OPERATION BUTTON is pressed, the display shows the system mode is in.
7	DISPLAY “” (PROGRAMMED TIME) This display shows the PROGRAMMED TIME of the system start or stop.
8	DISPLAY “” (SET TEMPERATURE) This display shows the set temperature.
9	DISPLAY “” (FAN SPEED) This display shows the set fan speed.
10	DISPLAY “” (AIR FLOW FLAP) Refer to “AIR FLOW DIRECTION ADJUST”.
11	DISPLAY “” (TIME TO CLEAN AIR FILTER) Refer to “HOW TO CLEAN THE AIR FILTER”.
12	DISPLAY “” (DEFROST/HOT START) Refer to “DEFROST OPERATION”.

13	NON-FUNCTIONING DISPLAY If that particular function is not available, pressing the button may display the words “NOT AVAILABLE” for a few seconds. When running multiple units simultaneously The “NOT AVAILABLE” message will only be appear if none of the indoor units is equipped with the function. If even one unit is equipped with the function, the display will not appear.
14	TIMER MODE START/STOP BUTTON Refer to “PROGRAM TIMER OPERATION”.
15	TIMER ON/ OFF BUTTON Refer to “PROGRAM TIMER OPERATION”
16	INSPECTION/TEST OPERATION BUTTON This button is used only by qualified service persons for maintenance purposes.
17	PROGRAMMING TIME BUTTON Use this button for programming “START and/ or STOP” time.
18	TEMPERATURE SETTING BUTTON Use this button for SETTING TEMPERATURE.
19	FILTER SIGN RESET BUTTON Refer to “HOW TO CLEAN THE AIR FILTER”.
20	FAN SPEED CONTROL BUTTON Press this button to select the fan speed, HIGH or LOW, of your choice.
21	OPERATION MODE SELECTOR BUTTON Press this button to select OPERATION MODE.
22	AIR FLOW DIRECTION ADJUST BUTTON Refer to “AIR FLOW DIRECTION ADJUST”.
NOTE  <ul style="list-style-type: none"> For the sake of explanation, all indications are shown on the display in figure 1 contrary to actual running situations. 	

6. OPERATION PROCEDURE

■ Refer to figure 1 on page [1] ■




- Operating procedure varies with heat pump type and cooling only type. Contact your Daikin dealer to confirm your system type.
- To protect the unit, turn on the main power switch 6 hours before operation.
- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

COOLING, HEATING, AUTOMATIC, FAN, AND PROGRAM DRY OPERATION

Operate in the following order.

1 OPERATION MODE SELECTOR

Press **OPERATION MODE SELECTOR** button several times and select the **OPERATION MODE** of your choice as follows.

- COOLING OPERATION..... “”
- HEATING OPERATION..... “”
- AUTOMATIC OPERATION..... “”

- In this operation mode, COOL/HEAT changeover is automatically conducted.

- FAN OPERATION..... “”
- DRY OPERATION..... “”

- The function of this program is to decrease the humidity in your room with the minimum temperature decrease.
- Micro computer automatically determines TEMPERATURE and FAN SPEED.
- This system dose not go into operation if the room temperature is below 16°C.

Refer to figure 3 on page [1]

- For cooling only type, “COOLING”, “FAN” and “DRY” operation are able to select.


2 ON/OFF

Press **ON/OFF** button


OPERATION lamp lights up or goes off and the system starts or stops OPERATION.

[EXPLANATION OF HEATING OPERATION]

(1) DEFROST OPERATION

- As the frost on the coil of an outdoor unit increase, heating effect decreases and the system goes into DEFROST OPERATION.
- The indoor unit fan stops and the remote controller display shows “”.
- After 6 to 8 minutes (maximum 10 minutes) of DEFROST OPERATION, the system returns to HEATING OPERATION.


(2) HOT START

- In order to prevent cold air from blowing out of an indoor unit at the start of heating operation, the indoor fan is automatically stopped. The display of the remote controller shows “” (DEFROST/HOT START).

(3) OPERATION START

- For ordinary heating, it will take longer for the room temperature to reach the set temperature than with cooling. We therefore recommend starting the unit ahead of time using the timer operation.

Regarding outside air temperature and heating capacity

- The heating capacity of the air conditioner declines as the outside air temperature falls. In such a case, use the air conditioner in combination with other heating systems.
- A warm air circulating system is employed, and therefore it takes some time until the entire room is warmed up after the start of operation.
- An indoor fan runs to discharge a gentle wind automatically until the temperature inside the air conditioner reaches a certain level. At this time, the remote controller displays “”.
- Leave it as it stands and wait for a while.
- When the warm air stays under the ceiling and your feet are cold, we recommend that you use a circulator (a fan to circulate the air inside the room). For details, consult your dealer.


ADJUSTMENT

For programming TEMPERATURE, FAN SPEED and AIR FLOW DIRECTION, follow the procedure shown below.



TEMPERATURE SETTING

Press **TEMPERATURE SETTING** button and program the setting temperature.



Each time this button is pressed, setting temperature rises 1°C.

Each time this button is pressed, setting temperature lowers 1°C.

- The setting is impossible for fan operation.

NOTE

- The setting temperature range of the remote controller is 16°C to 32°C.



FAN SPEED CONTROL


Press **FAN SPEED CONTROL** button.

High or Low fan speed can be selected. Micro computer may sometimes control the fan speed in order to protect the unit.



AIR FLOW DIRECTION ADJUST


Press the AIR FLOW DIRECTION ADJUST button to adjust the air flow angle.

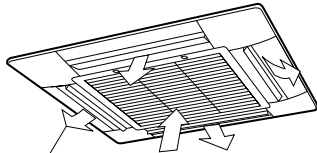

Up and down adjustment

- The movable limit of the flap is changeable. Contact your Daikin dealer for details.


Press the AIR FLOW DIRECTION ADJUST button to select the air direction as following.

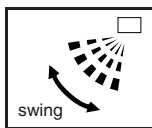

The AIR FLOW FLAP display swings as shown left and the air flow direction continuously varies. (Automatic swing setting)



Press AIR FLOW DIRECTION ADJUST button to select the air direction of your choice.



The AIR FLOW FLAP display stops swinging and the air flow direction is fixed (Fixed air flow direction setting).

MOVEMENT OF THE AIR FLOW FLAP

For the following conditions, micro computer controls the air flow direction so it may be different from the display.

Operation mode	Heating
Operation condition	<ul style="list-style-type: none"> • When starting operation • When room temperature is higher than the set temperature • At defrost operation (Air is blown horizontally to prevent the cool air from being blown directly onto anyone in the room.)

Operation mode includes automatic operation.

ATTENTION:

- The movable limit of the flap is changeable. Contact your Daikin dealer for details.
- Avoid operating in the horizontal direction “” which may cause dew or dust to settle on ceiling.


PROGRAM TIMER OPERATION

Operate in the following order.

- The timer is operated in the following two ways. Programming the stop time (⊕ · ○) The system stops operating after the set time has elapsed.

Programming the start time (⊕ · |) The system starts operating after the set time has elapsed.

- The timer can be programmed a maximum of 72 hours.
- The start and the stop time can be simultaneously programmed.



TIMER MODE START/STOP

Press the TIMER MODE START/STOP button several times and select the mode on the display.

The display flashes.


For setting the timer stop ... “⊕ · ○”

For setting the timer start ... “⊕ · |”



PROGRAMMING TIME

Press the PROGRAMMING TIME button and set the time for stopping or starting the system.



When this button is pressed, the time advances by 1 hour.



When this button is pressed, the time goes backward by 1 hour.



TIMER ON/OFF


Press the TIMER ON/OFF button.

The timer setting procedure ends.

The display “⊕ · ○ or ⊕ · |” changes from flashing light to a constant light.

Refer to figure 4 on page [1]

For example:

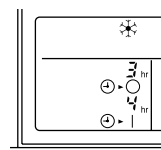


When the timer is programmed to stop the system after 3 hours and start the system after 4 hours, the system will stop after 3 hours and then 1 hour later the system will start.

NOTE

- When setting the timer Off and On at the same time, repeat the above procedure from 1 to 3 once again.
- After the timer is programmed, the display shows the remaining time.
- Press the TIMER ON/OFF button once again to cancel programming. The display vanishes.

7. OPTIMUM OPERATION

Observe the following precautions to ensure the system operates.

- Adjust the room temperature properly for a comfortable environment. Avoid excessive heating or cooling.
- Prevent direct sunlight from entering a room during cooling operation by using curtains or blinds.
- Ventilate the room regularly.
Using the unit for long periods of time requires attentive ventilation of the room.
- Do not place items that might be damaged by water under the indoor unit.
Water may condensate and drip if the humidity reaches 80% or if the drain exit gets clogged.
- Keep doors and windows closed. If the doors and windows remain open, room air will flow out and cause to decrease the effect of cooling and heating.
- Do not place other heaters directly below the indoor unit.
They may deform due to the heat.
- Never place objects near the air inlet and the air outlet of the unit. It may cause deterioration in the effect or stop in the operation.
- Turn off the main power supply switch when it is not used for long periods of time. When the main power switch is turned on, some watts of electricity is being used even if the system is not operating. Turn off the main power supply switch for saving energy. When reoperating, turn on the main power supply switch 6hours before operation for smooth running (Refer to MAINTENANCE).
- When the display shows “” (TIME TO CLEAN AIR FILTER), ask a qualified service person to clean the filters (Refer to MAINTENANCE).
- Fully use the function of air flow direction adjust.
Cold air gathers on the floor, and warm air gathers in the ceiling.
Set the air flow direction parallel during cooling or dry operation, and set it downwards during heating operation.
Do not let the air blow directly to a person.
- It takes time for the room temperature to reach the set temperature.
We recommend starting the operation in advance using timer operation.

8. MAINTENANCE (FOR SERVICE PERSONNEL)

ONLY A QUALIFIED SERVICE PERSON IS ALLOWED TO PERFORM MAINTENANCE


⚠ WARNING

- **Before touching any of connection wirings, be sure to turn off all power supply switches.**
- **Contact professional personnel about attachment of accessories and be sure to use only accessories specified by the manufacturer.** If a defect results from your own workmanship, it may result in water leaks, electric shock or fire.

⚠ CAUTION

- **Before cleaning, be sure to stop unit operation, turn the breaker off or remove the power cord.** Otherwise, an electric shock and injury may result.
- **Do not wash the air conditioner with water, as this may result in electric shocks or fire.**
- **Consult your dealer regarding cleaning the inside of the air conditioner.**
Improper cleaning may cause breakage of plastic parts, water leakage and other damage as well as electric shocks.
Take care of scaffolding and exercise caution when working high above ground level.

HOW TO CLEAN THE AIR FILTER

Clean the air filter when the display shows “” (TIME TO CLEAN AIR FILTER).


It will display that it will operate for a set amount of time.

Increase the frequency of cleaning if the unit is installed in a room where the air is extremely contaminated.

If the dirt becomes impossible to clean, change the air filter (Air filter for exchange is optional)


1. Open the suction grille.

Push it downward slowly while pressing horizontally the buttons provided on two spots.
(Follow the same procedure for closing.)

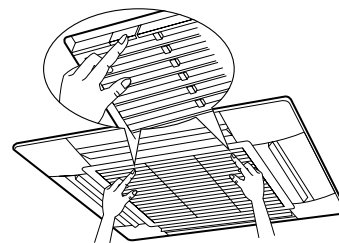

2. Detach the air filter.

Pull the hook of the air filter out diagonally downward, and remove the filter.

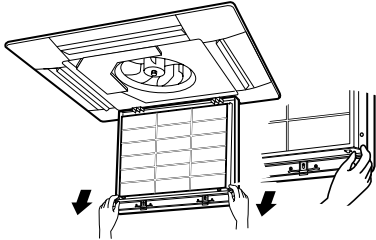

3. Clean the air filter.

Use vacuum cleaner **A)** or wash the air filter with water **B)**.

A) Using a vacuum cleaner



B) Washing with water

When the air filter is very dirty, use soft brush and neutral detergent.




Remove water and dry in the shade.

NOTE

- Do not wash the air conditioner with hot water of more than 50°C, as doing so may result in discoloration and/or deformation.
- Do not expose it to fire, as doing so may result in burning.

4. Fix the air filter.

- (1) Hook the air filter to a protrusion on the suction grille.
- (2) Push the lower part of the air filter onto the protrusion at the lower part of the suction grille, and fix the air filter there.

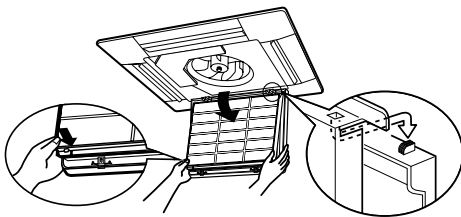

5. Shut the suction grille.

Refer to item No.1.

6. After turning on the power, press FILTER SIGN RESET button.

The "TIME TO CLEAN AIR FILTER" display vanishes.

HOW TO CLEAN AIR OUTLET AND OUTSIDE PANELS

- Clean with soft cloth.
- When it is difficult to remove stains, use water or neutral detergent.

- When the flap is extremely contaminated, remove it as below and clean or exchange it. (For changing the flap, please contact your dealer.)


NOTE

- Do not use gasoline, benzene, thinner, polishing powder, liquid insecticide. It may cause discoloring or warping.
- Do not let the indoor unit get wet. It may cause an electric shock or a fire.
- Do not scrub firmly when washing the blade with water. The surface sealing may peel off.
- Do not use water or air of 50°C or higher for cleaning air filters and outside panels.

HOW TO CLEAN THE SUCTION GRILLE


1. Open the suction grille.

Push it downward slowly while pressing horizontally the buttons provided on two spots. (Follow the same procedure for closing.)

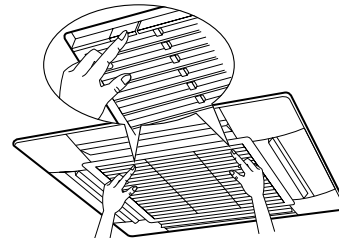

2. Detach the suction grille.

Open the suction grille 45 degrees and lift it upward.

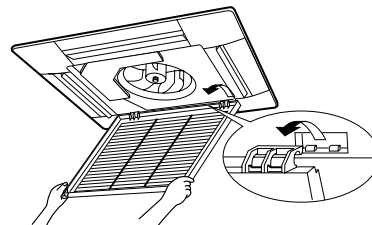

3. Detach the air filter.

Refer to "HOW TO CLEAN THE AIR FILTER item No.2".

4. Clean the suction grille.

Wash with a soft bristle brush and neutral detergent or water, and dry thoroughly.

• When very grimy

Directly apply the type of detergent used for cleaning ventilation fans or ovens, wait 10 minutes, and then rinse with water.



5. Fix the air filter.

Refer to "HOW TO CLEAN THE AIR FILTER item No.4".

6. Fix the suction grille.

Refer to item No. 2.

7. Shut the suction grille.

Refer to item No. 1.

START UP AFTER A LONG STOP**Confirm the following**

- Check that the air inlet and outlet are not blocked. Remove any obstacle.
- Check if the earth is connected.
Might there be a broken wire somewhere?
Contact your dealer if there are any problems.

Clean the air filter and outside panels

- After cleaning the air filter, make sure to attach it.

Turn on the main power supply switch

- The display on the remote controller will be shown when the power is turned on.
- To protect the unit, turn on the main power switch at least 6 hours before operation.

WHAT TO DO WHEN STOPPING THE SYSTEM FOR A LONG PERIOD**Turn on FAN OPERATION for a half day and dry the unit.**

- Refer to “6.OPERATION PROCEDURE”.

Cut off the power supply.

- When the main power switch is turned on, some watts of electricity is being used even if the system is not operating.
Turn off the main power supply switch for saving energy.
- The display on the remote controller will vanish when the main power switch is turned off.

Clean the air filter and the exterior.

- Be sure to replace the air filter to its original place after cleaning. Refer to “MAINTENANCE”.

9. NOT MALFUNCTION OF THE AIR CONDITIONER

The following symptoms do not indicate air conditioner malfunction

I. THE SYSTEM DOES NOT OPERATE

- **The system does not restart immediately after the ON/OFF button is pressed.**


If the OPERATION lamp lights, the system is in normal condition.

It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.

- **The system does not restart immediately when TEMPERATURE SETTING button is returned to the former position after pushing the button.**

If the OPERATION lamp lights, the system is in normal condition.

It does not restart immediately because a safety device operates to prevent overload of the system. After 3 minutes, the system will turn on again automatically.

- **The system does not start when the display shows “” (UNDER CENTRALIZED CONTROL) and it flashes for few seconds after pressing an operation button.**


This is because the system is under centralized control. Flashes on the display indicates that the system cannot be controlled by the remote controller.

- **The system does not start immediately after the power supply is turned on.**

Wait one minute until the micro computer is prepared for operation.

- **The outdoor unit is stopped**

This is because the room temperature has reached the set temperature. The indoor unit switches to fan operation.

- II. **The display shows “” (UNDER CENTRALIZED CONTROL) and the unit operates in a mode different to what is shown on the remote controller display.**

When using a unit in a multi system, the operation condition of that unit is controlled by a micro computer as described below, according to the operation condition of other indoor units connected to the system.

- If the operation mode does not match other indoor units that are already running, the indoor unit will assume the STANDBY state (the fan is stopped and the air flow flap is positioned horizontally).
If HEATING mode is set together with COOLING, DRY or FAN mode, the above mentioned condition will occur.

NOTE

- Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so please keep this in mind.
 - a. If the operation mode of the first room is **FAN Mode**, then using **Heating Mode** in any room after this will give priority to heating. In this situation, the air conditioner running in FAN Mode will go on standby.
 - b. With the Priority Room Setting active.
Contact your Daikin dealer for the operation that corresponds to your system.
- If the total capacity of operating indoor units exceeds the limit, the indoor unit will assume the STANDBY state (FAN and AIR FLOW DIRECTION will be left as set). (This only applies to cooling only type.)
- If another indoor unit commences a HEATING operation after this indoor unit is running in COOLING mode, this indoor unit may switch to DRY operation (fan on low, air flow flap set at horizontal).

III. The fan speed is different from the setting.

- **Pressing the fan speed control button does not change the fan speed.**
When the room temperature reaches the set temperature in heating mode, the power supply from the outdoor unit is stopped and the indoor unit will operate on the low fan setting. (If using the multi system, the fan will alternate between off and low.)
This is to prevent the cool air from being blown directly onto anyone in the room.

IV. AIR BLOW DIRECTION IS NOT AS SPECIFIED.

- **Actual air blow direction is not as shown on the remote controller.**
- **Automatic swing setting does not work.**
Refer to "AIR FLOW DIRECTION ADJUST."

V. WHITE MIST COMES OUT OF A UNIT

- **When humidity is high during cooling operation (In oily or dusty places)**
If the inside of an indoor unit is extremely contaminated, the temperature distribution inside a room becomes uneven. It is necessary to clean the inside of the indoor unit. Ask your Daikin dealer for details on cleaning the unit. This operation requires a qualified service person.
- **When the system is changed over to HEATING OPERATION after DEFROST OPERATION.**
Moisture generated by DEFROST becomes steam and exists.

VI. NOISE OF AIR CONDITIONERS

- **A ringing sound after the unit is started.**
This sound is generated by the temperature regulator working.
It will quiet down after about a minute.
- **A continuous flow "Shuh" sound is heard when the systems is in COOLING or DEFROST OPERATION.**
This is the sound of refrigerant gas flowing through both indoor and outdoor units.
- **A "Shuh" sound which is heard at the start or immediately after the stop of operation or which is heard at the start or immediately after the stop of DEFROST OPERATION.**
This is the noise of refrigerant caused by flow stop and flow change.
- **A continuous flowing sound "Shah" or a trickling sound "Jyuru Jyuru" are heard when the system is in COOLING OPERATION or at a stop.**
The noise is heard when the drain pump is in operation.
- **A "Pishi-pishi" squeaking sound is heard when the system is in operation or after the stop of operation.**
Expansion and contraction of plastic parts caused by temperature change makes this noise.

VII. DUST FROM THE UNITS

- **Dust may blow out from the unit after starting operation from long resting time.**
Dust absorbed by the unit blows out.

VIII. THE UNITS GIVE OFF ODORS

The unit absorbs the smell of rooms, furniture, cigarettes, etc., and then emits them.

IX. THE LIQUID CRYSTAL OF THE REMOTE CONTROLLER SHOW "88"

- **It happens immediately after the main power supply switch is turned on.**
This shows that the remote controller is in normal condition.
This continues temporary.

X. THE ROOM TEMPERATURE DOES NOT DROP

- **The air conditioner is in program dry operation.**
The air conditioner in program dry operation does not drop the room temperature as much as possible. See page 5-6 "OPERATION PROCEDURE".

10. TROUBLE SHOOTING

- I. **If one of the following malfunctions occurs, take the measures shown below and contact your Daikin dealer.**


The system must be repaired by a qualified service person.

⚠ WARNING

When the air conditioner is in abnormal conditions (smell of something burning, etc), unplug the power cord from the outlet, and contact your dealer

Continued operation under such circumstances may result in a failure, electric shock, and fire.

- If a safety device such as a fuse, a breaker or an earth leakage breaker frequently actuates;
Measure: Do not turn on the main power switch.
- If the ON/OFF switch does not properly work;
Measure: Turn off the main power switch.
- If water leaks from unit.
Measure: Stop the operation.
- If the display "88" (INSPECTION), "UNIT No.", and the OPERATION lamp flash and the "MALFUNCTION CODE" appears.

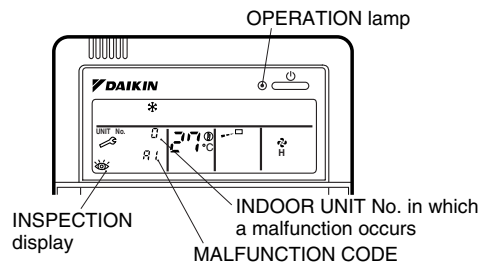


Measure: Notify and inform the model name and what the malfunction code indicates to your Daikin dealer.

II. If the system does not properly operate except for the above mentioned case, and none of the above mentioned malfunctions is evident, investigate the system according to the following procedures.

1. If the system does not operate at all.

- Check if there is a power failure.
Wait until power is restored. If power failure occurs during operation, the system automatically restarts immediately after the power supply recovers.
- Check if no fuse has blown.
Turn off the power supply.
- Check if the breaker is blown.
Turn the power on with the breaker switch in the off position.
Do not turn the power on with the breaker switch in the trip position.
(Contact your dealer.)

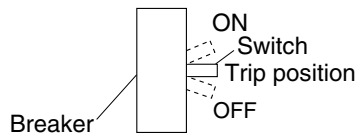

2. If the system stops operating after operating the system.

- Check if the air inlet or outlet of outdoor or indoor unit is blocked by obstacles.
Remove the obstacle and make it well-ventilated.
- Check if the air filter is clogged.
Ask a qualified service person to clean the air filters (Refer to MAINTENANCE).

3. The system operates but it does not sufficiently cool or heat.

- If the air inlet or outlet of the indoor or the outdoor unit is blocked with obstacles.
Remove the obstacle and make it well-ventilated.
- If the air filter is clogged.
Ask a qualified service person to clean the air filters (Refer to MAINTENANCE).
- If the set temperature is not proper (Refer to ADJUSTMENT).
- If the FAN SPEED button is set to LOW SPEED (Refer to ADJUSTMENT).
- If the air flow angle is not proper (Refer to AIR FLOW DIRECTION ADJUST).
- If the doors or the windows are open.
Shut doors or windows to prevent wind from coming in.
- If direct sunlight enters the room (when cooling).
Use curtains or blinds.
- When there are too many inhabitants in the room (when cooling).
Cooling effect decreases if heat gain of the room is too large.
- If the heat source of the room is excessive (when cooling).
Cooling effect decreases if heat gain of the room is too large.

Part 6

Service Diagnosis

1. Caution for Diagnosis.....	175
1.1 Troubleshooting with LED	175
2. Problem Symptoms and Measures	177
3. Service Check Function	178
3.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series.....	178
3.2 SA Indoor Unit - FFQ Series	187
4. Code Indication on Remote Controller	192
4.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series.....	192
4.2 SA Indoor Unit - FFQ Series	192
4.3 Outdoor Unit.....	193
5. Troubleshooting for RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series.....	194
5.1 Indoor Unit PCB Abnormality	194
5.2 Freeze-up Protection Control or Heating Peak-cut Control.....	195
5.3 Fan Motor or Related Abnormality	197
5.4 Thermistor or Related Abnormality (Indoor Unit).....	200
6. Troubleshooting for SA Indoor Unit - FFQ Series	201
6.1 Indoor Unit PCB Abnormality	201
6.2 Drain Water Level System Abnormality.....	202
6.3 Fan Motor or Related Abnormality	204
6.4 Drain System Abnormality.....	205
6.5 Thermistor or Related Abnormality.....	206
6.6 Remote Controller Air Thermistor Abnormality.....	208
7. Troubleshooting for Outdoor Unit.....	209
7.1 Anti-icing Control for Indoor Unit	209
7.2 OL Activation (Compressor Overload)	211
7.3 Compressor Lock	212
7.4 DC Fan Lock	213
7.5 Input Overcurrent Detection	214
7.6 Discharge Pipe Temperature Control.....	215
7.7 High Pressure Control in Cooling	216
7.8 Compressor Sensor System Abnormality	217
7.9 Position Sensor Abnormality	218
7.10 DC Voltage / Current Sensor Abnormality.....	220
7.11 Thermistor or Related Abnormality (Outdoor Unit).....	221
7.12 Electrical Box Temperature Rise.....	223
7.13 Radiation Fin Temperature Rise	224
7.14 Output Overcurrent Detection	226
7.15 Refrigerant Shortage.....	228
7.16 Low-voltage Detection or Over-voltage Detection.....	230
7.17 Outdoor Unit PCB Abnormality or Signal Transmission Error	231

7.18 Anti-icing control in Other Room / Unspecified Voltage (between Indoor Unit and Outdoor Unit)	234
8. Check	235
8.1 How to Check	235

1. Caution for Diagnosis


1.1 Troubleshooting with LED

Indoor Unit


The operation lamp blinks when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated, or when the thermistor malfunctions.
 2. When a signal transmission error occurs between the indoor and outdoor units.
- In either case, conduct the diagnostic procedure described in the following pages.


Wall Mounted Type E-Series

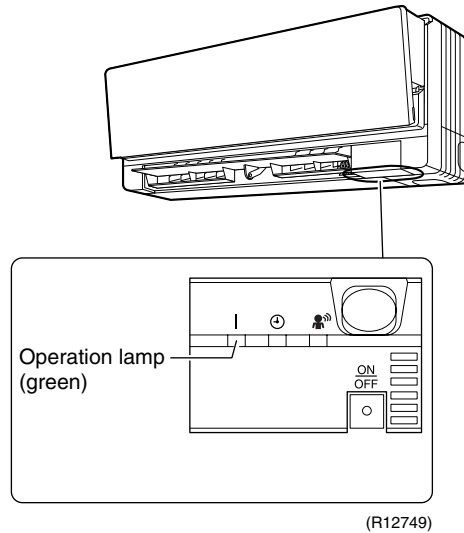


Wall Mounted Type J-Series

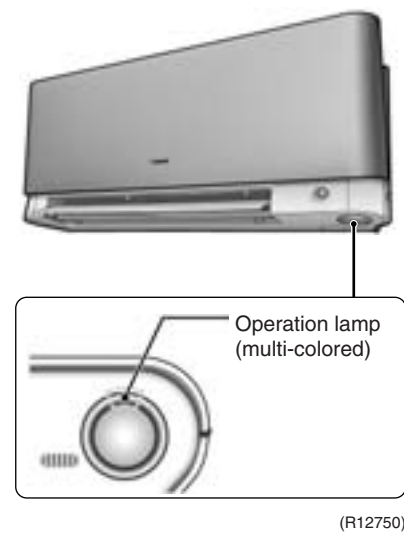


Wall Mounted Type G-Series

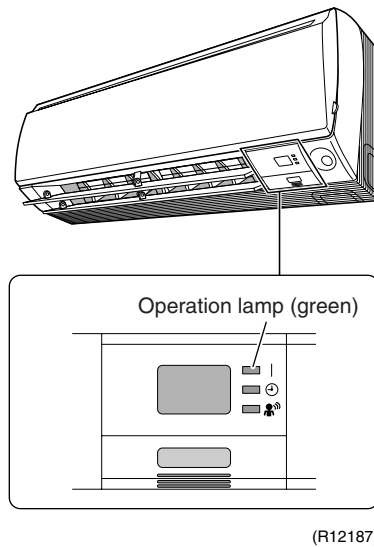


Floor Standing Type

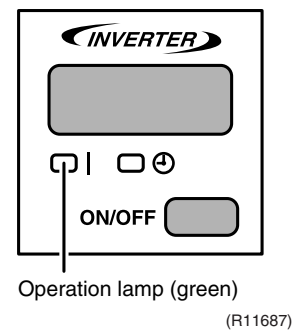


Floor / Ceiling Suspended Dual Type

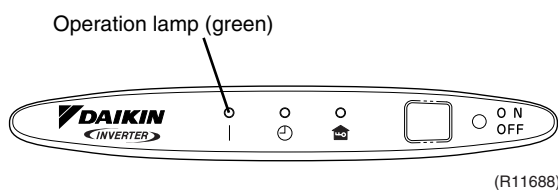

Duct Connected Type

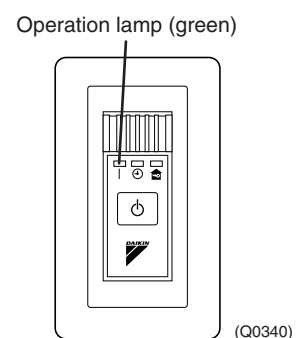

Ceiling Mounted Cassette Type

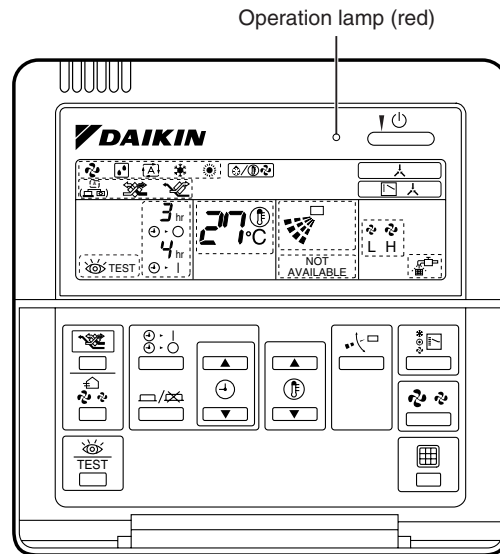

(R11278)



Caution:

When operation stops suddenly and the operation lamp blinks, it could be "operation mode conflict".

Check followings;

Are the operation modes all the same for the indoor units connected to multi system outdoor unit?
If not, set all the indoor units to the same operation mode and confirm that the operation lamp is not blinking.

Moreover, when the operation mode is automatic, set all the indoor unit operation mode as "cooling" or "heating" and check again if the operation lamp is normal.

If the lamp stops blinking after the above steps, there is no malfunction.

★Operation stops and operation lamp blinks only for indoor unit which different operation mode is set later. (The first set operation mode has priority.)

Outdoor Unit

The outdoor unit has one green LED (LED A) on the PCB. When the LED A blinks, the microcomputer works in order.

2. Problem Symptoms and Measures


Problem Symptom	Check Item	Details of Measure	Reference Page
None of the units operates.	Check the power supply.	Check to make sure that the rated voltage is supplied.	—
	Check the type of the indoor units.	Check to make sure that the indoor unit type is compatible with the outdoor unit.	—
	Check the outdoor temperature.	Heating operation cannot be used when the outdoor temperature is 20°C or higher, and cooling operation cannot be used when the outdoor temperature is below 10°C.	—
	Diagnose with remote controller indication	—	192, 193
	Check the remote controller addresses.	Check to make sure that address settings for the remote controller and indoor unit are correct.	278
Operation sometimes stops.	Check the power supply.	A power failure of 2 to 10 cycles can stop air conditioner operation. (Operation lamp OFF)	—
	Check the outdoor temperature.	Heating operation cannot be used when the outdoor temperature is 20°C or higher, and cooling operation cannot be used when the outdoor temperature is below 10°C.	—
	Diagnose with remote controller indication.	—	192, 193
Some indoor units do not operate.	Check the type of the indoor units.	Check to make sure that the indoor unit type is compatible with the outdoor unit.	—
	Diagnose with remote controller indication	—	192, 193
Units operate but do not cool, or do not heat.	Check for wiring and piping errors in the connection between the indoor and outdoor units.	Conduct the wiring/piping error check described on the product diagnosis nameplate.	—
	Check for thermistor detection errors.	Check to make sure that the thermistor is mounted securely.	—
	Check for faulty operation of the electronic expansion valve.	Set all the units to cooling operation, and compare the temperatures of the liquid pipes to see if the each electronic expansion valve works.	—
	Diagnose with remote controller indication.	—	192, 193
	Diagnose by service port pressure and operating current.	Check for refrigerant shortage.	228
Large operating noise and vibrations	Check the output voltage of the power module.	—	242
	Check the power module.	—	—
	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the installation manual, etc.) are provided.	—

3. Service Check Function

3.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series

3.1.1 ARC466 Series Remote Controller

- Check Method 1**
1. When the timer cancel button is held down for 5 seconds, "00" indication appears on the temperature display section.

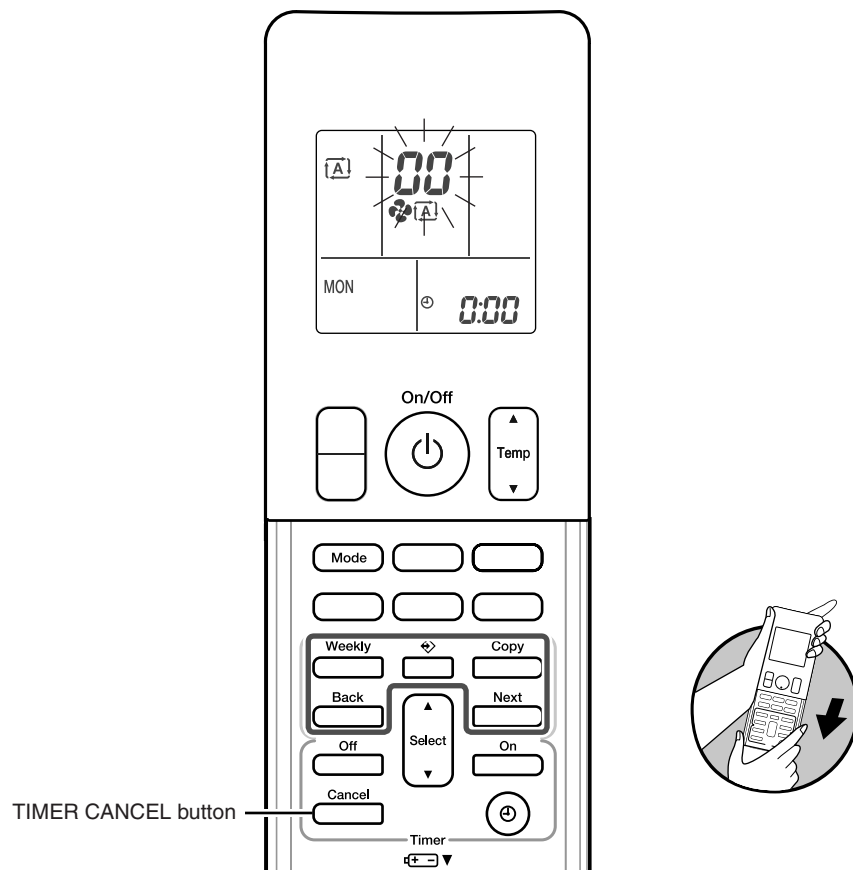

< ARC466 Series >

(R11668)

2. Press the timer cancel button repeatedly until a long beep sounds.
 - The code indication changes in the sequence shown below.

No.	Code	No.	Code	No.	Code
1	00	13	07	25	08
2	04	14	03	26	04
3	05	15	08	27	04
4	06	16	09	28	03
5	06	17	09	29	04
6	00	18	04	30	07
7	06	19	05	31	02
8	07	20	03	32	08
9	00	21	06	33	04
10	03	22	05	34	08
11	05	23	01	35	01
12	06	24	01	36	09




Note:


1. A short beep "pi" and two consecutive beeps "pi pi" indicate non-corresponding codes.
2. To return to the normal mode, hold the timer cancel button down for 5 seconds. When the remote controller is left untouched for 60 seconds, it also returns to the normal mode.

Check Method 2


1. Press the center of the Temp button and the Mode button at the same time.

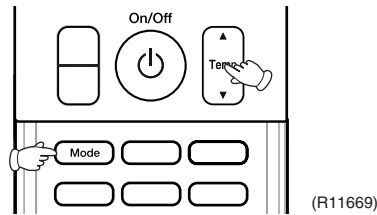


“5ㄥ” is displayed on the LCD.

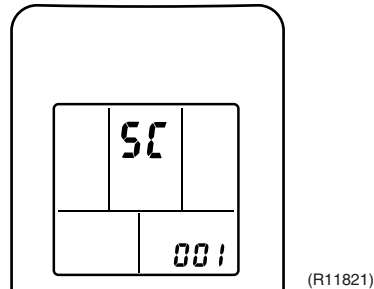

2. Select “5ㄥ” (service check) with the Temp ▲ or ▼ button.
3. Press the Mode button to enter the service check mode.
The figure of the ten’s place blinks.

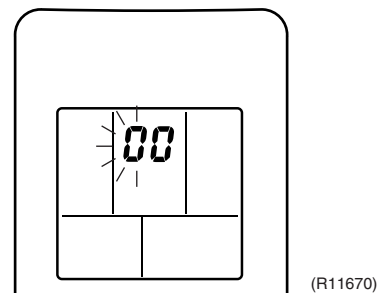


4. Press the Temp ▲ or ▼ button and change the figure until you hear the sound of “beep” or “pi pi”.

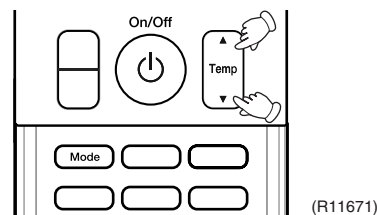


5. Diagnose by the sound.
 - ★“pi” : The figure of the ten’s place does not accord with the error code.
 - ★“pi pi” : The figure of the ten’s place accords with the error code but the one’s not.
 - ★“beep” : The both figures of the ten’s and one’s place accord with the error code.
(The figures indicated when you hear the “beep” sound are error code.
→ Refer to page 192, 193.)


6. Press the Mode button.

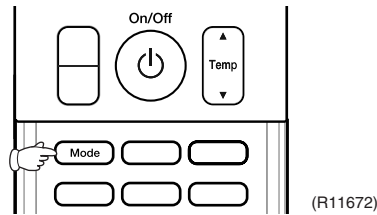

The figure of the one's place blinks.

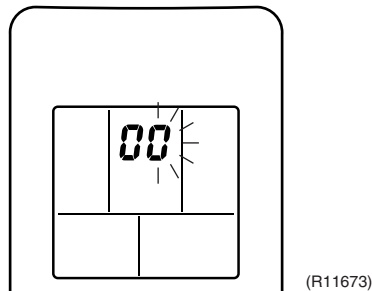

7. Press the Temp ▲ or ▼ button and change the figure until you hear the sound of “beep”.

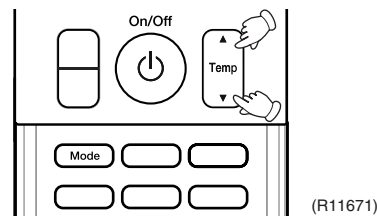


8. Diagnose by the sound.

- ★“pi” : The figure of the ten's place does not accord with the error code.
- ★“pi pi” : The figure of the ten's place accords with the error code but the one's not.
- ★“beep” : The both figures of the ten's and one's place accord with the error code.

9. Determine the error code.

The figures indicated when you hear the “beep” sound are error code.
(Error codes and description → Refer to page 192, 193.)


10. Press the Mode button for 5 seconds to exit from the service check mode.
(When the remote controller is left untouched for 60 seconds, it returns to the normal mode also.)

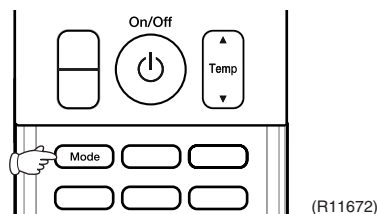

3.1.2 ARC452 Series Remote Controller

Check Method 1

1. When the timer cancel button is held down for 5 seconds, “00” indication appears on the temperature display section.

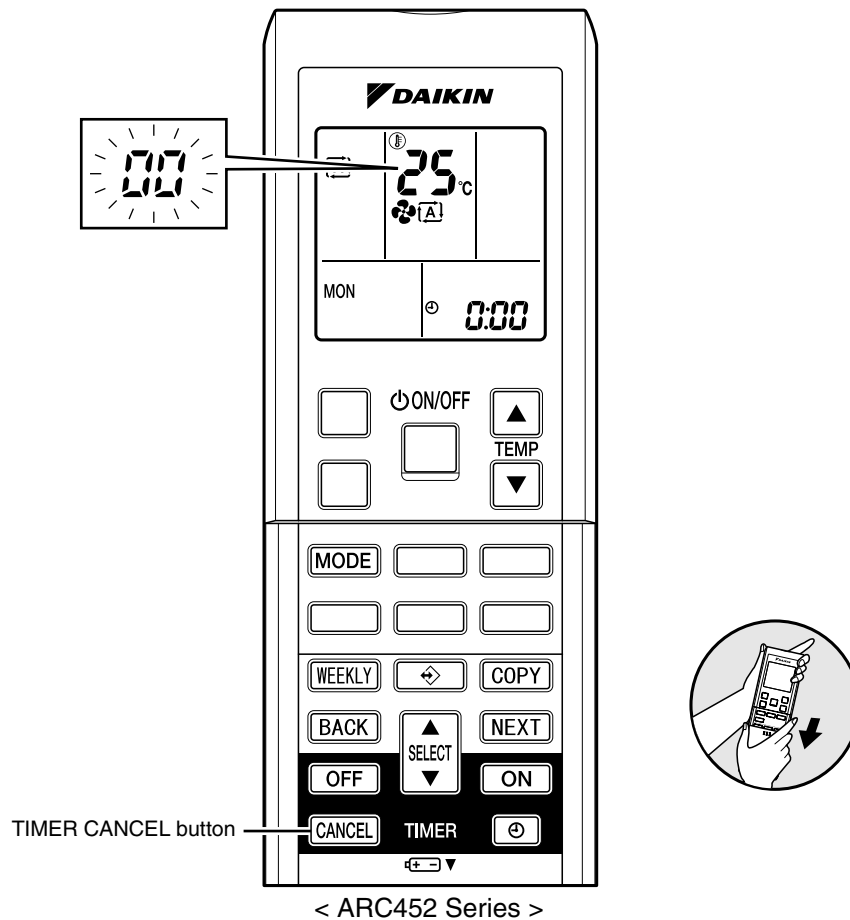

(R11385)

2. Press the timer cancel button repeatedly until a long beep sounds.
 - The code indication changes in the sequence shown below.

No.	Code	No.	Code	No.	Code
1	00	13	07	25	UR
2	04	14	R3	26	UR
3	15	15	H8	27	P4
4	E6	16	H9	28	L3
5	H6	17	09	29	L4
6	H0	18	04	30	H7
7	R6	19	05	31	U2
8	E7	20	J3	32	ER
9	U0	21	J6	33	R4
10	F3	22	E5	34	FR
11	R5	23	R1		
12	F6	24	E1		




Note:


1. A short beep “pi” and two consecutive beeps “pi pi” indicate non-corresponding codes.
2. To return to the normal mode, hold the timer cancel button down for 5 seconds. When the remote controller is left untouched for 60 seconds, it also returns to the normal mode.

Check Method 2


1. Press the 3 buttons (TEMP▲, TEMP▼, MODE) simultaneously to enter the diagnosis mode.

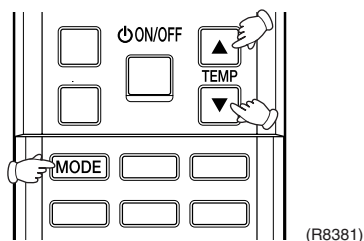

The figure of the ten's place blinks.

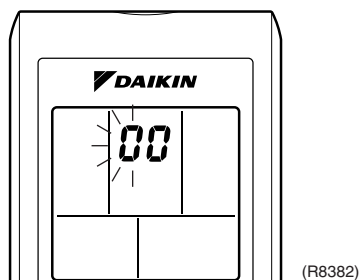


2. Press the TEMP ▲ or ▼ button and change the figure until you hear the sound of “beep” or “pi pi”.

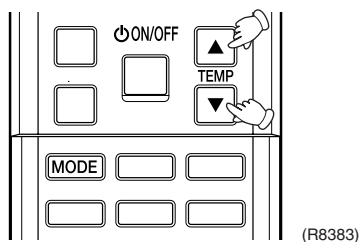


3. Diagnose by the sound.
 - ★“pi” : The figure of the ten's place does not accord with the error code.
 - ★“pi pi” : The figure of the ten's place accords with the error code but the one's not.
 - ★“beep” : The both figures of the ten's and one's place accord with the error code.
(The figures indicated when you hear the “beep” sound are error code.
→ Refer to page 192, 193.)


4. Press the MODE button.

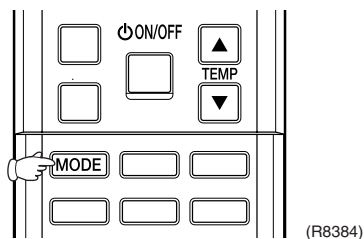


The figure of the one's place blinks.

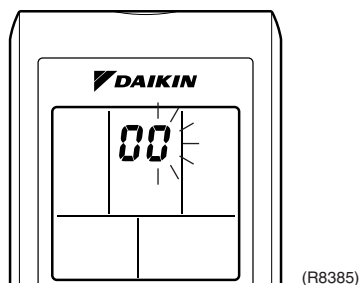


5. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of “beep”.

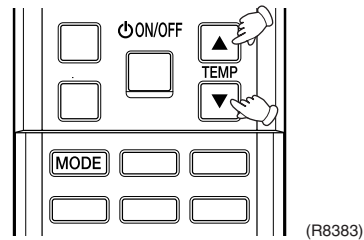


6. Diagnose by the sound.
- ★“pi” : The figure of the ten’s place does not accord with the error code.
 - ★“pi pi” : The figure of the ten’s place accords with the error code but the one’s not.
 - ★“beep” : The both figures of the ten’s and one’s place accord with the error code.
7. Determine the error code.
The figures indicated when you hear the “beep” sound are error code.
(Error codes and description → Refer to page 192, 193.)
8. Press the MODE button to exit from the diagnosis mode.

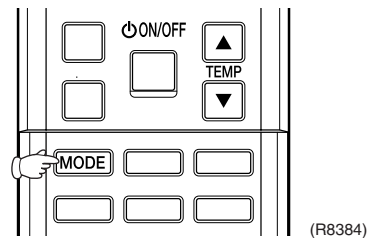

The display “7-” means the trial operation mode.
(Refer to page 275 for trial operation.)

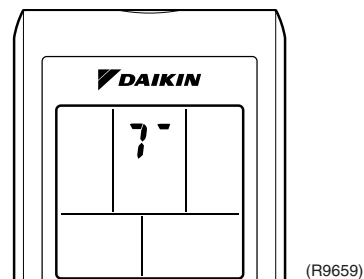

9. Press the ON/OFF button twice to return to the normal mode.

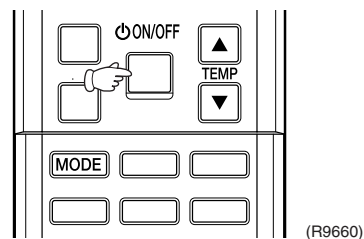


Note: When the remote controller is left untouched for 60 seconds, it returns to the normal mode.

3.1.3 ARC433 Series Remote Controller

Check Method 1

- When the timer cancel button is held down for 5 seconds, "00" indication appears on the temperature display section.

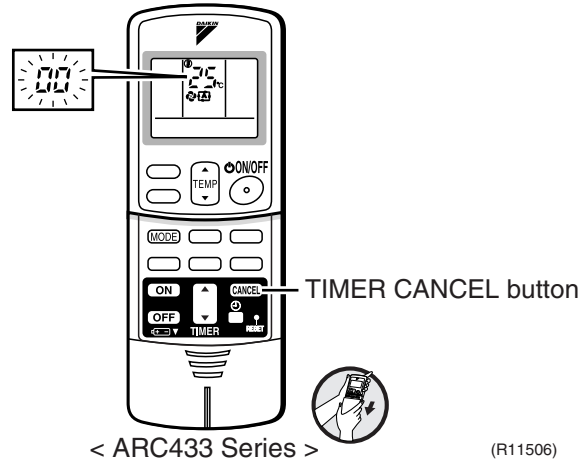

- Press the timer cancel button repeatedly until a long beep sounds.
 - The code indication changes in the sequence shown below.

<ARC433B41>

No.	Code	No.	Code	No.	Code
1	00	12	F6	23	R1
2	U4	13	C7	24	E1
3	L5	14	R3	25	UR
4	E6	15	H8	26	UH
5	H6	16	H9	27	P4
6	H0	17	C9	28	L3
7	R6	18	C4	29	L4
8	E7	19	C5	30	H7
9	U0	20	J3	31	U2
10	F3	21	J6	32	ER
11	R5	22	E5	33	R4

<ARC433B67, B68, B69, B76>

No.	Code	No.	Code	No.	Code
1	00	12	C7	23	H0
2	U4	13	H8	24	E1
3	F3	14	J3	25	P4
4	E6	15	R3	26	L3
5	L5	16	R1	27	L4
6	R6	17	C4	28	H6
7	E5	18	C5	29	H7
8	F6	19	H9	30	U2
9	C9	20	J6	31	UH
10	U0	21	UR	32	ER
11	E7	22	R5	33	R4




Note:


- A short beep "pi" and two consecutive beeps "pi pi" indicate non-corresponding codes.
- To return to the normal mode, hold the timer cancel button down for 5 seconds. When the remote controller is left untouched for 60 seconds, it also returns to the normal mode.

Check Method 2


1. Press the center of the TEMP button and the MODE button simultaneously to enter the diagnosis mode.

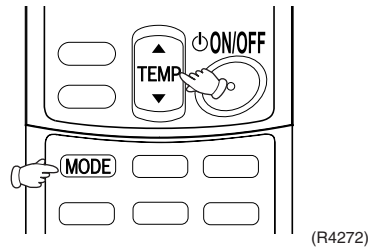

The figure of the ten's place blinks.

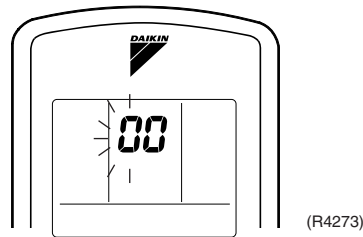


2. Press the TEMP ▲ or ▼ button and change the figure until you hear the sound of “beep” or “pi pi”.

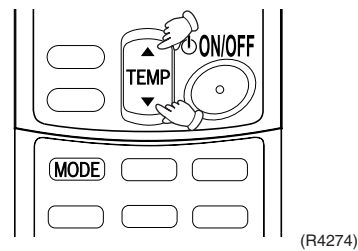


3. Diagnose by the sound.
 - ★“pi” : The figure of the ten's place does not accord with the error code.
 - ★“pi pi” : The figure of the ten's place accords with the error code but the one's not.
 - ★“beep” : The both figures of the ten's and one's place accord with the error code.
(The figures indicated when you hear the “beep” sound are error code.
→ Refer to page 192, 193.)


4. Press the MODE button.

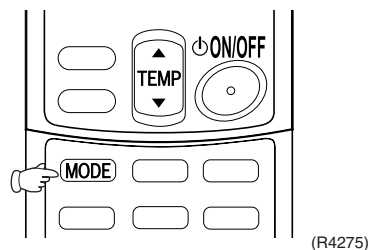

The figure of the one's place blinks.

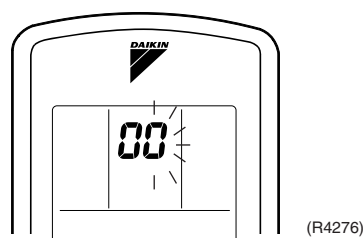


5. Press the TEMP▲ or ▼ button and change the figure until you hear the sound of “beep”.

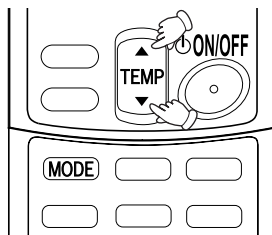

(R4277)


6. Diagnose by the sound.
- ★“pi” : The figure of the ten’s place does not accord with the error code.
 - ★“pi pi” : The figure of the ten’s place accords with the error code but the one’s not.
 - ★“beep” : The both figures of the ten’s and one’s place accord with the error code.
7. Determine the error code.
The figures indicated when you hear the “beep” sound are error code.
(Error codes and description → Refer to page 192, 193.)

8. Press the MODE button to exit from the diagnosis mode.

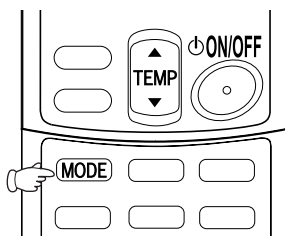


(R4278)

The display “ 7 - ” means the trial operation mode.
(Refer to page 275 for trial operation.)

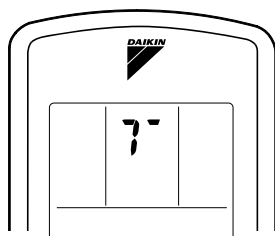

(R9669)

9. Press the ON/OFF button twice to return to the normal mode.

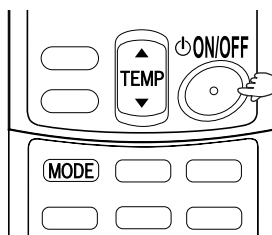

(R9670)




Note: When the remote controller is left untouched for 60 seconds, it returns to the normal mode.

3.2 SA Indoor Unit - FFQ Series

3.2.1 Inspection / Test Button


The following modes can be selected by using the [Inspection / Test] button on the remote controller.

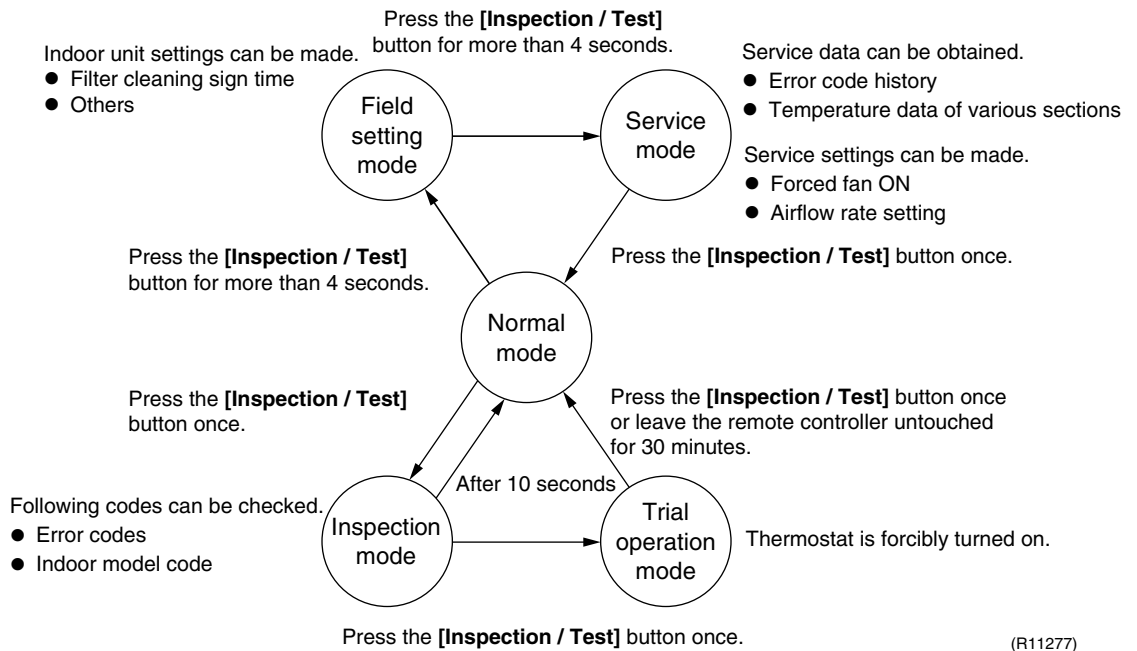

3.2.2 Fault-diagnosis by Wired Remote Controller

Explanation

If operation stops due to malfunction, the operation lamp on the remote controller blinks, and error code is displayed. (Even if stop operation is carried out, malfunction contents are displayed when inspection mode is entered.) The error code enables you to tell what kind of malfunction caused operation to stop. Refer to page 192, 193 for error code and malfunction contents.

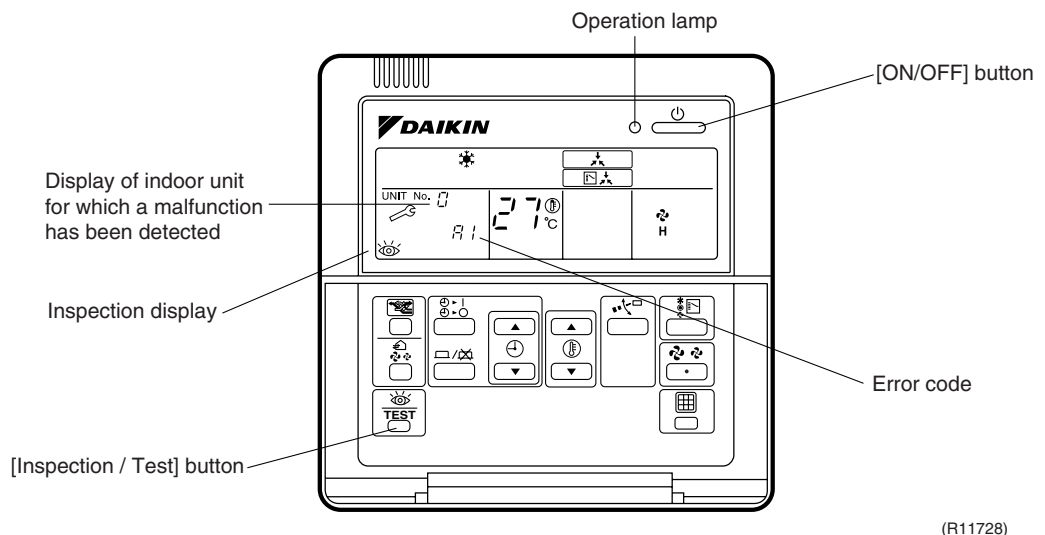

- Note:**
1. When you press the [Inspection / Test] button, the inspection display blinks.
 2. While in the inspection mode, press the [ON/OFF] button for 5 seconds or more to clear the failure history indication. In this case, the error code blinks twice and then changes to "00" (= Normal), the UNIT No. changes to "0", and the operation mode automatically switches from the inspection mode to the normal mode (displaying the set temperature).

3.2.3 Fault-Diagnosis by Wireless Remote Controller

Introduction



Contrary to the wired remote controller, the wireless remote controller does not display the error code. Instead, the operation LED on the light reception section flashes.



Checking

To find the error code, proceed as follows:

Step	Action
1	<p>Press the [Inspection / Test] button to enter the inspection mode. Then the figure "00" blinks on the UNIT No. display.</p> <div data-bbox="707 551 922 1077" style="text-align: center;"> </div> <p style="text-align: right; margin-right: 100px;">[Inspection / Test] button</p> <p style="text-align: right;">(R11286)</p>

Step	Action								
<p>2</p>	<p>Press the UP or DOWN button and change the UNIT No. until the receiver of the remote controller starts to beep.</p> <div data-bbox="735 309 1264 840" style="text-align: center;"> <p>UP button DOWN button</p> </div> <p style="text-align: right;">(R11287)</p> <table border="1" style="width: 100%; margin-top: 20px;"> <thead> <tr> <th data-bbox="616 920 994 954">If you hear...</th> <th data-bbox="994 920 1374 954">Then...</th> </tr> </thead> <tbody> <tr> <td data-bbox="616 954 994 987">3 short beeps</td> <td data-bbox="994 954 1374 987">Follow all steps below.</td> </tr> <tr> <td data-bbox="616 987 994 1122">1 short beep</td> <td data-bbox="994 987 1374 1122">Follow steps 3 and 4. Continue the operation in step 4 until you hear a continuous beep. This continuous beep indicates that the error code is confirmed.</td> </tr> <tr> <td data-bbox="616 1122 994 1155">1 continuous beep</td> <td data-bbox="994 1122 1374 1155">There is no abnormality.</td> </tr> </tbody> </table>	If you hear...	Then...	3 short beeps	Follow all steps below.	1 short beep	Follow steps 3 and 4. Continue the operation in step 4 until you hear a continuous beep. This continuous beep indicates that the error code is confirmed.	1 continuous beep	There is no abnormality.
If you hear...	Then...								
3 short beeps	Follow all steps below.								
1 short beep	Follow steps 3 and 4. Continue the operation in step 4 until you hear a continuous beep. This continuous beep indicates that the error code is confirmed.								
1 continuous beep	There is no abnormality.								
<p>3</p>	<p>Press the MODE button. The left “0” (upper digit) indication of the error code blinks.</p> <div data-bbox="751 1238 1248 1769" style="text-align: center;"> <p>MODE button</p> </div> <p style="text-align: right;">(R11288)</p>								

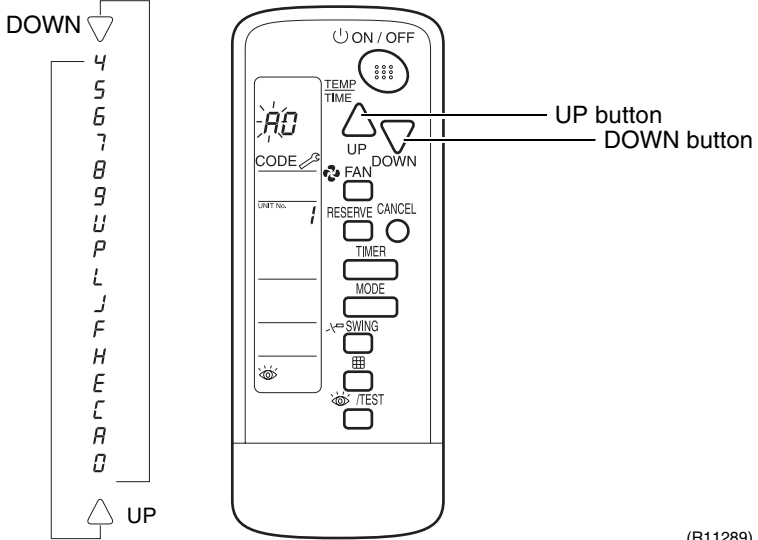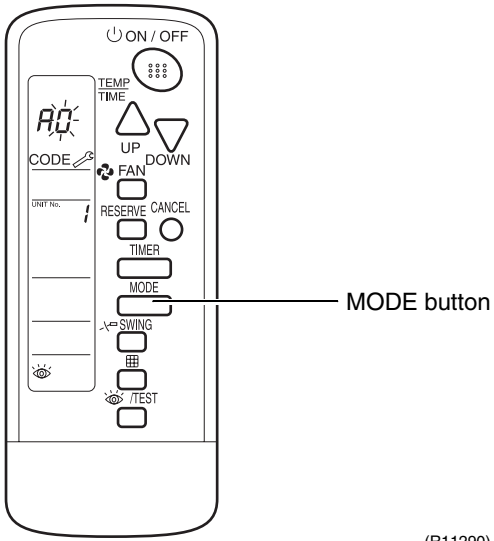Step	Action								
4	<p>Press the UP or DOWN button to change the error code upper digit until the receiver of the remote controller starts to beep.</p>  <p>(R11289)</p> <table border="1" data-bbox="614 922 1375 1070"> <thead> <tr> <th>If you hear...</th> <th>Then...</th> </tr> </thead> <tbody> <tr> <td>2 short beeps</td> <td>The upper digit matches.</td> </tr> <tr> <td>1 short beep</td> <td>No digits match.</td> </tr> <tr> <td>1 continuous beep</td> <td>Both upper and lower digits match.</td> </tr> </tbody> </table>	If you hear...	Then...	2 short beeps	The upper digit matches.	1 short beep	No digits match.	1 continuous beep	Both upper and lower digits match.
If you hear...	Then...								
2 short beeps	The upper digit matches.								
1 short beep	No digits match.								
1 continuous beep	Both upper and lower digits match.								
5	<p>Press the MODE button. The right “0” (lower digit) indication of the error code blinks.</p>  <p>(R11290)</p>								

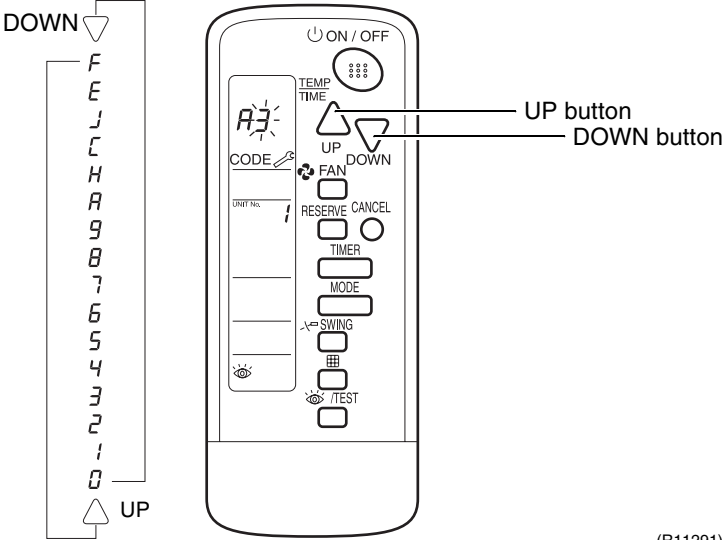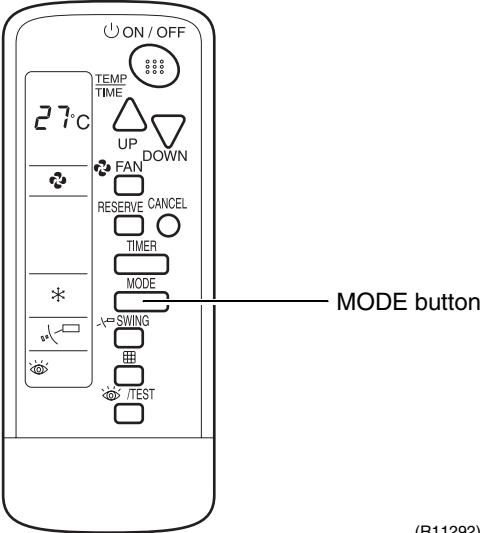Step	Action
<p>6</p>	<p>Press the UP or DOWN button and change the error code lower digit until the receiver of the remote controller generates a continuous beep.</p>  <p>(R11291)</p>
<p>7</p>	<p>Press the MODE button to return to the normal mode. If you do not press any button for 1 minutes, the remote controller automatically returns to the normal mode.</p>  <p>(R11292)</p>

4. Code Indication on Remote Controller

4.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series

Error Codes	Description	Reference Page	
00	Normal condition	—	
R1	Indoor unit PCB abnormality	194	
R5	Freeze-up protection control or heating peak-cut control	195	
R6	Fan motor or related abnormality	AC motor (duct, floor / ceiling)	197
		DC motor (wall, floor standing)	198
C4	Indoor heat exchanger thermistor or related abnormality	200	
C9	Room temperature thermistor or related abnormality	200	

4.2 SA Indoor Unit - FFQ Series

Error Codes	Description	Remarks	Reference Page
R1	Indoor unit PCB abnormality		201
R3	Drain water level system abnormality		202
R6	Fan motor or related abnormality	(See Note.)	204
RF	Drain system abnormality	Activation of float switch during compressor off.	205
C4	Thermistor or related abnormality		206
C9	Thermistor or related abnormality		206
CJ	Remote controller air thermistor abnormality	Failure of remote controller air thermistor. Unit can be operated by indoor unit thermistor.	208

: Error code displays automatically and system stops. Inspect and repair it.

: In the case of the shaded error codes, “inspection” is not displayed. The system operates, but be sure to inspect and repair it.

Note: There is a possibility of open phase power supply, also check power supply.

4.3 Outdoor Unit

	Error Codes	Description	Reference Page
System	00	Normal	—
	U0★	Refrigerant shortage	228
	U2	Low-voltage detection or over-voltage detection	230
	U4	Outdoor unit PCB abnormality or signal transmission error	231
	UR	Unspecified voltage (between indoor unit and outdoor unit)	234
	UH	Anti-icing control in other room	234
Outdoor Unit	R5	Anti-icing control for indoor unit	209
	E5★	OL activation (compressor overload)	211
	E6★	Compressor lock	212
	E7	DC fan lock	213
	E8	Input overcurrent detection	214
	F3	Discharge pipe temperature control	215
	F6	High pressure control in cooling	216
	H0	Compressor system sensor abnormality	217
	H6	Position sensor abnormality	218
	H8	DC voltage / current sensor abnormality	220
	H9	Outdoor temperature thermistor or related abnormality	221
	J3	Discharge pipe thermistor or related abnormality	221
	J6	Outdoor heat exchanger thermistor or related abnormality	221
	J8	Liquid pipe temperature thermistor or related abnormality	221
	J9	Gas pipe temperature thermistor or related abnormality	221
	L3	Electrical box temperature rise	223
	L4	Radiation fin temperature rise	224
	L5	Output overcurrent detection	226
	P4	Radiation fin thermistor or related abnormality	221

★: Displayed only when system-down occurs.

5. Troubleshooting for RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series

5.1 Indoor Unit PCB Abnormality

Remote
Controller
Display

81

Method of
Malfunction
Detection

The system checks if the circuit works properly within the microcomputer of the indoor unit.


Malfunction
Decision
Conditions

The system cannot set the internal settings.

Supposed
Causes

- Wrong models interconnected
- Defective indoor unit PCB
- Disconnection of connector

Troubleshooting

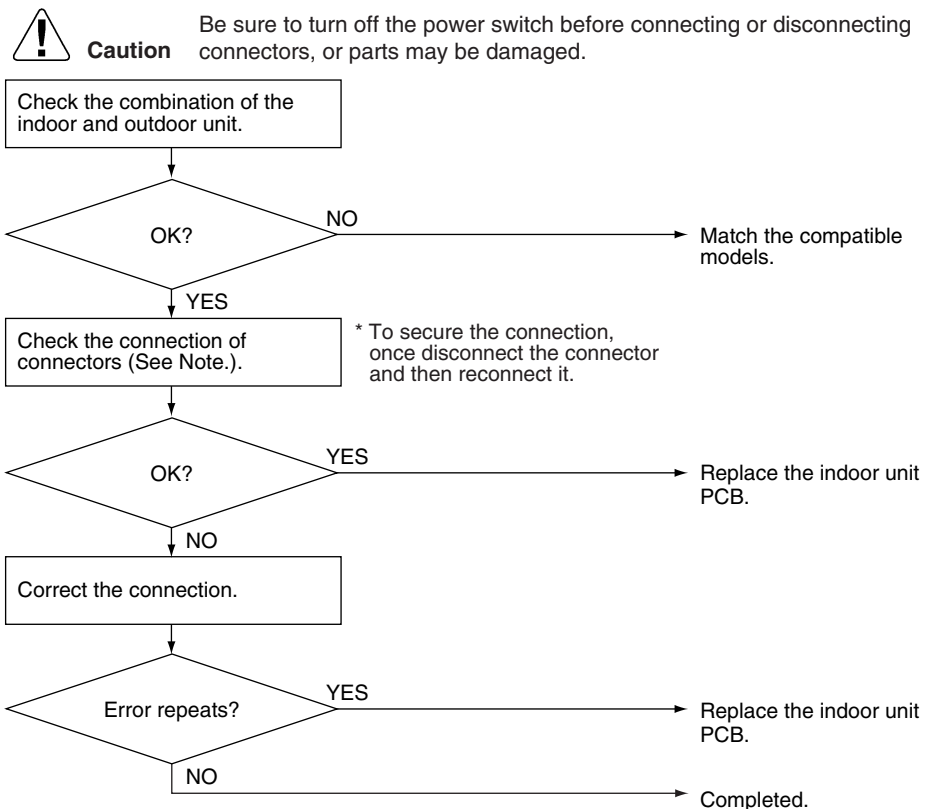

(R11930)



Note: Check the following connector.

Model Type	Connector
Wall mounted type	Terminal board ~ Control PCB
Floor standing type	Terminal board ~ Control PCB
Floor / ceiling suspended dual type	S36 ~ S37
Duct connected type	Terminal board ~ Control PCB

5.2 Freeze-up Protection Control or Heating Peak-cut Control

Remote
Controller
Display

85

Method of
Malfunction
Detection

- Freeze-up protection control
During cooling operation, the freeze-up protection control (operation halt) is activated according to the temperature detected by the indoor heat exchanger thermistor.
- Heating peak-cut control
During heating operation, the temperature detected by the indoor heat exchanger thermistor is used for the heating peak-cut control (operation halt, outdoor fan stop, etc.)

Malfunction
Decision
Conditions

- Freeze-up protection control
During cooling operation, the indoor heat exchanger temperature is below 0°C.
- Heating peak-cut control
During heating operation, the temperature detected by the indoor heat exchanger thermistor is above 65°C.

Supposed
Causes

- Clogged air filter of the indoor unit
- Dust accumulation on the indoor heat exchanger
- Short-circuited air
- Defective indoor heat exchanger thermistor
- Defective indoor unit PCB


Troubleshooting



Check No.06
Refer to P.238

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

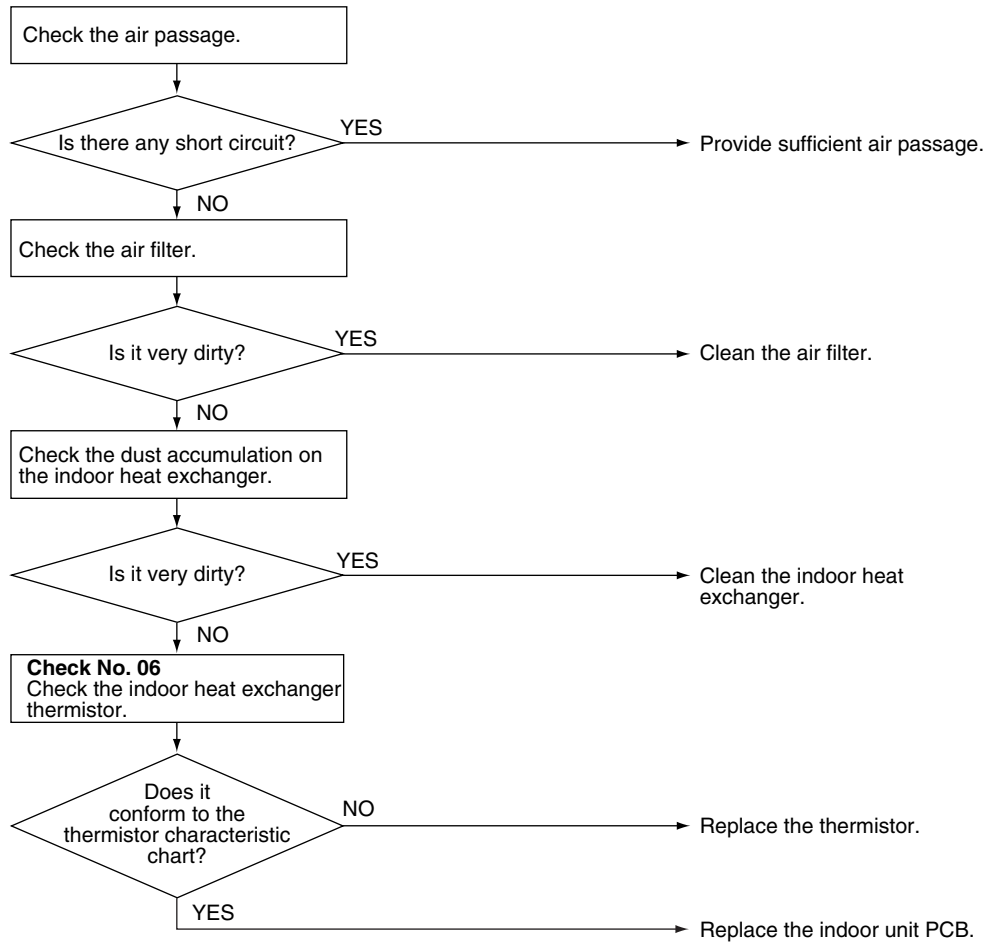

(R7131)

5.3 Fan Motor or Related Abnormality

5.3.1 AC Motor (Duct Connected Type, Floor / Ceiling Suspended Dual Type)

Remote
Controller
Display



Method of
Malfunction
Detection

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

Malfunction
Decision
Conditions

The detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

Supposed
Causes

- Layer short inside the fan motor winding
- Breaking of wire inside the fan motor
- Breaking of the fan motor lead wires
- Defective capacitor of the fan motor
- Defective indoor unit PCB

Troubleshooting




Check No.16
Refer to P.246



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

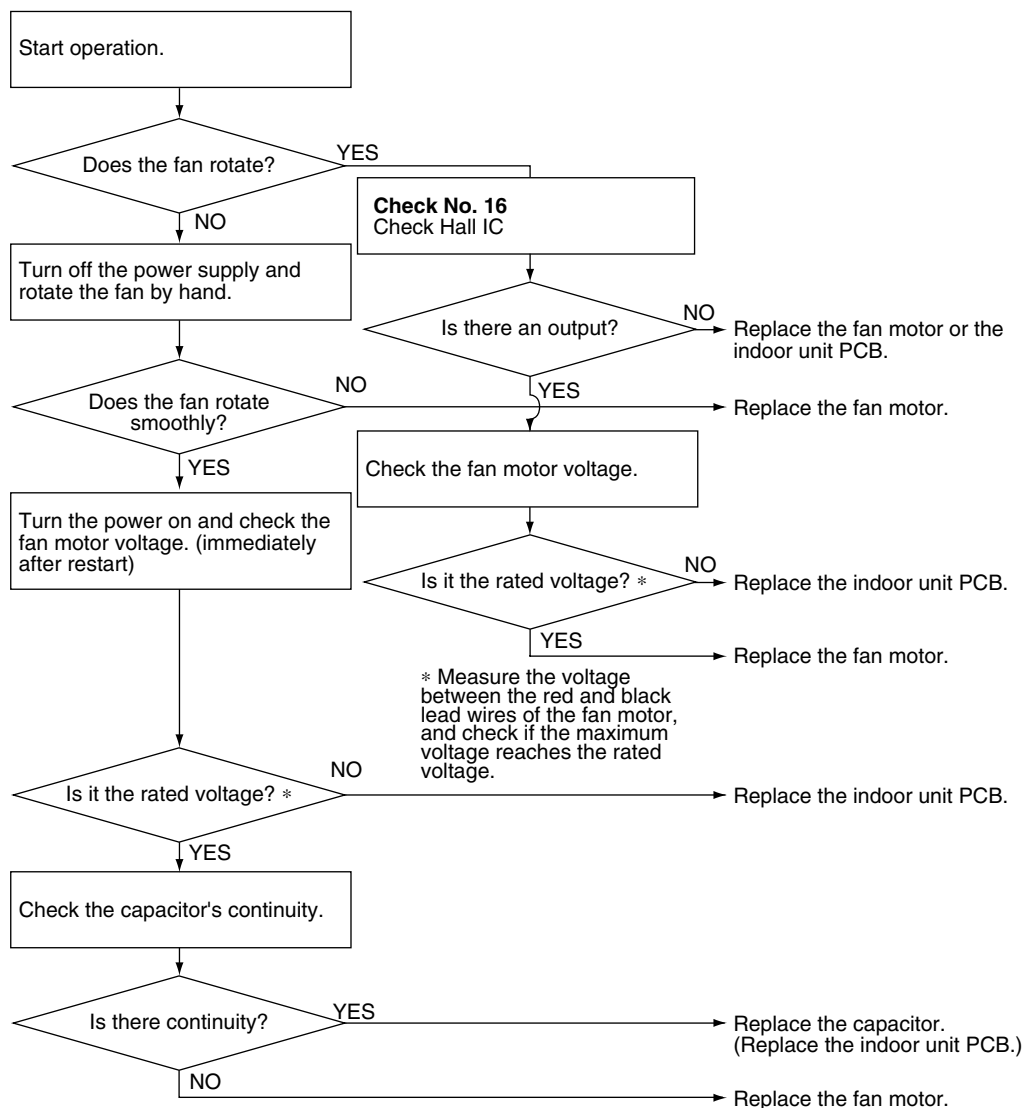

(R11411)

5.3.2 DC Motor (Wall Mounted Type, Floor Standing Type)

**Remote
Controller
Display**



**Method of
Malfunction
Detection**

The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor operation.

**Malfunction
Decision
Conditions**

The detected rotation speed does not reach the demanded rotation speed of the target tap, and is less than 50% of the maximum fan motor rotation speed.

**Supposed
Causes**


- Disconnection of connector
- Foreign matters stuck in the fan
- Layer short inside the fan motor winding
- Breaking of wire inside the fan motor
- Breaking of the fan motor lead wires
- Defective capacitor of the fan motor
- Defective indoor unit PCB

Troubleshooting


Check No.01
 Refer to P.235



Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

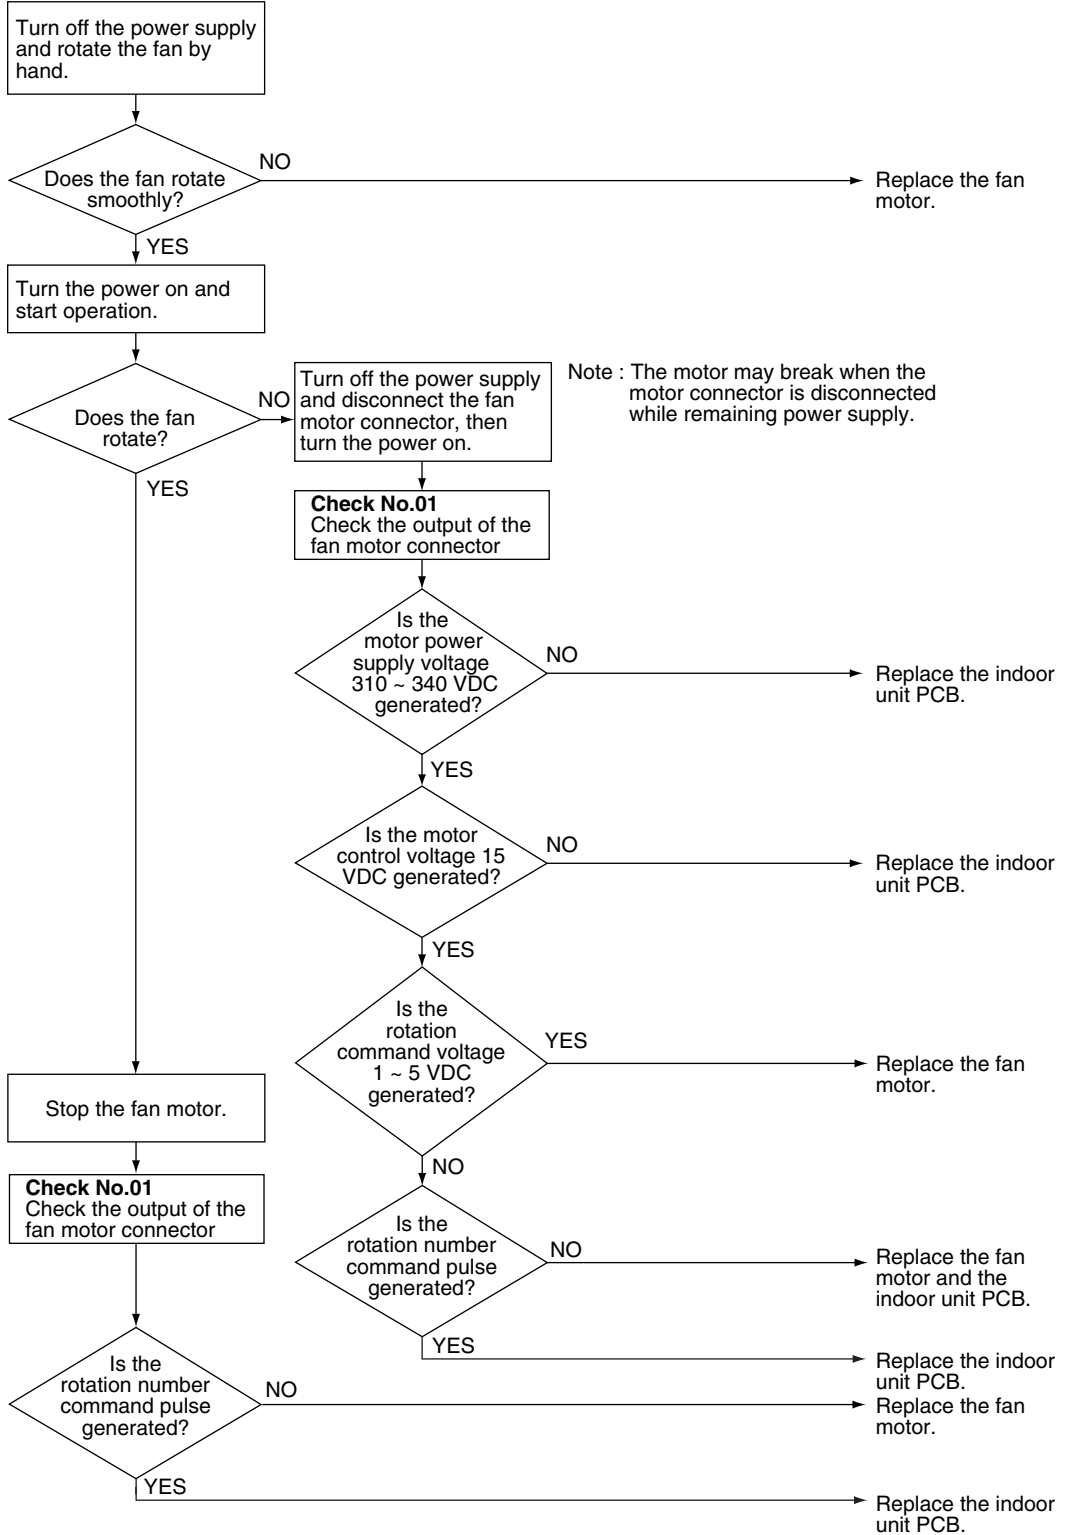

(R11293)

5.4 Thermistor or Related Abnormality (Indoor Unit)

Remote
Controller
Display

Ⓔ4, Ⓔ9

Method of
Malfunction
Detection

The temperatures detected by the thermistors are used to determine thermistor errors.

Malfunction
Decision
Conditions

The thermistor input is more than 4.96 V or less than 0.04 V during compressor operation.

Supposed
Causes

- Disconnection of connector
- Defective thermistor
- Defective indoor unit PCB

Troubleshooting




Check No.06
Refer to P.238



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

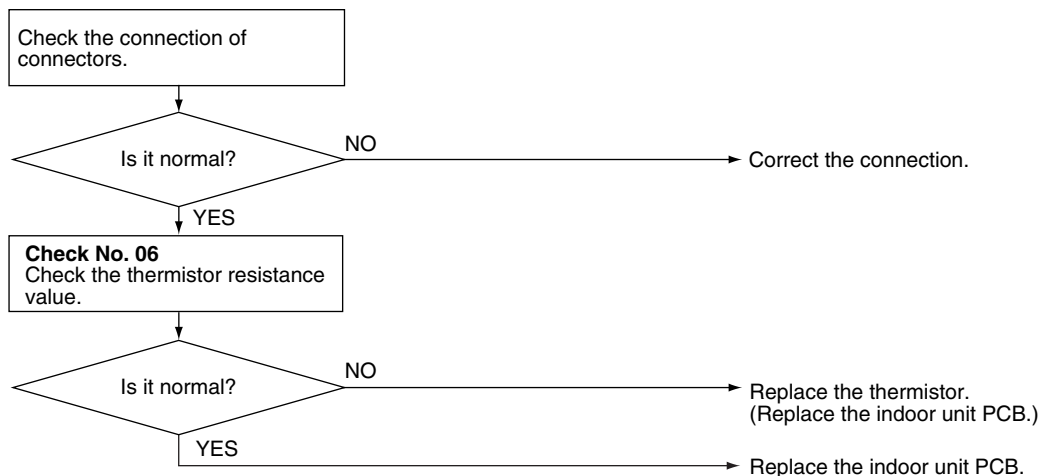

(R7134)

Ⓔ4 : Indoor heat exchanger thermistor
Ⓔ9 : Room temperature thermistor

6. Troubleshooting for SA Indoor Unit - FFQ Series

6.1 Indoor Unit PCB Abnormality

Remote
Controller
Display



Malfunction
Decision
Conditions

When the data from the EEPROM is not received correctly

EEPROM (Electrically Erasable Programmable Read Only Memory): A memory chip that holds its content without power. It can be erased, either within the computer or externally and usually requires more voltage for erasure than the common +5 volts used in logic circuits. It functions like non-volatile RAM, but writing to EEPROM is slower than writing to RAM.

Supposed
Causes


- Defective indoor unit PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

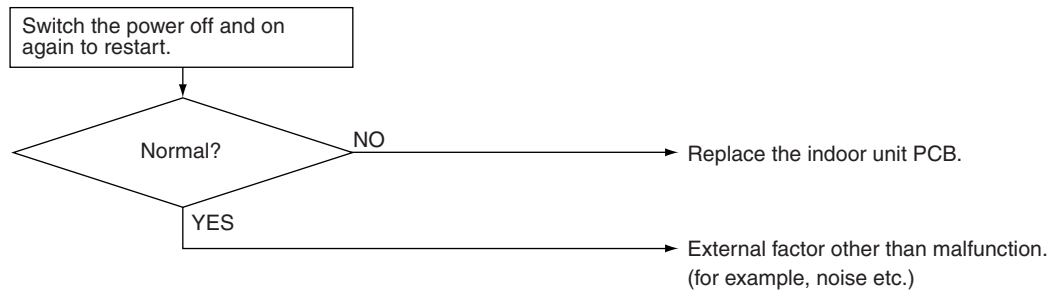

(R11294)

6.2 Drain Water Level System Abnormality

Remote
Controller
Display

83

Malfunction
Decision
Conditions

When the water level reaches its upper limit and when the float switch turns OFF


Supposed
Causes

- Defective drain pump
- Improper drain piping work
- Clogged drain piping
- Defective float switch
- Defective indoor unit PCB
- Defective short circuit connector X15A on indoor unit PCB

Troubleshooting



Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

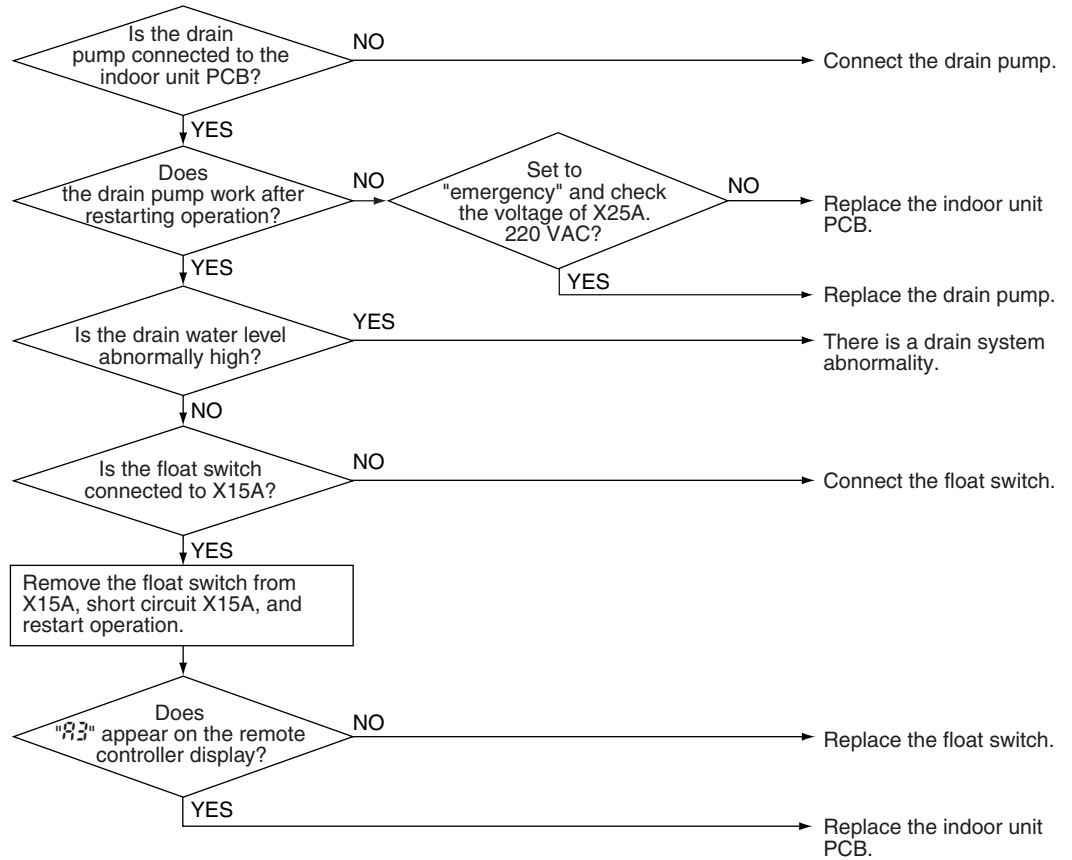

(R11295)



Note: If "R3" is detected by the indoor unit PCB which is not mounted with X15A, the indoor unit PCB is defective.

6.3 Fan Motor or Related Abnormality

Remote
Controller
Display



Malfunction
Decision
Conditions

When the fan rotations are not detected while the output voltage to the fan is at its maximum

Supposed
Causes


- Defective indoor fan motor
- Broken or disconnected wire
- Defective contact
- Defective indoor unit PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

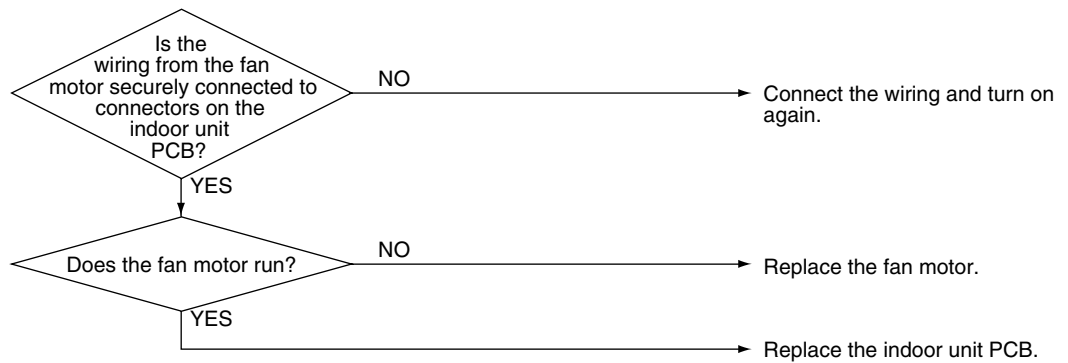

(R11296)

6.4 Drain System Abnormality

Remote
Controller
Display



Malfunction
Decision
Conditions

When the float switch changes from ON to OFF while the compressor is OFF

Supposed
Causes


- Error in the drain pipe installation
- Defective float switch
- Defective indoor unit PCB

Troubleshooting




Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

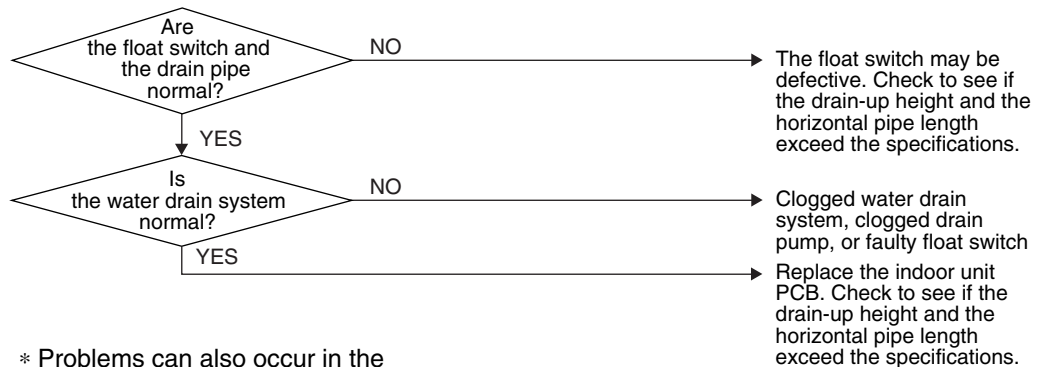

* Problems can also occur in the optional drain pump.

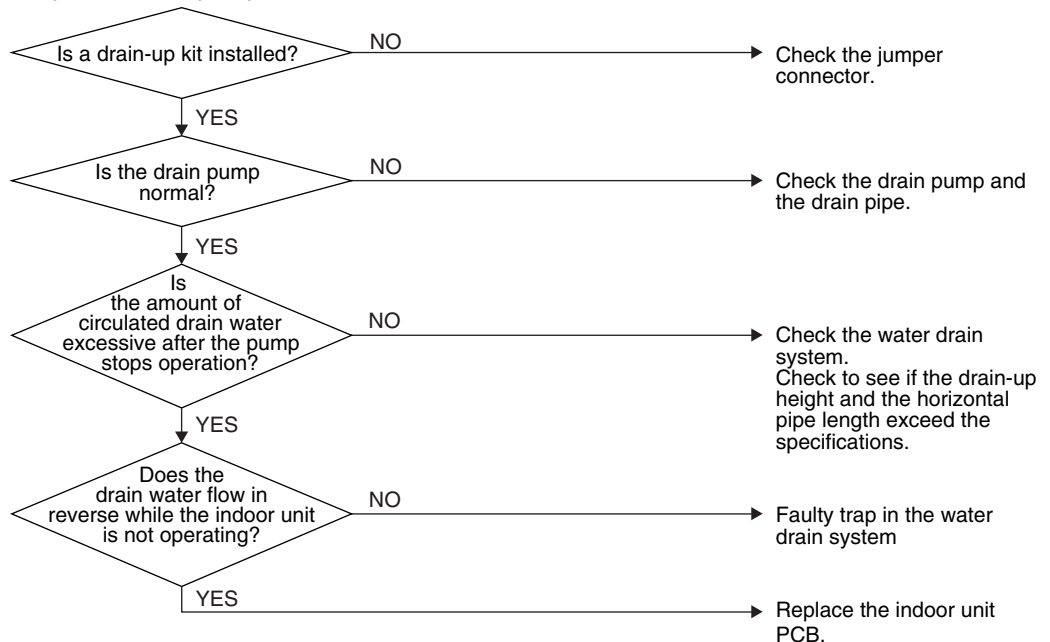

(R13769)

6.5 Thermistor or Related Abnormality

Remote Controller Display

The table below describes the two thermistor abnormalities.

Error	Description
E4	Defective indoor heat exchanger thermistor system
E9	Defective room temperature thermistor system

Malfunction Decision Conditions

When during compressor operation:

- Thermistor input > 4.96 V
- or
- Thermistor output < 0.04 V.

Supposed Causes

- Disconnection of connector
- Defective thermistor
- Defective indoor unit PCB
- Broken or disconnected wire

Checking thermistors

If the cause of the problem is related to the thermistors, the thermistors should be checked prior to changing the indoor unit PCB.


To check the thermistors, proceed as follows:

Step	Action
1	Disconnect the thermistor from the indoor unit PCB.
2	Read the temperature and the resistor value.
3	Check if the measured values correspond with the values in the table of thermistor resistance check.



Refer to "Thermistor resistance check" on page 238 for detail.

Troubleshooting

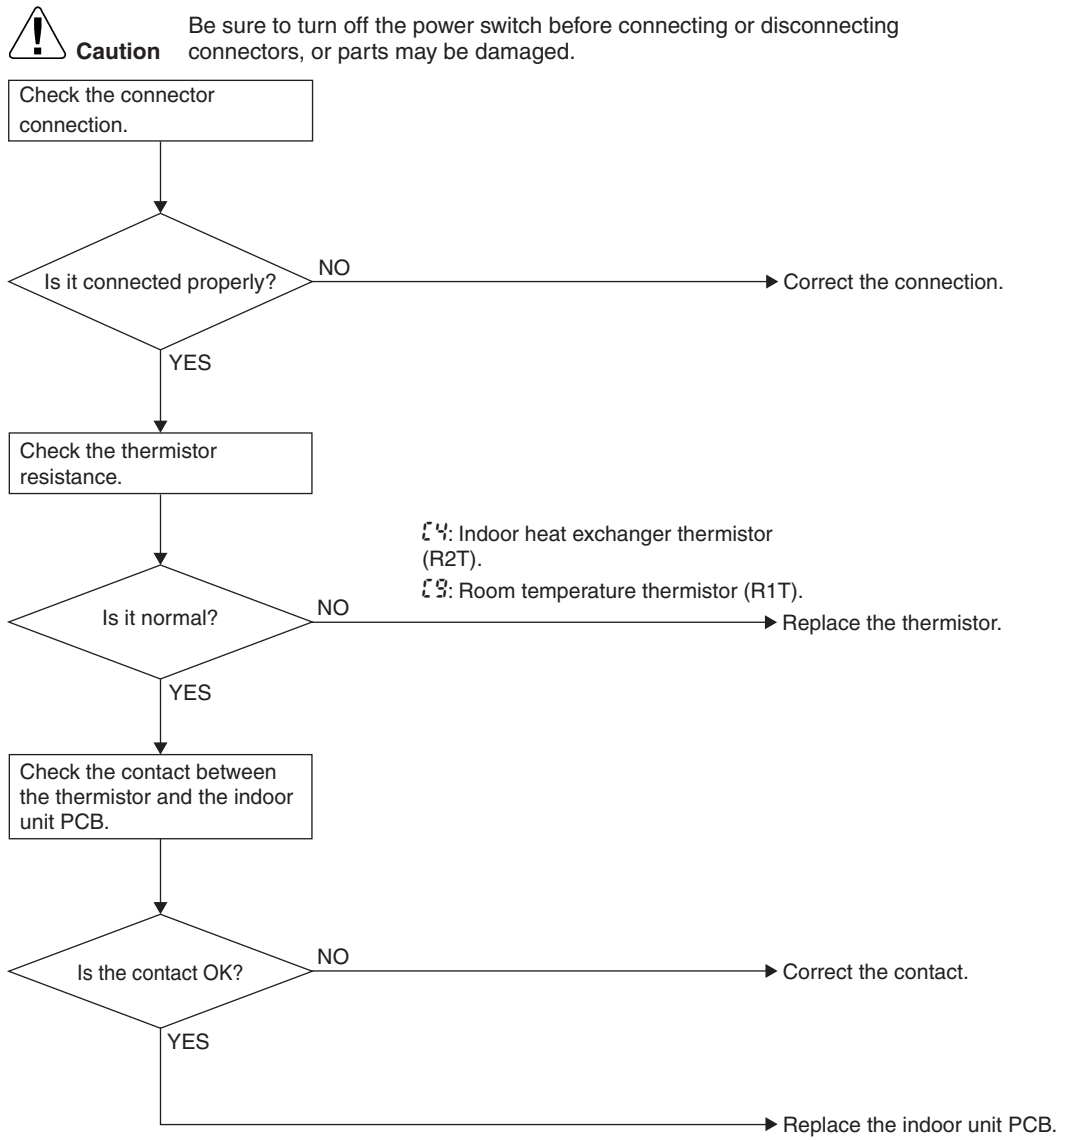

(R11299)

6.6 Remote Controller Air Thermistor Abnormality

Remote
Controller
Display



Malfunction
Decision
Conditions


When the remote controller thermistor disconnected or shorted while the unit is running

Even if the remote controller thermistor is malfunctioning, the system can operate with the system thermistor.

Supposed
Causes

- Defective thermistor
- Broken wire

Troubleshooting

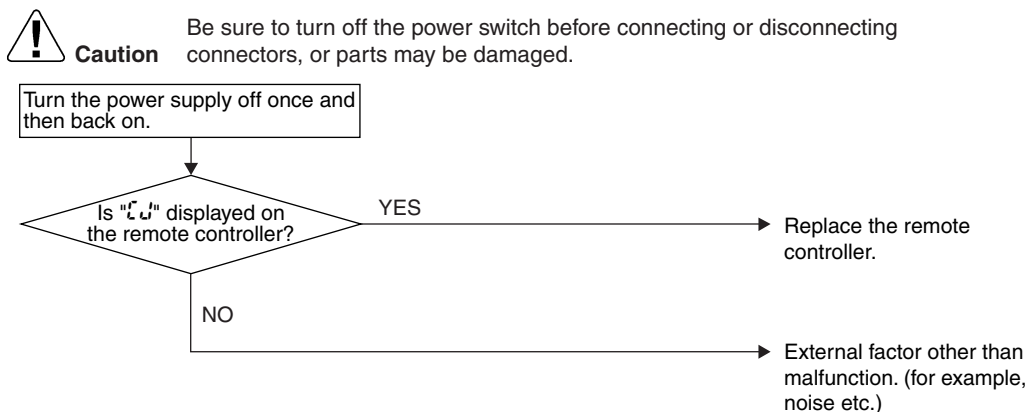

(R11300)

7. Troubleshooting for Outdoor Unit

7.1 Anti-icing Control for Indoor Unit

<p>Remote Controller Display</p>	<p>RS</p>
<p>Method of Malfunction Detection</p>	<p>During cooling operation, indoor unit icing is detected by checking the temperatures sensed by the indoor heat exchanger thermistor and room temperature thermistor that are located in a shut-down room.</p>
<p>Malfunction Decision Conditions</p>	<ul style="list-style-type: none"> ■ In cooling operation, both the condition (A) and (B) are met for 5 minutes. <ul style="list-style-type: none"> (A) Stop room thermistor temperature – Indoor heat exchanger temperature $\geq 10^{\circ}\text{C}$ (B) Indoor heat exchanger temperature $\leq -1^{\circ}\text{C}$ ■ If the error repeats 4 times, the system is shut down. ■ Reset condition: Continuous run for about 60 minutes without any other error
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Wrong wiring or piping ■ Defective electronic expansion valve ■ Short-circuited air ■ Defective indoor heat exchanger thermistor ■ Defective room temperature thermistor

Troubleshooting




Check No.04
Refer to P.236



Check No.06
Refer to P.238




Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

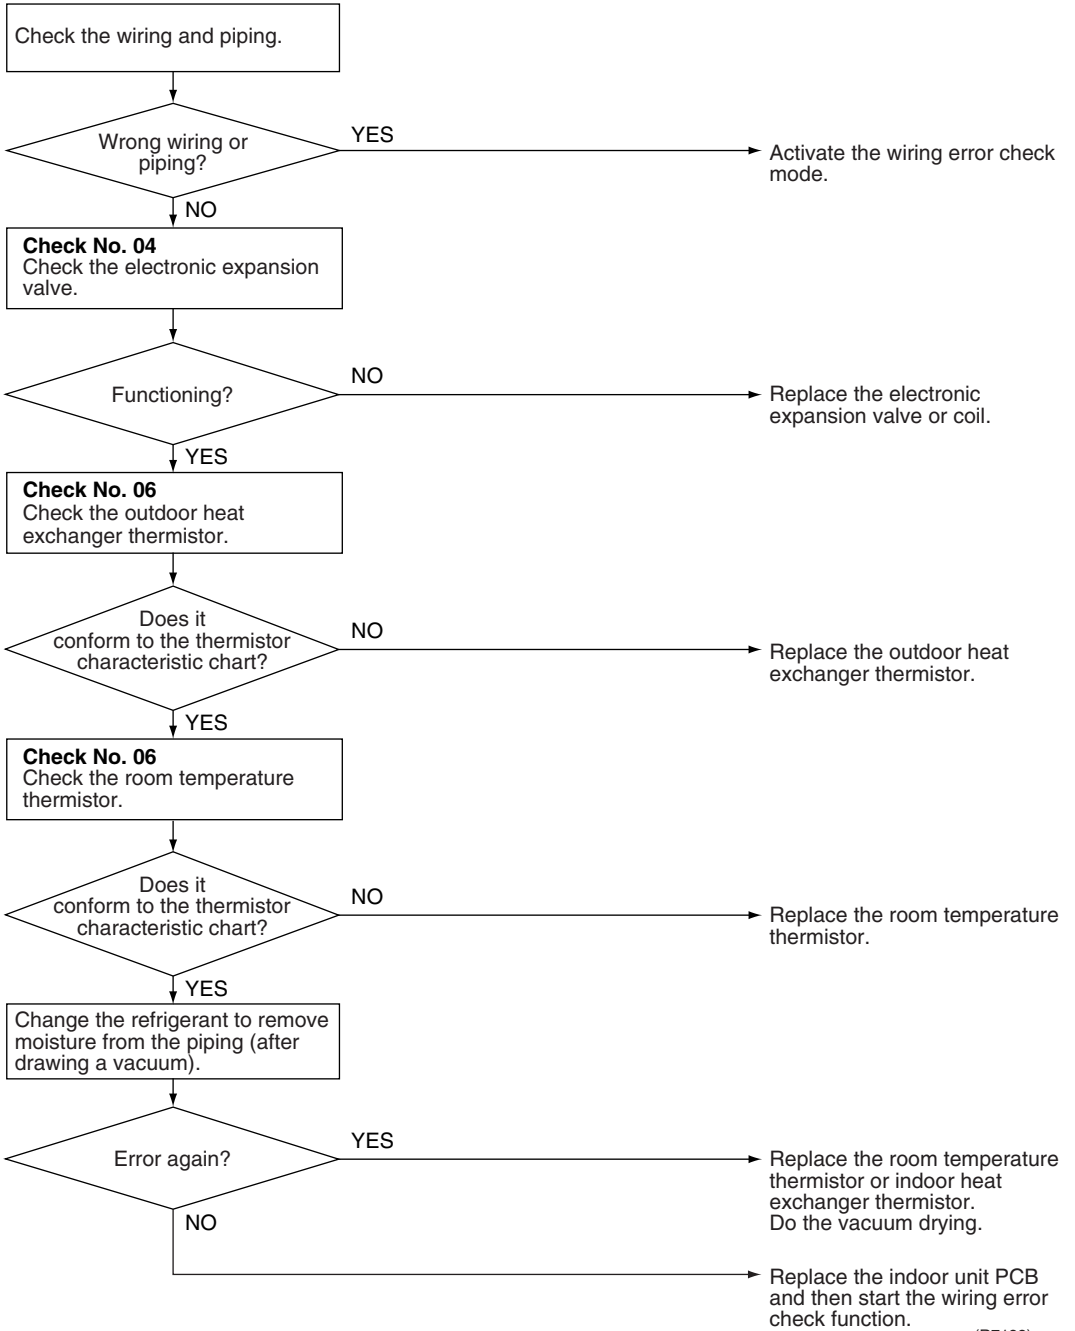






(R7182)

7.2 OL Activation (Compressor Overload)

Remote Controller Display	
Method of Malfunction Detection	A compressor overload is detected through compressor OL.
Malfunction Decision Conditions	<ul style="list-style-type: none"> ■ If the error repeats twice, the system is shut down. ■ Reset condition: Continuous run for about 60 minutes without any other error * The operating temperature condition is not specified.
Supposed Causes	<ul style="list-style-type: none"> ■ Refrigerant shortage ■ Defective four way valve ■ Defective outdoor unit PCB ■ Water mixed in refrigerant ■ Defective electronic expansion valve ■ Defective stop valve

Troubleshooting

-  **Check No.04**
Refer to P.236
-  **Check No.05**
Refer to P.237
-  **Check No.06**
Refer to P.238
-  **Check No.11**
Refer to P.241

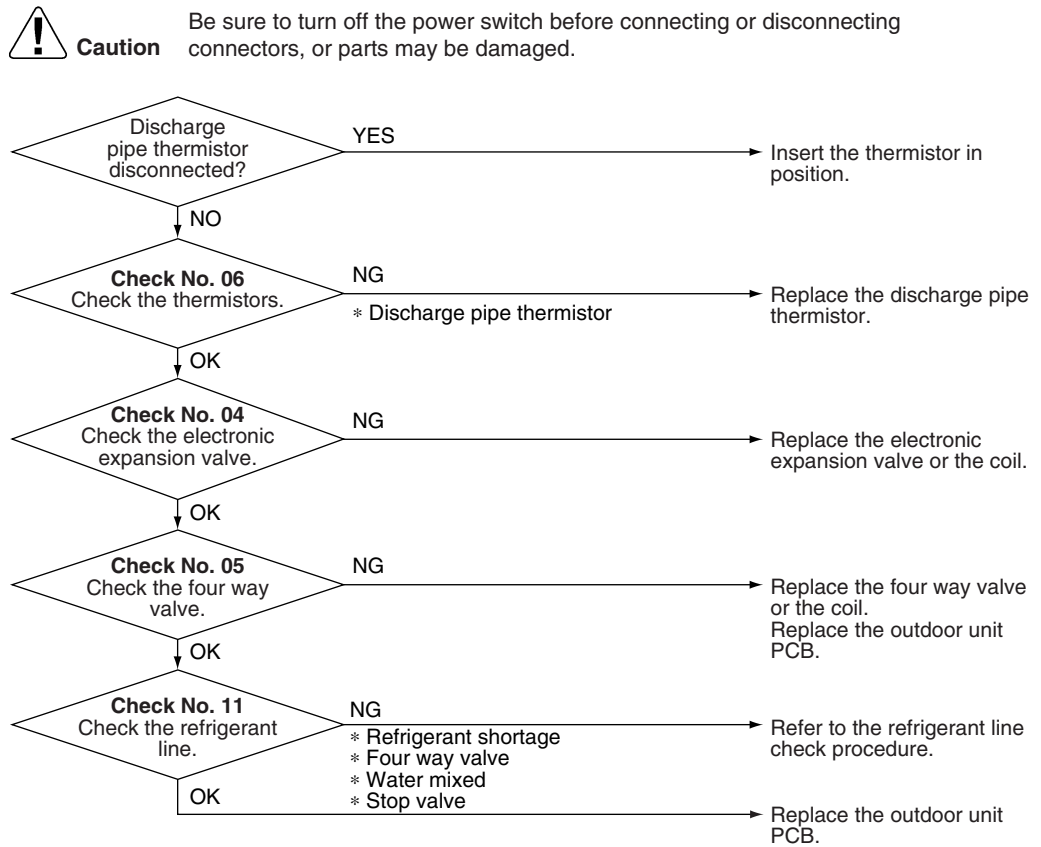

(R7137)

7.3 Compressor Lock

Remote
Controller
Display



Method of
Malfunction
Detection

A compressor lock is detected by checking the compressor running condition through the position detection circuit.

Malfunction
Decision
Conditions

- Judging from the current waveform generated when high-frequency voltage is applied to the compressor.
- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 11 minutes without any other error

Supposed
Causes

- Compressor locked
- Compressor harness disconnected

Troubleshooting




Check No.14
Refer to P.243




Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.
(Precaution before turning on the power again)
Make sure the power has been off for at least 30 seconds.

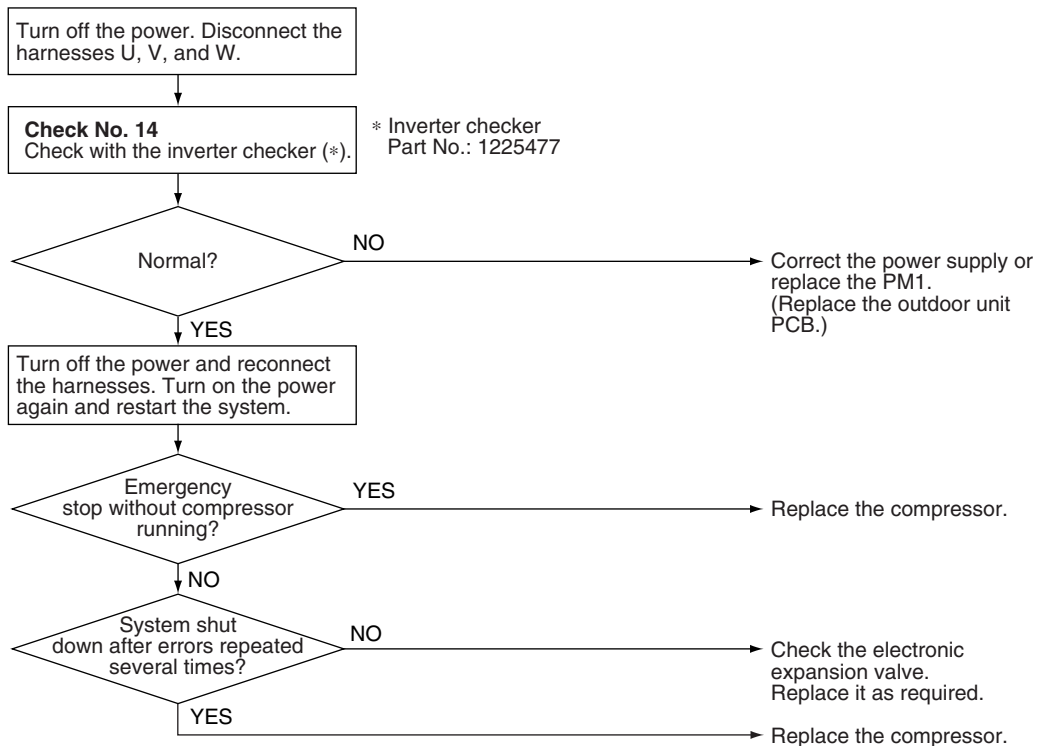


(R8399)

7.4 DC Fan Lock

<p>Remote Controller Display</p> 	
<p>Method of Malfunction Detection</p>	<p>An error is determined with the high-voltage fan motor rotation speed detected by the Hall IC.</p>
<p>Malfunction Decision Conditions</p>	<ul style="list-style-type: none"> ■ The fan does not start in 60 seconds even when the fan motor is running. ■ If the error repeats, the system is shut down. ■ Reset condition: Continuous run for about 11 minutes without any other error
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Defective fan motor ■ Disconnection of the fan motor ■ Foreign matters stuck in the fan

Troubleshooting

 **Check No.15**
Refer to P.245

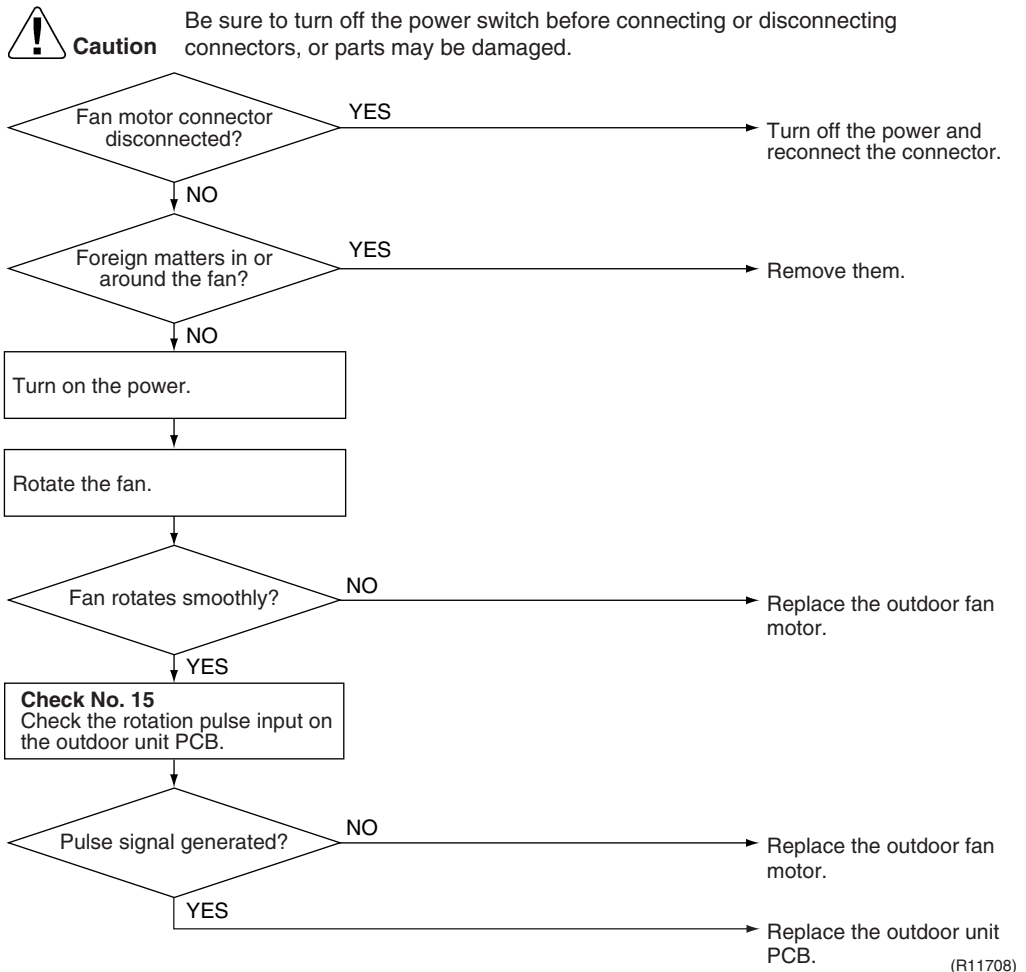

7.5 Input Overcurrent Detection

Remote Controller Display



Method of Malfunction Detection

Detected by checking the input current value

Malfunction Decision Conditions

- The input current is at a certain value (depending on the condition) for 2.5 seconds.
- The compressor halts if the error occurs, and restarts automatically after 3-minute standby.

Supposed Causes


- Defective compressor
- Defective power transistor
- Defective inverter main circuit electrolytic capacitor
- Defective outdoor unit PCB
- Short circuit

Troubleshooting

Check No.07
Refer to P.239

Check No.08
Refer to P.240

Check No.14
Refer to P.243

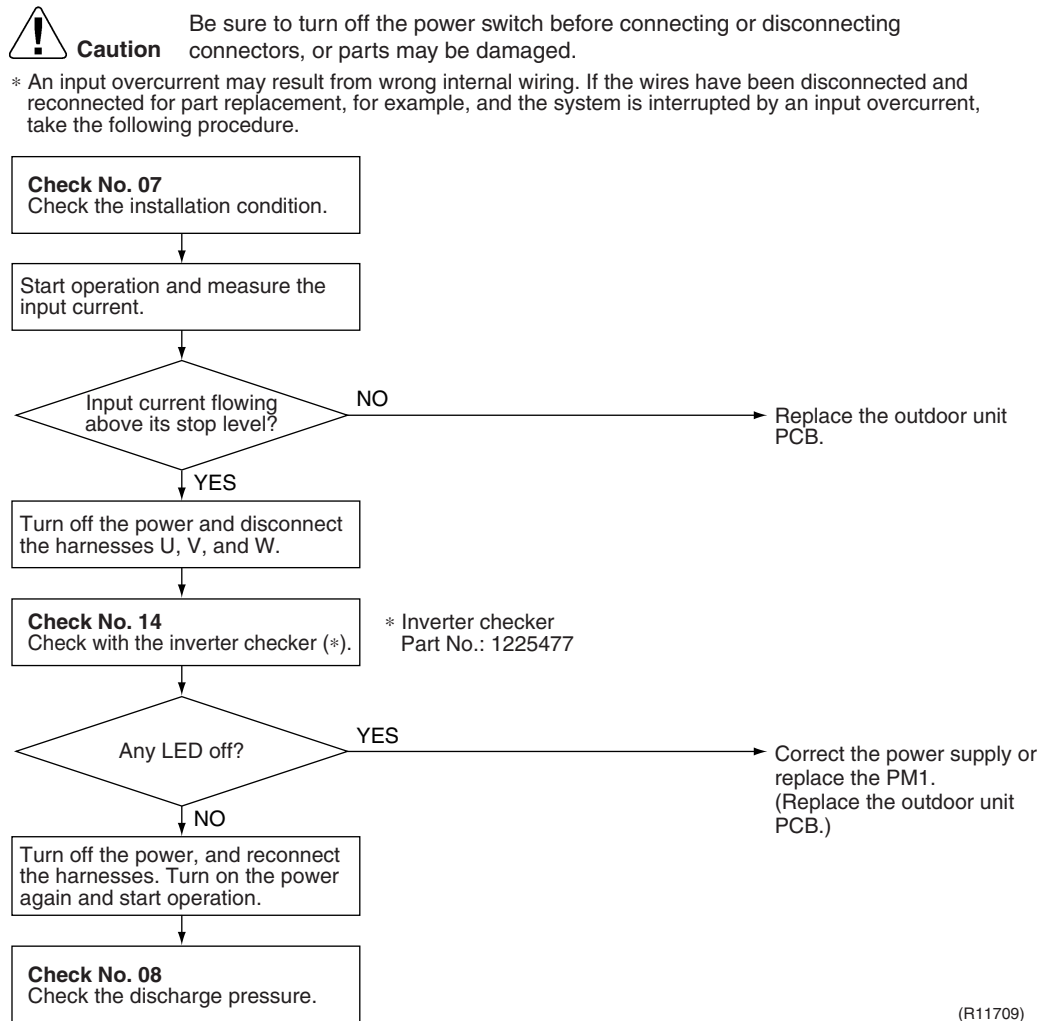


(R11709)

7.6 Discharge Pipe Temperature Control

Remote Controller Display	E3									
Method of Malfunction Detection	Detected by the discharge pipe thermistor									
Malfunction Decision Conditions	<ul style="list-style-type: none"> ■ If the temperature detected by the discharge pipe thermistor rises above A °C, the compressor stops. ■ The error is cleared when the discharge pipe temperature is dropped below B °C. <table border="1" style="margin: 10px auto;"> <thead> <tr> <th></th> <th>A (°C)</th> <th>B (°C)</th> </tr> </thead> <tbody> <tr> <td>40 class</td> <td>110</td> <td>97</td> </tr> <tr> <td>50 class</td> <td>110</td> <td>95</td> </tr> </tbody> </table> <ul style="list-style-type: none"> ■ If the error repeats 4 times, the system is shut down. ■ Reset condition: Continuous run for about 60 minutes without any other error 		A (°C)	B (°C)	40 class	110	97	50 class	110	95
	A (°C)	B (°C)								
40 class	110	97								
50 class	110	95								
Supposed Causes	<ul style="list-style-type: none"> ■ Refrigerant shortage ■ Defective four way valve ■ Defective discharge pipe thermistor (Defective outdoor heat exchanger thermistor or outdoor temperature thermistor) ■ Defective outdoor unit PCB ■ Water mixed in refrigerant ■ Defective electronic expansion valve ■ Defective stop valve 									

Troubleshooting

- Check No.04**
Refer to P.236
- Check No.06**
Refer to P.238
- Check No.11**
Refer to P.241

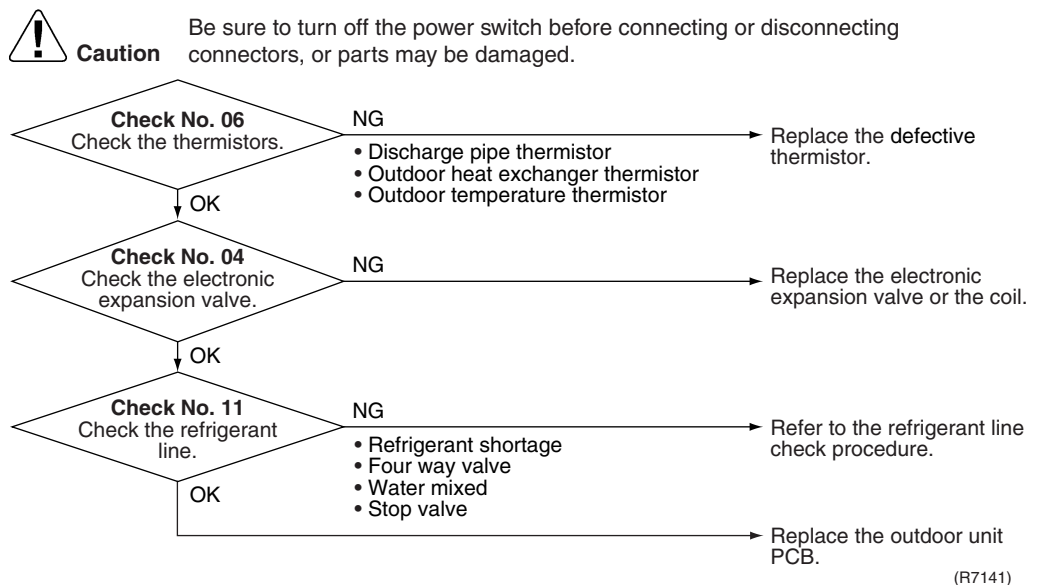

7.7 High Pressure Control in Cooling

Remote
Controller
Display



Method of
Malfunction
Detection

High-pressure control (operation halt, frequency drop, etc.) is activated in cooling mode if the temperature sensed by the outdoor heat exchanger thermistor exceeds the limit.

Malfunction
Decision
Conditions

- The temperature sensed by the outdoor heat exchanger thermistor rises above about 65°C.
- The error is cleared when the temperature drops below about 50°C.

Supposed
Causes

- The installation space is not large enough.
- Defective outdoor unit fan
- Defective electronic expansion valve
- Defective outdoor heat exchanger thermistor
- Defective outdoor unit PCB
- Defective stop valve
- Dirty outdoor heat exchanger

Troubleshooting


Check No.04
Refer to P.236

Check No.06
Refer to P.238

Check No.07
Refer to P.239

Check No.08
Refer to P.240

Check No.09
Refer to P.240

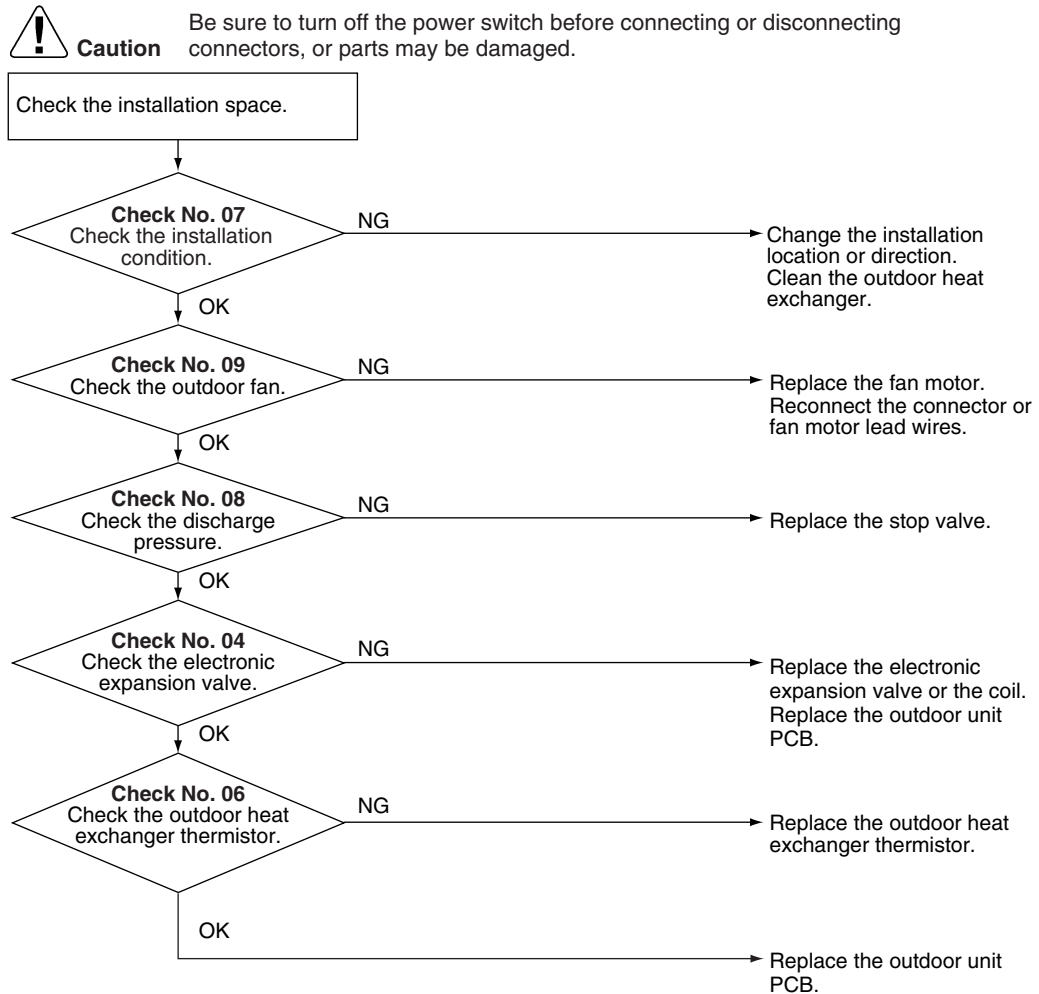

(R11897)

7.8 Compressor Sensor System Abnormality

Remote
Controller Display



Method of
Malfunction
Detection

Fault condition is identified by DC current which is detected before compressor startup.

Malfunction
Decision
Conditions

- When the DC current before compressor startup is other than 0.5 to 4.5 V (detected by converting the sensor output to voltage), or the DC voltage is 50 V or less.

Supposed
Causes


- Defective PCB
- Harness disconnection / defective connection

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

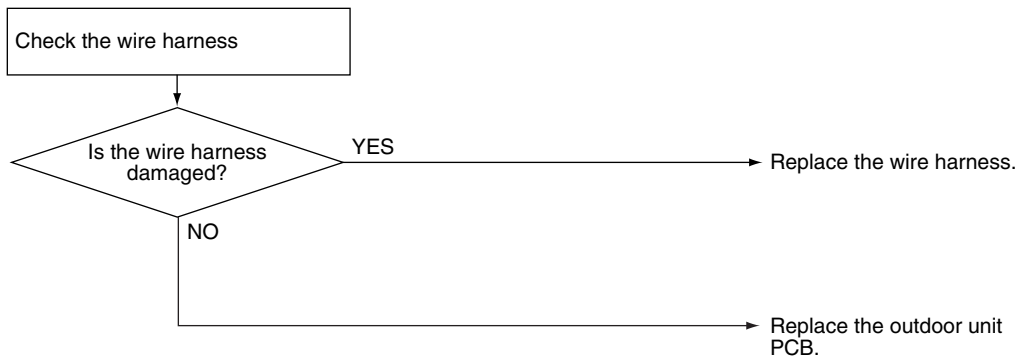

(R7143)

7.9 Position Sensor Abnormality

Remote
Controller
Display



Method of
Malfunction
Detection

A compressor startup failure is detected by checking the compressor running condition through the position detection circuit.

Malfunction
Decision
Conditions

- If the error repeats 16 times, the system is shut down.
- Reset condition: Continuous run for about 11 minutes without any other error

Supposed
Causes

- Disconnection of the compressor relay cable
- Defective compressor
- Defective outdoor unit PCB
- Startup failure caused by the closed stop valve
- Input voltage out of specification

Troubleshooting



Check No.08
Refer to P.240




Check No.14
Refer to P.243



Check No.29
Refer to P.246



Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

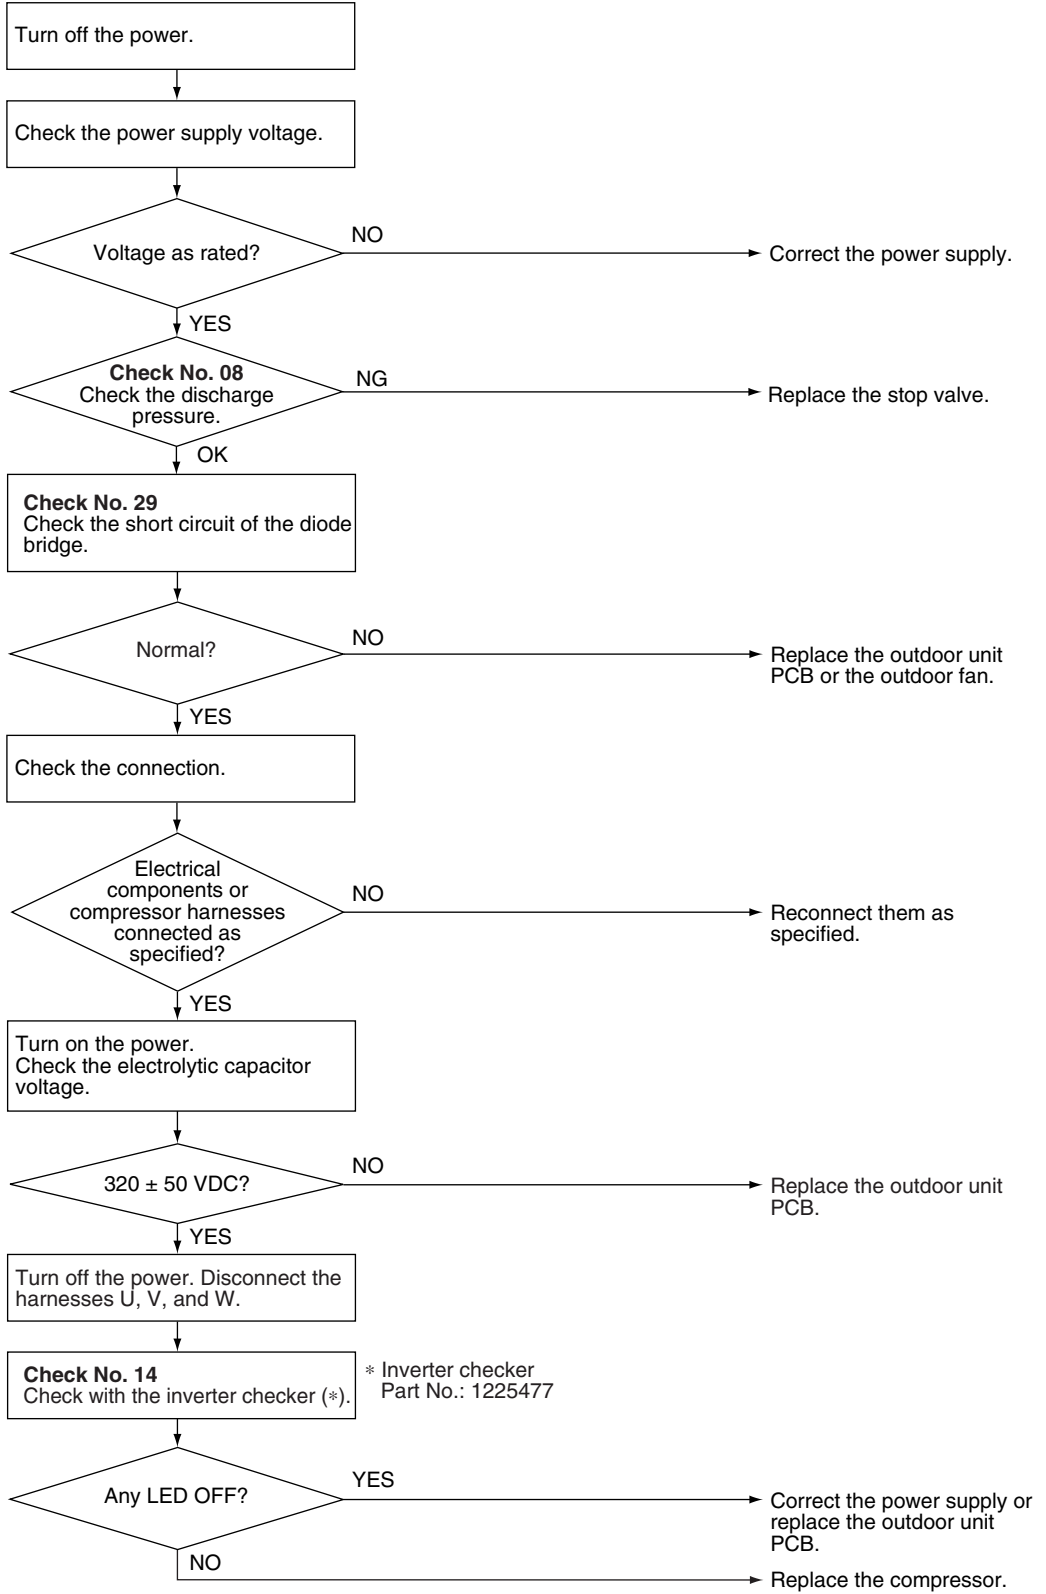

* Inverter checker
Part No.: 1225477

(R12508)

7.10 DC Voltage / Current Sensor Abnormality

Remote
Controller
Display



Method of
Malfunction
Detection

DC voltage or DC current sensor abnormality is identified based on the compressor running frequency and the input current.

Malfunction
Decision
Conditions

- The compressor running frequency is above 52 Hz.
- If the error repeats 4 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

Supposed
Causes

- Defective outdoor unit PCB

Troubleshooting




Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Replace the outdoor unit PCB.

7.11 Thermistor or Related Abnormality (Outdoor Unit)

<p>Remote Controller Display</p>	<p>49, U3, U6, U9, U3, P4</p>
<p>Method of Malfunction Detection</p>	<p>This type of error is detected by checking the thermistor input voltage to the microcomputer. A thermistor error is detected by checking the temperature sensed by each thermistor.</p>
<p>Malfunction Decision Conditions</p>	<ul style="list-style-type: none"> ■ The thermistor input is above 4.98 V or below 0.02 V with the power on. ■ U3 error is judged if the discharge pipe temperature is lower than the heat exchanger temperature. ■ The system is shut down if all the units are judged as the U3 or U3 error.
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Disconnection of the connector for the thermistor ■ Defective thermistor ■ Defective outdoor unit PCB ■ Defective indoor unit PCB ■ Defective heat exchanger thermistor in the case of U3 error (outdoor heat exchanger thermistor in cooling mode, or indoor heat exchanger thermistor in heating mode)
<p>Troubleshooting</p>	<p>In case of “P4”</p> <p> Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.</p> <p>Replace the outdoor unit PCB.</p> <p>P4 : Radiation fin thermistor</p>

Troubleshooting


Check No.06
 Refer to P.238

In case of "H3" "J3" "J5" "J8" "J9"



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn on the power again.

Error displayed again on remote controller?

NO

Reconnect the connectors or thermistors.

YES

Check No. 06
 Check the thermistor resistance value.

* Note

Normal?

NO

Replace the defective one(s) of the following thermistors.

- Outdoor temperature thermistor
- Discharge pipe thermistor
- Outdoor heat exchanger thermistor
- Liquid pipe thermistor
- Gas pipe thermistor

YES

J3 error: The discharge pipe temperature is lower than the heat exchanger temperature.

Cooling: Outdoor heat exchanger thermistor
 Heating: Indoor heat exchanger thermistor

Check No. 06
 Check the indoor heat exchanger thermistor resistance value in the heating mode.

Indoor heat exchanger thermistor functioning?

NO

Replace the following thermistor.

- Indoor heat exchanger thermistor

Replace the outdoor unit PCB.
 (Replace the indoor unit PCB.)

YES

(R12740)

- H3 : Outdoor temperature thermistor
- J3 : Discharge pipe thermistor
- J5 : Outdoor heat exchanger thermistor
- J8 : Liquid pipe thermistor
- J9 : Gas pipe thermistor

7.12 Electrical Box Temperature Rise

Remote Controller Display



Method of Malfunction Detection

An electrical box temperature rise is detected by checking the radiation fin thermistor with the compressor off.

Malfunction Decision Conditions

- With the compressor off, the radiation fin temperature is above **A** °C.
- The error is cleared when the temperature drops below **B** °C.
- To cool the electrical components, the outdoor fan starts when the radiation fin temperature rises above **C** °C and stops when it drops below **B** °C.

A (°C)	B (°C)	C (°C)
80	70	75

Supposed Causes

- Defective outdoor unit fan
- Short circuit
- Defective fin thermistor
- Disconnection of connector
- Defective outdoor unit PCB

Troubleshooting


Check No.07
Refer to P.239

Check No.09
Refer to P.240



Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power and turn it on again.

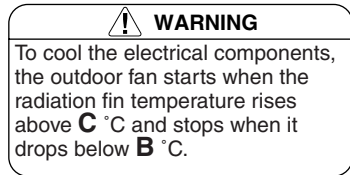

Error again or outdoor fan activated?

YES

Check the radiation fin temperature.

Above **A** °C?

NO

Replace the outdoor unit PCB.

YES

Check No. 09
Check the outdoor fan or related.

NG

Replace the fan motor.
Correct the connectors and fan motor lead wire.
Replace the outdoor unit PCB.

OK

Radiation fin dirty?

Too dirty

Clean up the radiation fin.

Slightly dirty

Check No. 07
Check the installation condition.

A (°C)	B (°C)	C (°C)
80	70	75

(R14081)

7.13 Radiation Fin Temperature Rise

Remote
Controller
Display

L4

Method of
Malfunction
Detection

A radiation fin temperature rise is detected by checking the radiation fin temperature with the compressor on.

Malfunction
Decision
Conditions

- The radiation fin temperature with the compressor on is above **A** °C.
- The error is cleared when the temperature drops below **B** °C

	A (°C)	B (°C)
40 class	95	85
50 class	92.5	85

- If the error repeats, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

Supposed
Causes

- Defective outdoor unit fan
- Short circuit
- Defective fin thermistor
- Disconnection of connector
- Defective outdoor unit PCB
- Silicon grease is not applied properly on the radiation fin after replacing the outdoor unit PCB.

Troubleshooting



Check No.07
Refer to P.239




Check No.09
Refer to P.240



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.
(Precaution before turning on the power again)
Make sure the power has been off for at least 30 seconds.

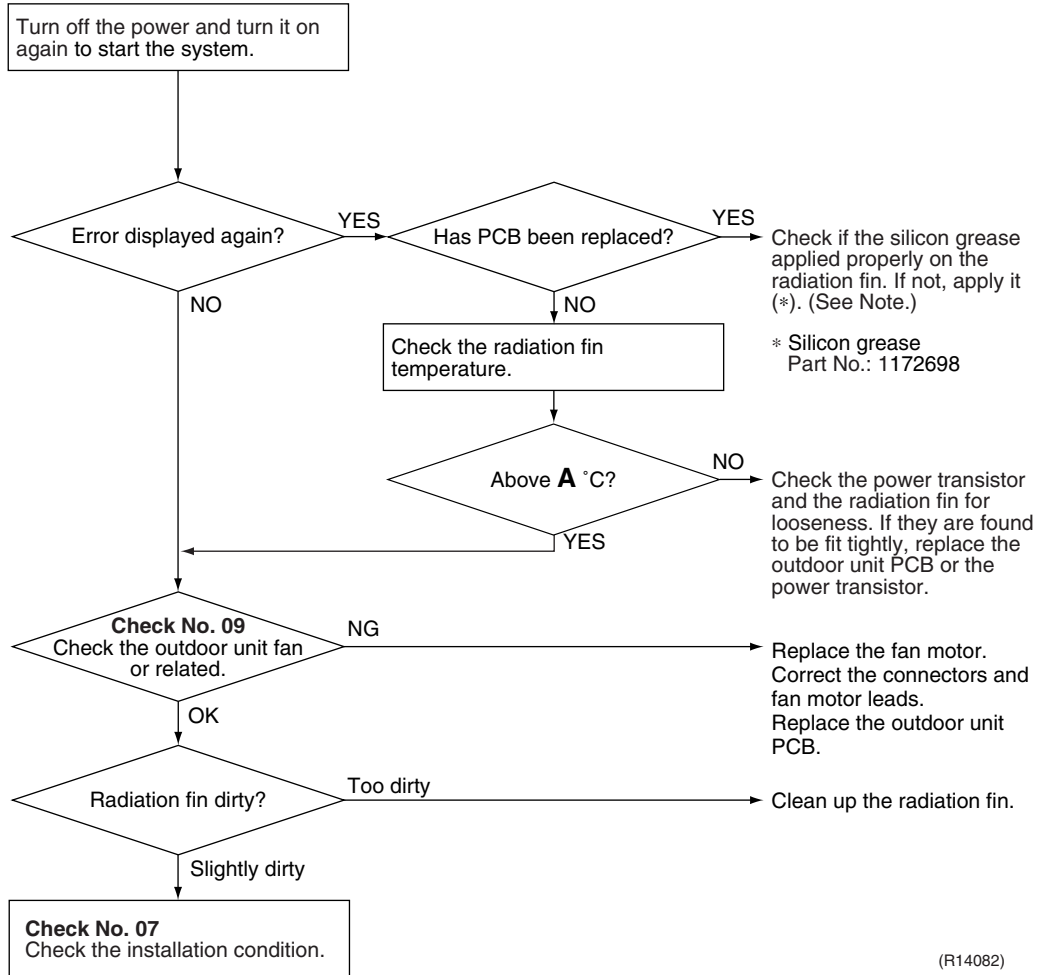

* Silicon grease
Part No.: 1172698

(R14082)

	A (°C)
40 class	95
50 class	92.5



Note: Refer to “Application of silicon grease to a power transistor and a diode bridge” on page 286 for detail.

7.14 Output Overcurrent Detection

Remote
Controller
Display

LS

Method of
Malfunction
Detection

An output overcurrent is detected by checking the current that flows in the inverter DC section.

Malfunction
Decision
Conditions

- A position signal error occurs while the compressor is running.
- A speed error occurs while the compressor is running.
- An output overcurrent signal is fed from the output overcurrent detection circuit to the microcomputer.
- If the error repeats, the system is shut down.
- Reset condition: Continuous run for about 11 minutes without any other error

Supposed
Causes

- Defective power transistor
- Wrong internal wiring
- Abnormal supply voltage
- Defective outdoor unit PCB
- Closed stop valve
- Defective compressor
- Poor installation condition

Troubleshooting



Check No.07
Refer to P.239



Check No.08
Refer to P.240



Check No.13
Refer to P.242




Check No.14
Refer to P.243



Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

* An output overcurrent signal may result from wrong internal wiring. If the wires have been disconnected and reconnected and the system is interrupted by an output overcurrent, take the following procedure.

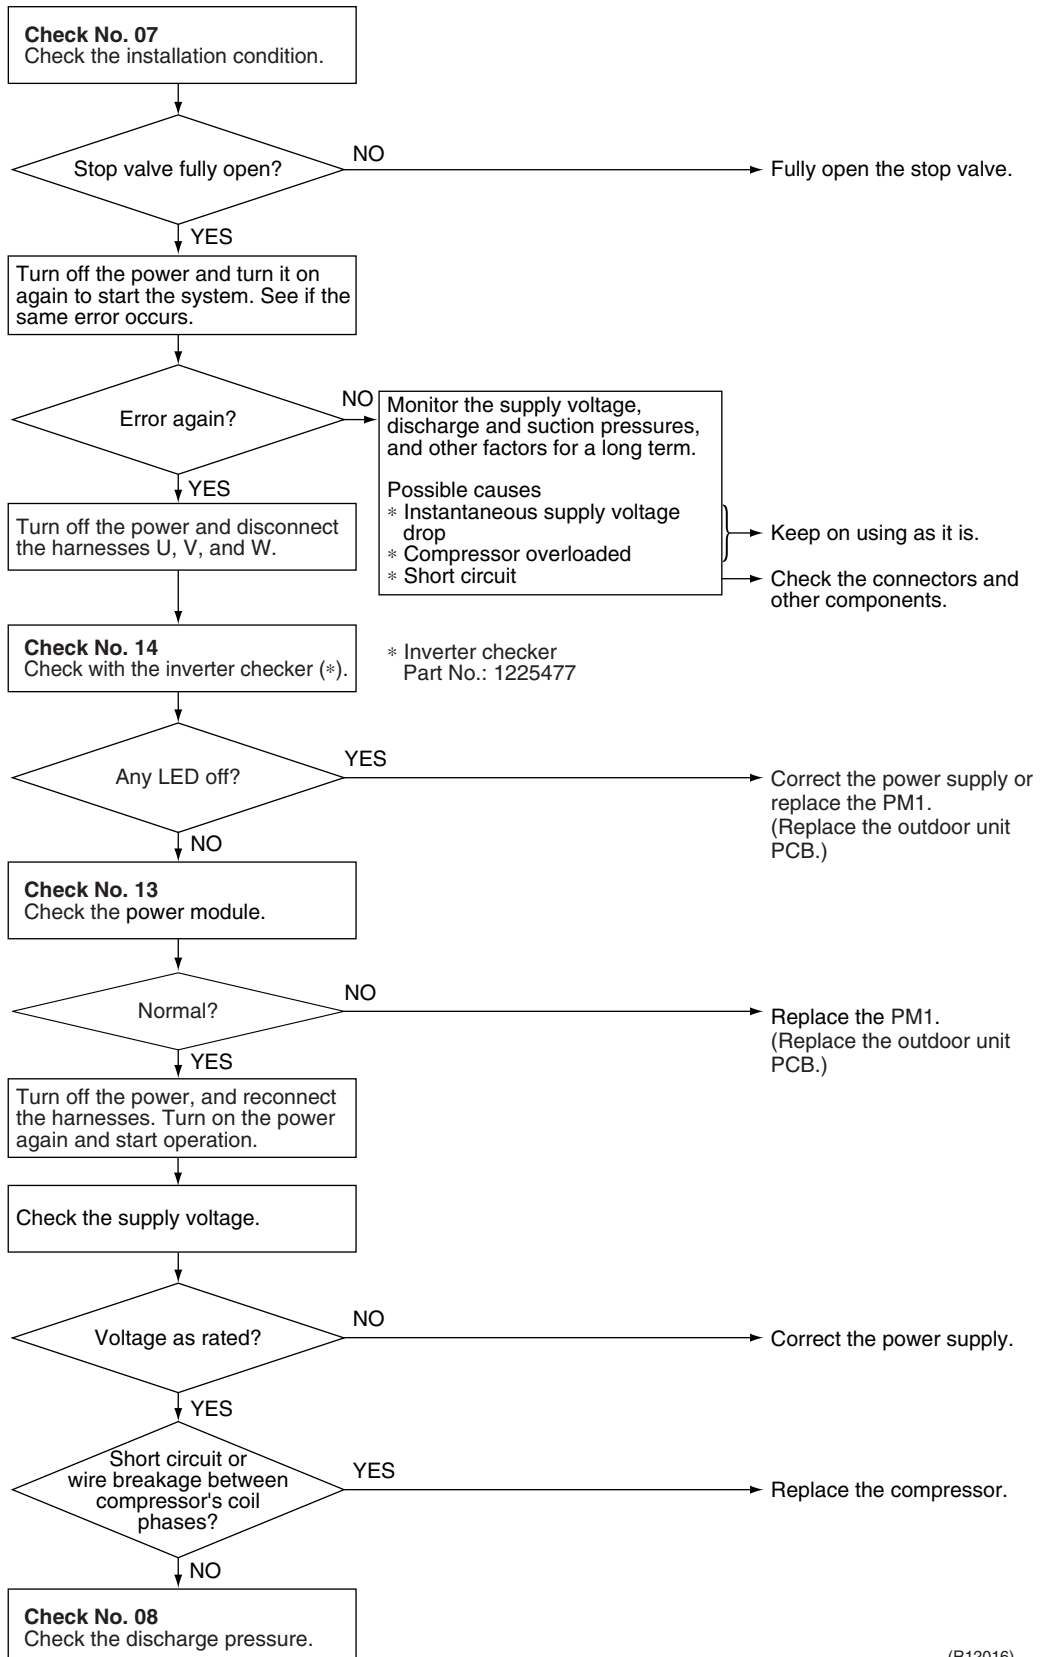

(R12016)

7.15 Refrigerant Shortage

Remote
Controller
Display



Method of
Malfunction
Detection

Refrigerant shortage detection I :

Refrigerant shortage is detected by checking the input current value and the compressor output frequency. If the refrigerant is short, the input current is smaller than the normal value.

Refrigerant shortage detection II :

Refrigerant shortage is detected by checking the discharge pipe temperature and the opening of the electronic expansion valve. If the refrigerant is short, the discharge pipe temperature tends to rise.

Malfunction
Decision
Conditions

Refrigerant shortage detection I :

The following conditions continue for 7 minutes.

- ◆ $\text{DC current} \times \text{DC voltage} \leq \mathbf{A} \times \text{Compressor output frequency} + \mathbf{B}$
- ◆ $\text{Output frequency} > \mathbf{C}$

	A (-)	B (W)	C (Hz)
40 class	2111/256	-361	51
50 class	4628/256	-608	48

Refrigerant shortage detection II :

The following conditions continue for 80 seconds.

- ◆ $\text{Opening of the electronic expansion valve} \geq \mathbf{G}$
- ◆ $\text{Discharge pipe temperature} > \mathbf{H} \times \text{target discharge pipe temperature} + \mathbf{J}$

G (pulse)	H (-)	J (°C)
450	255/256	20

- If the error repeats 4 times, the system is shut down.
- Reset condition: Continuous run for about 60 minutes without any other error

Supposed
Causes

- Refrigerant shortage (refrigerant leakage)
- Poor compression performance of compressor
- Disconnection of the discharge pipe thermistor, indoor or outdoor heat exchanger thermistor, room or outdoor temperature thermistor
- Closed stop valve
- Defective electronic expansion valve

Troubleshooting




Check No.04
Refer to P.236



Check No.06
Refer to P.238



Caution Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

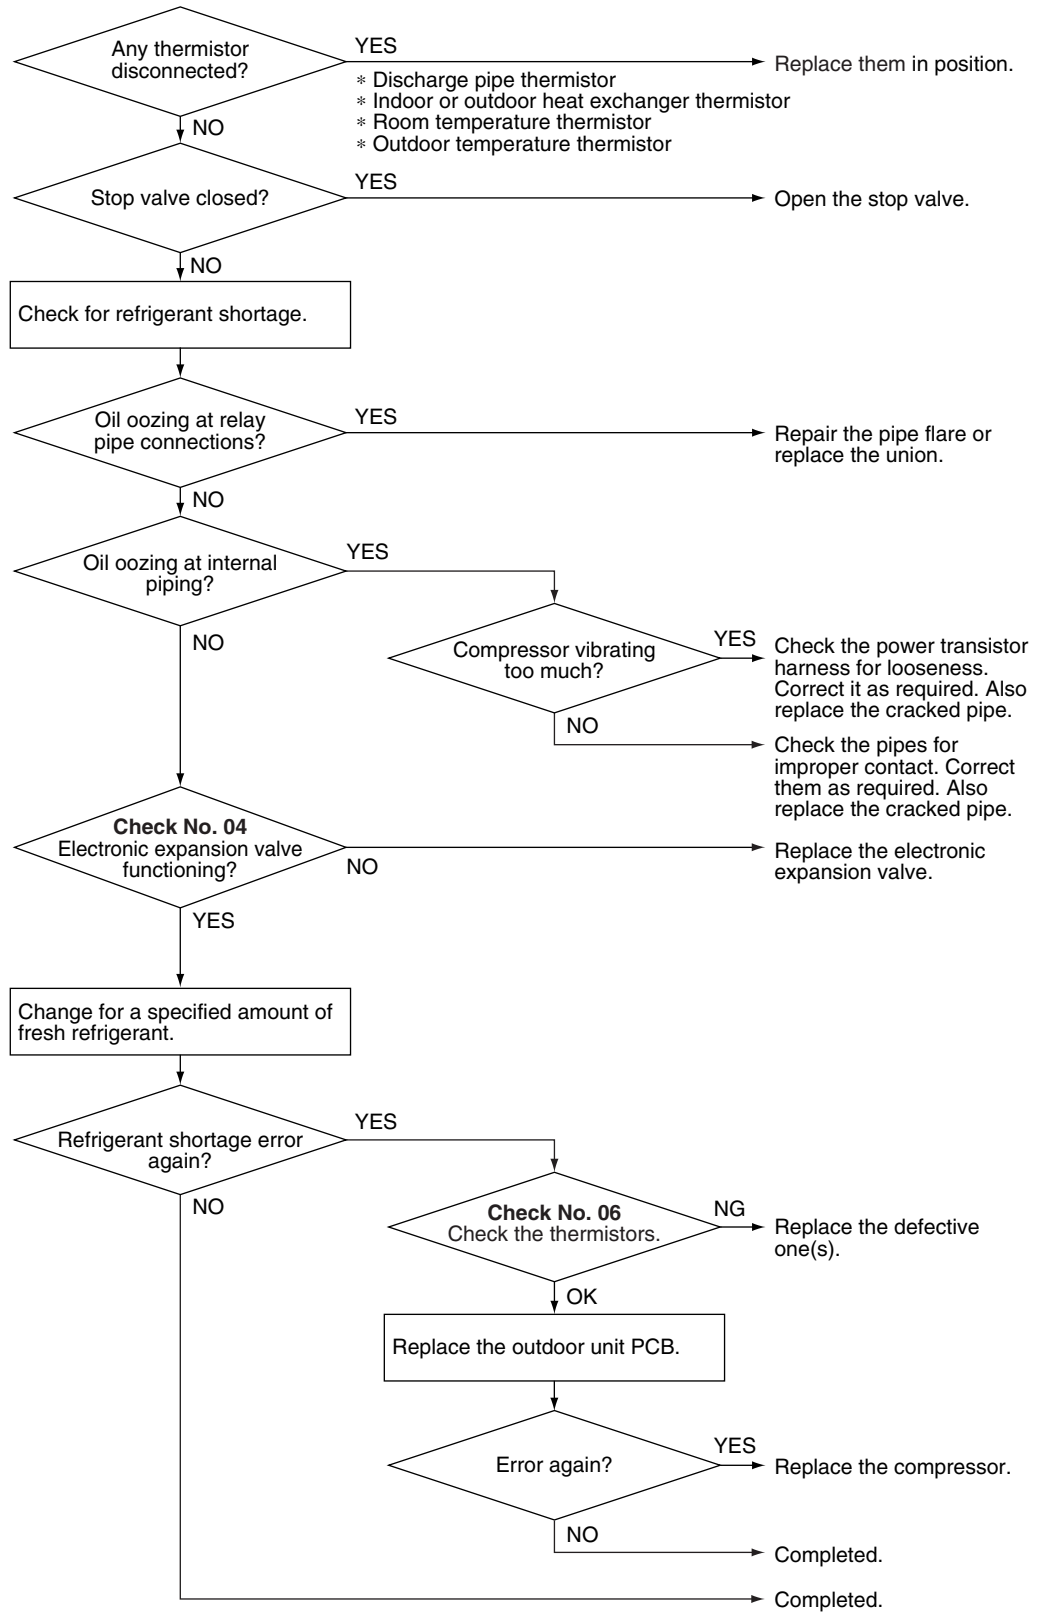


(R12015)

7.16 Low-voltage Detection or Over-voltage Detection

<p>Remote Controller Display</p>	<p>U2</p>
<p>Method of Malfunction Detection</p>	<p>Low-voltage detection: An abnormal voltage drop is detected by the DC voltage detection circuit.</p> <p>Over-voltage detection: An abnormal voltage rise is detected by the over-voltage detection circuit.</p>
<p>Malfunction Decision Conditions</p>	<p>Low-voltage detection:</p> <ul style="list-style-type: none"> ■ The voltage detected by the DC voltage detection circuit is below 180 V. <p>Over-voltage detection:</p> <ul style="list-style-type: none"> ■ An over-voltage signal is fed from the over-voltage detection circuit to the microcomputer. ■ The compressor stops if the error occurs, and restarts automatically after 3-minute standby.
<p>Supposed Causes</p>	<ul style="list-style-type: none"> ■ Supply voltage is not as specified. ■ Defective DC voltage detection circuit ■ Defective over-voltage detection circuit ■ Defective PAM control part

Troubleshooting

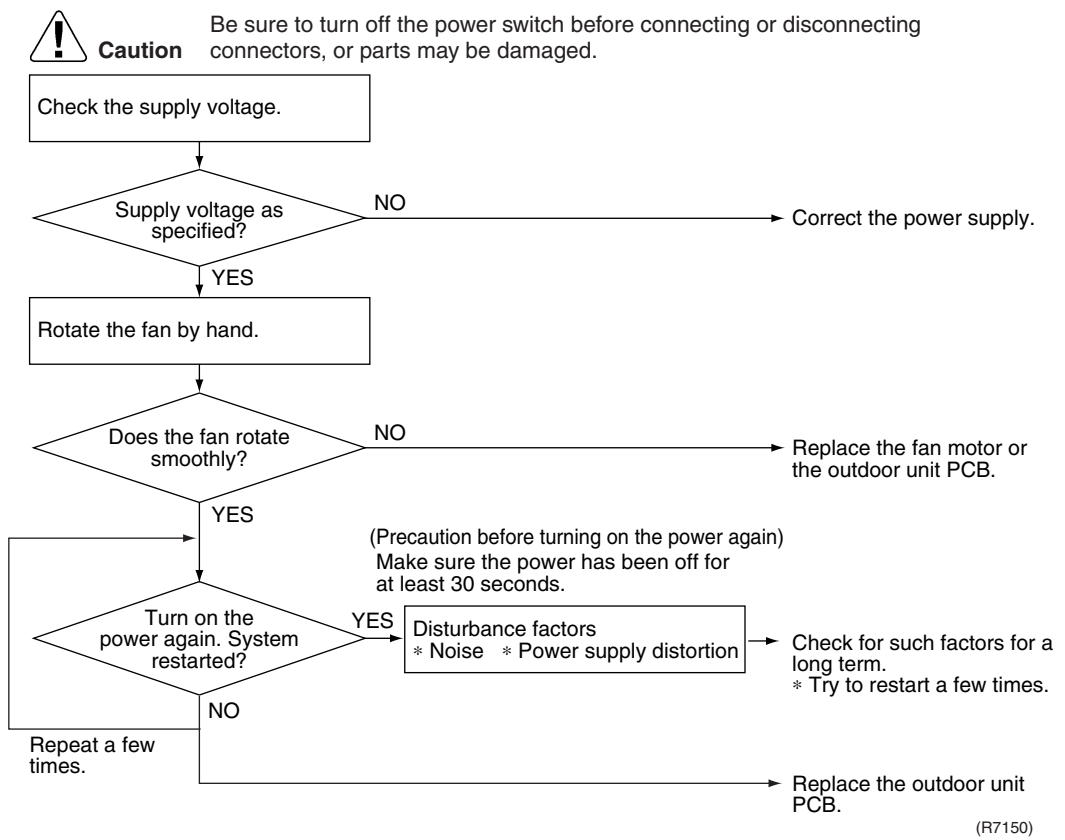

7.17 Outdoor Unit PCB Abnormality or Signal Transmission Error

Remote
Controller
Display



Method of
Malfunction
Detection

- Detection within the program of the microcomputer
- Indoor-outdoor unit signal transmission performance
- Presence or absence of zero-cross signal

Malfunction
Decision
Conditions

- The program of the microcomputer is in bad running order.
- Indoor-outdoor unit signal transmission can not be performed for more than 15 seconds.
- Zero-cross signal cannot be detected for more than 10 seconds.

Supposed
Causes

- Display disabled due to power supply fault
- Communication circuit fault in outdoor unit PCB
- Noise
- Momentary fall of voltage
- Momentary power failure
- Defective outdoor unit PCB
- Defective thermal fuse on outdoor terminal board


Troubleshooting




Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Check indoor unit also, because a communication circuit fault may be caused by the problem related to the indoor unit.

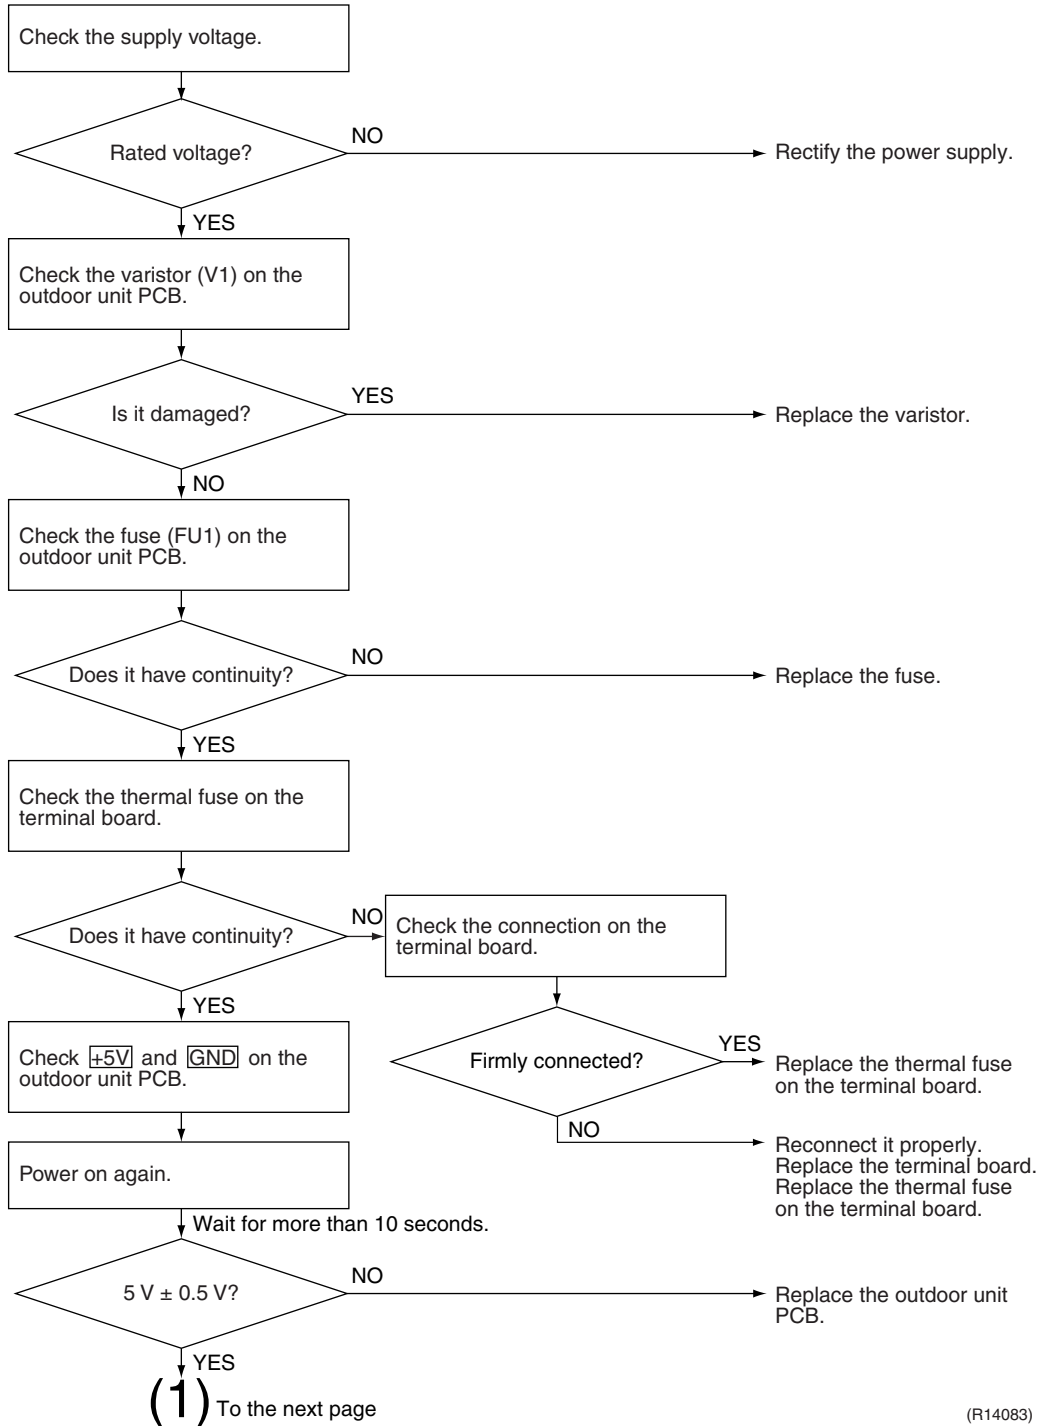


Check No.10
 Refer to P.241

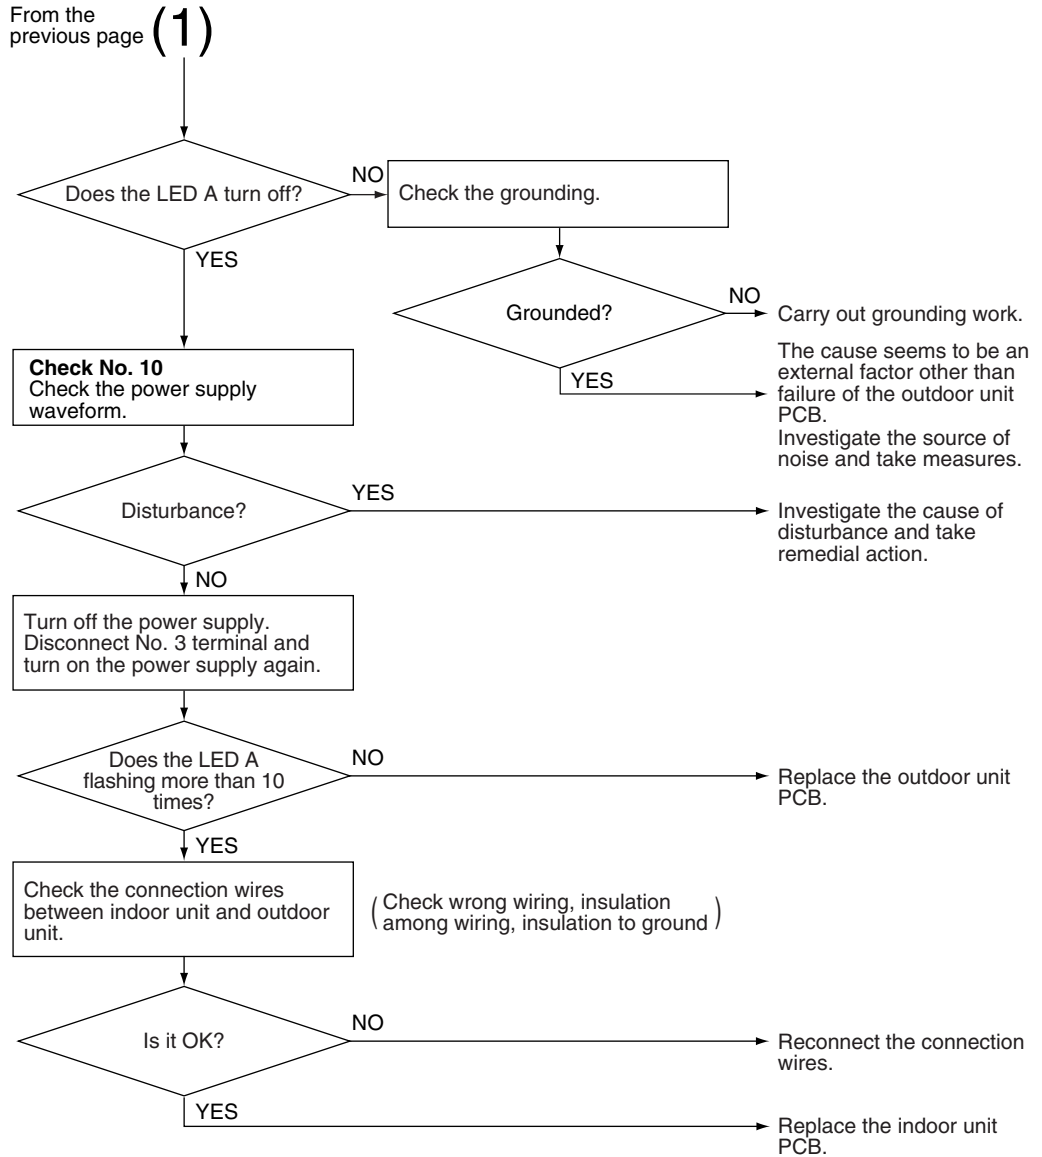

(R14084)

7.18 Anti-icing control in Other Room / Unspecified Voltage (between Indoor Unit and Outdoor Unit)

Remote
Controller
Display

U9, U4

Method of
Malfunction
Detection

A wrong connection is detected by checking the combination of indoor and outdoor units on the microcomputer.

Malfunction
Decision
Conditions

- Anti-icing control in other room
- Unspecified internal and/or external voltages
- Mismatching of indoor and outdoor units

Supposed
Causes


- Anti-icing control in other room
- Wrong models interconnected
- Wrong indoor unit PCB or outdoor unit PCB mounted

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

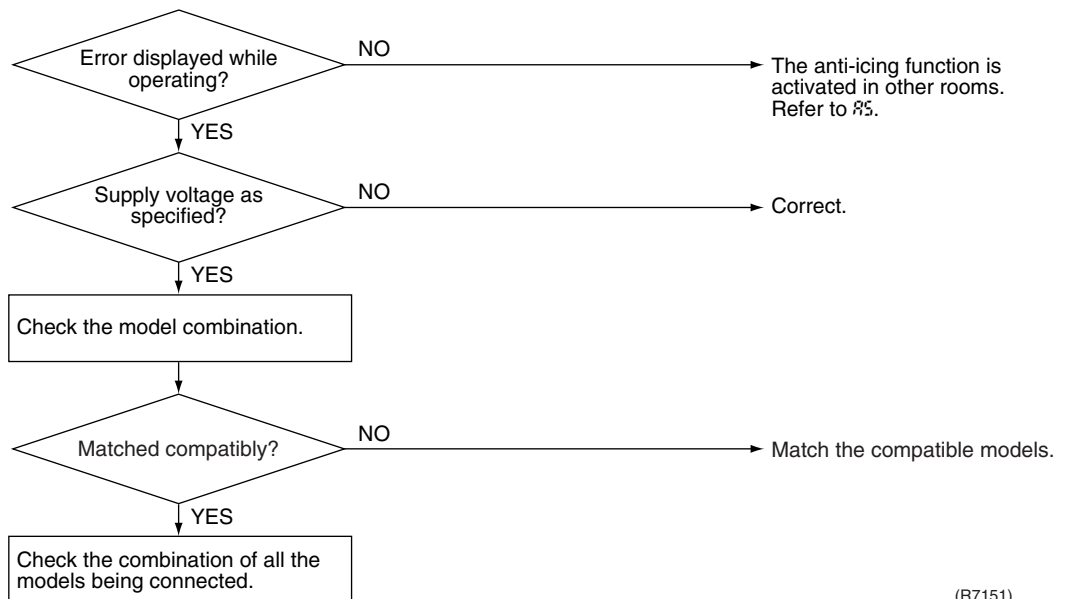

(R7151)



Note: Refer to “Anti-icing control for indoor unit” on page 209 for detail.


8. Check

8.1 How to Check

8.1.1 Fan Motor Connector Output Check

Check No.01

1. Check the connection of connector.
2. Check motor power supply voltage output (pins 4 - 7).
3. Check motor control voltage (pins 4 - 3).
4. Check rotation command voltage output (pins 4 - 2).
5. Check rotation pulse input (pins 4 - 1).

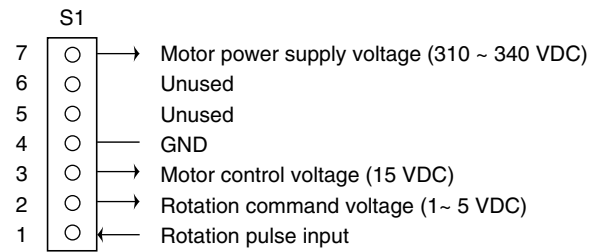

(R12404)

8.1.2 Electronic Expansion Valve Check

Check No.04

Conduct the followings to check the electronic expansion valve (EV).

1. Check to see if the EV connector is correctly inserted in the PCB. Match the EV unit number and the connector number.
2. Turn the power off and on again, and check to see if all the EVs generate latching sound.
3. If any of the EVs does not generate latching sound in the above step 2, disconnect that connector and check the continuity using a tester.
Check the continuity between the pins 1 - 6 and 3 - 6, and between the pins 2 - 5 and 4 - 5. If there is no continuity between the pins, the EV coil is faulty.
4. If no EV generates latching sound in the above step 2, the outdoor unit PCB is faulty.
5. If the continuity is confirmed in the above step 3, mount a good coil (which generated latching sound) in the EV unit that did not generate latching sound, and check to see if that EV generates latching sound.
*If latching sound is generated, the outdoor unit PCB is faulty.
*If latching sound is not generated, the EV unit is faulty.




Note: Please note that the latching sound varies depending on the valve type.

If the system keeps operating with a defective electronic expansion valve, the following problem may occur.


Valve opening position	Possible problem	Check method
Open	<p>Cooling:</p> <ul style="list-style-type: none"> ■ Flowing noise of refrigerant in the unit which is not in operation ■ Water leakage at the unit which is not in operation ■ Operation half due to anti-icing function <p>Heating:</p> <ul style="list-style-type: none"> ■ Flowing noise of refrigerant in the unit which is not in operation ■ The unit does not heat the room. 	<p>Reset power supply and conduct cooling operation unit by unit.</p> <p>Check the liquid pipe temperature of no-operation unit.</p> <p>Is it almost same as the outdoor temperature?</p> <p>NO → The EV is not defective.</p> <p>YES → Replace the EV of the room.</p> <p>(R11266)</p>
Close	<p>Cooling:</p> <ul style="list-style-type: none"> ■ The problem unit does not cool the room. ■ Only the problem unit is in operation, the unit starts pump down. (The low pressure of the unit becomes vacuum.) ■ Abnormal discharge pipe temperature <p>Heating:</p> <ul style="list-style-type: none"> ■ Refrigerant shortage due to stagnation of liquid refrigerant inside the faulty indoor unit ■ The unit does not heat the room. ■ Abnormal discharge pipe temperature 	<p>Reset power supply and conduct cooling operation unit by unit.</p> <p>Check the low pressure</p> <p>Does the pressure become into vacuum zone?</p> <p>NO → The EV is not defective.</p> <p>YES → Replace the EV of the room.</p> <p>(R11267)</p>

8.1.3 Four Way Valve Performance Check

Check No.05

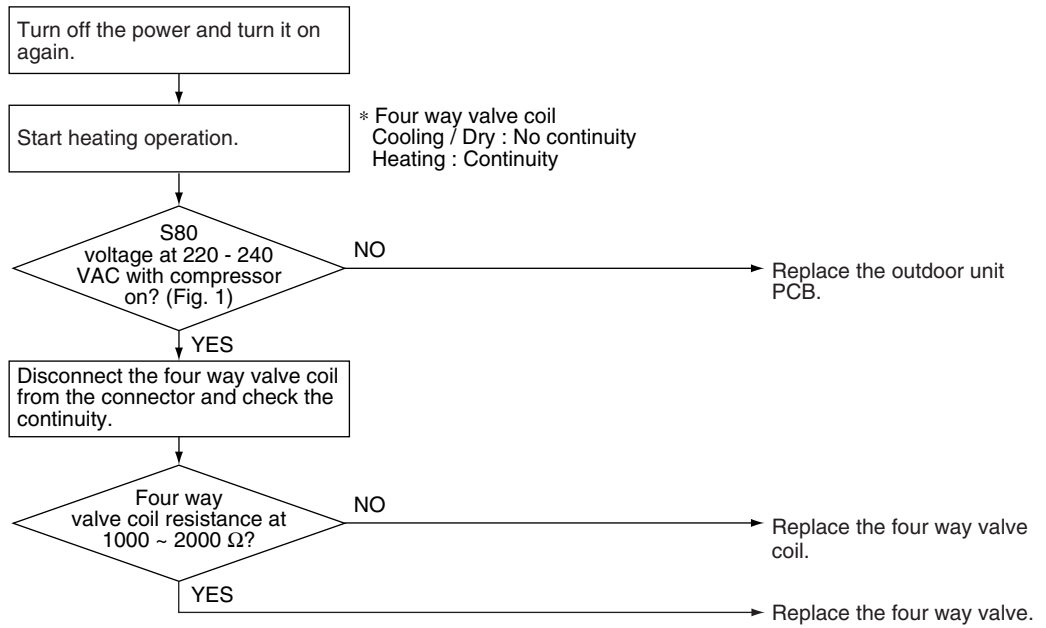

(R11903)

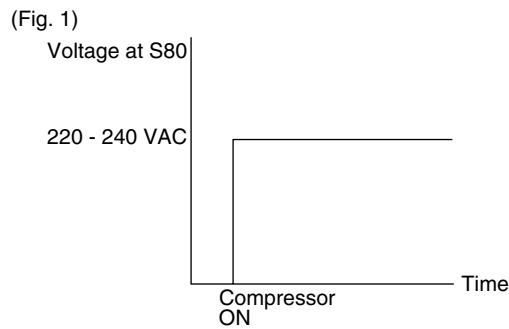

(R11904)

8.1.4 Thermistor Resistance Check


Check No.06

Disconnect the connectors of the thermistors from the PCB, and measure the resistance of each thermistor using tester.


The relationship between normal temperature and resistance is shown in the graph and the table below.

Thermistor temperature (°C)	Resistance (kΩ)
-20	211.0
-15	150.0
-10	116.5
-5	88.0
0	67.2
5	51.9
10	40.0
15	31.8
20	25.0
25	20.0
30	16.0
35	13.0
40	10.6
45	8.7
50	7.2

($R_{25^{\circ}\text{C}} = 20 \text{ k}\Omega$, $B = 3950 \text{ K}$)

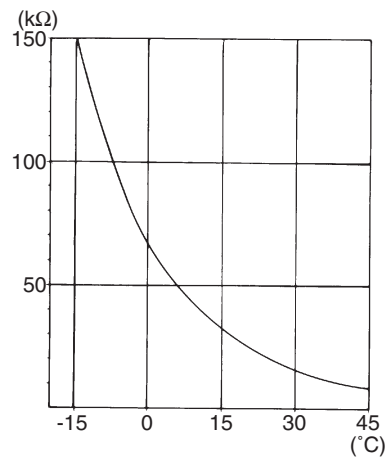


(R11905)

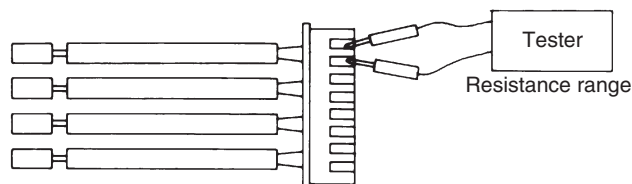

(R11906)


- For the models in which the thermistor is directly mounted on the PCB, disconnect the connector for the PCB and measure.



(R3460)

8.1.5 Installation Condition Check


Check No.07

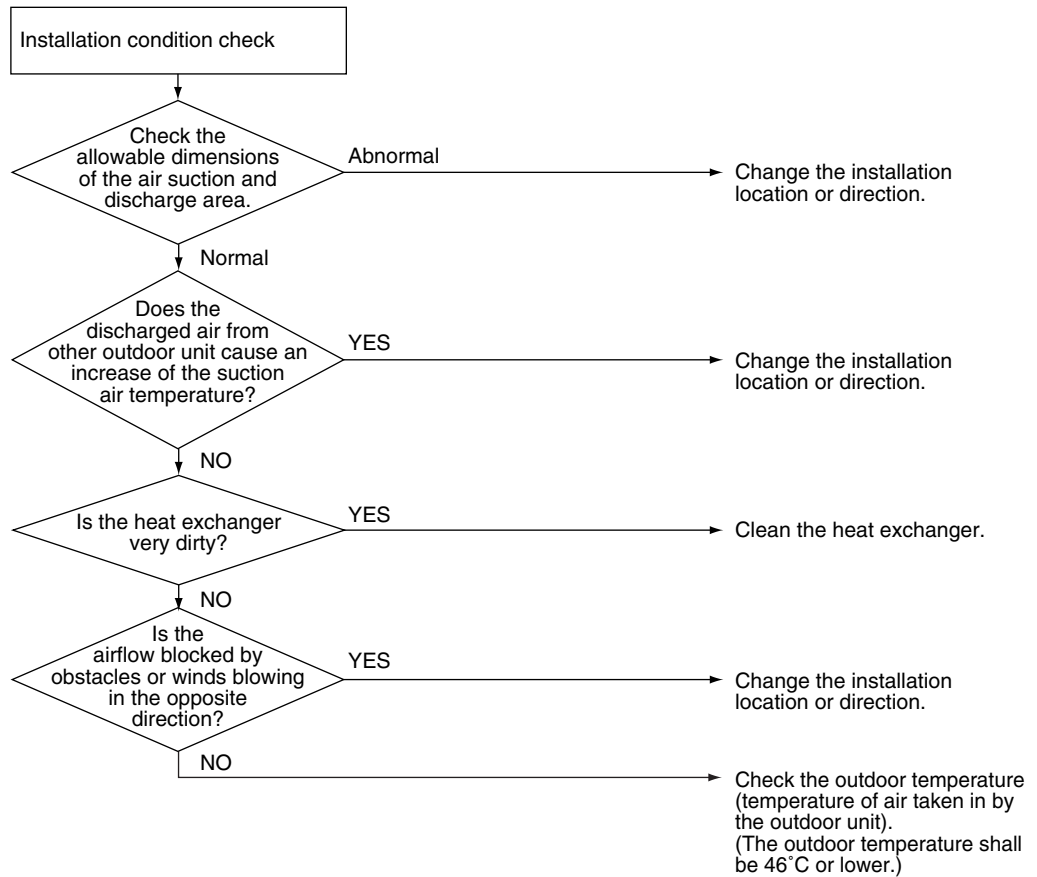

(R11229)

8.1.6 Discharge Pressure Check

Check No.08

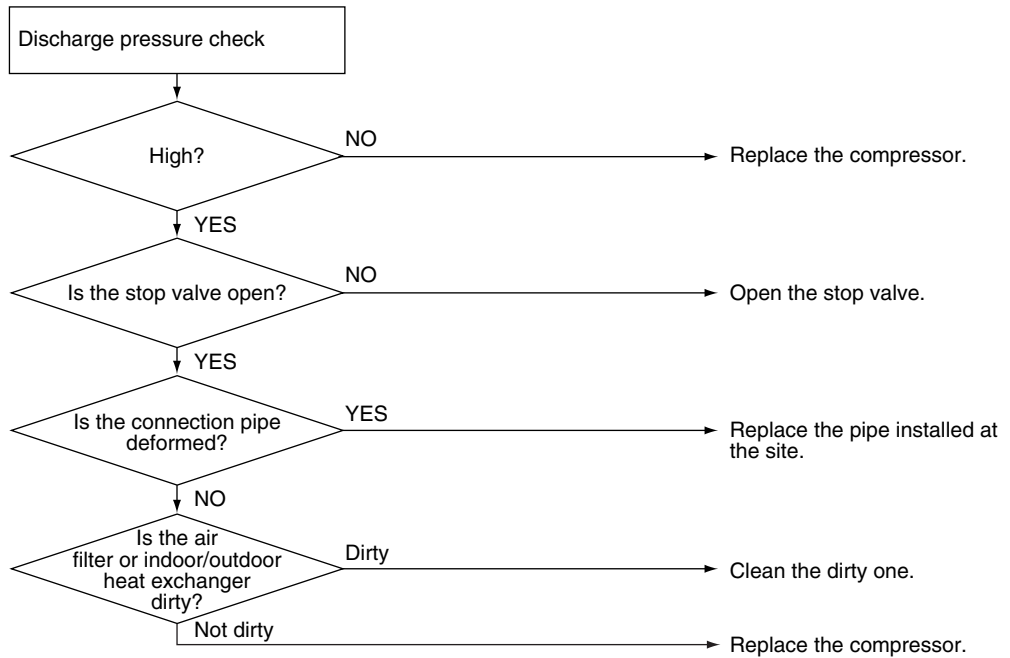


(R11718)

8.1.7 Outdoor Unit Fan System Check

Check No.09

DC motor

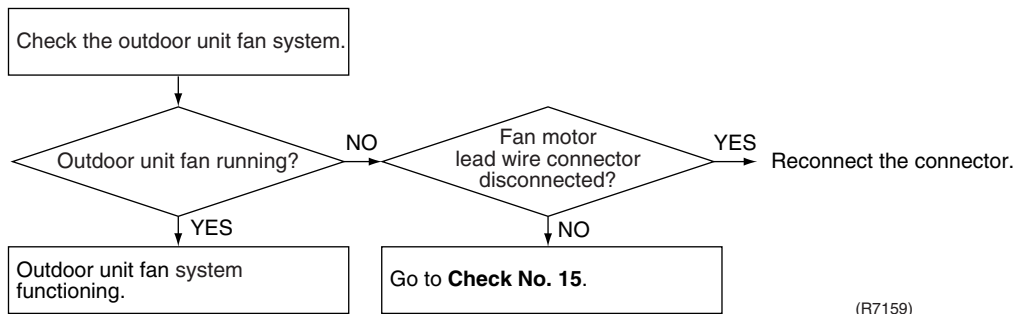

(R7159)

8.1.8 Power Supply Waveforms Check



Check No.10

Measure the power supply waveform between No. 1 and No. 2 on the terminal board, and check the waveform disturbance.

- Check to see if the power supply waveform is a sine wave (Fig.1).
- Check to see if there is waveform disturbance near the zero cross (sections circled in Fig.2)

[Fig.1]

[Fig.2]

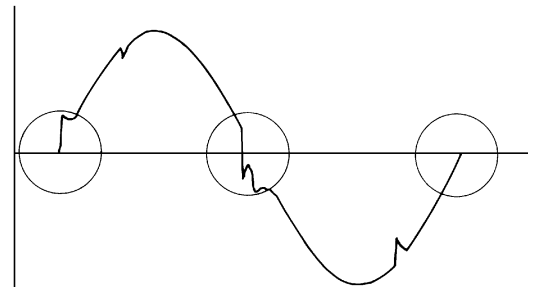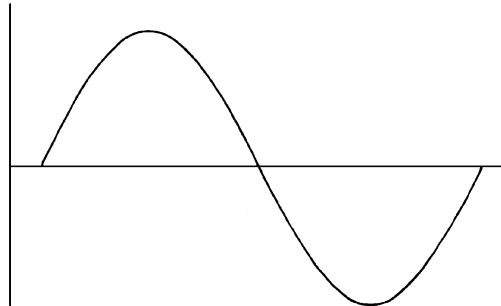


(R1736)

(R1444)

8.1.9 Inverter Units Refrigerant System Check

Check No.11

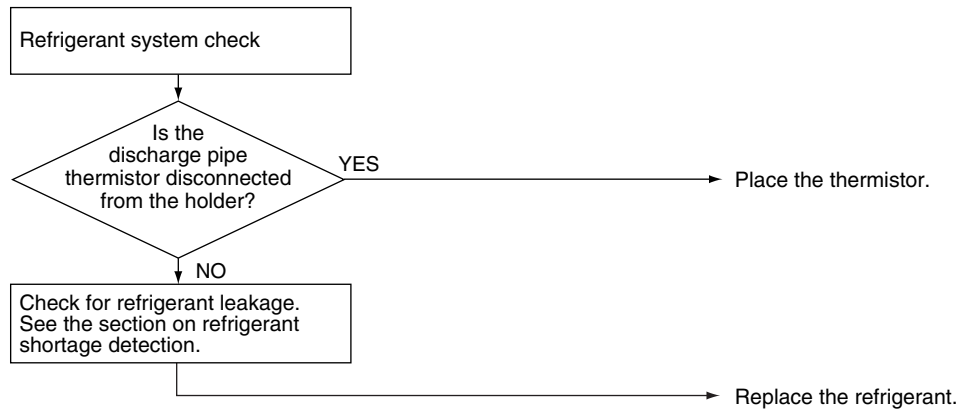

(R8380)

8.1.10 Power Module Check

Check No.13



Note: Check to make sure that the voltage between (+) and (-) of the diode bridge (DB1) is approx. 0 V before checking.

- Disconnect the compressor harness connector from the outdoor unit PCB. To disengage the connector, press the protrusion on the connector.
- Follow the procedure below to measure resistance between the terminals of the DB1 and the terminals of the compressor with a multi-tester. Evaluate the measurement results for a judgment.

Negative (-) terminal of tester (positive terminal (+) for digital tester)	DB1 (+)	UVW	DB1 (-)	UVW
Positive (+) terminal of tester (negative terminal (-) for digital tester)	UVW	DB1 (+)	UVW	DB1 (-)
Resistance in OK	several k Ω ~ several M Ω			
Resistance in NG	0 Ω or ∞			

8.1.11 “Inverter Checker” Check

Check No.14

■ Characteristics

If abnormal stop occurs due to compressor startup failure or overcurrent output when using inverter unit, it is difficult to judge whether it is caused by the compressor failure or other failure (control PCB, power module, etc.). The inverter checker makes it possible to judge the cause of trouble easily and securely. (Connect this checker as a quasi-compressor instead of compressor and check the output of inverter)

■ Operation Method

Step 1


Be sure to turn the power off.

Step 2

Install the inverter checker instead of a compressor.

Note:

Make sure the charged voltage of the built-in smoothing electrolytic capacitor drops to 10 VDC or below before carrying out the service work.

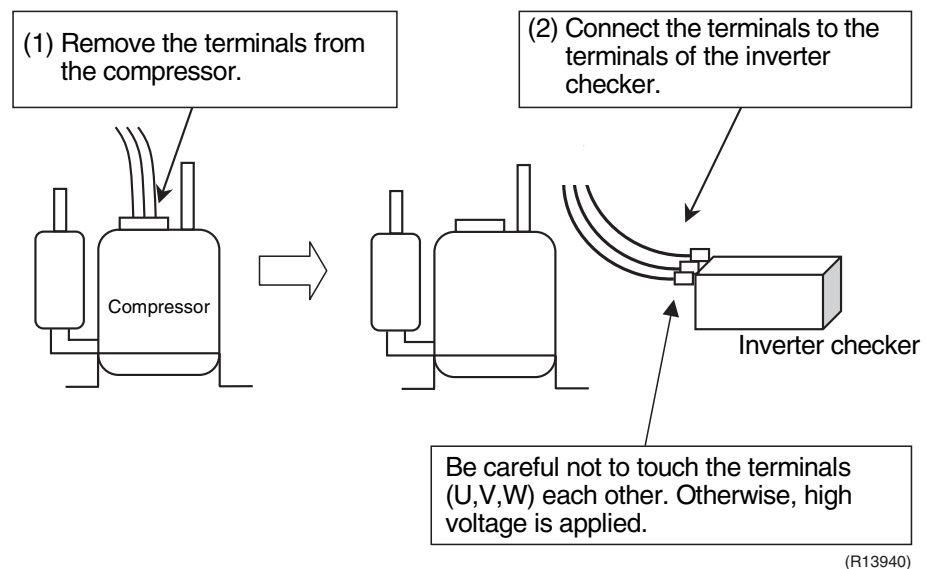

Reference:

If the terminals of the compressor are not FASTON terminals (difficult to remove the wire on the terminals), it is possible to connect wires available on site to the outdoor unit from output side of PCB. (Do not connect them to the compressor at the same time, otherwise it may result in incorrect detection.)

Step 3

Activate inverter test operation from the indoor unit.

FTXG-J, CTXG-J Series

- 1) Turn the power on.
- 2) Select FAN operation with the [MODE] button on the remote controller.
- 3) Press the 3 buttons (TEMP▲, TEMP▼, MODE) simultaneously.
→ 5. is displayed.
- 4) Press the TEMP▲ or TEMP▼ button and select 7.
- 5) Press the [MODE] button.
→ Trial operation mode is activated.
- 6) Press the [ON/OFF] button.
→ Inverter test operation starts.

FTXG-E, CTXG-E, FTXS, FVXS, FLK(X)S, FDK(X)S Series

- 1) Turn the power on.
- 2) Select FAN operation with the [MODE] button on the remote controller.
- 3) Press the 3 buttons (TEMP▲, TEMP▼, MODE) simultaneously.
→ 00 is displayed with the figure of ten's place blinking.
- 4) Press the [MODE] button.
→ 00 is displayed with the figure of one's place blinking.
- 5) Press the [MODE] button.
→ 7 is displayed.
- 6) Press the [ON/OFF] button.
→ Inverter test operation starts.

FFQ models with wired remote controller:

- 1) Turn the power on.
- 2) Select FAN operation on the remote controller.
- 3) Press the [ON/OFF] button.
→ FAN operation starts.
- 4) Press the [TEST] button 4 times.
→ Inverter test operation starts.

FFQ models with wireless remote controller:

- 1) Turn the power on.
- 2) Select FAN operation on the remote controller.
- 3) Press the [ON/OFF] button.
→ FAN operation starts.
- 4) Press the [TEST] button twice.
→ Inverter test operation starts.


■ Diagnose method (Diagnose according to 6 LEDs lighting status.)

- (1) When all the LEDs are lit uniformly, the compressor is defective.
→ Replace the compressor.
- (2) When the LEDs are not lit uniformly, check the power module.
→ Refer to **Check No.13**.
- (3) If NG in **Check No.13**, replace the power module (PCB).
If OK in **Check No.13**, check if there is any solder cracking on the PCB.
- (4) If any solder cracking is found, replace the PCB or repair the soldered section.
If there is no solder cracking, replace the PCB.



Caution

- (1) When the output frequency is low, the LEDs blink slowly. As the output frequency increases, the LEDs blink quicker. (The LEDs look like they are lit.)
- (2) On completion of diagnose by the inverter checker, be sure to re-crimp the FASTON terminals. Otherwise, the terminals may be burned due to loosening.

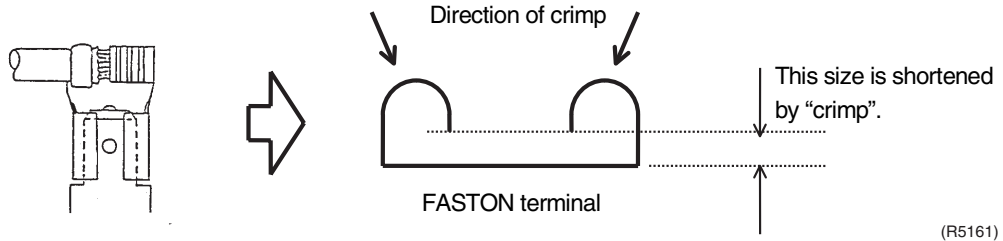

8.1.12 Rotating Pulse Input on the Outdoor Unit PCB Check

Check No.15

<Outdoor fan motor>

Make sure that the voltage of 320 ± 30 V is applied.


1. Set operation off and power off. Disconnect the connector S70.
2. Check that the voltage between the pins 4 - 7 is 320 VDC.
3. Check that the control voltage between the pins 3 - 4 is 15 VDC.
4. Check that the rotation command voltage between the pins 2 - 4 is 0 ~ 15 VDC.
5. Keep operation off and power off. Connect the connector S70.
6. Check whether 2 pulses (0 ~ 15 VDC) are output at the pins 1 - 4 when the fan motor is rotated 1 turn by hand.

When the fuse is melted, check the outdoor fan motor for proper function.

If NG in step 2 → Defective PCB → Replace the PCB.

If NG in step 4 → Defective Hall IC → Replace the outdoor fan motor.

If OK in both steps 2 and 4 → Replace the PCB.

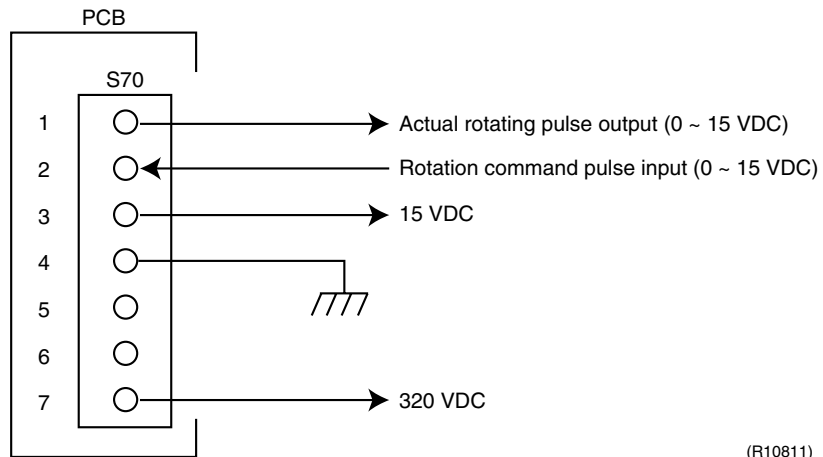

8.1.13 Hall IC Check


Check No.16

1. Check the connector connection.
2. With the power on, operation off, and the connector connected, check the following.
 - *Output voltage of about 5 V between pins 1 and 3.
 - *Generation of 3 pulses between pins 2 and 3 when the fan motor is operating.

If NG in step 1 → Defective PCB → Replace the PCB.

If NG in step 2 → Defective Hall IC → Replace the fan motor.

If OK in both steps 1 and 2 → Replace the PCB.

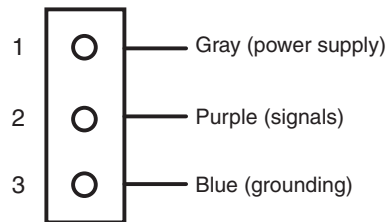

(R1990)

8.1.14 Main Circuit Short Check


Check No.29



Note: Check to make sure that the voltage between (+) and (–) of the diode bridge (DB1) is approx. 0 V before checking.

- Measure the resistance between the pins of the DB1 as below.
- If the resistance is ∞ or less than 1 k Ω , short circuit occurs on the main circuit.

(–) terminal of the tester (in case of digital, (+) terminal)	~ (2, 3)	+ (4)	~ (2, 3)	– (1)
(+) terminal of the tester (in case of digital, (–) terminal)	+ (4)	~ (2, 3)	– (1)	~ (2, 3)
Resistance in OK	several k Ω ~ several M Ω	∞	∞	several k Ω ~ several M Ω
Resistance in NG	0 Ω or ∞	0	0	0 Ω or ∞

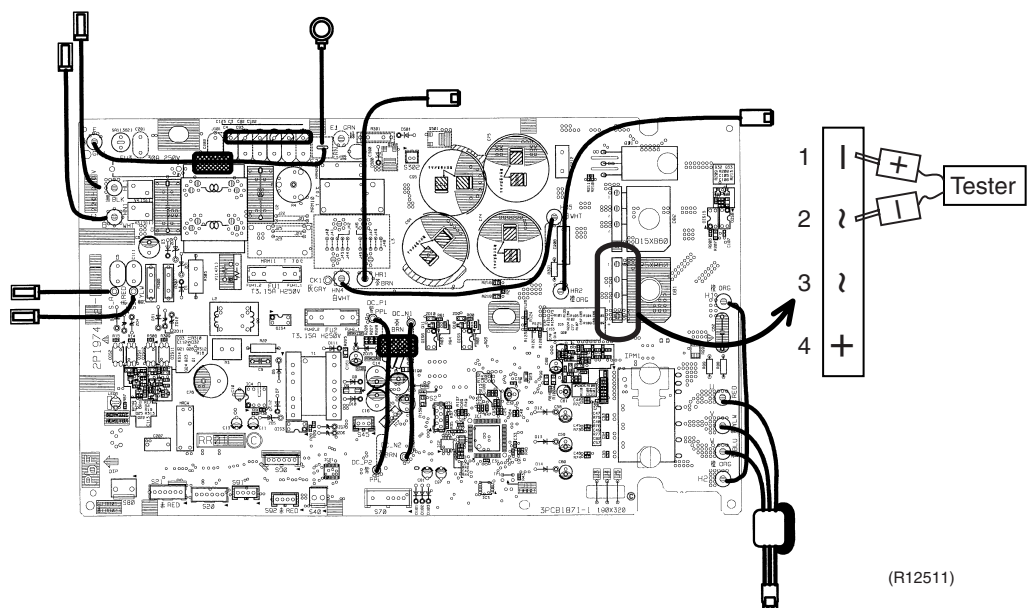

(R12511)

Part 7

Removal Procedure

1. Outdoor Unit.....	248
1.1 Removal of Outer Panels	248
1.2 Removal of Electrical Box	250
1.3 Removal of PCB.....	255
1.4 Removal of Sound Blanket.....	260
1.5 Removal of Outdoor Fan / Fan Motor.....	262
1.6 Removal of Thermistors	265
1.7 Removal of Four Way Valve / Electronic Expansion Valve	267
1.8 Removal of Compressor.....	270

1. Outdoor Unit

1.1 Removal of Outer Panels




Procedure



Warning

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	External appearance	<p>(R7570)</p> <p>(R7571)</p>	
2	Remove the 2 screws and remove the top panel.	<p>(R12527)</p>	<p>■ The front panel has 4 hooks.</p>
3	Remove the 8 screws and remove the front panel.	<p>(R12527)</p>	

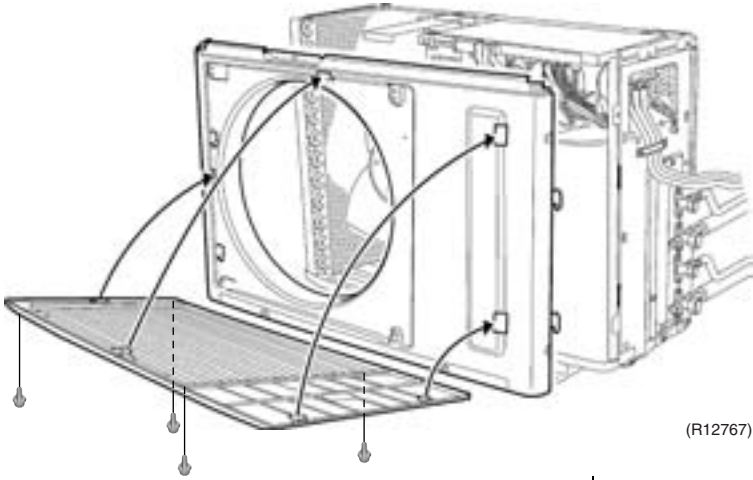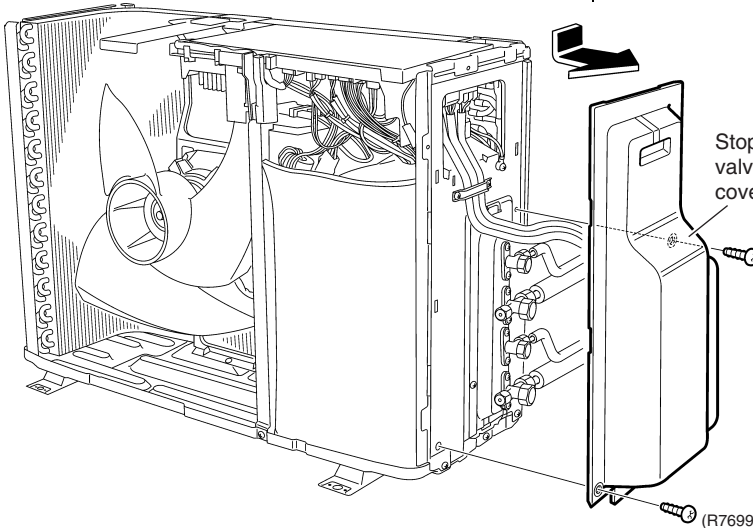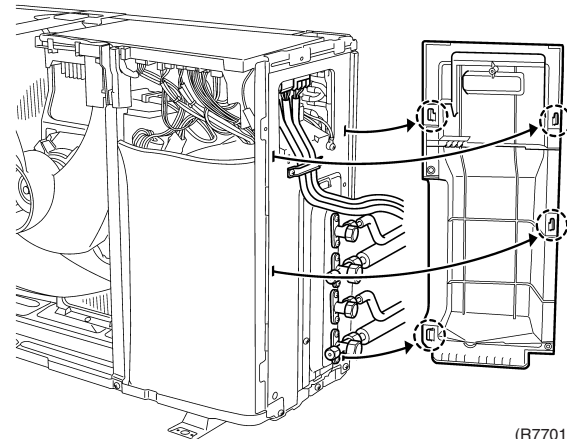Step	Procedure	Points
4	<p>Remove the 4 screws and remove the discharge grille.</p>  <p>(R12767)</p>	<ul style="list-style-type: none"> When reassembling, make sure to fit the 4 hooks.
5	<p>Remove the 2 screws and remove the stop valve cover.</p>  <p>(R7699)</p>  <p>(R7701)</p>	<ul style="list-style-type: none"> When reassembling, make sure to fit the 4 hooks.

1.2 Removal of Electrical Box





Procedure











Warning

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
<p>1. Disconnect the connecting wires.</p> <p>1 Remove the 2 grounding screws. Remove the 2 screws and remove the wiring fixture. Then remove all the screws to disconnect the power supply cables and the connecting wires.</p>	<p style="text-align: right;">(R7573)</p>	<ul style="list-style-type: none"> ■ When reassembling, fasten the wires with screws on the terminal board.
<p>2. Remove the electrical box.</p> <p>1 Release the outdoor temperature thermistor.</p> <p>2 Lift up the guard net and remove it.</p>	<p style="text-align: right;">(R7208)</p> <p style="text-align: right;">(R7209)</p>	

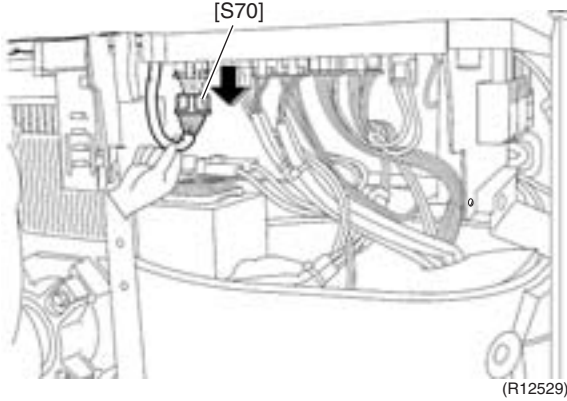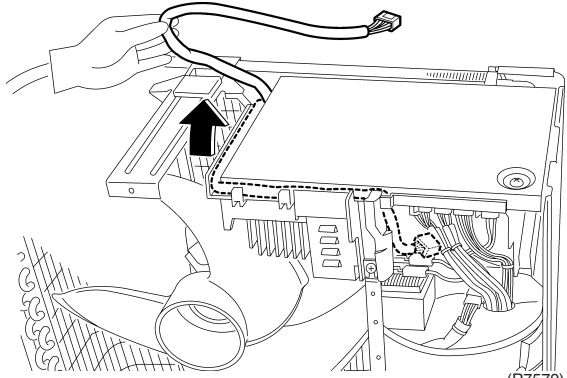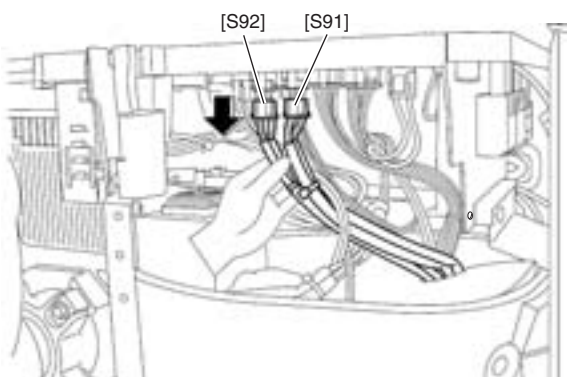Step	Procedure	Points
3	<p>Disconnect the connector for the fan motor [S70].</p> 	
4	<p>Release the fan motor lead wire.</p> 	
5	<p>Disconnect the connector for the gas pipe thermistor [S91] and for the liquid pipe thermistor [S92].</p> 	<p>[S91] : gas pipe thermistor (white) [S92] : liquid pipe thermistor (red)</p>
6	<p>Disconnect the connector for the overload protector [S40].</p> 	<p>[S40] : overload protector</p>

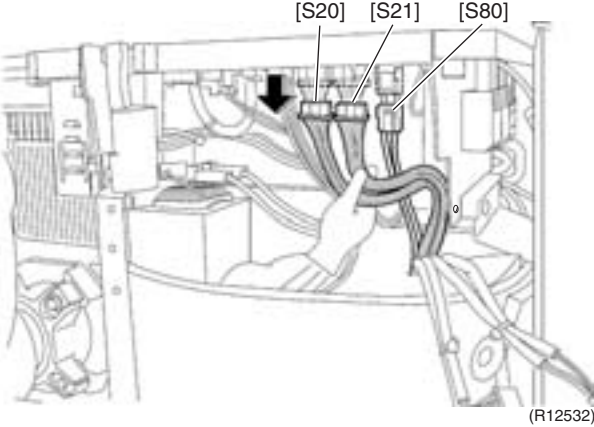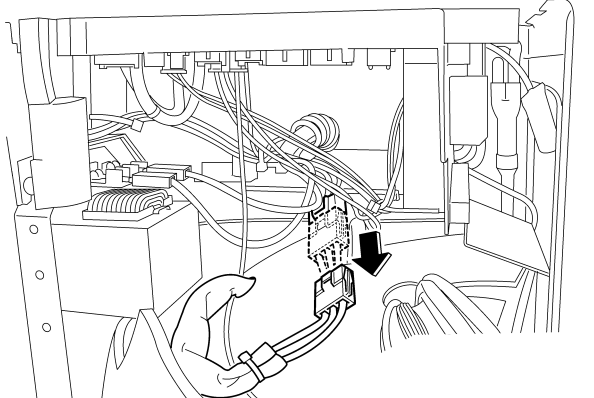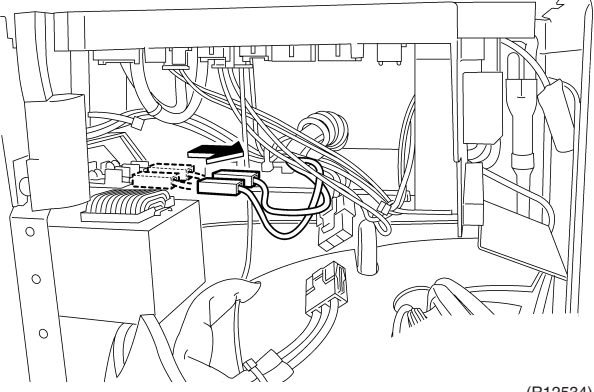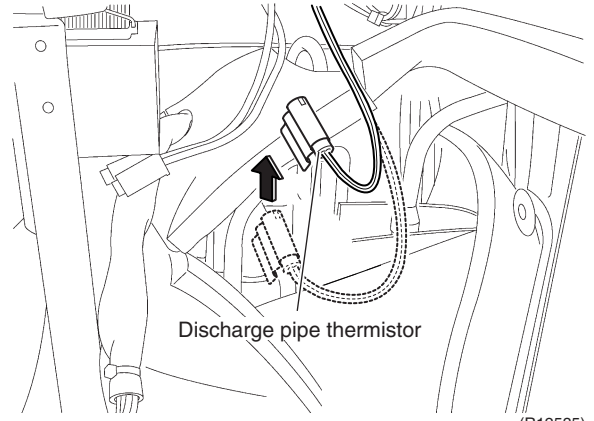Step	Procedure	Points
7	<p>Disconnect the connectors [S20], [S21], [S80].</p>  <p>(R12532)</p>	<p>[S20] : electronic expansion valve coil for room A (white) [S21] : electronic expansion valve coil for room B (red) [S80] : four way valve coil</p>
8	<p>Disconnect the relay connector for the compressor.</p>  <p>(R12533)</p>	
9	<p>Disconnect the 2 connectors for the reactor.</p>  <p>(R12534)</p>	
10	<p>Release the discharge pipe thermistor.</p>  <p>(R12535)</p>	<ul style="list-style-type: none"> ■ Meet the edge of the thermistor and the clip. ■ Be careful not to lose the clip for the thermistor.

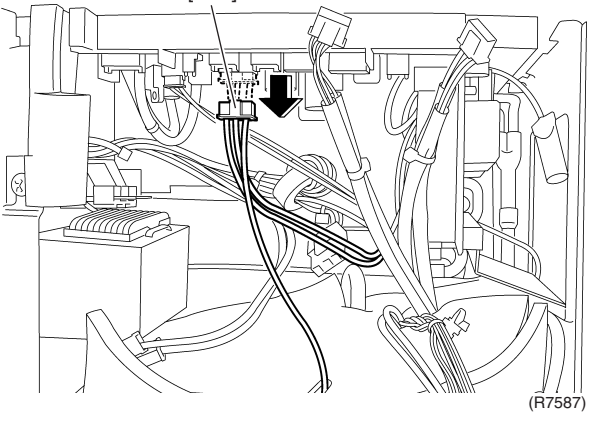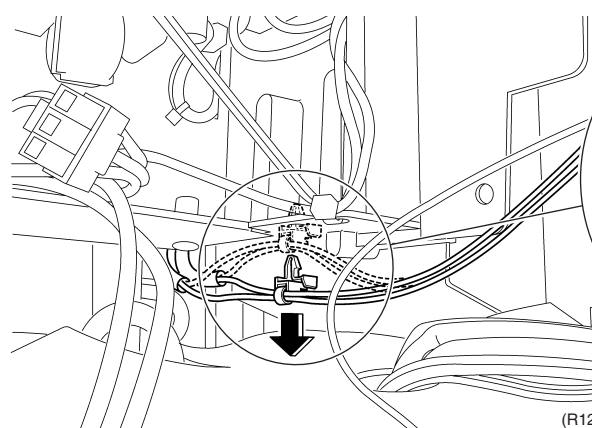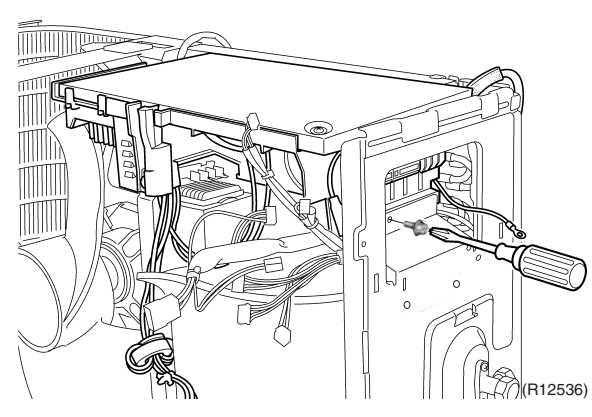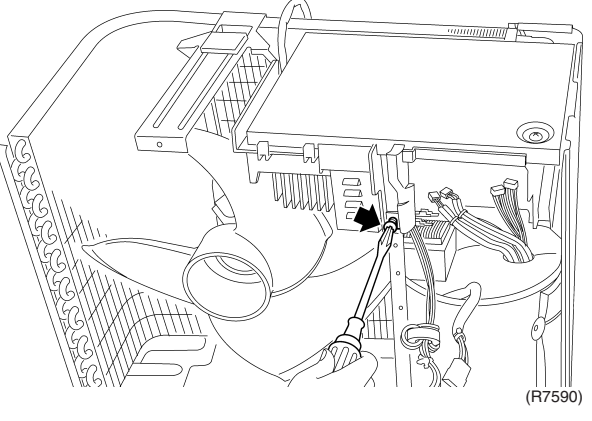Step	Procedure	Points
11	<p>Disconnect the connector for the thermistors [S90].</p>  <p>(R7587)</p>	<p>[S90] : thermistors (outdoor temperature, outdoor heat exchanger, discharge pipe)</p>
12	<p>Detach the clamp for the thermistors from the electrical box.</p>  <p>(R12771)</p>	
13	<p>Remove the screw on the right side of the electrical box.</p>  <p>(R12536)</p>	
14	<p>Loosen the screw in front of the electrical box.</p>  <p>(R7590)</p>	

Step	Procedure	Points
15	<p data-bbox="199 219 422 280">Lift and remove the electrical box.</p>  <p data-bbox="997 689 1066 712">(R12537)</p>	

1.3 Removal of PCB





Procedure










Warning



Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the screw and remove the electrical box cover.		<p>Preparation</p> <ul style="list-style-type: none"> ■ Remove the panels according to the “Removal of Outer Panels”. ■ Remove the electrical box according to the “Removal of Electrical Box”.
2	Detach the insulation sheet.		<ul style="list-style-type: none"> ■ The trimmed part goes front.
3	Remove the 2 screws and remove the terminal boards.		<ul style="list-style-type: none"> ■ The thermal fuse is united with terminal board.

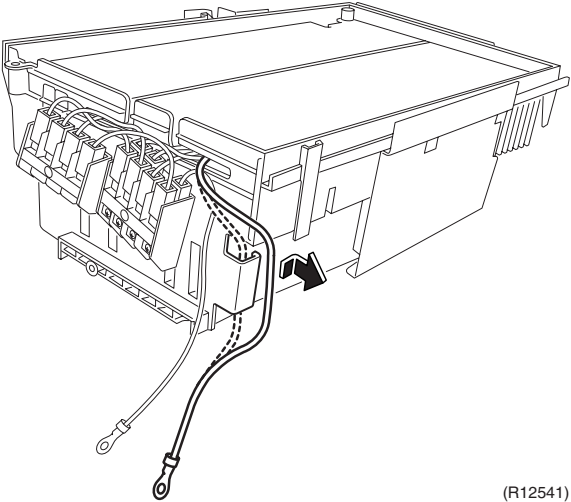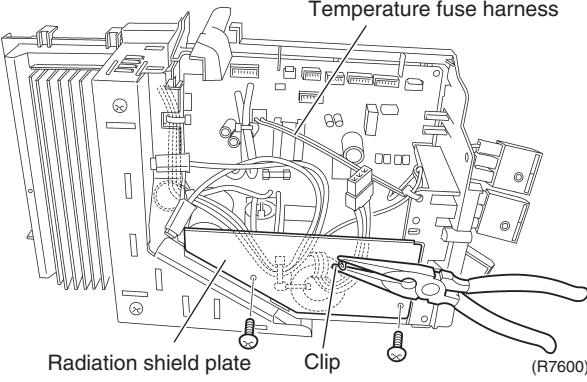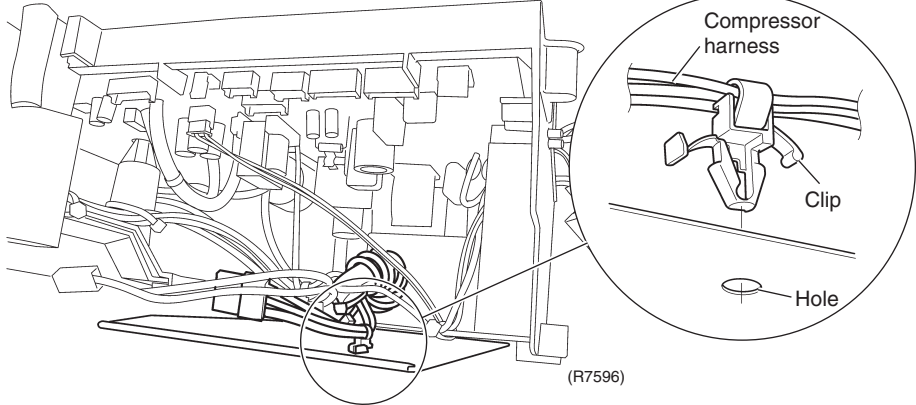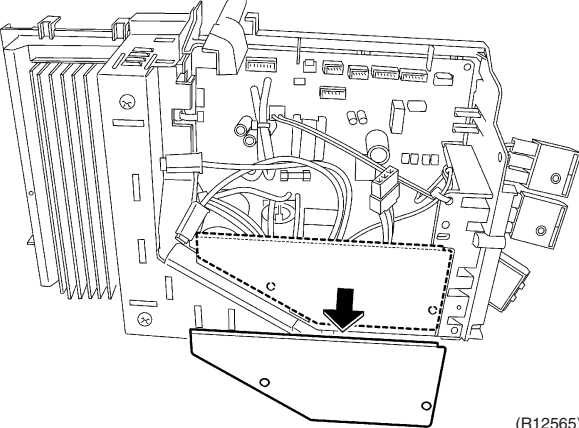Step	Procedure	Points
4	<p>Release the earth wire from the hook.</p>  <p>(R12541)</p>	
5	<p>Remove the 2 screws and detach the clip to remove the radiation shield plate.</p>  <p>(R7600)</p>  <p>(R7596)</p>  <p>(R12565)</p>	

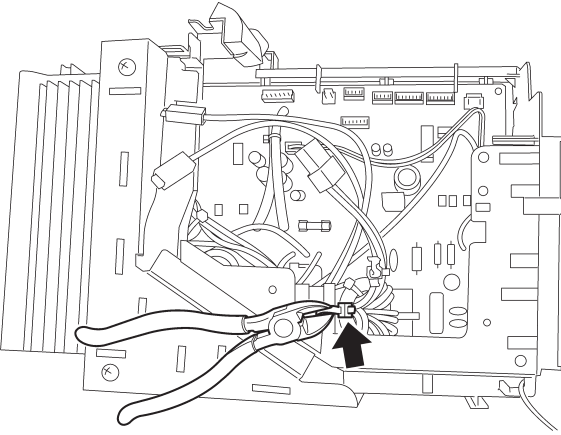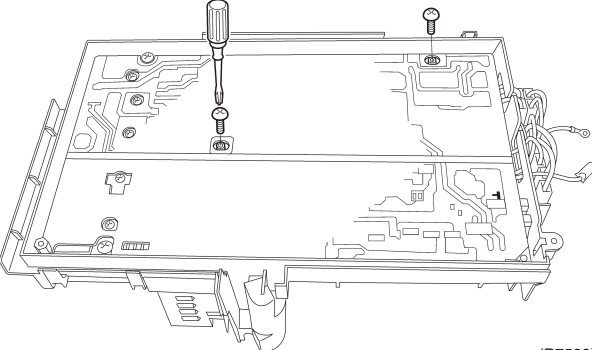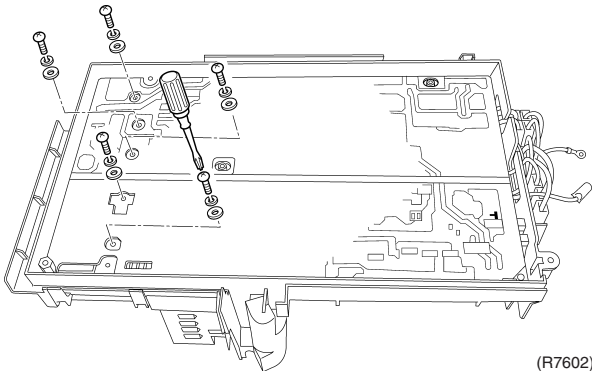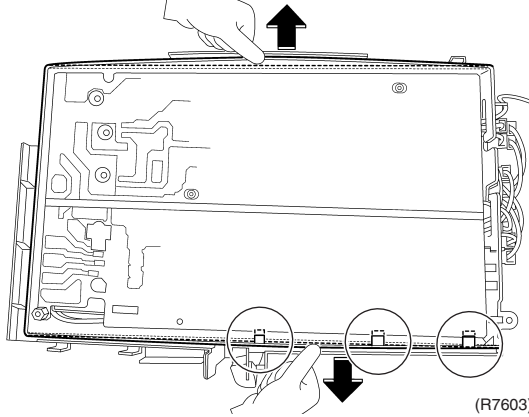Step	Procedure	Points
6	<p>Cut the clamp and release the wire harnesses.</p>  <p>(R7597)</p>	
7	<p>Remove the 7 screws in total to remove the PCB.</p>  <p>(R7598)</p>  <p>(R7602)</p>	
8	<p>Lift up the back side of the electrical box slightly and unfasten the hooks of the front.</p>  <p>(R7603)</p>	<ul style="list-style-type: none"> ■ When reassembling, make sure that the hooks of the electrical box are placed on the PCB.

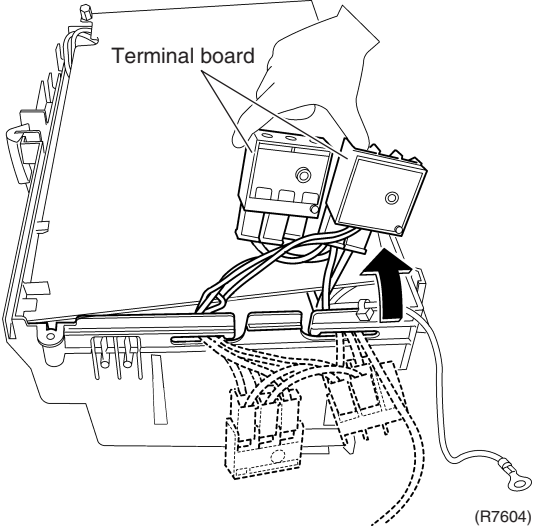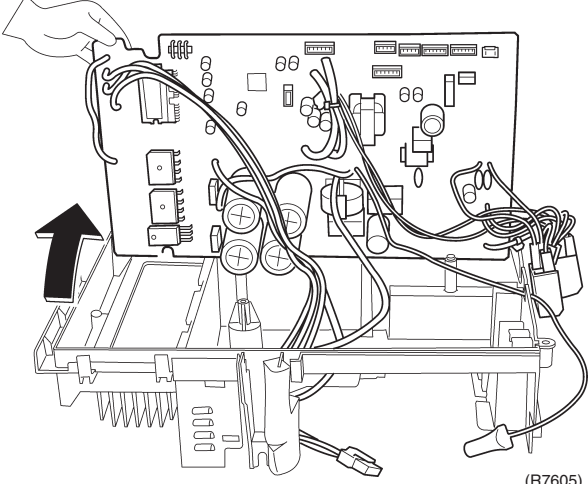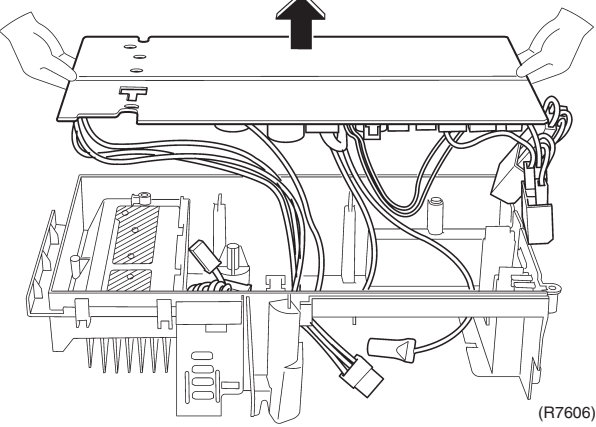Step	Procedure	Points
9	<p>Release the lead wires from the hooks and remove the terminal boards.</p>  <p>(R7604)</p>	
10	<p>Lift up the PCB.</p>  <p>(R7605)</p>	
11	<p>Remove the PCB.</p>  <p>(R7606)</p>	

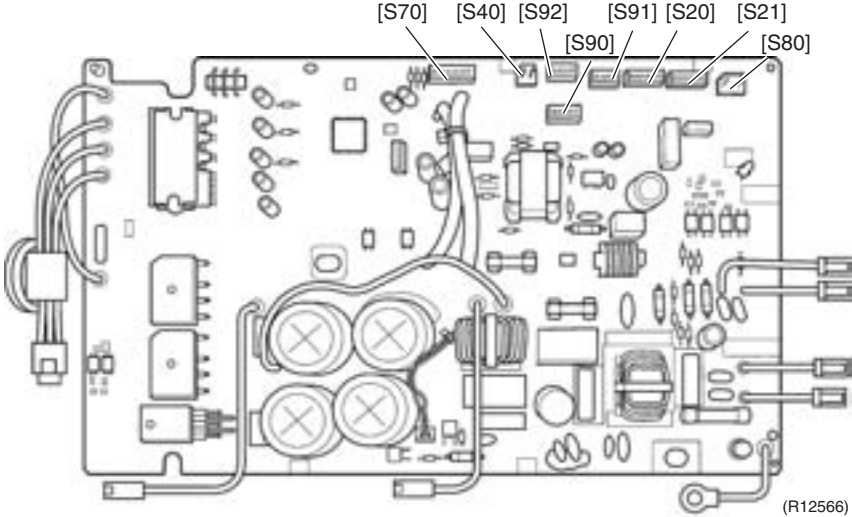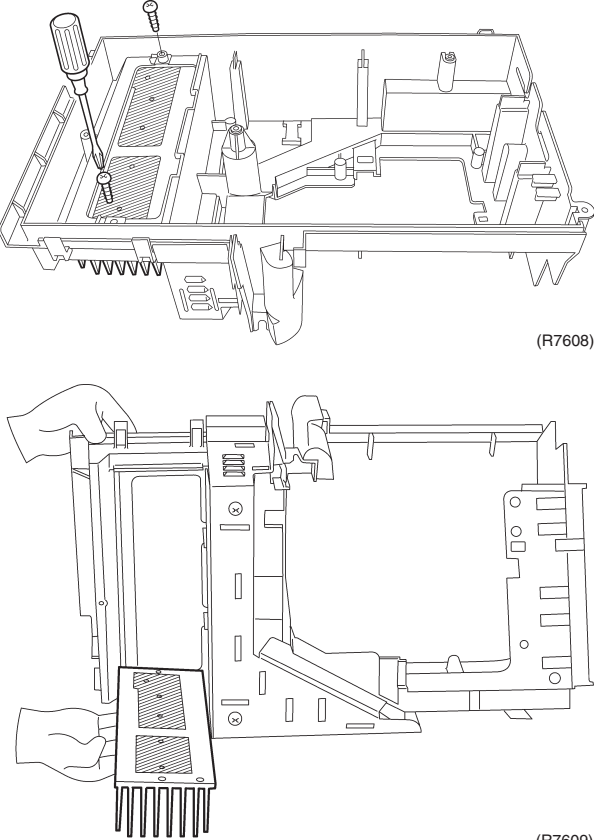Step	Procedure	Points
12	Disconnect the connectors from the terminal board.	<p>■ Refer to page 49 for detail.</p>  <p>(R12566)</p> <p>★This illustration is for 40 class model as representative.</p> <p>[S20] : electronic expansion valve coil for room A [S21] : electronic expansion valve coil for room B [S40] : overload protector [S70] : fan motor [S80] : four way valve coil [S90] : thermistors [S91] : gas pipe thermistor [S92] : liquid pipe thermistor</p>
13	Remove the 2 screws and remove the radiation fin.	 <p>(R7608)</p> <p>(R7609)</p>




1.4 Removal of Sound Blanket






Procedure



Warning

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

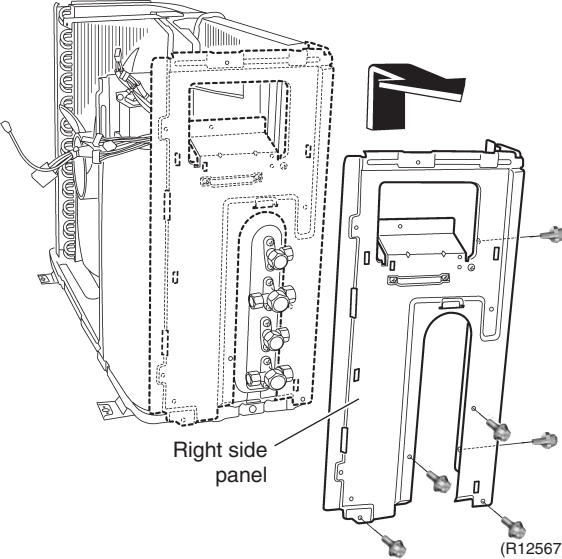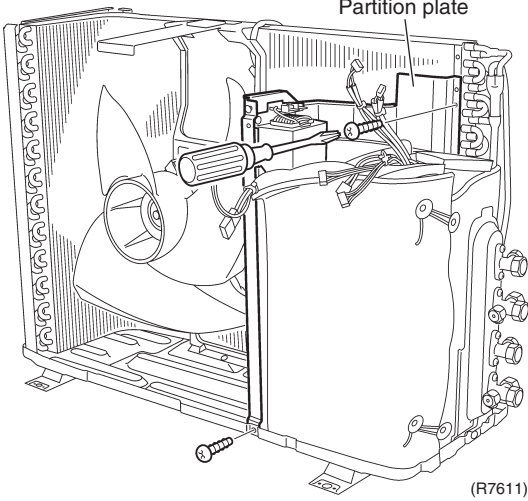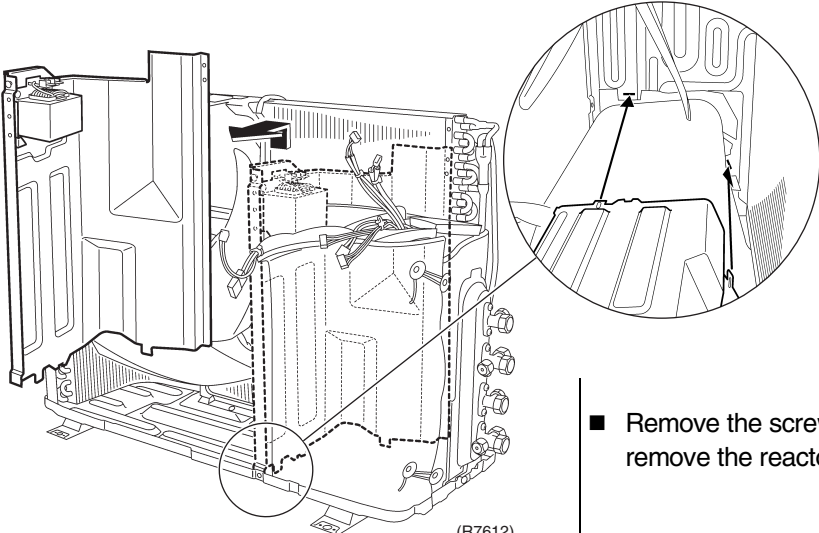Step	Procedure	Points
<p>1. Remove the right side panel.</p> <p>1 Remove the 6 screws and remove the right side panel.</p>		<p>Preparation</p> <ul style="list-style-type: none"> ■ Remove the panels according to the “Removal of Outer Panels”. ■ Remove the electrical box according to the “Removal of Electrical Box”.
<p>2. Remove the partition plate.</p> <p>1 Remove the 2 screws.</p> <p>2 The partition plate has 2 hooks on the lower side. Lift and pull the partition plate and remove it.</p>	 	<ul style="list-style-type: none"> ■ When reassembling, fit the lower hooks into the bottom frame. ■ Remove the screw to remove the reactor.

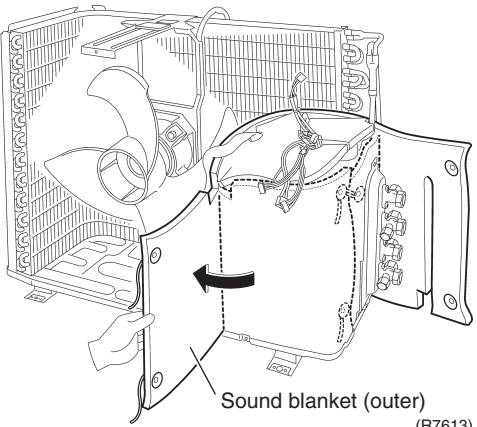
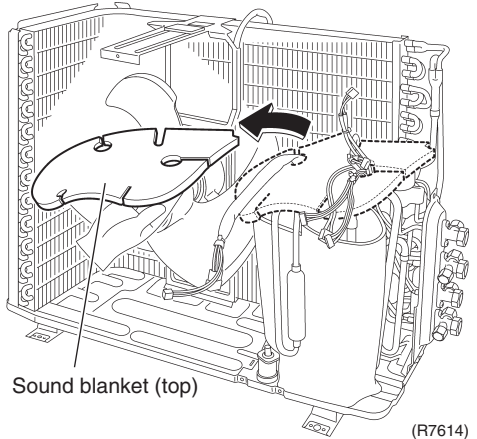
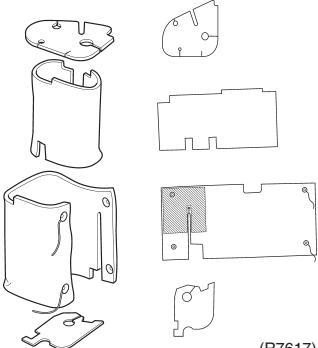
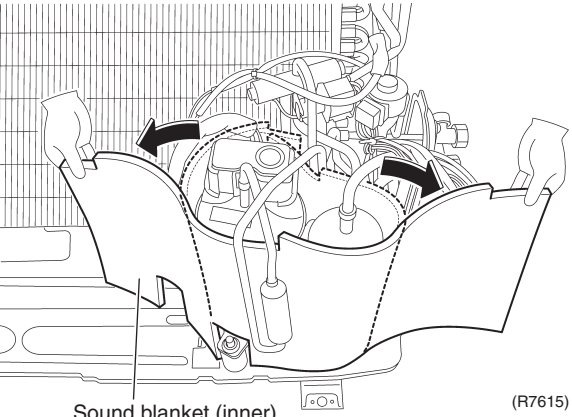
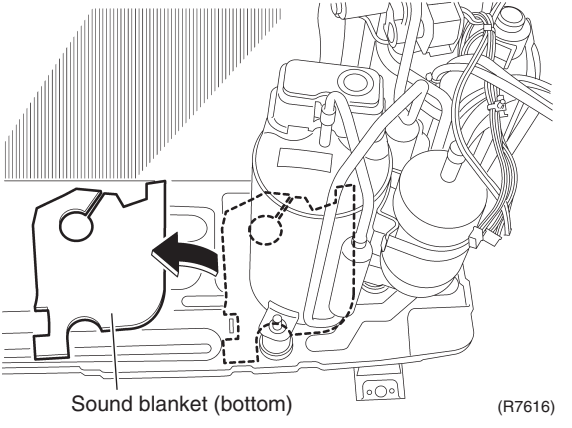
Step	Procedure	Points
3. Remove the sound blanket.		
1 Release the strings, open the sound blanket (outer) and pull it out.	 <p>Sound blanket (outer) (R7613)</p>	
2 Remove the sound blanket (top).	 <p>Sound blanket (top) (R7614)</p>	<p>■ Since the piping ports are torn easily, remove the sound blanket carefully.</p>  <p>(R7617)</p>
3 Open the sound blanket (inner) and pull it out.	 <p>Sound blanket (inner) (R7615)</p>	
4 Pull out the sound blanket (bottom).	 <p>Sound blanket (bottom) (R7616)</p>	





1.5 Removal of Outdoor Fan / Fan Motor






Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

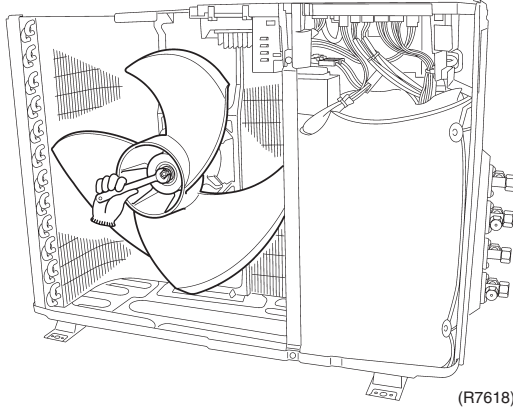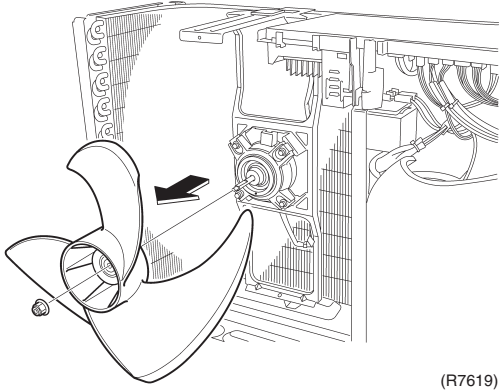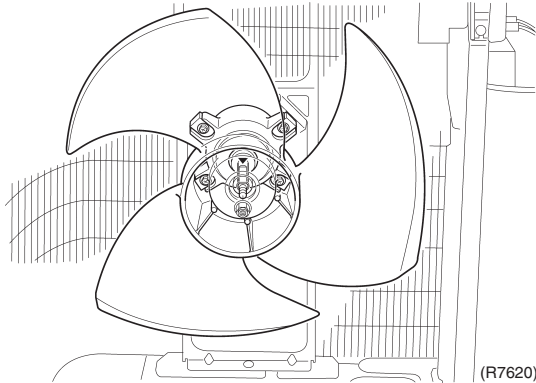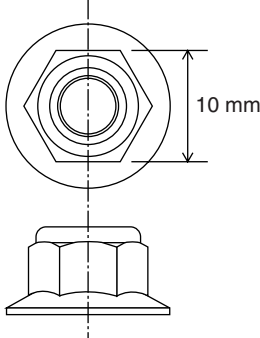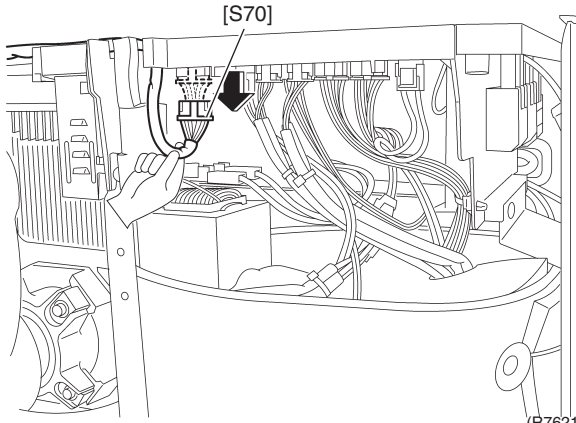Step	Procedure	Points
<p>1. Remove the outdoor fan.</p> <p>1 Remove the washer fitted nut.</p> <p>2 Remove the outdoor fan.</p>	 <p>(R7618)</p>  <p>(R7619)</p>  <p>(R7620)</p>	<ul style="list-style-type: none"> ■ The screw has reverse winding. ■ Nut size: M6  <p>10 mm</p> <p>(R12236)</p> <ul style="list-style-type: none"> ■ When reassembling, align ▼ mark of the outdoor fan with D-cut section of the motor shaft.
<p>2. Remove the fan motor.</p> <p>1 Disconnect the connector for the fan motor [S70].</p>	 <p>[S70]</p> <p>(R7621)</p>	

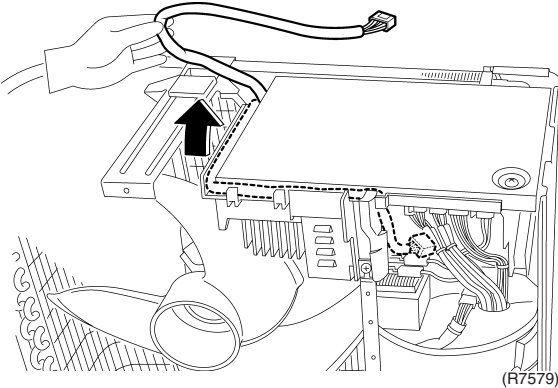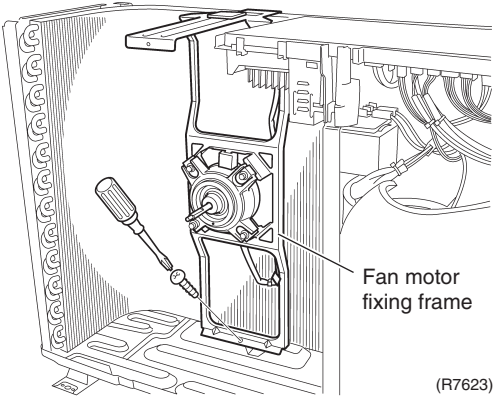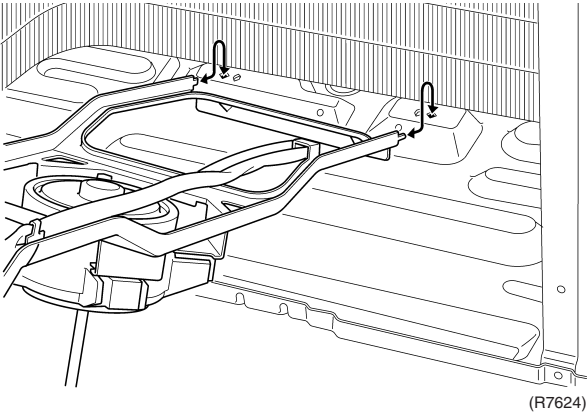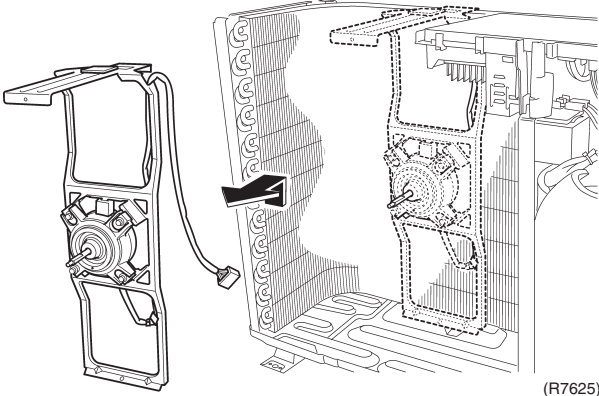Step	Procedure	Points
2	Release the fan motor lead wire.	
	 <p>(R7579)</p>	
3	Remove the screw of the fan motor fixing frame.	
	 <p>Fan motor fixing frame</p> <p>(R7623)</p>	
4	Remove the fan motor fixing frame.	
	 <p>(R7624)</p>	
	 <p>(R7625)</p>	

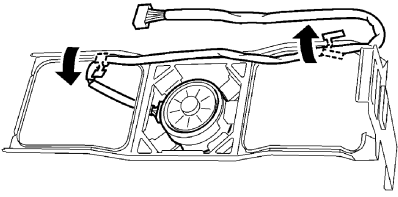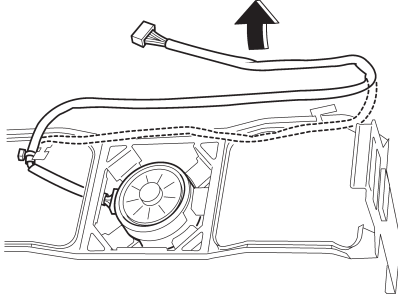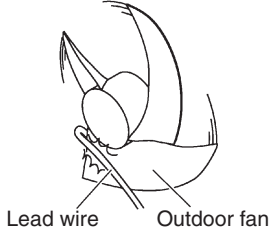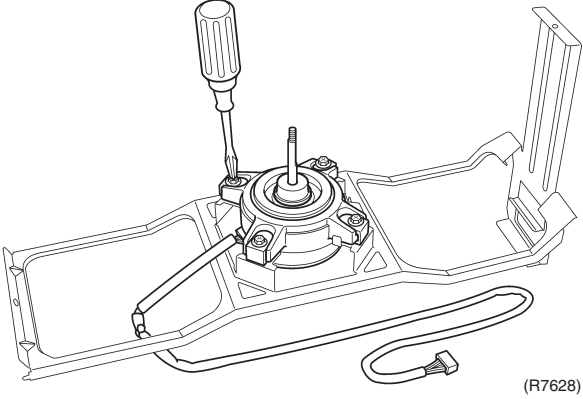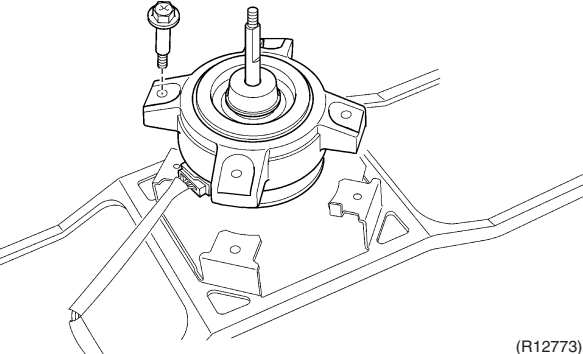Step	Procedure	Points
5	<p>Turn the fan motor fixing frame backward and open the 2 hooks of the fan motor lead wire.</p>  <p>(R7626)</p>	
6	<p>Release the fan motor lead wire.</p>  <p>(R7627)</p>	<p>■ When reassembling, put the fan motor lead wire through the back of the fan motor so as not to be entangled with the outdoor fan.</p>  <p>Lead wire Outdoor fan</p> <p>(R12215)</p>
7	<p>Remove the 4 screws and remove the fan motor.</p>  <p>(R7628)</p>  <p>(R12773)</p>	






1.6 Removal of Thermistors




Procedure



Warning

Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

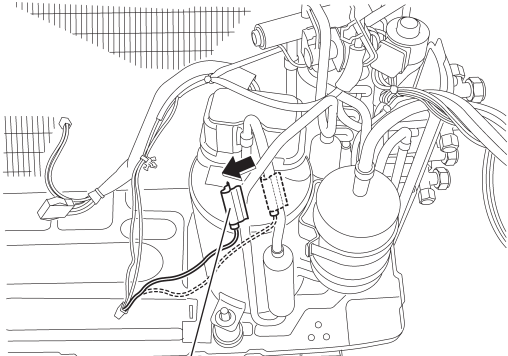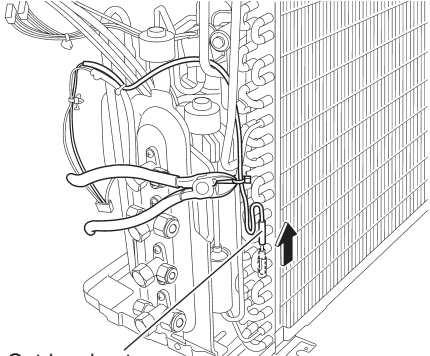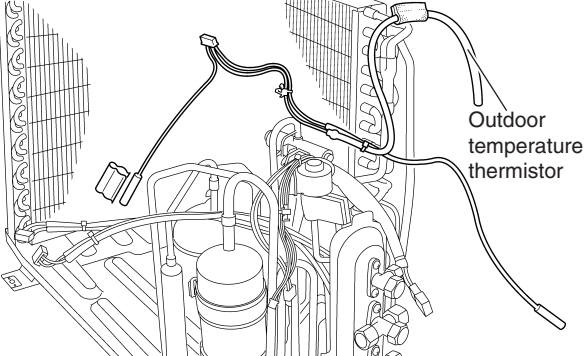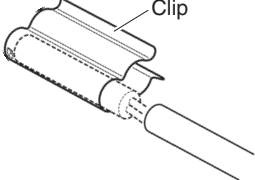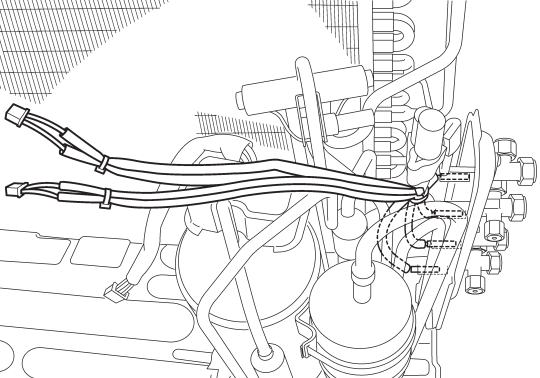Step	Procedure	Points
<p>1. Remove the assembly of thermistors.</p> <p>1 Release the discharge pipe thermistor.</p> <p>2 Cut the clamp and pull out the outdoor heat exchanger thermistor.</p> <p>3 The thermistors are united as one assembly.</p>	 <p>Discharge pipe thermistor (R7630)</p>  <p>Outdoor heat exchanger thermistor (R7631)</p>  <p>Outdoor temperature thermistor (R7632)</p>	<p>■ Be careful not to lose the clip for the thermistor.</p>  <p>Clip (R12279)</p>
<p>2. Remove the liquid / gas pipe thermistors.</p> <p>1 The figure shows the liquid / gas pipe thermistors.</p>	 <p>(R7633)</p>	

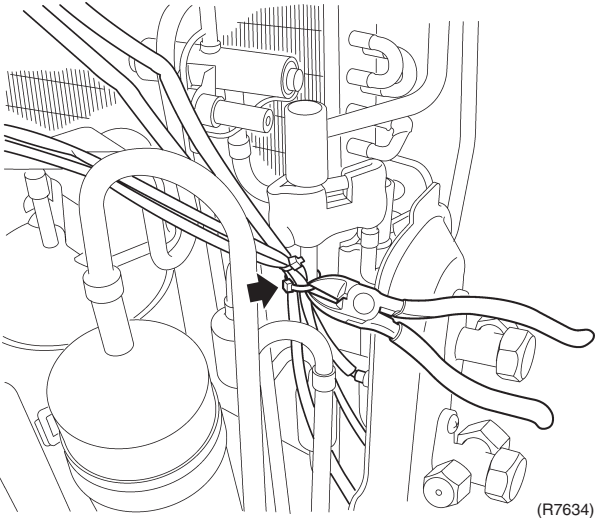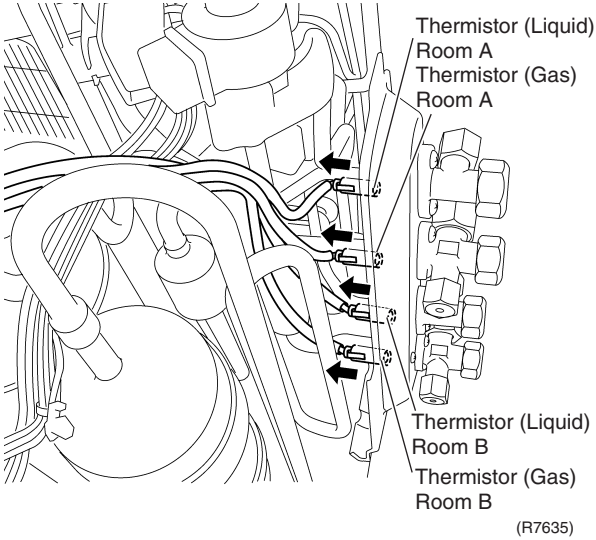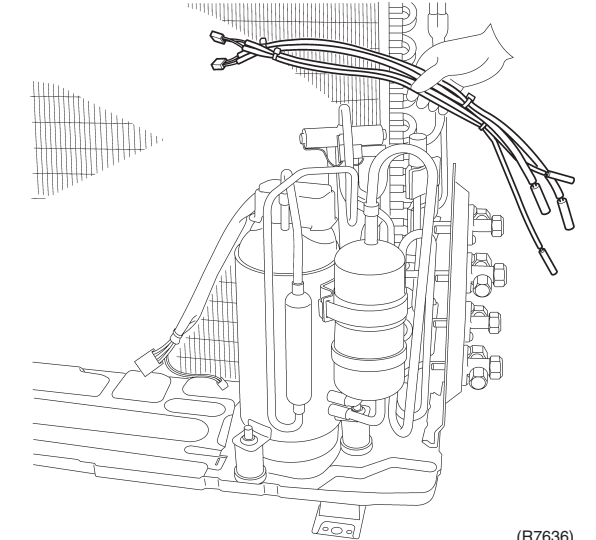Step	Procedure	Points
2	<p>Cut the clamp.</p>  <p>(R7634)</p>	
3	<p>Peel the putty and remove the thermistors.</p>  <p>Thermistor (Liquid) Room A Thermistor (Gas) Room A Thermistor (Liquid) Room B Thermistor (Gas) Room B</p> <p>(R7635)</p>	<p>[S91] : gas pipe thermistor room A (black) room B (gray) [S92] : liquid pipe thermistor room A (black) room B (gray)</p>
4	<p>The figure shows the arrangement of the assembly of the liquid / gas thermistors.</p>  <p>(R7636)</p>	




1.7 Removal of Four Way Valve / Electronic Expansion Valve




Procedure







Warning

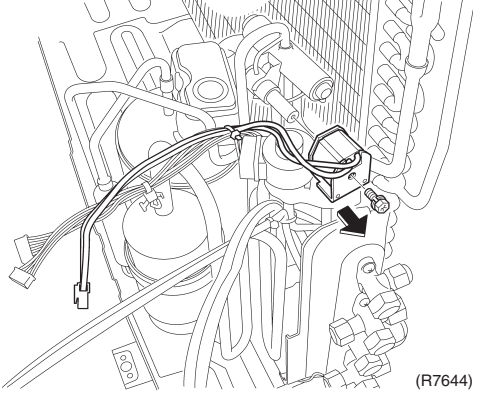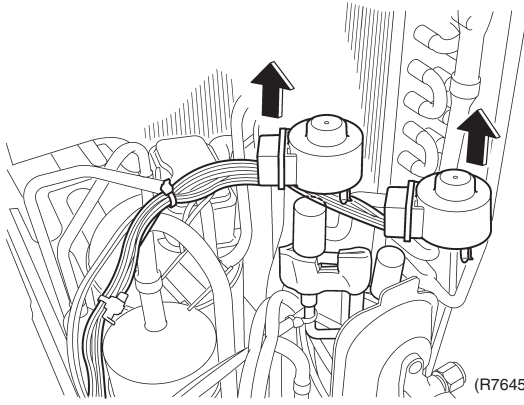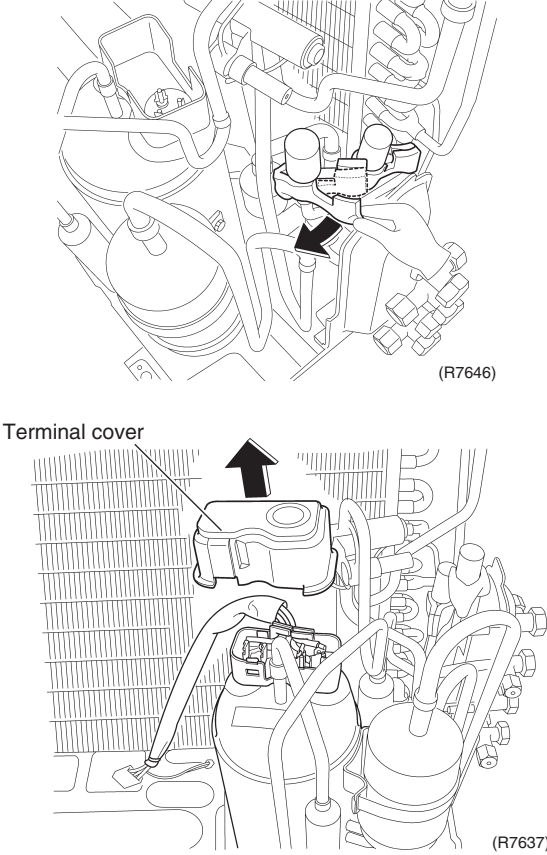Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Points
1. Remove the peripheries.		<p>Preparation</p> <ul style="list-style-type: none"> ■ Remove the sound blanket.
1	<p>Remove the screw and remove the four way valve coil.</p>	 <p>(R7644)</p>
2	<p>Pull out the electronic expansion valve coils.</p>	 <p>(R7645)</p>
3	<p>Remove the putty.</p>	<ul style="list-style-type: none"> ■ Detach the four way valve coil and the clamp, and then detach the wire harnesses.
4	<p>Remove the terminal cover.</p>	 <p>Terminal cover</p> <p>(R7637)</p>

Step	Procedure	Points
<ul style="list-style-type: none"> ■ Before working, make sure that the refrigerant gas is empty in the circuit. ■ Be sure to apply nitrogen replacement when heating up the brazed part. 		<p>Warning  Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p>
2.	Remove the electronic expansion valve and the four way valve.	
1	Heat up the 2 brazed parts of the electronic expansion valve and remove it.	<p>Warning  If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p>Caution  From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
2	Heat up the brazed parts of the four way valve.	<p>Cautions for restoration</p> <ol style="list-style-type: none"> 1. Restore the piping by non-oxidation brazing. 2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry.
3	Cut the pipes.	<p>In case of difficulty with gas brazing machine</p> <ol style="list-style-type: none"> 1. Disconnect the brazed part where is easy to disconnect and restore. 2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.

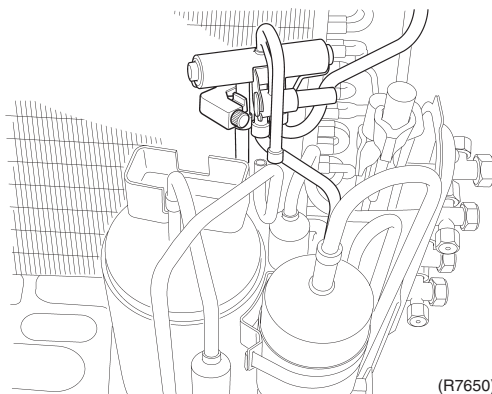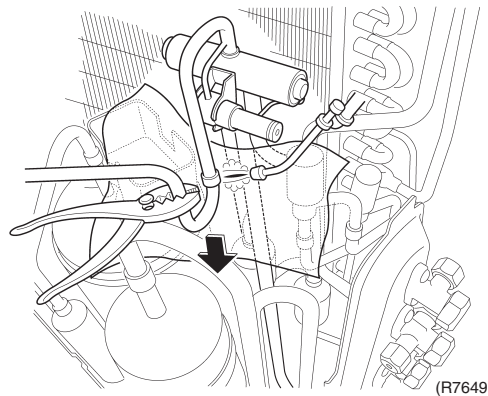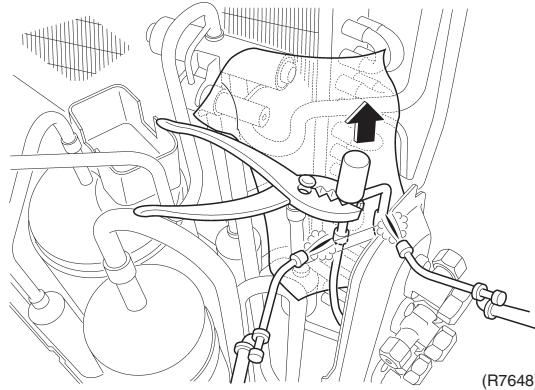

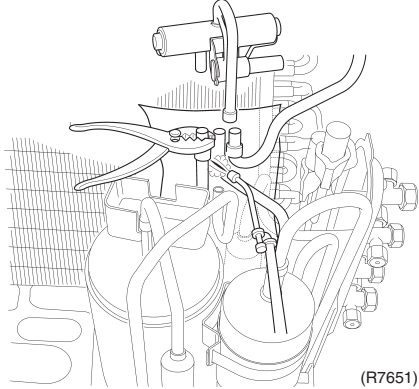Step	Procedure	Points
4	<p data-bbox="199 219 464 342">Heat up the brazed parts. Pull the pipe with pliers and disconnect.</p>  <p data-bbox="932 593 991 613">(R7651)</p>	<p data-bbox="1093 219 1161 241">Note:</p> <ul data-bbox="1093 248 1458 712" style="list-style-type: none"><li data-bbox="1093 248 1458 376">■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit.<li data-bbox="1093 416 1458 544">■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed.<li data-bbox="1093 584 1458 712">■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries.




1.8 Removal of Compressor

Procedure



Warning Be sure to wait 10 minutes or more after turning off all power supplies before disassembling work.

Step	Procedure	Procedure	Points
1	Remove the terminal cover.	<p>Terminal cover</p> <p>(R7637)</p>	
2	Disconnect the compressor terminals.	<p>Red (U)</p> <p>Yellow (V)</p> <p>Blue (W)</p> <p>(R7638)</p> <p>(R7639)</p>	
3	Unfasten the hooks with a flat screwdriver and remove the overload protector.	<p>(R7640)</p>	

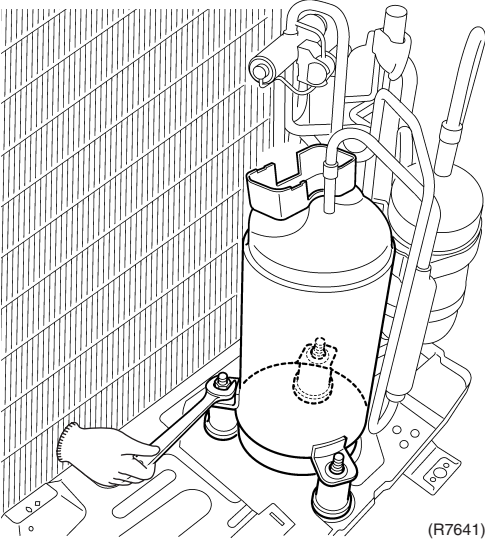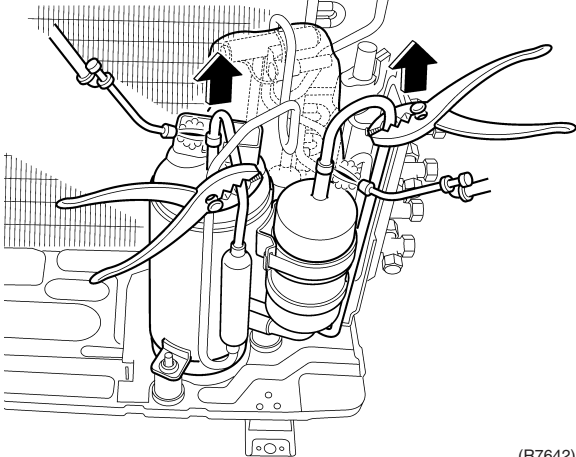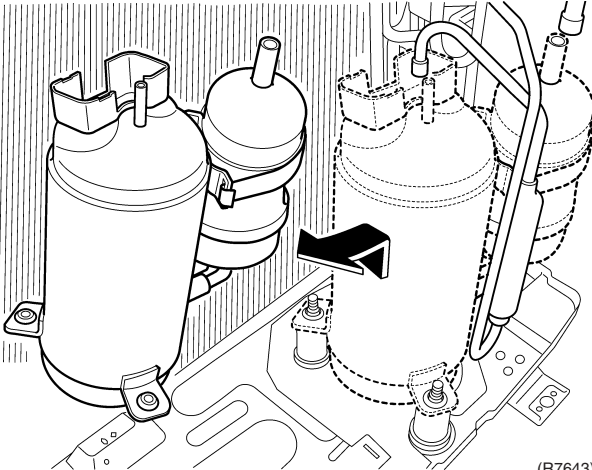Step	Procedure	Procedure	Points
4	Remove the 2 nuts of the compressor.	 <p>(R7641)</p>	<p>Warning Be careful not to get yourself burnt with the pipes and other parts that are heated by the gas brazing machine.</p> <p>Warning If the refrigerant gas leaks during work, ventilate the room. (If the refrigerant gas is exposed to flames, toxic gas may be generated.)</p> <p>Warning Since it may happen that the refrigerant oil in the compressor catches fire, prepare wet cloth so as to extinguish fire immediately.</p>
<ul style="list-style-type: none"> ■ Before working, make sure that the refrigerant gas is empty in the circuit. ■ Be sure to apply nitrogen replacement when heating up the brazed part. 		 <p>(R7642)</p>	<p>Caution From the viewpoint of global environment protection, do not discharge the refrigerant gas in the atmosphere. Make sure to collect all the refrigerant gas.</p>
5	Heat up the brazed part of the discharge side and disconnect.		
6	Heat up the brazed part of the suction side and disconnect.		
7	Lift the compressor up to remove.		
<p>Note:</p> <ul style="list-style-type: none"> ■ Do not use a metal saw for cutting pipes by all means because the sawdust comes into the circuit. ■ When withdrawing the pipes, be careful not to pinch them firmly with pliers. The pipes may get deformed. ■ Provide a protective sheet or a steel plate so that the brazing flame cannot influence peripheries. ■ Be careful so as not to burn the compressor terminals, the name plate, the heat exchanger fin. 		 <p>(R7643)</p>	<p>Cautions for restoration</p> <ol style="list-style-type: none"> 1. Restore the piping by non-oxidation brazing. 2. It is required to prevent the carbonization of the oil inside the four way valve and the deterioration of the gaskets affected by heat. (Keep below 120°C.) For the sake of this, wrap the four way valve with wet cloth and provide water so that the cloth does not dry. <p>In case of difficulty with gas brazing machine</p> <ol style="list-style-type: none"> 1. Disconnect the brazed part where is easy to disconnect and restore. 2. Cut pipes on the main unit with a tube cutter in order to make it easy to disconnect.

Part 8

Trial Operation and Field Settings

1. Pump Down Operation.....	273
2. Forced Operation Mode	274
3. Trial Operation	275
3.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series.....	275
3.2 SA Indoor Unit - FFQ Series	277
4. Field Settings	278
4.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series.....	278
4.2 SA Indoor Unit - FFQ Series	282
4.3 Outdoor Unit.....	285
5. Application of Silicon Grease to a Power Transistor and a Diode Bridge	286


1. Pump Down Operation

Outline

In order to protect the environment, be sure to conduct pump down operation when relocating or disposing the unit.

Detail

- 1) Remove the valve caps from the liquid stop valve and the gas stop valve at the pipes for rooms A and B.
- 2) Carry out forced cooling operation.
- 3) After 5 to 10 minutes, close the liquid stop valve at the pipes for rooms A and B with a hexagonal wrench.
- 4) After 2 to 3 minutes, close the gas stop valve and stop the forced cooling operation as quickly as possible after the gas stop valves at the pipes for rooms A and B have been shut off.
- 5) Turn the power breaker off.

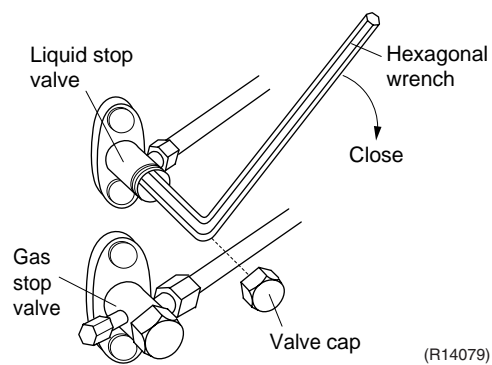

(R14079)



Refer to page 274 for forced cooling operation.


2. Forced Operation Mode

Outline Forced operation mode includes only forced cooling.

Detail

Item	Forced Cooling
Conditions	The forced operation is allowed when both the following conditions are met. 1) The outdoor unit is not abnormal and not in the 3-minute standby mode. 2) The outdoor unit is not operating.
Start	Press the forced operation ON/OFF button (SW1 or S1W) on the indoor unit for 5 seconds.
Operating room	All rooms
Command frequency	40 class: 70 Hz 50 class: 47 Hz
End	The forced operation ends when any of the following conditions is fulfilled. 1) The operation ends automatically after 15 minutes. 2) Press the forced operation ON/OFF button (SW1 or S1W) on the indoor unit again.
Others	The protection functions are prior to all others in the forced operation.

ex. Wall mounted type G-series

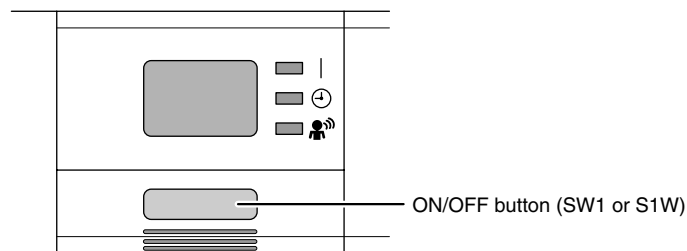

(R12779)

3. Trial Operation

3.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series

Outline

1. Measure the supply voltage and make sure that it falls in the specified range.
2. Trial operation should be carried out in either cooling or heating mode.
3. Carry out the trial operation in accordance with the operation manual to ensure that all functions and parts, such as flap movement, are working properly.
 - The air conditioner requires a small amount of power in its standby mode. If the system is not to be used for some time after installation, shut off the circuit breaker to eliminate unnecessary power consumption.
 - If the circuit breaker trips to shut off the power to the air conditioner, the system backs up the operation mode. The system then restarts operation with the previous mode when the circuit breaker is restored.


In cooling mode, select the lowest programmable temperature; in heating mode, select the highest programmable temperature.

- Trial operation may be disabled in either mode depending on the room temperature.
- After trial operation is complete, set the temperature to a normal level.
(26°C to 28°C in cooling mode, 20°C to 24°C in heating mode)
- For protection, the system does not start for 3 minutes after it is turned off.

Detail


ARC466 Series

- (1) Press the On/Off button to turn on the system.
- (2) Press the center of the Temp button and the Mode button at the same time.
- (3) Select “?” (trial operation) with the Temp ▲ or ▼ button.
- (4) Press the Mode button to start the trial operation.
- (5) Press the Mode button and select operation mode.
- (6) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press the On/Off button.

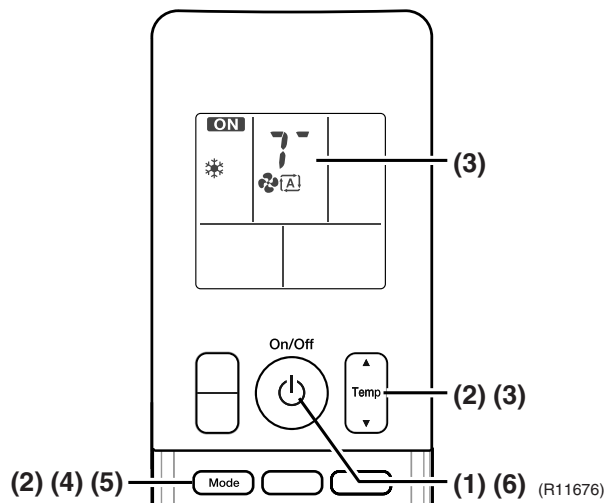


ARC452 Series

- (1) Press the ON/OFF button to turn on the system.
- (2) Press the both of TEMP buttons and the MODE button at the same time.
- (3) Press the MODE button twice.
(“?” appears on the display to indicate that trial operation is selected.)
- (4) Press the MODE button and select operation mode.
- (5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press the ON/OFF button.

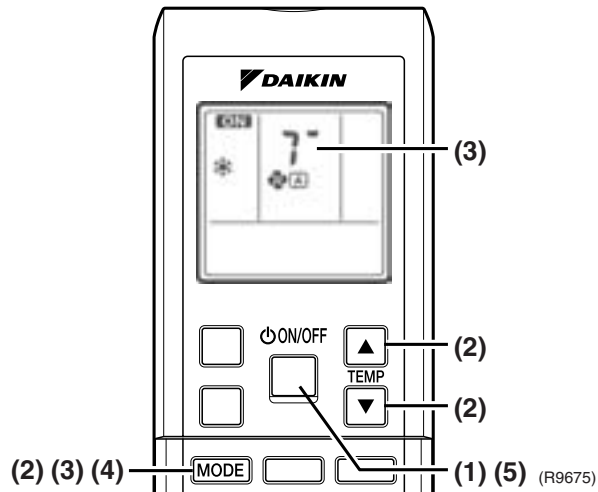**ARC433 Series**

- (1) Press the ON/OFF button to turn on the system.
- (2) Press the center of the TEMP button and the MODE button at the same time.
- (3) Press the MODE button twice.
(“?” appears on the display to indicate that trial operation is selected.)
- (4) Press the MODE button and select operation mode.
- (5) Trial operation terminates in approx. 30 minutes and switches into normal mode. To quit a trial operation, press the ON/OFF button.

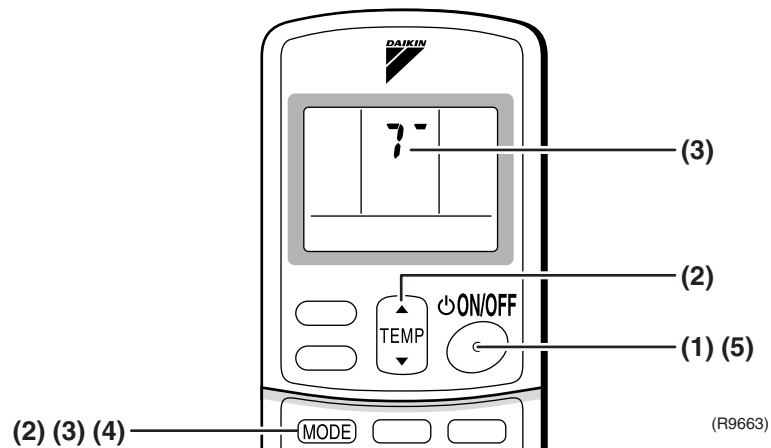

3.2 SA Indoor Unit - FFQ Series





3.2.1 Checkpoints for Trial Operation

To carry out a trial operation, check the following:

- Check that the temperature setting of the remote controller is at the lowest level in cooling mode or use trial operation mode.
- Go through the following checklist:

Checkpoints	Cautions or warnings
Are all units securely installed?	<ul style="list-style-type: none"> ● Dangerous for turning over during storm ● Possible damage to pipe connections
Is the earth wire installed according to the applicable local standard?	Dangerous if electric leakage occurs.
Are all air inlets and outlets of the indoor and outdoor units unobstructed?	<ul style="list-style-type: none"> ● Poor cooling ● Poor heating
Does the drain flow out smoothly?	Water leakage
Is piping adequately heat-insulated?	Water leakage
Have the connections been checked for refrigerant leakage?	<ul style="list-style-type: none"> ● Poor cooling ● Poor heating ● Stop
Is the supply voltage conform to the specifications on the name plate?	Incorrect operation
Are the cable sizes as specified and according to local regulations?	Damage of cables
Are the remote controller signals received by the unit?	No operation

3.2.2 Trial operation

1. Open the gas stop valve.
2. Open the liquid stop valve.
3. Electrify for 6 hours.
4. Set to cooling operation with the remote controller and start operation by pressing [ON/OFF] button ().
5. Press the [Inspection / Test] button () 4 times (2 times for wireless remote controller) and operate at trial operation mode for 3 minutes.
6. Press the [Airflow Direction Adjust] button () to make sure the unit is in operation.
7. Press the [Inspection / Test] button () and operate normally.
8. Confirm all the function of unit according to the operation manual.
9. If the decoration panel has not been installed, turn off the power after the trial operation.


4. Field Settings

4.1 RA Indoor Unit - F(C)TXG, FTXS, FVXS, FLK(X)S, FDK(X)S Series

4.1.1 Model Type Setting

ARC452A1, ARC452A3

- This remote controller is common to the heat pump model and cooling only model. Use the DIP switch on the remote controller to set the heat pump model or cooling only model.
- Make the setting as shown in the illustration. (The factory set is the heat pump side.)
 - Heat pump model: Set the DIP switch to H/P.
 - Cooling only model: Set the DIP switch to C/O.

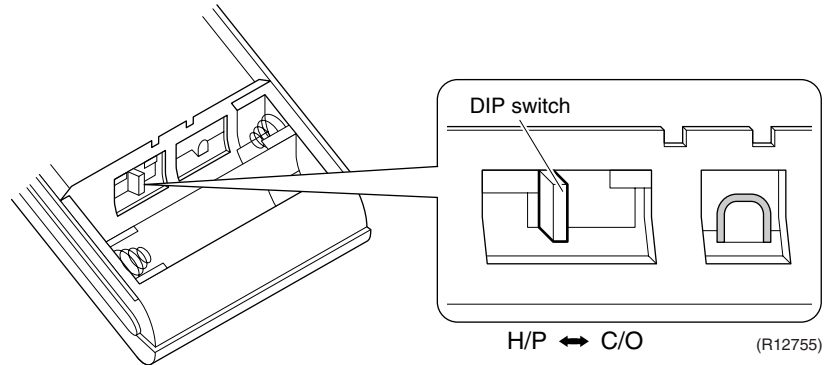

4.1.2 When 2 Units are Installed in 1 Room

When 2 indoor units are installed in 1 room, 1 of the 2 pairs of indoor unit and wireless remote controller can be set for different address.


Both the indoor unit PCB and the wireless remote controller need alteration.

Indoor Unit PCB

<Wall Mounted Type>

- (1) Remove the front grille.
- (2) Remove the electrical box.
- (3) Remove the shield plate of the electrical box.
- (4) Cut the address setting jumper JA on the PCB.


E-Series

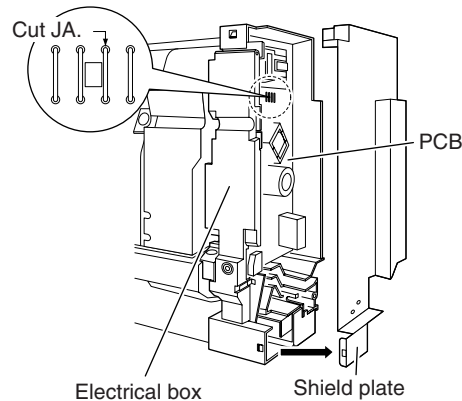

JA	ADDRESS
EXIST	1
CUT	2


(R12756)

J-Series

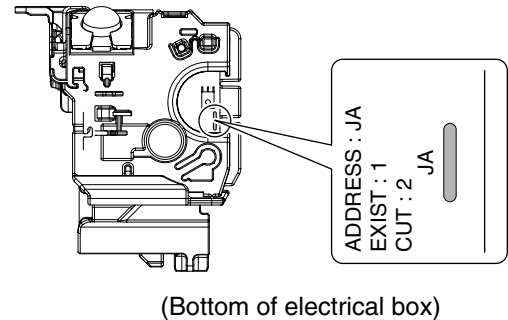



(R12036)

G-Series

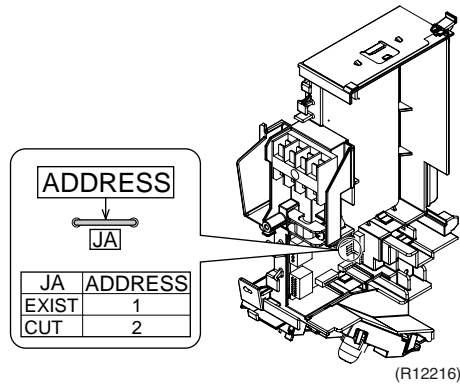


< Floor Standing Type >

- 1) Remove the front grille.
- 2) Lift the sensor PCB fixing plate and remove the front shield plate.
- 3) Disconnect the connectors [S1] [S41] [S42].
- 4) Remove the electric box (1 screw).
- 5) Pull out the indoor heat exchanger thermistor.
- 6) Remove the shield plate (8 tabs).
- 7) Cut the address jumper JA on the indoor unit PCB.
- 8) Cut the address jumper J4 in the remote controller.
(Refer to “Wireless remote controller”.)

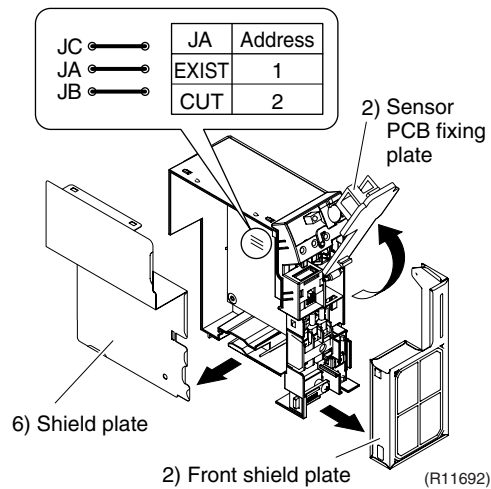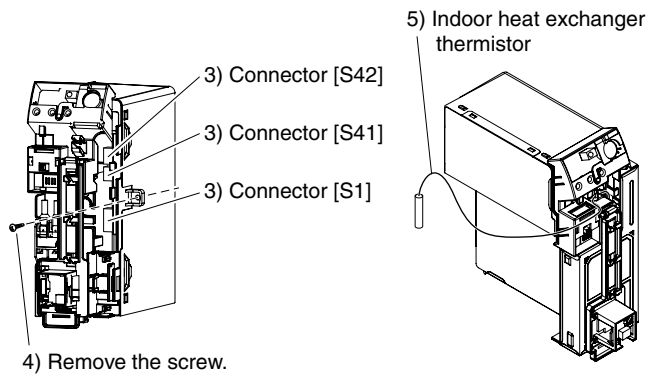


< Floor / Ceiling Suspended Dual Type >

- Cut the jumper JA on PCB.

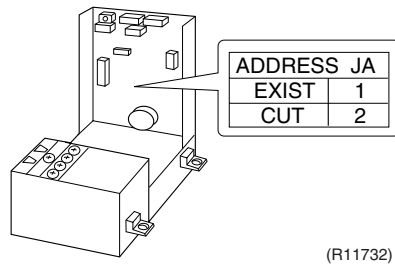

< Duct Connected Type >


- Cut the jumper JA on PCB.

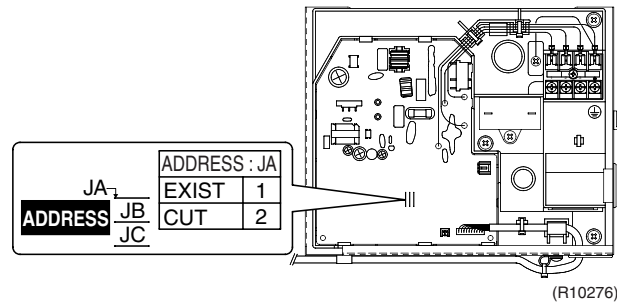


Wireless Remote Controller

- (1) Remove the cover and take it off.
- (2) Cut the address setting jumper.


<ARC466 series>

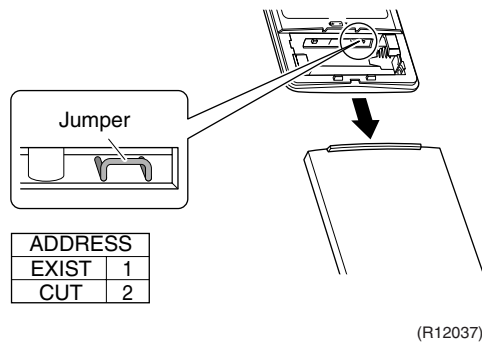

<ARC452 series>

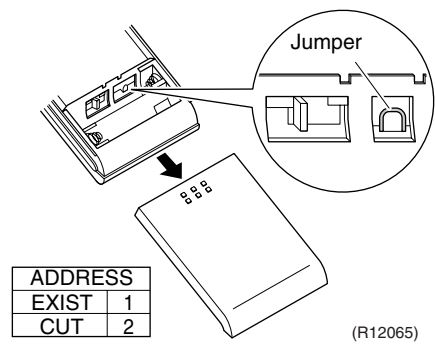

<ARC433 series>

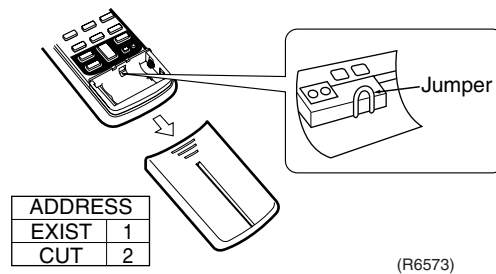

4.1.3 Jumper and Switch Settings

Jumper (on indoor unit PCB)	Function	When connected (factory set)	When cut
JB	Fan speed setting when compressor stops for thermostat OFF. (effective only at cooling operation)	Fan speed setting ; Remote controller setting	Fan speed setting; "0" (The fan stops.)
JC	Power failure recovery function	Auto-restart	The unit does not resume operation after recovering from a power failure. Timer settings are cleared.

<Floor Standing Type>

Switch (on indoor unit PCB)	Function	OFF (factory set)	ON
SW2-4	Upward airflow limit setting	Exposed or half embedded installation	Set the switch to ON position when you install the indoor unit embedded in the wall to avoid condensation.

<Floor / Ceiling Suspended Dual Type>

Switch (on indoor unit PCB)	Function	FLOOR (factory set)	CEILING
SW2	Installation style changeover	When installed as the floor mounted type	When installed as the ceiling suspended type



For the location of the jumper and the switch, refer to the following pages.

Wall mounted type: page 32, 34, 37

Floor Standing Type: page 40

Floor / Ceiling Suspended Dual Type: page 42

Duct connected type: page 44

4.2 SA Indoor Unit - FFQ Series


4.2.1 How to Change the Field Settings with the Wired Remote Controller

Installation conditions

The field settings have to be changed with the remote controller according to the installation conditions.

Wired remote controller

BRC1C61

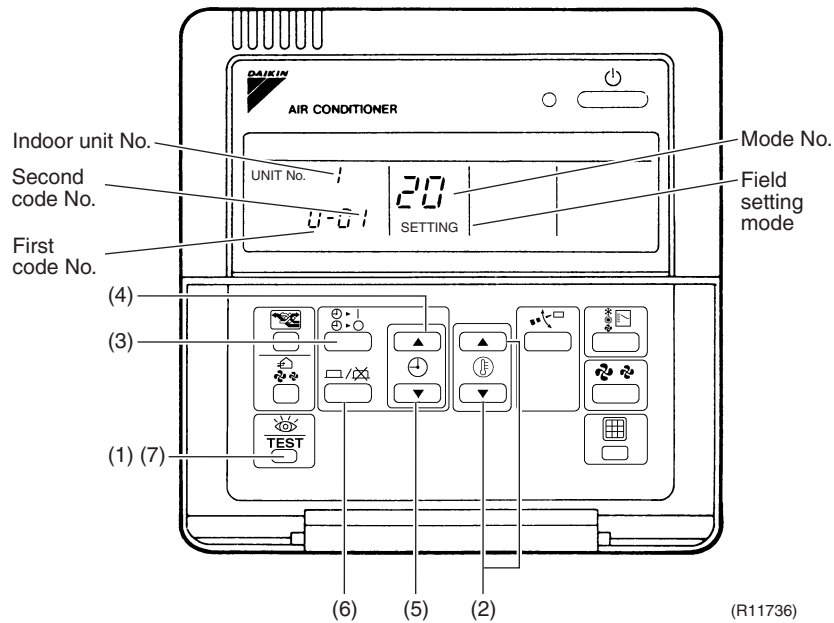

To set the field settings, you have to change:

- “Mode No.”
- “First code No.”
- “Second code No.”.

To change the field settings, proceed as follows:

Step	Action
1	Press the [Inspection / Test] button for 4 seconds during normal mode to enter the field setting mode.
2	Press the [Temperature Adjust] button to select the desired “Mode No.”.
3	<ul style="list-style-type: none"> ■ If the indoor unit is under group control, all settings for all the indoor units are set at the same time. Use the codes 10 to 15 to apply this group control and proceed to the next step. ■ If you want to set the indoor units of one group individually or if you want to read out the last settings, use the codes 20 to 25 which are displayed in brackets. Press the [Timer Selection] button to select the “Indoor unit No.” for which you want to adjust the field settings.
4	Press the upper part of the [Clock] button to select the “First code No.”.
5	Press the lower part of the [Clock] button to select the “Second code No.”.
6	Press the [Reserve] button to confirm the setting.
7	Press the [Inspection / Test] button to return to normal mode.

4.2.2 How to Change the Field Settings with the Wireless Remote Controller


Optional accessories

If optional accessories are mounted on the indoor unit, the indoor unit setting may have to be changed.

Refer to OH06-1 or the installation manual (optional handbook) for each optional accessory.

Wireless remote controller

BRC7E531W7(C/O), BRC7E530W7(H/P)

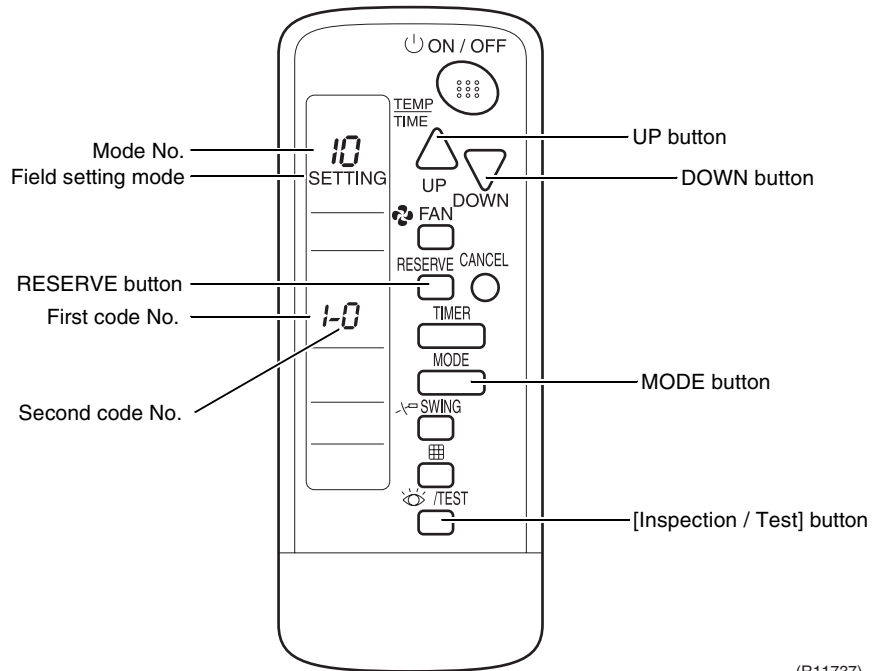

(R11737)

To set the field settings, you have to change:


- “Mode No.”
- “First code No.”
- “Second code No.”.

To change the field settings, proceed as follows:

Step	Action
1	Press the [Inspection / Test] button for 4 seconds during normal mode to enter the field setting mode.
2	Press the MODE button to select the desired “Mode No.”.
3	Press the UP button to select the “First code No.”.
4	Press the DOWN button to select the “Second code No.”.
5	Press the Reserve button to confirm the setting.
6	Press the [Inspection / Test] button to return to the normal mode.

4.2.3 Overview of the Field Settings

Mode No.	First code No.	Description of the setting	Second code No.		
			01	02	03
10 (20)	0	Filter cleaning sign time	Light contamination (Approx. 2,500hrs)	Heavy contamination (Approx. 1,250hrs)	—

 : factory setting



4.2.4 MAIN / SUB Setting when Using Two Remote Controllers

Situation

The MAIN / SUB setting is necessary when one indoor unit is controlled by two remote controllers. When you use two remote controllers (control panel and separate remote controller), set one to MAIN and the other to SUB. You can do this by setting the switch on the remote controller's PCB.

Setting

The remote controllers are factory set to MAIN, so you only have to change one remote controller from MAIN to SUB. To change a remote controller from MAIN to SUB, proceed as follows:

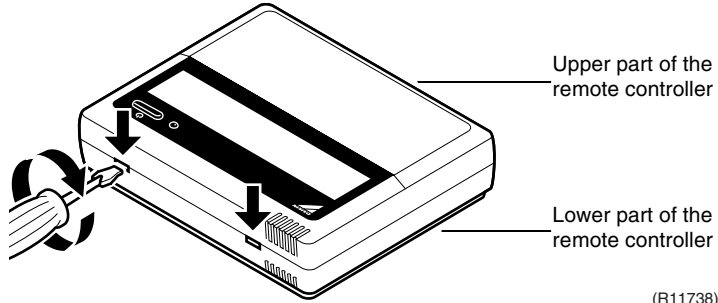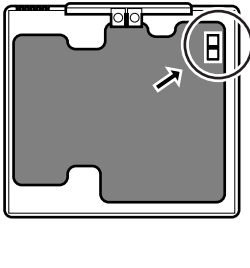
Step	Action
1	<p>Insert a flat screwdriver into the groove between the upper and lower part of the remote controller, as shown in the illustration below. Gently pry off the upper part of the controller, working from the two possible positions.</p>  <p style="text-align: right;">(R11738)</p>
2	<p>Set the [MAIN / SUB changeover] switch on the PCB to "S".</p>  <p style="text-align: right;">(R11739)</p>

4.3 Outdoor Unit

4.3.1 Jumper Settings

Jumper (on outdoor unit PCB)	Function	When connected (factory set)	When cut
J3	ECONO mode prohibition setting	ECONO operation is available.	ECONO operation is disabled.
J4	Maximum power input limitation setting	Standard control	The power input is limited to 1700 W. It is recommended for the areas with circuit breakers of low-capacity.
J5	Improvement of defrost performance	Standard control	Reinforced control (ex. The frequency increases, the duration time of defrost lengthens.)

Location of the jumpers

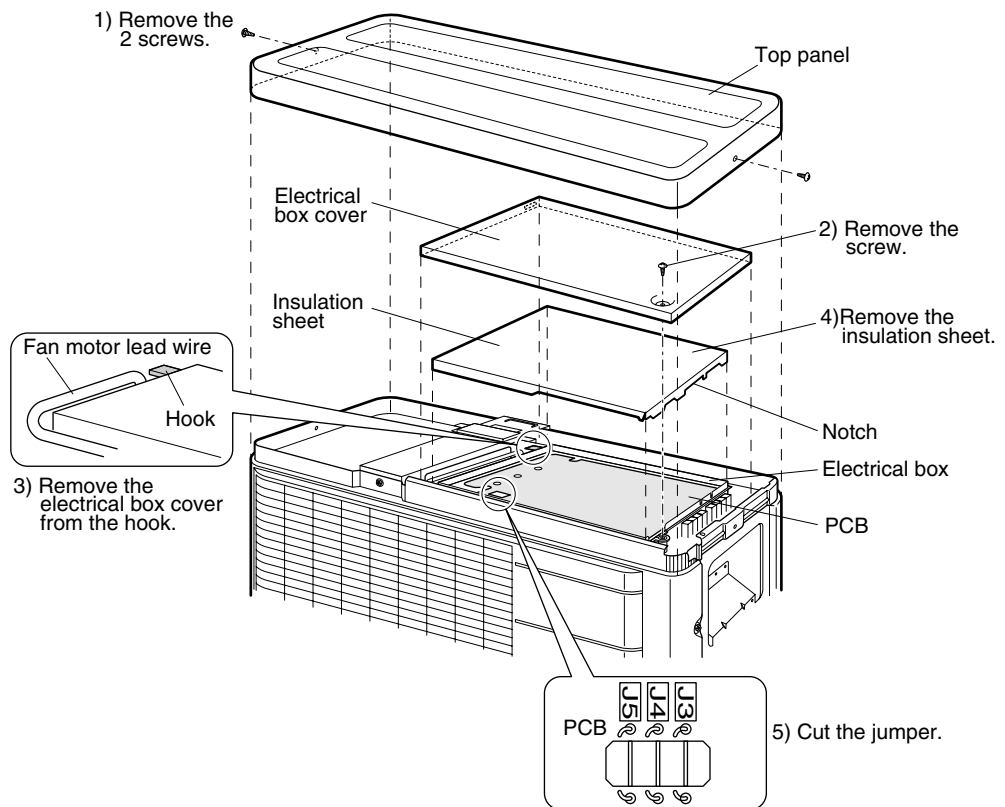

(R12774)

5. Application of Silicon Grease to a Power Transistor and a Diode Bridge

Applicable Models

All outdoor units using inverter type compressor for room air conditioner.

When the printed circuit board (PCB) of an outdoor unit is replaced, it is required that silicon grease (*1) is certainly applied to the heat radiation part (the contact point to the radiation fin) of the power transistor and diode bridge.

*1: Parts number of the silicon grease – 1172698 (Drawing number 3FB03758-1)


Details

The silicon grease is an essential article for encouraging the heat radiation of the power transistor and the diode bridge. Applying the paste should be implemented in accordance with the following instruction.

Remark: There is the possibility of failure with smoke in case of bad heat radiation.

- Wipe off the old silicon grease completely on a radiation fin.
- Apply the silicon grease evenly to the whole.
- Do not leave any foreign object such as solder or paper waste between the power transistor and the radiation fin, and also the diode bridge, and the radiation fin.
- Tighten the screws of the power transistor and the diode bridge, and contact to the radiation fin without any gap.


<Example>

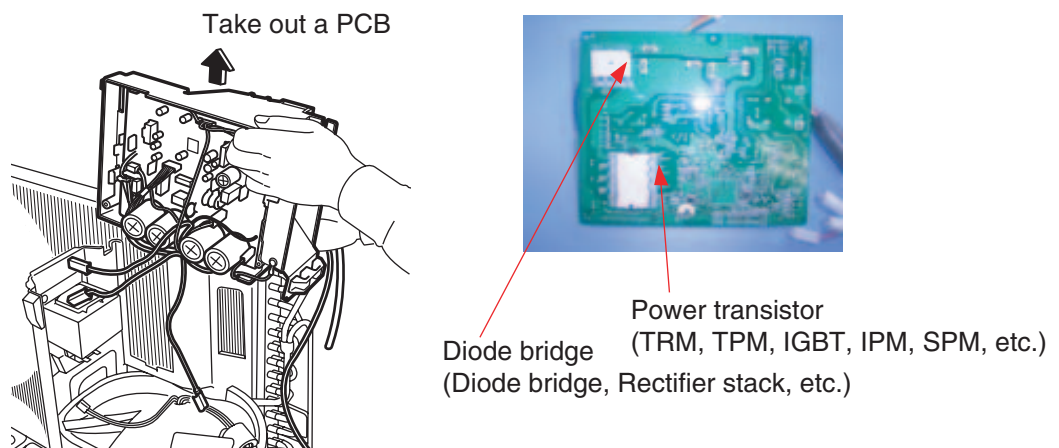

OK : Evenly applied silicon grease.



NG : Not evenly applied

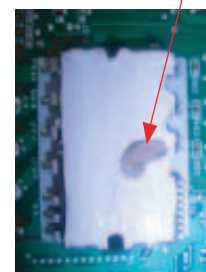

NG : Foreign object

(R9056)

Part 9

Appendix


1. Piping Diagrams.....	288
1.1 Indoor Unit.....	288
1.2 Outdoor Unit.....	292
2. Wiring Diagrams.....	294
2.1 Indoor Unit.....	294
2.2 Outdoor Unit.....	298

1. Piping Diagrams

1.1 Indoor Unit


1.1.1 Wall Mounted Type

FTXG25/35EV1BW(S)

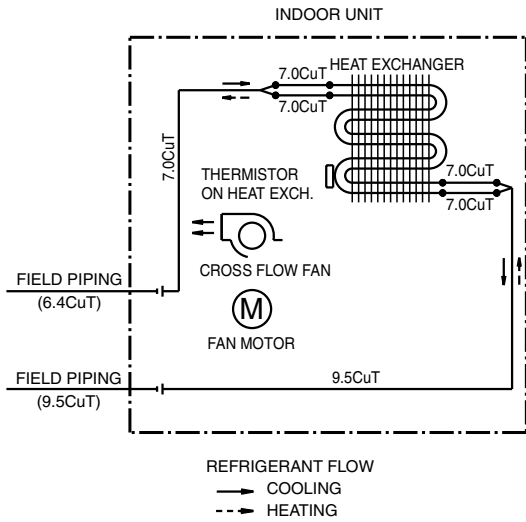


4D045301C

CTXG50EV1BW(S)

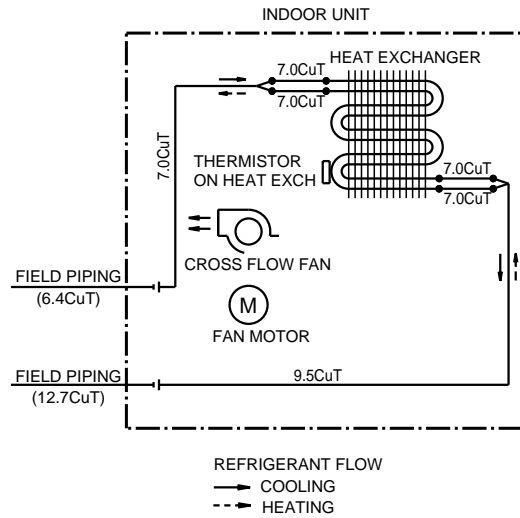


4D050924

FTXG25/35JV1BW(S)

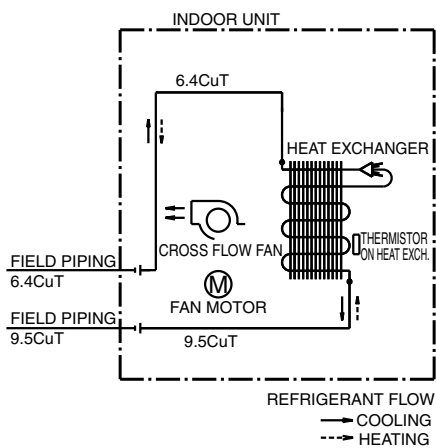

4D065855



CTXG50JV1BW(S)

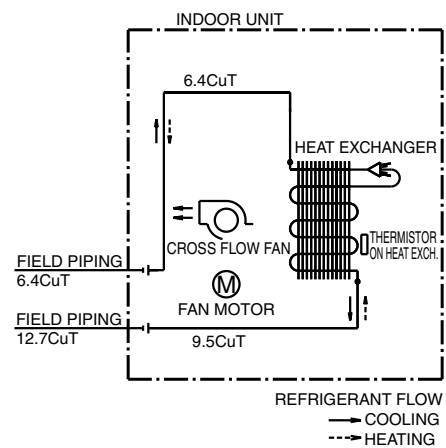

4D065856

FTXS20/25/35/42G2V1B

FTXS50G2V1B

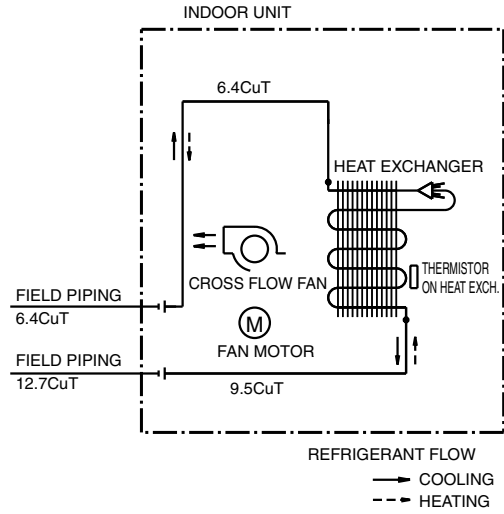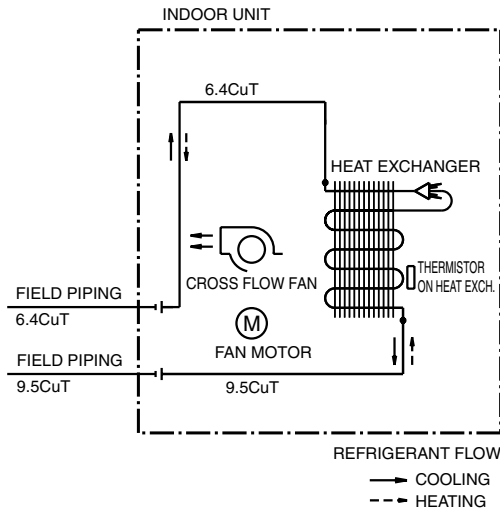



4D058897C

4D058898C

1.1.2 Floor Standing Type

FVXS25/35FV1B

FVXS50FV1B

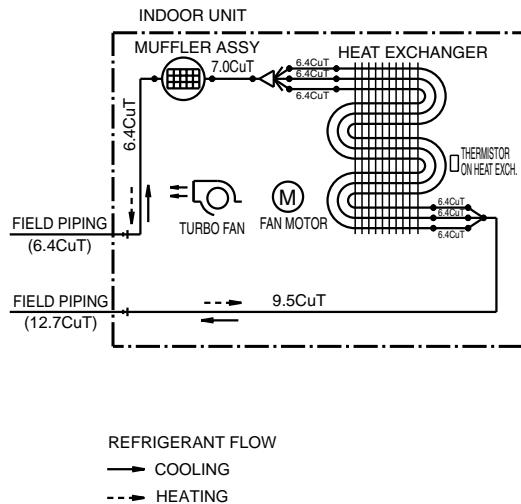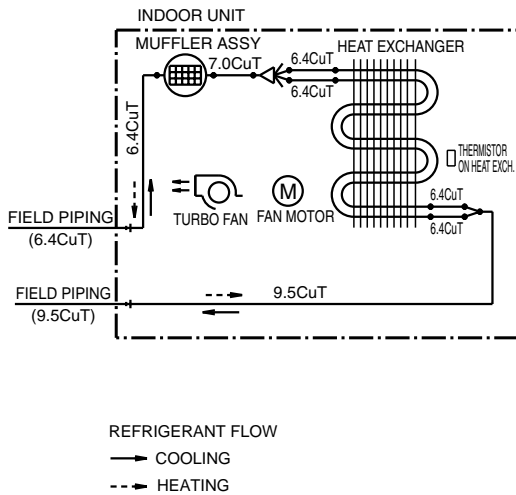


4D056137A

4D056138A


1.1.3 Floor / Ceiling Suspended Dual Type

FLKS25/35BAVMB

FLKS50BAVMB

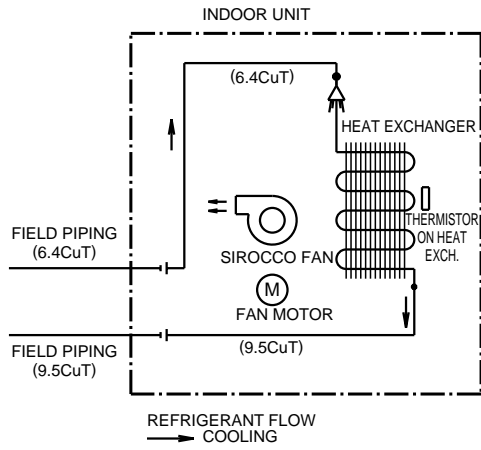


4D034012E

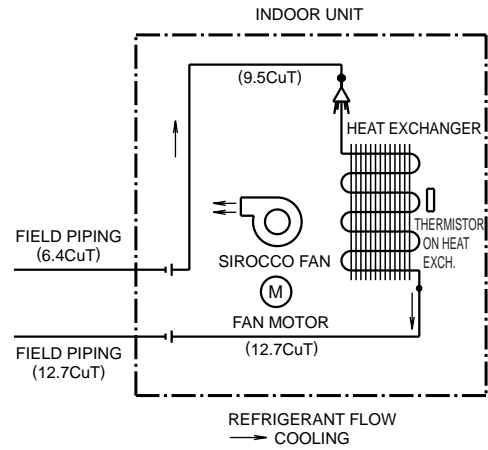


4D048723A

FLXS25/35BAVMB

FLXS50BAVMB

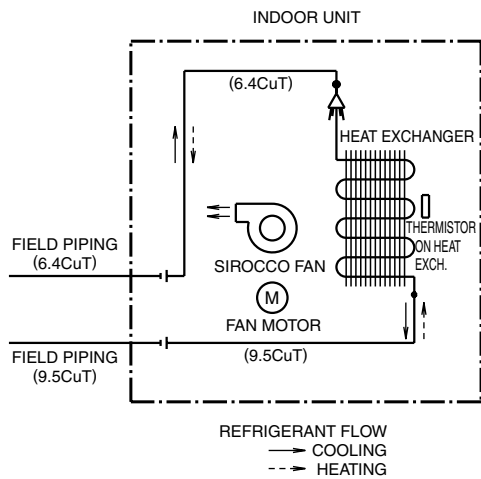


4D048722B

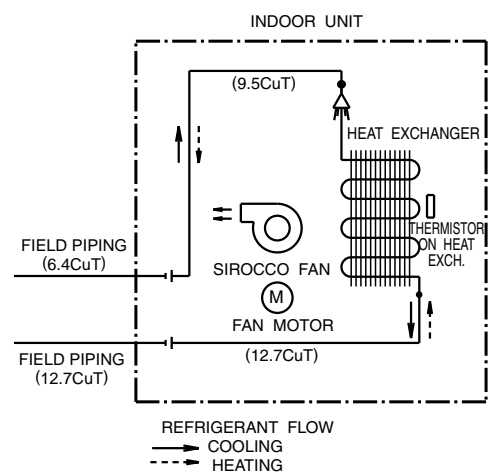

4D048724B

1.1.4 Duct Connected Type


FDK(X)S25/35EAVMB, FDK(X)S50CVMB

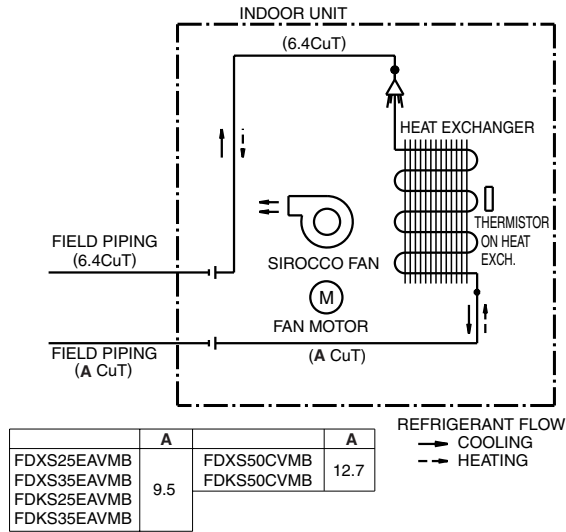

C: 4D045449L

1.1.5 Ceiling Mounted Cassette Type

FFQ25/35/50B8V1B

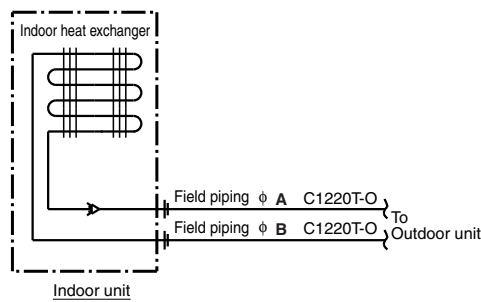


MODEL	A	B
FFQ25-35BV1B	6.4	9.5
FFQ50BV1B	6.4	12.7

C: 4D039335A


1.2 Outdoor Unit

1.2.1 Cooling Only

2MKS40GV1B, 2MKS40G2V1B

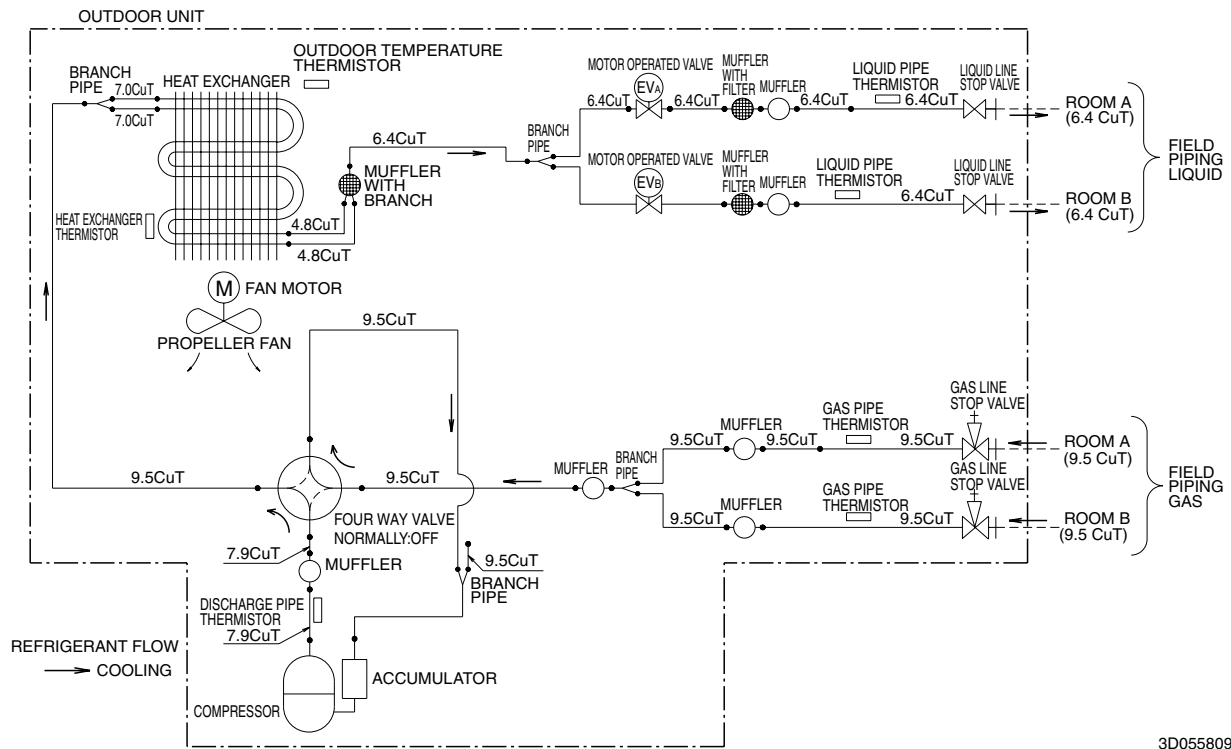


2MKS50GV1B, 2MKS50G2V1B

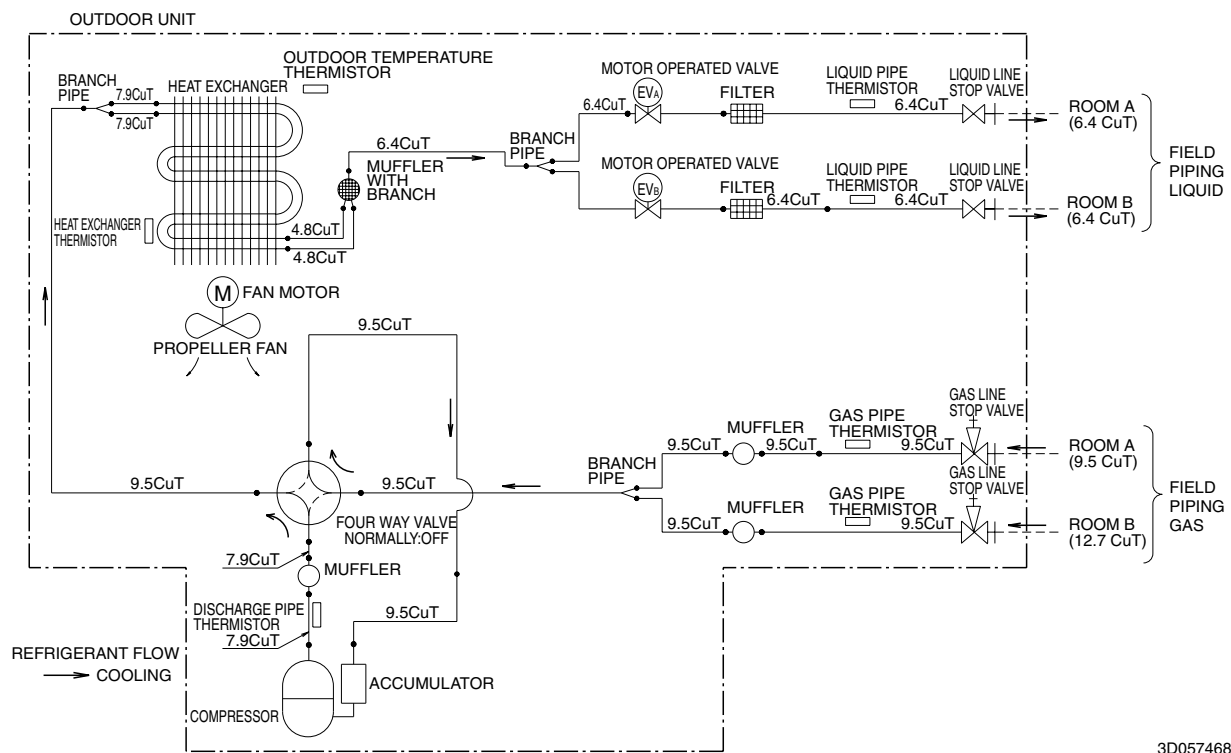


1.2.2 Heat Pump

2MXS40GV1B, 2MXS40G2V1B

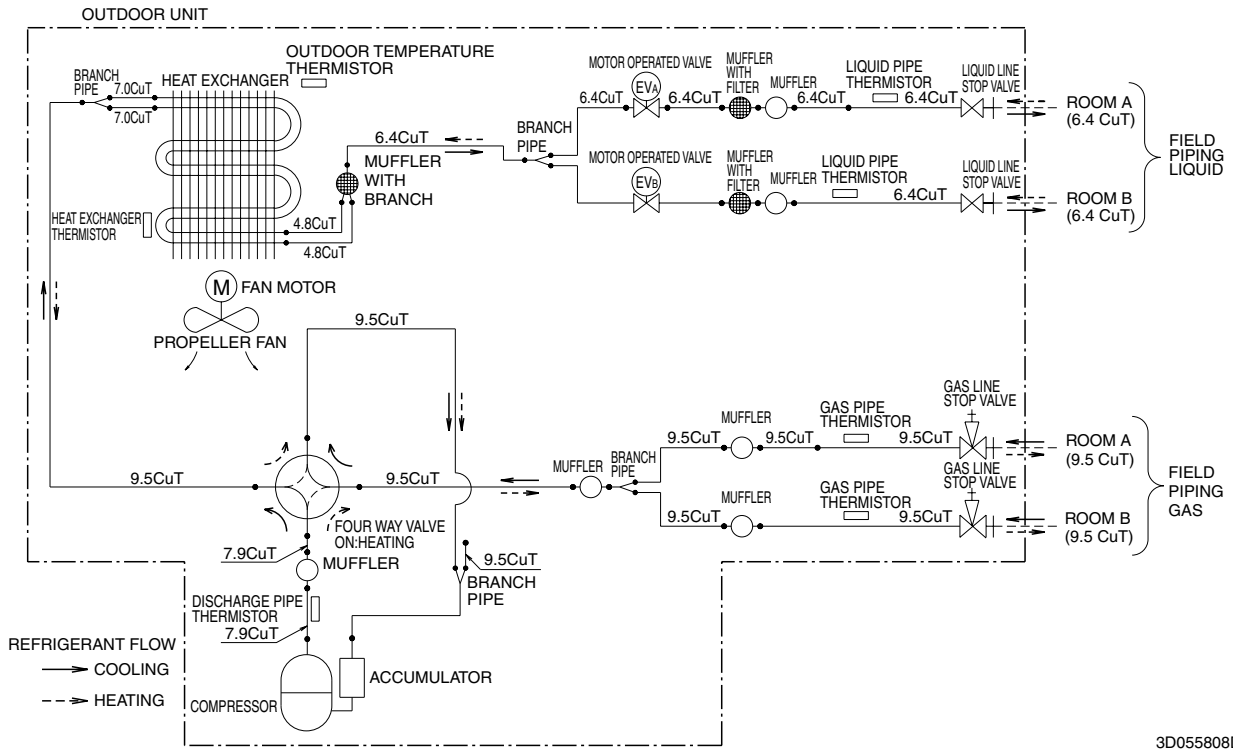

2MXS50GV1B, 2MXS50G2V1B

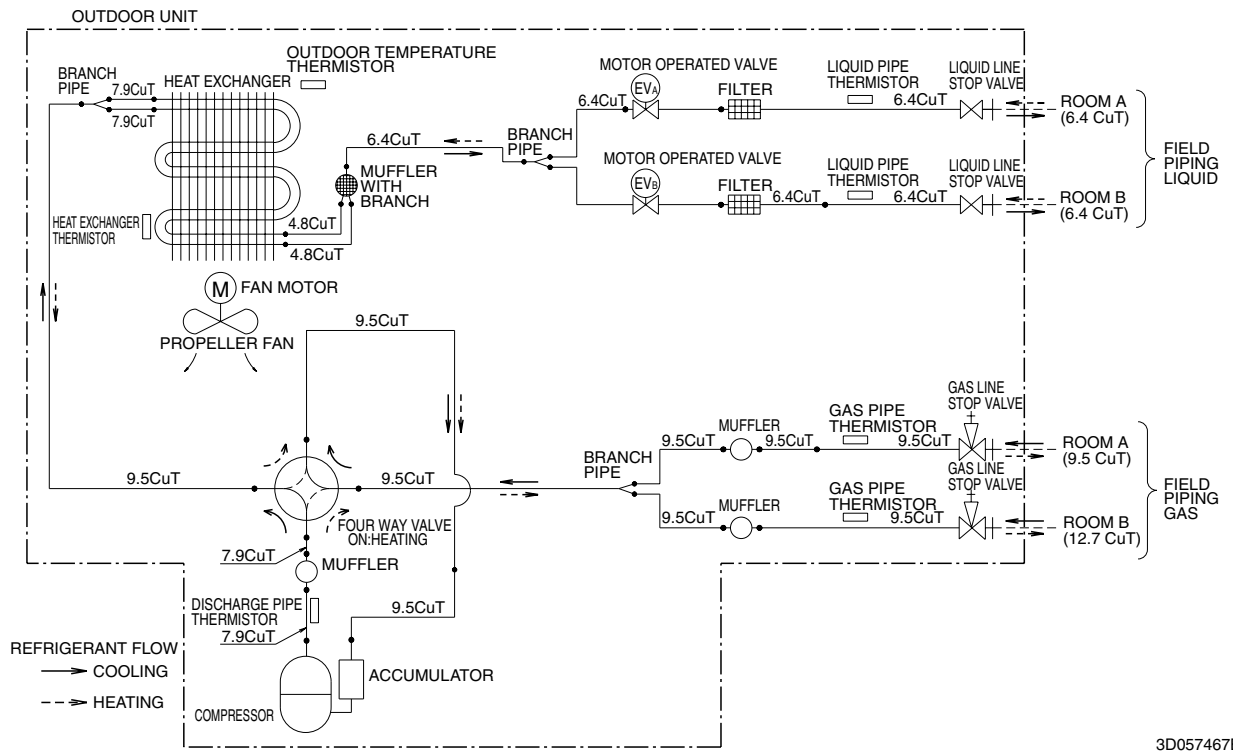


2. Wiring Diagrams

2.1 Indoor Unit


2.1.1 Wall Mounted Type

FTXG25/35EV1BW(S), CTXG50EV1BW(S)

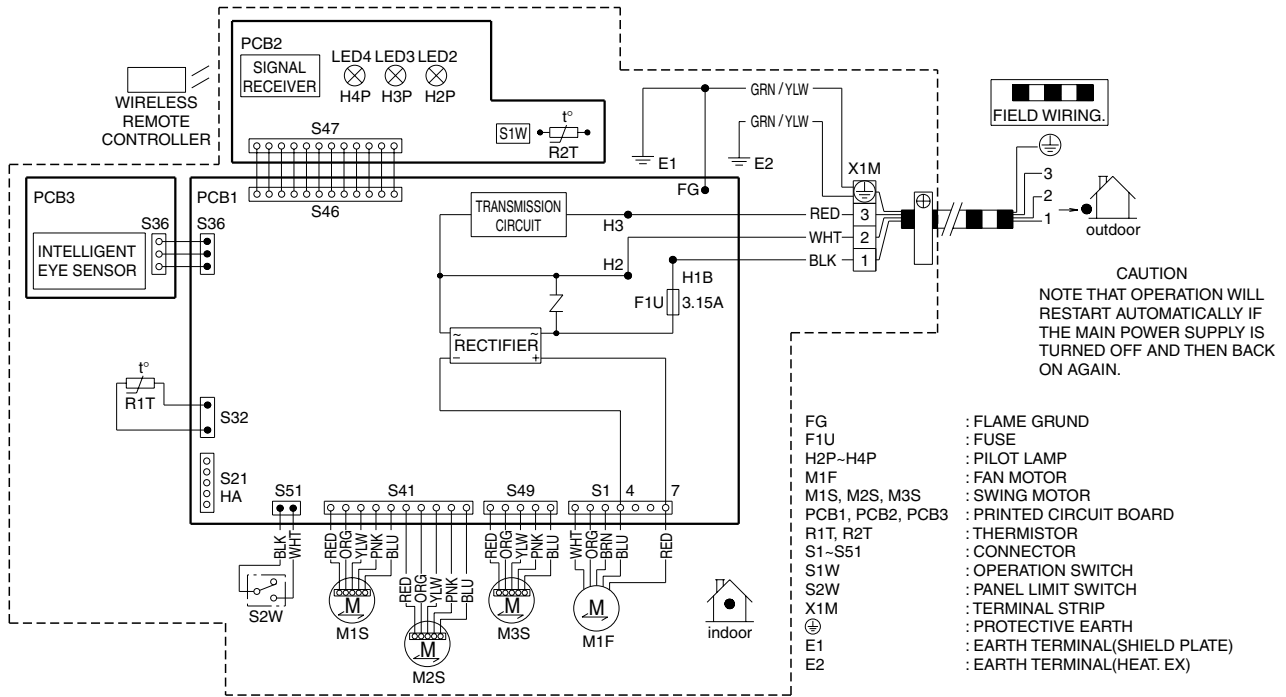


3D050493B

FTXG25/35JV1BW(S), CTXG50JV1BW(S)

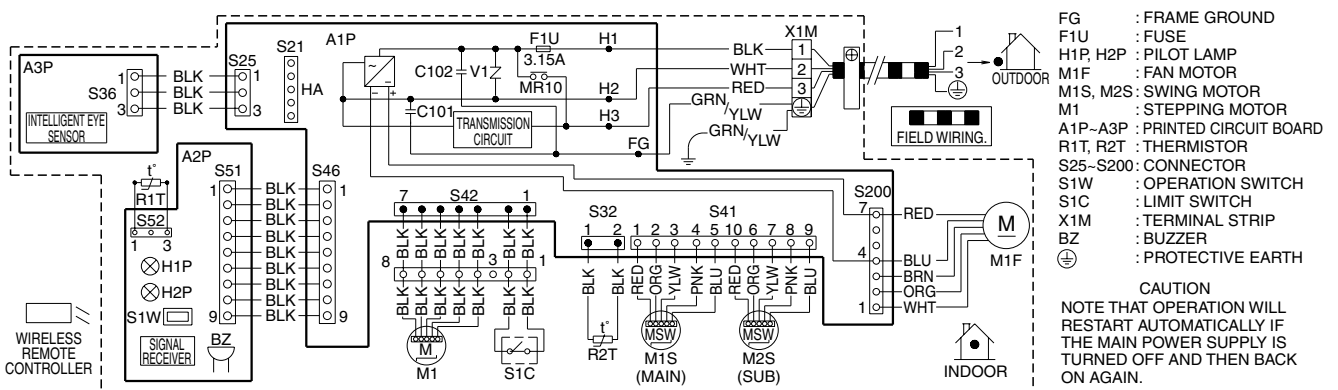

3D065507A


FTXS20/25/35/42/50G2V1B

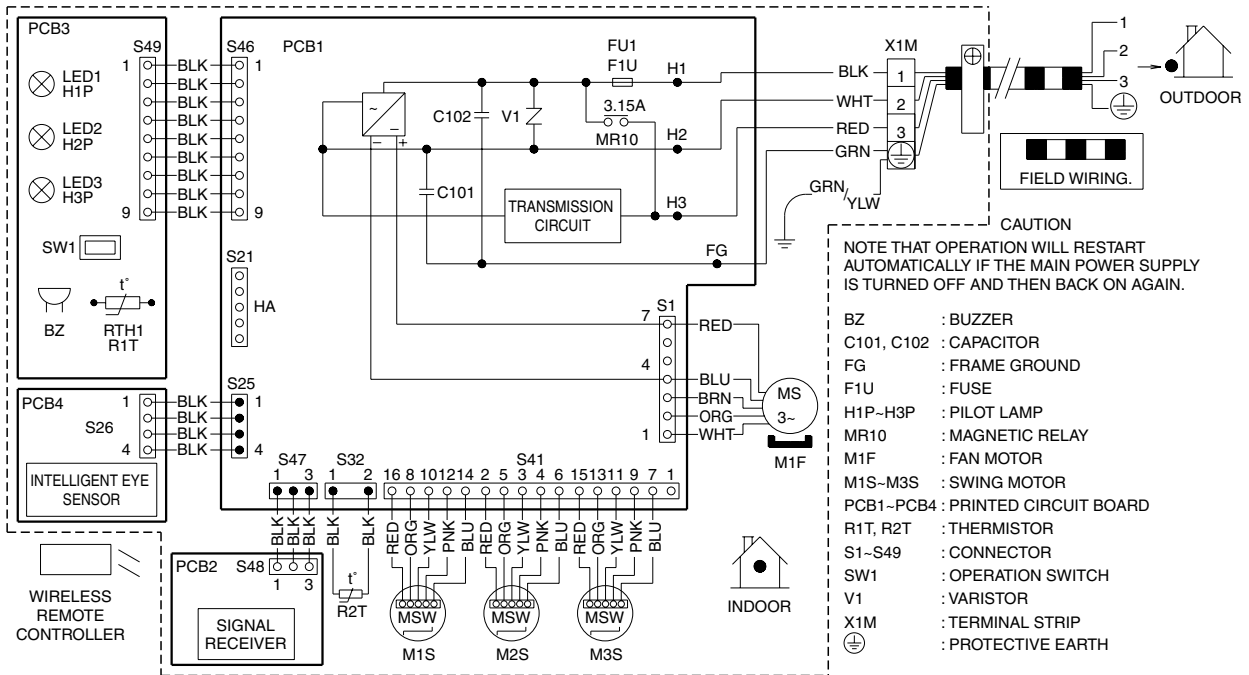

3D058246C

2.1.2 Floor Standing Type


FVXS25/35/50FV1B

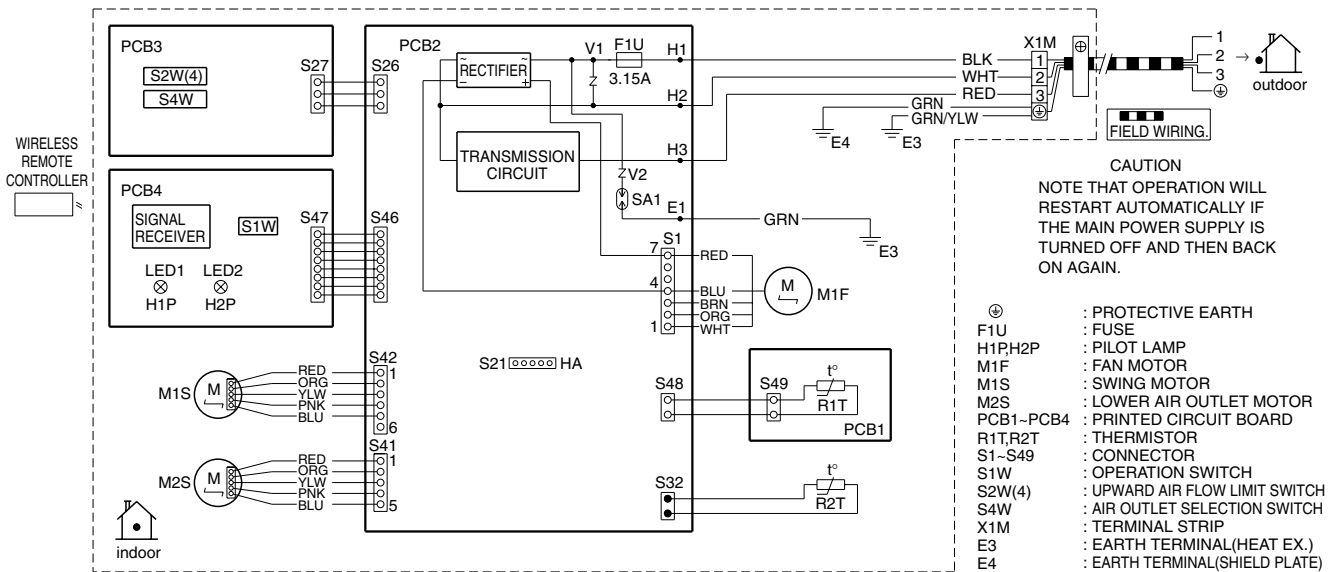

3D055953A

2.1.3 Floor / Ceiling Suspended Dual Type


FLK(X)S25/35/50BAVMB

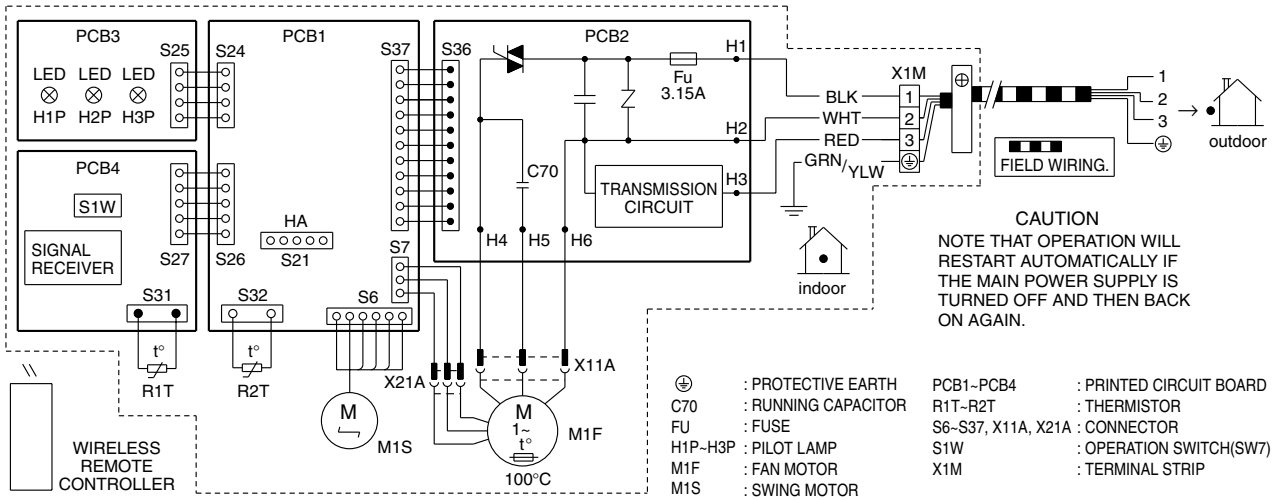

3D033909F

2.1.4 Duct Connected Type


FDK(X)S25/35EAVMB, FDK(X)S50CVMB

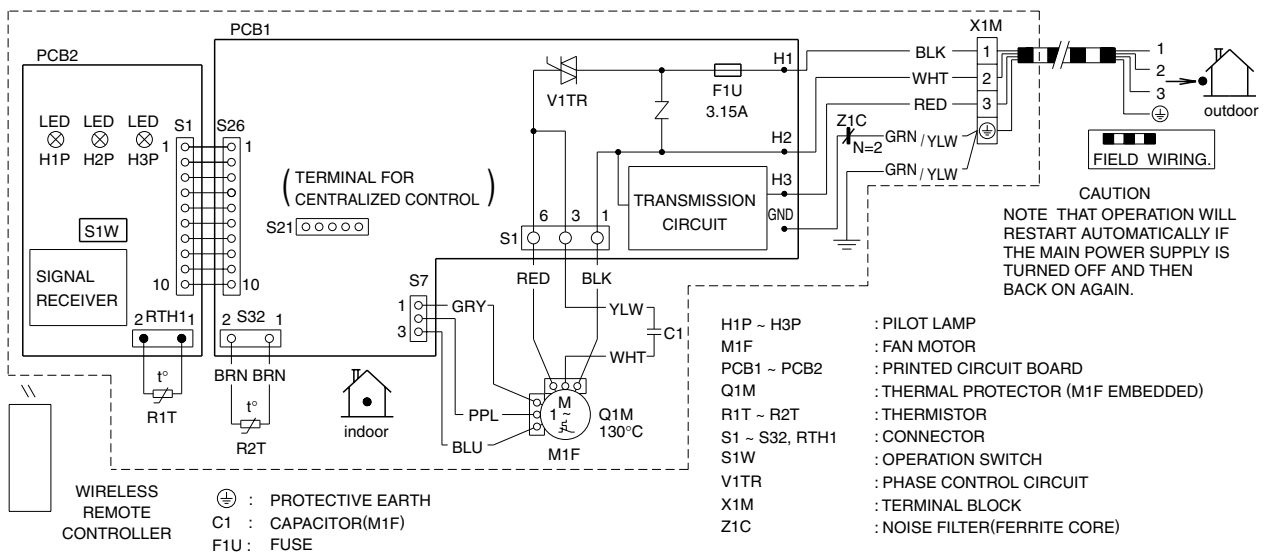

3D045012L

2.1.5 Ceiling Mounted Cassette Type

FFQ25/35/50B8V1B

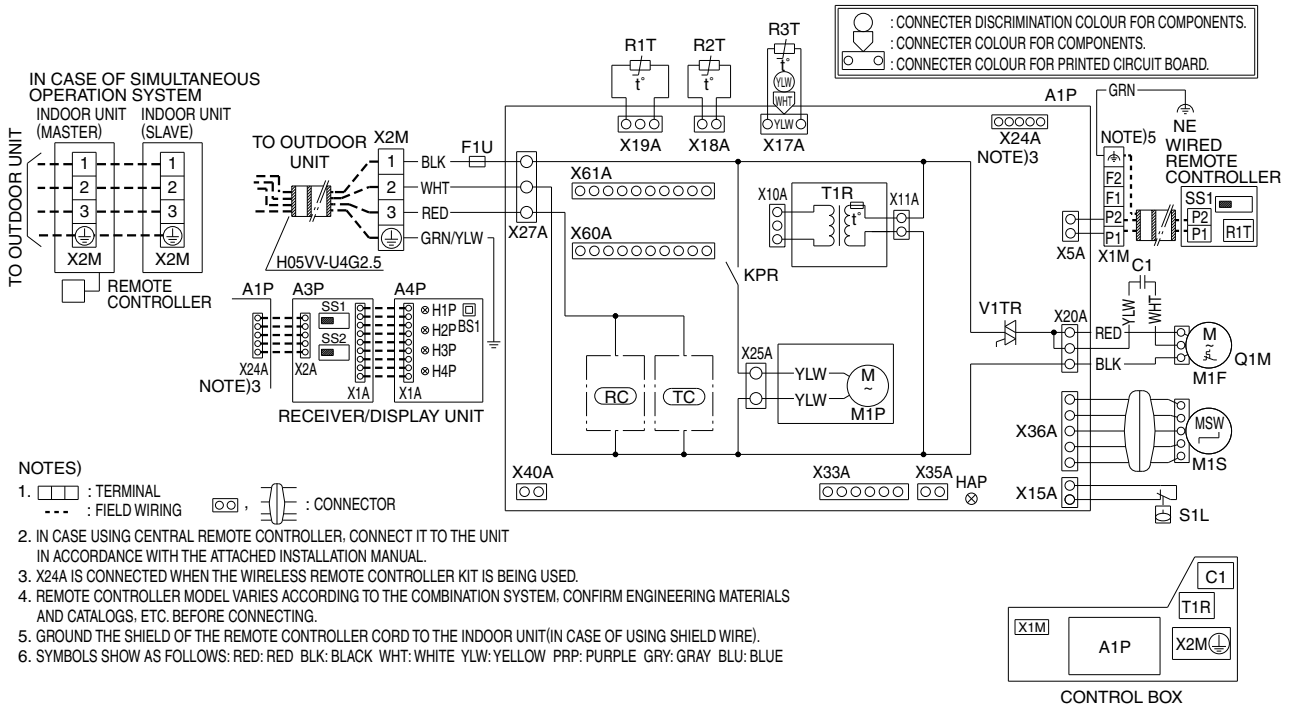


A1P	PRINTED CIRCUIT BOARD	BS1	PUSH BUTTON(ON/OFF)
C1	CAPACITOR(M1F)	H1P	LIGHT EMITTING DIODE (ON-RED)
F1U	FUSE(F5A 250V)	H2P	LIGHT EMITTING DIODE (TIMER-GREEN)
HAP	LIGHT EMITTING DIODE (SERVICE MONITOR GREEN)	H3P	LIGHT EMITTING DIODE (FILTER SIGN-RED)
KPR	MAGNETIC RELAY(M1P)	H4P	LIGHT EMITTING DIODE (DEFROST-ORANGE)
M1F	MOTOR(INDOOR FAN)	SS1	SELECTOR SWITCH (MAIN/SUB)
M1P	MOTOR(DRAIN PUMP)	SS2	SELECTOR SWITCH (WIRELESS ADDRESS SET)
M1S	MOTOR(SWING FLAP)	CONNECTOR FOR OPTIONAL PARTS	
Q1M	THERMO SWITCH(M1F EMBEDDED)	X33A	CONNECTOR (ADAPTOR FOR WIRING)
R1T	THERMISTOR(AIR)	X35A	CONNECTOR (GROUP CONTROL ADAPTOR)
R2T	THERMISTOR(COIL-1)	X40A	CONNECTOR (ON/OFF INPUT FROM OUTSIDE)
R3T	THERMISTOR(COIL-2)	X60A	CONNECTOR (INTERFACE ADAPTOR FOR SKYAIR SERIES)
S1L	FLOAT SWITCH	X61A	
T1R	TRANSFORMER(220-240V/22V)		
V1TR	PHASE CONTROL CIRCUIT		
X1M	TERMINAL STRIP		
X2M	TERMINAL STRIP		
(RC)	SIGNAL RECEIVER CIRCUIT		
(TC)	SIGNAL TRANSMISSION CIRCUIT		
WIRED REMOTE CONTROLLER			
R1T	THERMISTOR(AIR)		
SS1	SELECTOR SWITCH(MAIN/SUB)		
WIRELESS REMOTE CONTROLLER (RECEIVER/DISPLAY UNIT)			
A3P	PRINTED CIRCUIT BOARD		
A4P	PRINTED CIRCUIT BOARD		

3D038357B

2.2 Outdoor Unit


2.2.1 Cooling Only

2MKS40GV1B, 2MKS40G2V1B

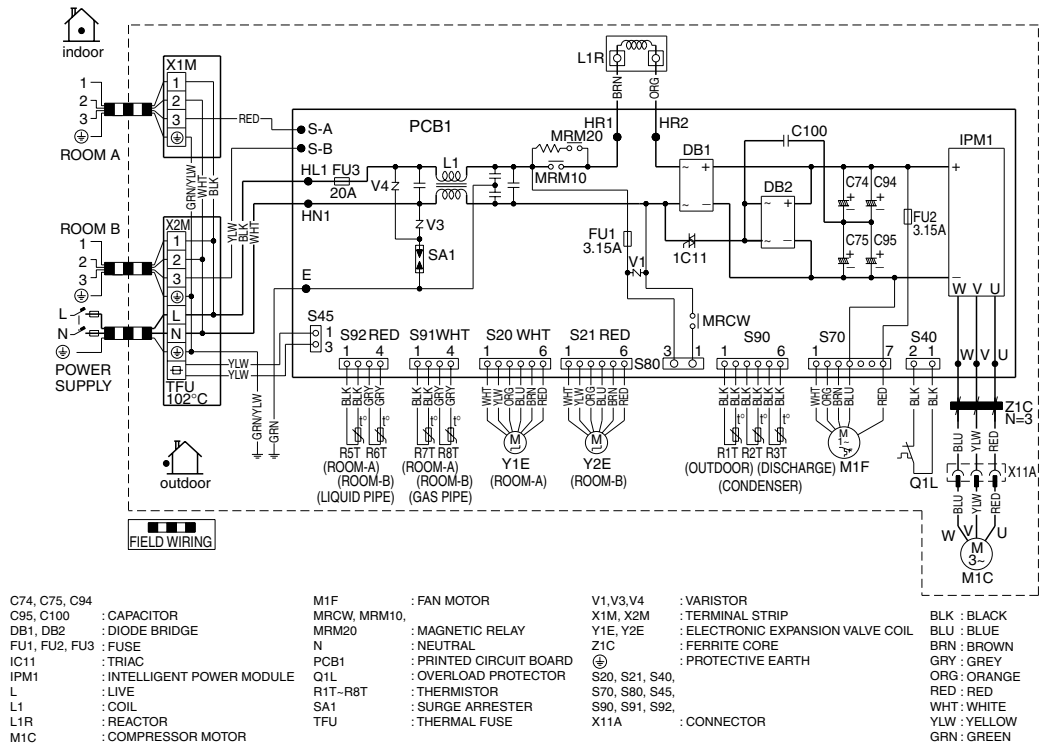

3D055671D


2MKS50GV1B, 2MKS50G2V1B

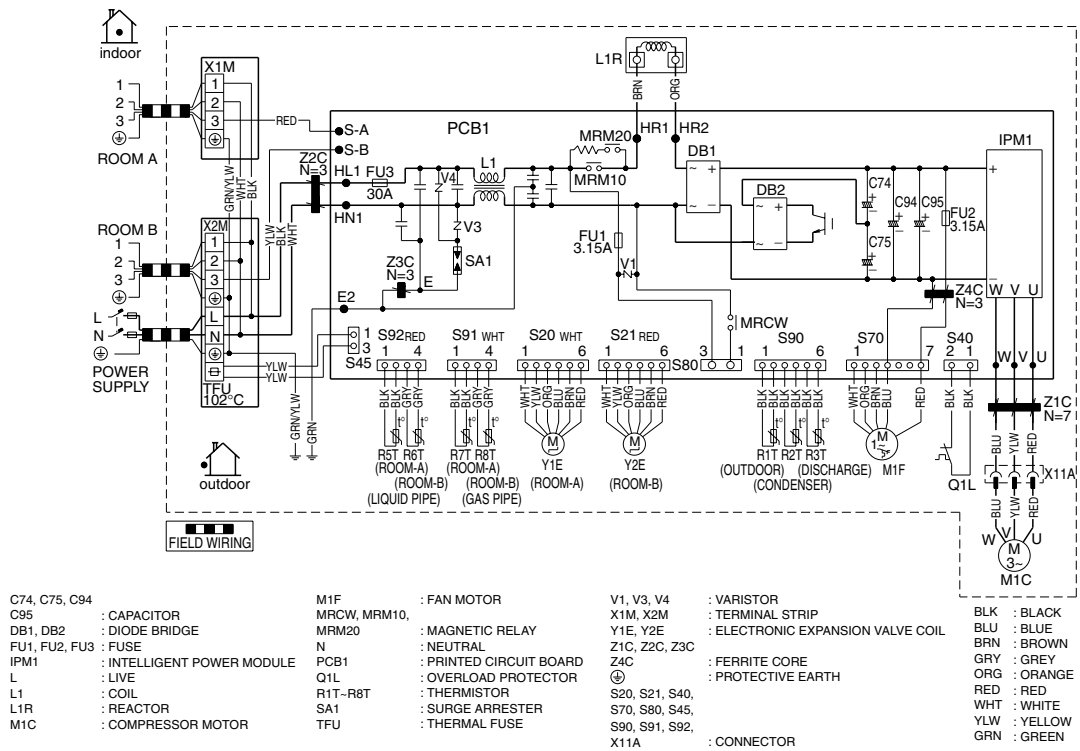

3D057046D


2.2.2 Heat Pump

2MXS40GV1B, 2MXS40G2V1B

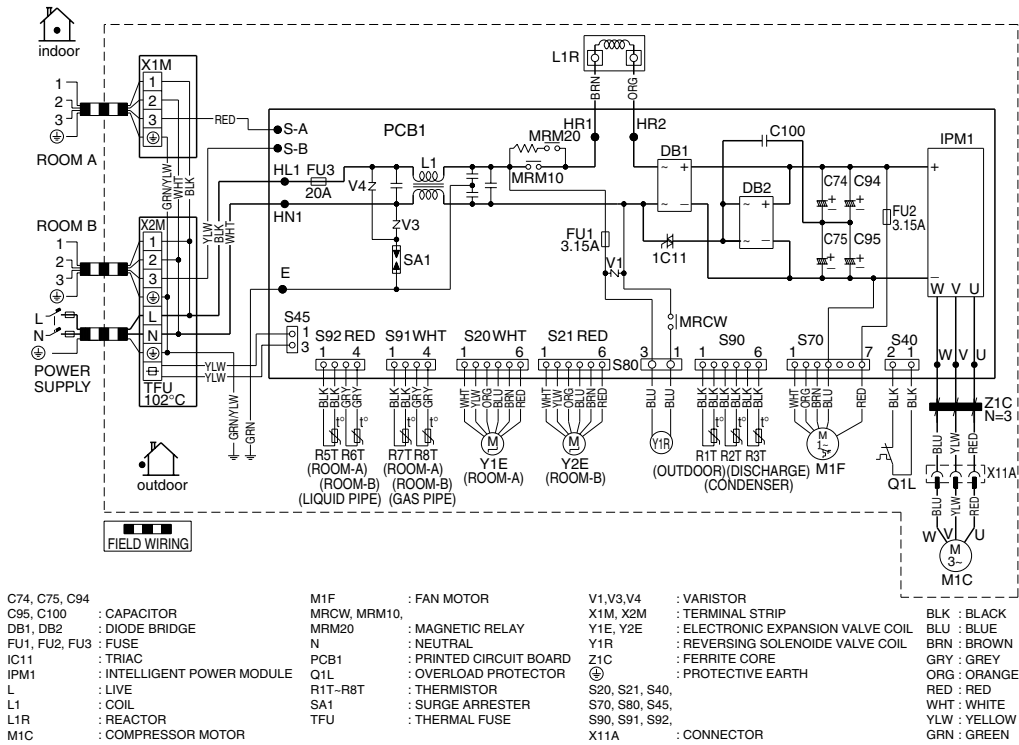


3D055486D

2MXS50GV1B, 2MXS50G2V1B

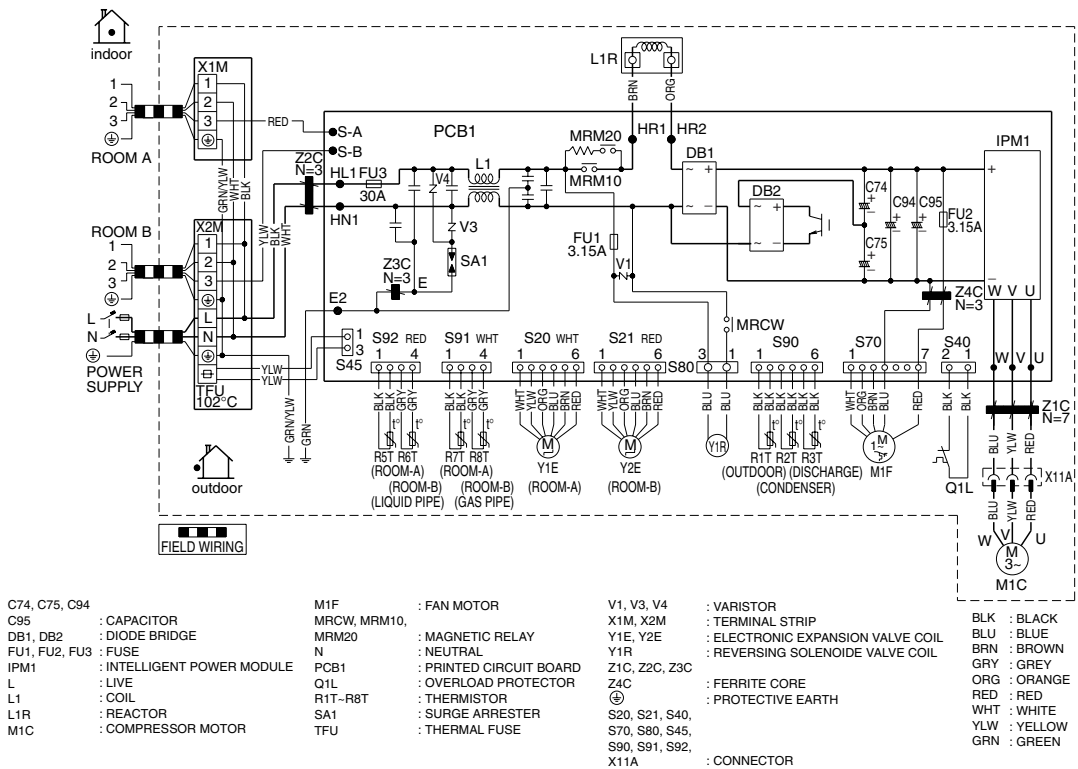

3D057045D

Revision History

Date	News No.	Contents
2010/11/9	M-10013	Correction of troubleshooting flowchart  for SkyAir models

Warning



- Daikin Industries, Ltd.'s products are manufactured for export to numerous countries throughout the world. Daikin Industries, Ltd. does not have control over which products are exported to and used in a particular country. Prior to purchase, please therefore confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107

Organization:
DAIKIN INDUSTRIES, LTD.
AIR CONDITIONING MANUFACTURING DIVISION

Scope of Registration:
THE DESIGN/DEVELOPMENT AND MANUFACTURE OF COMMERCIAL AIR CONDITIONING, HEATING, COOLING, REFRIGERATING EQUIPMENT, COMMERCIAL HEATING EQUIPMENT, RESIDENTIAL AIR CONDITIONING EQUIPMENT, HEAT RECLAIM VENTILATION, AIR CLEANING EQUIPMENT, MARINE TYPE CONTAINER REFRIGERATION UNITS, COMPRESSORS AND VALVES.



JQA-1452

Organization:
DAIKIN INDUSTRIES
(THAILAND) LTD.

Scope of Registration:
THE DESIGN/DEVELOPMENT AND MANUFACTURE OF AIR CONDITIONERS AND THE COMPONENTS INCLUDING COMPRESSORS USED FOR THEM



EC99J2044

All of the Daikin Group's business facilities and subsidiaries in Japan are certified under the ISO 14001 international standard for environment management.

Dealer

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved