

DAIKIN

SiBE341001_D

R-410A

Service Manual

VRV III-Q

Heat Pump / Heat Recovery R-410A 50Hz

RQYQ140/180PY1, RQCYQ280~540PY1
RQEQ140~212PY1, RQCEQ280~848PY1



VRV III-Q Heat Pump / Heat Recovery R-410A 50Hz

1.	Introduction	iv
1.1	Safety Cautions	iv
1.2	Used Icons	viii
1.3	Preface	ix

Part 1 General Information 1

1.	Model Names of Outdoor/BS Unit.....	2
1.1	Outdoor Unit	2
1.2	BS Unit	2
2.	External Appearance.....	3
2.1	Outdoor Unit	3
2.2	BS Units	3
3.	Combination of Outdoor Units.....	4
4.	Model Selection.....	4

Part 2 Specifications 5

1.	Specifications	6
1.1	Outdoor Units	6
1.2	BS Units	15

Part 3 Refrigerant Circuit 17

1.	Refrigerant Circuit	18
1.1	RQYQ140 / 180PY1, RQEQ140 ~ 212PY1	18
1.2	BS Unit	20
2.	Functional Parts Layout	22
2.1	RQYQ140 · 180PY1, RQEQ140 ~ 212PY1.....	22
3.	Refrigerant Flow for Each Operation Mode.....	23
3.1	RQYQ140 · 180PY1	23
3.2	RQCEQ280 ~ 848PY1	26

Part 4 Function and Control..... 33

1.	Function General.....	34
1.1	Operation Mode.....	34
1.2	Symbol	35
2.	Detailed Control Functions.....	36
2.1	Stop Operation	36
2.2	Standby	36
2.3	Rotation Control	36

2.4	Startup Control	38
2.5	Normal Operation	39
2.6	Protection Control.....	47
2.7	Special Control.....	52

Part 5 Field Setting 60

1.	Test Operation	61
1.1	Procedure and Outline	61
1.2	Check Operation	63
1.3	Checking in Normal Operation	66
2.	Field Setting from Outdoor Unit.....	67
2.1	List of Field Setting Items	67
2.2	Setting by DIP Switches	69
2.3	Setting by BS Buttons	70
2.4	Setting Mode 1	71
2.5	Setting Mode 2	72
2.6	Monitor Mode	76
2.7	Detailed Explanation of Setting Modes	78

Part 6 Service Diagnosis..... 90

1.	Symptom-based Troubleshooting	92
2.	Troubleshooting by Remote Controller	95
2.1	The INSPECTION / TEST Button.....	95
2.2	Procedure of Self-diagnosis by Remote Controller	95
2.3	Error Codes and Description	97
2.4	Error Code Indication by Outdoor Unit PCB.....	98
2.5	PCB Abnormality	102
2.6	Earth Leakage by Leak Detection PCB Assy	103
2.7	Actuation of High Pressure Switch (S1PH) or Pressure Switch (S2P)	105
2.8	Actuation of Low Pressure Sensor	107
2.9	Inverter Compressor Motor Lock.....	109
2.10	Outdoor Unit Fan Motor Abnormality.....	111
2.11	Electronic Expansion Valve Coil Abnormality (Y1E~Y3E).....	114
2.12	Abnormal Discharge Pipe Temperature	116
2.13	Humidity Alarm	118
2.14	BS Unit Electronic Expansion Valve Abnormality.....	120
2.15	Abnormal Outdoor Unit Fan Motor Signal	122
2.16	Thermistor System Abnormality	124
2.17	High Pressure Sensor Abnormality	125
2.18	Low Pressure Sensor Abnormality	127
2.19	Inverter PCB Abnormality	129
2.20	Inverter Radiation Fin Temperature Rise	131
2.21	Momentary Overcurrent of Inverter Compressor.....	132
2.22	Overcurrent Abnormal of Inverter Compressor	134
2.23	Inverter Compressor Starting Abnormality	136
2.24	Transmission Error (between Inverter and Main PCB).....	138
2.25	Inverter Over-Ripple Protection.....	140
2.26	Inverter Radiation Fin Thermistor Abnormality.....	142
2.27	Field Setting Abnormality after Replacing Main PCB or Combination Error of PCB.....	143

2.28 Refrigerant Shortage	144
2.29 Reverse Phase, Open Phase	146
2.30 Power Supply Insufficient or Instantaneous Error	147
2.31 Check Operation is not Executed	150
2.32 Transmission Error (between Indoor and Outdoor Units)	151
2.33 Transmission Error (between Remote Controller and Indoor Unit)	154
2.34 Transmission Error (Across Outdoor Units)	155
2.35 Transmission Error (between Main and Sub Remote Controllers)	162
2.36 Transmission Error (between Indoor and Outdoor Units in the Same System)	163
2.37 Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller	164
2.38 Address Duplication of Centralized Control Equipment	172
2.39 Transmission Error (between Centralized Control Equipment and Indoor Unit)	173
2.40 System is not Set yet	176
2.41 System Error, Refrigerant System Address Undefined	177
2.42 Check	179





Part 7 Appendix..... 195

1. Piping Diagrams	196
1.1 Outdoor Unit	196
1.2 BS Unit	197
2. Wiring Diagrams for Reference	200
2.1 Outdoor Unit	200
2.2 BS Unit	201
3. Example of Connection (R-410A Type)	204








1. Introduction




1.1 Safety Cautions









Cautions and Warnings

- Be sure to read the following safety cautions before conducting repair work.
- The caution items are classified into “ **Warning**” and “ **Caution**”. The “ **Warning**” items are especially important since they can lead to death or serious injury if they are not followed closely. The “ **Caution**” items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.
- About the pictograms
 - △ This symbol indicates the item for which caution must be exercised.
The pictogram shows the item to which attention must be paid.
 - This symbol indicates the prohibited action.
The prohibited item or action is shown in the illustration or near the symbol.
 - This symbol indicates the action that must be taken, or the instruction.
The instruction is shown in the illustration or near the symbol.
- After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.












1.1.1 Cautions Regarding Safety of Workers






 Warning	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for repair. Working on the equipment that is connected to the power supply may cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not touch any electrically charged sections of the equipment.	
If the refrigerant gas is discharged during the repair work, do not touch the discharged refrigerant gas. The refrigerant gas may cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, evacuate the refrigerant gas completely at a well-ventilated place first. If there is a gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it may cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas may generate toxic gases when it contacts flames.	
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. Be sure to discharge the capacitor completely before conducting repair work. A charged capacitor may cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug. Plugging or unplugging the power cable plug to operate the equipment may cause an electrical shock or fire.	







 Warning	
Be sure to wear a safety helmet, gloves, and a safety belt when working at a high place (more than 2 m). Insufficient safety measures may cause a fall accident.	
In case of R-410A refrigerant models, be sure to use pipes, flare nuts and tools for the exclusive use of the R-410A refrigerant. The use of materials for R-22 refrigerant models may cause a serious accident such as a damage of refrigerant cycle as well as an equipment failure.	






 Caution	
Do not repair the electrical components with wet hands. Working on the equipment with wet hands may cause an electrical shock.	
Do not clean the air conditioner by splashing water. Washing the unit with water may cause an electrical shock.	
Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn OFF the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.	
Be sure to conduct repair work with appropriate tools. The use of inappropriate tools may cause injury.	
Be sure to check that the refrigerating cycle section has cooled down enough before conducting repair work. Working on the unit when the refrigerating cycle section is hot may cause burns.	
Use the welder in a well-ventilated place. Using the welder in an enclosed room may cause oxygen deficiency.	

1.1.2 Cautions Regarding Safety of Users

 Warning	
<p>Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools may cause an electrical shock, excessive heat generation or fire.</p>	
<p>If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Be sure to use an exclusive power circuit for the equipment, and follow the local technical standards related to the electrical equipment, the internal wiring regulations, and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work may cause an electrical shock or fire.</p>	
<p>Be sure to use the specified cable for wiring between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections may cause excessive heat generation or fire.</p>	
<p>When wiring between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section may cause an electrical shock, excessive heat generation or fire.</p>	
<p>Do not damage or modify the power cable. Damaged or modified power cable may cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable may damage the cable.</p>	
<p>Do not mix air or gas other than the specified refrigerant (R-410A / R-22) in the refrigerant system. If air enters the refrigerating system, an excessively high pressure results, causing equipment damage and injury.</p>	
<p>If the refrigerant gas leaks, be sure to locate the leaking point and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leaking point cannot be located and the repair work must be stopped, be sure to perform pump down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it may generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.</p>	
<p>When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength and if the installation work is not conducted securely, the equipment may fall and cause injury.</p>	





 Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet securely. If the plug has dust or loose connection, it may cause an electrical shock or fire.	
Be sure to install the product correctly by using the provided standard installation frame. Incorrect use of the installation frame and improper installation may cause the equipment to fall, resulting in injury.	For unitary type only 
Be sure to install the product securely in the installation frame mounted on the window frame. If the unit is not securely mounted, it may fall and cause injury.	For unitary type only 
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If the combustible gas leaks and remains around the unit, it may cause a fire.	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the soldered or crimped terminals are secure. Improper installation and connections may cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame may cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding may cause an electrical shock.	

 Caution	
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 MΩ or higher. Defective insulation may cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Defective drainage may cause the water to enter the room and wet the furniture and floor.	
Do not tilt the unit when removing it. The water inside the unit may spill and wet the furniture and floor.	
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water may enter the room and wet the furniture and floor.	For unitary type only 

1.2 Used Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

Icon	Type of Information	Description
 Note:	Note	A “note” provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Caution	Caution	A “caution” is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or has to restart (part of) a procedure.
 Warning	Warning	A “warning” is used when there is danger of personal injury.
	Reference	A “reference” guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

1.3 Preface

Thank you for your continued patronage of Daikin products.

This is the new service manual for Daikin's Year 2011 VRVIII-Q series. Daikin offers a wide range of models to respond to building and office air conditioning needs. We are confident that customers will be able to find the models that best suit their needs.

This service manual contains information regarding the servicing of VRVIII-Q series R-410A Heat Pump, Heat Recovery System.

October, 2011
After Sales Service Division

Part 1

General Information

1. Model Names of Outdoor/BS Unit.....	2
1.1 Outdoor Unit.....	2
1.2 BS Unit.....	2
2. External Appearance.....	3
2.1 Outdoor Unit.....	3
2.2 BS Units.....	3
3. Combination of Outdoor Units.....	4
4. Model Selection.....	4

1. Model Names of Outdoor/BS Unit

1.1 Outdoor Unit

Series	Model Name				Power Supply
Heat Pump	RQYQ	140P	180P	-	Y1
Heat Recovery	RQEQ	140P	180P	212P	

Y1: 3 ϕ , 380~415V, 50Hz





1.2 BS Unit

Type	Model Name				Power Supply
Heat Recovery Series	BSVQ	100P	160P	250P	V1
	BSV	4Q100P	6Q100P	-	


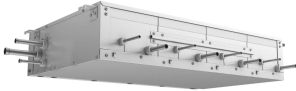
V1: 1 ϕ , 220~240V, 50Hz

2. External Appearance

2.1 Outdoor Unit

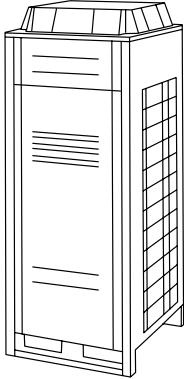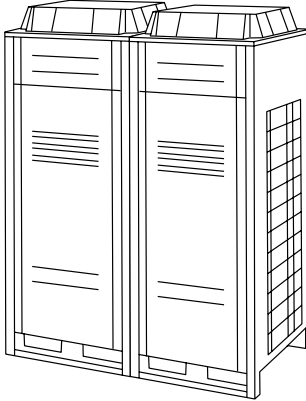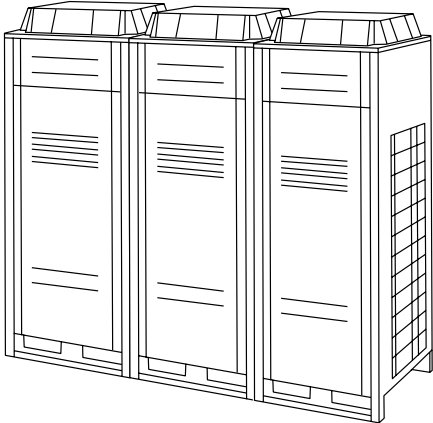H/P	RQYQ140/180PY1	H/P	RQCYQ280/360PY1
H/R	RREQ140/180/212PY1	H/R	RQCEQ280/360PY1
 <p>5/6.5/7.5 HP</p>		 <p>10/13 HP</p>	
H/P	RQCYQ460/500/540PY1	H/R	RQCEQ712/744/816/848PY1
H/R	RQCEQ460/500/540/636PY1		
 <p>16/18/20/22 HP</p>		 <p>24/26/28/30 HP</p>	

2.2 BS Units

<p>BS Units</p> <p>BSVQ100P BSVQ160P BSVQ250P</p> 	<p>Centralized BS Units</p> <p>BSV4Q100P BSV6Q100P</p> 
---	--

3. Combination of Outdoor Units

Heat Pump Series

System Capacity	Number of Units	RQYQ140PY1	RQYQ180PY1	Outdoor Unit Multi Connection Piping Kit (Option)
5HP	1	●		—
6.5HP	1		●	
10HP	2	●●		BHFP22P36C
13HP	2		●●	
16HP	3	●●	●	BHFP22P54C
18HP	3	●	●●	
20HP	3		●●●	

Heat Recovery Series

System Capacity	Number of Units	RREQ140PY1	RREQ180PY1	RREQ212PY1	Outdoor Unit Multi Connection Piping Kit (Option)
10HP	2	●●			BHFP26P36C
13HP	2		●●		
16HP	3	●●	●		BHFP26P63C
18HP	3	●	●●		
20HP	3		●●●		
22HP	3			●●●	
24HP	4	●	●●	●	BHFP26P84C
26HP	4	●	●	●●	
28HP	4		●	●●●	
30HP	4			●●●●	

4. Model Selection

Connectable indoor units number and capacity

Heat Pump Series

HP	5HP	6.5HP	10HP	13HP	16HP	18HP	20HP
System name	RQYQ140PY1	RQYQ180PY1	RQCYQ280PY1	RQCYQ360PY1	RQCYQ460PY1	RQCYQ500PY1	RQCYQ540PY1
Outdoor unit 1	RQYQ140PY1	RQYQ180PY1	RQYQ140PY1	RQYQ180PY1	RQYQ140PY1	RQYQ140PY1	RQYQ180PY1
Outdoor unit 2	—	—	RQYQ140PY1	RQYQ180PY1	RQYQ140PY1	RQYQ180PY1	RQYQ180PY1
Outdoor unit 3	—	—	—	—	RQYQ180PY1	RQYQ180PY1	RQYQ180PY1
Total number of connectable indoor units	8	10	16	20	26	29	33
Total capacity of connectable indoor units (kW)	7.0 ~ 18.2	9.0 ~ 23.4	14.0 ~ 36.4	17.8 ~ 46.2	22.5 ~ 58.5	25.0 ~ 65.0	28.0 ~ 72.8

Heat Recovery Series

HP	10HP	13HP	16HP	18HP	20HP	22HP	24HP	26HP	28HP	30HP
System name	RQCEQ 280PY1	RQCEQ 360PY1	RQCEQ 460PY1	RQCEQ 500PY1	RQCEQ 540PY1	RQCEQ 636PY1	RQCEQ 712PY1	RQCEQ 744PY1	RQCEQ 816PY1	RQCEQ 848PY1
Outdoor unit 1	RREQ 140PY1	RREQ 180PY1	RREQ 180PY1	RREQ 180PY1	RREQ 180PY1	RREQ 212PY1	RREQ 212PY1	RREQ 212PY1	RREQ 212PY1	RREQ 212PY1
Outdoor unit 2	RREQ 140PY1	RREQ 180PY1	RREQ 140PY1	RREQ 180PY1	RREQ 180PY1	RREQ 212PY1	RREQ 180PY1	RREQ 212PY1	RREQ 212PY1	RREQ 212PY1
Outdoor unit 3	—	—	RREQ 140PY1	RREQ 140PY1	RREQ 180PY1	RREQ 212PY1	RREQ 180PY1	RREQ 180PY1	RREQ 212PY1	RREQ 212PY1
Outdoor unit 4	—	—	—	—	—	—	RREQ 140PY1	RREQ 140PY1	RREQ 180PY1	RREQ 212PY1
Total number of connectable indoor units	16	20	26	29	33	36	40	43	47	50
Total capacity of connectable indoor units (kW)	14.0 ~ 36.4	18.0 ~ 46.2	23.0 ~ 59.8	25.0 ~ 65.0	27.0 ~ 70.2	31.8 ~ 82.7	35.6 ~ 92.6	37.2 ~ 96.7	40.8 ~ 106	42.4 ~ 110

Part 2 Specifications

1. Specifications	6
1.1 Outdoor Units	6
1.2 BS Units	15

1. Specifications

1.1 Outdoor Units

Heat Pump Series <RQ(C)YQ-P>

Model Name		RQYQ140PY1	RQYQ180PY1
★1 Cooling Capacity	kcal / h	12,000	15,500
	Btu / h	47,800	61,400
	kW	14.0	18.0
★2 Heating Capacity	kcal / h	13,800	17,200
	Btu / h	54,600	68,200
	kW	16.0	20.0
Casing Color		Ivory White 5Y7.5/1	Ivory White 5Y7.5/1
Dimensions: (HxWxD)		mm 1680x635x765	1680x635x765
Heat Exchanger		Cross Fin Coil	Cross Fin Coil
Comp.	Type		Hermetically Sealed Scroll Type
	Piston Displacement	m ³ /h	13.34
	Number of Revolutions	r.p.m	6,300
	Motor Output×Number of Units	kW	2.8×1
	Starting Method		Soft Start
Fan	Type		Propellor Fan
	Motor Output	kW	0.35×1
	Airflow Rate	m ³ /min	95
	Drive		Direct Drive
Connecting Pipes	Liquid Pipe		φ9.5 C1220T (Brazing Connection)
	Gas Pipe		φ15.9 C1220T (Brazing Connection)
Mass (Weight)		kg 175	175
Safety Devices		High Pressure Switch, Fan Driver Overload Protector, Overcurrent Relay, Inverter Overload Protector	High Pressure Switch, Fan Driver Overload Protector, Overcurrent Relay, Inverter Overload Protector
Defrost Method		Deicer	Deicer
Capacity Control		% 25~100	21~100
Refrigerant	Refrigerant Name		R-410A
	Charge	kg	11.1
	Control		Electronic Expansion Valve
Refrigerator Oil		Refer to the nameplate of compressor	Refer to the nameplate of compressor
Standard Accessories		Installation Manual, Operation Manual, Connection Pipes, Clamps	Installation Manual, Operation Manual, Connection Pipes, Clamps
Drawing No.		C: 4D066320A	4D066321A

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
 ★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m ³ /min×35.3

Model Name (Combination Unit)		RQCYQ280PY1		RQCYQ360PY1		
Model Name (Independent Unit)		RQYQ140PY1+RQYQ140PY1		RQYQ180PY1+RQYQ180PY1		
★1 Cooling Capacity	kcal / h	24,000		31,000		
	Btu / h	95,600		122,800		
	kW	28.0		36.0		
★2 Heating Capacity	kcal / h	27,600		34,400		
	Btu / h	109,200		136,400		
	kW	32.0		40.0		
Casing Color		Ivory White 5Y7.5/1		Ivory White 5Y7.5/1		
Dimensions: (H×W×D)		mm	1680×635×765+1680×635×765		1680×635×765+1680×635×765	
Heat Exchanger		Cross fin coil		Cross fin coil		
Comp.	Type		Hermetically sealed scroll type		Hermetically sealed scroll type	
	Piston Displacement	m ³ /h	13.34+13.34		15.75+15.75	
	Number of Revolutions	r.p.m	6300, 6300		7440, 7440	
	Motor Output×Number of Units	kW	(2.8×1)+(2.8×1)		(3.3×1)+(3.3×1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propellor fan		Propellor fan	
	Motor Output	kW	(0.35×1)+(0.35×1)		(0.35×1)+(0.35×1)	
	Airflow Rate	m ³ /min	95+95		110+110	
	Drive		Direct drive		Direct drive	
Connecting Pipes	Liquid Pipe		φ9.5 C1220T (Brazeing connection)		φ12.7 C1220T (Brazeing connection)	
	Gas Pipe		φ22.2 C1220T (Brazeing connection)		φ25.4 C1220T (Brazeing connection)	
Mass (Weight)		kg	175+175		175+175	
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	12-100		10-100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	11.1+11.1		11.1+11.1	
	Control		Electronic expansion valve		Electronic expansion valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps		Installation manual, Operation manual, Connection pipes, Clamps		
Drawing No.						

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m ³ /min×35.3

Model Name (Combination Unit)		RQCYQ460PY1		RQCYQ500PY1			
Model Name (Independent Unit)		RQYQ180PY1+RQYQ140PY1+RQYQ140PY1		RQYQ180PY1+RQYQ180PY1+RQYQ140PY1			
★1 Cooling Capacity	kcal / h	39,600		43,000			
	Btu / h	157,000		170,600			
	kW	46.0		50.0			
★2 Heating Capacity	kcal / h	44,700		48,200			
	Btu / h	177,400		191,100			
	kW	52.0		56.0			
Casing Color		Ivory White 5Y7.5/1		Ivory White 5Y7.5/1			
Dimensions: (H×W×D)		mm	1680×635×765+1680×635×765+1680×635×765		1680×635×765+1680×635×765+1680×635×765		
Heat Exchanger		Cross fin coil		Cross fin coil			
Comp.	Type		Hermetically sealed scroll type		Hermetically sealed scroll type		
	Piston Displacement	m³/h	(15.75×1)+(13.34×1)+(13.34×1)		(15.75×1)+(15.75×1)+(13.34×1)		
	Number of Revolutions		r.p.m	7440,6300,6300		7440,7440,6300	
	Motor Output×Number of Units		kW	(3.3×1)+(2.8×1)+(2.8×1)		(3.3×1)+(3.3×1)+(2.8×1)	
	Starting Method		Soft start		Soft start		
Fan	Type		Propellor fan		Propellor fan		
	Motor Output	kW	(0.35×1)+(0.35×1)+(0.35×1)		(0.35×1)+(0.35×1)+(0.35×1)		
	Airflow Rate		m³/min	110+95+95		110+110+95	
	Drive		Direct drive		Direct drive		
Connecting Pipes	Liquid Pipe		φ12.7 C1220T (Brazing connection)		φ15.9 C1220T (Brazing connection)		
	Gas Pipe		φ28.6 C1220T (Brazing connection)		φ28.6 C1220T (Brazing connection)		
Mass (Weight)		kg	175+175+175		175+175+175		
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector			
Defrost Method		Deicer		Deicer			
Capacity Control		%	8-100		7-100		
Refrigerant	Refrigerant Name		R-410A		R-410A		
	Charge	kg	11.1+11.1+11.1		11.1+11.1+11.1		
	Control		Electronic expansion valve		Electronic expansion valve		
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor			
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps		Installation manual, Operation manual, Connection pipes, Clamps			
Drawing No.							

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)		RQCQ540PY1	
Model Name (Independent Unit)		RQYQ180PY1+RQYQ180PY1+RQYQ180PY1	
★1 Cooling Capacity	kcal / h	46,400	
	Btu / h	184,200	
	kW	54.0	
★2 Heating Capacity	kcal / h	51,600	
	Btu / h	204,700	
	kW	60.0	
Casing Color		Ivory White 5Y7.5/1	
Dimensions: (H×W×D)		mm	1680×635×765+1680×635×765+1680×635×765
Heat Exchanger		Cross fin coil	
Comp.	Type		Hermetically sealed scroll type
	Piston Displacement	m ³ /h	(15.75×1)+(15.75×1)+(15.75×1)
	Number of Revolutions		r.p.m. 7440, 7440, 7440
	Motor Output×Number of Units		kW (3.3×1)+(3.3×1)+(3.3×1)
	Starting Method		Soft start
Fan	Type		Propellor fan
	Motor Output	kW	(0.35×1)+(0.35×1)+(0.35×1)
	Airflow Rate	m ³ /min	110+110+110
	Drive		Direct drive
Connecting Pipes	Liquid Pipe		φ15.9 C1220T (Brazing connection)
	Gas Pipe		φ28.6 C1220T (Brazing connection)
Mass (Weight)	kg	175+175+175	
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector	
Defrost Method		Deicer	
Capacity Control	%	7-100	
Refrigerant	Refrigerant Name		R-410A
	Charge	kg	11.1+11.1+11.1
	Control		Electronic expansion valve
Refrigerator Oil		Refer to the nameplate of compressor	
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps	
Drawing No.			

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m ³ /min×35.3

Heat Recovery Series <RQCEQ-P>

Model Name (Combination Unit)		RQCEQ280PY1		RQCEQ360PY1		
Model Name (Independent Unit)		RQE140PY1+RQE140PY1		RQE180PY1+RQE180PY1		
★1 Cooling Capacity	kcal / h	24,000		31,000		
	Btu / h	95,600		122,800		
	kW	28.0		36.0		
★2 Heating Capacity	kcal / h	27,600		34,400		
	Btu / h	109,200		136,400		
	kW	32.0		40.0		
Casing Color		Ivory White 5Y7.5/1		Ivory White 5Y7.5/1		
Dimensions: (HxWxD)		mm	1680x635x765+1680x635x765		1680x635x765+1680x635x765	
Heat Exchanger		Cross fin coil		Cross fin coil		
Comp.	Type		Hermetically sealed scroll type		Hermetically sealed scroll type	
	Piston Displacement	m³/h	(13.34x1)+(13.34x1)		(15.75x1)+(15.75x1)	
	Number of Revolutions	r.p.m	6300, 6300		7440,7440	
	Motor OutputxNumber of Units	kW	(2.8x1)+(2.8x1)		(3.3x1)+(3.3x1)	
	Starting Method		Soft start		Soft start	
Fan	Type		Propellor fan		Propellor fan	
	Motor Output	kW	(0.35x1)+(0.35x1)		(0.35x1)+(0.35x1)	
	Airflow Rate	m³/min	95+95		110+110	
	Drive		Direct drive		Direct drive	
Connecting Pipes	Liquid Pipe		φ9.5 C1220T (Brazing connection)		φ12.7 C1220T (Brazing connection)	
	Gas Pipe		φ22.2 C1220T (Brazing connection)		φ25.4 C1220T (Brazing connection)	
Mass (Weight)		kg	175+175		175+175	
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		
Defrost Method		Deicer		Deicer		
Capacity Control		%	12-100		10-100	
Refrigerant	Refrigerant Name		R-410A		R-410A	
	Charge	kg	10.3+10.3		10.6+10.6	
	Control		Electronic expansion valve		Electronic expansion valve	
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor		
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps		Installation manual, Operation manual, Connection pipes, Clamps		
Drawing No.						

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kWx860
Btu/h=kWx3412
cfm=m³/minx35.3

Model Name (Combination Unit)		RQCEQ460PY1		RQCEQ500PY1			
Model Name (Independent Unit)		RREQ180PY1+RREQ140PY1+RREQ140PY1		RREQ180PY1+RREQ180PY1+RREQ140PY1			
★1 Cooling Capacity	kcal / h	38,700		43,000			
	Btu / h	153,500		170,600			
	kW	45.0		50.0			
★2 Heating Capacity	kcal / h	44,700		48,200			
	Btu / h	177,400		191,100			
	kW	52.0		56.0			
Casing Color		Ivory White 5Y7.5/1		Ivory White 5Y7.5/1			
Dimensions: (H×W×D)		mm	1680×635×765+1680×635×765+1680×635×765		1680×635×765+1680×635×765+1680×635×765		
Heat Exchanger		Cross fin coil		Cross fin coil			
Comp.	Type		Hermetically sealed scroll type		Hermetically sealed scroll type		
	Piston Displacement	m ³ /h	(15.75×1)+(13.34×1)+(13.34×1)		(15.75×1)+(15.75×1)+(13.34×1)		
	Number of Revolutions		r.p.m	7440, 6300, 6300		7440, 7440, 6300	
	Motor Output×Number of Units		kW	(3.3×1)+(2.8×1)+(2.8×1)		(3.3×1)+(3.3×1)+(2.8×1)	
	Starting Method		Soft start		Soft start		
Fan	Type		Propellor fan		Propellor fan		
	Motor Output	kW	(0.35×1)+(0.35×1)+(0.35×1)		(0.35×1)+(0.35×1)+(0.35×1)		
	Airflow Rate		m ³ /min	110+95+95		110+110+95	
	Drive		Direct drive		Direct drive		
Connecting Pipes	Liquid Pipe		φ12.7 C1220T (Brazing connection)		φ15.9 C1220T (Brazing connection)		
	Gas Pipe		φ28.6 C1220T (Brazing connection)		φ28.6 C1220T (Brazing connection)		
Mass (Weight)		kg	175+175+175		175+175+175		
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector			
Defrost Method		Deicer		Deicer			
Capacity Control		%	8-100		7-100		
Refrigerant	Refrigerant Name		R-410A		R-410A		
	Charge	kg	10.6+10.3+10.3		10.6+10.6+10.3		
	Control		Electronic expansion valve		Electronic expansion valve		
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor			
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps		Installation manual, Operation manual, Connection pipes, Clamps			
Drawing No.							

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m ³ /min×35.3

Model Name (Combination Unit)		RQCEQ540PY1		RQCEQ636PY1			
Model Name (Independent Unit)		RREQ180PY1+RREQ180PY1+RREQ180PY1		RREQ212PY1+RREQ212PY1+RREQ212PY1			
★1 Cooling Capacity	kcal / h	46,400		54,700			
	Btu / h	184,200		217,000			
	kW	54.0		63.6			
★2 Heating Capacity	kcal / h	51,600		57,800			
	Btu / h	204,700		229,300			
	kW	60.0		67.2			
Casing Color		Ivory White 5Y7.5/1		Ivory White 5Y7.5/1			
Dimensions: (H×W×D)		mm	1680×635×765+1680×635×765+1680×635×765		1680×635×765+1680×635×765+1680×635×765		
Heat Exchanger		Cross fin coil		Cross fin coil			
Comp.	Type		Hermetically sealed scroll type		Hermetically sealed scroll type		
	Piston Displacement	m³/h	(15.75×1)+(15.75×1)+(15.75×1)		(16.89×1)+(16.89×1)+(16.89×1)		
	Number of Revolutions		r.p.m	7440, 7440, 7440		7980, 7980, 7980	
	Motor Output×Number of Units		kW	(3.3×1)+(3.3×1)+(3.3×1)		(3.6×1)+(3.6×1)+(3.6×1)	
	Starting Method		Soft start		Soft start		
Fan	Type		Propellor fan		Propellor fan		
	Motor Output	kW	(0.35×1)+(0.35×1)+(0.35×1)		(0.35×1)+(0.35×1)+(0.35×1)		
	Airflow Rate		m³/min	110+110+110		110+110+110	
	Drive		Direct drive		Direct drive		
Connecting Pipes	Liquid Pipe		φ15.9 C1220T (Brazing connection)		φ15.9 C1220T (Brazing connection)		
	Gas Pipe		φ28.6 C1220T (Brazing connection)		φ28.6 C1220T (Brazing connection)		
Mass (Weight)		kg	175+175+175		179+179+179		
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector			
Defrost Method		Deicer		Deicer			
Capacity Control		%	7-100		7-100		
Refrigerant	Refrigerant Name		R-410A		R-410A		
	Charge	kg	10.6+10.6+10.6		11.2+11.2+11.2		
	Control		Electronic expansion valve		Electronic expansion valve		
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor			
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps		Installation manual, Operation manual, Connection pipes, Clamps			
Drawing No.							

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

Model Name (Combination Unit)		RQCEQ712PY1		RQCEQ744PY1			
Model Name (Independent Unit)		RREQ212PY1+RREQ180PY1+RREQ180PY1+RREQ140PY1		RREQ212PY1+RREQ212PY1+RREQ180PY1+RREQ140PY1			
★1 Cooling Capacity	kcal / h	61,200		64,000			
	Btu / h	242,900		253,900			
	kW	71.2		74.4			
★2 Heating Capacity	kcal / h	67,400		69,500			
	Btu / h	267,500		275,700			
	kW	78.4		80.8			
Casing Color		Ivory White 5Y7.5/1		Ivory White 5Y7.5/1			
Dimensions: (H×W×D)		mm	1680×635×765+1680×635×765+1680×635×765+1680×635×765		1680×635×765+1680×635×765+1680×635×765+1680×635×765		
Heat Exchanger		Cross fin coil		Cross fin coil			
Comp.	Type		Hermetically sealed scroll type		Hermetically sealed scroll type		
	Piston Displacement	m ³ /h	(16.89×1)+(15.75×1)+(15.75×1)+(13.34×1)		(16.89×1)+(16.89×1)+(15.75×1)+(13.34×1)		
	Number of Revolutions		r.p.m	7980, 7440, 7440, 6300		7980, 7980, 7440, 6300	
	Motor Output×Number of Units		kW	(3.6×1)+(3.3×1)+(3.3×1)+(2.8×1)		(3.6×1)+(3.6×1)+(3.3×1)+(2.8×1)	
	Starting Method		Soft start		Soft start		
Fan	Type		Propellor fan		Propellor fan		
	Motor Output	kW	(0.35×1)+(0.35×1)+(0.35×1)+(0.35×1)		(0.35×1)+(0.35×1)+(0.35×1)+(0.35×1)		
	Airflow Rate		m ³ /min	110+110+110+95		110+110+110+95	
	Drive		Direct drive		Direct drive		
Connecting Pipes	Liquid Pipe		φ15.9 C1220T (Brazing connection)		φ19.1 C1220T (Brazing connection)		
	Gas Pipe		φ28.6 C1220T (Brazing connection)		φ31.8 C1220T (Brazing connection)		
Mass (Weight)		kg	179+175+175+175		179+179+175+175		
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector			
Defrost Method		Deicer		Deicer			
Capacity Control		%	5-100		5-100		
Refrigerant	Refrigerant Name		R-410A		R-410A		
	Charge	kg	11.2+10.6+10.6+10.3		11.2+11.2+10.6+10.3		
	Control		Electronic expansion valve		Electronic expansion valve		
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor			
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps		Installation manual, Operation manual, Connection pipes, Clamps			
Drawing No.							

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m ³ /min×35.3

Model Name (Combination Unit)		RQCEQ816PY1		RQCEQ848PY1			
Model Name (Independent Unit)		RQE212PY1+RQE212PY1+RQE212PY1+RQE2180PY1		RQE212PY1+RQE212PY1+RQE212PY1+RQE212PY1			
★1 Cooling Capacity	kcal / h	70,200		72,900			
	Btu / h	278,400		289,300			
	kW	81.6		84.8			
★2 Heating Capacity	kcal / h	75,000		77,100			
	Btu / h	297,600		305,700			
	kW	87.2		89.6			
Casing Color		Ivory White 5Y7.5/1		Ivory White 5Y7.5/1			
Dimensions: (H×W×D)		mm	1680×635×765+1680×635×765+1680×635×765+1680×635×765		1680×635×765+1680×635×765+1680×635×765+1680×635×765		
Heat Exchanger		Cross fin coil		Cross fin coil			
Comp.	Type		Hermetically sealed scroll type		Hermetically sealed scroll type		
	Piston Displacement	m³/h	(16.89×1)+(16.89×1)+(16.89×1)+(15.75×1)		(16.89×1)+(16.89×1)+(16.89×1)+(16.89×1)		
	Number of Revolutions		r.p.m	7980, 7980, 7980, 7440		7980, 7980, 7980, 7980	
	Motor Output×Number of Units		kW	(3.6×1)+(3.6×1)+(3.6×1)+(3.3×1)		(3.6×1)+(3.6×1)+(3.6×1)+(3.6×1)	
	Starting Method		Soft start		Soft start		
Fan	Type		Propellor fan		Propellor fan		
	Motor Output	kW	(0.35×1)+(0.35×1)+(0.35×1)+(0.35×1)		(0.35×1)+(0.35×1)+(0.35×1)+(0.35×1)		
	Airflow Rate		m³/min	110+110+110+110		110+110+110+110	
	Drive		Direct drive		Direct drive		
Connecting Pipes	Liquid Pipe		φ19.1 C1220T (Brazing connection)		φ19.1 C1220T (Brazing connection)		
	Gas Pipe		φ31.8 C1220T (Brazing connection)		φ31.8 C1220T (Brazing connection)		
Mass (Weight)		kg	179+179+179+175		179+179+179+179		
Safety Devices		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector		High pressure switch, fan driver overload protector, overcurrent relay, inverter overload protector			
Defrost Method		Deicer		Deicer			
Capacity Control		%	5-100		5-100		
Refrigerant	Refrigerant Name		R-410A		R-410A		
	Charge	kg	11.2+11.2+11.2+10.6		11.2+11.2+11.2+11.2		
	Control		Electronic expansion valve		Electronic expansion valve		
Refrigerator Oil		Refer to the nameplate of compressor		Refer to the nameplate of compressor			
Standard Accessories		Installation manual, Operation manual, Connection pipes, Clamps		Installation manual, Operation manual, Connection pipes, Clamps			
Drawing No.							

Notes:

- ★1 Indoor temp. : 27°CDB, 19.0°CWB / outdoor temp. : 35°CDB / Equivalent piping length : 7.5m, level difference : 0m.
- ★2 Indoor temp. : 20°CDB / outdoor temp. : 7°CDB, 6°CWB / Equivalent piping length : 7.5m, level difference : 0m.

Conversion Formulae
kcal/h=kW×860
Btu/h=kW×3412
cfm=m³/min×35.3

1.2 BS Units

Model		BSVQ100P	BSVQ160P	BSVQ250P	
Power Supply		1 Phase 50Hz 220 ~ 240V	1 Phase 50Hz 220 ~ 240V	1 Phase 50Hz 220 ~ 240V	
Casing		Galvanized steel plate	Galvanized steel plate	Galvanized steel plate	
Dimensions: (HxWxD)		mm 207x388x326	207x388x326	207x388x326	
Sound absorbing thermal insulation material		Foamed polyurethane, Frame resisting needle felt	Foamed polyurethane, Frame resisting needle felt	Foamed polyurethane, Frame resisting needle felt	
Piping Connection	Indoor Unit	Liquid Pipes	9.5mm C1220T (brazing connection) ★1	9.5mm C1220T (brazing connection)	9.5mm C1220T (brazing connection)
		Gas Pipes	15.9mm C1220T (brazing connection) ★1	15.9mm C1220T (brazing connection) ★2	22.2mm C1220T (brazing connection) ★3
	Outdoor Unit	Liquid Pipes	9.5mm C1220T (brazing connection)	9.5mm C1220T (brazing connection)	9.5mm C1220T (brazing connection)
		Suction Gas Pipes	15.9mm C1220T (brazing connection)	15.9mm C1220T (brazing connection) ★2	22.2mm C1220T (brazing connection) ★3
		HP/LP Gas Pipes	12.7mm C1220T (brazing connection)	12.7mm C1220T (brazing connection) ★2	19.1mm C1220T (brazing connection) ★3
Weight		kg 12	12	15	
Standard Accessories		Installation manual, Attached pipe, Insulation pipe cover, Clamps	Installation manual, Attached pipe, Insulation pipe cover, Clamps	Installation manual, Attached pipe, Insulation pipe cover, Clamps	
Drawing No.		4D057926A	4D057927A	4D057928	

- Note:**
- ★1 In case of connecting with a 20 ~ 50 type indoor unit, match to the size of field pipe using the attached pipe.
 - ★2 In case of connecting with indoor unit capacity index 150 or more and 160 or less, match to the size of field pipe using the attached pipe.
 - ★3 In case of connecting with a 200 type indoor unit or indoor capacity index more than 160 and less than 200, match to the size of field pipe using the attached pipe.
- (Connection between the attached pipe and the field pipe must be brazed.)

Model		BSV4Q100P	BSV6Q100P	
Power Supply		1 Phase 50Hz 220~240V	1 Phase 50Hz 220~240V	
Total capacity index of connectable indoor units		400 or less	600 or less	
Capacity index of connectable indoor units per branch		100 or less		
No. of Connectable Indoor Units		Max. 20	Max. 30	
Casing		Galvanized steel plate	Galvanized steel plate	
Dimensions: (HxWxD)		mm 209x1053x635	209x1577x635	
Sound Absorbing Thermal Insulation Material		Foamed polyurethane, Flame resistant needle felt	Foamed polyurethane, Flame resistant needle felt	
Piping Connection	Indoor Unit	Liquid Pipes	9.5mm C1220T (brazing connection) ★1	9.5mm C1220T (brazing connection) ★1
		Gas Pipes	15.9mm C1220T (brazing connection) ★1	15.9mm C1220T (brazing connection) ★1
	Outdoor Unit	Liquid Pipes	12.7mm C1220T (brazing connection)	15.9mm C1220T (brazing connection)
		Suction Gas Pipes	28.6mm C1220T (brazing connection)	28.6mm C1220T (brazing connection)
		HP/LP Gas Pipes	19.1mm C1220T (brazing connection)	28.6mm C1220T (brazing connection)
Weight		kg 60	89	
Standard Accessories		Installation manual, Attached pipe Insulation pipe cover, Clamps	Installation manual, Attached pipe Insulation pipe cover, Clamps	
Drawing No.		C: 4D064131A	C: 4D064132A	

- Note:** ★1 In case of connecting with a 20 ~ 50 type indoor unit, match to the size of field pipe using the attached pipe.

Connection Range for BS Unit

Components	Outdoor unit model name	Total capacity of connectable indoor units	Number of connectable indoor units
Indoor unit total capacity	RQCEQ280PY1	14.0 to 36.4 (56.0)	16
	RQCEQ360PY1	18.0 to 46.2 (72.0)	20
	RQCEQ460PY1	23.0 to 59.8 (92.0)	26
	RQCEQ500PY1	25.0 to 65.0 (100.0)	29
	RQCEQ540PY1	27.0 to 70.2 (108.0)	33
	RQCEQ636PY1	31.8 to 82.7 (127.2)	36
	RQCEQ712PY1	35.6 to 92.6 (142.4)	40
	RQCEQ744PY1	37.2 to 96.7 (148.8)	43
	RQCEQ816PY1	40.8 to 106 (163.2)	47
	RQCEQ848PY1	42.4 to 110 (169.6)	50

Note: ★ Values inside brackets are based on connection of indoor units rated at maximum capacity, 200% from single outdoor units, 160% from double outdoor units, 130% from triple outdoor units.

Part 3


Refrigerant Circuit

1. Refrigerant Circuit	18
1.1 RQYQ140 / 180PY1, RQEQ140 ~ 212PY1	18
1.2 BS Unit	20
2. Functional Parts Layout	22
2.1 RQYQ140 · 180PY1, RQEQ140 ~ 212PY1.....	22
3. Refrigerant Flow for Each Operation Mode.....	23
3.1 RQYQ140 · 180PY1	23
3.2 RQCEQ280 ~ 848PY1	26

1. Refrigerant Circuit

1.1 RQYQ140 / 180PY1, RREQ140 ~ 212PY1

No. in refrigerant system diagram	Electric Symbol	Name	Major Function
(1)	M1C	Inverter compressor (INV.)	Inverter compressor is operated on frequencies 52Hz to 210Hz (180 class: 248Hz, 212 class: 266Hz) by using the inverter. The number of operating steps is 20. (180 class: 23 steps, 212 class: 27 steps)
(2)	M1F	Inverter fan	Because the system is an air heat exchange type, the fan is operated at 8-step rotation speed by using the inverter.
(3)	Y1E	Electronic expansion valve (Main)	While in heating, PI control is applied to keep the outlet superheated degree of air heat exchanger constant.
(4)	Y2E	Electronic expansion valve (Refrigerant charge)	This is used to charge refrigerant and discharge refrigerant from the refrigerant regulator.
(5)	Y3E	Electronic expansion valve (Subcooling)	PI control is applied to keep the outlet superheated degree of subcooling heat exchanger constant.
(6)	Y1S	Solenoid valve (Refrigerant regulator hot gas)	Used to charge refrigerant and discharge refrigerant from the refrigerant regulator.
(7)	Y2S	Solenoid valve (Refrigerant regulator liquid pipe)	Used to collect refrigerant to the refrigerant regulator.
(8)	Y3S	Solenoid valve (Refrigerant regulator gas vent pipe)	Used to collect refrigerant to the refrigerant regulator.
(9)	Y4S	Solenoid valve (Hot gas)	Used to prevent the low pressure from transient falling.
(10)	Y5S	Solenoid valve (Circuit of oil return)	Used to adjust the amount of oil in the mixing unit.
(11)	Y6S	Four way valve (Heat exchanger)	Used to switch the operation mode between cooling and heating.
(12)	Y7S	Four way valve (Dual pressure gas pipe)	Used to switch dual pressure gas pipe to high pressure or low pressure.
(13)	Y8S	Four way valve (Mixing unit)	Use to adjust the amount of refrigeration oil and clean pipes during check operation.
(14)	Y9S	Solenoid valve (Mixing unit inlet)	Use to adjust the amount of refrigeration oil and clean pipes during check operation. Use to prevent refrigerant from flowing into the mixing unit during normal operation.
(15)	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor air temperature, correct discharge pipe temperature and others.
(16)	R2T	Thermistor (Discharge pipe)	Used to detect discharge pipe temperature. Used for compressor temperature protection control.
(17)	R3T	Thermistor (Heat exchanger liquid pipe)	This detects temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgements on the recover or discharge refrigerants to the refrigerant regulator.
(18)	R4T	Thermistor (Heat exchanger gas pipe)	This detects temperature of gas pipe for air heat exchanger. Used to exercise the constant control of superheated degree when an evaporator is used for outdoor unit heat exchanging.
(19)	R5T	Thermistor (Suction pipe)	Used to detect suction pipe temperature.
(20)	R6T	Thermistor (Heat exchanger deicer)	Used to detect liquid pipe temperature of air heat exchanger. Used to make judgements on defrosting operation.
(21)	R7T	Thermistor (Subcooling heat exchanger gas pipe)	This detects temperature of gas pipe on the evaporation side of subcooling heat exchanger. Used to exercise the constant control of superheated degree at the outlet of subcooling heat exchanger.
(22)	R8T	Thermistor (Subcooling heat exchanger liquid pipe)	This detects temperature of liquid pipe between the main electronic expansion valve and subcooling heat exchanger.
(23)	R9T	Thermistor (Liquid pipe)	This detects temperature of liquid pipe.
(25)	S1NPH	High pressure sensor	Used to detect high pressure.
(26)	S1NPL	Low pressure sensor	Used to detect low pressure.
(27)	S1PH	High pressure switch (For INV.)	In order to prevent the increase of high pressure when an error occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
(28)	S2PH	Pressure switch	In order to prevent the increase of field piping pressure when an error occurs, this switch is activated at pressure of 3.3 MPa or more to stop the compressor operation.
(29)	—	Pressure regulating valve (Liquid pipe)	Open at 3.3 MPa or more to avoid pressure increase to prevent damage to functional parts by the pressure increase and to protect the field piping during transportation, storage and operation of the equipment.
(30)	—	Subcooling heat exchanger	Apply subcooling to liquid refrigerant.
(31)	—	Capillary tube	Used to return the refrigerating oil separated through the oil separator to the INV. compressor.

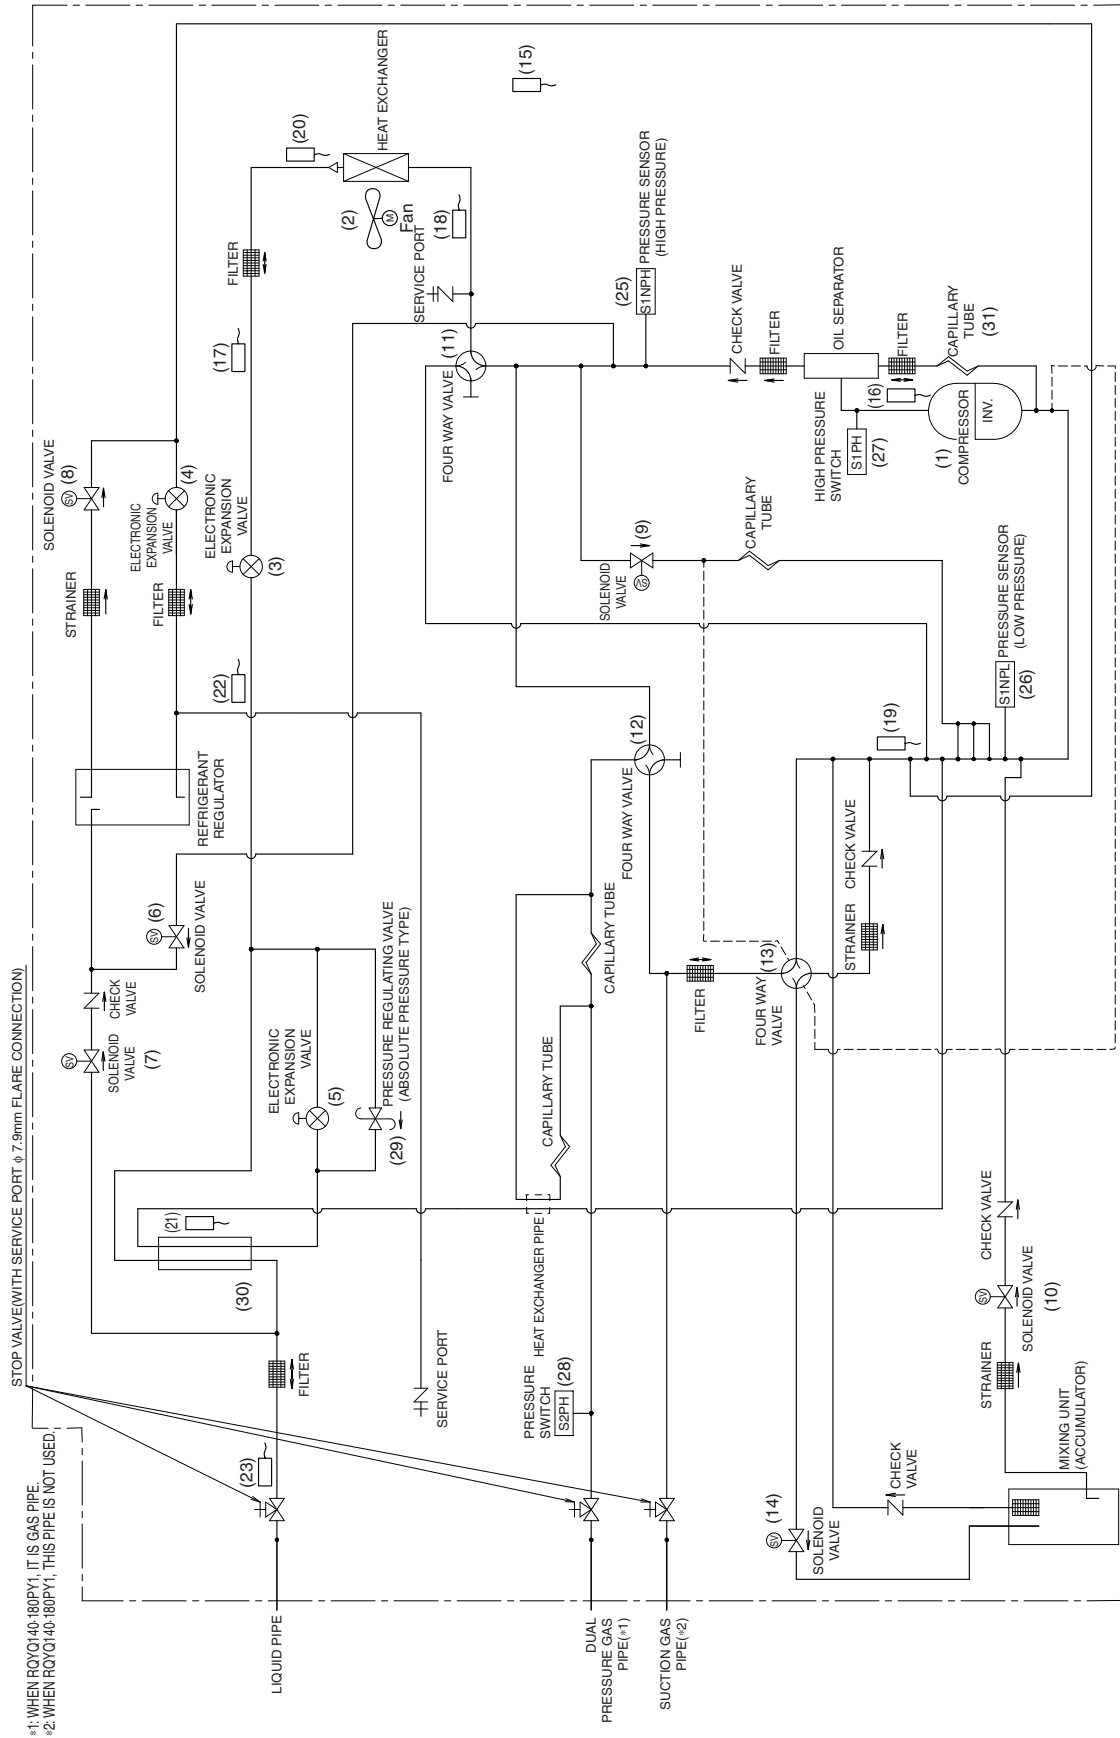


3D066010B

1.2 BS Unit


No.	Name	Electric Symbol	Function
1	Electronic expansion valve (EVSC)	Y1E	In simultaneous cooling and heating operation, it is used to subcooling liquid refrigerants when an indoor unit downstream of this BS unit is in heating.
2	Electronic expansion valve (EVHS)	Y2E	Opens while in heating or all indoor units are in cooling.
3	Electronic expansion valve (EVLS)	Y3E	Opens while in cooling.
4	Electronic expansion valve (EVH)	Y4E	Opens while in heating or all indoor units are in cooling.
5	Electronic expansion valve (EVL)	Y5E	Opens while in cooling.
6	Capillary tube	—	Used to bypass high pressure gas to low pressure side to protect “Refrigerant accumulation” in dual pressure gas pipes.
7	Double pipe heat exchanger	—	In simultaneous cooling and heating, it is used to subcooling liquid refrigerants when an indoor unit downstream of this BS unit is in heating.

BSVQ100 ~ 250P

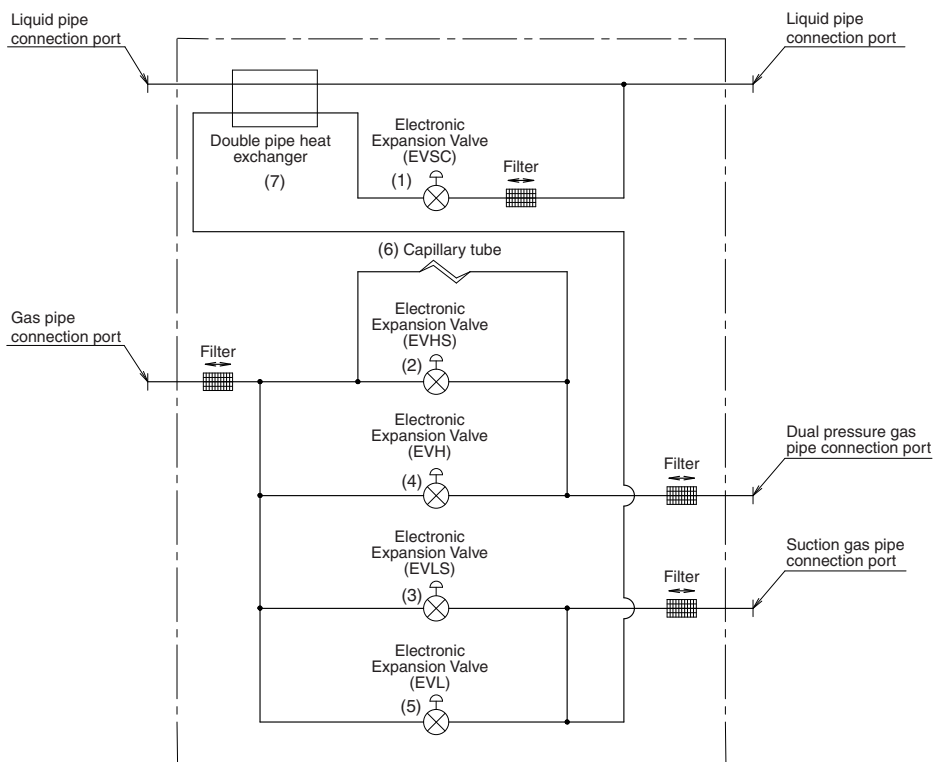


4D057985B

• BSV4Q100P

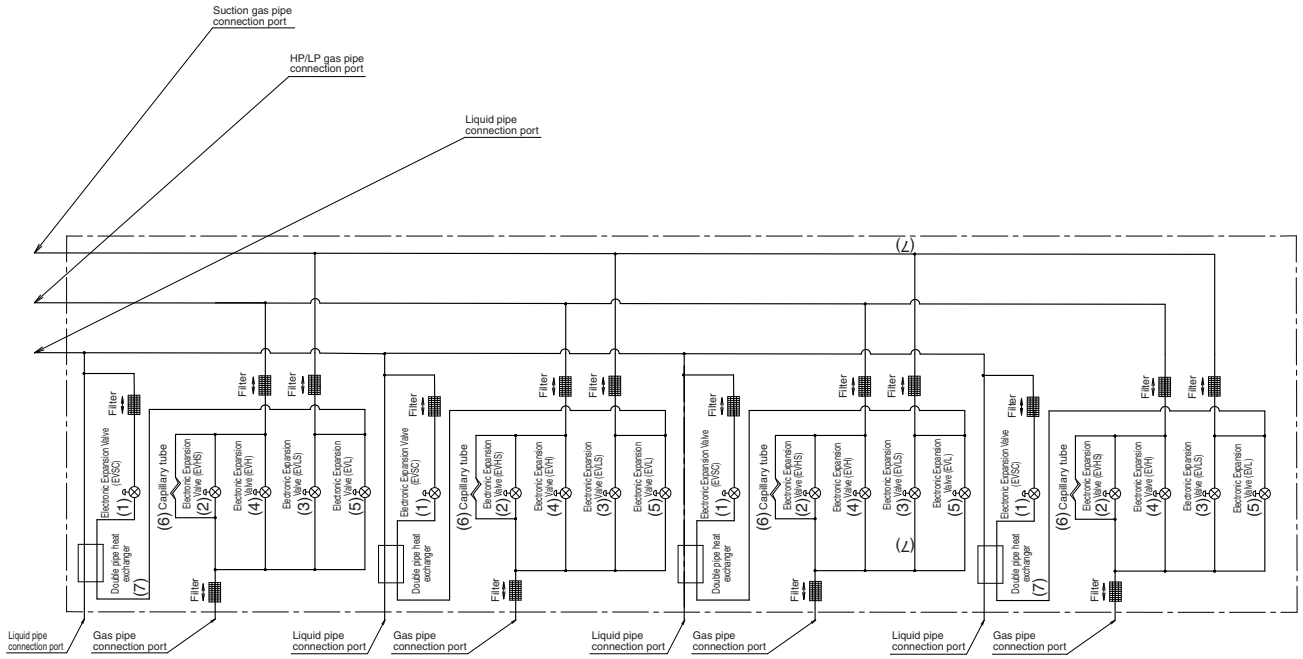

3D064148

• BSV6Q100P

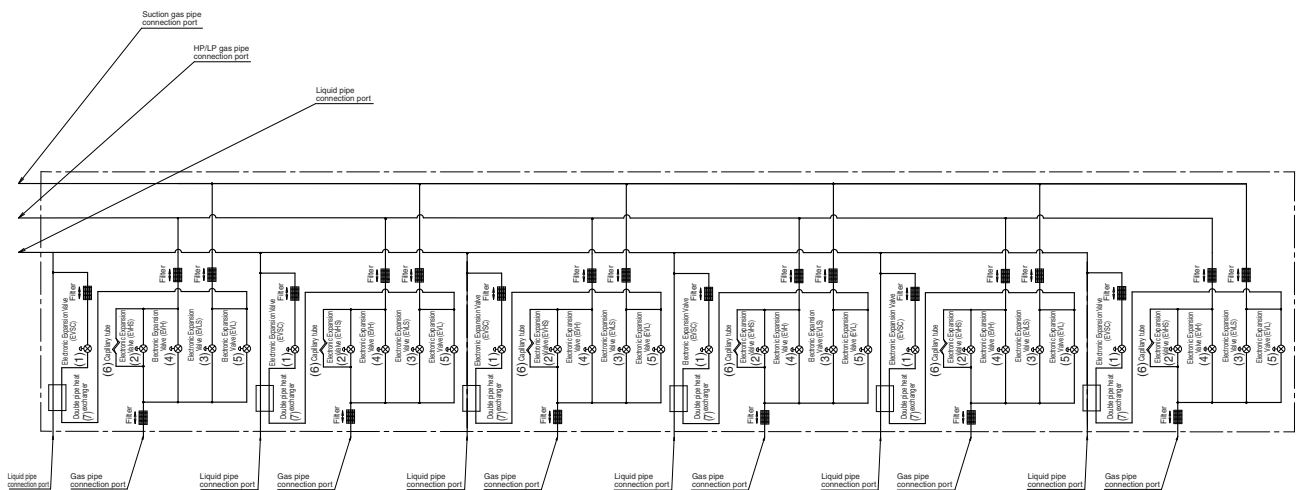


3D064149


2. Functional Parts Layout

2.1 RQYQ140 · 180PY1, RREQ140 ~ 212PY1

Top View

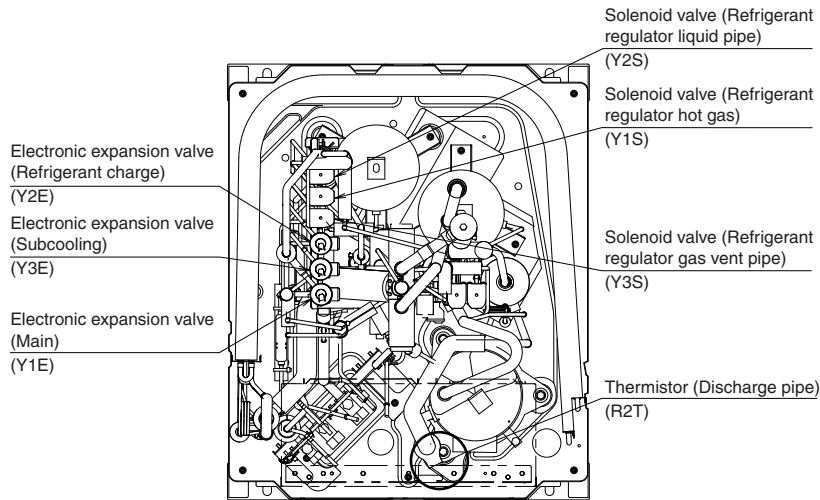

Front View

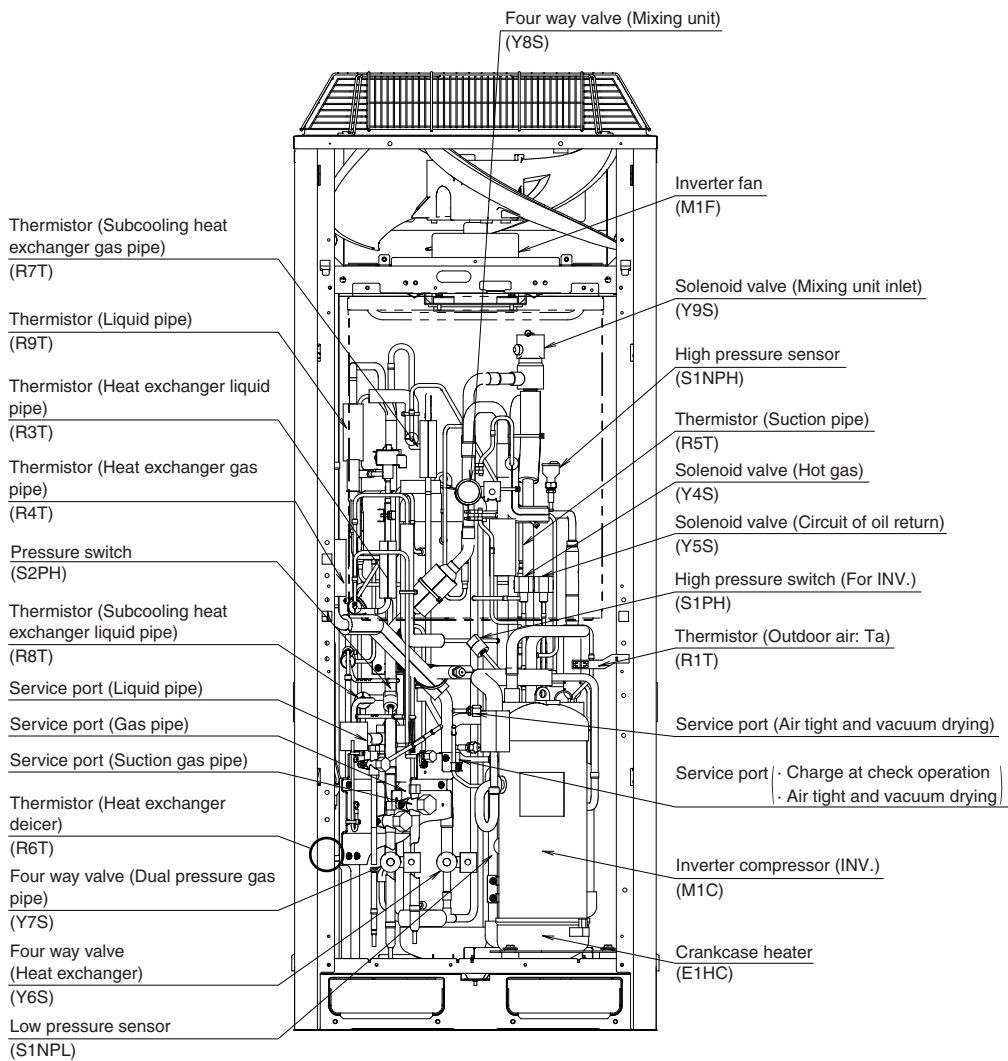


3. Refrigerant Flow for Each Operation Mode

3.1 RQYQ140 · 180PY1

Cooling Operation


- "High temperature, high pressure gas"
- "High temperature, high pressure liquid"
- "Low temperature, low pressure"

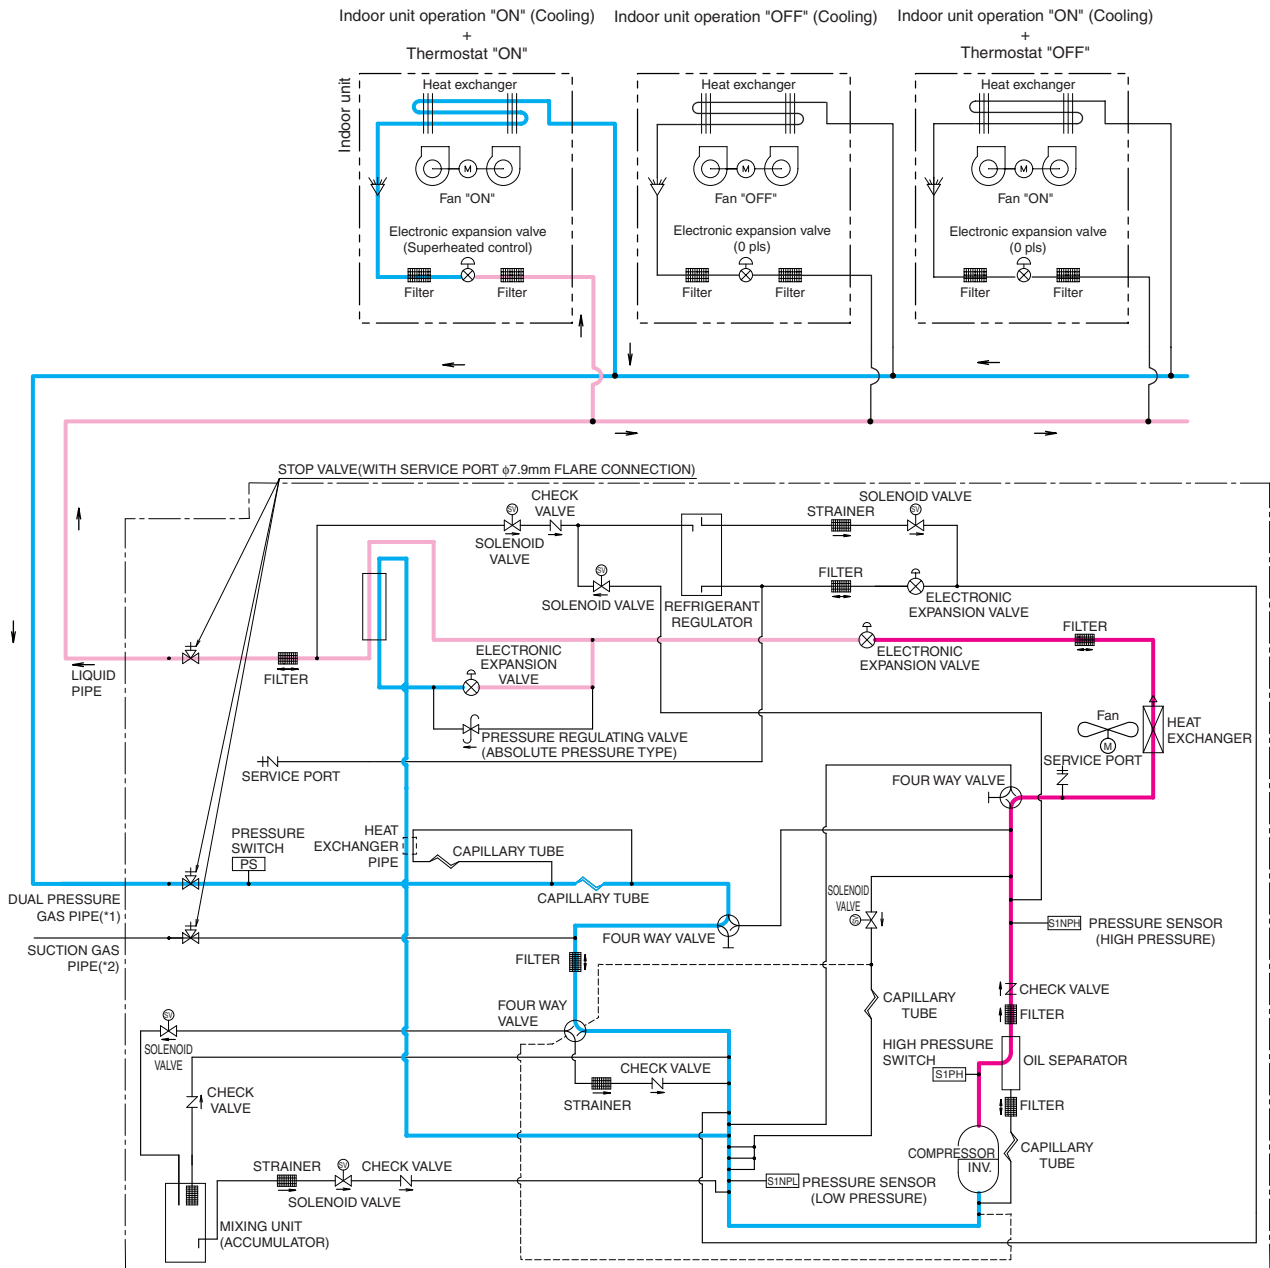

*1: WHEN RQYQ140-180PY1, IT IS GAS PIPE.
 *2: WHEN RQYQ140-180PY1, THIS PIPE IS NOT USED.

Cooling Oil Return / Heating Oil Return / Defrost Operation


- "High temperature, high pressure gas"
- "High temperature, high pressure liquid"
- "Low temperature, low pressure"

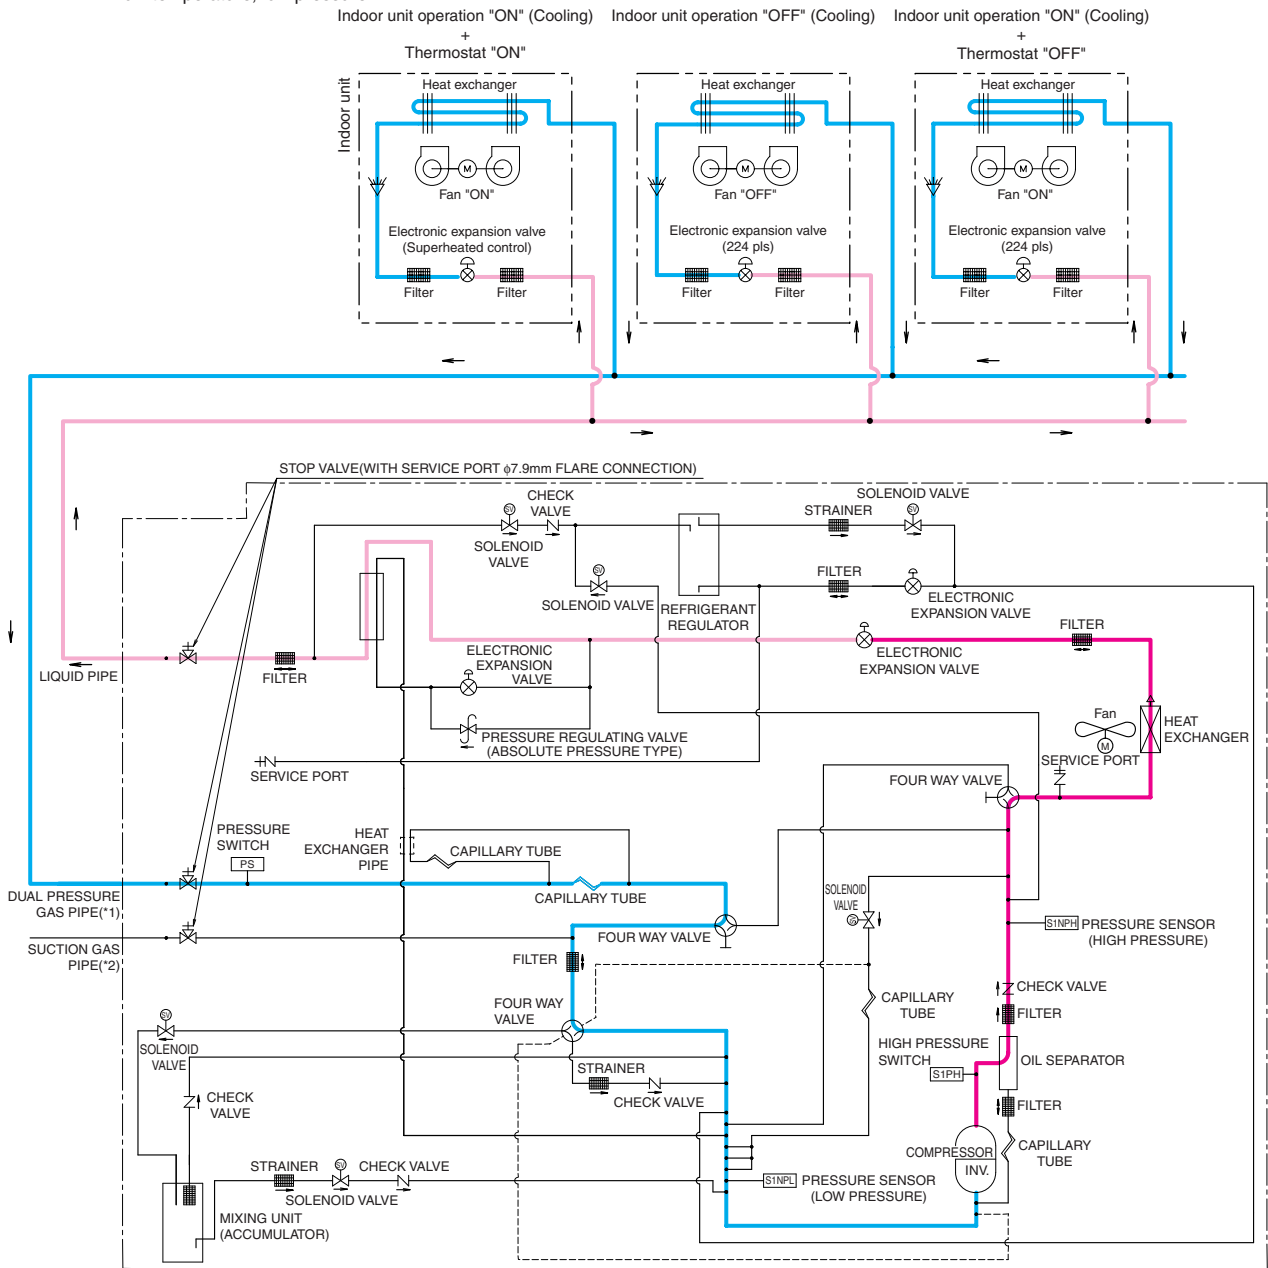

*1: WHEN RQYQ140-180PY1, IT IS GAS PIPE.
 *2: WHEN RQYQ140-180PY1, THIS PIPE IS NOT USED.

Heating Operation


- "High temperature, high pressure gas"
- "High temperature, high pressure liquid"
- "Low temperature, low pressure"

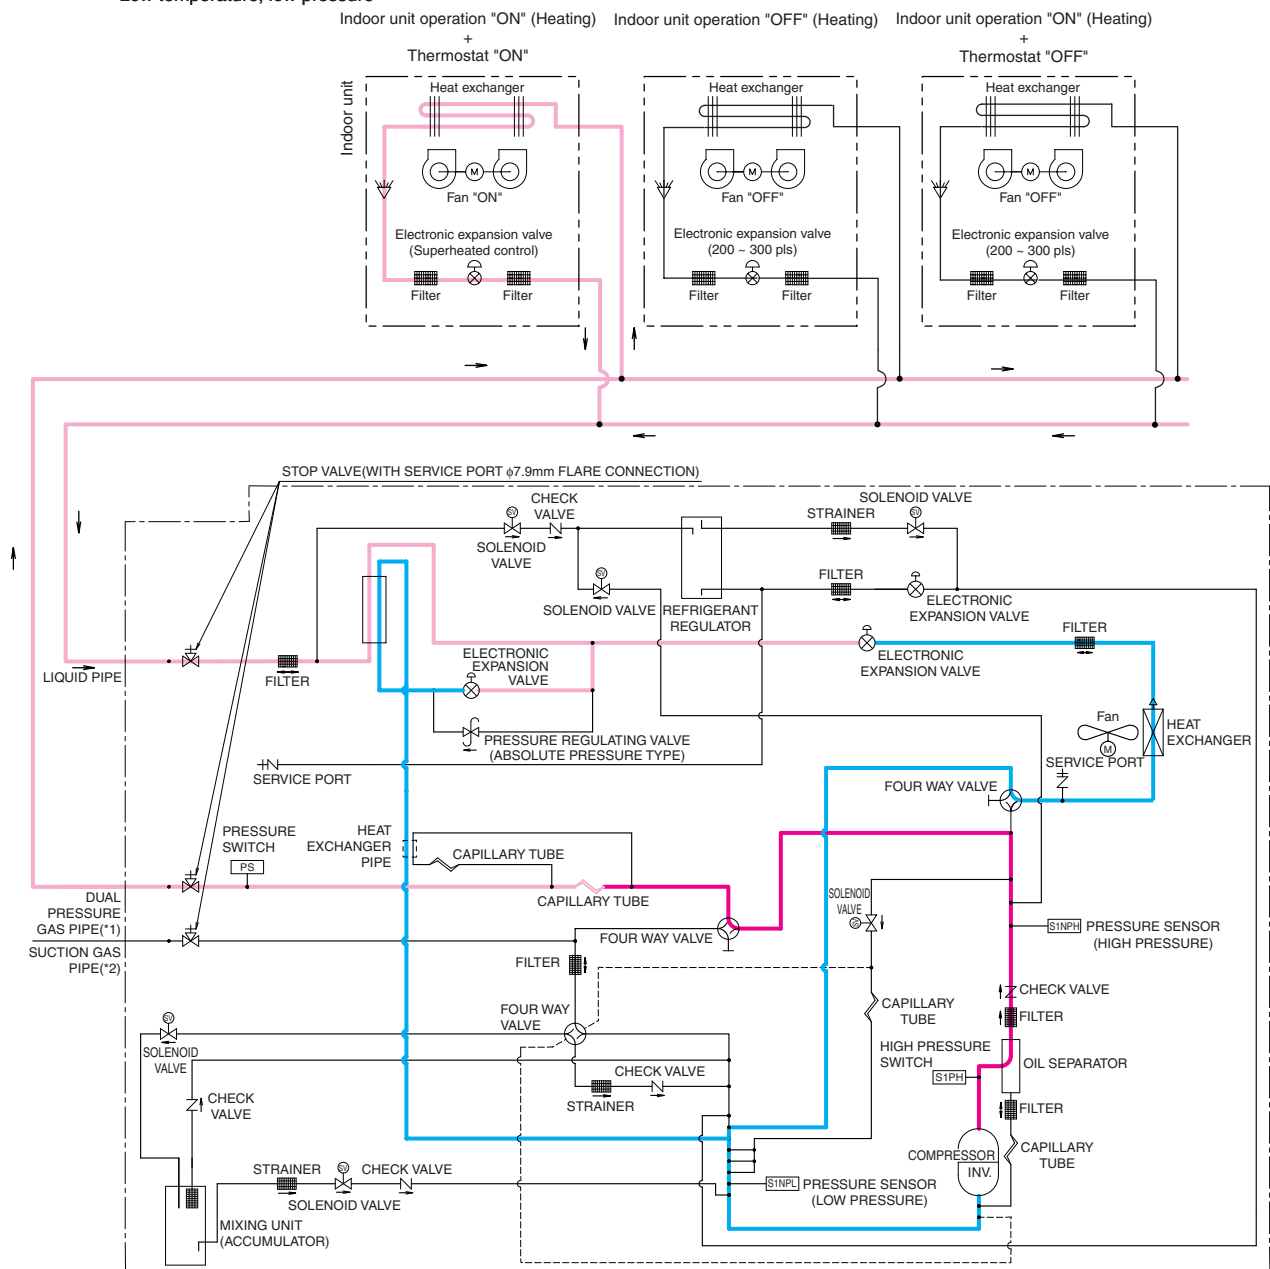


*1: WHEN ROYQ140-180PY1, IT IS GAS PIPE.
 *2: WHEN ROYQ140-180PY1, THIS PIPE IS NOT USED.

3.2 RQCEQ280 ~ 848PY1


Cooling Operation

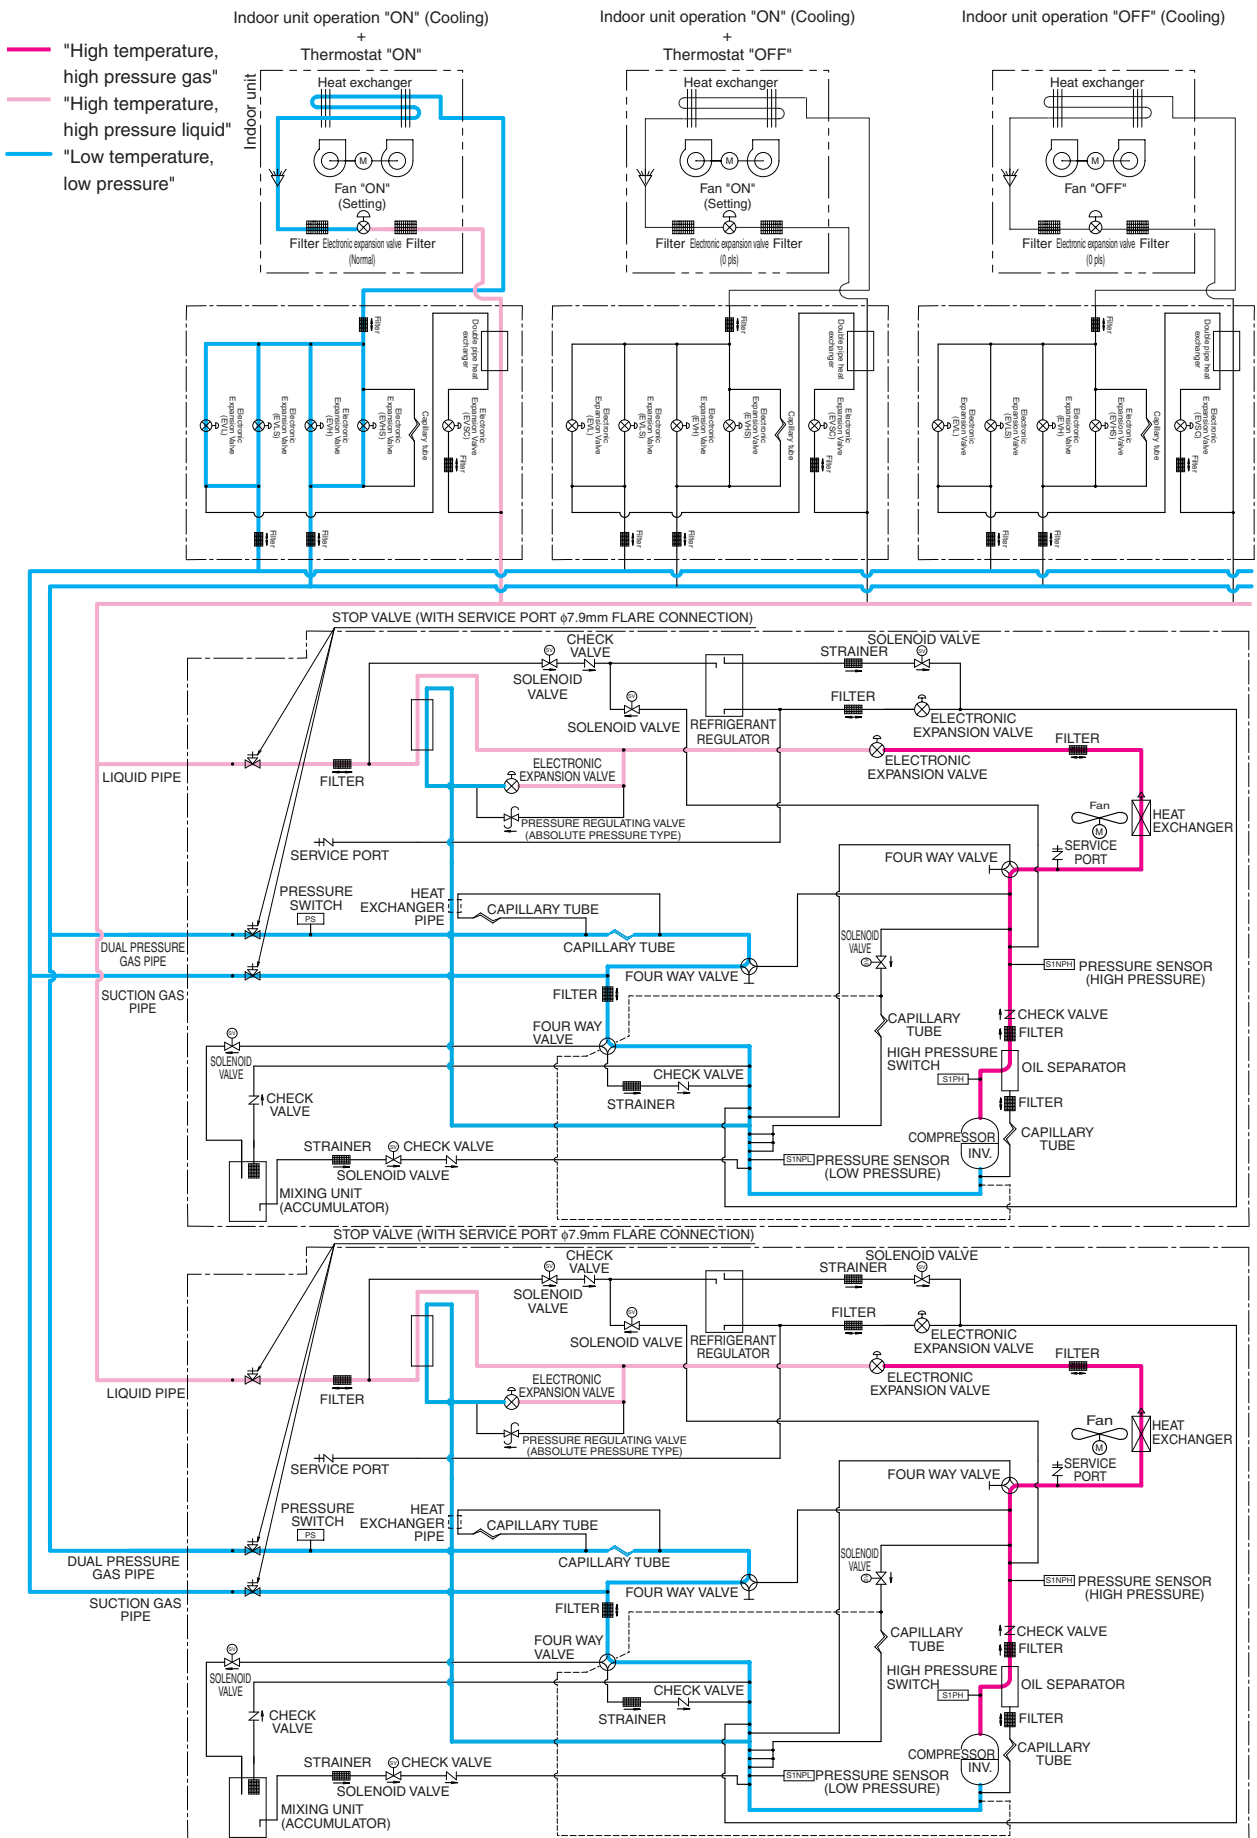


Cooling Oil Return Operation

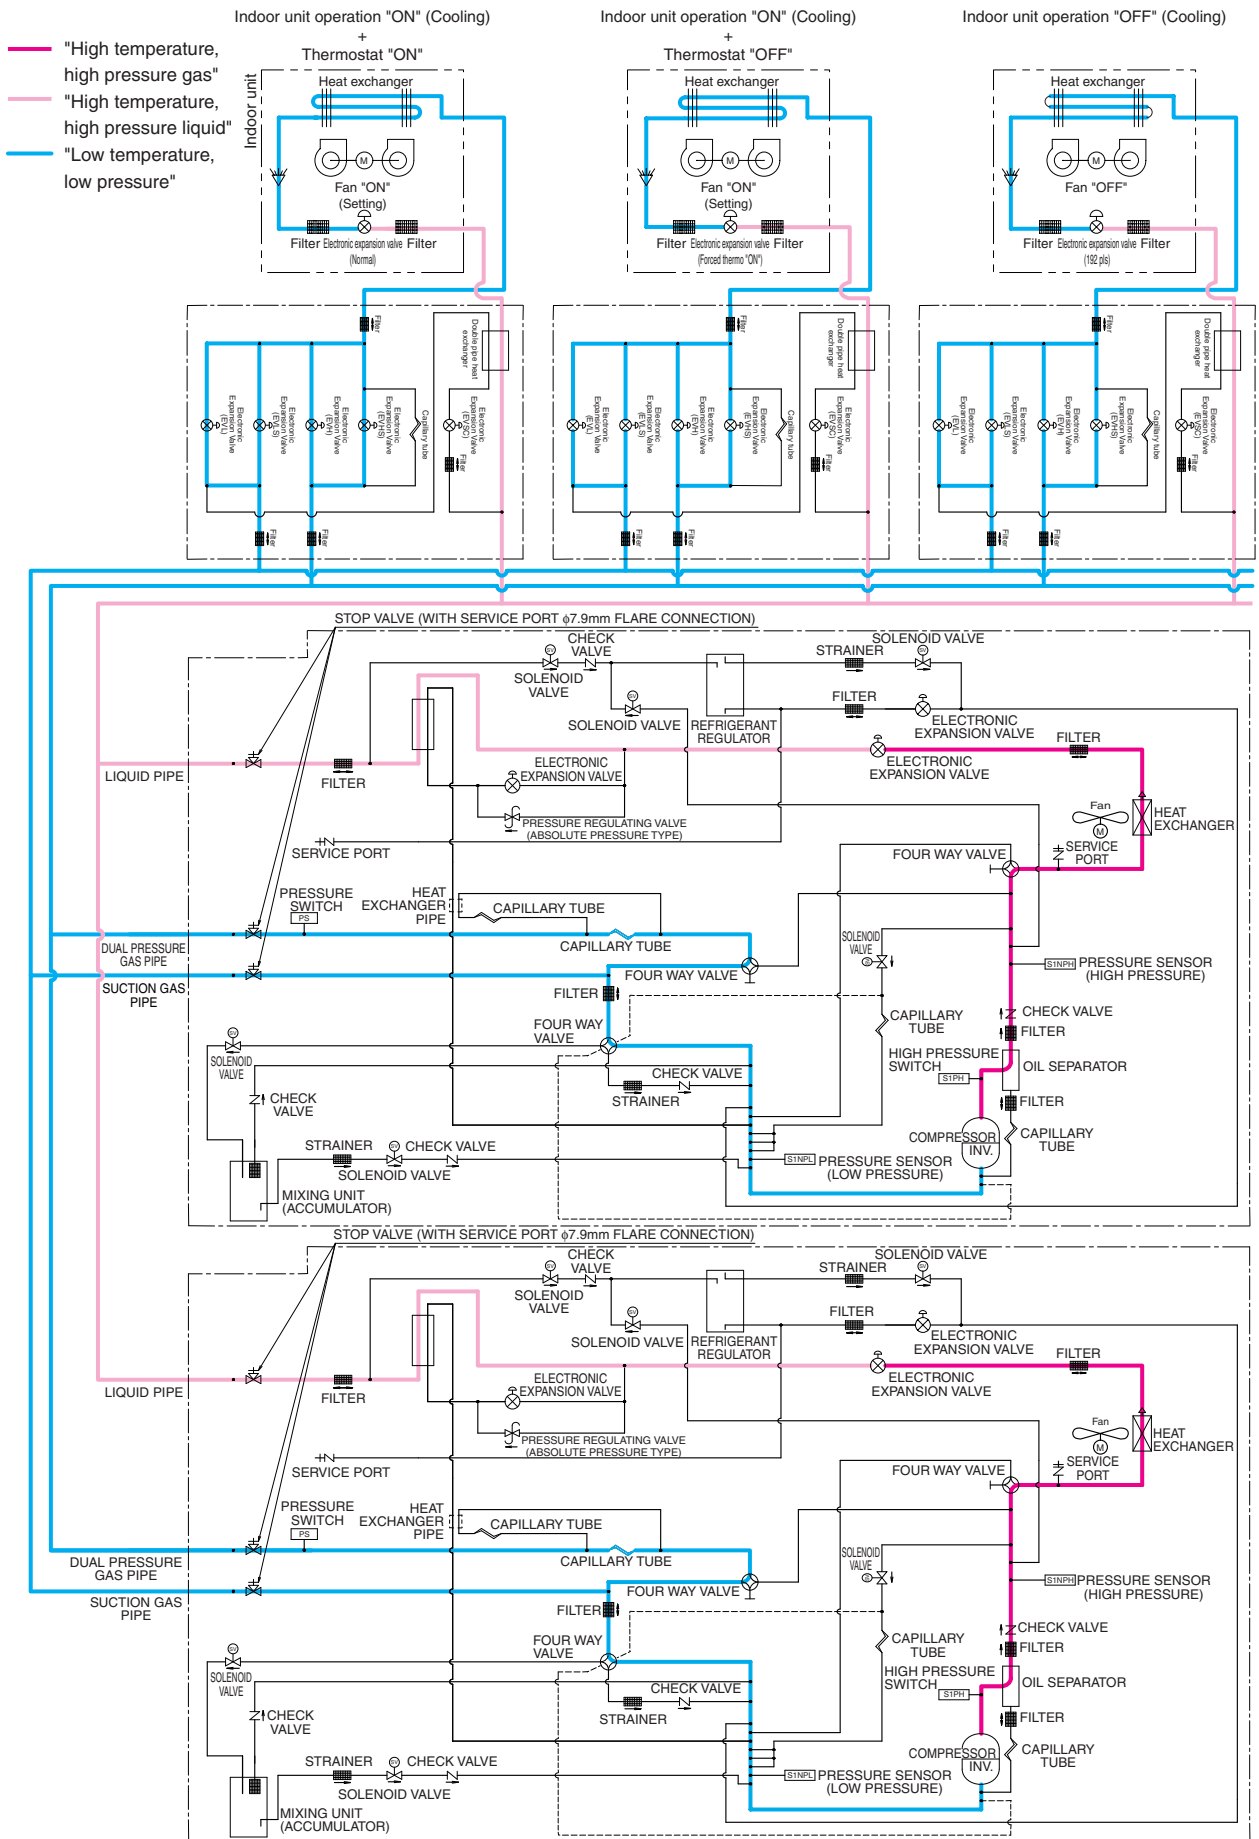


Heating Operation

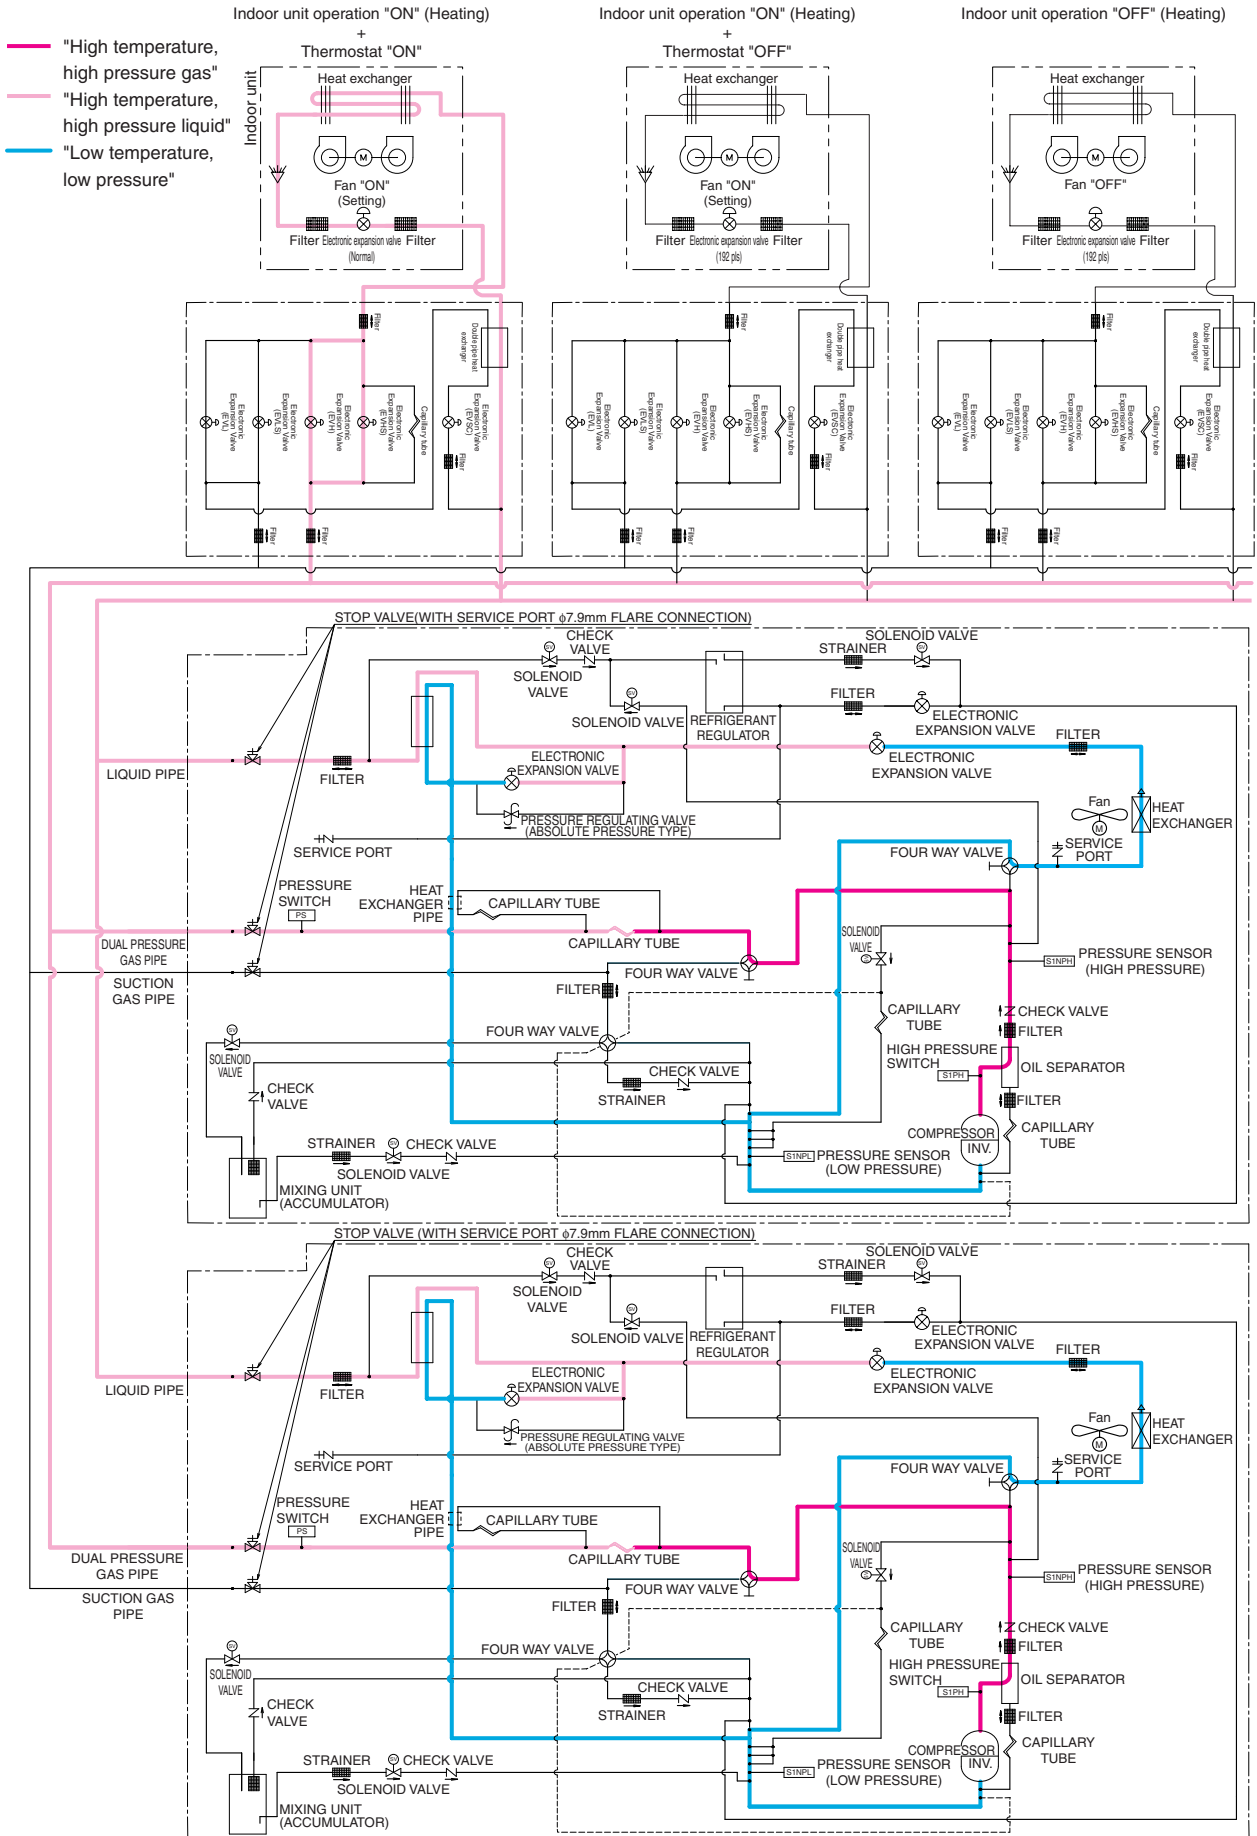


Heating Oil Return Operation

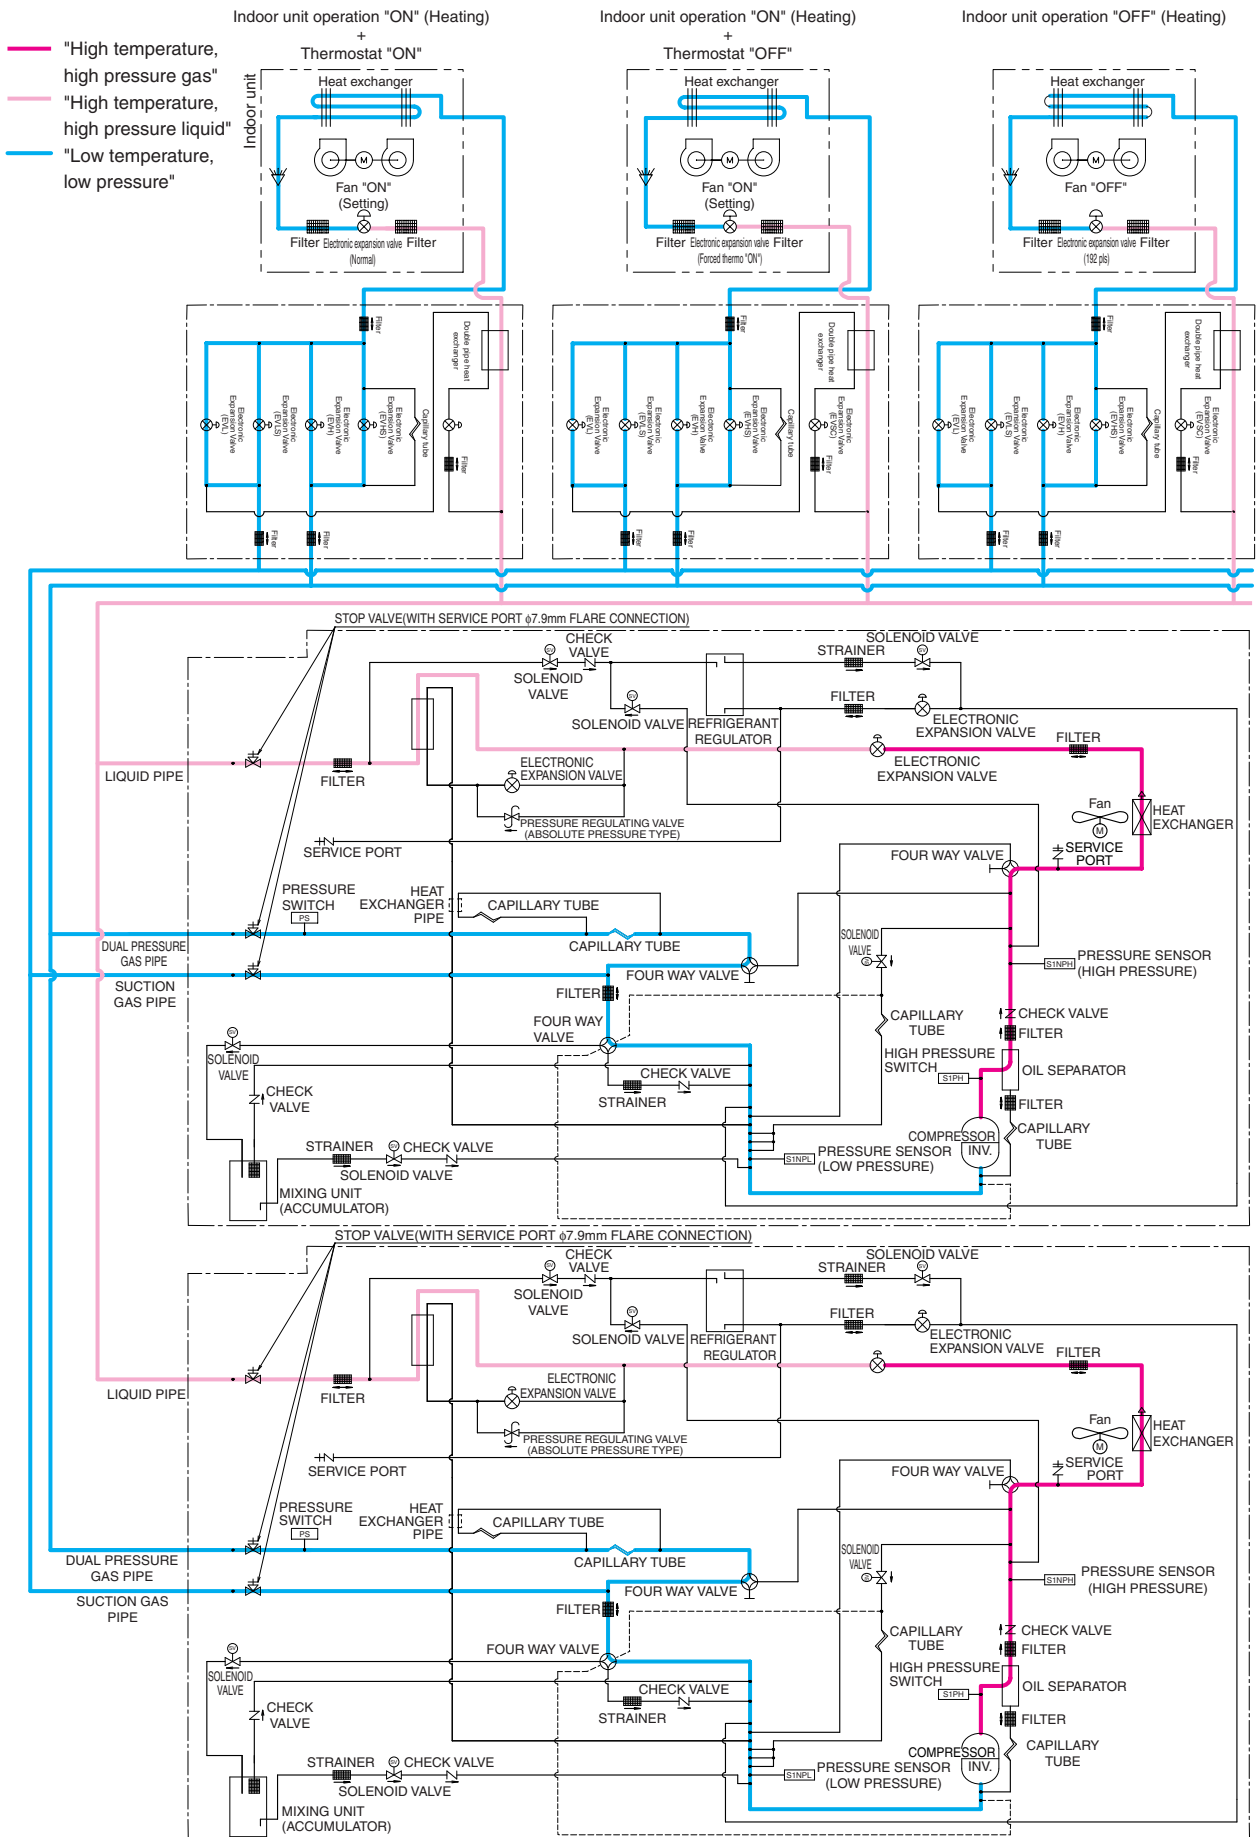


Defrost 1 Operation

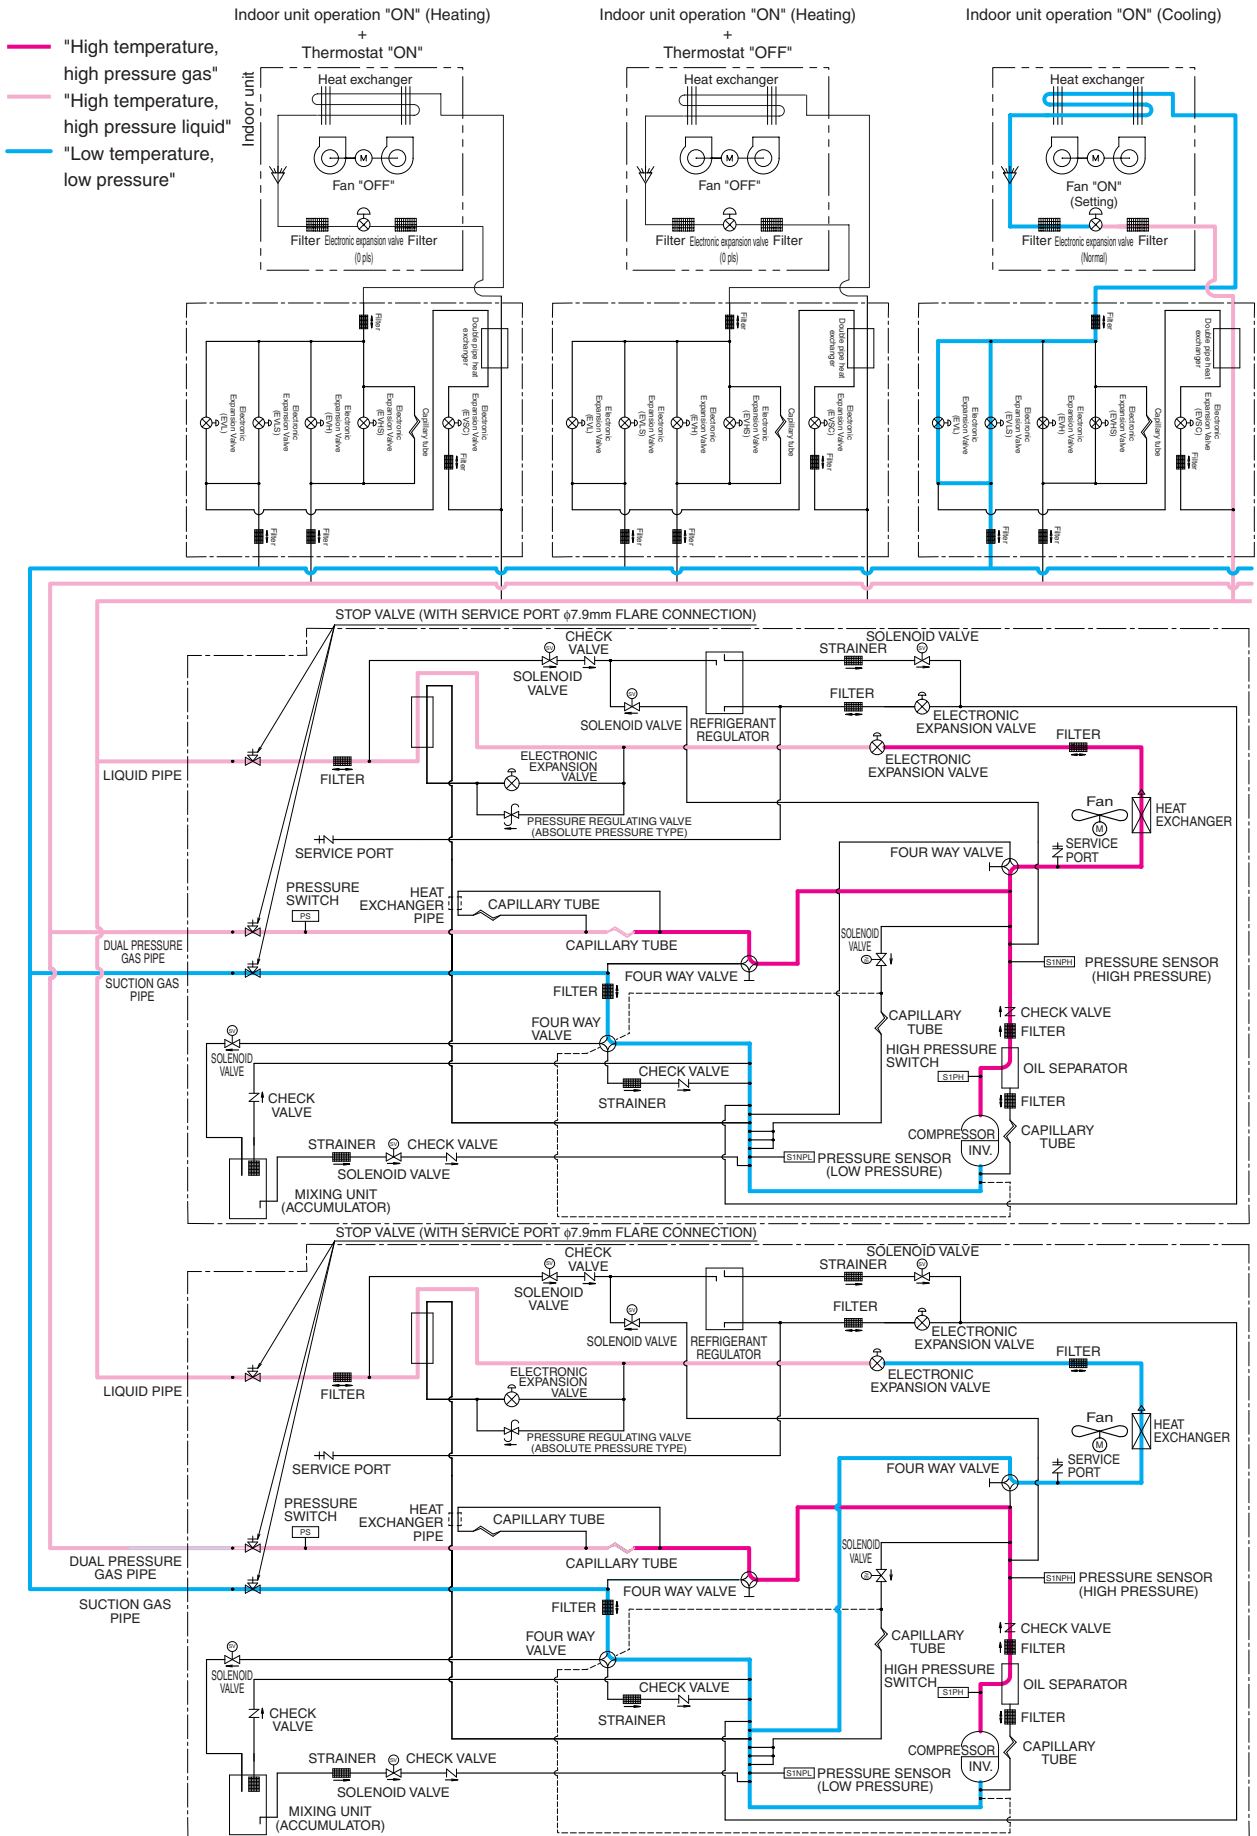

Defrost 2 Operation

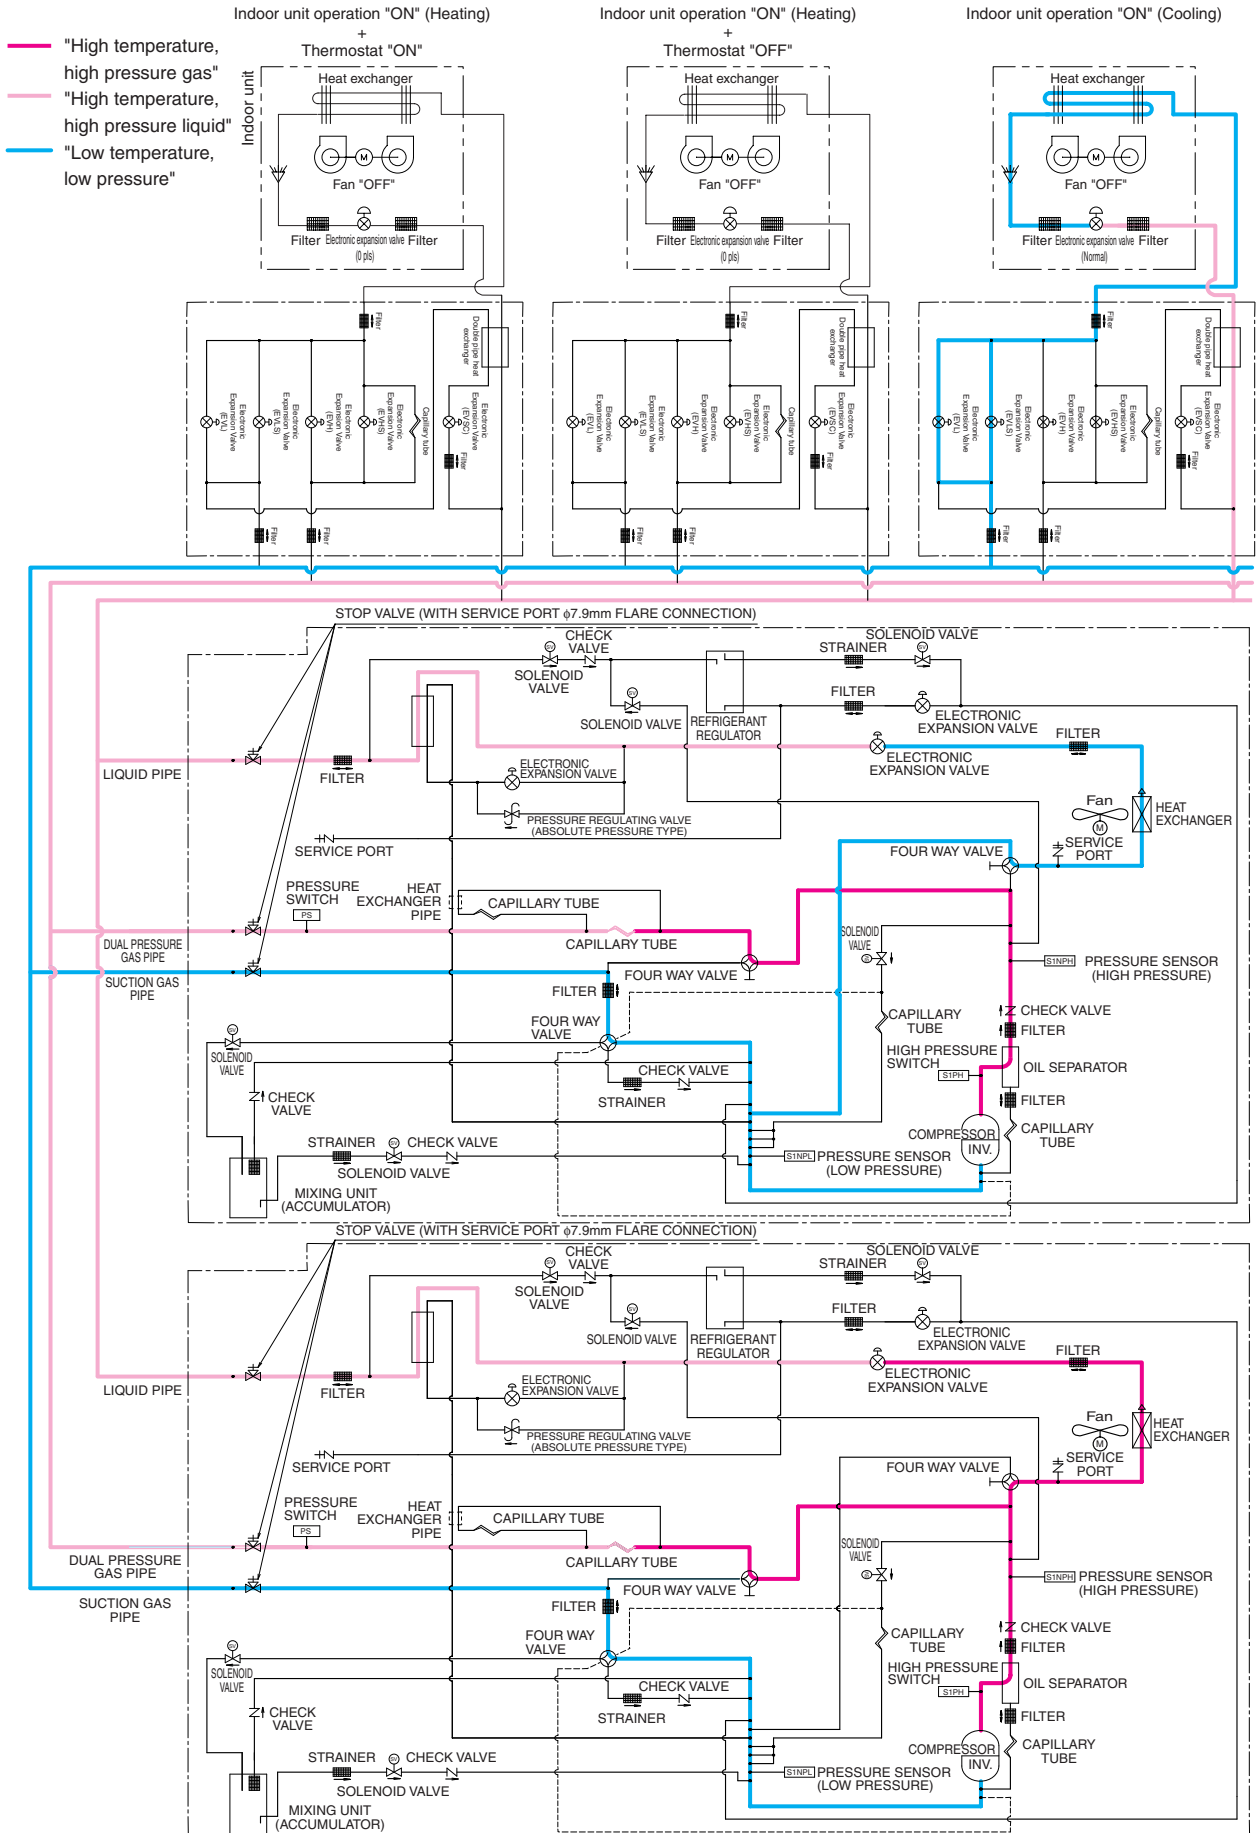

Simultaneous Cooling / Heating Operation

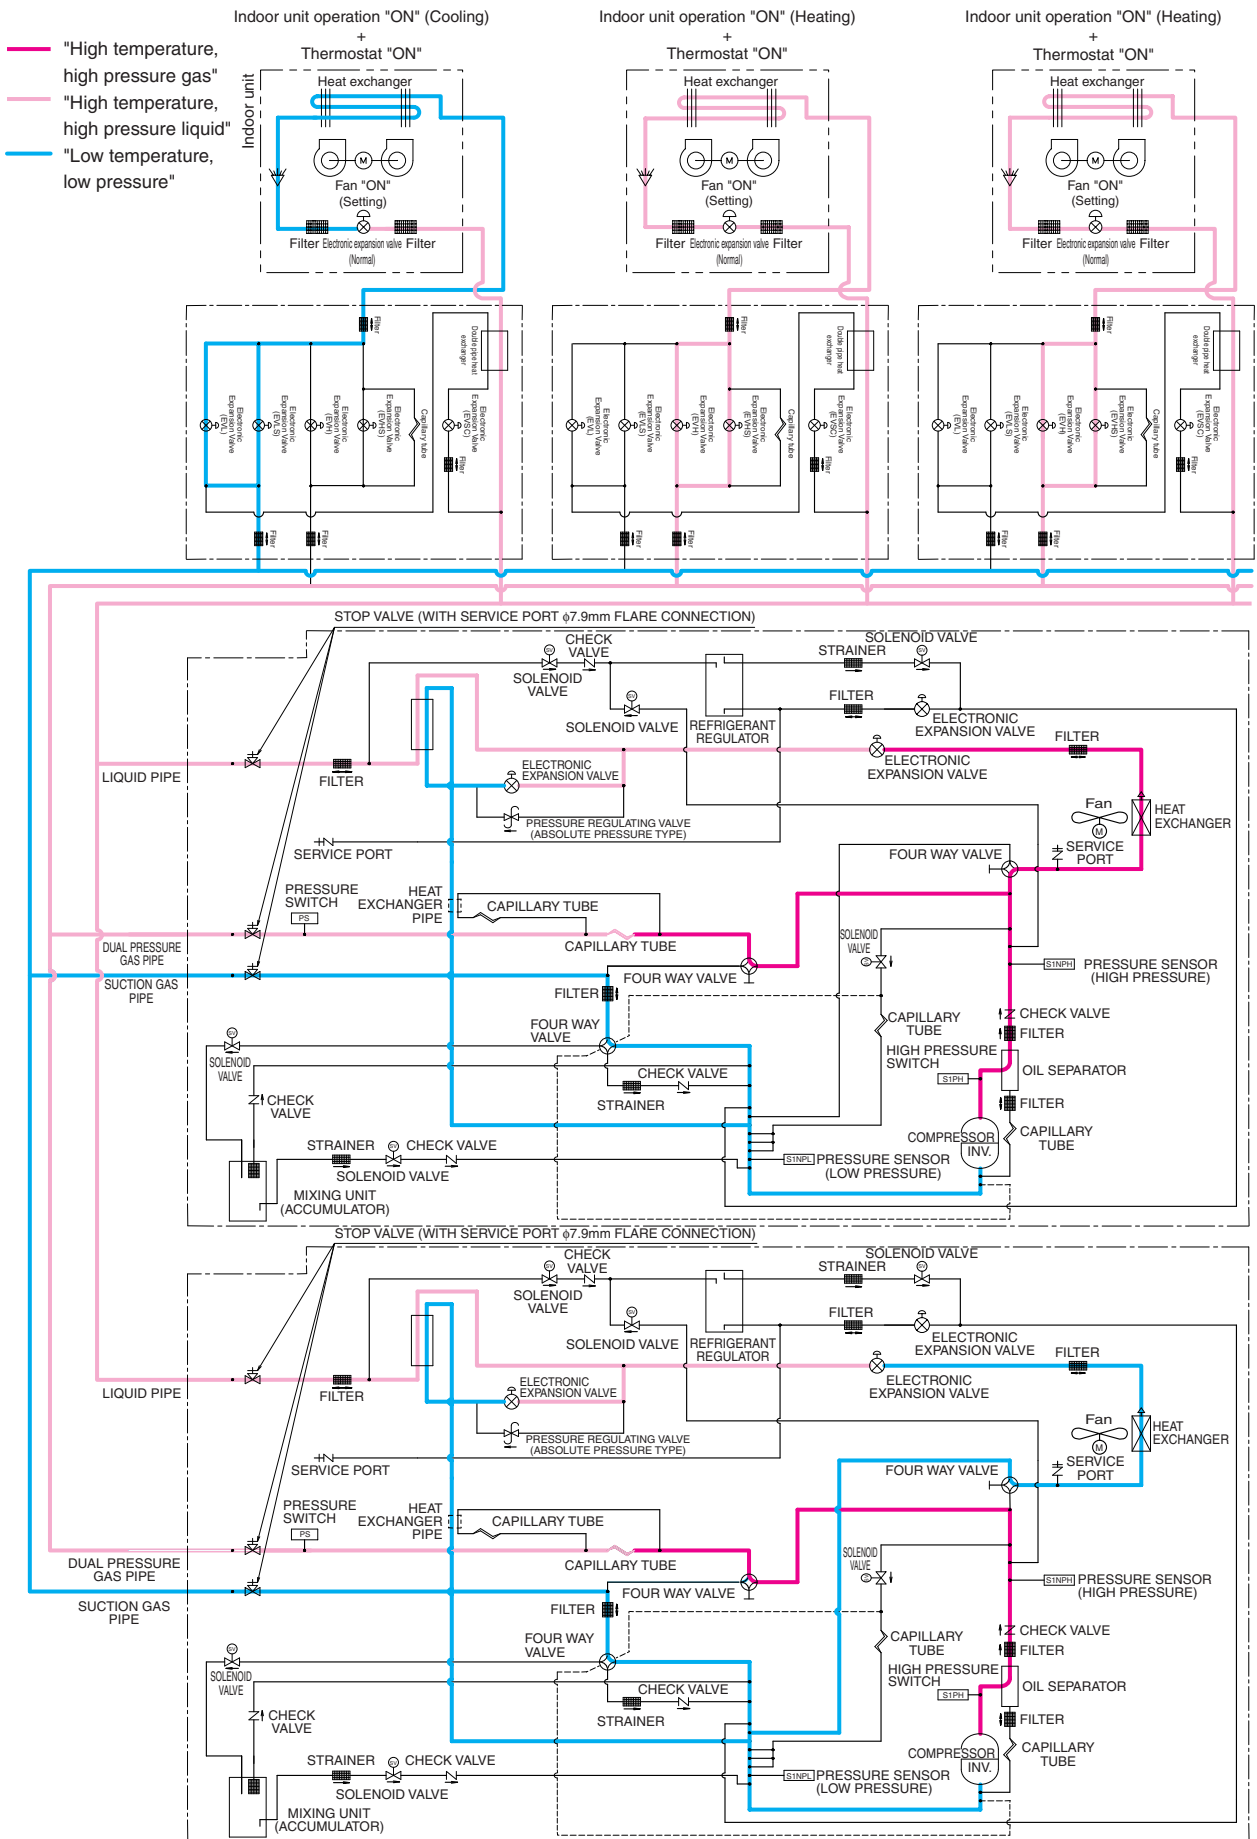


Part 4

Function and Control

1. Function General.....	34
1.1 Operation Mode.....	34
1.2 Symbol	35
2. Detailed Control Functions.....	36
2.1 Stop Operation	36
2.2 Standby	36
2.3 Rotation Control	36
2.4 Startup Control	38
2.5 Normal Operation.....	39
2.6 Protection Control.....	47
2.7 Special Control.....	52

1. Function General

1.1 Operation Mode

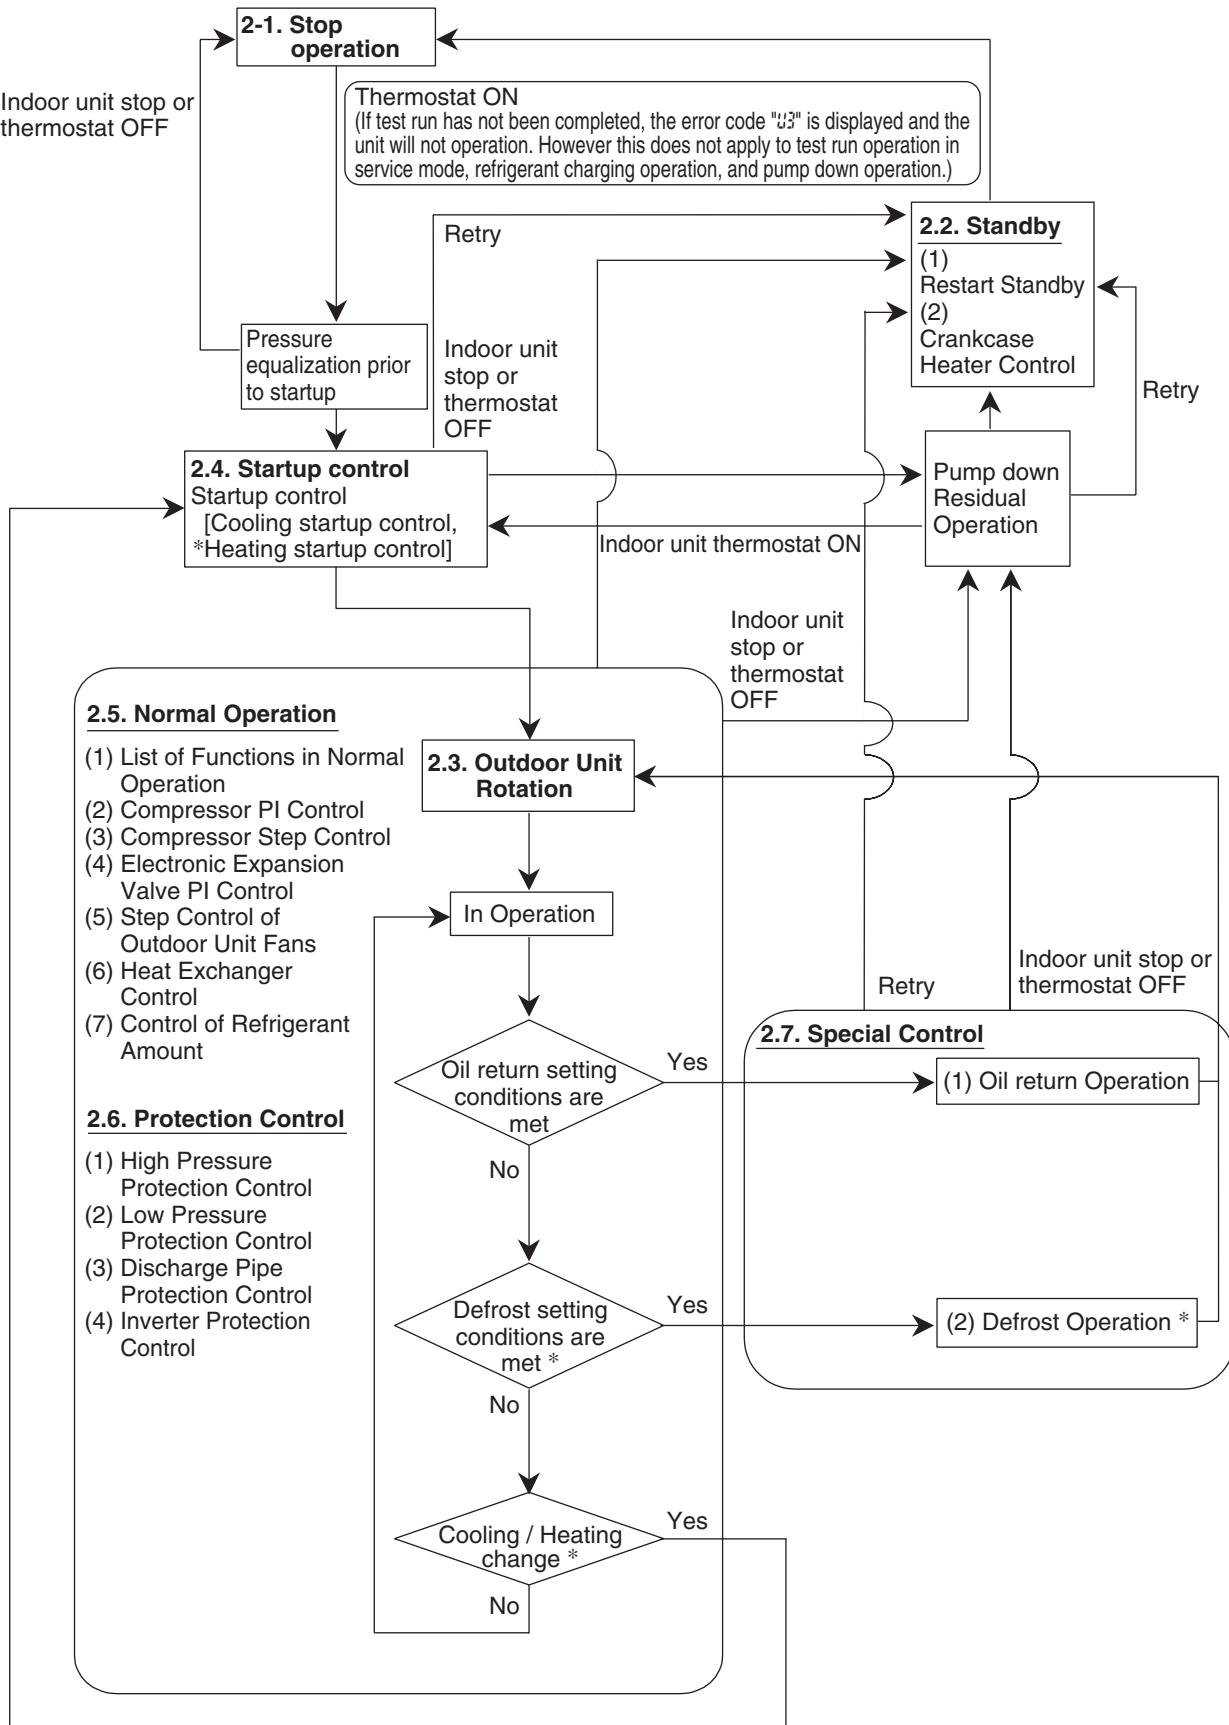

Note:

* This function does not used because there is no heating operation.

1.2 Symbol

Symbol	Electric Symbol	Description of Function
20SA	Y6S	Four way valve (Heat exchanger switch)
20SB	Y7S	Four way valve (Dual pressure gas pipe switch)
	Y8S	Four way valve (Mixing unit)
DSH	—	Discharge pipe superheated degree
DSHi	—	Discharge pipe superheated degree of INV. compressor
DSHs	—	Discharge pipe superheated degree of STD compressor
EV	—	Opening of electronic expansion valve
EVJ	Y2E	Electronic expansion valve (Refrigerant charge)
EVM	Y1E	Electronic expansion valve (Main)
EVT	Y3E	Electronic expansion valve (Subcooling)
HTdi	—	Value of INV. compressor discharge pipe temperature compensated with outdoor air temperature
HTds	—	Value of STD compressor discharge pipe temperature compensated with outdoor air temperature
Pc	S1NPH	Value detected by high pressure sensor
Pe	S1NPL	Value detected by low pressure sensor
SH	—	Evaporator outlet superheated degree
SHS	—	Target evaporator outlet superheated degree
SVB	Y5S	Solenoid valve (Circuit of oil return)
SVG1	Y1S	Solenoid valve (Refrigerant regulator hot gas)
SVG2	Y3S	Solenoid valve (Refrigerant regulator gas vent pipe)
SVL	Y2S	Solenoid valve (Refrigerant regulator liquid pipe)
SVP	Y4S	Solenoid valve (Hot gas)
Ta	R1T	Outdoor air temperature
Tb	R6T	Heat exchanger outlet temperature at cooling
Tc	—	High pressure equivalent saturation temperature
TcS	—	Target temperature of Tc
Tdi	R2T	Discharge pipe temperature of INV. compressor
Te	—	Low pressure equivalent saturation temperature
TeS	—	Target temperature of Te
Tf	R3T	Temperature of liquid pipe between outdoor unit heat exchanger and main electronic expansion valve
Tfin	R1T (A3P)	Radiation fin temperature
Tg	R4T	Heat exchanger gas pipe temperature
Tl	R8T	Temperature of liquid pipe between main electronic expansion valve and subcooling heat exchanger
Tp	—	Calculated value of compressor port temperature
TsA	R5T	Suction pipe temperature
Tsc	R9T	Temperature of liquid pipe
Tsh	R7T	Temperature of gas pipe detected with the subcooling heat exchanger outlet thermistor

2. Detailed Control Functions

2.1 Stop Operation

2.1.1 Stop due to Error

In order to protect compressors, if any of the abnormal state occurs, the system will make "stop with thermostat OFF" and the error will be determined according to the number of retry times.

(Refer to "Error code list" (P.97~) of the troubleshooting for the items to determine the error.)

* Operation to determine the error: "Stop the system" and "error code" is displayed on the remote controller.

2.1.2 When System is in Stop Mode

Stop both the master and slave units.

The four way valves both for heat exchanger switch and piping switch retain the condition before they were stopped.

2.2 Standby


2.2.1 Restart Standby

Used to forcedly stop the compressor for a period of 3 minutes, in order to prevent the frequent ON/OFF of the compressor and equalize the pressure within the refrigerant system.

In addition, the outdoor unit fan carry out the residual operation for a while to suppress the acceleration of the pressure equalizing and melting of the refrigerant to the evaporator.

2.2.2 Crankcase Heater Control

In order to prevent the refrigerant from melting in the compressor oil in the stopped mode, this mode is used to control the crankcase heater.

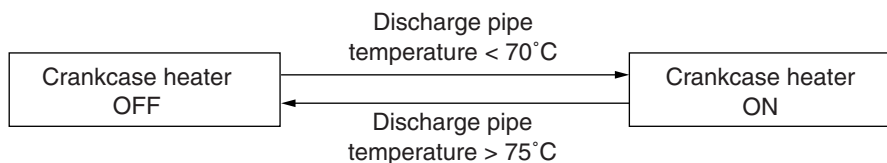

2.3 Rotation Control

2.3.1 Outdoor Unit Rotation

In the case of multi outdoor unit system, this outdoor unit rotation is used to prevent the compressor from burning out due to unbalanced oil level between outdoor units.

[Details of outdoor unit rotation]

In the case of multi outdoor unit system, each outdoor unit is given an operating priority for the control.


Outdoor unit rotation makes it possible to change the operating priority of outdoor units.

Thus, the system becomes free of compressors that stop over an extended period of time at the time of partial loading, preventing unbalanced oil level.

[Timing of outdoor unit rotation]

- OR (
- At the beginning of the starting control
 - When any of outdoor unit stops for a period of 20 minutes or more (in heating)

Example) The following diagram shows outdoor unit rotation in combination of 3 outdoor units. (in heating)

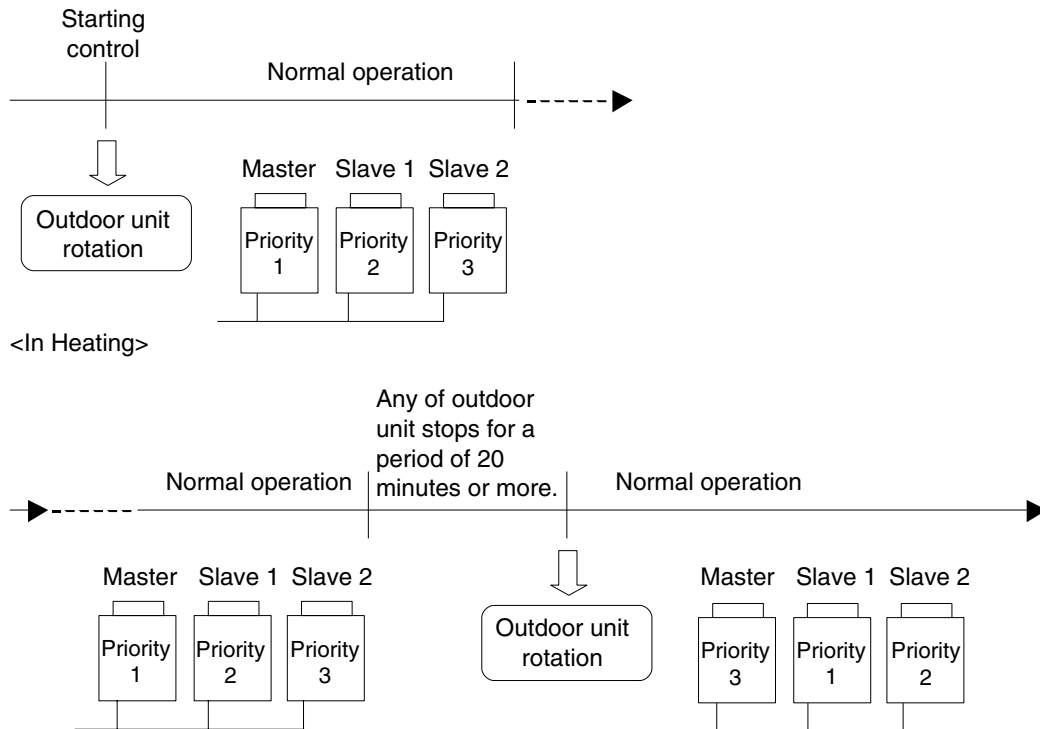

* "Master unit", "slave unit 1" and "slave unit 2" in this section are the names for installation. They are determined in installation work, and not changed thereafter. (These names are different from "master unit" and "slave unit" for control.)
 The outdoor unit connected the control wires (F1 and F2) for the indoor unit should be designated as master unit.
 Consequently, The LED display on the main PCB for "master unit", "slave unit 1" and "slave unit 2" do not change.

<System with 2 outdoor units>

	Outdoor Unit 1	Outdoor Unit 2
Previous time	Priority 1	Priority 2
This time	Priority 2	Priority 1
Next time	Priority 1	Priority 2

<System with 3 outdoor units>

	Outdoor Unit 1	Outdoor Unit 2	Outdoor Unit 3
Previous time	Priority 1	Priority 2	Priority 3
This time	Priority 3	Priority 1	Priority 2
Next time	Priority 2	Priority 3	Priority 1
One time after the next	Priority 1	Priority 2	Priority 3


<System with 4 outdoor units>

	Outdoor Unit 1	Outdoor Unit 2	Outdoor Unit 3	Outdoor Unit 3
Previous time	Priority 1	Priority 2	Priority 3	Priority 4
This time	Priority 4	Priority 1	Priority 2	Priority 3
Next time	Priority 3	Priority 4	Priority 1	Priority 2
One time after the next	Priority 2	Priority 3	Priority 4	Priority 1
One time after the next plus one	Priority 1	Priority 2	Priority 3	Priority 4

2.4 Startup Control

This control is used to equalize the pressure in the front and back of the compressor prior to the startup of the compressor, thus reducing startup loads. Furthermore, the inverter is turned ON to charge the capacitor. To avoid stresses to the compressor due to oil return or else after the startup, the following control is made and the position of the four way valve is also determined. Start both the master and the slave units simultaneously to position the four way valve.


(1) Startup Control in Cooling

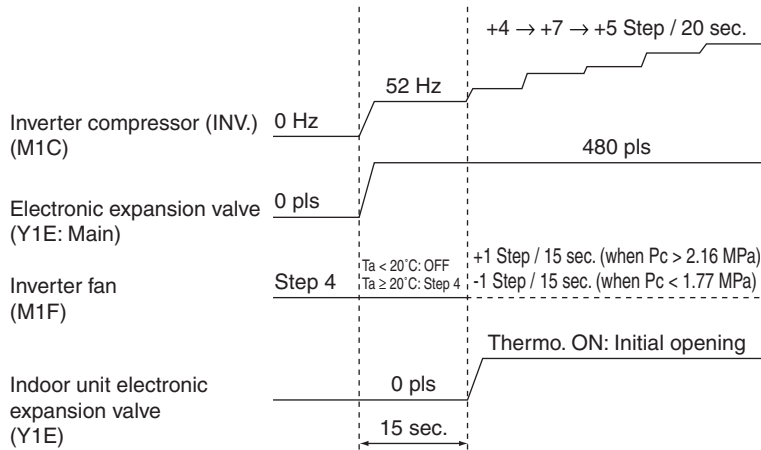

[Ending conditions]

- OR
- A lapse of 90 sec.
 - T_c (high pressure equivalent saturation temperature) $> 48^\circ\text{C}$
 - $P_c - P_e > 0.39\text{MPa}$.


(2) Startup Control in Heating (Outdoor unit heat exchanger = Evaporator)

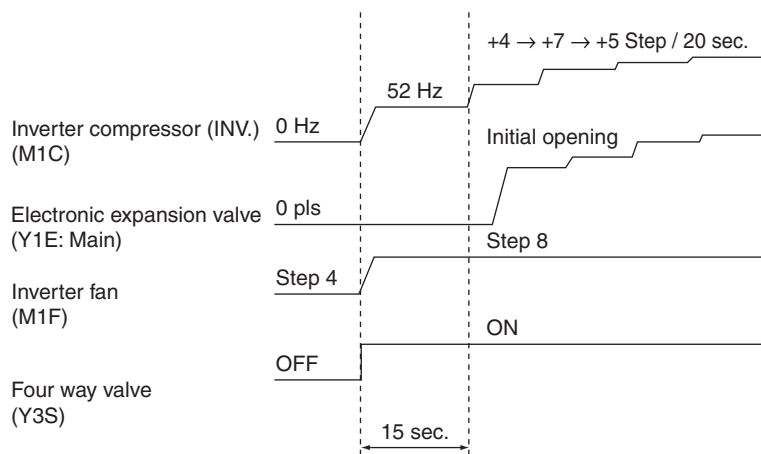

[Ending conditions]

- OR
- A lapse of 90 sec.
 - $P_c - P_e > 0.39\text{MPa}$.

(3) Startup Control in Heating (Outdoor unit heat exchanger = Condenser)

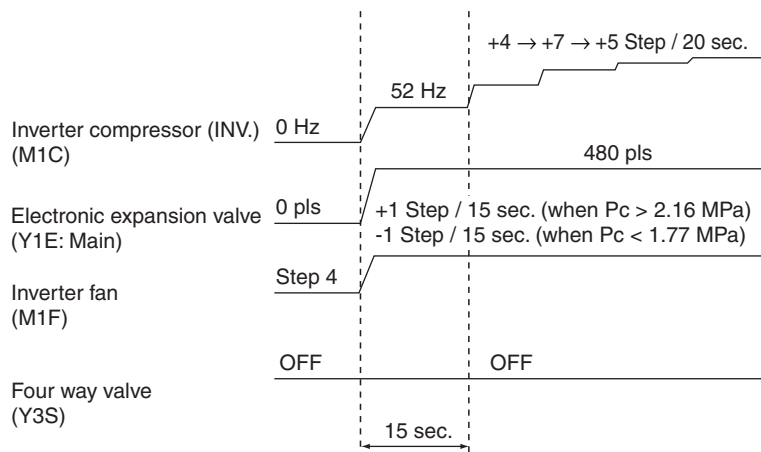

[Ending conditions]

- OR
- A lapse of 90 sec.
 - $P_c - P_e > 0.39\text{MPa}$.

2.5 Normal Operation

2.5.1 List of Functions in Normal Operation

<Outdoor Unit>

Part Name	Electric Symbol	Normal Cooling	Normal Heating	Normal Simultaneous Cooling / Heating
Compressor	M1C	PI control, High pressure protection, Low pressure protection, Td protection, INV. protection	PI control, High pressure protection, Low pressure protection, Td protection, INV. protection	PI control, High pressure protection, Low pressure protection, Td protection, INV. protection
Outdoor unit fan	M1F	Cooling fan control	<ul style="list-style-type: none"> Outdoor unit heat exchanger: Condenser / Cooling fan control Outdoor unit heat exchanger: Evaporator / Fan step 7 or 8 	<ul style="list-style-type: none"> Outdoor unit heat exchanger: Condenser / Cooling fan control Outdoor unit heat exchanger: Evaporator / Fan step 7 or 8
Electronic expansion valve (Main)	Y1E	480 pls	<ul style="list-style-type: none"> Outdoor unit heat exchanger: Condenser / Liquid pressure control Outdoor unit heat exchanger: Evaporator / PI control 	<ul style="list-style-type: none"> Outdoor unit heat exchanger: Condenser / Liquid pressure control Outdoor unit heat exchanger: Evaporator / PI control
Electronic expansion valve (Subcooling)	Y3E	PI control	PI control	PI control
Electronic expansion valve (Refrigerant charge)	Y2E	41 pls for refrigerant discharge	41 pls for refrigerant discharge	41 pls for refrigerant discharge
Solenoid valve (Refrigerant regulator hot gas)	Y1S	ON for refrigerant discharge	ON for refrigerant discharge	ON for refrigerant discharge
Solenoid valve (Refrigerant regulator liquid pipe)	Y2S	ON for refrigerant recovery	ON for refrigerant recovery	ON for refrigerant recovery
Solenoid valve (Refrigerant regulator gas vent pipe)	Y3S	ON for refrigerant recovery	ON for refrigerant recovery	ON for refrigerant recovery
Solenoid valve (Hot gas)	Y4S	OFF	OFF	OFF
Solenoid valve (Circuit of oil return)	Y5S	ON	ON	ON
Four way valve (Heat exchanger switch)	Y6S	OFF	<ul style="list-style-type: none"> Outdoor unit heat exchanger: Condenser / OFF Outdoor unit heat exchanger: Evaporator / ON 	<ul style="list-style-type: none"> Outdoor unit heat exchanger: Condenser / OFF Outdoor unit heat exchanger: Evaporator / ON
Four way valve (Dual pressure gas pipe)	Y7S	ON	OFF	OFF
Four way valve (Mixing unit)	Y8S	OFF	OFF	OFF
Solenoid valve (Mixing unit inlet)	Y9S	OFF	OFF	OFF

<Indoor Unit>

Part Name	Electric Symbol	Normal cooling			Normal heating		
		Thermostat ON unit	Thermostat OFF unit	Stopping unit	Thermostat ON unit	Thermostat OFF unit	Stopping unit
Indoor unit fan	M1F	Remote controller setting	Remote controller setting	OFF	Remote controller setting	LL	OFF
Electronic expansion valve (Main)	Y1E	Normal opening	0 pls	0 pls	Normal opening	192 pls	192 pls

<BS Unit>

Part Name	Electric Symbol	Normal cooling	Normal heating
Electronic expansion valve (EVSC)	Y1E	0 pls	0 pls
Electronic expansion valve (EVHS)	Y2E	480 pls (fully opened)	480 pls (fully opened)
Electronic expansion valve (EVLS)	Y3E	480 pls (fully opened)	0 pls
Electronic expansion valve (EVH)	Y4E	760 pls (fully opened)	760 pls (fully opened)
Electronic expansion valve (EVL)	Y5E	760 pls (fully opened)	0 pls

2.5.2 Compressor PI Control

Carries out the compressor capacity PI control to maintain T_e at constant during cooling operation and T_c at constant during heating operation to ensure stable unit performance.

[Cooling operation]

Controls compressor capacity to adjust T_e to achieve target value (T_eS).
 T_e set value (Make this setting while in Setting mode 2.)

T_e setting

L	M (Normal) (factory setting)	H				
3°C	6°C	7°C	8°C	9°C	10°C	11°C

T_e : Low pressure equivalent saturation temperature (°C)

T_eS : Target temperature of T_e (Varies depending on T_e setting, operating frequency, etc.)



Note:

* On multi outdoor unit systems, this control is made according to values of the first-priority unit, which is detected with the pressure sensor.

[Heating operation]

Controls compressor capacity to adjust T_c to achieve target value (T_cS).
 T_c set value (Make this setting while in Setting mode 2.)

T_c setting

L	M (Normal) (factory setting)	H
43°C	46°C	47°C

T_c : High pressure equivalent saturation temperature (°C)

T_cS : Target temperature of T_c (Varies depending on T_c setting, operating frequency, etc.)



Note:

* On multi outdoor unit systems, this control is made according to values of the first-priority unit, which is detected with the pressure sensor.

2.5.3 Compressor Step Control

Compressor operations vary with the following steps according to information in “2.5.2 Compressor PI Control”.

RQYQ140 · 180PY1

STEP No.	INV.
1	52Hz ← Initial step
2	56Hz
3	62Hz
4	68Hz
5	74Hz
6	80Hz
7	88Hz
8	96Hz
9	104Hz
10	110Hz
11	116Hz
12	124Hz
13	132Hz
14	144Hz
15	158Hz
16	166Hz
17	176Hz
18	188Hz
19	202Hz
20	210Hz *1
21	218Hz
22	232Hz
23	248Hz *2

*1: Upper limit of Q140 type is 20.

*2: Upper limit of Q180 type is 23.

RQCYQ280 · 360PY1

STEP No.	Master INV.	Slave INV.
1	52Hz	OFF
2	56Hz	OFF
3	62Hz	OFF
4	68Hz	OFF
5	74Hz	OFF
6	80Hz	OFF
7	88Hz	OFF
8	96Hz	OFF
9	104Hz	OFF ←
10	110Hz	OFF
11	116Hz	OFF
12	124Hz	OFF
13	132Hz	OFF
14	144Hz	OFF →

*1: Upper limit of Q140 type is 22.

*2: Upper limit of Q180 type is 25.

1	52Hz	52Hz ← Initial step
2	56Hz	56Hz
3	62Hz	62Hz
4	66Hz	66Hz
5	70Hz	70Hz
6	74Hz	74Hz
7	80Hz	80Hz
8	88Hz	88Hz
9	92Hz	92Hz
10	96Hz	96Hz
11	104Hz	104Hz
12	110Hz	110Hz
13	116Hz	116Hz
14	124Hz	124Hz
15	132Hz	132Hz
16	144Hz	144Hz
17	158Hz	158Hz
18	166Hz	166Hz
19	176Hz	176Hz
20	188Hz	188Hz
21	202Hz	202Hz
22	210Hz	210Hz *1
23	218Hz	218Hz
24	232Hz	232Hz
25	248Hz	248Hz *2

RQCYQ460 ~ 540PY1

RQCEQ460 ~ 636PY1

STEP No.	Master INV.	Slave 1 INV.	Slave 2 INV.
1	52Hz	OFF	OFF
2	56Hz	OFF	OFF
3	62Hz	OFF	OFF
4	68Hz	OFF	OFF
5	74Hz	OFF	OFF
6	80Hz	OFF	OFF
7	88Hz	OFF	OFF
8	96Hz	OFF	OFF
9	104Hz	OFF	OFF
10	110Hz	OFF	OFF
11	116Hz	OFF	OFF
12	124Hz	OFF	OFF
13	132Hz	OFF	OFF
14	144Hz	OFF	OFF

1	52Hz	52Hz	OFF
2	56Hz	56Hz	OFF
3	62Hz	62Hz	OFF
4	66Hz	66Hz	OFF
5	70Hz	70Hz	OFF
6	74Hz	74Hz	OFF
7	80Hz	80Hz	OFF
8	88Hz	88Hz	OFF
9	92Hz	92Hz	OFF
10	96Hz	96Hz	OFF
11	104Hz	104Hz	OFF
12	110Hz	110Hz	OFF
13	116Hz	116Hz	OFF

1	52Hz	52Hz	52Hz
2	56Hz	56Hz	56Hz
3	62Hz	62Hz	62Hz
4	66Hz	66Hz	66Hz
5	68Hz	68Hz	68Hz
6	70Hz	70Hz	70Hz
7	74Hz	74Hz	74Hz
8	80Hz	80Hz	80Hz
9	88Hz	88Hz	88Hz
10	96Hz	96Hz	96Hz
11	104Hz	104Hz	104Hz
12	110Hz	110Hz	110Hz
13	116Hz	116Hz	116Hz
14	124Hz	124Hz	124Hz
15	132Hz	132Hz	132Hz
16	138Hz	138Hz	138Hz
17	144Hz	144Hz	144Hz
18	158Hz	158Hz	158Hz
19	166Hz	166Hz	166Hz
20	176Hz	176Hz	176Hz
21	188Hz	188Hz	188Hz
22	202Hz	202Hz	202Hz
23	210Hz	210Hz	210Hz
24	218Hz	218Hz	218Hz
25	232Hz	232Hz	232Hz
26	248Hz	248Hz	248Hz
27	266Hz	266Hz	266Hz

← Initial step

*1: Upper limit of Q140 type is 23.
 *2: Upper limit of Q180 type is 26.
 *3: Upper limit of Q212 type is 27.

RQCEQ712 ~ 848PY1

STEP No.	Master INV.	Slave 1 INV.	Slave 2 INV.	Slave 3 INV.
1	52Hz	OFF	OFF	OFF
2	56Hz	OFF	OFF	OFF
3	62Hz	OFF	OFF	OFF
4	68Hz	OFF	OFF	OFF
5	74Hz	OFF	OFF	OFF
6	80Hz	OFF	OFF	OFF
7	88Hz	OFF	OFF	OFF
8	96Hz	OFF	OFF	OFF
9	104Hz	OFF	OFF	OFF
10	110Hz	OFF	OFF	OFF
11	116Hz	OFF	OFF	OFF
12	124Hz	OFF	OFF	OFF
13	132Hz	OFF	OFF	OFF
14	144Hz	OFF	OFF	OFF

1	52Hz	52Hz	OFF	OFF
2	56Hz	56Hz	OFF	OFF
3	62Hz	62Hz	OFF	OFF
4	66Hz	66Hz	OFF	OFF
5	70Hz	70Hz	OFF	OFF
6	74Hz	74Hz	OFF	OFF
7	80Hz	80Hz	OFF	OFF
8	88Hz	88Hz	OFF	OFF
9	92Hz	92Hz	OFF	OFF
10	96Hz	96Hz	OFF	OFF
11	104Hz	104Hz	OFF	OFF
12	110Hz	110Hz	OFF	OFF
13	116Hz	116Hz	OFF	OFF

1	52Hz	52Hz	52Hz	OFF
2	56Hz	56Hz	56Hz	OFF
3	62Hz	62Hz	62Hz	OFF
4	66Hz	66Hz	66Hz	OFF
5	68Hz	68Hz	68Hz	OFF
6	70Hz	70Hz	70Hz	OFF
7	74Hz	74Hz	74Hz	OFF
8	80Hz	80Hz	80Hz	OFF
9	88Hz	88Hz	88Hz	OFF
10	96Hz	96Hz	96Hz	OFF
11	104Hz	104Hz	104Hz	OFF
12	110Hz	110Hz	110Hz	OFF
13	116Hz	116Hz	116Hz	OFF
14	124Hz	124Hz	124Hz	OFF

1	52Hz	52Hz	52Hz	52Hz
2	56Hz	56Hz	56Hz	56Hz
3	62Hz	62Hz	62Hz	62Hz
4	66Hz	66Hz	66Hz	66Hz
5	68Hz	68Hz	68Hz	68Hz
6	70Hz	70Hz	70Hz	70Hz
7	74Hz	74Hz	74Hz	74Hz
8	80Hz	80Hz	80Hz	80Hz
9	88Hz	88Hz	88Hz	88Hz
10	96Hz	96Hz	96Hz	96Hz
11	104Hz	104Hz	104Hz	104Hz
12	110Hz	110Hz	110Hz	110Hz
13	116Hz	116Hz	116Hz	116Hz
14	124Hz	124Hz	124Hz	124Hz
15	132Hz	132Hz	132Hz	132Hz
16	138Hz	138Hz	138Hz	138Hz
17	144Hz	144Hz	144Hz	144Hz
18	158Hz	158Hz	158Hz	158Hz
19	166Hz	166Hz	166Hz	166Hz
20	176Hz	176Hz	176Hz	176Hz
21	188Hz	188Hz	188Hz	188Hz
22	202Hz	202Hz	202Hz	202Hz
23	210Hz	210Hz	210Hz	210Hz
24	218Hz	218Hz	218Hz	218Hz
25	232Hz	232Hz	232Hz	232Hz
26	248Hz	248Hz	248Hz	248Hz
27	266Hz	266Hz	266Hz	266Hz

← Initial step

*1: Upper limit of Q140 type is 23.
 *2: Upper limit of Q180 type is 26.
 *3: Upper limit of Q212 type is 27.

2.5.4 Electronic Expansion Valve PI Control

Main electronic expansion valve EVM control

When the outdoor unit heat exchanging is performed via the evaporator (20SA is set to ON), this function is used to exert PI control on the electronic expansion valve (Y1E) so that the evaporator outlet superheated degree (SH) will become constant.

$$SH = T_g - T_e$$

SH: Evaporator outlet superheated degree (°C)

T_g: Suction pipe temperature (°C) detected by the heat exchanger gas pipe thermistor R4T.

T_e: Low pressure equivalent saturation temperature (°C)

Subcooling electronic expansion valve EVT control

In order to make the maximum use of the subcooling heat exchanger, this function is used to exert PI control on the electronic expansion valve (Y3E) so that the evaporator-side gas pipe superheated degree (SH) will become constant.

$$SH = T_{sh} - T_e$$

SH: Outlet superheated degree of evaporator (°C)

T_{sh}: Suction pipe temperature (°C) detected by the subcooling heat exchanger outlet thermistor R7T

T_e: Low pressure equivalent saturation temperature (°C)

Refrigerant charge electronic expansion valve EVJ control

While in automatic refrigerant charge mode or additional refrigerant charge mode, this function is used to exert PI control on the opening degree of the electronic expansion valve (Y2E) in response to outdoor air temperature and close the valve after the completion of refrigerant charge.

For normal operation, this electronic expansion valve is set to "41 pls".

2.5.5 Step Control of Outdoor Unit Fans

[Step control of fans]

Used to control the revolutions of outdoor unit fans in the steps listed in table below, according to condition changes.

STEP No.	Fan revolutions (rpm)		
	RQYQ140PY1 RREQ140PY1	RQYQ180PY1 RREQ180PY1	RREQ212PY1
1	285	285	285
2	315	315	315
3	360	360	360
4	450	450	450
5	570	570	570
6	710	710	710
7	830	855	855
8	Cooling: 951 Heating: 941	1100	1100



Note:

*Figures listed above are all those controlled while in standard mode, which vary when the system is set to high static pressure or capacity precedence mode.


[Control at a low outdoor air temperature during cooling]

Secure the liquid pressure and circulating rate in the indoor unit through high pressure control with the outdoor unit fan when the outdoor air temperature is low during cooling. Control the fan with the target T_c (high pressure equivalent saturation temperature) = 34°C

2.5.6 Heat Exchanger Control

While in heating or simultaneous cooling / heating operation, ensure target condensing and evaporating temperature by changing over the air heat exchanger of outdoor unit to the evaporator or the condenser in response to loads.


[Single system]

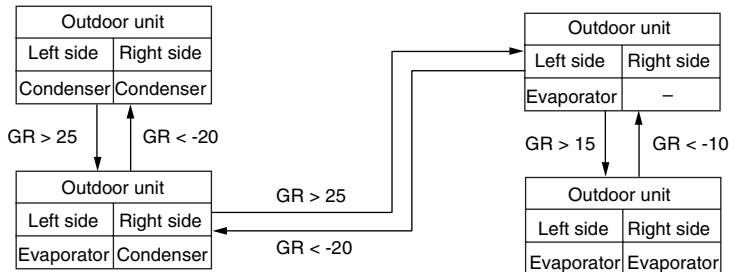

Note:

- "GR" is a numeric value representing the current balanced condition and calculated from target condensing temperature, target evaporating temperature, current condensing temperature, and current evaporating temperature.

[Multi outdoor unit system]

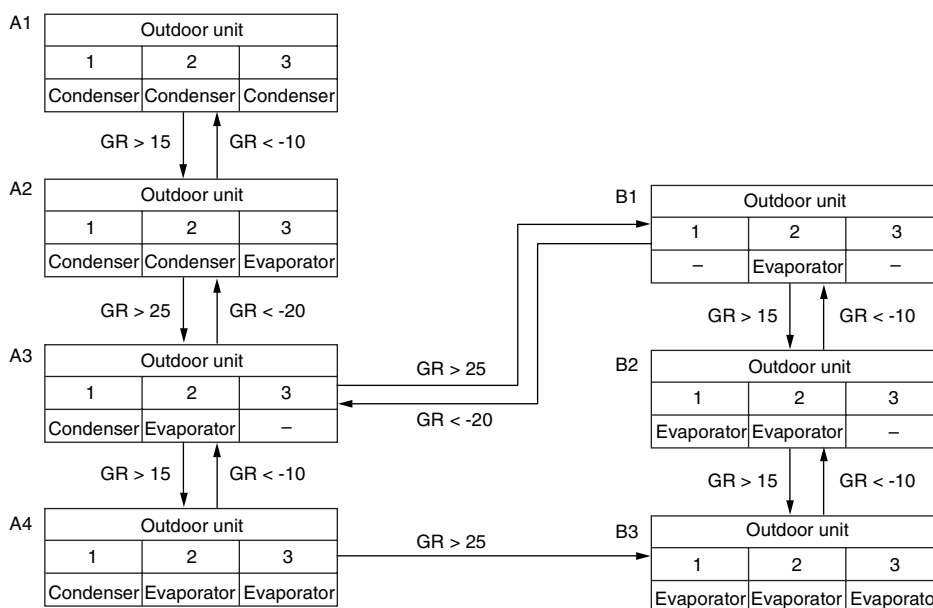


Note:

- "GR" is a numeric value representing the current balanced condition and calculated from target condensing temperature, target evaporating temperature, current condensing temperature, and current evaporating temperature.
- On the system with 2 outdoor units, if there is no step for the destination of transition, that step will be skipped.

2.5.7 Control of Refrigerant Amount


<Recovery of refrigerant>

Open the solenoid valve (Y2S, Y3S) when the load of the indoor unit is low and return the surplus refrigerant to the refrigerant regulator.

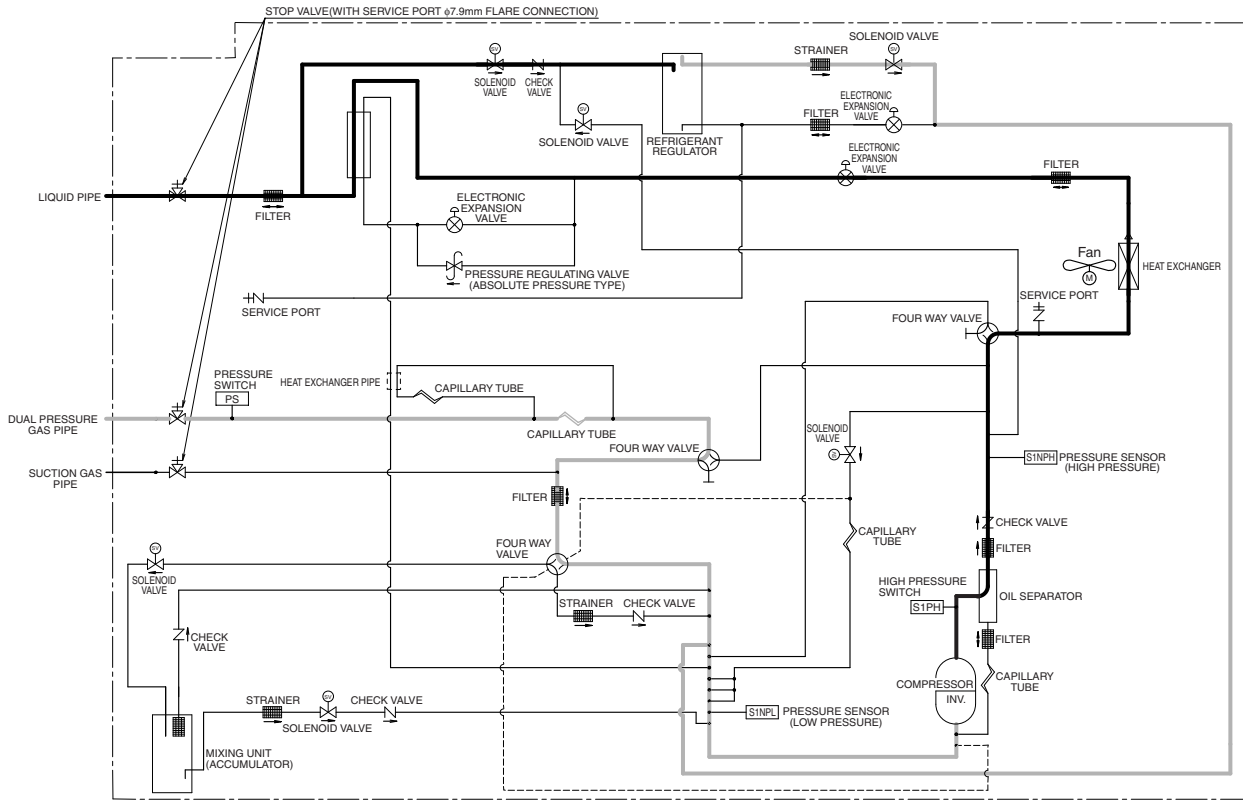

<Discharge of refrigerant>

Open the solenoid valve (Y1S) and the electronic expansion valve (Y2E) when the load of the indoor unit is high and discharge the refrigerant from the refrigerant regulator.

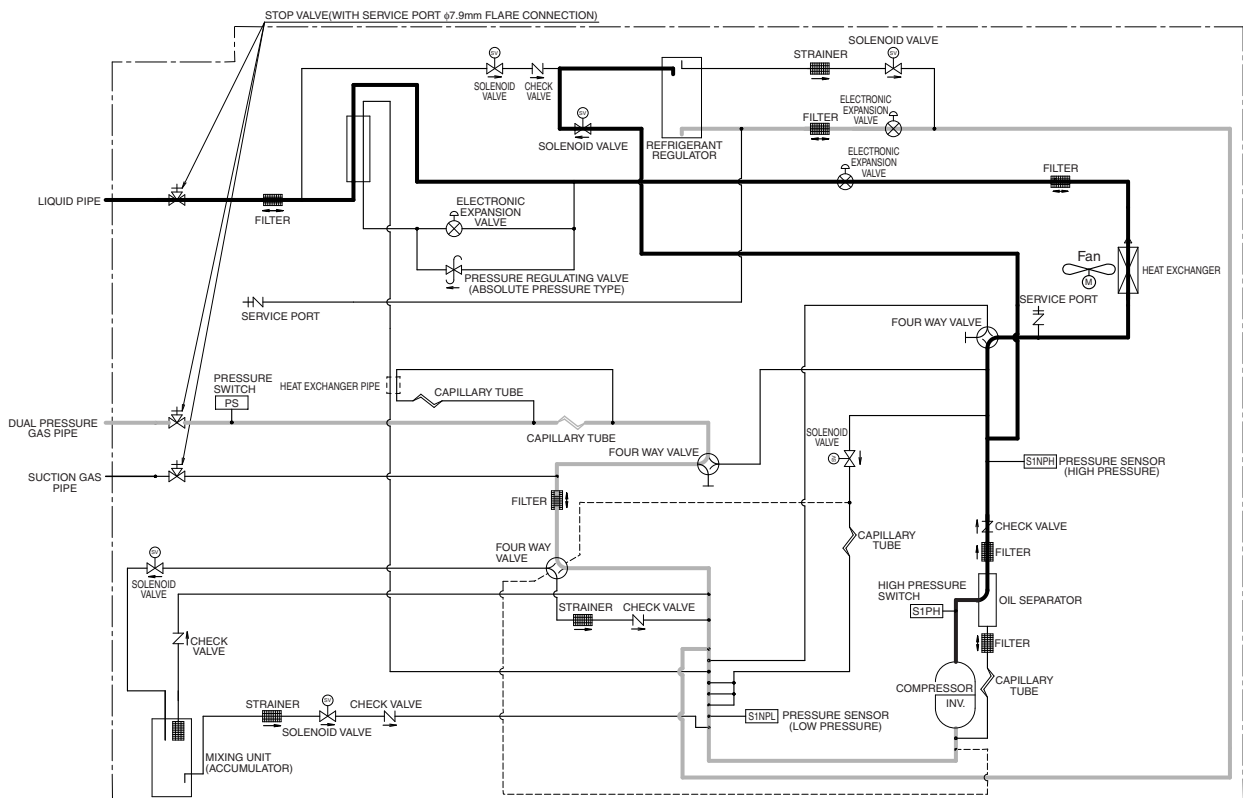


2.6 Protection Control

2.6.1 High Pressure Protection Control

This high pressure protection control is used to prevent the activation of protection devices due to abnormal increase of high pressure and to protect compressors against the transient increase of high pressure.


[In cooling]

- * In case of multi outdoor unit system, the following control is performed in the entire system.
Pc_max indicates the maximum value within the system.

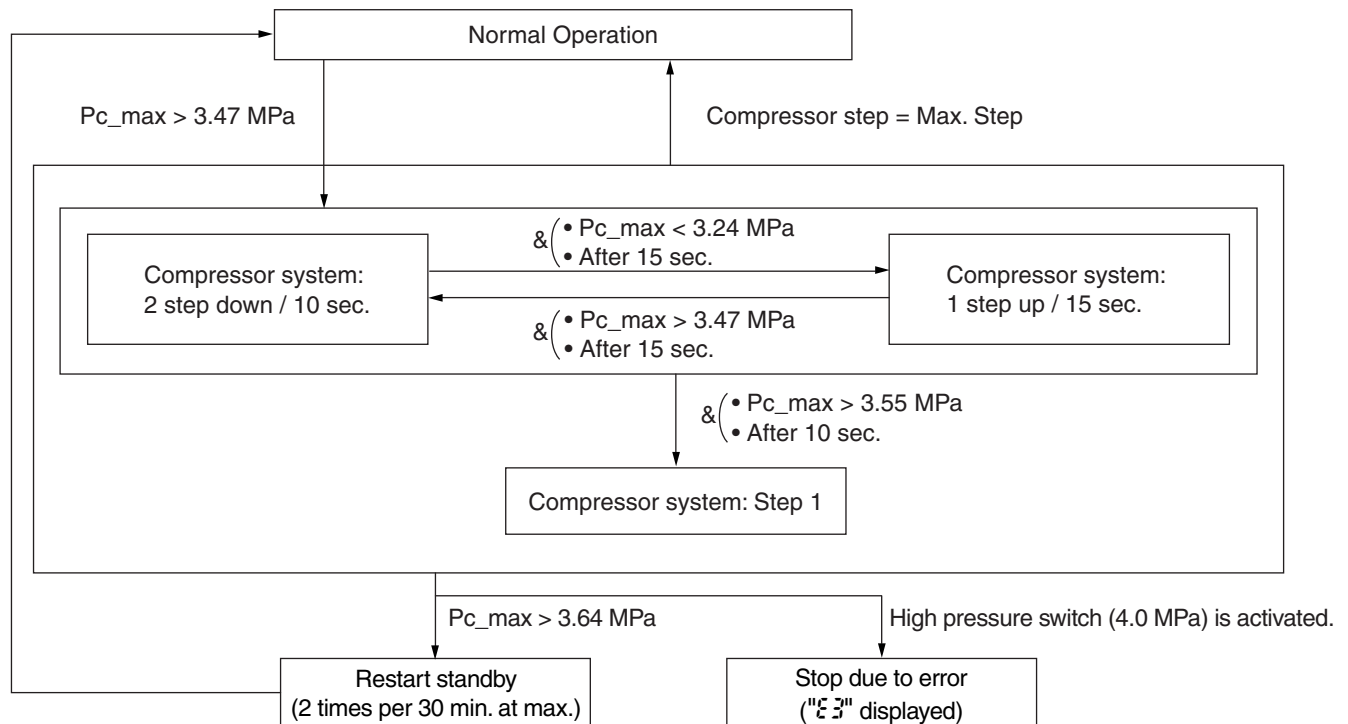

[Heating operation and simultaneous cooling / heating operation]

- * In case of multi outdoor unit system, the following control is performed in the entire system.
Pc_max indicates the maximum value within the system.

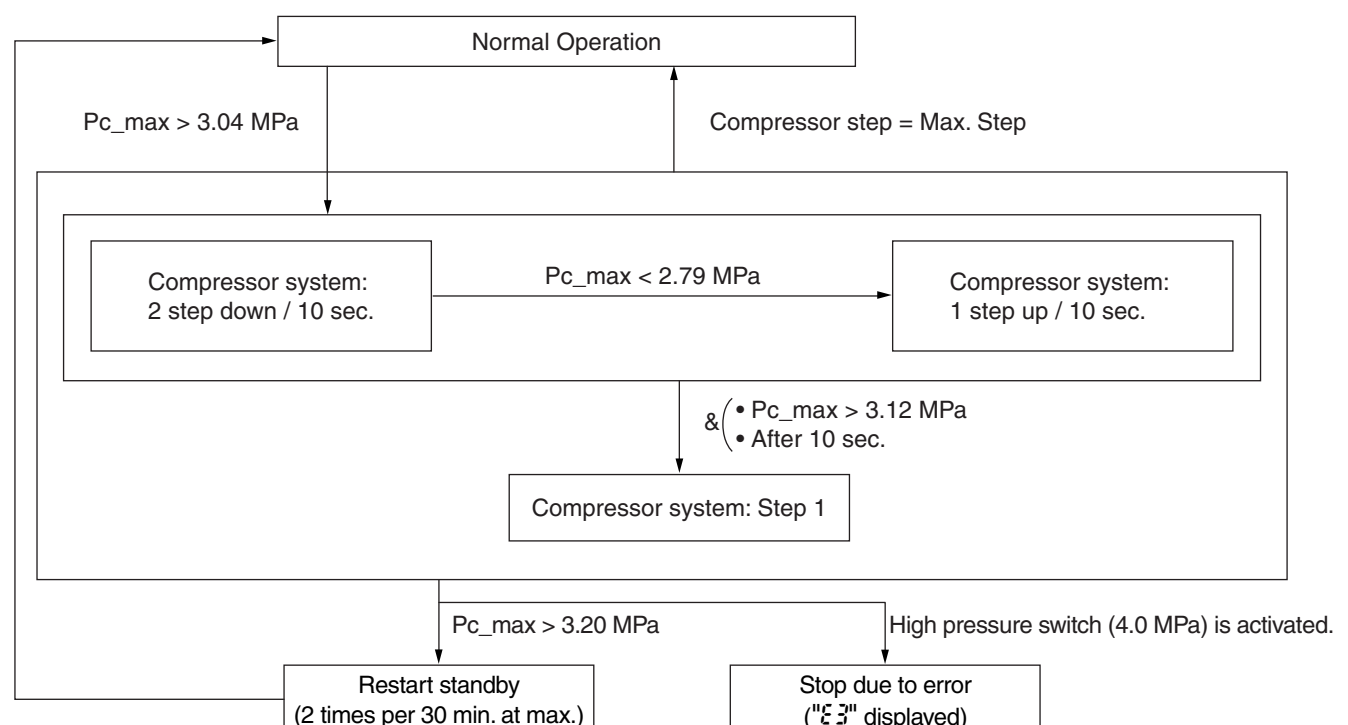


2.6.2 Low Pressure Protection Control

This low pressure protection control is used to protect compressors against the transient decrease of low pressure.


[In cooling]

- * Because of common low pressure, the following control is performed in the system.
Pe_min indicates the minimum value within the system.

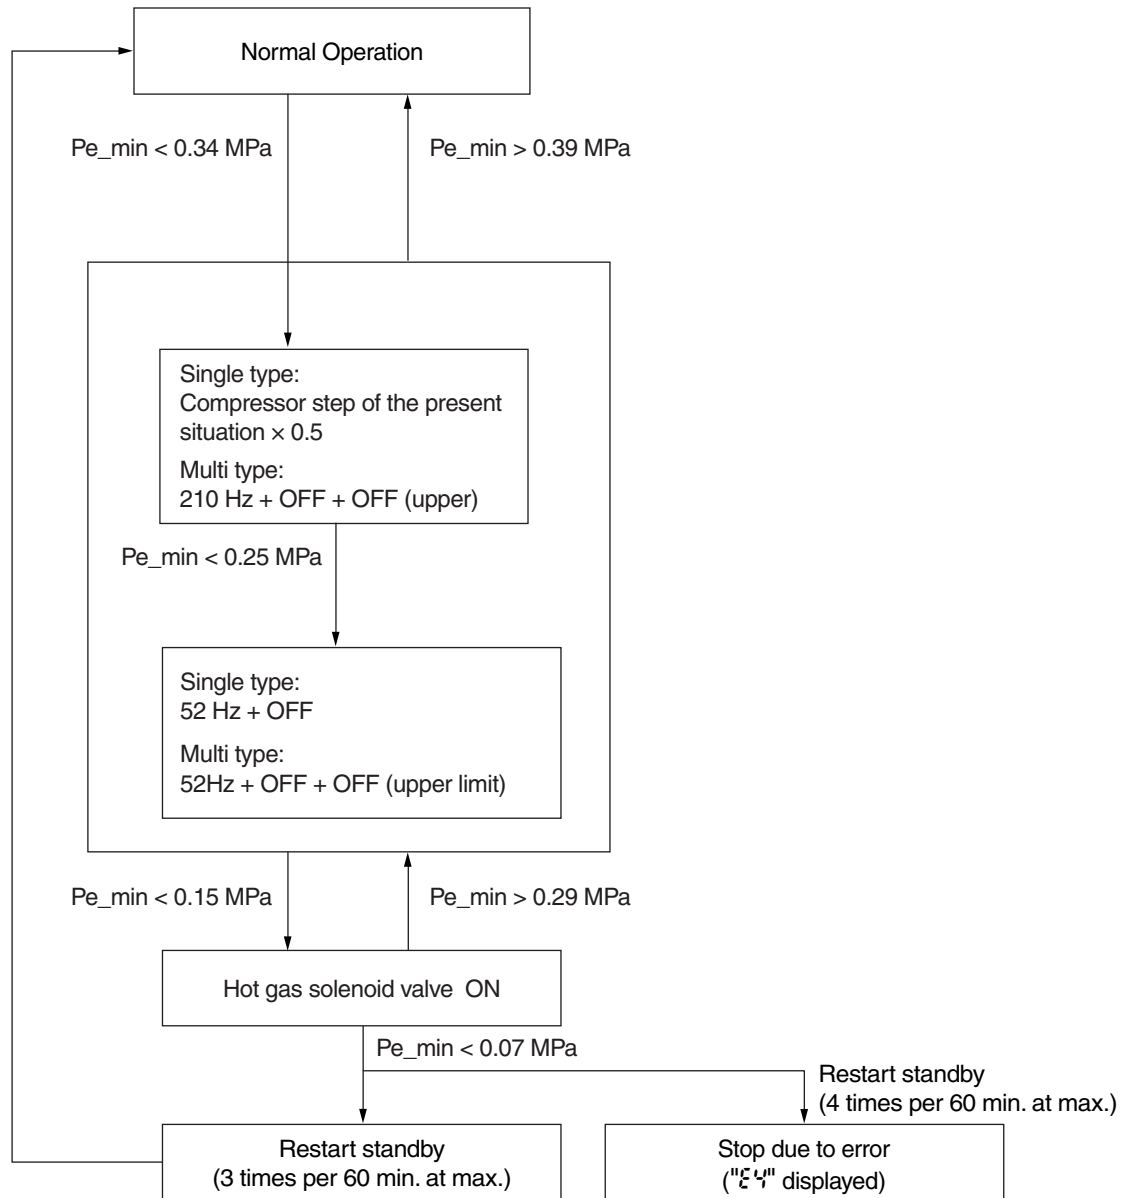

[In heating and simultaneous cooling / heating operation]


- * The following control is performed in the system.
 Pe_min indicates the minimum value within the system.

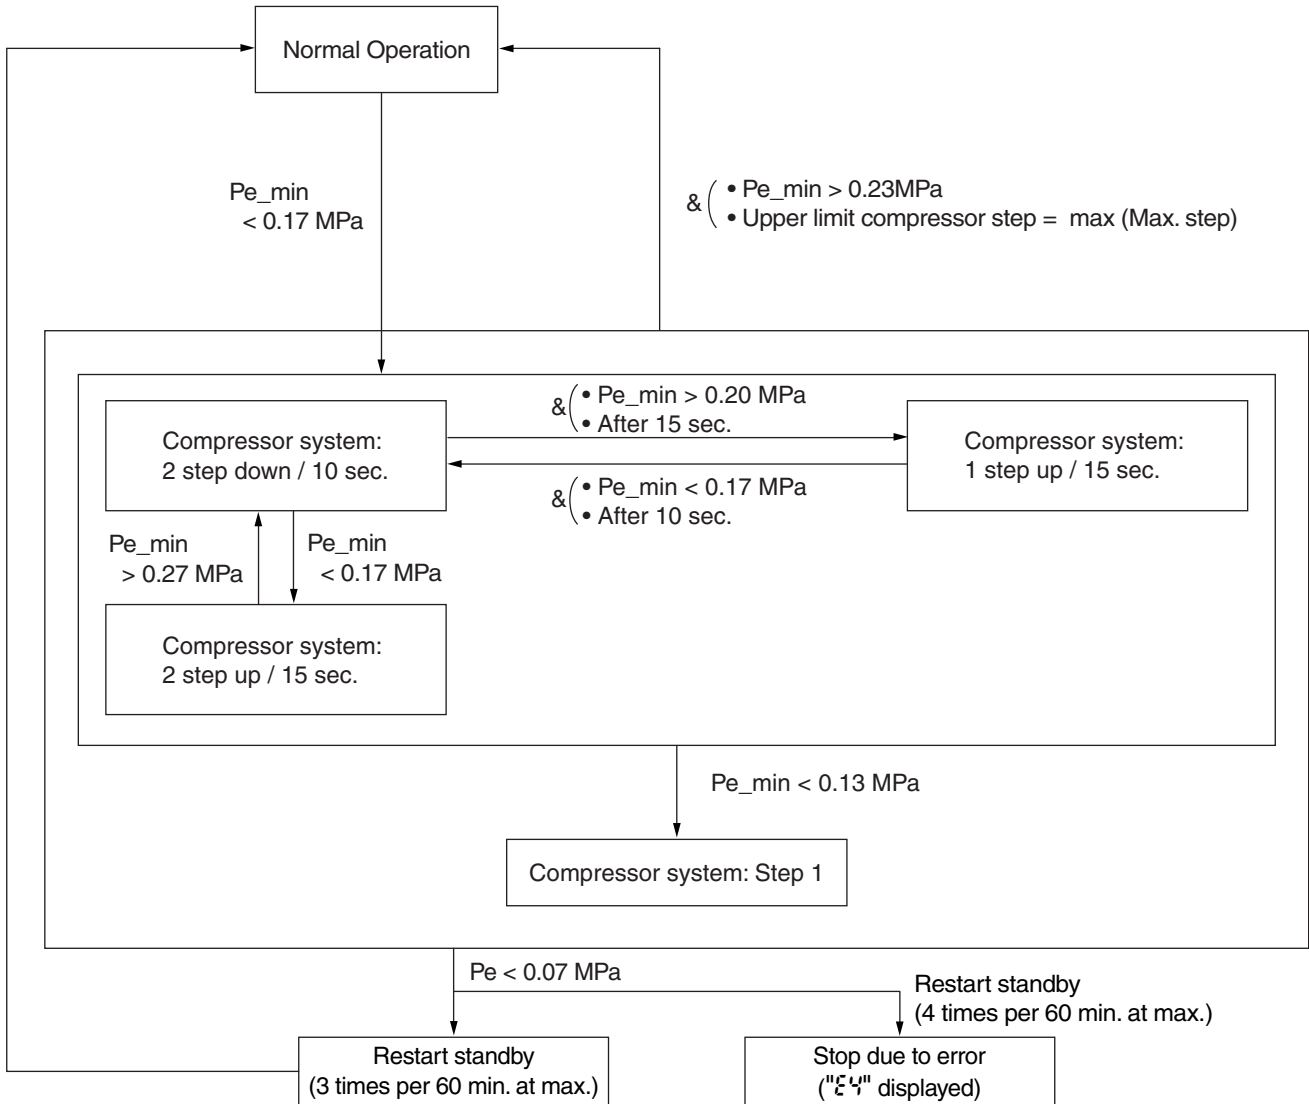

2.6.3 Discharge Pipe Protection Control

This discharge pipe protection control is used to protect the compressor internal temperature against an error or transient increase of discharge pipe temperature. The following control is performed for each compressor.

[INV. compressor]

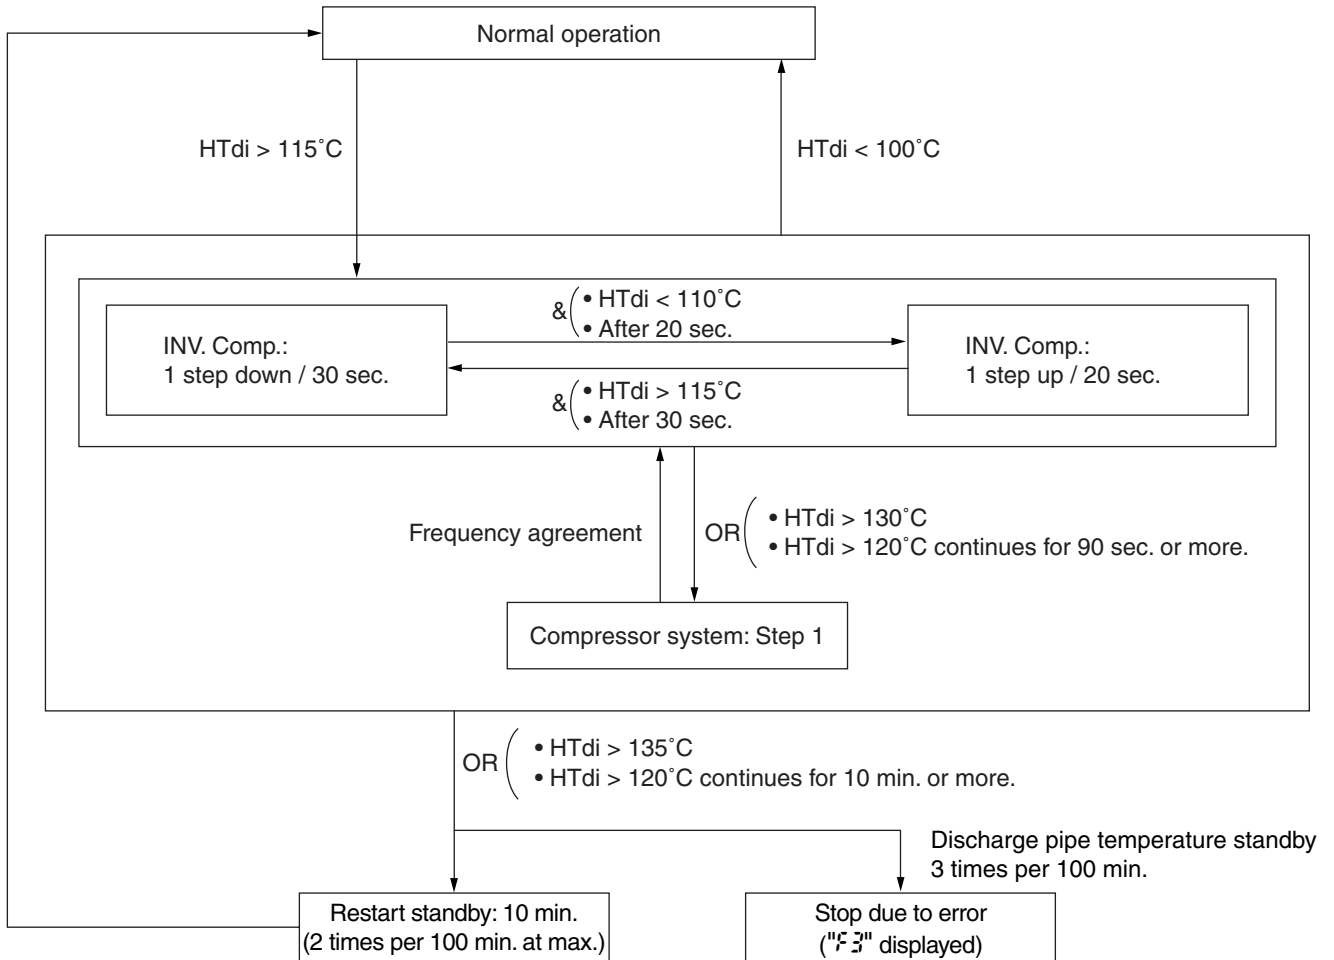

HTdi: Value of INV. compressor discharge pipe temperature compensated with outdoor air temperature.


2.6.4 Inverter Protection Control

Inverter current protection control and radiation fin temperature control are performed to prevent tripping due to an error, or transient inverter overcurrent, and radiation fin temperature increase.

* In the case of multi outdoor unit system, each INV. compressor performs these controls in the following sequence.


[Inverter overcurrent protection control]

* Perform the following control of integrated as well as multi units for each INV. compressor.

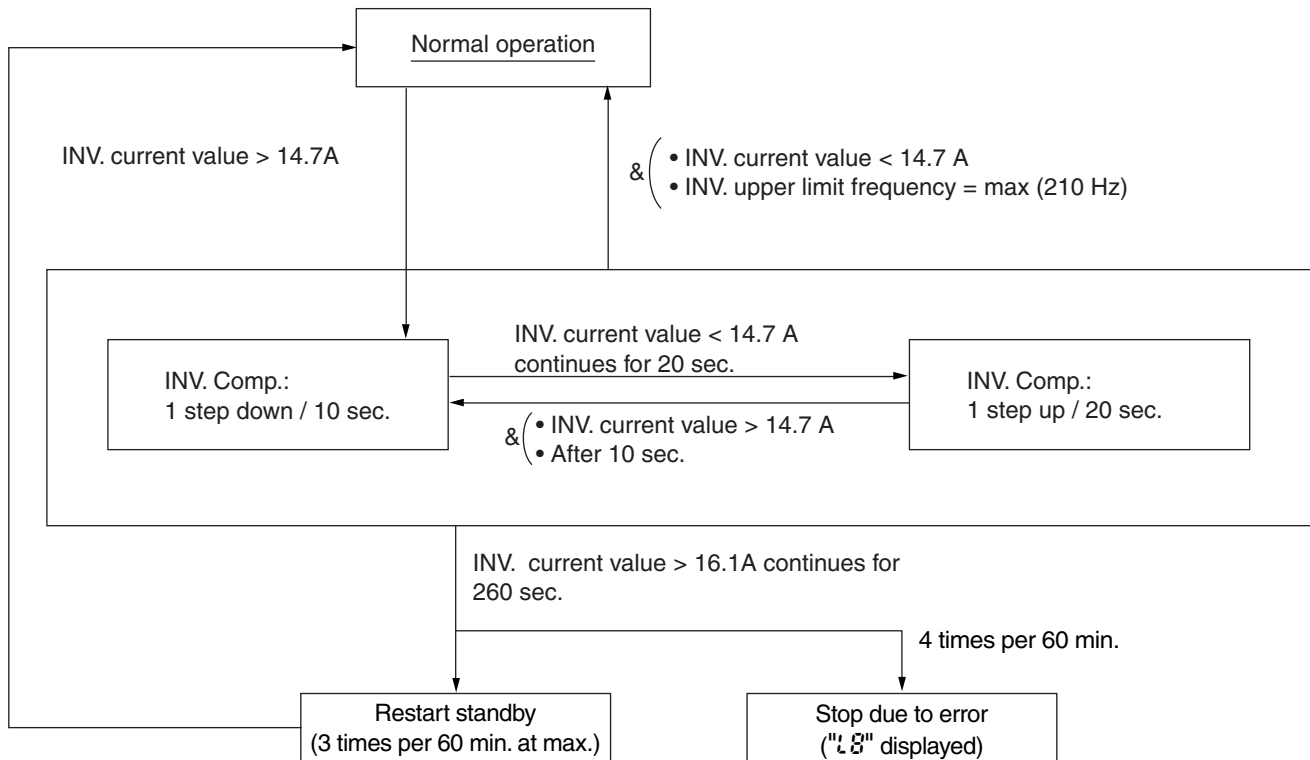

[Radiation fin temperature control]

* Perform the following control of integrated as well as multi units for each INV. compressor.

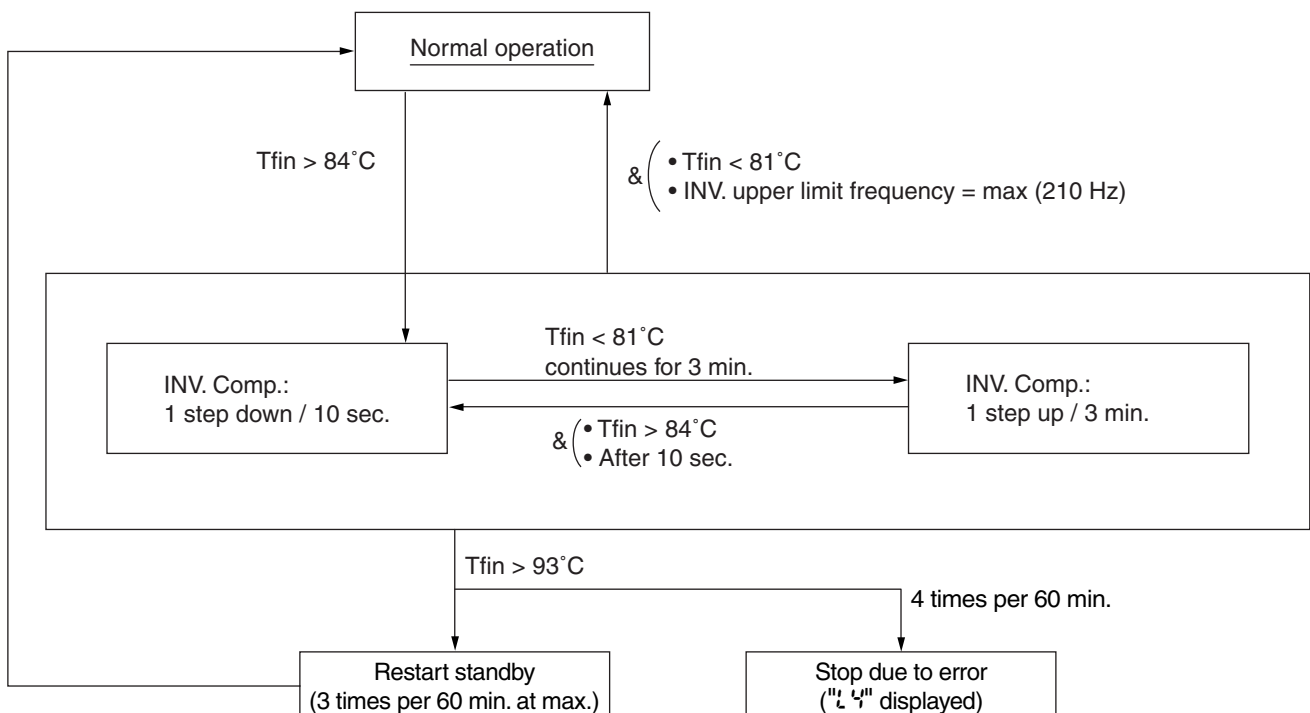

2.7 Special Control

2.7.1 Pump Down Residual Operation

If the liquid refrigerant stays in the evaporator at the startup of a compressor, this liquid refrigerant enters the compressor, thus resulting in diluted oil in the compressor and then degraded lubrication performance. Consequently, in order to recover the refrigerant in the evaporator while the compressor stops, the pump down residual operation is conducted.

Part Name	Electric Symbol	Normal Cooling		Normal Simultaneous Cooling / Heating	
		Master Unit	Slave Unit	Master Unit	Slave Unit
Compressor	M1C	124 Hz	OFF	124 Hz	OFF
Outdoor unit fan	M1F	Fan control	Fan control	Fan control	Fan control
Electronic expansion valve (Main)	Y1E	480 pls	0 pls	Four way valve "ON": 0 pls Four way valve "OFF": 480 pls	Four way valve "ON": 0 pls Four way valve "OFF": 480 pls
Electronic expansion valve (Refrigerant charge)	Y2E	0 pls	0 pls	0 pls	0 pls
Electronic expansion valve (Subcooling)	Y3E	0 pls	0 pls	0 pls	0 pls
Solenoid valve (Refrigerant regulator hot gas)	Y1S	OFF	OFF	OFF	OFF
Solenoid valve (Refrigerant regulator liquid pipe)	Y2S	OFF	OFF	OFF	OFF
Solenoid valve (Refrigerant regulator gas vent pipe)	Y3S	OFF	OFF	OFF	OFF
Solenoid valve (Hot gas)	Y4S	OFF	OFF	OFF	OFF
Solenoid valve (Circuit of oil return)	Y5S	OFF	OFF	OFF	OFF
Four way valve (Heat exchanger switch)	Y6S	OFF	OFF	OFF	OFF
Four way valve (Dual pressure gas pipe)	Y7S	OFF	OFF	OFF	OFF
Four way valve (Mixing unit)	Y8S	OFF	OFF	OFF	OFF
Solenoid valve (Mixing unit inlet)	Y9S	OFF	OFF	OFF	OFF
Ending condition		OR (<ul style="list-style-type: none"> • 5 min. passed • Pe_min < 0.49MPa • Pc_max > 2.94MPa • Master unit Tdi > 110°C • Master unit Tp > 125°C 		OR (<ul style="list-style-type: none"> • 3 min. passed • Pe_min < 0.25MPa • Pc_max > 3.13MPa • Master unit Tdi > 110°C • Master unit Tp > 140°C 	

2.7.2 Cooling Oil Return Operation

In order to prevent the compressor from running out of oil, the oil return operation is conducted to recover oil flown out from the compressor to the system side.

[Starting conditions]

Referring to the set conditions for the following items, start the oil return operation in cooling.

- 2 hours after initial power ON
- A lapse of every 1 ~ 2 hours during low-load operation
- A lapse of every 8 hours during high-load operation

Part Name	Electric Symbol	Oil return operation
Compressor	M1C	System frequency in oil return "IN" × 0.8, then constant control under low pressure (* When a unit has been stopped: 52Hz for all units)
Outdoor unit fan	M1F	Fan control in normal cooling
Electronic expansion valve (Main)	Y1E	480 pls
Electronic expansion valve (Refrigerant charge)	Y2E	0 pls
Electronic expansion valve (Subcooling)	Y3E	0 pls
Solenoid valve (Refrigerant regulator hot gas)	Y1S	OFF
Solenoid valve (Refrigerant regulator liquid pipe)	Y2S	OFF
Solenoid valve (Refrigerant regulator gas vent pipe)	Y3S	OFF
Solenoid valve (Hot gas)	Y4S	OFF
Solenoid valve (Circuit of oil return)	Y5S	OFF
Four way valve (Heat exchanger switch)	Y6S	OFF
Four way valve (Dual pressure gas pipe)	Y7S	OFF
Four way valve (Mixing unit)	Y8S	OFF
Solenoid valve (Mixing unit inlet)	Y9S	OFF
Ending condition		OR (<ul style="list-style-type: none"> • 2 min. passed • TsA - Te < 2°C

* In the case of multi outdoor unit system,

Master unit: Performs the operations listed in the table above.

Slave units: Operating units perform the operations listed in the table above.

Non-operating units perform the operations listed in the table above from the oil return operation.

(Non-operating unit stops during "oil return preparation operation".)

<Indoor Unit>

Part Name	Electric Symbol	Cooling oil return operation		
		Thermostat ON unit	Thermostat OFF unit	Stopping unit
Indoor unit fan	M1F	Remote controller setting	Remote controller setting	OFF
Electronic expansion valve (Main)	Y1E	Normal opening	Normal opening degree for forced thermostat ON	224 pls

<BS Unit>

Part Name	Electric Symbol	Cooling oil return operation
Electronic expansion valve (EVSC)	Y1E	0 pls
Electronic expansion valve (EVHS)	Y2E	0 ~ 60 pls (Pc_max ~ 2.85 MPa)
Electronic expansion valve (EVLS)	Y3E	480 pls (fully opened)
Electronic expansion valve (EVH)	Y4E	0 pls
Electronic expansion valve (EVL)	Y5E	760 pls (fully opened)

2.7.3 Heating Oil Return Operation and Defrost Operation

• RQYQ140 · 180PY1, RQCYQ280 ~ 560PY1

[Heating oil return operation]

Referring to the set conditions for the following items, start the oil return operation in heating.

- 2 hours after initial power ON
- A lapse of every 1 ~ 2 hours during low-load operation
- A lapse of every 8 hours during high-load operation

[Defrosting operation]

To defrost the outdoor unit heat exchanger while in heating, the defrost operation is conducted to recover the heating capacity.

[Starting conditions]


Referring to the set conditions for the following items, start the defrosting operation.

- A lapse of every 1 hour during high-load operation
- A lapse of every 2 hours during low-load operation

Part Name	Electric Symbol	Heating oil return and defrost operation
Compressor	M1C	188 Hz
Outdoor unit fan	M1F	OFF
Electronic expansion valve (Main)	Y1E	480 pls
Electronic expansion valve (Refrigerant charge)	Y2E	SH control
Electronic expansion valve (Subcooling)	Y3E	By "Adjusting control of the refrigerant amount"
Solenoid valve (Refrigerant regulator hot gas)	Y1S	By "Adjusting control of the refrigerant amount"
Solenoid valve (Refrigerant regulator liquid pipe)	Y2S	By "Adjusting control of the refrigerant amount"
Solenoid valve (Refrigerant regulator gas vent pipe)	Y3S	By "Adjusting control of the refrigerant amount"
Solenoid valve (Hot gas)	Y4S	ON
Solenoid valve (Circuit of oil return)	Y5S	OFF
Four way valve (Heat exchanger switch)	Y6S	OFF
Four way valve (Dual pressure gas pipe)	Y7S	ON
Four way valve (Mixing unit)	Y8S	OFF
Solenoid valve (Mixing unit inlet)	Y9S	OFF
Indoor unit fan	M1F	OFF
Electronic expansion valve (Main)	Y1E	480 pls → Suction SH control
Ending condition		$\& \left(\begin{array}{l} \bullet \text{ OR } \left(\begin{array}{l} \bullet \text{ Pc} > 2.94 \text{ MPa} \\ \bullet \text{ Tb} > 11^\circ\text{C} \\ \bullet 12 \text{ min. passed} \end{array} \right) \\ \bullet \text{ OR } \left(\begin{array}{l} \bullet 6 \text{ min. passed} \\ \bullet \& \left(\begin{array}{l} \bullet \text{ TsA} - \text{Te} > 5^\circ\text{C} \\ \bullet 30 \text{ sec. passed} \end{array} \right) \end{array} \right) \end{array} \right.$

• RQCEQ280 ~ 848PY1

"Reverse cycle defrosting (heating oil return)" and "Partial defrosting" are available depending on the combination of the starting condition for units of this series.

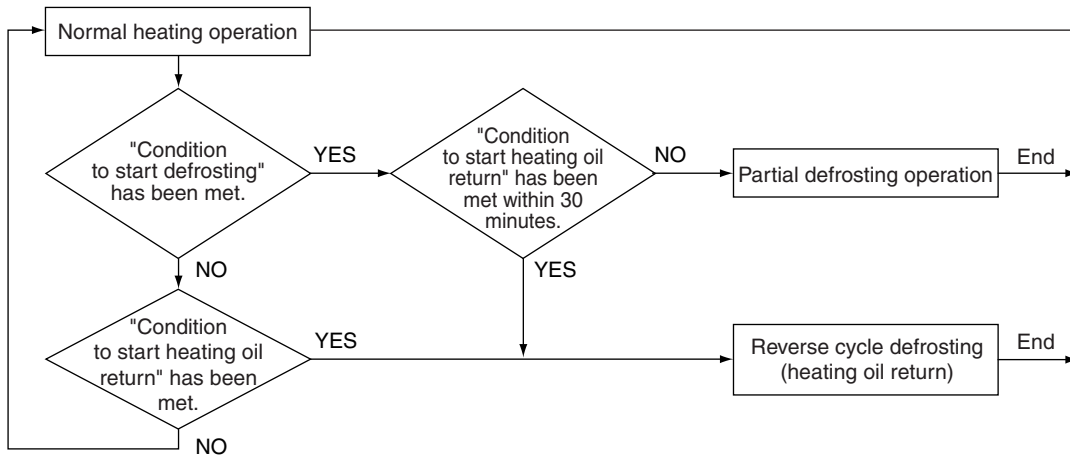

[Defrost operation starting conditions]

- A lapse of every 2 hours during low-load operation
- A lapse of every 1 hours during high-load operation

[Heating oil return operation starting conditions]

- 2 hours after initial power ON
- A lapse of every 1 ~ 2 hours during low-load operation
- A lapse of every 8 hours during high-load operation

Part Name	Electric Symbol	Partial defrosting operation	Reverse cycle defrosting (heating oil return)
Compressor	M1C	124Hz → 232 Hz	188 Hz
Outdoor unit fan	M1F	Defrost unit: OFF Heating unit: Fan control	OFF
Electronic expansion valve (Main)	Y1E	Defrost unit: 480 pls Heating unit: 4 pls → Low pressure control	480 pls
Electronic expansion valve (Refrigerant charge)	Y2E	SH control	SH control
Electronic expansion valve (Subcooling)	Y3E	By "Adjusting control of the refrigerant amount"	By "Adjusting control of the refrigerant amount"
Solenoid valve (Refrigerant regulator hot gas)	Y1S	By "Adjusting control of the refrigerant amount"	By "Adjusting control of the refrigerant amount"
Solenoid valve (Refrigerant regulator liquid pipe)	Y2S	By "Adjusting control of the refrigerant amount"	By "Adjusting control of the refrigerant amount"
Solenoid valve (Refrigerant regulator gas vent pipe)	Y3S	By "Adjusting control of the refrigerant amount"	By "Adjusting control of the refrigerant amount"
Solenoid valve (Hot gas)	Y4S	ON	ON
Solenoid valve (Circuit of oil return)	Y5S	OFF	OFF
Four way valve (Heat exchanger switch)	Y6S	Defrost unit: OFF Heating unit: ON	OFF
Four way valve (Dual pressure gas pipe)	Y7S	Defrost unit: ON Heating unit: OFF	ON
Four way valve (Mixing unit)	Y8S	OFF	OFF
Solenoid valve (Mixing unit inlet)	Y9S	OFF	OFF
Indoor unit fan	M1F	Thermostat ON unit: OFF Others: No instruction	OFF
Electronic expansion valve (Main)	Y1E	0 pls	480 pls → Suction SH control
Ending condition		& (<ul style="list-style-type: none"> • OR (<ul style="list-style-type: none"> • Pc > 2.94 MPa • Tb > 11°C • 12 min. passed • OR (<ul style="list-style-type: none"> • 6 min. passed • & (<ul style="list-style-type: none"> • TsA - Te > 5°C • 30 sec. passed 	& (<ul style="list-style-type: none"> • OR (<ul style="list-style-type: none"> • Pc > 2.94 MPa • Tb > 11°C • 12 min. passed • OR (<ul style="list-style-type: none"> • 6 min. passed • & (<ul style="list-style-type: none"> • TsA - Te > 5°C • 30 sec. passed


2.7.4 Cooling/Heating Mode Changeover

[Single room cooling under mixed cooling and heating conditions → heating]


First, close all of the indoor unit electronic expansion valve and BS unit electronic expansion valves Y2E, Y3E, Y4E and Y5E under the cooling operation condition.

Next, open the electronic expansion valve Y2E and perform an equalizing operation. Subsequently, both the electronic expansion valve Y4E and the indoor unit electronic expansion valve open to become a heating circuit. The changeover time is about 6 minutes. (However, this can be shortened from 6 minutes to 4 minutes depending on the field setting.)


(1) Cooling operation

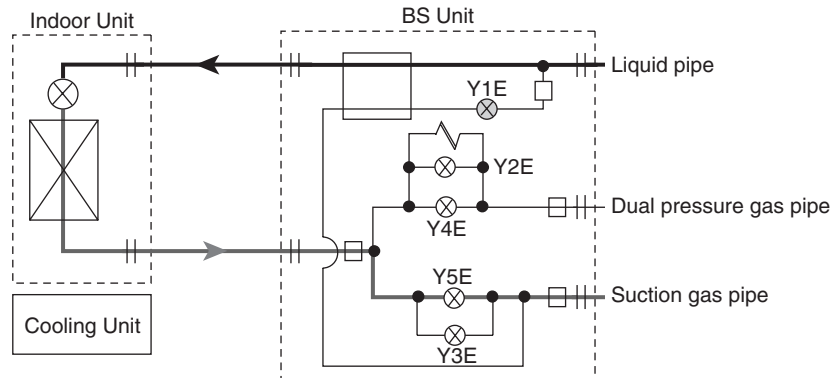

(2) Pressure equalizing

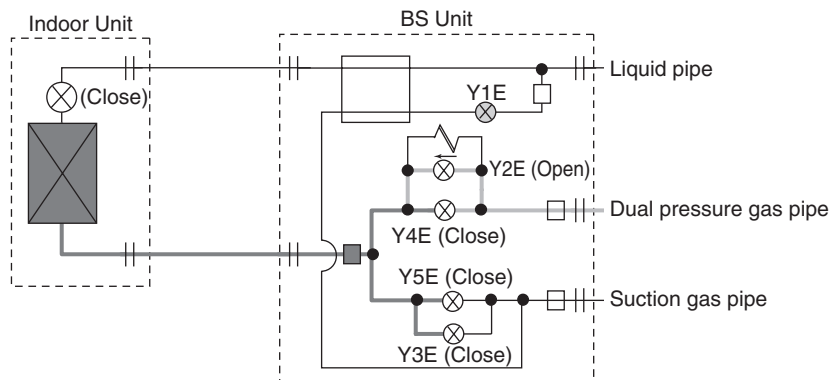

(3) Heating operation

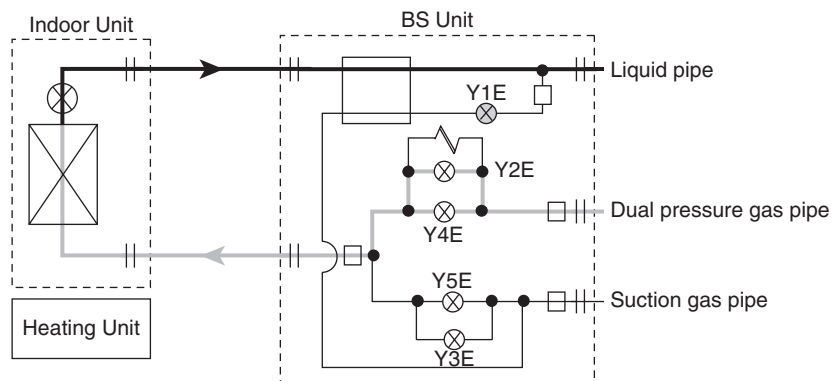


[Single room heating under mixed cooling and heating conditions → cooling]


First, close all of the indoor unit electronic expansion and BS unit electronic expansion valves Y2E, Y3E, Y4E and Y5E under the heating operation condition.

Next, open the electronic expansion valve Y3E and perform an equalizing operation. Subsequently, the electronic expansion valve Y5E opens and the indoor unit electronic expansion valve adjusts the opening extent to become a cooling circuit. The changeover time is about 6 minutes. (However, this can be shortened from 6 minutes to 4 minutes depending on the onsite setting.)


(1) Heating operation

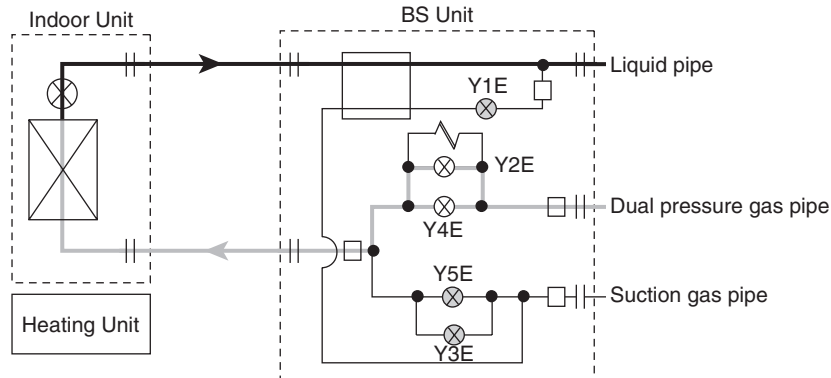


(2) Pressure equalizing

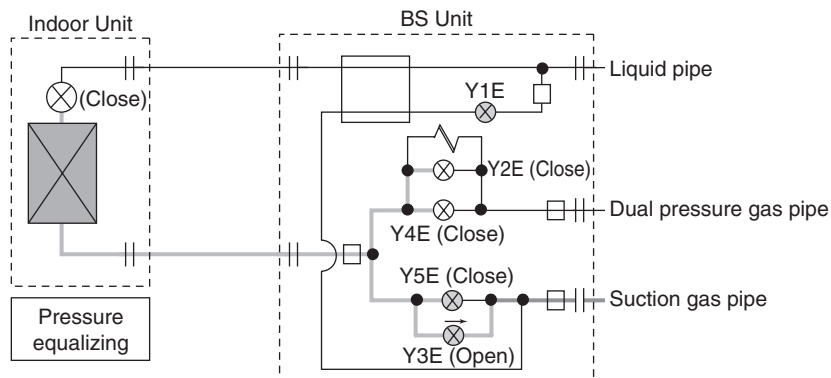


(3) Cooling operation

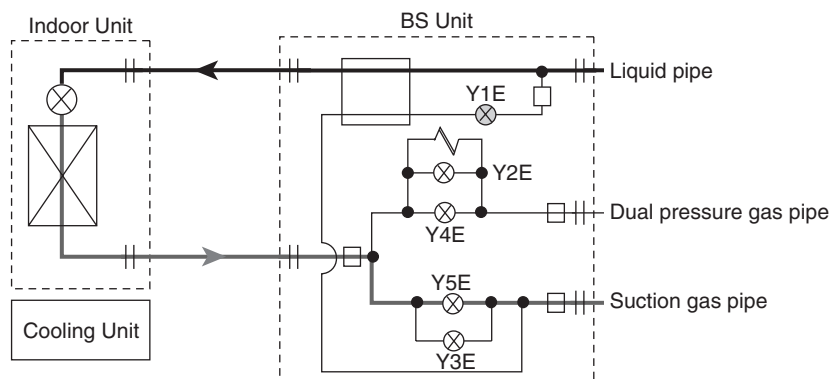

[All-room cooling → all-room heating or simultaneous cooling and heating]

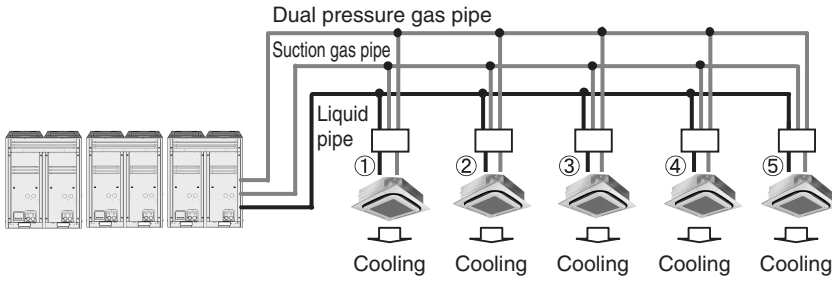


- (1) While all indoor units are in cooling
- Dual pressure gas pipe is used as a suction gas pipe.

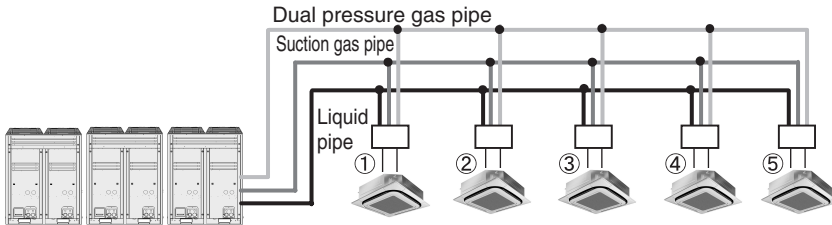

- (2) Mode changeover
- Switch dual pressure gas pipe from low to high pressure


- All indoor units
- Fan stop
 - Changeover time is 3.5 minutes (changeover time for control). (During the changeover: stop the compressor for 30 seconds.)

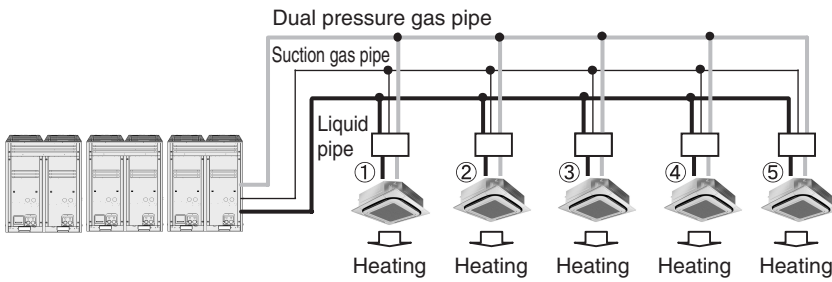


- (3) Heating or simultaneous cooling and heating

- Each indoor unit
- Starts the hot air supply operation by cold air prevention control (3-5 minutes)

[All-room heating or simultaneous cooling and heating → all-room cooling]

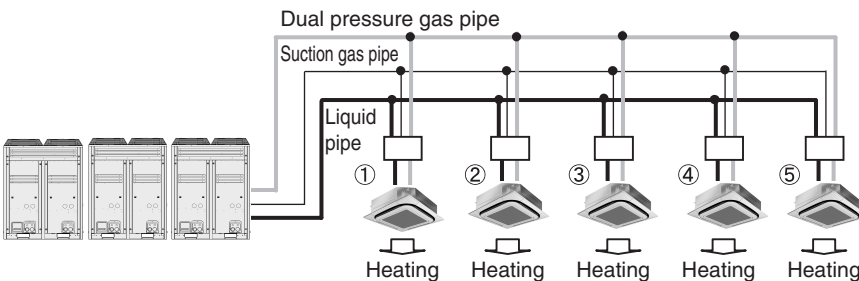


- (1) While the unit is in heating or simultaneous cooling and heating operation
- Dual pressure gas pipe is used as a discharge gas pipe.

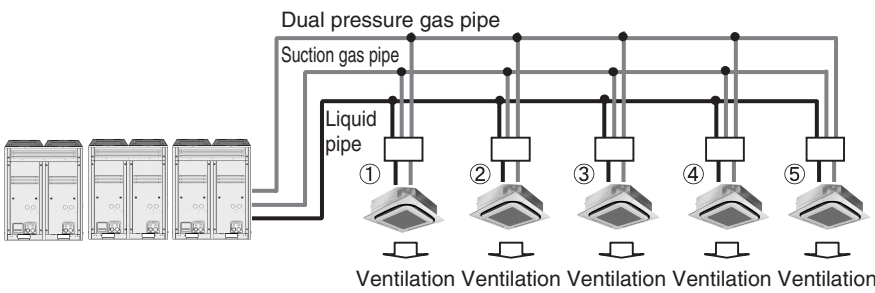

- (2) Mode changeover
- Switch dual pressure gas pipe from high to low pressure

- All indoor units
- Ventilation
 - Changeover time is 3.5 minutes (changeover time for control). (During the changeover: Stop the compressor for 30 seconds.)

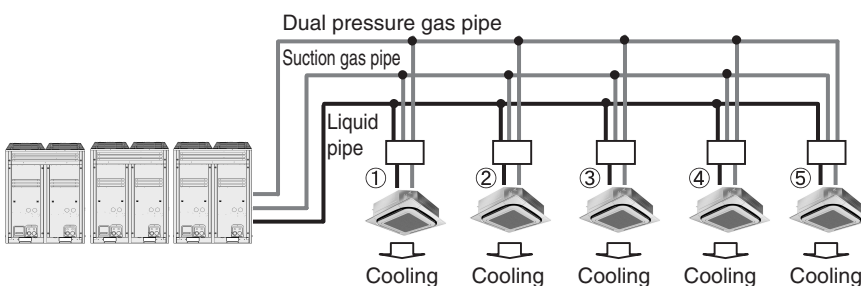

- (3) Change all units to cooling operation.
- Cool air supply operation

2.7.5 Emergency Operation

Stop the compressor or the outdoor unit and bring only the operable compressor and outdoor unit into emergency operation. "Emergency operation by a remote controller" and "Emergency operation by outdoor unit PCB" are available for the operation.

Setting method	(1) Emergency operation by remote controller (Automatic backup operation)	(2) Emergency operation by outdoor unit PCB (Manual backup operation)
Model		
RQCYQ ~ PY1, RQCEQ ~ PY1	Backup operation per outdoor unit	Backup operation per outdoor unit

• Emergency operation by remote controller

[Operating method]

By setting a remote controller (Press and hold the ON/OFF button for at least 4 seconds.)

[Details of operation]

Stop the defective outdoor unit and operate only other outdoor units (This emergency operation is not available for 1 outdoor unit system).

• Emergency operation by outdoor unit PCB

[Setting method]

Set the compressor to be stopped by the field setting (setting mode 2).
(Refer to P. 88 for details of the setting.)

[Details of operation]

Stop operating the "Disabled" compressor and outdoor units and operate another compressor and outdoor units. (The emergency operation is not available for a single unit system.)

Part 5

Field Setting

1. Test Operation	61
1.1 Procedure and Outline	61
1.2 Check Operation	63
1.3 Checking in Normal Operation	66
2. Field Setting from Outdoor Unit.....	67
2.1 List of Field Setting Items	67
2.2 Setting by DIP Switches	69
2.3 Setting by BS Buttons	70
2.4 Setting Mode 1	71
2.5 Setting Mode 2	72
2.6 Monitor Mode	76
2.7 Detailed Explanation of Setting Modes	78

1. Test Operation

1.1 Procedure and Outline

Follow the following procedure to conduct the initial test operation after installation.

1.1.1 Check Work Prior to Turn Power Supply ON

Check that the installation work for the indoor and outdoor units has been performed in accordance with the instructions in the Installation Manual.

Check the below items.

- Power wiring
- Control transmission wiring between units
- Earth wire
- Branch switch
- Earth leakage circuit breaker




- Is the wiring performed as specified?
- Are the branch switches and earth leakage circuit breakers wired correctly?
- Is the designated wire used?
- Is the wiring screw of wiring not loose?
- Is the grounding work completed?
- Is the insulation of the main power supply circuit deteriorated?
Use a 500V megger tester to measure the insulation. (*1)
- Do not use a megger tester for other circuits than 400V or 200V circuit.

*1: Measure to be taken against decreased insulation resistance in the compressor

If the compressor is left to stand for an extended period of time after the refrigerant charge with the stop valve open and the power supply OFF, the refrigerant may be mixed in the compressor, thus decreasing the insulation resistance.

Heat the compressor as shown on the right and then recheck the insulation.

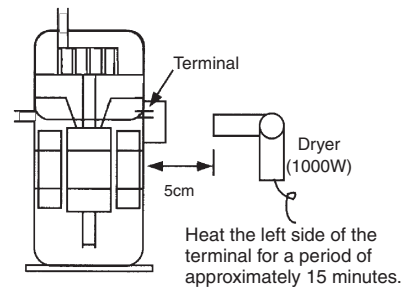

Check on refrigerant piping / insulation materials



Check air tight test and vacuum drying.



Check on amount of additional refrigerant charge



Check the stop valves for conditions.

- Is the pipe size proper? Are the design pressures for the gas pipe and liquid pipe more than 3.3MPa?
- Is the pipe insulation material installed securely?
Liquid and gas pipes need to be insulated. (Otherwise causes water leak.)
- Have the air tight test and the vacuum drying been conducted according to the procedure in the Installation Manual?
- Is a proper amount of refrigerant charged?
* Refer to P.209 for the calculation of the amount of additionally refrigerant charge.
 - When the refrigerant level is insufficient, leave the liquid and gas stop valves closed and charge with liquid refrigerant via the liquid stop valve service port. (* Do not charge via the gas stop valve service port. Doing so will result in error.)
- Is the amount of additional refrigerant charge recorded in the [Service Precaution] label?
- Check to be sure the stop valves are under the following conditions.

Model	Liquid-side stop valve	Gas-side stop valve
RQYQ140 · 180PY1	Open	Open

Model	Liquid-side stop valve	Gas-side stop valve	Dual pressure gas-side stop valve
RQEQ140 ~ 212PY1	Open	Open	Open

1.1.2 Turn Power ON

Turn outdoor unit and indoor unit power ON.



Check the LED display of the outdoor unit PCB.



Make field settings with outdoor unit PCB.

○ Be sure to turn the power ON 6 hours before starting operation to protect compressors.

○ Check to be sure the transmission is normal.
The transmission is normal if the LEDs display conditions as shown in table below.



LED display ○: ON ●: OFF ◐: Blinking

LED display (Default status before delivery)	Micro- computer operation monitor	MODE	TEST	COOL / HEAT select			Low noise	Demand	Multi
				IND	MASTER	SLAVE			
				H3P	H4P	H5P			
		H1P	H2P	H3P	H4P	H5P	H6P	H7P	H8P
1 outdoor unit installed	◐	●	●	○	●	●	●	●	●
When multiple outdoor unit installed (*)	Master	◐	●	●	○	●	●	●	○
	Slave 1	◐	●	●	●	●	●	●	◐
	Slave 2	◐	●	●	●	●	●	●	◐
	Slave 3	◐	●	●	●	●	●	●	◐


(*) The master unit is the outdoor unit to which the transmission wiring for the indoor units is connected.
The other outdoor units are slave units.

○ Make field settings if needed.
(For the setting procedure, refer to information in "2. Field Setting from Outdoor Unit" on P.67 onward.)
For the multi outdoor unit system, make field settings with the master unit.
(Field settings made with the slave unit will be all invalid.)

[Outdoor unit]

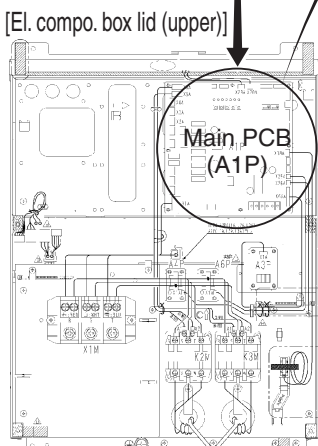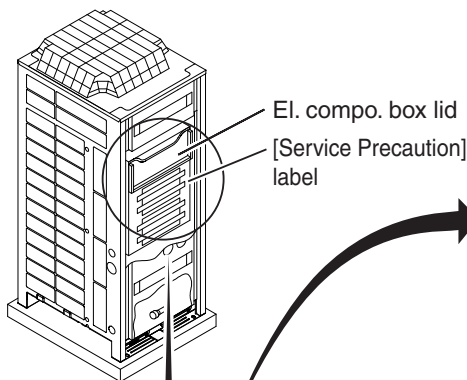

[Main PCB]

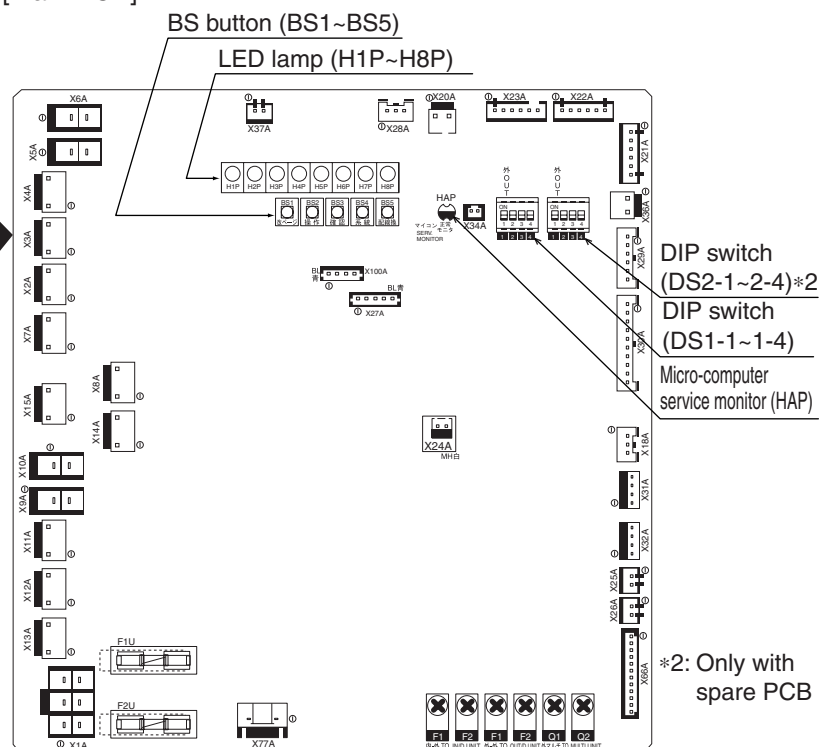

1.2 Check Operation

1.2.1 RQYQ / RQEQ-PY1

Procedures	Operational Conditions (Each of mentioned below is a standard operation time. This may vary based on the installation circumstances, etc.)	
(1) Turn to [Set-up Mode 1] (H1P : OFF). H1P light is usually out. If H1P is (BLINK) or (ON), press "MODE" button (BS1) once to go into [Set-up Mode 1]. (If H2P is lighted-ON, check the defect codes with a remote controller to find out the cause. Repair the defect part according to the list on the installation manual.)	Normal (H2P : OFF) Defect (H2P : ON)	
(2) <u>After confirmed that it's back in a normal condition, press "TEST" button (BS4) for longer than 5 seconds.</u> It starts warming-up for the operation, and LED indication turns as right descriptions. <u>Close all the outside panels after putting back the service cover. (*2)</u>	Startup and waiting operation for stable conditions (approx. 10 to 25 min.) The outdoor and indoor unit fan is operated in order to stabilize the refrigerant conditions. And then the compressor starts operation.	
	Operation to check stop valve and wrong wiring (approx. 5 min.) (Contamination prevention is operated at the same time.)	
	Operation to check refrigerant amount (approx. 10 to 20 min.) Check the refrigerant amount, and make adjustments. (Contamination prevention is operated at the same time.)	
	<p>1. • When the system stop operation, open the outside panel of the EL.compo. box, then check the LED indications through the inspection door. If the LED indicate as right, connect the <u>refrigerant tank to the refrigerant re-charging port.</u></p> <p>• <u>Press the test operation button (BS4) for longer than 5 seconds after connection of the refrigerant tank.</u> LED change indications, then re-start. (Use a refrigerant cylinder with sufficient amount of refrigerant.)</p>	The system stop operation for warming-ups before re-charging of refrigerant, then LED indicate to connect the refrigerant tank (as on the right).
	Stand-by for a stable condition after the restart. (approx. 1 to 3 min.)	
<p>2. • <u>Open the valve of the refrigerant tank after LED indications turns as right. (*3)</u></p> <p>• <u>Press the "TEST" button (BS4) once within 3 min. after opening the valve.</u> LED change indications.</p> <p>• <u>Immediately close the inspection door and all the outside panels. (*2)</u></p>	LED indicate to open the valve of the refrigerant tank (as on the right), and wait to press the "TEST" button (BS4).	
<p>Operation for re-charging of refrigerant (1~60 min.) (Contamination prevention is operated at the same time.)</p>		
<p>If the error code "P7" is displayed on the remote controller, open the outside panel of the EL. compo.box, check the LED indications through the inspection door.</p>	The system stop operation due to insufficient re-charging of refrigerant, then LED indicate to replace the refrigerant tank (as on the right).	
<p>Automatic measuring of piping length (approx. 1 min.) This is to check the length of field pipings.</p>		
<p>(4) • After the system stop operation, open the outside panel of the EL.compo. box, then check the LED indications through the inspection door.</p> <ul style="list-style-type: none"> • When completed properly. <ul style="list-style-type: none"> • Disconnect the refrigerant tank. • Close all the outside panels after putting back the inspection door. • When abnormal stop <ul style="list-style-type: none"> • Error code is displayed on the remote controller, check the error code No. 	<p>Properly completed (H2P: OFF)</p> <p>Abnormal stop due to the low pressure drops (H2P: Blinking)</p> <p>Defect determined (H2P: ON)</p>	


LED indications ●: OFF ○: ON ◐: BLINK

MODE	HWL:	C/H SELECTOR			L.N.O.P	DEMAND
		IND	MASTER	SLAVE		
H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	○	●	●	●	●
●	○	○	●	●	●	●
●	◐	●	●	●	●	○
●	◐	●	●	●	○	○
LED indications to connect the refrigerant tank						
◐	◐	◐	●	○	●	●
●	◐	●	●	○	●	●
LED indications to [open] the valve of refrigerant						
◐	◐	◐	●	○	●	○
●	◐	●	●	○	●	○
LED indications as re-charging amount of refrigerant is not sufficient.						
◐	◐	◐	●	◐	●	●
●	◐	●	●	○	○	●
●	●	○	●	●	●	●
●	◐	◐	●	●	●	○
●	○	○	●	●	●	●

indications on remote controller (*1)

- A
- B
- C
- C
- D (P8)
- C
- C (*3)
- C
- D (PA)
- C
- A
- B (P2)
- B

■ Functions of BS button

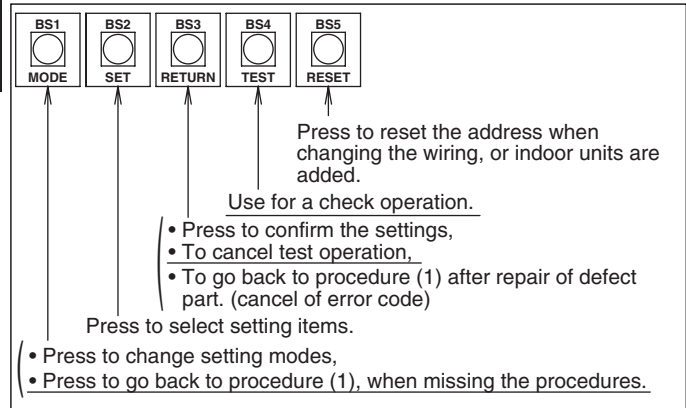

• If the system stops and a indoor remote controller indicates any defect, repair the defect part according to [Remote controller displays error code.] Test operate again after the repair.
 • To test operate again, press the "RETURN" button (BS3) to turn the LED back to "normal" indications as procedure (1).

If the "TEST" button (BS4) is not pressed within 3 min. after the indication to open the valve, it goes back to procedure (3) 1 and stops the system again.

In this case, either refrigerant tank became empty, or the valve of the refrigerant tank is not open.
 • If the refrigerant tank is empty, replace the tank, then press the "TEST" button (BS4) for longer than 5 sec. to re-start the system.
 • If the valve of the refrigerant tank is not open, press the "TEST" button (BS4) for longer than 5 sec. to re-start the system.
 Then open the valve of the refrigerant tank by following the procedure (3) 2.

• If the system stops and a indoor remote controller indicates any defect, repair the defect part according to [Remote controller displays error code.] Test operate again after the repair.
 • To check operate again, press the "RETURN" button (BS3) to turn the LED back to "normal" indications as procedure (1).

(*1): Please refer to [Remote controller indications at check operation] to confirm the details of each indication.
 (*2): If outside panels are not closed, it may not be able to operate normally when outdoor air temperature is high, etc.
 (*3): Remote controller does not indicate the procedures. Make sure to check the LED indications upon operation.
 (*4): Record the amount of refrigerant re-charge on the [Safety precaution] label.

— ⚠ WARNING ⚠ ELECTRIC SHOCK WARNING —

- Do not move away from the outdoor unit if outside panel is not closed during a test operation.
- In case you need to move away from the outdoor unit, follow either one of the below directions
 1. Replace with other installation worker.
 2. Press the "RETURN" button (BS3) to cancel the test operation. (In this case, close all the outside panel, and close also the valve if any cylinder is connected.)

[Remote controller displays error code]

Error code	Installation error	Remedial action
A* C* (Note)	Indoor unit of connecting remote controller is error.	Correct the error by reference to installation manual of indoor unit or operation manual of outdoor unit.
E3, F4 F3, UF	The stop valve of the outdoor unit is left closed.	Open the stop valve.
U1	The phases of the power to the outdoor unit are reversed.	Exchange 2 of the 3 phases (L1, L2, L3) and connect with the correct phase.
U3	Check operation has been completed normally.	Perform the check operation again.
U1 U4 LC	Power is not being supplied (including cases of open phase) to the outdoor or BS or indoor unit.	Supply power correctly to the outdoor, BS or indoor unit.
U7 UA	A model which cannot be connected in a multi outdoor unit system has been connected in a multi outdoor unit system.	Change to individual piping, and disconnect the wiring from the multi outdoor unit terminals (Q1, Q2)
U9	There is a problem with another BS and indoor unit within the same system.	An error code is displayed on the remote controller, or else trouble has occurred at BS and indoor unit where an error code is not displayed on the remote controller. Correct the trouble at the corresponding BS and indoor unit. If no error code is displayed on the remote controller, press the INSPECTION/TEST button on the remote controller to display the error code.
UF	Wrong wiring between units.	Agree refrigerant system and connection wire between the units.
UF	If an outdoor - outdoor transmission wire was connected or disconnected during check operation.	Complete the transmission wiring work, then perform check operation again.
U4, U7 UH, UF	Wrong wiring between units.	Connect the interunit wiring (indoor - outdoor, outdoor - outdoor, multi outdoor unit). If voltage of 100V or higher was applied to the outdoor unit PCB (A1P), the outdoor unit PCB or BS unit PCB may be damaged. If the error display "U4" appears even after the connection was corrected, the PCB must be replaced. Refer to Service Manual for details.
PJ	DIP switch (DS1) setting is incorrect after the outdoor unit PCB (A1P) was replaced.	Follow the information on spare parts with a spare PCB of outdoor unit and make the correct setting.
P2	Check operation cannot be continued by the low pressure drops.	Check the following. <ul style="list-style-type: none"> • All stop valves are open. • Refrigerant tank is connected. • Valve of refrigerant tank is open. • Inlet or outlet of indoor unit are not closed due to a foreign object.
P8 PA	Instruction to perform additional refrigerant charging during check operation (not an error).	Make the check operation by "1.2 Check Operation".
E2, E3	"E2" is activated, so ON/OFF button is pressed on the remote controller, but this does not turn "E2" OFF. Or "E3" is activated. In case of above, there is an error of the compressor in the outdoor unit.	Measure the insulation resistance of the compressor to check the condition of the compressor.

If any error codes other than the above are displayed, check the service manual for how to respond.

1.3 Checking in Normal Operation

■ **After check operation ends, start normal operation.**

(Heating is not possible if the outdoor air temperature is 24°C or higher.)

- Check that the indoor and outdoor units are operating correctly.
(If any abnormal noise occurs due to liquid compression in the compressor or another cause, stop operation immediately. Then energize the crankcase heater for a sufficient period of time before restarting operation.)
- Start the indoor units one by one. Verify that the corresponding outdoor unit is operating.
- Verify that cool air (or warm air) is being discharged by the indoor unit.
- Press the airflow direction button and airflow rate button of the indoor unit and verify their operation.

<Important information when checking normal operation>

- If any abnormal noise occurs due to liquid compression in the compressor or another cause, stop operation immediately. Then energize the crankcase heater for a sufficient period of time before restarting operation.
- For approximately 5 minutes after the compressor is stopped, the compressor will not start even when the ON/OFF buttons at indoor units in that system are pressed.
- Pump down residual operation may occur for up to 5 minutes at the outdoor unit after operation was stopped from the remote controller.
- Outdoor unit fan low speed operation may also occur if the Low night noise operation setting or the External low noise setting is used.
- If check operation after installation was not performed by pressing the TEST button, or if the check operation was not completed normally, error code "U3" appears and normal operation is not possible. Be sure to follow the instructions in "1-2. Check Operation" and complete the check operation procedure.

2. Field Setting from Outdoor Unit

2.1 List of Field Setting Items

This following section indicates the list of field setting items. For the lists of DIP switch contents, Setting mode 1, and Setting mode 2, refer to information in tables shown on the following page onward.

For setting items of (*1), refer to detailed information provided on P.78 onward.

2.1.1 Function Setting Items

Setting item	Content and objective of setting	Overview of setting procedure
1 Setting of COOL/ HEAT selection (*1)	<ul style="list-style-type: none"> ■ COOL/HEAT selection methods are possible to select from the following <ol style="list-style-type: none"> (1) Control by each outdoor unit using the indoor unit remote controller (2) Control by each outdoor unit using the COOL/HEAT selection remote controller (3) Batch control by outdoor unit group using the indoor unit remote controller (4) Batch control by outdoor unit group using the COOL/HEAT selector remote controller 	<ul style="list-style-type: none"> ■ In order to use the COOL/HEAT selection remote controller, set the DS1-1 on the outdoor unit PCB to OUT. ■ For outdoor unit group control, set the system to "BATCH MASTER" or "SLAVE" while in "Setting mode 1". Then, make setting of COOL/HEAT batch address.
2 Setting of low noise operation (*1)	<p>A. Use external input to step down the upper limit of the fan (factory setting to Step 8), providing low noise level.</p> <ol style="list-style-type: none"> (1) Mode 1: Step 6 or lower (2) Mode 2: Step 5 or lower (3) Mode 3: Step 4 or lower 	<ul style="list-style-type: none"> ■ Use the "External control adaptor for outdoor unit". Set to "External control adaptor for outdoor unit" with No. 12 of "Setting mode 2" and select the mode with No. 25. If necessary, set the "Capacity priority setting" to ON with No. 29.
	<p>B. The low noise operation aforementioned is enabled low night noise operation mode. Start time: Possible to select in the range of 20:00 to 24:00 hours. End time: Possible to select in the range of 06:00 to 08:00 hours. (Use the said time as a guide since the start time and the end time are estimated according to outdoor air temperatures.)</p>	<ul style="list-style-type: none"> ■ Make this setting while in "Setting mode 2". Select a mode with No. 22 of "Setting mode 2". Select the start time with No. 26 and the end time with No. 27. If necessary, set the "Capacity priority setting" to ON with No. 29.
3 Setting of demand operation (*1)	<ul style="list-style-type: none"> ■ Used to place limits on the compressor operating frequency to control the upper limit of power consumption. <ol style="list-style-type: none"> (1) Mode 1 of Demand 1: 60% or less of rating (2) Mode 2 of Demand 1: 70% or less of rating (3) Mode 3 of Demand 1: 80% or less of rating (4) Demand 2: 40% or less of rating (5) Demand 3: Forced thermostat OFF 	<ul style="list-style-type: none"> ■ Method using the external control adaptor for outdoor unit. Select Demand 1 – 3 by short circuit the terminal strip (TeS1).
		<ul style="list-style-type: none"> ■ Setting by "Setting mode 2" only. Select Demand 1 or Demand 2 using set No. 32 of "Setting mode 2". If Demand 1 is selected, then also select Level 1 – 3 using set No. 30.
4 Setting of AIRNET address	<ul style="list-style-type: none"> ■ Used to make address setting with AIRNET connected. 	<ul style="list-style-type: none"> ■ Set the AIRNET to an intended address using binary numbers with No. 13 of "Setting mode 2".
5 Setting of high static pressure	<ul style="list-style-type: none"> ■ Make this setting to operate a system with discharge duct while in high static pressure mode. (Use this setting mode when concealed outdoor unit installation is required on upper floors or balconies.) * In order to mount the discharge duct, remove the cover from the outdoor unit fan. 	<ul style="list-style-type: none"> ■ Set No. 18 of "Setting mode 2" to ON.

2.1.2 Service Setting Items

Setting item		Content and objective of setting	Overview of setting procedure
1	Indoor unit fan forced H operation	■ Used to operate the indoor unit in the stopped state in forced H operation mode.	■ Set No. 5 of "Setting mode 2" to indoor unit forced fan H.
2	Indoor unit forced operation	■ Used to operate the indoor unit in forced operation mode.	■ Set No. 6 of "Setting mode 2" to indoor unit forced operation mode.
3	Change of targeted evaporating temperature (in cooling)	■ In cooling, used to change the targeted evaporating temperature for compressor capacity control.	■ Select high side or low side with No. 8 of "Setting mode 2".
4	Change of targeted condensing temperature (in heating)	■ In heating, used to change the targeted condensing temperature for compressor capacity control.	■ Select high side or low side with No. 9 of "Setting mode 2".
5	Setting of defrost selection	■ Used to change a temperature at which the defrost operation is initiated, thus making the initiation easy or hard.	■ Select fast side or slow side with No. 10 of "Setting mode 2".
6	Setting of sequential startup	■ Used to start units not in sequence but simultaneously.	■ Set No. 11 of "Setting mode 2" to NONE.
7	Emergency operation	■ If the compressor has a failure, used to prohibit the operation of compressor(s) concerned or outdoor unit(s) concerned and to conduct emergency operation of the system only with operable compressor(s) or outdoor unit(s).	■ Make this setting while in "Setting mode 2". For system with a single outdoor unit: Set with No. 19 or 42. For system with multiple outdoor units: Set with No. 38, 39, or 40.
8	Air tight test	■ Fully open the outdoor unit and indoor unit electronic expansion valves, and turn ON some of the solenoid valves.	■ Set No. 21 of "Setting mode 2" to ON.
9	Refrigerant recovery mode	■ Used to recover refrigerant on site. With operations of indoor and outdoor units prohibited, fully open the electronic expansion valve of the indoor and outdoor units.	■ Set No. 21 of "Setting mode 2" to ON.
10	Vacuuming mode	■ Used to conduct vacuuming on site. Fully open the electronic expansion valves of the indoor and outdoor units, and energize some of solenoid valves. Use a vacuum pump to conduct vacuuming.	■ Set No. 21 of "Setting mode 2" to ON.
11	Power transistor check mode	■ Used for the troubleshooting of DC compressors. Inverter waveform output makes it possible to judge whether an error results from the compressor or the PCB.	■ Set No. 28 of "Setting mode 2" to ON.
12	Setting of model with spare PCB	■ In order to replace the PCB by a spare one, be sure to make model setting.	■ For this setting, set the DS2-2, -3, and-4 switches on the PCB to the model concerned.

2.2 Setting by DIP Switches

Using DIP switches on the PCB enables field setting shown below. However, make no changes of factory settings except for DS1-1.

Dip switch		Setting item	Description
No.	Setting		
DS1-1	ON	Cool / Heat select	Used to set cool / heat select by Cool/Heat selector equipped with outdoor unit.
	OFF (Factory setting)		
DS1-2 ~DS1-4	ON	Not used	Do not change the factory settings.
	OFF (Factory setting)		

■ Setting at replacement by spare PCB




Caution

DIP switch Setting after changing the main PCB(A1P) to spare PCB

After the replacement by the spare PCB, be sure to make settings shown below.

When you change the main PCB(A1P) to spare PCB, please carry out the following setting.

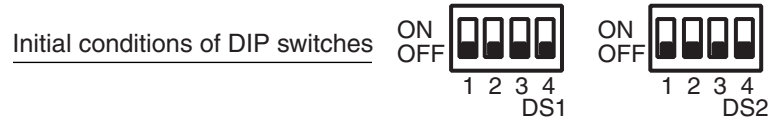

DIP Switch Detail

DS No.	Item	Contents											
DS1-1	Cool/Heat changeover setting	ON	COOL/HEAT setting is made with the use of a Cool/Heat selector mounted to the outdoor unit.										
		OFF (Factory setting of spare PCB)	COOL/HEAT setting is not made with the use of a Cool/Heat selector mounted to the outdoor unit.										
DS1-2	Power supply specification	ON	200V class (220V)										
		OFF (Factory setting of spare PCB)	400V class (380V)										
DS1-3	Cooling only/Heat-pump setting	ON	Cooling only setting										
		OFF (Factory setting of spare PCB)	Heat pump setting										
DS1-4	Check operation	ON	(1) If check operation was not performed during installation → Do not change the setting. (Leave it OFF.)										
		OFF (Factory setting of spare PCB)	(2) If check operation was completed or normal operation is in progress → Change the setting (OFF → ON).										
DS2-1	Unit allocation setting (Domestic / Overseas)	ON	Do not change factory setting of the spare part (OFF).										
DS2-2		OFF (Factory setting of spare PCB)											
DS2-3	Model setting	Make the following settings according to models of outdoor units.											
DS2-4		<table border="1"> <thead> <tr> <th></th> <th>RQYQ140PY1 RREQ140PY1</th> <th>RQYQ180PY1 RREQ180PY1</th> <th>RREQ212PY1</th> </tr> </thead> <tbody> <tr> <td>DS2-3</td> <td>OFF</td> <td>OFF</td> <td>ON</td> </tr> <tr> <td>DS2-4</td> <td>OFF</td> <td>ON</td> <td>OFF</td> </tr> </tbody> </table>		RQYQ140PY1 RREQ140PY1	RQYQ180PY1 RREQ180PY1	RREQ212PY1	DS2-3	OFF	OFF	ON	DS2-4	OFF	ON
	RQYQ140PY1 RREQ140PY1	RQYQ180PY1 RREQ180PY1	RREQ212PY1										
DS2-3	OFF	OFF	ON										
DS2-4	OFF	ON	OFF										

2.3 Setting by BS Buttons

The following settings are made by BS buttons on PCB.


In case of multi outdoor unit system, various items should be set with the master unit.

(Setting with the slave unit is disabled.)

LED display

	MODE H1P	TEST H2P	COOL/HEAT select			Low noise H6P	Demand H7P	Multi; H8P
			IND H3P	MASTER H4P	SLAVE H5P			
Single outdoor unit system	●	●	○	●	●	●	●	●
Multi outdoor unit system	Master	●	○	●	●	●	●	○
	Slave 1 ~ 4	●	●	●	●	●	●	●

(Factory setting)



There are the following 3 setting modes.

(1) Setting mode 1 (H1P OFF)

Initial status (when normal) : Used to select the COOL/HEAT setting. Also indicates during “abnormal”, “low noise control” and “demand control”.

(2) Setting mode 2 (H1P ON)


Used to modify the operating status and to set program addresses, etc. Usually used in servicing the system.

(3) Monitor mode (H1P blinks)

Used to check the program made in Setting mode 2.

■ **Mode changing procedure 1**

Using the MODE button, the modes can be changed as follows.

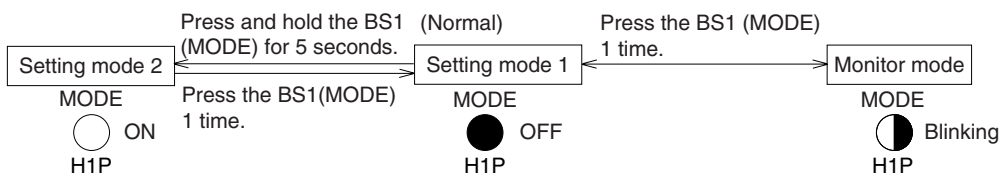

2.4 Setting Mode 1

This mode is used to set and check the following items.

1. Set items In order to make COOL/HEAT selection in a batch of outdoor unit group, change the setting.
 - COOL/HEAT selection (IND) Used to select COOL or HEAT by individual outdoor unit (factory setting).
 - COOL/HEAT selection (MASTER) Used to select COOL or HEAT by outdoor unit group with the master unit.
 - COOL/HEAT selection (SLAVE) Used to select COOL or HEAT by outdoor unit group with the slave unit.
2. Check items The following items can be checked.
 - (1) Current operating conditions (Normal / Abnormal / In check operation)
 - (2) Setting conditions of COOL/HEAT selection (Individual / Batch master / Batch slave)
 - (3) Low noise operating conditions (In normal operation / In low noise operation)
 - (4) Demand operating conditions (In normal operation / In demand operation)

Procedure for changing COOL/HEAT selection setting

Normally, "Setting mode 1" is set. In case of other status, press [MODE (BS1)] button 1 time and set to "Setting mode 1".

Press the [SET (BS2)] button to set the blinking of LED to any of conditions shown on the right.

Press the [RETURN (BS3)] button to determine the setting.

○: ON
●: OFF
◐: Blink

Setting (displaying) item	MODE H1P	TEST H2P	COOL/HEAT select			Low noise H6P	Demand H7P
			IND H3P	MASTER H4P	SLAVE H5P		
For selection by individual outdoor unit (factory setting)	●	●	◐	●	●	●	●
For selection in a batch of outdoor unit group with master unit	●	●	●	◐	●	●	●
For selection in a batch of outdoor unit group with slave unit	●	●	●	●	◐	●	●

Pressing the [RETURN (BS3)] button will return the system to the initial condition of "Setting mode 1".

Procedure for checking check items

The system is normally set to "Setting mode 1". Should the system be set to any mode other than that, press the [MODE (BS1)] button to set the system to "Setting mode 1".

Check the system for each condition through LED displays. (Refer to information in table on the right.)

Pressing the [RETURN (BS3)] button will bring the system to the initial state of "Setting mode 1".

MODE H1P	TEST H2P	COOL/HEAT select			Low noise H6P	Demand H7P
		IND H3P	MASTER H4P	SLAVE H5P		
●	●	○	●	●	●	●

- Current operating conditions
 - Normal ○ Abnormal
 - ◐ In preparation or in check operation
- Setting of COOL/HEAT selection
 - By individual outdoor unit
 - In a batch of outdoor unit group with master unit
 - In a batch of outdoor unit group with slave unit
- Low noise operating conditions
 - In normal operation
 - In low noise operation
- Demand operating conditions
 - In normal operation
 - In demand operation

2.5 Setting Mode 2

Press and hold the **MODE (BS1)** button for 5 seconds and set to "Setting mode 2".

<Selection of setting items>

Press the **SET (BS2)** button and set the LED display to a setting item shown in the table on the right.

↓
Press the **RETURN (BS3)** button and decide the item. (The present setting condition is blinked.)

<Selection of setting conditions>

Press the **SET (BS2)** button and set to the setting condition you want.

↓
Press the **RETURN (BS3)** button and decide the condition.

Press the **RETURN (BS3)** button and set to the initial status of "Setting mode 2".

* If you become unsure of how to proceed, press the **MODE (BS1)** button and return to setting mode 1.

No.	Setting item	Description
0	Digital pressure gauge kit display	Used to make setting of contents to display on the digital pressure gauges (e.g. pressure sensors and temperature sensors)
1	Cool/heat unified address	Sets address for cool/heat unified operation.
2	Low noise/demand address	Address for low noise/demand operation
3	Test operation settings	Used to conduct test operation without making changes to the PCB and replacing the refrigerant, after the completion of maintenance.
5	Indoor unit forced fan H	Allows forced operation of indoor unit fan while unit is stopped. (H tap)
6	Indoor unit forced operation	Allows forced operation of indoor unit.
8	Te setting	Target evaporating temperature for cooling
9	Tc setting	Target condensing temperature for heating
10	Defrost changeover setting	Changes the temperature condition for defrost and sets to quick defrost or slow defrost.
11	Sequential operation setting	Sets sequential operation (Factory setting to ON)
12	External low noise setting / Demand setting	Reception of external low noise or demand signal
13	AIRNET address	Set address for AIRNET.
18	High static pressure setting	Make this setting in the case of operating in high static pressure mode with diffuser duct mounted. (In order to mount the diffuser duct, remove the cover from the outdoor unit fan.)
20	Additional refrigerant charge operation setting	Carries out additional refrigerant charge operation.
21	Refrigerant recovery/vacuuming mode setting	Sets to refrigerant recovery or vacuuming mode.
22	Low night noise setting	Sets automatic low night noise operation in a simple way. The operating time is based on "Starting set" and "Ending set".
25	Setting of external low noise level	Sets low noise level when the low noise signal is input from outside.
26	Low night noise operation start setting	Sets starting time of low night noise operation. (Low night noise setting is also required.)
27	Low night noise operation end setting	Sets ending time of low night noise operation. (Low night noise setting is also required.)
28	Power transistor check mode *Check after disconnection of compressor wires	Used for service diagnosis of DC compressor. Since the waveform of inverter is output without wiring to the compressor, it is convenient to probe whether the trouble comes from the compressor or PCB.
29	Capacity priority setting	If the capacity control is required, the low noise control is automatically released by this setting during carrying out low noise operation and low night noise operation.
30	Demand setting 1	Changes target value of power consumption when demand control 1 is input.
32	Normal demand setting	Normally enables demand control 1 without external input. (Effective to prevent a problem that circuit breaker of small capacity is shut down due to large load.)

No.	Setting item	Description
35	Setting of difference in elevation for the outdoor unit	Make the setting when the outdoor unit is installed 40 m or more below the indoor unit.
38	Emergency operation (Setting for the master unit operation prohibition in multi outdoor unit system)	Used to temporarily prohibit the applicable outdoor unit from operating should there be any defective part in multi outdoor unit system. Since the comfortable environment is extremely impaired, prompt replacement of the part is required.
39	Emergency operation (Setting for the slave unit 1 and 2 operation prohibition in multi outdoor unit system)	
40	Emergency operation (Setting for the slave unit 3 operation prohibition in multi outdoor unit system)	
51	Master-slave set-up for multi outdoor units	Set up master and slave units for multi-connection outdoor units. After setting up, press the BS5 (RESET) button for 5 seconds or more.

↑ The numbers in the "No." column represent the number of times to press the SET (BS2) button.

No.	Setting item display								Setting condition display	
	Setting item	MODE H1P	TEST H2P	C/H selection			Low noise H6P	Demand H7P		
				IND H3P	Master H4P	Slave H5P				
										* Factory setting
0	Digital pressure gauge kit display	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Binary number (4 digits)	1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									~	15 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
1	Cool / Heat Unified address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Binary number (6 digits)	1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									~	31 <input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
2	Low noise/demand address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Binary number (6 digits)	1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									~	31 <input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
3	Test operation	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	Test operation: OFF	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Test operation: ON	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
5	Indoor forced fan H	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Normal operation	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Indoor forced fan H	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
6	Indoor forced operation	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Normal operation	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									Indoor forced operation	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
8	Te setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	Low (Level L)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Normal (Level M)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									High①②③④⑤ (Level H)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/>
										<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
										<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
										<input type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
9	Tc setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Low	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Normal (factory setting)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									High	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
10	Defrost changeover setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	Slow defrost	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Normal (factory setting)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
									Quick defrost	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
11	Sequential operation setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	OFF	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									ON	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> *
12	External low noise/demand setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	External low noise/demand: NO	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									External low noise/demand: YES	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
13	AIRNET address	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Address 0	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Binary number (6 digits)	1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									~	63 <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/> <input type="radio"/>
18	High static pressure setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	High static pressure setting: OFF	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> *
									High static pressure setting: ON	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
20	Additional refrigerant charging operation setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	Refrigerant charging: OFF	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Refrigerant charging: ON	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
21	Refrigerant recovery/vacuuming mode setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Refrigerant recovery / vacuuming: OFF	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Refrigerant recovery / vacuuming: ON	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/>
22	Low night noise setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	OFF	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
									Level 1 (outdoor unit fan with 6 step or lower)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Level 2 (outdoor unit fan with 5 step or lower)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
									Level 3 (outdoor unit fan with 4 step or lower)	<input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>

No.	Setting item display							Setting condition display	
	Setting item	MODE H1P	TEST H2P	C/H selection			Low noise H6P		
				IND H3P	Master H4P	Slave H5P			
									* Factory setting
25	Low noise setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	Level 1 (outdoor unit fan with 6 step or lower) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> Level 2 (outdoor unit fan with 5 step or lower) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> * Level 3 (outdoor unit fan with 4 step or lower) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
26	Low night noise operation start setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	About 20:00 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> About 22:00 (factory setting) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> * About 24:00 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
27	Low night noise operation end setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	About 6:00 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> About 7:00 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> About 8:00 (factory setting) <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> *
28	Power transistor check mode	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> * ON <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
29	Capacity priority setting	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> * ON <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
30	Demand setting 1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	60 % demand <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> 70 % demand <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> * 80 % demand <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
32	Normal demand setting	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> * ON <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
35	Setting of difference in elevation for the outdoor unit	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	Normal <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> 65 m or less <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/>
38	Emergency operation (Master unit with multi outdoor unit system is inhibited to operate.)	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> * Master unit operation: Inhibited <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
39	Emergency operation (Slave unit 1 and 2 with multi outdoor unit system is inhibited to operate.)	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> * Slave unit 1 operation: Inhibited <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
40	Emergency operation (Slave unit 3 with multi outdoor unit system is inhibited to operate.)	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	OFF <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> * Slave unit 2 operation: Inhibited <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>
51	Master-slave set-up for multi outdoor units	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	Automatic judgement <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> * Master <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> Slave 1 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> Slave 2 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> Slave 3 <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/> <input checked="" type="radio"/>

2.6 Monitor Mode

To enter the monitor mode, press the **MODE (BS1)** button when in "Setting mode 1".

<Selection of setting item>

Press the **SET (BS2)** button and set the LED display to a setting item.

<Confirmation on setting contents>

Press the **RETURN (BS3)** button to display different data of set items.

Press the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

No.	Setting item	LED display							Data display
		H1P	H2P	H3P	H4P	H5P	H6P	H7P	
0	Various settings	●	●	●	●	●	●	●	Lower 4 digits
1	C/H unified address	●	●	●	●	●	●	○	Lower 6 digits
2	Low noise/demand address	●	●	●	●	●	○	●	
4	AIRNET address	●	●	●	●	○	●	●	
5	Number of connected indoor units *1	●	●	●	●	○	●	○	
6	Number of connected BS units *2	●	●	●	●	○	○	●	
7	Number of connected zone units (Fixed to "0")	●	●	●	●	○	○	○	Lower 4 digits: upper
8	Number of outdoor units *3	●	●	●	○	●	●	●	
9	Number of BS units *4	●	●	●	○	●	●	○	Lower 4 digits: lower
10	Number of BS units *4	●	●	●	○	●	○	●	Lower 6 digits
11	Number of zone units	●	●	●	○	●	○	○	Lower 4 digits: upper
12	Number of terminal units *5	●	●	●	○	○	●	●	Lower 4 digits: lower
13	Number of terminal units *5	●	●	●	○	○	●	○	Error code table Refer to P. 97~101
14	Contents of error (the latest)	●	●	●	○	○	○	●	
15	Contents of error (1 cycle before)	●	●	●	○	○	○	○	
16	Contents of error (2 cycle before)	●	●	○	●	●	●	●	
20	Contents of retry (the latest)	●	●	○	●	○	●	●	
21	Contents of retry (1 cycle before)	●	●	○	●	○	●	○	Lower 6 digits
22	Contents of retry (2 cycle before)	●	●	○	●	○	○	●	
25	Number of multi connection outdoor units	●	●	○	○	●	●	○	

The numbers in the "No." column represent the number of times to press the SET (BS2) button.

* Press the **MODE (BS1)** button and returns to "Setting mode 1".




Note:

- *1: Number of connected indoor units
Used to make setting of the number of indoor units connected to an outdoor unit.
- *2: Number of connected BS units
Used to make setting of the number of BS units connected to an outdoor unit.
- *3: Number of outdoor units
Used to make setting of the number of outdoor units connected to DIII-NET that is one of the communication lines.
- *4: Number of BS units
Used to make setting of the number of BS units connected to DIII-NET that is one of the communication lines.
- *5: Number of terminal units
Used to make setting of the number of indoor units connected to DIII-NET that is one of the communication lines.
(Only available for VRV indoor units)

Setting item 0 Display contents of “Number of units for various settings”


EMG operation / backup operation setting	ON	●	●	●	○	●	●	●
	OFF	○	●	●	●	●	●	●
Defrost select setting	Short	○	●	●	●	○	●	●
	Medium	○	●	●	●	○	●	●
	Long	○	●	●	●	●	●	●
Te setting	L	○	●	●	●	●	●	●
	M	○	●	●	●	●	○	●
	H ①~⑤	○	●	●	●	●	○	●
Tc setting	L	○	●	●	●	●	●	●
	M	○	●	●	●	●	●	○
	H	○	●	●	●	●	●	○

* Data such as addresses and number of units is expressed as binary numbers; the 2 ways of expressing are as follows:

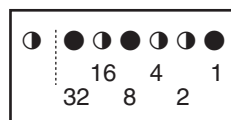

The No. 1 cool/heat unified address is expressed as a binary number consisting of the lower 6 digits. (0 - 63)

In ① the address is 010110 (binary number), which translates to $16 + 4 + 2 = 22$ (base 10 number). In other words, the address is 22.

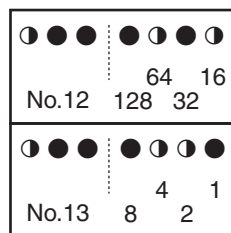

The number of terminal blocks for No. 12 and 13 is expressed as an 8-digit binary number, which is the combination of 4 upper, and 4 lower digits for No. 12 and 13 respectively. (0 - 128)

In ② the address for No. 12 is 0101, the address for No. 13 is 0110, and the combination of the 2 is 01010110 (binary number), which translates to $64 + 16 + 4 + 2 = 86$ (base 10 number). In other words, the number of terminal block is 86.

* See the preceding page for a list of data, etc. for No. 0 - 25.

2.7 Detailed Explanation of Setting Modes


2.7.1 Cool / Heat Mode Switching

There are the following 4 cool/heat switching modes.

- (1) Set cool/heat separately for each outdoor unit system by indoor unit remote controller.
- (2) Set cool/heat separately for each outdoor unit system by cool/heat selector.
- (3) Set cool/heat for more than single outdoor unit system simultaneously in accordance with unified master outdoor unit by indoor unit remote controller.
- (4) Set cool/heat for more than single outdoor unit system simultaneously in accordance with unified master outdoor unit by cool/heat switching remote controller.
- (5) Set cool/heat at all outdoor unit systems simultaneously for each outdoor unit external control adaptor by using the centralized remote controller.


(1) Set Cool / Heat Separately for Each Outdoor Unit System by Indoor Unit Remote Controller

- ◆ It does not matter whether or not there is outdoor - outdoor unit wiring.
- ◆ Set outdoor unit PCB DS1-1 to IN (factory setting).
- ◆ Set cool/heat switching to IND (individual) for "Setting mode 1" (factory setting).

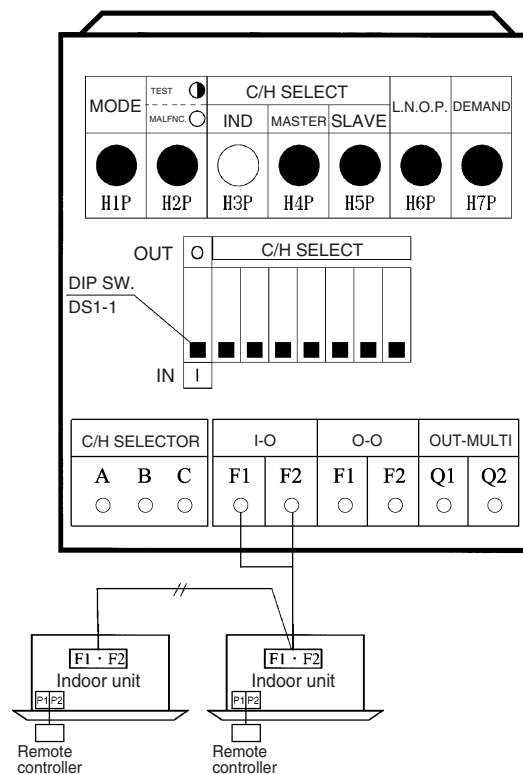


(2) Set Cool / Heat Separately for Each Outdoor Unit System by Cool / Heat Selector

- ◆ It does not matter whether or not there is outdoor - outdoor unit wiring.
- ◆ Set outdoor unit PCB DS1-1 to OUT (factory setting).
- ◆ Set cool/heat switching to IND (individual) for "Setting mode 1" (factory setting).

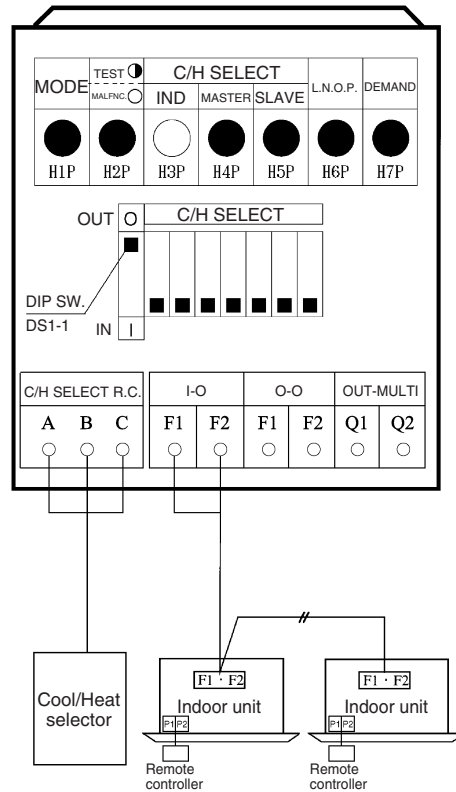

(3) Set Cool / Heat for More Than Single Outdoor Unit System Simultaneously in Accordance with Unified Master Outdoor Unit by Indoor Unit Remote Controller

- ◆ Install the external control adaptor for outdoor unit on either the outdoor-outdoor, indoor-outdoor transmission line.
- ◆ Set outdoor unit PCB DS1-1 to IN (factory setting).
- ◆ In setting mode 1, set the outdoor unit you want to give cool/heat selection permission to as the group master, and set the other outdoor units as group slave units.
- ◆ Set the outdoor unit external control adaptor SS1 to BOTH (factory setting) or C/H, and SS2 to OFF (factory setting).

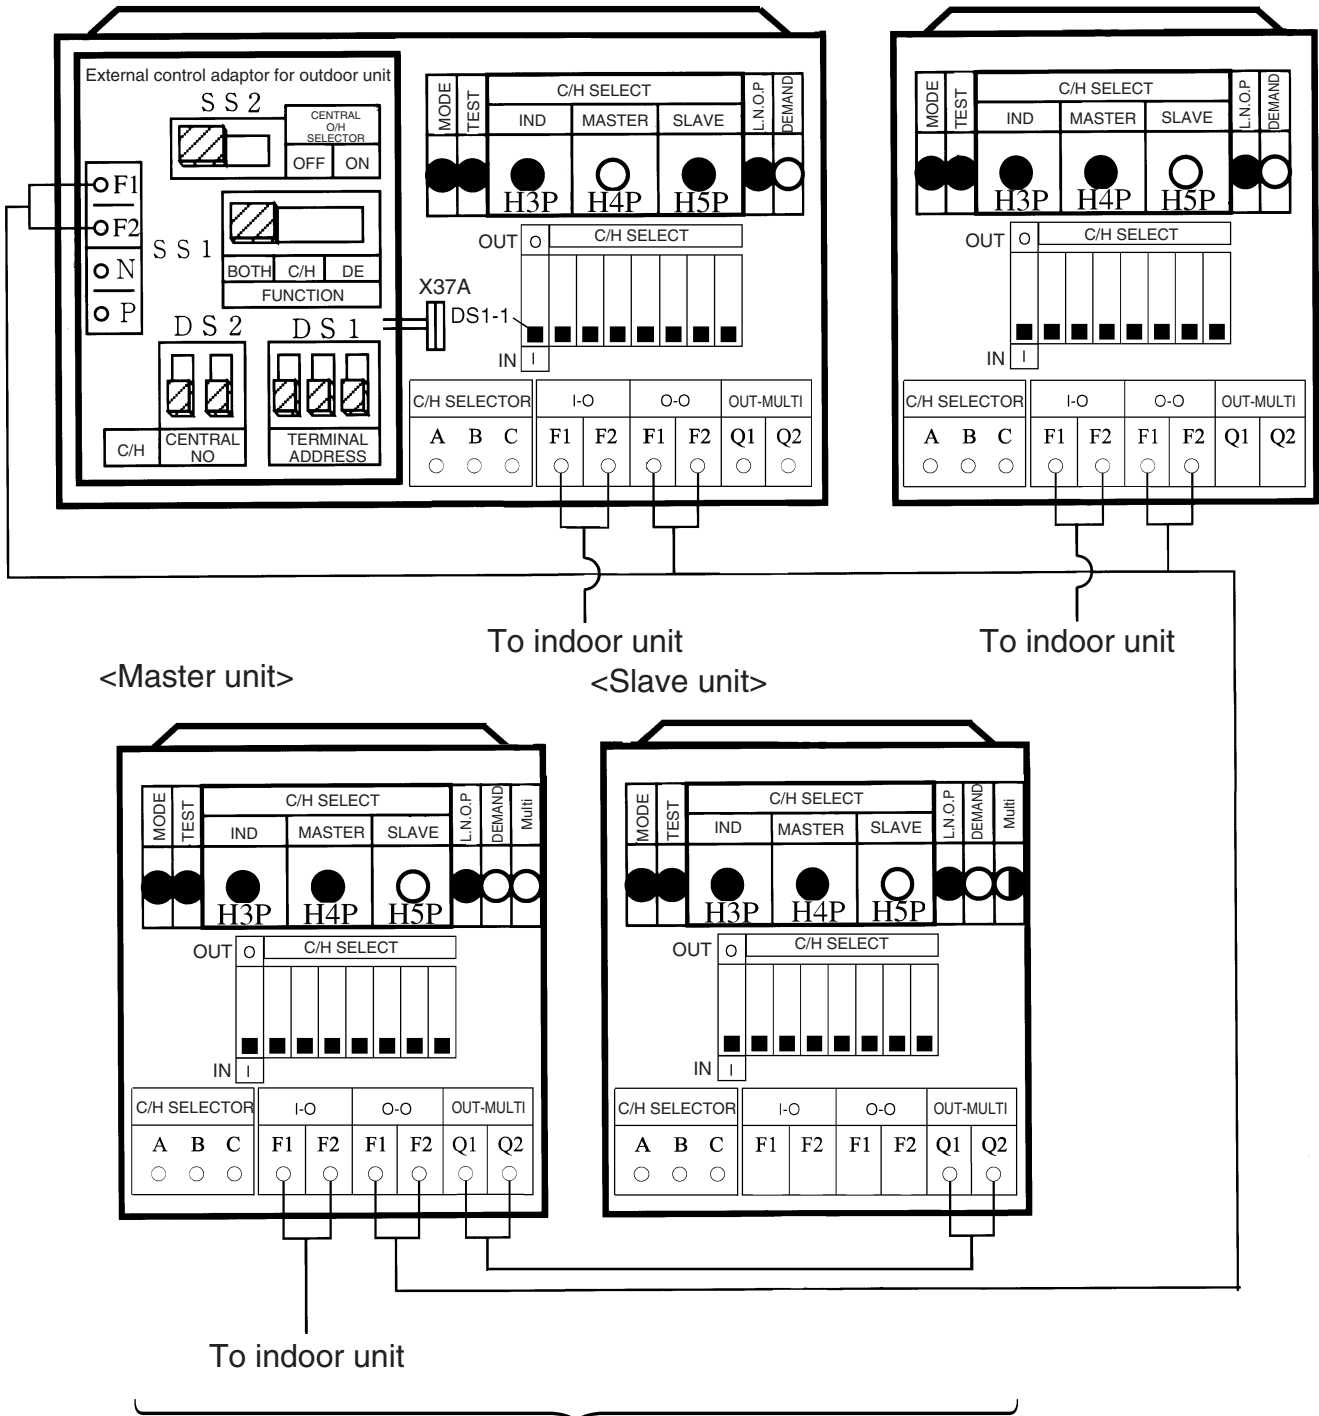


Multi outdoor units connection

- ◆ When multiple external control adaptors are used and cool / heat is selected for each external control adaptor, use “setting mode 2” and set DS1 and DS2 on the external control adaptors and the unified cool / heat address on the outdoor unit main PCB to the same address No. (For details, refer to the following page.)


(4) Set Cool / Heat for More Than Single Outdoor Unit System Simultaneously in Accordance with Unified Master Outdoor Unit by Cool / Heat Selector

- ◆ Install the external control adaptor for outdoor unit on either the outdoor-outdoor, indoor-outdoor transmission line.
- ◆ Mount the COOL/HEAT selector to the master outdoor unit for the unified control.
- ◆ Set the DS1-1 on the PCB of master outdoor unit to OUT.
- ◆ In setting mode 1, set the outdoor unit you want to give cool/heat selection permission to as the group master, and set the other outdoor units as group slave units.
- ◆ When multiple external control adaptors are used and cool / heat is selected for each external control adaptor, use “setting mode 2” and set DS1 and DS2 on the external control adaptors and the unified cool / heat address on the outdoor unit main PCB to the same address No. (For details, refer to the following page.).

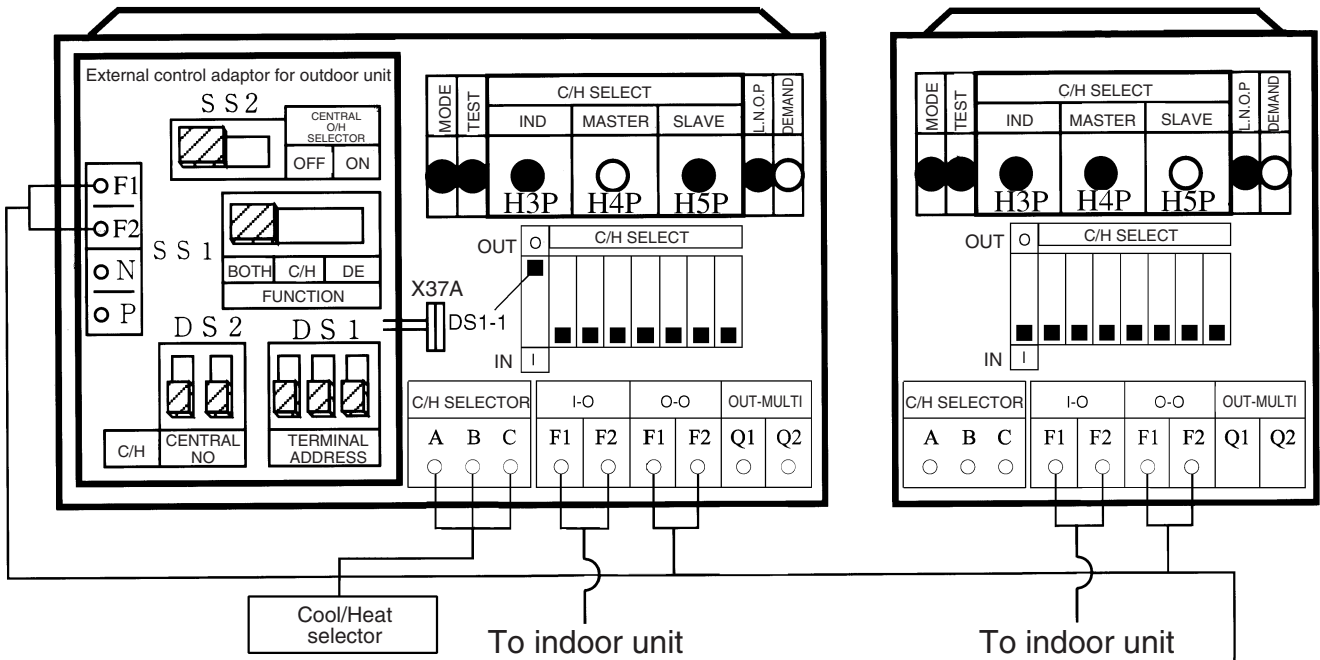

<Master unit>

<Slave unit>

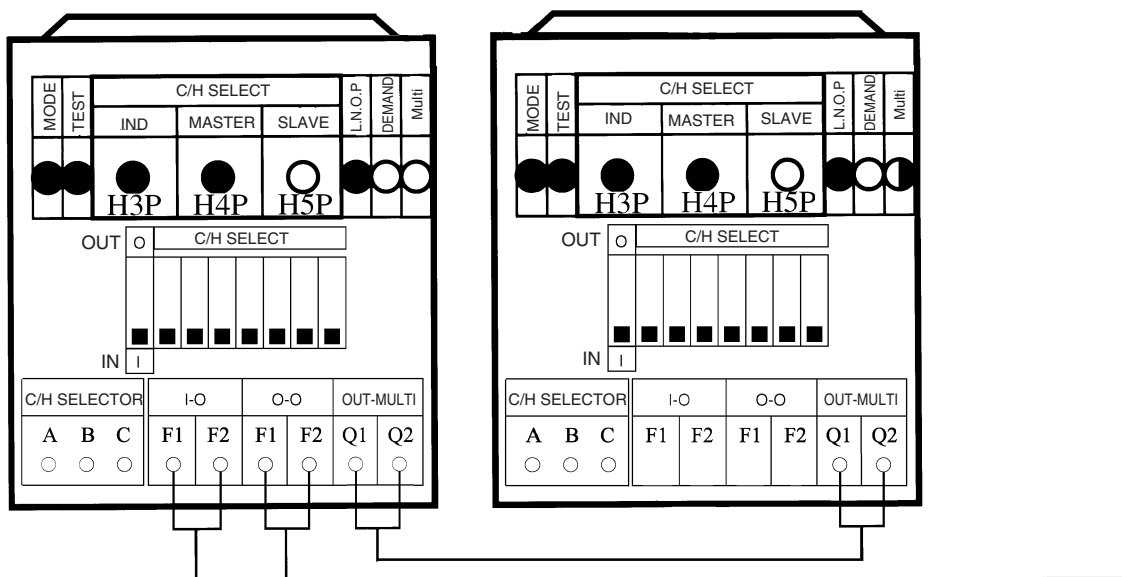


To indoor unit

Multi outdoor units connection

Supplementation on (3) and (4).

When switching cool/heat for each adaptor PCB with the use of more than 1 adaptor PCB, set the address of the external control adaptor for outdoor unit PCB DS1 and DS2 so that it matches the unified cool/heat address of outdoor unit main PCB.

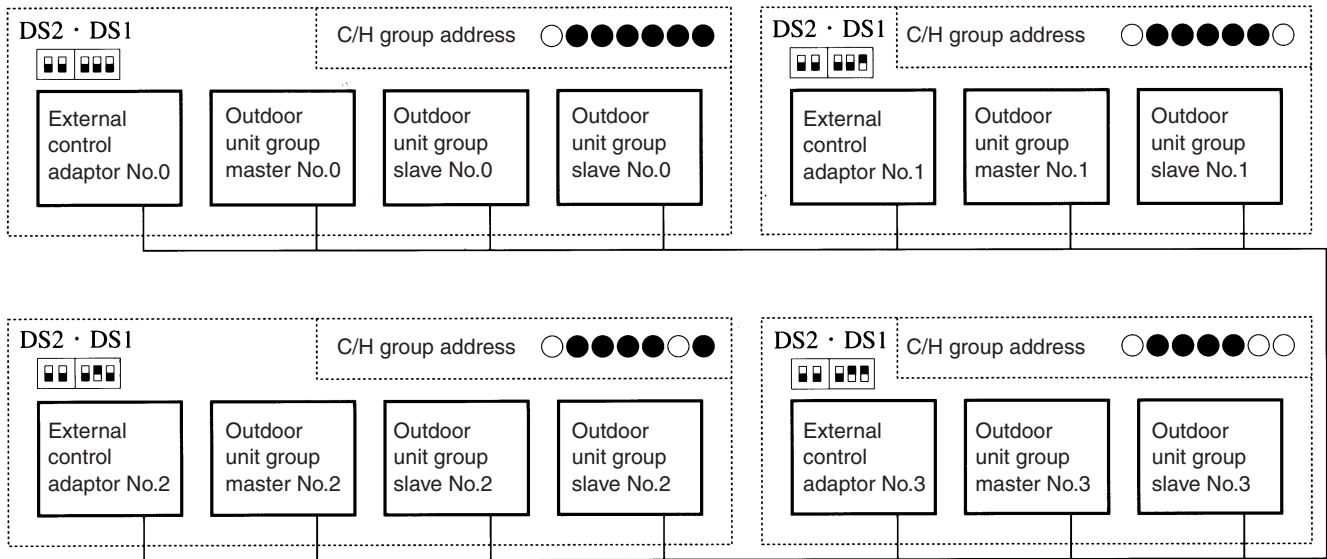


Address setting for ③ and ④ (Set lower 5 digits with binary number.) [No.0 to No.31]

Address No.	Outdoor unit PCB LED Set with setting mode 2		External control adaptor for outdoor unit	
	DS2	DS1	DS2	DS1
No 0	○ ●	● ● ● ● ● 0		0
No 1	○ ●	● ● ● ● ○ 1		1
No 2	○ ●	● ● ● ○ ● 2		2
No 3	○ ●	● ● ● ○ ○ 3		3
No 4	○ ●	● ● ○ ● ● 4		4
}	}	}	}	}
No 30	○ ●	● ● ● ● ○ 30		30
No 31	○ ●	○ ○ ○ ○ ○ 31		31

○ ON ● OFF Upper position (ON) lower position (OFF)
(The shaded part shows knob)

(5) Set Cool/Heat at All Outdoor Unit Systems Simultaneously for Each Outdoor Unit External Control Adaptor by Using the Centralized Remote Controller.


- ◆ Install the outdoor unit external control adaptor (optional accessory) onto the outdoor-outdoor, indoor-outdoor, or indoor-indoor transmission line.
- ◆ Use "setting mode 1" and set all outdoor units to SLAVE.
- ◆ Set the outdoor unit external control adaptor SS1 to BOTH (factory setting) or C/H and set SS2 to ON.
- ◆ Use "setting mode 2" and set DS1 and DS2 on the outdoor unit external control adaptors and the unified heat/cool address on the outdoor unit main PCB to the same address. (The factory setting addresses are all "0".)

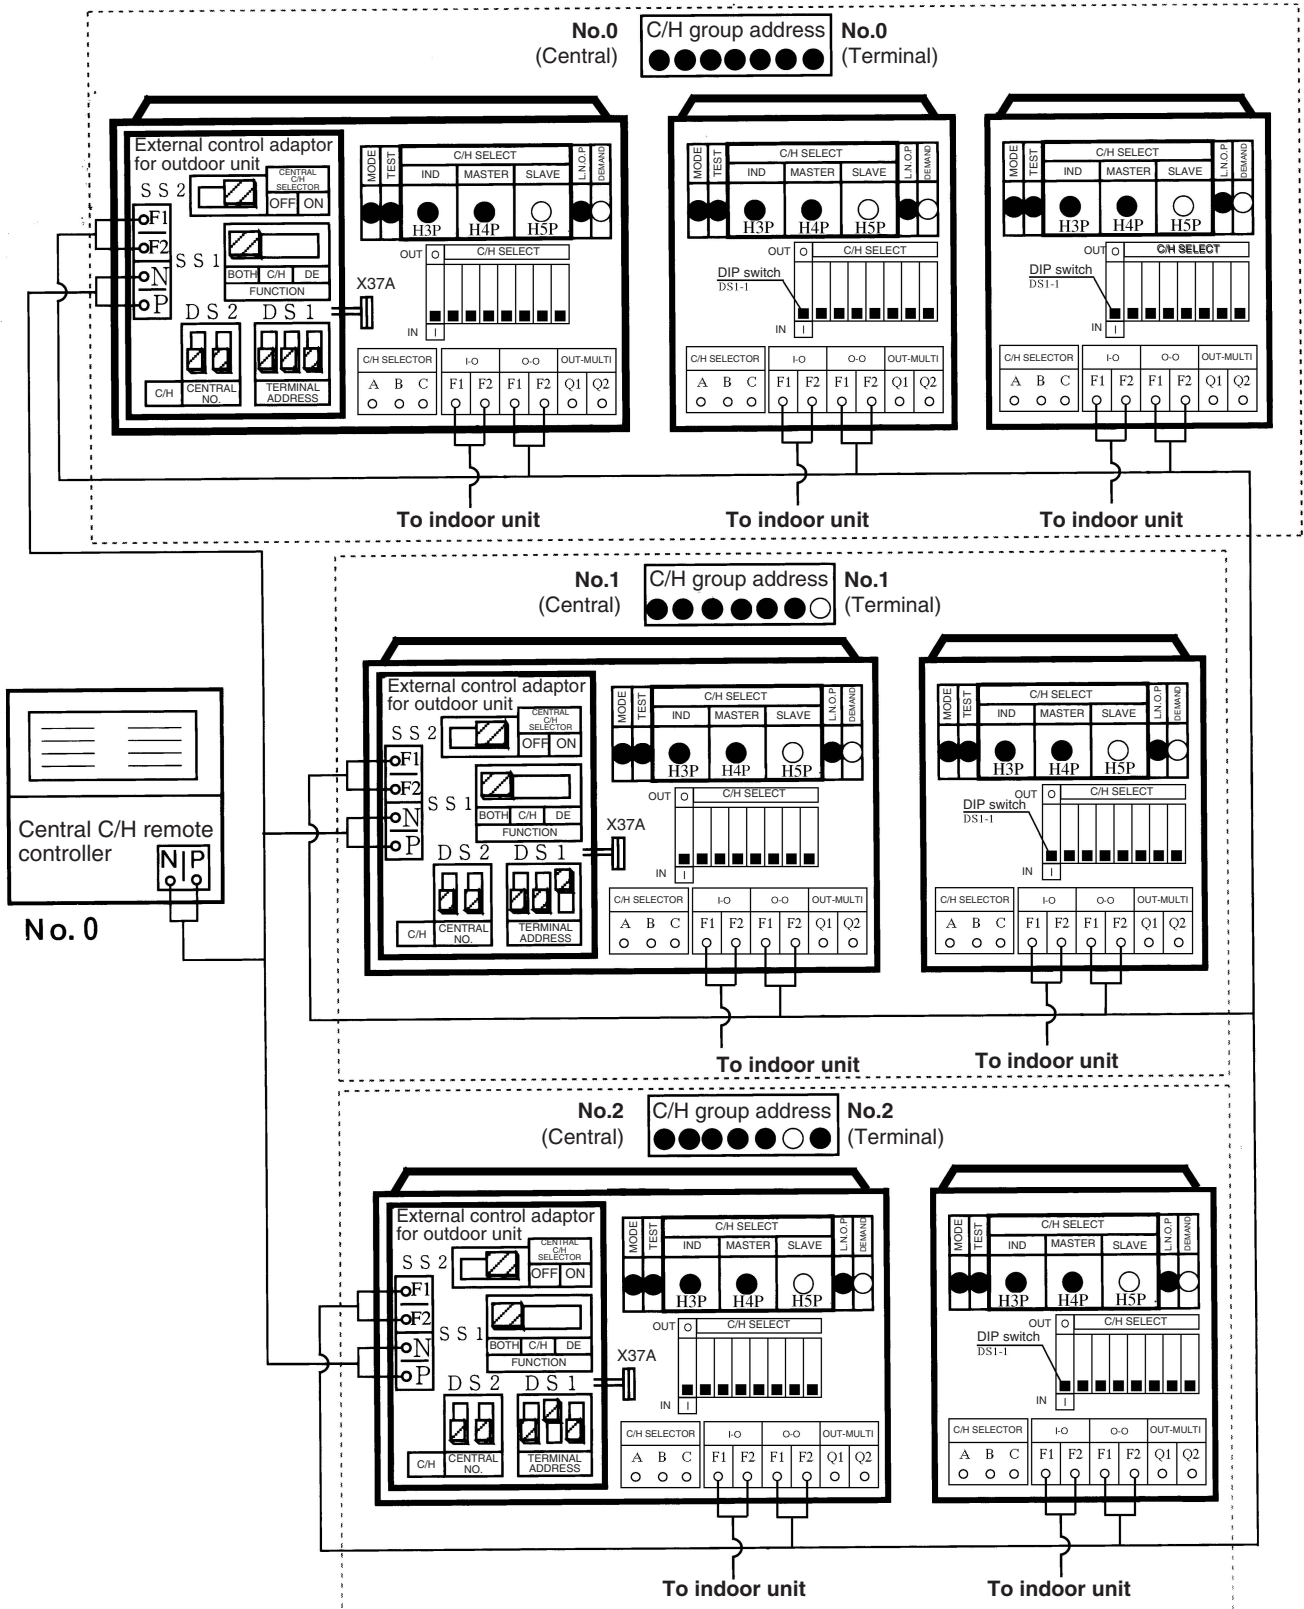

2.7.2 Cool/Heat Changeover Setting [For RQCEQ Type]

● To use a cool/heat changeover remote controller

- (1) Set the DIP switch on the BS unit PCB (DS 1-1) according to the following before turning ON the BS unit.
- (2) Connect the cool/heat changeover remote controller to (A), (B) and (C) of the terminal strip X2M.

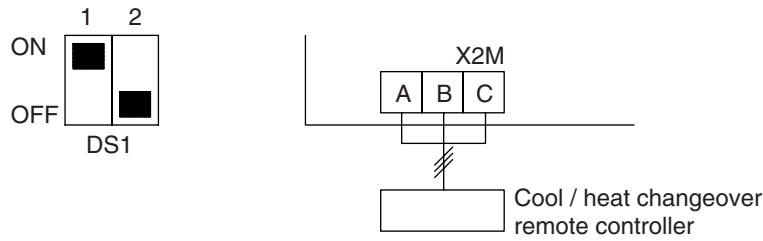


- Note:**
- This setting is read by a micro-computer when the power is turned ON.
 - Be sure to set the switch before turning ON the power.
 - Be sure to close the EL. COMPO. BOX lid after setting.


● To use a cool/heat centralized remote controller

"External control adaptor for the outdoor unit" is required to use a cool/heat centralized remote controller.



- (1) Set the DIP switch on the BS unit PCB (DS 1-2) according to the following before turning ON the BS unit.

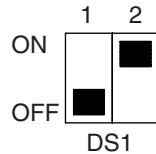

- (2) Connect the connector of the "External control adaptor for the outdoor unit" to the connector (X2A) on the BS unit PCB (Refer to the installation manual and the installation guide for details of the installation).
- (3) Connect the terminals (F1, F2) of the external control adaptor for the outdoor unit to the terminals (F1, F2: indoor side) on the BS unit PCB (Refer to the figure below).

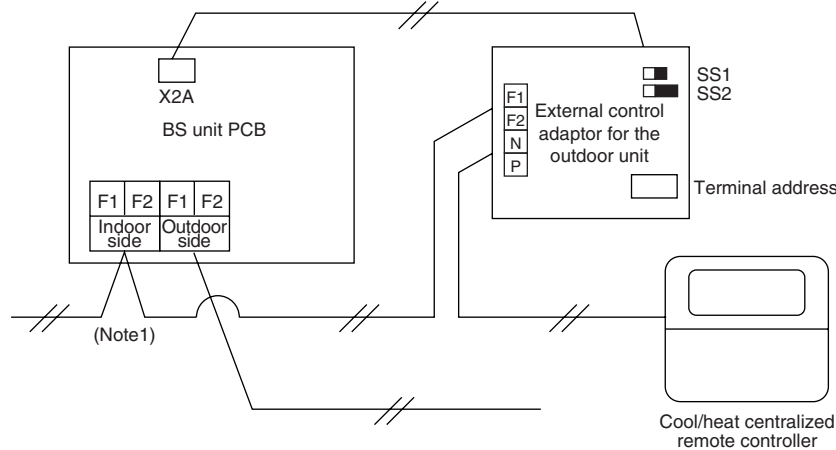

- (4) Set the external control adaptor for the outdoor unit according to the following:
 - Set SS1 of the external control adaptor for the outdoor unit to "BOTH" or "C/H".
 - Set SS2 of the external control adaptor for the outdoor unit to "ON".
 - A unit No. of the cool/heat centralized remote controller can be set by setting the terminal address of the external control adaptor for the outdoor unit to 0-7.

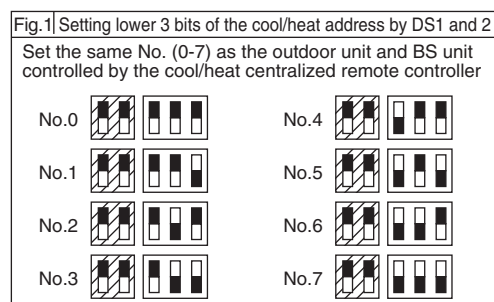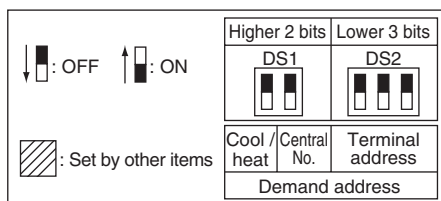

2.7.3 Setting of Low Night Noise Operation and Demand Operation

Setting of Low Night Noise Operation


By connecting the external contact input to the low noise input of the outdoor unit external control adaptor (optional), you can lower operating noise by 2-3 dB.

Setting	Content
Mode 1	Set the outdoor unit fan to Step 6 or lower.
Mode 2	Set the outdoor unit fan to Step 5 or lower.
Mode 3	Set the outdoor unit fan to Step 4 or lower.

A. When the low night noise operation is carried out by external contact (with the use of the external control adaptor for outdoor unit)

1. Connect external control adaptor for outdoor unit and short circuit terminal of low night noise operation (Refer below figure).

If carrying out demand or low noise input, connect the adaptor's terminals as shown below.

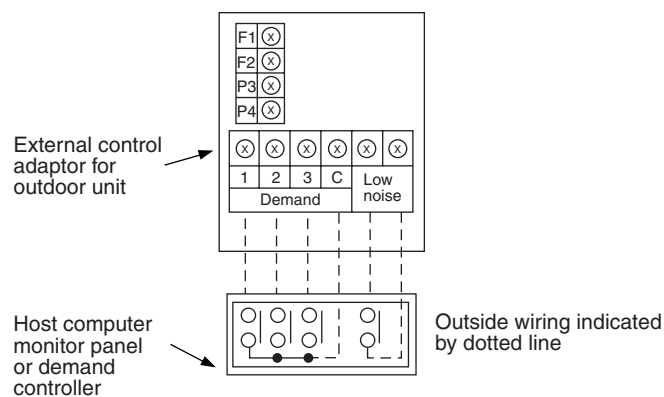

2. While in "Setting mode 2", set the setting condition for set item No. 12 (Setting of external low noise/ demand operation) to "YES".
3. If necessary, while in "Setting mode 2", select the setting condition (i.e., "Mode 1", "Mode 2", or "Mode 3") for set item No. 25 (Setting of external low noise level).
4. If necessary, while in "Setting mode 2", set the setting condition for the set item No. 29 (Setting of capacity priority) to "ON".
(If the condition is set to "ON", when the air conditioning load reaches a high level, the low noise operation command will be ignored to put the system into normal operation mode.)

B. When the low night noise operation is carried out automatically at night (The external control adaptor for outdoor unit is not required)

1. While in "Setting mode 2", select the setting condition (i.e., "Mode 1", "Mode 2", or "Mode 3") for set item No. 22 (Setting of low night noise operation level).
2. If necessary, while in "Setting mode 2", select the setting condition (i.e., "20:00", "22:00", or "24:00") for set item No. 26 (Setting of start time of low night noise operation).
(Use the start time as a guide since it is estimated according to outdoor air temperatures.)
3. If necessary, while in "Setting mode 2", select the setting condition (i.e., "06:00", "07:00", or "08:00") for set item No. 27 (Setting of end time of low night noise operation).
(Use the end time as a guide since it is estimated according to outdoor air temperatures.)
4. If necessary, while in "Setting mode 2", set the setting condition for set item No. 29 (Setting of priority) to "ON".
(If the condition is set to "ON", when the air conditioning load reaches a high level, the system will be put into normal operation mode even during night-time.)

2.7.4 Setting of Demand Operation


By connecting the external contact input to the demand input of the external control adaptor for outdoor unit (optional), the power consumption of unit operation can be saved suppressing the compressor operating condition.

Setting content			Setting method	
Set item	Condition	Content	External control adaptor for outdoor unit	Outdoor unit PCB
Demand 1	Mode 1	The compressor operates at approx. 60% or less of rating.	Short circuit "1" and "C" on the terminal strip (TeS1).	Set item No. 32 to "Demand 1", and item No. 30 to "Level 1".
	Mode 2	The compressor operates at approx. 70% or less of rating.		Set item No. 32 to "Demand 1", and item No. 30 to "Level 2".
	Mode 3	The compressor operates at approx. 80% or less of rating.		Set item No. 32 to "Demand 1", and item No. 30 to "Level 3".
Demand 2	—	The compressor operates at approx. 40% or less of rating.	Short circuit "2" and "C".	Set item No. 32 to "Demand 2".
Demand 3	—	Forced thermostat OFF.	Short circuit "3" and "C".	—

※: However the demand operation does not occur in the following operation modes.

- ① Startup control
- ② Oil return operation
- ③ Defrosting operation
- ④ Pump down residual operation

If carrying out demand or low noise input, connect the adaptor's terminals as shown below.

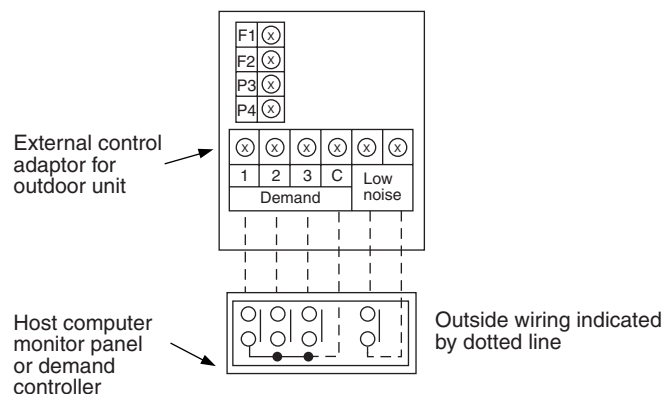

A. When the demand operation is carried out by external contact (with the use of the external control adaptor for outdoor unit).

1. Connect external control adaptor for outdoor unit and short circuit terminals as required (Refer above figure).
2. While in "Setting mode 2", set the setting condition for set item No. 12 (Setting of external low noise/ demand operation) to "YES".
3. If necessary, while in "Setting mode 2", select the set item No. 30 (Setting of Demand 1 level) and then set the setting condition to targeted mode.

B. When the normal demand operation is carried out. (Use of the external control adaptor for outdoor unit is not required.)

1. While in "Setting mode 2", make setting of the set item No. 32 (Setting of alternate demand) to "ON".
2. While in "Setting mode 2", select the set item No. 30 (Setting of Demand 1 level) and then set the setting condition to targeted mode.

2.7.5 Air Tight Test Procedure

After internal servicing is performed in the field, perform the air tight test. Fully open the electronic expansion valves of the outdoor unit and indoor unit, and turn ON some of the solenoid valves.

[Operation procedure]

- (1) With the system stopped, use "Setting mode 2" and set (A) Refrigerant recovery / vacuuming mode (setting item No. 21) to "ON".

All of the indoor unit and outdoor unit electronic expansion valves fully open and some of the solenoid valves turn ON. (H2P blinks to indicate the test operation, and the remote controller displays "Test Operation" and "Under centralized control", thus prohibiting operation.)

- (2) Close the stop valves on the gas side and liquid side, and perform an air tight test at 4.0 MPa.
- (3) Press the MODE button (BS1) to cancel "Setting mode 2".

<Caution>

Do not turn OFF the outdoor unit power during the air tight test.

(The solenoid valves will close and the outdoor unit air tight test will not be possible.)

2.7.6 Setting of Refrigerant Recovery Mode

When carrying out the refrigerant collection on site, fully open the respective electronic expansion valve of indoor and outdoor units.

All indoor and outdoor unit's operation are prohibited.

[Operation procedure]

- (1) In **setting mode 2** with units in stop mode, set "Refrigerant Recovery / Vacuuming mode" to ON. The respective electronic expansion valve of indoor and outdoor units are fully opened and some of solenoid valves open. (H2P turns to display "TEST OPERATION" (blinks), "TEST OPERATION" and "UNDER CENTRALIZED CONTROL" are displayed on the remote controller, and the all indoor / outdoor unit operation is prohibited.

After setting, do not cancel "Setting Mode 2" until completion of refrigerant recovery operation.

- (2) Collect the refrigerant using a refrigerant recovery unit. (See the instruction attached to the refrigerant recovery unit for more detail.)
- (3) Press Mode button "BS1" once and reset "Setting Mode 2".

2.7.7 Setting of Vacuuming Mode

In order to perform vacuuming operation on site, fully open the electronic expansion valves of indoor and outdoor units and turn ON some solenoid valves.

[Operating procedure]

- (1) With **Setting Mode 2** while the unit stops, set "Refrigerant recovery / Vacuuming mode" to ON. The electronic expansion valves of indoor and outdoor units fully open and some of solenoid valves open. (H2P blinks to indicate the test operation, and the remote controller displays "Test Operation" and "Under centralized control", thus prohibiting operation.)

After setting, do not cancel "Setting Mode 2" until completion of Vacuuming operation.

- (2) Use the vacuum pump to perform vacuuming operation.
- (3) Press Mode button "BS1" once and reset "Setting Mode 2".

2.7.8 Emergency Operation

If the compressor cannot operate, this control inhibits any applicable compressor or outdoor unit from operating to perform emergency operation only with the operative compressor or outdoor unit.

[Automatic backup operation]

With multi outdoor unit system, if a certain outdoor unit system errors (i.e., the system stops and indoor unit remote controller displays the error), by resetting the indoor unit remote controller, the applicable outdoor unit is inhibited from operating for 8 hours, thus making it possible to perform emergency operation automatically. However, in the event any of the following errors occurs, automatic backup operation can be performed.

Errors under which automatic backup operation can be performed:

- E3, E4, E5, E7
- F3
- H7, H9
- J2, J3, J5, J6, J7, J9, JA, JC
- L1, L4, L5, L8, L9, LC
- U2, UJ


[Emergency operation with settings in service mode]

* "Inhibition of operation" is set with each outdoor unit.

Make the following settings with the master unit. (Setting with the slave unit becomes disabled.)

* Discriminate the operating status of the master unit / slave units through the following LED display.

LED display (○: ON ●: OFF ◐: Blink)
 H1P — — — H7P H8P

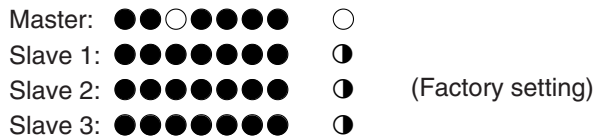


- In order to set the master unit to operation prohibition mode, set No. 38 of Setting mode 2 to "MASTER OPERATION PROHIBITION".

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 38 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

LED display (○: ON ●: OFF ◐: Blink)
 H1P — — — H7P

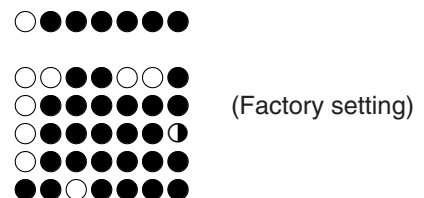


- In order to set the slave unit 1 to operation prohibition mode, set No. 39 of Setting mode 2 to "SLAVE 1 OPERATION PROHIBITION".

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 39 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

LED display (○: ON ●: OFF ◐: Blink)
 H1P — — — H7P

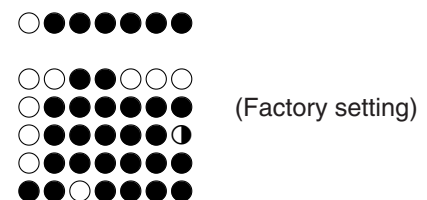

- In order to set the slave unit 2 to operation prohibition mode, set No. 39 of Setting mode 2 to "SLAVE 2 OPERATION PROHIBITION".

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 39 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) twice.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

LED display (○: ON ●: OFF ◑: Blink)
H1P— — — —H7P



(Factory setting)

- In order to set the slave unit 3 to operation prohibition mode, set No. 39 of Setting mode 2 to "SLAVE 3 OPERATION PROHIBITION".

(Procedure)

- (1) Press and hold the MODE button (BS1) for a period of 5 seconds or more.
- (2) Press the SET button (BS2) 40 times.
- (3) Press the RETURN button (BS3) once.
- (4) Press the SET button (BS2) once.
- (5) Press the RETURN button (BS3) twice.
- (6) Press the MODE button (BS1) once.

LED display (○: ON ●: OFF ◑: Blink)
H1P— — — —H7P



(Factory setting)

*

- In the case of multi outdoor unit system, when the above "Inhibition of operation" is set, outdoor unit rotation is not functional.


Part 6

Service Diagnosis

1. Symptom-based Troubleshooting	92
2. Troubleshooting by Remote Controller	95
2.1 The INSPECTION / TEST Button.....	95
2.2 Procedure of Self-diagnosis by Remote Controller	95
2.3 Error Codes and Description	97
2.4 Error Code Indication by Outdoor Unit PCB.....	98
2.5 PCB Abnormality	102
2.6 Earth Leakage by Leak Detection PCB Assy	103
2.7 Actuation of High Pressure Switch (S1PH) or Pressure Switch (S2P)	105
2.8 Actuation of Low Pressure Sensor	107
2.9 Inverter Compressor Motor Lock.....	109
2.10 Outdoor Unit Fan Motor Abnormality.....	111
2.11 Electronic Expansion Valve Coil Abnormality (Y1E~Y3E).....	114
2.12 Abnormal Discharge Pipe Temperature	116
2.13 Humidity Alarm	118
2.14 BS Unit Electronic Expansion Valve Abnormality.....	120
2.15 Abnormal Outdoor Unit Fan Motor Signal	122
2.16 Thermistor System Abnormality	124
2.17 High Pressure Sensor Abnormality	125
2.18 Low Pressure Sensor Abnormality	127
2.19 Inverter PCB Abnormality	129
2.20 Inverter Radiation Fin Temperature Rise	131
2.21 Momentary Overcurrent of Inverter Compressor.....	132
2.22 Overcurrent Abnormal of Inverter Compressor	134
2.23 Inverter Compressor Starting Abnormality	136
2.24 Transmission Error (between Inverter and Main PCB).....	138
2.25 Inverter Over-Ripple Protection.....	140
2.26 Inverter Radiation Fin Thermistor Abnormality.....	142
2.27 Field Setting Abnormality after Replacing Main PCB or Combination Error of PCB.....	143
2.28 Refrigerant Shortage	144
2.29 Reverse Phase, Open Phase.....	146
2.30 Power Supply Insufficient or Instantaneous Error	147
2.31 Check Operation is not Executed.....	150
2.32 Transmission Error (between Indoor and Outdoor Units).....	151
2.33 Transmission Error (between Remote Controller and Indoor Unit)	154
2.34 Transmission Error (Across Outdoor Units)	155
2.35 Transmission Error (between Main and Sub Remote Controllers).....	162
2.36 Transmission Error (between Indoor and Outdoor Units in the Same System).....	163
2.37 Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller.....	164
2.38 Address Duplication of Centralized Control Equipment	172

2.39 Transmission Error (between Centralized Control Equipment and Indoor Unit).....	173
2.40 System is not Set yet.....	176
2.41 System Error, Refrigerant System Address Undefined	177
2.42 Check	179

1. Symptom-based Troubleshooting

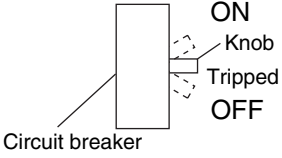	Symptom	Supposed Cause	Countermeasure	
1	The system does not start operation at all.	Blowout of fuse(s)	Turn OFF the power supply and then replace the fuse(s).	
		Cutout of breaker(s)	<ul style="list-style-type: none"> If the knob of any breaker is in its OFF position, turn ON the power supply. If the knob of any circuit breaker is in its tripped position, do not turn ON the power supply.  <p>The diagram shows a rectangular circuit breaker with a knob on the right side. The knob has three positions: 'ON' at the top, 'Tripped' in the middle, and 'OFF' at the bottom. A dashed line indicates the knob's movement between these positions. The label 'Circuit breaker' points to the main body of the device.</p>	
		Power failure	After the power failure is reset, restart the system.	
2	The system starts operation but makes an immediate stop.	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).	
		Clogged air filter(s)	Clean the air filter(s).	
3	The system does not cool or heat air well.	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).	
		Clogged air filter(s)	Clean the air filter(s).	
		Enclosed outdoor unit(s)	Remove the enclosure.	
		Improper set temperature	Set the temperature to a proper degree.	
		Airflow rate set to "LOW"	Set it to a proper airflow rate.	
		Improper direction of air diffusion	Set it to a proper direction.	
		Open window(s) or door(s)	Shut it tightly.	
		[In cooling] Direct sunlight received	Hang curtains or shades on windows.	
		[In cooling] Too many persons staying in a room	The model must be selected to match the air conditioning load.	
[In cooling] Too many heat sources (e.g. OA equipment) located in a room				
4	The system does not operate.	The system stops and immediately restarts operation.	Normal operation. The system will automatically start operation after a lapse of 5 minutes.	
		Pressing the TEMP ADJUST button immediately resets the system.		
		The remote controller displays "UNDER CENTRALIZED CONTROL", which blinks for a period of several seconds when the OPERATION button is depressed.	The system is controlled with centralized remote controller. Blinking display indicates that the system cannot be operated using the remote controller.	Operate the system using the COOL/HEAT centralized remote controller.
		The system stops immediately after turning ON the power supply.	The system is in preparation mode of micro-computer operation.	Wait for a period of approximately 1 minute.
5	The system makes intermittent stops.	The remote controller displays error codes "U4" and "U5", and the system stops but restarts after a lapse of several minutes.	The system stops due to an interruption in communication between units caused by electrical noises coming from equipment other than air conditioners.	Remove causes of electrical noises. If these causes are removed, the system will automatically restart operation.
6	COOL-HEAT selection is disabled.	The remote controller displays "UNDER CENTRALIZED CONTROL".	This remote controller has no option to select cooling operation.	Use a remote controller with option to select cooling operation.
		The remote controller displays "UNDER CENTRALIZED CONTROL", and the COOL-HEAT selection remote controller is provided.	COOL-HEAT selection is made using the COOL-HEAT selection remote controller.	Use the COOL-HEAT selection remote controller to select cool or heat.


	Symptom	Supposed Cause	Countermeasure
7	The system conducts fan operation but not cooling or heating operation.	This symptom occurs immediately after turning ON the power supply.	The system is in preparation mode of operation. Wait for a period of approximately 10 minutes.
		"UNDER CENTRALIZED CONTROL" is displayed on the remote controller and the cooling/heating operation stops. The operation switches to the air supply operation.	Even though, the cooling or heating operation is set, the air supply operation continues during thermal storage operation. "UNDER CENTRALIZED CONTROL" is displayed on the remote controller. Normal operation.
8	The airflow rate is not reproduced according to the setting.	Even pressing the AIRFLOW RATE SET button makes no changes in the airflow rate.	In heating, when the room temperature reaches the set degree, the outdoor unit will stop while the indoor unit is brought to fan LL operation so that no one gets cold air. Furthermore, if fan operation mode is selected when other indoor unit is in heating, the system will be brought to fan LL operation. Normal operation.
9	The airflow direction is not reproduced according to the setting.	The airflow direction is not corresponding to that displayed on the remote controller. The flap does not swing.	Automatic control Normal operation.
10	A white mist comes out from the system.	<Indoor unit> In cooling, the ambient humidity is high. (This indoor unit is installed in a place with much oil or dust.)	Uneven temperature distribution due to heavy stain of the inside of the indoor unit Clean the inside of the indoor unit.
		<Indoor unit> Immediately after cooling operation stopping, the outdoor air temperature and humidity are low.	Hot gas (refrigerant) flown in the indoor unit results to be vapor from the unit. Normal operation.
		<Indoor and outdoor units> After the completion of defrosting operation, the system is switched to heating operation.	Defrosted moisture turns to be vapor and comes out from the units. Normal operation.
11	The system produces sounds.	<Indoor unit> Immediately after turning ON the power supply, indoor unit produces "ringing" sounds.	These are operating sounds of the electronic expansion valve of the indoor unit. Normal operation. This sound becomes low after a lapse of approximately 1 minute.
		<Indoor and outdoor units> "Hissing" sounds are continuously produced while in cooling or defrosting operation.	These sounds are produced from gas (refrigerant) flowing respectively through the indoor and outdoor units. Normal operation.
		<Indoor and outdoor units> "Hissing" sounds are produced immediately after the startup or stop of the system, or the startup or stop of defrosting operation.	These sounds are produced when the gas (refrigerant) stops or changes flowing. Normal operation.
		<Indoor unit> Faint sounds are continuously produced while in cooling or after stopping the operation.	These sounds are produced from the drain discharge device in operation. Normal operation.
		<Indoor unit> "Creaking" sounds are produced while in heating or after stopping the operation.	These sounds are produced from resin parts expanding and contracting with temperature changes. Normal operation.
		<Indoor unit> Sounds like "trickling" or the like are produced from indoor units in the stopped state.	On VRV systems, these sounds are produced when other indoor units in operation. The reason is that the system runs in order to prevent oil or refrigerant from dwelling. Normal operation.
		<Outdoor unit> Pitch of operating sounds changes.	The reason is that the compressor changes the operating frequency. Normal operation.

	Symptom		Supposed Cause	Countermeasure
12	Dust comes out from the system.	Dust comes out from the system when it restarts after the stop for an extended period of time.	Dust, which has deposited on the inside of indoor unit, is blown out from the system.	Normal operation.
13	Odors come out from the system.	In operation	Odors of room, cigarettes or else adsorbed to the inside of indoor unit are blown out.	The inside of the indoor unit should be cleaned.
14	Outdoor unit fan does not rotate.	In operation	The reason is that fan revolutions are controlled to put the operation to the optimum state.	Normal operation.
15	LCD display "E8" appears on the remote controller.	Immediately after turning ON the power supply	The reason is that the system is checking to be sure the remote controller is normal.	Normal operation. This code is displayed for a period of approximately 1 minute at maximum.
16	The outdoor unit compressor or the outdoor unit fan does not stop.	After stopping operation	It stops in order to prevent oil or refrigerant from dwelling.	Normal operation. It stops after a lapse of approximately 5 to 10 minutes.
17	The outdoor gets hot.	While stopping operation	The reason is that the compressor is warmed up to provide smooth startup of the system.	Normal operation.
18	Hot air comes out from the system even though it stops.	Hot air is felt while the system stops.	On VRV systems, small quantity of refrigerant is fed to indoor units in the stopped state when other indoor units are in operation.	Normal operation.
19	The system does not cool air well.	The system is in dry operation.	The reason is that the dry operation serves not to reduce the room temperature where possible.	Change the system to cooling operation.

2. Troubleshooting by Remote Controller

2.1 The INSPECTION / TEST Button


The following modes can be selected by using the [INSPECTION/TEST Operation] button on the remote control.

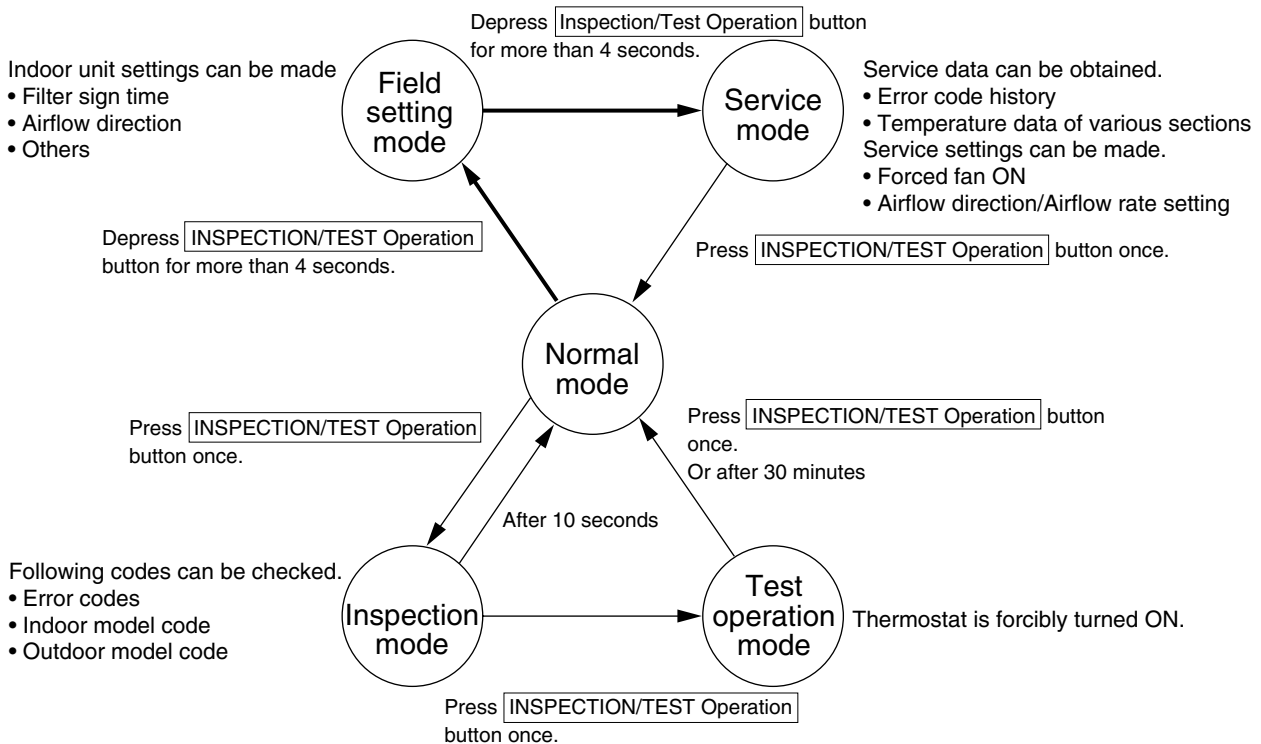

2.2 Procedure of Self-diagnosis by Remote Controller

2.2.1 Wired Remote Controller — BRC1D528

If operation stops due to error, the remote controller's operation LED blinks, and error code is displayed. (Even if stop operation is carried out, error contents are displayed when the inspection mode is entered.) The error code enables you to tell what kind of error caused operation to stop. Refer to P.97 for error code and error contents.

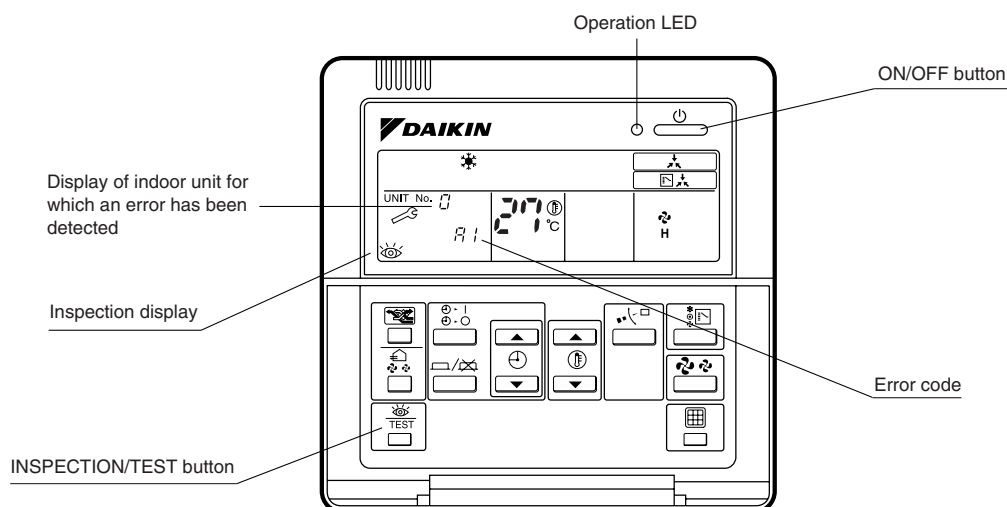


Note:

1. Pressing the INSPECTION/TEST button will blink the check indication.
2. While in service mode, holding down the ON/OFF button for a period of 5 seconds or more will clear the error history indication shown above. In this case, on the codes display, the error code will blink twice and then change to "00" (= Normal), the Unit No. will change to "00", and the operation mode will automatically switch from service mode to normal mode (displaying the set temperature).

2.2.2 Wired Remote Controller — BRC1E51A7

The following will be displayed on the screen when an error (or a warning) occurs during operation. Check the error code and take the corrective action specified for the particular model.

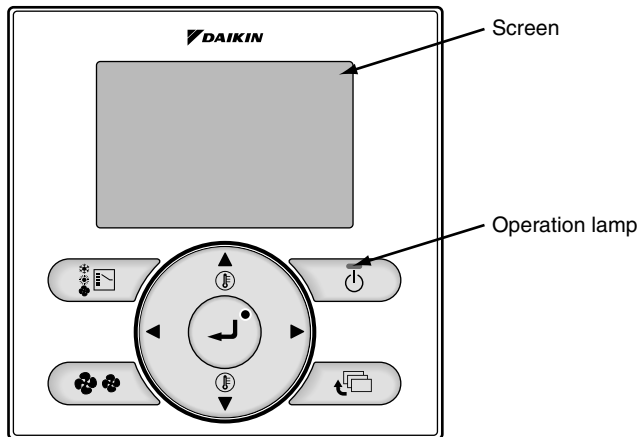

(1)Checking an error or warning

	Operation Status	Display	
Abnormal shutdown	The system stops operating.	The operation lamp (green) starts to blink. The message "Error: Press Menu button" will appear and blink at the bottom of the screen.	
Warning	The system continues its operation.	The operation lamp (green) remains on. The message "Warning: Press Menu button" will appear and blink at the bottom of the screen.	

(2)Taking corrective action

- Press the Menu/Enter button to check the error code.



- Take the corrective action specific to the model.

Error code:A1	— Error code
Contact address 0123-456-789	
Indoor Unit FXMQ40PVE Outdoor Unit RWEYQ10PY1	└ Applicable model names
Return	

2.3 Error Codes and Description

○: ON ●: OFF ◐: Blink

	Error code	Operation lamp	Error contents	Page Referred
Outdoor Unit	E1	●	PCB abnormality	102
	E2	●	Earth Leakage by Leak Detection PCB Assy	103
	E3	●	Actuation of high pressure switch or pressure switch	105
	E4	●	Actuation of low pressure sensor	107
	E5	●	Inverter compressor motor lock	109
	E7	●	Outdoor unit fan motor abnormality	111
	E9	●	Electronic expansion valve coil abnormality (Y1E ~ Y3E)	114
	F3	●	Abnormal discharge pipe temperature	116
	F4	●	Humidity alarm	118
	F9	●	BS unit electronic expansion valve abnormality	120
	H7	●	Abnormal outdoor unit fan motor signal	122
	H9	●	Abnormal outdoor air thermistor	124
	J3	●	Abnormal discharge pipe thermistor	124
	J5	●	Abnormal suction pipe thermistor	124
	J6	●	Abnormal heat exchanger deicer thermistor	124
	J7	●	Abnormal liquid pipe thermistor	124
	J8	●	Abnormal receiver gas vent outlet thermistor	124
	J9	●	Abnormal subcooling heat exchanger outlet thermistor	124
	JA	●	High pressure sensor abnormality	125
	JC	●	Low pressure sensor abnormality	127
	L1	●	Inverter PCB abnormality	129
	L4	●	Inverter radiation fin temperature rise	131
	L5	●	Momentary overcurrent of inverter compressor	132
	L8	●	Overcurrent abnormal of inverter compressor	134
	L9	●	Inverter compressor starting abnormality	136
	LC	●	Transmission error (between inverter and main PCB)	138
	P1	●	Inverter over-ripple protection	140
	P4	●	Inverter radiation fin thermistor abnormality	142
	PJ	●	Field setting abnormality after replacing main PCB or combination error of PCB	143
	System	U0	○	Refrigerant shortage
U1		●	Reverse phase, open phase	146
U2		●	Power supply insufficient or instantaneous error	147
U3		●	Check operation is not executed	150
U4		●	Transmission error (between indoor and outdoor units)	151
U5		●	Transmission error (between remote controller and indoor unit)	154
U7		●	Transmission error (Across outdoor units)	155
U8		●	Transmission error (between main and sub remote controllers)	162
U9		●	Transmission error (between indoor and outdoor units in the same system)	163
UA		●	Improper combination of indoor and outdoor units, indoor units and remote controller	164
UC		○	Address duplication of centralized control equipment	172
UE		●	Transmission error (between centralized control equipment and indoor unit)	173
UF		●	System is not set yet	176
UH		●	System error, refrigerant system address undefined	177

2.4 Error Code Indication by Outdoor Unit PCB

<Monitor mode>

To enter the monitor mode, press the **MODE (BS1)** button when in "Setting mode 1".

* Refer to P. 76 for Monitor mode.

<Selection of setting item>

Press the **SET (BS2)** button and set the LED display to a setting item.

* Refer to P. 76 for Monitor mode.

<Confirmation of error 1>

Press the **RETURN (BS3)** button once to display "First digit" of error code.

<Confirmation of error 2>

Press the **SET (BS2)** button once to display "Second digit" of error code.

<Confirmation of error 3>

Press the **SET (BS2)** button once to display "error location".

<Confirmation of error 4>

Press the **SET (BS2)** button once to display "master or slave 1 or slave 2 or slave 3" and "error location".

Press the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

* Press the **MODE (BS1)** button and returns to "Setting mode 1".

Detail description on next page.

Error		Error code
Description of error	Description of error (PGF)	Remote controller
PCB abnormality	PCB abnormality	E1
	Defective PCB	
Leak detection PCB	Indicate electric leakage detected by the leak detection PCB	E2
Abnormal discharge pressure or field piping pressure	HPS or PS activated	E3
Abnormal suction pressure	Defective Pe	E4
Compressor lock	INV. compressor lock detected	E5
Overload, overcurrent and abnormal lock of outdoor unit fan motor	Instantaneous overcurrent of 1DC fan motor	E7
	1DC fan motor lock detected	
	Fan 1 IPM faulty protection detected	
Electronic expansion valve abnormality	EVM (main)	E9
	EVJ (refrigerant charging)	
	EVT (subcool heat exchanger)	
Abnormal discharge pipe temperature	Defective Td	F3
Abnormal humidity	Humidity alarm	F4
BS unit electronic expansion valve abnormality	BS EVH disconnected (Y4E)	F9
	BS EVL disconnected (Y5E)	
	BS EVHS disconnected (Y2E)	
	BS EVLS disconnected (Y3E)	
	BS EVSC disconnected (Y1E)	
Abnormal positioning signal of outdoor unit fan motor	1DC fan motor positioning signal abnormality	H7
Abnormal outdoor temperature	Ta sensor abnormality (short circuited or open)	H9
Discharge pipe temperature sensor abnormality	Sensor abnormality (open)	J3
	Sensor abnormality (short circuited)	
Suction pipe temperature sensor abnormality	TsA sensor abnormality (short circuited) (R5T)	J5
Heat exchanger temperature sensor abnormality	Tb sensor abnormality (R6T)	J6
Liquid pipe temperature sensor abnormality	Tsc sensor abnormality (R8T)	J7
	TL sensor abnormality (R9T)	
Heat exchanger liquid pipe temperature sensor abnormality	Tf sensor abnormality (R3T)	J8
Subcool heat exchanger temperature sensor abnormality	Tsh sensor abnormality (R7T)	J9
Discharge pressure sensor abnormality	Pc sensor abnormality (open)	JA
	Pc sensor abnormality (short circuited)	
Suction pressure sensor abnormality	Pc sensor abnormality (open)	JC
	Pe sensor abnormality (short circuited)	
INV. PCB abnormality	Faulty IPM	L1
	Current sensor failure confirmation 1	
	Current sensor failure confirmation 2	
Rise in INV. radiation fin temperature	IGBT abnormality	L4
	Overheat of INV. radiation fin temperature	
DC output overcurrent	Instantaneous overcurrent of INV	L5
Electronic thermal	Electronic thermal 1	L8
	Electronic thermal 2	
	Loss of synchronization	
	Thunder detected	
Stall prevention (time limit)	Stall prevention (increased current)	L9
	Stall prevention (startup failure)	
	Loss of synchronization	
INV. transmission error	INV. transmission data error	LC
	INV. transmission error	

○ : ON
 ◐ : Blink
 ● : OFF

○: ON ●: OFF ◐: Blink

Error code	Check 1							Check 2							Check 3							Check 4											
	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P					
E1	○	○	●	●	●	○	○	○	●	○	●	●	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
E2								○	●	○	●	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
E3								○	●	○	●	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
E4								○	●	○	●	○	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
E5								○	●	○	●	○	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
E7								○	●	○	●	○	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
E9								○	●	○	○	●	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○
F3	○	○	●	●	○	●	○	○	●	○	●	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
F4								○	●	○	●	○	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
F9								○	●	○	○	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
H7	○	○	●	●	○	●	○	○	●	○	●	○	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
H9								○	●	○	○	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
J3	○	○	●	●	○	○	○	○	●	○	●	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
J5								○	●	○	●	○	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
J6								○	●	○	●	○	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
J7								○	●	○	●	○	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
J8								○	●	○	○	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
J9								○	●	○	○	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
JA								○	●	○	○	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
JC								○	●	○	○	○	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
L1	○	○	●	●	○	○	○	○	●	○	●	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
L4								○	●	○	●	○	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
L5								○	●	○	●	○	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
L8								○	●	○	○	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
L9								○	●	○	○	●	○	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
LC								○	●	○	○	○	●	○	○	○	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	

Display of contents of error (first digit)

Display of contents of error (second digit)

Display 1 of error in detail

Display 2 of error in detail

*1: Faulty system	Individual system	Multi system
● ● ● →	Right-hand system	Master
● ● ○ →	Left-hand system	Slave 1
● ○ ● →	—	Slave 2
● ○ ○ →	—	Slave 3
○ ○ ○ →	All systems	System

<Monitor mode>

To enter the monitor mode, press the **MODE (BS1)** button when in "Setting mode 1".

* Refer to P. 76 for Monitor mode.

<Selection of setting item>

Press the **SET (BS2)** button and set the LED display to a setting item.

* Refer to P. 76 for Monitor mode.

<Confirmation of error 1>

Press the **RETURN (BS3)** button once to display "First digit" of error code.

<Confirmation of error 2>

Press the **SET (BS2)** button once to display "Second digit" of error code.

<Confirmation of error 3>

Press the **SET (BS2)** button once to display "error location".

<Confirmation of error 4>

Press the **SET (BS2)** button once to display "master or slave 1 or slave 2 or slave 3" and "error location".

Press the **RETURN (BS3)** button and switches to the initial status of "Monitor mode".

* Press the **MODE (BS1)** button and returns to "Setting mode 1".

Detail description on next page.

Error		Error code
Description of error	Description of error (PGF)	Remote controller
Open phase and unbalanced power supply	Unbalanced INV power supply voltage	P1
INV. radiation fin temperature sensor abnormality	INV fin thermistor abnormality	P4
Faulty combination of INV. and fan driver	Faulty combination of INV.	PJ
Reversed phase	Reversed phase abnormality	U1
	Reversed phase abnormality (ON)	
Abnormal power supply voltage	Insufficient INV. voltage	U2
	INV. open phase (single phase)	
	Abnormal charge of capacitor of INV. main circuit	
Test operation not carried out yet	Test operation not carried out yet	U3
	Test operation was not completed normally	
	Test operation was not completed (during initial transmission)	
	Test operation was not completed (during normal transmission)	
	Test operation was not completed (transmission error)	
	Test operation was not completed (all units have transmission error)	
Faulty transmission between indoor and outdoor units	IN-OUT transmission error	U4
	System error	
Faulty transmission between outdoor units	Error caused when mounting the external control adaptor	U7
	Alarm given when mounting the external control adaptor for outdoor unit	
	Error caused between the master and the slave 1	
	Error caused between the master and the slave 2	
	Error caused between the master and the slave 3	
	Faulty address setting of slaves 1, 2 and 3	
	4 or more outdoor units connected in the same system	
	Erroneous address of slaves 1, 2 and 3	
	BS alarm	
	Indoor connection capacity error by a test operation	
Faulty transmission with other systems	Other system or other unit in the same system	U9
Faulty field setting	Excess indoor units connected	UA
	Connection of erroneous models of indoor unit	
	Faulty combination of outdoor units	
	BS unit abnormality	
	Faulty wiring in units dedicated to multi connections	
	Faulty connection of former BS unit	
	Faulty connection between outdoor and BS unit	
	Faulty connection between BS units	
	Wrong number of indoor units connected to BS unit	
	Faulty connection of BS unit at HP	
Faulty connection of outdoor unit at HP/HR		
Unmatched wiring/piping, no system settings	Unmatched wiring/piping	UF
Faulty system line	Wrong wiring (auto address error)	UH

○ : ON
 ● : Blink
 ● : OFF

○: ON ●: OFF ◐: Blink

Error code	Check 1							Check 2							Check 3							Check 4							
	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	H1P	H2P	H3P	H4P	H5P	H6P	H7P	
P1	◐	◐	●	◐	●	●	●	◐	●	○	●	●	●	◐	◐	○	●	●	●	●	●	◐	○	○	●	*1			
P4								◐	●	○	●	◐	●	●	◐	○	●	●	●	●	●	◐	○	○	●				
PJ								◐	●	○	◐	◐	●	◐	◐	○	●	●	●	●	●	◐	○	○	●				
U1	◐	◐	●	◐	●	●	●	◐	●	○	●	●	●	◐	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
U2								◐	●	○	●	●	◐	●	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
U3								◐	●	○	●	●	◐	◐	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
U4								◐	●	○	●	◐	●	●	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
U7								◐	●	○	●	◐	◐	◐	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
U9								◐	●	○	◐	●	●	◐	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
UA								◐	●	○	◐	●	◐	●	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
UF								◐	●	○	◐	◐	◐	◐	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	
UH								◐	●	○	◐	●	◐	◐	◐	○	●	●	●	●	●	◐	○	○	●	◐	◐	◐	

Display of contents of error (first digit)

Display of contents of error (second digit)

Display 1 of error in detail


Display 2 of error in detail


*1: Faulty system	Individual system	Multi system
● ● ● →	Right-hand system	Master
● ● ◐ →	Left-hand system	Slave 1
● ◐ ● →	—	Slave 2
● ◐ ◐ →	—	Slave 3
◐ ◐ ◐ →	All systems	System

2.5 PCB Abnormality


Remote Controller Display	E 1
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Abnormality is detected under the communication conditions in the hardware section between the indoor unit and outdoor unit.
Error Decision Conditions	When the communication conditions in the hardware section between the indoor unit and the outdoor unit are not normal.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective outdoor unit main PCB (A1P) ■ Defective connection of inside/ outside relay wires

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

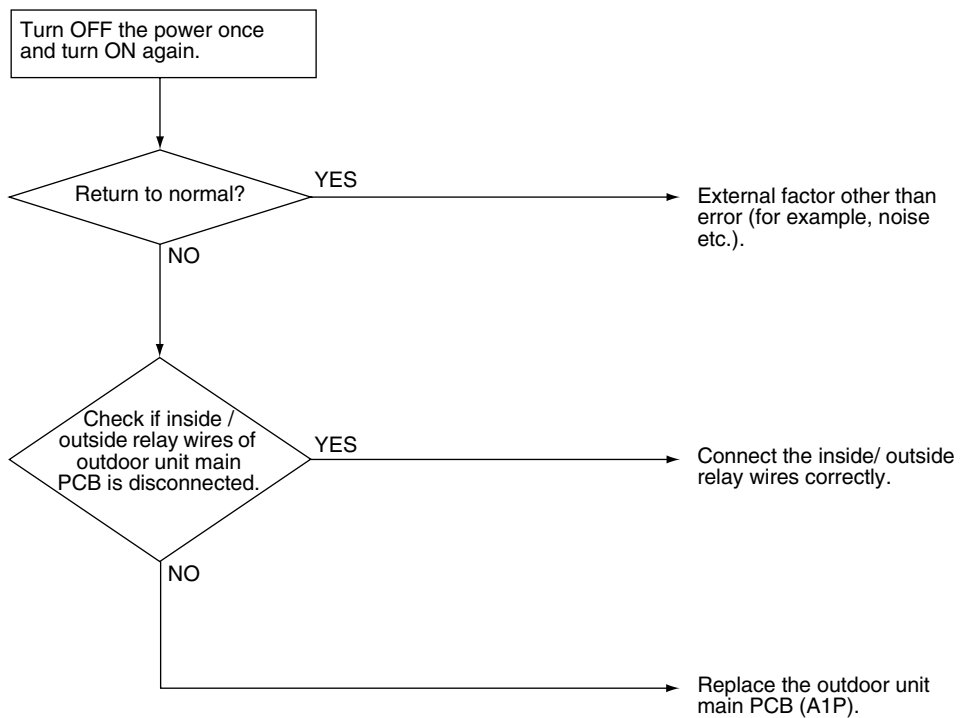


2.6 Earth Leakage by Leak Detection PCB Assy

Remote Controller Display	
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	Failure is to be detected by using leak detection PCB assy. Reverse phase is to be detected at all times during operation by the reverse protector PCB assy.
Error Decision Conditions	Leakage is detected under the conditions outside of the scope of high pressure sensor operation.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective of compressor

Troubleshooting




Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

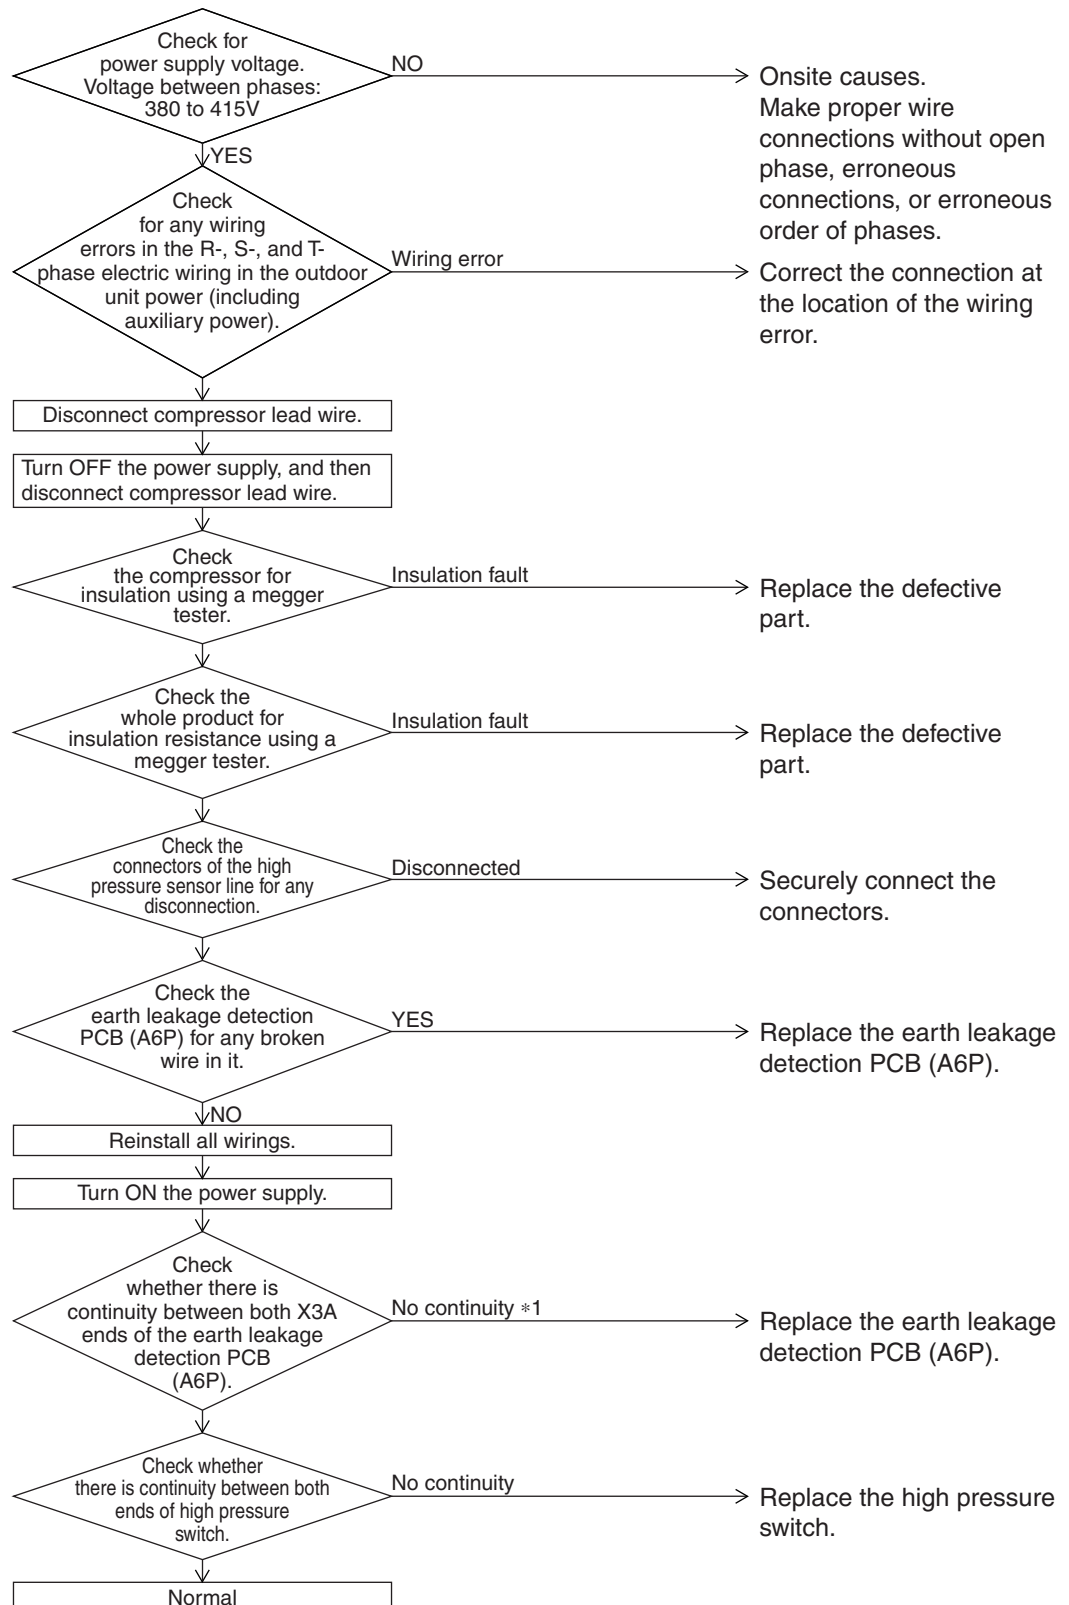

It is supposed that ground leakage occurs due to temporary liquid back or accumulation of refrigerant. This phenomenon can occur when power fails while in operation or is cut off for an extended period of time.

*1: It is normal that there is no continuity between both ends of X3A when the power supply turns OFF and for a period of 9 seconds at maximum after the power supply turns ON.

2.7 Actuation of High Pressure Switch (S1PH) or Pressure Switch (S2P)

Remote Controller Display	
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	Abnormality is detected by the protection device circuit that detects continuity at the high pressure switch and pressure switch.
Error Decision Conditions	When the contact of the high pressure switch or pressure switch opens. (Reference) Operating pressure of high pressure switch Operating pressure: 4.0MPa Reset pressure: 3.0MPa Operating pressure of pressure switch Operating pressure: 3.3MPa Reset pressure: 2.5MPa
Supposed Causes	<ul style="list-style-type: none"> ■ Actuation of outdoor unit high pressure switch or pressure switch ■ Defective high pressure switch or pressure switch ■ Defective outdoor unit main PCB (A1P) ■ Instantaneous power failure ■ Defective high pressure sensor

Troubleshooting

Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Check for the points shown below.
 (1) Is the stop valve opened?
 (2) Are the high pressure switch and pressure switch connector properly connected to the main PCB?
 (3) Do the high pressure switch and pressure switch have continuity?

Are the 3 points above OK?
 YES
 NO

Rectify defective points, if any.

(1) Mount a pressure gauge on the high pressure service port.
 (2) Reset the operation using the remote controller, and then restart the operation.

Does the stop due to error "E3" recur?
 YES
 NO
 Is the pressure switch operating value normal (i.e., 3.3MPa)?
 YES
 NO
 Is the high pressure switch operating value normal (i.e., 4.0MPa)?
 YES
 NO

Replace the high pressure switch and pressure switch.

Are the characteristics of the high pressure sensor normal? (*1)
 YES
 NO

Replace the high pressure sensor.

Service Checker
 Connect the service checker to compare the "high pressure" value and the actual measurement value by pressure sensor (*2) by using the service checker.

Check if the "high pressure" value and the actual measurement value by pressure sensor are the same.
 YES
 NO

Replace the outdoor unit main PCB (A1P).

· The high pressure sensor is normal, and the pressure detected with the PCB are also normal.
 · The high pressure or field piping pressure has really become high.
CHECK 1 Remove the causes by which the high pressure or field piping pressure has become high.



Note:

- *1: Make a comparison between the voltage of the pressure sensor and that read by the pressure gauge. (As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure.)
- *2: Make measurement of voltage of the pressure sensor.



CHECK 1 Refer to P.179

2.8 Actuation of Low Pressure Sensor


Remote Controller Display	E4
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Abnormality is detected by the pressure value of the low pressure sensor with the outdoor unit main PCB (A1P).
Error Decision Conditions	Error is generated when the low pressure is dropped under compressor operation. Operating pressure: 0.07MPa
Supposed Causes	<ul style="list-style-type: none"> ■ Abnormal drop of low pressure ■ Defective low pressure sensor ■ Defective outdoor unit PCB (A1P) ■ Stop valve is not opened.

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

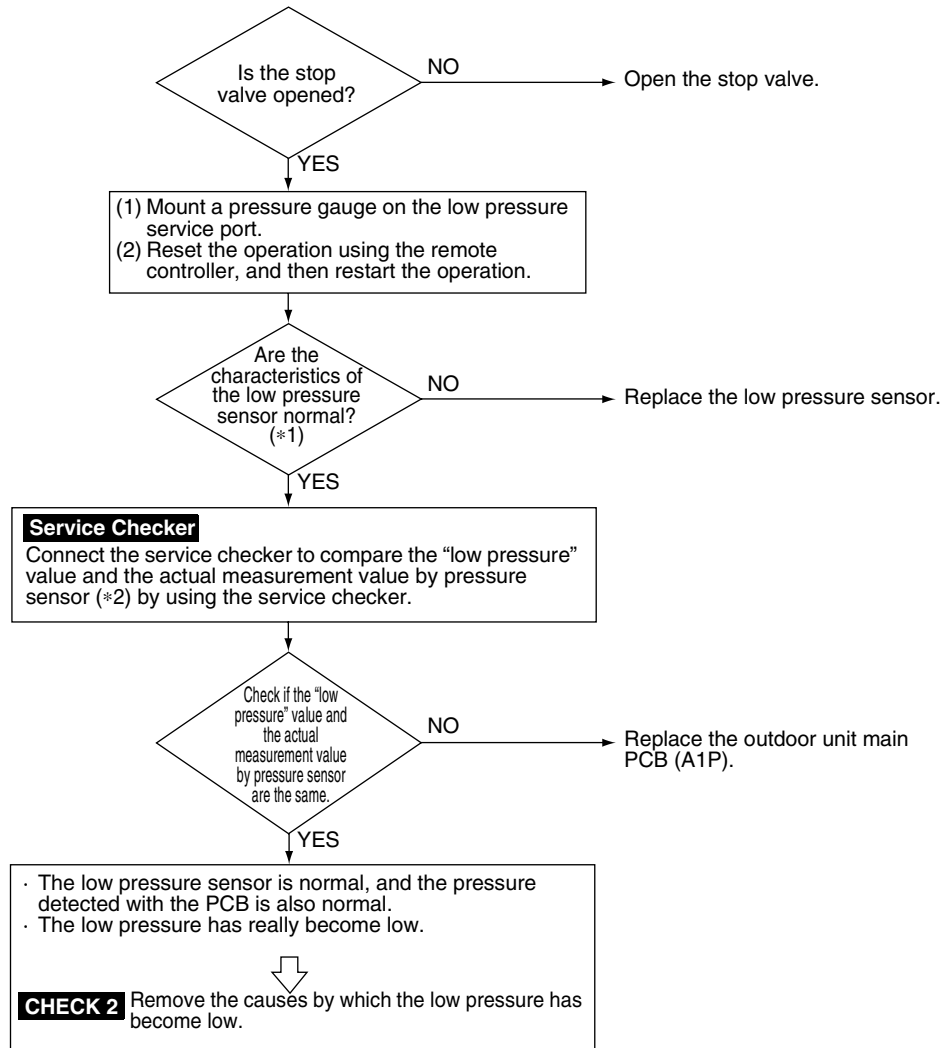


Note:

*1: Make a comparison between the voltage of the pressure sensor and that read by the pressure gauge.

(As to the voltage of the pressure sensor, make measurement of voltage at the connector, and then convert it to pressure.)

*2: Make measurement of voltage of the pressure sensor.

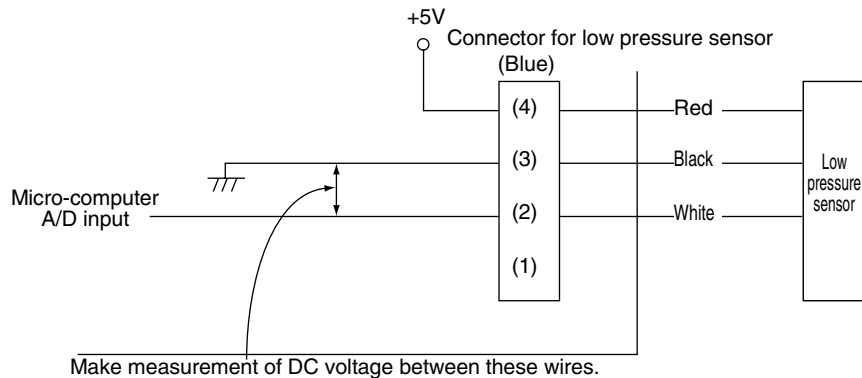

CHECK 2 Refer to P.180

2.9 Inverter Compressor Motor Lock


Remote Controller Display	E5
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Inverter PCB takes the position signal from UVW line connected between the inverter and compressor, and the error is detected when any abnormality is observed in the phase-current waveform.
Error Decision Conditions	This error will be output when the inverter compressor motor does not start up even in forced startup mode.
Supposed Causes	<ul style="list-style-type: none"> ■ Inverter compressor lock ■ High differential pressure (0.5MPa or more) ■ Incorrect UVW wiring ■ Defective inverter PCB ■ Stop valve is not opened.

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

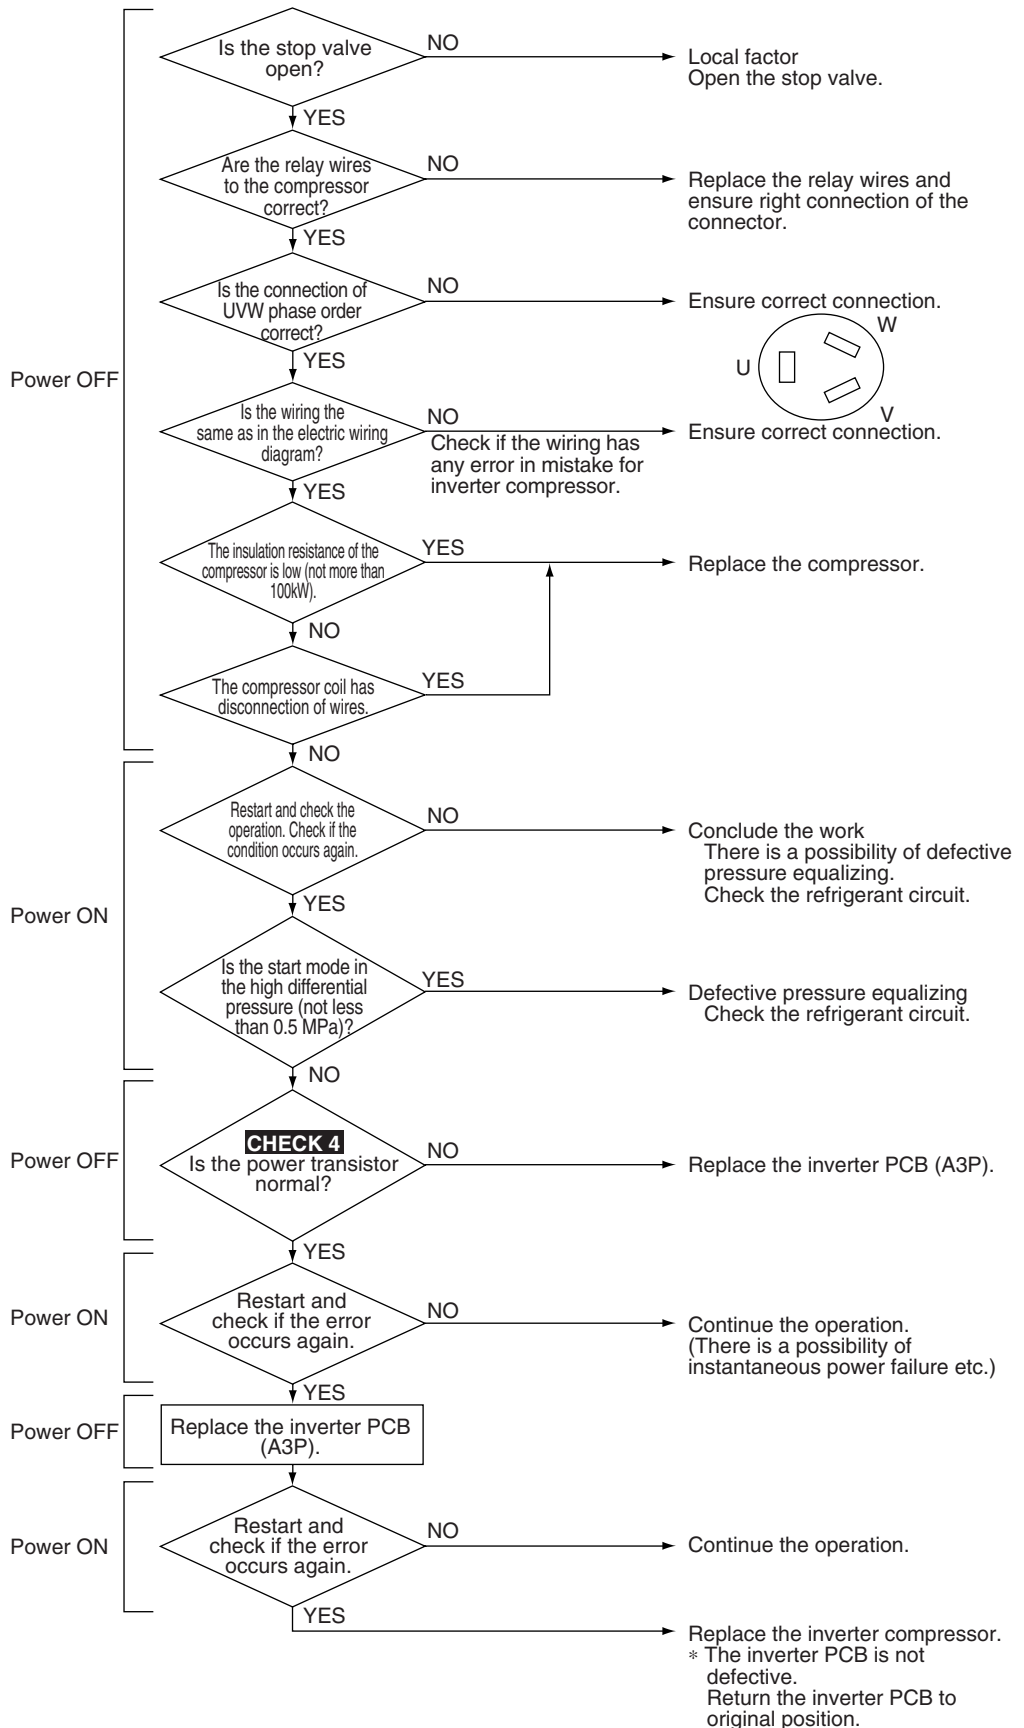



CHECK 4 Refer to P.182

2.10 Outdoor Unit Fan Motor Abnormality


Remote Controller Display	E7
Applicable Models	RQYQ-PY1
Method of Error Detection	<ul style="list-style-type: none"> ① Detect an error based on the current value in the inverter PCB. ② Detect an error for the fan motor circuit based on the number of rotation detected by hole IC during the fan motor operation.
Error Decision Conditions	<ul style="list-style-type: none"> ■ Overcurrent is detected for inverter PCB (A3P) or fan inverter PCB (A4P) (System down is caused by 4 times of detection.) ■ In the condition of fan motor rotation, the number of rotation is below the fixed number for more than 6 seconds. (System down is caused by 4 times of detection.)
Supposed Causes	<ul style="list-style-type: none"> ■ Defective fan motor ■ Defective or connection error of the connectors/ harness between the fan motor and PCB ■ The fan can not rotate due to any foreign substances entangled. ■ Clear condition: Continue normal operation for 5 minutes

Troubleshooting

Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

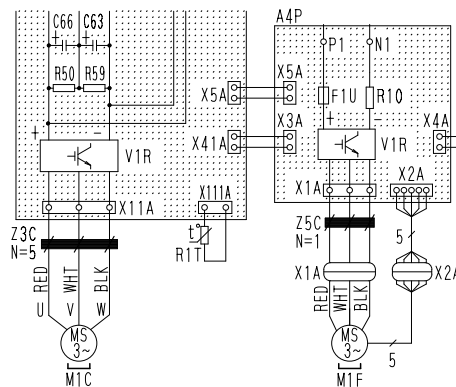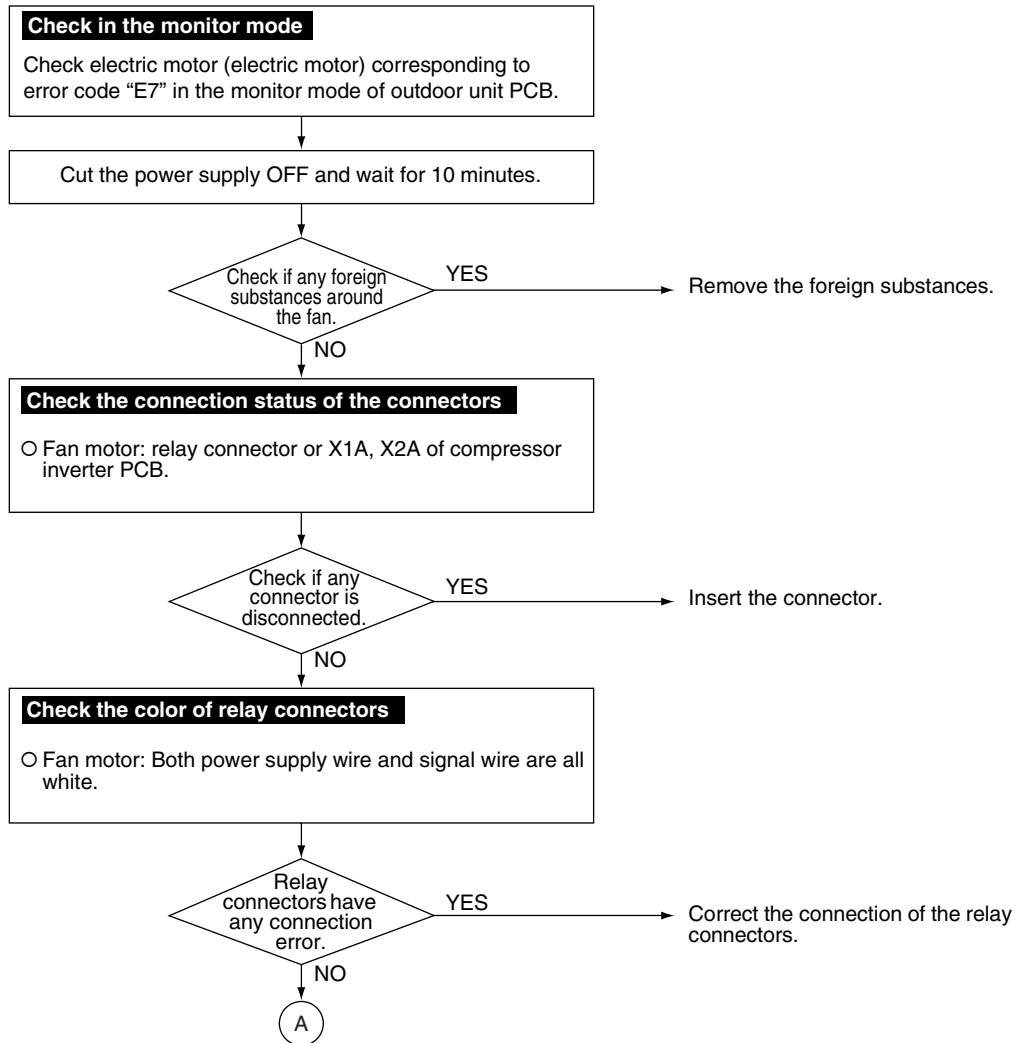

Troubleshooting

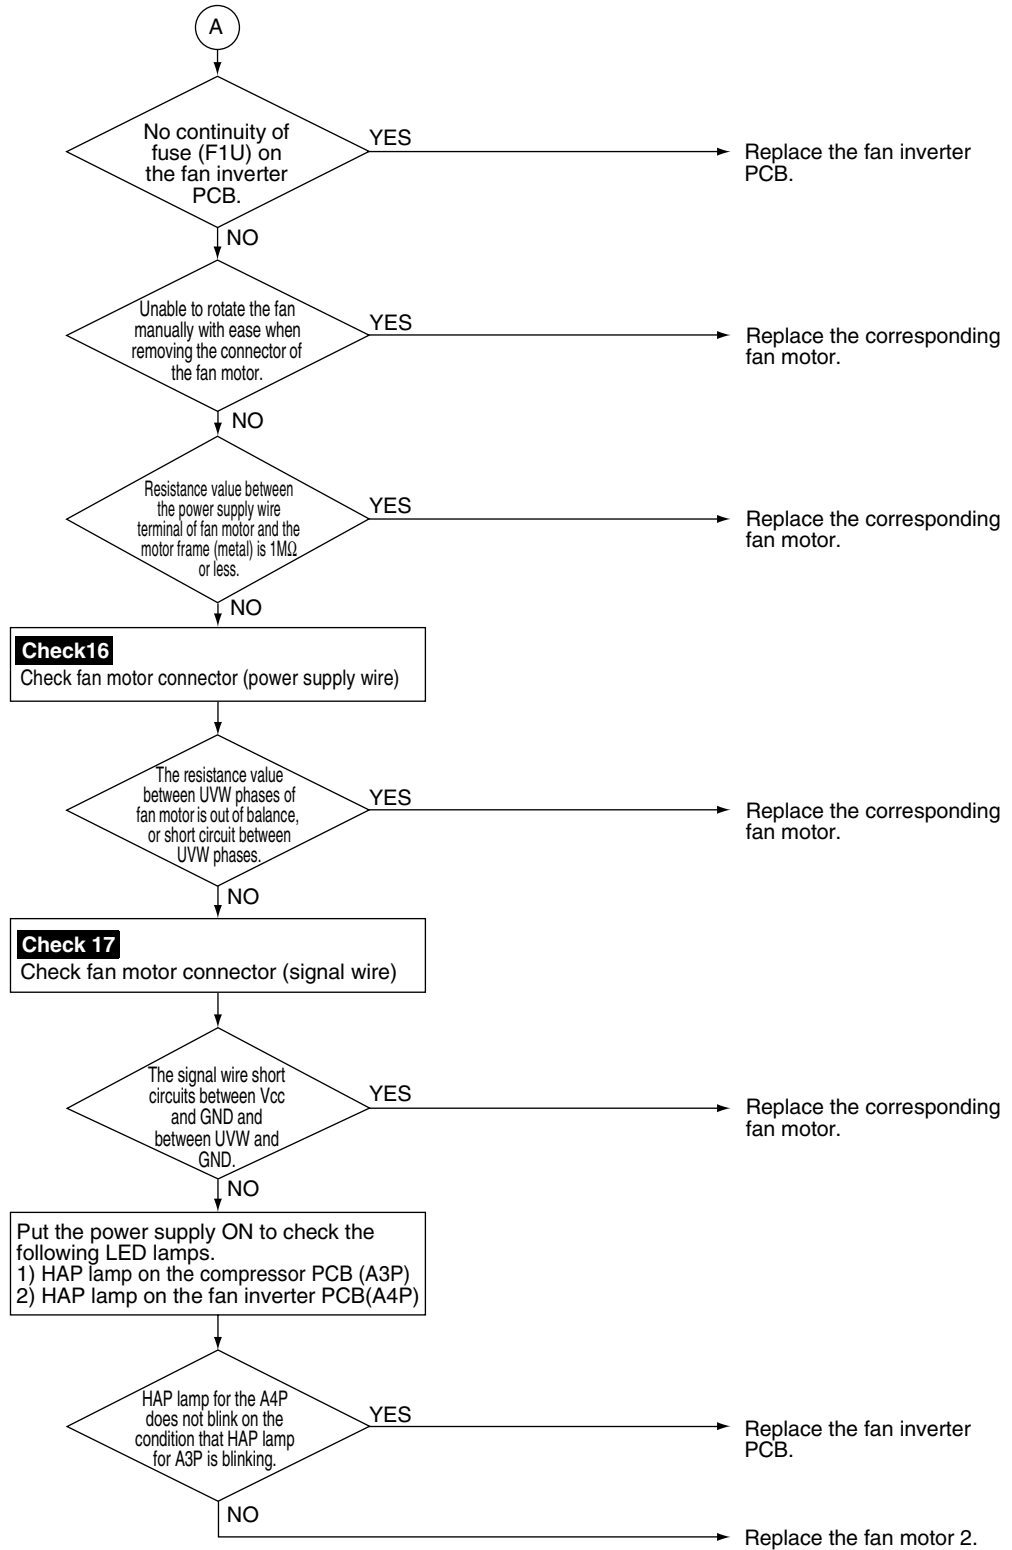


CHECK 16 Refer to P.194




CHECK 17 Refer to P.194

2.11 Electronic Expansion Valve Coil Abnormality (Y1E~Y3E)

Remote Controller Display	
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	Check the continuity of electronic expansion valve coil (Y1E)
Error Decision Conditions	No current is detected in the common (COM [+]) when power supply is ON.
Supposed Causes	<ul style="list-style-type: none"> ■ Disconnection of connectors for electronic expansion valve (Y1E) ■ Defective electronic expansion valve coil ■ Defective outdoor unit main PCB (A1P)


Troubleshooting

Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

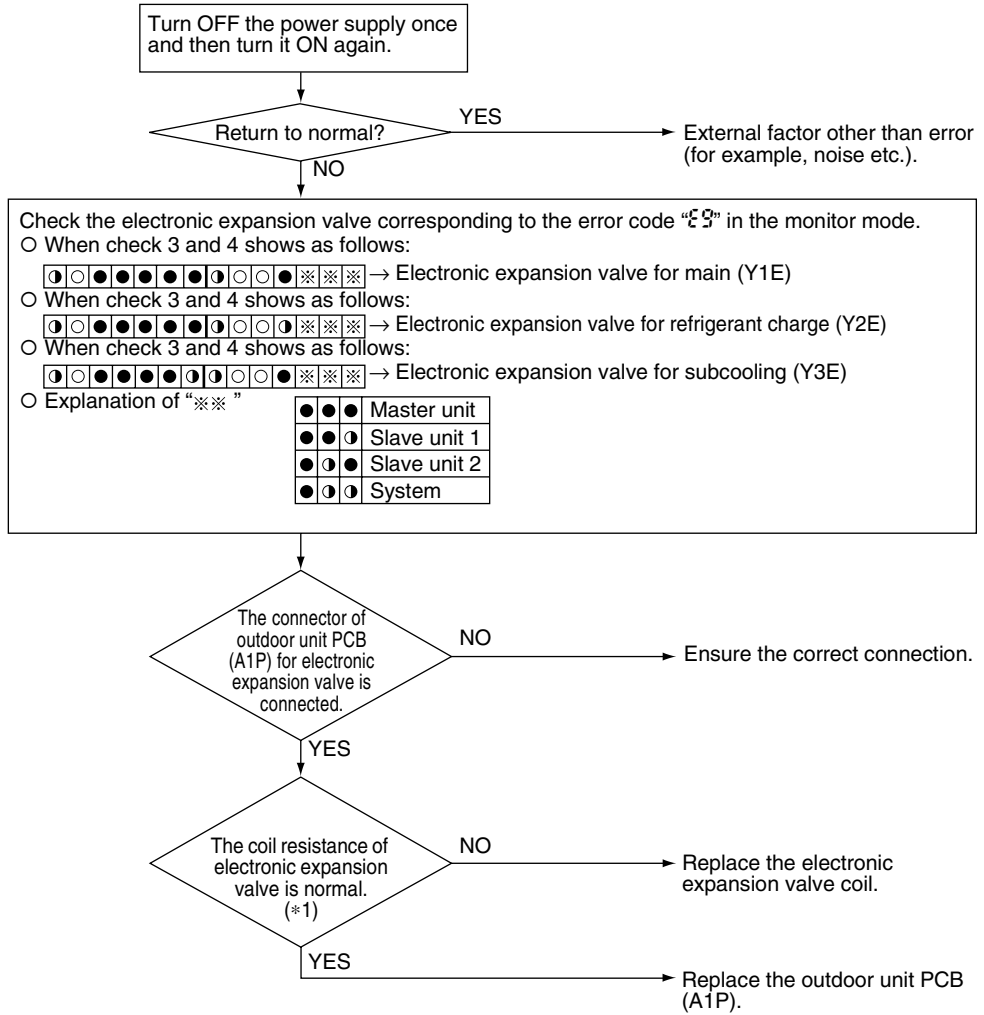


Note:

*1. Make measurement of resistance between the connector pins, and then make sure the resistance falls in the range of 40 to 50Ω.

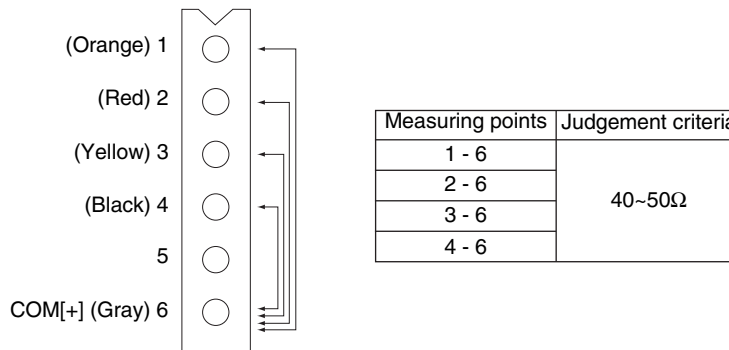

2.12 Abnormal Discharge Pipe Temperature


Remote Controller Display	
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	The error is detected according to the temperature detected by the discharge pipe thermistor.
Error Decision Conditions	When the discharge pipe temperature rises to an abnormally high level (135 °C or more) When the discharge pipe temperature rises suddenly (120 °C or more continues for 10 minutes)
Supposed Causes	<ul style="list-style-type: none"> ■ Defective discharge pipe thermistor ■ Defective connection of discharge pipe thermistor ■ Defective outdoor unit PCB (A1P)

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

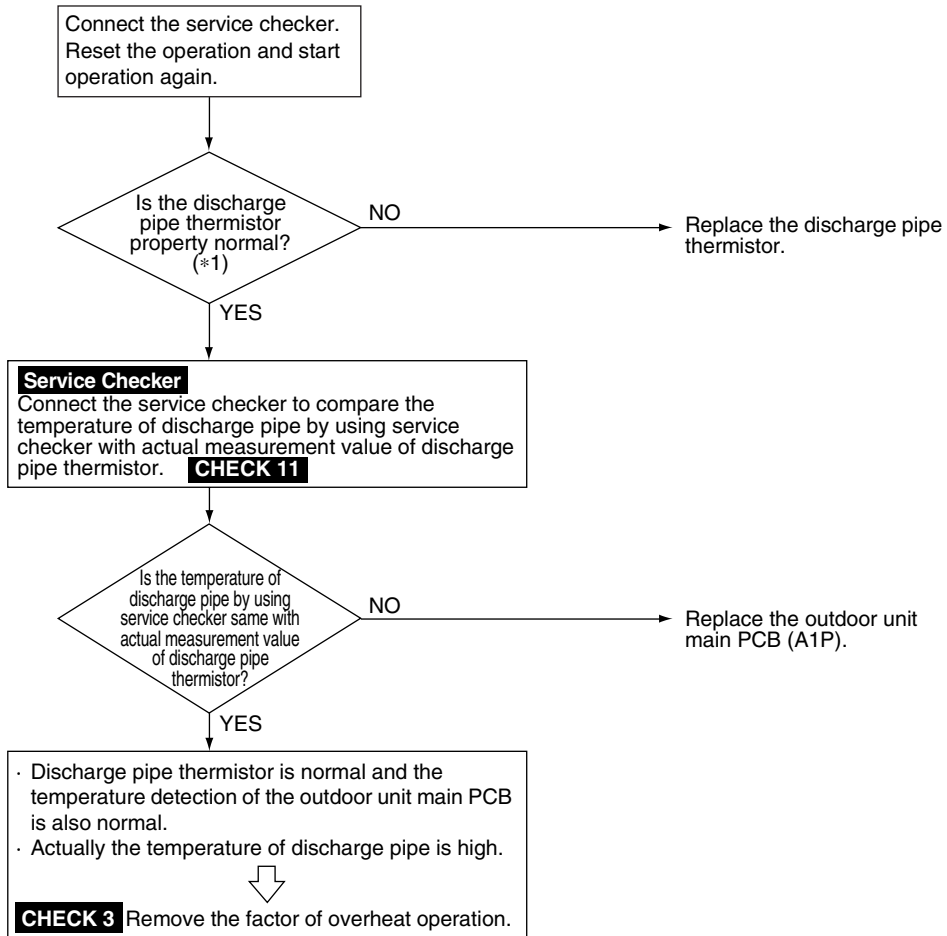

CHECK 3 Refer to P.181



CHECK 11 Refer to P.189



Note:

*1: Compare the resistance value of discharge pipe thermistor and the value based on the surface thermometer.


2.13 Humidity Alarm

Remote Controller Display	F4
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	The condition of the liquid refrigerant returning to the compressor is detected by the temperature and pressure of any part during the cooling operation.
Error Decision Conditions	When the following humidity condition continues for 30 minutes & { <ul style="list-style-type: none"> • Humidity condition in the indoor unit • Humidity condition in some indoor units
Supposed Causes	<ul style="list-style-type: none"> ■ Defective suction pipe thermistor ■ Defective discharge pipe thermistor ■ Defective high pressure sensor ■ Defective indoor unit electronic expansion valve ■ Contamination of the air filter


Troubleshooting

**Caution**

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

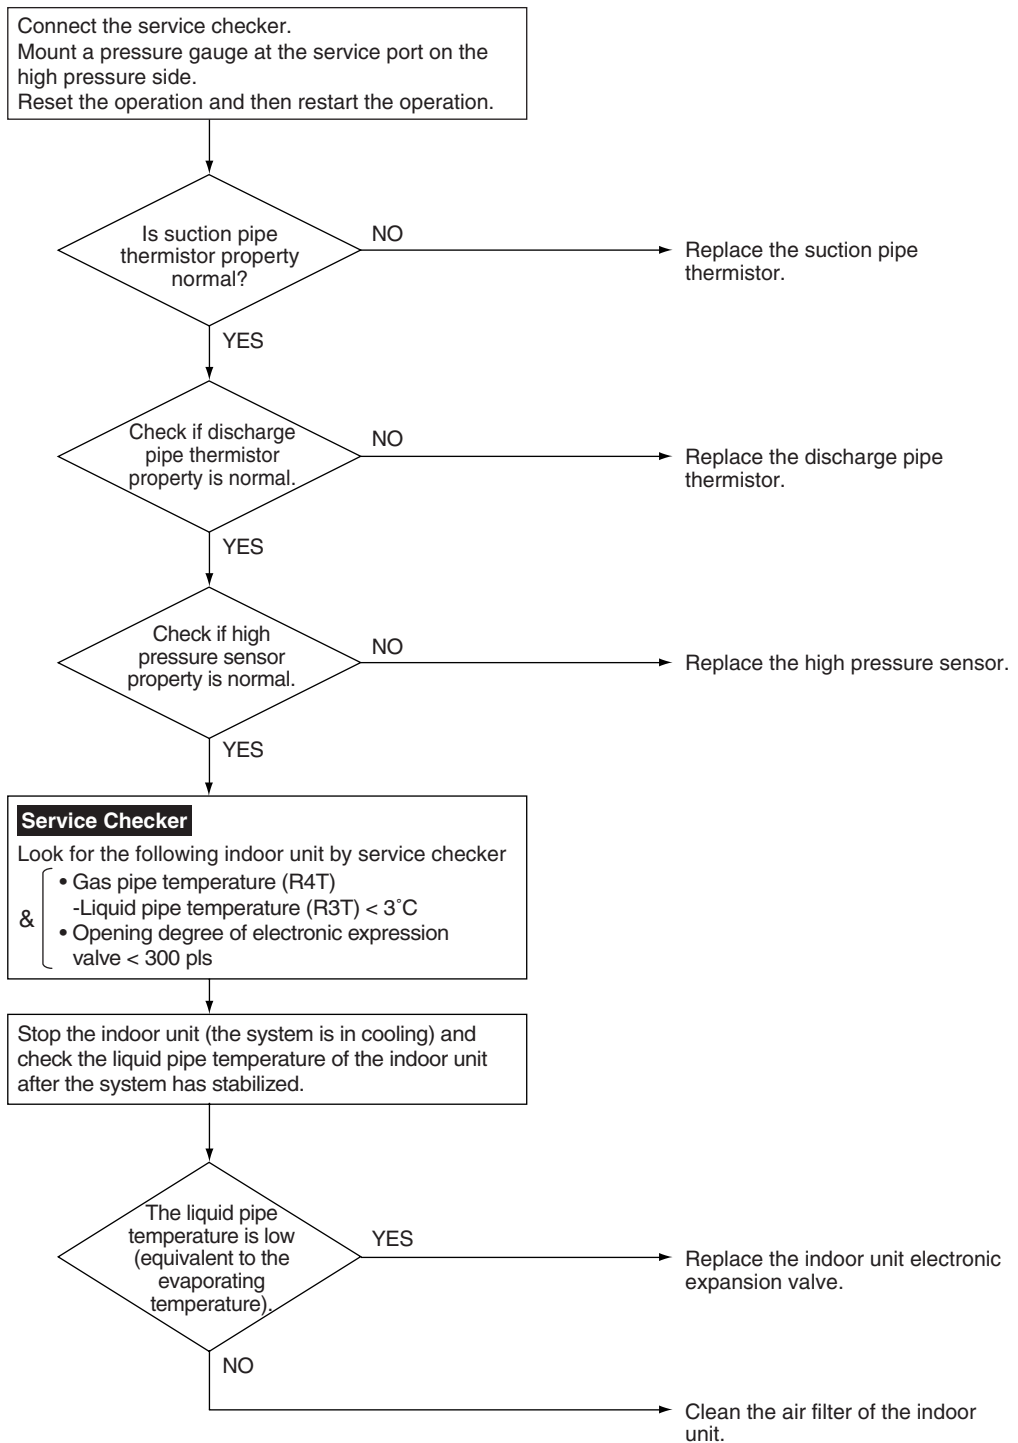


2.14 BS Unit Electronic Expansion Valve Abnormality

Remote Controller Display	
Applicable Models	BSVQ100-250P RQCEQ-PY1
Method of Error Detection	This error is detected by whether or not all coils of the electronic expansion valve have continuity.
Error Decision Conditions	When the power supply turns ON, there is no currents pass through the common (COM[+]).
Supposed Causes	<ul style="list-style-type: none"> ■ Connector disconnected from the electronic expansion valve ■ Defective electronic expansion valve coil ■ Defective PCB of the BS unit


Troubleshooting

Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

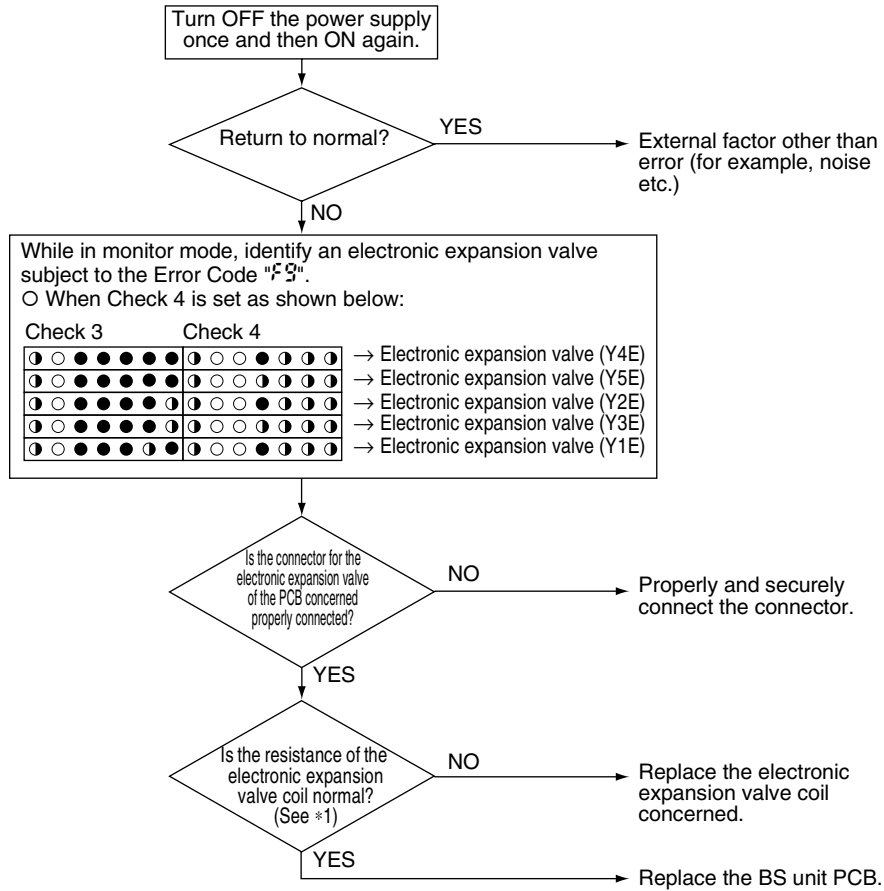

Note:

*1: Procedure for checking the electronic expansion valve for the drive unit coil.
 Disconnect the electronic expansion valve connector (X7A) from the PCB, and then make measurement of resistance and check for continuity between the connector pins to make judgement.

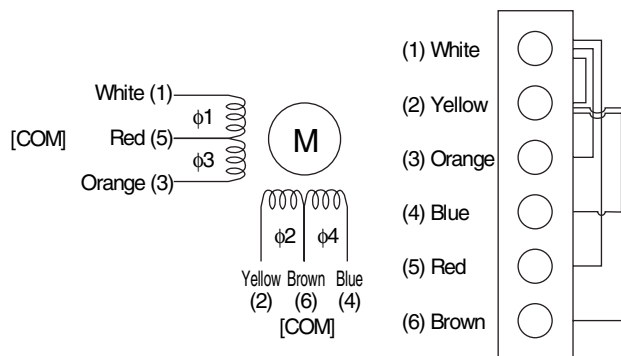


- The normal states are as follows:
- (1) No continuity between Pins (1) and (2)
 - (2) Approx. 300Ω resistance between Pins (1) and (3)
 - (3) Approx. 150Ω resistance between Pins (1) and (5)
 - (4) Approx. 300Ω resistance between Pins (2) and (4)
 - (5) Approx. 150Ω resistance between Pins (2) and (6)

2.15 Abnormal Outdoor Unit Fan Motor Signal


Remote Controller Display	H1
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	Detection of abnormal signal from fan motor.
Error Decision Conditions	In case of detection of abnormal signal at starting fan motor.
Supposed Causes	<ul style="list-style-type: none"> ■ Abnormal fan motor signal (circuit error) ■ Broken, short or disconnection connector of fan motor lead wire ■ Defective fan inverter PCB

Troubleshooting

Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.


Check the fan motor corresponding to the error code "H" in the monitor mode.
 When check 3 shows as follows:
 → Fan motor (M1F)
 Explanation for "※※"

● ● ●	Master unit
● ● ●	Slave unit 1
● ● ●	Slave unit 2
● ● ●	System

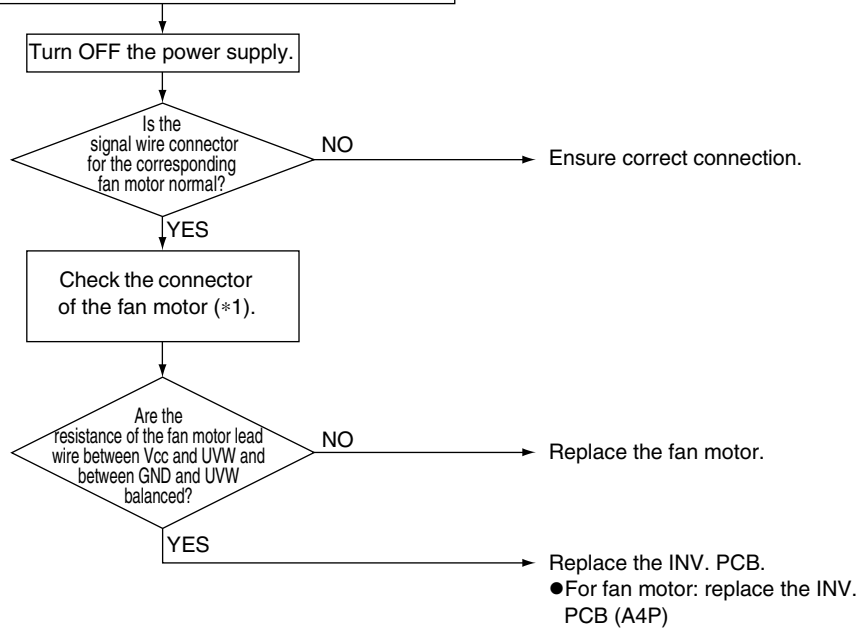

Note:

- *1. Check the procedure for fan motor connector
 - (1) Power OFF the fan motor.
 - (2) Remove the connector (X2A) on the PCB to measure the following resistance value.
 Judgement criteria: resistance value between each phase is within $\pm 20\%$

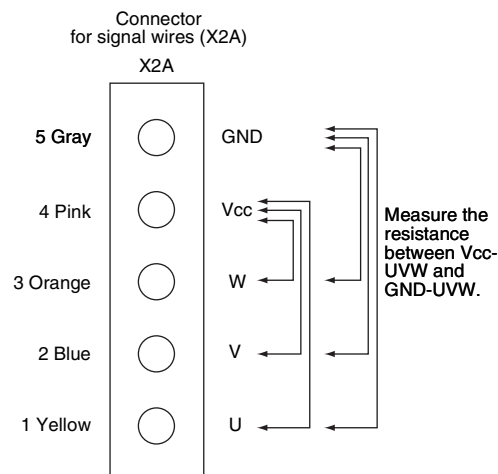


2.16 Thermistor System Abnormality

Remote Controller Display	49, 43, 45, 46, 47, 48, 49
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	The error is detected according to the temperature detected by each individual thermistor.
Error Decision Conditions	When thermistor is disconnected or short-circuited during operation
Supposed Causes	<ul style="list-style-type: none"> ■ Defective thermistor ■ Defective connection of connector ■ Defective outdoor unit PCB (service monitor PCB)

Troubleshooting




Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

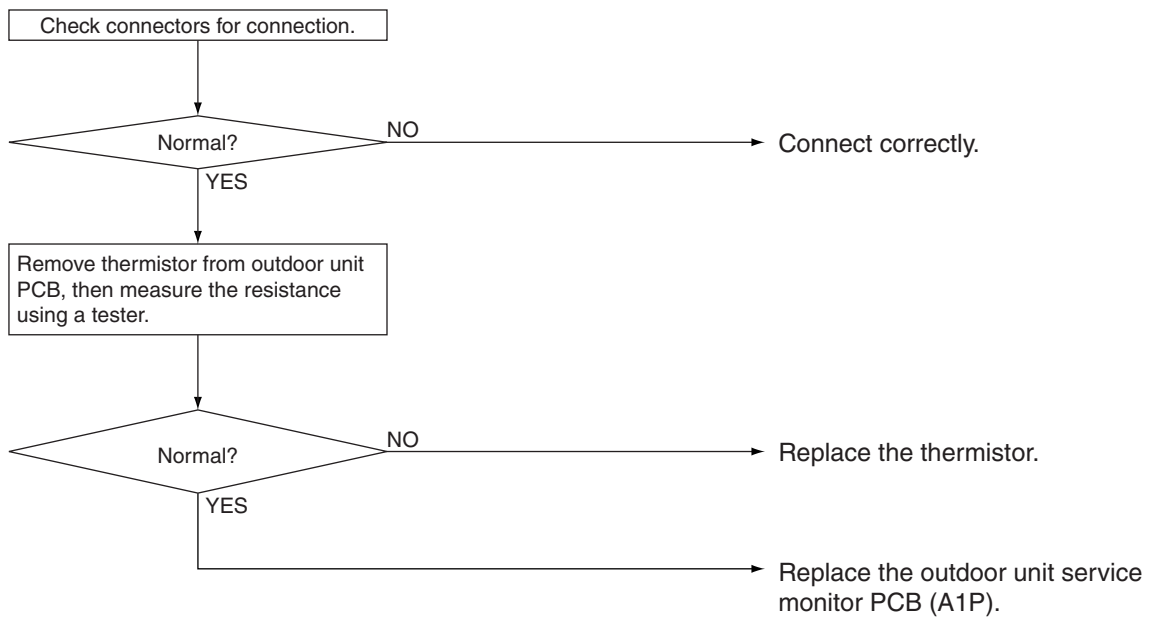


Error code	Defective thermistor	RQYQ/RREQ-PY1	
		Symbol	Connector
49	Outdoor air thermistor	R1T	X18A
43	Discharge pipe thermistor	R2T	X29A
45	Suction pipe thermistor	R5T	X30A
46	Heat exchanger deicer thermistor	R6T	X30A
47	Liquid pipe thermistor	R9T	X30A
48	Heat exchanger gas vet outlet thermistor	R4T	X29A
	Heat exchanger liquid level thermistor	R3T	X29A
	Subcooling heat exchanger liquid pipe thermistor	R8T	X30A
49	Subcooling heat exchanger outlet thermistor	R7T	X30A

2.17 High Pressure Sensor Abnormality

Remote Controller Display	
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Error is detected from the pressure detected by the high pressure sensor.
Error Decision Conditions	When the high pressure sensor is short-circuit or open circuit (Not less than 4.22MPa, or 0.01MPa or less)
Supposed Causes	<ul style="list-style-type: none">■ Defective high pressure sensor■ Connection of low pressure sensor with wrong connection.■ Defective outdoor unit PCB■ Defective connection of high pressure sensor

Troubleshooting

Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

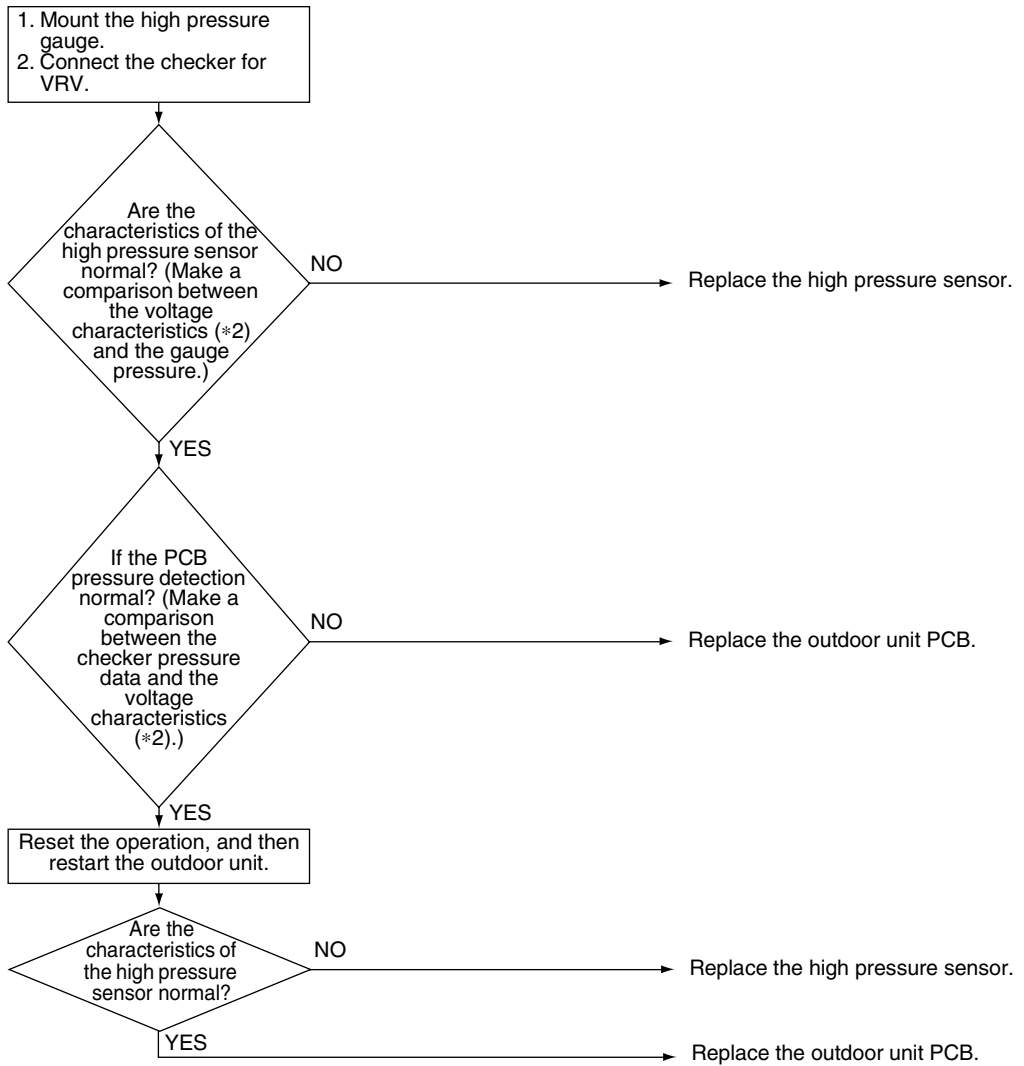


Note:

*1. Pressure sensor subject to error code

Error code	Pressure sensor subject to error code	Electric symbol
⚡	High pressure sensor	S1NPH

*2. Voltage measurement point

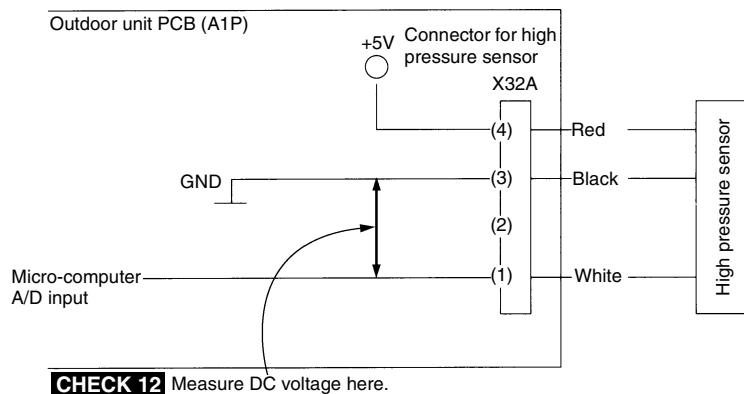

CHECK 12 Refer to P.190

2.18 Low Pressure Sensor Abnormality

Remote
Controller
Display



Applicable
Models

RQYQ-PY1
RQEQ-PY1

Method of Error
Detection

Error is detected from the pressure detected by the low pressure sensor.

Error Decision
Conditions

When the low pressure sensor is short circuit or open circuit.
(Not less than 1.77MPa, or -0.01MPa and below)

Supposed
Causes


- Defective low pressure sensor
- Connection of high pressure sensor with wrong connection.
- Defective outdoor unit PCB
- Defective connection of low pressure sensor

Troubleshooting



Caution


Be sure to turn off power switch before connect or disconnect connector,
or parts damage may be occurred.

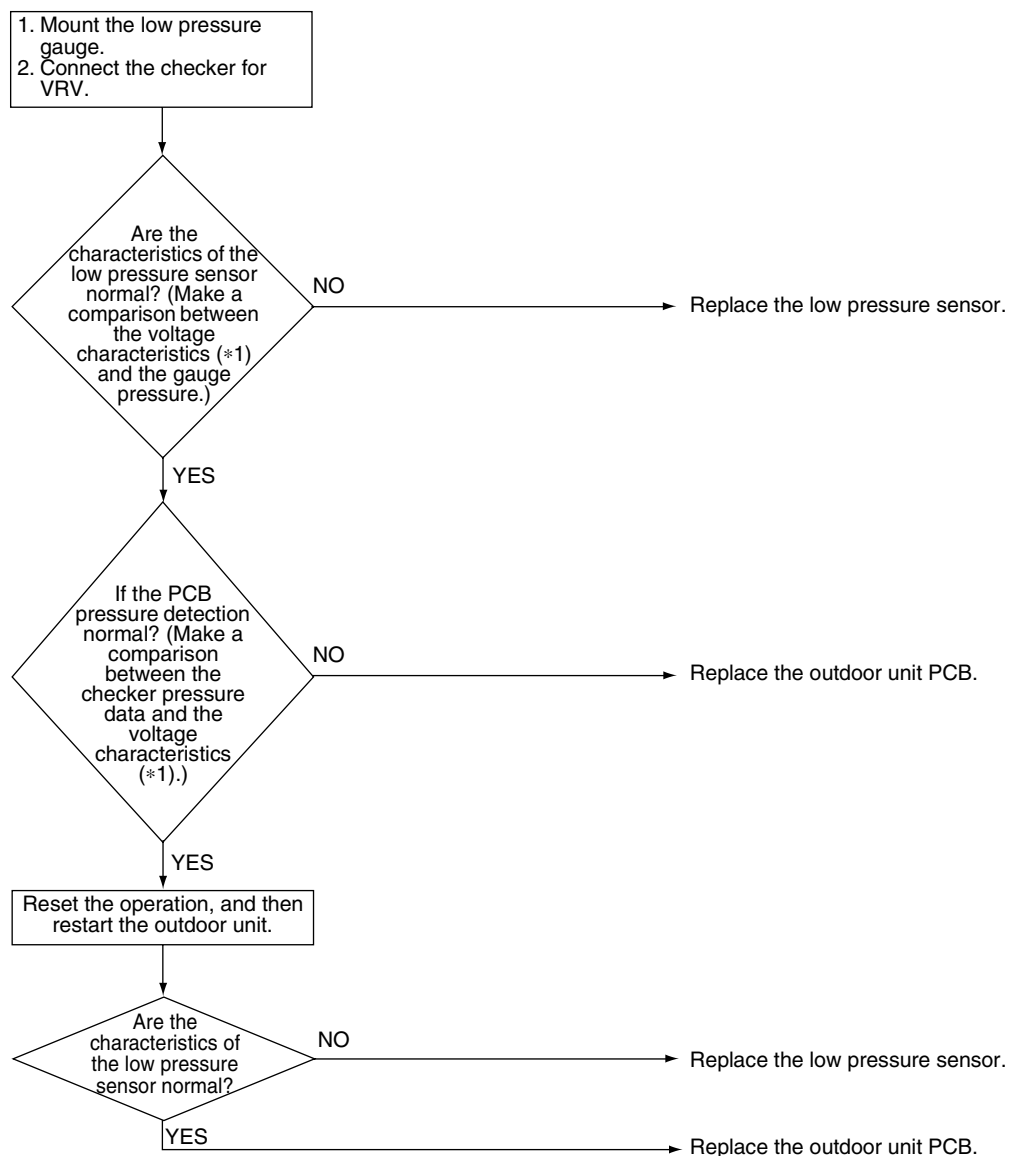



Note:

*1. Voltage measurement point

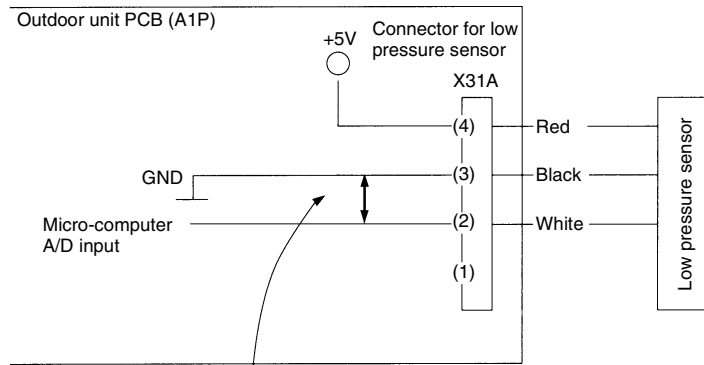

CHECK 12 Measure DC voltage here.



CHECK 12 Refer to P.190

2.19 Inverter PCB Abnormality


Remote Controller Display	L I
Applicable Models	RQYQ-PY1B
Method of Error Detection	<p>Error is detected based on the current value during waveform output before starting compressor.</p> <p>Error is detected based on the value from current sensor during synchronous operation when starting the unit.</p>
Error Decision Conditions	<ul style="list-style-type: none"> ■ Overcurrent flows during waveform output. ■ When the current sensor error during synchronized operation ■ When overvoltage occurs in IPM
Supposed Causes	<ul style="list-style-type: none"> ■ Defective outdoor unit PCB (A1P) <ul style="list-style-type: none"> • IPM failure • Current sensor failure • Defective drive circuit

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

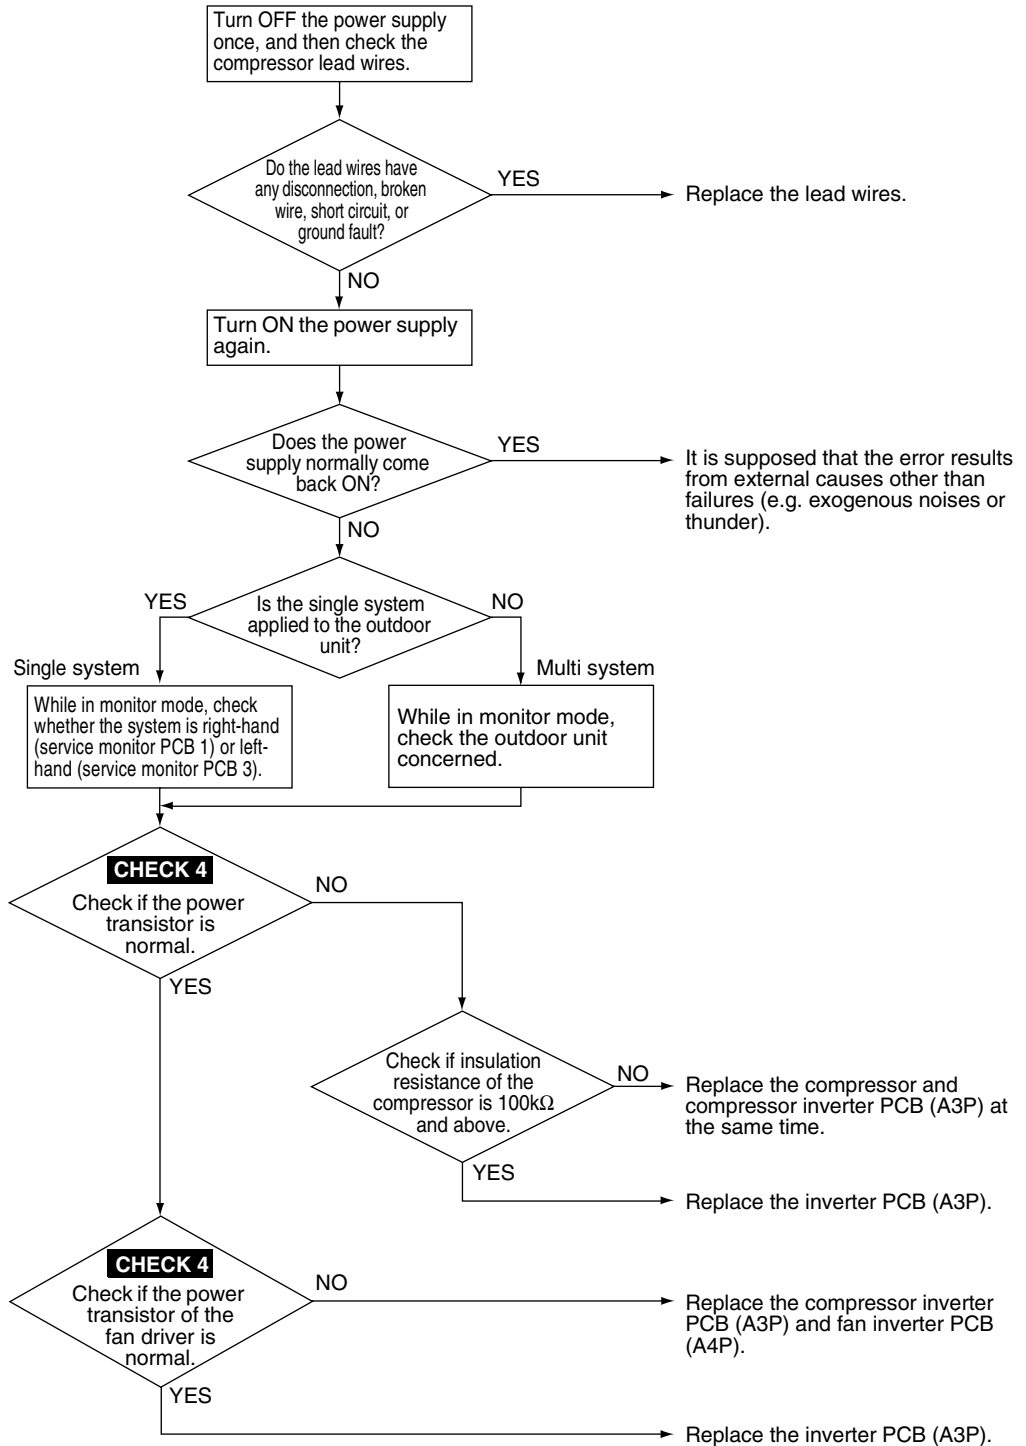

CHECK 4 Refer to P.182.

2.20 Inverter Radiation Fin Temperature Rise

Remote
Controller
Display



Applicable
Models

RQYQ-PY1
RQEQ-PY1

Method of Error
Detection

Radiation of compressor inverter PCB.
Fin temperature is detected by the radiation fin thermistor.

Error Decision
Conditions

When the temperature of the inverter radiation fin increases above 87°C.

Supposed
Causes


- Actuation of fin thermal (Actuates above 87°C)
- Defective inverter PCB
- Defective radiation fin thermistor

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

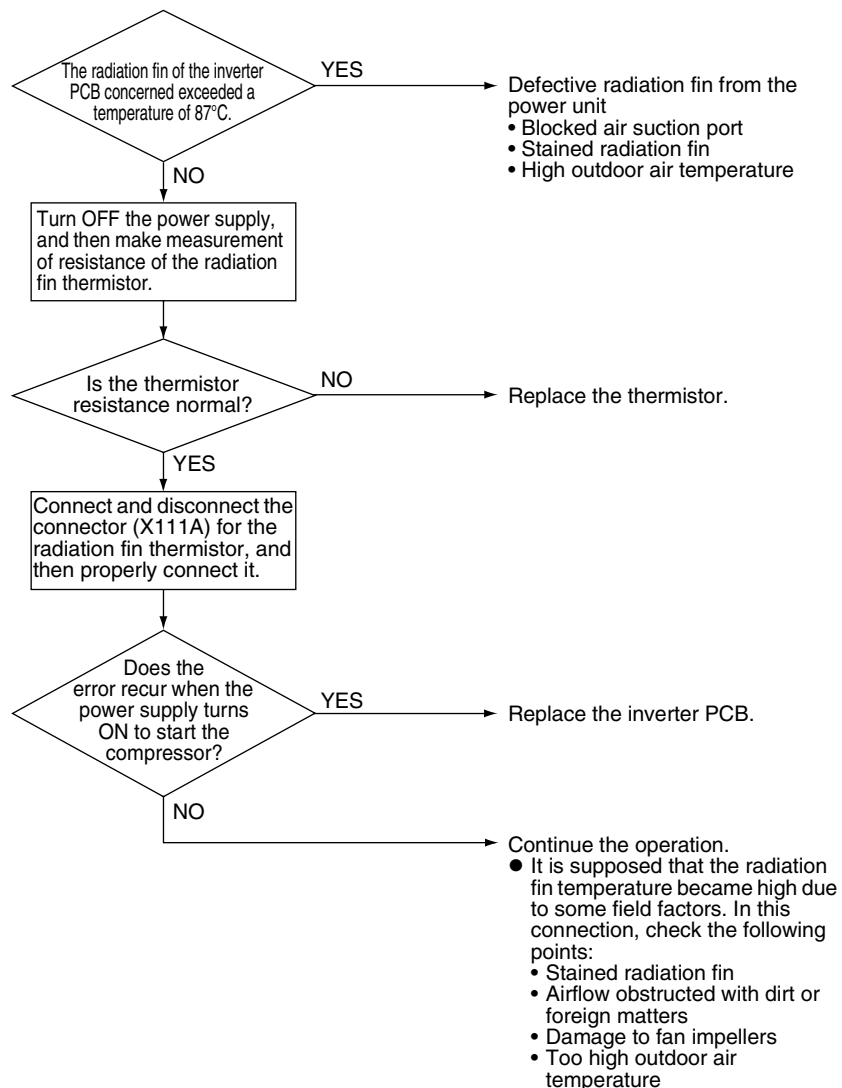

2.21 Momentary Overcurrent of Inverter Compressor


Remote Controller Display	LS
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	Error is detected from the current flowing in the power transistor.
Error Decision Conditions	When an excessive current (59.1A) flows in the power transistor. (Instantaneous overcurrent also causes activation.)
Supposed Causes	<ul style="list-style-type: none"> ■ Defective compressor coil (disconnected, defective insulation) ■ Compressor startup error (mechanical lock) ■ Defective inverter PCB

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

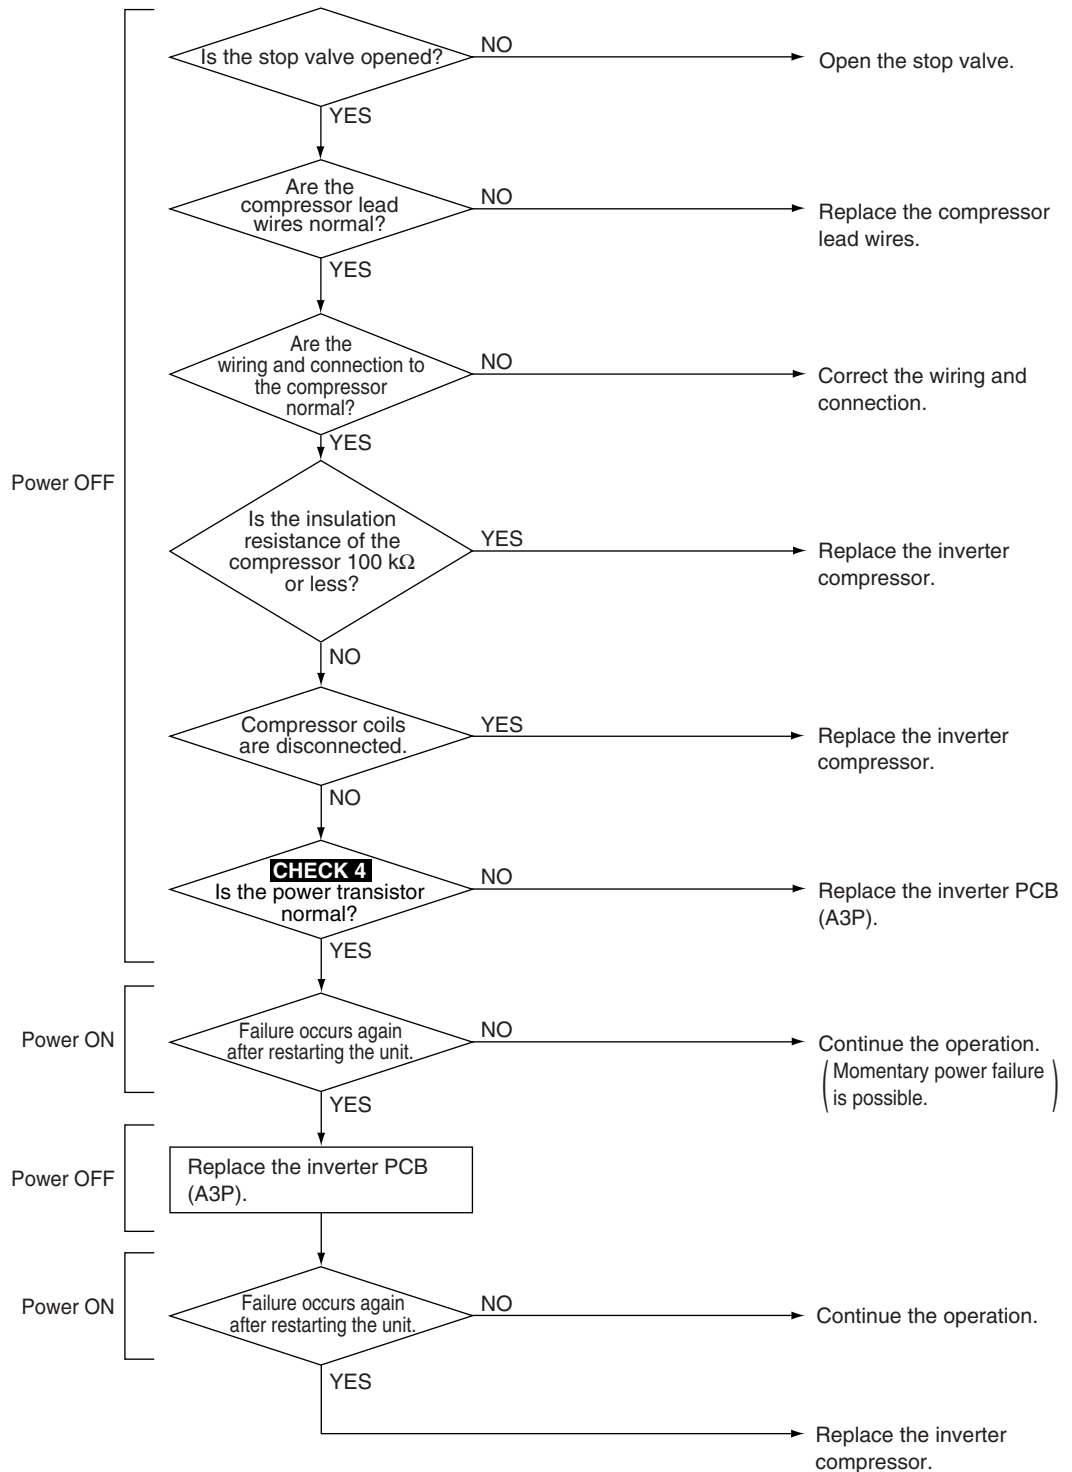

CHECK 4 Refer to P.182

2.22 Overcurrent Abnormal of Inverter Compressor


Remote Controller Display	
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Error is detected from the current flowing in the power transistor.
Error Decision Conditions	When the inverter secondary current value is below. (1) 33.5A and over continues for 5 seconds. (2) 27.6A and over continues for 260 seconds.
Supposed Causes	<ul style="list-style-type: none"> ■ Compressor overload ■ Compressor coil disconnected ■ Disconnection of compressor ■ Defective inverter PCB

Troubleshooting

Output current check



Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

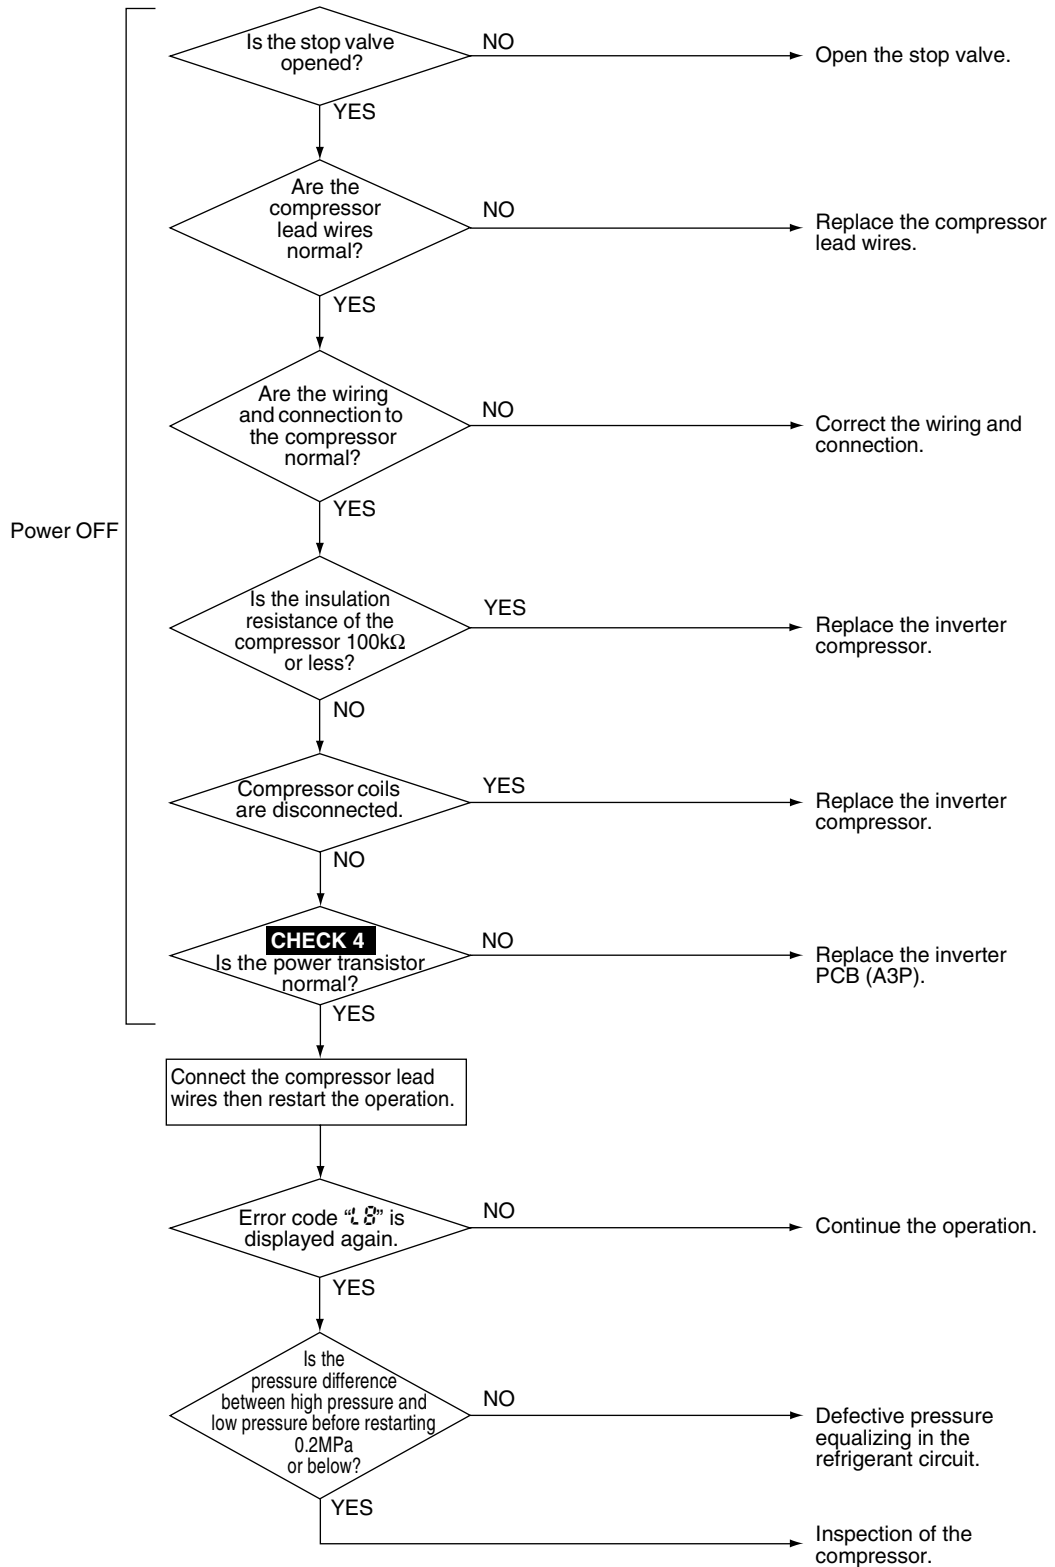


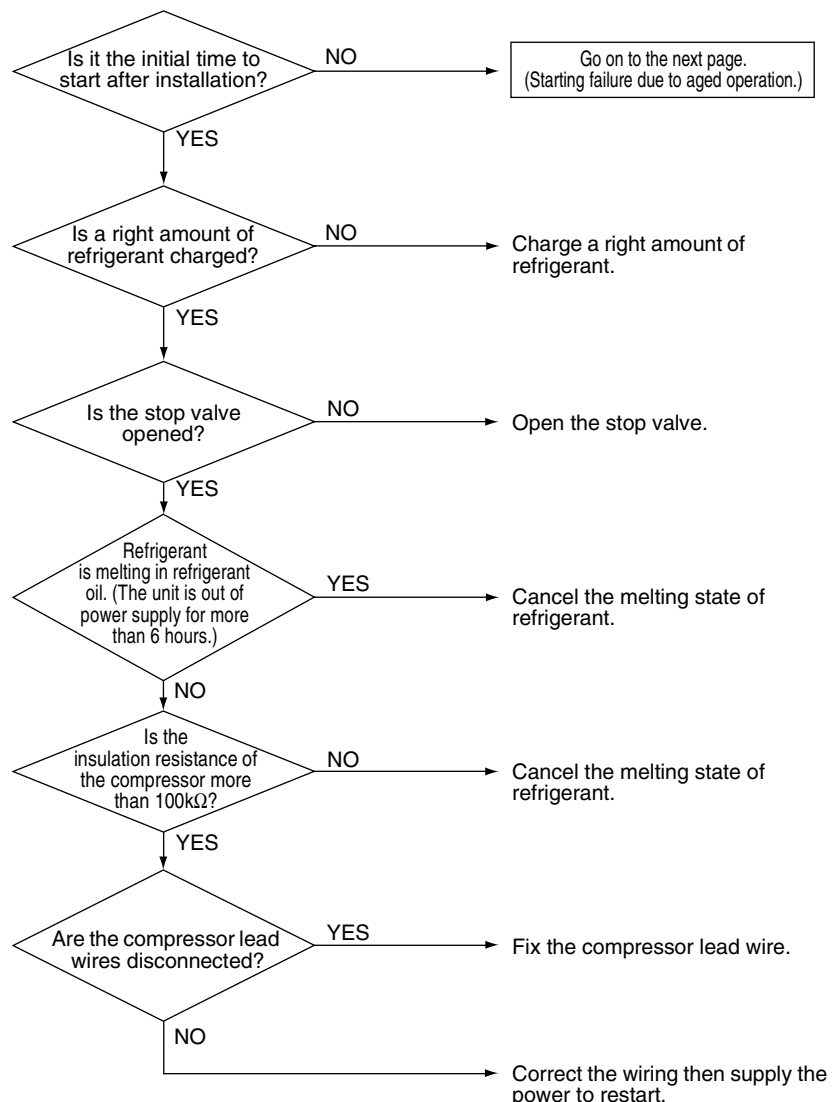
CHECK 4 Refer to P.182

2.23 Inverter Compressor Starting Abnormality


Remote Controller Display	L9
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Error is detected based on the signal waveform of the compressor.
Error Decision Conditions	Starting the compressor does not complete.
Supposed Causes	<ul style="list-style-type: none"> ■ Stop valve is not opened ■ Defective compressor ■ Wiring connection error to the compressor ■ Large pressure difference before startup the compressor ■ Defective inverter PCB

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.




Troubleshooting

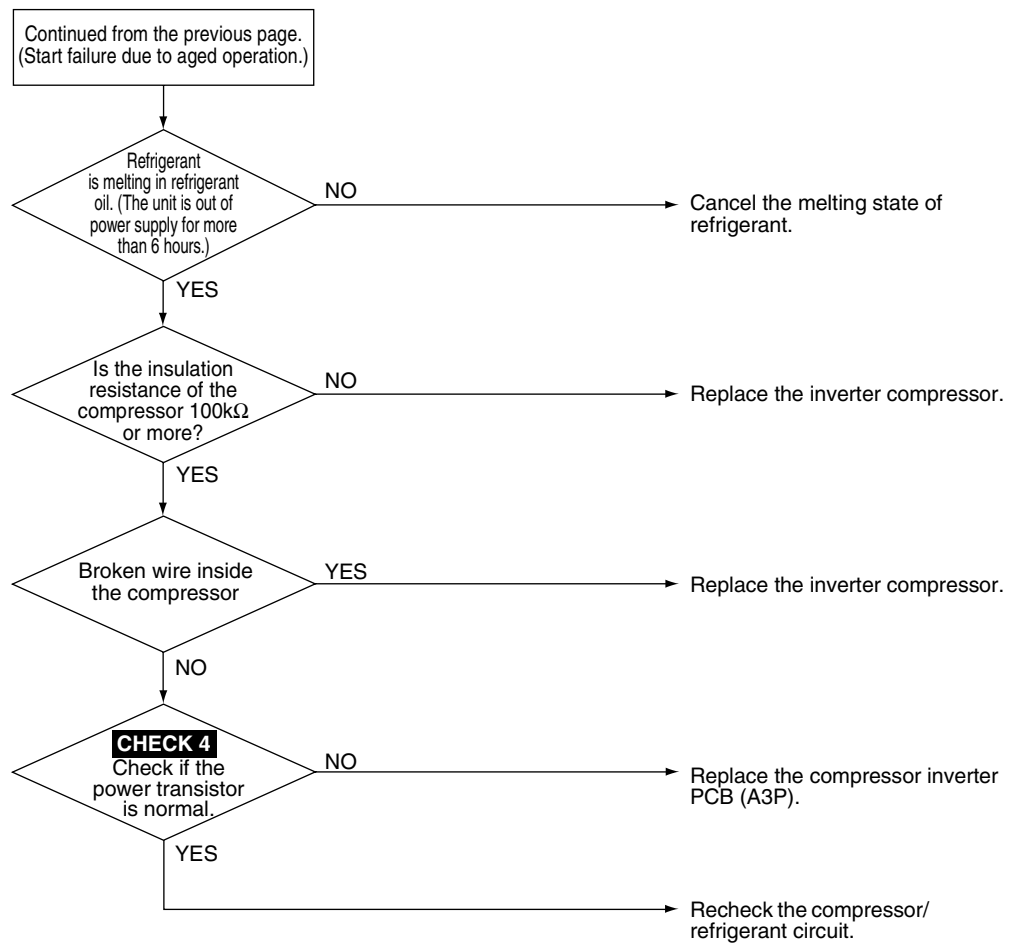

CHECK 4 Refer to P.182

2.24 Transmission Error (between Inverter and Main PCB)


Remote Controller Display	
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	Check the communication state between inverter PCB and main PCB by micro-computer.
Error Decision Conditions	When the transmission is not carried out in a specified period of time or longer.
Supposed Causes	<ul style="list-style-type: none"> ■ Incorrect transmission wiring between the inverter PCB and outdoor unit main PCB ■ Defective outdoor unit main PCB (transmission section) ■ Defective inverter PCB ■ Defective noise filter ■ External factor (noise etc.) ■ Defective inverter compressor ■ Defective fan motor

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

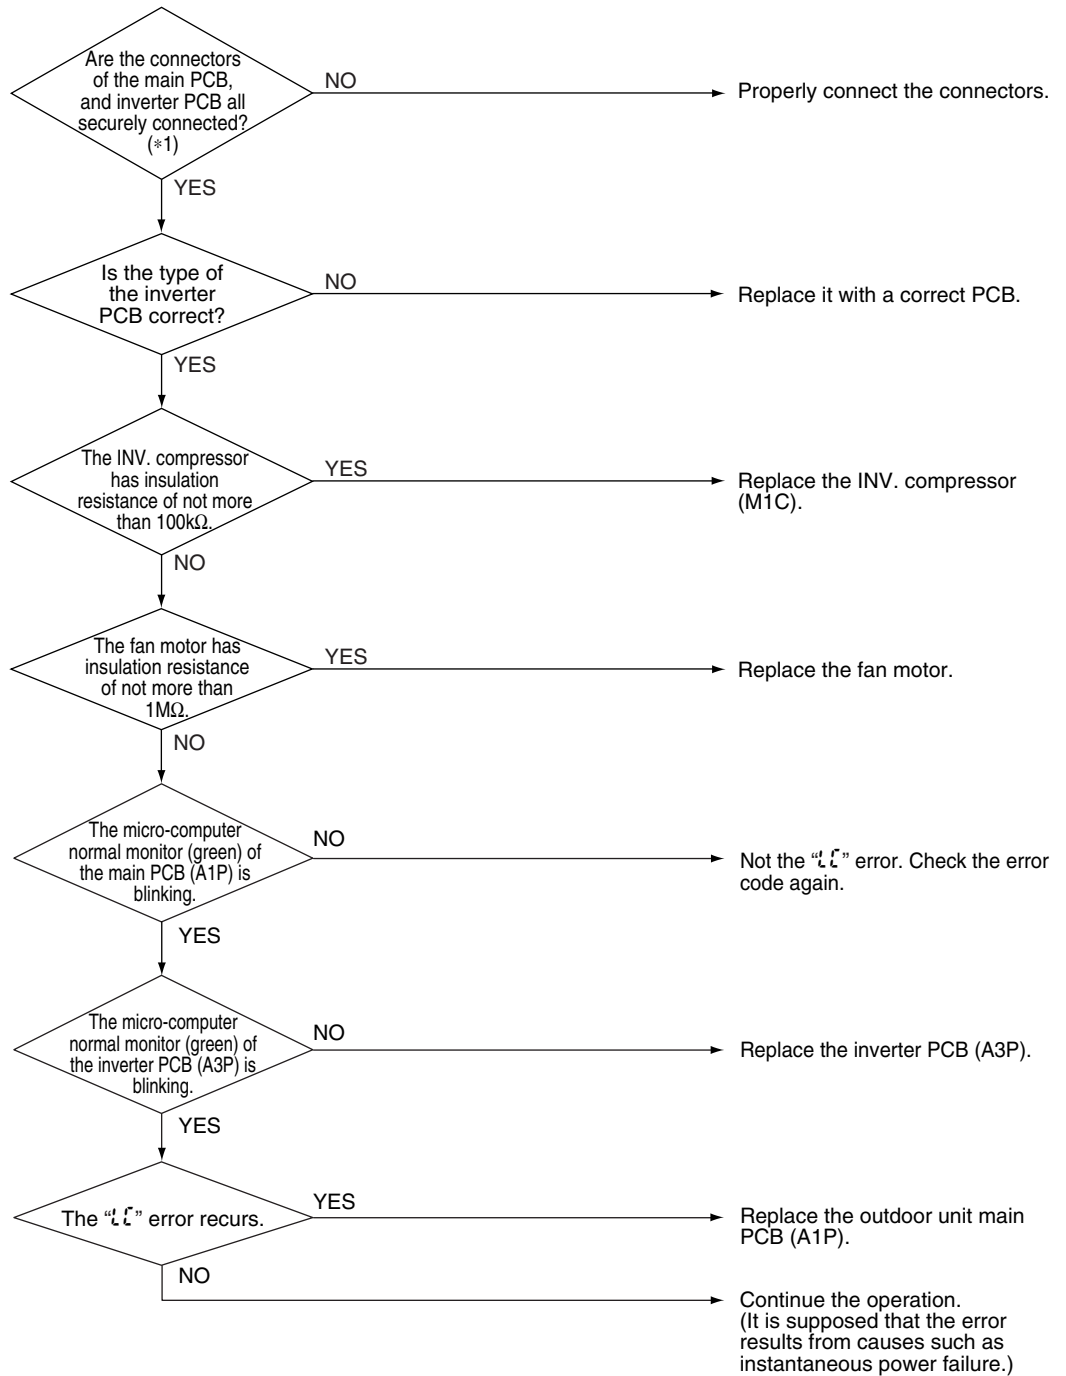

Note:

*1. Disconnect the connector once, then reconnect it and check that it is securely connected.

2.25 Inverter Over-Ripple Protection


Remote Controller Display	P I
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Imbalance in supply voltage is detected in PCB.
Error Decision Conditions	When the amplitude of the ripple exceeding 6V is detected. Error is not decided while the unit operation is continued. “P I” will be displayed by pressing the INSPECTION button.
Supposed Causes	<ul style="list-style-type: none"> ■ Open phase ■ Voltage imbalance between phases ■ Defective main circuit capacitor ■ Defective inverter PCB ■ Defective K2M relay in inverter PCB ■ Improper main circuit wiring

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

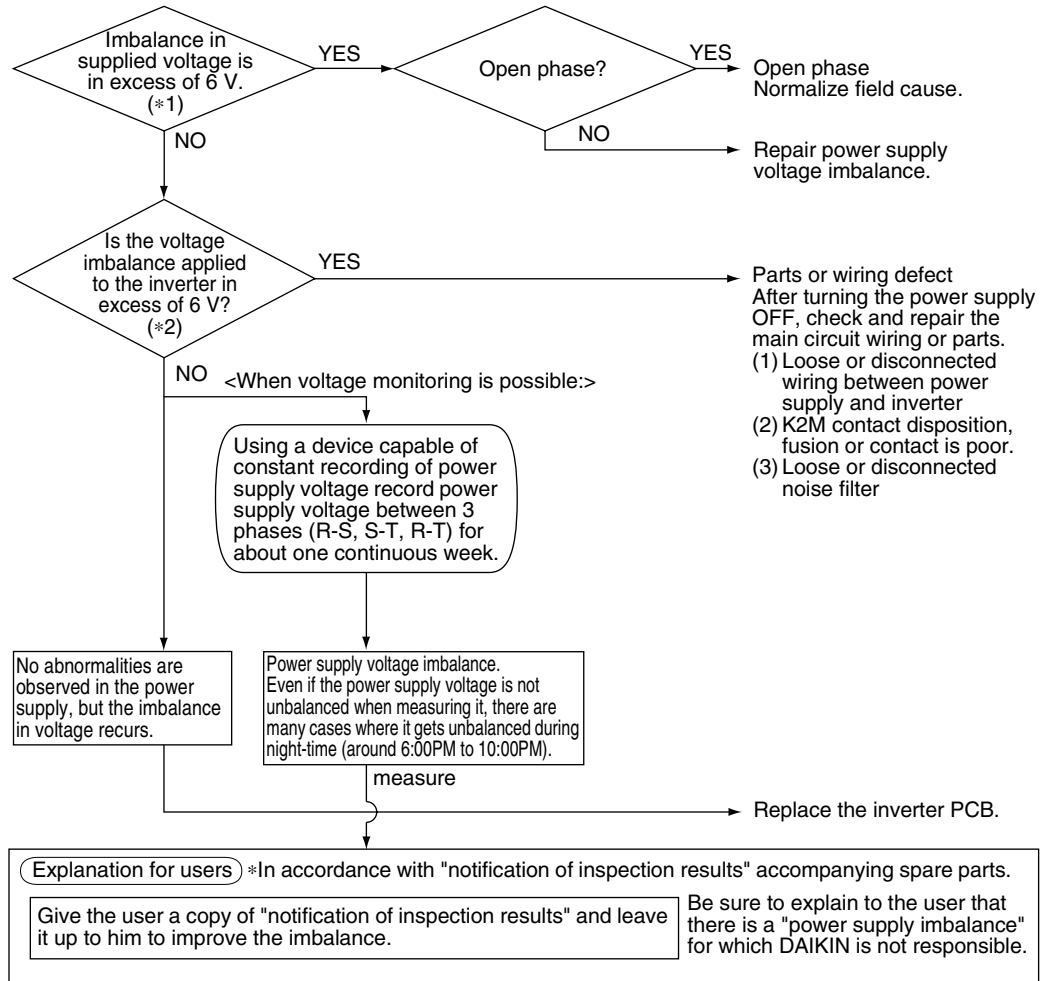

Note:

*1. Measure voltage at the X1M power supply terminal block.

*2. Measure voltage at terminals R, S and T of the diode module inside the inverter PCB while the compressor is running.

2.26 Inverter Radiation Fin Thermistor Abnormality


Remote Controller Display	P4
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Resistance of radiation fin thermistor is detected during the compressor stops.
Error Decision Conditions	When the resistance value of thermistor becomes a value equivalent to open or short circuited status. * Error is not decided while the unit operation is continued. "P4" will be displayed by pressing the inspection button.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective radiation fin thermistor ■ Defective inverter PCB ■ Defective inverter compressor ■ Defective fan motor

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

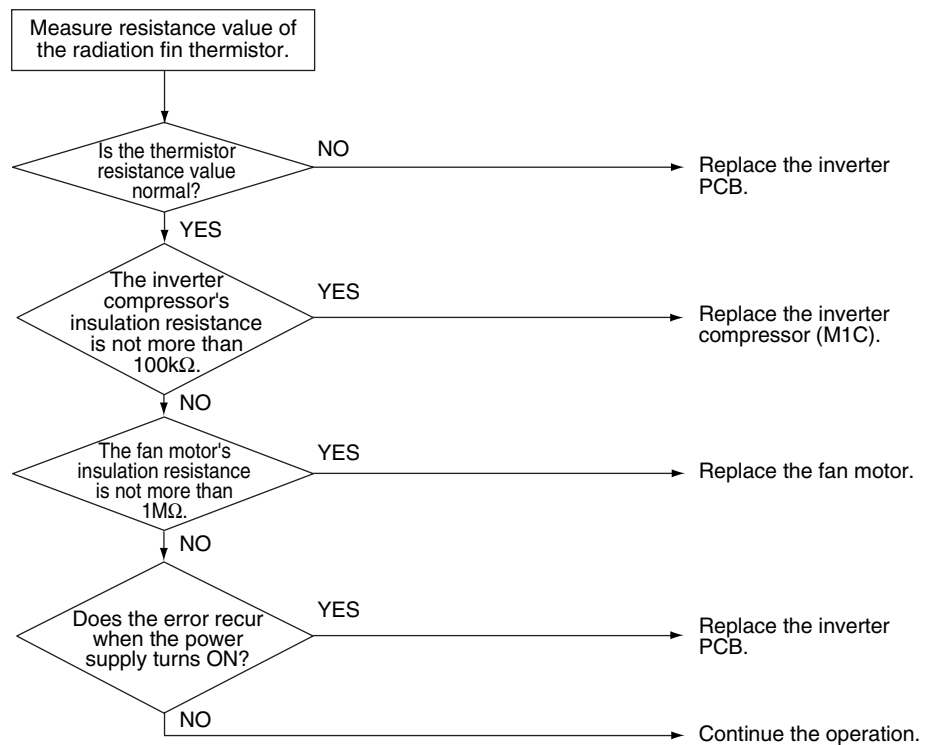

2.27 Field Setting Abnormality after Replacing Main PCB or Combination Error of PCB

Remote
Controller
Display

PU

Applicable
Models

RQYQ-PY1
RQEQ-PY1

Method of Error
Detection

This error is detected according to communications with the inverter PCB.

Error Decision
Conditions

Make judgement according to communication data on whether or not the type of the inverter PCB is correct.

Supposed
Causes


- Mis-matching of type of PCB
- Defective (or no) field setting after replacing main PCB

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

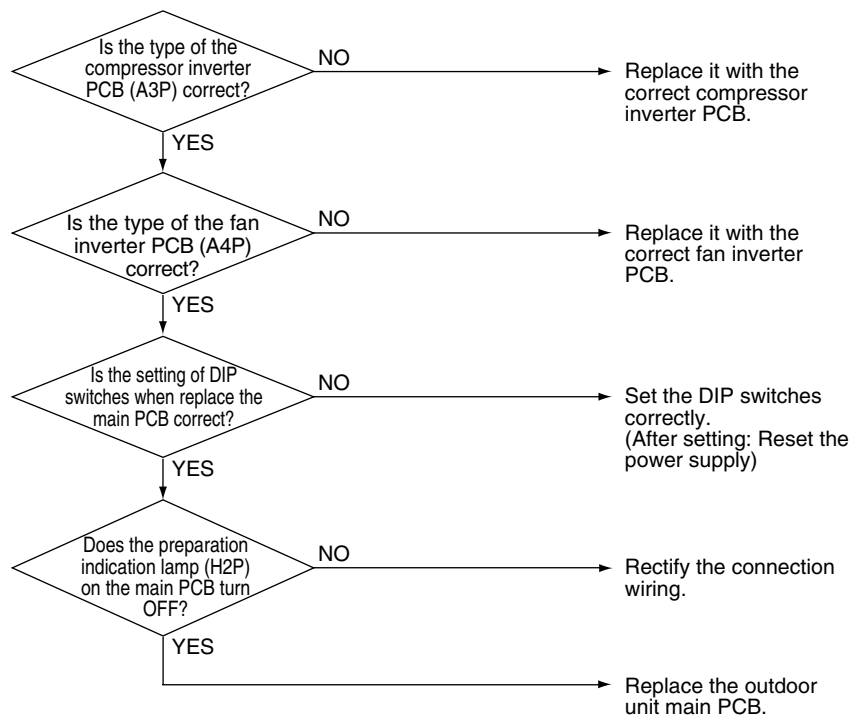

2.28 Refrigerant Shortage

Remote Controller Display	
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Detect refrigerant shortage based on the temperature difference between low pressure or suction pipe and heat exchanger.
Error Decision Conditions	<p>[In cooling mode] Low pressure becomes 0.1MPa or less.</p> <p>[In heating mode] The degree of superheat of suction gas becomes 20 degrees or more. $SH = Ts1 - Te$ Ts1: Temperature detected by suction pipe thermistor Te: Low pressure equivalent saturation temperature ★Error is not determined. The unit continues operation.</p>
Supposed Causes	<ul style="list-style-type: none"> ■ Refrigerant shortage or refrigerant clogging (wrong piping) ■ Defective thermistor (R5T, R9T) ■ Defective low pressure sensor ■ Defective outdoor unit PCB (A1P)

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.


In cooling

- ① Mount a pressure gauge at the service port on the low pressure side.
- ② Reset the operation using the remote controller then restart.

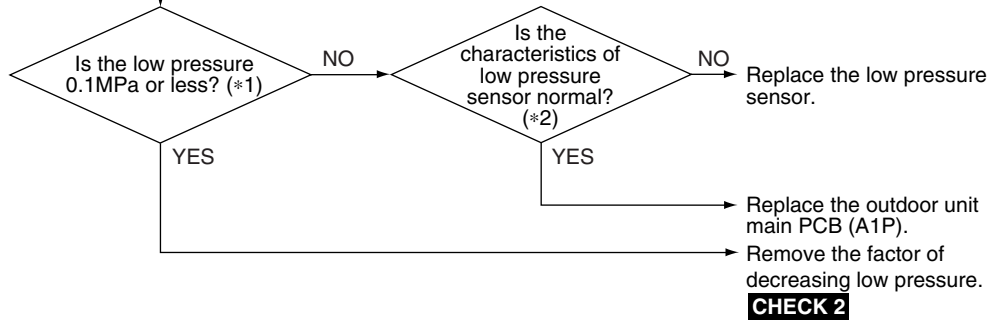

In heating

Reset the operation using the remote controller then restart.

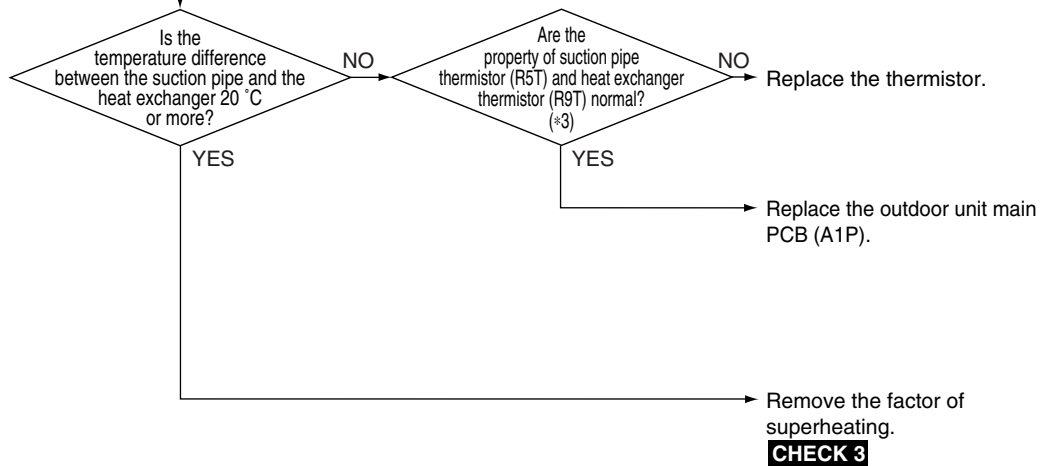

Note:

- *1. Check the low pressure value by using pressure gauge in operation.
- *2. Compare the actual measurement value by pressure sensor with the value by the pressure gauge.
- *3. Compare the thermistor resistance value with the value on the surface thermometer.



CHECK 2 Refer to P.180




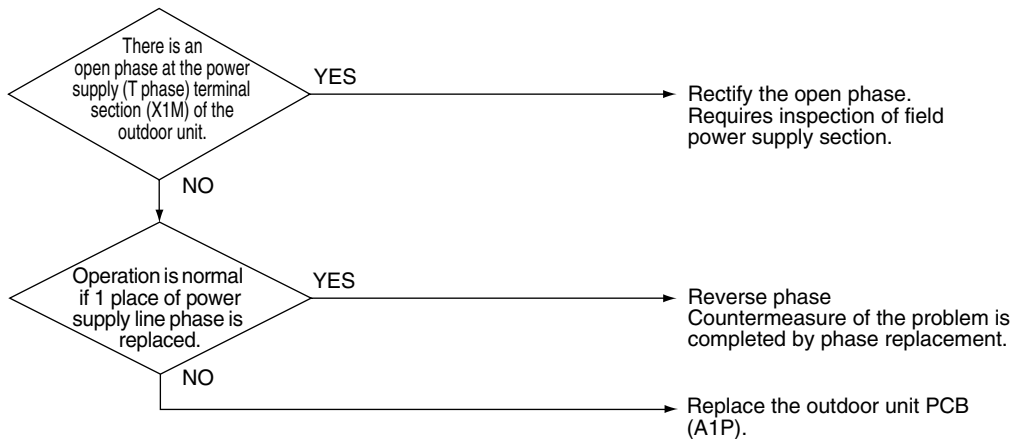
CHECK 3 Refer to P.181

2.29 Reverse Phase, Open Phase

Remote Controller Display	U I
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	The phase of each phase are detected by reverse phase detection circuit and right phase or reverse phase are judged.
Error Decision Conditions	When a power supply is reverse phase, or T phase is open phase.
Supposed Causes	<ul style="list-style-type: none"> ■ Power supply reverse phase ■ T phase open phase ■ Defective outdoor unit PCB (A1P)

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



2.30 Power Supply Insufficient or Instantaneous Error

Remote Controller Display	U2
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Detection of voltage of main circuit capacitor built in the inverter PCB and power supply voltage.
Error Decision Conditions	When the voltage aforementioned is not less than 190V.
Supposed Causes	<ul style="list-style-type: none"> ■ Power supply insufficient ■ Instantaneous power failure ■ Open phase ■ Defective inverter PCB ■ Defective outdoor service monitor PCB ■ Defective compressor ■ Defective main circuit wiring ■ Defective fan motor ■ Defective connection of signal cable


Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Check the condition of the power supply.
 ① Check if power supply voltage is 380 to 415V.
 ② Check if there is open phase or wrong wiring.
 ③ Check if power supply voltage side unbalance is within 6V.

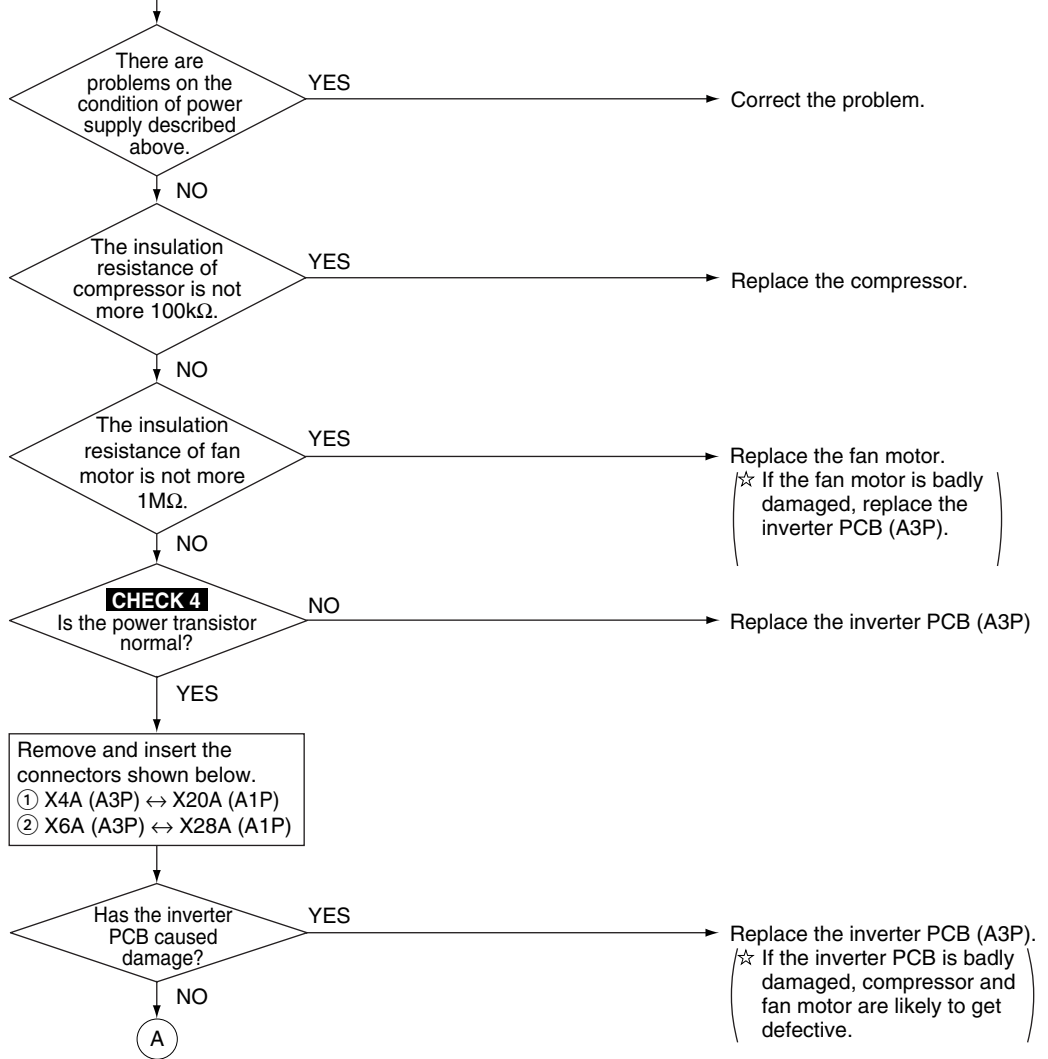

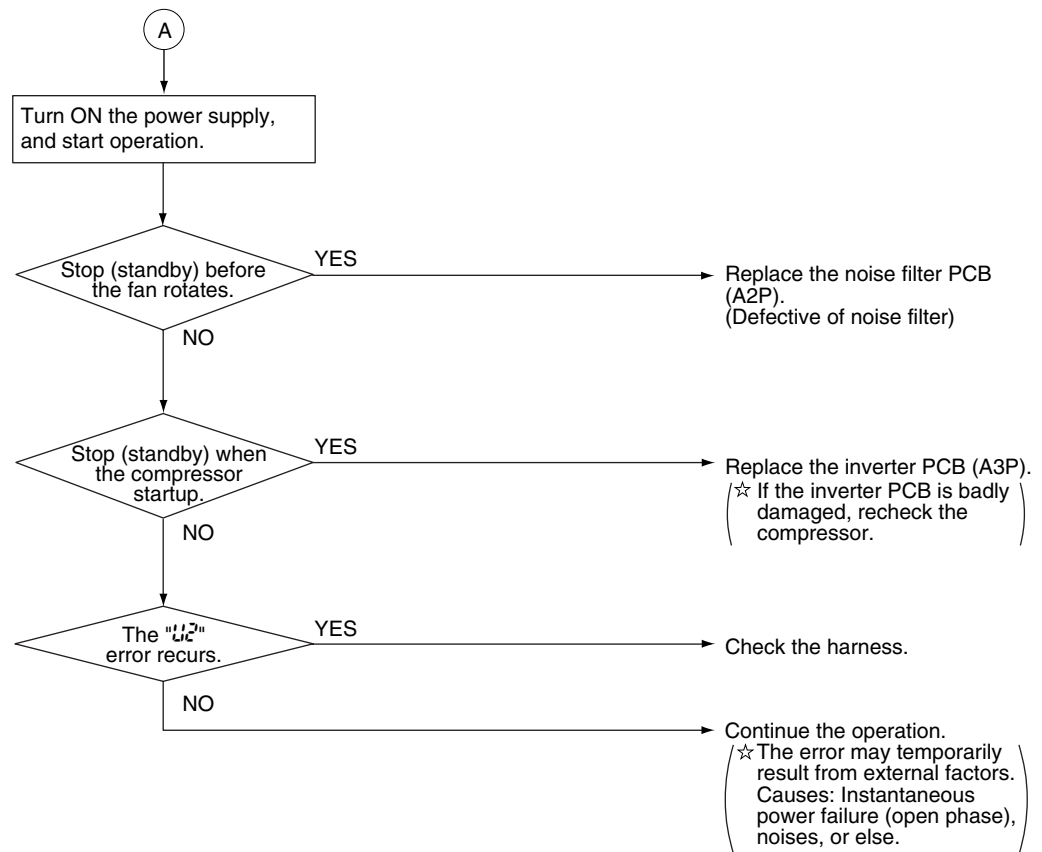
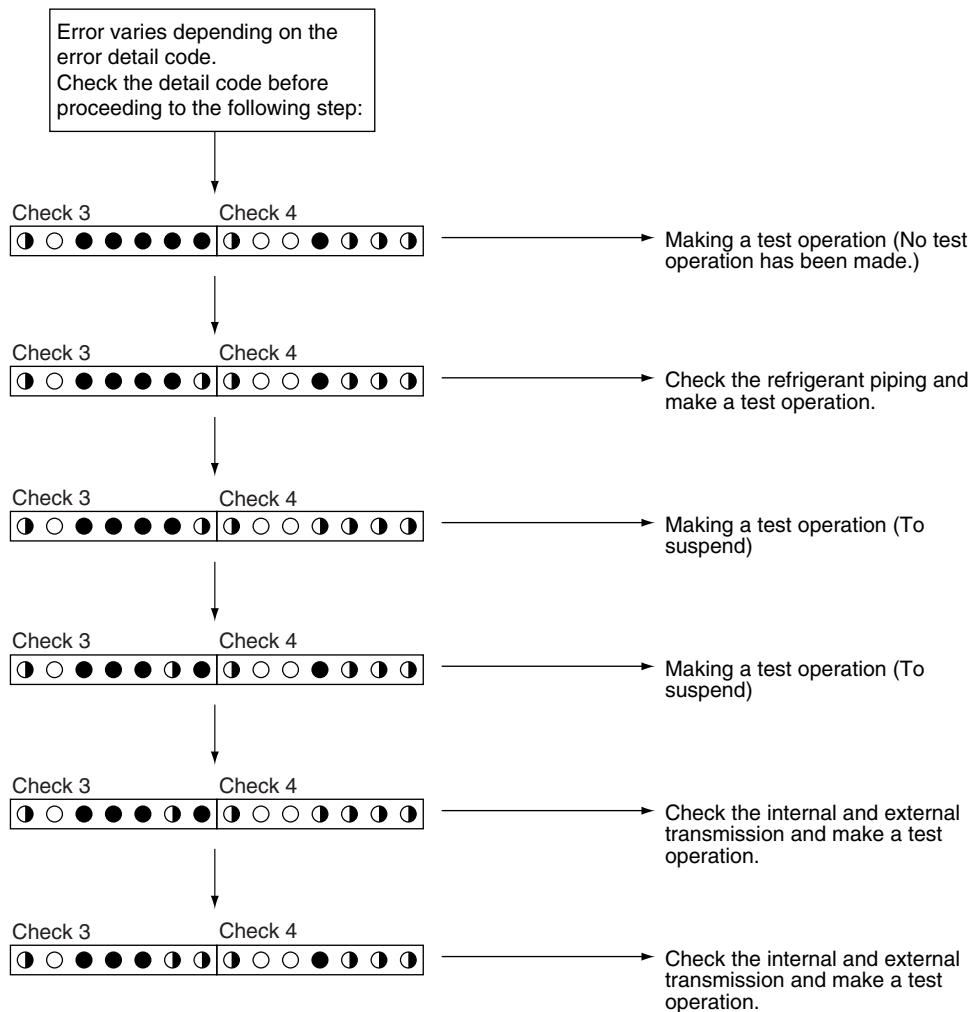


CHECK 4 Refer to P.182


2.31 Check Operation is not Executed

Remote Controller Display	U3
Applicable Models	RQYQ-PY1 RREQ-PY1
Method of Error Detection	Check operation is executed or not
Error Decision Conditions	Error is decided when the unit starts operation without check operation.
Supposed Causes	<ul style="list-style-type: none"> ■ Check operation is not executed.
Troubleshooting	

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



2.32 Transmission Error (between Indoor and Outdoor Units)


Remote Controller Display	
Applicable Models	All indoor models RQYQ-PY1 RQEQ-PY1
Method of Error Detection	The error is generated when the micro-computer detects that the transmission between the indoor and outdoor unit is not normal.
Error Decision Conditions	When transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none"> ■ Indoor to outdoor, outdoor to outdoor transmission wiring F1, F2 disconnection, short circuit or wrong wiring ■ Outdoor unit power supply is OFF ■ System address does not match ■ Defective outdoor unit main PCB (A1P) ■ Defective indoor unit PCB

Troubleshooting




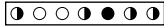
Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

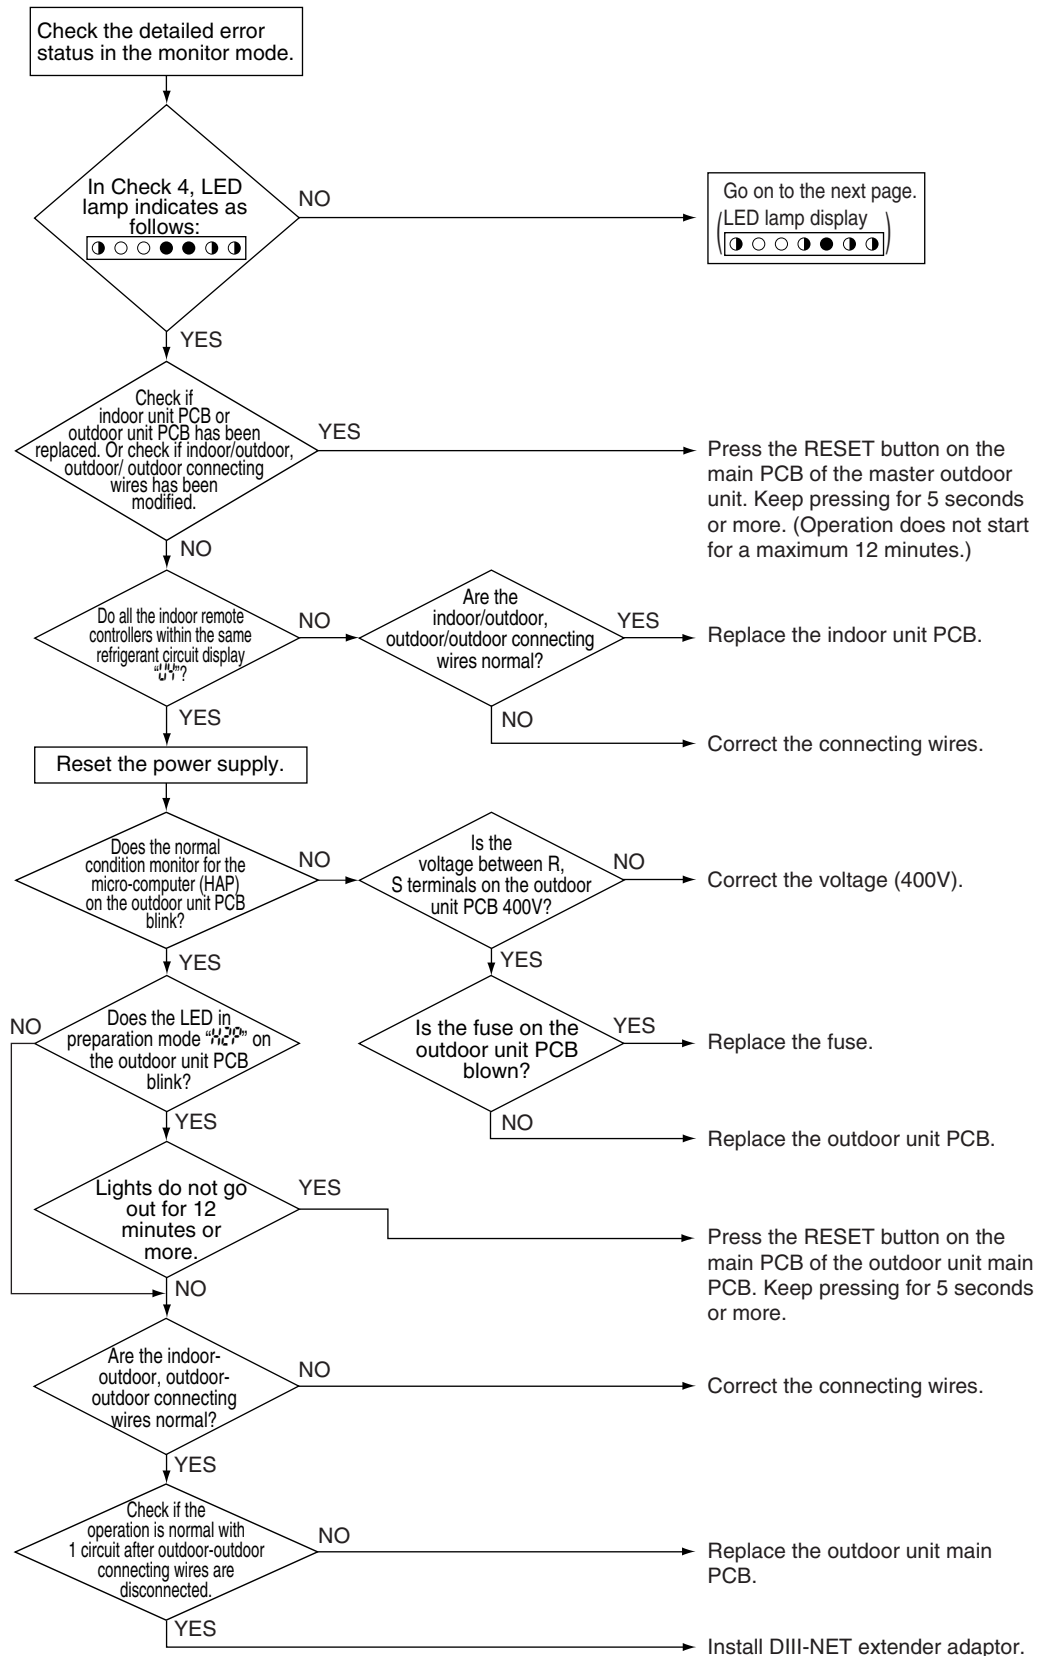


Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Continued from the previous page
In Check 4,
LED lamp indicates as follows:


Start operation of all the indoor units.

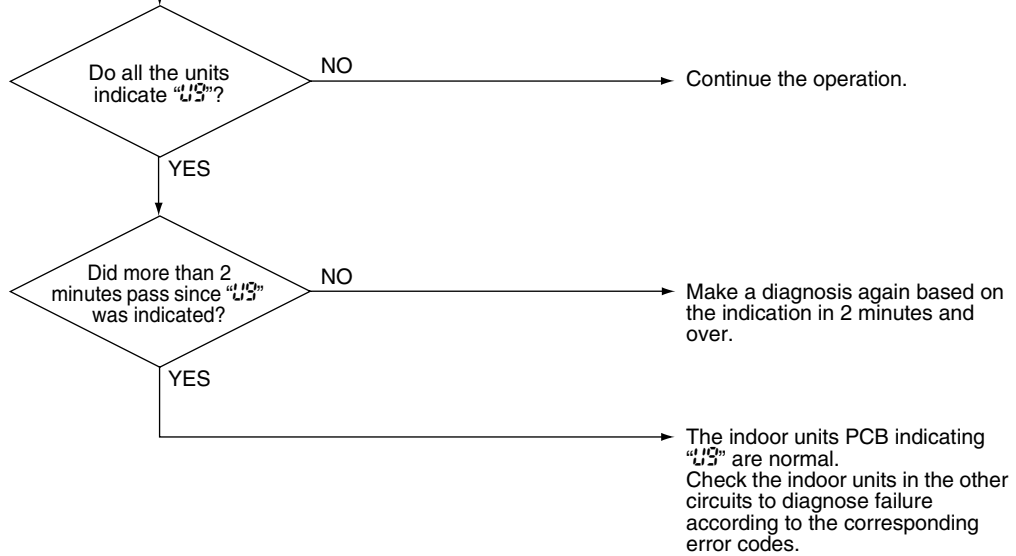

2.33 Transmission Error (between Remote Controller and Indoor Unit)

Remote Controller Display

05

Applicable Models

All indoor models

Method of Error Detection

Micro-computer checks if transmission between indoor unit and remote controller is normal.

Error Decision Conditions

Normal transmission does not continue for specified period.

Supposed Causes


- Transmission error between indoor unit and remote controller
- Connection of 2 main remote controllers (when using 2 remote controllers)
- Defective indoor unit PCB
- Defective remote controller PCB
- Transmission error caused by noise

Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

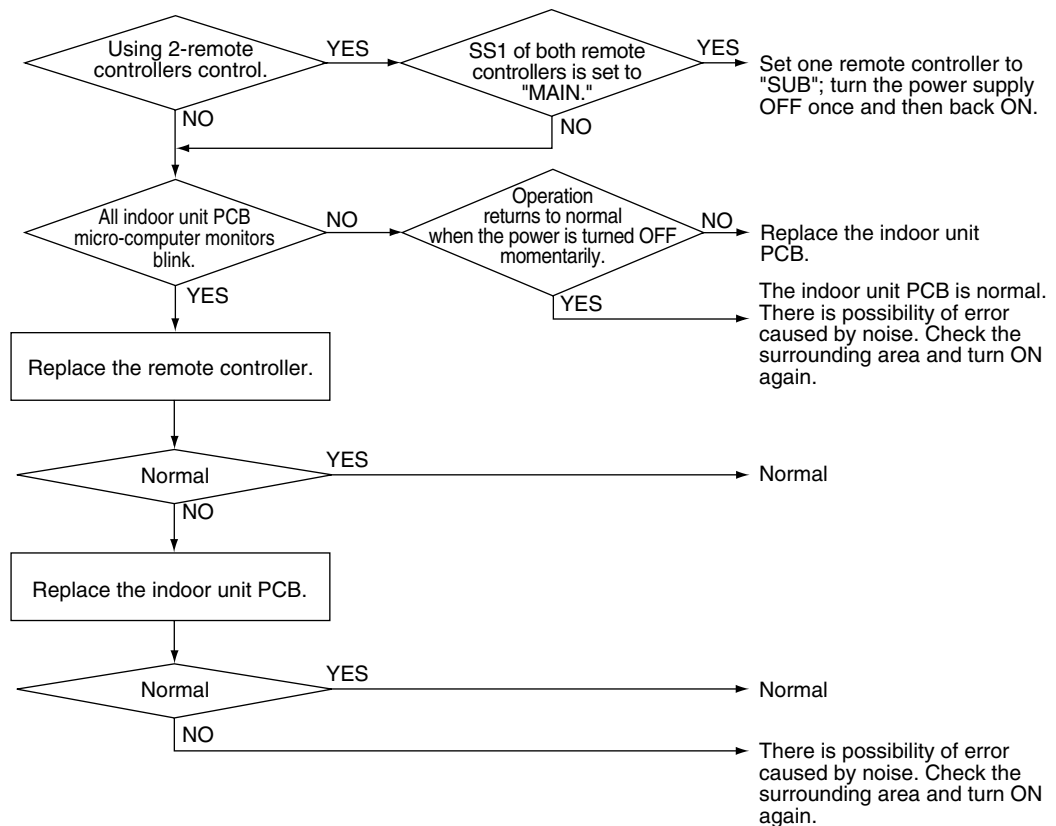

2.34 Transmission Error (Across Outdoor Units)


Remote Controller Display	
Applicable Models	RQYQ-PY1 RQEQ-PY1
Method of Error Detection	Micro-computer checks if transmission between outdoor units is normal.
Error Decision Conditions	When transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none"> ■ Connection error in connecting wires between outdoor unit and external control adaptor for outdoor unit ■ Connection error in connecting wires across outdoor units ■ Setting error in switching cool/heat ■ Unified address setting error for cool/heat (external control adaptor for outdoor unit) ■ Defective outdoor unit PCB (A1P) ■ Defective external control adaptor for outdoor unit

Troubleshooting




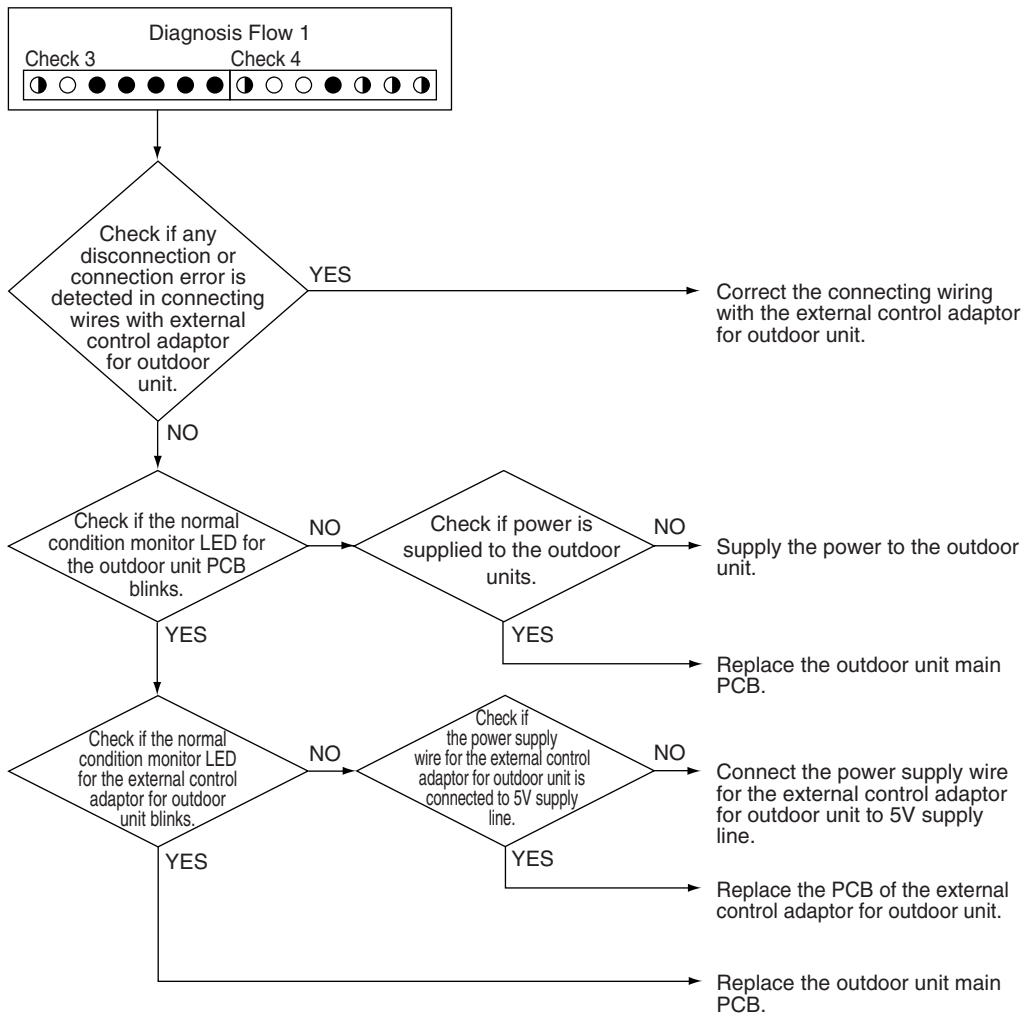
Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

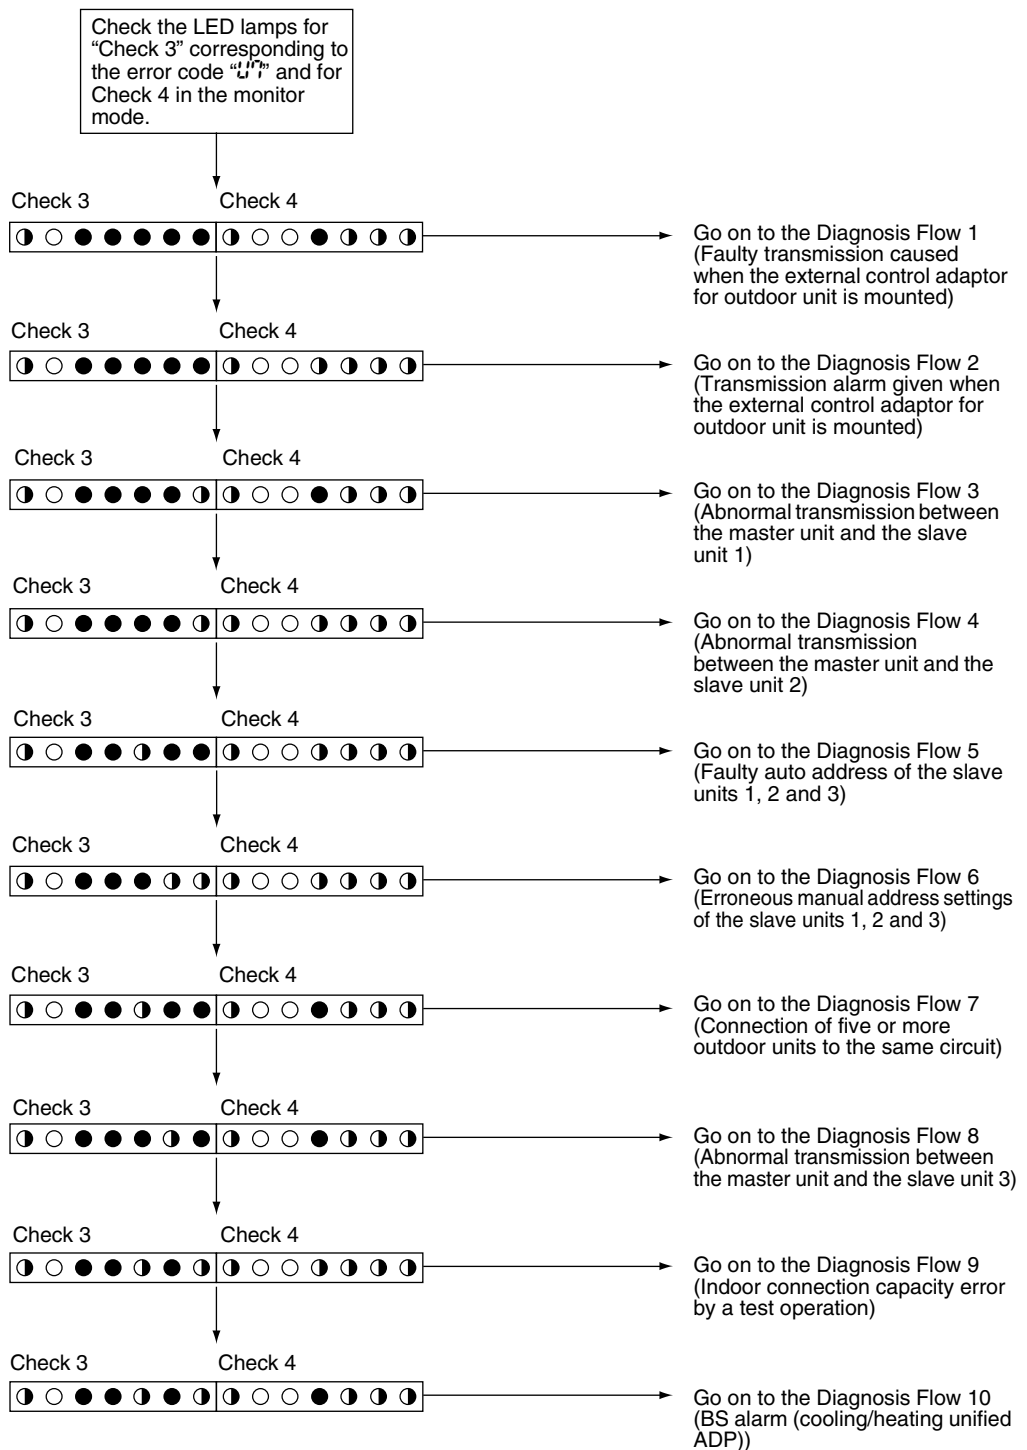

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.




Troubleshooting




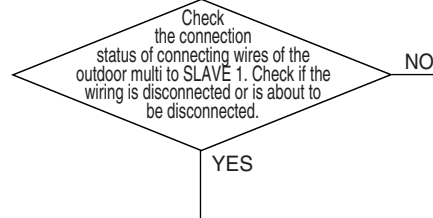

Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

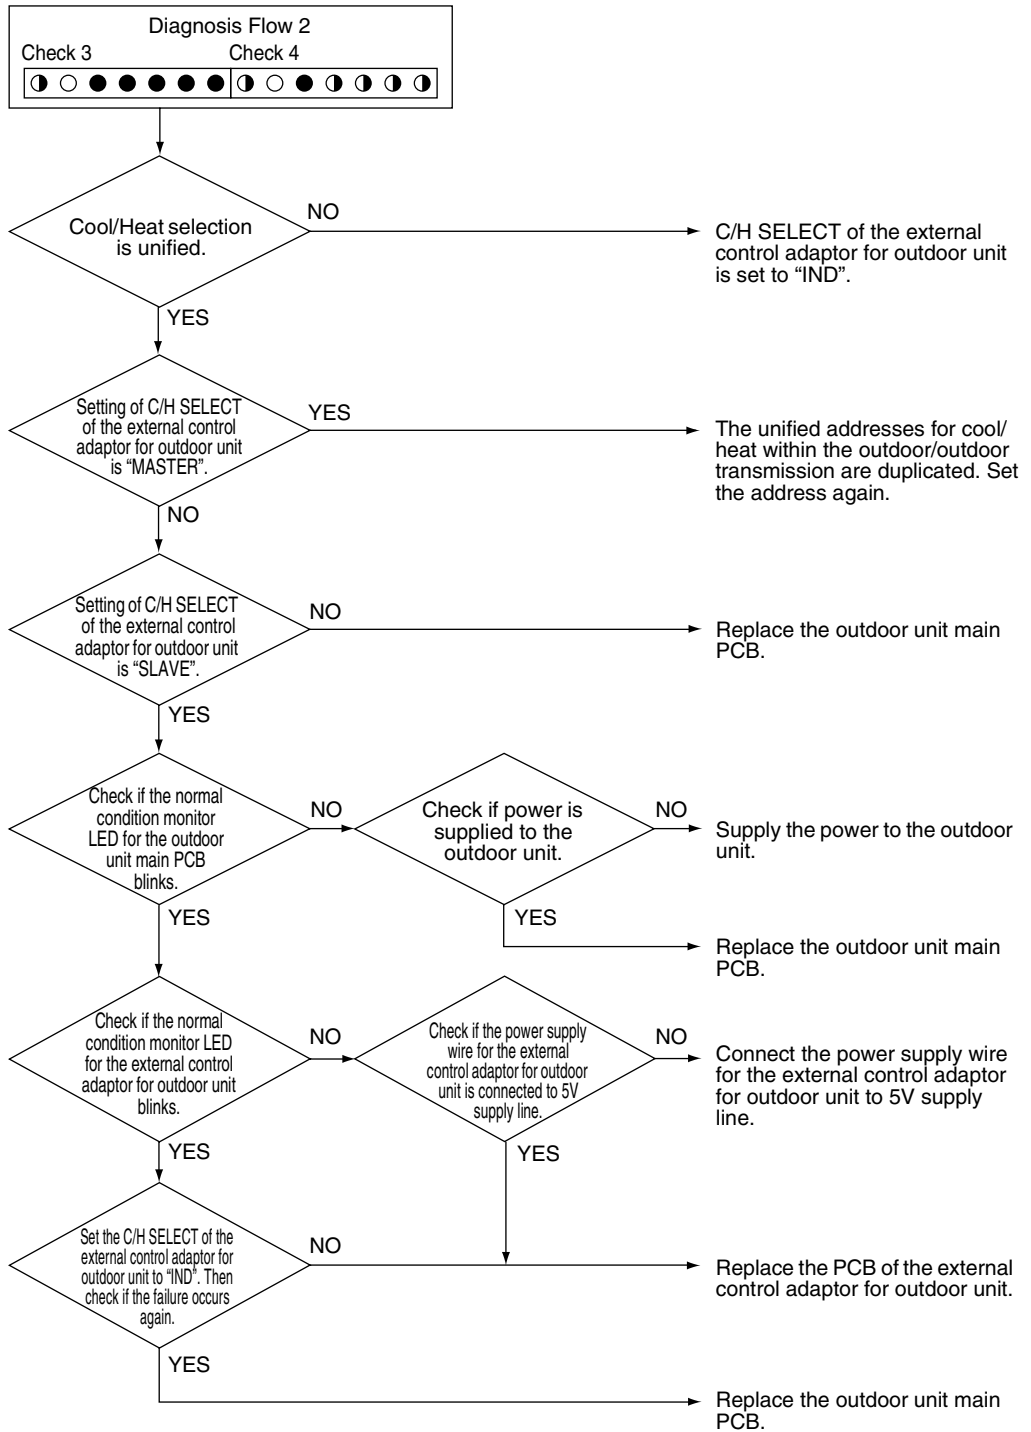



Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.





Replace the outdoor unit main PCB of the SLAVE 1.

Correct the connecting wires of the outdoor multi and then reset the power supply.

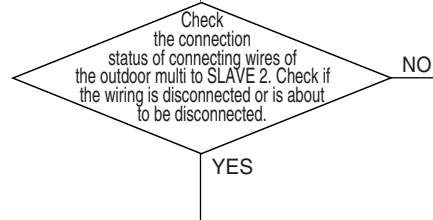

Replace the outdoor unit main PCB of the SLAVE 2.


Correct the connecting wires of the outdoor multi and then reset the power supply.





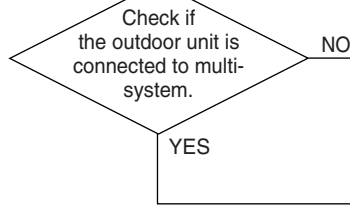



Replace the main PCB (A1P) of the outdoor unit.


Remove the connecting wires of the outdoor multi and then reset the power supply.



Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

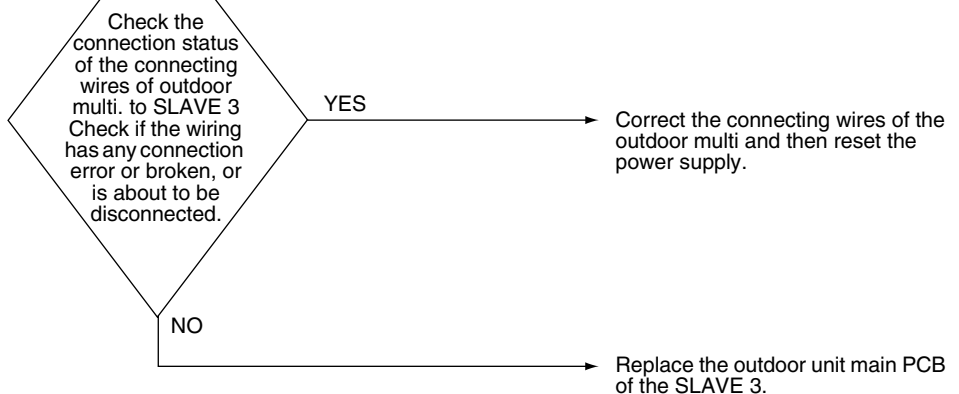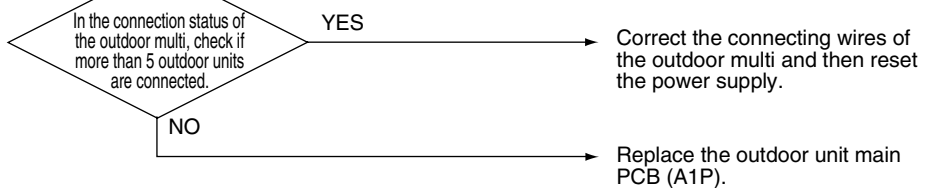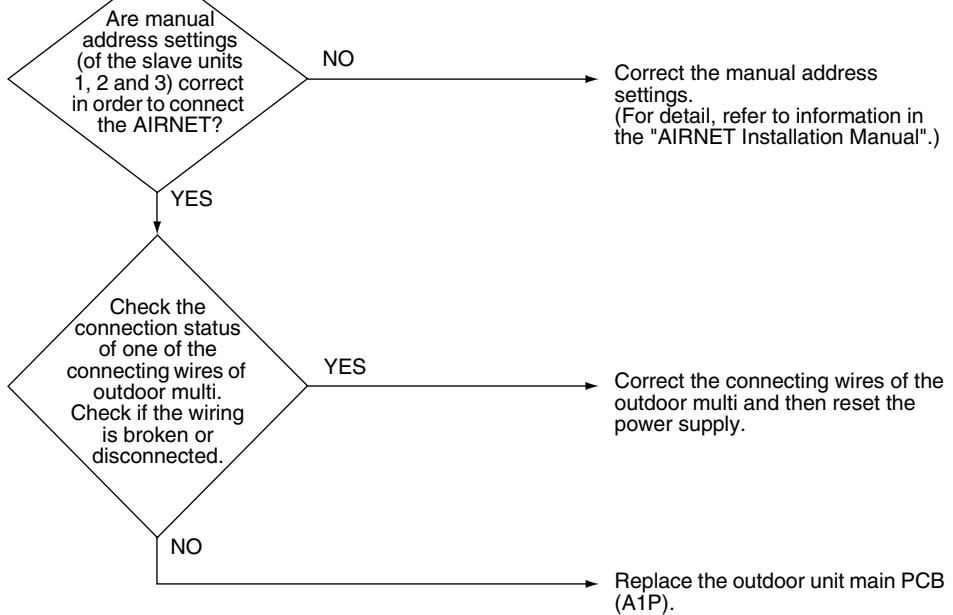

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

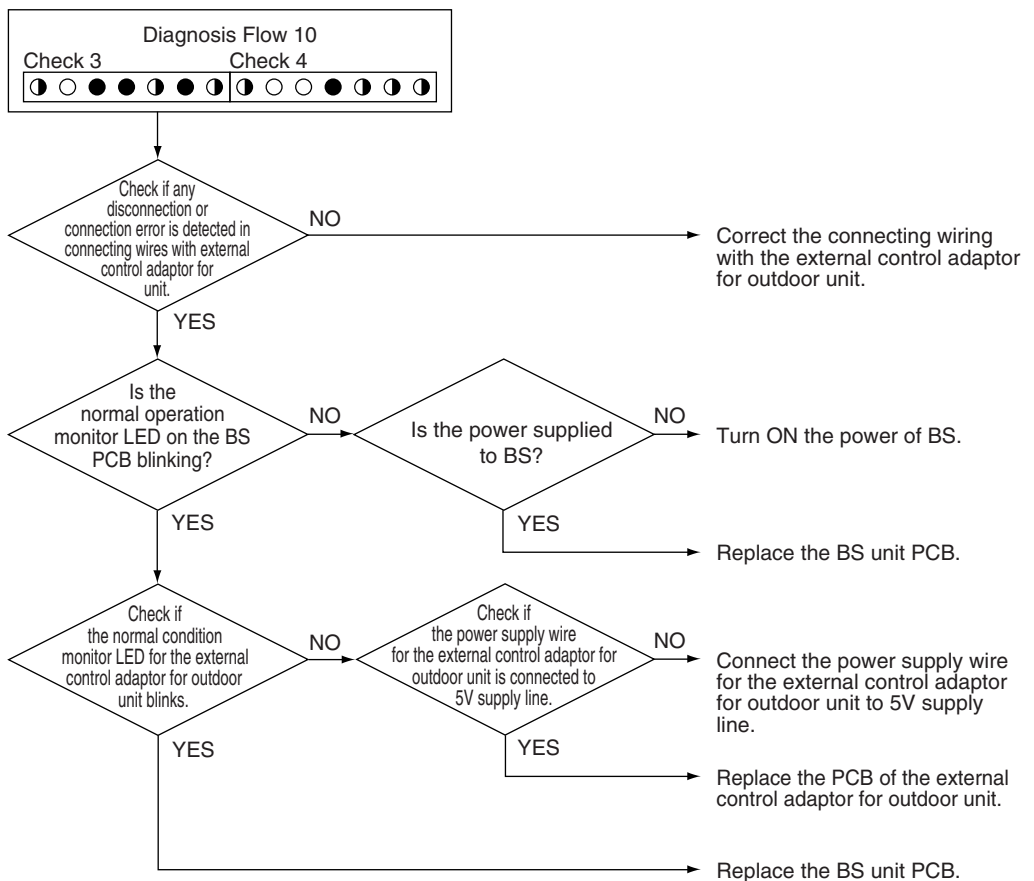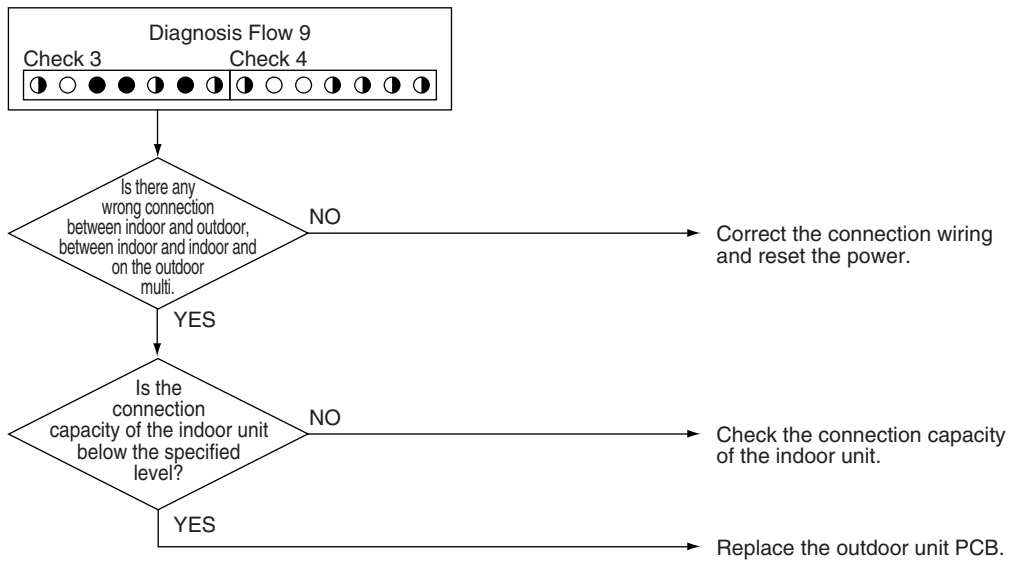

2.35 Transmission Error (between Main and Sub Remote Controllers)

Remote Controller Display

00

Applicable Models

All indoor models

Method of Error Detection

In case of controlling with 2-remote controller, check the system using micro-computer if signal transmission between indoor unit and remote controller (main and sub) is normal.

Error Decision Conditions

Normal transmission does not continue for a certain amount of time.

Supposed Causes


- Transmission error between main and sub remote controller
- Connection among sub remote controllers
- Defective remote controller PCB

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

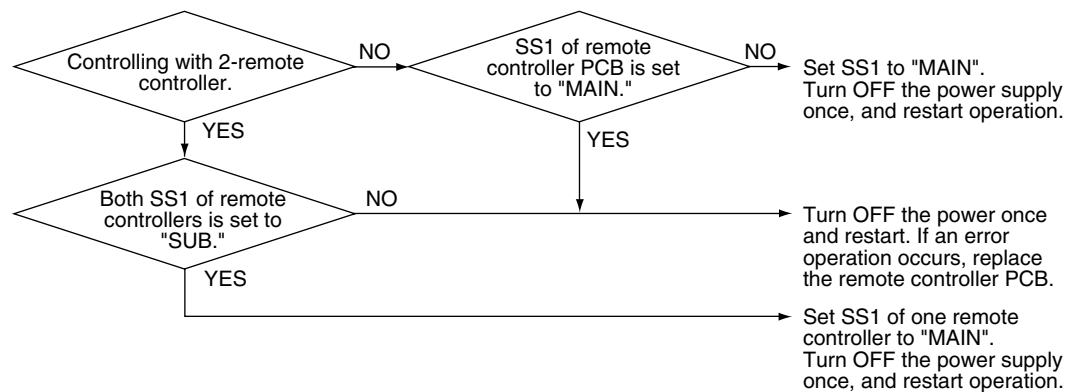

2.36 Transmission Error (between Indoor and Outdoor Units in the Same System)

Remote
Controller
Display

U9

Applicable
Models

All indoor models
RQYQ-PY1
RREQ-PY1

Method of Error
Detection

Detect error signal for the other indoor units within the circuit by outdoor unit PCB.

Error Decision
Conditions

When the error decision is made on any other indoor unit within the system concerned.

Supposed
Causes


- Transmission error within or outside of other system
- Defective electronic expansion valve in indoor unit of other system
- Defective PCB of indoor unit in other system
- Improper connection of transmission wiring between indoor and outdoor unit

Troubleshooting




Caution


Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

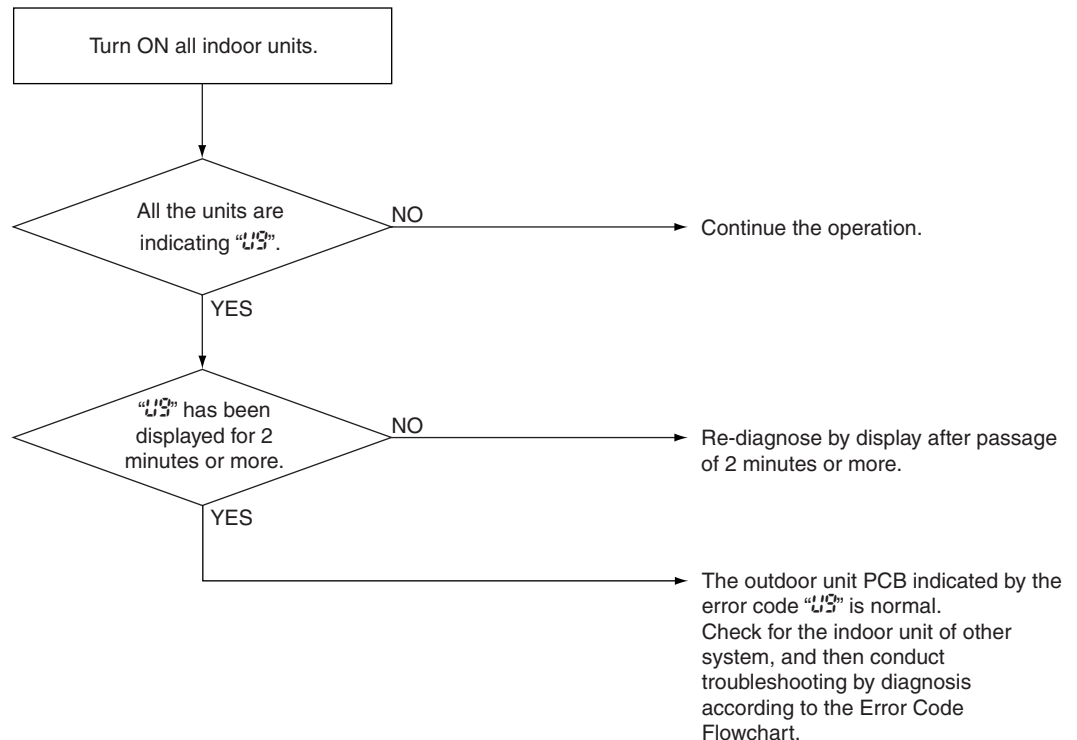


2.37 Improper Combination of Indoor and Outdoor Units, Indoor Units and Remote Controller


Remote Controller Display	
Applicable Models	All indoor models RQYQ-PY1 RQEQ-PY1
Method of Error Detection	A difference occurs in data by the refrigerant type between indoor and outdoor units. The number of indoor units is out of the allowable range.
Error Decision Conditions	The error decision is made as soon as either of the abnormalities aforementioned is detected.
Supposed Causes	<ul style="list-style-type: none"> ■ Excess of connected indoor units ■ Defective outdoor unit PCB (A1P) ■ Mismatching of the refrigerant type of indoor and outdoor unit. ■ Setting of outdoor unit PCB was not conducted after replacing to spare PCB.



Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

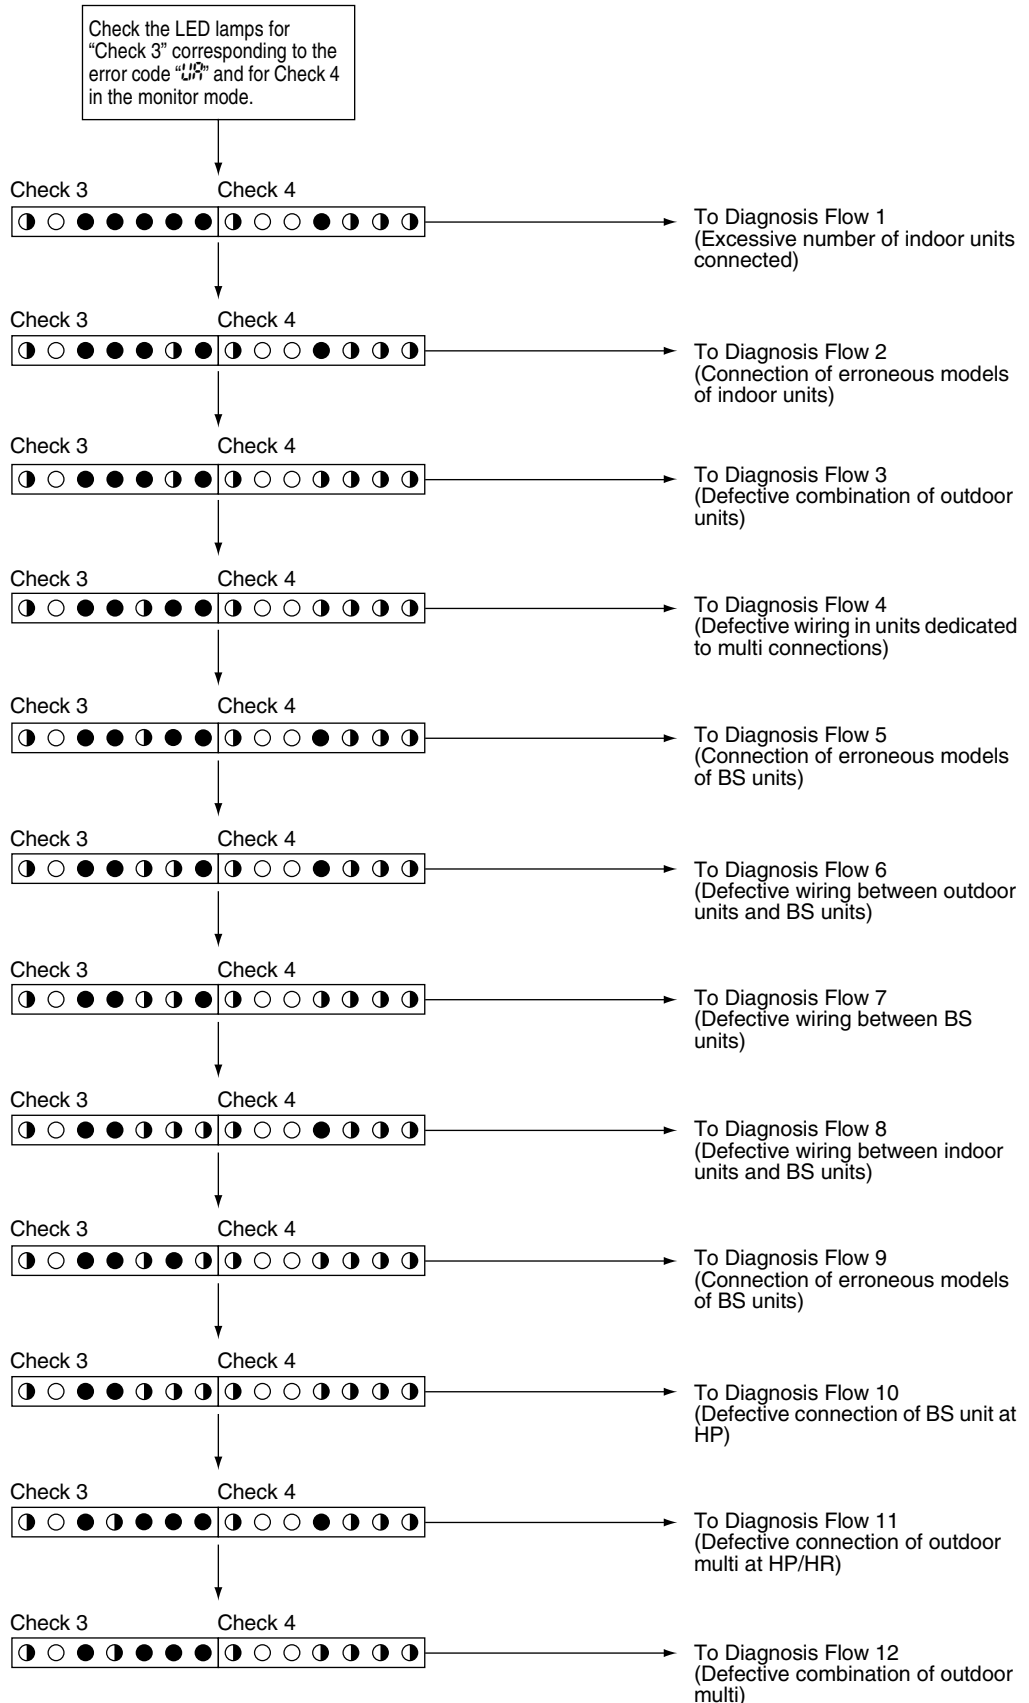

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

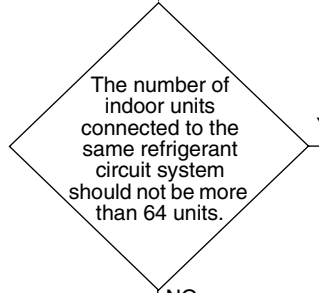



YES

Replace the outdoor unit main PCB.

- With individual systems, replace the control PCB (A1P).
- With multi systems, replace the outdoor unit main PCB (A1P).

NO

The number of indoor units exceeds the standard. Check the connection to correct.

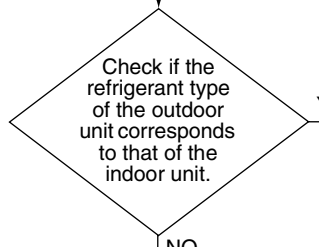

YES


Replace the outdoor unit main PCB.



- With individual systems, replace the control PCB (A1P).
- With multi systems, replace the outdoor unit main PCB (A1P).

NO

Match the refrigerant types of the outdoor unit and the indoor unit.

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

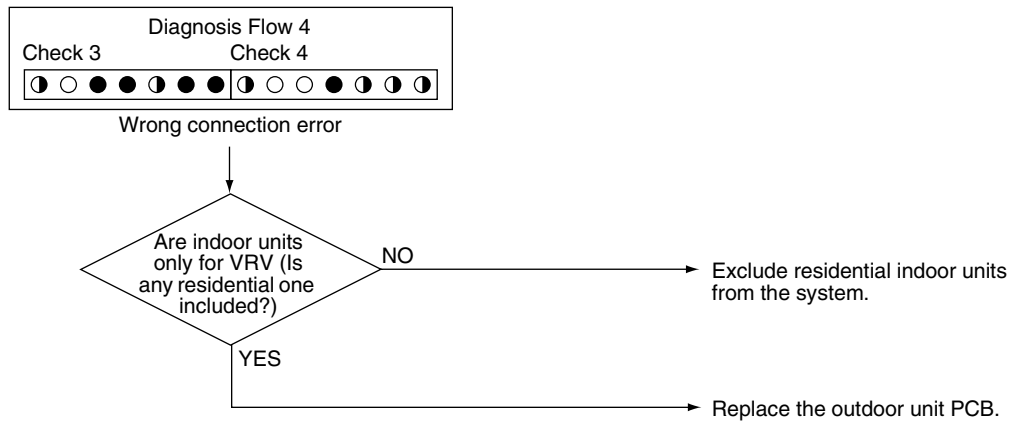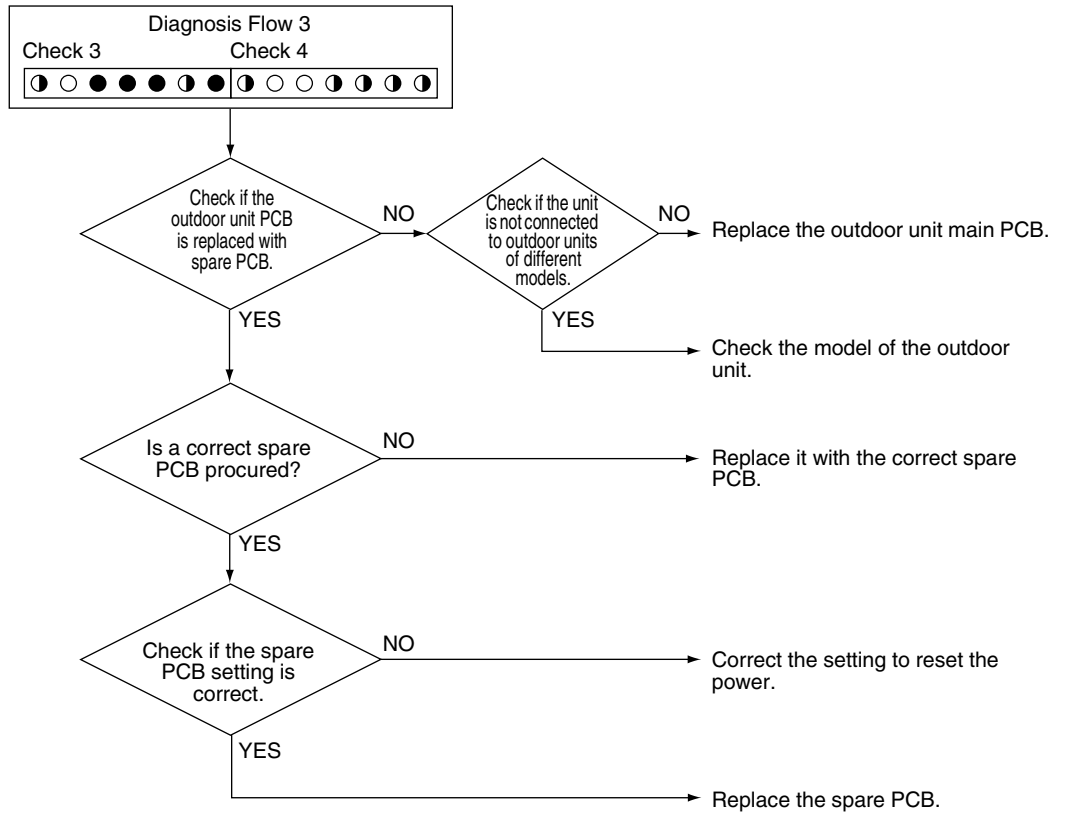


Troubleshooting





Caution


Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



BS error (Excessive number of indoor units connected)



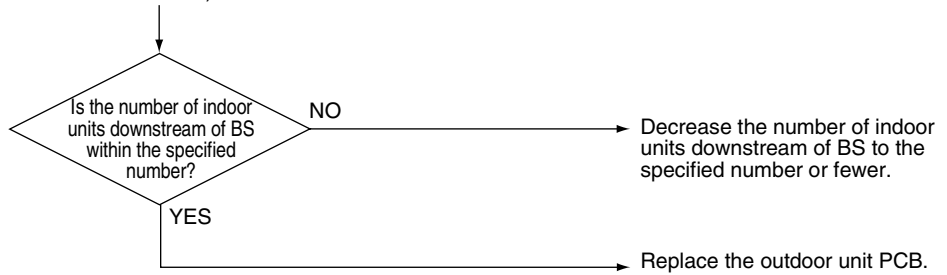


Wrong wiring between outdoor units and BS units.

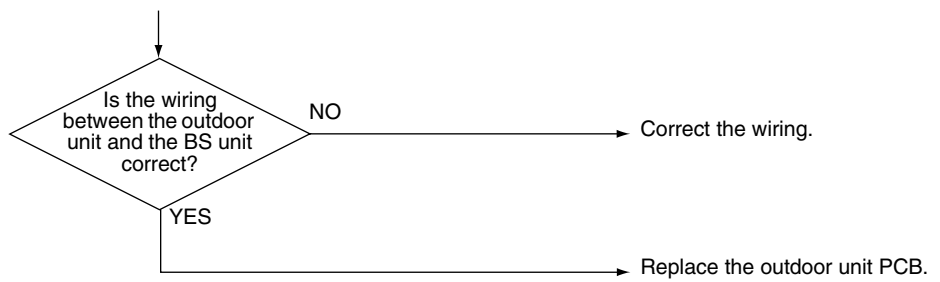


Troubleshooting

Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

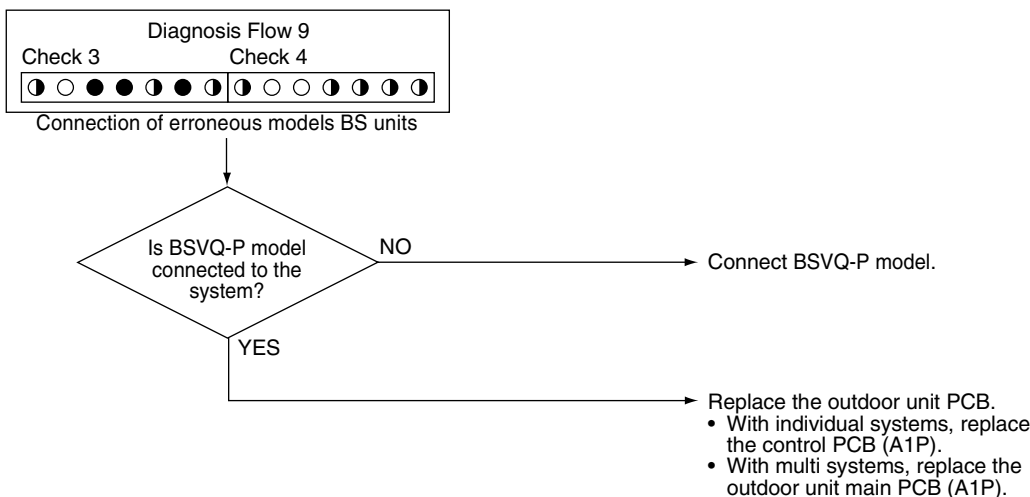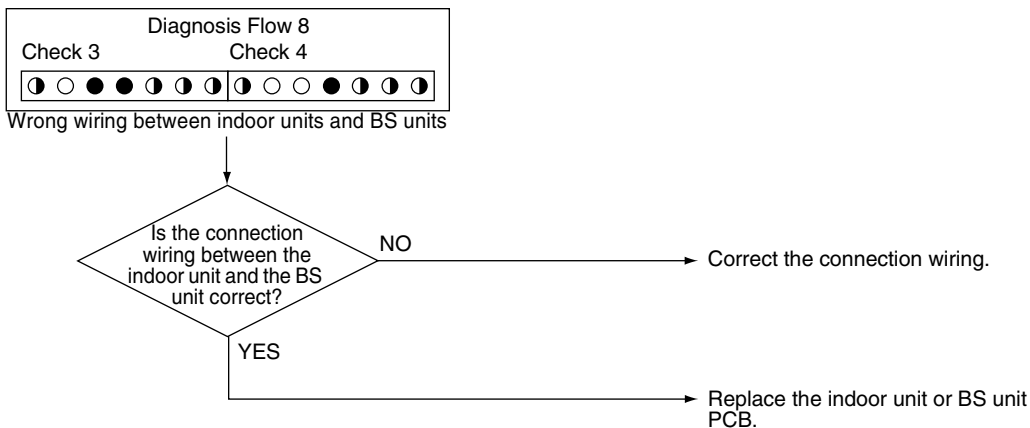
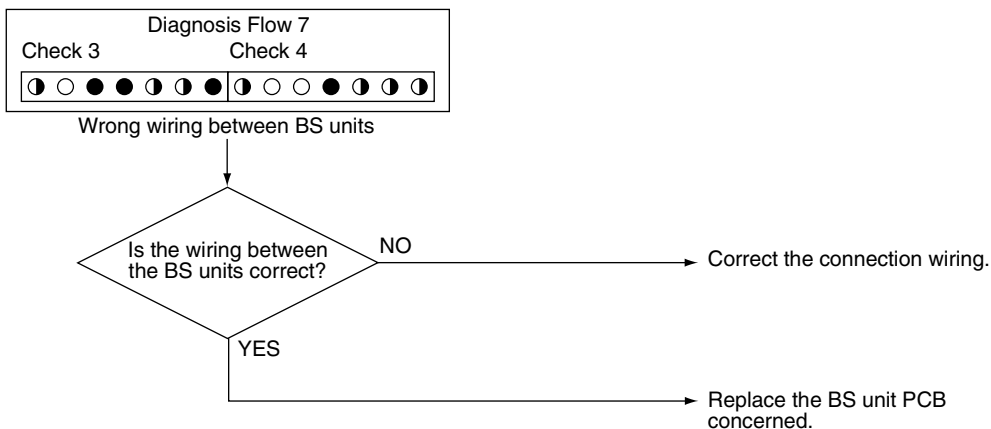


Troubleshooting


Caution Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.



Connection error of BS unit at HP

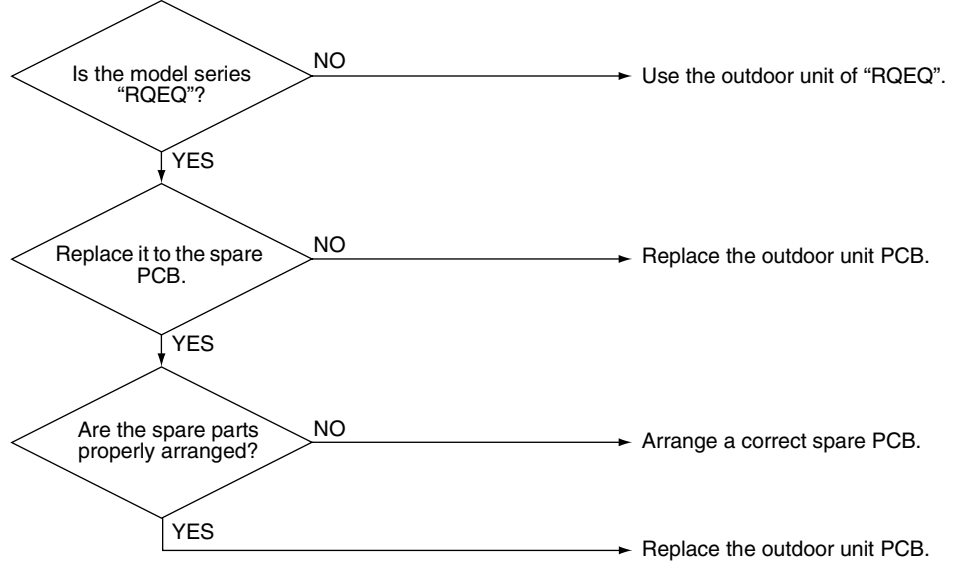

Connection error of outdoor multi at HP/HR

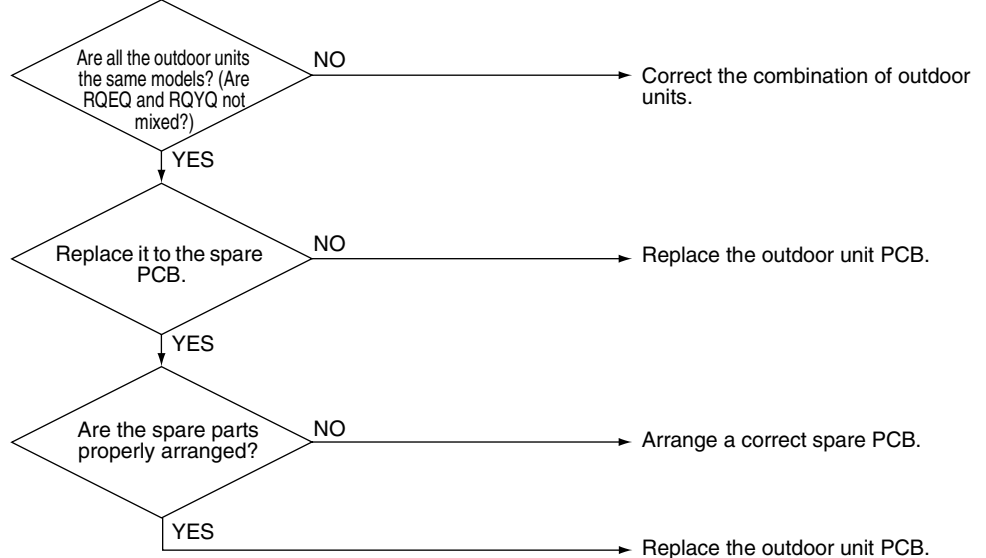


Troubleshooting




Caution



Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

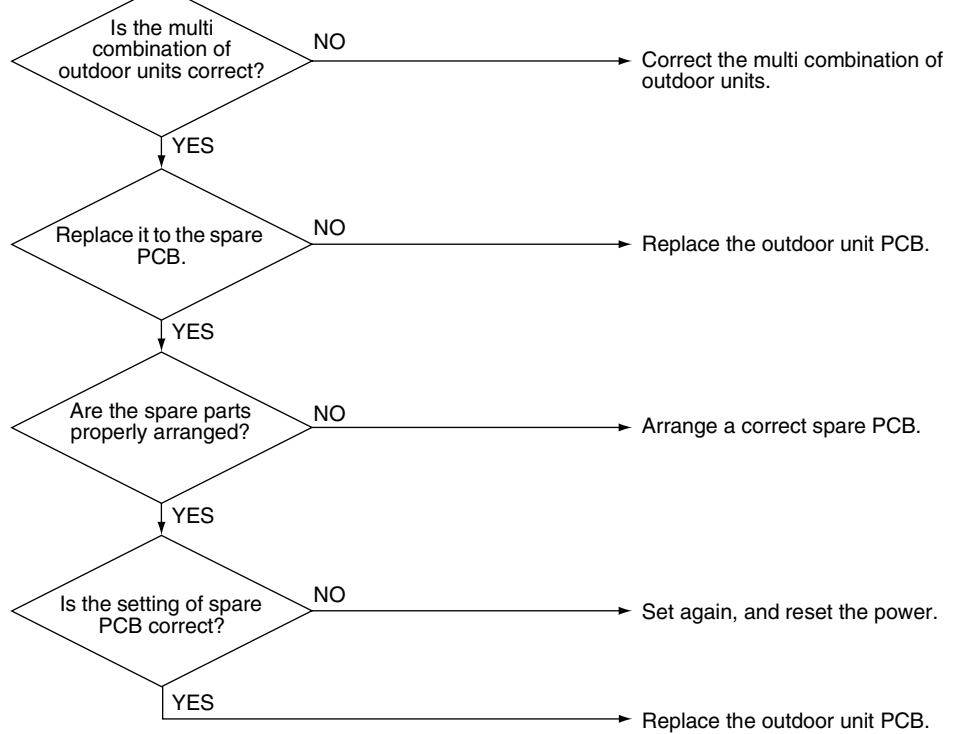

Wrong combination of outdoor multi



2.38 Address Duplication of Centralized Control Equipment

Remote Controller Display	
Applicable Models	All indoor models RQYQ-PY1 RREQ-PY1
Method of Error Detection	The principal indoor unit detects the same address as that of its own on any other indoor unit.
Error Decision Conditions	The error decision is made as soon as the abnormality aforementioned is detected.
Supposed Causes	<ul style="list-style-type: none"> ■ Address duplication of centralized control equipment ■ Defective the indoor unit PCB.
Troubleshooting	<div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;">  <p>Caution</p> </div> <div> <p>Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.</p> </div> </div> <div style="margin-top: 20px; display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 20px;"> <p>The centralized address is duplicated.</p> </div> <div style="flex-grow: 1; border-bottom: 1px solid black; position: relative;"> <div style="position: absolute; right: -10px; top: -5px;">→</div> </div> <div style="margin-left: 20px;"> <p>Make setting change so that the centralized address will not be duplicated.</p> </div> </div>

2.39 Transmission Error (between Centralized Control Equipment and Indoor Unit)


Remote Controller Display	UE
Applicable Models	All indoor models intelligent Touch Controller Centralized remote controller Schedule timer
Method of Error Detection	Micro-computer checks if transmission between indoor unit and centralized control equipment is normal.
Error Decision Conditions	When transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none"> ■ Transmission error between optional controllers for centralized control and indoor unit ■ Connector for setting main controller is disconnected. (or disconnection of connector for independent / combined use changeover switch.) ■ Failure of PCB for centralized remote controller ■ Defective indoor unit PCB


Troubleshooting




Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

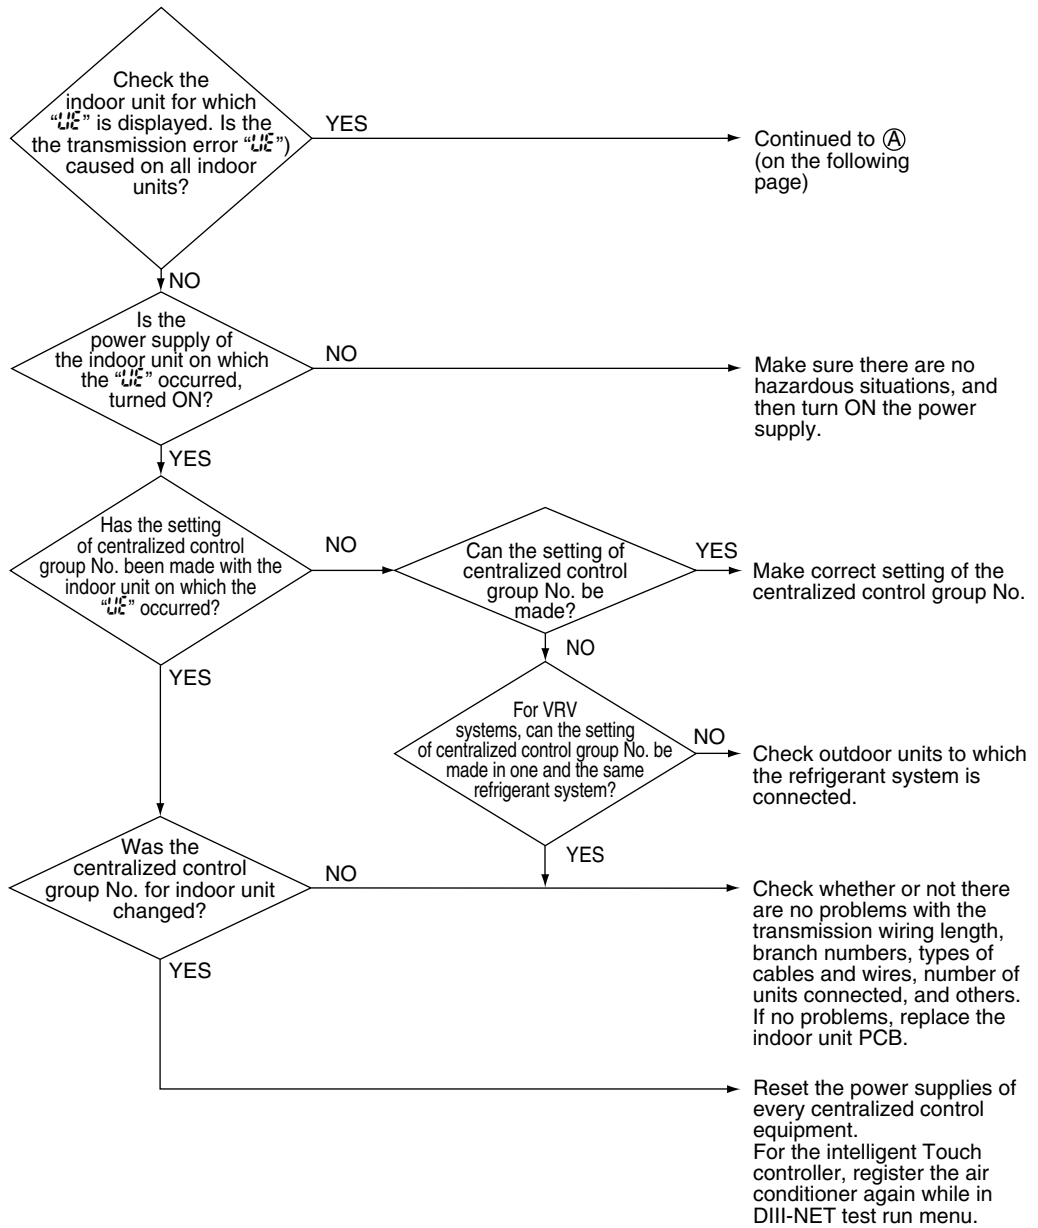

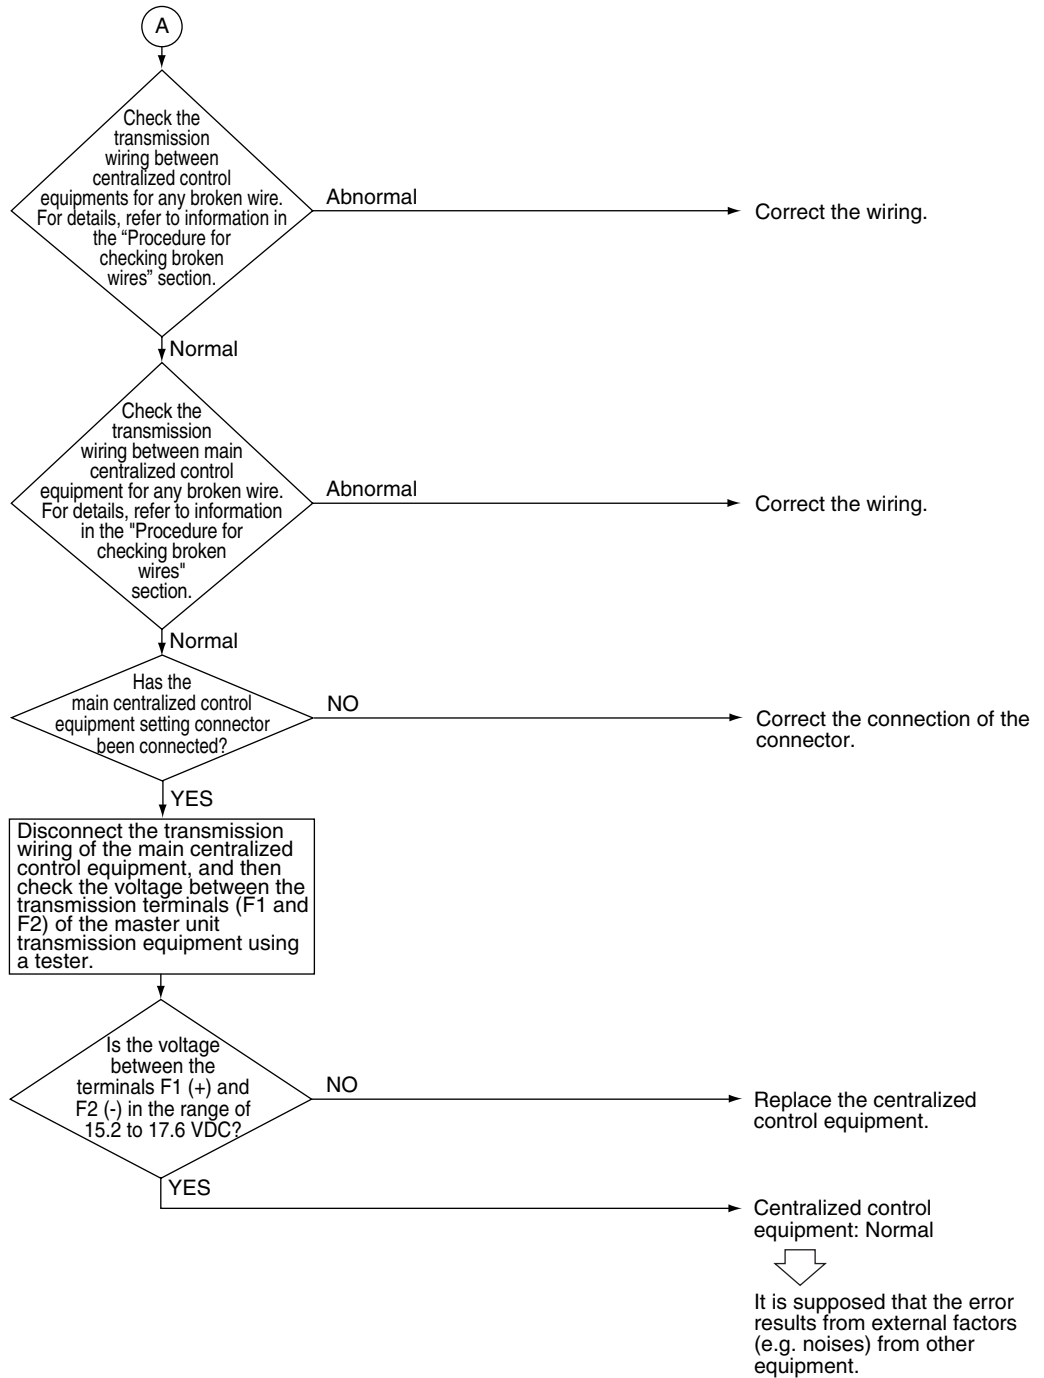

2.40 System is not Set yet


Remote Controller Display	
Applicable Models	All indoor models RQYQ-PY1 RQEQ-PY1
Method of Error Detection	On check operation, the number of indoor units in terms of transmission is not corresponding to that of indoor units that have made changes in temperature.
Error Decision Conditions	The error is determined as soon as the abnormality aforementioned is detected through checking the system for any erroneous connection of units on the check operation.
Supposed Causes	<ul style="list-style-type: none"> ■ Improper connection of transmission wiring between indoor-outdoor units and outdoor-outdoor units ■ Failure to execute check operation ■ Defective indoor unit PCB ■ Stop valve is not opened

Troubleshooting



Caution

Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

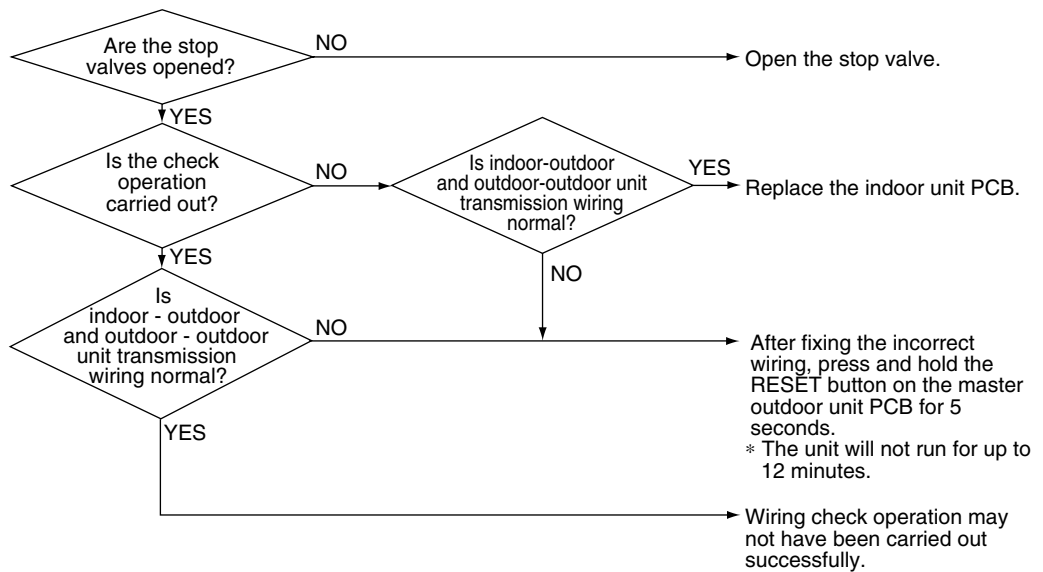

2.41 System Error, Refrigerant System Address Undefined

Remote
Controller
Display



Applicable
Models

All indoor models
RQYQ-PY1
RQEQ-PY1

Method of Error
Detection

Detect an indoor unit with no auto address setting.


Error Decision
Conditions


The error decision is made as soon as the abnormality aforementioned is detected.

Supposed
Causes

- Improper connection of transmission wiring between indoor-outdoor units and outdoor-outdoor units
- Defective indoor unit PCB
- Defective outdoor unit main PCB

Troubleshooting

 **Caution** Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

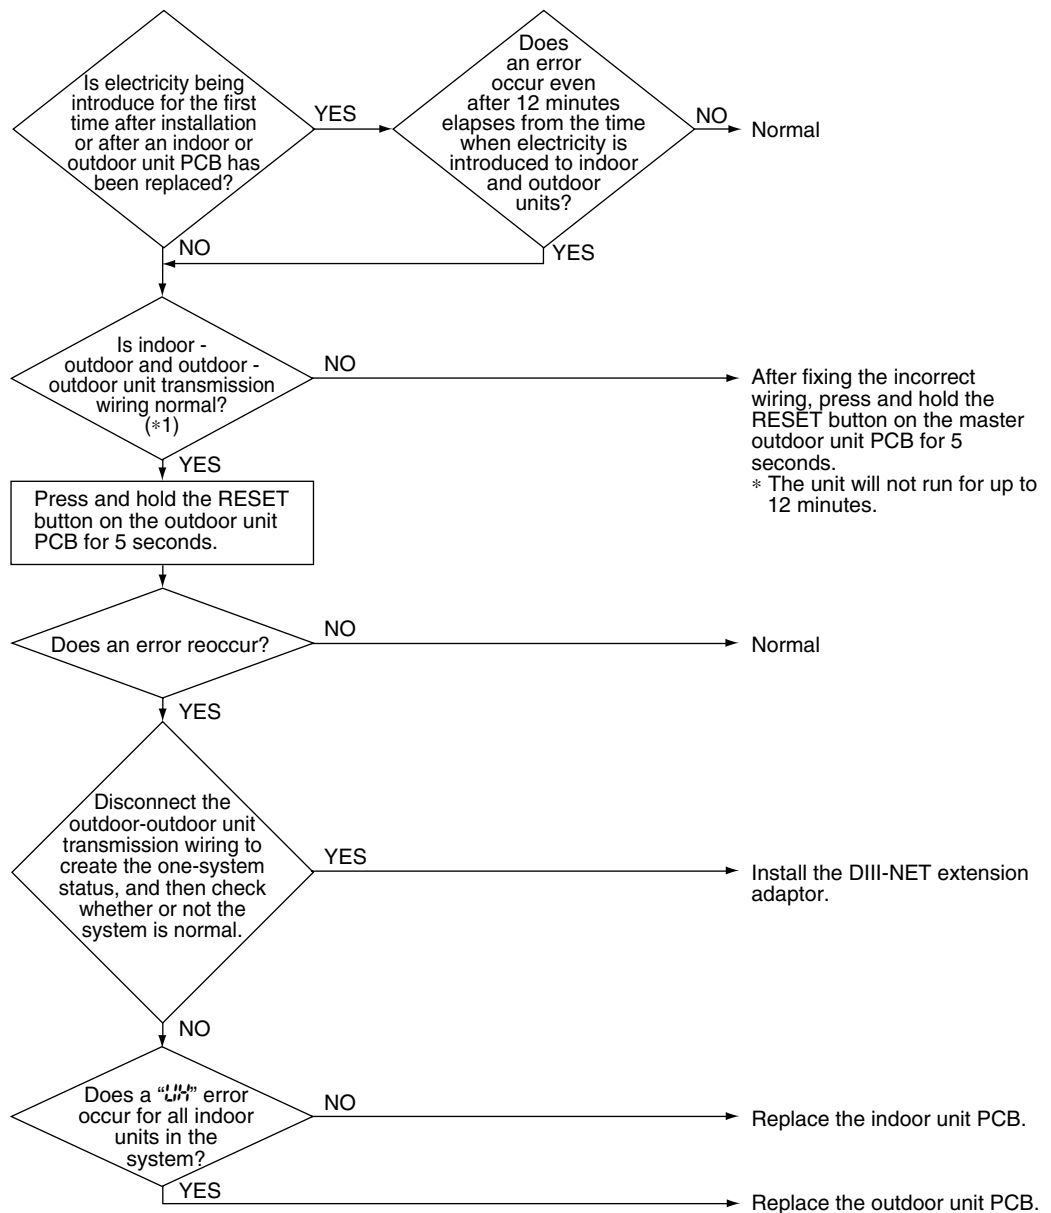

Note:

*1. Check the correct wiring “indoor-outdoor” and “outdoor-outdoor” by Installation Manual.


What is Auto Address?

This is the address automatically assigned to indoor units and outdoor units after initial power supply upon installation, or after executing rewiring (Keep pressing the **RESET** button for more than 4 seconds).

2.42 Check

CHECK 1 Check for causes of rise in high pressure

Referring to the Fault Tree Analysis (FTA) shown below, probe the defective points.

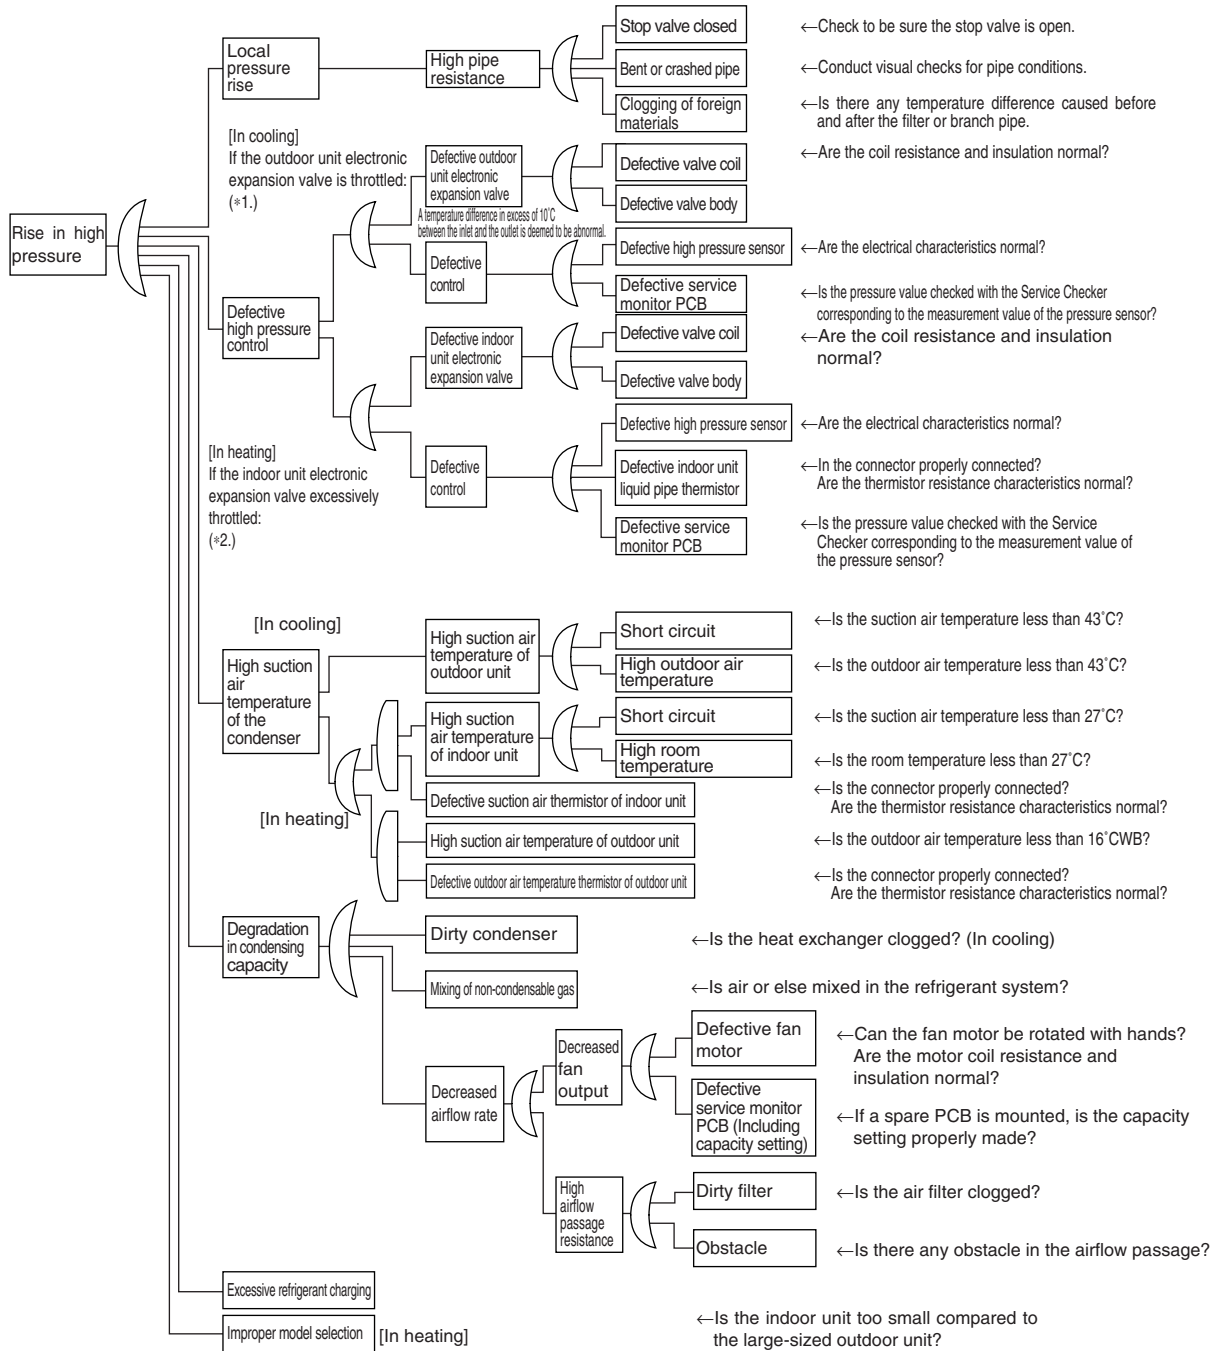


Note:

- *1: In cooling, it is normal if the outdoor unit electronic expansion valve (EVM) is fully open.
- *2: In heating, the indoor unit electronic expansion valve is used for “subcooling degree control”.

CHECK 2 Check for causes of drop in low pressure

Referring to the Fault Tree Analysis (FTA) shown below, probe the defective points.

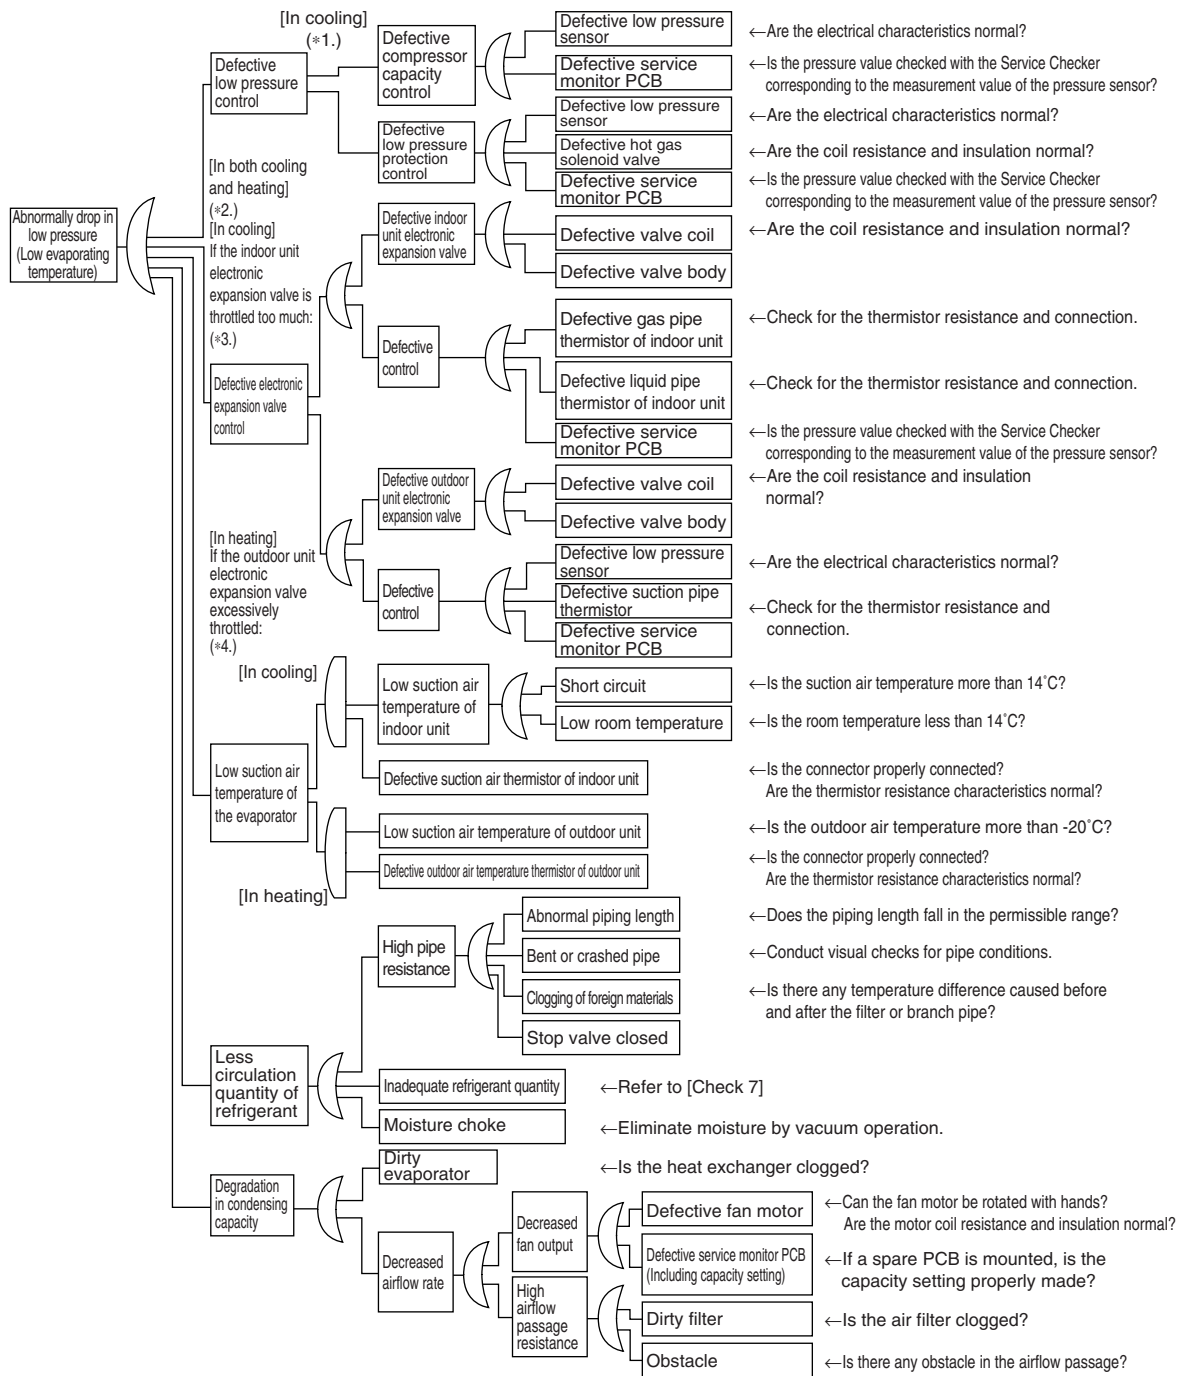


Note:

- *1: For details of compressor capacity control while in cooling, refer to “Compressor PI control”.
- *2: The “low pressure protection control” includes low pressure protection control and hot gas bypass control.
- *3: In cooling, the indoor unit electronic expansion valve is used for “superheated degree control”.
- *4: In heating, the outdoor unit electronic expansion valve (EVM) is used for “superheated degree control of outdoor unit heat exchanger”.

CHECK 3 Check the factors of overheat operation

Referring to the Fault Tree Analysis (FTA) shown below, probe the defective points.

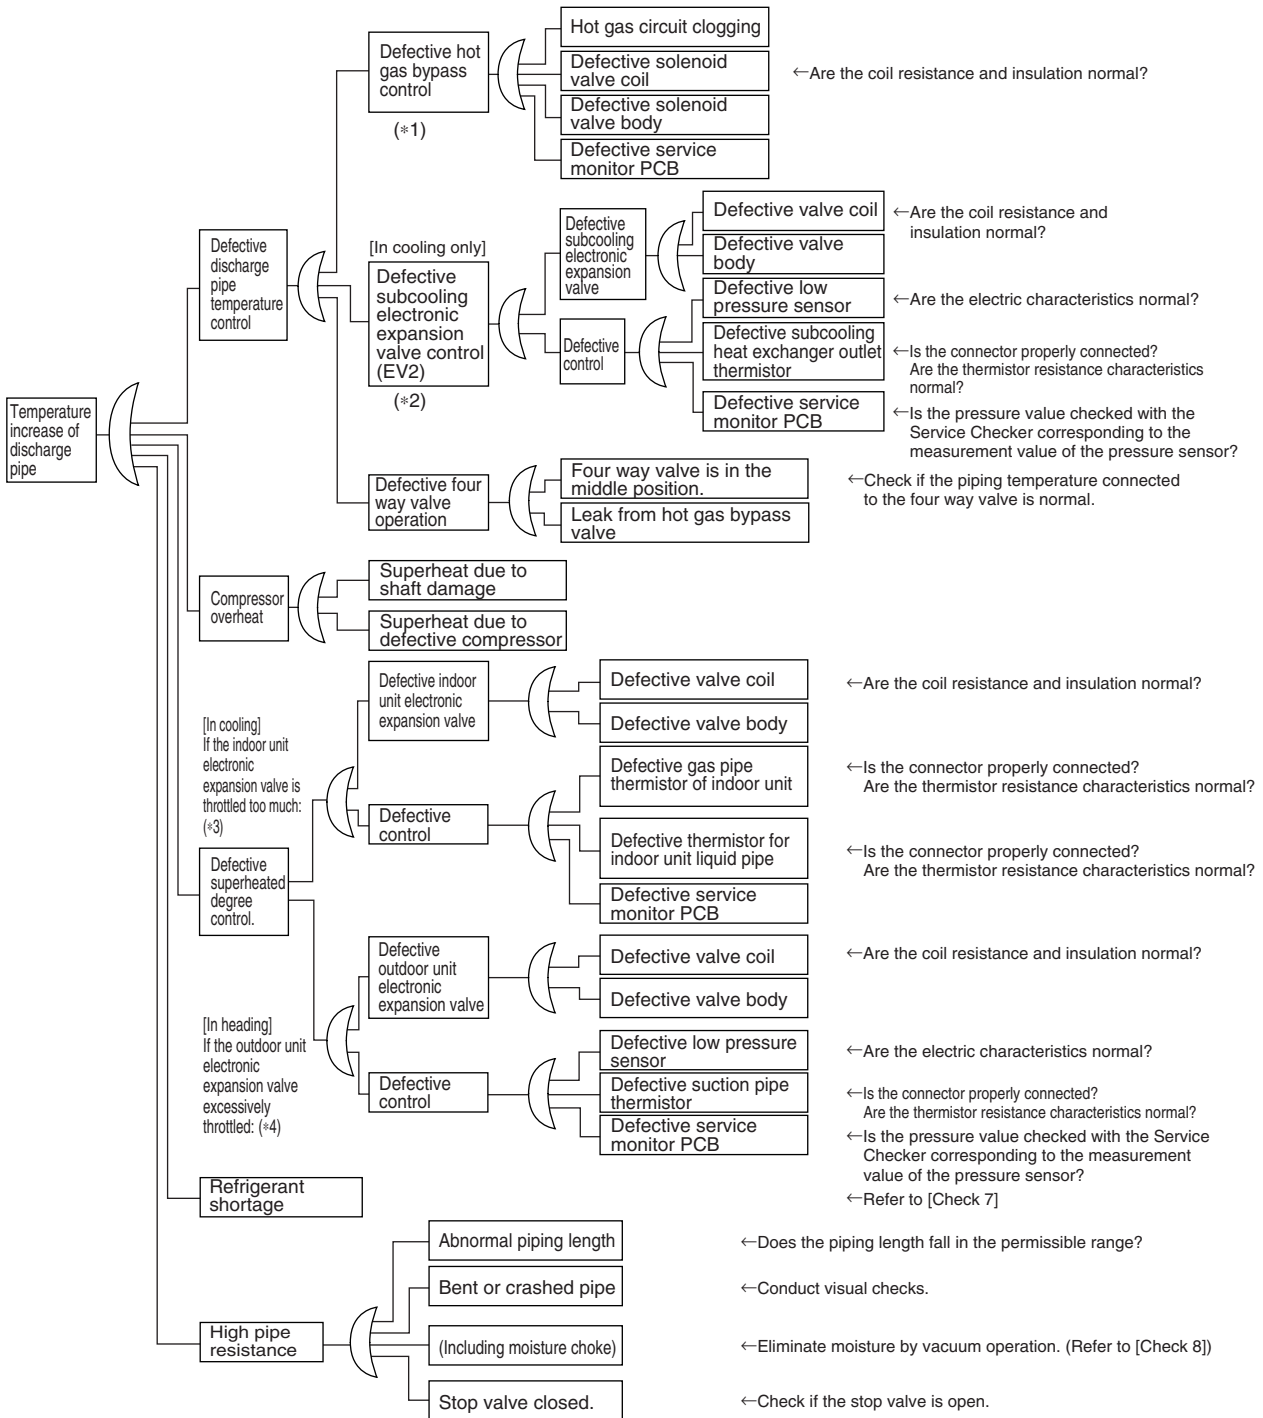

Note:

- *1: Refer to “Low pressure protection control” for hot gas bypass control.
- *2: Refer to “Subcooling electronic expansion valve control”.
- *3: “Superheating temperature control” in cooling is conducted by indoor unit electronic expansion valve.
- *4: Superheating temperature control in heating is conducted by outdoor unit electronic expansion valve (EVM).
- *5: Judgement criteria of superheat operation:
 - ① Suction gas superheated degree: 10°C and over.
 - ② Discharge gas superheated degree: 45°C and over, except immediately after compressor starts up or is running under drooping control.
 (Use the above values as a guide. Depending on the other conditions, the unit may be normal despite the values within the above range.)


CHECK 4 Power transistor check

Perform the following procedures prior to check.

- (1) Power OFF.
- (2) Remove all the wiring connected to the PCB where power transistors are mounted on.

[Preparation]

- Multiple tester

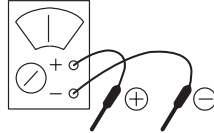

* Prepare the analog type of multiple tester. For the digital type of multiple tester, those with diode check function are available for the checking.

[Point of Measurement and Judgement Criteria]

- Turn OFF the power supply. Then, after a lapse of 10 minutes or more, make measurement of resistance.



When using the analog type of multiple tester, make measurement in resistance measurement mode in the x1kΩ range.

No.	Measuring point		Judgement Criteria	Remarks
	+	-		
1	P2	U	2 ~ 15kΩ	Due to condenser charge and so on, resistance measurement may require some time.
2	P2	V		
3	P2	W		
4	U	P2	15kΩ and more (including ∞)	
5	V	P2		
6	W	P2		
7	N3	U	2 ~ 15kΩ	
8	N3	V		
9	N3	W		
10	U	N3	2 ~ 15kΩ	
11	V	N3		
12	W	N3		

When using the digital type of multiple tester, make measurement in diode check mode (→|←).


No.	Measuring point		Judgement Criteria	Remarks
	+	-		
1	P2	U	1.2V and more	Due to condenser charge and so on, resistance measurement may require some time.
2	P2	V		
3	P2	W		
4	U	P2	0.3 ~ 0.7V	
5	V	P2		
6	W	P2		
7	N3	U	1.2V and more	
8	N3	V		
9	N3	W		
10	U	N3	1.2V and more	
11	V	N3		
12	W	N3		

[PCB and Circuit Diagram]

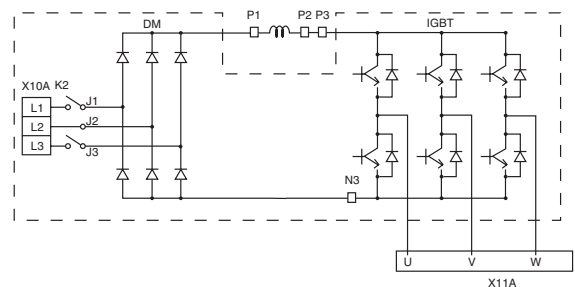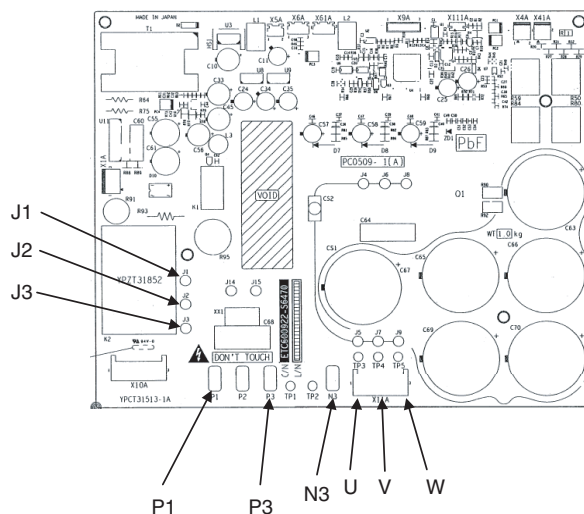

CHECK 5 Check for causes of wet operation.

Referring to the Fault Tree Analysis (FTA) shown below, probe the defective points.

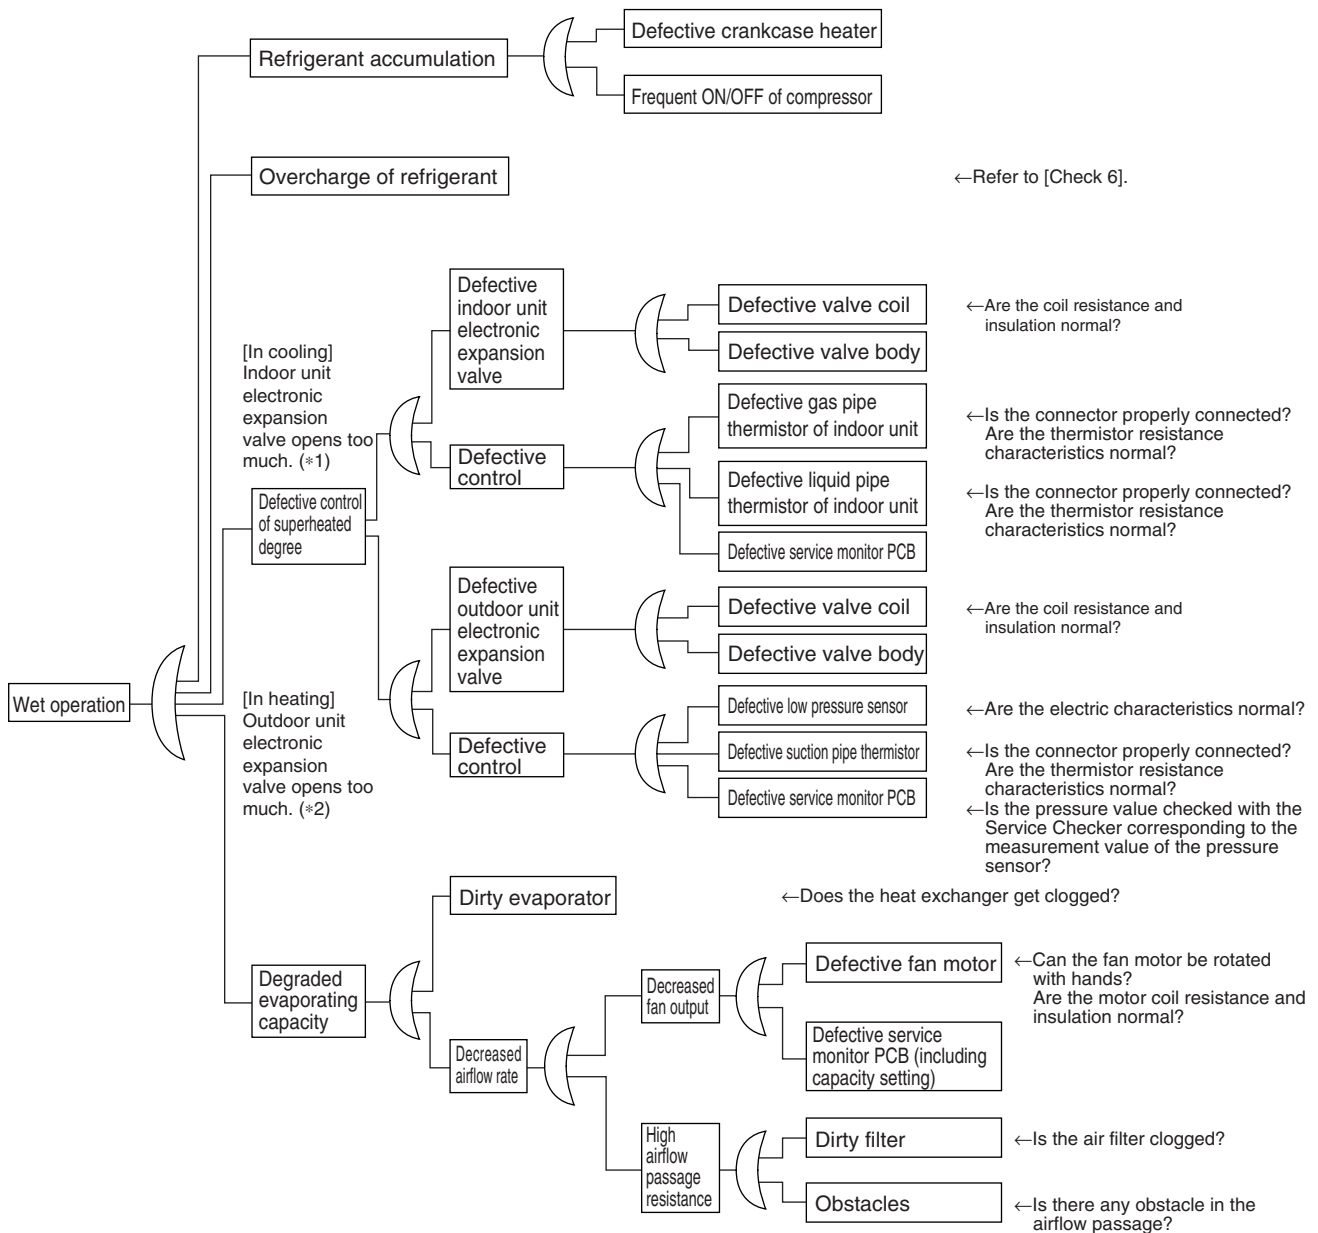**Note:**

*1: "Superheating temperature control" in cooling is conducted by indoor unit electronic expansion valve.

*2: Superheating temperature control in heating is conducted by outdoor unit electronic expansion valve (EVM).

*3: Guideline of superheated degree to judge as wet operation

① Suction gas superheated degree: Not more than 3°C; ② Discharge gas superheated degree: Not more than 15°C, except immediately after compressor starts up or is running under drooping control.


(Use the above values as a guide. Depending on the other conditions, the unit may be normal despite the values within the above range.)

CHECK 6 Check for overcharge of refrigerant.

In case of VRV Systems, the only way to judge as the overcharge of refrigerant is with operating conditions due to the relationship to pressure control and electronic expansion valve control. As information for making a judgement, refer to the information below.

Diagnosis of overcharge of refrigerant

1. High pressure rises. Consequently, overload control is conducted to cause insufficient cooling capacity.
2. The superheated degree of suction gas lowers (or the wet operation is performed). Consequently, the compressor becomes lower in discharge pipe temperature despite of pressure loads.
3. The subcooled degree of condensate rises. Consequently, in heating, the temperature of discharge air through the subcooling section becomes lower.



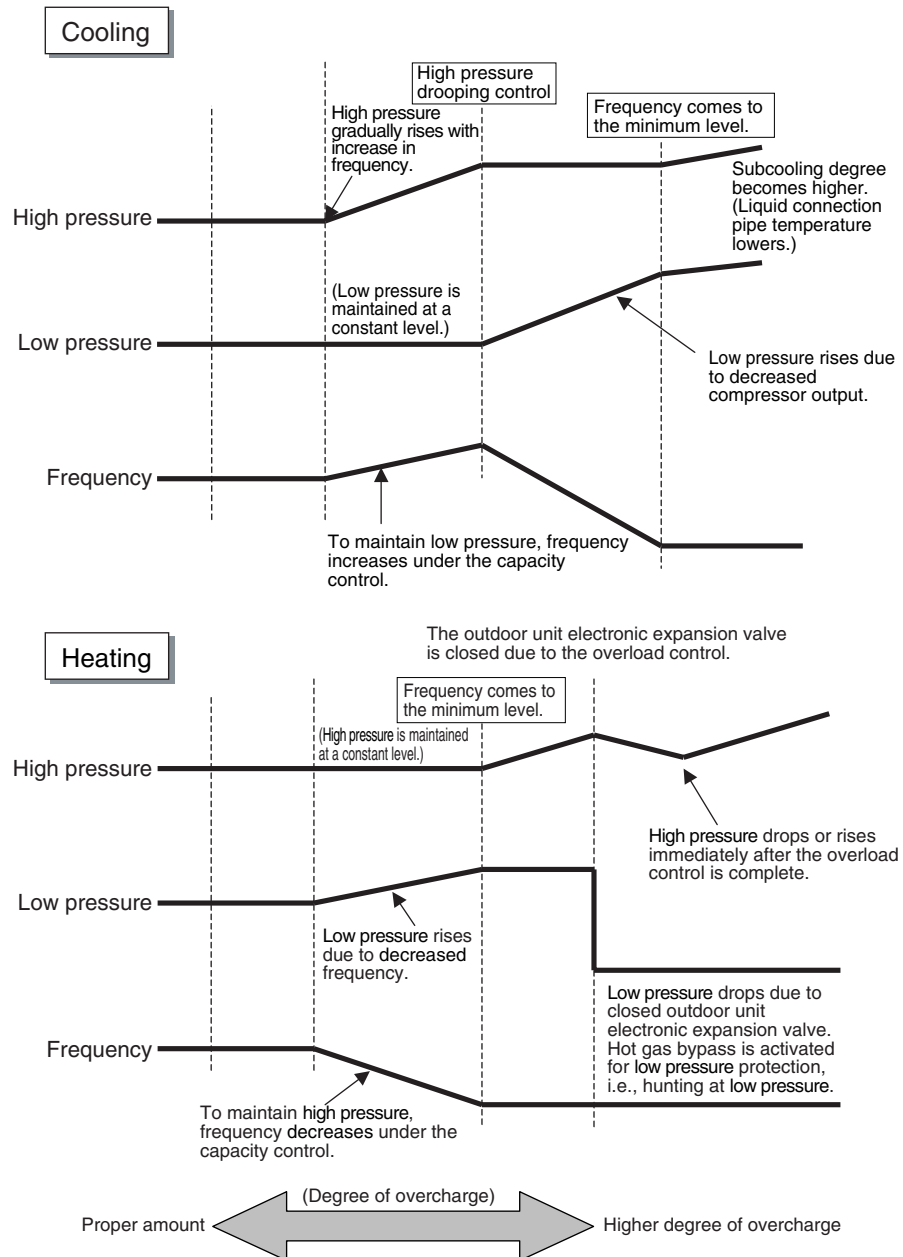


CHECK 7 Check for shortage of refrigerant.

In case of VRV Systems, the only way to judge as the shortage of refrigerant is with operating conditions due to the relationship to pressure control and electronic expansion valve control. As information for making a judgement, refer to the information below.

Diagnosis of shortage of refrigerant

1. The superheated degree of suction gas rises. Consequently, the compressor discharge gas temperature becomes higher.
2. The superheated degree of suction gas rises. Consequently, the electronic expansion valve turns open.
3. Low pressure drops to cause the unit not to demonstrate cooling capacity (heating capacity).

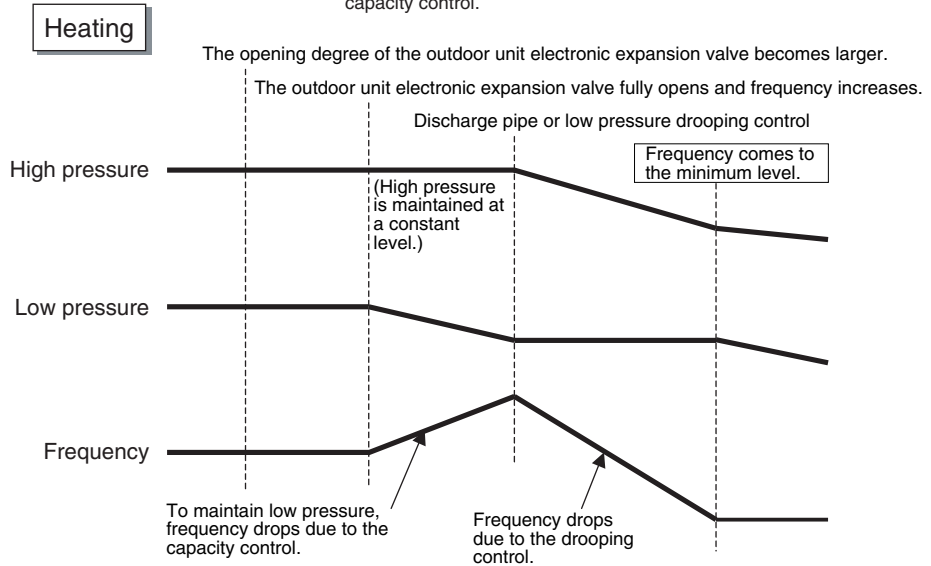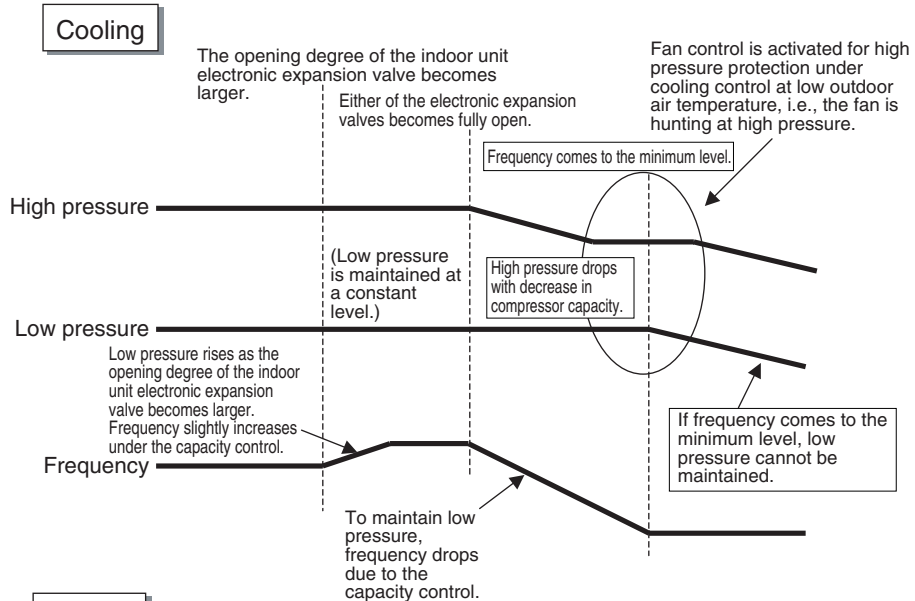

CHECK 8 **Vacuumping and dehydration procedure**

Conduct vacuumping and dehydration in the piping system following the procedure for <Normal vacuumping and dehydration> described below.

Furthermore, if moisture may get mixed in the piping system, follow the procedure for <Special vacuumping and dehydration> described below.

<Normal vacuumping and dehydration>

① Vacuumping and dehydration

- Use a vacuum pump that enables vacuumping up to -100.7kPa (5 torr, -755 mmHg).
- Connect manifold gauges to the service ports of liquid pipe and gas pipe and run the vacuum pump for a period of 2 or more hours to conduct evacuation to -100.7kPa or less.
- If the degree of vacuum does not reach -100.7kPa or less even though evacuation is conducted for a period of 2 hours, moisture will have entered the system or refrigerant leakage will have been caused. In this case, conduct evacuation for a period of another 1 hour.
- If the degree of vacuum does not reach -100.7kPa or less even though evacuation is conducted for a period of 3 hours, conduct the leak tests.

② Leaving in vacuum state

- Leave the compressor at the degree of vacuum of -100.7kPa or less for a period of 1 hour or more, and then check to be sure that the vacuum gauge reading does not rise. (If the reading rises, moisture may have remained in the system or refrigerant leakage may have been caused.)

③ Additional refrigerant charge

- Purge air from the manifold gauge connection hoses, and then charge a necessary amount of refrigerant.

<Special vacuumping and dehydration> - In case of moisture may get mixed in the piping*

① Vacuumping and dehydration

- Follow the same procedure as that for 1) Normal vacuumping and dehydration described above.

② Vacuum break

- Pressurize with nitrogen gas up to 0.05MPa.

③ Vacuumping and dehydration

- Conduct vacuumping and dehydration for a period of 1 hour or more. If the degree of vacuum does not reach -100.7kPa or less even though evacuation is conducted for a period of 2 hours or more, repeat vacuum break - vacuumping and dehydration.

④ Leaving in vacuum state

- Leave the compressor at the degree of vacuum of -100.7kPa or less for a period of 1 hour or more, and then check to be sure that the vacuum gauge reading does not rise.

⑤ Additional refrigerant charge


- Purge air from the manifold gauge connection hoses, and then charge a necessary amount of refrigerant.

* In case of construction during rainy reason, if dew condensation occurs in the piping due to extended construction period, or rainwater or else may enter the piping during construction work:


CHECK 9 List of inverter-related error codes

	Error Code	Name	Condition for determining error	Major cause
Compressor current	U5	Instantaneous overcurrent of inverter compressor	<ul style="list-style-type: none"> Inverter output current exceeds 32.3A even instantaneously. 	<ul style="list-style-type: none"> Liquid sealing Defective compressor Defective inverter PCB
	U8	Overcurrent of inverter compressor (Electronic thermal)	<ul style="list-style-type: none"> Compressor overload running An overcurrent of 19.0A or more continues for a period of 5 consecutive seconds or that of 16.1A or more continues for a period of 260 consecutive seconds. For 230V units: A current of 33.5A or more continues for a period of consecutive 5 seconds or that of 27.6A or more continues for a period of consecutive 260 seconds. The inverter loses synchronization. 	<ul style="list-style-type: none"> Back-flow of compressor liquid Sudden changes in loads Disconnected compressor wiring Defective inverter PCB
Protection device and others	U1	Defective inverter PCB	<ul style="list-style-type: none"> No output is given. 	<ul style="list-style-type: none"> Defective heavy current part of compressor
	U9	Defective startup of inverter compressor	<ul style="list-style-type: none"> The compressor motor fails to start up. 	<ul style="list-style-type: none"> Liquid sealing or defective compressor Excessive oil or refrigerant Defective inverter PCB
	U5	Inverter compressor lock	<ul style="list-style-type: none"> The compressor is in the locked status (does not rotate). 	<ul style="list-style-type: none"> Defective compressor
	U4	Radiation fin temperature rise	<ul style="list-style-type: none"> The radiation fin temperature reaches 87°C or more (while in operation). 	<ul style="list-style-type: none"> Defective fan Running in overload for an extended period of time Defective inverter PCB
	U2	Power supply voltage error	<ul style="list-style-type: none"> The inverter power supply voltage is high or low. 	<ul style="list-style-type: none"> Power supply error Defective inverter PCB
	P1	Imbalanced power supply	<ul style="list-style-type: none"> Power supply voltages get significantly imbalanced among 3 phases. 	<ul style="list-style-type: none"> Power supply error (imbalanced voltages of 2% or more) Defective inverter PCB Dead inverter PCB
	U1	Transmission error (between inverter PCB and service monitor PCB)	<ul style="list-style-type: none"> With the outdoor unit PCB, no communications are carried out across service monitor PCB - inverter PCB - fan PCB. 	<ul style="list-style-type: none"> Broken wire in communication line Defective service monitor PCB Defective inverter PCB Defective fan PCB
	P4	PCB mismatching	<ul style="list-style-type: none"> Any PCB of specification different from that of the product is connected. 	<ul style="list-style-type: none"> PCB of different specification mounted
P4	Defective radiation fin thermistor	<ul style="list-style-type: none"> The radiation fin thermistor gets short circuited or open. 	<ul style="list-style-type: none"> Defective radiation fin thermistor 	

CHECK 10 Concept of inverter-related error codes

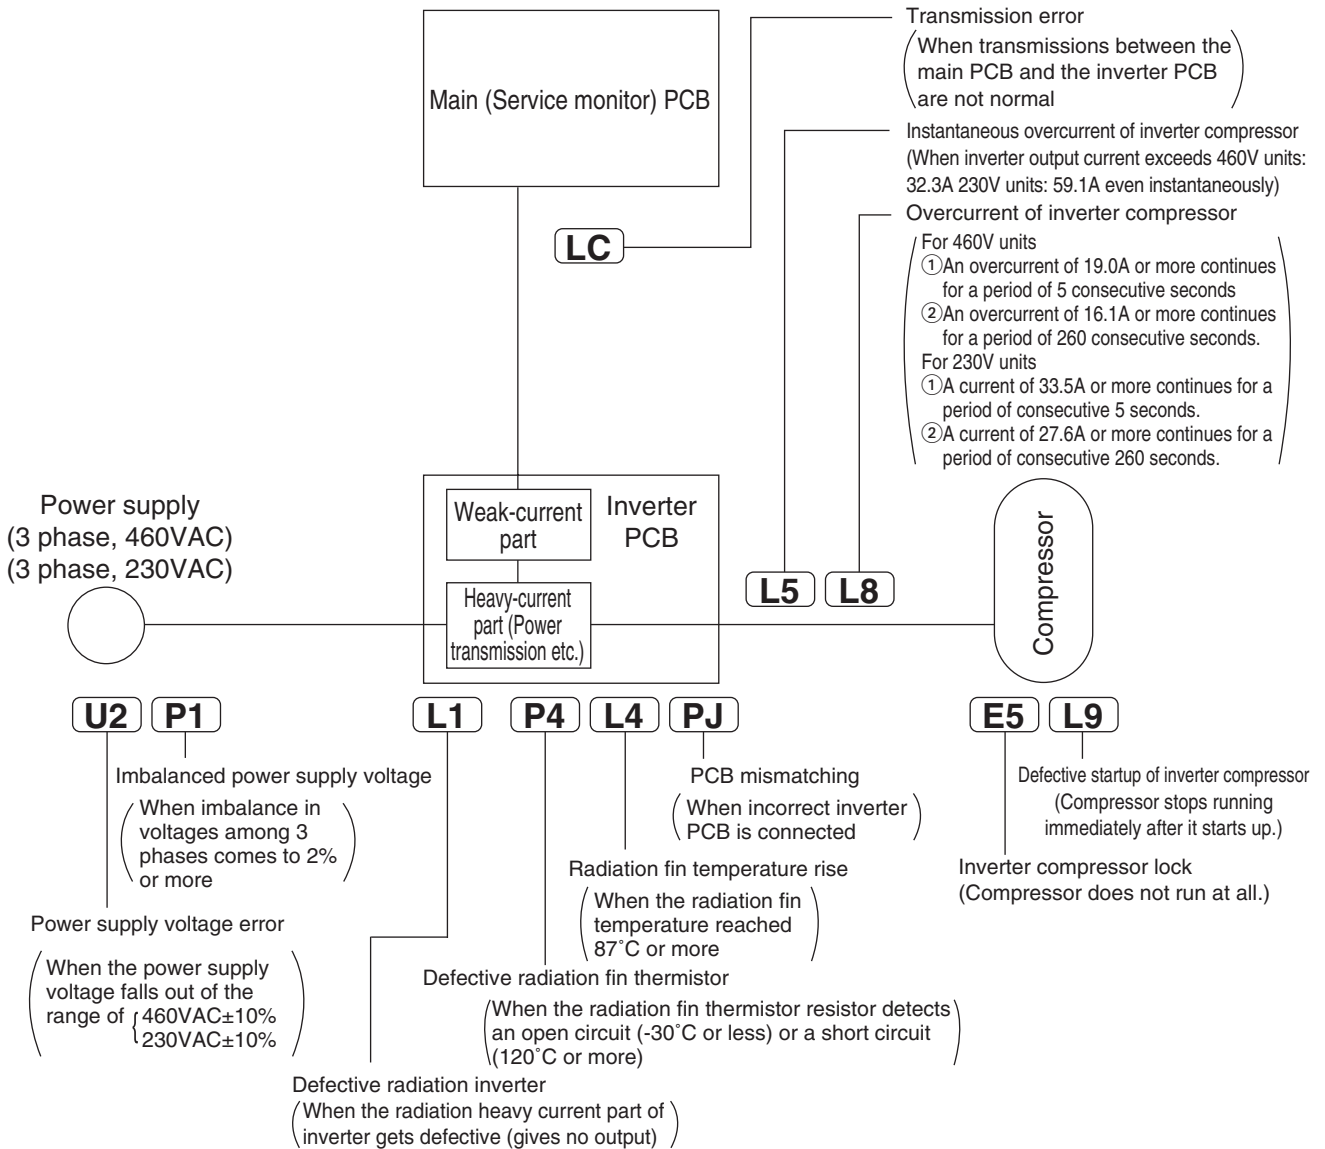

Error codes related to compressor current

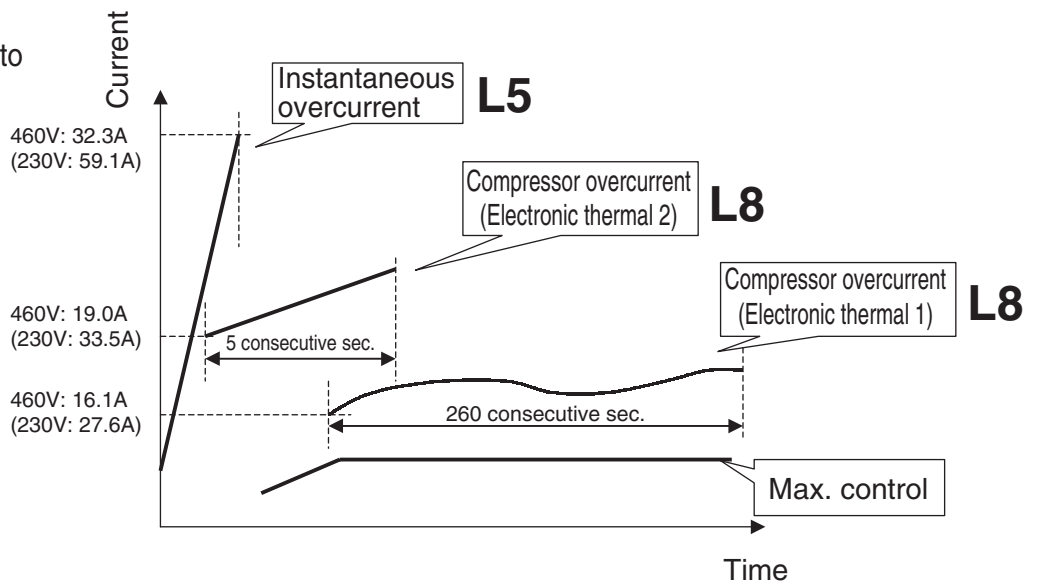

CHECK 11 Thermistor resistance / Temperature characteristics

Outdoor unit
For radiation fin

R1T

Outdoor unit

- For outdoor air R1T
- For heat exchanger liquid pipe R3T
- For heat exchanger gas pipe R4T
- For suction pipe R5T
- For heat exchanger deicer R6T
- For subcooling heat exchanger gas pipe R7T
- For subcooling heat exchanger liquid pipe R8T
- For liquid pipe R9T

Outdoor unit

For discharge pipe R2T

T°C	kΩ
-30	354.1
-25	259.7
-20	192.6
-15	144.2
-10	109.1
-5	83.25
0	64.10
5	49.70
10	38.85
15	30.61
20	24.29
25	19.41
30	15.61
35	12.64
40	10.30
45	8.439
50	6.954
55	5.761
60	4.797
65	4.014
70	3.375
75	2.851
80	2.418
85	2.060
90	1.762
95	1.513
100	1.304
105	1.128
110	0.9790
115	0.8527
120	0.7450
125	0.6530
130	0.5741

3PA61998L (AD92A057)

T°C	kΩ
-30	361.7719
-25	265.4704
-20	196.9198
-15	147.5687
-10	111.6578
-5	85.2610
0	65.6705
5	50.9947
10	39.9149
15	31.4796
20	25.0060
25	20.0000
30	16.1008
35	13.0426
40	10.6281
45	8.7097
50	7.1764
55	5.9407
60	4.9439
65	4.1352
70	3.4757
75	2.9349
80	2.4894
85	2.1205
90	1.8138
95	1.5575
100	1.3425
105	1.1614

3SA48001 (AD87A001J)

T°C	kΩ
-30	3257.371
-25	2429.222
-20	1827.883
-15	1387.099
-10	1061.098
-5	817.9329
0	635.0831
5	496.5712
10	391.0070
15	309.9511
20	247.2696
25	198.4674
30	160.2244
35	130.0697
40	106.1517
45	87.0725
50	71.7703
55	59.4735
60	49.5180
65	41.4168
70	34.7923
75	29.3499
80	24.8586
85	21.1360
90	18.0377
95	15.4487
100	13.2768
105	11.4395
110	9.8902
115	8.5788
120	7.4650
125	6.5156
130	5.7038
135	5.0073
140	4.4080
145	3.8907
150	3.4429

3SA48006 (AD87A001J)

CHECK 12 Pressure sensor

$$P_H = 1.38V_H - 0.69$$

$$P_L = 0.57V_L - 0.28$$

P_H : High pressure (MPa)


P_L : Low pressure (MPa)

V_H : Output Voltage [High Side] V_{DC}

V_L : Output Voltage [Low Side] V_{DC}

Detected Pressure

P_H, P_L
(kg/cm^2) MPa

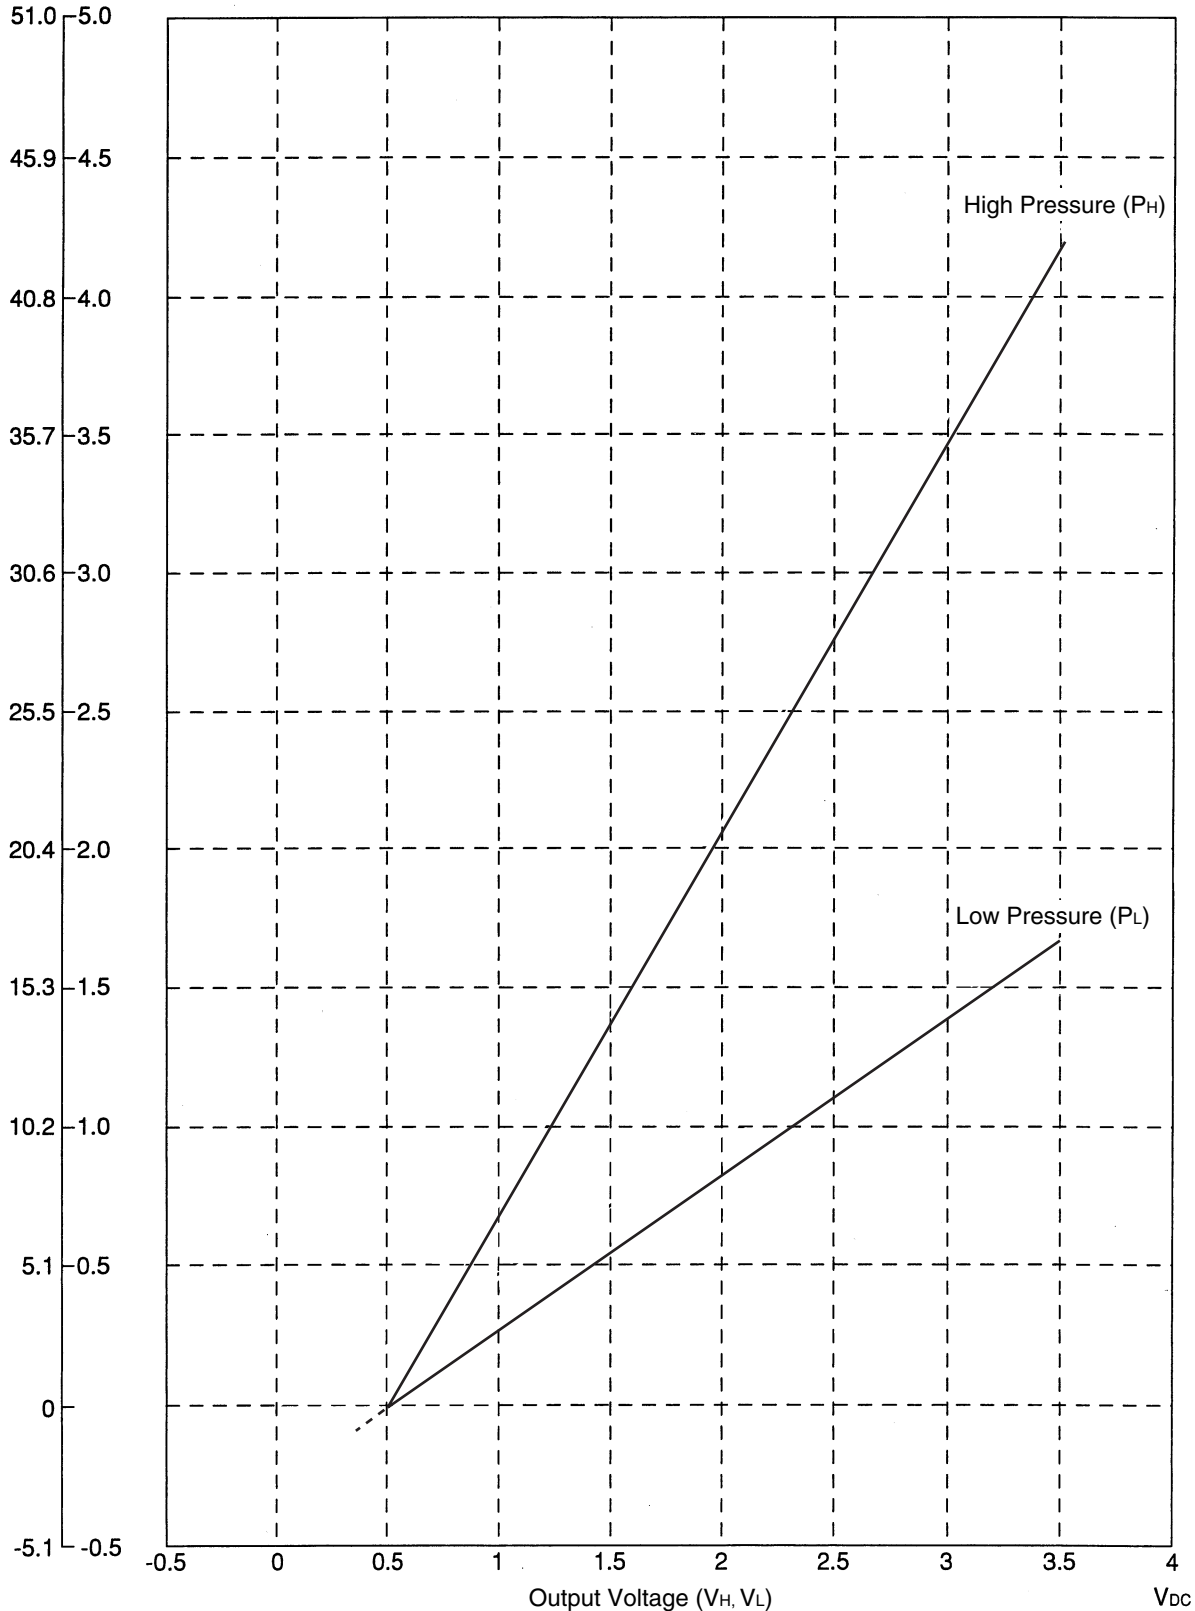

CHECK 13 Broken wire check of the connecting wires

1. Procedure for checking outdoor-outdoor unit transmission wiring for broken wires

On the system shown below, turn OFF the power supply to all equipment, short circuit between the outdoor-outdoor unit terminal F1 and F2 in the "Outdoor Unit A" that is farthest from the centralized remote controller, and then conduct continuity checks between the transmission wiring terminal blocks F1 and F2 of the centralized remote controller using a multiple meter. If there is continuity between the said terminal blocks, the outdoor-outdoor unit transmission wiring has no broken wires in it.

If there is no continuity, the transmission wiring may have broken wires. With the outdoor-outdoor unit terminal of the "Outdoor Unit A" short circuited, conduct continuity checks between the transmission wiring terminal blocks F1 and F2 of the unified ON/OFF controller. If there is no continuity as well, conduct continuity checks between the outdoor-outdoor unit terminal of the "Outdoor Unit E", between the outdoor-outdoor unit terminal of the "Outdoor Unit D", between the outdoor-outdoor unit terminal of the "Outdoor Unit C", ... in the order described, thus identifying the place with continuity.


If the place with continuity can be identified, there may be broken wires in places before the said place with continuity.

2. Procedure for checking indoor-outdoor unit transmission wiring for broken wires (for checking the indoor-outdoor unit transmission wiring of the "Outdoor Unit C" for broken wires)

Turn OFF the power supply to all equipment, short circuit between the indoor-outdoor unit terminal F1 and F2 in the "Outdoor Unit C, and then conduct continuity checks between the transmission wirings F1 and F2 of the "Indoor Unit a" that is farthest from the "Outdoor Unit C" using a multiple meter. If there is continuity between the said transmission wirings, the indoor-outdoor unit transmission wiring has no broken wires in it.

If there is no continuity, the transmission wiring may have broken wires. With the indoor-outdoor unit terminal of the "Outdoor Unit C" short circuited, identify the place with continuity in the transmission wiring of the "Indoor Unit b", transmission wiring of the "Indoor Unit c", and transmission wiring of the "Indoor Unit d" in the order described.

If the place with continuity can be identified, there may be broken wires in places before the said place with continuity.

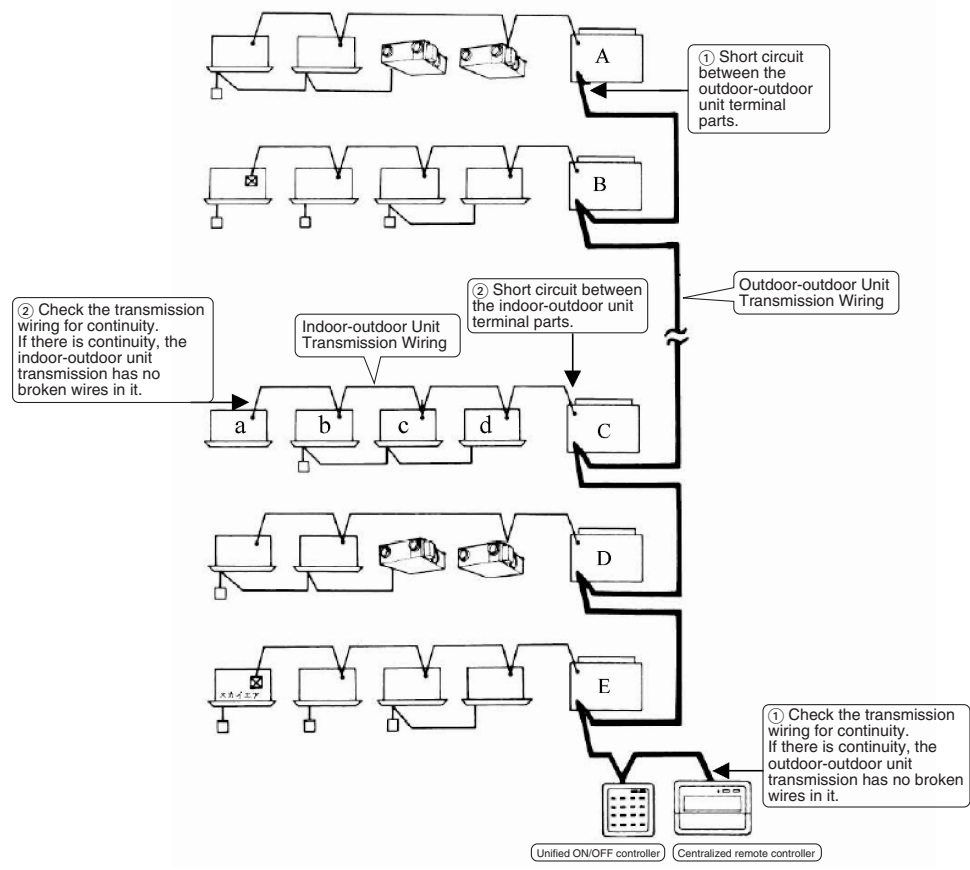

CHECK 14 Master unit centralized connector setting table

The master unit centralized setting connector (CN1/X1A) is mounted at the factory.

- To independently use a single unit of the intelligent Touch Controller or a single unit of the centralized remote controller, do not dismount the master unit centralized setting connector (i.e., use the connector with the factory setting unchanged).
- To independently use the schedule timer, insert an independent-use setting connector. No independent-use setting connector has been mounted at the factory. Insert the connector, which is attached to the casing of the master unit, in the PCB (CN1/X1A). (Independent-use connector = Master unit centralized setting connector)
- To use 2 or more centralized control equipment in combination, make settings according to the table shown below.

Pattern	Centralized control equipment connection pattern				Setting of master unit centralized setting connector (*2)			
	intelligent Touch Controller	Centralized remote controller	Unified ON/OFF controller	Schedule timer	intelligent Touch Controller	Centralized remote controller	Unified ON/OFF controller	Schedule timer
①	1 to 2 units	/	/	× (*1)	Only a single unit: "Provided", Others: "Not provided"	/	/	/
②	1 unit	1 unit	/	× (*1)	Provided	Not provided	/	/
③				× (*1)				
④	1 to 2 units	/	1 to 8 units	× (*1)	Only a single unit: "Provided", Others: "Not provided"	/	All "Not provided"	/
⑤	/	1 to 4 units	/	/	/	Only a single unit: "Provided", Others: "Not provided"	/	/
⑥	/		1 to 16 units	1 unit	/		All "Not provided"	Not provided
⑦	/		/	/	/		/	/
⑧	/		/	1 unit	/		/	Not provided
⑨	/	/	/	/	/	/	Only a single unit: "Provided", Others: "Not provided"	/
⑩	/	/	1 to 16 units	1 unit	/	/	Only a single unit: "Provided", Others: "Not provided"	Not provided
⑪	/	/	/	1 unit	/	/	/	Provided

(*1) The intelligent Touch Controller and the schedule timer are not available for combined use.

(*2) The intelligent Touch Controller, centralized remote controller, and the unified ON/OFF controller have been set to "Provided with the master unit centralized setting connector" at the factory. The schedule timer has been set to "Not provided with the master unit centralized setting connector" at the factory, which is attached to the casing of the master unit.

CHECK 15 Master-slave unit setting table

Combination of intelligent Touch Controller and Centralized Remote Controller



*	#1		#2		#3		#4	
Pattern	1-00~4-15	Master/Slave	5-00~8-15	Master/Slave	1-00~4-15	Master/Slave	5-00~8-15	Master/Slave
①	CRC	Master	CRC	Master	CRC	Slave	CRC	Slave
②	CRC	Master	—	—	CRC	Slave	—	—
③	intelligent Touch Controller	Master	—	—	intelligent Touch Controller	Slave	—	—
④	CRC	Master	—	—	intelligent Touch Controller	Slave	—	—
⑤	intelligent Touch Controller	Master	—	—	CRC	Slave	—	—
⑥	CRC	Master	—	—	—	—	—	—
⑦	intelligent Touch Controller	Master	—	—	—	—	—	—

CRC: Centralized remote controller <DCS302CA61>

intelligent Touch Controller: <DCS601C51>


The patterns marked with "" have nothing to do with those described in the list of setting of master unit centralized setting connector.

CHECK 16

Check on connector of fan motor (Power supply cable)

(1) Turn OFF the power supply.

Measure the resistance between phases of U,V,W at the motor side connectors (3-core wire) to check that the values are balanced and there is no short circuiting, while connector or relay connector is disconnected.

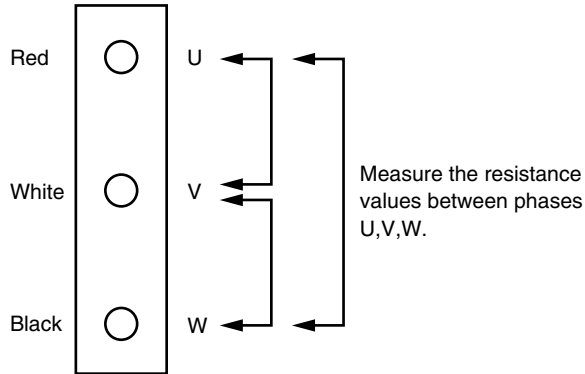


CHECK 17

(1) Turn OFF the power supply.

(2) Measure the resistance between Vcc and each phase of U,V,W, and GND and each phase at the motor side connectors (5-core wire) to check that the values are balanced within the range of $\pm 20\%$, while connector or relay connector is disconnected.

Furthermore, to use a multiple meter for measurement, connect the probe of negative pole to Vcc and that of positive pole to GND.

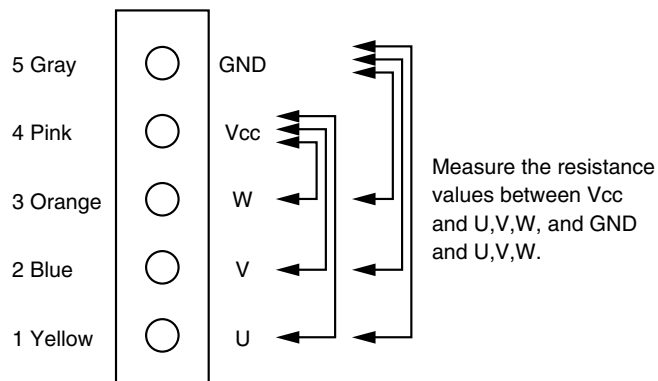

Part 7

Appendix


1. Piping Diagrams.....	196
1.1 Outdoor Unit.....	196
1.2 BS Unit.....	197
2. Wiring Diagrams for Reference.....	200
2.1 Outdoor Unit.....	200
2.2 BS Unit.....	201
3. Example of Connection (R-410A Type)	204

1. Piping Diagrams

1.1 Outdoor Unit

RQYQ140, 180PY1


RREQ140, 180, 212PY1

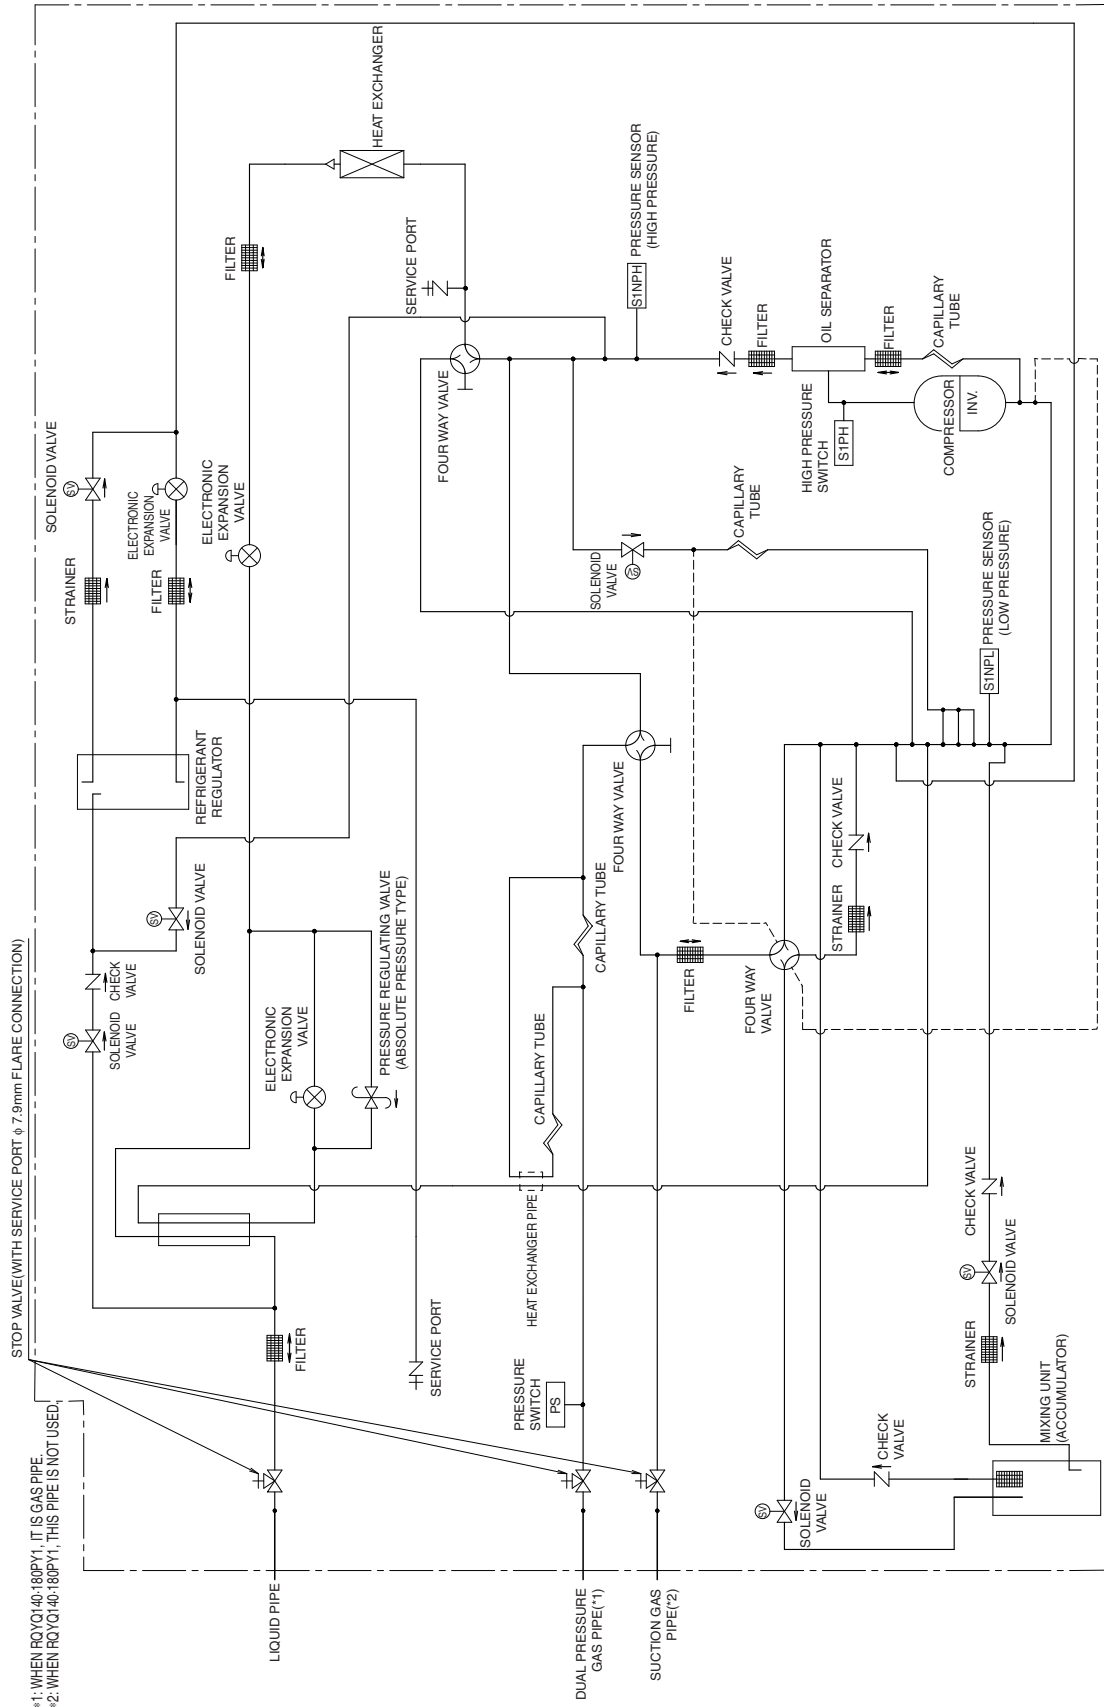

3D066010B


1.2 BS Unit

BSVQ100, 160, 250P

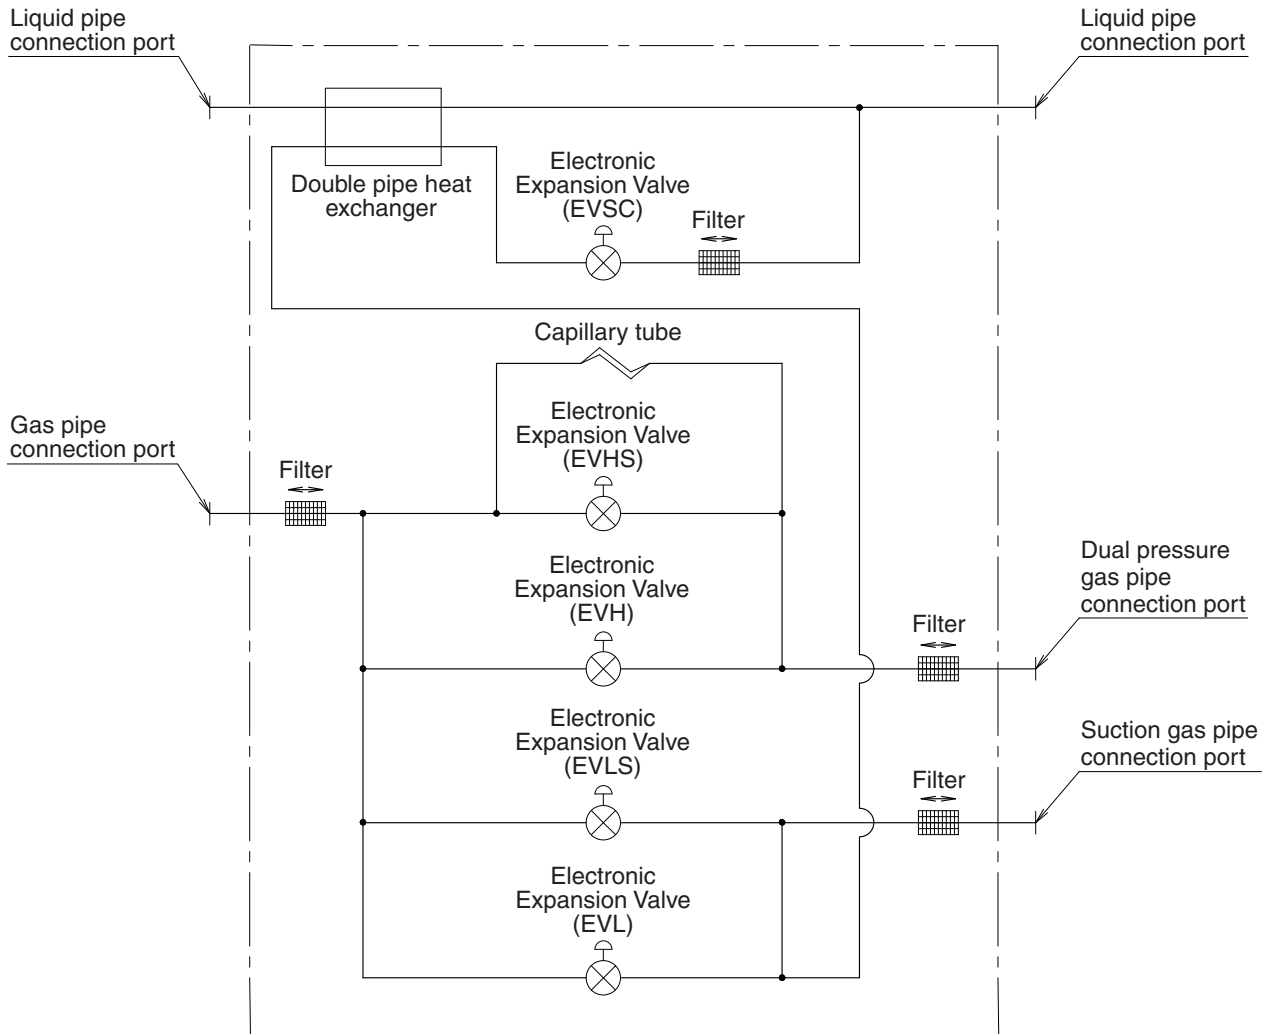


4D057985B

BSV4Q100P

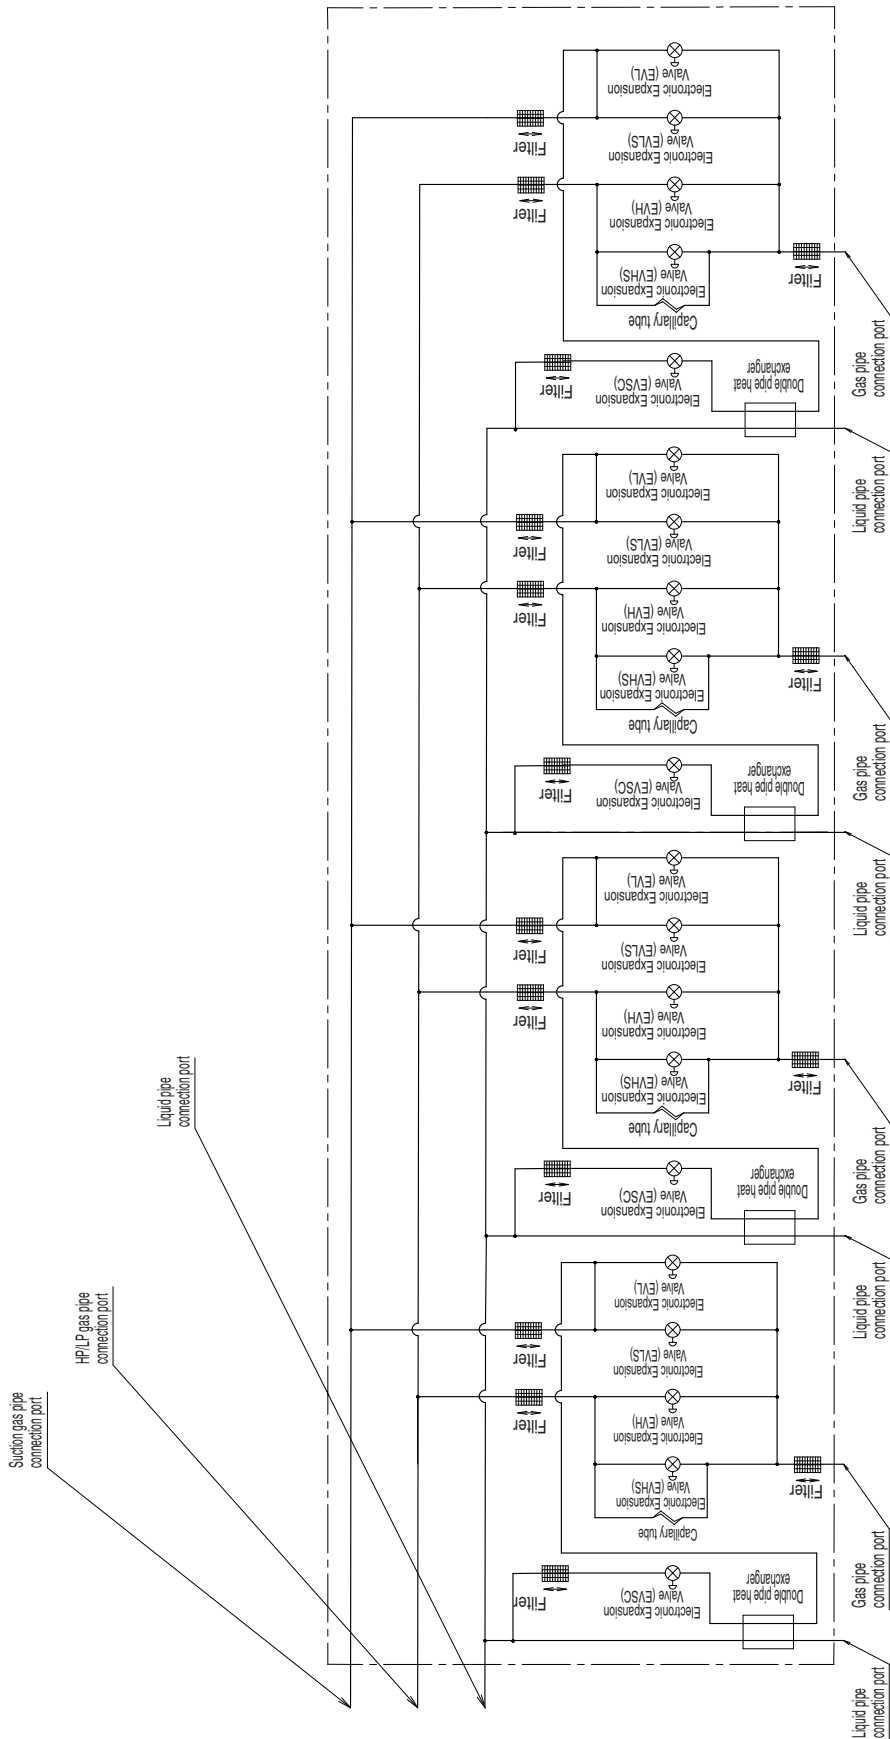

3D064148A


BSV6Q100P

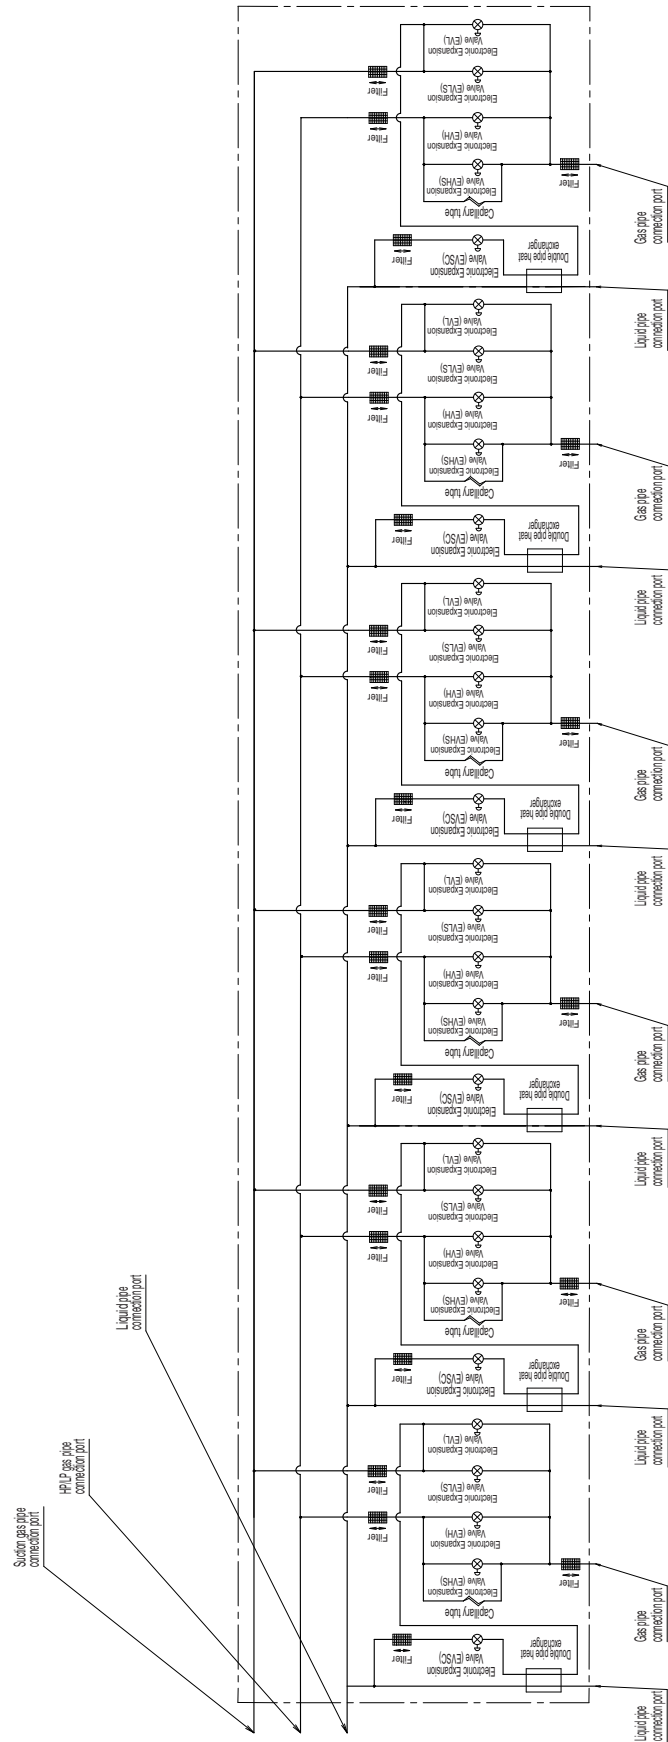

3D064149A


2.2 BS Unit

BSVQ100, 160, 250P

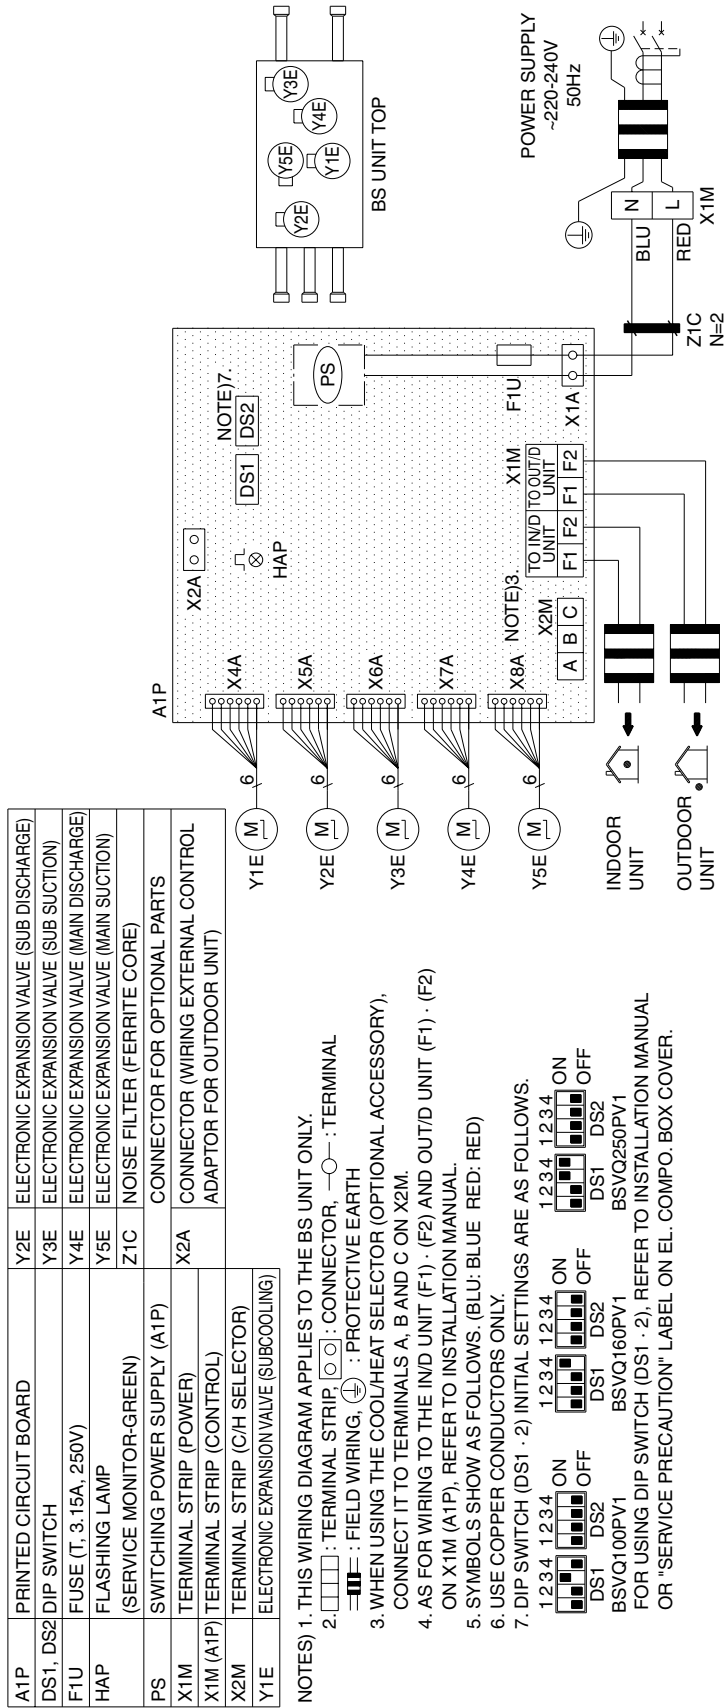

3D055928C

BSV6Q100P

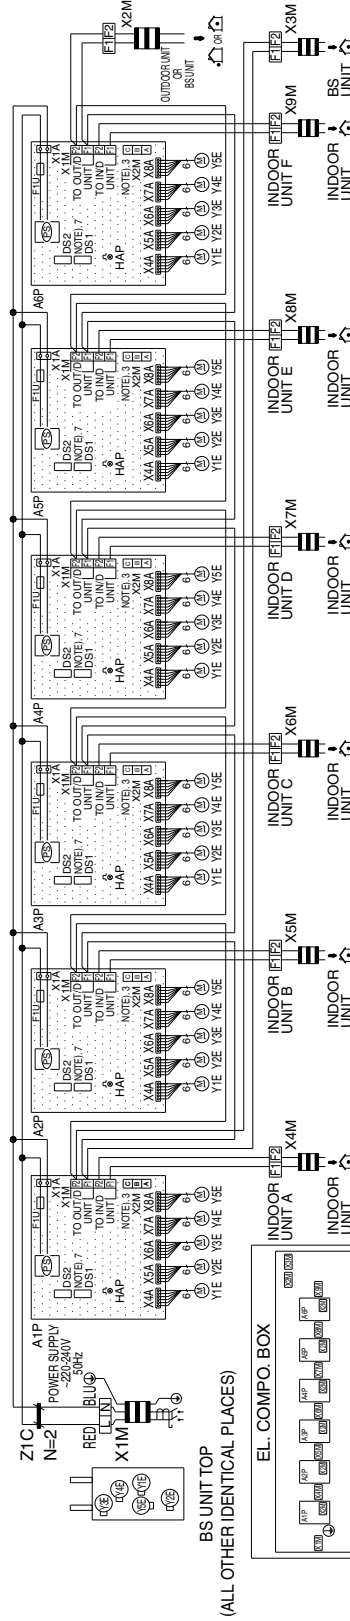

A1P (UNIT A)	PRINTED CIRCUIT BOARD (INDOOR UNIT A)	X1M (A1P-A6P)	TERMINAL STRIP (CONTROL)
A1P (UNIT B)	PRINTED CIRCUIT BOARD (INDOOR UNIT B)	X2M (A1P-A6P)	TERMINAL STRIP (C/H SELECTOR)
A1P (UNIT C)	PRINTED CIRCUIT BOARD (INDOOR UNIT C)	X1M	TERMINAL STRIP (POWER)
A1P (UNIT D)	PRINTED CIRCUIT BOARD (INDOOR UNIT D)	X2M-X9M	TERMINAL STRIP (CONTROL)
A1P (UNIT E)	PRINTED CIRCUIT BOARD (INDOOR UNIT E)	Y1E	ELECTRONIC EXPANSION VALVE (SUB-COOLING)
A1P (UNIT F)	PRINTED CIRCUIT BOARD (INDOOR UNIT F)	Y2E	ELECTRONIC EXPANSION VALVE (SUB-DISCHARGE)
DS1, DS2	DIP SWITCH	Y3E	ELECTRONIC EXPANSION VALVE (SUB SUCTION)
FTU	FUSE (T: 3.15A, 250V)	Y4E	ELECTRONIC EXPANSION VALVE (MAIN DISCHARGE)
HAP	FLASHING LAMP (SERVICE MONITOR-GREEN)	Y5E	ELECTRONIC EXPANSION VALVE (MAIN SUCTION)
PS	SWITCHING POWER SUPPLY (A1P-A6P)	Z1C	NOISE FILTER (FERRITE CORE)

- 6. USE COPPER CONDUCTORS ONLY.
- 7. DIP SWITCH (DS1 · 2) INITIAL SETTINGS ARE AS FOLLOWS.




FOR USING DIP SWITCH (DS1 · 2), REFER TO INSTALLATION MANUAL OR 'SERVICE PRECAUTION' LABEL ON EL. COMPO. BOX COVER.

- NOTES) 1. THIS WIRING DIAGRAM APPLIES TO THE BS UNIT ONLY.
- 2. [Symbol] : TERMINAL STRIP, [Symbol] : CONNECTOR
- 3. WHEN USING THE COOL/HEAT SELECTOR (OPTIONAL ACCESSORY), CONNECT IT TO TERMINALS A, B AND C ON X2M (A1P-A6P).
- 4. AS FOR WIRING TO THE X2M-X9M (CONTROL), REFER TO INSTALLATION MANUAL.
- 5. SYMBOLS SHOW AS FOLLOWS. (BL: BLUE RED: RED)

3. Example of Connection (R-410A Type)

■ Heat Pump series (RQ(C)YQ)

Example of connection (Connection of 8 indoor units) (*) "←" indicate the Outdoor unit multi connection piping kit (*) In case of multi outdoor system, re-read to the first Outdoor unit multi connection piping kit as seen from the indoor unit.	Example refrigerant branch using REFNET joint	Example refrigerant branch using REFNET joint and REFNET header	Example refrigerant branch using REFNET header																																
<p>Single outdoor system</p>	<p>Multi outdoor system</p>	<p>Example unit [B] : a + b + h ≤ 185m, unit [8] : a + i + k ≤ 120m Example unit [B] : a + b + c + d + e + f + g + p ≤ 120m Equivalent pipe length between outdoor (2) and indoor units ≤ 150m (assume equivalent pipe length of REFNET joint to be 0.5m, that of REFNET header to be 1m, calculation purposes) (See Note 1 - Next page) Total pipe length from outdoor unit (2) to all indoor units ≤ 300m</p>	<p>Example unit [B] : a + b + h ≤ 185m, unit [8] : a + i + k ≤ 120m Example unit [B] : a + b + c + d + e + f + g + p ≤ 120m Equivalent pipe length between outdoor (2) and indoor units ≤ 150m (assume equivalent pipe length of REFNET joint to be 0.5m, that of REFNET header to be 1m, calculation purposes) (See Note 1 - Next page) Total pipe length from outdoor unit (2) to all indoor units ≤ 300m</p>																																
<p>Actual pipe length</p> <p>Equivalent length</p> <p>Total extension length</p> <p>Actual pipe length</p> <p>Equivalent length</p> <p>Difference in height</p> <p>Difference in height</p> <p>Difference in height</p> <p>Actual pipe length</p>	<p>Pipe length between outdoor (2) and indoor units ≤ 120m Example unit [B] : a + b + c + d + e + f + g + p ≤ 120m Equivalent pipe length between outdoor (2) and indoor units ≤ 150m (assume equivalent pipe length of REFNET joint to be 0.5m, that of REFNET header to be 1m, calculation purposes) (See Note 1 - Next page) Total pipe length from outdoor unit (2) to all indoor units ≤ 300m</p> <p>Pipe length between outdoor unit and outdoor unit multi connection piping kit ≤ 10m, equivalent length between outdoor unit and outdoor unit multi connection piping kit ≤ 13m Difference in height between outdoor and indoor units (H1) ≤ 50m (≤ 40m if the outdoor unit is below) Difference in height between indoor and indoor units (H2) ≤ 15m Difference in height between outdoor unit (H3) ≤ 5m Pipe length from first refrigerant branch kit (either REFNET joint or REFNET header) to indoor unit ≤ 40m Example unit [B] : b + c + d + e + f + g + p ≤ 40m</p>	<p>Example unit [B] : j + k ≤ 40m</p> <p>How to select the REFNET header</p> <ul style="list-style-type: none"> Choose from the following table in accordance with the total capacity index of all the indoor units connected below the REFNET header. Note: 250 type indoor unit cannot be connected below the REFNET header. <table border="1"> <thead> <tr> <th>Indoor unit total capacity index</th> <th>Refrigerant branch kit name</th> </tr> </thead> <tbody> <tr> <td>< 200</td> <td>KHRP26M33H</td> </tr> <tr> <td>200 ≤ x < 290</td> <td>KHRP26M33H</td> </tr> <tr> <td>290 ≤ x < 640</td> <td>KHRP26M72H</td> </tr> <tr> <td>640 ≤</td> <td>KHRP26M73H + KHRP26M73HP</td> </tr> </tbody> </table> <p>How to select the Outdoor unit multi connection piping kit (This is required when the system is multi outdoor unit system.)</p> <ul style="list-style-type: none"> Choose from the following table in accordance with the number of outdoor units. <table border="1"> <thead> <tr> <th>Number of outdoor units</th> <th>Connection piping kit name</th> </tr> </thead> <tbody> <tr> <td>2 units</td> <td>BHFP22P36C</td> </tr> <tr> <td>3 units</td> <td>BHFP22P54C</td> </tr> </tbody> </table>	Indoor unit total capacity index	Refrigerant branch kit name	< 200	KHRP26M33H	200 ≤ x < 290	KHRP26M33H	290 ≤ x < 640	KHRP26M72H	640 ≤	KHRP26M73H + KHRP26M73HP	Number of outdoor units	Connection piping kit name	2 units	BHFP22P36C	3 units	BHFP22P54C	<p>Example unit [B] : j + k ≤ 40m</p> <p>How to select the REFNET header</p> <ul style="list-style-type: none"> Choose from the following table in accordance with the total capacity index of all the indoor units connected below the REFNET header. Note: 250 type indoor unit cannot be connected below the REFNET header. <table border="1"> <thead> <tr> <th>Indoor unit total capacity index</th> <th>Refrigerant branch kit name</th> </tr> </thead> <tbody> <tr> <td>< 200</td> <td>KHRP26M33H</td> </tr> <tr> <td>200 ≤ x < 290</td> <td>KHRP26M33H</td> </tr> <tr> <td>290 ≤ x < 640</td> <td>KHRP26M72H</td> </tr> <tr> <td>640 ≤</td> <td>KHRP26M73H + KHRP26M73HP</td> </tr> </tbody> </table> <p>How to select the Outdoor unit multi connection piping kit (This is required when the system is multi outdoor unit system.)</p> <ul style="list-style-type: none"> Choose from the following table in accordance with the number of outdoor units. <table border="1"> <thead> <tr> <th>Number of outdoor units</th> <th>Connection piping kit name</th> </tr> </thead> <tbody> <tr> <td>2 units</td> <td>BHFP22P36C</td> </tr> <tr> <td>3 units</td> <td>BHFP22P54C</td> </tr> </tbody> </table>	Indoor unit total capacity index	Refrigerant branch kit name	< 200	KHRP26M33H	200 ≤ x < 290	KHRP26M33H	290 ≤ x < 640	KHRP26M72H	640 ≤	KHRP26M73H + KHRP26M73HP	Number of outdoor units	Connection piping kit name	2 units	BHFP22P36C	3 units	BHFP22P54C
Indoor unit total capacity index	Refrigerant branch kit name																																		
< 200	KHRP26M33H																																		
200 ≤ x < 290	KHRP26M33H																																		
290 ≤ x < 640	KHRP26M72H																																		
640 ≤	KHRP26M73H + KHRP26M73HP																																		
Number of outdoor units	Connection piping kit name																																		
2 units	BHFP22P36C																																		
3 units	BHFP22P54C																																		
Indoor unit total capacity index	Refrigerant branch kit name																																		
< 200	KHRP26M33H																																		
200 ≤ x < 290	KHRP26M33H																																		
290 ≤ x < 640	KHRP26M72H																																		
640 ≤	KHRP26M73H + KHRP26M73HP																																		
Number of outdoor units	Connection piping kit name																																		
2 units	BHFP22P36C																																		
3 units	BHFP22P54C																																		
<p>Refrigerant branch kit selection</p> <p>Refrigerant branch kits can only be used with R-410A.</p> <p>△ When multi outdoor system are installed, be sure to use the special separately sold Outdoor unit multi connection piping kit. The table at right shows how to select the proper kit.</p>	<p>Example REFNET joint B: indoor units [7]+[8] Example REFNET header: indoor units [1]+[2]+[3]+[4]+[5]+[6] Example REFNET joint C: indoor units [3]+[4]+[5]+[6]+[7]+[8] Example REFNET header: indoor units [1]+[2]+[3]+[4]+[5]+[6]</p>	<p>Example REFNET joint B: indoor units [7]+[8] Example REFNET header: indoor units [1]+[2]+[3]+[4]+[5]+[6]</p>	<p>Example REFNET joint B: indoor units [7]+[8] Example REFNET header: indoor units [1]+[2]+[3]+[4]+[5]+[6]</p>																																

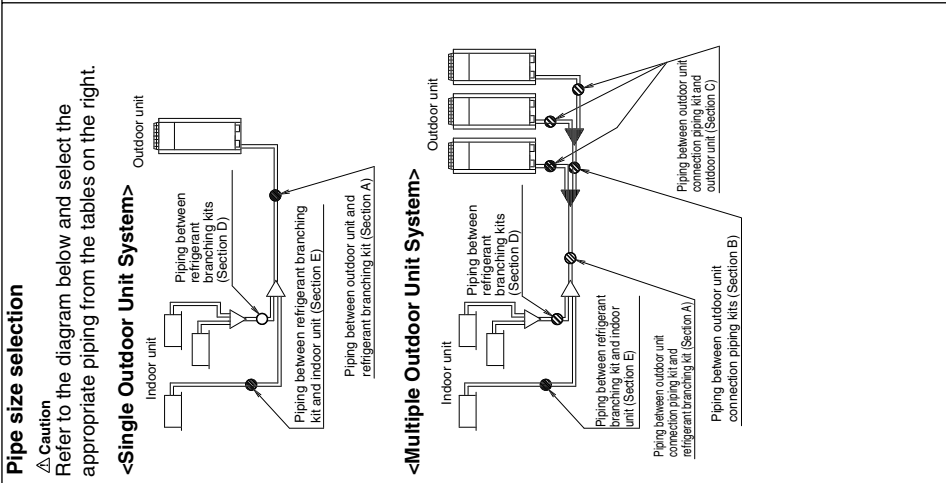

Piping between outdoor unit (*2) and refrigerant branch kit (part A)

- Choose from the following table in accordance with the outdoor unit system capacity type. (Note 1)

Outdoor capacity index	Suction gas size		Liquid pipe size (O.D.)	
	Standard size	Maximum size	Standard size	Maximum size
Q140	φ15.9	φ25.4	φ9.5	φ12.7
Q180	φ19.1	φ28.6	φ12.7	φ15.9
Q280	φ22.2	φ41.3	φ15.9	φ19.1
Q360	φ25.4			
Q460				
Q500	φ28.6			
Q540				

Piping between outdoor unit multi connection piping kits (part B)

- Choose from the following table in accordance with the total capacity of all the outdoor units connected upstream

Outdoor unit capacity type	Suction gas pipe		Liquid pipe	
	Standard size	Maximum size	Standard size	Maximum size
280	φ22.2	φ25.4	φ9.5	φ12.7
360				

Piping between outdoor unit multi connection piping kit and outdoor unit (part C)

- Choose from the following table in accordance with the capacity type of the outdoor unit connected

Outdoor capacity index	Gas pipe		Liquid pipe	
	Standard size	Maximum size	Standard size	Maximum size
Q140	φ15.9	φ19.1	φ9.5	
Q180				

Piping between refrigerant branch kits

- Choose from the following table in accordance with the total capacity index of all the indoor units connected below this. (part D)
- Do not let the connection piping exceed the main refrigerant piping size.

Indoor capacity index	Suction gas pipe		Liquid pipe	
	Standard size	Maximum size	Standard size	Maximum size
< 11.2 kW	φ15.9	φ19.1	φ9.5	φ12.7
11.2 kW ≤ x < 22.4 kW	φ22.2	φ25.4		
22.4 kW ≤ x < 33.0 kW	φ25.4	φ28.6	φ12.7	φ15.9
33.0 kW ≤ x < 37.0 kW	φ28.6			
37.0 kW ≤ x < 47.0 kW	φ34.9	φ39.1	φ15.9	φ19.1
47.0 kW ≤ x < 71.0 kW	φ41.3	φ45.5	φ19.1	φ22.2
71.0 kW ≤				

Piping between refrigerant branch kit and indoor unit

- Match to the size of the connection piping on the indoor unit. (part E)

Indoor capacity index	Suction gas pipe		Liquid pipe	
	Standard size	Maximum size	Standard size	Maximum size
Q20	φ12.7	φ15.9	φ6.4	φ9.5
Q25				
Q32				
Q40				
Q50				
Q63	φ15.9	φ19.1	φ9.5	φ12.7
Q80				
Q100				
Q125				
Q200	φ19.1	φ28.6		φ15.9
Q250	φ22.2			

How to calculate the additional refrigerant to be charged
 Additional refrigerant to be charged R (kg)
 (R should be rounded off in units of 0.1kg.)

$$R = \left(\left(\frac{\text{Total length (m) of liquid piping (size at } \phi 19.1)}{\times 0.26} \right) + \left(\frac{\text{Total length (m) of liquid piping (size at } \phi 6.4)}{\times 0.18} \right) + \left(\frac{\text{Total length (m) of liquid piping (size at } \phi 12.7)}{\times 0.12} \right) \right) \text{ kg/m}$$

$$+ \left(\frac{\text{Total length (m) of liquid piping (size at } \phi 9.5)}{\times 0.059} \right) + \left(\frac{\text{Total length (m) of liquid piping (size at } \phi 6.4)}{\times 0.022} \right) \text{ kg/m}$$

RQYQ140	2.4 kg	RQCYQ460	11.2 kg	A ≤ 100%	0 kg
RQYQ180	2.4 kg	RQCYQ500	11.2 kg	A > 100%	0.5 kg
RQCYQ280	6.8 kg	RQCYQ540	11.2 kg	(A: The ratio of total capacity index of connectable indoor units to outdoor capacity index (%))	
RQCYQ360	6.8 kg				

Example for refrigerant branch using REFINET joint and REFINET header

In case the outdoor unit is RQCYQ540PY1 type and the piping lengths are as at right

a: φ15.9 × 30m	d: φ9.5 × 20m	g: φ9.5 × 20m	j: φ6.4 × 10m	s: φ9.5 × 1m
b: φ15.9 × 10m	e: φ9.5 × 20m	h: φ9.5 × 20m	k: φ6.4 × 10m	t: φ9.5 × 1m
c: φ9.5 × 20m	f: φ9.5 × 20m	i: φ9.5 × 10m	r: φ9.5 × 1m	u: φ12.7 × 3m

Total capacity of indoor unit: 116%

$$R = \left(\frac{40 \times 0.18}{a, b} + \frac{3 \times 0.12}{u} + \frac{1.33 \times 0.059}{c-i, r-t} + \frac{20 \times 0.022}{j, k} + \frac{11.2}{RQCYQ540PY1} + \frac{0.5}{116\%} \right) = 5.147 \Rightarrow 5.1 \text{ kg}$$


***Note 1**

When the equivalent pipe length between outdoor unit multi connection piping kit and indoor units is 90m or more, the size of main pipes (both gas-side and liquid-side) must be increased to the following table.

Depending on the length of the piping, the capacity may drop, but even in such case it is able to increase the size of main pipes.

(Refer to figure below)


1. Outdoor unit
2. Main pipes
3. Increase
4. The first refrigerant branch kit
5. Indoor unit



Model name of outdoor unit system	Piping size (O.D.)	
	Gas pipe	Liquid pipe
RQYQ140	φ15.9 → φ19.1	φ9.5 → Not increased
RQYQ180	φ19.1 → φ22.2	φ9.5 → Not increased
RQCYQ280	φ22.2 → φ25.4	φ9.5 → φ12.7
RQCYQ360	φ25.4 → φ28.6	φ12.7 → φ15.9
RQCYQ460	φ28.6 → φ34.9	φ15.9 → φ19.1
RQCYQ500, 540		

Heat Recovery series (RQ(C)EQ)

<p>Example of connection (Connection of 8 indoor units)</p> <p>Outdoor unit side — 1 — BS Unit — 2 — Indoor unit side</p> <p>1 Piping from outdoor unit to BS unit — (Bold); 3 pipes { Suction gas pipe, HP/LP gas pipe, Liquid pipe }</p> <p>2 Piping from BS unit to indoor unit or indoor unit used as cooling only — (Thin); 2 pipes { (Suction) gas pipe, (Liquid) pipe }</p> <p>(*) "1" ← "2" Indicate the Outdoor unit multi connection piping kit. (*2) In case of multi outdoor system, re-read "outdoor unit" to "the first Outdoor unit multi connection piping kit" as seen from the indoor unit.</p>	<p>Multi outdoor system (RQCEQ)</p> <p>REFINET joint (A-G)</p> <p>BS Unit 1-6 : Indoor unit (Cool/Heat selection possible) 7, 8 : Indoor unit (Cooling only)</p>	<p>Branch with REFINET joint</p> <p>REFINET joint (A, B)</p> <p>BS Unit 1-4, 7, 8 : Indoor unit (Cool/Heat selection possible) 5, 6 : Indoor unit (Cooling only)</p>	<p>Branch with REFINET joint and header</p> <p>REFINET joint (A, B)</p> <p>BS Unit 1-4 : Indoor unit (Cool/Heat selection possible) 5, 6 : Indoor unit (Cooling only)</p>	<p>Branch with REFINET header</p> <p>REFINET header</p> <p>BS Unit 1-6 : Indoor unit (Cool/Heat selection possible) 7, 8 : Indoor unit (Cooling only)</p>																						
<p>Actual pipe length</p> <p>Between outdoor unit (*2) and indoor unit</p> <p>Between first outdoor unit multi connection piping kit and outdoor unit (in case of multi system)</p> <p>Allowable height difference</p> <p>Between outdoor and indoor units Between indoor and outdoor units Between outdoor and outdoor units</p> <p>Allowable length after the branch</p>	<p>Pipe length between outdoor unit (*2) and indoor unit $\leq 120m$ Example 1 : a + b + c + d + e + f $\leq 120m$ Example 2 : a + b + l $\leq 120m$, 3 : a + m + n + p $\leq 120m$ Example 4 : a + o $\leq 120m$</p> <p>Equivalent pipe length between outdoor unit (*2) and indoor unit $\leq 150m$ (Note 1) (Assume equivalent pipe length of REFINET joint to be 0.5m, that of REFINET header to be 1m, that of BS/VQ100, 160 to be 4m, that of BS/VQ250 to be 6m for calculation purposes) (In case of BS/V4Q100PV1 and BS/V6Q100PV1 (Combined type BS unit), calculate at 4m per 1 unit). Total piping length from outdoor unit (*2) to all indoor unit $\leq 300m$</p> <p>Actual pipe length from first outdoor unit multi connection piping kit to outdoor unit $\leq 10m$ Equivalent pipe length from first outdoor unit multi connection piping kit to outdoor unit $\leq 13m$</p> <p>Difference in height between outdoor unit and indoor unit (H1) $\leq 50m$ (Max 40m if the outdoor unit is below) Difference in height between adjacent indoor units (H2) $\leq 15m$ Difference in height between adjacent outdoor units (H3) $\leq 5m$</p> <p>Actual pipe length from first REFINET joint or REFINET header) to indoor unit $\leq 40m$ Example 5 : b + c + d + e + f $\leq 40m$ Example 6 : b + l $\leq 40m$, 8: m + n + p $\leq 40m$ Example 8 : o $\leq 40m$</p>	<p>Outdoor unit multi connection piping kit and Refrigerant branch kit selection</p> <p>How to select the REFINET header</p> <ul style="list-style-type: none"> Choose from the following table in accordance with the total capacity index of all the indoor units connected below the REFINET header. 250 type indoor unit can not be connected below the REFINET header. <table border="1"> <tr> <th>Indoor unit total capacity index</th> <th>Refrigerant branch kit name</th> </tr> <tr> <td>3 pipes</td> <td>2 pipes</td> </tr> <tr> <td>x < 200</td> <td>KHRP25M33H</td> </tr> <tr> <td>200 ≤ x < 290</td> <td>KHRP25M33H</td> </tr> <tr> <td>290 ≤ x < 640</td> <td>KHRP25M72H</td> </tr> <tr> <td>640 ≤ x</td> <td>KHRP25M72H+KHRP25M72HP</td> </tr> <tr> <td></td> <td>KHRP25M72H+KHRP25M72HP</td> </tr> <tr> <td></td> <td>KHRP25M72H+KHRP25M72HP</td> </tr> </table> <p>How to select the outdoor unit multi connection piping kit (This is required when the system is multi outdoor unit system.)</p> <ul style="list-style-type: none"> Choose from the following table in accordance with the number of outdoor units. <table border="1"> <tr> <th>Number of outdoor unit</th> <th>Connecting piping kit name</th> </tr> <tr> <td>2 units</td> <td>BHFP26P36C</td> </tr> <tr> <td>3 units</td> <td>BHFP26P36C</td> </tr> <tr> <td>4 units</td> <td>BHFP26P36C</td> </tr> </table>	Indoor unit total capacity index	Refrigerant branch kit name	3 pipes	2 pipes	x < 200	KHRP25M33H	200 ≤ x < 290	KHRP25M33H	290 ≤ x < 640	KHRP25M72H	640 ≤ x	KHRP25M72H+KHRP25M72HP		KHRP25M72H+KHRP25M72HP		KHRP25M72H+KHRP25M72HP	Number of outdoor unit	Connecting piping kit name	2 units	BHFP26P36C	3 units	BHFP26P36C	4 units	BHFP26P36C
Indoor unit total capacity index	Refrigerant branch kit name																									
3 pipes	2 pipes																									
x < 200	KHRP25M33H																									
200 ≤ x < 290	KHRP25M33H																									
290 ≤ x < 640	KHRP25M72H																									
640 ≤ x	KHRP25M72H+KHRP25M72HP																									
	KHRP25M72H+KHRP25M72HP																									
	KHRP25M72H+KHRP25M72HP																									
Number of outdoor unit	Connecting piping kit name																									
2 units	BHFP26P36C																									
3 units	BHFP26P36C																									
4 units	BHFP26P36C																									
<p>Actual pipe length</p> <p>Between outdoor unit (*2) and indoor unit</p> <p>Between first outdoor unit multi connection piping kit and outdoor unit (in case of multi system)</p> <p>Allowable height difference</p> <p>Between outdoor and indoor units Between indoor and outdoor units Between outdoor and outdoor units</p> <p>Allowable length after the branch</p>	<p>Pipe length between outdoor unit (*2) and indoor unit $\leq 120m$ Example 1 : a + b + c + d + e + f $\leq 120m$ Example 2 : a + b + l $\leq 120m$, 3 : a + m + n + p $\leq 120m$ Example 4 : a + o $\leq 120m$</p> <p>Equivalent pipe length between outdoor unit (*2) and indoor unit $\leq 150m$ (Note 1) (Assume equivalent pipe length of REFINET joint to be 0.5m, that of REFINET header to be 1m, that of BS/VQ100, 160 to be 4m, that of BS/VQ250 to be 6m for calculation purposes) (In case of BS/V4Q100PV1 and BS/V6Q100PV1 (Combined type BS unit), calculate at 4m per 1 unit). Total piping length from outdoor unit (*2) to all indoor unit $\leq 300m$</p> <p>Actual pipe length from first outdoor unit multi connection piping kit to outdoor unit $\leq 10m$ Equivalent pipe length from first outdoor unit multi connection piping kit to outdoor unit $\leq 13m$</p> <p>Difference in height between outdoor unit and indoor unit (H1) $\leq 50m$ (Max 40m if the outdoor unit is below) Difference in height between adjacent indoor units (H2) $\leq 15m$ Difference in height between adjacent outdoor units (H3) $\leq 5m$</p> <p>Actual pipe length from first REFINET joint or REFINET header) to indoor unit $\leq 40m$ Example 5 : b + c + d + e + f $\leq 40m$ Example 6 : b + l $\leq 40m$, 8: m + n + p $\leq 40m$ Example 8 : o $\leq 40m$</p>	<p>Outdoor unit multi connection piping kit and Refrigerant branch kit selection</p> <p>How to select the REFINET header</p> <ul style="list-style-type: none"> When using REFINET joint at the first branch counted from the outdoor unit side, choose from the following table in accordance with the outdoor unit capacity type. 250 type indoor unit can not be connected below the REFINET header. <table border="1"> <tr> <th>Outdoor unit capacity type</th> <th>Refrigerant branch kit name</th> </tr> <tr> <td>Q280 type</td> <td>KHRP25A33T</td> </tr> <tr> <td>Q360~712 type</td> <td>KHRP25A72T+KHRP25M72TP</td> </tr> <tr> <td>Q744 type ~</td> <td>KHRP25A73T+KHRP25M73TP</td> </tr> </table> <p>How to select the outdoor unit multi connection piping kit (This is required when the system is multi outdoor unit system.)</p> <ul style="list-style-type: none"> Choose from the following table in accordance with the number of outdoor units. <table border="1"> <tr> <th>Number of outdoor unit</th> <th>Connecting piping kit name</th> </tr> <tr> <td>2 pipes</td> <td>KHRP26A22T</td> </tr> <tr> <td>x < 200</td> <td>KHRP26A22T</td> </tr> <tr> <td>200 ≤ x < 290</td> <td>KHRP26A33T</td> </tr> <tr> <td>290 ≤ x < 640</td> <td>KHRP26A72T</td> </tr> <tr> <td>640 ≤ x</td> <td>KHRP26A73T+KHRP25M73TP</td> </tr> </table>	Outdoor unit capacity type	Refrigerant branch kit name	Q280 type	KHRP25A33T	Q360~712 type	KHRP25A72T+KHRP25M72TP	Q744 type ~	KHRP25A73T+KHRP25M73TP	Number of outdoor unit	Connecting piping kit name	2 pipes	KHRP26A22T	x < 200	KHRP26A22T	200 ≤ x < 290	KHRP26A33T	290 ≤ x < 640	KHRP26A72T	640 ≤ x	KHRP26A73T+KHRP25M73TP				
Outdoor unit capacity type	Refrigerant branch kit name																									
Q280 type	KHRP25A33T																									
Q360~712 type	KHRP25A72T+KHRP25M72TP																									
Q744 type ~	KHRP25A73T+KHRP25M73TP																									
Number of outdoor unit	Connecting piping kit name																									
2 pipes	KHRP26A22T																									
x < 200	KHRP26A22T																									
200 ≤ x < 290	KHRP26A33T																									
290 ≤ x < 640	KHRP26A72T																									
640 ≤ x	KHRP26A73T+KHRP25M73TP																									
<p>Example for indoor units connected downstream</p>	<p>Example REFINET joint B : indoor units 7 + 8 Example REFINET header : indoor units 1 + 2 + 3 + 4 + 5 + 6</p>	<p>Example REFINET joint C : indoor units 5 + 6 + 7 + 8</p>																								

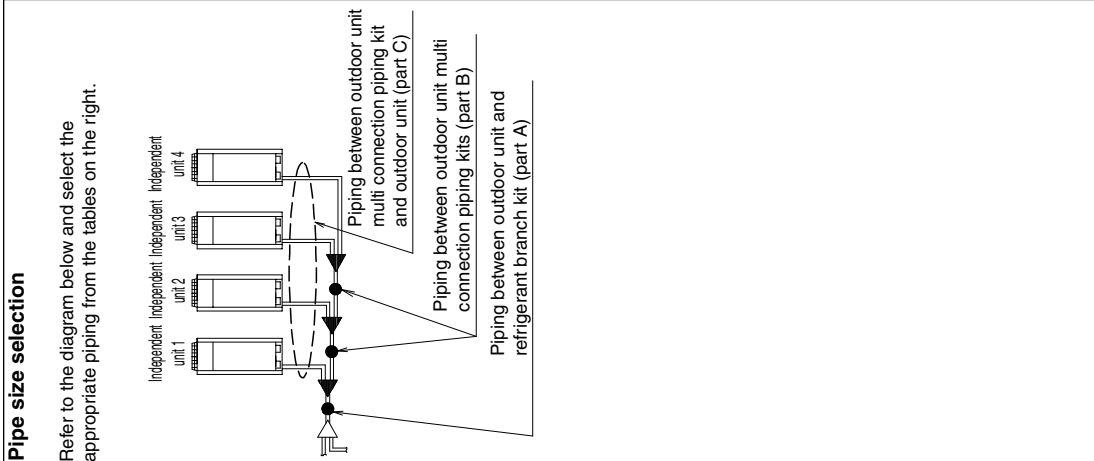

Piping between outdoor unit (2) and refrigerant branch kit (part A)

● Choose from the following table in accordance with the outdoor unit system capacity type.

Model name of outdoor unit system	Piping size (O. D.)			
	Suction gas pipe Standard size	Suction gas pipe Maximum size	HP/LP gas pipe Standard size	Liquid pipe Standard size
Q280 type	φ22.2	φ28.6	φ19.1	φ12.7
Q360 type	φ25.4	φ28.6	φ22.2	φ15.9
Q460 type		φ34.9	φ22.2	φ12.7
Q500 type	φ28.6		φ25.4	φ15.9
Q540 type			φ28.6	φ19.1
Q636 type			φ25.4	φ15.9
Q712 type			φ28.6	φ22.2
Q744 type	φ34.9		φ28.6	φ19.1
Q816 type			φ25.4	φ15.9
Q848 type			φ28.6	φ22.2

Piping between outdoor unit multi connection piping kits (part B)

● Choose from the following table in accordance with the total capacity of all the outdoor units connected upstream.

Outdoor unit capacity type	Piping size (O. D.)	
	Suction gas pipe	Liquid pipe
280-320	φ22.2	φ9.5
360-392	φ25.4	φ12.7
424		
500-532	φ28.6	φ15.9
604-636		

Piping between outdoor unit multi connection piping kit and outdoor unit (part C)

● Choose from the following table in accordance with the capacity type of the outdoor unit connected.

Outdoor unit capacity type	Piping size (O. D.)	
	Suction gas pipe	Liquid pipe
Q140 type	φ15.9	φ9.5
Q180-212 type	φ19.1	φ15.9

Piping between refrigerant branch kits

Piping between refrigerant branch kit and BS unit

Piping between BS unit and refrigerant branch kit

- Choose from the following table in accordance with the total capacity type of all the indoor units connected downstream.
- *1 Connection piping must not exceed the refrigerant piping size between outdoor unit and refrigerant branch kit (part A).
- *2 When selecting 2 pipes line (gas pipe and liquid pipe), use suction gas pipe column for gas pipe and liquid pipe column for liquid pipe.

Indoor capacity index	Piping size (O.D.)					
	Suction gas pipe		HP/LP gas pipe		Liquid pipe	
	Standard size	Maximum size	Standard size	Maximum size	Standard size	Maximum size
< 56 kW	φ12.7	φ15.9	φ9.5	φ12.7	φ6.4	φ9.5
56 kW ≤ x < 112 kW		φ19.1		φ15.9		
112 kW ≤ x < 160 kW	φ15.9		φ12.7			φ12.7
160 kW ≤ x < 180 kW		φ25.4		φ15.9		φ9.5
180 kW ≤ x < 224 kW	φ19.1		φ15.9			
224 kW ≤ x < 330 kW		φ22.2				
330 kW ≤ x < 370 kW	φ25.4		φ19.4		φ12.7	φ15.9
370 kW ≤ x < 470 kW		φ28.6		φ22.2		
470 kW ≤ x < 530 kW	φ28.6		φ25.4		φ15.9	φ19.1
530 kW ≤ x < 710 kW		φ34.9		φ25.4		
710 kW ≤ x < 784 kW	φ34.9		φ41.3		φ19.1	φ22.2
784 kW ≤ x < 1010 kW			φ28.6			
1010 kW ≤			φ28.6			

Piping between refrigerant branch kit, BS unit and indoor unit

● Match to the size of the connection piping on the indoor unit.

Indoor capacity index	Suction gas pipe		Piping size (O.D.)		Liquid pipe	
	Standard size	Maximum size	Standard size	Maximum size	Standard size	Maximum size
Q20						
Q25						
Q32						
Q40	φ12.7		φ15.9		φ6.4	φ9.5
Q50						
Q63						
Q80			φ19.1			
Q100	φ15.9				φ9.5	φ12.7
Q125			φ25.4			
Q200	φ19.1		φ28.6			φ15.9
Q250	φ22.2					

How to calculate the additional refrigerant to be charged

Additional refrigerant to be charged : R(kg)
(R should be rounded off in units of 0.1 kg.)

$$R = \left[\left(\frac{\text{Total length(m) of liquid piping (size at } \phi 22.2)}{0.37} \times \text{kg/m} \right) + \left(\frac{\text{Total length(m) of liquid piping (size at } \phi 19.1)}{0.26} \times \text{kg/m} \right) + \left(\frac{\text{Total length(m) of liquid piping (size at } \phi 15.9)}{0.18} \times \text{kg/m} \right) + \left(\frac{\text{Total length(m) of liquid piping (size at } \phi 12.7)}{0.12} \times \text{kg/m} \right) + \left(\frac{\text{Total length(m) of liquid piping (size at } \phi 9.5)}{0.059} \times \text{kg/m} \right) + \left(\frac{\text{Total length(m) of liquid piping (size at } \phi 6.4)}{0.022} \times \text{kg/m} \right) \right] \times 1.02$$

Correction amount by outdoor unit

RQCEQ280	5.2	RQCEQ636	11.2
RQCEQ360	5.8	RQCEQ712	13.8
RQCEQ460	9.1	RQCEQ744	14.3
RQCEQ500	9.4	RQCEQ816	15.1
RQCEQ540	9.7	RQCEQ848	15.6

A ≤ 100%	0.4 kg
A > 100%	0.5 kg

(A: The ratio of total capacity index of connectable indoor units to outdoor capacity index (%))

Example for refrigerant branch using REFNET joint and REFNET header for the systems and each pipe length as shown below.

Outdoor system : RQCEQ848PY1
Total capacity of indoor unit: 116%

a: φ19.1 × 30m	e: φ9.5 × 10m	i: φ9.5 × 10m	m: φ9.5 × 20m	r: φ9.5 × 1m	v: φ15.9 × 3m
b: φ19.1 × 20m	f: φ9.5 × 10m	j: φ9.5 × 10m	n: φ9.5 × 10m	s: φ9.5 × 1m	w: φ12.7 × 3m
c: φ9.5 × 10m	g: φ9.5 × 10m	k: φ9.5 × 20m	o: φ6.4 × 10m	t: φ9.5 × 1m	
d: φ9.5 × 10m	h: φ9.5 × 10m	l: φ9.5 × 20m	p: φ6.4 × 10m	u: φ9.5 × 3m	


$$R = \left(\frac{50 \times 0.26}{a} + \frac{3 \times 0.18}{b} + \frac{3 \times 0.12}{c} + \frac{156 \times 0.059}{d} + \frac{20 \times 0.022}{e} \right) \times 1.02 - \frac{15.6}{f} + \frac{0.5}{g} = 8.915 \text{ kg}$$

Round off in units of 0.1 kg.

Note 1.

When the equivalent pipe length between outdoor unit multi connection piping and indoor units is 90m or more, the size of main pipes on the liquid side (refer to figure 9) must be increased according to the right table.
(Do not increase the size of the suction gas pipe and HP/LP gas pipe.)
(Refer to figure below.)

1. Outdoor unit
2. Main pipes
3. Increase only liquid pipe size
4. First refrigerant branch kit
5. BS unit
6. Indoor unit



System	Liquid pipe
RQCEQ280P	φ9.5 → φ12.7
RQCEQ360-460P	φ12.7 → φ15.9
RQCEQ500-712P	φ15.9 → φ19.1
RQCEQ744-848P	φ19.1 → φ22.2

Revision History

Month / Year	Version	Revised contents
05/2010	SiBE341001	–
07/2010	SiBE341001_A	M-10005 Correction of master-slave setting and AIRNET address setting
12/2010	SiBE341001_B	M-11009 Correction of thermistor resistance / Temperature characteristic in Service manual
08/2011	SiBE341001_C	Modification of PCB (Earth leakage detection PCB)
10/2011	SiBE341001_D	Correction of “How to calculate additional refrigerant charging amount”

Warning



- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the User's Manual carefully before using this product. The User's Manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.



JMI-0107

Organization:
DAIKIN INDUSTRIES, LTD.
AIR CONDITIONING MANUFACTURING DIVISION

Scope of Registration:
THE DESIGN/DEVELOPMENT AND MANUFACTURE OF
COMMERCIAL AIR CONDITIONING, HEATING, COOLING,
REFRIGERATING EQUIPMENT, HEATING EQUIPMENT,
RESIDENTIAL AIR CONDITIONING EQUIPMENT, HEAT
RECLAIM VENTILATION, AIR CLEANING EQUIPMENT,
COMPRESSORS AND VALVES.



JQA-1452

Organization:
DAIKIN INDUSTRIES
(THAILAND) LTD.

Scope of Registration:
THE DESIGN/DEVELOPMENT
AND MANUFACTURE OF AIR
CONDITIONERS AND THE
COMPONENTS INCLUDING
COMPRESSORS USED FOR THEM



EC99J2044

All of the Daikin Group's business facilities and subsidiaries in Japan are certified under the ISO 14001 international standard for environment management.

Dealer

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

http://www.daikin.com/global_ac/

©All rights reserved