

HITACHI

Inspire the Next

PM

NO. 0324E


RAK-25NH5/RAC-25NH5
RAK-35NH5/RAC-35NH5

REFER TO THE FOUNDATION MANUAL


SERVICE MANUAL

TECHNICAL INFORMATION

FOR SERVICE PERSONNEL ONLY

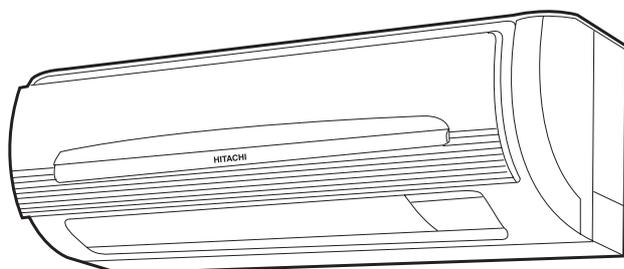

RAK-25NH5
RAK-35NH5

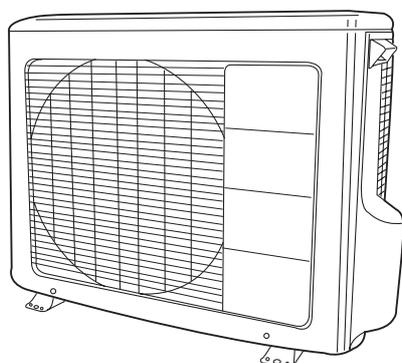

RAC-25NH5
RAC-35NH5



CONTENTS

SPECIFICATIONS	5
HOW TO USE	6
CONSTRUCTION AND DIMENSIONAL DIAGRAM	29
MAIN PARTS COMPONENT	31
WIRING DIAGRAM	33
CIRCUIT DIAGRAM	35
PRINTED WIRING BOARD LOCATION DIAGRAM	41
BLOCK DIAGRAM	43
BASIC MODE	45
REFRIGERATING CYCLE DIAGRAM	59
AUTO SWING FUNCTION	61
DESCRIPTION OF MAIN CIRCUIT OPERATION	62
SERVICE CALL Q & A	93
TROUBLE SHOOTING	96
PARTS LIST AND DIAGRAM	116

SPECIFICATIONS

TYPE		DC INVERTER (WALL TYPE)			
		INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT
MODEL		RAK-25NH5	RAC-25NH5	RAK-35NH5	RAC-35NH5
POWER SOURCE		1 PHASE, 50 Hz, 220-240V		1 PHASE, 50 Hz, 220-240V	
COOLING	TOTAL INPUT (W)	750 (200~880)		1,090 (200~1,300)	
	TOTAL AMPERES (A)	3.44-3.16		5.00-4.59	
	CAPACITY	(kW)	2.50 (1.00 ~ 3.10)		3.50 (1.00 ~ 4.00)
(B.T.U./h)		8,540		11,950	
HEATING	TOTAL INPUT (W)	870 (200 ~ 1,120)		1,080 (200 ~ 1,300)	
	TOTAL AMPERES (A)	3.99-3.66		4.96-4.55	
	CAPACITY	(kW)	3.40 (1.10 ~ 4.40)		4.20 (1.10 ~ 5.00)
(B.T.U./h)		11,610		14,340	
DIMENSIONS (mm)	W	780	750	780	750
	H	280	570	280	570
	D	210	280	210	280
NET WEIGHT (kg)		9.5	38	9.5	38

※ After installation

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT



M AIR CONDITIONER

Большая библиотека технической документации

<https://splitsystema48.ru/instrukcii-po-ekspluatacii-kondicionerov.html>


каталоги, инструкции, сервисные мануалы, схемы.

JANUARY

Division


SAFETY DURING REPAIR WORK

1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

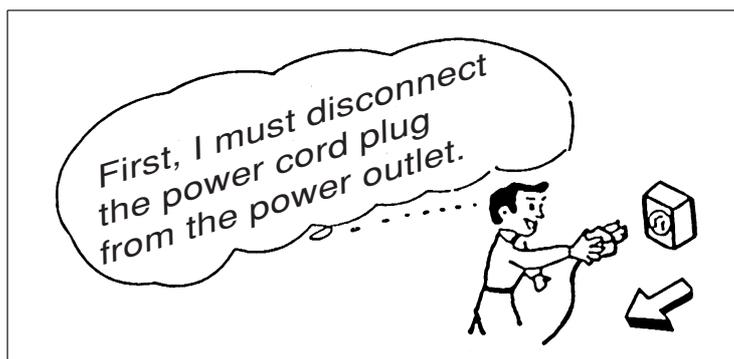

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.

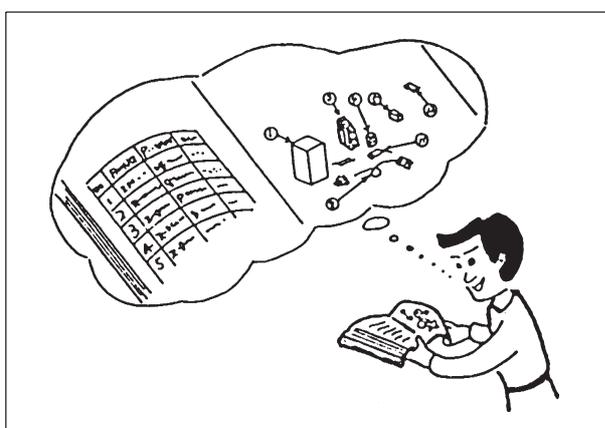

3. After completion of repairs, the initial state should be restored.
4. Lead wires should be connected and laid as in the initial state.
5. Modification of the unit by user himself should absolutely be prohibited.
6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be $1M\Omega$ or more as measured by a 500V DC megger.
9. The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again. If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.
10. Any inflammable thing should never be placed about the location of installation.
11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

2. Object parts

- (1) Micro computer
- (2) Integrated circuits (IC)
- (3) Field-effect transistors (FET)
- (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.

3. Items to be observed in handling

- (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

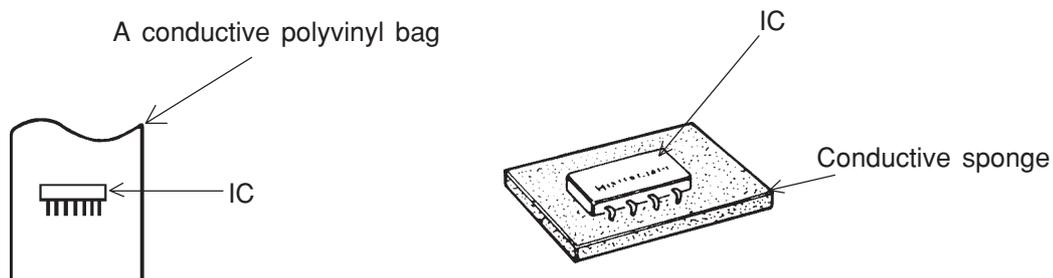


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet).
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

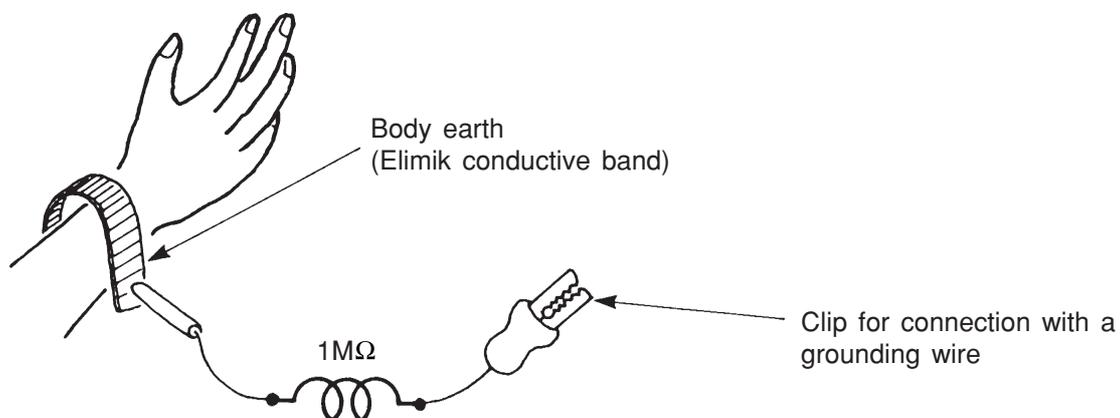


Fig. 2. Body Earth

(6) Use a three wire type soldering iron including a grounding wire.

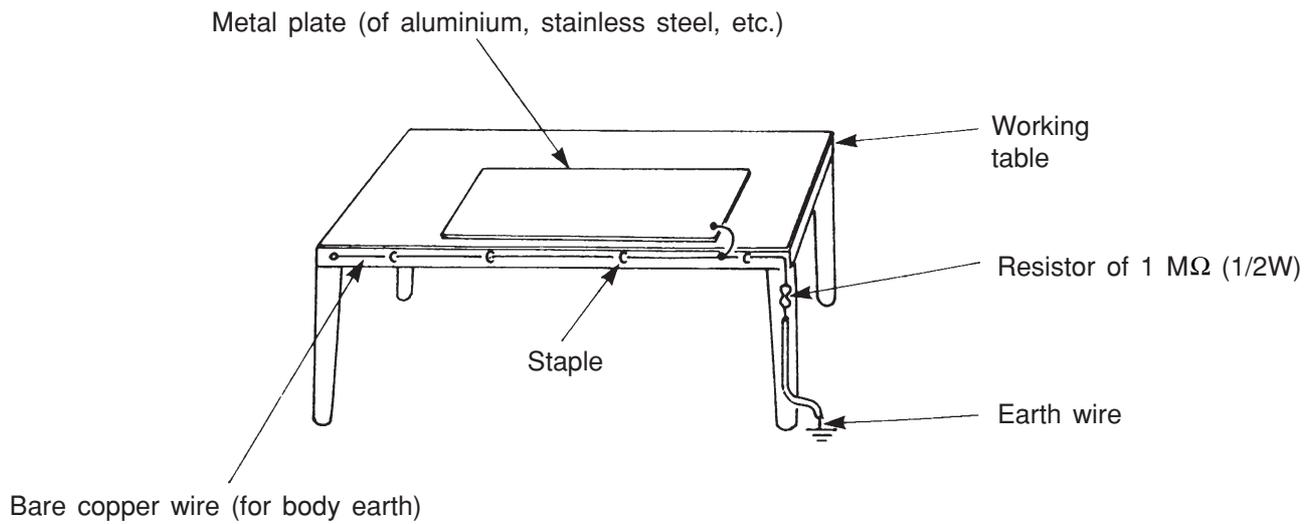


Fig. 3. Grounding of the working table

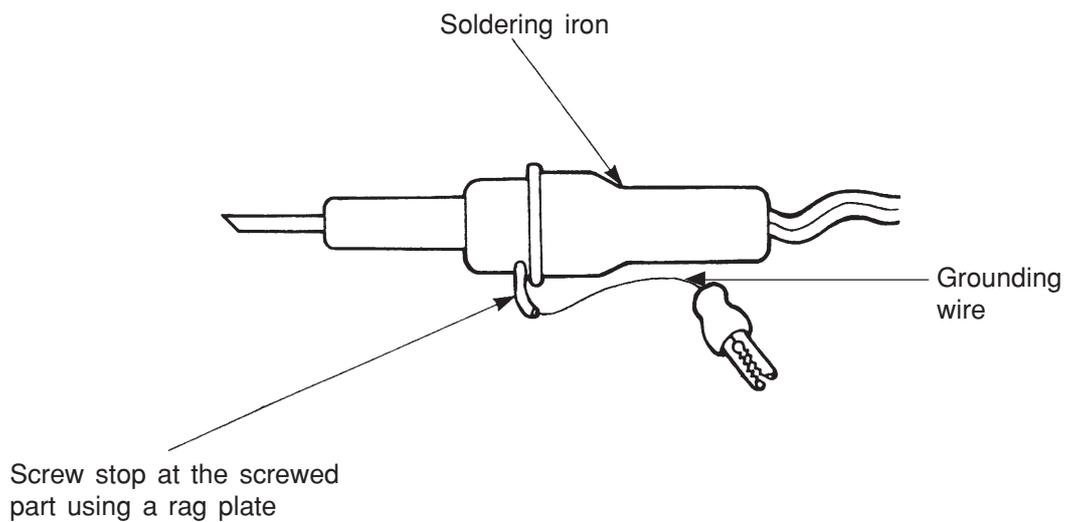


Fig. 4. Grounding a soldering iron


Use a high insulation mode (100V, 10MΩ or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.

 **CAUTION**


1. In quiet operation or stopping the running, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
3. The room air conditioner does not start automatically after recovery of the electric power failure for preventing fuse blowing. Re-press START/STOP button after 3 minutes from when unit stopped.
4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
5. This room air conditioner should not be used at the cooling operation when the outside temperature is below -10°C (14°F).
6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -15°C (5°F).
If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.

The Length of Indoor Unit Power Cord



Do not alter the power cord.

Direction of Piping

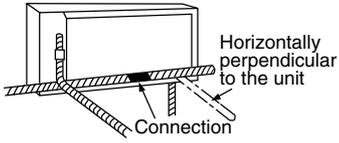


There are 4 directions allowed, namely, horizontally perpendicular to the unit, vertically down from right, horizontally out from right and horizontally out to left. Don't form the piping downward at the left of the unit.

Figure showing the Installation of Indoor and Outdoor unit.



The installation height of indoor unit must be 2.3m or more.

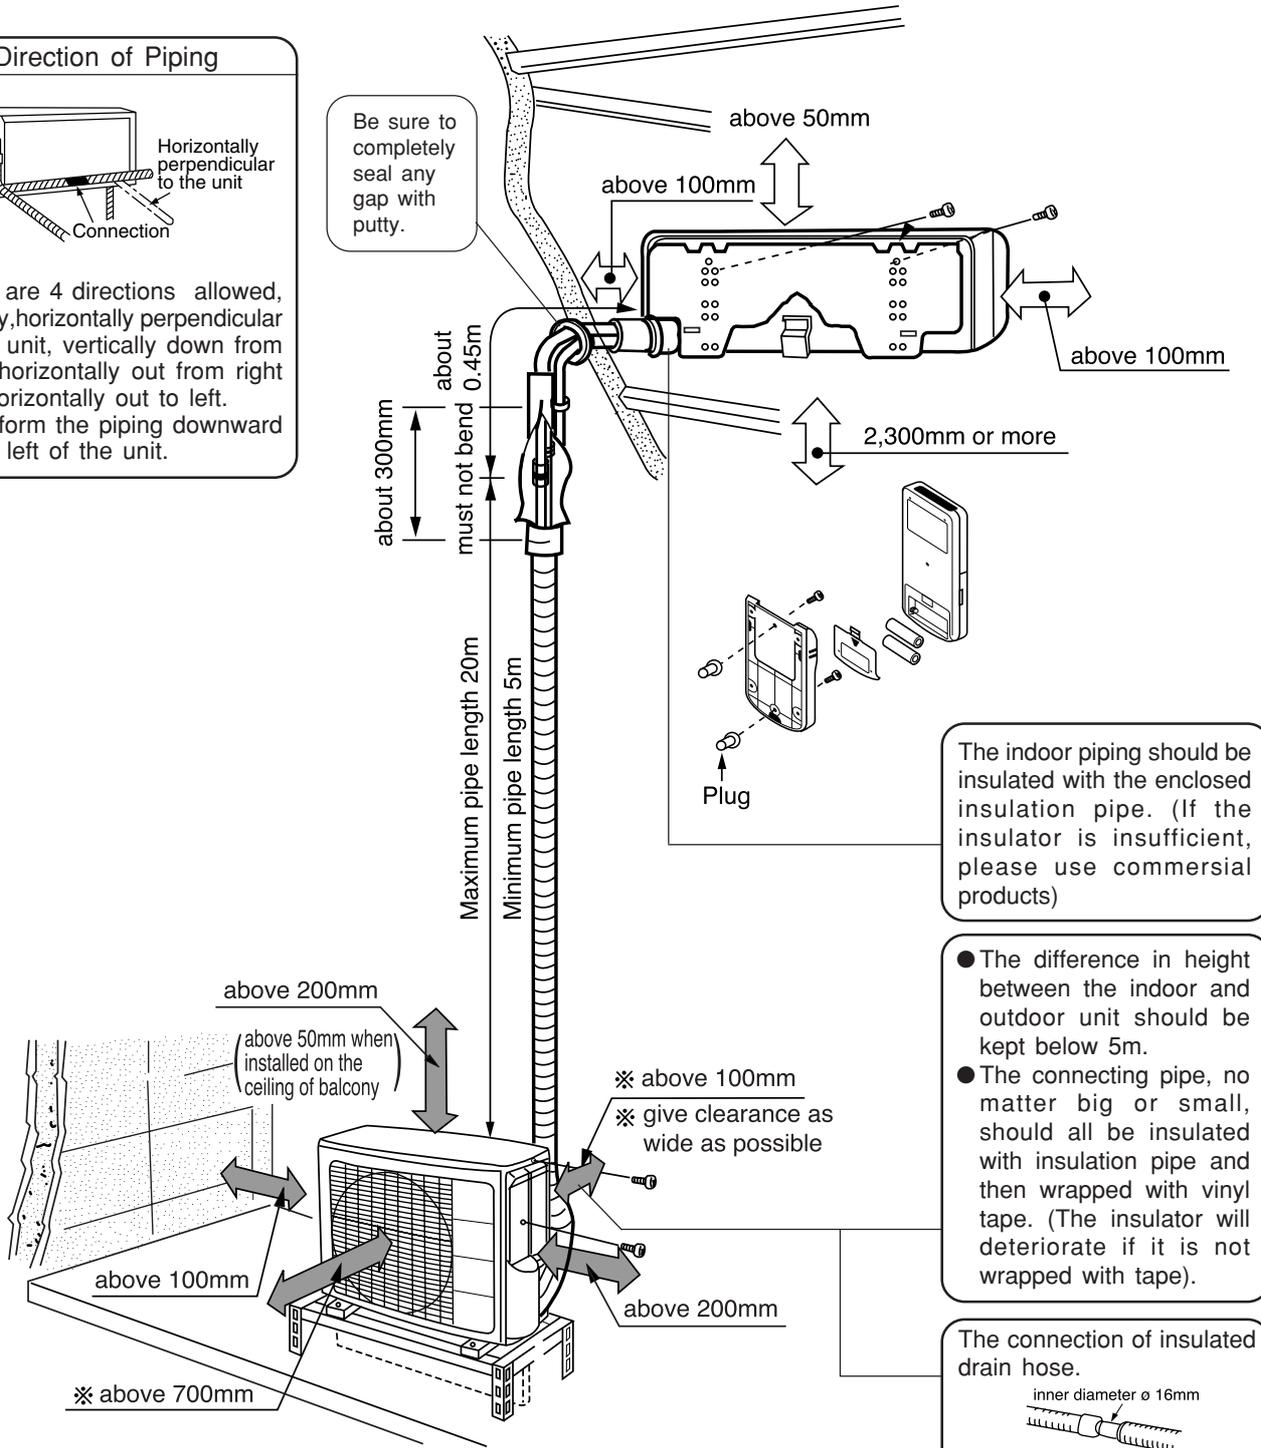

Be sure to completely seal any gap with putty.

The indoor piping should be insulated with the enclosed insulation pipe. (If the insulator is insufficient, please use commercial products)

- The difference in height between the indoor and outdoor unit should be kept below 5m.
- The connecting pipe, no matter big or small, should all be insulated with insulation pipe and then wrapped with vinyl tape. (The insulator will deteriorate if it is not wrapped with tape).

The connection of insulated drain hose.
inner diameter ϕ 16mm
Please use insulated drain hose for the indoor piping (commercial product).

SPECIFICATIONS

MODEL		RAK-25NH5 RAK-35NH5	RAC-25NH5	RAC-35NH5
FAN MOTOR		DC35V	40 W	
FAN MOTOR CAPACITOR		NO	NO	
FAN MOTOR PROTECTOR		NO	NO	
COMPRESSOR		–	JU1012D	
COMPRESSOR MOTOR CAPACITOR		NO	NO	
OVERLOAD PROTECTOR		NO	YES	
OVERHEAT PROTECTOR		NO	YES	
FUSE (for MICROPROCESSOR)		NO	3.0A	
POWER RELAY		NO	G4A	
POWER SWITCH		NO	NO	
TEMPORARY SWITCH		YES	NO	
SERVICE SWITCH		NO	YES	
TRANSFORMER		NO	NO	
VARISTOR		NO	450NR	
NOISE SUPPRESSOR		NO	YES	
THERMOSTAT		YES(IC)	YES(IC)	
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO	
REFRIGERANT CHARGING VOLUME (Refrigerant 410A)	UNIT	-----	1150g	1150g
	PIPES (MAX. 20m)	WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE.		



SAFETY PRECAUTION

- Please read the “Safety Precaution” carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of “**▲ Warning**” and “**▲ Caution**”. The “Warning” section contains matters which, if not observed strictly, may cause death or serious injury. The “Caution” section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.

 Make sure to connect earth line.	 The sign in the figure indicates prohibition.
 Indicates the instructions that must be followed.	

- Please keep this manual after reading.

PRECAUTIONS DURING INSTALLATION

 WARNING	<ul style="list-style-type: none"> ● Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself. 	
	<ul style="list-style-type: none"> ● Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself. 	
	<ul style="list-style-type: none"> ● Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock. 	
 CAUTION	<ul style="list-style-type: none"> ● A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists. 	
	<ul style="list-style-type: none"> ● Do not install near location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. 	
	<ul style="list-style-type: none"> ● Please ensure smooth flow of water when installing the drain hose. 	

PRECAUTIONS DURING SHIFTING OR MAINTENANCE

 WARNING	<ul style="list-style-type: none"> ● Should abnormal situation arises (like burning smell), please stop operating the unit and turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation. 	
	<ul style="list-style-type: none"> ● Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire. 	
	<ul style="list-style-type: none"> ● Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly. 	

PRECAUTIONS DURING OPERATION

 WARNING	<ul style="list-style-type: none"> ● Avoid an extended period of direct air flow for your health. 	
	<ul style="list-style-type: none"> ● Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF. 	
	<ul style="list-style-type: none"> ● Do not use any conductor as fuse wire, this could cause fatal accident. 	
	<ul style="list-style-type: none"> ● During thunder storm, disconnect and turn off the circuit breaker. 	

PRECAUTIONS DURING OPERATION

- The product shall be operated under the manufacturer specification and not for any other intended use.



- Do not attempt to operate the unit with wet hands, this could cause fatal accident.

- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.



- Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

- Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.




- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.

- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.



C
A
U
T
I
O
N



- Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

- Turn off the circuit breaker if the unit is not to be operated for a long period.



- Do not climb on the outdoor unit or put objects on it.

- Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.




- Do not place plants directly under the air flow as it is bad for the plants.

- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.
- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT

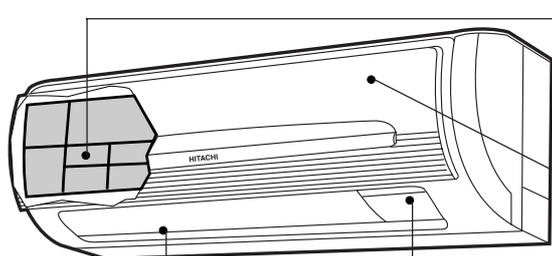

Air filter

To prevent dust from coming into the indoor unit.
(Refer page 25)


Front panel

Indoor unit indicators

Light indicator showing the operating condition.
(Refer page 9)

**Horizontal deflector • Vertical deflector
(Air Outlet)**

(Refer page 20)




Remote controller

Send out operation signal to the indoor unit. So as to operate the whole unit.
(Refer page 10)

MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAK-25NH5/RAK-35NH5	780	280	210

INDOOR UNIT INDICATORS

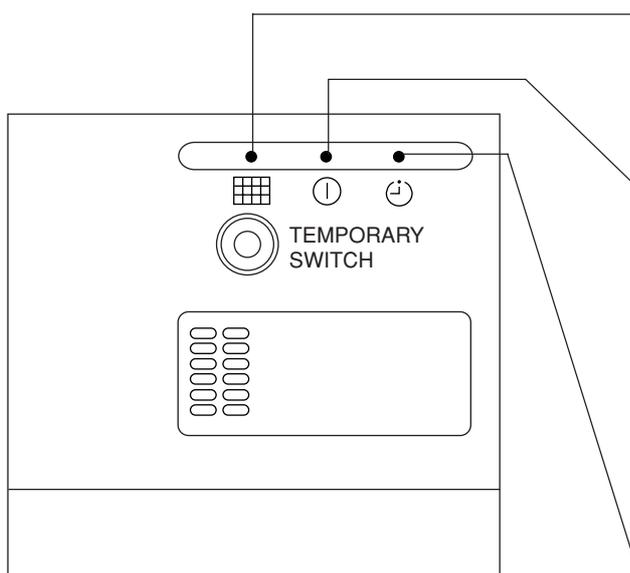

FILTER LAMP

When the device is operated for a total of about 100 hours, the FILTER lamp lights to indicate that it is time to clean the filter.

OPERATION LAMP

This lamp lights during operation.

The OPERATION LAMP flashes in the following cases during heating.

(1) During preheating

For about 2–3 minutes after starting up.


(2) During defrosting

Defrosting will be performed about once every one hour when frost forms on the heat exchanger of the outdoor unit, for 5–10 minutes each time.

TIMER LAMP

This lamp lights when the timer is working.

OPERATION INDICATOR

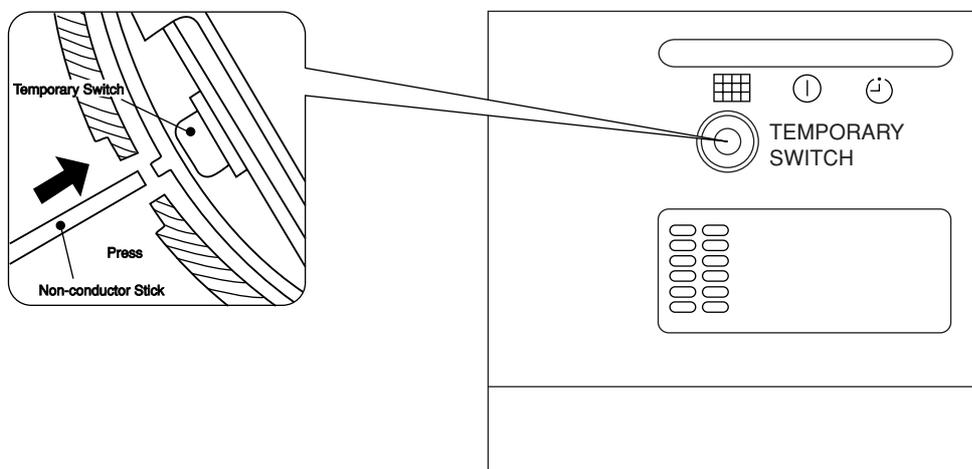

TEMPORARY SWITCH



Use this switch to start and stop when the remote controller does not work. [Use non-conductor stick (example toothpick)]

- By pressing the temporary switch, the operation is done in previously set operation mode.
- When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

NAMES AND FUNCTIONS OF REMOTE CONTROL UNIT

REMOTE CONTROLLER

- This controls the operation of the indoor unit. The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter.
This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care. Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.

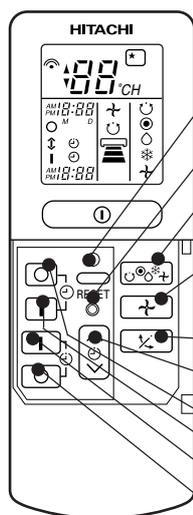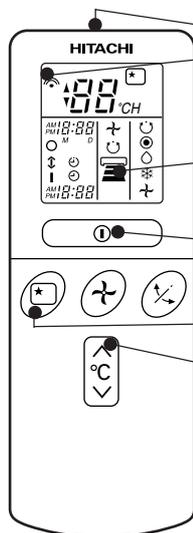

- **Signal emitting window/transmission sign**
Point this window toward the indoor unit when controlling it. The transmission sign blinks when a signal is sent.
- **Display**
This indicates the room temperature selected, current time, timer status, function and intensity of circulation selected.
- **START/STOP button**
Press this button to start operation. Press it again to stop operation.
- **SLEEP button**
Use this button to set the sleep timer.
- **TEMPERATURE buttons**
Use these buttons to raise or lower the temperature setting. (Keep pressed, and the value will change more quickly.)
- **TIME button**
Use this button to set and check the time and date.
- **RESET buttons**
- **FUNCTION selector**
Use this button to select the operating mode. Every time you press it, the mode will change from ☺ (AUTO) to ● (HEAT) to ○ (DEHUMIDIFY) to ❄ (COOL) and to ✈ (FAN) cyclically.
- **FAN SPEED selector**
This determines the fan speed. Every time you press this button, the intensity of circulation will change from ☺ (AUTO) to 🌀 (HI) to 🌀 (MED) to 🌀 (LOW) (This button allows selecting the optimal or preferred fan speed for each operation mode).
- **AUTO SWING button**
Controls the angle of the horizontal air deflector.
- **TIMER control**
Use this button to set the timer.
- **OFF-TIMER button** Select the turn OFF time.
- **ON-TIMER button** Select the turn ON time.
- **RESERVE button** Time setting reservation.
- **CANCEL button** Cancel time reservation.

☺	AUTO
●	HEAT
○	DEHUMIDIFY
❄	COOL
✈	FAN
🌀	FAN SPEED LOW MED HI
★	SLEEPING
○	STOP (CANCEL)
I	START (RESERVE)
Ⓜ	START/STOP
⌚	TIME
⌚	TIMER SET
⌚	TIMER SELECTOR ON TIMER OFF TIMER
✂	AUTO SWING

Precautions for Use

- Do not put the remote controller in the following places.
 - Under direct sunlight.
 - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).
This is to protect the device and does not indicate a failure.
- If you press the FUNCTION selector button during operation, the device may stop for about 3 minutes for protection.

VARIOUS FUNCTIONS


■ Auto Restart Control

- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode and airflow direction.
(As the operation is not stopped by remote controller.)
- If you intend not to continue the operation when the power is resumed, switch off the power supply.
When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode and airflow direction.

Note: 1. If you do not require Auto Restart Control, please consult your sales agent or OFF by remote control.
2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.

AUTOMATIC OPERATION

The device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the current room temperature. The selected mode of operation will change when the room temperature varies. However the mode of operation will not change when indoor unit connected to multi type outdoor unit.

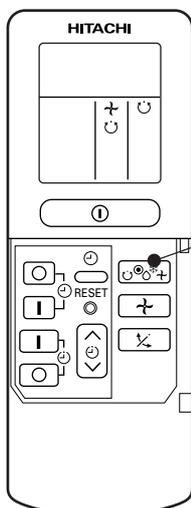

Press the FUNCTION selector so that the display indicates the  (AUTO) mode of operation.

- When AUTO has been selected, the device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the current room temperature. However the mode of operation will not change when indoor unit connected to multi type outdoor unit.
- If the mode automatically selected by the unit is not satisfactory, manually change the mode setting (heat, dehumidify, cool or fan).

**START
STOP**

Press the  (START/STOP) button.
Operation starts with a beep.
Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the  (START/STOP) button next time.


You can raise or lower the temperature setting as necessary by maximum of 3°C.



Press the temperature button and the temperature setting will change by 1°C each time.


- The preset temperature and the actual room temperature may vary somewhat depending on conditions.
- The display does not indicate the preset temperature in the AUTO mode.
If you change the setting, the indoor unit will produce a beep.

Press the  (FAN SPEED) button, AUTO and LOW is available.

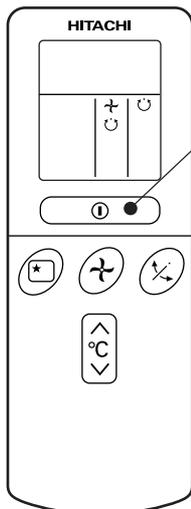

HEATING OPERATION

- Use the device for heating when the outdoor temperature is under 21°C.
When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -15°C of the outdoor temperature.

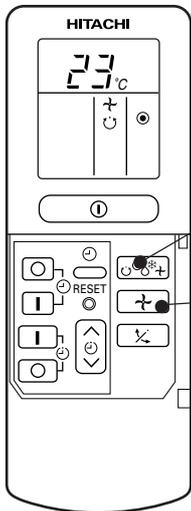

1

Press the FUNCTION selector so that the display indicates ● (HEAT).

Set the desired FAN SPEED with the ↻ (FAN SPEED) button (the display indicates the setting).

⌚ (AUTO): The fan speed is HI at first and varies to MED or LOW automatically when the preset temperature has been reached.

⌚ (HI) : Economical as the room will become warm quickly.
But you may feel a chill at the beginning.

⌚ (MED) : Fan speed slow.

⌚ (LOW) : Fan speed slower.

2

Set the desired room temperature with the TEMPERATURE buttons (the display indicates the setting).


3

The temperature setting and the actual room temperature may vary somewhat depending on conditions.

START
STOP


Press the ⏻ (START/STOP) button. Heating operation starts with a beep. Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the ⏻ (START/STOP) button next time.

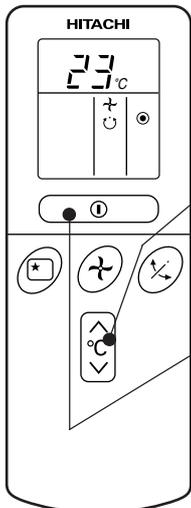

DEHUMIDIFYING OPERATION

Use the device for dehumidifying when the room temperature is over 16°C.
When it is under 15°C, the dehumidifying function will not work.

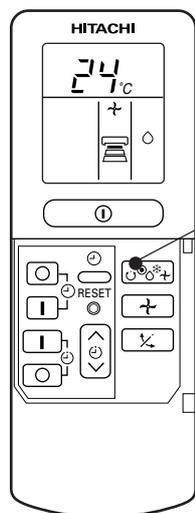

1

Press the FUNCTION selector so that the display indicates ◊ (DEHUMIDIFY).
The FAN SPEED is set at LOW automatically.
The FAN SPEED button does not work.

2


Set the desired room temperature with the TEMPERATURE button (the display indicates the setting).



The range of 20-26°C is recommended as the room temperature for dehumidifying.

**START
STOP**

Press the Ⓜ (START/STOP) button. Dehumidifying operation starts with a beep. Press the button again to stop operation.

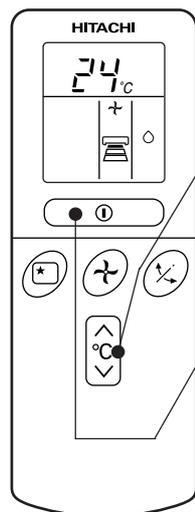

- As the settings are stored in memory in the remote controller, you only have to press the Ⓜ (START/STOP) button next time.


■ Dehumidifying Function

When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level.

When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting. The function will stop (the indoor unit will stop emitting air) as soon as the room temperature becomes lower than the setting temperature.

COOLING OPERATION

Use the device for cooling when the outdoor temperature is $-10 \sim 43^{\circ}\text{C}$.
If in doors humidity is very high (80%), some dew may form on the air outlet grille of the indoor unit.

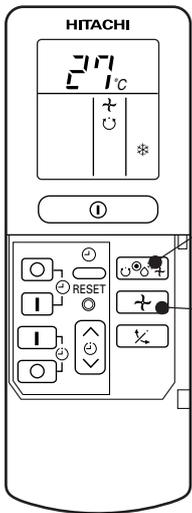

1

Press the FUNCTION selector so that the display indicates * (COOL).

Set the desired FAN SPEED with the \updownarrow (FAN SPEED) button (the display indicates the setting).

AUTO (AUTO): The FAN SPEED is HI at first and varies to MED or LOW automatically when the preset temperature has been reached.

HI (HI) : Economical as the room will become cool quickly.

MED (MED) : Fan speed slow.

LOW (LOW) : Fan speed slower.

2

Set the desired room temperature with the TEMPERATURE button (the display indicates the setting).


The temperature setting and the actual room temperature may vary some how depending on conditions.

3

Press the START/STOP button. Cooling operation starts with a beep. Press the button again to stop operation. The cooling function does not start if the temperature setting is higher than the current room temperature (even though the OPERATION lamp lights). The cooling function will start as soon as you set the temperature below the current room temperature.


**START
STOP**

■ As the settings are stored in memory in the remote controller, you only have to press the START/STOP button next time.

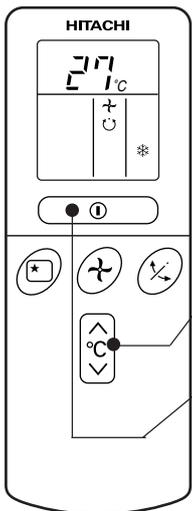

FAN OPERATION

You can use the device simply as an air circulator. Use this function to dry the interior of the indoor unit at the end of summer.

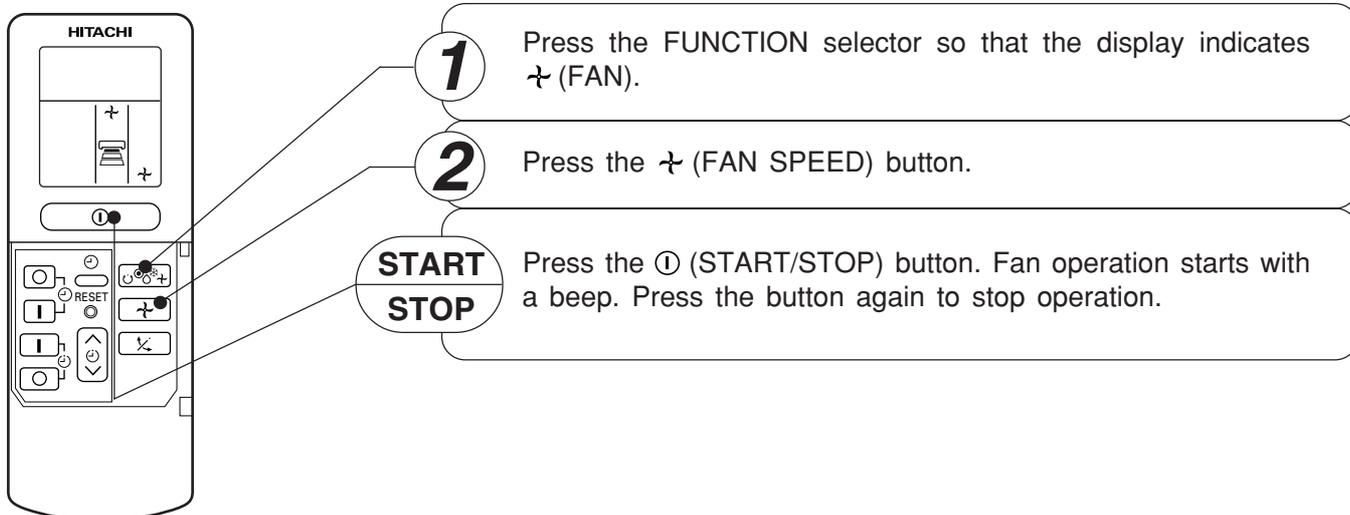


FAN SPEED (AUTO)

..... When the AUTO fan speed mode is set in the cooling/heating operation:


For the heating operation	<ul style="list-style-type: none"> ● The fan speed will automatically change according to the temperature of discharged air. ● When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. ● When the room temperature reaches setting temperature, fan speed changes to LOW automatically.
For the cooling operation	<ul style="list-style-type: none"> ● When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. ● After room temperature reaches the preset temperature, the cooling operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful cooling will be performed.

HOW TO SET THE TIMER

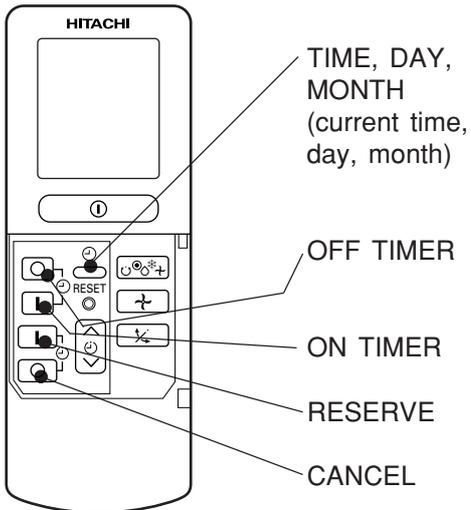


Time, Day, Month

After you change the batteries;




1 Set the current month and day with the TIMER control button.

OFF-Timer




You can set the device to turn off at the present time.

1 Press the (OFF-TIMER) button. The (OFF) mark blinks on the display.




ON-Timer


- The device will turn on at the designated times.



1 Press the (ON-TIMER) button the (ON) mark blinks on the display.




ON/OFF-Timer



- The device will turn on (off) and off (on) at the designated times.
- The switching occurs first at the preset time that comes earlier.
- The arrow mark appearing on the display indicates the sequence of switching operations.


1 Press the (ON-OFF) button so that the (OFF) mark blinks.



2 Set the turn-off time with the TIMER control button. Press the (RESERVE) button.



3 Press the (ON-TIMER) button so that the (OFF) mark lights and the (ON) mark blinks.

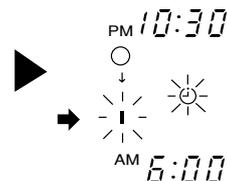

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the (CANCEL) button.

The (RESERVED) sign goes out with a beep and the (TIMER) lamp turns off on the indoor unit.


NOTE

You can set only one of the OFF-timer, ON-timer and ON/OFF-timer.


2 Press the ⊖ (TIME) button.



3 Set the current time with the TIMER control button.



4 Press the ⊖ (TIME) button again. The time indication starts lighting instead of flashing.




- The time indication will disappear automatically in 10 second.
- To check the current time setting, press the ⊖ (TIME) button twice.

The setting of the current time is now complete.


Example: The current time is 1:30 p.m.

2 Set the turn-off time with the TIMER control button.



3 Point the signal window of the remote controller toward the indoor unit, and press the | (RESERVE) button.


The ○ (OFF) mark starts lighting instead of flashing and the sign ⊖ (RESERVED) lights. A beep occurs and the ⊖ (TIMER) lamp lights on the indoor unit.



Example: The device will turn off at 11:00p.m.


The setting of turn-off time is now complete.

2 Set the turn-on time with the TIMER control button.




3 Point the signal window of the remote controller toward the indoor unit, and press the | (RESERVE) button.

The | (ON) mark starts lighting instead of flashing and the ⊖ (RESERVED) sign lights. A beep occurs and the ⊖ (TIMER) lamp lights on the indoor unit.




Example:
The device will turn on at 7:00 a.m.
The setting of the turn-on time is now complete.

4 Set the turn-on time with the TIMER control button.

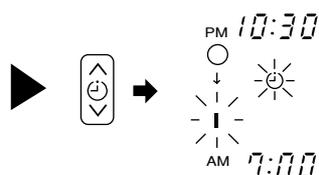

5 Point the signal window of the remote controller toward the indoor unit, and press the | (RESERVE) button.

The | (ON) mark starts lighting instead of flashing and the ⊖ (RESERVED) sign lights. A beep occurs and the ⊖ (TIMER) lamp lights on the indoor unit.

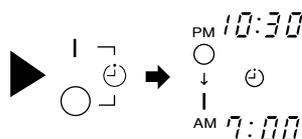



Example:
The device will turn off at 10:30 p.m. and it will be turned on at 7:00 a.m.
The settings of the turn-on/off times are now complete.

- The timer may be used in three ways: off-timer, on-timer, and ON/OFF (OFF/ON)-timer. Set the current time at first because it serves as a reference.
- As the time settings are stored in memory in the remote controller, you only have to press the | (RESERVE) button in order to use the same settings next time.

HOW TO SET THE SLEEP TIMER

Set the current time at first if it is not set before (see the pages for setting the current time). Press the  (SLEEP) button, and the display changes as shown below.

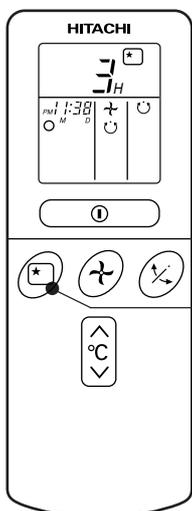


Mode	Indication
Sleep timer	


Sleep Timer: The device will continue working for the designated number of hours and then turn off.

Point the signal window of the remote controller toward the indoor unit, and press the SLEEP button.

The timer information will be displayed on the remote controller. The TIMER lamp lights with a beep from the indoor unit. When the sleep timer has been set, the display indicates the turn-off time.




Example: If you set 3 hours sleep time at 11:38 p.m., the turn-off time is 2:38 a.m.



The device will be turned off by the sleep timer and turned on by on-timer.

1 Set the ON-timer.

2 Press the  (SLEEP) button and set the sleep timer.



For heating:

In this case, the device will turn off in 2 hours (at 1:38 a.m.) and turn on early so that the preset temperature will be almost reached at 6:00 next morning.

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the  (CANCEL) button.

The  (RESERVED) sign goes out with a beep and the  (TIMER) lamp turns off on the indoor unit.

Explanation of the sleep timer

The device will control the FAN SPEED and room temperature automatically so as to be quiet and good for people's health.


NOTE

- If date or current time is not set, sleep timer can not be set.
- If you set the sleep timer after the off-, on/off- or off/on-timer has been set, the sleep timer becomes effective instead of the off-, on/off- or off/on-timer set earlier.
- You can not set other timer during sleep timer operation.
- After sleep timer time is up and when press sleep button again, the sleep timer will be set as last setting.
- Sleep timer effective only once.

ADJUSTING THE AIR DEFLECTOR

- 1** Adjustment of the conditioned air in the upward and downward directions.



The horizontal air deflector is automatically set to the proper angle suitable for each operation. The deflector can be swung up and down continuously and also set to the desired angle using the “ (AUTO SWING)” button.

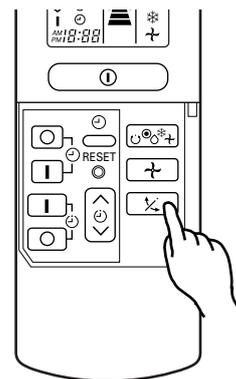

- If the “ (AUTO SWING)” button is pressed once, the horizontal air deflector swings up and down. If the button is pressed again, the deflector stops in its current position. Several seconds (about 6 seconds) may be required before the deflector starts to move.
- Use the horizontal air deflector within the adjusting range shown on the right.
- When the operation is stopped, the horizontal air deflector moves and stops at the position where the air outlet closes.


CAUTION

- In “Cooling” operation, do not keep the horizontal air deflector swinging for a long time. Some dew may form on the horizontal air deflector and dew may drop.

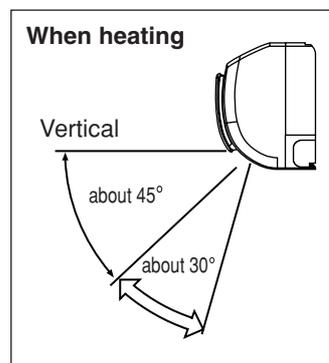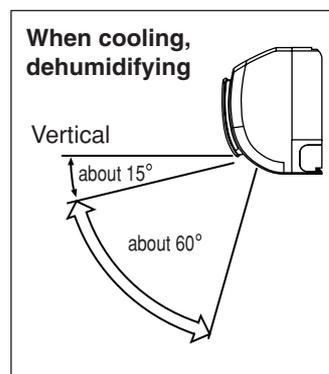

- 2** Adjustment of the conditioned air to the left and right.

Hold the vertical air deflector as shown in the figure and adjust the conditioned air to the left and right.

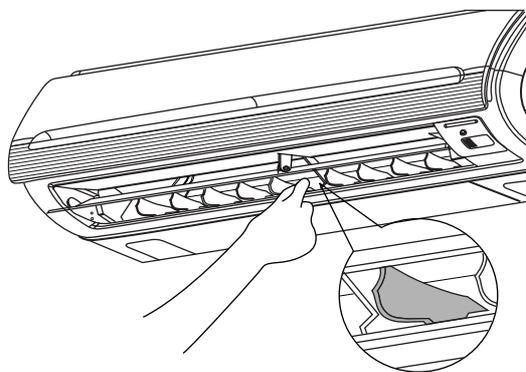

HOW TO EXCHANGE THE BATTERIES IN THE REMOTE CONTROLLER


1 Remove the cover as shown in the figure and take out the old batteries.



2 Install the new batteries.
The direction of the batteries should match the marks in the case.


⚠ CAUTION

1. Do not use new and old batteries, or different kinds of batteries together.
2. Take out the batteries when you do not use the remote controller for 2 or 3 months.

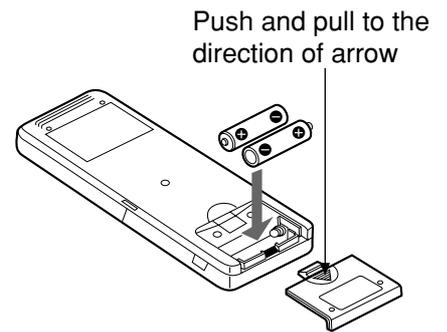


THE IDEAL WAYS OF OPERATION

Suitable Room Temperature

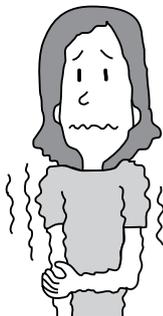

⚠ Warning
Freezing temperature is bad for health and a waste of electric power.

Install curtain or blinds

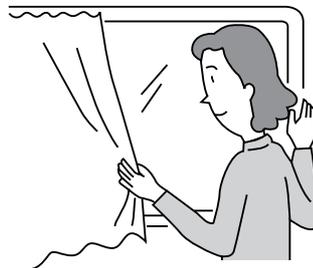

It is possible to reduce heat entering the room through windows.


Ventilation

⚠ Caution
Do not close the room for a long period of time. Occasionally open the door and windows to allow the entrance of fresh air.




Effective Usage Of Timer

At night, please use the “OFF or ON timer operation mode”, together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.

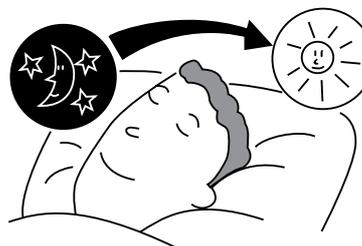


Do Not Forget To Clean The Air Filter

Dusty air filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.

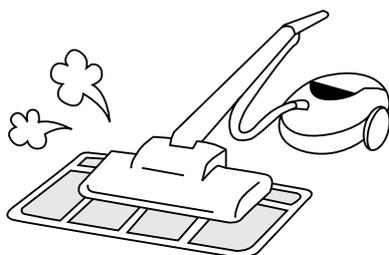

Please Adjust Suitable Temperature For Baby And Children

Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.

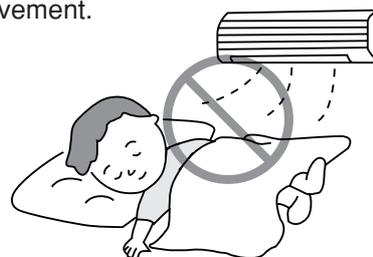


FOR USER'S INFORMATION

The Air Conditioner And The Heat Source In The Room


⚠ Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

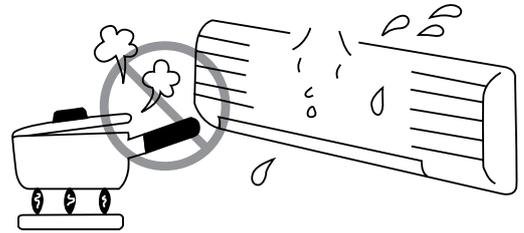

Not Operating For A Long Time


When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 8W in the operation control circuit even if it is in "OFF" mode.

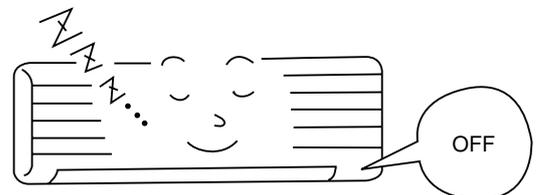

When Lightning Occurs

⚠ Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

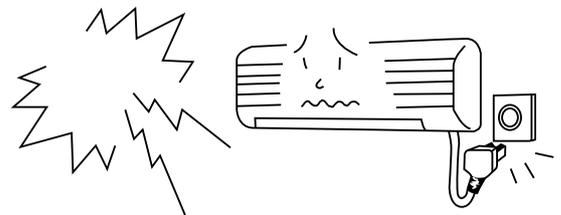

Interference From Electrical Products

⚠ Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

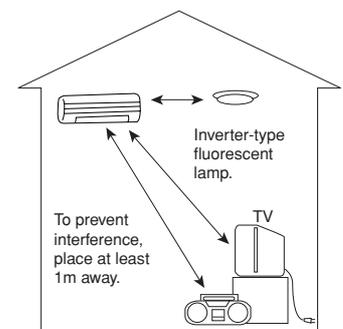


ATTACHING THE AIR CLEANSING AND DEODORIZING FILTERS

⚠ CAUTION

Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.


1 Open the front panel.

- Pull up the front panel by holding it at both sides with both hands.

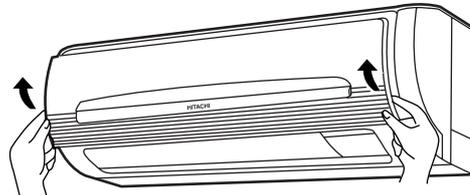


2 Remove the filter.

- Push upward to release the claws and pull out the filter.

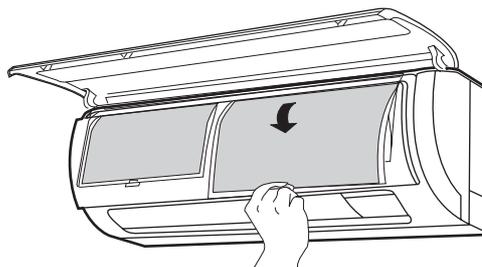


3 Attaching the air cleansing and deodorizing filters to the filter.

- Attach the air cleansing and deodorizing filters to the frame by gently compress its both sides and release after insertion into filter frame.

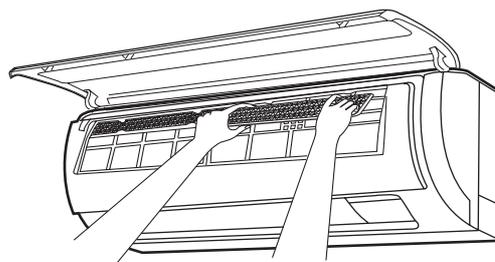


⚠ CAUTION

Do not bend the air cleansing and deodorizing filter as it may cause damage to the structure.

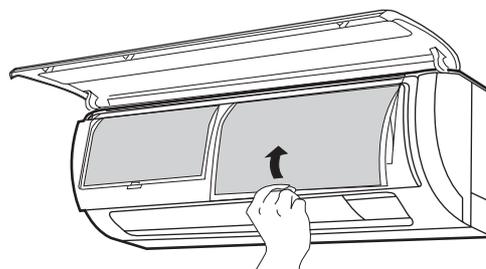

4 Attach the filters.

- Attach the filters by ensuring that the surface written "FRONT" is facing front.
- After attaching the filters, push the front panel at three arrow portion as shown in figure and close it.

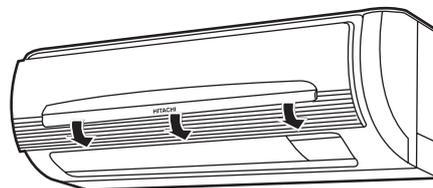

NOTE

- In case of removing the air cleansing and deodorizing filters, please follow the above procedures.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air cleansing and deodorizing filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Air cleansing and deodorizing filters are washable and reusable up to 20 times by using vacuum cleaner or water rinse under running tap water. Type number for this air cleansing filter is <SPX-CFH11>. Please use this number for ordering when you want to renew it.
- Do not operate the air conditioner without filter. Dust may enter the air conditioner and fault may occur.

MAINTENANCE

▲ CAUTION


Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.

1. AIR FILTER


Clean the air filter, as it removes dust inside the room. In case the air filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the filter following the procedure below.

PROCEDURE


- 1 Open the front panel and remove the filter
 - Gently lift and remove the air cleansing and deodorizing filter from the air filter frame.

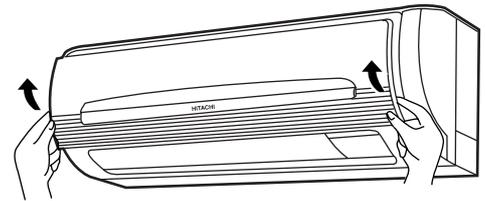

- 2 Vacuum dust from the air filter and air cleansing and deodorizing filter using vacuum cleaner. If there is too much dust, rinse under running tap water and gently brush it with soft bristle brush. Allow filters to dry in shade.

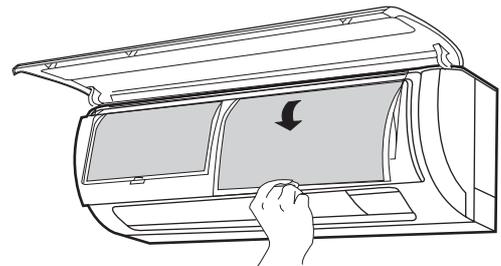

- 3
 - Re-insert the air cleansing and deodorizing filter to the filter frame. Set the filter with "FRONT" mark facing front, and slot them into the original state.
 - After attaching the filters, push the front panel at three arrow portions as shown in figure and close it.

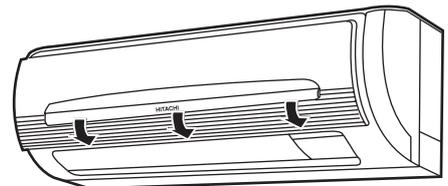

NOTE:


- Air cleansing and deodorizing filter should be cleaned every month or sooner if noticeable loading occurs. When used overtime, it may loose its deodorizing function. For maximum performance, it is recommended to replace it every 3-6 months depending on application requirements.

▲ CAUTION

- Do not wash with hot water at more than 40°C. The filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Do not use detergent on the air cleansing and deodorizing filter as some detergent may deteriorate the filter electrostatic performance.


2. Washable Front Panel

- Remove the front panel and wash with clean water.
Wash it with a soft sponge.
After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly.
If water remains at indicators or signal receiver of indoor unit, it causes trouble.

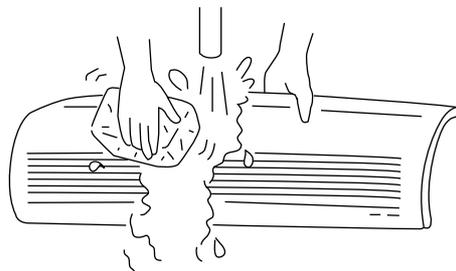


Method of removing the front panel.
Be sure to hold the front panel with both hands to detach and attach it.

Removing the Front Panel

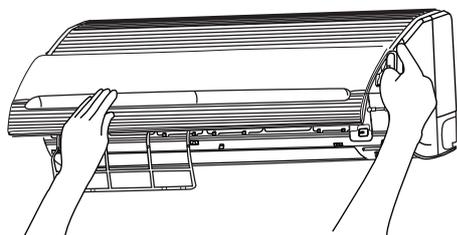

- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.

Attaching the Front Panel

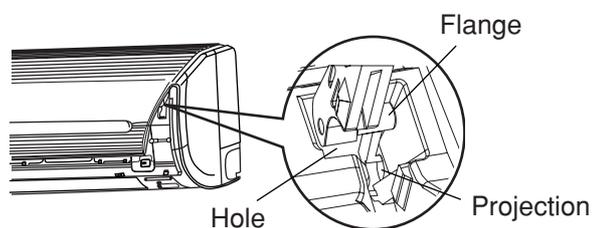

- Move the projections of the left and right arms into the **Flanges** in the unit and securely insert them into the holes.

CAUTION

- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.




▲ CAUTION

Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.

3. MAINTENANCE AT BEGINNING OF LONG OFF PERIOD

- Run the unit by setting the operation mode to ❄️ (COOL), the temperature to 32°C and the fan speed to HI for about half a day on a fine day, and dry the whole of the unit.
- Switch off the power plug.

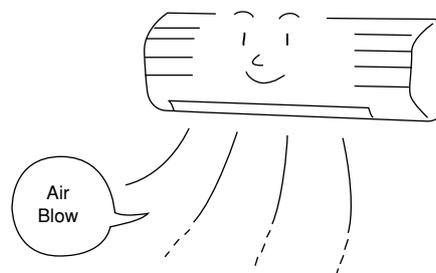



REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONAL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3		Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).

AFTER SALE SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

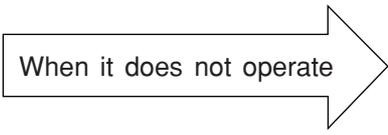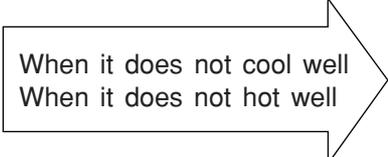CONDITION	CHECK THE FOLLOWING POINTS
 <p>When it does not operate</p>	<ul style="list-style-type: none"> ● Is the fuse all right? ● Is the voltage extremely high or low? ● Is the circuit breaker "ON"?
 <p>When it does not cool well When it does not hot well</p>	<ul style="list-style-type: none"> ● Was the air filter cleaned? ● Does sunlight fall directly on the outdoor unit? ● Is the air flow of the outdoor unit obstructed? ● Are the doors or windows opened, or is there any source of heat in the room? ● Is the set temperature suitable?

Notes



- In quiet operation or stopping the operation, the following phenomena may occasionally occur, but they are not abnormal for the operation.
 - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
 - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So the air filter and the evaporator regularly must be cleaned to reduce the odor.

- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.
- Power supply shall be connected at the rated voltage, otherwise the unit will be broken or could not reach the specified capacity.

Please note:

On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.

The conditions of the local Power Supply Companies are to be observed.

Note


- Avoid to use the room air conditioner for cooling operation when the outside temperature is below -10°C (14°F).
The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:

		Cooling		Heating	
		Minimum	Maximum	Minimum	Maximum
Indoor	Dry bulb $^{\circ}\text{C}$	21	32	20	27
	Wet bulb $^{\circ}\text{C}$	15	23	12	19
Outdoor	Dry bulb $^{\circ}\text{C}$	21	43	2	21
	Wet bulb $^{\circ}\text{C}$	15	26	1	15


CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAK-25NH5, RAK-35NH5

INDOOR UNIT

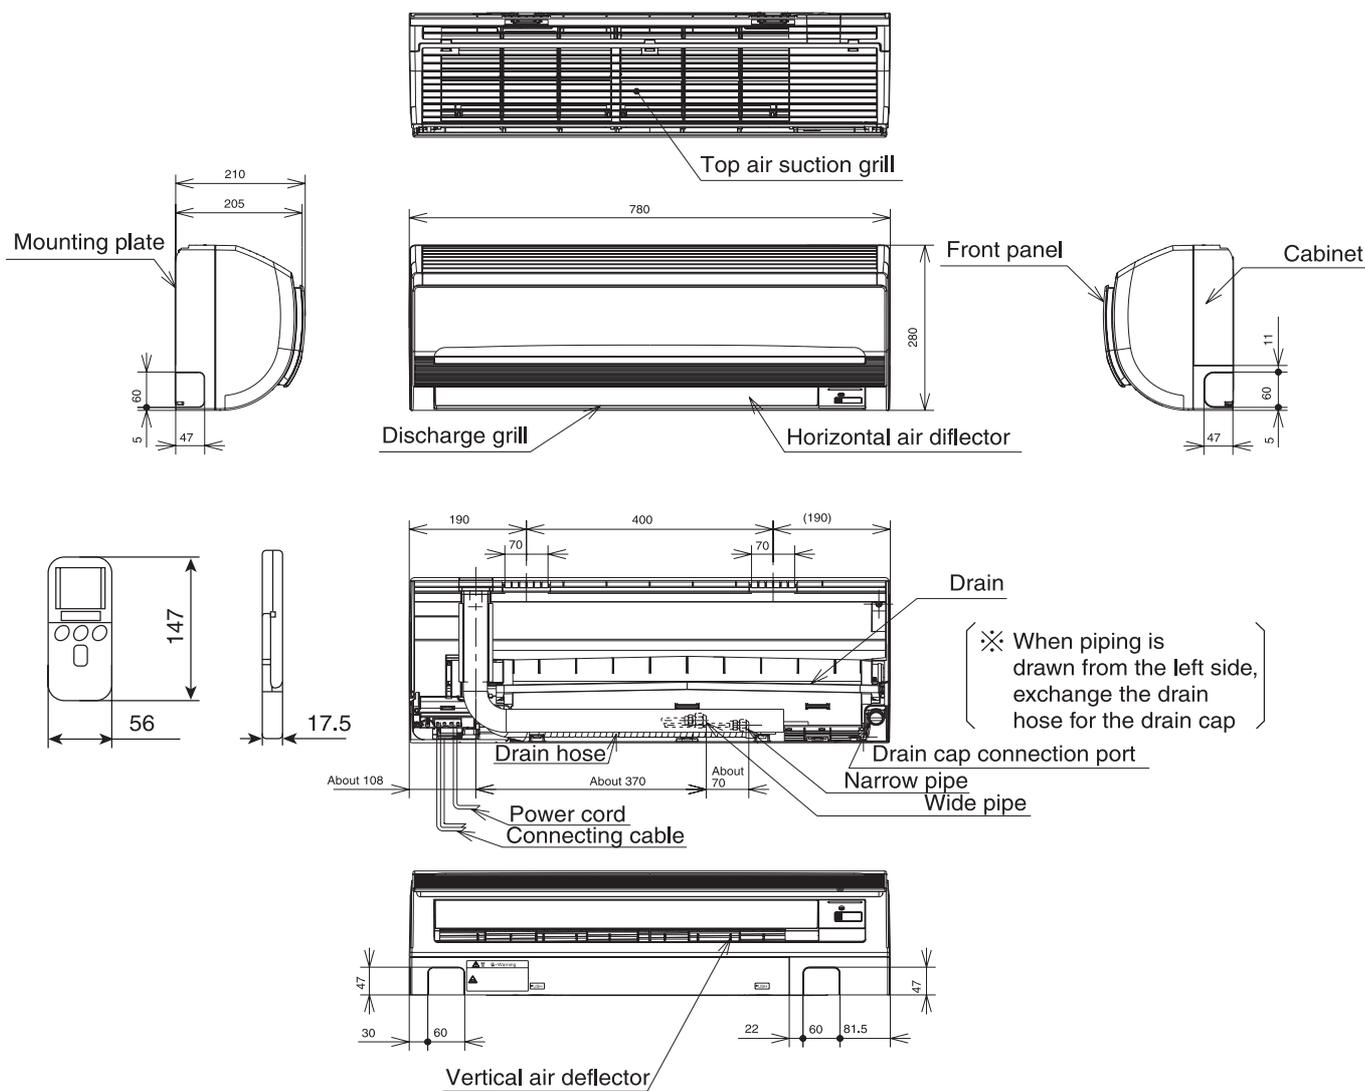

CONSTRUCTION AND DIMENSIONAL DIAGRAM FOR OUTDOOR MODEL RAC-25NH5, RAC-35NH5

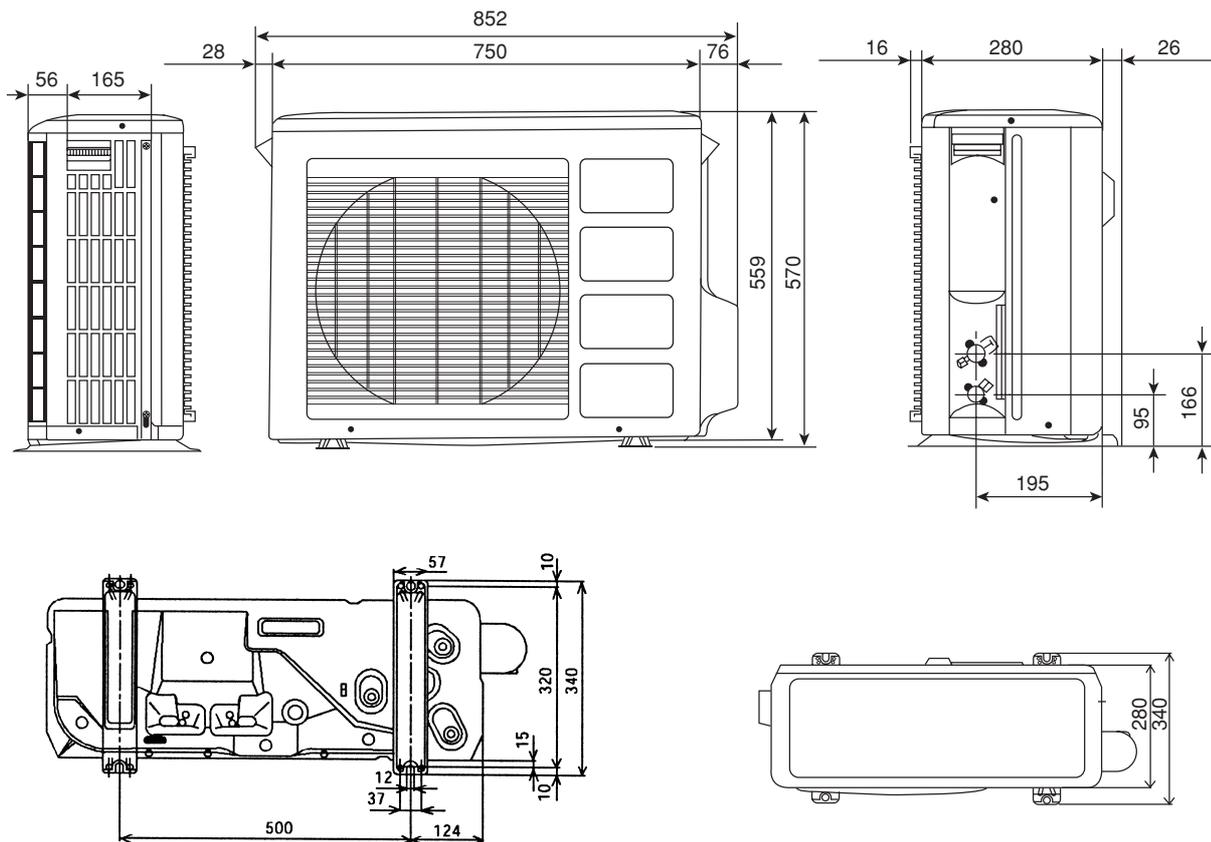

MAIN PARTS COMPONENT

THERMOSTAT

Thermostat Specifications

MODEL			RAK-25NH5, RAK-35NH5	
THERMOSTAT MODEL			IC	
OPERATION MODE			COOL	HEAT
TEMPERATURE °C (°F)	INDICATION 16	ON	16.7 (62.1)	20.0 (68.0)
		OFF	16.0 (60.8)	20.7 (69.3)
	INDICATION 24	ON	24.7 (76.5)	28.0 (82.4)
		OFF	24.0 (75.2)	28.7 (83.7)
	INDICATION 32	ON	32.7 (90.9)	36.0 (96.8)
		OFF	32.0 (89.6)	36.7 (98.1)

FAN MOTOR

Fan Motor Specifications

MODEL	RAK-25NH5, RAK-35NH5	RAC-25NH5, RAC-35NH5
POWER SOURCE	DC: 5V, 35V	DC360V
OUTPUT	25W	40W
CONNECTION	<p>(Control circuit built in)</p>	

BLU : BLUE

YEL : YELLOW

BRN : BROWN

WHT : WHITE

GRY : GRAY

ORN : ORANGE

GRN : GREEN

RED : RED

BLK : BLACK


PNK : PINK

VIO : VIOLET

COMPRESSOR MOTOR

Compressor Motor Specifications

MODEL	RAC-25NH5	RAC-35NH5
COMPRESSOR MODEL	JU1012D	
PHASE	SINGLE	
RATED VOLTAGE	AC 220 ~ 230 V	
RATED FREQUENCY	50 Hz	
POLE NUMBER	4	
CONNECTION		
RESISTANCE VALUE (Ω)	20°C (68°F)	2M = 1.05
	75°C (167°F)	2M = 1.28

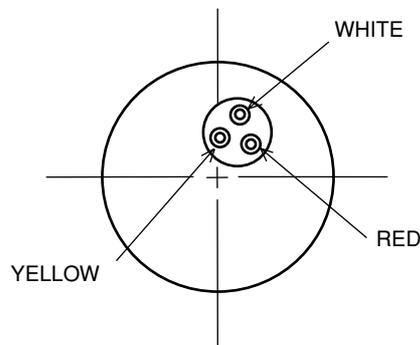


⚠ CAUTION

When the refrigerating cycle has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerating machine oil inside the compressor. If the color has been changed conspicuously, replace the compressor.


WIRING DIAGRAM

MODEL RAK-25NH5 / RAC-25NH5
RAK-35NH5 / RAC-35NH5

INDOOR UNIT

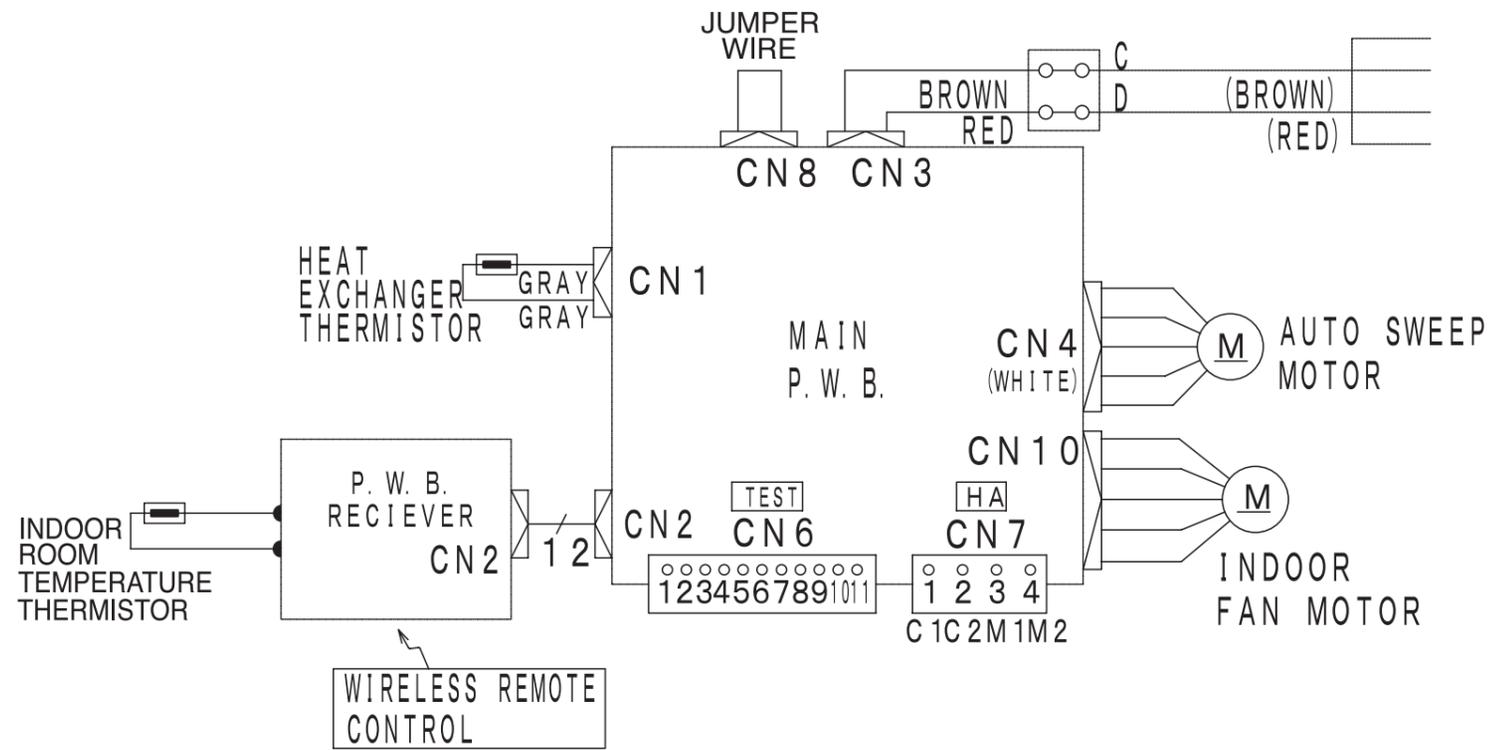


OUTDOOR UNIT

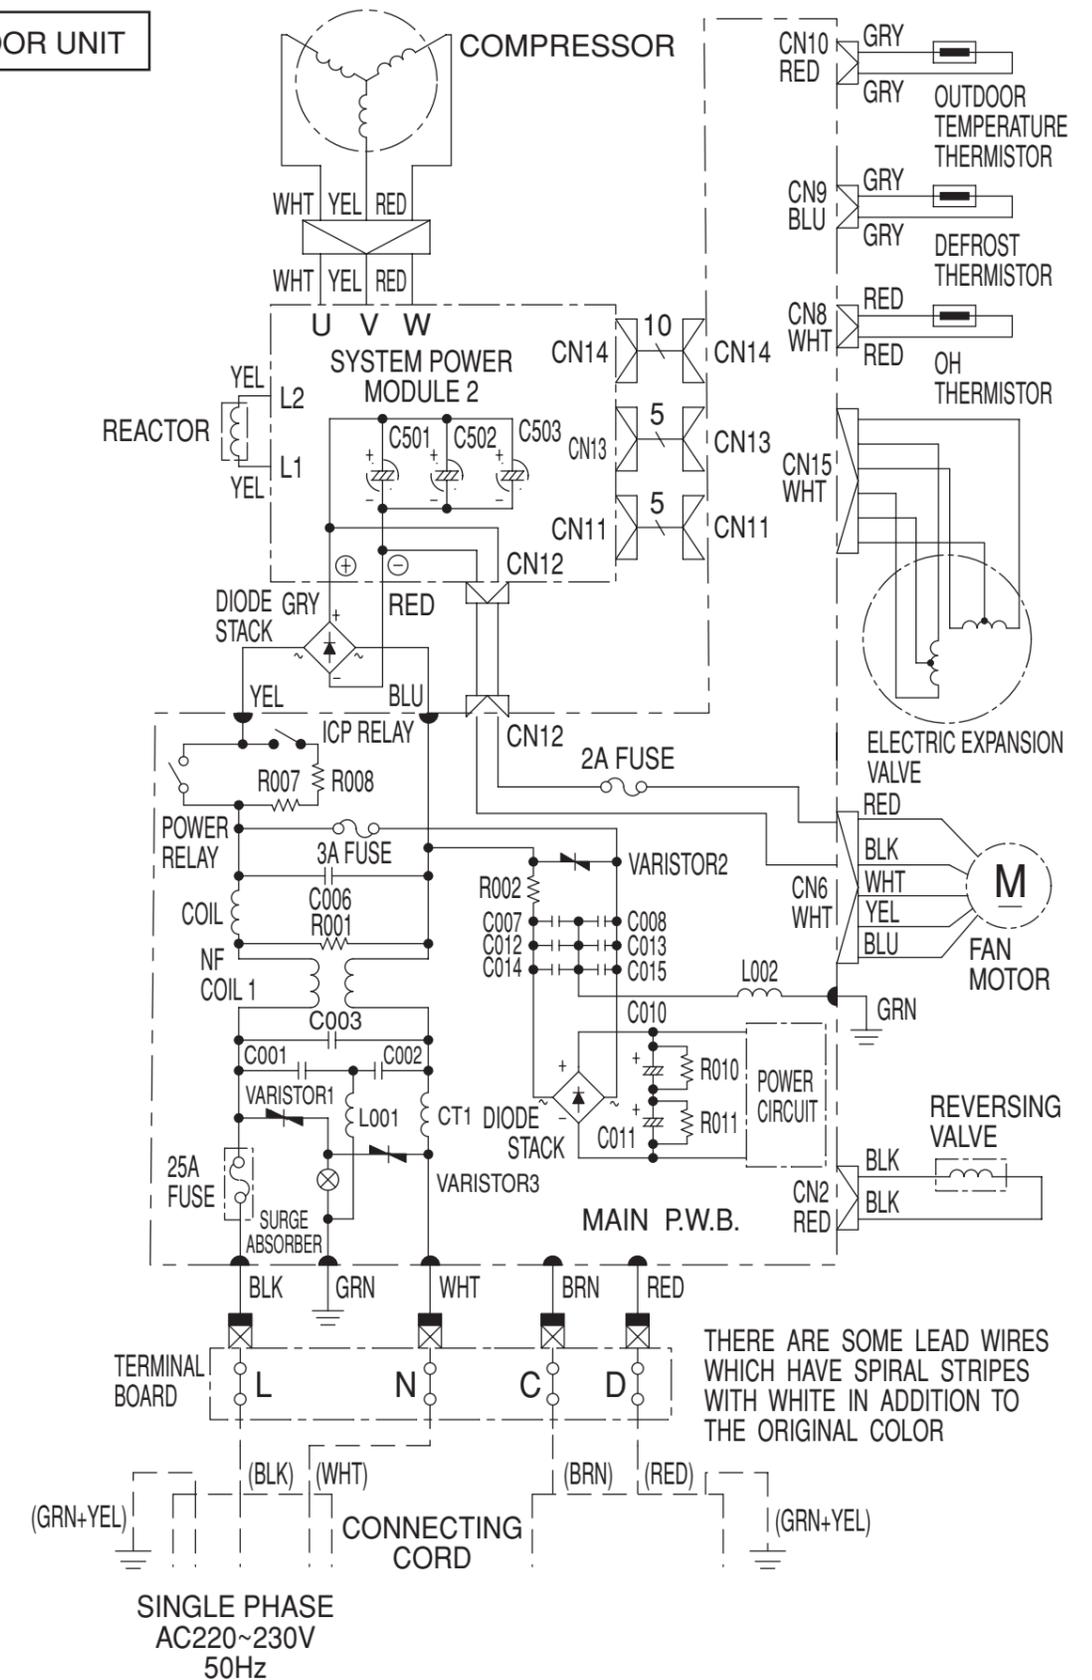

CIRCUIT DIAGRAM

MODEL RAK-25NH5, RAK-35NH5

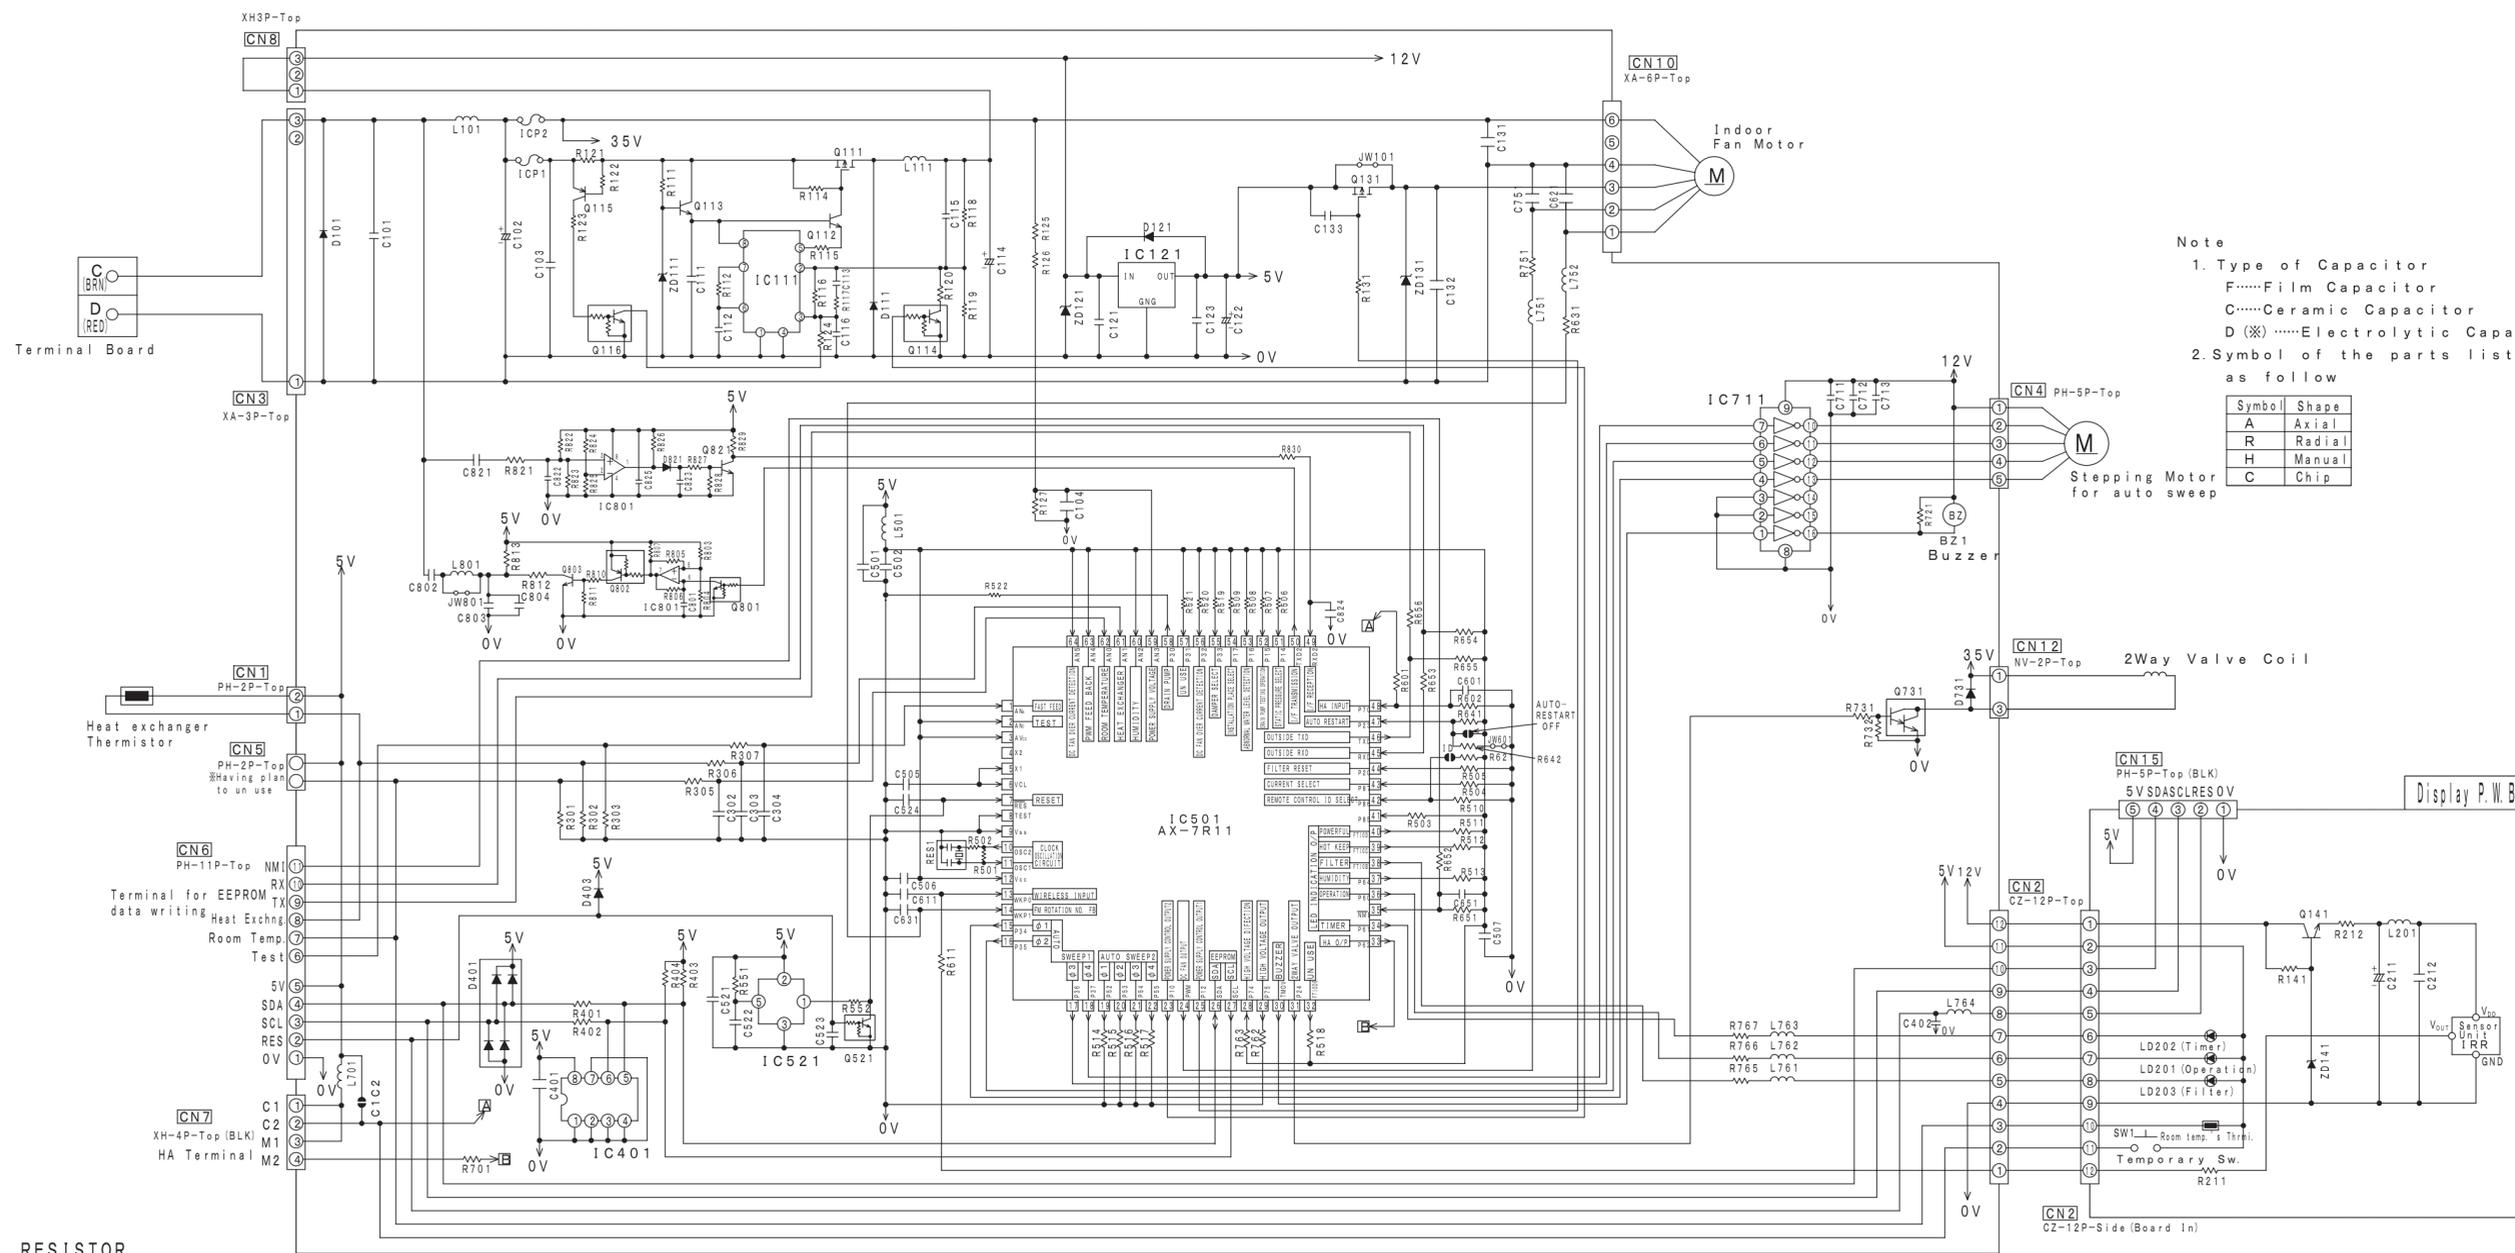

Note
 1. Type of Capacitor
 F.....Film Capacitor
 C.....Ceramic Capacitor
 D (X).....Electrolytic Capacitor
 2. Symbol of the parts list is as follow

Symbol	Shape
A	Axial
R	Radial
H	Manual
C	Chip

RESISTOR

Circuit's Symbol	Numerical Value	Power	Drawing's part's No.
R111	27K	±5% 1/16W 014 C	
R112	30K	±5% 1/16W 029 C	
R114	75Ω	±5% 1/8W 010 C	
R115	56Ω	±5% 1/8W 011 C	
R116	-	-	
R117	68K	±5% 1/16W 024 C	
R118	75K	±2% 1/16W 021 C	
R119	6.8k	±2% 1/16W 022 C	
R121	0.56	±5% 1/4W 008 C	
R122	100	±5% 1/16W 042 C	
R123	33K	±5% 1/16W 043 C	
R124	100	±5% 1/16W 042 C	
R125	30K	±5% 1/16W 029 C	
R126	30K	±5% 1/16W 029 C	
R127	5.1k	±5% 1/16W 040 C	
R131	5.1k	±5% 1/16W 020 C	
R141	2.7k	±5% 1/16W 015 C	
R211	1K	±5% 1/16W 033 C	
R212	4.7	±5% 1/16W 016 C	
R301	12.7k	±1% 1/16W 018 C	
R302	12.7k	±1% 1/16W 018 C	
R303	10K	±5% 1/16W 030 C	
R305	1K	±5% 1/16W 033 C	
R306	1K	±5% 1/16W 033 C	
R307	1K	±5% 1/16W 033 C	
R308	1K	±5% 1/16W 033 C	
R309	1K	±5% 1/16W 033 C	
R310	1K	±5% 1/16W 033 C	
R311	1K	±5% 1/16W 033 C	
R312	1K	±5% 1/16W 033 C	
R313	1K	±5% 1/16W 033 C	
R314	1K	±5% 1/16W 033 C	
R315	1K	±5% 1/16W 033 C	
R316	1K	±5% 1/16W 033 C	
R317	1K	±5% 1/16W 033 C	
R318	1K	±5% 1/16W 033 C	
R319	1K	±5% 1/16W 033 C	
R320	1K	±5% 1/16W 033 C	
R321	1K	±5% 1/16W 033 C	
R322	1K	±5% 1/16W 033 C	
R323	1K	±5% 1/16W 033 C	
R324	1K	±5% 1/16W 033 C	
R325	1K	±5% 1/16W 033 C	
R326	1K	±5% 1/16W 033 C	
R327	1K	±5% 1/16W 033 C	
R328	1K	±5% 1/16W 033 C	
R329	1K	±5% 1/16W 033 C	
R330	1K	±5% 1/16W 033 C	
R331	1K	±5% 1/16W 033 C	
R332	1K	±5% 1/16W 033 C	
R333	1K	±5% 1/16W 033 C	
R334	1K	±5% 1/16W 033 C	
R335	1K	±5% 1/16W 033 C	
R336	1K	±5% 1/16W 033 C	
R337	1K	±5% 1/16W 033 C	
R338	1K	±5% 1/16W 033 C	
R339	1K	±5% 1/16W 033 C	
R340	1K	±5% 1/16W 033 C	
R341	1K	±5% 1/16W 033 C	
R342	1K	±5% 1/16W 033 C	
R343	1K	±5% 1/16W 033 C	
R344	1K	±5% 1/16W 033 C	
R345	1K	±5% 1/16W 033 C	
R346	1K	±5% 1/16W 033 C	
R347	1K	±5% 1/16W 033 C	
R348	1K	±5% 1/16W 033 C	
R349	1K	±5% 1/16W 033 C	
R350	1K	±5% 1/16W 033 C	
R351	1K	±5% 1/16W 033 C	
R352	1K	±5% 1/16W 033 C	
R353	1K	±5% 1/16W 033 C	
R354	1K	±5% 1/16W 033 C	
R355	1K	±5% 1/16W 033 C	
R356	1K	±5% 1/16W 033 C	
R357	1K	±5% 1/16W 033 C	
R358	1K	±5% 1/16W 033 C	
R359	1K	±5% 1/16W 033 C	
R360	1K	±5% 1/16W 033 C	
R361	1K	±5% 1/16W 033 C	
R362	1K	±5% 1/16W 033 C	
R363	1K	±5% 1/16W 033 C	
R364	1K	±5% 1/16W 033 C	
R365	1K	±5% 1/16W 033 C	
R366	1K	±5% 1/16W 033 C	
R367	1K	±5% 1/16W 033 C	
R368	1K	±5% 1/16W 033 C	
R369	1K	±5% 1/16W 033 C	
R370	1K	±5% 1/16W 033 C	
R371	1K	±5% 1/16W 033 C	
R372	1K	±5% 1/16W 033 C	
R373	1K	±5% 1/16W 033 C	
R374	1K	±5% 1/16W 033 C	
R375	1K	±5% 1/16W 033 C	
R376	1K	±5% 1/16W 033 C	
R377	1K	±5% 1/16W 033 C	
R378	1K	±5% 1/16W 033 C	
R379	1K	±5% 1/16W 033 C	
R380	1K	±5% 1/16W 033 C	
R381	1K	±5% 1/16W 033 C	
R382	1K	±5% 1/16W 033 C	
R383	1K	±5% 1/16W 033 C	
R384	1K	±5% 1/16W 033 C	
R385	1K	±5% 1/16W 033 C	
R386	1K	±5% 1/16W 033 C	
R387	1K	±5% 1/16W 033 C	
R388	1K	±5% 1/16W 033 C	
R389	1K	±5% 1/16W 033 C	
R390	1K	±5% 1/16W 033 C	
R391	1K	±5% 1/16W 033 C	
R392	1K	±5% 1/16W 033 C	
R393	1K	±5% 1/16W 033 C	
R394	1K	±5% 1/16W 033 C	
R395	1K	±5% 1/16W 033 C	
R396	1K	±5% 1/16W 033 C	
R397	1K	±5% 1/16W 033 C	
R398	1K	±5% 1/16W 033 C	
R399	1K	±5% 1/16W 033 C	
R400	1K	±5% 1/16W 033 C	

Capacitor

Circuit's Symbol	Numerical Value (F)	Voltage	Drawing's part's No.
C101	0.22μ	50V F	082 R
C102	330μ	50V F	065 R
C103	470p	630V C	052 C
C104	0.1μ	25V C	045 C
C111	2.2μ	10V C	058 C
C112	1000P	50V C	047 C
C113	0.047μ	25V C	056 C
C114	220μ	25V C	066 R
C115	-	-	-
C116	-	-	-
C121	0.1μ	25V C	045 C
C122	100μ	10V F	068 R
C123	0.1μ	25V C	045 C
C131	0.22μ	25V C	045 C
C132	0.1μ	25V C	045 C
C133	0.1μ	25V C	045 C
C211	47μ	16V C	068 R
C212	1μ	16V C	049 C
C302	0.1μ	25V C	045 C
C303	0.1μ	25V C	045 C
C304	0.1μ	25V C	045 C
C401	0.1μ	25V C	045 C
C402	-	-	-

Transistor

Circuit's Symbol	Model	Drawing's part's No.
Q111	2S518	076 C
Q112	2SC5209H	074 C
Q113	2SC5209H	074 C
Q114	RN1102	078 C
Q115	2SA1162Y	079 C
Q116	RN1102	078 C
Q131	-	-
Q141	2SC2462LC	071 C
Q521	RN1102	078 C
Q731	-	-

Diode

Circuit's Symbol	Model	Drawing's part's No.
D101	DSM3MA2	091 C
D111	D1F56	092 C
D121	1SS355	095 C
D401	HN1D03FU	093 C
D403	1SS355	095 C
D731	-	-
D821	1SS355	095 C
D822	1SS355	095 C
D823	1SS355	095 C
D824	1SS355	095 C
D825	1SS355	095 C

IC

Circuit's Symbol	Model	Drawing's part's No.																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC111	NJM2340M	082 C																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC121	LFS0CDT	083 C																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC401	S-24C04BFJ	084 C																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC501	H0643685A20H (AX-7R11)	087 C																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC521	RN5V042C	089 C																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC711	ULN2003ANS	090 C																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC801	NJM2903M	085 C																																																																																																																																																																																																																																																																																																																																																																																																																																																											
IC802	IC803	IC804	IC805	IC806	IC807	IC808	IC809	IC810	IC811	IC812	IC813	IC814	IC815	IC816	IC817	IC818	IC819	IC820	IC821	IC822	IC823	IC824	IC825	IC826	IC827	IC828	IC829	IC830	IC831	IC832	IC833	IC834	IC835	IC836	IC837	IC838	IC839	IC840	IC841	IC842	IC843	IC844	IC845	IC846	IC847	IC848	IC849	IC850	IC851	IC852	IC853	IC854	IC855	IC856	IC857	IC858	IC859	IC860	IC861	IC862	IC863	IC864	IC865	IC866	IC867	IC868	IC869	IC870	IC871	IC872	IC873	IC874	IC875	IC876	IC877	IC878	IC879	IC880	IC881	IC882	IC883	IC884	IC885	IC886	IC887	IC888	IC889	IC890	IC891	IC892	IC893	IC894	IC895	IC896	IC897	IC898	IC899	IC900	IC901	IC902	IC903	IC904	IC905	IC906	IC907	IC908	IC909	IC910	IC911	IC912	IC913	IC914	IC915	IC916	IC917	IC918	IC919	IC920	IC921	IC922	IC923	IC924	IC925	IC926	IC927	IC928	IC929	IC930	IC931	IC932	IC933	IC934	IC935	IC936	IC937	IC938	IC939	IC940	IC941	IC942	IC943	IC944	IC945	IC946	IC947	IC948	IC949	IC950	IC951	IC952	IC953	IC954	IC955	IC956	IC957	IC958	IC959	IC960	IC961	IC962	IC963	IC964	IC965	IC966	IC967	IC968	IC969	IC970	IC971	IC972	IC973	IC974	IC975	IC976	IC977	IC978	IC979	IC980	IC981	IC982	IC983	IC984	IC985	IC986	IC987	IC988	IC989	IC990	IC991	IC992	IC993	IC994	IC995	IC996	IC997	IC998	IC999	IC1000	IC1001	IC1002	IC1003	IC1004	IC1005	IC1006	IC1007	IC1008	IC1009	IC1010	IC1011	IC1012	IC1013	IC1014	IC1015	IC1016	IC1017	IC1018	IC1019	IC1020	IC1021	IC1022	IC1023	IC1024	IC1025	IC1026	IC1027	IC1028	IC1029	IC1030	IC1031	IC1032	IC1033	IC1034	IC1035	IC1036	IC1037	IC1038	IC1039	IC1040	IC1041	IC1042	IC1043	IC1044	IC1045	IC1046	IC1047	IC1048	IC1049	IC1050	IC1051	IC1052	IC1053	IC1054	IC1055	IC1056	IC1057	IC1058	IC1059	IC1060	IC1061	IC1062	IC1063	IC1064	IC1065	IC1066	IC1067	IC1068	IC1069	IC1070	IC1071	IC1072	IC1073	IC1074	IC1075	IC1076	IC1077	IC1078	IC1079	IC1080	IC1081	IC1082	IC1083	IC1084	IC1085	IC1086	IC1087	IC1088	IC1089	IC1090	IC1091	IC1092	IC1093	IC1094	IC1095	IC1096	IC1097	IC1098	IC1099	IC1100	IC1101	IC1102	IC1103	IC1104	IC1105	IC1106	IC1107	IC1108	IC1109	IC1110	IC1111	IC1112	IC1113	IC1114	IC1115	IC1116	IC1117	IC1118	IC1119	IC1120	IC1121	IC1122	IC1123	IC1124	IC1125	IC1126	IC1127	IC1128	IC1129	IC1130	IC1131	IC1132	IC1133	IC1134	IC1135	IC1136	IC1137	IC1138	IC1139	IC1140	IC1141	IC1142	IC1143	IC1144	IC1145	IC1146	IC1147	IC1148	IC1149	IC1150	IC1151	IC1152	IC1153	IC1154	IC1155	IC1156	IC1157	IC1158	IC1159	IC1160	IC1161	IC1162	IC1163	IC1164	IC1165	IC1166	IC1167	IC1168	IC1169	IC1170	IC1171	IC1172	IC1173	IC1174	IC1175	IC1176	IC1177	IC1178	IC1179	IC1180	IC1181	IC1182	IC1183	IC1184	IC1185	IC1186	IC1187	IC1188	IC1189	IC1190	IC1191	IC1192	IC1193	IC1194	IC1195	IC1196	IC1197	IC1198	IC1199	IC1200	IC1201	IC1202	IC1203	IC1204	IC1205	IC1206	IC1207	IC1208	IC1209	IC1210	IC1211	IC1212	IC1213	IC1214	IC1215	IC1216	IC1217	IC1218	IC1219	IC1220	IC1221	IC1222	IC1223	IC1224	IC1225	IC1226	IC1227	IC1228	IC1229	IC1230	IC1231	IC1232	IC1233	IC1234	IC1235	IC1236	IC1237	IC1238	IC1239	IC1240	IC1241	IC1242	IC1243	IC1244	IC1245	IC1246	IC1247


PRINTED WIRING BOARD LOCATION DIAGRAM

MODEL RAK-25NH5, RAK-35NH5


MAIN P.W.B.

Marking on P.W.B.

COMPONENT SIDE

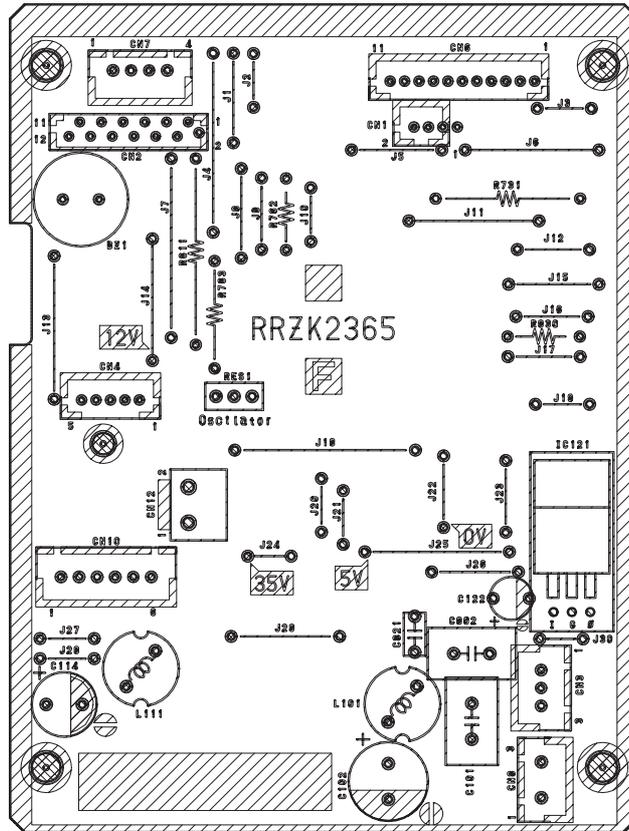


SOLDERING SIDE

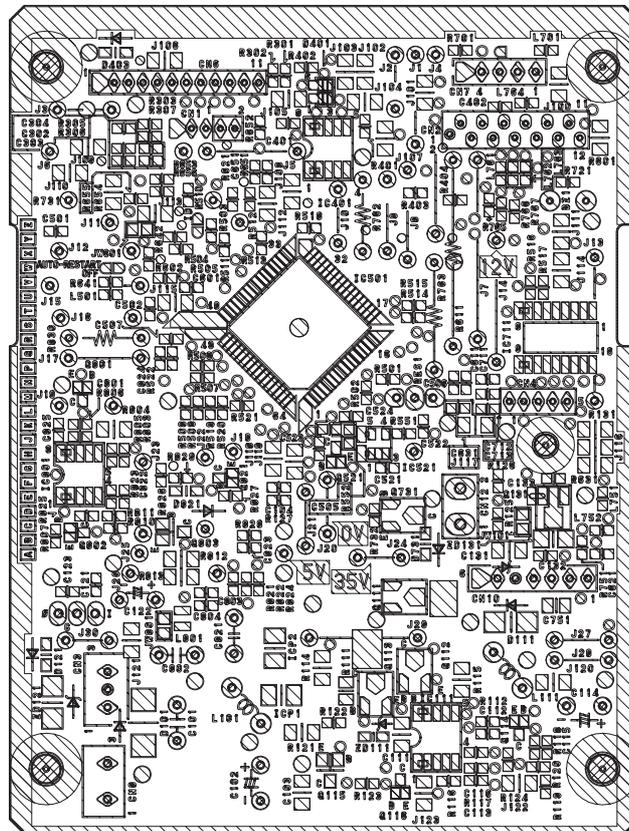

BLOCK DIAGRAM

MODEL RAK-25NH5 / RAC-25NH5
RAK-35NH5 / RAC-35NH5

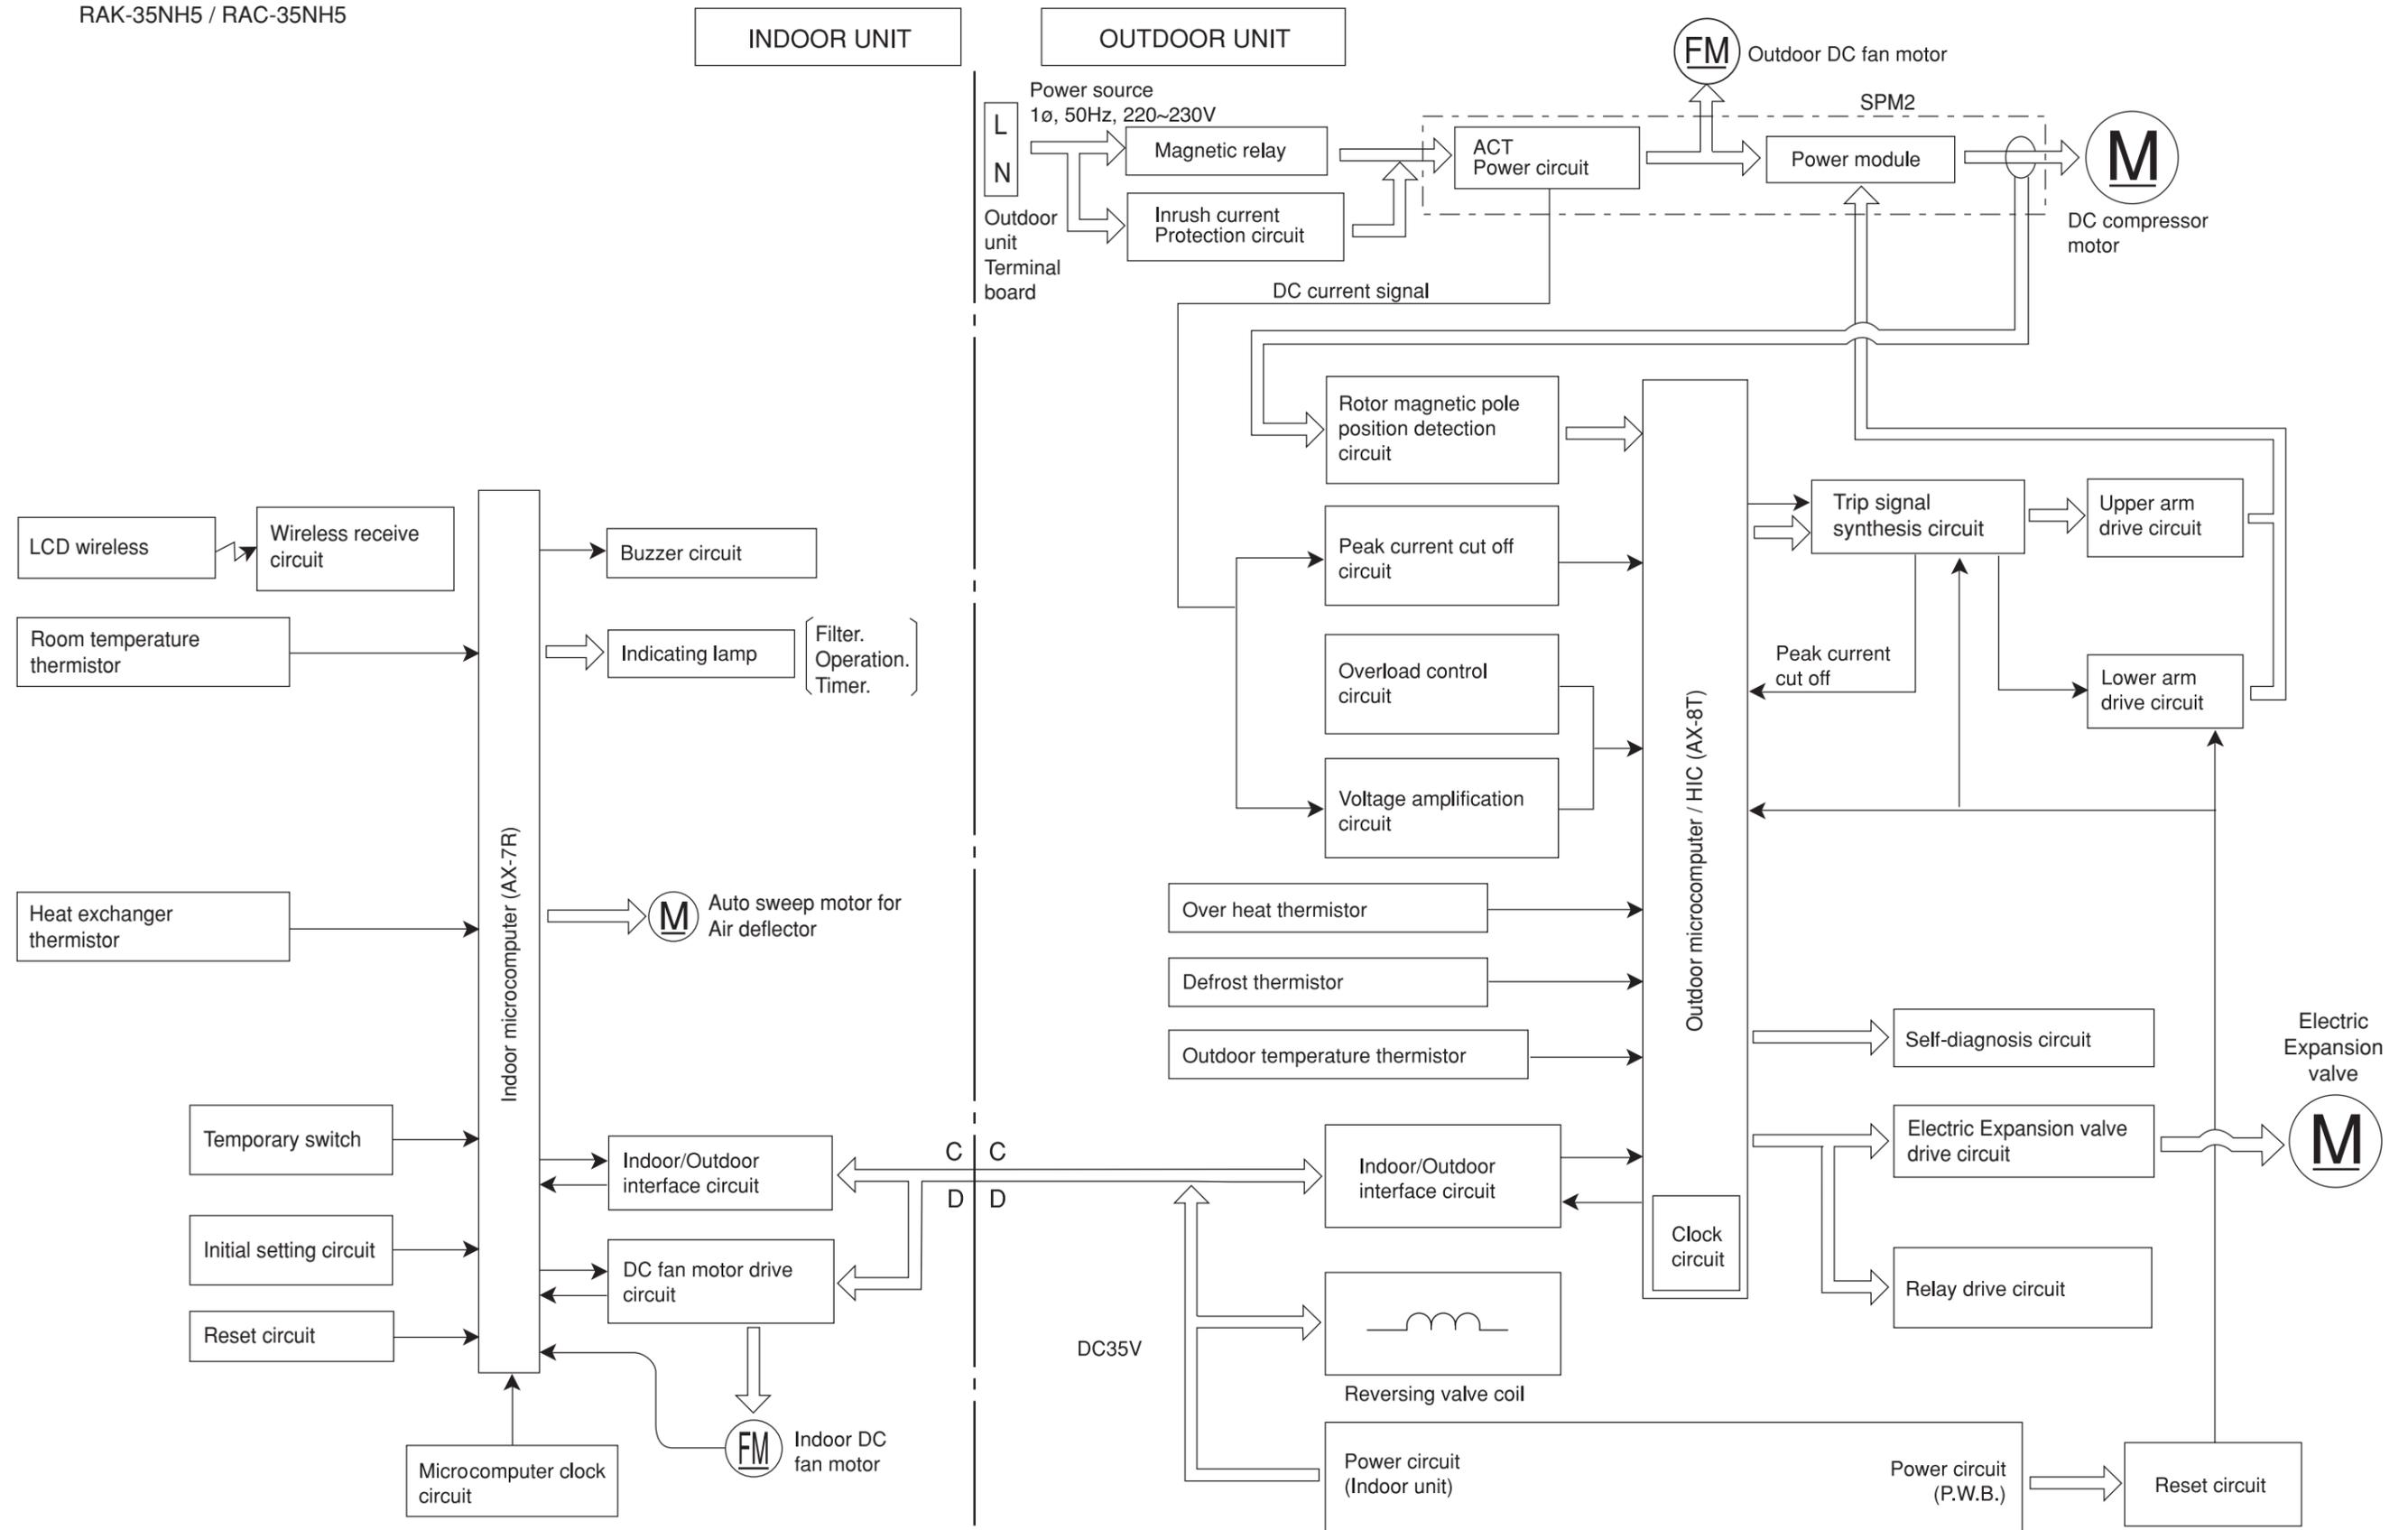

BASIC MODE

MODEL RAK-25NH5, RAK-35NH5

Operation mode	Fan	Cooling	Dehumidifying (dehumidifying operation by the function select button only, not including that engaged by the dehumidify button)	Heating	Auto										
Basic operation of start/stop switch															
Timer functions	Off-timer														
	On-timer														
	Off -> On On -> Off timer														
Fan speed mode (indoor fan)	Auto	<p>Changes from Hi to Med or Lo depending on room temperature.</p> <p>1. Runs at Hi until first thermo off after operation is started. 2. Runs at Lo when thermo is off.</p>	<p>Changes between Lo and Med depending on the room temperature.</p> <table border="1"> <thead> <tr> <th>Temperature division</th> <th>Fan speed</th> </tr> </thead> <tbody> <tr> <td>Division 1</td> <td>Lo</td> </tr> <tr> <td>Division 2</td> <td>Lo</td> </tr> <tr> <td>Division 3</td> <td>Med</td> </tr> <tr> <td>Division 4</td> <td>Med</td> </tr> </tbody> </table> <p>1. The indoor fan also stops when the compressor is in stop status.</p>	Temperature division	Fan speed	Division 1	Lo	Division 2	Lo	Division 3	Med	Division 4	Med	<p>Set to ultra-Lo, Lo, Med, Hi, ultra-Hi or stop depending on the room temperature, time and heat exchange temperature. Set to stop if the room temperature is 18.8°C in the ultra-Lo mode other than during preheating (cooling is recovered at 18.33°C).</p> <p>When the compressor is running at maximum speed during hot dash or when recovered from defrosting. In modes other than left</p>	<p>Operating mode is judged by room temperature and outdoor temperature.</p> <p>(1) Judging by outdoor temperature</p> <ul style="list-style-type: none"> Operating mode is judged by outdoor temperature. Only when the mode is not restricted by this judgment, the judgment by room temperature in the next paragraph will be performed. (a) Outdoor temperature $\geq 30\text{°C}$: Restricted to cooling (b) Outdoor temperature $\leq 9\text{°C}$: Restricted to heating <p>(2) Judging by room temperature</p> <p>Operating mode at start up is judged (initial judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> When auto operation is started after 1 hour has elapsed since the operation was stopped. When auto operation is started after the previous manual mode operation. When the operating mode is switched to auto while operating at manual mode. <p>(b) Judging method</p> <ul style="list-style-type: none"> Room temperature $\geq 23\text{°C}$ -3°C : Cooling Room temperature $< 23\text{°C}$ -3°C : Heating * -3°C is the fine adjustment value from the remote controller.
	Temperature division	Fan speed													
	Division 1	Lo													
	Division 2	Lo													
Division 3	Med														
Division 4	Med														
Hi	Operates at Hi regardless of the room temperature.	Set to ultra-Hi when the compressor runs at maximum speed, and to Hi in other modes.	Set to Hi in modes other than when the compressor stops.	Set to ultra-Lo, Lo, Med, Hi, ultra-Hi or stop depending on the room temperature, and time. Set to stop if the room temperature is 18.8°C in the ultra-Lo mode other than during preheating (cooling is recovered at 18.33°C). Set to ultra-Hi when the compressor is running at maximum speed during hot dash or when recovered from defrosting.	<p>Judging operating mode change during operation (Continuous judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> The mode is reviewed at every interval time. When auto operation is started again before 1 hour has elapsed since the operation was stopped. <p>(b) Judging method</p> <ul style="list-style-type: none"> Judge by setting the hysteresis on the final preset temperature. The final preset temperature is the actually targeted preset temperature which is the sum of the basic preset temperature and each type of shift value (e.g. -3°C by remote controller, preset temperature correction value, powerful shift value, etc.). <p>[Currently cooling]</p> <ul style="list-style-type: none"> Room temperature \leq Final preset temperature -3°C Change to heating Room temperature $>$ Final preset temperature -3°C Continue cooling <p>[Currently heating]</p> <ul style="list-style-type: none"> Room temperature \geq Final preset temperature +2°C Change to cooling Room temperature $<$ Final preset temperature +2°C Continue heating 										
Med	Operates at Med regardless of the room temperature.	Same as at left.	Set to Med in modes other than when the compressor stops.	Set to ultra-Lo, Lo, Med or stop depending on the room temperature and time. Set to stop if the room temperature is 18.8°C in the ultra-Lo mode other than during preheating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:											
Lo	Operates at Lo regardless of the room temperature.	Same as at left.	Set to Lo in modes other than when the compressor stops.	Set to ultra-Lo, Lo, or stop depending on the room temperature and time. Set to stop if the room temperature is 18.8°C in the ultra-Lo mode other than during preheating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:											
Basic operation of temperature controller	<p>Performs only fan operation at the set speed regardless of the room temperature.</p>	See page 49.	See page 53.	See page 55.											
Sleep operation (with sleep button ON)	<ul style="list-style-type: none"> Enters sleep operation after set as on the left. Action during sleep operation Lo (sleep) operation 	<ul style="list-style-type: none"> Same as at left See page 51. 	<ul style="list-style-type: none"> Same as at left See page 53. 	<ul style="list-style-type: none"> Same as at left See page 57. 	<ul style="list-style-type: none"> Same as at left. Performs the sleep operation of each operation mode. 										

MODEL		RAK-25NH5	RAK-35NH5
PROM NO.	LABEL NAME	REQUIRED VALUE OF UNIT SIDE	REQUIRED VALUE OF UNIT SIDE
0A2	RTOTSA	0°C	0°C
120	WMAX_M	5300	5000 min-1
121	WMAX2_M	5300	5000 min-1
122	WSTD_M	4000	4000 min-1
123	WJKMAX_M	3700	3700 min-1
124	WBEMAX_M	3500	3500 min-1
127	CMAX_M	3300 min-1	4300 min-1
128	CMAX2_M	3300 min-1	3700 min-1
129	CSTD_M	3250 min-1	3150 min-1
12A	CKYMAX_M	2800 min-1	2800 min-1
12B	CJKMAX_M	2750 min-1	2750 min-1
12C	CBEMAX_M	2500 min-1	2500 min-1
12F	SDMAX_M	2400 min-1	1550 min-1
130	SDRPM_M	2100 min-1	1400 min-1
138	WMIN_M	800 min-1	800 min-1
139	CMINHI_M	800 min-1	800 min-1
13A	CMIN_M	1200 min-1	1200 min-1
13B	DMIN_M	1200 min-1	1200 min-1
13C	PKOU_M	550 min-1	550 min-1
13D	FZZY_GN_M	1.5	1.5
13E	FZZYTM_M	4 min	4 min
144	SHIFTW_M	2 °C	2 °C
145	SFTSZW_M	2 °C	2 °C
146	SHIFTC_M	1.33 °C	1.33 °C
147	SHIFTD_M	3.33 °C	3.33 °C
148	CLMXTP_M	30 °C	30 °C
149	YNEOF_M	25 °C	25 °C
14E	TEION_M	2 °C	2 °C
14F	TEIOF_M	9 °C	- °C
157	CMNLMT_M	0 min-1	0 min-1
178	FWSS_M	500 min-1	500 min-1
179	FWSOY_M	600 min-1	700 min-1
17A	FWS_M	750 min-1	820 min-1
17B	FWKAF_M	850 min-1	920 min-1
17C	FWL_M	850 min-1	920 min-1
17D	FWAH_M	1050 min-1	1120 min-1
17E	FWH_M	1050 min-1	1120 min-1
17F	FWHH_M	1170 min-1	1250 min-1
180	FCSOY_M	600 min-1	680 min-1
181	FCS_M	750 min-1	780 min-1
182	FCL_M	870 min-1	950 min-1
183	FCAH_M	980 min-1	1030 min-1
184	FCH_M	1030 min-1	1170 min-1
185	FCHH_M	1030 min-1	1200 min-1
186	FDOY_M	600 min-1	680 min-1
187	FDS1_M	750 min-1	780 min-1
188	FDS2_M	750 min-1	780 min-1


Table 1 Fan speed by mode

Operation mode	Fan speed mode		Label name
Heating operation	Ultra Lo		FWSS_M
	Sleep		FWSOY_M
	Lo		FWS_M
	Overload		FWKAF_M
	Med		FWL_M
	Hi	Set fan speed "AUTO"	FWAH_M
	Hi	Set fan speed "Hi"	FWH_M
	Ultra Hi		FWHH_M
Cooling operation	Sleep		FCSOY_M
	Lo		FCS_M
	Med		FCL_M
	Hi	Set fan speed "AUTO"	FCAH_M
	Hi	Set fan speed "Hi"	FCH_M
	Ultra Hi		FCHH_M
Dehumidifying operation	Sleep		FDOY_M
	Lo 1		FDS1_M
	Lo 2		FDS2_M

Table 2 Room temperature shift value

Operation mode	Fan speed mode	Shift value
Heating operation	Fan speed "AUTO, Hi, Med"	SHIFTW_M
	Fan speed "Lo, Sleep"	SFTSZW_M
Cooling operation		SHIFTC_M
Dehumidifying operation		SHIFTD_M

Basic Cooling Operation

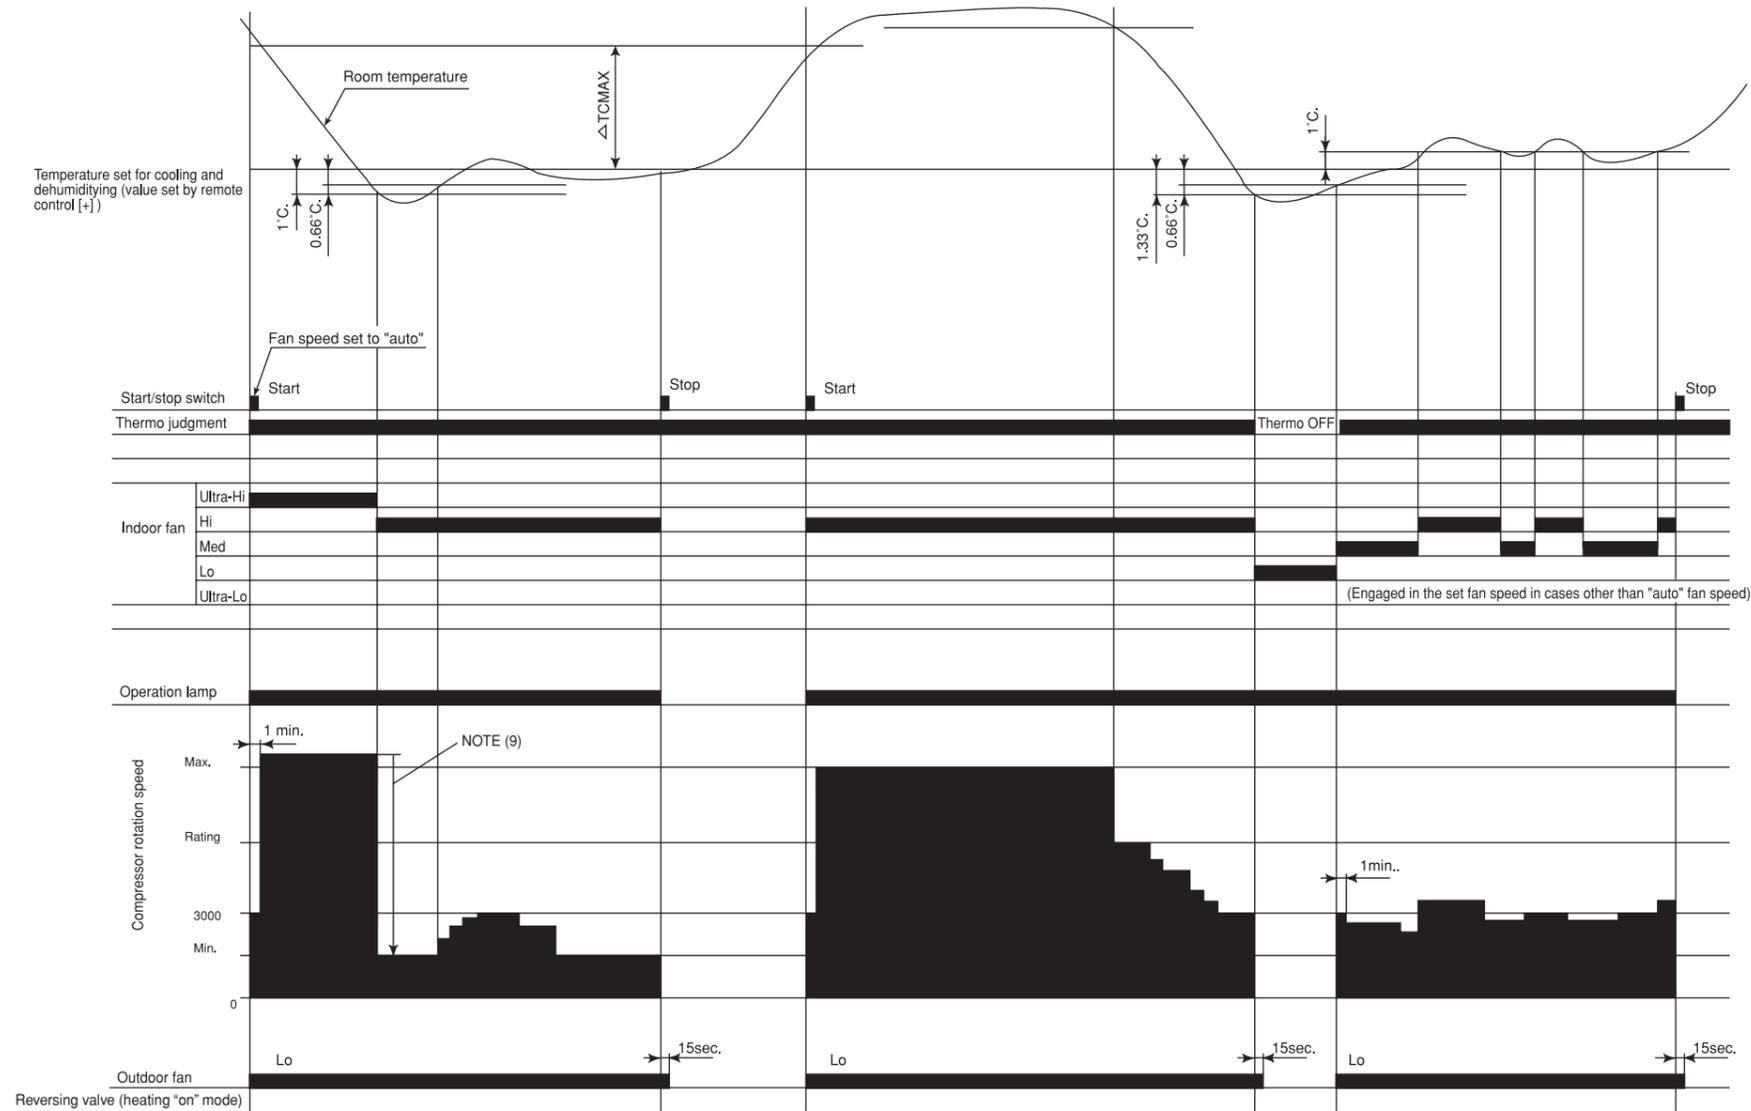

Notes:

- (1) Condition for entering into Cool Dashed mode. When fan set to "Hi" or "Auto mode" and temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 7) larger than WMAX.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature -3°C (thermo off) and iii) when room temperature has achieved setting temperature -1°C then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- (3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value) -3°C . After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTTP. No time constrain if indoor temperature is higher than CLMXTTP.
- (6) When fan is set to "Hi", compressor rpm will be limited to CKYMAX.
- (7) When fan is set to "Med", compressor rpm will be limited to CJKMAX.
- (8) When fan is set to "Lo", compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature -1°C compressor rpm is actual rpm x DWRATEC.


Table 2 ΔTCMAX

Temperature difference	Calculated compressor rpm
1.66	2265 min ⁻¹
2	2435 min ⁻¹
2.33	2600 min ⁻¹
2.66	2765 min ⁻¹
3	2935 min ⁻¹
3.33	3100 min ⁻¹
3.66	3265 min ⁻¹
4	3435 min ⁻¹
4.33	3600 min ⁻¹
4.66	3765 min ⁻¹
5	3935 min ⁻¹
5.33	4100 min ⁻¹
5.66	4265 min ⁻¹
6	4435 min ⁻¹
6.33	4600 min ⁻¹
6.66	4765 min ⁻¹
7	4935 min ⁻¹
7.33	5100 min ⁻¹
7.66	5265 min ⁻¹
8	5435 min ⁻¹
8.33	5600 min ⁻¹
8.66	5765 min ⁻¹
9	5935 min ⁻¹
9.33	6100 min ⁻¹
9.66	6265 min ⁻¹
10	6435 min ⁻¹
10.33	6600 min ⁻¹
10.66	6765 min ⁻¹
11	6935 min ⁻¹

Note:

1. See the data in Table 1 on page 47 for each constant in capital letters in the diagrams.


New Cool Rhythm

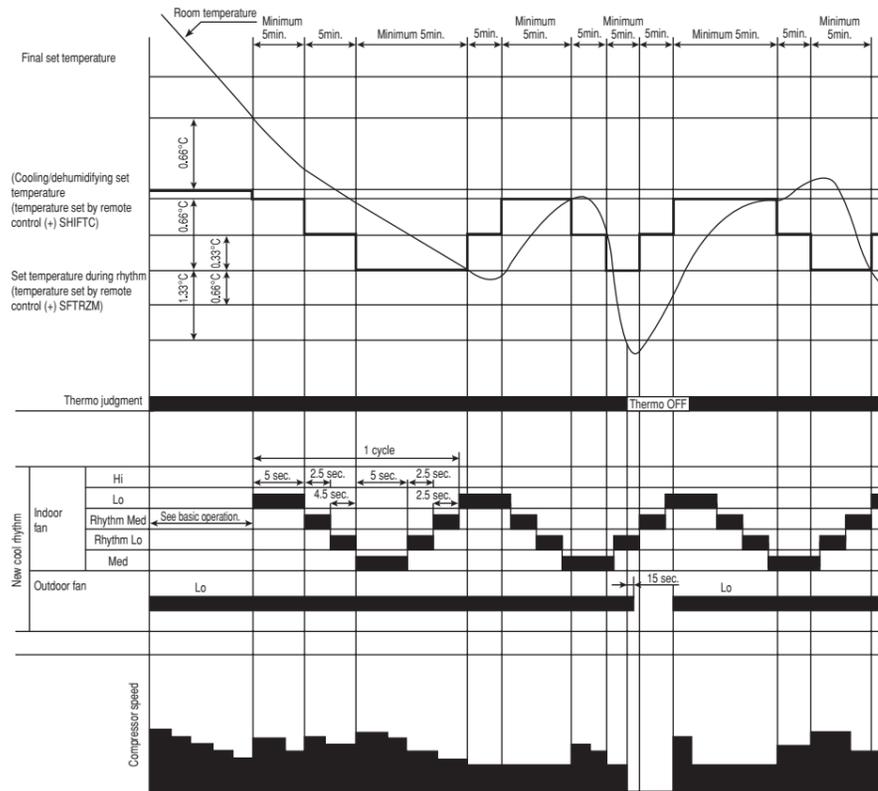


Notes:

- (1) New cool rhythm is engaged when the fan speed is "auto" and the room temperature is less than set one plus 0.66°C in the "auto" operation mode or cooling mode.
- (2) The minimum new cool rhythm time is 10 minutes when the temperature falls and rises.
- (3) Cool rhythm is not engaged during Nice temperature, Sleep operation.
- (4) PI control is engaged during new cool rhythm: the speed limit is the same as during normal operation.
- (5) The new cool rhythm set temperature is also shifted during thermo OFF.

Cooling Defrost

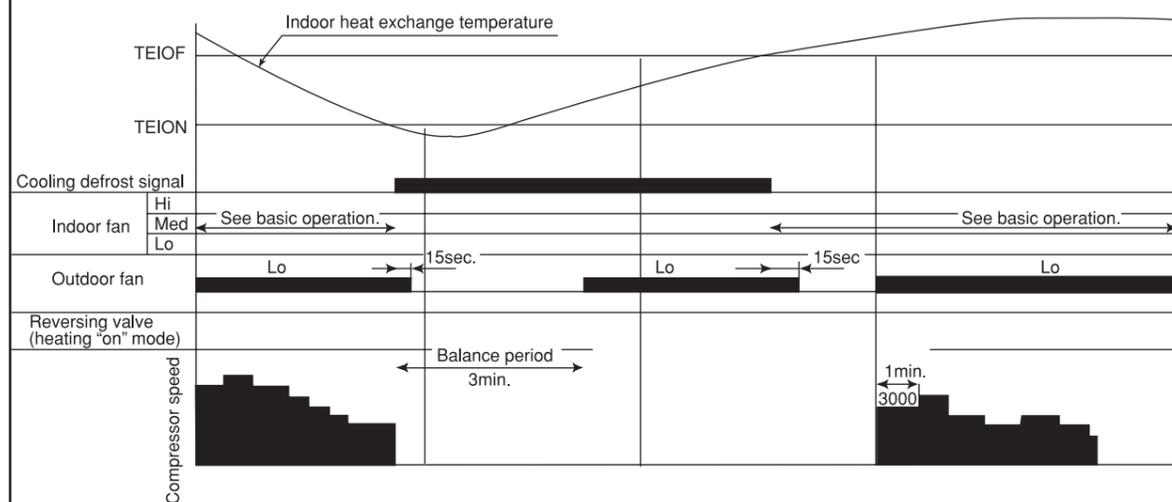


Cooling Sleep Operation

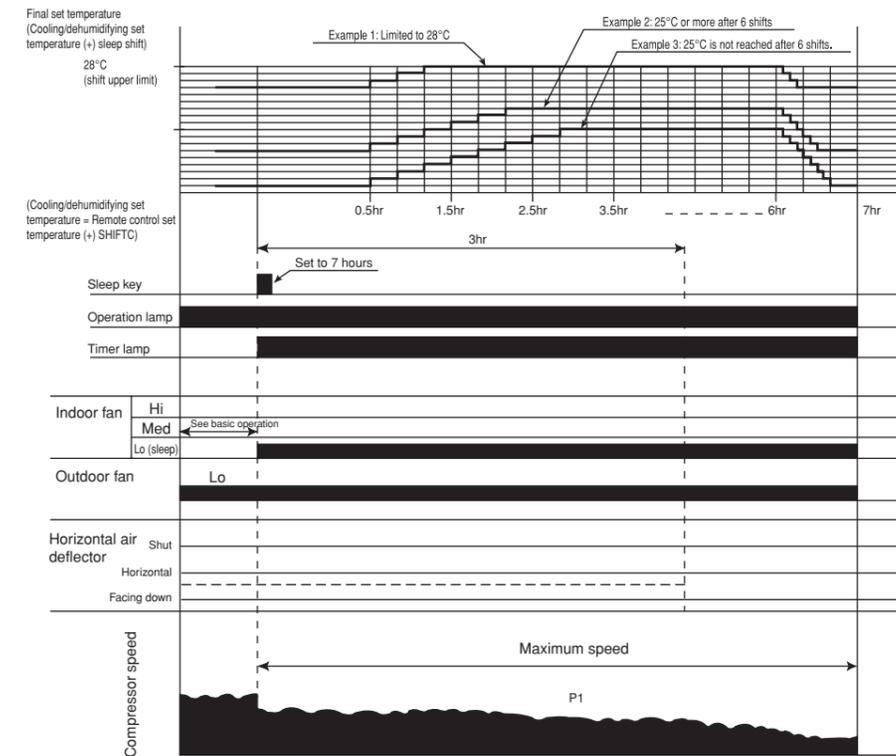

Notes:

- (1) The sleep operation starts when the sleep key is pressed.
- (2) When the sleep key is set, the maximum compressor speed is limited, and the indoor fan is set to "sleep Lo".
- (3) 30 minutes after the sleep key is set, the sleep shift of temperature starts, and upper shift is made at least 6 times. If 25°C is not reached after 6 shifts, shifts repeat unit 25°C is reached.
- (4) The sleep shift upper value of set temperature is 28°C.
- (5) After 6 hours, a shift down to the initial set temperature is made at a rate of 0.33°C/5 min.
- (6) If the operation mode is changed during sleep operation, the set temperature is cleared, and shift starts from the point when switching is made.
- (7) The indoor fan speed does not change even when the fan speed mode is changed.
- (8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
- (9) If the set lime is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.
- (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.


Dehumidifying

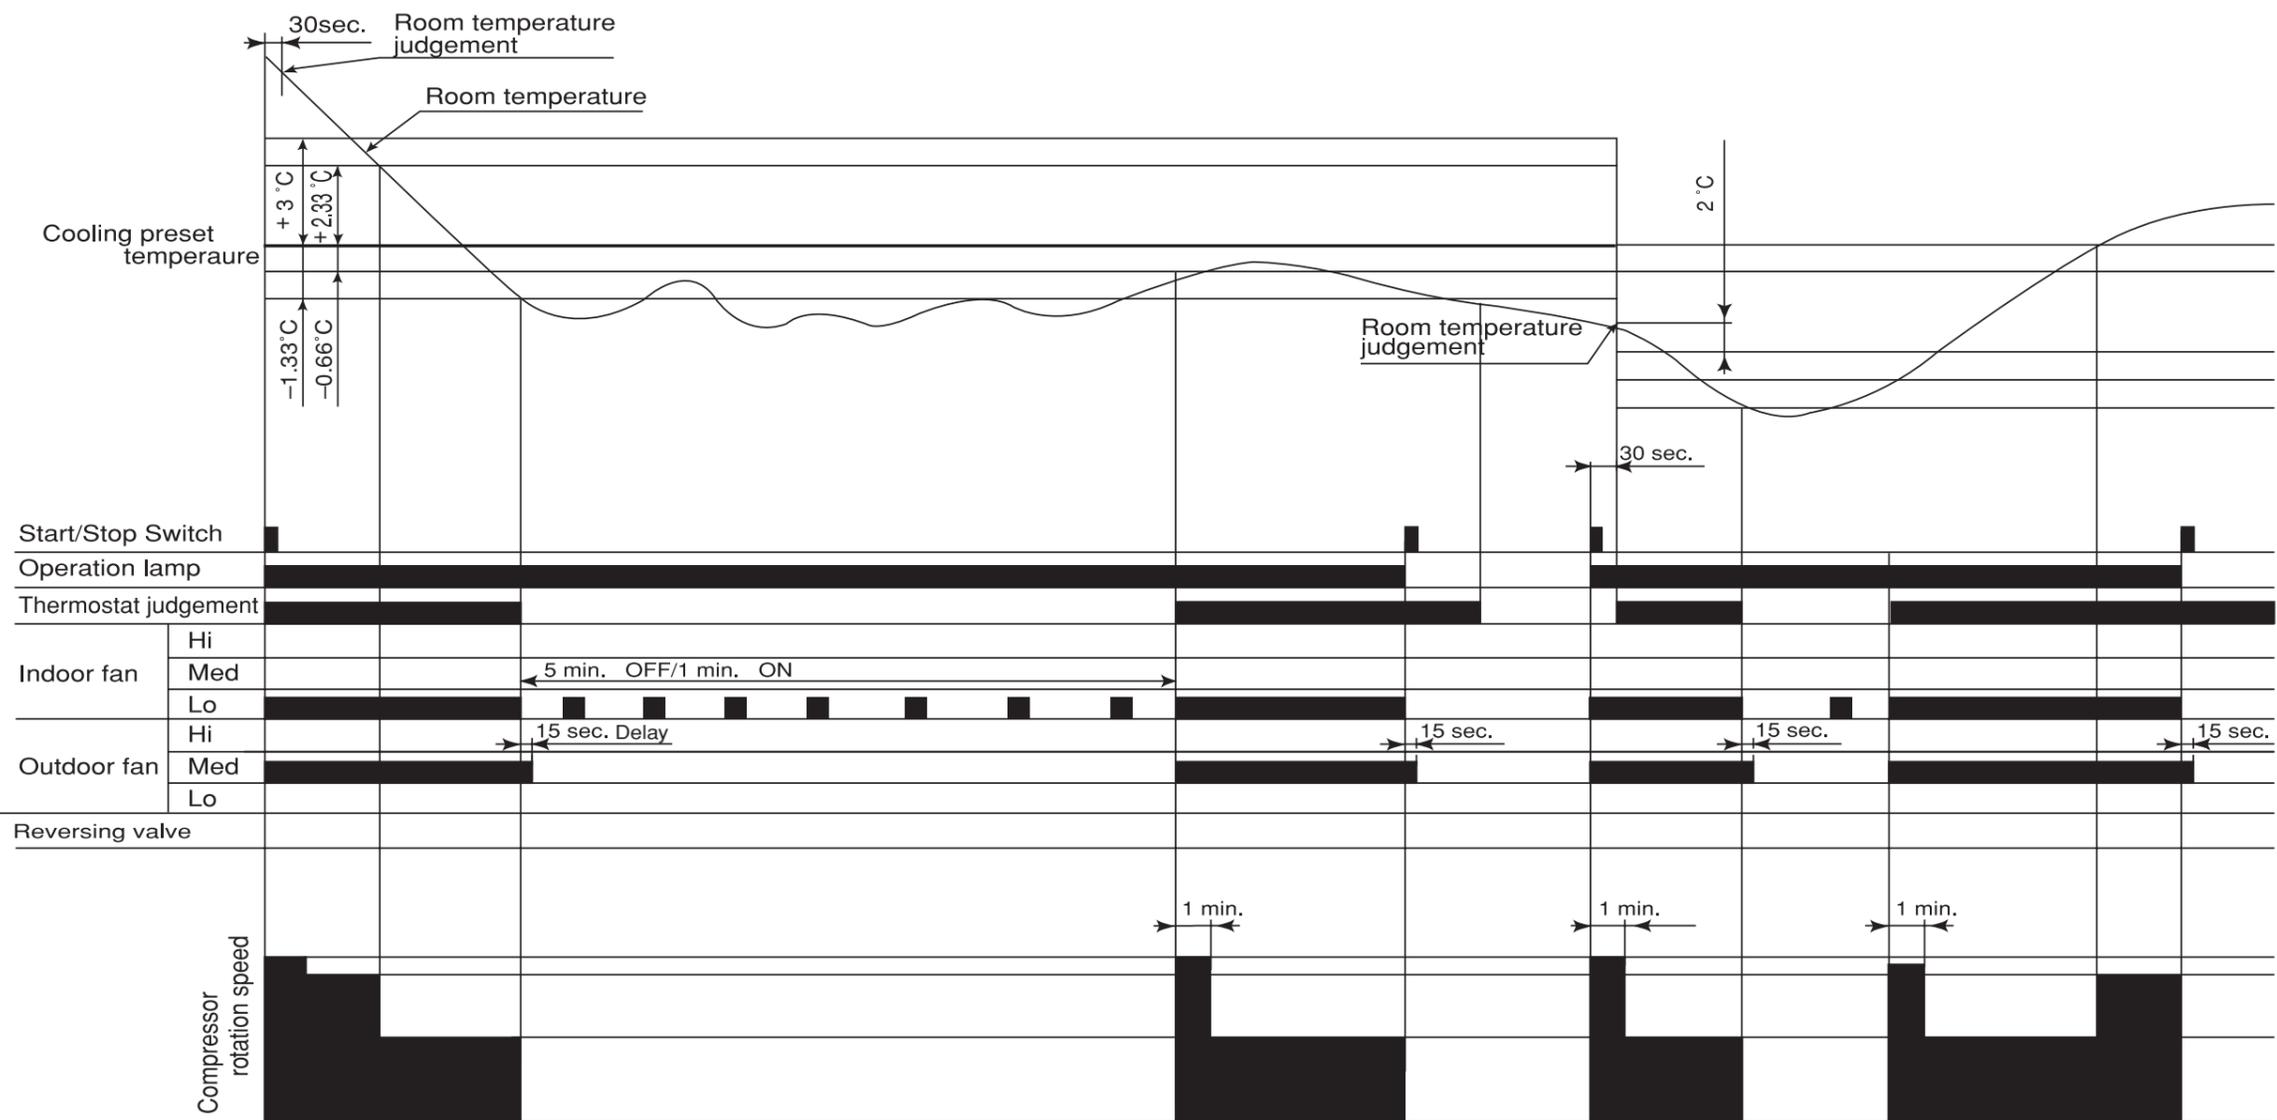

Notes:

- (1) If the room temperature is (cooling preset temperature) - (1.33°C) or less after 30 seconds from starting the operation, the operation is done assuming as the preset temperature = (room temperature at the time) - (2°C).
- (2) The indoor fan is operated in the "Lo" mode. During thermo OFF indoor fan will be OFF for 5 minutes and ON for 1 minute.
- (3) When the operation is started by the thermostat turning ON, the start of the indoor fan is delayed 32 seconds after the start of compressor operation.
- (4) The compressor is operated forcedly for 3 minutes after operation is started.
- (5) The minimum ON time and OFF time of the compressor are 3 minutes.

Basic Heating Operation

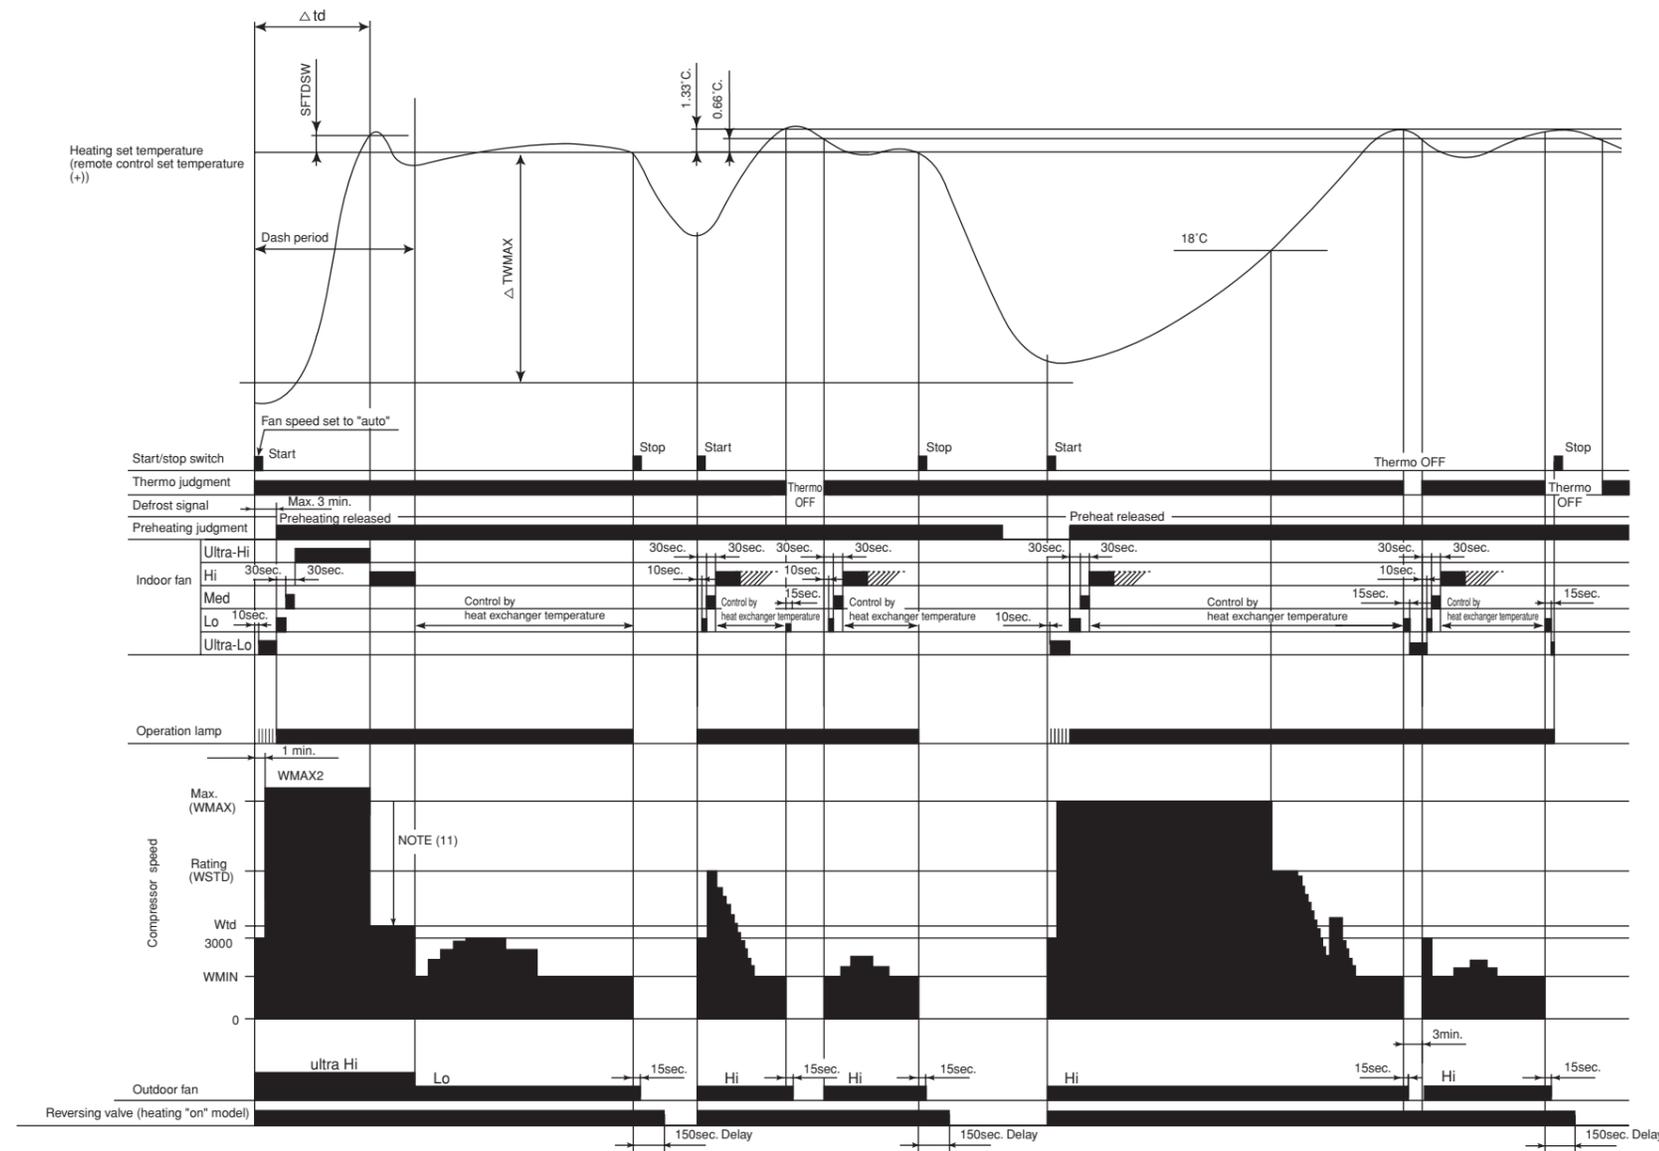

Notes:

- (1) Condition for entering into Hot Dashed mode. When fan set to “Hi” or “Auto mode” and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
- (2) Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off.
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum “ON” time and “OFF” time is 3 minutes.
- (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if indoor temperature is lower than 18°C and outdoor temperature is lower than 2°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 3 seconds “ON” and 0.5 second “OFF”.
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- (8) When fan is set to “Med” or “Lo”, compressor rpm will be limited to WBEMAX.
- (9) In “Ultra-Lo” fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in “Ultra-Lo” mode. During Hotkeep or Defrost mode, fan will continue in “Ultra-Lo” mode.
- (10) During Hot Dashed or outdoor temperature is lower than -5°C, compressor rpm is WMAX2.
- (11) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.


Table 3 ΔTWMAX

Temperature difference	Calculated compressor rpm
1.66	1965 min ⁻¹
2	2135 min ⁻¹
2.33	2300 min ⁻¹
2.66	2465 min ⁻¹
3	2635 min ⁻¹
3.33	2800 min ⁻¹
3.66	2965 min ⁻¹
4	3135 min ⁻¹
4.33	3300 min ⁻¹
4.66	3465 min ⁻¹
5	3635 min ⁻¹
5.33	3800 min ⁻¹
5.66	3965 min ⁻¹
6	4135 min ⁻¹
6.33	4300 min ⁻¹
6.66	4465 min ⁻¹
7	4635 min ⁻¹
7.33	4800 min ⁻¹
7.66	4965 min ⁻¹
8	5135 min ⁻¹
8.33	5300 min ⁻¹
8.66	5465 min ⁻¹
9	5635 min ⁻¹
9.33	5800 min ⁻¹
9.66	5965 min ⁻¹
10	6135 min ⁻¹
10.33	6300 min ⁻¹
10.66	6465 min ⁻¹
11	6635 min ⁻¹

Notes:


1. See the data in Table 1 on page 47 for each constant in capital letters in the diagrams.

Reversing Valve Defrosting

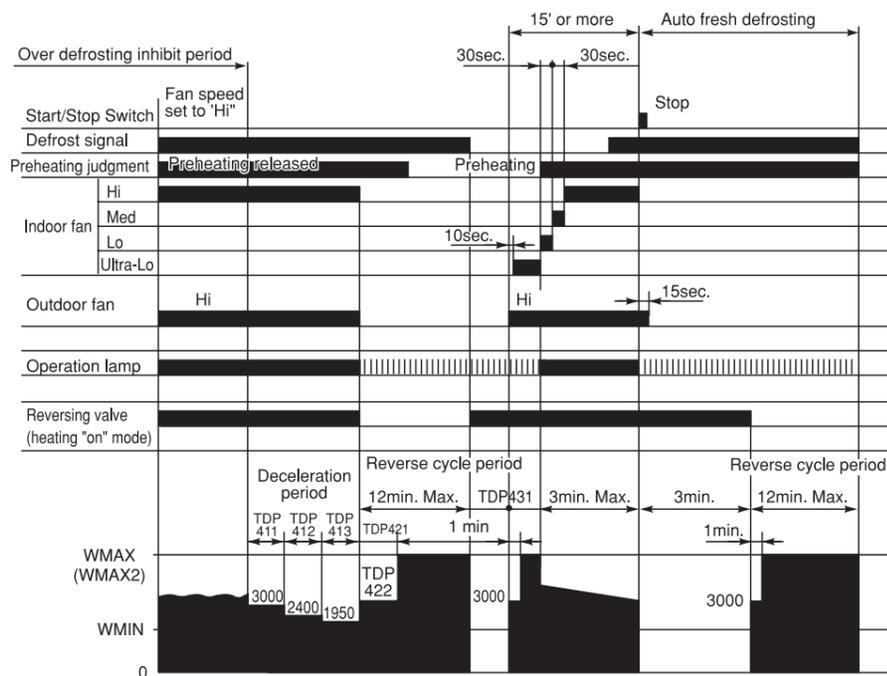


- Notes:
- (1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.
 - (2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
 - (3) The defrosting period is 12 minutes maximum.
 - (4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.
 - (5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.

Setting Defrosting Inhibit Period

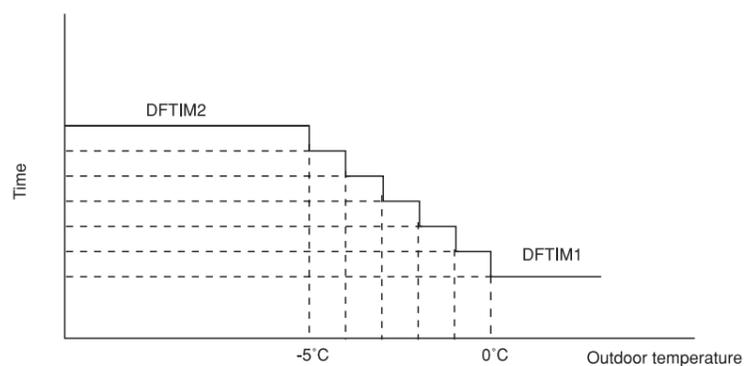

- Notes:
- (1) The time is set according to the outdoor temperature when it is between 0°C and -5°C.
 - (2) DFTIM1 is used when the outdoor temperature $\geq 0^\circ\text{C}$.
 - (3) DFTIM2 is used when the outdoor temperature $\leq -5^\circ\text{C}$.

Heating Sleep Operation


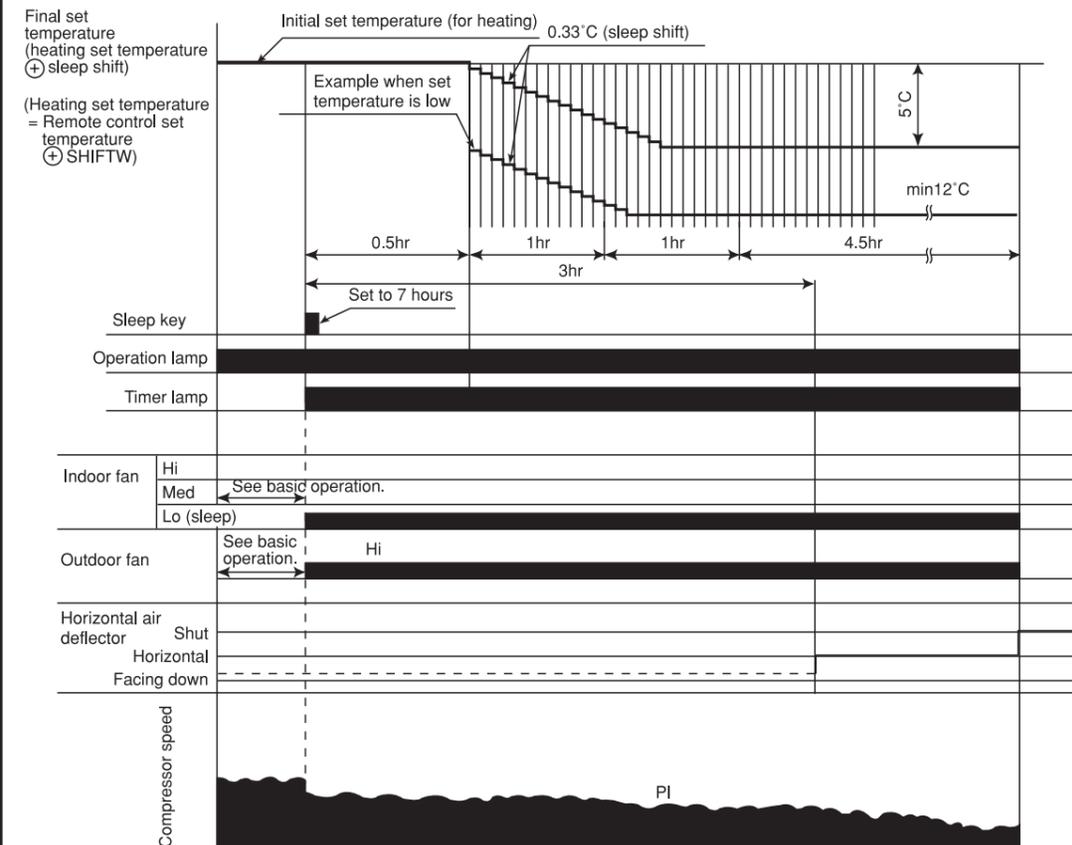


- Notes:
- (1) The sleep operation starts when the sleep key is pressed.
 - (2) When the sleep key is set, the maximum compressor speed is limited to WSTD+2000/2, and the indoor fan is set to "sleep Lo".
 - (3) 30 minutes after the sleep key is set, the sleep shift of set temperature starts.
 - (4) The maximum sleep shift of set temperature is 5°C, and the minimum is 12°C.
 - (5) If the operation mode is changed during sleep operation, the changed operation mode is set and sleep control starts.
 - (6) The indoor fan speed does not change even when the fan speed mode is changed. (Lo)
 - (7) When defrosting is to be set during sleep operation, defrosting is engaged and sleep operation is restored after defrosting.
 - (8) When operation is stopped during sleep operation, the set temperature when stopped, as well as the time, continue to be counted.
 - (9) If the set time is changed during sleep operation, all data including set temperature, time, etc. is cleared and restarted.
 - (10) If sleep operation is canceled by the cancel key or sleep key, all data is cleared.

REFRIGERATING CYCLE DIAGRAM

MODEL RAK-25NH5 / RAC-25NH5

RAK-35NH5 / RAC-35NH5

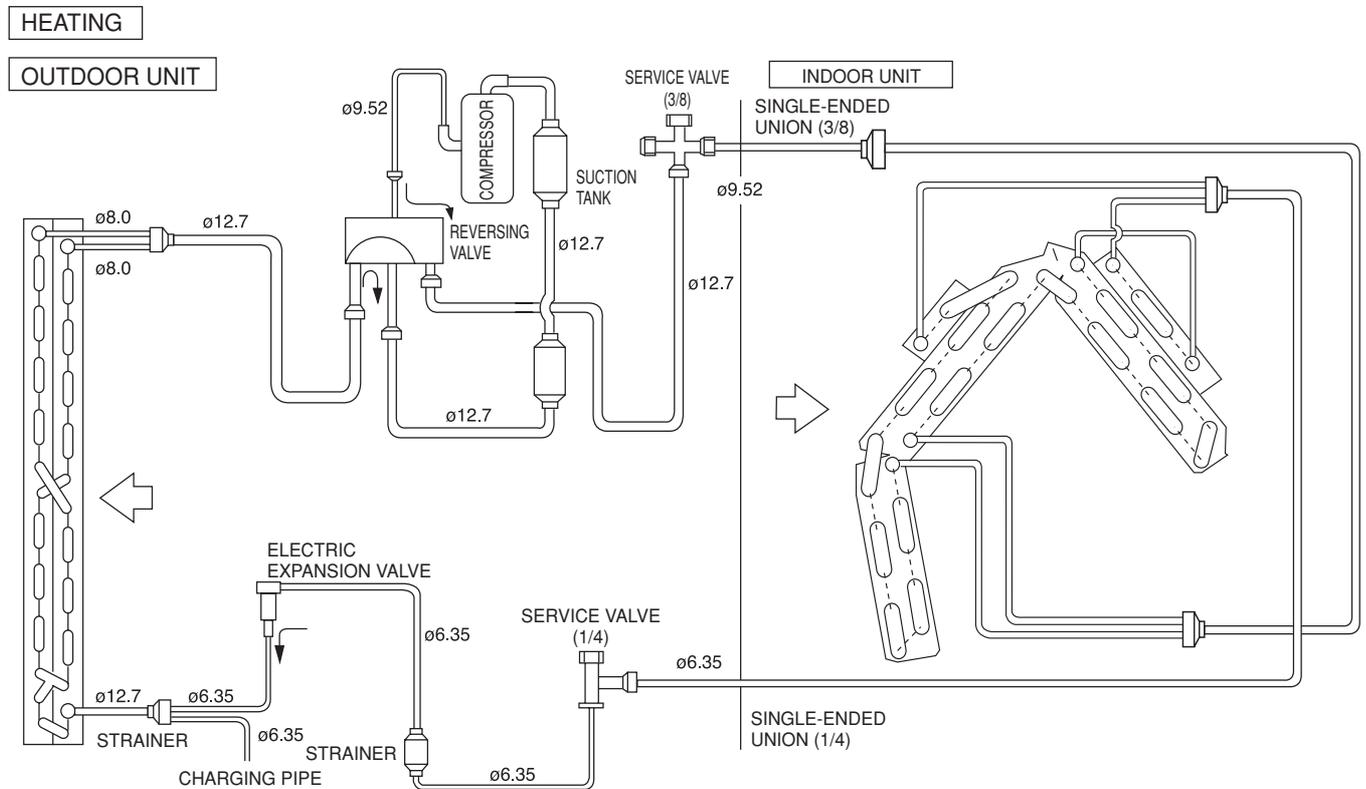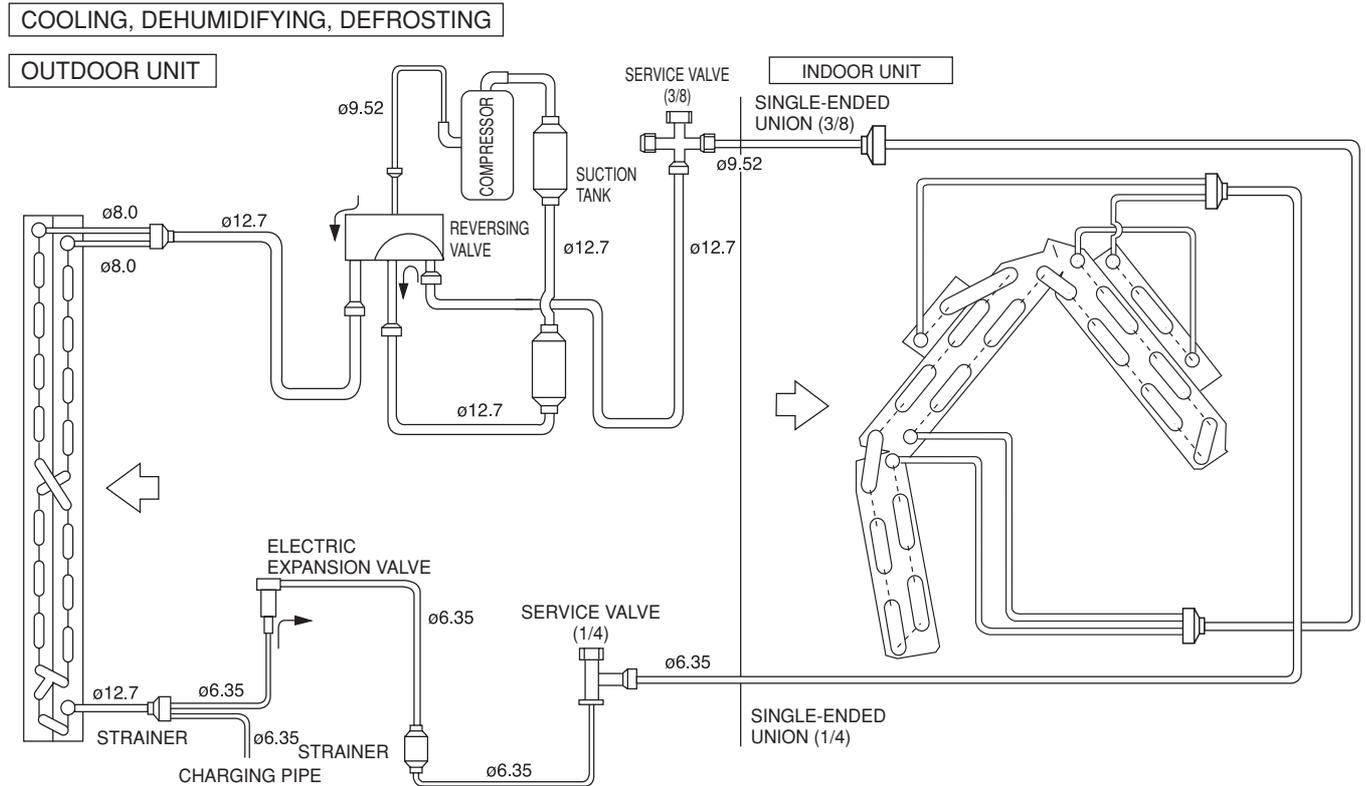

AUTO SWING FUNCTION

MODEL: RAK-25NH5, RAK-35NH5

INPUT SIGNAL	PRESENT CONDITION		OPERATING SPECIFICATION	REFERENCE
	OPERATION	OPERATION MODE AIR DEFLECTOR		
KEY INPUT	STOP	EACH MODE	STOP DURING ONE SWING	ONE SWING (CLOSING AIR DEFLECTOR) ① DOWNWARD ② UPWARD STOP AT THE MOMENT.
	DURING OPERATION	AUTO COOL COOL FAN AUTO DRY DRY	STOP DURING SWINGING	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD STOP AT THE MOMENT.
		AUTO HEAT HEAT CIRCULATOR	STOP DURING SWINGING	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD STOP AT THE MOMENT.
THERMO. ON (INTERNAL FAN ON)	DURING OPERATION	AUTO DRY DRY	TEMPORARY STOP	START SWING AGAIN.
		AUTO HAET HEAT CIRCULATOR	DURING SWINGING	STOP SWINGING TEMPORARILY. (SWING MODE IS CLEARED IF SWING COMMAND IS TRANSMITTED DURING TEMPORARY STOP.)
MAIN SWITCH ON	STOP	COOL FAN DRY	STOP DURING ONE SWING	INITIALIZE ① DOWNWARD ② UPWARD
		HEAT CIRCULATOR	STOP DURING ONE SWING	INITIALIZE ① DOWNWARD
MAIN SWITCH OFF	DURING OPERATION	EACH MODE	STOP DURING SWINGING	ONE SWING (CLOSING AIR DEFLECTOR) ① DOWNWARD ② UPWARD
			DURING INITIALIZING	INITIALIZING CONDITION OF EACH MODE. STOP SWINGING AND MODE BECOMES INITIALIZING CONDITION.
CHANGE OF OPERATION	DURING OPERATION	EACH MODE	STOP	INITIALIZE AT NEXT OPERATION.
			DURING SWINGING	

DESCRIPTION OF MAIN CIRCUIT OPERATION

MODEL RAK-25NH5, RAK-35NH5

1. Reset Circuit

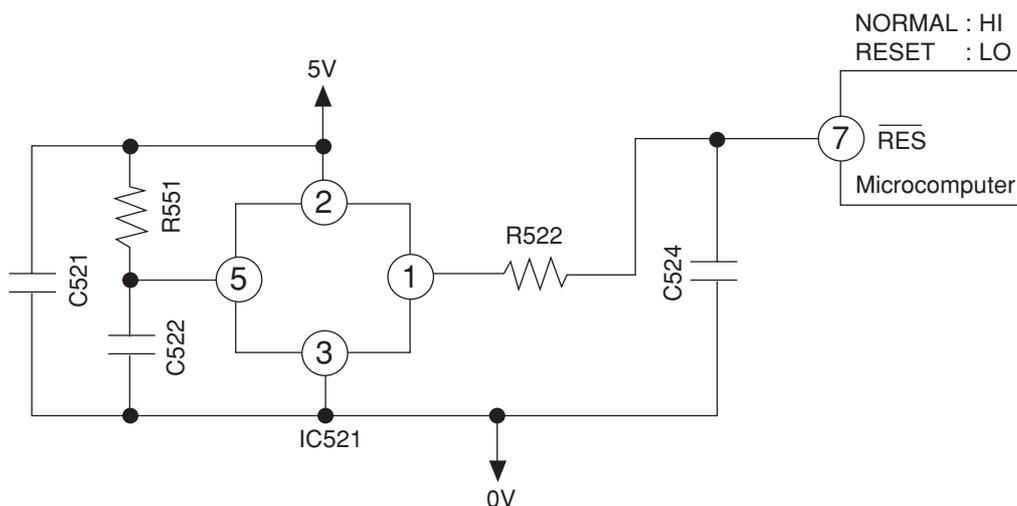


Fig. 1-1

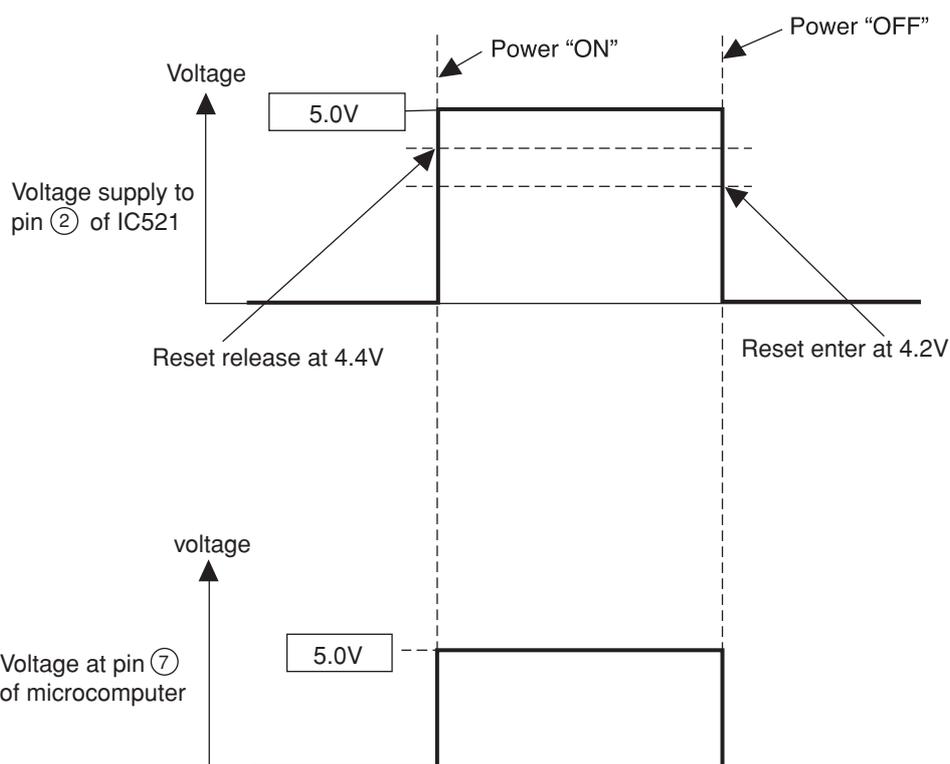


Fig. 1-2

- The reset circuit initializes the microcomputer program when power is ON or OFF.
- Low voltage at pin ⑦ resets the microcomputer and Hi activates the microcomputer.
- When power "ON" 5V voltage rises and reaches 4.4V, pin ① of IC521 is set to "Hi". At this time the microcomputer starts operation.
- When power "OFF" voltage drops and reaches 4.2V, pin ① of IC521 is set to "Low". This will RESET the microcomputer.

2. Receiver Circuit

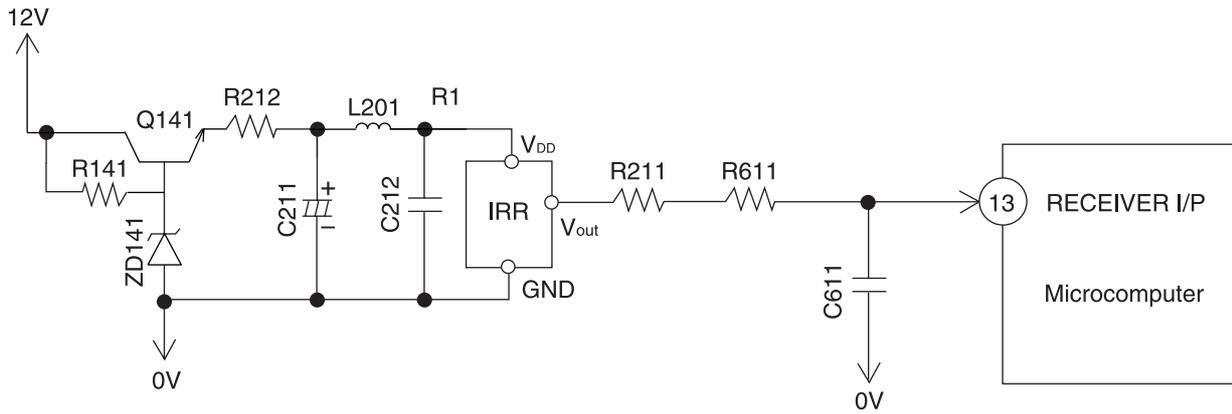


Fig. 2-1

- The light receiver unit receives the infrared signal from the wireless remote control. The receiver amplifies and shapes the signal and outputs it.

3. Buzzer Circuit

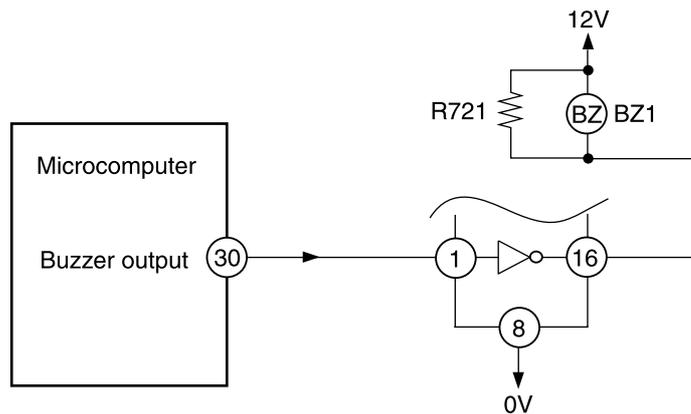


Fig. 3-1 Buzzer Circuit

- When the buzzer sounds, an approx. 3.9kHz square signal is output from buzzer output pin (30) of the microcomputer. After the amplitude of this signal has been set to 12Vp-p by a transistor, it is applied to the buzzer. The piezoelectric element in the buzzer oscillates to generate the buzzer's sound.

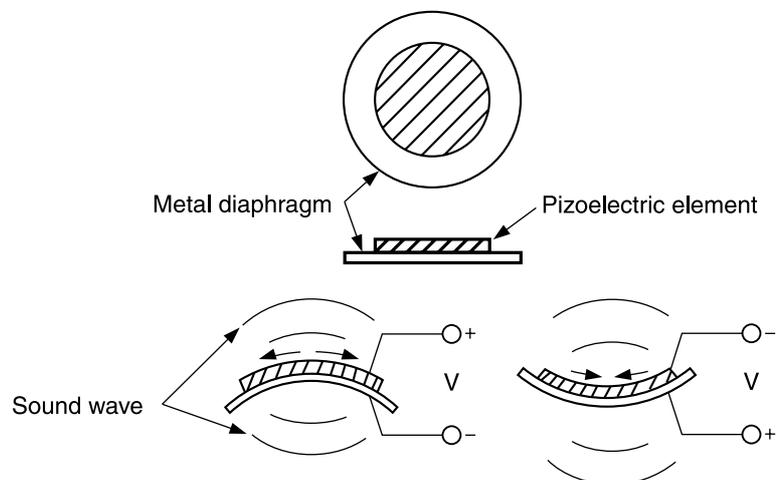


Fig. 3-2 Buzzer Operation

4. Auto Sweep Motor Circuit

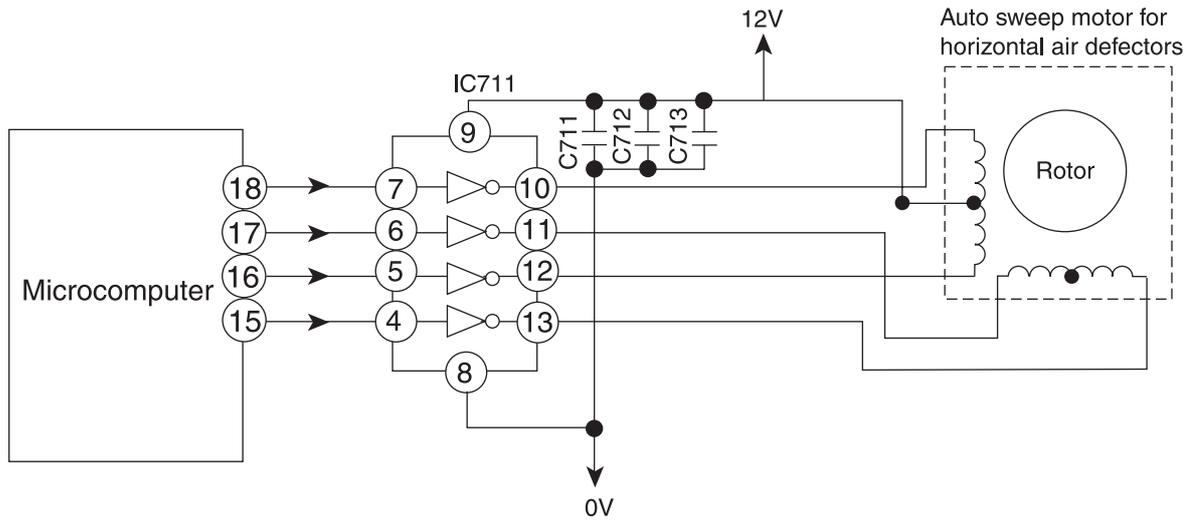


Fig.4-1

- Fig. 4-1 shows the Auto sweep motor drive circuit; the signals shown in Fig.4-2 are output from pins ⑮ – ⑱ of microcomputer.

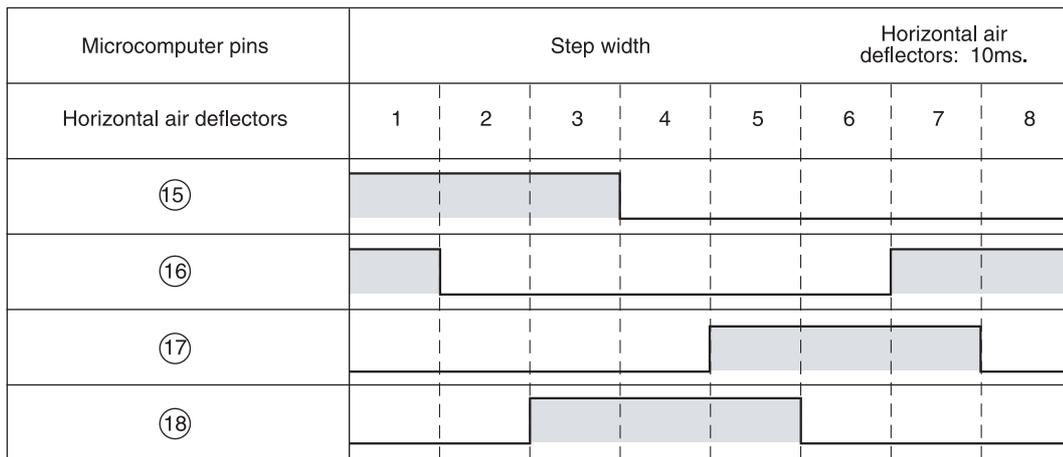


Fig.4-2 Microcomputer Output Signals

- As the microcomputer's outputs change as shown in Fig.4-2, the core of the auto sweep motor is excited to turn the rotor. Table 4-1 shows the rotation angle of horizontal air deflectors.

Table 4-1 Auto sweep Motor Rotation

	Rotation angle per step (°)	Time per step (ms.)
Horizontal air deflectors	0.0882	10

5. Room Temperature Thermistor Circuit

- Fig. 5-1 shows the room temperature thermistor circuit.

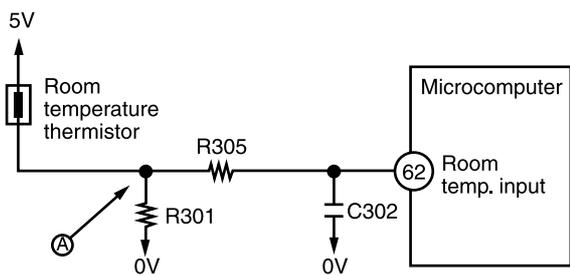


Fig. 5-1

- The voltage at (A) depends on the room temperature as shown in Fig. 5-2.

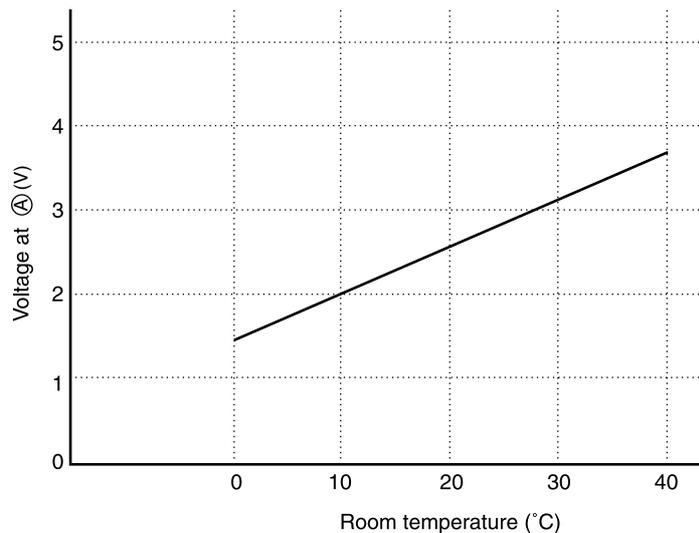


Fig. 5-2

6. Heat exchanger temperature thermistor circuit

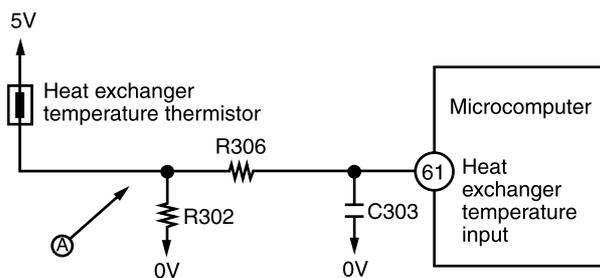


Fig. 6-1

- The circuit detects the indoor heat exchanger temperature and controls the following.

- (1) Preheating.
- (2) Low-temperature defrosting during cooling and dehumidifying operation.
- (3) Detection of the reversing valve non-operation or heat exchanger temperature thermistor open.

The voltage at (A) depends on the heat exchanger temperature as shown in Fig. 6-2.

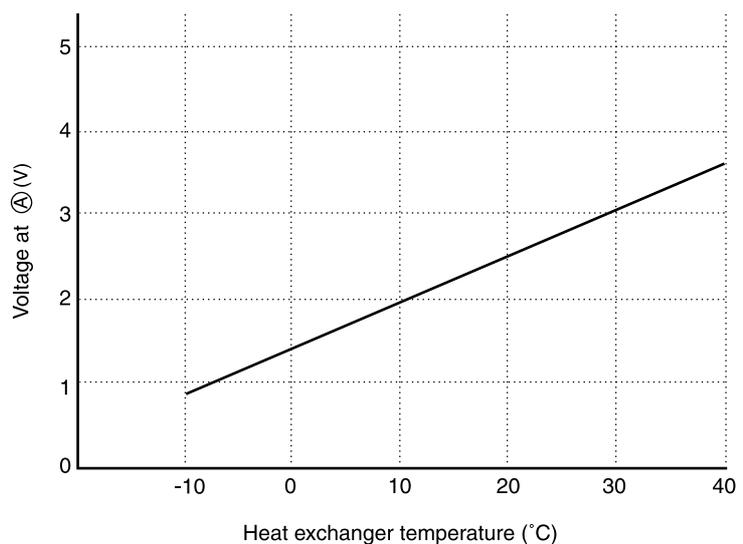


Fig. 6-2

7. Initial Setting Circuit (IC401)

- When power is supplied, the microcomputer reads the data in IC401 or IC402 (E²PROM) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.
- Data of self-diagnosis mode is stored in IC401 or IC402; data will not be erased even when power is turned off.

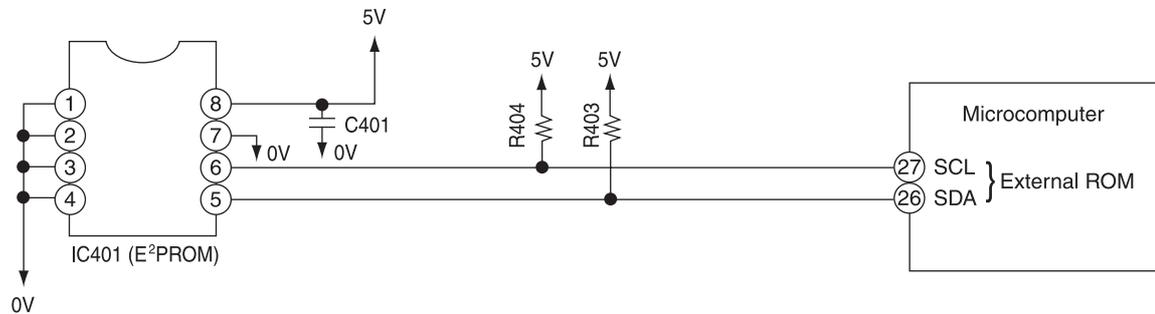


Fig. 7-1

Model RAC-25NH5, RAC-35NH5

1. Power Circuit

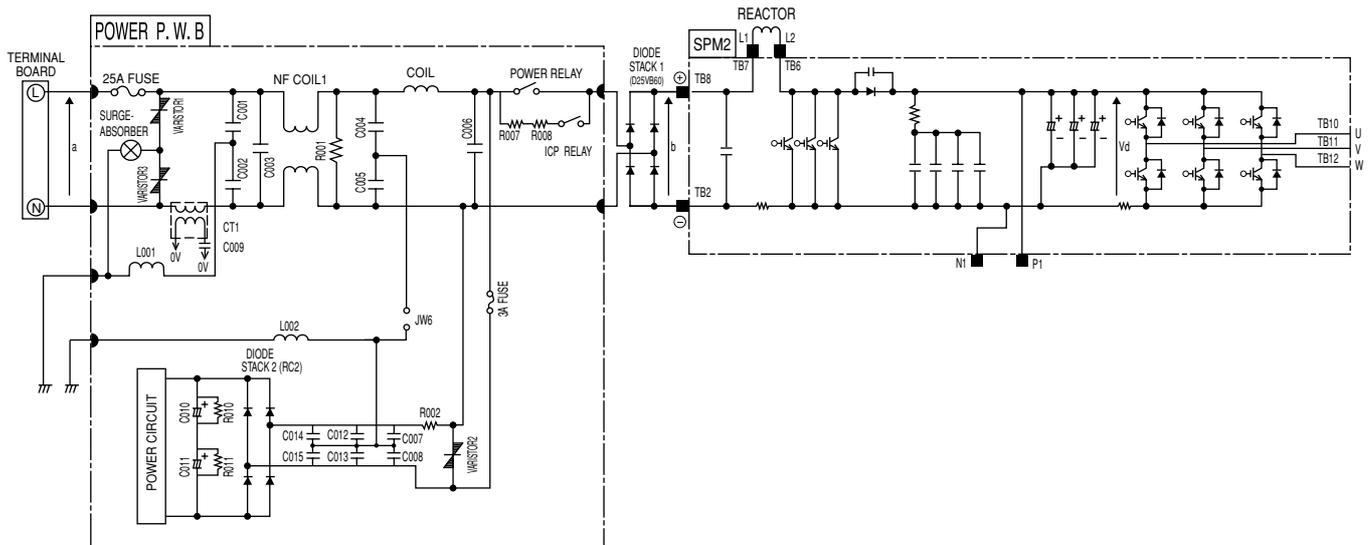


Fig. 1-1

- This circuit full-wave rectifies 220-230V AC applied between terminals L and N, and boosts it to a required voltage with the active module, to create a DC voltage.

The voltage becomes 260-360V when the compressor is operated

(1) Active module

The active filter, consisting of a reactor and switching element, eliminates higher harmonic components contained in the current generated when the compressor is operated, and improves the power-factor.

(2) Diode stacks

These rectify the 220-230V AC from terminals L and N to a DC power supply.

< Reference >

- In case of malfunction or defective connection: Immediately after the compressor starts, it may stop due to “abnormally low speed” active error, etc.

The compressor may continue to operate normally, but the power-factor will decrease, the operation current will increase, and the overcurrent breaker of the household power board will probably activate.

- In case of active module faulty or defective connection:

Although the compressor continues to operate normally, the power-factor will decrease, the operation current will increase, and the overcurrent breaker of the household power board will probably activate.

< Reference >

- If diode stack 1 is faulty, the compressor may stop due to “lp”, “abnormally low speed”, etc. immediately after it starts, or it may not operate at all because no DC voltage is generated between the positive ⊕ and negative ⊖ terminals.

If diode stack 1 is faulty, be aware that the 25A fuse might also have blown.

- If diode stack 2 is faulty, DC voltage may not be generated and the compressor may not operate at all. Also, be aware that the 3A fuse might have blown.

(3) Smoothing capacitor (C501, C502, C503)

This smoothes (averages) the voltage rectified by the diode stacks.

<Notes> Smoothing capacitor C501 is not available for model RAC-25NH5 and RAC-35NH5.

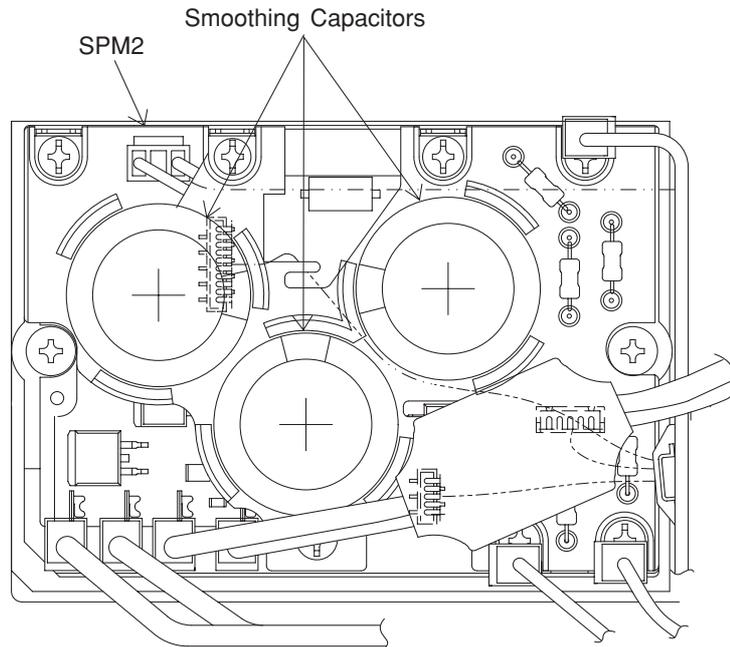


Fig. 1-2

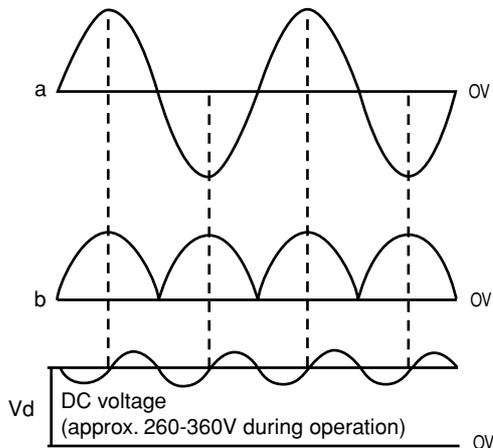


Fig. 1-3

- Be careful to avoid an electric shock as a high voltage is generated. Also take care not to cause a short-circuit through incorrect connection of test equipment terminals. The circuit board could be damaged.

(4) Smoothing capacitor (C010, C011)

This smoothes (averages) the voltage rectified by the diode stack2. A DC voltage is generated in the same way as in Fig. 1-3.

Voltage between + side of C010 and – side of C011 is about 330V.

(5) C001 to C003, C012 to C015, C007, C008, NF COIL1, COIL, absorb electrical noise generated during operation of compressor, and also absorb external noise entering from power line to protect electronic parts.

(6) Surge absorber, Varistor 1, 2, 3, absorbs external power surge.

(7) Inrush protective resistor (R007, R008)

This works to protect from overcurrent when power is turned on.

< Reference >

- When inrush protective resistor is defective, diode stack may malfunction. As a result, DC voltage is not generated and no operation can be done.

2. Indoor/Outdoor Interface Circuit

- The interface circuit superimposes an interface signal on the DC 35V line supplied from the outdoor unit to perform communications between indoor and outdoor units. This circuit consists of a transmitting circuit which superimposes an interface signal transmit from the microcomputer on the DC 35V line and a transmitting circuit which detects the interface signal on the DC 35V line and outputs it to the microcomputer.
- Communications are performed by mutually transmitting and receiving the 4-frame outdoor request signal one frame of which consists of a leader of approx. 100 ms., start bit, 8-bit data and stop bit and the command signal with the same format transmit from the indoor unit.
- Communication signal from outdoor microcomputer to indoor microcomputer. At first outdoor microcomputer will send a request signal (SDO) to indoor microcomputer. A high-frequency IF signal approx. 38 KHz is generated and modulated by the request signal (SDO) inside the outdoor microcomputer then output to pin ① of microcomputer. This modulated IF signal is output to pin ③ of HIC and amplified by amp. This signal is superimposed to DC 35V line via C801 and L801.
To prevent erroneous reception, the outdoor microcomputer is designed so that it cannot receive a signal while it is outputting a request signal.
The receiving circuit in the indoor unit consists of a comparator and transistor. The interface signal from the outdoor unit on the DC 35V line is supplied to C821, where DC components are eliminated, and is then shaped by the comparator. The shaped signal is detected by diode, amplified by amp, and output to pin ④ of the indoor microcomputer.
Fig. 2-2 shows the voltages at each component when data is transferred from the outdoor microcomputer to the indoor microcomputer.
- Communication signal from indoor microcomputer to outdoor microcomputer. The request signal (SDO) generates by indoor microcomputer is output to pin ⑤, and amplifies by C801. IF signal approx. 38 kHz is generated by comparator, then modulate by the request signal from pin ⑤ of indoor microprocessor. This modulated IF signal is then amplified and superimposed to DC 35V line via L801 and C802 of indoor interface circuit.
Fig. 2-3 shows the voltages at each component when data is transferred from outdoor microcomputer to indoor microcomputer.
The circuit operation of the outdoor receiving circuit is same as indoor receiving circuit.

- Fig. 2-1 shows the interface circuit used for the indoor and outdoor microcomputers to communicate with each other.

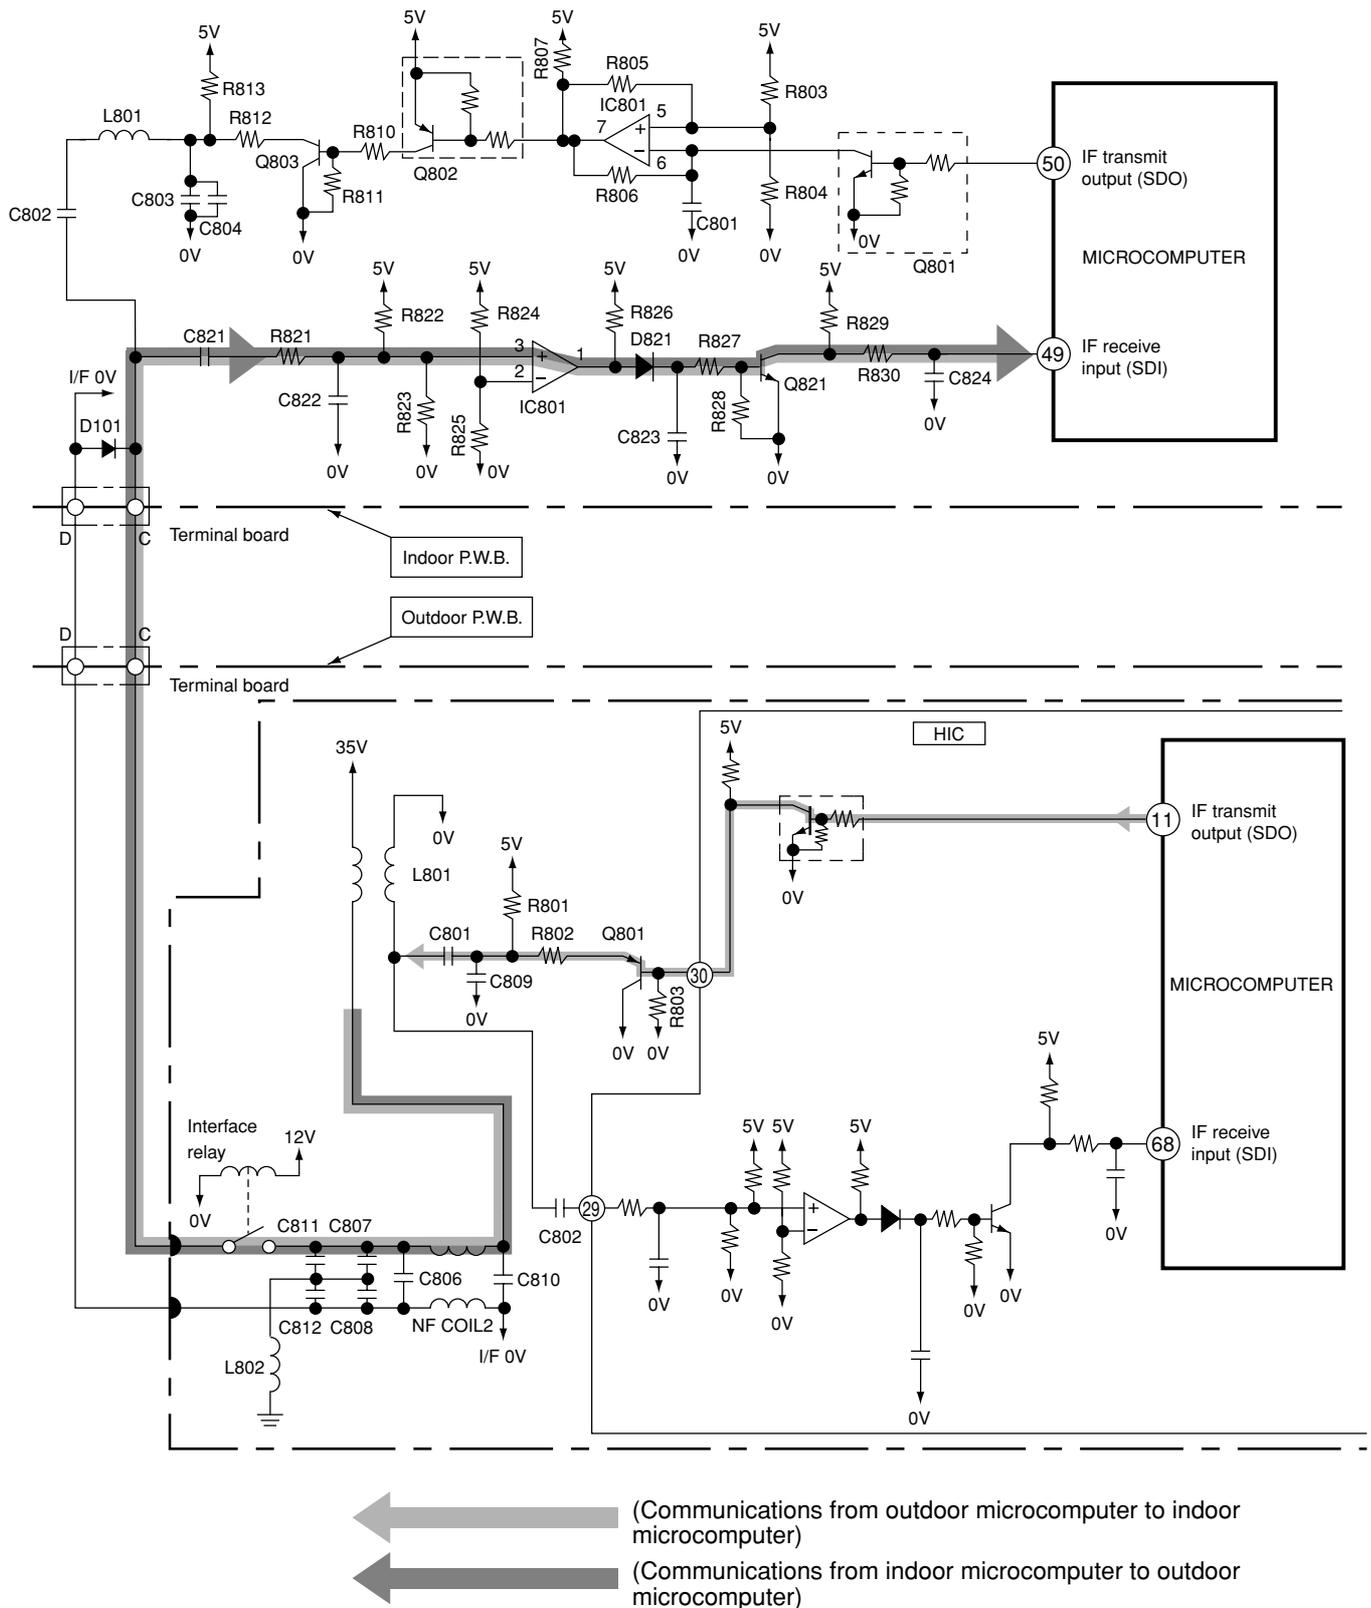


Fig. 2-1 Indoor/outdoor interface Circuit

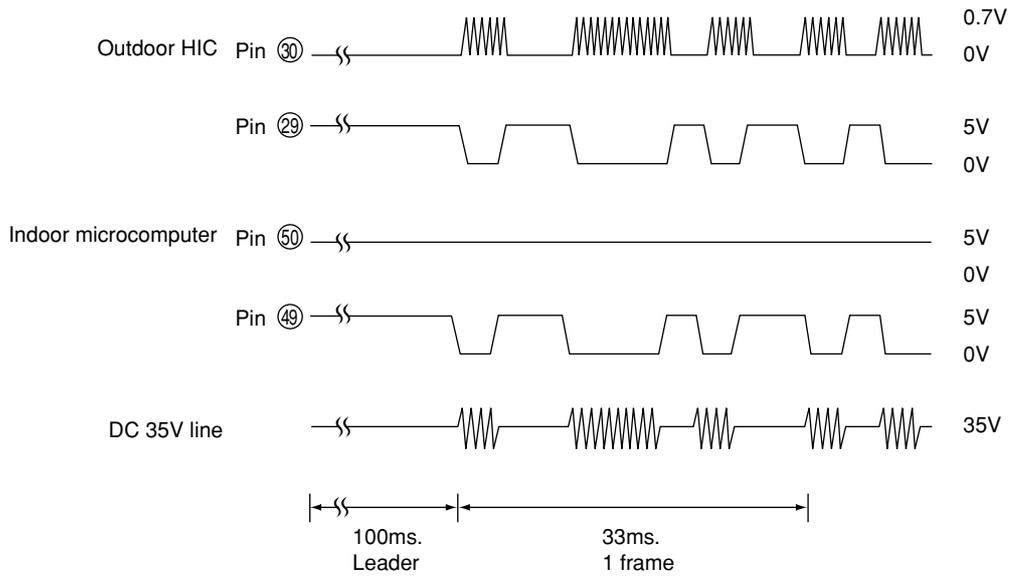


Fig. 2-2 Voltages Waveforms of indoor / Outdoor Microcomputers (Outdoor to Indoor Communications)


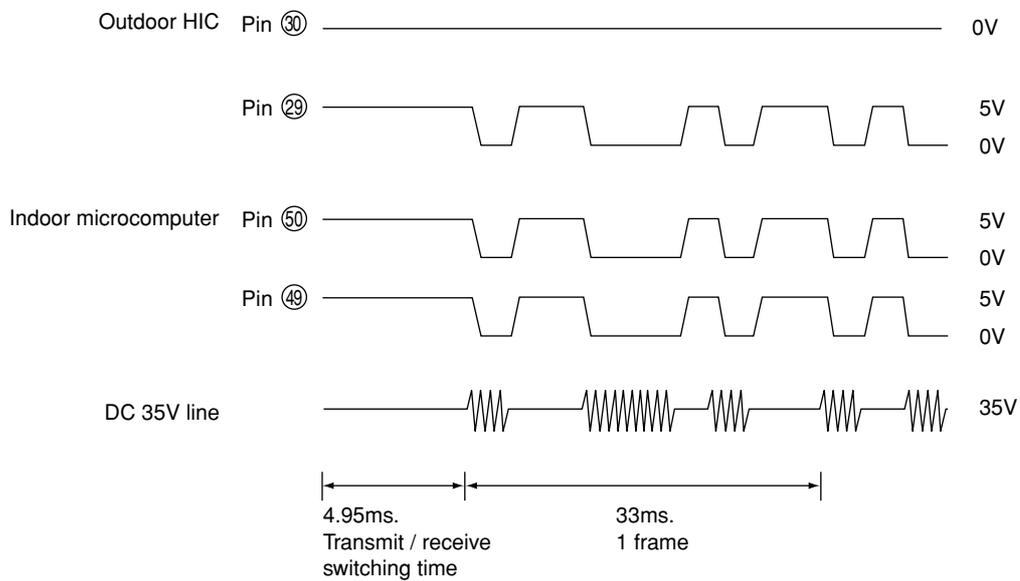



Fig. 2-3 Voltages Waveforms of indoor / Outdoor Microcomputers (Indoor to Outdoor Communications)

[Serial Communications Format during Normal Communications]

(1) Outdoor microcomputer (HIC) to indoor microcomputer

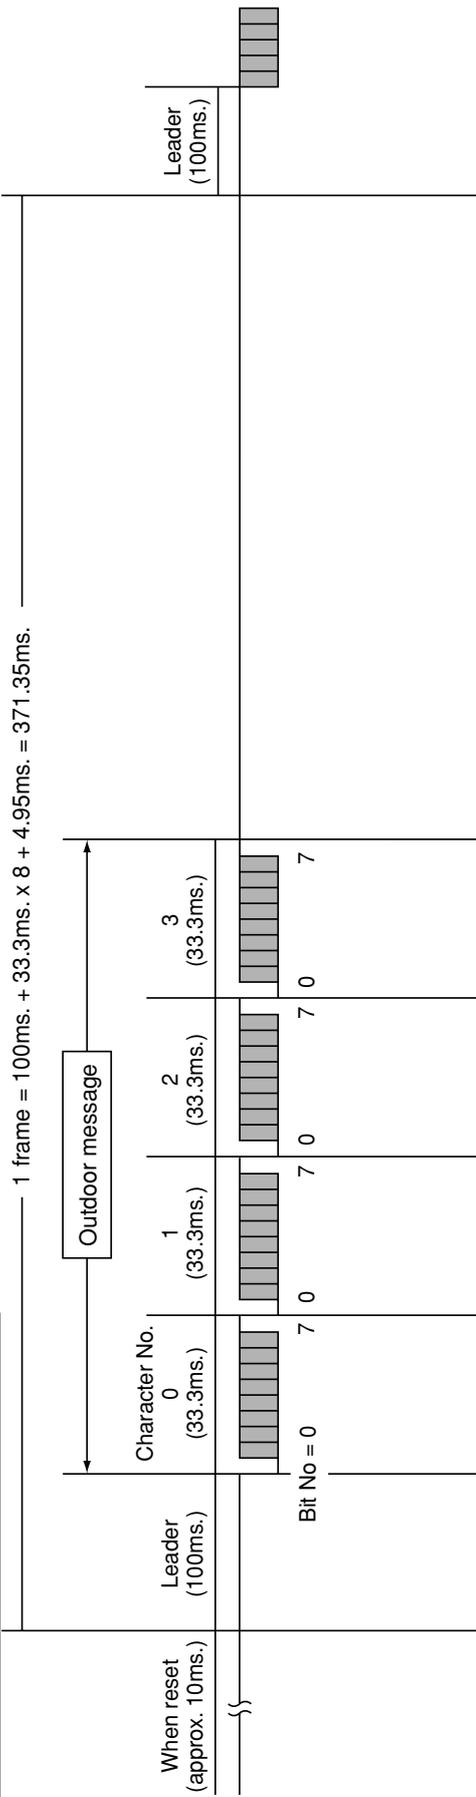

(2) Indoor microcomputer to outdoor microcomputer (HIC)

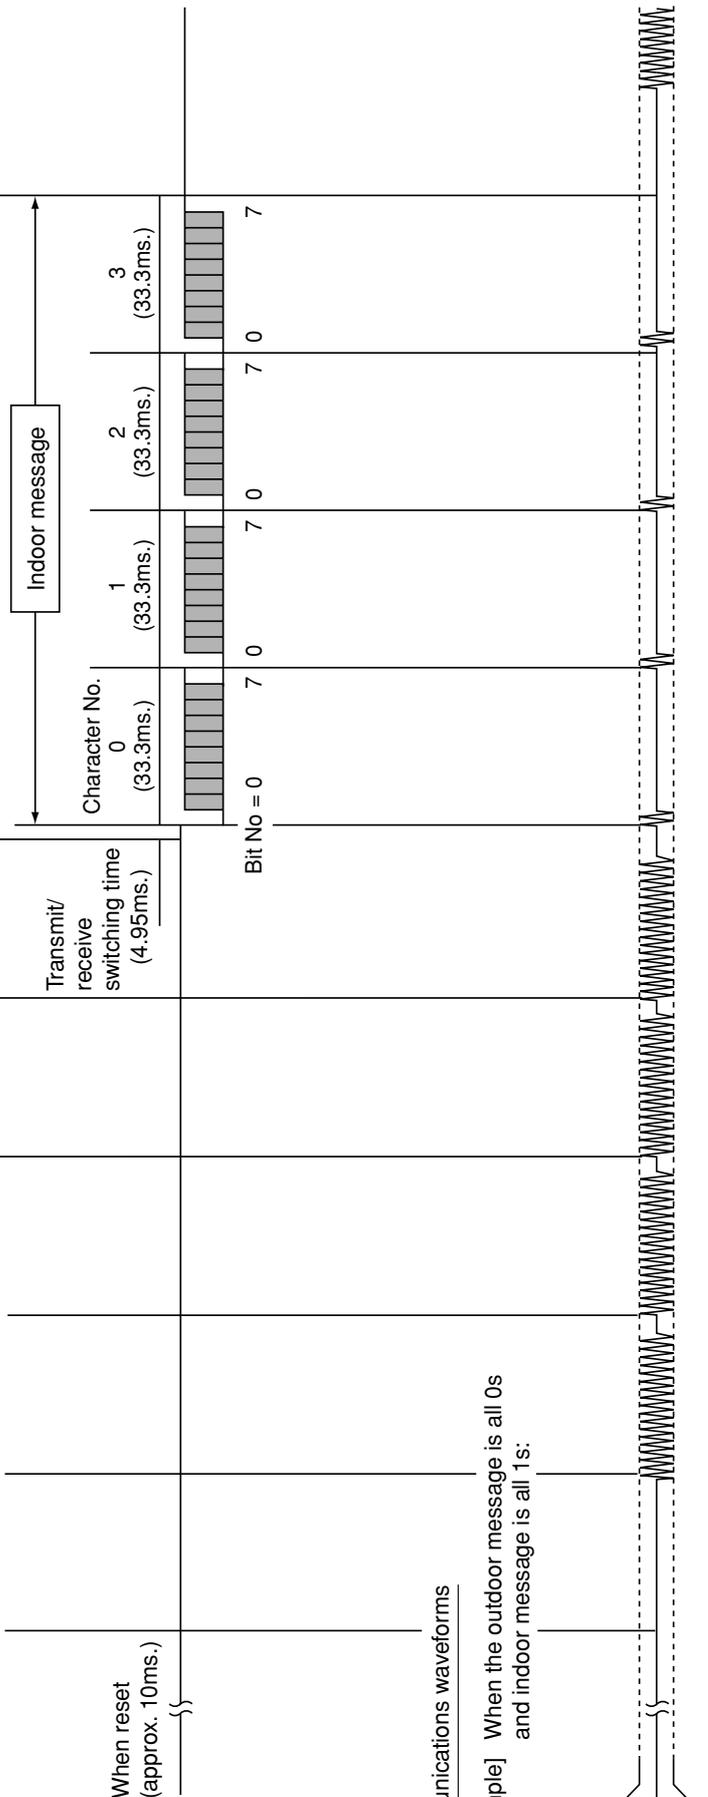

(3) Communications waveforms

[Example] When the outdoor message is all 0s and indoor message is all 1s:




Fig. 2-4

[Serial Communications Data]

(1) Outdoor message

Character No.	0								1								2								3								
Bit No.	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	
Contents																																	
Data	1/0	0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	
0	Multi-bit																																
1									Outside temperature (1)								Compressor during operation								Actual compressor rotation speed (0 LSB)								
2									Outside temperature (2)								Compressor during operation								Actual compressor rotation speed (1)								
3									Outside temperature (3)																Actual compressor rotation speed (2)								
4									Outside temperature (4)																Actual compressor rotation speed (3)								
5									Outside temperature (5)																Actual compressor rotation speed (4)								
6									Outside temperature (6)																Actual compressor rotation speed (5 MSB)								
7									Outside temperature (7 MSB)																								

(2) Indoor message

Character No.	0								1								2								3								
Bit No.	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	
Contents																																	
Data	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	1/0	
0	Operation mode (0 LSB)								Fan (0 LSB)								Compressor command speed (0 LSB)								Compressor minimum rotation speed (0 LSB)								
1	Operation mode (1)								Fan (1)								Compressor command speed (1)																
2	Operation mode (2 MSB)								Fan (2 MSB)								Compressor command speed (2)																
3	Indoor in-operation bit								2-way valve								Compressor command speed (3)								Compressor minimum rotation speed (1)								
4	Capacity code (0 LSB)								Reversing valve								Compressor command speed (4)								Compressor minimum rotation speed (2)								
5	Capacity code (1)																Compressor command speed (5)								Compressor minimum rotation speed (3)								
6	Capacity code (2)																Compressor command speed (6)								Compressor minimum rotation speed (4 MSB)								
7	Capacity code (3 MSB)								Compressor ON								Compressor command speed (7 MSB)																

3. Power Module Circuit

- Fig. 3-1 shows the system power module and its peripheral circuit. The three transistors on the positive ⊕ side are called the upper arm, and the three transistors on the negative ⊖ side are called the lower arm.

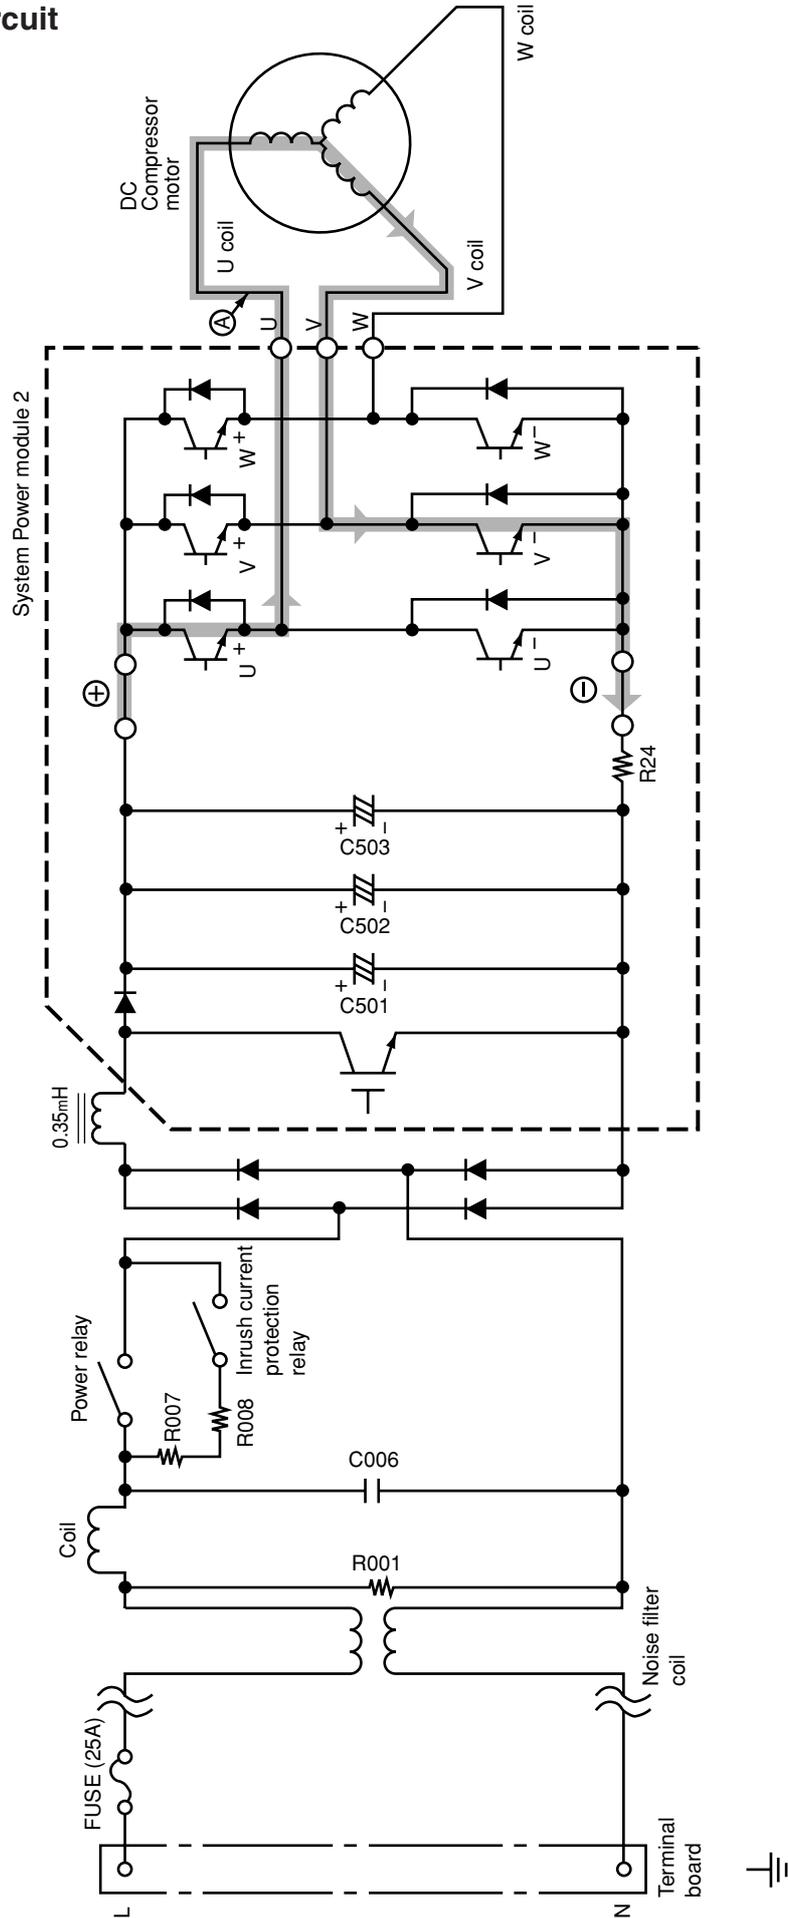


Fig. 3-1 Power module circuit (U⁺ is ON, V⁻ is ON)

- DC 260-360V is input to system power module and system power module switches power supply current according to rotation position of magnet rotor. The switching order is as shown in Fig. 3-2.

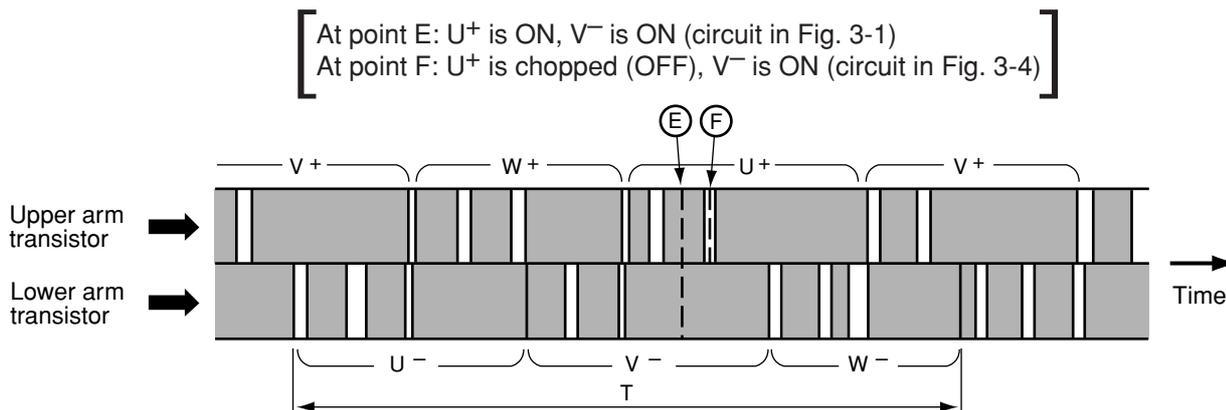


Fig. 3-2 Switching order of power module

- Upper arm transistor is controlled to ON/OFF by 3.3kHz chopper signal. Rotation speed of the compress is proportional to duty ratio (ON time/ ON time + OFF time) of this chopper signal.
- Time T in Fig. 3-2 shows the switching period, and relation with rotation speed (N) of the compressor is shown by formula below;

$$N = 60/2 \times 1/T$$

- Fig. 3-3 shows voltage waveform at each point shown in Figs. 3-1 and 3-4. First half of upper arm is chopper, second half is ON, and first half of lower arm is chopper, second half is ON.

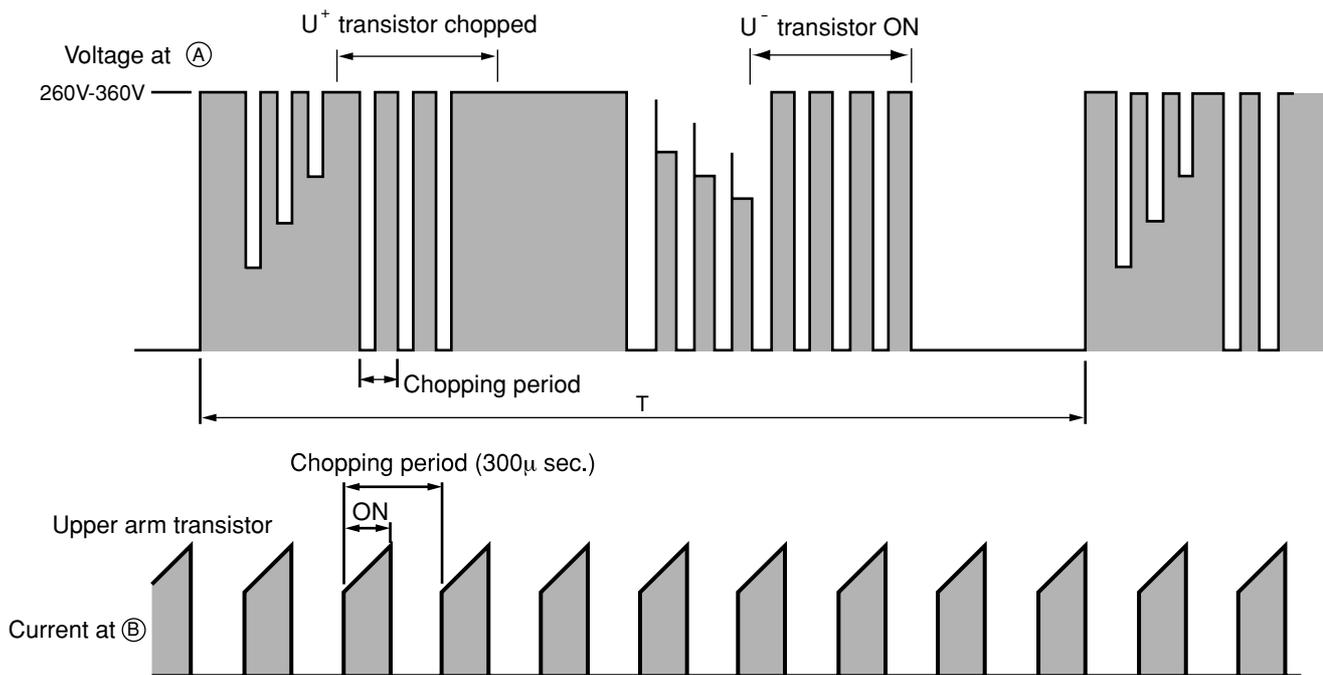


Fig. 3-3 Voltage waveform at each point

- When power is supplied U⁺ → U⁻, because of that U⁺ is chopped, current flows as shown below; (B)
 - (1) When U⁺ transistor is ON: U⁺ transistor → U coil → V coil → V⁻ transistor → DC current detection resistor → Point (B) (Fig. 3-1)
 - (2) When U⁺ transistor is OFF: (by inductance of motor coil) U coil → V coil → V⁻ transistor → Return diode → Point (A) (Fig. 3-4)

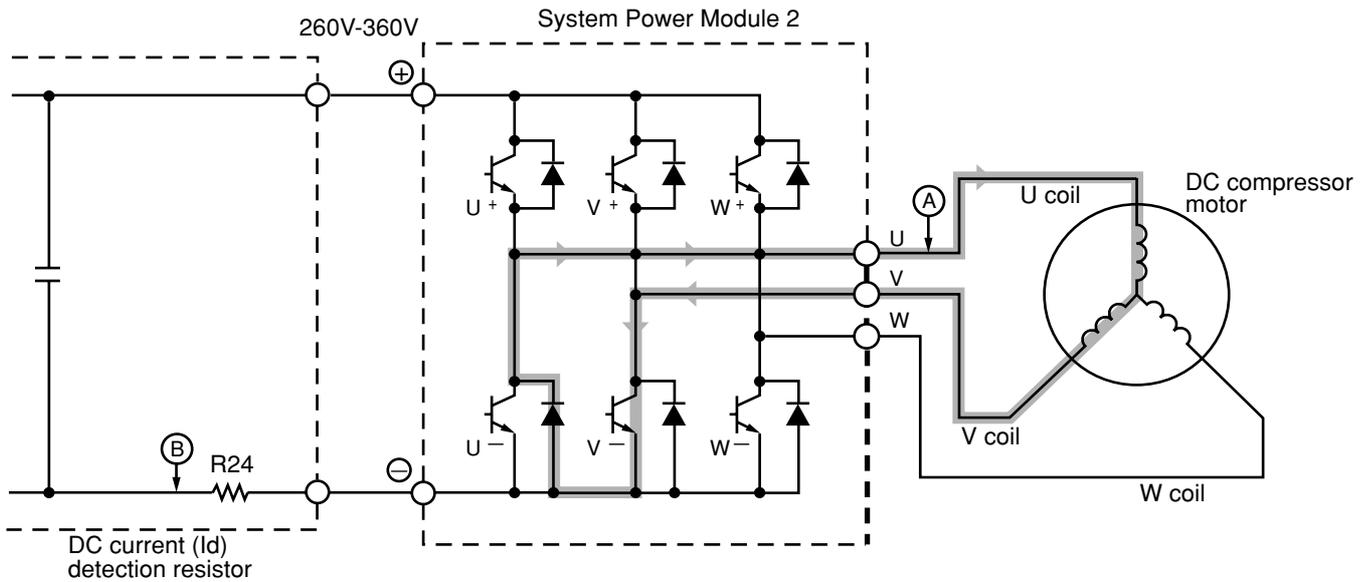


Fig. 3-4 Power module circuit (U⁺ is ON, V⁻ is ON)

- Since current flows at point B only when U⁺ transistor is ON, the current waveform at point B becomes intermittent waveform as shown in Fig. 3-3. Since current at point B is approximately proportional to the input current of the air conditioner, input current is controlled by using DC current (I_d) detection resistor.

<Reference>

If power module is defective, self diagnosis lamps on the control P.W.B. may indicate as shown below:

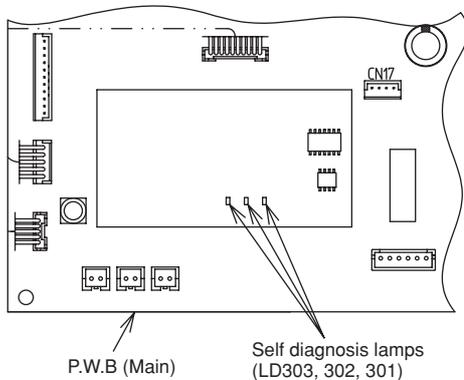


Fig. 3-5

Table 3-1

Self-diagnosis	Self-diagnosis lamp and mode	
I _p (peak current cut)	LD301	Blinks 2 times
Abnormal low speed rotation	LD301	Blinks 3 times
Switching incomplete	LD301	Blinks 4 times

- Simplified check of power module (Lighting mode when operated with compressor leads disconnected)
 - (1) Disconnect connector of 3-pole (WHT, YEL, RED) lead wire connecting to compressor located at the lower part of electric parts box.
 - (2) Set to compressor operation state (other than FAN mode) and press Start/stop switch of remote control.
 - (3) If normal operation continues for more than 1 minute (LD303 lights), power module is considered normal.
- * Refer to other item (troubleshooting on page 94) for independent checking of power module.

(2) During ON

- The drain current at IC901 increases linearly. During this period, the gate voltage and current become constant because of the saturation characteristics of the transformer.

(3) Shifting from ON to OFF

- This circuit applies a negative feedback signal from the 12V output. When the voltage across C919 reaches the specified value, REG2 turns on and current flows to PQ2 ①-②. This turns the secondary circuits on, sets IC901 pin ① to "Hi", and turns IC901 off.

(4) During OFF

- While IC901 is on, the following energy charges the primary windings of the transformer:

Energy=LI²/2. Here, L : Primary inductance

I : Current when IC1 is off

This energy discharges to the secondary windings during power off. That is, C910, C911, C912, C914 is charged according to the turn ratio of each winding.

- At the start, an overcurrent flows to IC901 because of the charged current at C910, C911, C912, C914.
- The drain current at IC901 generates a voltage across R906. If it exceeds the IC901 base voltage, it sets the IC901 gate voltage to "HI".
- R906 limits the gate voltage to prevent excessive collector current from flowing to IC901.

<Reference>

If the power circuit for P.W.B. seems to be faulty:

- (1) Make sure that 5V and 12V on the control P.W.B., upper arm U, V and W, and the lower arm power voltage are the specified values.

- (2) When only the 5V output is low:

REG 1 (regulator) faulty, 5V-0V shorted, output is too high, or REG 1 is abnormal.

- (3) When 12V and 5V are abnormal:

The following defects can be considered:

① Fan, operation, power, rush prevention relay (shorting in relay, etc.)

② Microcomputer is abnormal.

③ REG 1 (regulator is abnormal), etc.

Shorting on primary circuits.

When shorting occurs in the secondary circuits, there is no abnormality in the primary circuits because of overcurrent protection.

The voltage rises when an opening occurs in the primary circuits, or the feedback system is abnormal.

- (4) When 15V and 17V are abnormal:

D908, D909 or drive circuit is abnormal.

- (5) When all voltage are abnormal:

IC901, R906, etc. are possibly abnormal.

- * If IC901 is abnormal, be aware that other components, such as the power module, REG (regulator), etc. are possibly defective.

[When the switching power supply seems to be abnormal, the voltage between IC901 pin ④ (to be measured at the leads of R904 and R903) and IC901 pin ⑤ (to be measured at R906 lead) may be between 11 and 16V. This is because the protection circuit of IC901 is operating.]

5. Reversing valve control circuit

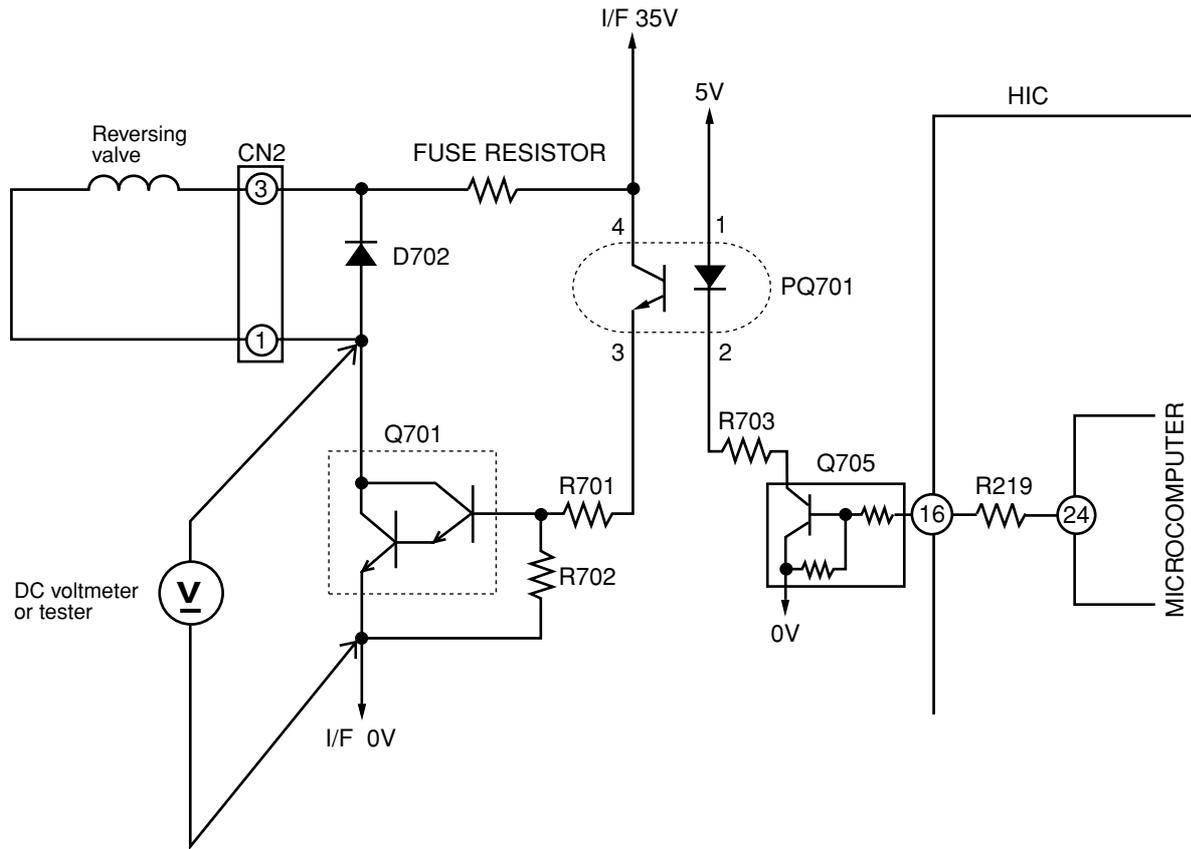


Fig. 5 – 1

- Reversing valve control circuit can switch reversing valve ON/OFF according to instruction from indoor microcomputer depending on the operation condition shows in Table 5-1. Voltage at each point in each operation condition is approximately as shown below when measured by tester. (When collector voltage of Q701 is measured)

Table 5-1

Operation condition		Collector voltage of Q701
Cooling	General operation of Cooling	About 35V
Heating	In normal heating operation	About 0.8V
	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 0.8V
	Defrosting	About 35V
Dehumidifying	Sensor dry	About 35V

6. Rotor magnetic pole position detection circuit

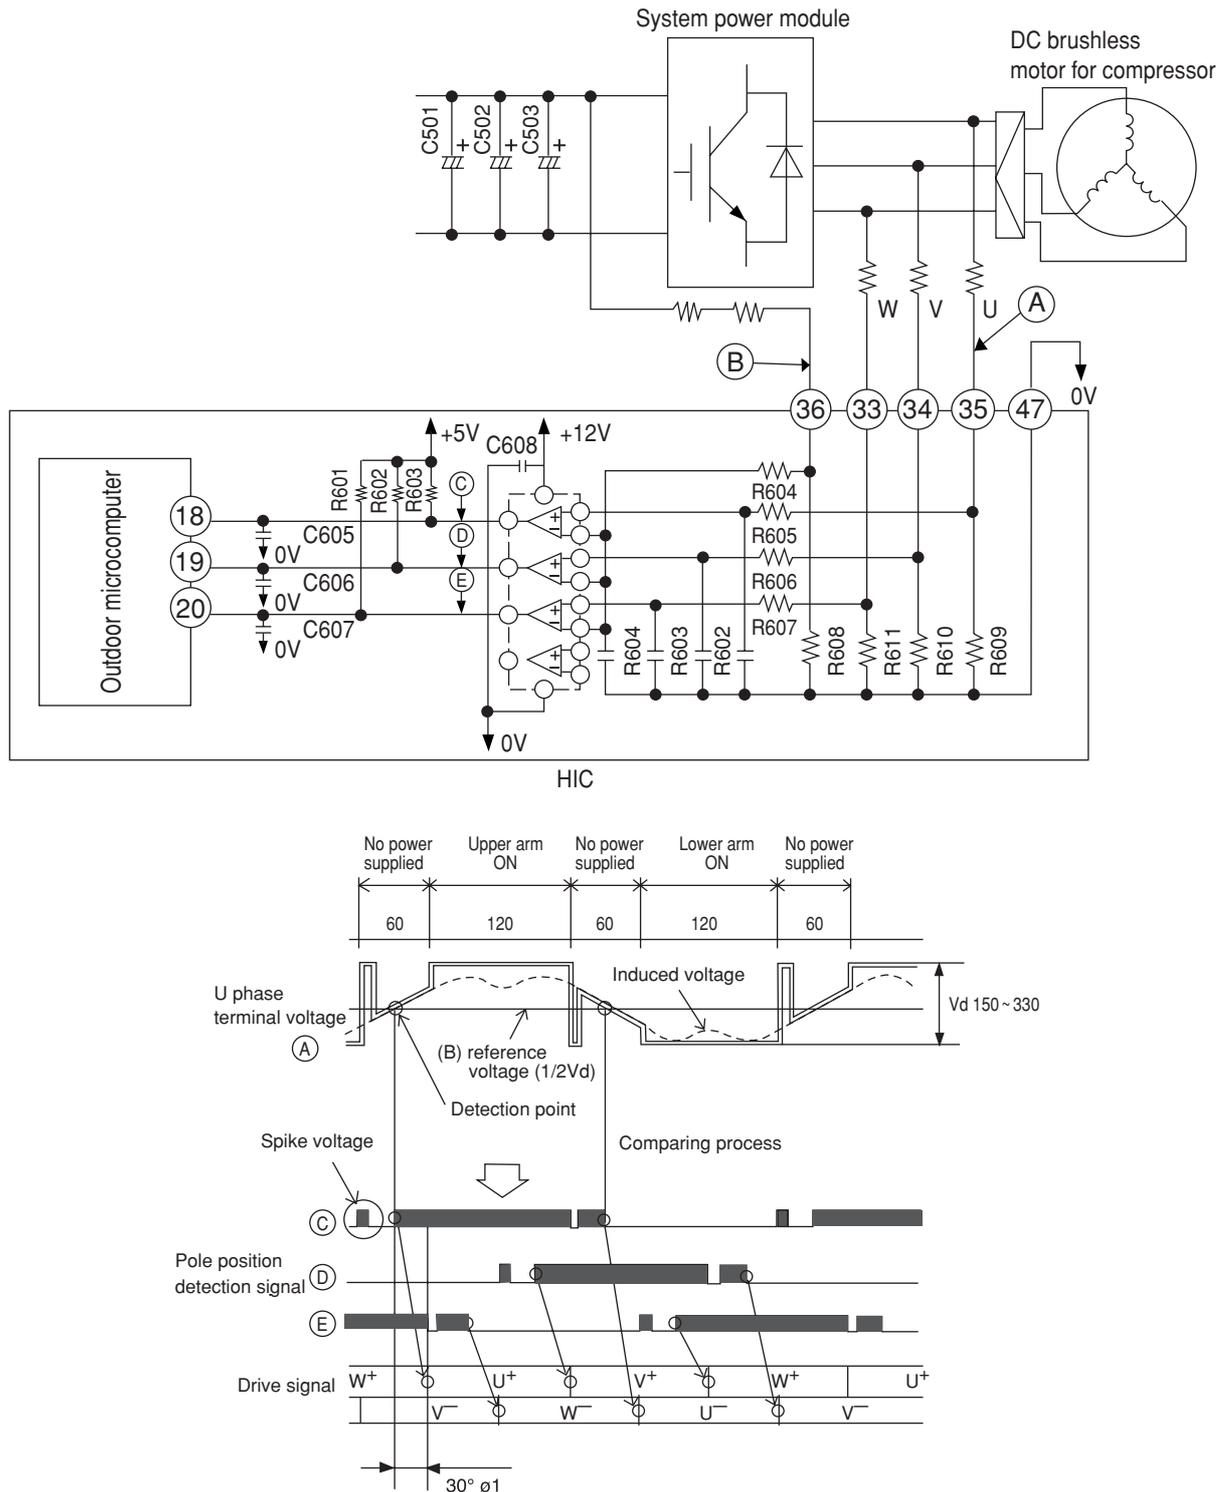


Fig. 6-1 Rotor magnetic pole position detection circuit and voltage waveform at each point

- To detect U phase, voltage at point © is produced by driving motor induced voltage signal (voltage at point ①) and 1/2 voltage of Vd (voltage at point ②), and comparing with comparator.
- For V phase and W phase, voltage at point ④ and voltage at point ⑤ are produced in the same way as above. Voltage at point © is taken into indoor unit microcomputer, switching timing to U⁺ transistor from W⁺ transistor is produced by delaying 30° from rise waveform, ignoring spike voltage. In addition, switching timing to U-transistor from W-transistor is produced by delaying 30° from fall waveform.
- For V phase and W phase, in the same way as above, drive signals are produced from voltages at point ④ and point ⑤. Phases are shifted by 120° and 240°, respectively, comparing with U phase.

7. Drive Circuit

Fig. 7-1 shows the drive circuit. The circuits for U phase, V phase and W phase have the same Configuration.

- In low speed rotation mode (PWM range), as shown in Fig. 7-2, 0-5V chopper signal is output from microcomputer for each phase. Signal output from microcomputer is output to IC1 and is inverted by active Lo to become 0-15V chopper signal; it is then drive the transistor of each phase.
- In high speed rotation mode (PWM range), as shown in Fig. 7-3, 0-5V drive signal is output from microcomputer for each phase (with no chopper because of full duty). Signal output from microcomputer is input to IC1 and is inverted by active Lo to become 0-15V drive signal; it is then drive the transistor of each phase.

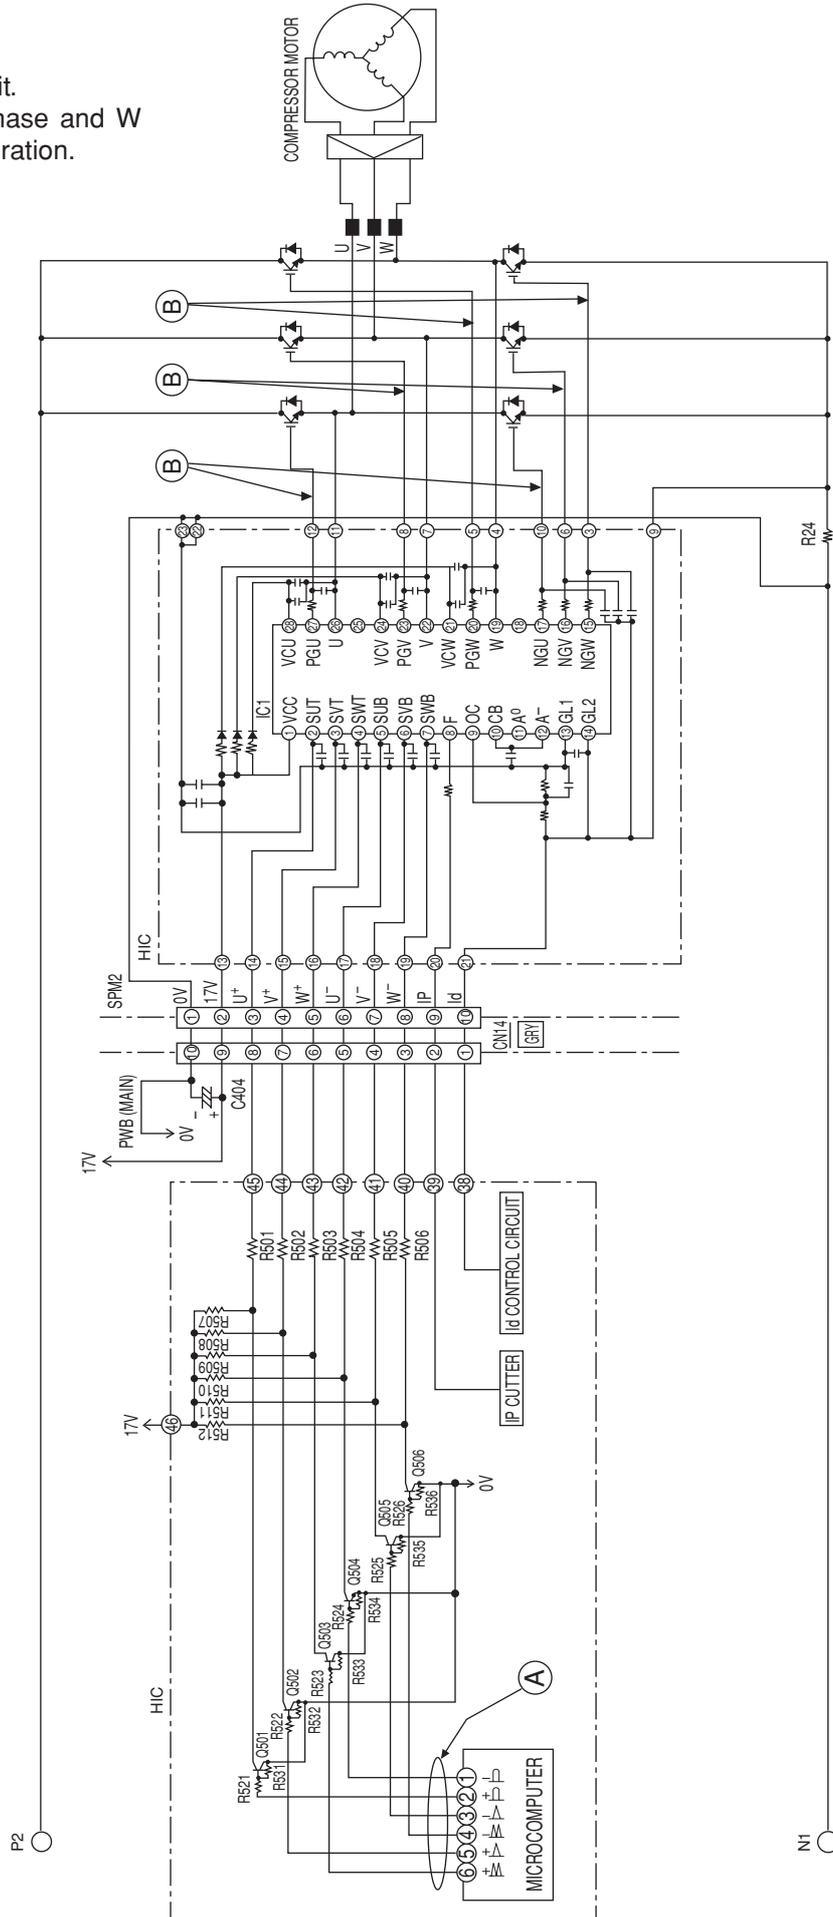


Fig.. 7-1

[Low speed rotation mode]

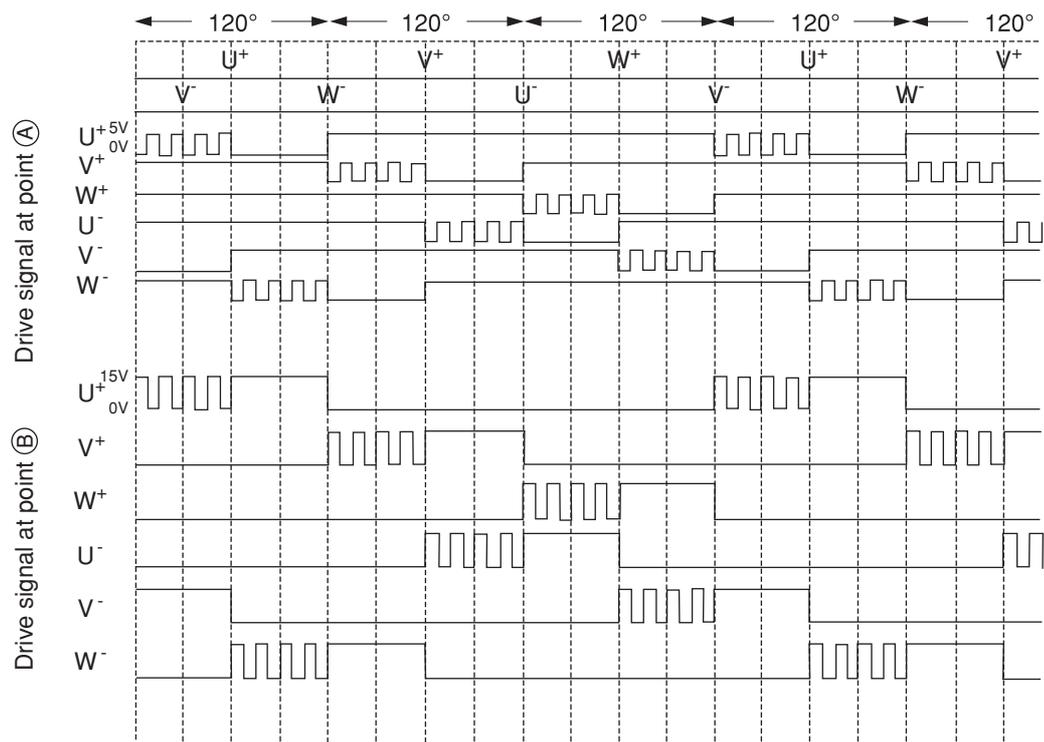


Fig. 7-2

[High speed rotation mode]

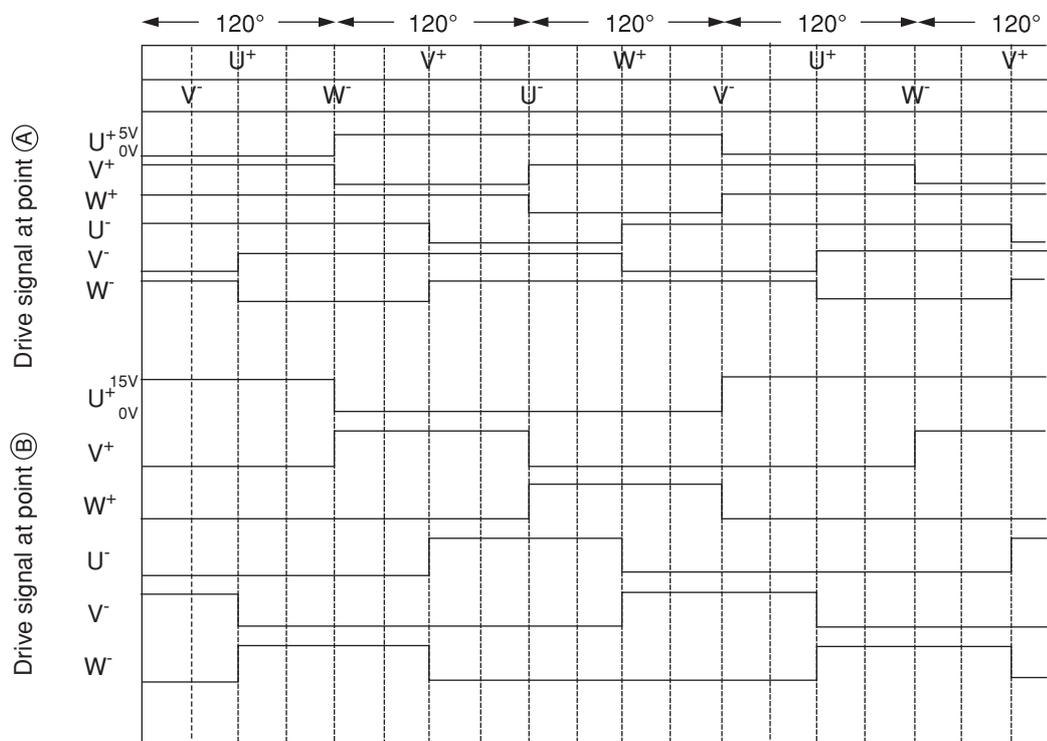


Fig. 7-3

8. HIC and Peripheral Circuits

- Fig. 8-1 shows the micro computer and its peripheral circuits, Table 8-1, the basic operations of each circuit block, and Fig. 8-2, the system configuration.

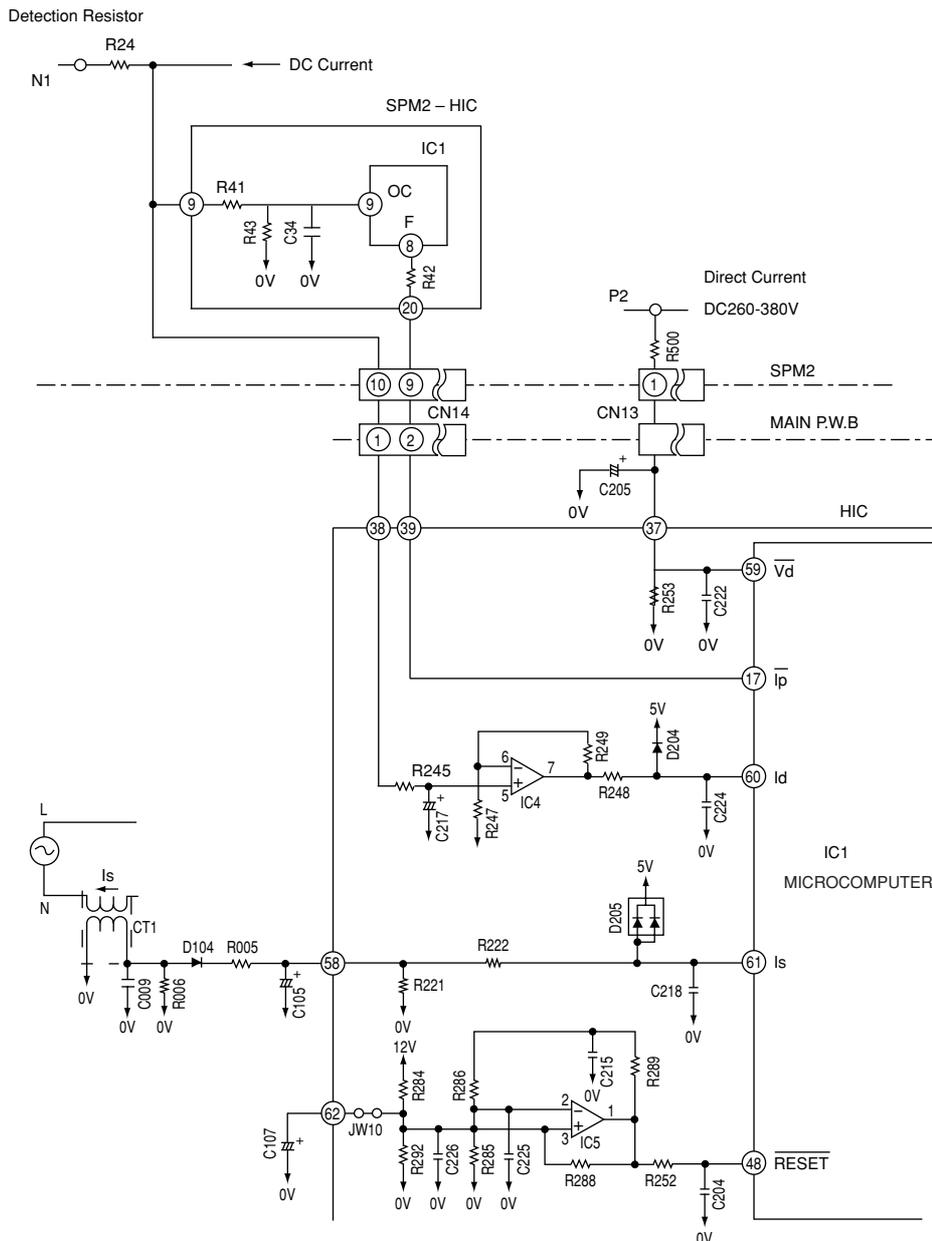


Fig. 8-1 Microcomputer and Peripheral Circuits

Table 8-1

Circuit block	Basic operation
Peak current cutoff circuit	Detects DC current flowing power module and during overcurrent (instantaneous value) flows, stops upper/lower arm drive circuits and also produces Ip signal by which drive signal output is stopped.
Set value circuit	Compares voltage detected, amplified and input to HIC with set voltage value in microcomputer, and controls overload when set value exceeds input voltage.
Voltage amplifier circuit	Voltage-amplifies DC current level detected by the detection resistor and inputs this to microcomputer. Internal or external overload is judged in microcomputer.
Reset circuit	Produces reset voltage.
Trip signal synthesis circuit	Modulates chopper signal to drive signal and stops according to presence/absence of Ip signal or reset signal.

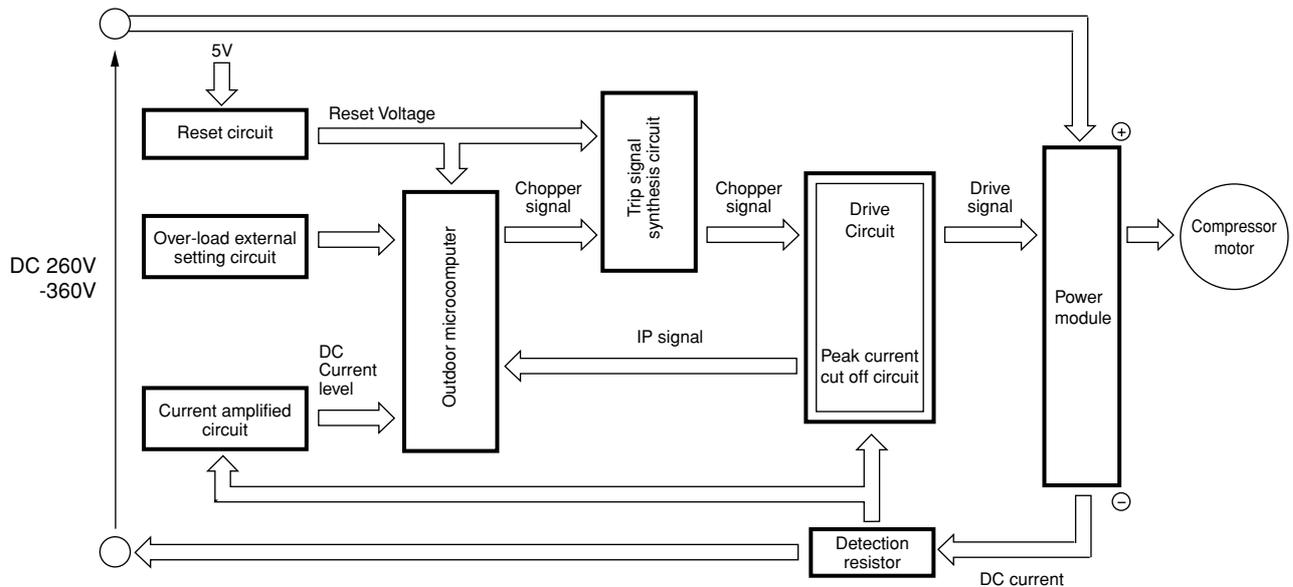


Fig. 8-2

- The following describes the operations of each circuit in detail.

(1) Peak current cut off circuit

Fig.8-3 Peak Current Cut off Circuit and Waveforms at Each Section.

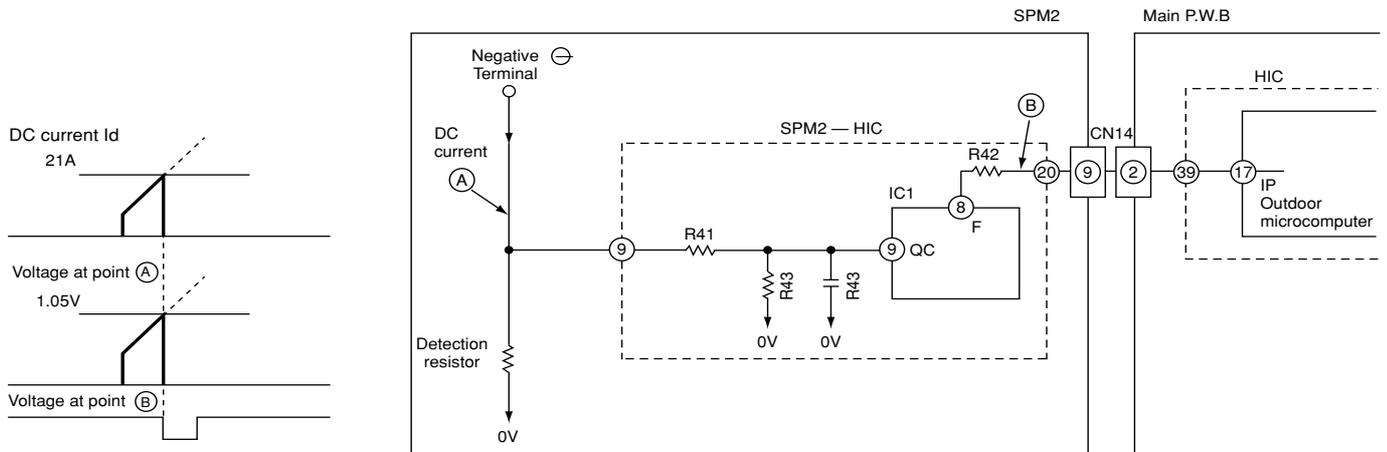


Fig.8-3

- The Ip cut off circuit detects an instantaneous excessive current and stops inverter to protect parts such as SPM2, etc.
- As shown in diagram, if current exceeding 21A flows, voltage at point (A) recognized by detecting resistor is input to pin ⑩ of SPM2 – HIC, and voltage divided by R41 and R43 is input to pin ⑨ of IC1. Since threshold of IC1 is exceeded in this case, Lo signal is input from pin ⑧ (Voltage at point (B)). When Lo signal is input to pin ⑰ of microcomputer, microcomputer stops drive output.
- When drive output from microcomputer is stopped, all drive output goes Hi, and microcomputer is initialized to enter drive signal standby mode. 3 minutes later, microcomputer outputs drive signal again, to start operation.

(2) Overload control circuit (OVL control circuit)

- Overload control is to decrease the speed of the compressor and reduce the load when the load on the air conditioner increases to an overload state, in order to protect the compressor, electronic components and power breaker.
- Overloads are judged by comparing the DC current level and set value.
- Fig. 8-4 shows the overload control system configuration and Fig. 8-5 is a characteristic diagram of overload judgement values. There are two judgement methods-external judgement which compares the externally set value with the DC current value regardless of the rotation speed and internal judgement which compares the set value that varies according to the rotation speed programmed in the microcomputer software with the DC current value.

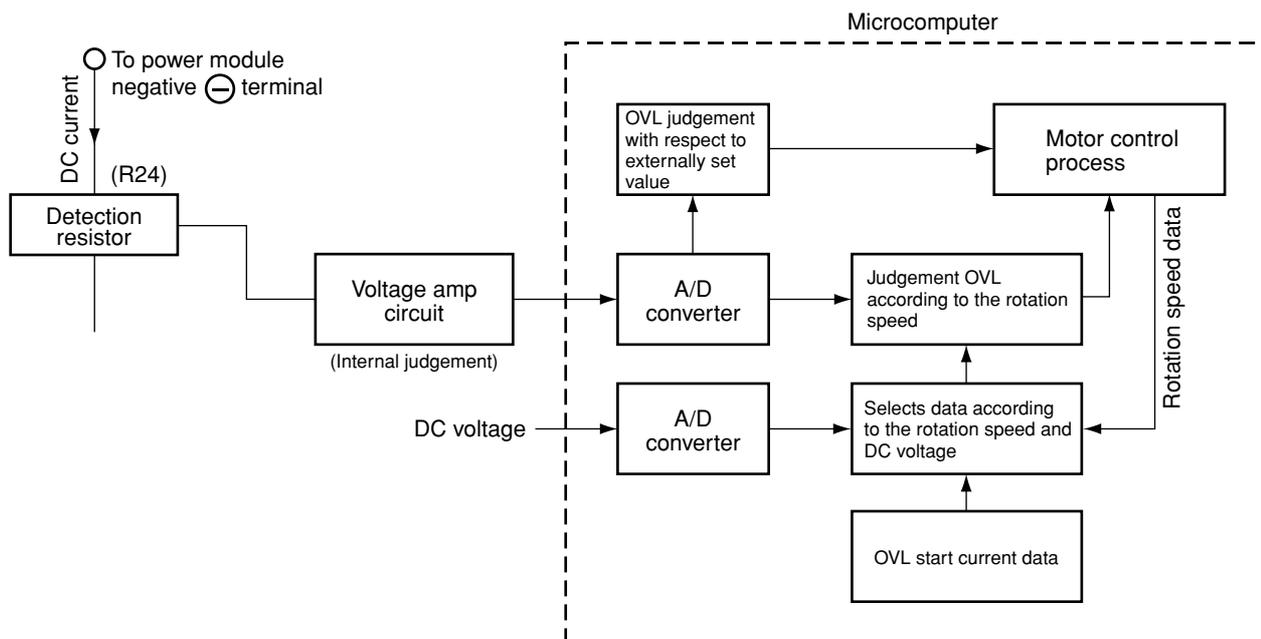


Fig. 8-4 Overload Control System Configuration

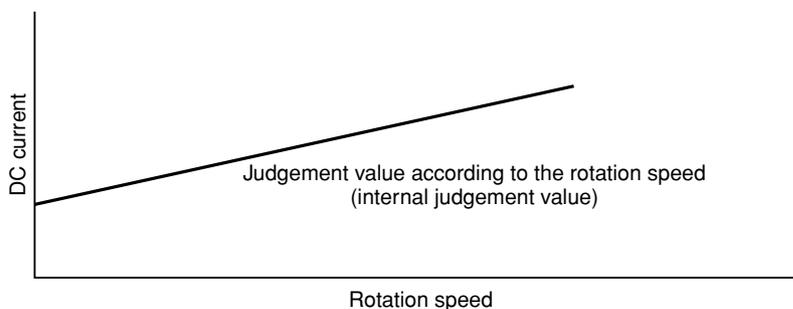


Fig. 8-5

①. Overload external judgement circuit

- Fig. 8-1. The filter consisting of R245 and C217 removes high harmonic components from the voltage generated by the current flowing to Detection resistor; R245 and C217 average the voltage. This voltage is then input to IC4 pin ⑤ is then amplified and supplied to microcomputer pin ⑩. The microcomputer compares this input with the internally set value, and if the input exceeds the set value, it enters overload control status.
- Fig. 8-7 shows the rotation speed control. When the voltage at pin ⑩ of the microcomputer exceeds the set value, the microcomputer decreases the rotation speed of the compressor and reduces the load regardless of the rotation speed commanded by the indoor microcomputer.

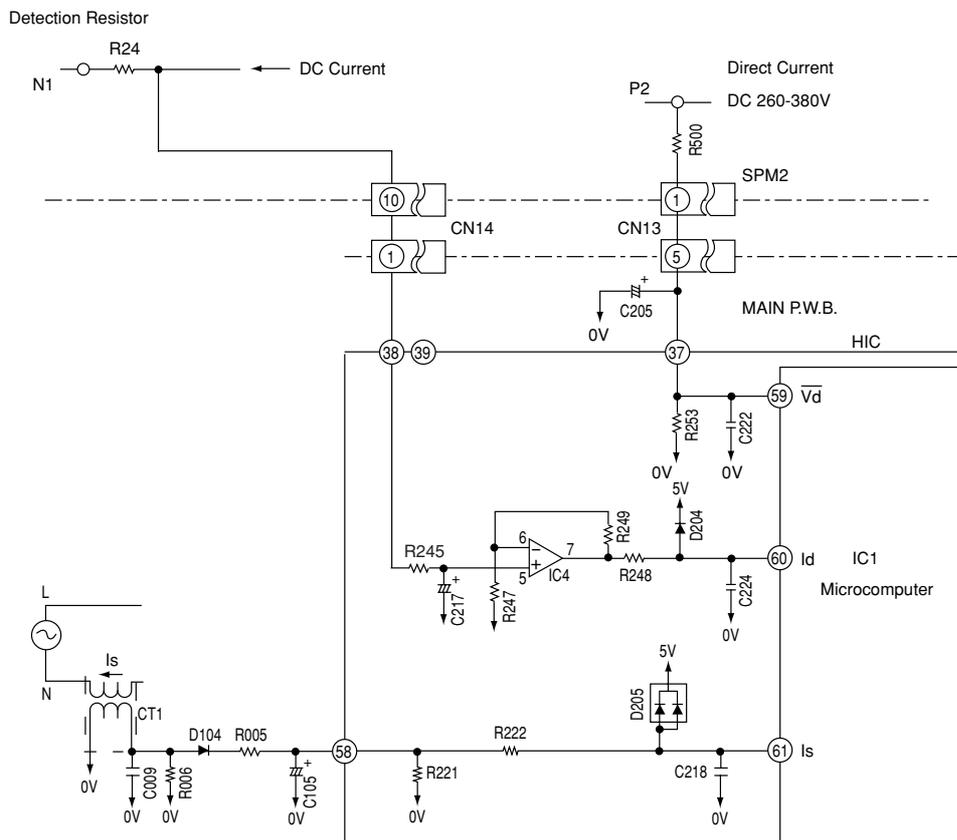


Fig. 8-6

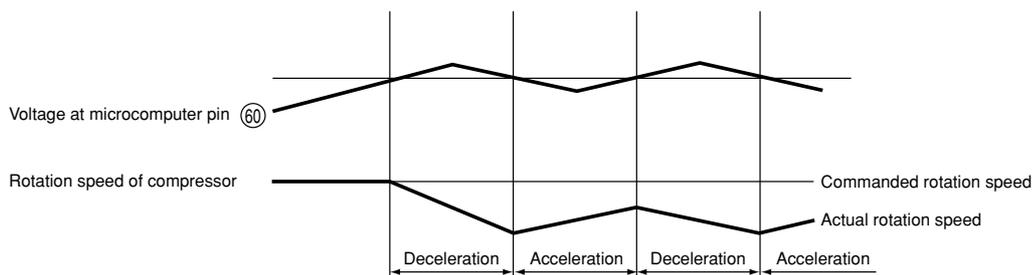


Fig. 8-7

②. Voltage amp. circuit

- The voltage amp. circuit amplifies the DC current level detected by the detection resistor after being converted to a voltage and supplies it to the microcomputer. Receiving this, the microcomputer converts it to a digital signal and compares it with the internal data to judge whether or not overload control is required.

< During overload control >

- The filter consisting of R245 and C217 removes high harmonic components from the voltage generated from the DC current flowing to the detection resistor, and supplies it to IC4 pin ⑤ IC4 forms a non-inverting voltage amp. circuit together with the peripheral elements.
- The microcomputer stores the set values which vary according to the rotation speed. When the DC current level exceeds the set value, the microcomputer enters the overload control state.
- The set Value is determined by the amplification of the voltage amp. circuit.

- Amplification : high → DC current : low
- Amplification : low → DC current: high

- R500, R253, detect the DC voltage at the power circuit. The microcomputer receives a DC voltage (260-380V) via HIC ③7 and applies correction to the overload set value so the DC current is low (high) when the DC voltage is high (low).

(Since the load level is indicated by the DC voltage multiplied by DC current, R247, R248, R249 are provided to perform the same overload judgement even when the voltage varies.)

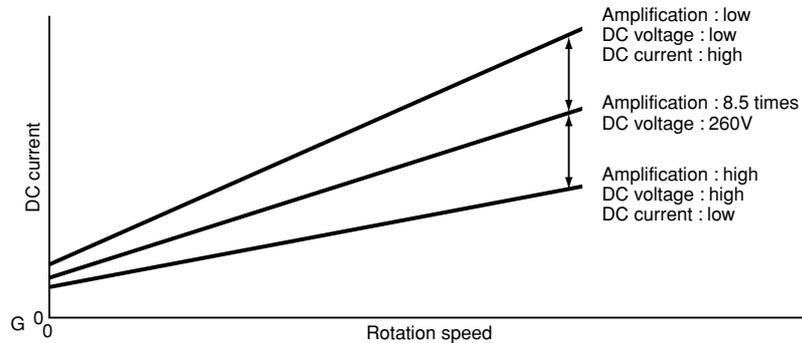


Fig. 8-8

< During start current control >

- It is required to maintain the start current (DC current) constant to smooth the start of the DC motor for the compressor.
- RAC-25NH5, RAC-35NH5 uses software to control the start current.
- The start current varies when the supply voltage varies. This control method copes with variations in the voltages as follows.

(1) Turns on the power module's U⁺ and V⁻ transistors so the current flows to the motor windings as shown in Fig 8-9.

(2) Varies the turn-ON time of the W⁺ transistor according to the DC voltage level and the start is controlled so the start current is approx. 10A as shown in Fig. 8-10.

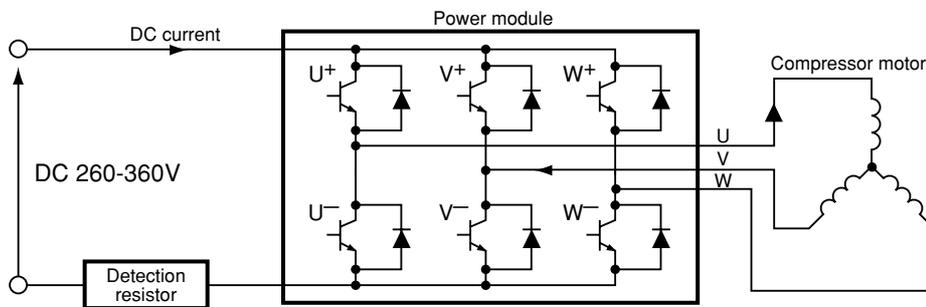


Fig. 8-9

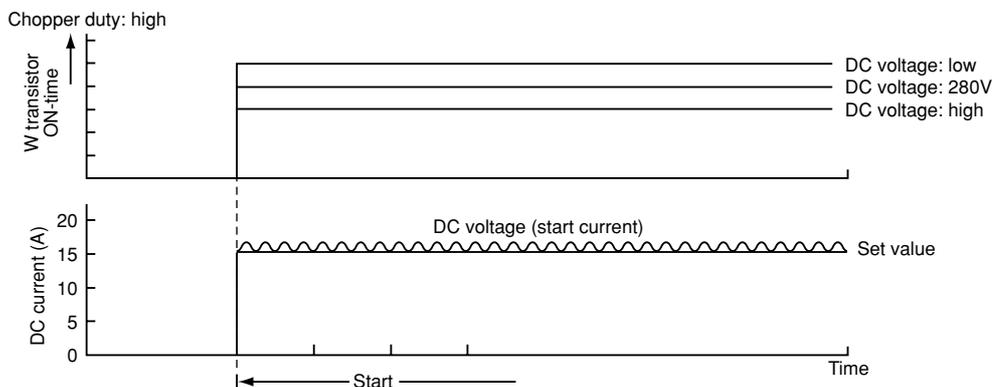


Fig. 8-10

9. Temperature Detection Circuit

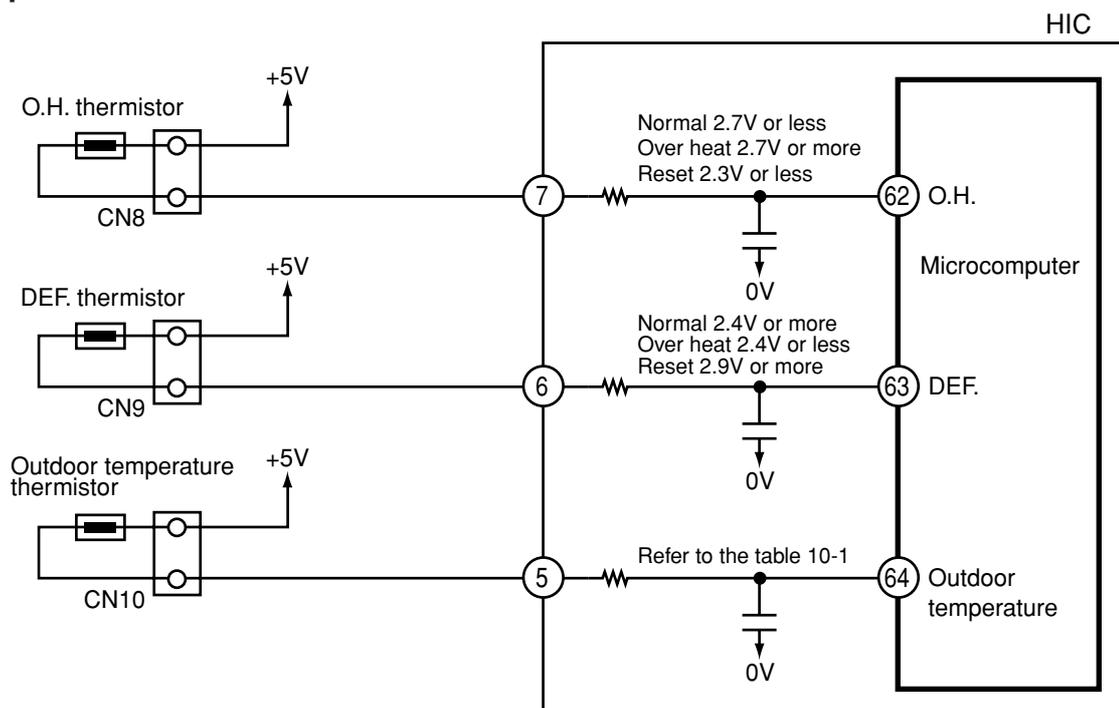


Fig. 9-1

- The Over heat thermistor circuit detects the temperature at the surface of the compressor head, the Defrost. thermistor circuit detects the defrosting operation temperature.
- A thermistor is a negative resistor element which has the characteristics that the higher (lower) the temperature, the lower (higher) the resistance.
- When the compressor is heated, the resistance of the Over heat thermistor becomes low and voltage at pin ⑥② of microcomputer is increased.
- Microcomputer compares the voltage present at pin ⑥② with the internal set value, if it is exceeded the set value microcomputer judges that the compressor is overheated and stops operation.
- When frost forms on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the Defrost. thermistor becomes high and the voltage at pin ⑥③ of microcomputer drops. If this voltage becomes lower than the set value stored inside, the microcomputer starts defrosting control.
- During defrosting operation the microcomputer transfers the defrosting condition command to the indoor microcomputer via the circuit interface.
- The microcomputer always reads the outdoor temperature via a thermistor (microcomputer pin ⑥④), and transfers it to the indoor unit, thus controlling the compressor rotation speed according to the value set at the EEPROM in the indoor unit, and switching the operation status (outdoor fan on/off, etc.) in the dry mode.

The following shows the typical values of outdoor temperature in relation to the voltage:

Table 9-1

Outdoor temperature (°C)	-10	0	10	20	30	40
Microcomputer pin ⑤ voltage (V)	1.19	1.69	2.23	2.75	3.22	3.62

<Reference>

When the thermistor is open, in open status, or is disconnected, microcomputer pins ⑥②–⑥④ are approx. 0V; when the thermistor is shorted, they are approx. 5 V, and LD301 blinks seven times.

However, an error is detected only when the OH thermistor is shorted; in such a case, the blinking mode is entered 12 minutes after the compressor starts operation.

10. Reset Circuit

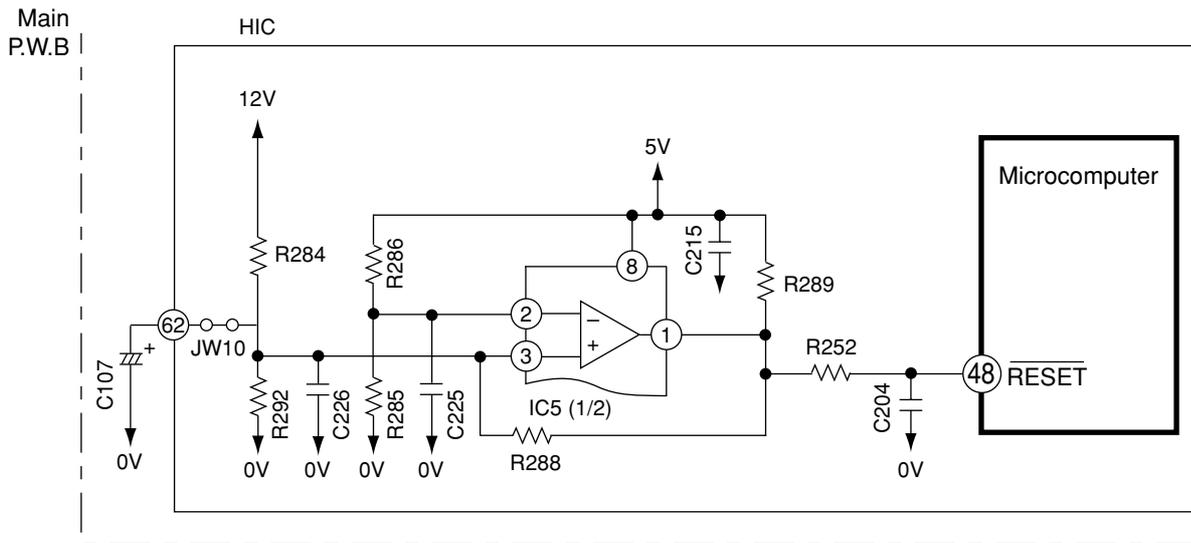


Fig. 10-1

- The reset circuit initializes the microcomputer program when Power is "ON" or "OFF".
- Low voltage at pin (48) resets the microcomputer, and HI activates the microcomputer.
- Fig. 10-1 shows the reset circuit and Fig. 10-2 shows waveform at each point when power is turned on and off.
- When power is turned on, 12V line and 5V line voltages rise and 12V line voltage reaches 10.9V and reset voltage input to pin (48) of microcomputer is set to Hi.
- Reset voltage will be hold "Hi" until the 12V line voltage drops to 9.90V even though the power shuts down.

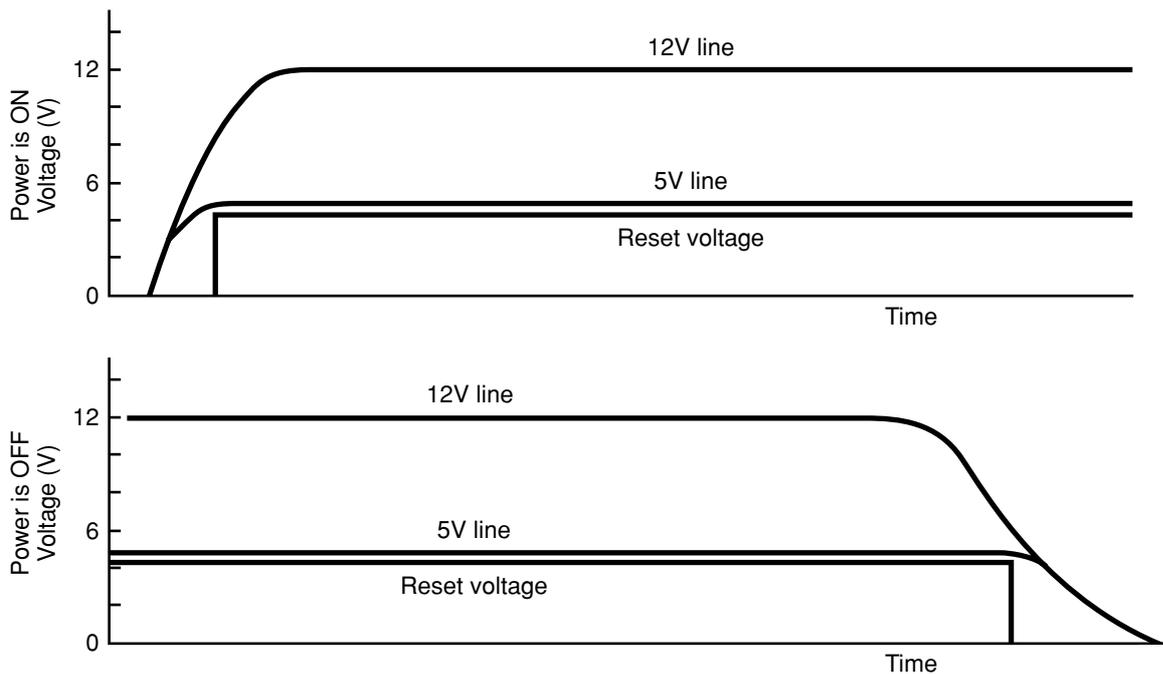


Fig. 10-2

11. Outdoor DC Fan Motor control circuit.

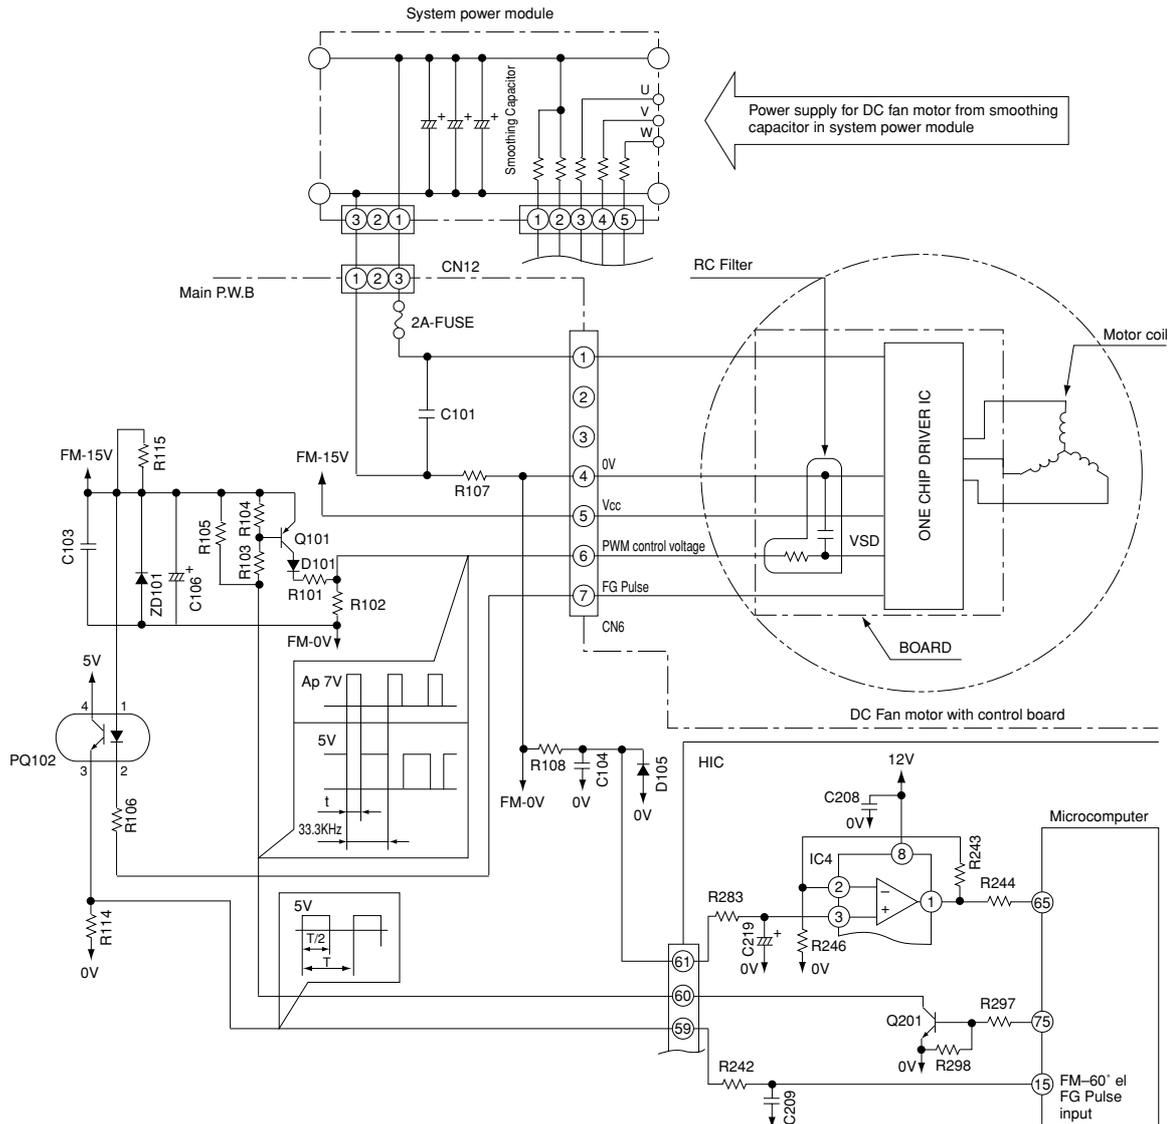


Fig. 11-1

- This model uses DC Fan Motor which has a controller circuit in the Motor.
- This DC Fan Motor will rotate by control voltage apply to Vsp input. (Voltage range: 1.7 to 7V DC)
Vsp high : Faster ; Vsp low : slower ; Vsp lower than 1.7V : stop
- Motor will output FG pulse by following this motor revolution.
- Outdoor Microprocessor will output PWM control signal from FMCHOP terminal by following the instruction from indoor Microprocessor.
- This PWM control signal will convert to Vsp voltage by smoothing circuit (Q101 & RC filter)
- Fan motor will start to rotate when Vsp was proceeding over than 1.7V, and generate FG pulse by rotation speed.
- FG pulse will feed back to Outdoor Microprocessor through PQ102.
- PQ102 is the isolator between Microprocessor circuit and DC Fan Motor circuit, which has to match the Fan Motor revolution with instructed revolution. Such as...
FG feedback: Faster – Instruction: Slower ... Decrease pulse width
FG feedback: Slower – Instruction: Faster ... Increase pulse width
- FG pulse is also used for Fan Motor failure detection
- Microprocessor will monitor FG pulse 30 seconds after start the fan motor. If there is no signal detected, it will consider that the Fan Motor was malfunction and stop the operation. In this case, LD302 on control PWB will blink 12 times. (Fan Motor lock detected)
- R107 and IC4 are used for Fan Motor over current

< Reference >

- When operation stop with LD301 blinks 12 times, it may be caused by faulty DC fan motor.
- In this case, please check CN6 and CN12 connection first. It makes Fan Motor Lock also if those connectors are in misconnection.
- DC Fan Motor has broken when 2A Fuse was burned. Please replace both DC Fan Motor and 2A Fuse together.
- It will makes "Fan Lock Stop" when something has disturb the Fan rotation by inserting materials into propeller fan or ice has growing inside of outdoor unit by snowing.
- It may make "Fan Lock Stop" by strong wind (ex. 17m/sec or above) against the Fan rotation. In this case, unit will be restart again after a while.
- In case of "Fan Lock Stop" even though the DC Fan Motor is rotating correctly, the possible casue is Fan Motor problem or PQ102 on board or control board problem. Stop after the Fan motor runs 2 minutes, Fan Motor may be broken.


< Caution >

- Please take care for the electrical shock by high voltage of DC Fan Motor power source which is common with compressor when you are servicing this unit.
- You can not confirm the coil and wiring of Motor due to the built in control circuit in Fan Motor.

12. Power Factor Control Circuit

Power factor is controlled to almost 100%. (Effective use of power)

With IC in ACT module, control is performed so that input current waveform will be similar to waveform of input voltage

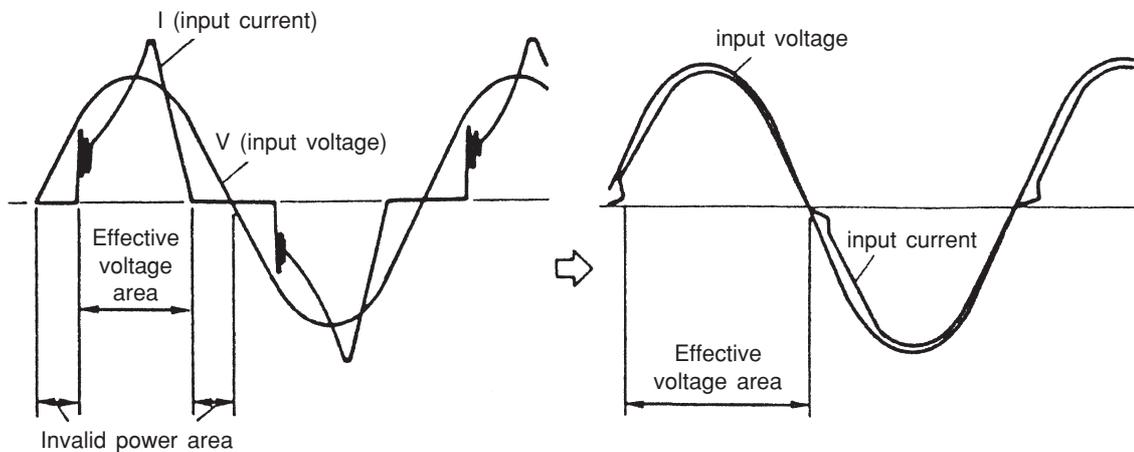


(Even if voltage is applied, current does not flow)

* Assuming the same current capacity (20A), power can be used about 10% effective, comparing with current use (power factor of 90%), and maximum capacity is thereby improved.


SERVICE CALL Q & A

Model RAK-25NH5 / RAC-25NH5
RAK-35NH5 / RAC-35NH5


COOLING MODE

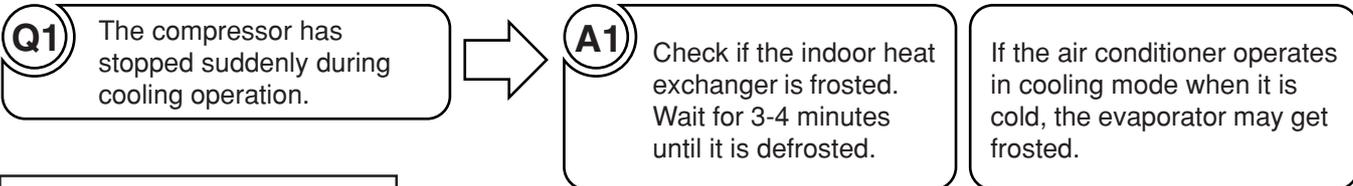

DEHUMIDIFYING MODE

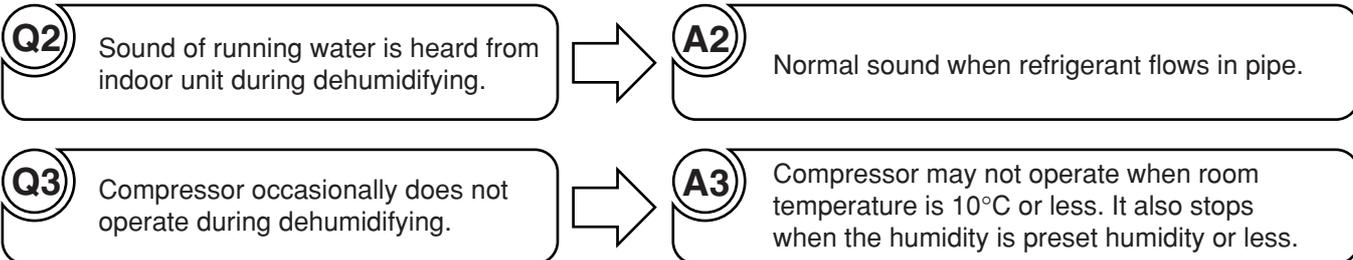

HEATING MODE

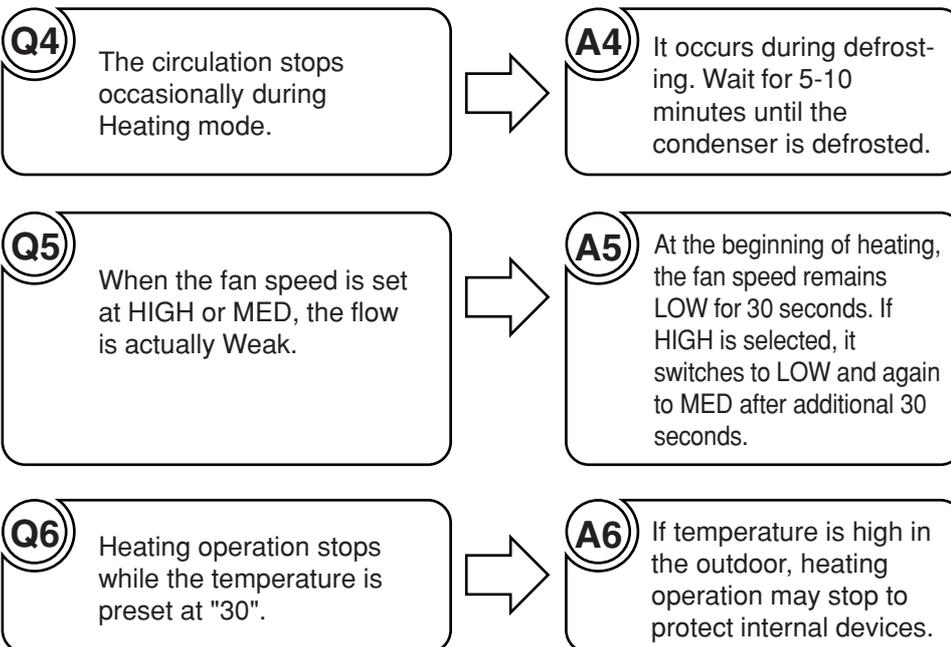

AUTO FRESH DEFROSTING

Q7 After the ON/OFF button is pressed to stop heating, the outdoor unit is still working with the OPERATION lamp lighting.



A7 Auto Fresh Defrosting is carried out : the system checks the outdoor heat exchanger and defrosts it as necessary before stopping operation.

AUTO OPERATION

Q8 Fan speed does not change when fan speed selector is changed during auto operation.



A8 At this point fan speed is automatic.

NICE TEMPERATURE RESERVATION

Q9 When on-timer has been programmed, operation starts before the preset time has been reached.



A9 This is because “Nice temperature reservation” function is operating. This function starts operation earlier so the preset temperature is reached at the preset time. Operation may start maximum 60 minutes before the preset time.

Q10 Does “Nice temperature reservation” function operate during dehumidifying?



A10 It does not work. It works only during cooling and heating.

Q11 Even if the same time is preset, the operation start time varies.



A11 This is because “Nice temperature reservation” function is operating. The start time varies according to the load of room. Since load varies greatly during heating, the operation start time is corrected, so it will vary each day.

INFRARED REMOTE CONTROL

Q12 Timer cannot be set.



A12 Has the clock been set? Timer cannot be set unless the clock has been set.

Q13 The current time display disappears soon.



A13 The current time disappears in approx. 10 seconds. The time set display has priority.

When the current time is set the display flashes for approx 3 minutes.

Q14 The timer has been programmed, but the preset time disappears.



A14 Is the current time past the preset time? When the preset time reaches the current time, it disappears.

OTHERS

Q15 The indoor fan varies among high air flow, low air flow and breeze in the auto fan speed mode. (Heating operation)



A15 This is because the cool wind prevention function is operating, and does not indicate a fault.

The heat exchanger temperature is sensed in the auto speed mode. When the temperature is low, the fan speed varies among high air flow, low air flow and breeze.

Q16 Loud noise from the outdoor unit is heard when operation is started.



A16 When operation is started, the compressor rotation speed goes to maximum to increase the heating or cooling capability, so noise becomes slightly louder. This does not indicate a fault.

Q17 Noise from the outdoor unit occasionally changes.



A17 The compressor rotation speed changes according to the difference between the thermostat set temperature and room temperature. This does not indicate a fault.

Q18 There is a difference between the set temperature and room temperature.



A18 There may be a difference between the set temperature and room temperature because of construction of room, air current, etc. Set the temperature at a comfortable for the space.

Q19 Air does not flow immediately after operation is started.



A19 Preliminary operation is performed for one minute when the power switch on and heating or dehumidifying is set. The operation lamp blinks during this time for heating. This does not indicate a fault.


TROUBLE SHOOTING

Model RAK-25NH5 / RAC-25NH5
RAK-35NH5 / RAC-35NH5

PRECAUTIONS FOR CHECKING




- Remember that the 0V line is biased to 155-170V in reference to the ground level.
- Also note that it takes about 10 minutes until the voltage fall after the power switch is turned off.

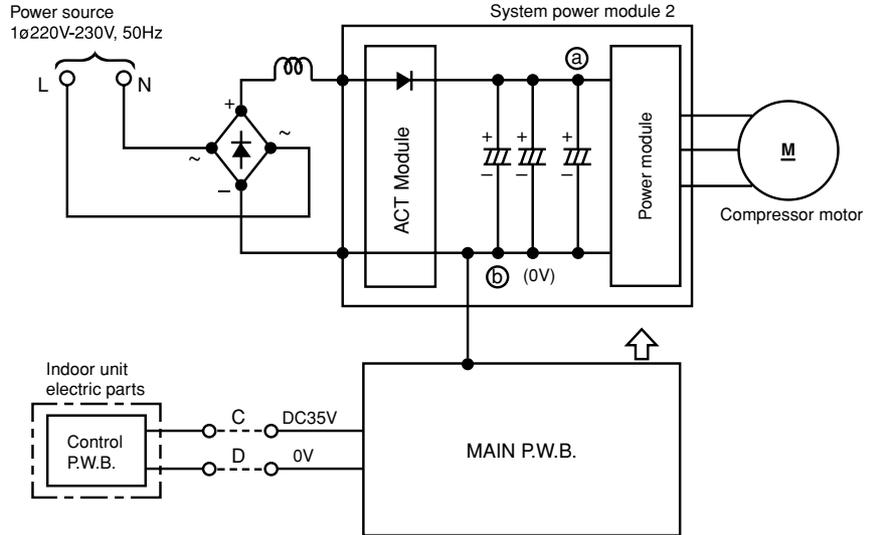

Across (a) – (b) (0V line)..... approx 260-360V
 Across (a) – ground..... approx 155-170V
 Across (b) (0V line)– ground..... approx 155-170V



When using an oscilloscope, never ground it. Don't forget that high voltages as noted above may apply to the oscilloscope.

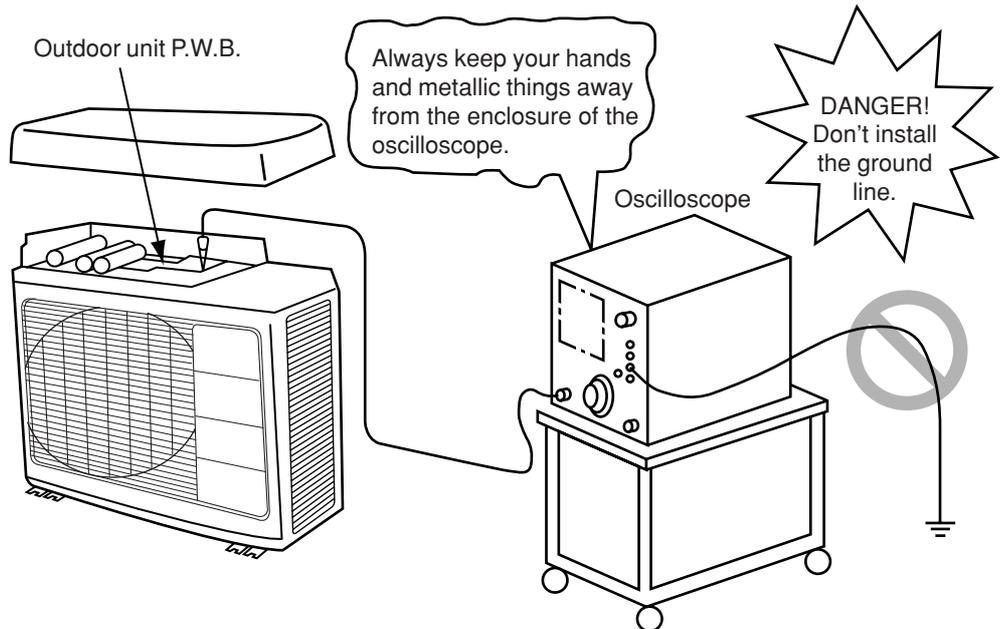

DISCHARGE PROCEDURE AND POWER SHUT OFF METHOD FOR POWER CIRCUIT




WARNING



Caution

- Voltage of about 300-330V is charged between both ends of smoothing capacitors
- During continuity check for each part of circuit in indoor unit electrical parts, disconnect red/gray lead wire connected from diode stack to system power module (SPM2) to prevent secondary trouble. (Be sure to discharge smoothing capacitor)

1. Turn OFF the Power supply to the outdoor unit.
2. After power is turned off, wait for 10 minutes or more. Then, remove electrical parts cover and apply soldering iron of 30 to 75W for 15 seconds or more to P2 and N1 terminals on system power module, in order to discharge voltage in smoothing capacitor.
3. Remove receptacle of red/gray lead wire connected to system power module from diode stack before performing operation check of each circuit.

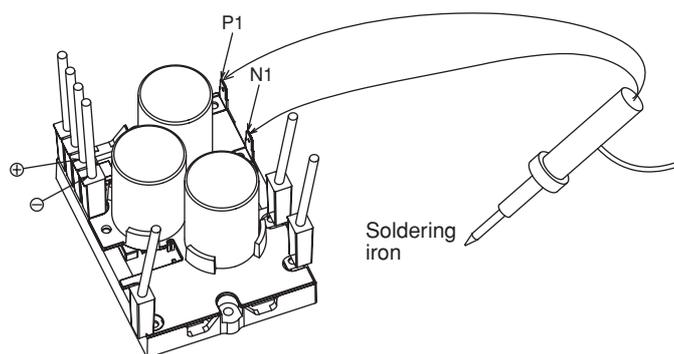


System power module

Do not use a soldering iron with transformer: If one is used, thermal fuse inside transformer will be blown


As shown above, apply soldering iron to metal parts (receptable) inside the sleeve corresponding to P1 and N1 terminals of system power module: Do this with smoothing capacitors kept connected. By removing red/gray lead wire from diode stack, power supply can be shut off. (corresponding to ⊕ and ⊖ terminals of system power module)

RAC-25NH5, RAC-35NH5

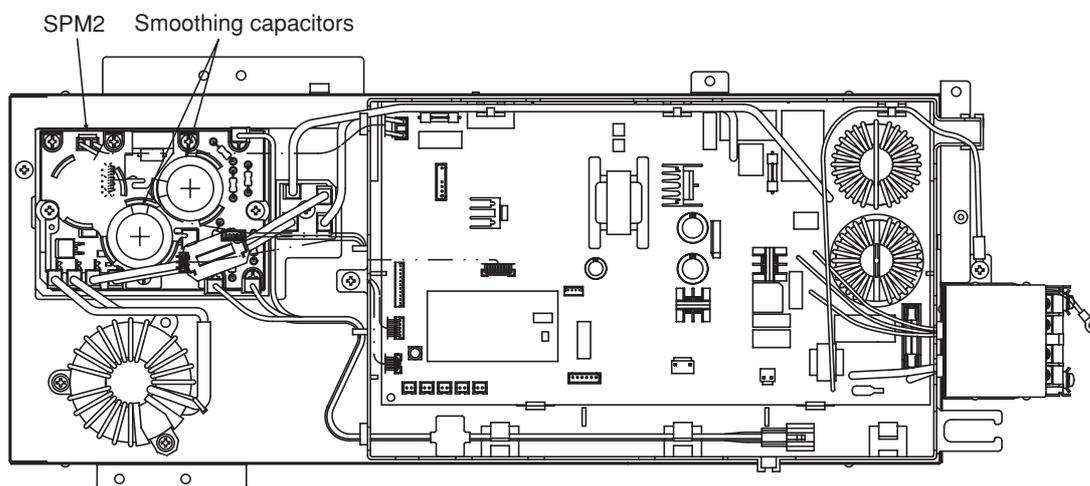

CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING CYCLE

Model **RAK-25NH5 / RAC-25NH5**
RAK-35NH5 / RAC-35NH5

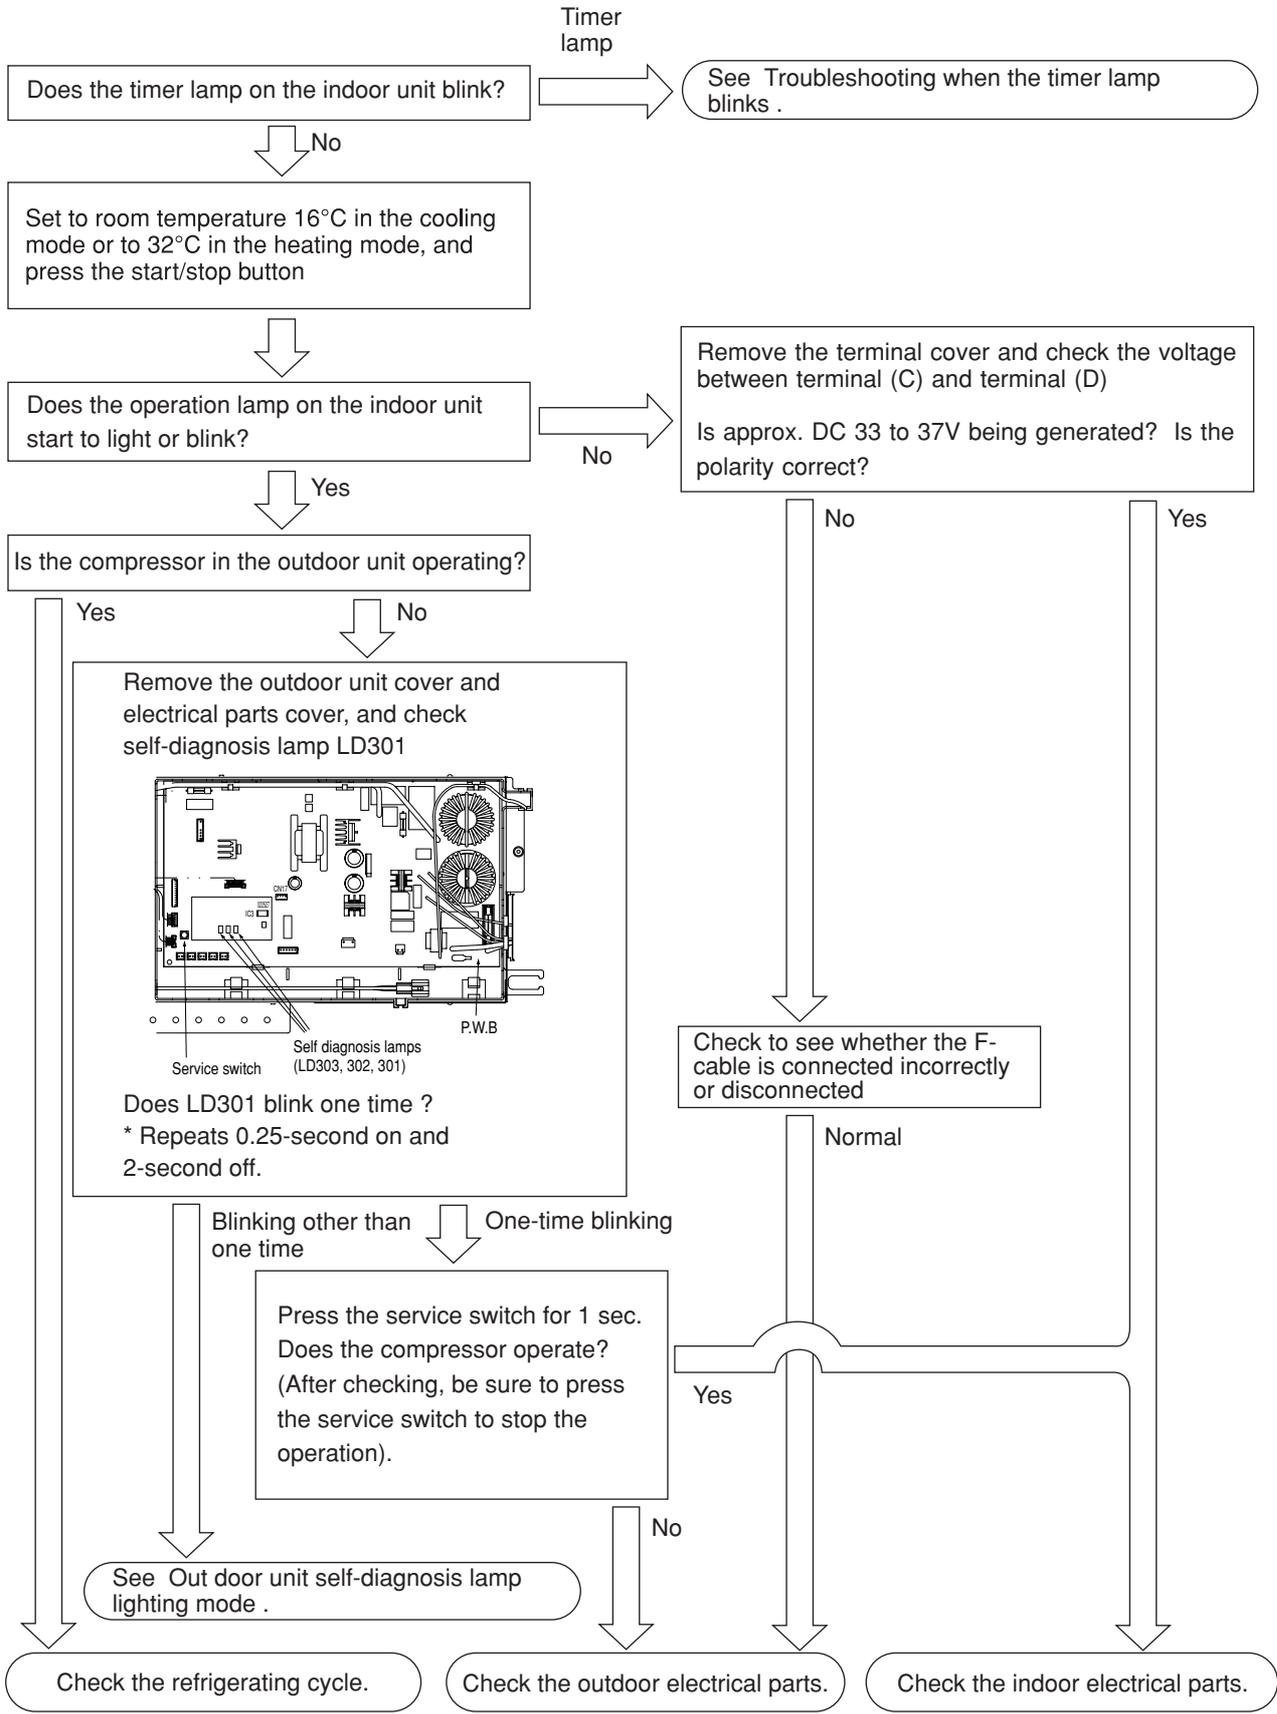



TROUBLESHOOTING WHEN TIMER LAMP BLINKS.

Model RAK-25NH5, RAK-35NH5

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.

SELF-DIAGNOSIS LIGHTING MODE

Model: RAK-25NH5, RAK-35NH5

No.	Blinking of Timer lamp	Reason for indication	Possible cause
1	 1 time	<u>Reversing valve defective</u> When the indoor heat exchanger temperature is too low in the heating mode or it is too high in the cooling mode.	(1) Reversing valve defective (2) Heat exchanger thermistor disconnected (only in the heating mode) (Note) The malfunction mode is entered the 3rd time this abnormal indication appears (read every 3 minutes).
2	 2 times	<u>Outdoor unit forced operation</u> When the outdoor unit is in forced operation or balancing operation after forced operation	Electrical parts in the outdoor unit
3	 3 times	<u>Indoor/outdoor interface defective</u> When the interface signal from the outdoor unit is interrupted.	(1) Indoor interface circuit (2) Outdoor interface circuit
4	 4 times	Outdoor electrical assembly defective.	Please check at the outdoor electrical led lamp blinking (LD301) and refer to self diagnosis lighting mode for outdoor unit.
5	 9 times	<u>Room thermistor or heat exchanger thermistor is faulty</u> When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor (2) Heat exchanger thermistor
6	 10 times	<u>Over-current detection at the DC fan motor</u> when over-current is detected at the DC fan motor of the indoor unit.	(1) Indoor fan locked (2) Indoor fan motor (3) Indoor control P.W.B.
※1 7	 13 times	<u>IC401 or IC402 data reading error</u> When data read from IC401 or IC402 is incorrect.	IC401 or IC402 abnormal


( -- Lights for 0.5 sec. at interval of 0.5 sec.)

<Cautions>


- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check to see if the F-cable is connected or disconnected.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ※1).

CHECKING INDOOR UNIT ELECTRICAL PARTS


1. Power does not come on (no operation)

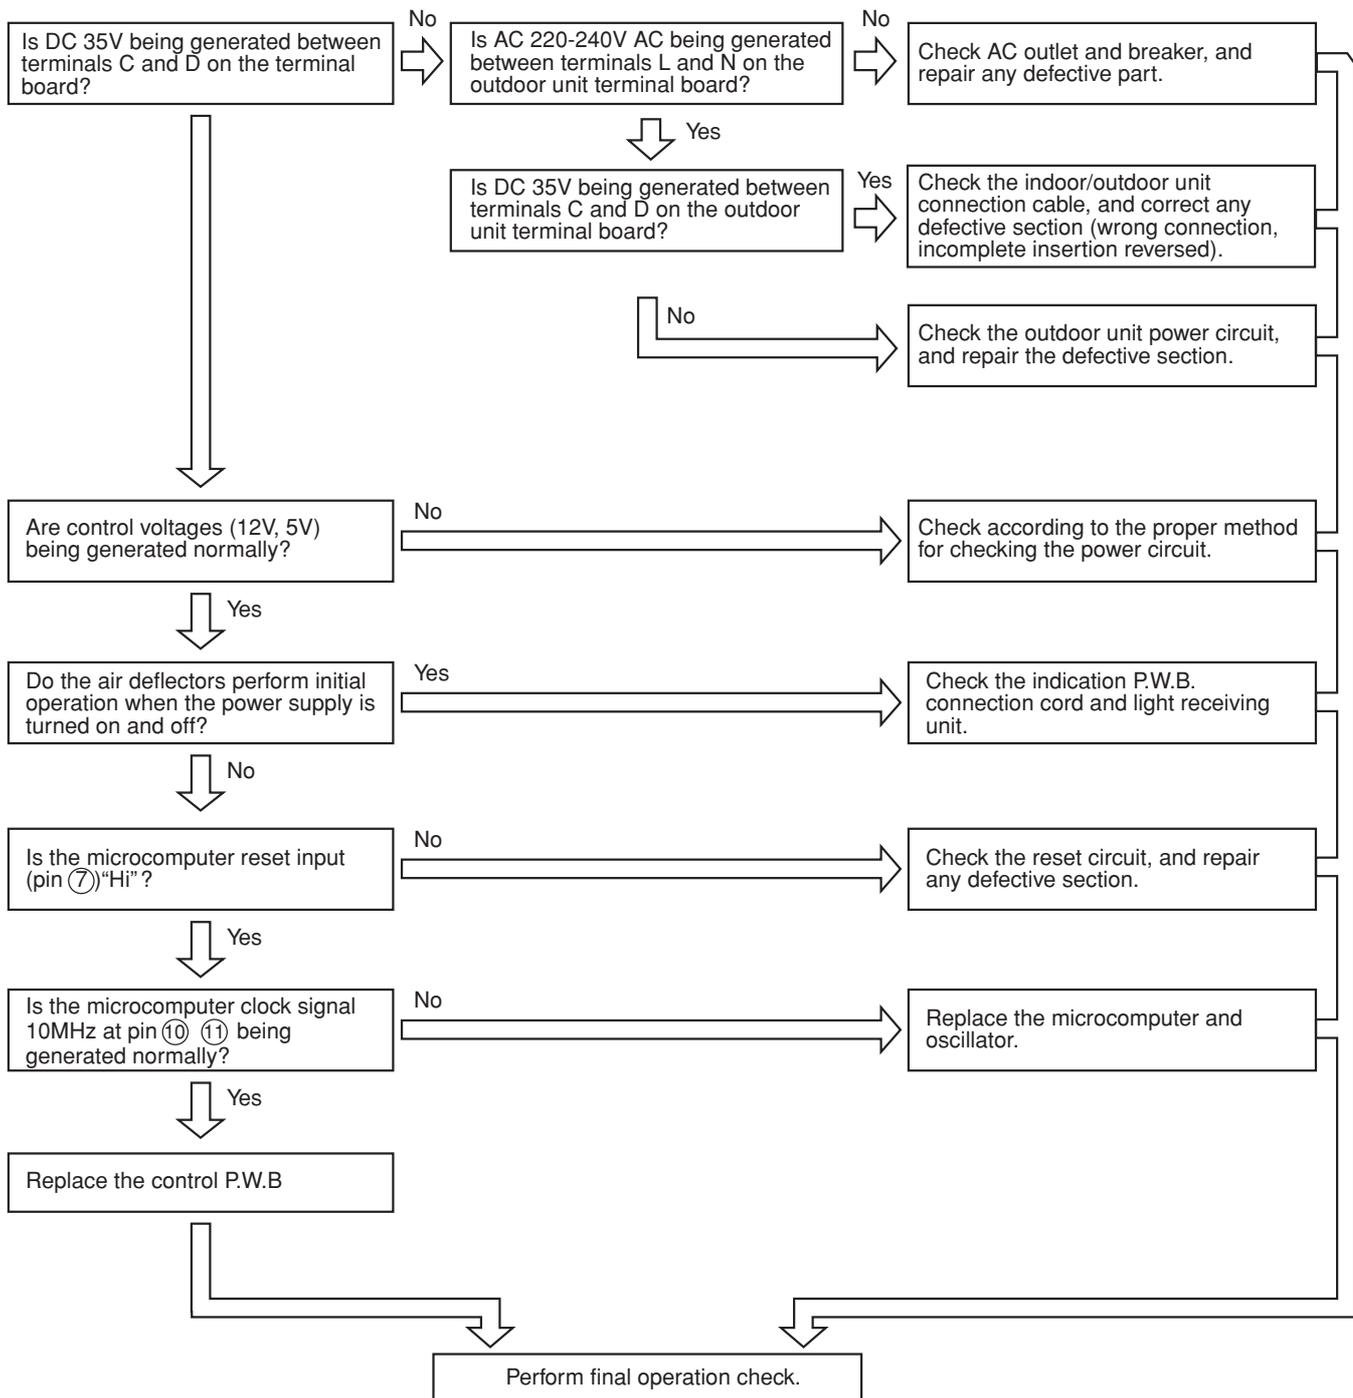


2. Outdoor unit does not operate (but receives remote infrared signal)

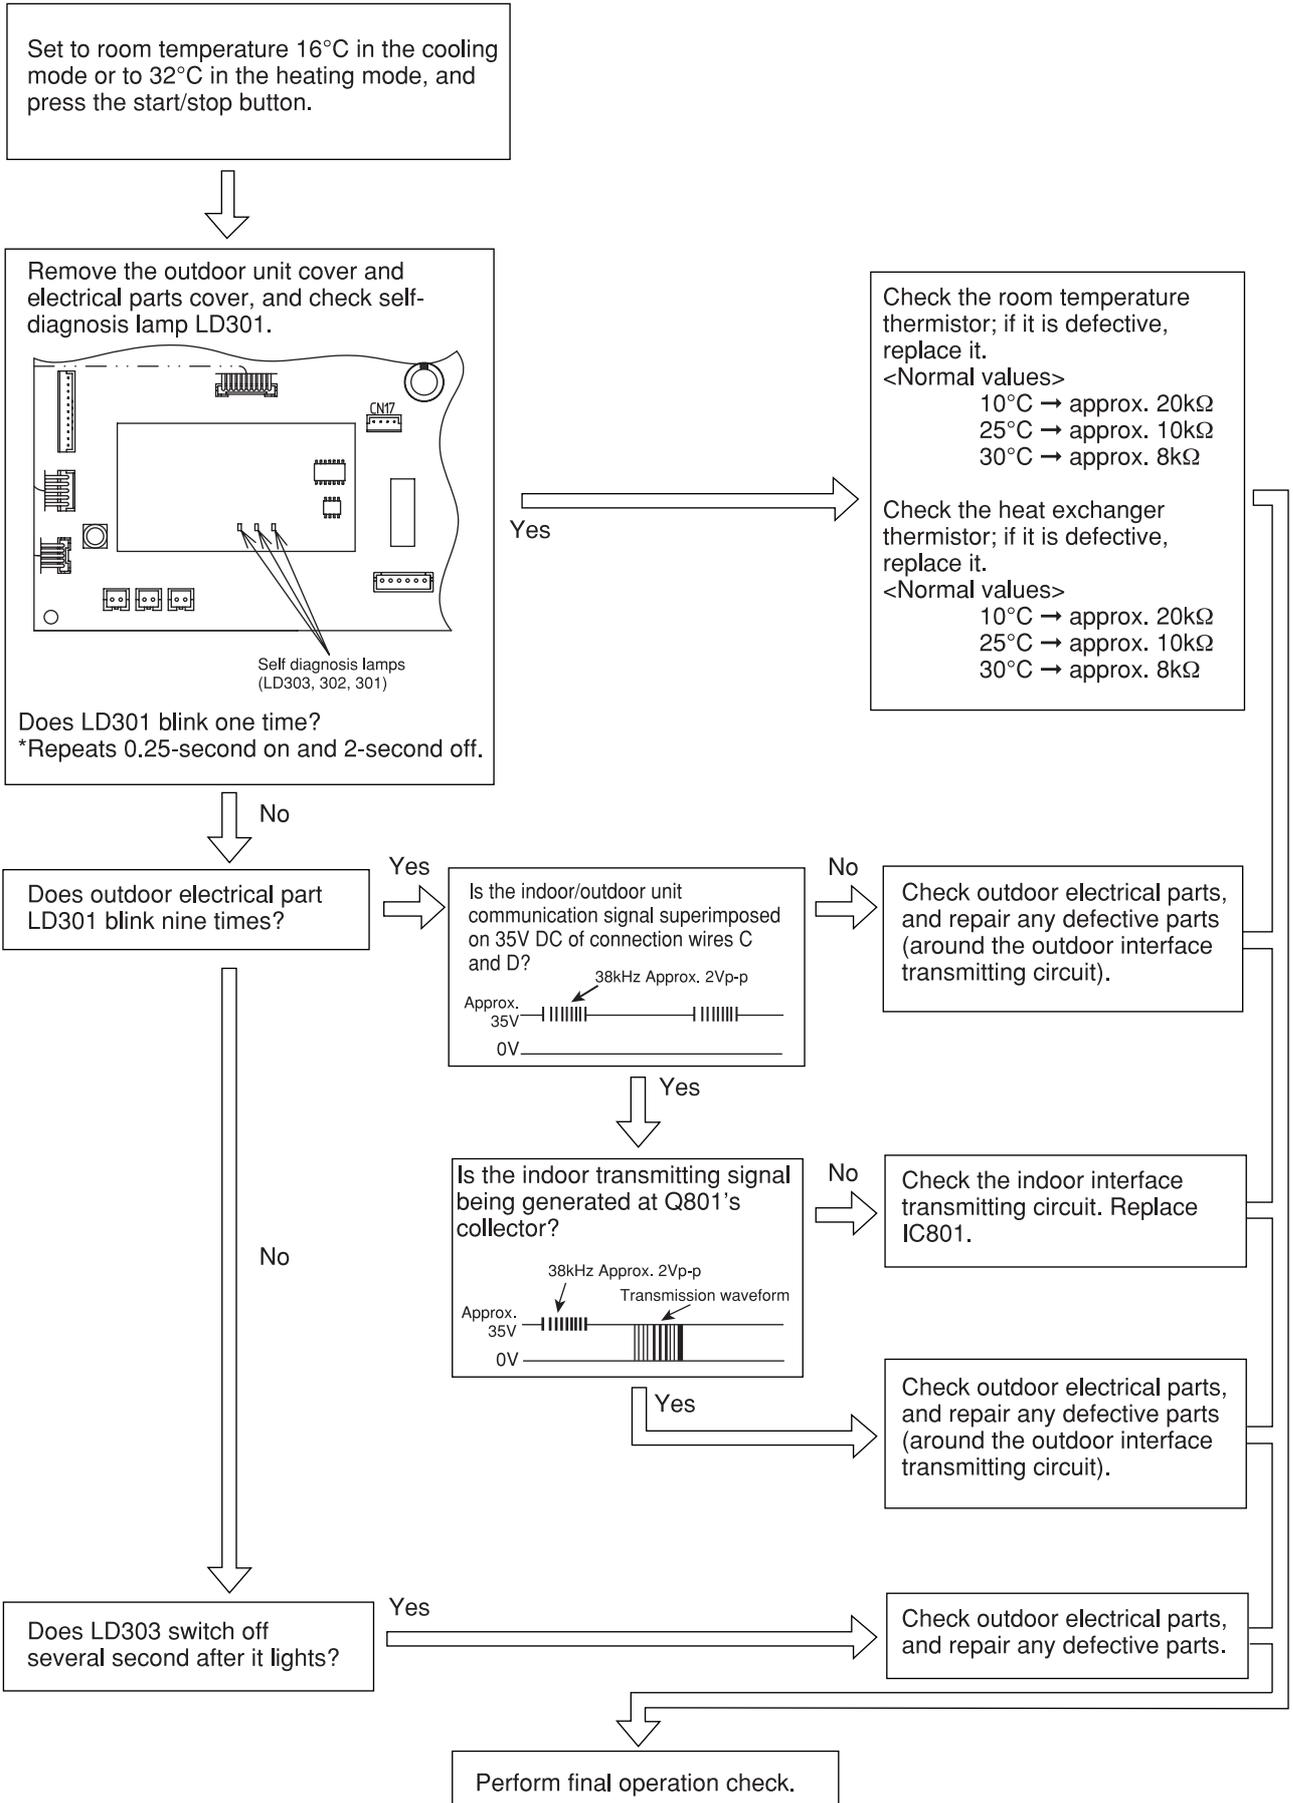


3. Only indoor fan does not operate (other is normal)

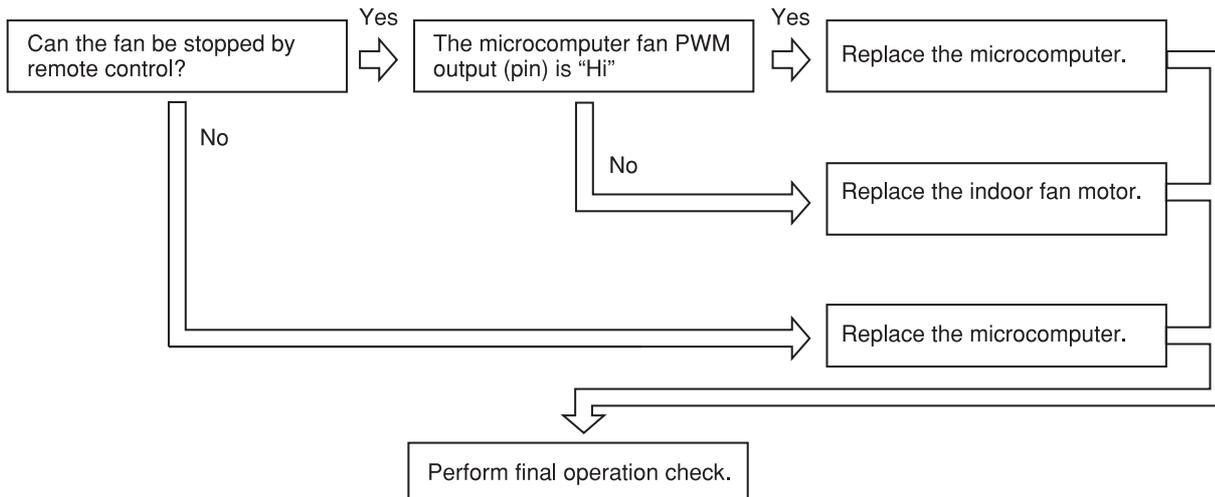


4. Air deflector does not move (others are normal)

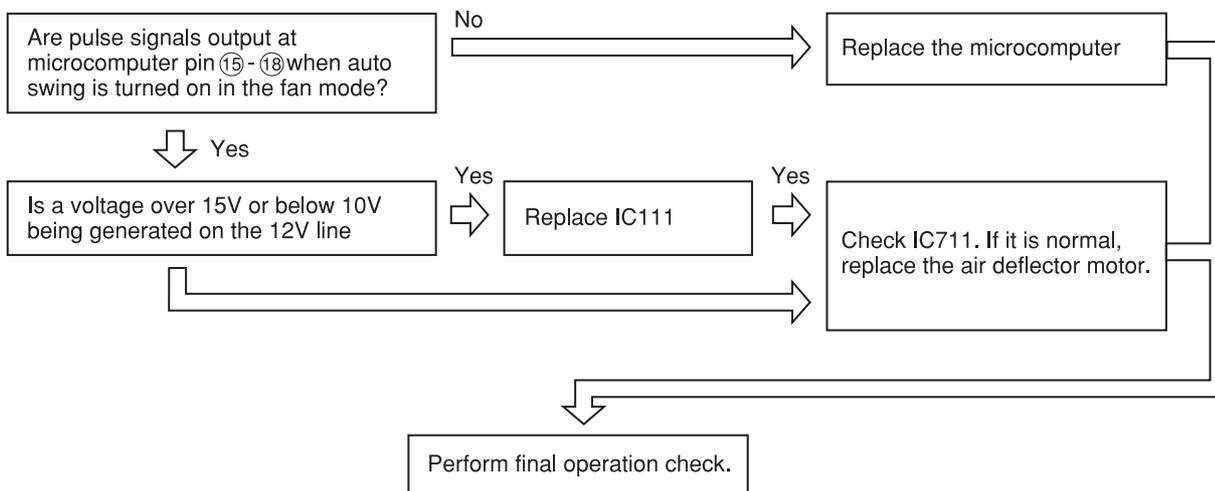


5. All systems stop from several seconds to several minutes after operation is started (all indicators are also off)

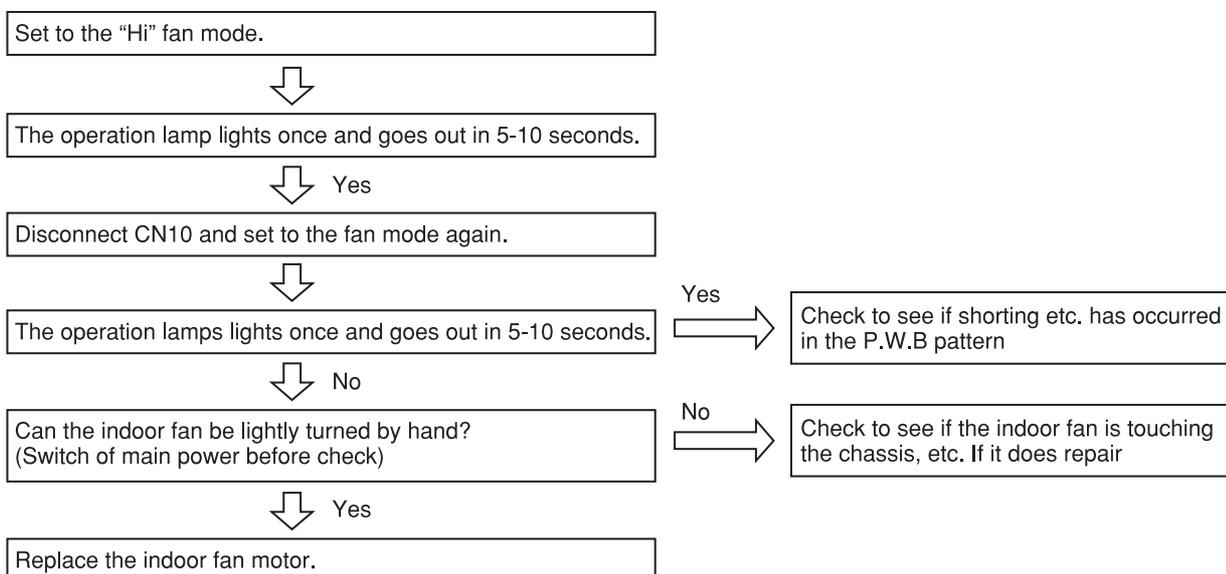

6. Check the main P.W.B (power circuit)

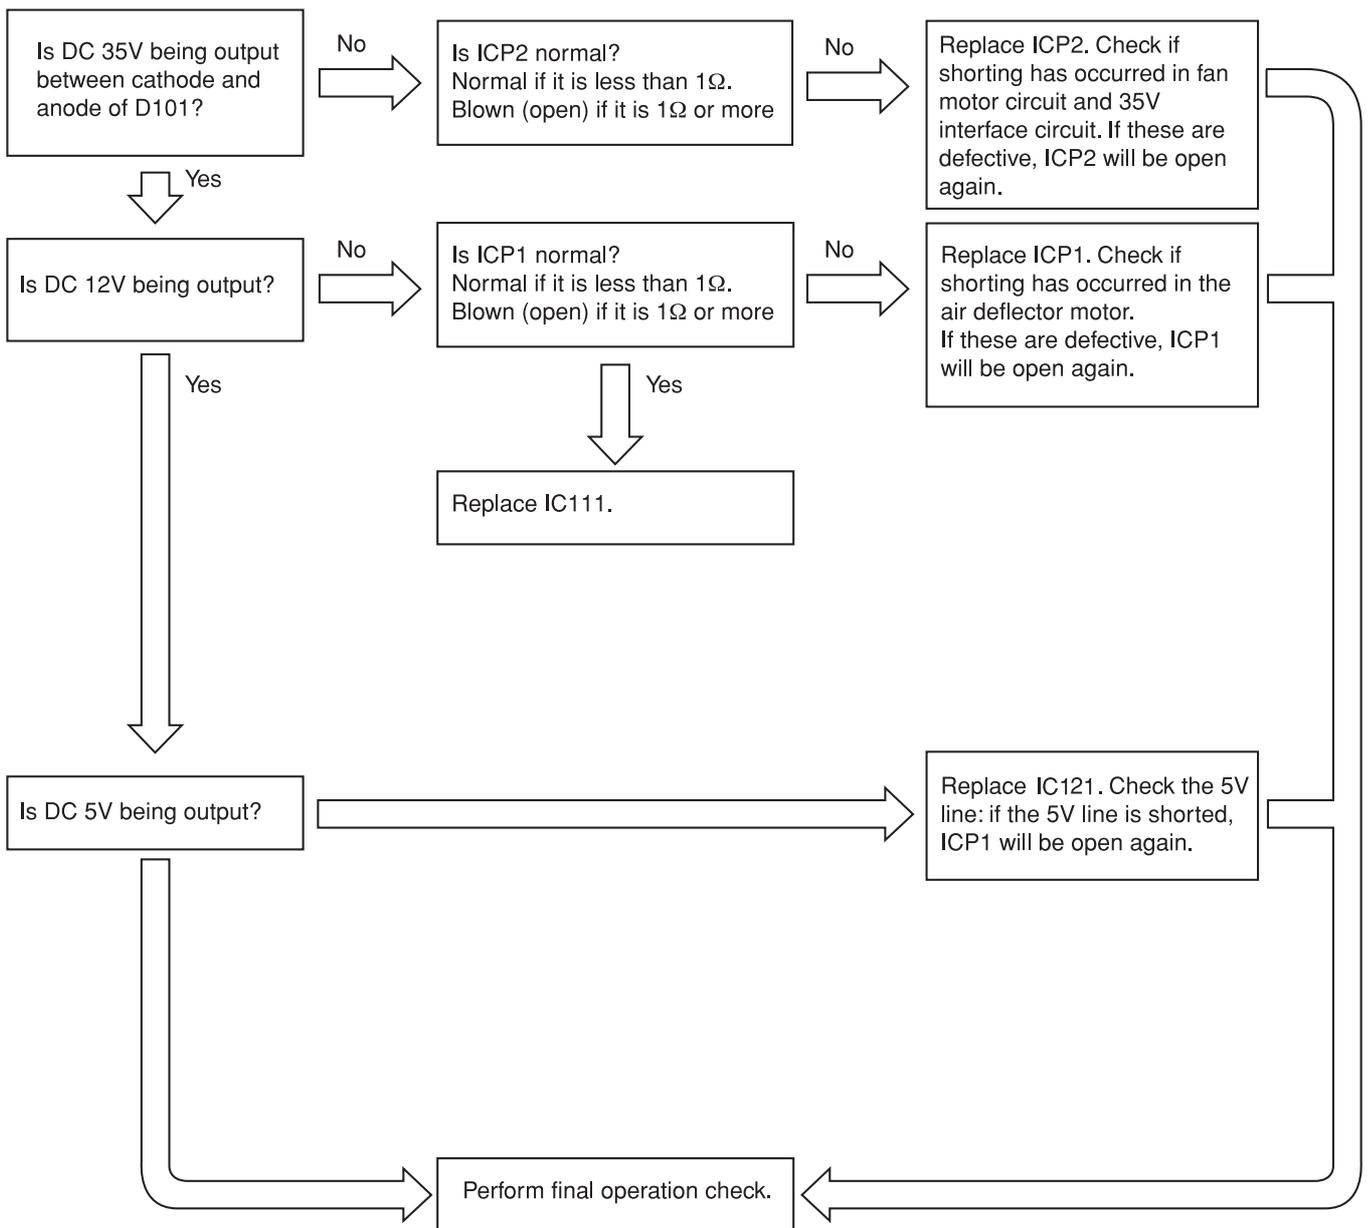


CHECKING THE REMOTE CONTROLLER

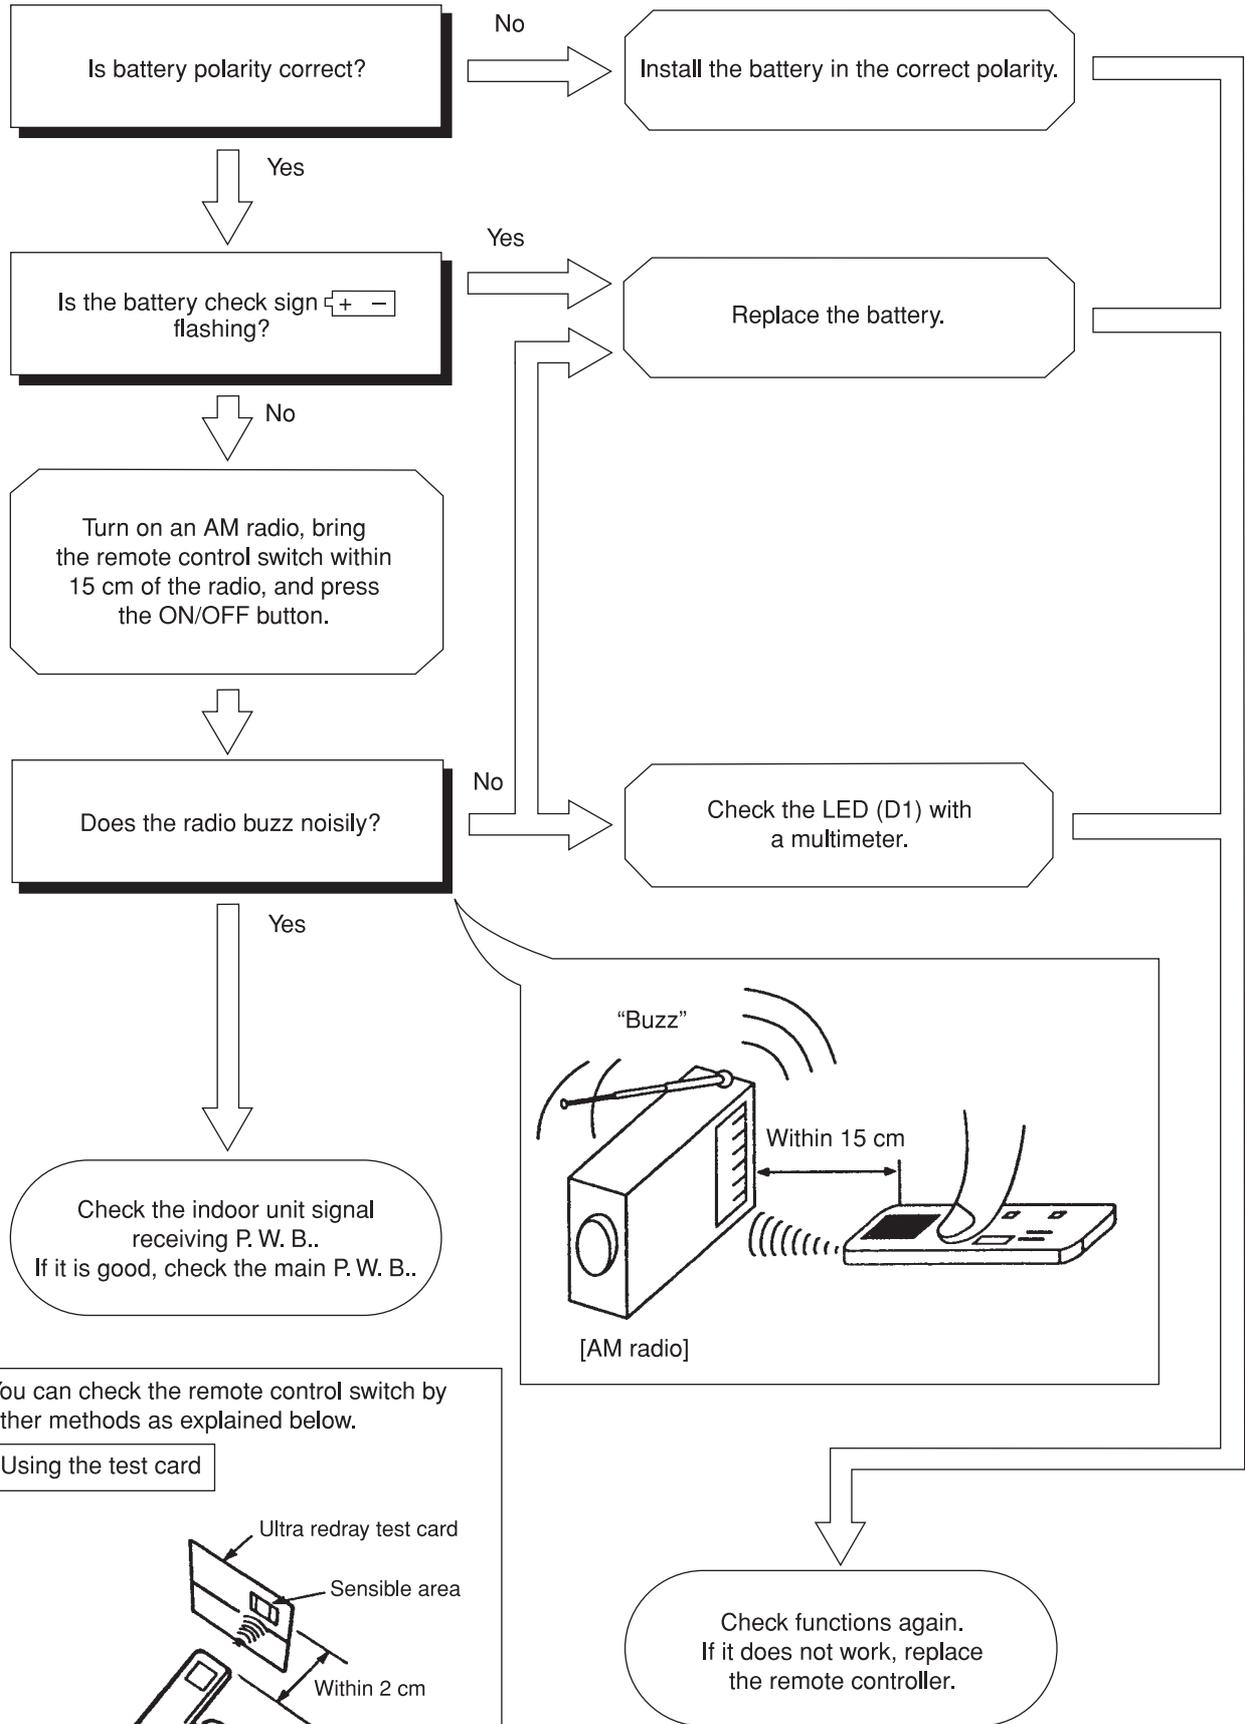

You can check the remote control switch by other methods as explained below.


Using the test card

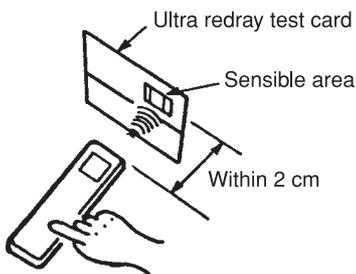



The sensible area should flash in orange when you operate the remote control unit if it is good.


CHECKING THE OUTDOOR UNIT ELECTRICAL PARTS


MODEL RAC-25NH5, RAC-35NH5

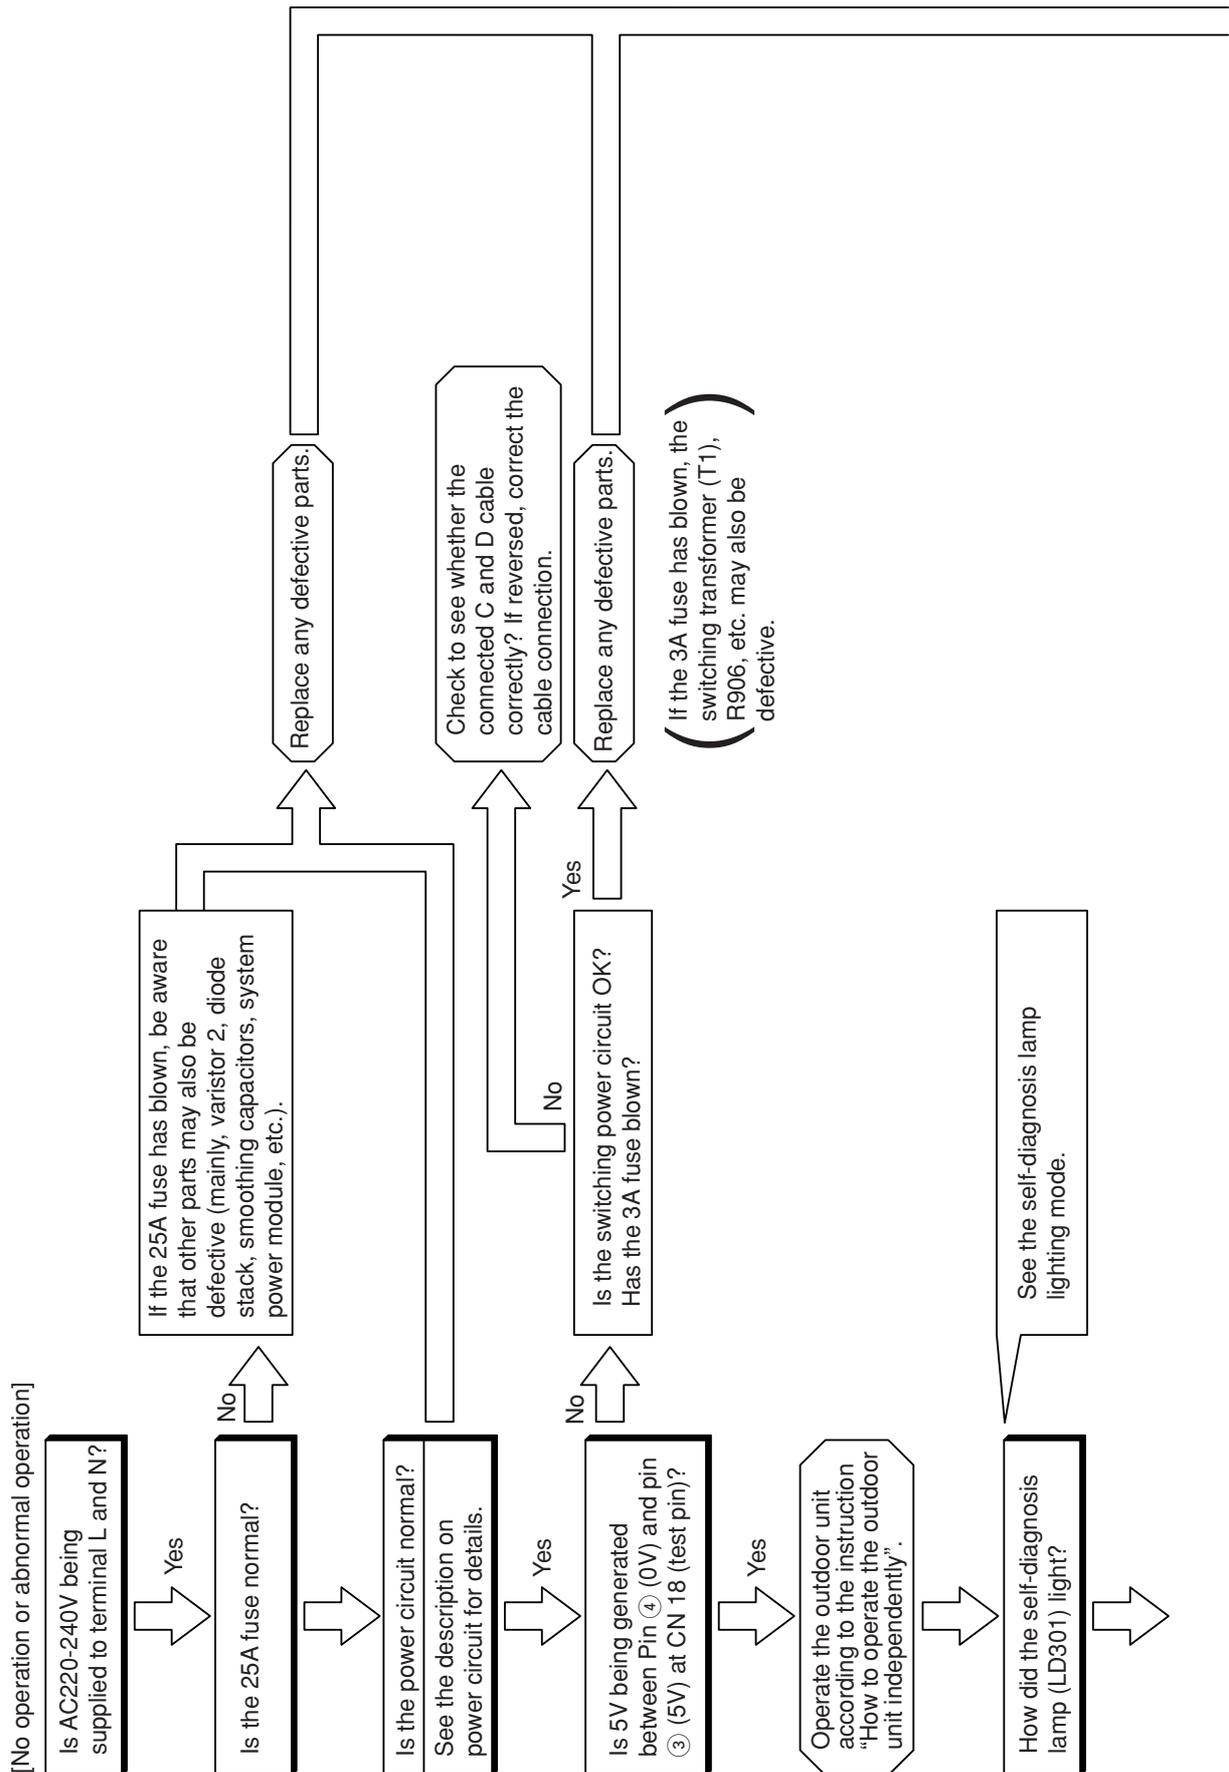

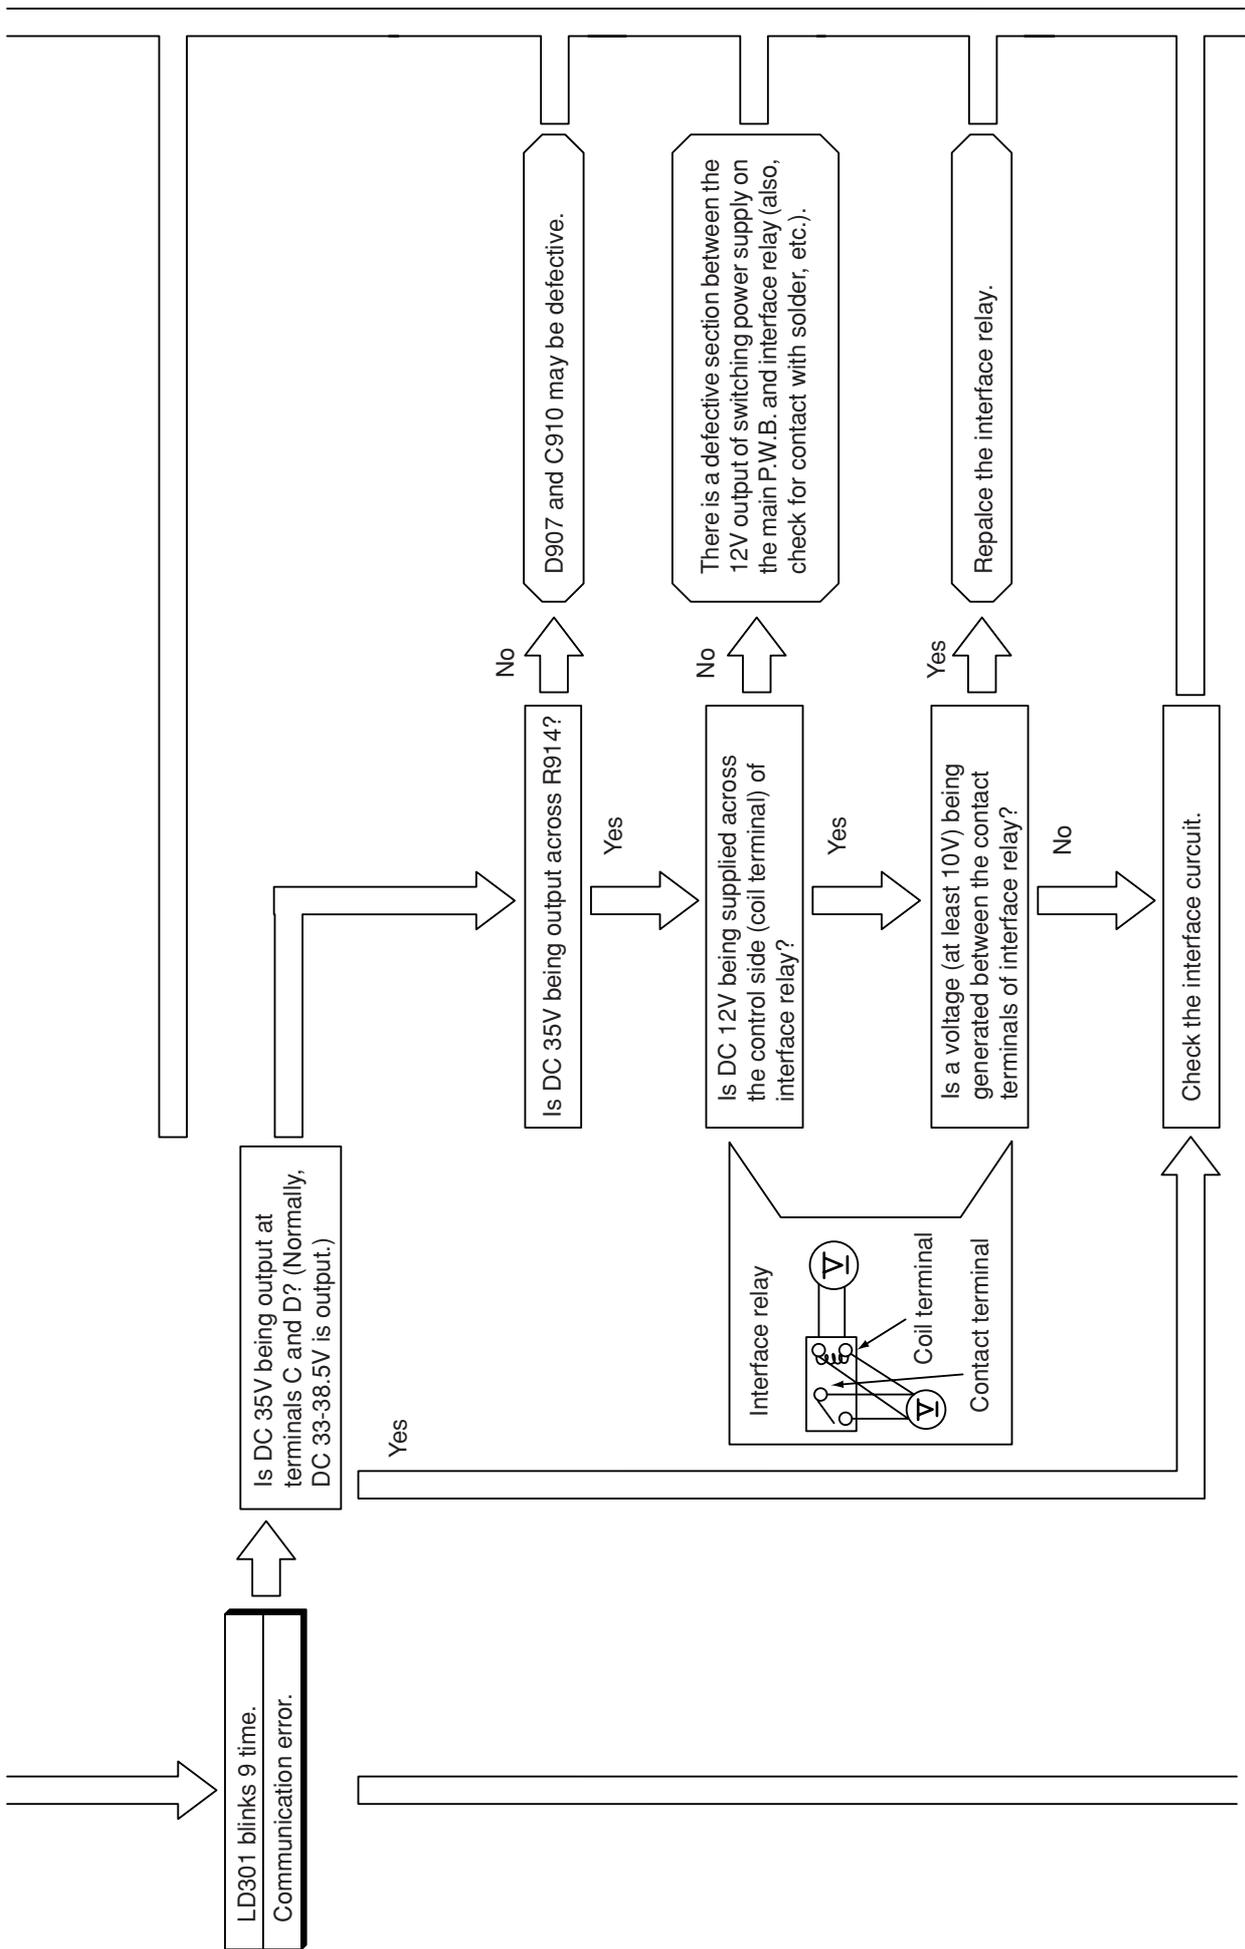

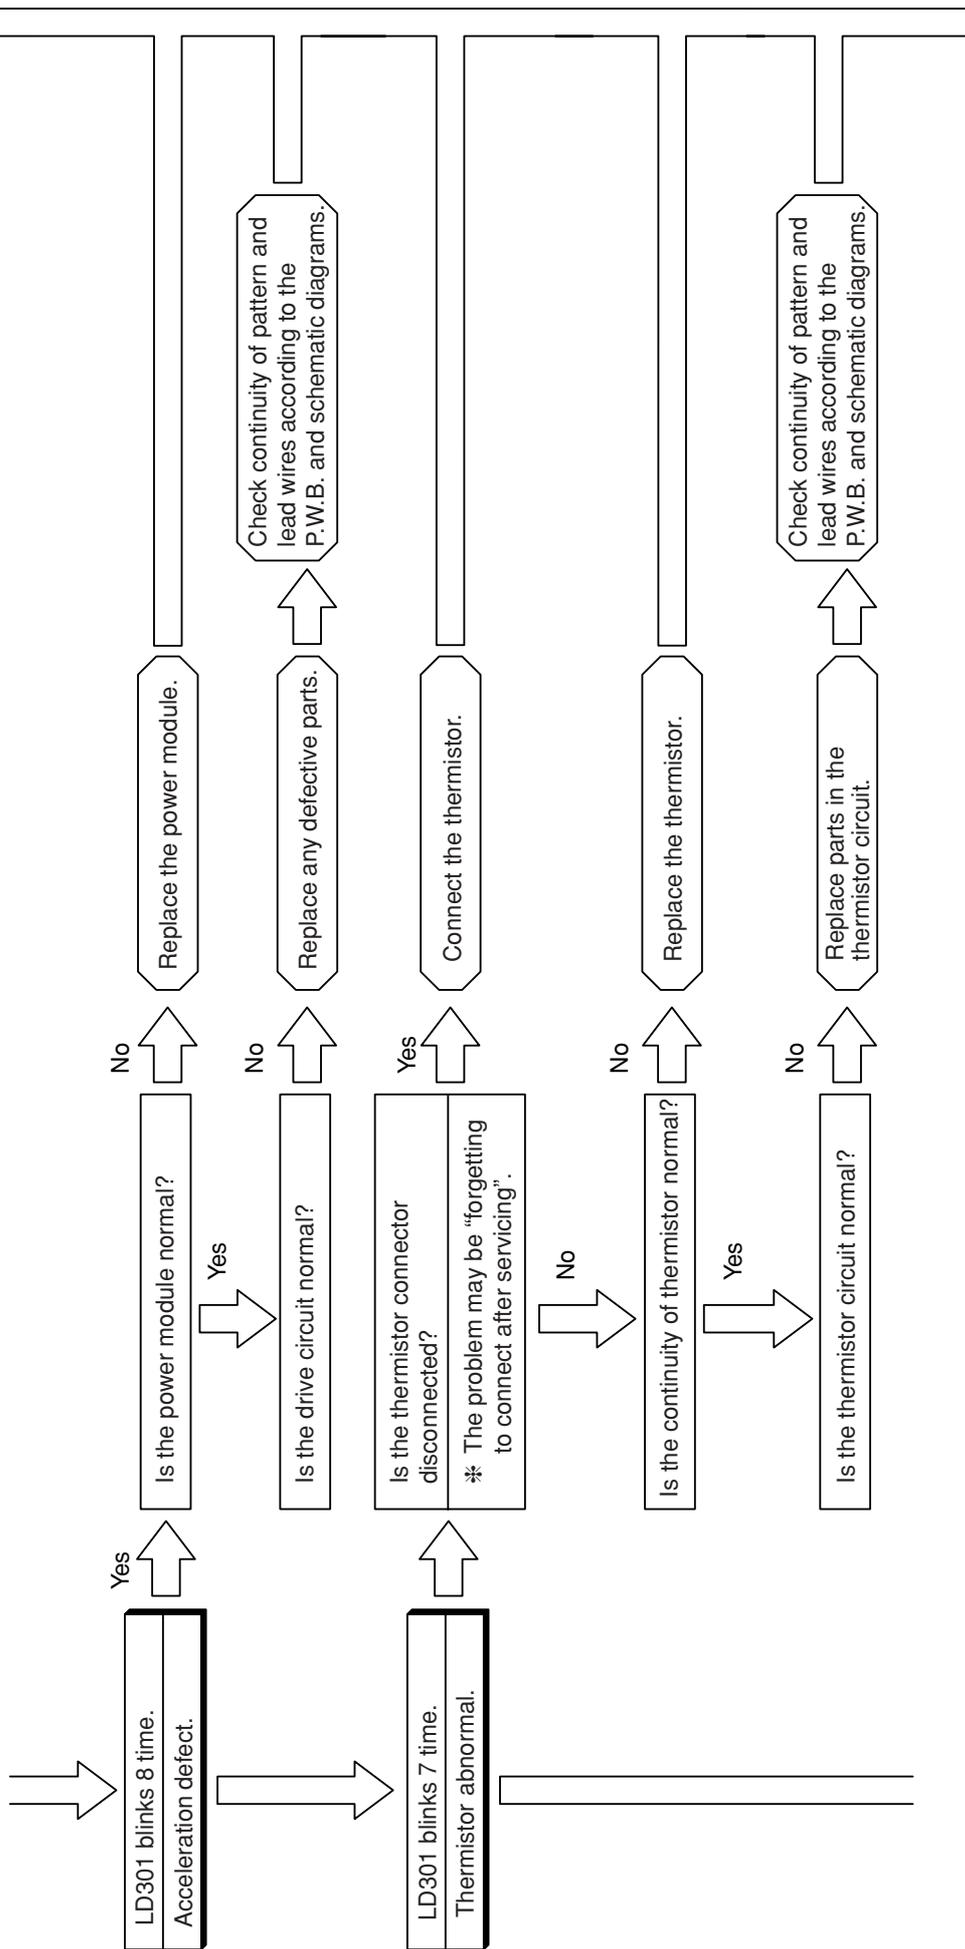


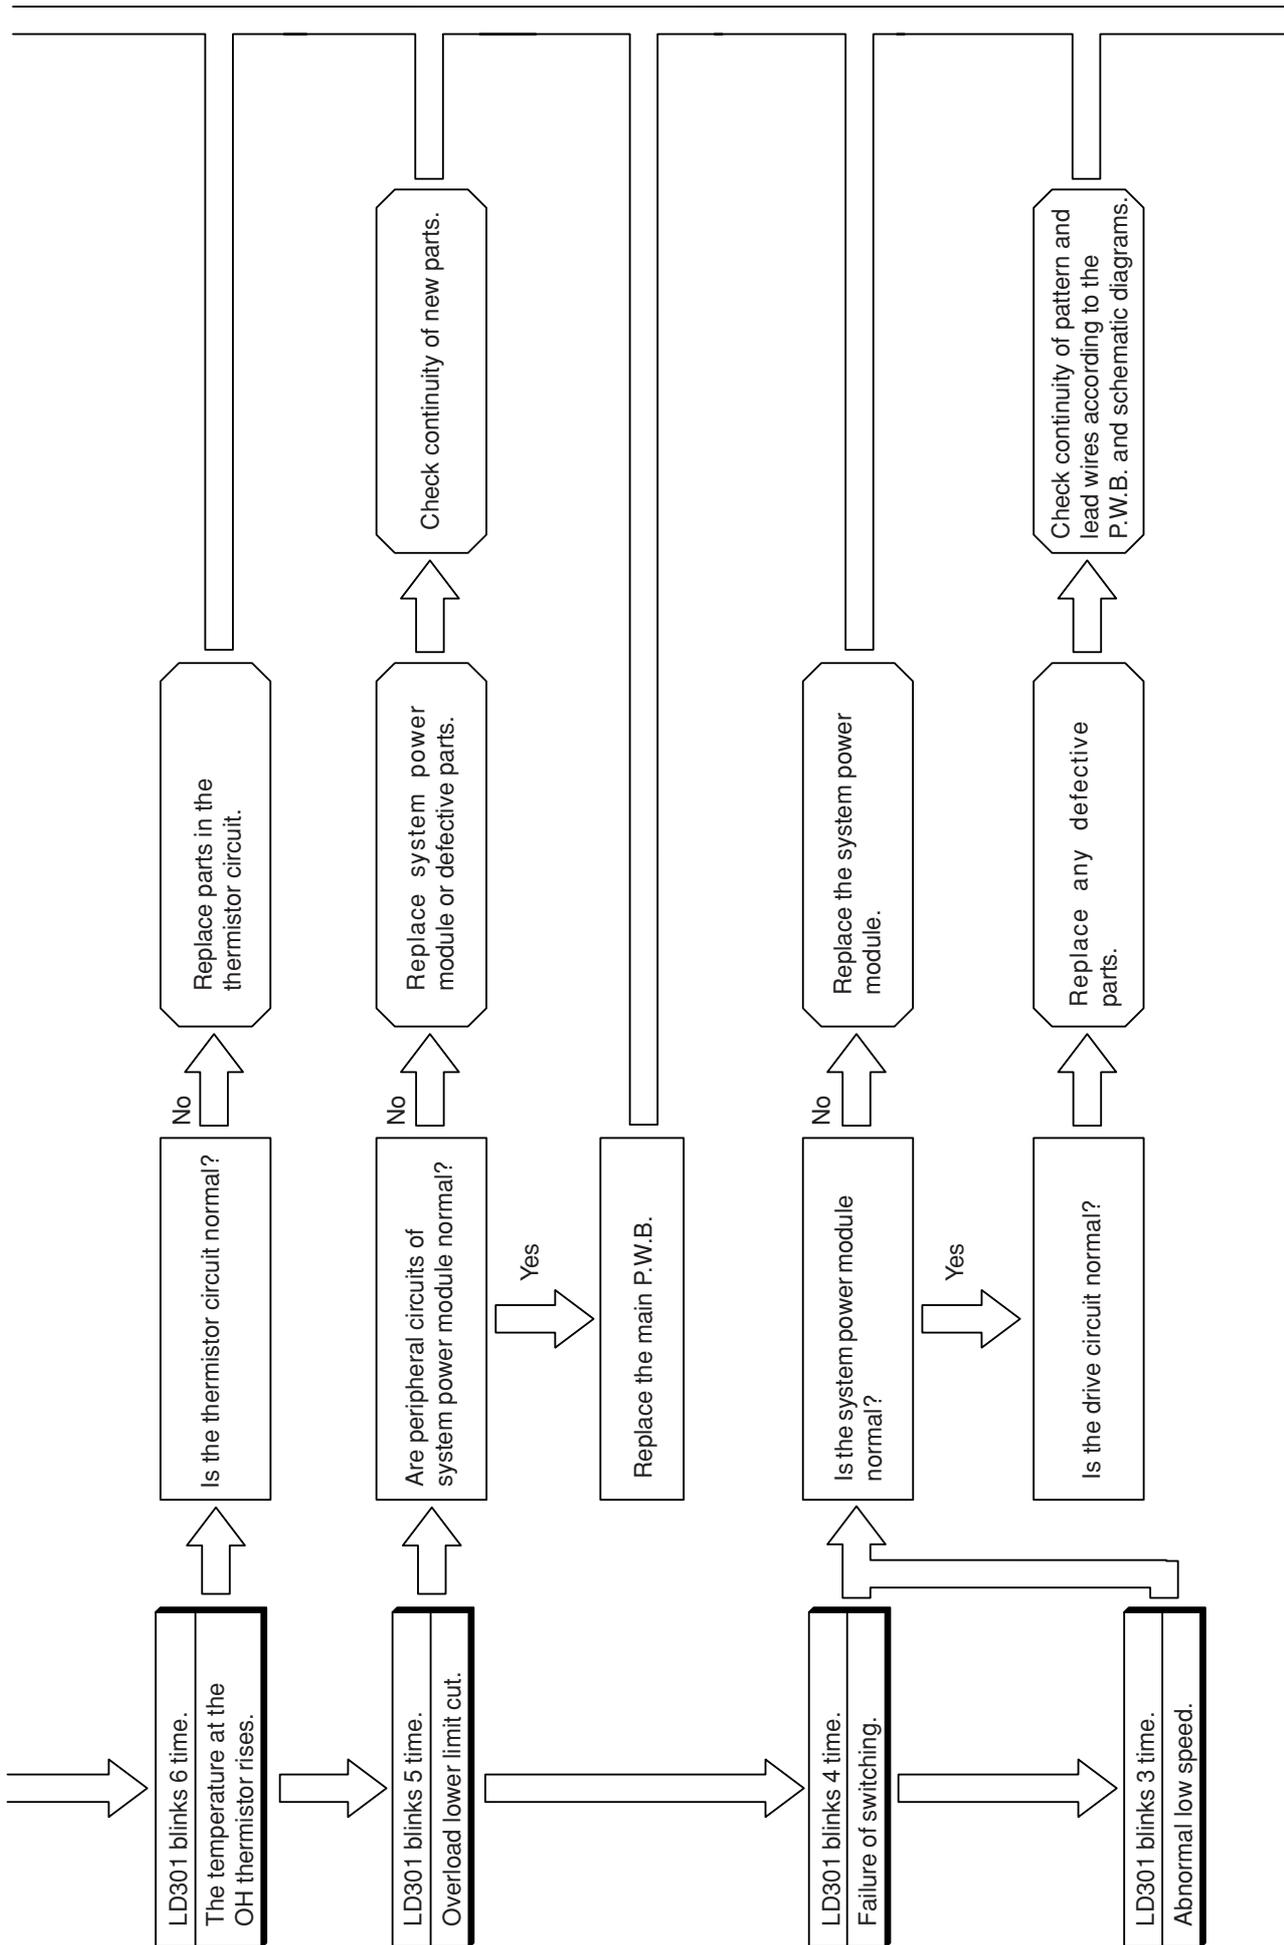

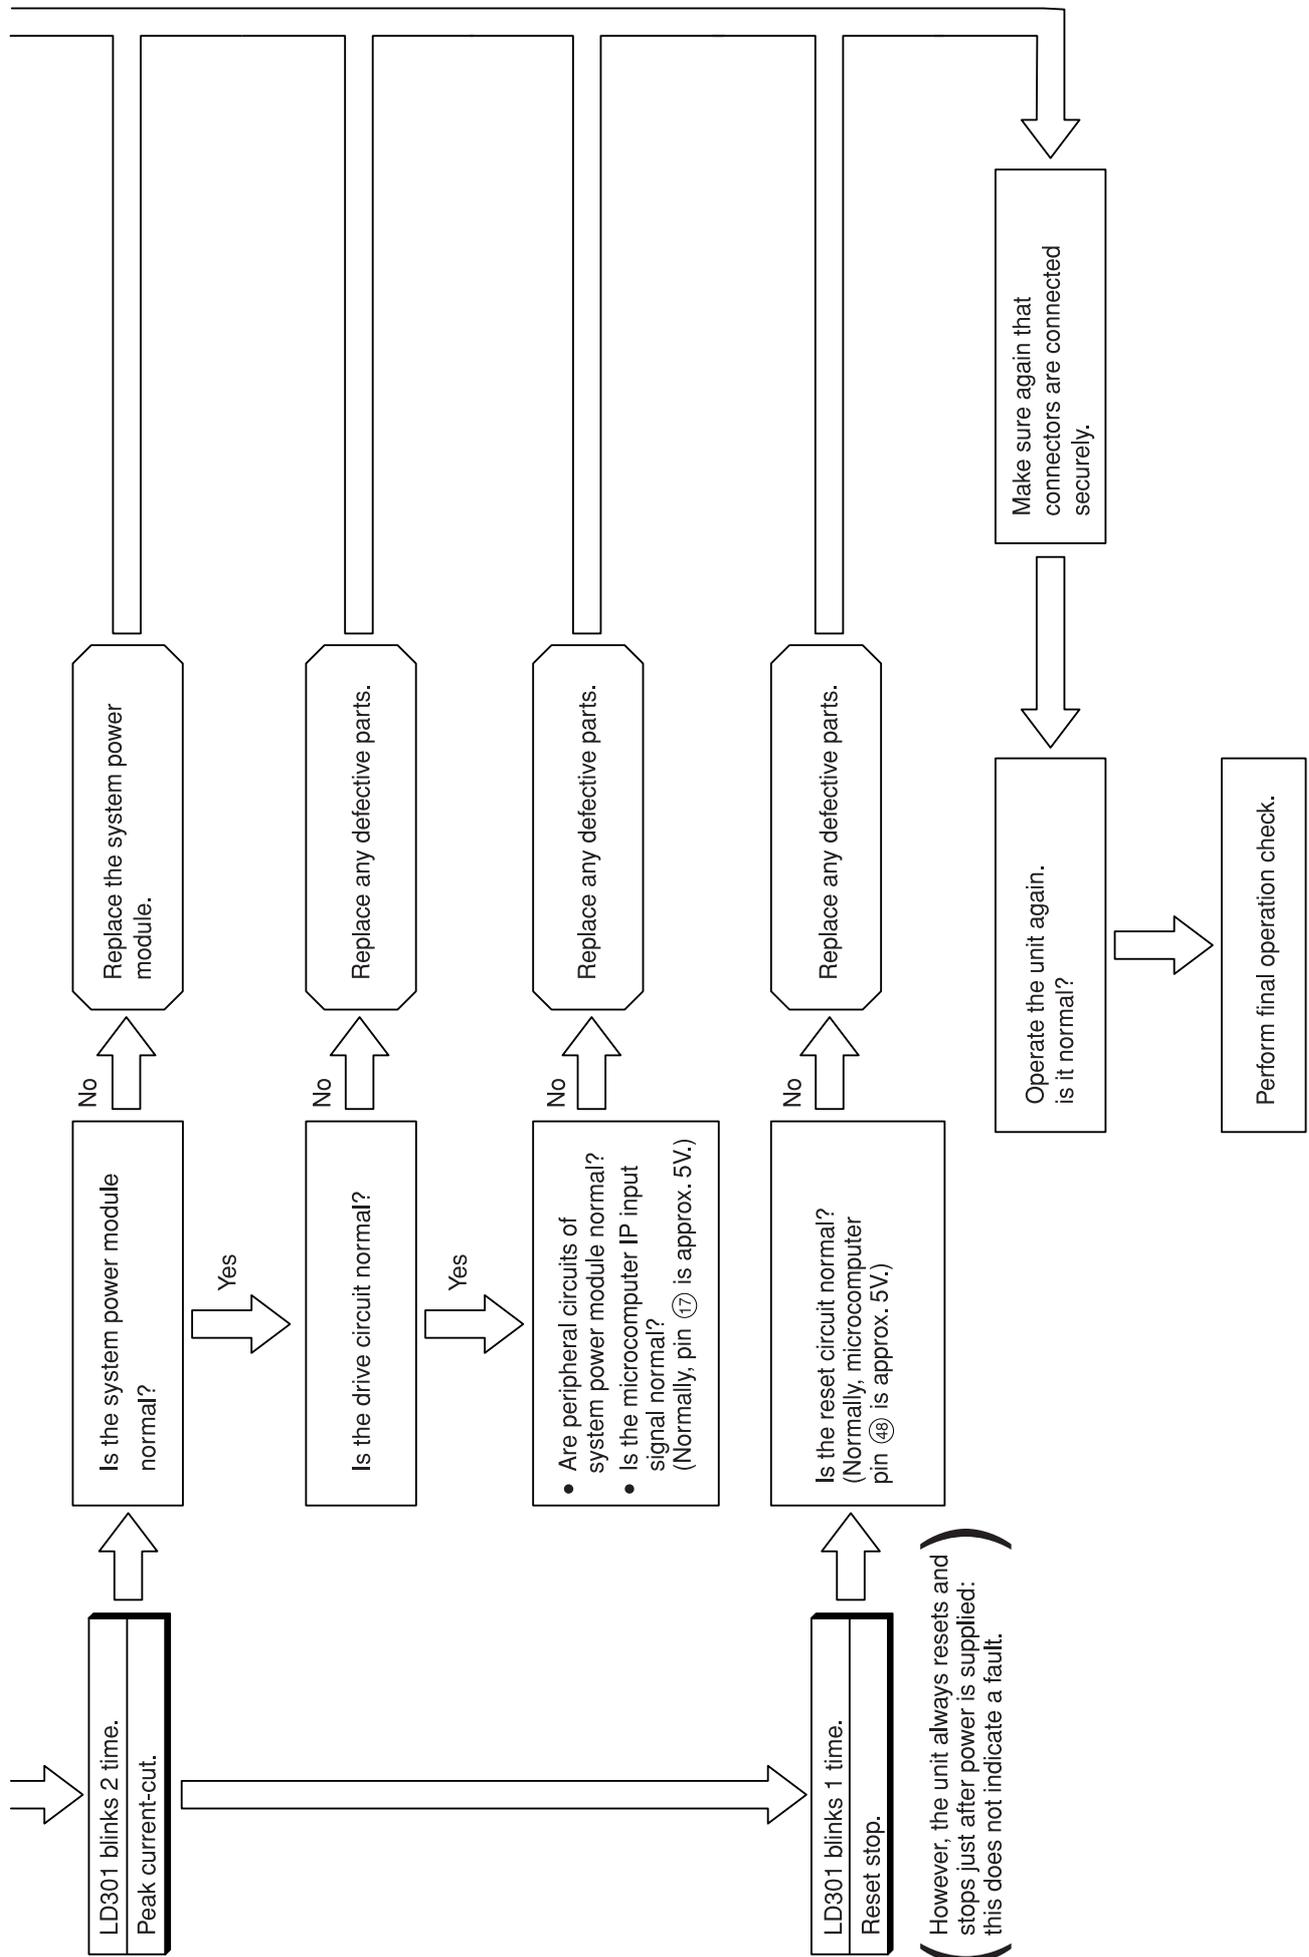

POWER CIRCUIT

Phenomenon 1 <Rotation speed does not increase>

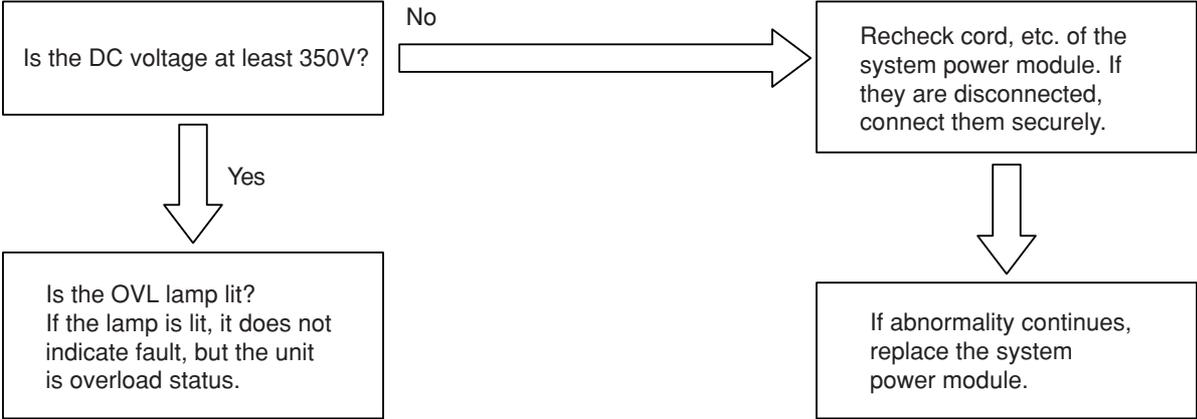


Overvoltage defect: system power module faulty (14-times blinking)

CHECKING THE REFRIGERATING CYCLE

(JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

1. Troubleshooting procedure (No operation, No heating, No cooling)

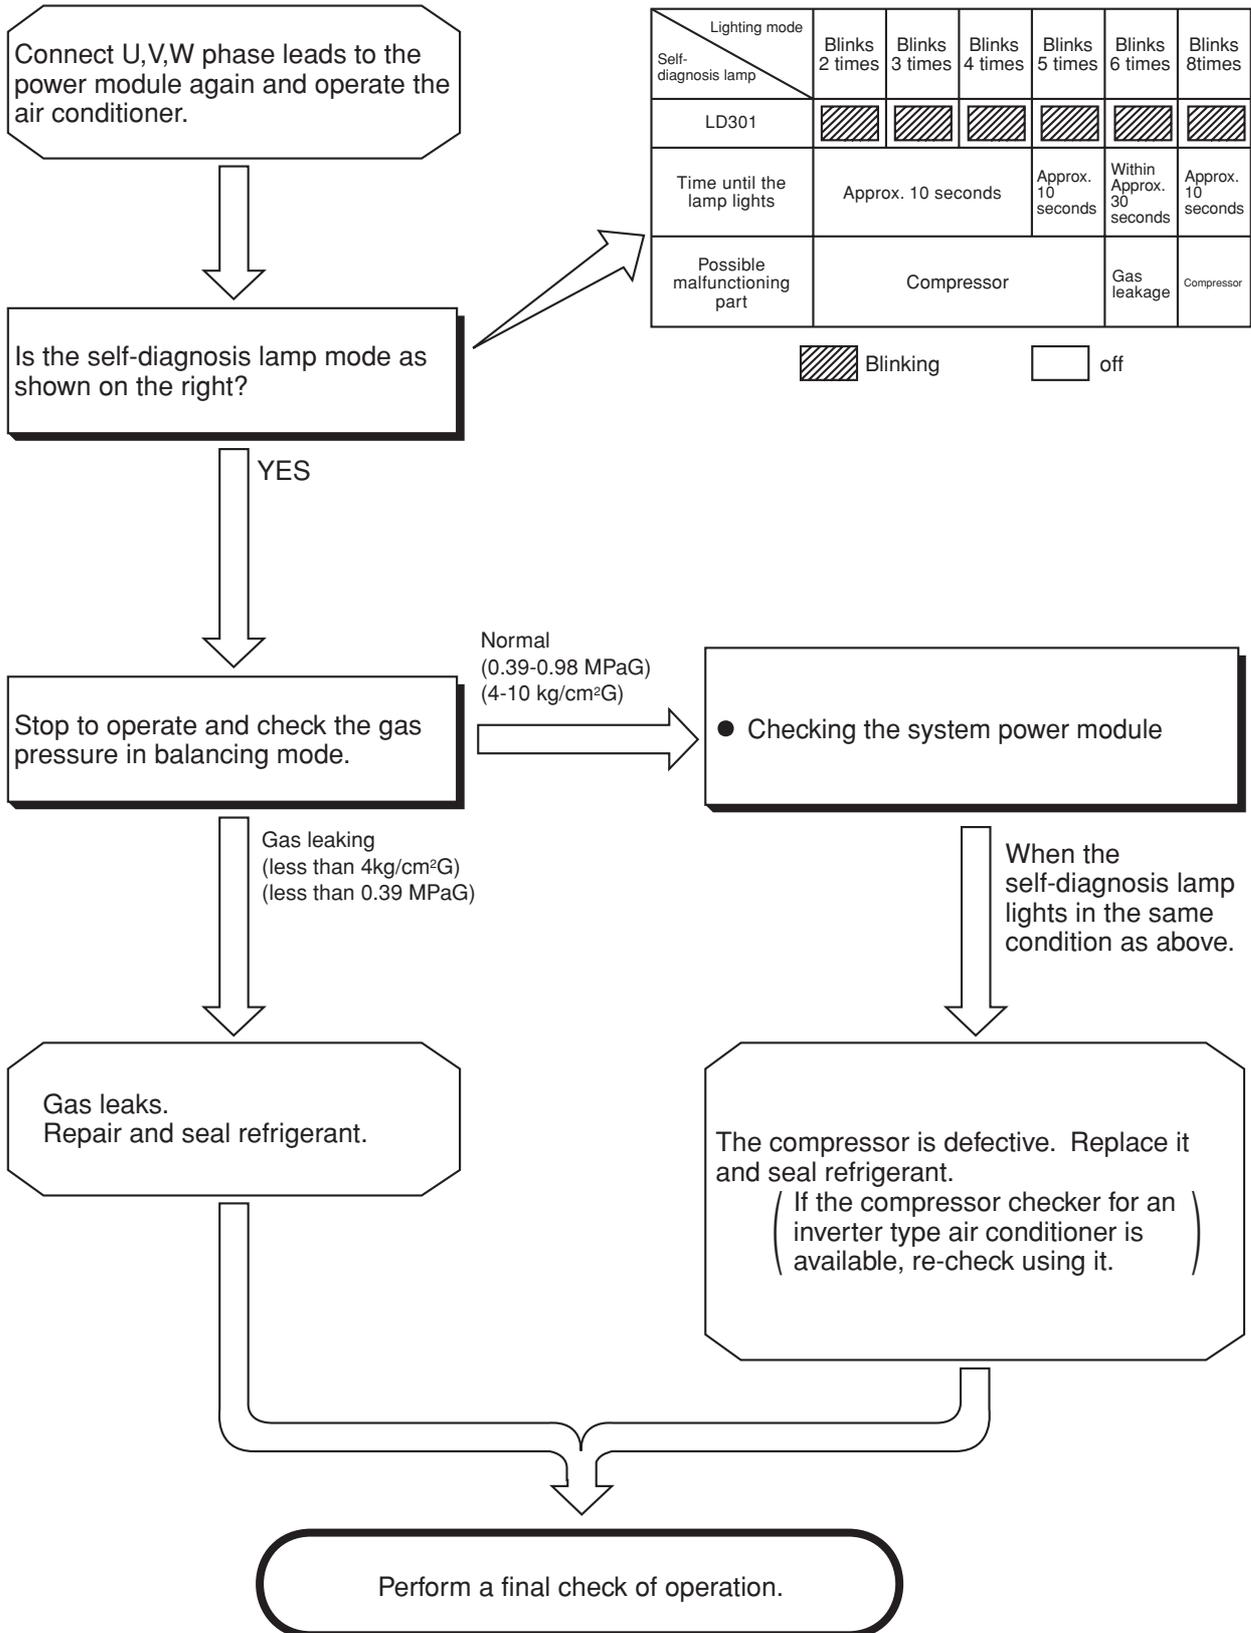

HOW TO CHECK SYSTEM POWER MODULE

Checking system power module using tester


Set tester to resistance range (X 100)

If indicator does not swing in the following conductivity check, the system power module is normal.

(In case of digital tester, since built-in battery is set in reverse direction, ⊕ and ⊖ terminals are reversed.)

⚠ CAUTION

If inner circuit of system power module is disconnected (open), the indicator of tester will not swing and this may assumed as normal. In this case, if indicator swings when ⊕ and ⊖ terminals are connected in reverse of diagram below, it is normal. Furthermore, compare how indicator swings at U, V and W phases. If indicator swings the same way at each point, it is normal.

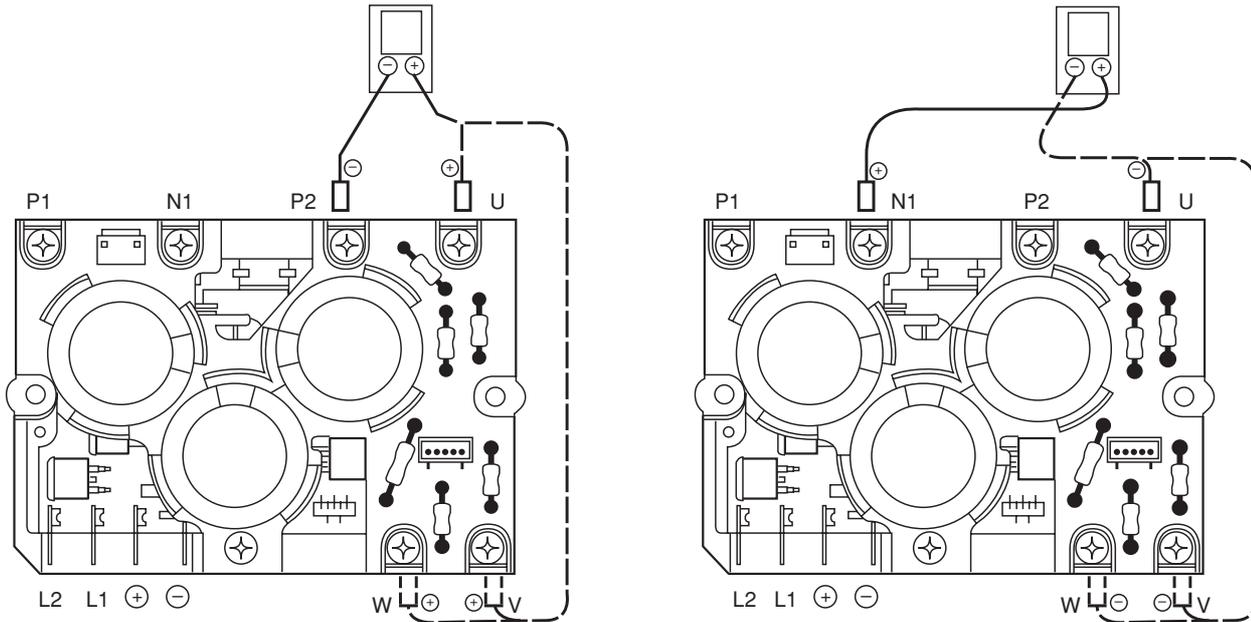


HOW TO OPERATE USING THE SERVICE SWITCH THE OUTDOOR UNIT

MODEL RAC-25NH5, RAC-35NH5


1. Turn off the power supply to outdoor unit and then turn on again.
2. Remove the electrical box cover.

LD303 (red) will light and the unit will operate in the forced cooling mode at this time.

Never operate the unit for more than 5 minutes.

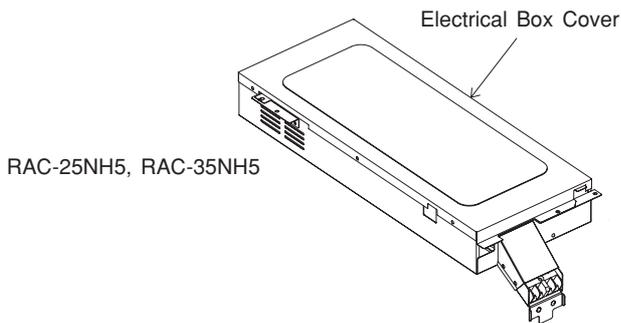

Service switch
(forced-cooling mode is set by pressing for 1 second or more, and stopped by pressing again.)

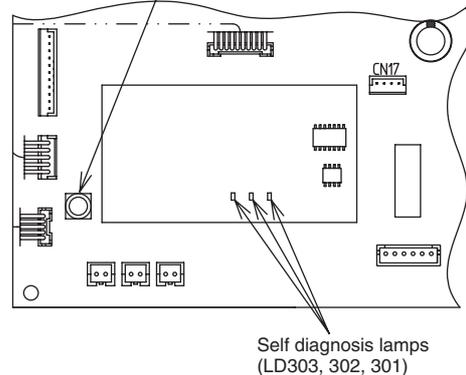

(Cautions)

- (1) If interface signal (DC 35V) terminals C and D are not connected when the outdoor unit is in forced cool mode, the outdoor unit defect indicator (LD301) will blink 9 times during operation to indicate communication error.
- (2) If checking is done with the compressor connector disconnected, the unit will continue normal operation when the electrical parts are normal, or it will repeat operating for approx. one minute and stop due to overload power limit cut, or it will operate in the overload status.


Be sure to push the service switch again to stop the forced cool operation.

HOW TO OPERATE THE OUTDOOR UNIT INDEPENDENTLY

1. Connect the large dia. pipe side and small dia. pipe side service valves using a pipe.

Connect the small diameter service valve and the large diameter service valve using the reducing union and copper pipe as shown on the right.

Charge refrigerant of 300g after vacuuming (※ 1)

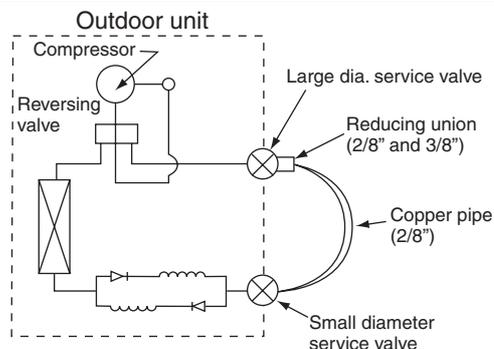

Parts to be prepared




- (1) Reducing union
2/8" (6.35mm)
1/2" (12.7mm)
- (2) Copper pipe (2/8" and 1/2")
- (3) Shorting leads
2 leads approx. 10 cm long with alligator clip or IC clip

Do not operate for more than 5 minutes

The operation method is the same as "How to operate using the connector to servicing the outdoor unit".

※ 1 The charging amount of 300g is equivalent to the load in normal operation.


SYSTEM POWER MODULE DIAGNOSIS
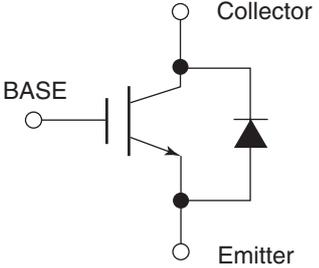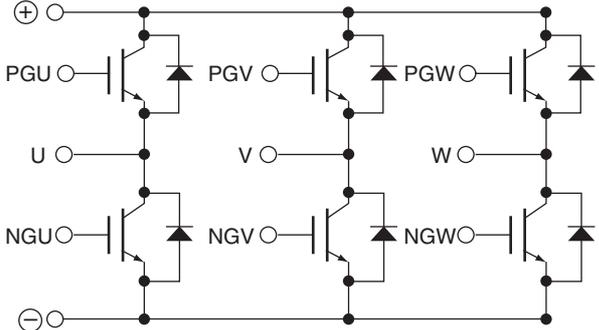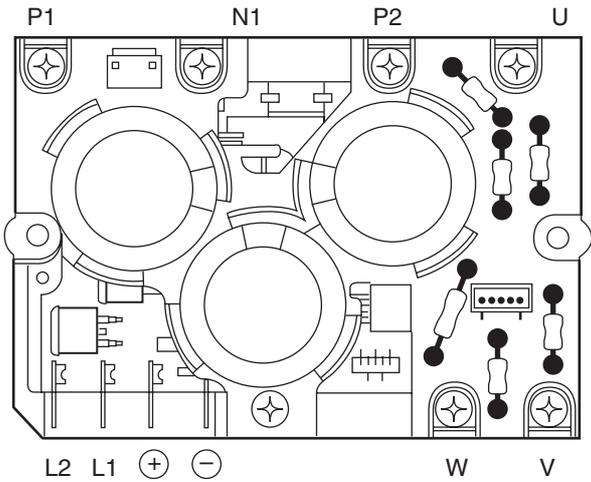
<p>Circuit diagram of the device (excepting the reflux diode)</p>	
<p>Circuit diagram of the module</p>	
<p>Terminals symbol mark of the module</p> <p>※ See next page for measuring value using tester</p>	

PARTS LIST AND DIAGRAM


INDOOR UNIT

MODEL: RAK-25NH5, RAK-35NH5

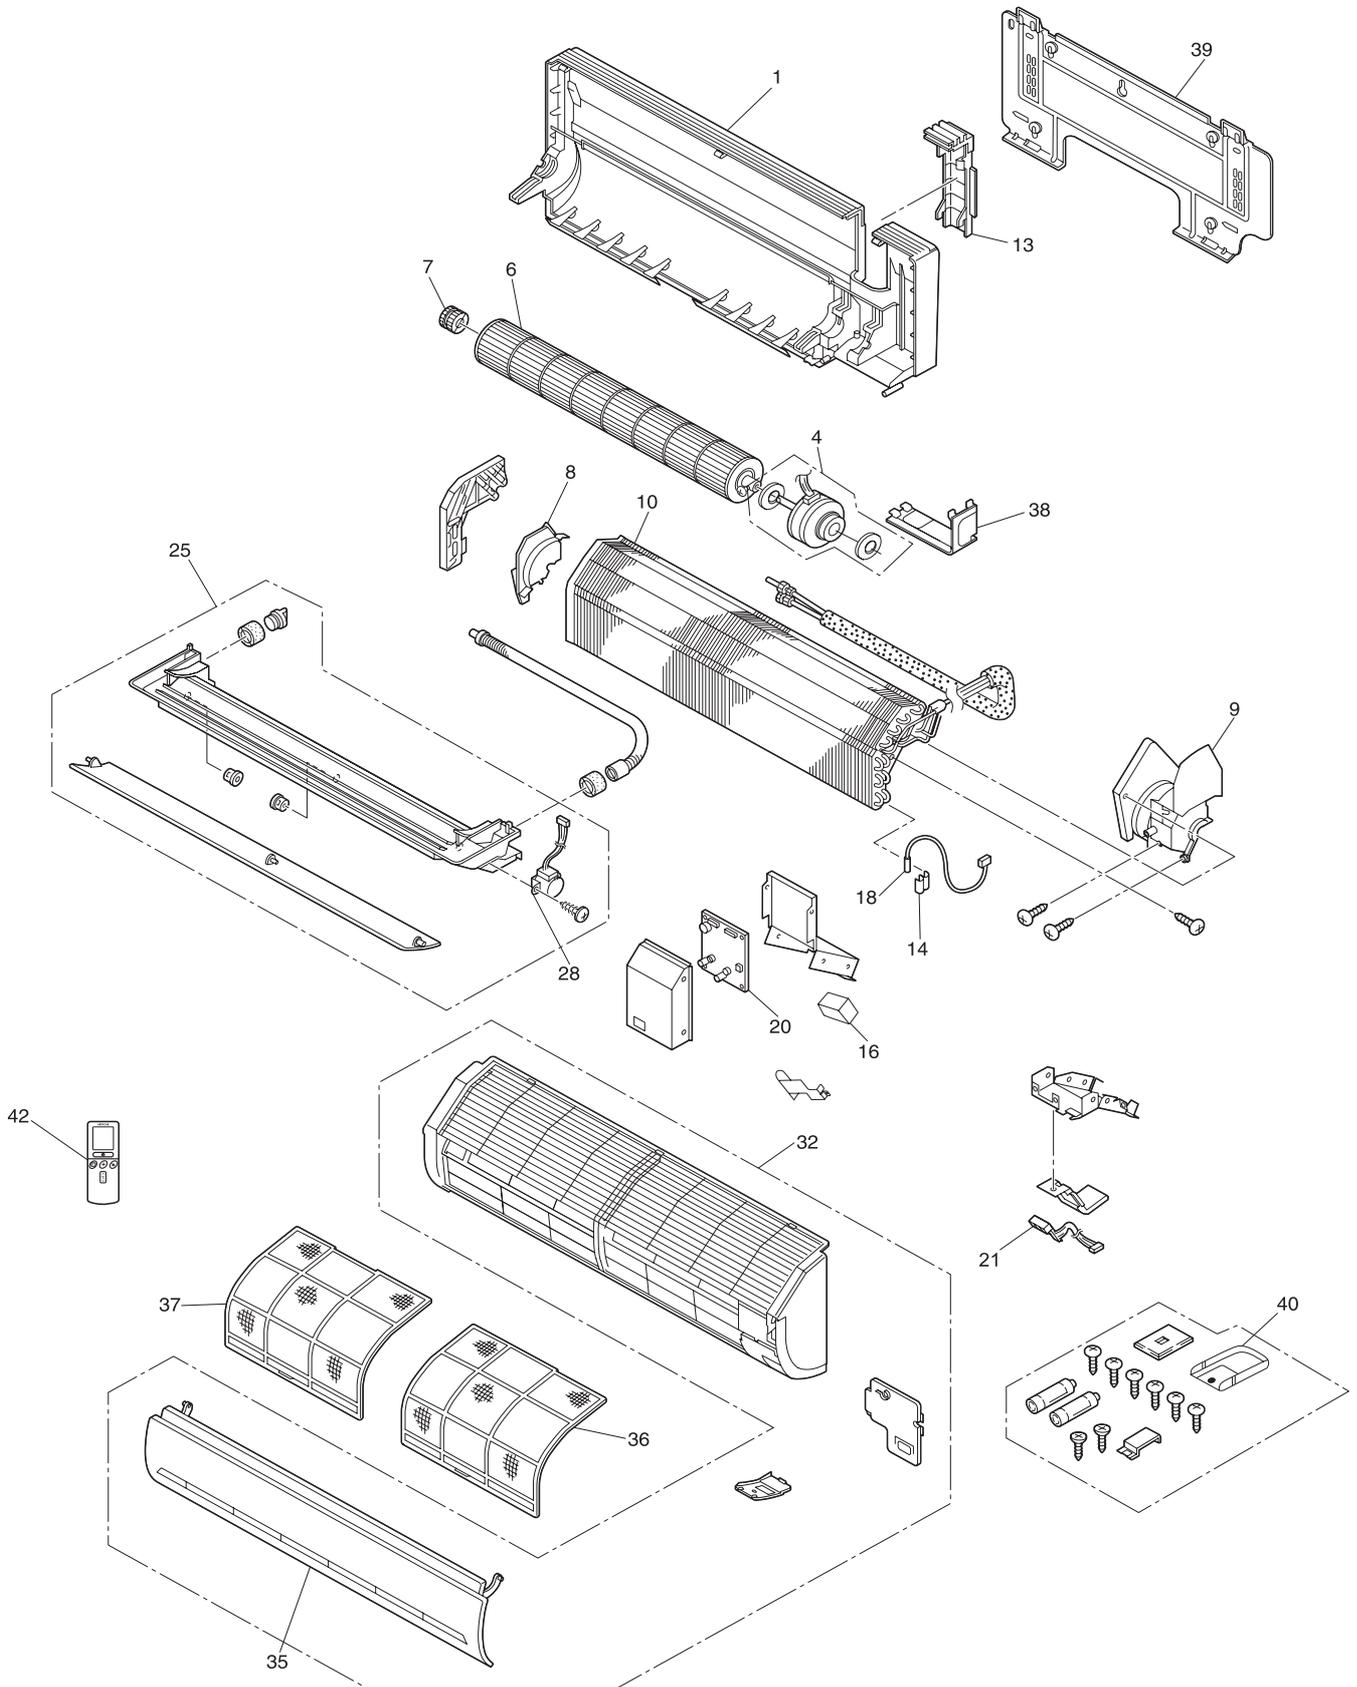

OUTDOOR UNIT

MODEL : RAC-25NH5, RAC-35NH5

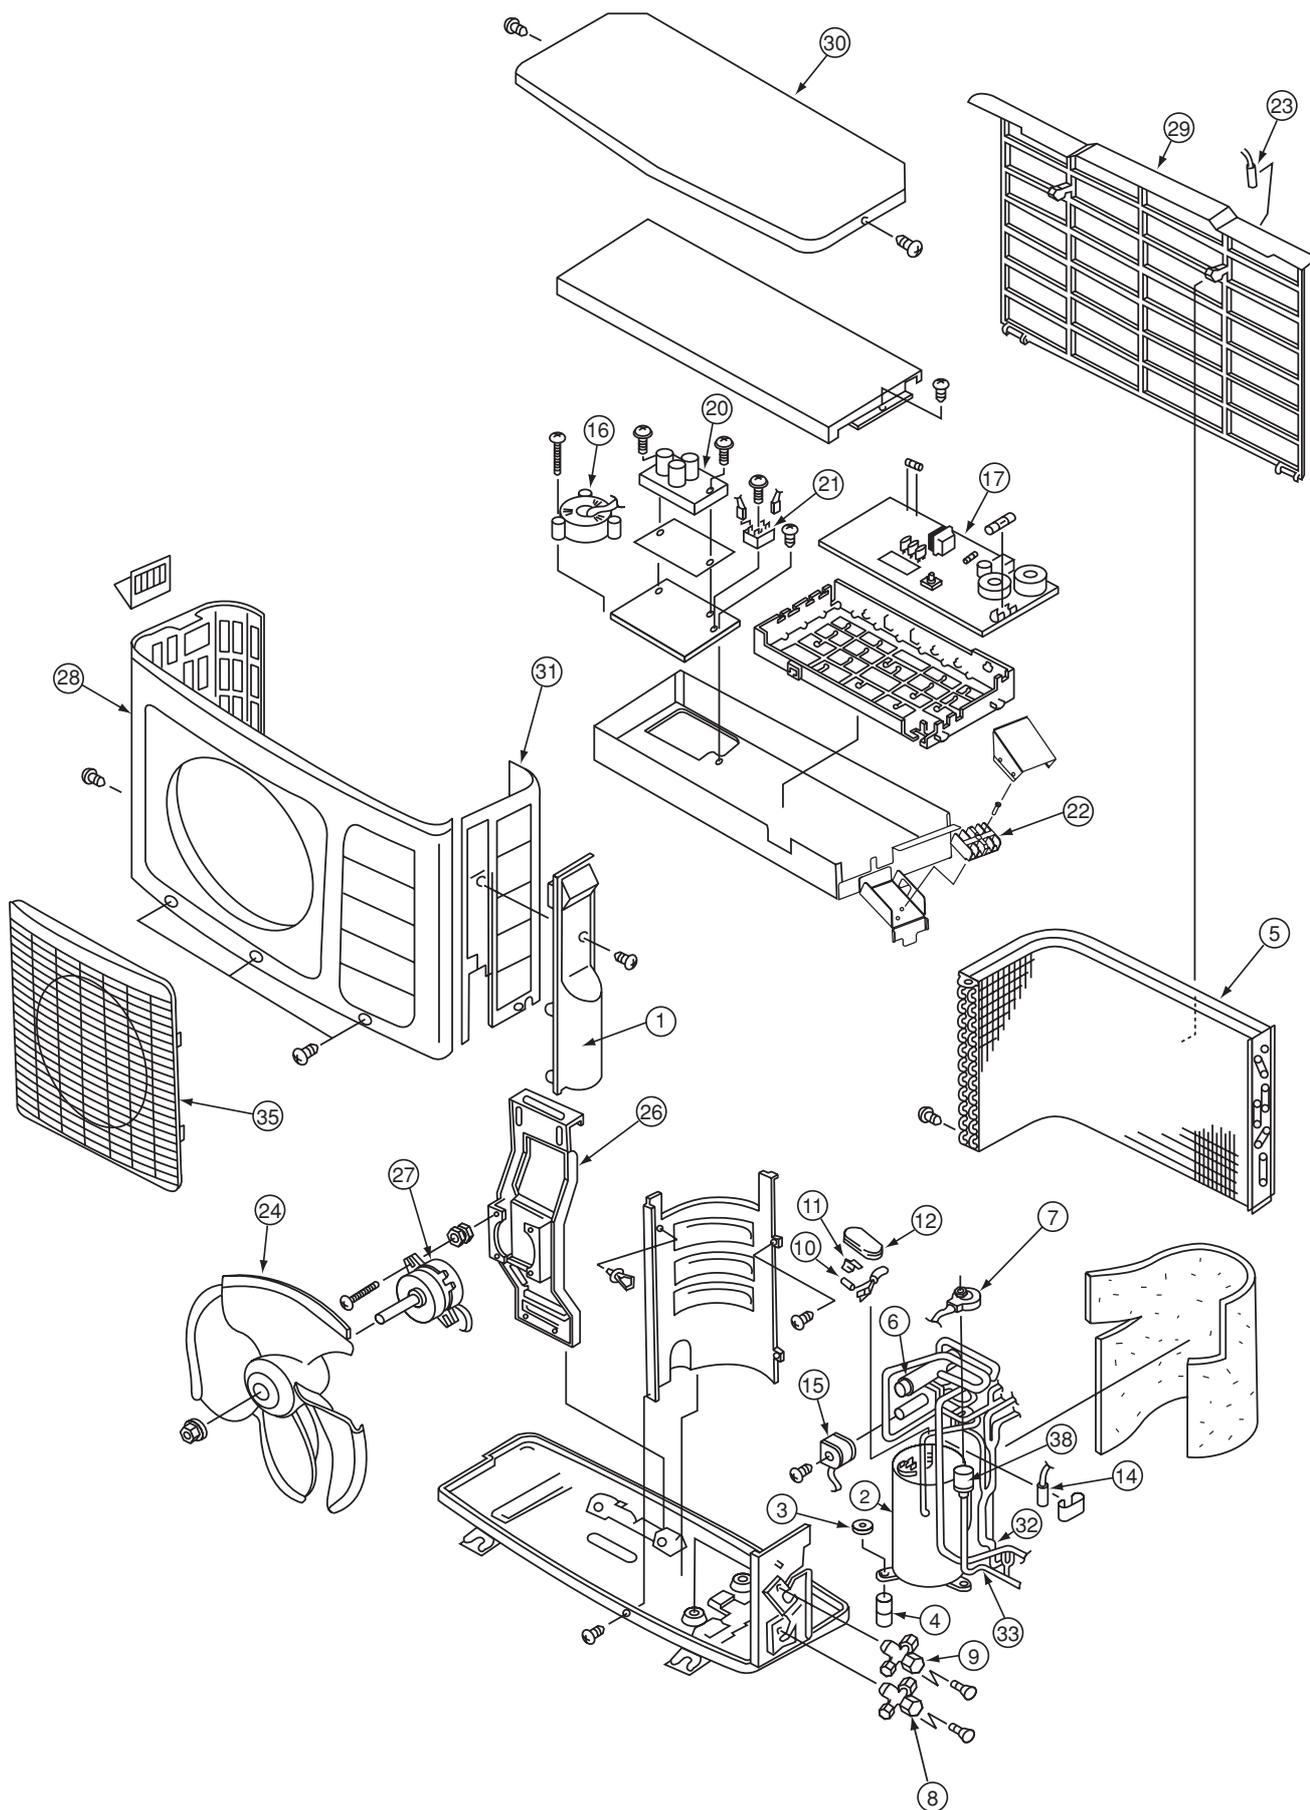

MODEL RAC-25NH5

NO.	PART NO. RAC-25NH5	Q'TY / UNIT	PARTS NAME
1	PMRAC-25NH4 921	1	SV COVER
2	PMRAC-25NH4 908	1	COMPRESSOR
3	KPNT1 001	6	PUSH NUT
4	RAC-2226HV 805	3	COMPRESSOR RUBBER
5	PMRAC-25NH4 901	1	CONDENSER
6	PMRAC-19SH4 904	1	REVERSING VALVE
7	PMRAC-25NH4 903	1	ELECTRICAL EXPANSION COIL
8	PMRAC-25NH4 904	1	VALVE (2S)
9	PMRAC-25NH4 905	1	VALVE (3S)
10	PMRAC-40CNH2 914	1	THERMISTOR (OH)
11	PMRAC-25NH4 909	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4 910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2 915	1	THERMISTOR (DEFROST)
15	PMRAM-40QH5 907	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4 901	1	REACTOR
17	PMRAC-25NH5 901	1	P.W.B (MAIN)
20	PMRAC-25NH4 912	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2 902	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4 913	1	TERMINAL BOARD (4P)
23	PMRAC-40CNH2 916	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-25CNH2 902	1	PROPELLER FAN
26	PMRAC-25NH4 914	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2 919	1	FAN MOTOR (40W)
28	PMRAC-51CA1 901	1	CABINET
29	PMRAC-51CA1 908	1	NET
30	PMRAC-51CA1 909	1	TOP COVER
31	PMRAC-25NH4 917	1	SIDE PLATE-R
32	PMRAC-25NH4 915	1	STRAINER
33	PMRAC-25NH4 907	1	STRAINER
35	PMRAC-09CHA1 903	1	GRILL
38	PMRAC-25NH4 916	1	EXPANSION VALVE

MODEL RAC-35NH5

NO.	PART NO. RAC-35NH5	Q'TY / UNIT	PARTS NAME
1	PMRAC-25NH4 921	1	SV COVER
2	PMRAC-25NH4 908	1	COMPRESSOR
3	KPNT1 001	6	PUSH NUT
4	RAC-2226HV 805	3	COMPRESSOR RUBBER
5	PMRAC-25NH4 901	1	CONDENSER
6	PMRAC-19SH4 904	1	REVERSING VALVE
7	PMRAC-25NH4 903	1	ELECTRICAL EXPANSION COIL
8	PMRAC-25NH4 904	1	VALVE (2S)
9	PMRAC-25NH4 905	1	VALVE (3S)
10	PMRAC-40CNH2 914	1	THERMISTOR (OH)
11	PMRAC-25NH4 909	1	OVERHEAT THERMISTOR SUPPORT
12	PMRAC-25NH4 910	1	OVERLOAD RELAY COVER
14	PMRAC-40CNH2 915	1	THERMISTOR (DEFROST)
15	PMRAM-40QH5 907	1	COIL (REVERSING VALVE)
16	PMRAC-18SH4 901	1	REACTOR
17	PMRAC-35NH5 901	1	P.W.B (MAIN)
20	PMRAC-25NH4 912	1	SYSTEM POWER MODULE
21	PMRAC-40CNH2 902	1	DIODE STACK (D25VB60)
22	PMRAC-25NH4 913	1	TERMINAL BOARD (4P)
23	PMRAC-40CNH2 916	1	THERMISTOR (OUTSIDE TEMPERATURE)
24	PMRAC-25CNH2 902	1	PROPELLER FAN
26	PMRAC-25NH4 914	1	SUPPORT (FAN MOTOR)
27	PMRAC-40CNH2 919	1	FAN MOTOR (40W)
28	PMRAC-51CA1 901	1	CABINET
29	PMRAC-51CA1 908	1	NET
30	PMRAC-51CA1 909	1	TOP COVER
31	PMRAC-25NH4 917	1	SIDE PLATE-R
32	PMRAC-25NH4 915	1	STRAINER
33	PMRAC-25NH4 907	1	STRAINER
35	PMRAC-09CHA1 903	1	GRILL
38	PMRAC-25NH4 916	1	EXPANSION VALVE

HITACHI

RAK-25NH5/RAC-25NH5
RAK-35NH5/RAC-35NH5

PM NO. 0324E

Printed in Malaysia