


SERVICE MANUAL

TECHNICAL INFORMATION

RAS-07GH4 / RAC-07GH4
RAS-09GH4 / RAC-09GH4
RAS-14GH4 / RAC-14GH4

REFER TO THE FOUNDATION MANUAL


FOR SERVICE PERSONNEL ONLY

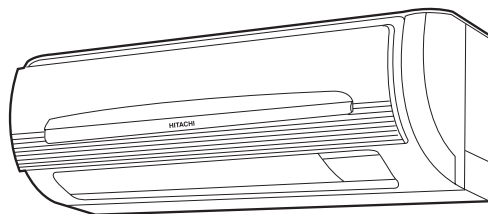


RAS-07GH4
RAS-09GH4
RAS-14GH4



RAC-07GH4
RAC-09GH4

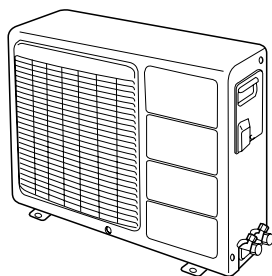

RAC-14GH4

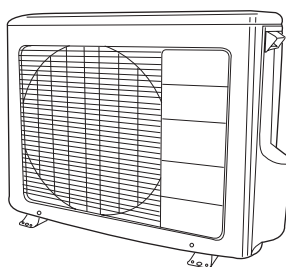

CONTENTS

SPECIFICATIONS	5
HOW TO USE	6
CONSTRUCTION AND DIMENSIONAL DIAGRAM	29
MAIN PARTS COMPONENT	31
WIRING DIAGRAM	33
CIRCUIT DIAGRAM	35
PRINTED WIRING BOARD LOCATION DIAGRAM	37
BLOCK DIAGRAM	39
BASIC MODE	41
REFRIGERATING CYCLE DIAGRAM	47
DESCRIPTION OF MAIN CIRCUIT OPERATION	49
AUTO SWING FUNCTION	53
SERVICE CALL Q & A	54
PARTS LIST AND DIAGRAM	63

SPECIFICATIONS

TYPE		(WALL TYPE)					
		INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT	INDOOR UNIT	OUTDOOR UNIT
MODEL		RAS-07GH4	RAC-07GH4	RAS-09GH4	RAC-09GH4	RAS-14GH4	RAC-14GH4
POWER SOURCE		1 PHASE, 50 Hz, 220-230-240V		1 PHASE, 50 Hz, 220-230-240V		1 PHASE, 50 Hz, 220-230-240V	
COOLING	TOTAL INPUT (W)	590-610-630		890-900-950		1060-1090-1120	
	TOTAL AMPERES (A)	2.80-2.80-2.80		4.20-4.10-4.10		5.00-5.00-4.90	
	CAPACITY (kW)	2.10		2.90		3.50	
	(B.T.U./h)	7,160		9,900		11,940	
HEATING	TOTAL INPUT (W)	490-510-530		740-770-810		960-1000-1050	
	TOTAL AMPERES (A)	2.30-2.30-2.30		3.50-3.50-3.50		4.60-4.60-4.60	
	CAPACITY (kW)	2.20		3.00		3.85	
	(B.T.U./h)	7,500		10,230		13,140	
DIMENSIONS (mm)	W	780	700	780	700	780	750
	H	280	570	280	570	280	570
	D	210	210	210	210	210	280
NET WEIGHT (kg)		9.0	32	9.0	32	9.0	38

※ After installation


SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT

ROOM AIR CONDITIONER

INDOOR UNIT + OUTDOOR UNIT

SAFETY DURING REPAIR WORK

1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

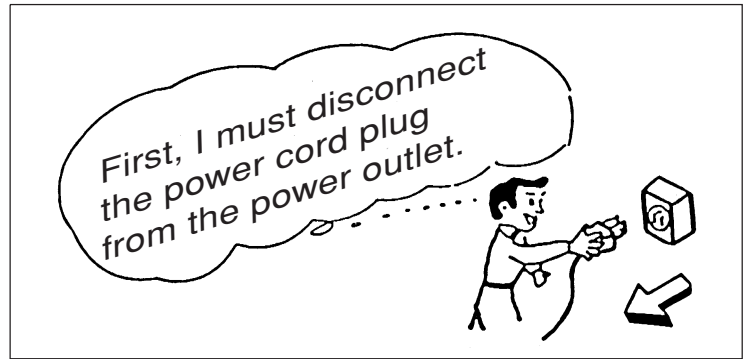

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them.



3. After completion of repairs, the initial state should be restored.
4. Lead wires should be connected and laid as in the initial state.
5. Modification of the unit by user himself should absolutely be prohibited.

6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit. The insulation resistance should be $1M\Omega$ or more as measured by a 500V DC megger.
9. The initial location of installation such as window, floor or the other should be checked for being and safe enough to support the repaired unit again. If it is found not so strong and safe, the unit should be installed at the initial location reinforced or at a new location.

10. Any inflammable thing should never be placed about the location of installation.
11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

1. Scope

The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufacturers during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned).

2. Object parts

- (1) Micro computer
- (2) Integrated circuits (IC)
- (3) Field-effect transistors (FET)
- (4) P.C. boards or the like on which the parts mentioned in (1) and (2) of this paragraph are equipped.

3. Items to be observed in handling

- (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way).

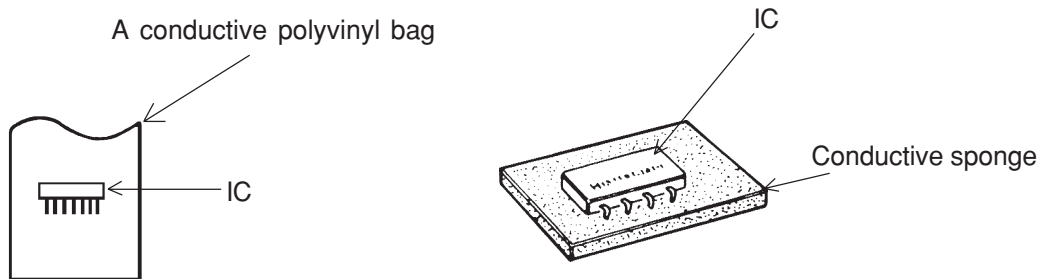


Fig. 1. Conductive Container

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet).
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

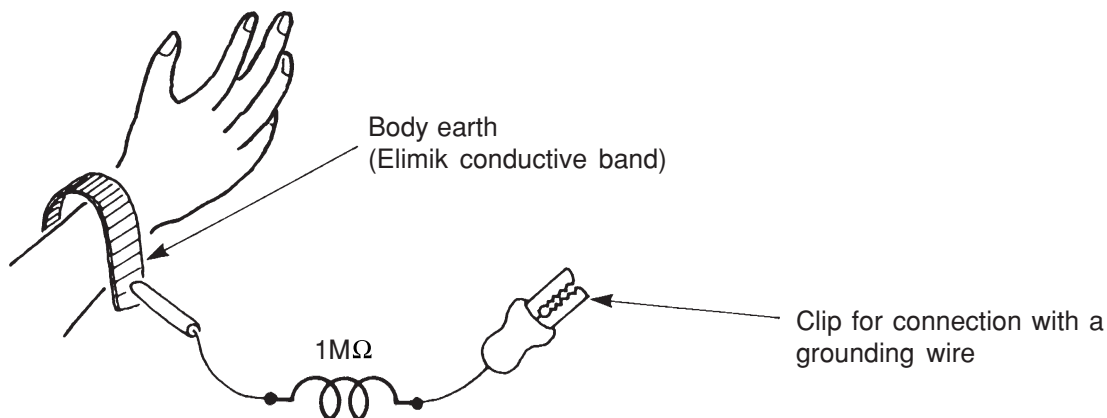


Fig. 2. Body Earth

(6) Use a three wire type soldering iron including a grounding wire.

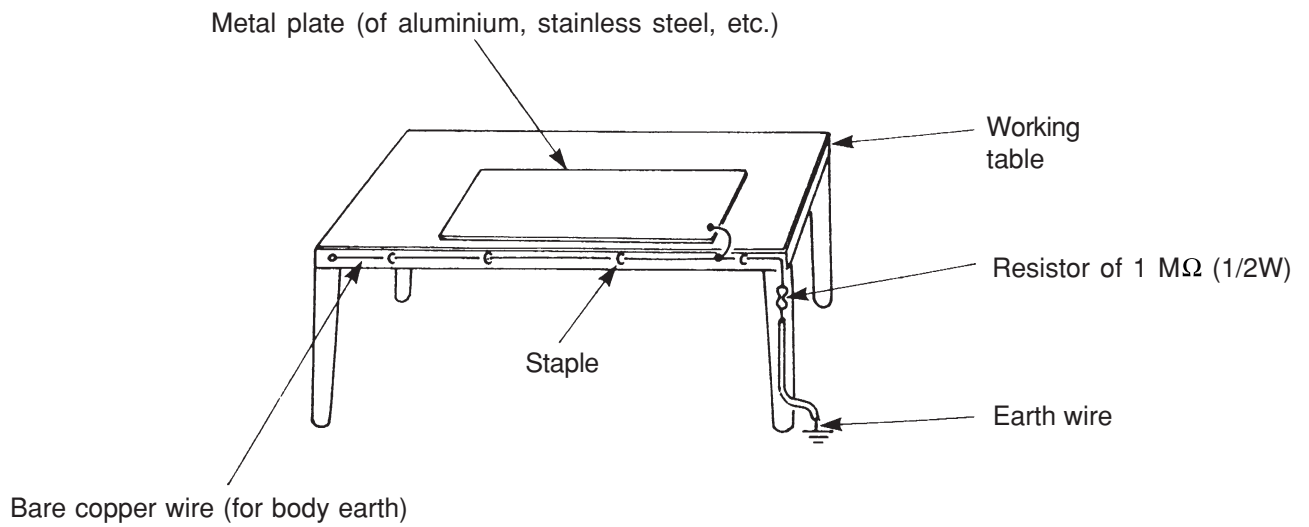


Fig. 3. Grounding of the working table

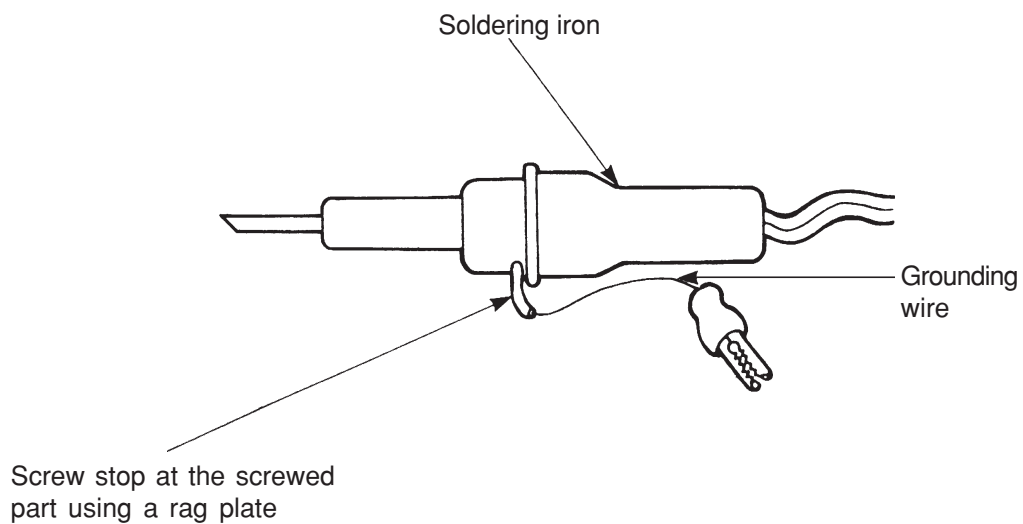


Fig. 4. Grounding a soldering iron

Use a high insulation mode (100V, 10MΩ or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.

 **CAUTION**

1. In quiet or stopping operation, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
2. When it thunders near by, it is recommended to stop the operation and to disconnect the power cord plug from the power outlet for safety.
3. In the event of power failure, the airconditioner will restart automatically in the previously selected mode once the power is restored. In the event of power failure during TIMER operation, the timer will be reset and the unit will begin or stop operating under a new timer setting.
4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
5. This room air conditioner should not be used at the cooling operation when the outside temperature is below 10°C (50°F).
6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -10°C (14°F).
If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.

SPECIFICATIONS

MODEL		RAS-07GH4 RAS-09GH4 RAS-14GH4	RAC-07GH4	RAC-09GH4	RAC-14GH4
FAN MOTOR		20 W	20 W	30 W	
FAN MOTOR CAPACITOR		NO	1.5 μ F, 450 VAC	2.5 μ F, 450VAC	
FAN MOTOR PROTECTOR		NO	NO		
COMPRESSOR		–	5RS080	5RS112	5RS132
COMPRESSOR MOTOR CAPACITOR		NO	20 μ F, 450 VAC	25 μ F, 450 VAC	
OVERLOAD PROTECTOR		NO	YES		
OVERHEAT PROTECTOR		NO	NO		
FUSE (for MICROPROCESSOR)		3.15A	NO		
POWER RELAY		G4A	NO		
POWER SWITCH		YES	NO		
TEMPORARY SWITCH		YES	NO		
SERVICE SWITCH		YES	NO		
TRANSFORMER		NO	NO		
VARISTOR		450NR	NO		
FUSE CAPACITY (TIME DELAY FUSE)		-----	10 A		15 A
THERMOSTAT		YES(IC)	NO		
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO		
REFRIGERANT CHARGING VOLUME (Refrigerant 410A)	UNIT	-----	600g	650g	1050g
	MAX. PIPES	-----	10m		15m


WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE

MODEL RAS-07GH4 / RAC-07GH4 and RAS-09GH4 / RAC-09GH4

Figure showing the installation of Indoor and Outdoor unit



The installation height of indoor unit must be 2.3m or more in a non public area

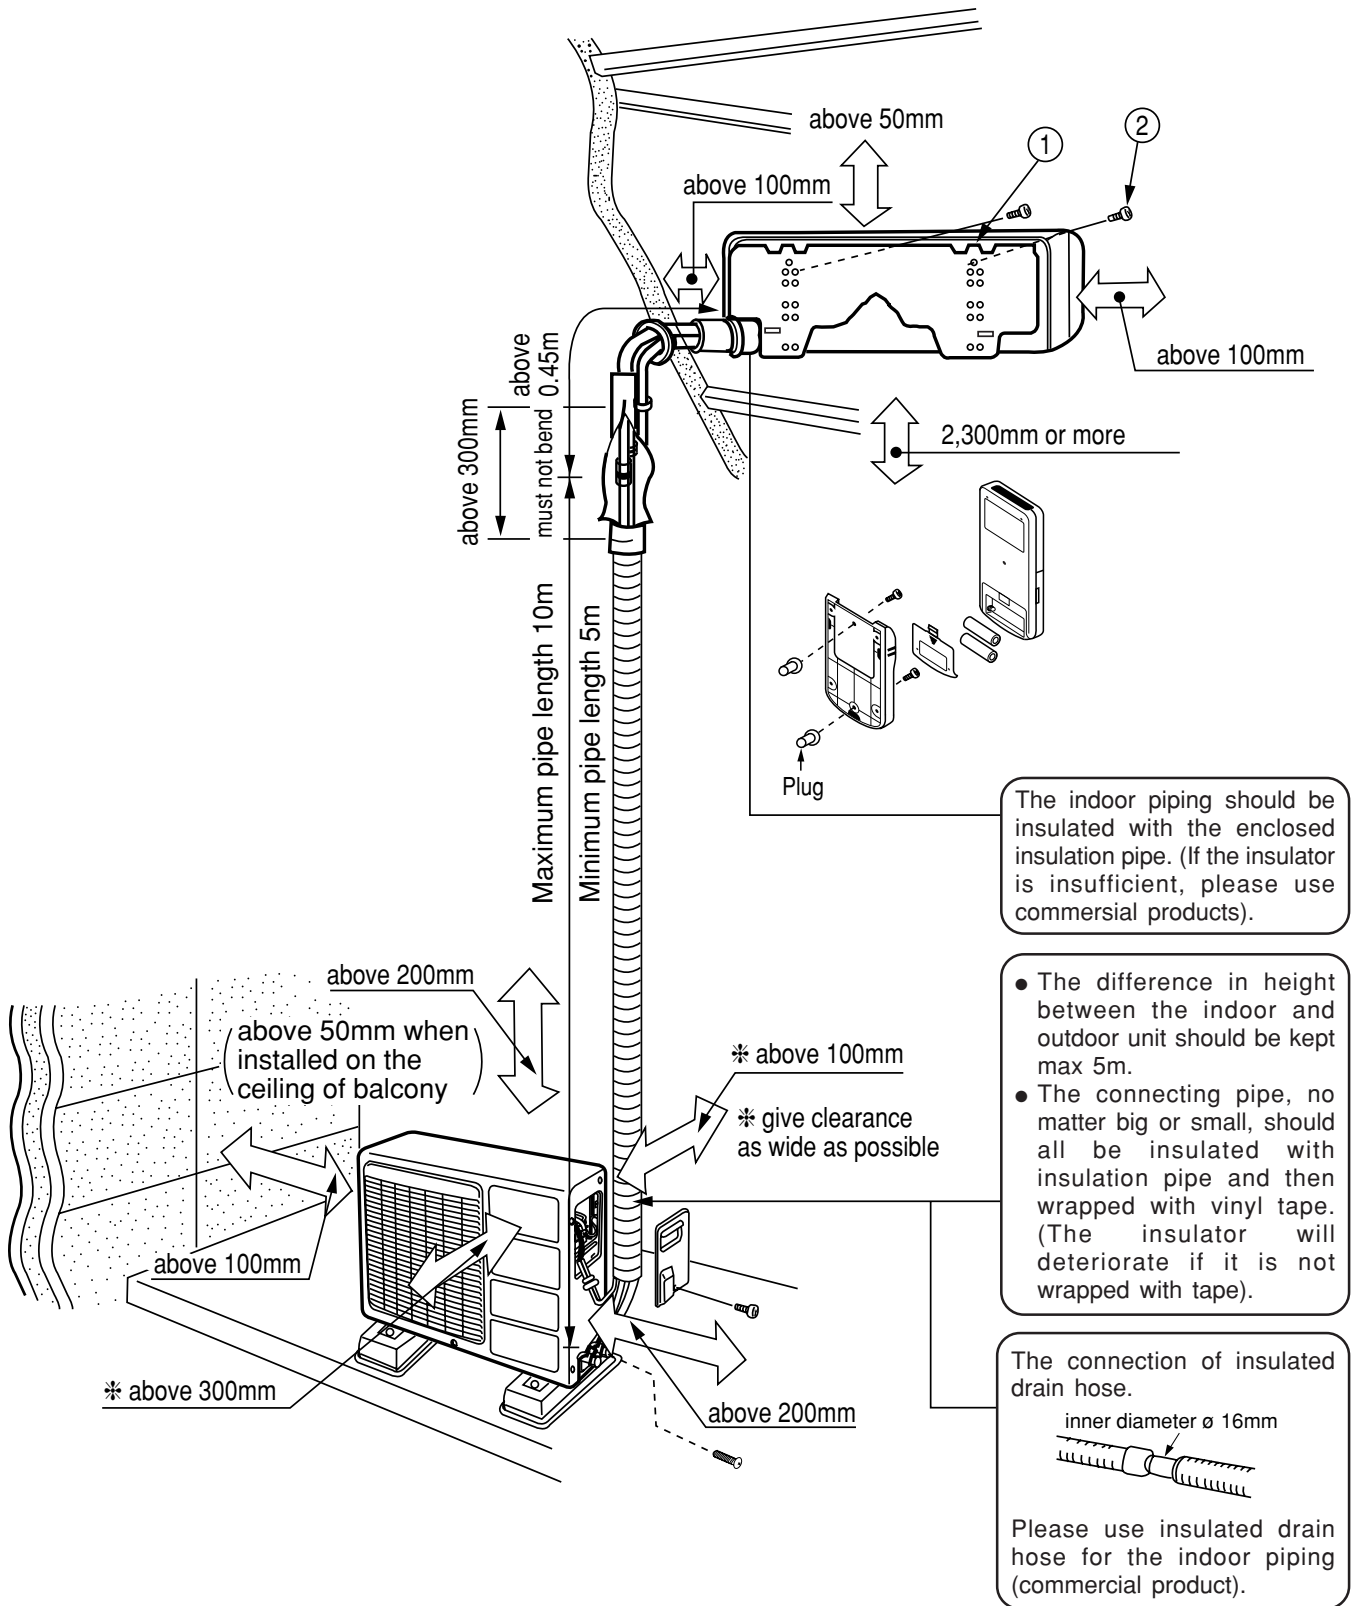

The indoor piping should be insulated with the enclosed insulation pipe. (If the insulator is insufficient, please use commercial products).

- The difference in height between the indoor and outdoor unit should be kept max 5m.
- The connecting pipe, no matter big or small, should all be insulated with insulation pipe and then wrapped with vinyl tape. (The insulator will deteriorate if it is not wrapped with tape).


The connection of insulated drain hose.
inner diameter \varnothing 16mm
Please use insulated drain hose for the indoor piping (commercial product).

MODEL RAS-14GH4 / RAC-14GH4

Figure showing the installation of Indoor and Outdoor unit



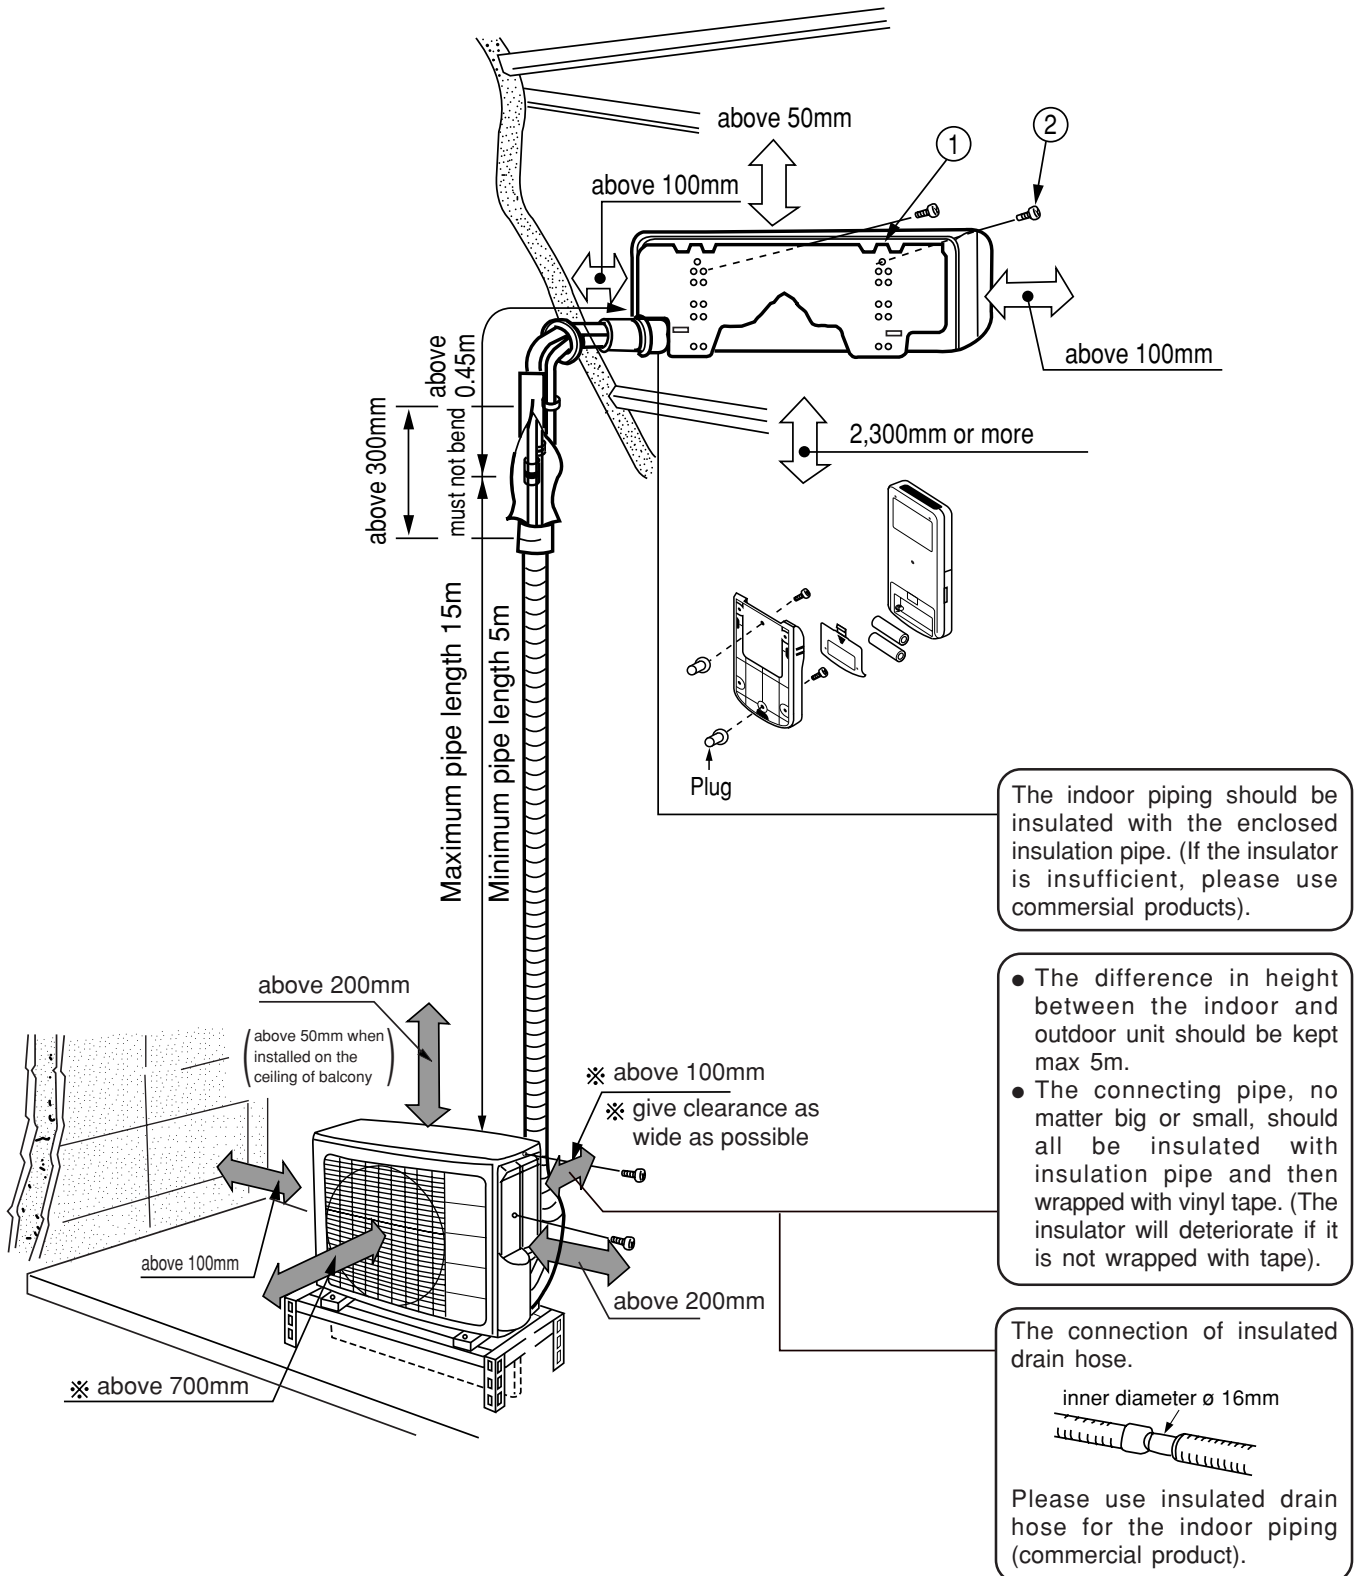


The installation height of indoor unit must be 2.3m or more in a non public area










SAFETY PRECAUTION

- Please read the “Safety Precaution” carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of “**▲ Warning**” and “**▲ Caution**”. The “Warning” section contains matters which, if not observed strictly, may cause death or serious injury. The “Caution” section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The sign indicate the following meanings.



 Make sure to connect earth line.	 The sign in the figure indicates prohibition.
 Indicates the instructions that must be followed.	

- Please keep this manual after reading.






PRECAUTIONS DURING INSTALLATION

 WARNING	<ul style="list-style-type: none"> ● Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself. 	
	<ul style="list-style-type: none"> ● Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself. 	
	<ul style="list-style-type: none"> ● Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock. 	
 CAUTION	<ul style="list-style-type: none"> ● A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists. 	
	<ul style="list-style-type: none"> ● Do not install the unit near a location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. 	
	<ul style="list-style-type: none"> ● Please ensure smooth flow of water when installing the drain hose. 	

PRECAUTIONS DURING SHIFTING OR MAINTENANCE

 W A R N I N G	<ul style="list-style-type: none"> ● Should abnormal situation arises (like burning smell), please stop operating the unit and turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation. 	
	<ul style="list-style-type: none"> ● Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire. 	
	<ul style="list-style-type: none"> ● Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly. 	

PRECAUTIONS DURING OPERATION

 W A R N I N G	<ul style="list-style-type: none"> ● Avoid an extended period of direct air flow for your health. 	
	<ul style="list-style-type: none"> ● Do not insert a finger, a rod or other objects into the air outlet or inlet. As the fan is rotating at a high speed, it will cause injury. Before cleaning, be sure to stop the operation and turn the breaker OFF. 	
	<ul style="list-style-type: none"> ● Do not use any conductor as fuse wire, this could cause fatal accident. 	
	<ul style="list-style-type: none"> ● During thunder storm, disconnect and turn off the circuit breaker. 	


PRECAUTIONS DURING OPERATION

- The product shall be operated under the manufacturer specification and not for any other intended use.




- Do not attempt to operate the unit with wet hands, this could cause fatal accident.

- When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.



- Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.

- Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.

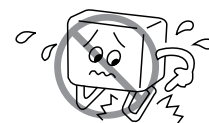


- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.



C
A
U
T
I
O
N

- Do not use any aerosol or hair sprays near the indoor unit. This chemical can adhere on heat exchanger fin and blocked the evaporation water flow to drain pan. The water will drop on tangential fan and cause water splashing out from indoor unit.



- Please switch off the unit and turn off the circuit breaker during cleaning, the high-speed fan inside the unit may cause danger.

- Turn off the circuit breaker if the unit is not to be operated for a long period.



- Do not climb on the outdoor unit or put objects on it.

- Do not put water container (like vase) on the indoor unit to avoid water dripping into the unit. Dripping water will damage the insulator inside the unit and causes short-circuit.




- Do not place plants directly under the air flow as it is bad for the plants.

- When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.
- If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

NAMES AND FUNCTIONS OF EACH PART

INDOOR UNIT

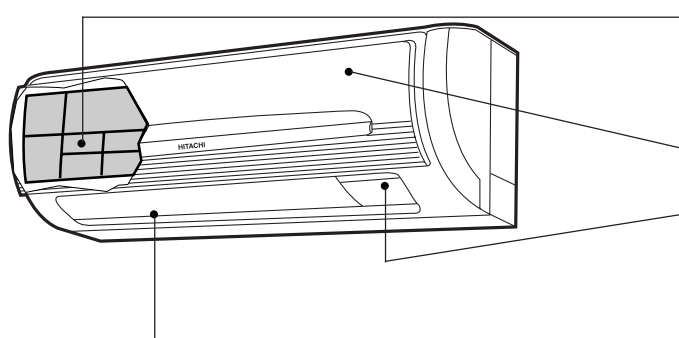


Air filter
To prevent dust from coming into the indoor unit.
(Refer page 25)

Front panel

Indoor unit indicators
Light indicator showing the operating condition.
(Refer page 9)


Horizontal deflector • Vertical deflector (Air Outlet)
(Refer page 20)



Remote controller
Send out operation signal to the indoor unit. So as to operate the whole unit.
(Refer page 10)

OUTDOOR UNIT

RAC-07GH4
RAC-09GH4

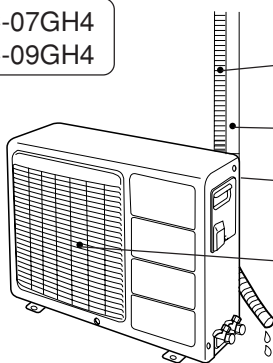


Drain pipe
Condensed water drain to outside.

Connecting cord and insulation pipe for piping

Air inlet (Back, Left side)

Air outlet

RAC-14GH4

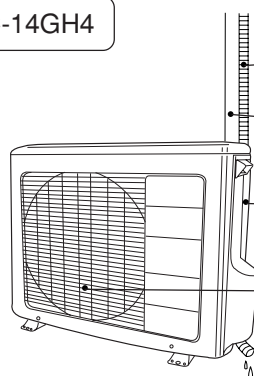

Drain pipe
Condensed water drain to outside.

Connecting cord and insulation pipe for piping

Air inlet (Back and Left side)

Air outlet


CAUTION

- When heating operation, drain or defrosted water flows out from outdoor unit. Don't close drain outlet portion in chilly area so as not to freeze these.

MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAS-07GH4/09GH4/14GH4	780	280	210
RAC-07GH4/09GH4	700	570	210
RAC-14GH4	750	570	280

INDOOR UNIT INDICATORS

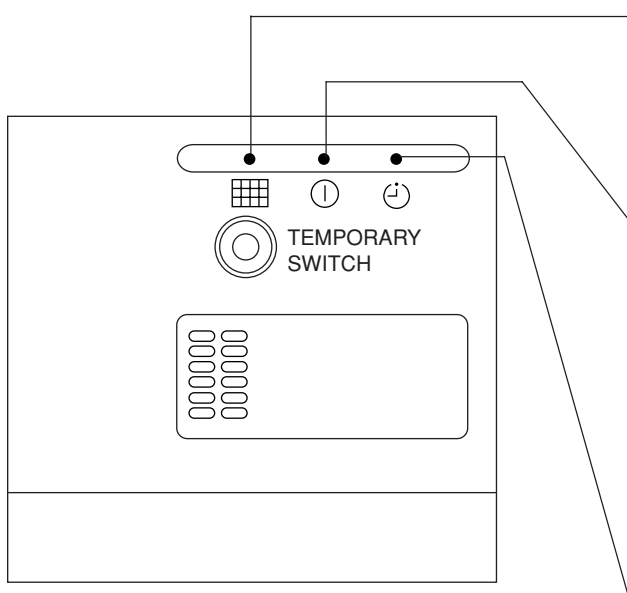

FILTER LAMP

When the device is operated for a total of about 100 hours, the FILTER lamp lights to indicate that it is time to clean the filter. The lamp goes out when the POWER SWITCH set to OFF and ON again.

OPERATION LAMP

This lamp lights during operation. The OPERATION LAMP flashes in the following cases during heating.

(1) During preheating

For about 2–3 minutes after starting up.


(2) During defrosting

Defrosting will be performed about once every one hour when frost forms on the heat exchanger of the outdoor unit, for 5–10 minutes each time.

TIMER LAMP

This lamp lights when the timer is working.

OPERATION INDICATOR

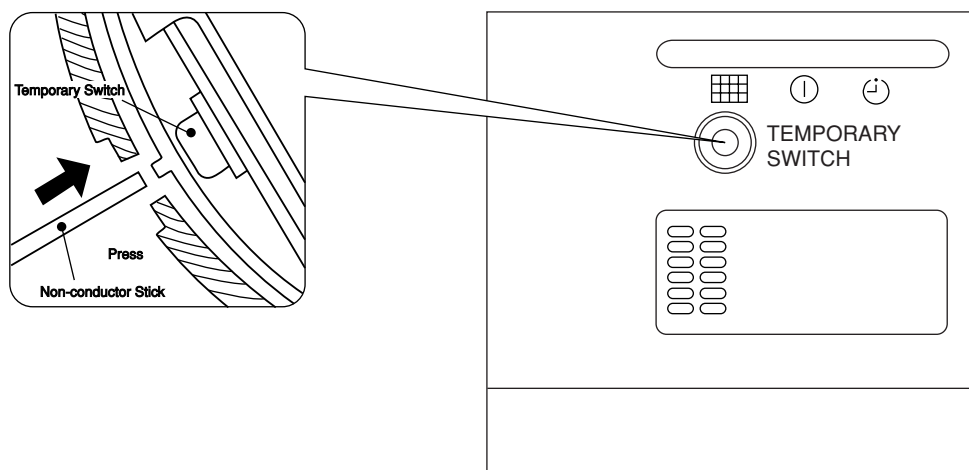

TEMPORARY SWITCH



Use this switch to start and stop when the remote controller does not work. [Use non-conductor stick (example toothpick)]

- By pressing the temporary switch, the operation is done in previously set operation mode.
- When the operation is done using the temporary switch after the power source is turned off and turn on again, the operation is done in automatic mode.

NAMES AND FUNCTIONS OF REMOTE CONTROL UNIT

REMOTE CONTROLLER

- This controls the operation of the indoor unit. The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter.
This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care. Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.

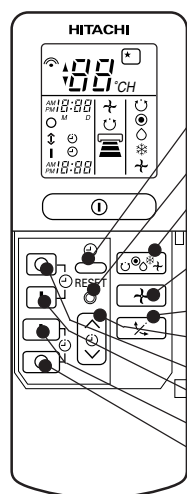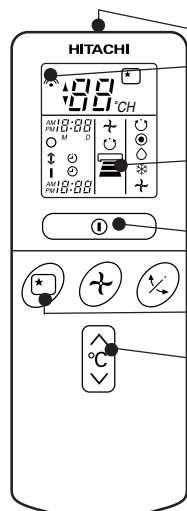

- **Signal emitting window/transmission sign**
Point this window toward the indoor unit when controlling it. The transmission sign blinks when a signal is sent.
- **Display**
This indicates the room temperature selected, current time, timer status, function and intensity of circulation selected.
- **START/STOP button**
Press this button to start operation. Press it again to stop operation.
- **SLEEP button**
Use this button to set the sleep timer.
- **TEMPERATURE buttons**
Use these buttons to raise or lower the temperature setting. (Keep pressed, and the value will change more quickly.)
- **TIME button**
Use this button to set and check the time and date.
- **RESET buttons**
- **FUNCTION selector**
Use this button to select the operating mode. Every time you press it, the mode will change from ☺ (AUTO) to ● (HEAT) to ○ (DEHUMIDIFY) to ❄ (COOL) and to ↻ (FAN) cyclically.
- **FAN SPEED selector**
This determines the fan speed. Every time you press this button, the intensity of circulation will change from ☺ (AUTO) to 🌀 (HI) to 🌀 (MED) to 🌀 (LOW) (during the ↻ (FAN) mode, from 🌀 HI to 🌀 MED to 🌀 LOW).
- **AUTO SWING button**
Controls the angle of the horizontal air deflector.
- **TIMER control**
Use this button to set the timer.
- **OFF-TIMER button** Select the turn OFF time.
- **ON-TIMER button** Select the turn ON time.
- **RESERVE button** Time setting reservation.
- **CANCEL button** Cancel time reservation.


☺	AUTO
●	HEAT
○	DEHUMIDIFY
❄	COOL
↻	FAN
🌀	FAN SPEED LOW MED HI
★	SLEEPING
○	STOP (CANCEL)
I	START (RESERVE)
Ⓜ	START/STOP
⌚	TIME
⌚	TIMER SET
⌚	TIMER SELECTOR ON TIMER OFF TIMER
↻	AUTO SWING

Precautions for Use


- Do not put the remote controller in the following places.
 - Under direct sunlight.
 - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).
This is to protect the device and does not indicate a failure.
- If you press the FUNCTION selector button during operation, the device may stop for about 3 minutes for protection.

AUTOMATIC OPERATION

The device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the initial room temperature. The selected mode of operation will not change when the room temperature varies.

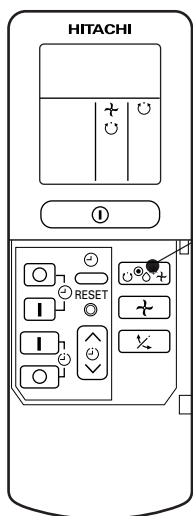



1

Press the FUNCTION selector so that the display indicates the  (AUTO) mode of operation.

- When AUTO has been selected, the device will automatically determine the mode of operation, HEAT, COOL or DEHUMIDIFY depending on the initial room temperature.

START STOP

Press the  (START/STOP) button.
Operation starts with a beep.
Press the button again to stop operation.


- As the settings are stored in memory in the remote controller, you only have to press the  (START/STOP) button next time.

You can raise or lower the temperature setting as necessary by maximum of 3°C.



Press the temperature button and the temperature setting will change by 1°C each time.

- The preset temperature and the actual room temperature may vary somewhat depending on conditions.
- The display does not indicate the preset temperature in the AUTO mode. If you change the setting, the indoor unit will produce a beep.

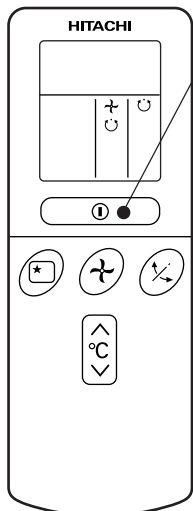


■ Condition of Automatic Operation

Initial room temperature (approx.)	Function	Temperature setting	FAN SPEED
Over 27°C	➔ COOL	27°C	HI at start, MED or LOW after the preset temperature is reached
23~27°C	➔ DEHUMIDIFY	Slightly lower than the room temperature	LOW
Under 23°C	➔ HEAT	23°C	HI at start, MED or LOW after the preset temperature is reached


HEATING OPERATION


- Use the device for heating when the outdoor temperature is under 21°C.
When it is too warm (over 24°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -10°C of the outdoor temperature.

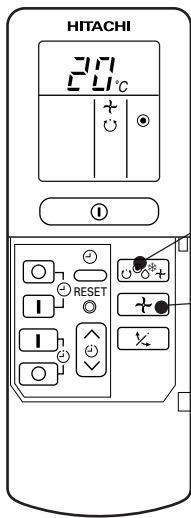


1


Press the FUNCTION selector so that the display indicates ● (HEAT).

Set the desired FAN SPEED with the  (FAN SPEED) button (the display indicates the setting).

 (AUTO): The fan speed is HI at first and varies to MED automatically when the preset temperature has been reached.

 (HI) : Economical as the room will become warm quickly.
But you may feel a chill at the beginning.

 (MED) : Quiet.

 (LOW) : More quiet.


2

Set the desired room temperature with the TEMPERATURE buttons (the display indicates the setting).


3

The range of 18-22°C is recommended as the room temperature for heating.
If the temperature setting is 20°C, the room temperature will be controlled at around 20°C.

The temperature setting and the actual room temperature may vary somewhat depending on conditions.

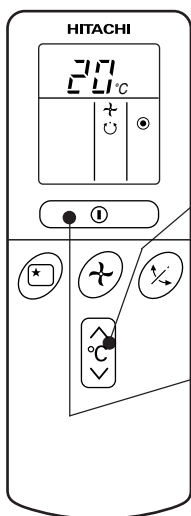


**START
STOP**

Press the  (START/STOP) button. Heating operation starts with a beep. Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the  (START/STOP) button next time.

DEHUMIDIFYING OPERATION

Use the device for dehumidifying when the room temperature is over 16°C.
When it is under 15°C, the dehumidifying function will not work.

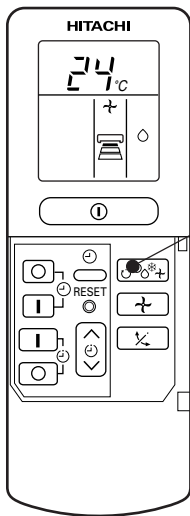


1

Press the FUNCTION selector so that the display indicates ◊ (DEHUMIDIFY).
The FAN SPEED is set at LOW automatically.
The FAN SPEED button does not work.

2

Set the desired room temperature with the TEMPERATURE button (the display indicates the setting).




The range of 20-26°C is recommended as the room temperature for dehumidifying.

**START
STOP**

Press the Ⓜ (START/STOP) button. Dehumidifying operation starts with a beep. Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the Ⓜ (START/STOP) button next time.

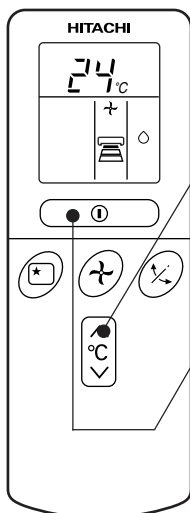


■ Dehumidifying Function

When the room temperature is higher than the temperature setting: The device will dehumidify the room, reducing the room temperature to the preset level.

When the room temperature is lower than the temperature setting: Dehumidifying will be performed at the temperature setting slightly lower than the current room temperature, regardless of the temperature setting. The function will stop (the indoor unit will stop emitting air) as soon as the room temperature becomes lower than the setting temperature.


COOLING OPERATION

Use the device for cooling when the outdoor temperature is 22-42°C.
If indoor humidity is very high (over 80%), some dew may form on the air outlet grille of the indoor unit.

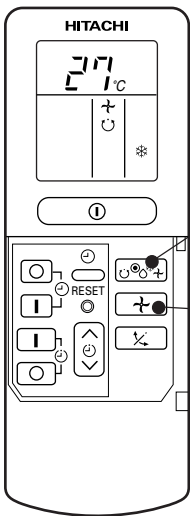



1

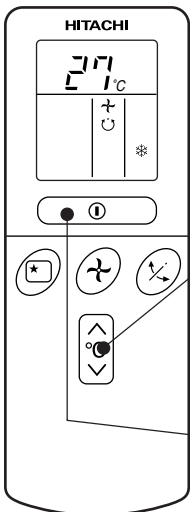
Press the FUNCTION selector so that the display indicates * (COOL).



2

Set the desired FAN SPEED with the  (FAN SPEED) button (the display indicates the setting).

 (AUTO): The FAN SPEED is HI at first and varies to MED automatically when the preset temperature has been reached.


 (HI) : Economical as the room will become cool quickly.

 (MED) : Quiet.

 (LOW) : More quiet.

3

Set the desired room temperature with the TEMPERATURE button (the display indicates the setting).






The range of 25-28°C is recommended as the room temperature for cooling.

If the temperature setting is 27°C, the room temperature will be controlled at around 27°C.

The temperature setting and the actual room temperature may vary some how depending on conditions.


**START
STOP**

Press the  (START/STOP) button. Cooling operation starts with a beep. Press the button again to stop operation. The cooling function does not start if the temperature setting is higher than the current room temperature (even though the  (OPERATION) lamp lights). The cooling function will start as soon as you set the temperature below the current room temperature.

■ As the settings are stored in memory in the remote controller, you only have to press the  (START/STOP) button next time.

FAN OPERATION

You can use the device simply as an air circulator. Use this function to dry the interior of the indoor unit at the end of summer.

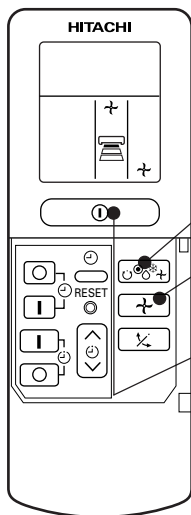

1

Press the FUNCTION selector so that the display indicates (FAN).

2

Press the (FAN SPEED) button.

**START
STOP**


Press the (START/STOP) button. Fan operation starts with a beep. Press the button again to stop operation.

FAN SPEED (AUTO)

..... When the AUTO fan speed mode is set in the cooling/heating operation:


For the heating operation	<ul style="list-style-type: none"> ● The fan speed will automatically change according to the temperature of discharged air. ● When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. ● When the room temperature reaches setting temperature, fan speed changes to LOW automatically.
For the cooling operation	<ul style="list-style-type: none"> ● When the difference of room temperature and setting temperature is large, fan starts to run at HI speed. ● After room temperature reaches the preset temperature, the cooling operation, which changes the fan speed and room temperature to obtain optimum conditions for natural healthful cooling will be performed.

HOW TO SET THE TIMER

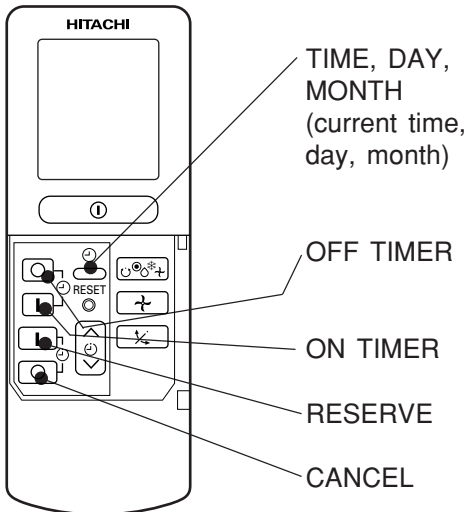


Time, Day, Month

After you change the batteries;




1 Set the current month and day with the TIMER control button.

OFF-Timer




You can set the device to turn off at the present time.

1 Press the (OFF-TIMER) button. The (OFF) mark blinks on the display.




ON-Timer


- The device will turn on at the designated times.



1 Press the (ON-TIMER) button the (ON) mark blinks on the display.




ON/OFF-Timer




- The device will turn on (off) and off (on) at the designated times.
- The switching occurs first at the preset time that comes earlier.
- The arrow mark appearing on the display indicates the sequence of switching operations.


1 Press the (ON-OFF) button so that the (OFF) mark blinks.



2 Set the turn-off time with the TIMER control button. Press the (RESERVE) button.



3 Press the (ON-TIMER) button so that the (OFF) mark lights and the (ON) mark blinks.

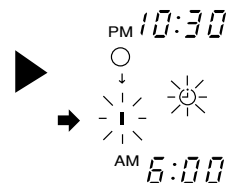


How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the (CANCEL) button.

The (RESERVED) sign goes out with a beep and the (TIMER) lamp turns off on the indoor unit.


NOTE


You can set only one of the OFF-timer, ON-timer and ON/OFF-timer.


2 Press the  (TIME) button.




3 Set the current time with the TIMER control button.



4 Press the  (TIME) button again. The time indication starts lighting instead of flashing.





- The time indication will disappear automatically in 10 second.
- To check the current time setting, press the  (TIME) button twice.




The setting of the current time is now complete.


Example: The current time is 1:30 p.m.

2 Set the turn-off time with the TIMER control button.



3 Point the signal window of the remote controller toward the indoor unit, and press the  (RESERVE) button.


The  (OFF) mark starts lighting instead of flashing and the sign  (RESERVED) lights. A beep occurs and the  (TIMER) lamp lights on the indoor unit.







Example: The device will turn off at 11:00p.m.


The setting of turn-off time is now complete.

2 Set the turn-on time with the TIMER control button.



3 Point the signal window of the remote controller toward the indoor unit, and press the  (RESERVE) button.

The  (ON) mark starts lighting instead of flashing and the  (RESERVED) sign lights. A beep occurs and the  (TIMER) lamp lights on the indoor unit.





Example:




The device will automatically turn on earlier so that the preset temperature can be reached at 7:00 a.m.


The setting of the turn-on time is now complete.

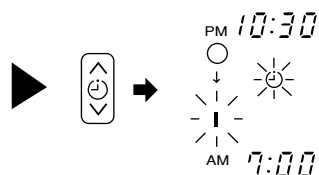4 Set the turn-on time with the TIMER control button.



5 Point the signal window of the remote controller toward the indoor unit, and press the  (RESERVE) button.


The  (ON) mark starts lighting instead of flashing and the  (RESERVED) sign lights. A beep occurs and the  (TIMER) lamp lights on the indoor unit.

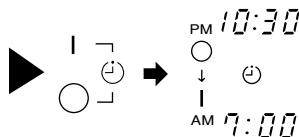


Example:


The device will turn off at 10:30 p.m. and then automatically turn on earlier so that the preset temperature can be reached at 7:00 a.m.

The settings of the turn-on/off times are now complete.


- The timer may be used in three ways: off-timer, on-timer, and ON/OFF (OFF/ON)-timer. Set the current time at first because it serves as a reference.
- As the time settings are stored in memory in the remote controller, you only have to press the  (RESERVE) button in order to use the same settings next time.

HOW TO SET THE SLEEP TIMER

Set the current time at first if it is not set before (see the pages for setting the current time). Press the  (SLEEP) button, and the display changes as shown below.

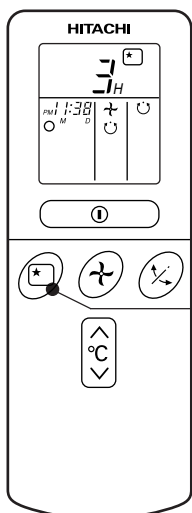


• SLEEP

Mode	Indication
Sleep timer	 → 1 hour → 2 hours → 3 hours → 7 hours → Sleep timer off ←


Sleep Timer: The device will continue working for the designated number of hours and then turn off.

Point the signal window of the remote controller toward the indoor unit, and press the SLEEP button.

The timer information will be displayed on the remote controller. The TIMER lamp lights with a beep from the indoor unit. When the sleep timer has been set, the display indicates the turn-off time.





Example: If you set 3 hours sleep time at 11:38 p.m., the turn-off time is 2:38 a.m.



The device will be turned off by the sleep timer and turned on by on-timer.

1 Set the ON-timer.


2 Press the  (SLEEP) button and set the sleep timer.

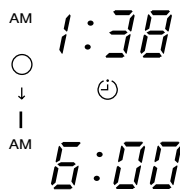

Example:

In this case, the device will turn off in 2 hours (at 1:38 a.m.) and turn on early so that the preset temperature will be almost reached at 6:00 next morning.

How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the  (CANCEL) button.



The  (RESERVED) sign goes out with a beep and the  (TIMER) lamp turns off on the indoor unit.

Explanation of the sleep timer

The device will control the FAN SPEED and room temperature automatically so as to be quiet and good for people's health.

You can set the sleep timer to turn off after 1, 2, 3 or 7 hours. The FAN SPEED and room temperature will be controlled as shown below.

Operation with the sleep timer

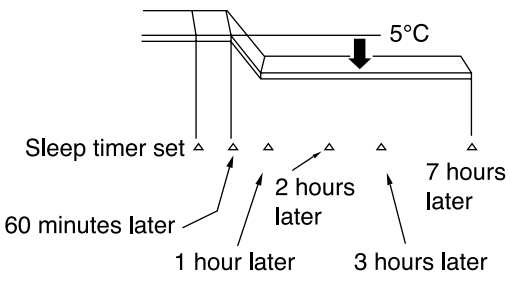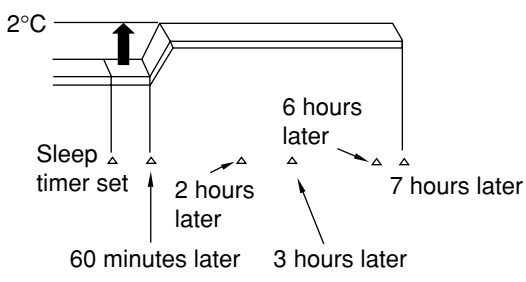
Function	Operation
Heating “ ● ”	<p>The room temperature will be controlled 5°C below the temperature and the FAN SPEED will be set to LOW setting 60 minutes after the setting of the sleep timer.</p> 
Cooling “ ❄ ” and dehumidifying “ ◊ ”	<p>The room temperature will be controlled 2°C above the temperature and the FAN SPEED will be set to LOW setting 60 minutes after the setting of the sleep timer.</p> 
Fan “ ✂ ”	<p>The settings of room temperature and circulation are varied.</p>


NOTE

- If date or current time is not set, sleep timer can not be set.
- If you set the sleep timer after the off-, on/off- or off/on-timer has been set, the sleep timer becomes effective instead of the off-, on/off- or off/on-timer set earlier.
- You can not set other timer during sleep timer operation.
- After sleep timer time is up and when press sleep button again, the sleep timer will be set as last setting.
- Sleep timer effective only once.

ADJUSTING THE AIR DEFLECTOR

- 1** Adjustment of the conditioned air in the upward and downward directions.

The horizontal air deflector is automatically set to the proper angle suitable for each operation. The deflector can be swung up and down continuously and also set to the desired angle using the “ (AUTO SWING)” button.


- If the “ (AUTO SWING)” button is pressed once, the horizontal air deflector swings up and down. If the button is pressed again, the deflector stops in its current position. Several seconds (about 6 seconds) may be required before the deflector starts to move.
- Use the horizontal air deflector within the adjusting range shown on the right.
- When the operation is stopped, the horizontal air deflector moves and stops at the position where the air outlet closes.

CAUTION

- In “Cooling” operation, do not keep the horizontal air deflector swinging for a long time. Some dew may form on the horizontal air deflector and dew may drop.


- 2** Adjustment of the conditioned air to the left and right.

Hold the vertical air deflector as shown in the figure and adjust the conditioned air to the left and right.

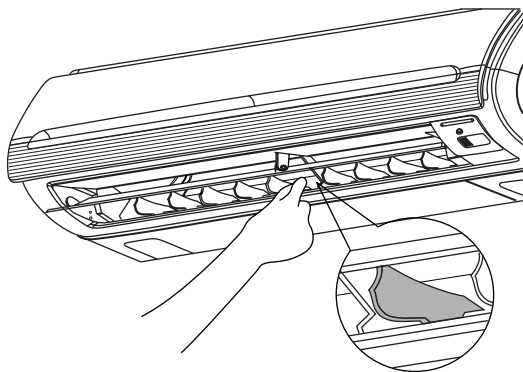


CAUTION


When operating the unit in cooling operation with the air deflector facing down and moving automatically for a long period of time, water will be condensed on the air deflector and drips down occasionally. This will wet your furniture.

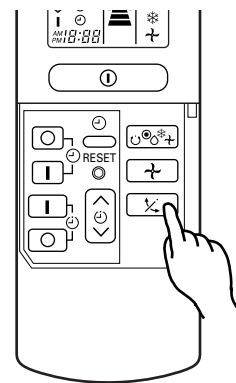

When cooling, dehumidifying

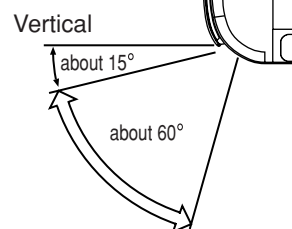

When heating

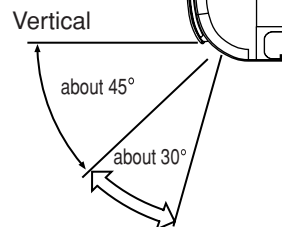

HOW TO EXCHANGE THE BATTERIES IN THE REMOTE CONTROLLER


1 Remove the cover as shown in the figure and take out the old batteries.



2 Install the new batteries.
The direction of the batteries should match the marks in the case.


⚠ CAUTION

1. Do not use new and old batteries, or different kinds of batteries together.
2. Take out the batteries when you do not use the remote controller for 2 or 3 months.

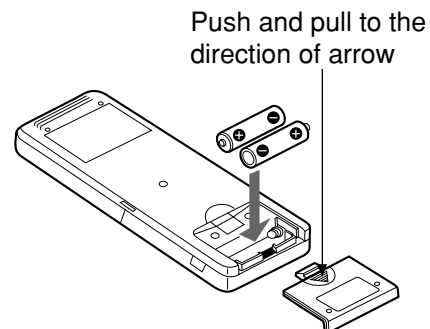


THE IDEAL WAYS OF OPERATION

Suitable Room Temperature

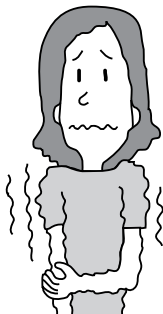

⚠ Warning
Freezing temperature is bad for health and a waste of electric power.

Install curtain or blinds

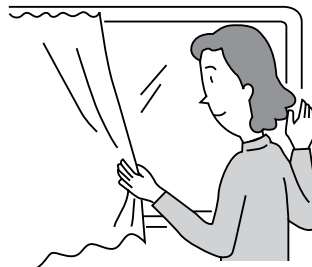

It is possible to reduce heat entering the room through windows.


Ventilation

⚠ Caution
Do not close the room for a long period of time. Occasionally open the door and windows to allow the entrance of fresh air.




Effective Usage Of Timer

At night, please use the “OFF or ON timer operation mode”, together with your wake up time in the morning. This will enable you to enjoy a comfortable room temperature. Please use the timer effectively.

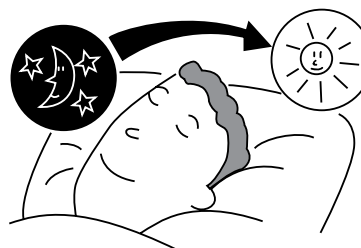


Do Not Forget To Clean The Air Filter

Dusty air filter will reduce the air volume and the cooling efficiency. To prevent from wasting electric energy, please clean the filter every 2 weeks.

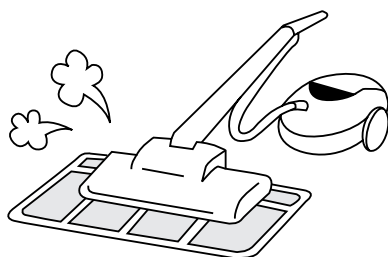

Please Adjust Suitable Temperature For Baby And Children

Please pay attention to the room temperature and air flow direction when operating the unit for baby, children and old folks who have difficulty in movement.

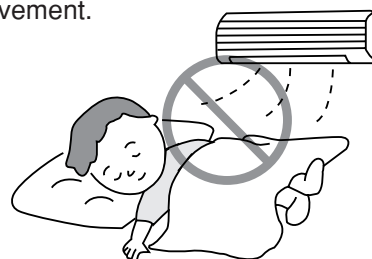


FOR USER'S INFORMATION

The Air Conditioner And The Heat Source In The Room


⚠ Caution

If the amount of heat in the room is above the cooling capability of the air conditioner (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.

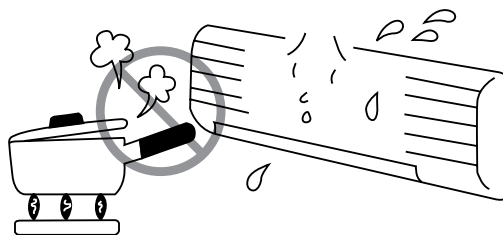

Not Operating For A Long Time


When the indoor unit is not to be used for a long period of time, please switch off the power from the mains. If the power from mains remains "ON", the indoor unit still consumes about 8W in the operation control circuit even if it is in "OFF" mode.

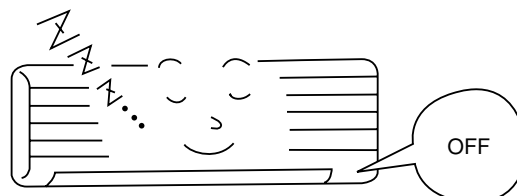

When Lightning Occurs

⚠ Warning


To protect the whole unit during lightning, please stop operating the unit and remove the plug from the socket.

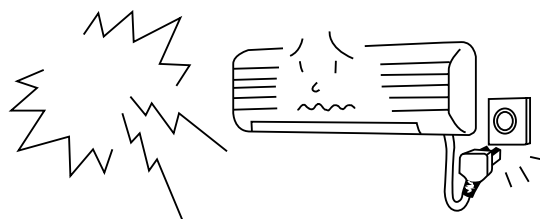

Interference From Electrical Products

⚠ Caution

To avoid noise interference, please place the indoor unit and its remote controller at least 1m away from electrical products.

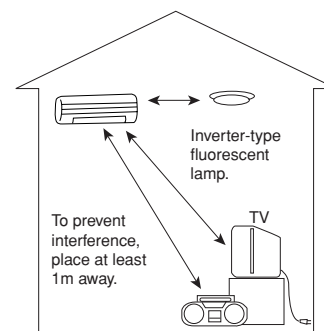


ATTACHING THE AIR CLEANSING AND DEODORIZING FILTERS

⚠ CAUTION

Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.


1 Open the front panel.

- Pull up the front panel by holding it at both sides with both hands.

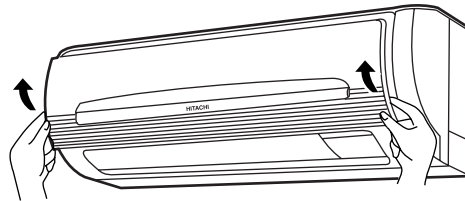


2 Remove the filter.

- Push upward to release the claws and pull out the filter.

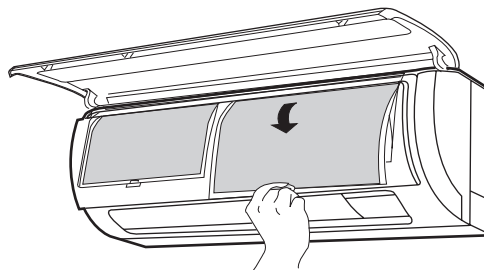

3 Attaching the air cleansing and deodorizing filters to the filter.

- Attach the air cleansing and deodorizing filters to the frame by gently compress its both sides and release after insertion into filter frame.

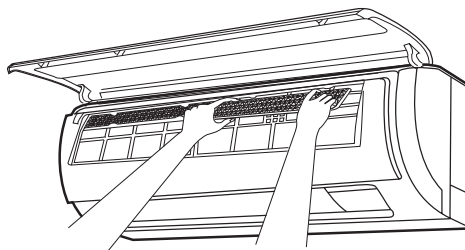



⚠ CAUTION

Do not bend the air cleansing and deodorizing filter as it may cause damage to the structure.



4 Attach the filters.

- Attach the filters by ensuring that the surface written "FRONT" is facing front.
- After attaching the filters, push the front panel at three arrow portion as shown in figure and close it.

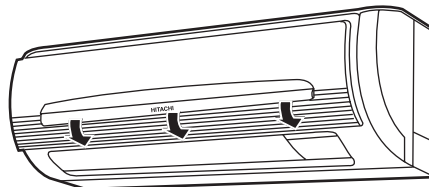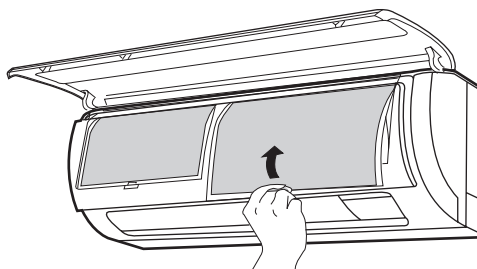

NOTE

- In case of removing the air cleansing and deodorizing filters, please follow the above procedures.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air cleansing and deodorizing filters are used. So, set the fan speed to "HIGH" when using it in this condition.
- Air cleansing and deodorizing filters are washable and reusable up to 20 times by using vacuum cleaner or water rinse under running tap water. Type number for this air cleansing filter is <SPX-CFH11>. Please use this number for ordering when you want to renew it.
- Do not operate the air conditioner without filter. Dust may enter the air conditioner and fault may occur.

MAINTENANCE

▲ CAUTION


Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.

1. AIR FILTER



Clean the air filter, as it removes dust inside the room. In case the air filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the filter following the procedure below.

PROCEDURE


- 1 Open the front panel and remove the filter
 - Gently lift and remove the air cleansing and deodorizing filter from the air filter frame.

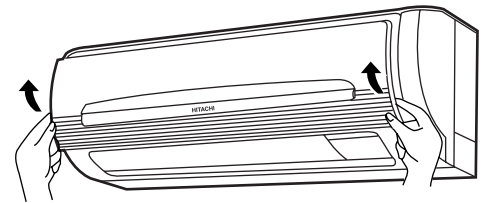

- 2 Vacuum dust from the air filter and air cleansing and deodorizing filter using vacuum cleaner. If there is too much dust, rinse under running tap water and gently brush it with soft bristle brush. Allow filters to dry in shade.

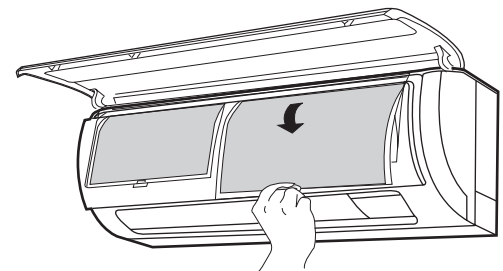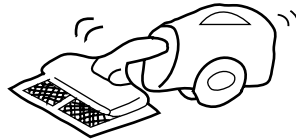

- 3
 - Re-insert the air cleansing and deodorizing filter to the filter frame. Set the filter with "FRONT" mark facing front, and slot them into the original state.
 - After attaching the filters, push the front panel at three arrow portions as shown in figure and close it.

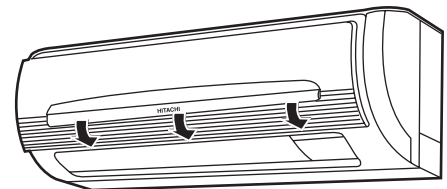

NOTE:


- Air cleansing and deodorizing filter should be cleaned every month or sooner if noticeable loading occurs. When used overtime, it may loose its deodorizing function. For maximum performance, it is recommended to replace it every 3-6 months depending on application requirements.

▲ CAUTION

- Do not wash with hot water at more than 40°C. The filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Do not use detergent on the air cleansing and deodorizing filter as some detergent may deteriorate the filter electrostatic performance.


2. Washable Front Panel

- Remove the front panel and wash with clean water.
Wash it with a soft sponge.
After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly.
If water remains at indicators or signal receiver of indoor unit, it causes trouble.

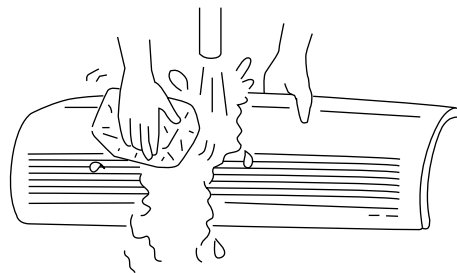


Method of removing the front panel.
Be sure to hold the front panel with both hands to detach and attach it.

Removing the Front Panel

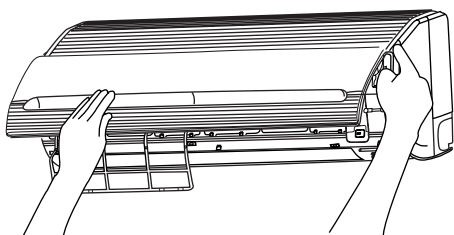

- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.

Attaching the Front Panel

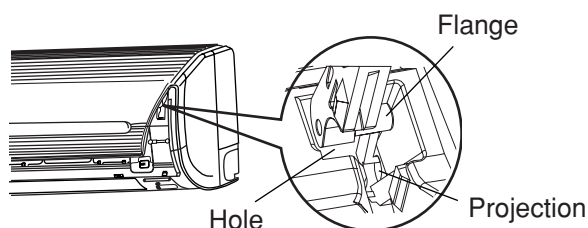


- Move the projections of the left and right arms into the **Flanges** in the unit and securely insert them into the holes.


CAUTION

- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Never use hot water (above 40°C), benzine, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.




3. MAINTENANCE AT BEGINNING OF LONG OFF PERIOD

- Run the unit by setting the operation mode to  (FAN) and the fan speed to HI for about half a day on a fine day, and dry the whole of the unit.
- Switch off the power plug.

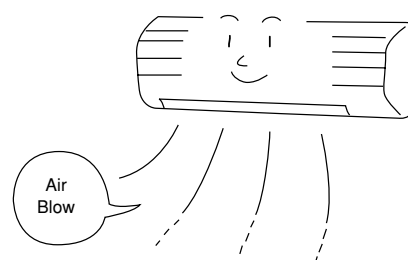

CAUTION

- Please use earth line.
Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock.
- A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.

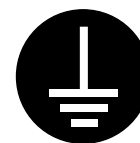


IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Green-and-yellow : Earth
Blue : Neutral
Brown : Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol  or coloured green or green-and-yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

NOTE




If the supply cord is damaged, it must be replaced by the special cord obtainable at authorized service/parts centers.

CAUTION

Cleaning and maintenance must be carried out only by qualified service personal. Before cleaning, stop operation and switch off the power supply.



REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS BY QUALIFIED SERVICE PERSONAL EITHER EVERY HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT OR SERVICE SHOP.

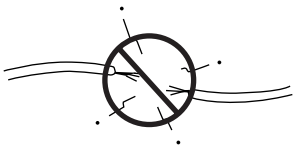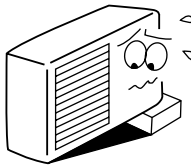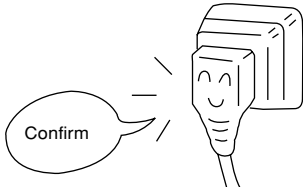1		Is the earth line disconnected or broken?
2		Is the mounting frame seriously affected by rust and is the outdoor unit tilted or unstable?
3		Is the plug of power line firmly plugged into the socket? (Please ensure no loose contact between them).

AFTER SALE SERVICE AND WARRANTY

WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

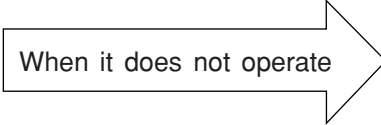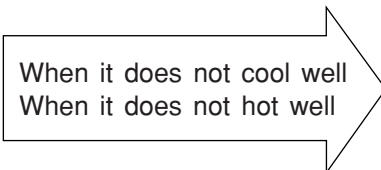CONDITION	CHECK THE FOLLOWING POINTS
 <p>When it does not operate</p>	<ul style="list-style-type: none"> ● Is the fuse all right? ● Is the voltage extremely high or low? ● Is the circuit breaker "ON"?
 <p>When it does not cool well When it does not hot well</p>	<ul style="list-style-type: none"> ● Was the air filter cleaned? ● Does sunlight fall directly on the outdoor unit? ● Is the air flow of the outdoor unit obstructed? ● Are the doors or windows opened, or is there any source of heat in the room? ● Is the set temperature suitable?

Notes



- In quiet operation or stopping the operation, the following phenomena may occasionally occur, but they are not abnormal for the operation.
 - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
 - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So the air filter and the evaporator regularly must be cleaned to reduce the odor.

- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.
- Power supply shall be connected at the rated voltage, otherwise the unit will be broken or could not reach the specified capacity.

Please note:

On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.

The conditions of the local Power Supply Companies are to be observed.


Note

- Avoid to use the room air conditioner for cooling operation when the outside temperature is below 21°C (70°F).
The recommended maximum and minimum operating temperatures of the hot and cold sides should be as below:

		Cooling		Heating	
		Minimum	Maximum	Minimum	Maximum
Indoor	Dry bulb °C	21	32	20	27
	Wet bulb °C	15	23	12	19
Outdoor	Dry bulb °C	21	43	2	21
	Wet bulb °C	15	26	1	15


CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAS-07GH4/09GH4/14GH4

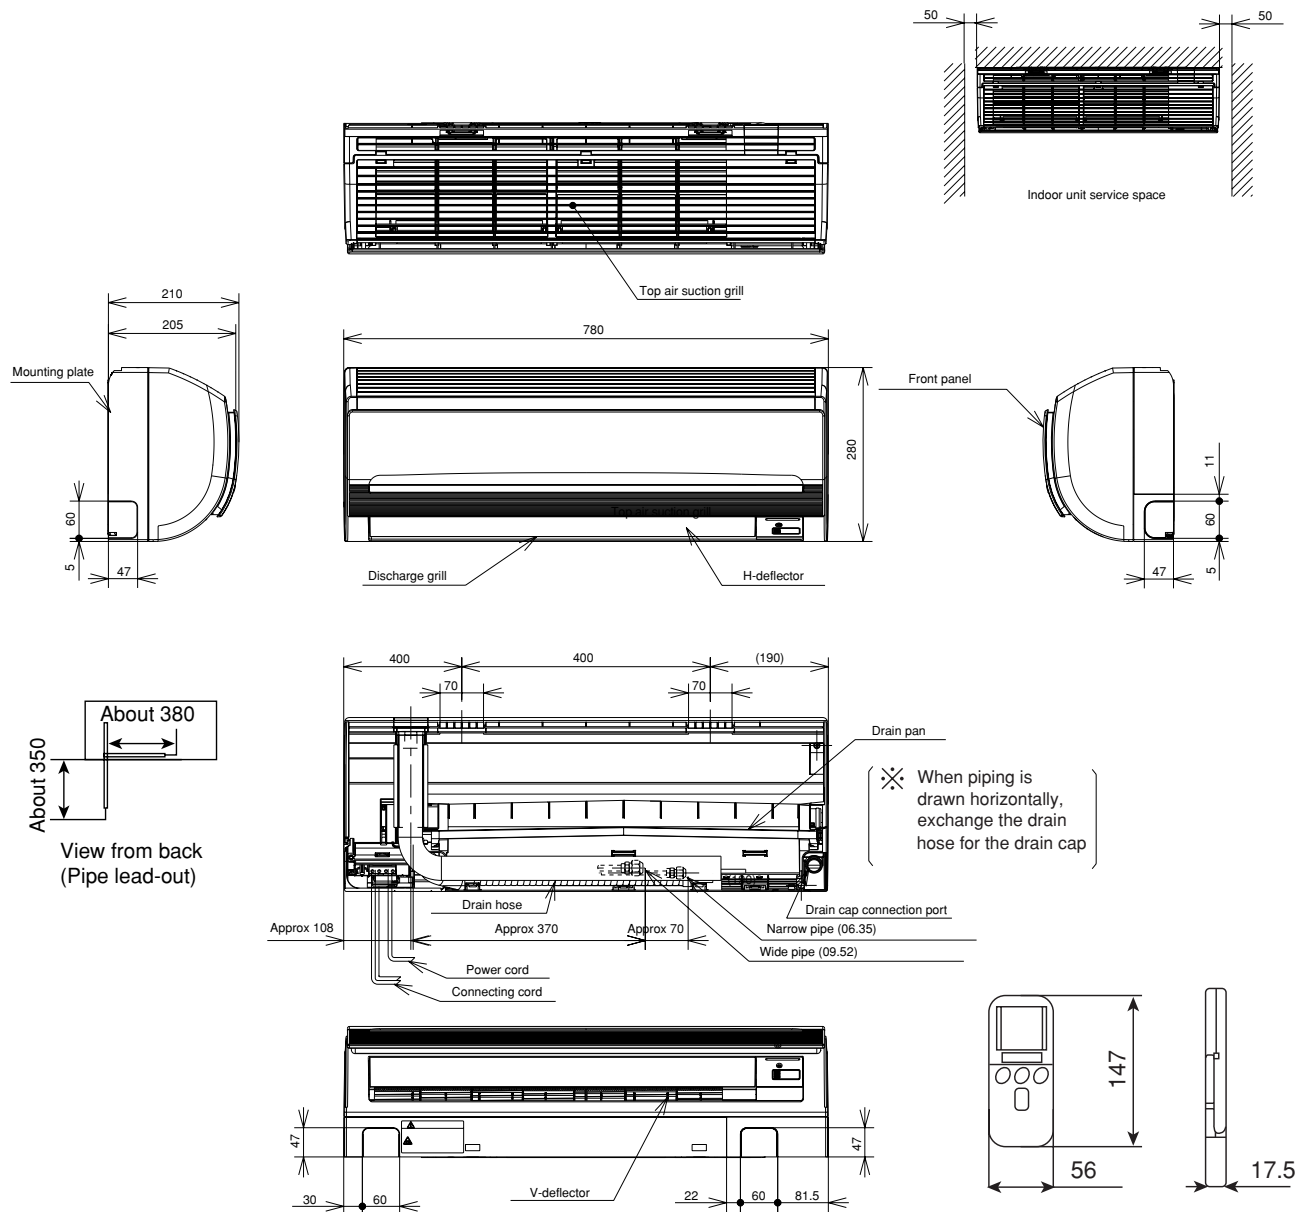


Note:


1. Servicing space of 100mm or more is required on the left and right sides of the indoor unit and also 50mm or more space is required above the unit
2. Insulated pipes should be used for both the narrow and wide dia. pipes.
3. Piping length is within 15m (RAS-14GH4), 10m (RAS-07GH4/RAS-09GH4)
4. Height different of the piping between the indoor unit and the outdoor unit should be within 5m.
5. Power supply cord length is about 2m
6. Connecting cable 2.5mm dia. x 3 (AB Line), 1.6mm dia. x 2 (CD Line) is used for the connection.

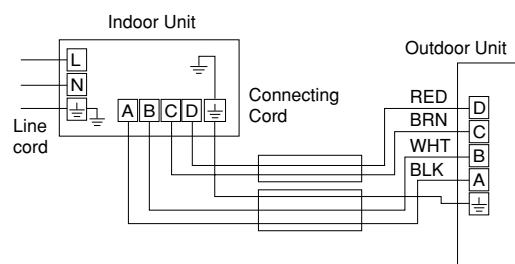

MODEL RAC-07GH4 / RAC-09GH4

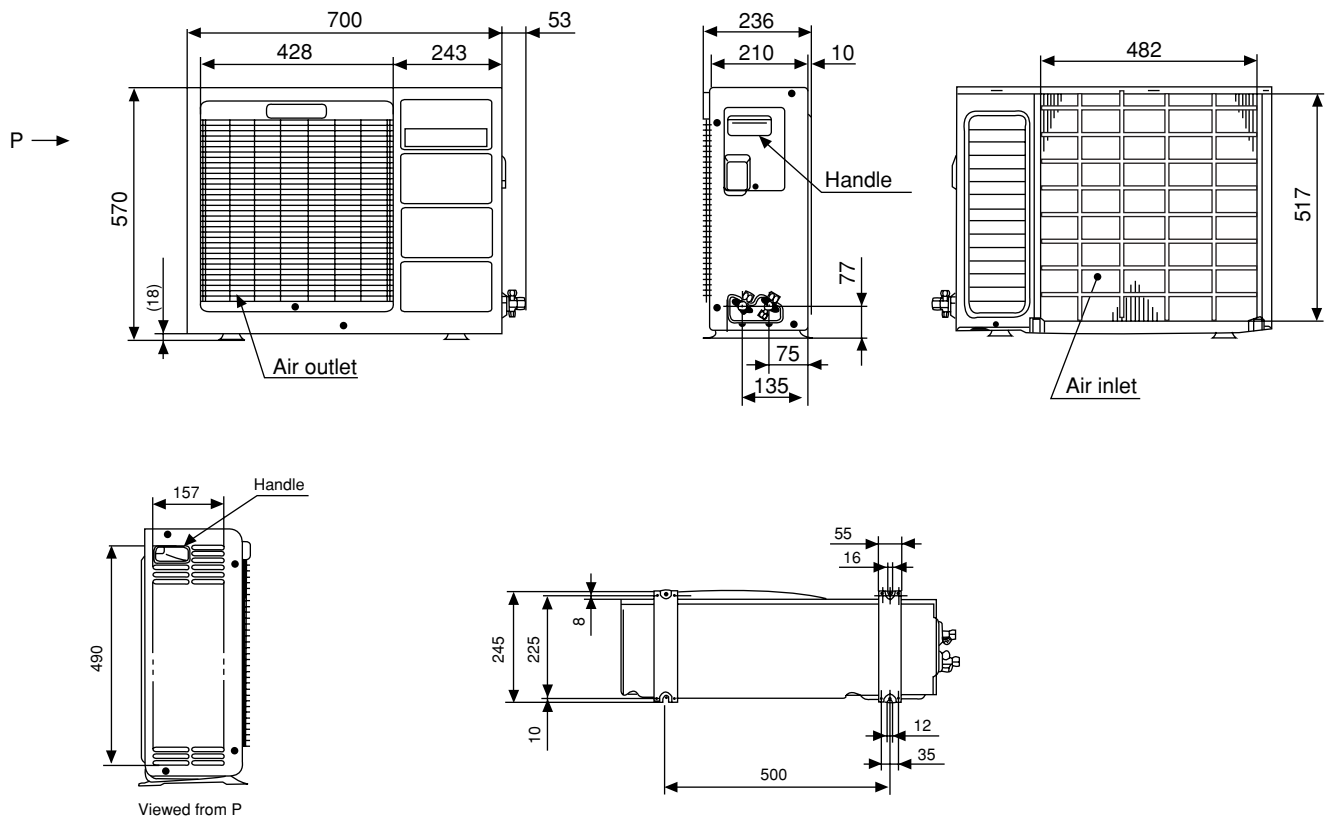

MODEL RAC-14GH4

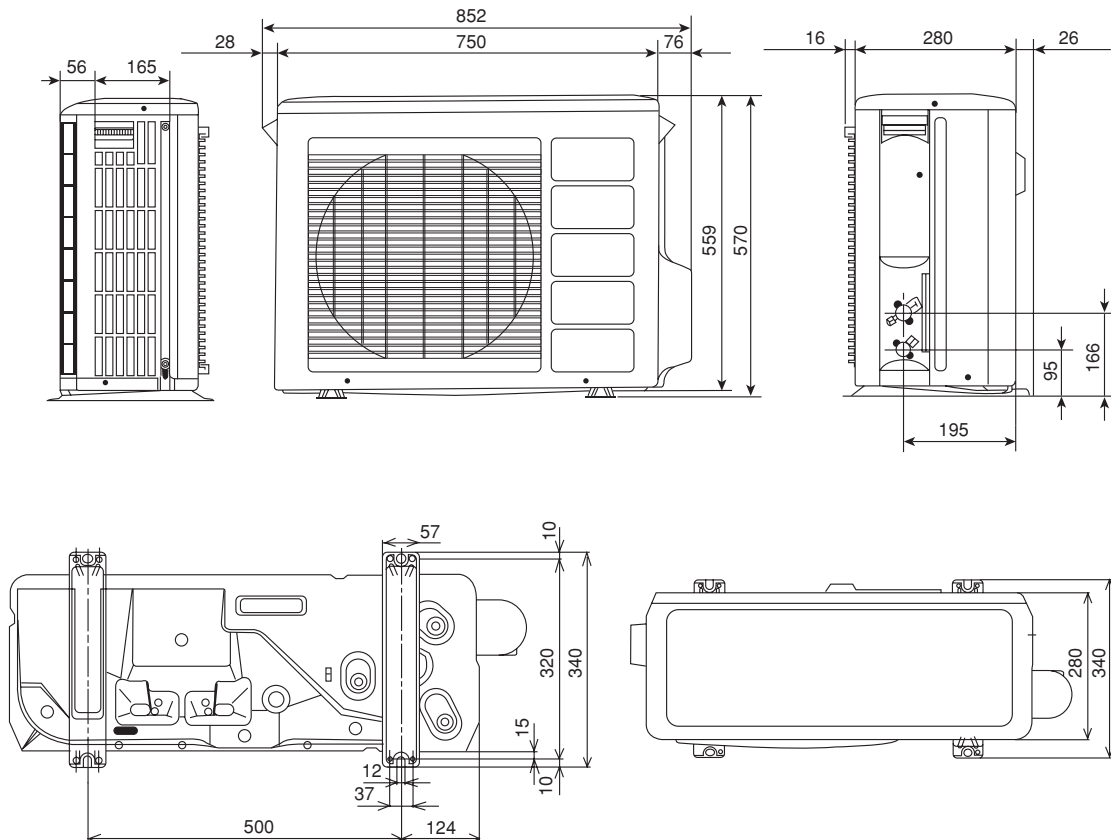

MAIN PARTS COMPONENT



THERMOSTAT (Room Temperature Thermistor)

Thermostat Specifications

MODEL			RAS-07GH4/09GH4/14GH4	
THERMOSTAT MODEL			IC	
OPERATION			COOL	HEAT
TEMPERATURE °C (°F)	INDICATION 16	ON	16.6 (61.9)	18.7 (65.6)
		OFF	16.0 (60.8)	19.3 (66.7)
	INDICATION 24	ON	24.6 (76.3)	26.7 (80.1)
		OFF	24.0 (75.2)	27.3 (81.1)
	INDICATION 32	ON	32.6 (90.7)	34.2 (94.5)
		OFF	32.0 (89.6)	35.3 (95.5)

FAN MOTOR


Fan Motor Specifications

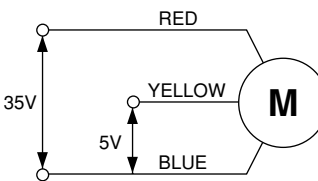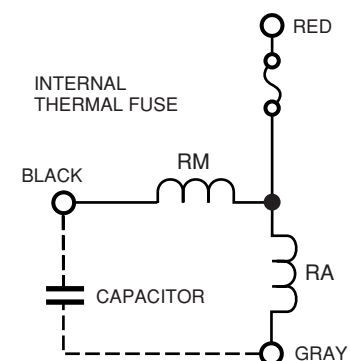MODEL		RAS-07GH4/09GH4/14GH4	RAC-07GH4/09GH4/14GH4			
PHASE		-----	SINGLE			
RATED VOLTAGE		DC35V	220-240V			
RATED FREQUENCY		-----	50 Hz			
OUTPUT		20 W	20W	30W	30W	
POLE NUMBER		-----	6			
CONNECTION						
RESISTANCE VALUE (Ω)	20°C	-----	RM = 355.1 RA = 252.6	RM = 253.0 RA = 173.4	RM = 250.3 RA = 171.1	
	75°C	-----	RM = 431.9 RA = 307.1	RM = 307.7 RA = 210.9	RM = 304.4 RA = 208.1	

COMPRESSOR MOTOR

Compressor Motor Specifications

MODEL	RAC-07GH4/09GH4/14GH4			
COMPRESSOR MODEL	5RS080	5PS112	5PS132	
PHASE	SINGLE			
RATED VOLTAGE	220 – 240 V			
RATED FREQUENCY	50 Hz			
LOCKED ROTOR CURRENT	45 A			
POLE NUMBER	2			
CONNECTION				
RESISTANCE VALUE (Ω)	20°C (68°F)	RM = 5.233 RA = 5.621	RM = 3.192 RA = 4.621	RM = 2.826 RA = 5.413
	75°C (167°F)	RM = 6.364 RA = 6.836	RM = 3.882 RA = 5.620	RM = 3.437 RA = 6.583
EXTERNAL OVERLOAD RELAY	YES			
INTERNAL PROTECTOR	NO			

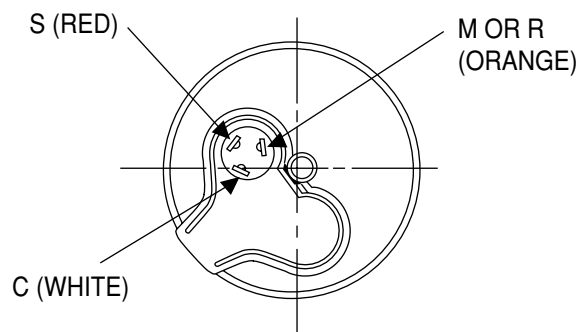

RAC-07GH4 / RAC-09GH4 / RAC-14GH4


CAUTION

When the Air Conditioner has been operated for a long time with the capillary tubes clogged or crushed or with too little coolant, check the color of the refrigerant oil inside the compressor. If the color has been changed conspicuously, replace the compressor.

WIRING DIAGRAM


MODEL RAS-07/09/14GH4 // RAC-07/09/14GH4

WIRING DIAGRAM

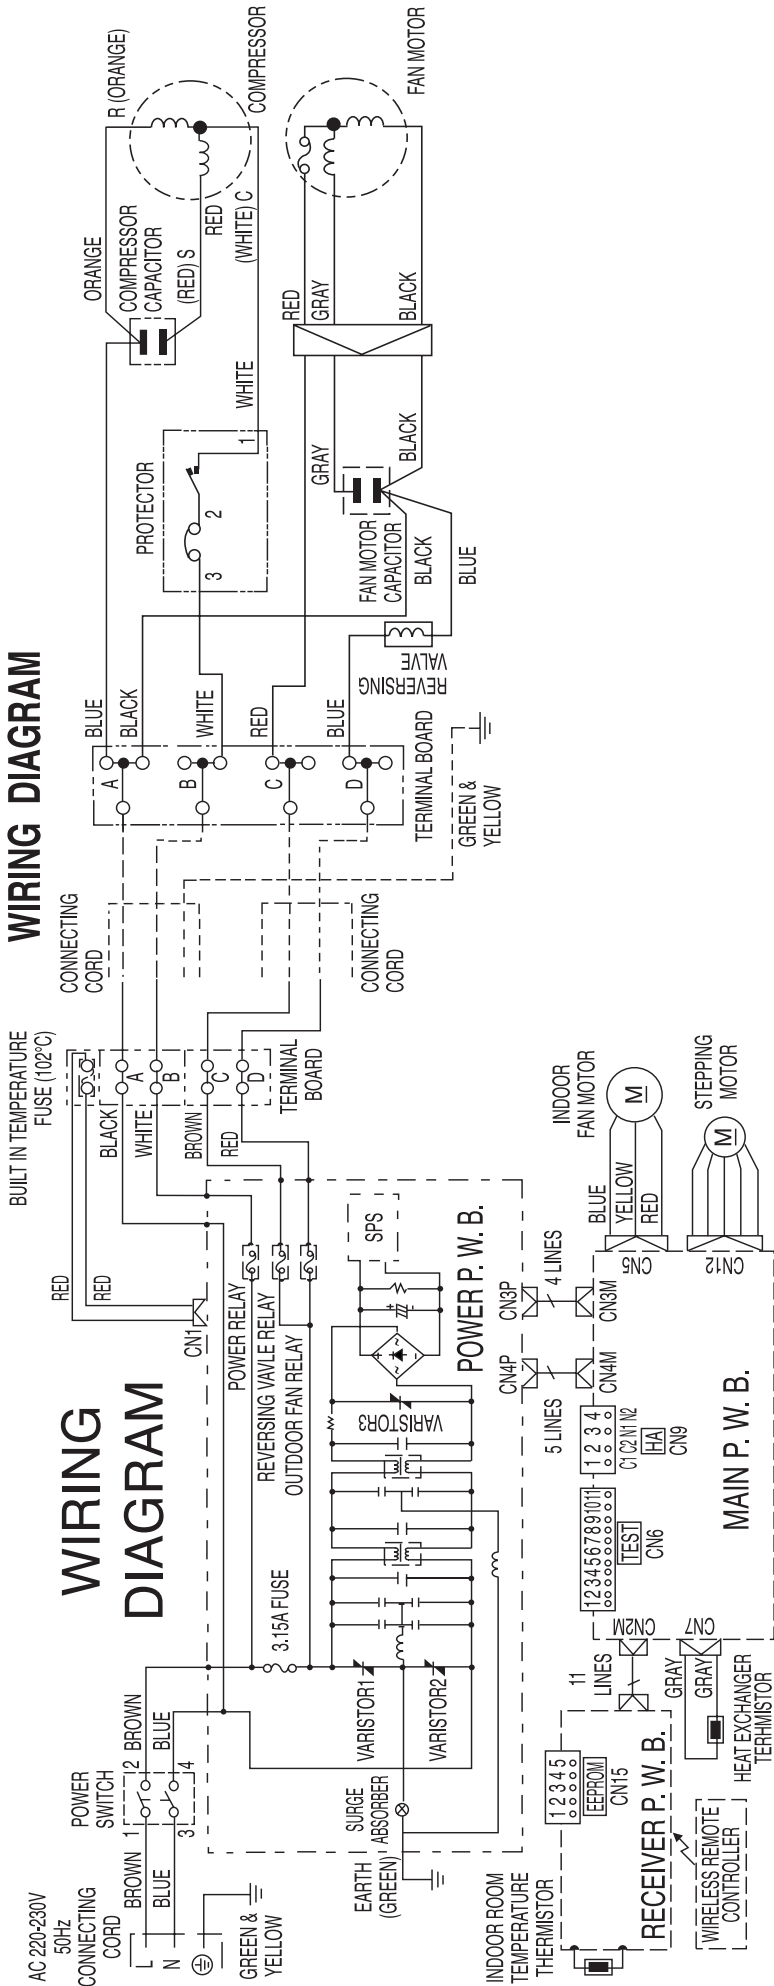

CIRCUIT DIAGRAM

Remote Control

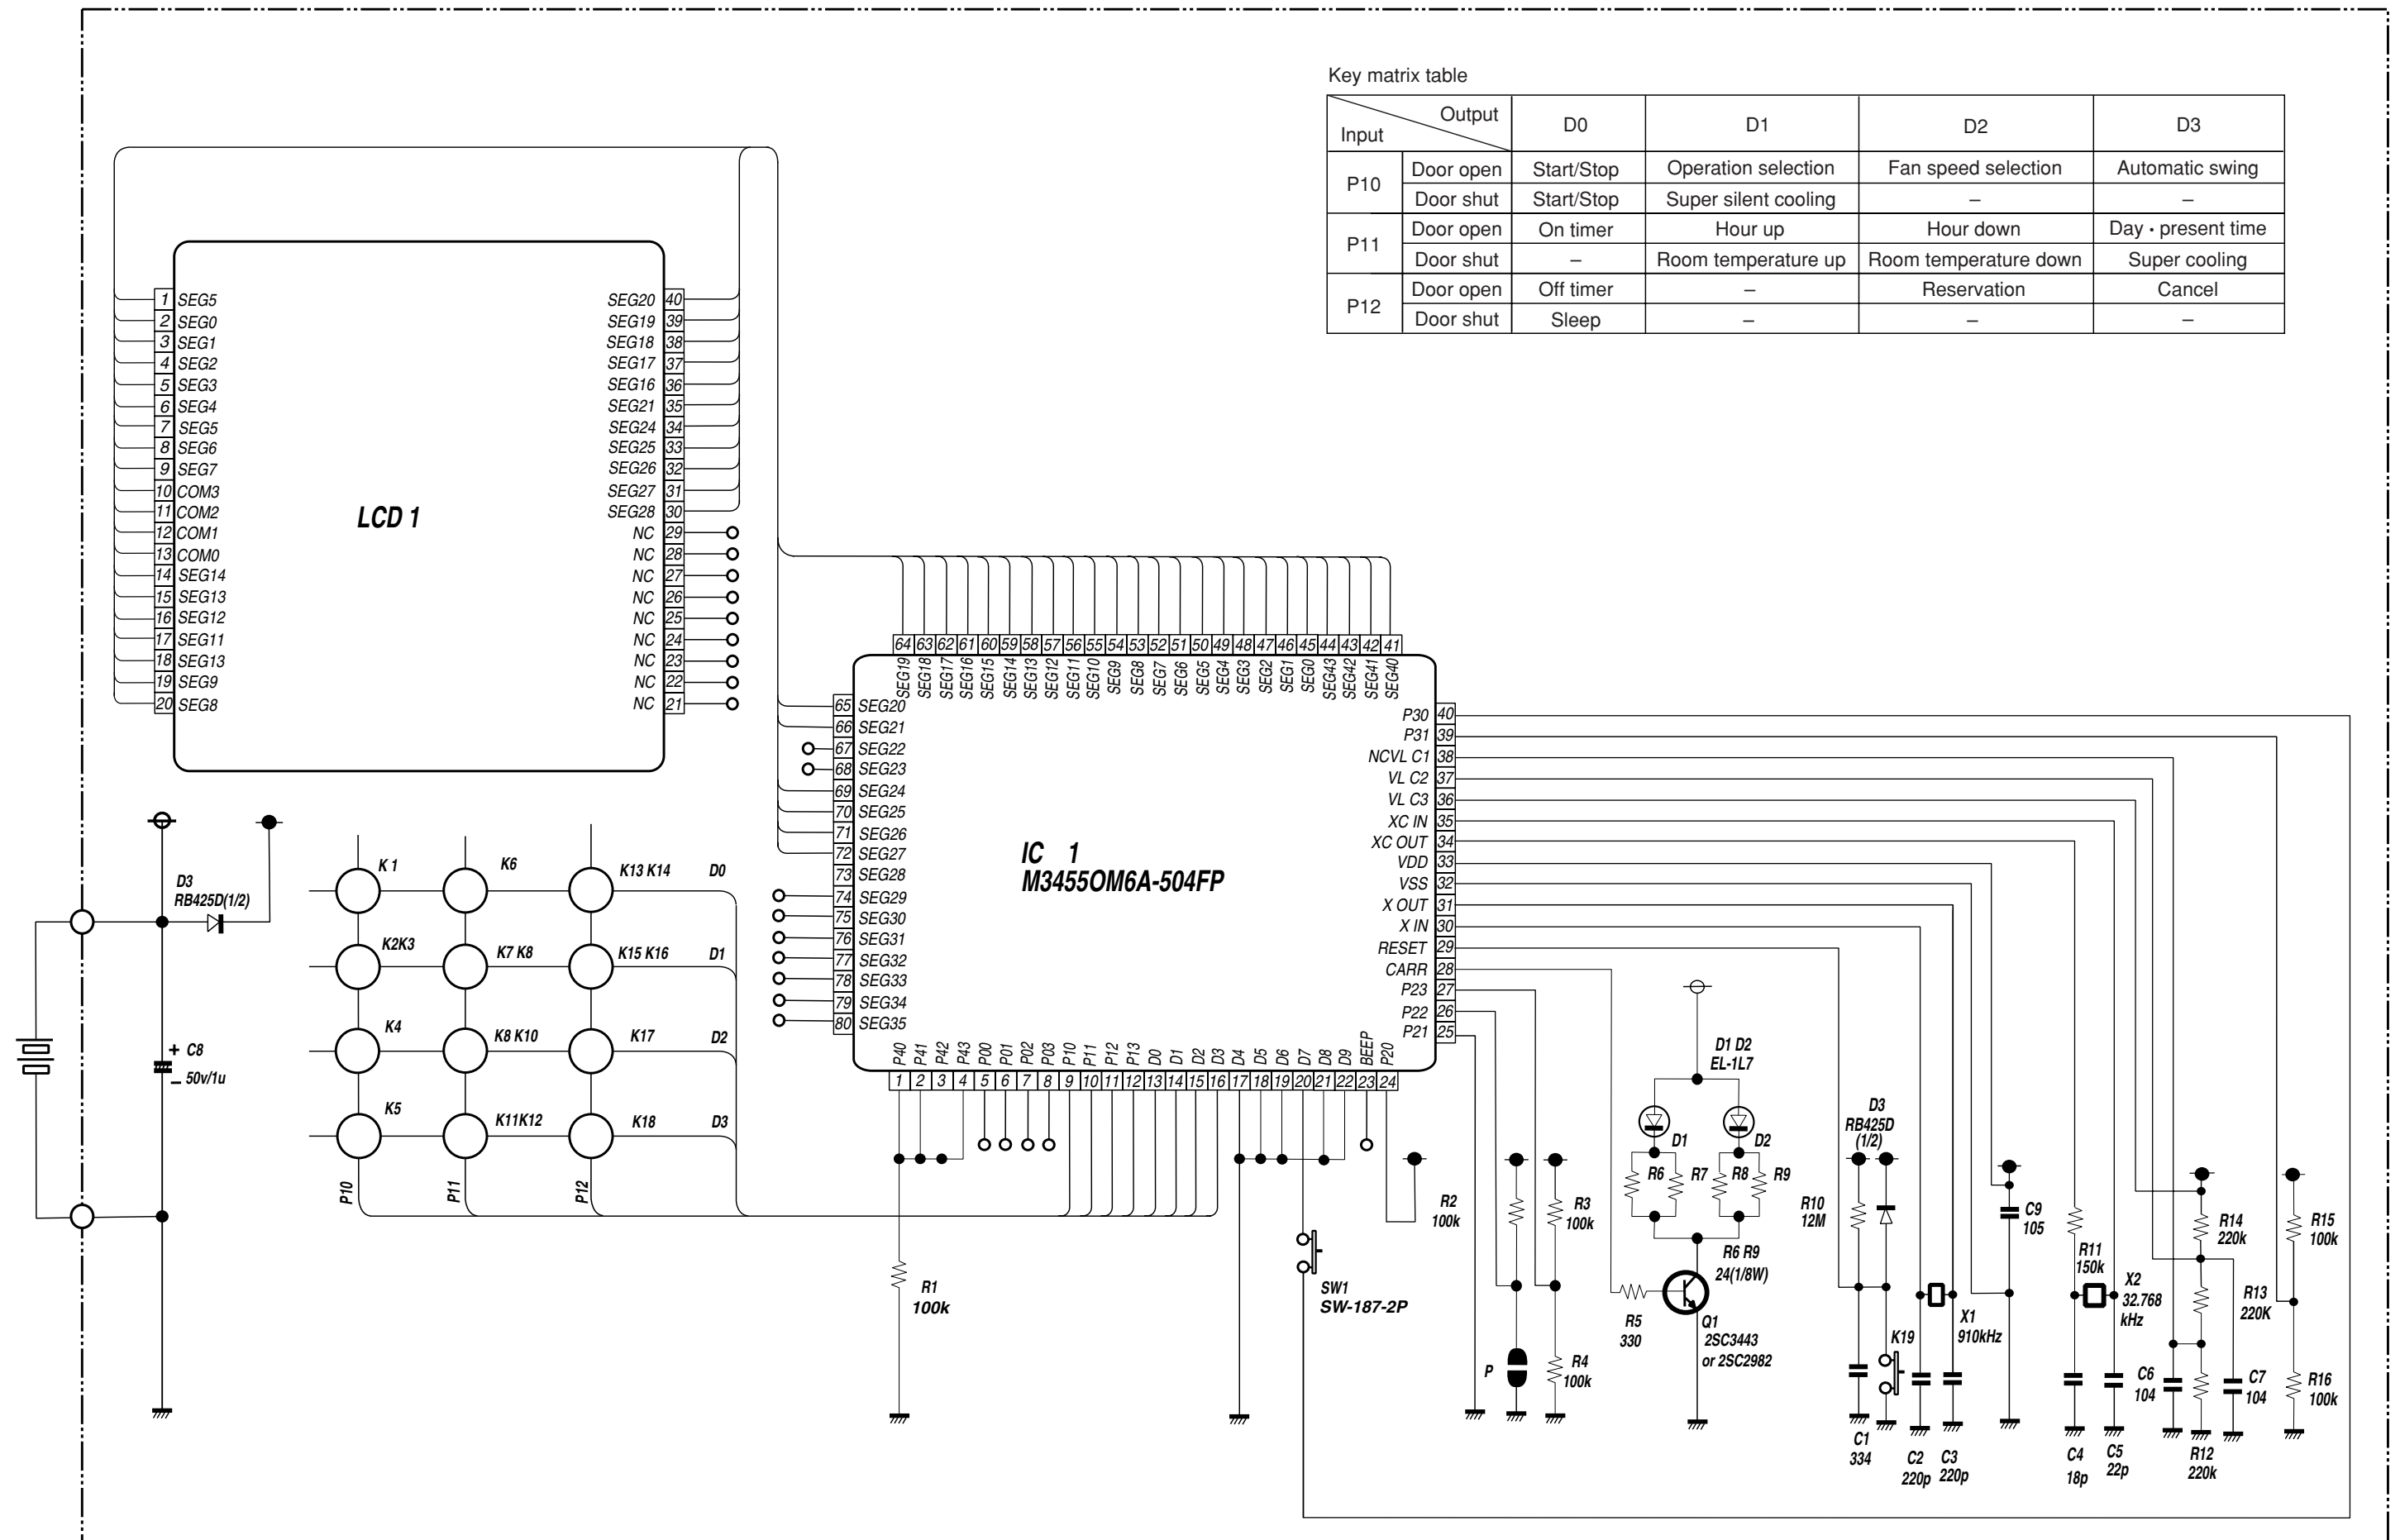


Key matrix table

Input \ Output		Output			
		D0	D1	D2	D3
P10	Door open	Start/Stop	Operation selection	Fan speed selection	Automatic swing
	Door shut	Start/Stop	Super silent cooling	—	—
P11	Door open	On timer	Hour up	Hour down	Day · present time
	Door shut	—	Room temperature up	Room temperature down	Super cooling
P12	Door open	Off timer	—	Reservation	Cancel
	Door shut	Sleep	—	—	—


PRINTED WIRING BOARD LOCATION DIAGRAM

MODEL RAS-07GH4/09GH4/14GH4 // RAC-07GH4/09GH4/14GH4

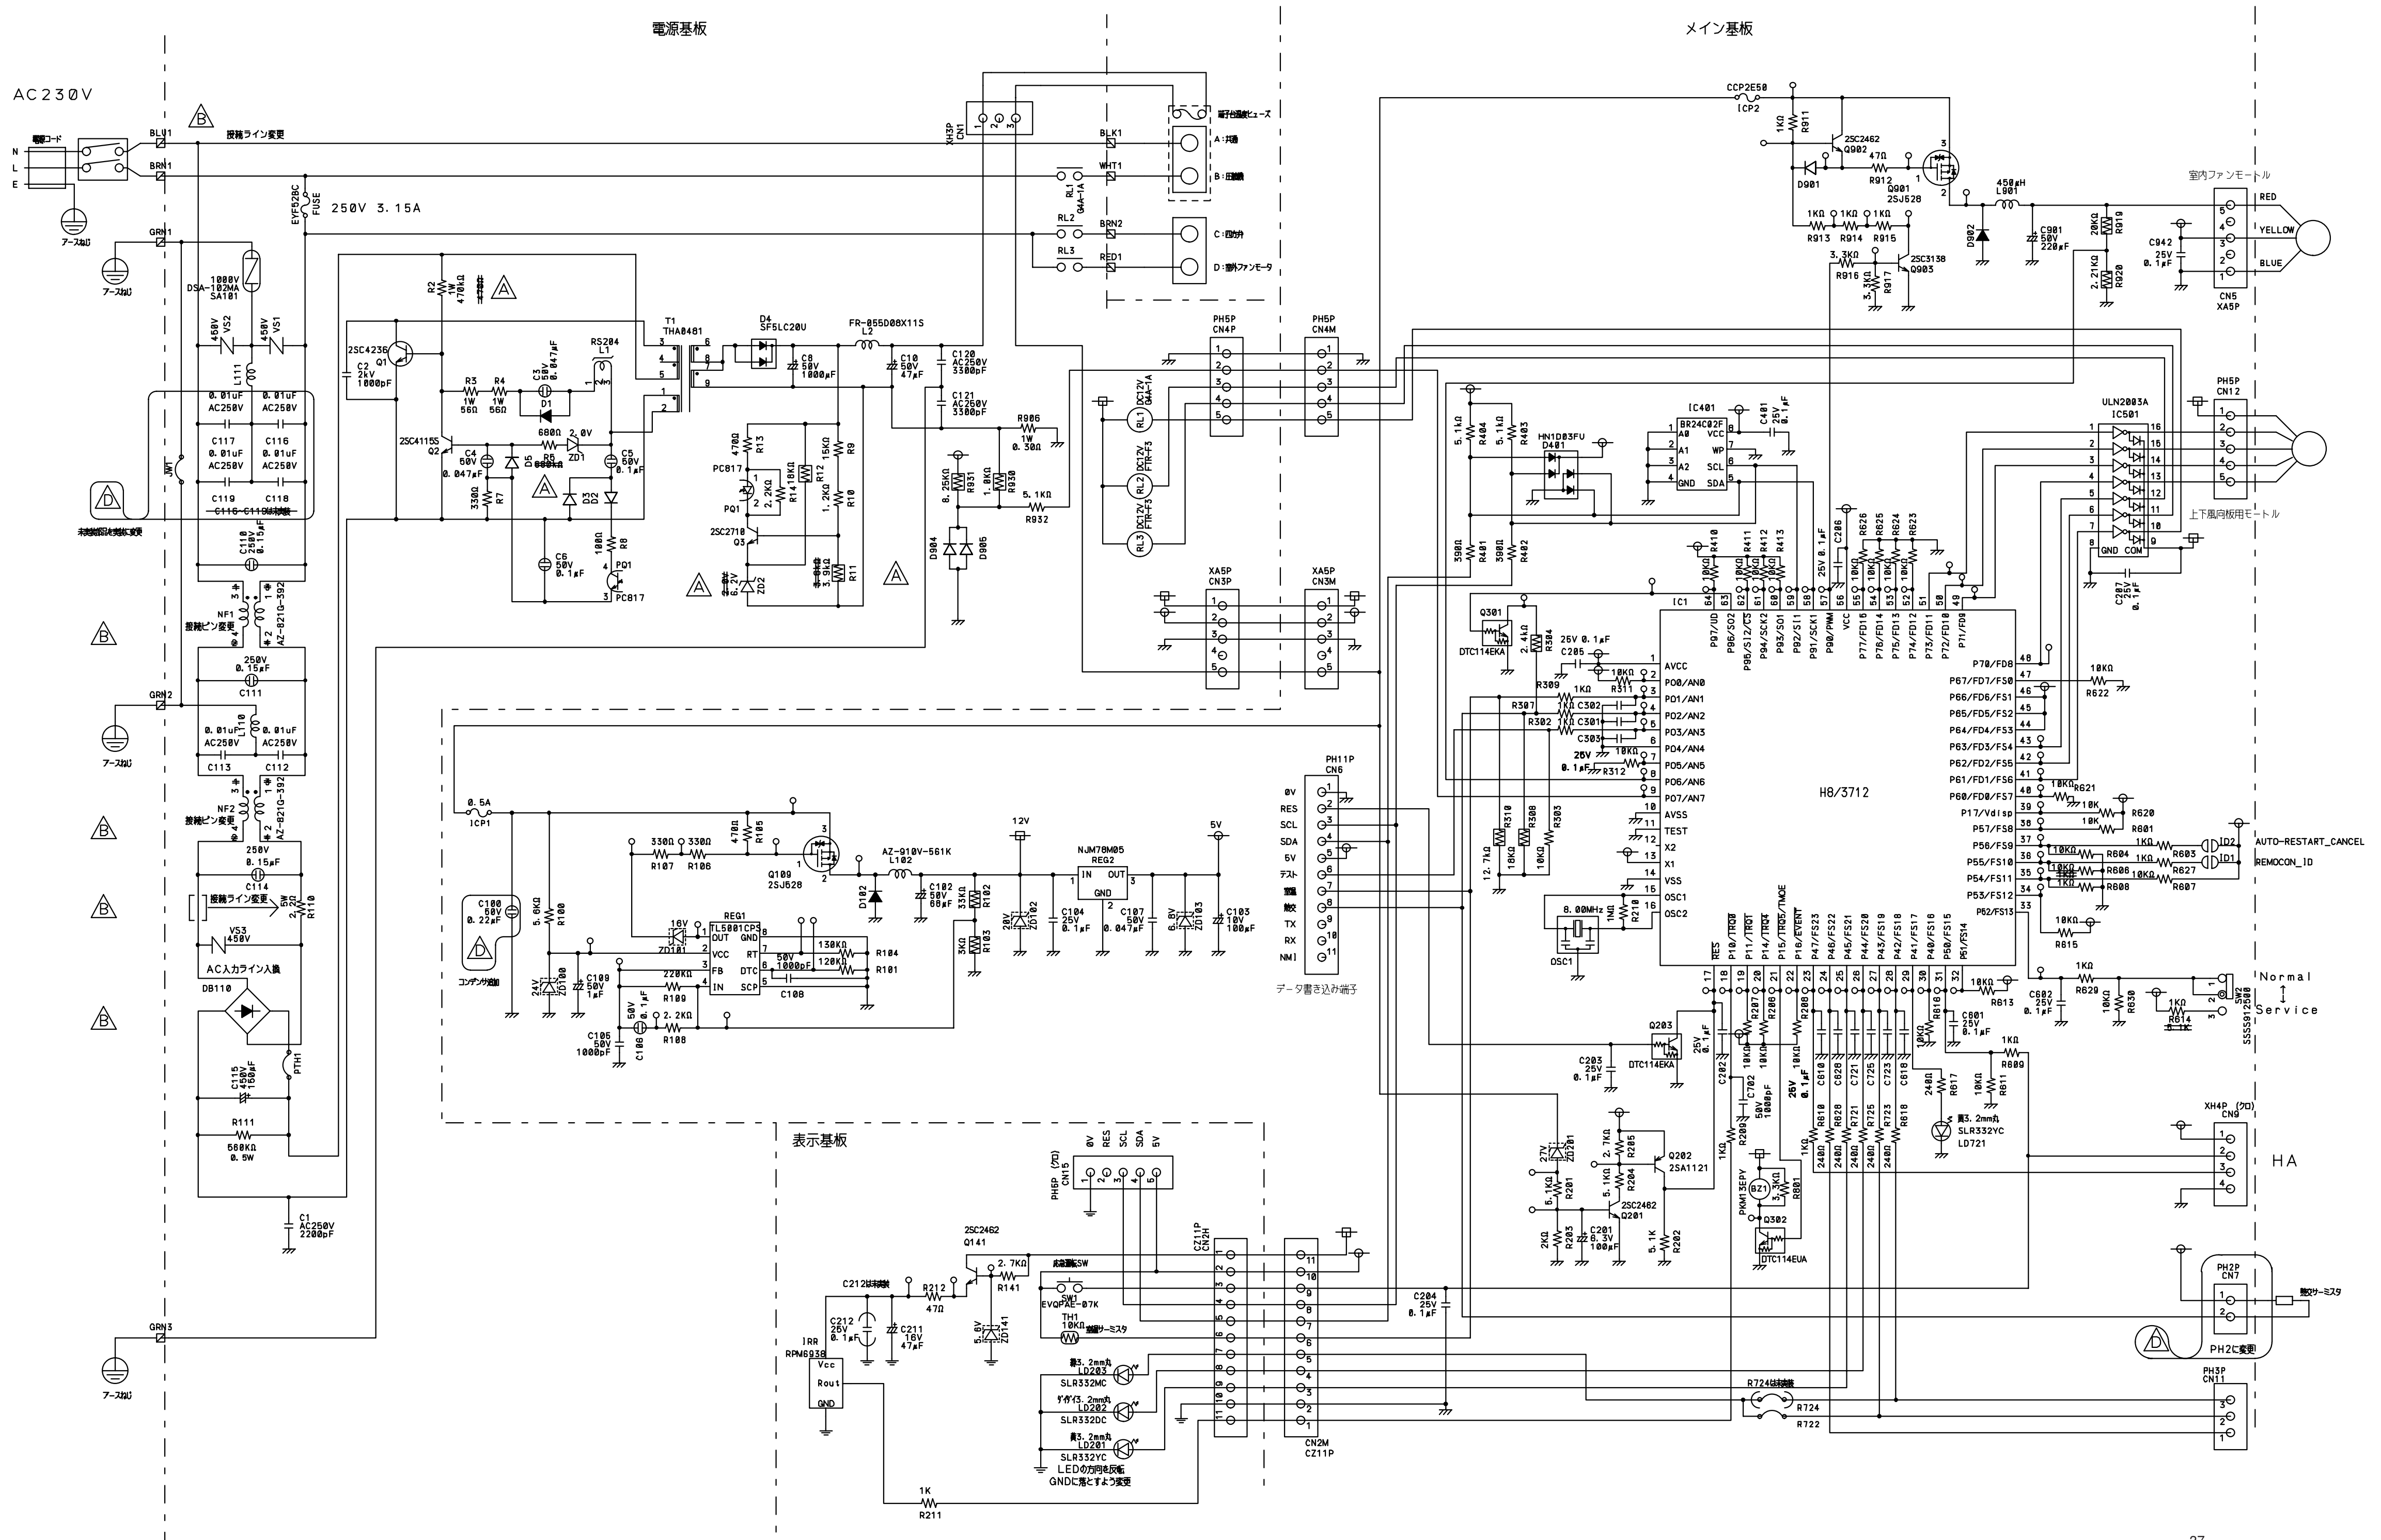

BLOCK DIAGRAM

MODEL RAS-07GH4/RAS-09GH4/RAS-14GH4 // RAC-07GH4/RAC-09GH4/RAC-14GH4

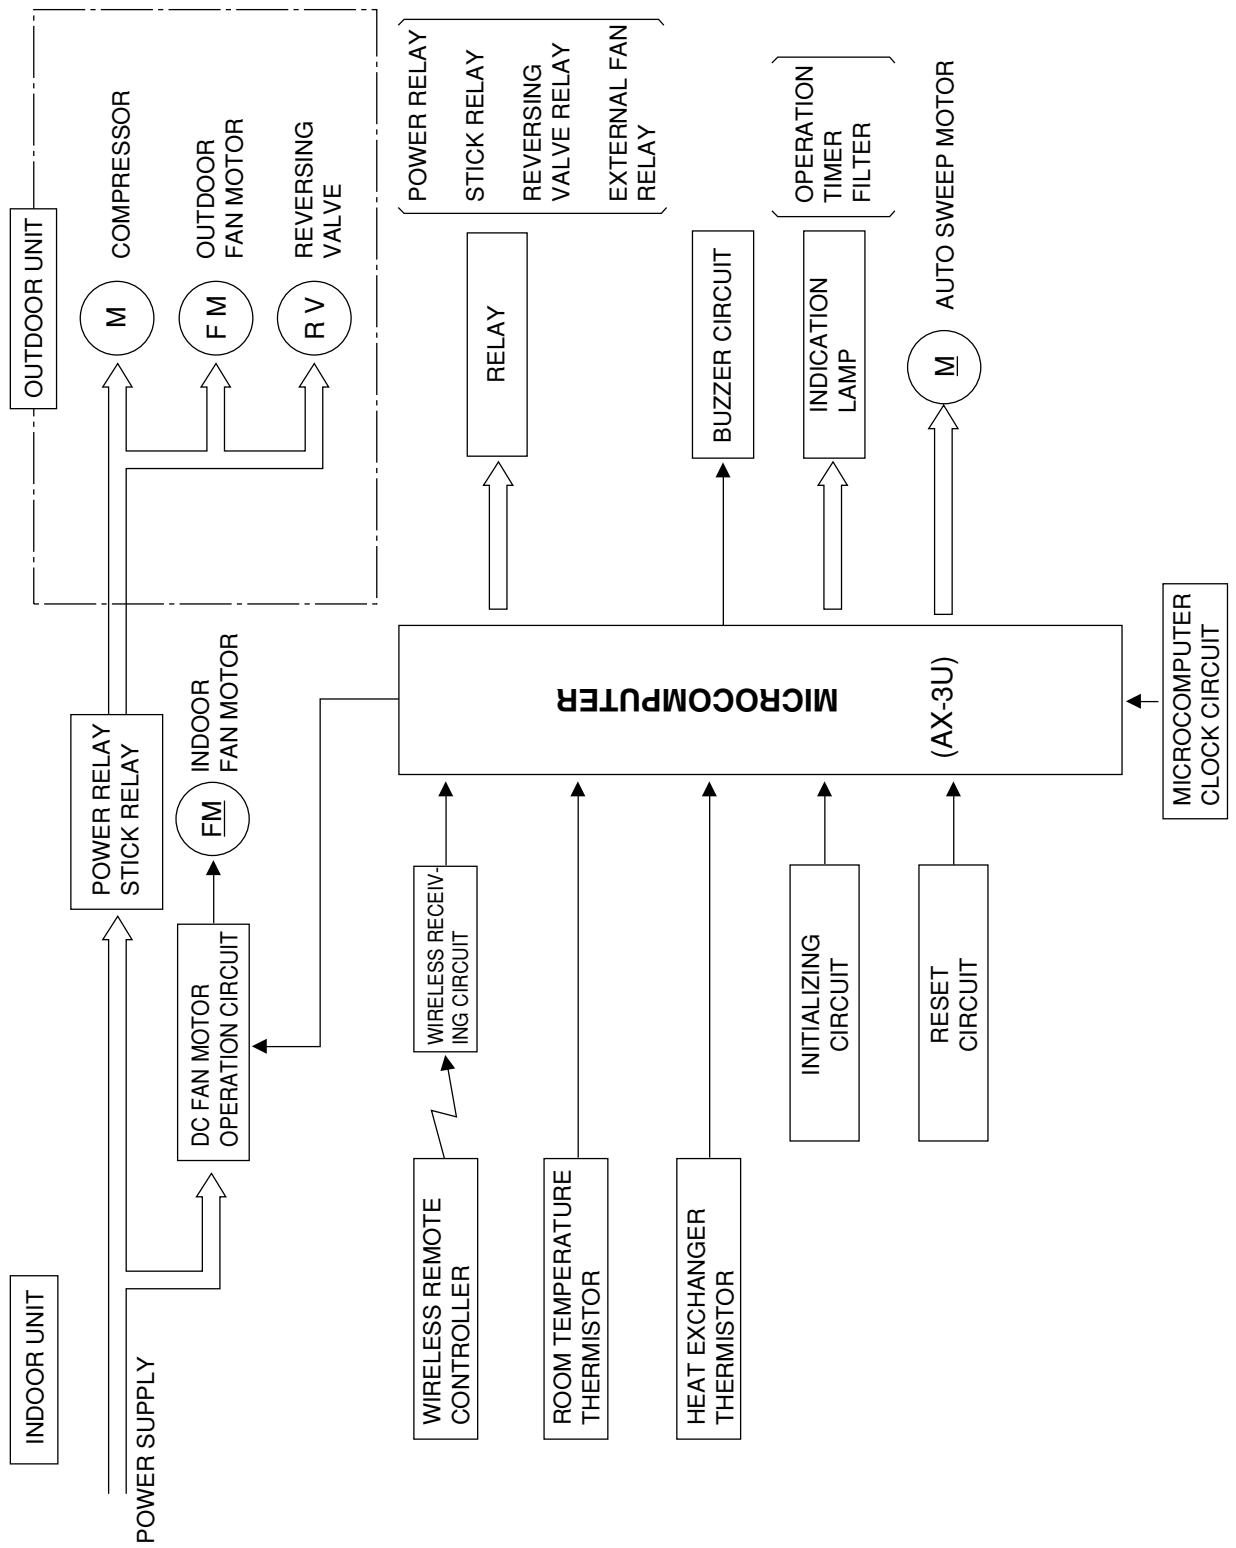

BASIC MODE

MODEL RAS-07GH4/09GH4/14GH4 // RAC-07GH4/09GH4/14GH4

No.	Operation mode	Fan	Cooling	Sensor dehumidification	Heating	Automatic														
1	Start/stop button, basic mode																			
2	Timer operation	OFF timer																		
		ON timer																		
		OFF ↔ ON timer																		
3	Circulation mode	Automatic	<ul style="list-style-type: none"> Operation in the previous circulation mode 	<ul style="list-style-type: none"> "HI", "MED", or "LO" operation is executed according to the thermostat signal. (Refer to "Thermostat operation".) 																
		HI	<ul style="list-style-type: none"> Operation in "HI" mode 	<ul style="list-style-type: none"> Same as on the left. 	<ul style="list-style-type: none"> "LO" and "Stop" are repeated according to the thermostat signal, independent of the setting. 	<ul style="list-style-type: none"> "HI", "MED", "LO", and "Stop" are repeated according to the thermostat signal and time. 	<ul style="list-style-type: none"> The "Automatic" speed mode for each operation mode is used independent of the setting. ("Week" at the time of "Sensor dehumidification".) 													
		MED	<ul style="list-style-type: none"> Operation in "MED" mode 	<ul style="list-style-type: none"> Same as on the left. 	<ul style="list-style-type: none"> "MED", "LO", and "Stop" are repeated according to the thermostat signal and time. 															
		LO	<ul style="list-style-type: none"> Operation in "LO" mode 	<ul style="list-style-type: none"> Same as on the left. 	<ul style="list-style-type: none"> "LO" and "Stop" are repeated according to the thermostat signal and time. 															
4	Thermostat operation	<ul style="list-style-type: none"> Only circulation with cut velocity is executed, independent of the thermostat signal. 	<p>(1) In case of "Automatic" mode</p> <p>(1) Strong</p> <p>Note:</p> <ul style="list-style-type: none"> The min. ON time of the power relay is 3 minutes, and the min. OFF time also is 3 minutes. <p>(2) In other modes than "Automatic" Same as above (but operation is made with the velocity set at the time of operation start).</p>	<p>(1) When the set temperature is lower than the room temperature.</p> <p>(2) Set temperature is higher than room temperature.</p> <p>Notes:</p> <ul style="list-style-type: none"> Forced operation by start/stop button ON is executed even with thermostat OFF. The room temperature 30 sec after operation start, minus 0.66 deg, becomes the set temperature. When the room temperature is 16°C or lower, 16°C becomes the set temperature. The other operations are the same as for (1). 	<p>Example for "HI" circulation mode</p> <table border="1"> <thead> <tr> <th>Air-blow mode</th> <th>(A)</th> <th>(B)</th> </tr> </thead> <tbody> <tr> <td>H</td> <td>L</td> <td>H</td> </tr> <tr> <td>L</td> <td>L</td> <td>L</td> </tr> <tr> <td>S</td> <td>S</td> <td>L</td> </tr> <tr> <td>Automatic</td> <td>L</td> <td>⊗L</td> </tr> </tbody> </table> <p>Notes:</p> <ul style="list-style-type: none"> The min. ON time of the power relay is 3 minutes, and the min. OFF time also is 3 minutes. In automatic circulation mode, "HI" in section (B) occurs only the first time. 	Air-blow mode		(A)	(B)	H	L	H	L	L	L	S	S	L	Automatic	L
Air-blow mode	(A)	(B)																		
H	L	H																		
L	L	L																		
S	S	L																		
Automatic	L	⊗L																		

5	Heating load reduction and Pd cut	<p>AIR BLOW CHANGE TO "H" FORCILY WHEN ENTERING "PD CUT 2" AIR BLOW CAN BE CHANGED BY REMOTE CONTROL AFTER TEMP. T7. AIR BLOW RETURNS TO THE SET SPEED AT T5.</p>
		<p>Reversing valve lock protection</p> <ul style="list-style-type: none"> All relays are stopped by low-temperature input. Not accepted during hot keep, during compressor stop, during defrosting and during forced 3 minutes. Accepted only during heating operation. Recovery at the time of stop by low-temperature input is reset recovery. The timer lamp flashes at the time of stop.

No.	Operation mode Control function	Fan	Cooling	Sensor dehumidification	Heating	Automatic
7	<ul style="list-style-type: none"> The set temperature after sleep shift in sensor dehumidification operation is limited by 16°C. 	<ul style="list-style-type: none"> The operation is switched OFF at the set time. 				<ul style="list-style-type: none"> Sleep operation is executed for each operation mode.
8	Preheating operation					<ul style="list-style-type: none"> At the time of heating operation mode, the same operation as for heating is executed.
9	Defrosting (including automatic fresh defrosting).					<ul style="list-style-type: none"> Defrosting of each operation mode is executed.

Notes:
 • 60 minutes after the sleep key is switched on, sleep operation is started.
 • When the sleep key is switched on during OFF timer operation, the OFF timer will be canceled.

• When the sleep key is switched on during OFF timer operation, the OFF timer will be cancelled.

• When the sleep key is switched on during ON after a timer reservation, sleep operation will be started.

Notes:
 • Even when the preheating signal is not given as input, heating operation is started when 3 minutes have passed for T.
 • Preheating operation is executed at the time of operation start and after completion of defrosting, and at all other times, there is no operation, independent of the preheating signal.

TA (Reverse cycle defrosting)	10 min. 1/3 min.
TB (Silencing period)	30 sec
TC (Cycle balancing time)	30 sec
TE (Defrosting prohibition time)	50 min. 1/3 min.

- For the time TE after start of heating operation, defrosting will not be executed even when the defrosting signal is given as input.
- When the reserve cycle defrosting TA has continued for the time shown in the table on the left, the operation advances to TB and TC independent of the defrosting signal.
- When the power relay becomes ON after expiration of the time TE, defrosting will be started immediately with input of the defrosting signal.
- Once defrosting has been completed, the defrosting signal is not accepted for the time TE.
- When a defrosting signal has been given as input at the time of stop by means of the start/stop switch or at the time of OFF timer count-up, defrosting is executed before operation stop.
- The defrosting signal is not accepted at the time of overload input.

Table 1 Specifications

Item	Automatic	Yes
Operation switching	Automatic	Yes
	Heating	Yes
	Fan	Yes
	Sensor dehumidification	Yes
	Cooling	Yes
Temporary switch	Yes (automatic)	
Service switch	Heating	NO
	Cooling	Yes
Nice temperature reservation	Yes	
Automatic fresh defrosting	Yes	
Defrosting	Yes	
Pd cut 1	Yes	
Pd cut 2	Yes	
Pd cut 3	Yes	
Heating load reduction	Yes	
External fan relay	Yes	
Reversing valve relay	Yes	
Reversing valve lock protection	Yes	
Sleep circuit	Yes	
Heater operation at the time of sensor dehumidification	No	
Automatic blowing direction	Yes	
Filter sign	Yes	
Wireless mode	Cooling/Heating	

Table 2 Sensor operation values

Item	ON temperature (Thermostat relay) (°C)	Cooling, Sensor dehumidification	RAS-07GH4/09GH4		RAS-14GH4	
			16	24	32	32.6
Thermostat operation	power relay (°C)	Heating	16	18.7		
			24	26.7		
			32	34.7		
	Differential (°C)			0.33		
				-		
				-		
Low-temperature defrosting	(T1)	ON (°C)	1.0			
		Reset (°C)	12.0			
Preheating		Reset (°C)	17.0			
		ON (°C)	15.0			
				-		
				-		
Pd cut 1	(T3)	ON (°C)	50.0		42	
		Reset (°C)	47.0		38	
Pd cut 2	(T6)	ON (°C)	63.0			
		Reset (°C)	57.0			
Pd cut 3	(T5) Fan Relay H → Original	ON (°C)	43.0			
		Reset (°C)	71.0			
		Reset (°C)	63.0			

Other detailed specifications

- When the room temperature rises within 3 minutes after thermostat OFF during cooling operation with automatic velocity, the blowing velocity changes in the order of S → L → H in the same way as at the time of thermostat ON.
- In case of Tele. control input during stopped ON timer, operation will be started at that time and the timer will be cleared.
- In case of Tele. control input during operation of the OFF timer, the operation will be stopped at that time and the timer will be cleared.
- Even when operation stop is executed at the time of outside fan OFF by overload, automatic fresh defrosting will not be executed.
- In case of switching to "Heating" during "Automatic" heating operation, the operation will be continued as it is when the thermostat is ON. 3 min delay will not be entered. However, the set room temperature and the blowing velocity will be according to the remote control signal. The same applies for switching from "Heating" to "Automatic" heating.
- In case of switching from "Sensor dehumidification" operation to "Cooling", as it is when the thermostat is ON. 3 min delay will not be entered. However, the set room temperature and the blowing velocity will be according to the remote control signal. The same applies for switching from "Cooling" to "Sensor dehumidification". The same also applies for "Automatic" sensor dehumidification, cooling "Sensor dehumidification", "Cooling".
- The filter sign lights after operation of the indoor fan for 100 hours. The time is cleared when power switch set to OFF and ON again.
- After entry into trouble mode (when the indication lamp is flashing), the rapid feed mode can not be changed.
- When operation by nice temperature reservation is executed during sleep operation, normal operation will be continued, and the advance time becomes the temperature difference between the set temperature without sleep shift and the room temperature.
- The 50 minutes of defrosting prohibition are counted from Thermostat ON after start/stop switch ON. When the thermostat is OFF at the time of start/stop switch ON, the 60 minutes will be counted from the time of thermostat ON. The initial OFF time is not counted. Counting starts when the thermostat becomes ON, and the count then continues even if the thermostat becomes OFF.
- In case of switching from "Heating" the reversing valve is held for 3 minutes.
- The defrosting signal is not accepted with overload input, and the operation becomes as shown below when the overload input disappears.
- (1) When previously the defrosting signal existed without overload input, defrosting will start immediately.
- (2) In cases other than the above, defrosting will be executed with a defrosting signal in the condition without overload input.

- Operation starts in advance so that the room temperature reaches the preset value at the set time.
- The operation time is obtained as follows depending on the room temperature when operation starts.

(1) Calculation method of the moved-up time.

Moved-up time (MT) = Moved-up time depending on the temperature difference (OT) + compensation time (HT).

MT is at least 1 minute if OT is not zero.

	Heating	Cooling
(MT)	00 ~ 60 min.	00 ~ 60 min.
(OT)	00 ~ 60 min.	00 ~ 60 min.
(HT)	-60 ~ 60 min.	-60 ~ 60 min.

Obtain OT (moved-up time depending on the temperature difference) from the table below.

Heating			Cooling		
Setting temp.	Room temp.	Time (min.)	Setting temp.	Room temp.	Time (min.)
00	01.00	00	00.00	02.00	00
01.25	03.00	10	02.25	05.00	15
03.25	07.00	20	05.25	08.00	30
07.25	10.00	30	08.25	11.00	45
10.25	13.00	40	11.25	-	60
13.25	16.00	50			
16.25	19.00	60			
19.25	22.00	60			
22.25	-				

* The preset temperature value shown above does not include any shift value.

(2) Compensation

- The "Attained" state is monitored and a "Not attained" check is done to revise the compensation time (HT).

"Attained" monitor

Continuously monitored during "NICE TEMPERATURE" operation.

(Heating)

When the room temperature < Set value + compensation shift, it is regarded to be "attained" and 5 minutes are reduced from the compensation time.

(Cooling)

When the room temperature < Set value + compensation shift, it's operated same as above.

"Not attained" check

Performed once when the "NICE TEMPERATURE" timer is completed.

(Heating)

When the room temperature < Set value + compensation shift +1°C, it is regarded to be "Not attained" and 5 minutes are added to the compensation time.

(Cooling)

When the room temperature > Set value + compensation shift +1°C, it's operated same as above.

* If the room temperature is within +1°C from the set value + compensation shift, compensation is not done.

Item	Specification	
	3-way	AUTO (Swing)
Air blowing direction control	<p>(55.0° in up direction)</p>	<p>* 90° in down direction 63° in up direction * Swing start direction</p>
	<p>Vertical positioning 90°C in down direction 10° in up direction</p>	<p>* 90° in down direction 50° in up direction * Swing start direction</p>
(When the operation switch is turned off Automatic shut operation)	<p>Vertical positioning 106°C in down direction 115° in up direction</p>	

- The air deflector control operation shown below is done when the swing switch is pressed or when the operation mode is changed.
- The air deflector control operation shown below is done when the operation switch is turned off.

Table 1 Specifications

Item	RAS-07/09/14GH4	
Operation switching	Automatic	Yes
	Heating	Yes
	Sensor dehumidification	Yes
	Cooling	Yes
	Fan	Yes
Temporary switch	Yes (automatic)	
Service switch	Cooling	Yes
Nice temperature reservation	Yes	
Defrosting	Yes	
Sleep circuit	Yes	
Heater operation at the time of sensor dehumidification	No	
Automatic blowing direction	Yes	
Filter sign	Yes	
Wireless mode	Heat and Cool wireless	

Table 2 Sensor operation values


Item	RAS-07/09/14GH4			
Thermostat operation	ON temperature (Thermostat relay power relay (°C))	Cooling, sensor dehumidification	16	16.6
			24	24.6
			32	32.6
	Differential (°C)	0.33		
Low-temperature defrosting	(T1)	ON (°C)	1.0	
		Reset (°C)	12.0	

Other detailed specifications


- When the room temperature starts to increase within 3 minutes after thermo OFF in "cooling" and fan speed "AUTO", the fan speed changes L → M → H as when thermo ON.
- If "cooling" is selected during "sensor dehumidification" operation the operation continues as it is with the thermo ON. The 3 minutes delay is not started. The set temperature and fan speed depend on the remote control signal. It is same for "cooling" --- "sensor dehumidification". It is same for "AUTO" sensor dehumidification cooling "sensor dehumidification" "cooling".
- The filter sign lights after 100 hours operation of the room fan. The lamp goes out when the POWER SWITCH set to OFF and ON again.
- After the failure mode is started (indicator lamp flickering), rapid mode changing cannot be done.
- If the operation is made by the nice temperature reservation during the sleep operation, the normal operation continuously occurs, and for the advance time, the temperature difference between the set temperature without sleep shift and "room temperature" is used.

REFRIGERANT CYCLE DIAGRAM


MODEL RAS-07GH4/RAC-07GH4

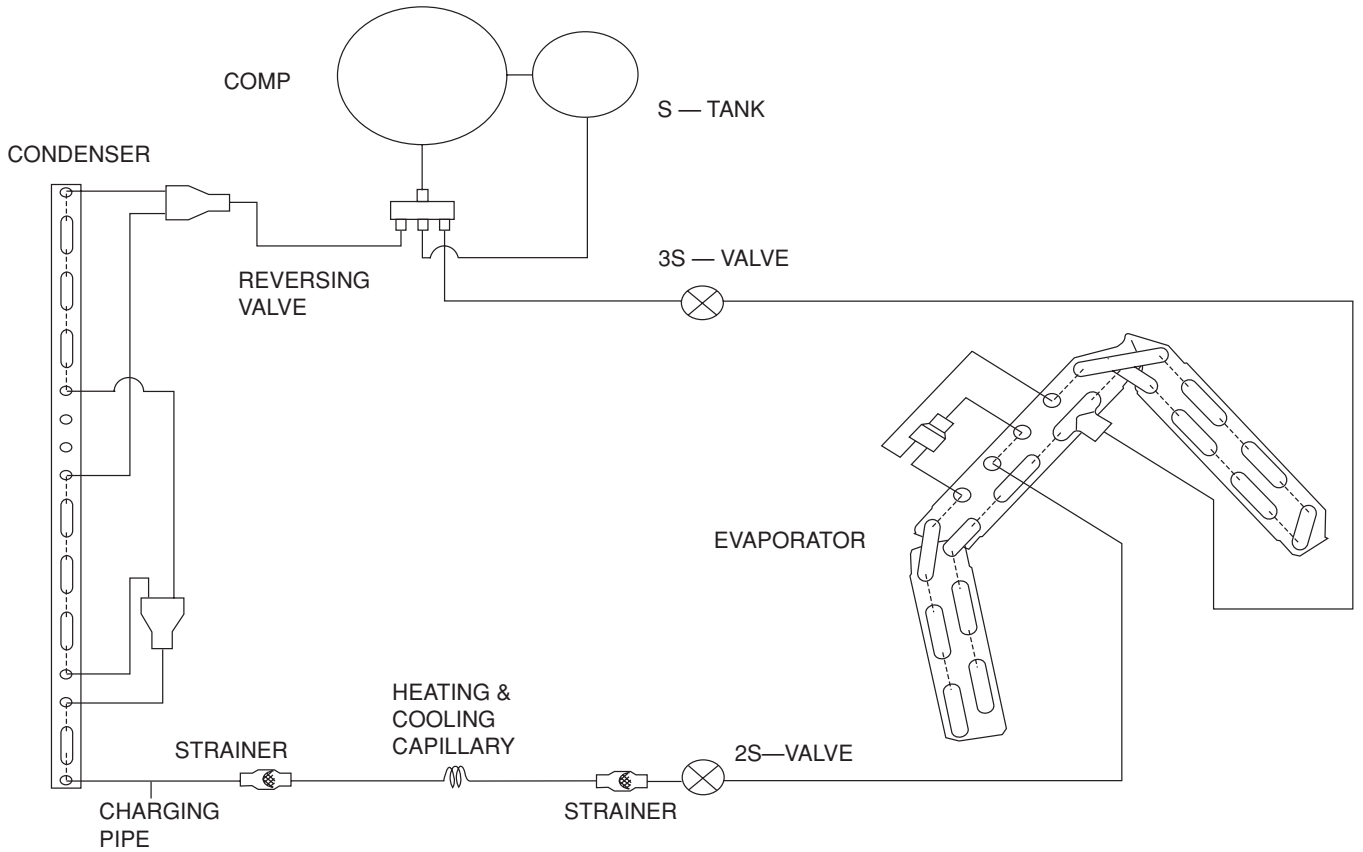

MODEL RAS-09GH4/RAC-09GH4

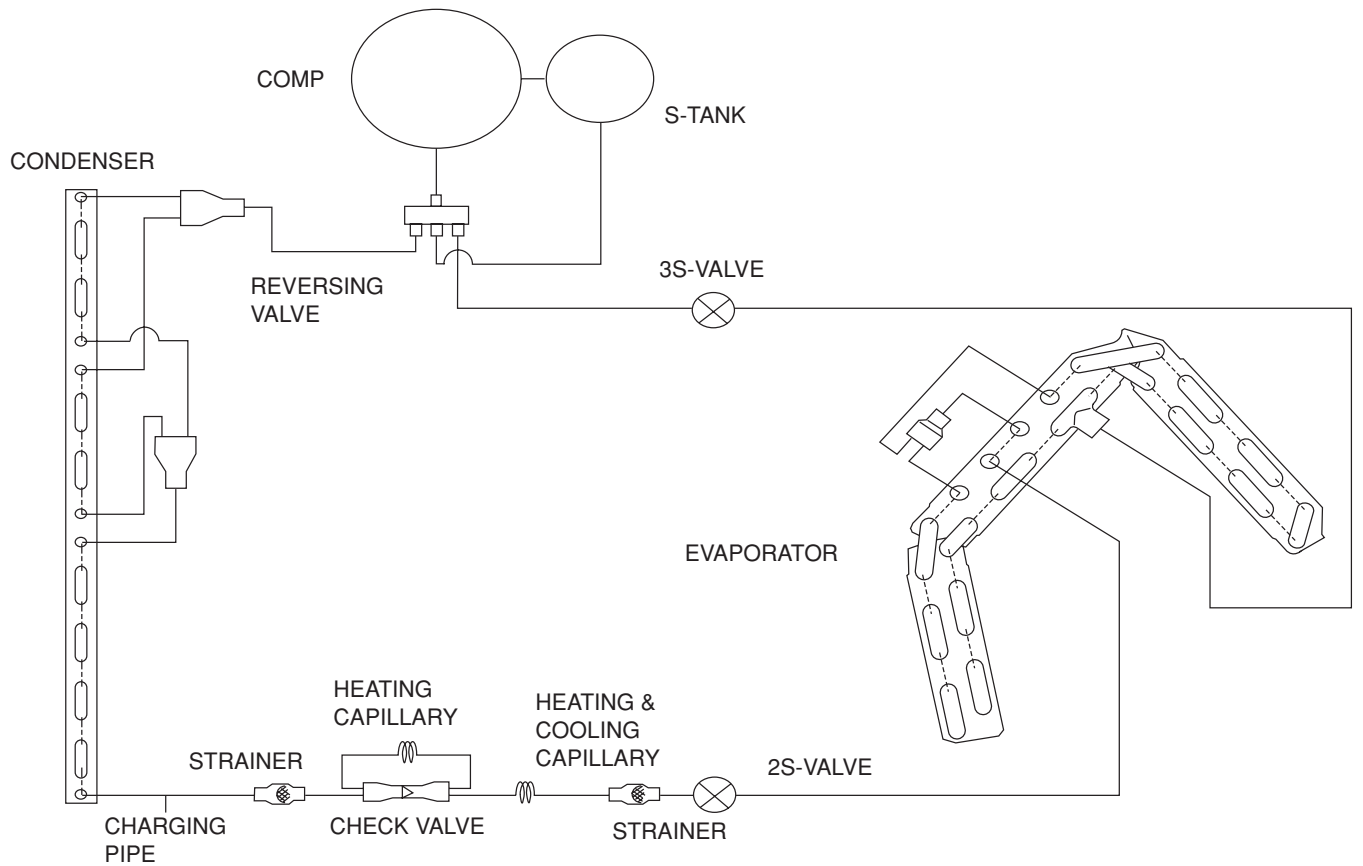

MODEL RAS-09GH4/RAC-09GH4

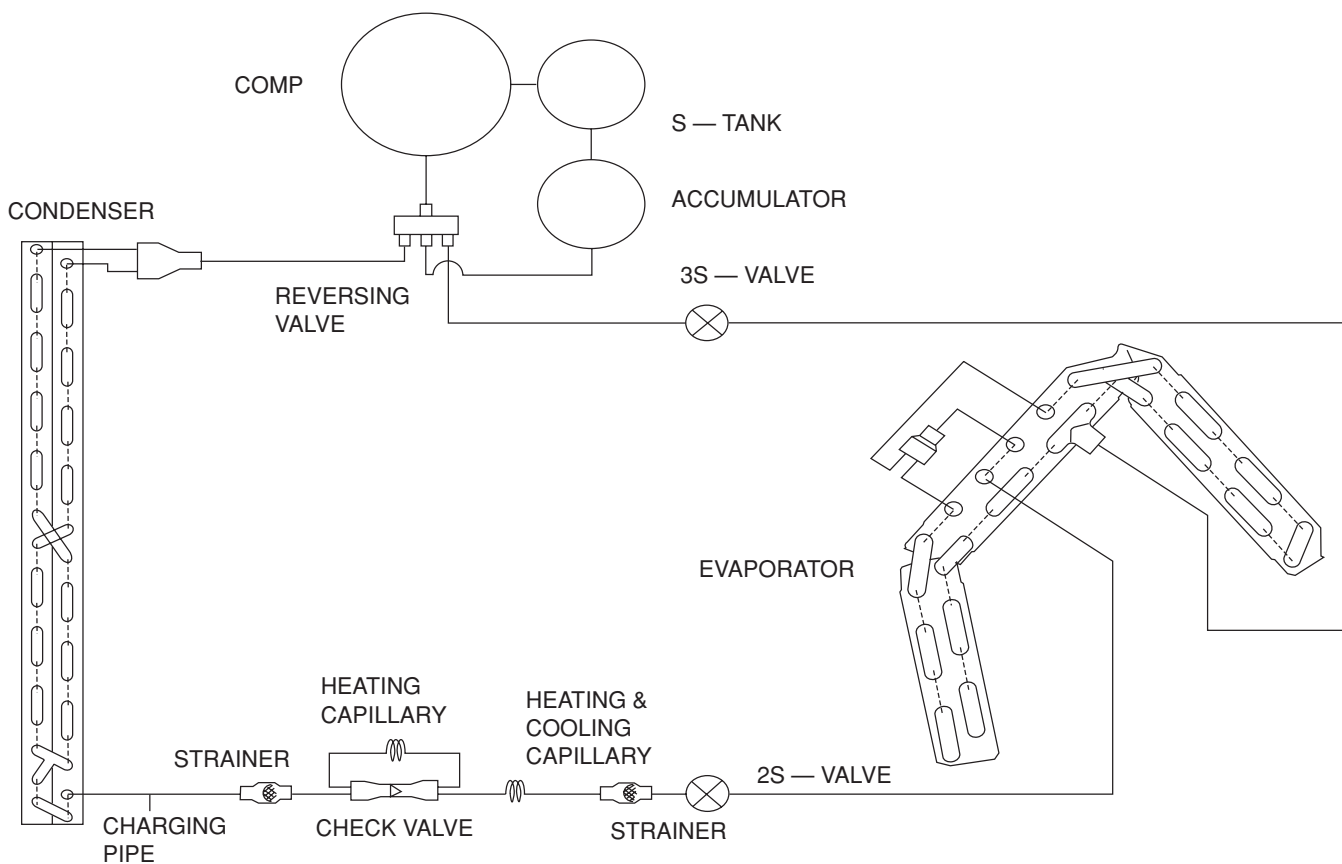

DESCRIPTION OF MAIN CIRCUIT OPERATION

1. ON / OFF

The "ON / OFF" and "Timer reserve button" and "Sleeping" function independently. Their operations are shown in Fig. 1-1.



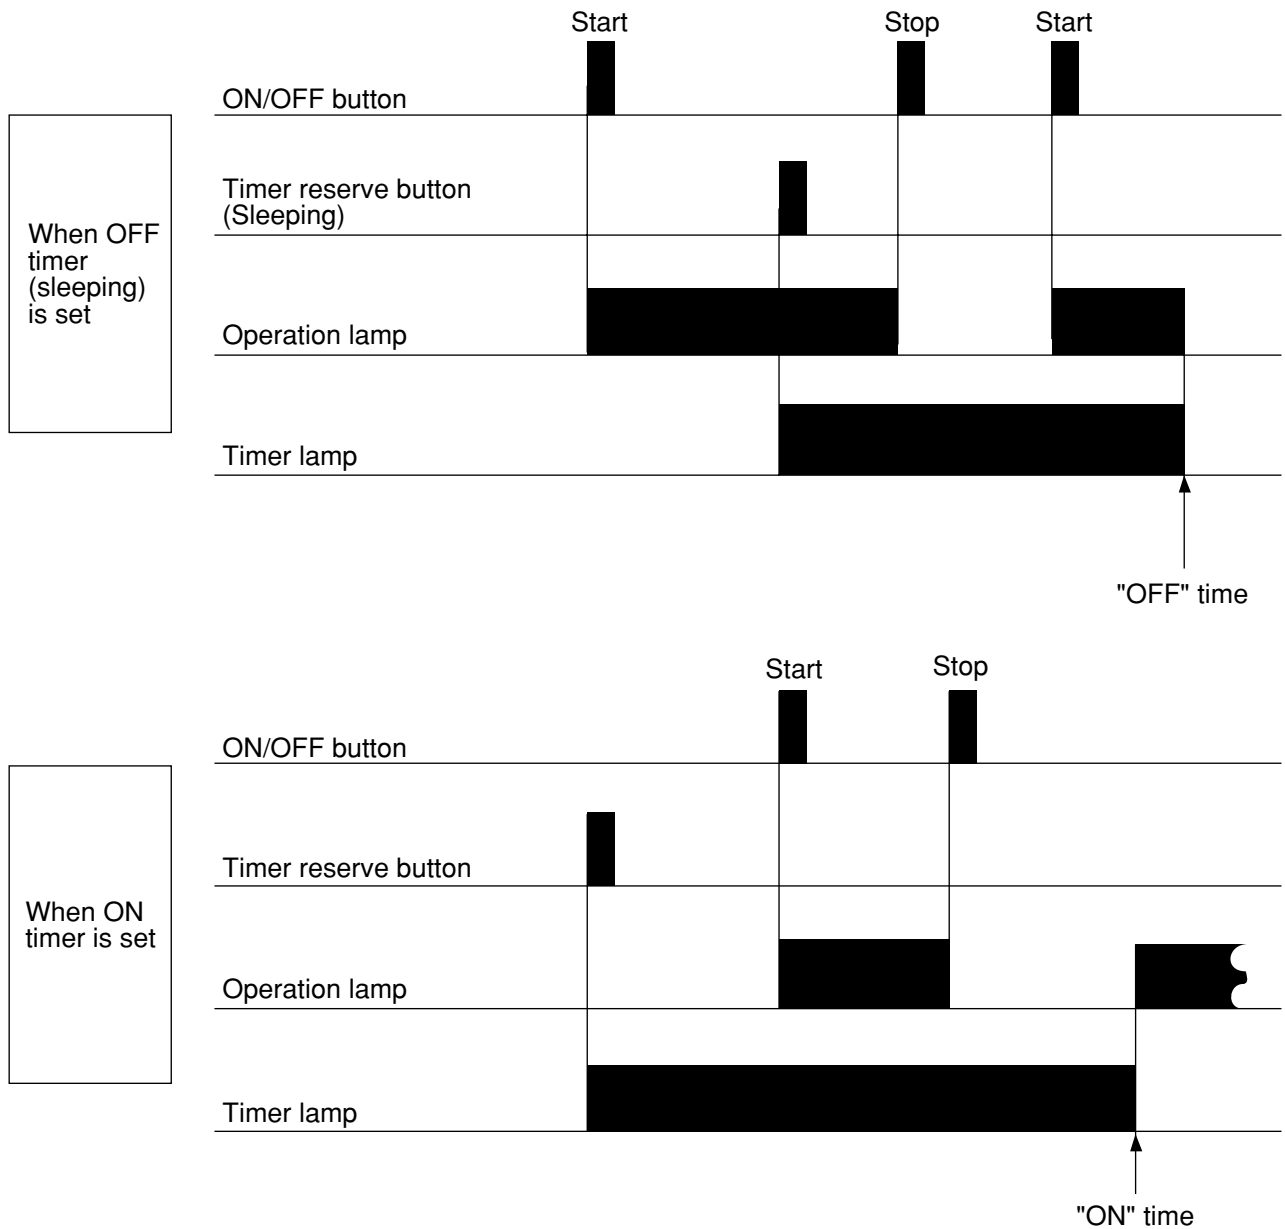



Fig. 1-1 Timer operation

2. Reset Circuit

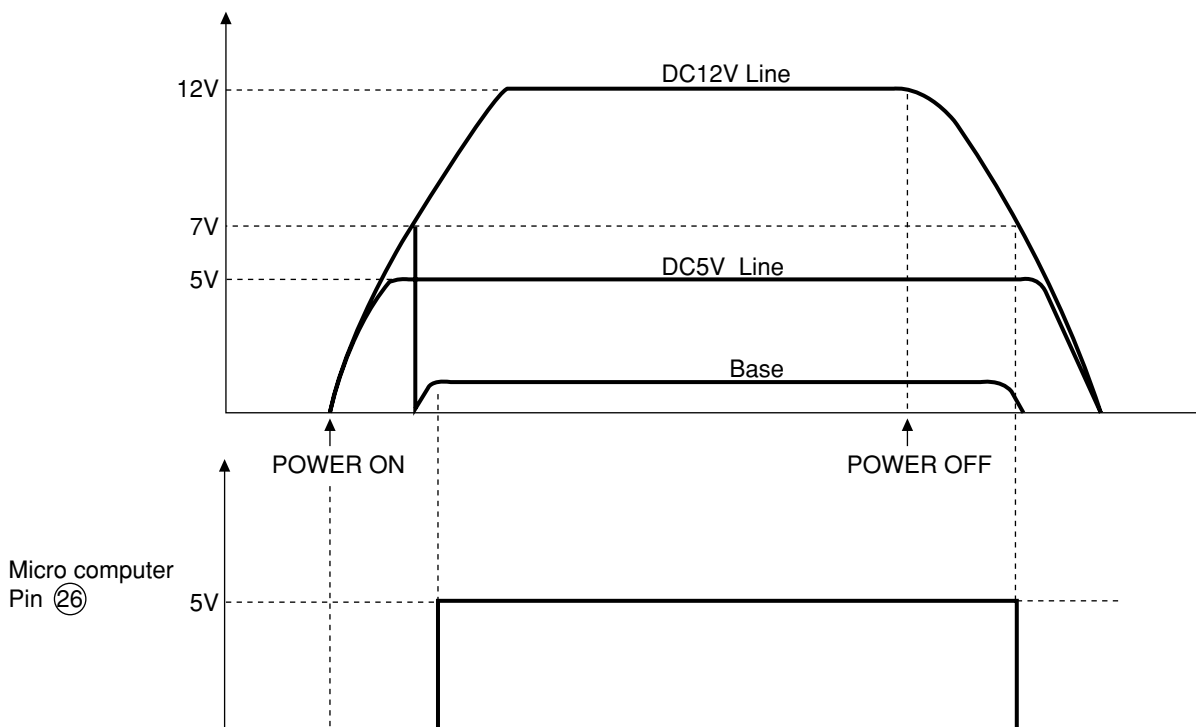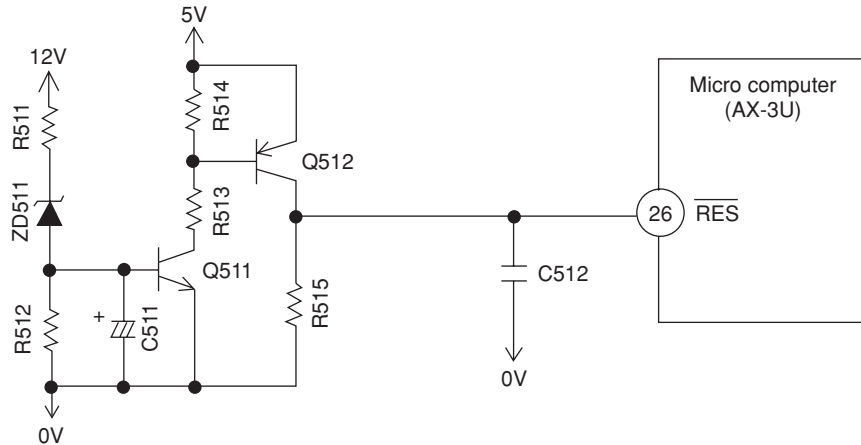

- The reset circuit is used to reset the program to its initial settings when the power is turned on or when the power is recovered after a power failure.
- The micro computer is reset when the reset input is “Hi”, and operation is possible when the reset input is “Lo”.
- The waveforms at each point when the power is turned on and off are shown in the diagrams.
- When the power is turned on, the voltages of the DC 12V line and DC 5V lines are increased. When the voltage of DC 12V lines reaches about 7V, ZD511 is turned ON, the potential of Q511’s base rises and Q511 is turned ON. Since Q511’s collector is set to “LO” at this time, Q512 is turned OFF and the reset input of the micro computer is set to “Lo”. The DC 5V line voltage has already become 5V at this time and the micro computer starts operation.
- When the power is turned OFF, the voltage of the DC 12V line decreases. When it becomes about 7V, ZD511 is turned OFF, then Q511 is turned OFF, Q512 is turned ON the reset input of the micro computer is set to “Hi” and the micro computer is set to the reset mode.


3. Buzzer Circuit

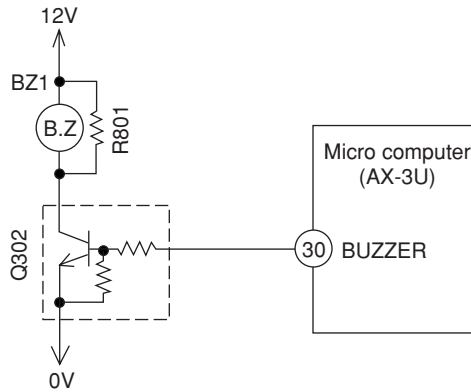


When the buzzer is to be activated, buzzer output pin ⑩ of the micro computer alternates between ON and OFF repeatedly at 4kHz and Q302 is turned ON/OFF accordingly. A 4kHz voltage is applied to the buzzer and the diaphragm of the buzzer vibrates to output 4kHz sound.

4. Initial setting (IC301)

The pre-heating operation start value, ratings of the compressor, maximum rotation speed, etc. are preset in the micro computer.

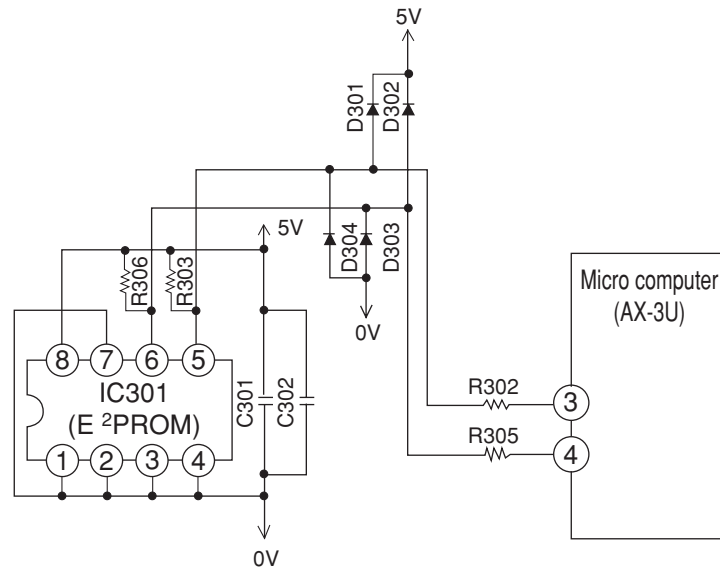


5. Receive circuit

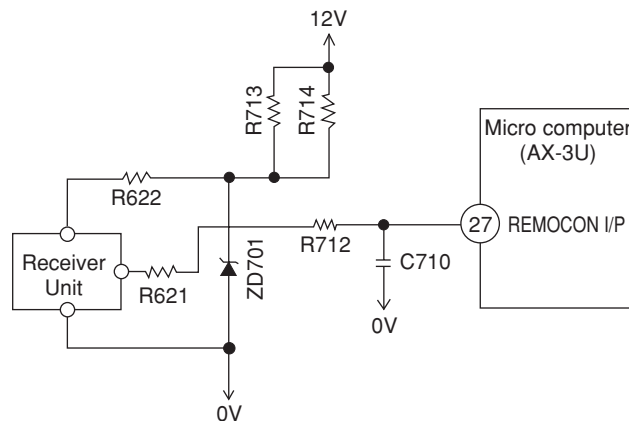

Infrared signals from the wireless remote controller are received by the light receiving unit and output after being amplified and shaped.

6. Service Operation Circuit

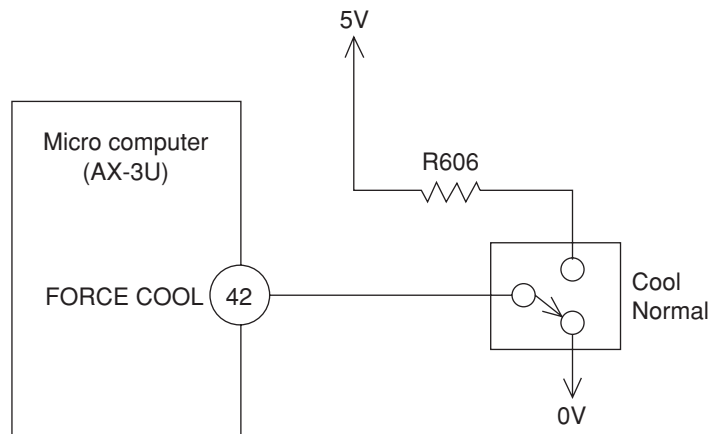

- Use the service switch to select “Cooling” temporarily when the interior electric equipment has troubled.
- Setting the switch to “Cooling” causes continuous cooling room temperature control. To control the room temperature, turn on and off the disconnect switch. To protect the compressor, wait at least 3 minutes before turning on again.
- The fan speed is “MED”.
- Does not operate is 12V is not generated in the control circuit.
- When the service switch is used for operation, each change switch is overridden.
- Setting the service switch to “Cooling” turns on the “Stick relay” and “Power relay”.

AUTO SWING FUNCTION

INPUT SIGNAL	PRESENT CONDITION		OPERATING SPECIFICATION	REFERENCE
	OPERATION	OPERATION MODE AIR DEFLECTOR		
KEY INPUT	STOP	EACH MODE	ONE SWING (CLOSING AIR DEFLECTOR) ① DOWNWARD ② UPWARD	INITIALIZE AT NEXT OPERATION.
	DURING OPERATION	AUTO COOL COOL FAN AUTO DRY DRY	DURING ONE SWING	STOP AT THE MOMENT.
			STOP	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD
INTERNAL FAN ON (THERMO. ON) INTERNAL FAN OFF (THERMO. OFF)	DURING OPERATION	CIRCULATOR	DURING SWINGING	STOP AT THE MOMENT.
			STOP	START SWINGING ① DOWNWARD ② UPWARD ③ DOWNWARD
			TEMPORARY STOP	STOP AT THE MOMENT. START SWING AGAIN.
MAIN SWITCH ON	STOP	COOL FAN DRY CIRCULATOR	DURING SWINGING	STOP SWINGING TEMPORARILY. (SWING MODE IS CLEARED IF SWING COMMAND IS TRANSMITTED DURING TEMPORARY STOP.)
			STOP DURING ONE SWING	INITIALIZE ① DOWNWARD ② UPWARD
MAIN SWITCH OFF	DURING OPERATION	EACH MODE	STOP DURING ONE SWING	INITIALIZE ① DOWNWARD
			DURING SWINGING DURING INITIALIZING	ONE SWING (CLOSING AIR DEFLECTOR) ① DOWNWARD ② UPWARD
CHANGE OF OPERATION	DURING OPERATION	EACH MODE	STOP	INITIALIZING CONDITION OF EACH MODE.
			DURING SWINGING	STOP SWINGING AND MODE BECOMES INITIALIZING CONDITION.

SERVICE CALL Q & A

Cooling operation

Q1 While cooling, the compressor sometimes stops abruptly.

A1 Check whether frost sticks on the heat exchanger of indoor unit or not. Wait for 3 – 4 minutes until the frost melts.

If cooling is performance when the room temperature is low, frost may stick on the heat exchanger of indoor unit.

Dehumidifying operation

Q2 The fan speed does not change during a dehumidifying operation.

A2 The fan speed is always LO at a dehumidifying operation.

Q3 Cold air comes out during a dehumidifying operation.

A3 To improve the dehumidification efficiency, LO fan speed operation is performed. Therefore the air is cold. This is not a trouble.

Q4 The operation does not stop even by raising the room temperature setting of remote control at a dehumidifying operation.

A4 At a dehumidifying operation, the actual room temperature is compared with the room temperature setting when starting the operation and the operation is as follows.

1) When actual room temperature > room temperature setting.

The operation is according to the room temperature setting on the remote controller.

2) * When actual room temperature < room temperature setting

Regardless of the room temperature setting, the temperature is automatically set slightly lower than the room temperature.

In this case, the status is as 2) and, therefore, the operation by the room temperature control is impossible. Turn off the On / OFF switch, set the room temperature to a new value and turn on the operation by the On / Off switch.

Q5 In the dehumidifying mode, the temperature set by remote controller is set slightly higher than the room temperature but the operation starts.

A5 This is the status in 2) of (A4). The temperature is set a little lower than the room temperature to carry out a dehumidifying operation as far as possible.

Heating operation

Q6 Air does not come out when starting a heating operation.

A6 It is not a trouble. The fan is stopped to avoid cold wind.

When starting the operation, the heat exchanger is cold and, therefore, the fan is stopped.
Wait 2–3 minutes.

Q7 Air does not come out sometimes while in a heating operation.

A7 Defrosting is on. Wait for 5–10 minutes until the outdoor unit is defrosted.

Q8 The fan speed is set to "HI" or "MED" but the heating operation starts with a LO fan speed.

A8 The heating operation starts with a LO fan speed for 30 seconds. If the fan speed is set to HI, the operation starts with LO fan speed, followed by MED fan speed for 30 seconds and then by HI fan speed.

Q9 The operation stops during a heating operation while the room temperature is set at "30".

A9 If a heating operation is performed when the exterior temperature is high, the operation may stop to protect the equipment.

Q10 The outdoor fan does not move at a heating operation by the service switch.

A10 It is not a trouble. When heating, the outdoor fan is stopped to avoid excessive pressure rise.

Auto fresh defrosting

Q11 Heating has been turned off by the main operation but the "Hot keep lamp" lights and the outdoor unit operations.

A11 "Auto fresh defrosting" operates. When stopping the operation, whether the outdoor unit is frosted or not is checked and, if in the affirmative, defrosting is performed before stopping the operation.

Automatic operation

Q12 How is the automatic operation mode determined?

A12 According to the room temperature, cooling or dehumidifying operation is automatically selected.

Cooling:
When room temperature is approx. 27°C or higher

Dehumidifying:
When room temperature is between approx. 23°C and 27°C

Heating:
When room temperature is approx. 23°C or lower

Q13 At an automatic operation, changing the fan speed change switch does not vary the fan speed.

A13 The fan speed is automatically determined.

Q14 The room temperature cannot be controlled at an automatic operation.

A14 It is automatically set as follows.

At cooling: Set at 27°C

At dehumidifying:
Set slightly lower than room temperature

The room temperature setting can be raised 3°C by "Λ" or lowered 3°C by "V".

When changing the room temperature setting in an automatic operation, the next automatic operation mode is determined by new room temperature setting. If, for example, the room temperature setting is 2°C lowered for example, the operation mode is as follows.


Cooling : When room temperature is approx. 25°C or higher

Dehumidifying :
When room temperature is between approx. 21°C and 25°C

Heating :
When room temperature is approx. 21°C or lower


Common, etc.

Q15 There is a difference between the room temperature setting and actual room temperature.




A15 There may be a difference between the room temperature setting and actual room temperature on account of the room structure, air flow, etc.
If there is a difference from the room temperature, adjust the set temperature to keep living space at a comfortable temperature.

Q16 What will happen if the time setting is changed while in a timer operation?



A16 A timer operation is performed until the time after changing the time setting.

Q17 In the "Automatic fan speed" mode, the indoor fan changes to MED and LO fan speed.




A17 It is not a trouble. The cold wind preventive function operates.

Set the temporary switch normal.


Nice temperature reservation

Q18 In case of "ON" timer, the operation does not start at a preprogrammed time but a little earlier.



A18 The "Nice temperature reservation" functions. The operation starts earlier so the room temperature will be as set at a programmed time.
The operation starts at most 60 minutes before a preprogrammed time.


Q19 The time to start an operation is irregular while preprogramming at the same time.



A19 The "Nice temperature reservation" operates. The starting time depends on the room load.

Q20

- 1) When the "Automatic" operation mode is selected, "Automatic" does not change by pressing the fan speed select button.
- 2) The room temperature setting is not displayed.
- 3) Pressing the room temperature control button develops transmit mark "📶" and sounds a receive sound but does not display the room temperature setting.




A20

- 1) When the operation mode is "Automatic", the fan speed is automatically fixed to "Automatic".
- 2) At an "Automatic" operation, the room temperature setting is not displayed. The room temperature is automatically set as follows.
At cooling
Set at 27°C.
At dehumidifying
Set to a temperature slightly lower than the room temperature.
At heating
Set at 23°C.
- 3) At an "Automatic" operation, the room temperature setting is not displayed. However, every pressing "Λ" or "V" button changes 1°C within the range of:
27±3°C when cooling,
23±3°C when heating.

The room temperature sensing thermistor in the indoor unit detects the room temperature and, according to the particular temperature, automatically performs "Cooling" or "Dehumidifying" operation. The value indicated not at an "Automatic" but manual operation is not the actual room temperature but the room temperature setting.

Q21

When the room temperature setting is "16", pressing the room temperature control button "V" causes no transmission. At "32", pressing "Λ" causes no transmission either.




A21

The room temperature is settable within the range of 16 - 32 and not beyond.

Q22

The timer cannot be set.




A22

Is the current time set?
The timer cannot be set unless the clock is adjusted correctly.

Q23

The current time disappears soon.




A23

The current time disappears soon and the timer setting indication takes a precedence.

When setting the current time, its indication blinks for approximately 3 minutes.

Q24

In spite of timer “Preprogram”, the time setting is extinguished.




A24

Isn't the time over the pre-programmed time?
As soon as the pre-programmed time is reached, the time setting disappears.

Q25

After selecting a “Dehumidifying” operation mode, the fan speed mode remains “LO” fan speed”.




A25

At a “Dehumidifying” operation, the “LO” fan speed” is forcibly selected.

TROUBLE-SHOOTING

No cooling or heating

Operates by setting the service switch to forced cooling?




Return the service switch to "Normal".




Set the remote controller to an operation status and press the ON/OFF button.




Is the level LO (approx. 0.5V) between driver IC701 pin ⑪ power relay and 0V?




Is the level LO (approx. 0.5V) between driver IC701 pin ⑩ stick relay and 0V?



Is voltage normal between Blue and Red of the CN6? *3



Is the level LO (approx. 0.5V) between driver IC 701 pin ⑬ (Reversing valve relay) and 0V at heating operation?







No operation at all.



*1 Before using the service switch, disengage and engage the plug. Do not operate the remote controller.

Check the following parts and replace if faulty	
1) Current fuse	Remove and check the continuity across.
2) Varistor	Check whether the appearance is blackish or not.
3) Power switch	The resistance must be infinite. *2 Check the continuity between contacts.
4) Thermal fuse for terminal board	(96°C) Continuity across → If there is no continuity, also check the fan motor and capacitor.
5) Thermal fuse for Terminal board	(102°C) Continuity across → If there is no continuity, check the electric parts and replace if abnormal.


*2 Before checking the varistor, detach a terminal.

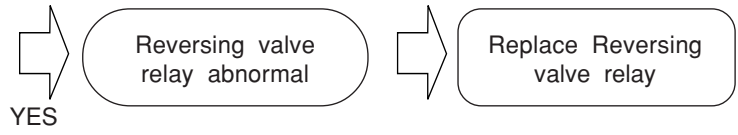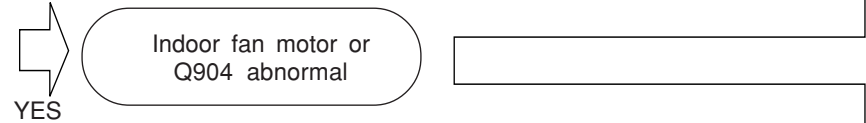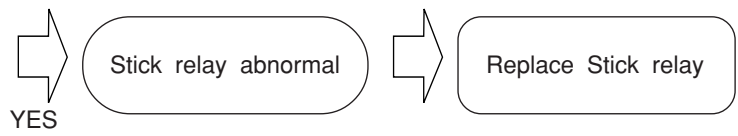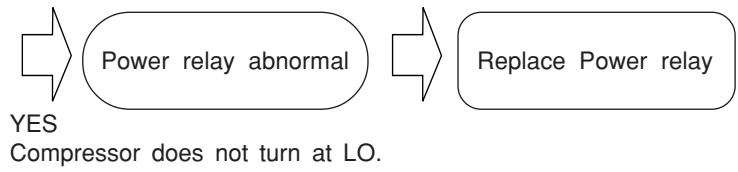

Is voltage normal (approx. 280 ~ 300V) at out put side of the DB201?

YES

Check the circuit board of control board

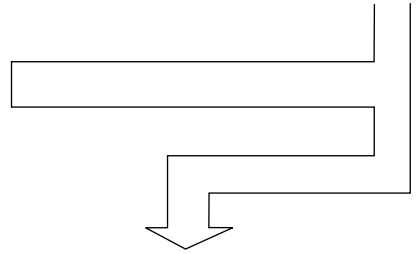

NO

Check the circuit board inside parts. When checking, carry out a self diagnosis by indoor indicator lamp.

*4 Wait for 3 minutes before forced re-operation by the service switch.

Replace faulty part


*3

CN6 BLUE-RED (V)						
Fan Speed	RAS-07GH4 RAC-07GH4		RAS-09GH4 RAC-09GH4		RAS-14GH4 RAC-14GH4	
	Cool	Heat	Cool	Heat	Cool	Heat
HI	20.8	20.8	21.3	23.0	27.0	28.4
MED	15.6	17.9	18.0	19.7	20.9	23.6
LO	12.5	15.0	13.7	16.6	15.8	19.3
SLEEP MODE	11.0	15.0	11.9	16.6	13.0	19.3

PARTS LIST AND DIAGRAM

INDOOR UNIT

MODEL : RAS-07GH4 / RAS-09GH4 / RAS-14GH4

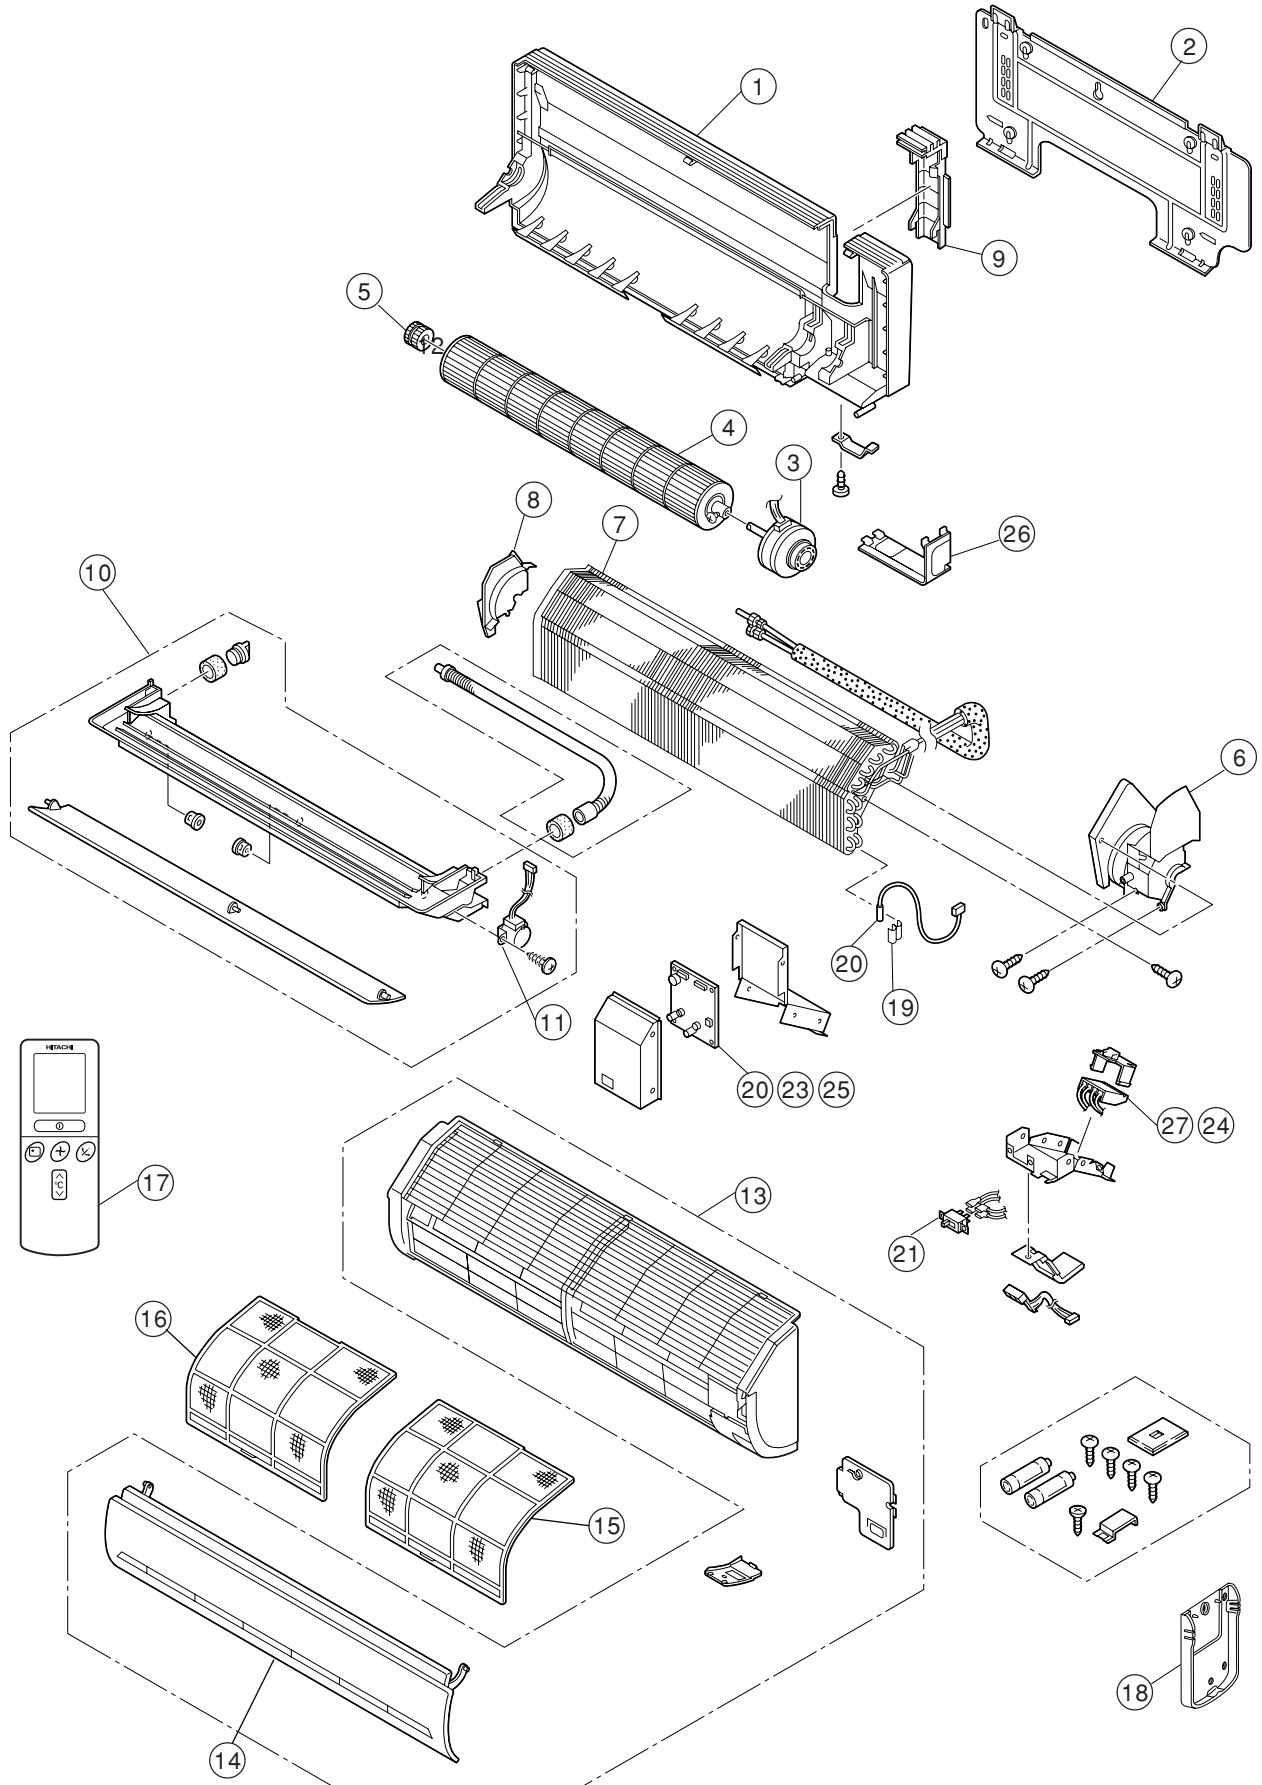

MODEL RAS-07GH4

NO.	PART NO. RAS-07GH4	Q'TY / UNIT	PARTS NAME
1	HWRAS-25YH4 901	1	CABINET
2	HWRAS-25YH4 940	1	MOUNTING PLATE
3	PMRAS-07GH4 001	1	FAN MOTOR
4	HWRAS-25YH4 907	1	TANGENTIAL FAN
5	HWRAS-25YH4 908	1	P-BEARING ASSY
6	HWRAS-25YH4 910	1	FAN MOTOR BASE
7	PMRAS-07GH4 002	1	CYCLE ASSY
8	HWRAS-25YH4 909	1	BEARING COVER
9	HWRAS-25YH4 914	1	PIPE SUPPORT
10	HWRAS-25YH4 926	1	DRAIN PAN ASSY
11	HWRAS-25YH4 929	1	AUTO SWEEP MOTOR
13	HWRAS-25YH4 933	1	FRONT COVER ASSY
14	HWRAS-25YH4 936	1	FRONT PANEL
15	HWRAS-25YH4 937	1	AIR FILTER (R)
16	HWRAS-25YH4 938	1	AIR FILTER (L)
17	PMRAS-51CHA1 011	1	REMOTE CONTROL ASSEMBLY
18	PMRAS-10C3M 003	1	REMOTE CONTROL SUPPORT
19	PMRAS-10C8M 003	1	THERMISTOR SUPPORT
20	PMRAS-07CH2 012	1	THERMISTOR
21	HWRAS-25YH4 920	1	POWER SWITCH
22	PMRAS-07GH4 003	1	P.W.B (MAIN)
23	PMRAS-07GH4 004	1	P.W.B (POWER SW SUPPLY)
24	HWRAS-25YH4 916	1	TERMINAL BOARD (THERM-FUSE)
26	HWRAS-25YH4 939	1	LOW COVER
27	HWRAS-25YH4 917	1	TERMINAL BOARD

MODEL RAS-09GH4

NO.	PART NO. RAS-09GH4	Q'TY / UNIT	PARTS NAME
1	HWRAS-25YH4 901	1	CABINET
2	HWRAS-25YH4 940	1	MOUNTING PLATE
3	PMRAS-07GH4 001	1	FAN MOTOR
4	HWRAS-25YH4 907	1	TANGENTIAL FAN
5	HWRAS-25YH4 908	1	P-BEARING ASSY
6	HWRAS-25YH4 910	1	FAN MOTOR BASE
7	PMRAS-07GH4 002	1	CYCLE ASSY
8	HWRAS-25YH4 909	1	BEARING COVER
9	HWRAS-25YH4 914	1	PIPE SUPPORT
10	HWRAS-25YH4 926	1	DRAIN PAN ASSY
11	HWRAS-25YH4 929	1	AUTO SWEEP MOTOR
13	HWRAS-25YH4 933	1	FRONT COVER ASSY
14	HWRAS-25YH4 936	1	FRONT PANEL
15	HWRAS-25YH4 937	1	AIR FILTER (R)
16	HWRAS-25YH4 938	1	AIR FILTER (L)
17	PMRAS-51CHA1 011	1	REMOTE CONTROL ASSEMBLY
18	PMRAS-10C3M 003	1	REMOTE CONTROL SUPPORT
19	PMRAS-10C8M 003	1	THERMISTOR SUPPORT
20	PMRAS-07CH2 012	1	THERMISTOR
21	HWRAS-25YH4 920	1	POWER SWITCH
22	PMRAS-09GH4 001	1	P.W.B (MAIN)
23	PMRAS-07GH4 004	1	P.W.B (POWER SW SUPPLY)
24	HWRAS-25YH4 916	1	TERMINAL BOARD (FUSE)
26	HWRAS-25YH4 939	1	LOW COVER
27	HWRAS-25YH4 917	1	TERMINAL BOARD


MODEL RAS-14GH4

NO.	PART NO. RAS-14GH4	Q'TY / UNIT	PARTS NAME
1	HWRAS-25YH4 901	1	CABINET
2	HWRAS-25YH4 940	1	MOUNTING PLATE
3	PMRAS-07GH4 001	1	FAN MOTOR
4	HWRAS-25YH4 907	1	TANGENTIAL FAN
5	HWRAS-25YH4 908	1	P-BEARING ASSY
6	HWRAS-25YH4 910	1	FAN MOTOR BASE
7	PMRAS-07GH4 002	1	CYCLE ASSY
8	HWRAS-25YH4 909	1	BEARING COVER
9	HWRAS-25YH4 914	1	PIPE SUPPORT
10	HWRAS-25YH4 926	1	DRAIN PAN ASSY
11	HWRAS-25YH4 929	1	AUTO SWEEP MOTOR
13	HWRAS-25YH4 933	1	FRONT COVER ASSY
14	HWRAS-25YH4 936	1	FRONT PANEL
15	HWRAS-25YH4 937	1	AIR FILTER (R)
16	HWRAS-25YH4 938	1	AIR FILTER (L)
17	PMRAS-51CHA1 011	1	REMOTE CONTROL ASSEMBLY
18	PMRAS-10C3M 003	1	REMOTE CONTROL SUPPORT
19	PMRAS-10C8M 003	1	THERMISTOR SUPPORT
20	PMRAS-07CH2 012	1	THERMISTOR
21	HWRAS-25YH4 920	1	POWER SWITCH
22	PMRAS-14GH4 001	1	P.W.B (MAIN)
23	PMRAS-07GH4 004	1	P.W.B (POWER SW SUPPLY)
24	HWRAS-25YH4 916	1	TERMINAL BOARD (FUSE)
26	HWRAS-25YH4 939	1	LOW COVER
27	HWRAS-25YH4 917	1	TERMINAL BOARD (2P)

PARTS LIST AND DIAGRAM

INDOOR UNIT

MODEL : RAC-07GH4 / RAC-09GH4

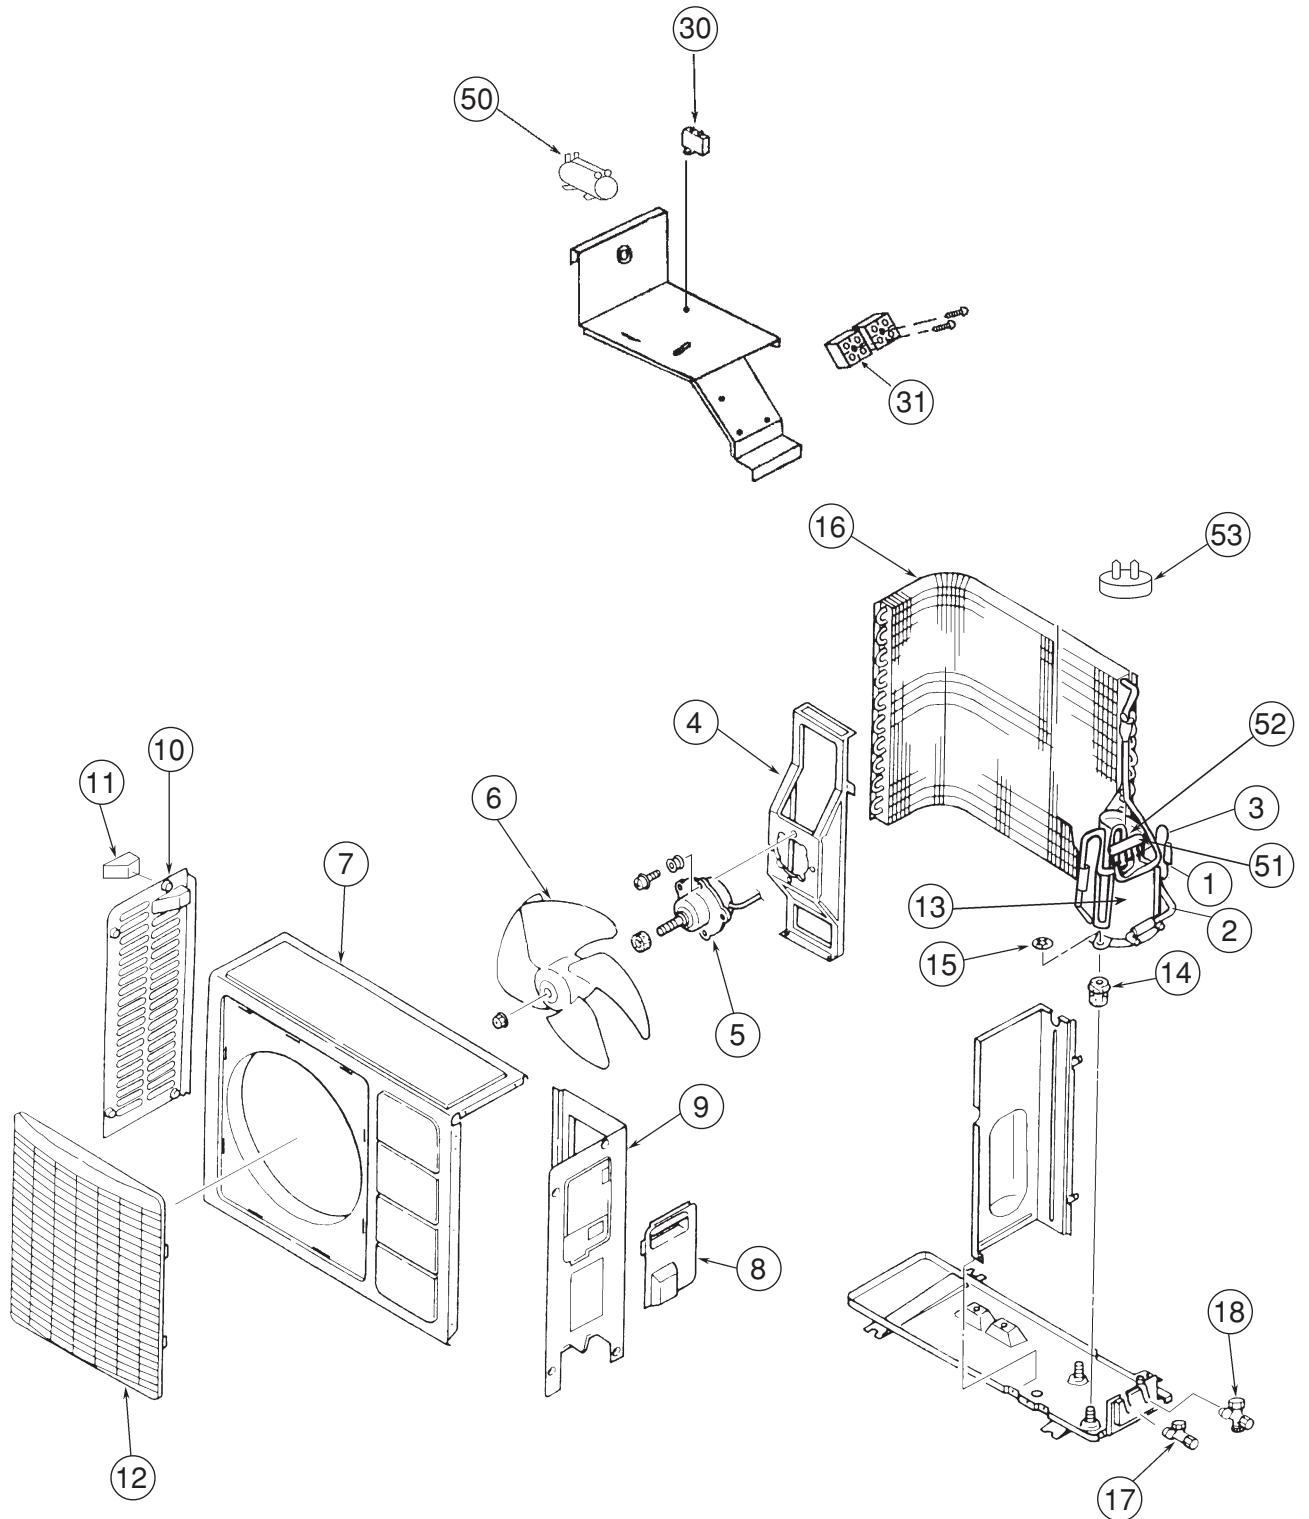

MODEL RAC-07GH4


NO.	PART NO. RAC-07GH4	Q'TY / UNIT	PARTS NAME
2	PMRAC-07GH4 907	1	STRAINER (CAPILLARY)
3	PMRAC-07GH4 908	1	STRAINER (CONDENSOR)
4	PMRAC-05CV 901	1	FAN MOTOR SUPPORT
5	PMRAC-10C8 908	1	FAN MOTOR
6	PMRAC-25CNH2 902	1	PROPELLER FAN
7	PMRAC-07CH2 901	1	CABINET
9	PMRAC-05CV 906	1	SIDE PLATE (R)
10	PMRAC-05CV 907	1	SIDE PLATE (L)
11	PMRAC-05CV 908	1	HANDLE
12	PMRAC-09CHA1 903	1	D-GRILL
13	PMRAC-07GH4 901	1	COMPRESSOR
14	PMRA-08GF 904	3	COMPRESSOR RUBBER
15	PMRA-08GF 905	3	COMPRESSOR NUT
16	PMRAC-07GH4 902	1	CONDENSER
17	PMRAC-07GH4 904	1	2S-VALVE
18	PMRAC-07GH4 905	1	3S-VALVE
30	PMRAC-10C8 905	1	FAN MOTOR CAPACITOR
31	PMRAC-51CHA1 903	1	TERMINAL BOARD (4P)
50	PMRAC-07GH4 906	1	COMPRESSOR CAPACITOR
51	PMRAC-07GH4 903	1	REVERSING VALVE
52	PMRAC-07CH2 905	1	COIL (REVERSING VALVE)
53	PMRAC-07GH4 909	1	OVERLOAD PROTECTOR

MODEL RAC-09GH4

NO.	PART NO. RAC-09GH4	Q'TY / UNIT	PARTS NAME
1	PMRAC-09GH4 904	1	CHECKVALVE
2	PMRAC-07GH4 907	1	STRAINER (CAPILLARY)
3	PMRAC-09GH4 905	1	STRAINER (CONDENSOR)
4	PMRAC-05CV 901	1	FAN MOTOR SUPPORT
5	PMRAC-10C7 903	1	FAN MOTOR
6	PMRAC-25CNH2 902	1	PROPELLER FAN
7	PMRAC-09GH4 907	1	CABINET
9	PMRAC-05CV 906	1	SIDE PLATE (R)
10	PMRAC-05CV 907	1	SIDE PLATE (L)
11	PMRAC-05CV 908	1	HANDLE
12	PMRAC-09CHA1 903	1	D-GRILL
13	PMRAC-09GH4 901	1	COMPRESSOR
14	PMRA-08GF 904	3	COMPRESSOR RUBBER
15	PMRA-08GF 905	3	COMPRESSOR NUT
16	PMRAC-09GH4 902	1	CONDENSER
17	PMRAC-07GH4 904	1	2S-VALVE
18	PMRAC-07GH4 905	1	3S-VALVE
30	PMRAC-10C7 904	1	FAN MOTOR CAPACITOR
31	PMRAS-51CHA1 903	2	TERMINAL BOARD (4P)
50	PMRAC-09GH4 903	1	COMPRESSOR CAPACITOR
51	PMRAC-07GH4 903	1	REVERSING VALVE
52	PMRAC-07CH2 905	1	COIL (REVERSING VALVE)
53	PMRAC-09GH4 906	1	OVERLOAD PROTECTOR

PARTS LIST AND DIAGRAM

OUTDOOR UNIT MODEL : RAC-14GH4

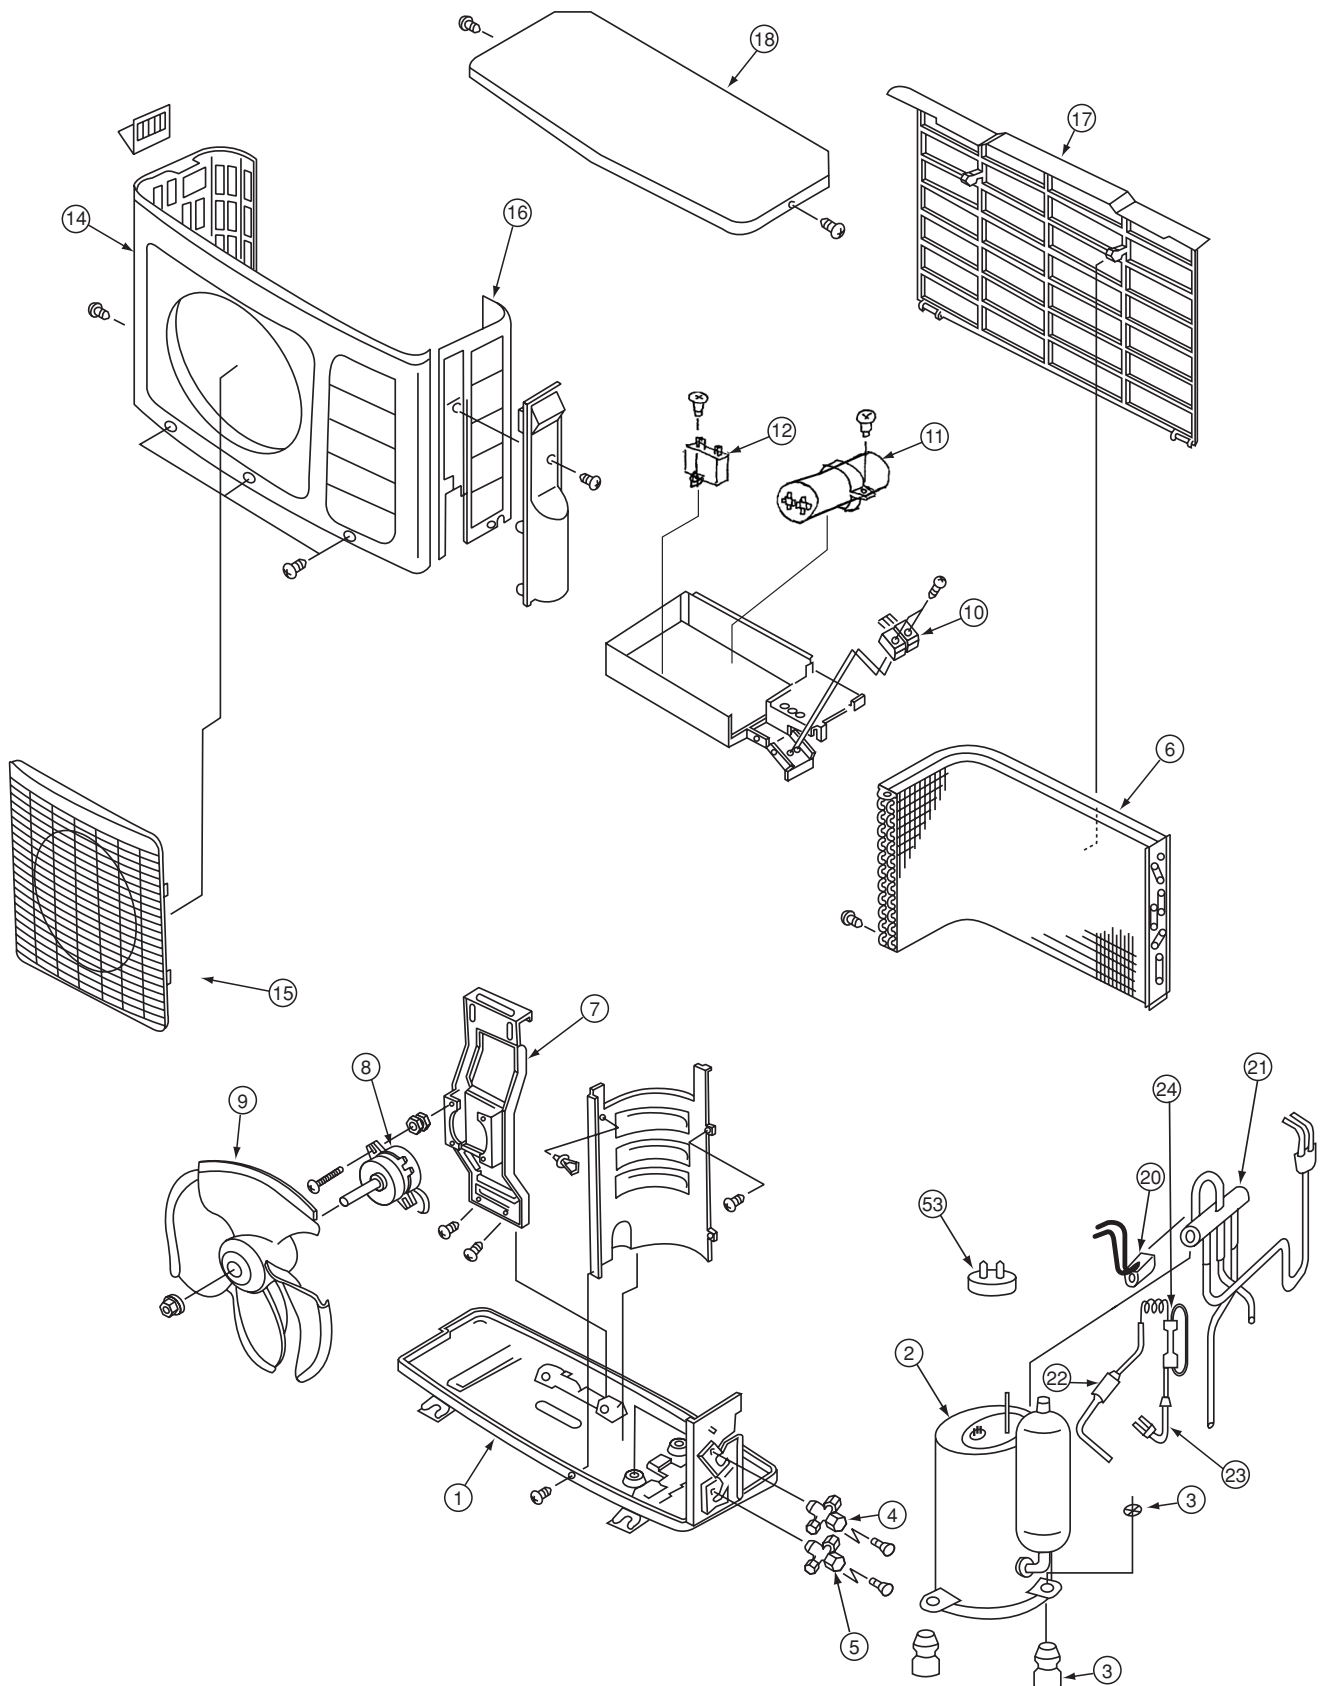

MODEL RAC-14GH4

NO.	PART NO. RAC-14GH4		Q'TY / UNIT	PARTS NAME
1	KPNT1	001	3	PUSH NUT
2	PMRAC-14GH4	901	1	COMPRESSOR
3	RAC-2226HV	805	3	COMPRESSOR RUBBER
4	PMRAC-25NH4	904	1	VALVE (2S)
5	PMRAC-25NH4	905	1	VALVE (3S)
6	PMRAC-25NH4	901	1	CONDENSOR
7	PMRAC-51CA1	905	1	FAN MOTOR SUPPORT
8	PMRAC-18C7	901	1	FAN MOTOR
9	PMRAC-25CNH2	902	1	PROPELLER FAN
10	PMRAC-51CHA1	903	1	TERMINAL BOARD (4P)
11	PMRAC-09GH4	903	1	COMPRESSOR CAPACITOR
12	PMRAC-10C7	904	1	FAN MOTOR CAPACITOR
13	PMRAC-14GH4	902	1	HANDLE
14	PMRAC-51CA1	901	1	CABINET
15	PMRAC-09CHA1	903	1	D-GRILL
16	PMRAC-14GH4	905	1	SIDE PLATE (R)
18	PMRAC-51CA1	909	1	TOP COVER
21	PMRAC-07GH4	903	1	REVERSING VALVE
22	PMRAC-14GH4	903	1	STRAINER (CAPILLARY)
23	PMRAC-14GH4	904	1	STRAINER (CONDENSOR)
24	PMRAC-09GH4	904	1	CHECKVALVE
53	PMRAC-14GH4	906	1	OVERLOAD PROTECTOR

HITACHI

RAS-07GH4 / RAC-07GH4
RAS-09GH4 / RAC-09GH4
RAS-14GH4 / RAC-14GH4

PM NO. 0000E

Printed in Malaysia