


# HITACHI

## SERVICE MANUAL TECHNICAL INFORMATION

**FOR SERVICE PERSONNEL ONLY**



RAS-18YH4

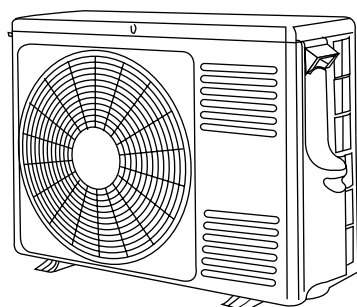

RAC-18YH4



**AW**

**NO. 0004E**

# RAS-18YH4 / RAC-18YH4

REFER TO THE FOUNDATION MANUAL

### CONTENTS

SPECIFICATIONS .....	4
HOW TO USE .....	5
CONSTRUCTION AND DIMENSIONAL DIAGRAM .....	15
MAIN PARTS COMPONENT .....	17
WIRING DIAGRAM .....	19
WIRING DIAGRAM OF THE PRINTED WIRING BOARD .....	20
PRINTED WIRING BOARD LOCATION DIAGRAM .....	24
BLOCK DIAGRAM .....	27
BASIC MODE .....	29
REFRIGERATING CYCLE DIAGRAM .....	38
DESCRIPTION OF MAIN CIRCUIT OPERATION .....	39
SERVICE CALL Q & A .....	67
TROUBLE SHOOTING .....	70
PROCEDURE FOR DISASSEMBLY AND REASSEMBLY .....	96
PARTS LIST AND DIAGRAM .....	98

### SPECIFICATIONS

TYPE		DC INVERTER (WALL TYPE)		
		INDOOR UNIT	OUTDOOR UNIT	
MODEL		RAS-18YH4	RAC-18YH4	
POWER SOURCE		1 PHASE, 50Hz, 230V		
COOLING	TOTAL INPUT (W)	550 (155 - 1,010)		
	TOTAL AMPERES (A)	2.81		
	CAPACITY	(kW)	2.00 (0.90 - 2.50)	
		(B.T.U./h)	6,820 (3,070 - 8,530)	
HEATING	TOTAL INPUT (W)	580 (115 - 970)		
	TOTAL AMPERES (A)	2.81		
	CAPACITY	(kW)	2.50 (0.90 - 3.20)	
		(B.T.U./h)	8,530 (3,070 - 10,920)	
DIMENSIONS (mm)	W	780	750(+91)*	
	H	280	548	
	D	205(+5)*	288(+47)*	
NET WEIGHT	(kg)	9.5	35	

\* After installation

SPECIFICATIONS AND PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT


## ROOM AIR CONDITIONER

INDOOR UNIT + OUTDOOR UNIT

DECEMBER 2004 Hitachi Household Appliance (Wuhu) Co.,Ltd.


## SAFETY DURING REPAIR WORK

1. In order to disassemble and repair the unit in question, be sure to disconnect the power cord plug from the power outlet before starting the work.

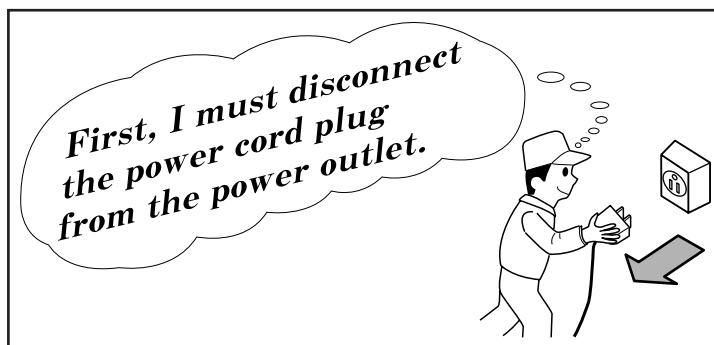

2. If it is necessary to replace any parts, they should be replaced with respective genuine parts for the unit, and the replacement must be effected in correct manner according to the instructions in the Service Manual of the unit.

If the contacts of electrical parts are defective, replace the electrical parts without trying to repair them

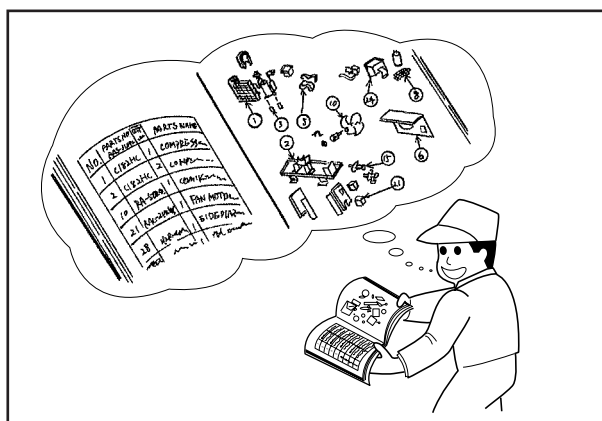

3. After completion of repairs, the initial state should be restored.
4. Lead wires should be connected and laid as in the initial state.
5. Modification of the unit by the user himself should absolutely be prohibited.
6. Tools and measuring instruments for use in repairs or inspection should be accurately calibrated in advance.
7. In installing the unit having been repaired, be careful to prevent the occurrence of any accident such as electrical shock, leak of current, or bodily injury due to the drop of any part.
8. To check the insulation of the unit, measure the insulation resistance between the power cord plug and grounding terminal of the unit.  
The insulation resistance should be  $1M\Omega$  or more as measured by a 500V DC megger.
9. The initial location of installation such as window, floor or the other should be checked for being safe enough to support the repaired unit again.  
If it is found not so strong and safe, the unit should be installed at the initial location after reinforced or at a new location.
10. Any inflammable object must not be placed about the location of installation.
11. Check the grounding to see whether it is proper or not, and if it is found improper, connect the grounding terminal to the earth.



# WORKING STANDARDS FOR PREVENTING BREAKAGE OF SEMICONDUCTORS

## 1. Scope


The standards provide for items to be generally observed in carrying and handling semiconductors in relative manufactures during maintenance and handling thereof. (They apply the same to handling of abnormal goods such as rejected goods being returned.)

## 2. Object parts

- (1) Micro computer
- (2) Integrated circuits (I.C.)
- (3) Field effective transistor (F.E.T.)
- (4) P.C. boards or the like to which the parts mentioned in (1) and (2) of this paragraph are equipped.


## 3. Items to be observed in handling

- (1) Use a conductive container for carrying and storing of parts. (Even rejected goods should be handled in the same way.)

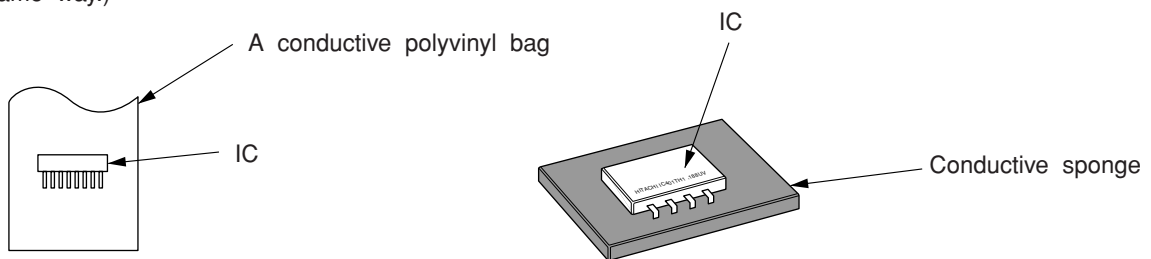


**Fig. 1 Conductive container**

- (2) When any part is handled uncovered (in counting, packing and the like), the handling person must always use himself as a body earth. (Make yourself a body earth by passing one M ohm earth resistance through a ring or bracelet.)
- (3) Be careful not to touch the parts with your clothing when you hold a part even if a body earth is being taken.
- (4) Be sure to place a part on a metal plate with grounding.
- (5) Be careful not to fail to turn off power when you repair the printed circuit board. At the same time, try to repair the printed circuit board on a grounded metal plate.

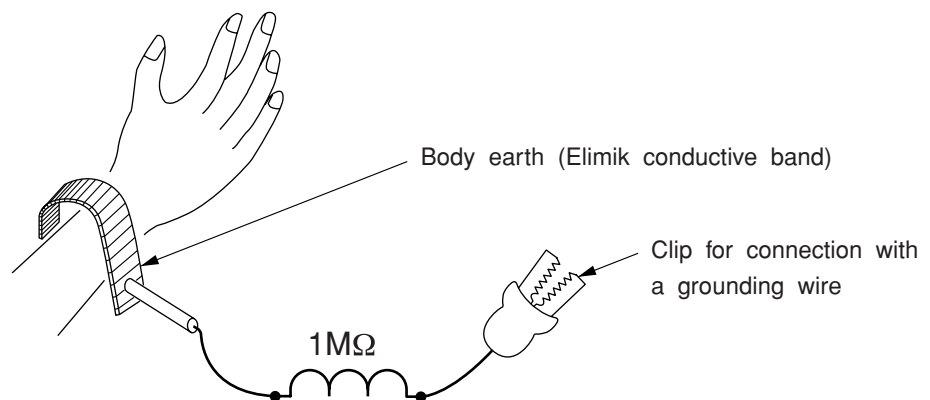


**Fig. 2 Body earth**

(6) Use a three wire type soldering iron including a grounding wire.

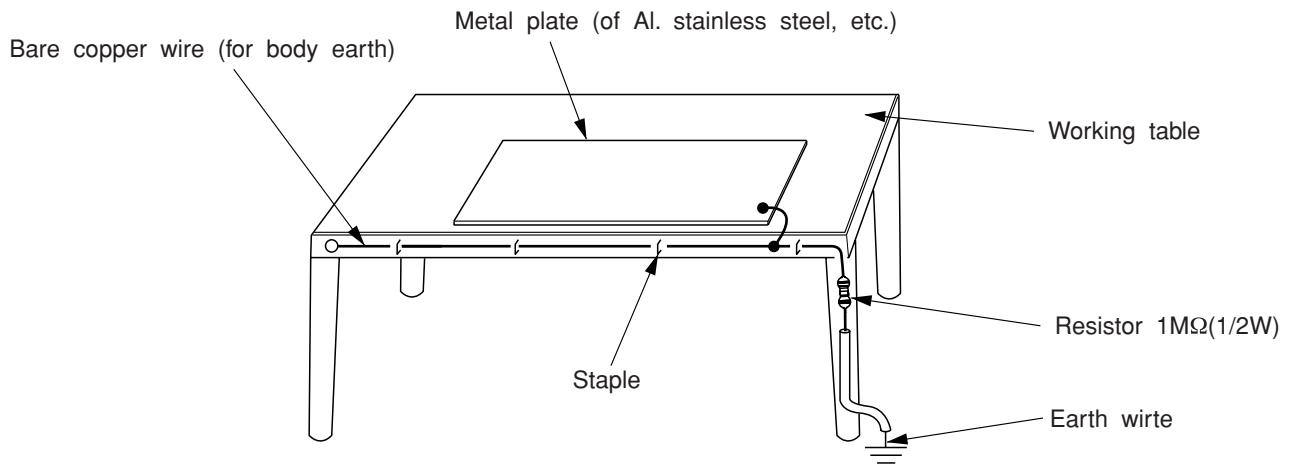

**Fig.3 Grounding of the working table**

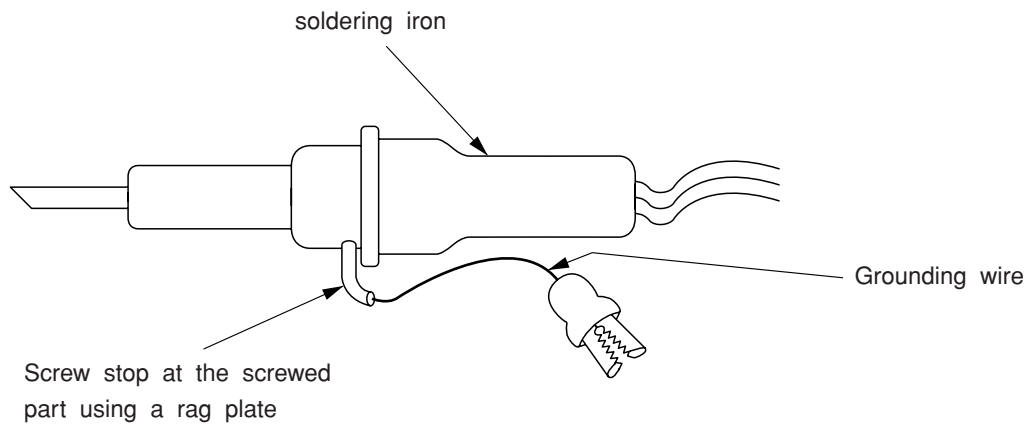

**Fig.4 Grounding a solder iron**

Use a high insulation mode (100V, 10MΩ or higher) when ordinary iron is to be used.

(7) In checking circuits for maintenance, inspection, or some others, be careful not to have the test probes of the measuring instrument shortcircuit a load circuit or the like.



 **CAUTION**

1. In quiet operation or stopping the running, slight flowing noise of refrigerant in the refrigerating cycle is heard occasionally, but this noise is not abnormal for the operation.
2. When it thunders near by, it is recommend to stop the operation and to disconnect the power cord plug from the power outlet for safety.
3. The room air conditioner does not start automatically after recovery of the electric power failure for preventing fuse blowing. Re-press START/STOP button after 3 minutes from when unit stopped.
4. If the room air conditioner is stopped by adjusting thermostat, or missoperation, and re-start in a moment, there is occasion that the cooling and heating operation does not start for 3 minutes, it is not abnormal and this is the result of the operation of IC delay circuit. This IC delay circuit ensures that there is no danger of blowing fuse or damaging parts even if operation is restarted accidentally.
5. This room air conditioner should not be used at the cooling operation when the outside temperature is below 10°C (50°F).
6. This room air conditioner (the reverse cycle) should not be used when the outside temperature is below -15°C (5°F) .  
If the reverse cycle is used under this condition, the outside heat exchanger is frosted and efficiency falls.
7. When the outside heat exchanger is frosted, the frost is melted by operating the hot gas system, it is not trouble that at this time fan stops and the vapour may rise from the outside heat exchanger.


## SPECIFICATIONS

MODEL		RAS-18YH4	RAC-18YH4
FAN MOTOR		PWM DC35V	40 W
FAN MOTOR CAPACITOR		NO	NO
FAN MOTOR PROTECTOR		NO	NO
COMPRESSOR		—	ASC092SD-A8JT1
COMPRESSOR MOTOR CAPACITOR		NO	NO
OVERLOAD PROTECTOR		NO	YES
OVERHEAT PROTECTOR		NO	YES
FUSE (for MICROPROCESSOR)		NO	3.0A
POWER RELAY		NO	G4A
POWER SWITCH		YES	NO
TEMPORARY SWITCH		YES	NO
SERVICE SWITCH		NO	YES
TRANSFORMER		NO	NO
VARISTOR		NO	450NR
NOISE SUPPRESSOR		NO	YES
THERMOSTAT		YES(IC)	YES(IC)
REMOTE CONTROL SWITCH (LIQUID CRYSTAL)		YES	NO
REFRIGERANT CHARGING VOLUME (Refrigerant 410A)	UNIT	-----	870g
	PIPES (MAX. 20m)	WITHOUT REFRIGERANT BECAUSE COUPLING IS FLARE TYPE.	




## HOW TO USE

# SAFETY PRECAUTION



- Please read the "Safety Precaution" carefully before operating the unit to ensure correct usage of the unit.
- Pay special attention to signs of "▲ Warning" and "▲ Caution". The "Warning" section contains matters which, if not observed strictly, may cause death or serious injury. The "Caution" section contains matters which may result in serious consequences if not observed properly. Please observe all instructions strictly to ensure safety.
- The signs indicate the following meanings. (The following are examples of signs.)

- ⊘ This sign in the figure indicates prohibition.  Indicates the instructions that must be followed.
- Please keep this manual after reading.





### PRECAUTIONS DURING INSTALLATION

<b>▲ WARNING</b>	<ul style="list-style-type: none"> <li>• Do not reconstruct the unit. Water leakage, fault, short circuit or fire may occur if you reconstruct the unit by yourself.</li> </ul>	 PROHIBITION
	<ul style="list-style-type: none"> <li>• Please ask your sales agent or qualified technician for the installation of your unit. Water leakage, short circuit or fire may occur if you install the unit by yourself.</li> <li>• Please use earth line. Do not place the earth line near water or gas pipes, lightning-conductor, or the earth line of telephone. Improper installation of earth line may cause electric shock.</li> <li>• Be sure to use the specified piping set for R410A. Otherwise, this may result in broken copper pipes or faults.</li> <li>• A circuit breaker should be installed depending on the mounting site of the unit. Without a circuit breaker, the danger of electric shock exists.</li> <li>• Do not install the unit near a location where there is flammable gas. The outdoor unit may catch fire if flammable gas leaks around it. Piping shall be suitable supported with a maximum spacing of 1 m between the supports.</li> <li>• Please ensure smooth flow of water when installing the drain hose. If any failure is found in the drain path, water drops from the indoor and outdoor units, causing wet household effects.</li> <li>• Make sure that a single phase 230V power source is used. The use of other power sources may cause electrical components to overheat and lead to fire.</li> </ul>	 PROHIBITION
<b>▲ CAUTION</b>		 PROHIBITION

### PRECAUTIONS DURING SHIFTING OR MAINTENANCE


<b>▲ WARNING</b>	<ul style="list-style-type: none"> <li>• Should abnormal situation arise (like burning smell), please stop operating the unit and remove plug from the socket or turn off the circuit breaker. Contact your agent. Fault, short circuit or fire may occur if you continue to operate the unit under abnormal situation.</li> <li>• Please contact your agent for maintenance. Improper self maintenance may cause electric shock and fire.</li> <li>• Please contact your agent if you need to remove and reinstall the unit. Electric shock or fire may occur if you remove and reinstall the unit yourself improperly.</li> <li>• Avoid an extended period of direct air flow for your health.</li> <li>• Do not connect the power cable with an extension cable or do not plug too many leads of the other electric appliance into the socket where this cable is plugged. In addition, wire the cable with some allowances to prevent the cable from stretching. Not doing so will cause an electrical shock, heat generation or fire.</li> <li>• Do not bundle the power cable, pull it, put something on it, heat it, process it, or put it between things. Breakage of the power cable may result. Use of a damaged cable may cause an electrical shock or a fire.</li> </ul>	 PROHIBITION
	<ul style="list-style-type: none"> <li>• Do not put objects like thin rods into the panel of blower and suction side because the high-speed fan inside may cause danger.</li> </ul>	 PROHIBITION

## PRECAUTIONS DURING OPERATION


<b>▲ WARNING</b>	<ul style="list-style-type: none"> <li>• Do not use any conductor as fuse wire, this could cause fatal accident.</li> </ul>	 PROHIBITION
	<ul style="list-style-type: none"> <li>• During thunder storm, disconnect the plug top or turn off the circuit breaker.</li> <li>• Spray cans and other combustibles should not be located within a meter of the air outlets of both indoor and outdoor units. As a spray can's internal pressure can be increased by hot air, a rupture may result.</li> <li>• The product shall be operated under the manufacturer specification and not for any other intended use.</li> <li>• Do not attempt to operate the unit with wet hands, this could cause fatal accident.</li> </ul>	 PROHIBITION
<b>▲ CAUTION</b>	<ul style="list-style-type: none"> <li>• When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.</li> <li>• Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.</li> <li>• Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.</li> <li>• Do not wash the unit with water or place a water container such as a vase on the indoor unit. Electrical leakage could be present and cause electric shock.</li> <li>• Do not place plants or animals directly under the air flow as it is bad for the plants or animals.</li> <li>• Do not climb on the outdoor unit or put objects on it.</li> </ul>	 PROHIBITION
	<ul style="list-style-type: none"> <li>• When operating the unit with burning equipments, regularly ventilate the room to avoid oxygen insufficiency.</li> <li>• Do not direct the cool air coming out from the air-conditioner panel to face household heating apparatus as this may affect the working of apparatus such as the electric kettle, oven etc.</li> <li>• Please ensure that outdoor mounting frame is always stable, firm and without defect. If not, the outdoor unit may collapse and cause danger.</li> <li>• Do not wash the unit with water or place a water container such as a vase on the indoor unit. Electrical leakage could be present and cause electric shock.</li> <li>• Do not place plants or animals directly under the air flow as it is bad for the plants or animals.</li> <li>• Do not climb on the outdoor unit or put objects on it.</li> <li>• When operating the unit with the door and windows opened, (the room humidity is always above 80%) and with the air deflector facing down or moving automatically for a long period of time, water will condense on the air deflector and drips down occasionally. This will wet your furniture. Therefore, do not operate under such condition for a long time.</li> <li>• If the amount of heat in the room is above the cooling or heating capability of the unit (for example: more people entering the room, using heating equipments and etc.), the preset room temperature cannot be achieved.</li> <li>• Indoor unit cleaning must be performed by authorized personnel only. Consult your sales agent. Using a commercially available detergent or similar can damage the plastic parts or clog the drain pipe, causing water to drip with potential electric shock hazard.</li> <li>• Do not touch the air outlet, bottom surface and aluminum fin of the outdoor unit. You may get hurt.</li> <li>• Do not touch the refrigerant pipe and connecting valve. Burns may result.</li> </ul>	 PROHIBITION

## NAMES AND FUNCTIONS OF EACH PART

### INDOOR UNIT

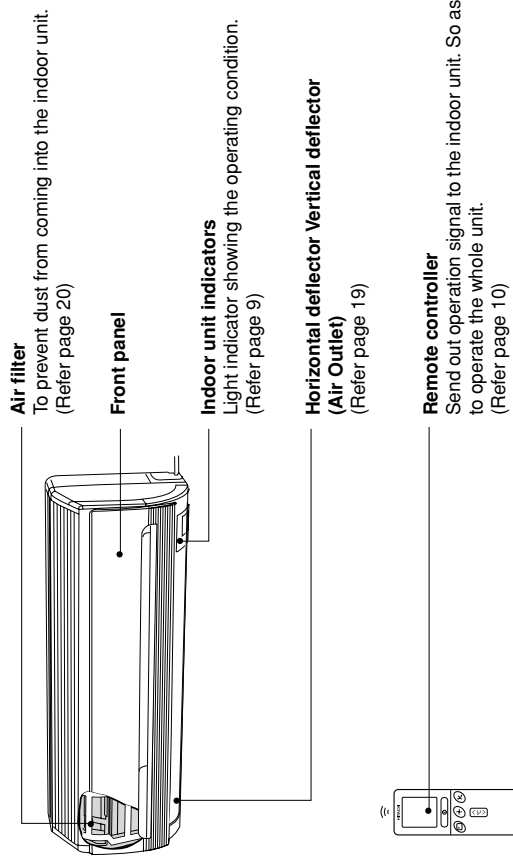

### OUTDOOR UNIT

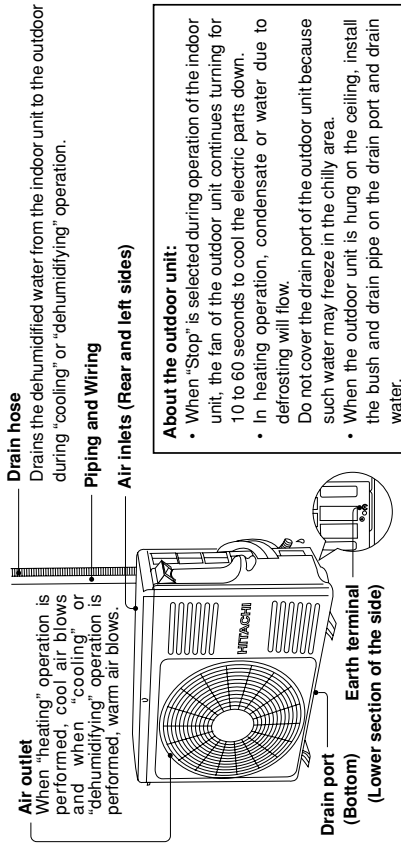


### MODEL NAME AND DIMENSIONS

MODEL	WIDTH (mm)	HEIGHT (mm)	DEPTH (mm)
RAS-18YH4	780	280	205
RAC-18YH4	750	548	288

## NAMES AND FUNCTIONS OF EACH PART

### INDOOR UNIT INDICATIONS

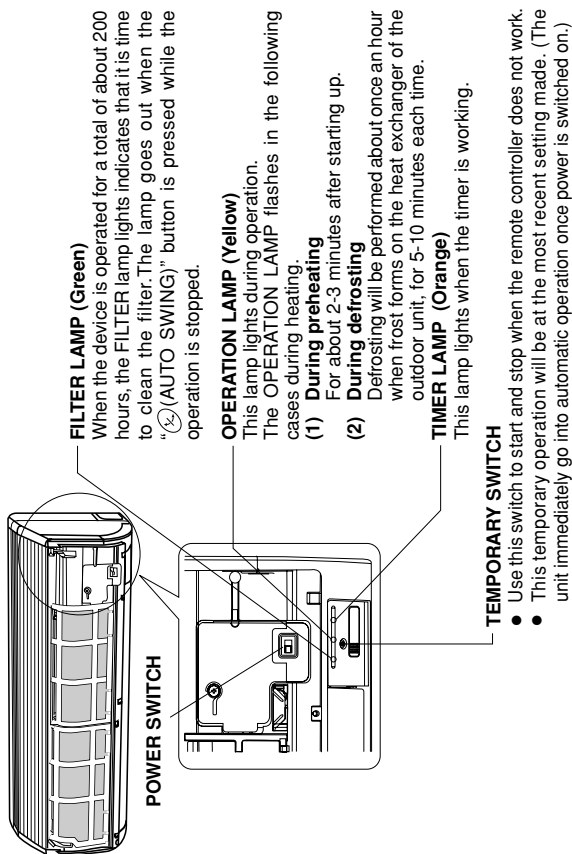

### CAUTION

Turn off the circuit breaker or pull out the power plug if the unit is not be operated for a long period.

☆ If the power stays on and the unit is not operated, power is slightly consumed in the control circuit. The power is saved by turning off the power switch (or the circuit breaker when the power is supplied from the outdoor unit).

### Attaching the air cleansing and deodorizing filters (Accessories) to the filter frame.

- Attach the air cleansing and deodorizing filters to the frame by gently compress its both sides and release after insertion into filter frame.
- The cooling capacity is slightly weakened and the cooling speed becomes slower when the air cleansing and deodorizing filters are used.
- Air cleansing and deodorizing filters can be used for about 1 year. When you want to renew it, please ask your sales agent.



Frame

## NAMES AND FUNCTIONS OF EACH PART

### REMOTE CONTROLLER

- This controls the operation of the indoor unit. The range of control is about 7 meters. If indoor lighting is controlled electronically, the range of control may be shorter, in some cases, the control signal may not be received. This unit can be fixed on a wall using the fixture provided. Before fixing it, make sure the indoor unit can be controlled from the remote controller.
- Handle the remote controller with care.
- Dropping it or getting it wet may compromise its signal transmission capability.
- After new batteries are inserted into the remote controller, the unit will initially require approximately 10 seconds to respond to commands and operate.

**Signal emitting window/transmission sign**  
Point this window toward the indoor unit when controlling it. The transmission sign blinks when a signal is sent.

**Display**  
This indicates the room temperature selected, current time, timer status, function and intensity of circulation selected.

**START/STOP button**  
Press this button to start operation. Press it again to stop operation.

**AUTO SWING button**  
Controls the angle of the horizontal air deflector.

**FAN SPEED selector**  
This determines the fan speed. Every time you press this button, the intensity of circulation will change from ○ (AUTO) to ☉ (HI) to ☽ (MED) to ☾ (LOW). (This button allows selecting the optimal or preferred fan speed for each operation mode.)

**SLEEP button**  
Use this button to set the sleep timer.

**TEMPERATURE buttons**  
Use these buttons to raise or lower the temperature setting. (Keep pressed, and the value will change more quickly.)

**TIME button**  
Use this button to set and check the time and date.

**RESET button**  
Press this button after the batteries are replaced or when some irregular operation is found.

**FUNCTION selector**  
Use this button to select the operating mode. Every time you press it, the mode will change from ○ (AUTO) to ☉ (HEAT) to ☽ (DEHUMIDIFY) to ☾ (COOL) and to ☿ (FAN) cyclically.

**FAN SPEED selector**  
Use these buttons to set the timer.

**TIMER control**  
Use these buttons to set the timer.

**OFF-TIMER button**  
Select the turn OFF time.

**ON-TIMER button**  
Select the turn ON time.

**RESERVE button**  
Time setting reservation.

**CANCEL button**  
Cancel time reservation.

### Precautions for Use

- Do not put the remote controller in the following places.
  - In direct sunlight
  - In the vicinity of a heater.
- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).
- This is to protect the device and does not indicate a failure.
- If you press the FUNCTION selector button during operation, the device may stop for about 3 minutes for protection.

○	AUTO
☉	HEAT
☽	DEHUMIDIFY
☾	COOL
☿	FAN
☿	FAN SPEED
☿	RESERVE
☿	MED
☿	HI
☿	SLEEPING
☿	STOP (CANCEL)
☿	START (RESERVE)
☿	START/STOP
☿	TIME
☿	TIMER SET
☿	TIMER SELECTOR
☿	OFF-TIMER
☿	AUTO SWING


## VARIOUS FUNCTIONS

### Auto Restart Control

- If there is a power failure, operation will be automatically restarted when the power is resumed with previous operation mode and airflow direction. (As the operation is not stopped by remote controller.)
  - If you intend not to continue the operation when the power is resumed, switch off the power supply. When you switch on the circuit breaker, the operation will be automatically restarted with previous operation mode and airflow direction.
- Note: 1. If you do not require Auto Restart Control, please consult your sales agent.  
2. Auto Restart Control is not available when Timer or Sleep Timer mode is set.


### AUTOMATIC OPERATION

The device will automatically determine the mode of operation, HEAT or COOL depending on the initial room temperature. The selected mode of operation will change when the room temperature varies.

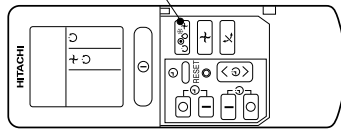

- Press the FUNCTION selector so that the display indicates the ○ (AUTO) mode of operation.
- When AUTO has been selected, the device will automatically determine the mode of operation, HEAT or COOL depending on the current room temperature.
  - When AUTO is first selected, the device will determine the current room temperature and select the proper operation mode accordingly.
  - When the air conditioner has adjusted the room's temperature to the near preset temperature, it will begin to monitor operation. If the room temperature subsequently changes, the air conditioner will once again select the appropriate operation (heating or cooling) to adjust the temperature to the preset temperature. The monitoring operation range is  $\pm 3^{\circ}\text{C}$  relative to the preset temperature.
  - If the mode automatically selected by the unit is not satisfactory, manually change the mode setting (heat, dehumidify, cool or fan).

Press the **START/STOP** button.  
Operation starts with a beep.  
Press the button again to stop operation.

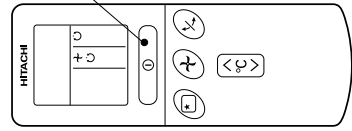

- As the settings are stored in memory in the remote controller, you only have to press the **START/STOP** button next time.

You can raise or lower the temperature setting as necessary by a maximum of  $3^{\circ}\text{C}$ .




- Press the temperature button and the temperature setting will change by  $1^{\circ}\text{C}$  each time.
- The preset temperature and the actual room temperature may vary somewhat depending on conditions.

Press the **+** (FAN SPEED) button, AUTO and LOW is available.

## HEATING OPERATION

- Use the device for heating when the outdoor temperature is under 21°C. When it is too warm (over 21°C), the heating function may not work in order to protect the device.
- In order to keep reliability of the device, please use this device above -10°C of the outdoor temperature.

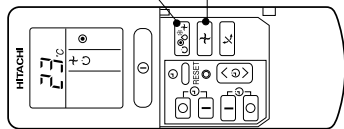

**1** Press the FUNCTION selector so that the display indicates (HEAT).

Set the desired FAN SPEED with the (FAN SPEED) button (the display indicates the setting).

(AUTO) : The fan speed changes automatically according to the temperature of the air which blows out.


(HI) : Economical as the room will become warm quickly.  
But you may feel a chill at the beginning.

(MED) : Quiet.

(LOW) : More quiet.

Set the desired room temperature with the TEMPERATURE buttons (the display indicates the setting).

The temperature setting and the actual room temperature may vary somewhat depending on conditions.

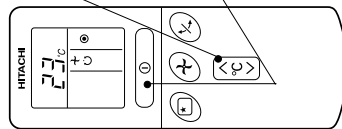

**START/STOP** Press the (START/STOP) button. Heating operation starts with a beep. Press the button again to stop operation.

- As the settings are stored in memory in the remote controller, you only have to press the (START/STOP) button next time.

## Defrosting

Defrosting will be performed about once an hour when frost forms on the heat exchange of the outdoor unit, for 5-10 minutes each time.


During defrosting operation, the operation lamp blinks in cycle of 3 seconds on and 0.5 second off.

The maximum time for defrosting is 20 minutes.

(If the piping length used is longer than usual, frost will likely to form.)

## DEHUMIDIFYING OPERATION

Use the device for dehumidifying when the room temperature is over 16°C. When it is under 15°C, the dehumidifying function will not work.

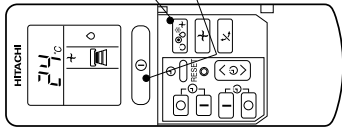

**1** Press the FUNCTION selector so that the display indicates (DEHUMIDIFY).  
The FAN SPEED is set at LOW automatically.  
The FAN SPEED button does not work.

**START/STOP** Press the (START/STOP) button.

- When you want to change the operation mode, please use the FUNCTION selector.
- Set the desired temperature is available.
- You also can use the FUNCTION selector to select this operation.


## Dehumidifying Function

- Dehumidifying takes place with a target temperature which is slightly lower than the room temperature setting. (However, target temperature is 16°C for a temperature setting of 16°C.) If the room temperature becomes lower than the target value, operation stops. If the room temperature becomes higher than the target value, operation restarts.
- The preset room temperature may not be reached depending on the number of people present in the room conditions.



## COOLING OPERATION


Use the device for cooling when the outdoor temperature is 22-42°C. If humidity is very high (over 80%) indoors, some dew may form on the air outlet grille of the indoor unit.

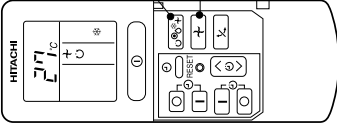

**1** Press the **FUNCTION** selector so that the display indicates **\*(COOL)\***.

**2** Set the desired **FAN SPEED** with the **FAN SPEED** button (the display indicates the setting).  
 (AUTO) : The **FAN SPEED** is HI at first and varies to MED automatically when the preset temperature has been reached.  
 (HI) : Economical as the room will become cool quickly.  
 (MED) : Quiet.  
 (LOW) : More quiet.

**3** Set the desired room temperature with the **TEMPERATURE** buttons (the display indicates the setting).  
 The temperature setting and the actual room temperature may vary somewhat depending on conditions.

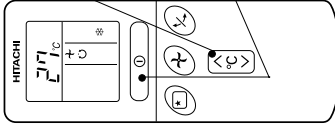


Press the **START/STOP** button. Cooling operation starts with a beep. Press the button again to stop operation. The cooling function does not start if the temperature setting is higher than the current room temperature (even though the **OPERATION** lamp lights).  
 The cooling function will start as soon as you set the temperature below the current room temperature.

■ As the settings are stored in memory in the remote controller, you only have to press the **START/STOP** button next time.

## FAN OPERATION

You can use the device simply as an air circulator. Use this function to dry the interior of the indoor unit at the end of summer.

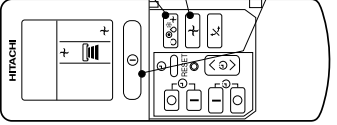

**1** Press the **FUNCTION** selector so that the display indicates **FAN**.

**2** Press the **FAN SPEED** button.  
 (HI) : The strongest air blow.  
 (MED) : Quiet.  
 (LOW) : More quiet.


Press the **START/STOP** button. Fan operation starts with a beep.  
 Press the button again to stop operation.

### FAN SPEED (AUTO) ...

When the **AUTO** fan speed mode is set in the cooling/heating operation:

For the heating operation	<ul style="list-style-type: none"> <li>The fan speed will automatically change according to the temperature of discharged air.</li> <li>As room temperature reaches the preset temperature, a very light breeze will blow.</li> </ul>
For the cooling operation	<ul style="list-style-type: none"> <li>Operation starts in the "HI" mode to reach the preset temperature.</li> <li>As room temperature approaches the preset temperature, fan speed automatically switches to "LOW".</li> </ul>

## HOW TO SET THE TIMER

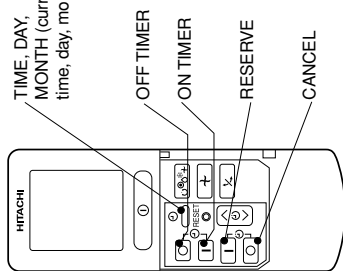

### Time, Day, Month

After you change the batteries;



**1** Set the current month and day with the TIMER control button.



### OFF-Timer


**1** Press the **OFF-TIMER** button. The **OFF** mark blinks on the display.



You can set the device to turn off at the present time.

### ON-Timer


**1** Press the **ON-TIMER** button. The **ON** mark blinks on the display.

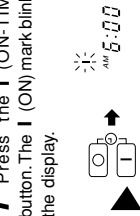

The device will turn on at the designated times.

### ON/OFF-Timer

**1** Press the **OFF-TIMER** button so that the **OFF** mark blinks. Press the **ON-TIMER** button so that the **ON** mark blinks and the **OFF** mark lights and the **ON** mark blinks.

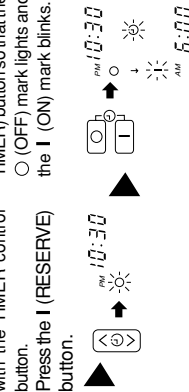

- The device will turn on (off) at the designated times.
- The switching occurs first at the preset time that comes earlier.
- The arrow mark appearing on the display indicates the sequence of switching operations.

### How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the **CANCEL** button. The **RESERVED** sign goes out with a beep and the **TIMER** lamp turns off on the indoor unit.

#### NOTE

You can set only one of the OFF-timer, ON-timer and ON/OFF-timer.

**2** Set the **TIME** button.



**3** Set the current time with the TIMER control button.




- The time indication will disappear automatically in 10 seconds.
- To check the current time setting, press the **TIME** button twice. The setting of the current time is now complete.

Example: The current time is 1:30p.m.

**2** Set the turn-off time with the TIMER control button.




**3** Point the signal window of the remote controller toward the indoor unit, and press the **RESERVE** button. The **OFF** mark starts lighting instead of flashing, and the **RESERVED** sign lights. A beep occurs and the **TIMER** lamp lights on the indoor unit.



Example: The device will turn off at 11:00p.m. The setting of turn-off time is now complete.

**2** Set the turn-on time with the TIMER control button.




**3** Point the signal window of the remote controller toward the indoor unit, and press the **RESERVE** button. The **ON** mark starts lighting instead of flashing, and the **RESERVED** sign lights. A beep occurs and the **TIMER** lamp lights on the indoor unit.




Example: The device will turn on early so that the preset temperature be almost reached at 7:00 a.m. The setting of the turn-on time is now complete.

**4** Set the turn-on time with the TIMER control button.



**5** Point the signal window of the remote controller toward the indoor unit, and press the **RESERVE** button. The **ON** mark starts lighting instead of flashing, and the **RESERVED** sign lights. A beep occurs and the **TIMER** lamp lights on the indoor unit.



Example: For heating, the device will turn off at 10:30 p.m., and then turn on early so that the preset temperature be almost reached at 7:00 a.m., for cooling and demumidifying, it will simply turned on at 7:00 a.m. The settings of the turn on/off times are now complete.


- The timer may be used in three ways: off-timer, on-timer and ON/OFF (OFF/ON)-timer. Set the current time at first because it serves as a reference.

- As the time settings are stored in memory in the remote controller, you only have to press the **RESERVE** button in order to use the same settings next time.



## HOW TO SET THE SLEEP TIMER

Set the current time at first if it is not set before (see the pages for setting the current time). Press the **(SLEEP)** button and the display changes as shown below.

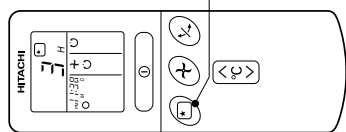

Mode	Indication
Sleep Timer	

**Sleep Timer:** The device will continue working for the desired number of hours and then turn off. Point the signal window of the remote controller toward the indoor unit, and press the **SLEEP** button. The timer information will be displayed on the remote controller. The **TIMER** lamp lights with a beep from the indoor unit. When the sleep timer has been set, the display indicates the turn-off time.

Example: If you set 3 hours sleep time at 11:38 p.m., the turn-off time is 2:38 a.m.

The device will be turned off by the sleep timer and turned on by on-timer.

**1** Set the ON-timer.

**2** Press the **(SLEEP)** button and set the sleep timer.

For heating:  
 In this case, the device will turn off in 2 hours (at 1:38 a.m.) and turn on early so that the preset temperature will be almost reached at 6:00 next morning.

### How to Cancel Reservation

Point the signal window of the remote controller toward the indoor unit, and press the **(CANCEL)** button. The **(RESERVED)** sign goes out with a beep and the **(TIMER)** lamp turns off on the indoor unit.


#### NOTE

If you set the sleep timer when the off-time or on/off-timer has been set earlier, the sleep timer becomes effective instead of the off- or on/off-timer set earlier.

## ADJUSTING THE AIR DEFLECTORS

**1** Adjustment of the conditioned air in the upward and downward directions.

The horizontal air deflector is automatically set to the proper angle suitable for each operation. The deflector can be swung up and down continuously and also set to the desired angle using the **(AUTO SWING)** button.

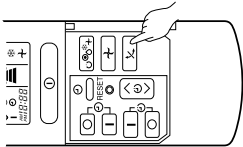


- If the **(AUTO SWING)** button is pressed once, the horizontal air deflector swings up and down. If the button is pressed again, the deflector stops in its current position. Several seconds (about 6 seconds) may be required before the deflector starts to move.
- Use the horizontal air deflector within the adjusting range shown in the right.
- When the operation is stopped, the horizontal air deflector moves and stops at the position where the air outlet closes.

#### CAUTION

- In "Cooling" operation, do not keep the horizontal air deflector swinging for a long time. Some dew may form on the horizontal air deflector and dew may drop.


Adjustment of the conditioned air to the left and right.

Hold the vertical air deflector as shown in the figure and adjust the conditioned air to the left and right.

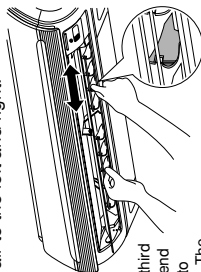


Left side: Hold the third blade from the left end of the air deflector to adjust the direction. The pull for the blade is marked.

Right side: Hold the third blade from the right end of the air deflector to adjust the direction. The pull for the blade is marked.

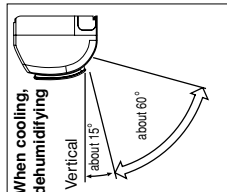

**When cooling, dehumidifying**  
 Vertical about 15°  
 about 60°

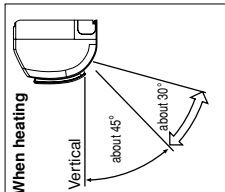


**When heating**  
 Vertical about 45°  
 about 30°

## HOW TO EXCHANGE THE BATTERIES IN THE REMOTE CONTROLLER

**1** Remove the cover as shown in the figure and take out the old batteries.

**2** Install the new batteries. The direction of the batteries should match the marks in the case.

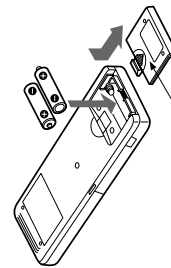

Push and pull to the direction of arrow.

#### CAUTION

1. Do not use new and old batteries, or different kinds of batteries together.
2. Take out the batteries when you do not use the remote controller for 2 or 3 months.

## MAINTENANCE

### ▲ CAUTION


Cleaning and maintenance must be carried out only by qualified service personnel. Before cleaning, stop operation and switch off the power supply.

### 1. AIR FILTER


When the filter indicator lamp comes on, be sure to clean the filter. By doing so, the power rates are saved. In case the air filter is full of dust, the air flow will decrease and the cooling capacity will be reduced. Further, noise may occur. Be sure to clean the filter following the procedure below.

#### PROCEDURE

① Open the front panel carefully and remove the filter.

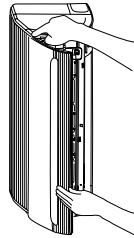


② Vacuum dust from the air filter using vacuum cleaner. If there is too much dust, wash the filter with a detergent and rinse it thoroughly. After that, dry it in the shade.

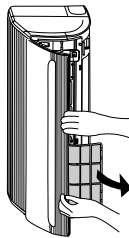

③

- Set the filter with "FRONT" mark facing front, and slot them into the original state.
- After attaching the filters, push the front panel at three arrow portions as shown in figure and close it.

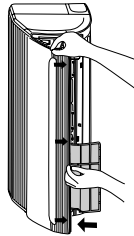

### ▲ CAUTION

- Do not wash with hot water at more than 40°C. The filter may shrink.
- When washing it, shake off moisture completely and dry it in the shade; do not expose it directly to the sun. The filter may shrink.
- Don't operate the unit without filter. Fault may occur if you continue.


## 2. CLEANING OF FRONT PANEL

- Remove the front panel and wash with clean water. Wash it with a soft sponge. After using neutral detergent, wash thoroughly with clean water.
- When front panel is not removed, wipe it with a soft dry cloth. Wipe the remote controller thoroughly with a soft dry cloth.
- Wipe the water thoroughly. If water remains at indicators or signal receiver of indoor unit, it causes trouble.




Method of removing the front panel. Be sure to hold the front panel with both hands to detach and attach it.

### Removing the Front Panel

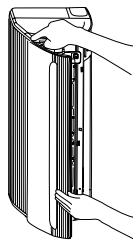

### Attaching the Front Panel

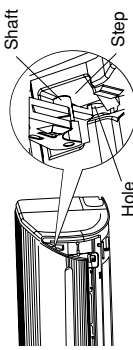

- When the front panel is fully opened with both hands, push the right arm to the inside to release it, and while closing the front panel slightly, put it out forward.

- Move the shafts of the left and right arms into the **steps** in the unit and securely insert them into the holes.


### ▲ CAUTION

- Do not splash or direct water to the body of the unit when cleaning it as this may cause short circuit.
- Never use hot water (above 40°C), benzene, gasoline, acid, thinner or a brush, because they will damage the plastic surface and the coating.



## 3. MAINTENANCE AT BEGINNING OF LONG OFF PERIOD

- Run the unit by setting the operation mode to → (FAN) and the fan speed to HI for about half a day on a fine day, and dry the whole of the unit.
- Switch off the power plug or turn off the circuit breaker.

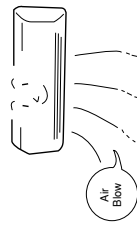

## INFORMATION

### CAPABILITIES

#### Heating Capability

- This room air conditioner utilizes a heat pump system that absorbs exterior heat and brings it into a room to be heated. As the ambient temperature gets lower, heating capability will also lower. In such a situation, the inverter work to increase compressor rpm to keep the unit's heating capability from decreasing. If the unit's heating performance is still unsatisfactory, other heating appliances should be used to augment this unit's performance.
- The air conditioner is designed to heat an entire room so that it may take some time before you feel warm. Timer operation is recommended for effective preheating ahead of the desired time.



PROHIBITION

#### CAUTION

Do not use a stove or any other high temperature devices in proximity to the indoor unit.

#### Cooling and Dehumidifying Capabilities

- If the heat present in a room exceeds the unit's cooling capacity (for example, if there are many people in the room or other heating appliances are used), the preset room temperature may not be reached.

### VARIOUS FUNCTIONS

- When fan speed, room temperature are set with the remote controller before starting manual operation and the buttons are released, the indication of settings will go off in 10 seconds and only the operation mode will be displayed.
- Pressing the button while the unit is in operation will let the protective circuit work so that the unit will not operate for approximately 3 minutes.
- During heating operation, the indoor unit's color indicator lamp may flash with no air emitted for a while. If you feel cold wind during heating operation with the (H) fan speed or want to make the unit operation quieter after the room is heated, use of (AUTO) setting is recommended.
- With the (LOW) setting, the unit's cooling capability will lower slightly.
- With the (LOW) setting, the unit's heating capacity will vary with the operating conditions.

### TIMER PROGRAMMING/SLEEP TIMER OPERATION

- When the timer has been programmed, the unit will not operate even if the set time is reached unless the unit receives a signal from the remote controller. Confirm that timer programming is complete (beep) and the TIMER lamp of the indoor unit lights.
- If the (SLEEP) button is pressed while the ON/OFF timer is programmed, the sleep timer takes priority.
- During sleep timer operation, the fan speed sets to (LOW) regardless of the preset speed. The remote controller display indication will remain unchanged even with the (LOW) setting.

## REGULAR INSPECTION

PLEASE CHECK THE FOLLOWING POINTS EVERY EITHER HALF YEARLY OR YEARLY. CONTACT YOUR SALES AGENT SHOULD YOU NEED ANY HELP.

1		<b>WARNING</b> Check to see if the unit's earth line has been connected correctly. If the earth line is disconnected or faulty, unit failure or electric shock hazard may result.
2		<b>WARNING</b> Check to see if the mounting frame has rusted excessively or if the outdoor unit has tilted or become unstable. It could collapse or fall, causing injury.
3		<b>WARNING</b> Check to see if the power plug is securely inserted into the wall socket. If the power plug is not inserted into the wall socket securely or becomes hot, an electric shock or fire may result. If dust or dirt is found on the power plug, clean the plug and insert it into the wall socket.

## AFTER SALES SERVICE AND WARRANTY

### WHEN ASKING FOR SERVICE, CHECK THE FOLLOWING POINTS.

CONDITION	CHECK THE FOLLOWING POINTS
 If the remote controller is not transmitting a signal. (Remote controller display is dim or blank.)	<ul style="list-style-type: none"> <li>Do the batteries need replacement?</li> <li>Is the polarity of the inserted batteries correct?</li> </ul>
 When it does not operate.	<ul style="list-style-type: none"> <li>Is the fuse all right?</li> <li>Is the voltage extremely high or low?</li> <li>Is the circuit breaker "ON"?</li> <li>Is the power plug inserted?</li> <li>Do you have any power cut?</li> </ul>
 When it does not cool well. When it does not heat well.	<ul style="list-style-type: none"> <li>Is the air filter blocked with dust?</li> <li>Is the set temperature suitable?</li> <li>Have horizontal air deflectors been adjusted to their correct positions according to the operation mode selected?</li> <li>Are the air inlets or air outlets of indoor and outdoor units blocked?</li> <li>Is the fan speed "LOW"?</li> </ul>

■ The following phenomena do not indicate unit failure.

<Operation start> The unit is preparing to blow warm air. Please wait. <In operation> The outdoor unit is defrosting. Please wait.	
Refrigerant flow noise in the pipe or valve sound generated when flow rate is adjusted.	
Noise generated when the unit expands or contracts due to temperature changes.	
Noise generated with the indoor unit fan's rpm changing such as operation start times.	
Noise of the motorized valve when the unit is switched on.	

Perking noise	Noise of the ventilation fan sucking in air present in the drain hose and blowing out dehumidifying water that had accumulated in the condensed water collector. For details, consult your sales agent.
Changing operation noise	Operation noise changes due to power variations according to room temperature changes.
Mist emission	Mist is generated as the air within the room is suddenly cooled by conditioned air.
Steam emitted from the outdoor unit	Water generated during defrosting operation evaporates and steam is emitted.
Odors	Caused as the smells and particles of smoke, food, cosmetics, etc. present in room air become attached to the unit and blown off into the room again.
The outdoor unit continues to operate even if operation is stopped.	Defrosting is underway (as the heating operation is stopped, the microcomputer checks frost accumulated in the outdoor unit and instructs the unit to perform automatic defrosting if necessary).
The OPERATION lamp is blinking.	Shows preheating or defrosting operation is underway. As the protective circuit or preheat sensor operates when unit operation is stopped during preheating and then restarted, or when operation mode is switched from cooling to heating, the lamp continues to blink.
Does not reach the temperature setting	Actual room temperature may deviate slightly from the remote controller's temperature setting depending on the number of people in the room, indoor or outdoor conditions.

- If the unit still fails to operate normally after performing the above inspections, turn the circuit breaker off, or pull the power plug out, and contact your sales agent immediately.

**Contact your sales agent immediately if the following phenomena should occur:**

- The circuit breaker switches off or the fuse blows frequently.
- The switch operation is not stable.
- Foreign matter or water accidentally enters the unit interior.
- The power cord gets excessively hot or its insulation is torn or stripped.
- TIMER lamp on the indoor unit display blinks.



( As the nature of the failure can be identified by the blinking cycle, )  
check the blinking cycle before turning off the circuit breaker. )



**Notes**

- In quiet operation or stopping the running, the following phenomena may occasionally occur, but they are not abnormal for the operation.
  - (1) Slight flowing noise of refrigerant in the refrigerating cycle.
  - (2) Slight rubbing noise from the fan casing which is cooled and then gradually warmed as operation stops.
- The odor will possibly be emitted from the room air conditioner because the various odor, emitted by smoke, foodstuffs, cosmetics and so on, sticks to it. So please clean the air filter and the evaporator regularly to reduce the odor.

- Please contact your sales agent immediately if the air conditioner still fails to operate normally after the above inspections. Inform your agent of the model of your unit, production number, date of installation. Please also inform him regarding the fault.

**Please note:**


On switching on the equipment, particularly when the room light is dimmed, a slight brightness fluctuation may occur. This is of no consequence.  
The conditions of the local Power Supply Companies are to be observed.


# CONSTRUCTION AND DIMENSIONAL DIAGRAM

MODEL RAS-18YH4

INDOOR UNIT

Unit : mm

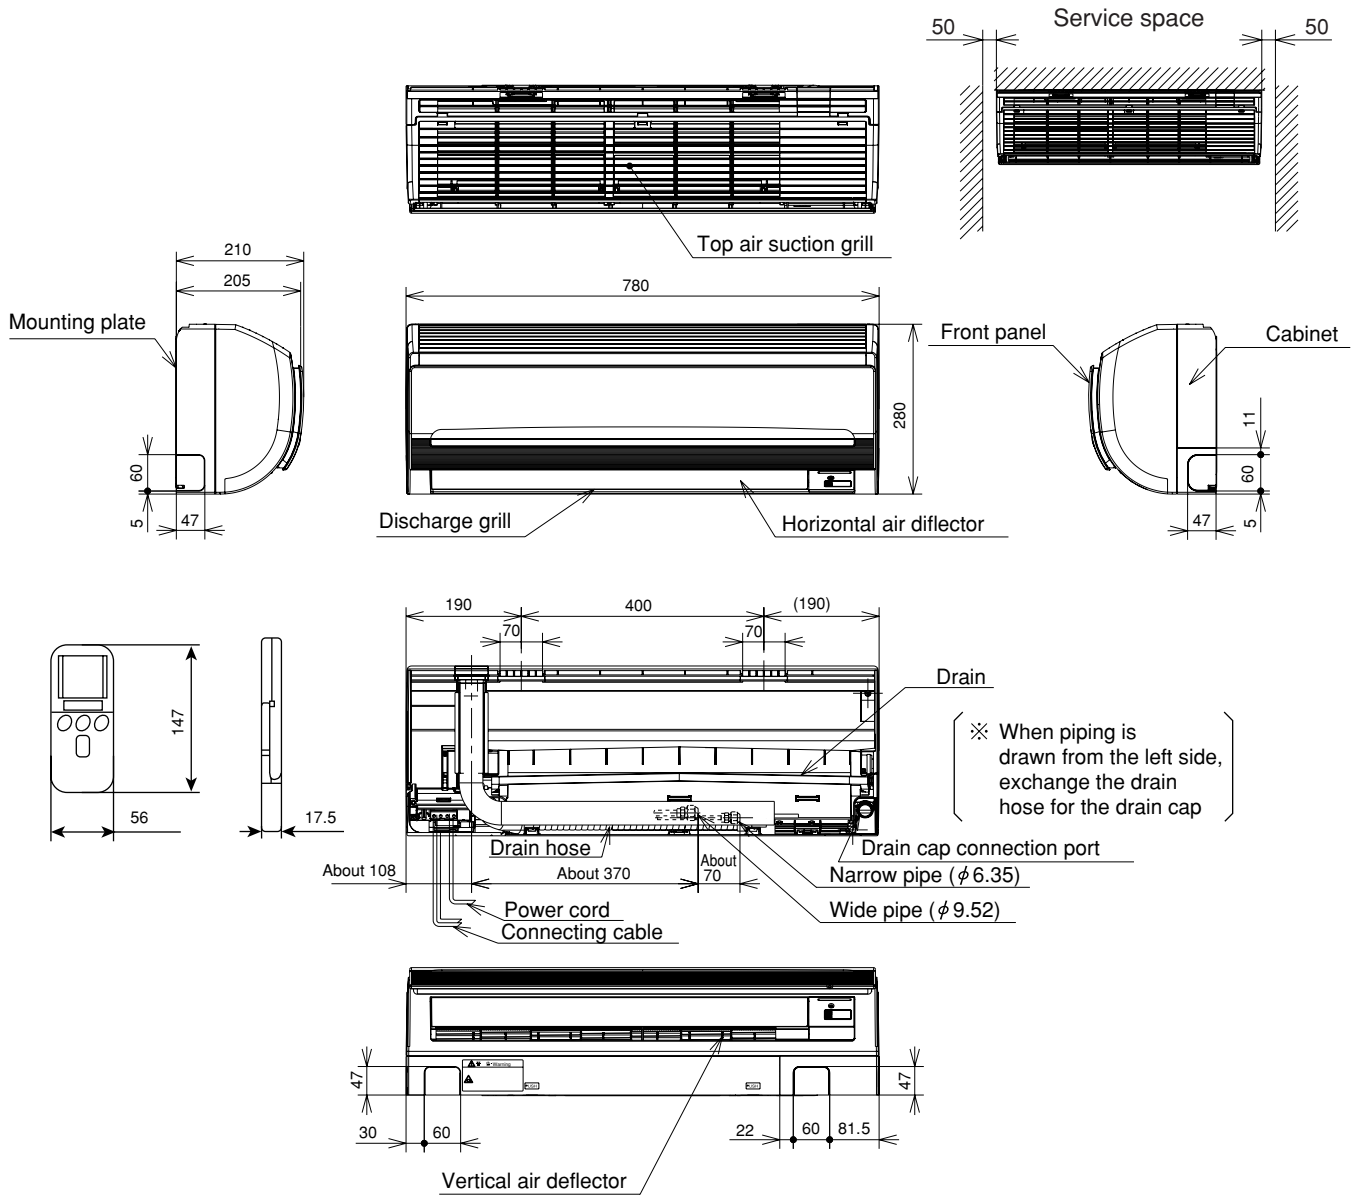

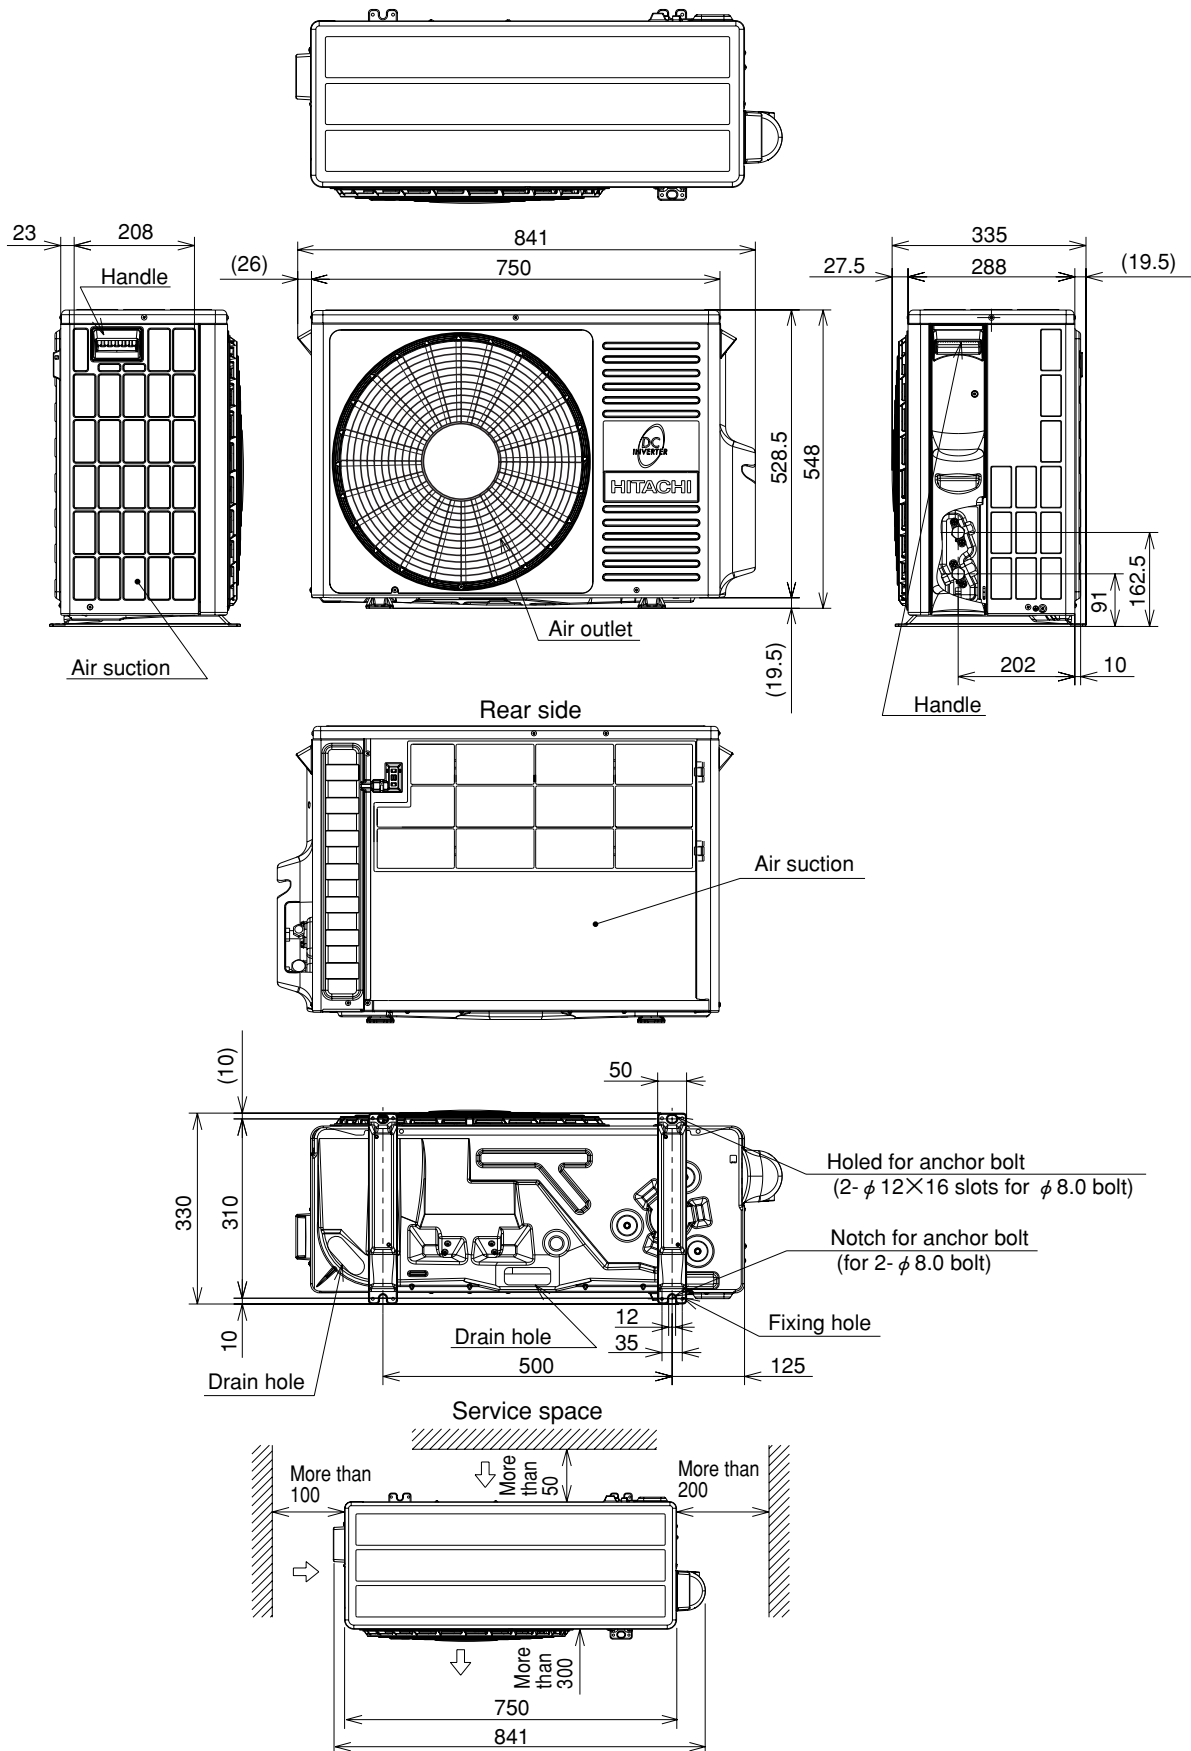

# MAIN PARTS COMPONENT

## THERMOSTAT

Thermostat Specifications

MODEL			RAS-18YH4	
THERMOSTAT MODEL			IC	
OPERATION MODE			COOL	HEAT
TEMPERATURE °C (°F)	INDICATION 16	ON	16.7 (62.1)	18.7 (65.7)
		OFF	16.0 (60.8)	19.3 (66.7)
	INDICATION 24	ON	24.7 (76.5)	26.7 (80.1)
		OFF	24.0 (75.2)	27.3 (81.1)
	INDICATION 32	ON	32.7 (90.9)	34.7 (94.5)
		OFF	32.0 (89.6)	35.3 (95.5)

## FAN MOTOR

Fan Motor Specifications

MODEL	RAS-18YH4	RAC-18YH4
POWER SOURCE	DC 5V, 35V	DC 140 - 350V
OUTPUT	25W	40W
CONNECTION	<p>(Control circuit built in )</p>	

BLU : BLUE  
GRY : GRAY  
BLK : BLACK

YEL : YELLOW  
ORN : ORANGE  
PNK : PINK

BRN : BROWN  
GRN : GREEN  
VIO : VIOLET


WHT : WHITE  
RED : RED


## MAIN ELECTRIC COMPONENTS FOR OUTDOOR UNIT

NAME	RATING	APPLICABLE MODELS
REVERSING VALVE COIL	135Ω (20 °C)	RAC-18YH4
REACTOR L1	13 (mH), 0.224Ω	RAC-18YH4
REACTOR L2	25.5 (mH), 0.37Ω	RAC-18YH4
FILM CAPACITOR	45 (μF)	RAC-18YH4

# COMPRESSOR MOTOR

## Compressor Motor Specifications

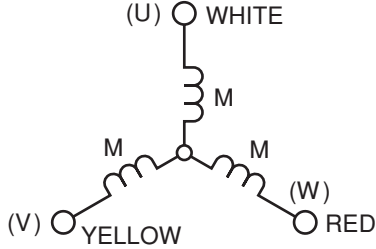ITEM	MODEL	RAC-18YH4
COMPRESSOR TYPE		ASC092SD-A8JT1
POWER SOURCE		DC 220 - 350 V
OUTPUT		750W
WINDING		
RESISTANCE (Ω)	20 °C	2M = 1.15
	75 °C	2M = 1.40

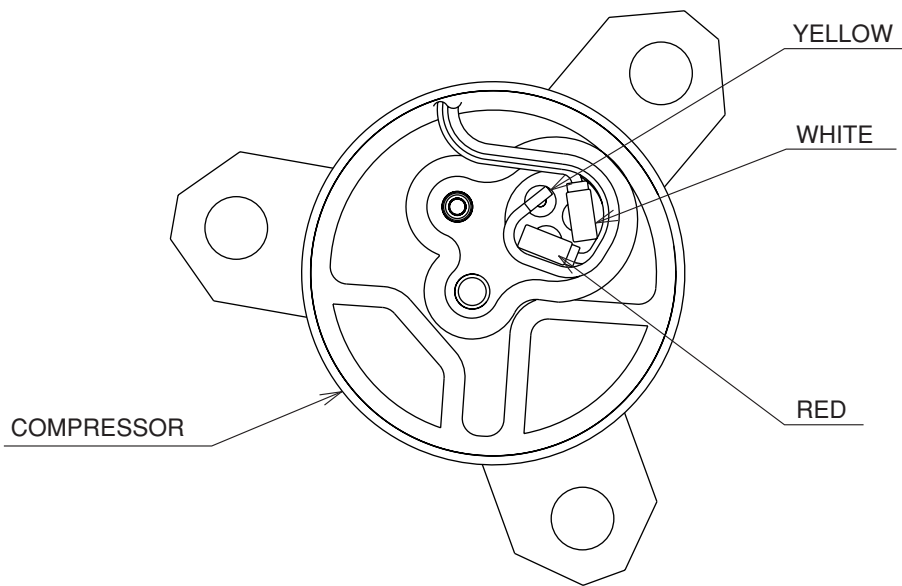

FRONT SIDE OF OUTDOOR UNIT

### CAUTION


When the refrigerating cycle has been operated for a long time with the capillary tubes clogged or crushed or with too little refrigerant, check the color of the refrigerating machine oil inside the compressor. If the color has been changed conspicuously, replace the compressor.




# WIRING DIAGRAM

MODEL RAS-18YH4 / RAC-18YH4

**CAUTION**  
The marked parts ⚠ are very important ones for safety.

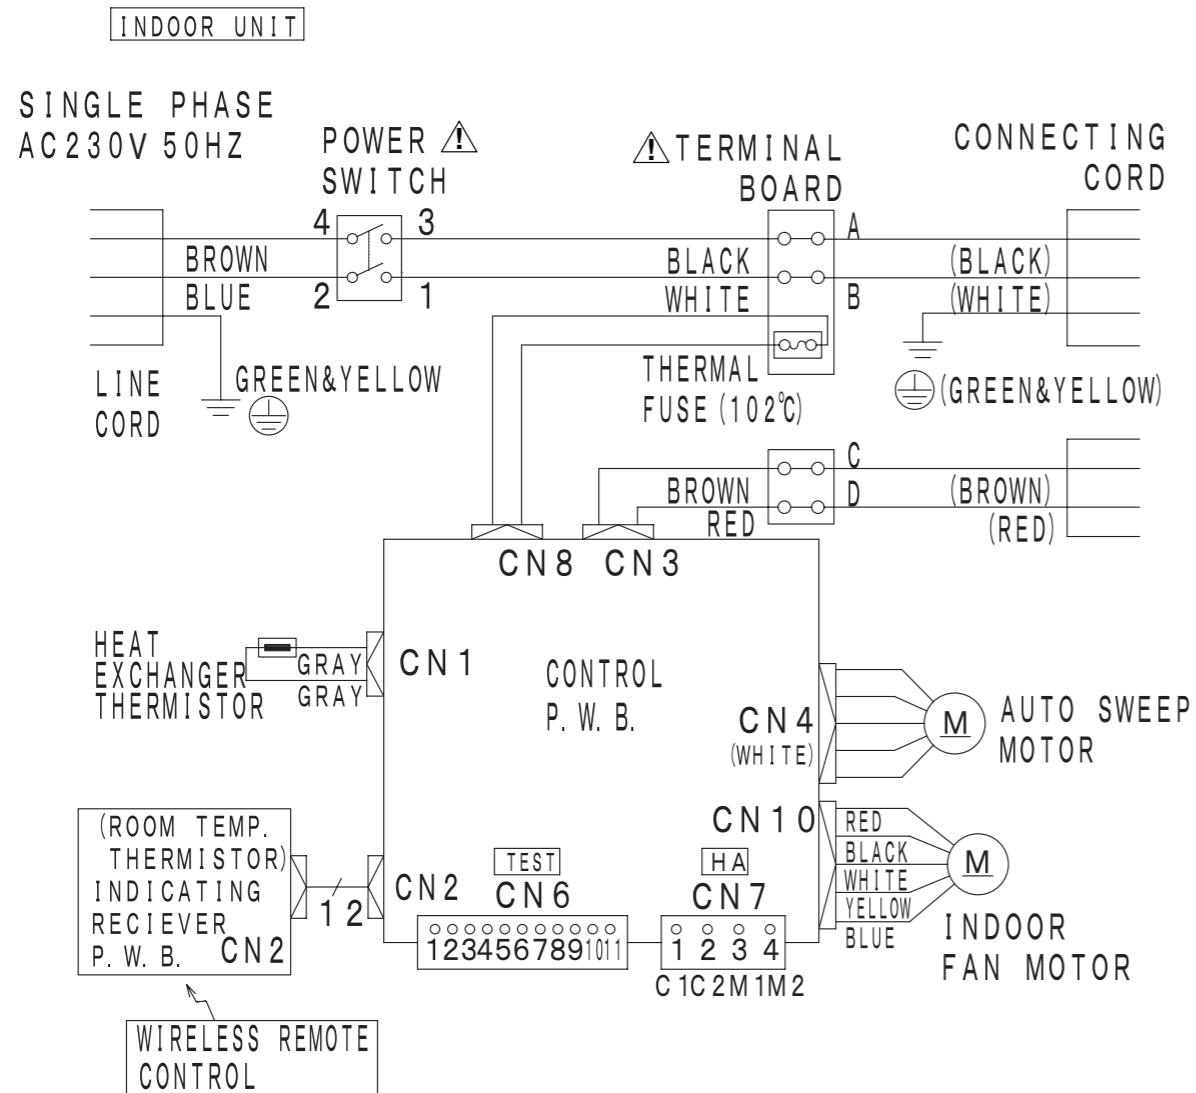



**OUTDOOR UNIT**

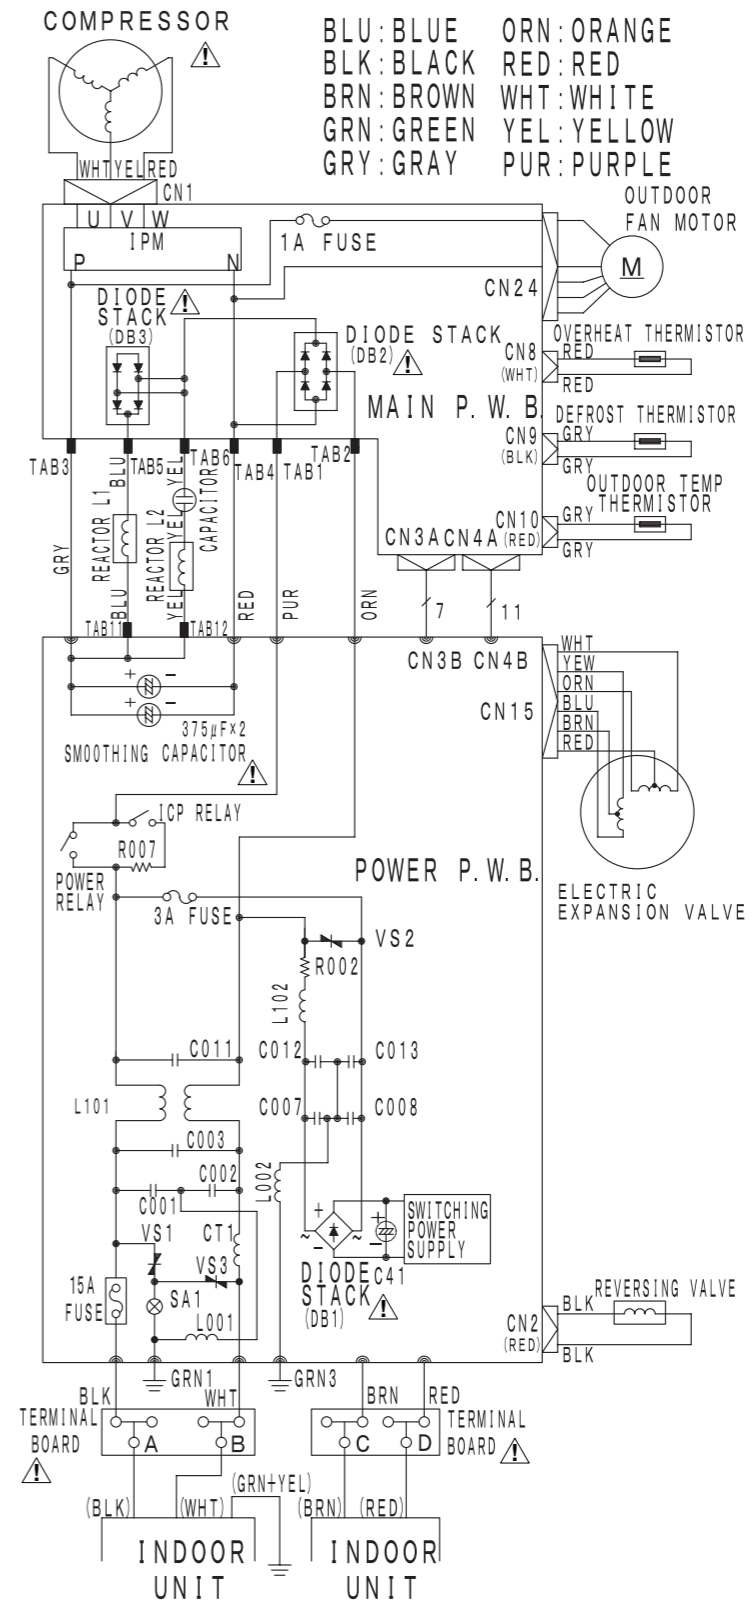

# WIRING DIAGRAM OF THE PRINTED WIRING BOARD

Remote Controller  
(RAR-2P2)

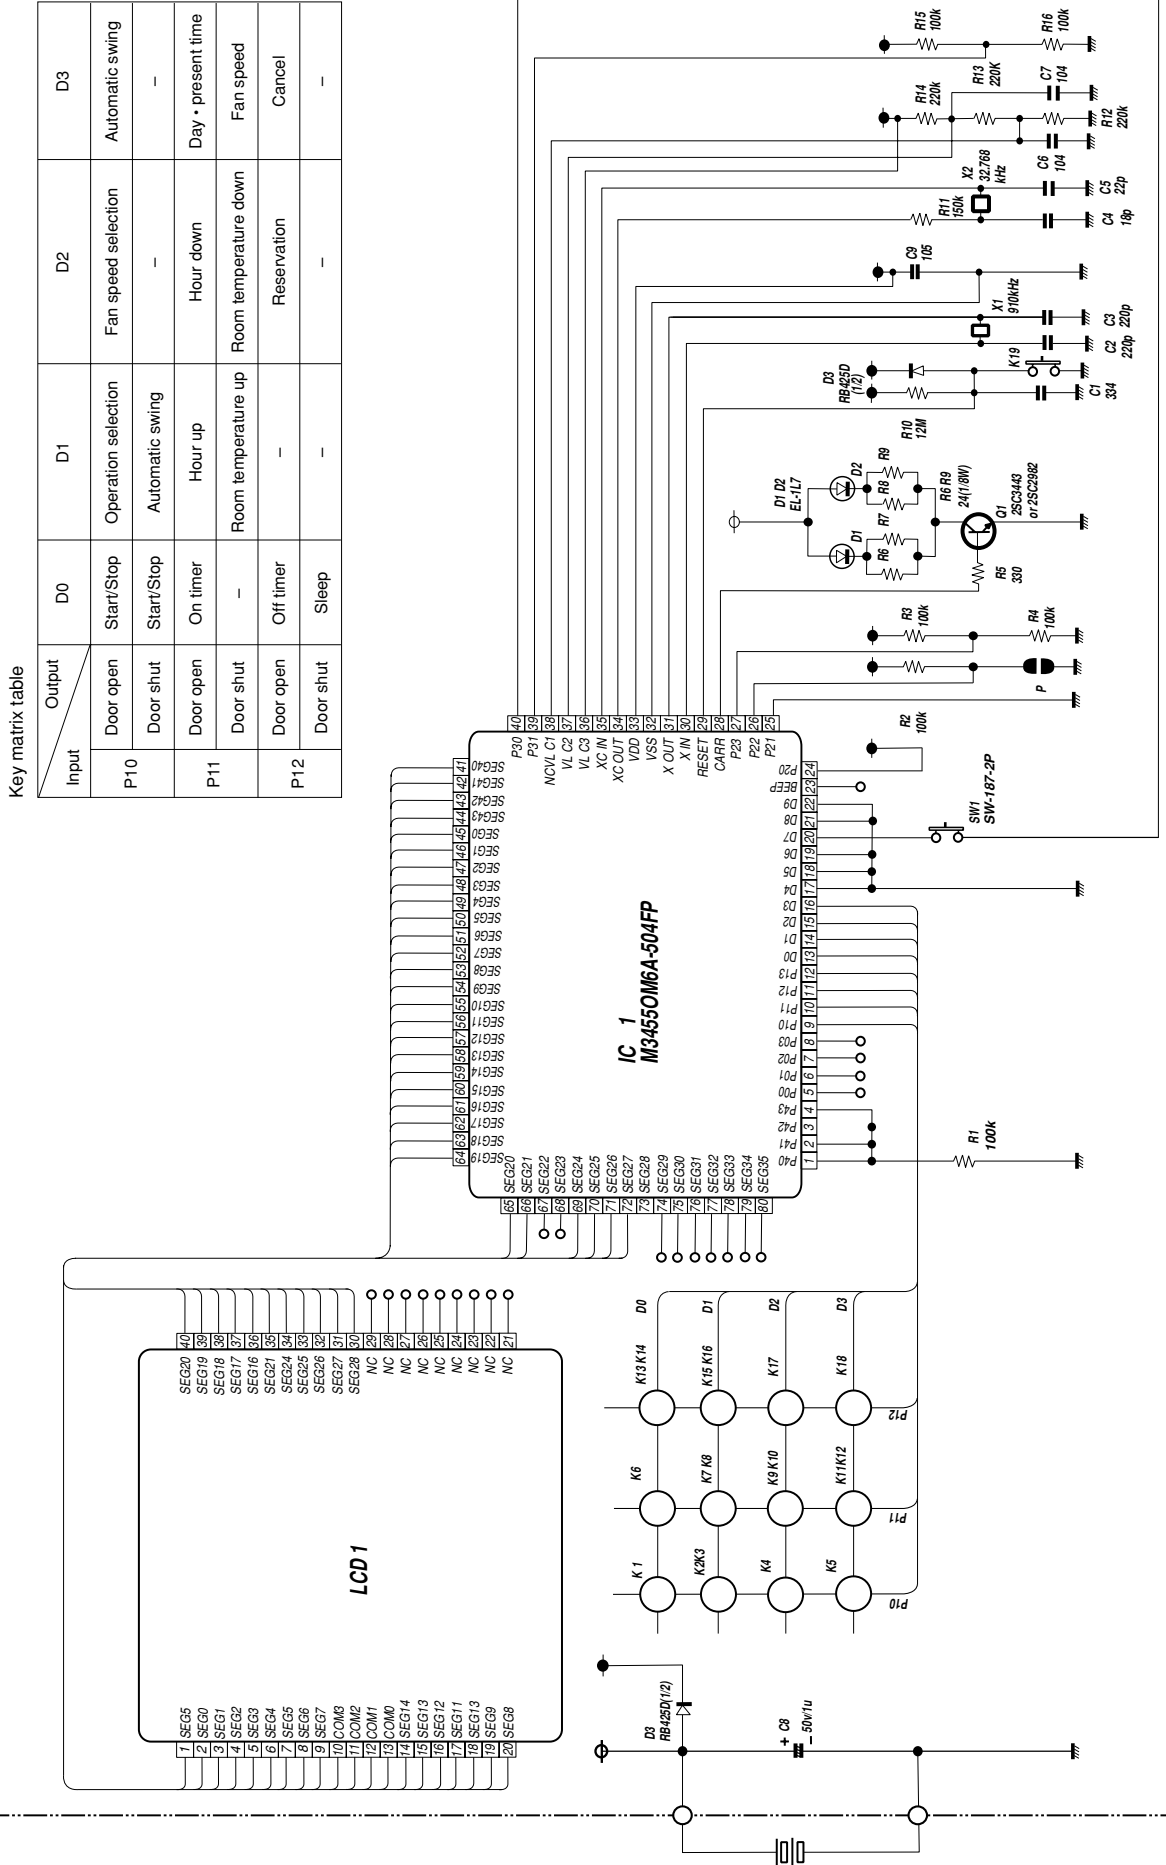

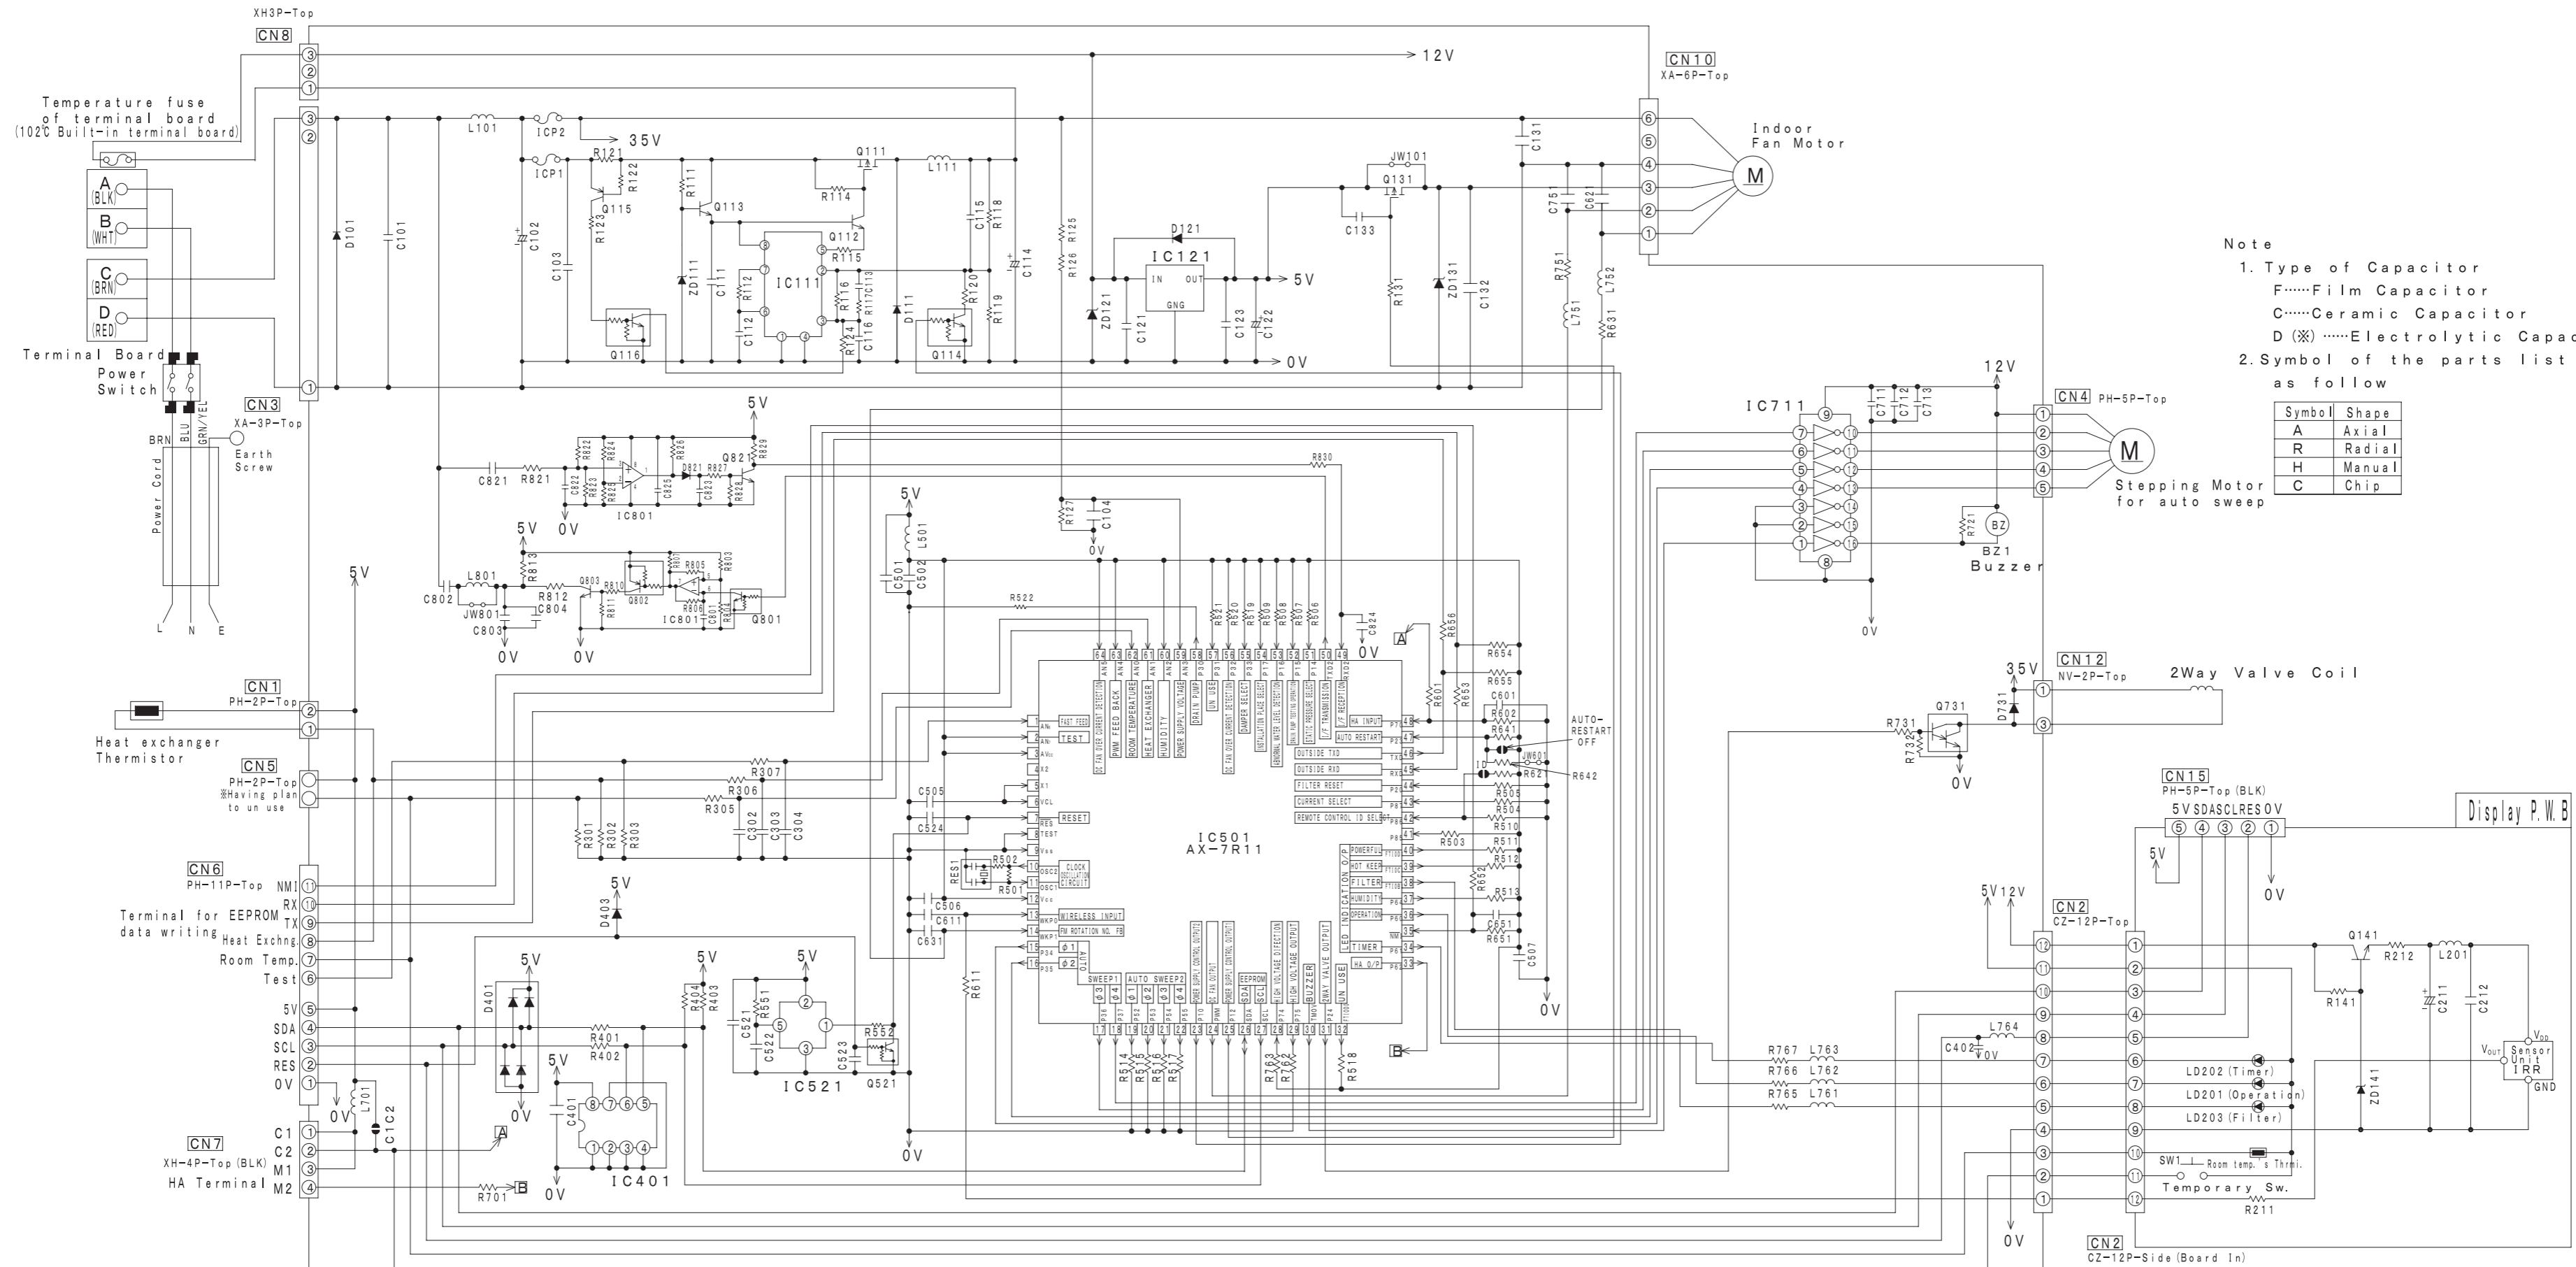

- Note
- Type of Capacitor  
 F.....Film Capacitor  
 C.....Ceramic Capacitor  
 D (X).....Electrolytic Capacitor
  - Symbol of the parts list is as follow
- | Symbol | Shape  |
|--------|--------|
| A      | Axial  |
| R      | Radial |
| H      | Manual |
| C      | Chip   |

RESISTOR

Circuit's Symbol	Numerical Value (Ω)	Accuracy (%)	Power (W)	Drawing's part's No.	Shape
R111	27K	±5%	1/10W	014	C
R112	30K	±5%	1/10W	029	C
R114	75Ω	±5%	1/8W	010	C
R401	39Ω	±5%	1/16W	027	C
R115	56Ω	±5%	1/8W	011	C
R116	—	—	—	—	—
R117	68K	±5%	1/16W	024	C
R118	75K	±2%	1/16W	021	C
R119	6.8k	±2%	1/16W	022	C
R501	1M	±5%	1/16W	041	C
R121	0.56	±5%	1/4W	008	C
R122	10Ω	±5%	1/16W	042	C
R123	33K	±5%	1/16W	043	C
R124	10Ω	±5%	1/16W	042	C
R125	30K	±5%	1/16W	029	C
R126	30K	±5%	1/16W	029	C
R127	5.1K	±5%	1/16W	040	C
R128	5.1K	±5%	1/16W	020	C
R141	2.7K	±5%	1/10W	015	C
R301	12.7K	±1%	1/16W	018	C
R302	12.7K	±1%	1/16W	018	C
R303	10K	±5%	1/16W	030	C

Capacitor

Circuit's Symbol	Numerical Value (F)	Accuracy (%)	Power (W)	Drawing's part's No.	Shape
R522	10K	±5%	1/16W	030	C
R551	10K	±5%	1/16W	041	C
R552	1K	±5%	1/16W	033	C
R600	10K	±5%	1/16W	030	C
R611	1K	±5%	1/8W	008	A
R621	1K	±5%	1/16W	033	C
R631	1K	±5%	1/8W	012	C
R641	10K	±5%	1/16W	030	C
R642	1K	±5%	1/16W	033	C
R651	1K	±5%	1/16W	030	C
R652	100K	±5%	1/16W	042	C
R653	10K	±5%	1/16W	033	C
R654	10K	±5%	1/8W	032	C
R655	10K	±5%	1/16W	030	C
R656	1K	±5%	1/16W	033	C
R701	1K	±5%	1/16W	033	C
R721	3.3K	±5%	1/16W	036	C
R731	2.7K	±5%	1/8W	007	A
R732	10K	±5%	1/16W	030	C

Transistor

Circuit's Symbol	Model	Drawing's part's No.	Shape	
C101	0.22μ	50V	F 062	R
C102	330μ	50V	F 065	R
C103	470μ	630V	C 052	C
C104	0.1μ	25V	C 045	C
C111	2.2μ	10V	C 058	C
C112	1000P	50V	C 047	C
C113	0.047μ	25V	C 056	C
C114	220μ	25V	F 066	R
C115	—	—	—	—
C116	—	—	—	—
C121	0.1μ	25V	C 045	C
C122	100μ	10V	F 068	R
C123	0.1μ	25V	C 045	C
C131	0.22μ	50V	C 046	C
C132	0.1μ	25V	C 045	C
C133	0.1μ	25V	C 045	C
C211	47μ	16V	F 069	R
C212	1μ	16V	C 049	C
C302	0.1μ	25V	C 045	C
C303	0.1μ	25V	C 045	C
C304	0.1μ	25V	C 045	C
C401	0.1μ	25V	C 045	C
C402	—	—	—	—
C501	0.1μ	25V	C 045	C
C502	0.1μ	25V	C 045	C
C505	0.1μ	25V	C 045	C
C506	0.1μ	25V	C 045	C
C521	0.1μ	25V	C 045	C
C522	0.22μ	10V	C 057	C
C523	0.1μ	25V	C 045	C
C524	0.1μ	25V	C 045	C
C601	0.1μ	25V	C 045	C
C611	1000P	50V	C 047	C
C621	—	—	—	—
C631	1000P	50V	C 047	C
C651	0.1μ	25V	C 045	C
C711	0.1μ	25V	C 045	C
C712	0.1μ	25V	C 045	C
C751	1μ	16V	C 049	C
C801	150P	50V	C 048	C
C802	0.15μ	50V	F 063	R
C803	—	—	—	—
C804	—	—	—	—
C821	0.01μ	50V	F 061	R
C822	1000P	50V	C 047	C
C823	0.047μ	25V	C 056	C
C824	0.01μ	50V	C 055	C
C825	0.1μ	25V	C 045	C

Diode

Circuit's Symbol	Model	Drawing's part's No.	Shape
Q111	2S5J518	0.76	C
Q112	2SC5209H	0.74	C
Q113	2SC5209H	0.74	C
Q114	RN1102	0.78	C
Q115	2SA1162V	0.79	C
Q116	RN1102	0.78	C
Q131	—	—	—
Q141	2SC2462LC	0.71	C
Q521	RN1102	0.78	C
Q731	—	—	—

LED

Circuit's Symbol	Model	Drawing's part's No.	Shape
LD201	HLMF-K305	133	H
LD202	HLMF-K405	134	H
LD203	HLMF-K505	135	H
LD204	HLMF-K305	133	H
LD205	HLMF-K405	134	H
LD206	HLMF-K505	135	H
LD207	HLMF-K305	133	H
LD208	HLMF-K405	134	H
LD209	HLMF-K505	135	H

LED

Circuit's Symbol	Model	Drawing's part's No.	Shape
LD201	HLMF-K305	133	H
LD202	HLMF-K405	134	H
LD203	HLMF-K505	135	H
LD204	HLMF-K305	133	H
LD205	HLMF-K405	134	H
LD206	HLMF-K505	135	H
LD207	HLMF-K305	133	H
LD208	HLMF-K405	134	H
LD209	HLMF-K505	135	H

Diode

Circuit's Symbol	Model	Drawing's part's No.	Shape
D101	DSM3MA2	0.91	C
D111	D1FS6	0.92	C
D121	1SS355	0.95	C
D401	HN1D03FU	0.93	C
D403	1SS355	0.95	C
D731	—	—	—
D821	1SS355	0.95	C

IC

Circuit's Symbol	Model	Drawing's part's No.	Shape
IC111	NJM2340M	0.82	C
IC121	LF50CDT	0.83	C
IC401	S-24C04BFU	0.84	C
IC501	H06430685A20H (AX-7R11)	0.87	C
IC521	RNSVD42C	0.89	C
IC711	ULN2003ANS	0.90	C
IC801	NJM2903M	0.85	C

Coil

Circuit's Symbol	Numerical Value	Rating (A)	Drawing's part's No.	Shape
L111	560μ	0.6A	113	H
L201	BUM1601S	0.2A	110	C
L501	1608CJ	—	025	C
L701	BUM1601S	0.2A	110	C
L751	1608CJ	—	025	C
L761	1608CJ	—	025	C
L762	1608CJ	—	025	C
L763	1608CJ	—	025	C
L764	1608CJ	—	025	C
L801	100μ	55mA	111	C

Connector

Circuit's Symbol	Model	Drawing's part's No.	Shape
CN1	PH-2P-Top	116	H
CN2	C2-12P-Top	117	H
CN3	XA-3P-Top	118	H
CN4	PH-5P-Top	119	H
CN5	PH-2P-Top	120	H
CN6	PH-11P-Top	121	H
CN7	XH-4P-Top	122	H
CN8	XH-3P-Top	125	H
CN10	XA-6P-Top	122	H
CN12	—	—	—
CN15	PH-5P-Top (BLK)	124	H






# PRINTED WIRING BOARD LOCATION DIAGRAM


MODEL RAS-18YH4

MAIN P.W.B.  
MARKING ON P.W.B.

COMPONENT SIDE

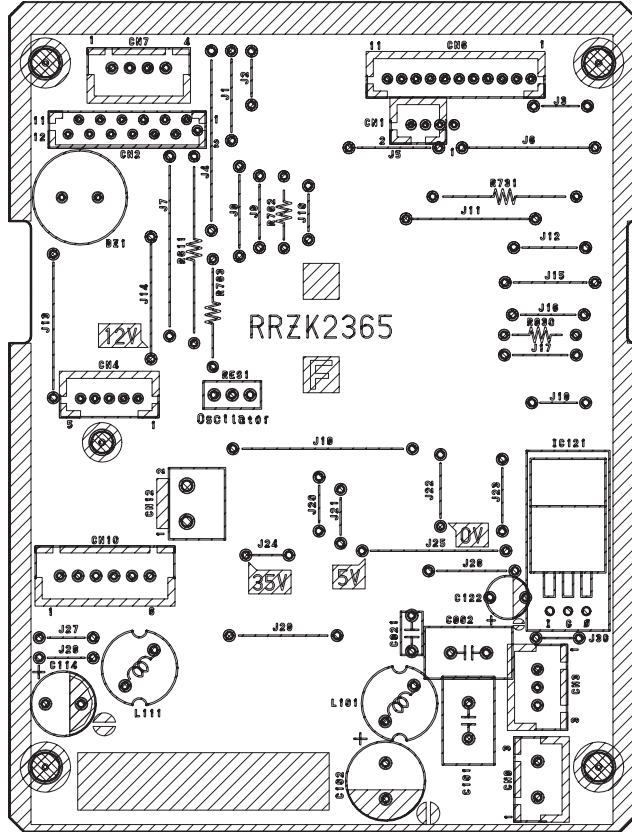


SOLDERING SIDE

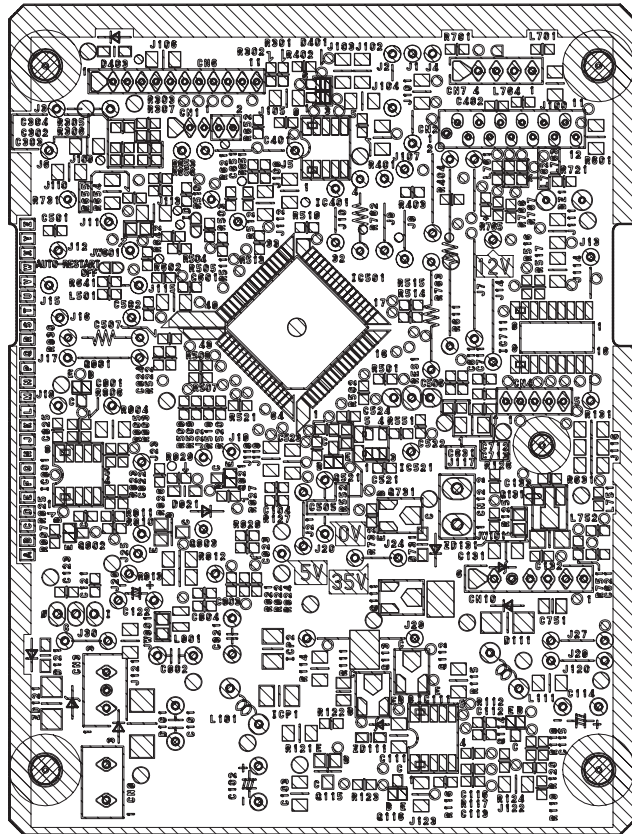




MODEL RAS-18YH4  
 RECEIVING P.W.B.  
 MARKING ON P.W.B.

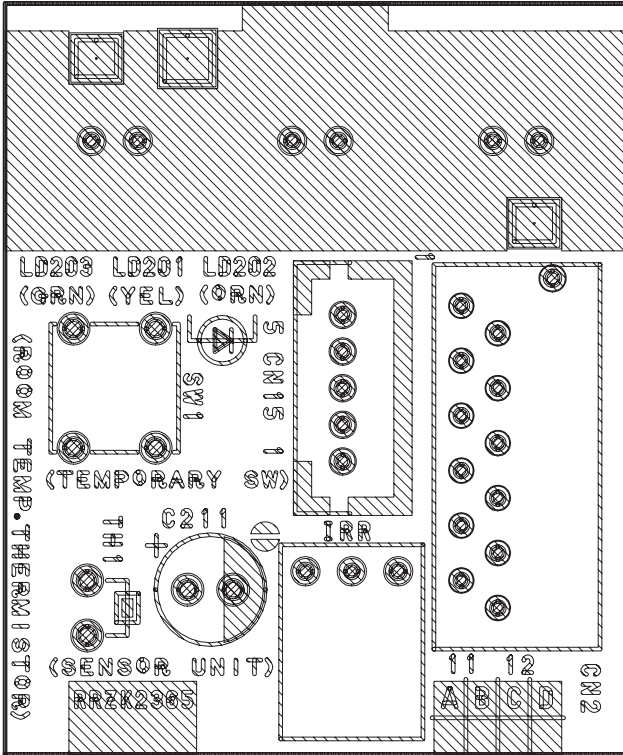


COMPONENT SIDE

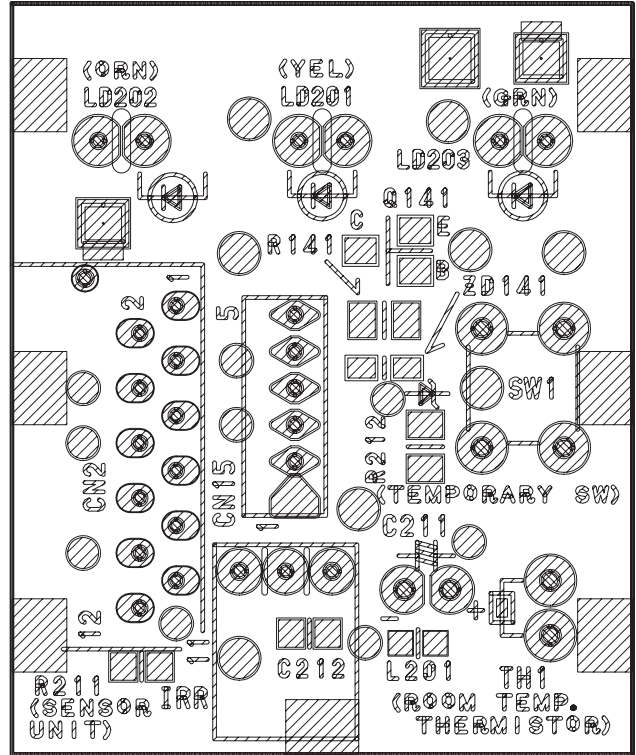

SOLDERING SIDE

MODEL RAC-18YH4  
 POWER P.W.B.  
 MARKING ON P.W.B.


COMPONENT SIDE

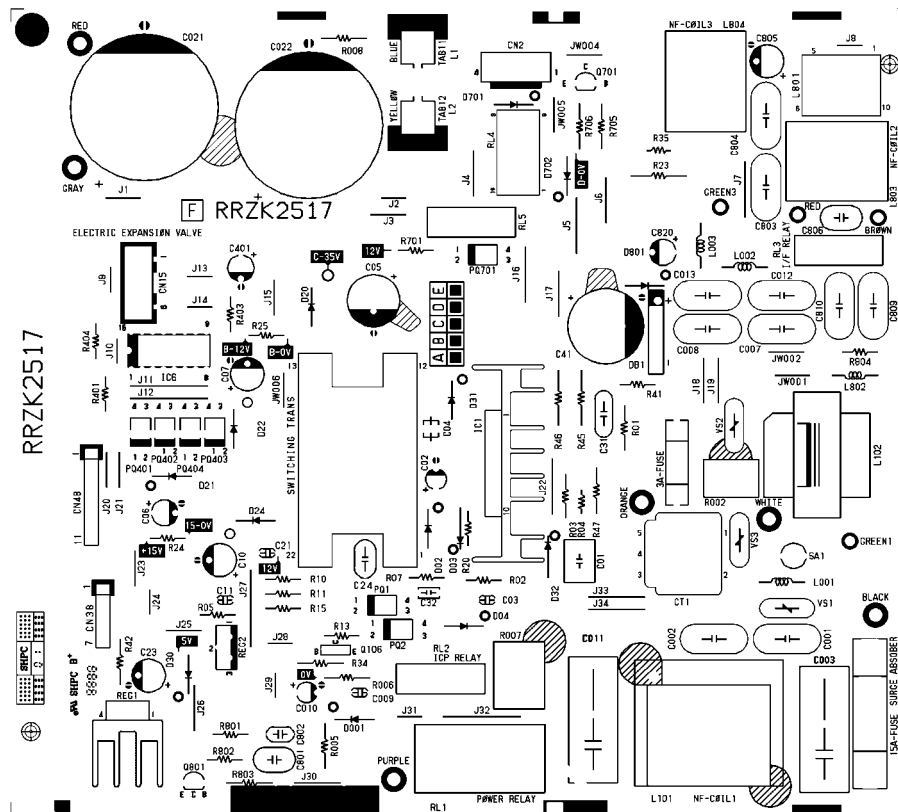


MODEL RAC-18YH4

MAIN P.W.B.

MARKING ON P.W.B.

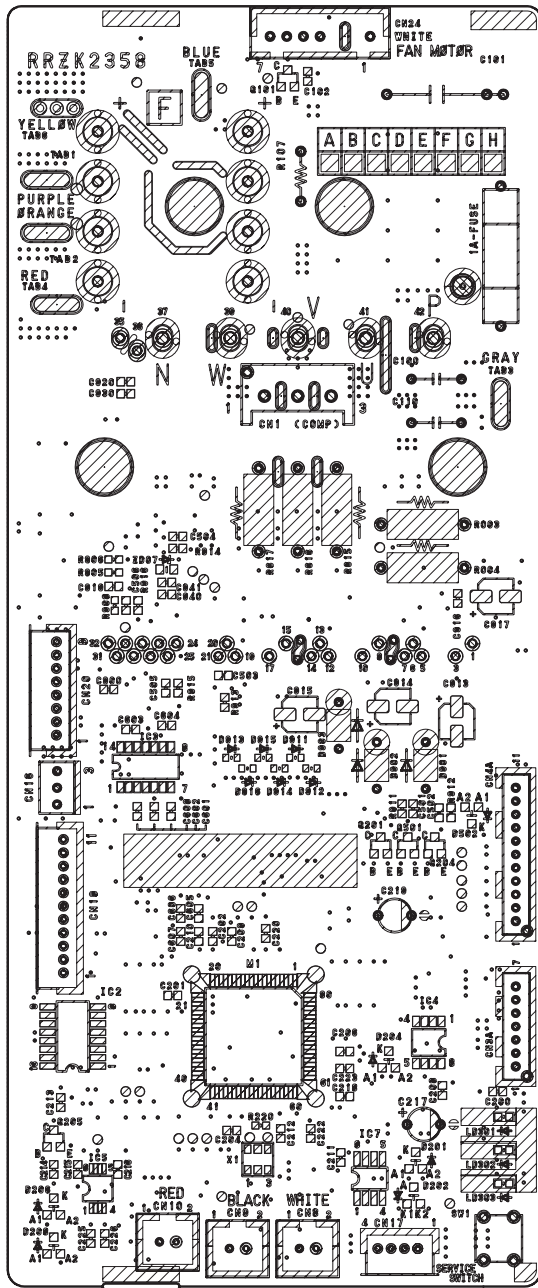


COMPONENT SIDE

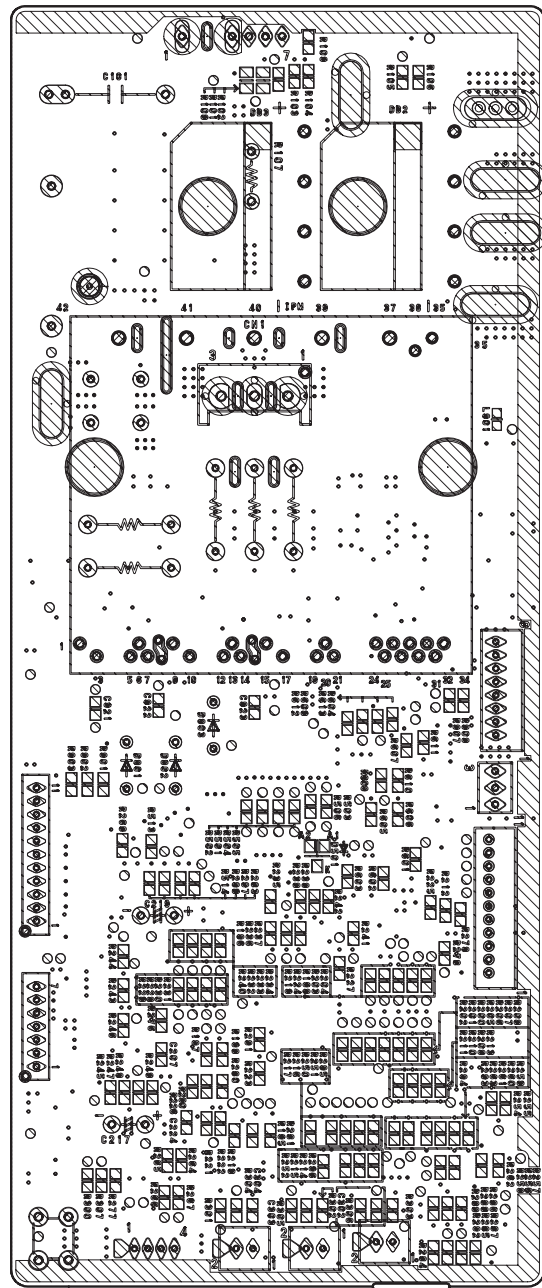

SOLDERING SIDE

# BLOCK DIAGRAM

MODEL RAS-18YH4 / RAC-18YH4

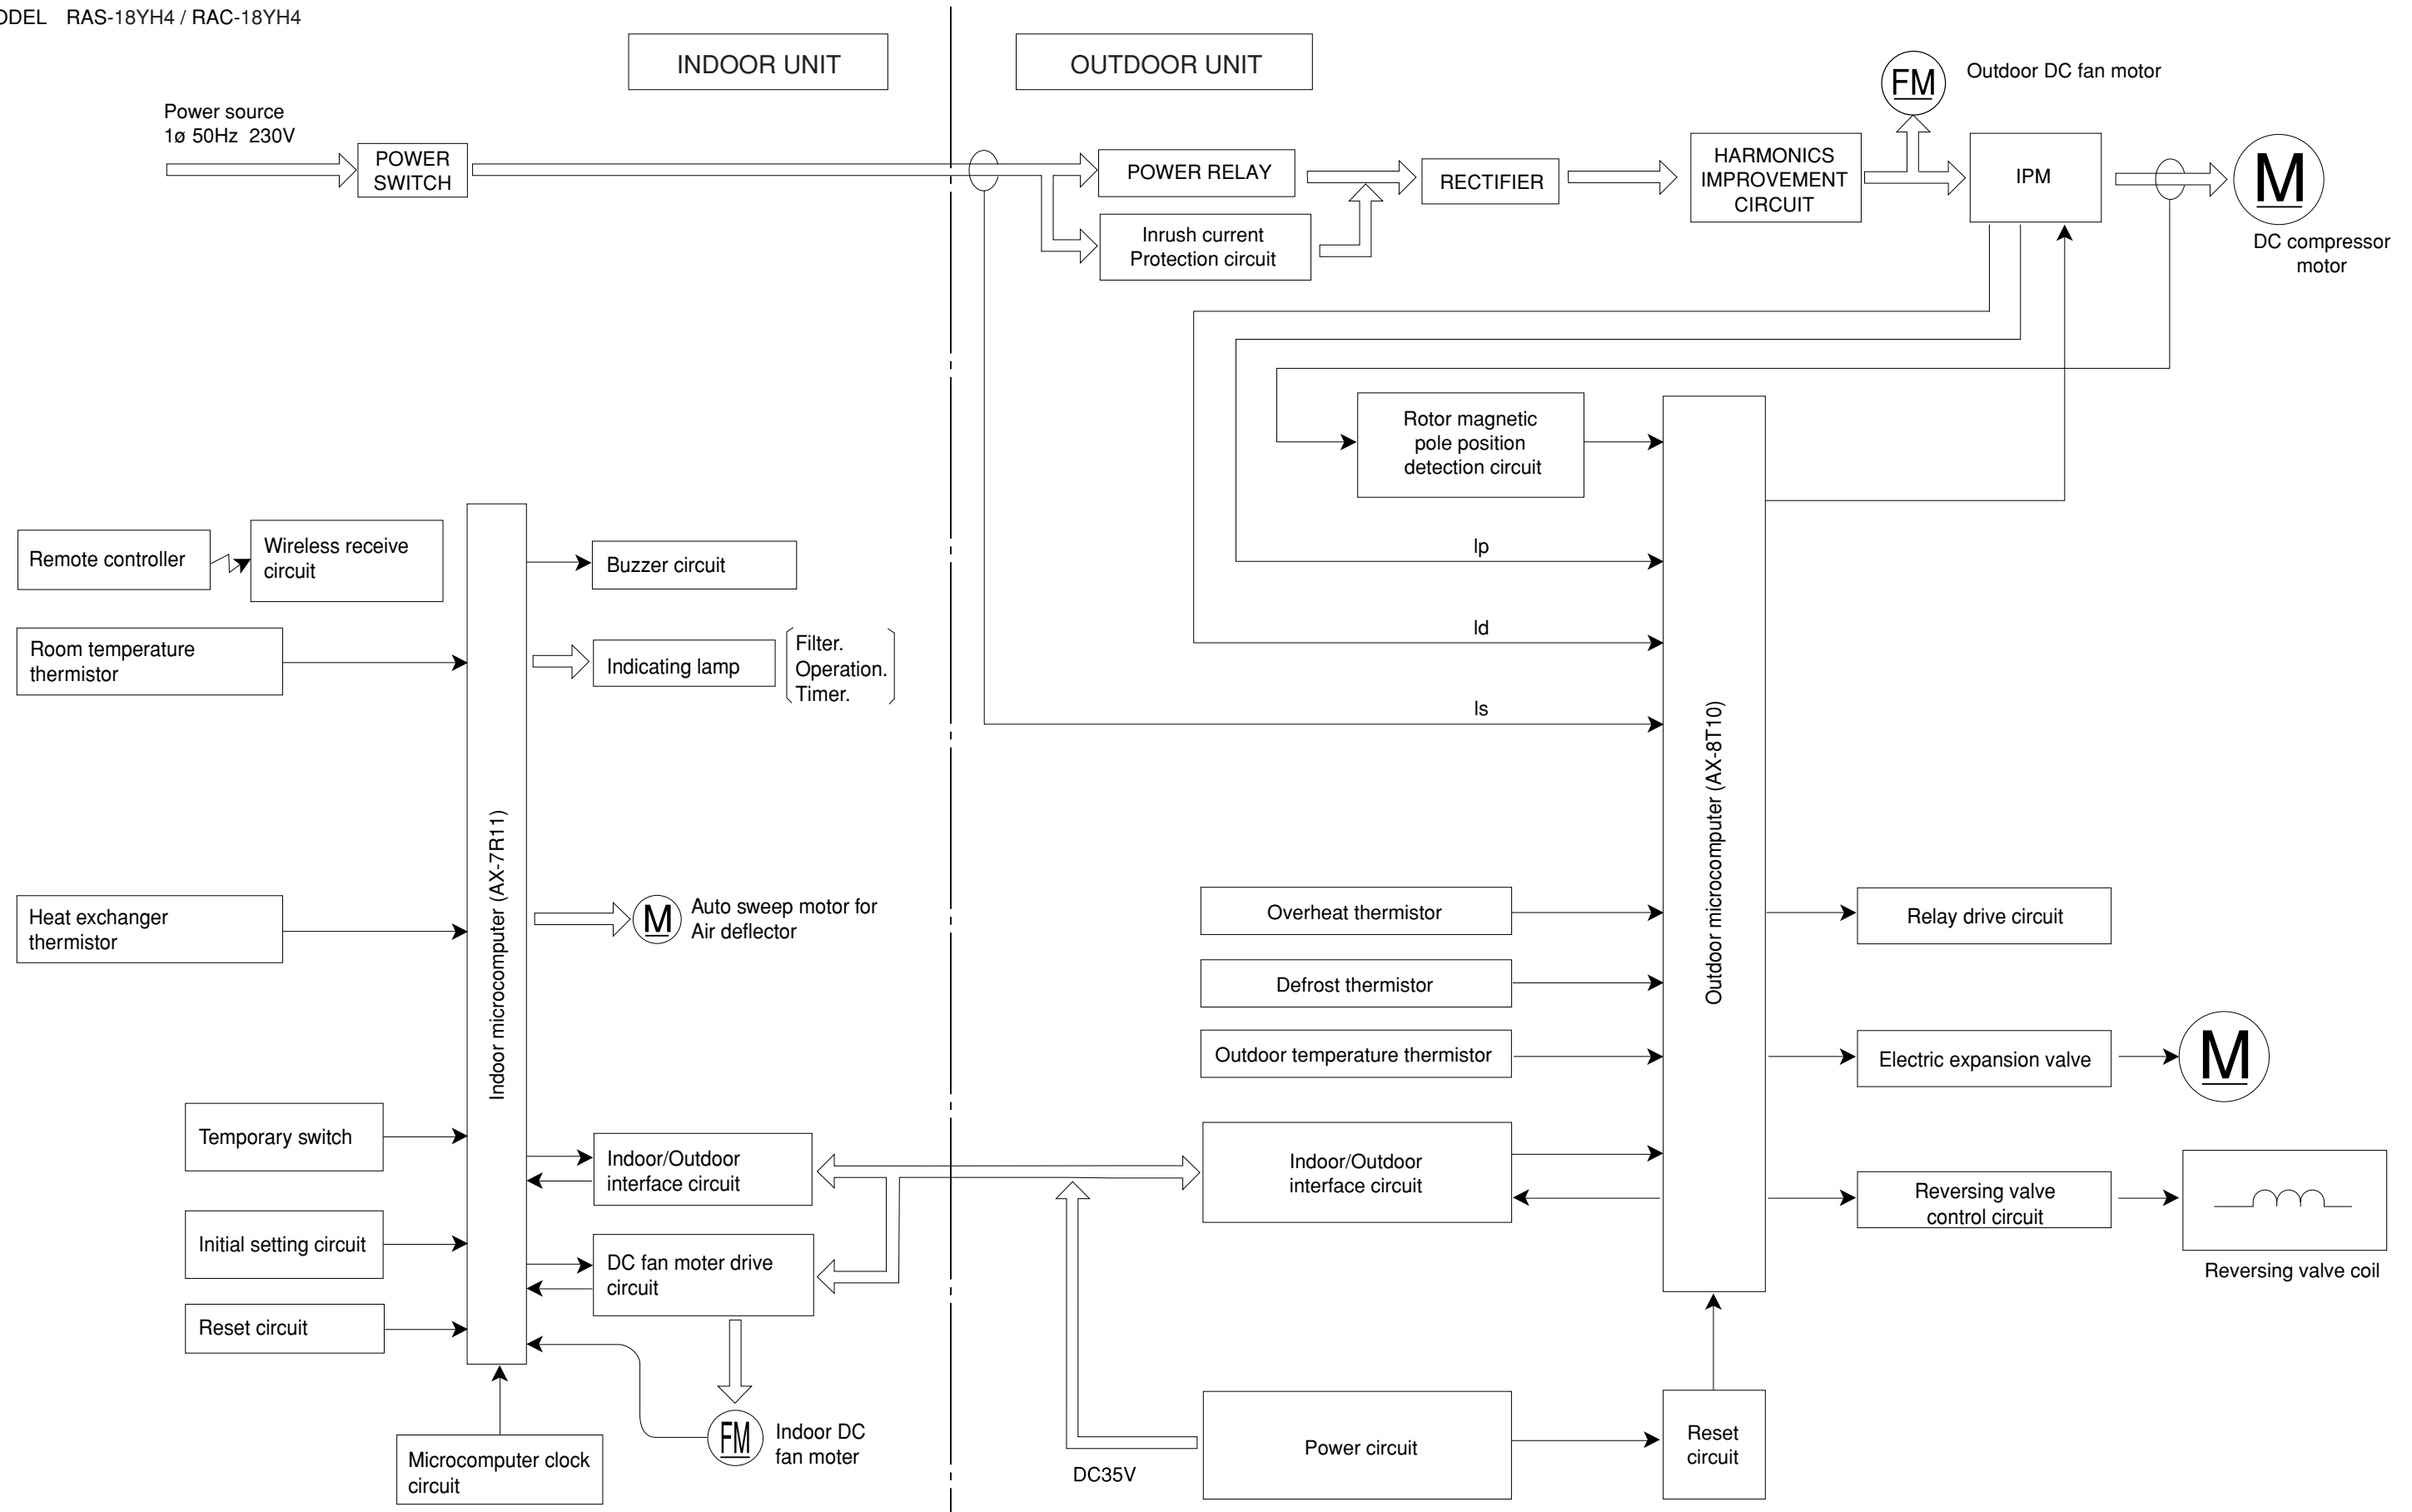



# BASIC MODE


MODEL RAS-18YH4

Operation mode	Fan	Cooling	Dehumidifying (dehumidifying operation by the function select button only, not including that engaged by the dehumidify button)	Heating	auto	
Basic operation of start/stop button						
Timer functions	Off-timer					
	On-timer					
	Off -> On On -> Off timer					
Fan speed mode (indoor fan)	Auto	<p>Changes from "Hi" to "Med" or "Lo" depending on room temperature.</p> <ol style="list-style-type: none"> <li>Runs at "Hi" until first thermo off after operation is started.</li> <li>Runs at "Lo" when thermo is off.</li> </ol>		<p>Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, time and heat exchange temperature. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).</p> <p>When the compressor is running at maximum speed during hot dash or when recovered from defrosting.</p> <p>In modes other than left</p>	<p>Operating mode is judged by room temperature and outdoor temperature.</p> <p>(1) Judging by outdoor temperature Operating mode is judged by outdoor temperature. Only when the mode is not restricted by this judgment, the judgment by room temperature in the next paragraph will be performed.</p> <p>(a) Outdoor temperature <math>\geq 27^\circ\text{C}</math> : Restricted to cooling (b) Outdoor temperature <math>\leq 16^\circ\text{C}</math> : Restricted to heating</p> <p>(2) Judging by room temperature Operating mode at start up is judged (initial judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> <li>When auto operation is started after 1 hour has elapsed since the operation was stopped.</li> <li>When auto operation is started after the previous manual mode operation.</li> <li>When the operating mode is switched to auto while operating at manual mode.</li> </ul> <p>(b) Judging method</p> <ul style="list-style-type: none"> <li>Room temperature <math>\geq 25^\circ\text{C} \pm 3^\circ\text{C}</math> : Cooling</li> <li>Room temperature <math>&lt; 25^\circ\text{C} \pm 3^\circ\text{C}</math> : Heating</li> </ul> <p>※ <math>\pm 3^\circ\text{C}</math> is the fine adjustment value from the remote controller.</p> <p>Judging operating mode change during operation (Continuous judgment)</p> <p>(a) Conditions for judgment (any of the followings)</p> <ul style="list-style-type: none"> <li>The mode is reviewed at every interval time.</li> <li>When auto operation is started again before 1 hour has elapsed since the operation was stopped.</li> </ul> <p>(b) Judging method</p> <ul style="list-style-type: none"> <li>Judge by setting the hysteresis on the final preset temperature.</li> </ul> <p>The final preset temperature is the actually targeted preset temperature which is the sum of the basic preset temperature and each type of shift value (e.g. <math>\pm 3^\circ\text{C}</math> by remote controller, preset temperature correction value, powerful shift value, etc.)</p> <p>[Currently cooling]</p> <ul style="list-style-type: none"> <li>Room temperature <math>\leq</math> Final preset temperature <math>-2^\circ\text{C}</math> Change to heating</li> <li>Room temperature <math>&gt;</math> Final preset temperature <math>-2^\circ\text{C}</math> Continue cooling</li> </ul> <p>[Currently heating]</p> <ul style="list-style-type: none"> <li>Room temperature <math>\geq</math> Final preset temperature <math>+3^\circ\text{C}</math> Change to cooling</li> <li>Room temperature <math>&lt;</math> Final preset temperature <math>+3^\circ\text{C}</math> Continue heating</li> </ul>	
	Hi	Operates at "Hi" regardless of the room temperature.	Set to "ultra-Hi" when the compressor runs at maximum speed, and to "Hi" in other modes.			Set to "ultra-Lo", "Lo", "Med", "Hi", "ultra-Hi" or "stop" depending on the room temperature, and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). Set to "ultra-Hi" when the compressor is running at maximum speed during hot dash or when recovered from defrosting.
	Med	Operates at "Med" regardless of the room temperature.	Same as at left.			Set to "ultra-Lo", "Lo", "Med" or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C).
	Lo	Operates at "Lo" regardless of the room temperature.	Same as at left.	Set to "Lo" in modes other than when the compressor stops.		Set to "ultra-Lo", "Lo", or "stop" depending on the room temperature and time. Set to "stop" if the room temperature is 18°C in the "ultra-Lo" mode other than during preheating (cooling is recovered at 18.33°C). The fan speed is controlled by the heat exchanger temperature; the overload control is executed as in the following diagram:
Basic operation of temperature controller	<p>Performs only fan operation at the set speed regardless of the room temperature.</p>	See page 31.	See page 33.	See page 35.		
Sleep operation (with sleep button ON)	<ul style="list-style-type: none"> <li>Enters sleep operation after set as on the left.</li> <li>Action during sleep operation Lo (sleep) operation</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left</li> <li>See page 33.</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left</li> <li>See page 33.</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left</li> <li>See page 37.</li> </ul>	<ul style="list-style-type: none"> <li>Same as at left.</li> <li>Performs the sleep operation of each operation mode.</li> </ul>	

**Table 1 Mode data file**

	<b>RAS-18YH4</b>
<b>LABEL NAME</b>	<b>VALUE</b>
WMAX	3500 min <sup>-1</sup>
WMAX2	3500 min <sup>-1</sup>
WSTD	2950 min <sup>-1</sup>
WBEMAX	2900 min <sup>-1</sup>
CMAX	3300 min <sup>-1</sup>
CMAX2	3300 min <sup>-1</sup>
CSTD	2500 min <sup>-1</sup>
CKYMAX	2500 min <sup>-1</sup>
CJKMAX	2500 min <sup>-1</sup>
CBEMAX	2500 min <sup>-1</sup>
WMIN	2500 min <sup>-1</sup>
CMIN	2500 min <sup>-1</sup>
STARTMC	90 Seconds
DWNRATEW	80%
DWNRATEC	60%
SHIFTW	2.00°C
SHIFTC	1.33°C
CLMXTP	30.00°C
YNEOF	25.00°C
TEION	5.00°C
TEIOF	9.00°C
SFTDSW	1.00°C
DFTIM1	43 Minutes
DFTIM2	60 Minutes

## Basic Cooling Operation

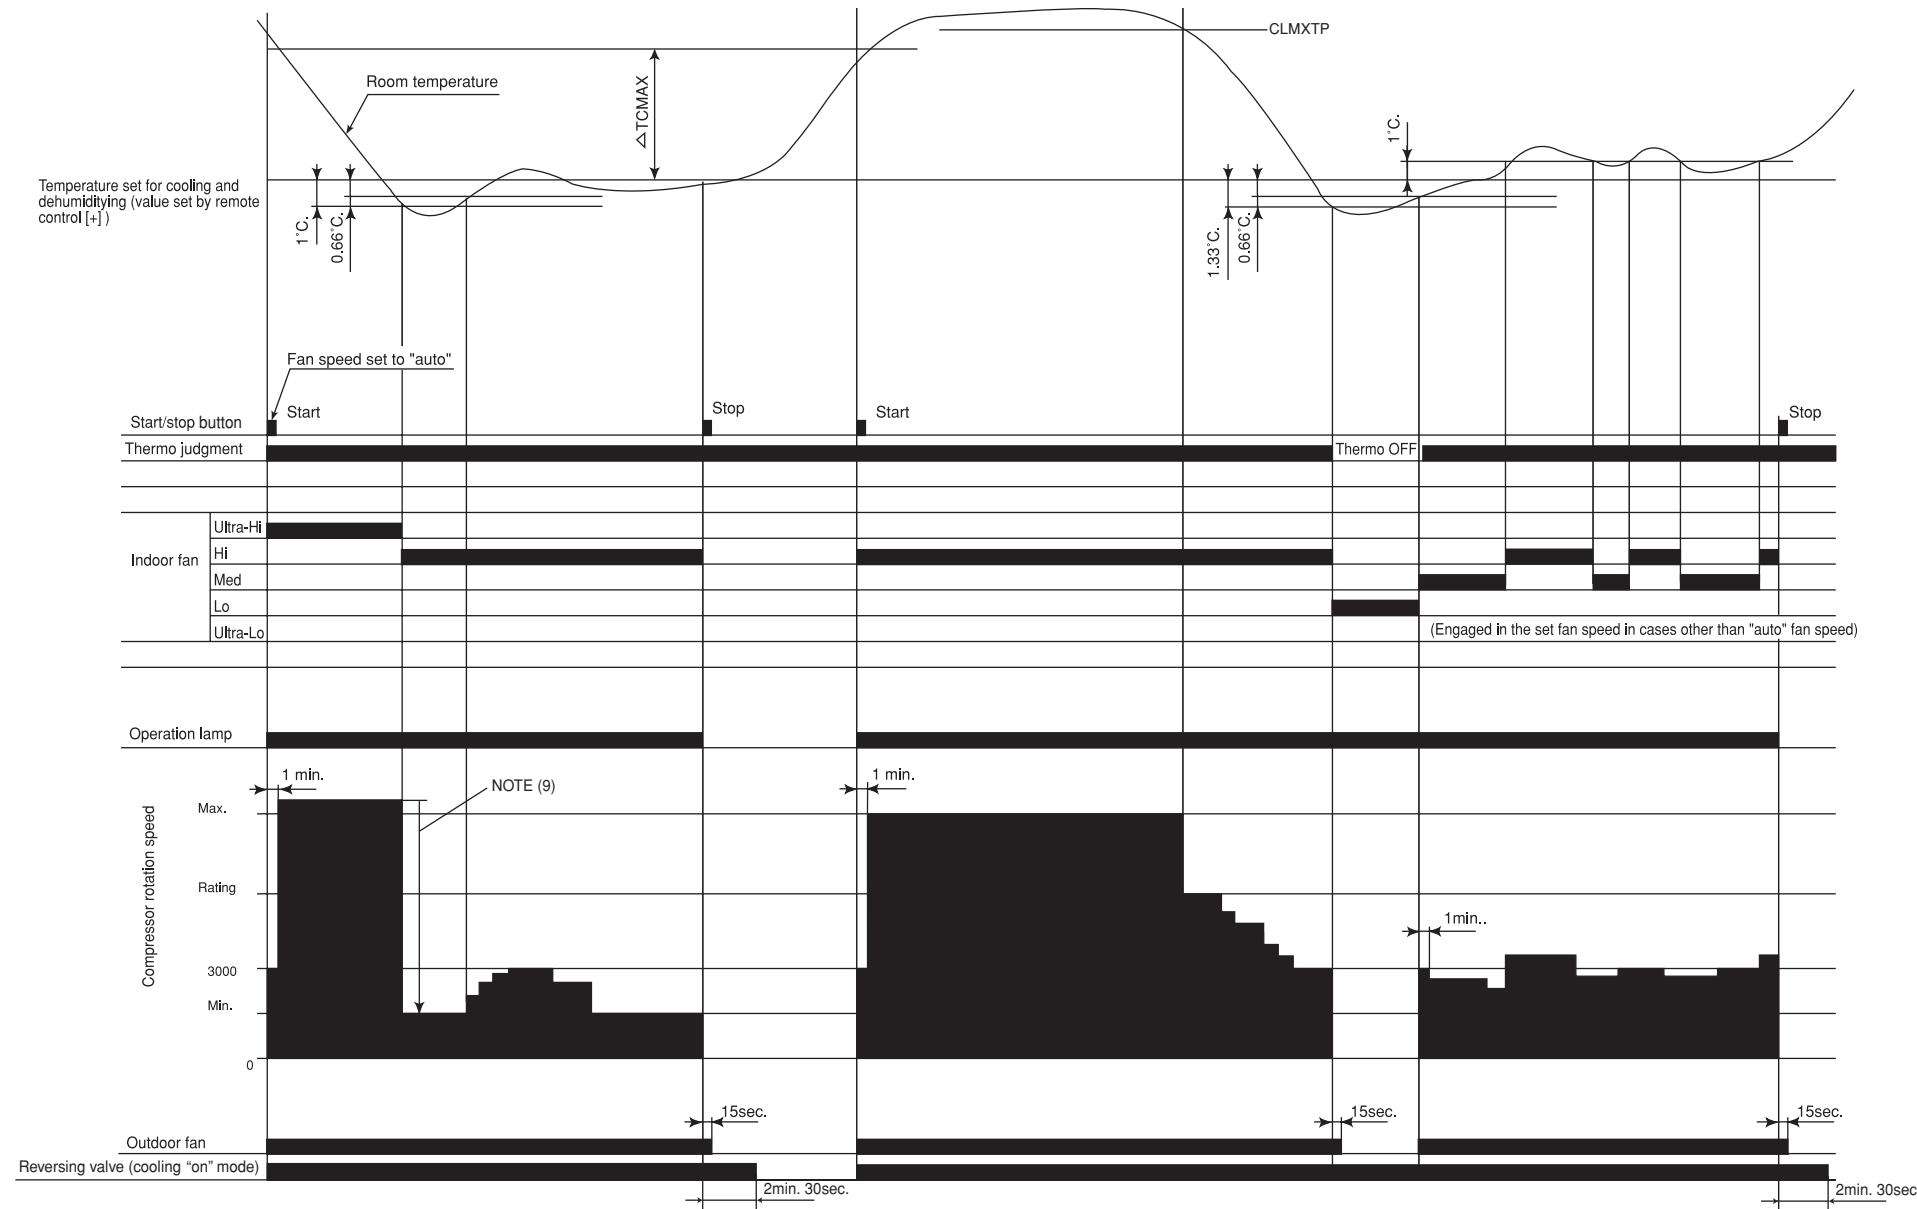

**Notes:**





- (1) Condition for entering into Cool Dashed mode. When fan set to "Hi" or "Auto mode" and temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 2) larger than CMAX.
- (2) Cool Dashed will release when i) a maximum 25 minutes is lapsed and ii) room temperature is lower than set temperature  $-3^{\circ}\text{C}$  (thermo off) and iii) when room temperature has achieved setting temperature  $-1^{\circ}\text{C}$  then maximum Cool Dashed time will be revised to 20 minutes. And iv) indoor fan is set to Lo and Med fan mode and v) change operation mode.
- (3) During Cool Dashed operation, thermo off temperature is set temperature (with shift value)  $-3^{\circ}\text{C}$ . After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal cooling mode, compressor maximum rpm CMAX will maintain for 60 minutes if indoor temperature is lower than CLMXTP. No time constrain if indoor temperature is higher than CLMXTP.
- (6) When fan speed setting on remote control is "Hi" or "Auto" mode, and both room and outdoor temperatures (data based on out door unit) meet temperature judgment (Off) shown in the table 1, the compressor rpm will be limited to CKYMAX.
- (7) When fan is set to "Med", compressor rpm will be limited to CJKMAX.
- (8) When fan is set to "Lo", compressor rpm will be limited to CBEMAX.
- (9) During Cool Dashed, when room temperature reaches set temperature  $-1^{\circ}\text{C}$  compressor rpm is actual rpm x DWNRATEC.

Table 1 Thermo judgment

		Item	Temperature
Room temperature	Thermo judgment (ON)		$30^{\circ}\text{C}$
	Thermo judgment (OFF)		$32^{\circ}\text{C}$
Outdoor temperature	Thermo judgment (ON)		$32^{\circ}\text{C}$
	Thermo judgment (OFF)		$33^{\circ}\text{C}$

Table 2 Compressor rpm

Calculated compressor rpm	Temperature difference (with shift value)
$2500\text{ min}^{-1}$	$1.66^{\circ}\text{C}$
$3000\text{ min}^{-1}$	$2.00^{\circ}\text{C}$
$3500\text{ min}^{-1}$	$2.33^{\circ}\text{C}$
$4000\text{ min}^{-1}$	$2.66^{\circ}\text{C}$

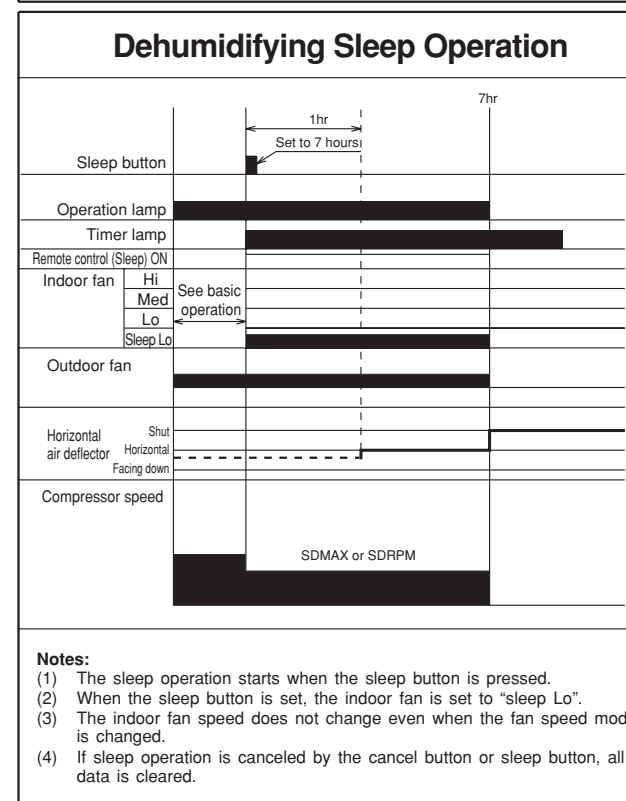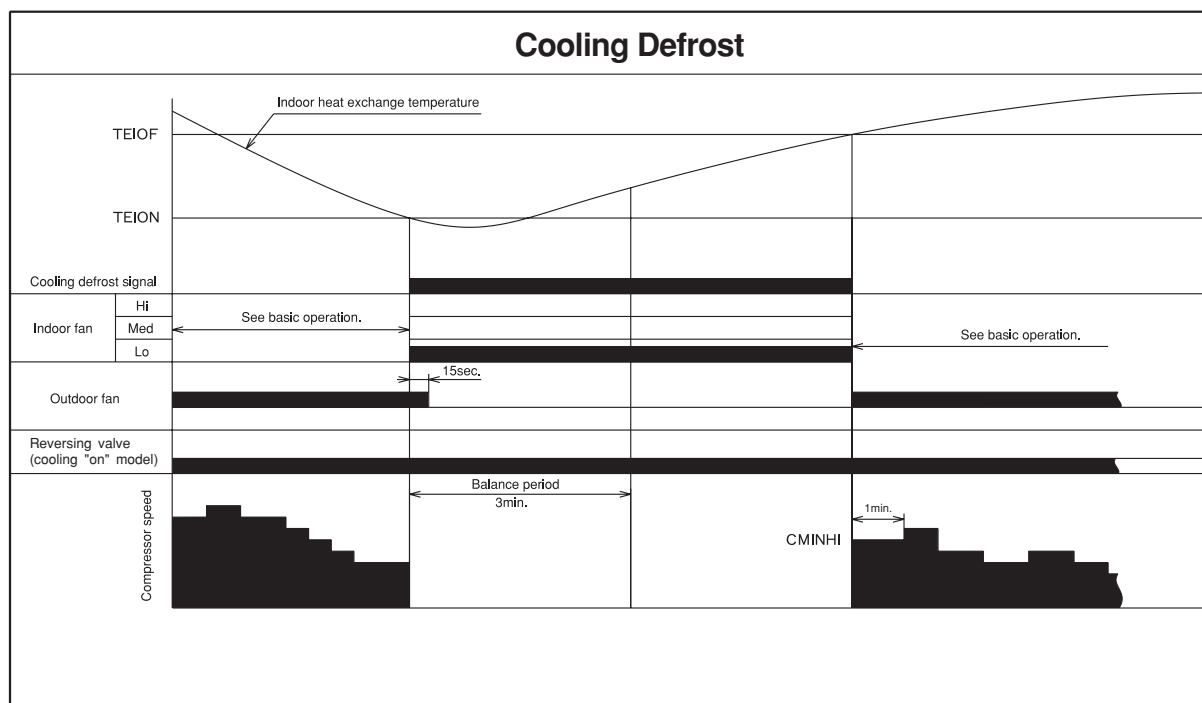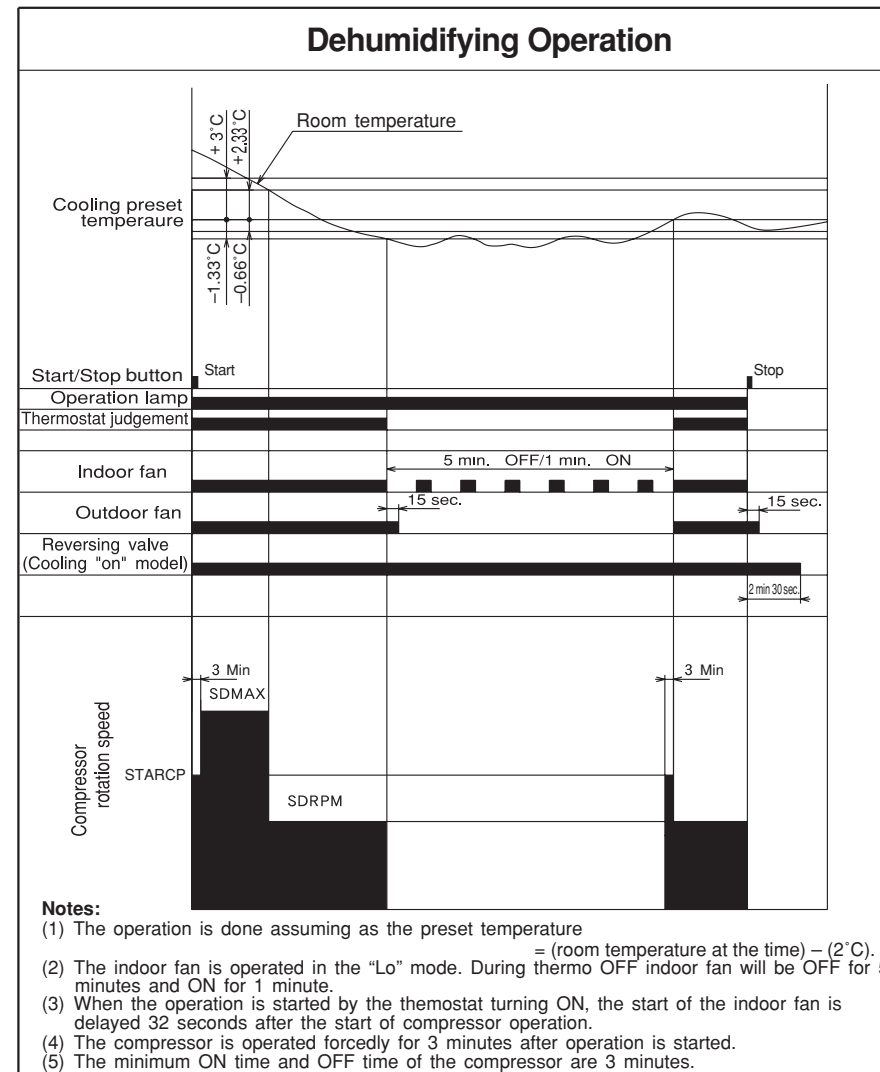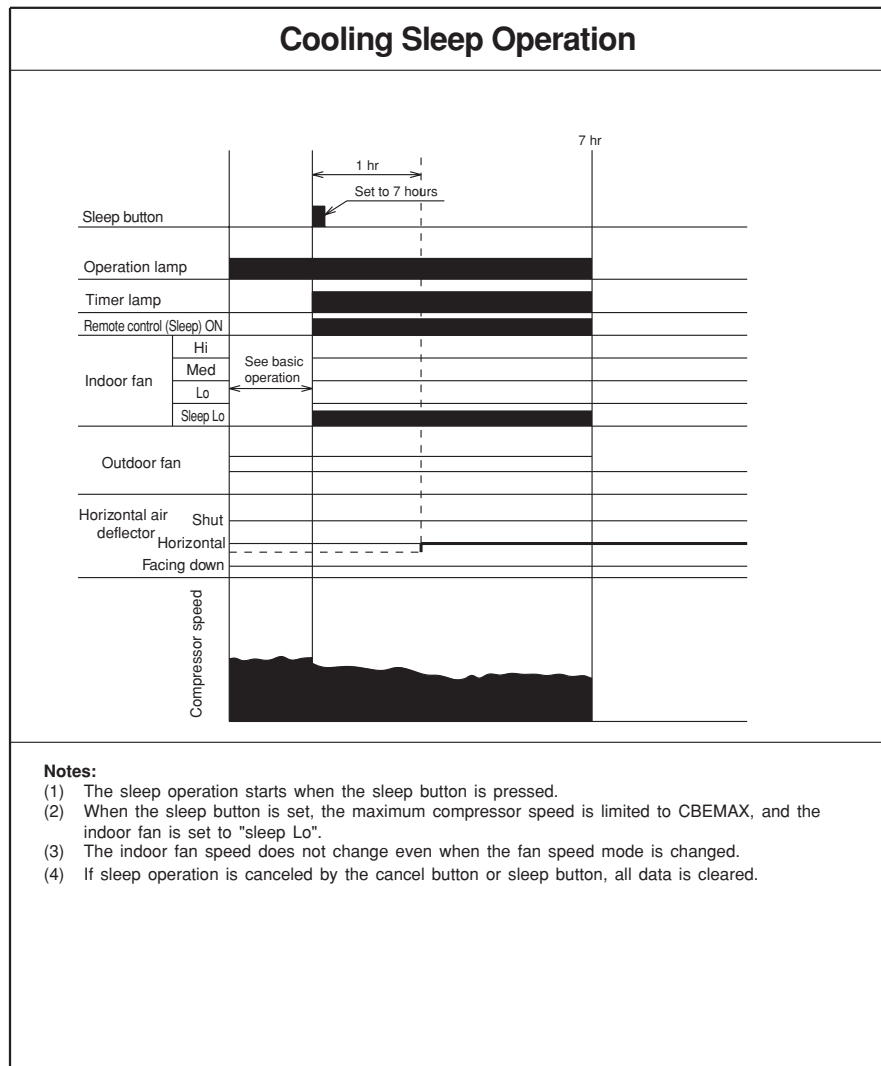

## Basic Heating Operation

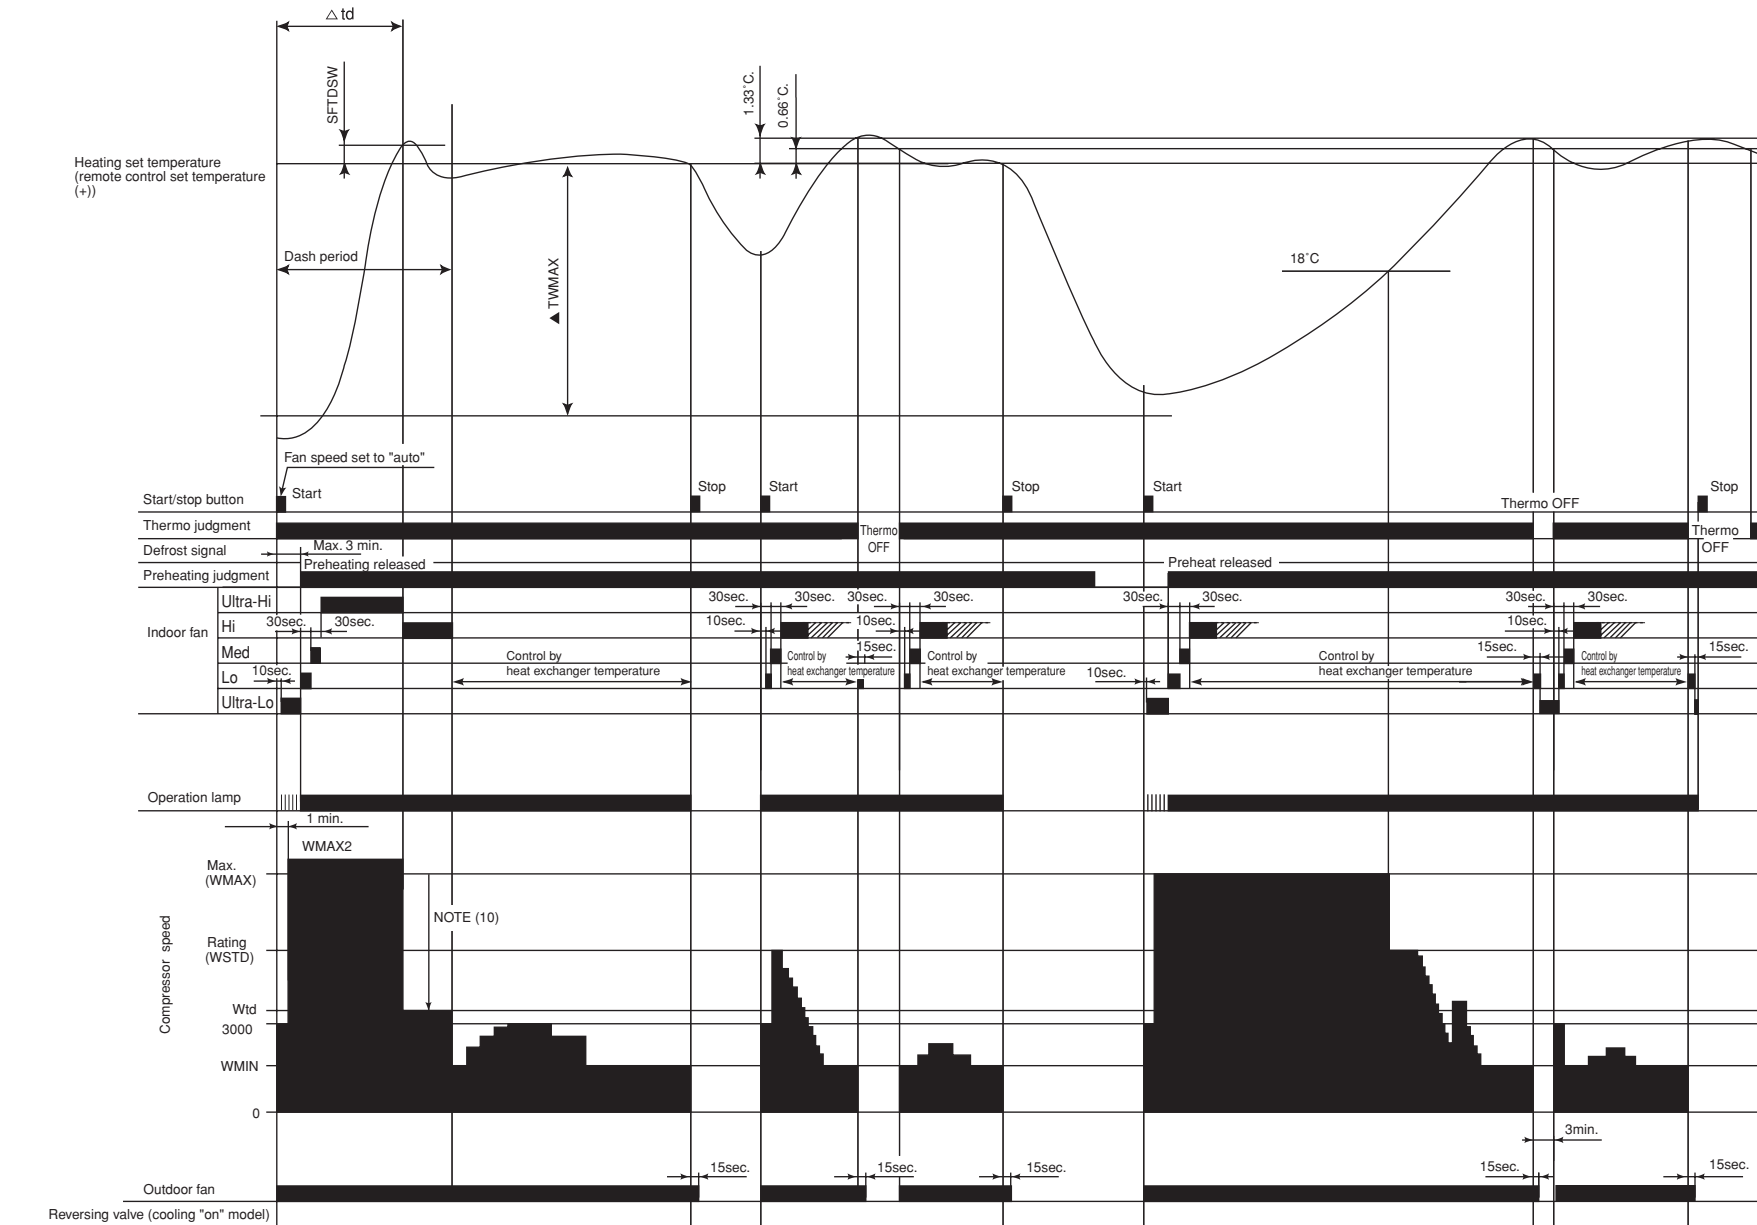



Table 3 Compressor rpm

Calculated compressor rpm	Temperature difference (with shift value)
1900 min <sup>-1</sup>	1.66°C
2400 min <sup>-1</sup>	2.00°C
2900 min <sup>-1</sup>	2.33°C
3400 min <sup>-1</sup>	2.66°C
3900 min <sup>-1</sup>	3.00°C
4400 min <sup>-1</sup>	3.33°C
4900 min <sup>-1</sup>	3.66°C

**Notes:**


- (1) Condition for entering into Hot Dashed mode. When fan set to "Hi" or "Auto mode" and i) Indoor temperature is lower than 18°C, and ii) outdoor temperature is lower than 10°C, and iii) Temperature difference between indoor temperature and set temperature has a corresponding compressor rpm (calculated value in Table 3) larger than WMAX.
- (2) Hot Dashed will release when i) Room temperature has achieved the set temperature + SFTDSW. ii) Thermo off.
- (3) During Hot Dashed operation, thermo off temperature is set temperature (with shift value) +3°C. After thermo off, operation continue in Fuzzy control mode.
- (4) Compressor minimum "ON" time and "OFF" time is 3 minutes.
- (5) During normal heating mode, compressor maximum rpm WMAX will maintain for 120 minutes if indoor temperature is higher than 18°C. No time limit constrain if outdoor temperature is lower than 4°C.
- (6) During Hotkeep or Defrost mode, indoor operation lamp will blink at interval of 0.5 seconds "ON" and 0.5 second "OFF".
- (7) When heating mode starts, it will enter into Hotkeep mode if indoor heat exchanger temperature is lower than YNEOF + 0.33°C.
- (8) When fan is set to "Lo", compressor rpm will be limited to WBEMAX. When fan is set to "Med", compressor rpm will be limited to WJKMAX.
- (9) In "Ultra-Lo" fan mode, if indoor temperature is lower than 18°C, indoor fan will stop. If indoor temperature is higher than 18°C + 0.33°C, fan will continue in "Ultra-Lo" mode. During Hotkeep or Defrost mode, fan will continue in "Ultra-Lo" mode.
- (10) During Hot Dashed, when room temperature reaches set temperature + SFTDSW compressor rpm is actual rpm x DWNRATEW.

## Reversing Valve Defrosting

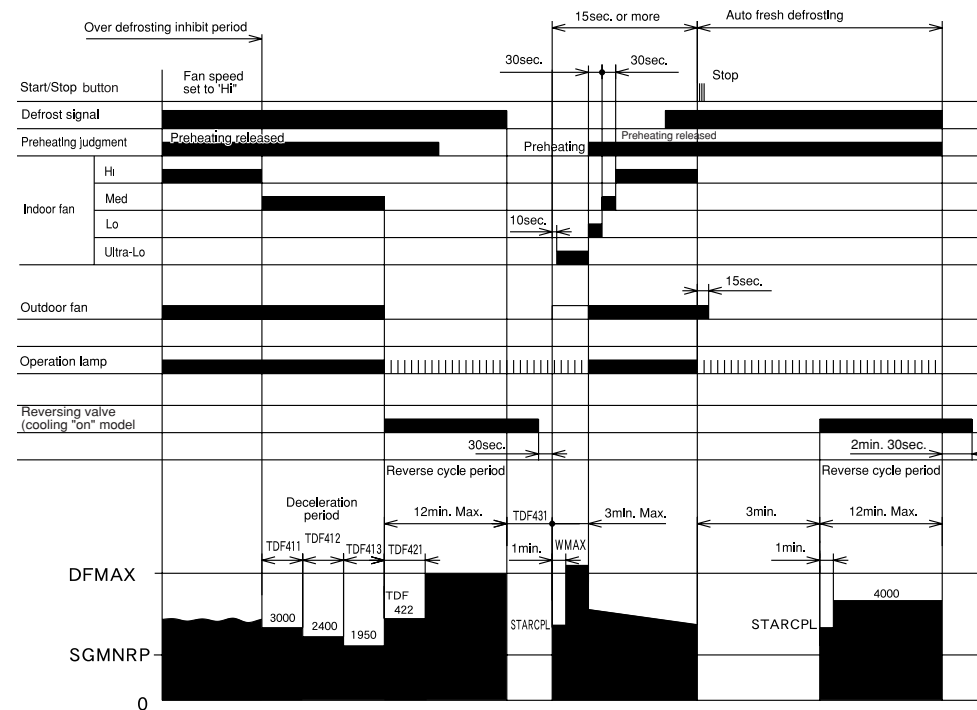


- Notes:
- (1) The defrosting inhibit period is set as shown in the diagram below. When defrosting has finished once, the inhibit period is newly set, based on the outdoor temperature when the compressor was started. During this period, the defrost signal is not accepted.
  - (2) If the difference between the room and outdoor temperature is large when defrosting is finished, the maximum compressor speed (WMAX) or (WMAX2) can be continued for 120 minutes maximum.
  - (3) The defrosting period is 12 minutes maximum.
  - (4) When operation is stopped during defrosting, it is switched to auto refresh defrosting.
  - (5) Auto refresh defrosting cannot be engaged within 15 minutes after operation is started or defrosting is finished.

## Heating Sleep Operation

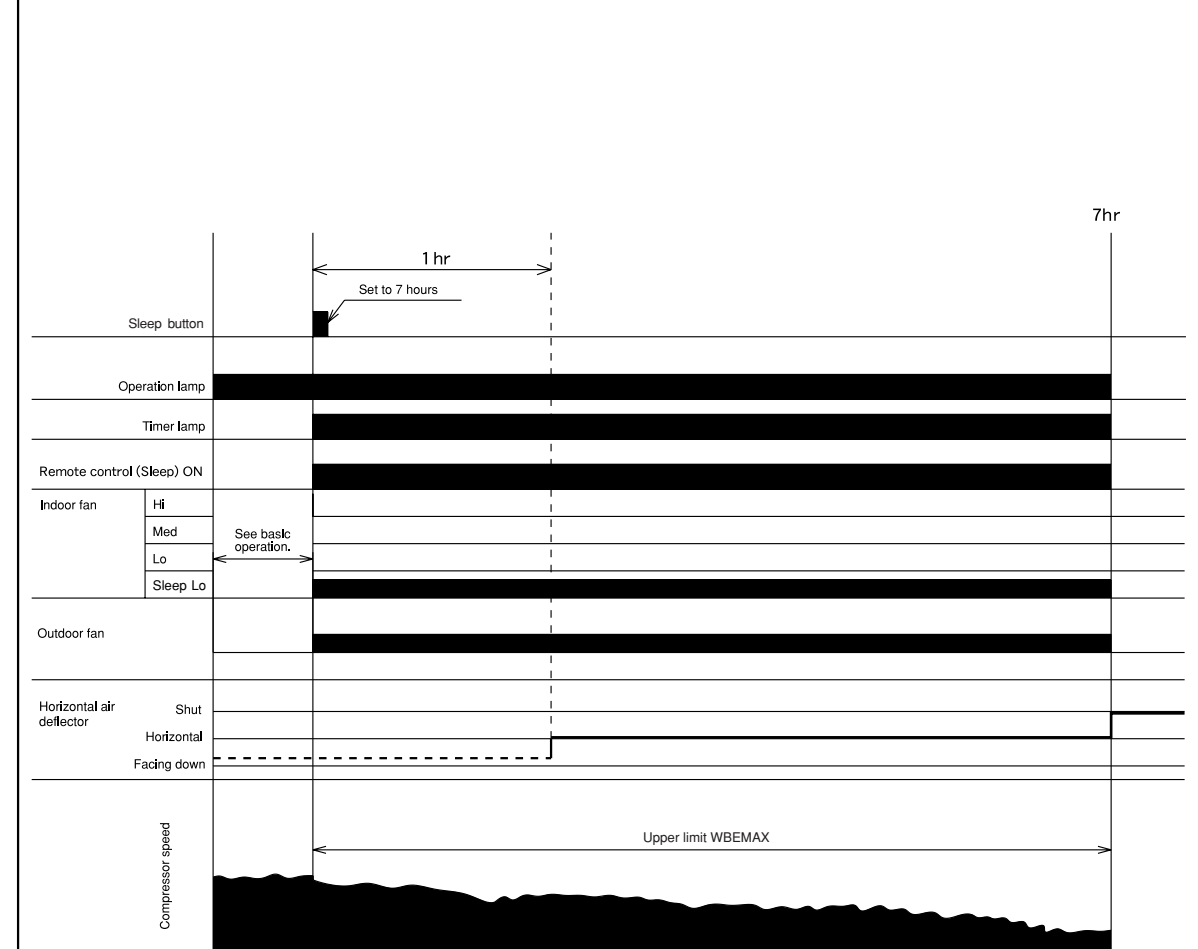

- Notes:
- (1) The sleep operation starts when the sleep button is pressed.
  - (2) When the sleep button is set, the maximum compressor speed is limited to WBEMAX, and the indoor fan is set to "sleep Lo".
  - (3) The indoor fan speed does not change even when the fan speed mode is changed. (Sleep Lo)
  - (4) When defrosting is to be set during sleep operation, defrosting is engaged and sleep operation is restored after defrosting.
  - (5) If sleep operation is cancelled by the cancel button or sleep button, all data is cleared.


## Setting Defrosting Inhibit Period

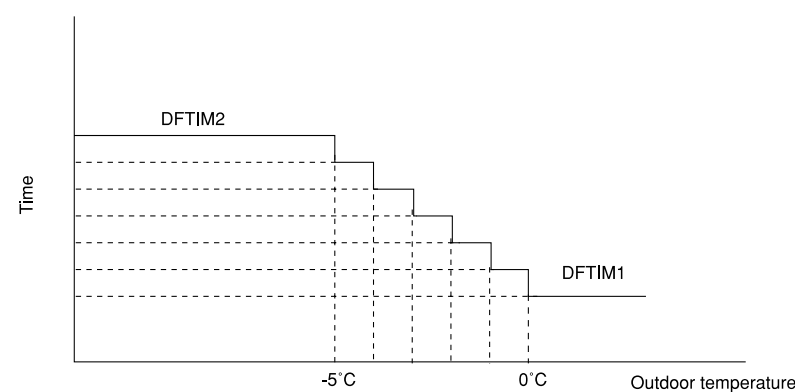

- Notes:
- (1) The time is set according to the outdoor temperature when it is between 0°C and -5°C.
  - (2) DFTIM1 is used when the outdoor temperature  $\geq 0^\circ\text{C}$ .
  - (3) DFTIM2 is used when the outdoor temperature  $\leq -5^\circ\text{C}$ .

# REFRIGERATING CYCLE DIAGRAM

MODEL RAS-18YH4 / RAC-18YH4

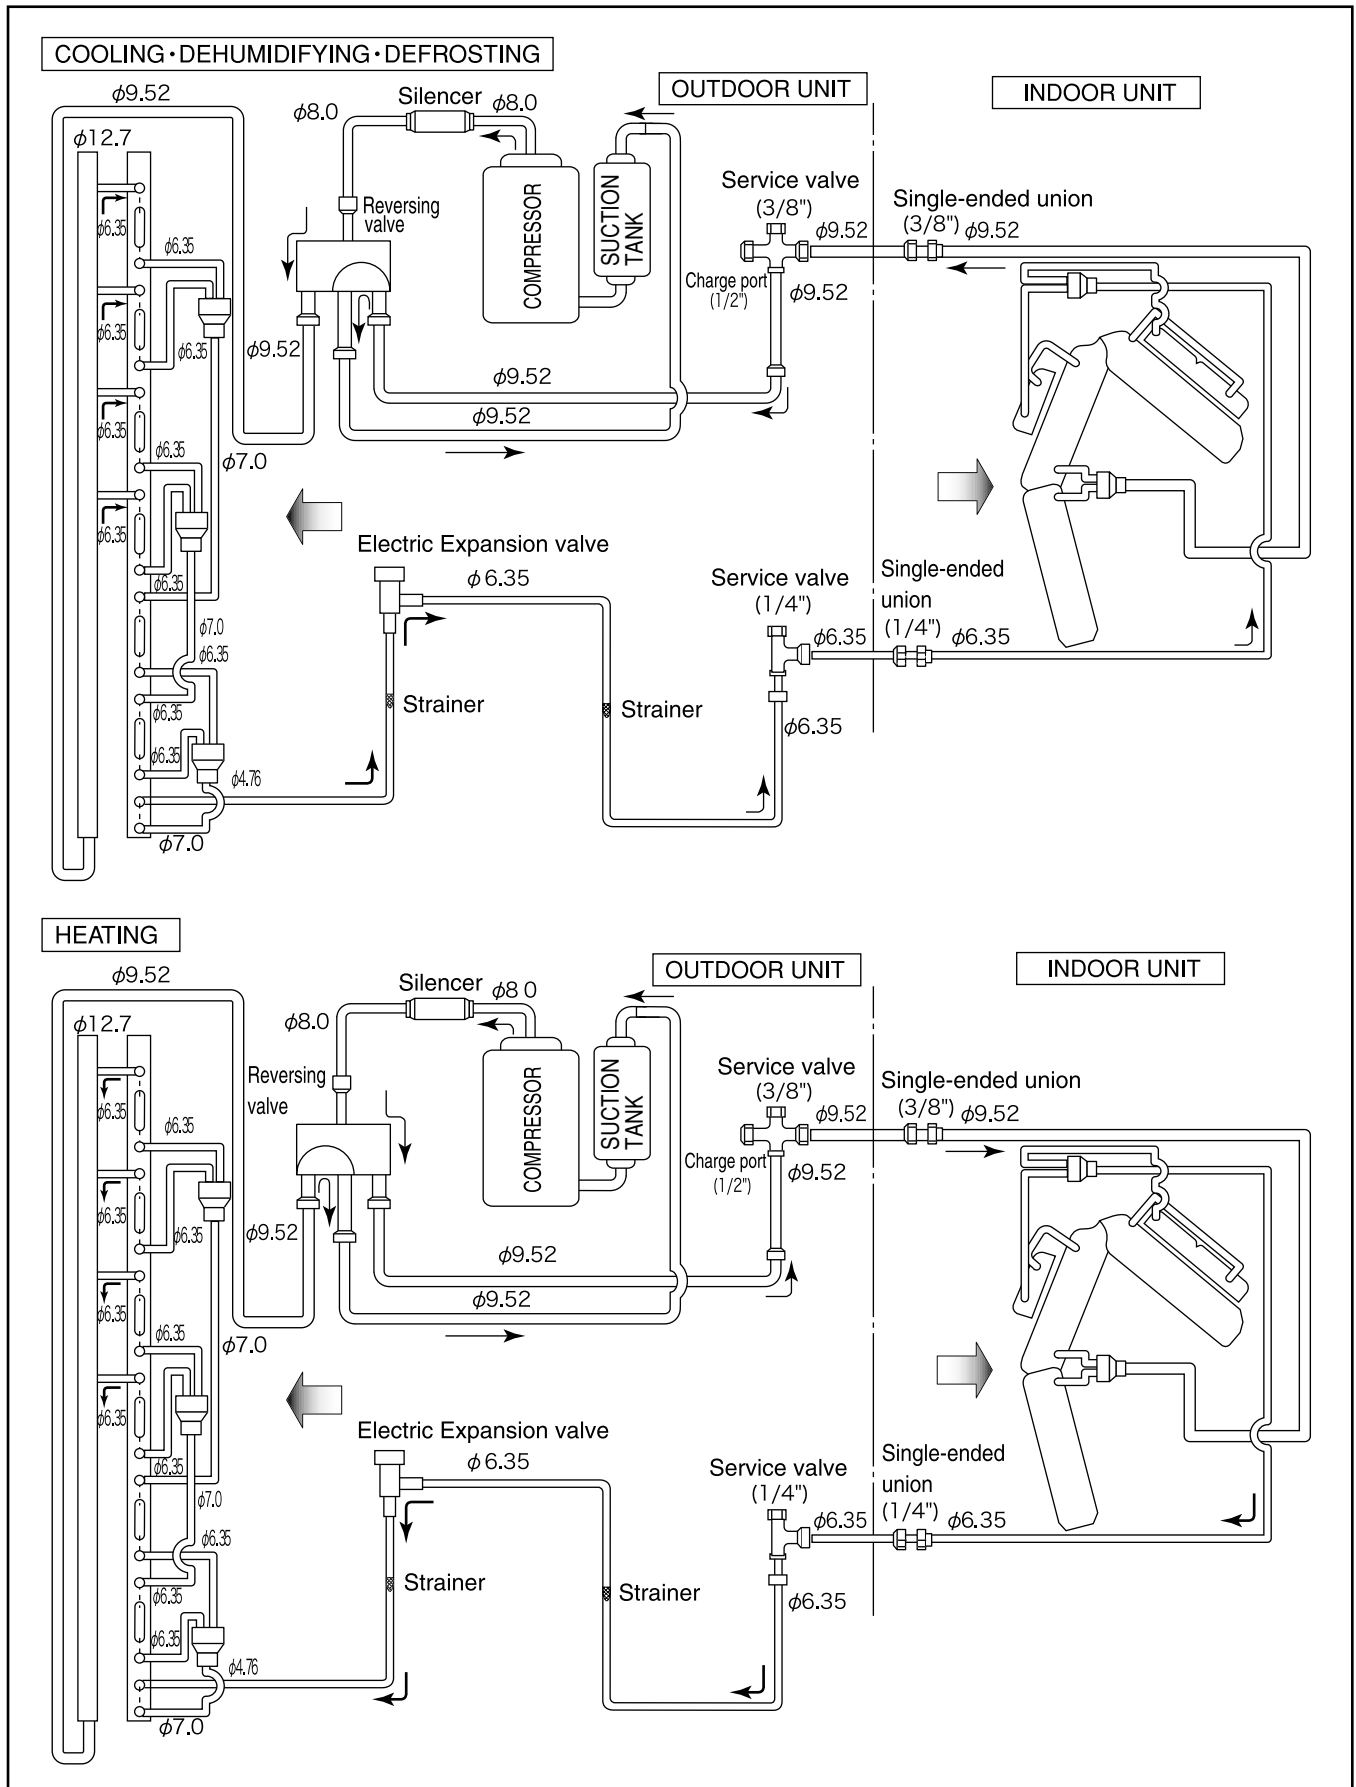

# DESCRIPTION OF MAIN CIRCUIT OPERATION

MODEL RAS-18YH4

## 1. Reset Circuit

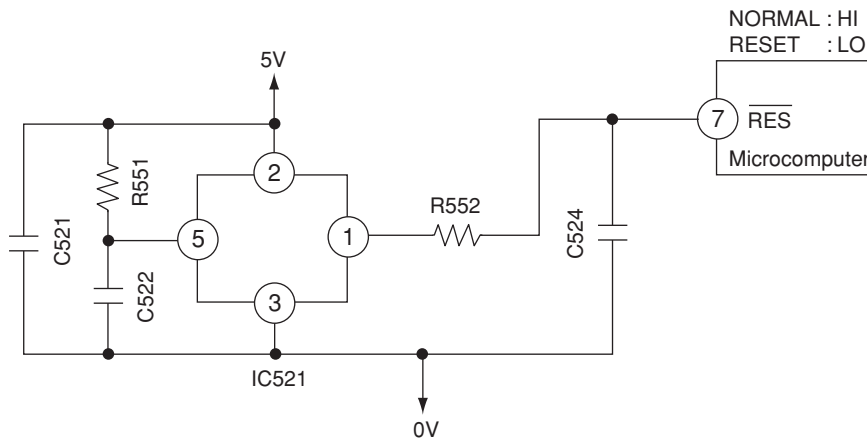


Fig. 1-1

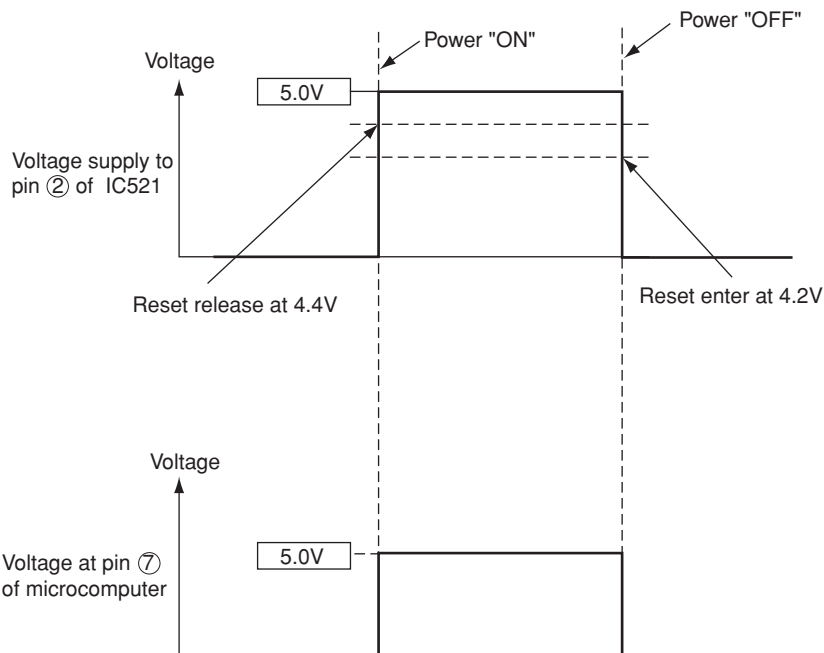


Fig. 1-2

The reset circuit initializes the microcomputer program when power is ON or OFF. Low voltage at pin ⑦ resets the microcomputer and Hi activates the microcomputer. When power "ON" 5V voltage rises and reaches 4.4V, pin ① of IC521 is set to "Hi". At this time the microcomputer starts operation. When power "OFF" voltage drops and reaches 4.2V, pin ① of IC521 is set to "Low". This will RESET the microcomputer.



## 2. Receiver Circuit

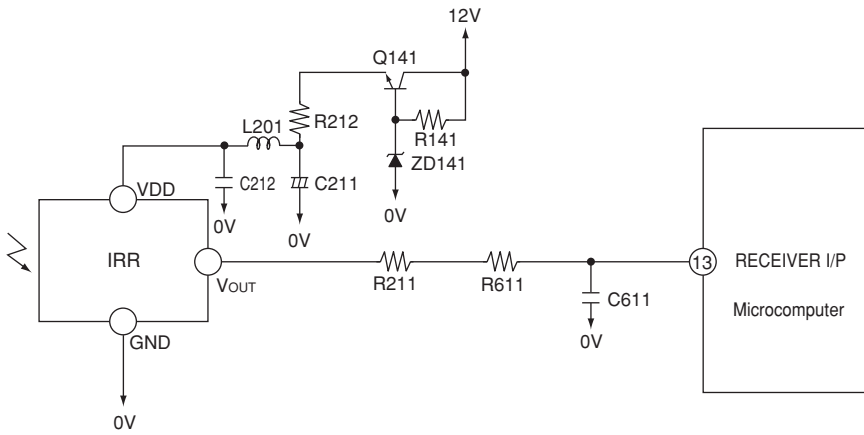


Fig.2-1

IRR (light receiver unit) receives the infrared signal from the wireless remote controller. The receiver amplifies and shapes the signal and outputs it.

## 3. Buzzer Circuit

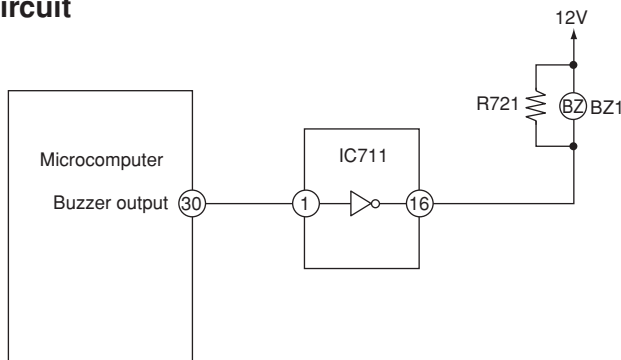


Fig.3-1 Buzzer circuit

When the buzzer sounds, an approx 3.9kHz square signal is output from buzzer output pin 30 of the microcomputer. After the amplitude of this signal has been set to 12Vp-p by IC711, it is applied to the buzzer. The piezoelectric element in the buzzer oscillates to generate the buzzer's sound.

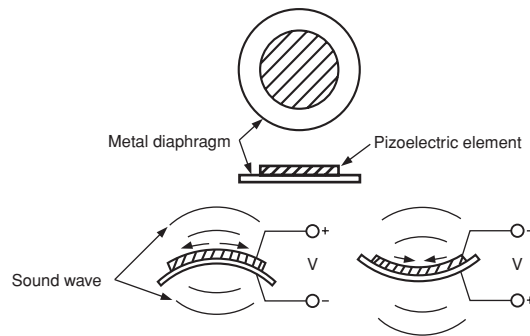


Fig. 3-2 Buzzer Operation

#### 4. Auto Sweep Motor Circuit

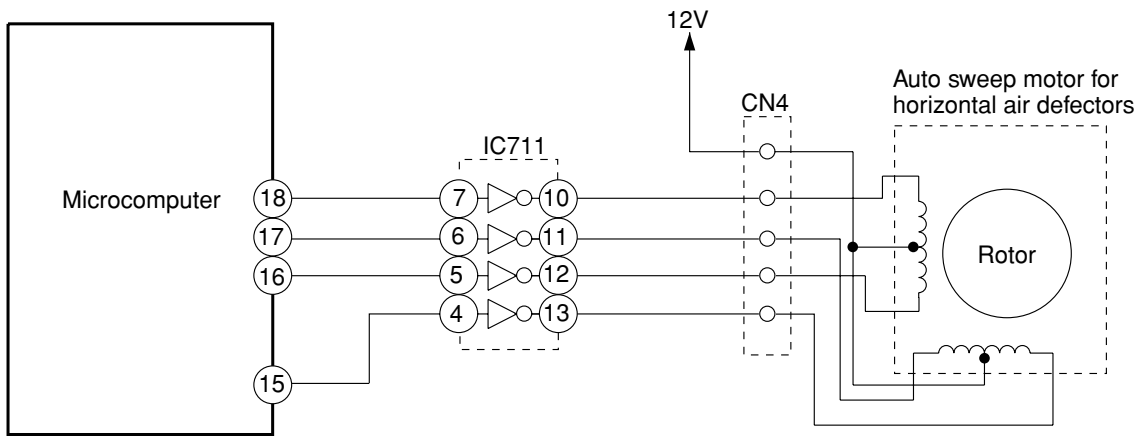


Fig.4-1

Fig. 4-1 shows the Auto sweep motor drive circuit; the signals shown in Fig.4-2 are output from pin ⑮ - ⑱ of microcomputer.

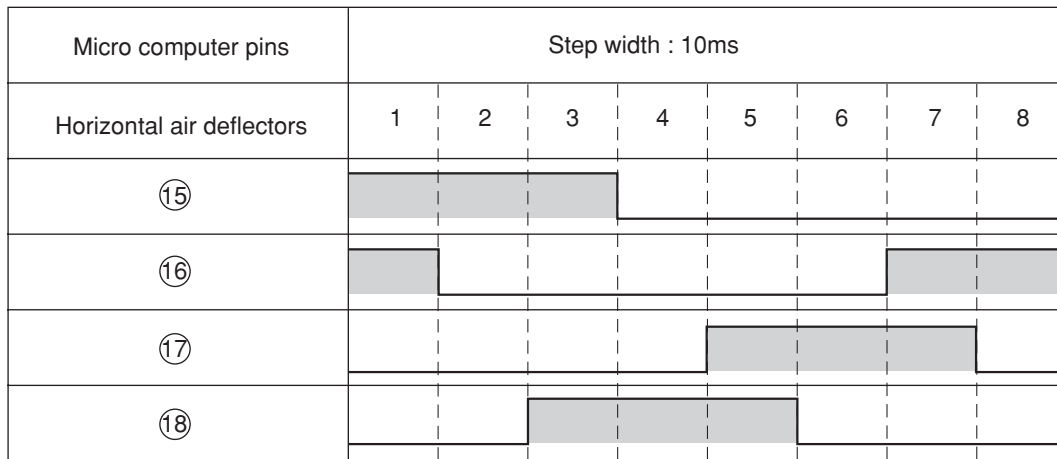


Fig.4-2 Microcomputer Output Signals

As the microcomputer's outputs change as shown in Fig.4-2, the coils of the auto sweep motor is excite to turn the rotor. Table 4-1 shows the rotation angle of horizontal air deflectors.

Table 4-1 Auto sweep Motor Rotation

	Rotation angle per step ( ° )	Time per step (ms.)
Horizontal air deflectors	0.0882	10

## 5. Initial Setting Circuit (IC401)

- When power is supplied, the microcomputer reads the data in IC401 or IC402 (E<sup>2</sup>PROM) and sets the preheating activation value and the rating and maximum speed of the compressor, etc. to their initial values.
- Data of self-diagnosis mode is stored in IC401 or IC402; data will not be erased even when power is turned off.

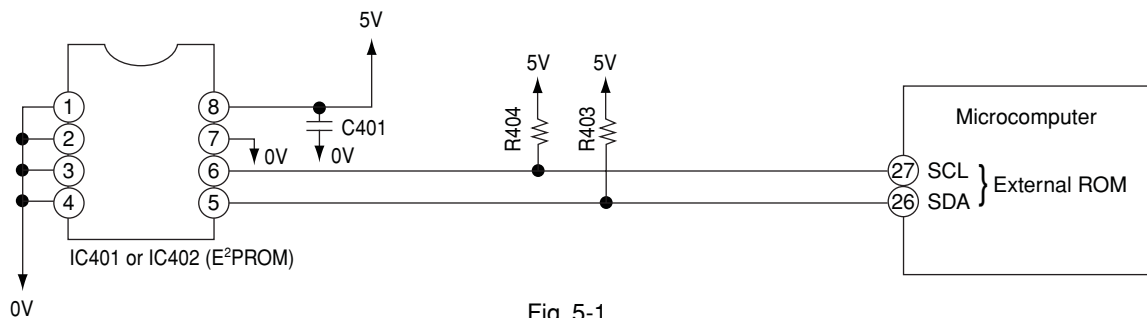


Fig. 5-1

## 6. Power Supply

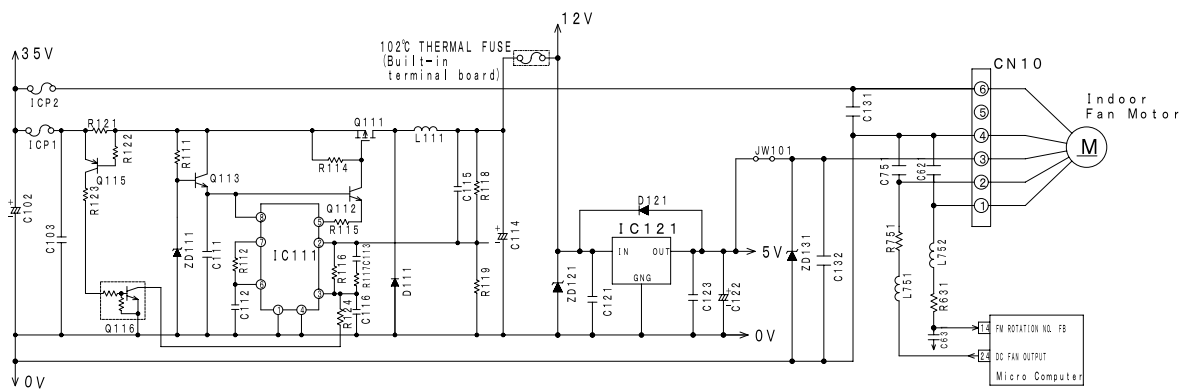


Fig. 6-1

First, 35V power which operates the indoor unit is generated by the power source section of the outdoor unit and supplied to the indoor unit through the C and D lines of the connecting cable.

Second, use the DC/DC converter and the 35 V power supply from the outdoor unit to generate 12 V control power, which drives the stepping motor during the operation.

In addition, use the regulator IC 121 to generate 5 V power required for driving the micro computer and controlling fan motor.

If the terminal block was overheated due to a connecting cable improper connection, the thermal fuse built in the terminal block will burnt to shut off the 12 V line and stop the operation of the indoor unit. Then, the outdoor unit cannot be communicated with the indoor unit and a communication error occurs (the outdoor LD301 will blink 9 times), stop all operations.

## 7. Fan Motor Drive Circuit

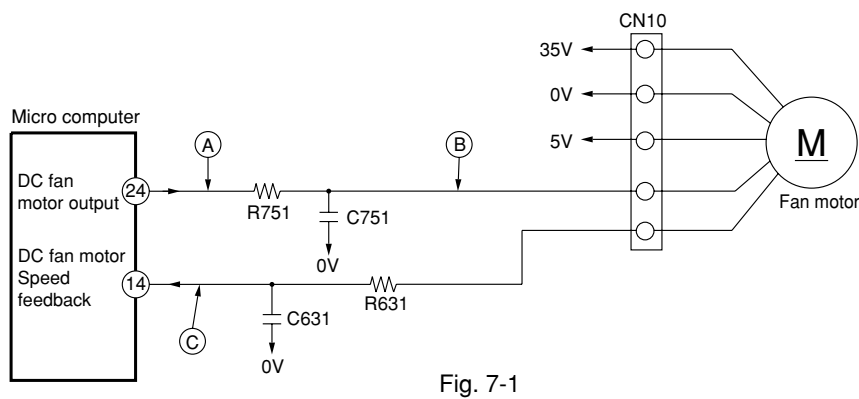


Fig. 7-1

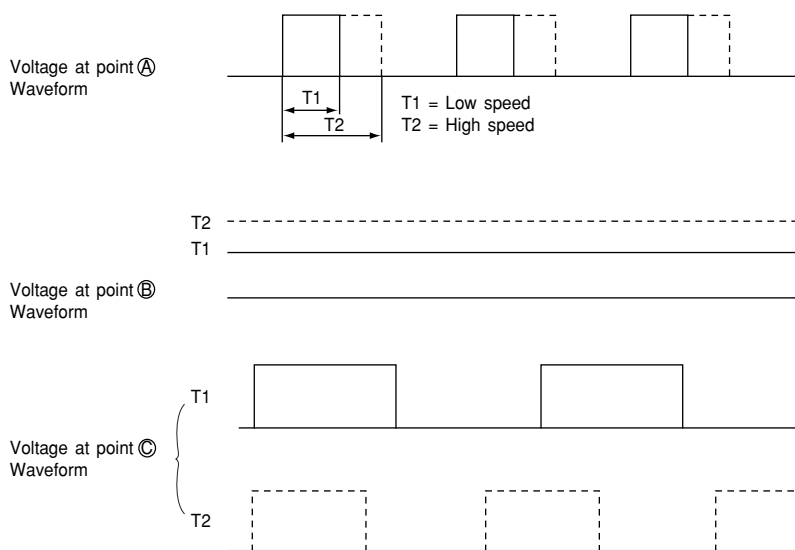


Fig. 7-2

- For the point (A), 15.7 kHz PWM pulse will be output from the pin (24) on the micro computer as shown in Fig. 7-2. The pulse range will vary with different command speed.
- The pulse is converted into the analog voltage by the R751 and C751 and applied to the fan motor as the speed command voltage. Fig. 7-3 shows the relation between the voltage at the point (B) and the speed. (Some differences will occur due to the condition of the unit.)
- The fan motor outputs the feedback pulse of the speed, which is input into the pin (14) on the micro computer. This pulse is equivalent to a frequency of  $12/60$  speed. (Example:  $1000 \text{ min}^{-1} \times 12/60 = 200 \text{ Hz}$ )

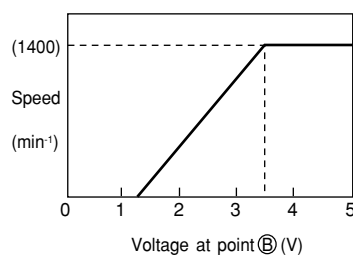


Fig. 7-3

- The micro computer monitors the frequency and adjusts the output pulse range of the pin (24) so as to keep the command speed.
- If the feedback pulse is  $100 \text{ min}^{-1}$  or less due to a locked fan motor or failure, the fan output will be stopped temporarily as fan lock error. After 10 seconds, restart the output of the pulse. If fan lock error is detected twice within 30 minutes, all units are stopped and the unit will come in the failure mode. (The timer lamp will blink 10 times.)

1. The electrical parts for the outdoor unit is composed of two P.W.B (a power P.W.B. and main P.W.B.) and a harmonics improvement circuit as shown in Fig. 1-1.

- MAIN P.W.B.**  
 This P.W.B. is equipped with the rectification diode, DC fan motor control circuit and the circuits around the micro computer which take various controls.
- POWER P.W.B.**  
 This P.W.B. is equipped with the noise filter, ICP power circuit, interface circuit, smoothing capacitor, expansion valve control circuit and four-way valve control circuit.
- HARMONICS IMPROVEMENT CIRCUIT**  
 This circuit is composed of the capacitor at the bottom of the electrical parts box and two reactors attached to the BULKHEAD.

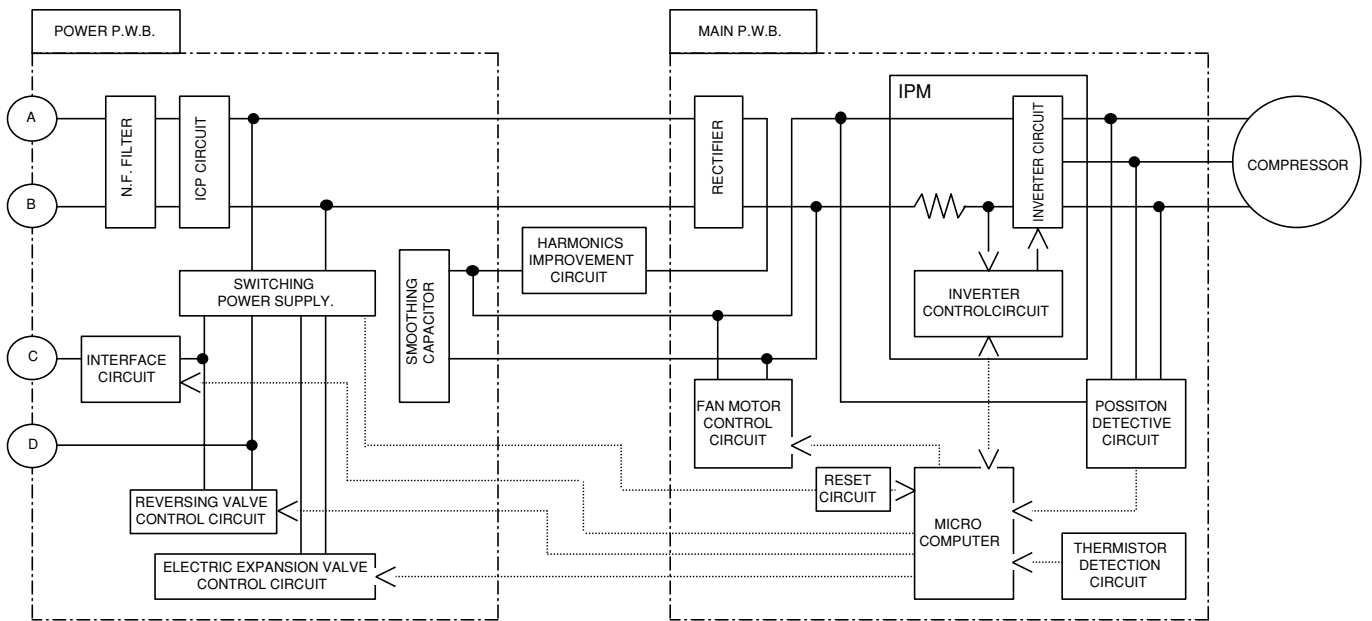


Fig. 1-1

## 2. Power circuit

This circuit is to convert the power from AC which is provided from the terminal A and B to DC voltage. And produces an AC current which does not exceed the harmonic amplitude limit of the IEC61000-3-2. When the compressor is stopped, the AC voltage becomes about 300 V and while the compressor operates, it is about 280 V.

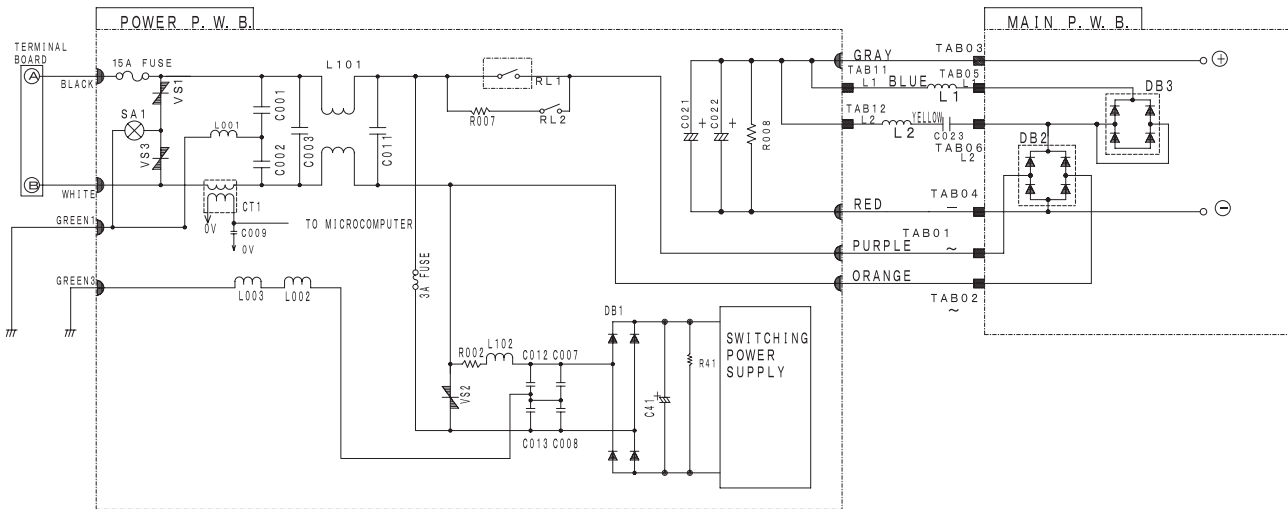


Fig. 2-1

### Main parts

#### (1) DB2

The DB2 rectifies the AC voltage.

The possible causes for the DB2 failure are as follows. The 15 A fuse may be blown out or the IPM for the main P.W.B. may have a failure. In such a case, check the 15 A fuse for blowout and replace the main P.W.B. if necessary.

#### (2) DB3, L1, C023 and L2

The DB3, L1, C023 and L2 shape waveform of the input current.

When the current runs through the L1 is taken for  $I_1$  and the current runs through the L2 is taken for  $I_2$  as shown in Fig. 2-2,  $I_1$  becomes an input current to the capacitor which peak value was crushed by the L1 and  $I_2$  becomes a resonance current which causes the LC resonance using the L2 and C023. By combining the  $I_1$  and  $I_2$ , the input current from the main power shapes a waveform shown in the right side of Fig. 2-3, indicating that the waveform is similar to sine wave. The more the waveform is similar to the sine wave, the lower the harmonic current becomes.

If the C023 has any failure, the protection unit activates and the C023 in open mode. In such a case, replace the failed parts.

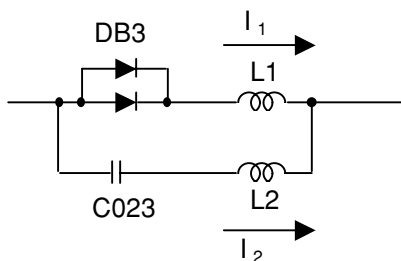


Fig. 2-2

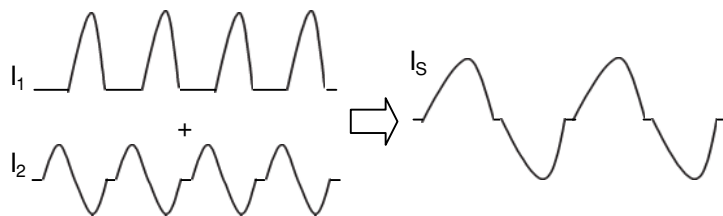


Fig. 2-3

(3) C021 and C022

This smoothes the voltage rectified for operating the compressor.

When the input voltage is taken for the sine wave as shown in the top of Fig. 2-4, it is rectified by the DB2 and becomes the waveform as shown in the middle of Fig. 2-4. After that, the voltage is smoothed by the C021 and C022, and becomes the waveform shown in the bottom of Fig. 2-4.

(4) DB1 and C41

The DB1 rectifies the input voltage and the C41 smoothes it for the control power supply.

If the units above have any failure, the control power supply won't operate. In such a case, replace the power P.W.B.

(5) C001 to C003, C011, L101, and L102

They absorb electrical noise generated during operation of compressor, and also absorb external noise entering from power line to protect electronic parts.

Be sure to connect the earth cable between the indoor unit and the outdoor unit. Otherwise, the noise filter circuit won't operate properly.

(6) SA1 and VS1 to VS3

These surge absorber and varistors absorb external power surge such as induced thunder.

Be sure to connect the earth cable between the indoor unit and the outdoor unit. Otherwise, the surge absorber and the varistors won't operate.

(7) R002 and R007

The resistor R002 protects the rush current when the power is turned on while the resistor R007 protects the rush current when the compressor starts.

When the R002 has any failure, the control power supply won't operate. When the R007 has any failure and a strong rush current is generated, the DB2, C021 or C022 may be damaged.

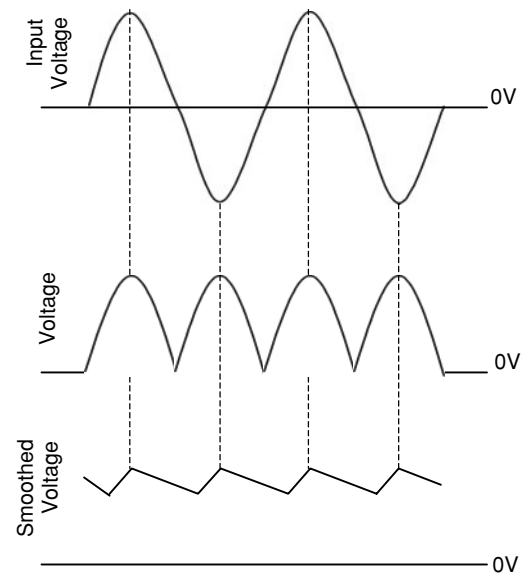


Fig. 2-4



### 3. Indoor/Outdoor Interface Circuit

The interface circuit superimposes an interface signal on the DC 35V line to perform communications between indoor and outdoor units. This circuit consists of a transmitting circuit which superimposes an interface signal transmit from the microcomputer on the DC 35V line and a circuit which detects the interface signal on the DC 35V line.

Communications are performed alternatively transmitting and receiving.

#### 3-1 Communication signal from outdoor microcomputer to indoor microcomputer.

At first outdoor microcomputer will send a request signal (SDO) to indoor microcomputer.

38 KHz of carrier signal is generated and modulated by the request signal (SDO) from the outdoor microcomputer pin ①.

This signal is superimposed to DC 35V line via C801 and L801.

To prevent erroneous reception, the outdoor microcomputer is designed so that it cannot receive a signal while it is outputting a request signal.

The receiving circuit in the indoor unit consists of a comparator and transistor. The interface signal from the outdoor unit on the DC 35V line is supplied to C821, where DC components are eliminated, and is then shaped by the comparator. The shaped signal is detected by diode, amplified by amp, and output to pin ④ of the indoor microcomputer.

Fig. 3-2 shows the waveforms at each component when data is transferred from the outdoor microcomputer to the indoor microcomputer.

#### 3-2 Communication signal from indoor microcomputer to outdoor microcomputer.

The request signal (SDO) generates by indoor microcomputer is output to pin ⑤, and amplifies by Q801.

I/F signal approx. 38 kHz is generated by comparator, then modulated by the signal from pin ⑤ of indoor microprocessor.

This modulated I/F signal is then amplified and superimposed to DC 35V line via L801 and C802 of indoor interface circuit.

Fig. 3-3 shows the waveforms at each component when data is transferred from outdoor microcomputer to indoor microcomputer.

The circuit operation of the outdoor receiving circuit is same as indoor receiving circuit.

Fig. 3-1 shows the interface circuit used for the indoor and outdoor microcomputers to communicate with each other.

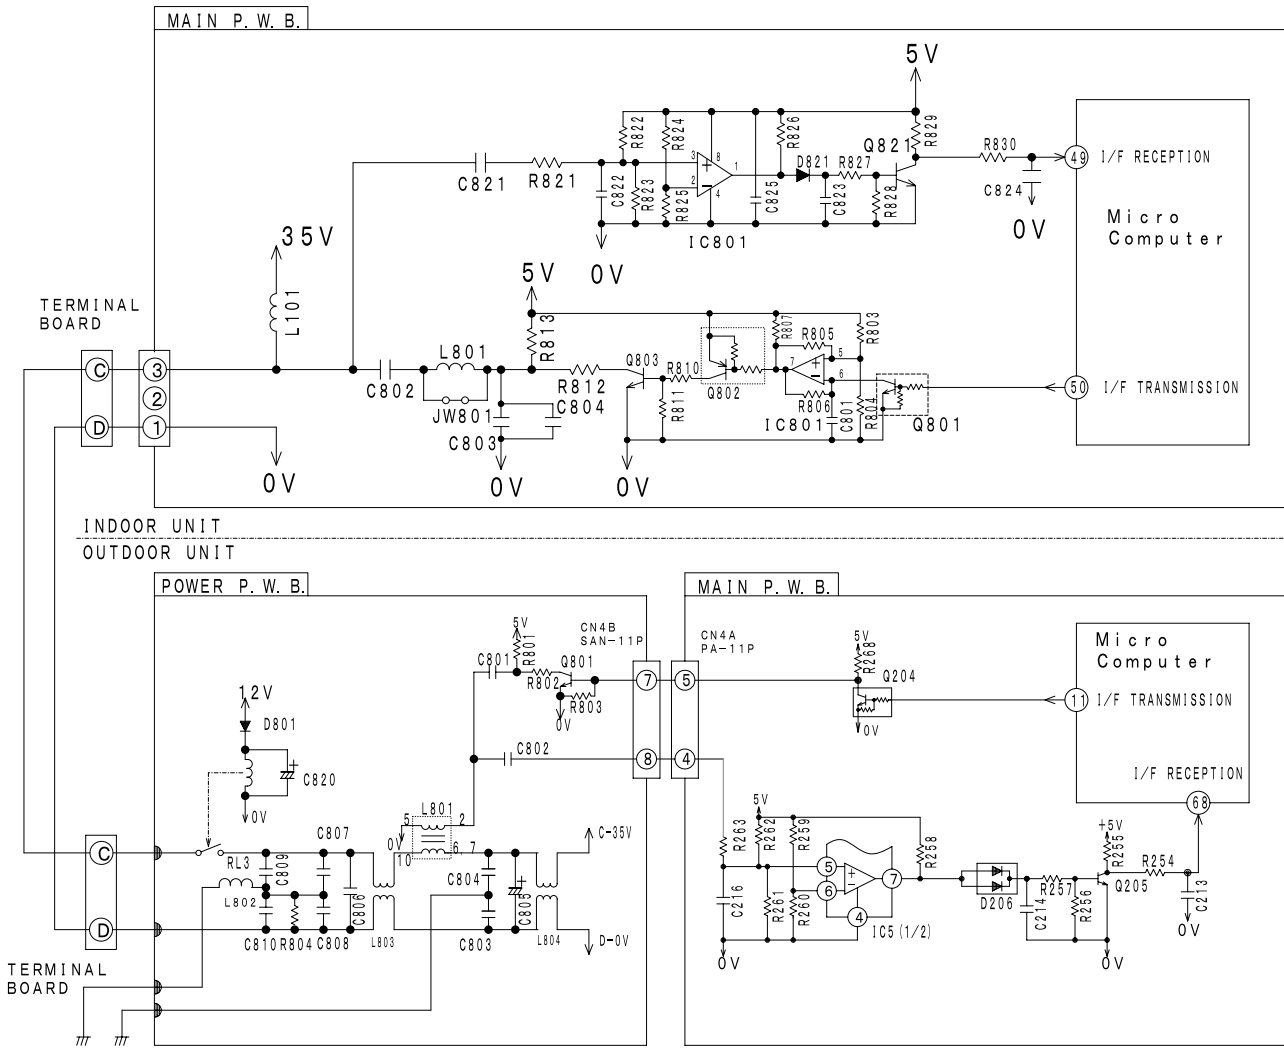


Fig. 3-1

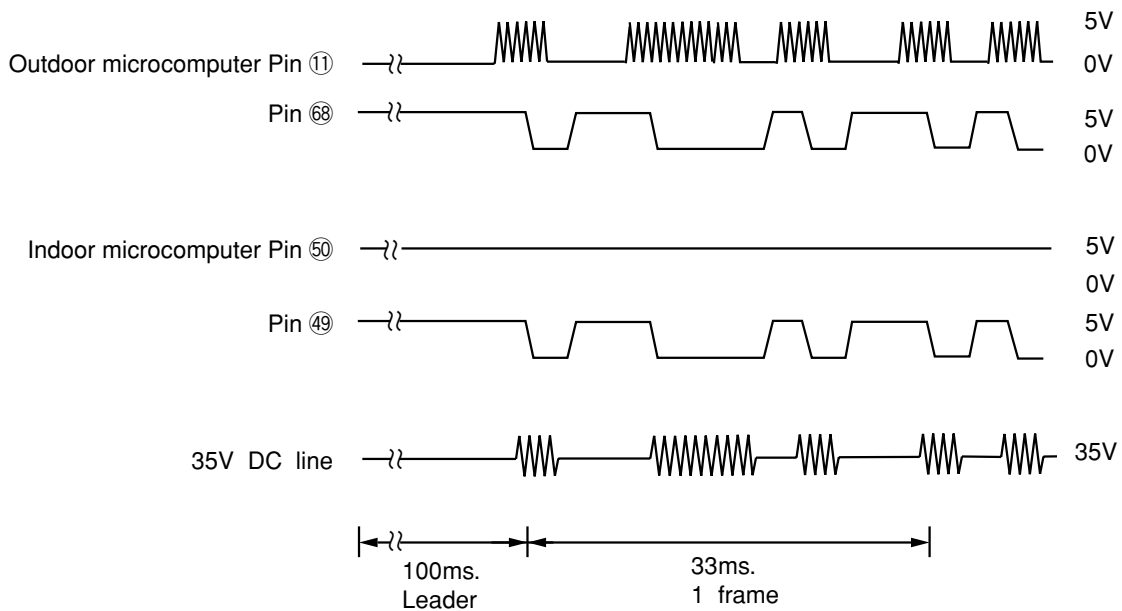


Fig. 3-2 Voltages Waveforms of Indoor / Outdoor Microcomputers (Outdoor to Indoor Communications)


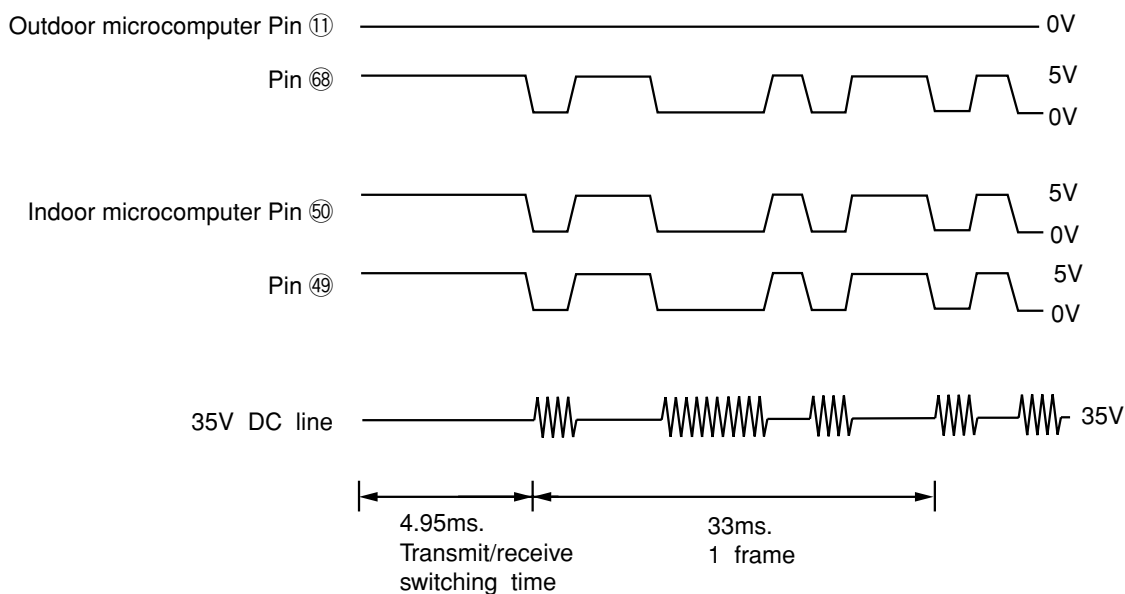


Fig. 3-3 Voltages Waveforms of Indoor / Outdoor Microcomputers (Indoor to Outdoor Communications)

[Serial Communications Format during Normal Communications]

(1) Outdoor microcomputer (HIC) to indoor microcomputer

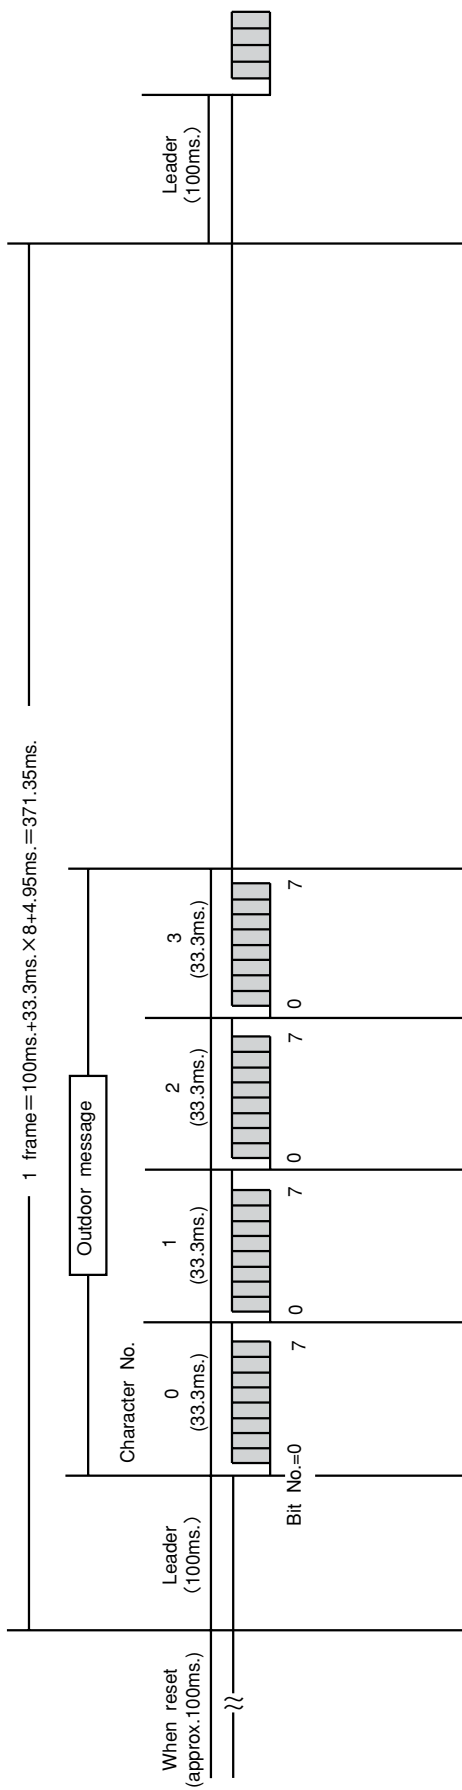

(2) Indoor microcomputer to outdoor microcomputer (HIC)

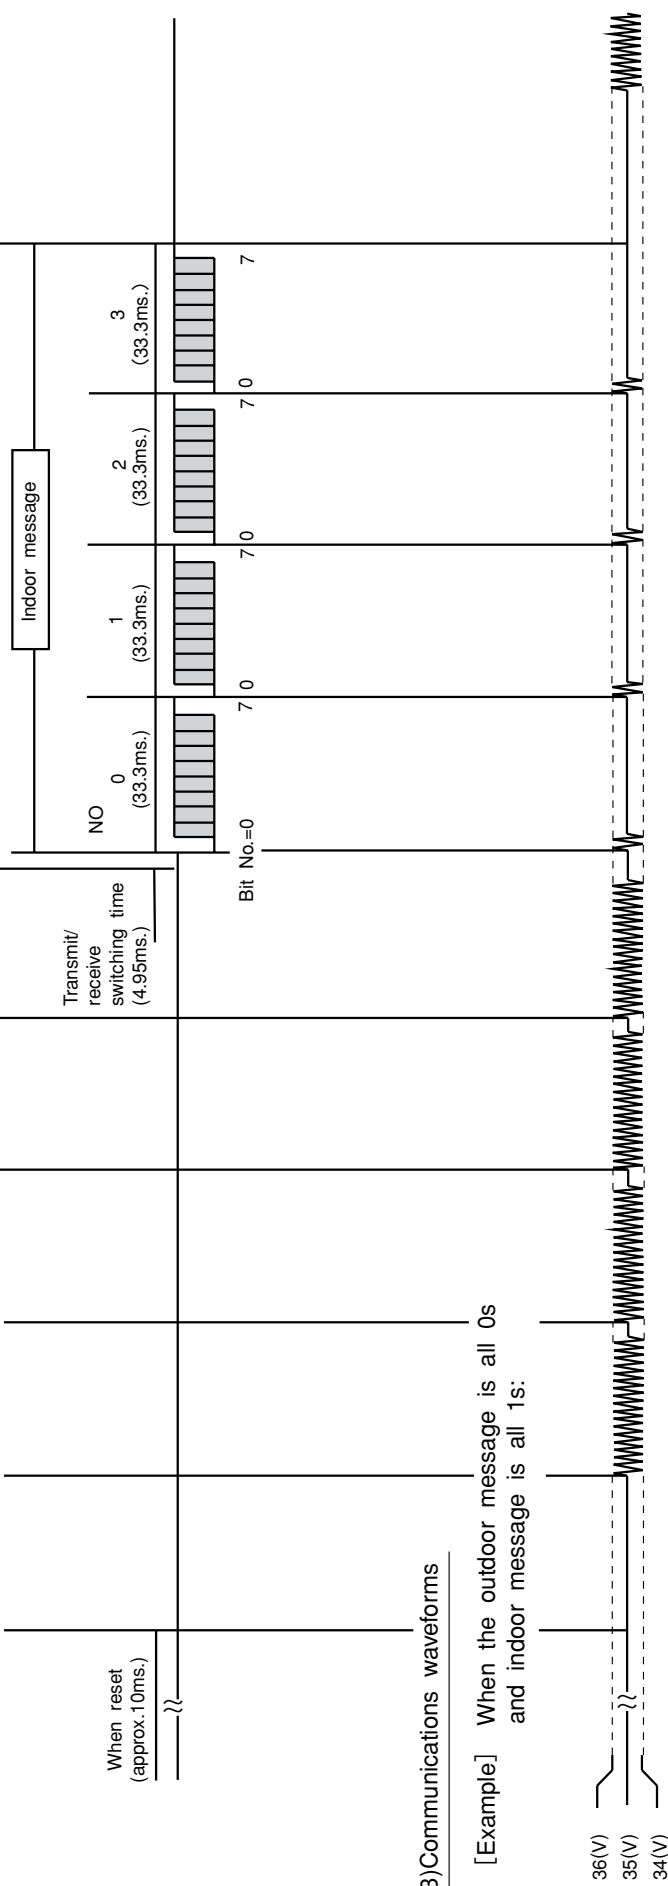


Fig. 3-4

[Serial Communications Data]

(1)Outdoor message

Character No.	Bit No.	Contents	Data
3	7		0
	6		0
	5		0
	4		0
	3		0
	2		0
	1	Fan-7-step request	1
	0		0
2	7	Actual compressor rotation speed(5 MSB)	1/0
	6	Actual compressor rotation speed(4)	1/0
	5	Actual compressor rotation speed(3)	1/0
	4	Actual compressor rotation speed(2)	1/0
	3	Actual compressor rotation speed(1)	1/0
	2	Actual compressor rotation speed(0 LSB)	1/0
	1	Compressor during operation	1/0
	0	Compressor during operation	1/0
1	7	Outside temperature(7 MSB)	1/0
	6	Outside temperature(6)	1/0
	5	Outside temperature(5)	1/0
	4	Outside temperature(4)	1/0
	3	Outside temperature(3)	1/0
	2	Outside temperature(2)	1/0
	1	Outside temperature(1)	1/0
	0	Outside temperature(0 LSB)	1/0
0	7	Self-diagnosis(3 MSB)	1/0
	6	Self-diagnosis(2)	1/0
	5	Self-diagnosis(1)	1/0
	4	Self-diagnosis(0 LSB)	1/0
	3	Defrost request signal	1/0
	2	During forced operation	1/0
	1		0
	0	Multi-bit	1/0

(2)Indoor message

Character No.	Bit No.	Contents	Data
3	7	Compressor minimum rotation speed(4 MSB)	1/0
	6	Compressor minimum rotation speed(3)	1/0
	5	Compressor minimum rotation speed(2)	1/0
	4	Compressor minimum rotation speed(1)	1/0
	3	Compressor minimum rotation speed(0 LSB)	1/0
	2		1/0
	1	OVL up	1/0
	0	15/20(A)	1/0
2	7	Compressor command speed(7 MSB)	1/0
	6	Compressor command speed(6)	1/0
	5	Compressor command speed(5)	1/0
	4	Compressor command speed(4)	1/0
	3	Compressor command speed(3)	1/0
	2	Compressor command speed(2)	1/0
	1	Compressor command speed(1)	1/0
	0	Compressor command speed(0 LSB)	1/0
1	7	Compressor ON	1/0
	6		0
	5		0
	4	Reversing valve	1/0
	3	2-way valve	0
	2	Fan(2 MSB)	1/0
	1	Fan(1)	1/0
	0	Fan(0 LSB)	1/0
0	7	Capacity code(3 MSB)	0
	6	Capacity code(2)	0
	5	Capacity code(1)	0
	4	Capacity code(0 LSB)	0
	3	Indoor in-operation bit	1/0
	2	Operation mode(2 MSB)	1/0
	1	Operation mode(1)	1/0
	0	Operation mode(0 LSB)	1/0

## 4. IPM (Intelligent Power Module)

- Fig.4-1 shows the intelligent power module and its peripheral circuit. The three transistors on the positive e side are called the upper arm, and the three transistors on the negative d side, the lower arm.

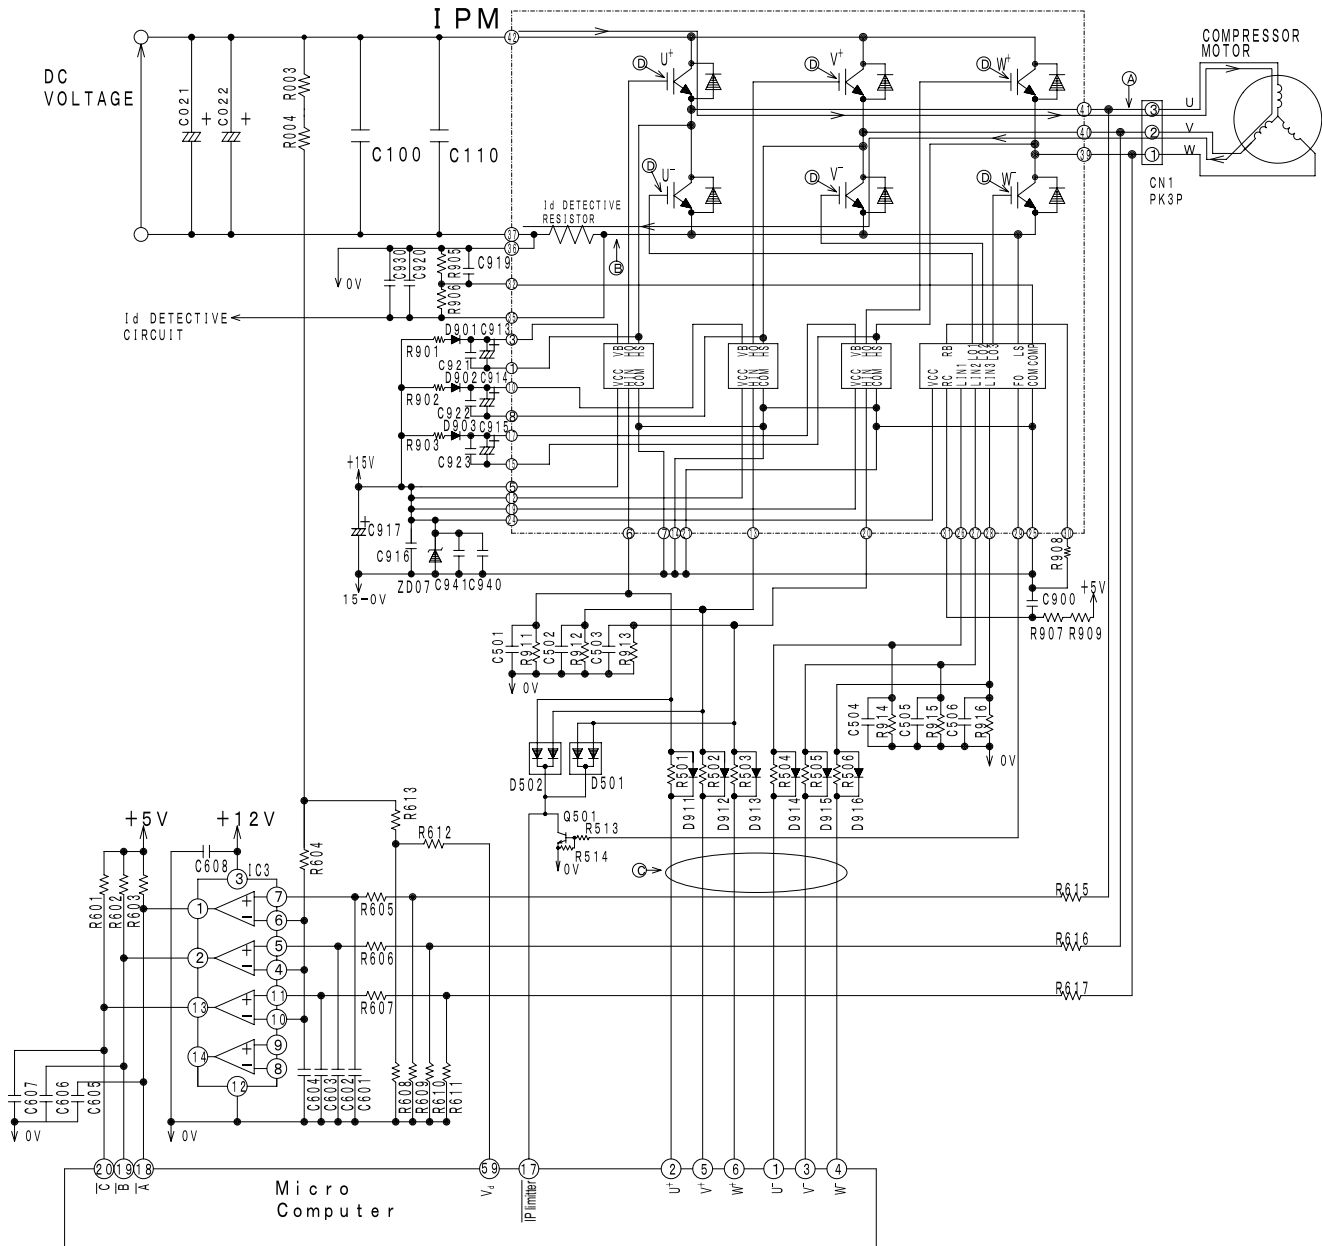


Fig. 4-1 Intelligent power module circuit (U<sup>+</sup> is ON, V is ON)

Intelligent power module switches power supply current according to position of the compressor motor rotor.

The switching order is as shown in Fig. 4-2.

At point ⑤: U<sup>+</sup> is ON, V<sup>-</sup> is ON (circuit in Fig.4-1)

At point ⑥: U<sup>+</sup> is chopped (OFF), V<sup>-</sup> is ON (circuit in Fig.4-4)

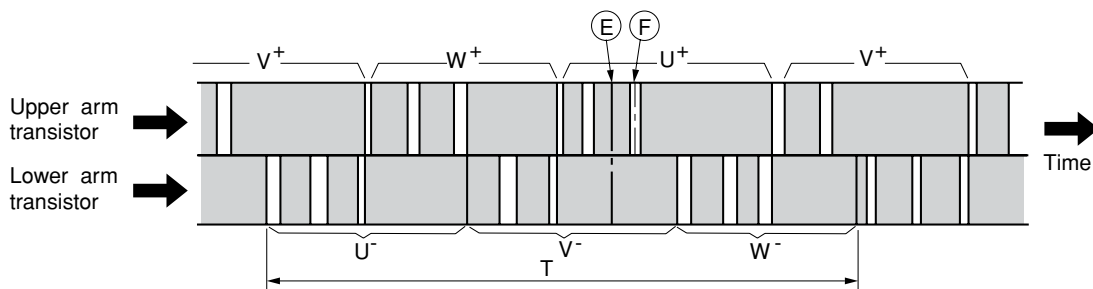


Fig. 4-2 Switching order of power module

Upper arm transistor is controlled to ON/OFF by 4.8kHz chopper signal. Rotation speed of the compressor is proportional to duty ratio (ON time/ ON time + OFF time) of this chopper signal.

Time T in Fig. 4-2 shows the switching period, and relation with rotation speed (N) of the compressor is shown by formula below;

$$N = 60/2 \times 1/T$$

Fig. 4-3 shows voltage waveform at each point shown in Figs. 4-1 and 4-4. First half of upper arm is chopper, second half is ON, and first half of lower arm is chopper, second half is ON.

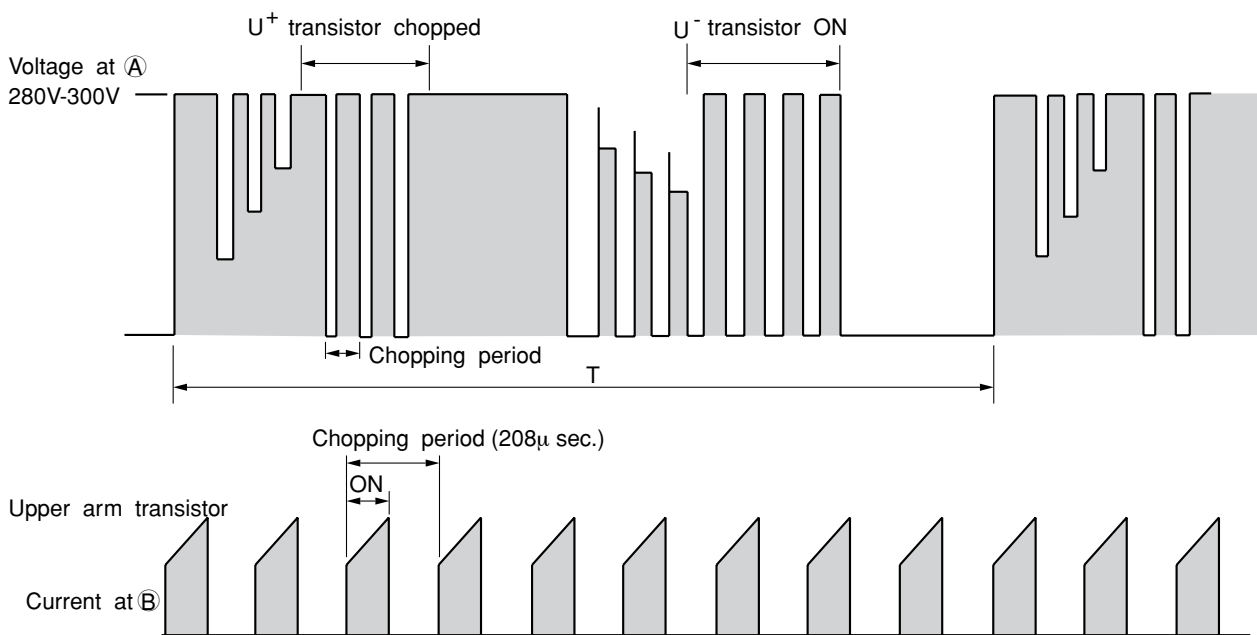


Fig. 4-3 Voltage waveform at each point

When power is supplied U<sup>+</sup> → U<sup>-</sup>, because of that U<sup>+</sup> is chopped, current flows as shown below;

- (1) When U<sup>+</sup> transistor is ON: U<sup>+</sup> transistor → U coil → V coil → V<sup>-</sup> transistor → DC current detection resistor → Point ⑥ (Fig. 4-1)
- (2) When U<sup>+</sup> transistor is OFF: (by inductance of motor coil) U coil → V coil → V<sup>-</sup> transistor → Return diode → Point ⑤ (Fig. 4-4)



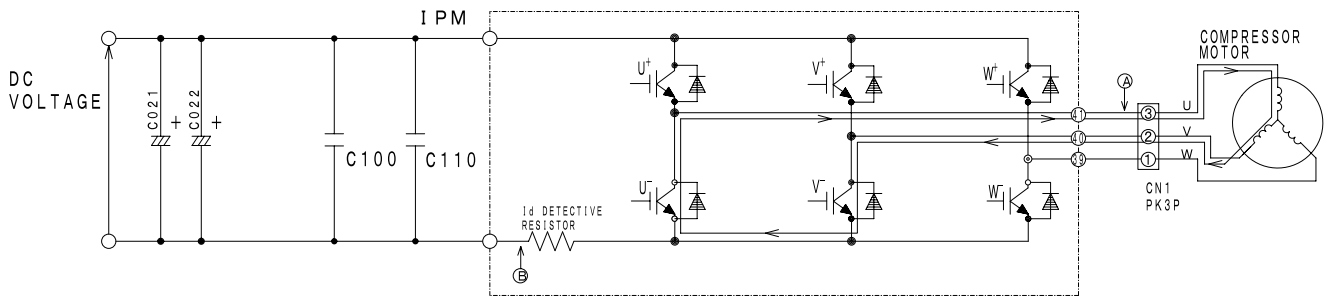


Fig. 4-4 Power module circuit ( $U^+$  is OFF,  $V^-$  is ON)

Since current flows at point B only when  $U^+$  transistor and  $V^-$  transistor is ON, the current waveform at point B becomes intermittent waveform as shown in Fig.4-3. Since current at point B is approximately proportional to the input current of the air conditioner, input current is controlled by using DC current ( $I_d$ ) detection resistor.

<Reference>

If power module is defected, self diagnosis lamps on the MAIN P.W.B. may indicate as shown below:

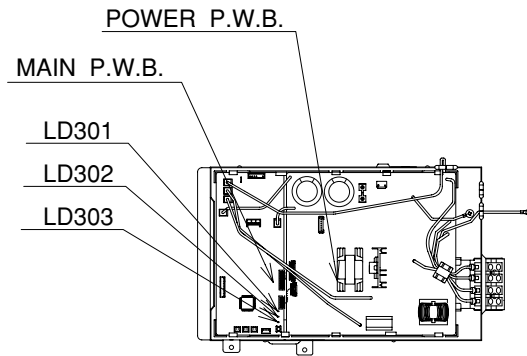


Fig. 4-5

Table 4-1

Self-diagnosis	Self-diagnosis lamp and mode	
	LD301	LD302
$I_p$ (peak current cut)	LD301	Blinks 2 times
Abnormal low speed rotation	LD301	Blinks 3 times
Switching incomplete	LD301	Blinks 4 times

- IPM drive circuit

The inverter driving device (IGBT) and the drive circuit are built in the IPM. The IPM receives the signal from the microcomputer and convert it to 0 – 15 V signal to drive the IGBT.

When the unit operates at low speed, a chopper signal is emitted from the micro computer as shown in Fig. 4-6. (0 to 5 V)

The signal is converted to 0 – 15 V at inside the IPM and transmitted to the gate of the transistor (IGBT) in each phase to drive the IGBT.

When abnormal peak current was detected while the inverter is driving, the IPM outputs the Fail signal immediately from the pin ⑳ and forces the lower arm transistor to shut off at the same time. In this step, the Q501 is turned on and the input signal of the upper arm is also shut off through the D501 and D502, so that all signals to the IGBT are shut off. This signal is also distributed to microcomputer (⑰ pin) as a Lo signal to stop the drive signal and blink the self diagnosis lamp as two time.

When the peak current is detected, the IPM keeps the lower arm off for about 4ms and the drive signal into stand-by state. 3 minutes after this state, the micro computer outputs the drive signal and restarts the operation.


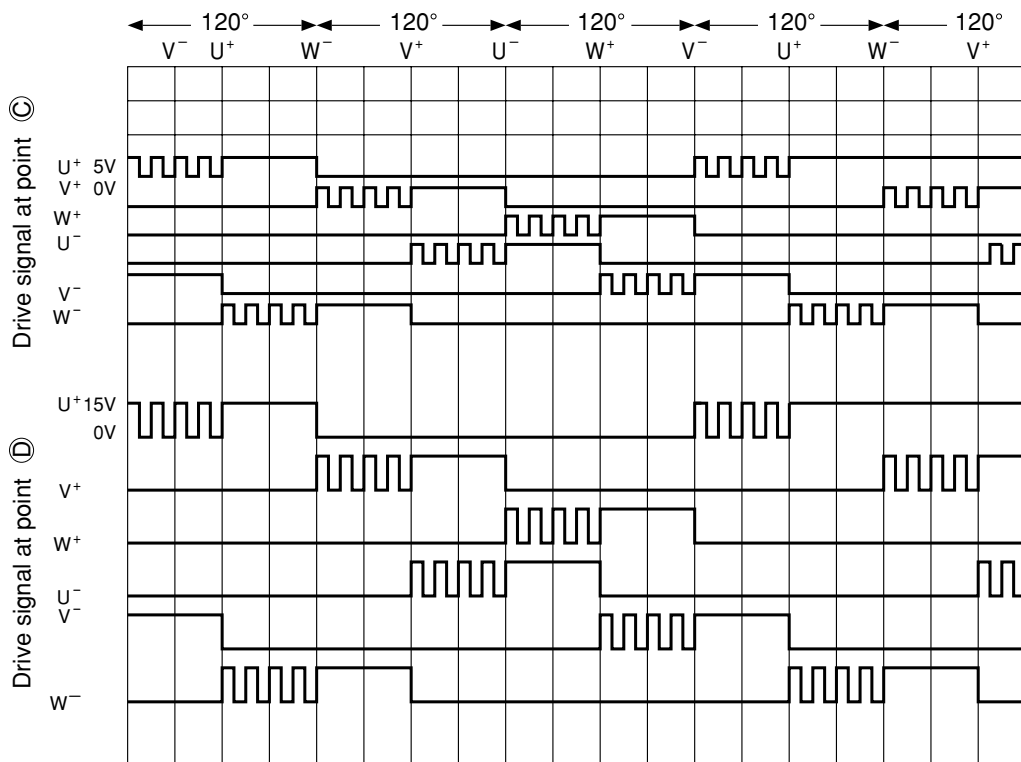


Fig. 4-6

## 5. Power Circuit for P.W.B.

- Fig. 5-1 shows the power circuit for P.W.B.

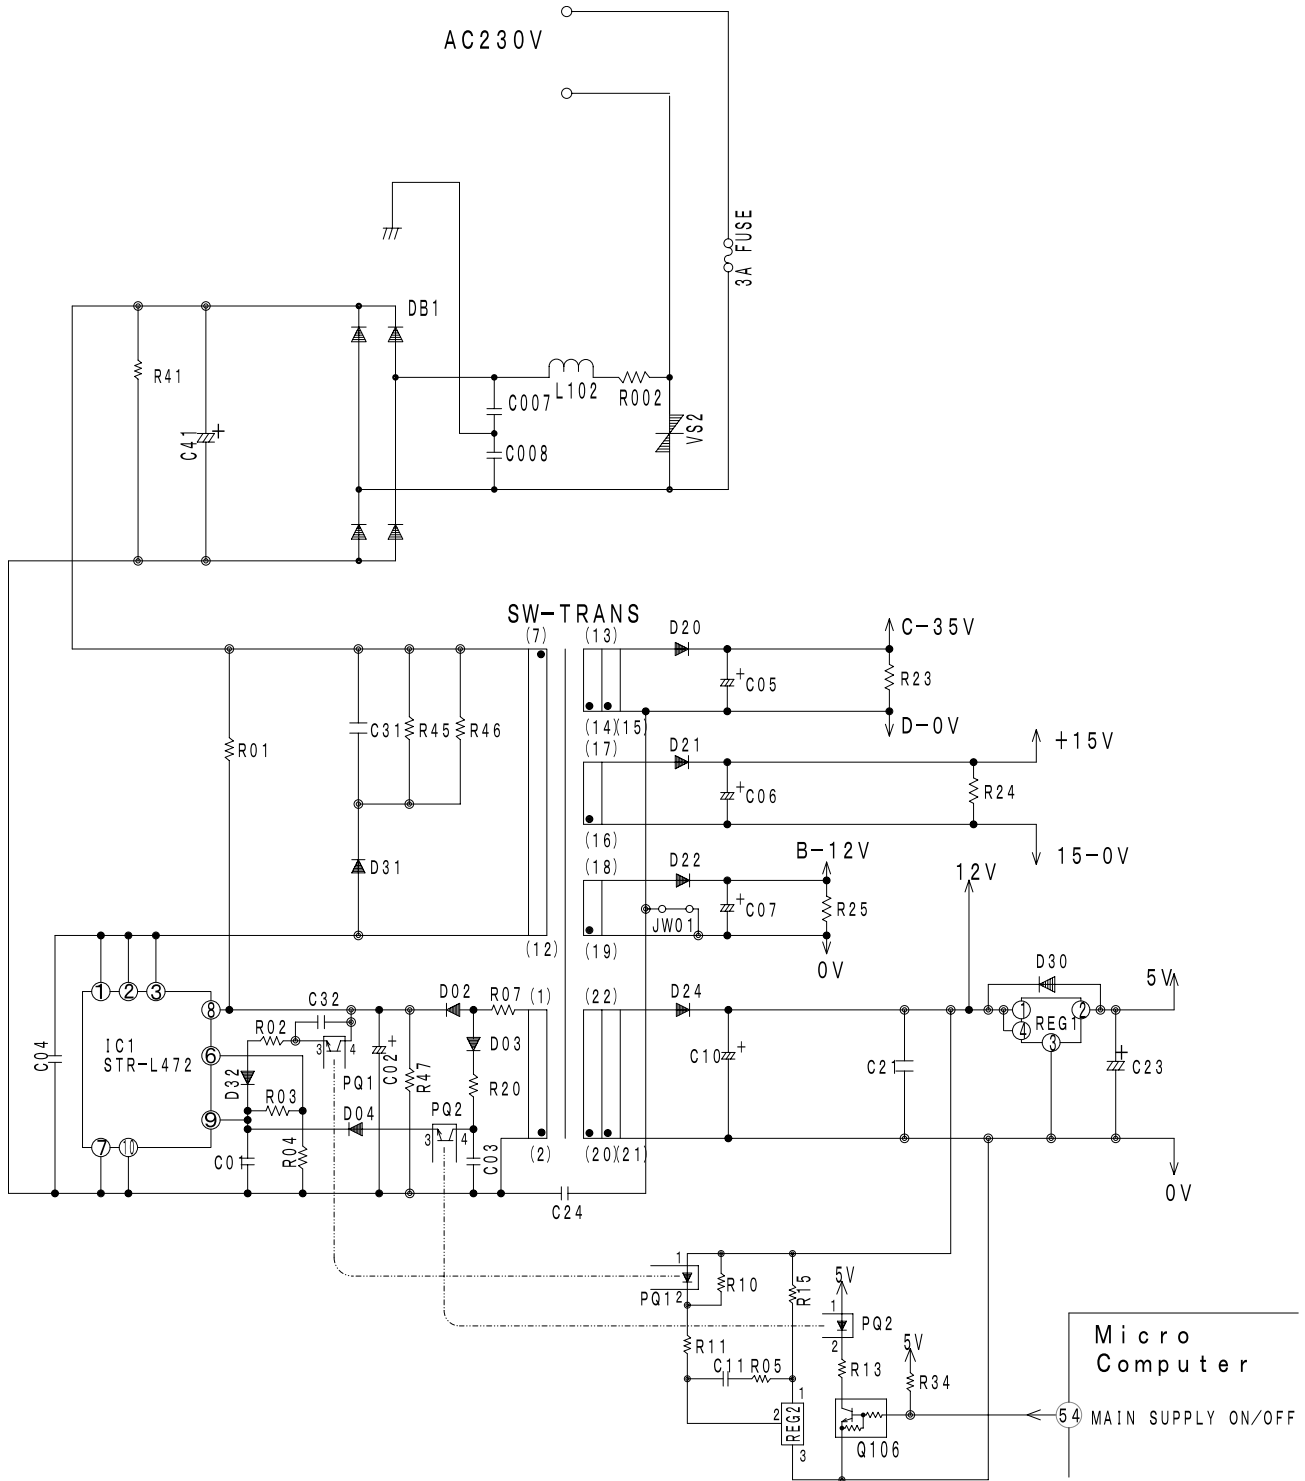

- In the power circuit for P.W.B., power supply for microcomputer, peripheral circuits, and IPM driver circuit and, as well as DC 35V, are produced by switching power circuit.
- Switching power circuit performs voltage conversion effectively by switching transistor IC1 to convert DC 330V voltage to high frequency of about 20kHz to 200kHz.

- The voltage specification of the power circuit is as follows.

<Check points>

Output	Voltage spec.	Main load	Measuring points		Potential failure modes
			+	-	
12V	11-13V	MAIN P.W.B. (CN3, CN4)	R701 ("12V" display) C21 ("12V" display)	R006 ("0V" display) J27, J30	The unit won't operate MAIN P.W.B. error
5V	4.5-6V	MAIN P.W.B. (CN3, CN4)	D30 anode ("5V" display) J25	R006 ("0V" display) J27, J30	The unit won't operate MAIN P.W.B. error
B-12V	11-16V	Expansion valve	R25 ("B-12V" display)	R25 ("B-0V" display)	LD301 blinks 5 times; Expansion valve error
15V	14-17V	DC fan motor (CN24) MAIN P.W.B. (CN3, CN4)	C06+ side	C06- side	LD301 blinks 3 times, or 4 times, or 12 times.
35V	33.5-38V	Indoor unit electrical parts (Terminal C,D) Reversing valve (CN2)	D20 cathode ("C-35V" display) Terminal C (blown line)	J5, J17 Terminal D (red line)	Indoor unit won't operate. Indoor / Outdoor miss connection.

- Check each voltage. If each voltage meets the voltage specification above, the power circuit is normal.
- If any error is found after checking, remove all loads and recheck each voltage.  
If no error is found in this step, the power circuit is normal. Check the removed loads.  
If any error is found in this step, the power circuit has any failure. Replace the power P.W.B.
- ※ A short-circuited load may cause an output error not only in the load but also in the others. Be sure to check all outputs of the loads.
- ※ Be sure to wait 15 minutes or more in order to discharge all the remaining voltage in the circuit to connect/disconnect the wiring, other wise, the components may be damaged.
- The failures of the loads are as follows.

Failed output	Possible causes	Criterion
35V	Reversed connection of the cable. Electrical part for the indoor unit has a failure.  Short-circuited reversing valve	Connect the cable correctly. Remove the connection cable and measure the voltage. If the voltage is correct, check the electrical parts for the indoor unit. Remove the CN2 and measure the voltage. If the voltage is correct, check the reversing valve.
15V	DC fan motor error  Main P.W.B. error	Remove the CN24 and measure the voltage. (connect the CN3.) If the voltage is correct, check the DC fan motor. Also, check the main P.W.B. 1A fuse for blow out in this step. Remove the CN3 and CN4 and measure the voltage. If the voltage is correct, check the main P.W.B.
12V, 5V	Main P.W.B. error	Remove the CN3 and CN4 and measure the voltage. If the voltage is correct, check the main P.W.B.

## 6. Microcomputer's Peripheral Circuits

### 6-1. Overload control circuit (OVL control circuit)

Overload control is to decrease the speed of the compressor and reduce the load when the load on the air conditioner increases to an overload state, in order to protect the compressor, electronic components and power breaker.

Overloads are judged by comparing the DC current level and set value

Fig.6-1 shows the overload control system configuration and Fig. 6-4 is a characteristic diagram on overload judgement values. There are two types of control which has named IS OVL and ID OVL.

IS OVL is limiting the whole input of this room air conditioner system through the current sensor CT1 in order to keep the maximum rating of components by reading total operating current.

ID OVL is watching and limits the compressor current through the detection resistor, which is built in IPM in order to control the compressor reliability. Since the compressor reliability is related with its speed, the ID OVL value is also linked with the compressor speed. Fig.6-2 shows an ID OVL limitation curve.

All of OVL operation values were programmed into EEPROM memory.

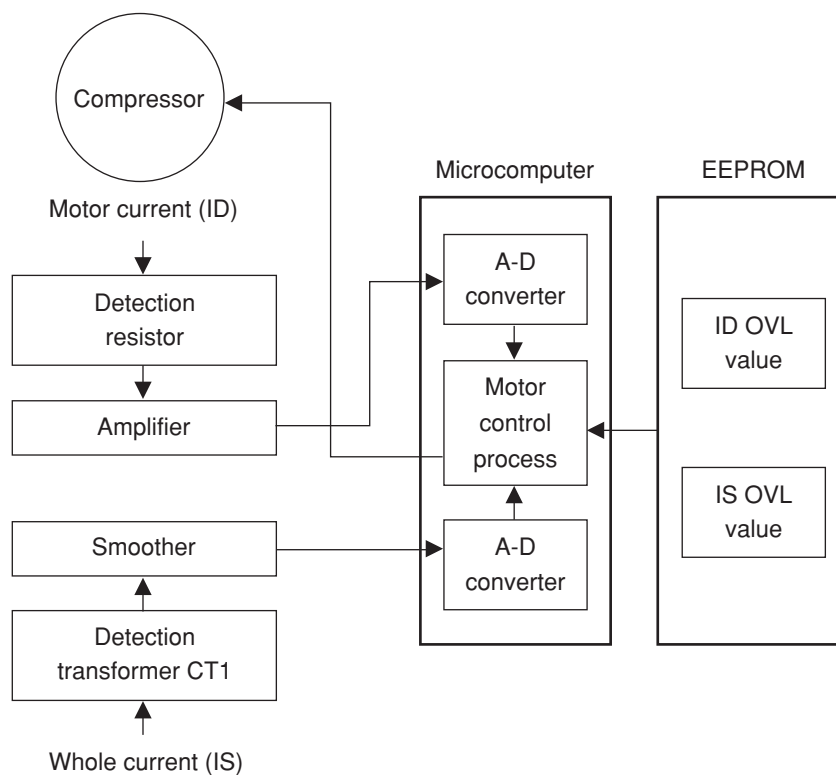


Fig. 6-1 Overload Control System

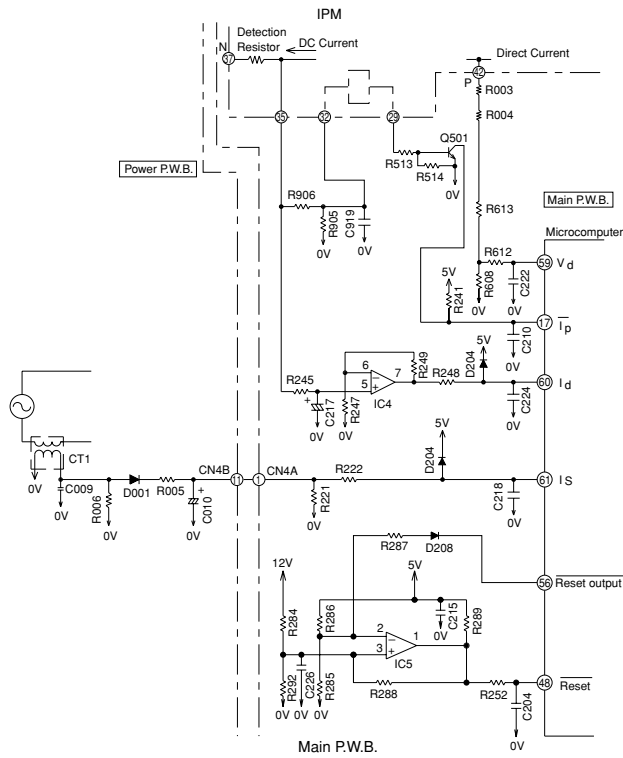


Fig. 6-2

(1) IS OVL

The voltage amp. circuit amplifies the DC current level detected by the detection transformer CT1. Receiving this, the microcomputer converts it to a digital signal and compares it with the internal data to judge whether or not overload control is required.

< During overload control >

The filter consisting of R245 and C217 removes high harmonic components from the voltage generate from the DC current flowing to the detection resistor, and supplies it to IC4 pin ⑤. IC4 forms a non-inverting voltage amp. circuit together with the peripheral elements.

The microcomputer stores the set values which vary according to the rotation speed. When the DC current level exceeds the set value, the microcomputer enters the overload control state.

The set Value is determined by the amplification of the voltage amp. circuit

- Amplification : high → DC current : low
- Amplification : low → DC current: high

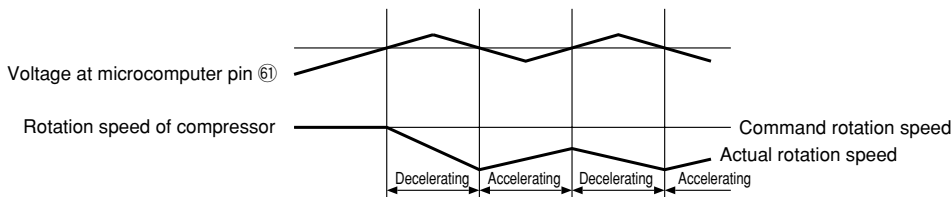


Fig. 6-3

(2) ID OVL

Fig. 6-2. The filter consisting of R245 and C217 removes high harmonic frequencies from the voltage generated by the current flowing to Detection resistor; R245 and C217 average the voltage. This voltage is then input to IC4 pin ⑤ and supplied to microcomputer pin ⑥0 . The microcomputer compares this input with the set value, and if the input exceeds the set value, it enters overload control status.

Fig. 6-3 shows the rotation speed control. When the voltage at pin ⑥0 of the microcomputer exceeds the set value, the microcomputer decreases the rotation speed of the compressor and reduces the load.

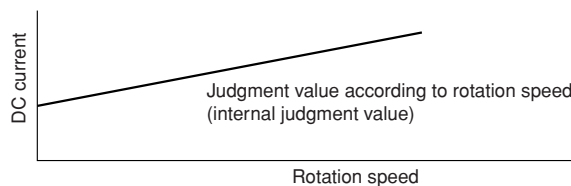


Fig. 6-4

R003,R004,R608,R613, detect the DC voltage at the power circuit. The microcomputer receives a DC voltage and applies correction to the overload set value so the DC current will be low when the DC voltage is high.

(Since the load level is indicated by the DC voltage multiplied by DC current, R247, R248, R249 are provided to perform the same overload judgement even when the voltage varies.)

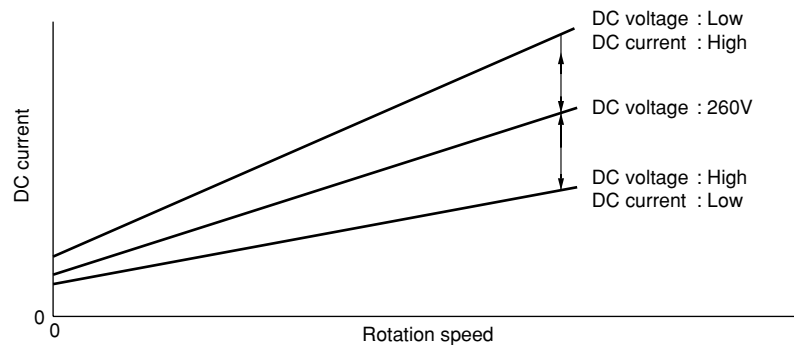


Fig. 6-5

(3) Start current control

It is required to maintain the start current (DC current) constant to smooth the start of the DC motor of the compressor.

RAC-18YH4 uses software to control the start current.

The start current varies when the supply voltage varies. This control method copes with variations in the voltages as follows.

- (1) Turns on the power module's U<sup>+</sup> and V<sup>-</sup> transistors so the current flows to the motor windings as shown in Fig. 6-6.
- (2) Varies the turn-ON time of the W<sup>+</sup> transistor according to the DC voltage level and the start is controlled so the start current is approx. 10A .

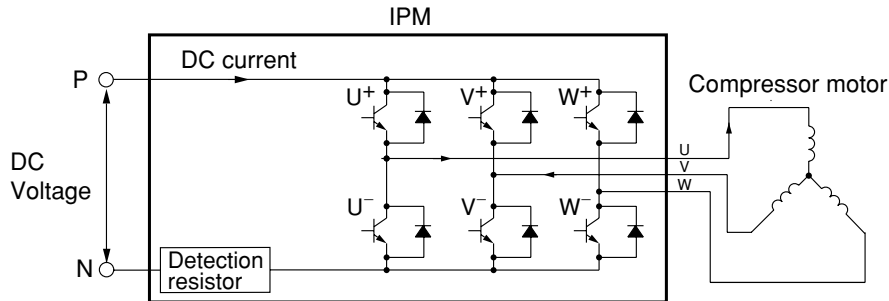


Fig. 6-6



## 6-2. Reset Circuit

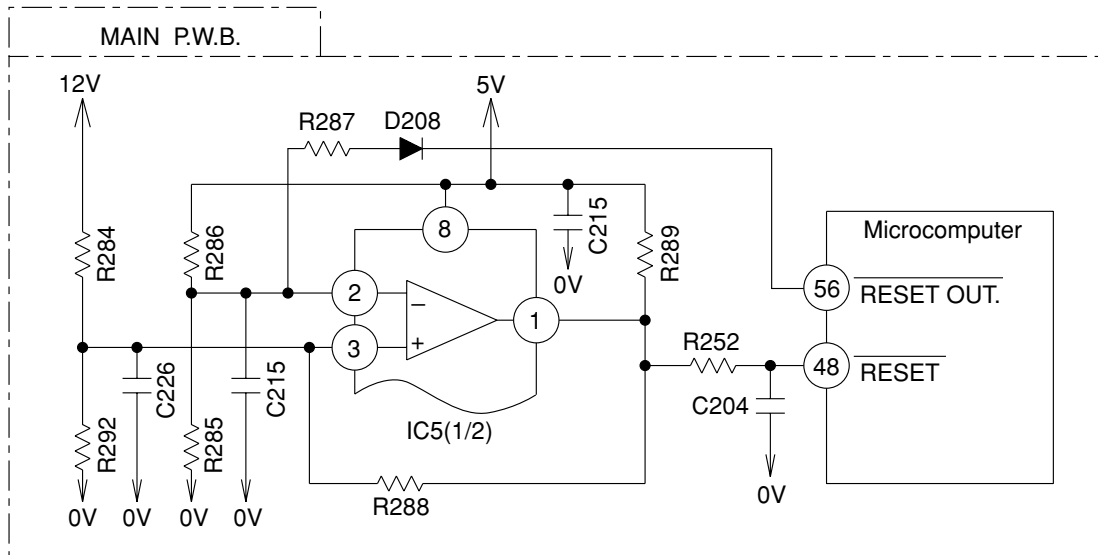


Fig. 6-7

The reset circuit initializes the microcomputer program when Power is “ON” from “OFF”. Low voltage at pin ④⑧ resets the microcomputer, and HI activates the microcomputer. Fig. 6-7 shows the reset circuit and Fig. 6-8 shows waveform at each point when power is turned on and off.

When power is turned on, 12V line and 5V line voltages rise and 12V line voltage reaches 10.9V a reset voltage input to pin ④⑧ of microcomputer is set to Hi.

Reset voltage will be hold “Hi” until the 12V line voltage drops to 9.9V even though the power shuts down.

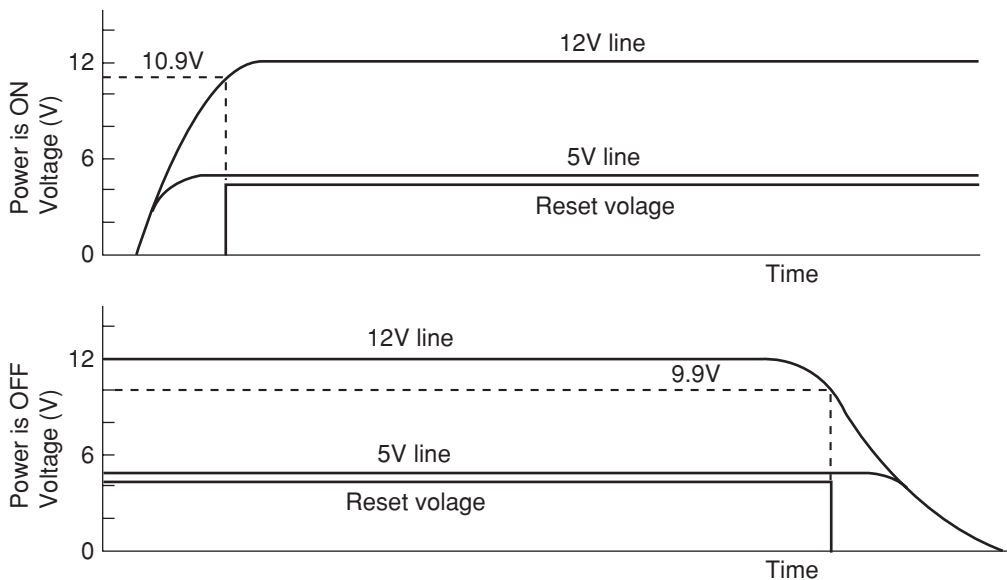


Fig. 6-8

## 7. Temperature Detection Circuit

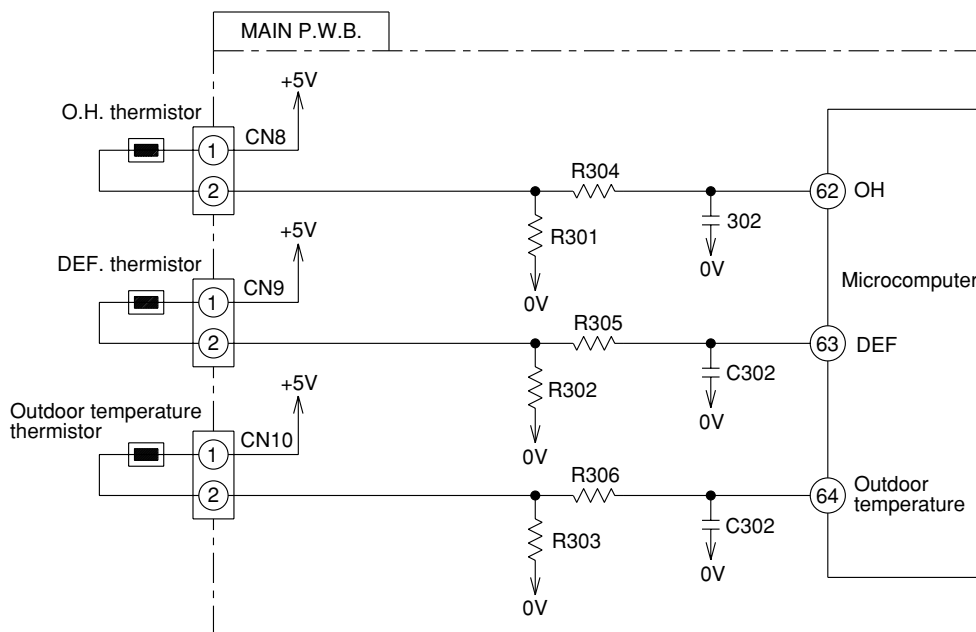


Fig. 7-1

The Over heat thermistor circuit detects the temperature at the surface of the compressor head, the Defrost. thermistor circuit detects the defrosting operation temperature.

A thermistor is a negative resistor element which has the characteristics that the higher (lower) the temperature, the lower (higher) the resistance.

When the compressor is heated, the resistance of the Over heat thermistor becomes low and voltage to a pin 62 of microcomputer is increased.

Microcomputer compares the voltage at pin 62 with the internal set value, if it is exceeded the set value microcomputer judges that the compressor is overheated and stops operation.

When frost forms on the outdoor heat exchanger, the temperature at the exchanger drops abruptly. Therefore the resistance of the Defrost. thermistor becomes high and the voltage at pin 63 of microcomputer drops. If this voltage becomes lower than the set value stored inside, the microcomputer starts defrosting control. During defrosting operation the microcomputer transfers the defrosting condition command to the indoor microcomputer via the circuit interface.

The microcomputer always reads the outdoor temperature via a thermistor (microcomputer pin 64), an transfers it to the indoor unit, thus controlling the compressor rotation speed according to the value set at the EEPROM in the indoor unit, and switching the operation status (outdoor fan on/off, etc.) in the dehumidifying mode.

The following shows the typical values of outdoor temperature in relation to the voltage:

Table 7-1

Outdoor temperature (°C)	- 10	0	10	20	30	40
R303 Voltage (V)	1.19	1.69	2.23	2.75	3.22	3.62

### <Reference>

When the thermistor is open, in open status, or is disconnected, microcomputer pins 62 – 64 are approx. 0V; when the thermistor is shorted, they are approx. 5 V, and LD301 blinks seven times.

However, an error is detected only when the OH thermistor is shorted; in such a case, the blinking mode is entered 12 minutes after the compressor starts operation.

## 8. Reversing valve control circuit

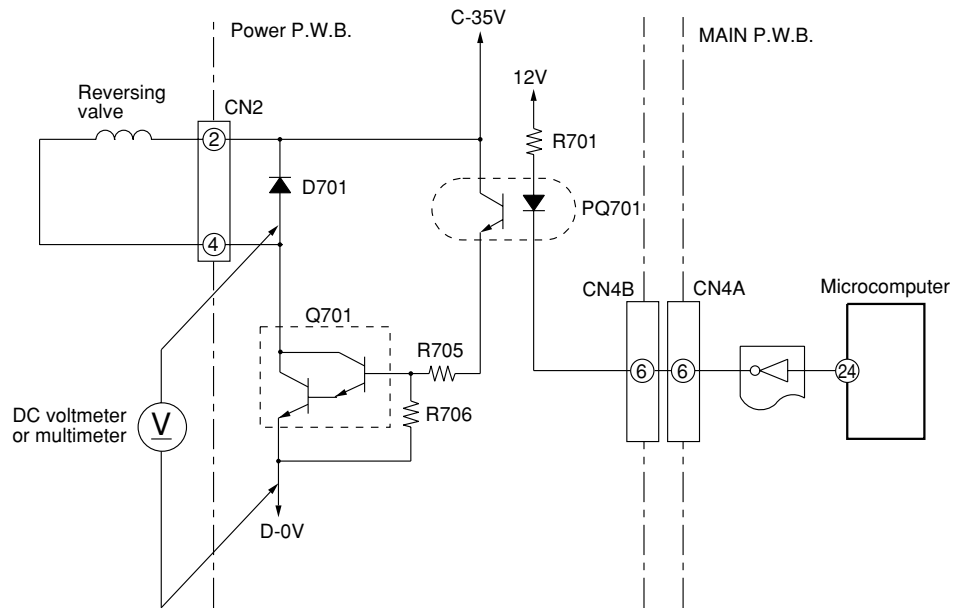


Fig. 8-1

Reversing valve control circuit will switch reversing valve ON/OFF (cooling ON) according to instruction from indoor microcomputer depending on the operation condition shown in Table 8-1. Voltage at Q701 (between Collector and Emitter) in each operation condition is approximately as shown in Table 8-1 when measured by multimeter.

Table 8-1

Operation condition		Collector voltage of Q701
Cooling	General operation of cooling	About 0.8V
Heating	In normal heating operation	About 35V
	MAX. rotation speed instructed by indoor microcomputer after defrost is completed	About 35V
	Defrosting	About 0.8V
Dehumidifying	Sensor dry	About 0.8V

## 9. Electric expansion valve control circuit

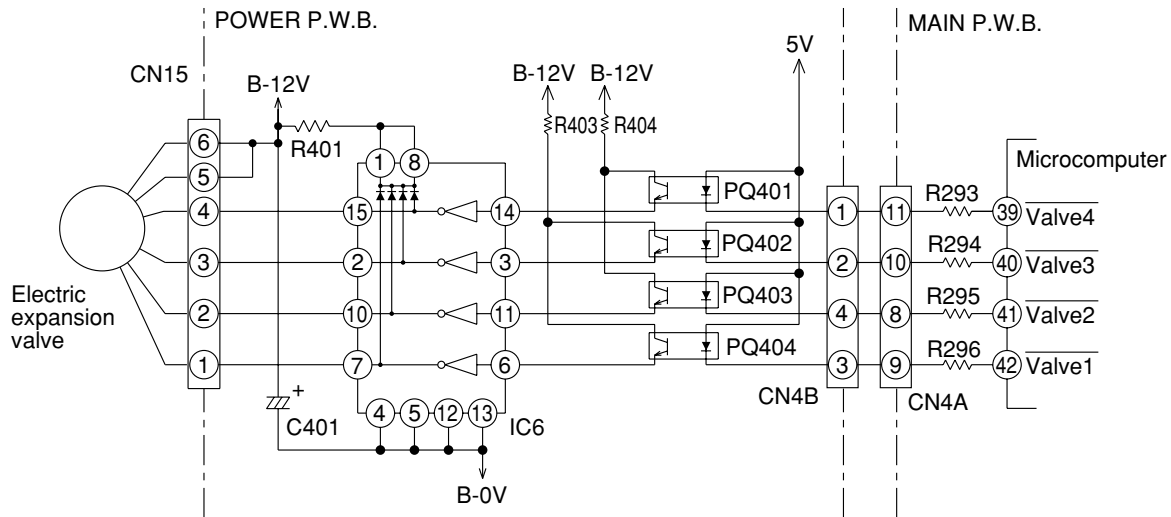


Fig. 9-1

- To drive the expansion valve, use the B-12 V output. Use a 4-phase coil and feed power to the phases 1 and 2, then switch over the filed poles to control the opening of the valve.
- The reference between conducting phase switch over direction and the open/close direction are shown in Table 9-1. When the power is turned on, approx. 0.9 V is applied to the CN15 and the pins (① to ④) and when no power is supplied, 12 V is applied. When the power is reset, the expansion valve starts initial operation for 5 to 10 seconds.
- During the initial operation, measure each pin of the CN15 (① to ④) with a multimeter. If no change is found around 0.9 V or 12V in this step, the expansion valve or the micro computer has failure.
- The logic waveform during the operating of the expansion valve is shown in Fig. 9-2.

Table. 9-1

CN15 Pin No.	Lead wire	Drive status							
		1	2	3	4	5	6	7	8
④	White	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
③	Yellow	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
②	Orange	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
①	Blue	OFF	OFF	OFF	OFF	OFF	ON	ON	ON

Operation mode  
 1→2→3→4→5→6→7→8 VALVE CLOSE  
 8→7→6→5→4→3→2→1 VALVE OPEN


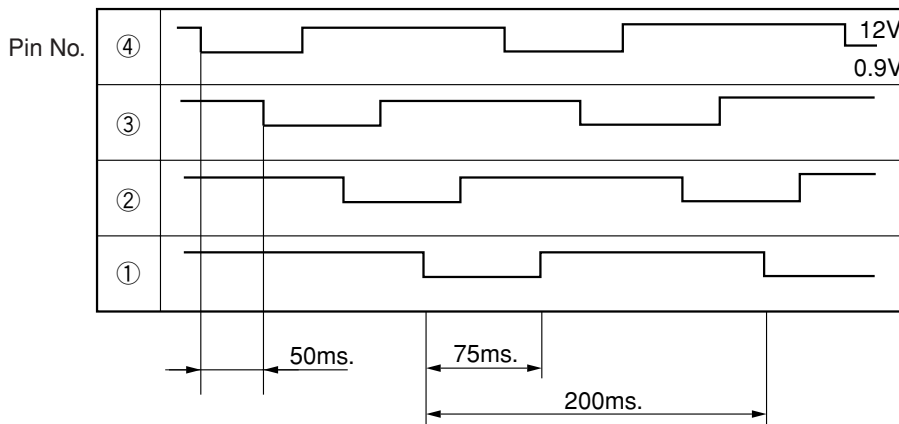


Fig. 9-2

## 10. Outdoor DC Fan Motor control circuit

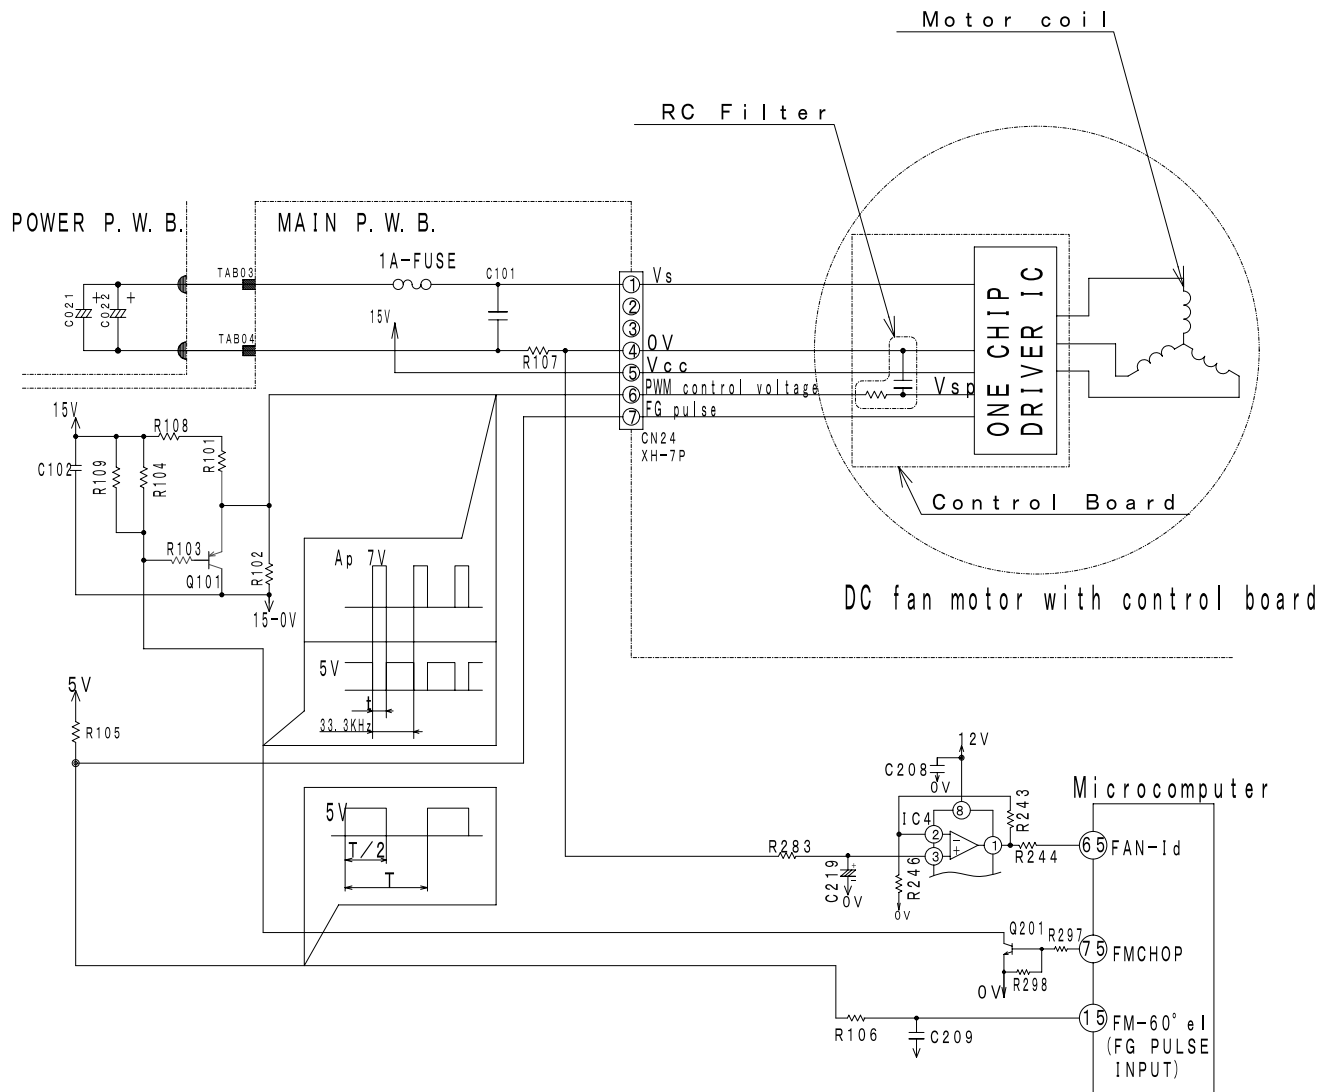

This model uses DC Fan Motor which has a controller circuit built in the Motor.

This DC Fan Motor will rotate by control voltage apply to Vsp input. (Voltage range: 1.7 to 7V DC)

Vsp high : Faster ;

Vsp low : slower ;

Vsp lower than 1.7V : stop

Motor will output FG pulse by following this motor revolution.

Outdoor microcomputer will output PWM control signal from (75) by following the instruction from indoor microcomputer.

This PWM control signal will convert to Vsp voltage by smoothing circuit (R242 & C209)

Fan motor will start to rotate when Vsp was proceeding over than 1.7V, and generate FG pulse by rotation speed.

FG pulse will feed back to Outdoor microcomputer (15).

DC Fan Motor circuit has to match the Fan Motor revolution with instructed revolution. Such as...

FG feedback: Faster Instruction: Slower ... Decrease pulse width

FG feedback: Slower Instruction: Faster ... Increase pulse width

FG pulse is also used for Fan Motor failure detection.

Microcomputer will monitor FG pulse 30 seconds after start the fan motor. If there is no signal detected, it will consider that the Fan Motor was malfunction and stop the operation. In this case, LD302 on control P.W.B. will blink 12 times. (Fan Motor lock detected)

R107 and IC4 are used for Fan Motor over current.

< Reference >

When operation stop with LD301 blinks 12 times, it may be caused by faulty DC fan motor.

In this case, please check CN6 and CN12 connection first. It makes Fan Motor Lock also if those connectors are in misconnection.

DC Fan Motor has broken invites 1A Fuse burned. Please replace both DC Fan Motor and 1A Fuse together.

It will makes "Fan Lock Stop" when something has disturb the Fan rotation by inserting materials into propeller fan or ice has growing inside of outdoor unit by snowing.

It may make "Fan Lock Stop" by strong wind (ex.17m/sec. or above) against the Fan rotation. In this case unit will be restart again after a while.

In case of " Fan Lock Stop" even though the DC Fan Motor is rotating correctly, the possible cause in Fan Motor problem or control board problem. Stop after the Fan motor runs 2 minutes, Fan Motor may be broken.

< Caution >

Please take care for the electrical shock by high voltage of DC Fan Motor power source which is common with compressor when you are servicing this unit.

You can not confirm the coil and wiring of Motor directly due to the built in control circuit in Fan Motor.

## SERVICE CALL Q & A

MODEL RAS-18YH4 / RAC-18YH4

### COOLING MODE

**Q1)** The compressor has stopped suddenly during cooling operation.



**A1)** Check if the indoor heat exchanger is frosted. Wait for 3-4 minutes until it is defrosted.

If the air conditioner operates in cooling mode when it is cold, the evaporator may get frosted.

### DEHUMIDIFYING MODE

**Q2)** Fan speed is not switched over during dehumidifying operation.



**A2)** Fans speed is normally set to LOW during dehumidifying operation.

**Q3)** Cool air comes from the unit during dehumidifying operation.



**A3)** To have an operation with high dehumidifying effect, the unit operates at low fan speed. As a result, cool air comes from the unit. This phenomenon is not a fault.

### HEATING MODE

**Q4)** The circulation stops occasionally during Heating mode.



**A4)** It occurs during defrosting. Wait for 5-10 minutes until the condenser is defrosted.

**Q5)** When the fan speed is set at HIGH or MED, the flow is actually Weak.



**A5)** At the beginning of heating, the fan speed remains LOW for 30 seconds. If HIGH is selected, it switches to LOW and again to MED after additional 30 seconds.

**Q6)** Heating operation stops while the temperature is preset at "30".



**A6)** If temperature is high in the outdoor, heating operation may stop to protect internal devices.

**Q7)** When "Auto fan" mode is set, the indoor fan speed changes from HIGH through MED to LOW.



**A7)** This is not an error. The anti cool air function shows this phenomenon.

In the fan "Auto" mode, the unit detects the heat exchange temperature. When the temperature becomes low, the fan speed changes from HIGH, through MED to LOW.



## AUTO FRESH DEFROSTING

**Q8** After the ON/OFF button is pressed to stop heating, the outdoor unit is still working with the OPERATION lamp lighting.



**A8** Auto Fresh Defrosting is carried out : the system checks the outdoor heat exchanger and defrosts it as necessary before stopping operation.

## AUTO OPERATION

**Q9** Fan speed does not change when fan speed selector is changed during auto operation.



**A9** At this point fan speed is automatic.

## NICE TEMPERATURE RESERVATION

**Q10** When on-timer has been programmed, operation starts before the preset time has been reached.



**A10** This is because Nice temperature reservation function is operating. This function starts operation earlier so the preset temperature is reached at the preset time. Operation may start maximum 60 minutes before the preset time.

**Q11** Does Nice temperature reservation function operate during dehumidifying?



**A11** It does not work. It works only during cooling and heating.

**Q12** Even if the same time is preset, the operation start time varies.



**A12** This is because Nice temperature reservation function is operating. The start time varies according to the load of room. Since load varies greatly during heating, the operation start time is corrected, so it will vary each day.

## INFRARED REMOTE CONTROL

**Q13** Timer cannot be set.



**A13** Has the clock been set? Timer cannot be set unless the clock has been set.

**Q14** The current time display disappears soon.



**A14** The current time disappears in approx. 10 seconds. The time set display has priority.

When the current time is set the display flashes for approx 3 minutes.

**Q15** The timer has been programmed, but the preset time disappears.



**A15** Is the current time past the preset time? When the preset time reaches the current time, it disappears.

**Q16** When the “Sleep” timer is set during operation,  
(1) The indoor fan won’t rotate.  
(No air comes from the unit)  
(2) The air speed won’t change.



**A16** (1) The temperature arrives at the preset indoor temperature and the air conditioner unit is temporarily stopped. Within about 3 minutes, the fan starts rotation.  
(2) When the unit operates at “LOW” air speed, it continues to operate at the same speed.

**Q17** The preset temperature is not indicated on the remote control.



**A17** When automatic operation is performed, the preset temperature won’t be indicated. However, you can adjust the temperature within a range of  $\pm 3^{\circ}\text{C}$  by pressing the “Room Temperature” button.  
If the temperature is  $1^{\circ}\text{C}$  higher than the auto preset temperature,  $\blacktriangle 1^{\circ}\text{C}$  will appear.  
If the temperature is  $1^{\circ}\text{C}$  lower than the auto preset temperature,  $\blacktriangledown 1^{\circ}\text{C}$  will appear.

**OTHERS**

**Q18** The indoor fan varies among high air flow, low air flow and breeze in the auto fan speed mode. (Heating operation)



**A18** This is because the cool wind prevention function is operating, and does not indicate a fault.

The heat exchanger temperature is sensed in the auto speed mode. When the temperature is low, the fan speed varies among high air flow, low air flow and breeze.

**Q19** Loud noise from the outdoor unit is heard when operation is started.



**A19** When operation is started, the compressor rotation speed goes to maximum to increase the heating or cooling capability, so noise becomes slightly louder. This does not indicate a fault.

**Q20** Noise from the outdoor unit occasionally changes.



**A20** The compressor rotation speed changes according to the difference between the thermostat set temperature and room temperature. This does not indicate a fault.

**Q21** There is a difference between the set temperature and room temperature.



**A21** There may be a difference between the set temperature and room temperature because of construction of room, air current, etc. Set the temperature at a comfortable for the space.

**Q22** Air does not flow immediately after operation is started.



**A22** Preliminary operation is performed for one minute when the power switch on and heating or dehumidifying is set. The operation lamp blinks during this time for heating. This does not indicate a fault.


# TROUBLE SHOOTING

RAC-18YH4

## PRECAUTIONS FOR CHECKING


### **WARNING**

Remember that voltage of 175 V is applied to the 0V line on the P.W.B. or the like as shown in the right diagram.

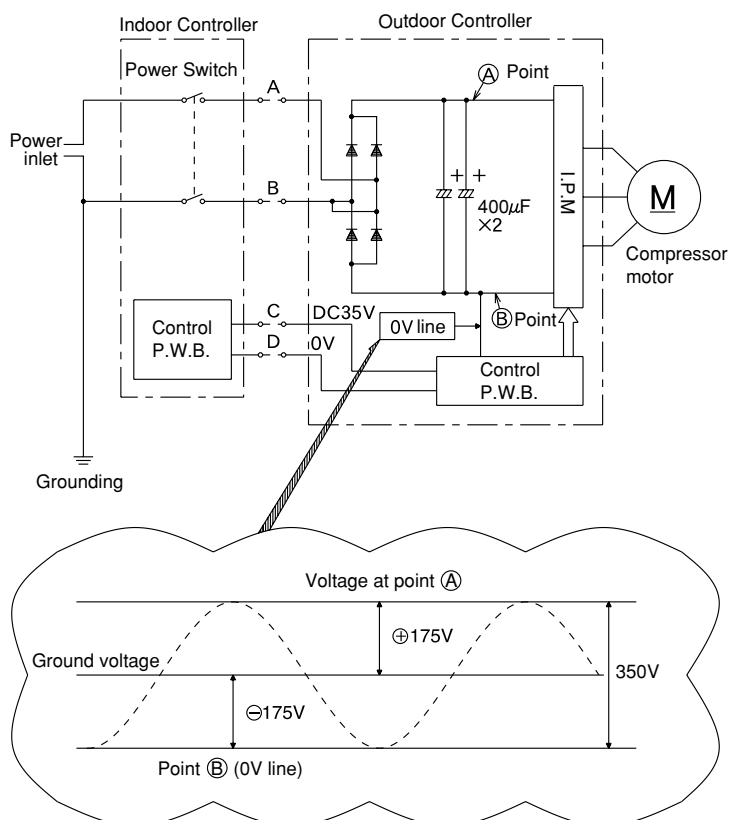

### **WARNING**

When using an oscilloscope, never ground it. Don't forget that high voltage as noted in the figure above may apply to the oscilloscope.

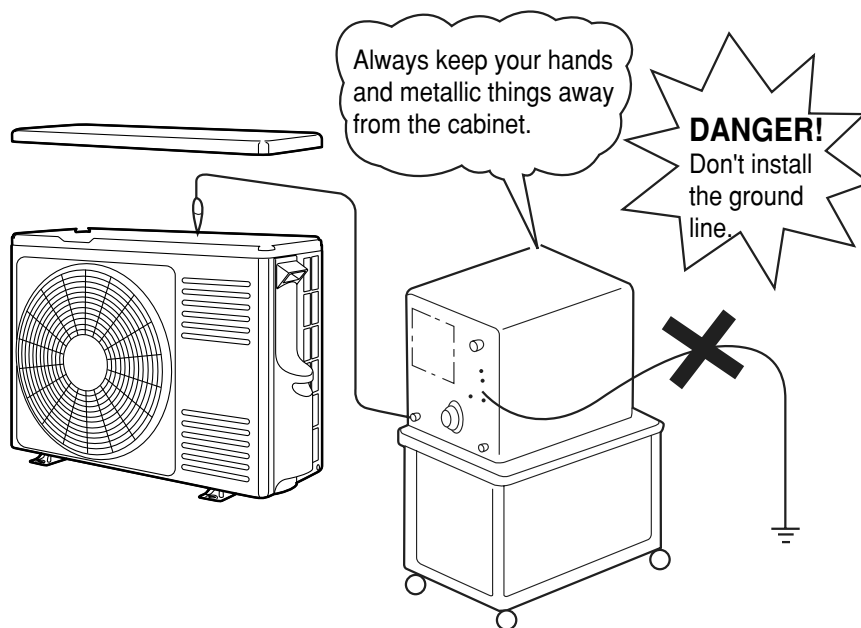

## DISCHARGE, PROCEDURE AND POWER SHUT OFF METHOD FOR POWER CIRCUIT



**WARNING**


### Caution

- Voltage of about 350 V is charged between the terminal of smoothing capacitors ( $400\mu\text{F} \times 2$ ).
- During continuity check for each circuit part of the outdoor unit, be sure to discharge the smoothing capacitors.

### Discharge Procedure


1. Turn off the power of the indoor unit or pull out the power supply plug.
2. After power is turned off, wait for 10 minutes or more. Then, remove electrical parts cover and apply soldering iron of 30 to 75 W for 15 seconds or more to TAB3(GRAY) and TAB4(RED) terminals on the main P.W.B. as shown in the figure below, in order to discharge voltage in smoothing capacitor.

Do not use a soldering iron with transformer: Otherwise, thermal fuse inside transformer will be blown.

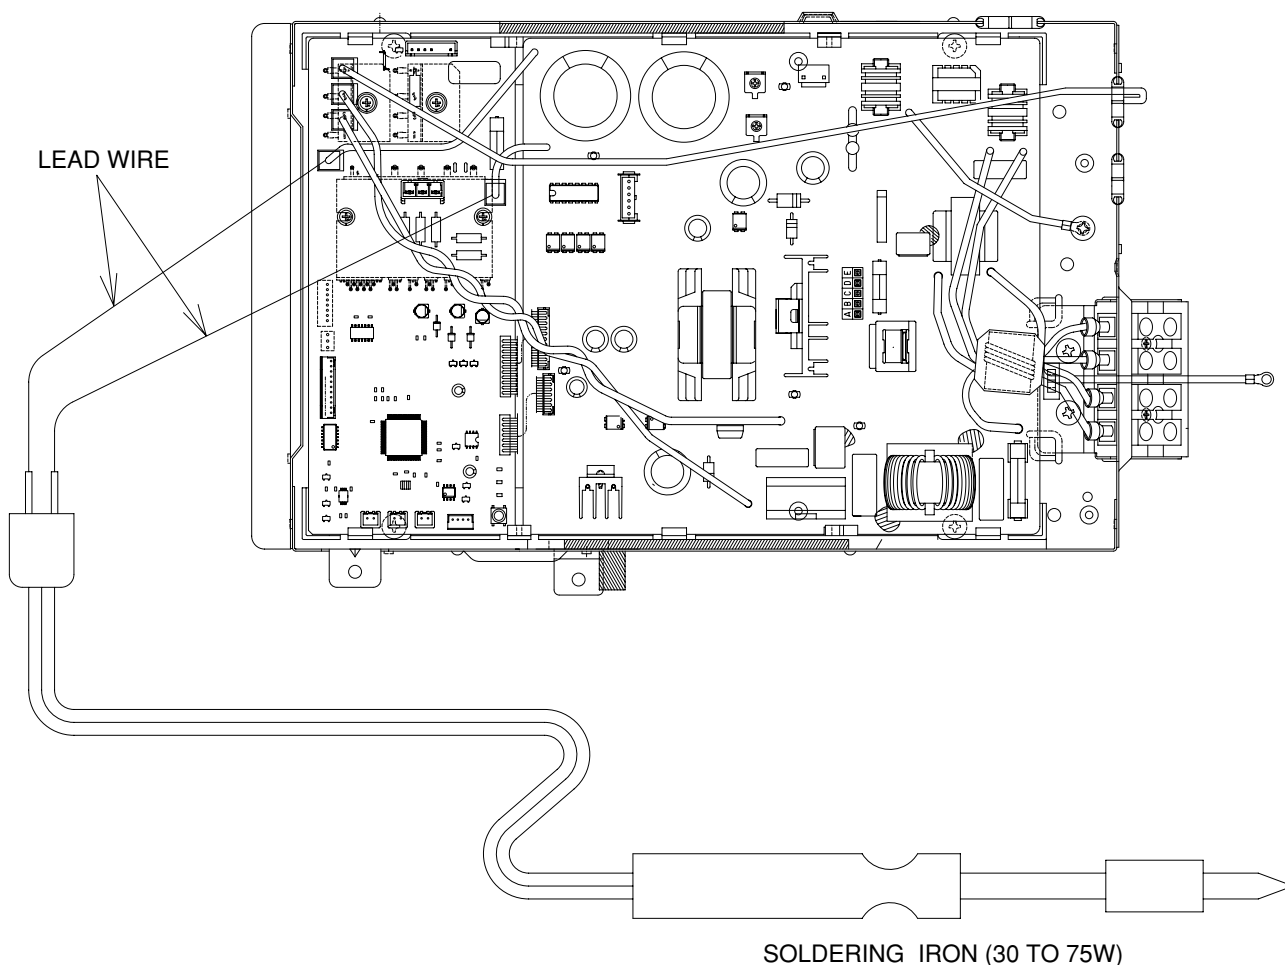

## STRUCTURE OF AN INDOOR UNIT ELECTRIC PARTS


RAS-18YH4

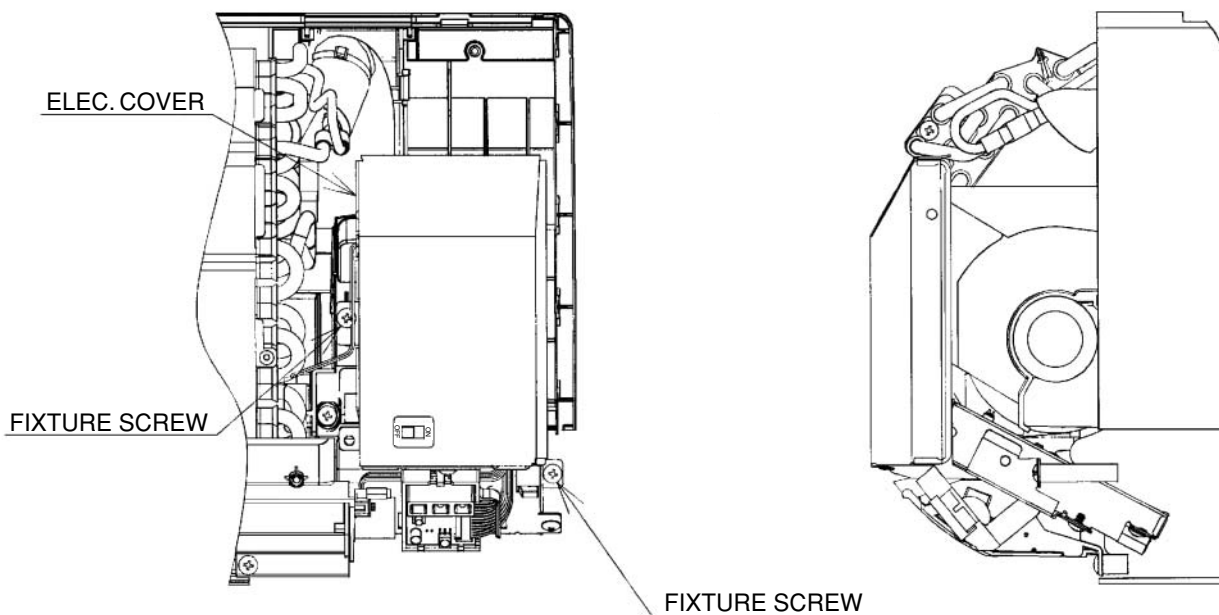

### Removing electrical parts

1. Remove the electrical parts cover.
2. Remove the connectors from the CN1 (heat exchange thermistor), CN4 (stepping motor) and CN10 (fan motor).
3. Remove two lock screws.
4. Remove the electrical parts in the direction of arrow.

When installing the parts, use caution not to pinch any code between the part and cabinet.

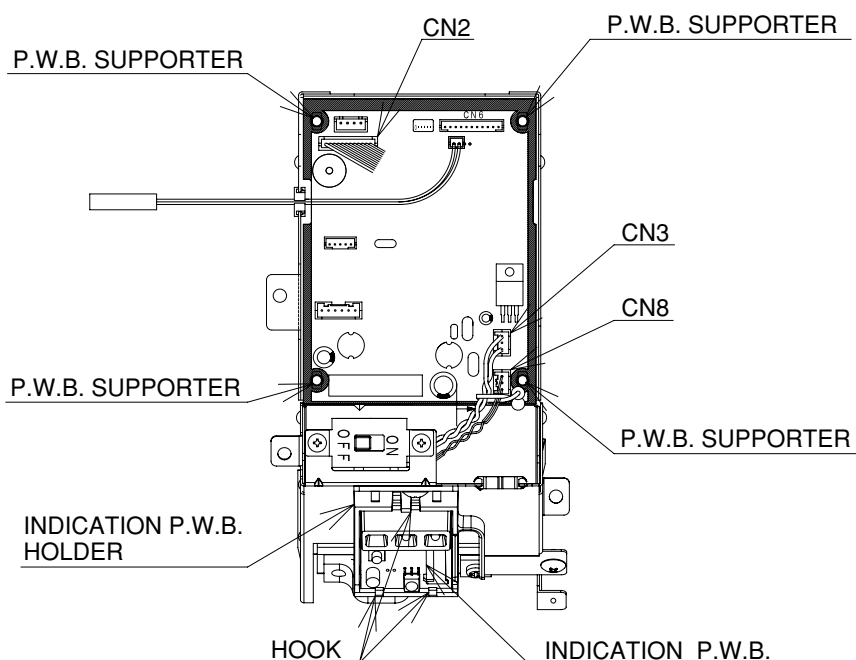

### Removing control P.W.B.

1. Remove the connectors from the CN2 and CN3.
2. Remove the P.W.B. from the P.W.B. support.


### Removing the indication P.W.B.

1. Remove the connector from the CN2 on the control P.W.B.
2. Remove the upper hook from the indication P.W.B. lock resin, pull the P.W.B., forward a little and remove it.


## Other Cautions

### (1) Cautions concerning ICP (IC Protector)


1. Use due caution for short circuit in servicing.  
Short circuit will open the ICP immediately.
2. When the ICP opens, remove the cause of this phenomenon and replace the ICP.  
If the remedy is improper, the ICP may open again.

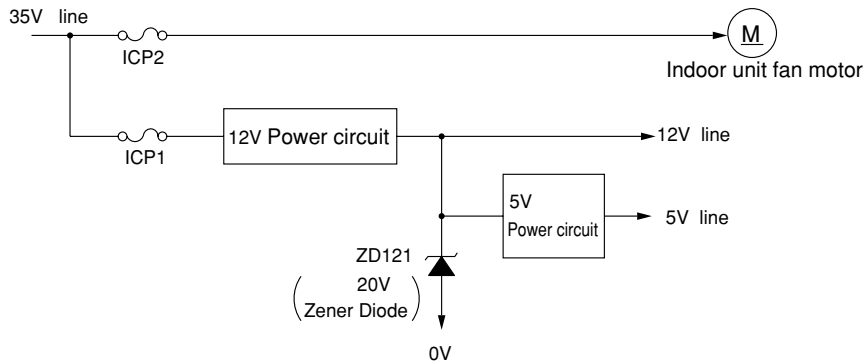

- (2) The CN3 (power supply) and CN10 (fan motor) are the connectors with lock mechanism.  
Press the lock with your fingers to unlock and remove the connector.

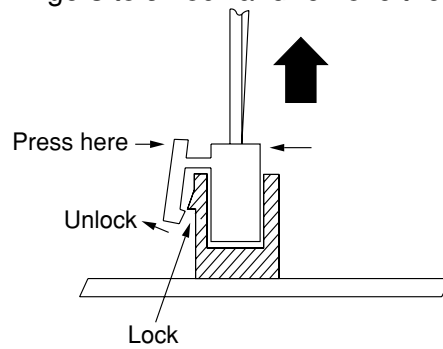

- (3) When checking the voltage and waveform, do not connect the probes to the forbidden areas show below. Touching them may cause the ICP1 blowout and Q111 failure.

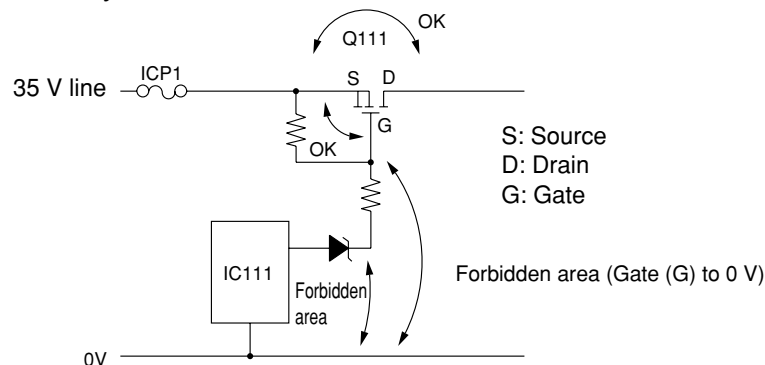

The Q111 is a MOS-FET and its gate terminal is a high impedance. When a probe such as a multimeter is contacted with the gate (G), the Q111 may have the continuous ON state to supply overcurrent in the circuit, causing the ICP1 blowout and Q111 failure.

When checking the switching waveform of the Q111, set the source (S) to the base and measure the gate (G) and drain (D).

- (4) During power feeding to the P.W.B., do not remove and insert the CN10 (fan motor connector). Failure to do so may cause overcurrent to the fan motor and P.W.B.s (micro computer, IC and the like) and a failure may occur. To remove or insert the CN10, be sure to shut off the power.












## TROUBLESHOOTING WHEN TIMER LAMP BLINKS.

MODEL RAS-18YH4

Perform troubleshooting according to the number of times the indoor timer lamp and outdoor LD301 blink.

SELF-DIAGNOSIS LIGHTING MODE

MODEL RAS-18YH4

No.	Blinking of Timer lamp	Reason for indication	Possible cause
1	 1 time	<u>Reversing valve defective</u> When the indoor heat exchanger temperature is too low in the heating mode or it is too high in the cooling mode.	(1) Reversing valve defective (2) Heat exchanger thermistor disconnected (only in the heating mode) (Note) The malfunction mode is entered the 3rd time this abnormal indication appears (read every 3 minutes).
2	 2 times	<u>Outdoor unit is under forced operation</u> When the outdoor unit is in forced operation or balancing operation after forced operation	Electrical parts in the outdoor unit
3	 3 times	<u>Indoor/outdoor interface defective</u> When the interface signal from the outdoor unit is interrupted.	(1) Indoor interface circuit (2) Outdoor interface circuit
4	 4 times	<u>Outdoor unit electrical components defective</u> When the same error mode is detected 8 times within 30 minutes from outdoor unit electrical components. (However, when error is detected 8 times within two hours only for outdoor thermistor.)	Outdoor unit electrical components (For details, operate again using remote controller and check from self-diagnosis display of outdoor unit.)
5	 9 times	<u>Room thermistor or heat exchanger thermistor is faulty</u> When room thermistor or heat exchanger thermistor is opened circuit or short circuit.	(1) Room thermistor (2) Heat exchanger thermistor
6	 10 times	<u>Over-current detection at the DC fan motor</u> when over-current is detected at the DC fan motor of the indoor unit.	(1) Indoor fan locked (2) Indoor fan motor (3) Indoor control P.W.B.
※1 7	 13 times	<u>IC401 or IC402 data reading error</u> When data read from IC401 or IC402 is incorrect.	IC401 or IC402 abnormal

(  --- Lights for 0.35 sec. at interval of 0.35 sec..)

### <Cautions>

- (1) If the interface circuit is faulty when power is supplied, the self-diagnosis display will not be displayed.
- (2) If the indoor unit does not operate at all, check if the connecting cable is connected to the outdoor unit.
- (3) To check operation again when the timer lamp is blinking, you can use the remote control for operation (except for mode mark ※1).

# SELF-DIAGNOSIS LIGHTING MODE

MODEL RAC-18YH4

**⚠ DANGER (DC350V)**

- CUT THE POWER SOURCE AND WAIT MORE THAN 10 MINUTES BEFORE SERVICE WORK.
- CONFIRM THE DC VOLTAGE AT THE MEASURING POINT SHOWN IN FIGURE MUST BE LESS THAN 10V.
- DO NOT TOUCH THE OTHER COMPONENTS WHEN OPERATING THE SERVICE SWITCH.

**SERVICE OPERATION**

PROCEDURE OF REFRIGERANT PUMP DOWN OR INDEPENDENT OPERATION OF OUTDOOR UNIT.

1. CUT OFF THE POWER SOURCE ONCE THEN ON AGAIN.
2. WAIT 1 MINUTE AT LEAST.
3. PRESS THE SERVICE SWITCH (WHICH IS ON THE PWB) MORE THAN 1 SECOND.

SERVICE OPERATION WILL BE STARTED.


TO STOP THIS OPERATION, PRESS THE SERVICE SWITCH AGAIN (MORE THAN 1 SECOND).

TO RESUME TO NORMAL OPERATION, CUT THE POWER SOURCE ONCE THEN ON AGAIN.

IN ORDER TO PROTECT THE DAMAGE OF COMPRESSOR, DO NOT OPERATE MORE THAN 5 MINUTES WITH SERVICE VALVE CLOSE.

SELF-DIAGNOSIS LIGHTING MODE: LIGHT <input checked="" type="checkbox"/> BLINK <input type="checkbox"/> OFF <input type="checkbox"/>			
MODE	SELF-DIAGNOSIS NAME	DETAILS	MAIN CHECK POINT
		[1] DURING OPERATION	LD303 (RED) LIGHTS. <input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/> NORMAL OPERATION	COMPRESSOR OPERATION	NOT MALFUNCTION
<input checked="" type="checkbox"/>	<input type="checkbox"/> OVERLOAD (1)	ROTATION SPEED (1) (2) SET VALUE (3) TIME THE ROTATION SPEED IS AUTOMATICALLY CONTROLLED TO PROTECT THE COMPRESSOR IN THE OVERLOAD CONDITION.	THIS SHOWS AN OVERLOAD PROTECTION STATUS.
<input type="checkbox"/>	<input checked="" type="checkbox"/> OVERLOAD (2)		NOT MALFUNCTION.
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/> OVERLOAD (3)		NOT MALFUNCTION.
		[2] DURING STOP	LD303 (RED) GOES OFF. <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/> NORMAL STOP	STOPPED BY THERMOSTAT OR CONTROLLER.	NOT MALFUNCTION.
<input checked="" type="checkbox"/>	<input type="checkbox"/> RESET STOP	MICROPROCESSOR WAS REBOOTED. (IT IS NORMAL WHEN POWER SW HAS BEEN TURNED ON)	⊙POWER P. W. B. ⊙MAIN P. W. B.
<input checked="" type="checkbox"/>	<input type="checkbox"/> PEAK CURRENT CUT	COMPRESSOR PEAK CURRENT WAS BEYOND MAXIMUM LIMIT.	⊙MAIN P. W. B. ⊙COMPRESSOR ⊙POWER P. W. B.
<input checked="" type="checkbox"/>	<input type="checkbox"/> ABNORMAL LOW SPEED ROTATION	LOST THE COMPRESSOR ROTOR POSITION.	⊙MAIN P. W. B. ⊙COMPRESSOR ⊙POWER P. W. B.
<input checked="" type="checkbox"/>	<input type="checkbox"/> SWITCHING FAILURE	SWITCHING FROM LOW FREQUENCY SYNC START TO POSITION DETECTION OPERATION FAILURE.	⊙MAIN P. W. B. ⊙COMPRESSOR ⊙POWER P. W. B.
<input checked="" type="checkbox"/>	<input type="checkbox"/> OVERLOAD LOWER LIMIT CUT	OVERLOAD PROTECTION FUNCTION IS REQUESTING LOWER SPEED THAN MINIMUM SPEED OF COMPRESSOR.	⊙OUTDOOR UNIT IS EXPOSED TO DIRECT SUNLIGHT OR ITS AIRFLOW BLOCKED. ⊙FAN MOTOR ⊙MAIN P. W. B. ⊙THE VOLTAGE IS EXTREMELY LOW.
<input checked="" type="checkbox"/>	<input type="checkbox"/> OH THERMISTOR TEMP. RISE	COMPRESSOR OVERHEAT WAS DETECTED BY OH THERMISTOR.	⊙LEAK OF REFRIGERANT ⊙COMPRESSOR ⊙OH THERMISTOR CIRCUIT (MAIN P. W. B.)
<input checked="" type="checkbox"/>	<input type="checkbox"/> THERMISTOR ABNORMAL	ABNORMAL THERMISTOR VALUE (OPEN OR SHORT) WAS DETECTED.	⊙THERMISTOR CONNECTION OF THERMISTOR DEFECTIVE ⊙THERMISTOR CIRCUIT
<input checked="" type="checkbox"/>	<input type="checkbox"/> ACCELERATION FAILURE	COMPRESSOR WAS NOT ACCELERATED MORE THAN MINIMUM SPEED.	⊙LEAK OF REFRIGERANT ⊙COMPRESSOR
<input checked="" type="checkbox"/>	<input type="checkbox"/> COMMUNICATIONS ERROR	COMMUNICATIONS BETWEEN INDOOR UNIT AND OUTDOOR UNIT ARE INTERRUPTED	⊙CABLE IS WRONG CONNECTED ⊙CABLE IS OPEN ⊙INTERFACE CIRCUIT OF BETWEEN INDOOR UNIT AND OUTDOOR UNIT
<input checked="" type="checkbox"/>	<input type="checkbox"/> ABNORMAL POWER SOURCE	ABNORMAL POWER SOURCE WAS DETECTED	⊙ABNORMAL POWER SOURCE ⊙CABLE IS WRONG CONNECTED ⊙POWER P. W. B. ⊙MAIN P. W. B.
<input checked="" type="checkbox"/>	<input type="checkbox"/> FAN LOCK ERROR	OUTDOOR FAN RPM IS NOT ROTATE AS INTENDED RPM	⊙FAN MOTOR ⊙FAN MOTOR CIRCUIT
<input checked="" type="checkbox"/>	<input type="checkbox"/> EEPROM READ ERROR	MICROCOMPUTER CANNOT READ THE DATA IN EEPROM.	⊙MAIN P. W. B.
*EXAMPLE OF BLINKING (5 TIMES)			● LIGHTS FOR 0.25 SEC AT INTERVAL OF 0.25 SEC.

IPM INTELLIGENT POWER MODULE

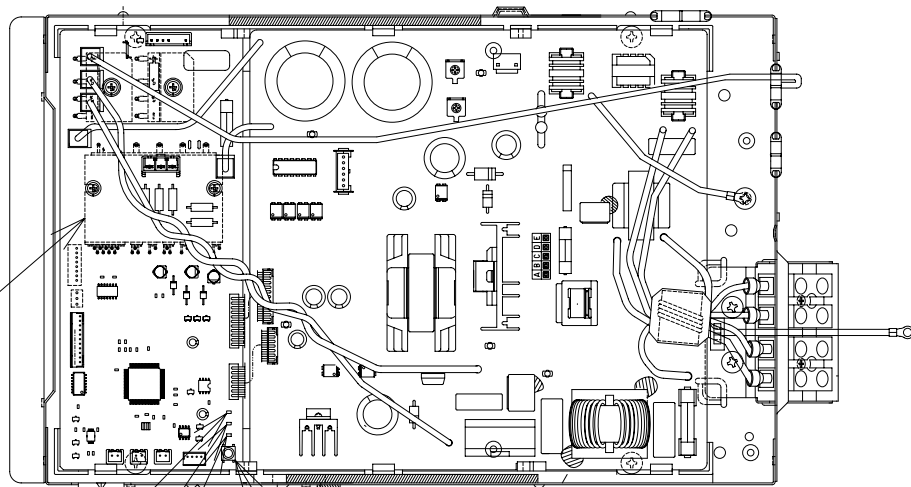


SELF DIAGNOSIS LAMPS

LD301  
LD302  
LD303

SERVICE SWITCH

## OUTDOOR UNIT

**Remove the compressor connector.**

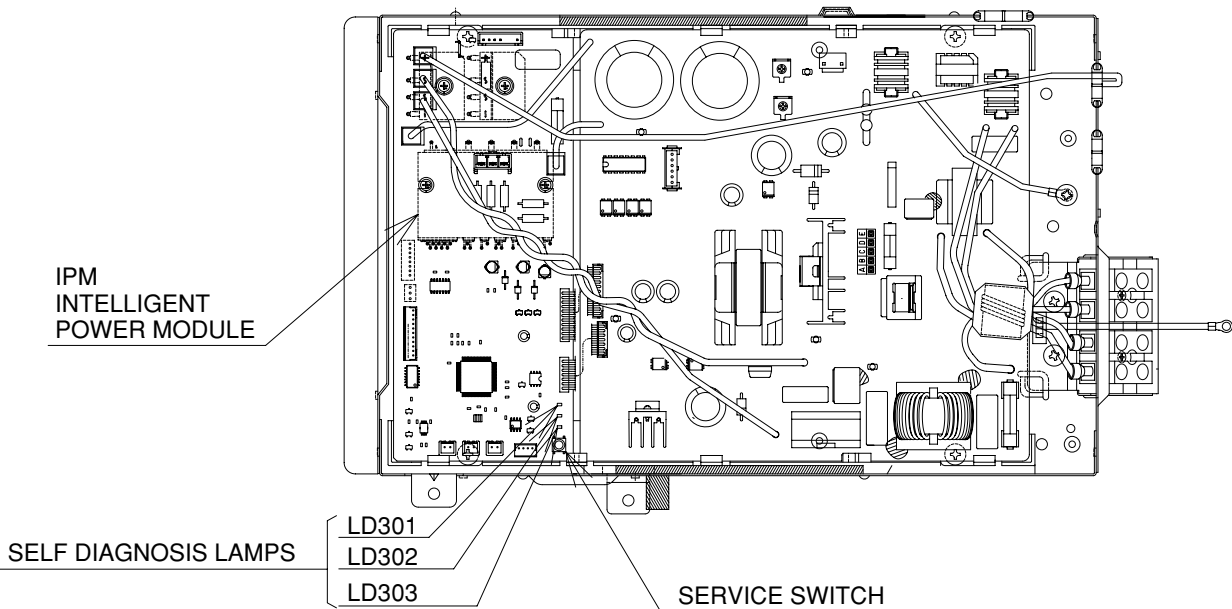

If your first attempt fails, wait 3 minutes (for the unit to re-start) and check the self-diagnosis lamp status again.

With the unit set in the operating state, press the start/stop button.  
Does the unit operate for approximately 2 seconds (the LD303 coming on) and then stop due to a failure of switching (the lamp blinking 4 times)?

Yes

- Check the drive circuit (IMP) using the PRD checker.
- Check the position sensor circuit.


Normal

Check the refrigerating cycle.

No


Check outdoor electrical parts.

# CHECKING THE INDOOR/OUTDOOR UNIT ELECTRICAL PARTS AND REFRIGERATING

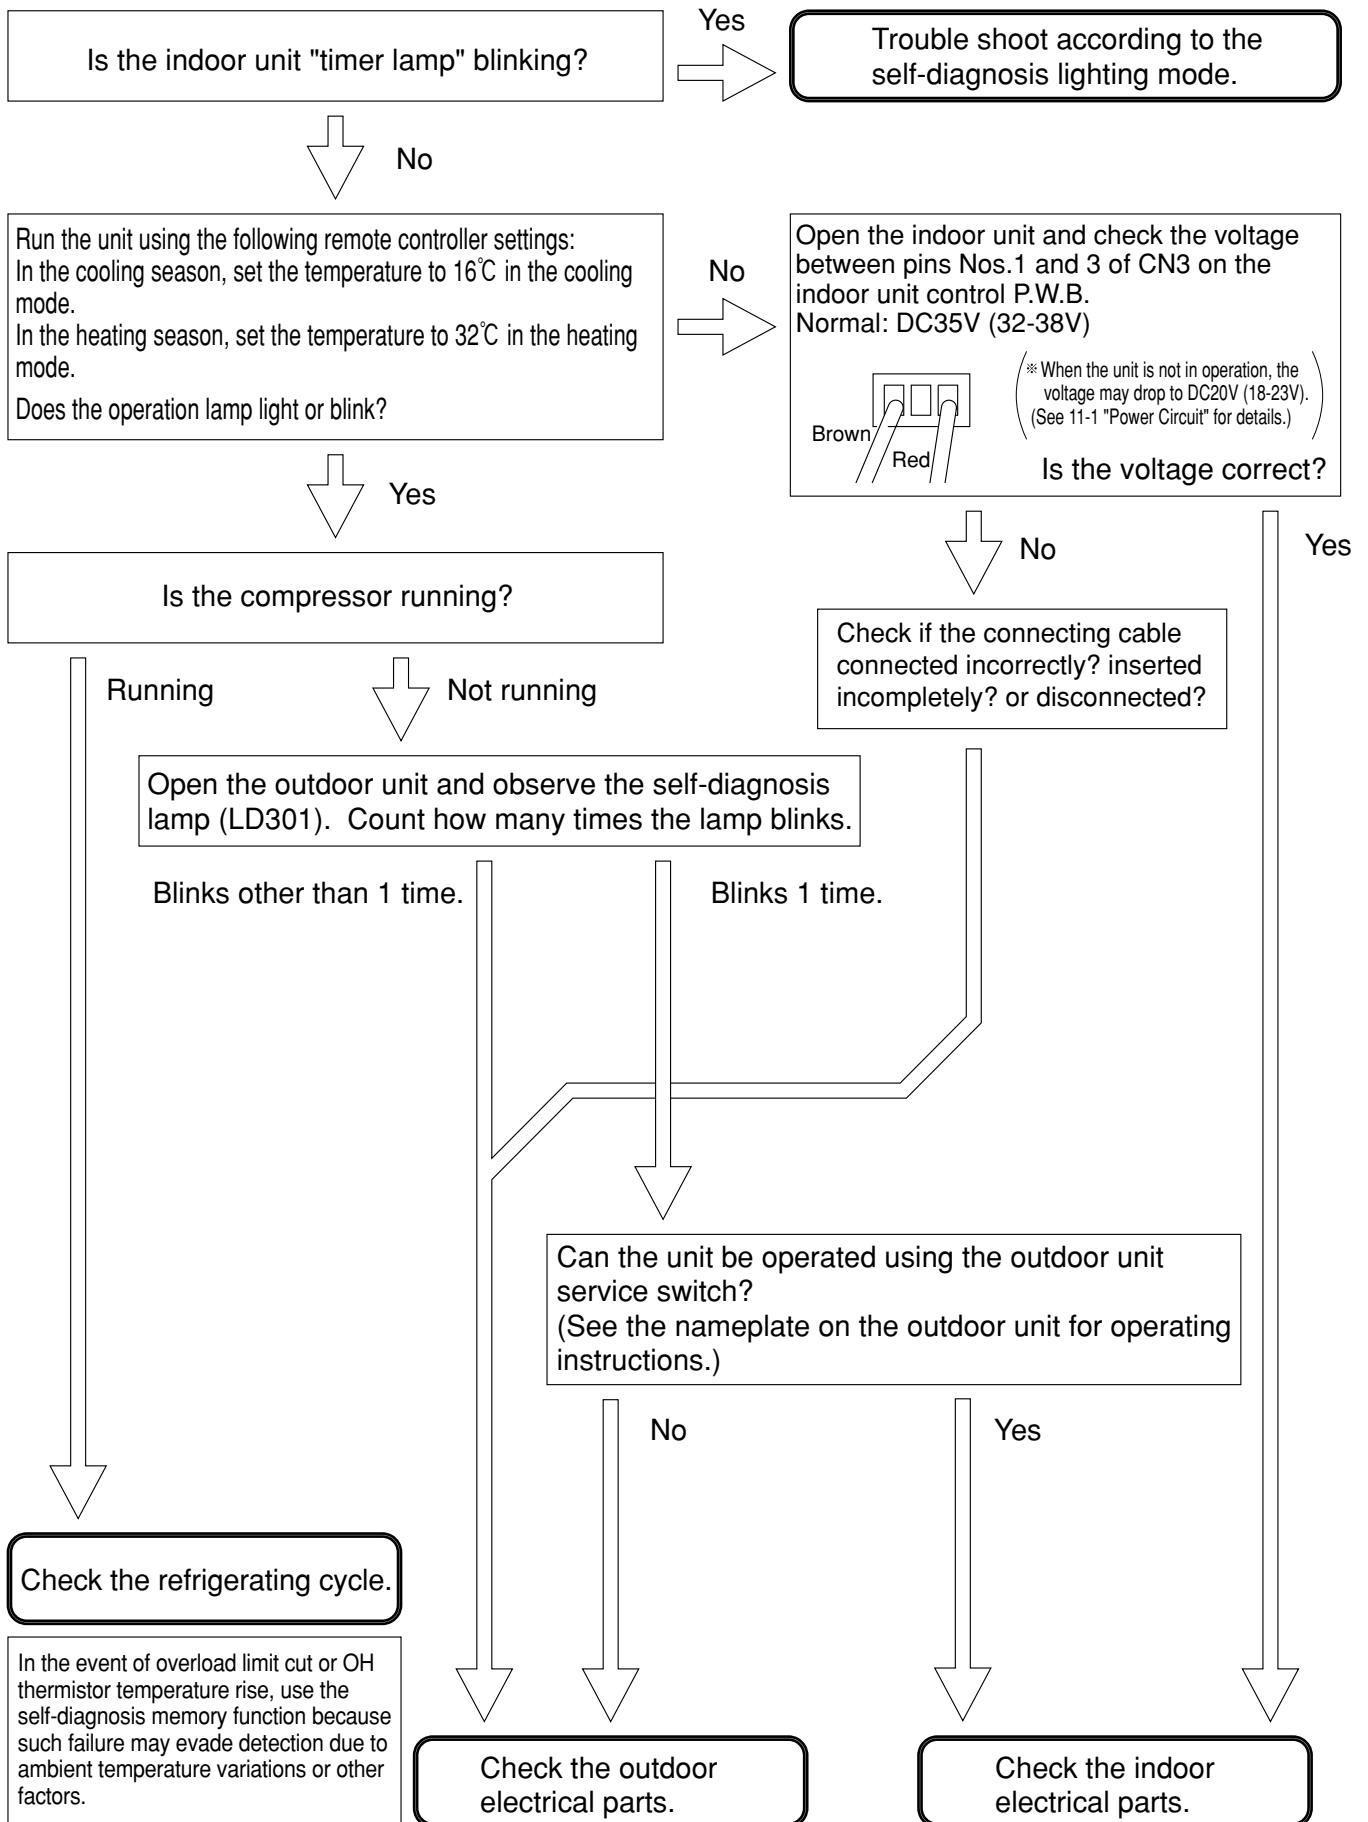

# CHECKING THE INDOOR UNIT ELECTRICAL PARTS


## 1. Power does not come on (no operation)

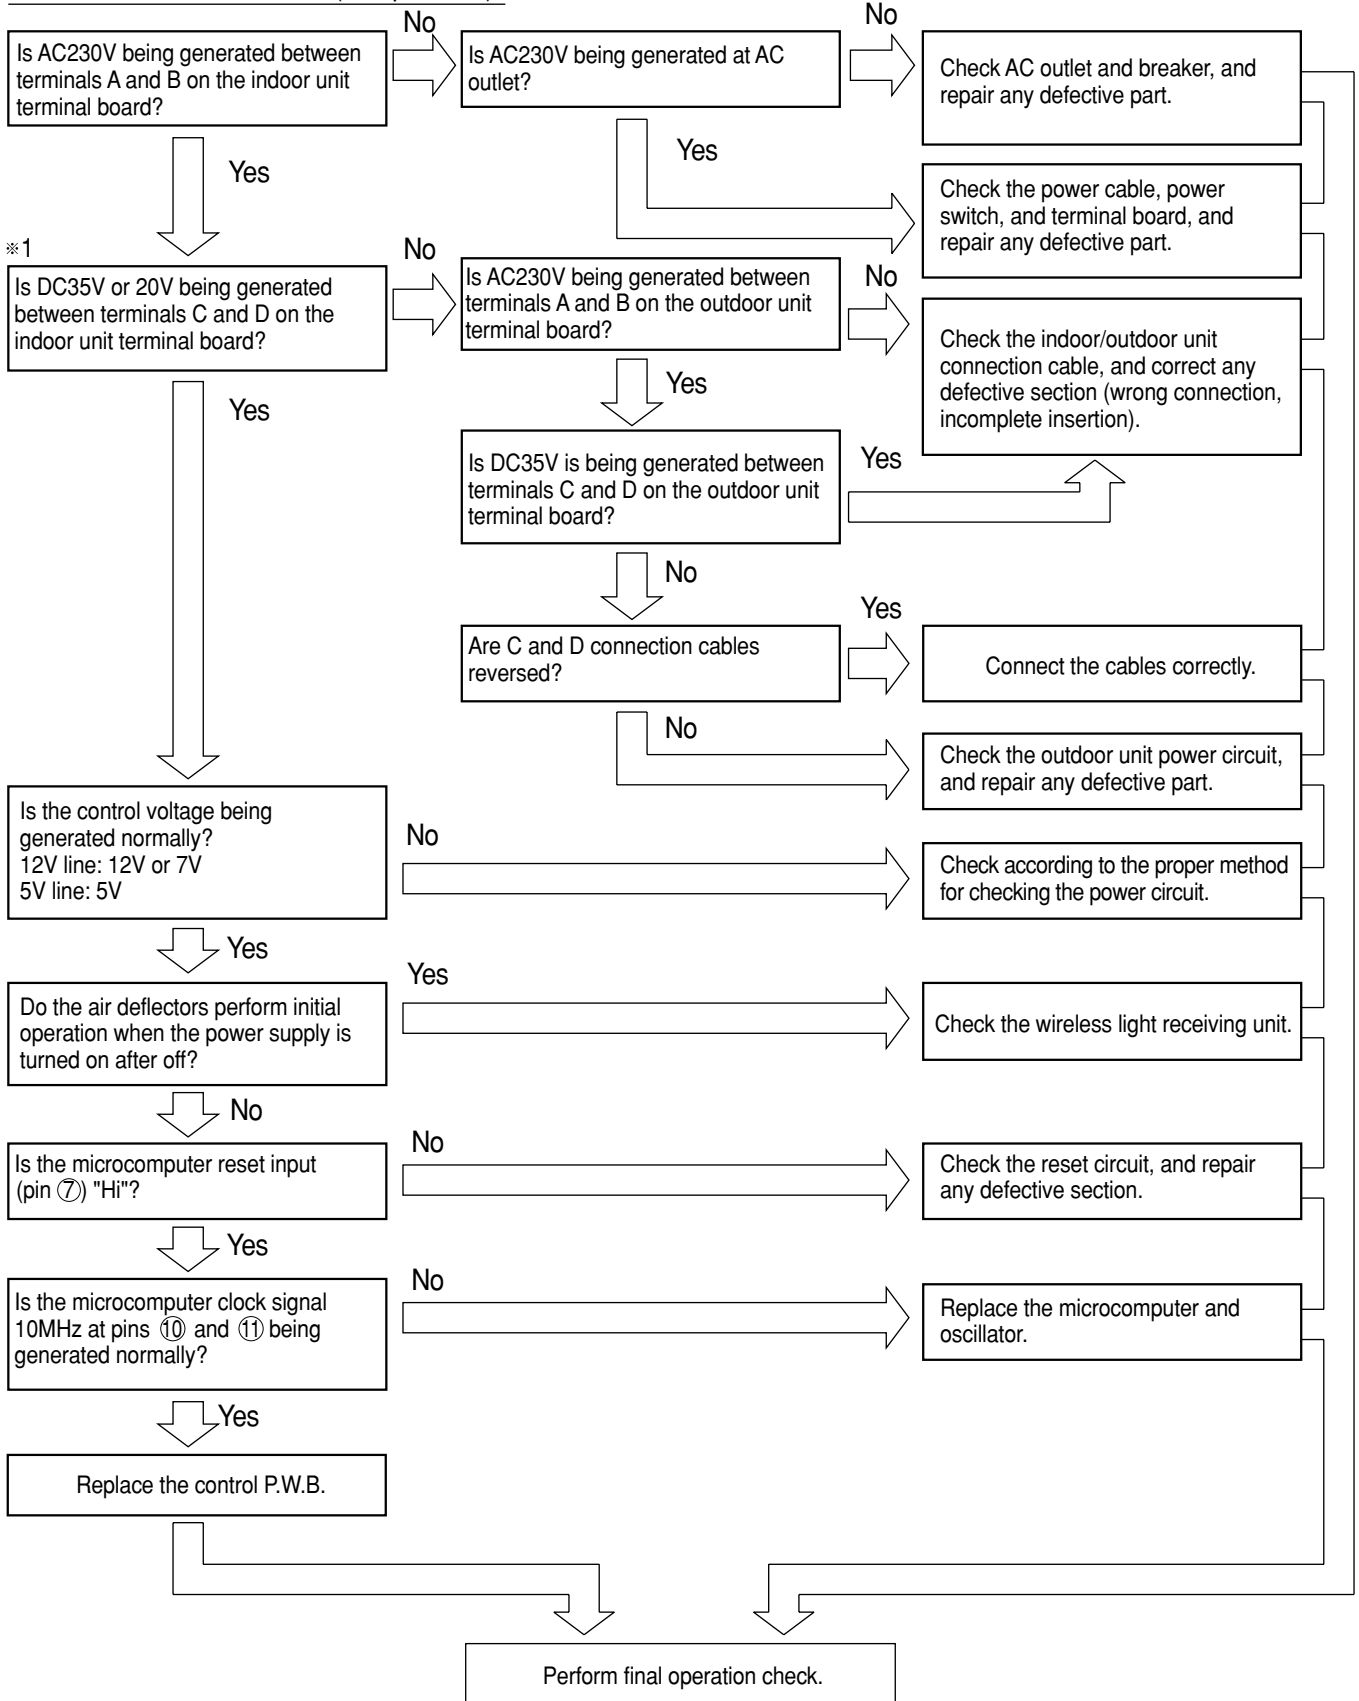


\*1 : When not in operation, the unit will enter into a low-power standby state, possibly causing a voltage drop to the 12V and 35V lines as shown below.

25V - 20V
12V - 7V


## 2. Indoor fan does not operate (others are normal)

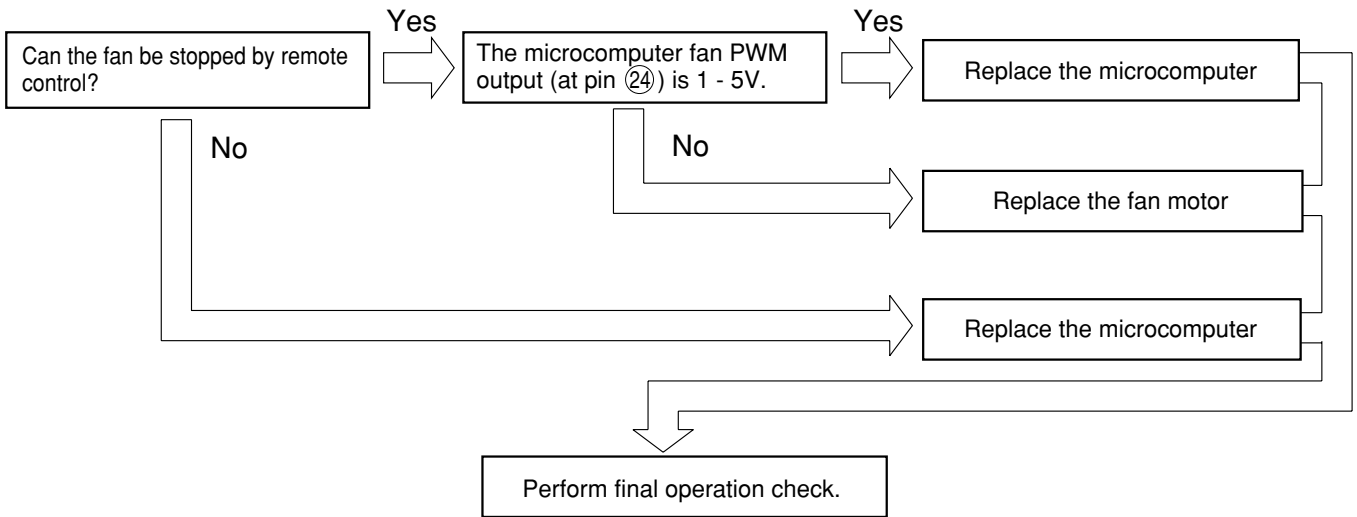

## 3. Air deflector does not move (others are normal)

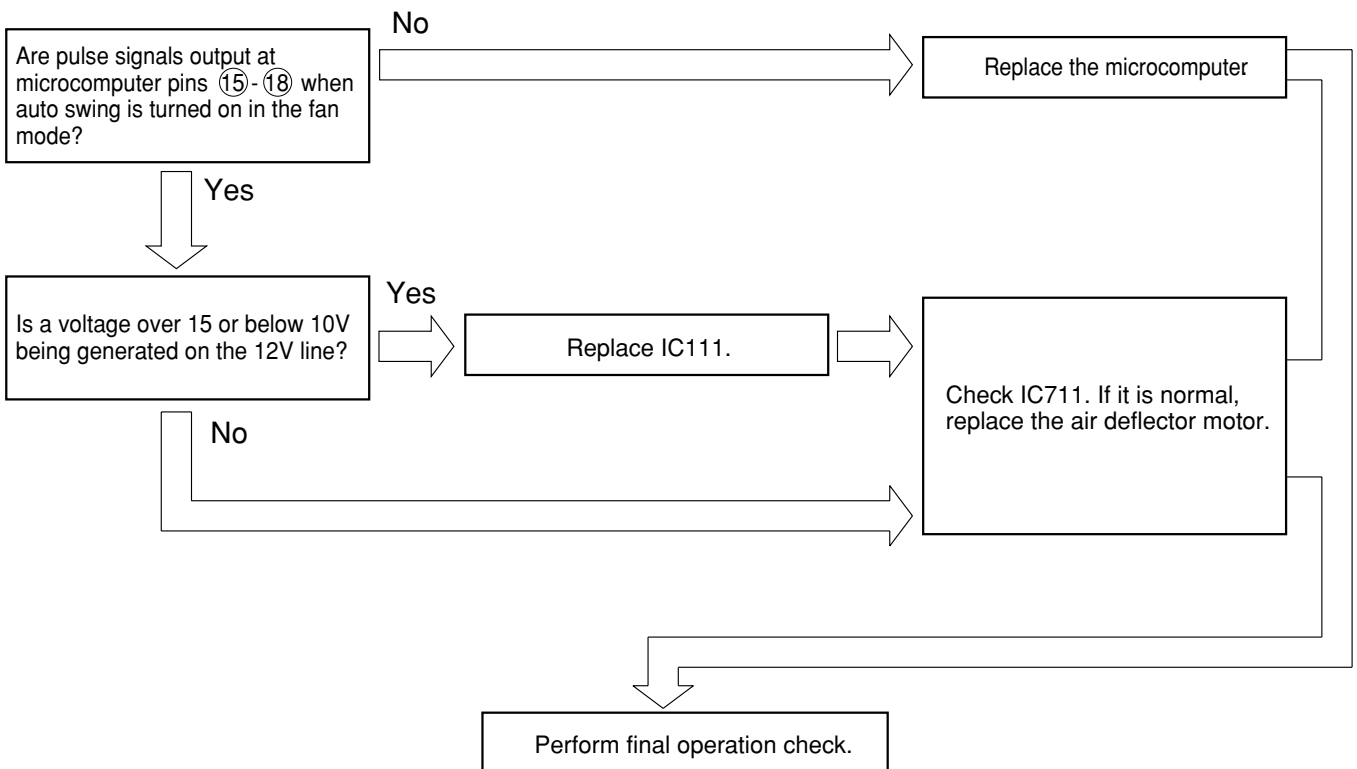


#### 4. Check the control P.W.B. (power circuit)

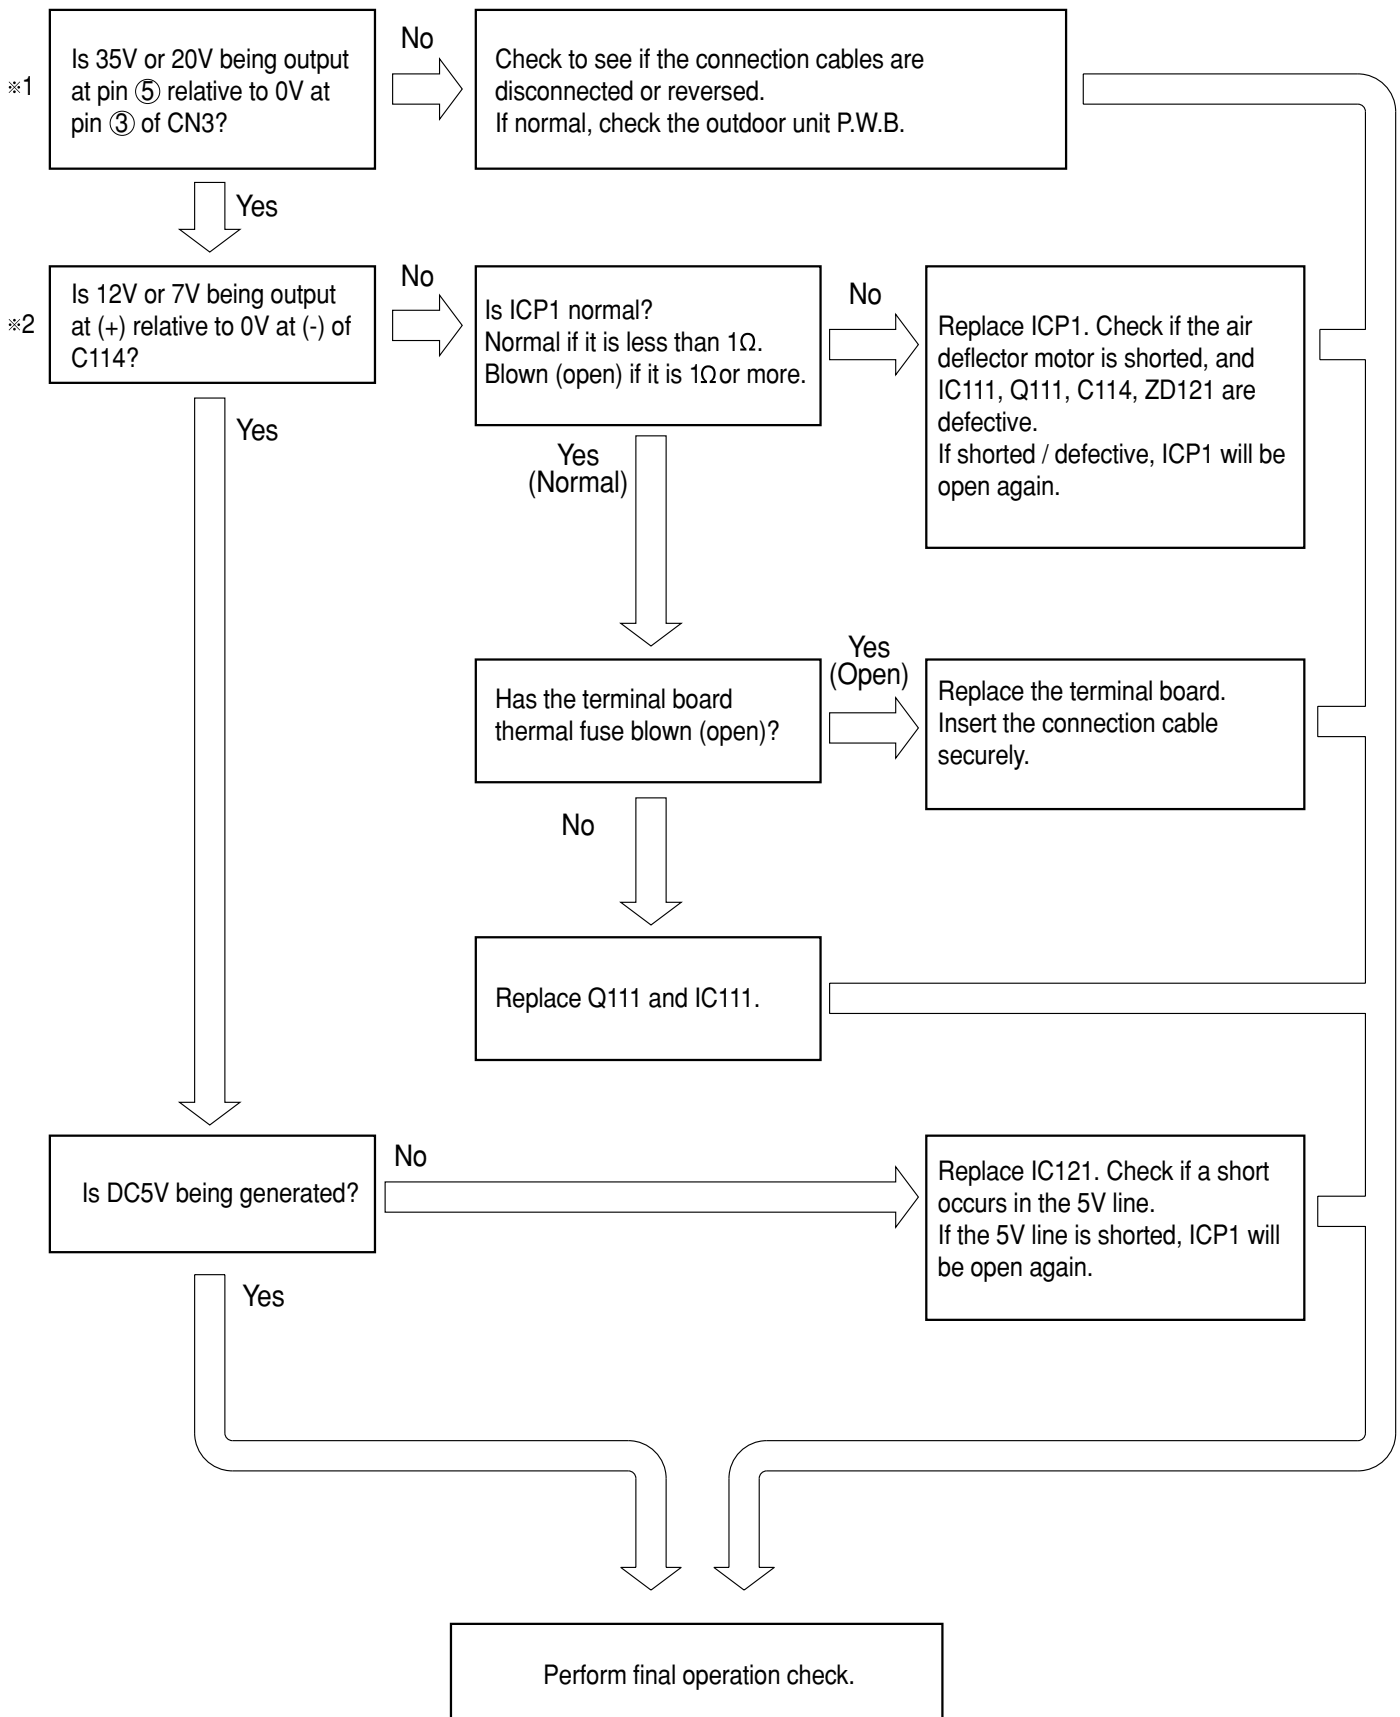

\*1 : When the unit is not in operation, the voltage across the 35V line may drop to 20V.


\*2 : When the unit is not in operation, the voltage across the 12 V line may drop to 7V.

# CHECKING THE REMOTE CONTROLLER

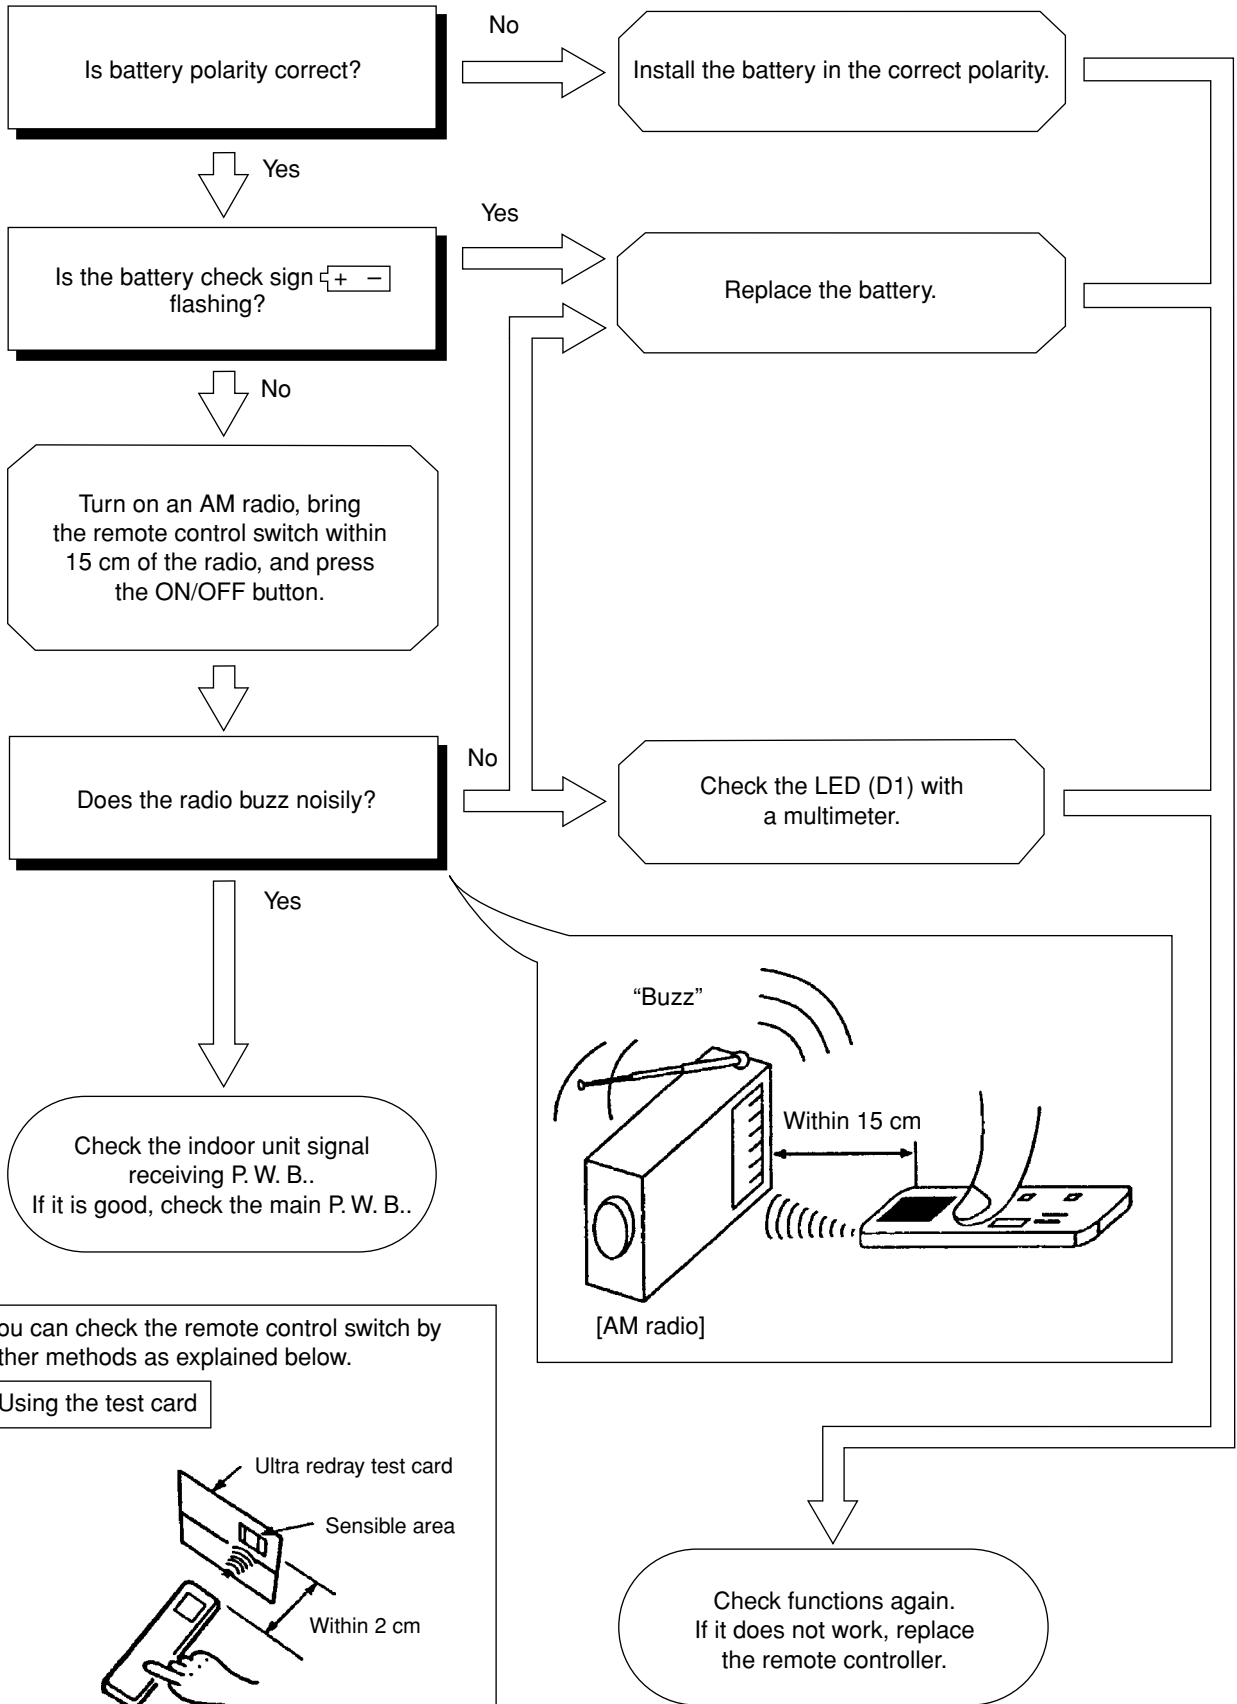

You can check the remote control switch by other methods as explained below.

### Using the test card

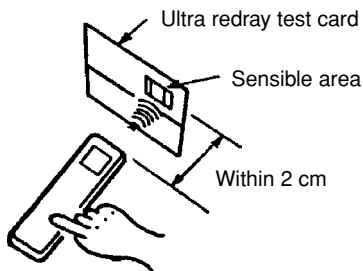

The sensible area should flash in orange when you operate the remote control unit if it is good.





**WARNING**



**PRECAUTIONS FOR SERVICING**

Be sure that the power switch is turned off or the power cable is disconnected before servicing.

**Removing the P.W.B.s.**

**System Configuration of Outdoor Unit Electrical Parts**

The outdoor unit electrical parts consist of two P.W.B.s as shown in the figure.

**<Control P.W.B. (M board)>**

Contains a rectifier circuit and inverter module, their controlling microcomputer and microcomputer peripheral control circuits. The board incorporates high and low current sections.



**<Power P.W.B. (P board)>**

Contains a switching power circuit, noise filter, power factor improvement circuit, etc. The switching power circuit supplies power to electronic circuits on the control P.W.B. through CN3.

※ When replacing any P.W.B., disconnect all the cables (including ground wires).

**[A. Control P.W.B.]**



- 1 Remove four screws securing the control P.W.B. to the cooling fins, and remove the control P.W.B. from the cooling fins.
- 2 Open the support latches and raise the control P.W.B. in the direction of the arrow as shown in Fig. A.  
<Direction of the control P.W.B. removal>

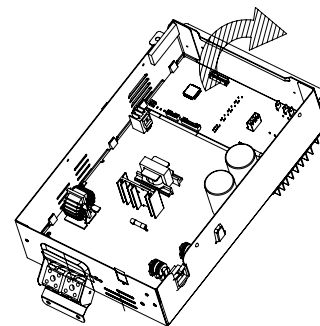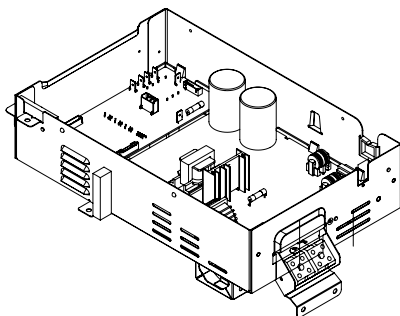

**[B. Power P.W.B.]**

- 1 Open the support latches and raise the power P.W.B. in the direction of the arrow as shown in Fig. A.

<Direction of the power P.W.B. removal>

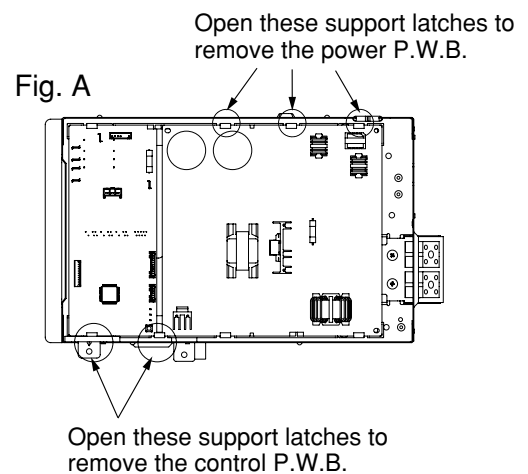
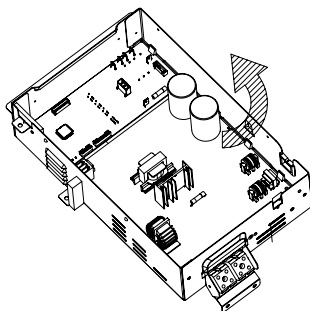


[C. Power Factor Improvement capacitor]

Designed to improve power factor.

To replace the capacitor, remove the power P.W.B. and then:


1. Remove two screws fastening the capacitor seat.
2. Slide the capacitor seat in the direction of the arrow.

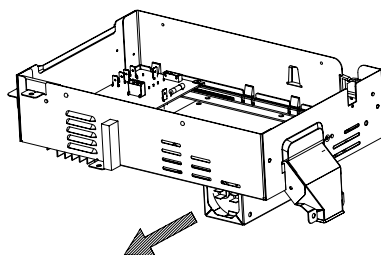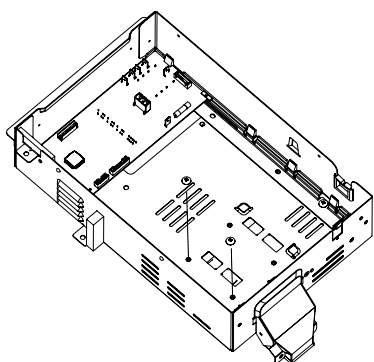



Sliding Direction


## CHECKING OUTDOOR UNIT ELECTRICAL PARTS


[No operation or abnormal operation]

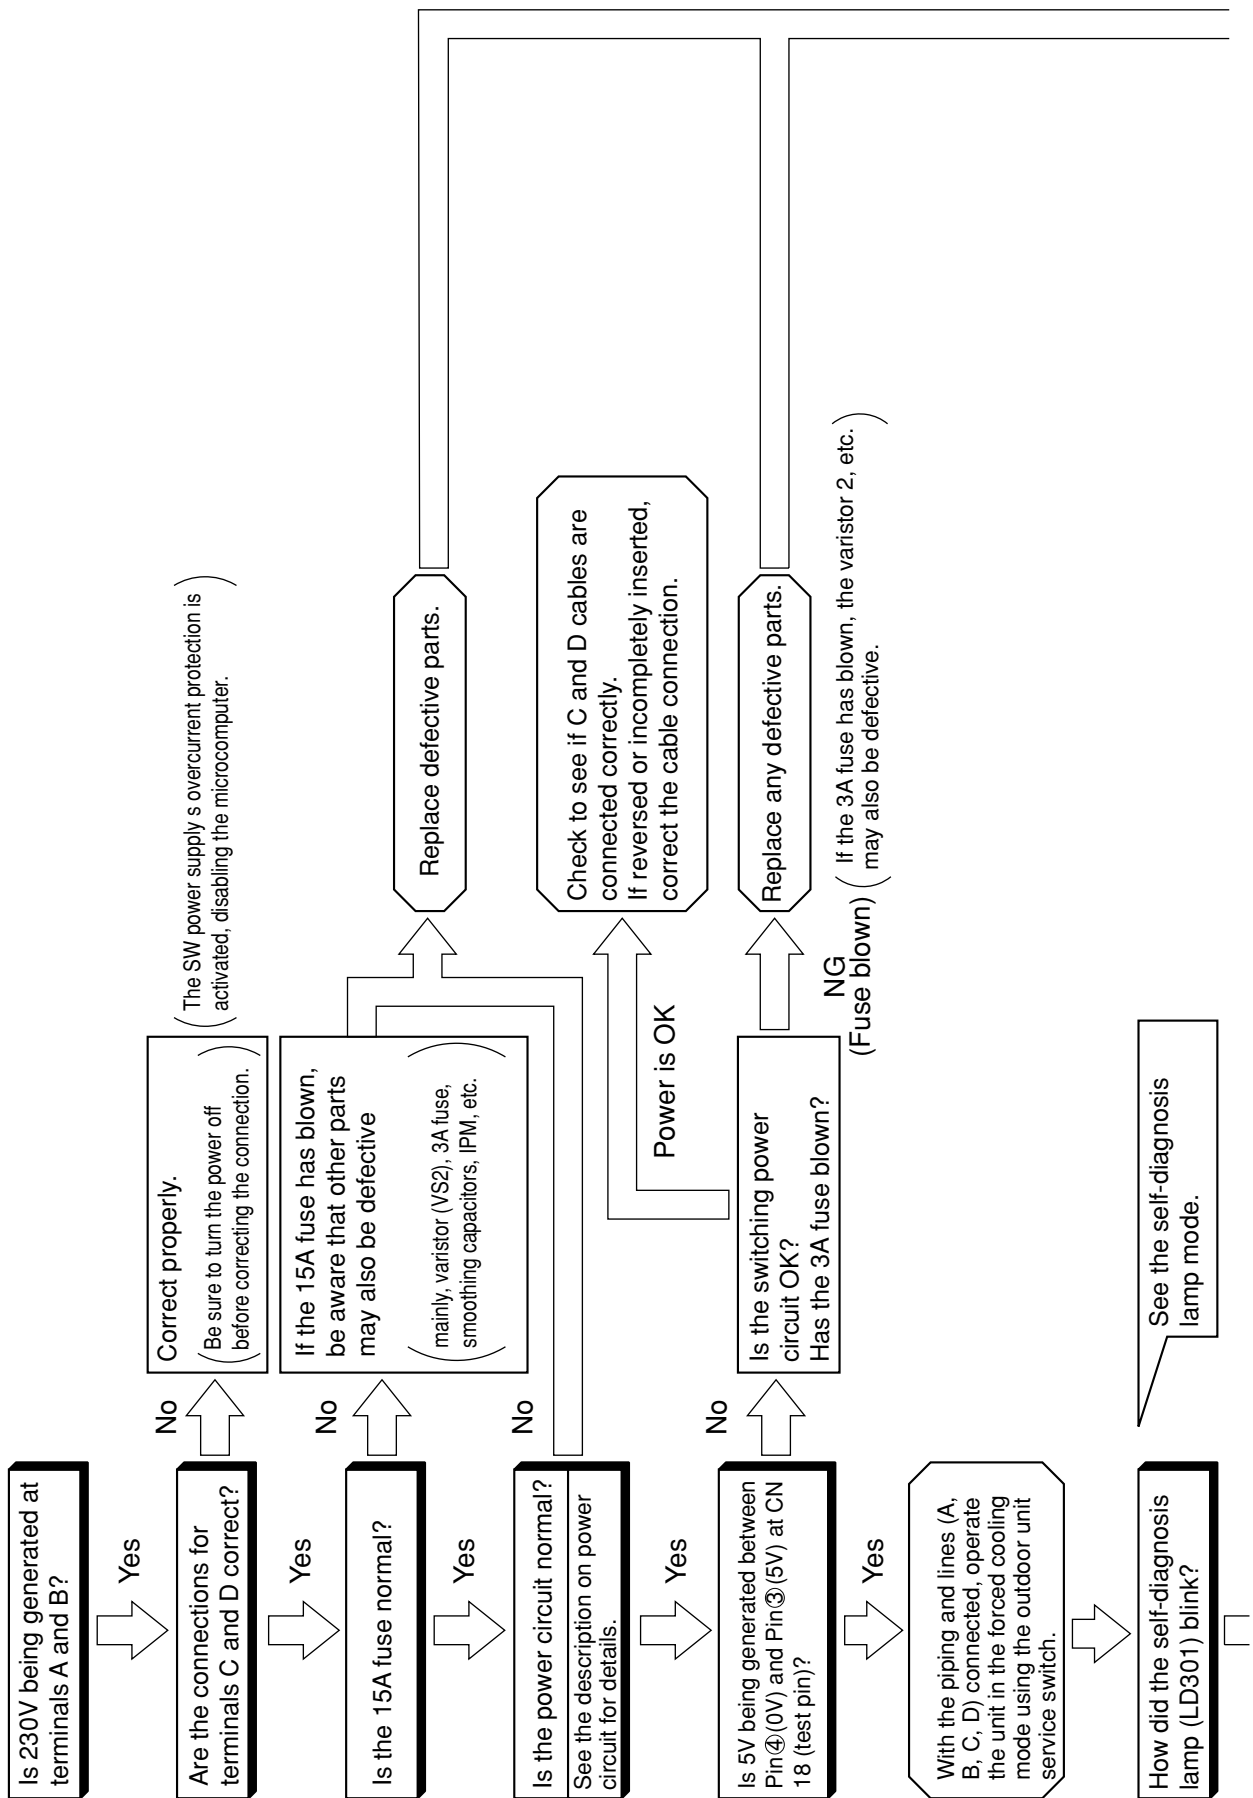


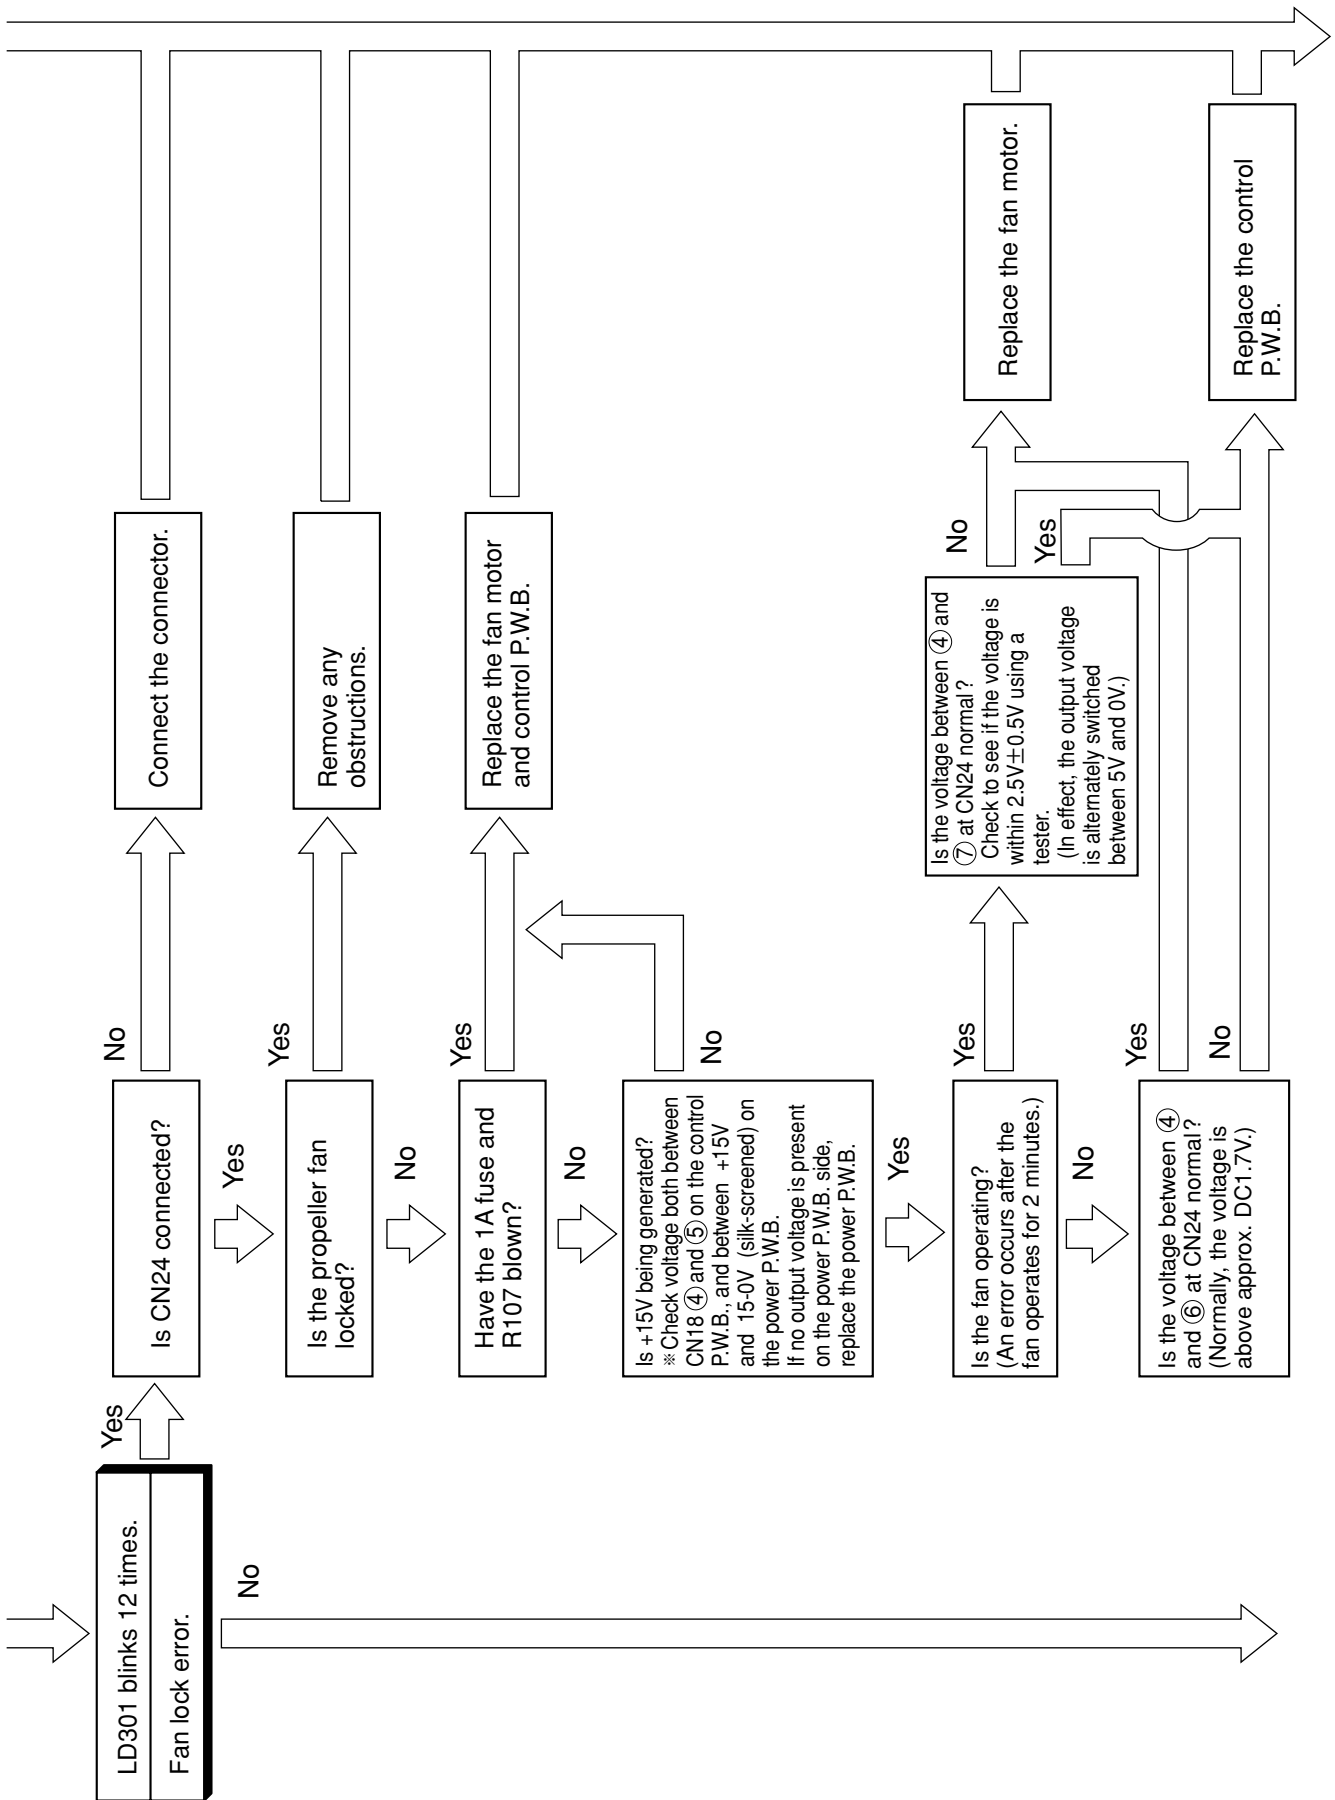

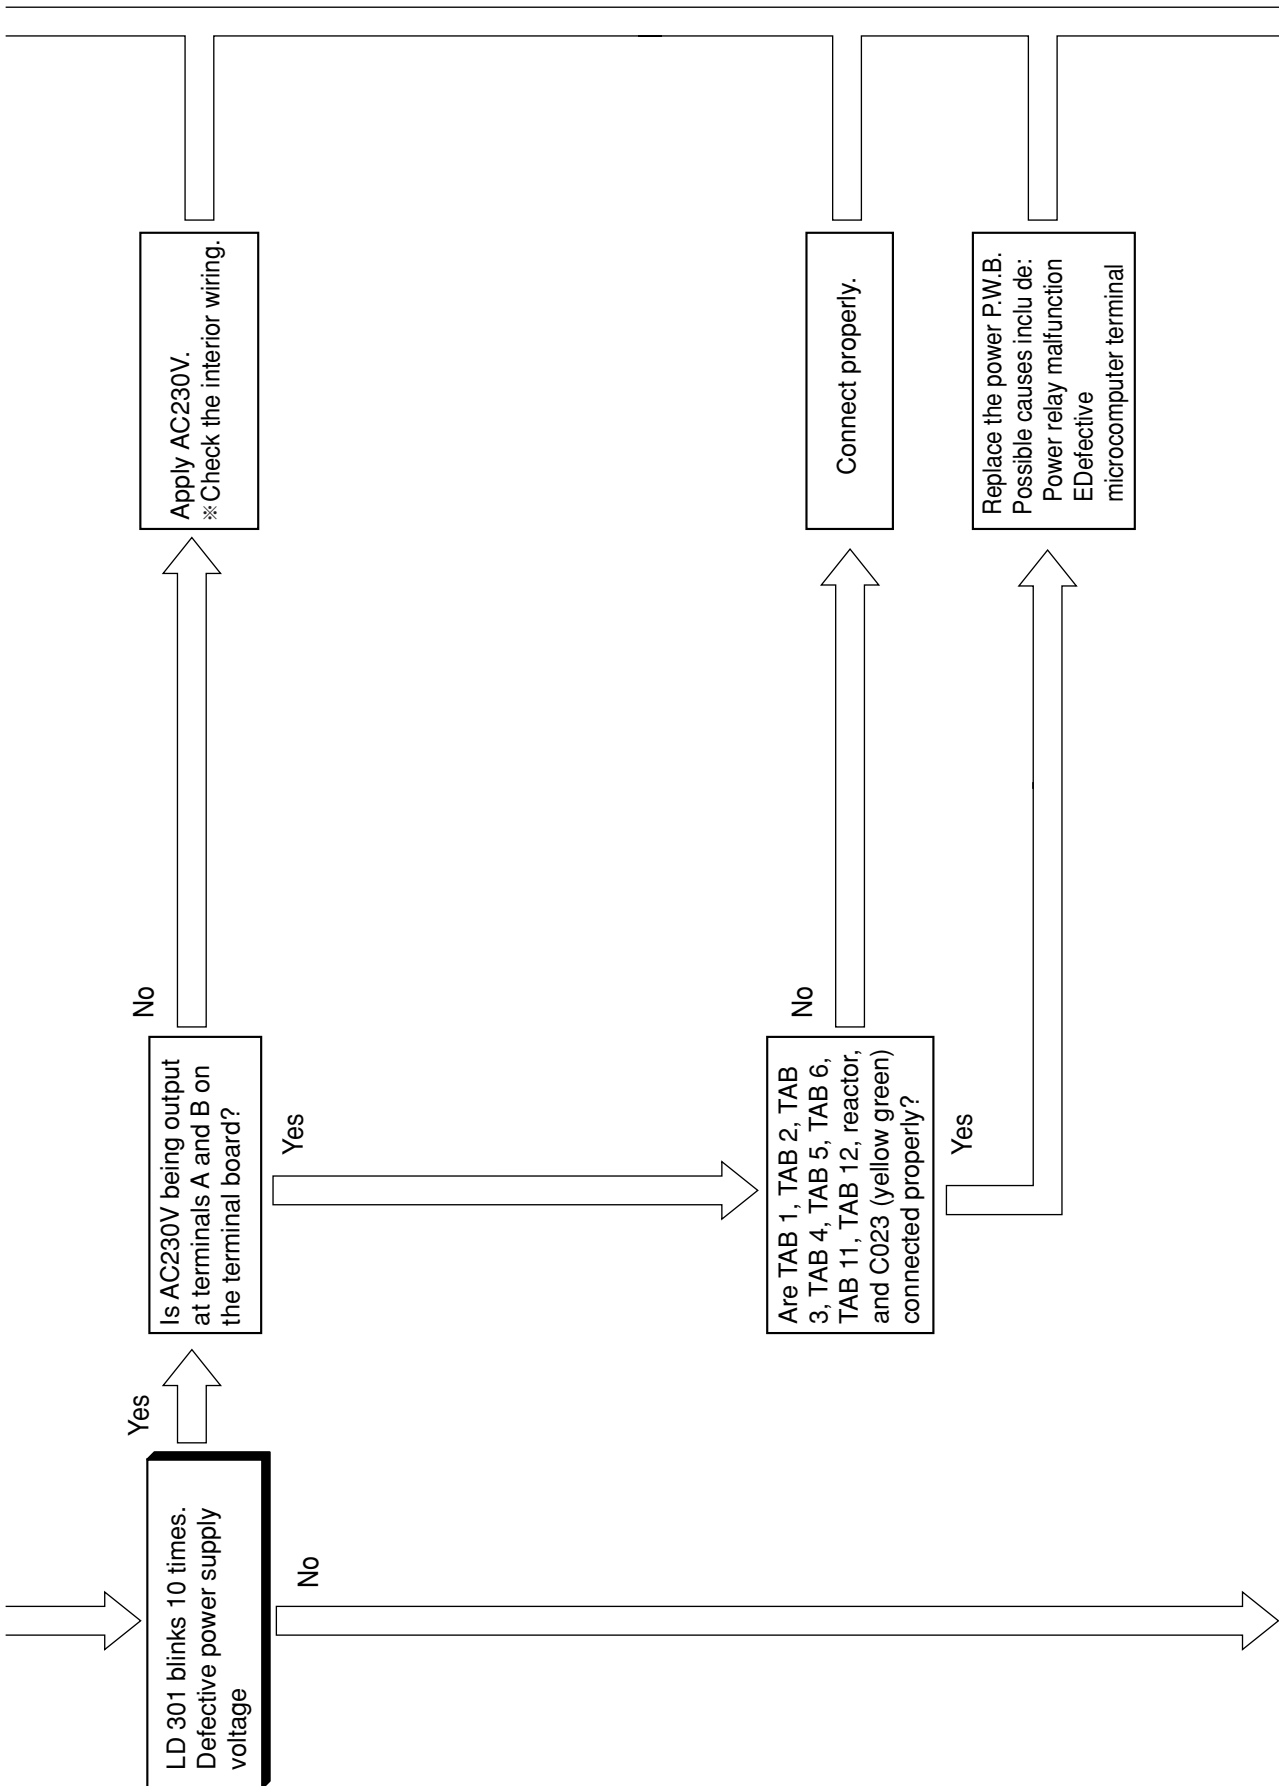


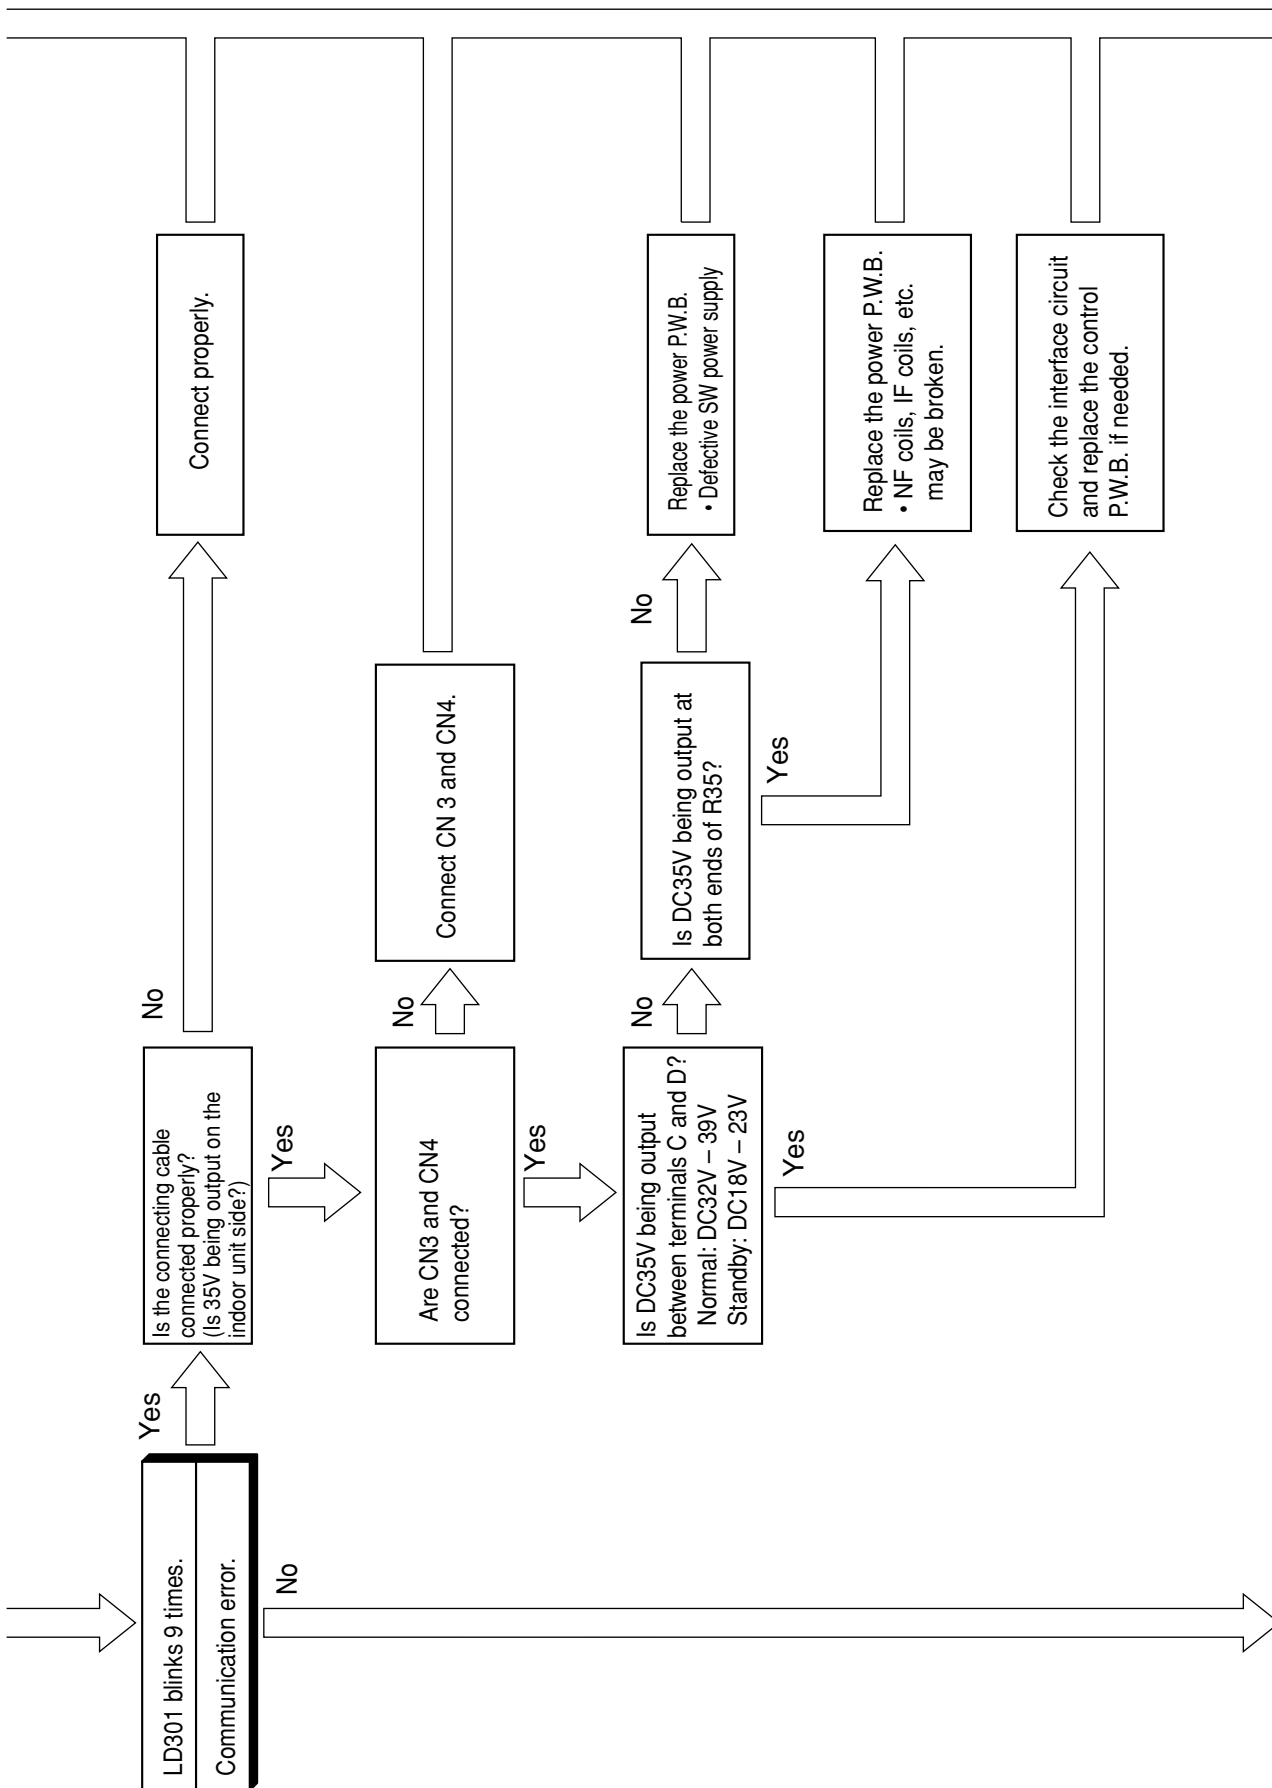

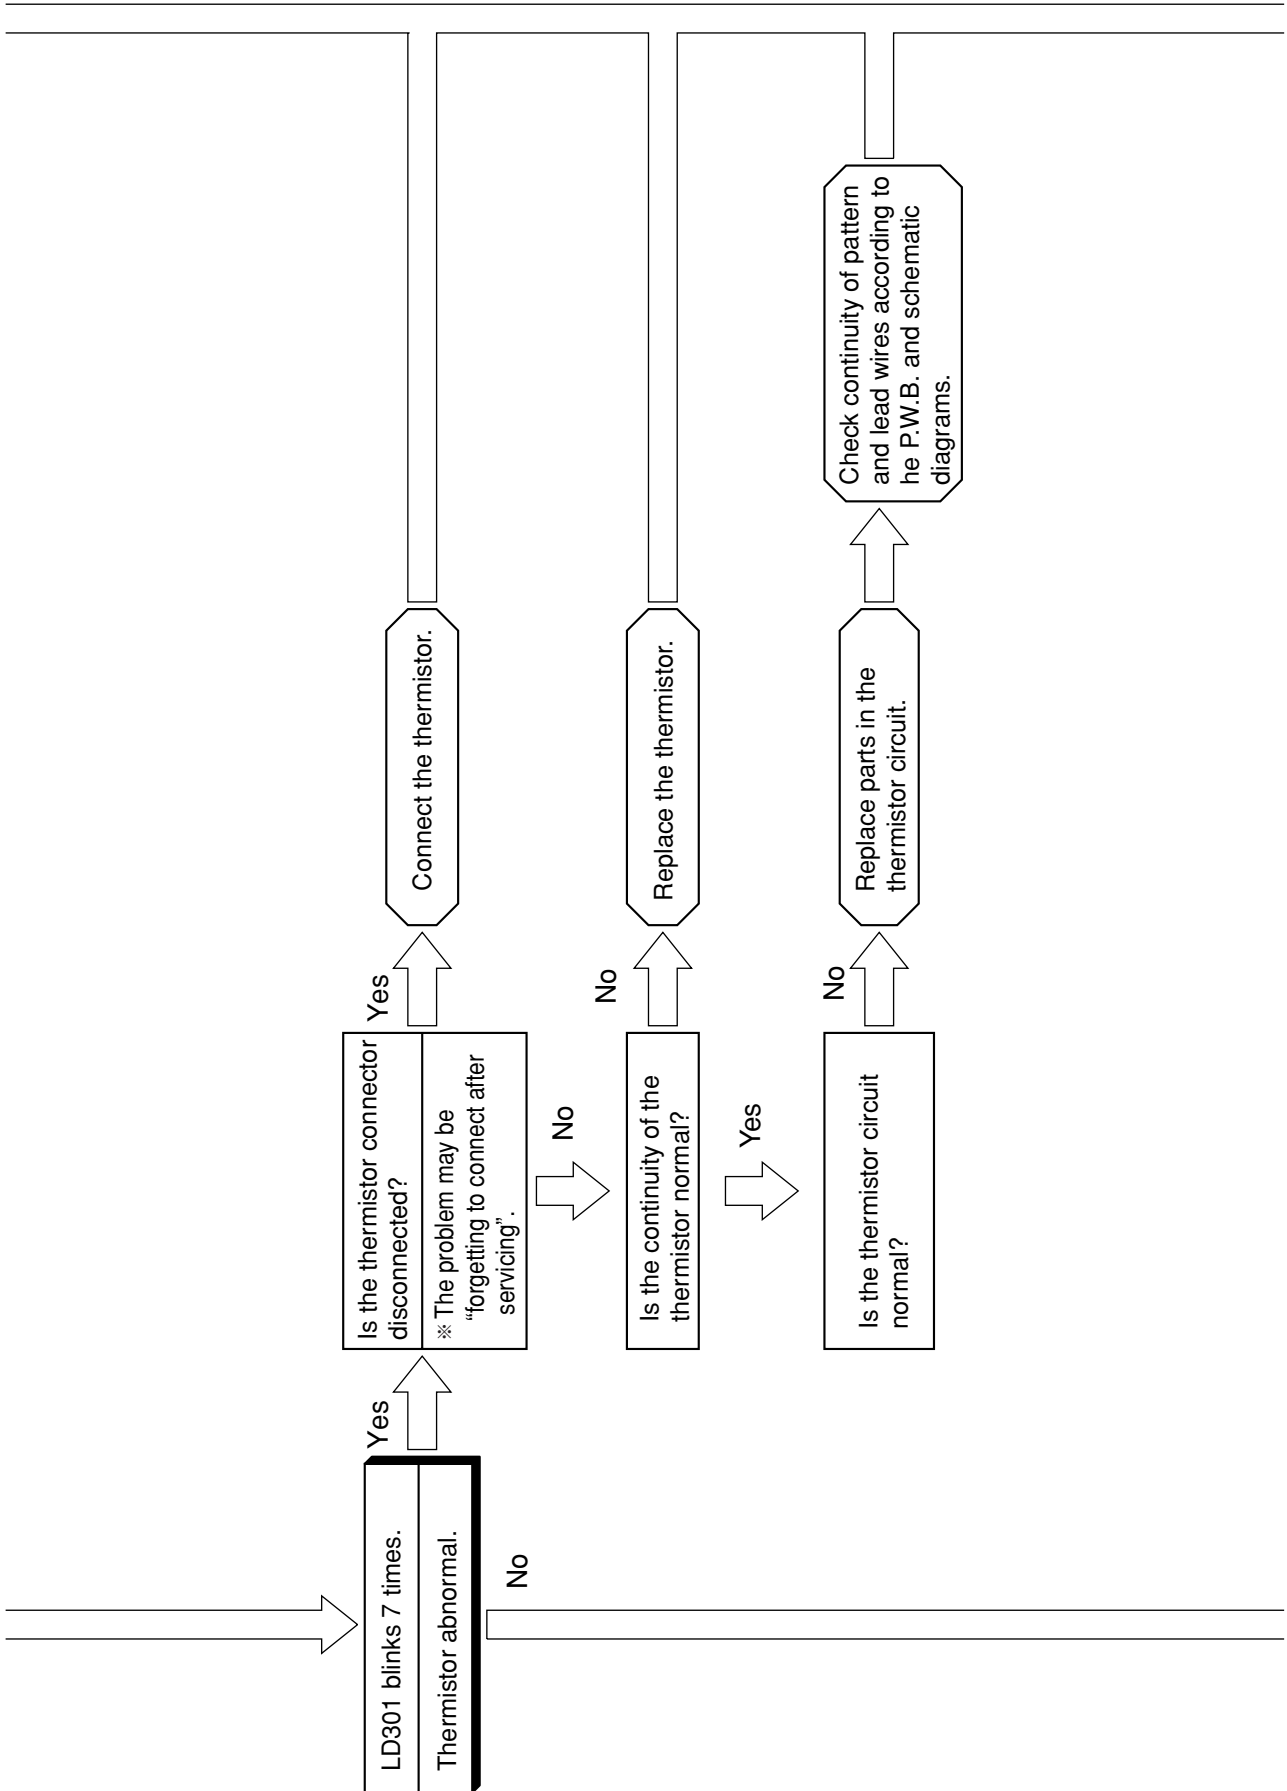

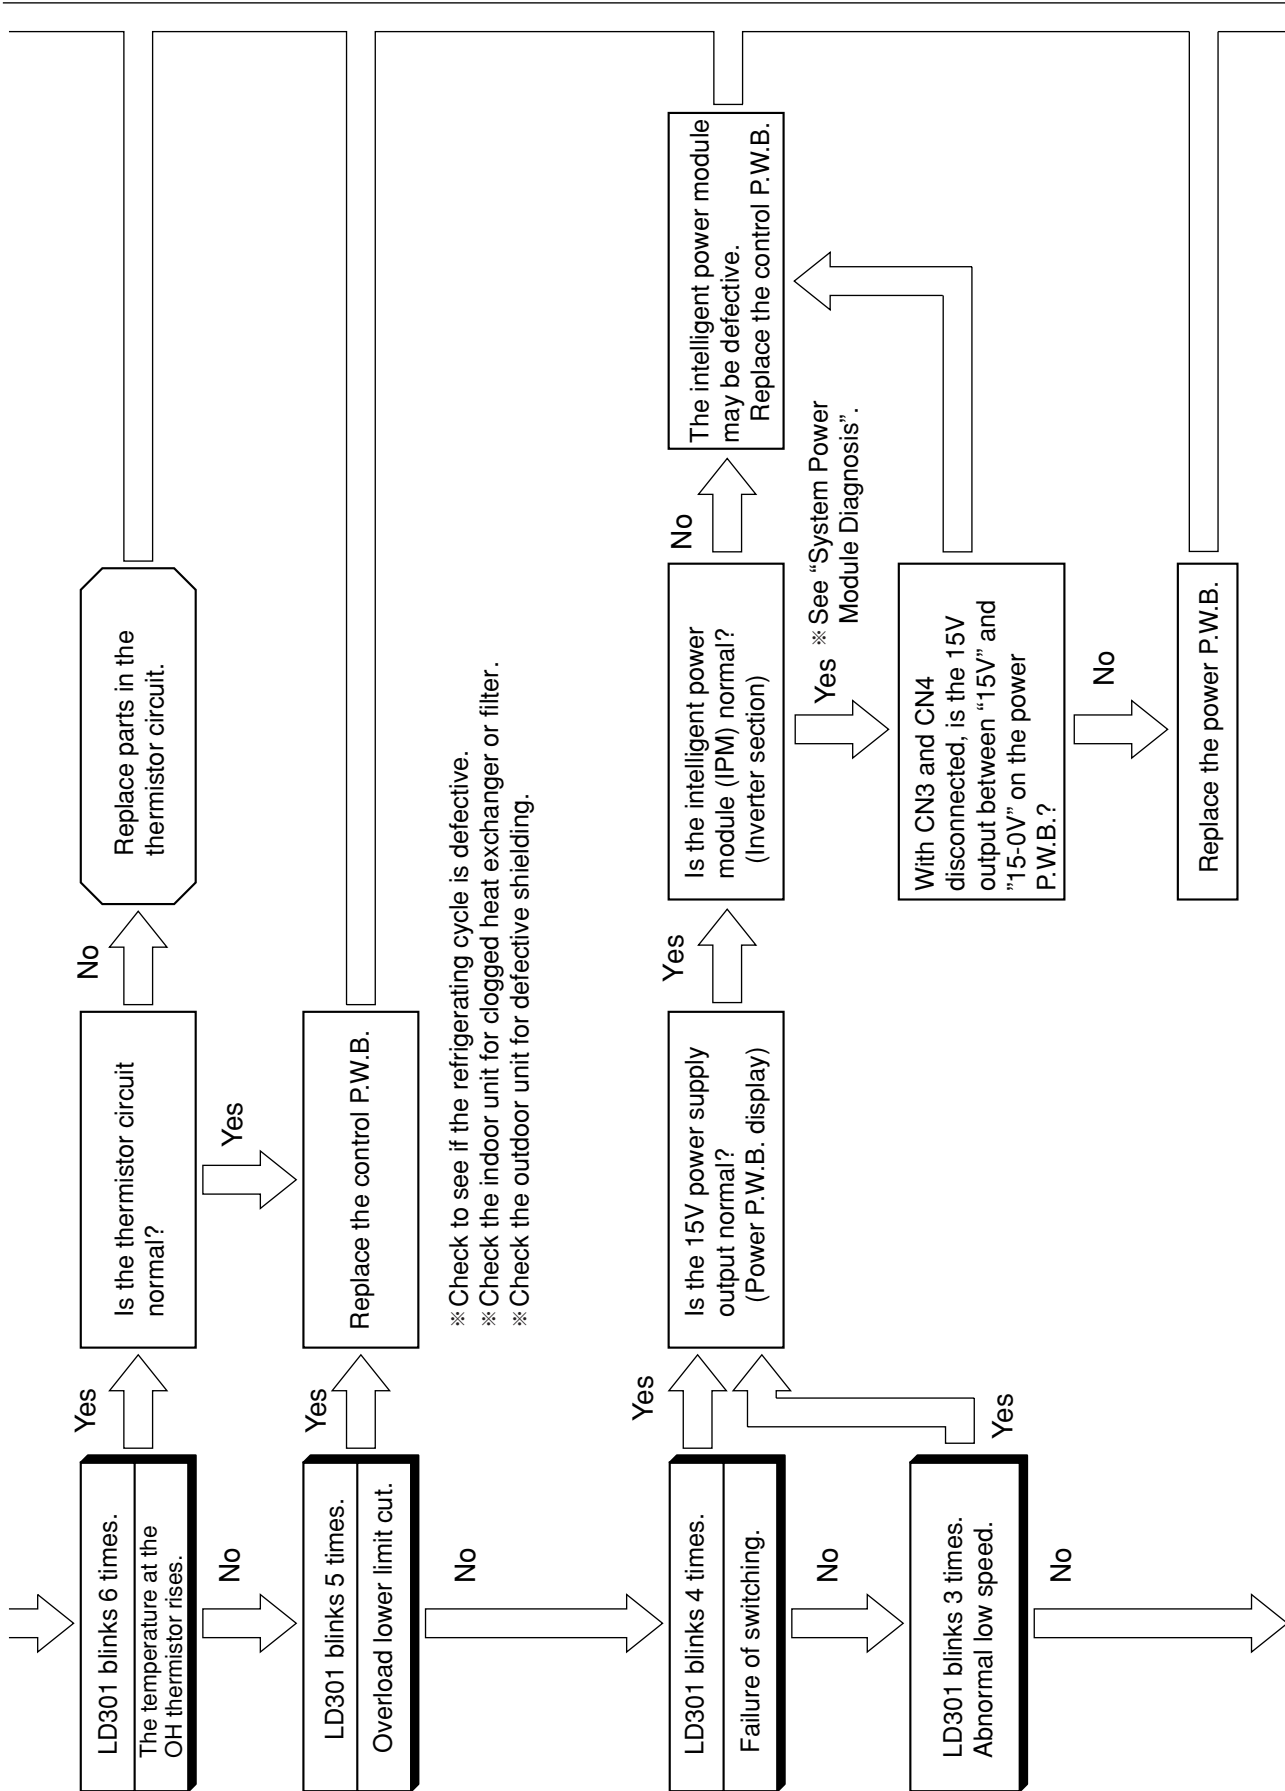



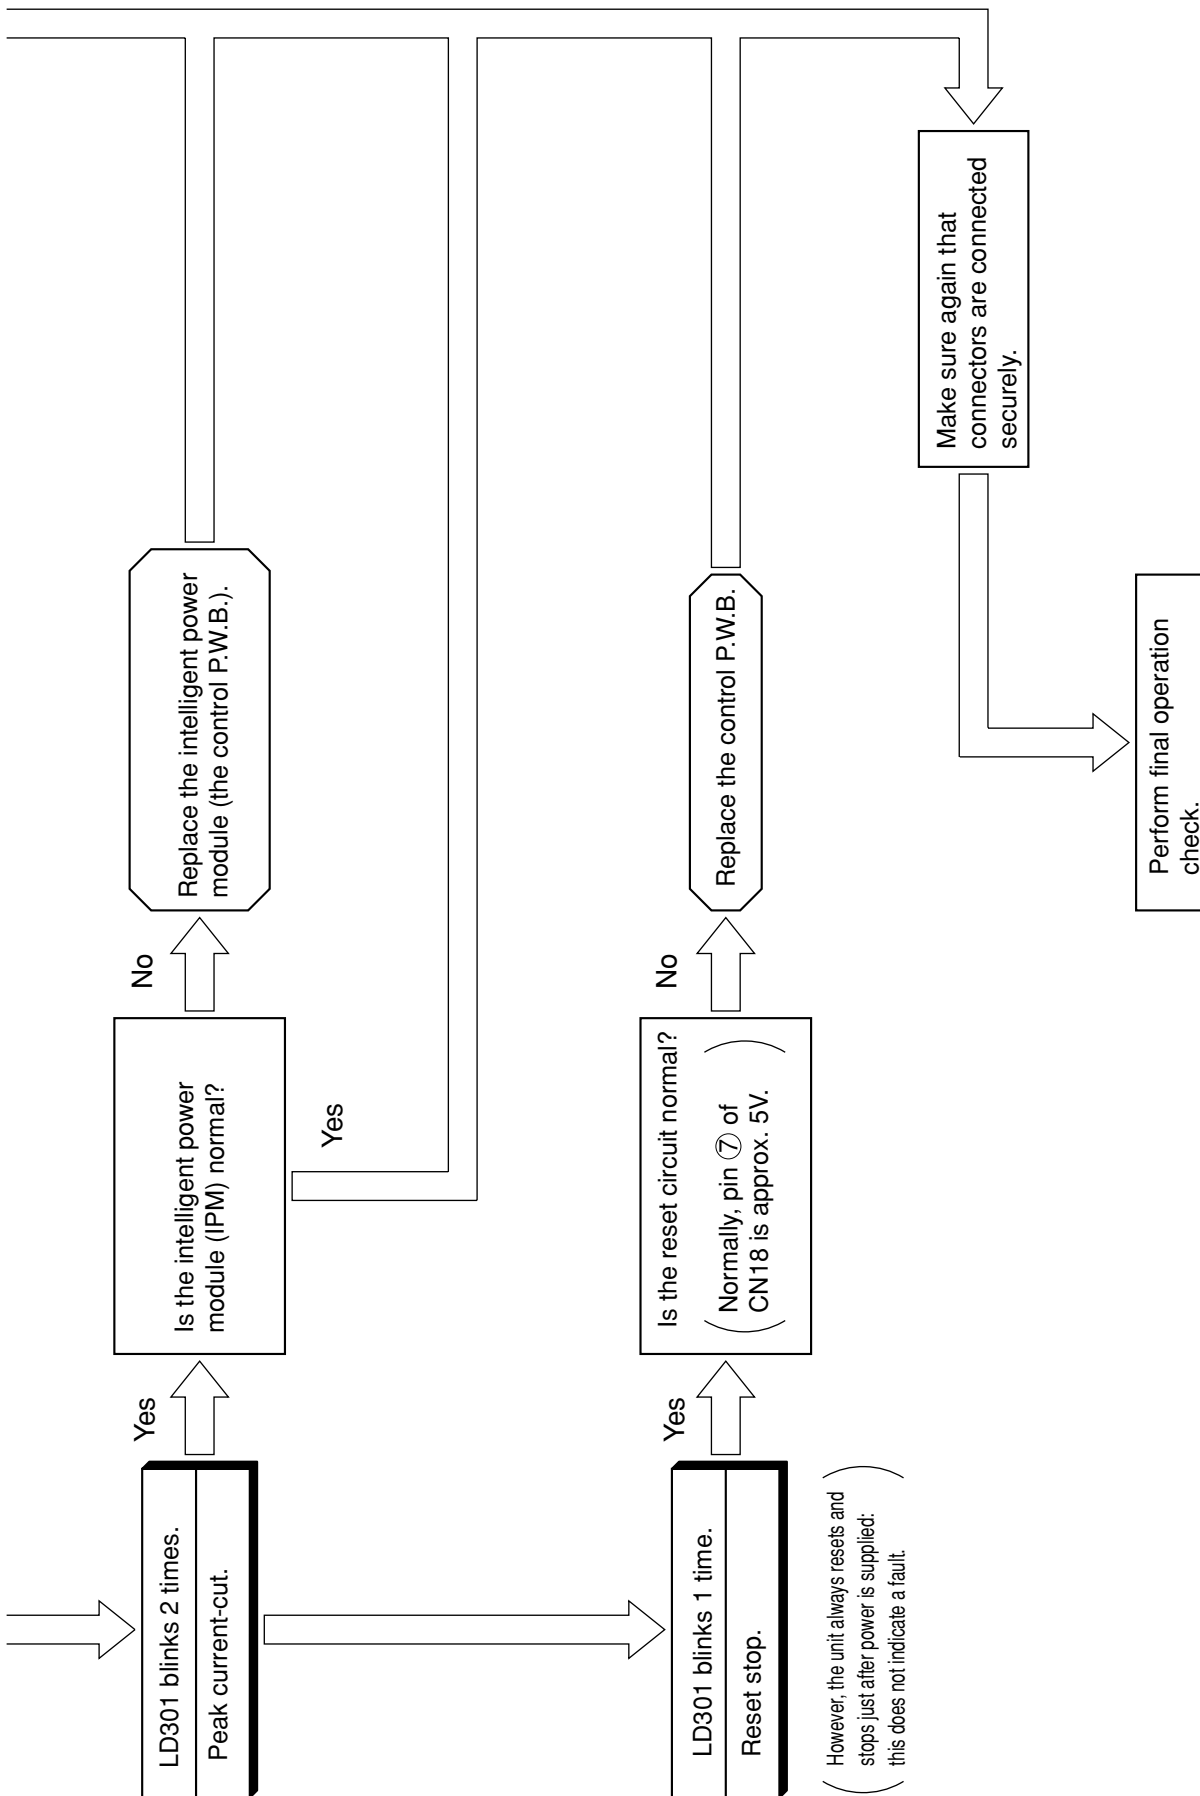

# CHECKING THE REFRIGERATING CYCLE

(JUDGING BETWEEN GAS LEAKAGE AND COMPRESSOR DEFECTIVE)

## 1. Troubleshooting procedure (No operation, No heating, No cooling)

Connect U,V,W phase leads to the power module again and operate the air conditioner.

Is the self-diagnosis lamp mode as shown on the right?

Lighting mode Self-diagnosis lamp	Blinks 2 times	Blinks 3 times	Blinks 4 times	Blinks 5 times	Blinks 6 times	Blinks 8 times
LD301						
Time until the lamp lights	Approx. 10 seconds			Approx. 10 seconds	Within Approx. 30 seconds	Approx. 10 seconds
Possible malfunctioning part	Compressor				Gas leakage	Compressor

Blinking       off

Outdoor air temperature (°C)	Charge port pressure	
	MPa(G)	{kgf/cm <sup>2</sup> (G)}
50	2.96	{30.14}
45	2.62	{26.72}
40	2.31	{23.58}
35	2.03	{20.73}
30	1.78	{18.14}
25	1.55	{15.79}
20	1.34	{13.66}
15	1.15	{11.74}
10	0.98	{10.02}
5	0.83	{8.48}
0	0.70	{7.10}
-5	0.58	{5.89}
-10	0.47	{4.81}

(R410 A)  
The values above are the theoretical ones.

Stop to operate and check the gas pressure in balancing mode.

● Checking the IPM (main P.W.B.)

Gas leaks. Repair and seal refrigerant.

The compressor is defective. Replace it and seal refrigerant.  
( If the compressor checker for an inverter type air conditioner is available, re-check using it. )

Perform a final check of operation.


## HOW TO OPERATE USING THE SERVICE SWITCH THE OUTDOOR UNIT

MODEL RAC-18YH4

1. Turn off the power switch.
2. Remove the electrical box cover.
3. Turn on the power switch
4. After waiting for 30 seconds, push the service switch for a second.

**LD303 (red) will light and the unit will operate in the forced cooling mode at this time.**

Never operate the unit for more than 5 minutes.

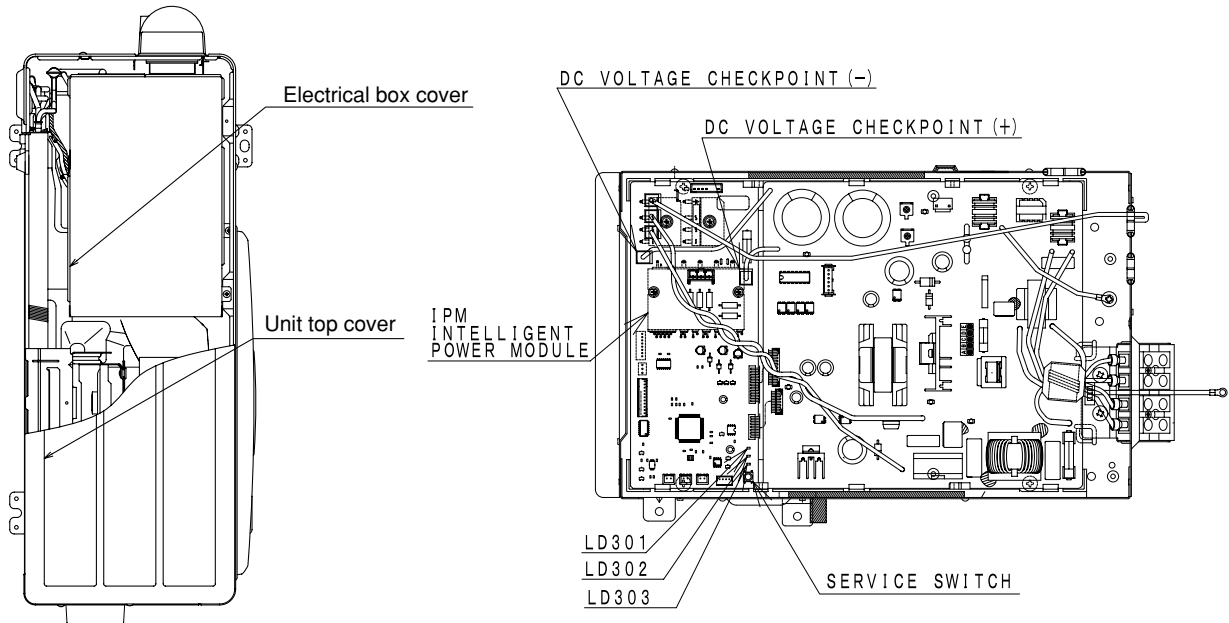

(Cautions)

- (1) If interface signal (DC 35V) terminals C and D are not connected when the outdoor unit is in forced cool mode, the outdoor unit defect indicator (LD301) will blink 9 times during operation to indicate communication error.
- (2) If checking is done with the compressor connector disconnected, the unit will stop and LD301 will blink 4 times.


Be sure to push the service switch for a second again to stop the forced cool operation.

## HOW TO OPERATE THE OUTDOOR UNIT INDEPENDENTLY

1. Connect the large dia. pipe side and small dia. pipe side service valve using a pipe.

Connect the small diameter service valve and the large diameter service valve using the reducing union and copper pipe as shown on the right.

Charge refrigerant of 300g after vacuuming (\*1)

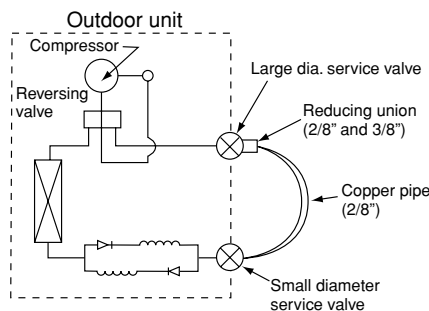

Parts to be prepared




- (1) Reducing union  
2/8" (6.35 mm)  
3/8" (9.52 mm)
- (2) Copper pipe (2/8" and 3/8")

**Do not operate for more than 5 minutes**

The operation method is the same as "How to operate using the connector to servicing the outdoor unit".

\*1 The charging amount of 200g is equivalent to the load in normal operation.

# IPM (Intelligent Power Module) DIAGNOSIS

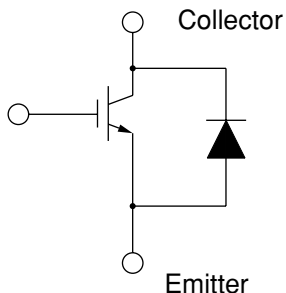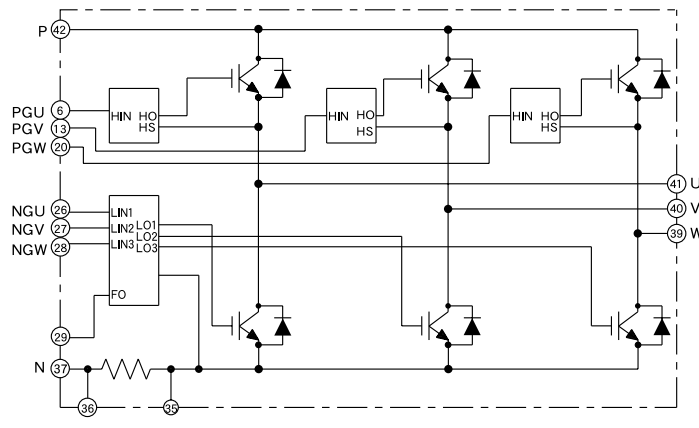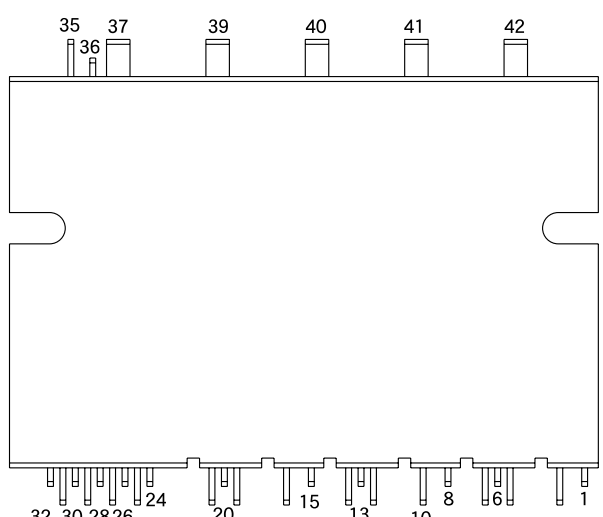SSM1001MA			
<p>Circuit diagram of the device</p>			
<p>Circuit diagram of the module</p>			
<p>Terminals symbol mark of the module</p> <p>※ See next page for measuring value using multimeter</p>			
	<table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">                 6:PGU                  13:PGV                  20:PGW                  26:NGU                  27:NGV                  28:NGW             </td> <td style="width: 50%;">                 29:Fail signal                  35:INVOV                  36:0V                  37:N                  39:W                  40:V                  41:U                  42:P             </td> </tr> </table>	6:PGU 13:PGV 20:PGW 26:NGU 27:NGV 28:NGW	29:Fail signal 35:INVOV 36:0V 37:N 39:W 40:V 41:U 42:P
6:PGU 13:PGV 20:PGW 26:NGU 27:NGV 28:NGW	29:Fail signal 35:INVOV 36:0V 37:N 39:W 40:V 41:U 42:P		

## Diagnosis procedure of IPM using multimeter.

### <Inverter section>


Set the multimeter function to resistance x 100. If the multimeter does not have x 100 range, please select its range from x 1 to x 100.

The judgment shall be OK. When the measurement was high resistance.

(Please consider that the probe polarity will be reverse when use a digital multimeter due to its battery connection inside)

### <note>


Sometimes, it may misjudge as OK because of low conductivity when power module was damaged as disconnect mode. In this case, please check the resistance by reversing the probe polarity and consider OK when it was low resistance. Also, it is OK if the resistance was as same as the other phases (U,V,W).

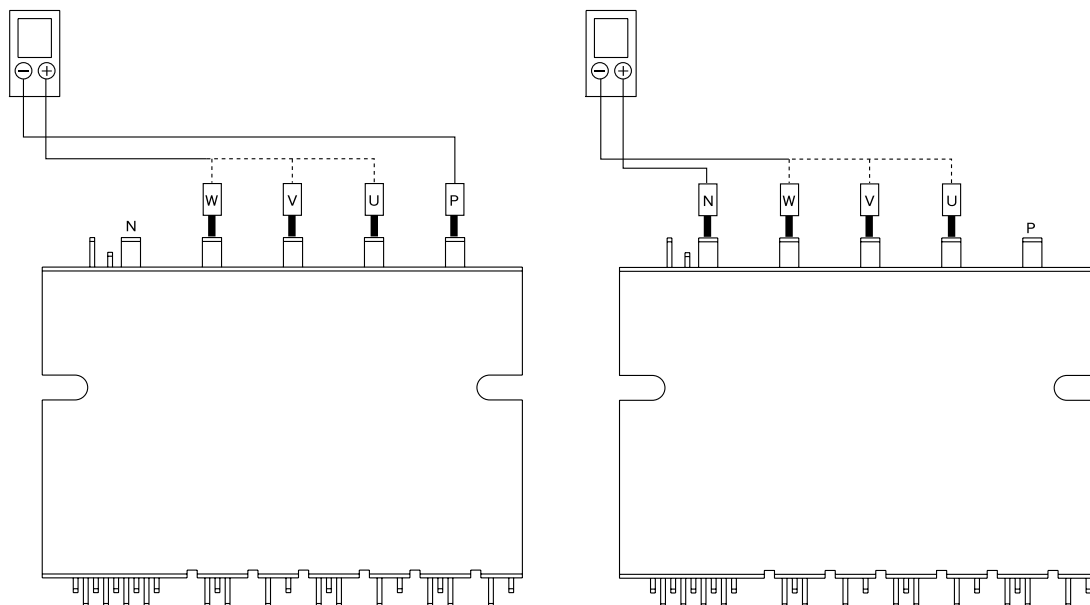

### <Driver circuit (internal IC)>

15V will not be generated when the internal IC has malfunctioned.

To find the malfunction either the power supply of power P.W.B. or internal IC, please follow the procedure following.

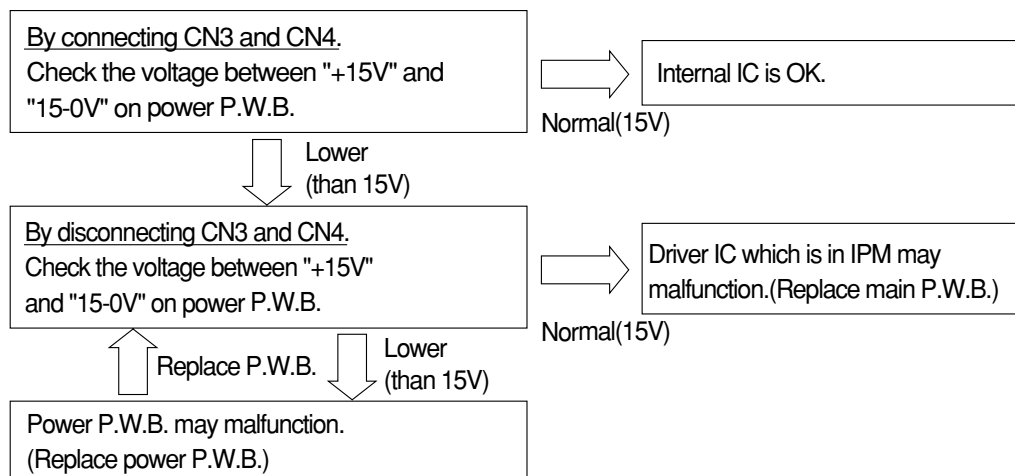

## Procedure for Disassembly and Reassembly

〈INDOOR UNIT〉 MODEL RAS-18YH4

### 1. Front Panel

- (1) Pull up the washable panel by holding it at both lower sides with both hands.

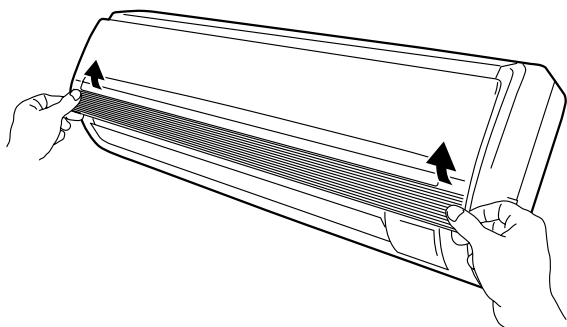


Fig. 1

- (2) When the panel opens full, push the inner part of the right arm into the inside and pull the panel forward while closing it gradually.

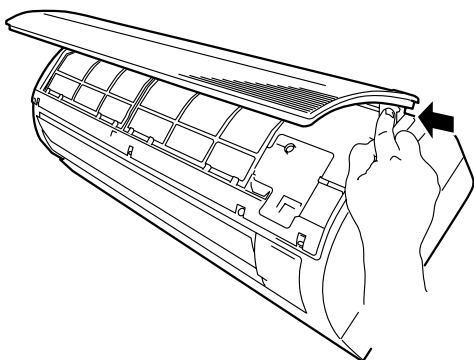


Fig. 2

### 2. Front cover

- (1) After removing two screws, pull the center of the front cover forward and release the claws.
- (2) Hold the front cover at both lower sides and pull them forward to remove.

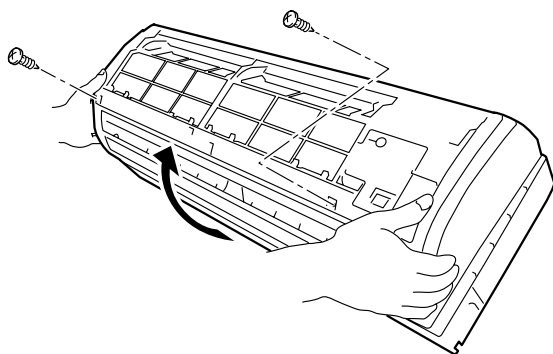


Fig. 3

### 3. Main P.W.B. and Reception/Indication P.W.B.

- (1) Remove each connector from the lead wire.
- (2) Remove the four P.W.B. supports from the main P.W.B..
- (3) Pull the support hook at the upper side of the indication lamp of the reception/indication P.W.B. and pull out the P.W.B. forward.

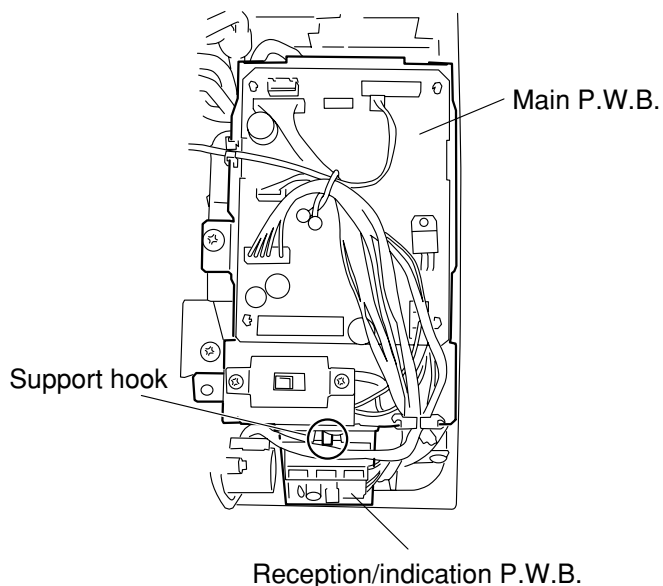


Fig. 4

#### 4. Tangential air flow fan and fan motor

- (1) Remove two screws locking the drain pan.
- (2) Press to lower the hook at the center of the unit a little and pull the claw forward to remove the drain pan.

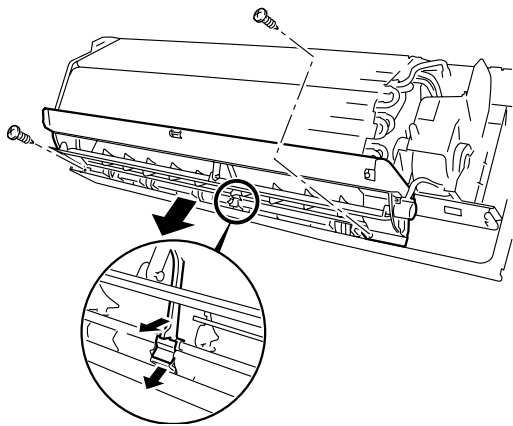


Fig. 5

- (3) Remove the screws from the upper and lower bearing covers.
- (4) Remove the locking hook of the lower bearing cover from the Cabinet.

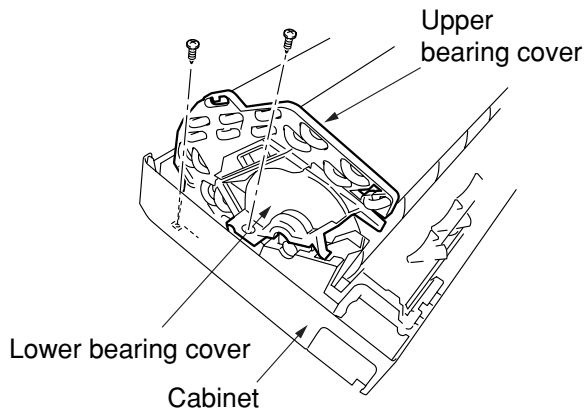


Fig. 6

- (5) Remove two lock screws from the fan motor holder.
- (6) Pull up the evaporator by holding it at the lower side. Insert a screwdriver through the space between the evaporator and drain chute and loosen the fan lock screw to remove the fan and fan motor.

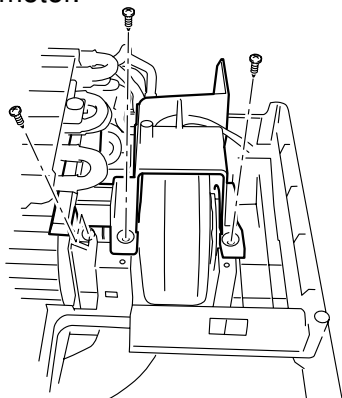


Fig. 7

〈OUTDOOR UNIT〉 MODEL RAC-18YH4

#### 1. Electrical parts

- (1) Remove the service value cover lock screws and lower the cover to remove it.
- (2) Remove the top cover lock screw and raise the cover to remove it.

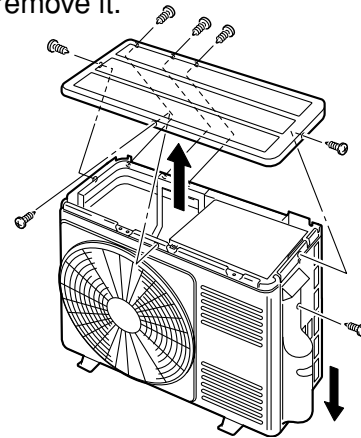


Fig. 8

- (3) Remove the front cover lock screw.
- (4) Lower the right side of the front cover and pull it forward. Then, remove the cover from the hook.
- (5) Pull the right side of the front cover a little and pull up the left side to remove it from the hook.

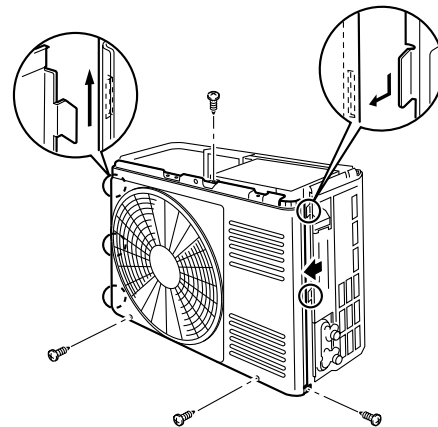


Fig. 9

- (6) Remove each connector and earth cable from the lead wire.
- (7) Remove four lock screws from the main P.W.B. and pull two support hooks at the front side to remove the P.W.B.
- (8) Pull three support hooks at the rear side of the Power P.W.B. to remove the P.W.B.


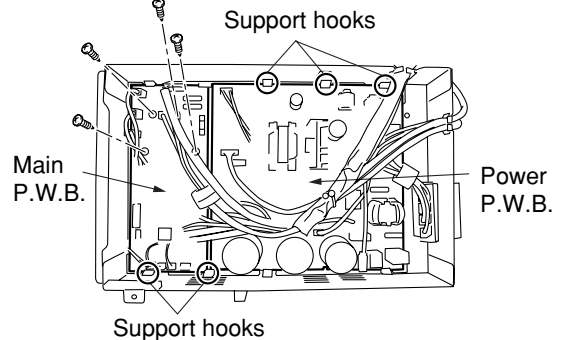


Fig. 10

# PARTS LIST AND DIAGRAM

INDOOR UNIT  
MODEL: RAS-18YH4




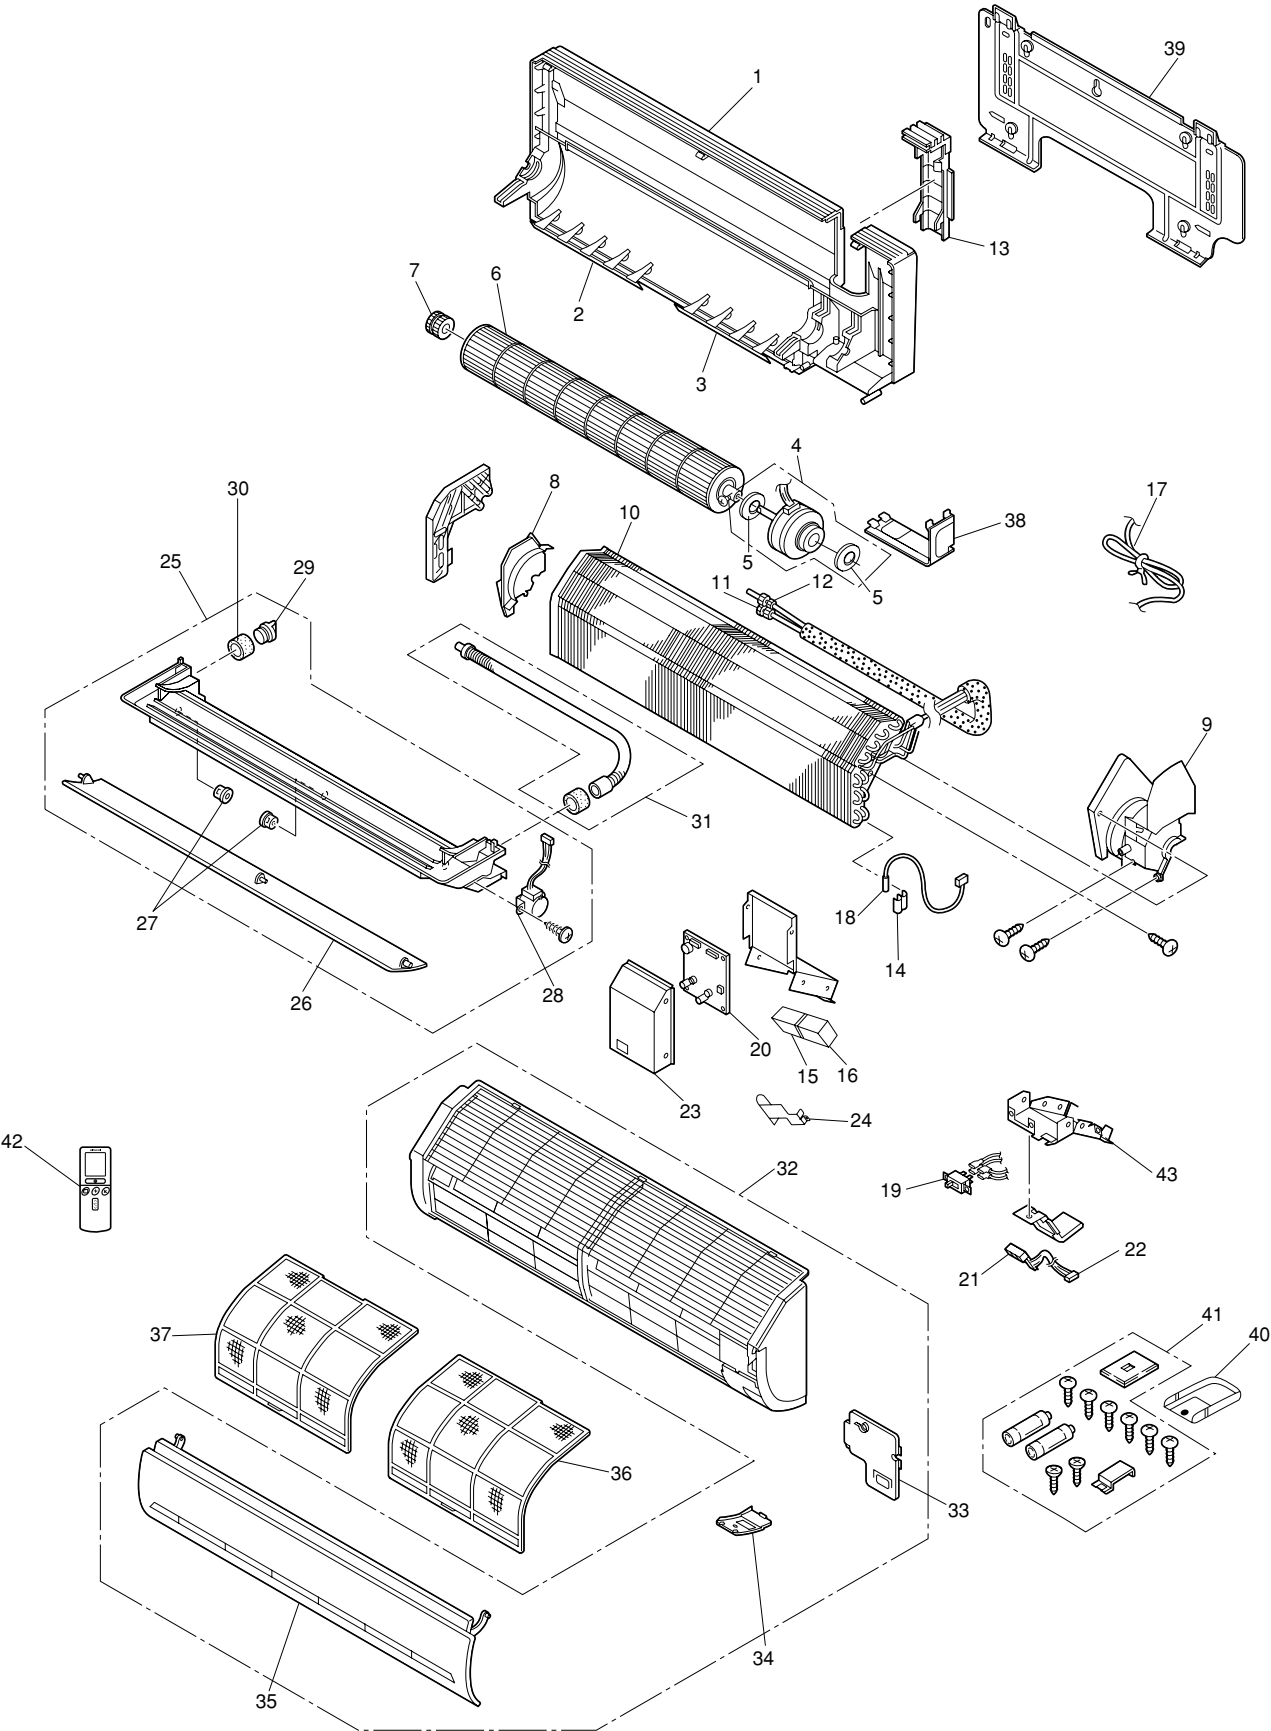

## INDOOR UNIT

NO	PARTS NO.	Q'TY	PARTS NAME
	RAS-18YH4		
1	HWRAS-25YH4 901	1	CABINET
2	HWRAS-25YH4 902	1	VERTICAL AIR DEFLECTOR-L
3	HWRAS-25YH4 903	1	VERTICAL AIR DEFLECTOR-R
4	HWRAS-25YH4 904	1	FAN MOTOR 25W 1.1kg
5	HWRAS-25YH4 905	1	ANTI VAIBRATION BUSHING
6	HWRAS-25YH4 907	1	TANGENTIAL AIR FLOW FAN
7	HWRAS-25YH4 908	1	FAN SUPPORT ASSEMBLY
8	HWRAS-25YH4 909	1	FAN COVER
9	HWRAS-25YH4 910	1	FAN MOTOR SUPPORT
10	HWRAS-25YH4 911	1	EVAPORATOR ASSEMBLY
11	HWRAS-25YH4 912	1	UNION (2)
12	HWRAS-25YH4 913	1	UNION (3)
13	HWRAS-25YH4 914	1	UPPER COVER
14	HWRAS-25YH4 915	1	SPRING
15	HWRAS-25YH4 916	1	TERMINAL BOARD (2P)
16	HWRAS-25YH4 917	1	TERMINAL BOARD (2P)
17	HWRAS-E08H 901	1	POWER SUPPLY CORD
18	HWRAS-25YH4 919	1	THERMISTOR ASSEMBLY
19	HWRAS-25YH4 920	1	POWER SWICHI
20	HWRAS-E08H 902	1	P.W.B. (MAIN)
21	HWRAS-25YH4 922	1	P.W.B. (INDICATION)
22	HWRAS-25YH4 923	1	CONNECTING CORD (12PIN)
23	HWRAS-25YH4 924	1	ELECTRIC PARTS COVER
24	HWRAS-25YH4 925	1	COVER (TERMINAL)
25	HWRAS-25YH4 926	1	DRAIN PAN
26	HWRAS-25YH4 927	1	HORIZONTAL AIR DEFLECTOR
27	HWRAS-25YH4 928	2	DEFLECTOR SUPPORT
28	HWRAS-25YH4 929	1	AUTO SWEEP MOTOR
29	HWRAS-25YH4 930	1	DRAIN CAP
30	HWRAS-25YH4 931	1	HEAT INSULATOR PIPE
31	HWRAS-25YH4 932	1	DRAIN HOSE
32	HWRAS-25YH4 933	1	FRONT COVER ASSEMBLY (NON FILTER)
33	HWRAS-25YH4 934	1	COVER (EARTH)
34	HWRAS-25YH4 935	1	COVER (SWITCH)
35	HWRAS-25YH4 936	1	FRONT PANEL
36	HWRAS-25YH4 937	1	AIR FILTER (R)
37	HWRAS-25YH4 938	1	AIR FILTER (L)
38	HWRAS-25YH4 939	1	COVER (LOWER)(R)
39	HWRAS-25YH4 940	1	MOUNTING PLATE
40	HWRAS-25YH4 941	1	REMOCON. SUPPORT
41	HWRAS-25YH4 942	1	SCREW ASSEMBLY
42	HWRAS-25YH4 943	1	REMOTE CONTROL ASSEMBLY
43	HWRAS-25YH4 906	1	COVER (ELECTRIC)

OUTDOOR UNIT  
MODEL: RAC-18YH4

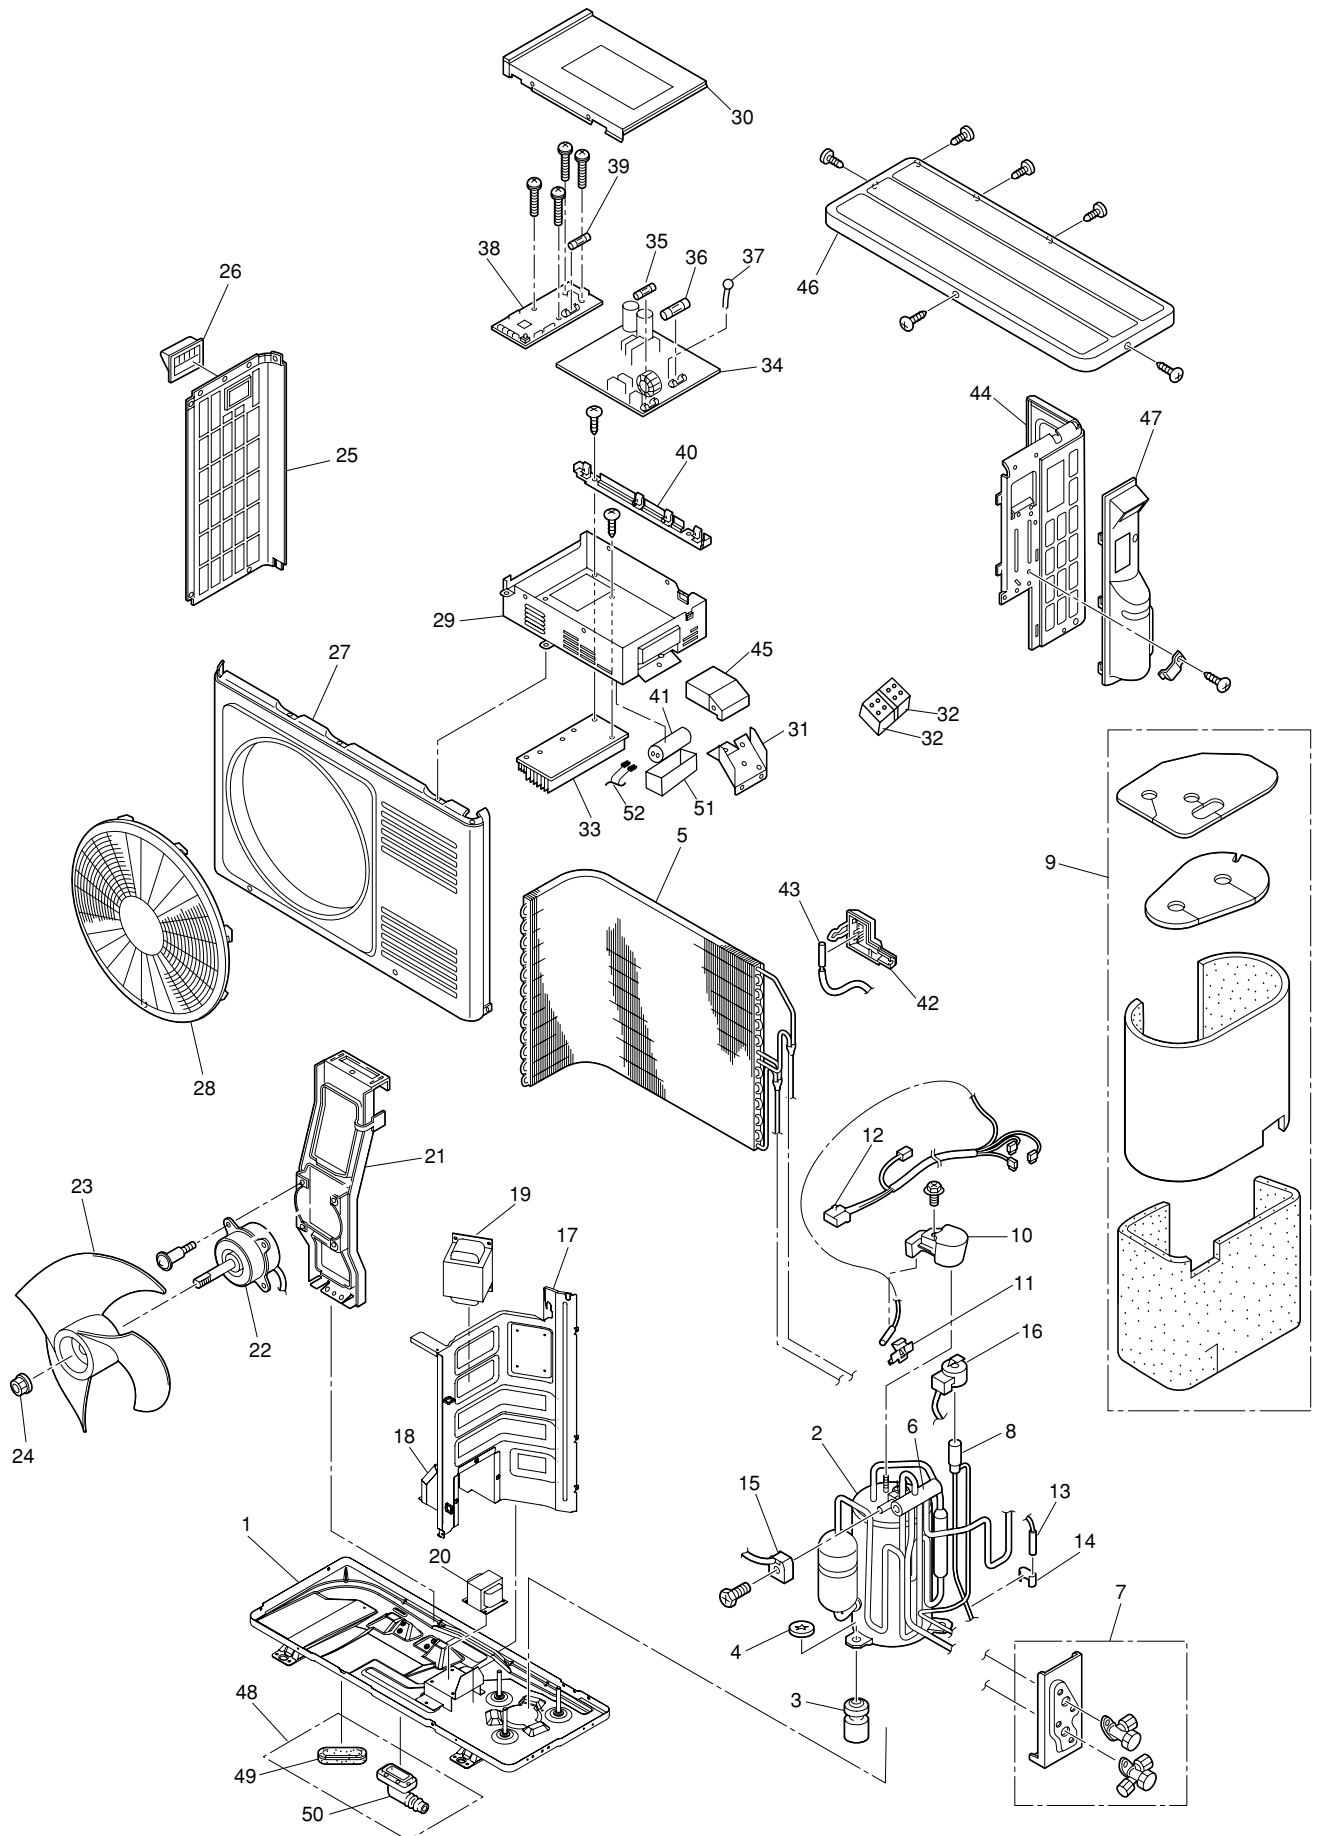

## OUTDOOR UNIT

NO	PARTS No.		Q'TY	PARTS NAME
	RAC-18YH4			
1	HWRAC-E08H	901	1	BASE
2	HWRAC-E08H	902	1	COMPRESSOR 750W 8.1kg
3	HWRAC-25YH4	903	3	COMPRESSOR RUBBER
4	HWRAC-25YH4	904	3	PUSH NUT
5	HWRAC-25YH4	905	1	CONDENSER
6	HWRAC-E08H	903	1	REVERSING VALVE (WITH COIL)
7	HWRAC-E08H	904	1	SERVICE VALVE ASSEMBLY
8	HWRAC-E08H	905	1	ELECTRIC EXPANSION VALVE
9	HWRAC-E08H	906	1	SOUND PROOF COVER ASSEMBLY
10	HWRAC-E08H	907	1	O.L.R COVER
11	HWRAC-25YH4	911	1	O.H THERMISTOR SUPPORT
12	HWRAC-E08H	908	1	CONNECTING CORD (COMPRESSOR)
13	HWRAC-25YH4	913	1	THERMISTOR (DEFROST)
14	HWRAC-25YH4	914	1	THERMISTOR SUPPORT
15	HWRAC-25YH4	915	1	COIL (REVERSING VALVE)
16	HWRAC-E08H	909	1	COIL (EXPANSION VALVE)
17	HWRAC-25YH4	917	1	PARTITION (WITH HEAT INSULATOR)
18	HWRAC-25YH4	918	1	REACTOR COVER
19	HWRAC-25YH4	919	1	REACTOR1
20	HWRAC-25YH4	920	1	REACTOR2
21	HWRAC-25YH4	921	1	FAN MOTOR SUPPORT
22	HWRAC-25YH4	922	1	FAN MOTOR 40W 1.5kg
23	HWRAC-25YH4	923	1	PROPELLER FAN
24	HWRAC-25YH4	924	1	NUT (PROPELLER FAN)
25	HWRAC-25YH4	925	1	SIDE COVER (L)
26	HWRAC-25YH4	926	1	HANDLE
27	HWRAC-E08H	910	1	FRONT COVER
28	HWRAC-25YH4	928	1	DISCHARGE GRILL
29	HWRAC-25YH4	929	1	ELECTRIC PARTS PLATE
30	HWRAC-E08H	915	1	ELECTRIC PARTS COVER
31	HWRAC-25YH4	931	1	TERMINAL PLATE
32	HWRAC-25YH4	932	2	TERMINAL BOARD (2P)
33	HWRAC-25YH4	933	1	HEAT SINK (REGURATOR1)
34	HWRAC-E08H	916	1	P.W.B. (POWER)
35	HWRAC-E08H	911	1	FUSE (15A)
36	HWRAC-25YH4	936	1	FUSE (3A)
37	HWRAC-25YH4	937	3	VARISTOR
38	HWRAC-E08H	912	1	P.W.B. (MAIN)
39	HWRAC-25YH4	939	1	FUSE (1A)
40	HWRAC-25YH4	940	2	SUPPORT (P.W.B.)
41	HWRAC-25YH4	941	1	CAPACITOR 45µF 200V
42	HWRAC-25YH4	942	1	COVER (OUTDOOR THERMISTOR)
43	HWRAC-25YH4	943	1	THERMISTOR (OUTDOOR TEMPERATURE)
44	HWRAC-E08H	913	1	SIDE COVER (R)
45	HWRAC-25YH4	945	1	TERMINAL COVER
46	HWRAC-25YH4	946	1	TOP COVER
47	HWRAC-25YH4	947	1	SERVICE VALVE COVER
48	HWRAC-25YH4	948	1	BUSH ASSEMBLY
49	HWRAC-25YH4	949	1	BUSH
50	HWRAC-25YH4	950	1	DRAIN PIPE
51	HWRAC-25YH4	951	1	COVER (CAPACITOR)
52	HWRAC-E08H	914	1	CORD ASSEMBLY

# HITACHI

---

**RAS-18YH4 / RAC-18YH4**

**AW NO. 0004E**

Printed in Japan (TSK)