

MDV ComboType Heat Pump Water Heater Technical Manual



Applicable Models:

CE-RSJ-15/150RDN3-C

CE-RSJ-15/190RDN3-C



Большая библиотека технической документации
<http://splitoff.ru/tehn-doc.html>
каталоги, инструкции, сервисные мануалы, схемы.

Contents

| | |
|--|-----------|
| Part 1 General Information | 3 |
| 1. Measurements..... | 4 |
| 2. External Appearance | 4 |
| 3. Nomenclature..... | 5 |
| 4. Features..... | 6 |
| Part 2 Outdoor Units | 7 |
| 1. Specifications | 8 |
| 2. Dimensions | 10 |
| 3. Service Space | 14 |
| 4. Wiring Diagrams | 15 |
| 5. Piping Diagrams | 14 |
| 6. Exploded View | 17 |
| Part 3 Installation | 21 |
| 1. Precautions | 22 |
| 2. Installation information | 23 |
| 3. Unit Appearance and Composition | 24 |
| 4. Accessories..... | 25 |
| 5. Inspecting and Handling the Unit..... | 25 |
| 6. Electric Wiring | 25 |
| 7. System diagram..... | 25 |
| Part 4 Trial Operation | 27 |
| 1. Confirmation before the trial operation | 28 |
| 2. OPERATING INSTRUCTION | 28 |
| 3. Maintenance..... | 41 |
| 4. Malfunctions and Resolutions..... | 43 |

Part 1

General Information

| | |
|------------------------------|---|
| 1. Measurements | 4 |
| 2. External Appearance | 4 |
| 3. Nomenclature | 5 |
| 4. Features | 6 |

1. Measurements

| Model | Dimension (mm: OD x H) | Net weight / Gross weight (kg) | Power Supply |
|---------------------|---------------------------|-----------------------------------|-------------------|
| CE-RSJ-15/150RDN3-C | Φ 568×1430 | 86.7/97.5 | 220~240V-1ph-50Hz |
| CE-RSJ-15/190RDN3-C | Φ 568×1580 | 92.7/107 | 220~240V-1ph-50Hz |


2. External Appearance

RSJ-15/150RDN3-C RSJ-15/190RDN3-C




3. Nomenclature

Household Water Heating Unit

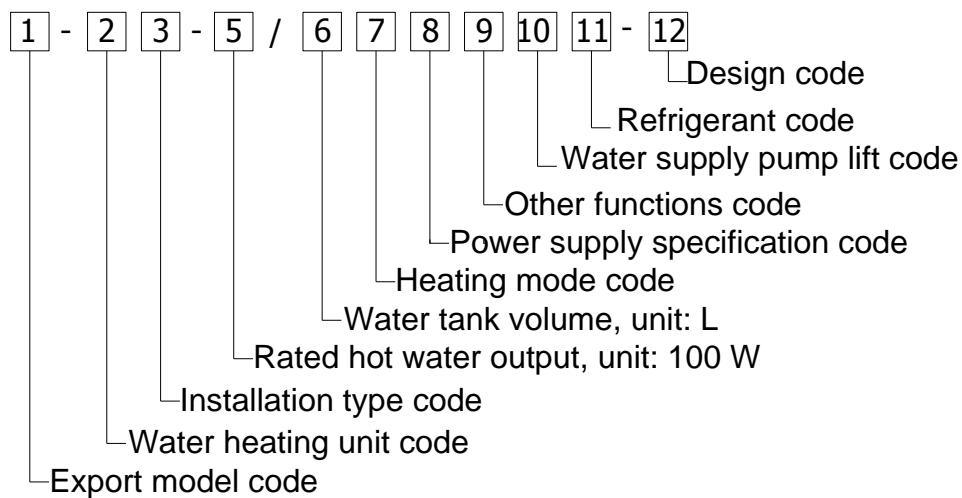



For example:

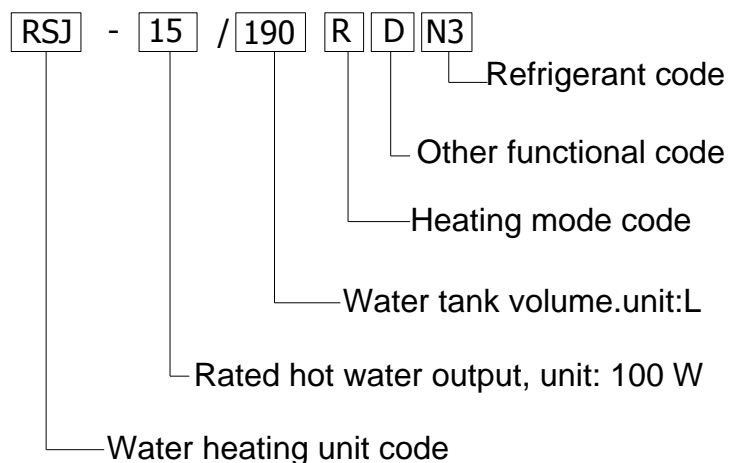

4. Features


4.1 Safety

- Complete isolation between water and electricity. No electric shock problem, more safety.
- No fuel tubes and storage, no potential danger from oil leakage, fire, explosion etc.
- No cross contamination potential, the condenser coil wrapped around the porcelain enamel inner tank

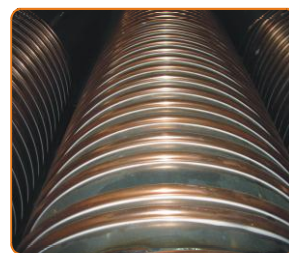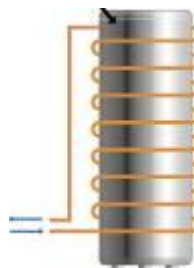

4.2 Max. outlet water Temperature: 70°C.

The system is adopted innovative heating methods, and combined the Electric heating and Heat Pump heating properly, made the water be heated stably and quickly.

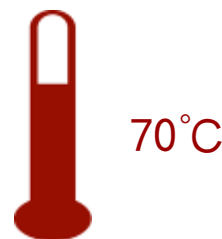


4.3 Easy Installation


The system is Integrated design and very easy for installation.



Cupboard Installation

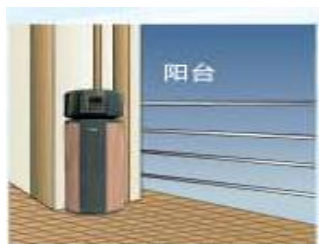

Balcony Installation

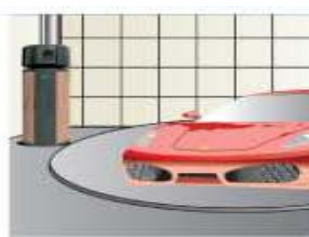

Garage Installation



Garden Installation

4.4 Automatic Control:

Automatic start-up and shutdown, automatic defrosting. Save you much extra operation.

4.6 High Efficiency and Energy Saving.

The unit adopts heat pump principle, which absorbs heat from outdoor air and produce heat water, thermal efficiency can be approximately 3.5

4.7 All-the-weather Running.

Within the temperature range from -30 to 43°C, it will not be affected by night, cloudy sky, rain even snow whether.



4.8 Auto disinfection mode.

When powered on, it will operate anti-legionella function automatically every 168 hours (7 days). It can also run this function by force at any time you want. (press "cancel + time on" buttons one second)

Part 2

Outdoor Units

| | |
|------------------------------|----|
| 1. Specifications..... | 8 |
| 2. Performance diagram | 8 |
| 3. Dimensions | 10 |
| 4. Service Space..... | 14 |
| 5. Wiring Diagrams | 15 |
| 6. Piping Diagrams | 14 |
| 7. Exploded View..... | 17 |

1. Specifications

| Model | | | RSJ-15/150RDN3-C | | |
|---------------------------|-----------------------------|---------|--|--------|----------|
| Running Models | | | Economy | Hybrid | E-heater |
| Running Ambient temp. | | ℃ | 5~43 | -30~43 | -30~43 |
| Power supply | | ph-V-Hz | 220~240V-1ph-50Hz | | |
| Storage size | | Ltr | 150 | | |
| Water heating | Capacity | kW | 1.5 | 1.86 | 2.0 |
| | Cop | kW | 3.45 | 1.45 | 1 |
| | Max. current | A | 9.5A | | |
| Compressor | Model | | PJ125G1C-4DRDE | | |
| | Type | | Rotary | | |
| | Brand | | TOSHIBA | | |
| | Supplier | | GMCC (美芝) | | |
| | Capacity | kW | 1390/1405 | | |
| | Input | kW | 515/540 | | |
| | Capacitor | uF | 25 uF/370VAC | | |
| | Refrigerant oil | | 350CC (OIL RB74AF) | | |
| fan motor | Model | | YDK12-4H | | |
| | Brand | | Welling | | |
| | Input | W | 35.5/26.5/23 | | |
| | Capacitor | uF | 1.5 | | |
| | Speed(hi/lo) | r/min | 890/580/380 | | |
| Evaporator coil | Number of rows | | 3 | | |
| | Tube pitch(a)x row pitch(b) | mm | 21X31.37 | | |
| | Fin spacing | mm | 1.5 | | |
| | Fin type | | Hydrophilic aluminum | | |
| | Tube outer dia. and type | mm | Φ7.0 inner groove tube | | |
| | Number of circuits | | 3 | | |
| Noise level | | dB(A) | 48 | | |
| Running Operation | | | Auto/Manual start up, Energy-saving, standard, Enhanced heating type heating water | | |
| Protection Method | | | Over-load protection, Temp protection, Electric leakage protection | | |
| Outdoor unit | Dimension (D*H) | mm | Φ568×1430 | | |
| | Packing (W*H*D) | mm | 730×1520×700 | | |
| | Net/Gross weight | kg | 86.7/97.5 | | |
| Refrigerant type/Quantity | | Kg | R134a/0.83 | | |
| Operating pressure | | MPa | 3.0/1.2 | | |
| Ambient temp | | ℃ | (-30~43) | | |
| water pipeline | Diameter, water inlet pipe | mm | DN20 | | |
| | Diameter, water outlet pipe | mm | DN20 | | |
| | Diameter, drainage pipe | mm | DN20 | | |
| | Diameter, PT valve joint | mm | DN20 | | |
| | Max. pressure | MPa | 0.8 | | |
| | Water outlet Temp | ℃ | (default) 65℃, 38℃~70℃ | | |
| | Heat exchanger | | Condenser-heating type (Condenser on the outside of tank) | | |
| Hot Water Yield | | L/h | 41 | 48 | 57 |
| Electric Heater | | kW | 2.0×2 | | |


| Model | | | RSJ-15/190RDN3-C | | |
|---------------------------|-----------------------------|---------|--|--------|----------|
| Running Models | | | Economy | Hybrid | E-heater |
| Running Ambient temp. | | ℃ | 5~43 | -30~43 | -30~43 |
| Power supply | | ph-V-Hz | 220~240V-1ph-50Hz | | |
| Storage size | | Ltr | 190 | | |
| Water heating | Capacity | kW | 1.5 | 1.86 | 2.0 |
| | Cop | kW | 3.5 | 1.45 | 1 |
| | Rated current | A | 9.5A | | |
| Compressor | Model | | PJ125G1C-4DRDE | | |
| | Type | | Rotary | | |
| | Brand | | TOSHIBA | | |
| | Supplier | | GMCC (美芝) | | |
| | Capacity | kW | 1390/1405 | | |
| | Input | kW | 515/540 | | |
| | Capacitor | uF | 25 uF/370VAC | | |
| | Refrigerant oil | | 350CC (OIL RB74AF) | | |
| fan motor | Model | | YDK12-4H | | |
| | Brand | | Welling | | |
| | Input | W | 35.5/26.5/23 | | |
| | Capacitor | uF | 1.5 | | |
| | Speed(hi/lo) | r/min | 890/580/380 | | |
| evaporator coil | Number of rows | | 3 | | |
| | Tube pitch(a)x row pitch(b) | mm | 21X31.37 | | |
| | Fin spacing | mm | 1.5 | | |
| | Fin type | | Hydrophilic aluminum | | |
| | Tube outer dia. and type | mm | Φ7.0 inner groove tube | | |
| | Number of circuits | | 3 | | |
| Noise level | | dB(A) | 48 | | |
| Running Operation | | | Auto/Manual start up, Energy-saving, standard, Enhanced heating type heating water | | |
| Protection Method | | | Over-load protection, Temp protection, Electric leakage protection | | |
| Outdoor unit | Dimension (D*H) | mm | Φ568×1580 | | |
| | Packing (W*H*D) | mm | 730×1660×700 | | |
| | Net/Gross weight | kg | 92.7/107 | | |
| Refrigerant type/Quantity | | Kg | R134a/0.8 | | |
| Operating pressure | | MPa | 3.0/1.2 | | |
| Ambient temp | | ℃ | (-30~43) | | |
| water pipeline | Diameter, water inlet pipe | mm | DN20 | | |
| | Diameter, water outlet pipe | mm | DN20 | | |
| | Diameter, drainage pipe | mm | DN20 | | |
| | Diameter, PT valve joint | mm | DN20 | | |
| | Max. pressure | MPa | 0.8 | | |
| | Water outlet Temp | ℃ | (default) 65℃, 38℃~70℃ | | |
| | Heat exchanger | | Condenser-heating type (Condenser on the outside of tank) | | |
| Hot Water Yield | | L/h | 43 | 48 | 57 |
| Electric Heater | | kW | 2.0×2 | | |

Remark:

1. The test conditions: outdoor temp. 15/12℃(DB/WB), inlet water temp. 15℃, outlet water temp. 45℃.
2. The operation range:-20℃-43℃, heat pump operation range: -7℃-43℃
3. The specification may be changed for product improvement, please refer to the nameplate.

2. Performance diagram

2.1 Operation range

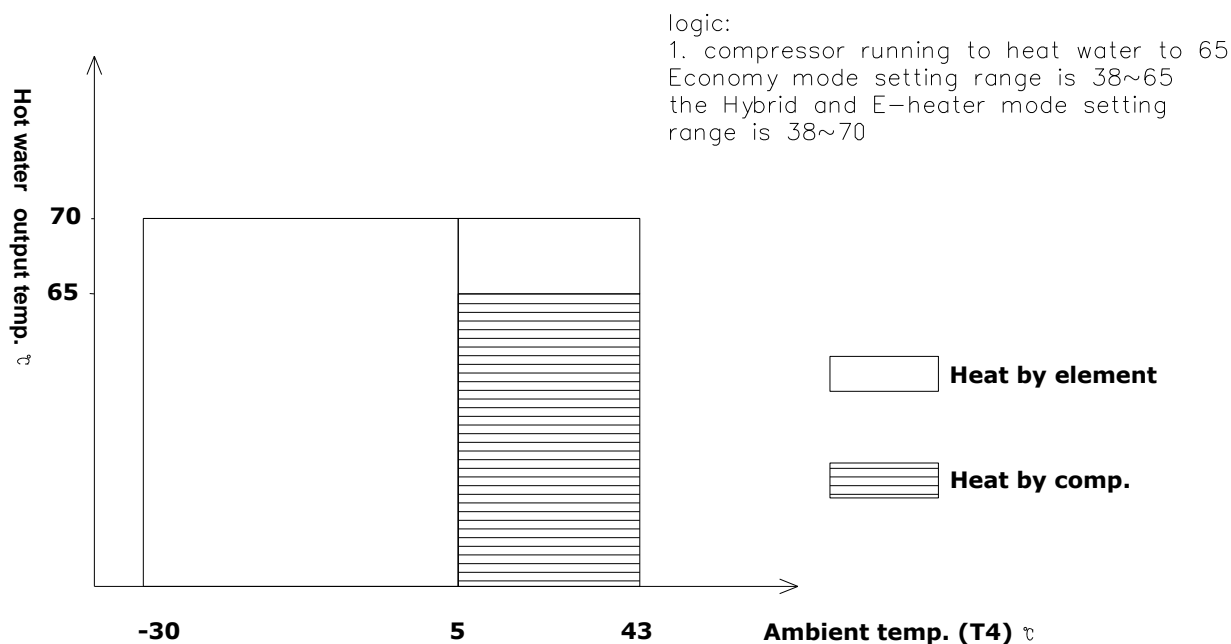


Economy Mode: Water heated by compressor to get higher COP;

Hybrid Mode: Water heated by element(priority) & compressor(secondary heat source)


E-heater Mode: Water heated by element to get hot water when ambient temp too low.

2.2 Relation between COP and ambient temperature


CE-RSJ-15/150RDN3-C (Capacity curve)

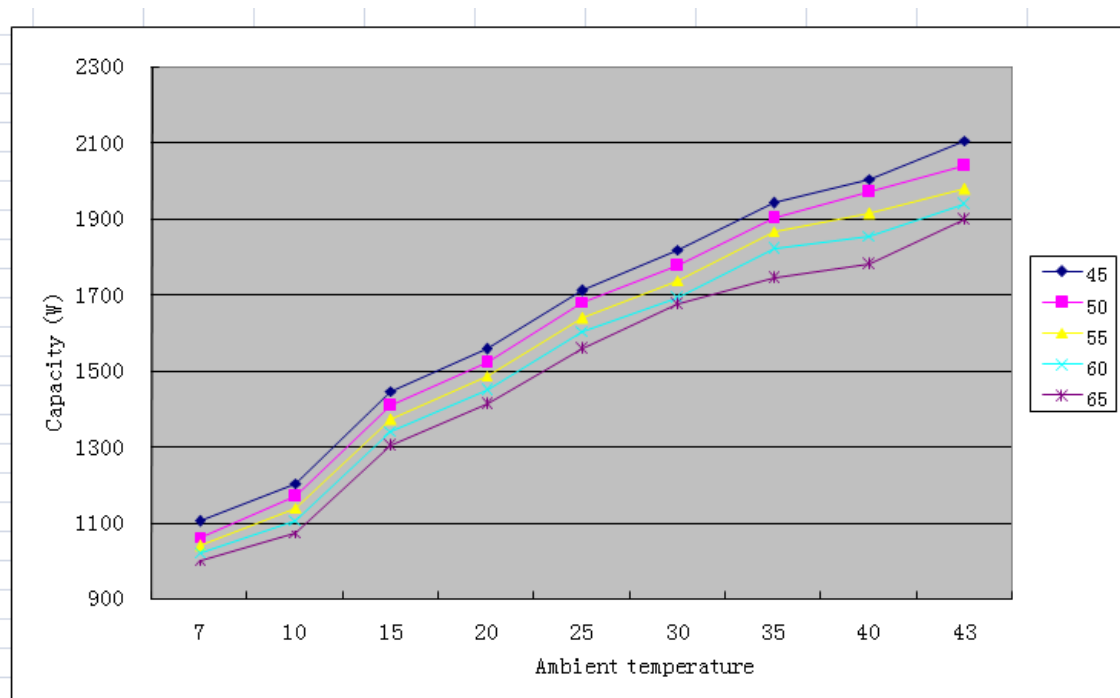


CE-RSJ-15/150RDN3-C (COP curve)

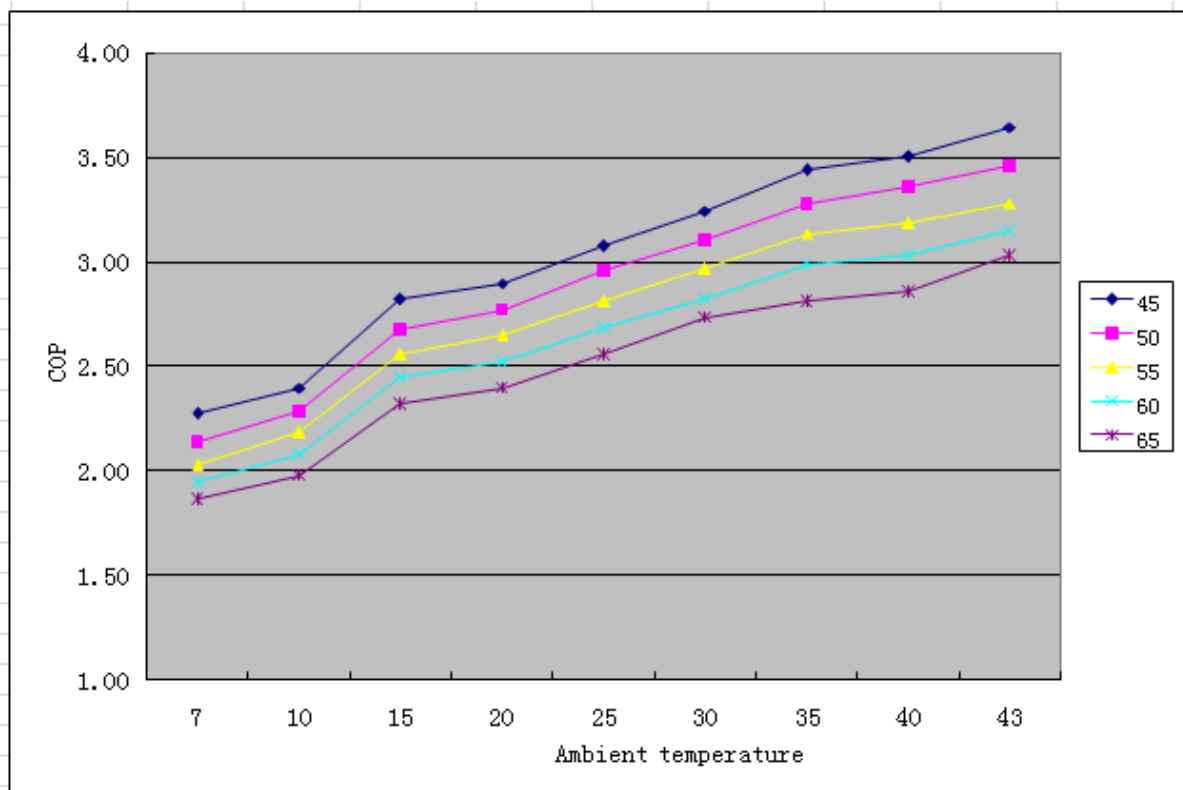



CE-RSJ-15/190RDN3-C (Capacity curve)

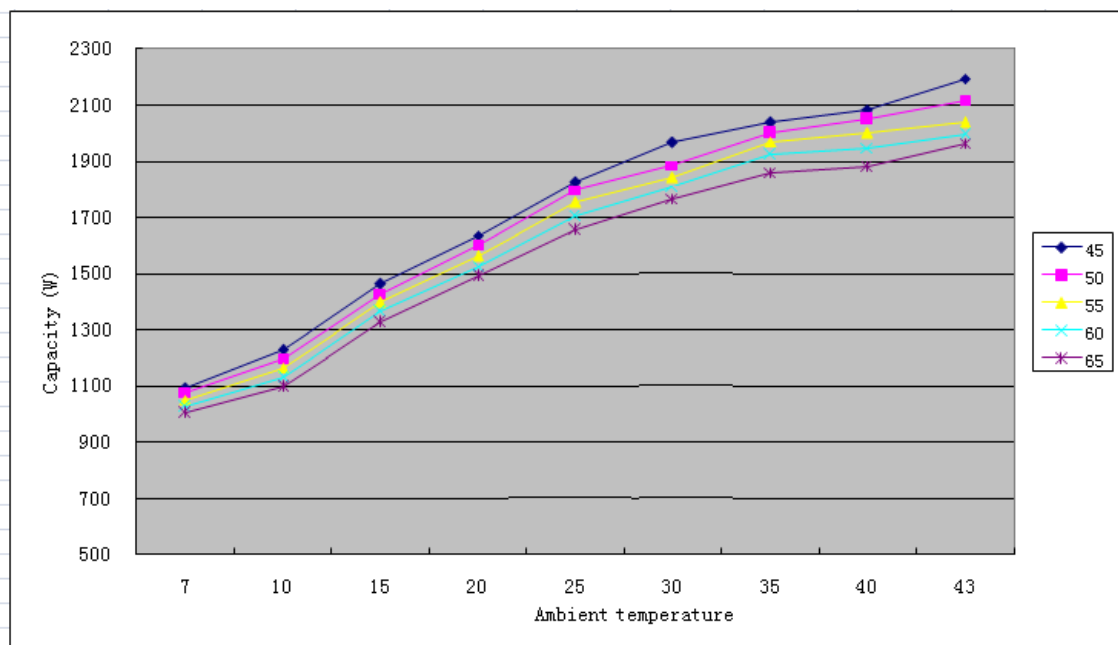

CE-RSJ-15/190RDN3-C (COP curve)


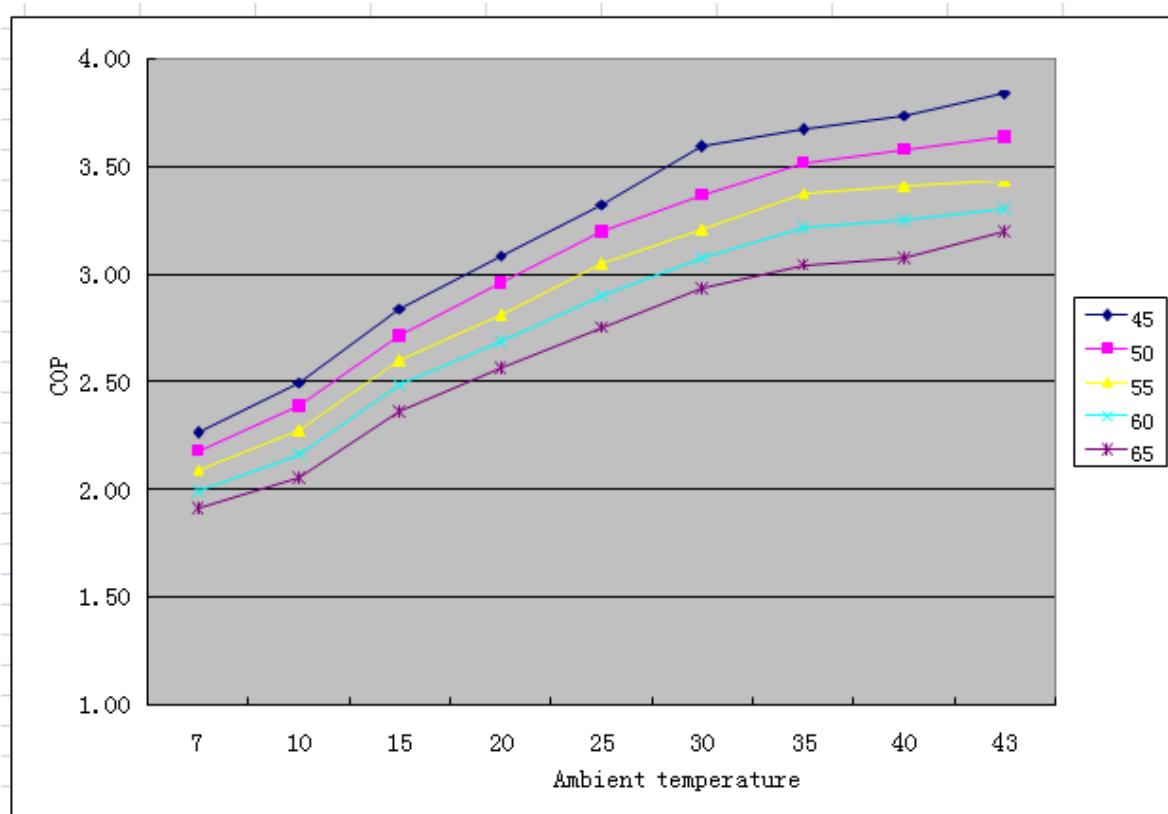


3. Dimensions

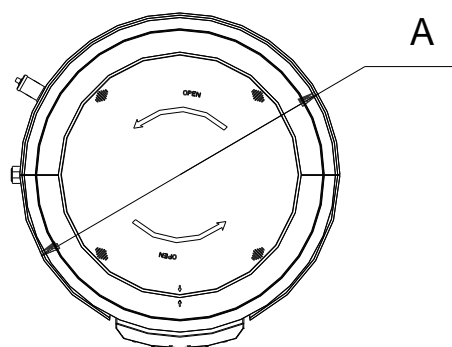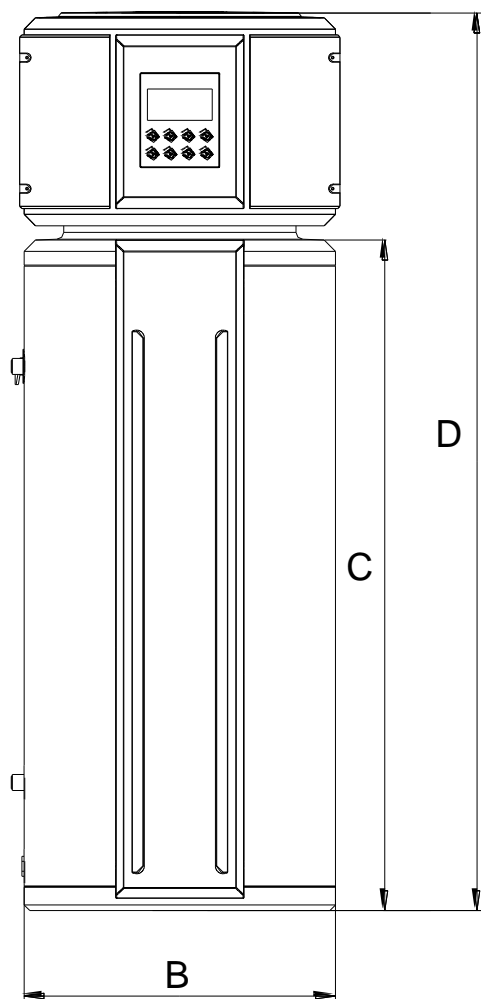


| Model | A | B | C | D |
|------------------|-----|-----|------|------|
| RSJ-15/150RDN3-C | 568 | 560 | 1100 | 1430 |
| RSJ-15/190RDN3-C | 568 | 560 | 1376 | 1580 |


4. Service Space

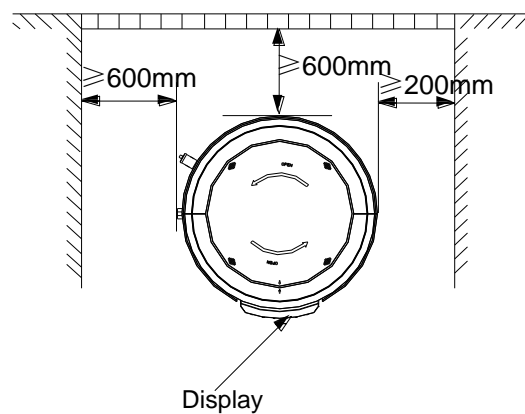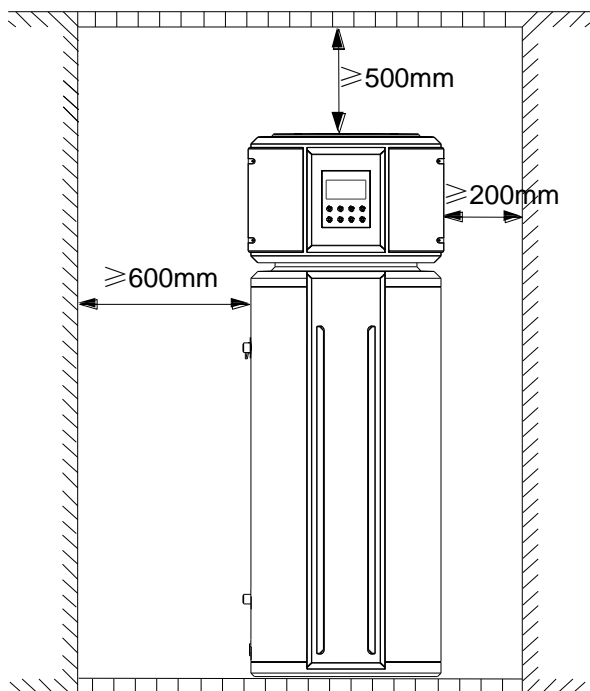

5. Wiring Diagrams (CE-RSJ-15/150RDN3-C & CE-RSJ-15/190RDN3-C)

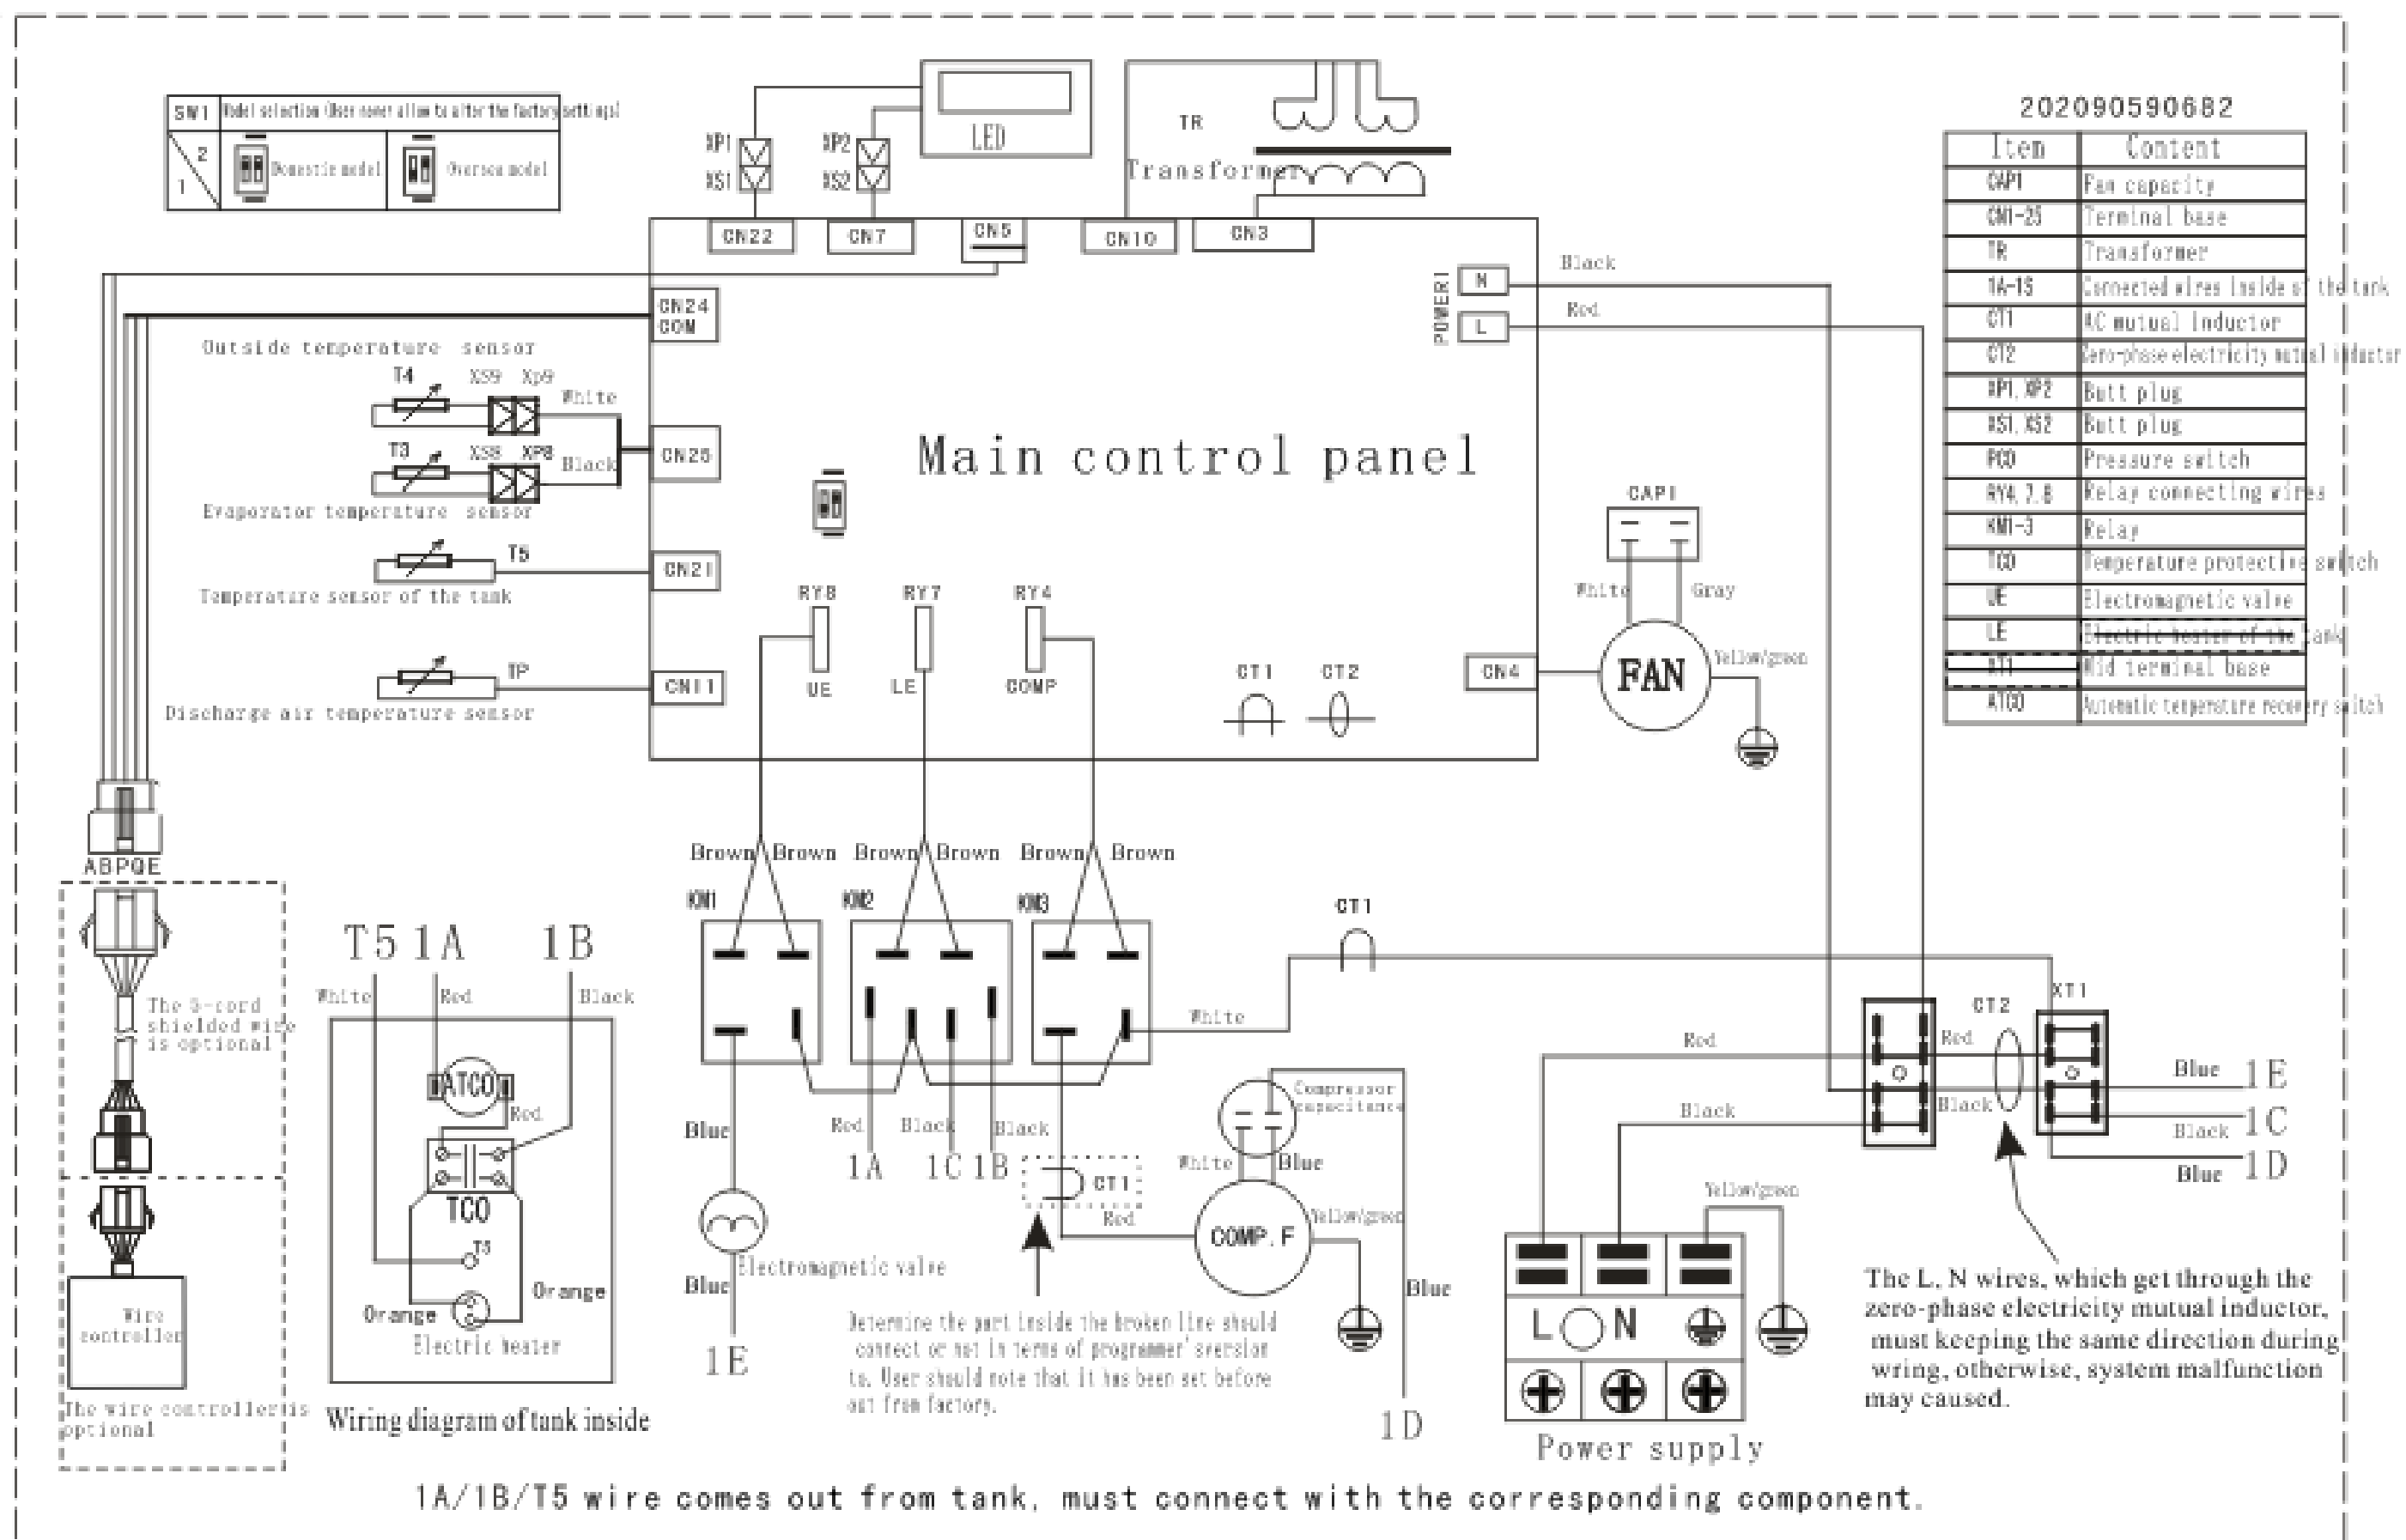


6 Piping Diagrams

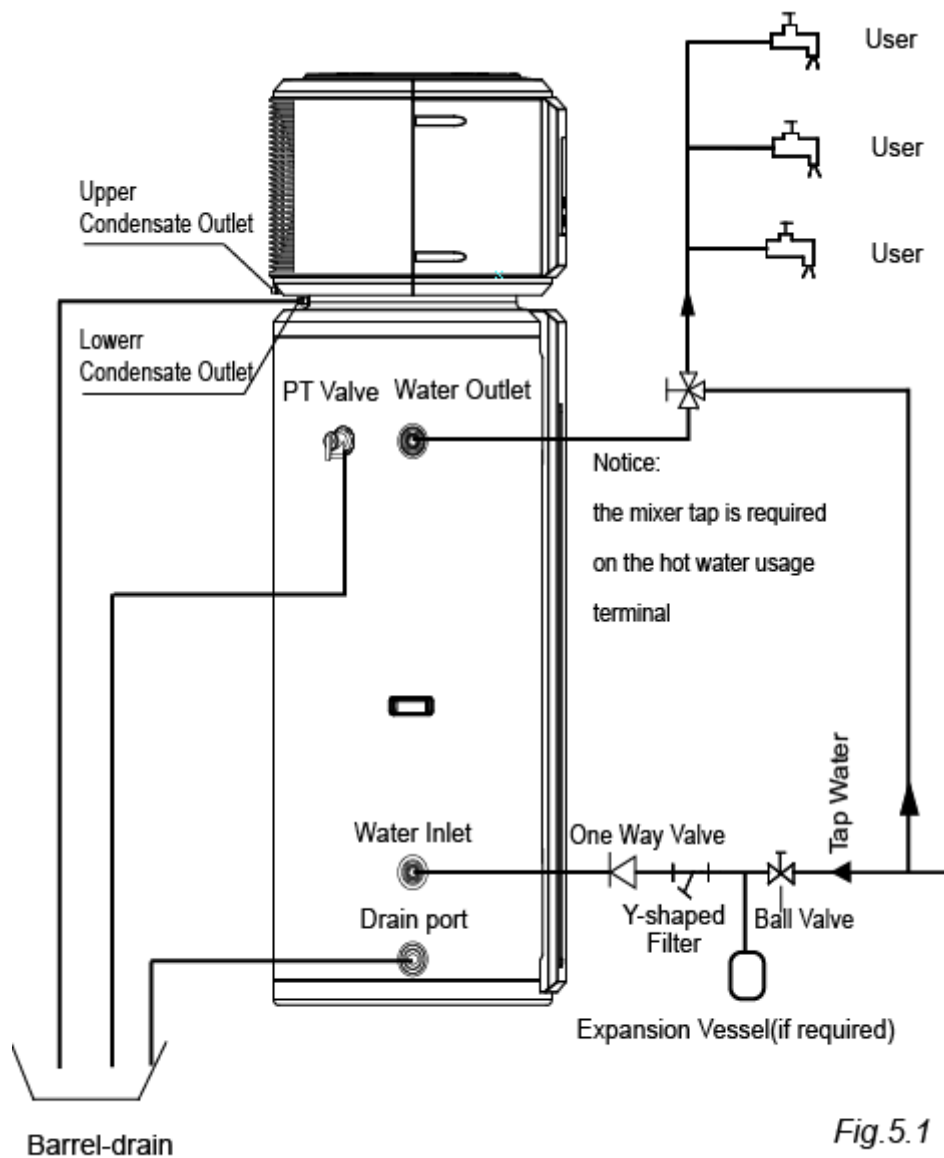

Note: Connecting Diagram of the Water Heater



| No. | Name | Diameter |
|-----|----------------------------|----------|
| 1 | Water Outlet of Water Tank | DN20 |
| 2 | Water Inlet of Water Tank | DN20 |

7 Exploded View (CE-RSJ-15/150RDN3-C)

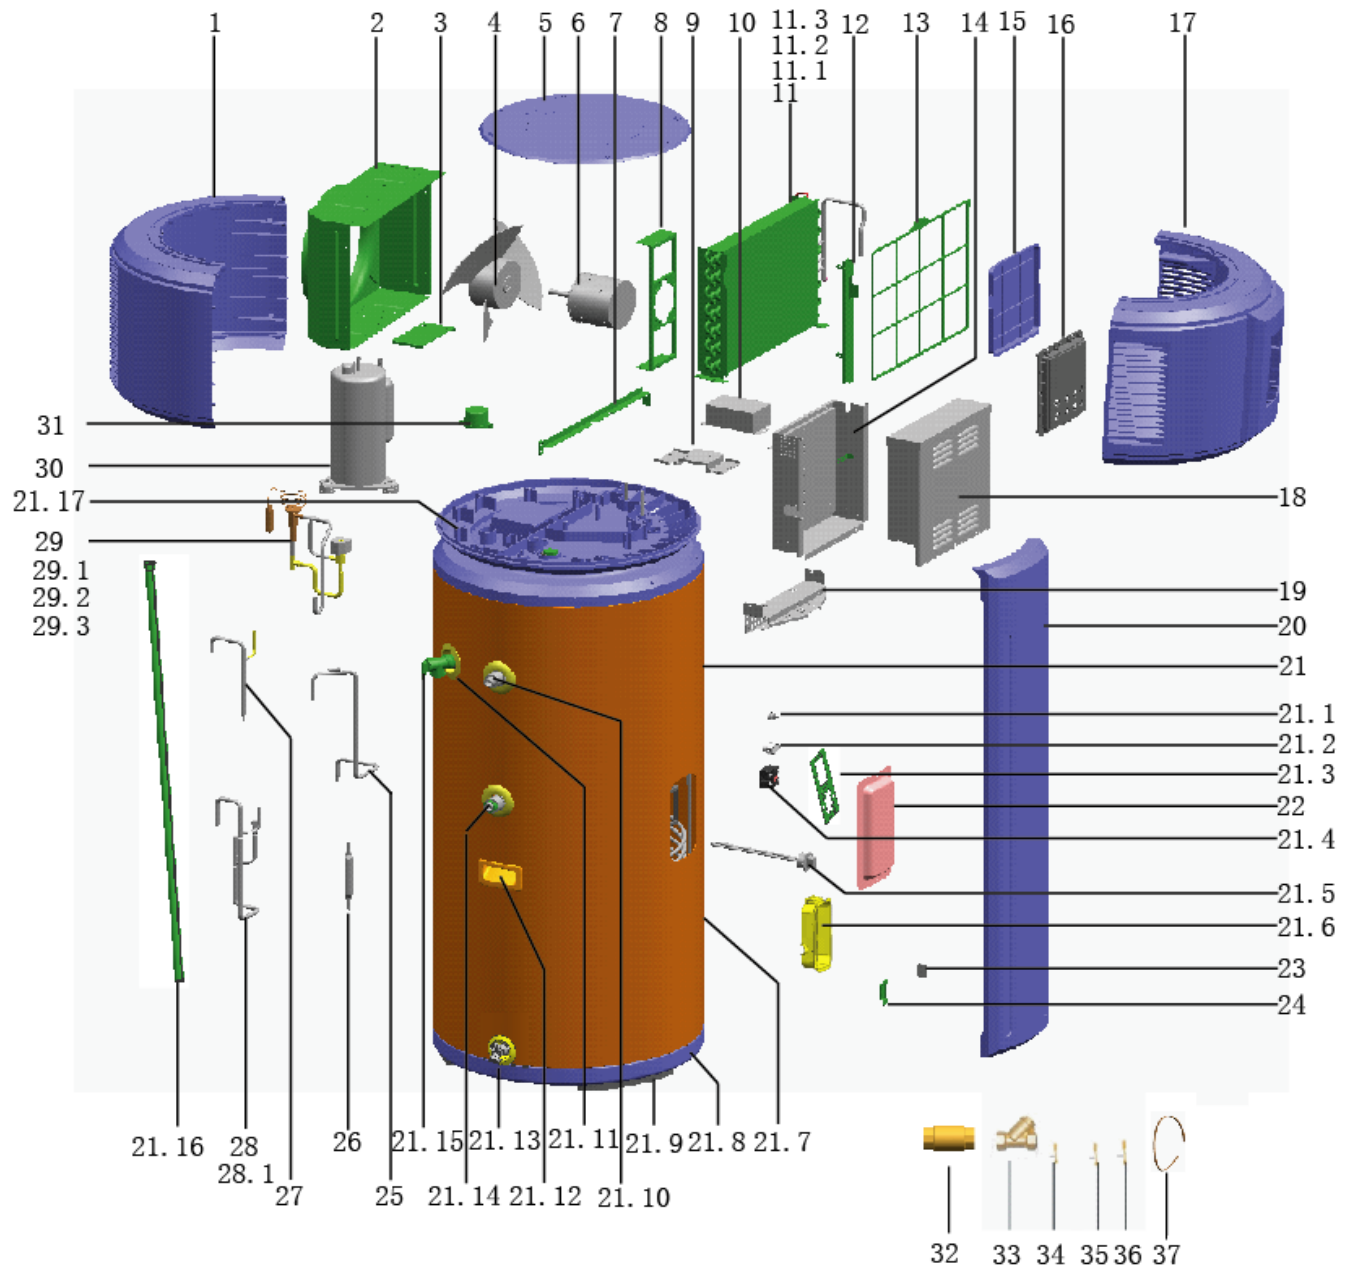

| 序号 No. | 中文 | 零部件名称 Part Name | 数量 Quantity | 编码 BOM code | 价格 Price(US\$) | 备注 Remark |
|-----------|-----------------------|---------------------------------------|----------------|----------------|-------------------|--------------|
| 1 | 上后罩 (S3090, RoHS) | Rear net | 1 | 201190500262 | | |
| 2 | 风扇箱 (RoHS) | Fan Box | 1 | 201290501334 | | |
| 3 | 风扇箱支架 (RoHS) | Fan box bracket | 1 | 201290501335 | | |
| 4 | 轴流风叶 (RoHS) | Axial flow fan | 1 | 201400300025 | | |
| 5 | 上盖 (S3090, RoHS) | Up cover | 1 | 201190500261 | | |
| 6 | 异步电机 (RoHS) | Motor | 1 | 202400400383 | | |
| 7 | 电控盒支撑条 (RoHS) | E-part box supporter | 1 | 201290501220 | | |
| 8 | 电机支架 (RoHS) | Motor bracket | 1 | 201290501164 | | |
| 9 | 接线盒组件 (RoHS) | Junction Box Components | 1 | 203390500640 | | |
| 9.1 | 三位接线座 (RoHS) | Wire joint, 3p | 1 | 202301400215 | | |
| 10 | 接线盒盖 (RoHS) | Junction box cover | 1 | 201290590204 | | |
| 11 | 蒸发器部件 (RoHS) | Evaporator ass'y | 1 | 201590500640 | | |
| 11.1 | 蒸发器组件 (RoHS) (亲水/1) | Evaporator ass'y | 1 | 201590500624 | | |
| 11.2 | 蒸发器输入管组件 (RoHS) | Evaporator input pipe ass'y | 1 | 201690502697 | | |
| 11.3 | 蒸发器输出管组件 (RoHS) | Evaporator output pipe ass'y | 1 | 201690502690 | | |
| 12 | 过滤网导槽 (RoHS) | Trough | 1 | 201290501336 | | |
| 13 | 过滤网 (RoHS) | Filter | 1 | 201190500255 | | |
| 14 | 电控盒组件 (RoHS) | Electronic Control Box Components | 1 | 203390590077 | | |
| 14.1 | 压缩机电容 (Φ45, RoHS) | Compressor capacitor | 1 | 202401000410 | | |
| 14.2 | 主控板组件 (RoHS) | Main control board assembly | 1 | 201390590040 | | |
| 14.3 | 继电器 (RoHS) | Relay | 2 | 202300800003 | | |
| 14.4 | 电容 (RoHS) | Motor capacitor | 1 | 202401190047 | | |
| 14.5 | 电源变压器 (RoHS) | Transformer | 1 | 202300900162 | | |
| 14.6 | 电辅热控制板组件 (RoHS) | Control board ass'y | 1 | 201340110658 | | |
| 14.7 | 接线座 (RoHS) | Wire joint | 2 | 202301450122 | | |
| 15 | 电控板挡片 (RoHS) | Block piece | 1 | 201190500256 | | |
| 16 | 显示屏面板 (RoHS) | Display panel | 1 | 201190590002 | | |
| 17 | 上前罩 (S3090, RoHS) | The front cover | 1 | 201190500333 | | |
| 18 | 电控盒盖焊合件 (RoHS) | E-Part box cover board | 1 | 201290501474 | | |
| 19 | 电控盒支撑板 (RoHS) | Electronic control box support plate | 1 | 201290501482 | | |
| 20 | 前装饰板 (S3090, RoHS) | Front decorative boards | 1 | 2011905A0053 | | |
| 21 | 水箱发泡组件 (SB3066, RoHS) | Tank foam components | 1 | 201290590206 | | |
| 21.1 | 温度传感器T2 | Temp. sensor T2 | 1 | 202301300467 | | |
| 21.2 | 温控器 (RoHS) (UL) | Temp sensor | 1 | 202301610028 | | |
| 21.3 | 温控器固定片B | Stator of temp. sensor | 1 | 201290590034 | | |
| 21.4 | 温控器 (RoHS) | Thermometer | 1 | 202301600046 | | |
| 21.5 | 水用电加热管 (RoHS) | Electric heater pipe | 1 | 202403101002 | | |
| 21.6 | 电加热发泡挡板 (RoHS) | Electric heating foam baffle | 1 | 201190500336 | | |
| 21.7 | 水箱外壳 (SB3066, RoHS) | Tank shell | 1 | 201290501488 | | |
| 21.8 | 水箱底盖 (SB3065, RoHS) | Tank bottom | 1 | 201290501374 | | |
| 21.9 | 塑料底脚 | Plastic foot | 3 | 201190500293 | | |
| 21.10 | 出水管 (RoHS) | Water inlet pipe | 1 | 201290590005 | | |
| 21.11 | PT阀装饰圈B (RoHS) | PT valve loop | 2 | 201190500274 | | |
| 21.12 | 水箱提手 (S3089, RoHS) | Water tank handle | 2 | 201156100025 | | |
| 21.13 | 排污阀 (RoHS) | Dirt discharge Valve | 1 | 201601690002 | | |
| 21.14 | 进水管 (RoHS) | Water-inlet pipe | 1 | 201690590474 | | |
| 21.15 | 温度压力安全阀 (RoHS) | Temperature and pressure relief valve | 1 | 201601601206 | | |
| 21.16 | 镁棒 (RoHS) | Magnesium club | 1 | 202990500000 | | |
| 21.17 | 上盖 | Cover | 1 | 201190500334 | | |
| 22 | 上加热器盖 (SB3066, RoHS) | Electric heater cover | 1 | 201290501186 | | |
| 23 | 磁铁片 (RoHS) | Magnet clip | 2 | 201290501186 | | |
| 24 | 磁铁盖 (RoHS) | Magnet cover | 1 | 201290501185 | | |
| 25 | 压缩机排气管组件 (RoHS) | Discharge pipe ass'y | 1 | 201690502684 | | |
| 26 | 干燥过滤器 (RoHS) | Strainer | 1 | 201600900120 | | |
| 27 | 过滤器接管组件 (RoHS) | Filter receiver components | 1 | 201690502692 | | |
| 28 | 压缩机回气管组件 (RoHS) | Suction pipe ass'y | 1 | 201690502686 | | |
| 28.1 | 表接头 (RoHS) | Pipe joint | 1 | 201601200002 | | |
| 29 | 热力膨胀阀组件 (RoHS) | Expansion valve ass'y | 1 | 201690502680 | | |
| 29.1 | 热力膨胀阀 (RoHS) | Expansion valve | 1 | 201601320039 | | |
| 29.2 | 单通电磁阀 (三花, RoHS) | Solenoid valve | 1 | 201600600094 | | |
| 29.3 | 单通电磁阀线圈 (带螺钉, RoHS) | Solenoid valve winding | 1 | 201600601505 | | |
| 30 | 压缩机 (美芝) | Compressor | 1 | 201400603000 | | |
| 31 | 感温套防水盖 (RoHS) | Waterproof cover | 1 | 201190500268 | | |
| 32 | 进水单向阀 (RoHS) | Water inlet check valve | 1 | 201690590116 | | |
| 33 | Y型过滤器 (RoHS) | Y type filter | 1 | 201600900724 | | |
| 34 | 排气温度传感器组件 (RoHS) | Discharge temp sensor ass'y | 1 | 202301300131 | | |
| 35 | 室温传感器组件 (RoHS) | Room temp sensor ass'y | 1 | 202301300196 | | |
| 36 | 管温传感器组件 (RoHS) | Temp. sensor ass'y | 1 | 202301300436 | | |

7 Exploded View (CE-RSJ-15/190RDN3-C)

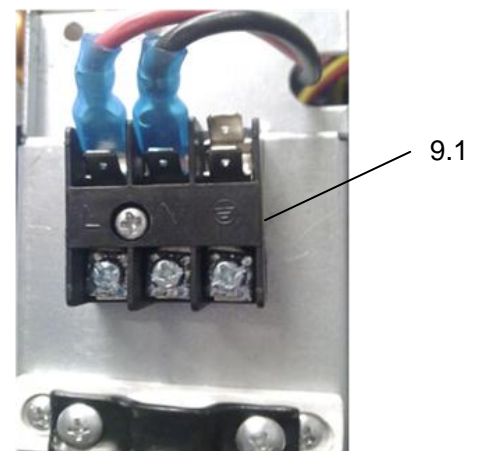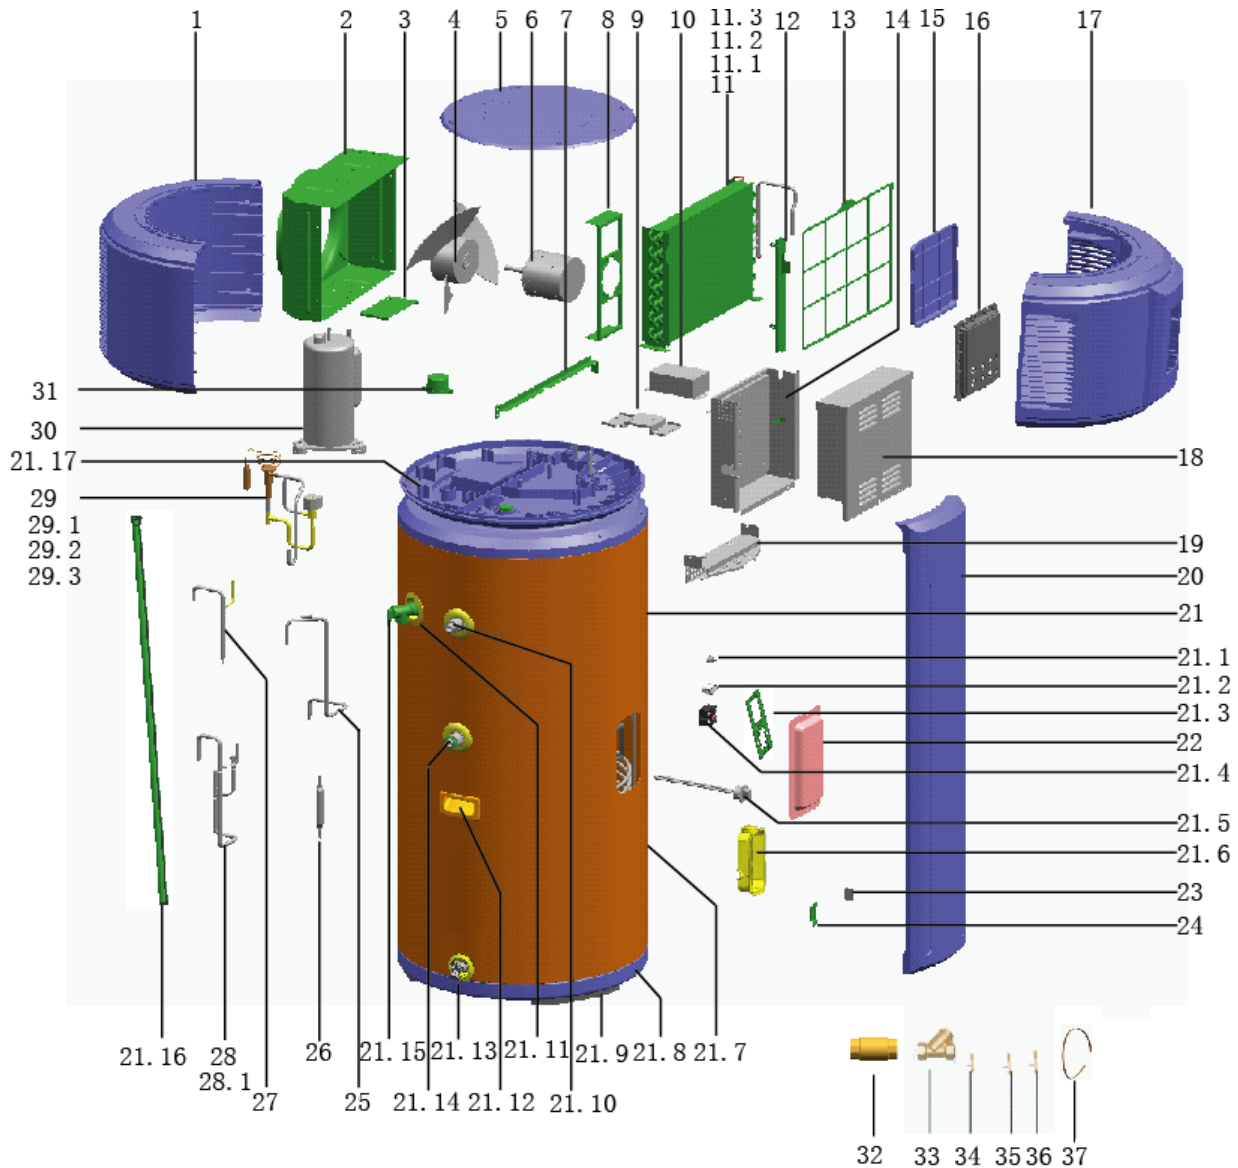

| 序号 | 零部件名称 | | 数量 | 编码 | 价格 | 备注 |
|-------|-----------------------|---------------------------------------|----------|--------------|-------------|--------|
| No. | 中文 | Part Name | Quantity | BOM code | Price(\$\$) | Remark |
| 1 | 上后罩 (S3090, RoHS) | Rear net | 1 | 201190500262 | | |
| 2 | 风扇箱 (RoHS) | Fan Box | 1 | 201290501334 | | |
| 3 | 风扇箱支架 (RoHS) | Fan box bracket | 1 | 201290501335 | | |
| 4 | 轴流风叶 (RoHS) | Axial flow fan | 1 | 201400300025 | | |
| 5 | 上盖 (S3090, RoHS) | Up cover | 1 | 201190500261 | | |
| 6 | 异步电机 (RoHS) | Motor | 1 | 202400400383 | | |
| 7 | 电控盒支撑条 (RoHS) | E-part box supporter | 1 | 201290501220 | | |
| 8 | 电机支架 (RoHS) | Motor bracket | 1 | 201290501164 | | |
| 9 | 接线盒组件 (RoHS) | Junction Box Components | 1 | 203390500640 | | |
| 9.1 | 三位接线座 (RoHS) | Wire joint, 3p | 1 | 202301400215 | | |
| 10 | 接线盒盖 (RoHS) | Junction box cover | 1 | 201290590204 | | |
| 11 | 蒸发器部件 (RoHS) | Evaporator ass'y | 1 | 201590500640 | | |
| 11.1 | 蒸发器组件 (RoHS) (亲水/1 | Evaporator ass'y | 1 | 201590500624 | | |
| 11.2 | 蒸发器输入管组件 (RoHS) | Evaporator input pipe ass'y | 1 | 201690502697 | | |
| 11.3 | 蒸发器输出管组件 (RoHS) | Evaporator output pipe ass'y | 1 | 201690502690 | | |
| 12 | 过滤网导槽 (RoHS) | Trough | 1 | 201290501336 | | |
| 13 | 过滤网 (RoHS) | Filter | 1 | 201190500255 | | |
| 14 | 电控盒组件 (RoHS) | Electronic Control Box Components | 1 | 203390590077 | | |
| 14.1 | 压缩机电容 (Φ45, RoHS) | Compressor capacitor | 1 | 202401000410 | | |
| 14.2 | 主控板组件 (RoHS) | Main control board assembly | 1 | 201390590040 | | |
| 14.3 | 继电器 (RoHS) | Relay | 2 | 202300800003 | | |
| 14.4 | 电容 (RoHS) | Motor capacitor | 1 | 202401190047 | | |
| 14.5 | 电源变压器 (RoHS) | Transformer | 1 | 202300900162 | | |
| 14.6 | 电辅热控制板组件 (RoHS) | Control board ass'y | 1 | 201340110658 | | |
| 14.7 | 接线座 (RoHS) | Wire joint | 2 | 202301450122 | | |
| 15 | 电控板挡片 (RoHS) | Block piece | 1 | 201190500256 | | |
| 16 | 显示屏面板 (RoHS) | Display panel | 1 | 201190590002 | | |
| 17 | 上前罩 (S3090, RoHS) | The front cover | 1 | 201190500333 | | |
| 18 | 电控盒盖焊合件 (RoHS) | E-Part box cover board | 1 | 201290501474 | | |
| 19 | 电控盒支撑板 (RoHS) | Electronic control box support plate | 1 | 201290501482 | | |
| 20 | 前装饰板 (S3090, RoHS) | Front decorative board | 1 | 201190590003 | | |
| 21 | 水箱发泡组件 (SB3066, RoHS) | Tank foam components | 1 | 201290590205 | | |
| 21.1 | 温度传感器T2 | Temp. sensor T2 | 1 | 202301300467 | | |
| 21.2 | 温控器 (RoHS) (UL) | Temp sensor | 1 | 202301610028 | | |
| 21.3 | 温控器固定片B | Stator of temp. sensor | 1 | 201290590034 | | |
| 21.4 | 温控器 (RoHS) | Thermometer | 1 | 202301600046 | | |
| 21.5 | 水用电加热管 (RoHS) | Electric heater pipe | 1 | 202403101002 | | |
| 21.6 | 电加热发泡挡板 (RoHS) | Electric heating foam baffle | 1 | 201190500336 | | |
| 21.7 | 水箱外壳 (SB3066, RoHS) | Tank shell | 1 | 201290501480 | | |
| 21.8 | 水箱底盖 (SB3065, RoHS) | Tank bottom | 1 | 201290501374 | | |
| 21.9 | 塑料底脚 | Plastic foot | 3 | 201190500293 | | |
| 21.10 | 出水管 (RoHS) | Water inlet pipe | 1 | 201290590005 | | |
| 21.11 | PT阀装饰圈B (RoHS) | PT velve loop | 2 | 201190500274 | | |
| 21.12 | 水箱提手 (S3089, RoHS) | Water tank handle | 2 | 201156100025 | | |
| 21.13 | 排污阀 (RoHS) | Dirt discharge Valve | 1 | 201601690002 | | |
| 21.14 | 进水管 (RoHS) | Water-Inlet Pipe | 1 | 201690502695 | | |
| 21.15 | 温度压力安全阀 (RoHS) | Temperature and pressure relief valve | 1 | 201601601206 | | |
| 21.16 | 镁棒 (RoHS) | Magnesium club | 1 | 202990500000 | | |
| 21.17 | 上盖 | Cover | 1 | 201190500334 | | |
| 22 | 上加热器盖 (SB3066, RoHS) | Electric heater cover | 2 | 201290501186 | | |
| 23 | 磁铁片 (RoHS) | Magnet clip | 2 | 201290501166 | | |
| 24 | 磁铁盖 (RoHS) | Magnet cover | 1 | 201290501165 | | |
| 25 | 压缩机排气管组件 (RoHS) | Discharge pipe ass'y | 1 | 201690502684 | | |
| 26 | 干燥过滤器 (RoHS) | Strainer | 1 | 201600900120 | | |
| 27 | 过滤器接管组件 (RoHS) | Filter receiver components | 1 | 201690502692 | | |
| 28 | 压缩机回气管组件 (RoHS) | Suction pipe ass'y | 1 | 201690502686 | | |
| 28.1 | 表接头 (RoHS) | Pipe joint | 1 | 201601200002 | | |
| 29 | 热力膨胀阀组件 (RoHS) | Expansion valve ass'y | 1 | 201690502680 | | |
| 29.1 | 热力膨胀阀 (RoHS) | Expansion valve | 1 | 201601320039 | | |
| 29.2 | 单通电磁阀 (三花, RoHS) | Solenoid valve | 1 | 201600600094 | | |
| 29.3 | 单通电磁阀线圈 (带螺钉, RoHS) | Solenoid valve winding | 1 | 201600601505 | | |
| 30 | 压缩机 (美芝) | Compressor | 1 | 201400603000 | | |
| 31 | 感温套防水盖 (RoHS) | Waterproof cover | 1 | 201190500268 | | |
| 32 | 进水单向阀 (RoHS) | Water inlet check valve | 1 | 201690590116 | | |
| 33 | Y型过滤器 (RoHS) | Y type filter | 1 | 201600900724 | | |
| 34 | 排气温度传感器组件 (RoHS) | Discharge temp sensor ass'y | 1 | 202301300131 | | |
| 35 | 室温传感器组件 (RoHS) | Room temp sensor ass'y | 1 | 202301300196 | | |
| 36 | 管温传感器组件 (RoHS) | Temp.sensor ass'y | 1 | 202301300436 | | |
| 37 | 冷凝水排水管 (RoHS) | Drain pipe | 1 | 201190500254 | | |

Part 3

Installation

| | |
|--|----|
| 1. Precautions | 22 |
| 2. Installation information | 23 |
| 3. Unit Appearance and Composition | 24 |
| 4. Accessories..... | 25 |
| 5. Inspecting and Handling the Unit..... | 25 |
| 6. Electric Wiring..... | 25 |
| 7. System diagram | 25 |

1. Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring of instructions may cause harm or damage.

The safety precautions listed here are divided into two categories. In either case, important safety instructions are listed to which close attention must be paid.

WARNING

Failure to observe a warning may result in death.

CAUTION

Failure to observe a caution may result in injury or damage to the equipment.

WARNING

- The water heating unit must be earthed effectively.
- A creepage breaker must be installed near the power supply.
- Ask your supplier for installation of the air source heat pump water heating units. Incomplete installation performed by yourself may result in water leakage, electric shock, or fire.
- Ask your supplier for the repair and maintenance. Incomplete repair and maintenance may result in water leakage, electric shock or fire.
- In order to avoid electric shock, fire or injury, if any abnormality is detected, such as smell of fire, turn off the power supply and call your supplier for instructions.
- Never replace a fuse with that of wrong rated current or other wires when a fuse blows out. Use of wrong wire or copper wire may cause the unit to break down or a fire.
- Do not insert fingers, rods or other objects into the air inlet or outlet. When the fan is rotating at high speed, it will cause injury.
- Never use a flammable spray such as hair spray, lacquer paint near the unit. It may cause a fire.
- Never touch the air outlet or the horizontal blades while the swing flap is in operation. Fingers may become caught or the unit may break down.
- Never put any objects into the air inlet or outlet. Objects touching the fan of high speed can be dangerous.
- Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- The appliance shall be installed in accordance with national wiring regulations.

CAUTION

- The ground pole of socket must be grounded, and the rated current should be more than 10A. Make sure that socket and attaching plug are dry always and have a good connection.
Method: Turn on power supply, run the unit for half a hour, then turn it off and check if the attaching plug is hard. If it's hard (more than 50°C), please change it with a new and eligible one, or it may result in an electric shock or fire.
- Do not use the air-source water heater for other purposes.
- Before cleaning, be sure to stop the operation and turn the breaker off or pull out the power cord. Otherwise, an electric shock and injury may be caused.
- In order to avoid injury, do not remove the fan guard on the outdoor unit.
- Do not operate the air-source water heater with a wet hand. An electric shock may be caused.
- In the place and the wall where water may be spattered, the installation height must be more than 1.8m.
- At the water inlet, the One Way valve must be installed.

- It's normal if some water drips from the hole of PT valve in operation. But, if the water is in a great amount, call your supplier for instructions.
- After a long use, check the unit stand and fittings. If damaged, the unit may fall and result in injury.
- Arrange the drain hose to ensure smooth drainpipe. Incomplete drainpipe may cause wetting of the building, furniture etc.
- Never touch the internal parts of the controller.
- Do not remove the front panel. Some parts inside are dangerous to touch, and a machine malfunction may be caused.
- Never expose babies, plants or animals directly to the air flow. Adverse influence to babies, animals and plants may be resulted.

2. Installation information

- Enough space is installation and maintenance shall be preserved.
- The air inlet and outlet should be free from obstacles and strong wind.
- The bearing surface should be flat, able to bear weight of the unit and suitable for installing the unit horizontally without increasing noise or vibration.
- The operation noise and air flow expelled shall not affect neighbors.
- No flammable gas is leaked nearby.
- It is convenient for piping and wiring.

CAUTION

- Installing the equipment in any of the following places may lead to malfunction of the equipment (if it is inevitable, consult the supplier):
 - 1) The site contains mineral oils such as cutting lubricant.
 - 2) Seaside where the air contains much salt.
 - 3) Hot spring area where corrosive gases exist, e.g., sulfide gas.
 - 4) Factories where the power voltage fluctuates seriously.
 - 5) Inside a car or cabin.
 - 6) Place like kitchen where oil permeates.
 - 7) Place where strong electromagnetic waves exist.
 - 8) Place where flammable gases or materials exist.
 - 9) Place where acid or alkali gases evaporate.
 - 10) Other special environments.
- Precautions before installation
 - 1) Decide the correct way of conveying the equipment.
 - 2) Try to transport this equipment with the original package.
 - 3) If the unit has to be installed on a metal part of the building, electric insulation must be installed, and the installation must meet the relevant technical standards for electric devices.
- Installation space


Before installing the unit, reserve the space of maintenance .

WARNING

- Ask your supplier to install the air source heat pump water heating units. Incomplete installation performed by yourself may result in a water leakage, electric shock, or fire.
- The place without direct sunlight and other heat supplies. If there's no way to avoid these, please install a covering.



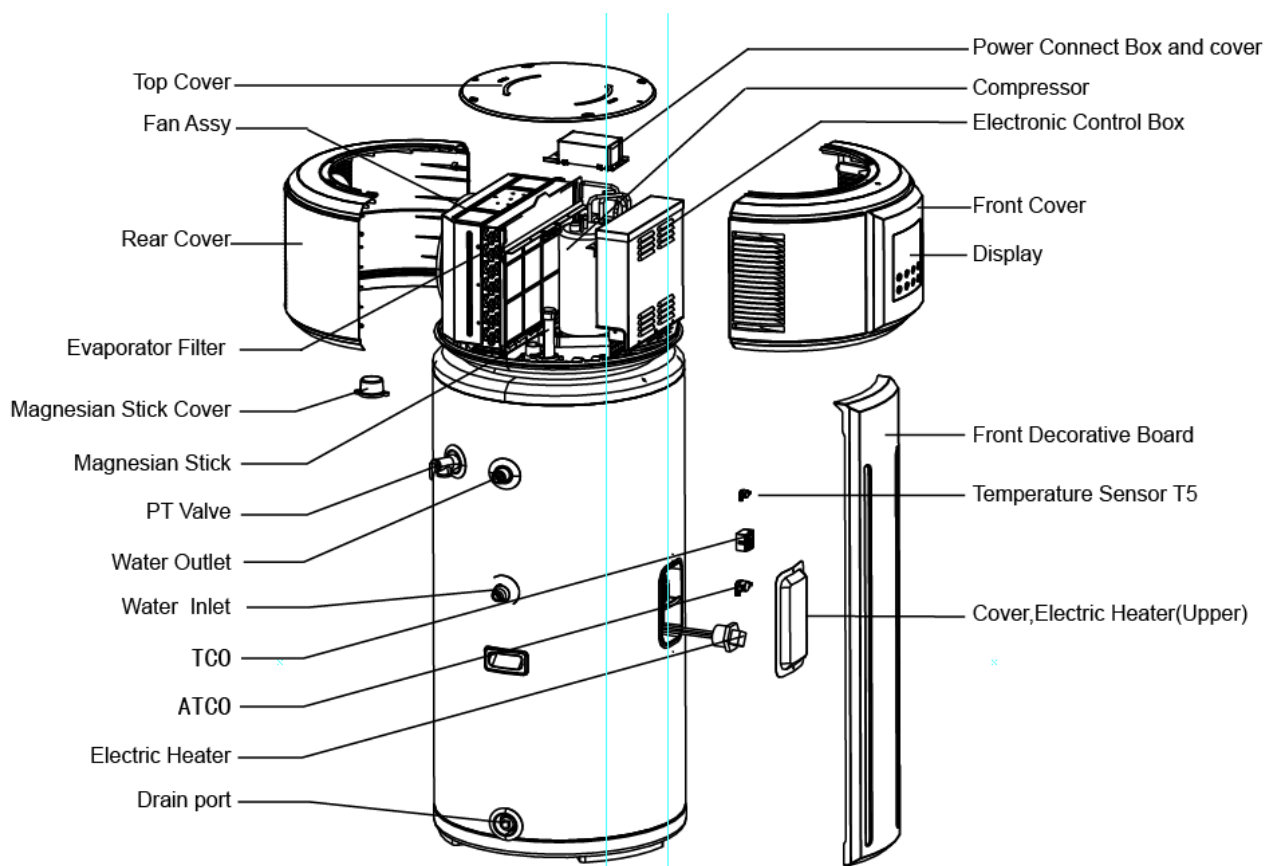

- The unit must be securely fixed, or else, noise and shaking will be resulted.
 - Make sure that there's no remora around the unit.
 - In the place where there is strong wind like seashore, fix the unit in the location protected from the wind.
 - Carry the unit onto the site
- 1) In order to avoid scratch or deformation of the unit surface, apply guard boards to the contacting surface.
 - 2) No contact of fingers and other things with the vanes.
 - 3) Don't incline the unit more than 45° in moving, and keep it vertical when installing.
- Install the unit.
- 1) The circulating air for every unit should be more than 700m³/h.
 - 2) Make sure there is enough Installation space.
 - 3) Outline dimensional drawing

3. Unit Appearance and Composition



4. Accessories



Check whether the following assemblies are complete.

| Accessory name | Qty. | Shape | Purpose |
|-----------------------------------|------|---|----------------------------------|
| Installation & Owner's Manual | 1 |  | Installation and use instruction |
| Drain pipe for water condensation | 1 |  | Discharge condensated water |
| One Way valve | 1 |  | Prevent water from flowing back |
| Y-shaped Filter | 1 |  | To filtrate inlet water |

5. Inspecting and Handling the Unit

After delivery, the package should be checked and any damage should be reported immediately to the carrier claims agent.

When handling the unit, take into account the following:

1.  Fragile, handle the unit with care.
2.  Keep the unit upright in order to avoid compressor damage.
3. Choose before hand the path along which the unit is to be brought in.
4. Move this unit with original package.
5. When lifting the unit , always use protectors to prevent belt damage and pay attention to the balance of the unit's gravity.

6. Electric Wiring

6.1 Attention


- The water heater should powered separately and the power voltage should be in line with rated voltage..
- The power supply circuit of the water heater should be earthed, the power cord should be connected with the external earthing line in reliable state and all the external earthing cables are effective.
- The construction of the wiring should be carried out by professionals in accordance with the circuit diagram.
- Set up leakage protection devices in accordance with the requirements of the relevant national technical standards.
- The power cord and the signal line should be laid neatly without cross-interfere and should not contact with the connecting pipe and the valves.
- The unit is not equipped with power cord. Please refer to the prescribed power specification for selecting the power cord and cross-connection between two lines are not allowed.
- Check whether all the connections are correct before powering the unit.

6.2 Power specification

| Model \ Item | Power Supply | Diameter of the thinnest cable (mm ²) (Metal pipe and synthetic resin pipe wiring) | | Manual Switch (A) | | Leakage Protector |
|---------------------|-------------------|---|---------------|-------------------|------|-------------------|
| | | Dimension | Earthing Wire | Capacity | Fuse | |
| CE-RSJ-15/150RDN3-C | 220~240V-1ph-50Hz | Length≤5m, 1.0/3-core Length > 5m, 1.5/3-core | 1.0 | 10 | 10 | < 30 mA 0.1sec |
| CE-RSJ-15/190RDN3-C | 220~240V-1ph-50Hz | Length≤5m, 1.5/3-core Length > 5m, 2.1/3-core | 1.5 | 15 | 10 | < 30 mA 0.1sec |

6.3 Power Supply Wiring .

A. Power Supply Schematic Diagram

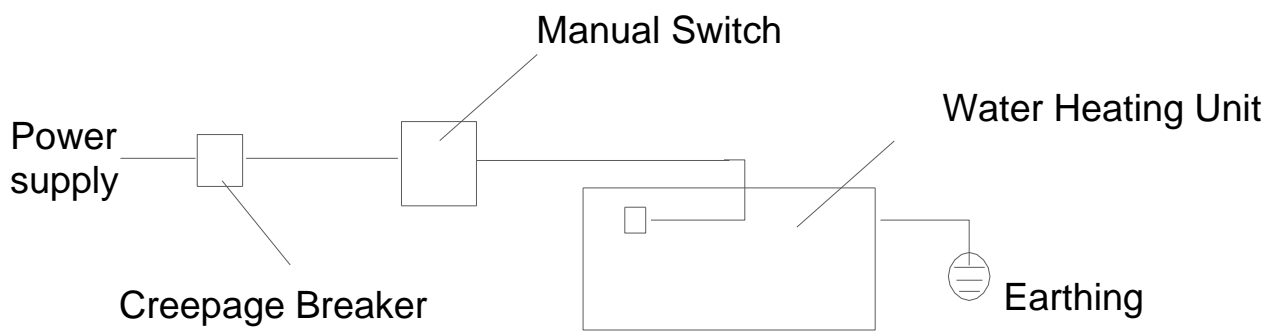

Warning:

Although there is a leakage protector in the electric control box of the unit, for the security reason, it is required that a leakage protection equipped cable and Earthing should be applied for the unit according to the requirement on the above diagram.

B. Cable Diameter Selection

The power supply wiring refers to the wiring to the main line (a) of junction box and the wiring (b) to the power supply equipment. Please select the cable diameter according to the following methods


1) Diameter of the main line (a):

Get from the power supply specification table according to the sum of horsepower of the unit.

2) Diameter of the wiring from the junction box to the power supply equipment:

When the water heaters are less than 5 sets, the diameter the wiring from the junction box to the power supply equipment should be the same as the main line (a); when the water heaters are more than 6 sets, the power supply equipment should have two sets of electric control box and the diameter should be get from the power supply specification table according to the sum of horsepower of the units connected by the electric control box.

7. System diagram .

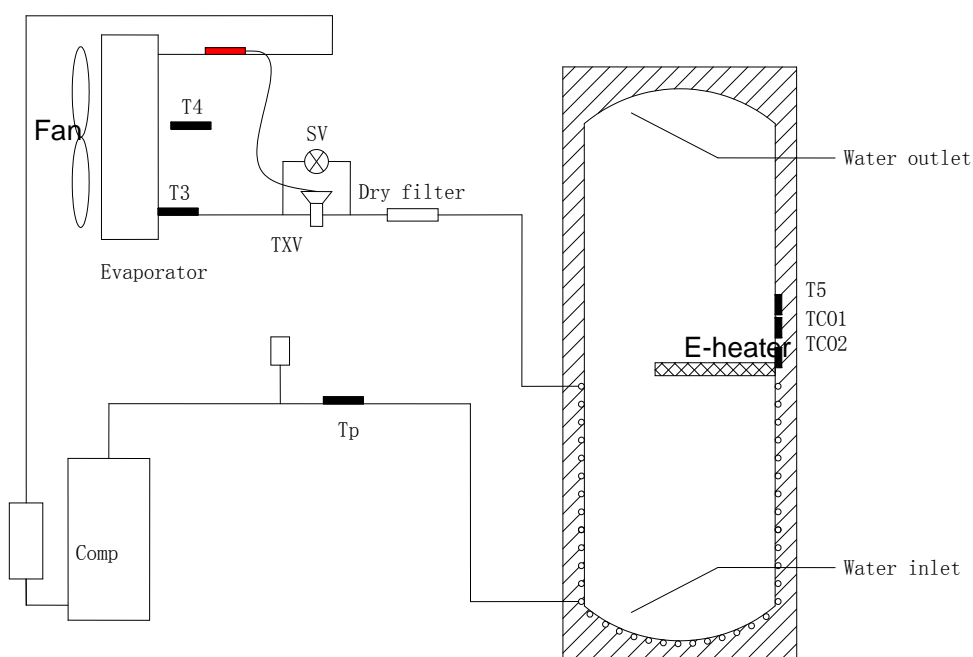

Part 4

Trial Operation

| | |
|--|-----------|
| 1. Confirmation Before the Trial Operation..... | 28 |
| 2. Operating Instruction | 28 |
| 3. Maintenance | 41 |
| 4. Malfunctions and Resolutions..... | 43 |

1. Confirmation Before the Trial Operation


- 1.1 All the installation is complete.
- 1.2 Water heater is installed correctly.
- 1.3 The pipelines and wiring are correct.
- 1.4 The accessories are installed correctly.
- 1.5 The drainage is smooth.
- 1.6 The thermal insulation is sound.
- 1.7 The earthing wire is connected correctly.
- 1.8 The power voltage is consistent with the rated voltage of the heater.
- 1.9 No obstacle at the air inlet and outlet of the unit.
- 1.10 The leakage protector can work effectively.

2. Operating Instruction

2.1 Instruction


2.1.1 Before using this unit, please follow the steps below.

Water Affusion: If the unit is used for the first time or used again after emptying the tank, please make sure that the tank is full of water before turning on the power. Method: see figure 2.1.1

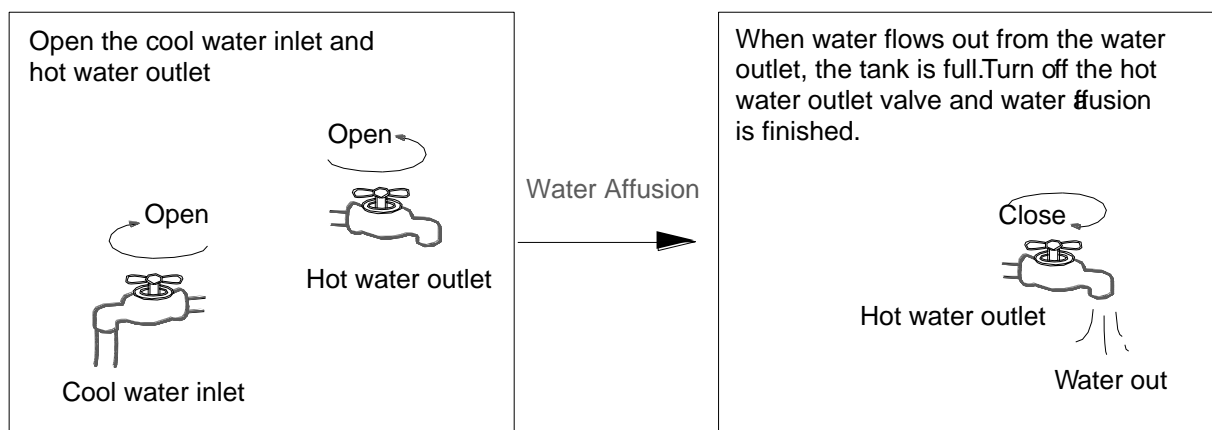


NOTE:


1. The Ball Valve at water inlet should be open when the unit is in operation.
2. Operation without water in water tank may result in damage of auxiliary e-heater. Due to such damage, the supplier is not responsible for the quality issue.

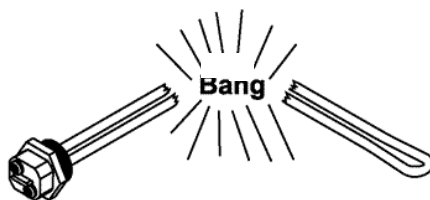

3. Over 50°C may result in serious burn or so caused death. Special care should be paid to the children, the disabled and the old in case of water burn.

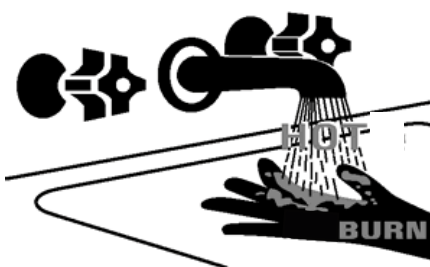


2.1.2 After powered on, the display lights up. Users can operate the unit through the buttons under the display for different modes. Emptying: If the unit needs cleaning, moving etc, the tank should be emptied. Method: See Figure 2.1.2

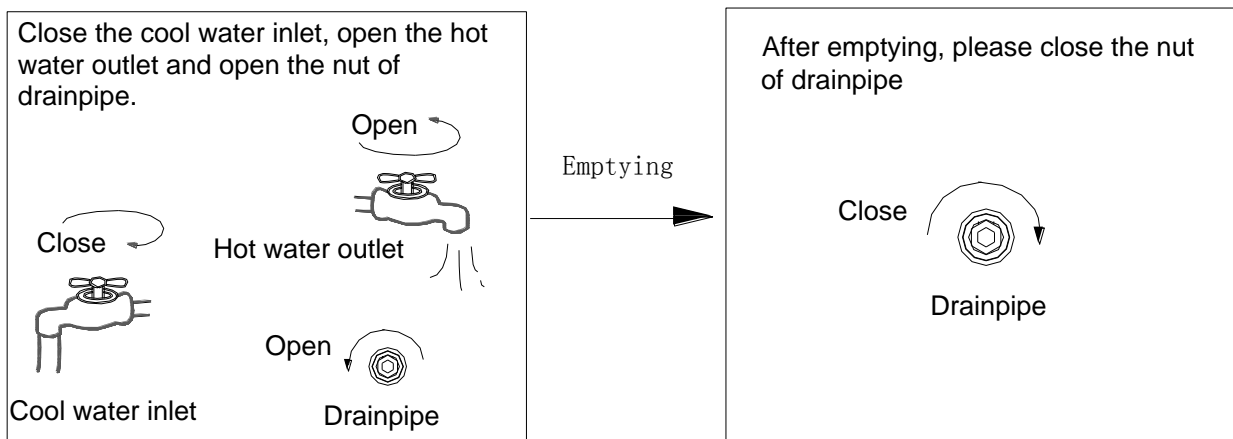


NOTE: The outlet water temp. may be very high when emptying, beware of your body for burns.

2.2 Operation

2.2.1 Control Panel Explanation

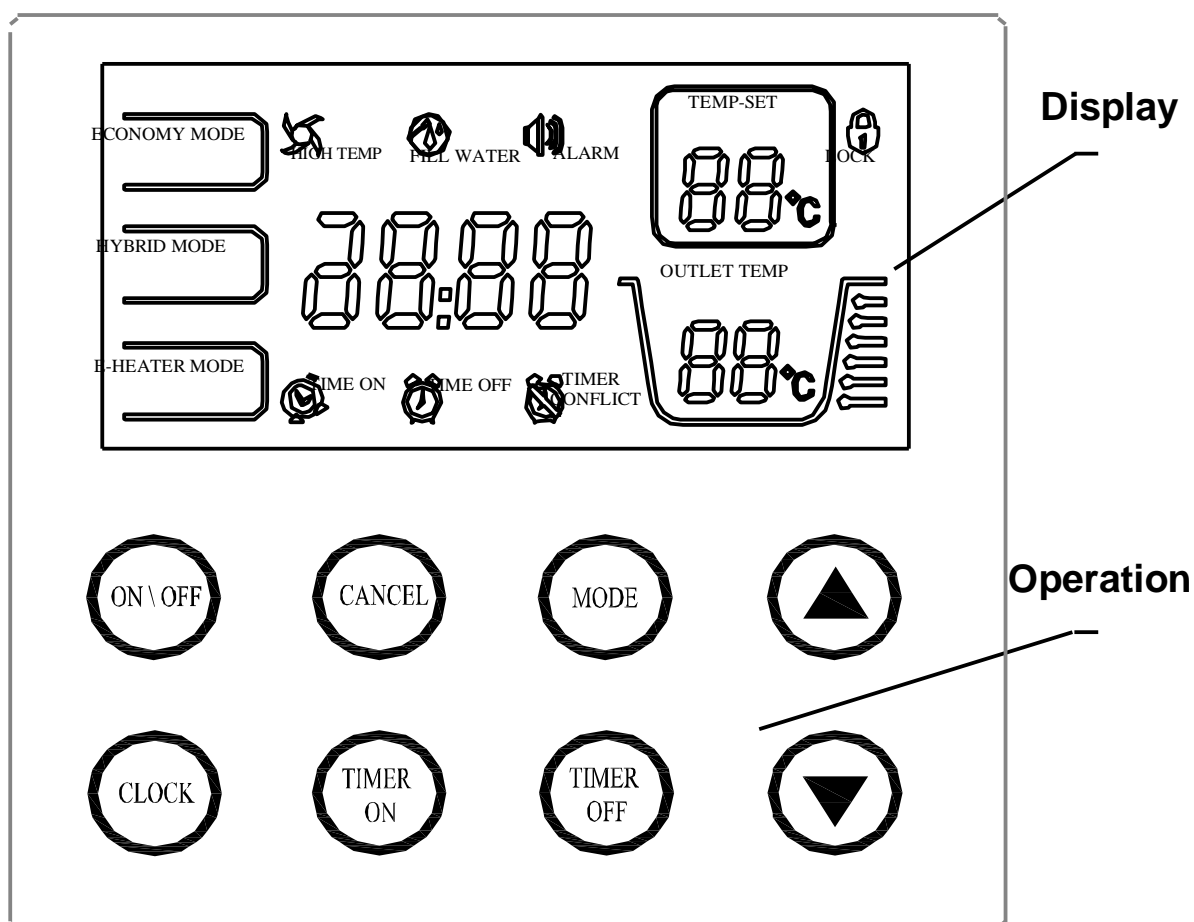


2.2.2 Display Explanation

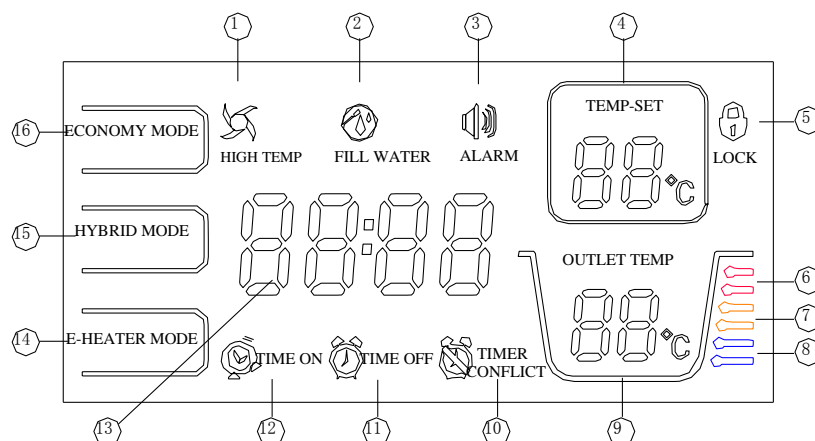

| Number | Explanation | Number | Explanation |
|--------|--|--------|--|
| 1 | HIGH TEMP indicator. When the setting temp. exceeds 50°C, it lights up to remind you that the outlet temp. is too high for direct spray. | 9 | OUTLET TEMP indicator. It displays water temp. of the upper part of the tank, which can be used. It always lights. |
| 2 | FILL WATER indicator. When the power supply is turned on, it lights up to remind you to re-affuse water. | 10 | TIMER CONFLICT indicator. When the timing you set through Wired Controller conflicts with that through User Interface, it lights up. |
| 3 | ALARM indicator: It will flashing at the malfunction or protection time. | 11 | TIME OFF indicator: It will light up when timing off mode is set, blanks when screen protection . |
| 4 | TEMP-SET indicator: Show the setting temperature and blank when screen protection. Codes are show at the malfunction or protection time | 12 | TIME ON indicator: It will light up when timing on mode is set, blanks when screen protection. |
| 5 | LOCK indicator. When the UI is locked, it always lights. | 13 | CLOCK indicator. It displays present time, it will blanks when screen protection |
| 6 | Water temp. indicator. When the actual water temp. exceeds 60°C, it lights up. | 14 | E-HEATER MODE indicator. When user sets the E-heating Mode, it lights up. |
| 7 | Water temp. indicator. When the actual water temp.exceeds 50°C, it lights up. | 15 | HYBRID MODE indicator. When user sets the Hybrid Mode, it lights up. |
| 8 | Water temp. indicator. When the actual water temp. exceeds 40°C it lights up. | 16 | ECONOMY MODE indicator. When user set the Economy Mode, it lights up. |

2.2.3 Operation

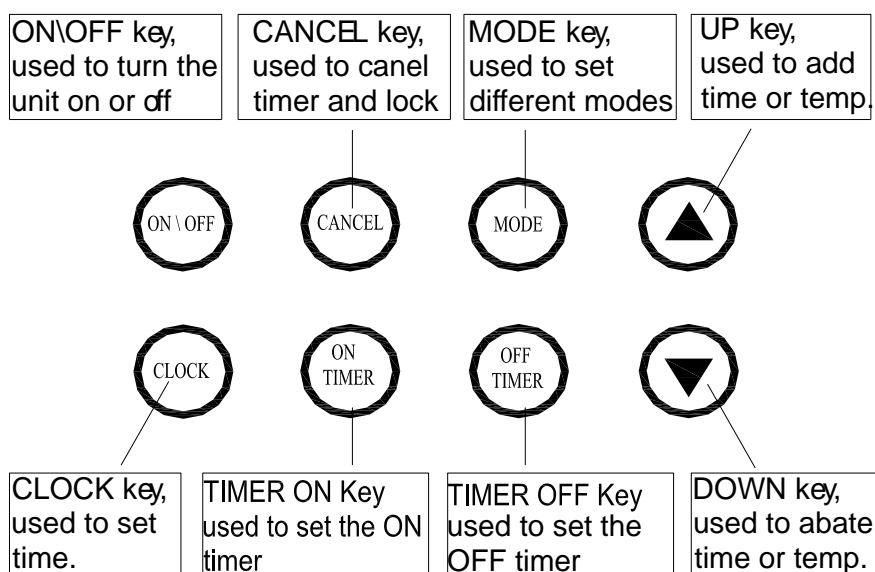


2.2.4 Operation Instruction

2.2.4.1 Preparation before running the unit.

- a) When you run the unit for the first time, all the indicators on the UI will light for 3 second, and the buzzer will “didi” ring twice at the same time, and then, display the fiducially web page. After no operation for 1 minute, all indicators will go out automatically except Water fill indicator flashing and Clock indicator lighting. Buzzer will “di” ring when you press it.
- b) When the tank is full, please press the ON\OFF key, the Water fill indicator will stop flashing and you can continue to function other settings. When all settings finished, please press the ON\OFF key again and the Water fill indicator will go out. And then run the unit.
- c) When the unit is running, if there is no operation or malfunction for 20s, the backlight of the display will go out automatically except Clock indicator and Water fill indicator. If there no operation for 1min, the unit will lock automatically, but the lock indirator would be right all time.


2.2.4.2 Lock and Unlock

In order to prevent wrong operation, a special lock function has been designed. If there is no operation for 1min, the unit will be locked automatically, and display the lock sign (Lock indicator lights up).When the unit is locked, no keys can be operated.

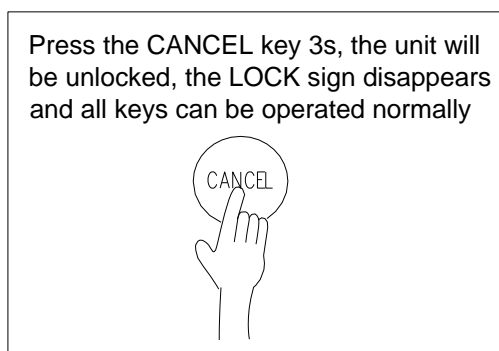

2.2.4.3 Clock Setting

The clock is for a 24-hour system and the initial time is 00:00. To make a better use of this unit, it is recommended to set the time for accurate local time. Every time powered off, the clock will be reset to the initial time 00:00. Method for time set

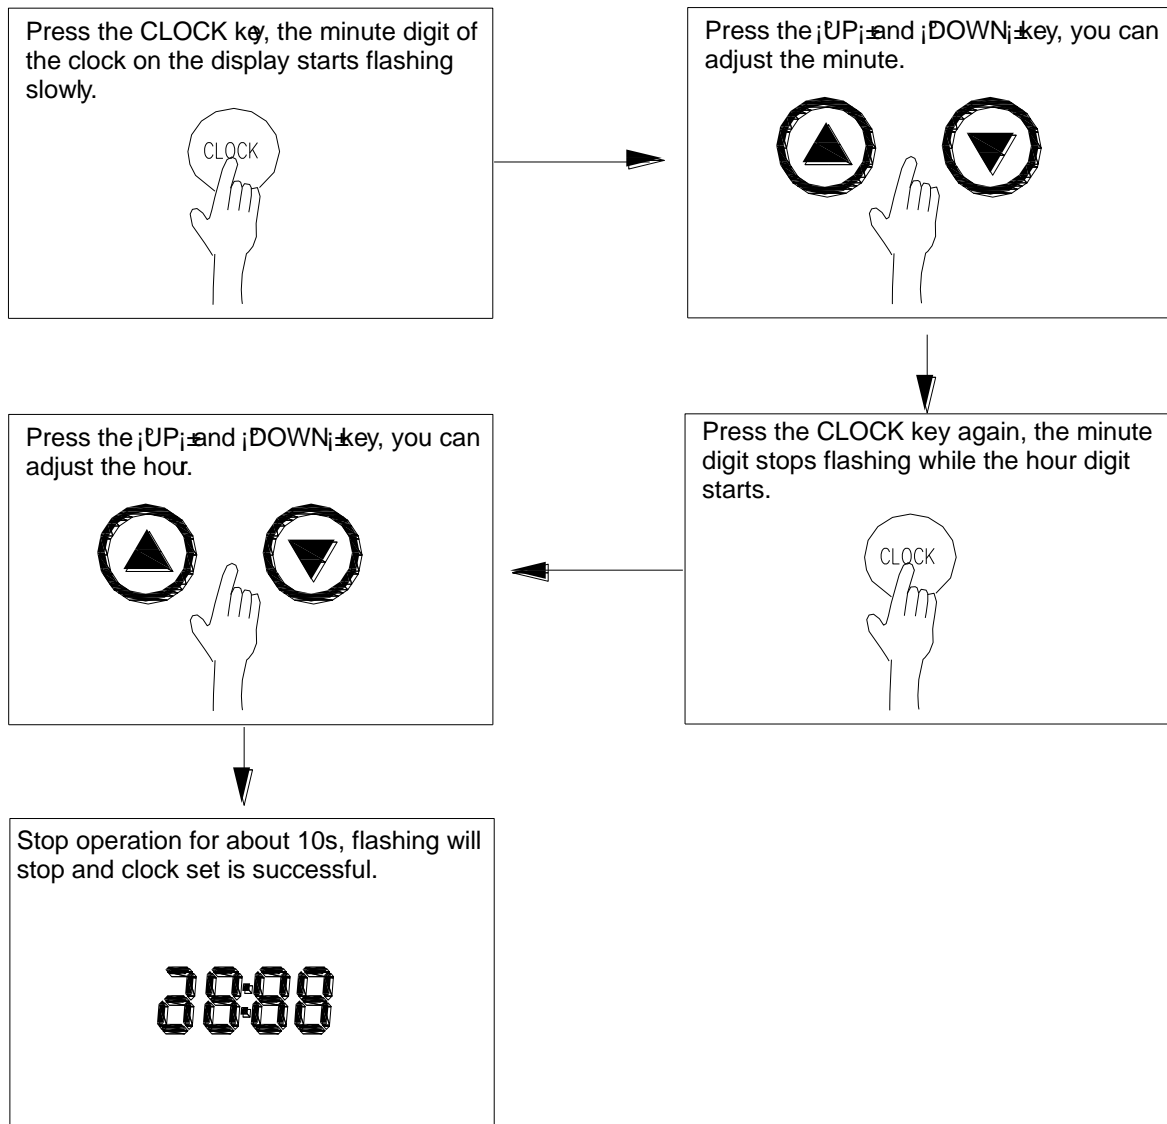

2.2.4.4 Mode Selection

- a) The unit is enhanced with three operation modes, Economy Mode, Hybrid Mode and E-heater Mode.
- b) Economy Mode: The unit heats water only by compressor drive according to heat-pump principle. Used when the ambient temp. is high.
- c) Hybrid Mode: The unit heats water not only by compressor drive but also by electric heater. Used when the ambient temp. is low or large amount of hot water is needed.
- d) E-heater Mode: The unit heats water only by electric heater. Used when the ambient temp. is very low.
- e) By default, the unit operates in Hybrid Mode.

Mode change:

Press the MODE key, operation mode will be shifted among the three modes in a cycle, meanwhile the corresponding indicator on the display will light up.




2.2.4.5 Temperature Setting


Temp displayed is the water temp. in the upper part of the tank. Default is 65°C and the setting range is 38~70°C.

Method for set.

Press the "UP" and "DOWN" key, you can increase and decrease the water temp setting.

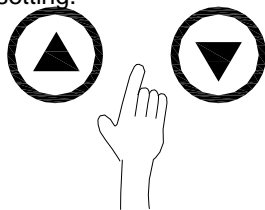


When the setting temp is higher than 60°C the Temp Operation High indicator will light

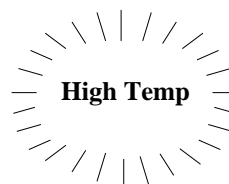


2.2.4.6 TIMER

User can set up a running start time and a stop time on a specifically by the timer function. The least numbers of timer is ten minutes. Time on: User can set up a start time by this. The unit will auto run one time between the set time and 24:00 on the same day.

Method for set.

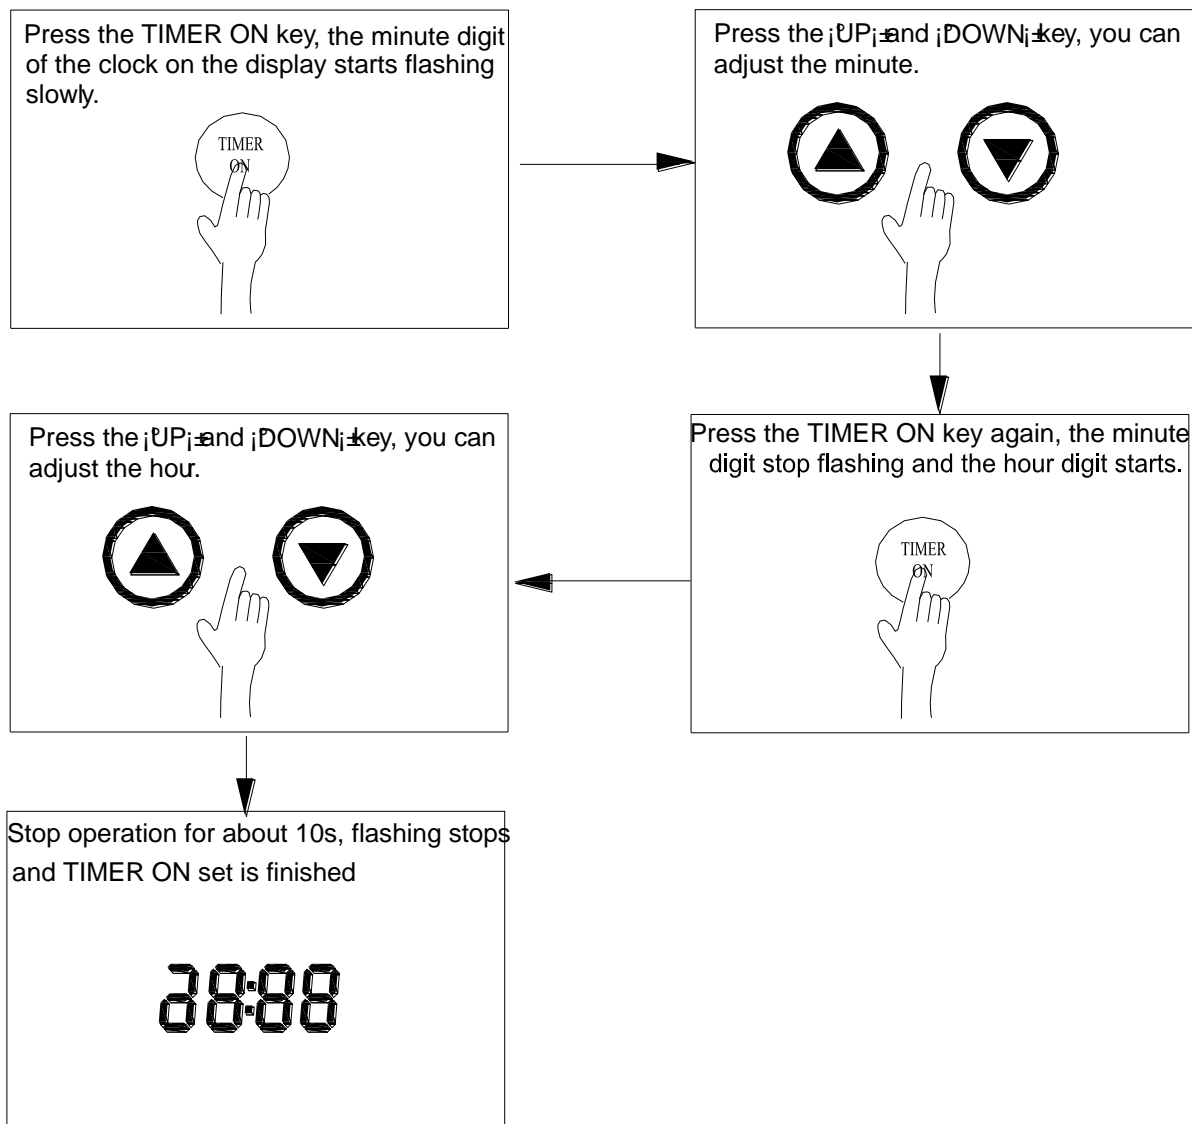


CANCEL:

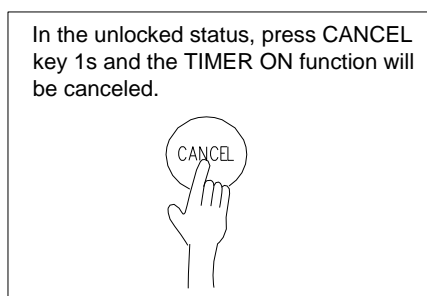

2.2.4.7 TIMER ON and TIMER OFF: Users can set up a running start time and a stop time. When the start time is earlier than the stop time, the unit will run between the set time. When the start time is later than the stop time, the unit will run between the start time today and the stop time next day.

Method for set.

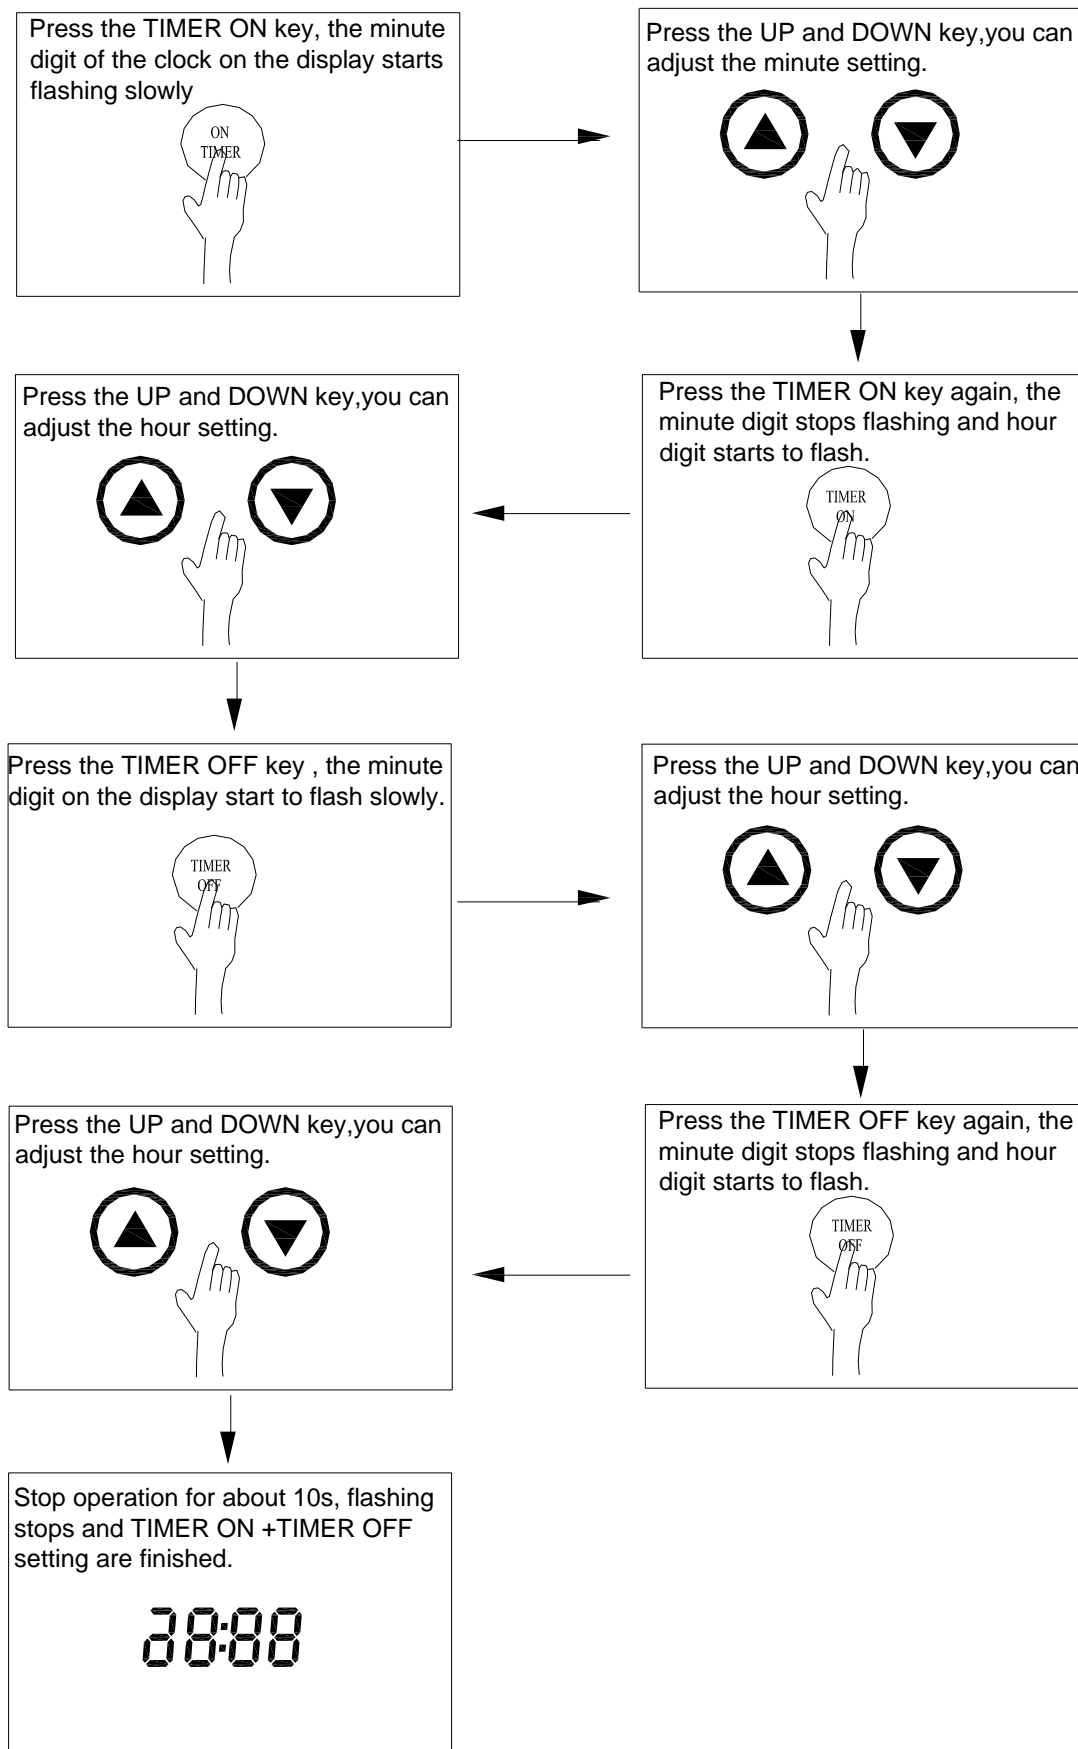

CANCEL:

In the unlocked status, press the CANCEL key for 1s, the TIMER ON and TIMER OFF function will be canceled.

**NOTE:**


- 1) TIMER ON and TIMER OFF can not be set to the same time. If they are the same, the stop time will delay 10 minutes automatically. For example, Time on and Time off set to 1:00 at the same time, then the stop time will adjust to 1:10 automatically.
- 2) TIMER OFF function can not be used alone. The key can be used only after setting the on time.

2.2.4.8 Power On and Power Off

Press Power On/Power Off button after all the above have finished and the system will run as the setting. And simply press the same button to stop it.

**2.2.4.9 Operation status**

The LA code from the screen of set Temp. will appear and remind user when ambience temp. not meet the operation condition of heat pump unit (beyond 5~43°C). User can switch the economy mode to E-heating mode in sure of enough volume of hot water if need. The unit will return operation pre-status automatically in no any operation when the ambience temp. meet the operation condition of heat pump mode and the error LA will be disappeared at the same time, the screen display normally.

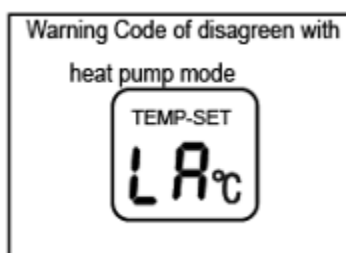**2.2.4.10 Error Shooting**

If some errors happen, the buzzer will buzz 3 times every other minute and the error indicator will glitter fast. Press CANCEL for several seconds to stop the buzzer but the light will keep glittering.

The light will flash with Alarm



Press CANCEL key to stop the buzzer.



The system will display the error code and the water temperature alternatively on the display in error.

The water temperature and error code will display alternatively



When error happens, though the system could be used in some circumstances, it could not reach the expected efficiency. Please contact your supplier for help. Error Code Explanation (See table below table)

| Display | Malfunction Description | Display | Malfunction Description |
|---------|--|---------|--|
| E0 | Error of sensor T5 | P0 | Protection of (T3) Condenser output pipe temperature too low (T3<-5°C, activated, compressor stop; T3≥10°C, inactivated) |
| E2 | Tank and Wired Controller communication error | P2 | High discharge temp. protection Tp>115°C, Protection active Tp<90°C, Protection inactive |
| E4 | (T3) Condenser output pipe temperature sensor error | P4 | Compressor overloaded protection (I>7A) |
| E5 | (T4) Outdoor ambient temperature sensor error | LA | When the ambient temp is out of Heat Pump running zone [5~43°C],Heat Pump will stop ,then LA protection code will appear, and ALARM indicator flashes if the condition maintain more than 20hr, Need to switch to Enhanced heating Mode. |
| E6 | (Tp) Comp. discharge Sensor error | | |
| E7 | Heat Pump system error If any of P3/P4/P2/P0 continuously appear 3 times within single heating cycle, system will consider it as "Heat Pump system error" | | |
| E8 | Electric leakage error If PCB current_induction_circuit check the current difference between L,N >14mA, system consider it as" electric leakage error" | | |
| E9 | No current on electric heating element | | |

| Display | Malfunction Description | probable reason |
|---------|--|---|
| P0 | Protection of (T3) Condenser output pipe temperature too low | heat exchanging is not sufficiently 1.the outlet air port for evaporator is blocked; 2.the fan breakdowns; 3.the evaporat fin is filled in contamination. |
| | (T3<-5℃, activated, compressor stop; T3≥10℃, inactivated) | |
| P2 | High discharge temp. protection | 1.refrigerant reduces and no refrigerant is left as some pipe leaks ; 2.system refrigerant flowing is blocked; a.the invalid filter results in more water in system and pipes are blocked by ice; b.the substance in the filter degenerates and filter is blocked c.the refrigerant system is blocked by contamination; d.the expansion valve is blocked by ice; e.the expansion valve breakdowns. F.the sensor of expansion valve leaks 3.the temp. sensor can't work well resulting in the detective value is bigger than the real value. |
| | Tp>115℃, Protection active | |
| | Tp<90℃, Protection inactive | |
| | | |
| P4 | Compressor overloaded protection (I>7A) | 1.the time when compressor running current is more than 7A lasts more than 2s; 2.the compressor running current is more than 9.5A. |

2.3 Running and Operating

2.3.1 Trial Running

- 1) Before running, please check the following items first:
- 2) Correct installation of the system;
- 3) Correct connection of pipeline and wiring;
- 4) Leakage of the refrigerant pipeline tested;
- 5) Efficient drainpipe;
- 6) Complete insulation protection;
- 7) Correct earthing;
- 8) Correct power supply;
- 9) No obstacle outside the air inlet and outlet;
- 10) No air in the water pipeline and all valve opened;
- 11) Effective electric leakage protector;
- 12) Sufficient inlet water pressure(≥0.15MPa)

2.3.2 Operating


1 Water-heating Operation

- a) The system is enhanced with 3 modes:

Economy Mode, Hybrid Mode and E-heater Mode. Each has its own working characteristics.


- b) Economy Mode:

In this mode, the system will adjust the speed of fan motor automatically in a warm circumstance, and if it is higher than 43℃, it will enter the Enhanced-heating Mode automatically. In a cool circumstance, the system will defrost automatically, and if it is lower than 5℃, it will enter the E-heater Mode automatically.

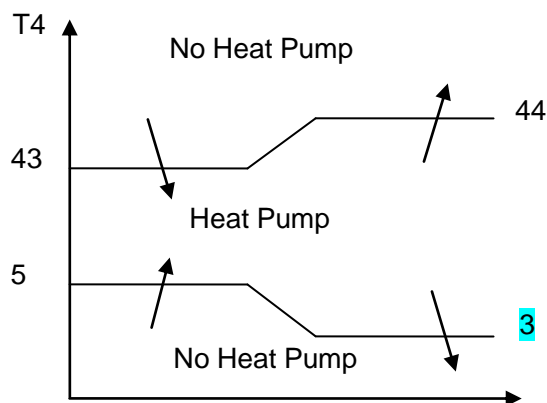

c) Hybrid Mode:

In this mode, the system will adjust the working capabilities of e-heater and heat pump according to the ambient Temp(T_4) and tank Water Temp(T_{5L} , T_{5U}).

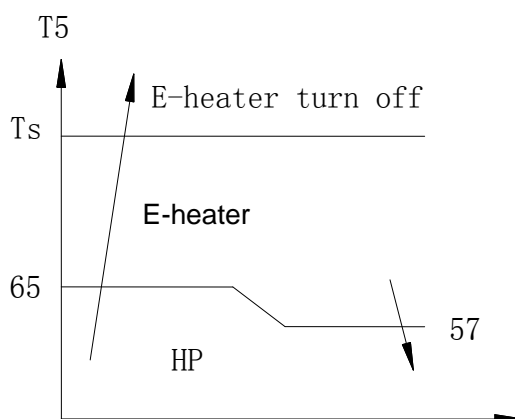


d) E-heater Mode:

In this mode, the compressor and the fan motor will not run but the e-heater work only.

Both e-heaters won't work together, the priority: $UE > LE$

2 Defrosting during Water-heating

- Economy Mode, Hybrid Mode, if the heat exchanger defrosts in a cold circumstance, the system will defrost automatically to keep effective performance(3~10 min).
- In defrosting fan motor will run at a high speed and e-heater will be started.

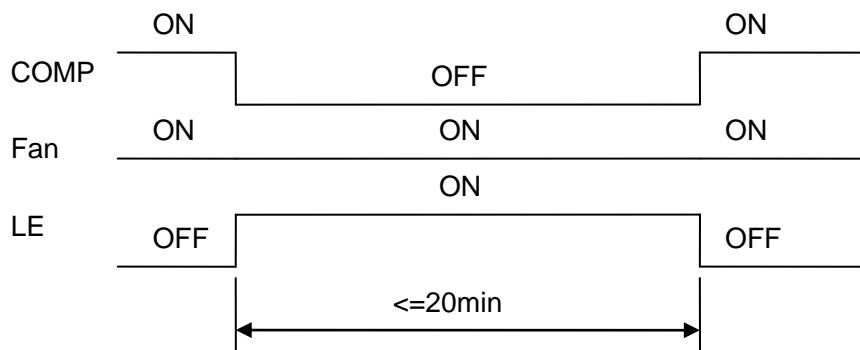

3 Ambient Temperature

- The system's operation temperature is within $-30\sim 43^\circ\text{C}$ and below are the operation temperature for each mode.

- b) Economy Mode: 5~43°C
- c) Hybrid Mode: -30~43°C
- d) E-heater Mode: -30~43°C

4 Mode Selection

Different mode is designed to meet different demand and the following are recommended selections.

- a) Economy Mode: 5~43°C, a continuous hot water demand below 150L;
- b) Hybrid Mode: 5~43°C, a continuous hot water demand between 150L~200L;
- c) E-heater Mode: -30~43°C, a continuous hot water demand between 150L~200L.

5 Self-Protection Detection

- a) When the self-protection happens, the system will be stopped and start self-check, and restart when the protection resolved;
- b) When the self-protection happens, the buzzer will buzz in every other minute, the Warning indicator glitter and the display indicate the error code and water temperature alternatively. Press CANCEL button for 3sec to stop the alarm. All stop when the protection is resolved and error code disappears on the display.
- c) In the following circumstances, self-protection starts:

Air inlet or outlet is obstacles;

The heat exchanger is covered with too much dust;

Incorrect power supply (exceeding the range of 220±10%)

NOTE: When self-protection happens, cut the power supply manually and restart after the error resolved.

6 Water Temperature Display

- a) The temperature on the display is the water temperature in upper part of water tank (over 1/4) which you will use, but not that of all the water.
- b) The 6 indicators beside the water temperature on the display are the lower part water temperature. When the temperature is 15°C lower than the set temperature, the blue one will light up; when 10°C lower, the blue and yellow ones light up; when 5°C lower, the blue, yellow and red ones light up and when all light up, the water temperature has reached the set point.
- c) In water using, the temperature of the lower part may decrease while the upper part still keeps a high one, and the system will start heating the lower part. And it is normal.

7 Error Shooting

- a) When common error happens, the system enters Standby Mode and could still work, but not so efficient as normal. Please contact the technician.
- b) When serious error happens, the system will be unable to carry on. Please contact the technician.
- c) When error happens, the buzzer will buzz in every other minute, the Warning light glitter and the display indicate the error code and water temperature alternatively. Press CANCEL button for 3sec to stop the alarm.

8 Restart after Long Stop

When the system is started after a long time (trial running included), it is normal if the outlet water is unclear. Keep the tap on and it will be clean soon.

9 Auto Disinfection Mode

when the power is on, the auto disinfection mode will be on every week (every 168h). When this mode is on, the screen will show "CL", the main unit will heat the water to 65°C. When this mode is off, the letter "CL" will disappear. The unit default sterilizing operation time is 23:00 (use operation panel set clock as reference). Certainly if the customer need to operate the sterilizing function forcedly, it can press the "cancel" + "timer off" simultaneously for 1 second to operate forcedly, after finished sterilization, the unit will be recovered the automatic sterilizing function in the 23:00 after 1 week (168 hours).

3. Maintenance

3.1 Maintenance

- 3.1.1 Check the connection between power supply plug and socket and ground wiring regularly;
- 3.1.2 In some cold area (below 0°C), if the system will be stopped for a long time, all the water should be released in case of freezing of inner tank and damage of e-heater.
- 3.1.3 It is recommended to clean the inner tank and e-heater regularly to keep an efficient performance.
- 3.1.4 Check the sacrificial anode every half year and change it if it has been used out. For more details, please contact the supplier or the after-sale service.
- 3.1.5 It is recommended to set a lower temperature to decrease the heat release, prevent scale and save energy if the outlet water is sufficient.
- 3.1.6 Clean the air filter every month in case of any affect on the heating performance.
- 3.1.7 Before shutting the system down for a long time, please: Shut down the power supply; Release all the water in water tank and the pipeline and close all the valves; Check the inner components regularly.

3.2 Non-error Malfunction

- 3.2.1 3-min Protection With the power supplied, an immediate restart after the shutting down will have to wait 3 min as to protect the compressor.
- 3.2.2 If self-protection happens and the system stops, check :

When the power indicator lights up, if the system is forced to run while startup requirement has not been met; If the air outlet or inlet is jammed or strong wind blows to air outlet.

3.2.3 Defrosting

When it is humid and cold, the condenser may defrost and the water-heating capacity decrease. And the system will stop heating water and start defrosting and then restart water-heating

3.2.4 During defrosting, the compressor stops while fan motor runs at a high speed;

3.2.5 The defrosting time varies from 3min to 10min according to the ambient temperature and the frost.

3.3 Temperature Display

- 3.3.1 When the system stops, a decrease of the temperature is normal as heat released. When it decreases to some point, the system will restart automatically;
- 3.3.2 During water-heating, the displayed water temperature might still decrease or not increase for a period of time because of the heat exchange of the water. When the whole tank of water has reached the set temperature, the system will stop automatically.

3.4 diagnostic

How to get in diagnostic function?

Press 2 buttons together: "Cancel" + "Clock"

| No. | Hour Low bit | Min. High bit | Min. Low bit | Ts High bit | Ts Low bit | Tank Temp. Low bit | Tank Temp. High bit | Explanation |
|-----|--------------------|---------------------|--------------------|-------------------|------------------|-----------------------------|------------------------------|-------------|
| | | | | | | | | |
| 1 | E | 5 | U | | | Temp. valve | T5U | |
| 2 | E | 4 | | | | Temp. valve | T4 | |
| 3 | E | 3 | | | | Temp. valve | T3 | |
| 4 | E | P | | | | Temp. valve | Tp | |

| | | | | | | | |
|----|---|---|---|--|--|---------------|---|
| 5 | | X | X | | | Current valve | XX: $\square\square$ COPM; $\square\square$ Upper Element; $\square\square$ Lower Element |
| 6 | | | X | | | | Running mode: \square Economy, \square Hybrid, \square E-heater, \square Close |
| 7 | | F | X | | | | Fan speed: $\square\square$ stop, $\square\square$ High, $\square\square$ Mid, $\square\square$ Low |
| 8 | 1 | X | X | | | | Final error code |
| 9 | 2 | X | X | | | | Previous 1 st error or protection code |
| 10 | 3 | X | X | | | | Previous 2 nd error or protection code |

4. Malfunctions and Resolutions

| Malfunction | Cause | Resolutions |
|---|--|--|
| Outlet water is cold. The display is dark. | Bad connection of power supply plug and socket; Outlet water is set an a low temperature; Outlet water temperature controller is damaged; Circuit board of indicating indicator is damaged; | Reconnect the plug; Set outlet water an a higher temperature; Contact the technician. |
| No hot water from the outlet. | Tap water has been cut away; Water pressure is too low; Inlet valve has been closed. | It'll return to normal after water supplied; Use it when the pressure is higher; Open the inlet water valve. |
| Water Leakage | The joints on the pipeline are not sealed well. | Check and reseal all the joints. |

If the unit occurs any malfunction or error, please shut down the system, turn off the power supply, and consult your service persons for help.



Большая библиотека технической документации
<http://splitoff.ru/tehn-doc.html>
 каталоги, инструкции, сервисные мануалы, схемы.