



Air Conditioners

Technical Data



Replacement VRV®



EEDEN11-202

RQCEQ-P



Air Conditioners

Technical Data



Replacement VRV®



EEDEN11-202

RQCEQ-P

TABLE OF CONTENTS

RQCEQ-P

1	Specifications	2
	Technical Specifications system	2
	Electrical Specifications system	3
	Technical Specifications module	4
	Electrical Specifications	4
2	Electrical data	5
	Electrical Data	5
3	Options	6
	Options	6
4	Capacity tables	7
	Cooling Capacity Tables	7
	Heating Capacity Tables	27
	Capacity Correction Factor	47
5	Dimensional drawings	53
	Dimensional Drawings	53
6	External connection diagrams	56
	External Connection Diagrams	56
7	Operation range	58
	Operation Range	58

1 Specifications

1-1 Technical Specifications system				RQCEQ280PY1	RQCEQ360PY1	RQCEQ460PY1	RQCEQ500PY1	RQCEQ540PY1
System	Outdoor unit module 1			RQE140P	RQE180P	RQE140P		RQE180P
	Outdoor unit module 2			RQE140P	RQE180P	RQE140P	RQE180P	
	Outdoor unit module 3			-		RQE180P		
Cooling capacity	Nom.		kW	28.0 (1)	36.0 (1)	45.0 (1)	50.0 (1)	54.0 (1)
Heating capacity	Nom.		kW	32.0 (2)	40.0 (2)	52.0 (2)	56.0 (2)	60.0 (2)
Power input - 50Hz	Cooling	Nom.	kW	7.04	10.3	12.2	13.9	15.5
	Heating	Nom.	kW	8.00	10.7	13.4	14.7	16.1
EER				3.98	3.48	3.77	3.61	3.48
COP				4.00	3.72	3.89	3.80	3.72
Maximum number of connectable indoor units				16	20	26	29	33
Capacity range			HP	10	13	16	18	20
Indoor index connection	Min.			14.0	18.0	23.0	25.0	27.0
	Max.			36.4	46.2	59.8	65.0	70.2
Casing	Colour			Ivory white (Munsell code: 5Y7.5/1)				
Operation range	Cooling	Standard	Min.	°CDB	-5			
			Max.	°CDB	43			
	Heating		Min.	°CWB	-20			
			Max.	°CWB	15.5			
Sound pressure level	Cooling	Nom.	dBA	57	61	62	63	
Refrigerant	Type			R-410A				
	Control			Electronic expansion valve				
	Circuits	Quantity		1				
Piping connections	Liquid	Type		Braze connection				
		OD	mm	9.52	12.7	15.9		
	Gas	Type		Braze connection				
		OD	mm	22.2	25.4	28.6		
	Discharge gas	Type		Braze connection				
		OD	mm	19.1	22.2			
Total piping length	System	Actual	m	300				
Level difference	OU - IU	Outdoor unit in highest position	m	50				

1-1 Technical Specifications system				RQCEQ636PY1	RQCEQ712PY1	RQCEQ744PY1	RQCEQ816PY1	RQCEQ848PY1
System	Outdoor unit module 1			RQE212P	RQE140P		RQE180P	RQE212P
	Outdoor unit module 2			RQE212P	RQE180P		RQE212P	
	Outdoor unit module 3			RQE212P	RQE180P	RQE212P		
	Outdoor unit module 4			-		RQE212P		
Heating capacity	Nom.		kW	67.2 (2)	78.4 (2)	80.8 (2)	87.2 (2)	89.6 (2)
Power input - 50Hz	Heating	Nom.	kW	17.7	20.7	21.2	23.1	23.6
EER				2.90	3.36	3.19	3.01	2.90
COP				3.79	3.80	3.81	3.77	3.79
Maximum number of connectable indoor units				36	40	43	47	50
Capacity range			HP	22	24	26	28	30
Indoor index connection	Min.			31.8	35.6	37	40.8	42.4
	Nom.			-				
	Max.			82.7	92.6	96.7	106	110
Casing	Colour			Ivory white (Munsell code: 5Y7.5/1)				
Operation range	Cooling	Standard	Min.	°CDB	-5			
			Max.	°CDB	43			
	Heating		Min.	°CWB	-20			
			Max.	°CWB	15.5			
Sound pressure level	Cooling	Nom.	dBA	64	63	64	65	66

1 Specifications

1-1 Technical Specifications system				RQCEQ636PY1	RQCEQ712PY1	RQCEQ744PY1	RQCEQ816PY1	RQCEQ848PY1
Refrigerant	Type			R-410A				
	Control			Electronic expansion valve				
	Circuits	Quantity		1				
Piping connections	Liquid	Type		Braze connection				
		OD	mm	15.9	19.1			
	Gas	Type		Braze connection				
		OD	mm	28.6	34.9			
	Discharge gas	Type		Braze connection				
		OD	mm	25.4				28.6
Total piping length	System	Actual	m	300				
Level difference	OU - IU	Outdoor unit in highest position	m	50				

1-2 Electrical Specifications system				RQCEQ280PY1	RQCEQ360PY1	RQCEQ460PY1	RQCEQ500PY1	RQCEQ540PY1
Current - 50Hz	Minimum circuit amps (MCA)		A	23.8	34.5	41.0	46.4	51.7
	Maximum fuse amps (MFA)		A	30	40	50	60	
	Total overcurrent amps (TOCA)		A	31.2			46.8	
Power supply	Name			Y1				
	Phase			3~				
	Frequency	Hz		50				
	Voltage	V		400				
Voltage range	Min.	%		-10				
	Max.	%		10				
Notes				Cooling: indoor temp. 27°CDB, 19°CWB; outdoor temp. 35°CDB; equivalent piping length: 7.5m; level difference: 0m				

1-2 Electrical Specifications system				RQCEQ636PY1	RQCEQ712PY1	RQCEQ744PY1	RQCEQ816PY1	RQCEQ848PY1
Current - 50Hz	Minimum circuit amps (MCA)		A	55.5	64.9	66.1	72.7	74.0
	Maximum fuse amps (MFA)		A	70	80		90	
	Total overcurrent amps (TOCA)		A	46.8	62.4			
Power supply	Name			Y1				
	Phase			3~				
	Frequency	Hz		50				
	Voltage	V		400				
Voltage range	Min.	%		-10				
	Max.	%		10				
Notes				Cooling: indoor temp. 27°CDB, 19°CWB; outdoor temp. 35°CDB; equivalent piping length: 7.5m; level difference: 0m				
				Heating: indoor temp. 20°CDB; outdoor temp. 7°CDB, 6°CWB; equivalent refrigerant piping: 7.5m; level difference: 0m				
				TOCA means the total value of each OC set.				
				MSC means the maximum current during start up of the compressor				
				Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.				
				Maximum allowable voltage range variation between phases is 2%.				
				Select wire size based on the larger value of MCA or TOCA				
MFA is used to select the circuit breaker and the ground fault circuit interrupter (earth leakage circuit breaker).								

1 Specifications

1-3 Technical Specifications module				RQEQ140PY1	RQEQ180PY1	RQEQ212PY1	
Capacity control			%	25 ~ 100	21 ~ 100		
Casing	Colour			Ivory white (Munsell code: 5Y7.5/1)			
Dimensions	Unit	Height	mm	1,680			
		Width	mm	635			
		Depth	mm	765			
Weight	Unit	kg		175	179		
Heat exchanger	Type			Cross fin coil			
Fan	Type			Propeller fan			
Operation range	Cooling	Standard	Min.	°CDB			
		Max.		°CDB			
	Heating	Min.	°CWB		-20		
		Max.		°CWB		15	
Sound power level	Cooling	Nom.	dBA		-		
Sound pressure level	Cooling	Nom.	dBA		54	58 60	
Compressor	Quantity			1			
	Type			Hermetically sealed scroll compressor			
	Piston displacement		m³/h	13.34	15.75	16.89	
	Speed		rpm	6,300	7,440	7,980	
	Output		W	2,800	3,300	3,600	
	Starting method			Soft start			
Refrigerant	Type			R-410A			
	Charge		kg	10.3	10.6	11.2	
	Control			Electronic expansion valve			
	Circuits	Quantity		1			
Piping connections	Liquid	Type		Braze connection			
		OD	mm	9.52			
	Gas	Type		Braze connection			
		OD	mm	15.9	19.1		
	Discharge gas	Type		Braze connection			
		OD	mm	12.7	15.9		
Defrost method			Deicer				
Fan motor	Quantity			1			
	Drive			Direct drive			
	Output		W	350			

1-4 Electrical Specifications				RQEQ140PY1	RQEQ180PY1	RQEQ212PY1
Power supply	Name			Y1		
	Phase			3~		
	Frequency	Hz		50		
	Voltage	V		380-415		
Voltage range	Min.	%		-10		
	Max.	%		10		
Notes				Cooling: indoor temp. 27°CDB, 19°CWB; outdoor temp. 35°CDB; equivalent piping length: 7.5m; level difference: 0m		
				Heating: indoor temp. 20°CDB; outdoor temp. 7°CDB, 6°CWB; equivalent refrigerant piping: 7.5m; level difference: 0m		
				TOCA means the total value of each OC set.		
				MSC means the maximum current during start up of the compressor		
				Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.		
				Maximum allowable voltage range variation between phases is 2%.		
				Select wire size based on the larger value of MCA or TOCA		
MFA is used to select the circuit breaker and the ground fault circuit interrupter (earth leakage circuit breaker).						

2 Electrical data


2 - 1 Electrical Data

RQCEQ-P

Model Name				Units				Power supply Comp.					OFM		
Combination Unit	Independent Unit			Hz	Volts	Min.	Max	MCA	TOCA	MFA	MSC	RLA	KW	FLA	
RQCEQ280P	RQEQ140P	RQEQ140P		50	380	342	456	23.8	31.2	30	-	4.6X2	0.35x2	0.7x2	
				400	-						4.8X2				
				415	-						5.1X2				
RQCEQ360P	RQEQ180P	RQEQ180P		50	380	342	456	34.5	31.2	40	-	6.9X2	0.35x2	0.8x2	
				400	-						7.2X2				
				415	-						7.6X2				
RQCEQ460P	RQEQ140P	RQEQ140P	RQEQ180P	50	380	342	456	41.0	46.8	50	-	(4.6x2)+6.9	0.35x3	0.7x2+0.8	
				400	-						(4.8x2)+7.2				
				415	-						(5.1x2)+7.6				
RQCEQ600P	RQEQ140P	RQEQ180P	RQEQ180P	50	380	342	456	46.4	46.8	60	-	4.6+(6.9x2)	0.35x3	0.7+0.8x2	
				400	-						4.8+(7.2x2)				
				415	-						5.1+(7.6x2)				
RQCEQ540P	RQEQ180P	RQEQ180P	RQEQ180P	50	380	342	456	51.7	46.8	60	-	6.9x3	0.35x3	0.8x3	
				400	-						7.2x3				
				415	-						7.6x3				
RQCEQ636P	RQEQ212P	RQEQ212P	RQEQ212P	50	380	342	456	55.5	46.8	70	-	10.3x3	0.35x3	0.8x3	
				400	-						10.7x3				
				415	-						11.3x3				
RQCEQ712P	RQEQ140P	RQEQ180P	RQEQ180P	RQEQ212P	50	380	342	456	64.9	62.4	80	-	4.6+(6.9x2)+10.3	0.35x4	0.7+0.8x3
					400	-						4.8+(7.2x2)+10.7			
					415	-						5.1+(7.6x2)+11.3			
RQCEQ744P	RQEQ140P	RQEQ180P	RQEQ212P	RQEQ212P	50	380	342	456	66.1	62.4	80	-	4.6+6.9+(10.3x2)	0.35x4	0.7+0.8x3
					400	-						4.8+7.2+(10.7x2)			
					415	-						5.1+7.6+(11.3x2)			
RQCEQ816P	RQEQ180P	RQEQ212P	RQEQ212P	RQEQ212P	50	380	342	456	72.7	62.4	90	-	6.9+(10.3x3)	0.35x4	0.8x4
					400	-						7.2+(10.7x3)			
					415	-						7.6+(11.3x3)			
RQCEQ848P	RQEQ212P	RQEQ212P	RQEQ212P	RQEQ212P	50	380	342	456	74.0	62.4	90	-	10.3x4	0.35x4	0.8x4
					400	-						10.7x4			
					415	-						11.3x4			

SYMBOLS

- MCA : Min. Circuit Amps. (A)
- TOCA : Total Over-current Amps. (A)
- MFA : Max. Fuse Amps. (A)
- MSC : Max. Starting current
- RLA : Rated Load Amps. (A)
- OFM : Outdoor Fan Motor
- FLA : Full Load Amps. (A)
- KW : Rated Motor Output (kW)

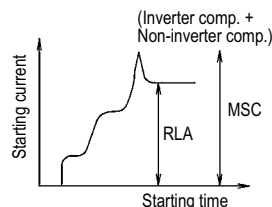

The relationship between the starting time and the starting current

NOTES

1. RLA is based on the following conditions, Indoor temperature, 27°C DB/19.0 °C WB Outdoor temperature, 35°C DB
2. TOCA means the total value of each OC set.
3. MSC means the Max. current during the starting of compressor.
4. Voltage range
Units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.
5. Maximum allowable voltage variation between phases is 2%
6. Select wire size based on the larger value of MCA or TOCA
7. MFA is used to select the circuit breaker and the ground fault circuit interrupter (earth leakage circuit breaker).

3D066809

3 Options

3 - 1 Options

RQCEQ-P

Series		VRV III - Q			
Option name	Model	RQCEQ280P RQCEQ360P	RQCEQ460P RQCEQ500P	RQCEQ540P RQCEQ636P	RQCEQ712P RQCEQ744P RQCEQ816P RQCEQ848P
	Cool/heater selector				
Fixing box		KJB11A			
Distributive piping	Refnet header	KHRQ23M29H KHRQ23M64H		KHRQ23M29H KHRQ23M64H KHRQ23M75H	
	Refnet joint	KHRQ23M20T KHRQ23M29T9 KHRQ23M64T		KHRQ23M20T KHRQ23M29T9 KHRQ23M64T KHRQ23M75T	
Pipe size reducer					
Outdoor unit multi Connection piping kit		BHFP26P36C	BHFP26P63C		BHFP26P84C

3D066354

4 Capacity tables

4 - 1 Cooling Capacity Tables

RQCYQ_RQCEQ360P			TC: Total Capacity; PI Power Input: kW (Comp. + Outdoor fan motor)																					
Combination (%)	Capacity index (kW)	Outdoor air temp. °CDB	Indoor air temp. °CWB																					
			14.0		16.0		18.0		19.0		20.0		22.0		24.0									
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI								
90	32.40	10	21.9	3.19	26.1	3.85	30.3	4.54	32.4	4.90	34.5	5.27	38.7	6.02	42.9	6.79								
		39	21.9	5.77	26.1	7.33	30.3	9.08	32.4	10.02	34.5	11.02	35.3	11.13	36.1	11.23								
		80	28.80	10	19.4	2.83	23.2	3.39	26.9	3.99	28.8	4.29	30.7	4.61	34.4	5.26	38.2	5.92						
				39	19.4	4.96	23.2	6.24	26.9	7.66	28.8	8.43	30.7	9.24	34.4	10.98	35.2	11.12						
				70	25.20	10	17.0	2.49	20.3	2.96	23.6	3.45	25.2	3.71	26.8	3.97	30.1	4.51	33.4	5.08				
						39	17.0	4.21	20.3	5.24	23.6	6.37	25.2	6.99	26.8	7.63	30.1	9.00	33.4	10.49				
						60	21.60	10	14.6	2.17	17.4	2.54	20.2	2.94	21.6	3.15	23.0	3.37	25.8	3.81	28.6	4.26		
								39	14.6	3.53	17.4	4.33	20.2	5.21	21.6	5.68	23.0	6.17	25.8	7.22	28.6	8.36		
								50	18.00	10	12.15	1.86	14.5	2.16	16.8	2.47	18.0	2.63	19.2	2.79	21.5	3.14	23.9	3.50
										39	12.15	2.91	14.5	3.51	16.8	4.16	18.0	4.51	19.2	4.87	21.5	5.65	23.9	6.48

4 Capacity tables

4 - 1 Cooling Capacity Tables

RQCEQ712P		TC: Total Capacity; Power Input: kW (Comp. + Outdoor fan motor)																				
Combination (%)	Capacity index (kW)	Outdoor air temp. °CDB	Indoor air temp. °CWB																			
			14.0		16.0		18.0		19.0		20.0		22.0		24.0							
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI						
130	92.56	10	62.5	9.75	74.5	11.94	86.5	14.20	89.7	14.50	90.8	14.20	93.0	13.61	95.3	13.00						
		120	85.44	10	57.7	8.91	68.8	10.89	79.9	12.95	85.4	13.99	89.4	14.57	91.5	14.03	93.5	13.48				
				110	78.32	10	52.9	8.09	63.0	9.86	73.2	11.70	78.3	12.65	83.4	13.61	89.9	14.45	91.8	13.95		
						100	71.20	10	48.1	7.30	57.3	8.85	66.6	10.49	71.2	11.33	75.8	12.19	85.1	13.93	90.0	14.41

S100071

NOTES - ANMERKUNGEN - Σημειώσεις - NOTAS - REMARQUES - NOTE - OPMERKINGEN - Примечания - NOTLAR

- The above table shows the average value of conditions which may occur.
Die obige Tabelle zeigt den Durchschnittswert der Bedingungen, die auftreten können.
 Στον παραπάνω πίνακα αναγράφεται η μέση τιμή για συνθήκες που μπορεί να προκύψουν.
La tabla de arriba muestra el valor medio de condiciones que pueden ocurrir.
 Le tableau ci-dessus donne la valeur moyenne pour des conditions qui peuvent survenir.
 La tabella in alto mostra il valore delle condizioni medie che si possono riscontrare.
 De tabel hierboven geeft de gemiddelde waarde aan van situaties die kunnen voorvallen.
 Таблица расположенная выше показывает среднее значение условий, которые могут наступить.
 Yukarıdaki tablo meydana gelebilecek koşulların ortalama değerini göstermektedir.

4 Capacity tables

4 - 1 Cooling Capacity Tables

RQCEQ848P																		
TC: Total Capacity; Power Input: kW (Comp. + Outdoor fan motor)																		
Combination (%)	Capacity index (kW)	Outdoor air temp. °CDB	Indoor air temp. °CWB															
			14.0		16.0		18.0		19.0		20.0		22.0		24.0			
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI		
130	110.24	10	74.4	13.47	88.7	16.49	103.1	19.62	106.8	20.03	108.1	19.62	110.8	18.79	113.5	17.95		

S100071

NOTES - ANMERKUNGEN - Σημειώσεις - NOTAS - REMARQUES - NOTE - OPMERKINGEN - Примечания - NOTLAR

- The above table shows the average value of conditions which may occur.
Die obige Tabelle zeigt den Durchschnittswert der Bedingungen, die auftreten können.
 Στον παραπάνω πίνακα αναγράφεται η μέση τιμή για συνθήκες που μπορεί να προκύψουν.
La tabla de arriba muestra el valor medio de condiciones que pueden ocurrir.
 Le tableau ci-dessus donne la valeur moyenne pour des conditions qui peuvent survenir.
La tabella in alto mostra il valore delle condizioni medie che si possono riscontrare.
 De tabel hierboven geeft de gemiddelde waarde aan van situaties die kunnen voorvallen.
Таблица расположенная выше показывает среднее значение условий, которые могут наступить.
 Yukarıdaki tablo meydana gelebilecek kopyulların ortalama değerini göstermektedir.

4 Capacity tables

4 - 2 Heating Capacity Tables

RQCYQ_RQCEQ500P TC: Total Capacity; PI Power Input: kW (Comp. + Outdoor fan motor)

Combination (%)	Capacity index (kW)	Outdoor air temp.		Indoor air temp. CDB																			
				16.0		18.0		20.0		21.0		22.0		24.0									
		°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI								
90	45.00	-19.8	-20.0	34.6	13.06	34.5	13.56	34.4	14.05	34.4	14.29	34.4	14.54	34.3	15.03								
		80	40.00	-19.8	-20.0	34.4	14.02	34.4	14.46	34.3	14.90	34.2	15.12	34.2	15.34	34.1	15.77						
				70	35.00	-19.8	-20.0	34.3	14.98	34.2	15.37	34.1	15.75	34.1	15.94	34.1	16.13	34.0	16.51				
						60	30.00	-19.8	-20.0	34.1	15.94	34.0	16.27	33.6	16.29	32.5	15.66	31.4	15.03	29.3	13.81		
								50	25.00	-19.8	-20.0	31.6	15.12	29.8	14.10	28.0	13.11	27.1	12.62	26.2	12.14	24.4	11.19

S100071

4 Capacity tables

4 - 2 Heating Capacity Tables

RQCEQ816P				TC: Total Capacity; PI Power Input: kW (Comp. + Outdoor fan motor)																			
Combination (%)	Capacity index (kW)	Outdoor air temp.		Indoor air temp. CDB																			
				16.0		18.0		20.0		21.0		22.0		24.0									
		°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI								
130	106.08	-19.8	-20.0	53.6	13.33	53.4	14.45	53.2	15.57	53.1	16.12	53.0	16.68	52.8	17.80								
		120	97.92	-19.8	-20.0	53.3	14.84	53.1	15.87	52.9	16.90	52.8	17.42	52.8	17.93	52.6	18.16						
				110	89.76	-19.8	-20.0	53.0	16.35	52.9	17.29	52.7	18.24	52.6	18.71	52.5	19.18	52.4	20.13				
						100	81.60	-19.8	-20.0	52.8	17.86	52.6	18.71	52.5	19.57	52.4	20.00	52.3	20.43	52.2	21.29		
								90	79.92	-11.8	-13.0	63.8	20.59	63.6	21.30	63.5	22.00	63.4	22.35	63.3	22.71	63.2	23.41

S100071

NOTES - ANMERKUNGEN - Σημειώσεις - NOTAS - REMARQUES - NOTE - OPMERKINGEN - Примечания - NOTLAR

- is shown as reference. When selecting the unit models, avoid the Outdoor air temperature range shown by .
 dient als Verweis. Vermeiden Sie bei der Auswahl der Gerätemodelle den als markierten Temperaturbereich der Außenluft
 Η είναι ενδεικτική. κατά την επιλογή των μοντέλων των μονάδων, αποφύγετε το εύρος θερμοκρασίας εξωτερικού αέρα που υποδεικνύεται
 se muestra como referencia. Cuando seleccione los modelos de unidad, evite el intervalo de temperaturas del aire exterior indicado mediante
 est montré comme référence. Lors du choix des modèles d'unités, évitez la plage de températures de l'air extérieur illustré par
 valori riportati unicamente come riferimento. Nel selezionare i modelli delle unità, non considerare i valori di temperatura dell'aria esterna indicati con il colore
 is als referentie getoond. Wanneer modellen van eenheden worden gekozen, vermijd dan het bereik van buitenluchttemperaturen geïllustreerd door


- показан как. При выборе модели устройства избегайте внешнюю температуру воздуха, указанную в
 referans olarak gösterilmektedir. Ünite modellerini seçerken, belirtilen Dış hava sıcaklığı aralığından kaçınınız
 The above table shows the average value of conditions which may occur.
 Die obige Tabelle zeigt den Durchschnittswert der Bedingungen, die auftreten können.
 Στον παραπάνω πίνακα αναγράφεται η μέση τιμή για συνθήκες που μπορεί να προκύψουν.
 La tabla de arriba muestra el valor medio de condiciones que pueden ocurrir.
 Le tableau ci-dessus donne la valeur moyenne pour des conditions qui peuvent survenir.
 La tabella in alto mostra il valore delle condizioni medie che si possono riscontrare.
 De tabel hierboven geeft de gemiddelde waarde aan van situaties die kunnen voorvallen.
 Таблица расположена выше показывает среднее значение условий, которые могут наступить.
 Yukarıdaki tablo meydana gelebilecek koşulların ortalama değerini göstermektedir.

4 Capacity tables


4 - 3 Capacity Correction Factor

RQCEQ280P

1. Rate of change in cooling capacity

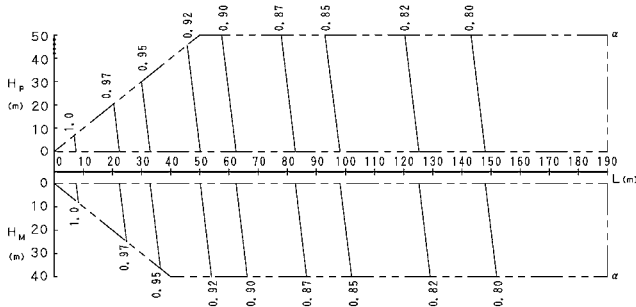

2. Rate of change in heating capacity

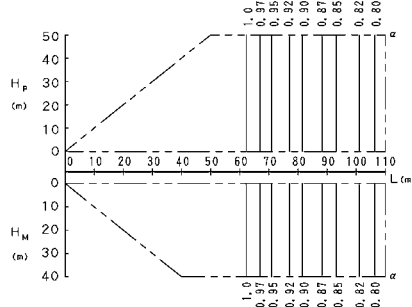

[Diameter of the main pipes (standard size)]

Model	Liquid
RQCEQ280P	ø 9.5

[Explanation of symbols]

H_p: Level difference (m) between indoor and outdoor units where indoor unit in inferior position

H_m: Level difference (m) between indoor and outdoor units where indoor unit in superior position

L: Equivalent pipe length (m)

α: Capacity correction factor

3D066851

NOTES

- These figures illustrate the rate of change in capacity of a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions there is only a minor deviation from the rate of change in capacity shown in the above figures.
- Method of calculating A/C (cooling/heating) capacity:
The maximum A/C capacity of the system will be either the total A/C capacity of the indoor units obtained from capacity characteristic table or the maximum A/C capacity of outdoor units as mentioned below, whichever smaller.

Calculating A/C capacity of outdoor units.

- Condition: Indoor unit combination ratio does not exceed 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the 100\% combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- Condition: Indoor unit combination ratio exceeds 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- When overall equivalent pipe length is 90m or more, the diameter of the main liquid pipes (outdoor unit-branch sections) must be increased.


[Diameter of above case]

Model	Liquid
RQCEQ280P	ø 12.7

- When the main sections of the interunit liquid pipe diameters are increased the overall equivalent length should be calculated as follows, (heating only)

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.2 + (\text{Equivalent length after branching})$$

(example)

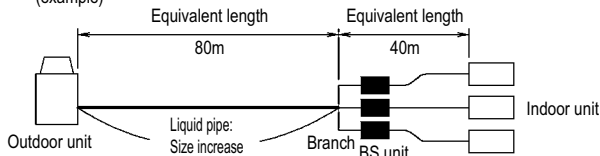


In the above case (Heating) Overall equivalent length = 80m x 0.2 + 40m = 56m. The correction factor in capacity when H_p=0m is thus approximately 1.0.

- In the combination which does not include cooling only indoor unit, Calculate the equivalent length pipe by the following when you calculate cooling capacity

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.5 + (\text{Equivalent length after branching})$$

(example)

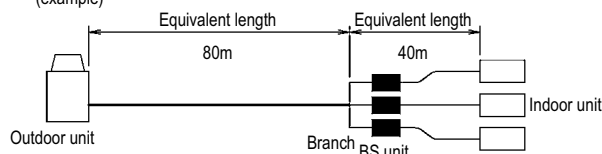


In the above case (Cooling) Overall equivalent length = 80m x 0.5 + 40m = 80m. The correction factor in capacity when H_p=0m is thus approximately 0.88.

4 Capacity tables


4 - 3 Capacity Correction Factor

RQCEQ460P

1. Rate of change in cooling capacity

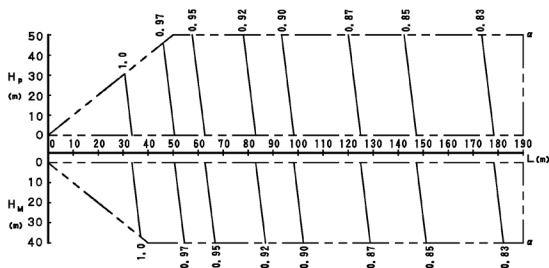

2. Rate of change in heating capacity

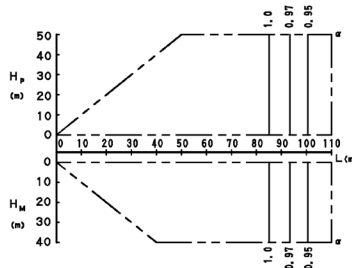

[Diameter of pipe (standard size)]

Model	Liquid
RQCEQ460P	ø 12.7

[Explanation of symbols]

- H_p: Level difference (m) between indoor and outdoor units where indoor unit in inferior position
- H_m: Level difference (m) between indoor and outdoor units where indoor unit in superior position
- L: Equivalent pipe length (m)
- C: Capacity correction factor

3D066870

NOTES

- These figures illustrate the rate of change in capacity of a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions there is only a minor deviation from the rate of change in capacity shown in the above figures.
- Method of calculating A/C (cooling/heating) capacity:
The maximum A/C capacity of the system will be either the total A/C capacity of the indoor units obtained from capacity characteristic table or the maximum A/C capacity of outdoor units as mentioned below, whichever smaller.

Calculating A/C capacity of outdoor units.

- Condition: Indoor unit combination ratio does not exceed 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the 100\% combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- Condition: Indoor unit combination ratio exceeds 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$


- When overall equivalent pipe length is 90m or more, the diameter of the main liquid pipes (outdoor unit-branch sections) must be increased.
[Diameter of above case]

Model	Liquid
RQCEQ460P	ø 15.9

- When the main sections of the interunit liquid pipe diameters are increased the overall equivalent length should be calculated as follows, (heating only)

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.3 + (\text{Equivalent length after branching})$$

(example)

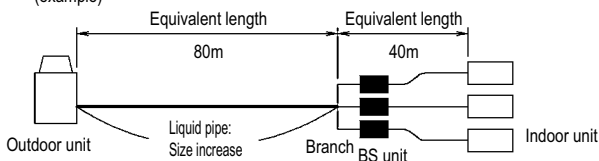


In the above case (Heating) Overall equivalent length = 80m x 0.3 + 30m = 64m. The correction factor in capacity when H_p=0m is thus approximately 1.0.

- In the combination which does not include cooling only indoor unit, Calculate the equivalent length pipe by the following when you calculate cooling capacity

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.5 + (\text{Equivalent length after branching})$$

(example)

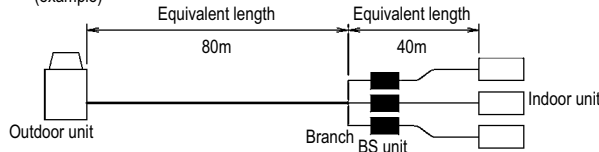


In the above case (Cooling) Overall equivalent length = 80m x 0.5 + 40m = 80m. The correction factor in capacity when H_p=0m is thus approximately 0.93.

4 Capacity tables


4 - 3 Capacity Correction Factor

RQCEQ360,500P

1. Rate of change in cooling capacity

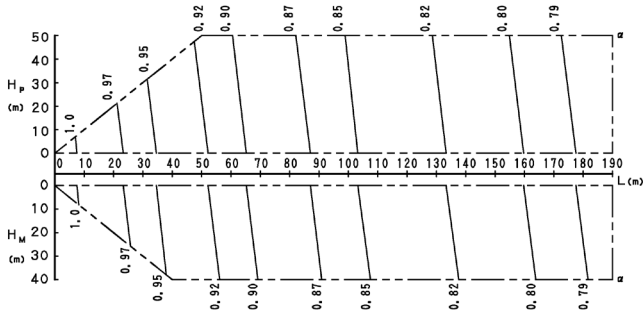

2. Rate of change in heating capacity

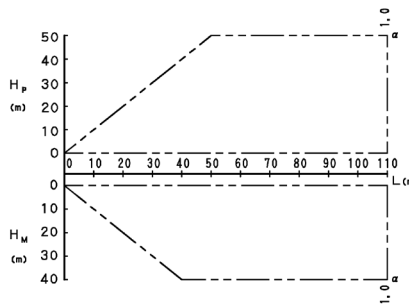

[Diameter of the main pipes (standard size)]

Model	Liquid
RQCEQ360P	ø 12.7
RQCEQ500P	ø 15.9

[Explanation of symbols]

- Hp: Level difference (m) between indoor and outdoor units where indoor unit in inferior position
- Hm: Level difference (m) between indoor and outdoor units where indoor unit in superior position
- L: Equivalent pipe length (m)
- α: Capacity correction factor

3D066852

NOTES

- These figures illustrate the rate of change in capacity of a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions there is only a minor deviation from the rate of change in capacity shown in the above figures.
- Method of calculating A/C (cooling/heating) capacity:
The maximum A/C capacity of the system will be either the total A/C capacity of the indoor units obtained from capacity characteristic table or the maximum A/C capacity of outdoor units as mentioned below, whichever smaller.

Calculating A/C capacity of outdoor units.

- Condition: Indoor unit combination ratio does not exceed 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the 100\% combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- Condition: Indoor unit combination ratio exceeds 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- When overall equivalent pipe length is 90m or more, the diameter of the main liquid pipes (outdoor unit-branch sections) must be increased.


[Diameter of above case]

Model	Liquid
RQCEQ360P	ø 15.9
RQCEQ500P	ø 19.1

- When the main sections of the interunit liquid pipe diameters are increased the overall equivalent length should be calculated as follows, (heating only)

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times \text{Correction factor} + (\text{Equivalent length after branching})$$

(example)

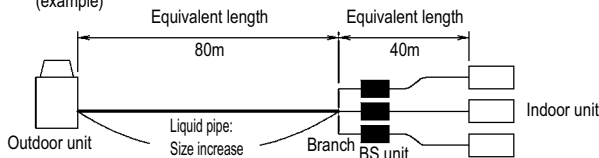


Model	Correction factor
RQCEQ360P	ø 0.3
RQCEQ500P	ø 0.4

In the above case (Heating) Overall equivalent length = 80m x 0.4 + 40m = 72m. The correction factor in capacity when Hp=0m is thus approximately 1.0.

- In the combination which does not include cooling only indoor unit, Calculate the equivalent length pipe by the following when you calculate cooling capacity

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.5 + (\text{Equivalent length after branching})$$

(example)

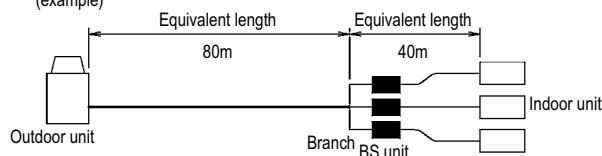


In the above case (Cooling) Overall equivalent length = 80m x 0.5 + 40m = 80m. The correction factor in capacity when Hp=0m is thus approximately 0.88.

4 Capacity tables


4 - 3 Capacity Correction Factor

RQCEQ540,744P

1. Rate of change in cooling capacity

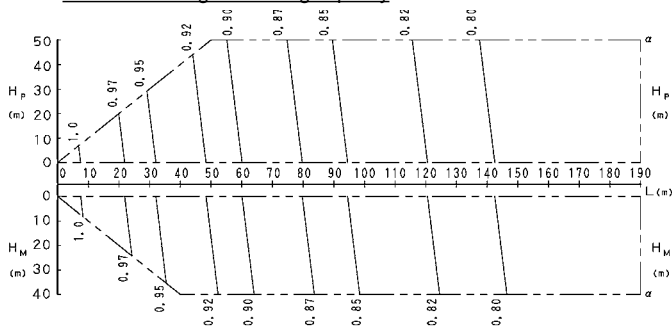

2. Rate of change in heating capacity

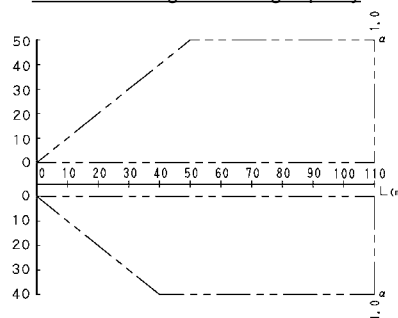

[Diameter of the main pipes (standard size)]

Model	Liquid
RQCEQ540P	ø 15.9
RQCEQ744P	ø 19.1

[Explanation of symbols]

Hp: Level difference (m) between indoor and outdoor units where indoor unit in inferior position

Hm: Level difference (m) between indoor and outdoor units where indoor unit in superior position

L: Equivalent pipe length (m)

Q: Capacity correction factor

3D066853

NOTES

- These figures illustrate the rate of change in capacity of a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions there is only a minor deviation from the rate of change in capacity shown in the above figures.
- Method of calculating A/C (cooling/heating) capacity:
The maximum A/C capacity of the system will be either the total A/C capacity of the indoor units obtained from capacity characteristic table or the maximum A/C capacity of outdoor units as mentioned below, whichever smaller.

Calculating A/C capacity of outdoor units.

- Condition: Indoor unit combination ratio does not exceed 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the 100\% combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- Condition: Indoor unit combination ratio exceeds 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- When overall equivalent pipe length is 90m or more, the diameter of the main liquid pipes (outdoor unit-branch sections) must be increased.


[Diameter of above case]

Model	Liquid
RQCEQ540P	ø 19.1
RQCEQ744P	ø 22.2

- When the main sections of the interunit liquid pipe diameters are increased the overall equivalent length should be calculated as follows, (heating only)

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.4 + (\text{Equivalent length after branching})$$

(example)

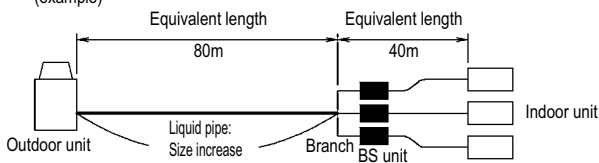


In the above case (Heating) Overall equivalent length = 80m x 0.4 + 40m = 72m. The correction factor in capacity when Hp=0m is thus approximately 1.0.

- In the combination which does not include cooling only indoor unit, Calculate the equivalent length pipe by the following when you calculate cooling capacity

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.5 + (\text{Equivalent length after branching})$$

(example)

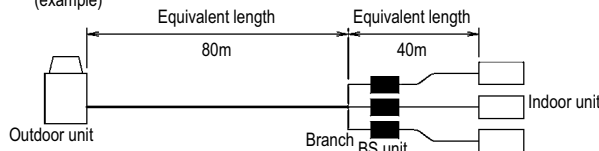


In the above case (Cooling) Overall equivalent length = 80m x 0.5 + 40m = 80m. The correction factor in capacity when Hp=0m is thus approximately 0.87.

4 Capacity tables


4 - 3 Capacity Correction Factor

RQCEQ816P

1. Rate of change in cooling capacity

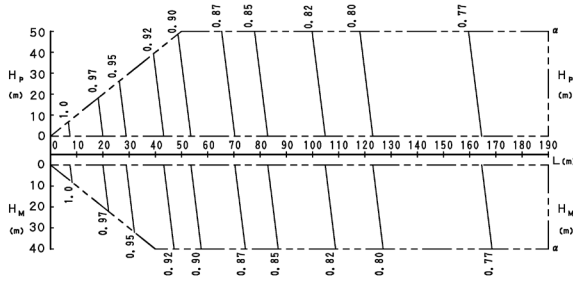

2. Rate of change in heating capacity

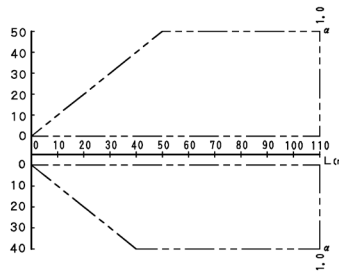

[Diameter of the main pipes (standard size)]

Model	Liquid
RQCEQ816P	ø 19.1

[Explanation of symbols]

- Hp: Level difference (m) between indoor and outdoor units where indoor unit in inferior position
- Hm: Level difference (m) between indoor and outdoor units where indoor unit in superior position
- L: Equivalent pipe length (m)
- α : Capacity correction factor

3D066854

NOTES

- These figures illustrate the rate of change in capacity of a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions there is only a minor deviation from the rate of change in capacity shown in the above figures.
- Method of calculating A/C (cooling/heating) capacity:
The maximum A/C capacity of the system will be either the total A/C capacity of the indoor units obtained from capacity characteristic table or the maximum A/C capacity of outdoor units as mentioned below, whichever smaller.

Calculating A/C capacity of outdoor units.

- Condition: Indoor unit combination ratio does not exceed 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the 100\% combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- Condition: Indoor unit combination ratio exceeds 100%.

$$\text{Maximum A/C capacity of outdoor units} = \text{A/C capacity of outdoor units obtained from capacity characteristic table at the combination} \times \text{Capacity change rate due to piping length to the farthest indoor unit}$$

- When overall equivalent pipe length is 90m or more, the diameter of the main liquid pipes (outdoor unit-branch sections) must be increased.


[Diameter of above case]

Model	Liquid
RQCEQ816PY1	ø 22.2

- When the main sections of the interunit liquid pipe diameters are increased the overall equivalent length should be calculated as follows, (heating only)

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.4 + (\text{Equivalent length after branching})$$

(example)

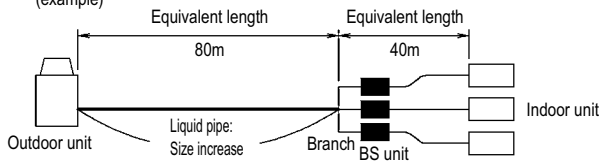


In the above case (Heating) Overall equivalent length = 80m x 0.4 + 40m = 72m. The correction factor in capacity when Hp=0m is thus approximately 1.0.

- In the combination which does not include cooling only indoor unit, Calculate the equivalent length pipe by the following when you calculate cooling capacity

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.5 + (\text{Equivalent length after branching})$$

(example)

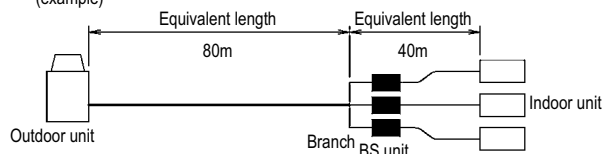


In the above case (Cooling) Overall equivalent length = 80m x 0.5 + 40m = 80m. The correction factor in capacity when Hp=0m is thus approximately 0.86.

4 Capacity tables


4 - 3 Capacity Correction Factor

RQCEQ636-848P

1. Rate of change in cooling capacity

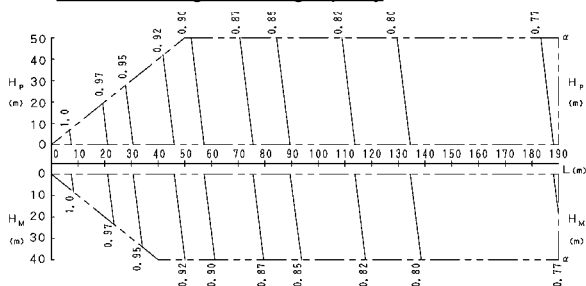

2. Rate of change in heating capacity

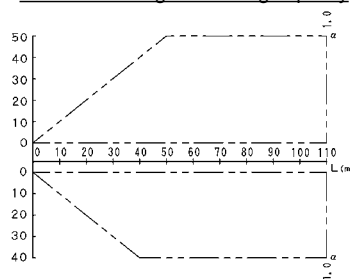

[Diameter of the main pipes (standard size)]

Model	Liquid
RQCEQ636P	ø 15.9
RQCEQ712P	ø 15.9
RQCEQ848P	ø 19.1

[Explanation of symbols]

H_p: Level difference (m) between indoor and outdoor units where indoor unit in inferior position

H_m: Level difference (m) between indoor and outdoor units where indoor unit in superior position

L: Equivalent pipe length (m)

Q: Capacity correction factor

3D066855

NOTES

- These figures illustrate the rate of change in capacity of a standard indoor unit system at maximum load (with the thermostat set to maximum) under standard conditions. Moreover, under partial load conditions there is only a minor deviation from the rate of change in capacity shown in the above figures.
- Method of calculating A/C (cooling/heating) capacity:
The maximum A/C capacity of the system will be either the total A/C capacity of the indoor units obtained from capacity characteristic table or the maximum A/C capacity of outdoor units as mentioned below, whichever smaller.

Calculating A/C capacity of outdoor units.

- Condition: Indoor unit combination ratio does not exceed 100%.

$$\text{Maximum A/C capacity of outdoor units} = \left[\text{A/C capacity of outdoor units obtained from capacity characteristic table at the 100\% combination} \right] \times \left[\text{Capacity change rate due to piping length to the farthest indoor unit} \right]$$

- Condition: Indoor unit combination ratio exceeds 100%.

$$\text{Maximum A/C capacity of outdoor units} = \left[\text{A/C capacity of outdoor units obtained from capacity characteristic table at the combination} \right] \times \left[\text{Capacity change rate due to piping length to the farthest indoor unit} \right]$$


- When overall equivalent pipe length is 90m or more, the diameter of the main liquid pipes (outdoor unit-branch sections) must be increased.
[Diameter of above case]

Model	Liquid
RQCEQ636P	ø 19.1
RQCEQ712P	ø 19.1
RQCEQ848P	ø 22.2

- When the main sections of the interunit liquid pipe diameters are increased the overall equivalent length should be calculated as follows, (heating only)

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.4 + (\text{Equivalent length after branching})$$

(example)

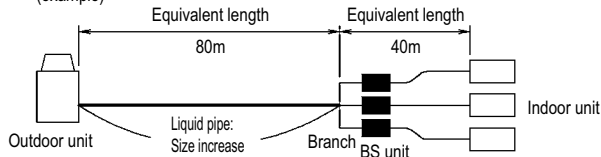


In the above case (Heating) Overall equivalent length = 80m x 0.4 + 40m = 72m. The correction factor in capacity when H_p=0m is thus approximately 1.0.

- In the combination which does not include cooling only indoor unit, Calculate the equivalent length pipe by the following when you calculate cooling capacity

$$\text{Overall equivalent length} = (\text{Equivalent length to main pipe}) \times 0.5 + (\text{Equivalent length after branching})$$

(example)


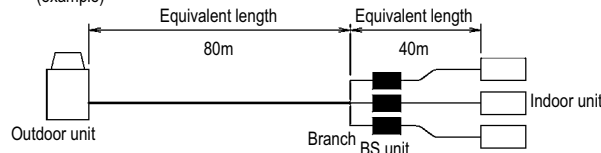


In the above case (Cooling) Overall equivalent length = 80m x 0.5 + 40m = 80m. The correction factor in capacity when H_p=0m is thus approximately 0.86.

5 Dimensional drawings

5 - 1 Dimensional Drawings

RQCEQ280-360P

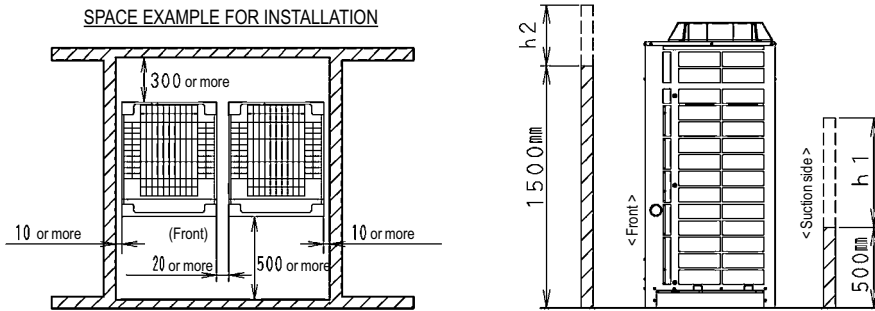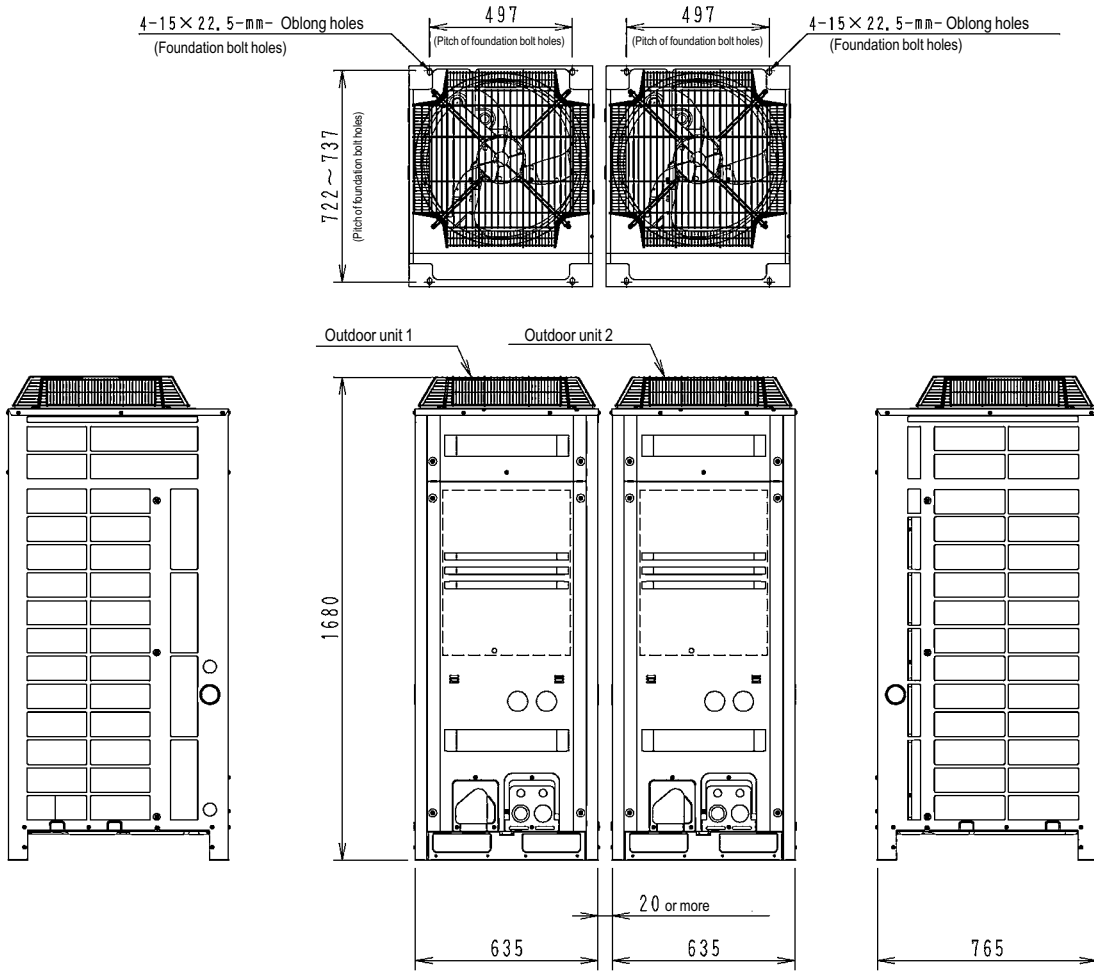

Model name	Outdoor unit 1	Drawing N°.	Outdoor Unit 2	Drawing N°.
RQCEQ280P	RQEQ140P	3D066441	RQEQ140P	3D066441
RQCEQ360P	RQEQ180P	3D066441	RQEQ180P	3D066441

Unit:mm

NOTES


- Heights of walls
 Front: 1500mm
 Suction side: 500mm
 Side: Height unrestricted
 The installation space shown in this figure is based on the condition of cooling operation at the outdoor air temperature of 35°C.
 The installation space of suction side shown above must be expanded in the following case.
 - Design outdoor temperature becomes over 35°C.
 - Operating over Max. operating load
 (In case of causing a heavy heating load at indoor unit side)
- If the above wall heights are exceeded then h2/2 and h1/2 should be added to the front and suction side service spaces respectively as shown in the following figure.
- When installing the units the most appropriate pattern should be selected from those shown above in order to obtain the best fit in the space available always bearing in mind the need to leave enough room for a person to pass between units and wall for the air to circulate freely. (If more units are to be installed than are catered for in the above patterns your layout should take account of the possibility of short circuits.)
- The units should be installed to leave sufficient space at the front for the on site refrigerant piping work to be carried out comfortably.

3D066856


5 Dimensional drawings

5 - 1 Dimensional Drawings

RQCEQ460-636P

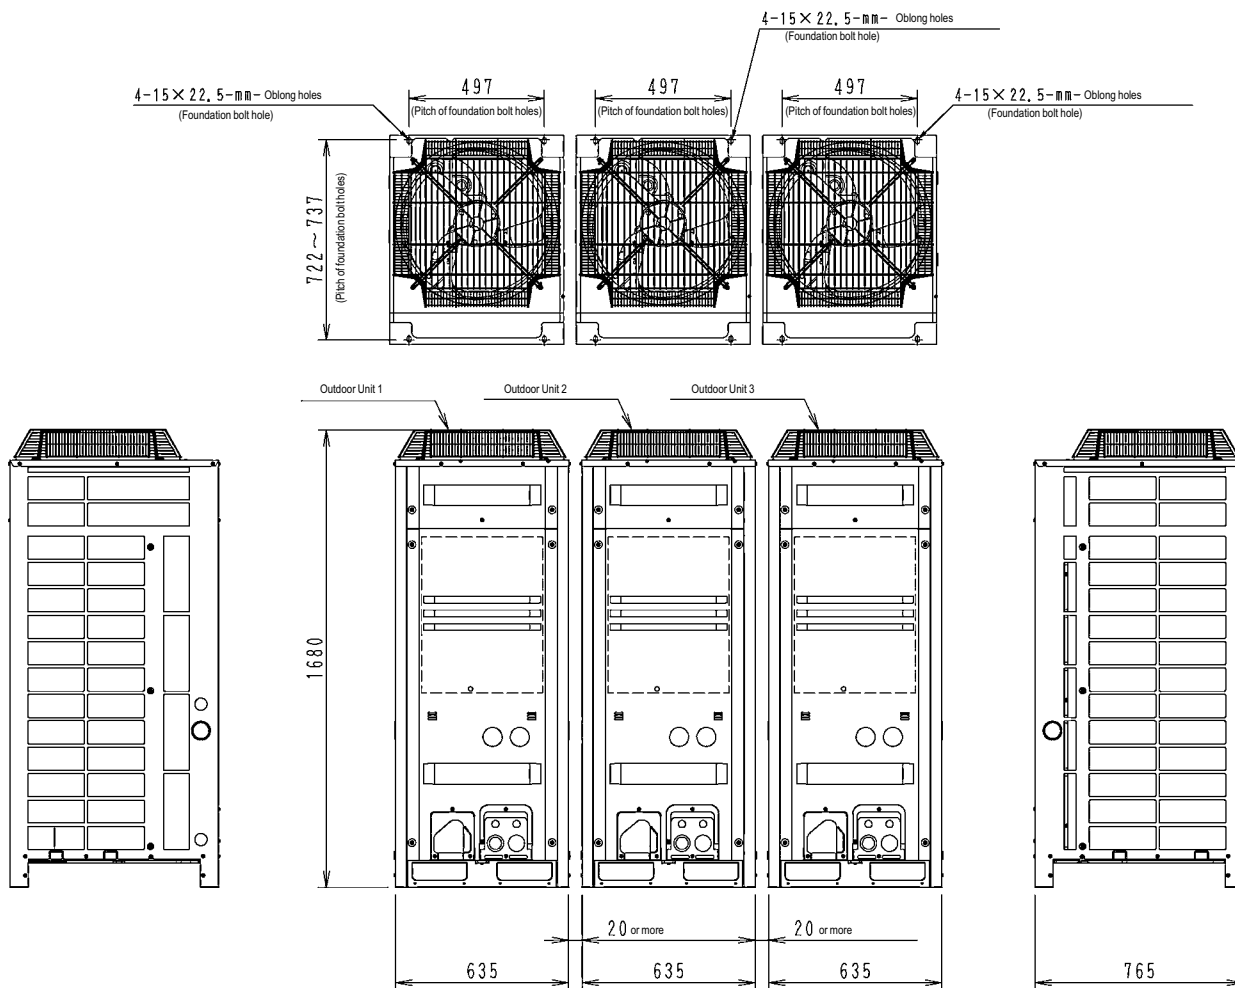

SPACE EXAMPLE FOR INSTALLATION

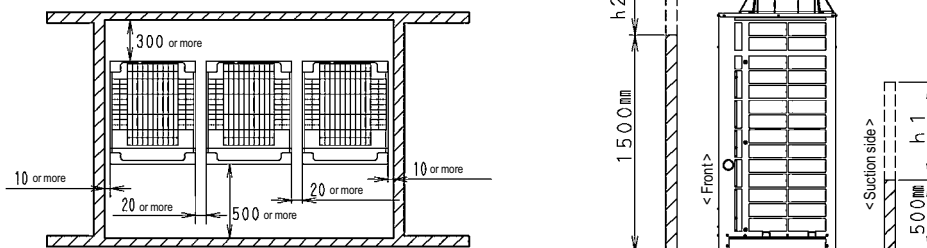

Unit:mm

Model name	Outdoor unit 1	Drawing N°.	Outdoor Unit 2	Drawing N°.	Outdoor unit 1	Drawing N°.
RQCEQ460P	RQEQ180P	3D066441	RQEQ140P	3D066441	RQEQ140P	3D066441
RQCEQ500P	RQEQ180P	3D066441	RQEQ180P	3D066441	RQEQ140P	3D066441
RQCEQ540P	RQEQ180P	3D066441	RQEQ180P	3D066441	RQEQ180P	3D066441
RQCEQ636P	RQEQ212P	3D066441	RQEQ212P	3D066441	RQEQ212P	3D066441

NOTES


- Heights of walls
 Front: 1500mm
 Suction side: 500mm
 Side: Height unrestricted
 The installation space shown in this figure is based on the condition of cooling operation at the outdoor air temperature of 35°C.
 The installation space of suction side shown above must be expanded in the following case.
 - Design outdoor temperature becomes over 35°C.
 - Operating over Max. operating load
 (In case of causing a heavy heating load at indoor unit side)
- If the above wall heights are exceeded then h2/2 and h1/2 should be added to the front and suction side service spaces respectively as shown in the following figure.
- When installing the units the most appropriate pattern should be selected from those shown above in order to obtain the best fit in the space available always bearing in mind the need to leave enough room for a person to pass between units and wall for the air to circulate freely. (If more units are to be installed than are catered for in the above patterns your layout should take account of the possibility of short circuits.)
- The units should be installed to leave sufficient space at the front for the on site refrigerant piping work to be carried out comfortably.

3D066860


5 Dimensional drawings

5 - 1 Dimensional Drawings

RQCEQ712-848P

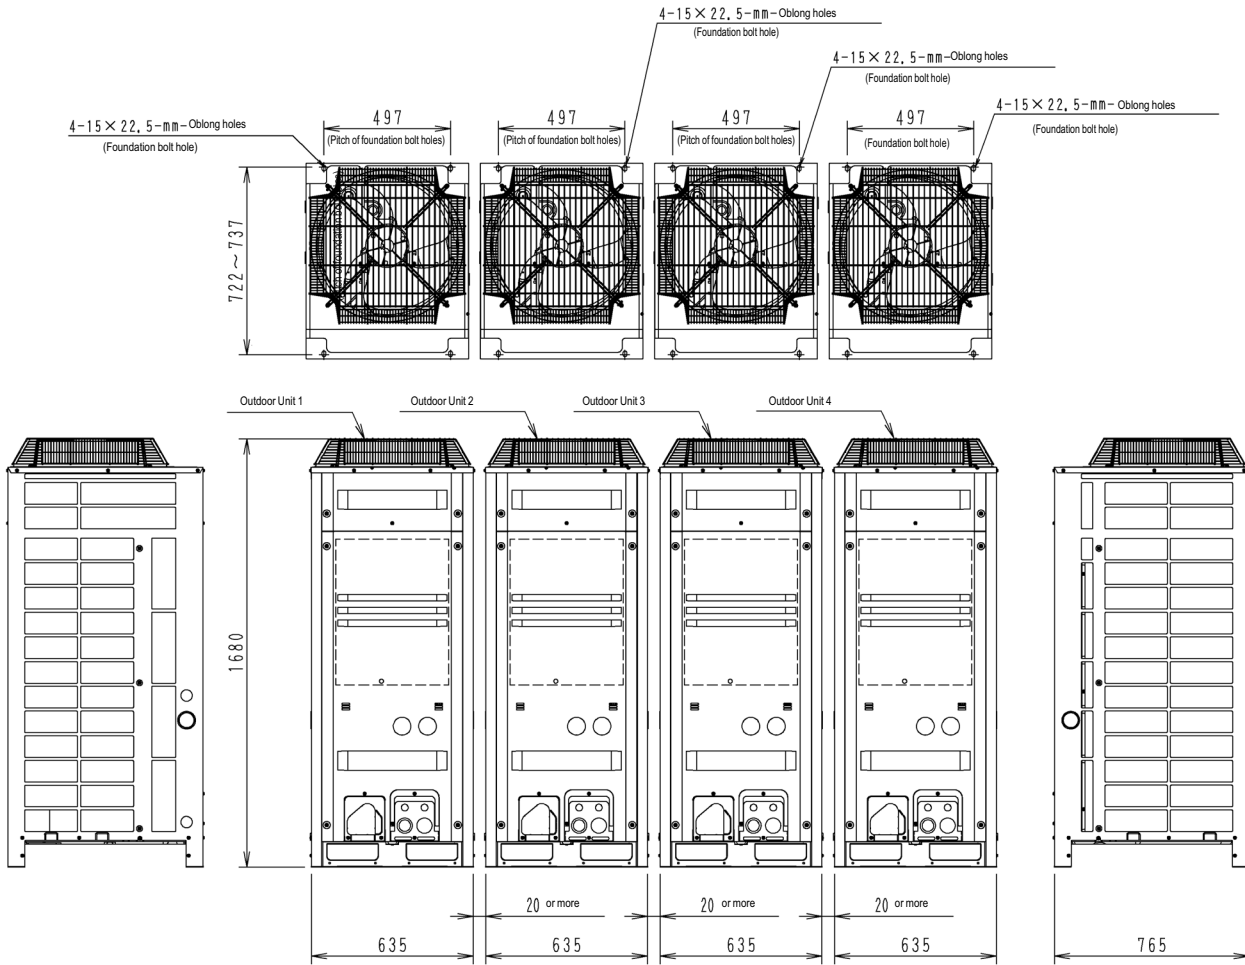

SPACE EXAMPLE FOR INSTALLATION

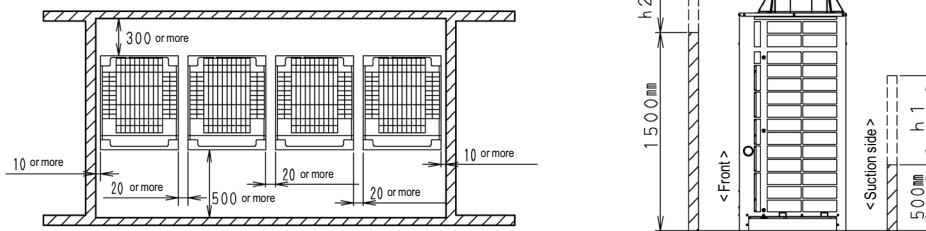

Unit: mm

Model name	Outdoor unit 1	Drawing N°.	Outdoor Unit 2	Drawing N°.	Outdoor unit 3	Drawing N°.	Outdoor unit 4	Drawing N°.
RQCEQ712P	RQEQ212P	3D066441	RQEQ180P	3D066441	RQEQ180P	3D066441	RQEQ140P	3D066441
RQCEQ744P	RQEQ212P	3D066441	RQEQ212P	3D066441	RQEQ180P	3D066441	RQEQ140P	3D066441
RQCEQ816P	RQEQ212P	3D066441	RQEQ212P	3D066441	RQEQ212P	3D066441	RQEQ180P	3D066441
RQCEQ848P	RQEQ212P	3D066441	RQEQ212P	3D066441	RQEQ212P	3D066441	RQEQ212P	3D066441


NOTES

- Heights of walls
 Front: 1500mm
 Suction side: 500mm
 Side: Height unrestricted
 The installation space shown in this figure is based on the condition of cooling operation at the outdoor air temperature of 35°C.
 The installation space of suction side shown above must be expanded in the following case.
 - Design outdoor temperature becomes over 35°C.
 - Operating over Max. operating load
 (In case of causing a heavy heating load at indoor unit side)
- If the above wall heights are exceeded then h2/2 and h1/2 should be added to the front and suction side service spaces respectively as shown in the following figure.
- When installing the units the most appropriate pattern should be selected from those shown above in order to obtain the best fit in the space available always bearing in mind the need to leave enough room for a person to pass between units and wall for the air to circulate freely. (If more units are to be installed than are catered for in the above patterns your layout should take account of the possibility of short circuits.)
- The units should be installed to leave sufficient space at the front for the on site refrigerant piping work to be carried out comfortably.

3D066865


6 External connection diagrams

6 - 1 External Connection Diagrams

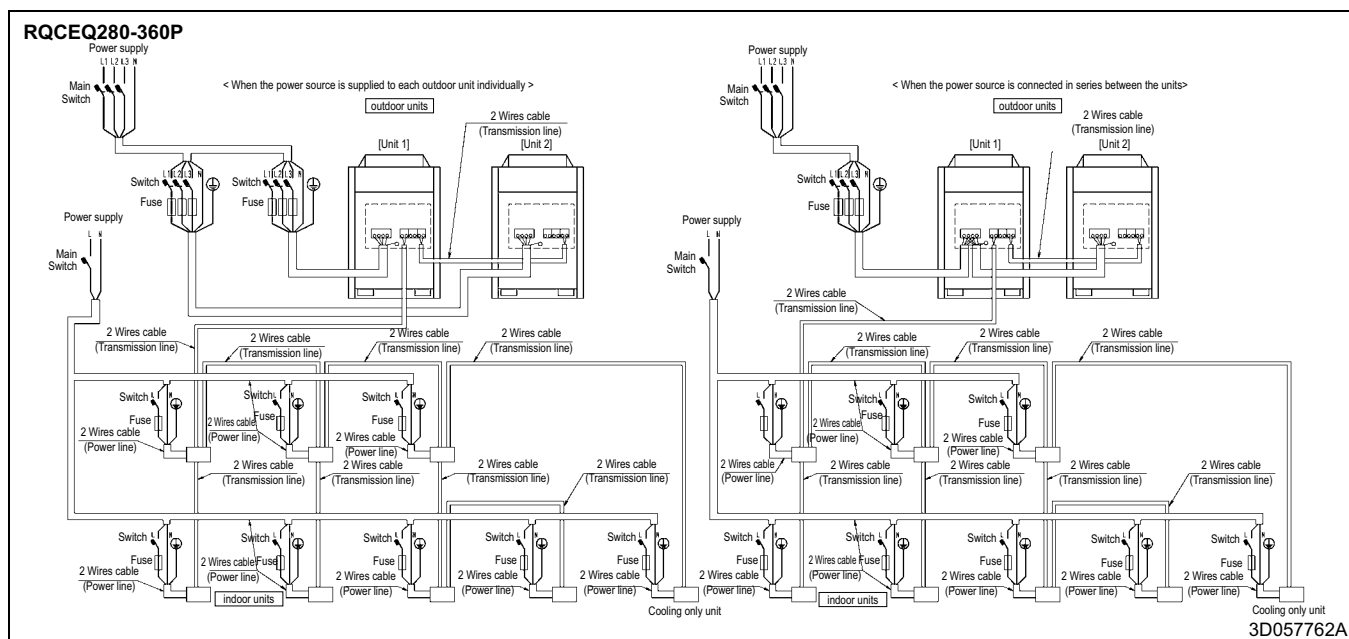

NOTES

1. All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
2. Use copper conductors only.
3. As for details, see wiring diagram.
4. Install circuit breaker for safety.
5. All field wiring and components must be provided by licensed electrician.
6. Unit shall be grounded in compliance with the applicable local and national codes.
7. Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
8. Be sure to install the switch and the fuse to the power line of each equipment.
9. Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
10. the capacity of UNIT1 must be larger than UNIT2 when the power source is connected in series between the units.
11. If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.
12. Must install earth leakage circuit breaker.

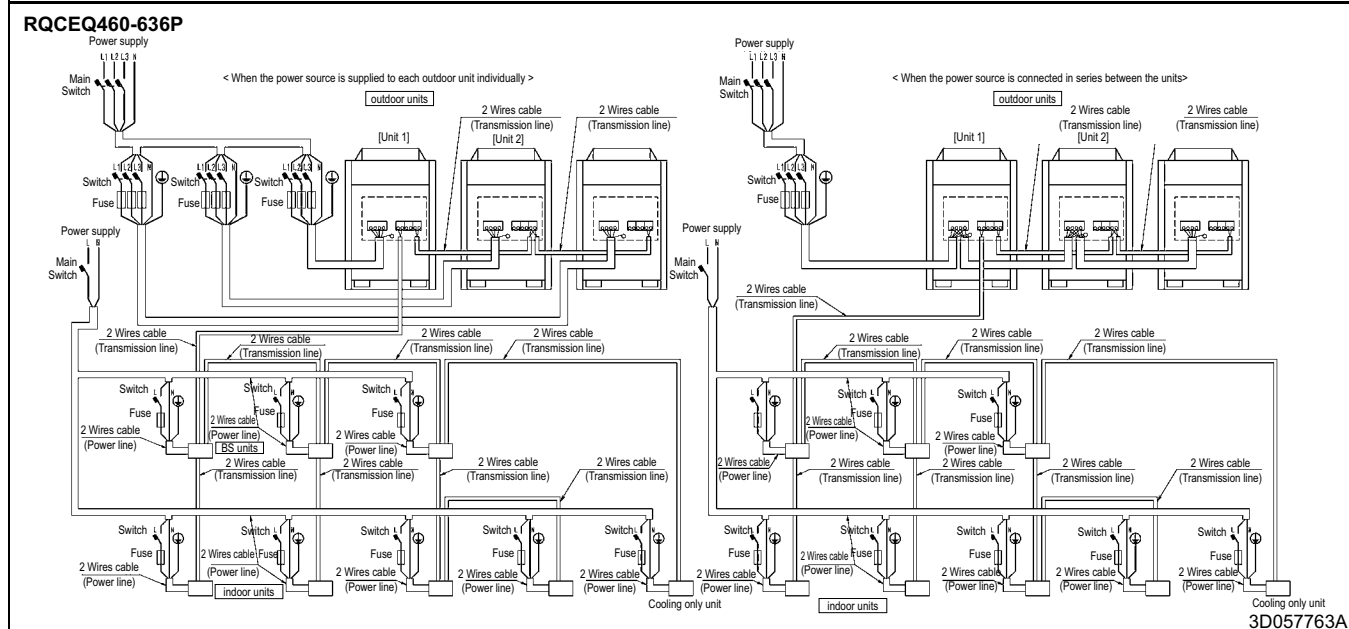


NOTES

1. All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
2. Use copper conductors only.
3. As for details, see wiring diagram.
4. Install circuit breaker for safety.
5. All field wiring and components must be provided by licensed electrician.
6. Unit shall be grounded in compliance with the applicable local and national codes.
7. Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
8. Be sure to install the switch and the fuse to the power line of each equipment.
9. Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
10. the capacity of UNIT1 must be larger than UNIT2 when the power source is connected in series between the units.
11. If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.
12. Must install earth leakage circuit breaker.

6 External connection diagrams

6 - 1 External Connection Diagrams

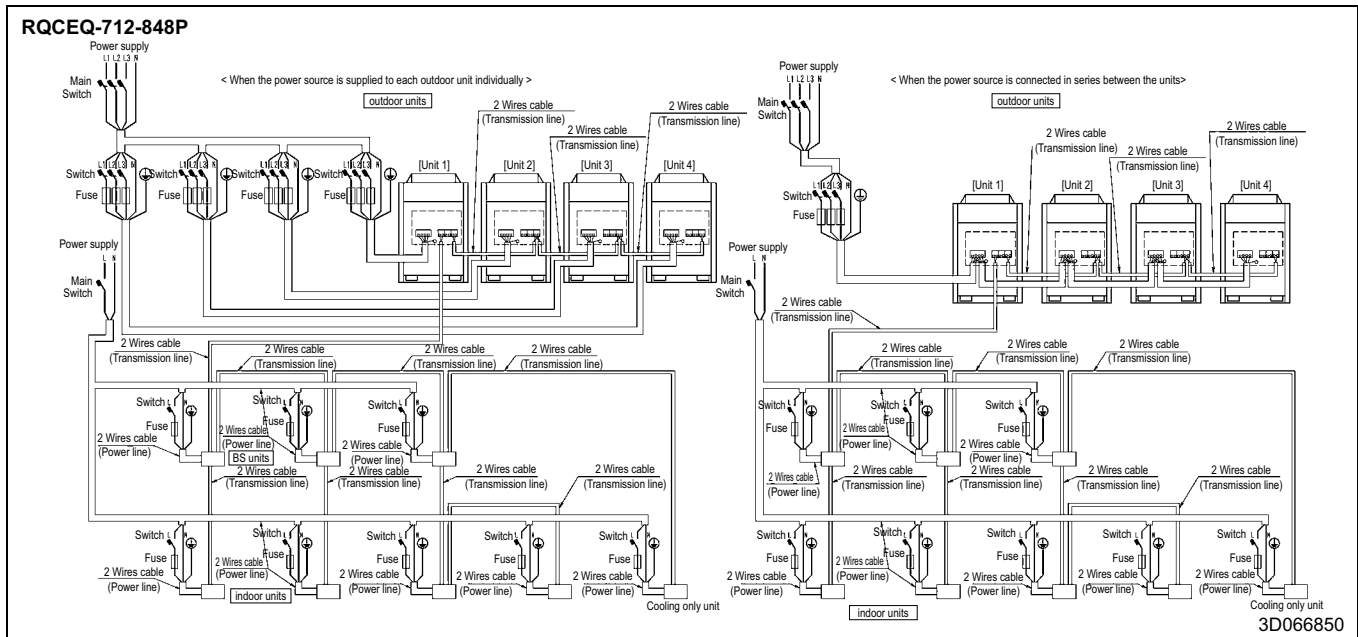


NOTES

1. All wiring, components and materials to be procured on the site must comply with the applicable local and national codes.
2. Use copper conductors only.
3. As for details, see wiring diagram.
4. Install circuit breaker for safety.
5. All field wiring and components must be provided by licensed electrician.
6. Unit shall be grounded in compliance with the applicable local and national codes.
7. Wiring shown are general points-of-connection guides only and are not intended for or to include all details for a specific installation.
8. Be sure to install the switch and the fuse to the power line of each equipment.
9. Install the main switch that can interrupt all the power sources in an integrated manner because this system consists of the equipment utilizing the multiple power sources.
10. the capacity of UNIT1 must be larger than UNIT2 when the power source is connected in series between the units.
11. If there exists the possibility of reversed phase, lose phase, momentary blackout or the power goes on and off while the product is operating, attach a reversed phase protection circuit locally.
Running the product in reversed phase may break the compressor and other parts.
12. Must install earth leakage circuit breaker.

7 Operation range

7 - 1 Operation Range

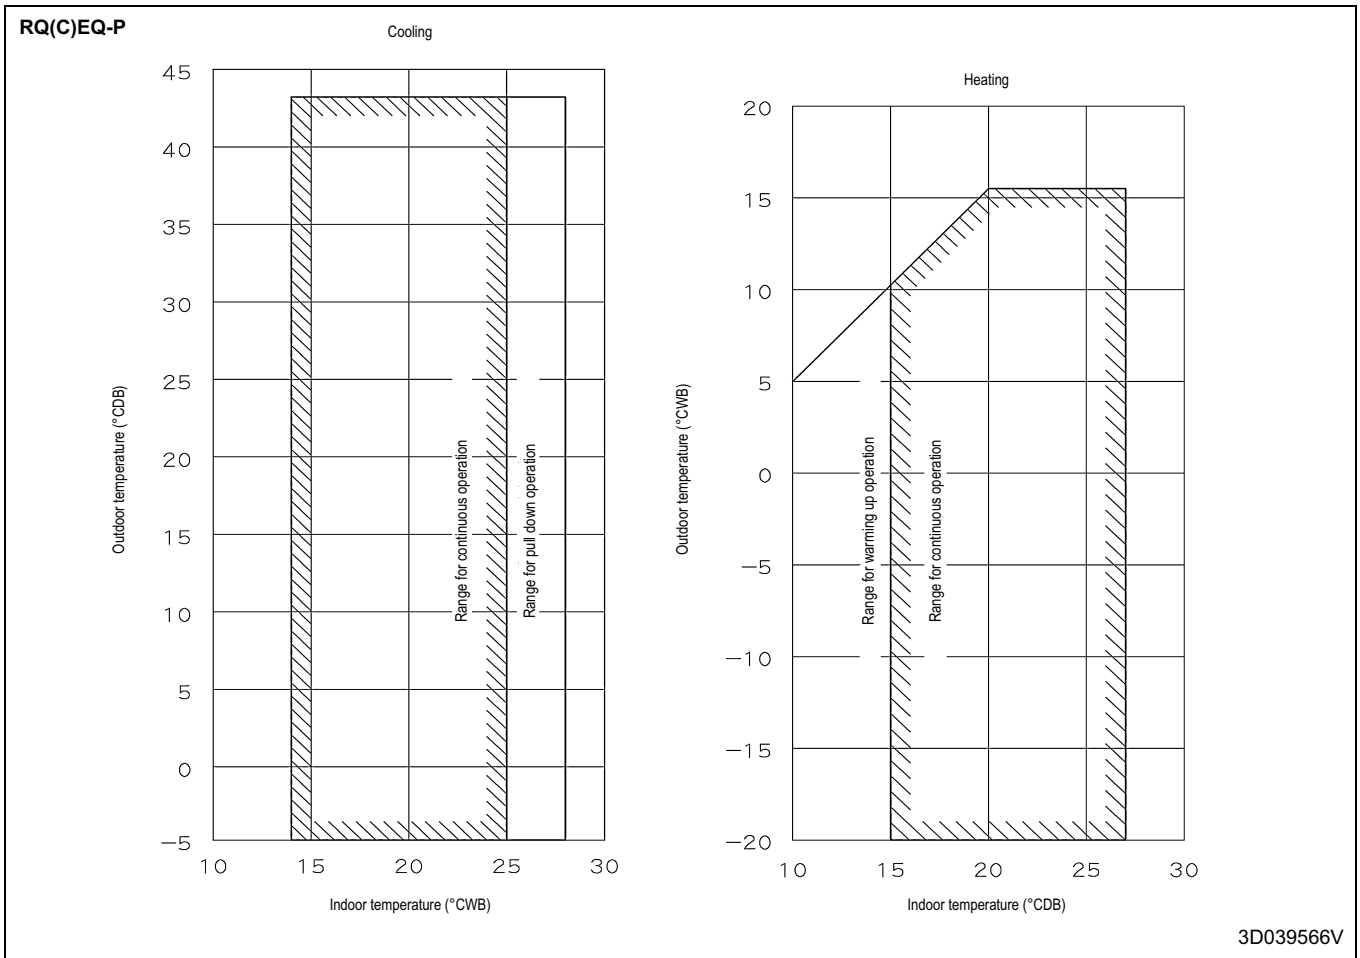

In all of us,
a green heart



Daikin's unique position as a manufacturer of air conditioning equipment, compressors and refrigerants has led to its close involvement in environmental issues. For several years Daikin has had the intention to become a leader in the provision of products that have limited impact on the environment. This challenge demands the eco design and development of a wide range of products and an energy management system, resulting in energy conservation and a reduction of waste.

VRV® products are not within the scope of the Eurovent certification programme.



The present publication is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V. Daikin Europe N.V. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Europe N.V.

Daikin products are distributed by:

