




Air Conditioners

# Technical Data

**VRV**

Multi branch selector for VRV heat recovery

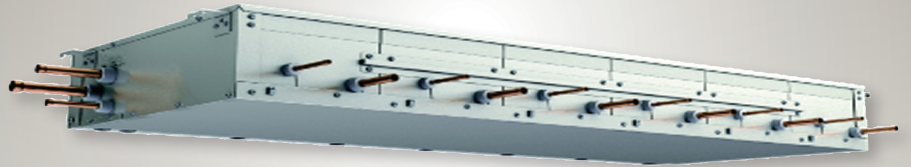

EEDEN13-200\_4

BSV6Q-PV



Air Conditioners

# Technical Data

**VRV**

Multi branch selector for VRV heat recovery



EEEN13-200\_4

BSV6Q-PV

# TABLE OF CONTENTS


## BSV6Q-PV

1	Features .....	2
2	Specifications .....	3
	Technical Specifications .....	3
	Electrical Specifications .....	3
3	Safety device settings .....	4
	Safety Device Settings .....	4
4	Dimensional drawings .....	5
	Dimensional Drawings .....	5
5	Centre of gravity .....	6
	Centre of Gravity .....	6
6	Piping diagrams .....	7
	Piping Diagrams .....	7
7	Wiring diagrams .....	8
	Wiring Diagrams - Single Phase .....	8
8	Sound data .....	9
	Sound Pressure Spectrum .....	9

# 1 Features

- Faster installation thanks to a reduced number of brazing points and wiring
- Allows individual cool / heat switching for up to 6 groups of indoor units
- Maximum design flexibility because individual and multi boxes can be combined in one system
- Low built-in height
- No drain piping needed

1

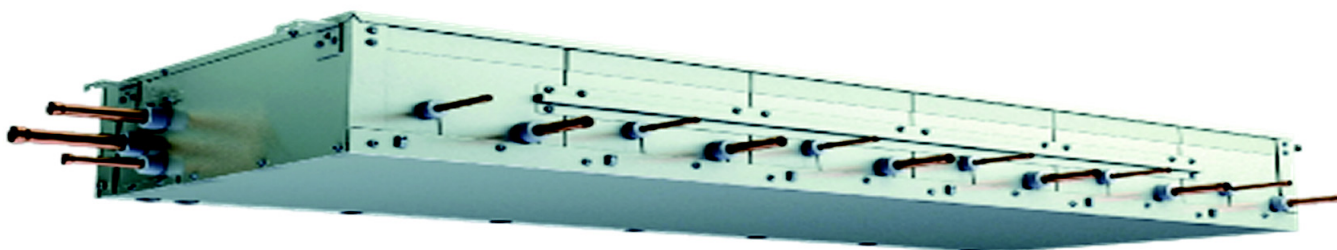

## 2 Specifications

2-1 Technical Specifications				BSV6Q100PV	
Power input	Cooling	Nom.	kW	0.030	
	Heating	Nom.	kW	0.030	
Maximum number of connectable indoor units per branch				6	
Number of branches				6	
Maximum capacity index of connectable indoor units				600	
Maximum capacity index of connectable indoor units per branch				100	
Casing	Material			Galvanised steel plate	
Dimensions	Unit	HeightxWidthxDepth	mm	209x1,577x635	
Weight	Unit		kg	89	
Piping connections	Outdoor unit	Liquid	Type	Brazing connection	
			OD	mm	15.9
		Gas	Type	Brazing connection	
			OD	mm	28.6
		Discharge gas	Type	Brazing connection	
			OD	mm	28.6
	Indoor unit	Liquid	Type	Brazing connection	
			OD	mm	9.5
		Gas	Type	Brazing connection	
			OD	mm	15.9
Sound absorbing thermal insulation				Foamed polyurethane, frame resisting needle felt	

Standard Accessories : Clamps;

Standard Accessories : Insulation pipe cover;

Standard Accessories : Installation manual;

Standard Accessories : Connection pipes;

2-2 Electrical Specifications				BSV6Q100PV	
Power supply	Name			V1	
	Phase			1~	
	Frequency		Hz	50	
	Voltage		V	220-240	
	Voltage range	Min.	%	-10	
		Max.	%	10	
Total circuit	Minimum circuit amps (MCA)		A	0.8	
	Maximum fuse amps (MFA)		A	15	
Notes				Instead of a fuse, use a circuit breaker	

### Notes

- (1) In case of connection with a 20~50 type indoor unit, match to the size of the field pipe using the attached pipe. Connection between the attached pipe and the field pipe must be brazed.
- (2) In case the joint diameter does not fit on the triple piping side, a reducer is needed (field supply)
- (3) Insulators are necessary (field supply) for the triple piping side
- (4) Voltage range: units are suitable for use on electrical systems where voltage supplied to unit terminal is not below or above listed range limits.
- (5) Maximum allowable voltage range variation between phases is 2%.
- (6) MCA/MFA:  $MCA = 1.25 \times FLA$
- (7)  $MFA \leq 4 \times FLA$
- (8) Next lower standard fuse rating minimum 15A
- (9) Select wire size based on the value of MCA
- (10) Instead of a fuse, use a circuit breaker

### 3 Safety device settings

#### 3 - 1 Safety Device Settings

BSV4Q100PV  
BSV6Q100PV

Model	Safety devices
	PC board fuse
BSV4Q100PV	250V 3.15A
BSV6Q100PV	250V 3.15A

4D064144

# 4 Dimensional drawings

## 4 - 1 Dimensional Drawings

**BSV6Q100PV**

1625 (Suspension bolt pitch)

465 (Suspension bolt pitch)

600 (Note.7) (Servicing space)

Inspection door  $\phi 415$

Inspection door  $\phi 415$

300 OR MORE (Servicing space)

50 OR MORE (Servicing space)

300 OR MORE (Servicing space)

250 OR MORE (Servicing space)

(In case of use attached pipe (Note.3))

Servicing space

442

681

1093

173

184

194

174

3D064061B


No.	Part name	Description
1	Section gas pipe connection port (Note.5,6)	$\phi 28.6$ mm brazing connection
2	HP/LP gas pipe connection port (Note.5,6)	$\phi 28.6$ mm brazing connection
3	Liquid pipe connection port (Note.5,6)	$\phi 15.9$ mm brazing connection
4	Gas pipe connection port	$\phi 15.9$ mm brazing connection
5	Liquid pipe connection port	$\phi 9.5$ mm brazing connection
6	Electric box (Note.1)	
7	Suspension brackets	M8-M10
8	Grounding terminal	M4
9	Attached pipe (1) (Note.3)	$\phi 12.7$ mm brazing connection
10	Attached pipe (2) (Note.3)	$\phi 6.4$ mm brazing connection

**NOTES**

1. Be sure to install a inspection door at electric box side. Another door is necessary to unload the product.
2. Install it at the place where small sound of refrigerant does not disturb. Must not install it at the space such as roof-space of room where person exists.
3. Attached pipe is only used in case of connecting with a 20-50 class indoor unit.
4. Occupy the space with is possible to install field pipes.
5. Reducer may be required (field supply) if joint diameter dose not suit on the triple piping side.
6. Insulators are necessary (field supply) for the triple piping side.
7. This space is a space to keep a top panel when servicing.

## 5 Centre of gravity


### 5 - 1 Centre of Gravity

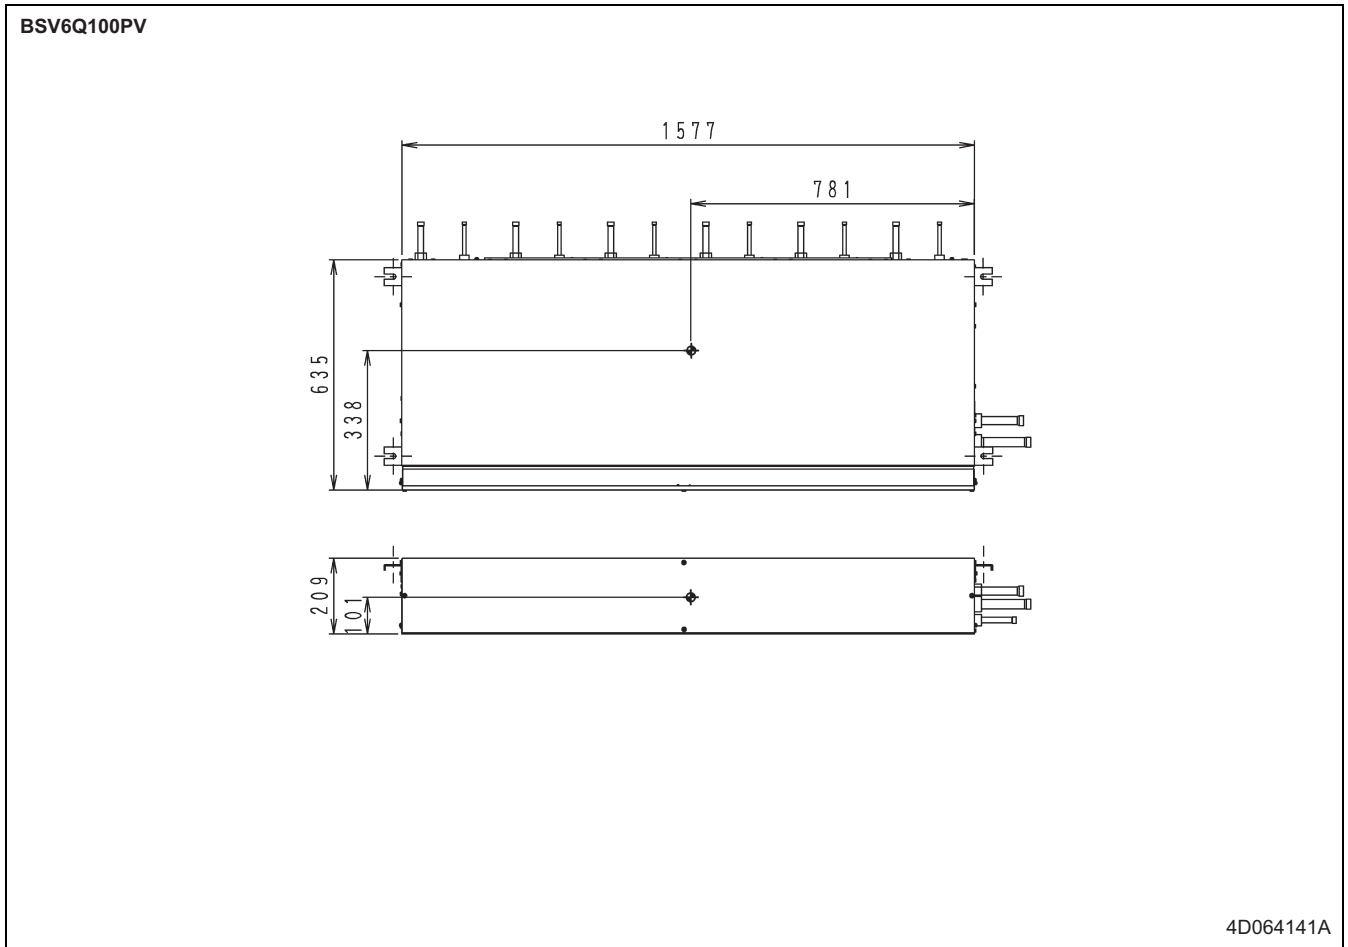



# 6 Piping diagrams


## 6 - 1 Piping Diagrams

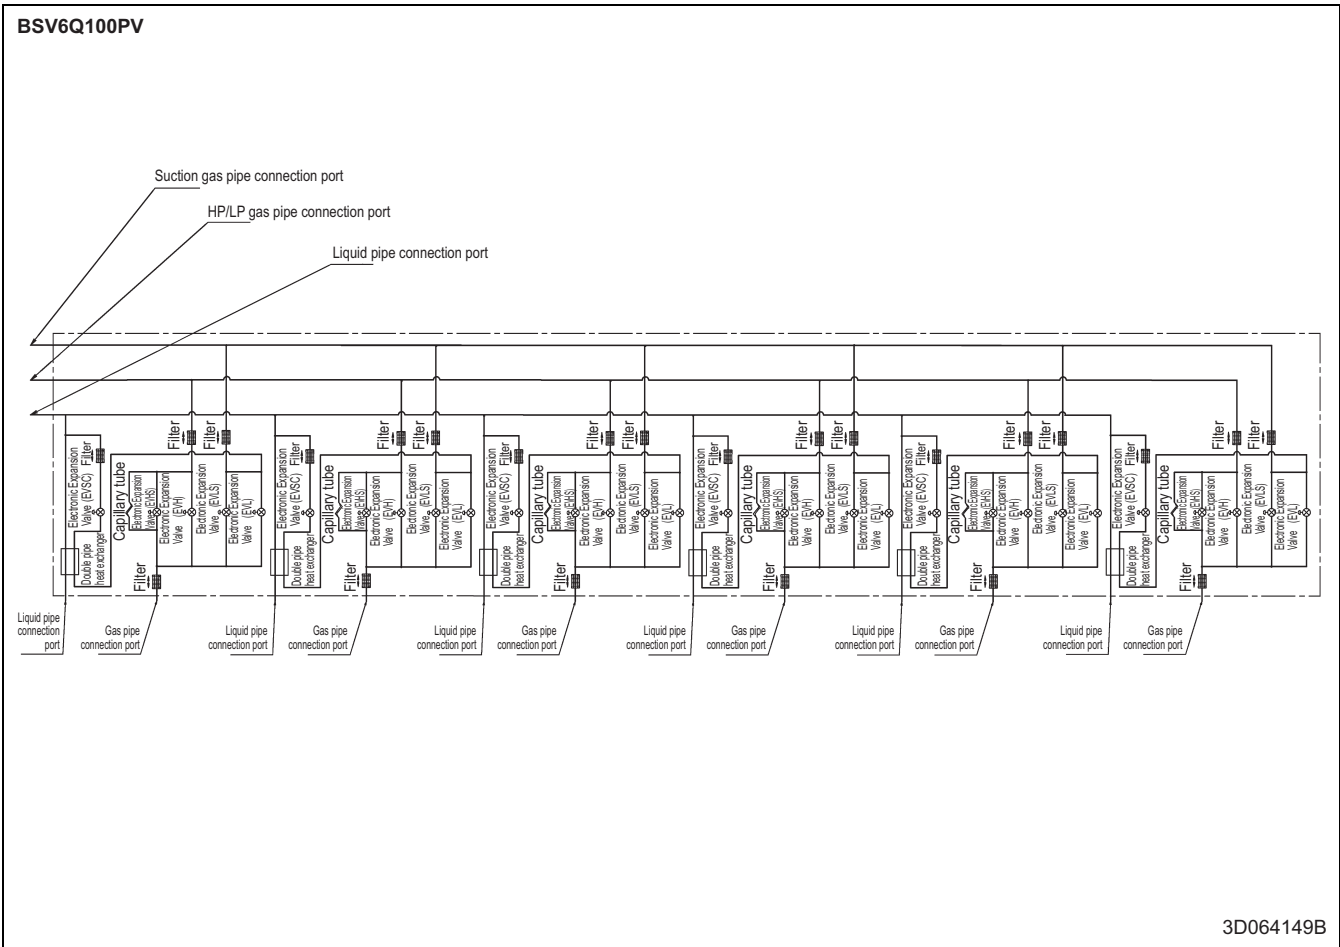


# 7 Wiring diagrams

## 7 - 1 Wiring Diagrams - Single Phase

BSV6Q100PV

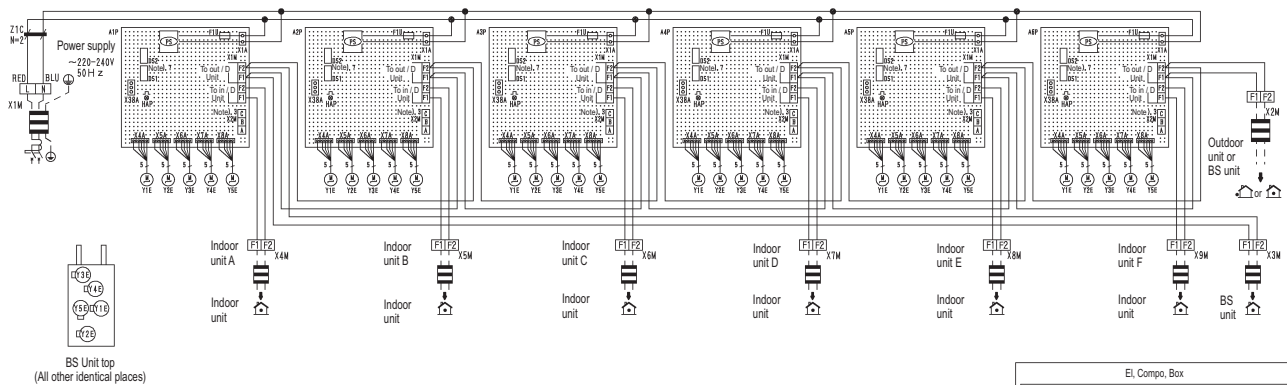

BS Unit top  
(All other identical places)



A1P (Unit A)	Printed circuit board (Indoor Unit A)	X1M (A1P-A6P)	Terminal strip (Control)
A2P (Unit B)	Printed circuit board (Indoor Unit B)	X2M (A1P-A6P)	Terminal Strip (C/H Selector)
A2P (Unit C)	Printed circuit board (Indoor Unit C)	X1M	Terminal Strip (Power)
A2P (Unit D)	Printed circuit board (Indoor Unit D)	X2M-X9M	Terminal Strip (Control)
A2P (Unit E)	Printed circuit board (Indoor Unit E)	Y1E	Electric expansion valve (Sub cool)
A2P (Unit F)	Printed circuit board (Indoor Unit F)	Y2E	Electric expansion valve (Sub discharge)
DS1, DS2	Dip switch	Y3E	Electric expansion valve (Sub suction)
F1U	Fuse (T, 3, 15A, 250V)	Y4E	Electric expansion valve (Main discharge)
HAP	Flashing lamp (Service monitor-green)	Y5E	Electric expansion valve (Main suction)
PS	Switching power supply (A1P-A6P)	Z1C	Noise filter (Ferite core)
		X38A	Connector for optional parts
			Connector (adapter for multi tenant)

### NOTES

- This wiring diagram applies to the BS unit only.
- Field wiring: ; terminal strip: ; connector: ; protective earth (screw): .
- When using the cool/heat selector (optional accessory), connect it to terminals A, B and C on X2M(A1-A6P).
- As for wiring to the X2M-X9M(Control), refer to installation manual.
- Symbols show as follows. (BLU: Blue, RED: Red).
- Use copper conductors only.
- Dip switch (DS1 • 2) initial settings are as follows.




For using DIP Switch (DS1 • 2), refer to installation manual or 'service precaution' label on EL, Compo, Box cover.

3D063929C

# 8 Sound data

## 8 - 1 Sound Pressure Spectrum

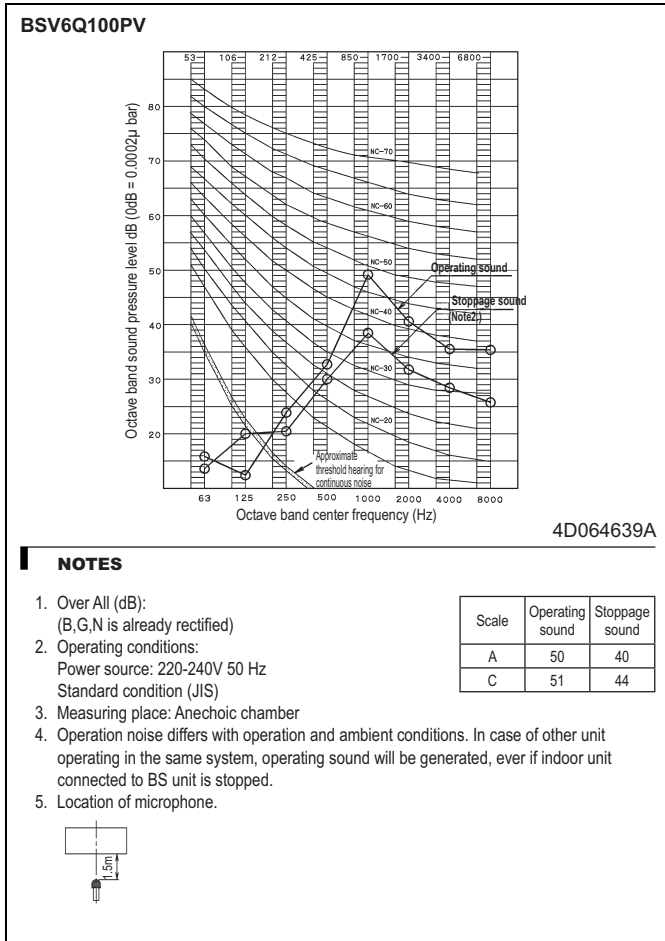





VRV products are not within the scope of the Eurovent certification programme.

Daikin products are distributed by:

The present publication is drawn up by way of information only and does not constitute an offer binding upon Daikin Europe N.V. Daikin Europe N.V. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content and the products and services presented therein. Specifications are subject to change without prior notice. Daikin Europe N.V. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Europe N.V..